

LAWN-BOY®

Silver Pro Series™ Walk-Behind Mower

Model No. 10250 – 8900001 & Up

Model No. 10247 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Short Block Assembly	6
Engine & Blade Assembly	2	Carburetor Assembly	7
Handle Assembly	3	Lawn–Boy Part Number Index	8–10
Engine Assembly	4	Maintenance	11–13
Engine Assembly (cont.)	5		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag w/Chute	Model No. 89811
Rear Bagging Kit	Model No. 89800	Mow & Feed	
Leaf Bag Kit	Model No. 89804	Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

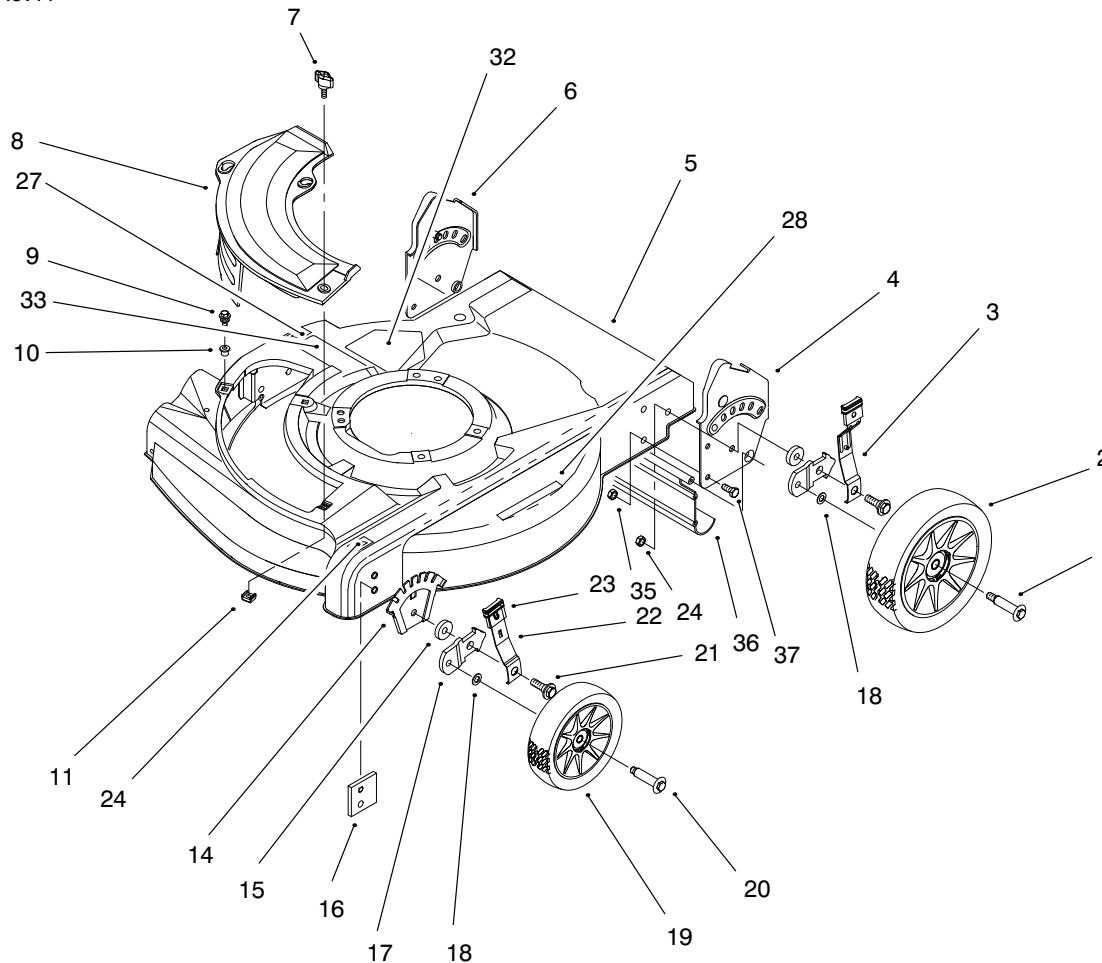


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	684777	2	ASM-Wheel
3	92-1005	2	ASM-Spring Arm
4	92-7743	1	ASM-Handle Brkt
5	98-4471	1	ASM-Housing & Baffle
6	92-7742	1	RH Handle Bracket ASM
7	98-8332	1	Knob-Cover Plate
8	92-8630	1	Mulch Plate-21"
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	4	Washer
16	92-7731	2	Plate-Baffle
17	95-7403	4	Bracket-Wheel Height Adj
18	40-1940	4	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder
21	614672	4	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	4	Knob-Height Adjust
24	3296-39	2	Nut-Lock
26	92-2915	1	Decal-HOC

Ref. No.	Part No.	Qty.	Description
27	92-2914	1	Decal-HOC
28	93-7250	1	Decal-Warning
*31	95-7052	1	Plate-Cover
32	39-5770	1	Decal-Danger
33	92-1097	1	Decal-Discharge
35	3296-29	4	Nut-Lock
36	92-8647	1	Shield-Trailing
37	322-3	4	Screw-HH

* Not Illustrated

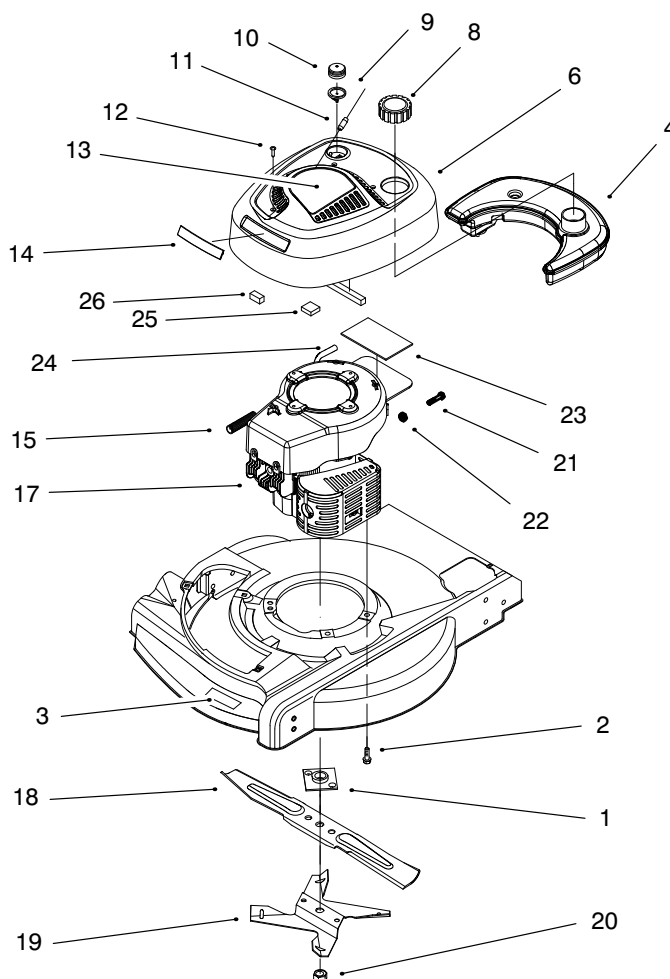


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar				
2	611774	3	Screw				
3	98-1566	1	Decal-Deck				
4	95-1897	1	Gas Tank				
6	98-7033	1	ASM-Shroud & Recoil Covr				
8	98-8344	1	ASM-Fuel/Oil Cap				
9	44-2750	1	Body-Primer				
10	66-7460	1	Bulb-Primer				
11	92-1701	1	Rope-Stop				
12	95-7621	3	Screw-Tf Acorn Hd				
13	95-7417	1	Decal-Recoil				
14	92-8615	1	Applique-Shroud				
15	93-4306	1	Spring-Compression				
17		1	Engine ASM Recoil Hp				
18	612543	1	Blade-21" Whirl				
19	92-1630	1	Fan-Mulching				
20	603164	1	Nut-Blade				
21	314576	1	Screw-Throttle Cable				
22	328712	1	Nut-Throttle Cable				
23	98-1386	1	Foam Pad				
24	612782	1	Gas Line				
25	99-1521	1	Foam Strip				
26	99-1522	2	Foam Strip				

Handle Assembly


Ref. No.	Part No.	Qty.	Description

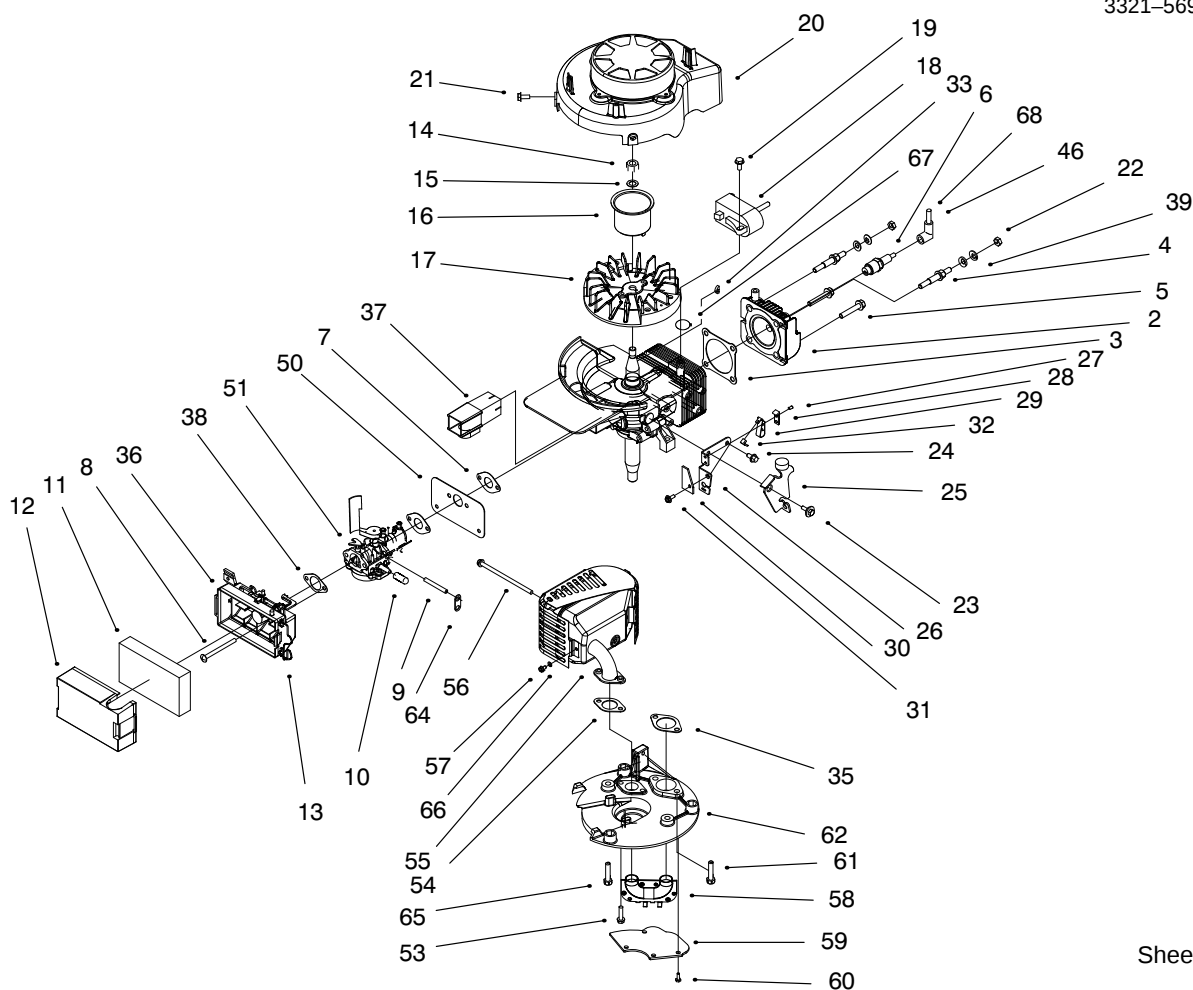

Sheet No.:100

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	94-5776	1	Head	27	3290-459	2	Rivet-Self Expand Plas
3	94-5778	1	Gasket-Head	28	92-2925	1	Strap-Insulation
4	94-5779	2	Stud	29	60-9010	1	Strap-Ground
5	94-5780	2	Bolt	30	53-4690	1	Stop-Ground Strap
6	50-1170	1	Spark Plug	31	12-5450	1	Screw-Thread Forming
7	94-5795	2	Intake Gasket	32	98-7037	1	Brake Switch Lead Wire
8	612507	2	Screw	33	607199	1	Key
9	95-1861	1	Primer Hose	35	95-1778	1	Gasket-Exhaust
11	95-5574	1	Element-Air Filter	36	95-5588	1	Air Filter Base ASM
12	95-5577	1	Cover-Air Filter	37	95-5578	1	Tunnel
13	610383	1	Retainer-Filter	38	95-7613	1	Gasket-Filter Base
14	130743	1	Nut	39	3290-456	4	Washer-Lock
15	316959	1	Washer-Lock	46	684698	A/R	Cover & Terminal
16	95-1786	1	Cup-Starter	50	98-1388	1	Heat Shield
17	95-1866	1	Flywheel Machined Recoil	51	98-7042	1	Carburetor ASM w/Gaskets
18	92-1152	1	Ignition ASM	53	613208	2	Screw-HWH
19	613208	2	Screw-HWH	54	98-1392	1	Gasket
20	95-1868	1	Shroud & Recoil ASM	55	98-7048	1	Muffler & Guard
21	700094	2	Screw	56	611228	1	Bolt
22	146501	2	Nut-Lock	57	98-1394	2	Screw
23	95-1870	1	Shoulder Screw Brake	58	98-1557	1	Transfer Tube
24	95-1871	1	Screw (Brake)	59	98-1591	1	Cover Plate
25	93-4312	1	ASM-Brake Plate				
26	84-7820	1	Plate-Mount Brake				

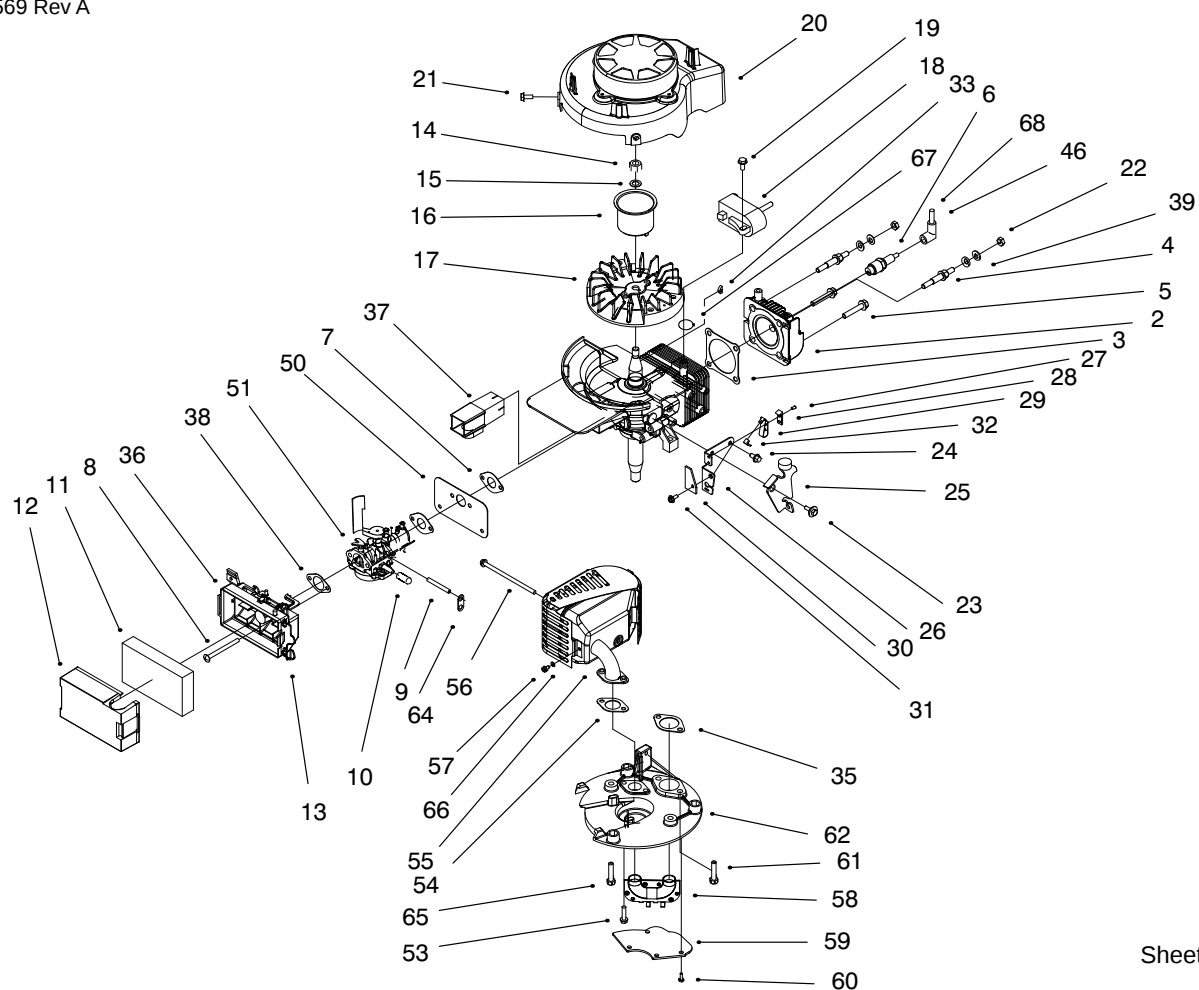


Sheet No.:100

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
60	700822	4	Screw
61	322-17	2	Screw-HH
62	98-1384	1	Muffler Plate Machining
64	95-7615	1	Retainer Hose
65	322-7	2	Screw-HH
66	3254-1	2	Washer-Lock
67	317893	1	Tie Strap
68	681678	1	High Tension Lead & Cover

Ref. No.	Part No.	Qty.	Description

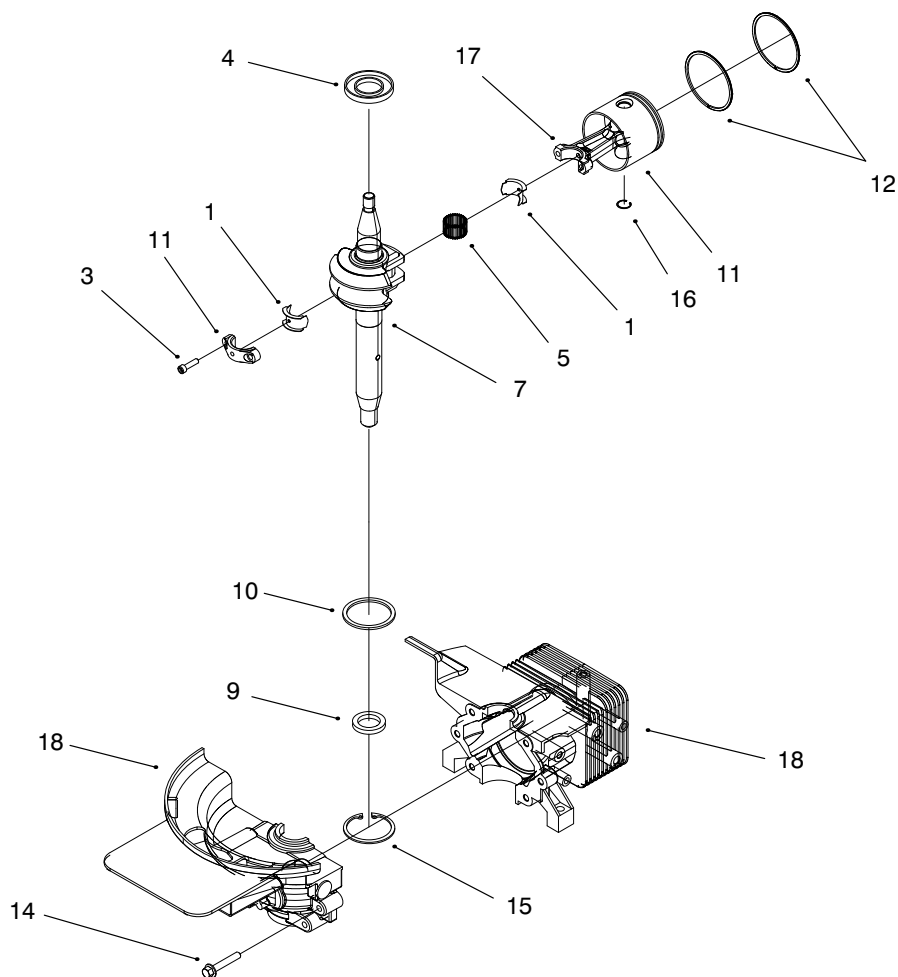


Sheet No.:101

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Split Liner ASM
3	611393	2	Screw
4	611396	1	Oil Seal
5	683911	1	Needle Bearing
7	99-2901	1	Crankshaft & Bearing ASM
9	94-5764	1	Oil Seal
10	94-5765	1	Ring Retaining
11	95-7628	1	Piston & Conn Rod ASM
12	95-7626	1	Ring Set
14	94-5781	6	Screw-HWH
15	98-7046	1	Ring-Retaining
16	303712	1	Ring-Retaining
17	95-7629	1	Connecting Rod ASM
18	95-7631	1	Cylinder & Crankcase ASM
*	95-7636	1	Short Block ASM
*	609790	1	Sealant
*	610372	1	Sealant

* Not Illustrated

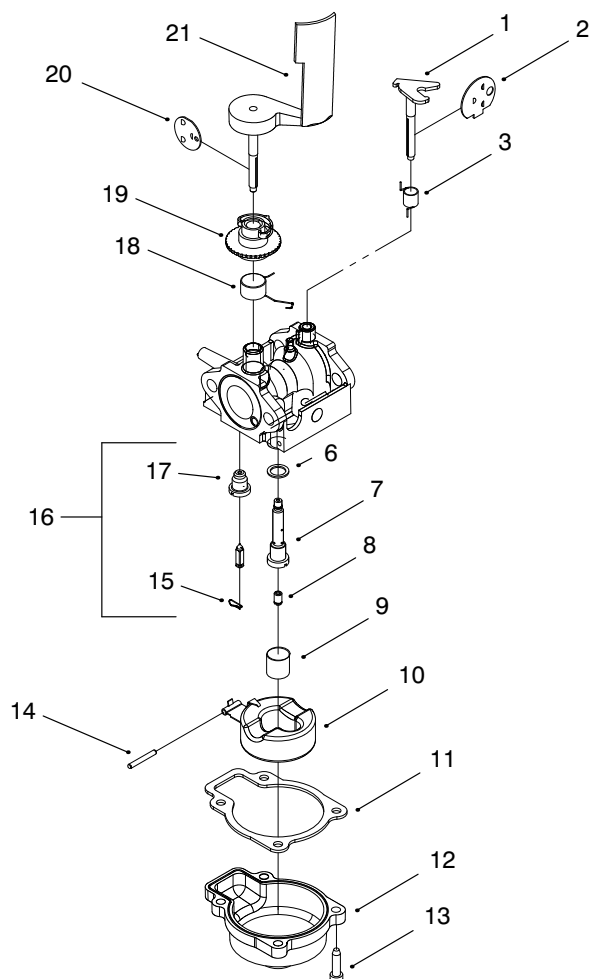

Sheet No.:200

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke
2	94-5788	1	Disc-Choke
3	95-5583	1	Spring-Choke Return
6	612383	1	Washer
7	98-7001	1	Nozzle
8	98-1357	1	Mainjet 77.5
9	94-5787	1	Filter-Fuel
10	95-1899	1	Float & Arm ASM
11	98-1362	1	Gasket-Float Chamber
12	92-9691	1	Float Chamber
13	608850	4	Screw
14	92-6389	1	Pin
15		1	Clip
16	92-9697	1	Float & Valve ASM
17		1	ASM-Seat
18	98-7011	1	Spring-Throttle
19	610834	1	Collar Adjustment
20	98-7047	1	Disc-Throttle
21	92-6376	1	Air Vane & Shaft

Ref. No.	Part No.	Qty.	Description

Lawn–Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	4	14	1	Nut
146501	4	22	2	Nut–Lock
303712	6	16	1	Ring–Retaining
314576	2	21	1	Screw–Throttle Cable
316959	4	15	1	Washer–Lock
317893	5	67	1	Tie Strap
328712	2	22	1	Nut–Throttle Cable
603164	2	20	1	Nut–Blade
607199	4	33	1	Key
608850	7	13	4	Screw
609790	6	*	1	Sealant
610372	6	*	1	Sealant
610383	4	13	1	Retainer–Filter
610834	7	19	1	Collar Adjustment
611228	4	56	1	Bolt
611393	6	3	2	Screw
611396	6	4	1	Oil Seal
611774	2	2	3	Screw
612383	7	6	1	Washer
612507	4	8	2	Screw
612543	2	18	1	Blade–21” Whirl
612782	2	24	1	Gas Line
612824	3	15	1	Clip–Rope
612825	3	9	1	Handle–Starter
613208	4	19	2	Screw–HWH
613208	4	53	2	Screw–HWH
613765	1	11	1	Nut–Cage
614249	3	30	3	Tie Strap
614643	3	14	1	Handle Section–Lower
614650	1	1	2	Bolt–Shoulder
614672	1	21	4	Bolt–Shoulder
614677	1	9	2	Screw–Sems
614687	1	22	2	Spring Arm–Front
614697	3	2	2	Screw–Handle
677525	2	1	1	ASM–Plate & Collar
677982	6	1	1	Split Liner ASM
681678	5	68	1	High Tension Lead & Cover
683911	6	5	1	Needle Bearing
684698	4	46	A/R	Cover & Terminal
684776	1	19	2	ASM–Wheel & Tire 6”
684777	1	2	2	ASM–Wheel
700094	4	21	2	Screw
700822	5	60	4	Screw
12–5450	4	31	1	Screw–Thread Forming
39–5770	1	32	1	Decal–Danger
40–1940	1	18	4	Washer
44–2750	2	9	1	Body–Primer
50–1170	4	6	1	Spark Plug
53–4690	4	30	1	Stop–Ground Strap
60–9010	4	29	1	Strap–Ground
66–7460	2	10	1	Bulb–Primer
84–7820	4	26	1	Plate–Mount Brake
92–1005	1	3	2	ASM–Spring Arm
92–1008	1	23	4	Knob–Height Adjust
92–1097	1	33	1	Decal–Discharge
92–1099	1	20	2	Bolt–Shoulder
92–1152	4	18	1	Ignition ASM
92–1630	2	19	1	Fan–Mulching
92–1701	2	11	1	Rope–Stop
92–2914	1	27	1	Decal–HOC
92–2915	1	26	1	Decal–HOC
92–2925	4	28	1	Strap–Insulation

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–4881	1	14	2	Plate–Height Adjust
92–4890	1	15	4	Washer
92–5412	3	6	1	Stop–Pivot
92–6376	7	21	1	Air Vane & Shaft
92–6389	7	14	1	Pin
92–7731	1	16	2	Plate–Baffle
92–7738	3	13	1	Cable–Flywheel Brake
92–7742	1	6	1	RH Handle Bracket ASM
92–7743	1	4	1	ASM–Handle Brkt
92–8615	2	14	1	Applique–Shroud
92–8630	1	8	1	Mulch Plate–21”
92–8632	3	20	1	Washer
92–8647	1	36	1	Shield–Trailing
92–9691	7	12	1	Float Chamber
92–9697	7	16	1	Float & Valve ASM
93–3653	3	1	1	Handle–Guard
93–4184	3	7	1	Bail–Flywheel Brake
93–4306	2	15	1	Spring–Compression
93–4312	4	25	1	ASM–Brake Plate
93–7250	1	28	1	Decal–Warning
93–7383	3	11	1	Guide–Rope
94–1610	1	10	2	Grommet–Plastic
94–5764	6	9	1	Oil Seal
94–5765	6	10	1	Ring Retaining
94–5776	4	2	1	Head
94–5778	4	3	1	Gasket–Head
94–5779	4	4	2	Stud
94–5780	4	5	2	Bolt
94–5781	6	14	6	Screw–HWH
94–5787	7	9	1	Filter–Fuel
94–5788	7	2	1	Disc–Choke
94–5795	4	7	2	Intake Gasket
95–1713	3	8	1	Handle Section–Upper
95–1778	4	35	1	Gasket–Exhaust
95–1786	4	16	1	Cup–Starter
95–1861	4	9	1	Primer Hose
95–1866	4	17	1	Flywheel Machined Recoil
95–1868	4	20	1	Shroud & Recoil ASM
95–1870	4	23	1	Shoulder Screw Brake
95–1871	4	24	1	Screw (Brake)
95–1897	2	4	1	Gas Tank
95–1899	7	10	1	Float & Arm ASM
95–5574	4	11	1	Element–Air Filter
95–5577	4	12	1	Cover–Air Filter
95–5578	4	37	1	Tunnel
95–5581	7	1	1	Shaft–Choke
95–5583	7	3	1	Spring–Choke Return
95–5588	4	36	1	Air Filter Base ASM
95–7052	1	31	1	Plate–Cover
95–7403	1	17	4	Bracket–Wheel Height Adj
95–7415	3	12	1	Cable–Throttle 2 Cycle
95–7417	2	13	1	Decal–Recoil
95–7613	4	38	1	Gasket–Filter Base
95–7615	5	64	1	Retainer Hose
95–7621	2	12	3	Screw–Tf Acorn Hd
95–7626	6	12	1	Ring Set
95–7628	6	11	1	Piston & Conn Rod ASM
95–7629	6	17	1	Connecting Rod ASM
95–7631	6	18	1	Cylinder & Crankcase ASM
95–7636	6	*	1	Short Block ASM
98–1357	7	8	1	Mainjet 77.5
98–1362	7	11	1	Gasket–Float Chamber

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-1384	5	62	1	Muffler Plate Machining
98-1386	2	23	1	Foam Pad
98-1388	4	50	1	Heat Shield
98-1392	4	54	1	Gasket
98-1394	4	57	2	Screw
98-1557	4	58	1	Transfer Tube
98-1566	2	3	1	Decal-Deck
98-1591	4	59	1	Cover Plate
98-4471	1	5	1	ASM-Housing & Baffle
98-7001	7	7	1	Nozzle
98-7011	7	18	1	Spring-Throttle
98-7033	2	6	1	ASM-Shroud & Recoil Covr
98-7037	4	32	1	Brake Switch Lead Wire
98-7042	4	51	1	Carburetor ASM w/Gaskets
98-7046	6	15	1	Ring-Retaining
98-7047	7	20	1	Disc-Throttle
98-7048	4	55	1	Muffler & Guard
98-7134	3	3	2	Knob
98-8332	1	7	1	Knob-Cover Plate
98-8344	2	8	1	ASM-Fuel/Oil Cap
99-1521	2	25	1	Foam Strip
99-1522	2	26	2	Foam Strip
99-2901	6	7	1	Crankshaft & Bearing ASM
321-48	3	5	1	Screw-HH
321-50	3	10	1	Screw
322-3	1	37	4	Screw-HH
322-7	5	65	2	Screw-HH
322-17	5	61	2	Screw-HH
3254-1	5	66	2	Washer-Lock
3290-456	4	39	4	Washer-Lock
3290-459	4	27	2	Rivet-Self Expand Plas
3296-29	1	35	4	Nut-Lock
3296-39	1	24	2	Nut-Lock
3296-73	3	4	2	Nut-Lock

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]