

LAWN-BOY®

Silver Pro Series™ Walk-Behind Mower

Model No. 10332 – 8900001 & Up

Model No. 10324 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Gear Case Assembly	8
Engine & Blade Assembly	2	Carburetor Assembly	9
Rear Axle Assembly	3	Bagging Assembly	10
Handle Assembly	4	Lawn–Boy Part Number Index	11–14
Engine Assembly	5		
Engine Assembly (Continued)	6		
Crankshaft Assembly	7		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Model No. 89860
Leaf Bag Kit	Model No. 89804	Leaf Bag w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSV	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

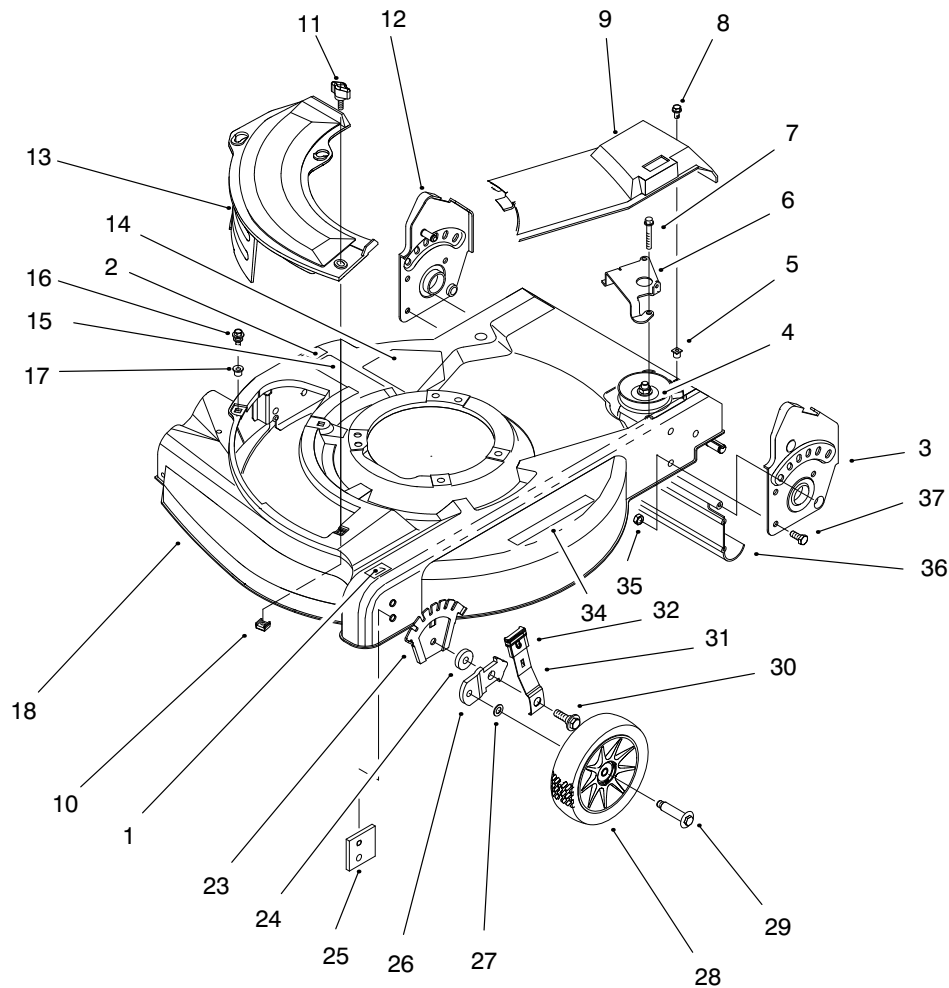


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	1	Decal-HOC
2	92-2914	1	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	95-7412	1	ASM-Gear Case
5	605120	1	Grommet
6	95-1732	1	Guide-Transmission
7	65-5221	2	Screw-Thread Forming
8	92-9665	1	Screw-Phil
9	95-7413	1	Cover-Drive
10	613765	1	Nut-Cage
11	98-8332	1	Knob-Cover Plate
12	92-7723	1	ASM-Handle Bracket
13	92-8630	1	Mulch Plate-21"
14	39-5770	1	Decal-Danger
15	92-1097	1	Decal-Discharge
16	614677	2	Screw-Sems
17	94-1610	2	Grommet-Plastic
18	98-4472	1	ASM-Housing & Baffle
23	92-4881	2	Plate-Height Adjust
24	92-4890	2	Washer
25	92-7731	2	Plate-Baffle
26	95-7403	2	Bracket-Wheel Height Adj
27	40-1940	2	Washer

Ref. No.	Part No.	Qty.	Description
28	684776	2	ASM-Wheel & Tire 6"
29	92-1099	2	Bolt-Shoulder
30	614672	2	Bolt-Shoulder
31	614687	2	Spring Arm-Front
32	92-1008	4	Knob-Height Adjust
34	93-7250	1	Decal-Warning
35	3296-29	6	Nut-Lock
36	92-8647	1	Shield-Trailing
37	322-3	6	Screw-HH
*39	95-7052	1	Plate-Cover


* Not illustrated

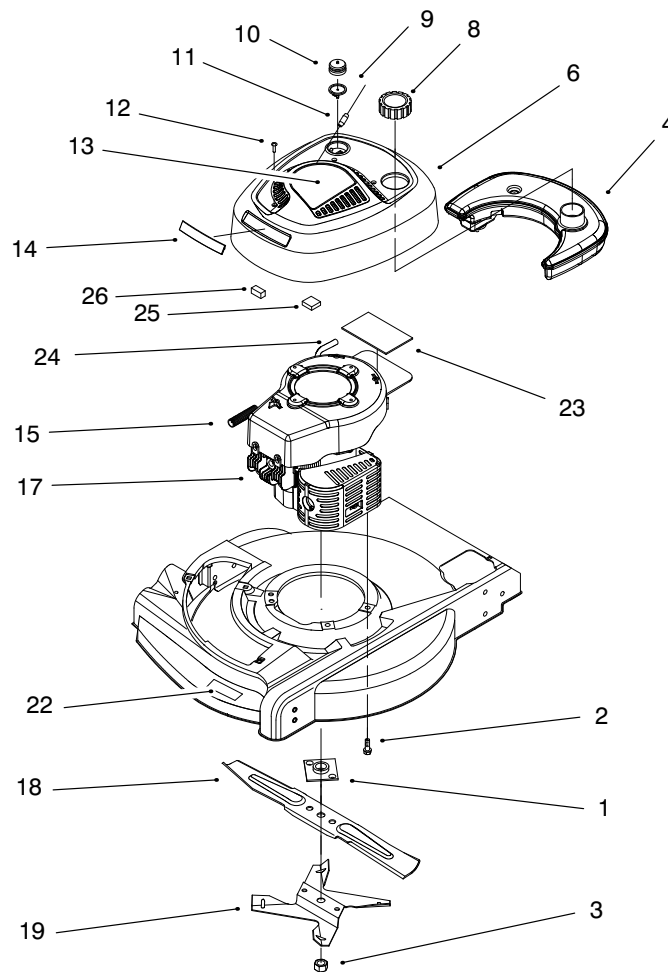

Sheet No.:3

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar				
2	611774	3	Screw				
3	603164	1	Nut-Blade				
4	95-1897	1	Gas Tank				
6	98-7033	1	ASM-Shroud & Recoil Covr				
8	98-8345	1	ASM-Fuel/Oil Cap				
9	66-7460	1	Bulb-Primer				
10	44-2750	1	Body-Primer				
11	92-1701	1	Rope-Stop				
12	95-7621	3	Screw-Tf Acorn Hd				
13	95-7417	1	Decal-Recoil				
14	92-8615	1	Applique-Shroud				
15	93-4306	1	Spring-Compression				
17		1	Engine ASM Recoil Sp				
18	612543	1	Blade-21" Whirl				
19	92-1630	1	Fan-Mulching				
20	314576	1	Screw-Throttle Cable				
21	306531	1	Nut-Throttle Cable				
22	98-1567	1	Decal-Deck				
23	98-1386	1	Foam Pad				
24	612782	1	Gas Line				
25	99-1521	1	Foam Strip				
26	99-1522	2	Foam Strip				

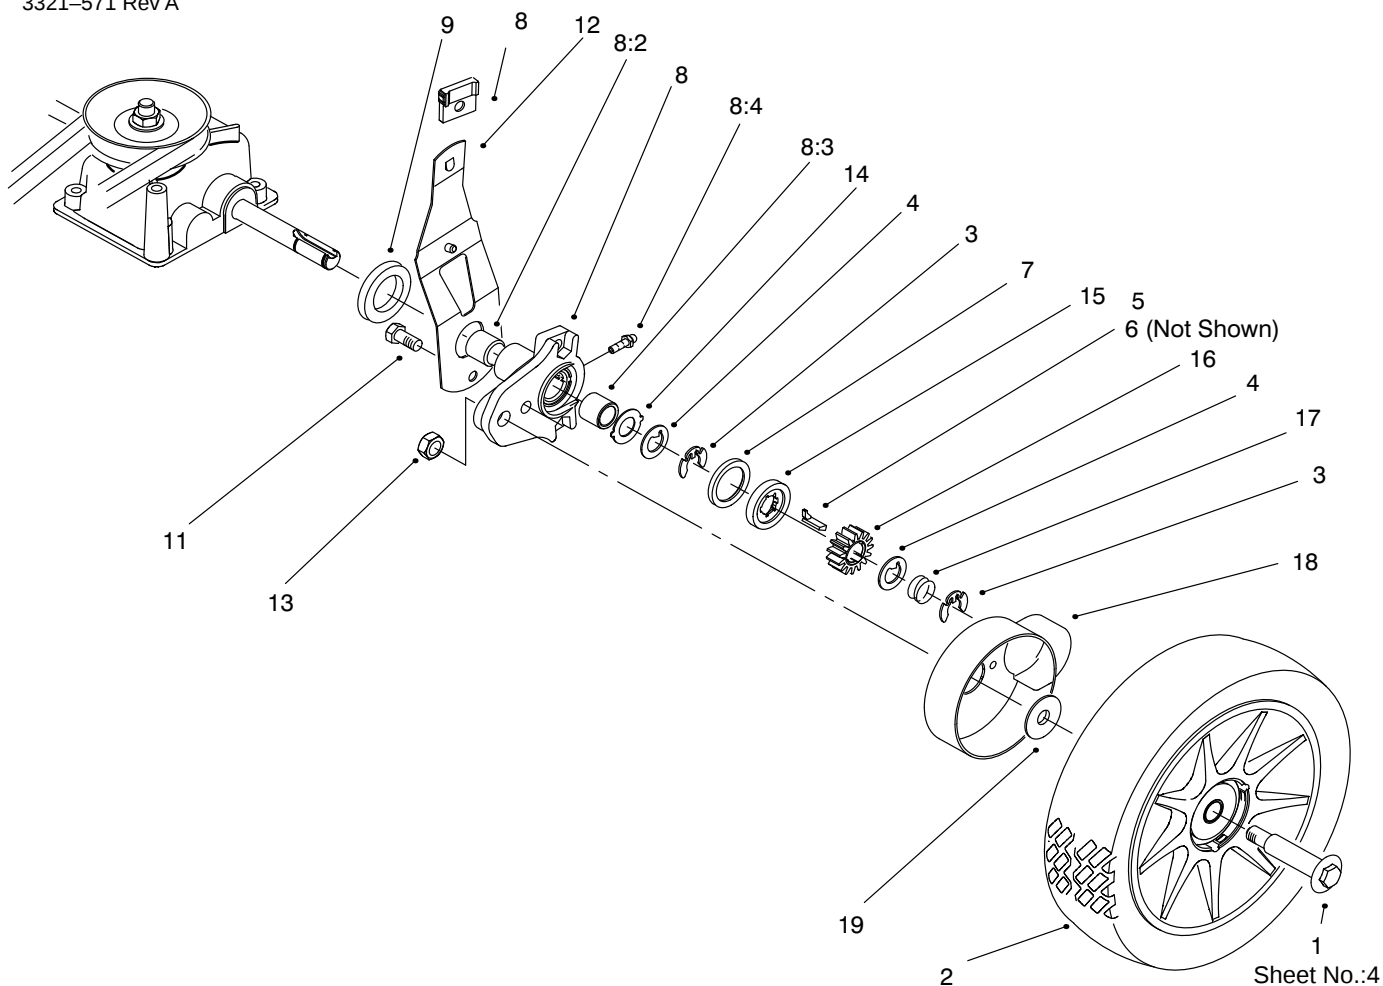

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	684777	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HH
12	92-1044	2	Cable-Flywheel Brake
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped


Ref. No.	Part No.	Qty.	Description

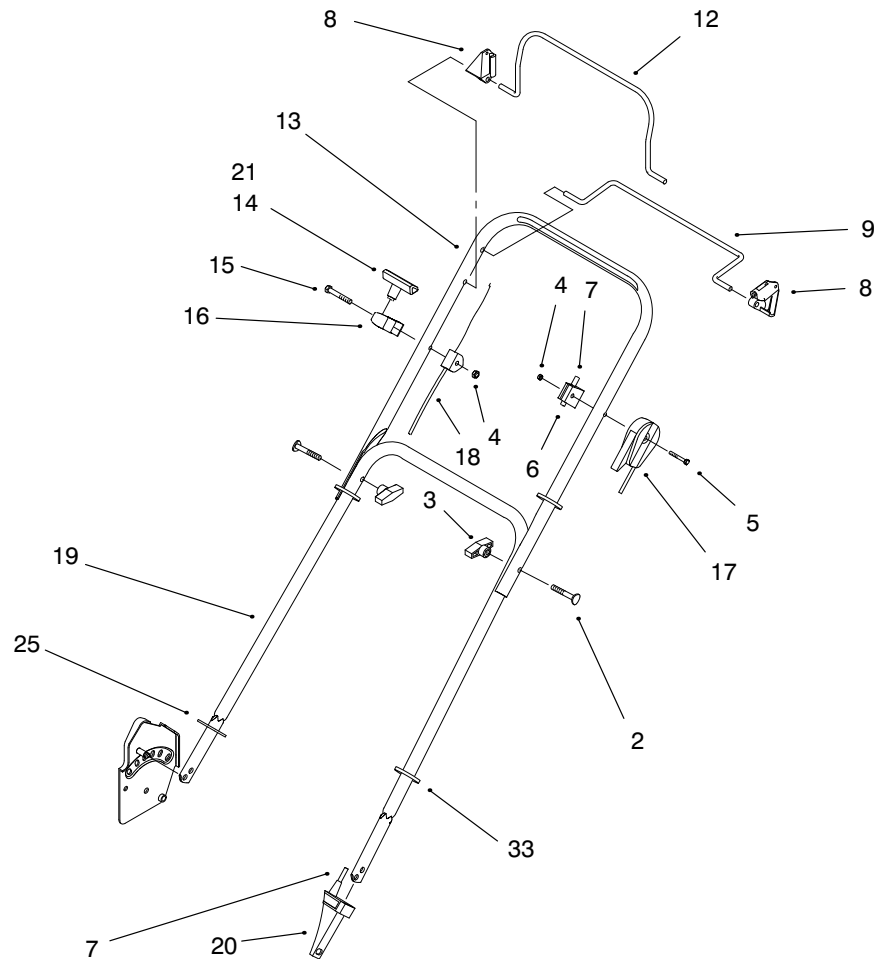

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	614697	2	Screw-Handle				
3	98-7134	2	Knob				
4	3296-73	2	Nut-Lock				
5	321-49	1	Screw-HH				
6	92-7729	1	Anchor-Cable				
7	98-8328	1	Cable-Traction				
8	92-5412	2	Stop-Pivot				
9	92-1001	1	Bail-Sp Control				
12	93-4184	1	Bail-Flywheel Brake				
13	95-1713	1	Handle Section-Upper				
14	612825	1	Handle-Starter				
15	321-50	1	Screw				
16	93-7383	1	Guide-Rope				
17	95-7415	1	Cable-Throttle 2 Cycle				
18	92-7738	1	Cable-Flywheel Brake				
19	614643	1	Handle Section-Lower				
20	93-7380	1	Anchor-Cable				
21	612824	1	Clip-Rope				
31	93-3653	1	Handle-Guard				
33	614249	3	Tie Strap				

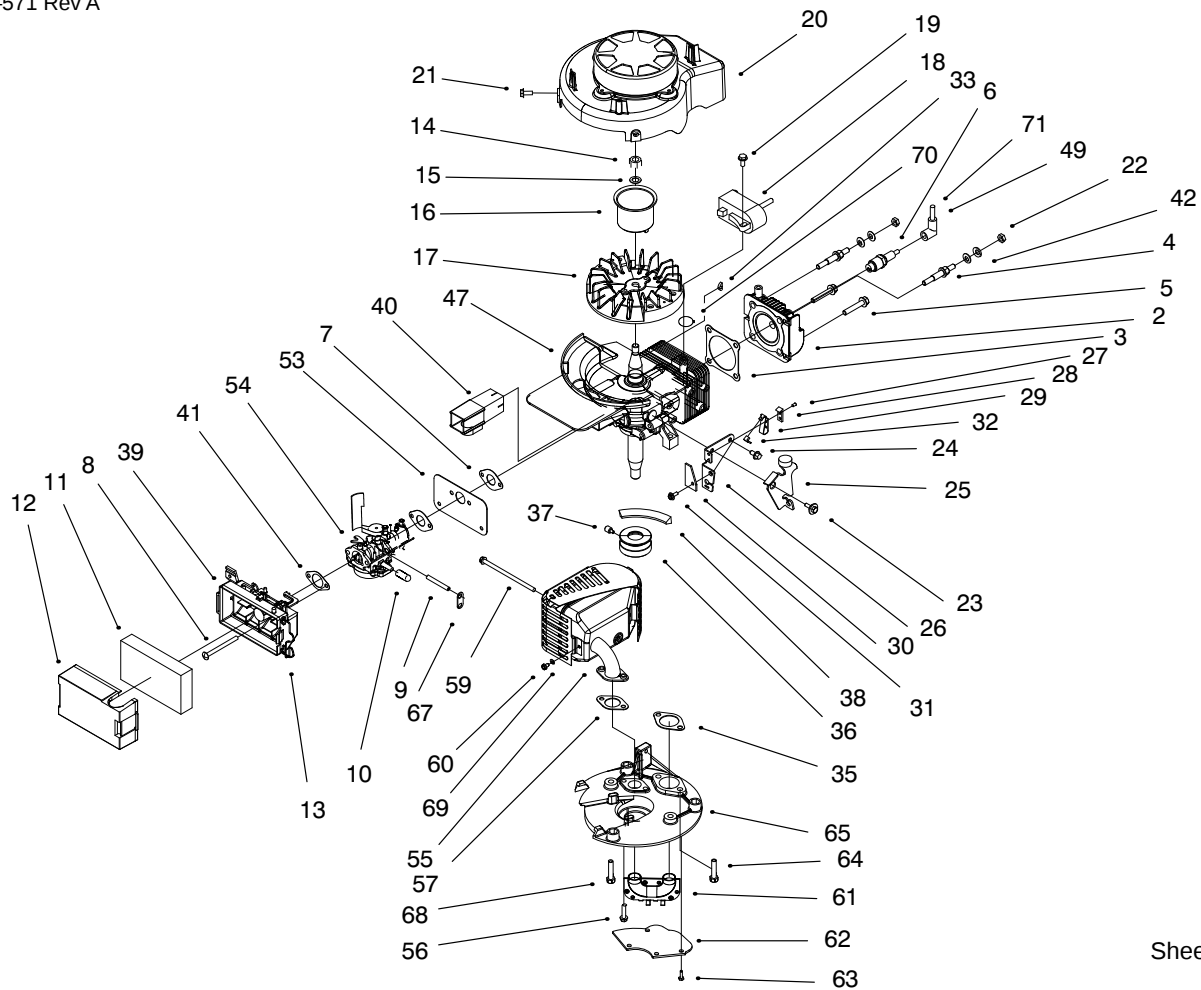


Sheet No.:100

Engine Assembly

Ref. No.	Part No.	Qty.	Description
2	94-5776	1	Head
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt
6	50-1170	1	Spark Plug
7	94-5795	2	Intake Gasket
8	612507	2	Screw
9	95-1861	1	Primer Hose
11	95-5574	1	Element-Air Filter
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel Machined
18	92-1152	1	Ignition ASM
19	613208	2	Screw-HWH
20	95-1868	1	Shroud & Recoil ASM
21	700094	2	Screw
22	146501	2	Nut-Lock
23	95-1870	1	Shoulder Screw Brake
24	95-1871	1	Screw (Brake)
25	93-4312	1	ASM-Brake Plate
26	84-7820	1	Plate-Mount Brake


Ref. No.	Part No.	Qty.	Description
27	3290-459	2	Rivet-Self Expand Plas
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	53-4690	1	Stop-Ground Strap
31	12-5450	1	Screw-Thread Forming
32	98-7037	1	Brake Switch Lead Wire
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	95-1878	1	Pulley Engine
37	613227	1	Screw-Set
38	92-1043	1	V-Belt
39	95-5588	1	Air Filter Base ASM
40	95-5578	1	Tunnel
41	95-7613	1	Gasket-Filter Base
42	3290-456	4	Washer-Lock
49	684698	A/R	Cover & Terminal
53	98-1388	1	Heat Shield
54	98-7042	1	Carburetor ASM
55	98-7048	1	Muffler & Guard
56	613208	2	Screw-HWH
57	98-1392	1	Gasket
59	611228	1	Bolt
60	98-1394	2	Screw

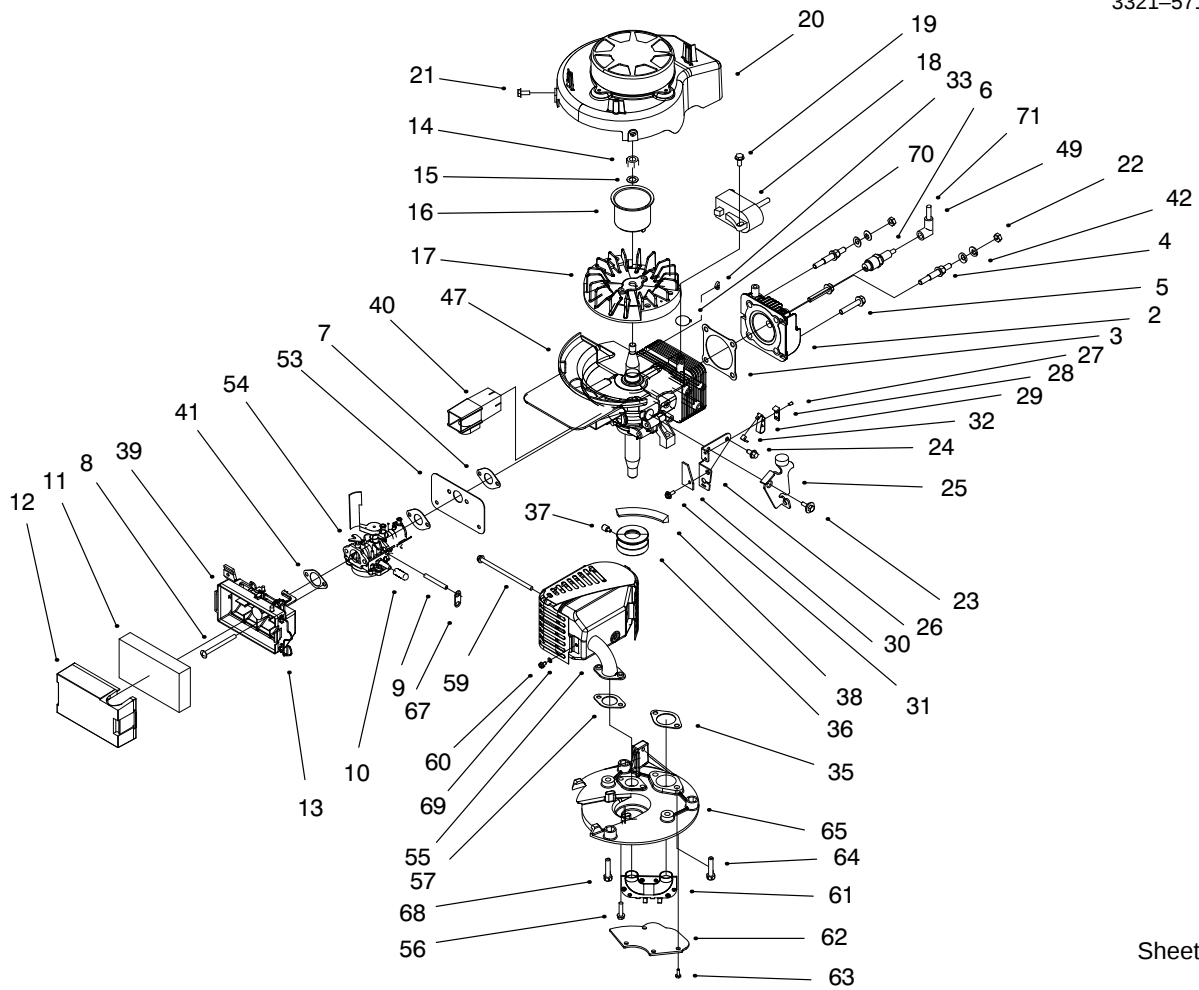

Sheet No.:100

Engine Assembly (Continued)


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
61	98-1557	1	Transfer Tube				
62	98-1591	1	Cover Plate				
63	700822	4	Screw				
64	322-17	2	Screw-HH				
65	98-1384	1	Muffler Plate Machining				
67	95-7615	1	Retainer Hose				
68	322-7	2	Screw-HH				
69	3254-1	2	Washer-Lock				
70	317893	1	Tie Strap				
71	681678	1	Lead & Cover Asm				

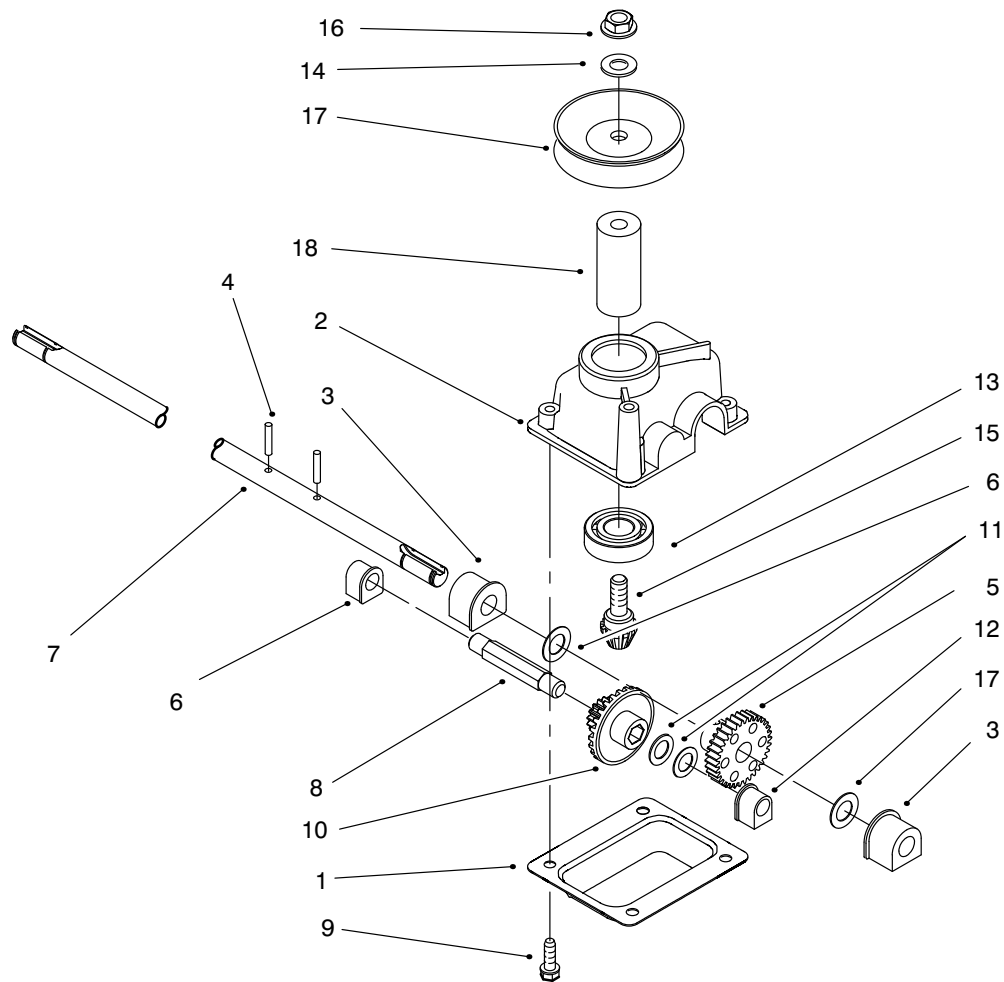

Sheet No.:300

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover-Gear Case				
2	92-7727	1	Gearcase-Upper Ss				
3	60-8850	2	Bushing-Output				
4	3285-19	2	Pin-Spirol				
5	614596	1	Gear-34t				
6	36-4780	2	Washer-Thrust				
7	93-0239	1	Shaft-Output				
8	614696	1	Shaft-Intermediate				
9	32144-4	4	Screw-TAP				
10	55-3760	1	15 T Pinion				
11	36-4791	2	Washer-Thrust				
12	60-8750	2	Bushing				
13	38-7820	1	Bearing-Ball				
14	3256-24	1	Washer-Flat				
15	95-1731	1	Gear-Pinnion				
16	3296-5	1	Nut-Lock				
17	614669	2	Pulley-Half				
18	95-5550	1	Spacer-Pulley				

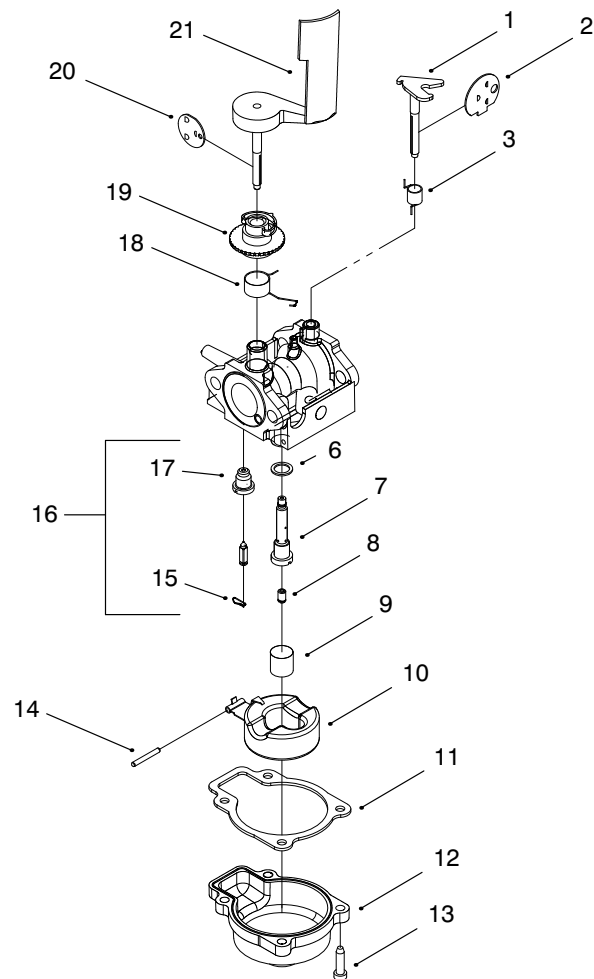


Sheet No.:400

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke Return				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Mainjet 77.5				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket-Float Chamber				
12	92-9691	1	Float Chamber				
13	608850	4	Screw				
14	92-6389	1	Pin				
15		1	Clip				
16	92-9697	1	Float & Valve Seat				
17		1	ASM-Seat				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar Adjustment				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				
*	98-7042	1	Carburetor ASM w/Gaskets				

* Not Illustrated

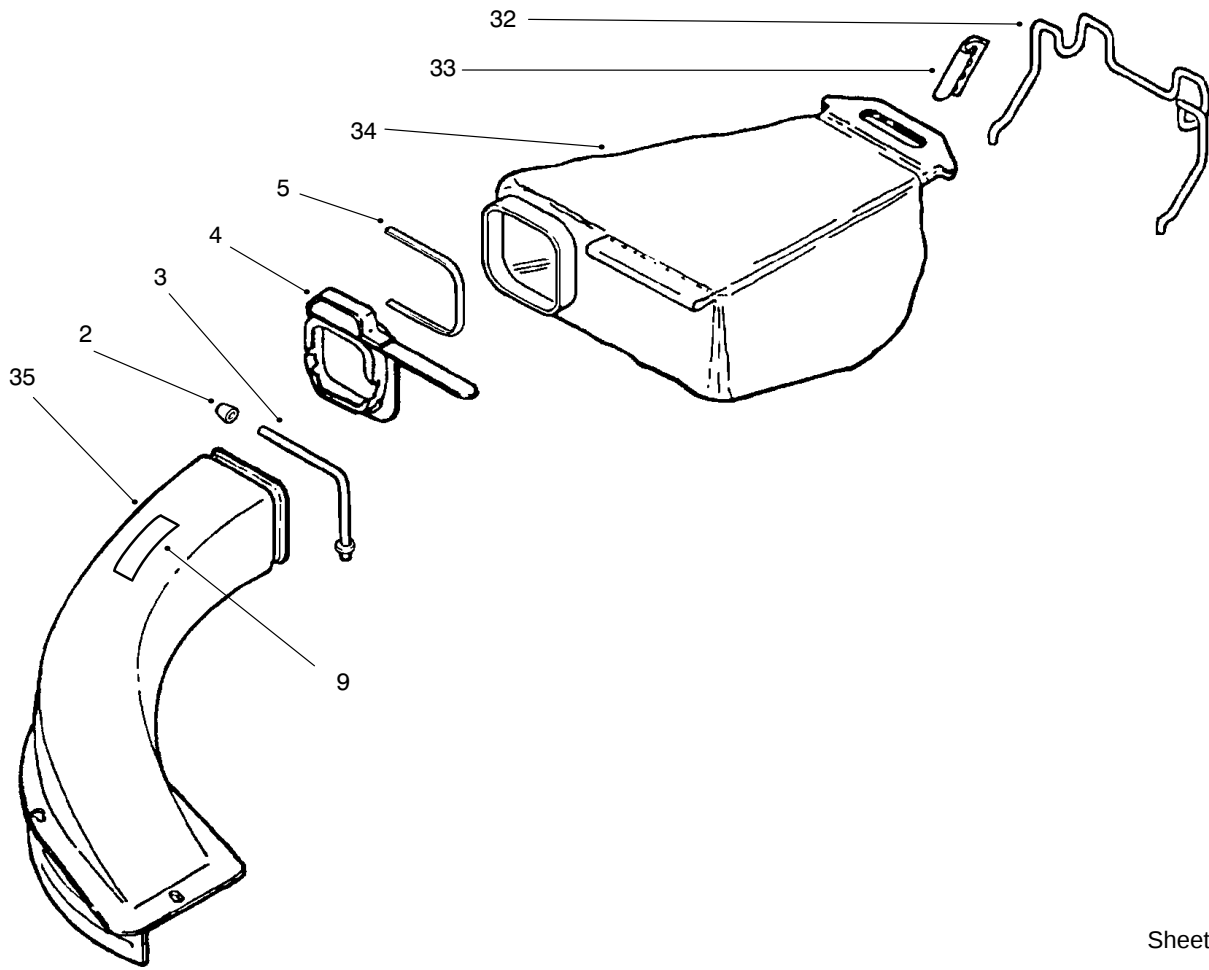

Sheet No.:500

Bagger Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	614589	1	Nut-Cap				
3	614591	1	Support-Chute				
4	684727	1	ASM-Adaptor				
5	614700	1	Tie Strap				
9	92-2919	1	Decal-Danger				
32	613455	1	Hanger-Wire				
33	613462	2	Hanger-Clamp				
34	684728	1	ASM-Bag & Adapter				
35	684729	1	ASM-Chute & Support				
	684165	1	ASM-Bag				

Lawn–Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	5	14	1	Nut
146501	5	22	2	Nut–Lock
303712	7	16	1	Ring–Retaining
306531	2	21	1	Nut–Throttle Cable
314576	2	20	1	Screw–Throttle Cable
316959	5	15	1	Washer–Lock
317893	6	70	1	Tie Strap
603164	2	3	1	Nut–Blade
605120	1	5	1	Grommet
607199	5	33	1	Key
608850	9	13	4	Screw
609790	7	*	1	Sealant
610358	3	13	2	Nut–Lock
610372	7	*	1	Sealant
610383	5	13	1	Retainer–Filter
610834	9	19	1	Collar Adjustment
611228	5	59	1	Bolt
611393	7	3	2	Screw
611396	7	4	1	Oil Seal
611774	2	2	3	Screw
612383	9	6	1	Washer
612507	5	8	2	Screw
612543	2	18	1	Blade–21” Whirl
612782	2	24	1	Gas Line
612824	4	21	1	Clip–Rope
612825	4	14	1	Handle–Starter
613208	5	19	2	Screw–HWH
613208	5	56	2	Screw–HWH
613227	5	37	1	Screw–Set
613455	10	32	1	Hanger–Wire
613462	10	33	2	Hanger–Clamp
613765	1	10	1	Nut–Cage
614249	4	33	3	Tie Strap
614426	3	19	2	Washer–Stepped
614447	3	9	2	Spacer–Axle Shaft
614589	10	2	1	Nut–Cap
614591	10	3	1	Support–Chute
614596	8	5	1	Gear–34t
614643	4	19	1	Handle Section–Lower
614668	8	1	1	Cover–Gear Case
614669	8	17	2	Pulley–Half
614672	1	30	2	Bolt–Shoulder
614677	1	16	2	Screw–Sems
614687	1	31	2	Spring Arm–Front
614696	8	8	1	Shaft–Intermediate
614697	4	2	2	Screw–Handle
614700	10	5	1	Tie Strap
677525	2	1	1	ASM–Plate & Collar
677982	7	1	1	Split Liner ASM
681678	6	71	1	Lead & Cover Asm
683911	7	5	1	Needle Bearing & Bearing ASM
684165	10		1	ASM–Bag
684698	5	49	A/R	Cover & Terminal
684727	10	4	1	ASM–Adaptor
684728	10	34	1	ASM–Bag & Adapter
684729	10	35	1	ASM–Chute & Support
684776	1	28	2	ASM–Wheel & Tire 6”
684777	3	2	2	ASM–Whl
700094	5	21	2	Screw
700822	6	63	4	Screw
12–5450	5	31	1	Screw–Thread Forming
36–4780	8	6	2	Washer–Thrust

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
36-4791	8	11	2	Washer-Thrust
38-7820	8	13	1	Bearing-Ball
39-5770	1	14	1	Decal-Danger
40-1940	1	27	2	Washer
44-2750	2	10	1	Body-Primer
47-2900	3	8:3	2	Bushing
50-1170	5	6	1	Spark Plug
53-4690	5	30	1	Stop-Ground Strap
55-3760	8	10	1	15 T Pinion
60-8750	8	12	2	Bushing
60-8850	8	3	2	Bushing-Output
60-9010	5	29	1	Strap-Ground
65-2720	3	3	4	Ring-Retaining
65-4710	3	7	2	Ring-Friction
65-4720	3	17	2	Spring-Compression
65-4730	3	14	2	Washer-Thrust
65-4740	3	4	4	Washer-Thrust
65-4750	3	16	2	Gear-Pinion
65-4760	3	15	2	Washer
65-5221	1	7	2	Screw-Thread Forming
66-6040	3	6	1	Key-Locking RH
66-6050	3	5	1	Key-Rocking LH
66-7460	2	9	1	Bulb-Primer
70-9760	3	8:2	2	Bushing
84-7820	5	26	1	Plate-Mount Brake
92-1001	4	9	1	Bail-Sp Control
92-1008	1	32	4	Knob-Height Adjust
92-1043	5	38	1	V-Belt
92-1044	3	12	2	Cable-Flywheel Brake
92-1057	3	1	2	Bolt-Shoulder
92-1097	1	15	1	Decal-Discharge
92-1099	1	29	2	Bolt-Shoulder
92-1152	5	18	1	Ignition ASM
92-1630	2	19	1	Fan-Mulching
92-1701	2	11	1	Rope-Stop
92-2914	1	2	1	Decal-HOC
92-2915	1	1	1	Decal-HOC
92-2919	10	9	1	Decal-Danger
92-2925	5	28	1	Strap-Insulation
92-4881	1	23	2	Plate-Height Adjust
92-4890	1	24	2	Washer
92-5412	4	8	2	Stop-Pivot
92-6376	9	21	1	Air Vane & Shaft
92-6389	9	14	1	Pin
92-7723	1	12	1	ASM-Handle Bracket
92-7724	1	3	1	ASM-Handle Bracket
92-7727	8	2	1	Gearcase-Upper Ss
92-7729	4	6	1	Anchor-Cable
92-7731	1	25	2	Plate-Baffle
92-7738	4	18	1	Cable-Flywheel Brake
92-7746	3	8	2	ASM-Hgt Adj Arm
92-8615	2	14	1	Applique-Shroud
92-8630	1	13	1	Mulch Plate-21"
92-8647	1	36	1	Shield-Trailing
92-9665	1	8	1	Screw-Phil
92-9691	9	12	1	Float Chamber
92-9697	9	16	1	Float & Valve Seat
93-0239	8	7	1	Shaft-Output
93-3653	4	31	1	Handle-Guard
93-4184	4	12	1	Bail-Flywheel Brake
93-4306	2	15	1	Spring-Compression
93-4312	5	25	1	ASM-Brake Plate

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–7250	1	34	1	Decal–Warning
93–7380	4	20	1	Anchor–Cable
93–7383	4	16	1	Guide–Rope
94–1609	3	18	2	Cover–Wheel
94–1610	1	17	2	Grommet–Plastic
94–5764	7	9	1	Oil Seal
94–5765	7	10	1	Ring Retaining
94–5776	5	2	1	Head
94–5778	5	3	1	Gasket–Head
94–5779	5	4	2	Stud
94–5780	5	5	2	Bolt
94–5781	7	14	6	Screw–HWH
94–5787	9	9	1	Filter–Fuel
94–5788	9	2	1	Disc–Choke
94–5795	5	7	2	Intake Gasket
95–1713	4	13	1	Handle Section–Upper
95–1731	8	15	1	Gear–Pinnion
95–1732	1	6	1	Guide–Transmission
95–1778	5	35	1	Gasket–Exhaust
95–1786	5	16	1	Cup–Starter
95–1861	5	9	1	Primer Hose
95–1866	5	17	1	Flywheel Machined Recoil
95–1868	5	20	1	Shroud & Recoil ASM
95–1870	5	23	1	Shoulder Screw Brake
95–1871	5	24	1	Screw (Brake)
95–1878	5	36	1	Pulley Engine
95–1897	2	4	1	Gas Tank
95–1899	9	10	1	Float & Arm ASM
95–5550	8	18	1	Spacer–Pulley
95–5574	5	11	1	Element–Air Filter
95–5577	5	12	1	Cover–Air Filter
95–5578	5	40	1	Tunnel
95–5581	9	1	1	Shaft–Choke
95–5583	9	3	1	Spring–Choke Return
95–5588	5	39	1	Air Filter Base ASM
95–7052	1	39	1	Plate–Cover
95–7403	1	26	2	Bracket–Wheel Height Adj
95–7412	1	4	1	ASM–Gear Case
95–7413	1	9	1	Cover–Drive
95–7415	4	17	1	Cable–Throttle 2 Cycle
95–7417	2	13	1	Decal–Recoil
95–7613	5	41	1	Gasket–Filter Base
95–7615	6	67	1	Retainer Hose
95–7621	2	12	3	Screw–Tf Acorn Hd
95–7626	7	12	1	Ring Set
95–7628	7	11	1	Piston & Conn Rod ASM
95–7629	7	17	1	Connecting Rod ASM
95–7631	7	18	1	Cylinder & Crankcase
95–7636	7	*	1	Short Block
98–1357	9	8	1	Mainjet 77.5
98–1362	9	11	1	Gasket–Float Chamber
98–1384	6	65	1	Muffler Plate Machining
98–1386	2	23	1	Foam Pad
98–1388	5	53	1	Heat Shield
98–1392	5	57	1	Gasket
98–1394	5	60	2	Screw
98–1557	6	61	1	Transfer Tube
98–1567	2	22	1	Decal–Deck
98–1591	6	62	1	Cover Plate
98–4472	1	18	1	ASM–Housing & Baffle
98–7001	9	7	1	Nozzle
98–7011	9	18	1	Spring–Throttle

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-7033	2	6	1	ASM-Shroud & Recoil Covr
98-7037	5	32	1	Brake Switch Lead Wire
98-7042	5	54	1	Carburetor ASM
98-7042	9	*	1	Carburetor ASM w/Gaskets
98-7046	7	15	1	Ring-Retaining
98-7047	9	20	1	Disc-Throttle
98-7048	5	55	1	Muffler & Guard
98-7134	4	3	2	Knob
98-8328	4	7	1	Cable-Traction
98-8332	1	11	1	Knob-Cover Plate
98-8345	2	8	1	ASM-Fuel/Oil Cap
99-1521	2	25	1	Foam Strip
99-1522	2	26	2	Foam Strip
99-2901	7	7	1	Crankshaft
302-56	3	8:4	2	Fitting-Grease
321-49	4	5	1	Screw-HH
321-50	4	15	1	Screw
322-3	1	37	6	Screw-HH
322-7	6	68	2	Screw-HH
322-17	6	64	2	Screw-HH
3254-1	6	69	2	Washer-Lock
3256-24	8	14	1	Washer-Flat
3285-19	8	4	2	Pin-Spirol
3290-456	5	42	4	Washer-Lock
3290-459	5	27	2	Rivet-Self Expand Plas
3296-5	8	16	1	Nut-Lock
3296-29	1	35	6	Nut-Lock
3296-73	4	4	2	Nut-Lock
32144-4	8	9	4	Screw-TAP
32144-85	3	11	2	Screw-HH

15

[illegible]

[illegible]