



Count on it.

Parts Catalog

Safety and Security Cage Kit

**Groundsmaster® 4500, 4700, or Reelmaster®
7000 Series Traction Unit with 2 Post ROPS
Extension**

Model No. 31606



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Safety and Security Cage Assembly 4

LH Security Door Assembly 6

RH Security Door Assembly 8


Safety and Security Cage Assembly

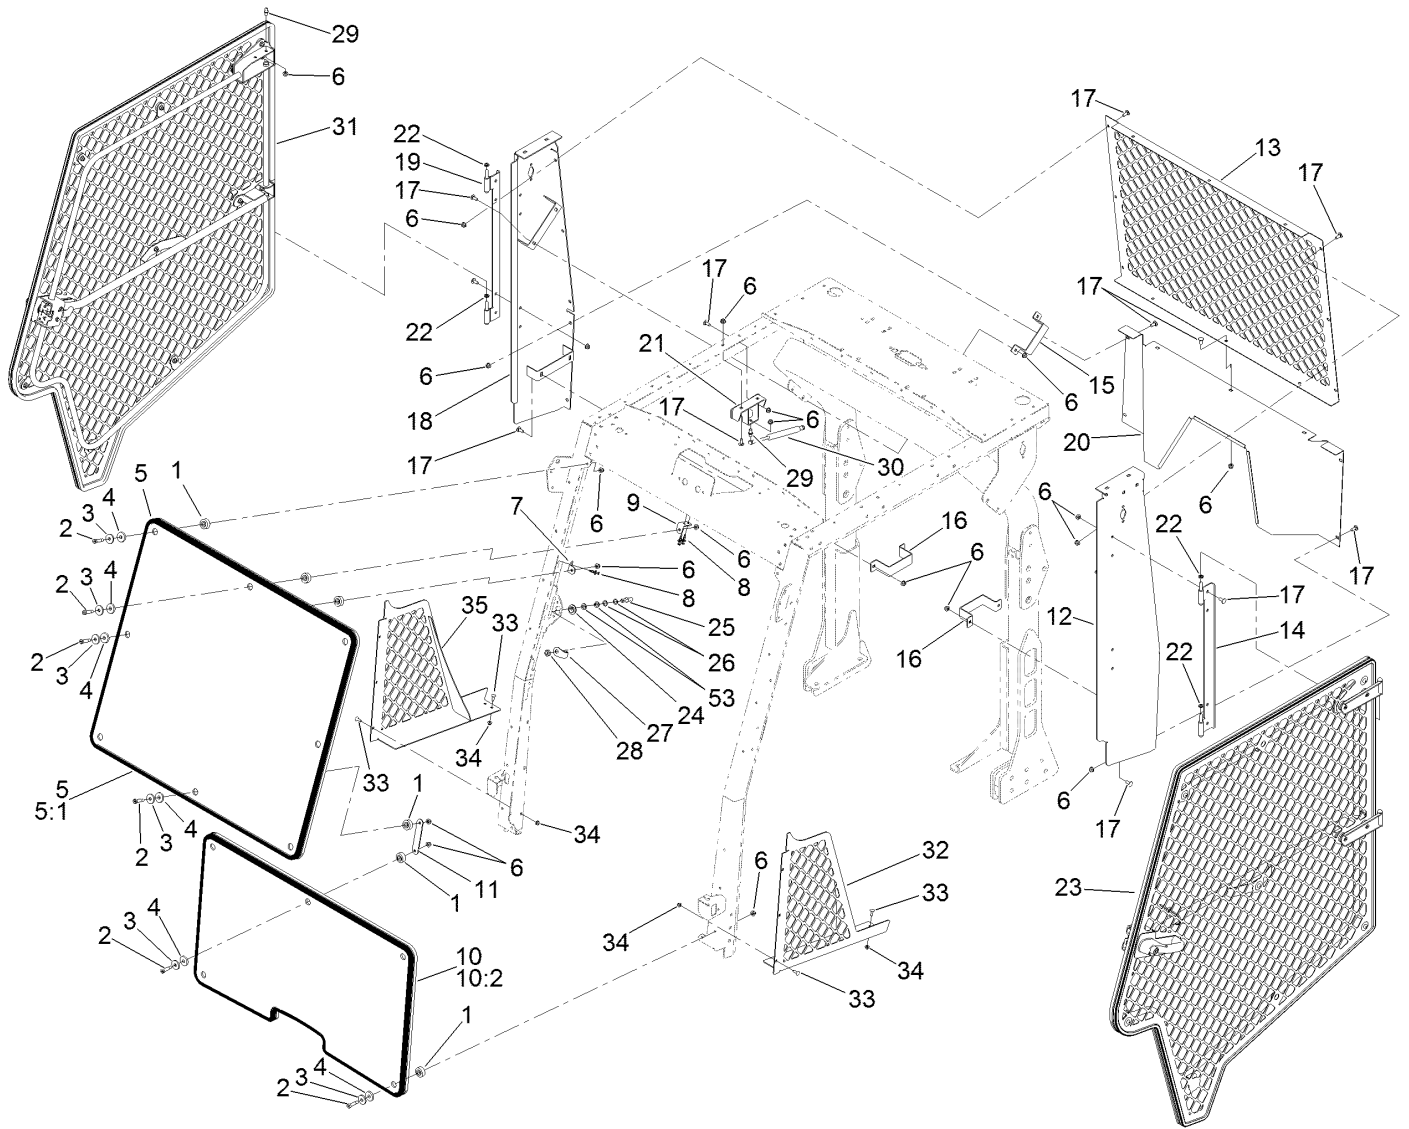

Safety and Security Cage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9537	13	Bushing-Flange	18	136-2226-03	1	Support-Door, RH
2	125-9521	13	Screw-Shoulder, HSH	19	132-3730-03	1	Mount-Door RH
3	130-5815	13	Washer-Backup	20	136-2101-03	1	Panel-Rear, Lower
4	125-9982	14	Bushing-Flange	21	133-0984-03	2	Mount-Gas Spring
5	132-3415	1	Upper Windshield ASM	22	121-8441	4	Washer-Spacer
5:1	132-3414	1	Trim-Windshield, Upper	23	136-2235	1	LH Security Door ASM
6	104-8300	57	Nut-HF, NI	24	125-9992	2	Adjuster-Stud
7	132-3715-03	2	Tab-Mount	25	132-3718	2	Stud-Striker
8	125-9622	6	Rivet-Blind	26	73-0040	4	Washer-Thrust
9	132-3716-03	1	Tab-Mount	27	121-8393	2	Guard-Striker
10	136-2089	1	Lower Windshield ASM	28	107-8116	2	Nut-Jam, Adhesive
10:2	136-2086	1	Trim-Windshield, Lower	29	98-3104	4	Stud-Ball
11	132-3717-03	1	Tab-Dual	30	130-6083	2	Spring-Gas, Door
12	136-2225-03	1	Support-Door, LH	31	136-2236	1	RH Security Door ASM
13	136-2091-03	1	Panel-Screen, Rear	32	136-2203-03	1	Panel-LH
14	132-3729-03	1	Mount-Door, LH	33	1-807512	10	Bolt-CARR
15	136-2095-03	2	Mount-Clamp, Upper	34	104-7201	10	Nut-HF
16	136-2099-03	2	Bracket-Mount, Lower	35	136-2204-03	1	RH Panel ASM
17	3230-23	40	Screw-CARR	53	3253-6	4	Washer-Lock


LH Security Door Assembly

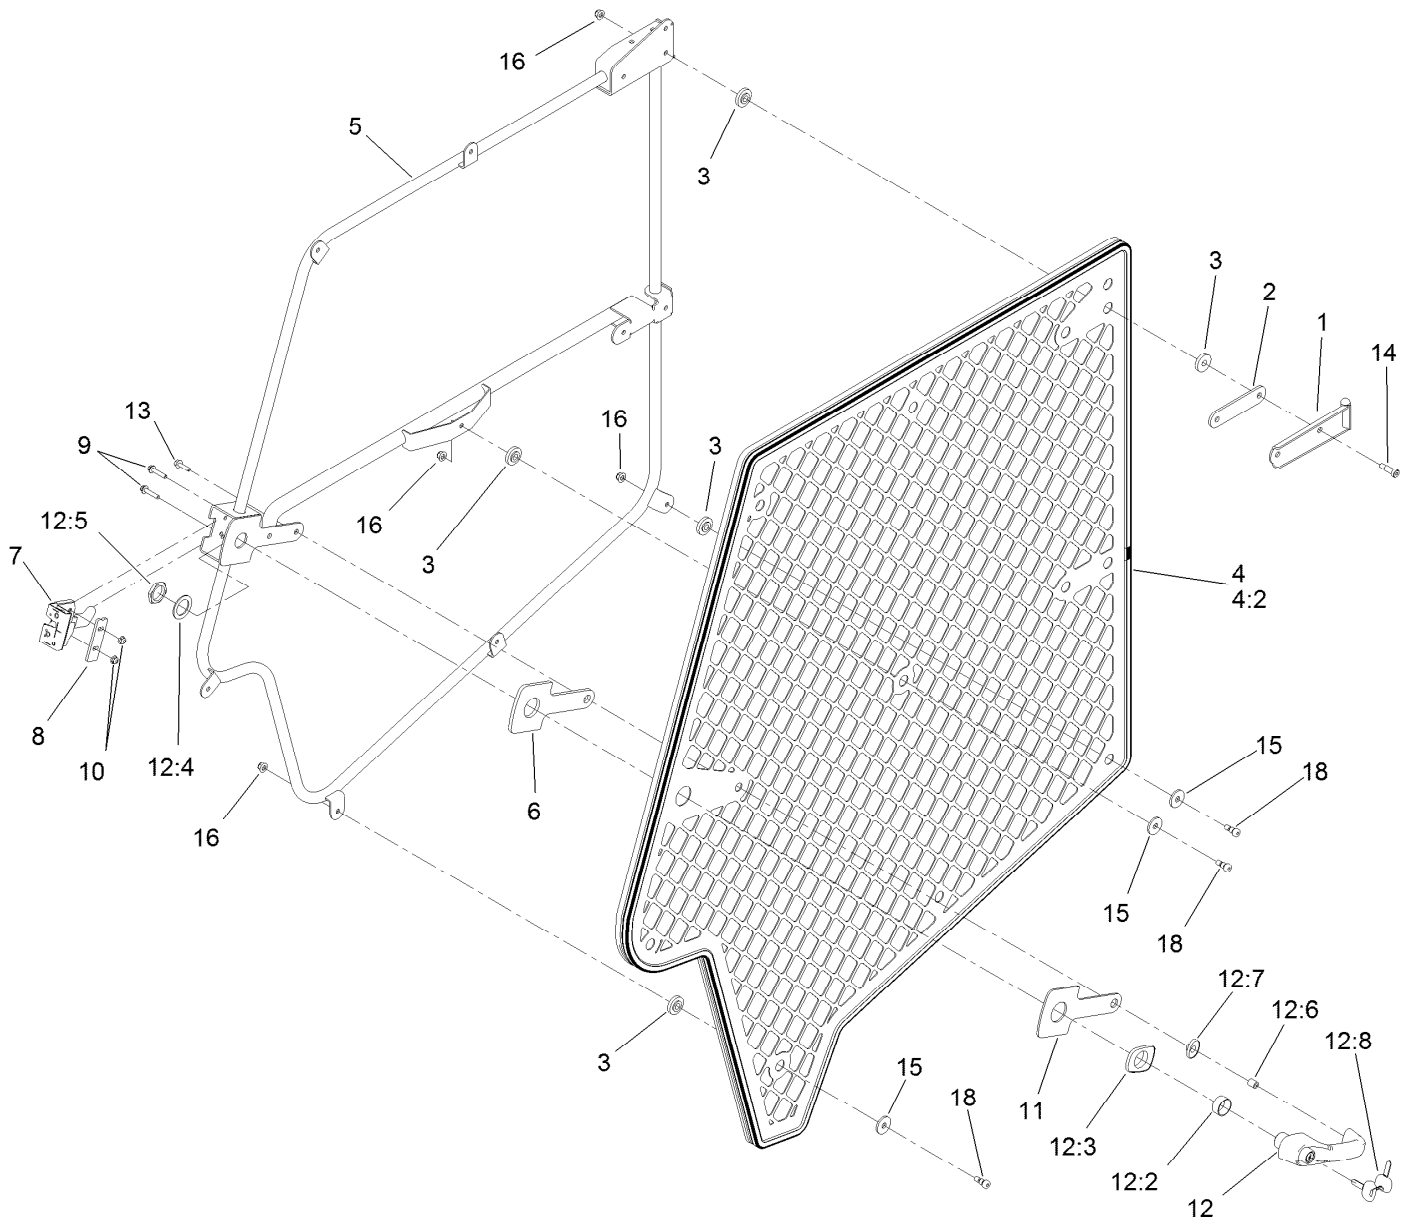

LH Security Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9619-03	2	Hinge-Door, LH	12	121-8630	1	Handle ASM
2	136-2216-03	2	Spacer	12:2	121-8628	1	Cylinder-Mounting, Key
3	125-9982	16	Bushing-Flange	12:3	121-8322	1	Grommet-Mounting, Large
4	136-2231	1	Security Screen Door ASM-LH	12:4	121-8327	1	Washer
4:2	136-2230	1	Trim-Seal	12:5	121-8328	1	Nut
5	136-2106-03	1	Frame-Door, LH	12:6	121-8627	1	Cylinder-Mounting, End
6	121-8331	1	Gasket-Handle	12:7	121-8323	1	Grommet-Mounting, Small
7	121-8391	1	Latch-LH	12:8	125-9531	1	Key-Set
8	121-8395	1	Plate-Support, Latch	13	33103-025	1	Screw-HHF
9	3234-21	2	Screw-HHF	14	125-9520	4	Screw-Shoulder, HSH
10	104-7201	2	Nut-HF	15	125-9676	8	Washer-Backup
11	130-6172-03	1	Spacer	16	104-8300	12	Nut-HF, NI
				18	1-809056	8	Screw-HSH

RH Security Door Assembly

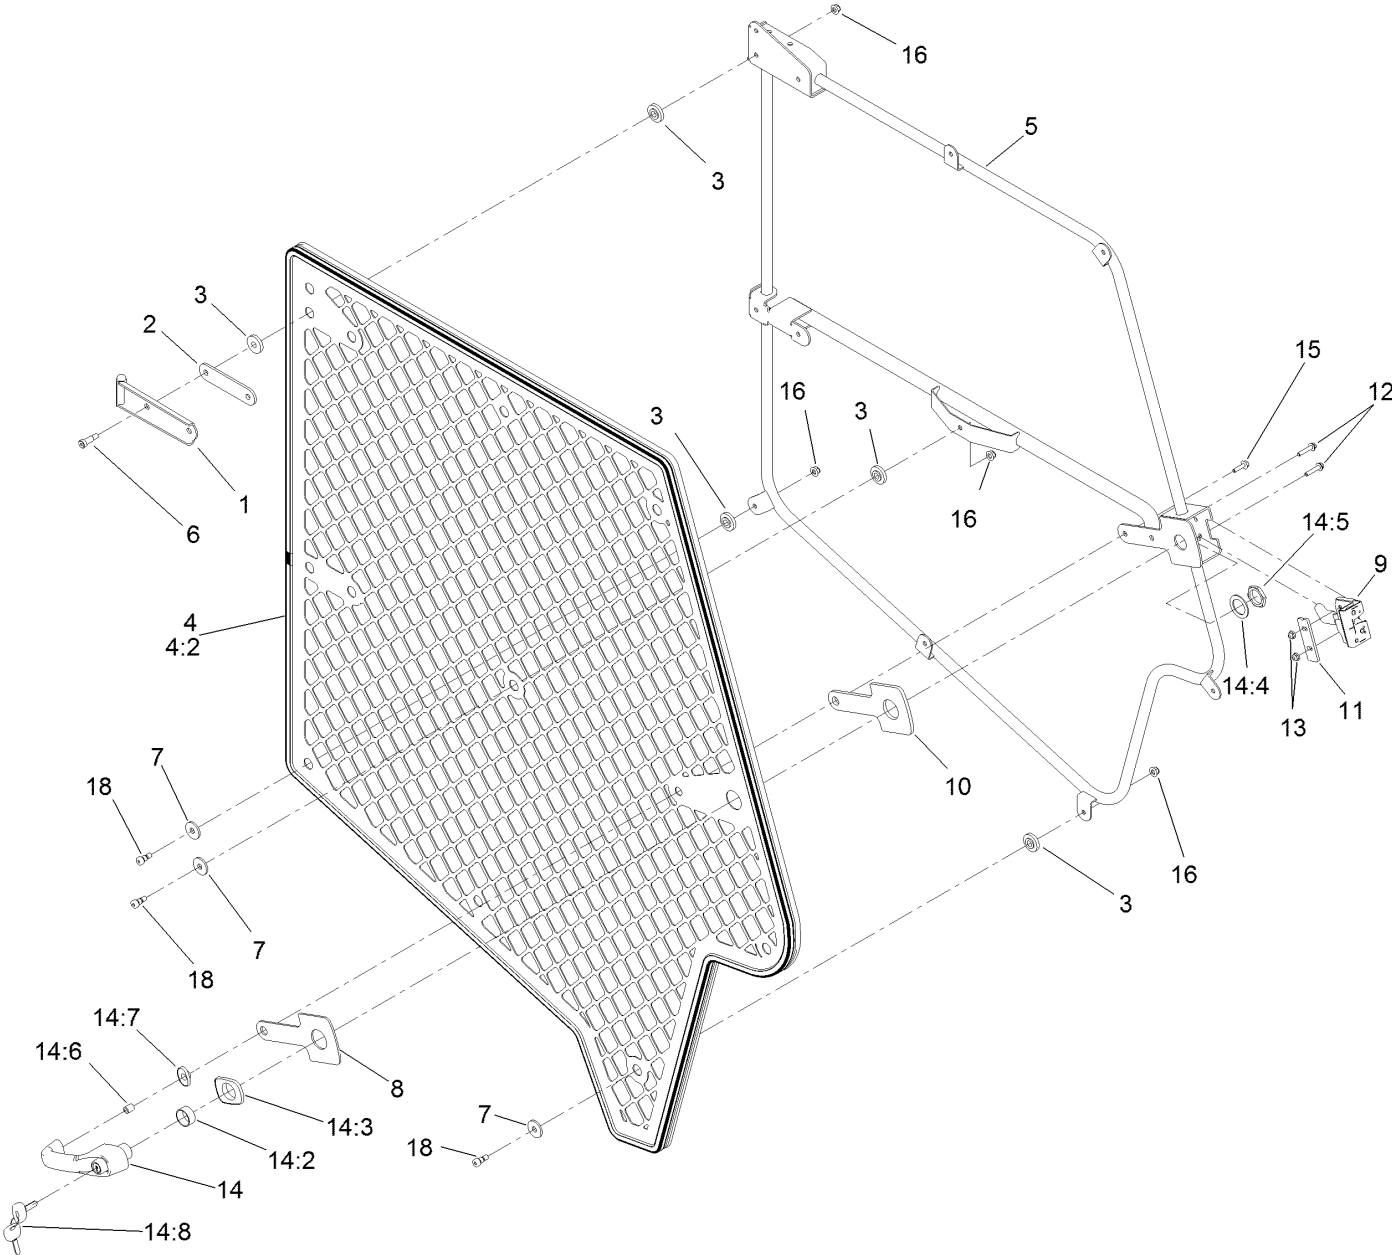

RH Security Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9618-03	2	Hinge-Door, RH	12	3234-21	2	Screw-HHF
2	136-2216-03	2	Spacer	13	104-7201	2	Nut-HF
3	125-9982	16	Bushing-Flange	14	121-8630	1	Handle ASM
4	136-2232	1	Security Screen Door ASM-RH	14:2	121-8628	1	Cylinder-Mounting, Key
4:2	136-2230	1	Trim-Seal	14:3	121-8322	1	Grommet-Mounting, Large
5	136-2107-03	1	Frame-Door, RH	14:4	121-8327	1	Washer
6	125-9520	4	Screw-Shoulder, HSH	14:5	121-8328	1	Nut
7	125-9676	8	Washer-Backup	14:6	121-8627	1	Cylinder-Mounting, End
8	130-6172-03	1	Spacer	14:7	121-8323	1	Grommet-Mounting, Small
9	121-8390	1	Latch-RH	14:8	125-9531	1	Key-Set
10	121-8331	1	Gasket-Handle	15	33103-025	1	Screw-HHF
11	121-8395	1	Plate-Support, Latch	16	104-8300	12	Nut-HF, NI
				18	1-809056	8	Screw-HSH

Notes:

Notes:



Count on it.