



Form No. 3415-669 Rev B

**Count on it.**

# Parts Catalog

## Power Max<sup>®</sup> Heavy Duty 826 OXE Snowthrower

Model No. 38805—Serial No. 402082000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                           |    |
|-------------------------------------------|----|
| Housing and Bypass Assembly .....         | 4  |
| Housing Assembly .....                    | 6  |
| Idler Pulley and Linkage Assembly .....   | 8  |
| Auger and Impeller Assembly .....         | 10 |
| Gear Case Assembly No. 125-7925 .....     | 12 |
| Impeller Assembly .....                   | 14 |
| Engine Assembly .....                     | 16 |
| Fuel System and Carburetor Assembly ..... | 18 |
| Intake and Exhaust Assembly .....         | 20 |
| Ignition and Electrical Assembly .....    | 22 |
| Crankcase Assembly .....                  | 24 |
| Governor Assembly .....                   | 26 |
| Piston and Head Assembly .....            | 28 |
| Blower Housing and Shrouds Assembly ..... | 30 |
| Engine Decal Assembly .....               | 32 |
| Chute Assembly .....                      | 34 |
| Lever Chute Control Assembly .....        | 36 |
| Handle Assembly .....                     | 38 |
| Control Assembly .....                    | 40 |
| Wheel Clutch Assembly .....               | 42 |
| Wheel Clutch Sprocket Assembly .....      | 44 |
| Attachments and Accessories .....         | 46 |


# Housing and Bypass Assembly

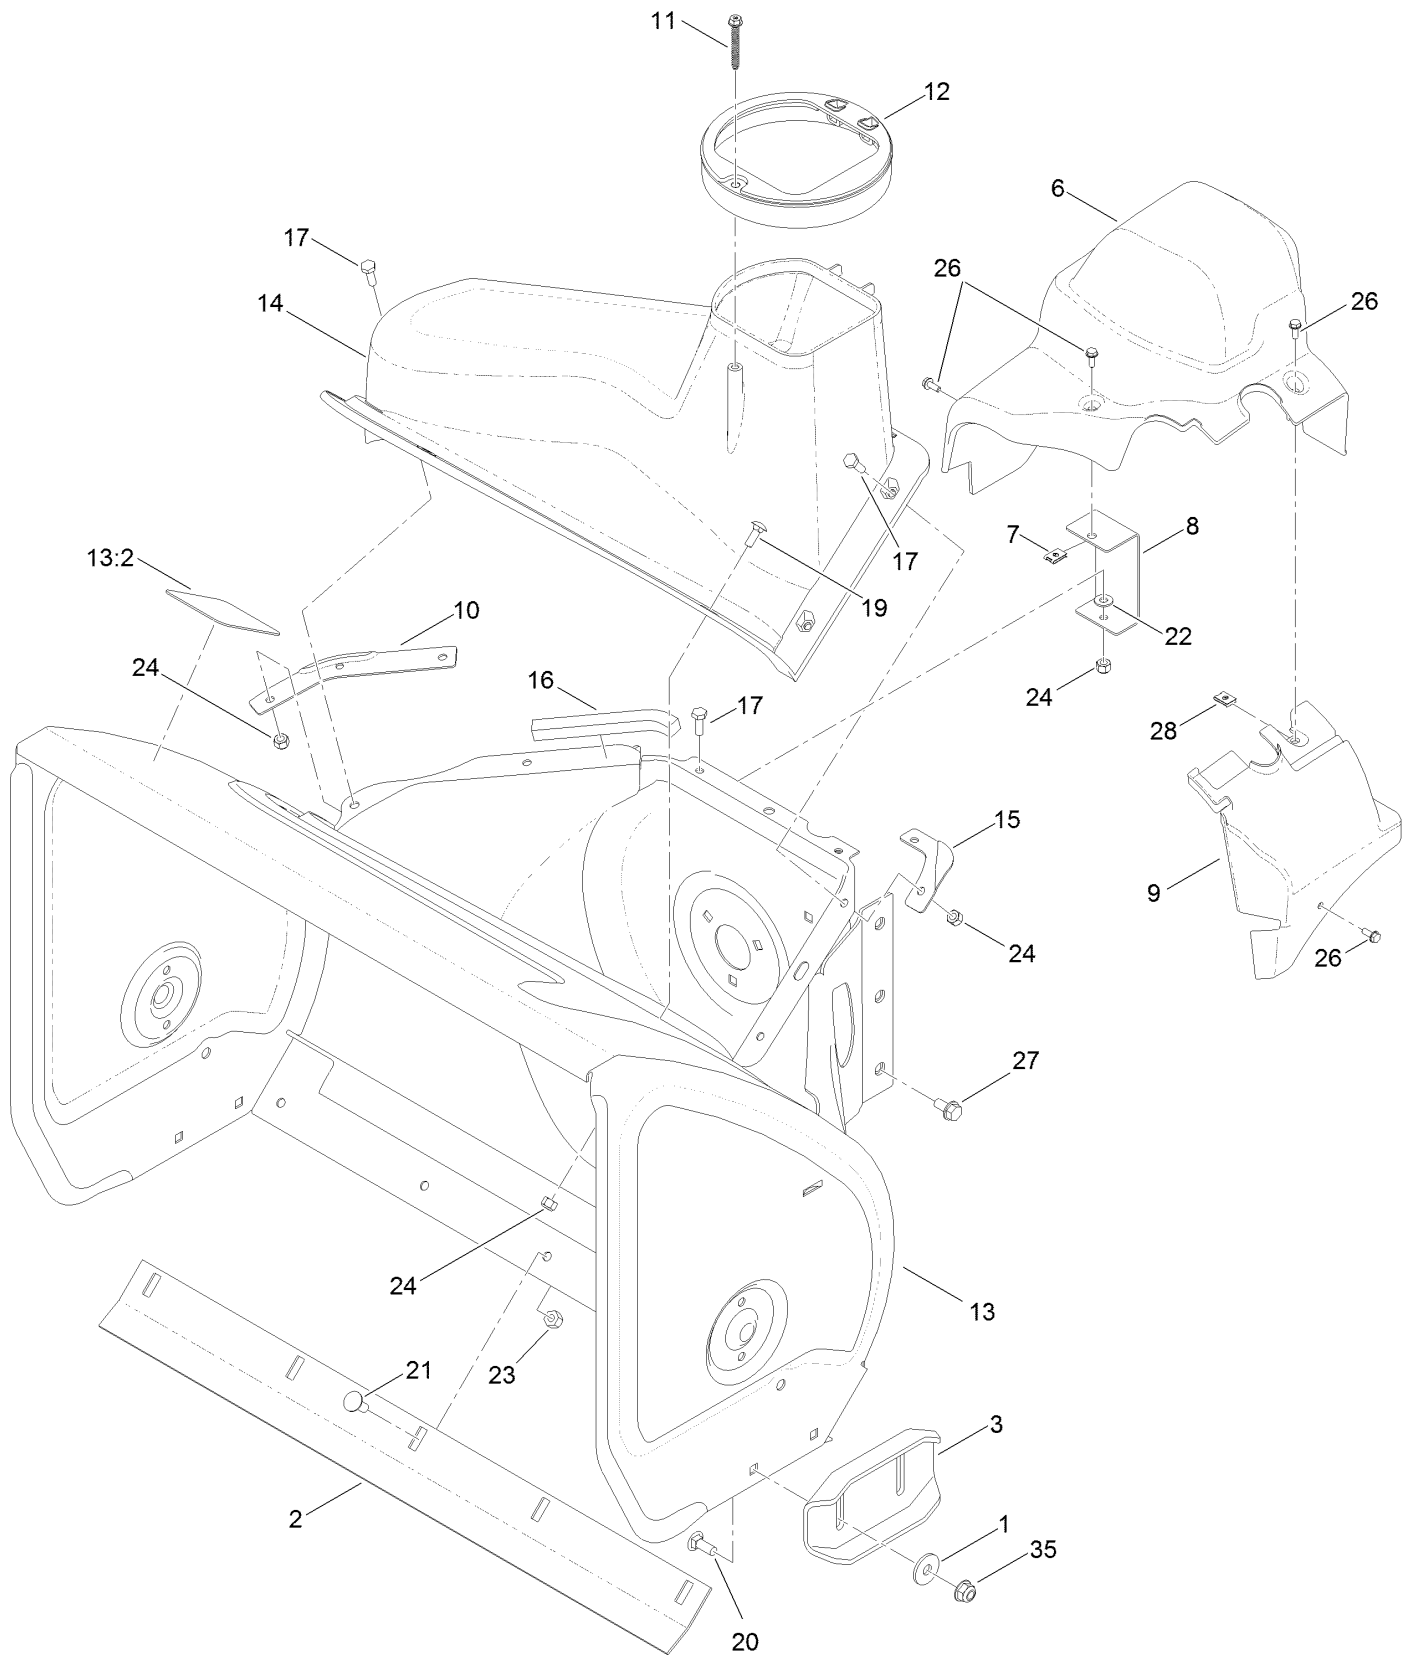

## Housing and Bypass Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 52-2861            | 4           | Washer                  | 15          | 108-0039-03        | 1           | Seal               |
| 2           | 105-9976-01        | 1           | Scraper-Fixed           | 16          | 120-0124           | 1           | Seal-Housing       |
| 3           | 106-4588-01        | 2           | Skid                    | 17          | 321-4              | 7           | Screw-HH           |
| 6           | 119-1563           | 1           | Cover-Belt              | 19          | 3229-1             | 4           | Bolt-CARR          |
| 7           | 107-1013           | 1           | Nut-Speed, U-Type       | 20          | 3230-16            | 4           | Screw-CARR         |
| 8           | 107-1014-03        | 1           | Bracket-Cover, Clip Nut | 21          | 3230-23            | 5           | Screw-CARR         |
| 9           | 107-1016           | 1           | Cover-Extension, Belt   | 22          | 3256-22            | 1           | Washer-Flat        |
| 10          | 107-1017-03        | 1           | Seal-Flange, Cover      | 23          | 3296-29            | 5           | Nut-Lock, NI       |
| 11          | 114-3751           | 1           | Screw-HWH, Plastite     | 24          | 3296-42            | 11          | Nut-Lock, NI       |
| 12          | 107-3006           | 1           | Guide-Chute             | 26          | 32144-112          | 4           | Screw-HWH          |
| 13          | 107-3822           | 1           | Housing-Auger, 26 Inch  | 27          | 32144-14           | 6           | Screw-HWHTF        |
| 13:2        | 107-3040           | 1           | Decal-Danger, Auger     | 28          | 701493             | 1           | Nut-Speed          |
| 14          | 108-0017           | 1           | Cover                   | 35          | 104-8300           | 4           | Nut-HF, NI         |
 
# Housing Assembly

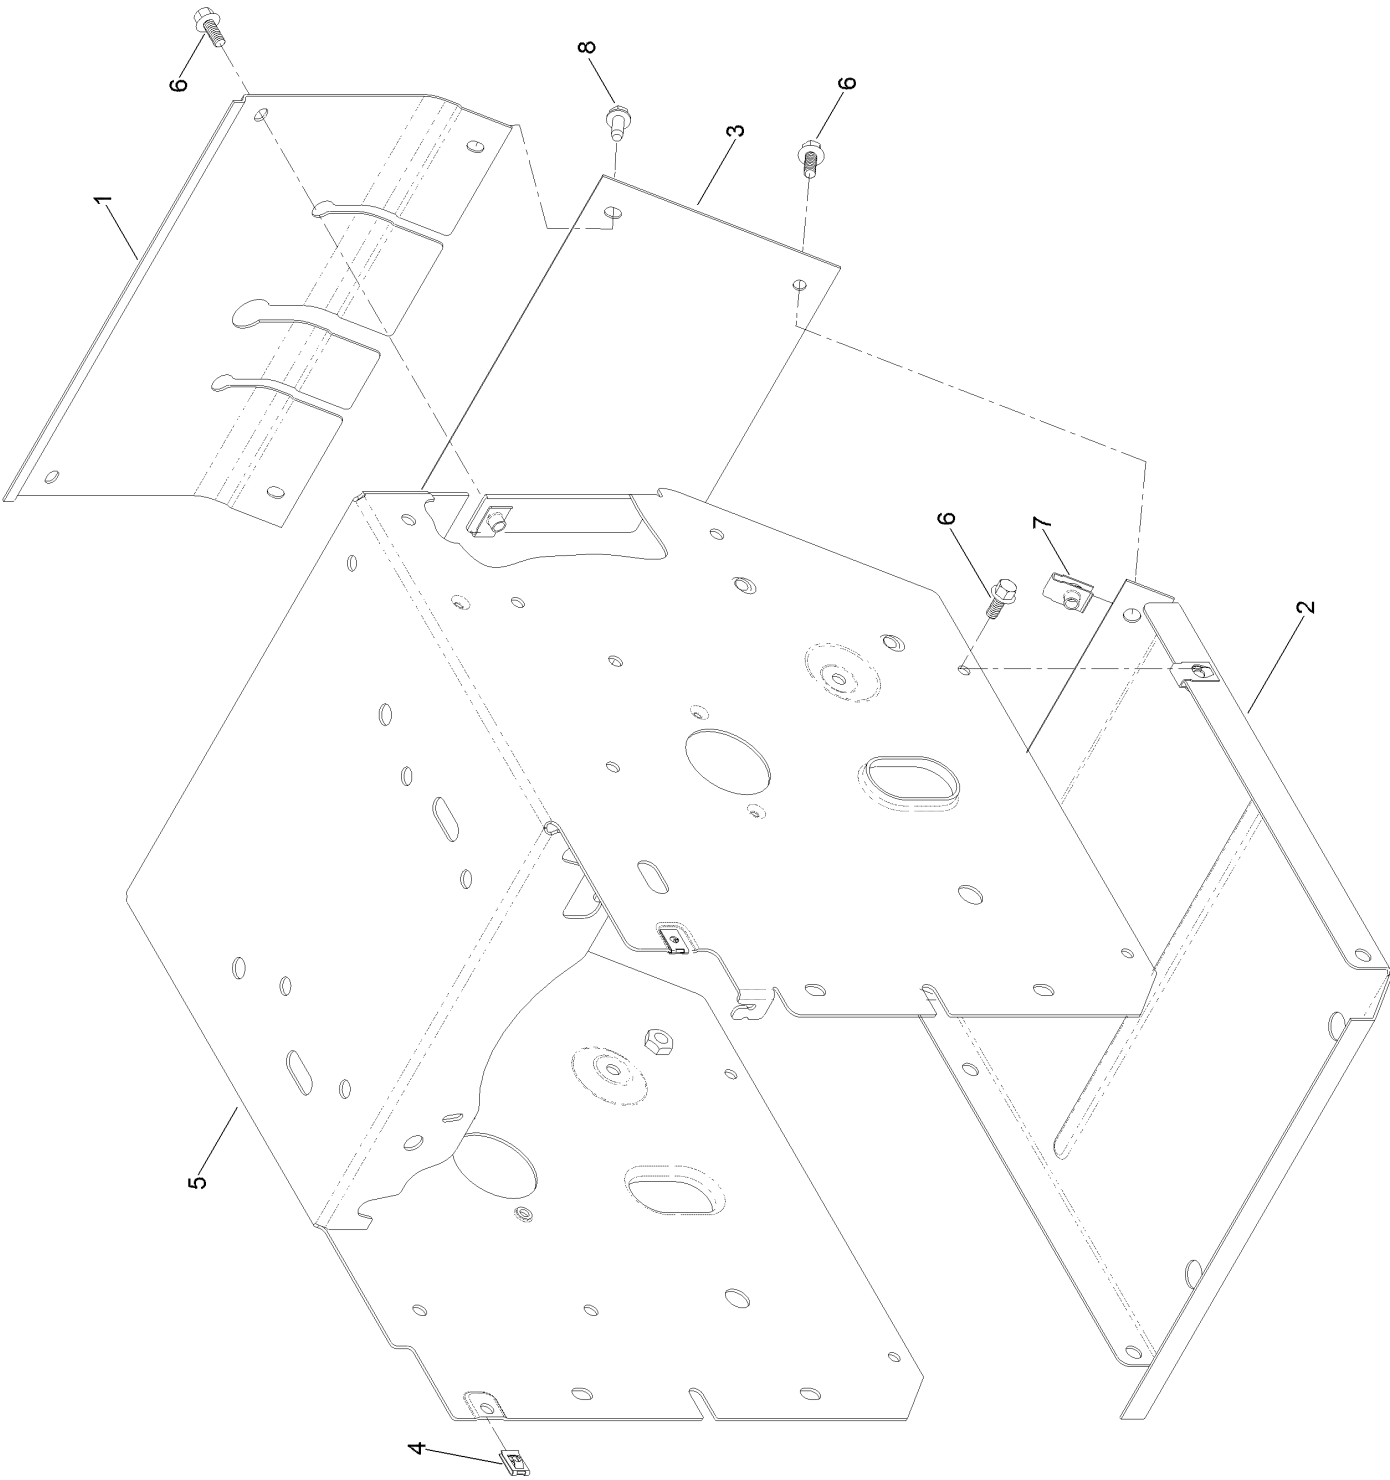


## Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 108-0022-01        | 1           | Cover-Upper        |
| 2           | 106-7330-01        | 1           | Pan-Bottom         |
| 3           | 106-7345-01        | 1           | Cover-Lower        |
| 4           | 107-1013           | 2           | Nut-Speed, U-Type  |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 120-9832-01        | 1           | Frame-Traction     |
| 6           | 99-6810            | 8           | Screw-HHF          |
| 7           | 107069             | 7           | Clip               |
| 8           | 32144-10           | 2           | Screw-HWH          |

 
# 

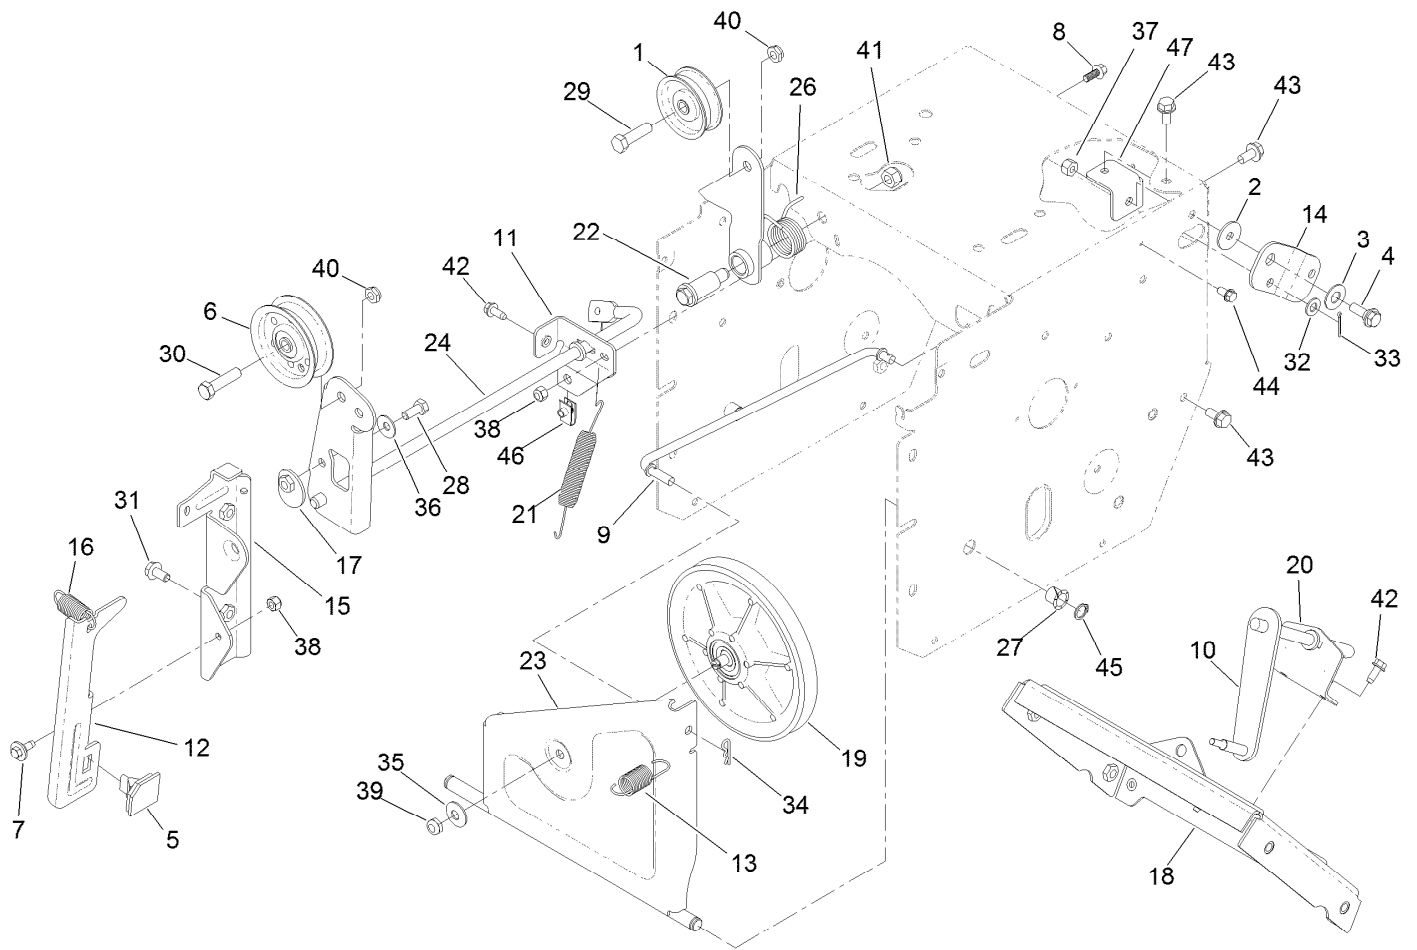

## Idler Pulley and Linkage Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 3-4244             | 1           | Pulley-Idler             | 24          | 107-3838-03        | 1           | Impeller Clutch ASM |
| 2           | 5-4460             | 1           | Washer-Pivot             | 26          | 120-3060           | 1           | Spring-Torsion      |
| 3           | 25-5640            | 1           | Washer                   | 27          | 256-257            | 2           | Bushing-Nyliner     |
| 4           | 27-0410            | 1           | Screw-Shoulder           | 28          | 322-3              | 1           | Screw-HH            |
| 5           | 66-8060            | 1           | Pad-Brake                | 29          | 323-29             | 1           | Screw-HH            |
| 6           | 92-7104            | 1           | Pulley-Idler             | 30          | 323-8              | 1           | Screw-HH            |
| 7           | 92-9698            | 1           | Screw-Shoulder           | 31          | 3234-7             | 2           | Screw-HHF           |
| 8           | 99-6810            | 1           | Screw-HHF                | 32          | 3256-23            | 1           | Washer-Plain        |
| 9           | 136-7101           | 1           | Link-Speed, Control      | 33          | 3272-4             | 1           | Pin-Cotter          |
| 10          | 136-7106           | 1           | Traction Lever ASM       | 34          | 3290-307           | 1           | Pin-Cotter          |
| 11          | 136-7181           | 1           | Bracket-Impeller, Clutch | 35          | 3290-340           | 1           | Washer-Belleville   |
| 12          | 136-7108           | 1           | Arm-Brake                | 36          | 3290-456           | 1           | Washer-Belleville   |
| 13          | 107-1003           | 1           | Spring-Extension         | 37          | 3296-29            | 1           | Nut-Lock, NI        |
| 14          | 136-7110           | 1           | Bellcrank                | 38          | 3296-42            | 2           | Nut-Lock, NI        |
| 15          | 136-7112           | 1           | Bracket-Impeller, Idler  | 39          | 3296-5             | 1           | Nut-Hex             |
| 16          | 107-1045           | 1           | Spring-Extension         | 40          | 3296-59            | 2           | Nut-Lock, NI        |
| 17          | 136-7113           | 1           | Nut Assembly             | 41          | 3296-76            | 1           | Nut-Lock, NI        |
| 18          | 108-0026-01        | 1           | Shift Plate ASM          | 42          | 32144-10           | 3           | Screw-HWH           |
| 19          | 136-7319           | 1           | Pulley-Traction ASM      | 43          | 32144-14           | 6           | Screw-HWHTF         |
| 20          | 136-7114           | 1           | Bracket-Shift, Rod       | 44          | 32144-4            | 1           | Screw-HWH           |
| 21          | 136-7115           | 1           | Spring-Extension         | 45          | 32151-61           | 2           | Ring-Retaining      |
| 22          | 136-7116           | 1           | Bolt-Shoulder            | 46          | 107069             | 1           | Clip                |
| 23          | 136-7118           | 1           | Bracket-Wheel, Friction  | 47          | 125-1124-03        | 1           | Bracket-Frame, LH   |

 
# Auger and Impeller Assembly

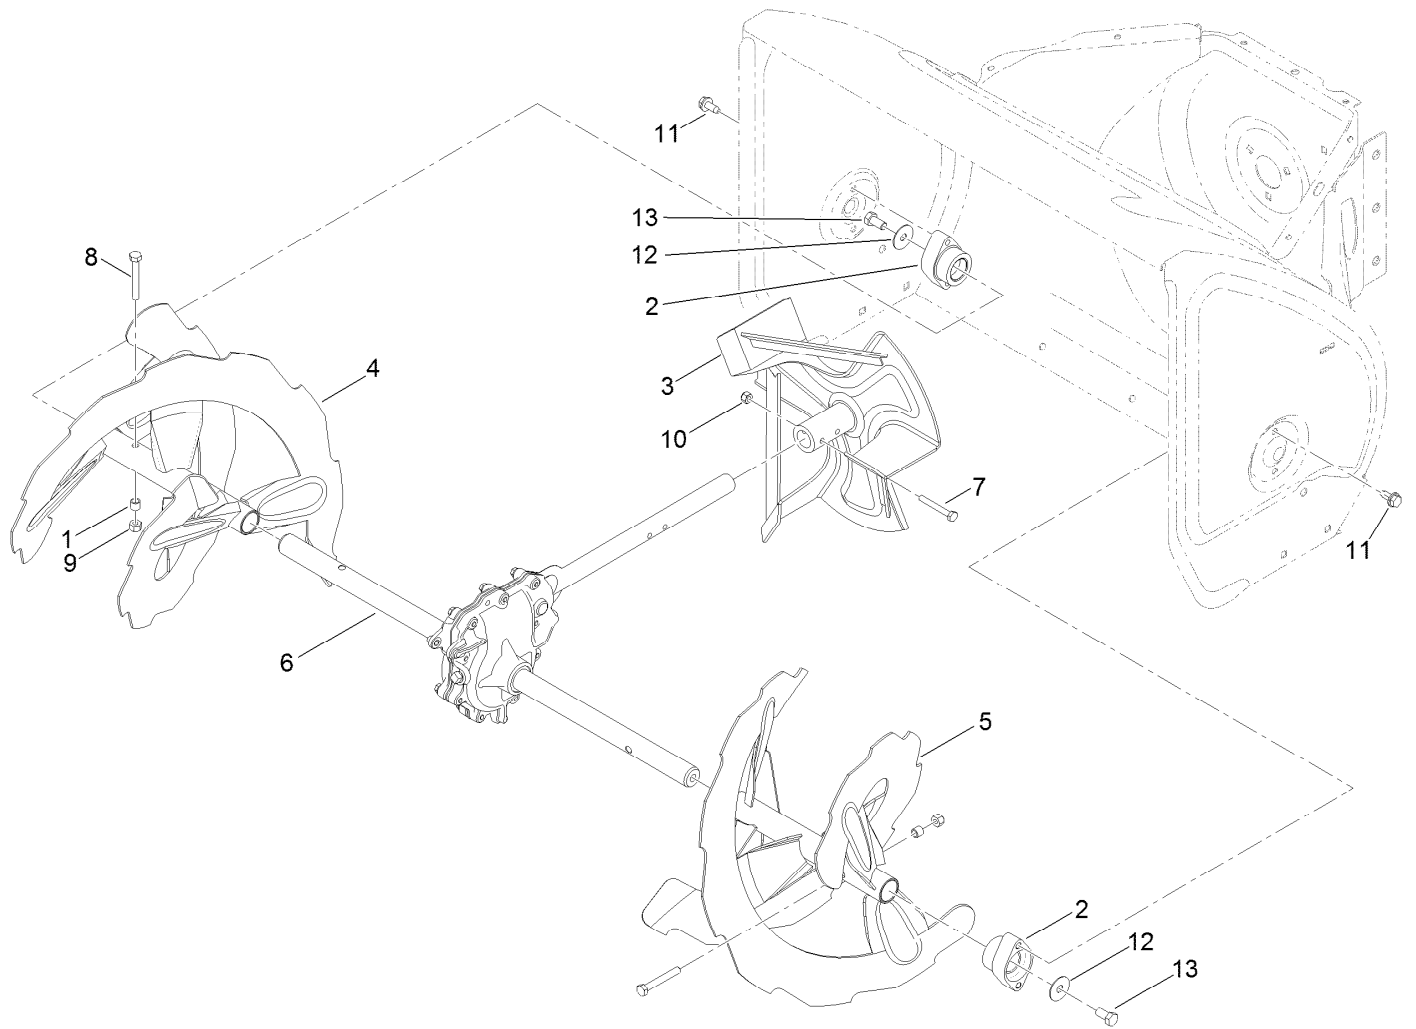

## Auger and Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 1-633545           | 2           | Spacer                        | 7           | 321-11             | 2           | Screw-HH           |
| 2           | 106-4570           | 2           | Bearing-Auger                 | 8           | 322-11             | 2           | Screw-HH           |
| 3           | 106-4576-03        | 1           | Impeller ASM                  | 9           | 3296-29            | 2           | Nut-Lock, NI       |
| 4           | 106-7289-03        | 1           | RH Auger ASM                  | 10          | 3296-42            | 2           | Nut-Lock, NI       |
| 5           | 106-7299-03        | 1           | LH Auger ASM                  | 11          | 32144-70           | 4           | Screw-HWHTF        |
| 6           | 125-7925           | 1           | 26 Inch Auger Gearcase<br>ASM | 12          | 3-0750             | 2           | Washer             |
|             |                    |             |                               | 13          | 323-4              | 2           | Screw-HH           |
 
# Gear Case Assembly No. 125-7925

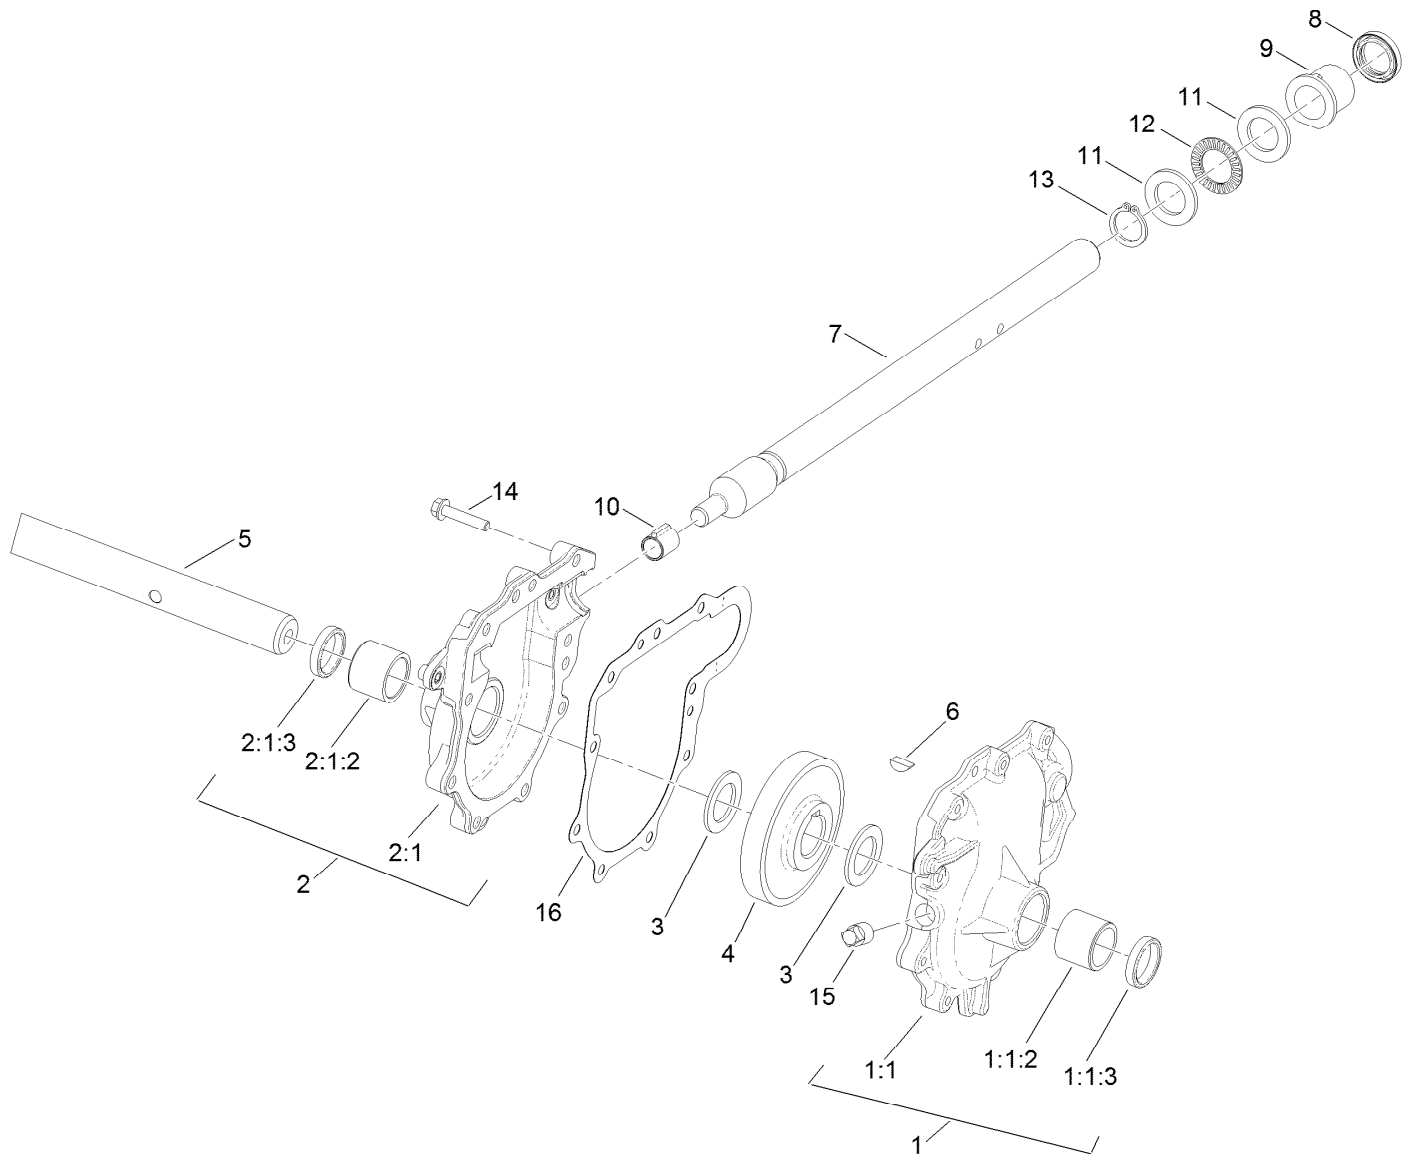


## Gear Case Assembly No. 125-7925 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 108-7325           | 1           | LH Auger Gearcase ASM | 6           | 3257-10            | 1           | Key-Woodruff           |
| 1:1         |                    | 1           | Gearcase-Auger, LH ●  | 7           | 66-7811            | 1           | Shaft-Impeller         |
| 1:1:2       | 112-6635           | 1           | Bushing-Sleeve        | 8           | 253-149            | 1           | Seal-Oil               |
| 1:1:3       | 7-0045             | 1           | Seal-Oil              | 9           | 37-6560            | 1           | Bushing-Input          |
| 2           | 108-7327           | 1           | RH Auger Gearcase ASM | 10          | 62-1150            | 1           | Bushing-Worm           |
| 2:1         |                    | 1           | Gearcase-Auger, RH ●  | 11          | 252-78             | 2           | Washer-Thrust          |
| 2:1:2       | 112-6635           | 1           | Bushing-Sleeve        | 12          | 252-76             | 1           | Bearing-Thrust         |
| 2:1:3       | 7-0045             | 1           | Seal-Oil              | 13          | 32151-33           | 1           | Ring-Retaining, Ext    |
| 3           | 252-71             | 2           | Washer-Thrust         | 14          | 108-4862           | 9           | Screw-HWHTF            |
| 4           | 62-0120            | 1           | Gear-Helical          | 15          | 121-6832           | 1           | Plug-Pipe, SQH         |
| 5           | 106-4579           | 1           | Shaft-Auger           | 16          | 108-7330           | 1           | Gasket-Gearcase, Auger |

● Not serviced separately

 
# Impeller Assembly

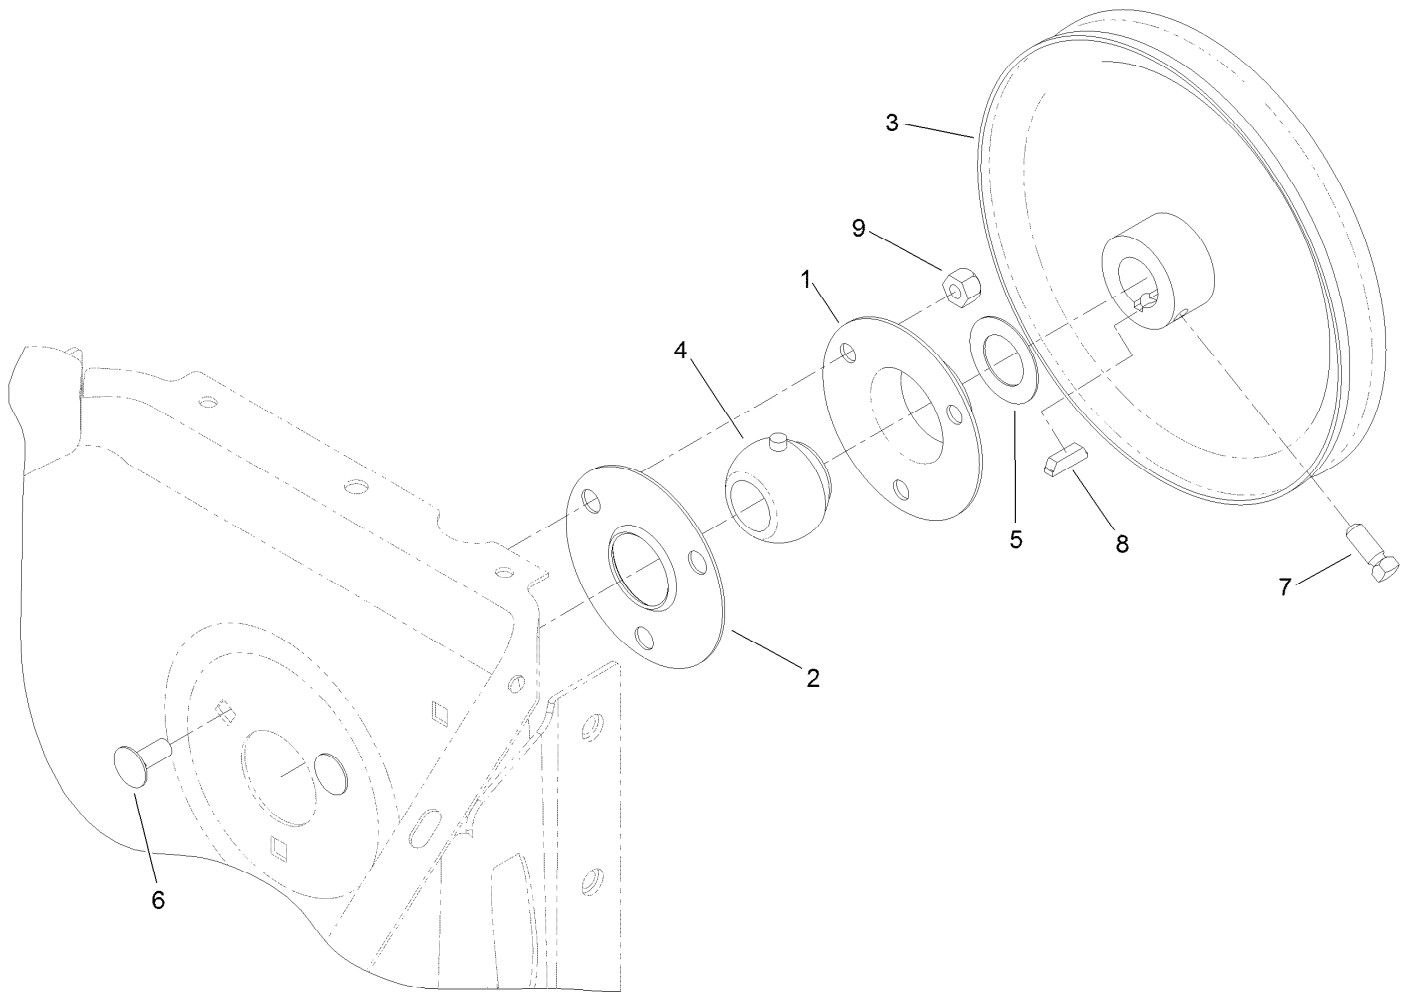

## Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 26-6110            | 1           | Flange-Cup, Bearing | 6           | 3230-23            | 3           | Screw-CARR         |
| 2           | 26-6120            | 1           | Flange-Cup, Bearing | 7           | 1-803050           | 2           | Screw-Set          |
| 3           | 136-7119           | 1           | Pulley-Impeller     | 8           | 3257-23            | 1           | Key-Woodruff       |
| 4           | 63-3450            | 1           | Bearing-Ball        | 9           | 3296-29            | 3           | Nut-Lock, NI       |
| 5           | 110-6767           | 1           | Washer-Thrust       |             |                    |             |                    |

 
# Engine Assembly

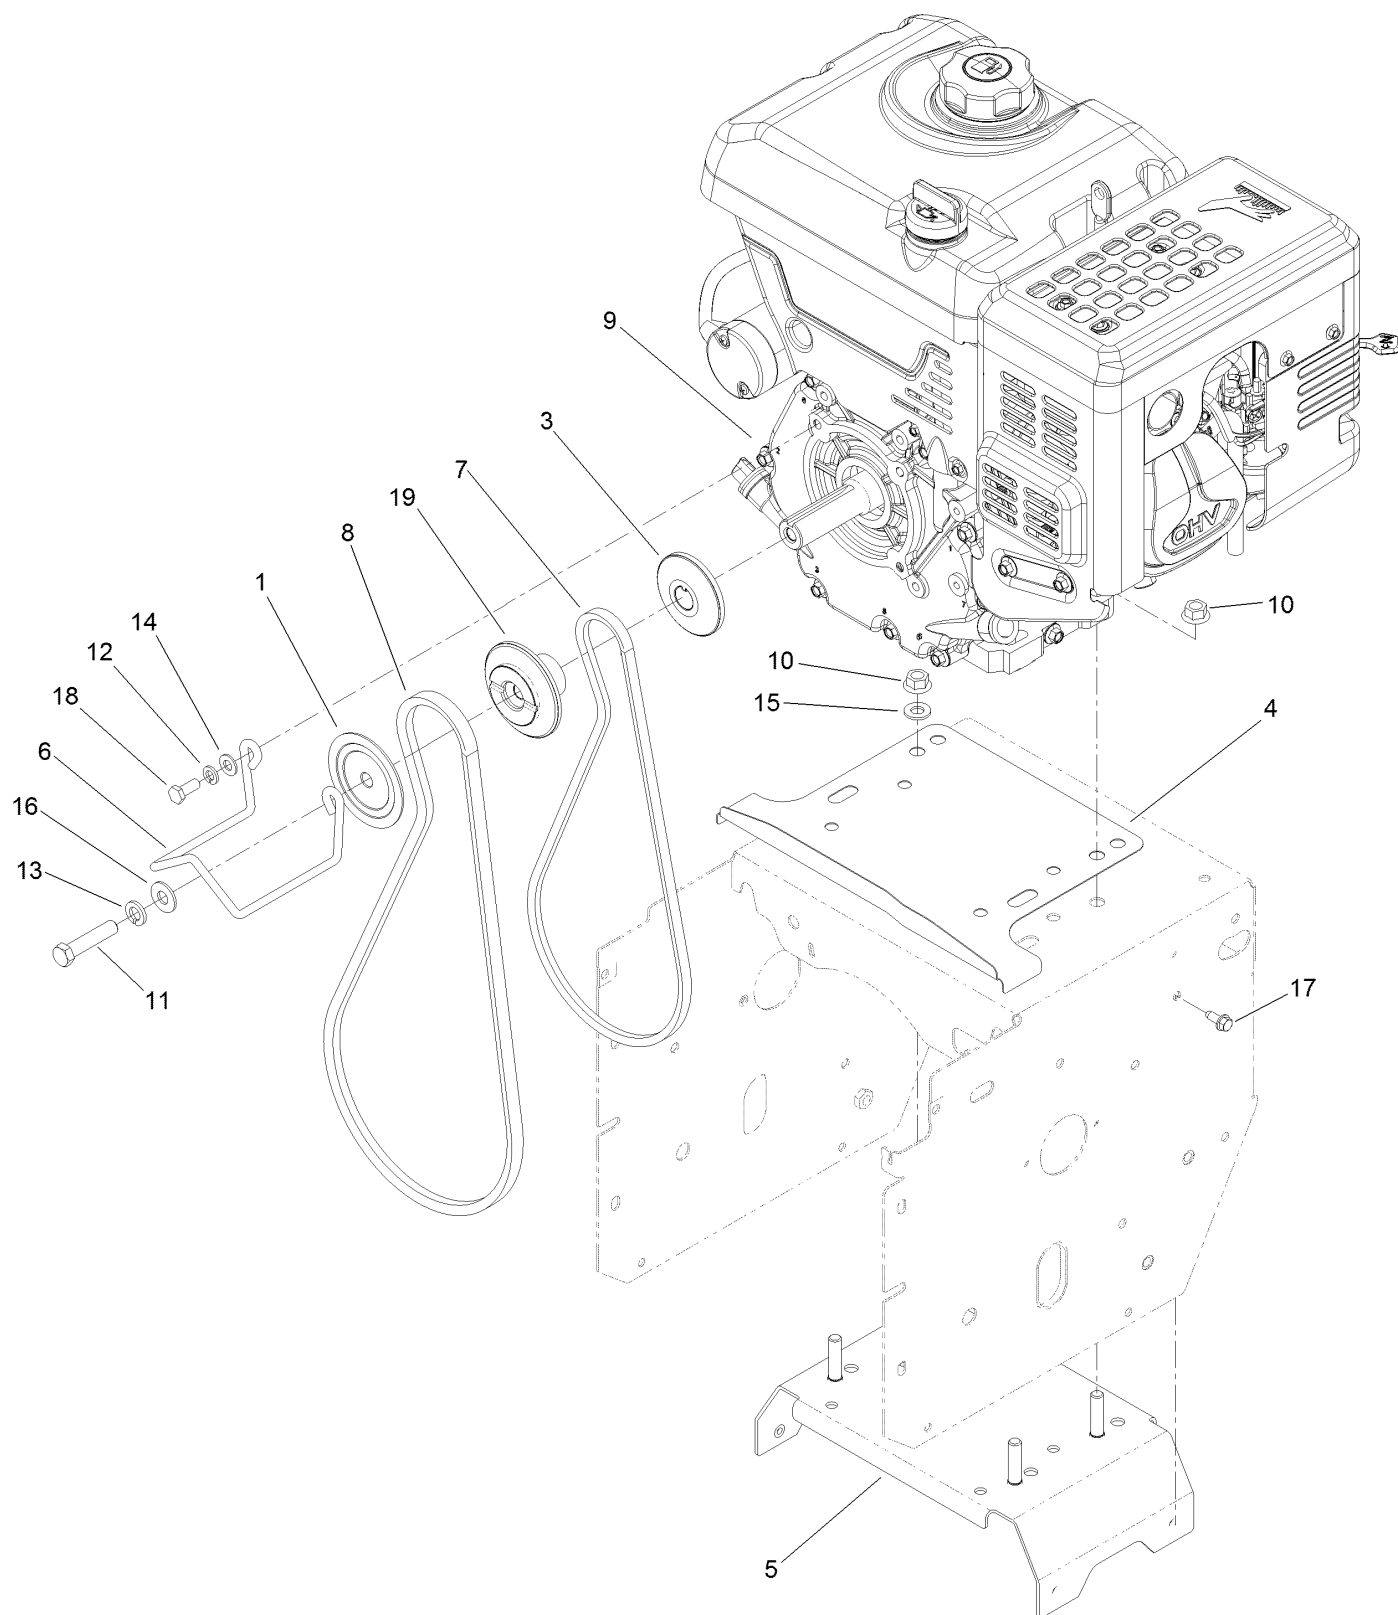

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 112-8139           | 1           | Sheave-Half, Impeller | 11          | 3211-9             | 1           | Screw-HH              |
| 3           | 112-8138           | 1           | Sheave-Half, Traction | 12          | 3253-4             | 2           | Washer-Lock           |
| 4           | 117-6022-01        | 1           | Shield-Drive          | 13          | 3253-21            | 1           | Washer-Lock           |
| 5           | 112-8128           | 1           | Frame Brace ASM       | 14          | 3256-23            | 2           | Washer-Plain          |
| 6           | 136-7317           | 1           | Guide-Belt            | 15          | 3256-2             | 1           | Washer-Flat           |
| 7           | 94-8812            | 1           | V Belt-Traction       | 16          | 3256-4             | 1           | Washer-Flat           |
| 8           | 106-4498           | 1           | Belt-V                | 17          | 32144-10           | 4           | Screw-HWH             |
| 9           | 136-7756           | 1           | Engine-G250Fds-1      | 18          | 33114-020          | 2           | Screw-HH              |
| 10          | 32128-20           | 4           | Nut-HF                | 19          | 112-8117           | 1           | Pulley-Engine, Center |
 
# Fuel System and Carburetor Assembly

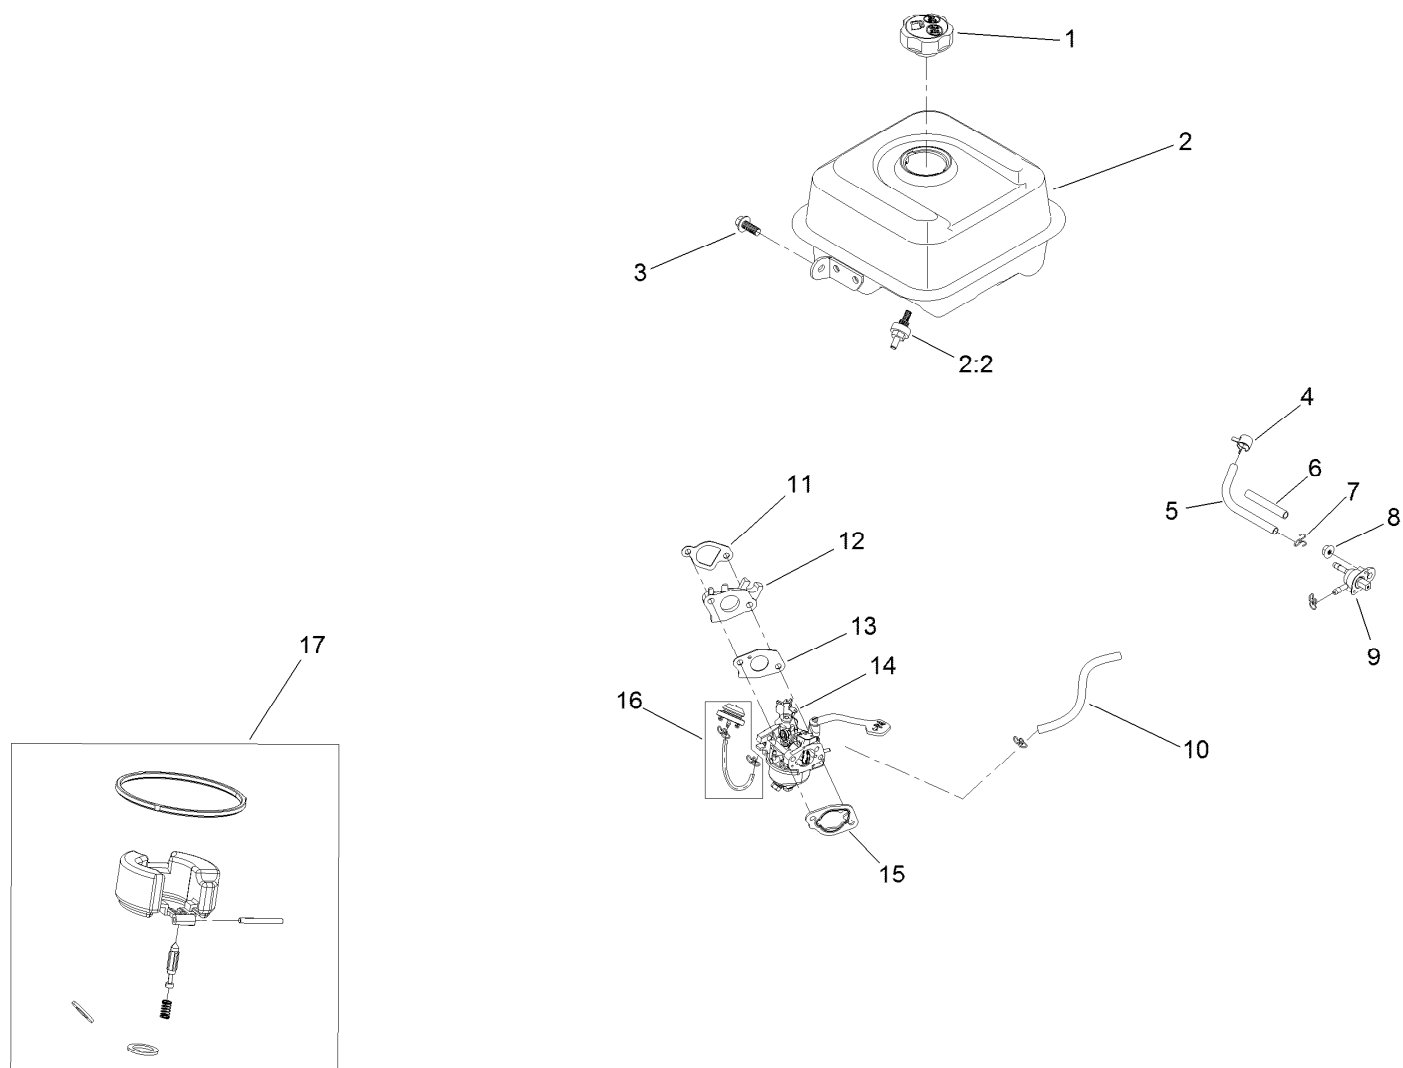


## Fuel System and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 10          | 127-9489           | 1           | Hose-Fuel                 |
| 2           | 133-1553           | 1           | Fuel Tank And Filter ASM | 11          | 133-1531           | 1           | Gasket-Carburetor         |
| 2:2         | 127-9065           | 1           | Filter-Fuel              | 12          | 133-1532           | 1           | Insulator-Carburetor      |
| 3           | 121-0294           | 1           | Screw-HHF                | 13          | 133-1533           | 1           | Gasket-Carburetor         |
| 4           | 127-9120           | 1           | Clamp-Hose               | 14          | 133-1534           | 1           | Carburetor ASM            |
| 5           | 133-1556           | 1           | Hose-Fuel                | 15          | 121-0080           | 1           | Gasket-Carburetor         |
| 6           | 133-9997           | 1           | Sleeve-Abrasion          | 16          | 127-9079           | 1           | Primer Kit                |
| 7           | 121-0087           | 3           | Clamp-Hose               | 17          | 127-9395           | 1           | Internal Carb Service Kit |
| 8           | 120-4236           | 1           | Nut-Flange               | 99          | 133-9937           | 1           | High Altitude Kit ●       |
| 9           | 127-9117           | 1           | Valve-Fuel               |             |                    |             |                           |

● Not illustrated
 
# Intake and Exhaust Assembly

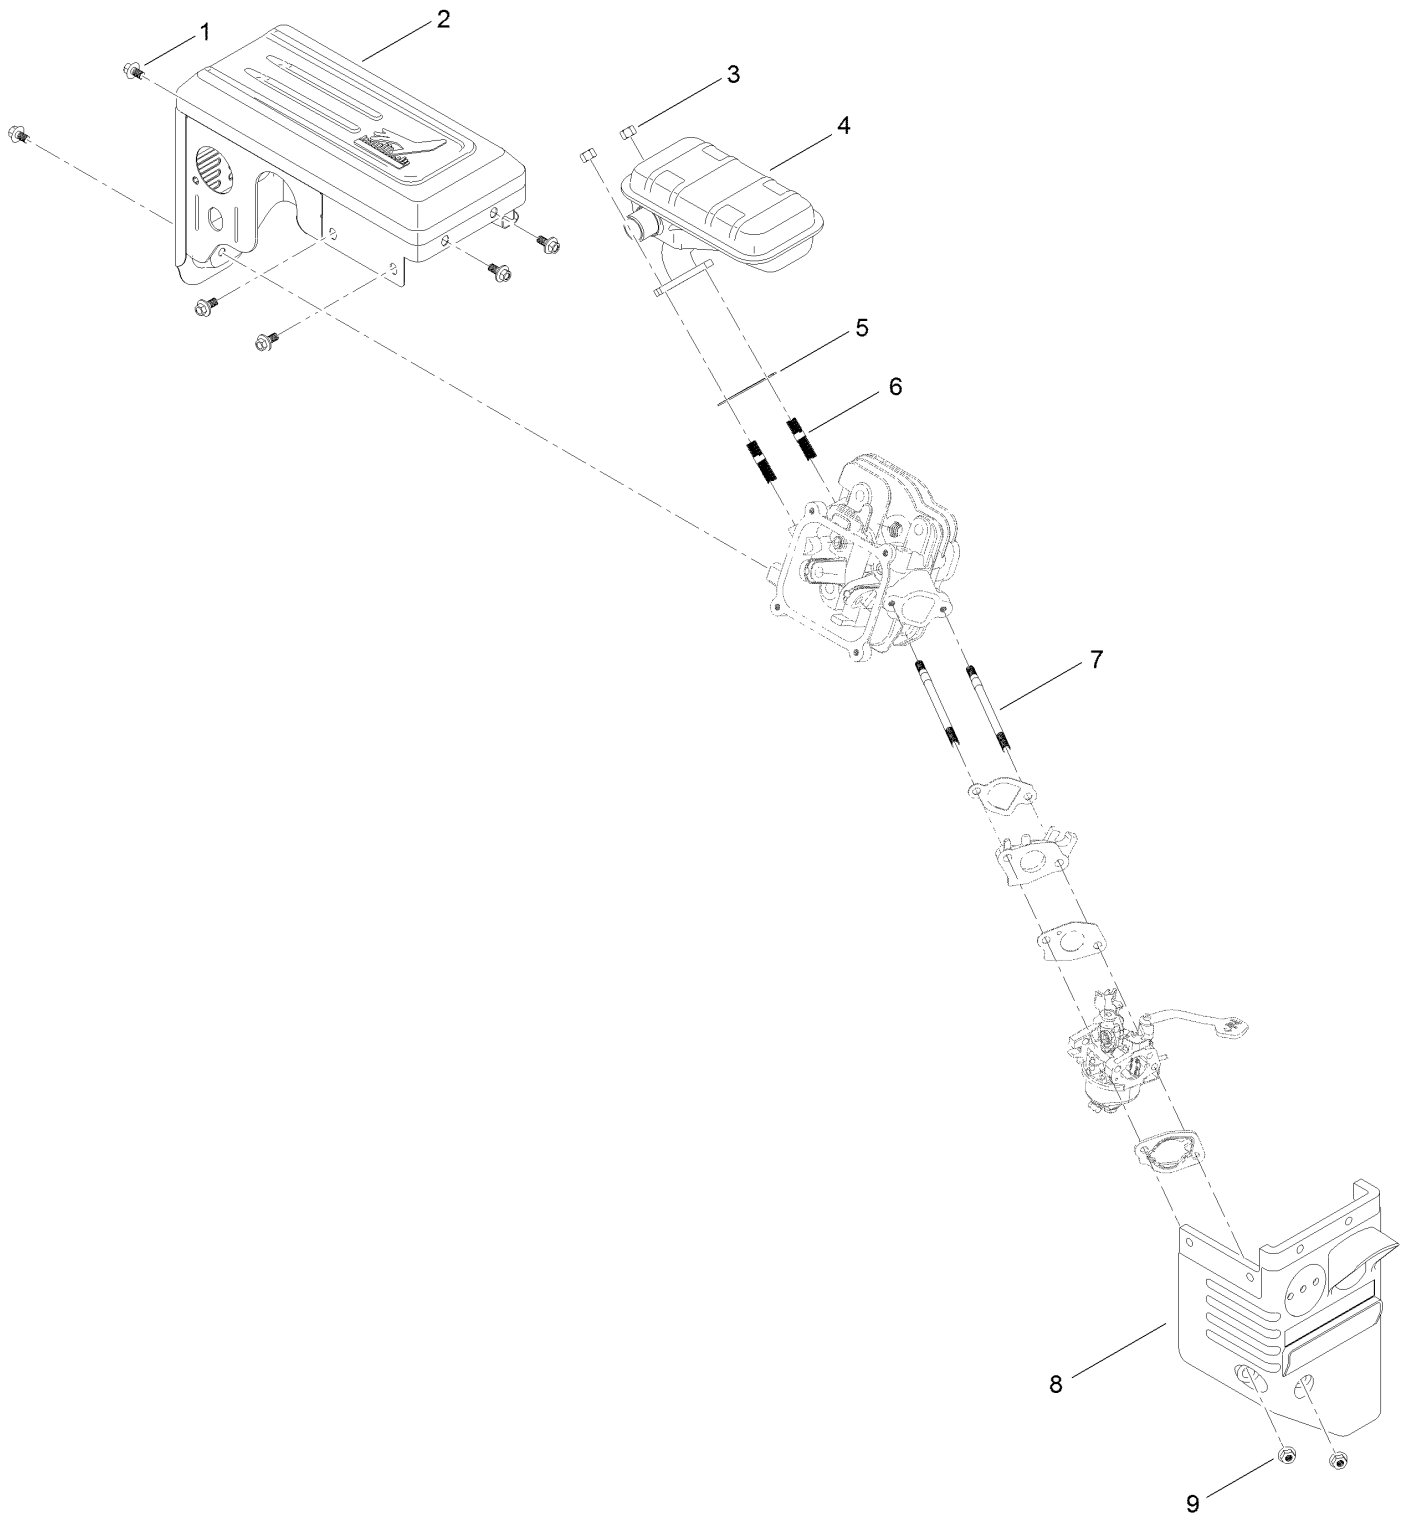


## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0294           | 6           | Screw-HHF          |
| 2           | 127-9491           | 1           | Muffler Cover ASM  |
| 3           | 121-0199           | 2           | Nut-HH             |
| 4           | 127-9490           | 1           | Muffler ASM        |
| 5           | 133-1539           | 1           | Gasket-Exhaust     |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 121-0464           | 2           | Stud-Exhaust       |
| 7           | 121-4112           | 2           | Stud-Intake        |
| 8           | 127-9112           | 1           | Box-Heater         |
| 9           | 121-0308           | 2           | Nut-Flange         |

 
# Ignition and Electrical Assembly

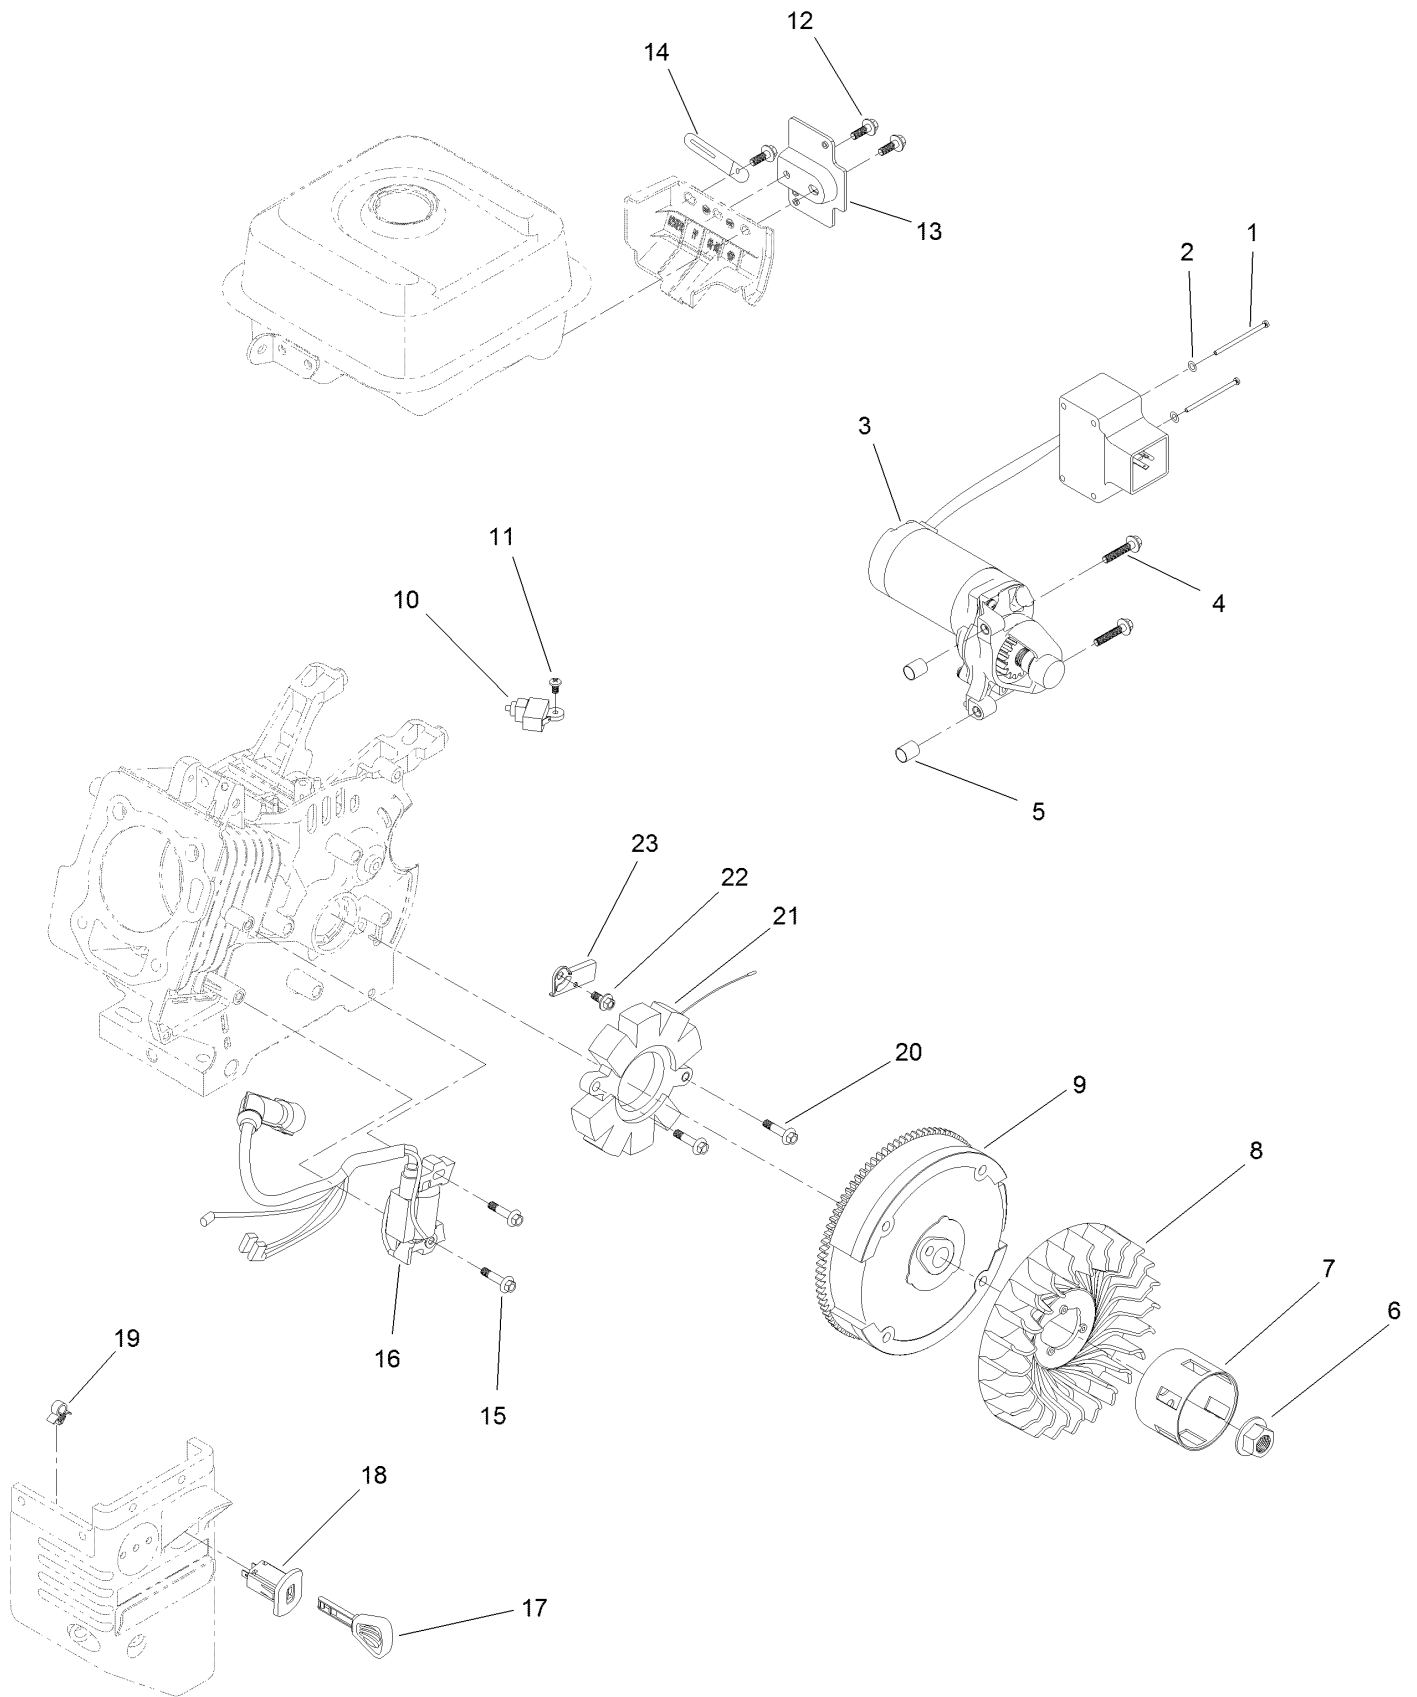

## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 121-0306           | 2           | Screw-Bhp           | 13          | 133-1554           | 1           | Bracket-Switchbox, Starter |
| 2           | 121-0312           | 2           | Washer-Plain        | 14          | 121-0017           | 1           | Clip-Harness, Wire         |
| 3           | 133-9998           | 1           | Motor-Starter       | 15          | 121-0097           | 2           | Screw-HHF                  |
| 4           | 133-1546           | 2           | Screw-Flange        | 16          | 133-9996           | 1           | Ignition Coil ASM          |
| 5           | 121-0055           | 2           | Pin-Dowel           | 17          | 117-7728           | 1           | Key                        |
| 6           | 121-0047           | 1           | Nut-Flange          | 18          | 121-0283           | 1           | Switch-Key                 |
| 7           | 133-1527           | 1           | Cup-Starter         | 19          | 121-0326           | 1           | Clip                       |
| 8           | 133-1526           | 1           | Fan-Cooling         | 20          | 121-0196           | 2           | Screw-HHF                  |
| 9           | 127-9484           | 1           | Flywheel ASM        | 21          | 127-9485           | 1           | Alternator                 |
| 10          | 121-0284           | 1           | Switch-Kill, Engine | 22          | 121-0116           | 1           | Screw-HHF                  |
| 11          | 120-4461           | 1           | Screw-PPH           | 23          | 127-9486           | 1           | Clamp-Wire, Charge         |
| 12          | 127-9123           | 3           | Screw-HHF           |             |                    |             |                            |

 
# Crankcase Assembly

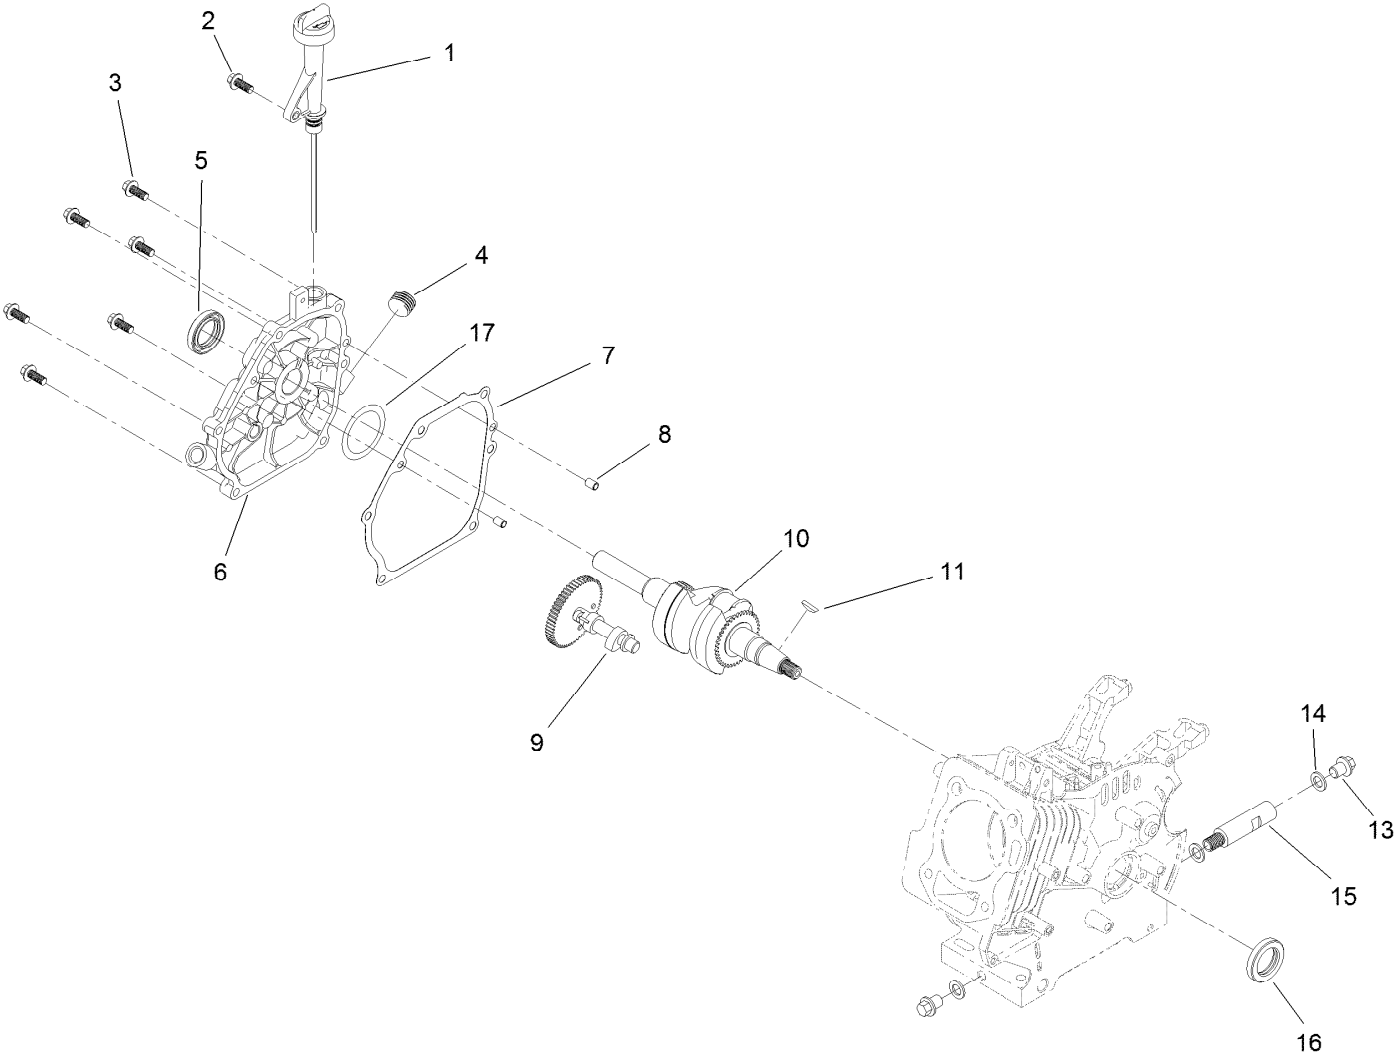

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 133-9866           | 1           | Oil Fill Assembly       | 9           | 133-9991           | 1           | Camshaft ASM       |
| 2           | 127-9123           | 1           | Screw-HHF               | 10          | 127-9495           | 1           | Crankshaft         |
| 3           | 121-4114           | 6           | Screw-HHF               | 11          | 120-4320           | 1           | Key-Woodruff       |
| 4           | 133-9805           | 1           | Plug-Drain              | 13          | 121-0030           | 2           | Screw-HHF          |
| 5           | 133-1516           | 1           | Seal-Oil                | 14          | 121-0048           | 3           | Washer-Plain       |
| 6           | 133-9865           | 1           | Cover-Crankcase         | 15          | 127-9104           | 1           | Tube-Drain, Oil    |
| 7           | 127-9493           | 1           | Gasket-Cover, Crankcase | 16          | 133-9864           | 1           | Seal-Oil           |
| 8           | 121-0054           | 2           | Pin-Dowel               | 17          | 133-9863           | 1           | Washer-Thrust      |

 
# Governor Assembly

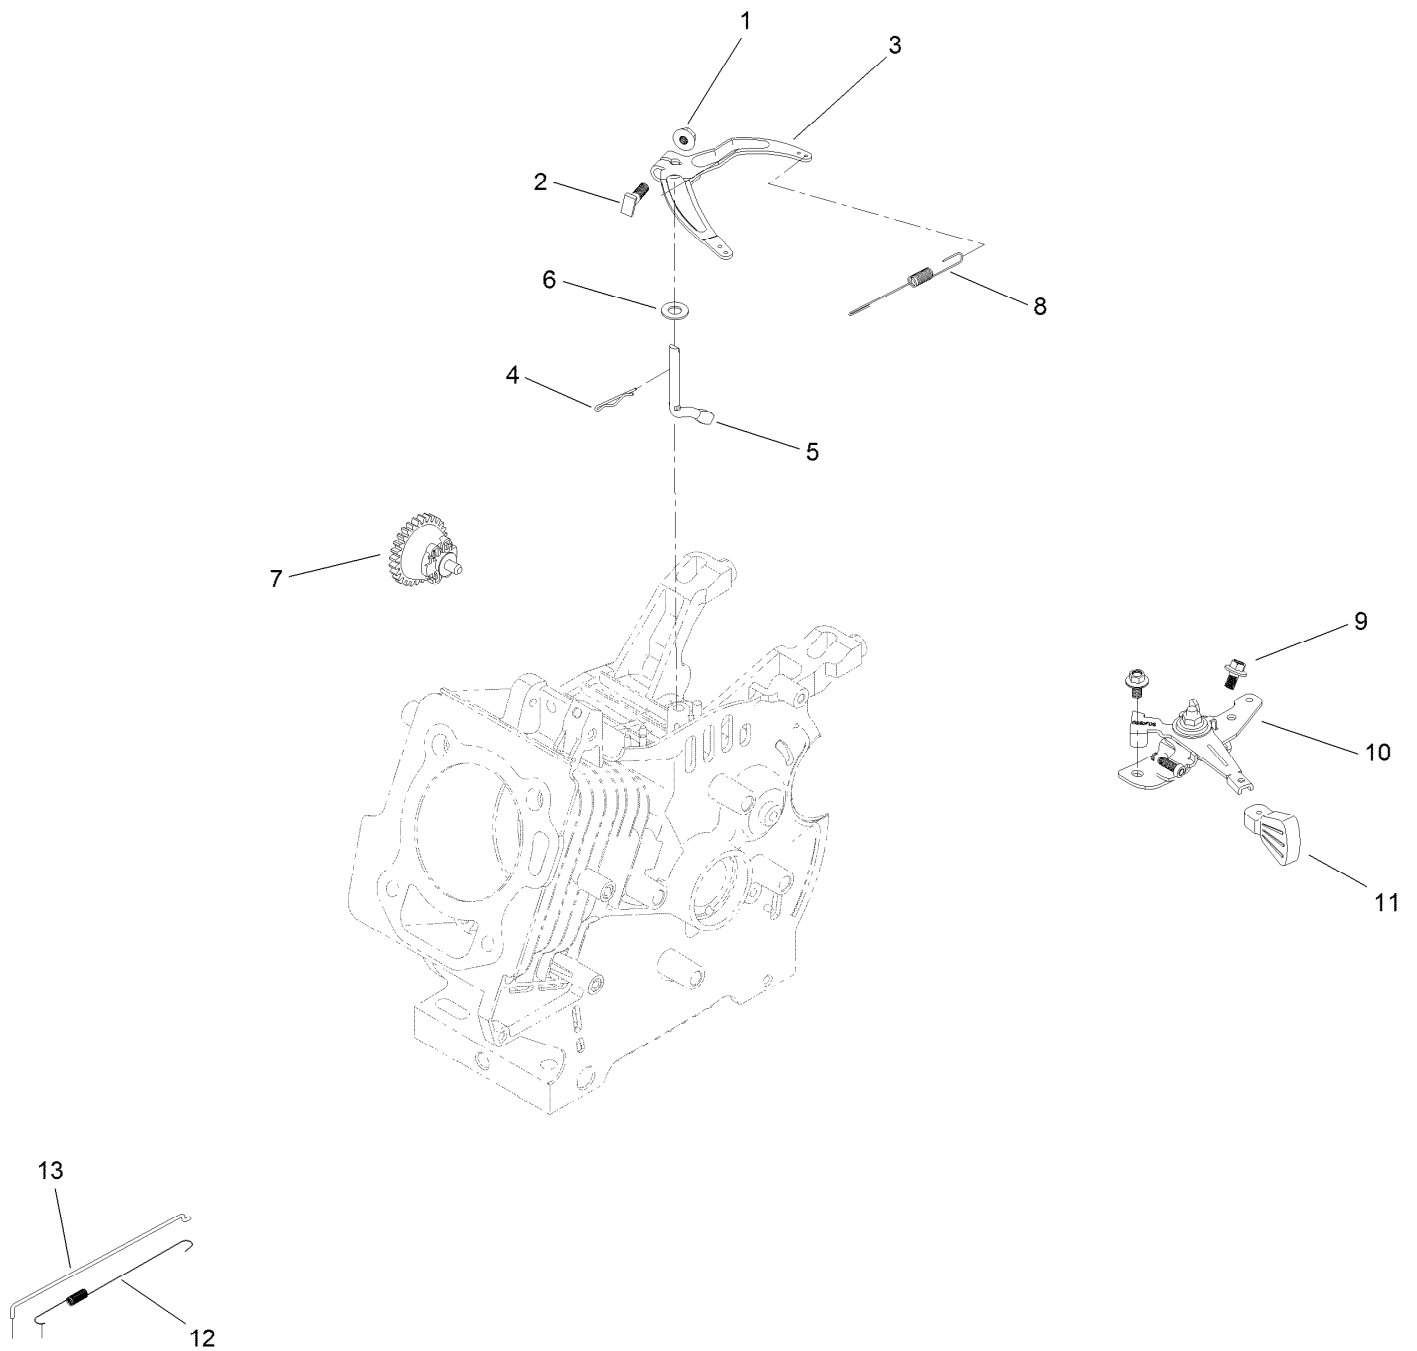

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4236           | 1           | Nut-Flange         | 8           | 127-9483           | 1           | Spring-Governor         |
| 2           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 121-0116           | 2           | Screw-HHF               |
| 3           | 127-9482           | 1           | Arm-Governor       | 10          | 133-1555           | 1           | Throttle Control ASM    |
| 4           | 120-4256           | 1           | Pin-Hair           | 11          | 121-0269           | 1           | Knob-Control, Throttle  |
| 5           | 133-9995           | 1           | Shaft-Governor     | 12          | 133-1536           | 1           | Spring-Return, Throttle |
| 6           | 121-0498           | 1           | Washer-Plain       | 13          | 133-1535           | 1           | Rod-Governor            |
| 7           | 133-9994           | 1           | Governor Gear ASM  |             |                    |             |                         |

 
# Piston and Head Assembly

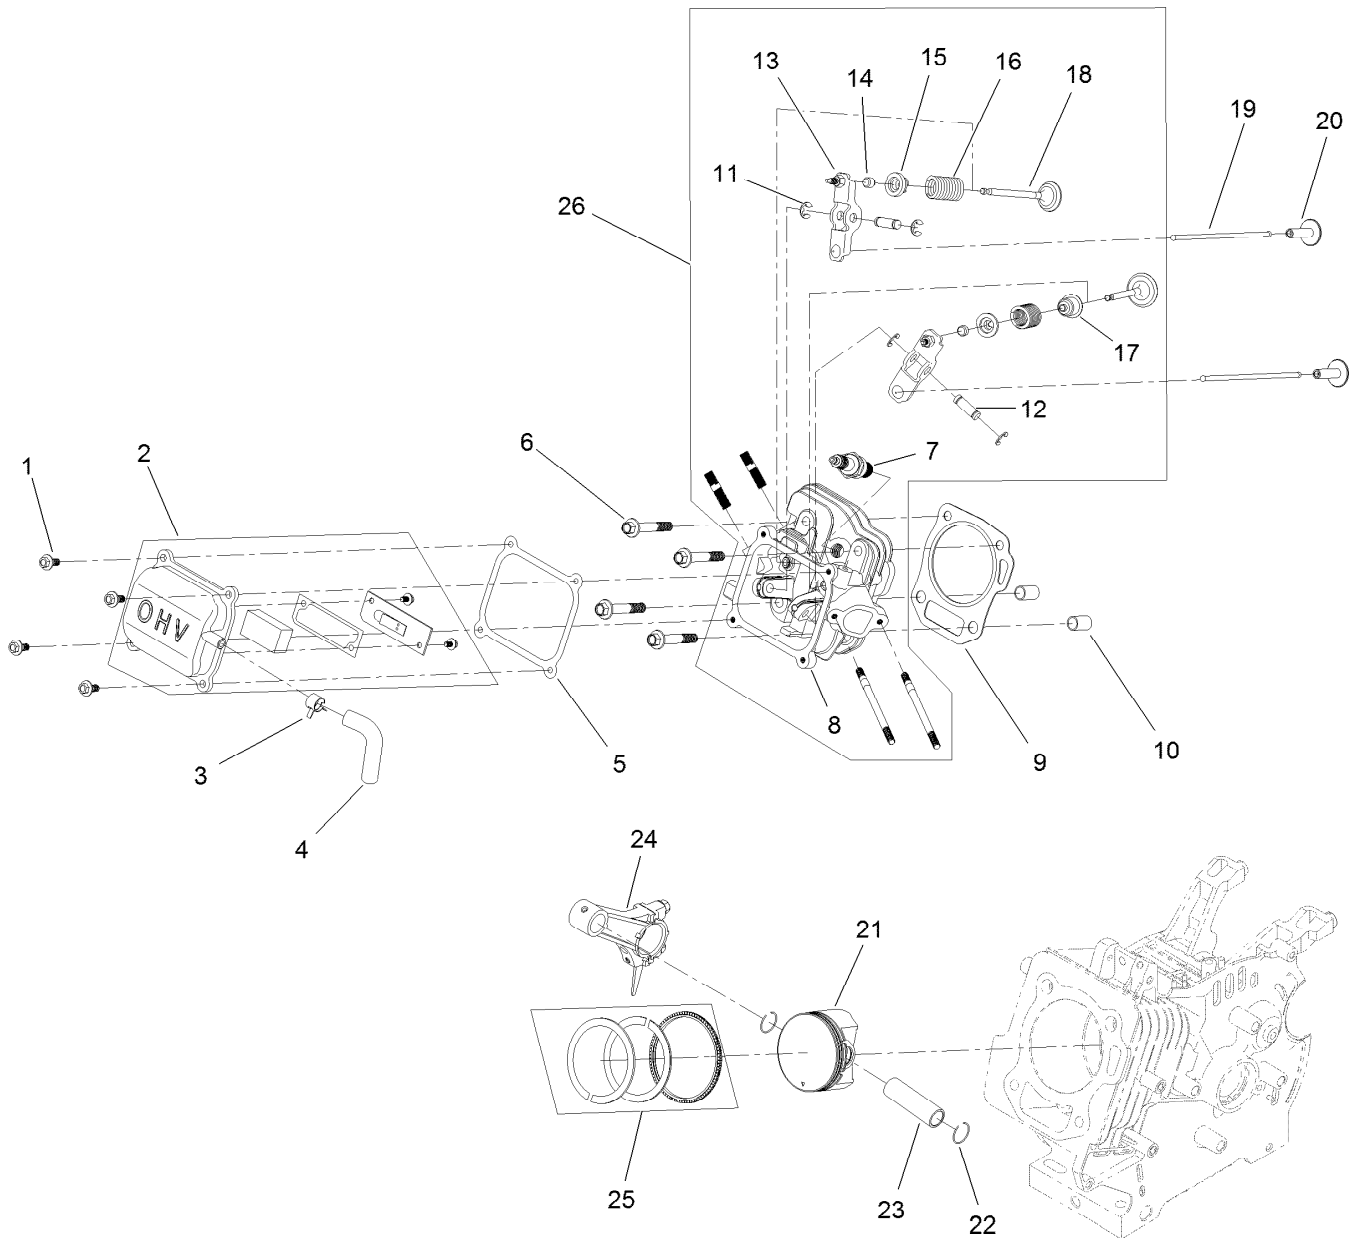

## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|------------------------|
| 1           | 120-4454           | 4           | Screw-HHF           | 14          | 121-4116           | 2           | Rotator-Valve          |
| 2           | 133-1500           | 1           | Valve Cover ASM     | 15          | 121-4117           | 2           | Retainer-Spring, Valve |
| 3           | 133-1558           | 1           | Clamp-Hose          | 16          | 127-9014           | 2           | Spring-Valve           |
| 4           | 133-9990           | 1           | Tube-Breather       | 17          | 121-4202           | 1           | Seal-Stem, Valve       |
| 5           | 133-1507           | 1           | Gasket-Cover, Valve | 18          | 133-1515           | 1           | Set-Valve              |
| 6           | 133-1508           | 4           | Screw-Flange        | 19          | 133-1514           | 2           | Rod-Push               |
| 7           | 81-3250            | 1           | Spark Plug          | 20          | 127-9015           | 2           | Tappet-Valve           |
| 8           | 133-1509           | 1           | Head-Cylinder       | 21          | 133-1522           | 1           | Piston                 |
| 9           | 133-1510           | 1           | Gasket-Head         | 22          | 121-0313           | 2           | Clip-Pin, Piston       |
| 10          | 120-4200           | 2           | Pin-Dowel           | 23          | 121-4128           | 1           | Pin-Piston             |
| 11          | 133-1511           | 4           | E-Clip              | 24          | 121-4123           | 1           | Connecting Rod ASM     |
| 12          | 133-1512           | 2           | Pin-Arm, Rocker     | 25          | 133-1521           | 1           | Set-Ring, Piston       |
| 13          | 133-1513           | 2           | Rocker Arm ASM      | 26          | 133-9867           | 1           | Complete Head ASM      |

 
# Blower Housing and Shrouds Assembly

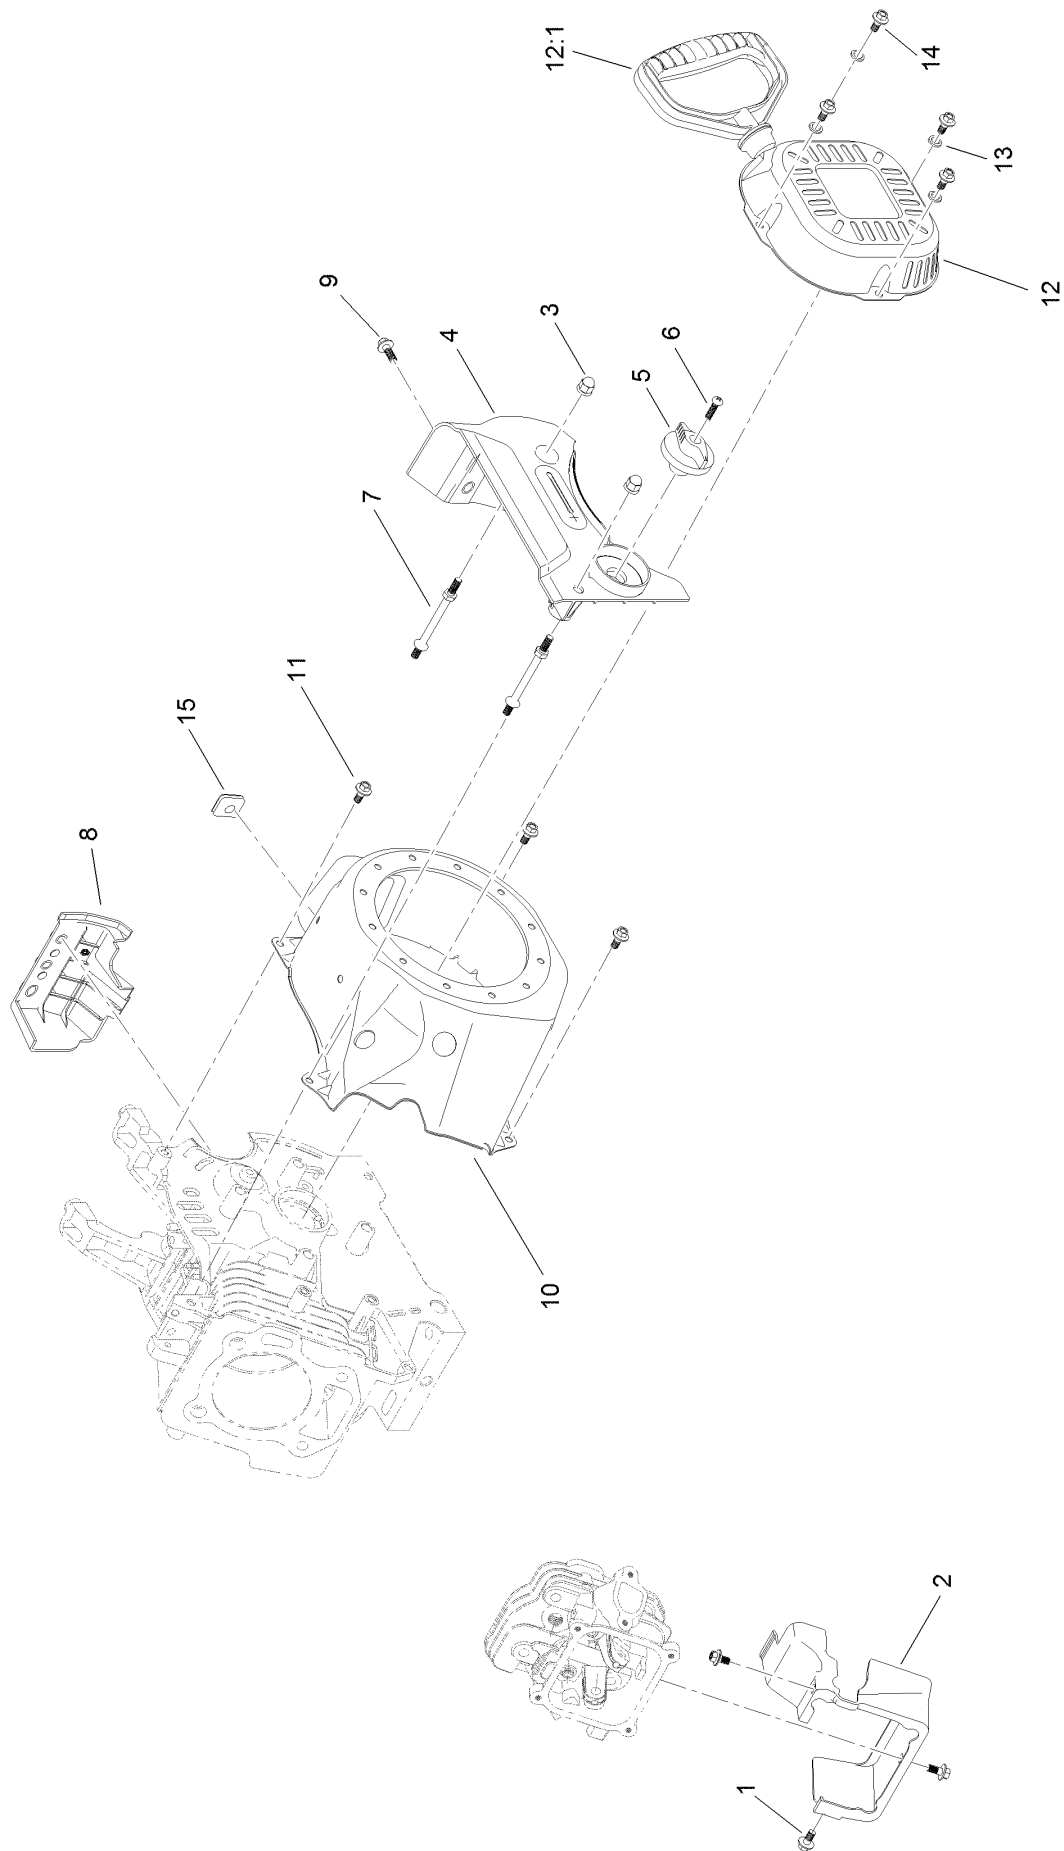

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0116           | 3           | Screw-HHF            | 9           | 127-9123           | 1           | Screw-HHF          |
| 2           | 133-1530           | 1           | Shroud-Head          | 10          | 133-1528           | 1           | Shroud-Flywheel    |
| 3           | 127-9383           | 2           | Nut-Acorn            | 11          | 121-0294           | 3           | Screw-HHF          |
| 4           | 133-1557           | 1           | Panel-Control, Front | 12          | 127-9487           | 1           | Recoil ASM         |
| 5           | 121-0268           | 1           | Knob-Valve, Fuel     | 12:1        | 121-0287           | 1           | Handle-Recoil      |
| 6           | 121-0305           | 1           | Screw-Bhp            | 13          | 127-9380           | 4           | Washer-Plain       |
| 7           | 127-9110           | 2           | Stud-Mount           | 14          | 127-9031           | 4           | Screw-HHF          |
| 8           | 133-1543           | 1           | Panel-Side, Engine   | 15          | 133-1548           | 1           | Grommet-Rubber     |

 
# Engine Decal Assembly

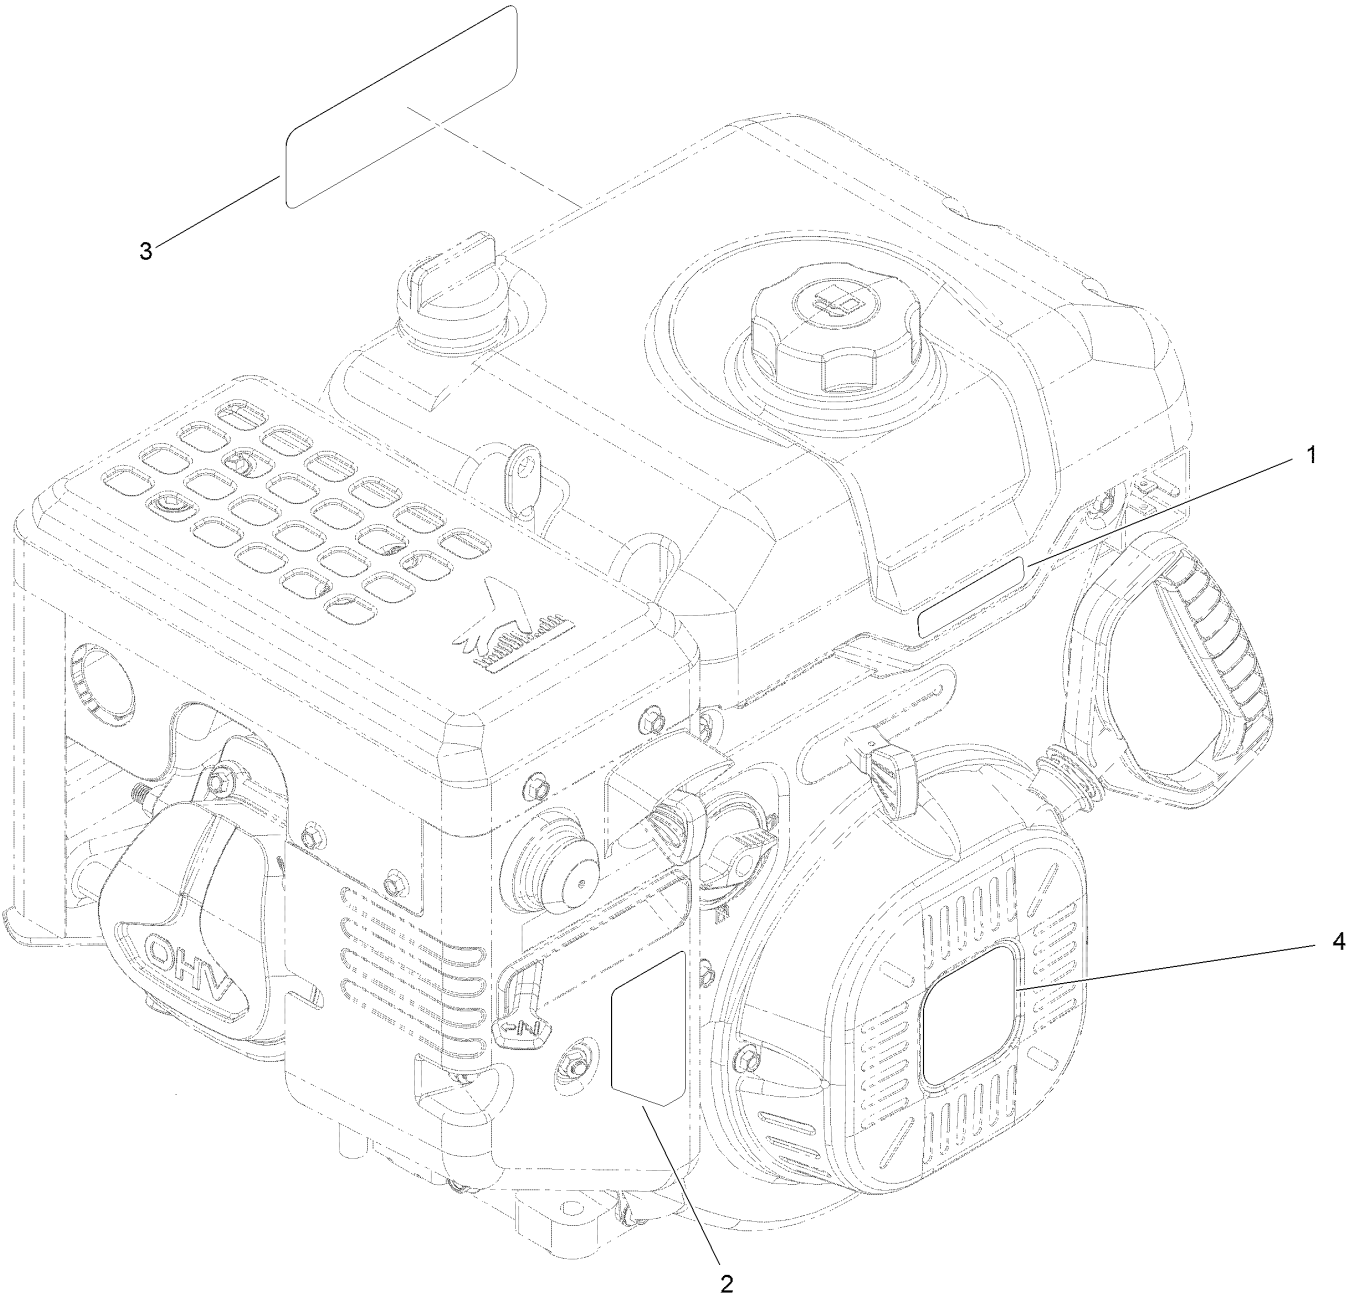

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 131-6487           | 1           | Decal-Throttle        | 3           | 131-5911           | 1           | Decal-Engine Series, G250 |
| 2           | 120-9805           | 1           | Decal-Control, Engine | 4           | 131-5912           | 1           | Decal-Recoil, G250        |

 
# Chute Assembly

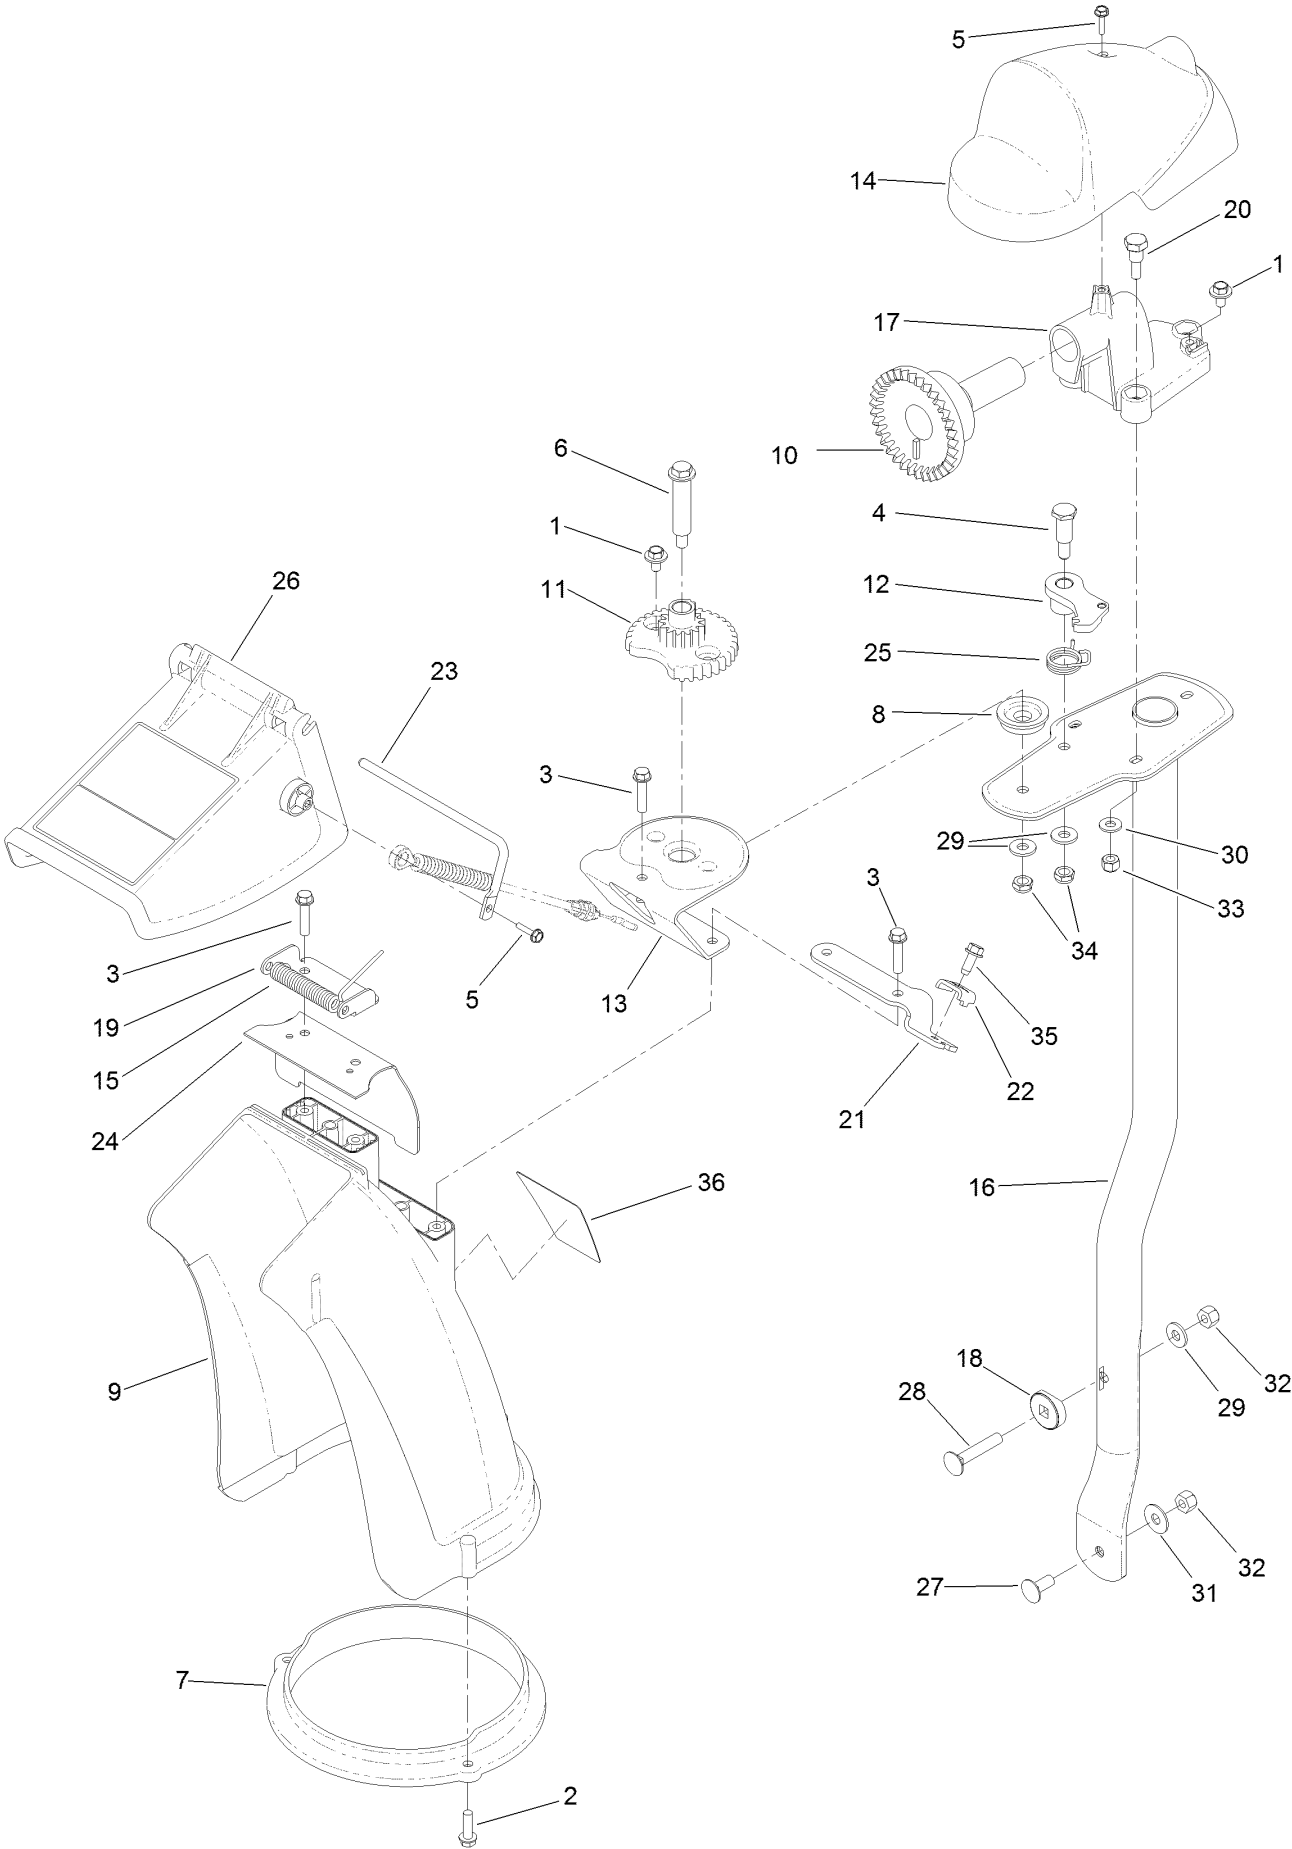

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 46-6810            | 3           | Screw And Washer ASM   | 19          | 136-7105           | 1           | Bracket-Deflector    |
| 2           | 46-8091            | 3           | Screw-HWH              | 20          | 136-7197           | 3           | Screw-Shoulder       |
| 3           | 46-8092            | 5           | Screw-Plastite         | 21          | 136-7107           | 1           | Bracket-Clamp, Cable |
| 4           | 63-2650            | 1           | Screw-Shoulder         | 22          | 136-7191           | 1           | Clamp-Cable          |
| 5           | 98-1375            | 2           | Screw-HWH              | 23          | 136-7111           | 1           | Rod-Deflector        |
| 6           | 136-7199           | 1           | Bolt-Shoulder          | 24          | 108-5052           | 1           | Seal-Chute           |
| 7           | 105-9991           | 1           | Ring-Chute             | 25          | 108-7315           | 1           | Spring-Torsion       |
| 8           | 106-4422           | 1           | Spacer-Chute           | 26          | 112-6629           | 1           | Deflector-Chute, CE  |
| 9           | 106-4440           | 1           | Chute-Discharge        | 27          | 3230-23            | 1           | Screw-CARR           |
| 10          | 106-4471           | 1           | Gear-Face              | 28          | 3230-5             | 1           | Screw-CARR           |
| 11          | 106-4472           | 1           | Gear-Chute             | 29          | 3256-2             | 3           | Washer-Flat          |
| 12          | 106-4476           | 1           | Latch-Chute            | 30          | 3256-22            | 3           | Washer-Flat          |
| 13          | 106-4582-03        | 1           | Bracket-Support, Chute | 31          | 3290-456           | 1           | Washer-Belleville    |
| 14          | 106-4585           | 1           | Cover-Gear, Chute      | 32          | 3296-29            | 2           | Nut-Lock, NI         |
| 15          | 136-7104           | 1           | Spring-Torsion         | 33          | 3296-42            | 3           | Nut-Lock, NI         |
| 16          | 106-7253-03        | 1           | Tube-Support           | 34          | 3296-47            | 2           | Nut-Lock, NI         |
| 17          | 106-7257           | 1           | Mount-Gear, Face       | 35          | 32144-10           | 1           | Screw-HWH            |
| 18          | 106-7260           | 1           | Washer-Curved          | 36          | 125-1121           | 1           | Decal-Guarantee      |

 
# Lever Chute Control Assembly

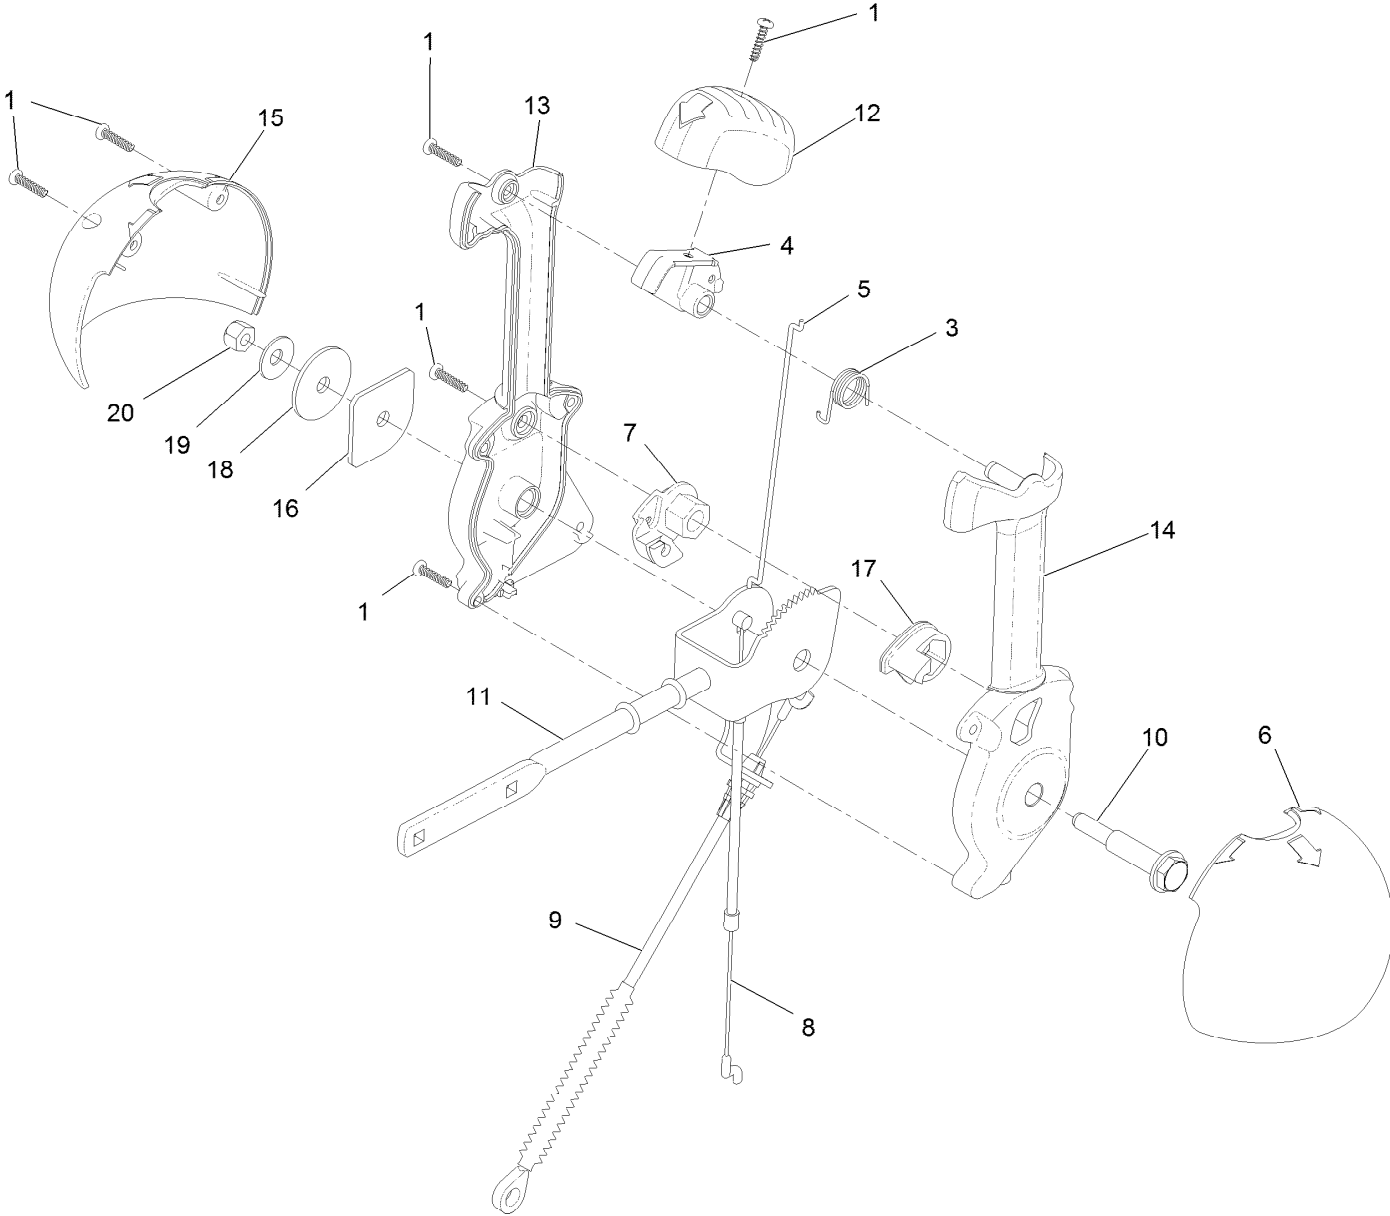

## Lever Chute Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 94-4496            | 6           | Screw-PPH                | 12          | 106-7280           | 1           | Cap-Lever                 |
| 3           | 105-9982           | 1           | Spring-Torsion           | 13          | 106-7281           | 1           | Lever-Control, Chute (RH) |
| 4           | 105-9984           | 1           | Trigger-Latch            | 14          | 106-7282           | 1           | Lever-Control, Chute (LH) |
| 5           | 136-7127           | 1           | Link-Latch               | 15          | 106-7292           | 1           | Cover-Lever, Chute (RH)   |
| 6           | 105-9986           | 1           | Cover-Lever, Chute (LH)  | 16          | 136-7129           | 1           | Plate-Friction            |
| 7           | 105-9988           | 1           | Lever-Cable, Deflector   | 17          | 106-7310           | 1           | Pawl-Latch                |
| 8           | 125-1113           | 1           | Cable-Release, Chute     | 18          | 107-3002           | 1           | Washer-Nylon              |
| 9           | 105-9990           | 1           | Cable-Control, Deflector | 19          | 3290-456           | 1           | Washer-Belleville         |
| 10          | 136-7190           | 1           | Screw-Shoulder           | 20          | 3296-29            | 1           | Nut-Lock, NI              |
| 11          | 136-7128           | 1           | Chute Control Rod        |             |                    |             |                           |

 
# Handle Assembly

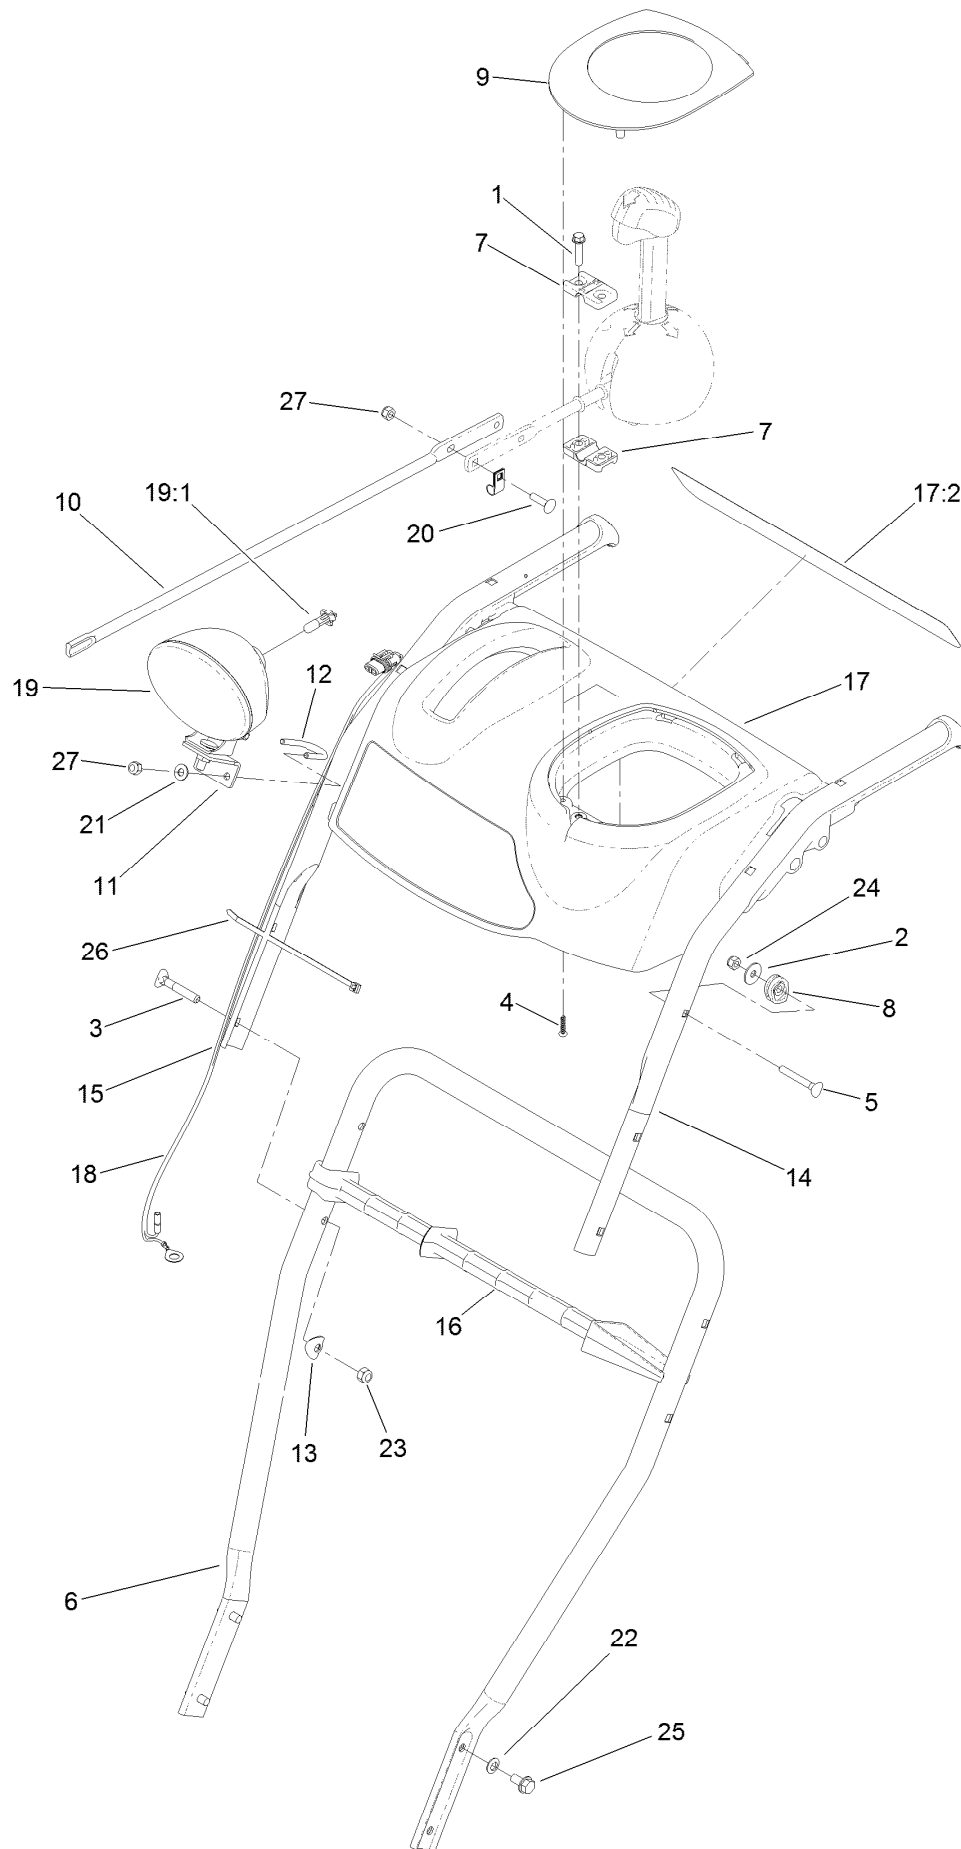

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 46-8092            | 2           | Screw-Plastite       | 16          | 110-3408           | 1           | Stick-Cleanout          |
| 2           | 87-6630            | 2           | Washer-Plain         | 17          | 112-6633           | 1           | Panel-Control           |
| 3           | 92-2260            | 4           | Screw-Handle         | 17:2        | 112-6627           | 1           | Decal-Warning           |
| 4           | 94-4496            | 2           | Screw-PPH            | 18          | 120-3062           | 1           | Harness-Wire, Headlight |
| 5           | 95-4453            | 2           | Screw                | 19          | 120-3074           | 1           | Headlamp ASM            |
| 6           | 105-9981-03        | 1           | Handle-Lower         | 19:1        | 120-3075           | 1           | Lamp-12 Volt            |
| 7           | 105-9987           | 2           | Support-Rod          | 20          | 3229-30            | 2           | Screw-CARR              |
| 8           | 106-4509           | 2           | Clamp-Cable          | 21          | 3256-1             | 2           | Washer-Flat             |
| 9           | 106-4586           | 1           | Cover-Panel, Control | 22          | 3290-475           | 4           | Washer-Belleville       |
| 10          | 106-7283           | 1           | Rod-Chute, Front     | 23          | 3296-72            | 4           | Nut-Lock, NI            |
| 11          | 107-1020-03        | 1           | Bracket-Light        | 24          | 3296-73            | 2           | Nut-Lock, NI            |
| 12          | 136-7120           | 1           | Clamp-Light          | 25          | 32144-14           | 4           | Screw-HWHTF             |
| 13          | 107-3844           | 4           | Washer               | 26          | 614249             | 2           | Tie-Cable               |
| 14          | 127-5952-03        | 1           | Handle-Upper, LH     | 27          | 3296-73            | 4           | Nut-Lock, NI            |
| 15          | 127-5953-03        | 1           | Handle-Upper, RH     |             |                    |             |                         |

 
# Control Assembly

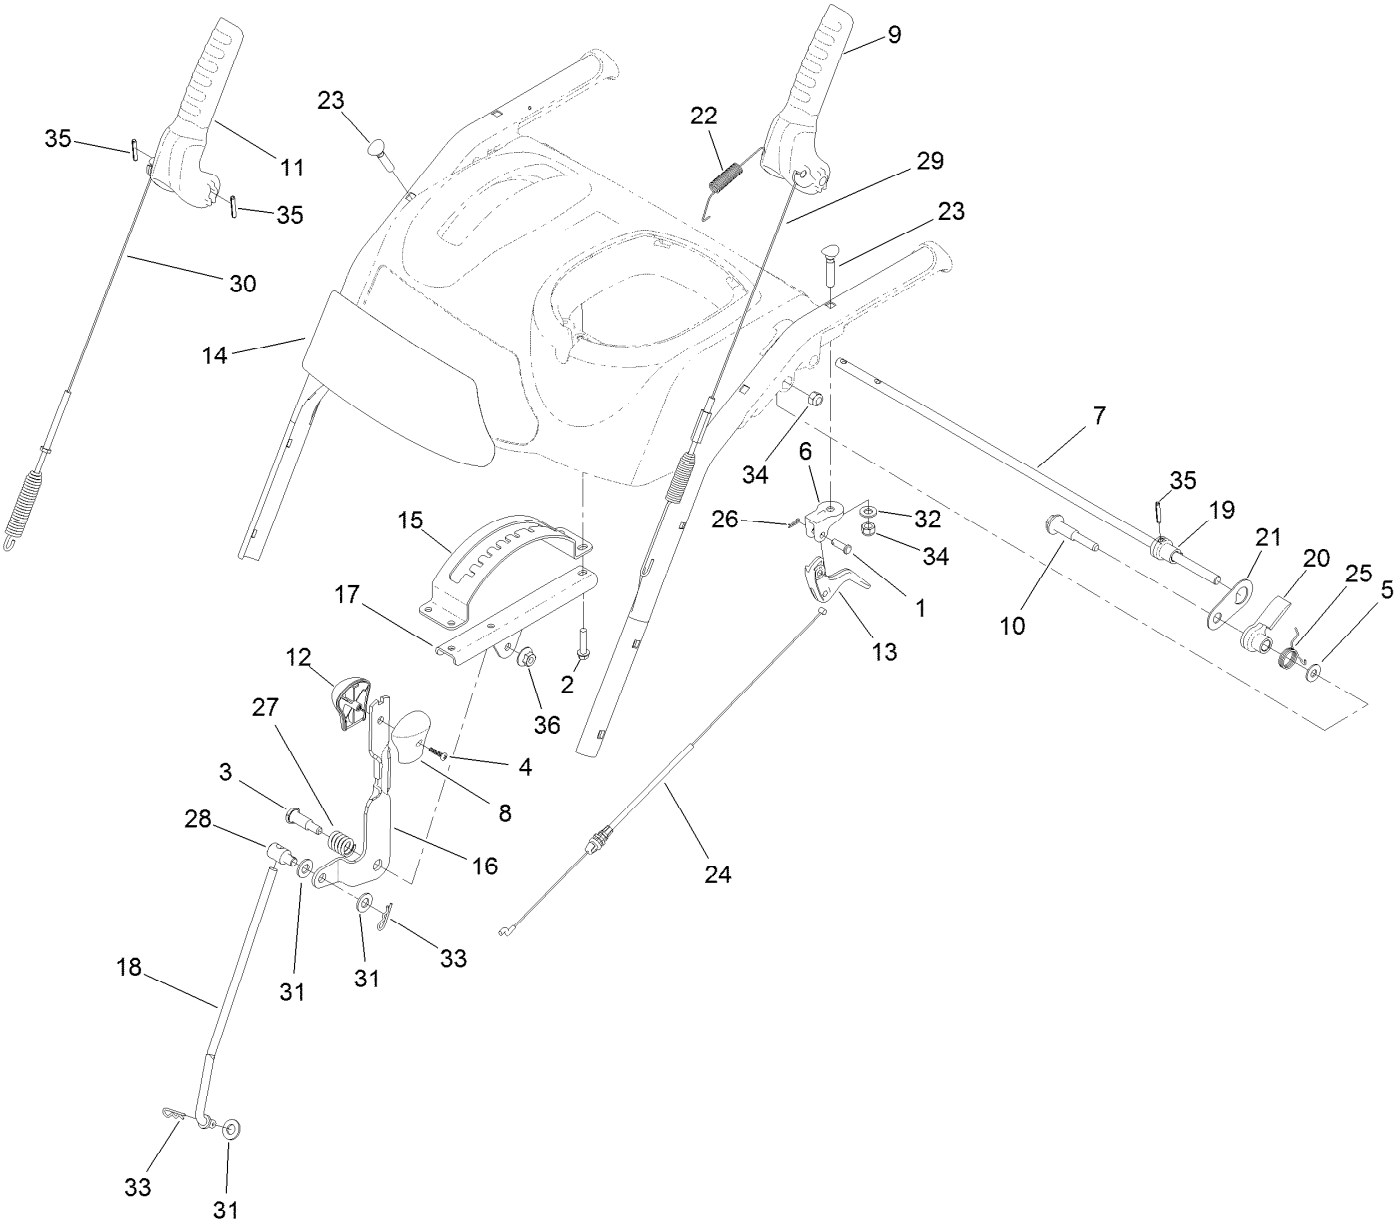

## Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 1-808265           | 2           | Pin-Clevis              | 19          | 107-1043           | 1           | Cam-Lockout        |
| 2           | 46-8092            | 4           | Screw-Plastite          | 20          | 108-0023           | 1           | Latch-Lockout      |
| 3           | 63-2650            | 1           | Screw-Shoulder          | 21          | 136-7314           | 1           | Link-Lockout       |
| 4           | 94-4496            | 1           | Screw-PPH               | 22          | 136-7315           | 1           | Spring-Tension     |
| 5           | 98-3499            | 1           | Washer-Flat             | 23          | 107-3018           | 4           | Screw-Handle       |
| 6           | 105-9980           | 2           | Mount-Clutch, Lever     | 24          | 107-8896           | 2           | Cable-Clutch       |
| 7           | 136-7100           | 1           | Rod-Lockout             | 25          | 108-0024           | 1           | Spring-Torsion     |
| 8           | 105-9999           | 1           | Knob-Shift, LH          | 26          | 108-2992           | 2           | Pin-Hair           |
| 9           | 106-4410           | 1           | Lever-Traction          | 27          | 136-7121           | 1           | Spring-Compression |
| 10          | 136-7196           | 1           | Screw-Shoulder          | 28          | 136-7193           | 1           | Trunnion-Rod       |
| 11          | 106-4413           | 1           | Lever-Auger             | 29          | 120-0132           | 1           | Cable-Traction     |
| 12          | 106-4423           | 1           | Knob-Shift, RH          | 30          | 115-5680           | 1           | Cable-Auger        |
| 13          | 106-4505           | 2           | Lever-Clutch            | 31          | 3256-24            | 3           | Washer-Flat        |
| 14          | 130-9780           | 1           | Decal-Control Panel     | 32          | 3256-70            | 4           | Washer-Flat        |
| 15          | 106-7277-03        | 1           | Guide-Selector, Speed   | 33          | 3290-307           | 2           | Pin-Cotter         |
| 16          | 106-7278-03        | 1           | Selector-Speed          | 34          | 3296-72            | 5           | Nut-Lock, NI       |
| 17          | 130-9775-03        | 1           | Bracket-Selector, Speed | 35          | 32121-125          | 3           | Pin-Spring         |
| 18          | 136-7109           | 1           | Rod-Shift               | 36          | 32128-13           | 1           | Nut-HF             |
 
# Wheel Clutch Assembly

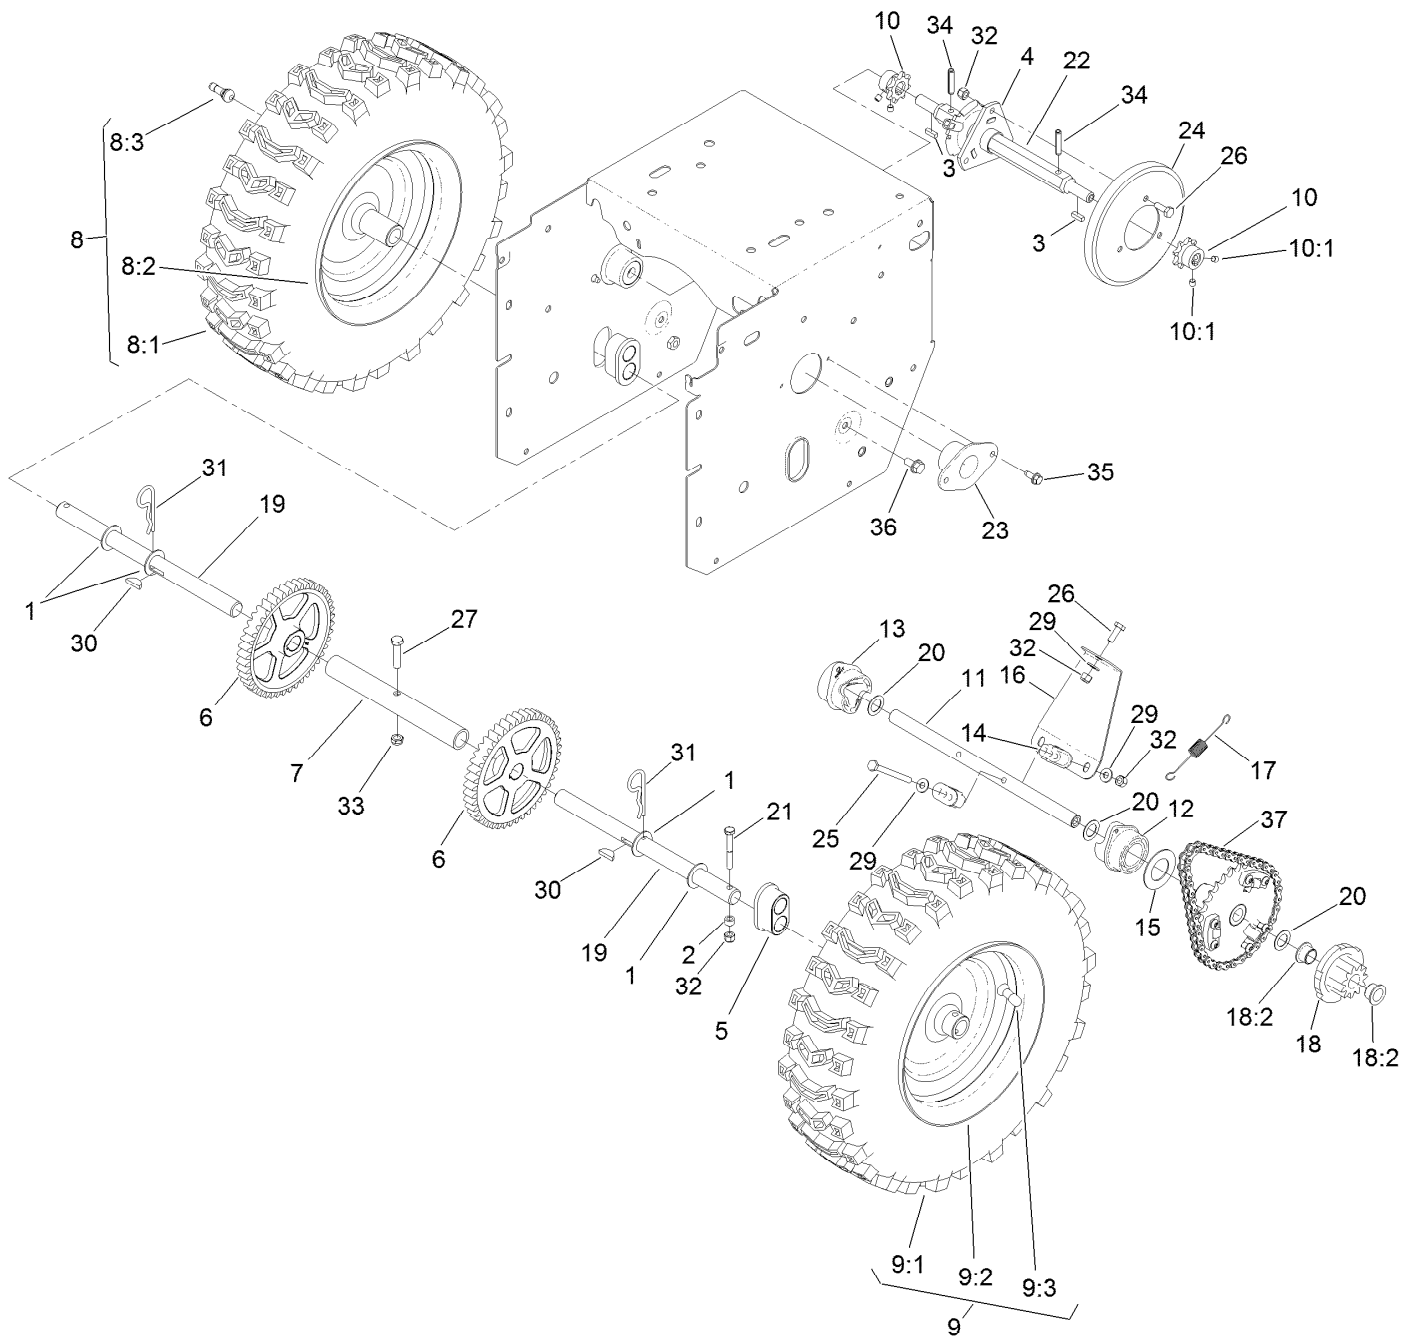


## Wheel Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 3-8664             | 4           | Washer-Thrust           | 17          | 107-8893           | 2           | Spring-Extension   |
| 2           | 55-9370            | 2           | Spacer-Blade, Rotor     | 18          | 107-8894           | 2           | 11T Gear ASM       |
| 3           | 94-8850            | 2           | Key-Square              | 18:2        | 108-2973           | 2           | Bushing-Flange     |
| 4           | 106-4434           | 1           | Trunnion-Hex            | 19          | 107-8898           | 2           | Shaft-Axle         |
| 5           | 106-4558           | 2           | Bearing-Axle            | 20          | 108-0015           | 4           | Washer-Flat        |
| 6           | 106-4572           | 2           | Gear-Axle, 44 Tooth     | 21          | 108-2975           | 2           | Screw-HH           |
| 7           | 106-7259           | 1           | Tube-Axle               | 22          | 108-7314           | 1           | Shaft-Hex          |
| 8           |                    | 1           | RH Wheel And Tire ASM ● | 23          | 108-7319           | 2           | Retainer-Bearing   |
| 8:1         | 121-6610           | 1           | Rim-Tire                | 24          | 119-1567           | 1           | Wheel-Friction     |
| 8:2         | 121-6611           | 1           | Tire                    | 25          | 321-23             | 2           | Screw-HH           |
| 8:3         | 232-27             | 1           | Stem-Valve              | 26          | 321-4              | 4           | Screw-HH           |
| 9           |                    | 1           | LH Wheel And Tire ASM ● | 27          | 322-17             | 1           | Screw-HH           |
| 9:1         | 121-6610           | 1           | Rim-Tire                | 29          | 3256-22            | 5           | Washer-Flat        |
| 9:2         | 121-6611           | 1           | Tire                    | 30          | 3257-7             | 2           | Key-Woodruff       |
| 9:3         | 232-27             | 1           | Stem-Valve              | 31          | 3290-343           | 2           | Pin-Hair           |
| 10          | 106-7317           | 2           | Sprocket-8 Tooth        | 32          | 3296-42            | 8           | Nut-Lock, NI       |
| 10:1        | 3245-32            | 2           | Screw-HSH               | 33          | 3296-47            | 1           | Nut-Lock, NI       |
| 11          | 107-8883           | 1           | Shaft-Intermediate      | 34          | 32121-9            | 2           | Pin-Roll, Slotted  |
| 12          | 107-8887           | 1           | Collar-Shift, LH        | 35          | 32144-10           | 4           | Screw-HWH          |
| 13          | 107-8888           | 1           | Collar-Shift, RH        | 36          | 32144-14           | 2           | Screw-HWHTF        |
| 14          | 107-8889           | 4           | Guide-Collar            | 37          | 108-0016           | 2           | Chain-Roller       |
| 15          | 107-8891           | 2           | Washer-Thrust           | 37          | 2710-6             | 2           | Link-Connecting    |
| 16          | 107-8892-03        | 1           | Brace-Collar, Shift     |             |                    |             |                    |

● Not serviced separately
 
# Wheel Clutch Sprocket Assembly

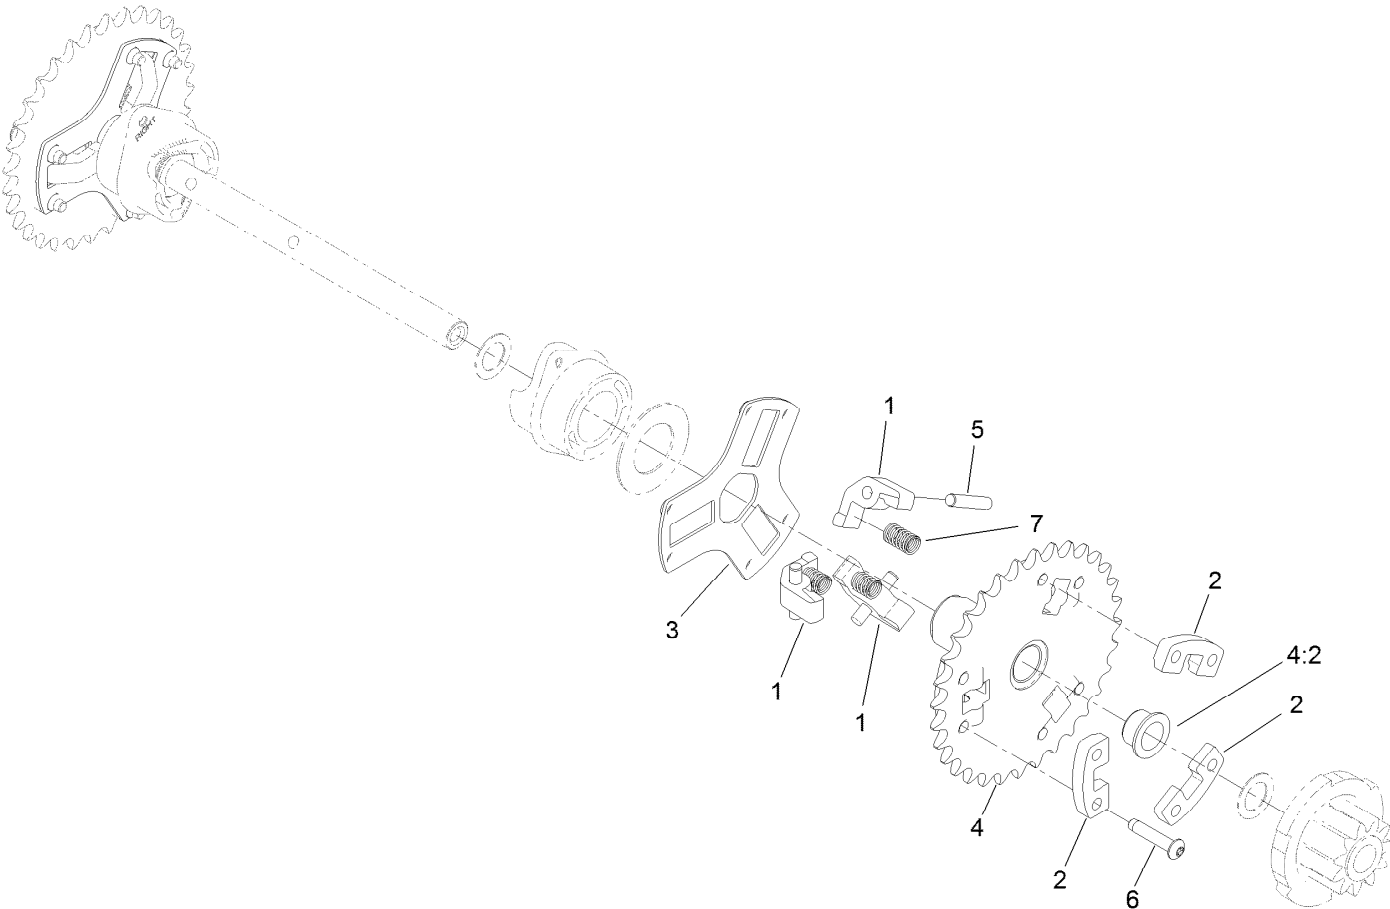

## Wheel Clutch Sprocket Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 107-8879           | 6           | Pawl-Clutch        |
| 2           | 107-8880           | 6           | Support-Pawl       |
| 3           | 136-7318           | 2           | Retainer-Pawl Pin  |
| 4           | 107-8895           | 2           | 32T Sprocket ASM   |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 4:2         | 108-2973           | 2           | Bushing-Flange            |
| 5           | 107-8899           | 6           | Pin-Dowel                 |
| 6           | 108-0035           | 12          | Screw-TTH, Thread Rolling |
| 7           | 107-8885           | 6           | Spring-Compression        |

# Attachments and Accessories

## For 38805 Power Max Heavy Duty 826 OXE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Weight Kit .....                                   | 107-3815   |
| 26in Drift Breaker.....                            | 107-3816   |
| Heavy-Duty Skid Kit.....                           | 125-1104   |
| Snow Cab Kit .....                                 | 127-5960   |
| Engine Maintenance Kit.....                        | 138-0702   |
| Non-Marking Skid Kit .....                         | 38211      |
| Tire Chain Kit, for 16in Tires.....                | 38215      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Toro 2-Stage Cover.....                            | 490-7466   |
| Plain 2-Stage Cover.....                           | 490-7467   |

**Notes:**



**Count on it.**