



**Count on it.**

# Parts Catalog

## Power Max® Heavy Duty 928 OHXE Snowthrower

Model No. 38801—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly . . . . . 4

Housing Assembly . . . . . 6

Idler and Linkage Assembly . . . . . 8

Auger and Impeller Assembly . . . . . 10

Gear Case Assembly No. 125-7926 . . . . . 12

Impeller Assembly . . . . . 14

Engine and Pulley Assembly . . . . . 16

No. 1 Engine Assembly . . . . . 18

Engine Assembly No. 2 . . . . . 20

Engine Assembly No. 3 . . . . . 22

Engine Decal Assembly . . . . . 24

Chute Assembly . . . . . 26

Lever Chute Control Assembly . . . . . 28

Handle Assembly . . . . . 30

 
Control Assembly . . . . . 32

Wheel Clutch Assembly . . . . . 34

Wheel Clutch Sprocket Assembly . . . . . 36

Attachments and Accessories . . . . . 38


# Main Frame Assembly

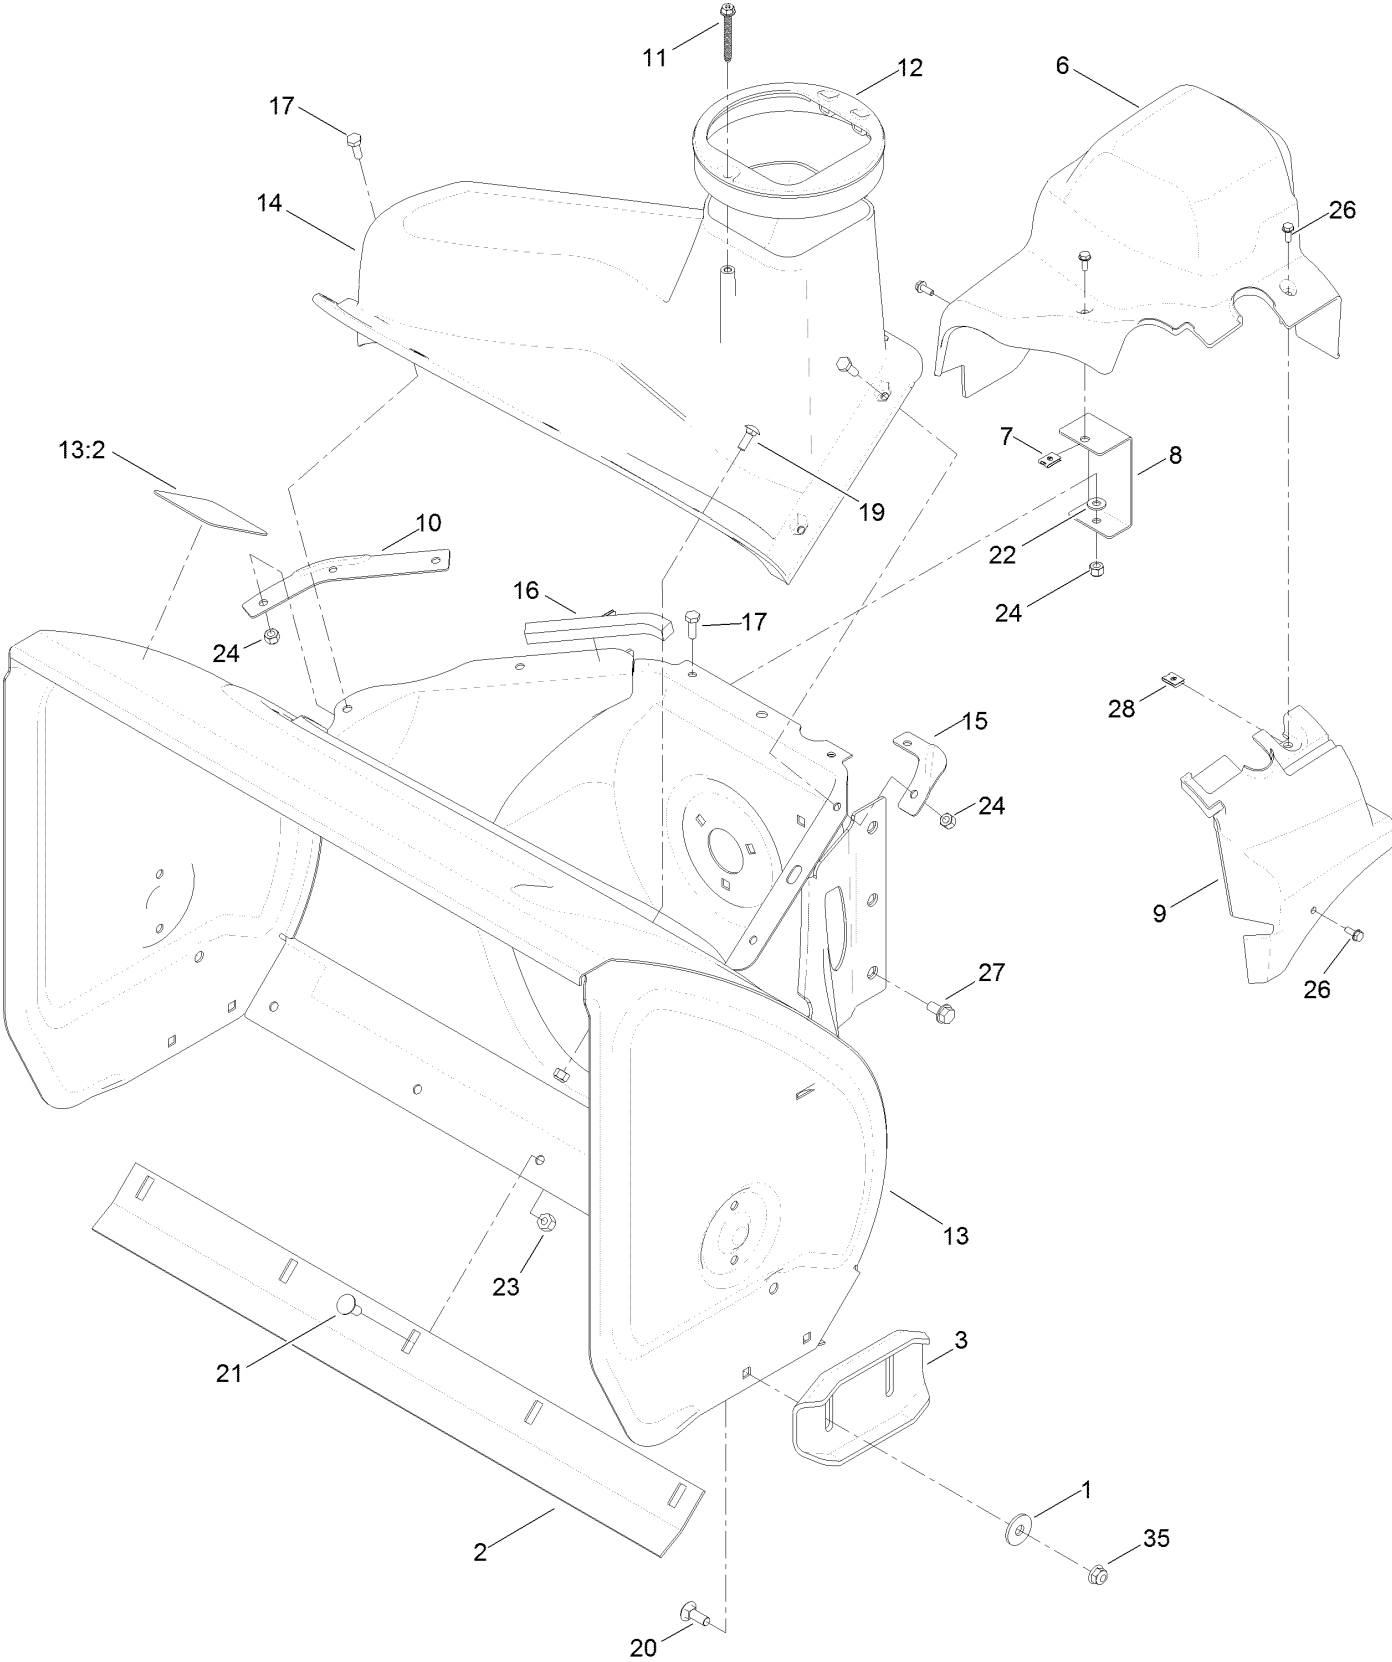

## Main Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 52-2861            | 4           | Washer                  | 15          | 108-0039-03        | 1           | Seal               |
| 2           | 106-4573-01        | 1           | Scraper-Fixed           | 16          | 120-0124           | 1           | Seal-Housing       |
| 3           | 106-4588-01        | 2           | Skid                    | 17          | 321-4              | 7           | Screw-HH           |
| 6           | 119-1563           | 1           | Cover-Belt              | 19          | 3229-1             | 4           | Bolt-CARR          |
| 7           | 107-1013           | 1           | Nut-Speed, U-Type       | 20          | 3230-16            | 4           | Screw-CARR         |
| 8           | 107-1014-03        | 1           | Bracket-Cover, Clip Nut | 21          | 3230-23            | 5           | Screw-CARR         |
| 9           | 107-1016           | 1           | Cover-Extension, Belt   | 22          | 3256-22            | 1           | Washer-Flat        |
| 10          | 107-1017-03        | 1           | Seal-Flange, Cover      | 23          | 3296-29            | 5           | Nut-Lock, NI       |
| 11          | 114-3751           | 1           | Screw-HWH, Plastite     | 24          | 3296-42            | 11          | Nut-Lock, NI       |
| 12          | 107-3006           | 1           | Guide-Chute             | 26          | 32144-112          | 4           | Screw-HWH          |
| 13          | 107-3824           | 1           | Housing-Auger, 28 Inch  | 27          | 32144-14           | 6           | Screw-HWHTF        |
| 13:2        | 107-3040           | 1           | Decal-Danger, Auger     | 28          | 701493             | 1           | Nut-Speed          |
| 14          | 108-0017           | 1           | Cover                   | 35          | 104-8300           | 4           | Nut-HF, NI         |

 
# Housing Assembly

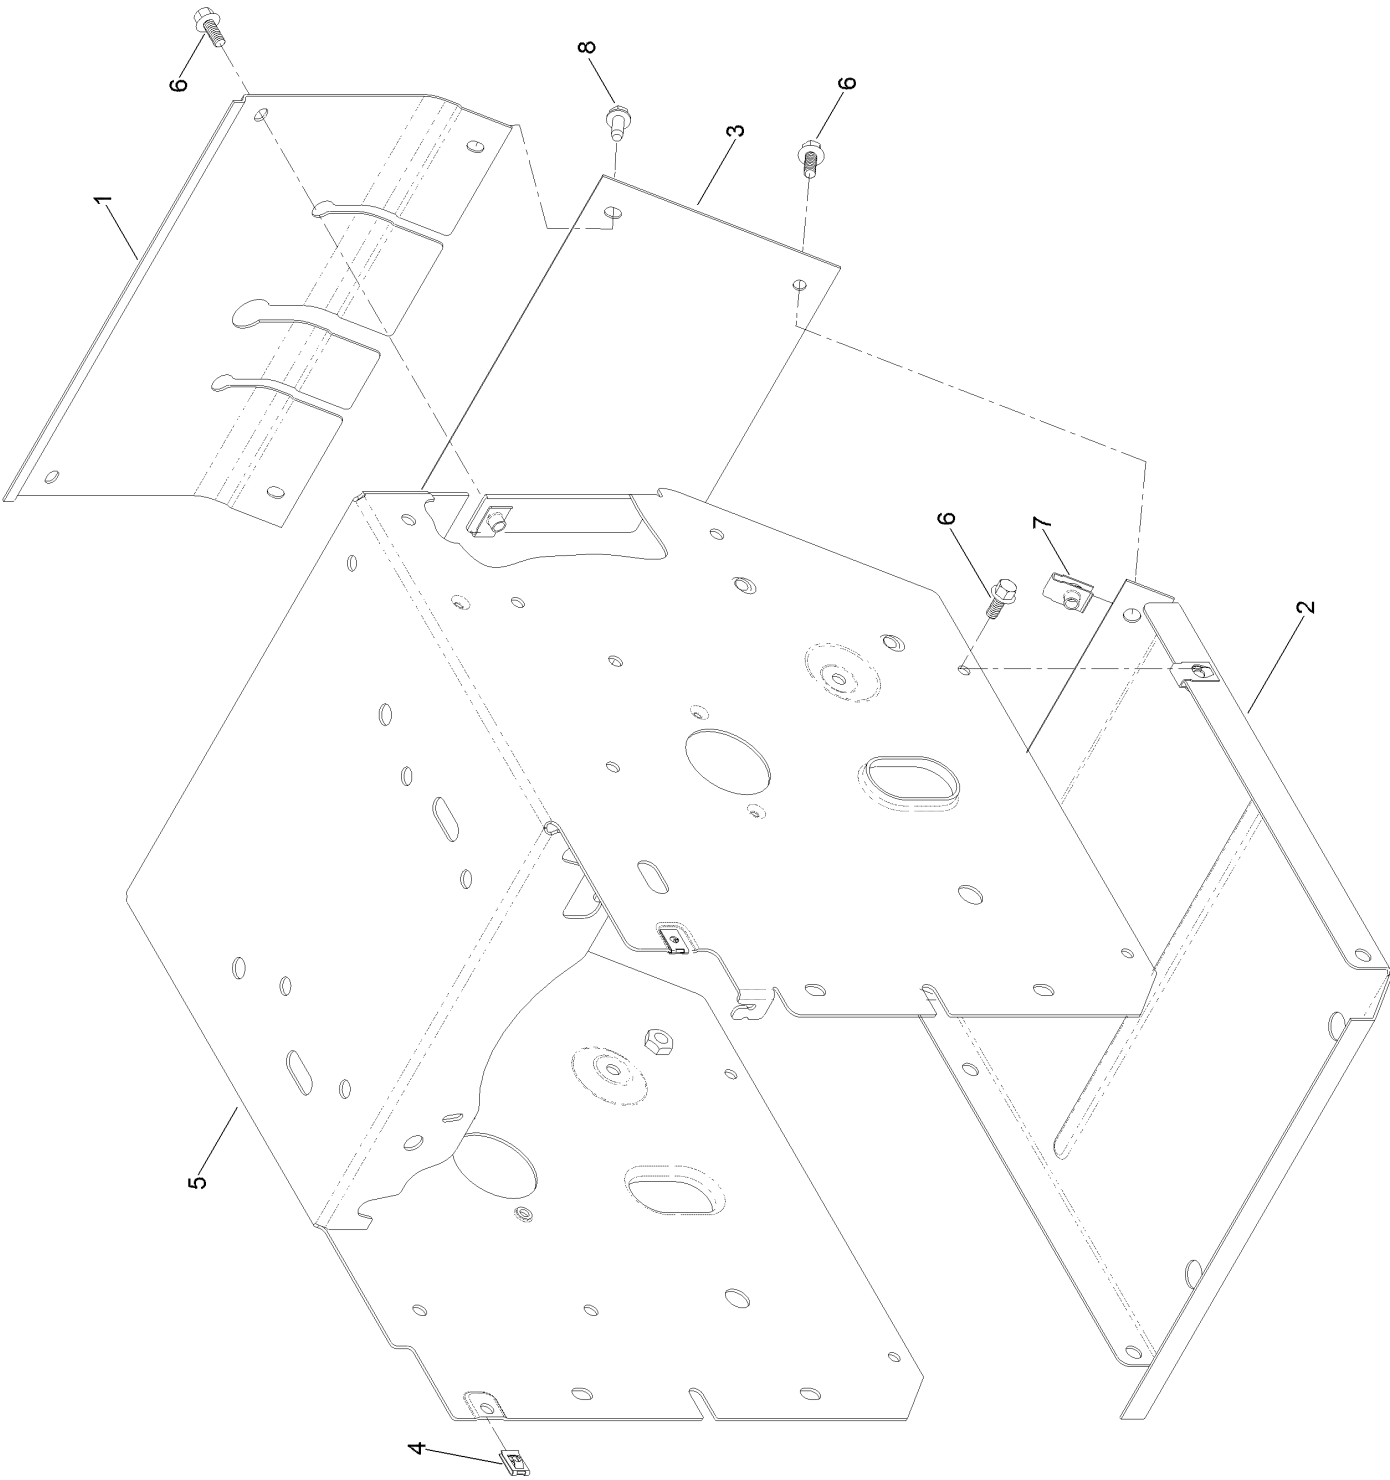

## Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 108-0022-01        | 1           | Cover-Upper        | 5           | 120-9832-01        | 1           | Frame-Traction     |
| 2           | 106-7330-01        | 1           | Pan-Bottom         | 6           | 99-6810            | 8           | Screw-HHF          |
| 3           | 106-7345-01        | 1           | Cover-Lower        | 7           | 107069             | 7           | Clip               |
| 4           | 107-1013           | 2           | Nut-Speed, U-Type  | 8           | 32144-10           | 2           | Screw-HWH          |

 
# Idler and Linkage Assembly

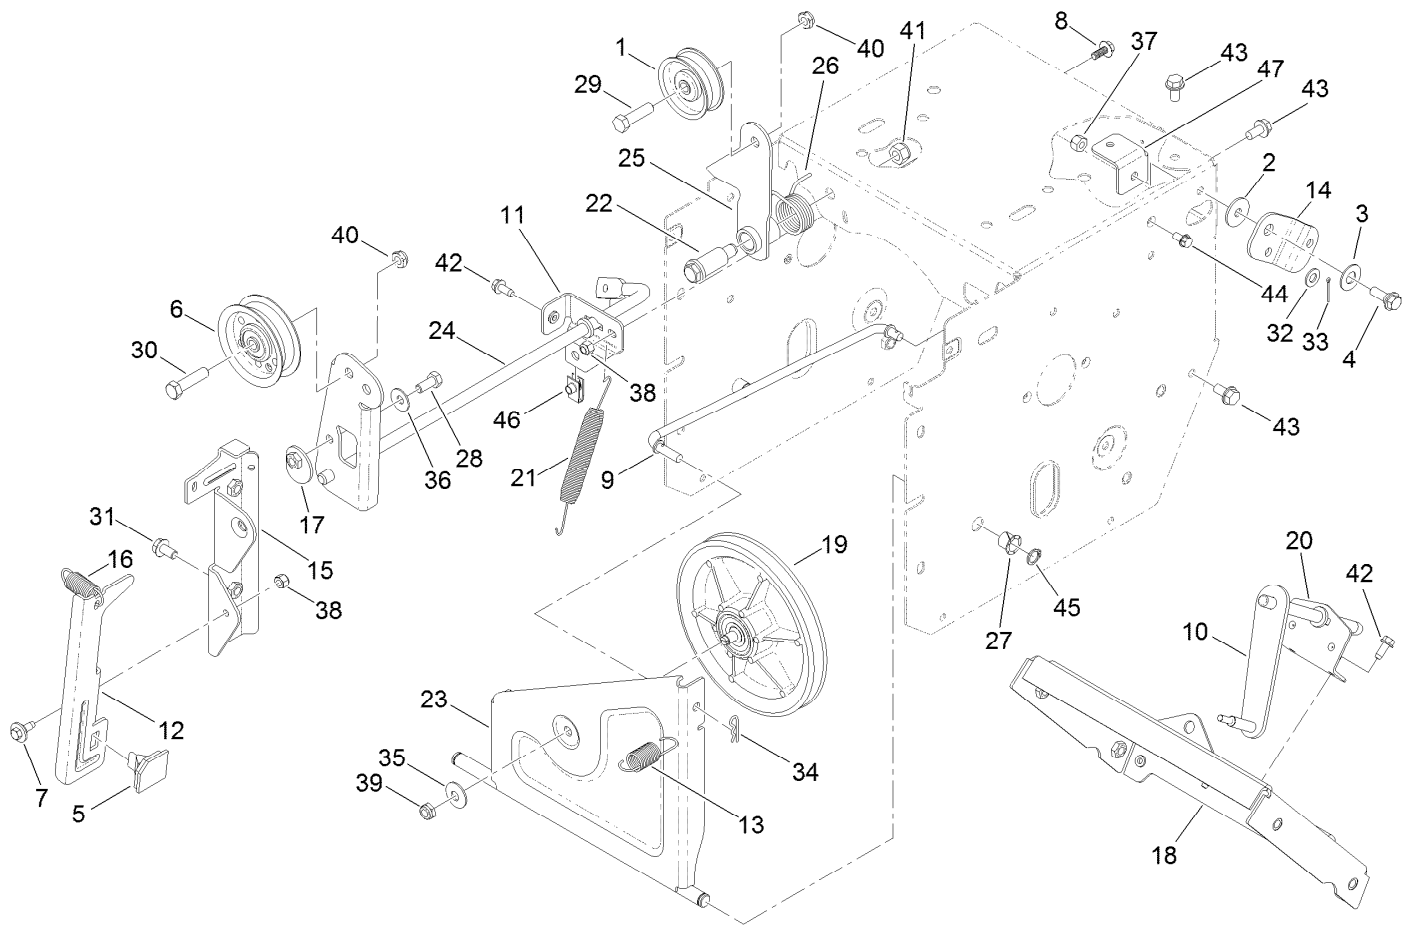

## Idler and Linkage Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 3-4244             | 1           | Pulley-Idler             | 25          | 120-0148           | 1           | Traction Idler Arm |
| 2           | 5-4460             | 1           | Washer-Pivot             | 26          | 120-3060           | 1           | Spring-Torsion     |
| 3           | 25-5640            | 1           | Washer                   | 27          | 256-257            | 2           | Bushing-Nyliner    |
| 4           | 27-0410            | 1           | Screw-Shoulder           | 28          | 322-3              | 1           | Screw-HH           |
| 5           | 66-8060            | 1           | Pad-Brake                | 29          | 323-29             | 1           | Screw-HH           |
| 6           | 92-7104            | 1           | Pulley-Idler             | 30          | 323-8              | 1           | Screw-HH           |
| 7           | 92-9698            | 1           | Screw-Shoulder           | 31          | 3234-7             | 2           | Screw-HHF          |
| 8           | 99-6810            | 1           | Screw-HHF                | 32          | 3256-23            | 1           | Washer-Plain       |
| 9           | 106-4467           | 1           | Link-Control, Speed      | 33          | 3272-4             | 1           | Pin-Cotter         |
| 10          | 106-7268           | 1           | Lever-Control, Traction  | 34          | 3290-307           | 1           | Pin-Cotter         |
| 11          | 120-9824           | 1           | Bracket-Clutch, Impeller | 35          | 3290-340           | 1           | Washer-Belleville  |
| 12          | 107-1000           | 1           | Arm-Brake                | 36          | 3290-456           | 1           | Washer-Belleville  |
| 13          | 107-1003           | 1           | Spring-Extension         | 37          | 3296-29            | 1           | Nut-Lock, NI       |
| 14          | 107-1011           | 1           | Bellcrank-Drive          | 38          | 3296-42            | 2           | Nut-Lock, NI       |
| 15          | 107-1039           | 1           | Bracket-Idler, Impeller  | 39          | 3296-5             | 1           | Nut-Hex            |
| 16          | 107-1045           | 1           | Spring-Extension         | 40          | 3296-59            | 2           | Nut-Lock, NI       |
| 17          | 107-1047           | 1           | Nut                      | 41          | 3296-76            | 1           | Nut-Lock, NI       |
| 18          | 108-0026-01        | 1           | Shift Plate ASM          | 42          | 32144-10           | 3           | Screw-HWH          |
| 19          | 108-0031           | 1           | Pulley-Traction          | 43          | 32144-14           | 6           | Screw-HWHTF        |
| 20          | 108-0036           | 1           | Bracket-Rod, Shift       | 44          | 32144-4            | 1           | Screw-HWH          |
| 21          | 108-2976           | 1           | Spring-Extension         | 45          | 32151-61           | 2           | Ring-Retaining     |
| 22          | 108-5056           | 1           | Bolt-Shoulder            | 46          | 107069             | 1           | Clip               |
| 23          | 108-7307           | 1           | Bracket-Wheel, Friction  | 47          | 125-1124           | 1           | Bracket-Frame, LH  |
| 24          | 120-0144-03        | 1           | Impeller Clutch ASM      |             |                    |             |                    |
 
# Auger and Impeller Assembly

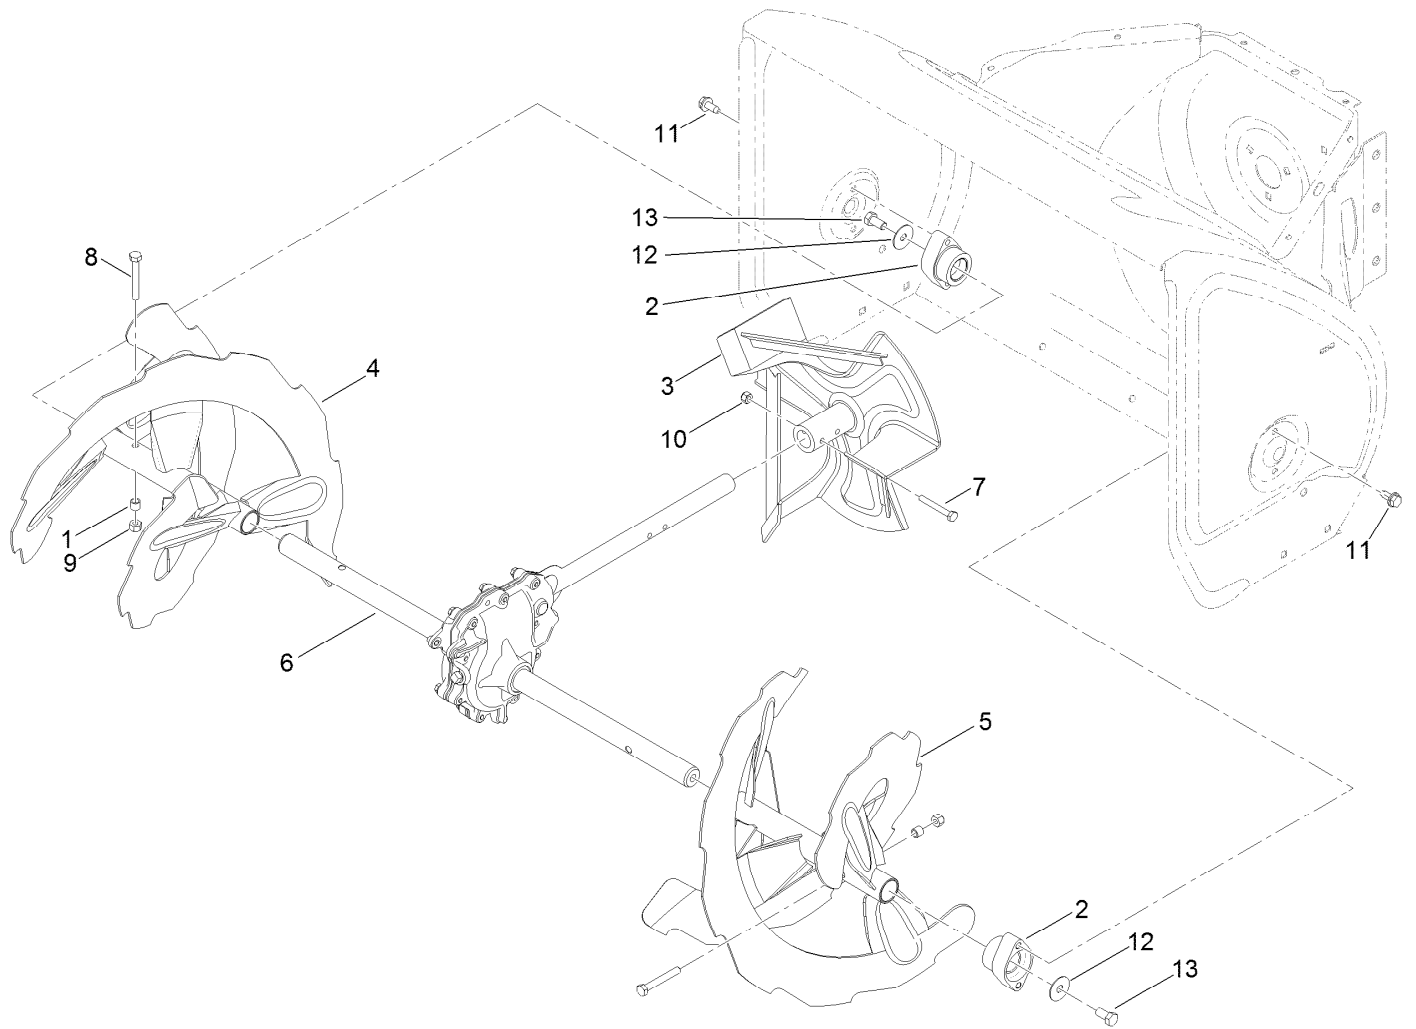


## Auger and Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            |
|-------------|--------------------|-------------|-------------------------------|
| 1           | 1-633545           | 2           | Spacer                        |
| 2           | 106-4570           | 2           | Bearing-Auger                 |
| 3           | 106-4576-03        | 1           | Impeller ASM                  |
| 4           | 106-7291-03        | 1           | RH Auger ASM                  |
| 5           | 106-7301-03        | 1           | LH Auger ASM                  |
| 6           | 125-7926           | 1           | 28 Inch Auger Gearcase<br>ASM |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 7           | 321-11             | 2           | Screw-HH           |
| 8           | 322-11             | 2           | Screw-HH           |
| 9           | 3296-29            | 2           | Nut-Lock, NI       |
| 10          | 3296-42            | 2           | Nut-Lock, NI       |
| 11          | 32144-70           | 4           | Screw-HWHTF        |
| 12          | 3-0750             | 2           | Washer             |
| 13          | 323-4              | 2           | Screw-HH           |
 
# Gear Case Assembly No. 125-7926

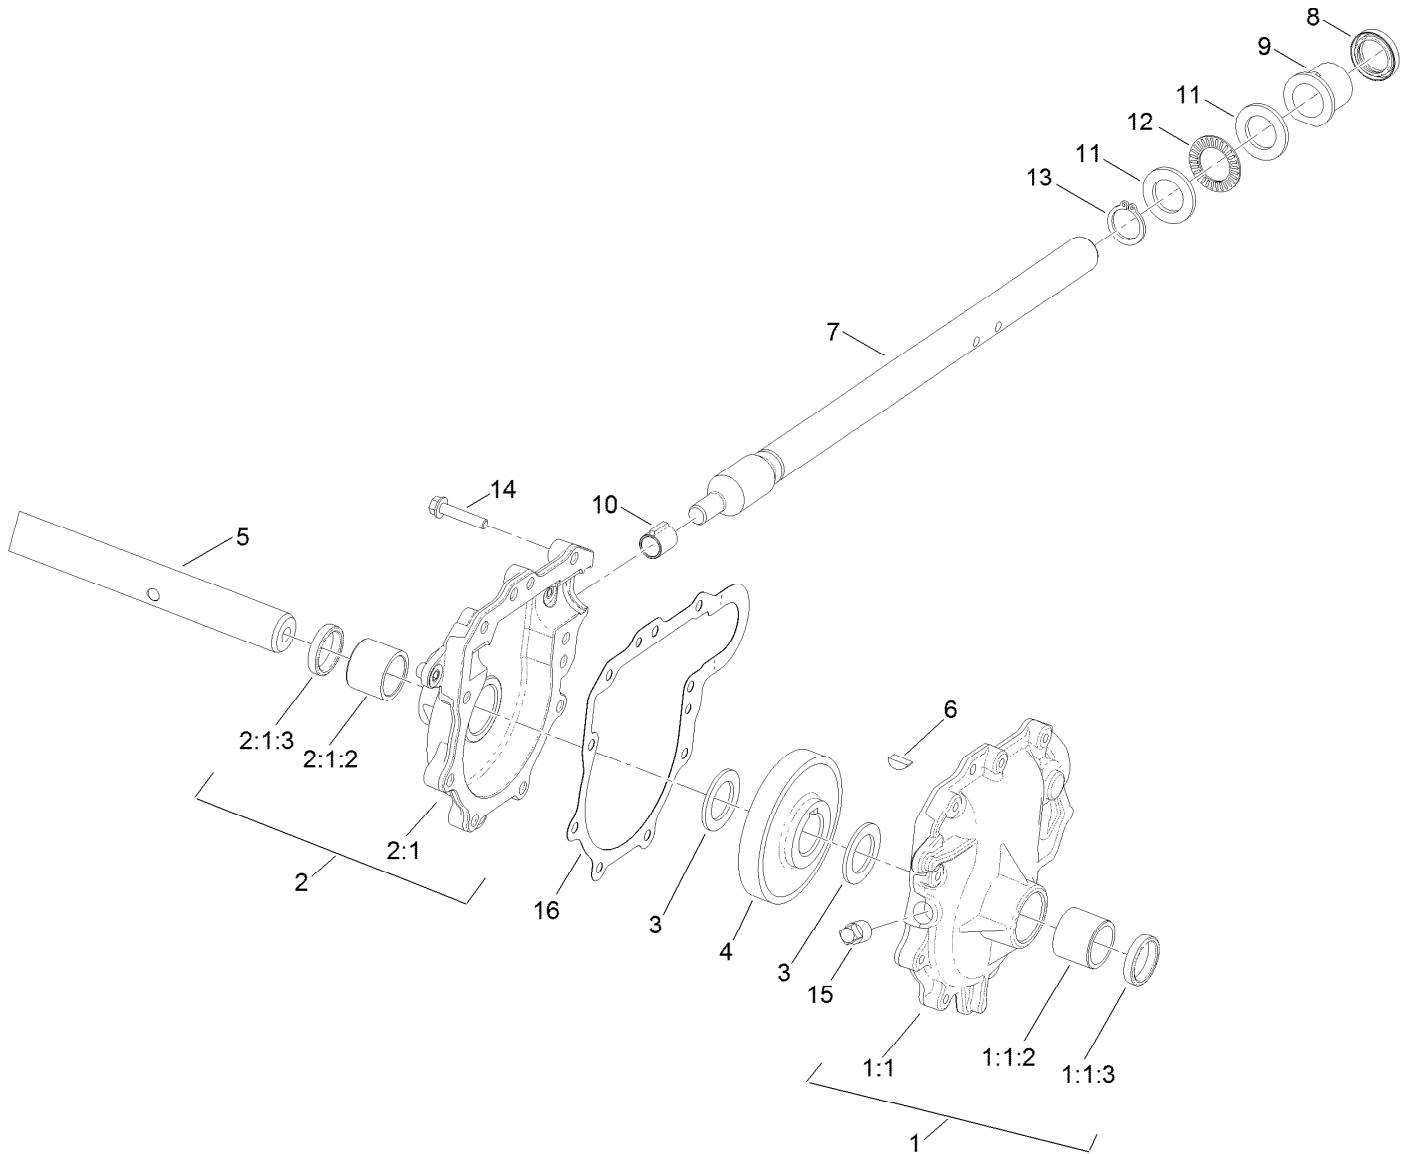


## Gear Case Assembly No. 125-7926 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 108-7325           | 1           | LH Auger Gearcase ASM | 6           | 3257-10            | 1           | Key-Woodruff           |
| 1:1         |                    | 1           | Gearcase-Auger, LH ●  | 7           | 66-7811            | 1           | Shaft-Impeller         |
| 1:1:2       | 112-6635           | 1           | Bushing-Sleeve        | 8           | 253-149            | 1           | Seal-Oil               |
| 1:1:3       | 7-0045             | 1           | Seal-Oil              | 9           | 37-6560            | 1           | Bushing-Input          |
| 2           | 108-7327           | 1           | RH Auger Gearcase ASM | 10          | 62-1150            | 1           | Bushing-Worm           |
| 2:1         |                    | 1           | Gearcase-Auger, RH ●  | 11          | 252-78             | 2           | Washer-Thrust          |
| 2:1:2       | 112-6635           | 1           | Bushing-Sleeve        | 12          | 252-76             | 1           | Bearing-Thrust         |
| 2:1:3       | 7-0045             | 1           | Seal-Oil              | 13          | 32151-33           | 1           | Ring-Retaining, Ext    |
| 3           | 252-71             | 2           | Washer-Thrust         | 14          | 108-4862           | 9           | Screw-HWHTF            |
| 4           | 62-0120            | 1           | Gear-Helical          | 15          | 121-6832           | 1           | Plug-Pipe, SQH         |
| 5           | 106-4421           | 1           | Shaft-Auger           | 16          | 108-7330           | 1           | Gasket-Gearcase, Auger |

● Not serviced separately

 
# Impeller Assembly

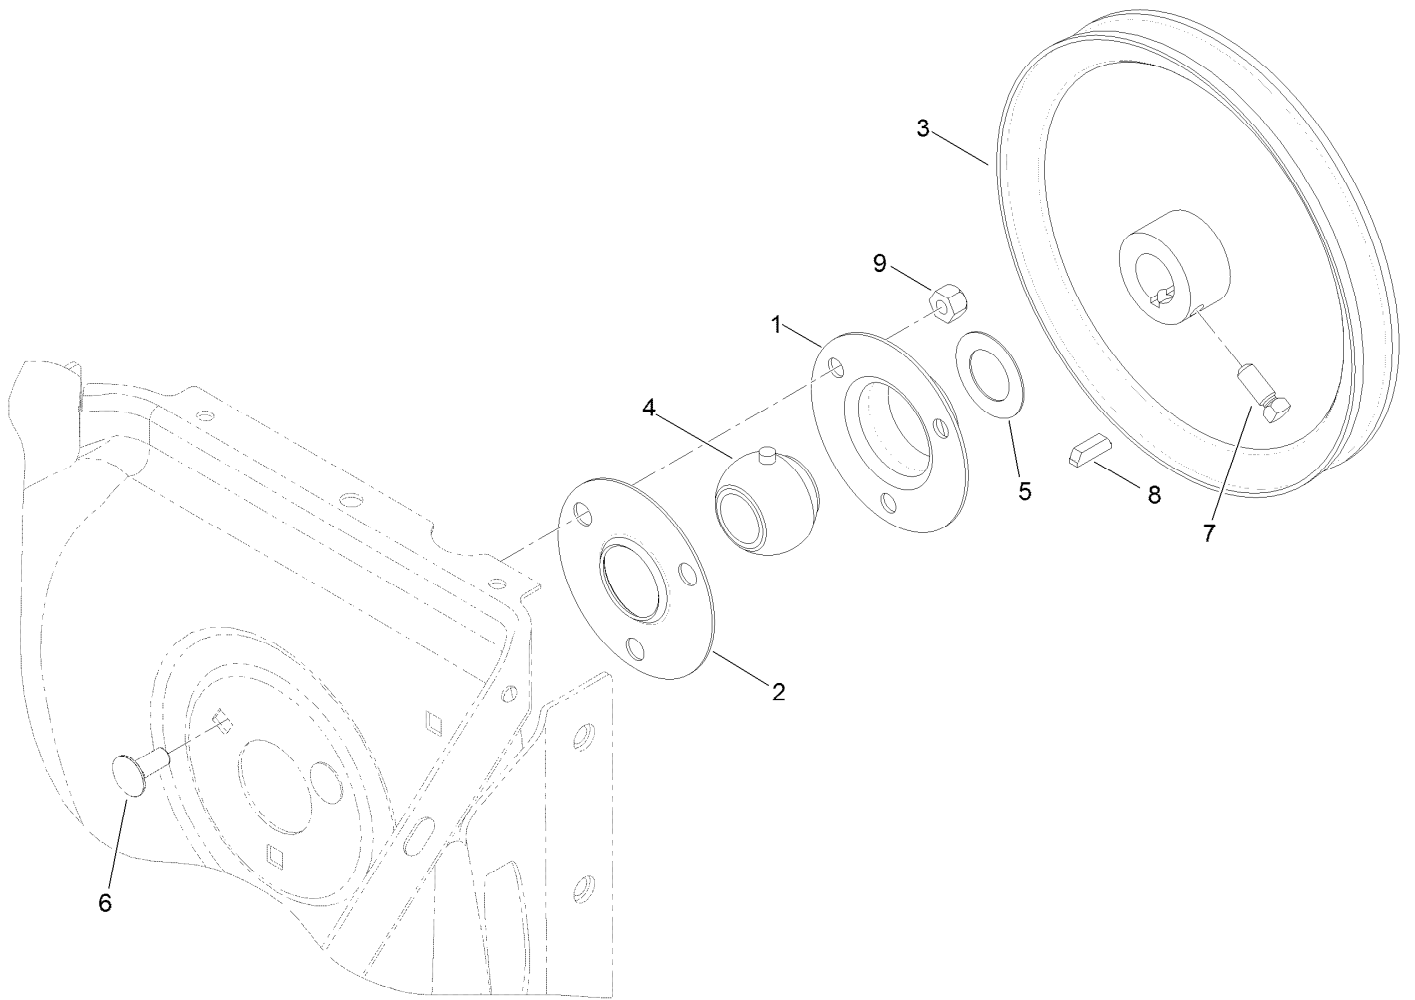

## Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 26-6110            | 1           | Flange-Cup, Bearing | 6           | 3230-23            | 3           | Screw-CARR         |
| 2           | 26-6120            | 1           | Flange-Cup, Bearing | 7           | 1-803050           | 2           | Screw-Set          |
| 3           | 62-1300            | 1           | Pulley-Impeller     | 8           | 3257-23            | 1           | Key-Woodruff       |
| 4           | 63-3450            | 1           | Bearing-Ball        | 9           | 3296-29            | 3           | Nut-Lock, NI       |
| 5           | 110-6767           | 1           | Washer-Thrust       |             |                    |             |                    |
 
# Engine and Pulley Assembly

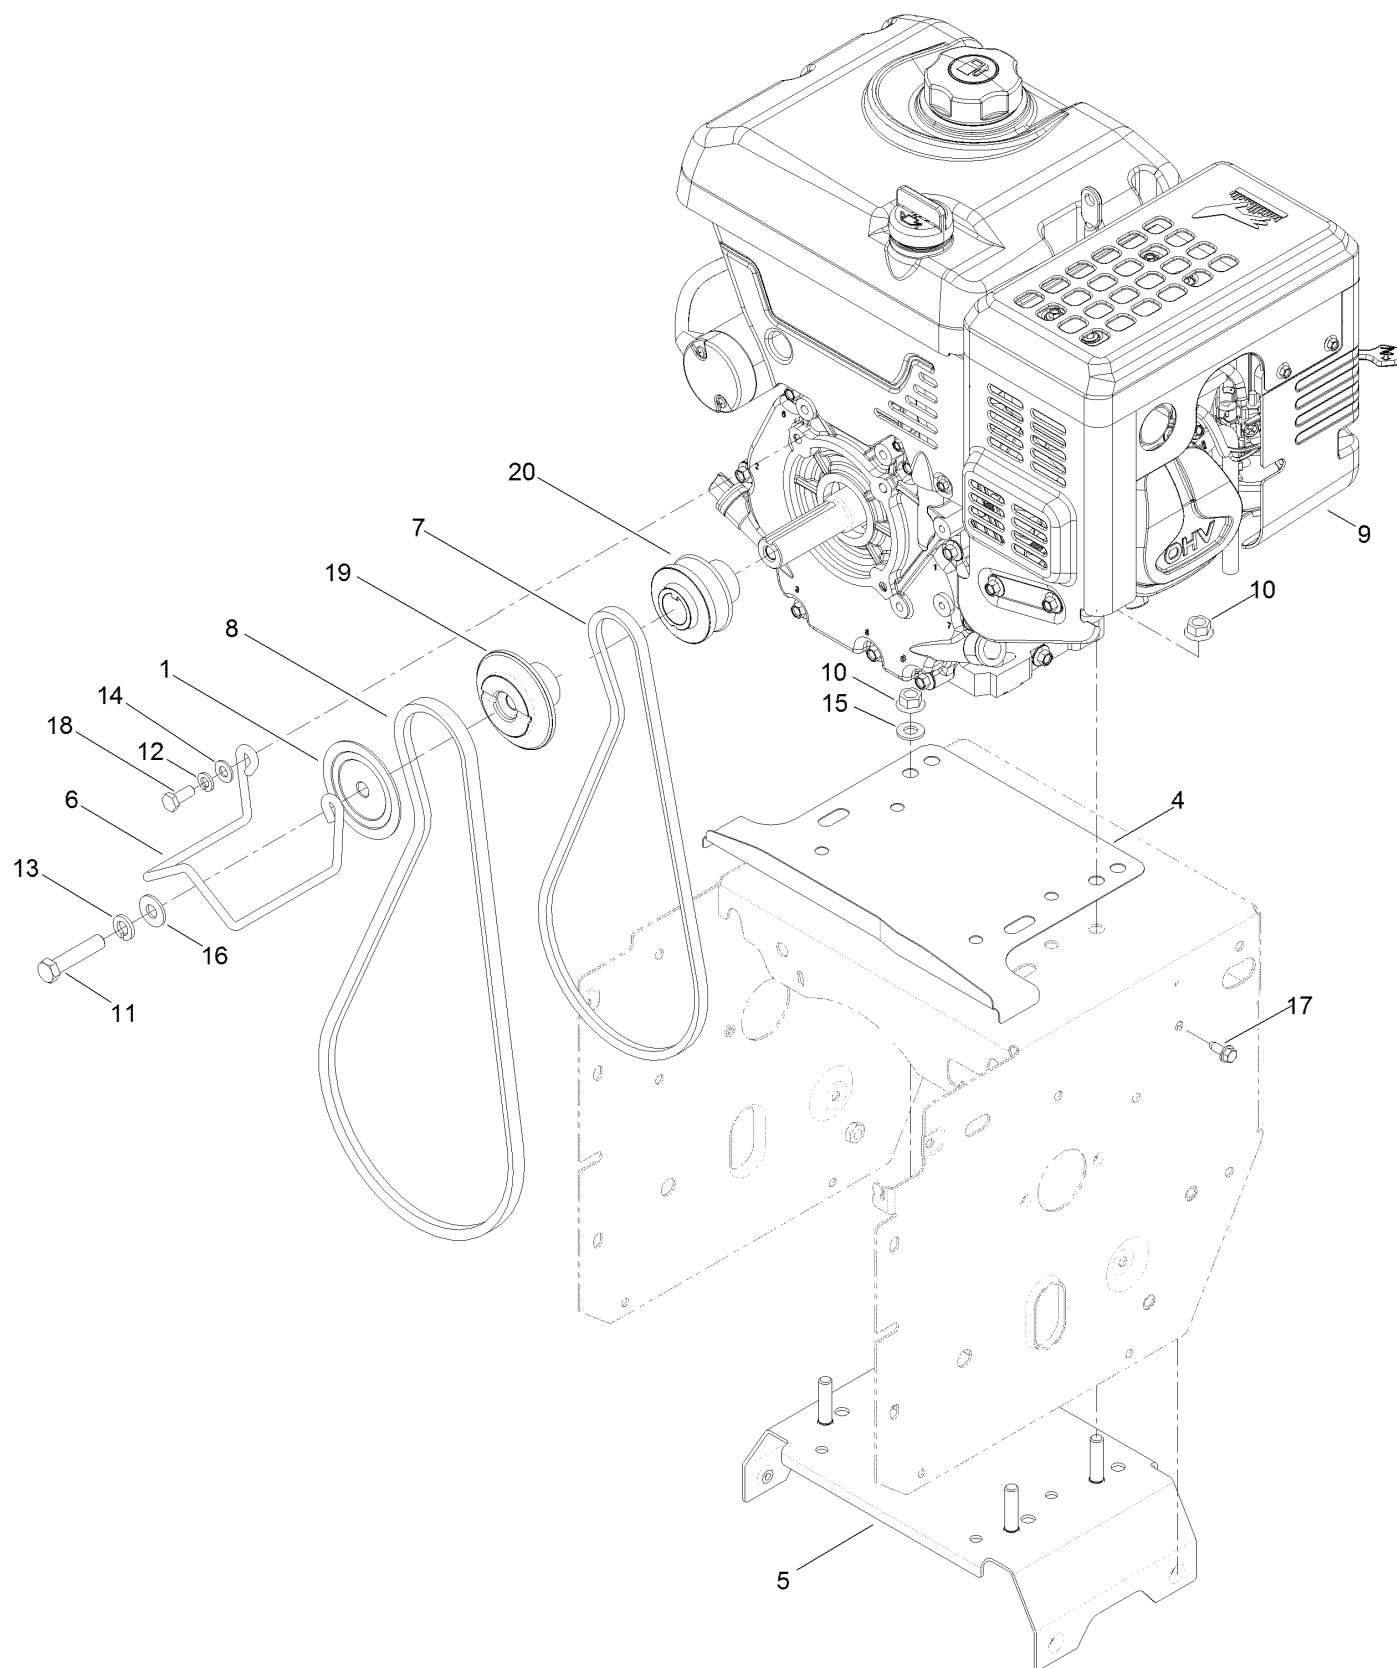


## Engine and Pulley Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 62-0940            | 1           | Sheave-Half, Impeller |
| 4           | 117-6022-01        | 1           | Shield-Drive          |
| 5           | 119-1560           | 1           | Frame Brace ASM       |
| 6           | 119-1562           | 1           | Guide-Belt            |
| 7           | 119-1564           | 1           | Belt-V                |
| 8           | 125-1145           | 1           | Belt-V                |
| 9           | 120-4423           | 1           | Engine-175Fds-1       |
| 10          | 120-3067           | 4           | Nut-Flange            |
| 11          | 3212-8             | 1           | Screw-HH              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 12          | 3253-4             | 2           | Washer-Lock             |
| 13          | 3253-6             | 1           | Washer-Lock             |
| 14          | 3256-23            | 2           | Washer-Plain            |
| 15          | 3256-24            | 1           | Washer-Flat             |
| 16          | 3256-4             | 1           | Washer-Flat             |
| 17          | 32144-10           | 4           | Screw-HWH               |
| 18          | 33114-020          | 2           | Screw-HH                |
| 19          | 121-6602           | 1           | Pulley-Engine, Impeller |
| 20          | 121-6617           | 1           | Pulley-Traction         |

 
# No. 1 Engine Assembly

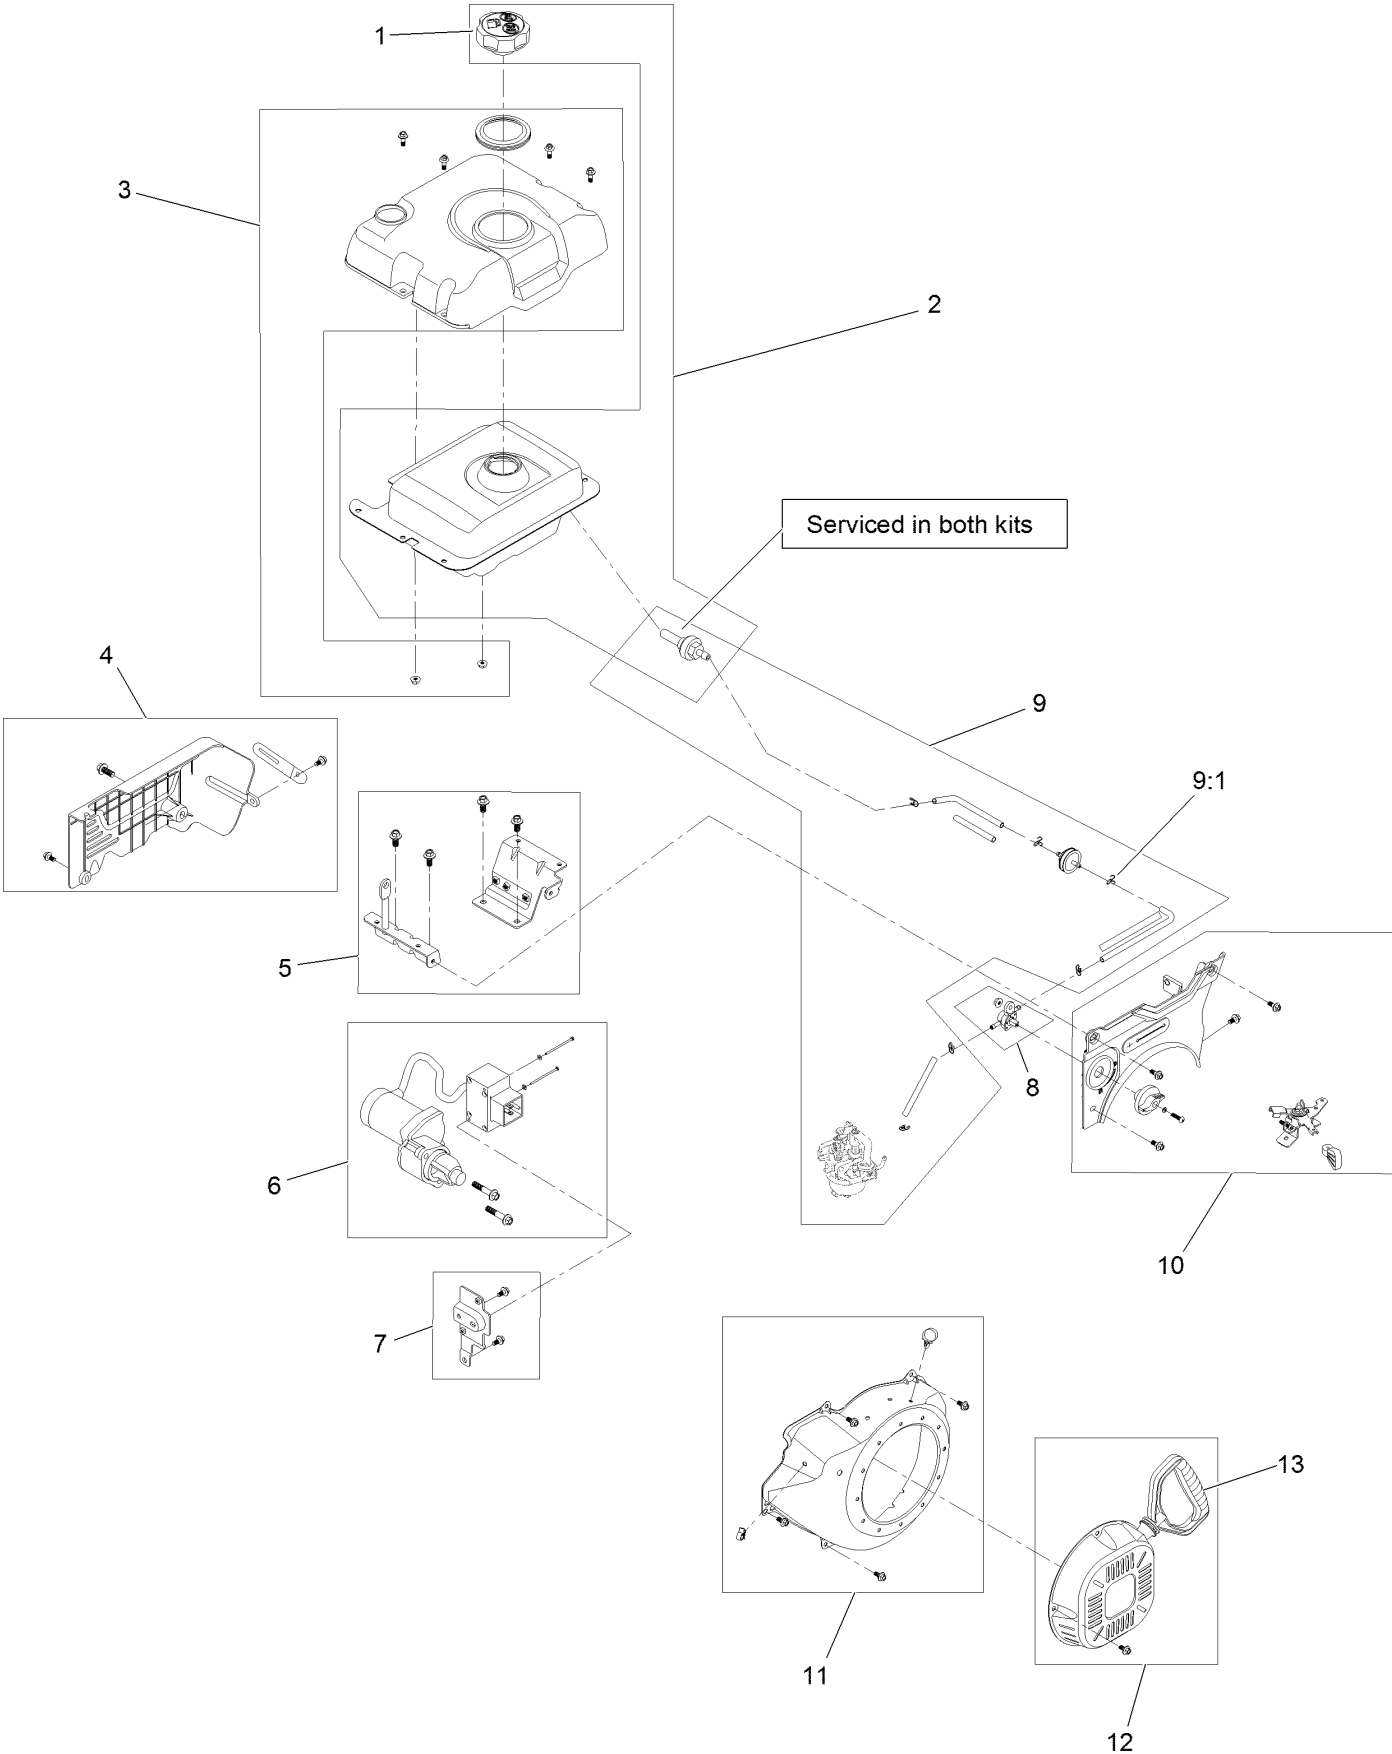

## No. 1 Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                    | 8           | 121-4109           | 1           | Fuel Shut-Off Valve Kit |
| 2           | 121-0414           | 1           | Fuel Tank And Cap Kit       | 9           | 121-0353           | 1           | Complete Fuel Line Kit  |
| 3           | 121-0349           | 1           | Fuel Tank Cover Kit         | 9:1         | 121-0087           | 6           | Clamp-Hose              |
| 4           | 121-0347           | 1           | Rear Panel And Hardware Kit | 10          | 121-4105           | 1           | Front Panel Kit         |
| 5           | 121-0351           | 1           | Tank Mount Bracket Kit      | 11          | 121-0274           | 1           | Recoil Shroud Kit       |
| 6           | 133-1592           | 1           | Starter Kit                 | 12          | 121-0342           | 1           | Recoil Kit              |
| 7           | 121-4103           | 1           | Switch Box Bracket Kit      | 13          | 121-0287           | 1           | Handle-Recoil           |

 Engine Assembly No. 2

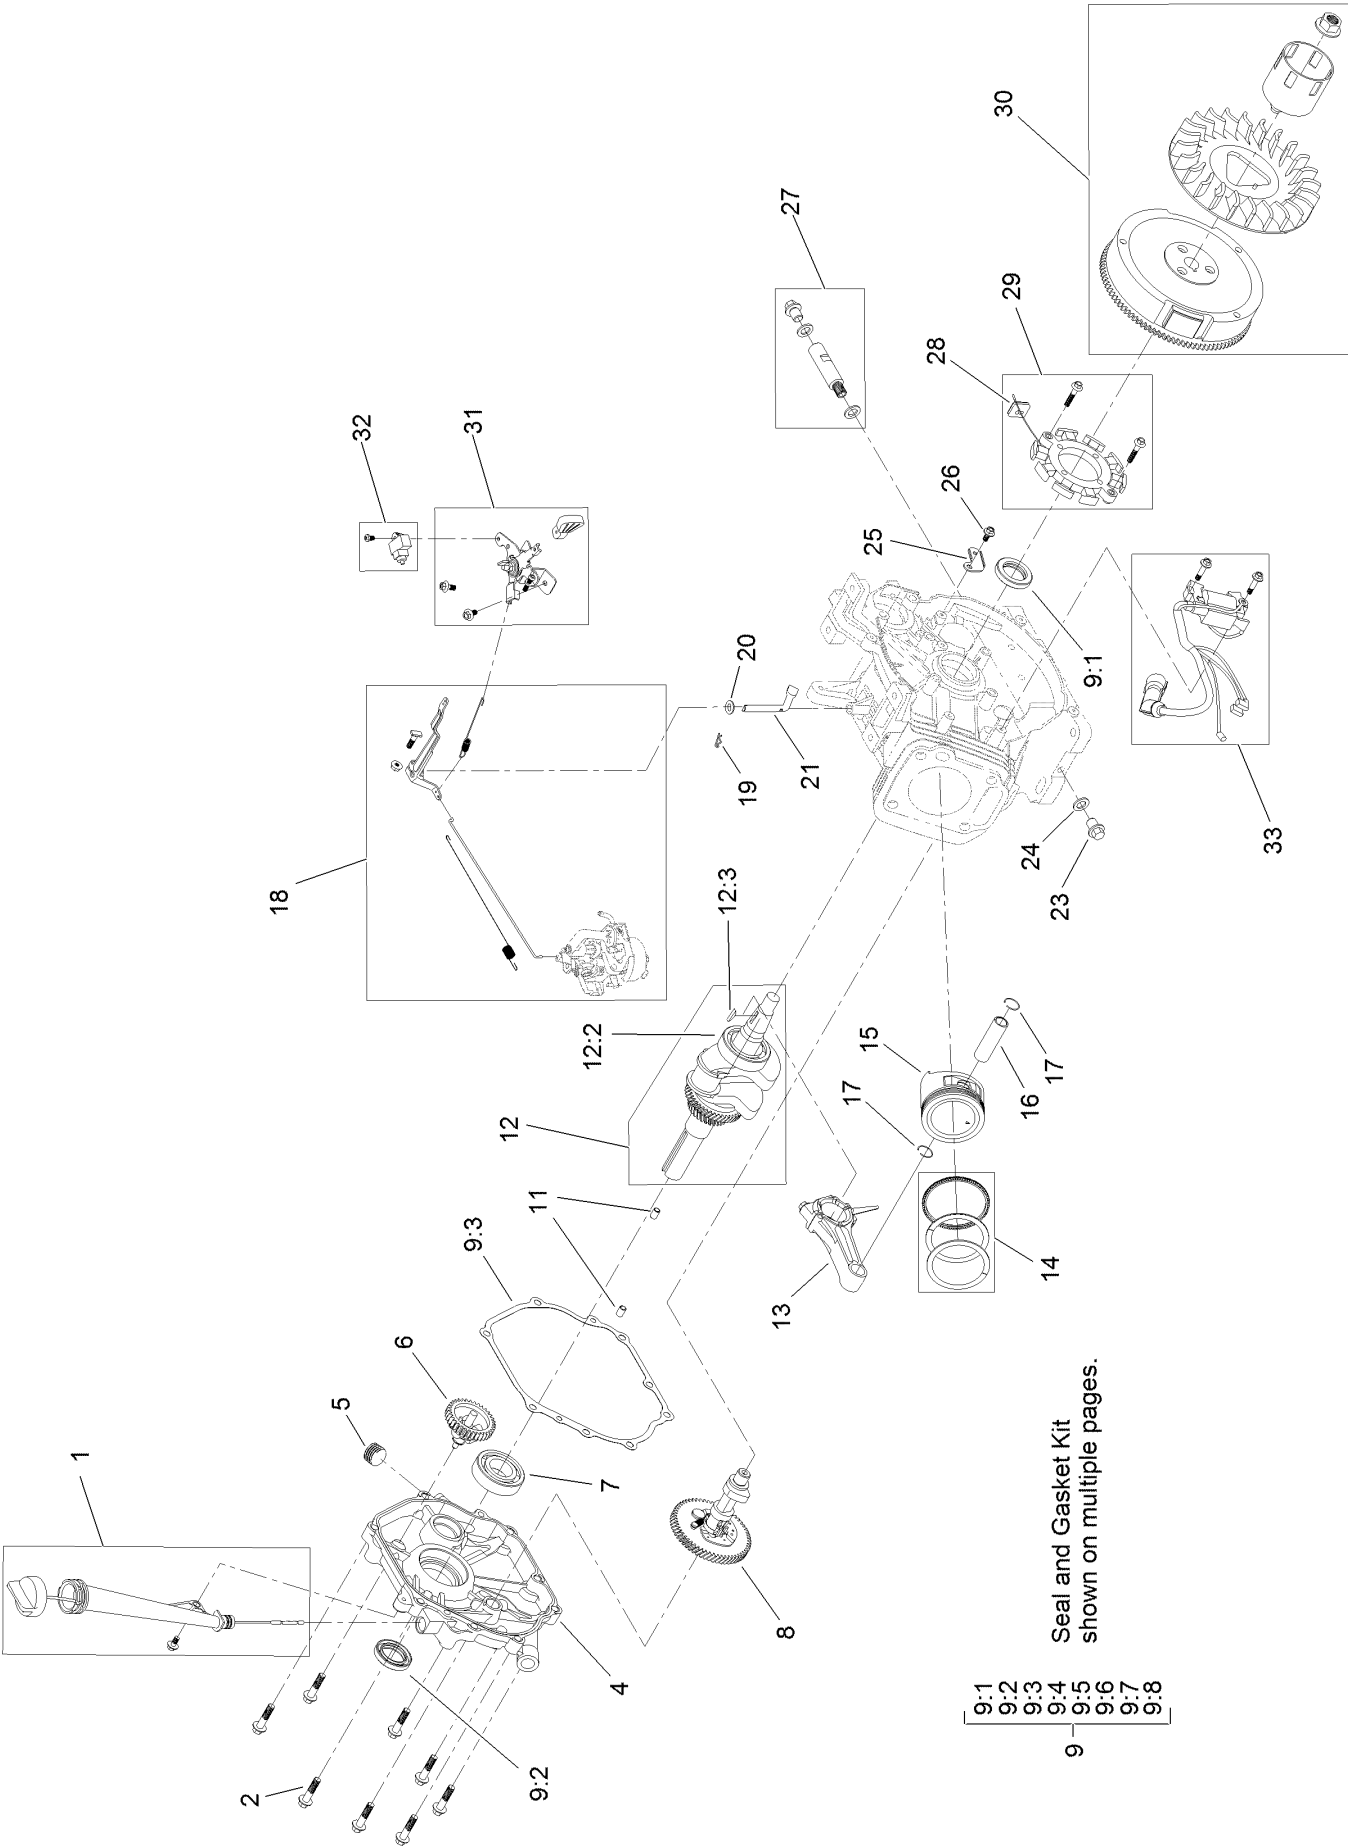


Seal and Gasket Kit  
shown on multiple pages.

- 9:1
- 9:2
- 9:3
- 9:4
- 9:5
- 9:6
- 9:7
- 9:8

## Engine Assembly No. 2 (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 133-9854           | 1           | Oil Fill Kit            | 13          | 121-0240           | 1           | Connecting Rod ASM    |
| 2           | 121-0299           | 8           | Screw-HHF               | 14          | 121-0239           | 1           | Set-Ring, Piston      |
| 4           | 133-9856           | 1           | Cover-Crankcase         | 15          | 121-0236           | 1           | Piston                |
| 5           | 133-9805           | 1           | Plug-Drain              | 16          | 121-0237           | 1           | Pin-Piston            |
| 6           | 121-0265           | 1           | Governor Gear ASM       | 17          | 121-0313           | 2           | Clip-Pin, Piston      |
| 7           | 121-0315           | 1           | Bearing-Main            | 18          | 121-0352           | 1           | Complete Governor Kit |
| 8           | 121-0242           | 1           | Camshaft ASM            | 19          | 120-4256           | 1           | Pin-Hair              |
| 9           | 121-0356           | 1           | Seal And Gasket Kit     | 20          | 121-0311           | 1           | Washer-Plain          |
| 9:1         | 121-0316           | 1           | Seal-Oil                | 21          | 121-0263           | 1           | Shaft-Governor        |
| 9:2         | 121-0317           | 1           | Seal-Oil                | 23          | 121-0222           | 1           | Screw-HHF             |
| 9:3         | 121-0228           | 1           | Gasket-Cover, Crankcase | 24          | 121-0310           | 1           | Washer-Plain          |
| 9:4         | 121-0232           | 1           | Gasket-Head, Cylinder   | 25          | 121-0278           | 1           | Clamp                 |
| 9:5         | 121-0234           | 1           | Gasket-Cover, Valve     | 26          | 121-0118           | 1           | Screw-HHF             |
| 9:6         | 121-0272           | 1           | Gasket-Exhaust          | 27          | 121-0341           | 1           | Drain Plug Kit        |
| 9:7         | 121-0252           | 1           | Gasket-Carburetor       | 28          | 121-0325           | 1           | Grommet-Rubber        |
| 9:8         | 121-0253           | 1           | Gasket-Carburetor       | 29          | 121-0362           | 1           | Stator Kit            |
| 11          | 121-0314           | 2           | Pin-Dowel               | 30          | 121-0354           | 1           | Fan And Flywheel Kit  |
| 12          | 121-0241           | 1           | Crankshaft ASM          | 31          | 121-4107           | 1           | Throttle Control Kit  |
| 12:2        | 121-0315           | 1           | Bearing-Main            | 32          | 121-4106           | 1           | Kill Switch Kit       |
| 12:3        | 120-4320           | 1           | Key-Woodruff            | 33          | 121-0334           | 1           | Ignition Module Kit   |

# Engine Assembly No. 3

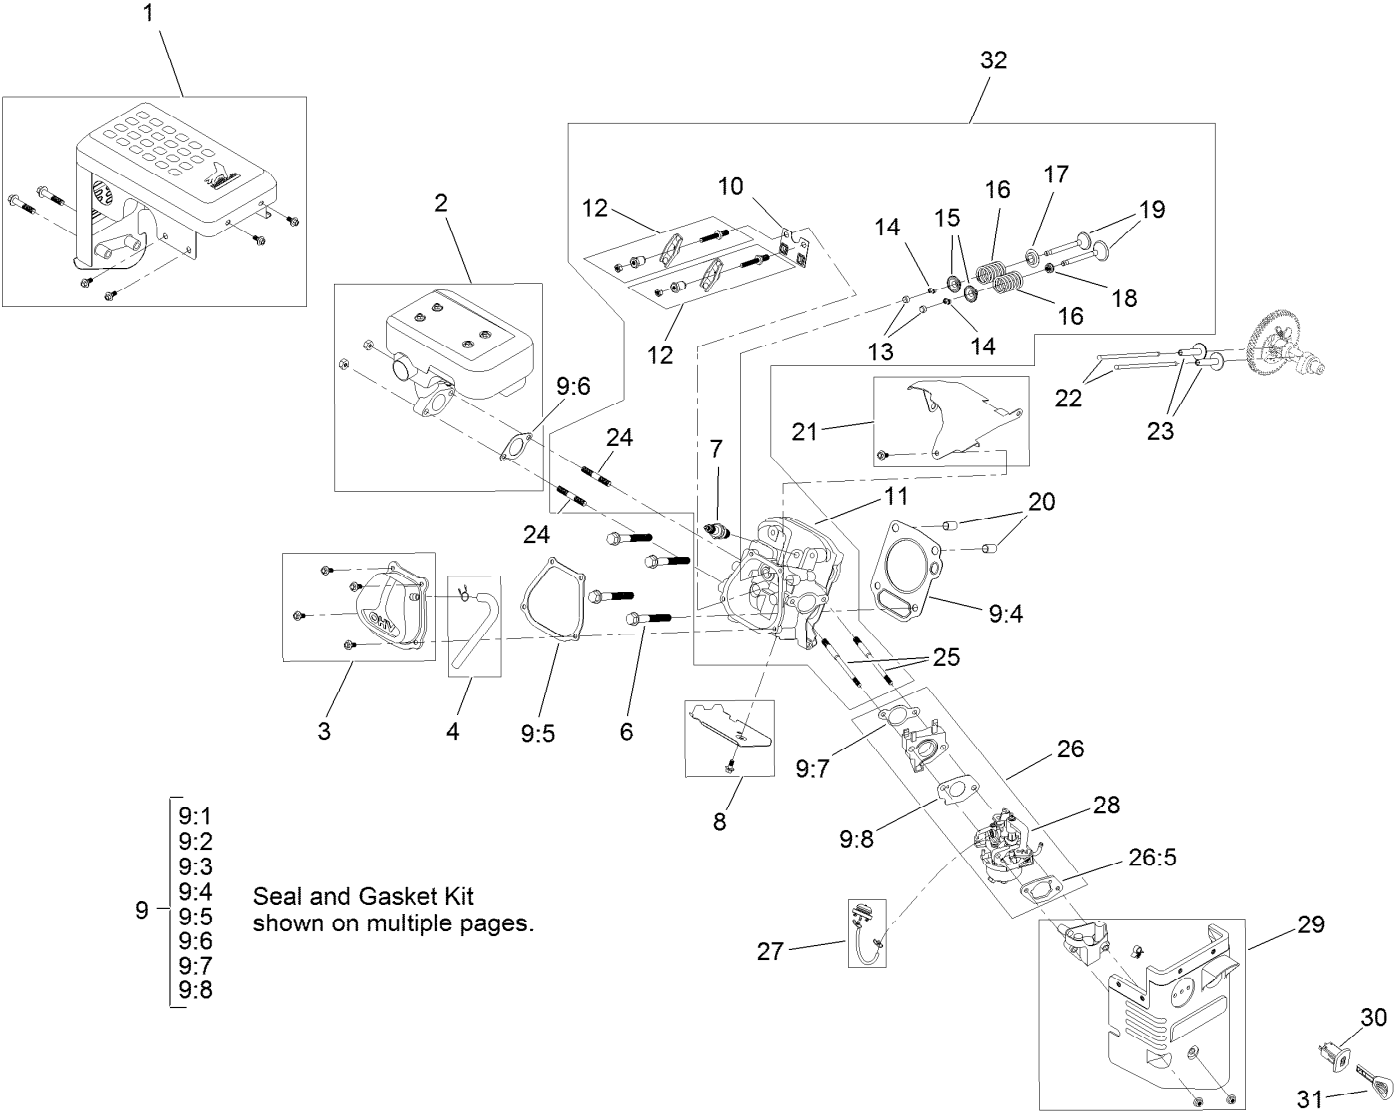


## Engine Assembly No. 3 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                  |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-------------------------------------|
| 1           | 121-4101           | 1           | Muffler Shield Kit      | 16          | 120-4305           | 2           | Spring-Valve                        |
| 2           | 127-9373           | 1           | Muffler Kit             | 17          | 120-4303           | 1           | Seat-Spring, Valve                  |
| 3           | 121-0343           | 1           | Valve Cover Kit         | 18          | 120-4304           | 1           | Seal-Stem, Valve                    |
| 4           | 121-0340           | 1           | Breather Tube Kit       | 19          | 121-0328           | 1           | Valve Kit                           |
| 6           | 121-0302           | 4           | Screw-HHF               | 20          | 120-4200           | 2           | Pin-Dowel                           |
| 7           | 119-1901           | 1           | Plug-Spark              | 21          | 121-4102           | 1           | Upper Heat Shroud Kit               |
| 8           | 121-0348           | 1           | Lower Heat Shroud Kit   | 22          | 121-0246           | 2           | Rod-Push                            |
| 9           | 121-0356           | 1           | Seal And Gasket Kit     | 23          | 120-4298           | 2           | Lifter-Valve                        |
| 9:1         | 121-0316           | 1           | Seal-Oil                | 24          | 121-0304           | 2           | Stud-Mount, Muffler                 |
| 9:2         | 121-0317           | 1           | Seal-Oil                | 25          | 121-0303           | 2           | Stud-Mount, Carburetor              |
| 9:3         | 121-0228           | 1           | Gasket-Cover, Crankcase | 26          | 121-0345           | 1           | Complete Carb Service Kit           |
| 9:4         | 121-0232           | 1           | Gasket-Head, Cylinder   | 26:5        | 121-0254           | 1           | Gasket-Coated, Rubber               |
| 9:5         | 121-0234           | 1           | Gasket-Cover, Valve     | 27          | 127-9372           | 1           | Primer Kit                          |
| 9:6         | 121-0272           | 1           | Gasket-Exhaust          | 28          | 127-9143           | 1           | Carb Repair Kit With<br>Gaskets     |
| 9:7         | 121-0252           | 1           | Gasket-Carburetor       | 29          | 121-0355           | 1           | Heater Box Kit                      |
| 9:8         | 121-0253           | 1           | Gasket-Carburetor       | 30          | 121-0283           | 1           | Switch-Key                          |
| 10          | 121-0247           | 1           | Plate-Guide, Push Rod   | 31          | 117-7728           | 1           | Key                                 |
| 11          | 121-0230           | 1           | Head-Cylinder           | 32          | 133-9855           | 1           | Complete Head ASM                   |
| 12          | 121-0245           | 2           | Rocker Arm ASM          | 99          | 121-4241           | 1           | High Altitude Kit-Power Max<br>HD ● |
| 13          | 121-0244           | 2           | Rotator-Valve           |             |                    |             |                                     |
| 14          | 120-4307           | 4           | Keeper-Valve            |             |                    |             |                                     |
| 15          | 120-4306           | 2           | Retainer-Spring, Valve  |             |                    |             |                                     |

● Not illustrated

 
# Engine Decal Assembly

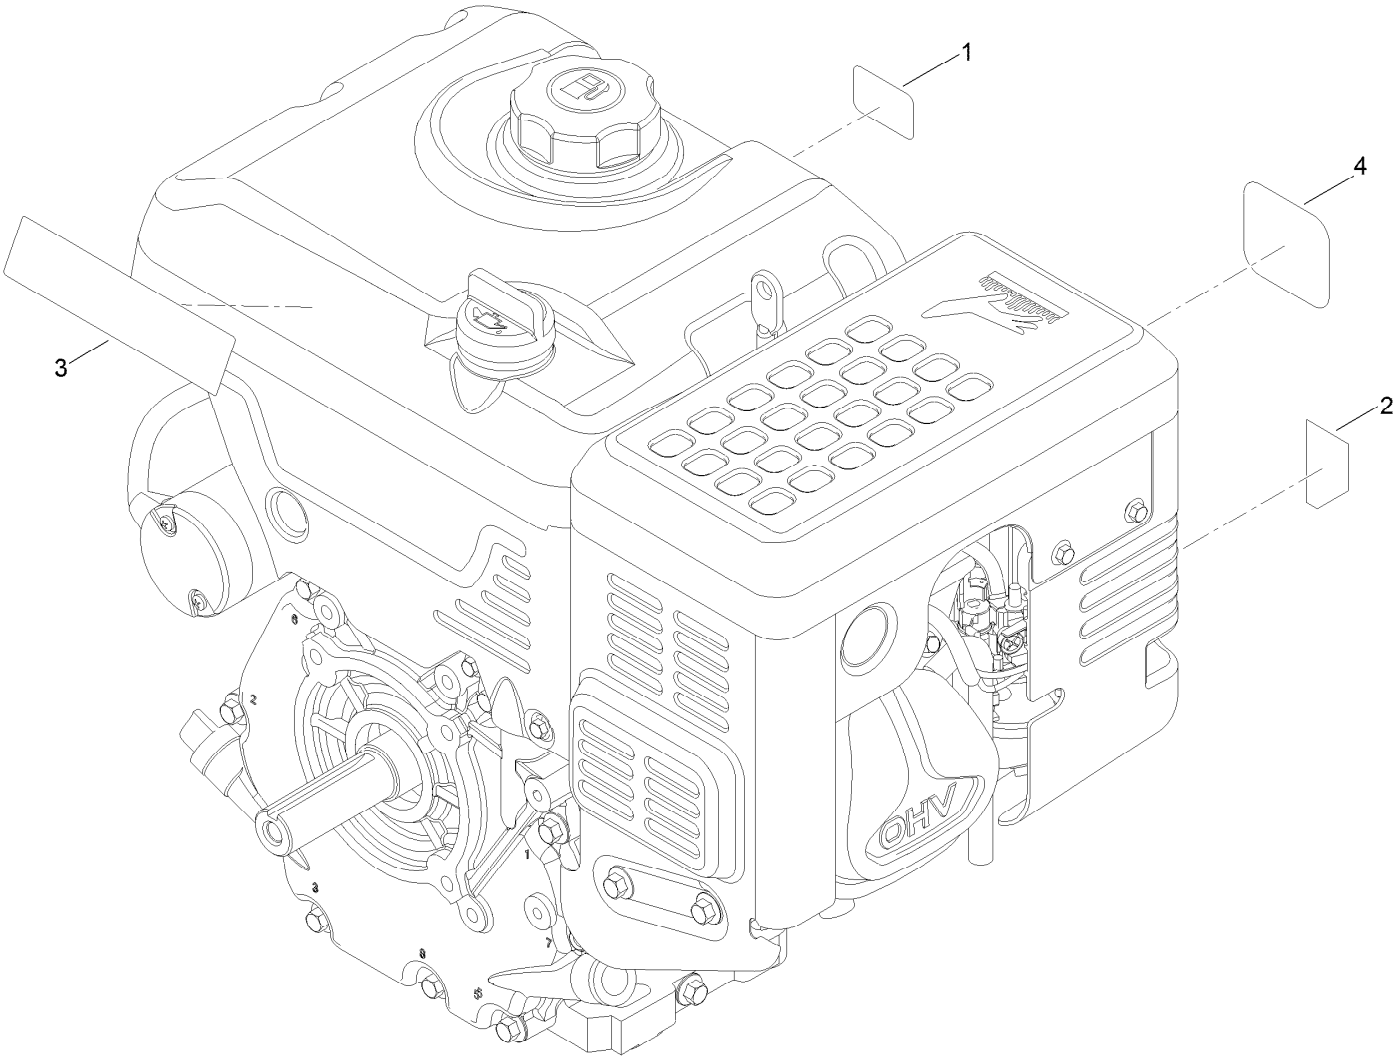

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-1102           | 1           | Decal-Throttle        | 3           | 120-9807           | 1           | Decal-Engine       |
| 2           | 120-9805           | 1           | Decal-Control, Engine | 4           | 120-9810           | 1           | Decal-Recoil       |

 
# Chute Assembly

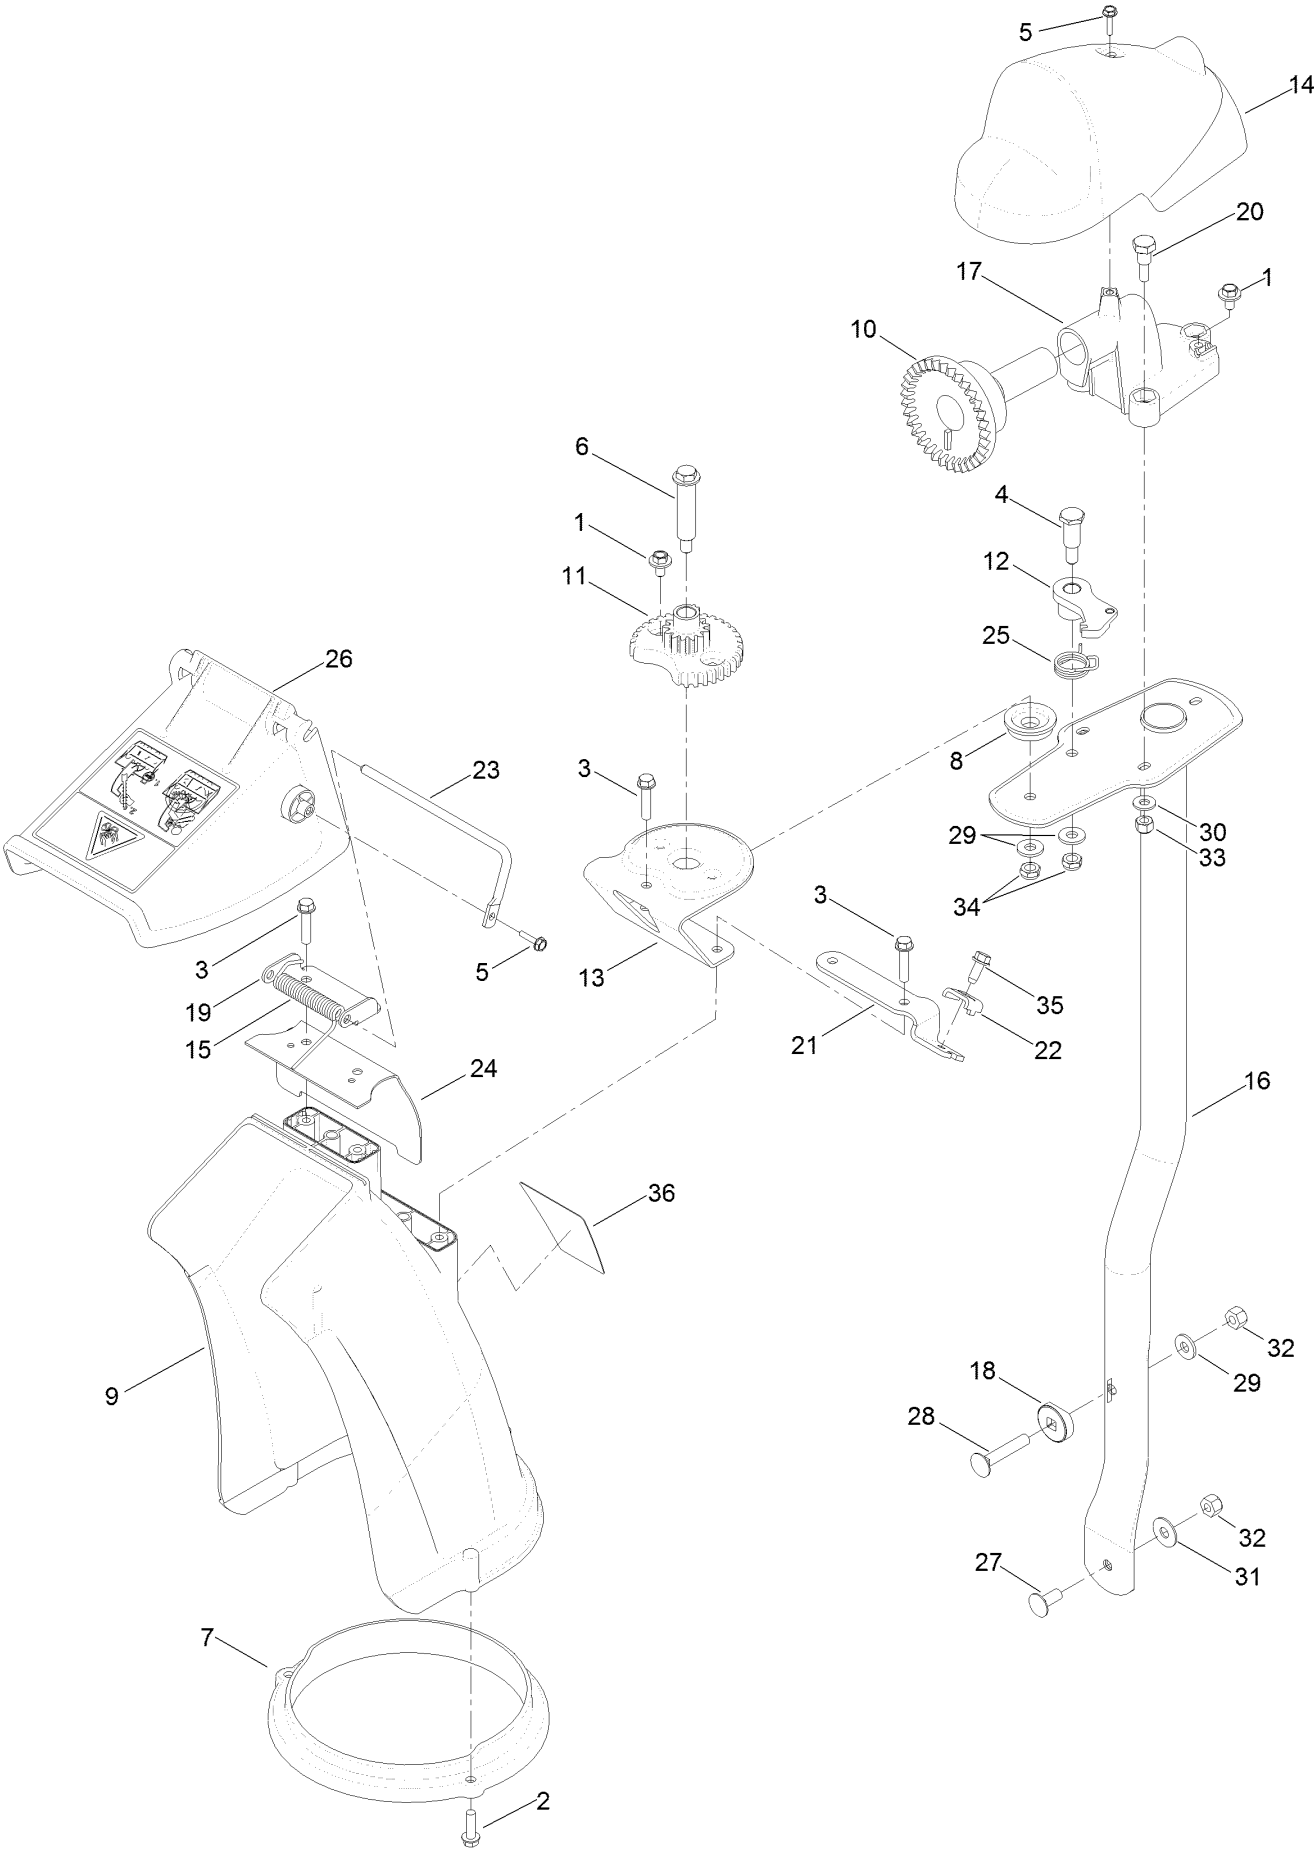

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 46-6810            | 3           | Screw And Washer ASM   | 19          | 106-7266           | 1           | Bracket-Deflector    |
| 2           | 46-8091            | 3           | Screw-HWH              | 20          | 106-7276           | 3           | Screw-Shoulder       |
| 3           | 46-8092            | 5           | Screw-Plastite         | 21          | 106-7296           | 1           | Bracket-Cable, Clamp |
| 4           | 63-2650            | 1           | Screw-Shoulder         | 22          | 106-7297           | 1           | Clamp-Cable          |
| 5           | 98-1375            | 2           | Screw-HWH              | 23          | 107-1021           | 1           | Rod-Deflector        |
| 6           | 100-9880           | 1           | Bolt-Shoulder          | 24          | 108-5052           | 1           | Seal-Chute           |
| 7           | 105-9991           | 1           | Ring-Chute             | 25          | 108-7315           | 1           | Spring-Torsion       |
| 8           | 106-4422           | 1           | Spacer-Chute           | 26          | 112-6629           | 1           | Deflector-Chute, CE  |
| 9           | 106-4440           | 1           | Chute-Discharge        | 27          | 3230-23            | 1           | Screw-CARR           |
| 10          | 106-4471           | 1           | Gear-Face              | 28          | 3230-5             | 1           | Screw-CARR           |
| 11          | 106-4472           | 1           | Gear-Chute             | 29          | 3256-2             | 3           | Washer-Flat          |
| 12          | 106-4476           | 1           | Latch-Chute            | 30          | 3256-22            | 3           | Washer-Flat          |
| 13          | 106-4582-03        | 1           | Bracket-Support, Chute | 31          | 3290-456           | 1           | Washer-Belleville    |
| 14          | 106-4585           | 1           | Cover-Gear, Chute      | 32          | 3296-29            | 2           | Nut-Lock, NI         |
| 15          | 106-4594           | 1           | Spring-Torsion         | 33          | 3296-42            | 3           | Nut-Lock, NI         |
| 16          | 106-7253-03        | 1           | Tube-Support           | 34          | 3296-47            | 2           | Nut-Lock, NI         |
| 17          | 106-7257           | 1           | Mount-Gear, Face       | 35          | 32144-10           | 1           | Screw-HWH            |
| 18          | 106-7260           | 1           | Washer-Curved          | 36          | 125-1121           | 1           | Decal-Guarantee      |

 
# Lever Chute Control Assembly

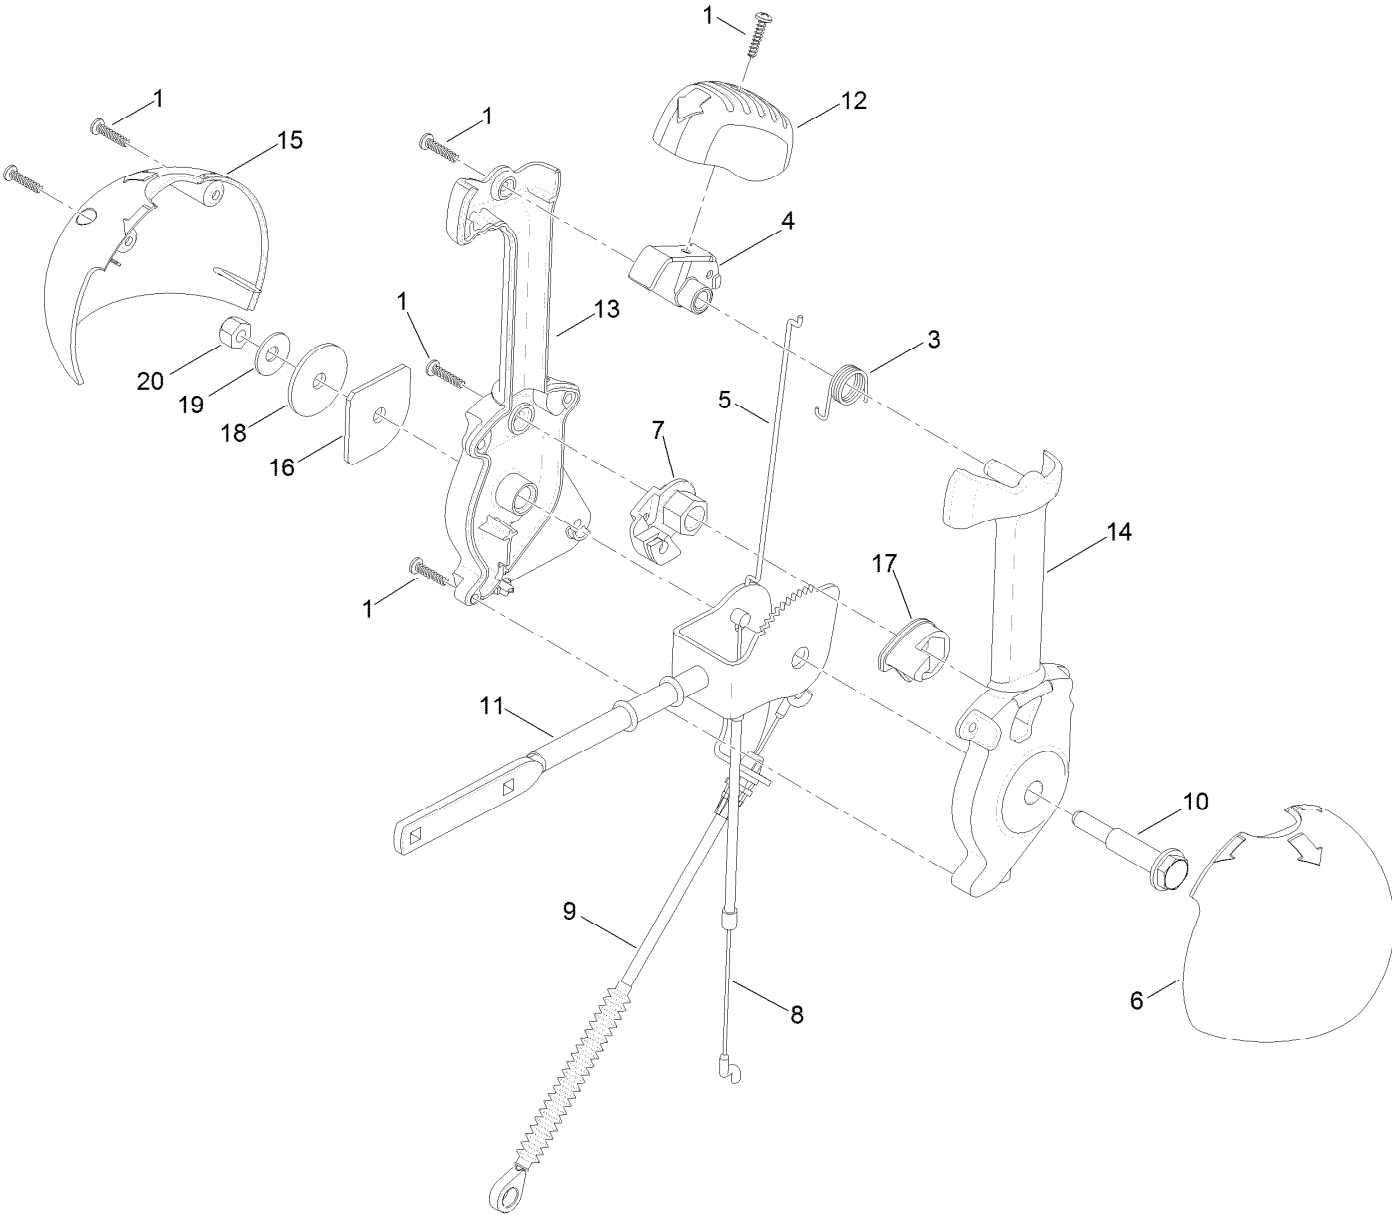

## Lever Chute Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 94-4496            | 6           | Screw-PPH                | 12          | 106-7280           | 1           | Cap-Lever                 |
| 3           | 105-9982           | 1           | Spring-Torsion           | 13          | 106-7281           | 1           | Lever-Control, Chute (RH) |
| 4           | 105-9984           | 1           | Trigger-Latch            | 14          | 106-7282           | 1           | Lever-Control, Chute (LH) |
| 5           | 105-9985           | 1           | Link-Latch               | 15          | 106-7292           | 1           | Cover-Lever, Chute (RH)   |
| 6           | 105-9986           | 1           | Cover-Lever, Chute (LH)  | 16          | 106-7295           | 1           | Plate-Friction            |
| 7           | 105-9988           | 1           | Lever-Cable, Deflector   | 17          | 106-7310           | 1           | Pawl-Latch                |
| 8           | 125-1113           | 1           | Cable-Release, Chute     | 18          | 107-3002           | 1           | Washer-Nylon              |
| 9           | 105-9990           | 1           | Cable-Control, Deflector | 19          | 3290-456           | 1           | Washer-Belleville         |
| 10          | 105-9995           | 1           | Screw-Shoulder           | 20          | 3296-29            | 1           | Nut-Lock, NI              |
| 11          | 106-4479           | 1           | Rod-Control, Chute       |             |                    |             |                           |

 
# Handle Assembly

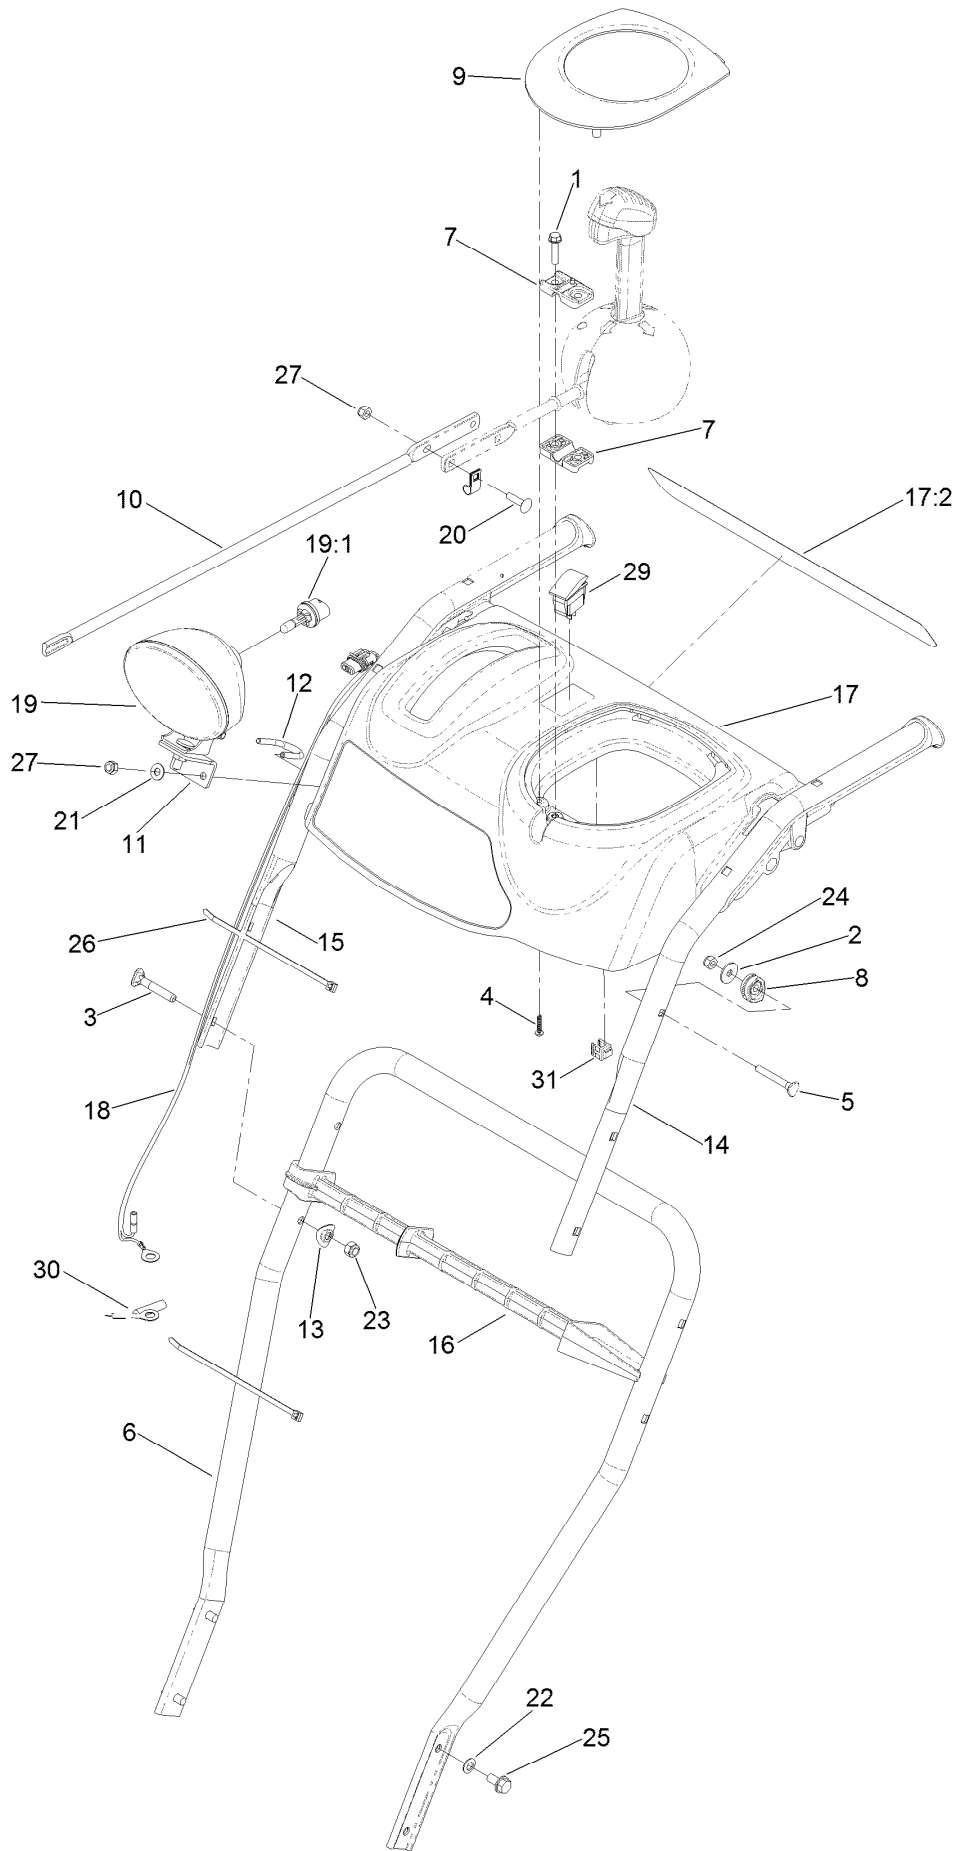

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 46-8092            | 2           | Screw-Plastite       | 17:2        | 127-5991           | 1           | Decal-Control                  |
| 2           | 87-6630            | 2           | Washer-Plain         | 18          | 127-5950           | 1           | Harness-Wire, Heated Grips     |
| 3           | 92-2260            | 4           | Screw-Handle         | 19          | 120-3074           | 1           | Headlamp ASM                   |
| 4           | 94-4496            | 2           | Screw-PPH            | 19:1        | 120-3075           | 1           | Lamp-12 Volt                   |
| 5           | 95-4453            | 2           | Screw                | 20          | 3229-30            | 2           | Screw-CARR                     |
| 6           | 105-9981-03        | 1           | Handle-Lower         | 21          | 3256-1             | 2           | Washer-Flat                    |
| 7           | 105-9987           | 2           | Support-Rod          | 22          | 3290-475           | 4           | Washer-Belleville              |
| 8           | 106-4509           | 2           | Clamp-Cable          | 23          | 3296-72            | 4           | Nut-Lock, NI                   |
| 9           | 106-4586           | 1           | Cover-Panel, Control | 24          | 3296-73            | 2           | Nut-Lock, NI                   |
| 10          | 106-7283           | 1           | Rod-Chute, Front     | 25          | 32144-14           | 4           | Screw-HWHTF                    |
| 11          | 107-1020-03        | 1           | Bracket-Light        | 26          | 614249             | 2           | Tie-Cable                      |
| 12          | 107-3024           | 1           | Clamp                | 27          | 3296-73            | 4           | Nut-Lock, NI                   |
| 13          | 107-3844           | 4           | Washer               | 29          | 127-5999           | 1           | Switch-Rocker,<br>Off-None-On  |
| 14          | 127-5952-03        | 1           | Handle-Upper, LH     | 30          | 127-5998           | 1           | Harness-Wire, Ground<br>Jumper |
| 15          | 127-5953-03        | 1           | Handle-Upper, RH     | 31          | 32180-078          | 1           | Clip-Edge                      |
| 16          | 110-3408           | 1           | Stick-Cleanout       |             |                    |             |                                |
| 17          | 127-5990           | 1           | Control Panel ASM    |             |                    |             |                                |

 
# Control Assembly

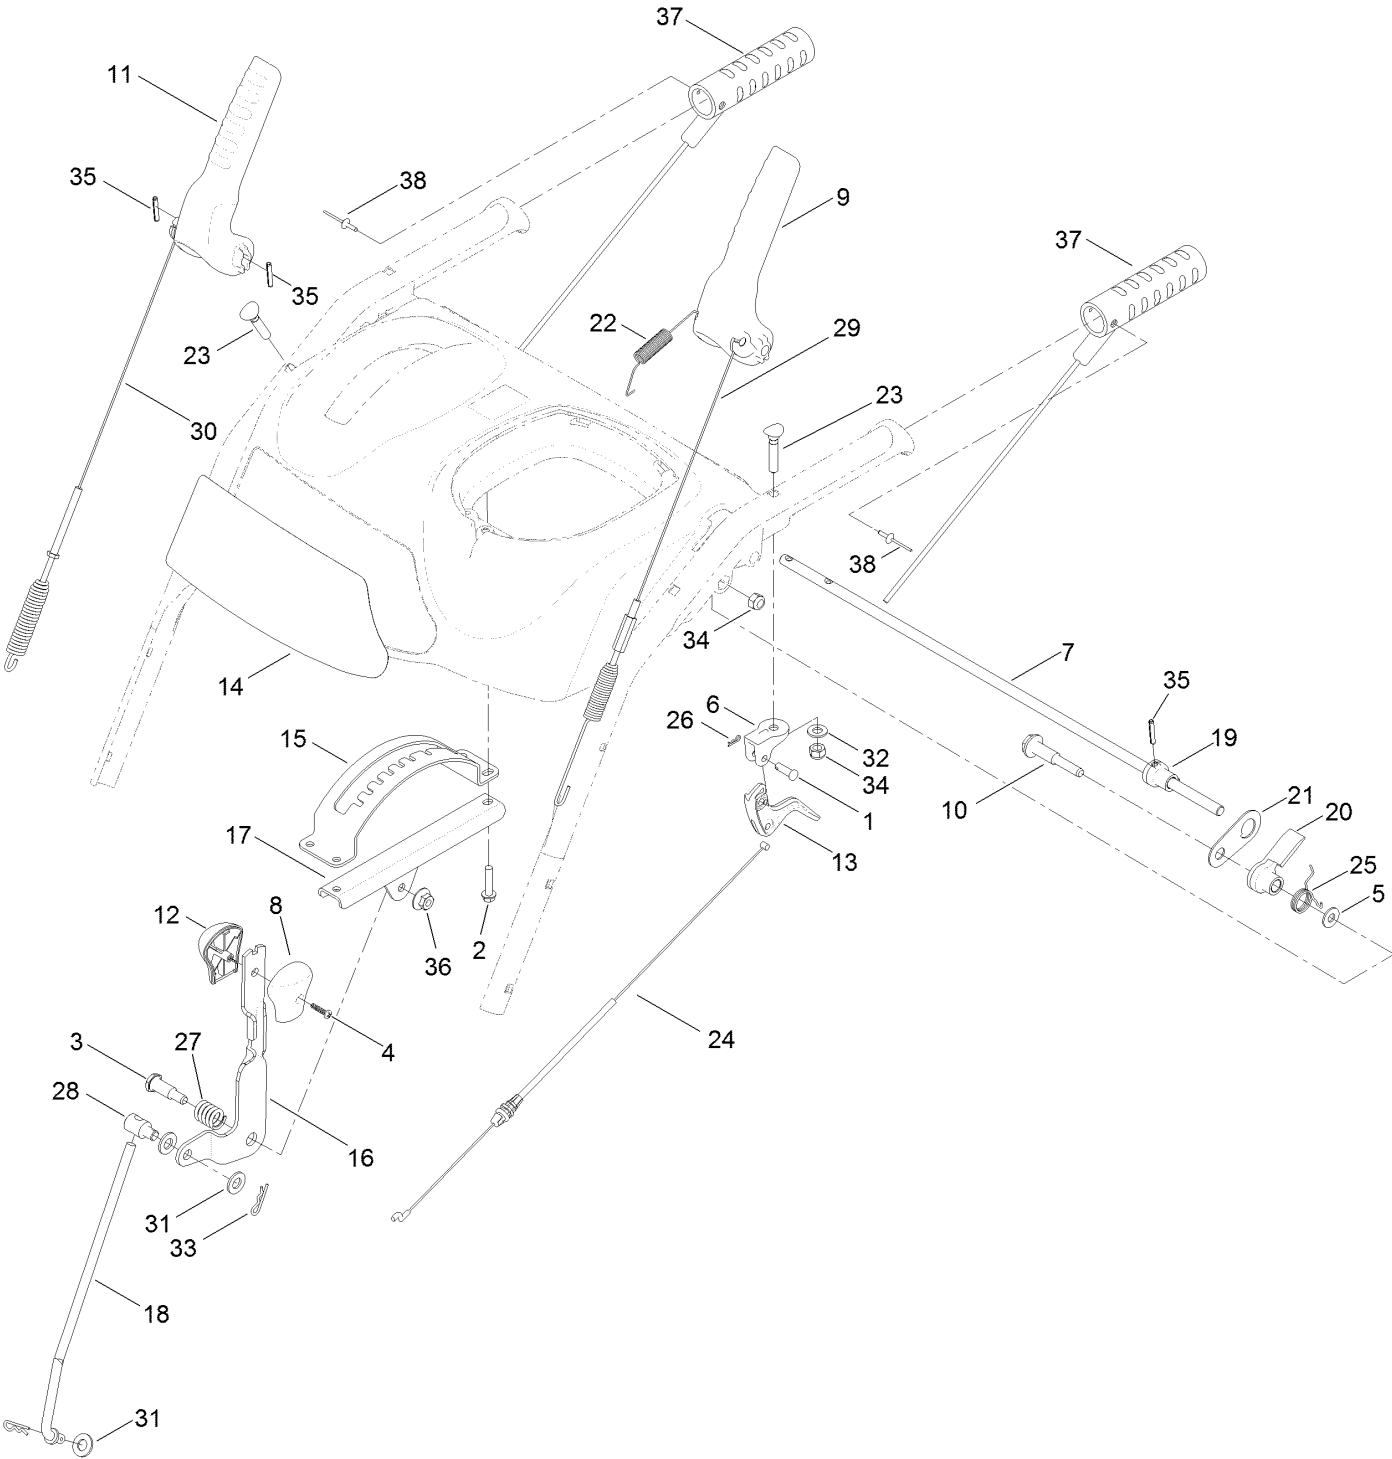

## Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 1-808265           | 2           | Pin-Clevis              | 20          | 108-0023           | 1           | Latch-Lockout      |
| 2           | 46-8092            | 4           | Screw-Plastite          | 21          | 107-3000           | 1           | Link-Lockout       |
| 3           | 63-2650            | 1           | Screw-Shoulder          | 22          | 107-3001           | 1           | Spring-Tension     |
| 4           | 94-4496            | 1           | Screw-PPH               | 23          | 107-3018           | 4           | Screw-Handle       |
| 5           | 98-3499            | 1           | Washer-Flat             | 24          | 107-8896           | 2           | Cable-Clutch       |
| 6           | 105-9980           | 2           | Mount-Clutch, Lever     | 25          | 108-0024           | 1           | Spring-Torsion     |
| 7           | 105-9996           | 1           | Rod-Lockout             | 26          | 108-2992           | 2           | Pin-Hair           |
| 8           | 105-9999           | 1           | Knob-Shift, LH          | 27          | 108-7313           | 1           | Spring-Compression |
| 9           | 125-7946           | 1           | Lever-Traction          | 28          | 110-3446           | 1           | Trunnion-Rod       |
| 10          | 106-4412           | 1           | Screw-Shoulder          | 29          | 120-0132           | 1           | Cable-Traction     |
| 11          | 125-7947           | 1           | Lever-Augur             | 30          | 120-3086           | 1           | Cable-Augur        |
| 12          | 106-4423           | 1           | Knob-Shift, RH          | 31          | 3256-24            | 3           | Washer-Flat        |
| 13          | 106-4505           | 2           | Lever-Clutch            | 32          | 3256-70            | 4           | Washer-Flat        |
| 14          | 130-9781           | 1           | Decal-Control Panel     | 33          | 3290-307           | 2           | Pin-Cotter         |
| 15          | 106-7277-03        | 1           | Guide-Selector, Speed   | 34          | 3296-72            | 5           | Nut-Lock, NI       |
| 16          | 106-7278-03        | 1           | Selector-Speed          | 35          | 32121-125          | 3           | Pin-Spring         |
| 17          | 130-9775-03        | 1           | Bracket-Selector, Speed | 36          | 32128-13           | 1           | Nut-HF             |
| 18          | 107-1005           | 1           | Rod-Shift               | 37          | 127-5951           | 2           | Grip-Heated        |
| 19          | 107-1043           | 1           | Cam-Lockout             | 38          | 3290-271           | 4           | Rivet-Pop          |
 
# Wheel Clutch Assembly

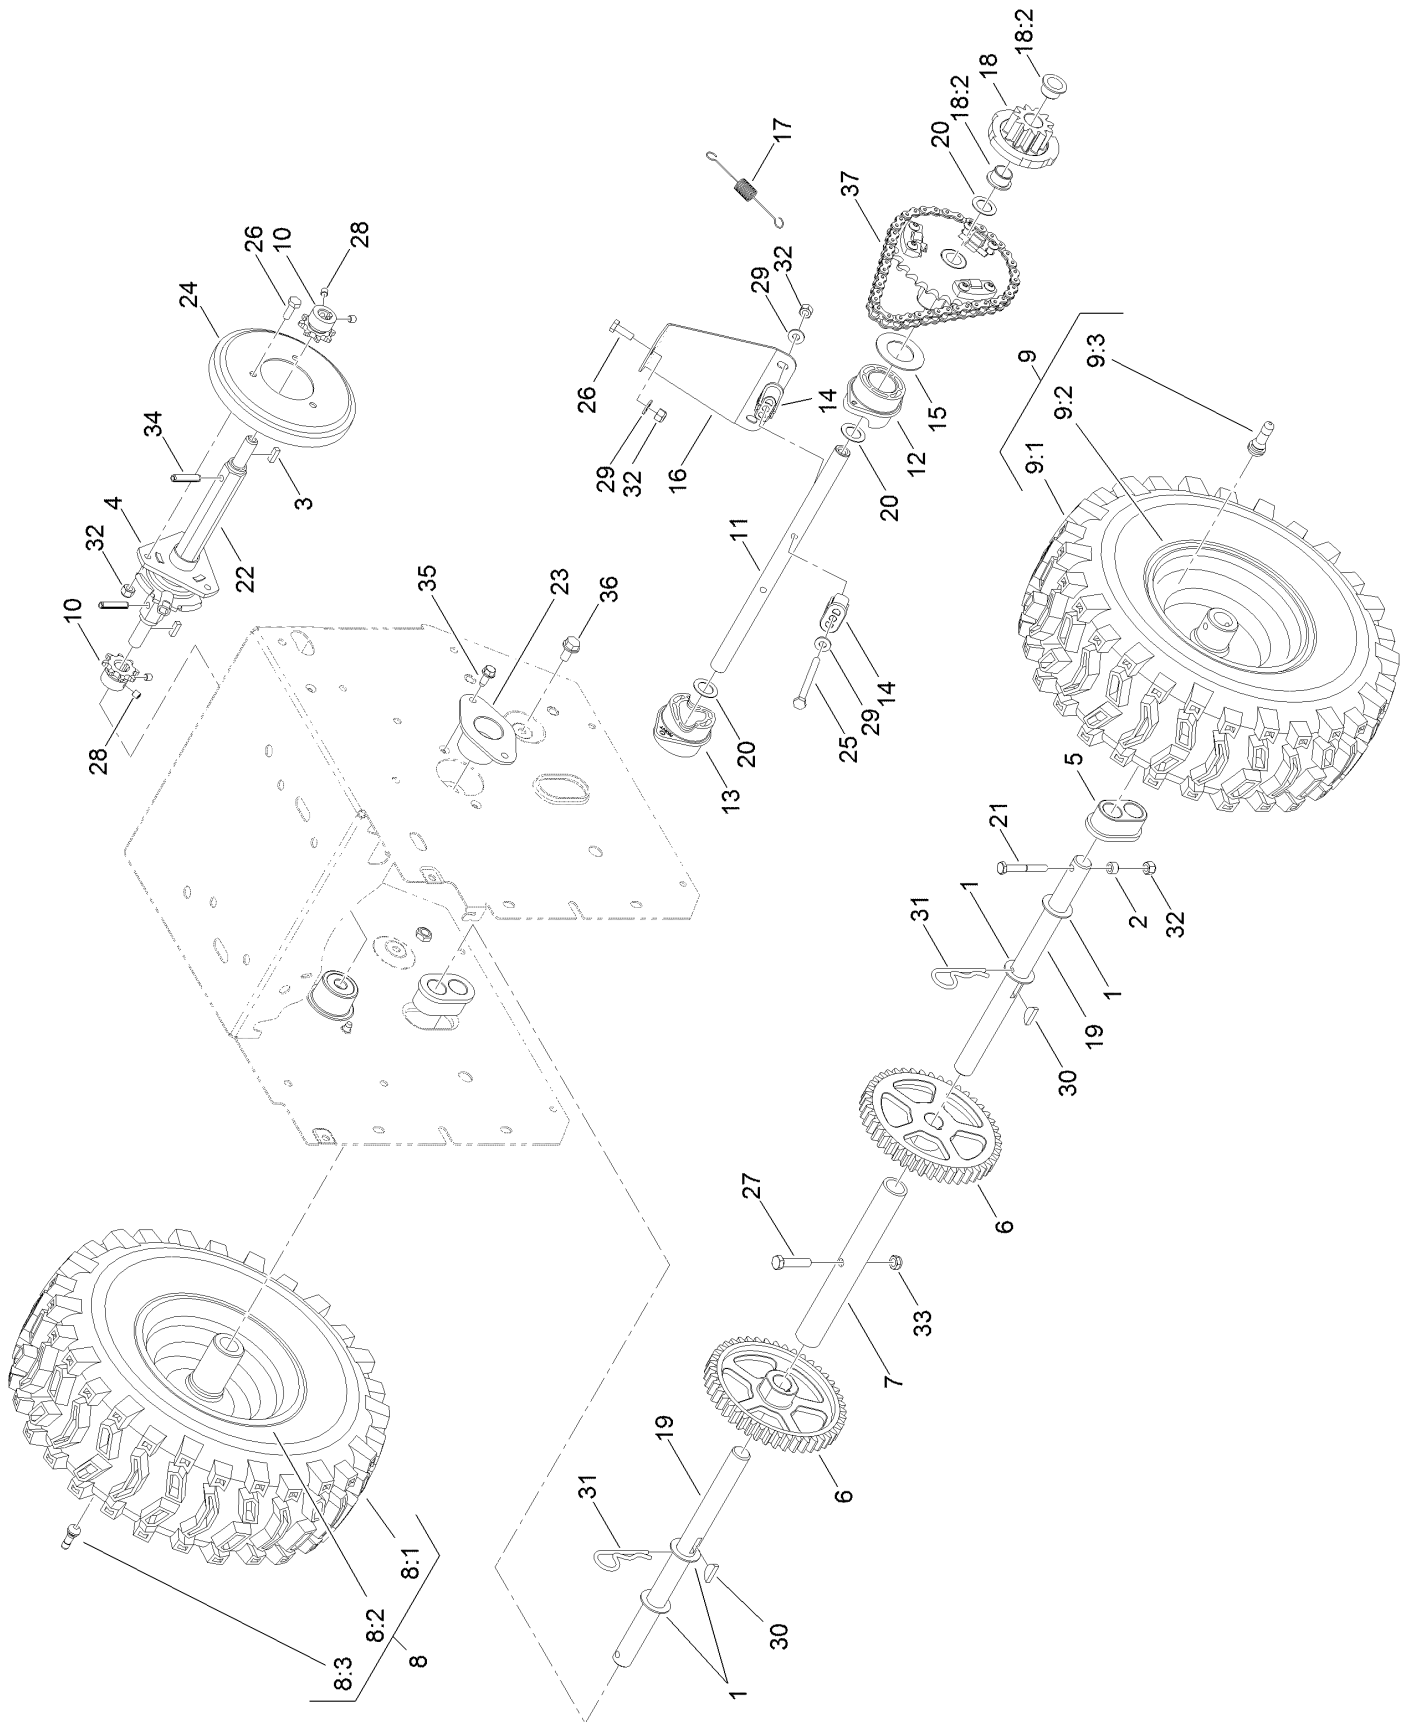


## Wheel Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 3-8664             | 4           | Washer-Thrust           | 18          | 107-8894           | 2           | 11T Gear ASM       |
| 2           | 55-9370            | 2           | Spacer-Blade, Rotor     | 18:2        | 108-2973           | 2           | Bushing-Flange     |
| 3           | 94-8850            | 2           | Key-Square              | 19          | 107-8898           | 2           | Shaft-Axle         |
| 4           | 106-4434           | 1           | Trunnion-Hex            | 20          | 108-0015           | 4           | Washer-Flat        |
| 5           | 106-4558           | 2           | Bearing-Axle            | 21          | 108-2975           | 2           | Screw-HH           |
| 6           | 106-4572           | 2           | Gear-Axle, 44 Tooth     | 22          | 108-7314           | 1           | Shaft-Hex          |
| 7           | 106-7259           | 1           | Tube-Axle               | 23          | 108-7319           | 2           | Retainer-Bearing   |
| 8           |                    | 1           | RH Wheel And Tire ASM ● | 24          | 119-1567           | 1           | Wheel-Friction     |
| 8:1         | 121-6610           | 1           | Rim-Tire                | 25          | 321-23             | 2           | Screw-HH           |
| 8:2         | 121-6611           | 1           | Tire                    | 26          | 321-4              | 4           | Screw-HH           |
| 8:3         | 232-27             | 1           | Stem-Valve              | 27          | 322-17             | 1           | Screw-HH           |
| 9           |                    | 1           | LH Wheel And Tire ASM ● | 28          | 3245-32            | 4           | Screw-HSH          |
| 9:1         | 121-6610           | 1           | Rim-Tire                | 29          | 3256-22            | 5           | Washer-Flat        |
| 9:2         | 121-6611           | 1           | Tire                    | 30          | 3257-7             | 2           | Key-Woodruff       |
| 9:3         | 232-27             | 1           | Stem-Valve              | 31          | 3290-343           | 2           | Pin-Hair           |
| 10          | 106-7317           | 2           | Sprocket-8 Tooth        | 32          | 3296-42            | 8           | Nut-Lock, NI       |
| 11          | 107-8883           | 1           | Shaft-Intermediate      | 33          | 3296-47            | 1           | Nut-Lock, NI       |
| 12          | 107-8887           | 1           | Collar-Shift, LH        | 34          | 32121-9            | 2           | Pin-Roll, Slotted  |
| 13          | 107-8888           | 1           | Collar-Shift, RH        | 35          | 32144-10           | 4           | Screw-HWH          |
| 14          | 107-8889           | 4           | Guide-Collar            | 36          | 32144-14           | 2           | Screw-HWHTF        |
| 15          | 107-8891           | 2           | Washer-Thrust           | 37          | 108-0016           | 2           | Chain-Roller       |
| 16          | 107-8892-03        | 1           | Brace-Collar, Shift     | 37          | 2710-6             | 2           | Link-Connecting    |
| 17          | 107-8893           | 2           | Spring-Extension        |             |                    |             |                    |

● Not serviced separately
 
# Wheel Clutch Sprocket Assembly

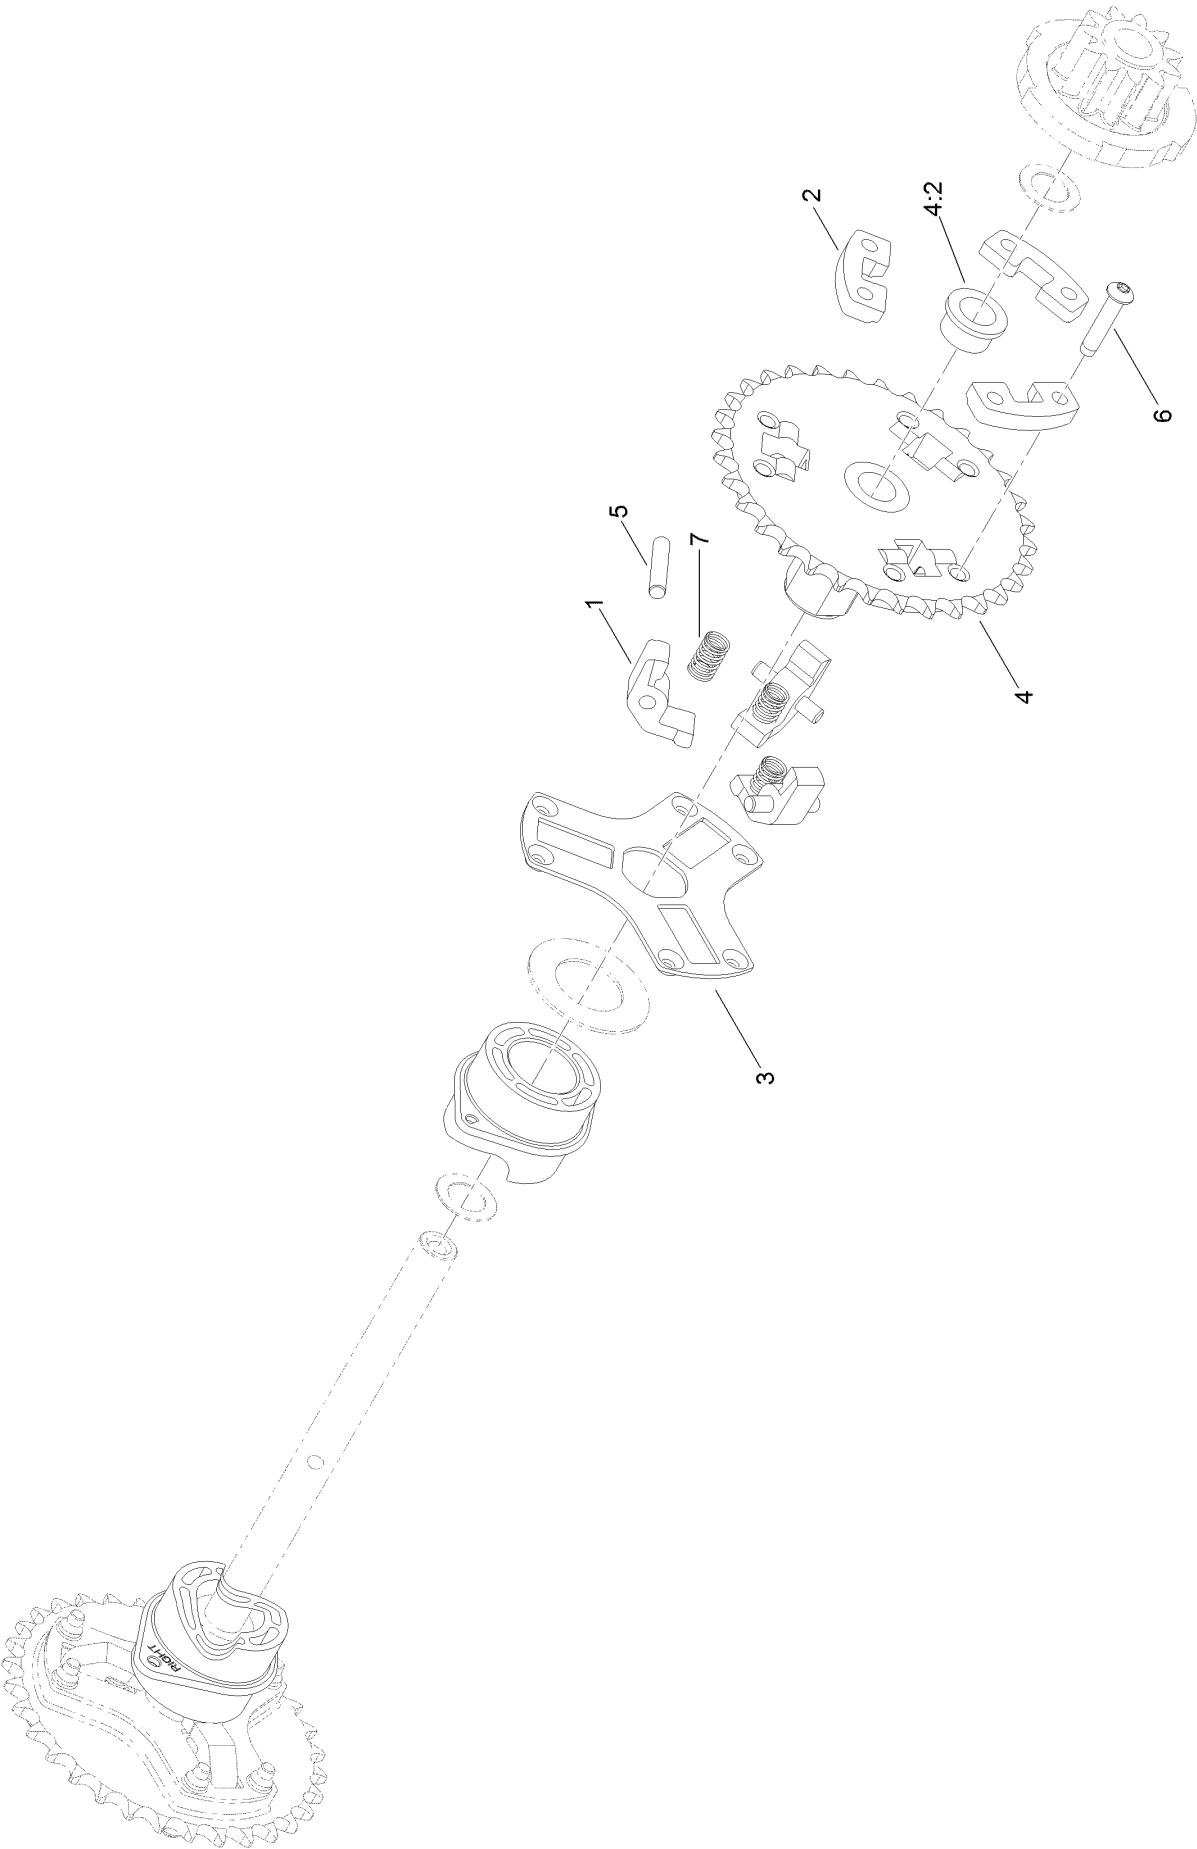

## Wheel Clutch Sprocket Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 107-8879           | 6           | Pawl-Clutch        | 4:2         | 108-2973           | 2           | Bushing-Flange            |
| 2           | 107-8880           | 6           | Support-Pawl       | 5           | 107-8899           | 6           | Pin-Dowel                 |
| 3           | 107-8886           | 2           | Retainer-Pin, Pawl | 6           | 108-0035           | 12          | Screw-TTH, Thread Rolling |
| 4           | 107-8895           | 2           | 32T Sprocket ASM   | 7           | 107-8885           | 6           | Spring-Compression        |

# Attachments and Accessories

## For 38801 Power Max Heavy Duty 928 OHXE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Weight Kit .....                                   | 107-3815   |
| 28in Drift Breaker.....                            | 107-3817   |
| Heavy-Duty Skid Kit.....                           | 125-1104   |
| Snow Cab Kit .....                                 | 127-5960   |
| Engine Maintenance Kit.....                        | 138-0704   |
| Non-Marking Skid Kit .....                         | 38211      |
| Tire Chain Kit, for 16in Tires.....                | 38215      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Toro 2-Stage Cover.....                            | 490-7466   |
| Plain 2-Stage Cover.....                           | 490-7467   |

**Notes:**



**Count on it.**