

LAWN-BOY®

19" GOLD SERIES WALK-BEHIND MOWER

MODEL NO. 10401C – 8900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Shroud and Muffler Plate	1	Carburetor Assembly	8
Deck, Muffler Cover, Blade & Wheels	2	Air Filter Assembly	9
Upper Handle Assembly	3	Starter	10
Lower Handle Assembly	4	Numeric Parts Index	11–12
Flywheel & Wire Harness Assembly	5	Maintenance	13–14
Crankshaft & Cylinder Assembly	6–7		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Part No. 681683
Leaf Bag	Model No. 89804		

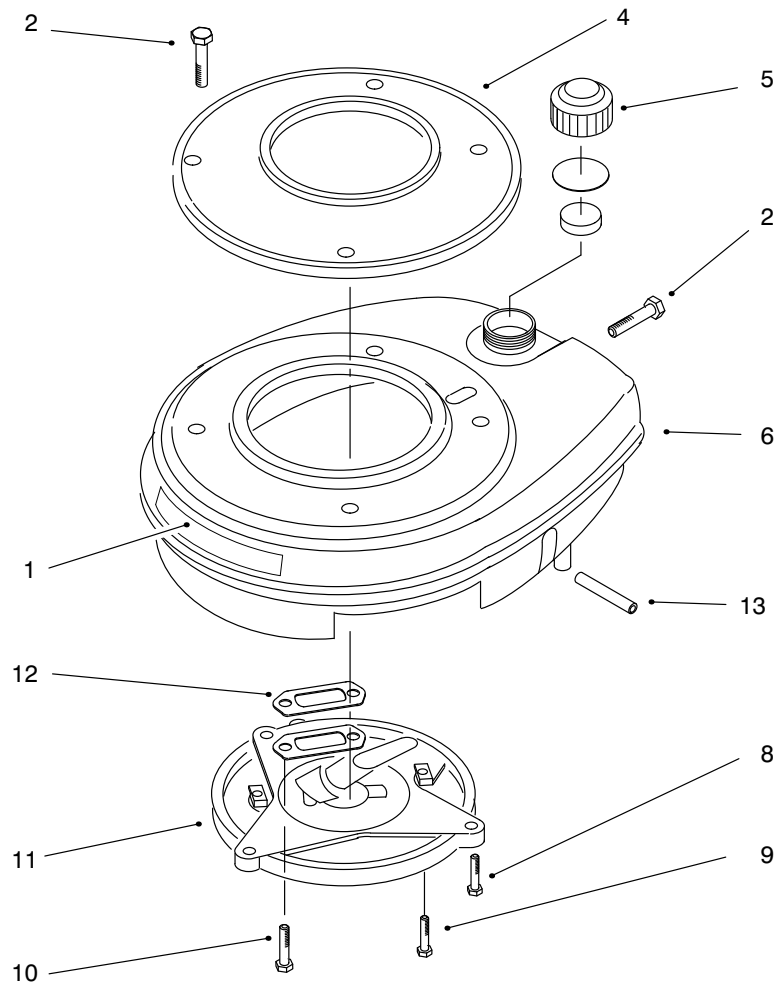


C-2196A

ENGINE SHROUD AND MUFFLER PLATE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8615	Applique	1	8	92-1648	Screw - Muffler Plt. to Hsg.	3
2	32144-53	Screw	5	9	613500	Screw - Muffler Plt. to Block	1
4	684570	Starter Base	1	10	607601	Screw	3
5	682755	Fuel Cap	1	11	92-1054	Plate - Muffler	1
*	607213	Gasket	1	12	93-1233	Gasket - Exhaust	1
*	609150	Baffle	1	13	612783	Hose - Gas	1
6	16-5539	Shroud - Engine	1				

*Not Illustrated

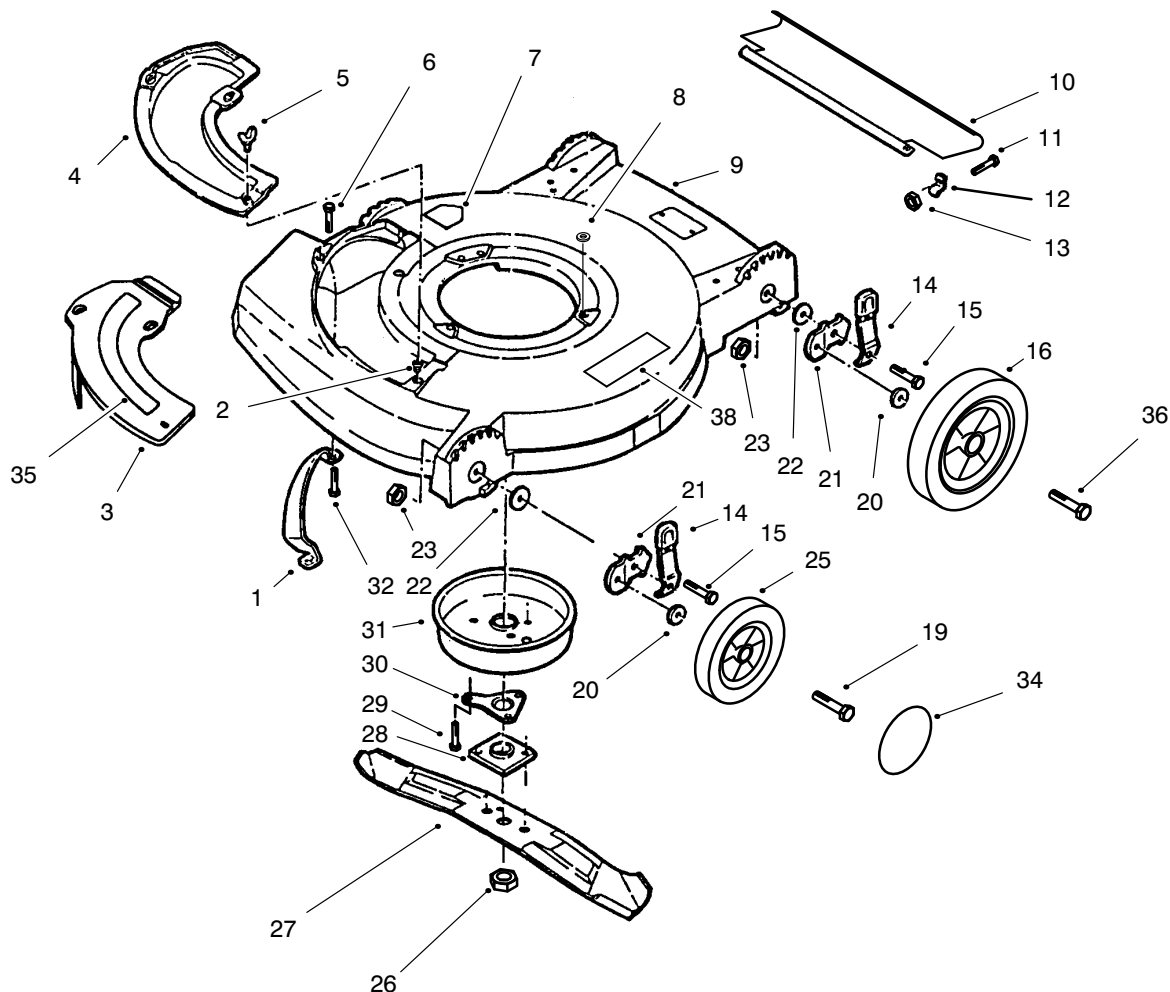


C-2197A

DECK, MUFFLER COVER, BLADE & WHEELS

Ref. No.	Part No.	Description	No. Used
1	608159	Toe Bar	1
2	94-1610	Grommet	3
3	684619	Cover - Plate, Mulch (Incl. Ref. #35)	1
4	607560	Cover Plate	1
5	614682	Nut - Wing	1
6	614677	Screw - Plate Mounting	2
7	39-5770	Decal - Danger (English)	1
8	3256-4	Washer - Flat	3
9	16-2169	Housing Assembly (Incl. Ref. # 2, 7, 38 & 39)	1
10	93-7369	Shield - Trailing	1
11	321-39	Screw - Trailing Shield	2
12	93-7693	Clamp	2
13	3296-73	Nut	2
14	92-4880	Knob and Spring Assembly	4
15	610646	Bolt - Shoulder	4

Ref. No.	Part No.	Description	No. Used
16	684777	Wheel - Rear 8"	2
19	92-1099	Bolt - Wheel 6"	2
20	40-1940	Washer	4
21	608833	Bracket - Wheel Ht. Adjust	4
22	608834	Washer - Wheel Ht. Adjust	4
23	603773	Nut - Wheel Ht. Adjust	4
25	684776	Wheel - Front 6"	2
26	603164	Nut	1
27	612079	Blade 19"	1
28	677525	Collar and Plate Assembly	1
29	609471	Screw - Muff. to Muff. Plate	3
30	609786	Support - Crankshaft	1
31	682876	Muffler Cover Assembly	1
32	46-6811	Screw	2
34	92-1604	Hub Cap	4
35	92-8620	Decal	1
36	614650	Bolt - Wheel 8"	2
38	93-7250	Decal - Warning	1


*Not Illustrated

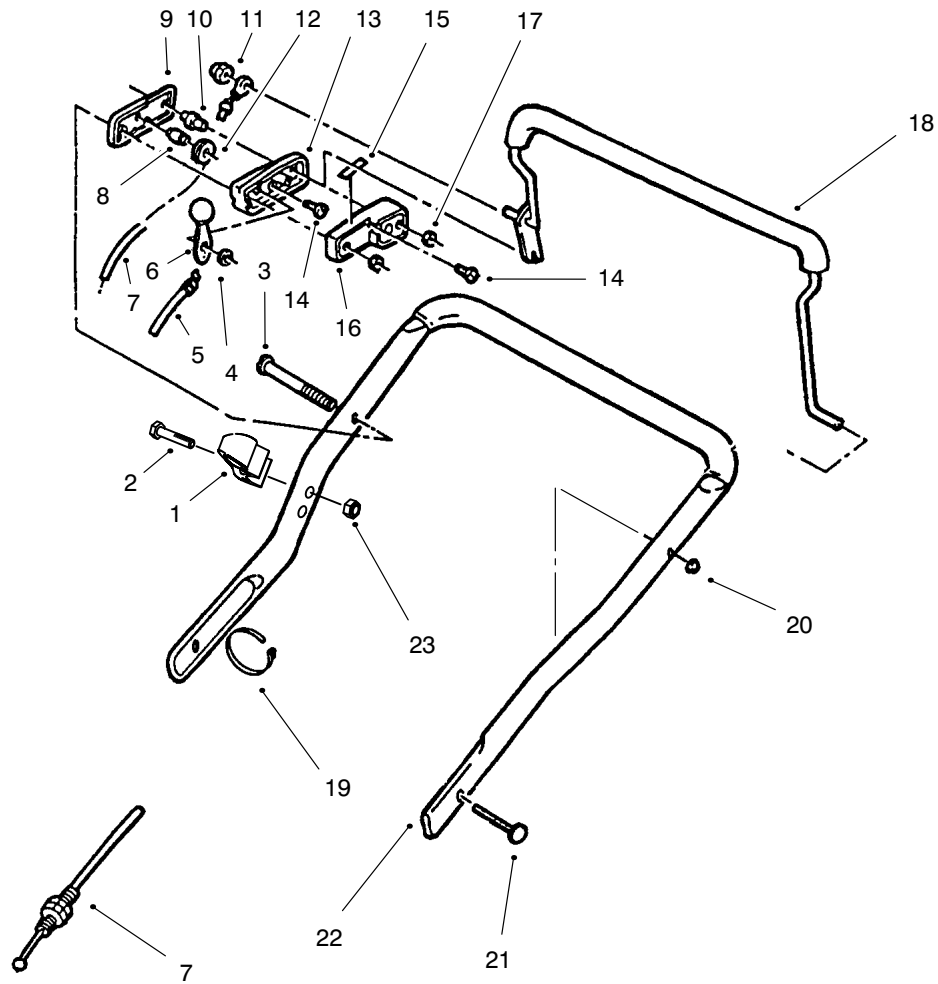

C-2198A

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7383	Guide - Rope	1	13	612633	Case - Throttle, Center	1
2	321-51	Screw	1	14	611543	Screw	2
3	611799	Screw	2	15	93-4136	Decal - Throttle	1
4	612586	Washer	2	16	612634	Case - Throttle, Inner	1
5	93-3779	Cable - Throttle	1	17	3296-12	Nut	2
6	93-4135	Lever & Knob Assembly	1	18	683478	Lever - Control	1
7	93-4102	Cable - Control	1	19	614249	Tie Strap	4
8	611542	Pin	1	20	605546	Nut - Push	1
9	611777	Control Case Outer	1	21	614697	Screw	2
10	611541	Column	1	22	611250	Handle Assembly - Top	1
11	612168	Nut - Acorn	1	23	3296-73	Nut - Lock	4
12	612564	Pulley	1				

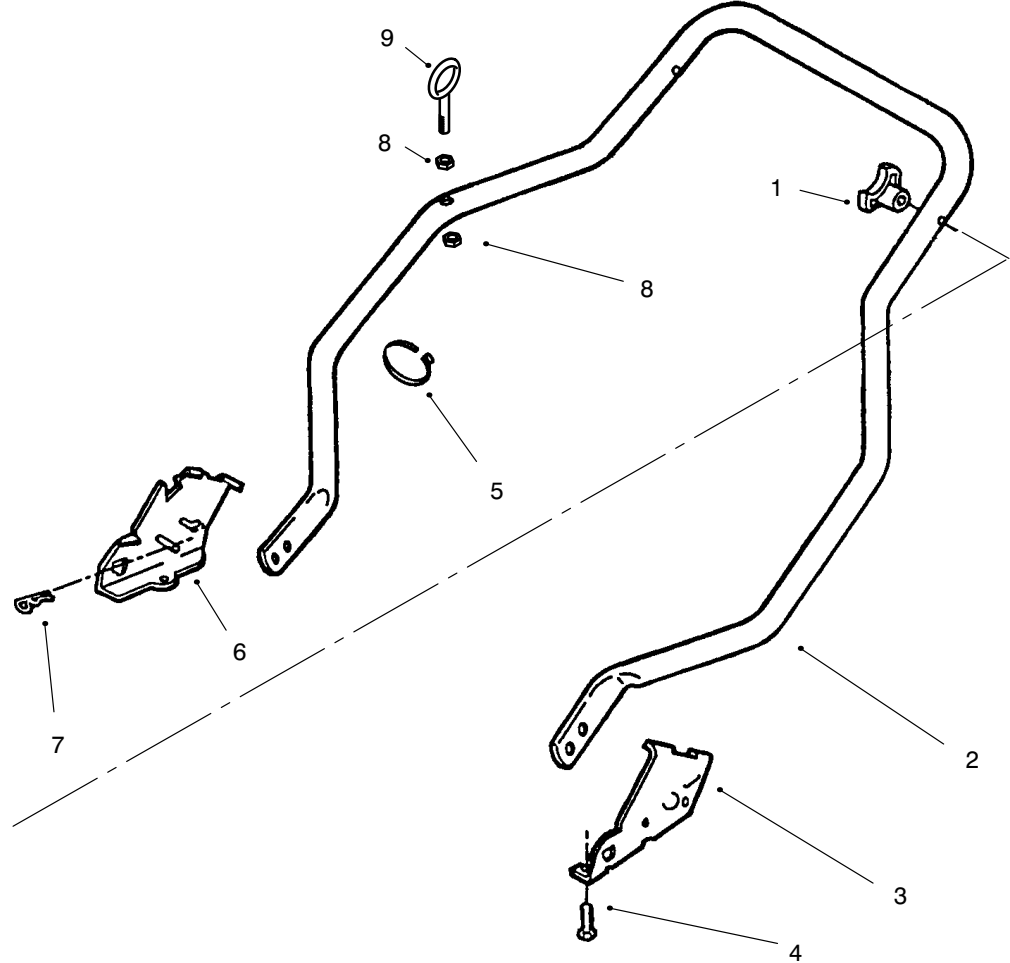


C-2506

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614243	Knob	2
2	612788	Handle – Lower	1
3	683925	Bracket – Handle L.H.	1
4	607188	Screw	4
5	614249	Tie Strap	4

Ref. No.	Part No.	Description	No. Used
6	683926	Bracket – Handle R.H.	1
7	605803	Pin – Cotter	2
8	3296-73	Nut – Lock	4
9	611571	EyeBolt	1

ENGINE ASSEMBLY

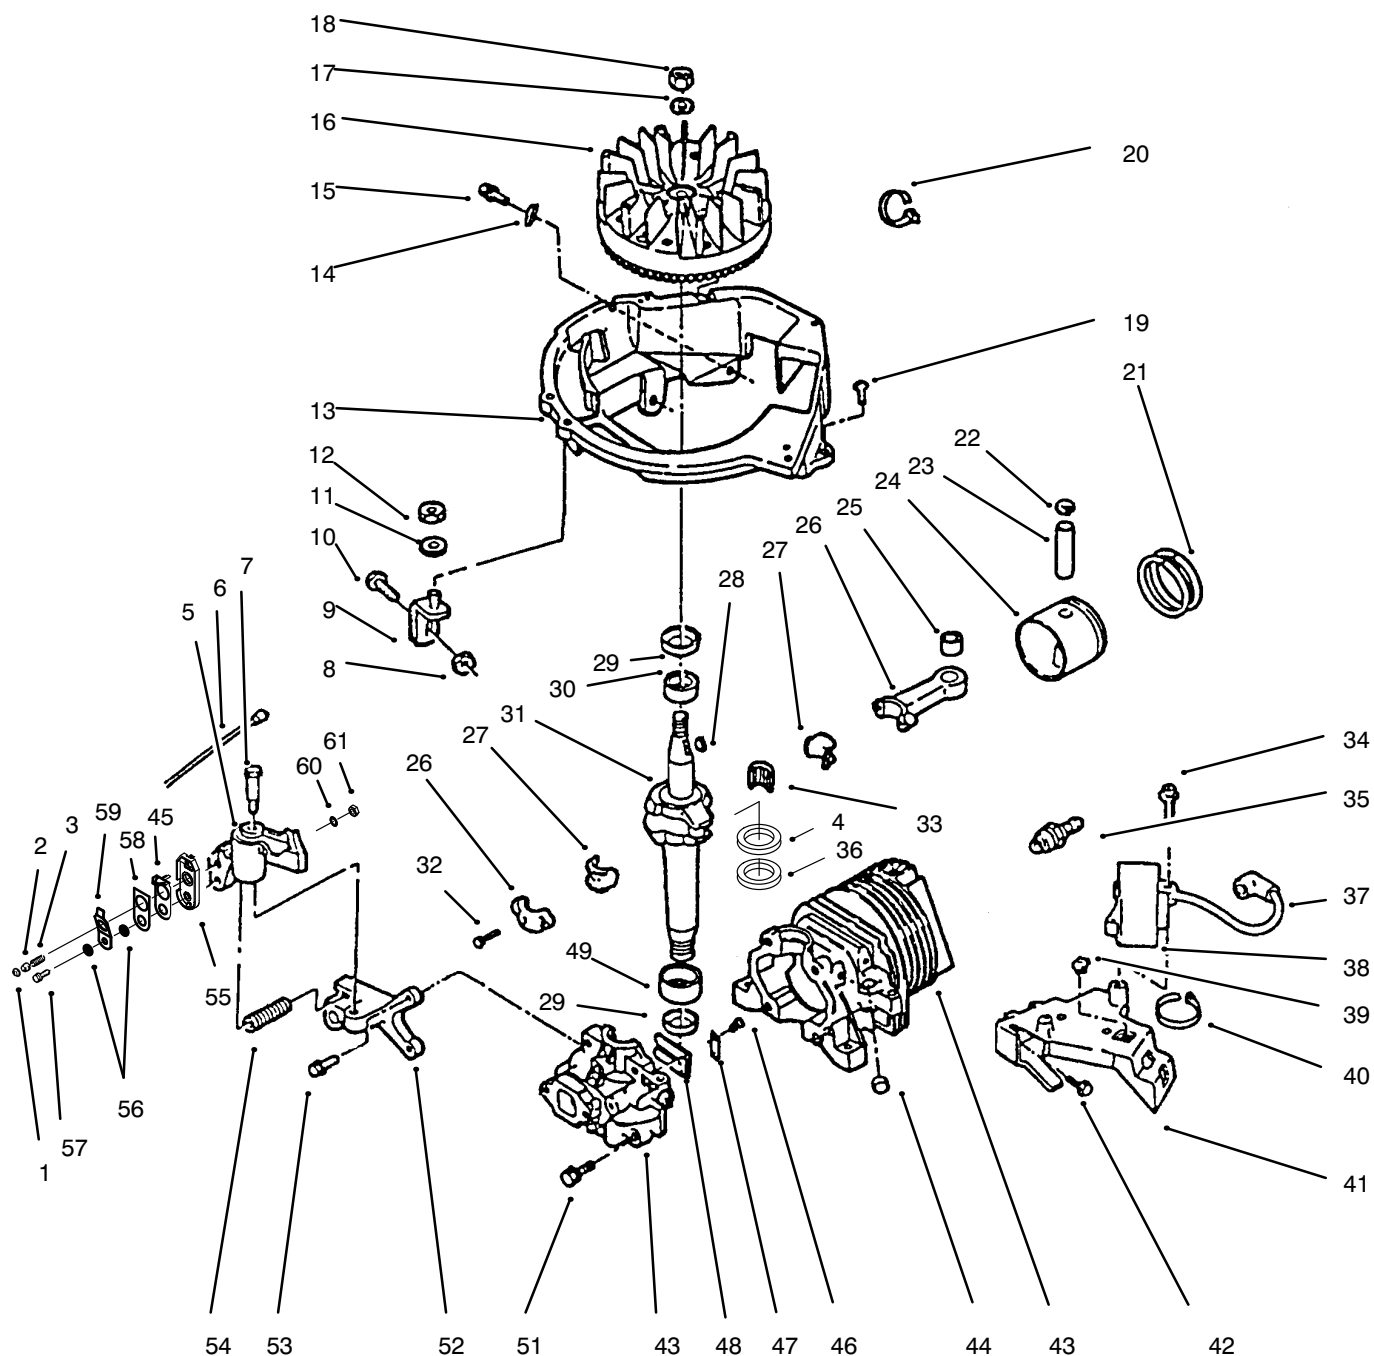


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
4	252-76	Bearing – Thrust	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
11	603093	Washer	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	"J" Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92-4923	Set – Piston & Ring (Incl. Ref. # 21-24)	1
*	92-4925	Piston & Connecting Rod Assembly (Incl. Ref. #21-27, 32 & 33)	1
25	92-4927	Bearing Assembly	1
26	92-4921	Connecting Rod Assembly (Incl. Ref. #25, 27,32 & 33)	1
27	677982	Liner – Pair	1
28	607199	Key – Flywheel	1
29	611396	Seal – Oil	2
30	681830	Bearing – Main	1
31	94-5713	Crankshaft	1

Ref. No.	Part No.	Description	No. Used
32	611393	Screw	2
33	683911	Set – Needle Bearing	1
34	607526	Screw	2
35	614009	Spark Plug	1
36	252-80	Waxher – Thrust	1
37	681678	Wire Lead & Cover Assy	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	1
40	614249	Tie Strap	1
41	613072	Bracket – C. D.	1
42	614343	Screw	2
43	683702	Cylinder & Crankcase Cover Assembly (Incl. Ref. #46-48,51 & 53)	1
44	609123	Plug	4
45	612841	Plate – Contact	1
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
51	613110	Screw	3
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	93-1240	Case Assembly	1
56	306407	Washer	2
57	321-6	Screw	1
58	612842	Shield	1
59	93-1239	Spring – Contact	1
60	3255-7	Washer – Ext. Tooth Lock	1
61	306375	Nut	1
*	94-5734	Short Block	1
*	93-4307	Switch Kit (Incl. Ref. #1, 6, 45, & 55-61)	1


*Not Illustrated

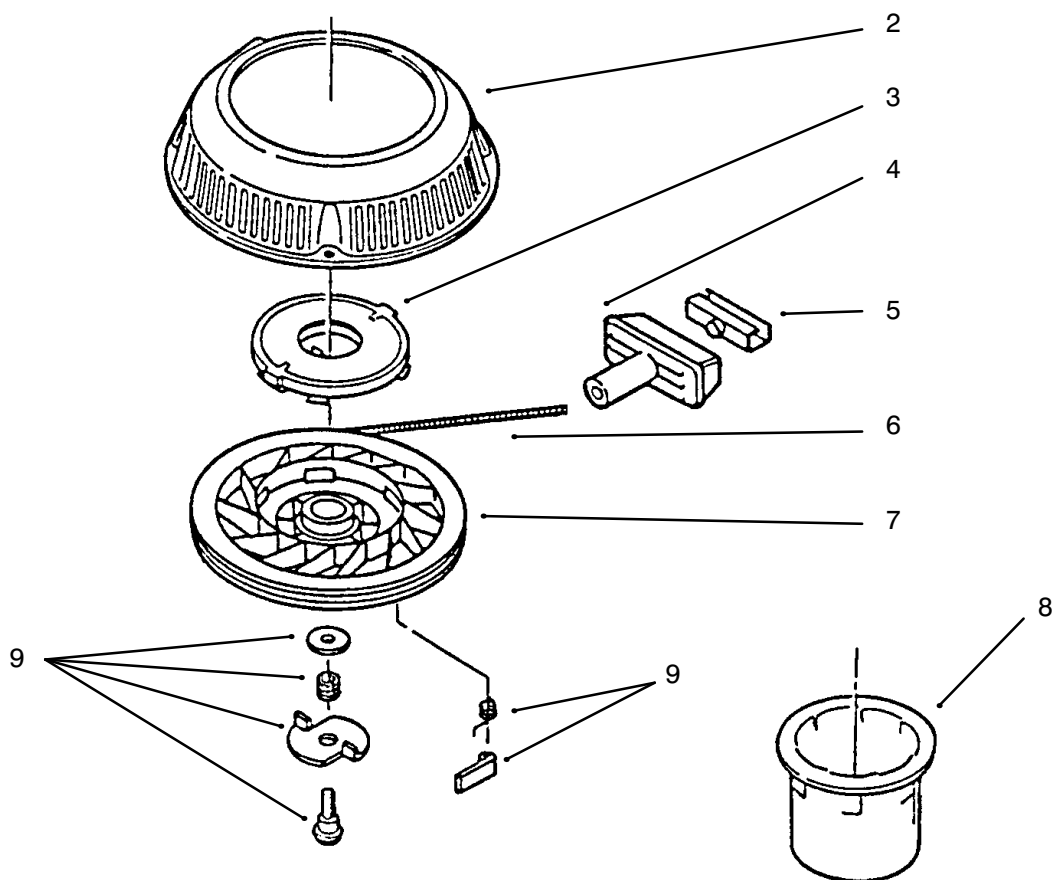

C-2181

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #5-9)	1	5	612824	Clip - Rope	1
2	684567	Starter Housing & Shaft	1	6	612432	Rope	1
3	92-4935	Spring & Keeper	1	7	612950	Pulley	1
4	612825	Handle - Starter	1	8	612949	Hub - Starter	1
				9	683899	Kit - Dog	1

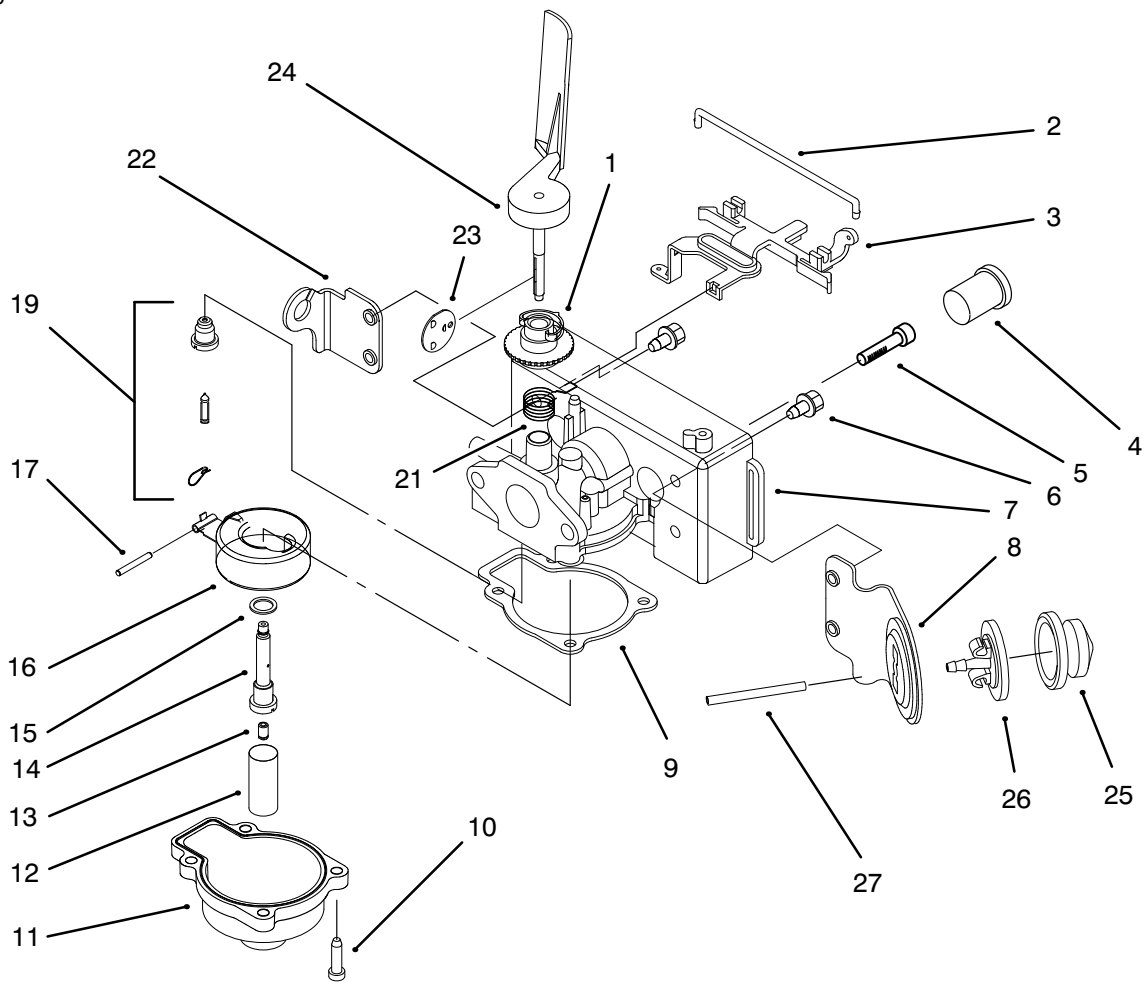


C-2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever – Speed Adjust	1
4	611545	Plug	2
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93-1228	Body – Carburetor	1
8	93-1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	92-6370	Main Jet	1

Ref. No.	Part No.	Description	No. Used
14	92-6371	Nozzle	1
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
19	92-9697	Float, Valve, & Body Ass'y	1
21	92-4944	Spring – Governor	1
22	93-1226	Bracket – Throttle Control	1
23	92-6373	Disc – Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb – Primer	1
26	44-2750	Body – Primer	1
27	44-3175	Hose – Primer	1
*	93-4319	Carburetor Complete	1

*Not Illustrated

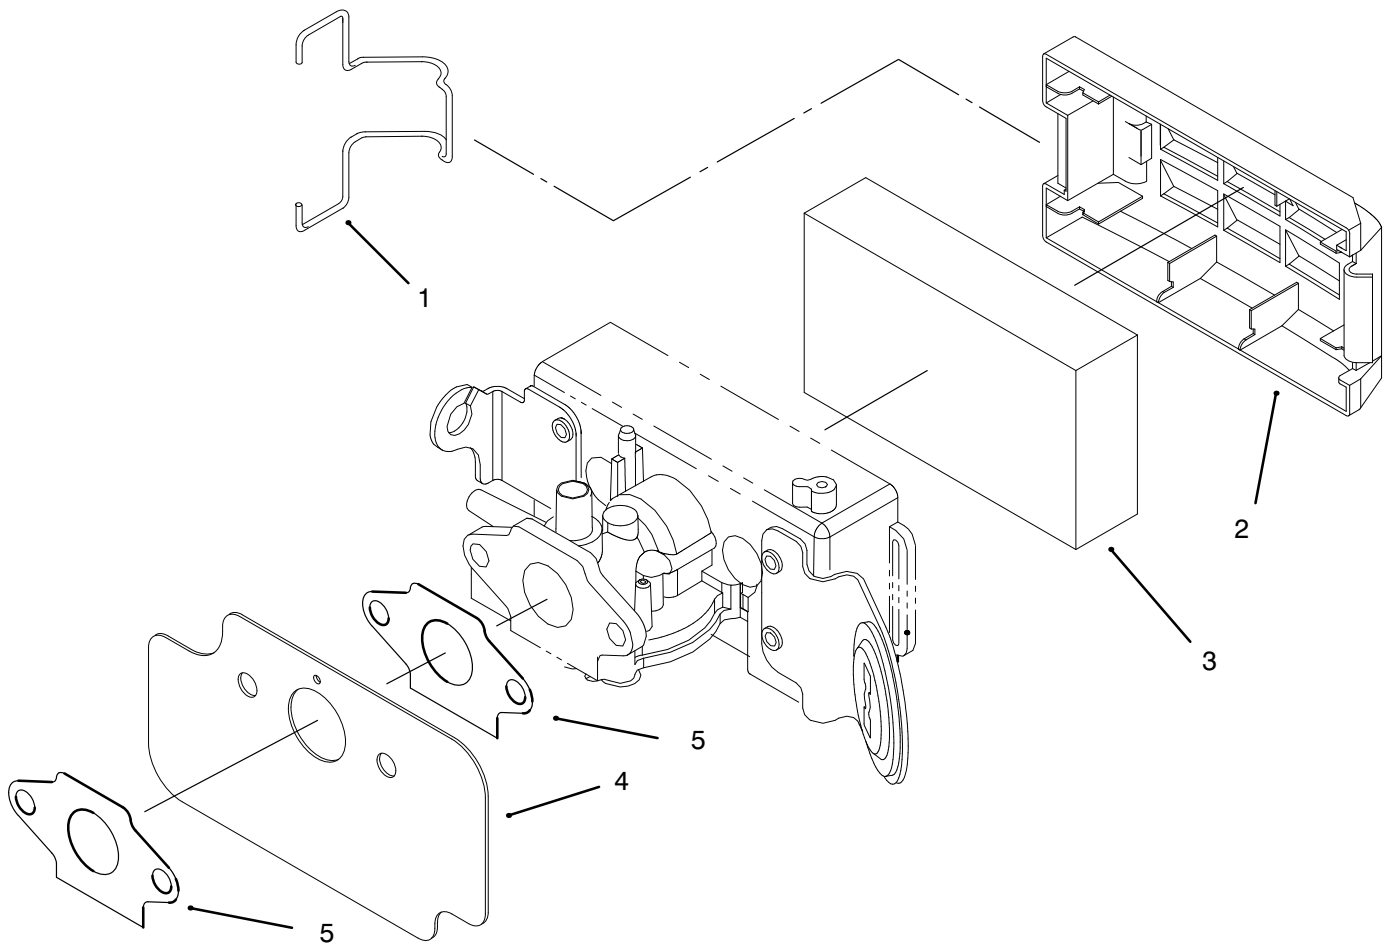

C-2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93–1221	Shield – Heat	1
5	92–4948	Gasket – Carb.	2

Lawn-Boy Part Number Index

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	6	18	1	612586	Washer	3	4	2
303712	Ring – Retaining	6	22	2	612633	Case – Throttle, Center	3	13	1
306375	Nut	6	61	1	612634	Case – Throttle, Inner	3	16	1
306407	Washer	6	56	2	612783	Hose – Gas	1	13	1
316959	Washer – Lock	6	17	1	612788	Handle – Lower	4	2	1
317893	Tie Strap	6	20	1	612824	Clip – Rope	7	5	1
602315	Nut	6	12	1	612825	Handle – Starter	7	4	1
602587	Plate – Reed	6	47	1	612841	Plate – Contact	6	45	1
602588	Reed	6	48	1	612842	Shield	6	58	1
602850	Gasket – Float Chamber	8	9	1	612872	Screw	6	46	2
603014	Bolt	6	10	1	612949	Hub – Starter	7	8	1
603093	Washer	6	11	1	612950	Pulley	7	7	1
603164	Nut	2	26	1	613072	Bracket – C. D.	6	41	1
603773	Nut – Wheel Ht. Adjust	2	23	4	613110	Screw	6	51	3
605120	Grommet	6	39	1	613233	Screw	6	53	2
605546	Nut – Push	3	20	1	613269	Screw	8	6	4
605803	Pin – Cotter	4	7	2	613500	Screw – Muffler Plt. to Block	1	9	1
606608	Pin – Wrist	6	23	1	613529	Bolt – Shoulder	6	7	1
607188	Screw	4	4	4	614009	Spark Plug	6	35	1
607199	Key – Flywheel	6	28	1	614243	Knob	4	1	2
607213	Gasket	1	*	1	614249	Tie Strap	4	5	4
607526	Screw	6	34	2	614249	Tie Strap	3	19	4
607560	Cover Plate	2	4	1	614249	Tie Strap	6	40	1
607601	Screw	1	10	3	614343	Screw	6	42	2
608159	Toe Bar	2	1	1	614650	Bolt – Wheel 8	2	36	2
608311	Nut	6	8	1	614677	Screw – Plate Mounting	2	6	2
608833	Bracket – Wheel Ht. Adjust	2	21	4	614682	Nut – Wing	2	5	1
608834	Washer – Wheel Ht. Adjust	2	22	4	614697	Screw	3	21	2
608850	Screw	8	10	4	677525	Collar and Plate Assembly	2	28	1
609123	Plug	6	44	4	677982	Liner – Pair	6	27	1
609150	Baffle	1	*	1	678113	Float & Arm Assembly	8	16	1
609471	Screw – Muff. to Muff. Plate	2	29	3	681678	Wire Lead & Cover Assy	6	37	1
609482	Screw – Pan Hd. Sems	8	5	2	681737	Set – Ring	6	21	1
609493	Element – Air Filter	9	3	1	681830	Bearing – Main	6	30	1
609786	Support – Crankshaft	2	30	1	681831	Bearing – Main	6	49	1
609808	Screw	6	19	1	682683	Brake Assembly	6	5	1
609947	Screw	6	15	3	682755	Fuel Cap	1	5	1
610165	Retainer	8	2	1	682876	Muffler Cover Assembly	2	31	1
610383	Retainer – Cover	9	1	1	683215	C. D. Ignition Module	6	38	1
610646	Bolt – Shoulder	2	15	4	683478	Lever – Control	3	18	1
610834	Collar – Adjustment	8	1	1	683580	Flywheel Assembly	6	16	1
611071	Filter – Fuel	8	12	1	683581	Brace Assembly	6	9	1
611191	JClip	6	14	1	683702	Cylinder & Crankcase Cover	6	43	1
611192	Bracket – Brake	6	52	1	683821	Wire Lead	6	6	1
611211	Spring – Brake	6	54	1	683899	Kit – Dog	7	9	1
611213	Retainer	6	1	1	683911	Set – Needle Bearing	6	33	1
611214	Spring – Cable, Return	6	3	1	683925	Bracket – Handle L.H.	4	3	1
611250	Handle Assembly – Top	3	22	1	683926	Bracket – Handle R.H.	4	6	1
611393	Screw	6	32	2	684567	Starter Housing & Shaft	7	2	1
611396	Seal – Oil	6	29	2	684570	Starter Base	1	4	1
611509	Actuator – Brake Lever	6	2	1	684619	Cover – Plate, Mulch	2	3	1
611541	Column	3	10	1	684622	Starter Assembly	7	*	1
611542	Pin	3	8	1	684776	Wheel – Front 6	2	25	2
611543	Screw	3	14	2	684777	Wheel – Rear 8	2	16	2
611545	Plug	8	4	2	16-2169	Housing Assembly	2	9	1
611571	EyeBolt	4	9	1	16-5539	Shroud – Engine	1	6	1
611777	Control Case Outer	3	9	1	39-5770	Decal – Danger	2	7	1
611799	Screw	3	3	2	40-1940	Washer	2	20	4
612079	Blade 19	2	27	1	44-2750	Body – Primer	8	26	1
612168	Nut – Acorn	3	11	1	44-3175	Hose – Primer	8	27	1
612383	Washer	8	15	1	46-6811	Screw	2	32	2
612427	Shroud – Base	6	13	1	66-7460	Bulb – Primer	8	25	1
612432	Rope	7	6	1	92-1054	Plate – Muffler	1	11	1
612564	Pulley	3	12	1	92-1099	Bolt – Wheel 6	2	19	2

*Not Illustrated

Lawn – Boy Part Number Index (cont.)

3321–550

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92–1604	Hub Cap	2 34 4	93–1240	Case Assembly	6 55 1
92–1648	Screw – Muffler Plt. to Hsg.	1 8 3	93–3779	Cable – Throttle	3 5 1
92–4880	Knob and Spring Assembly	2 14 4	93–4102	Cable – Control	3 7 1
92–4921	Connecting Rod Assembly	6 26 1	93–4135	Lever & Knob Assembly	3 6 1
92–4923	Set – Piston & Ring	6 24 1	93–4136	Decal – Throttle	3 15 1
92–4925	Piston & Connecting Rod	6 * 1	93–4307	Switch Kit	6 * 1
92–4927	Bearing Assembly	6 25 1	93–4319	Carburetor Complete	8 * 1
92–4935	Spring & Keeper	7 3 1	93–7250	Decal – Warning	2 38 1
92–4944	Spring – Governor	8 21 1	93–7369	Shield – Trailing	2 10 1
92–4948	Gasket – Carb.	9 5 2	93–7383	Guide – Rope	3 1 1
92–6370	Main Jet	8 13 1	93–7693	Clamp	2 12 2
92–6371	Nozzle	8 14 1	94–1610	Grommet	2 2 3
92–6373	Disc – Throttle	8 23 1	94–5713	Crankshaft	6 31 1
92–6376	Air Vane & Shaft	8 24 1	94–5734	Short Block	6 * 1
92–6389	Pin	8 17 1	252–76	Bearing – Thrust	6 4 1
92–8615	Applique	1 1 1	252–80	Waxher – Thrust	6 36 1
92–8620	Decal	2 35 1	321–6	Screw	6 57 1
92–9691	Float Chamber	8 11 1	321–39	Screw – Trailing Shield	2 11 2
92–9697	Float, Valve, & Body Ass'y	8 19 1	321–51	Screw	3 2 1
93–1221	Shield – Heat	9 4 1	3255–7	Washer – Ext. Tooth Lock	6 60 1
93–1225	Lever – Speed Adjust	8 3 1	3256–4	Washer – Flat	2 8 3
93–1226	Bracket – Throttle Control	8 22 1	3296–12	Nut	3 17 2
93–1228	Body – Carburetor	8 7 1	3296–73	Nut	2 13 2
93–1231	Cover – Air Filter	9 2 1	3296–73	Nut – Lock	4 8 4
93–1232	Bracket – Primer	8 8 1	3296–73	Nut – Lock	3 23 4
93–1233	Gasket – Exhaust	1 12 1	32144–53	Screw	1 2 5
93–1239	Spring – Contact	6 59 1			

*Not Illustrated

[illegible]

[illegible]

[illegible]