



CCRTM Powerlite[®]

Model No. 38170 – 9900001 & Up

Model No. 38175 – 9900001 & Up

Model No. 38177 – 9900001 & Up

Model No. 38178 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Pulley & Belt Cover Assembly (Models 38170 & 38175)	1	Motor & Switch Housing Assembly (230 Volt) (Model No. 38178)	10
Pulley & Belt Cover Assembly (Models 38177 & 38178)	2	Engine Tecumseh Model HSK600 Type 1680T	11–12
Chute Assembly	3	Carburetor No. 640086	13
Chute Assembly (cont.)	4	Recoil Starter No. 590743	14
Rotor Assembly	5	Toro Part Number Index	15–18
Engine & Wheel Assembly	6	Maintenance	19–21
Engine & Wheel Assembly (cont.)	7		
Handle Assembly	8		
Motor & Switch Housing Assembly (120 Volt) (Model No. 38175)	9		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

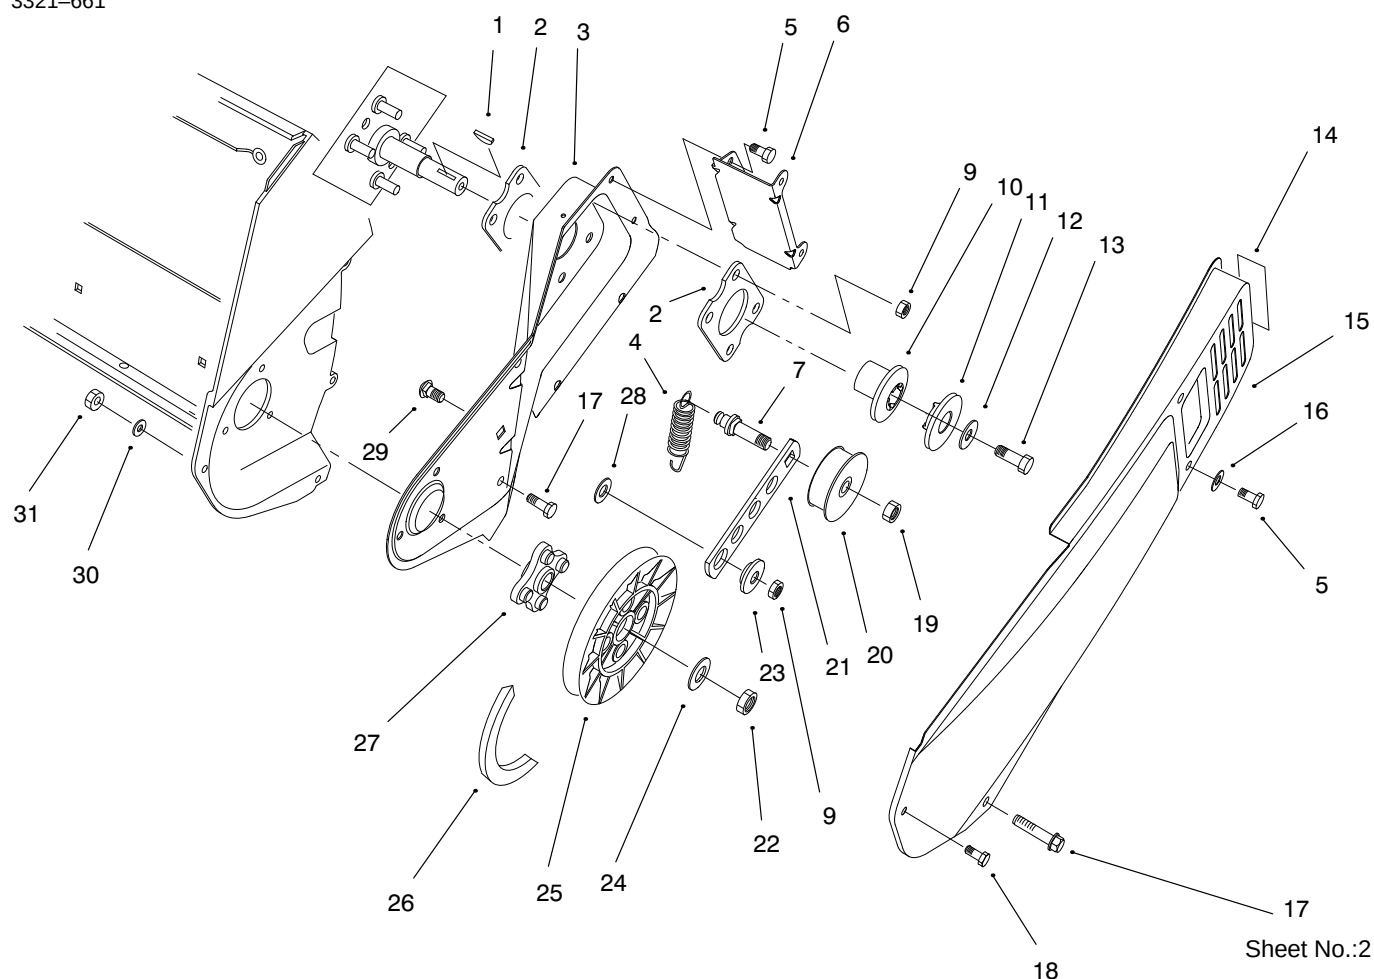

Pulley & Belt Cover Assembly (Models 38170 & 38175)

Ref. No.	Part No.	Qty.	Description
1	3257-3	1	Key-Woodruff
2	71-5290-03	2	Plate-Engine
3	95-7945-03	1	Sideplate-LH
4	75-9020	1	Spring-Extension
5	32144-4	4	Screw-TAP
6	75-8870-03	1	Bracket-Cover
7	75-8720	1	Pin-Idler
9	3296-29	5	Nut-Lock
10	71-5050	1	Body-Half Sheave
11	71-5060	1	Cap-Half Sheave
12	3256-71	1	Washer-Flat
13	3235-6	1	Screw-HH
14	95-1904	1	Decal-Hot
15	75-8830-03	1	Cover-Belt
16	3256-1	2	Washer-Flat
17	46-8094	3	Screw-TAP
18	32105-23	1	Screw-HH
19	3296-59	1	Nut-Lock
20	71-5260	1	Pulley-Idler
21	75-9050	1	Arm-Idler
22	3296-38	1	Nut-Lock
23	75-8700	1	Bushing-Idler
24	3256-25	1	Washer-Flat
25	75-8750	1	Pulley
26	75-9010	1	"v" Belt
27	75-8740	1	Hub

Ref. No.	Part No.	Qty.	Description
28	25-5640	1	Washer
29	3230-23	1	Bolt-CARR
30	3256-14	1	Washer-Flat
31	3296-2	1	Nut-Lock

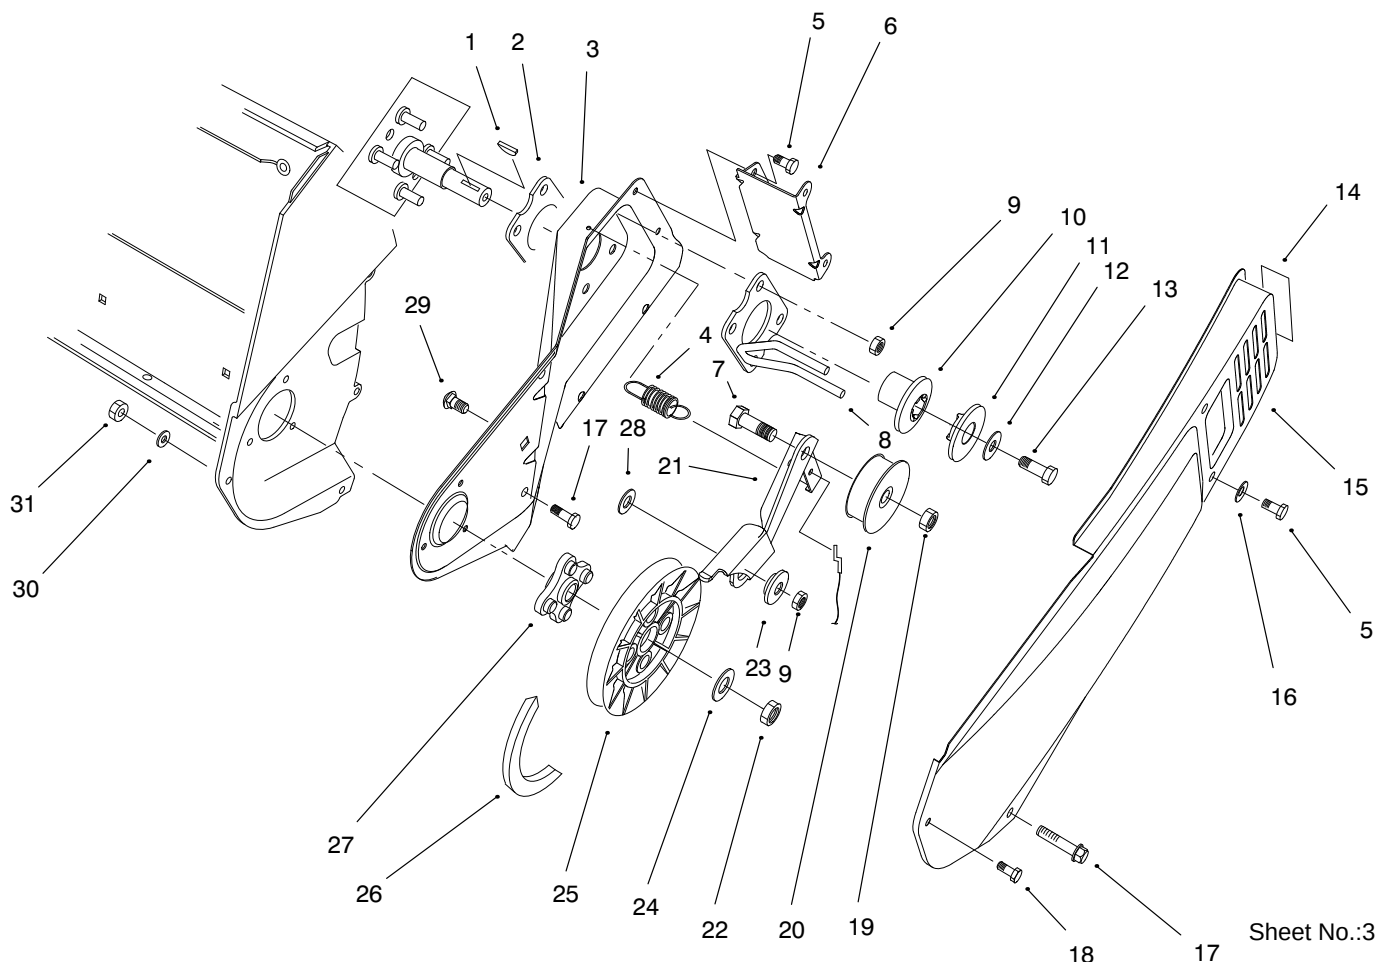 


Sheet No.:3

Pulley & Belt Cover Assembly (Models 38177 & 38178)

Ref. No.	Part No.	Qty.	Description
1	3257-3	1	Key-Woodruff
2	71-5290-03	2	Plate-Engine
3	95-7945-03	1	Sideplate-LH
4	71-5470	1	Spring-Brake
5	32144-4	4	Screw-TAP
6	75-8870-03	1	Bracket-Cover
7	323-44	1	Screw-HH
8	94-9946-03	1	Belt Guide
9	3296-29	5	Nut-Lock
10	71-5050	1	Body-Half Sheave
11	71-5060	1	Cap-Half Sheave
12	3256-71	1	Washer-Flat
13	3235-6	1	Screw-HH
14	94-2561	1	Decal-Hot Intl
15	95-7946-03	1	Cover-Belt
16	3256-1	2	Washer-Flat
17	46-8094	3	Screw-TAP
18	32105-23	1	Screw-HH
19	3296-59	1	Nut-Lock
20	71-5260	1	Pulley-Idler
21	94-9947	1	Arm-Brake
22	3296-38	1	Nut-Lock
23	94-9948	1	Bushing-Idler
24	3256-25	1	Washer-Flat
25	75-8750	1	Pulley
26	99-1790	1	Belt

Ref. No.	Part No.	Qty.	Description
27	75-8740	1	Hub
28	25-5640	1	Washer
29	3230-23	1	Bolt-CARR
30	3256-14	1	Washer-Flat
31	3296-2	1	Nut-Lock

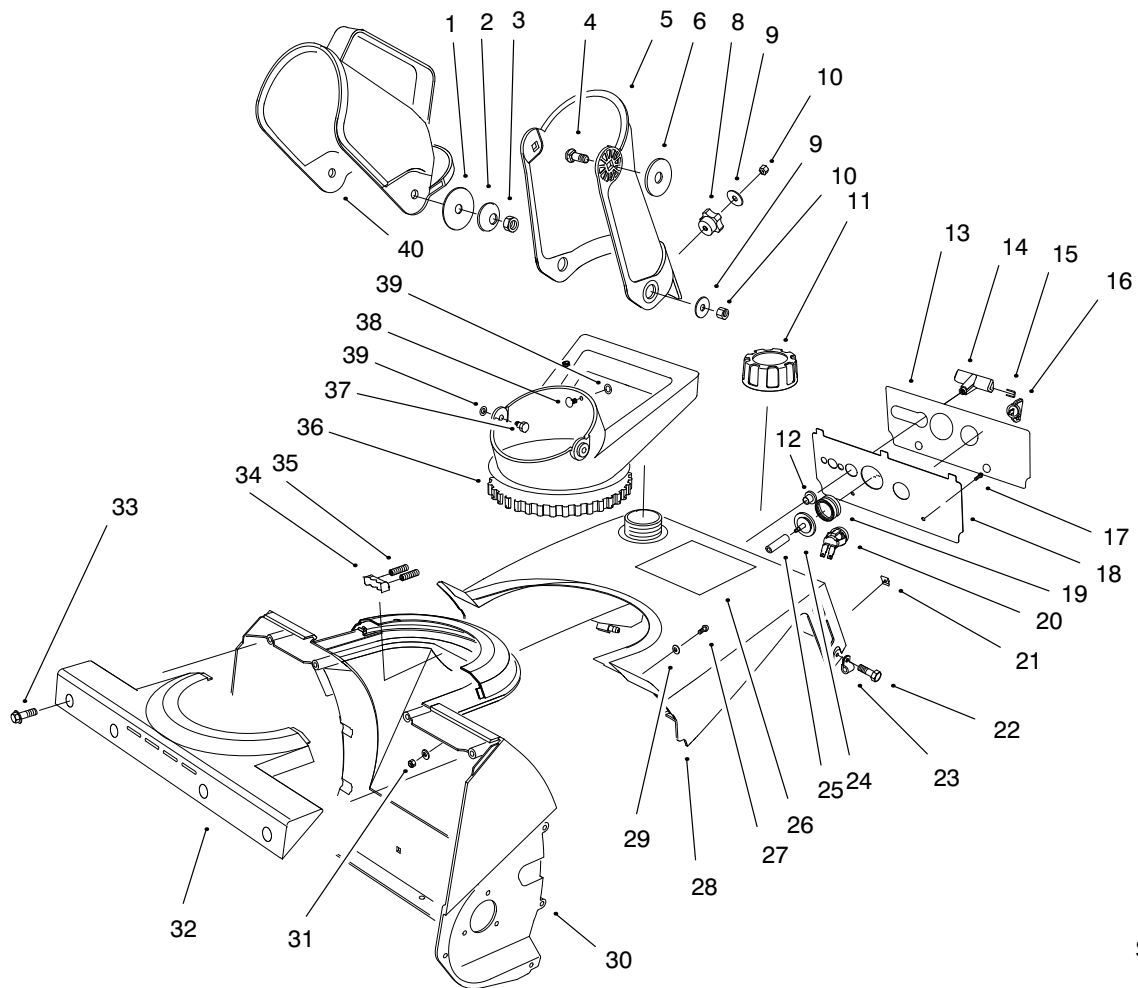 


Sheet No.:4

Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-68	2	Washer-Flat
2	3290-340	2	Washer-Spring
3	3296-29	2	Nut-Lock
4	3230-2	2	Screw-CARR
5	75-8760	1	Chute-Discharge (Model 38170, 38175)
5	75-8762	1	Chute-Discharge (Model 38177, 38178)
6	95-1905	2	Washer-Rubber
8	233-67	1	Knob
9	3256-81	2	Washer-Flat (Model 38170, 38175)
9	3256-81	3	Washer-Flat (Model 38177, 38178)
10	3296-56	2	Nut-Lock (Model 38170, 38175)
10	3296-56	3	Nut-Lock (Model 38177, 38178)
11	55-3573	1	Cap-Gas
12	23-7470	1	Guide-Rope
13	84-5420	1	Decal-Control Panel (Model 38170)
13	84-5430	1	Decal-Panel (Model 38175)
13	94-2564	1	Decal-Control (Model 38178)


Ref. No.	Part No.	Qty.	Description
13	94-2565	1	Decal-Panel (Model 38177)
14	92-4853	1	Handle-Starter
15	92-5424	1	Staple-Handle
16	63-8360	1	Key-Ignition
17	32144-53	2	Screw-Tf Acorn Hd
18	75-9030-03	1	Panel-Control (Model 38175, 38178)
18	75-9031-03	1	Panel-Control (Model 38170, 38177)
19	66-7460	1	Bulb-Primer
20	40-5940	1	Switch-Key
21	49-1490	2	"J" Nut
22	32144-89	2	CScrew-HH
23	98-2256	1	Clamp (Model 38177, 38178)
24	44-2750	1	Body-Primer
25	44-3173	1	Hose-Primer
26	80-0690	1	Decal-Powerlite E (Model 38175 38178)
26	80-0680	1	Decal-Powerlite (Model 38170, 38177)
27	3250-32	2	Screw-PPH
28	75-8800	1	Shroud-Upper
29	3256-1	4	Washer-Flat
30	75-8660	1	Housing

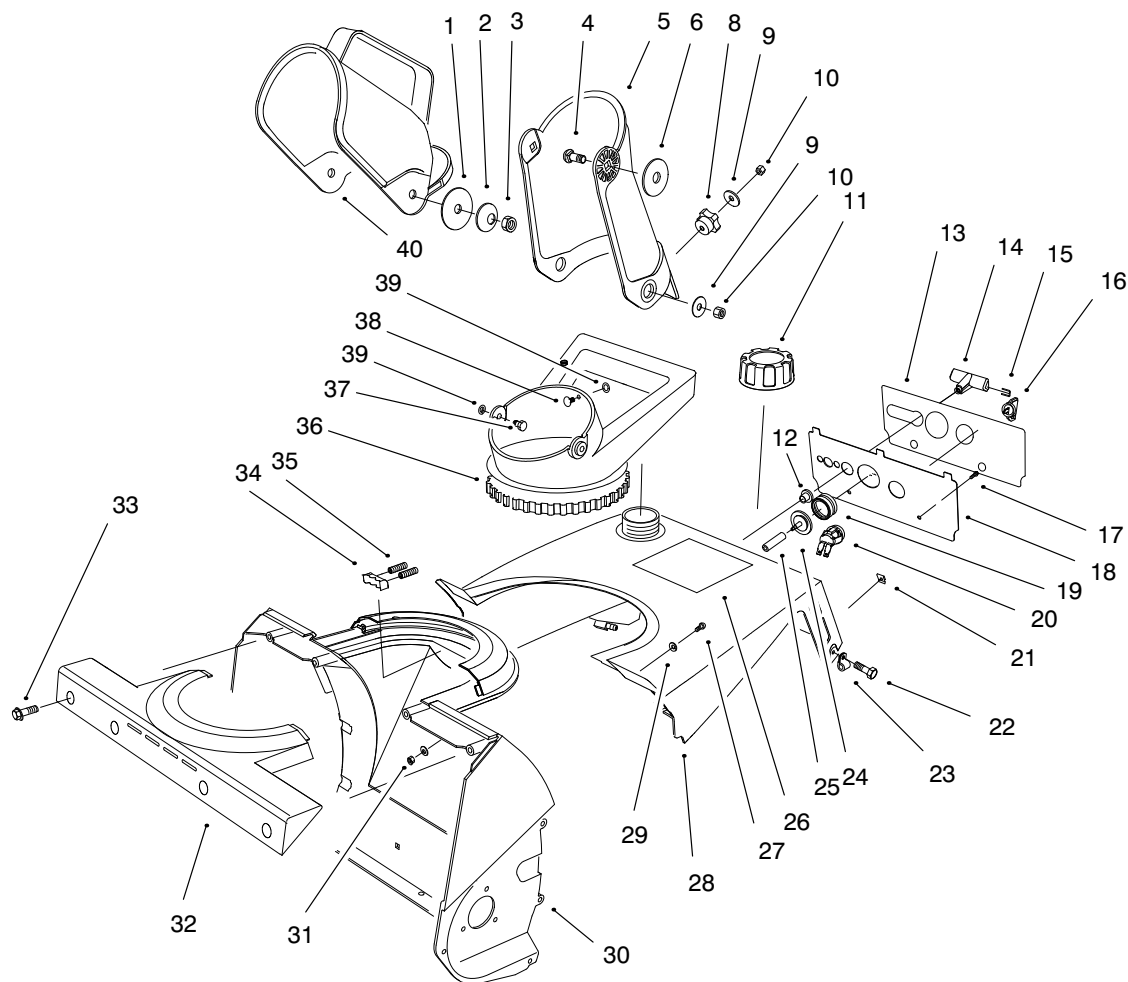 

Sheet No.:4

Chute Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
31	3296-42	2	Nut-Lock
32	75-8650	1	Retainer-Chute
33	46-8094	4	Screw-TAP
34	75-9160	1	Detent-Chute
35	75-9170	2	Spring-Compression
36	75-8670	1	Handle-Chute
37	321-3	2	Screw-HH
38	3229-11	1	Bolt-CARR
39	32115-15	3	Retainer
40	75-8770	1	Deflector-Chute

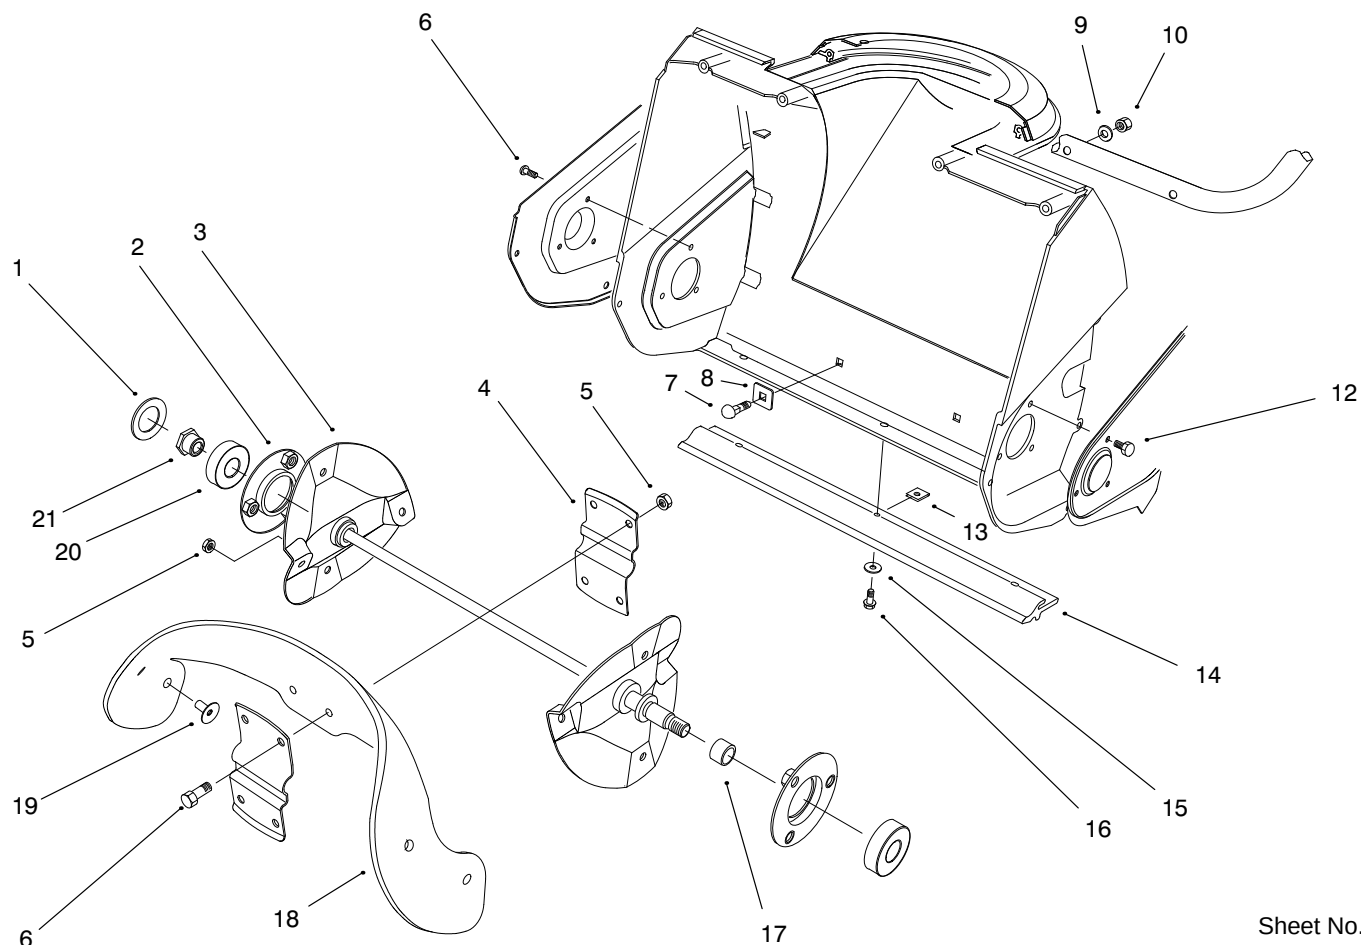 


Sheet No.:5

Rotor Assembly


Ref. No.	Part No.	Qty.	Description
1	75-9180	1	Washer-Rubber
2	75-9080-03	2	Wa-Flange Bearing
3	75-8840-03	1	Wa-Rotor
4	75-8880-03	2	Support-Motor
5	3296-56	12	Nut-Lock
6	3234-33	7	Screw-HFW
7	3229-5	2	Screw-CARR
8	75-9040	2	Washer-Square
9	3-7501	2	Washer-Curved
10	3296-42	2	Nut-Lock
12	321-3	3	Screw-HH
13	32115-19	3	"u" Nut
14	75-8780	1	Scraper
15	3256-14	3	Washer-Flat
16	32144-34	3	Screw-SHWH
17	75-8710	1	Spacer
18	84-1980	2	Blade-Rotor
19	84-1970	8	Screw-Countersunk
20	38-7820	2	Bearing-Ball
21	75-8690	1	Nut-Rotor Shaft

Ref. No.	Part No.	Qty.	Description

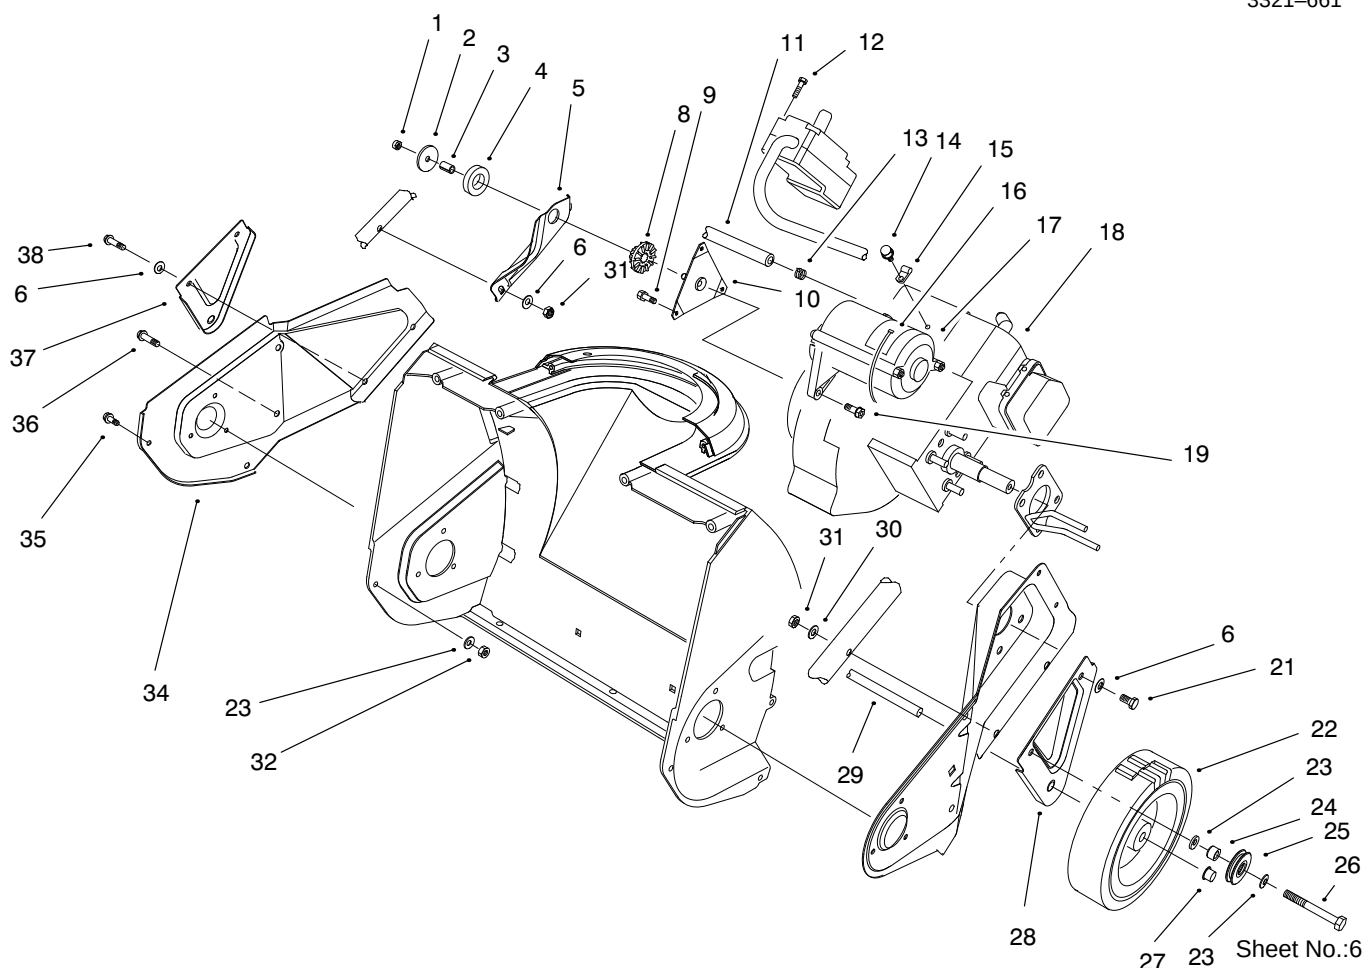 

Engine & Wheel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3296-16	1	Nut-Lock	17	98-2276	1	Starter Motor ASM(Serv) (Model 38178)
2	3256-58	1	Washer-Flt	18		1	Engine
3	80-0650	1	Spacer-Mount	19	80-0700	2	Screw-HH Tork
4	95-1903	1	Ring-Isolator	21	321-10	4	Screw-HH (Model 38170, 38175)
5	75-8980-03	1	Support-Engine	21	321-10	3	Screw-HH (Model 38177, 38178)
6	3256-1	5	Washer-Flat (Model 38170, 38175)	22	23-3250	2	Wheel
6	3256-1	6	Washer-Flat (Model 38177, 38178)	23	3256-14	1	Washer-Flat (Model 38170, 38175)
8	75-9100	1	Bushing-Isolation	23	3256-14	3	Washer-Flat (Model 38177, 38178)
9	3255-10	3	Lockwasher	24	55-9370	1	Spacer-Rotor Blade (Model 38177, 38178)
9	92-6031	3	Screw	25	95-7949	1	Cable-Pulley (Model 38177, 38178)
9	94-2789	3	Screw-TAP	26	321-11	1	Screw-HH (Model 38177, 38178)
10	92-6012	1	ASM-Bracket & Stud	27	3290-320	2	Nut-Push
11	49-2483	1	Hose-Fuel	28	75-8910	1	Bracket-Wheel
12	32144-27	3	Screw (Model 38175, 38178)	29	27-0062	1	Axle
13	2412-98	2	Clamp-Hose	30	3-7501	2	Washer-Curved
15	2412-91	1	Clamp-Cable (Model 38175, 38178)	31	3296-42	4	Nut-Lock
16	250-7	1	Tie-Cable (Model 38175, 38178)	32	3296-2	1	Nut-Lock
17	77-0402	1	ASM-Switch Housing (Model 38175)				

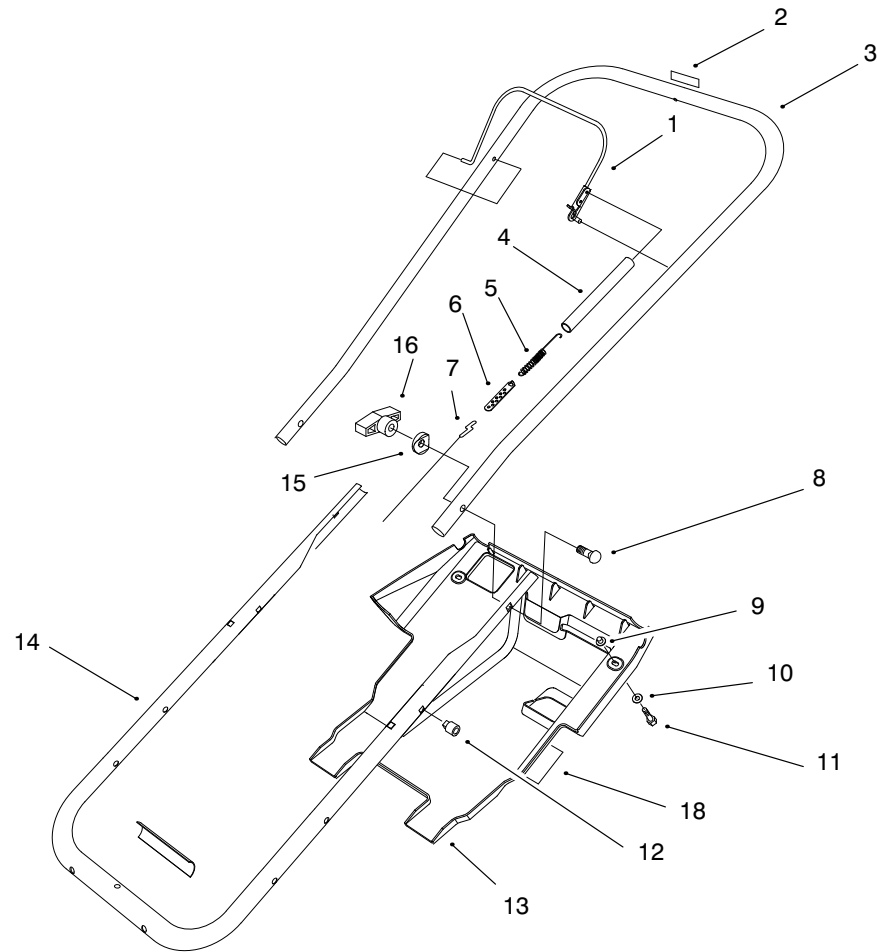 

Sheet No.:7

Handle Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7943-03	1	Bail (Model 38177, 38178)	18	61-4790	1	Decal-Warning (Csa) (E) (Model 38175)
2	94-2577	1	Decal-Rotor Drive Intl (Model 38177, 38178)				
3	75-9070-03	1	Handle-Upper (Model 38170, 38175)				
3	95-7944-03	1	Handle-Upper (Model 38177, 38178)				
4	71-5530	1	Cover-Spring (Model 38177, 38178)				
5	71-5480	1	Spring-Clutch (Model 38177, 38178)				
6	71-5330	1	Adjuster-Cable (Model 38177, 38178)				
7	94-9949	1	Cable-Clutch (Model 38177, 38178)				
8	17-9426	2	Screw				
9	605120	2	Grommet				
10	3256-14	2	Washer-Flat				
11	32144-34	2	Screw-SHWH				
12	32115-17	2	Nut-Expansion				
13	75-8790	1	Shroud-Lower				
14	75-9060-03	1	Tube-Frame				
15	75-9130	2	Washer-Curved				
16	98-7134	2	Knob				

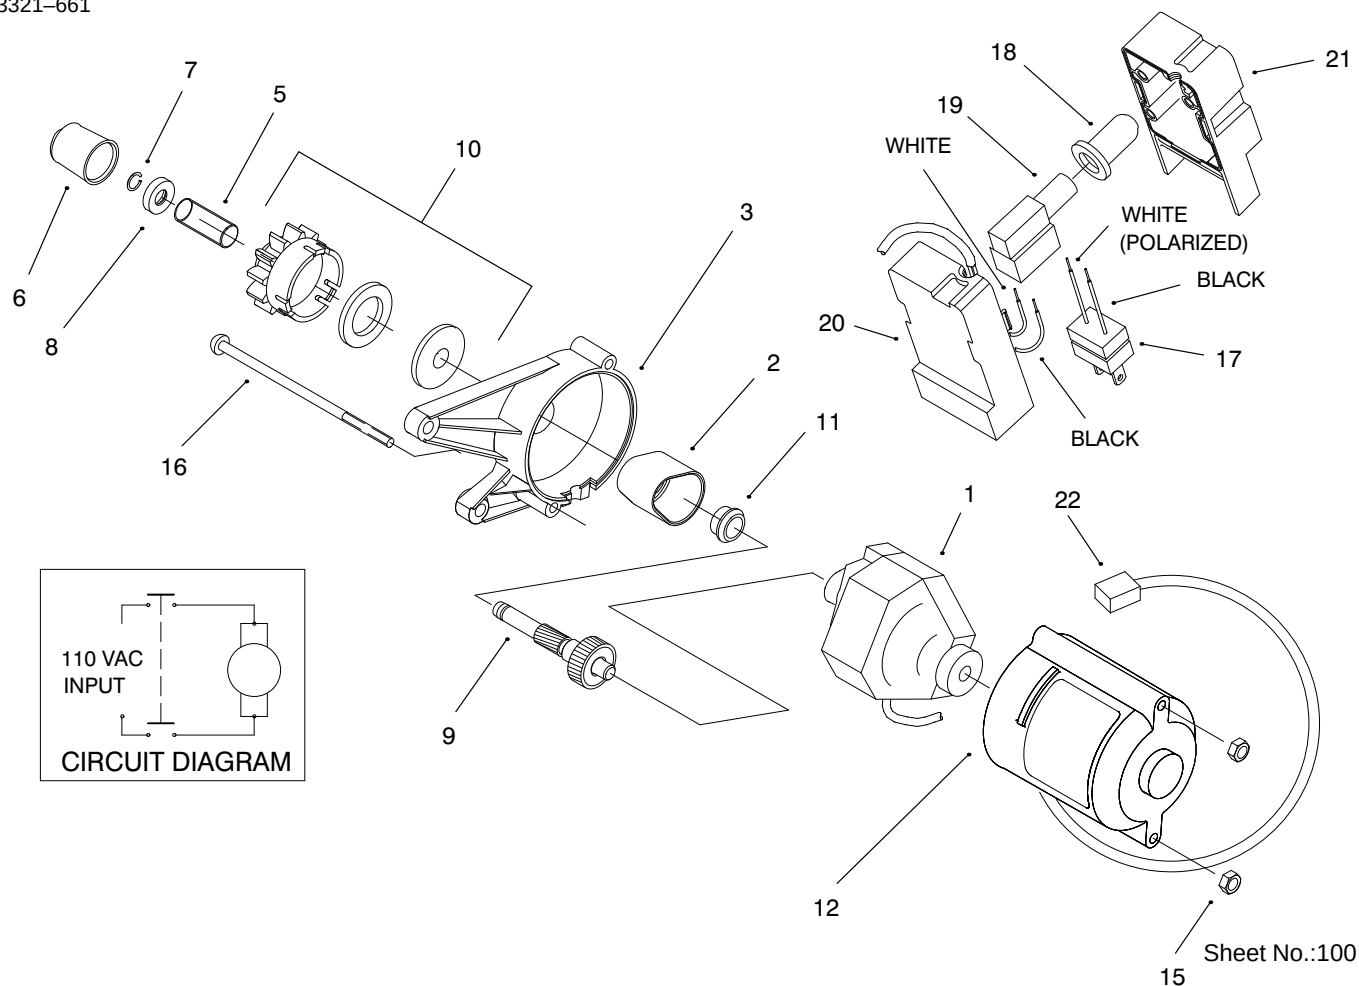 

Motor & Switch Housing Assembly (120 Volt) (Model No. 38175)

Ref. No.	Part No.	Qty.	Description
1	70-7802	1	ASM-Motor
2	70-7850	1	Cover-Gear
3	70-7810	1	Housing-Starter
5	61-4690	1	Spring-Anti Drift
6	70-7890	1	Cap-Pinion
7	61-4680	1	Ring-Lock
8	61-4670	1	Stop-Pinion
9	92-6003	1	ASM-Shaft & Gear
11	70-7900	1	Bushing-Upper
12	70-7820	1	Housing-Lower
15	3296-2	2	Nut-Lock
16	32144-101	2	Screw-PPH
17	94-9933	1	Plug-Power
18	61-4810	1	Boot-Switch
19	61-4820	1	Switch
20	99-2253	1	Base-Switch Hsg
21	99-2254	1	Cap-Switch Hsg
22	250-7	1	Tie-Cable

Ref. No.	Part No.	Qty.	Description

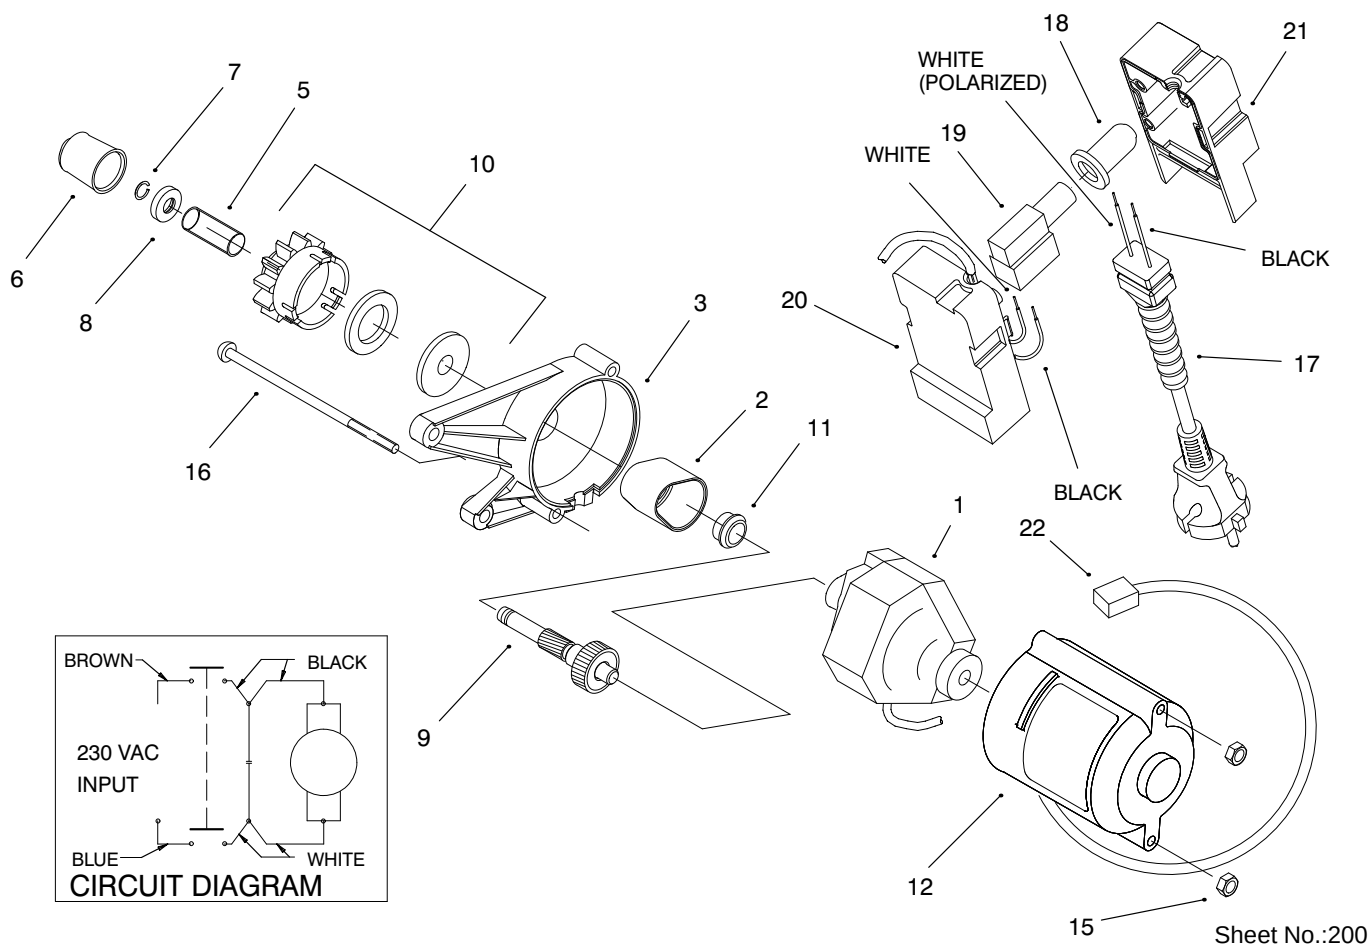 


Motor & Switch Housing Assembly (230 Volt) (Model No. 38178)

Ref. No.	Part No.	Qty.	Description
1	99-1917	1	ASM-Motor
2	70-7850	1	Cover-Gear
3	70-7810	1	Housing-Starter
5	61-4690	1	Spring-Anti Drift
6	70-7890	1	Cap-Pinion
7	61-4680	1	Ring-Lock
8	61-4670	1	Stop-Pinion
9	92-6003	1	ASM-Shaft & Gear
10	84-5240	1	Pinion ASM (Ser Only)
11	70-7900	1	Bushing-Upper
12	70-7820	1	Housing-Lower
15	3296-2	2	Nut-Lock
16	32144-101	2	Screw-PPH
17	98-2259	1	Plug-Power
18	61-4810	1	Boot-Switch
19	61-4820	1	Switch
20	98-2253	1	Base-Switch Hsg
21	98-2254	1	Cap-Switch Hsg
22	250-7	1	Tie-Cable

Ref. No.	Part No.	Qty.	Description

 Engine Tecumseh Model No. HSK600 Type 1680T

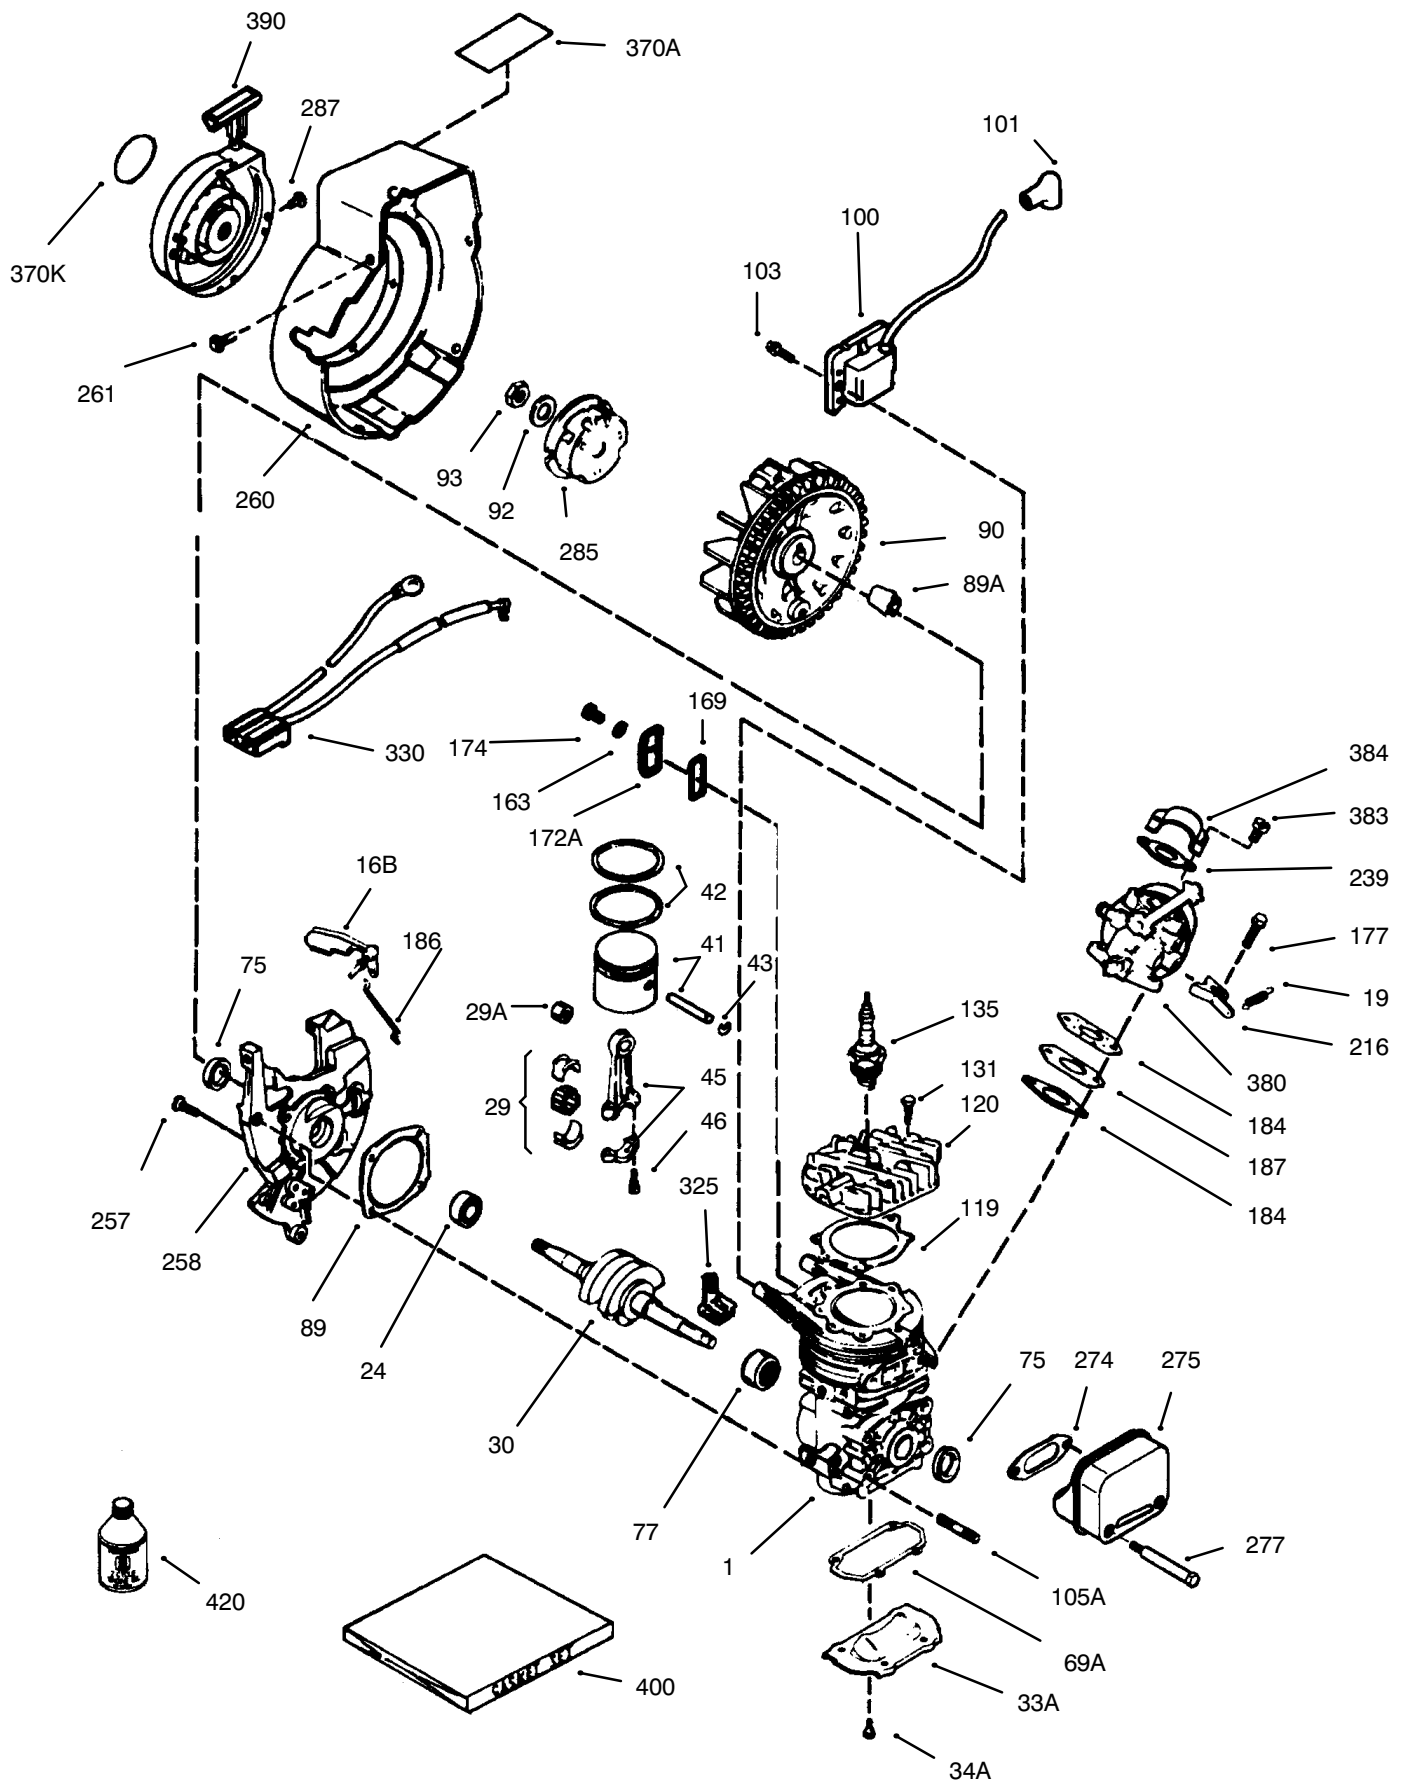


Engine Tecumseh Model No. HSK600 Type 1680T

Ref. No.	Part No.	Description	No. Used
1		Block Ass'y – Cylinder (Order short block if replacement is required)	1
16B	490291A	Vane Ass'y – Air	1
19	570707	Spring – Governor	1
24	530110	Bearing – Ball	1
29	530150	Bearing & Liner Set – Needle (37 Needles)	1
29A	530104A	Bearing – Cartridge	1
30	290602	Crankshaft	1
33A	570644	Plate – Cover	1
3A4	650579	Screw – Pan Flex Hd.	4
41	310283A	Piston & Pin Ass'y (Incl. ref. #43)	1
42	310190	Ring Set – Piston	1
43	310167	Ring – Piston Pin Retaining	2
45	310235B	Rod Ass'y – Connecting (Incl. ref. #29, 29A & 46)	1
46	650633	Screw – Connecting Rod	2
69*	510292A	Gasket – Cylinder Cover	1
69A*	510323A	Gasket – Cover Plate	1
75	510319	Seal – Oil	2
77	530105	Bearing – Needle	1
89A	611032	Sleeve – Flywheel	1
90	611066	Flywheel	1
92	650815	Washer – Belleville	1
93	650390	Nut – Flywheel	1
100	34443A	Solid State Ass'y (Incl. Ref. #101)	1
101	610118	Cover – Spark Plug	1
103	651007	Screw – Hex. Hd. Sems	2
105A	650796	Stud – Cylinder	4
119	*510274A	Gasket – Cylinder Head	1
120	250240B	Head – Cylinder	1
131	650477	Screw – Pan Flex Hd.	5

Ref. No.	Part No.	Description	No. Used
135	611049	Plug – Spark (RCJ-8Y or equivalent)	1
163	650838	Washer – Flat	1
169*	510325A	Gasket – Cover	1
172A	570708	Cover Ass'y – Compression Release	1
174	650579	Screw – Torx. Hd.	1
177	650959	Screw	2
184*	510326A	Gasket – Carburetor	2
186	490322	Link – Governor	1
187	570438A	Spacer	1
216	570645	Level – Adjusting	1
239	35815	Gasket – Filter Base	1
257	650911	Screw – Torx Pan Hd.	4
258	350422	Base Ass'y – Blower Housing (Incl. ref. #27)	1
260	350437	Housing – Blower	1
261	650737	Screw – Hex. Washer Hd.	3
274*	510207A	Gasket – Exhaust	1
275	390332	Muffler (Incl. Ref. #274 & 277)	1
277	650869	Screw – Torx Pan Hd.	2
285	590551A	Cup – Starter	1
287	650926	Screw	3
325	29443	Clip – Spring	1
330	611131A	Harness – Wire	1
370A	36261	Decal – Lubrication	1
370K	36695	Decal – Starter	1
380	640086	Carburetor (Incl. ref. #184)	1
383	570434	Baffle – Air	1
384	650431	Screw – Pan Hd. Sems	2
390	590743	Starter Ass'y – Rewind	1
400	510324B	Gasket Set	1
422	730227A	Oil – 2 Cycle (8 oz.)	1

 
* Parts included in gasket set No. 400

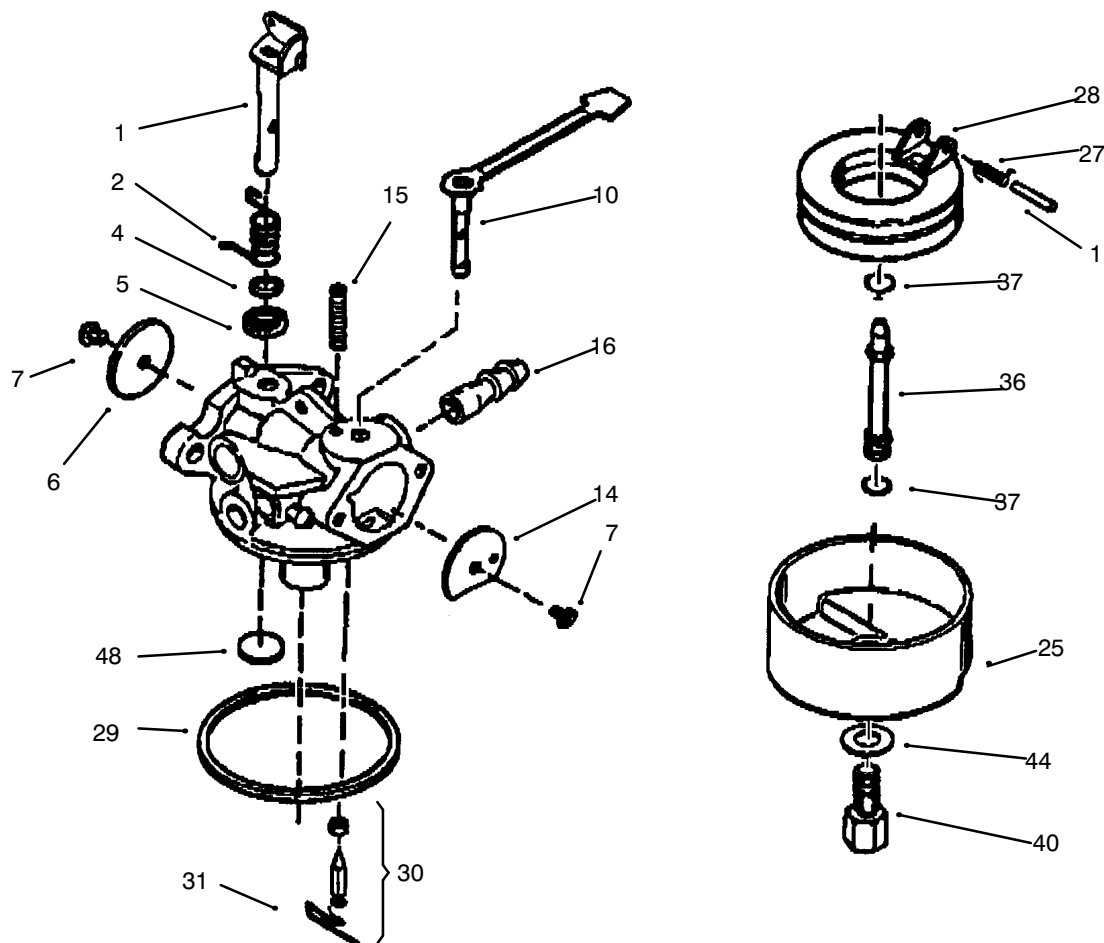

Carburetor No. 640086

Ref. No.	Part No.	Description	No. Used
1	632166A	Throttle Shaft & Lever Assy.	1
2	632169	Spring – Throttle Return	1
4	631184	Washer – Steel	1
5	631183	Washer – Felt	1
6	631621	Shutter – Throttle	1
7	650506	Screw – Shutter	2
10	632553	Choke Shaft & Lever Assy.	1
14	631815	Shutter – Choke	1
15	630735	Spring – Choke Positioning	1
16	632164	Fitting – Fuel Inlet	1
25	631700	Bowl – Float	1
26	632386	Spring – Float Shaft	1

Ref. No.	Part No.	Description	No. Used
27	631024	Shaft – Float	1
28	632019	Float – Carburetor	1
29	631028	Seal – O–Ring	1
30	631021	Inlet Needle, Seat & Clip (Incl. ref. #31)	1
31	631022	Clip – Spring	1
36	640080	Nozzle – Main	1
37	632547	O–Ring	2
40	640087	Nut – Float Bowl	1
44	27110	Washer – Bowl	1
48	631027	Plug – Welch	1

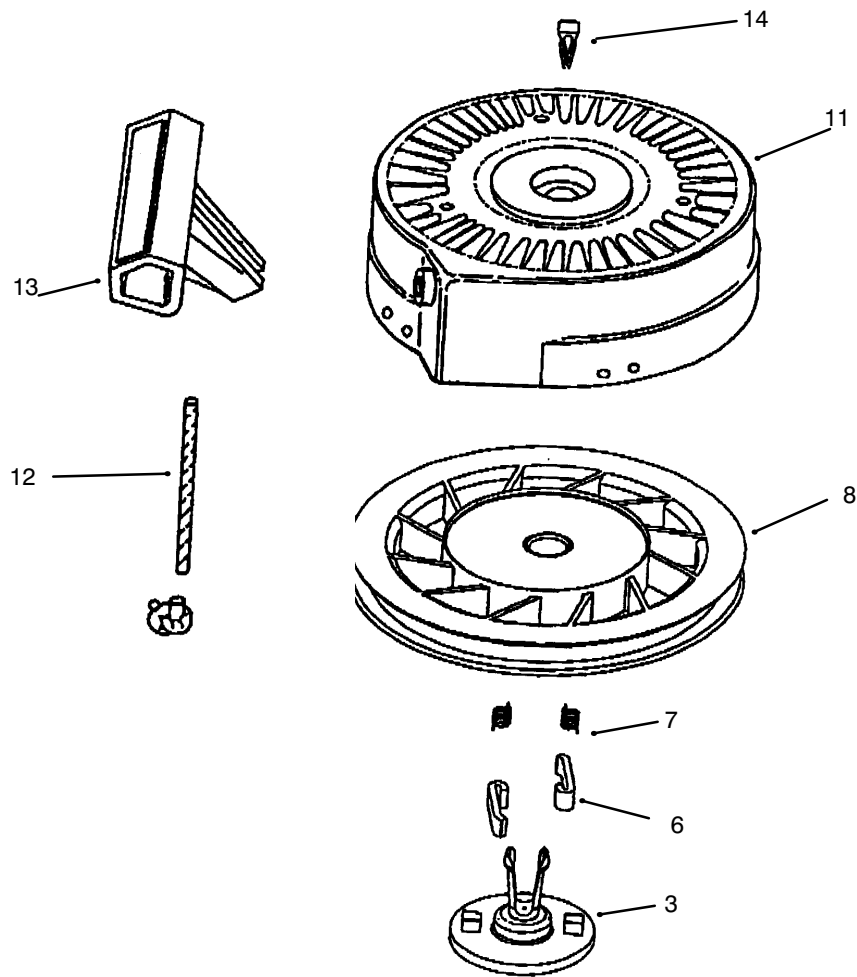 

Recoil Starter No. 590743

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
3	590740	Retainer	1	11	590643	Starter Housing Assembly	1
6	590616	Dog – Starter	2	12	590535	Rope – Starter	1
7	590617	Spring – Dog	2	13	590701	Handle – Starter	1
8	590645A	Pulley & Rewind Spring Asm	1	14	590741	Tab – Locking	1

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	8	9	2	Grommet
3-7501	5	9	2	Washer—Curved
3-7501	6	30	2	Washer—Curved
17-9426	8	8	2	Screw
23-3250	6	22	2	Wheel
23-7470	3	12	1	Guide—Rope
25-5640	1	28	1	Washer
25-5640	2	28	1	Washer
27-0062	6	29	1	Axle
38-7820	5	20	2	Bearing—Ball
40-5940	3	20	1	Switch—Key
44-2750	3	24	1	Body—Primer
44-3173	3	25	1	Hose—Primer
46-8094	1	17	3	Screw—TAP
46-8094	2	17	3	Screw—TAP
46-8094	4	33	4	Screw—TAP
46-8094	7	36	3	Screw—TAP
49-1490	3	21	2	"J" Nut
49-2483	6	11	1	Hose—Fuel
55-3573	3	11	1	Cap—Gas
55-9370	6	24	1	Spacer—Rotor Blade (Model 38177, 38178)
61-4670	9	8	1	Stop—Pinion
61-4670	10	8	1	Stop—Pinion
61-4680	9	7	1	Ring—Lock
61-4680	10	7	1	Ring—Lock
61-4690	9	5	1	Spring—Anti Drift
61-4690	10	5	1	Spring—Anti Drift
61-4790	8	18	1	Decal—Warning (Csa) (E) (Model 38175)
61-4810	9	18	1	Boot—Switch
61-4810	10	18	1	Boot—Switch
61-4820	9	19	1	Switch
61-4820	10	19	1	Switch
63-8360	3	16	1	Key—Ignition
66-7460	3	19	1	Bulb—Primer
70-7802	9	1	1	ASM—Motor
70-7810	9	3	1	Housing—Starter
70-7810	10	3	1	Housing—Starter
70-7820	9	12	1	Housing—Lower
70-7820	10	12	1	Housing—Lower
70-7850	9	2	1	Cover—Gear
70-7850	10	2	1	Cover—Gear
70-7890	9	6	1	Cap—Pinion
70-7890	10	6	1	Cap—Pinion
70-7900	9	11	1	Bushing—Upper
70-7900	10	11	1	Bushing—Upper
71-5050	1	10	1	Body—Half Sheave
71-5050	2	10	1	Body—Half Sheave
71-5060	1	11	1	Cap—Half Sheave
71-5060	2	11	1	Cap—Half Sheave
71-5260	1	20	1	Pulley—Idler
71-5260	2	20	1	Pulley—Idler
71-5290-03	1	2	2	Plate—Engine
71-5290-03	2	2	2	Plate—Engine
71-5330	8	6	1	Adjuster—Cable (Model 38177, 38178)
71-5470	2	4	1	Spring—Brake
71-5480	8	5	1	Spring—Clutch (Model 38177, 38178)
71-5530	8	4	1	Cover—Spring (Model 38177, 38178)
75-8650	4	32	1	Retainer—Chute
75-8660	3	30	1	Housing
75-8670	4	36	1	Handle—Chute
75-8690	5	21	1	Nut—Rotor Shaft
75-8700	1	23	1	Bushing—Idler

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
75-8710	5	17	1	Spacer
75-8720	1	7	1	Pin-Idler
75-8740	1	27	1	Hub
75-8740	2	27	1	Hub
75-8750	1	25	1	Pulley
75-8750	2	25	1	Pulley
75-8760	3	5	1	Chute-Discharge (Model 38170, 38175)
75-8762	3	5	1	Chute-Discharge (Model 38177, 38178)
75-8770	4	40	1	Deflector-Chute
75-8780	5	14	1	Scraper
75-8790	8	13	1	Shroud-Lower
75-8800	3	28	1	Shroud-Upper
75-8820-03	7	34	1	Sideplate-RH
75-8830-03	1	15	1	Cover-Belt
75-8840-03	5	3	1	Wa-Rotor
75-8870-03	1	6	1	Bracket-Cover
75-8870-03	2	6	1	Bracket-Cover
75-8880-03	5	4	2	Support-Motor
75-8900-03	7	37	1	Bracket-Wheel
75-8910	6	28	1	Bracket-Wheel
75-8980-03	6	5	1	Support-Engine
75-9010	1	26	1	"v" Belt
75-9020	1	4	1	Spring-Extension
75-9030-03	3	18	1	Panel-Control (Model 38175, 38178)
75-9031-03	3	18	1	Panel-Control (Model 38170, 38177)
75-9040	5	8	2	Washer-Square
75-9050	1	21	1	Arm-Idler
75-9060-03	8	14	1	Tube-Frame
75-9070-03	8	3	1	Handle-Upper (Model 38170, 38175)
75-9080-03	5	2	2	Wa-Flange Bearing
75-9100	6	8	1	Bushing-Isolation
75-9130	8	15	2	Washer-Curved
75-9160	4	34	1	Detent-Chute
75-9170	4	35	2	Spring-Compression
75-9180	5	1	1	Washer-Rubber
77-0402	6	17	1	ASM-Switch Housing (Model 38175)
80-0650	6	3	1	Spacer-Mount
80-0680	3	26	1	Decal-Powerlite (Model 38170, 38177)
80-0690	3	26	1	Decal-Powerlite E (Model 38175 38178)
80-0700	6	19	2	Screw-HH Tork
84-1970	5	19	8	Screw-Countersunk
84-1980	5	18	2	Blade-Rotor
84-5240	10	10	1	Pinion ASM (Ser Only)
84-5420	3	13	1	Decal-Control Panel (Model 38170)
84-5430	3	13	1	Decal-Panel (Model 38175)
92-4853	3	14	1	Handle-Starter
92-5424	3	15	1	Staple-Handle
92-6003	9	9	1	ASM-Shaft & Gear
92-6003	10	9	1	ASM-Shaft & Gear
92-6012	6	10	1	ASM-Bracket & Stud
92-6031	6	9	3	Screw
94-2561	2	14	1	Decal-Hot Intl
94-2564	3	13	1	Decal-Control (Model 38178)
94-2565	3	13	1	Decal-Panel (Model 38177)
94-2577	8	2	1	Decal-Rotor Drive Intl (Model 38177, 38178)
94-2789	6	9	3	Screw-TAP
94-9933	9	17	1	Plug-Power
94-9946-03	2	8	1	Belt Guide
94-9947	2	21	1	Arm-Brake
94-9948	2	23	1	Bushing-Idler
94-9949	8	7	1	Cable-Clutch (Model 38177, 38178)
95-1903	6	4	1	Ring-Isolator

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
95-1904	1	14	1	Decal-Hot
95-1905	3	6	2	Washer-Rubber
95-7943-03	8	1	1	Bail (Model 38177, 38178)
95-7944-03	8	3	1	Handle-Upper (Model 38177, 38178)
95-7945-03	1	3	1	Sideplate-LH
95-7945-03	2	3	1	Sideplate-LH
95-7946-03	2	15	1	Cover-Belt
95-7949	6	25	1	Cable-Pulley (Model 38177, 38178)
98-2253	10	20	1	Base-Switch Hsg
98-2254	10	21	1	Cap-Switch Hsg
98-2256	3	23	1	Clamp (Model 38177, 38178)
98-2259	10	17	1	Plug-Power
98-2276	6	17	1	Starter Motor ASM(Serv) (Model 38178)
98-7134	8	16	2	Knob
99-1790	2	26	1	Belt
99-1917	10	1	1	ASM-Motor
99-2253	9	20	1	Base-Switch Hsg
99-2254	9	21	1	Cap-Switch Hsg
233-67	3	8	1	Knob
2412-91	6	15	1	Clamp-Cable (Model 38175, 38178)
2412-98	6	13	2	Clamp-Hose
250-7	9	22	1	Tie-Cable
250-7	10	22	1	Tie-Cable
250-7	6	16	1	Tie-Cable (Model 38175, 38178)
321-3	4	37	2	Screw-HH
321-3	5	12	3	Screw-HH
321-10	6	21	4	Screw-HH (Model 38170, 38175)
321-10	6	21	3	Screw-HH (Model 38177, 38178)
321-11	6	26	1	Screw-HH (Model 38177, 38178)
323-44	2	7	1	Screw-HH
3229-5	5	7	2	Screw-CARR
3229-11	4	38	1	Bolt-CARR
3230-2	3	4	2	Screw-CARR
3230-23	1	29	1	Bolt-CARR
3230-23	2	29	1	Bolt-CARR
3234-33	5	6	7	Screw-HFW
3235-6	1	13	1	Screw-HH
3235-6	2	13	1	Screw-HH
3250-32	3	27	2	Screw-PPH
3255-10	6	9	3	Lockwasher
3256-1	1	16	2	Washer-Flat
3256-1	2	16	2	Washer-Flat
3256-1	3	29	4	Washer-Flat
3256-1	6	6	5	Washer-Flat (Model 38170, 38175)
3256-1	6	6	6	Washer-Flat (Model 38177, 38178)
3256-14	1	30	1	Washer-Flat
3256-14	2	30	1	Washer-Flat
3256-14	5	15	3	Washer-Flat
3256-14	8	10	2	Washer-Flat
3256-14	6	23	1	Washer-Flat (Model 38170, 38175)
3256-14	6	23	3	Washer-Flat (Model 38177, 38178)
3256-25	1	24	1	Washer-Flat
3256-25	2	24	1	Washer-Flat
3256-58	6	2	1	Washer-Flt
3256-68	3	1	2	Washer-Flat
3256-71	1	12	1	Washer-Flat
3256-71	2	12	1	Washer-Flat
3256-81	3	9	2	Washer-Flat (Model 38170, 38175)
3256-81	3	9	3	Washer-Flat (Model 38177, 38178)
3257-3	1	1	1	Key-Woodruff
3257-3	2	1	1	Key-Woodruff
3290-320	6	27	2	Nut-Push

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3290-340	3	2	2	Washer-Spring
3296-2	1	31	1	Nut-Lock
3296-2	2	31	1	Nut-Lock
3296-2	6	32	1	Nut-Lock
3296-2	9	15	2	Nut-Lock
3296-2	10	15	2	Nut-Lock
3296-16	6	1	1	Nut-Lock
3296-29	1	9	5	Nut-Lock
3296-29	2	9	5	Nut-Lock
3296-29	3	3	2	Nut-Lock
3296-38	1	22	1	Nut-Lock
3296-38	2	22	1	Nut-Lock
3296-42	4	31	2	Nut-Lock
3296-42	5	10	2	Nut-Lock
3296-42	6	31	4	Nut-Lock
3296-56	5	5	12	Nut-Lock
3296-56	3	10	2	Nut-Lock (Model 38170, 38175)
3296-56	3	10	3	Nut-Lock (Model 38177, 38178)
3296-59	1	19	1	Nut-Lock
3296-59	2	19	1	Nut-Lock
32105-23	1	18	1	Screw-HH
32105-23	2	18	1	Screw-HH
32105-23	7	35	1	Screw-HH
32115-15	4	39	3	Retainer
32115-17	8	12	2	Nut-Expansion
32115-19	5	13	3	"u" Nut
32144-4	1	5	4	Screw-TAP
32144-4	2	5	4	Screw-TAP
32144-27	6	12	3	Screw (Model 38175, 38178)
32144-34	5	16	3	Screw-SHWH
32144-34	8	11	2	Screw-SHWH
32144-53	3	17	2	Screw-Tf Acorn Hd
32144-89	3	22	2	Cscrew-HH
32144-101	9	16	2	Screw-PPH
32144-101	10	16	2	Screw-PPH

[illegible]

[illegible]

21