



CCR[™] 1000 Snowthrower

Model No. 38400 – 9900001 & Up

Model No. 38405 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deflector & Control Panel Assembly	1	Carburetor No. 640086	7
Housing & Side Plate Assembly	2	Engine Tecumseh Model No.	
Engine & Gas Tank Assembly	3	HSK635–1721A	8–9
Handle Assembly	4	Recoil Starter No. 590743	10
Rotor Assembly	5	Toro Part Number Index	11–13
Motor & Switch Housing Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

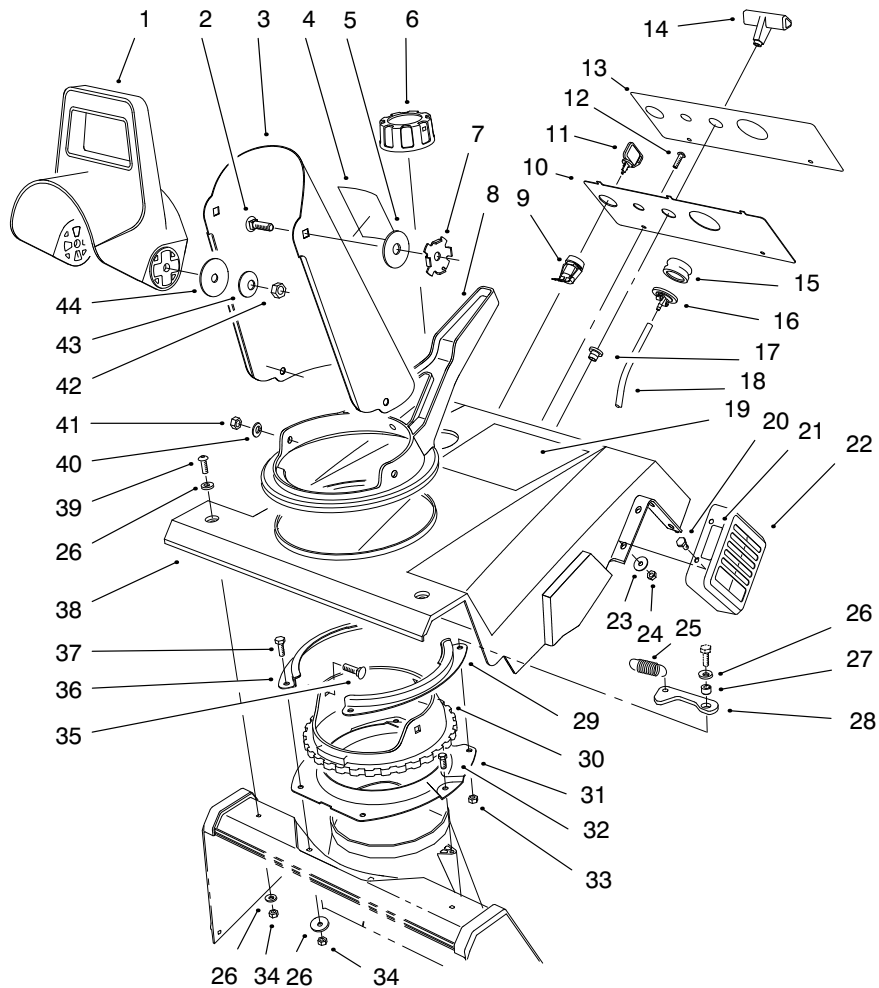


Sheet No.:2

Deflector & Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	56-2680	1	Deflector
2	3230-22	2	Screw-CARR
3	94-2790	1	Chute ASM Incl 6
4	94-2900	1	Decal-Danger
5	20-4320	2	Washer-Rubber
6	55-3573	1	Cap-Gas
7	55-8950	2	Plate-Friction
8	71-4940	1	Handle-Chute
9	40-5940	1	Switch-Key
10	71-5240-03	1	Panel-Control (Model 38400)
10	71-5241-03	1	Panel-Control (Model 38405)
11	63-8360	1	Key-Ignition
12	32144-53	2	Screw-Tf Acorn Hd
13	88-1020	1	Decal-Control Panel
13	88-1030	1	Decal-Control Panel
14	92-4853	1	Handle-Starter
15	66-7460	1	Bulb-Primer
16	44-2750	1	Body-Primer
17	23-7470	1	Guide-Rope
18	44-3173	1	Hose-Primer
19	99-5950	1	Decal-Ccr 1000 (Model 38400)
19	99-5951	1	Decal-Ccr 1000 E (Model 38405)

Ref. No.	Part No.	Qty.	Description
20	3290-359	4	Screw-Rd
21	95-1904	1	Decal-Hot
22	71-5340-03	1	Guard-Muffler
23	3256-61	4	Washer-Flat
24	3296-2	4	Nut-Lock
25	80-4600	1	Spring-Detent
26	3256-22	7	Washer-Flat
27	55-9370	1	Spacer-Rotor Blade
28	80-4610	1	Arm-Detent
29	71-4980-03	1	Retainer-Chute Ring
30	71-4950	1	Ring-Chute
31	55-8921-03	1	Ring-Chute Support
32	46-8092	2	Screw
33	3296-56	1	Nut-Lock
34	3296-42	5	Nut-Lock
35	3230-16	3	Screw-CARR
36	71-4990-03	1	Retainer-Chute Ring
37	321-4	4	Screw-HH
38	80-4811	1	Upper-Shroud
39	3250-32	2	Screw-PPH
40	3256-70	3	Washer-Flt
41	32149-1	3	Nut
42	3296-29	2	Nut-Lock
43	3290-456	2	Washer-Lock
44	3256-68	2	Washer-Flat

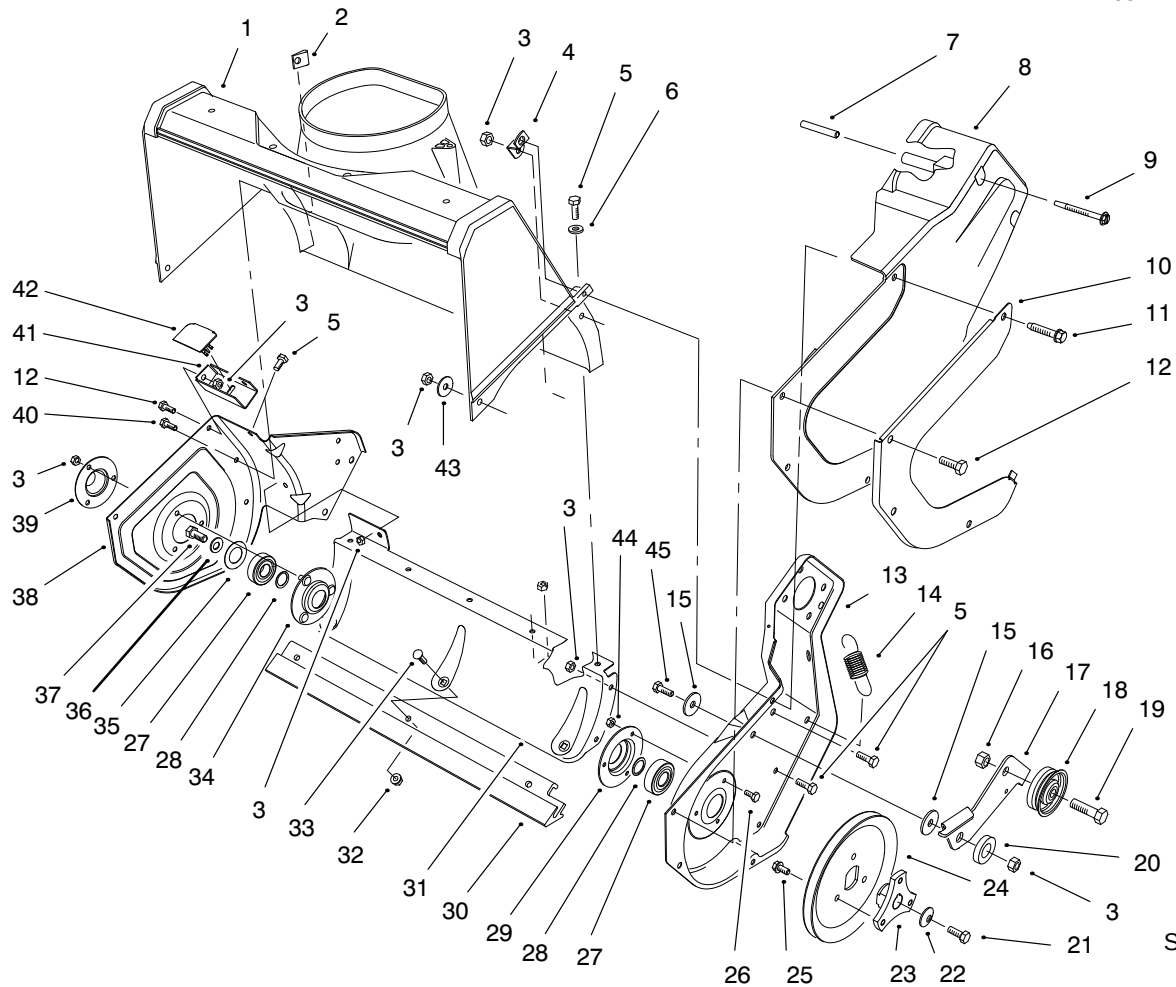


Sheet No.:3

Housing & Side Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	55-8700	1	Housing
2	32115-14	1	"u" Nut
3	3296-42	21	Nut-Lock
4	55-9430	1	Bracket
5	321-4	10	Screw-HH
6	3256-22	5	Washer-Flat
7	57-3830	2	Tube
8	71-5030	1	Cover-Drive
9	71-5350	2	Screw-Thrd Forming
10	71-5150-03	1	Guard-Edge
11	36-3860	1	Screw
12	32105-15	7	Screw-HH
13	71-4911-03	1	Sideplate-Left
14	71-5470	1	Spring-Brake
15	3256-55	2	Washer-Flat
16	3296-39	1	Nut-Lock
17	71-5160	1	Idler-Brake Arm
18	71-5260	1	Pulley-Idler
19	323-44	1	Screw-HH
20	80-4620	1	Spacer
21	321-30	1	Screw - HH
22	3290-456	1	Washer-Lock
23	71-5070	1	Hub-Mounting
24	71-5410	1	Pulley-Rotor
25	12-3270	3	Screw-HH
26	32105-8	3	Screw


Ref. No.	Part No.	Qty.	Description
27	38-7820	2	Bearing-Ball
28	52-7280	2	Washer-Thrust
29	38-8620	1	Retainer-Bearing
30	71-5390	1	Scraper
31	71-4930-03	1	Housing-Lower
32	32128-10	3	Nut-Lock HHF
33	3229-11	3	Bolt-CARR
34	52-9110	1	Bearing
35	52-7270	1	Washer-Rubber
36	3256-24	1	Washer-Flat
37	3234-25	1	Bolt-Flange
38	71-4920-03	1	Sideplate-RH
39	52-7290-03	1	Retainer-Bearing
40	321-39	1	Screw-HH
41	71-5310-03	1	Bracket-Support
42	71-5270	1	Cover-Bracket
43	3256-67	2	Washer-Flat
44	3296-2	3	Nut-Lock
45	321-6	1	Screw-HH

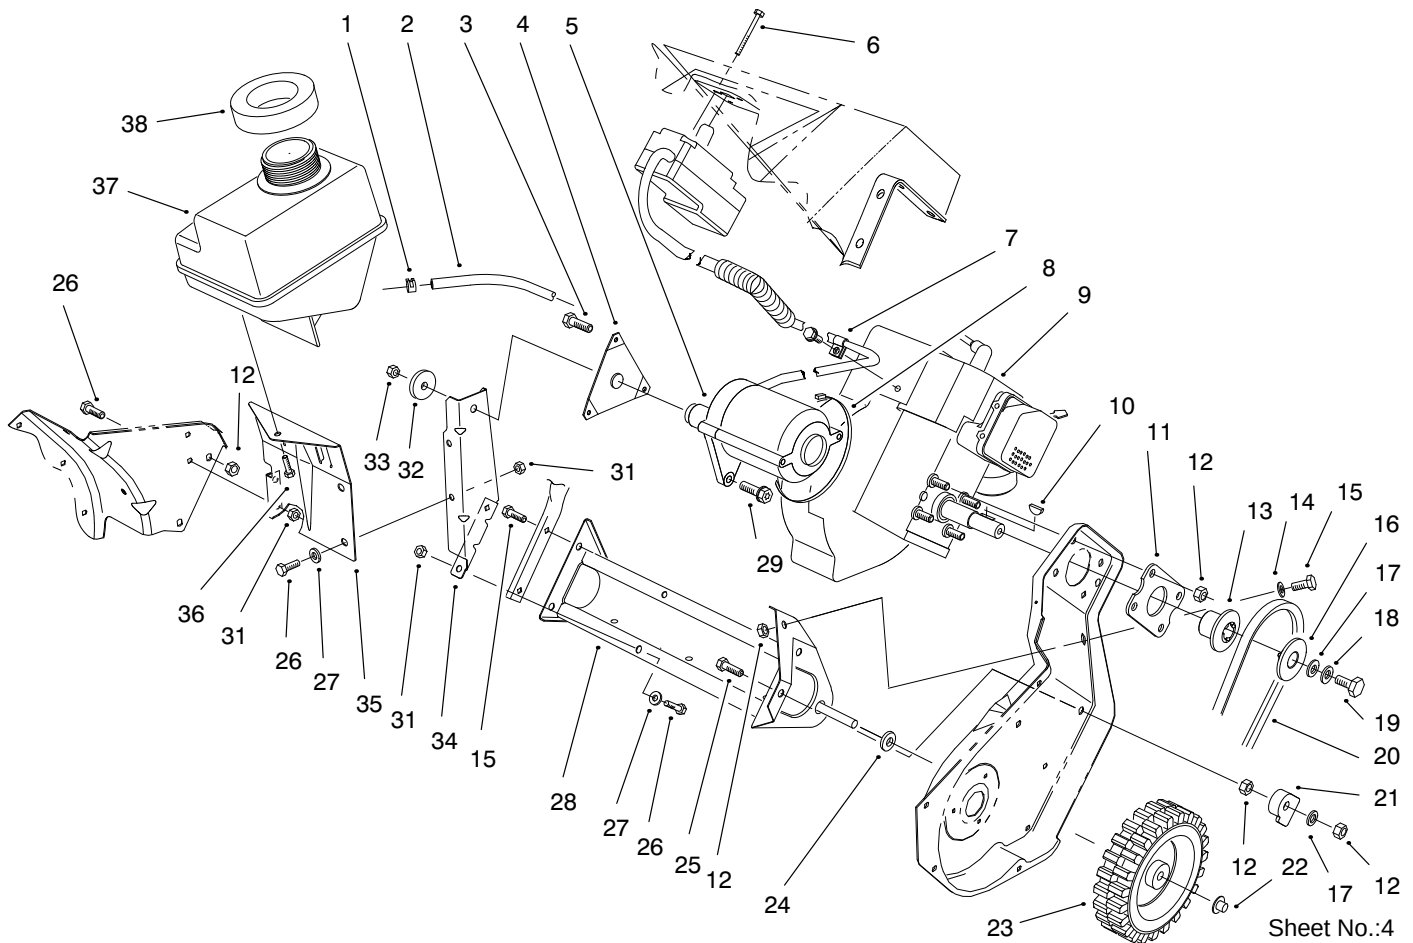

Engine & Gas Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	2412-98	2	Clamp-Hose
2	49-2482	1	Hose-Gas
3	3255-10	A/R	Lockwasher
3	92-6031	A/R	Screw
3	94-2789	3	Screw-TAP
4	92-6012	1	ASM-Bracket & Stud
5	77-0402	1	ASM-Switch Housing (Model 38405)
6	32144-27	3	Screw (Model 38405)
7	2412-91	1	Clamp-Cable (Model 38405)
8	250-7	1	Tie-Cable (Model 38405)
9		1	ASM-Engine
10	3257-3	1	Key-Woodruff
11	71-5290-03	1	Plate-Engine
12	3296-29	8	Nut-Lock
13	71-5050	1	Body-Half Sheave
14	3256-23	1	Washer-Flat
15	322-3	3	Screw-HH
16	71-5060	1	Cap-Half Sheave
17	3256-71	2	Washer-Flat
18	3290-456	1	Washer-Lock
19	3235-6	1	Screw-HH
20	71-5381	1	"v" Belt
21	84-5610	1	Guide-Cable

Ref. No.	Part No.	Qty.	Description
22	3290-320	2	Nut-Push
23	23-3250	2	Wheel
24	71-5440	2	Spacer-Wheel
25	322-5	1	Screw-HH
26	321-4	6	Screw-HH
27	3256-22	4	Washer-Flat
28	71-5200-03	1	Wa-Frame
29	80-0700	2	Screw-HH Tork (Model 38405)
31	3296-42	6	Nut-Lock
32	71-5320	1	Washer-Support
33	3296-16	1	Nut-Lock
34	71-5210-03	1	Support-Engine
35	71-5220-03	1	Bracket-Tank
36	32144-53	1	Screw-Tf Acorn Hd
37	71-5020	1	Tank-Gas
38	55-9310	1	Seal-Tank

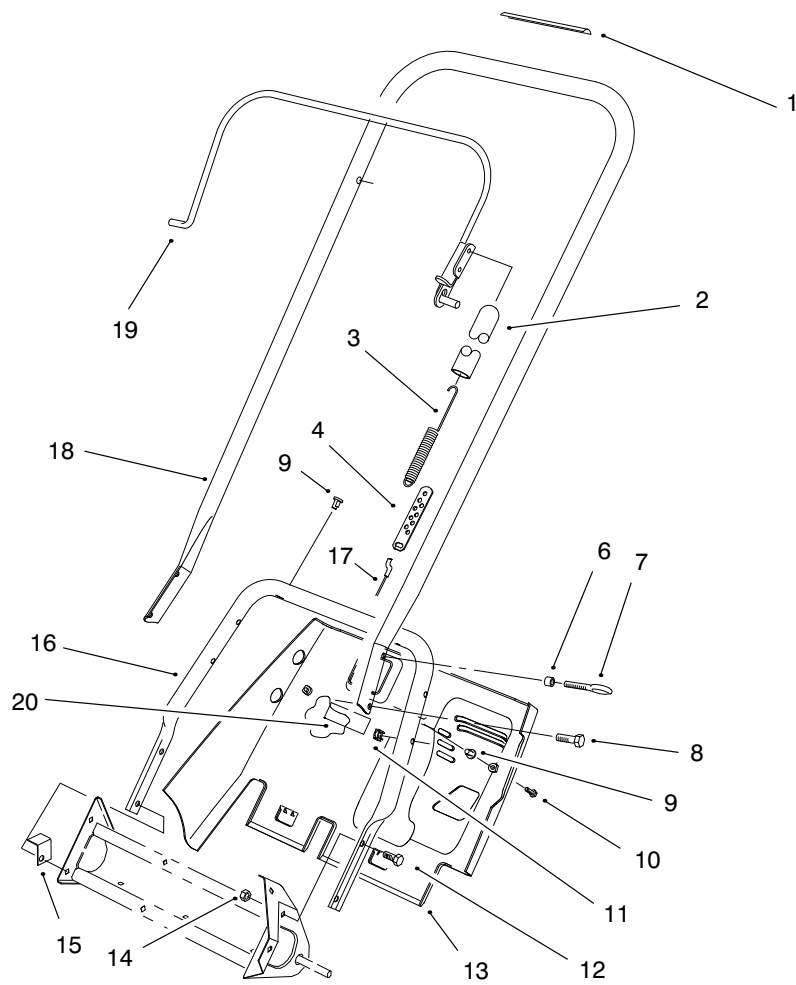


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	66-6870	1	Decal-Rotor Drive				
2	71-5530	1	Cover-Spring				
3	71-5480	1	Spring-Clutch				
4	71-5330	1	Adjuster-Cable				
6	55-9370	1	Spacer-Rotor Blade				
7	3299-1	1	Eyebolt				
8	32105-11	3	Screw-Slot Hex				
9	3290-486	5	Nut-Push				
10	32144-53	3	Screw-Tf Acorn Hd				
11	3290-225	4	Nut-Speed				
12	322-3	2	Screw-HH				
13	71-5040	1	Shroud-Lower				
14	3296-29	2	Nut-Lock				
15	71-5600	1	Bracket-Shroud				
16	71-5370-03	1	Tube-Handle				
17	55-9322	1	Cable-Clutch				
18	71-5090-03	1	Handle-Upper				
19	71-5120-03	1	Bail				
20	61-4790	1	Decal				

Motor & Switch Housing Assembly (Model No. 38405) (120 Volt)


Ref. No.	Part No.	Qty.	Description
1	70-7802	1	ASM-Motor
2	70-7850	1	Cover-Gear
3	70-7810	1	Housing-Starter
5	61-4690	1	Spring-Anti Drift
6	70-7890	1	Cap-Pinion
7	61-4680	1	Ring-Lock
8	61-4670	1	Stop-Pinion
9	92-6003	1	ASM-Shaft & Gear
10	84-5240	1	Pinion ASM
11	70-7900	1	Bushing-Upper
12	70-7820	1	Housing-Lower
15	3296-2	2	Nut-Lock
16	32144-101	2	Screw-PPH
17	94-9933	1	Plug-Power
18	61-4810	1	Boot-Switch
19	61-4820	1	Switch
20	99-2253	1	Base-Switch Hsg
21	99-2254	1	Cap-Switch Hsg
22	250-7	1	Tie-Cable

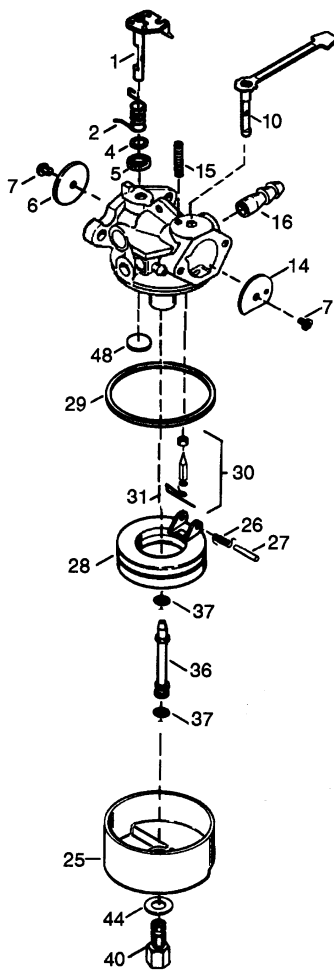

CARBURETOR NO. 640086

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	632166A	Throttle Shaft & Lever Asm.	1	27	631024	Float shaft	1
2	632169	Throttle Return Spring	1	28	632019	Float	1
4	631184	Dust Seat Washer	1	29	631028	Float Bowl "O" Ring	1
5	631183	Dust Seat (Throttle)	1	30	631021	Inlet Needle, Seat & Clip (Incl. Ref. #31)	1
6	631621	Throttle Shutter	1	31	631022	Spring Clip	1
7	650506	Shutter Screw	2	36	640080	Main Nozzle Tube	1
10	632553	Choke Shaft & Lever Asm.	1	37	632547	"O" Ring, Main Nozzle Tube	1
14	631815	Choke Shutter	1	40	640087	High Speed Bowl Nut	1
15	630735	Choke Positioning Spring	1	44	27110	Bowl Nut Washer	1
16	632164	Fuel Fitting	1	48	631027	Welch Plug	1
25	631867	Float Bowl	1				
26	632386	Float Dampening Spring	1				

ENGINE TECUMSEH MODEL NO. HSK635-1721A

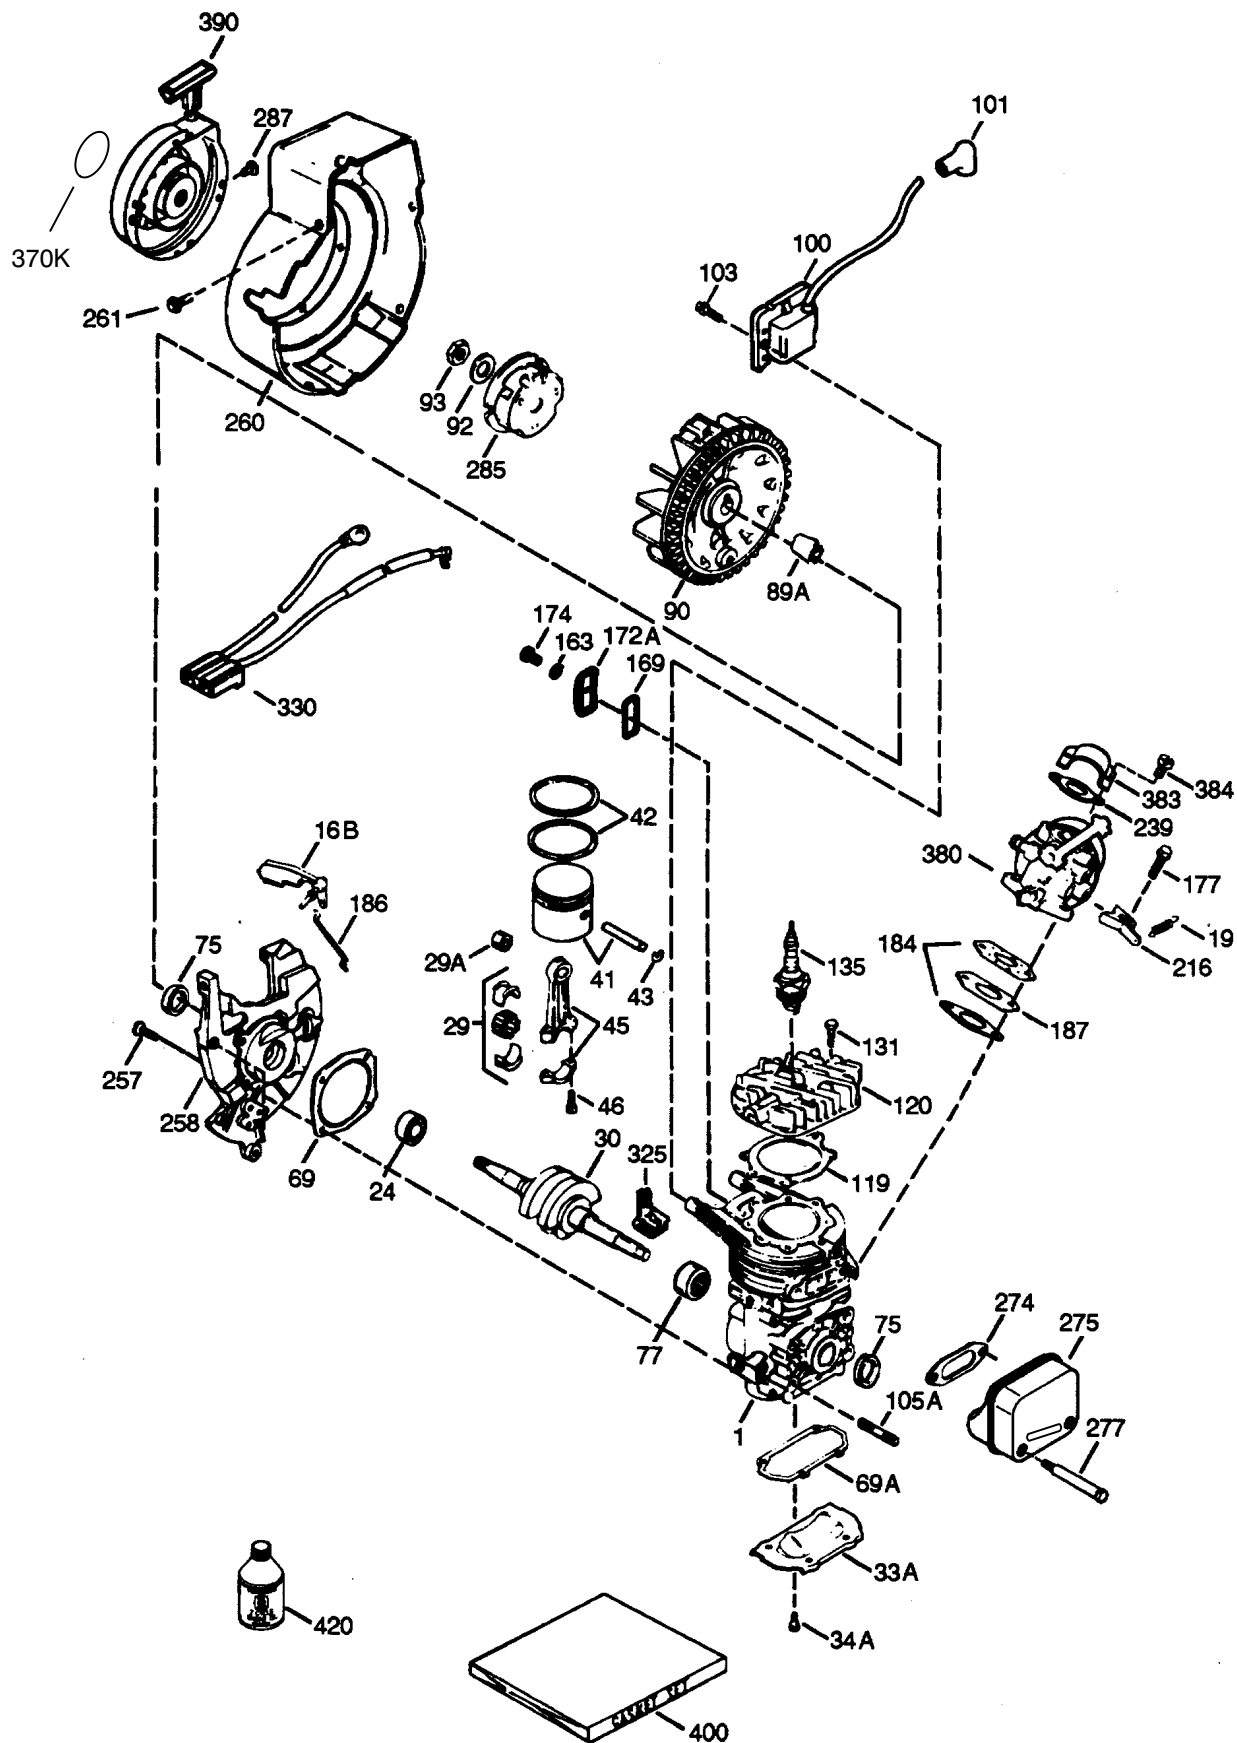


ENGINE TECUMSEH MODEL NO. HSK635–1721A

Ref. No.	Part No.	Description	No. Used
1		Cylinder (Order Short Block if Replacement is needed)	1
16B	490291A	Air Vane	1
19	570707	Extension Spring	1
24	530110	Ball Bearing	1
29	530150	Needle Bearing & Liner Set (37 Needles)	1
29A	530104A	Cartridge Bearing	1
30	290602	Crankshaft	1
33A	570644	Cover Plate	1
34A	650579	Screw, Torx T–25	4
41	310283A	Piston & Pin Assembly	1
42	310190	Ring Set	2
43	310167	Piston Pin Retaining Ring	2
45	310235B	Connecting Rod Assembly (Incl. Ref. #29, 29A, & 46)	1
46	650633	Connecting Rod Bolt	4
*69	510292A	Cylinder Cover Gasket	1
*69A	510323A	Cover Plate Gasket	1
75	510319	Oil Seal	2
77	530105	Cartridge Bearing	1
89A	611032	Adapter Sleeve	1
90	611066	Flywheel	1
92	650815	Belleville Washer	1
93	650390	Flywheel Nutt	1
100	34443B	Solid State Ignition (Incl. Ref. #101)	1
101	610118	Spark Plug Cover	1
103	651007	Screw, Torx T–15	2
105A	650796	Stud	4
*119	510274A	Cylinder Head Gasket	1
120	250240B	Cylinder Head	1
131	650477	Screw, Torx T–30	5

Ref. No.	Part No.	Description	No. Used
135	611049	Resistor Spark Plug	1
163	650838	Washer	1
*169	510325A	Cover Plate Gasket	1
172A	570708	Compression Release Cover	1
174	650579	Screw, Torx T–25	1
177	650959	Screw	2
*184	510326A	Carburetor Gasket	2
186	490322	Governor Link	1
187	570438A	Spacer	1
216	570645	R.P.M. Adjusting Lever	1
239	35815	Air Cleaner Gasket	1
257	650911	Screw, Torx T–30	4
258	350422	Blower Housing Base (Incl. Ref. #27)	1
260	350437	Blower Housing	1
261	650737	Screw	4
*274	513067A	Exhaust Gasket	1
275	390330	Muffler (Incl. Ref. #274 & 277)	1
277	650869	Screw	2
285	590551A	Starter Cup	1
287	650926	Screw	3
325	29443	Wire Clip	1
330	611153	Wire Harness	1
370K	36695	Starter Decal	1
380	640086	Carburetor (Incl. Ref. #184)	1
383	570434	Spit Cup	1
384	650431	Screw, Torx T–25	2
390	590743	Rewind Starter	
400	510324B	Gasket Set	1
420	730227A	2–Cycle Oil (8 oz.)	1

*Included in Gasket Set No. 510324B

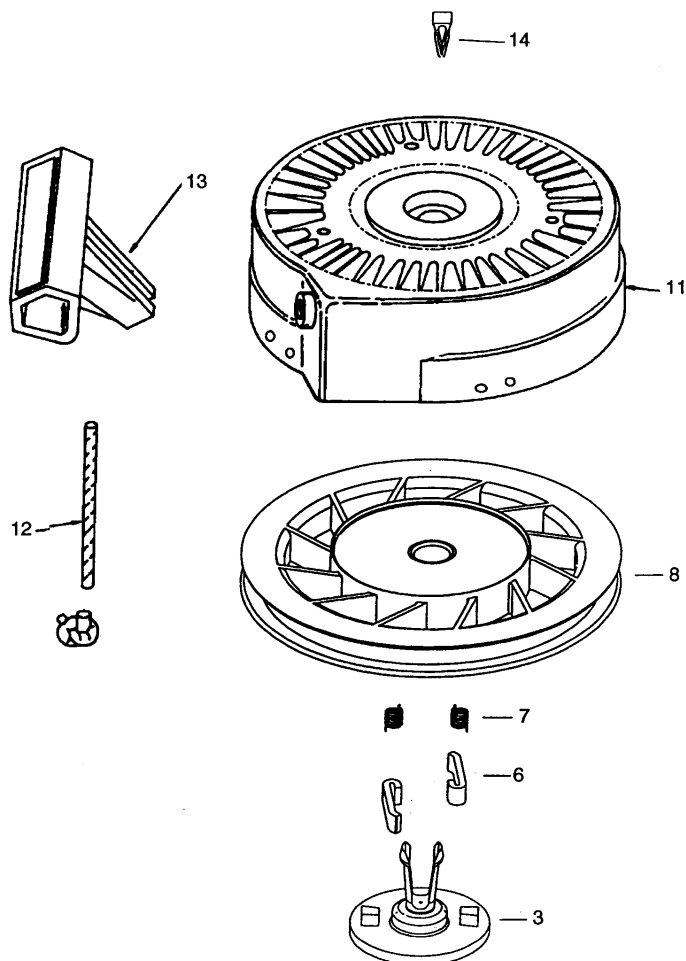

RECOIL STARTER NO. 590743

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590743	Rewind Starter	1	11	590643	Starter Housing Ass'y	1
3	590740	Retainer	1	12	590535	Starter Rope (Length 98" x 9/64" Dia.)	1
6	590616	Starter Dog	2	13	590701	Starter Handle	1
7	590617	Dog Spring	2	14	590741	Locking Tab	1
8	590645A	Pulley & Rewind Spring Ass'y	1				

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
10–8040	5	6	1	Key
12–3270	2	25	3	Screw–HH
20–4320	1	5	2	Washer–Rubber
23–3250	3	23	2	Wheel
23–7470	1	17	1	Guide–Rope
36–3860	2	11	1	Screw
38–7820	2	27	2	Bearing–Ball
38–8620	2	29	1	Retainer–Bearing
40–5940	1	9	1	Switch–Key
44–2750	1	16	1	Body–Primer
44–3173	1	18	1	Hose–Primer
46–8092	1	32	2	Screw
49–2482	3	2	1	Hose–Gas
52–7270	2	35	1	Washer–Rubber
52–7280	2	28	2	Washer–Thrust
52–7290–03	2	39	1	Retainer–Bearing
52–9110	2	34	1	Bearing
55–3573	1	6	1	Cap–Gas
55–8700	2	1	1	Housing
55–8921–03	1	31	1	Ring–Chute Support
55–8950	1	7	2	Plate–Friction
55–9202–03	5	3	1	Rotor
55–9310	3	38	1	Seal–Tank
55–9322	4	17	1	Cable–Clutch
55–9370	1	27	1	Spacer–Rotor Blade
55–9370	4	6	1	Spacer–Rotor Blade
55–9370	5	2	4	Spacer–Rotor Blade
55–9430	2	4	1	Bracket
56–2680	1	1	1	Deflector
57–3830	2	7	2	Tube
61–4670	6	8	1	Stop–Pinion
61–4680	6	7	1	Ring–Lock
61–4690	6	5	1	Spring–Anti Drift
61–4790	4	20	1	Decal
61–4810	6	18	1	Boot–Switch
61–4820	6	19	1	Switch
63–8360	1	11	1	Key–Ignition
66–6600–03	5	5	2	Rotor
66–6870	4	1	1	Decal–Rotor Drive
66–7460	1	15	1	Bulb–Primer
70–7802	6	1	1	ASM–Motor
70–7810	6	3	1	Housing–Starter
70–7820	6	12	1	Housing–Lower
70–7850	6	2	1	Cover–Gear
70–7890	6	6	1	Cap–Pinion
70–7900	6	11	1	Bushing–Upper
71–4911–03	2	13	1	Sideplate–Left
71–4920–03	2	38	1	Sideplate–RH
71–4930–03	2	31	1	Housing–Lower
71–4940	1	8	1	Handle–Chute
71–4950	1	30	1	Ring–Chute
71–4980–03	1	29	1	Retainer–Chute Ring
71–4990–03	1	36	1	Retainer–Chute Ring
71–5020	3	37	1	Tank–Gas
71–5030	2	8	1	Cover–Drive
71–5040	4	13	1	Shroud–Lower
71–5050	3	13	1	Body–Half Sheave
71–5060	3	16	1	Cap–Half Sheave
71–5070	2	23	1	Hub–Mounting
71–5090–03	4	18	1	Handle–Upper
71–5120–03	4	19	1	Bail
71–5150–03	2	10	1	Guard–Edge

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
71–5160	2	17	1	Idler–Brake Arm
71–5200–03	3	28	1	Wa–Frame
71–5210–03	3	34	1	Support–Engine
71–5220–03	3	35	1	Bracket–Tank
71–5240–03	1	10	1	Panel–Control (Model 38400)
71–5241–03	1	10	1	Panel–Control (Model 38405)
71–5260	2	18	1	Pulley–Idler
71–5270	2	42	1	Cover–Bracket
71–5290–03	3	11	1	Plate–Engine
71–5310–03	2	41	1	Bracket–Support
71–5320	3	32	1	Washer–Support
71–5330	4	4	1	Adjuster–Cable
71–5340–03	1	22	1	Guard–Muffler
71–5350	2	9	2	Screw–Thrd Forming
71–5370–03	4	16	1	Tube–Handle
71–5381	3	20	1	"v" Belt
71–5390	2	30	1	Scraper
71–5410	2	24	1	Pulley–Rotor
71–5440	3	24	2	Spacer–Wheel
71–5470	2	14	1	Spring–Brake
71–5480	4	3	1	Spring–Clutch
71–5530	4	2	1	Cover–Spring
71–5600	4	15	1	Bracket–Shroud
77–0402	3	5	1	ASM–Switch Housing (Model 38405)
80–0700	3	29	2	Screw–HH Tork (Model 38405)
80–4600	1	25	1	Spring–Detent
80–4610	1	28	1	Arm–Detent
80–4620	2	20	1	Spacer
80–4811	1	38	1	Upper–Shroud
84–1971	5	7	8	Screw
84–5240	6	10	1	Pinion ASM
84–5610	3	21	1	Guide–Cable
88–0781	5	1	2	Blade–Rotor
88–1020	1	13	1	Decal–Control Panel
88–1030	1	13	1	Decal–Control Panel
92–4853	1	14	1	Handle–Starter
92–6003	6	9	1	ASM–Shaft & Gear
92–6012	3	4	1	ASM–Bracket & Stud
92–6031	3	3	A/R	Screw
94–2789	3	3	3	Screw–TAP
94–2790	1	3	1	Chute ASM Incl 6
94–2900	1	4	1	Decal–Danger
94–9933	6	17	1	Plug–Power
95–1904	1	21	1	Decal–Hot
99–2253	6	20	1	Base–Switch Hsg
99–2254	6	21	1	Cap–Switch Hsg
99–5950	1	19	1	Decal–Ccr 1000 (Model 38400)
99–5951	1	19	1	Decal–Ccr 1000 E (Model 38405)
2412–91	3	7	1	Clamp–Cable (Model 38405)
2412–98	3	1	2	Clamp–Hose
250–7	6	22	1	Tie–Cable
250–7	3	8	1	Tie–Cable (Model 38405)
321–4	1	37	4	Screw–HH
321–4	2	5	10	Screw–HH
321–4	3	26	6	Screw–HH
321–4	5	9	4	Screw–HH
321–6	2	45	1	Screw–HH
321–8	5	8	1	Screw–HH
321–30	2	21	1	Screw – HH
321–39	2	40	1	Screw–HH
322–3	3	15	3	Screw–HH
322–3	4	12	2	Screw–HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
322–5	3	25	1	Screw–HH
323–44	2	19	1	Screw–HH
3229–11	2	33	3	Bolt–CARR
3230–16	1	35	3	Screw–CARR
3230–22	1	2	2	Screw–CARR
3234–25	2	37	1	Bolt–Flange
3235–6	3	19	1	Screw–HH
3250–32	1	39	2	Screw–PPH
3255–10	3	3	A/R	Lockwasher
3256–22	1	26	7	Washer–Flat
3256–22	2	6	5	Washer–Flat
3256–22	3	27	4	Washer–Flat
3256–23	3	14	1	Washer–Flat
3256–24	2	36	1	Washer–Flat
3256–55	2	15	2	Washer–Flat
3256–61	1	23	4	Washer–Flat
3256–67	2	43	2	Washer–Flat
3256–68	1	44	2	Washer–Flat
3256–70	1	40	3	Washer–Flt
3256–71	3	17	2	Washer–Flat
3257–3	3	10	1	Key–Woodruff
3290–225	4	11	4	Nut–Speed
3290–320	3	22	2	Nut–Push
3290–359	1	20	4	Screw–Rd
3290–456	1	43	2	Washer–Lock
3290–456	2	22	1	Washer–Lock
3290–456	3	18	1	Washer–Lock
3290–486	4	9	5	Nut–Push
3296–2	1	24	4	Nut–Lock
3296–2	2	44	3	Nut–Lock
3296–2	6	15	2	Nut–Lock
3296–16	3	33	1	Nut–Lock
3296–29	1	42	2	Nut–Lock
3296–29	3	12	8	Nut–Lock
3296–29	4	14	2	Nut–Lock
3296–39	2	16	1	Nut–Lock
3296–42	1	34	5	Nut–Lock
3296–42	2	3	21	Nut–Lock
3296–42	3	31	6	Nut–Lock
3296–56	1	33	1	Nut–Lock
3296–56	5	4	13	Nut–Lock
3299–1	4	7	1	Eyebolt
32105–8	2	26	3	Screw
32105–11	4	8	3	Screw–Slot Hex
32105–15	2	12	7	Screw–HH
32115–14	2	2	1	”u” Nut
32128–10	2	32	3	Nut–Lock HHF
32144–27	3	6	3	Screw (Model 38405)
32144–53	1	12	2	Screw–Tf Acorn Hd
32144–53	3	36	1	Screw–Tf Acorn Hd
32144–53	4	10	3	Screw–Tf Acorn Hd
32144–101	6	16	2	Screw–PPH
32149–1	1	41	3	Nut