



RECYCLER[®]
43cm Mower

Model No. 21013 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Control Assembly	6
Engine Assembly	2	Grass Bag Assembly	7
Blade Assembly	3		
Rear Axle Assembly	4		
Handle Assembly	5		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

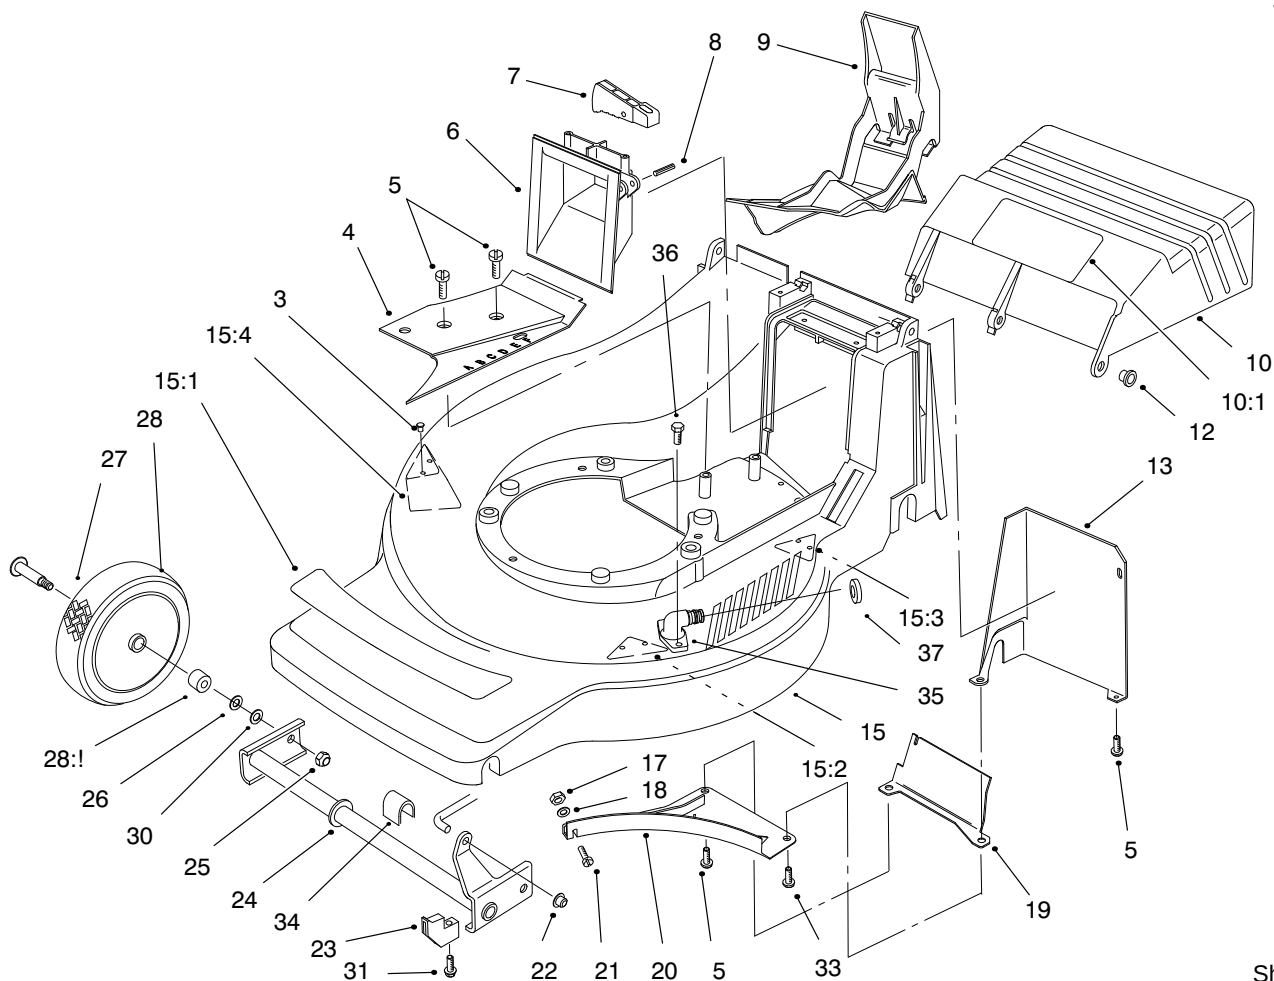

Sheet No.: 2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1709	1	Decal-Deck
4	93-3782	1	Cover-Belt
5	93-4095	4	Screw-Baffle
6	93-4054	1	Grip-Lower
7	98-3236	1	Trigger-HOC
8	3284-5	1	Pin-Groove
9	93-3790	1	Plug
10	99-1700	1	Door - Discharge
10:1	99-1708	1	Decal-Danger
12	93-3794	1	Bushing-Door
13	98-1429	1	Cover-Sheild
15	99-2548	1	Housing-Deck
15:1	93-3730	1	Kicker-Right Front
15:2	93-3740	1	Kicker-Left Front
15:3	93-3750	1	Kicker-Left Rear
15:4	32144-111	6	Screw - PPH
17	3296-2	1	Nut-Lock
18	3256-21	1	Washer-Flat
19	93-4110	1	Baffle
20	93-3720	1	Baffle
21	3250-13	1	Screw-PPH
22	32112-11	1	Nut
23	98-3216	2	Retainer-Axle
24	93-4080	1	Axle-Front
25	99-1711	2	Nut-Lock
26	40-1940	2	Washer


Ref. No.	Part No.	Qty.	Description
27	99-1712	2	Bolt-Wheel
28	93-4081	2	Wheel-Front
28:1	93-7024	4	Bushing
30	99-1713	2	Washer-Wave
31	93-3793	2	Screw-Retainer
33	94-1864	1	Screw-Baffle
34	98-3222	2	Cap-Front Axle
35	95-2747	1	Fitting-Washout
36	46-6811	2	Screw-HWH
37	46-6290	1	O-Ring

C-2108

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4352	1	Decal-Shroud
2	32144-121	2	Screw
3	2210-316	1	Rope-Stop
4	93-0243	1	Shroud
5	3290-378	1	Tie-Cable
6	32144-73	3	Screw-HWHTF
7	82-8550	1	Shield-Muffler
8	32144-102	3	Screw
9		1	Engine
10	93-8470	1	Screw-Clamp
11	2210-249	1	Clamp-Casing
12	92-2289	1	Plate-Logo


Ref. No.	Part No.	Qty.	Description

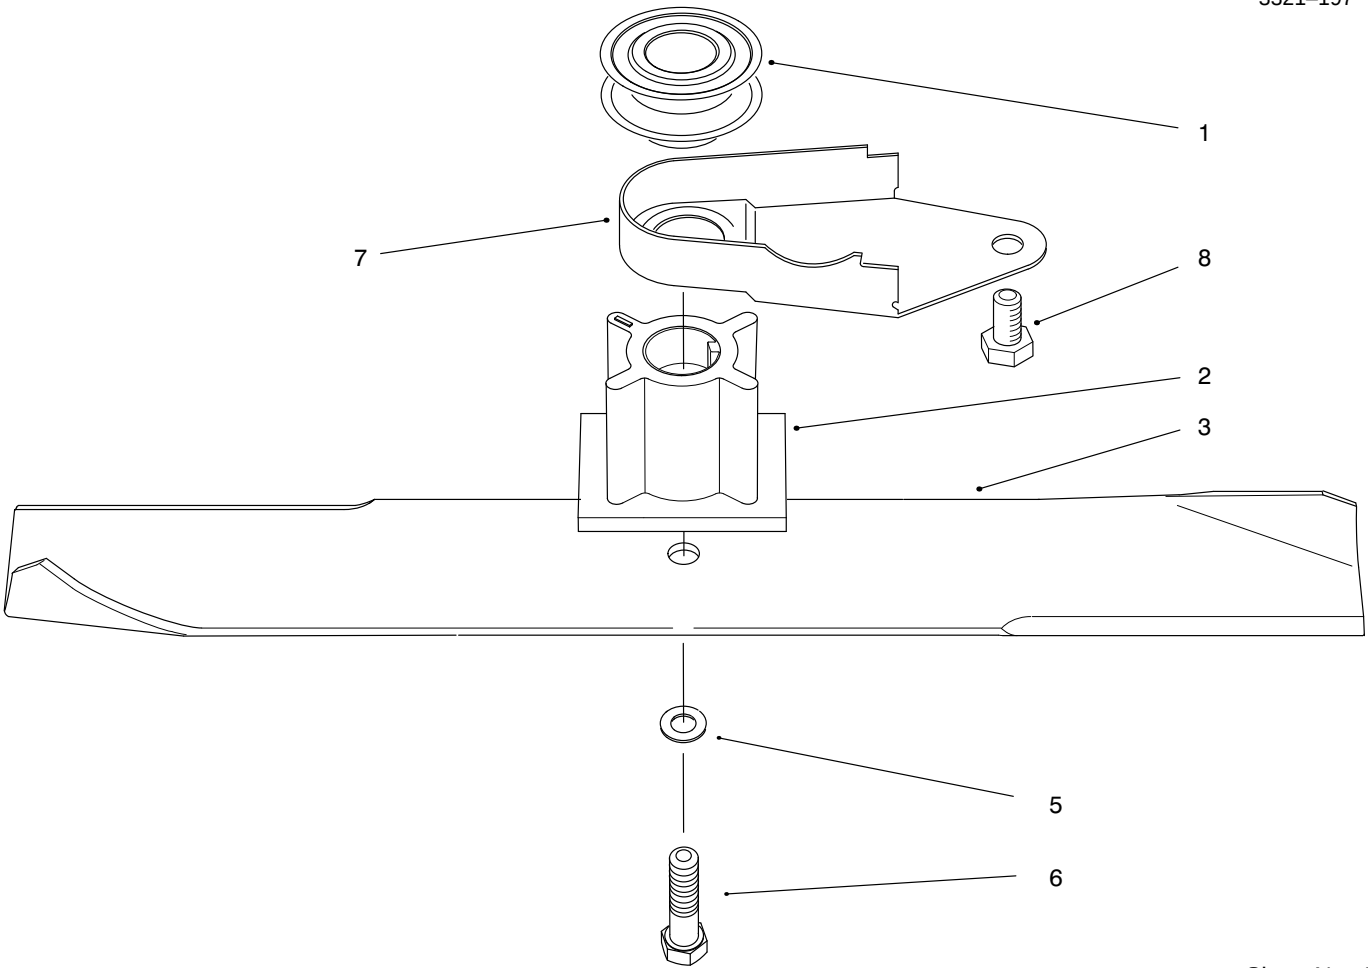

Sheet No.:4

Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	62-7550	1	Pulley-Driver				
2	93-4091	1	Retainer-Blade				
3	98-1430	1	Blade-43cm				
5	3253-22	1	Washer-Lock				
6	26-0672	1	Bolt-Blade				
7	93-8718	1	Cover-Belt Guide				
8	93-9837	1	Screw-Belt Cover				

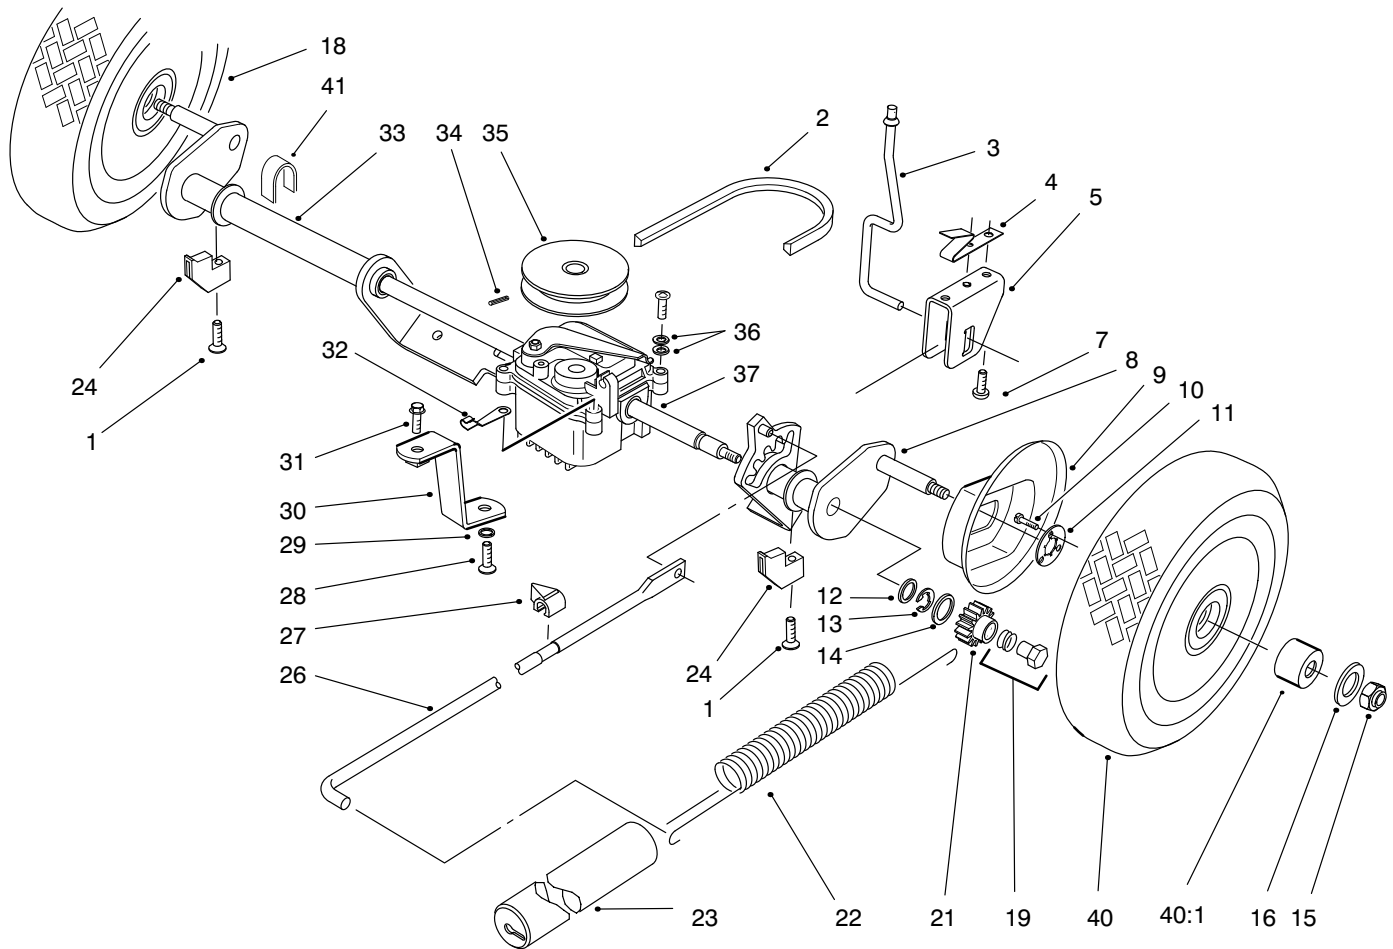


Sheet No.:5

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3793	2	Screw-Retainer
2	93-4118	1	V-Belt
3	98-3232	1	Rod-Trigger
4	93-4062	1	Spring-Trigger Return
5	93-4066	1	Saddle-HOC
7	93-4095	2	Screw-Baffle
8	93-4077	1	Rear Axle-Left
9	93-4067	2	Cover-Wheel
10	93-4096	6	Screw-Wheel Gear
11	93-4068	2	Gear-Wheel
12	93-3792	2	Washer-Cover
13	93-3791	2	Washer-Axle
14	93-4099	2	Washer-Gear
15	93-4098	2	Nut-Wheel
16	93-4097	2	Washer-Wheel
18	93-3783	1	Wheel-Rear
*18:1	93-7023	2	Bushing
19	99-1715	1	Bushing Assem-L.H.
*20	99-1716	1	Bushing Assem-R.H.
21	93-4072	2	Gear
22	71-7740	1	Spring
23	71-8450	1	Cover-Spring
24	98-3216	2	Retainer-Axle
26	93-4065	1	Rod-Link
27	71-7980	1	Indicator-HOC
28	93-4116	1	Screw-Bracket

Ref. No.	Part No.	Qty.	Description
29	93-4115	1	Washer-Bracket
30	93-4112	1	Bracket-Gear Box
31	93-4114	1	Screw-Bracket
32	93-7018	1	Holder-Cable
33	93-4078	1	Rear Axle-Right
34	93-4113	1	Pin-Roll
35	93-4111	1	Pulley-Gear Box
36	93-7019	2	Washer
37	93-4073	1	ASM-Gear Case
40	93-9836	1	Wheel-Rear
40:1	93-7023	2	Bushing
41	98-3226	2	Cap-Rear Axle

* Not illustrated

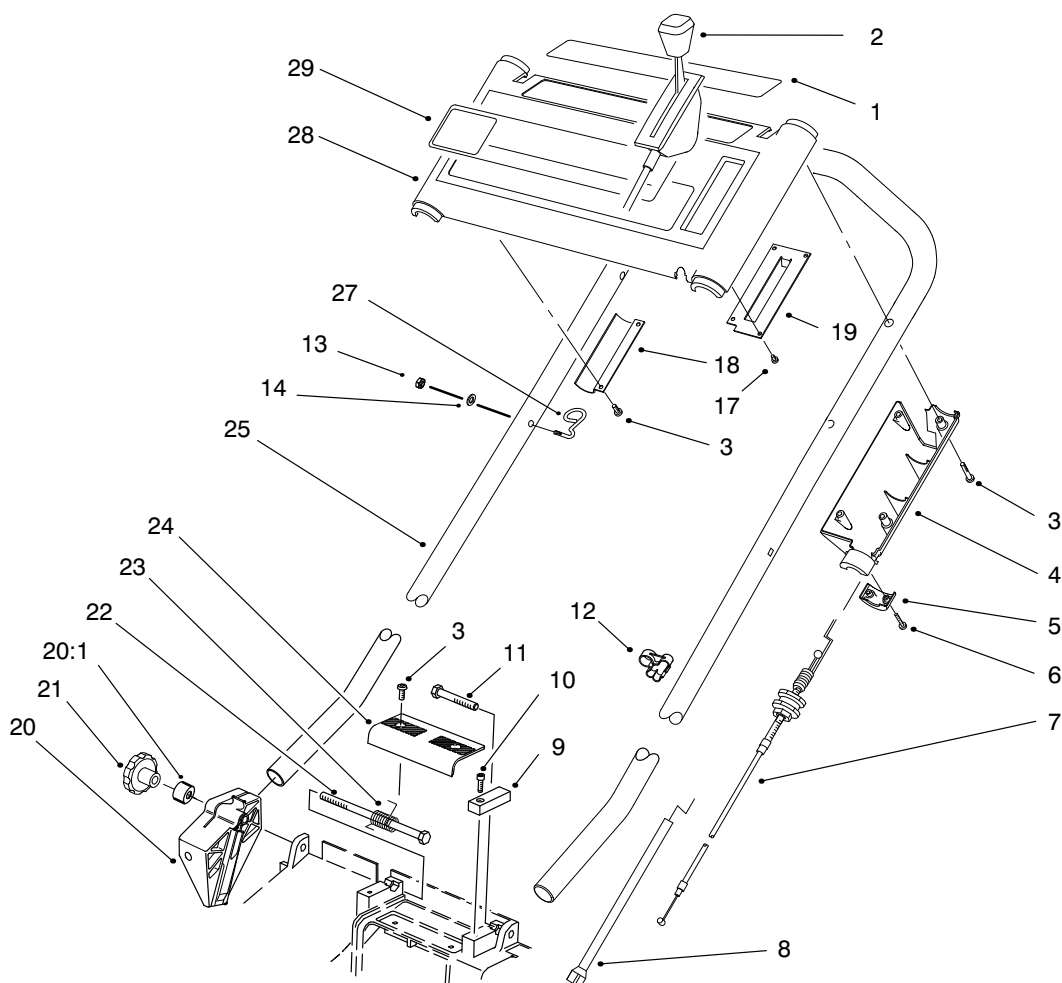

Sheet No.:6


Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-6026	1	Decal-Instruction	29	92-7865	1	(Incl. Ref #1) Decal-Panel
2	93-1117	1	Control-Throttle	*30	99-1705	1	Mount-Handle
3	32144-97	7	Screw-PPH	*30:1	99-1717	1	Spacer
4	93-0339	1	Cover-Throttle				
5	71-7630	1	Cap-Throttle				
6	32144-99	2	Screw-PPH				
7	99-1718	1	Cable-Traction				
8	99-1719	1	Cable-Brake				
9	93-4056	2	Cap-Bolt				
10	93-4094	2	Screw-Cap Hinge				
11	93-4060	1	Bolt-Short				
12	93-4084	2	Retainer-Cable				
13	3296-73	1	Nut-Lock				
14	3256-1	1	Washer-Flat				
17	32144-98	4	Screw-PPH				
18	71-8130	1	Bracket-Control				
19	71-8040	1	Plate-Throttle				
20	99-1710	1	Mount-Handle				
20:1	99-1717	1	Spacer				
21	19-4050	2	Knob				
22	93-4058	1	Bolt-Long				
23	93-4057	1	Spring-Door				
24	71-7860	1	Grip-Upper				
25	98-1440	1	Handle-Sp				
27	95-4457	1	Rope-Guide				
28	17-4319	1	Panel-Control				

* Not illustrated

Control Assembly

Ref. No.	Part No.	Qty.	Description

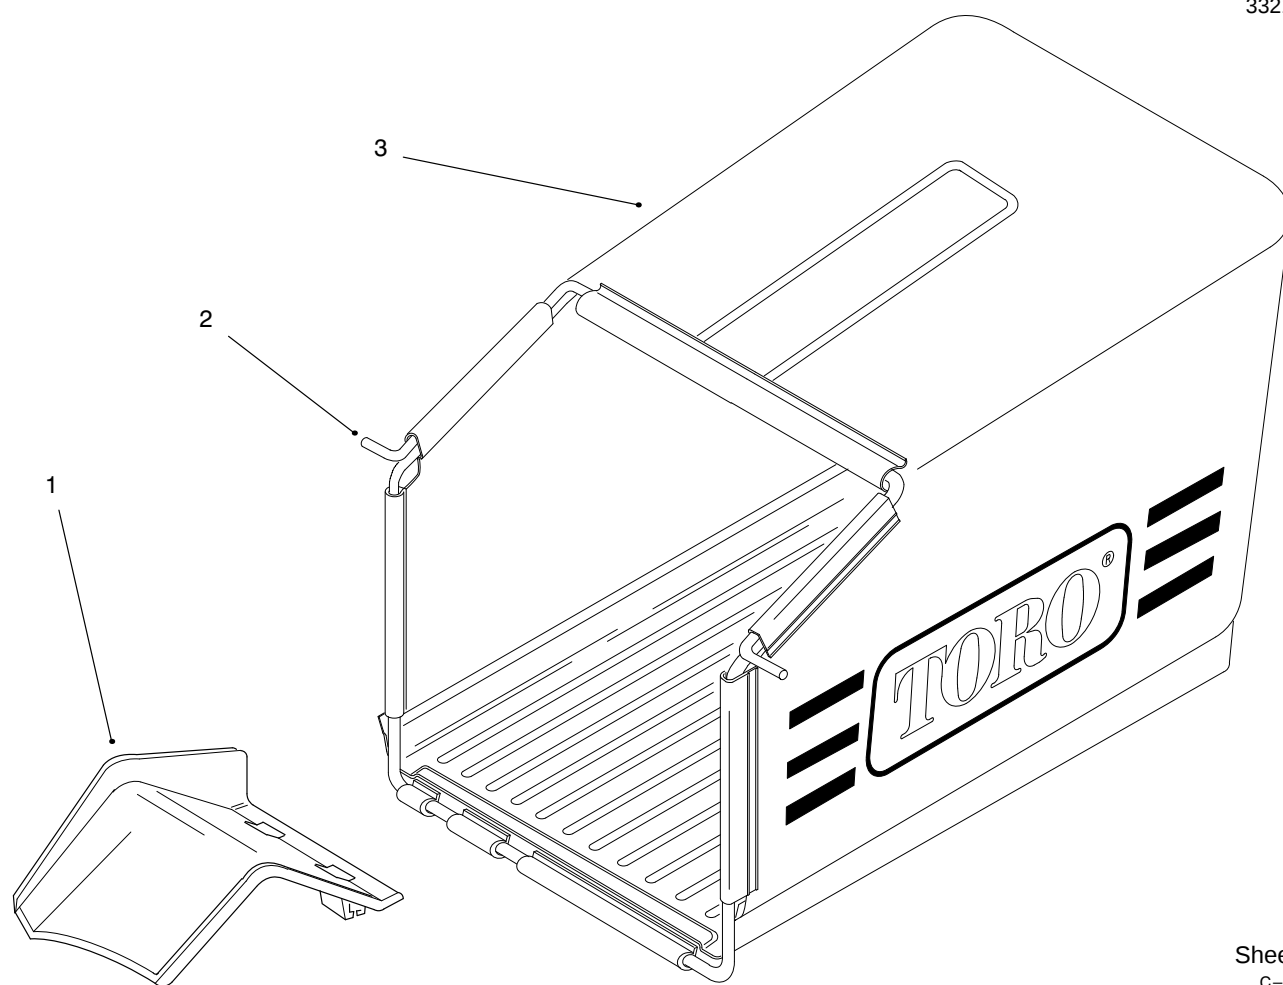


Sheet No.:8
C-2112

Grass Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4087	1	Grass Bag-Remover
2	93-4085	1	Frame-Bag
3	93-4086	1	Bag-Grass

Ref. No.	Part No.	Qty.	Description

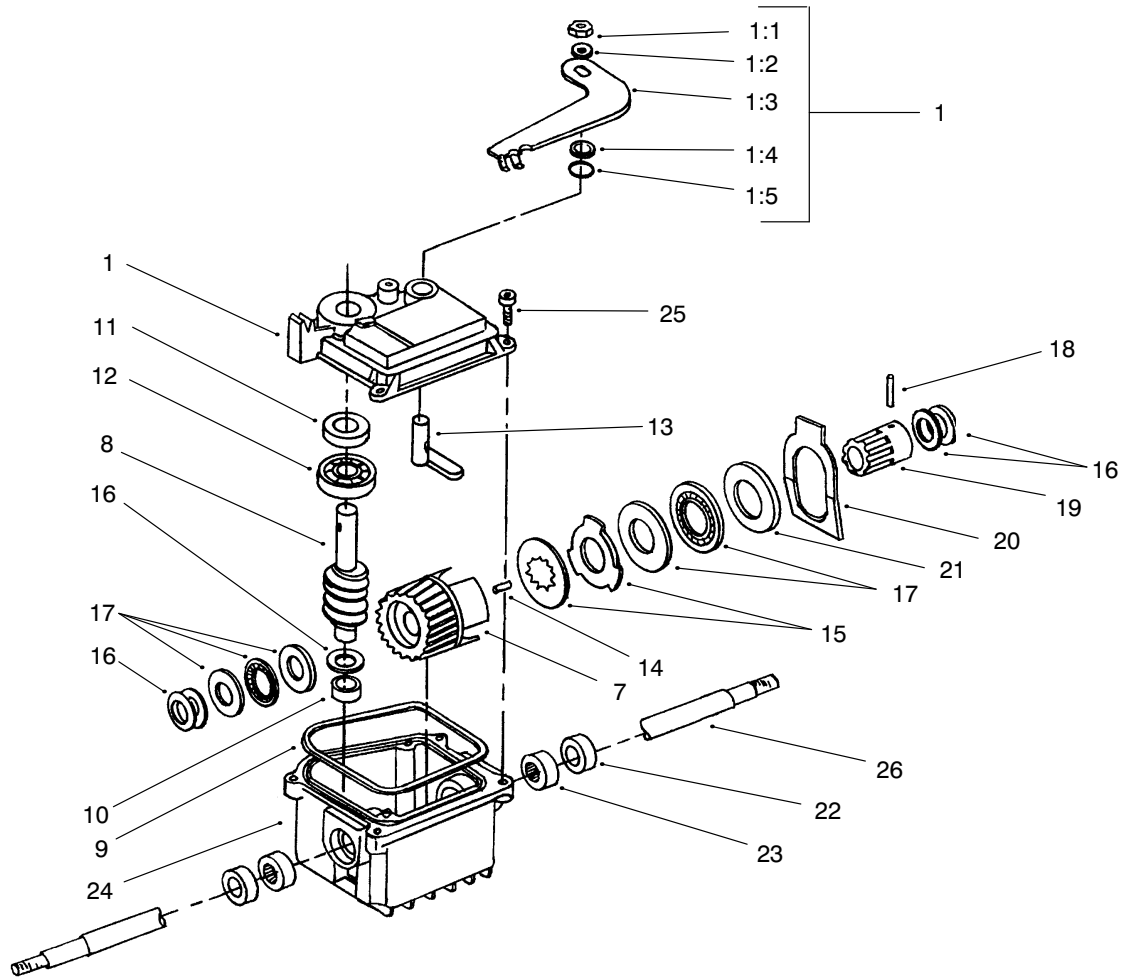


C-2777

Gear Case Assembly 93-4073

Ref. No.	Part No.	Qty.	Description
1	99-1735	1	Transmission Cover-ASM
1:1	99-1736	1	Nut
1:2	99-1737	1	Washer
1:3	99-1738	1	Arm-Pivot
1:4	99-1739	1	Washer
1:5	99-1740	1	O-Ring
7	99-1741	1	Gear-Worm
8	99-1742	1	Shaft-Worm
9	99-1743	1	Gasket-Transmission Case
10	99-1744	1	Bushing-Worm Shaft
11	99-1745	1	Seal-Worm Shaft
12	99-1746	1	Bearing-Worm Shaft
13	99-2519	1	Arm-Pivot
14	99-1747	1	Pin-Spring
15	99-1748	1	Clutch Plate Set
16	99-1749	1	Spacer Set
17	99-2507	1	Thrust Bearing Set
18	99-2508	1	Pin-String
19	99-2509	1	Bushing-Gear
20	99-2511	1	Lever-Clutch
21	99-2512	1	Washer
22	99-2513	1	Seal-Drive Shaft
23	99-2514	1	Bearing-Needle
24	99-2516	1	Case-Transmission

Ref. No.	Part No.	Qty.	Description
25	99-2517	1	Screw-Cover
26	99-2518	1	Shaft-Drive

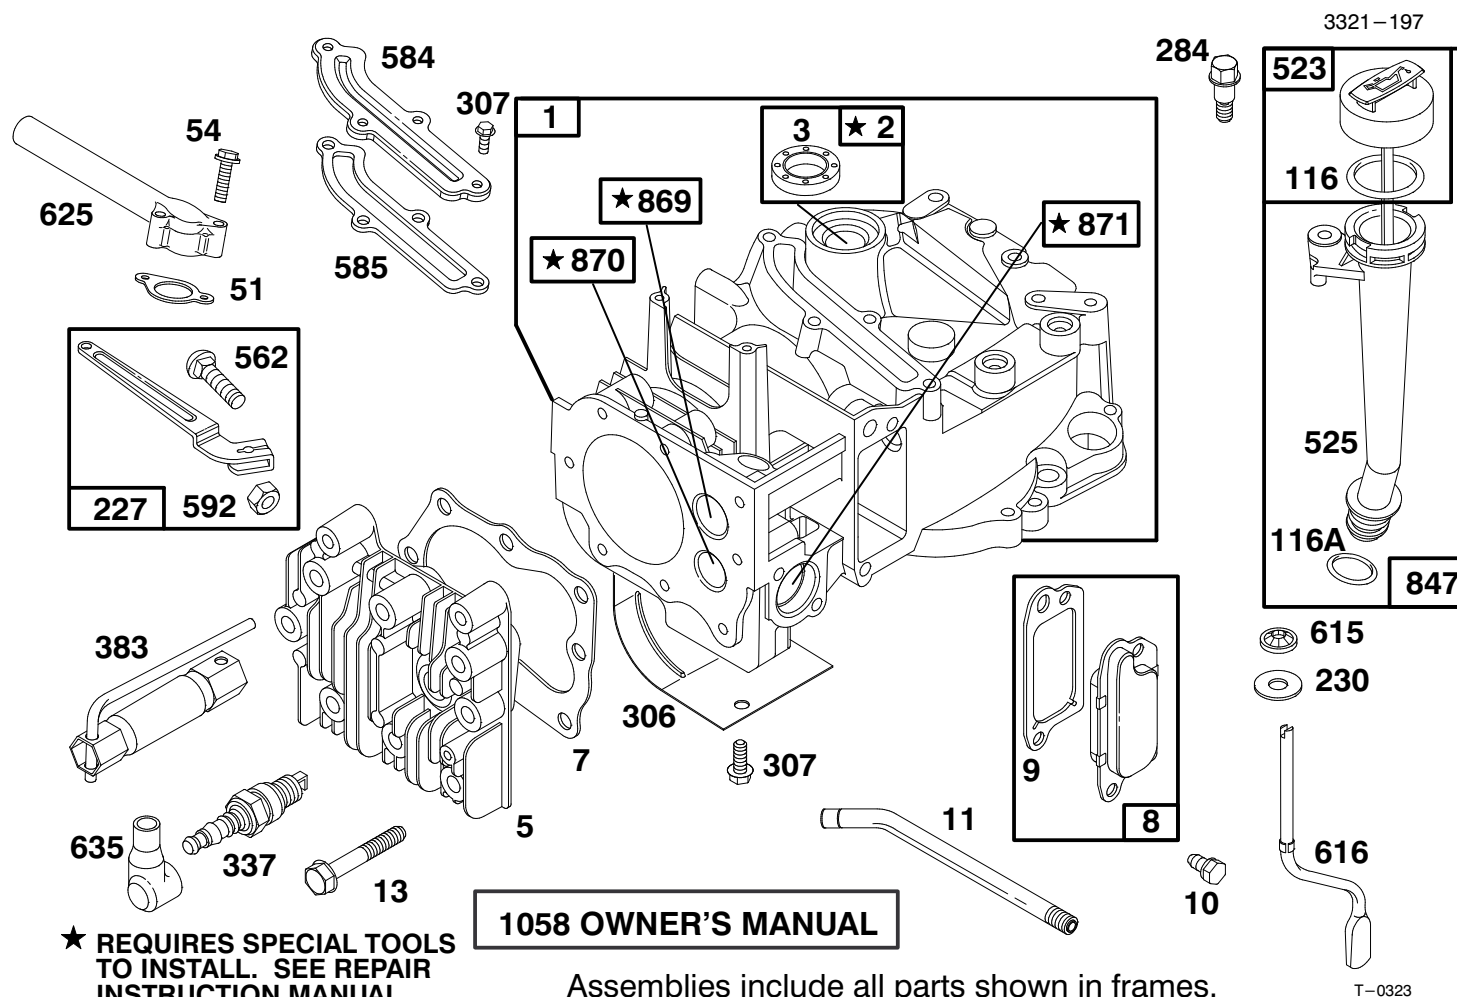


ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
★3	299819	Seal - Oil	1
5	214626	Head - Cylinder	1
★Ø7	272916	Gasket - Cylinder Head	1
8	495786	Breather - Valve Chamber	1
★Ø9	272481	Gasket - Breather	1
10	94650	Screw - Breather Mtg.	1
11	231933	Tube - Breather	1
13	94547	Screw - Cylinder Head	1
★51	272199	Gasket - Intake Elbow	1
54	94526	Screw - Intake Elbow Mtg.	1
★116	280393	Seal - O Ring	1
★116A	280966	Seal - O Ring	1
227	492349	Lever Assembly - Gov.	1
230	67072	Washer - Gov. Crank	1
284	94511	Screw - Hex. Head	1
306	224324	Shield - Cylinder	1
307	94515	Screw - Hex. Head	1
337	802592	Plug - Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench - Spark Plug	1
523	495264	Cap With Dipstick - Oil Filler	1
525	495265	Tube - Oil Filler	1
562	94852	Bolt - Carriage	1
584	224328	Baffle - Cylinder	1
★585	272238	Gasket - Baffle Plate	1
592	231082	Nut - Hex.	1
615	94474	Fastener	1
616	263175	Crank - Governor	1
625	497465	Tube - Fuel Intake	1
635	66538	Elbow - Spark Plug	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat - Intake Valve	1
870	213513	Seat - Exhaust Valve	1
871	262001	Guide - Exhaust Valve	1
		Note: 63709 Guide - Intake Valve	1
1058	273693	Owner's Manual	1

★ Included in Gasket Set-Part No. 497316.

Ø Included in Valve Overhaul Gasket Set-Part No. 498528.

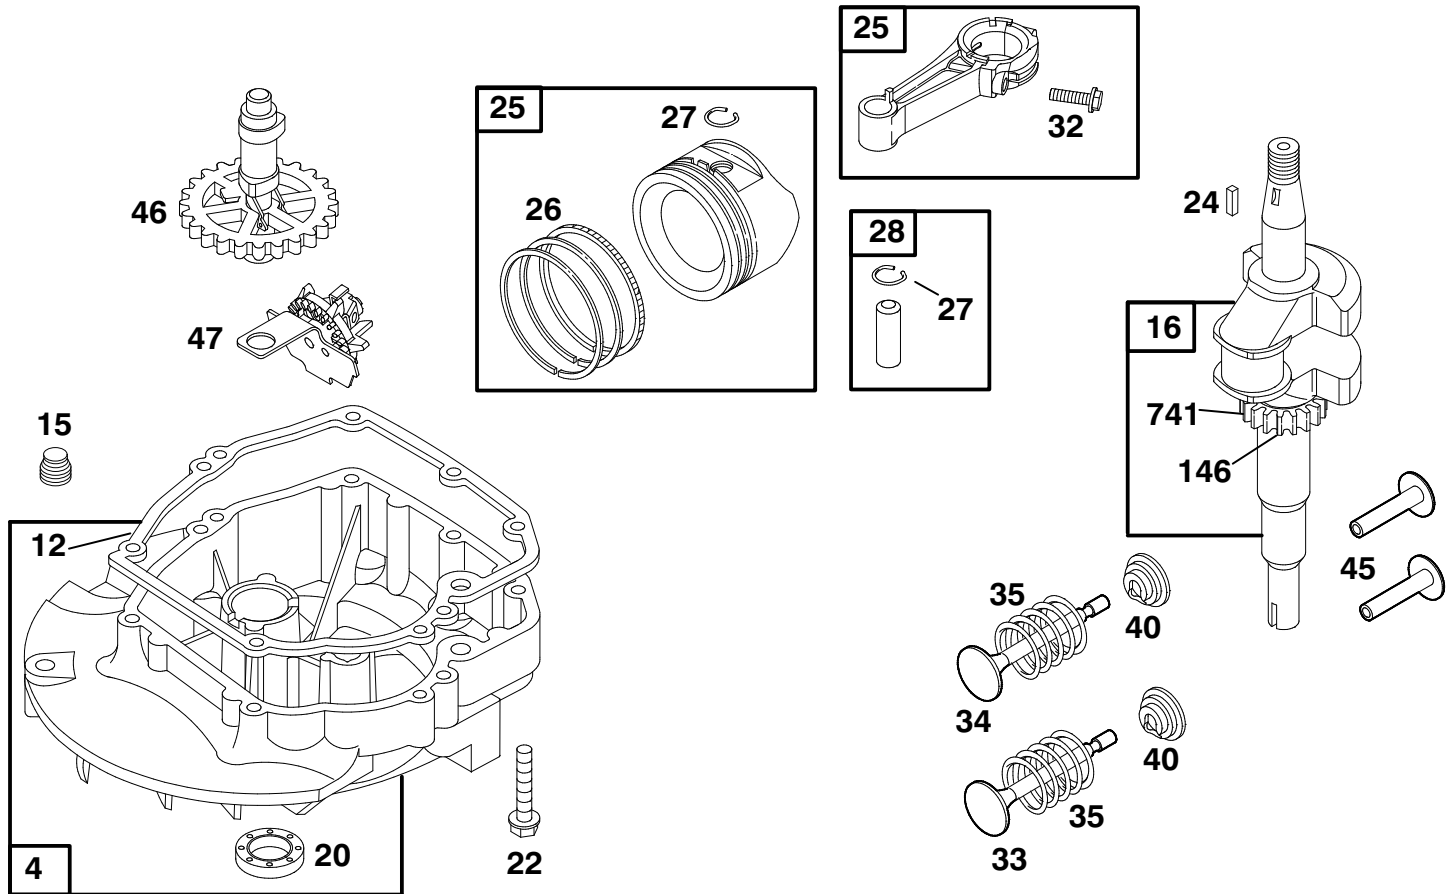

Assemblies include all parts shown in frames.


T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	499147	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	
		Note: 94612 Screw – Hex. (One Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1
26	499425	Ring Set (Standard)	1

Ref. No.	Part No.	Description	No. Used
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★ Included in Gasket Set—Part No. 497316.

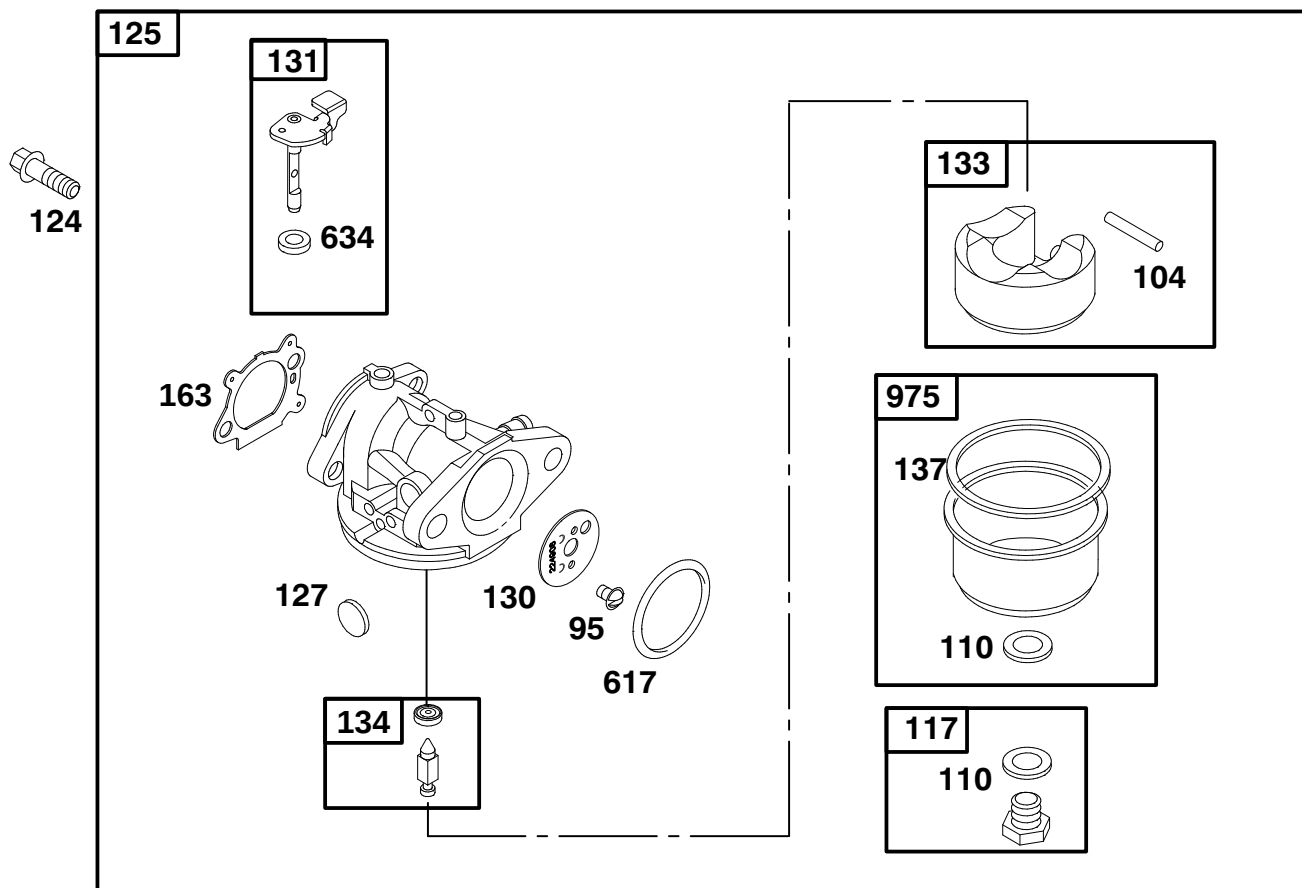

Assemblies include all parts shown in frames.

T-0323


ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Throttle Valve Mtg.	1	130	224908	Valve - Throttle	1
●104	231371	Pin - Float Hinge	1	131	493267	Shaft - Throttle	1
●◆110		Gasket-Sealing (Sold in Kit Only)	1	133	398187	Float Assy. - Carburetor	1
117	498975	Screw - Bowl Mtg. (Std.) Note: 496495 Screw - Bowl Mtg. (High Altitude)	1	●134	398188	Kit - Needle/Seat	1
124	94525	Screw - Carburetor Mtg.	1	●◆137		Gasket - Bowl (Sold in Kit Only)	1
125	498966	Carburetor	1	★◆163	272653	Gasket - Air Cleaner	1
●127		Plug - Welch (Sold in Kit Only)	1	◆◆617	270344	Seal - Fuel Intake Tube	1
				◆◆634		Washer - Shaft (Sold in Kit Only)	1
				975	493640	Bowl Assy. - Carburetor	1

★ Included in Gasket Set-Part No. 497316.

● Included in Carburetor Kit-Part No. 498260.

◆ Included in Carburetor Gasket Set-Part No. 498261.

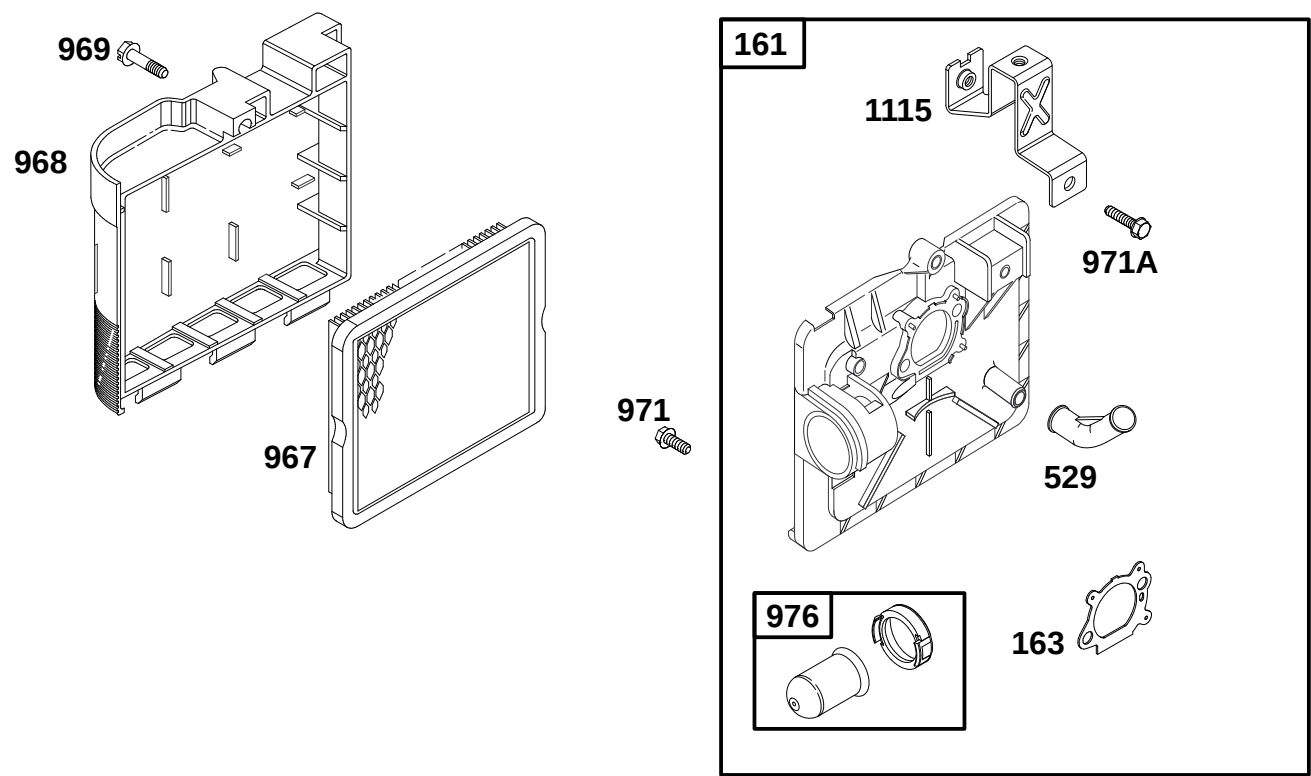

Assemblies include all parts shown in frames.

T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761 – E1


Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

★ Included in Gasket Set—Part No. 497316.

◆ Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

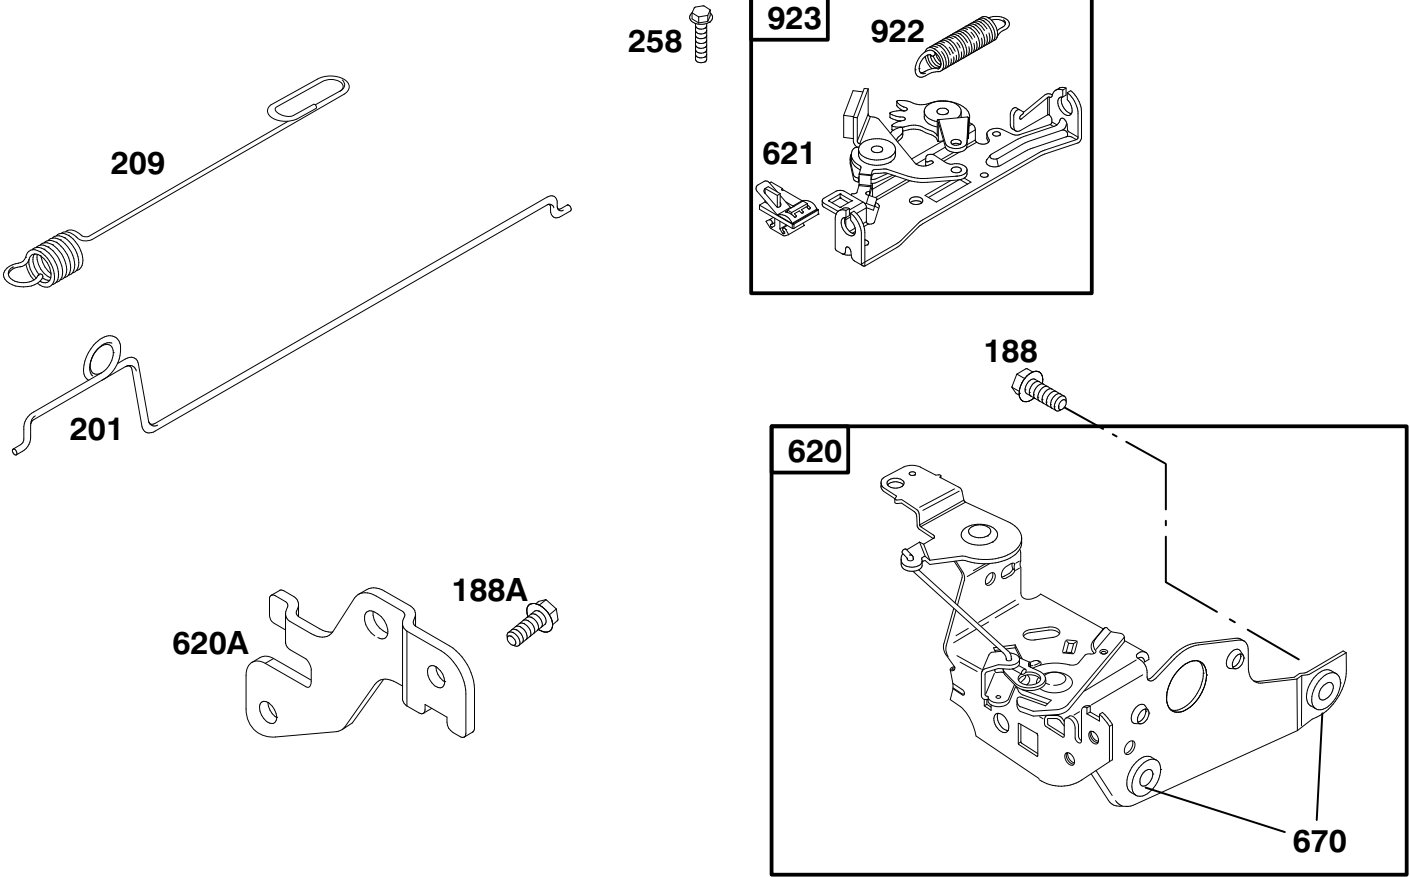

Assemblies include all parts shown in frames.


T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
201	262579	Link – Governor	1
209	263044	Spring – Governor	1
258	94512	Screw–Hex.	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	2
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set–Part No. 497316.

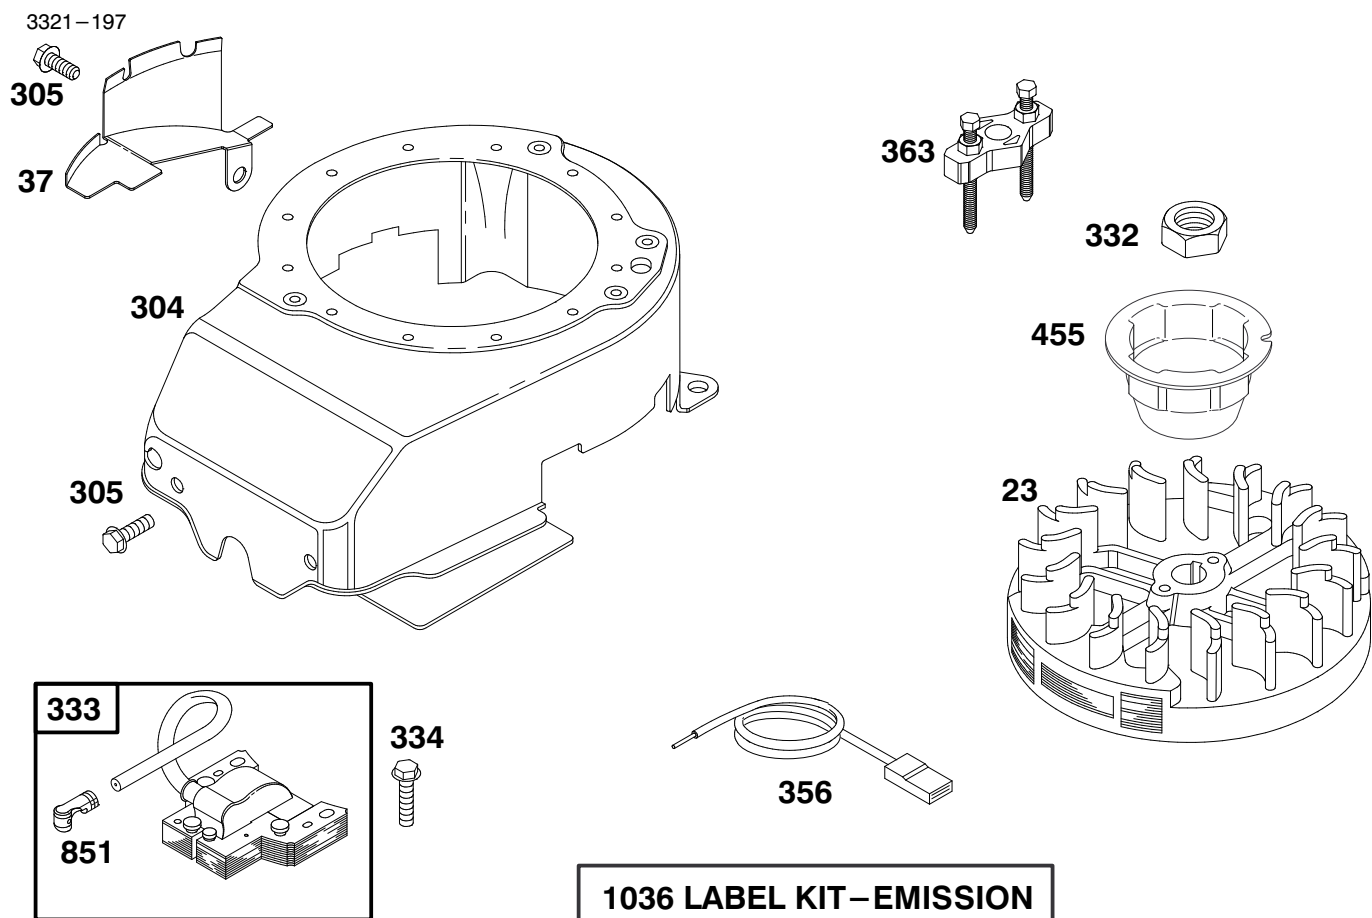





Assemblies include all parts shown in frames.

T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Hex.	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Hex.	1
356	497833	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1
1036	499341	Label Kit - Emission	1

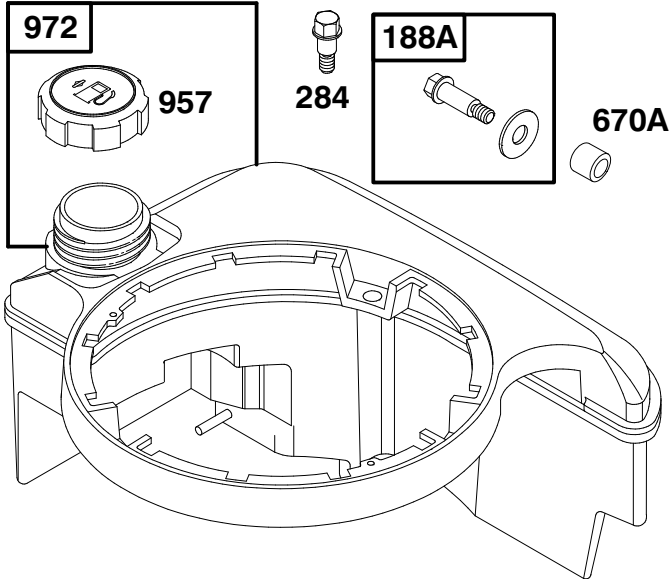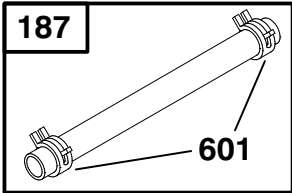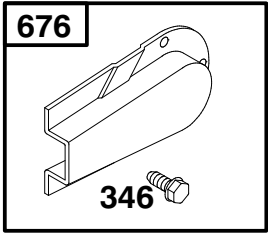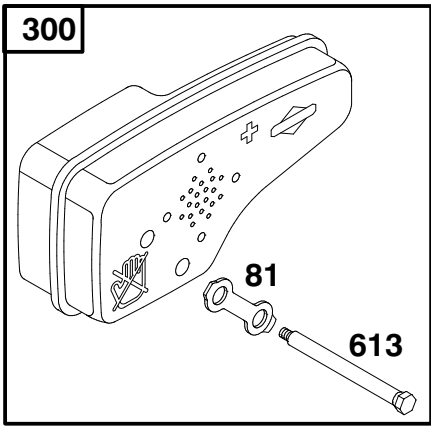

Assemblies include all parts shown in frames.


T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Hose – Fuel (Cut to Required Length).	1
188A	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	94896	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
601	95162	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set–Part No. 497316.




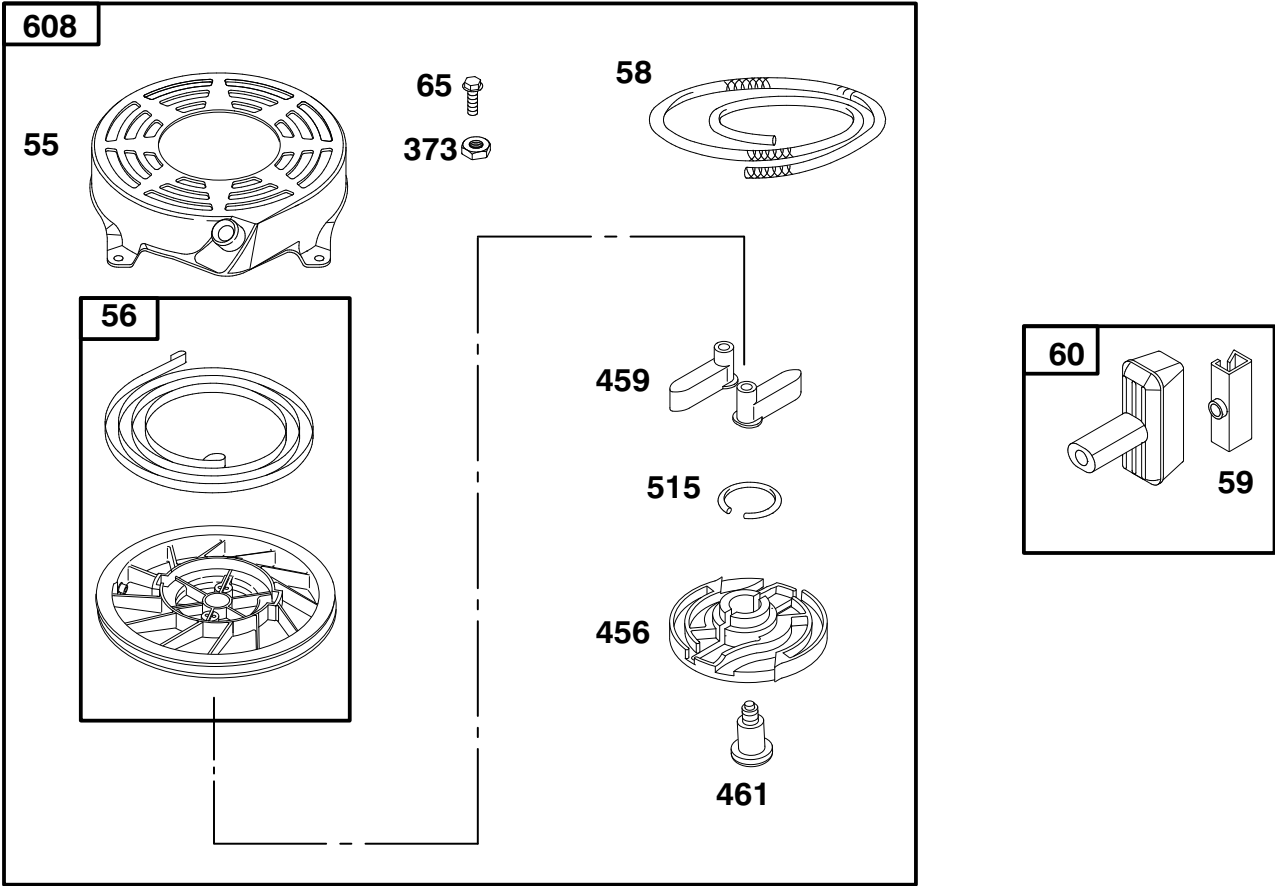


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127802-1761 – E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	T224467	Insert – Starter Grip	1
60	T494212	Handle – Rewind Starter	1
65	94904	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Rewind Starter	1
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind	1

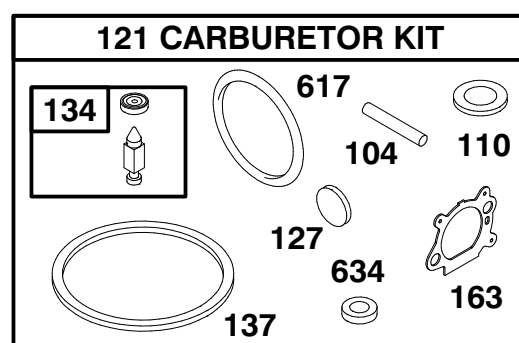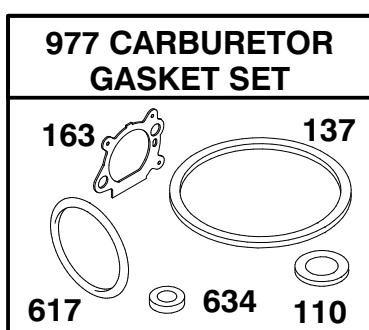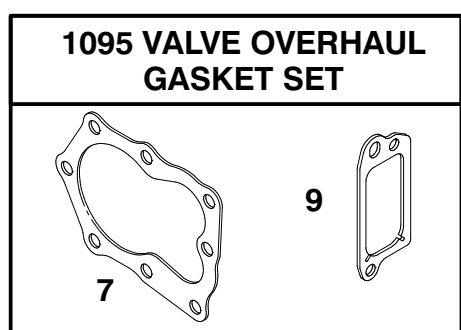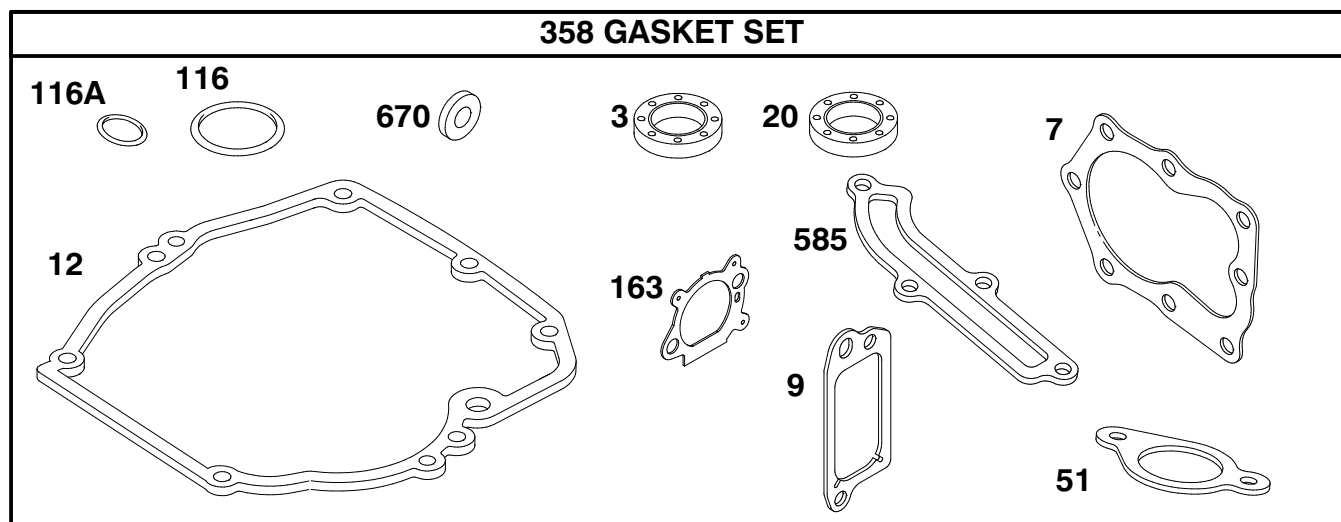

Assemblies include all parts shown in frames.

T-0323

ENGINE BRIGGS & STRATTON MODEL 127802-1761-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★Ø7	272916	Gasket – Cylinder Hd.	1
★Ø9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆110		Gasket – Sealing (Sold in Kit Only)	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Baffle Plate	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket	2
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

★ Included in Gasket Set–Part No. 497316.

Ø Included in Valve Overhaul Gasket Set–Part No. 498528.

● Included in Carburetor Kit–Part No. 498260.

◆ Included in Carburetor Gasket Set–Part No. 498261.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
19-4050	5	21	2	Knob
26-0672	3	6	1	Bolt-Blade
40-1940	1	26	2	Washer
46-6290	1	37	1	O-Ring
46-6811	1	36	2	Screw-HWH
62-7550	3	1	1	Pulley-Driver
71-7630	5	5	1	Cap-Throttle
71-7740	4	22	1	Spring
71-7860	5	24	1	Grip-Upper
71-7980	4	27	1	Indicator-HOC
71-8040	5	19	1	Plate-Throttle
71-8130	5	18	1	Bracket-Control
71-8450	4	23	1	Cover-Spring
82-8550	2	7	1	Shield-Muffler
92-2289	2	12	1	Plate-Logo
92-7865	5	29	1	Decal-Panel
93-0243	2	4	1	Shroud
93-0339	5	4	1	Cover-Throttle
93-1117	5	2	1	Control-Throttle
93-3720	1	20	1	Baffle
93-3730	1	2	1	Kicker-Right Front
93-3740	1	16	1	Kicker-Left Front
93-3750	1	14	1	Kicker-Left Rear
93-3782	1	4	1	Cover-Belt
93-3783	4	18	1	Wheel-Rear
93-3790	1	9	1	Plug
93-3791	4	13	2	Washer-Axle
93-3792	4	12	2	Washer-Cover
93-3793	1	31	2	Screw-Retainer
93-3793	4	1	2	Screw-Retainer
93-3794	1	12	1	Bushing-Door
93-4054	1	6	1	Grip-Lower
93-4056	5	9	2	Cap-Bolt
93-4057	5	23	1	Spring-Door
93-4058	5	22	1	Bolt-Long
93-4060	5	11	1	Bolt-Short
93-4062	4	4	1	Spring-Trigger Return
93-4065	4	26	1	Rod-Link
93-4066	4	5	1	Saddle-HOC
93-4067	4	9	2	Cover-Wheel
93-4068	4	11	2	Gear-Wheel
93-4072	4	21	2	Gear
93-4073	4	37	1	ASM-Gear Case
93-4077	4	8	1	Rear Axle-Left
93-4078	4	33	1	Rear Axle-Right
93-4080	1	24	1	Axle-Front
93-4081	1	28	2	Wheel-Front
93-4084	5	12	2	Retainer-Cable
93-4085	7	2	1	Frame-Bag
93-4086	7	3	1	Bag-Grass
93-4087	7	1	1	Grass Bag-Remover
93-4091	3	2	1	Retainer-Blade
93-4094	5	10	2	Screw-Cap Hinge
93-4095	1	5	4	Screw-Baffle
93-4095	4	7	2	Screw-Baffle
93-4096	4	10	6	Screw-Wheel Gear
93-4097	4	16	2	Washer-Wheel
93-4098	4	15	2	Nut-Wheel
93-4099	4	14	2	Washer-Gear
93-4110	1	19	1	Baffle
93-4111	4	35	1	Pulley-Gear Box

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-4112	4	30	1	Bracket-Gear Box
93-4113	4	34	1	Pin-Roll
93-4114	4	31	1	Screw-Bracket
93-4115	4	29	1	Washer-Bracket
93-4116	4	28	1	Screw-Bracket
93-4118	4	2	1	V-Belt
93-4352	2	1	1	Decal-Shroud
93-7018	4	32	1	Holder-Cable
93-7019	4	36	2	Washer
93-7023	4	18:1	2	Bushing
93-7023	4	40:1	2	Bushing
93-7024	1	28:1	4	Bushing
93-8470	2	10	1	Screw-Clamp
93-8718	3	7	1	Cover-Belt Guide
93-9836	4	40	1	Wheel-Rear
93-9837	3	8	1	Screw-Belt Cover
94-1864	1	33	1	Screw-Baffle
94-5389	5	28	1	Panel-Control
94-6026	5	1	1	Decal-Instruction
95-2747	1	35	1	Fitting-Washout
95-4457	5	27	1	Rope-Guide
98-1429	1	13	1	Cover-Sheild
98-1430	3	3	1	Blade-43cm
98-1431	6	2	1	Bail-Brake
98-1432	6	1	1	Bail-Traction
98-1440	5	25	1	Handle-Sp
	2	9	1	Engine
98-3216	1	23	2	Retainer-Axle
98-3216	4	24	2	Retainer-Axle
98-3222	1	34	2	Cap-Front Axle
98-3226	4	41	2	Cap-Rear Axle
98-3232	4	3	1	Rod-Trigger
98-3236	1	7	1	Trigger-HOC
98-9213	1	15	1	Housing-Deck
99-1700	1	10	1	Door Assembly-Discharge
99-1701	6	3	2	Grommet-Bail
99-1705	5	30	1	Mount-Handle
99-1708	1	10:1	1	Decal-Danger
99-1709	1	1	1	Decal-Deck
99-1710	5	20	1	Mount-Handle
99-1711	1	25	2	Nut-Lock
99-1712	1	27	2	Bolt-Wheel
99-1713	1	30	2	Washer-Wave
99-1715	4	19	1	Bushing Assem-L.h.
99-1716	4	20	1	Bushing Assem-R.h.
99-1717	5	20:1	1	Spacer
99-1717	5	31:1	1	Spacer
99-1718	5	7	1	Cable-Traction
99-1719	5	8	1	Cable-Brake
2210-249	2	11	1	Clamp-Casing
2210-316	2	3	1	Rope-Stop
3250-13	1	21	1	Screw-PPH
3253-22	3	5	1	Washer-Lock
3256-1	5	14	1	Washer-Flat
3256-21	1	18	1	Washer-Flat
3284-5	1	8	1	Pin-Groove
3290-378	2	5	1	Tie-Cable
3296-2	1	17	1	Nut-Lock
3296-73	5	13	1	Nut-Lock
32112-11	1	22	1	Nut
32144-73	2	6	3	Screw-HWHTF
32144-97	5	3	7	Screw-PPH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32144-98	5	17	4	Screw-PPH
32144-99	5	6	2	Screw-PPH
32144-102	2	8	3	Screw
32144-111	1	3	6	Screw - PPH
32144-121	2	2	2	Screw

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

22