



RECYCLER[®]
43cm Electric
Mower

Model No. 21050 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Assembly	1	Handle Assembly	5
Motor Assembly	2	Bag Assembly	6
Blade Assembly	3		
Wheel and Axle Assembly	4		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFV	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSR	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

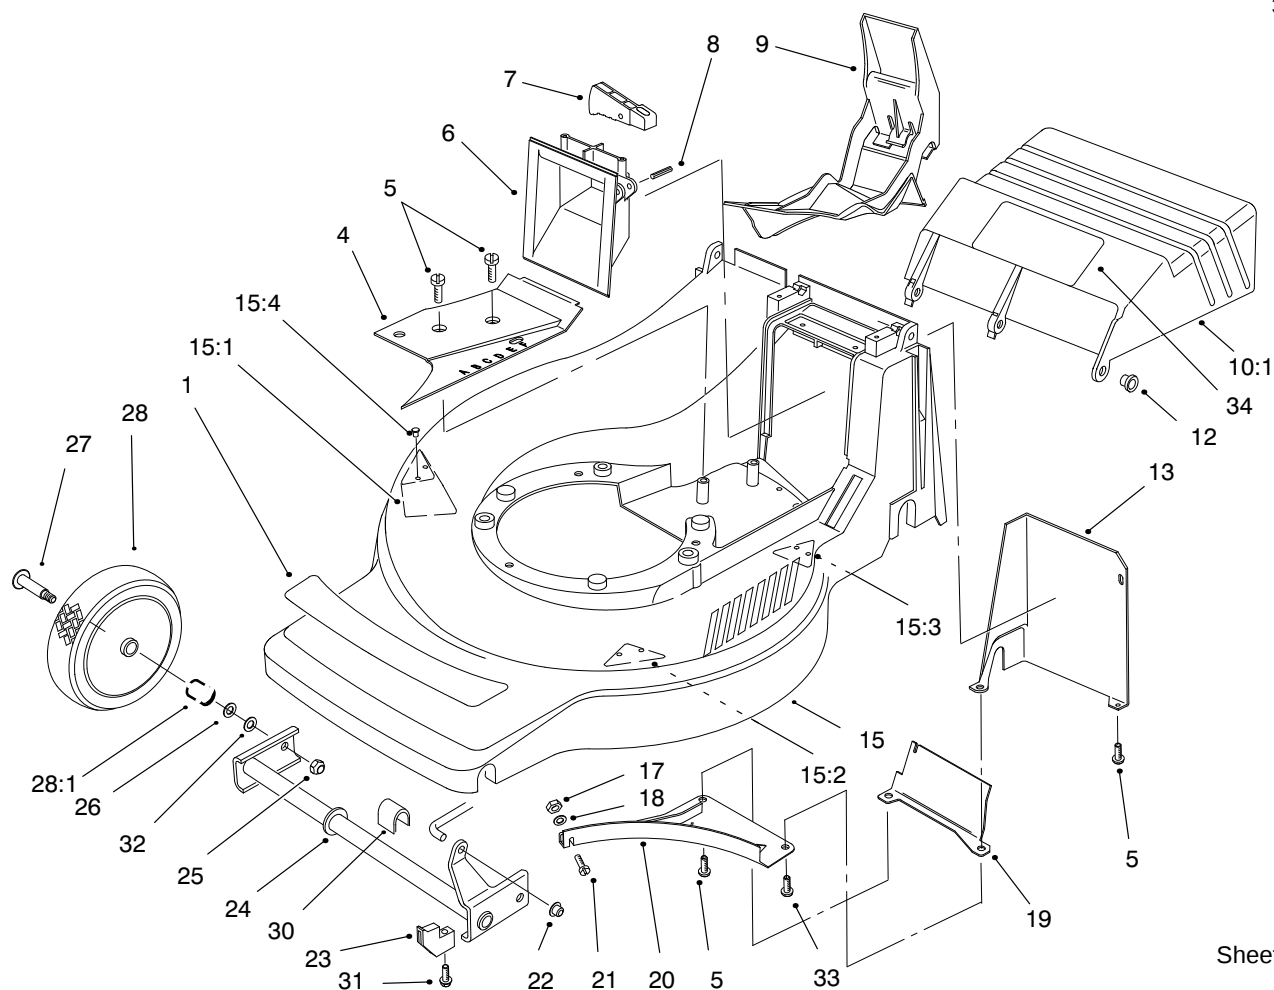

Sheet No.: 2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1709	1	Decal-Deck	27	99-1712	2	Bolt-Wheel
4	93-3782	1	Cover-Belt	28	93-4081	2	Wheel-Front
5	93-4095	4	Screw-Baffle	28:1	93-7024	4	Bushing
6	71-7870	1	Grip-Lower	30	98-3222	2	Cap-Front Axle
7	98-3236	1	Trigger-HOC	31	93-3793	2	Screw-Retainer
8	3284-5	1	Pin-Groove	32	99-1713	2	Washer-Wave
9	93-3790	1	Plug	33	94-1864	1	Screw-Baffle
10	99-1700	1	Door-Discharge				
10:1	99-1708	1	Decal-Danger				
12	93-3794	1	Bushing-Door				
13	98-1429	1	Cover-Sheild				
15	99-2540	1	Housing-43cm				
15:1	93-3730	1	Kicker-Right Front				
15:2	93-3740	1	Kicker-Left Front				
15:3	93-3750	1	Kicker-Left Rear				
15:4	32144-111	6	Screw - PPH				
17	3296-2	1	Nut-Lock				
18	3256-21	1	Washer-Flat				
19	93-4110	1	Baffle				
20	93-3720	1	Baffle				
21	3250-13	1	Screw-PPH				
22	32112-11	1	Nut				
23	98-3216	2	Retainer-Axle				
24	93-4080	1	Axle-Front				
25	99-1711	2	Nut-Lock				
26	40-1940	2	Washer				

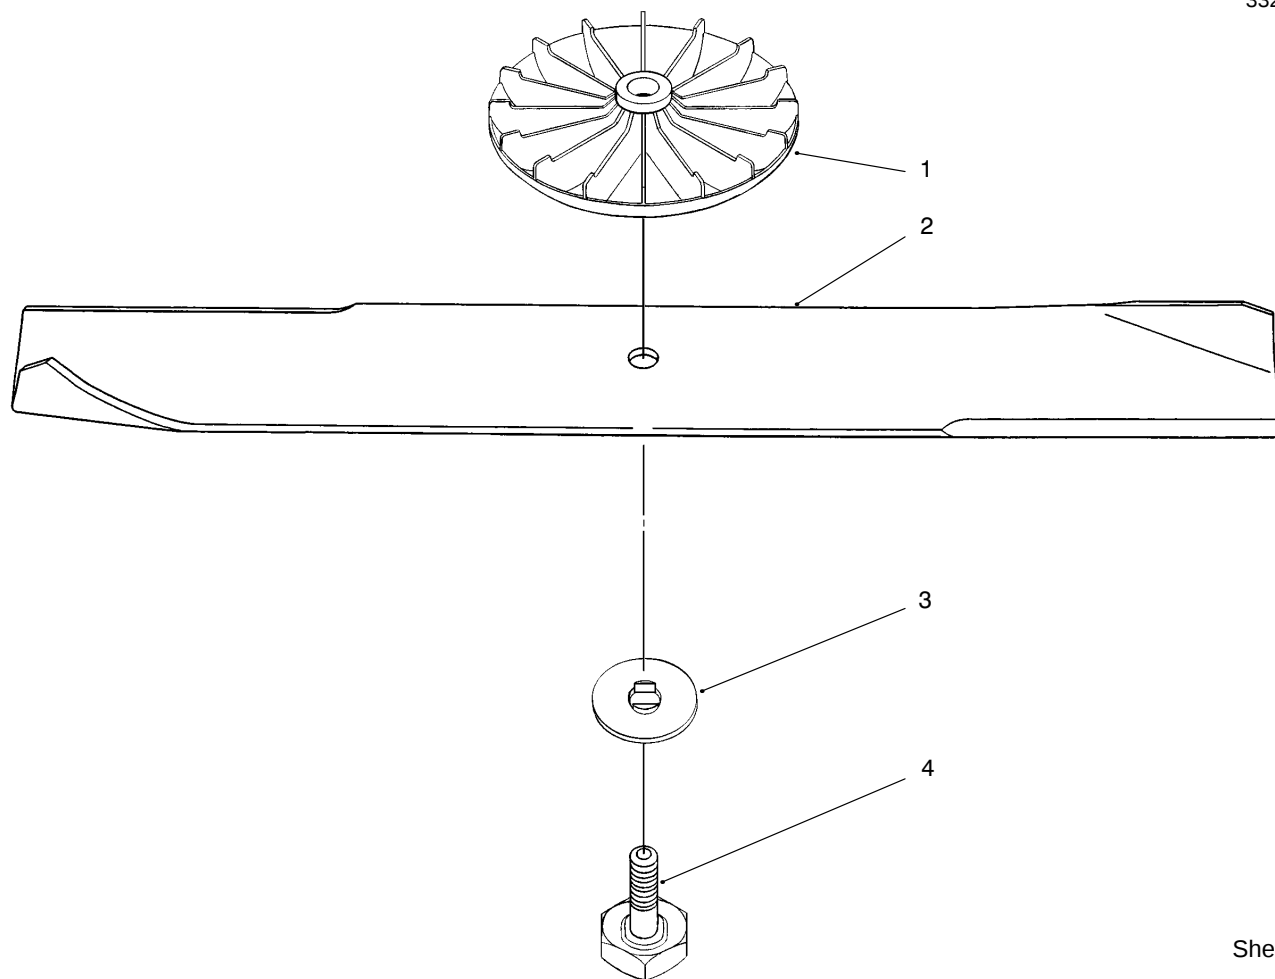

Sheet No.:4

Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	94-6737	1	Retainer-Blade
2	94-6712	1	Blade-43cm Recycler
3	94-6734	1	Carrier-Blade
4	94-6731	1	Covered Screw-Blade


This diagram illustrates the assembly of a vehicle suspension component, likely a rear axle or wheel hub assembly. The components are numbered as follows:

- 1: A long, thin metal rod or pin.
- 2: A small metal bracket or clip.
- 3: A larger metal bracket or housing.
- 4: A small metal pin or bolt.
- 5: A small metal pin or bolt.
- 6: A large, circular metal flange or disc.
- 7: A small metal pin or bolt.
- 8: A small metal pin or bolt.
- 9: A small metal pin or bolt.
- 10: A coiled metal spring.
- 11: A cylindrical metal component, possibly a shock absorber or strut.
- 12: A small metal pin or bolt.
- 13: A long, thin metal rod or pin.
- 14: A small metal bracket or clip.
- 15: A small metal pin or bolt.
- 16: A small metal bracket or clip.
- 17: A small metal pin or bolt.
- 17:1: A small metal pin or bolt.
- 18: A small metal bracket or clip.

Wheel and Axle Assembly

Ref. No.	Part No.	Qty.	Description

4

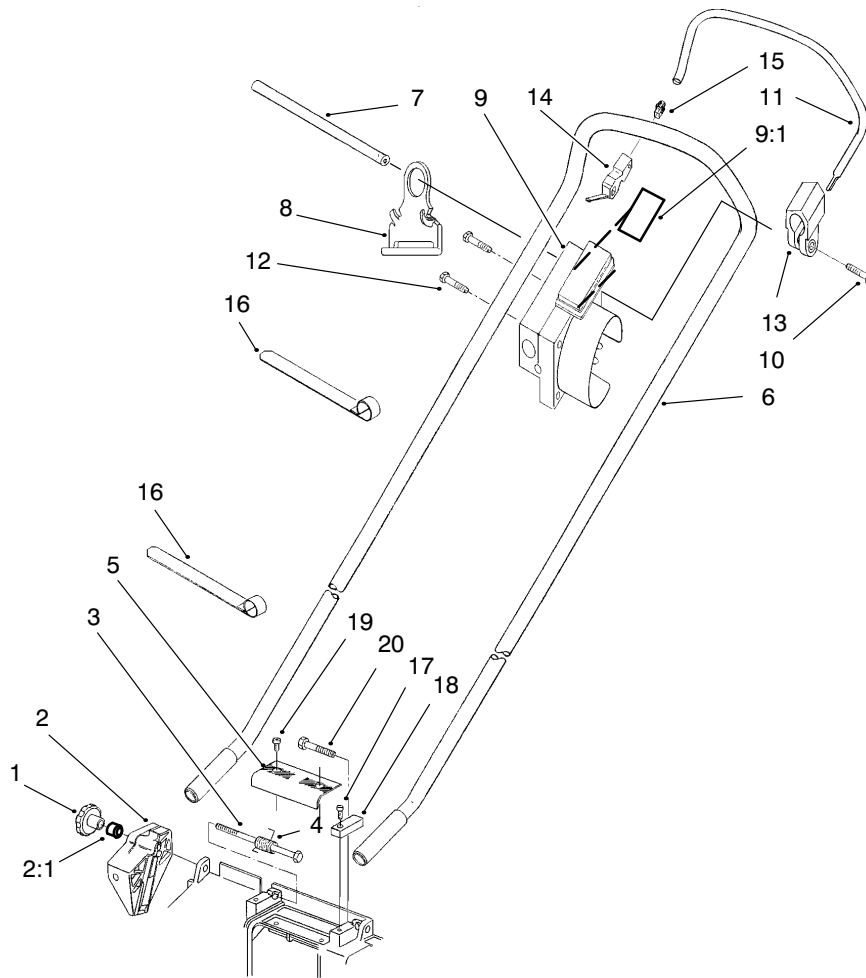


Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	19-4050	2	Knob				
2	99-1710	1	Mount-Handle				
2:1	99-1717	1	Spacer				
3	93-4058	1	Bolt-Long				
4	93-4057	1	Spring-Door				
5	71-7860	1	Grip-Upper				
6	94-6745	1	Handle-HP				
7	94-6735	1	Rod				
8	94-6729	1	Retainer-Cable				
9	94-6732	1	Switch-Plug ASM				
9:1	99-1731	1	Decal-Switch				
10	94-6716	1	Screw				
11	94-6714	1	Lever-Switch				
12	94-6718	3	Screw				
13	94-6740	1	Mount-Lever				
14	94-6739	1	Bushing-Lever				
15	94-6741	1	Clip				
16	94-6733	2	Binder-Cable				
17	93-4094	2	Screw-Cap Hinge				
18	93-4056	2	Cap-Bolt				
19	32144-97	2	Screw-PPH				
20	93-4060	1	Bolt-Short				
*21	99-1705	1	Mount-Handle				
*21:1	99-1717	1	Spacer				

*Not Illustrated

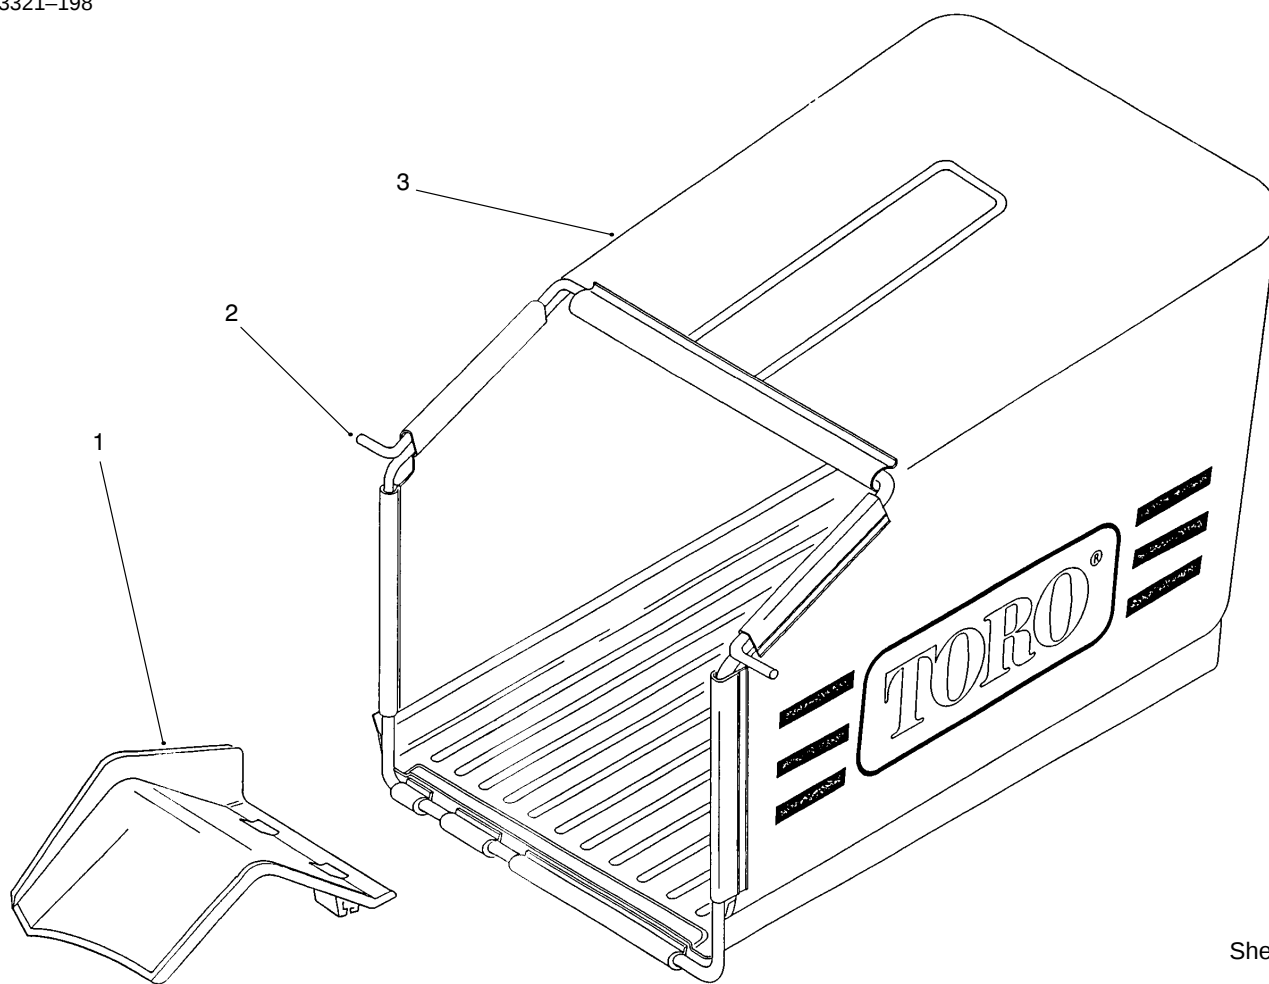

Sheet No.:7

Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4087	1	Grass Bag-Remover
2	93-4085	1	Frame-Bag
3	93-4086	1	Bag-grass

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
19-4050	5	1	2	Knob
40-1940	1	26	2	Washer
71-7740	4	10	1	Spring
71-7860	5	5	1	Grip-Upper
71-7870	1	6	1	Grip-Lower
71-7980	4	14	1	Indicator-HOC
71-8450	4	11	1	Cover-Spring
92-2289	2	10	1	Plate-Logo
93-3720	1	20	1	Baffle
93-3730	1	2	1	Kicker-Right Front
93-3740	1	16	1	Kicker-Left Front
93-3750	1	14	1	Kicker-Left Rear
93-3782	1	4	1	Cover-Belt
93-3790	1	9	1	Plug
93-3793	1	31	2	Screw-Retainer
93-3793	4	15	2	Screw-Retainer
93-3794	1	12	1	Bushing-Door
93-4056	5	18	2	Cap-Bolt
93-4057	5	4	1	Spring-Door
93-4058	5	3	1	Bolt-Long
93-4060	5	20	1	Bolt-Short
93-4062	4	2	1	Spring-Trigger Return
93-4065	4	13	1	Rod-Link
93-4066	4	3	1	Saddle-HOC
93-4079	4	5	1	Axle-Rear
93-4080	1	24	1	Axle-Front
93-4081	1	28	2	Wheel-Front
93-4085	6	2	1	Frame-Bag
93-4086	6	3	1	Bag-Grass
93-4087	6	1	1	Grass Bag-Remover
93-4094	5	17	2	Screw-Cap Hinge
93-4095	1	5	4	Screw-Baffle
93-4095	4	4	2	Screw-Baffle
93-4097	4	8	2	Washer-Wheel
93-4098	4	7	2	Nut-Wheel
93-4110	1	19	1	Baffle
93-7023	1	6:1	2	Bushing
93-7023	1	17:1	2	Bushing
93-7024	1	28:1	4	Bushing
93-8492	4	6	1	Wheel-Rear
94-1864	1	33	1	Screw-Baffle
94-3313	4	17	1	Wheel-Rear
94-6711	2	1	1	Shroud-Lower
94-6712	3	2	1	Blade-43cm Recycler
94-6713	2	5	1	Shroud-Motor
94-6714	5	11	1	Lever-Switch
94-6715	2	9	1	Cover-Shroud
94-6716	5	10	1	Screw
94-6717	2	11	5	Screw
94-6718	5	12	3	Screw
94-6719	2	16	1	Washer
94-6720	2	15	1	Nut-Capacitor
94-6721	2	8	3	Clip
94-6722	4	12	2	Curved Washer
94-6723	4	9	2	Cap-Rear Axle
94-6724	2	12	2	Screw
94-6728	2	14	1	Adaptor-Shroud
94-6729	5	8	1	Retainer-Cable
94-6730	2	13	1	Clamp-Cable
94-6731	3	4	1	Covered Screw-Blade
94-6732	5	9	1	Switch-Plug ASM

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-6733	5	16	2	Binder-Cable
94-6734	3	3	1	Carrier-Blade
94-6735	5	7	1	Rod
94-6736	2	2	7	Screw
94-6737	3	1	1	Retainer-Blade
94-6738	2	3	1	Shroud-Inner
94-6739	5	14	1	Bushing-Lever
94-6740	5	13	1	Mount-Lever
94-6741	5	15	1	Clip
94-6742	2	4	1	Motor-Electric
94-6743	2	6	1	Rubber Binder
94-6744	2	7	1	Capacitor (P/W Motor)
94-6745	5	6	1	Handle-Hp
98-1429	1	13	1	Cover-Sheild
98-3216	1	23	2	Retainer-Axle
98-3216	4	16	2	Retainer-Axle
98-3222	1	30	2	Cap-Front Axle
98-3226	4	18	2	Cap-Rear Axle
98-3232	4	1	1	Rod-Trigger
98-3236	1	7	1	Trigger-HOC
99-1700	1	10	1	Door Assembly-Discharge
99-1705	5	21	1	Mount-Handle
99-1708	1	10:1	1	Decal-Danger
99-1709	1	1	1	Decal-Deck
99-1710	5	2	1	Mount-Handle
99-1711	1	25	2	Nut-Lock
99-1712	1	27	2	Bolt-Wheel
99-1713	1	32	2	Washer-Wave
99-1717	5	2:1	1	Spacer
99-1717	5	21:1	1	Spacer
99-1728	6		1	Assembly Notes
99-1729	6		1	Engineering Specs
99-1730	1	29	1	Decal-Ce
99-1731	5	23	1	Decal-Switch
99-1732	6		1	Operator Manual
99-1733	6		1	Certificate-Conformity
99-1734	6		1	Certificate-Noise Rate
99-2540	1	15	1	Housing-43cm
3250-13	1	21	1	Screw-PPH
3256-21	1	18	1	Washer-Flat
3284-5	1	8	1	Pin-Groove
3296-2	1	17	1	Nut-Lock
32112-11	1	22	1	Nut
32144-97	5	19	2	Screw-PPH
32144-111	1	3	6	Screw - PPH

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]