



53cm Rear Bagging Mower

Model No. 26639 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Gear Case Assembly	7
Engine Assembly	2	Handle Control Assembly	8
Shield & Blade Assembly	3	Engine GTS–200	9–18
Handle Assembly	4	Toro Part Number Index	19–21
Grass Bag Assembly	5		
Rear Axle Assembly	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Dethatcher Kit	Model No. 59131		
Leaf Shredder	Model No. 59180		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

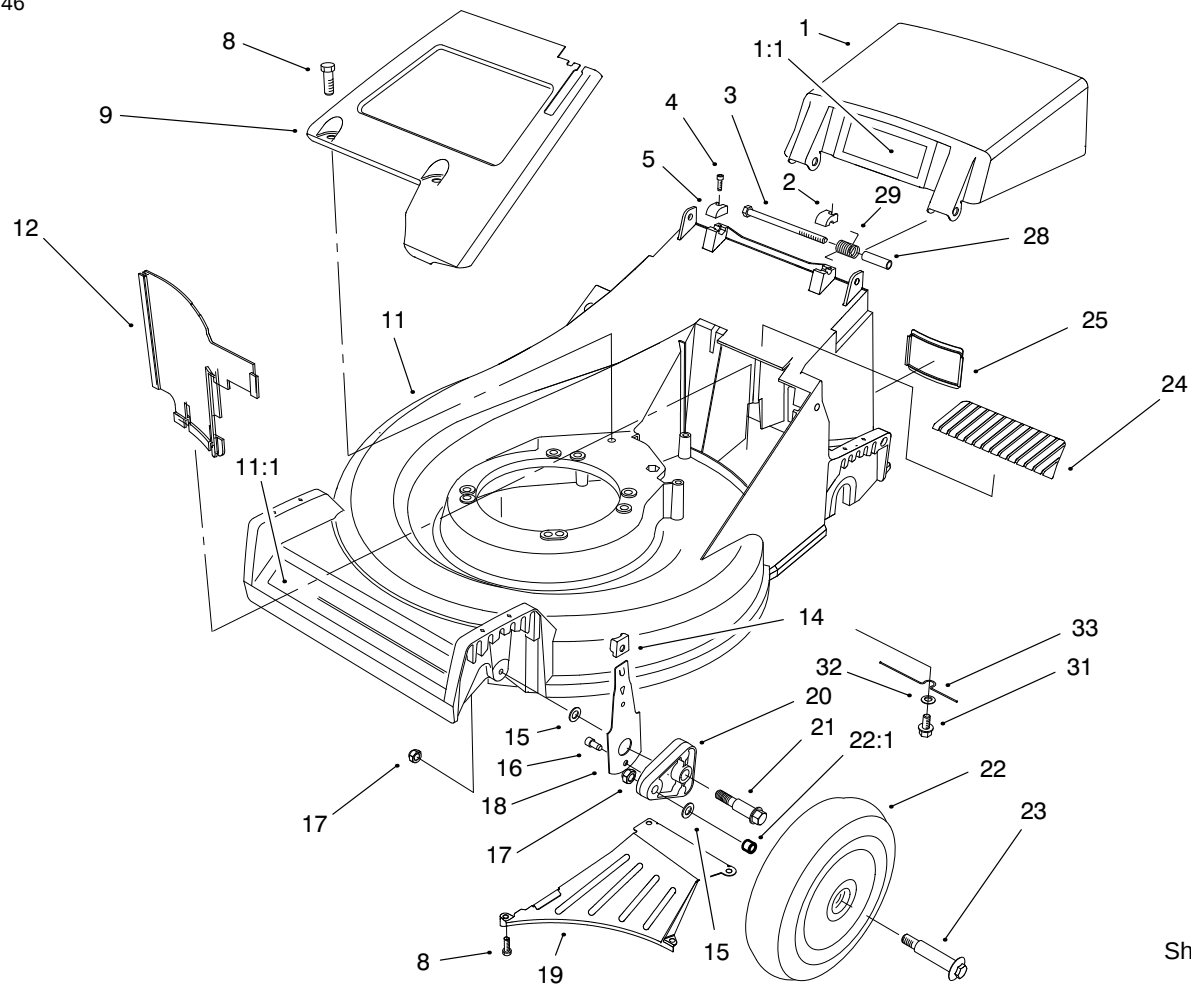


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	17-1569	1	Door-Discharge
1:1	93-4105	1	Decal-Danger
2	71-7900	1	Cap-Bolt LH
3	322-29	2	Screw-HH
4	65-5210	2	Screw-Tf
5	71-7910	1	Cap-Bolt RH
8	32144-70	6	Screw-TAP
9	65-5660	1	Panel-Screen
11	16-1769	1	Housing-53cm
11:1	71-9870	1	Decal-Deck 53cm
12	66-0020	1	Panel-Vertical
14	25-7740	2	Knob-Arm
15	40-1940	4	Washer
16	65-5220	2	Screw-Thrd Frmg
17	3296-6	4	Nut-Lock
18	66-0540	2	ASM-Spring Arm
19	71-9640	1	Ramp-Discharge
20	66-0580	2	Arm-Pivot
21	66-0560	2	Screw-Shoulder
22	14-9949	2	Wheel & Tire-ASM
22:1	27-6250	4	Bushing
23	27-6231	2	Bolt-Wheel
24	71-9920	1	Cover-Top
25	71-9650	1	Access-Cover
28	71-8580	2	Spacer-Door
29	71-9840	2	Spring-Door


Ref. No.	Part No.	Qty.	Description
31	32144-15	1	Tapping-Scr
32	3256-24	1	Washer-Flat
33	66-0620	1	Retainer-Belt

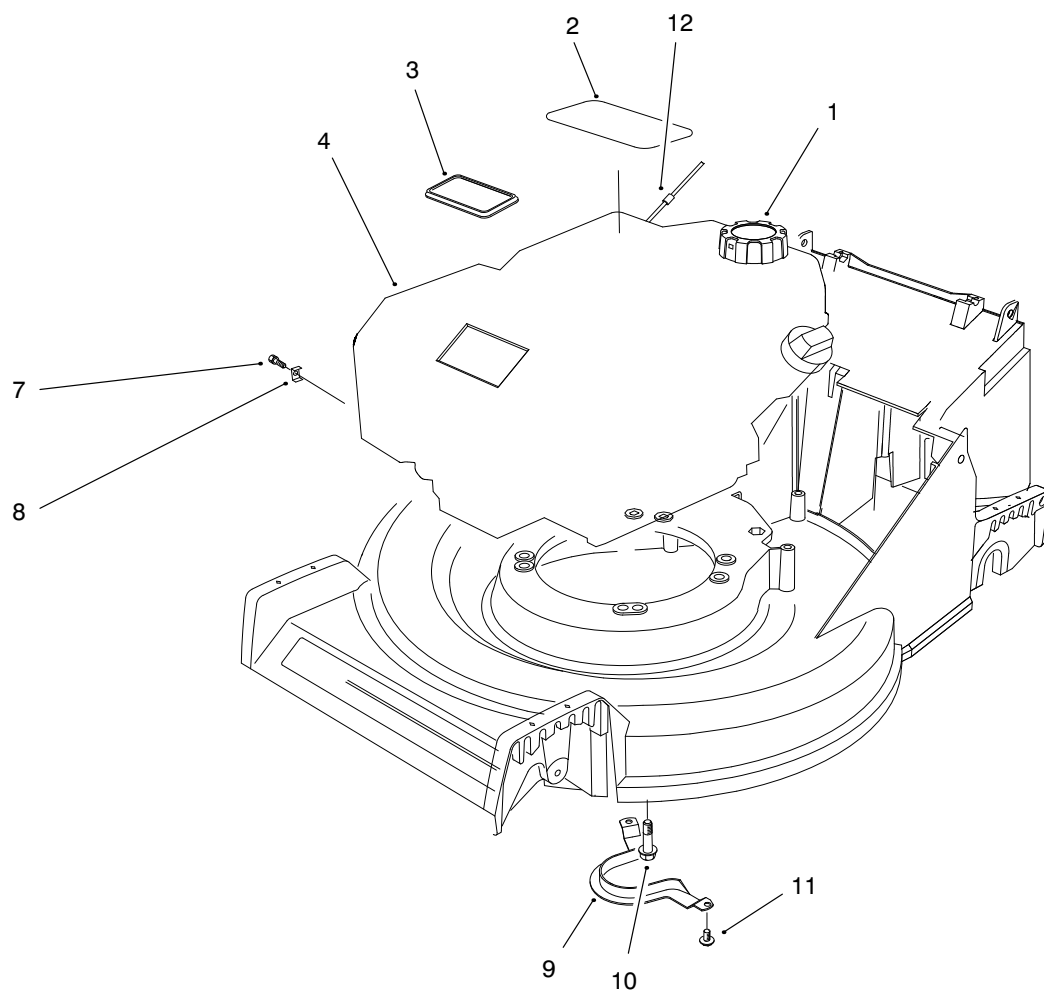 

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7198	1	ASM-Cap
2	98-2004	1	Decal-Engine
3	92-2289	1	Plate-Logo
5		1	Engine-Gts 200
7	93-8470	1	Screw-Clamp
8	2210-249	1	Clamp-Casing
9	66-0570	1	Guide-Belt
10	32144-102	3	Screw
11	32144-70	2	Screw-TAP
12	2210-316	1	Rope-Stop

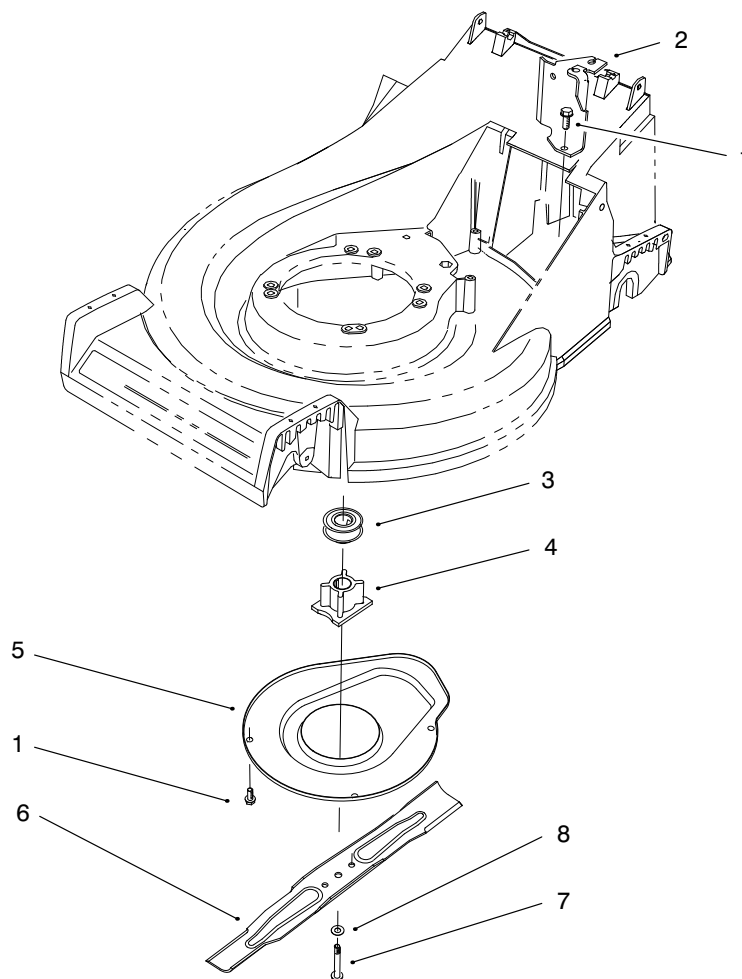 


Sheet No.:4

Shield & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-70	5	Screw-TAP
2	66-0030	1	Bracket-Cable Support
3	62-7550	1	Pulley-Driver
4	62-7540	1	Retainer-Blade
5	65-5200	1	Shield-Bbc
6	62-7700	1	Blade-21"
7	26-0670	1	Bolt-Blade
8	3253-22	1	Washer-Lock

Ref. No.	Part No.	Qty.	Description

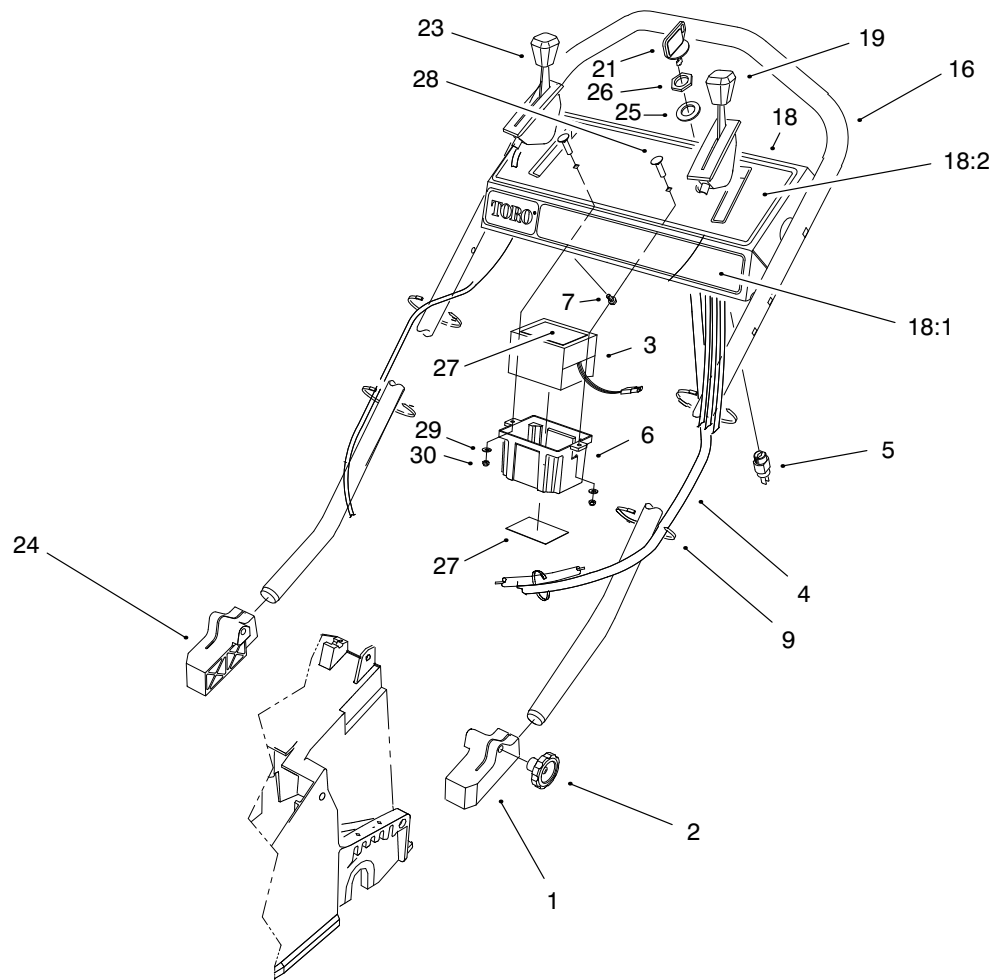 


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	71-8090	1	Mount-Handle LH				
2	19-4050	2	Knob				
3	55-7520	1	Battery Pack				
4	80-4795	1	Harness-Wire				
5	46-5780	1	Switch-Starter				
6	95-3017	1	Cover-Battery				
7	92-9665	5	Screw-Phil				
9	3290-378	5	Tie-Cable				
16	94-4910	1	Handle-Dipped				
18	98-9229	1	Panel-Control				
18:1	71-9871	1	Decal-Panel Key				
18:2	98-2025	1	Decal - Instructions				
19	98-1505	1	Control-Throttle				
21	63-8360	1	Key-Ignition				
23	93-6632	1	Control-Speed				
24	71-8100	1	Mount-Handle RH				
25	3254-5	1	Washer-Lock				
26	218-461	1	Nut-HH (F/W Sw)				
27	93-6668	2	Decal-Instruct				
28	3229-34	2	Bolt-Carriage				
29	3256-14	2	Washer-Flat				
30	3296-2	2	Nut-Lock				

Grass Bag Assembly


Ref. No.	Part No.	Qty.	Description

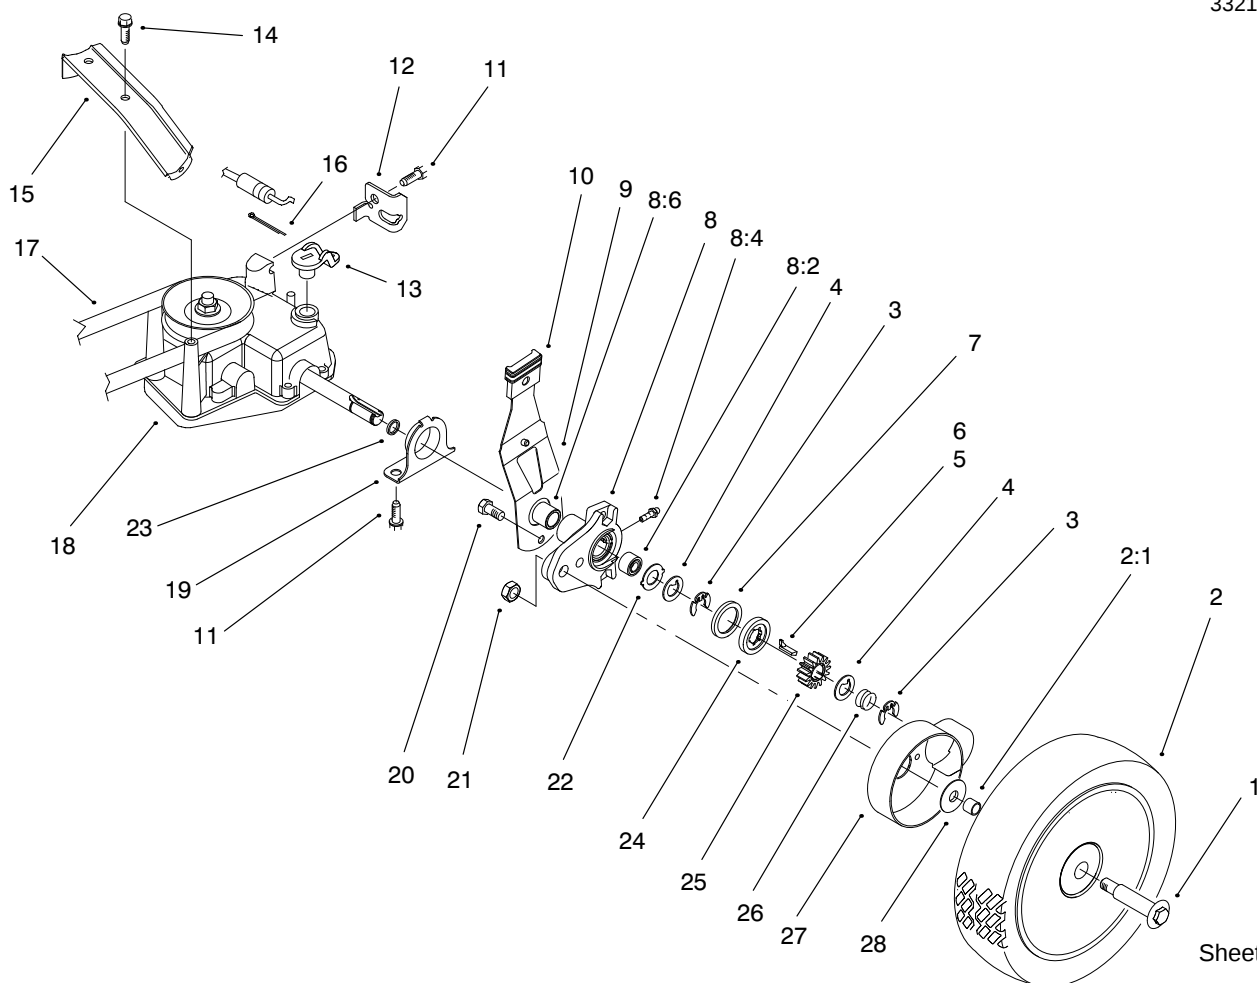 

Sheet No.:7

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	27-6231	2	Bolt-Wheel	22	65-4730	2	Washer-Thrust
2	14-9959	2	Wheel-ASM	23	237-153	2	O-Ring
2:1	27-6250	4	Bushing	24	65-4760	2	Washer
3	65-2720	4	Ring-Retaining	25	65-4750	2	Gear-Pinion
4	65-4740	4	Washer-Thrust	26	65-4720	2	Spring-Compression
5	66-6050	1	Key-Rocking LH	27	74-1660	2	Cover-Wheel
6	66-6040	1	Key-Locking RH	28	74-1671	2	Spacer-Cover
7	65-4710	2	Ring-Friction				
8	65-5042	2	ASM-Pivot Arm				
8:2	48-2060	2	Bearing-Needle				
8:4	302-56	2	Fitting-Grease				
8:6	70-9760	2	Bushing				
9	65-5440	2	ASM-Spring				
10	25-7740	2	Knob-Arm				
11	32144-70	5	Screw-TAP				
12	76-2930	1	Retainer-Cable				
13	76-0920	1	Lever-Shift				
14	49-2040	2	Screw-HH				
15	65-5190	1	Bracket-Belt Guide				
16	3272-5	1	Pin-Cotter				
17	36-8070	1	"v" Belt				
18	62-6673	1	ASM-Gearcase				
19	66-0360	2	Cap-End				
20	65-5220	2	Screw-Thrd Frmg				
21	3296-6	2	Nut-Lock				

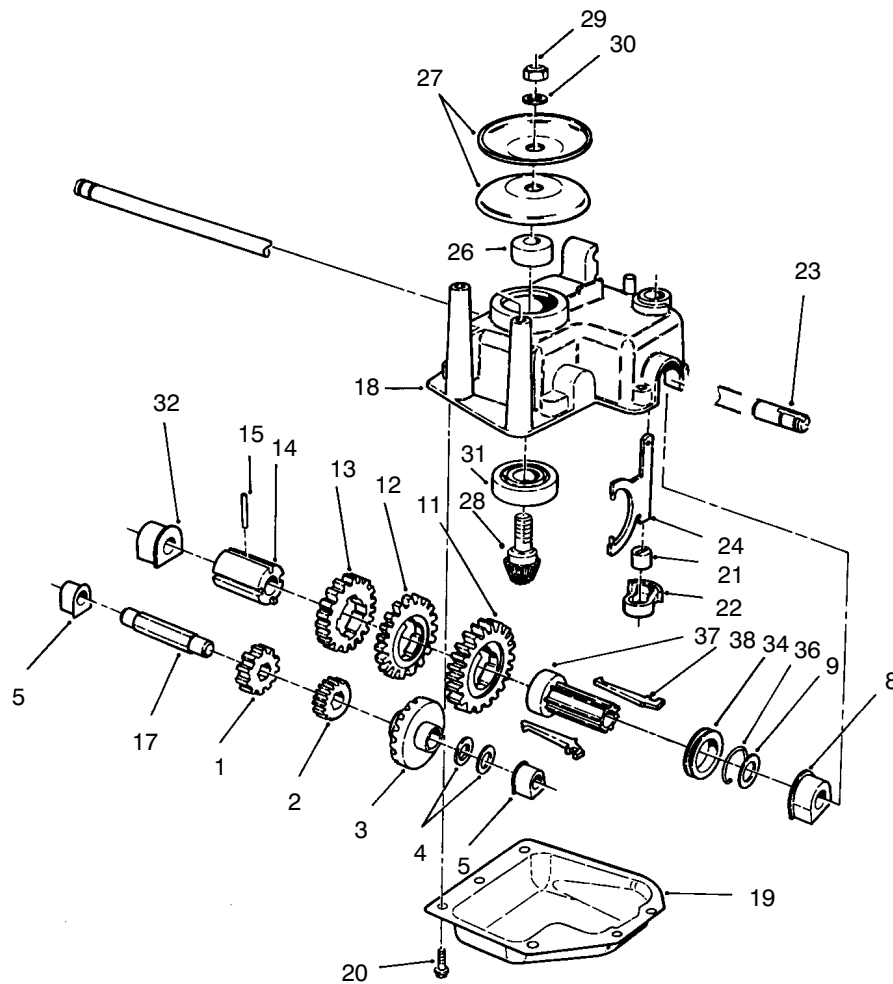 


Sheet No.:101

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear
2	55-3780	1	Pinion 20t 2nd Gear
3	55-3760	1	15 T Pinion
4	36-4791	2	Washer-Thrust
5	60-8750	2	Bushing
8	60-8770	1	Bushing-Output Shaft
9	36-4780	1	Washer-Thrust
11	55-3770	1	Gear 49t 1st Gear
12	55-3790	1	Gear 44t 2nd Gear
13	55-3810	1	Gear 39t 3rd Gear
14	60-8790	1	Sleeve-Gear
15	32121-120	1	Pin-Coil
17	60-8800	1	Shaft-Intermediate
18	60-8710	1	Gearcase-Upper 3 Sp
19	60-8730	1	Cover-Gearcase
20	49-2040	6	Screw-HH
21	29-9570	1	Bushing-Yoke
22	60-8810	1	Retainer-Shift-Fork
23	65-4770	1	Shaft-Output
24	60-8870	1	Yoke-Shift
26	62-6660	1	Spacer-Pulley
27	60-8840	2	Pulley-Half
28	60-8890	1	Gear-Pinion
29	3296-5	1	Nut-Lock
30	3256-24	1	Washer-Flat
31	38-7820	1	Bearing-Ball


Ref. No.	Part No.	Qty.	Description
32	60-8850	1	Bushing-Output
34	76-0770	1	Collar-Shift
36	65-5250	1	Clip-Spring
37	76-0780	1	Sleeve-Shift Key
38	76-0760	2	Key-Shift
	62-6673	1	Gear Case Complete

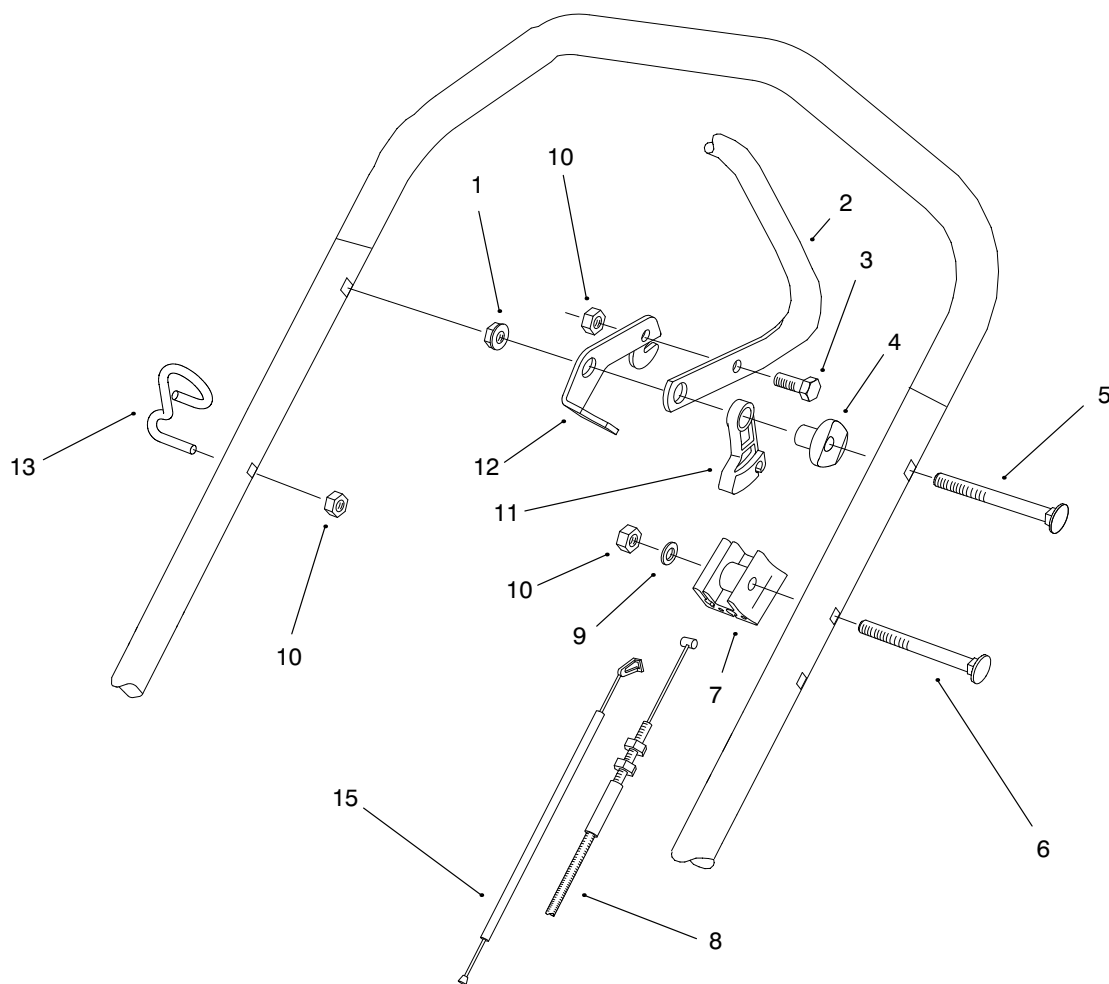 

Sheet No.:8

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-58	2	Nut-Flange
2	52-7430	1	Bar-Control
3	321-3	1	Screw-HH
4	66-0330	2	Spacer-Support
5	17-9426	2	Screw
6	46-6432	1	Screw-Handle
7	71-0960	1	Support-Cable
8	93-6634	1	Cable - Traction
9	3256-22	1	Washer-Flat
10	3296-42	3	Nut-Lock
11	46-5520	1	Lever-Traction
12	66-5350	1	Lever-Control
13	95-4478	1	Rope-Guide
15	93-6628	1	Cable-Brake

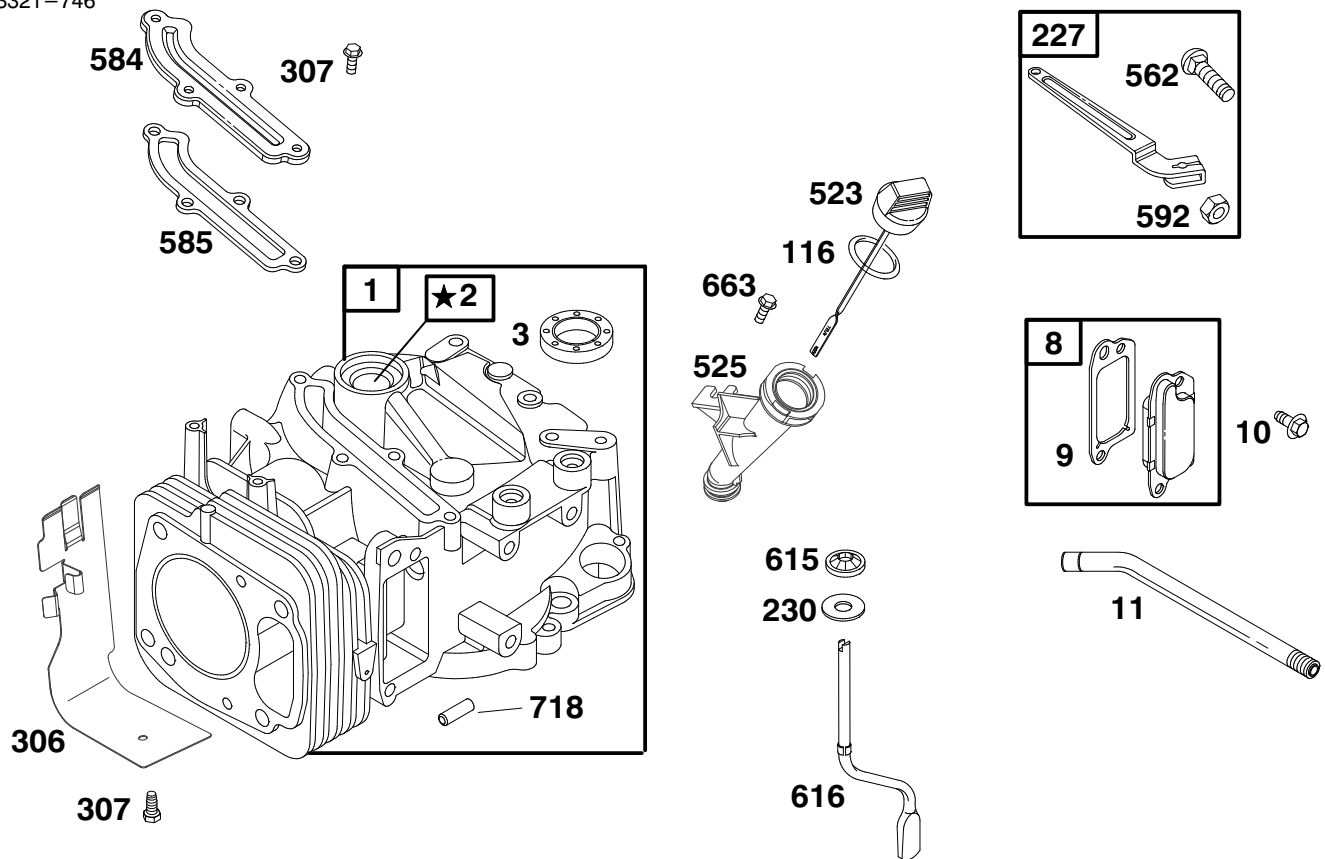 

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
1	99-0900	Cylinder Assembly	1
2	99-0911	Bushing	1
★3	99-0912	Seal - Oil	1
8	77-9260	Breather Assy.	1
†★9	99-0913	Gasket - Breather	1
10	99-0914	Screw - Hex.	1
11	99-0915	Tube - Breather	1
★116	99-0916	Seal - O Ring	1
227	99-0917	Lever Assembly - Gov.	1
230	99-0918	Washer - Gov. Crank	1
306	99-0919	Shield - Cylinder	1
307	99-0920	Screw - Hex.	1

★ Included in Gasket Set - Part No. 99-0920

Ref. No.	Part No.	Description	No. Used
523	77-7260	Dipstick	1
525	99-0906	Tube - Oil Filler	1
562	99-0921	Screw - Hex.	1
584	99-0922	Baffle - Cylinder	1
★585	99-0923	Gasket - Breather	1
592	99-0924	Nut - Hex.	1
615	99-0925	Fastener	1
616	99-0926	Crank - Governor	1
663	99-0927	Screw - Hex.	1
718	99-0928	Dowel - Sleeve	1

 † Included in Valve Overhaul Gasket Set - Part No. 99-0904

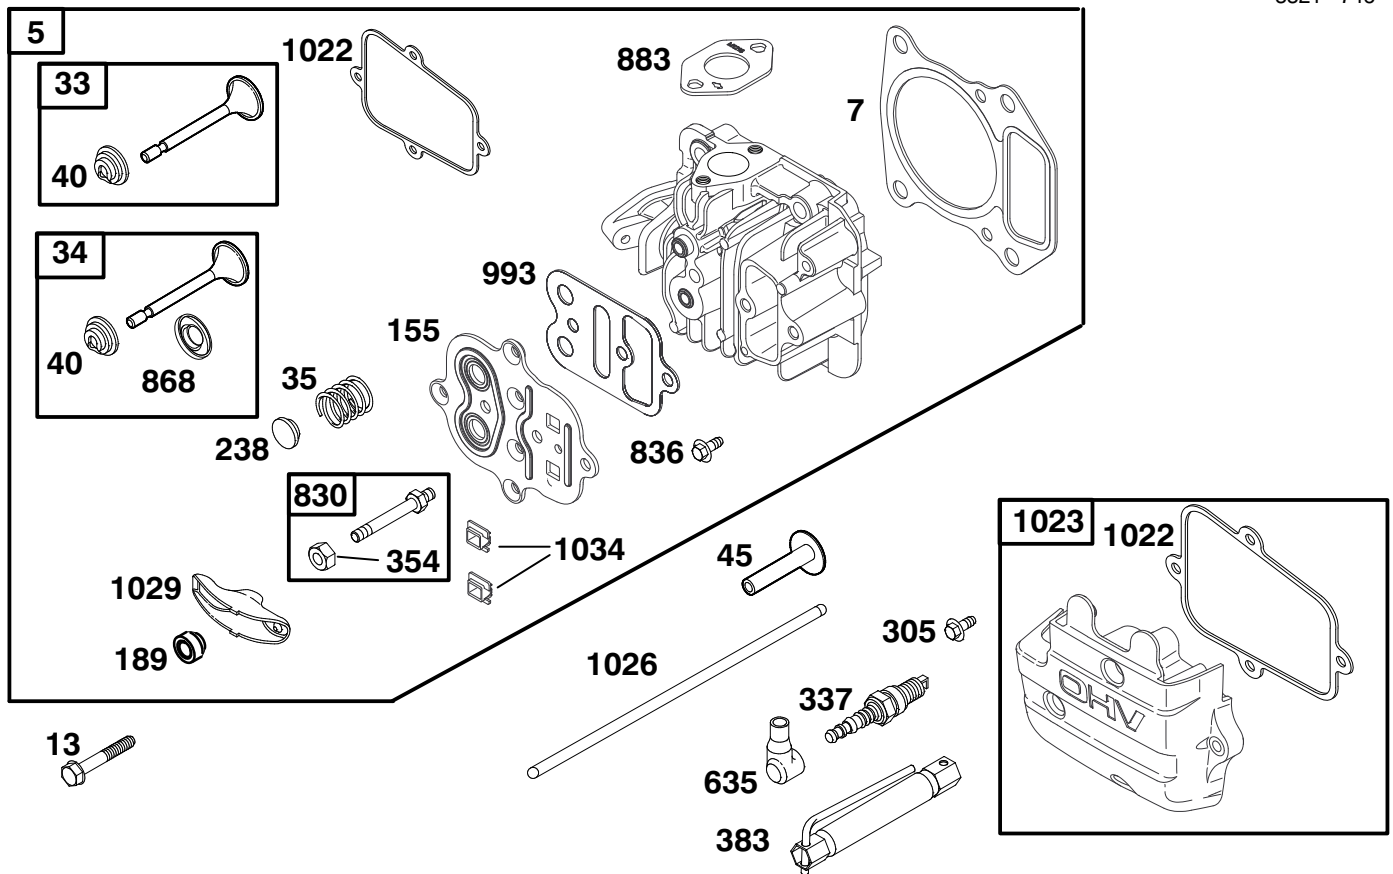


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
5	99-0929	Head - Cylinder	1	383	99-0944	Wrench - Spark Plug	1
†★7	99-0930	Gasket - Cylinder Head	1	635	77-9190	Elbow - Spark Plug	1
13	99-0931	Screw - Hex.	1	830	99-0945	Stud - Rocker Arm	1
33	99-0932	Valve - Exhaust	1	836	99-0941	Screw - Hex.	1
34	99-0933	Valve - Intake	1	†★868	99-0946	Seal - Valve	1
35	99-0934	Spring - Valve	1	†★883	99-0947	Gasket - Exhaust	1
40	99-0935	Retainer - Valve Spring	1	†★993	99-0948	Gasket - Plate	1
45	99-0936	Tappet - Valve	1	†★1022	99-0907	Gasket - Rocker Cover	1
155		Plate - Cylinder Head	1	1023	98-9211	Cover - Rocker	1
189	99-0939	Ball - Rocker Arm	1	1026	99-0949	Rod - Push	1
238	99-0940	Cap - Valve	1	1029	99-0950	Arm - Rocker	1
305	99-0942	Screw - Hex.	1	1034	99-0951	Guide - Push Rod	1
337	99-0943	Plug - Spark	1				
354		Nut - Hex. (Sold in Kit Only).	1				

★ Included in Gasket Set-Part No. 99-0902

 † Included in Valve Overhaul Gasket Set-Part No. 99-0904

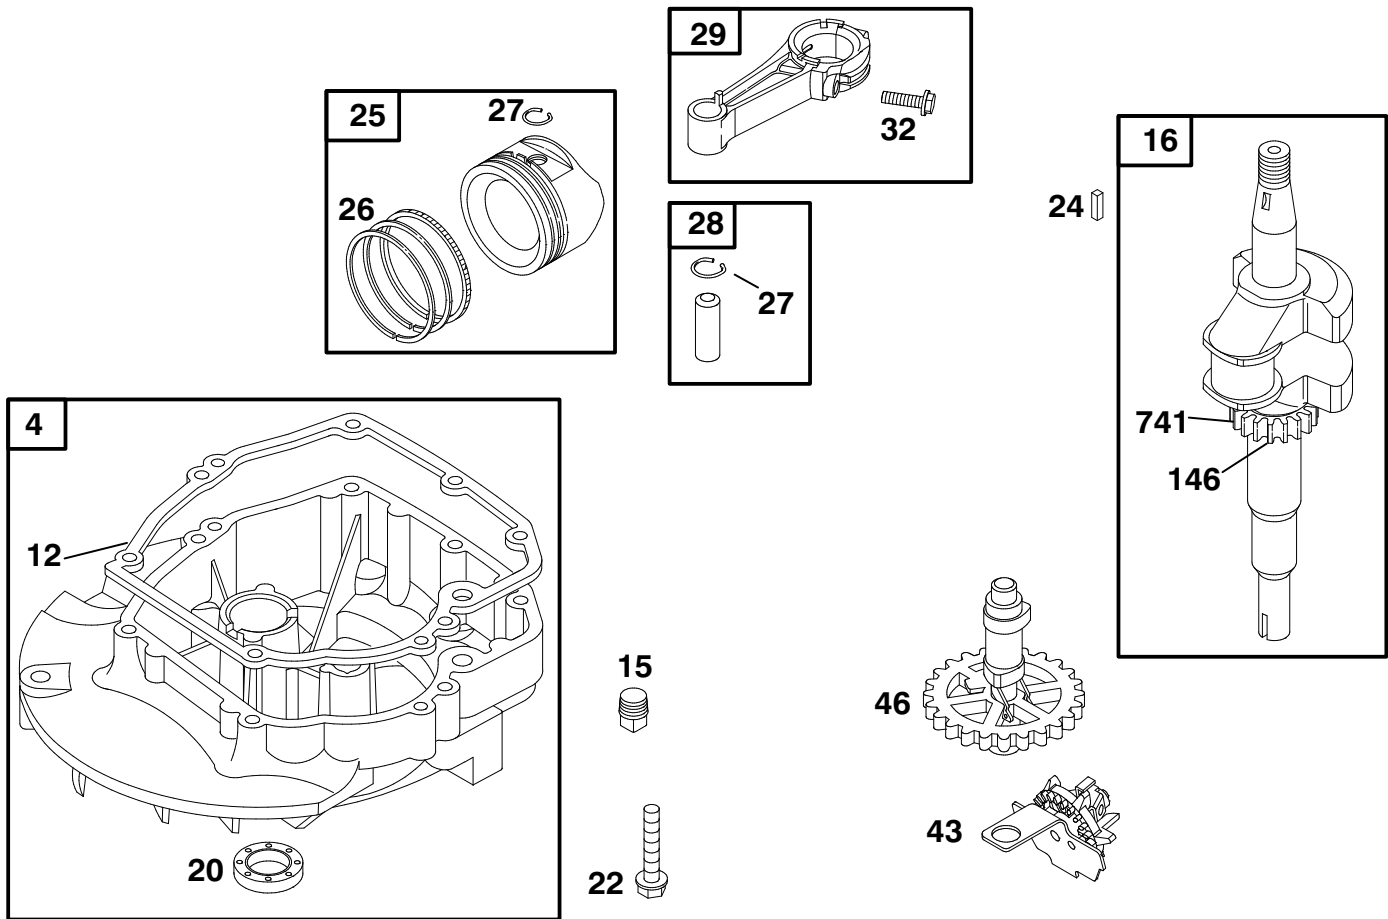


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
4	99-0952	Sump – Engine	1
★12	99-0953	Gasket – Crankcase	1
15	99-0954	Plug – Oil Drain	1
16	98-9214	Crankshaft	1
★20	99-0955	Seal – Oil	1
22	99-0956	Screw – Hex.	1
		Note: 99-1040	
		Screw – Hex.	
		(One (1) Used in Hole	
		Nearest Breather.)	1
24	99-0957	Key – Flywheel	1

Ref. No.	Part No.	Description	No. Used
25	99-0958	Piston Assy. (Standard)	1
26	99-0959	Ring Set (Standard)	1
27	99-0960	Lock – Piston Pin	1
28	99-0961	Pin – Piston (Standard)	1
29	99-0962	Rod – Connecting	1
32	99-0963	Screw – Connecting Rod	1
43	99-0964	Governor/Oil Slinger	1
46	99-0965	Gear – Cam	1
146	99-0966	Key – Timing	1
741	99-0967	Gear – Timing	1

 ★ Included in Gasket Set – Part No. 99-0902

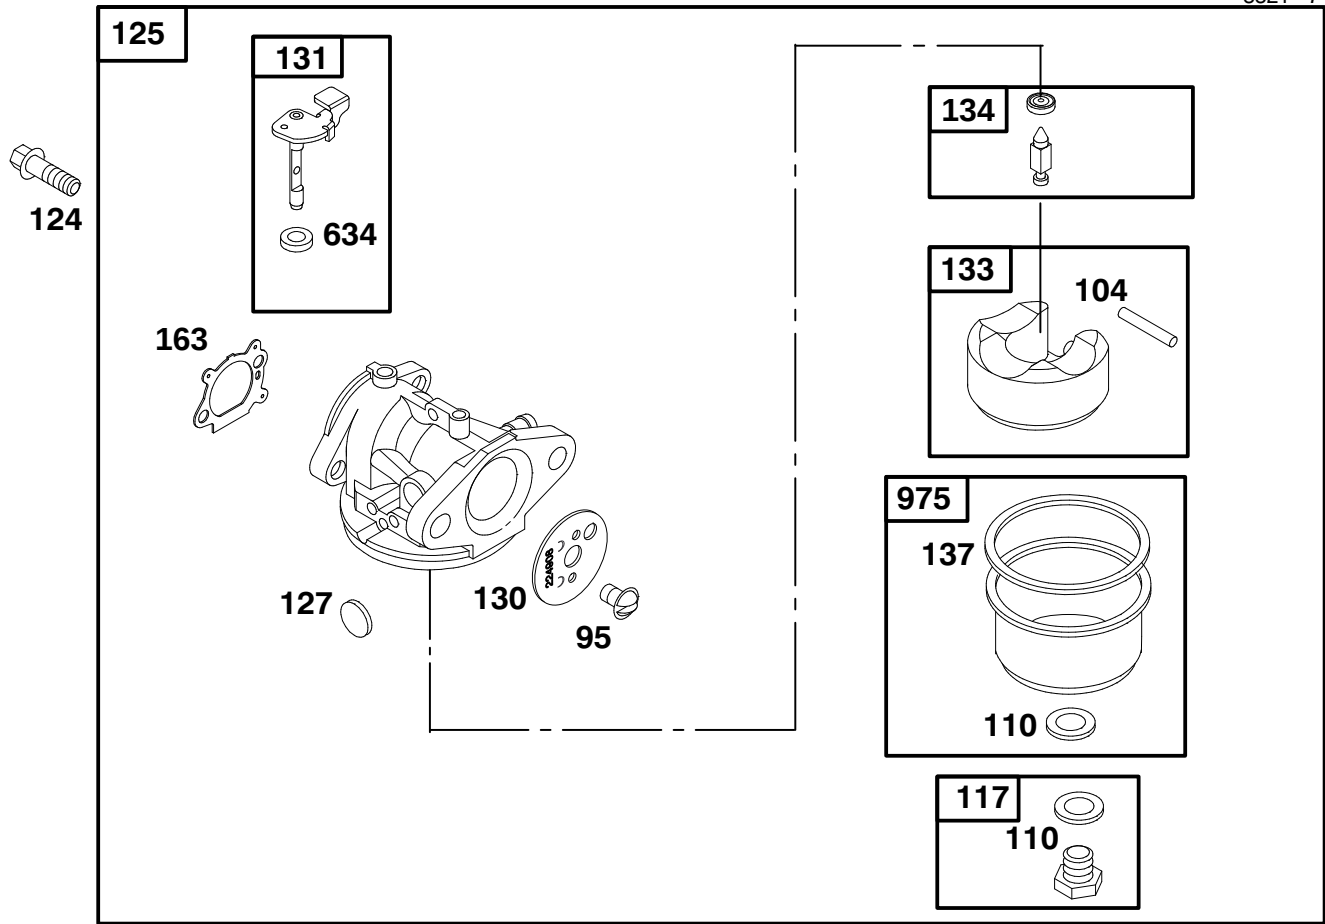

Assemblies include all parts shown in frames.

ENGINE GTS-200


Ref. No.	Part No.	Description	No. Used
95	99-0969	Screw - Slotted	1
●104	99-0970	Pin - Float Hinge	1
◆110		Washer - Bowl (Sold in Kit Only).	1
117	99-0971	Jet - Main (Std.) Note: 99-1041 Jet - Main (High Altitude)	1
124	99-0972	Screw - Shoulder	1
125	99-0973	Carburetor	1
●127		Plug - Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	99-0974	Valve - Throttle	1
131	99-0975	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Needle	1
◆137		Gasket - Bowl (Sold in Kit Only).	1
◆◆163	99-0976	Gasket - Air Cleaner	1
◆◆634		Washer - Foam (Sold in Kit Only).	1
975	99-0977	Bowl - Float	1

● Included in Carburetor Kit-Part No. 99-0901

◆ Included in Carburetor Gasket Set-Part No. 99-0970

 ★ Included in Gasket Set-Part No. 99-0902

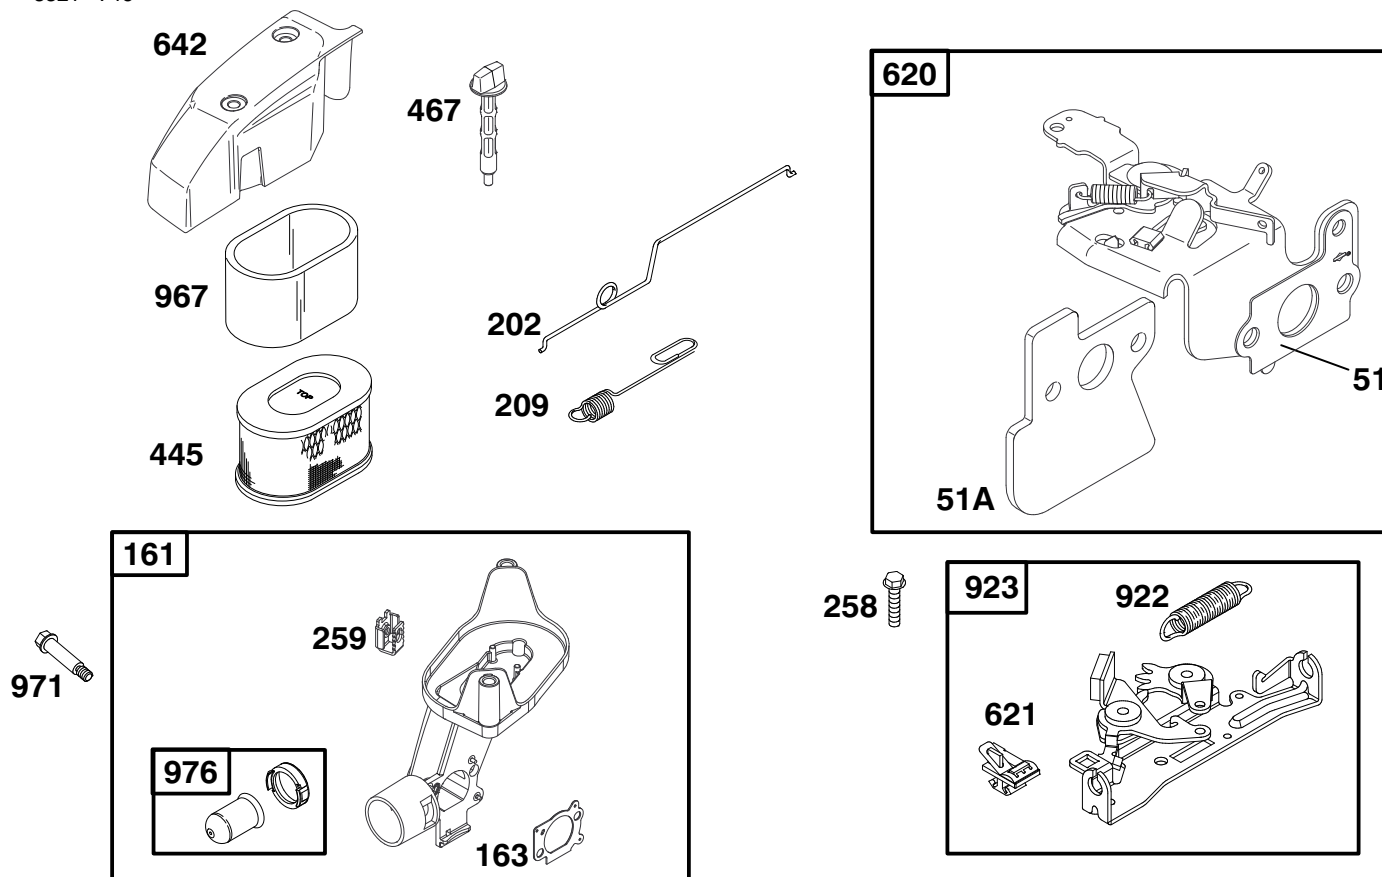

Assemblies include all parts shown in frames.

ENGINE GTS-200


Ref. No.	Part No.	Description	No. Used
51	99-0968	Gasket - Intake	1
51A	99-0978	Gasket - Intake	1
161	99-0979	Base - Air Cleaner/Primer	1
♦♦★163	99-0976	Gasket - Air Cleaner	1
202	99-0981	Link - Governor	1
209	99-1042	Spring - Governor	1
258	99-0983	Screw - Hex.	1
259	99-0984	Grommet	1
445	98-9212	Filter - Air	1
467	98-9208	Knob	1

Ref. No.	Part No.	Description	No. Used
620	99-0985	Bracket - Control	1
621	99-0986	Switch - Stop	1
642	98-9207	Cover - Air Cleaner	1
922	99-0987	Spring - Brake	1
923	99-0988	Brake Assembly	1
967	99-0989	Filter - Air	1
971	99-0990	Screw - Hex.	1
976	99-0991	Primer - Carburetor	1

♦ Included in Carburetor Kit-Part No. 99-0901

♦♦ Included in Carburetor Gasket Set-Part No. 99-0903

 ★ Included in Gasket Set-Part No. 99-0902

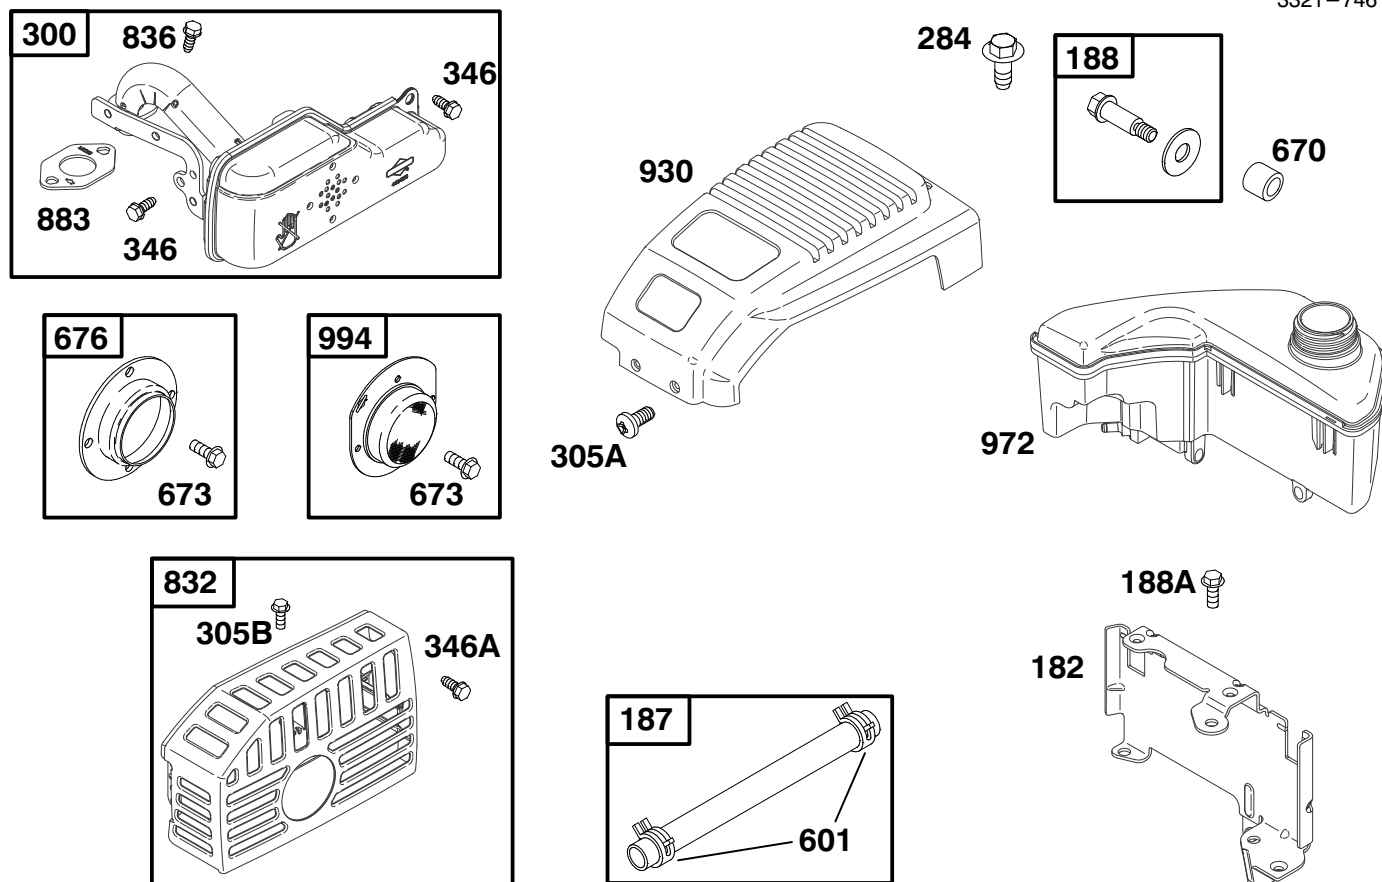


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
182	98-9205	Bracket - Tank Mounting	1	601	99-0996	Clamp - Hose	1
187	99-0992	Line - Fuel (Cut to Required Length)	1	670	99-0997	Spacer - Fuel Tank	1
188	99-0993	Screw - Shoulder	1	673	99-1043	Screw - Hex.	1
188A	98-9202	Screw - Hex.	1	676	99-1044	Deflector - Muffler	1
284	99-0994	Screw - Hex.	1	832	98-9206	Guard - Muffler	1
300	99-0995	Muffler - Exhaust	1	836	99-0941	Screw - Hex.	1
305A	98-9204	Screw - Torx®	1	†★883	99-0947	Gasket - Exhaust	1
305B	99-0998	Screw - Hex.	1	930	98-9203	Guard - Rewind	1
346	99-1047	Screw - Hex.	1	972	99-1000	Tank - Fuel	1
346A	99-0999	Screw - Hex.	1	994	94-1681	Arrestor - Spark	1

★ Included in Gasket Set - Part No.
99-0902

 † Included in Valve Overhaul Gasket Set - Part No.
99-0904

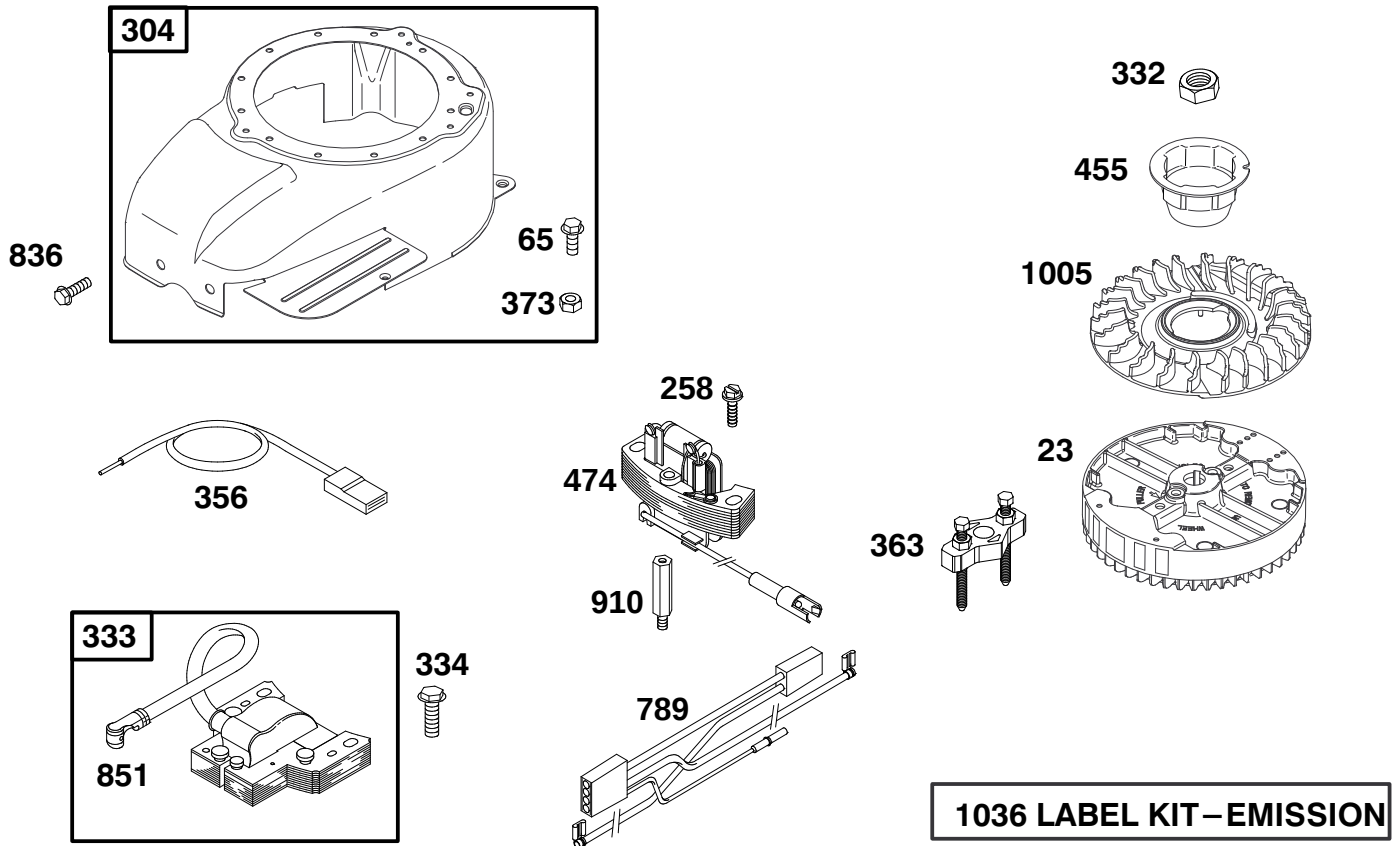


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
23	99-1001	Flywheel	1
65	99-1002	Screw - Hex.	1
258	98-0983	Screw - Hex.	1
304	99-1003	Housing - Blower	1
332	99-1004	Nut - Flywheel	1
333	99-1005	Armature - Magneto	1
334	99-1006	Screw - Hex.	1
356	99-1007	Wire - Stop	1
363	99-1008	Puller - Flywheel	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut - Hex.	1
455	99-1010	Cup - Flywheel	1
474	99-1011	Alternator	1
789	99-1012	Harness - Wiring	1
836	99-0941	Screw - Hex.	1
851	77-9450	Terminal - Cable	1
910	99-1014	Stud - Stator Mounting	1
1005	99-1015	Fan - Flywheel	1
1036	99-1016	Label Kit - Emission	1

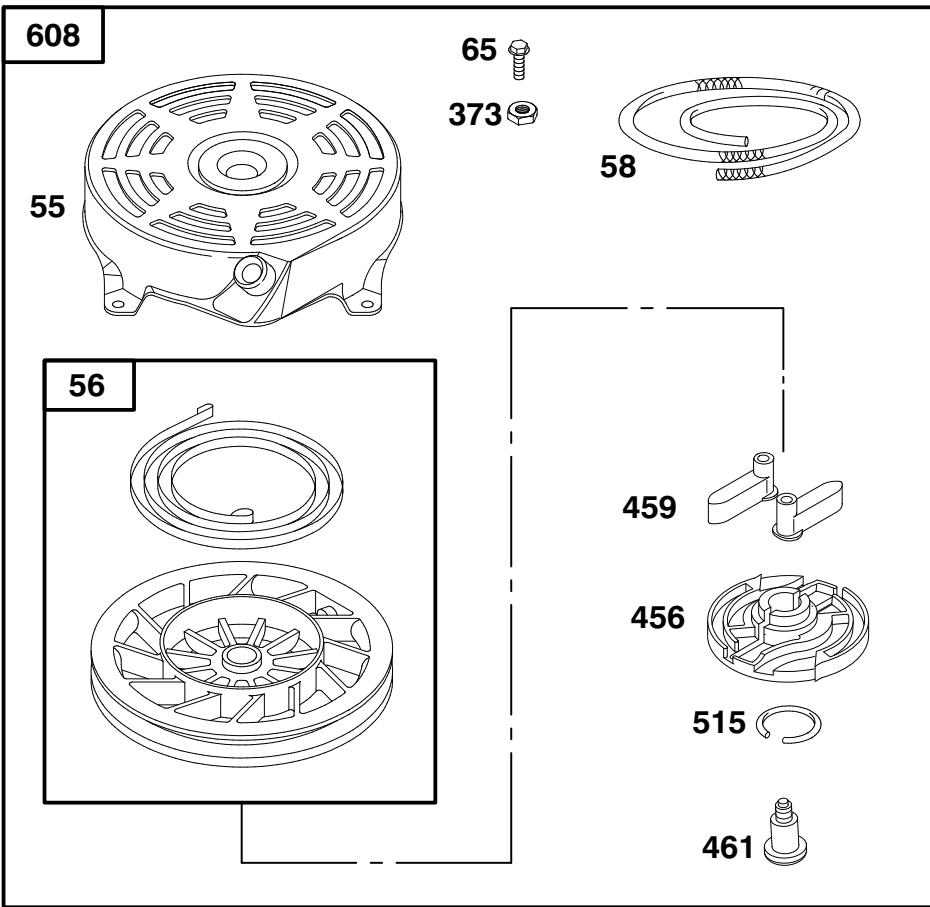 


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
55	99-1048	Housing - Rewind Starter	1
56	94-1657	Pulley - Starter	1
58	94-1668	Rope - Starter	1
59	77-7210	Insert - Starter Grip	1
60	77-8520	Grip - Starter Rope	1
65	99-1002	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut - Hex.	1
456	94-1659	Retainer - Spring	1
459	94-1654	Pawl - Ratchet	1
461	94-1660	Screw - Shoulder	1
515	94-1655	Spring - Friction	1
608	98-9215	Starter - Rewind	1




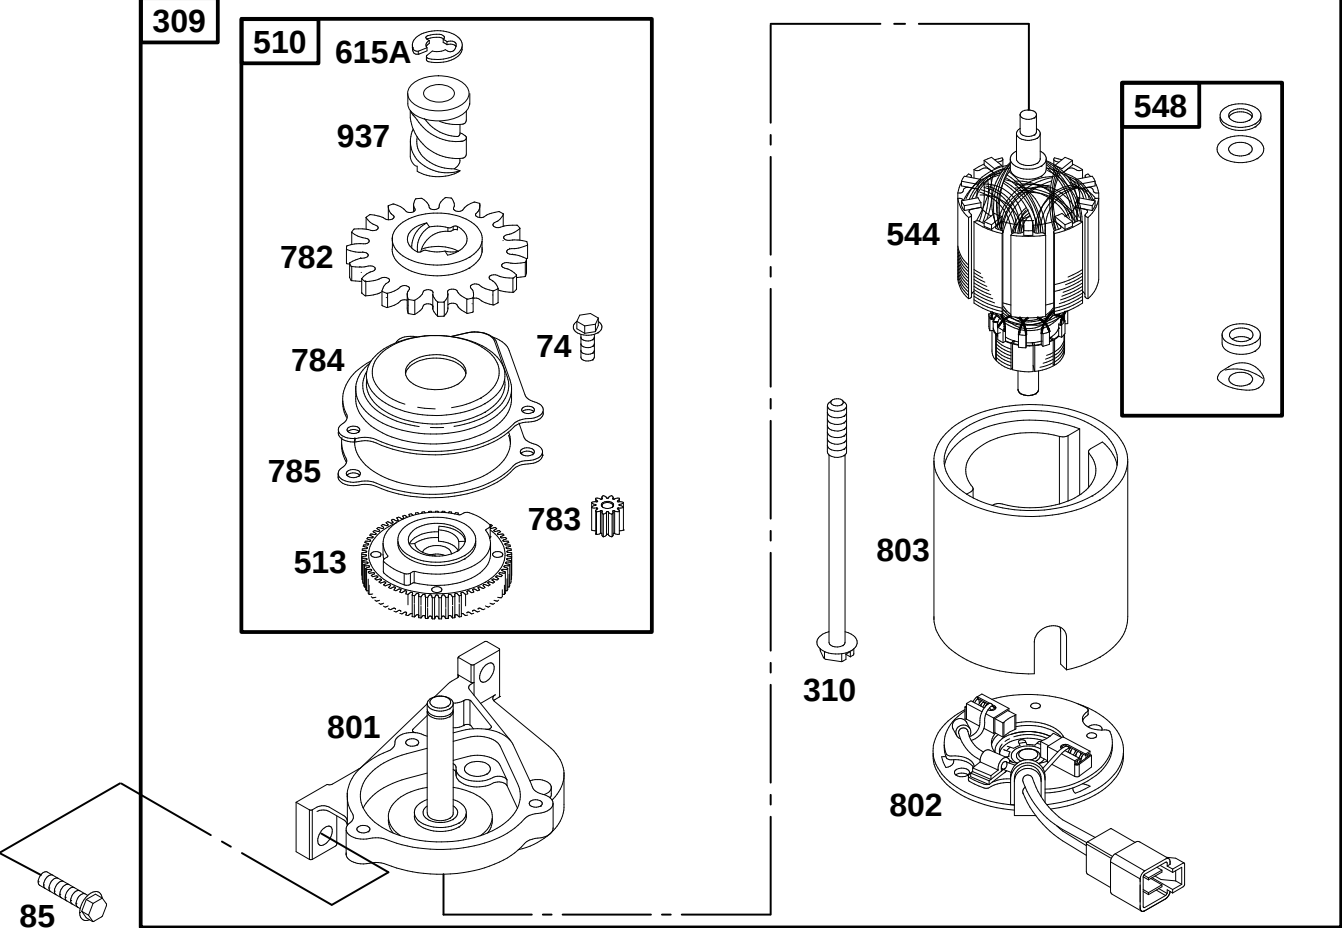 


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
74	99-1017	Screw - Hex.	1
85	99-1018	Screw - Hex.	1
309	77-8670	Motor - Starter	1
310	99-1019	Screw - Slotted Hex.	1
510	99-1020	Drive - Starter	1
513	99-1021	Clutch - Drive	1
544	99-1022	Armature - Starter	1
548	77-8740	Washer Set	1
615A	77-8830	Retainer	1

Ref. No.	Part No.	Description	No. Used
782	99-1023	Gear - Starter	1
783	99-1024	Gear - Starter	1
784	99-1025	Cover - Gear	1
785	99-1026	Gasket - Cover	1
801	99-1027	Cap - Drive	1
802	99-1028	Cap - End	1
803	99-1029	Housing - Starter	1
937	99-1030	Spline - Starter	1

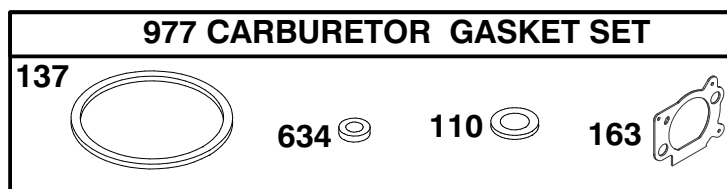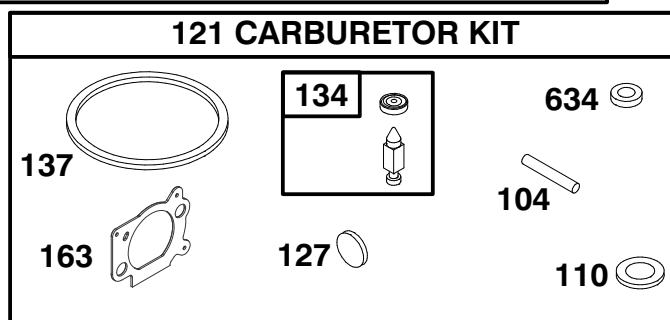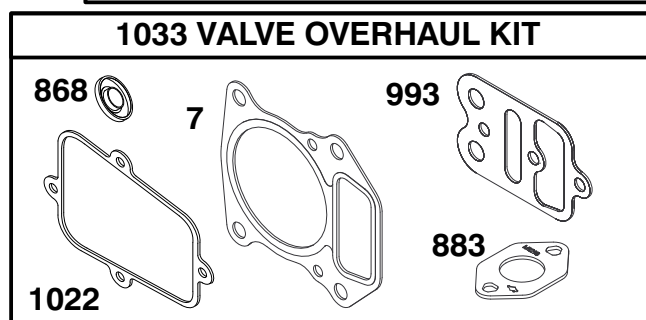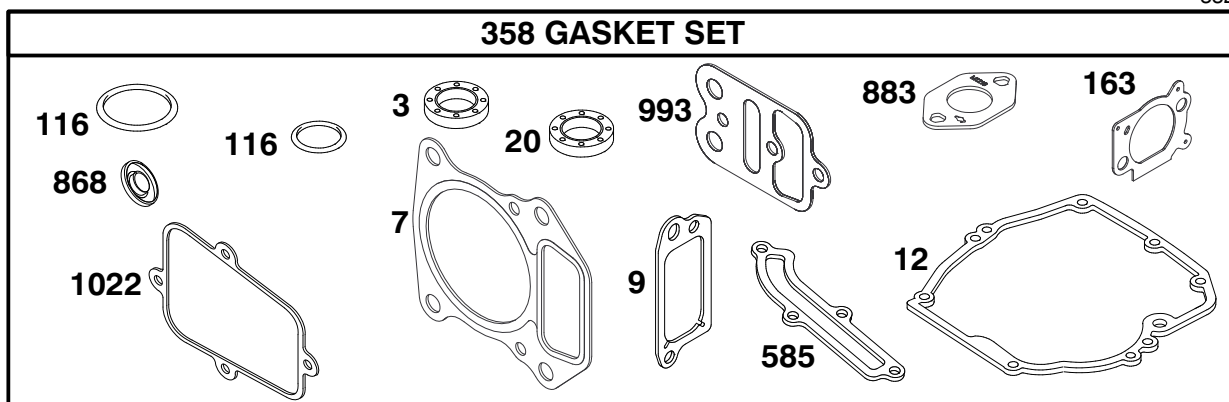    

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★3	99-0912	Seal – Oil	1	◆◆★163	99-0976	Gasket – Air Cleaner	1
†★7	99-0930	Gasket – Cylinder Head	1	358	99-0902	Gasket Set	1
†★9	99-0913	Gasket – Breather	1	★585	99-0923	Gasket – Breather	1
★12	99-0953	Gasket – Crankcase	1	◆◆634		Washer – Foam (Sold in Kit Only).	1
★20	99-0955	Seal – Oil	1	†★868	99-0946	Seal – Valve	1
●104	99-0970	Pin – Float Hinge	1	†★883	99-0947	Gasket – Exhaust	1
◆◆110		Washer – Bowl (Sold in Kit Only).	1	977	99-0903	Gasket Set – Carburetor	1
★116	99-0916	Seal – O Ring	1	†★993	99-0948	Gasket – Plate	1
121	99-0901	Carburetor Kit	1	†★1022	99-0907	Gasket – Rocker Cover	1
●127		Plug – Welch (Sold in Kit Only).	1	1033	99-0904	Gasket Set – Valve Overhaul	1
◆134	77-8110	Valve – Needle	1				
◆◆137		Gasket – Bowl (Sold in Kit Only).	1				

● Included in Carburetor Kit—Part No. 99-0901

◆◆ Included in Carburetor Gasket Set—Part No. 99-0903

★ Included in Gasket Set—Part No. 99-0902

† Included in Valve Overhaul Gasket Set—Part No. 99-0904

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
14-9949	1	22	2	Wheel & Tire-ASM
14-9959	6	2	2	Wheel-ASM
16-1769	1	11	1	Housing-53cm
17-1569	1	1	1	Door-Discharge
17-9426	8	5	2	Screw
19-4050	4	2	2	Knob
25-7740	1	14	2	Knob-Arm
25-7740	6	10	2	Knob-Arm
26-0670	3	7	1	Bolt-Blade
27-6231	1	23	2	Bolt-Wheel
27-6231	6	1	2	Bolt-Wheel
27-6250	1	22:1	4	Bushing
27-6250	6	2:1	4	Bushing
29-9570	7	21	1	Bushing-Yoke
36-4780	7	9	1	Washer-Thrust
36-4791	7	4	2	Washer-Thrust
36-8070	6	17	1	"v" Belt
38-7820	7	31	1	Bearing-Ball
40-1940	1	15	4	Washer
46-5520	8	11	1	Lever-Traction
46-5780	4	5	1	Switch-Starter
46-6432	8	6	1	Screw-Handle
48-2060	6	8:2	2	Bearing-Needle
49-2040	6	14	2	Screw-HH
49-2040	7	20	6	Screw-HH
52-7430	8	2	1	Bar-Control
55-3760	7	3	1	15 T Pinion
55-3770	7	11	1	Gear 49t 1st Gear
55-3780	7	2	1	Pinion 20t 2nd Gear
55-3790	7	12	1	Gear 44t 2nd Gear
55-3800	7	1	1	Pinion 25t 3rd Gear
55-3810	7	13	1	Gear 39t 3rd Gear
55-7520	4	3	1	Battery Pack
60-8710	7	18	1	Gearcase-Upper 3 Sp
60-8730	7	19	1	Cover-Gearcase
60-8750	7	5	2	Bushing
60-8770	7	8	1	Bushing-Output Shaft
60-8790	7	14	1	Sleeve-Gear
60-8800	7	17	1	Shaft-Intermediate
60-8810	7	22	1	Retainer-Shift-Fork
60-8840	7	27	2	Pulley-Half
60-8850	7	32	1	Bushing-Output
60-8870	7	24	1	Yoke-Shift
60-8890	7	28	1	Gear-Pinnion
62-6660	7	26	1	Spacer-Pulley
62-6673	6	18	1	ASM-Gearcase
62-6673	7		1	Gear Case Complete
62-7540	3	4	1	Retainer-Blade
62-7550	3	3	1	Pulley-Driver
62-7700	3	6	1	Blade-21"
63-8360	4	21	1	Key-Ignition
65-2720	6	3	4	Ring-Retaining
65-4710	6	7	2	Ring-Friction
65-4720	6	26	2	Spring-Compression
65-4730	6	22	2	Washer-Thrust
65-4740	6	4	4	Washer-Thrust
65-4750	6	25	2	Gear-Pinion
65-4760	6	24	2	Washer
65-4770	7	23	1	Shaft-Output
65-5042	6	8	2	ASM-Pivot Arm
65-5190	6	15	1	Bracket-Belt Guide
65-5200	3	5	1	Shield-Bbc

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-5210	1	4	2	Screw-Tf
65-5220	1	16	2	Screw-Thrd Frmg
65-5220	6	20	2	Screw-Thrd Frmg
65-5250	7	36	1	Clip-Spring
65-5440	6	9	2	ASM-Spring Arm-Rear
65-5660	1	9	1	Panel-Screen
66-0020	1	12	1	Panel-Vertical
66-0030	3	2	1	Bracket-Cable Support
66-0330	8	4	2	Spacer-Support
66-0360	6	19	2	Cap-End
66-0540	1	18	2	ASM-Spring Arm
66-0560	1	21	2	Screw-Shoulder
66-0570	2	9	1	Guide-Belt
66-0580	1	20	2	Arm-Pivot
66-0620	1	33	1	Retainer-Belt
66-5350	8	12	1	Lever-Control
66-6040	6	6	1	Key-Locking RH
66-6050	6	5	1	Key-Rocking LH
70-9760	6	8:6	2	Bushing
71-0960	8	7	1	Support-Cable
71-7900	1	2	1	Cap-Bolt LH
71-7910	1	5	1	Cap-Bolt RH
71-8090	4	1	1	Mount-Handle LH
71-8100	4	24	1	Mount-Handle RH
71-8580	1	28	2	Spacer-Door
71-9470	5	3	1	Door-Bag
71-9480	5	2	1	Handle-Door
71-9640	1	19	1	Ramp-Discharge
71-9650	1	25	1	Access-Cover
71-9680	5	5	1	Bag-Grass
71-9840	1	29	2	Spring-Door
71-9870	1	11:1	1	Decal-Deck 53cm
71-9871	4	18:1	1	Decal-Panel Key
71-9920	1	24	1	Cover-Top
71-9930	5	4	1	Wa-Frame
74-1660	6	27	2	Cover-Wheel
74-1671	6	28	2	Spacer-Cover
76-0760	7	38	2	Key-Shift
76-0770	7	34	1	Collar-Shift
76-0780	7	37	1	Sleeve-Shift Key
76-0920	6	13	1	Lever-Shift
76-2930	6	12	1	Retainer-Cable
80-4795	4	4	1	Harness-Wire
92-2289	2	3	1	Plate-Logo
92-9665	4	7	5	Screw-Phil
93-4105	1	1:1	1	Decal-Danger
93-6628	8	15	1	Cable-Brake
93-6632	4	23	1	Control-Speed
93-6634	8	8	1	Cable - Traction
93-6668	4	27	2	Decal-Instruct
93-7198	2	1	1	ASM-Cap
93-8470	2	7	1	Screw-Clamp
94-4910	4	16	1	Handle-Dipped
95-3017	4	6	1	Cover-Battery
95-4478	8	13	1	Rope-Guide
98-1505	4	19	1	Control-Throttle
98-2004	2	2	1	Decal-Engine
98-2025	4	18:2	1	Decal - Instructions
98-2391	5	6	1	Charger-Battery
98-9229	4	18	1	Panel-Control
218-461	4	26	1	Nut-HH (F/W Sw)
2210-249	2	8	1	Clamp-Casing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
2210-316	2	12	1	Rope-Stop
237-153	6	23	2	O-Ring
302-56	6	8:4	2	Fitting-Grease
321-3	8	3	1	Screw-HH
322-29	1	3	2	Screw-HH
3229-34	4	28	2	Bolt-Carriage
3253-22	3	8	1	Washer-Lock
3254-5	4	25	1	Washer-Lock
3256-14	4	29	2	Washer-Flat
3256-22	8	9	1	Washer-Flat
3256-24	1	32	1	Washer-Flat
3256-24	7	30	1	Washer-Flat
3272-5	6	16	1	Pin-Cotter
3290-378	4	9	5	Tie-Cable
3296-2	4	30	2	Nut-Lock
3296-5	7	29	1	Nut-Lock
3296-6	1	17	4	Nut-Lock
3296-6	6	21	2	Nut-Lock
3296-42	8	10	3	Nut-Lock
3296-58	8	1	2	Nut-Flange
32121-120	7	15	1	Pin-Coil
32144-15	1	31	1	Tapping-Scr
32144-70	1	8	6	Screw-TAP
32144-70	2	11	2	Screw-TAP
32144-70	3	1	5	Screw-TAP
32144-70	6	11	5	Screw-TAP
32144-102	2	10	3	Screw
32144-111	5	1	5	Screw - PPH