

Count on it.

Parts Catalog

LC1P65FC BSS Engine

Model No. 136-7914



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Shroud, Flywheel and Fuel Tank Assembly	4
Dipstick and Gasket Assembly	6
Carburetor, Muffler, Air Cleaner and Valve Cover Assembly	8
Seal and Gasket Kit No. 127-9144	10


Shroud, Flywheel and Fuel Tank Assembly

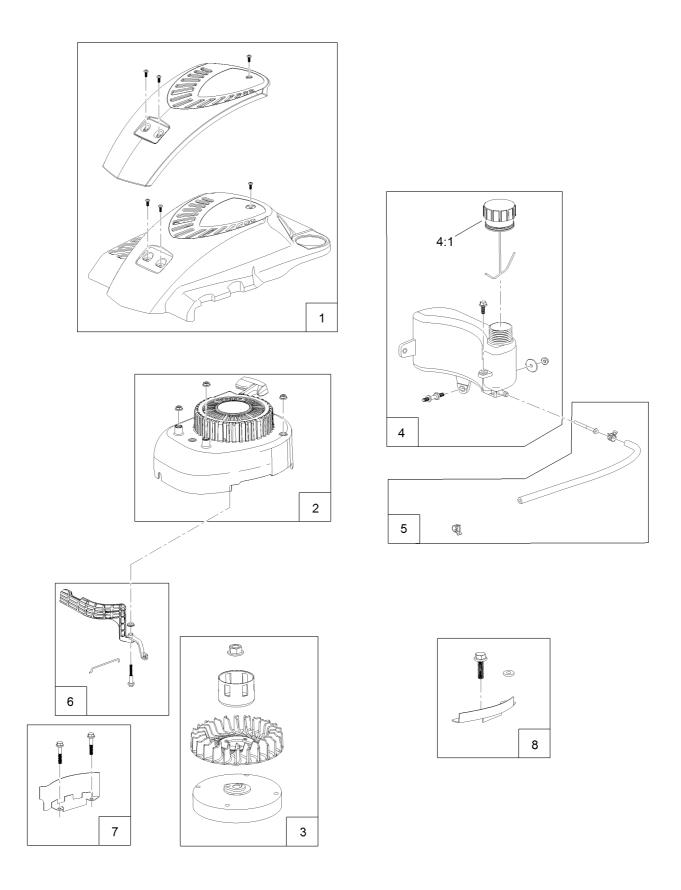

Shroud, Flywheel and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-1990	1	Shroud ASM	4:1	121-4163	1	Cap-Fuel
2	121-4160	1	Recoil And Blower Shroud	5	121-4167	1	Fuel Line Kit
			Kit	6	121-4168	1	Air Vane Kit
3	121-0388	1	Flywheel And Fan Kit	7	119-1994	1	Flywheel Shield Kit
4	121-4162	1	Fuel Tank Kit	8	121-4207	1	Flywheel Guard Kit

Dipstick and Gasket Assembly

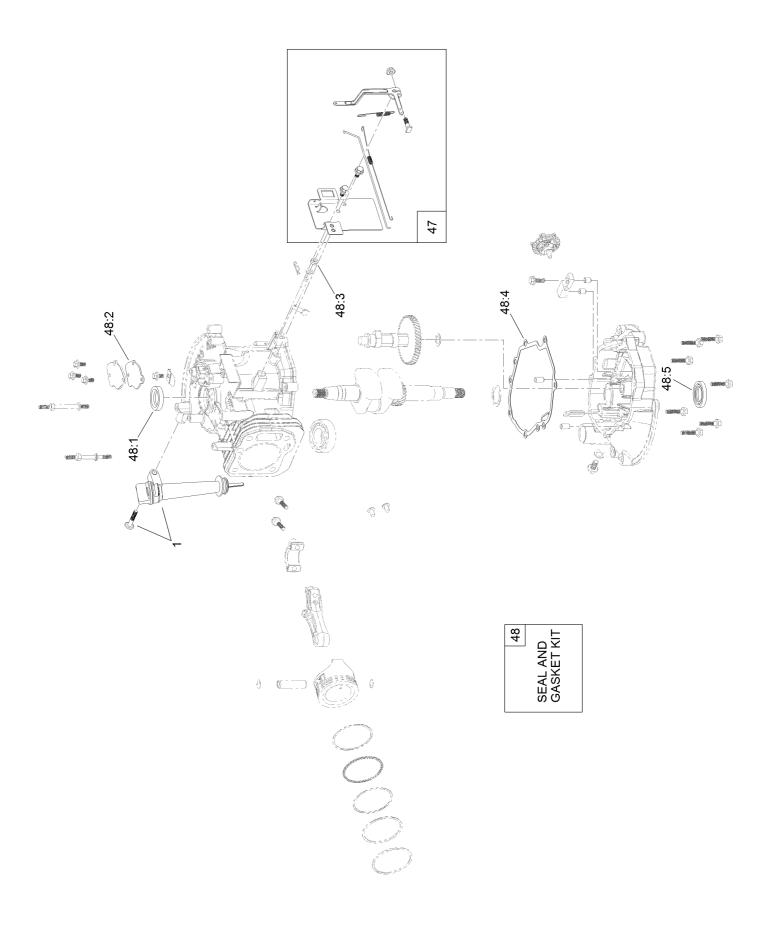


03

Dipstick and Gasket Assembly (continued)

	Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
_	1	121-4279	1	Dipstick And Fill Tube Kit	48:2	121-0020	1	Gasket-Breather
	47	119-1968	1	Governor Arm Kit	48:3	121-0021	1	Seal-Oil
	48	127-9144	1	Seal And Gasket Kit	48:4	120-4459	1	Gasket-Cover, Case
	48:1	121-0019	1	Seal-Oil	48:5	121-0022	1	Seal-Oil

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly

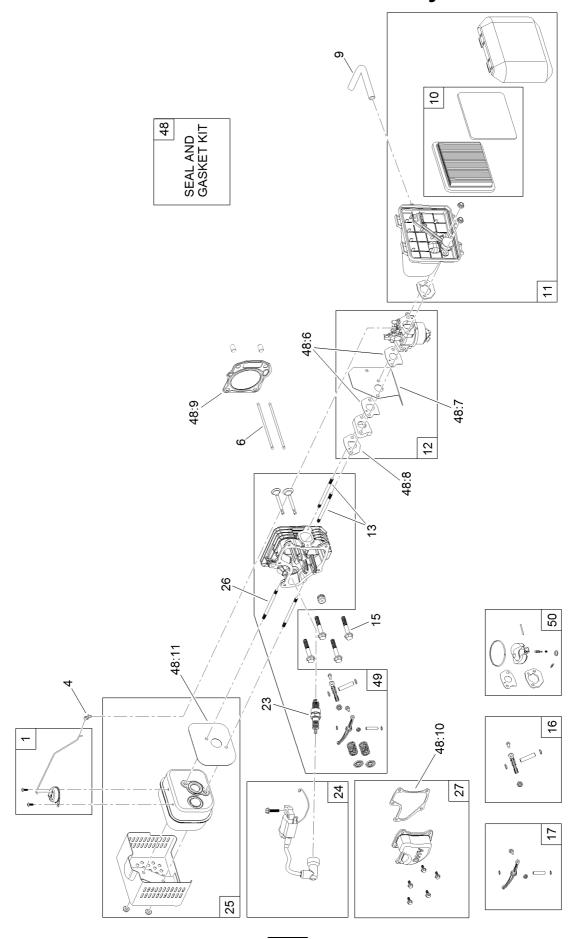


Carburetor, Muffler, Air Cleaner and Valve Cover Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-4175	1	Thermal Control Kit	26	121-0045	2	Stud-Exhaust
4	120-4451	1	Lock-Throttle	27	121-4188	1	Valve Cover Kit
6	121-4193	2	Rod-Push	48	127-9144	1	Seal And Gasket Kit
9	119-1902	1	Tube-Breather	48:6	121-4184	2	Gasket-Carburetor
10	119-1909	1	Air Filter And Prefilter Kit	48:7	120-4446	1	Insulator-Carburetor
11	121-4177	1	Air Cleaner ASM Kit	48:8	121-4183	1	Gasket-Intake
12	136-7907	1	Carb Replacement Kit	48:9	121-4197	1	Gasket-Head
13	121-0367	2	Stud-Intake	48:10	121-4190	1	Gasket-Valve Cover
15	121-0043	4	Bolt-Flange	48:11	121-0034	1	Gasket-Exhaust
16	136-7869	1	Intake Rocker Arm ASM	49	136-7915	1	Complete Head ASM
17	136-7868	1	Exhaust Rocker Arm ASM	50	127-9146	1	Internal Carb Kit With
23	121-4199	1	Spark Plug				Gaskets
24	136-7913	1	Ignition ASM	99	121-4242	1	High Altitude Kit ●
25	121-4277	1	Muffler And Shield Kit				

Not illustrated

Seal and Gasket Kit No. 127-9144

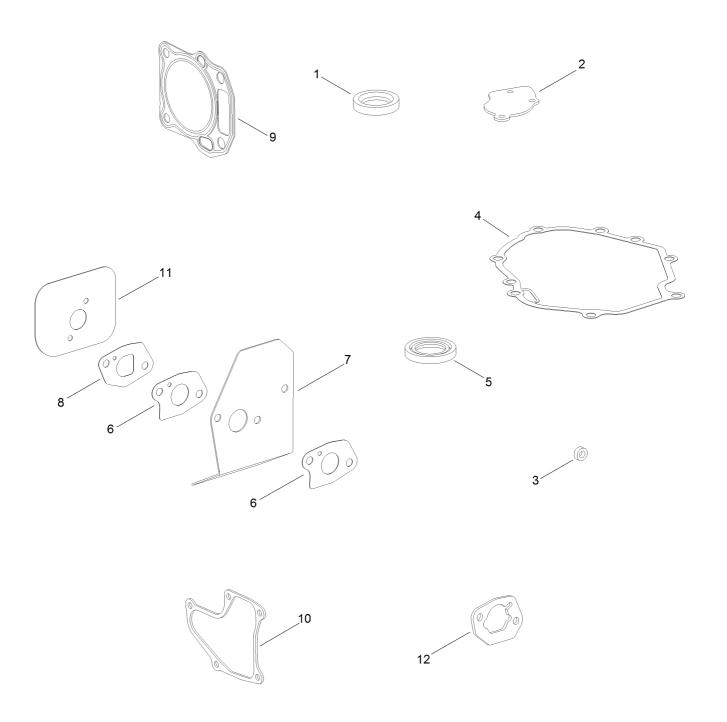

10

Seal and Gasket Kit No. 127-9144 (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-0019	1	Seal-Oil	7	120-4446	1	Insulator-Carburetor
2	121-0020	1	Gasket-Breather	8	121-4183	1	Gasket-Intake
3	121-0021	1	Seal-Oil	9	121-4197	1	Gasket-Head
4	120-4459	1	Gasket-Cover, Case	10	121-4190	1	Gasket-Valve Cover
5	121-0022	1	Seal-Oil	11	121-0034	1	Gasket-Exhaust
6	121-4184	2	Gasket-Carburetor	12	121-4179	1	Gasket-Air Cleaner

