



TITAN® HD Series Riding Mower

Model No. All Models

Form No. 3421-130 Rev A

Setup Instructions

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Remove the machine from the crate.
2	No parts required	–	Add fuel to the machine.
3	No parts required	–	Check the engine-oil level.
4	No parts required	–	Service the hydraulic fluid.
5	No parts required	–	Check the tire pressure.
6	No parts required	–	Servicing the battery.
7	No parts required	–	Raise the rollover protection system (ROPS).
8	No parts required	–	Check the grass deflector.
9	No parts required	–	Remove the shipping strap(s).
10	No. 2 lithium or molybdenum-based grease (purchase separately)	1 tube	Check the machine for grease.
11	Locknut (3/8 inch) Carriage bolt (3/8 x 2-1/4 inches)	3 3	Install the right bumper (rear discharge models only).
12	No parts required	–	Check the mower adjustment.
13	No parts required	–	Check the machine before delivery to the customer (all machines).
14	Operator's Manual Engine owner's manual (non-Toro engines) Operator-training material Key Registration card	1 1 1 2 1	Deliver the machine to the customer (all machines).

Note: Determine the left and right sides of the machine from the normal operating position.



1

Removing the Machine from the Crate

No Parts Required

Procedure

If removing the machine from a metal crate, refer to the *Dealer/Distributor Portal* for further information.

2

Adding Fuel to the Machine

No Parts Required

Procedure

Add fuel to the machine before starting it. Refer to your *Operator's Manual* for the correct fuel and procedure.

3

Checking the Engine-Oil Level

No Parts Required

Procedure

Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to *Servicing the Engine-Oil Level* in the *Operator's Manual*.

4

Servicing the Hydraulic Fluid

No Parts Required

Procedure

This machine is shipped filled with hydraulic fluid in the reservoirs.

Check the expansion tank; if necessary, add Toro® HYPR-OIL™ 500 hydraulic fluid, as recommended in the *Operator's Manual*, to the FULL COLD line ([Figure 1](#)).

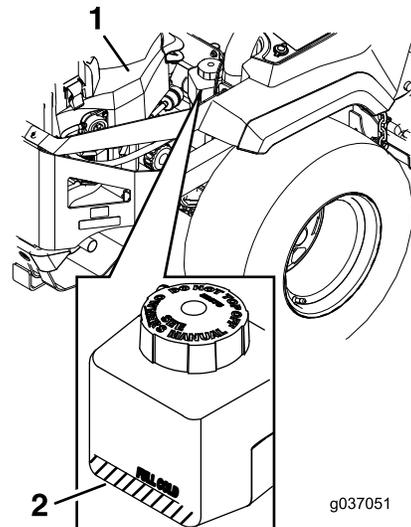


Figure 1

- 1. Engine
- 2. Expansion tank

5


Checking the Tire Pressure

No Parts Required

Procedure

Pressure: 13 psi (90 kPa)

Note: Check the tire pressure before starting the machine. Refer to your *Operator's Manual* for the correct tire type and procedure.

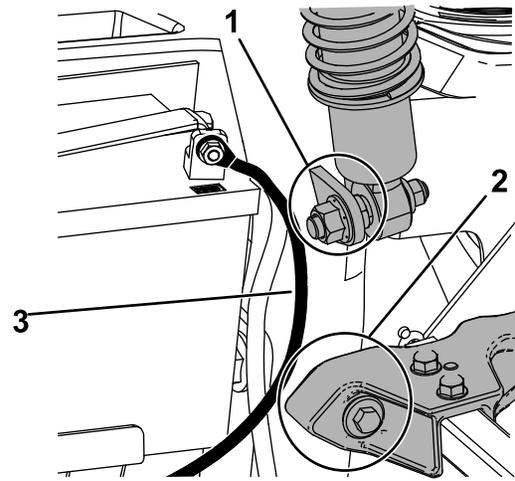

g236732

Figure 2

1. Ensure that the ground cable does not rub against the lower shock mount.
2. Ensure that the ground cable does not rub against the trailing arm.
3. Ground cable

6

Servicing the Battery

No Parts Required

Procedure

Important: Do not run the machine with the battery disconnected; electrical damage may occur to the engine.

1. Charge the battery. Refer to the *Operator's Manual* for instructions.
2. Connect the negative battery cable.

Note: If the positive cable is also disconnected, connect the positive (red) cable to the positive battery terminal first, then the negative (black) cable to the negative battery terminal. Slip the insulator boot over the positive terminal.

Note: For MyRide machines, ensure that the ground cable does not rub against the trailing arm or lower shock mount (Figure 2).

7

Raising the Rollover Protection System (ROPS)

No Parts Required

Procedure

1. Pull both knobs out and rotate them 90 degrees so that they are not engaged (Figure 3).
2. Raise the roll bar to the operating position and rotate the knobs until they move partially into the grooves (Figure 3).

4. Push on the roll bar and ensure that both pins are engaged (Figure 3).

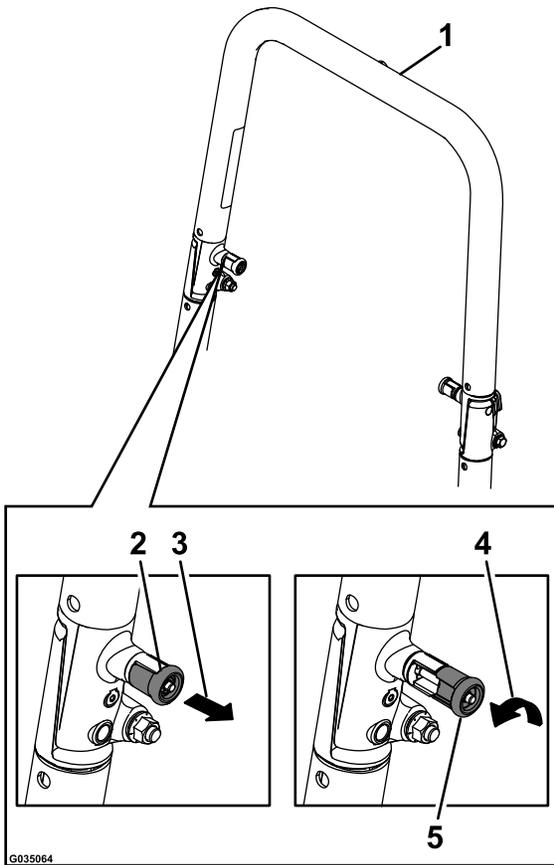


Figure 3

g035064

1. Roll bar in the upright position
 2. ROPS knob in the latched position
 3. Pull the ROPS knob out.
 4. Rotate the ROPS knob 90 degrees.
 5. ROPS knob in the unlatched position
-
3. Raise the roll bar to the full upright position while pushing on the upper roll bar so that the pins snap into position when the holes align with the pins.

8

Checking the Grass Deflector

No Parts Required

Procedure

If there are plastic ties holding the grass deflector up, remove them and lower the deflector into place.

⚠ WARNING

An uncovered discharge opening could allow the machine to throw objects toward you or bystanders, resulting in serious injury or death. Also, contact with the blade could occur.

Never operate the machine without a cover plate, a mulch plate, grass deflector, or bagger installed.

1. Make sure that 1 end of the spring is installed behind the deck edge before installing the bolt as shown in [Figure 4](#).
2. Place the other end of the spring around grass deflector ([Figure 4](#)).

Important: The grass deflector must be free to rotate with downward tension. Lift the deflector up to the full open position and ensure that it rotates freely, without binding into the full down position.

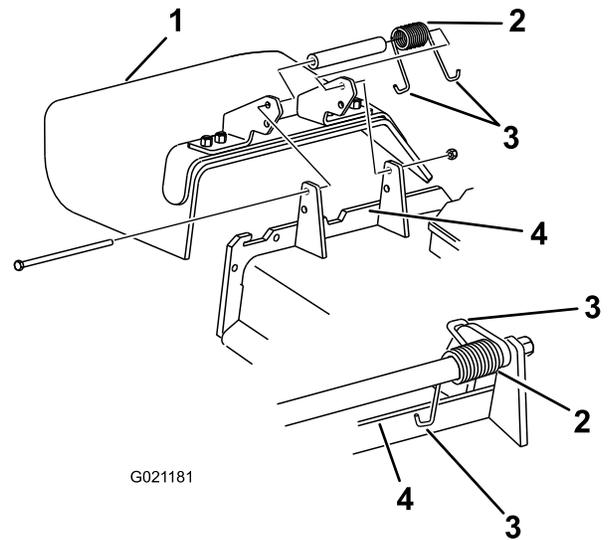


Figure 4

- | | |
|--------------------|------------------|
| 1. Grass deflector | 3. End of spring |
| 2. Spring | 4. Deck edge |

9

Removing the Shipping Strap(s)

No Parts Required

Procedure

Note: This procedure is only for machines with a MyRide™ suspension system.

▲ WARNING

The springs are compressed by the shipping strap(s). When the strap(s) are removed, the seat will raise up quickly by approximately 8.9 cm (3-1/2 inches).

Note: Ensure the strap(s) are removed in the area shown in [Figure 5](#) before operating the machine.

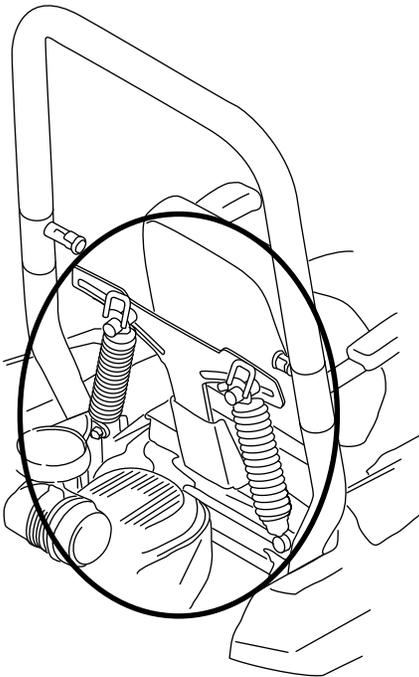


Figure 5

g228153

10

Checking the Machine for Grease

Parts needed for this procedure:

1 tube

No. 2 lithium or molybdenum-based grease (purchase separately)

Procedure

Before you use the machine, check the machine for grease; refer to Lubrication in the *Operator's Manual*.

11

Installing the Right Bumper Rear-Discharge Machines Only

Parts needed for this procedure:

3	Locknut (3/8 inch)
3	Carriage bolt (3/8 x 2-1/4 inches)

Procedure

Mount the side bumpers in the top holes when operating in height of cut higher than 64 mm (2-1/2 inches) and in the center holes when operating in height of cut lower than 64 mm (2-1/2 inches).

1. Raise the mower deck to the 12.7 cm (5 inch) height position (also the transport position).
2. The right bumper is secured to the machine with a cable tie for shipping. Remove and discard the cable ties.

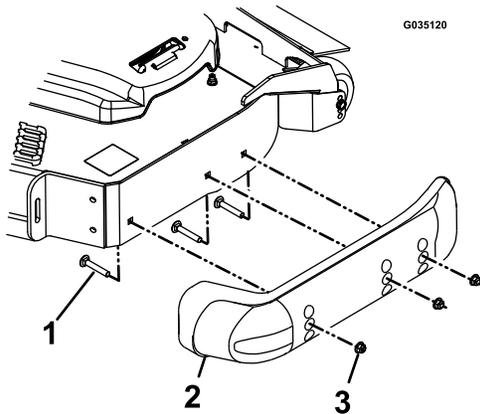


Figure 6

1. Carriage bolt
2. Bumper (center-hole mounting shown)
3. Locknut

3. Move each bumper to the desired position and secure it with 3 carriage bolts (3/8 x 2-1/4 inches) and 3 locknuts (3/8 inch).
4. Torque the bolts to 14 to 16 N·m (10 to 12 ft·lb).

12

Checking the Mower Adjustment

No Parts Required

Procedure

Adjust the side-to-side level and the front-to-rear blade slope. Use the relevant procedures in the *Operator's Manual* to verify that the deck is level, and make any adjustments as needed.

13

Checking the Machine Before Delivery to the Customer (All Machines)

No Parts Required

Procedure

Before delivering the machine to the customer, ensure that you have performed the procedures listed in the following table and initial each when finished. Refer to the *Operator's Manual* for instructions on performing these procedures.

Initial	Check Procedure
	Check the tire pressure.
	Check the level of the mower deck.
	Check the engine-oil level.
	Check the hydraulic-fluid level.
	Check that the ROPS is secure.
	Check the adjustment of the parking brake.
	Ensure that the machine tracks correctly; refer to the <i>Operator's Manual</i> for the adjustment procedure.
	Check the safety interlock system; refer to the <i>Operator's Manual</i> .
	Ensure that the PTO works.
	Check all fasteners that you installed to ensure that they are tight.

When you finish setting up the machine, sign and date in the space provided below:

Signature: _____ Date: _____

14

Delivering the Machine to the Customer (All Machines)

Parts needed for this procedure:

1	Operator's Manual
1	Engine owner's manual (non-Toro engines)
1	Operator-training material
2	Key
1	Registration card

Procedure

At delivery, fill in the model and serial number, complete the items listed in the following table, and initial each when finished.

Model No. _____ Serial No. _____

Dealer Initial	Customer Initial	Check Procedure
		Show the customer where the following features are located and how they function:
		• Fuel tank
		• Oil-fill cap/Oil dipstick
		• Spark plug(s)
		• Engine-oil filter
		• Engine-oil drain
		• Fuel gauge, valve, and hose
		• Air filter
		• Hydraulic-fluid reservoir
		• Hydraulic filter
		• Battery
		• Ignition switch
		• Throttle lever
		• Choke (if applicable)
		• Power takeoff switch (PTO)
		• Motion-control levers
		• Parking brake
		• Height of cut
		• Lift-assist lever (if applicable)
		• Adjustable seat
		• Hydraulic-bypass valves
		• Rollover Protection System (ROPS)

Dealer Initial	Customer Initial	Check Procedure
		Refer to the <i>Operator's Manual</i> to point out safety procedures, operation, and maintenance procedures.
		Review the warranty statement as shown in the <i>Operator's Manual</i> .
		Describe the post-sale service procedures for your store.
		Assist the customer in filling out and mailing the registration card or register online at www.Toro.com .
		Make sure that the customer receives the <i>Operator's Manual</i> , engine owner's manual (non-Toro engines), <i>Set Up Instructions</i> , and operator training material.
		Make sure the customer knows that the <i>Parts Catalog</i> is available at www.Toro.com .
		Assist the customer in loading the machine.

Note: When you, the dealer representative, have finished delivering the machine to the customer, sign and date in the space provide below and keep a copy of this page for dealer records. Also, the dealer must remind the customer to use a full-width trailer ramp to load the machine.

Signature: _____ **Date:** _____

Signature: _____ **Date:** _____

Notes:



Count on it.