



Proline
**52" Side Discharge
Cutting Unit**

Model No. 30151 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck And Spindle Assembly	1	Covers And Gage Wheel Assembly	4
Spindle Housing Assembly No. 54-7781	2	Carrier Frame Assembly	5
Spindle Housing Assembly No. 27-0870	3	Decal Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFV	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSR	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

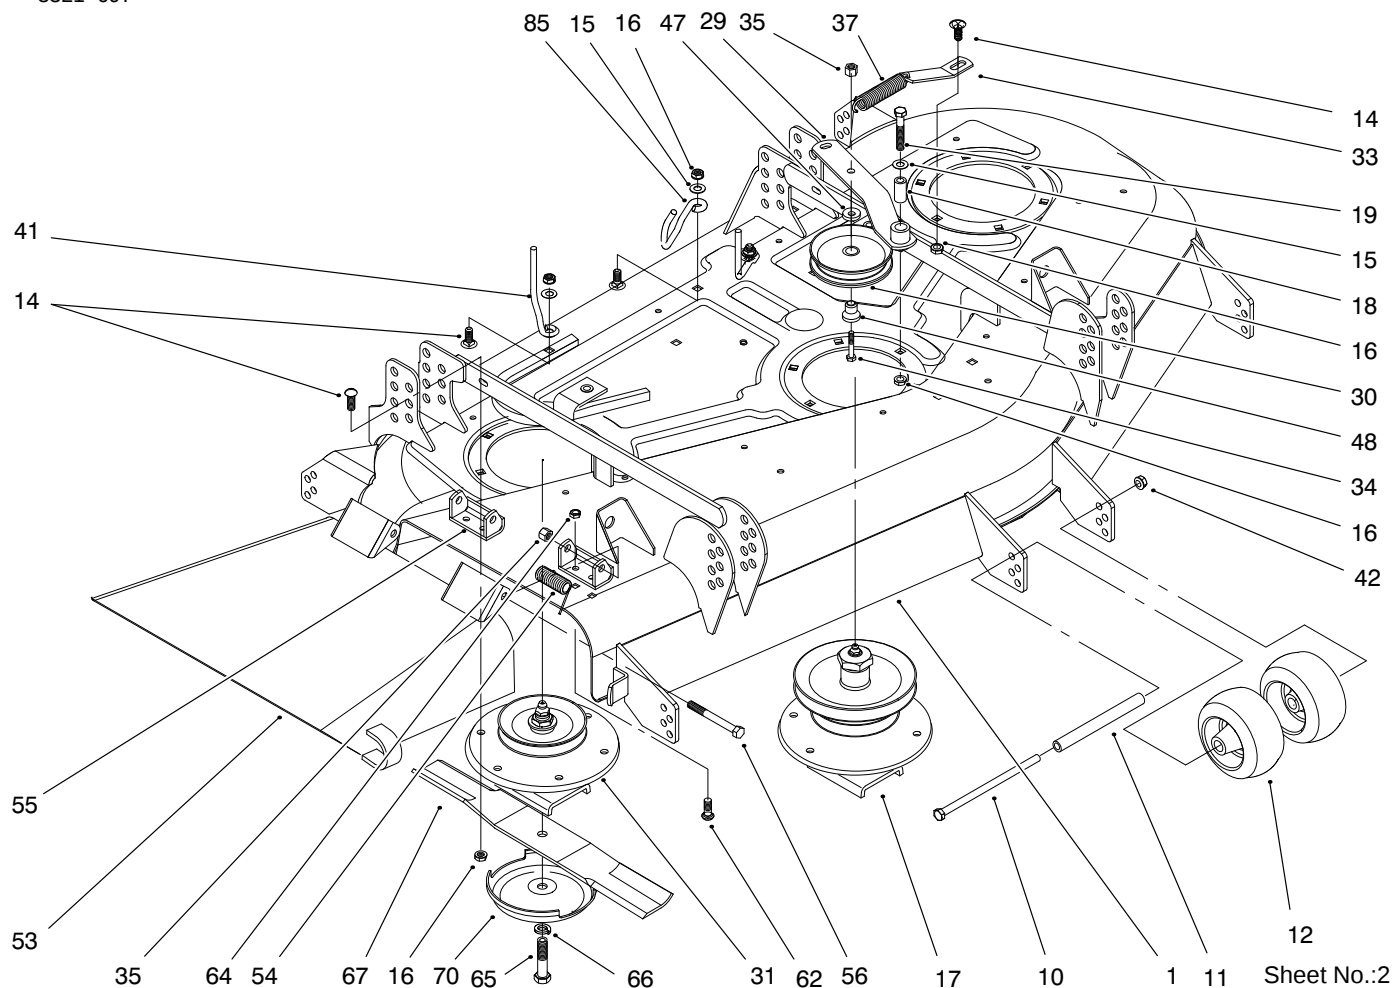

Deck And Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8500	1	Deck ASM w/Decals
10	323-28	1	Screw-HH
11	98-5967	1	Spacer-Wheel
12	68-2730	2	Wheel-Gage
14	3231-22	20	Bolt-CARR
15	3256-24	8	Washer-Flat
16	32128-21	21	Nut-HHF
17	54-7781	1	Housing Spindle ASM
18	51-3640	1	Sleeve-Pivot
19	323-11	1	Screw
29	55-7640-03	1	Idler Arm
30	65-5940	1	Pulley-Idler
31	27-0870-03	2	Spindle Housing ASM
33	55-7650	1	Plate-Spring
34	3211-8	1	Screw-HH
35	3296-5	3	Nut-Lock
37	51-3650	1	Spring-Extension
41	52-4780	2	Rod-Belt
42	3296-39	1	Nut-Lock
47	7-0081	1	Washer-Special
48	65-5950	1	Bushing-Pulley
53	13-3899	1	Deflector-Grass w/Decal
54	40-6230	2	Spring-Torsion
55	29-5590-03	2	Bracket-Pivot
56	3211-15	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
62	3230-18	4	Screw-CARR
64	32152-1	4	Nut-Lock
65	44-2200	3	Bolt-Blade
66	3253-27	3	Washer-Lock
67	27-0990	3	Blade
70	72-9361	3	Anti-Scalp Cup
85	55-7620	1	Guide-Belt

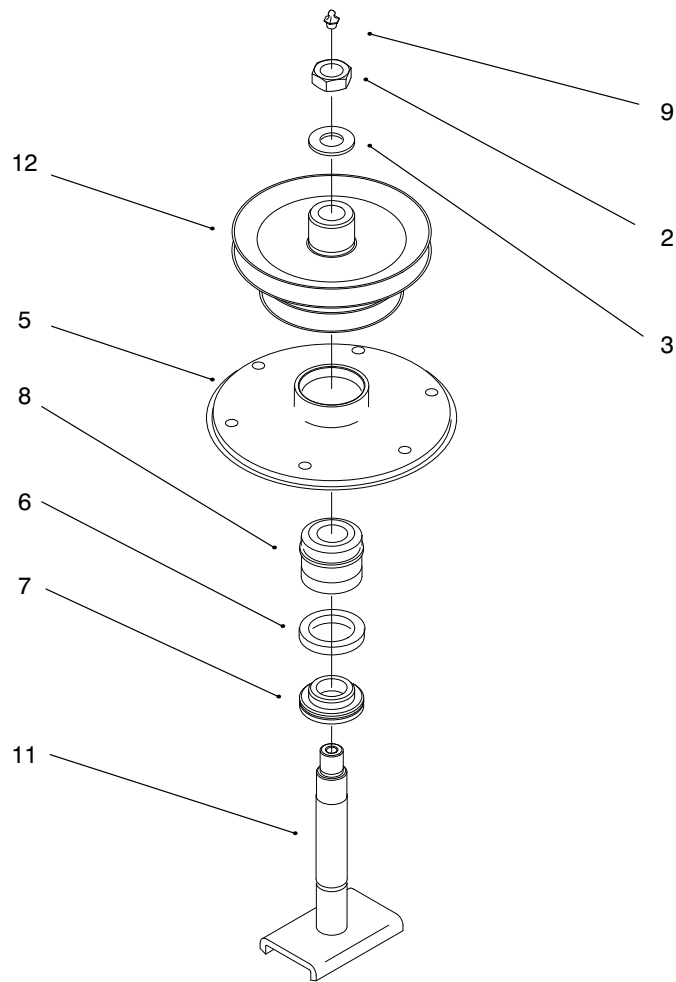

c-2794

Spindle Housing Assembly No. 54-7781


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	32146-20	1	Nut-Lock				
3	7-4150	1	Washer				
5	61-4160	1	Spindle-52"				
6	253-139	2	Seal-Oil				
7	27-0950	1	Spacer-Bearing				
8	46-8530	1	Bearing ASM				
9	302-2	1	Fitting-Grease				
11	51-3551	1	Spindle-Shaft				
12	55-7610	1	Pulley & Hub				

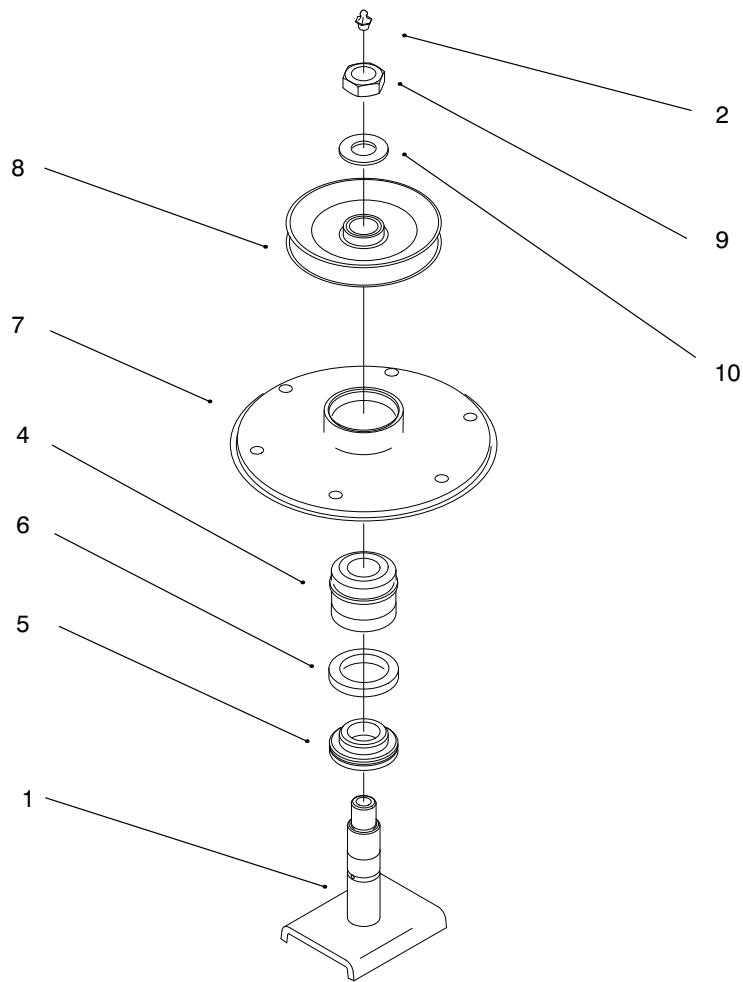

c-2795

Spindle Housing Assembly No. 27-0870

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	27-0920	2	Shaft-Spindle				
2	302-2	2	Fitting-Grease				
4	46-8530	2	Bearing ASM				
5	27-0950	2	Spacer-Bearing				
6	253-139	4	Seal-Oil				
7	61-4160	2	Spindle-52"				
8	27-0970	2	Pulley & Hub				
9	32146-20	2	Nut Lock-Jam				
10	7-4150	2	Washer				

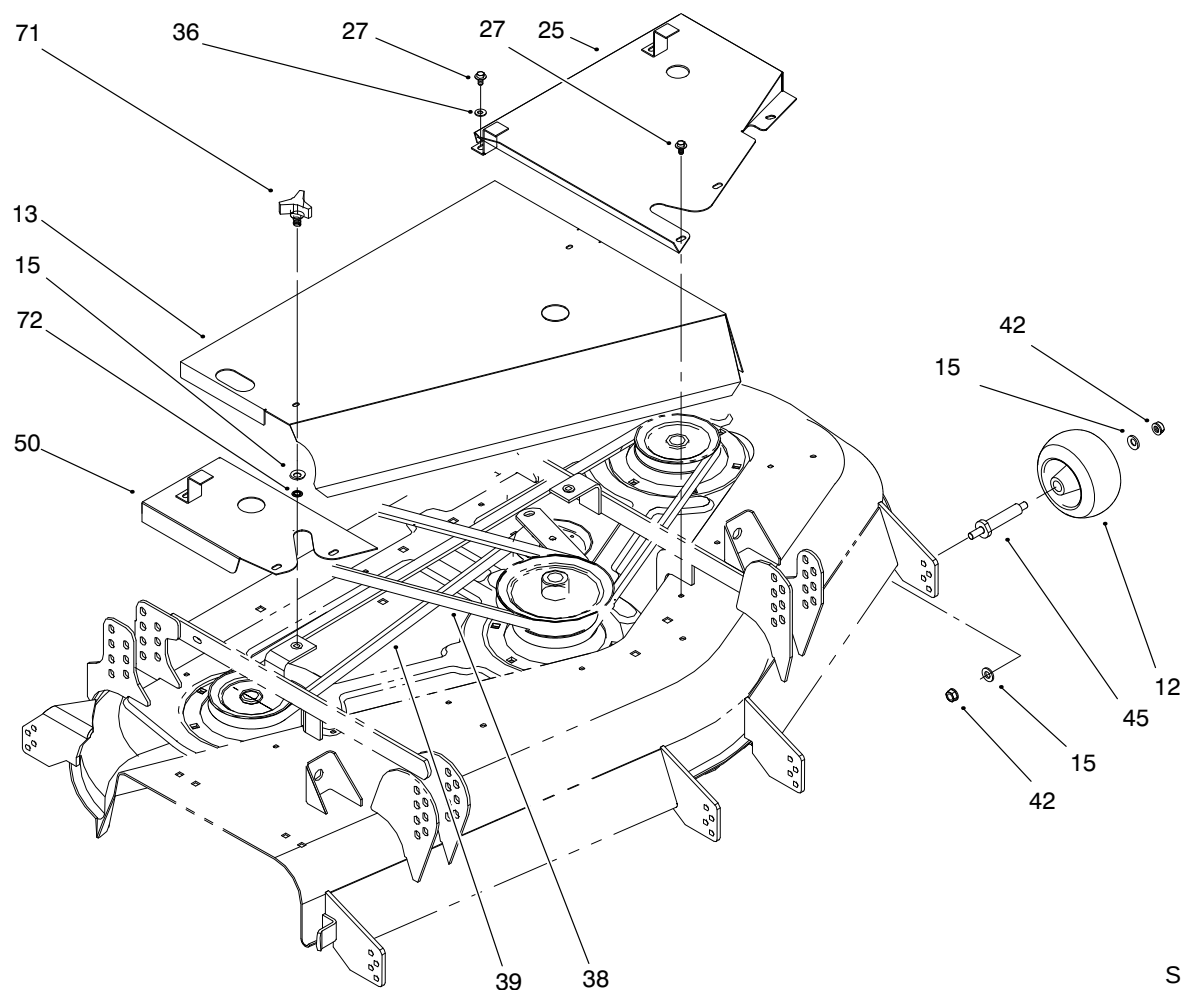


Sheet No.:3

Covers And Gage Wheel Assembly

Ref. No.	Part No.	Qty.	Description
12	68-2730	4	Wheel-Gage
13	82-5410	1	Cover-Center
15	3256-24	10	Washer-Flat
25	51-3910	1	Cover-LH
27	46-8560	7	Screw-HHF
36	3256-22	1	Washer-Flat
38	99-2843	1	"v" Belt-Drive
39	27-1160	1	"v" Belt Deck
42	3296-39	8	Nut-Lock
45	99-2842	4	Spacer-Wheel
50	51-3890	1	Cover RH
71	62-6520	2	Knob
72	32151-72	2	Ring-Retaining

Ref. No.	Part No.	Qty.	Description

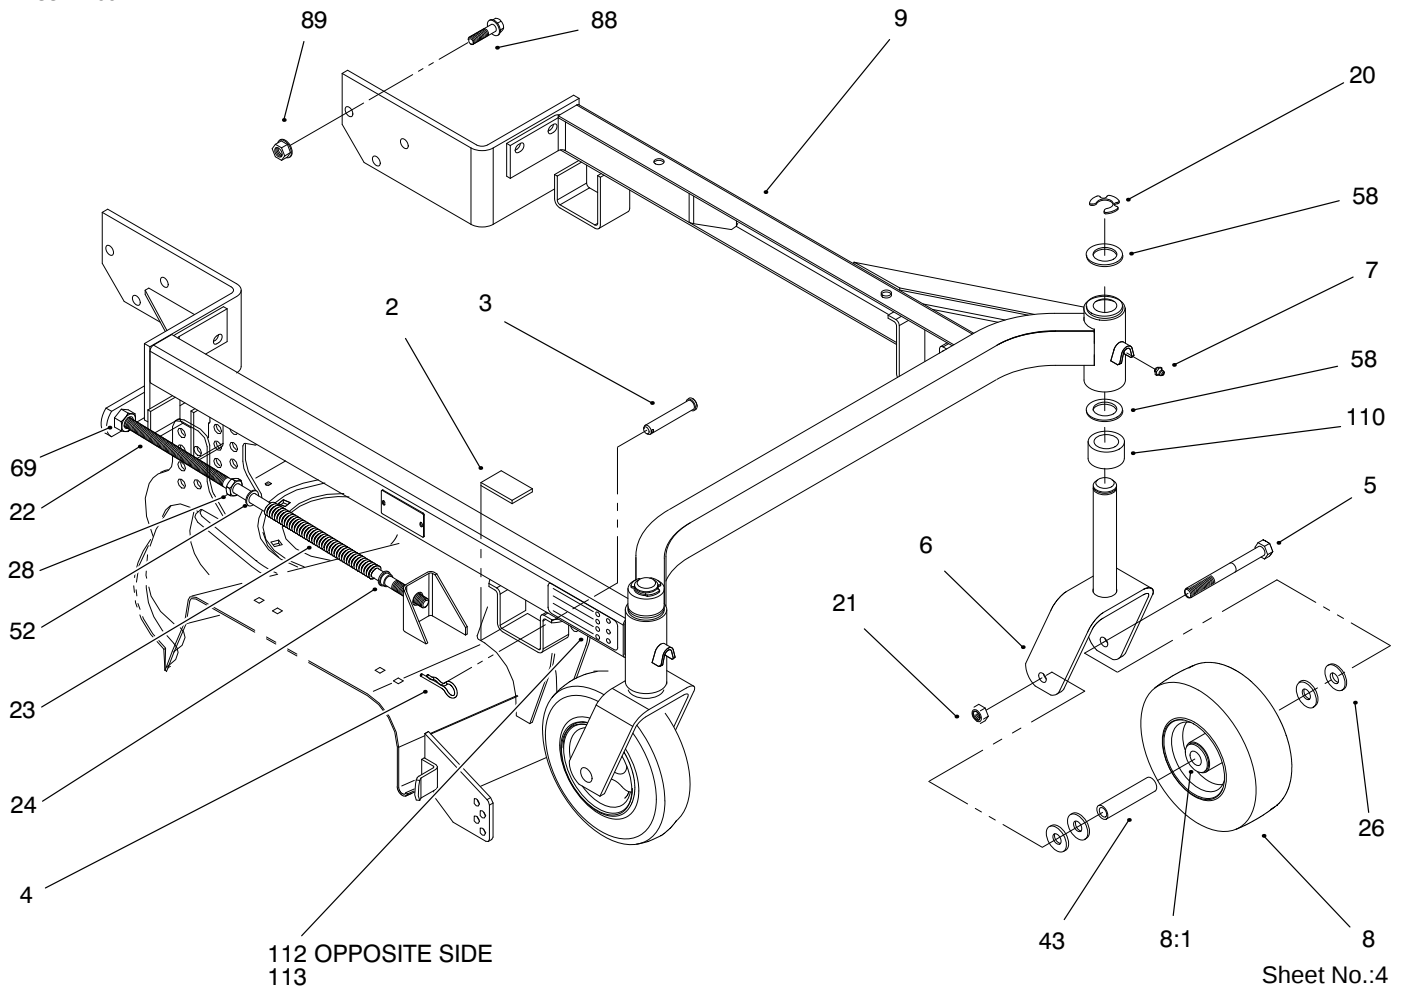


Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
2	74-0350	4	Cushion-Rubber
3	283-55	4	Pin-Clevis
4	3290-355	4	Pin-Hair
5	325-19	2	Screw-HH
6	98-2857	2	Castor Fork
7	302-5	2	Fitting-Grease
8	98-2859	2	Wheel & Tire ASM
8:1	62-5580	4	Bearing-Outside
*8:2	62-5570	2	Bearing-Roller
*8:3	232-27	2	Valve Stem
*8:4	302-11	2	Fitting-Grease
9	99-2847	1	52" Carrier Frame
20	32151-91	2	Ring-Retaining
21	32153-5	2	Nut-Lock
22	74-0310	2	Shaft-Adjusting
23	74-0290	2	Spring-Compression
24	256-156	2	Bushing-Flange
26	3256-6	8	Washer-Flat
28	3218-5	4	Nut-Jam
43	68-8980	2	Bushing-Spanner
52	41-8440	2	Spacer-Hardened
58	3-6781	8	Washer-Thrust
69	3296-45	2	Nut
88	3234-6	6	Screw-Flange
89	32128-23	6	Nut-Lock, Flange
110	93-1167	2	Spacer-Castor

Ref. No.	Part No.	Qty.	Description
112	85-7450	1	Decal-HOC LH
113	85-7460	1	Decal-HOC RH

* Not Illustrated

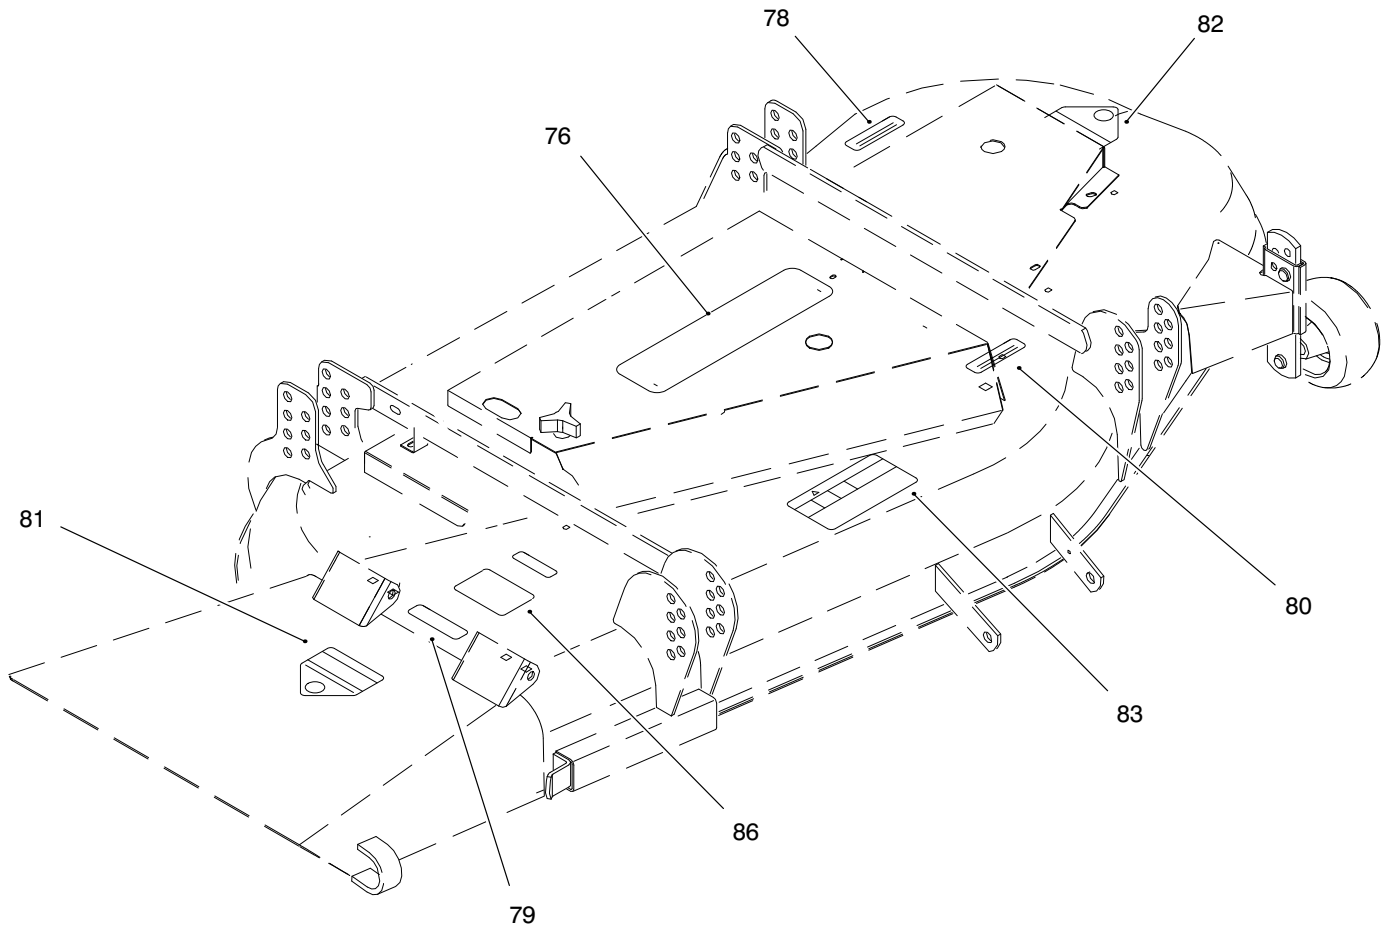

Sheet No.:5

Decal Assembly

Ref. No.	Part No.	Qty.	Description
76	98-5953	1	Decal-Sfs
78	68-8340	1	Decal-Torque
79	66-6380	1	Decal-Danger
80	67-5360	1	Decal-Danger
81	93-1122	1	Decal-Danger
82	43-8480	1	Decal-Danger
83	66-1340	1	Decal-Discharge
86	98-3269	1	Decal-Made In USA

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-6781	5	58	8	Washer-Thrust
7-0081	1	47	1	Washer-Special
7-4150	2	3	1	Washer
7-4150	3	10	2	Washer
13-3899	1	53	1	Deflector Asm w/Decal
27-0870-03	1	31	2	Spindle Housing ASM
27-0920	3	1	2	Shaft-Spindle
27-0950	2	7	1	Spacer-Bearing
27-0950	3	5	2	Spacer-Bearing
27-0970	3	8	2	Pulley & Hub
27-0990	1	67	3	Blade
27-1160	4	39	1	"v" Belt Deck
29-5590-03	1	55	2	Bracket-Pivot
40-6230	1	54	2	Spring-Torsion
41-8440	5	52	2	Spacer-Hardened
43-8480	6	82	1	Decal-Danger
44-2200	1	65	3	Bolt-Blade
46-8530	2	8	1	Bearing ASM
46-8530	3	4	2	Bearing ASM
46-8560	4	27	7	Screw-HHF
51-3551	2	11	1	Spindle-Shaft
51-3640	1	18	1	Sleeve-Pivot
51-3650	1	37	1	Spring-Extension
51-3890	4	50	1	Cover RH
51-3910	4	25	1	Cover-LH
52-4780	1	41	2	Rod-Belt
54-7781	1	17	1	Housing Spindle ASM
55-7610	2	12	1	Pulley & Hub
55-7620	1	85	1	Guide-Belt
55-7640-03	1	29	1	Idler Arm
55-7650	1	33	1	Plate-Spring
61-4160	2	5	1	Spindle-52"
61-4160	3	7	2	Spindle-52"
62-5570	5	8:2	2	Bearing-Roller
62-5580	5	8:1	4	Bearing-Outside
62-6520	4	71	2	Knob
65-5940	1	30	1	Pulley-Idler
65-5950	1	48	1	Bushing-Pulley
66-1340	6	83	1	Decal-Discharge
66-6380	6	79	1	Decal-Danger
67-5360	6	80	1	Decal-Danger
68-2730	1	12	2	Wheel-Gage
68-2730	4	12	4	Wheel-Gage
68-8340	6	78	1	Decal-Torque
68-8980	5	43	2	Bushing-Spanner
72-9361	1	70	3	Anti-Scalp Cup
74-0290	5	23	2	Spring-Compression
74-0310	5	22	2	Shaft-Adjusting
74-0350	5	2	4	Cushion-Rubber
82-5410	4	13	1	Cover-Center
85-7450	5	112	1	Decal-HOC LH
85-7460	5	113	1	Decal-HOC RH
93-1122	6	81	1	Decal-Danger
93-1167	5	110	2	Spacer-Castor
98-2857	5	6	2	Castor Fork ASM
98-2859	5	8	2	Wheel & Tire ASM
98-3269	6	86	1	Decal-Made In USA
98-5953	6	76	1	Decal-Sfs
98-5967	1	11	1	Spacer-Wheel
99-2842	4	45	4	Spacer-Wheel
99-2843	4	38	1	"v" Belt-Drive
99-2847	5	9	1	52" Carrier Frame

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
99-8500	1	1	1	Deck Asm w/Decals
232-27	5	8:3	2	Valve Stem
253-139	2	6	2	Seal-Oil
253-139	3	6	4	Seal-Oil
256-156	5	24	2	Bushing-Flange
283-55	5	3	4	Pin-Clevis
302-2	2	9	1	Fitting-Grease
302-2	3	2	2	Fitting-Grease
302-5	5	7	2	Fitting-Grease
302-11	5	8:4	2	Fitting-Grease
323-11	1	19	1	Screw
323-28	1	10	1	Screw-HH
325-19	5	5	2	Screw-HH
3211-8	1	34	1	Screw-HH
3211-15	1	56	2	Screw-HH
3218-5	5	28	4	Nut-Jam
3230-18	1	62	4	Screw-CARR
3231-22	1	14	20	Bolt-CARR
3234-6	5	88	6	Screw-hf
3253-27	1	66	3	Washer-Lock
3256-6	5	26	8	Washer-Flat
3256-22	4	36	1	Washer-Flat
3256-24	1	15	8	Washer-Flat
3256-24	4	15	10	Washer-Flat
3290-355	5	4	4	Pin-Hair
3296-5	1	35	3	Nut-Lock
3296-39	1	42	1	Nut-Lock
3296-39	4	42	8	Nut-Lock
3296-45	5	69	2	Nut
32128-21	1	16	21	Nut-HHF
32128-23	5	89	6	Nut-Lock
32146-20	2	2	1	Nut-Lock
32146-20	3	9	2	Nut-Lock
32151-72	4	72	2	Ring-Retaining
32151-91	5	20	2	Ring-Retaining
32152-1	1	64	4	Nut-Lock
32153-5	5	21	2	Nut-Lock

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.