



**Count on it.**

**Parts Catalog**

**VR-2650 Rammer Compactor**

Model No. 68034—Serial No. 40200000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame, Handle and Fuel Tank Assembly ..... 4  
Engine and Air Filter Assembly ..... 6  
Lower Unit Assembly ..... 8  
Rammer Assembly ..... 10

# Frame, Handle and Fuel Tank Assembly

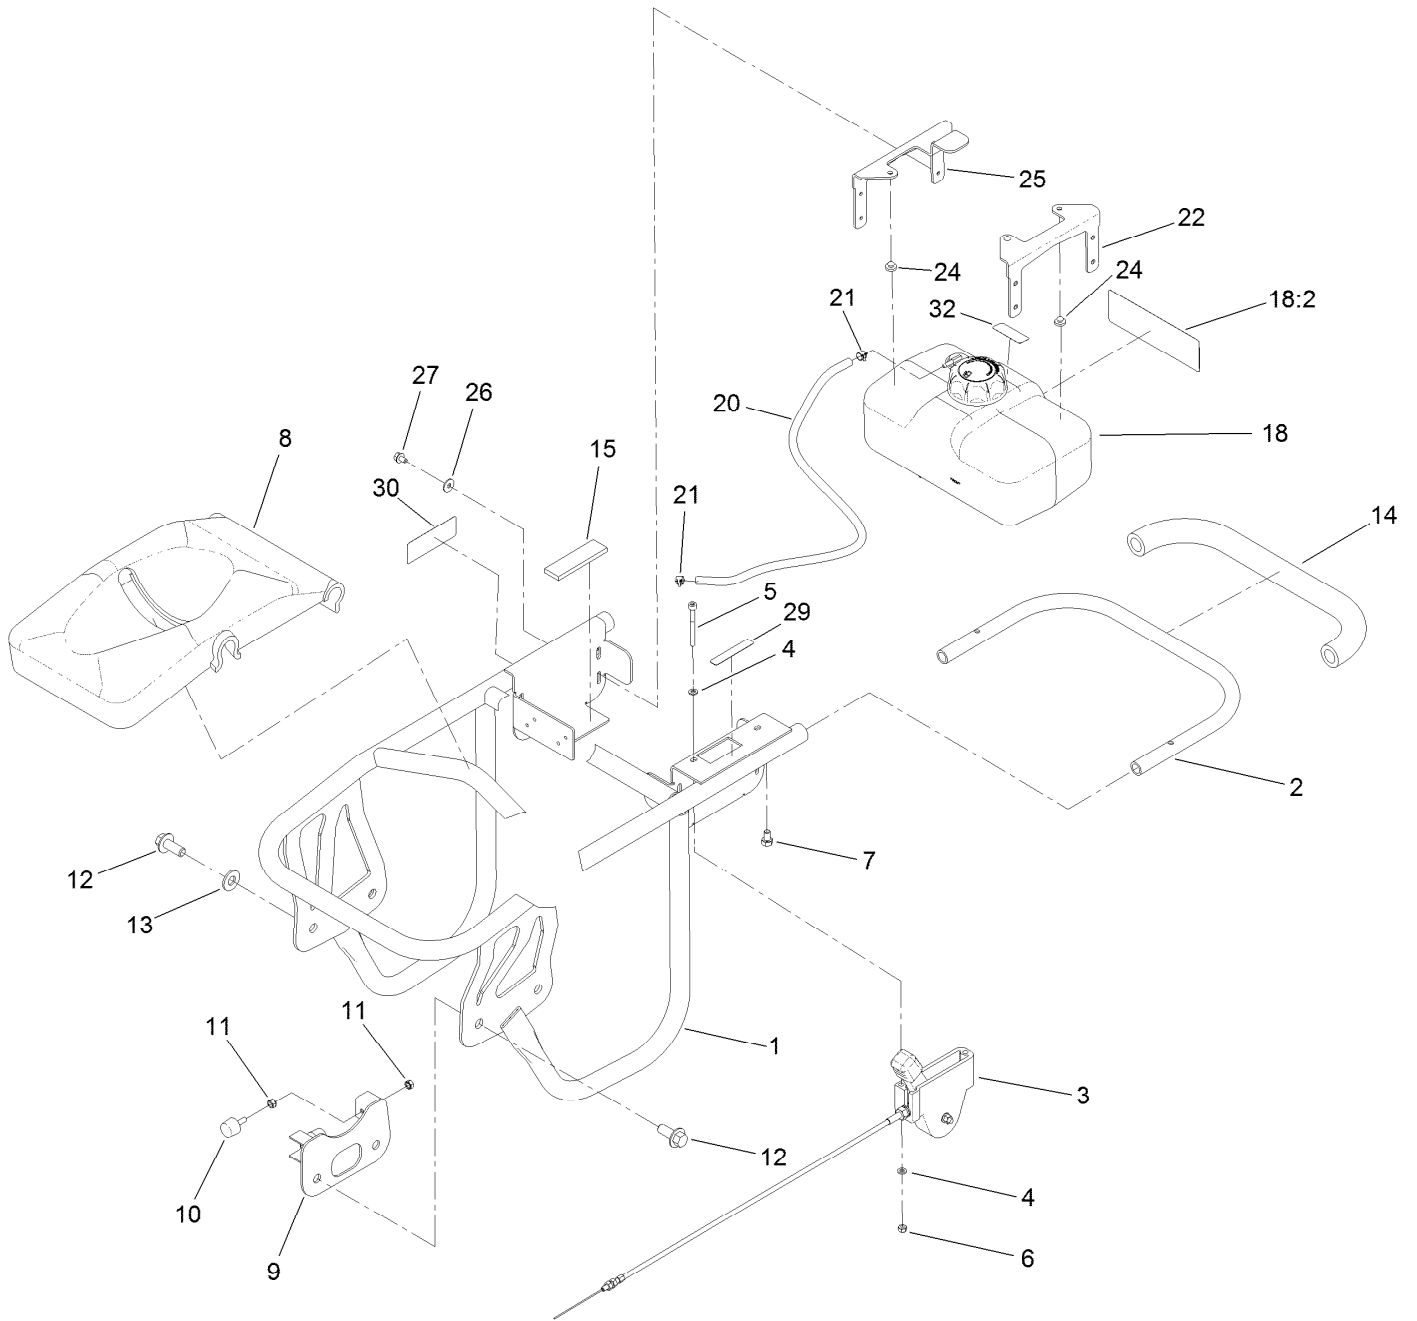

## Frame, Handle and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-2830	1	Handle ASM	15	125-6239	2	Pad-Tank, Fuel
2	127-5596-03	1	Handle-Rammer	18	127-7574	1	1 Gallon Fuel Tank ASM
3	125-8669	1	Throttle Lever ASM	18:2	125-8191	1	Decal-Warning
4	33093-00	4	Washer-Flat	20	120-5022	1	Hose-Fuel
5	ST80940	2	Screw-HSH	21	2412-80	2	Clamp-Hose
6	115-7373	2	Nut-Lock	22	ST66668-03	1	Bracket-Top, Fuel Tank
7	ST80586	2	Screw-HWH	24	ST47292	4	Bumper-Rubber
8	125-4803	1	Cover-Engine	25	127-7556-03	1	Guard-Fuel Tank, Top
9	ST39424-03	1	Stopper	26	ST81181	8	Washer-Flat
10	ST39427	2	Mount-Shock	27	81-1280	8	Screw-HHF
11	98-5845	4	Nut-Hex	29	125-8182	1	Decal-Throttle
12	33106-020	4	Screw-HHF	30	133-5619	1	Decal-Arrester, Spark
13	29-8910	2	Washer	32	130-8322	1	Decal-Warning, Ethanol
14	ST39483	1	Grip-Cushion, Handle				




## Engine and Air Filter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-4818	1	Engine-Honda, Gx101 ●	23	ST81188	2	Screw-HSBH
2	ST32525	1	Key-Woodruff	24	ST32516	1	Gasket-Prefilter
3	ST30291	1	Clutch-Friction	25	ST32517	1	Filter-Air, Prefilter
4	ST32524	1	Nut-Hex Flange	26	ST32518	1	Cover-Air Filter
5	33104-030	8	Screw-HHF	27	ST32515	1	Tube-Air
7	127-7548	1	Bracket-Fuel Valve	28	ST32519	2	Clamp-Worm
8	125-4966	1	Hang Tag-Run, Stop	29	ST32526	2	Screw-PPH
9	ST58582	1	Fuel Shut Off Valve ASM	30	127-7537	1	Fitting-90 DEG
10	2412-87	1	Clamp-Cable	31	99-9415	1	Hose-Fuel
11	33093-00	1	Washer-Flat	32	ST31231	1	Filter-Fuel
12	43-5930	1	Washer-Lock, Spring	33	119-8561	1	Hose-Fuel
13	ST81354	1	Screw-HH	34	ST50255-03	2	Shim-Engine (16GA)
15	46-0430	2	Nut-Lock	35	ST50256-03	2	Shim-Engine (11GA)
16	119-7444	2	Screw-HSBH	36	127-1697-03	1	Bracket-Support, LH
17	33113-016	1	Screw-HH	37	ST50195-03	1	Bracket-Support, RH
19	2412-80	2	Clamp-Hose	40	109-0297	1	Hose-Fuel
20	2412-98	4	Clamp-Hose	41	33104-020	4	Screw-HHF
21	ST50187-03	1	Base-Prefilter	42	1-303335	1	Tie-Plastic
22	ST80812	2	Washer-Lock				

● Obtain parts from [www.honda-engines.com](http://www.honda-engines.com)

# Lower Unit Assembly

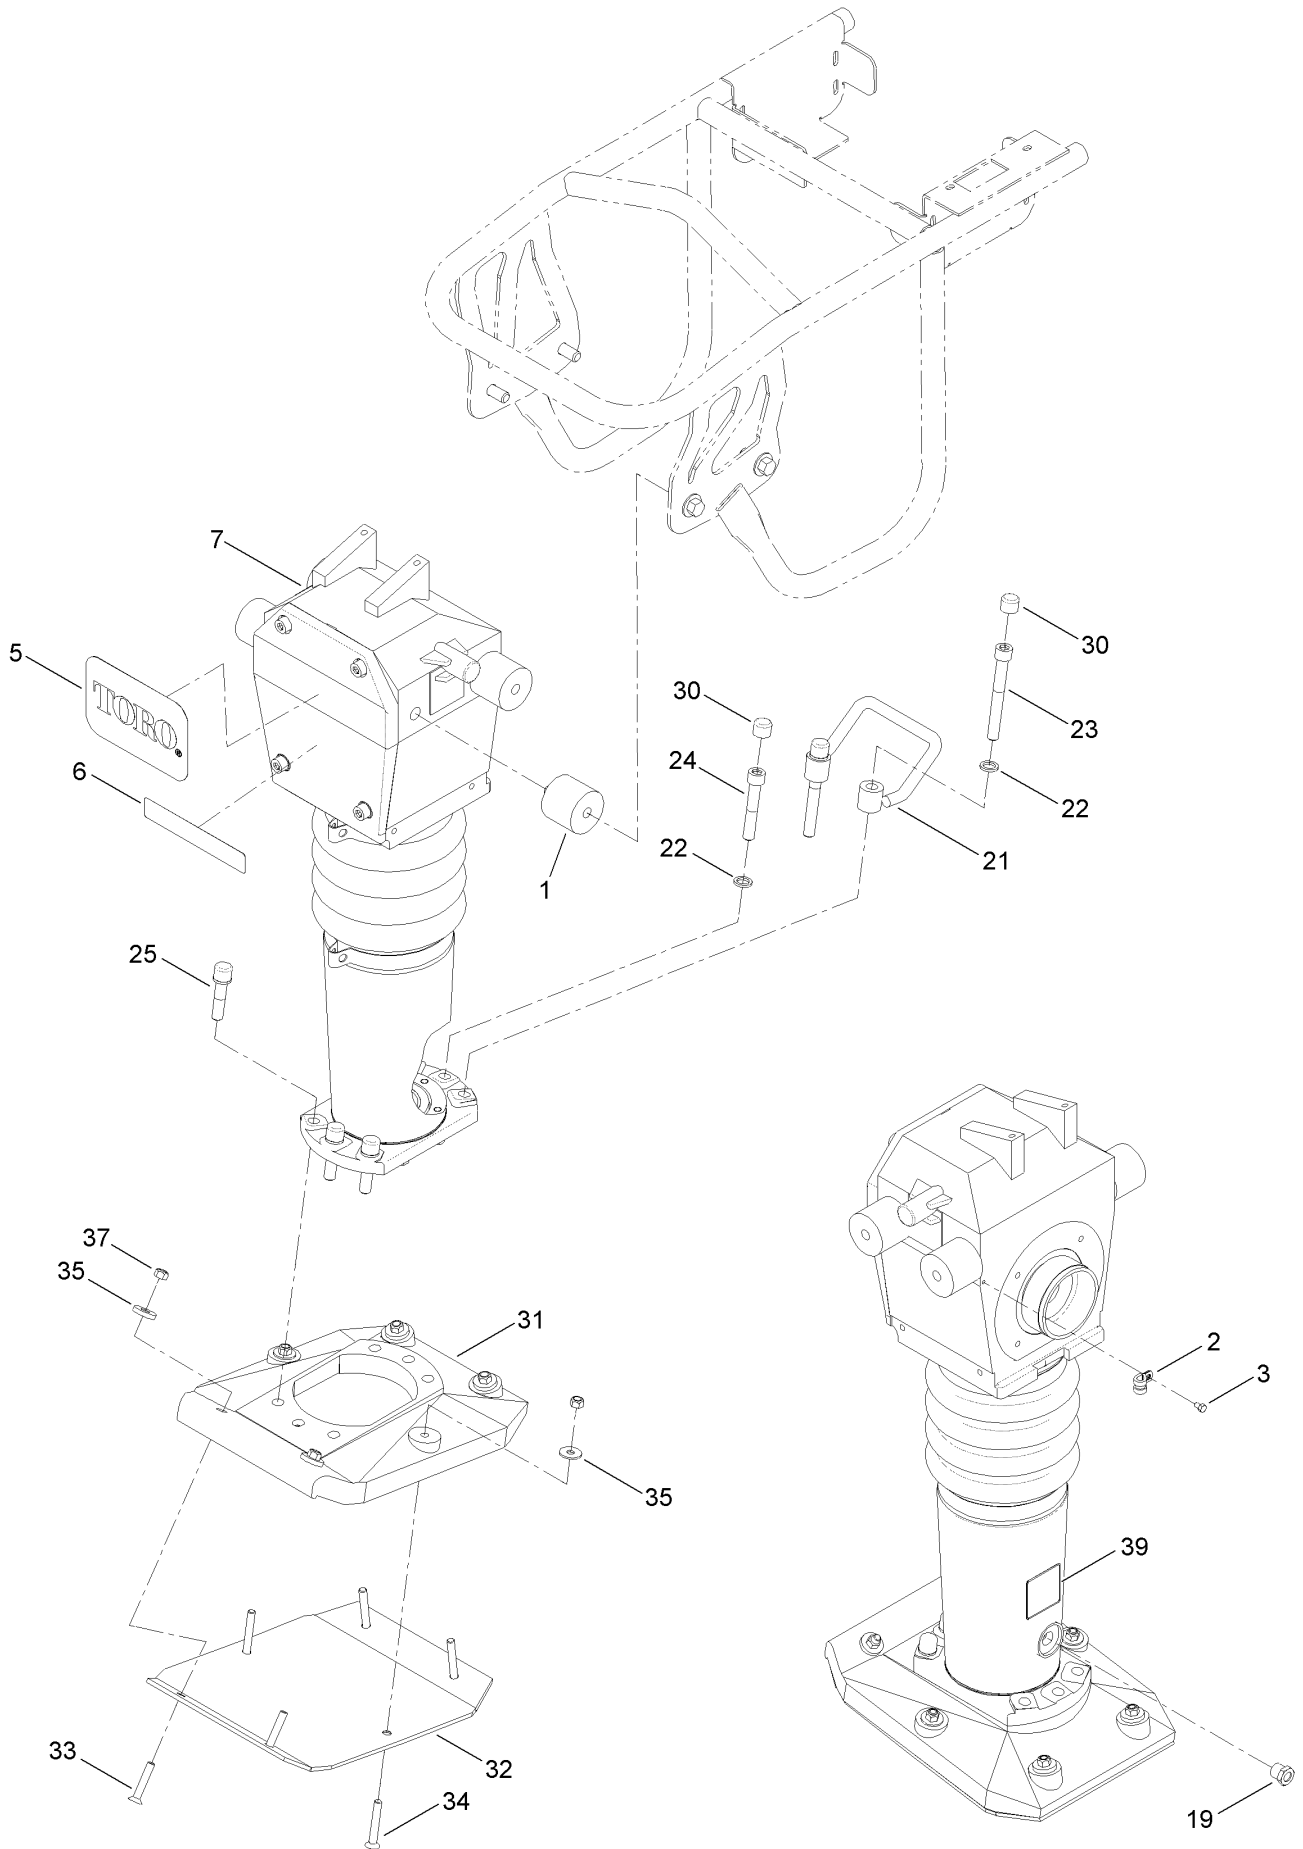




## Lower Unit Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST39425	4	Mount-Shock	24	ST80945	1	Screw-HSH
2	ST39509	1	Clamp	25	ST80822	3	Screw-HSH
3	ST81043	1	Screw-HH	30	ST80765	6	Cap-Plastic
5	127-7590	1	Decal	31	ST39371	1	Shoe-Plastic, Light
6	127-7591	1	Decal	32	ST39400-03	1	Plate-Shoe
7		1	Rammer ASM ●	33	ST80949	2	Screw
19	ST34096	1	Plug-Sight, Oil	34	ST80948	4	Screw-HSFH
21	ST39405-03	1	Grip-Lifting	35	ST80813	6	Washer-Flat
22	ST81196	6	Washer-Lock	37	33024-00	6	Nut-Lock, NI
23	ST80943	2	Screw-HSH	39	127-7595	1	Decal-Oil Level

● Not serviced separately

# Rammer Assembly

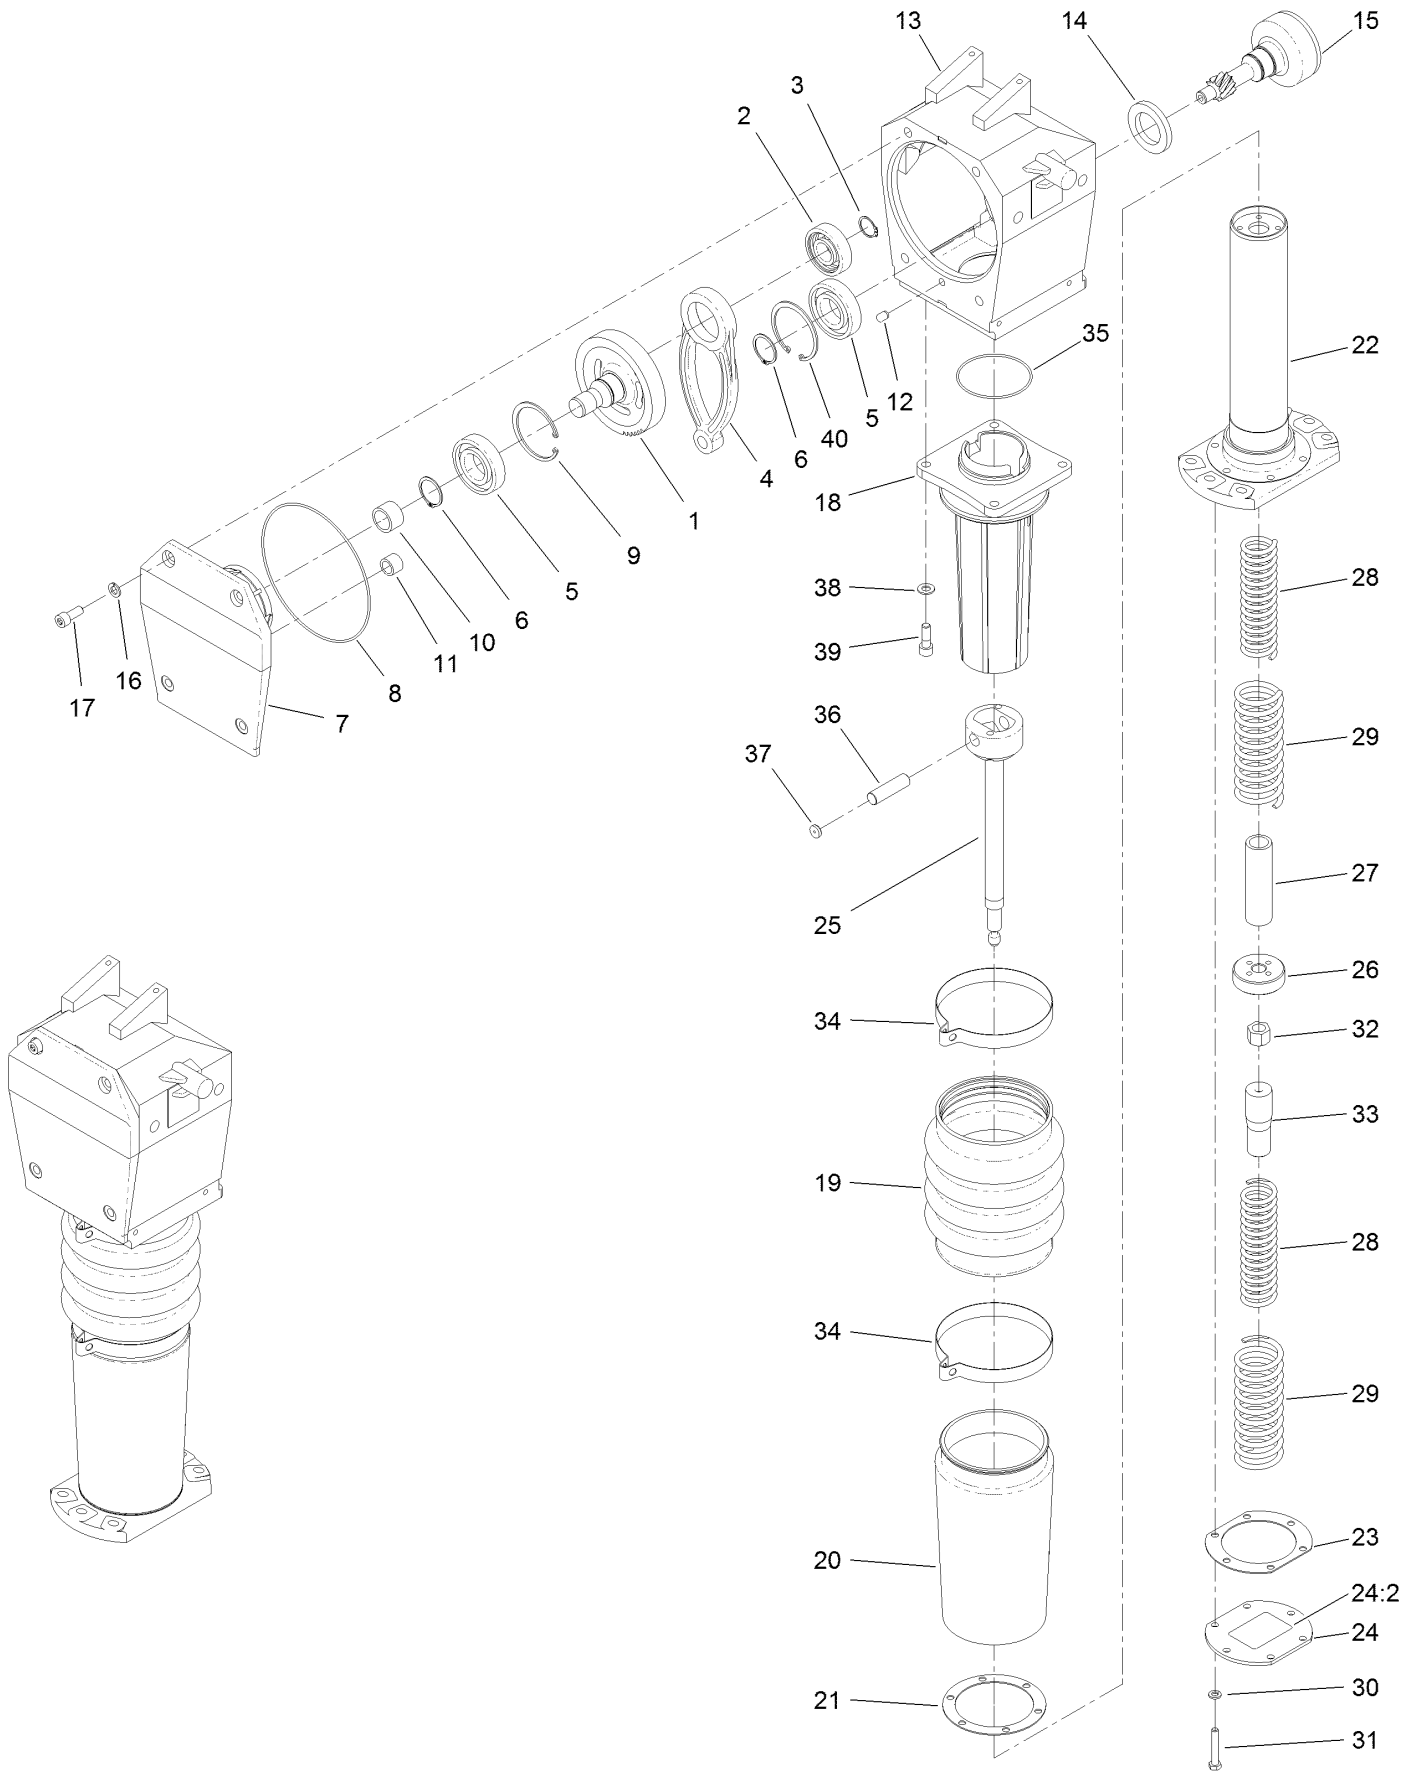

## Rammer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST39379	1	Gear-Helical	22	125-8668	1	Housing-Spring
2	ST39429	1	Bearing-Ball	23	ST39390	1	Gasket-Cover, Spring
3	ST39432	1	Ring-External	24	127-2831	1	Bottom Spring Cover ASM
4	ST50302	1	Rod-Connecting	24:2	125-8181	1	Decal-Warning, Spring
5	ST39428	2	Bearing-Ball	25	ST39381	1	Rod-Piston
6	32120-84	2	Ring-Snap, External	26	ST39389	1	Puck-Piston
7	ST50294	1	Cover-Front	27	ST39384	1	Snubber-Axial, Top
8	ST39437	1	O-Ring	28	ST39382	2	Spring-Compression, Inner
9	ST50539	1	Ring-Internal	29	ST39383	2	Spring-Compression, Outer
10	ST39430	1	Bearing-Needle	30	ST80812	6	Washer-Lock
11	ST39431	1	Bearing-Needle	31	33114-050	6	Screw-HH
12	ST80543	1	Pin	32	33028-00	1	Nut-Lock, NI
13	ST50193	1	Gearcase	33	ST39385	1	Snubber-Axial, Lower
14	ST39435	1	Seal-Shaft	34	ST39439	2	Clamp-Boot, Stomper
15	ST50192	1	Pinion	35	ST39438	1	O-Ring
16	42-9600	4	Washer-Lock	36	ST39436	1	Pin
17	ST80803	4	Screw-HSH	37	ST39401	2	Button-Pin, Captivator
18	ST39374	1	Guide-Tube	38	33095-00	4	Washer-Flat
19	ST39372	1	Boot-Awack	39	ST80872	4	Screw-HSH
20	ST39377	1	Cover-Housing, Spring	40	ST39434	1	Ring-Internal
21	ST39399	1	Gasket-Housing, Spring Cover				



**Count on it.**