


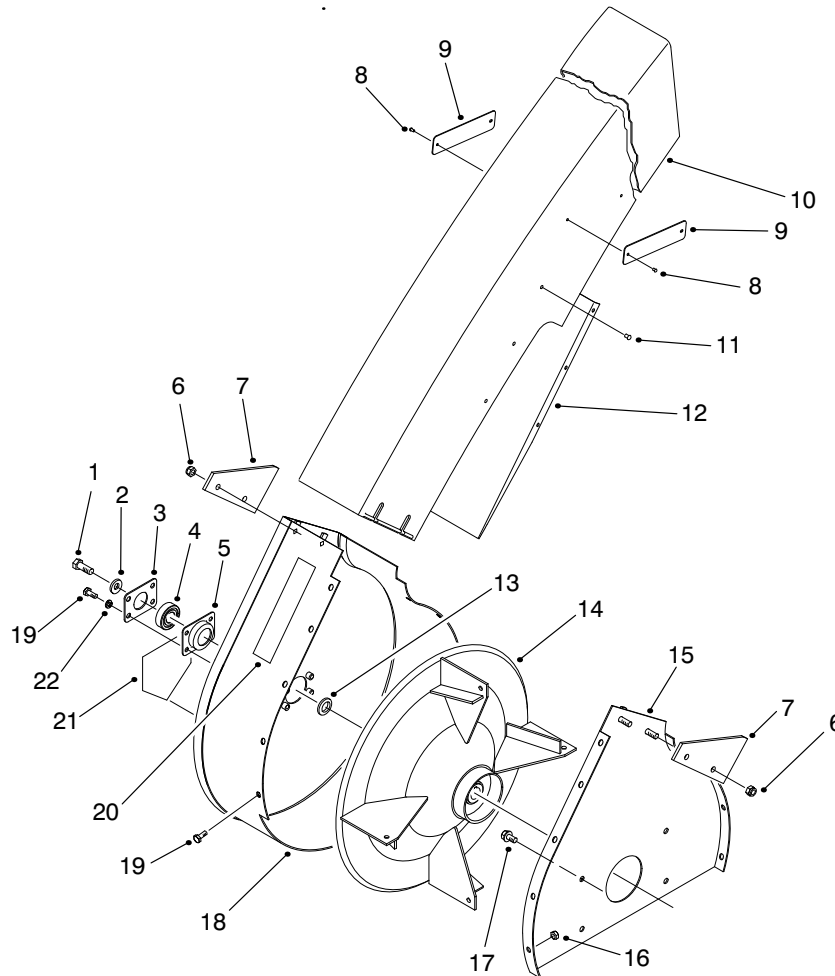


MODEL NO. 30506-90001 & UP

**PARTS
CATALOG**
62" BLOWER KIT
For Groundsmaster® 200 Series


T-3138

BLOWER HOUSING & MOUNT

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3235-22	Screw-HH	1	13	63-9710	Spacer-Bearing	1
2	43-0940	Spacer-Hub, Blower	1	14	56-4780	Impeller	1
3	63-9700	Plate-Cover	1	15	77-5820	Plate-Mounting	1
4	38-7820	Bearing-Ball	1	16	3296-42	Nut-Lock	9
5	37-6730	Cup-Bearing	1	17	3234-14	Screw-HFH	4
6	3296-29	Nut-Lock	8	18	63-9540	Asm-Housing, Blower	1
7	43-0960	Bracket-Chute	2	19	321-3	Screw-HH	13
8	3290-271	Rivet-Pop	4	20	82-5510	Decal-Warning	1
9	80-4670	Plate-Warning	2	21	54-9220	Decal-Danger	1
10	80-3720	Asm-Chute-62" Blower (Incl. Ref. #8-12)	1	22	3253-3	Washer-Lock	4
11	3290-409	Rivet-Pop	6	*	93-7301	Decal	1
12	77-6730	Deflector-Chute	1	*	93-7316	Decal	1

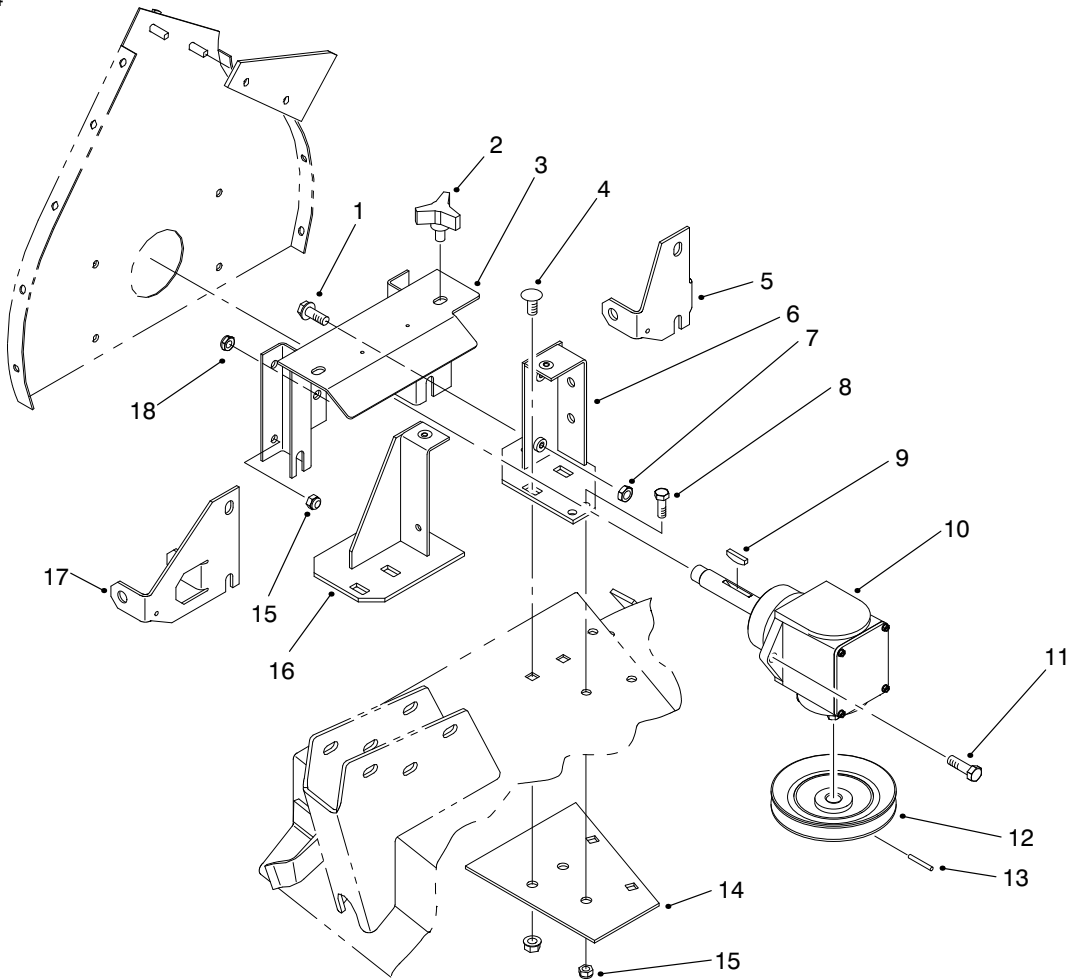


T-3139

BLOWER HOUSING MOUNT & BRACKETS ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-11	Screw-HFH	2	10	53-4530	Asm-Gear Box	1
2	62-6520	Knob	2	11	323-7	Screw-HH	2
3	99-5187	Asm-Mount, Blower	1	12	56-4810	Pulley-Gear Box	1
†4	3231-27	Bolt-CARR	4	13	32121-8	Pin-Roll	1
5	80-2820	Bracket-Pivot LH	1	14	99-5159	Plate-Reinforcement	1
6	77-5560	Asm-Bracket LH	1	15	3296-29	Nut-Lock	3
7	3218-3	Nut-Jam	2	16	99-5177	Asm-Bracket RH	1
8	322-5	Screw-HH	1	17	80-2810	Bracket-Pivot RH	1
9	3257-40	Key-Woodruff	1	18	3296-44	Nut-Lock	2


† Not included with Blower Kit, shown for reference only.

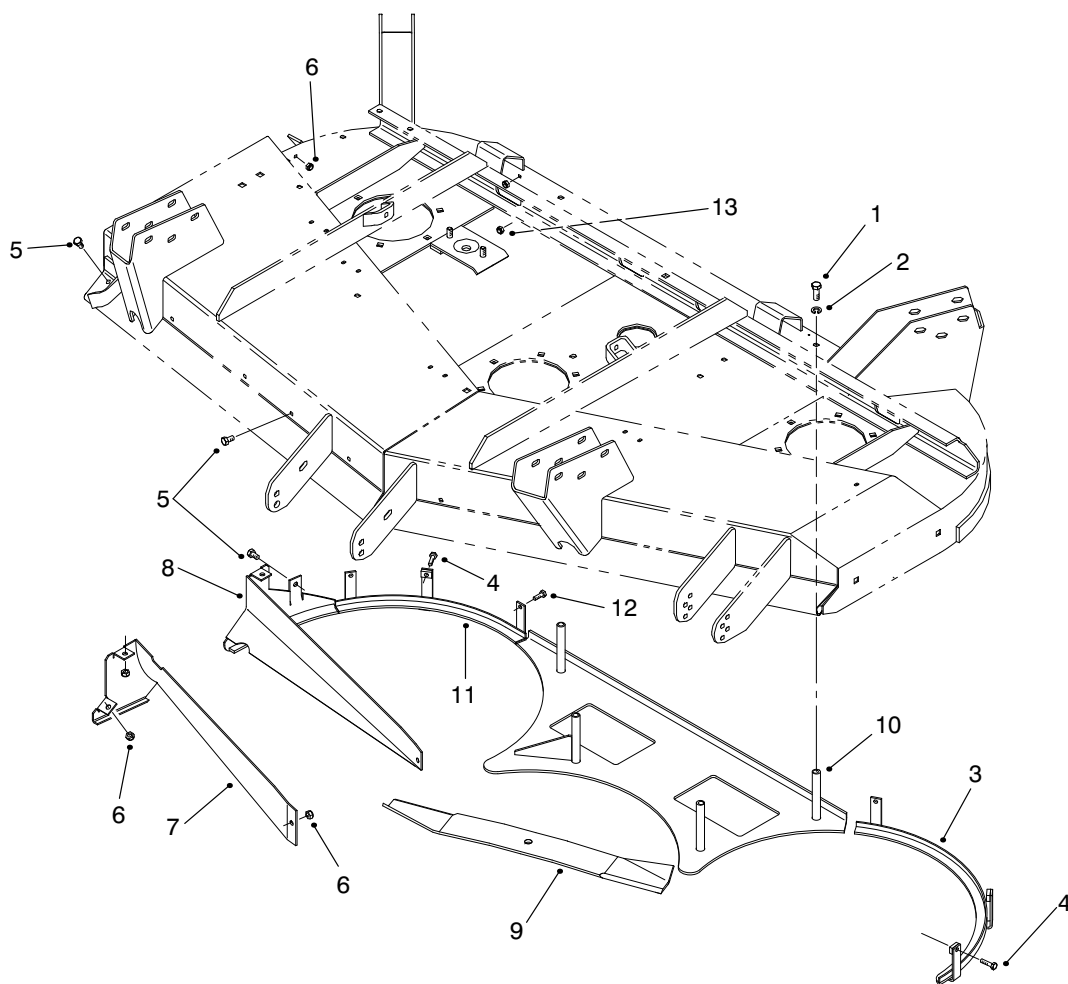

T-3140

SHELF & DEFLECTORS ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	4	8	77-5670	Deflector-Rear	1
2	3253-21	Washer-Lock	4	9	77-6710	Blade	3
3	77-5930	Shelf-Bottom, Left	1	10	77-5640	Shelf-Rear	1
4	321-6	Screw-HH	3	11	77-5850	Shelf-Right	1
5	322-2	Screw-HH	5	12	321-4	Screw-HH	3
6	3296-29	Nut-Lock	6	13	3296-42	Nut-Lock	6
7	77-5740	Deflector-Front	1				

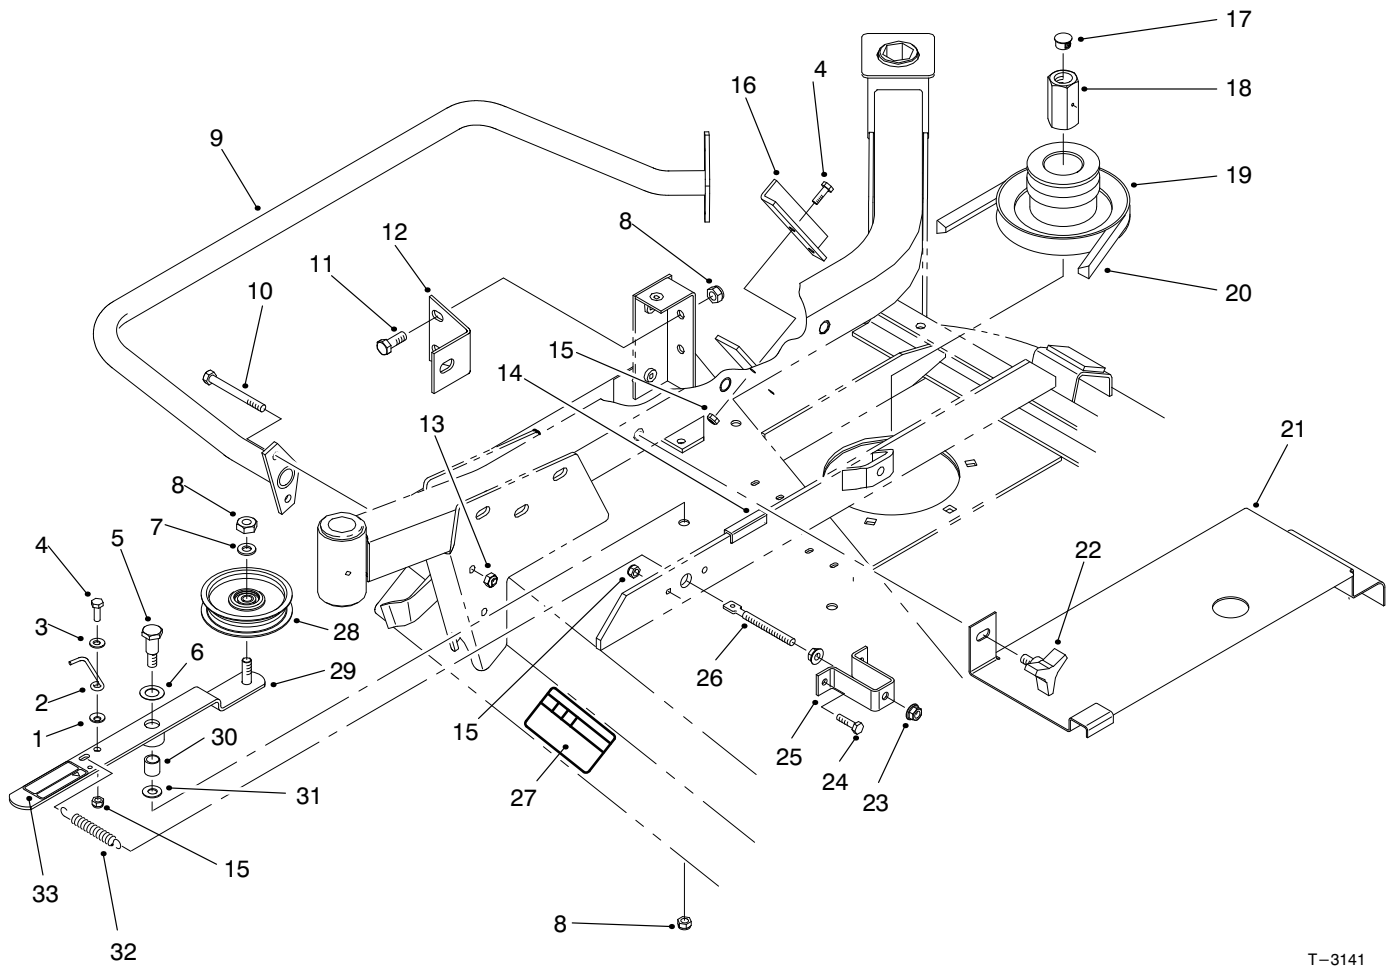


T-3141

PULLEY & BUMPER ASM

Ref. No.	Part No.	Description	No. Used
1	3290-451	Washer-Belleville	1
2	99-5183	Hook	1
3	3256-22	Washer-Flat	1
4	321-4	Screw-HH	3
5	80-3250	Screw-Pivot	1
6	257-10	Washer	1
7	3256-38	Washer-Flat	1
8	3296-59	Nut-Lock	3
9	99-5166	Asm-Bumper	1
10	322-14	Screw-HH	4
11	323-6	Screw-HH	2
12	99-5176	Asm-Brace, Blower	1
13	3296-29	Nut-Lock	4
14	70-2040	Trim	1
15	3296-42	Nut-Lock	5
16	80-3550	Stop-Deflector	1
17	59-5310	Cover-Nut	1
18	59-5190	Nut-Pulley	1
19	77-5420	Pulley-Splined	1

Ref. No.	Part No.	Description	No. Used
20	80-3590	V-Belt	1
21	99-5169	Cover-Belt	1
22	62-6520	Knob	1
23	32128-20	Nut-HFH	2
24	321-6	Screw-HH	2
25	99-5165	Bracket-Spring	1
26	80-3560	Rod-Threaded	1
27	66-1340	Decal-Discharge	1
27	93-7824	Decal-Danger (Europe)	1
28	56-4920	Pulley-Idler	1
29	80-3310	Asm-Arm, Idler (Incl. Ref. #30 & 33)	1
30	256-206	Bushing	1
31	257-9	Washer	1
32	37-8880	Spring	1
33	93-6696	Decal-Warning (Europe)	1
33	55-4300	Decal-Warning	1
*	94-2556	Decal-Warning (Europe)	2
*	66-8390	Spring-Extension	1

*Not Illustrated

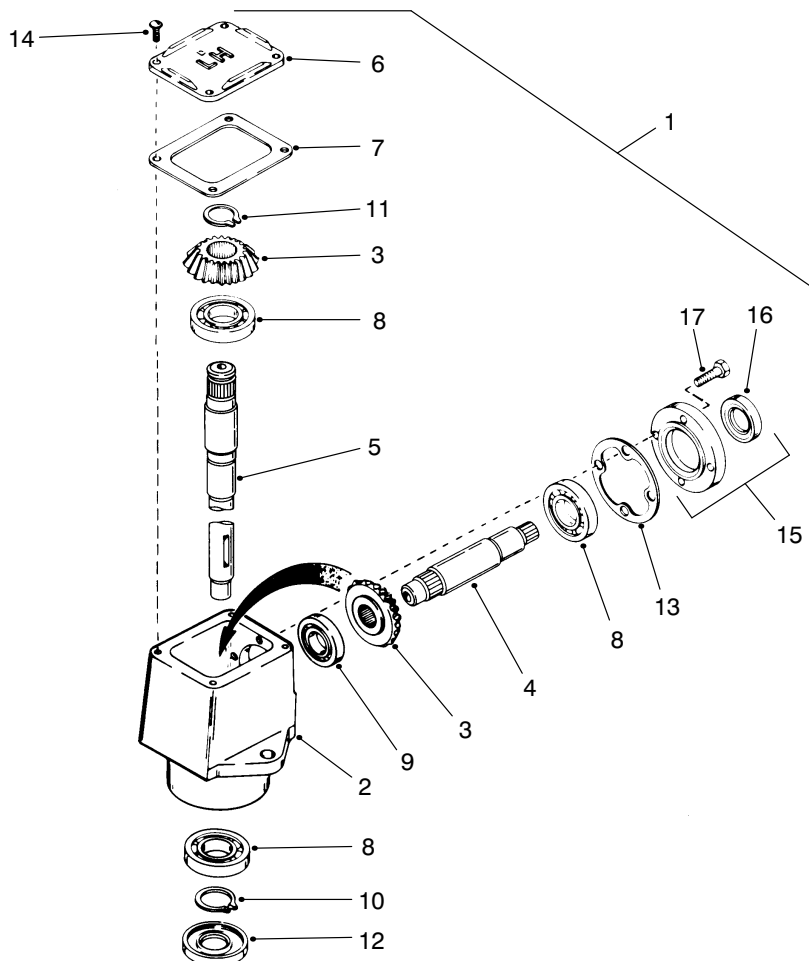

T-1168-1

GEAR BOX ASM 53-4530

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	794402	Asm-Head, LH (Incl. Ref.#2-15)	1	10	788019	Ring-Snap	1
2	770026A	Housing-Right Angle Drive	1	11	788018	Ring-Snap	1
3	778046	Gear-Miter	2	12	788029	Seal-Oil	1
4	776250	Shaft-Input	1	13	788030	Gasket-Cap	1
5	776249	Shaft-Output	1	14	792025	Screw-TAP	4
6	772035	Cover	1	15	786029	Asm-Cap & Seal, Retainer (Incl. Ref.#16 & 17)	1
7	788028	Gasket-Cover	1	16	788031	Seal-Oil	1
8	780034	Bearing-Ball	3	17	792026	Screw-HH	4
9	780024	Bearing-Ball	1				

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
770026A	Housing—Right Angle Drive	5	2	1	80-3720	Asm—Chute—62" Blower	1	10	1
772035	Cover	5	6	1	80-4670	Plate—Warning	1	9	2
776249	Shaft—Output	5	5	1	82-5510	Decal—Warning	1	20	1
776250	Shaft—Input	5	4	1	93-6696	Decal—Warning (Europe)	4	33	1
778046	Gear—Miter	5	3	2	93-7301	Decal	1	*	1
780024	Bearing—Ball	5	9	1	93-7316	Decal	1	*	1
780034	Bearing—Ball	5	8	3	93-7824	Decal—Danger (Europe)	4	27	1
786029	Asm—Cap & Seal, Retainer	5	15	1	94-2556	Decal—Warning (Europe)	4	*	2
788018	Ring—Snap	5	11	1	99-5159	Plate—Reinforcement	2	14	1
788019	Ring—Snap	5	10	1	99-5165	Bracket—Spring	4	25	1
788028	Gasket—Cover	5	7	1	99-5166	Asm—Bumper	4	9	1
788029	Seal—Oil	5	12	1	99-5169	Cover—Belt	4	21	1
788030	Gasket—Cap	5	13	1	99-5176	Asm—Brace, Blower	4	12	1
788031	Seal—Oil	5	16	1	99-5177	Asm—Bracket RH	2	16	1
792025	Screw—TAP	5	14	4	99-5183	Hook	4	2	1
792026	Screw—HH	5	17	4	99-5187	Asm—Mount, Blower	2	3	1
794402	Asm—Head, LH	5	1	1	256-206	Bushing	4	30	1
37-6730	Cup—Bearing	1	5	1	257-9	Washer	4	31	1
37-8880	Spring	4	32	1	257-10	Washer	4	6	1
38-7820	Bearing—Ball	1	4	1	321-3	Screw—HH	1	19	13
43-0940	Spacer—Hub, Blower	1	2	1	321-4	Screw—HH	4	4	3
43-0960	Bracket—Chute	1	7	2	321-4	Screw—HH	3	12	3
53-4530	Asm—Gear Box	2	10	1	321-6	Screw—HH	3	4	3
54-9220	Decal—Danger	1	21	1	321-6	Screw—HH	4	24	2
55-4300	Decal—Warning	4	33	1	322-2	Screw—HH	3	5	5
56-4780	Impeller	1	14	1	322-5	Screw—HH	2	8	1
56-4810	Pulley—Gear Box	2	12	1	322-14	Screw—HH	4	10	4
56-4920	Pulley—Idler	4	28	1	323-6	Screw—HH	3	1	4
59-5190	Nut—Pulley	4	18	1	323-6	Screw—HH	4	11	2
59-5310	Cover—Nut	4	17	1	323-7	Screw—HH	2	11	2
62-6520	Knob	2	2	2	3218-3	Nut—Jam	2	7	2
62-6520	Knob	4	22	1	3231-27	Bolt—CARR	2	4	4
63-9540	Asm—Housing, Blower	1	18	1	3234-11	Screw—HFH	2	1	2
63-9700	Plate—Cover	1	3	1	3234-14	Screw—HFH	1	17	4
63-9710	Spacer—Bearing	1	13	1	3235-22	Screw—HH	1	1	1
66-1340	Decal—Discharge	4	27	1	3253-3	Washer—Lock	1	22	4
66-8390	Spring—Extension	4	*	1	3253-21	Washer—Lock	3	2	4
70-2040	Trim	4	14	1	3256-22	Washer—Flat	4	3	1
77-5420	Pulley—Splined	4	19	1	3256-38	Washer—Flat	4	7	1
77-5560	Asm—Bracket LH	2	6	1	3257-40	Key—Woodruff	2	9	1
77-5640	Shelf—Rear	3	10	1	3290-271	Rivet—Pop	1	8	4
77-5670	Deflector—Rear	3	8	1	3290-409	Rivet—Pop	1	11	6
77-5740	Deflector—Front	3	7	1	3290-451	Washer—Belleville	4	1	1
77-5820	Plate—Mounting	1	15	1	3296-29	Nut—Lock	1	6	8
77-5850	Shelf—Right	3	11	1	3296-29	Nut—Lock	3	6	6
77-5930	Shelf—Bottom, Left	3	3	1	3296-29	Nut—Lock	4	13	4
77-6710	Blade	3	9	3	3296-29	Nut—Lock	2	15	3
77-6730	Deflector—Chute	1	12	1	3296-42	Nut—Lock	3	13	6
80-2810	Bracket—Pivot RH	2	17	1	3296-42	Nut—Lock	4	15	5
80-2820	Bracket—Pivot LH	2	5	1	3296-42	Nut—Lock	1	16	9
80-3250	Screw—Pivot	4	5	1	3296-44	Nut—Lock	2	18	2
80-3310	Asm—Arm, Idler	4	29	1	3296-59	Nut—Lock	4	8	3
80-3550	Stop—Deflector	4	16	1	32121-8	Pin—Roll	2	13	1
80-3560	Rod—Threaded	4	26	1	32128-20	Nut—HFH	4	23	2
80-3590	V—Belt	4	20	1					

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.