



Count on it.

Parts Catalog

Safety and Security Cage Kit **Workman® GTX Utility Vehicle**

Model No. 07161—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Safety and Security Cage Assembly 4


ROPS Assembly..... 5

Door and Windshield Assembly 6

Left Hand Door Assembly No. 136-2245 7

Right Hand Door Assembly No. 136-2246 8

Ball Picker Mount and Headlight Guard Assembly 9

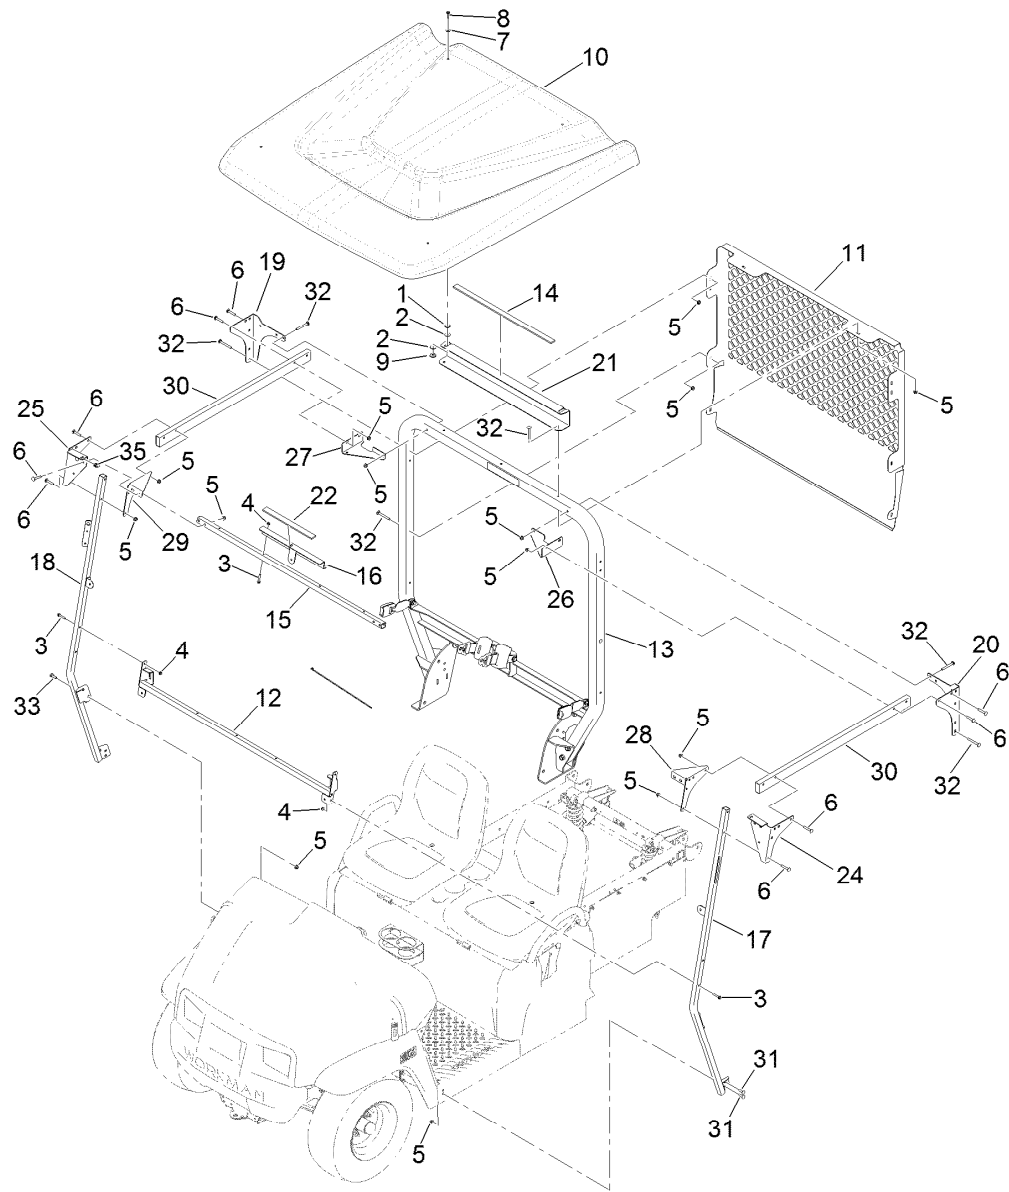


Safety and Security Cage Assembly

Ref.	Part Number	Qty.	Description
1	1-603716	2	Washer-Friction
2	93-1633	4	Washer
3	94-5781	6	Screw-HHF
4	104-7201	6	Nut-HF
5	104-8300	30	Nut-HF, NI
6	116-0629	16	Screw-CARR
7	119-0872	4	Washer-Sealing, Bonded
8	120-4654	4	Screw-HHF
9	133-1098	2	Bushing-Flange, Hex
10	133-1101	1	Sunshade
11	137-1085-03	1	Panel-Screen, Rear
12	133-7389-03	1	Windshield Support ASM
13		1	ROPS ASM ●
14	136-1756	1	Foam-Pad
15	136-1757-03	1	Crosslink-Front
16	136-2120-03	1	Support-Front
17	136-2135-03	1	Support-Windshield, LH


Ref.	Part Number	Qty.	Description
18	136-2136-03	1	Support-Windwhield, RH
19	136-2137-03	1	Bracket-Mount, Rear (RH)
20	136-2138-03	1	Bracket-Mount, Rear (LH)
21	136-2154-03	1	Support-Rear, Canopy
22	136-2211	1	Foam-Pad
24	136-9388-03	1	Bracket-Mount, LH
25	136-9389-03	1	Bracket-Mount, RH
26	136-9390-03	1	Gusset-Corner, Rear (LH)
27	136-9391-03	1	Gusset-Corner, Rear (RH)
28	136-9392-03	1	Gusset-Corner, Front (LH)
29	136-9393-03	1	Gusset-Corner, Front (RH)
30	136-9397-03	2	Tube-Top
31	3230-22	4	Screw-CARR
32	3230-32	8	Screw-CARR
33	3234-29	2	Screw-HHF
35	107069	2	Clip

● Not serviced separately

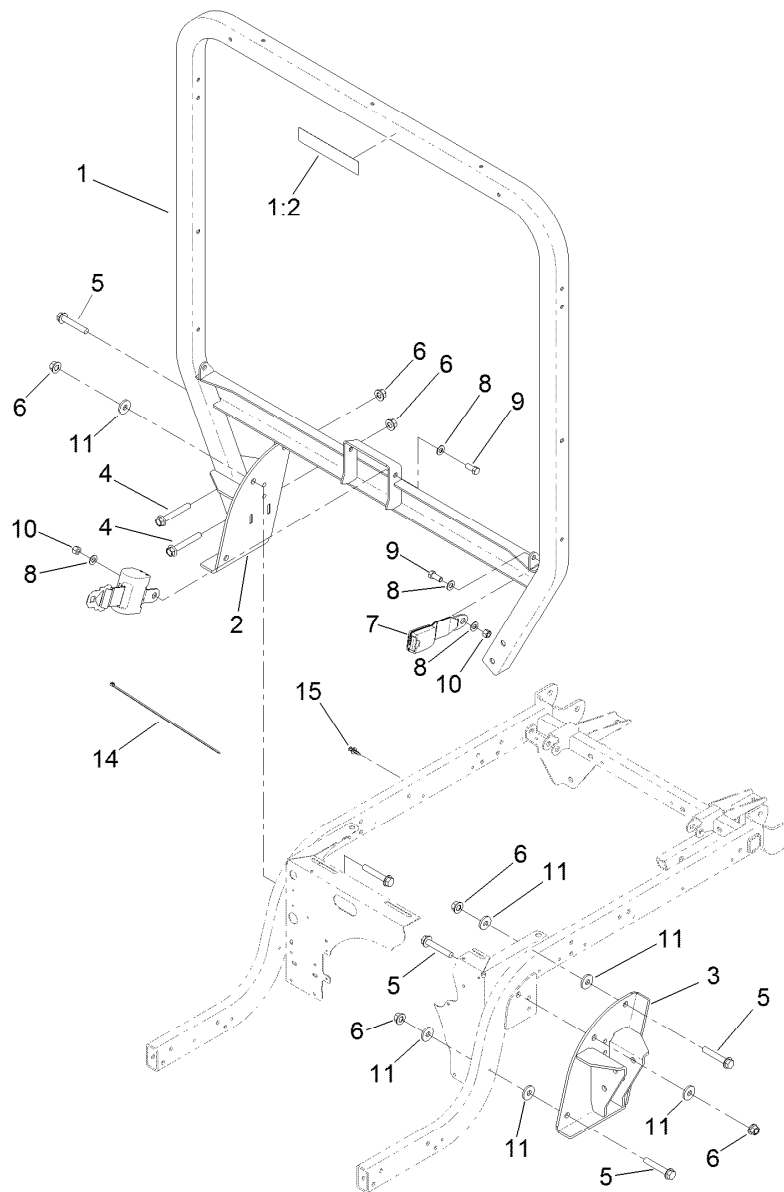

ROPS Assembly


Ref.	Part Number	Qty.	Description
1	136-6342	1	ROPS ASM
1:2	136-6314	1	Decal-Danger, CE
2	136-1179-03	1	Bracket-ROPS, RH
3	136-1180-03	1	Bracket-ROPS, LH
4	126-3900	4	Screw-HHF
5	3234-40	6	Screw-HF
6	99-5107	10	Nut-Lock
7	133-1022	2	Belt-Safety
8	3256-25	8	Washer-Flat
9	3212-4	4	Screw-HH
10	3296-7	4	Nut-Lock
11	110-6147	10	Washer-Flat
14	3290-379	4	Tie-Cable
15	125-9622	4	Rivet-Blind

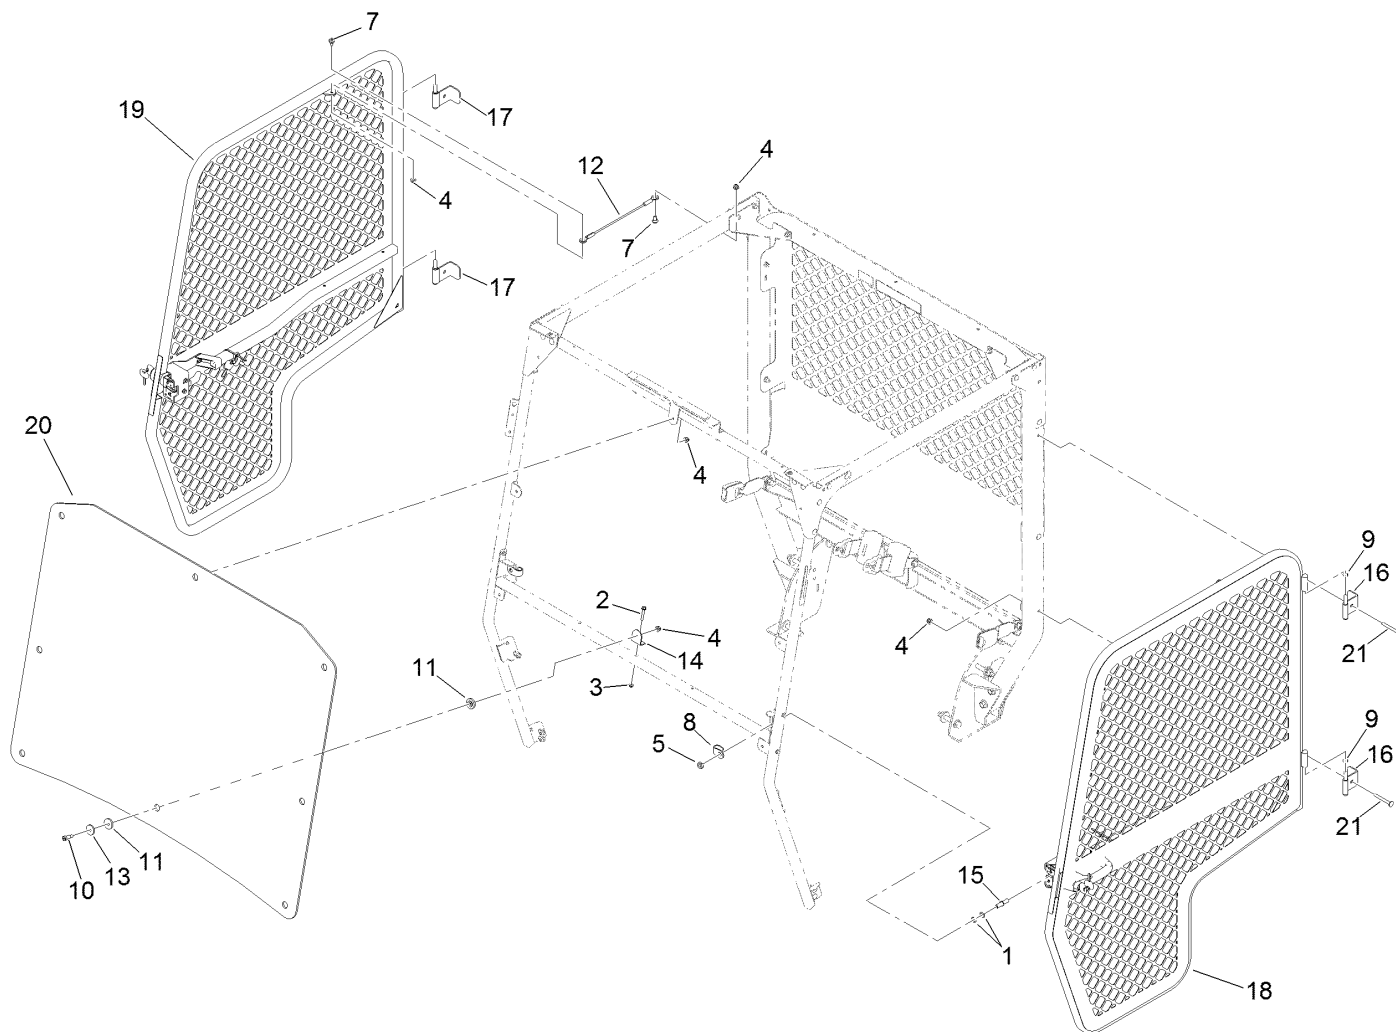

Door and Windshield Assembly


Ref.	Part Number	Qty.	Description
1	73-0040	4	Washer-Thrust
2	94-5781	1	Screw-HHF
3	104-7201	1	Nut-HF
4	104-8300	18	Nut-HF, NI
5	107-8116	2	Nut-Jam, Adhesive
7	120-9471	4	Bolt-Shoulder
8	121-8393	2	Guard-Striker
9	121-8441	4	Washer-Spacer
10	125-9520	8	Screw-Shoulder, HSH
11	125-9982	16	Bushing-Flange

Ref.	Part Number	Qty.	Description
12	130-5726	2	Lanyard
13	130-5815	8	Washer-Backup
14	132-3506-03	1	Bracket-Windshield
15	132-3718	2	Stud-Striker
16	133-7318-03	2	Hinge-Lower, LH
17	133-7319-03	2	Hinge-Lower, RH
18	136-2245	1	LH Door Assembly
19	136-2246	1	RH Door Assembly
20	136-9396	1	Windshield-Acrylic, Full
21	3230-32	4	Screw-CARR

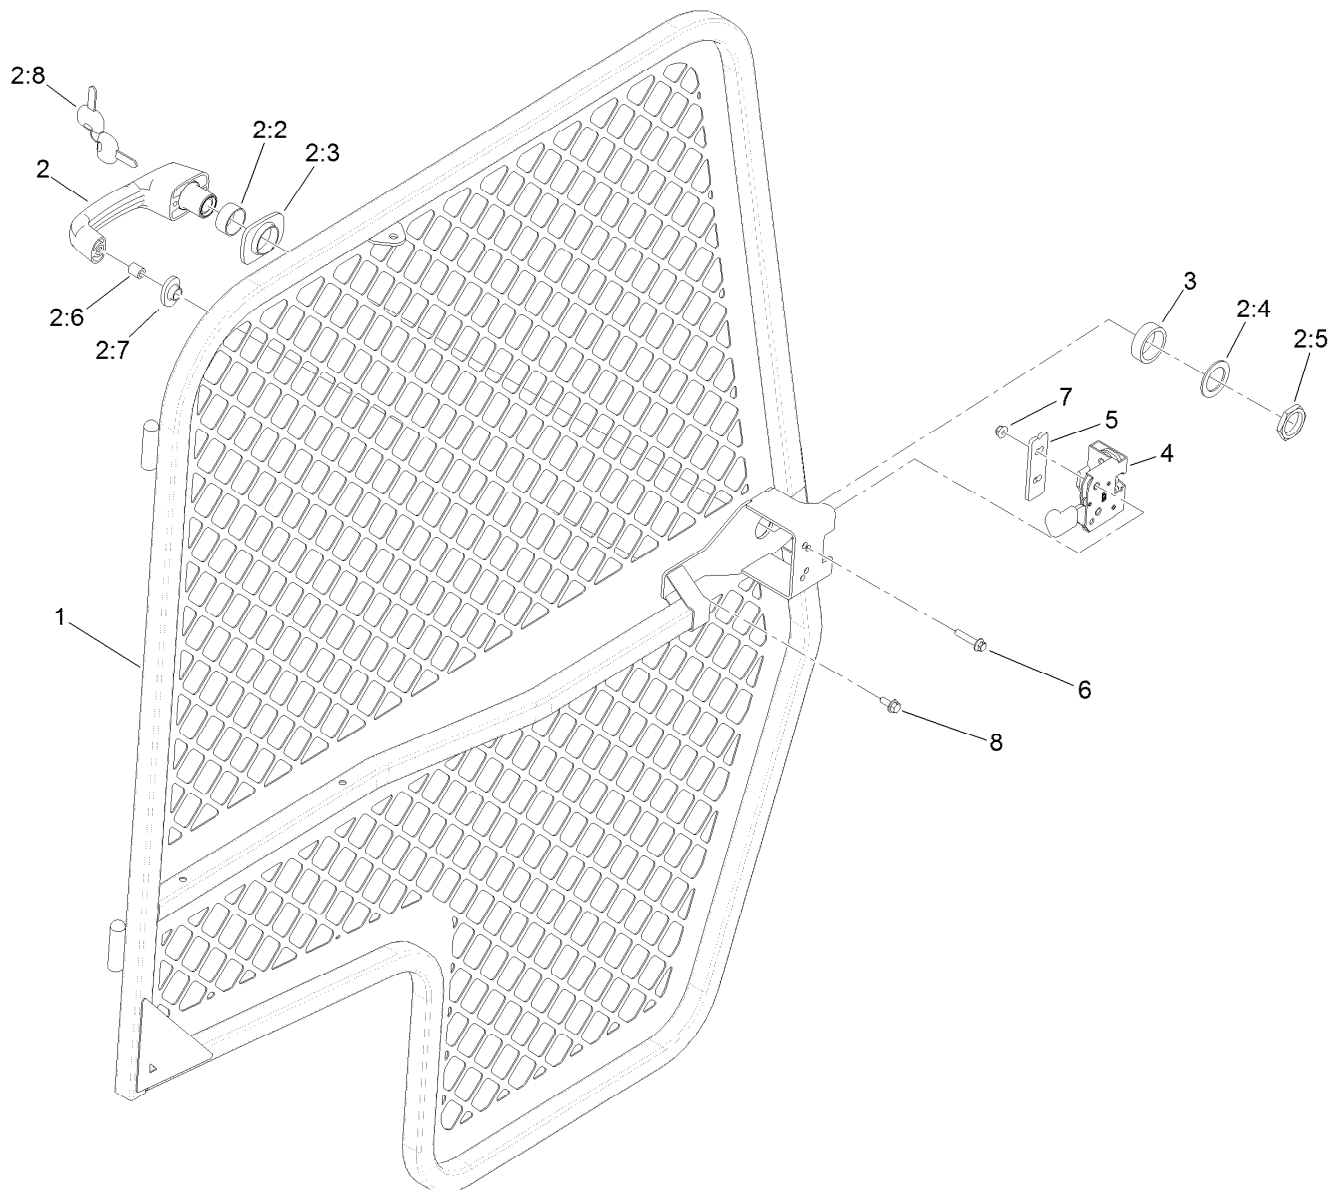


Left Hand Door Assembly No. 136-2245

Ref.	Part Number	Qty.	Description
1	136-2238-03	1	Frame-Door, LH
2	121-8630	1	Handle ASM
2:2	121-8628	1	Cylinder-Mounting, Key
2:3	121-8322	1	Grommet-Mounting, Large
2:4	121-8327	1	Washer
2:5	121-8328	1	Nut
2:6	121-8627	1	Cylinder-Mounting, End
2:7	121-8323	1	Grommet-Mounting, Small
2:8	125-9531	1	Key-Set
3	17-1580	1	Spacer (0.5 Inch)
4	121-8391	1	Latch-LH
5	121-8395	1	Plate-Support, Latch
6	3234-21	2	Screw-HHF
7	104-7201	2	Nut-HF
8	33103-016	1	Screw-HHF

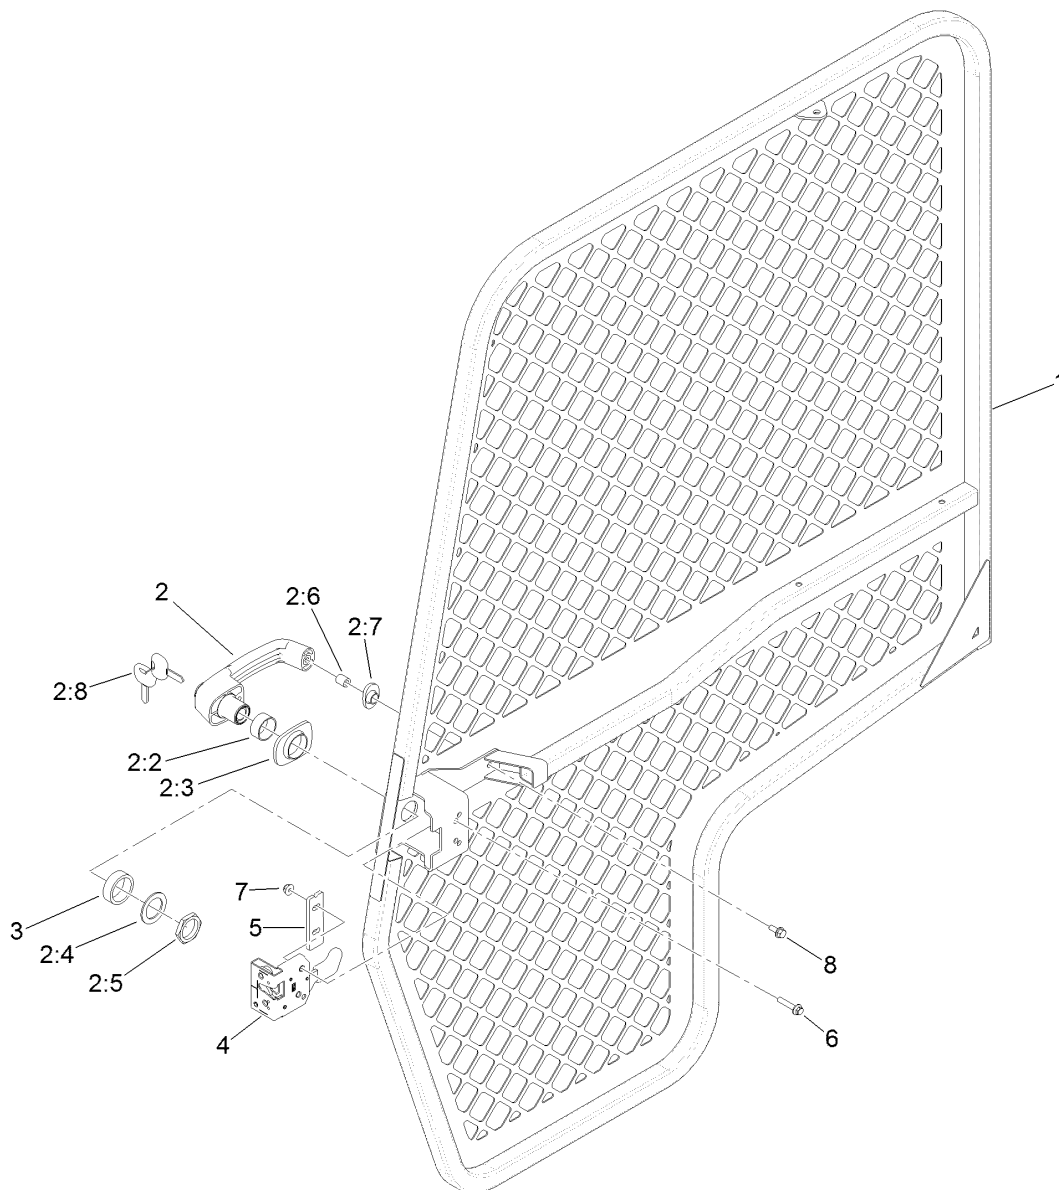

Right Hand Door Assembly No. 136-2246

Ref.	Part Number	Qty.	Description
1	136-2239-03	1	Frame-Door, RH
2	121-8630	1	Handle ASM
2:2	121-8628	1	Cylinder-Mounting, Key
2:3	121-8322	1	Grommet-Mounting, Large
2:4	121-8327	1	Washer
2:5	121-8328	1	Nut
2:6	121-8627	1	Cylinder-Mounting, End
2:7	121-8323	1	Grommet-Mounting, Small
2:8	125-9531	1	Key-Set
3	17-1580	1	Spacer (0.5 Inch)
4	121-8390	1	Latch-RH
5	121-8395	1	Plate-Support, Latch
6	3234-21	2	Screw-HHF
7	104-7201	2	Nut-HF
8	33103-016	1	Screw-HHF

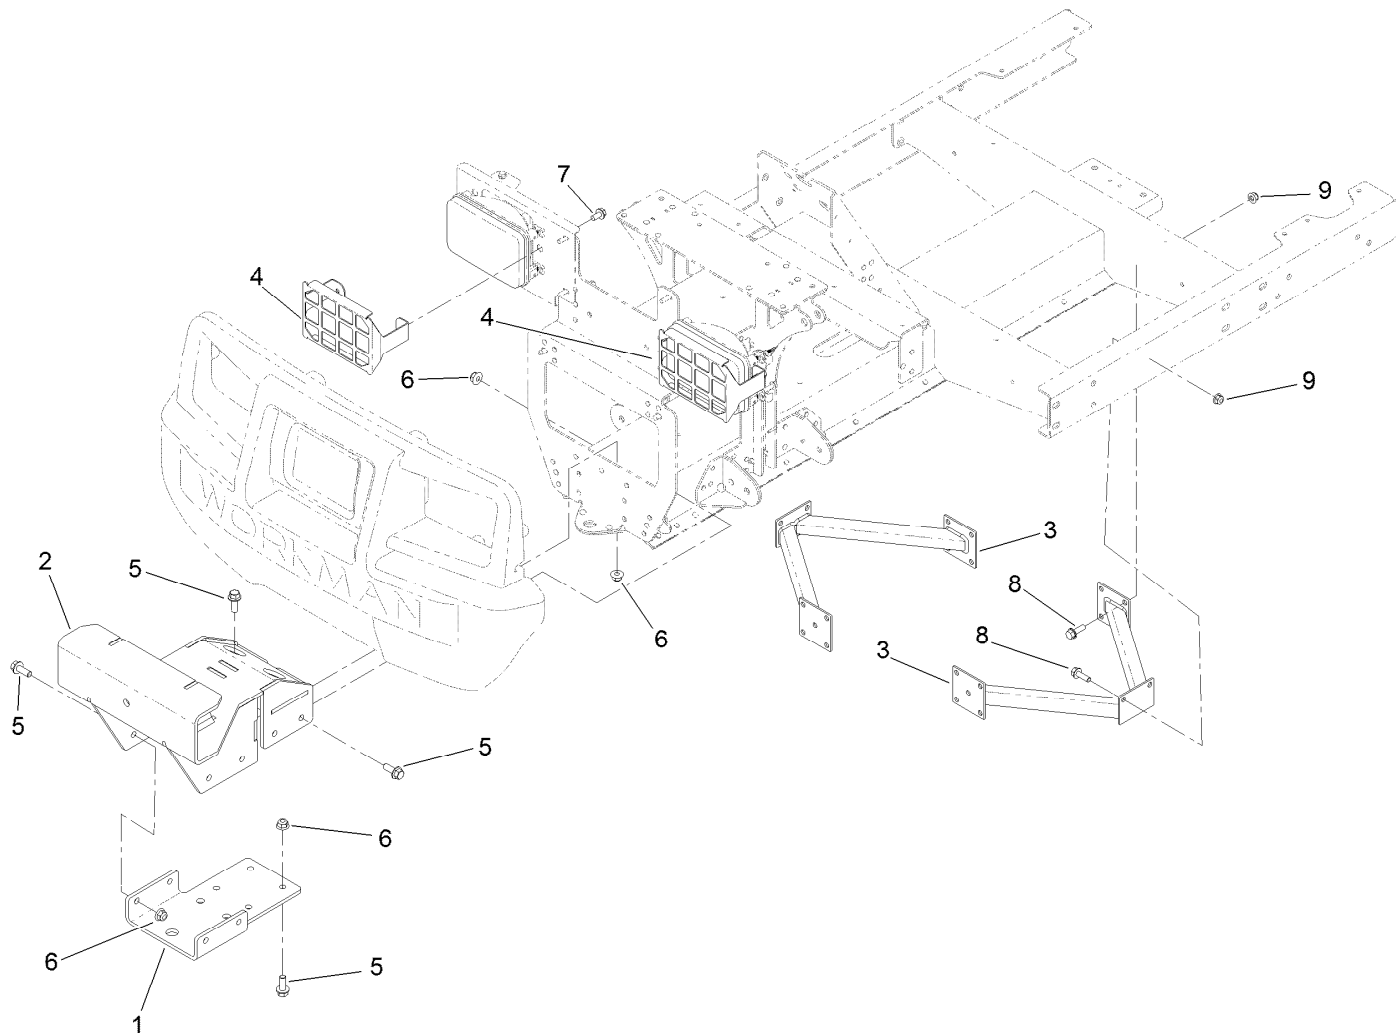

Ball Picker Mount and Headlight Guard Assembly

Ref.	Part Number	Qty.	Description
1	138-0079-03	1	Bracket-Bottom, Picker
2	138-0080-03	1	Picker Mount ASM
3	138-0099-03	2	Floor Brace ASM
4	137-1148-03	2	Bracket-Guard, Headlight
5	3234-42	14	Screw-HHF
6	104-8301	14	Nut-HF, NI
7	32144-14	4	Screw-HWHTF
8	3234-29	20	Screw-HHF
9	104-8300	20	Nut-HF, NI

Notes:

Notes:



Count on it.