


TORO®

MODEL NO. 03437-90001 & UP
MODEL NO. 03439-90001 & UP

PARTS CATALOG


8 BLADE, FLOATING SUSPENSION CUTTING UNITS For Grounds Pro 2000

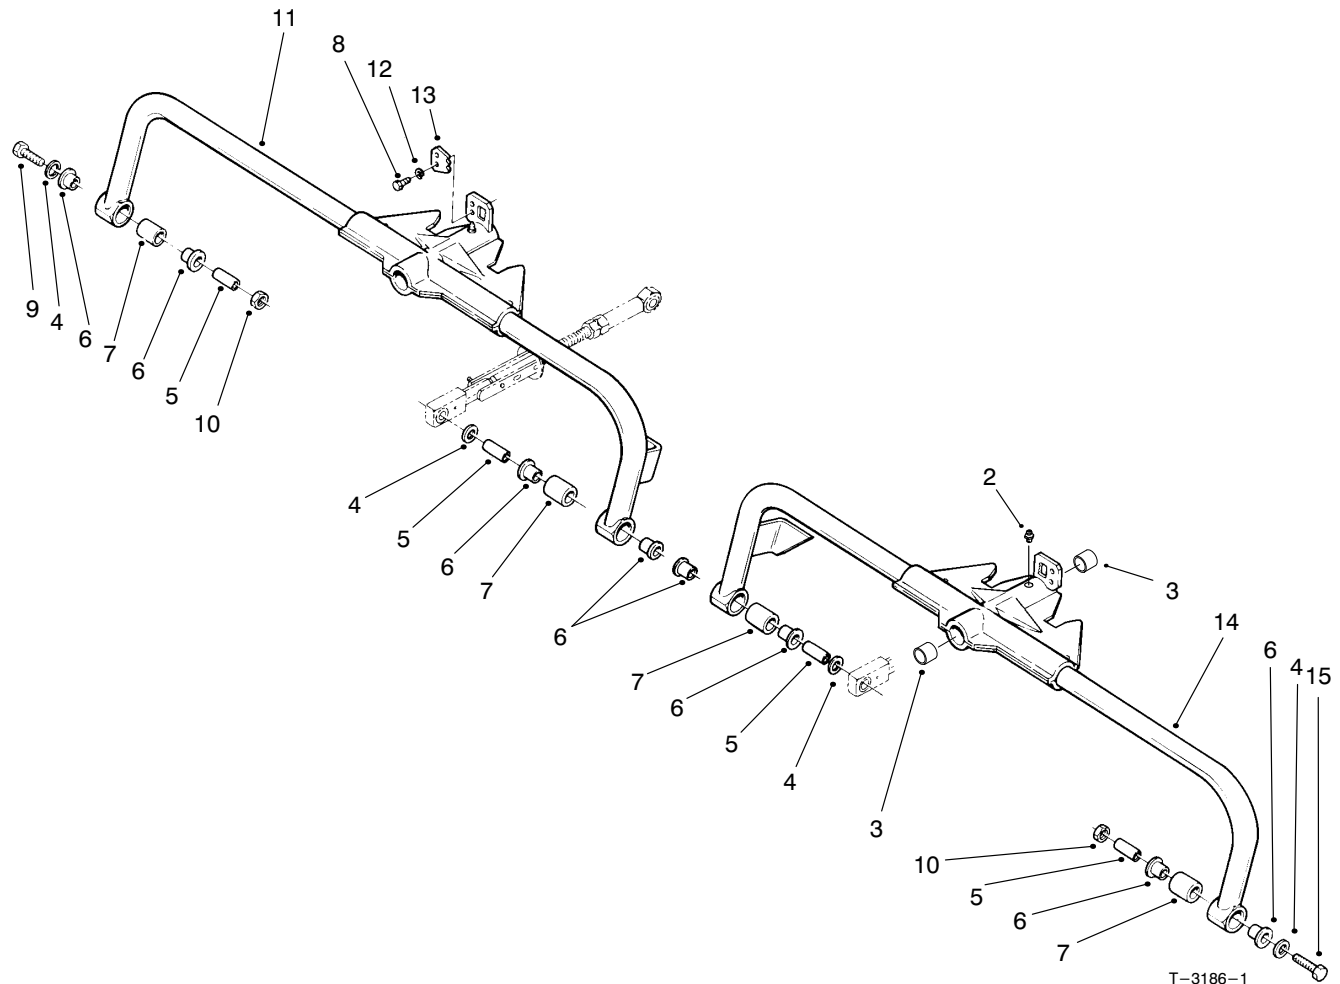

CARRIER FRAME ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
2	302-5	Fitting - Grease	6
3	3-0348	Bushing	6
4	3256-26	Washer - Flat	6
5	61-1370	Spacer	6
6	256-285	Bushing - Flange	12
7	61-0710	Bushing Assembly	6
8	321-2	Screw - Cap Hex. Hd.	6
9	325-10	Screw - Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
10	3296-45	Nut - Lock	2
11	92-1832	Right Carrier Frame (Incl. Ref. #2, 3 & 7)	1
12	3253-3	Washer - Lock	6
13	61-3600	Tab - Lift	3
14	92-1831	Left & Rear Carrier Frame (Incl. Ref. #2, 3 & 7)	2
15	325-14	Capscrew - Hex Head	3

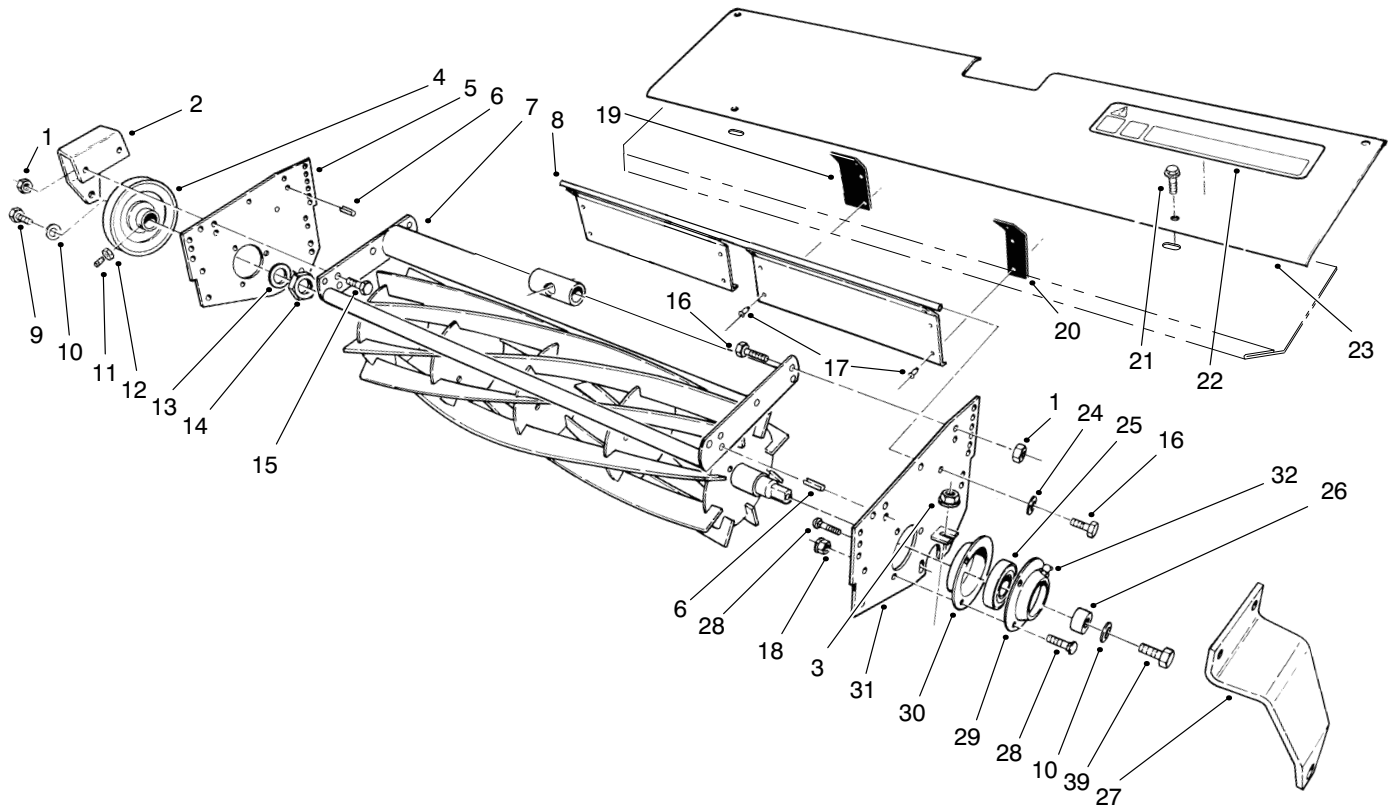


T-3187-1

FRAME & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	8
2	61-0900	Bracket - Tensioner/Carrier	1
3	3296-4	Nut-Lock	1
4	80-4270	Pulley - Reel (8 Blade)	1
5	61-1320	Sideplate	1
6	32121-36	Pin - Roll	4
7	61-0930	Frame - Reel (8 Blade)	1
8	93-8849	Rear Grass Guard (Incl. Ref. #17, 19 & 20)	1
9	3211-4	Screw - Cap Hex. Hd.	1
10	67-9760	Washer	2
11	3247-6	Screw - Set Square Head	1
12	3218-3	Nut - Jam	1
13	27-1850	Washer	1
14	67-5840	Nut - Jam	1
15	323-7	Screw - Cap Hex. Hd.	4
16	323-6	Screw - Cap Hex. Hd.	6
17	700382	Rivet-Pop	12

Ref. No.	Part No.	Description	No. Used
18	3296-29	Nut - Lock	6
19	61-3290	Cover-Middle	2
20	61-3280	Cover-End	2
21	32144-10	Screw - Hex. Washer Hd.	4
22	93-8064	Decal - Warning	1
23	61-0560	Shield - Top (8 Blade)	1
24	3253-5	Washer - Lock	2
25	251-331	Bearing	2
26	61-0500	Spacer - Reel	1
27	61-0890	Bracket - Carrier	1
28	3230-1	Bolt - Carriage	10
29	76-2490	Flange - Bearing (Incl. Ref. #32)	2
30	76-2500	Flange - Bearing	2
31	61-0940	Sideplate - Adjust	1
32	302-11	Fitting - Grease	2
39	3273-34	Screw - Hex. Socket Hd.	1

NOTE: Cutting Unit Model No. 03437 Shown

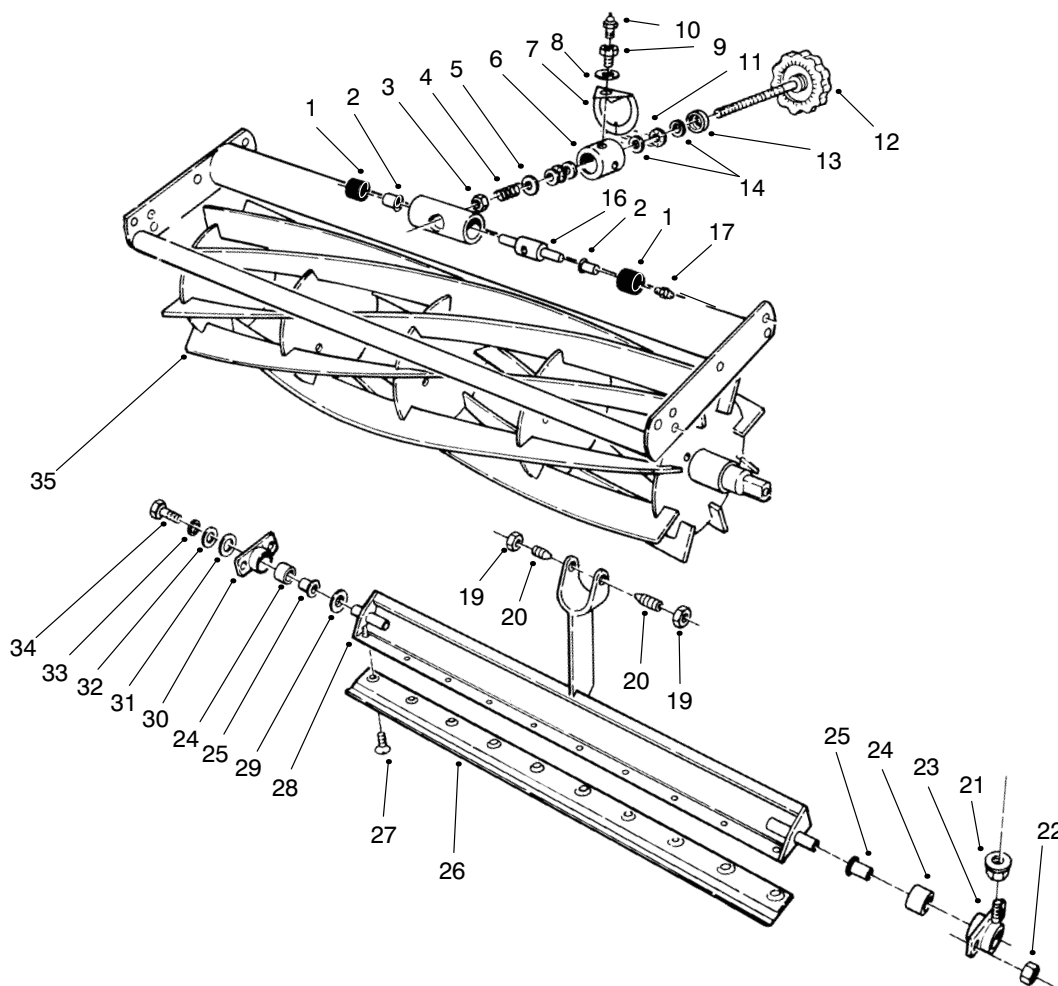


T-1790

8 BLADE REEL BEDBAR & BEDKNIFE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5510	Rubber Bushing Assembly	2	23	93-6855	Housing - Bedbar Adj.	1
2	52-2890	Bushing - Flanged (Nylon)	2	24	56-9510	Bushing Assy.	2
3	3296-62	Nut - Lock	1	25	56-9520	Bushing - Flanged	2
4	57-5270	Spring - Compression	1	26	62-5180	Bedknife - 7 In. Reel	1
5	29-8870	Washer	1	27	57-4910	Screw - Special	10
6	52-2980	Pivot - Single Point Adjust	1	28	61-1210	Bedbar	1
7	52-3000	Arm - Spring	1	29	61-1950	Washer - Bedbar	1
8	3256-25	Washer - Flat	1	30	61-1010	Bedbar Housing	1
9	52-2990	Capscrew - Spring Retainer	1	31	62-7120	Spacer	1
10	302-5	Fitting - Grease	1	32	3256-56	Washer - Flat	1
11	257-6	Bearing - Thrust	2	33	3253-4	Washer - Lock	1
12	61-1070	Handle - Assembly	1	34	322-3	Screw - Cap Hex. Hd.	1
13	253-84	Seal	1	35	12-7099	Reel Assembly - 8 Blade (Model No. 03437)	2
14	257-5	Washer - Thrust	4				
16	57-5260	Pin - S.P.A.	1	*	12-7089	Reel Assembly - 8 Blade (Model No. 03439)	1
17	302-18	Fitting - Grease	1				
19	3218-18	Nut - Jam	2	*	13-3649	Overhaul Kit (Incl. Ref. #1, 2, 11, 13, 24, 25 & 27)	1
20	57-5190	Screw - Adjustment	2				
21	3219-2	Nut	1				
22	3296-29	Nut - Lock	4				

NOTE: Cutting Unit Model No. 03437 Shown

*Not Illustrated

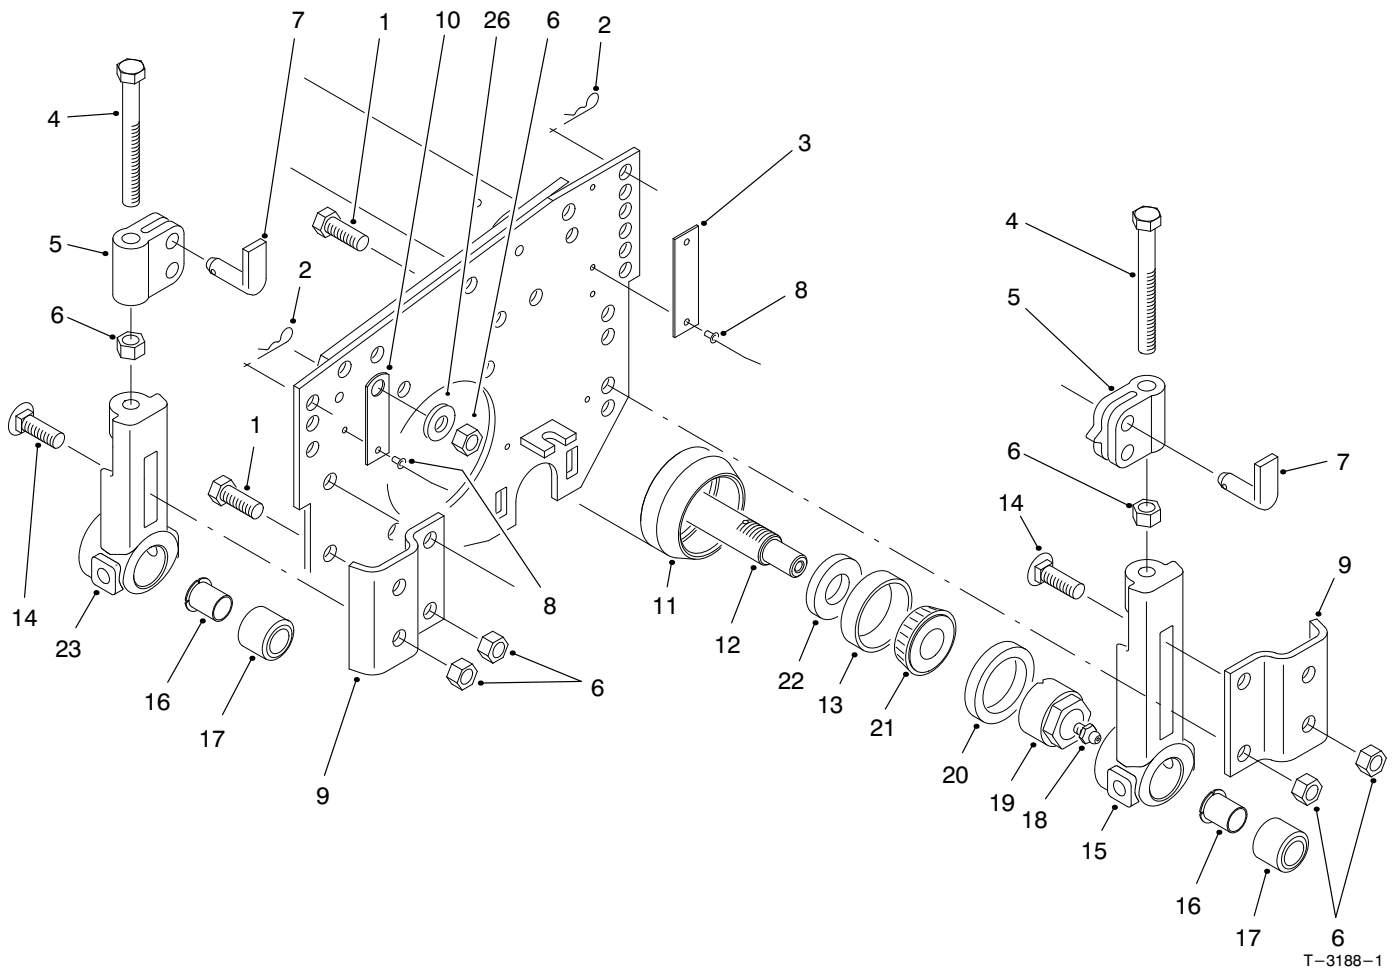

T-3188-1


REAR ROLLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	8
2	3290-467	Cotter - Hairpin	4
3	61-3800	Plate - HOC Rear	2
4	323-57	Screw - Cap Hex Hd.	4
5	61-0420	Support - HOC	4
6	3296-39	Nut - Lock	16
7	71-3690	Pin - HOC	4
8	3290-55	Rivet - Pop	6
9	61-0910	Bracket - Angle	4
10	61-3790	Plate - HOC Front	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	254-79	Cup - Bearing	2

Ref. No.	Part No.	Description	No. Used
14	3231-25	Screw - Carriage	4
15	61-0430	Bracket - Rear	2
16	56-9520	Bushing - Flanged	2
17	56-9510	Bushing	4
18	302-5	Fitting - Grease	2
19	71-3590	Nut - Adjustment	2
20	253-153	Seal - Outer	2
21	254-78	Cone - Bearing	2
22	253-152	Seal - Inner	2
23	61-0440	Bracket - Front	2
26	3256-38	Washer - Flat	2
*	61-0410	Full Roller Assembly (Incl. Ref. #11-13, 18-22)	1

NOTE: Cutting Unit Model No. 03437 Shown

*Not Illustrated

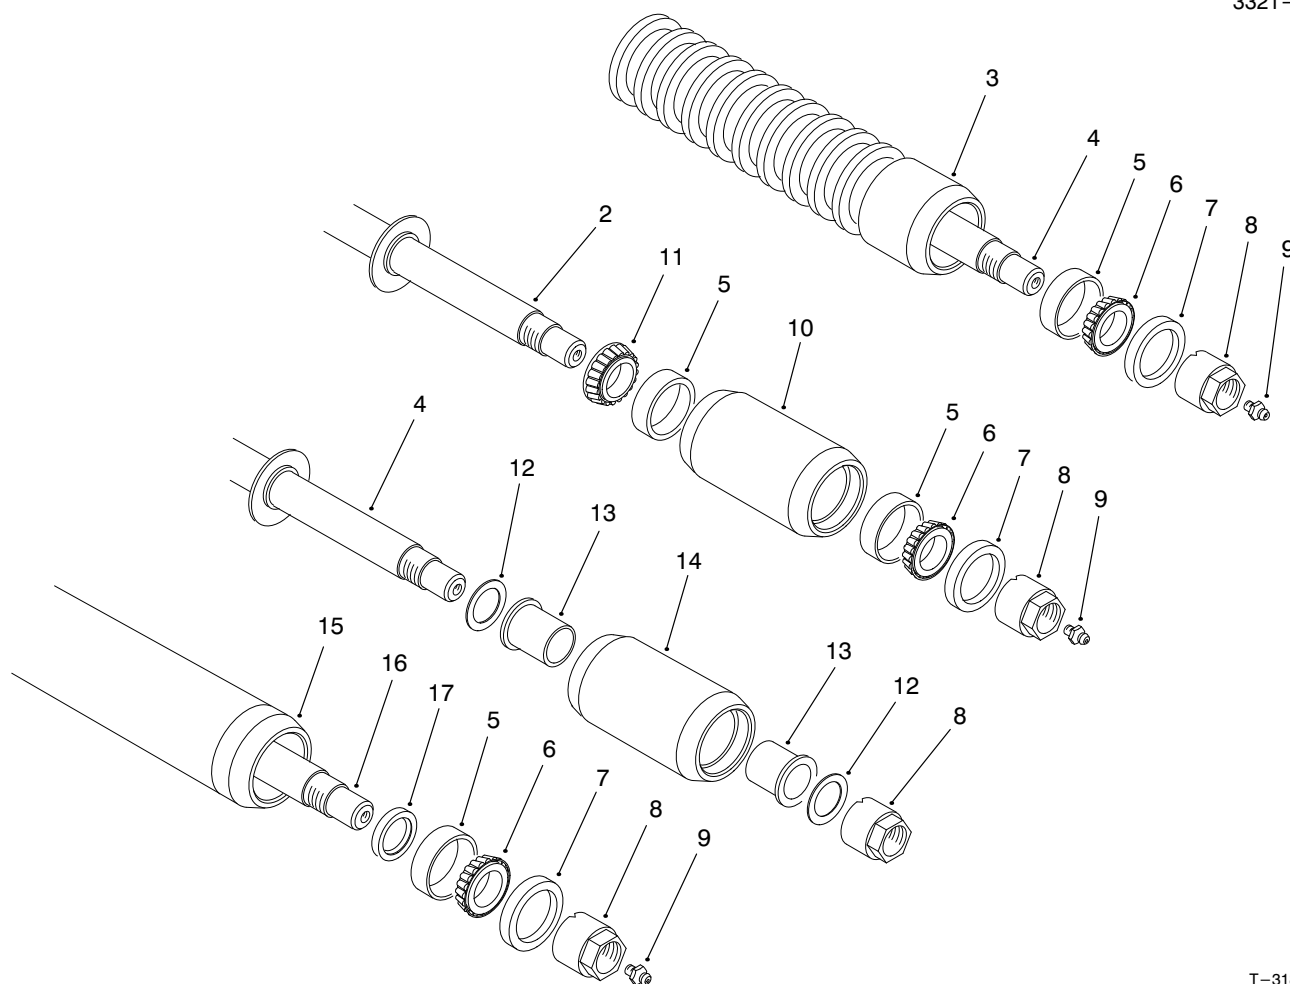

T-3189-1

FRONT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	94-5984	Shaft - Sectional Roller	1	*	94-4993	Wiehle Roller Assembly (Incl. Ref. #3-9)	1
3	94-4998	Wiehle Roller	1	*	94-5982	Sectional Roller Assembly (Incl. Ref. #2 & 5-11)	1
4	94-4983	Shaft	2	*	94-5981	Anti-Scalp Roller Assembly (Incl. Ref. #4, 8 & 12-14)	1
5	254-79	Cup - Bearing (Outer)	8	*	61-0410	Full Roller Assembly (Incl. Ref. #5-9 & 15-17)	1
6	254-78	Cone - Bearing (Outer)	6	*	03475	Wiehle Roller Kit (Incl. 3 No. 94-4993)	1
7	253-153	Seal - Outer	6	*	03476	Sectional Roller Kit (Incl. 3 No. 94-5982)	1
8	71-3590	Nut - Adjustment	8	*	03447	Anti-Scalp Roller Kit (Incl. 3 No. 94-5981)	1
9	302-5	Fitting - Grease	6	*	03440	Full Roller Kit (Incl. 3 No. 61-0410)	1
10	76-2400	Roller - Sectional	2				
11	252-112	Cone - Bearing (Inner)	2				
12	3-6498	Washer - Thrust	4				
13	256-117	Bushing - Flanged	4				
14	63-5060	Roller - Anti-Scalp	2				
15	61-0380	Cap-Roller	2				
16	61-0400	Shaft-Roller	1				
17	253-152	Seal-Inner	2				

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
700382	Rivet-Pop	2 17 12	93-8064	Decal - Warning	2 22 1
3-0348	Bushing	1 3 6	93-8849	Rear Grass Guard	2 8 1
3-6498	Washer - Thrust	5 12 4	94-4983	Shaft	5 4 2
12-7089	Reel Assembly - 8 Blade	3 * 1	94-4993	Wiehle Roller Assembly	5 * 1
12-7099	Reel Assembly - 8 Blade	3 35 2	94-4998	Wiehle Roller	5 3 1
13-3649	Overhaul Kit	3 * 1	94-5981	Anti-Scalp Roller Assembly	5 * 1
27-1850	Washer	2 13 1	94-5982	Sectional Roller Assembly	5 * 1
29-8870	Washer	3 5 1	94-5984	Shaft - Sectional Roller	5 2 1
52-2890	Bushing - Flanged (Nylon)	3 2 2	251-331	Bearing	2 25 2
52-2980	Pivot - Single Point Adjust	3 6 1	252-112	Cone - Bearing (Inner)	5 11 2
52-2990	Capscrew - Spring Retainer	3 9 1	253-84	Seal	3 13 1
52-3000	Arm - Spring	3 7 1	253-152	Seal - Inner	4 22 2
56-9510	Bushing	4 17 4	253-152	Seal - Inner	5 17 2
56-9510	Bushing Assy.	3 24 2	253-153	Seal - Outer	5 7 6
56-9520	Bushing - Flanged	4 16 2	253-153	Seal - Outer	4 20 2
56-9520	Bushing - Flanged	3 25 2	254-78	Cone - Bearing	4 21 2
57-4910	Screw - Special	3 27 10	254-78	Cone - Bearing (Outer)	5 6 6
57-5190	Screw - Adjustment	3 20 2	254-79	Cup - Bearing	4 13 2
57-5260	Pin - S.P.A.	3 16 1	254-79	Cup - Bearing (Outer)	5 5 8
57-5270	Spring - Compression	3 4 1	256-117	Bushing - Flanged	5 13 4
61-0380	Cap - Roller	4 11 2	256-285	Bushing - Flange	1 6 12
61-0380	Cap-Roller	5 15 2	257-5	Washer - Thrust	3 14 4
61-0400	Shaft - Roller	4 12 1	257-6	Bearing - Thrust	3 11 2
61-0400	Shaft-Roller	5 16 1	302-5	Fitting - Grease	1 2 6
61-0410	Full Roller Assembly	4 * 1	302-5	Fitting - Grease	5 9 6
61-0410	Full Roller Assembly	5 * 1	302-5	Fitting - Grease	3 10 1
61-0420	Support - HOC	4 5 4	302-5	Fitting - Grease	4 18 2
61-0430	Bracket - Rear	4 15 2	302-11	Fitting - Grease	2 32 2
61-0440	Bracket - Front	4 23 2	302-18	Fitting - Grease	3 17 1
61-0500	Spacer - Reel	2 26 1	321-2	Screw - Cap Hex. Hd.	1 8 6
61-0560	Shield - Top (8 Blade)	2 23 1	322-3	Screw - Cap Hex. Hd.	3 34 1
61-0710	Bushing Assembly	1 7 6	323-6	Screw - Cap Hex. Hd.	4 1 8
61-0890	Bracket - Carrier	2 27 1	323-6	Screw - Cap Hex. Hd.	2 16 6
61-0900	Bracket - Tensioner/Carrier	2 2 1	323-7	Screw - Cap Hex. Hd.	2 15 4
61-0910	Bracket - Angle	4 9 4	323-57	Screw - Cap Hex. Hd.	4 4 4
61-0930	Frame - Reel (8 Blade)	2 7 1	325-10	Screw - Cap Hex. Hd.	1 9 3
61-0940	Sideplate - Adjust	2 31 1	325-14	Capscrew - Hex Head	1 15 3
61-1010	Bedbar Housing	3 30 1	3211-4	Screw - Cap Hex. Hd.	2 9 1
61-1070	Handle - Assembly	3 12 1	3218-3	Nut - Jam	2 12 1
61-1210	Bedbar	3 28 1	3218-18	Nut - Jam	3 19 2
61-1320	Sideplate	2 5 1	3219-2	Nut	3 21 1
61-1370	Spacer	1 5 6	3230-1	Bolt - Carriage	2 28 10
61-1950	Washer - Bedbar	3 29 1	3231-25	Screw - Carriage	4 14 4
61-3280	Cover-End	2 20 2	3247-6	Screw - Set Square Head	2 11 1
61-3290	Cover-Middle	2 19 2	3253-3	Washer - Lock	1 12 6
61-3600	Tab - Lift	1 13 3	3253-4	Washer - Lock	3 33 1
61-3790	Plate - HOC Front	4 10 2	3253-5	Washer - Lock	2 24 2
61-3800	Plate - HOC Rear	4 3 2	3256-25	Washer - Flat	3 8 1
62-5180	Bedknife - 7 In. Reel	3 26 1	3256-26	Washer - Flat	1 4 6
62-5510	Rubber Bushing Assembly	3 1 2	3256-38	Washer-Flat	4 26 2
62-7120	Spacer	3 31 1	3256-56	Washer - Flat	3 32 1
63-5060	Roller - Anti-Scalp	5 14 2	3273-34	Screw - Hex. Socket Hd.	2 39 1
67-5840	Nut - Jam	2 14 1	3290-55	Rivet - Pop	4 8 6
67-9760	Washer	2 10 2	3290-467	Cotter - Hairpin	4 2 4
71-3590	Nut - Adjustment	5 8 8	3296-4	Nut-Lock	2 3 1
71-3590	Nut - Adjustment	4 19 2	3296-29	Nut - Lock	2 18 6
71-3690	Pin - HOC	4 7 4	3296-29	Nut - Lock	3 22 4
76-2400	Roller - Sectional	5 10 2	3296-39	Nut - Lock	2 1 8
76-2490	Flange - Bearing	2 29 2	3296-39	Nut - Lock	4 6 16
76-2500	Flange - Bearing	2 30 2	3296-45	Nut - Lock	1 10 2
80-4270	Pulley - Reel (8 Blade)	2 4 1	3296-62	Nut - Lock	3 3 1
92-1831	Left & Rear Carrier Frame	1 14 2	32121-36	Pin - Roll	2 6 4
92-1832	Right Carrier Frame	1 11 1	32144-10	Screw - Hex. Washer Hd.	2 21 4
93-6855	Housing - Bedbar Adj.	3 23 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

