



**Count on it.**

# Parts Catalog

## TimeCutter® SS 4250

### Riding Mower

Model No. 74723—Serial No. 315000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                             |    |
|-----------------------------------------------------------------------------|----|
| Frame, Front Axle and Caster Wheel Assembly .....                           | 4  |
| Caster Wheel Assembly No. 130-0736.....                                     | 6  |
| Deck Lift Assembly.....                                                     | 8  |
| Motion Control Assembly .....                                               | 10 |
| Brake Assembly .....                                                        | 12 |
| Seat Assembly .....                                                         | 14 |
| Belt and Idler Assembly.....                                                | 16 |
| Hydro Transaxle Assembly .....                                              | 18 |
| Right Hand Hydro Transaxle Assembly No. 119-3331 .....                      | 20 |
| Left Hand Hydro Transaxle Assembly No. 119-3330 .....                       | 22 |
| 4 Ply Wheel and Tire Assembly No. 120-5523 .....                            | 24 |
| 2 Ply Wheel and Tire Assembly No. 131-3671 .....                            | 26 |
| Clutch Assembly.....                                                        | 28 |
| Engine and Muffler Assembly.....                                            | 30 |
| Fuel System Assembly with Non-Canister Style Air Filter .....               | 32 |
| Carburetor Assembly No. 127-9289 with Non-Canister Style Air Filter .....   | 34 |
| Air Intake and Filtration Assembly with Non-Canister Style Air Filter ..... | 36 |
| Ignition and Electrical Assembly .....                                      | 38 |
| Crankcase and Crankshaft Assembly .....                                     | 40 |
| Governor Control Assembly .....                                             | 42 |
| Piston and Cylinder Head Assembly .....                                     | 44 |
| Blower Housing Assembly .....                                               | 46 |
| Gasket and Seal Kit Assembly .....                                          | 48 |
| Body Styling and Fuel Tank Assembly .....                                   | 50 |
| Fuel Delivery Assembly.....                                                 | 52 |
| Battery and Electrical Assembly.....                                        | 54 |
| Fuse and Wire Harness Assembly.....                                         | 56 |
| 42 Inch Deck Assembly.....                                                  | 58 |
| 42 Inch Deck Assembly No. 131-3604 .....                                    | 60 |
| 42 Inch Deck, Belt and Blade Assembly .....                                 | 62 |
| Attachments and Accessories .....                                           | 64 |


# Frame, Front Axle and Caster Wheel Assembly

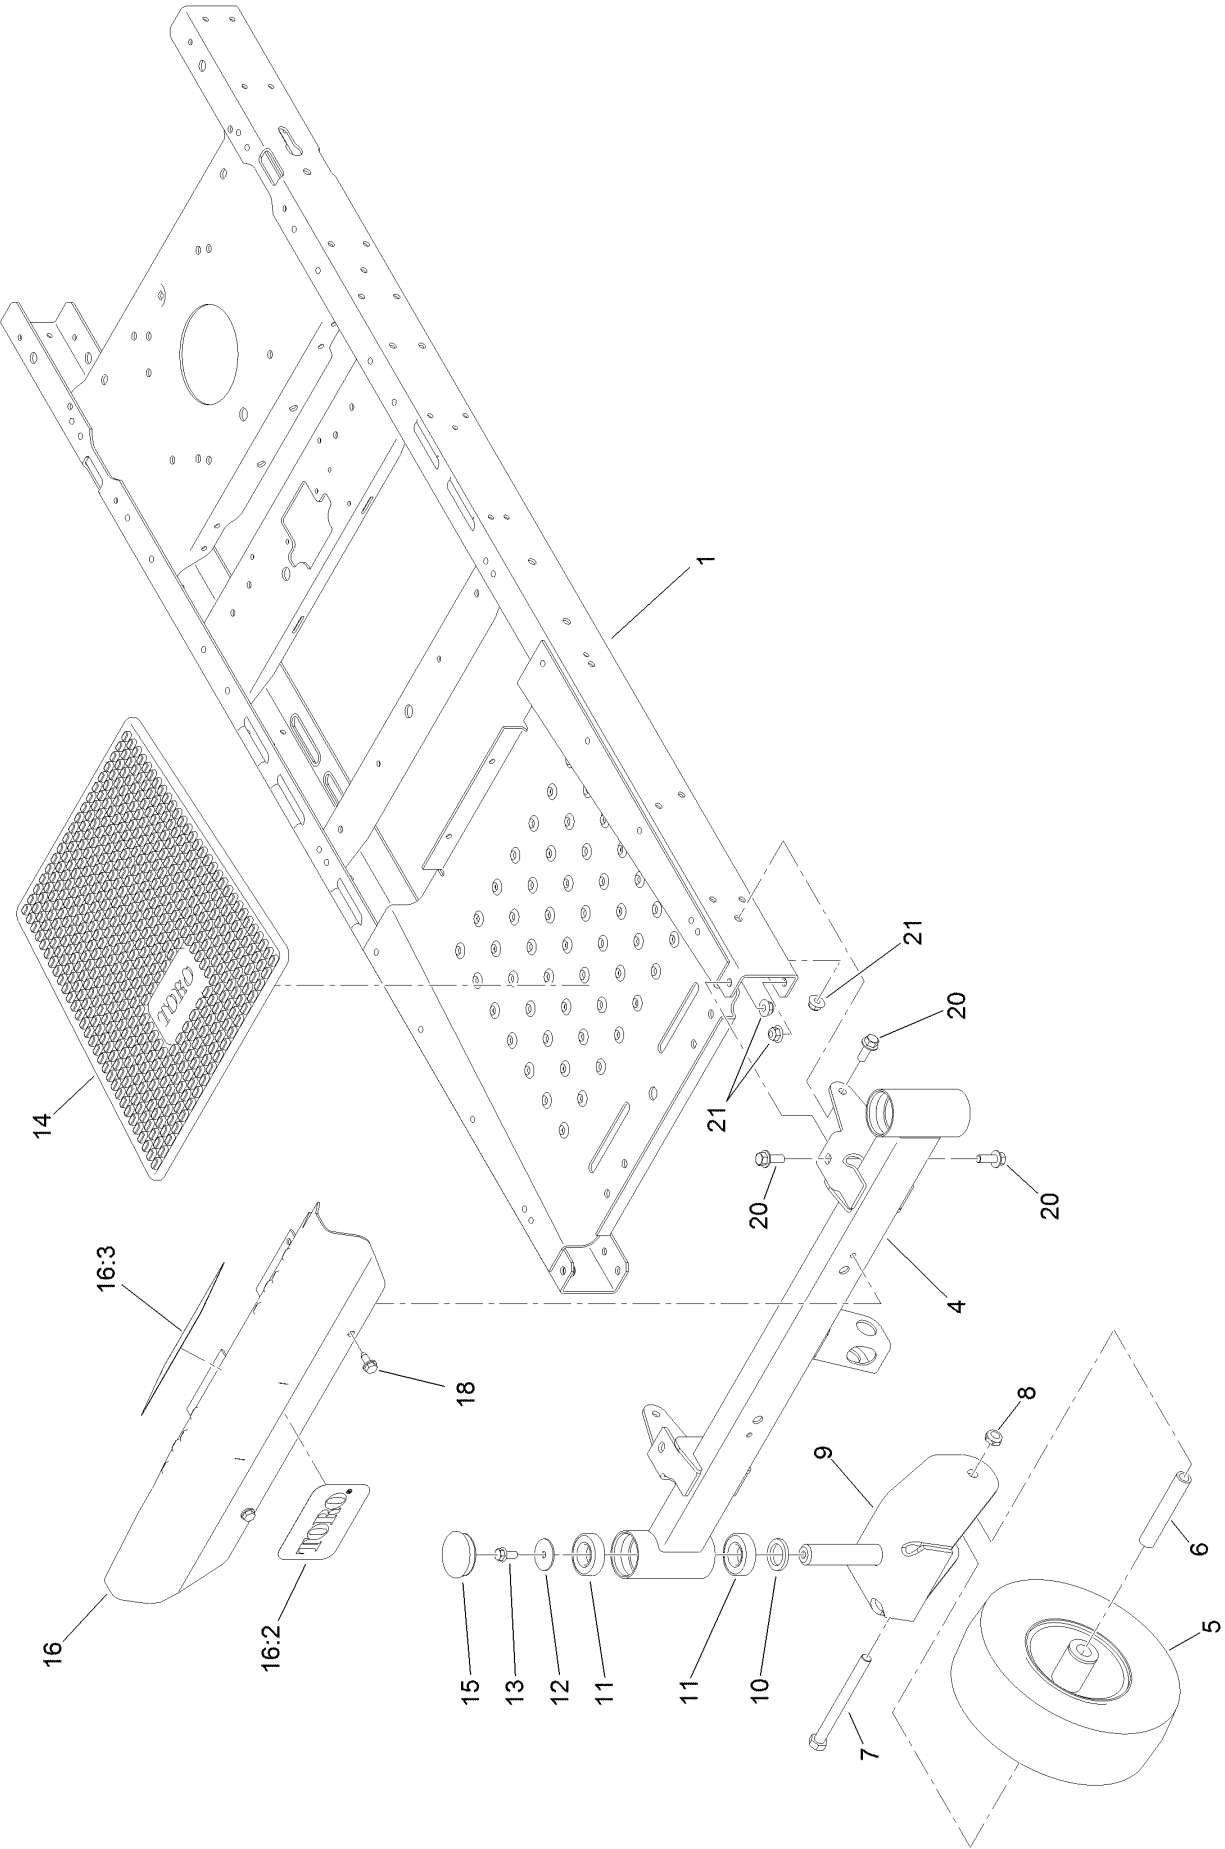

## Frame, Front Axle and Caster Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-3444-01        | 1           | Frame ASM          | 13          | 3234-47            | 2           | Screw-HHF          |
| 4           | 125-1742-01        | 1           | Axle-Front, Narrow | 15          | 116-4348           | 2           | Cap-Grease         |
| 5           | 130-0736           | 2           | Caster Wheel ASM   | 16          | 132-0890           | 1           | Footrest ASM       |
| 6           | 104-3667           | 2           | Bushing-Spanner    | 16:2        | 105-8278           | 1           | Decal              |
| 7           | 325-22             | 2           | Screw-HH           | 16:3        | 132-0869           | 1           | Decal-Danger       |
| 8           | 3296-45            | 2           | Nut-Lock, NI       | 18          | 32144-70           | 2           | Screw-HWHTF        |
| 9           | 120-2266-01        | 2           | Fork-Caster        | 20          | 3234-42            | 6           | Screw-HHF          |
| 10          | 117-7394           | 2           | Washer-Thrust      | 21          | 104-8301           | 6           | Nut-HF, NI         |
| 11          | 109-3678           | 4           | Bearing-Ball       | 14          | 120-5455           | 1           | Mat-Floor          |
| 12          | 3256-68            | 2           | Washer-Flat        |             |                    |             |                    |

# Caster Wheel Assembly No. 130-0736

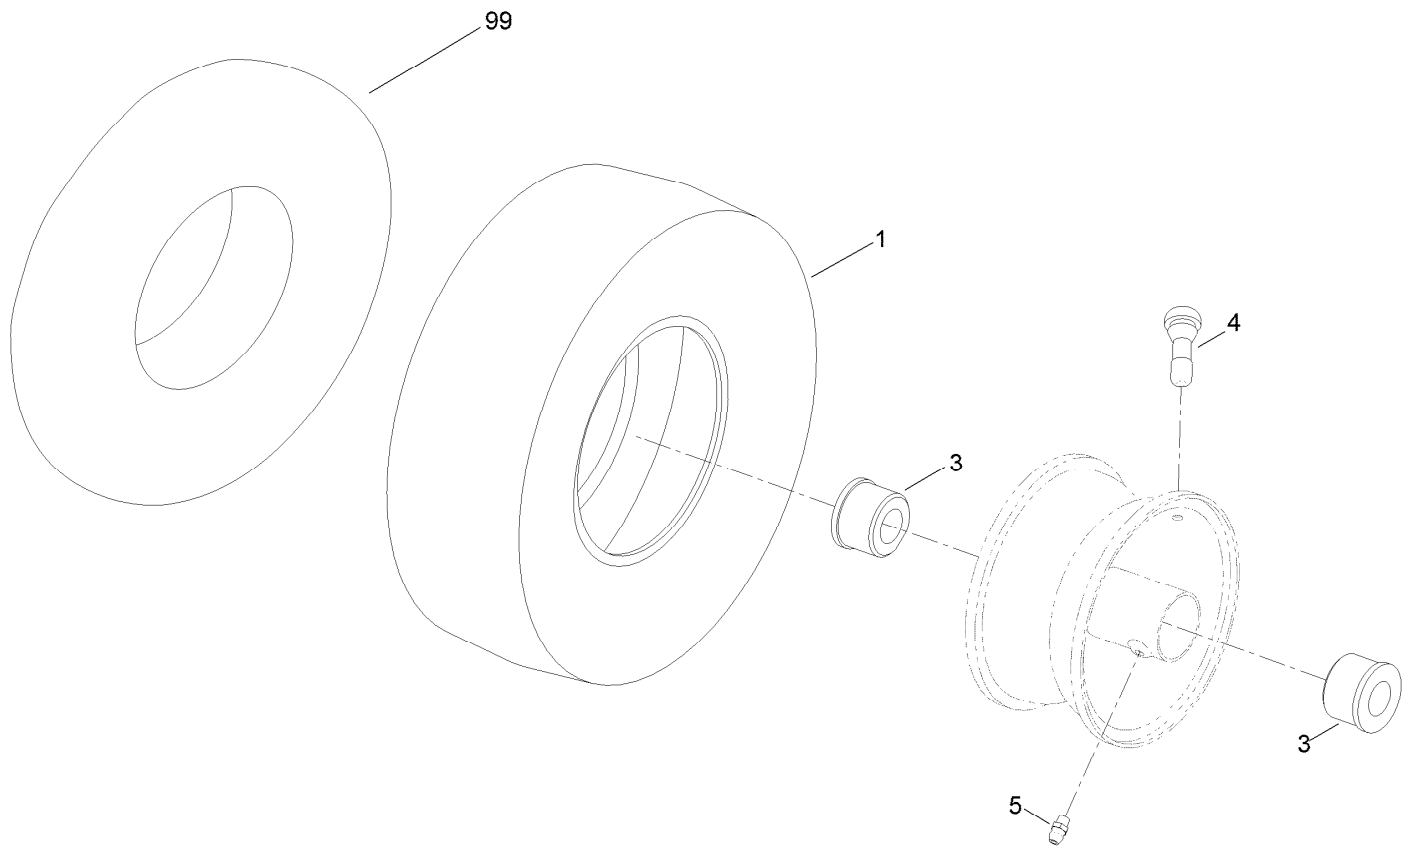


## Caster Wheel Assembly No. 130-0736 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 130-0735           | 1           | Tire               |
| 3           | 114-1640           | 2           | Bushing-Flange     |
| 4           | 232-27             | 1           | Stem-Valve         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 302-5              | 1           | Fitting-Grease     |
| 99          | 105-0844           | 1           | Tube-Inner         |

Deck Lift Assembly

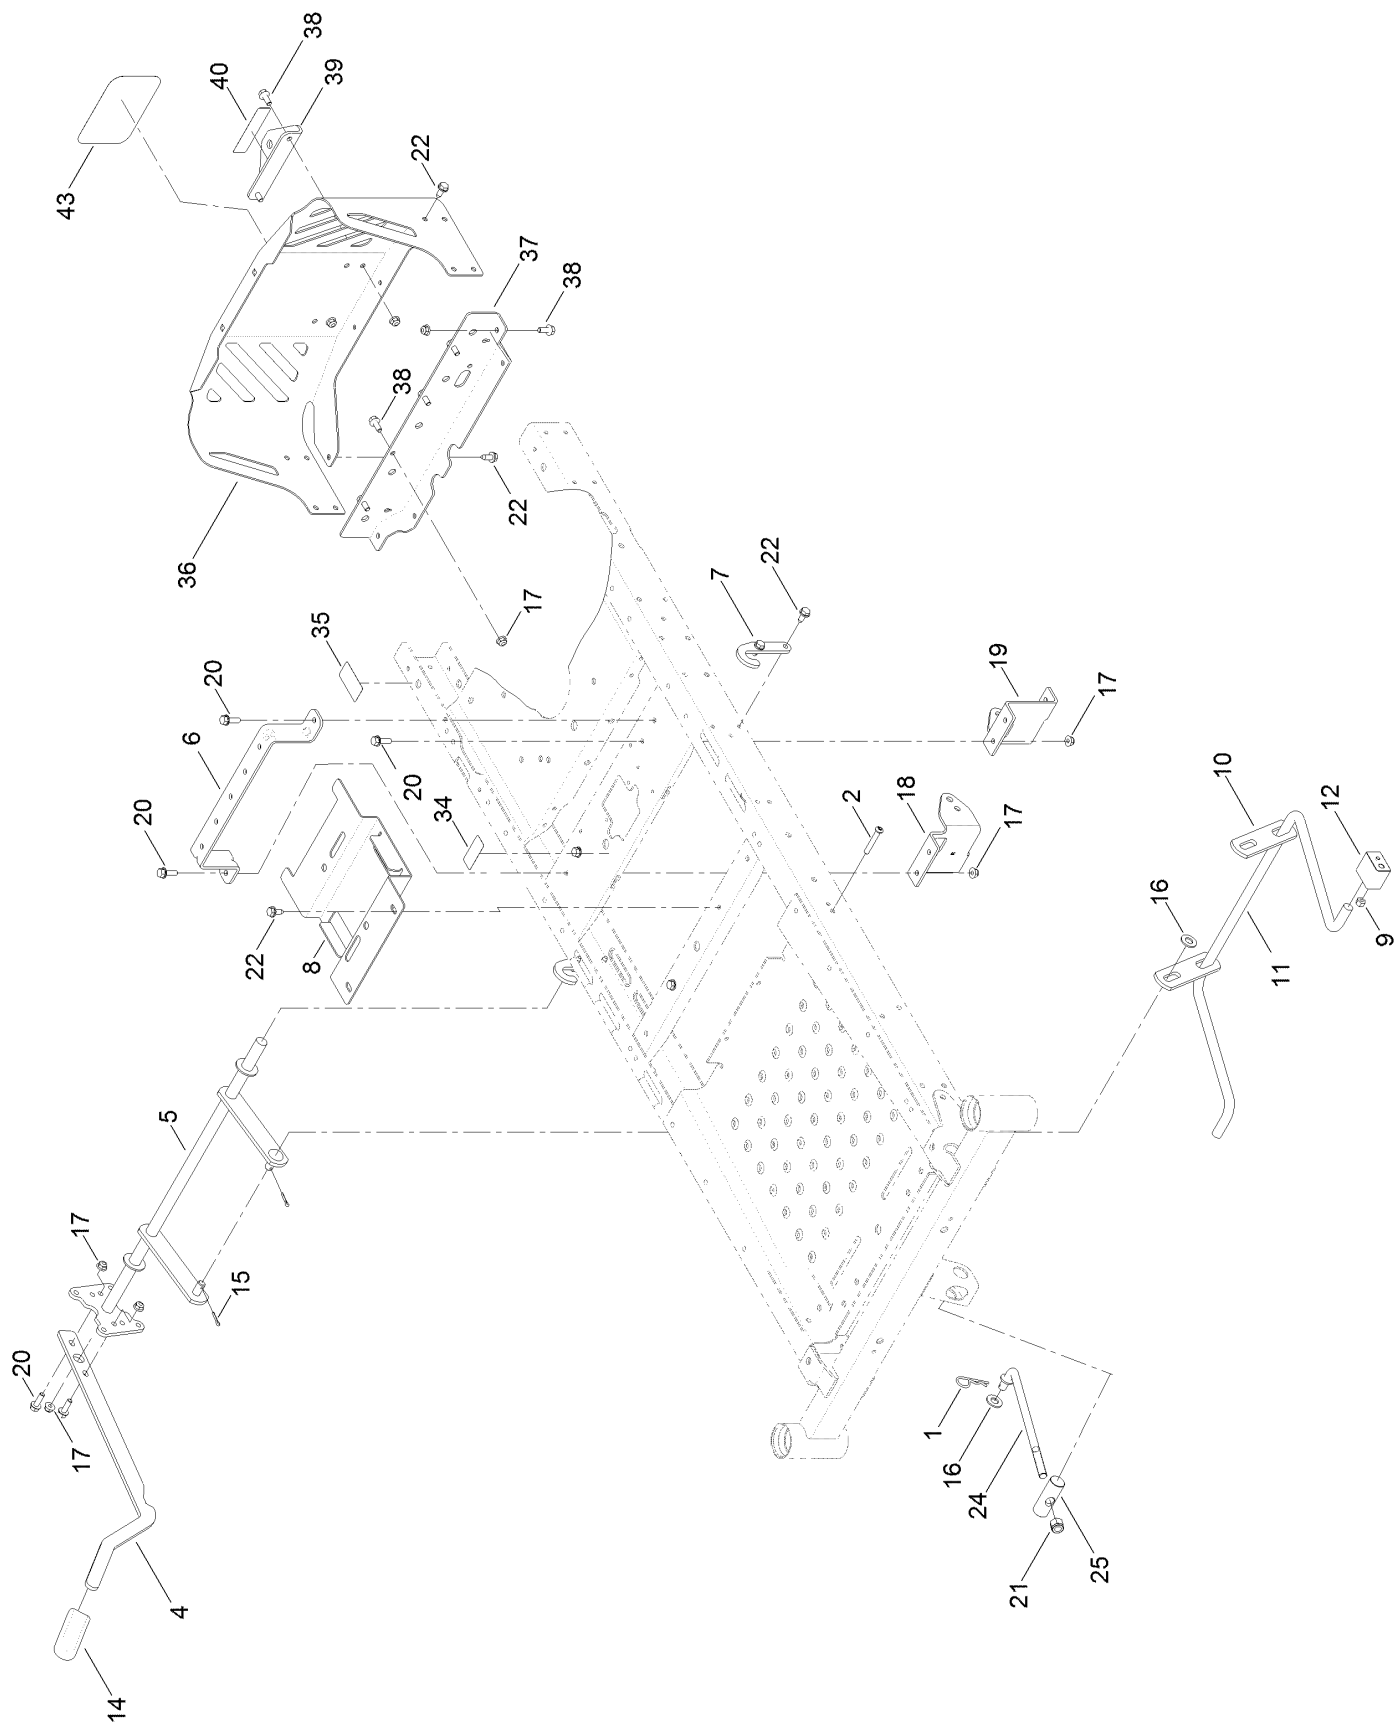




## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 1-806005           | 1           | Pin-Cotter                | 19          | 131-0902-01        | 1           | Mount-Hydro, Front (LH)        |
| 2           | 120-5499           | 2           | Screw-HSBH                | 20          | 3234-29            | 6           | Screw-HHF                      |
| 4           | 119-3427-03        | 1           | Lever-Lift                | 21          | 3296-19            | 1           | Nut-Hex                        |
| 5           | 117-7346-03        | 1           | Lift-Deck, Narrow         | 22          | 32144-70           | 16          | Screw-HWHTF                    |
| 6           | 119-3435-03        | 1           | Brace-Seat, Rear (Narrow) | 24          | 131-3945           | 1           | Rod-Mount, Deck                |
| 7           | 119-8875           | 2           | Bracket-Lift              | 25          | 119-8810           | 1           | Pin-Pivot                      |
| 8           | 131-0914-03        | 1           | Bracket-Battery           | 34          | 121-5684           | 1           | Decal-Location, Service Dealer |
| 9           | 3296-29            | 2           | Nut-Lock, NI              | 35          | 121-2989           | 2           | Decal-Bypass                   |
| 10          | 108-7840           | 2           | Link-Lift                 | 36          | 127-3353-03        | 1           | Guard-Engine, Narrow           |
| 11          | 108-7839           | 1           | Arm-Lift, Rear            | 37          | 130-6950-01        | 1           | Crossmember-Rear, Narrow       |
| 12          | 108-7845           | 2           | Block-Pivot               | 38          | 3234-47            | 8           | Screw-HHF                      |
| 14          | 1-633268           | 1           | Grip-Lever                | 39          | 117-1232-03        | 1           | Bracket-Hitch                  |
| 15          | 3272-11            | 2           | Pin-Cotter                | 40          | 131-4036           | 1           | Decal                          |
| 16          | 3256-26            | 3           | Washer-Flat               | 43          | 99-4693            | 1           | Decal                          |
| 17          | 104-8300           | 14          | Nut-HF, NI                |             |                    |             |                                |
| 18          | 131-0901-01        | 1           | Mount-Hydro, Front (RH)   |             |                    |             |                                |


# Motion Control Assembly

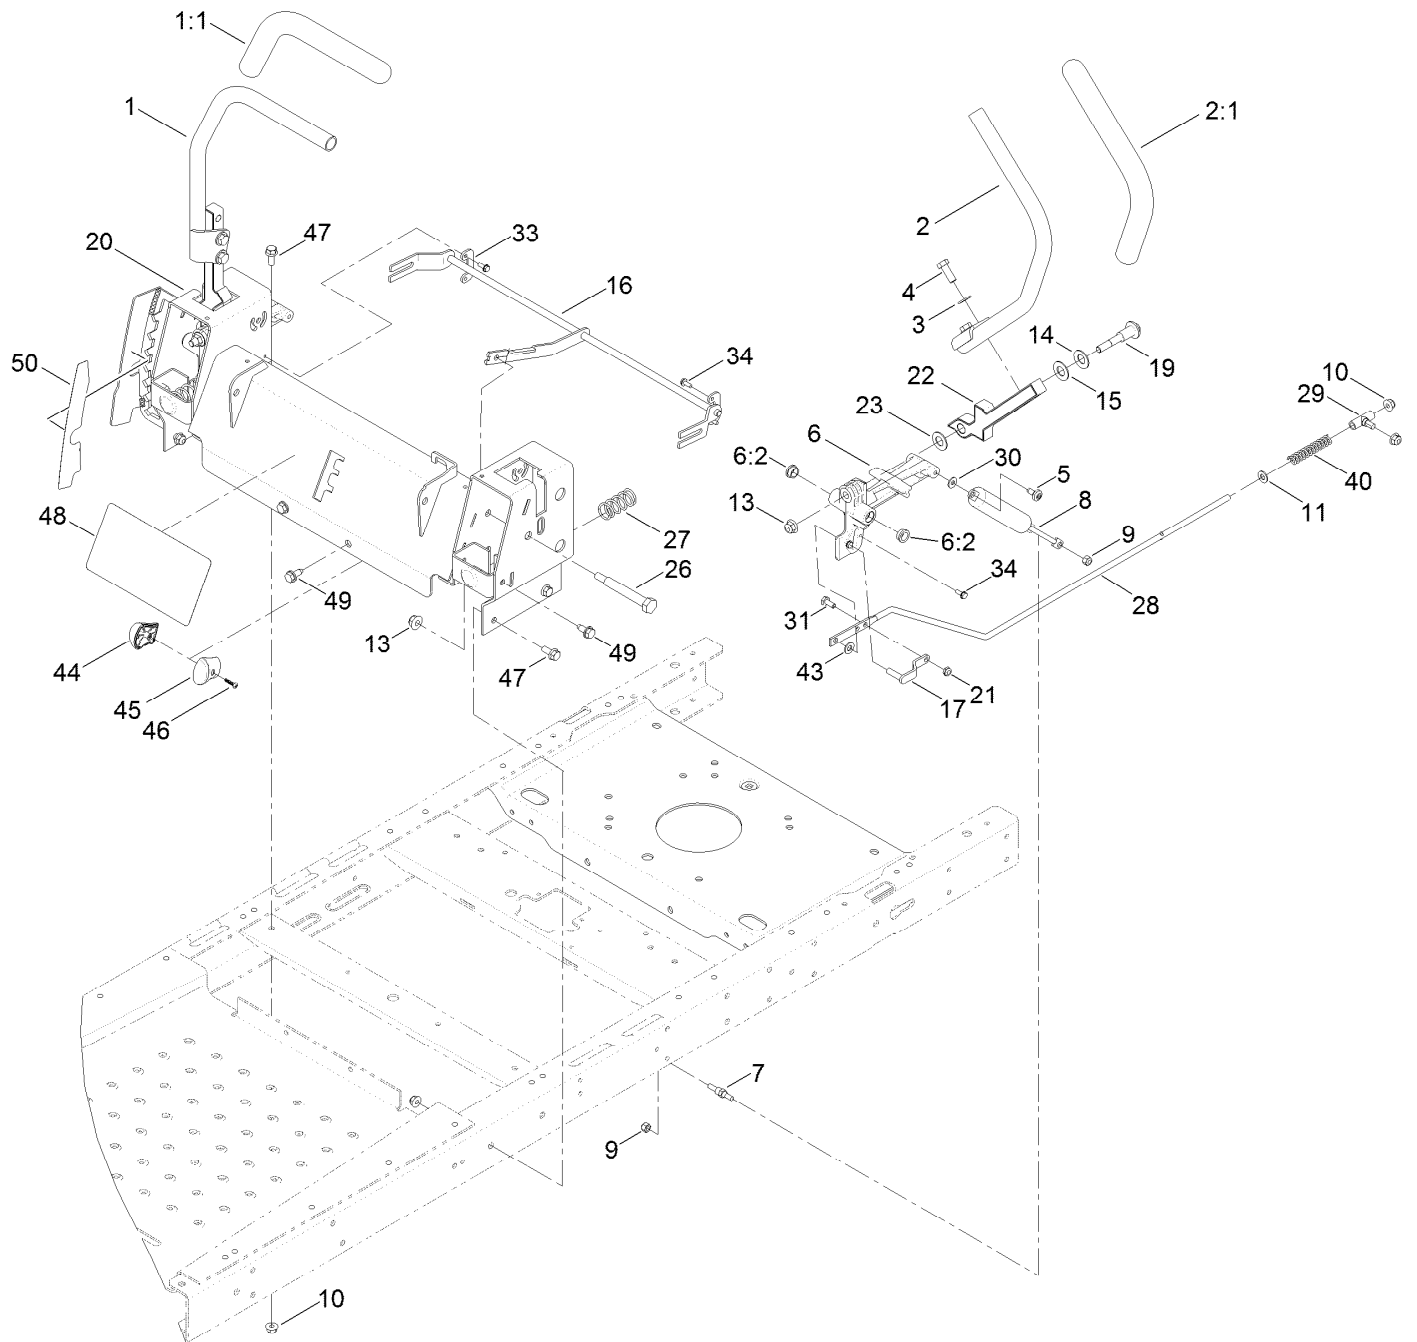

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-0731           | 1           | Handle-Control, RH | 21          | 3296-56            | 2           | Nut-Lock, NI           |
| 1:1         | 121-0726           | 1           | Grip               | 22          | 115-5098-05        | 2           | Lever-Control          |
| 2           | 121-0730           | 1           | Handle-Control, LH | 23          | 120-2273           | 2           | Washer-Nylon           |
| 2:1         | 121-0726           | 1           | Grip               | 26          | 115-5099           | 2           | Bolt-Pivot             |
| 3           | 3256-24            | 4           | Washer-Flat        | 27          | 119-8876           | 2           | Spring-Return          |
| 4           | 323-6              | 4           | Screw-HH           | 28          | 117-5388           | 2           | Rod-Hydro              |
| 5           | 120-7950           | 2           | Screw-Shoulder     | 29          | 119-8842           | 2           | Mount-Rod, Hydro       |
| 6           | 119-3470           | 2           | Actuator Arm ASM   | 30          | 119-8952           | 2           | Washer                 |
| 6:2         | 256-156            | 2           | Bushing-Flange     | 31          | 321-3              | 2           | Screw-HH               |
| 7           | 110-6810           | 2           | Stud-Damper        | 33          | 117-5385           | 2           | Retainer               |
| 8           | 131-4132           | 2           | Damper             | 34          | 32144-1            | 4           | Screw-Taptite          |
| 9           | 3296-42            | 4           | Nut-Lock, NI       | 40          | 1-603807           | 2           | Spring-Return, Neutral |
| 10          | 104-8300           | 10          | Nut-HF, NI         | 43          | 93-6079            | 2           | Spacer-Nylon           |
| 11          | 3256-23            | 2           | Washer-Plain       | 44          | 119-8935           | 1           | Knob-RH                |
| 13          | 104-8301           | 4           | Nut-HF, NI         | 45          | 119-8936           | 1           | Knob-LH                |
| 14          | 119-8925           | 2           | Washer-Belleville  | 46          | 94-4496            | 1           | Screw-PPH              |
| 15          | 117-1240           | 2           | Washer             | 47          | 3234-47            | 6           | Screw-HHF              |
| 16          | 131-1094           | 1           | Speed Control ASM  | 48          | 131-3947           | 1           | Decal-Control, Speed   |
| 17          | 119-3303           | 2           | Pin-Rod, Hydro     | 49          | 32144-70           | 4           | Screw-HWHTF            |
| 19          | 117-1198           | 2           | Bolt-Pivot         | 50          | 119-8871           | 1           | Decal-HOC              |
| 20          | 131-1093-03        | 1           | Control Box ASM    |             |                    |             |                        |

# Brake Assembly

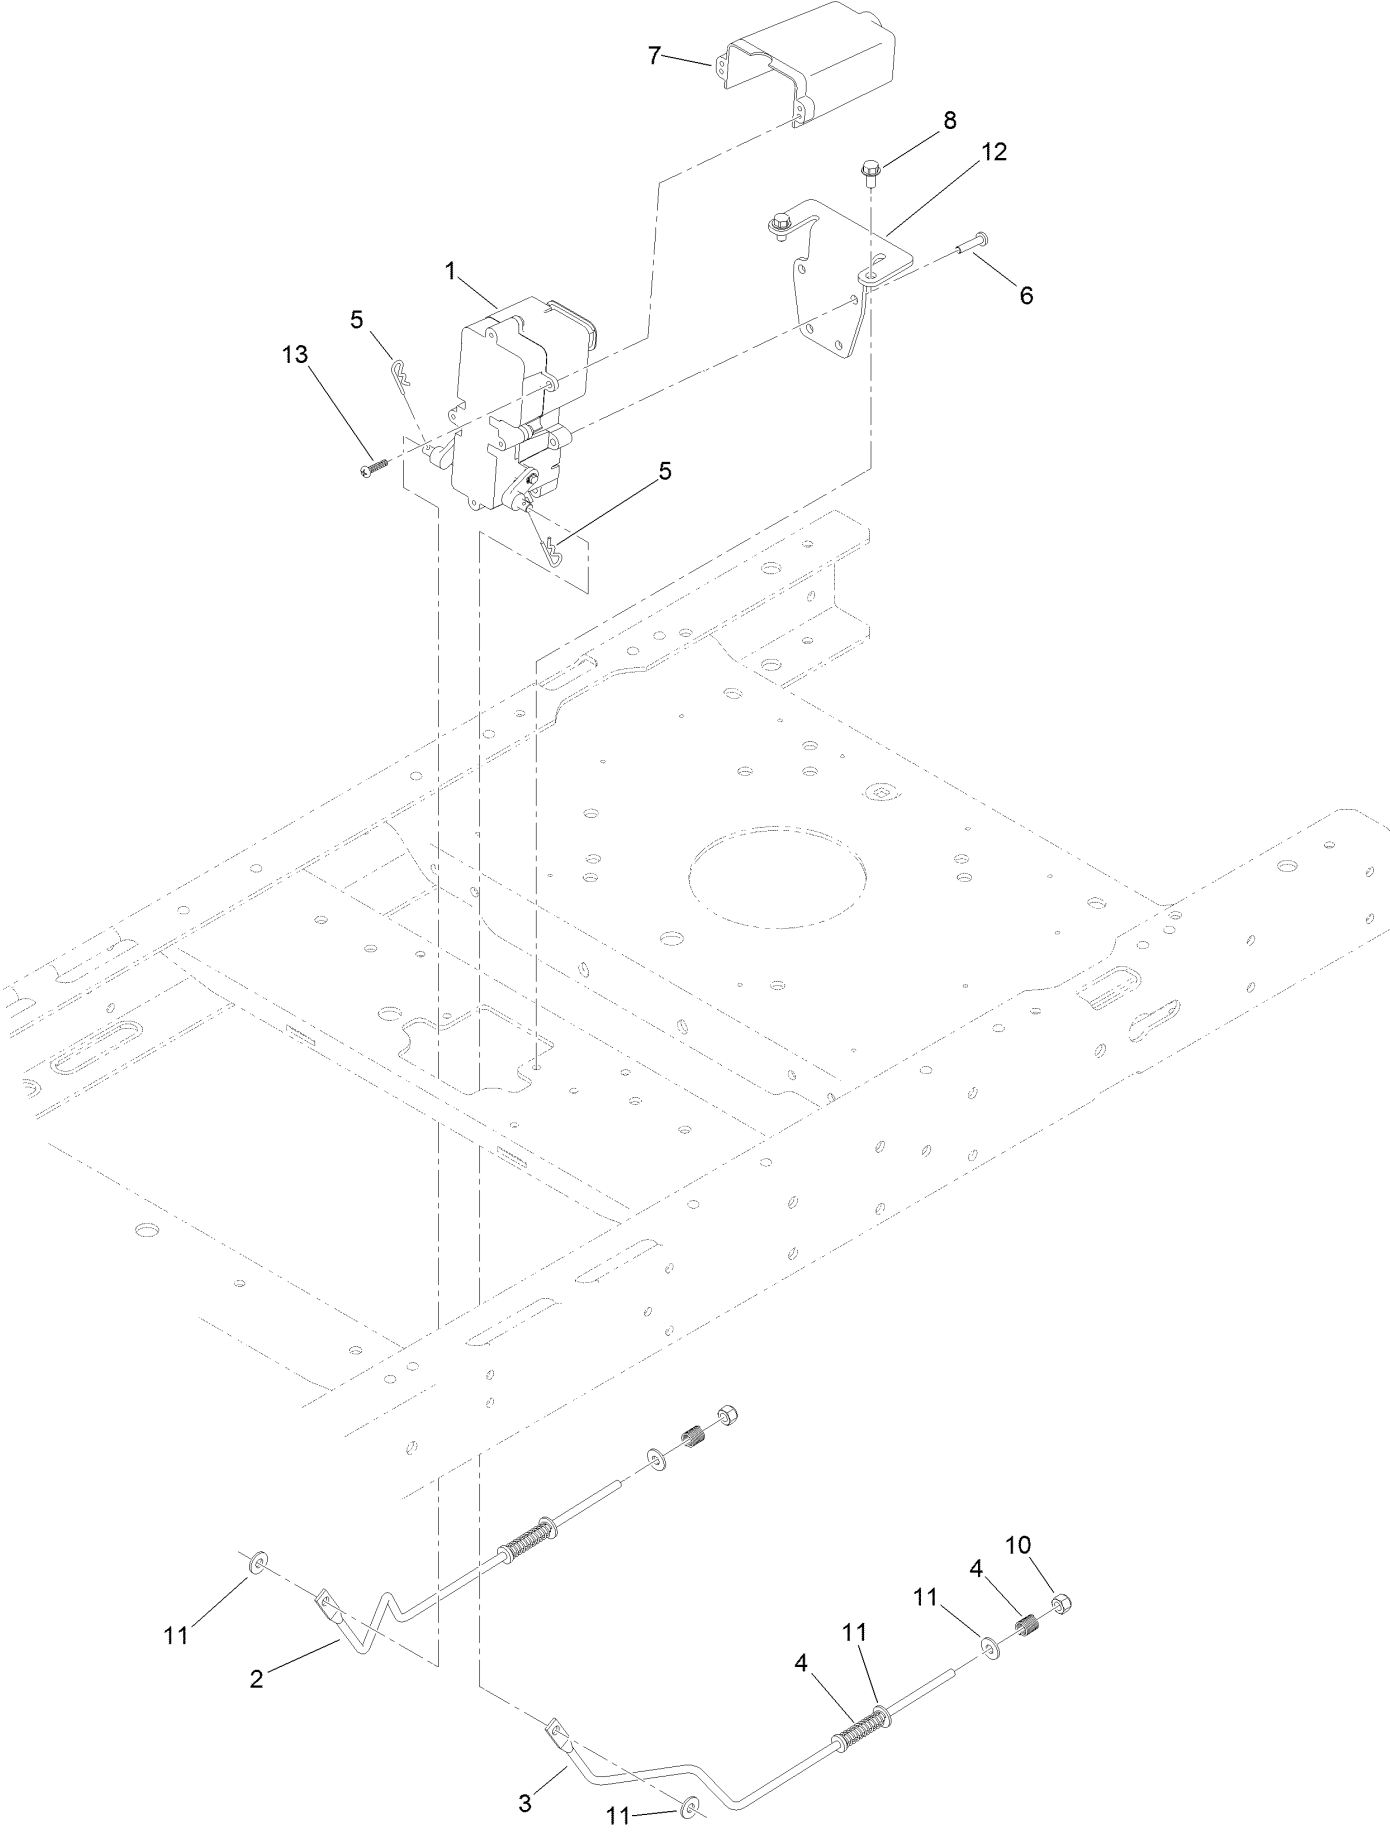


## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 130-6892           | 1           | Brake Box ASM      |
| 2           | 121-2974           | 1           | Rod-Brake, RH      |
| 3           | 121-2975           | 1           | Rod-Brake, LH      |
| 4           | 117-1169           | 4           | Spring-Compression |
| 5           | 3290-307           | 2           | Pin-Cotter         |
| 6           | 32144-36           | 4           | Screw-PPH          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 7           | 130-6974           | 1           | Cover-Connector      |
| 8           | 32144-4            | 2           | Screw-HWH            |
| 10          | 3296-42            | 2           | Nut-Lock, NI         |
| 11          | 119-8952           | 6           | Washer               |
| 12          | 130-0790-03        | 1           | Bracket-Mount, Brake |
| 13          | 94-4496            | 2           | Screw-PPH            |


# Seat Assembly

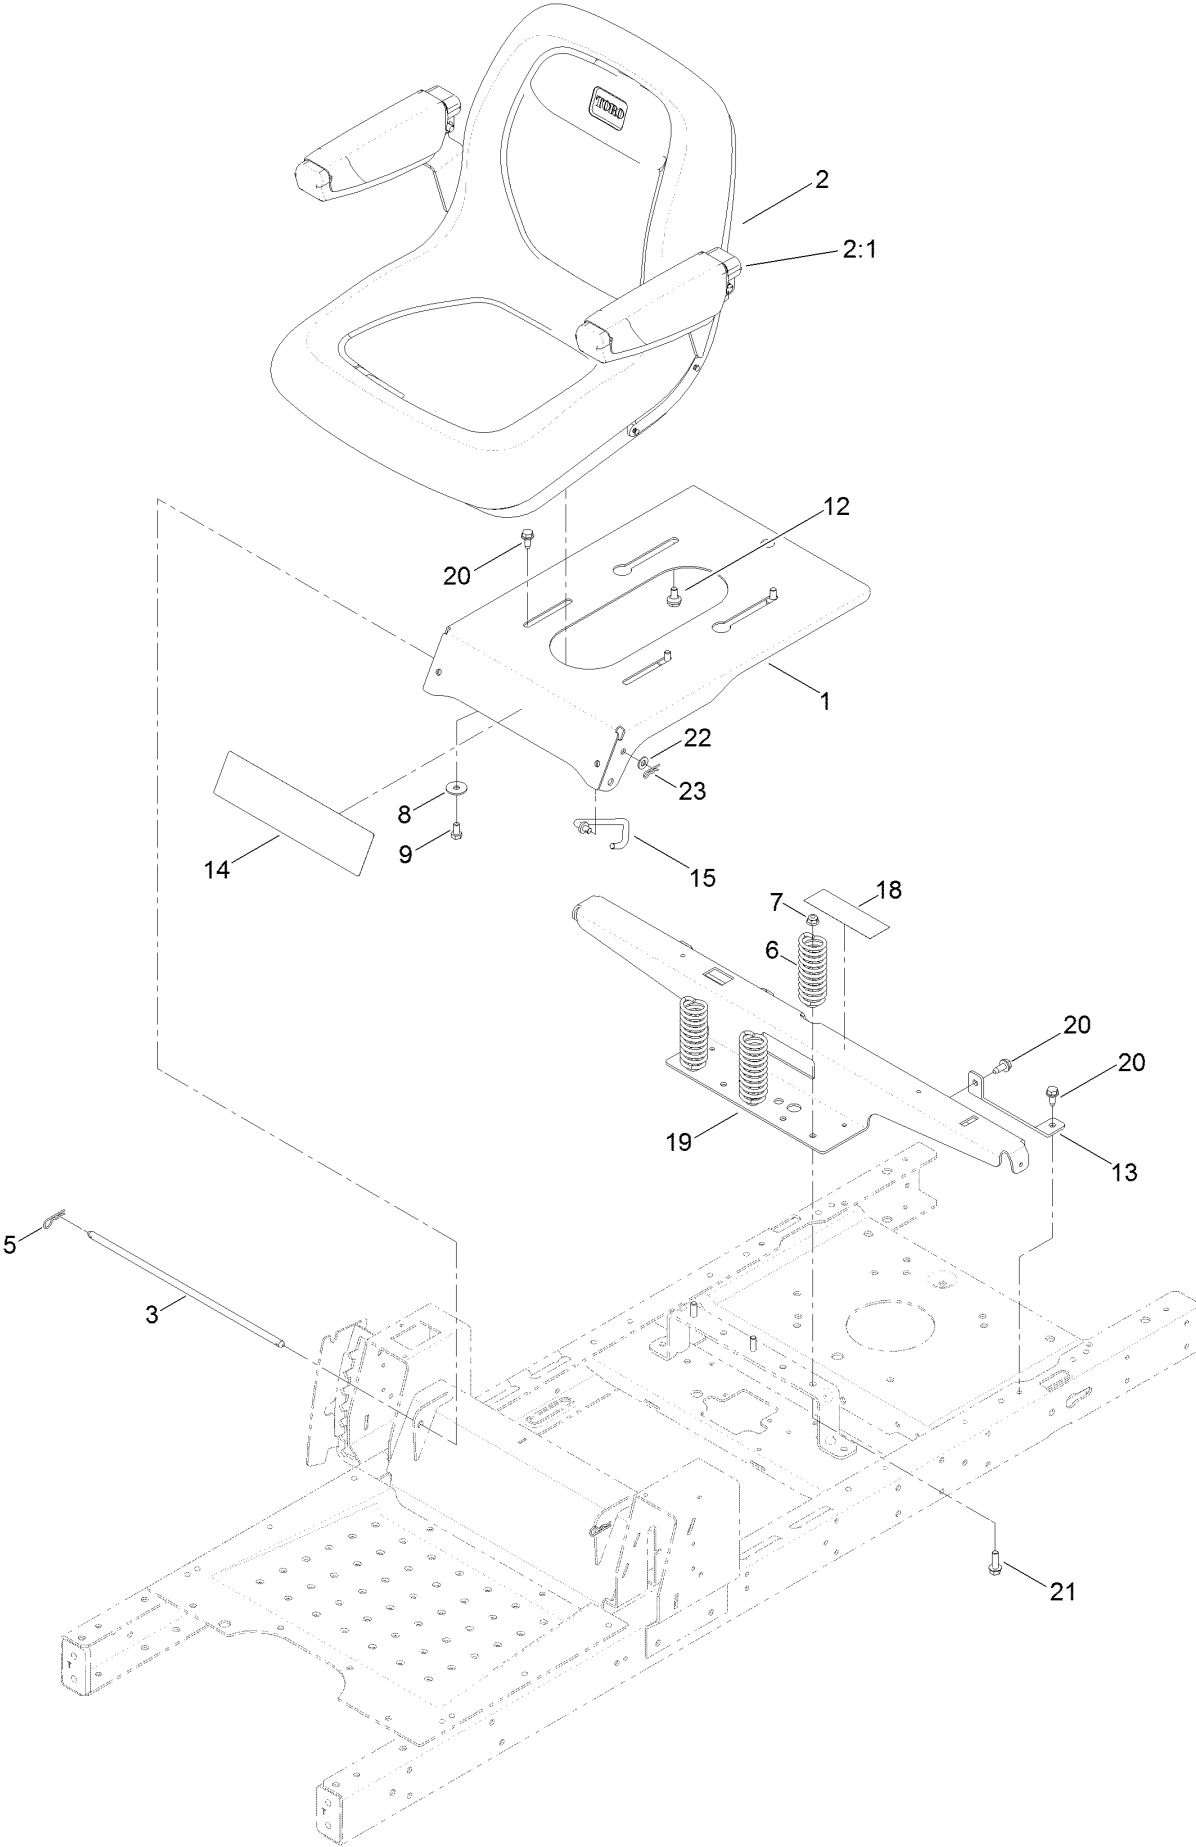

## Seat Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3391-01        | 1           | Pan-Seat             | 13          | 119-3431-03        | 2           | Support-Tank, Rear |
| 2           | 119-8830           | 1           | Seat-18 Inch         | 14          | 131-3651           | 1           | Decal-Timecutter   |
| 2:1         | 105-6978           | 1           | Armrest Kit (Milsco) | 15          | 119-8972           | 1           | Stop-Seat          |
| 3           | 119-3433           | 1           | Rod-Pivot, Narrow    | 18          | 106-8717           | 1           | Decal-Service, CE  |
| 5           | 3290-250           | 2           | Pin-Cotter           | 19          | 131-1040-03        | 1           | Support-Pod        |
| 6           | 92-7054            | 3           | Spring-Compression   | 20          | 32144-70           | 4           | Screw-HWHTF        |
| 7           | 104-8300           | 3           | Nut-HF, NI           | 21          | 3234-29            | 3           | Screw-HHF          |
| 8           | 5-4460             | 2           | Washer-Pivot         | 22          | 3256-23            | 1           | Washer-Plain       |
| 9           | 322-2              | 2           | Screw-HH             | 23          | 3290-307           | 1           | Pin-Cotter         |
| 12          | 37-8771            | 2           | Bolt-Shoulder        |             |                    |             |                    |

# Belt and Idler Assembly

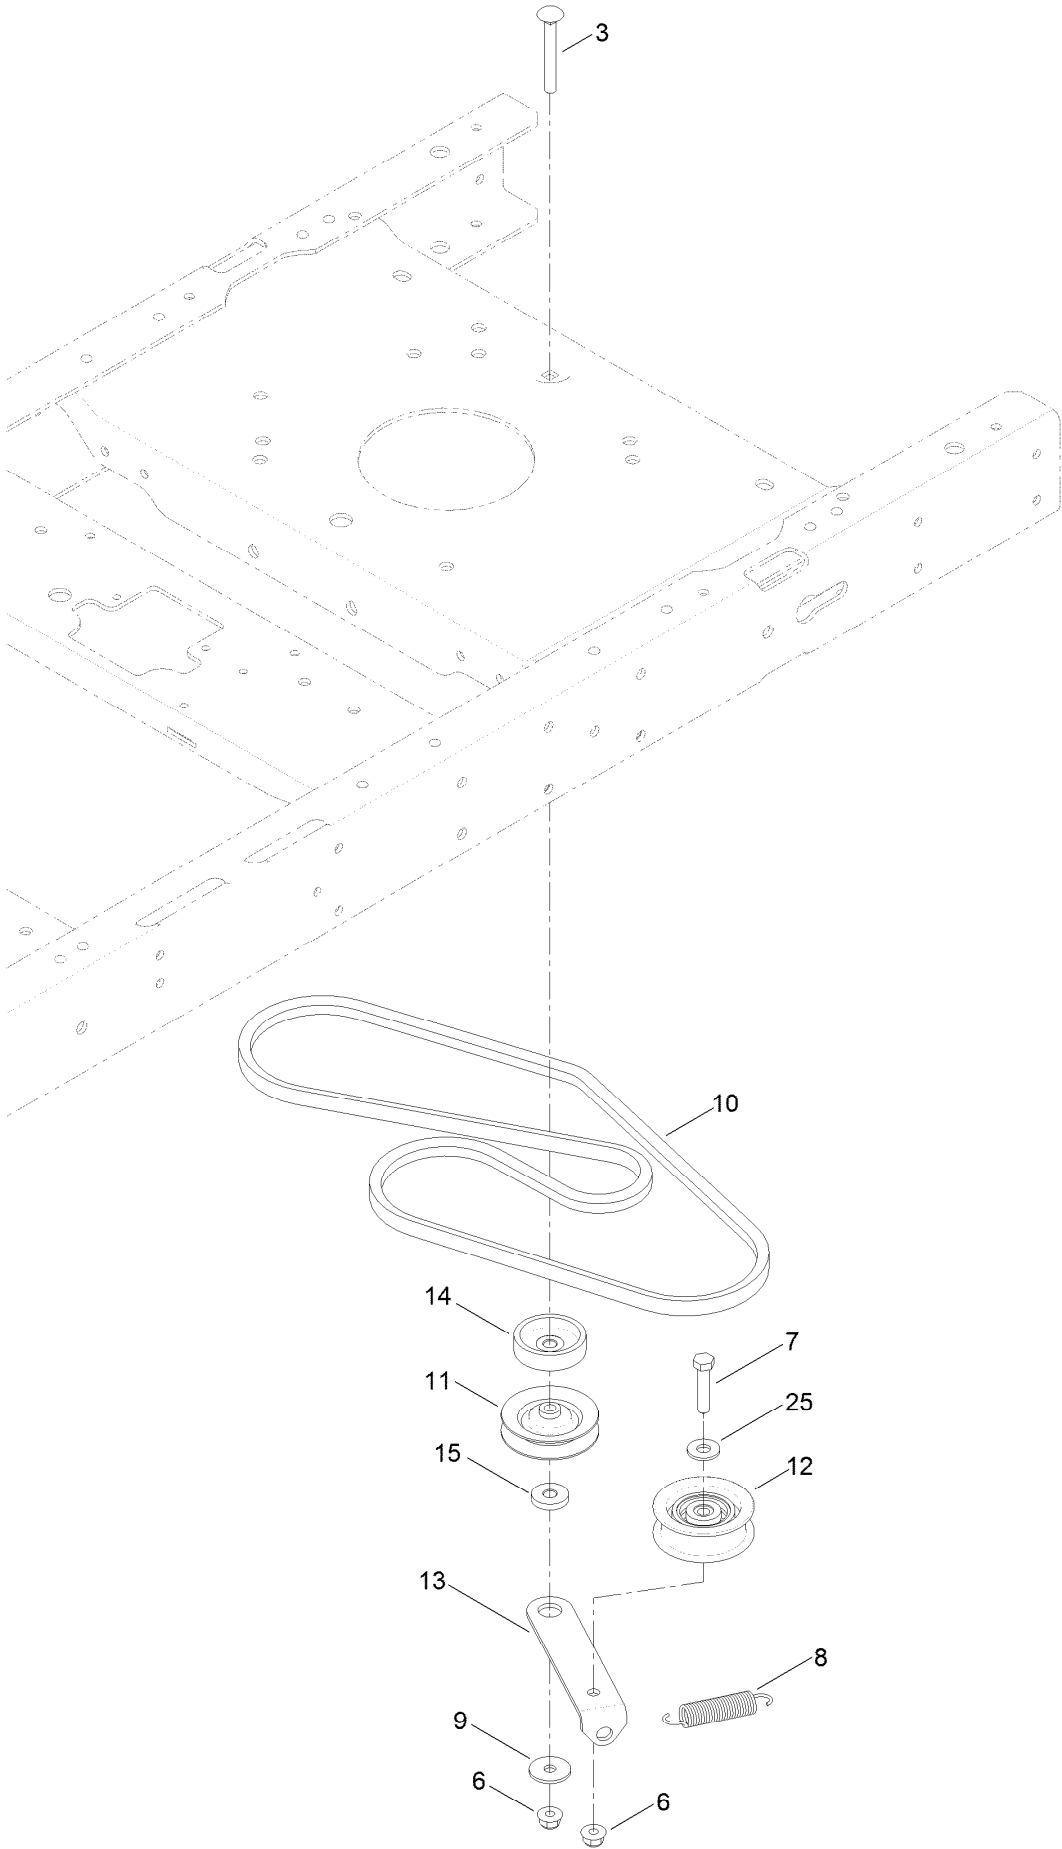




## Belt and Idler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 3           | 3230-8             | 1           | Screw-CARR           | 11          | 119-8822           | 1           | Pulley-Idler       |
| 6           | 104-8300           | 2           | Nut-HF, NI           | 12          | 106-2176           | 1           | Pulley-Idler       |
| 7           | 322-7              | 1           | Screw-HH             | 13          | 119-3326           | 1           | Arm-Idler          |
| 8           | 104-6415           | 1           | Spring-Return, Pedal | 14          | 119-3353           | 1           | Spacer             |
| 9           | 5-4460             | 1           | Washer-Pivot         | 15          | 119-3327           | 1           | Spacer-Arm, Idler  |
| 10          | 130-6975           | 1           | V-Belt               | 25          | 3256-3             | 1           | Washer-Flat        |


# Hydro Transaxle Assembly

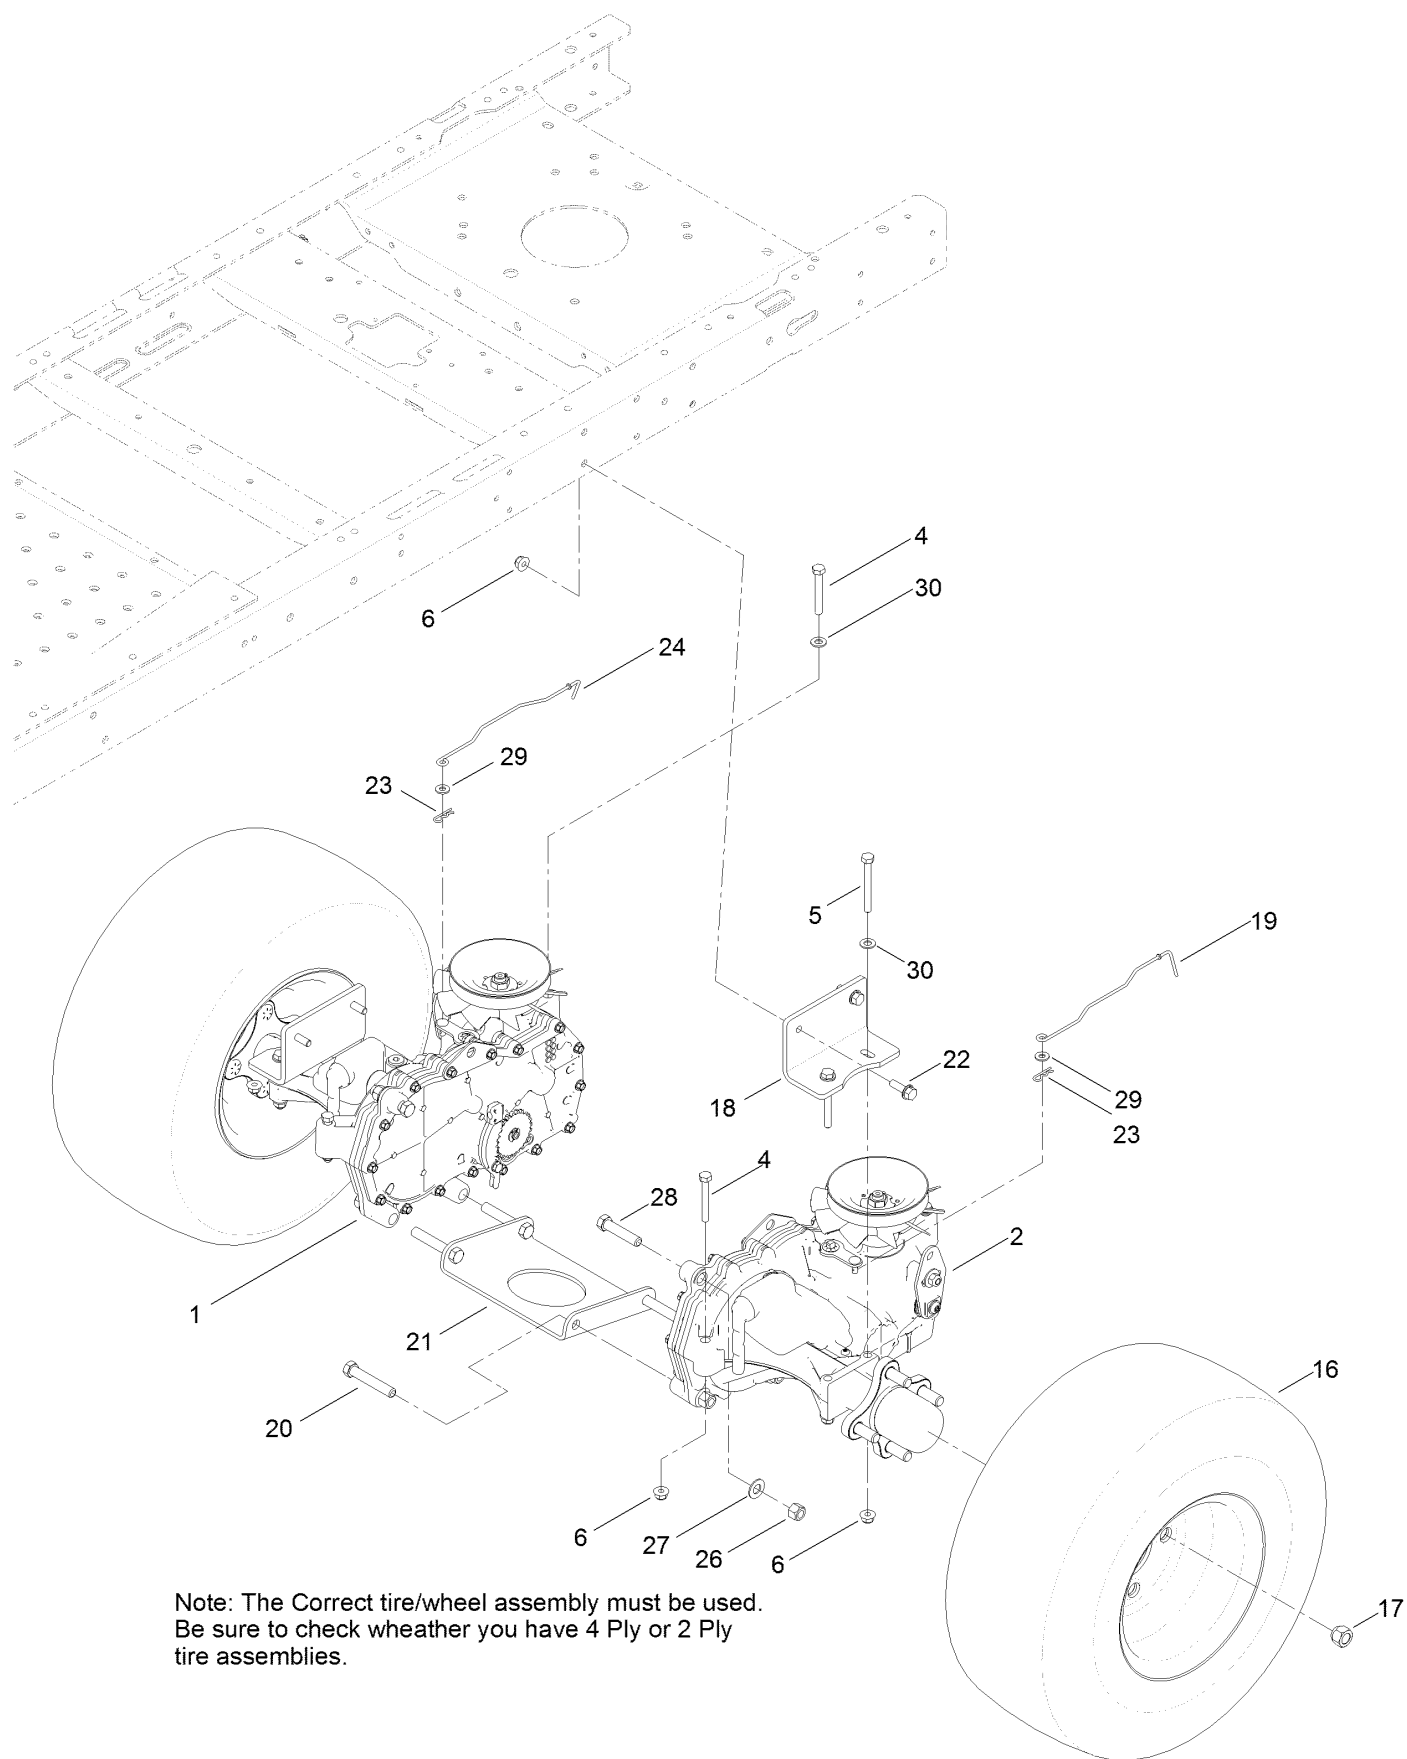

## Hydro Transaxle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3331           | 1           | RH Hydro Transaxle ASM   | 20          | 324-10             | 4           | Screw-HH           |
| 2           | 119-3330           | 1           | LH Hydro Transaxle ASM   | 21          | 119-3339-03        | 1           | Plate-Cross, Hydro |
| 4           | 322-11             | 4           | Screw-HH                 | 22          | 3234-29            | 4           | Screw-HHF          |
| 5           | 322-13             | 4           | Screw-HH                 | 23          | 3290-307           | 2           | Pin-Cotter         |
| 6           | 104-8300           | 12          | Nut-HF, NI               | 24          | 130-7049           | 1           | Rod-Bypass, RH     |
| 16          | 120-5523           | 2           | 4 Ply Wheel And Tire ASM | 26          | 3296-48            | 6           | Nut-Lock, NI       |
| 16          | 131-3671           | 2           | 2 Ply Wheel And Tire ASM | 27          | 3256-25            | 6           | Washer-Flat        |
| 17          | 242-50             | 8           | Nut-Lug                  | 28          | 324-8              | 2           | Screw-HH           |
| 18          | 117-7264-03        | 2           | Mount-Hydro              | 29          | 119-8952           | 2           | Washer             |
| 19          | 131-0900           | 1           | Rod-Bypass, LH           | 30          | 3256-23            | 6           | Washer-Plain       |

# Right Hand Hydro Transaxle Assembly No. 119-3331

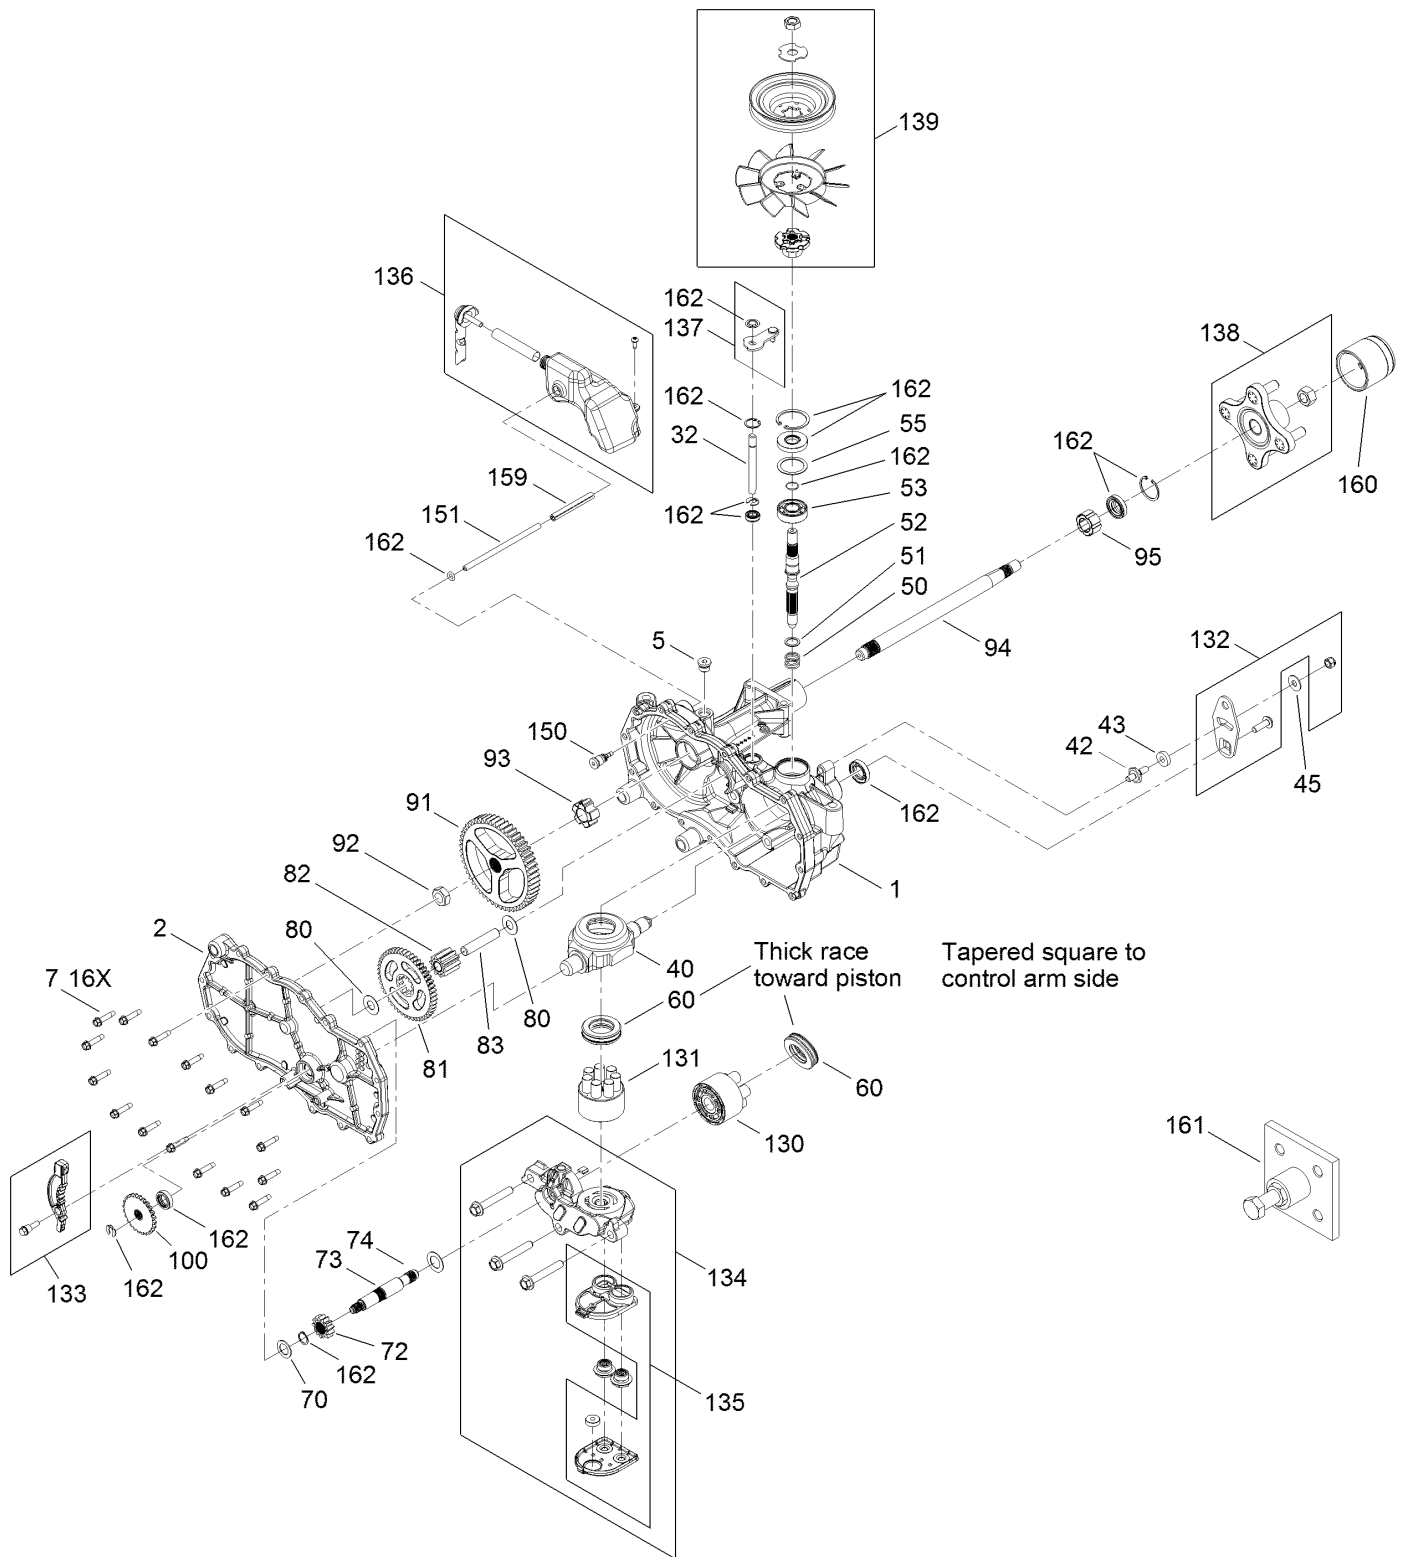


# Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5531           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5533           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Control Arm Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9862           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5735           | 1           | LH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 107-2489           | 1           | Bypass Arm Kit            |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Puller-Hub, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated

# Left Hand Hydro Transaxle Assembly No. 119-3330

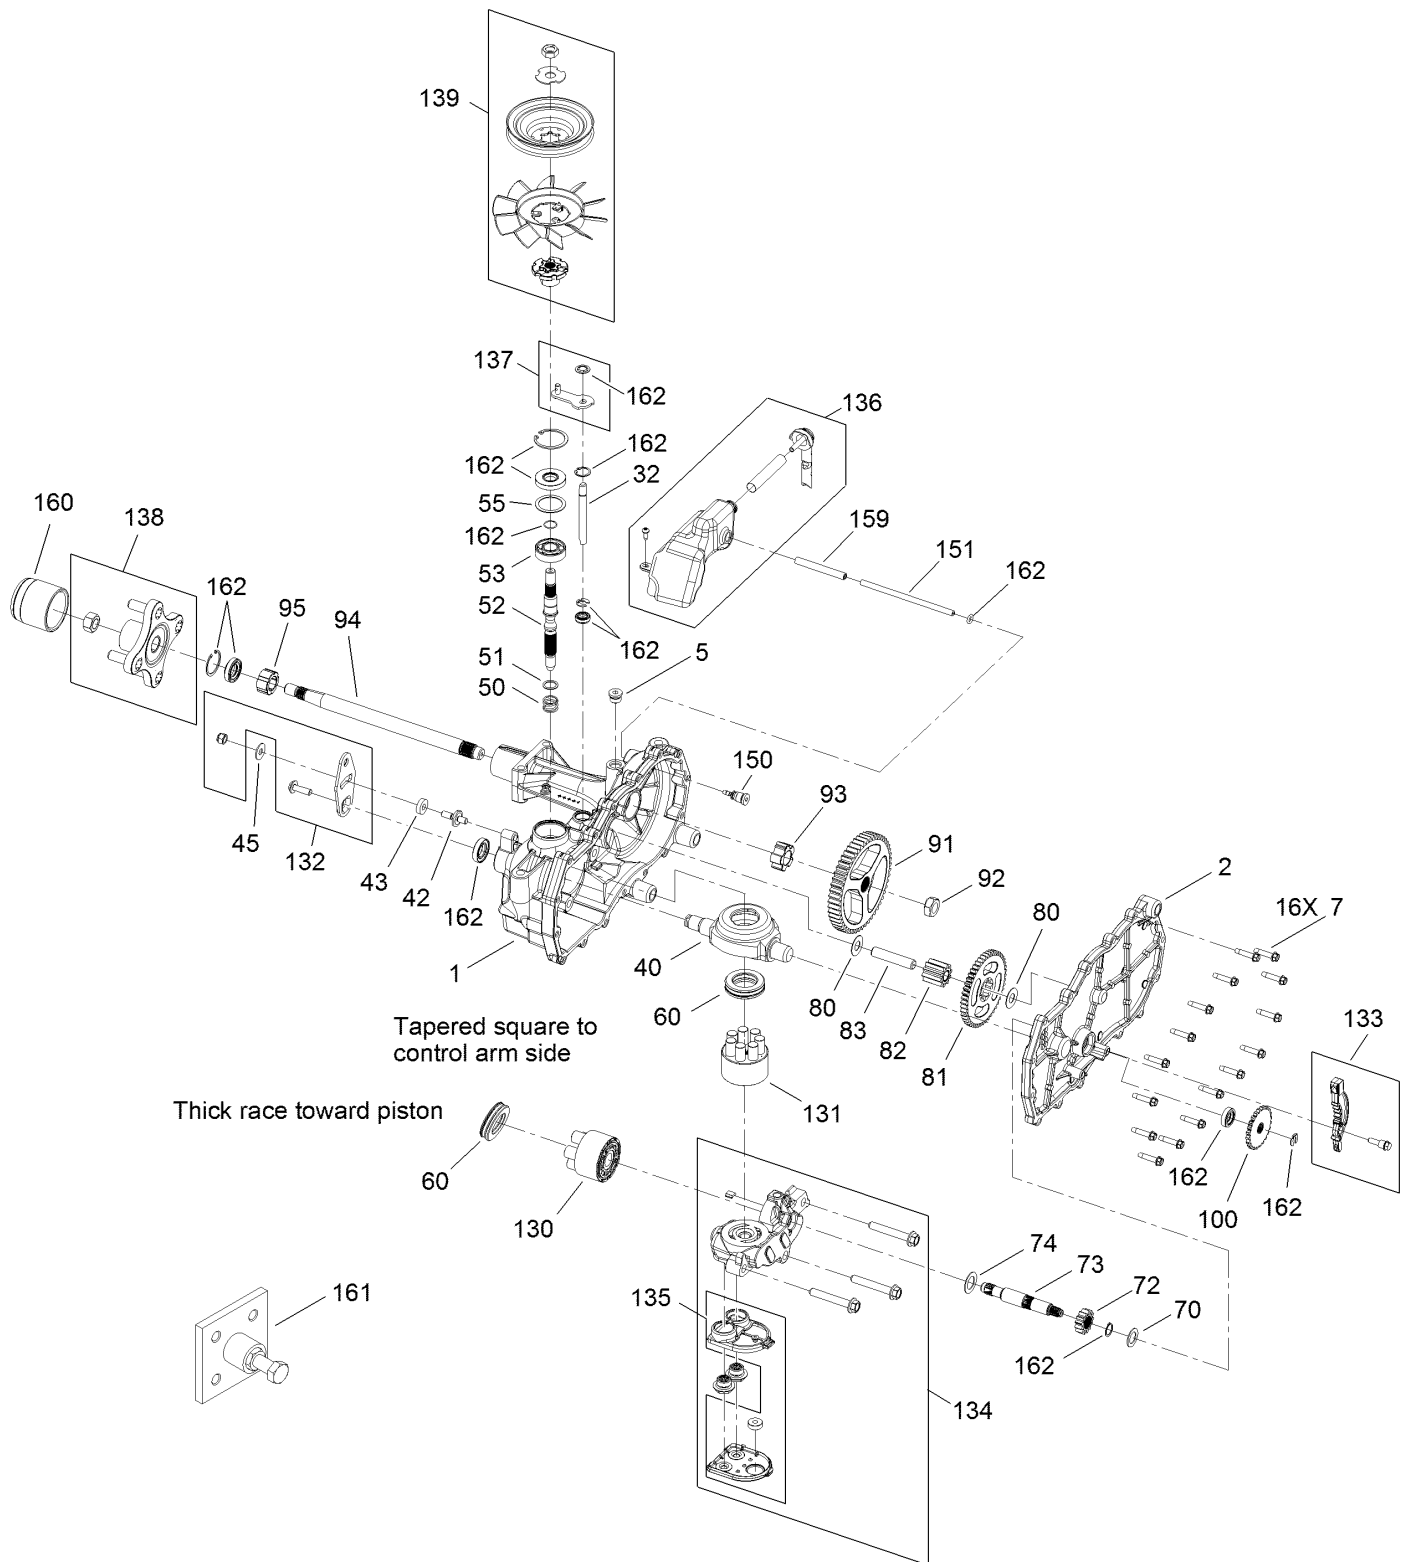


# Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5532           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5534           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Control Arm Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9861           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5730           | 1           | RH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 120-5549           | 1           | Bypass Kit                |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Puller-Hub, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated

## 4 Ply Wheel and Tire Assembly No. 120-5523

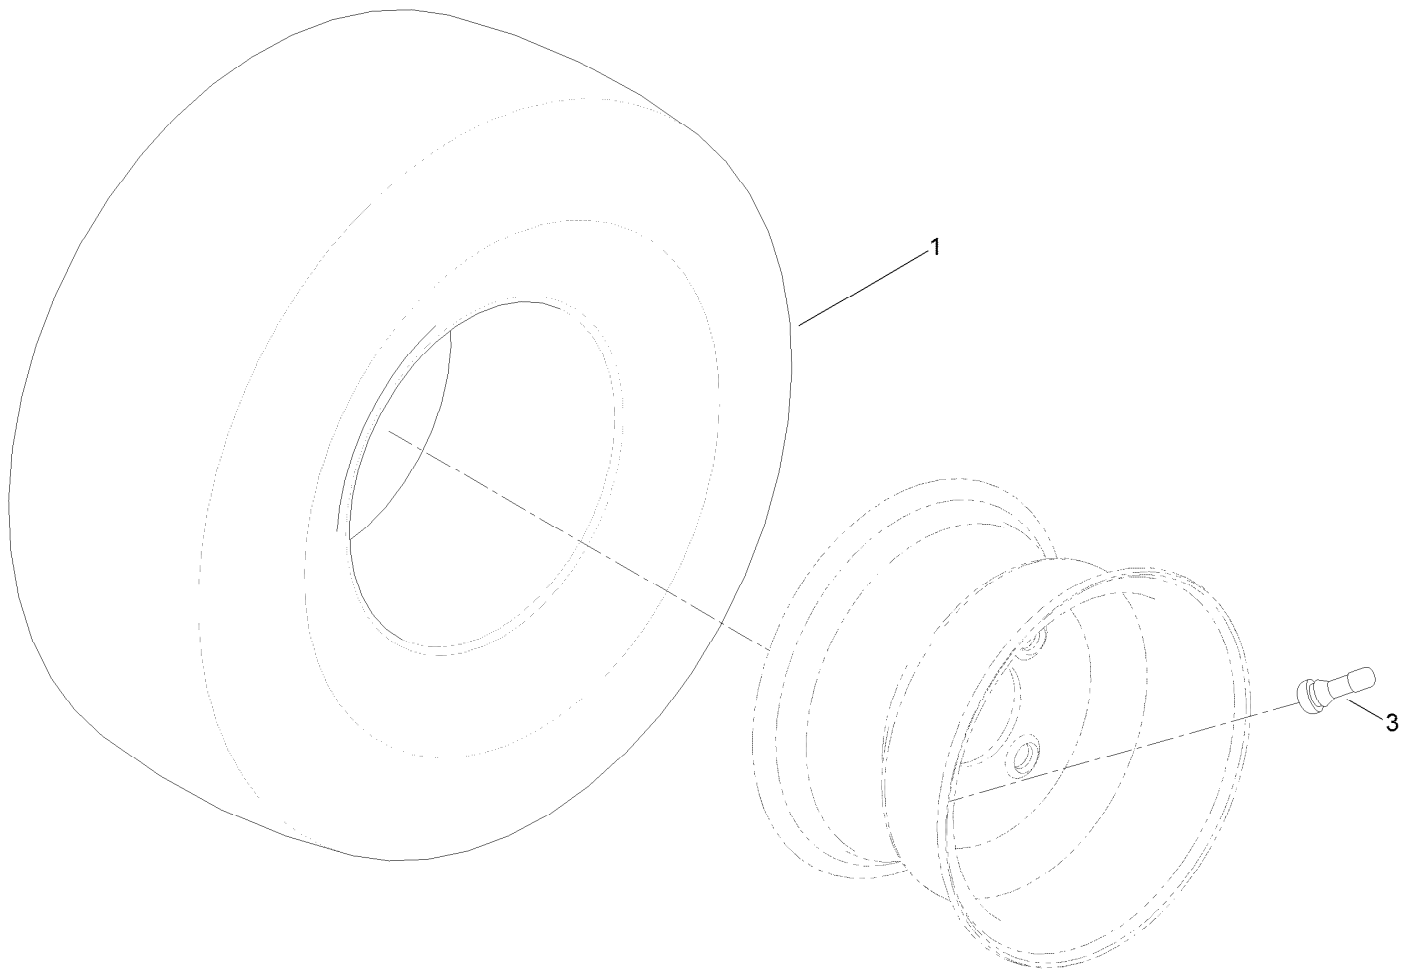




## 4 Ply Wheel and Tire Assembly No. 120-5523 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-8907           | 1           | Tire-4 Ply         |
| 3           | 232-27             | 1           | Stem-Valve         |
| 99          | 107-2491           | 1           | Tube-Tire ●        |

● Not illustrated

## 2 Ply Wheel and Tire Assembly No. 131-3671

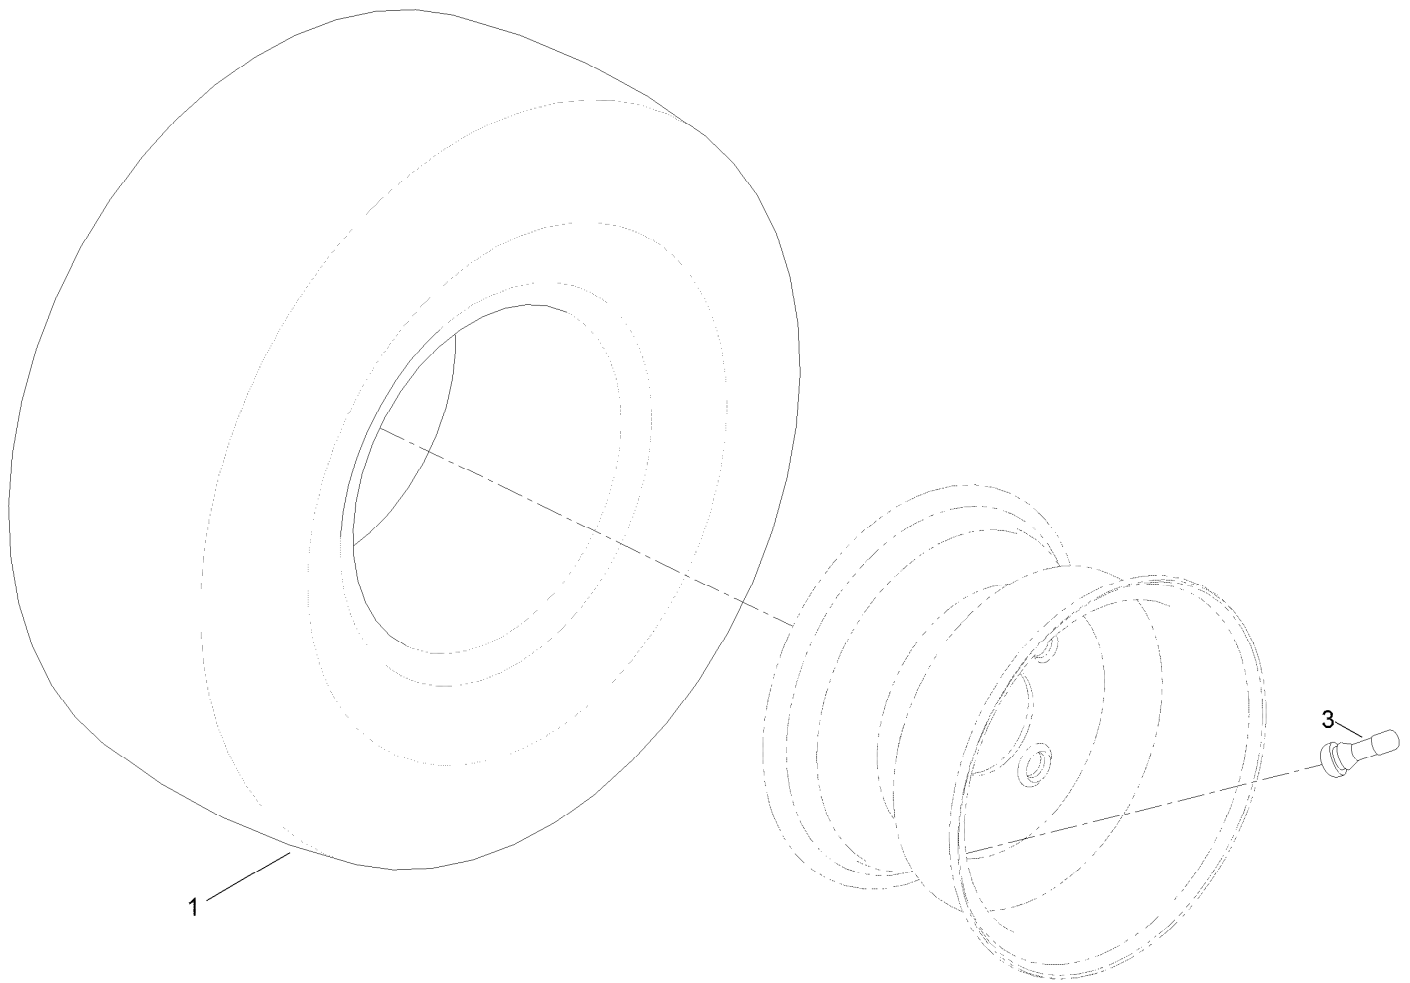


## 2 Ply Wheel and Tire Assembly No. 131-3671 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 131-3678           | 1           | Tire-2 Ply         |
| 3           | 232-27             | 1           | Stem-Valve         |
| 99          | 107-2491           | 1           | Tube-Tire ●        |

● Not illustrated


# Clutch Assembly

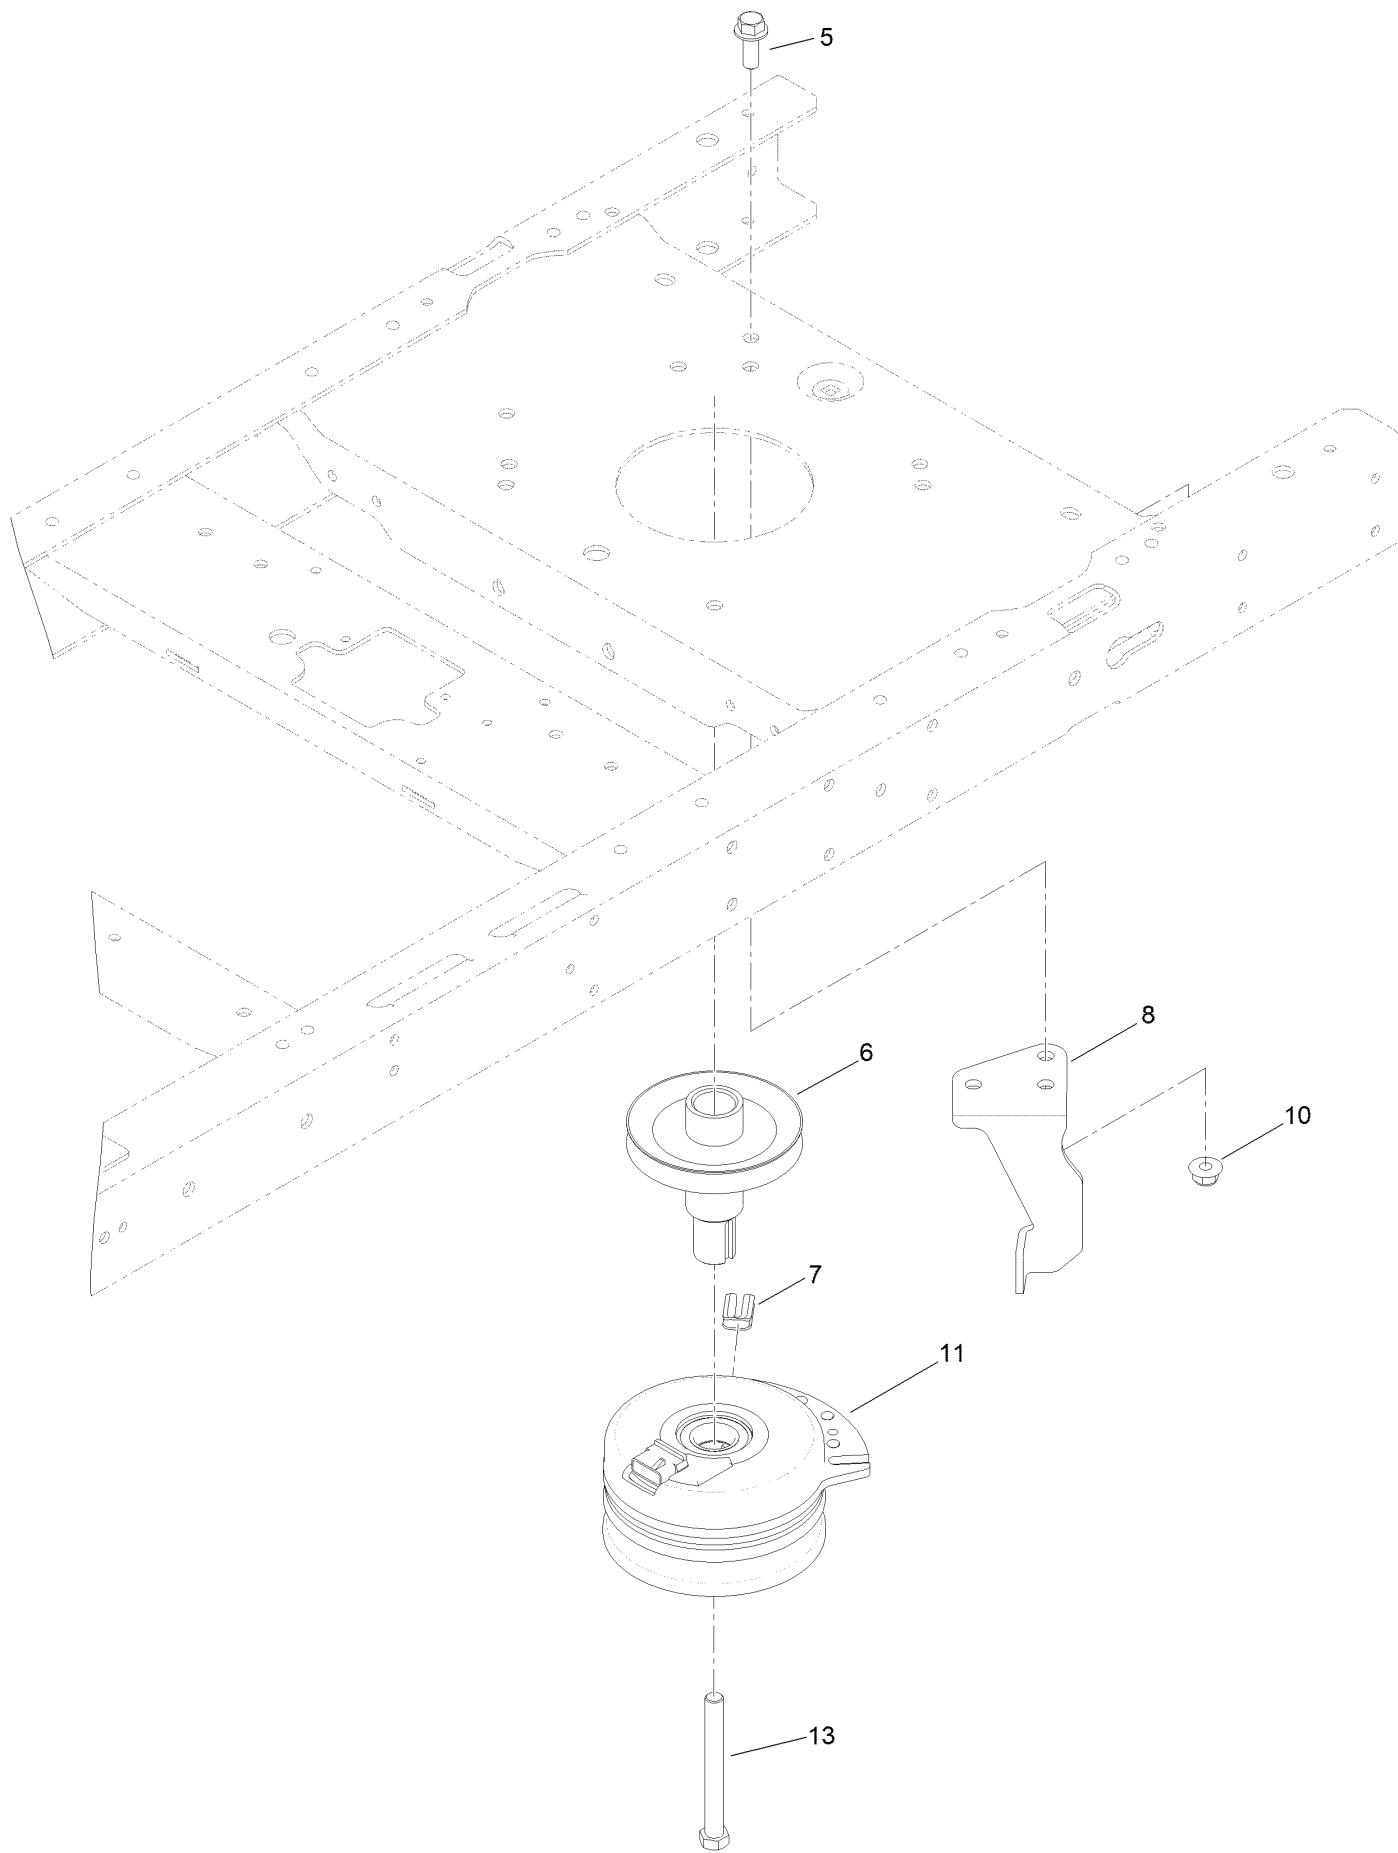

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 5           | 3234-42            | 1           | Screw-HHF            | 10          | 104-8301           | 1           | Nut-HF, NI         |
| 6           | 130-6854           | 1           | Pulley-Engine        | 11          | 117-7468           | 1           | Clutch-Electric    |
| 7           | 120-2217           | 1           | Isolator-Clutch      | 13          | 3212-16            | 1           | Screw-HH           |
| 8           | 119-8884           | 1           | Stop-Clutch (Narrow) |             |                    |             |                    |


# Engine and Muffler Assembly

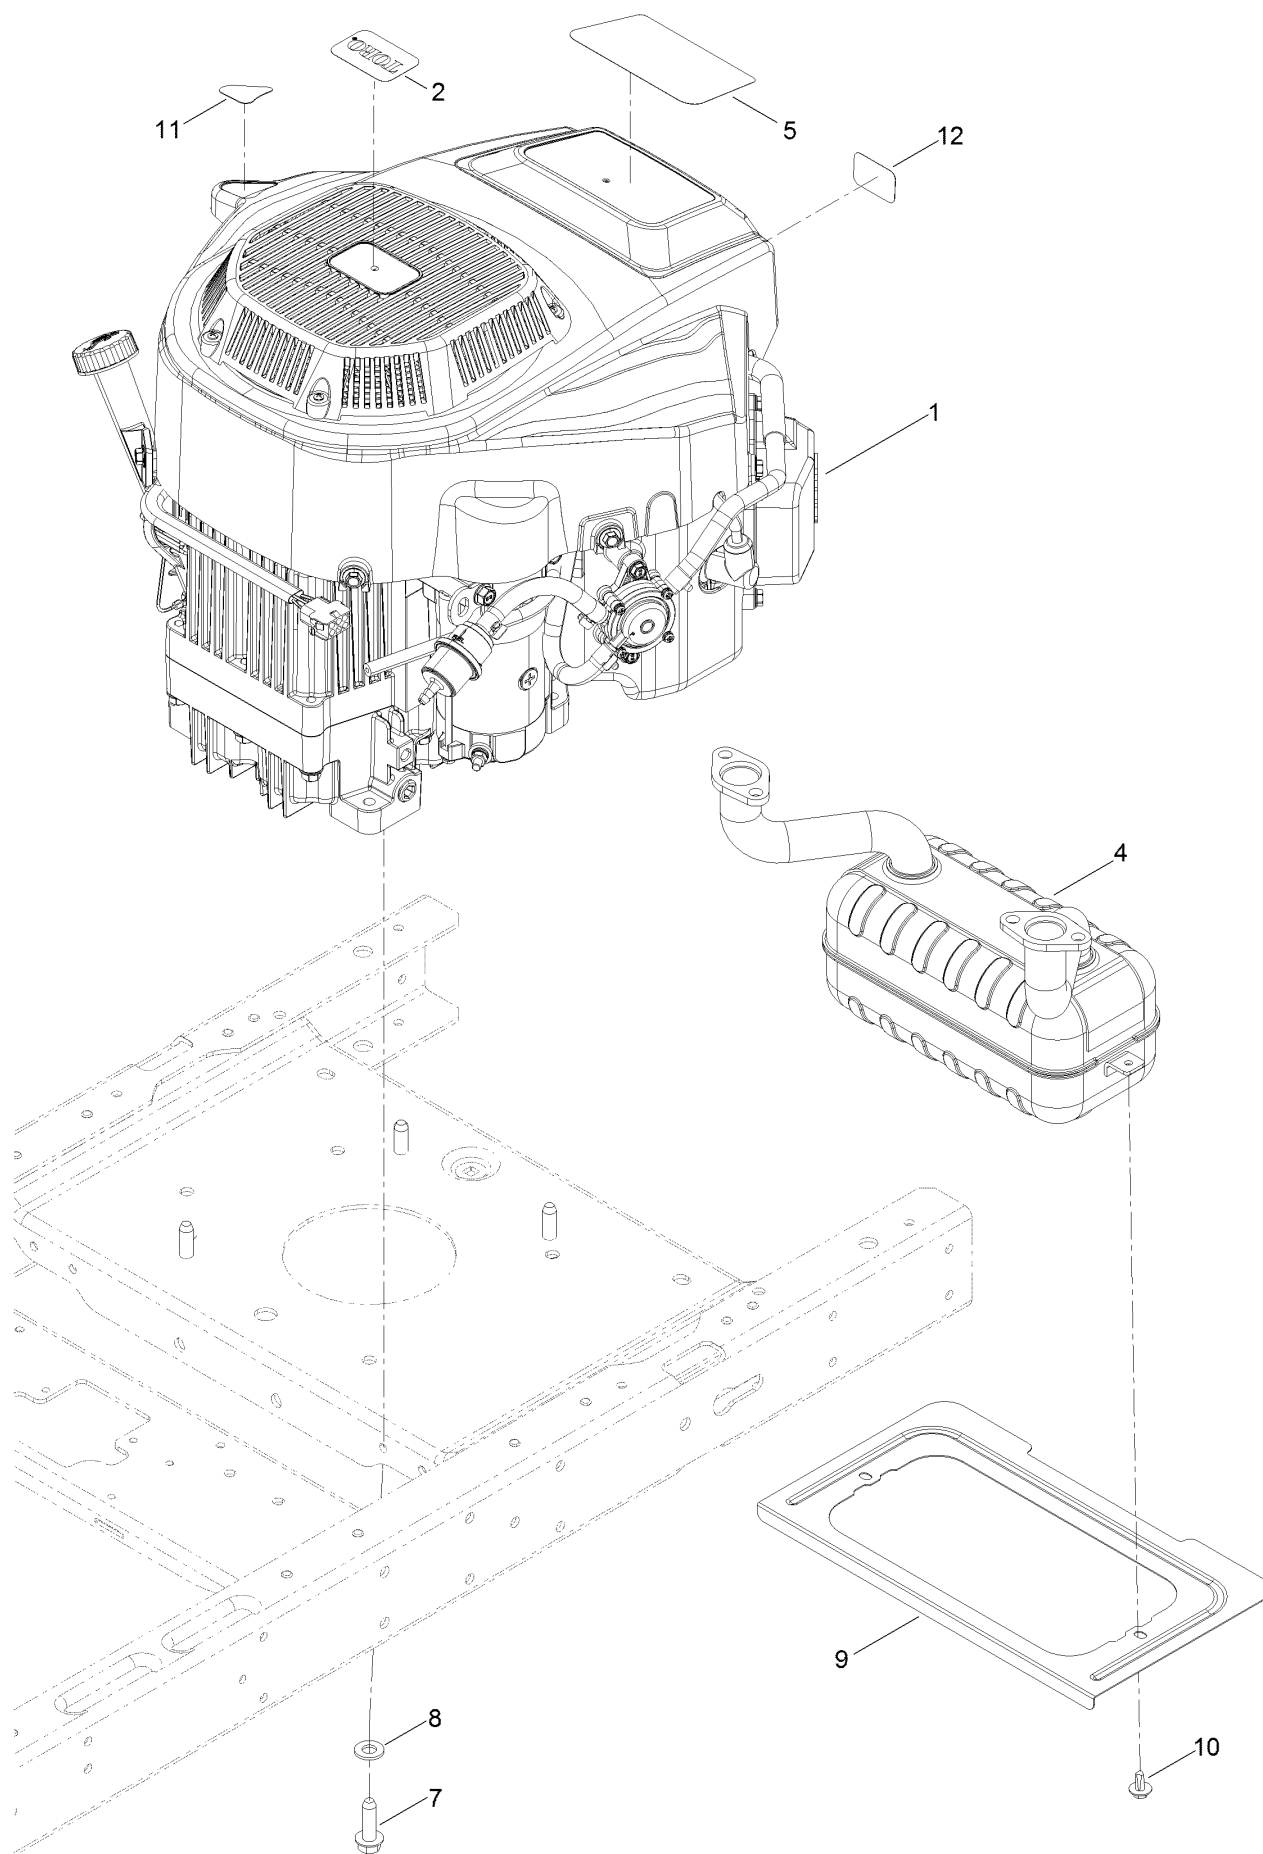




## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9041           | 1           | Engine-2P77F       | 8           | 3256-24            | 3           | Washer-Flat        |
| 2           | 131-4157           | 1           | Decal              | 9           | 131-1071-03        | 1           | Shield-Heat        |
| 4           | 131-4188           | 1           | Muffler            | 10          | 46-8560            | 2           | Screw-HHFTF        |
| 5           | 132-0902           | 1           | Decal-Engine       | 11          | 131-1097           | 1           | Decal-Drain, Oil   |
| 7           | 32144-109          | 4           | Screw-Taptite      | 12          | 127-9076           | 1           | Placard-Intake     |

# Fuel System Assembly with Non-Canister Style Air Filter

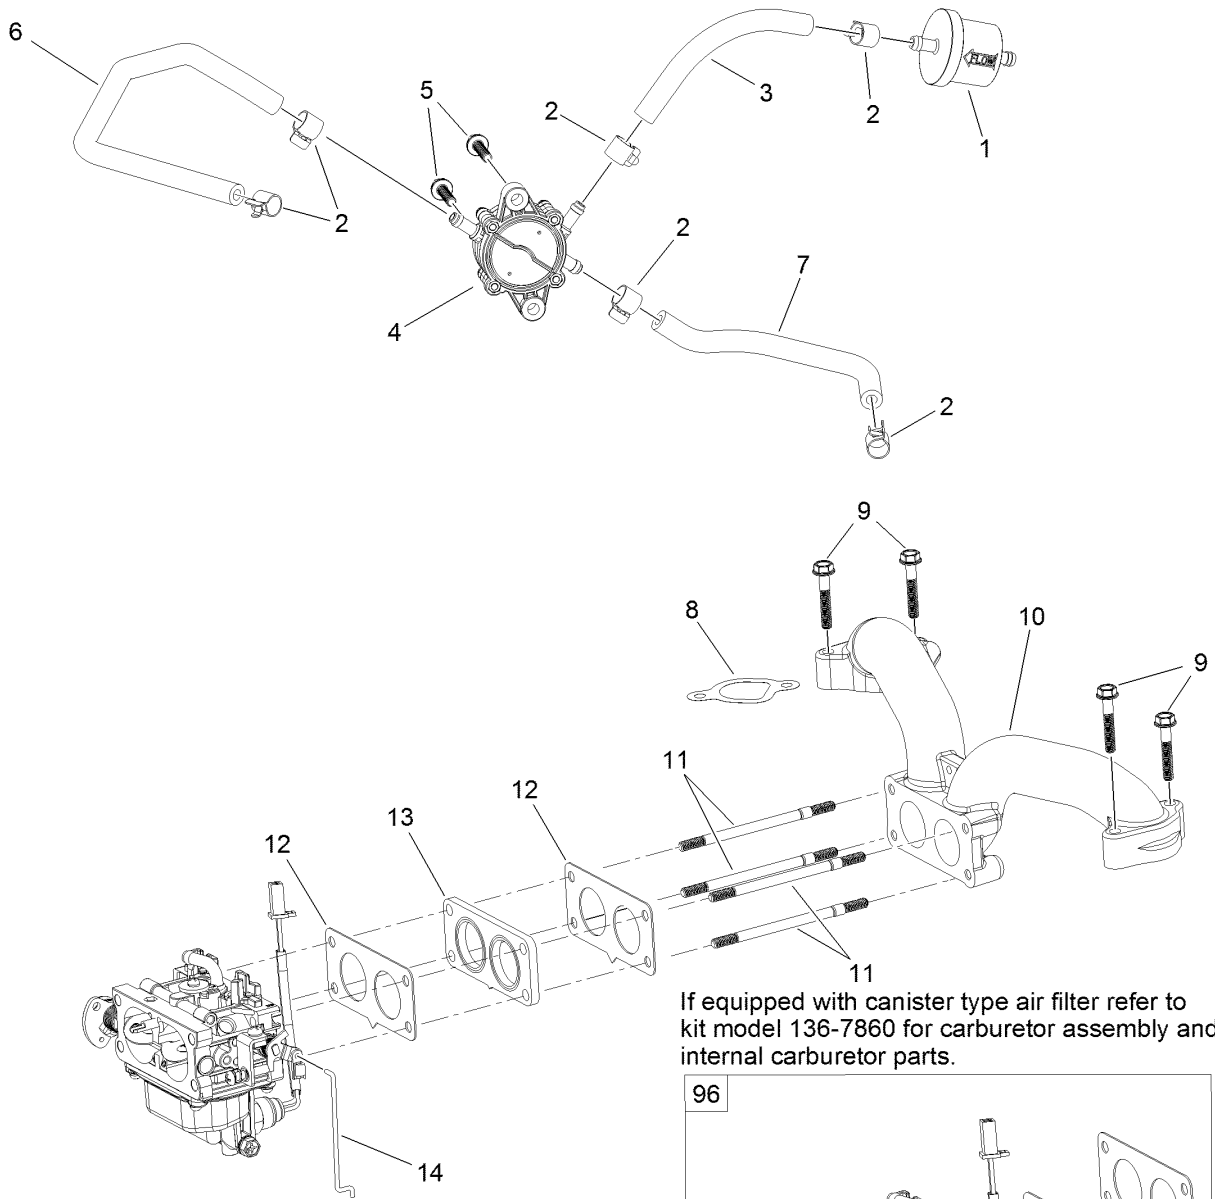

If equipped with canister type air filter refer to kit model 136-7860 for carburetor assembly and internal carburetor parts.

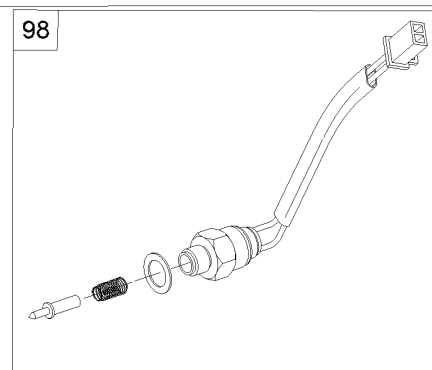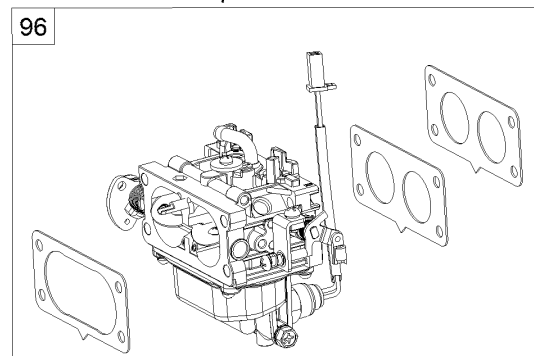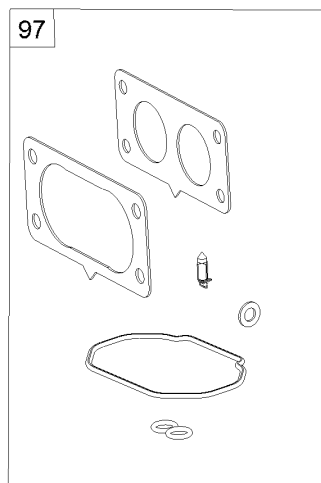




## Fuel System Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 127-9204           | 1           | Filter-Fuel        | 10          | 127-9244           | 1           | Manifold-Intake            |
| 2           | 120-4251           | 6           | Clamp-Fuel Line    | 11          | 127-9245           | 4           | Stud                       |
| 3           | 120-4371           | 1           | Line-Fuel          | 12          | 127-9246           | 2           | Gasket-Carburetor          |
| 4           | 127-9206           | 1           | Pump-Fuel          | 13          | 127-9247           | 1           | Insulator-Carburetor       |
| 5           | 120-4225           | 2           | Screw-HHF          | 14          | 127-9248           | 1           | Linkage-Throttle           |
| 6           | 127-9205           | 1           | Hose-Fuel          | 96          | 127-9289           | 1           | Carburetor Replacement Kit |
| 7           | 127-9207           | 1           | Hose-Fuel          | 97          | 127-9290           | 1           | Carburetor Repair Kit      |
| 8           | 127-9230           | 2           | Gasket-Intake      | 98          | 127-9292           | 1           | Solenoid Kit               |
| 9           | 120-4284           | 4           | Screw-HHF          |             |                    |             |                            |


**Carburetor Assembly No. 127-9289  
with Non-Canister Style Air Filter**

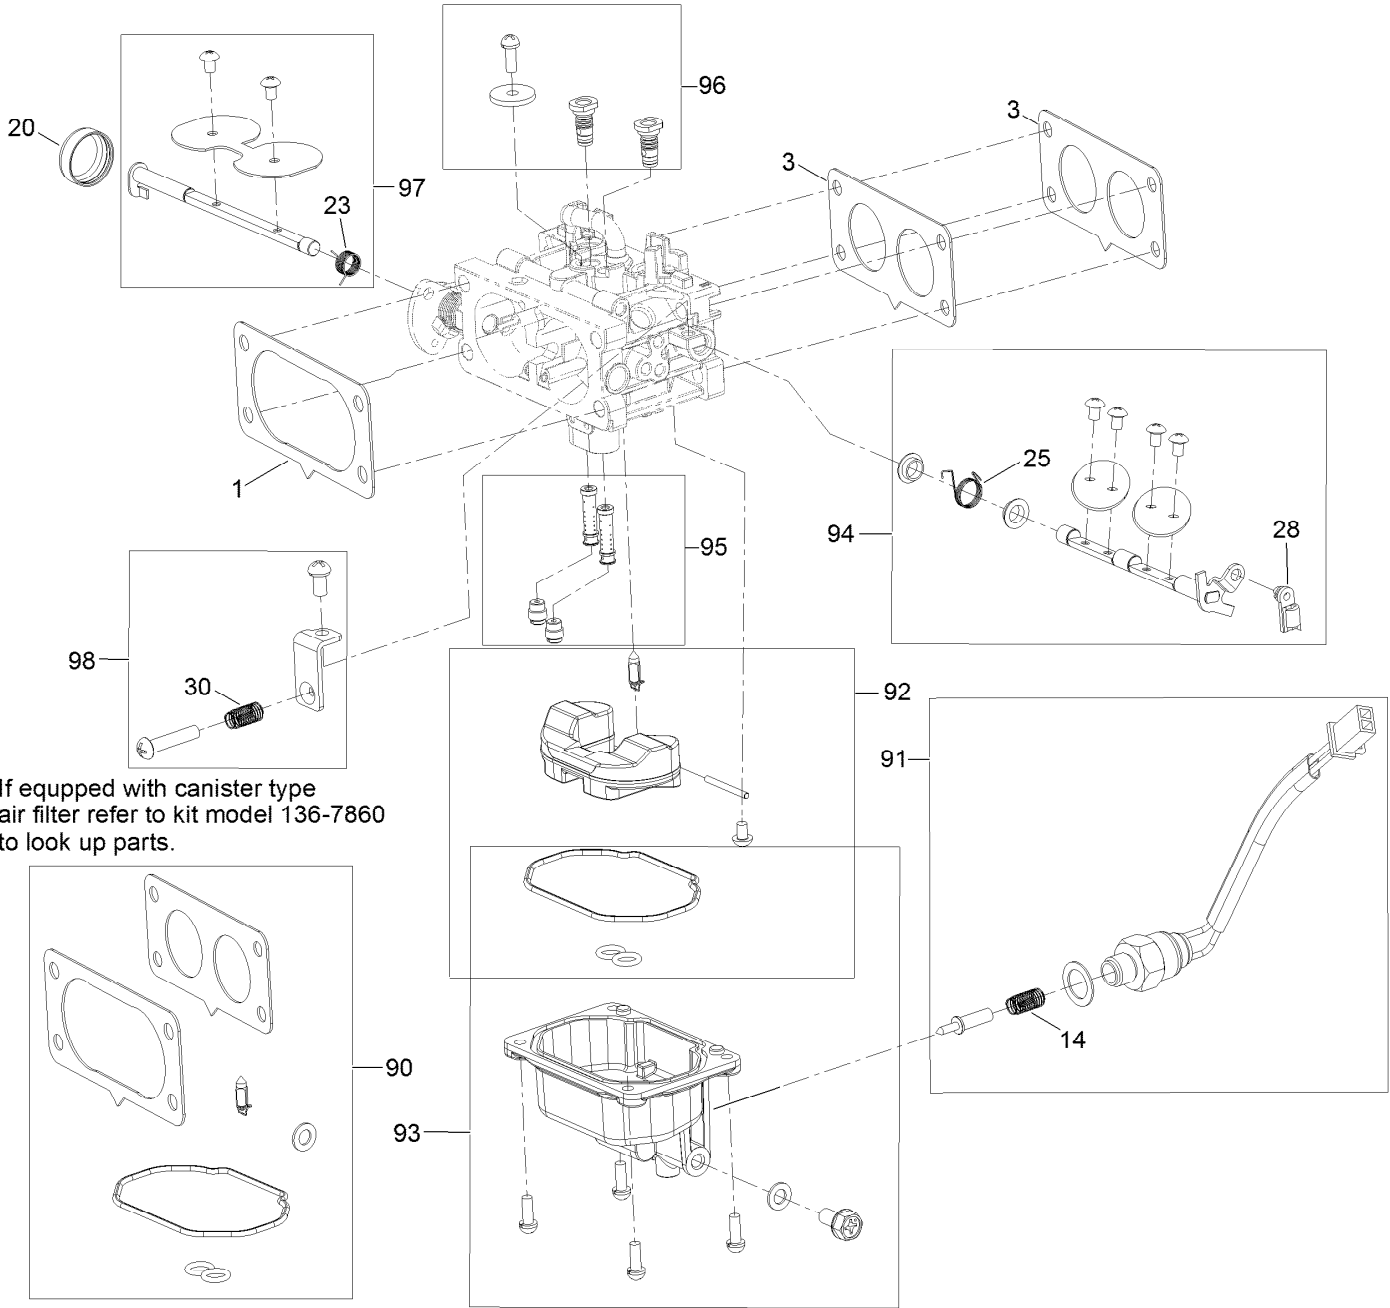

## Carburetor Assembly No. 127-9289 with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 127-9249           | 1           | Carburetor         | 90          | 127-9290           | 1           | Carburetor Repair Kit |
| 1           | 127-9251           | 1           | Gasket-Carburetor  | 91          | 127-9292           | 1           | Solenoid Kit          |
| 3           | 127-9246           | 2           | Gasket-Carburetor  | 92          | 127-9340           | 1           | Float Kit             |
| 14          | 127-9319           | 1           | Spring             | 93          | 127-9341           | 1           | Bowl Kit              |
| 20          | 127-9325           | 1           | Cover-Shaft, Choke | 94          | 127-9342           | 1           | Throttle Shaft Kit    |
| 23          | 127-9328           | 1           | Spring             | 95          | 127-9343           | 1           | Nozzle And Jet Kit    |
| 25          | 127-9330           | 1           | Spring             | 96          | 127-9344           | 1           | Air Jet Kit           |
| 28          | 127-9333           | 1           | Clamp-Lock         | 97          | 127-9345           | 1           | Choke Shaft Kit       |
| 30          | 127-9335           | 1           | Spring             | 98          | 127-9347           | 1           | Idlestop Kit          |

# Air Intake and Filtration Assembly with Non-Canister Style Air Filter

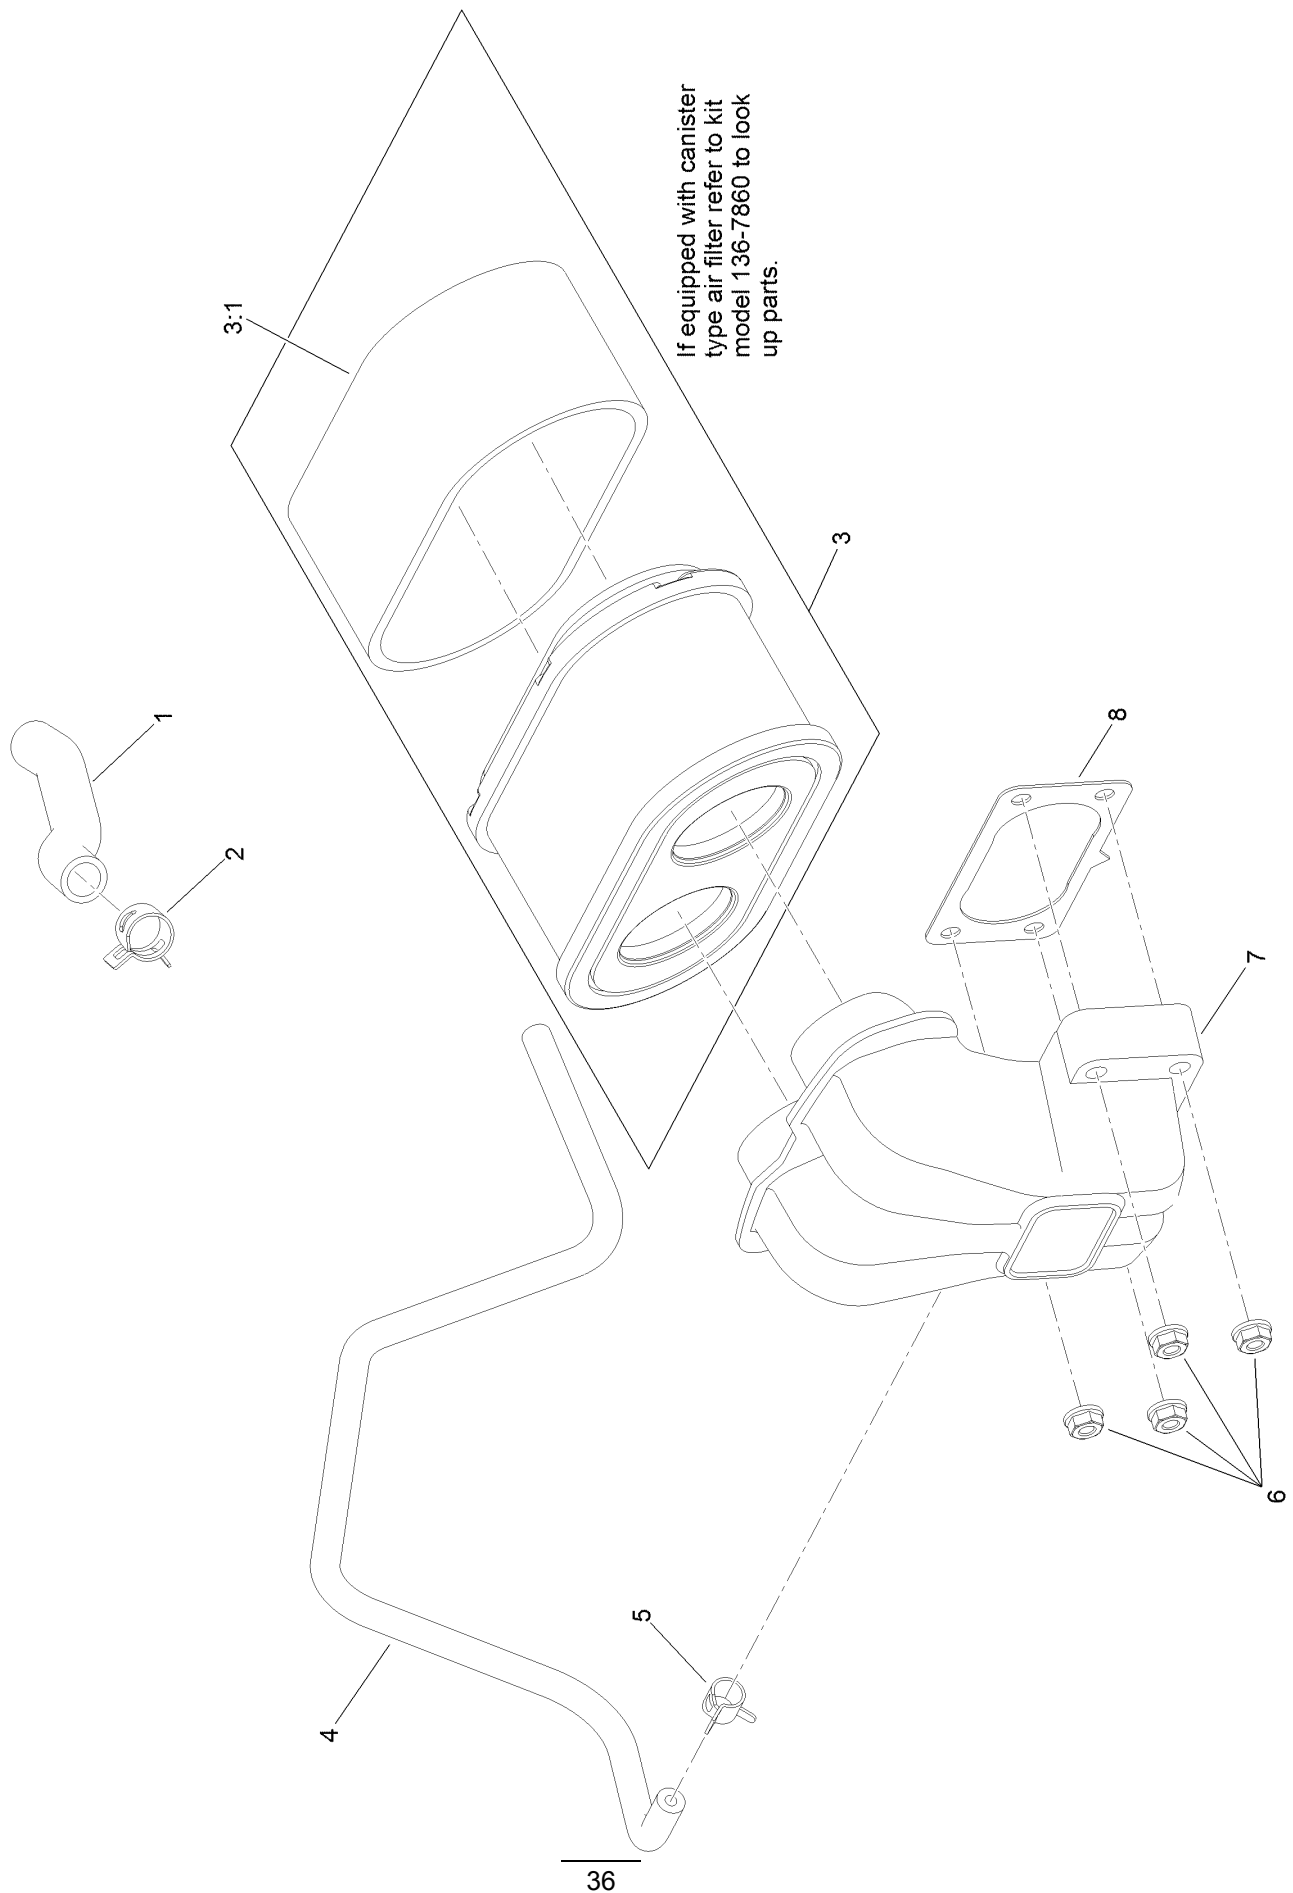


## Air Intake and Filtration Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 127-9235           | 1           | Tube-Breather        |
| 2           | 127-9234           | 2           | Clamp-Hose           |
| 3           | 127-9252           | 1           | Filter-Air, Complete |
| 3:1         | 127-9288           | 1           | Filter-Pre, Foam     |
| 4           | 127-9253           | 1           | Hose-Fuel            |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 5           | 127-9187           | 1           | Clamp-Hose           |
| 6           | 120-4236           | 4           | Nut-Flange           |
| 7           | 127-9047           | 1           | Manifold-Filter, Air |
| 8           | 127-9251           | 1           | Gasket-Carburetor    |


# Ignition and Electrical Assembly

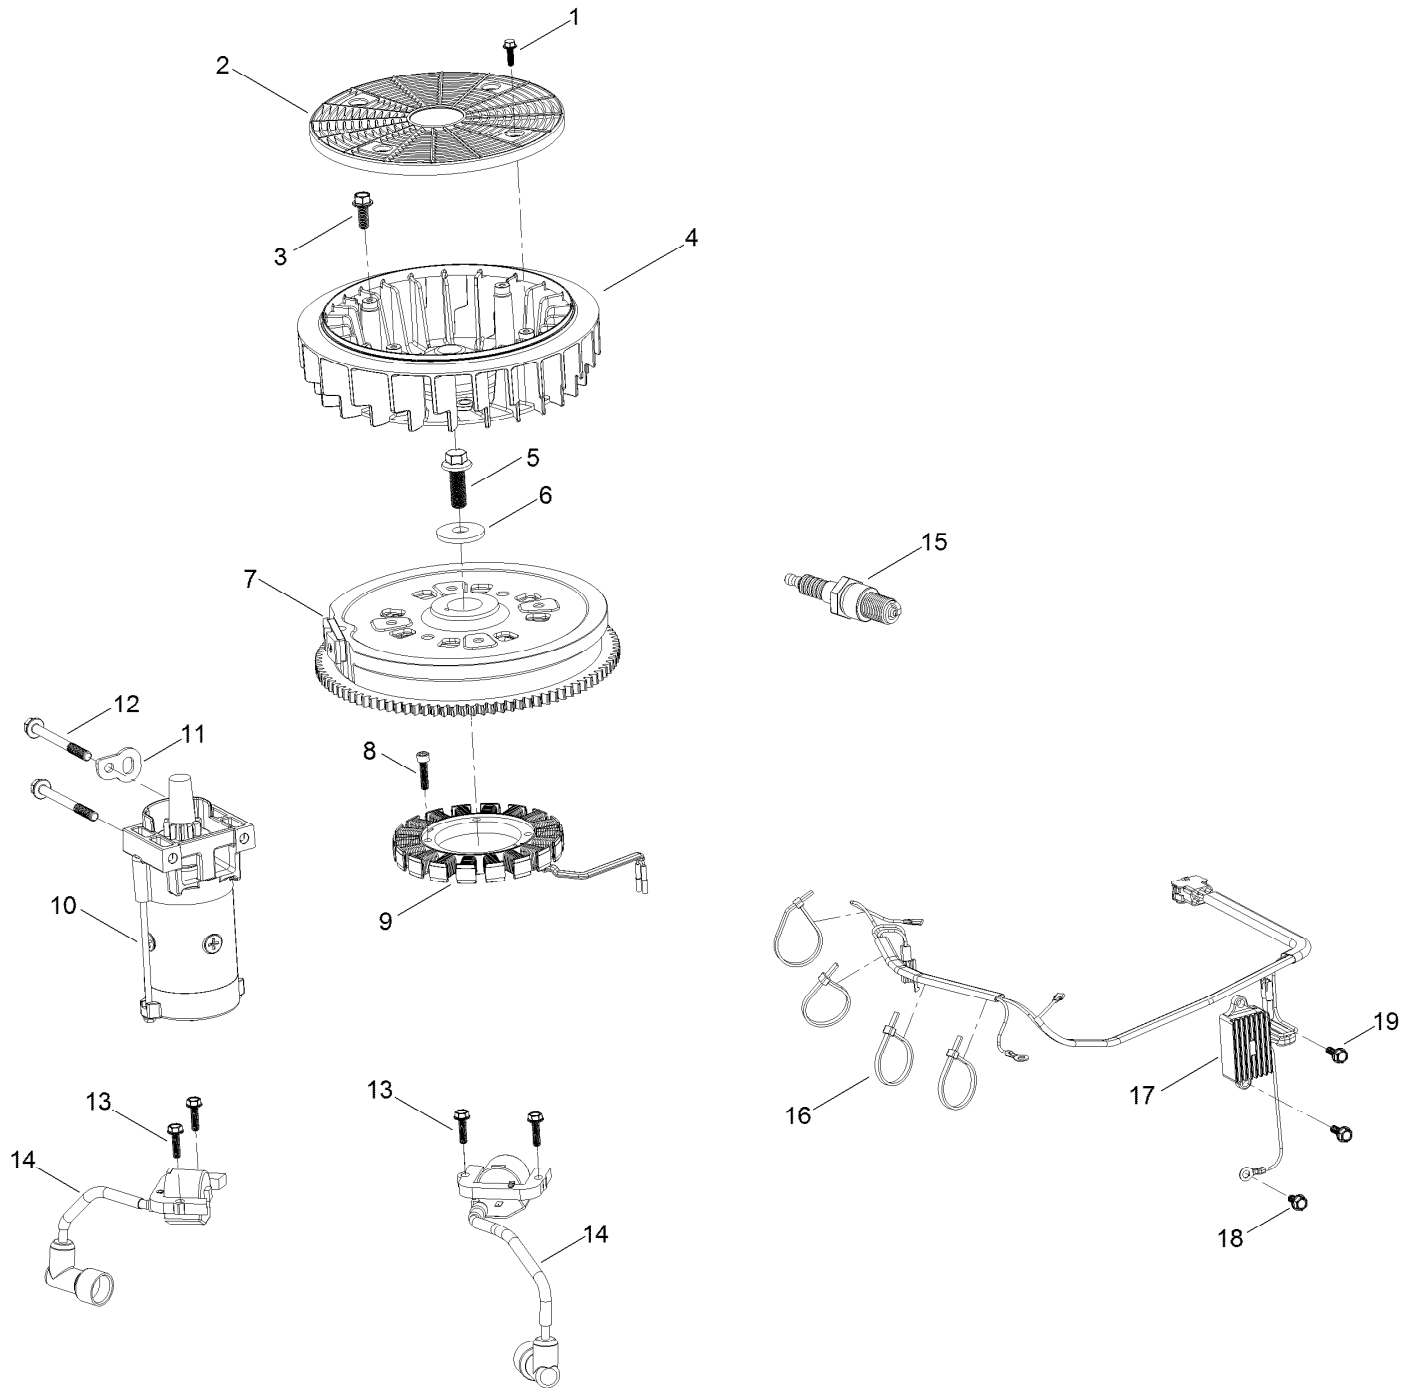

## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 127-9197           | 4           | Screw-HWH          | 11          | 127-9208           | 1           | Bracket-Lift                   |
| 2           | 127-9198           | 1           | Screen-Rotating    | 12          | 120-4231           | 2           | Screw-HHF                      |
| 3           | 127-9199           | 4           | Screw-HWH          | 13          | 121-0007           | 4           | Bolt-Flange                    |
| 4           | 127-9200           | 1           | Fan-Cooling        | 14          | 127-9216           | 2           | Ignition Coil ASM              |
| 5           | 127-9201           | 1           | Screw-HWH          | 15          | 81-3250            | 2           | Spark Plug                     |
| 6           | 127-9202           | 1           | Washer-Flat        | 16          | 127-9220           | 4           | Tie-Zip                        |
| 7           | 127-9306           | 1           | Flywheel           | 17          | 127-9219           | 1           | Regulator-Voltage<br>W/Harness |
| 8           | 127-9210           | 4           | Screw-HSH          | 18          | 120-4216           | 1           | Screw-HHF                      |
| 9           | 127-9211           | 1           | Alternator         | 19          | 120-4232           | 2           | Screw-HHF                      |
| 10          | 127-9209           | 1           | Motor-Starter      |             |                    |             |                                |

# Crankcase and Crankshaft Assembly

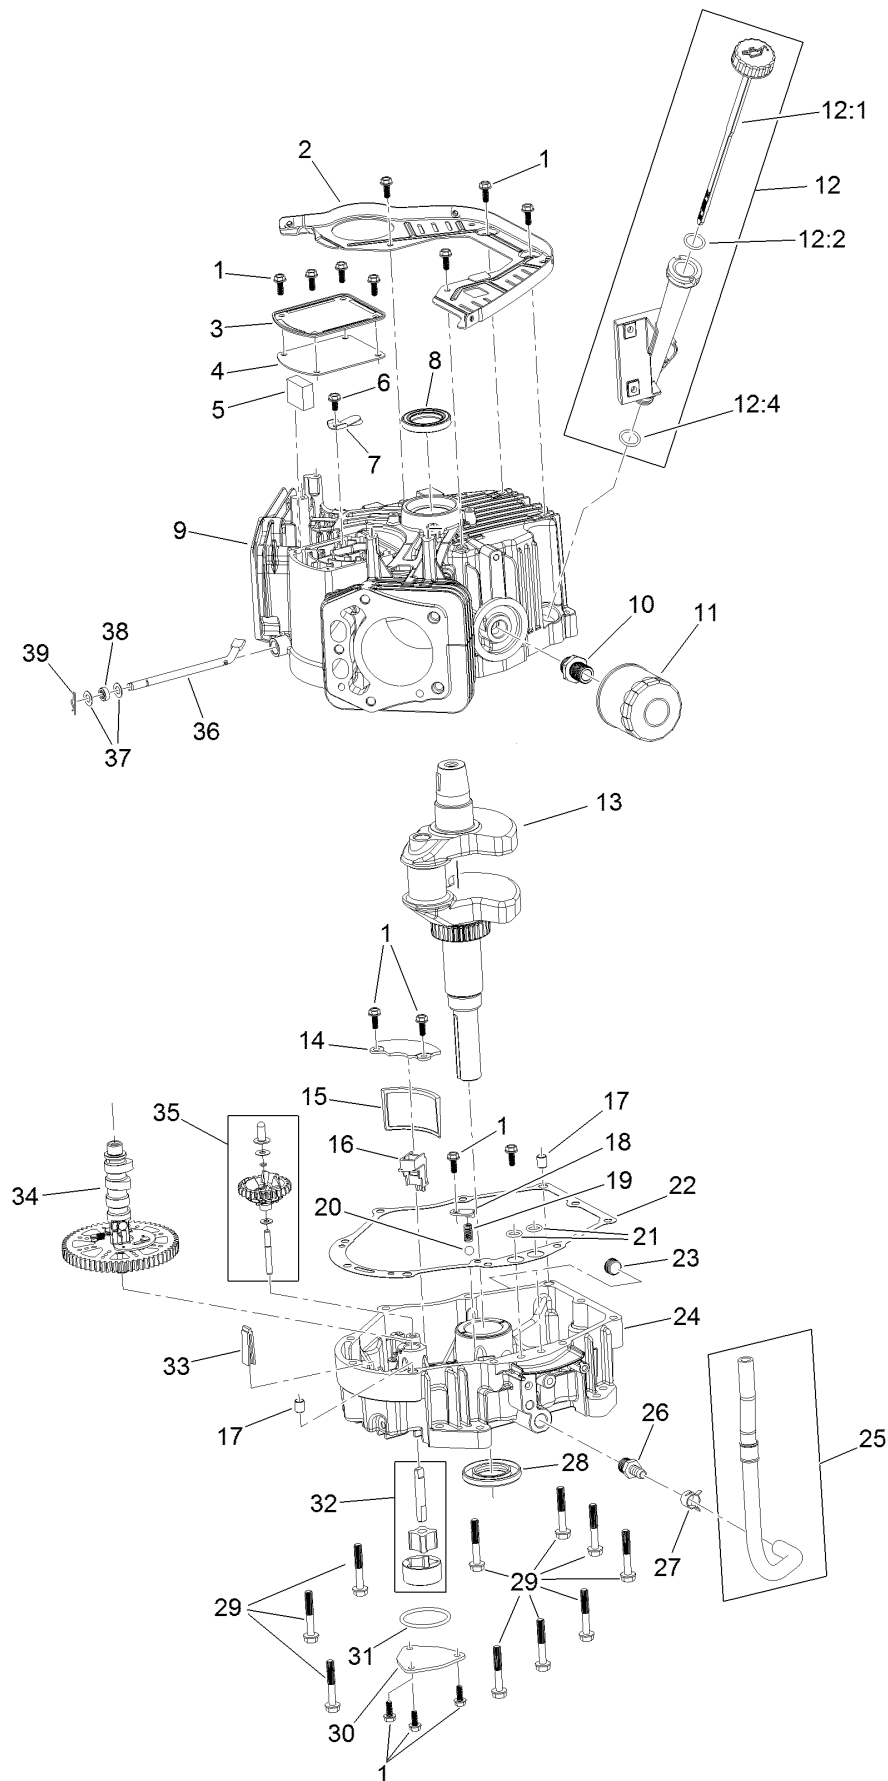




## Crankcase and Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4232           | 14          | Screw-HHF                    | 19          | 127-9265           | 1           | Spring                  |
| 2           | 127-9212           | 1           | Baffle                       | 20          | 127-9266           | 1           | Valve-Ball              |
| 3           | 127-9213           | 1           | Cover-Breather               | 21          | 120-4262           | 2           | O-Ring                  |
| 4           | 127-9214           | 1           | Gasket-Breather              | 22          | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 5           | 127-9215           | 1           | Filter-Breather              | 23          | 120-4285           | 1           | Plug-Drain              |
| 6           | 120-4216           | 1           | Screw-HHF                    | 24          | 127-9268           | 1           | Cover-Crankcase         |
| 7           | 127-9217           | 1           | Valve-Breather               | 25          | 127-9293           | 1           | Oil Drain Hose ASM      |
| 8           | 120-4267           | 1           | Seal-Oil                     | 26          | 127-9275           | 1           | Fitting-Hose            |
| 9           | 127-9223           | 1           | Crankcase                    | 27          | 127-9276           | 1           | Clamp-Hose              |
| 10          | 127-9221           | 1           | Fitting-Threaded, Oil Filter | 28          | 127-9271           | 1           | Seal                    |
| 11          | 127-9222           | 1           | Filter-Oil                   | 29          | 121-0473           | 10          | Screw-HHF               |
| 12          | 127-9218           | 1           | Oil Tube ASM                 | 30          | 127-9274           | 1           | Cover-Oil Pump          |
| 12:1        | 127-9283           | 1           | Dipstick                     | 31          | 127-9273           | 1           | O-Ring                  |
| 12:2        | 127-9284           | 1           | O-Ring                       | 32          | 127-9272           | 1           | Oil Pump ASM            |
| 12:4        | 127-9286           | 1           | O-Ring                       | 33          | 120-4275           | 1           | Deflector-Oil, Rubber   |
| 13          | 127-9255           | 1           | Crankshaft                   | 34          | 127-9269           | 1           | Camshaft                |
| 14          | 127-9261           | 1           | Cover-Screen, Oil            | 35          | 127-9270           | 1           | Governor ASM            |
| 15          | 127-9262           | 1           | Screen-Oil                   | 36          | 127-9238           | 1           | Rod-Governor            |
| 16          | 127-9263           | 1           | Retainer-Screen              | 37          | 120-4258           | 2           | Washer-Plain            |
| 17          | 120-4274           | 2           | Pin-Dowel                    | 38          | 120-4257           | 1           | Seal-Oil                |
| 18          | 127-9264           | 1           | Plate-Retainer               | 39          | 120-4256           | 1           | Pin-Hair                |


# Governor Control Assembly

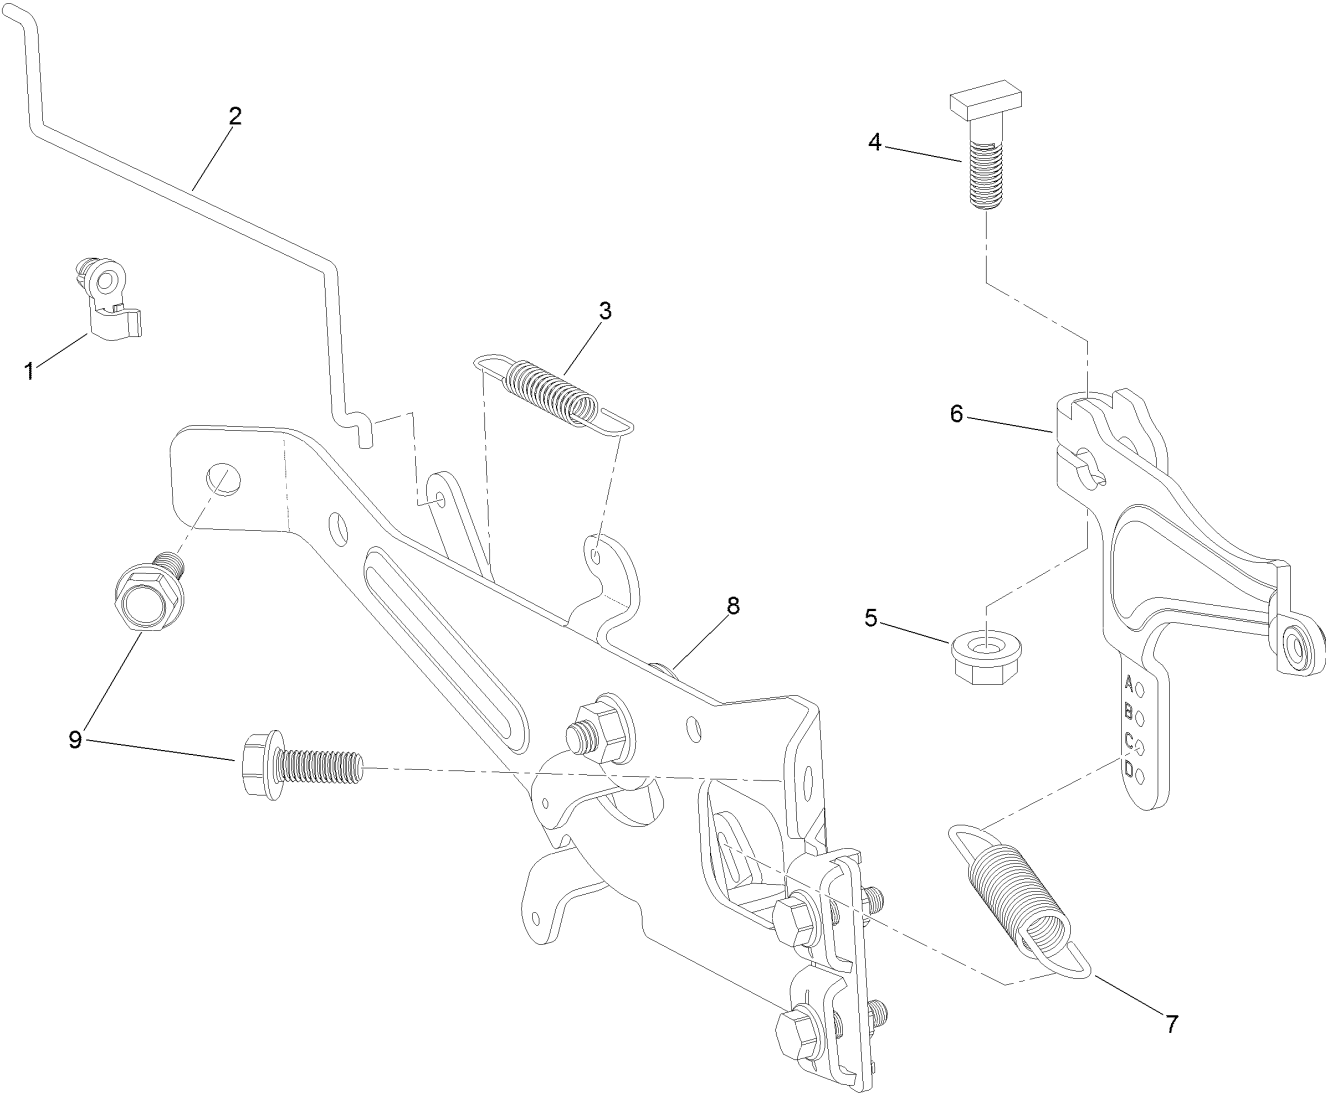

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9250           | 1           | Clip-Linkage       | 6           | 127-9239           | 1           | Arm-Governor       |
| 2           | 127-9242           | 1           | Linkage-Choke      | 7           | 127-9240           | 1           | Spring-Governor    |
| 3           | 127-9241           | 1           | Spring-Governor    | 8           | 127-9243           | 1           | Plate-Control      |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 120-4232           | 2           | Screw-HHF          |
| 5           | 120-4236           | 1           | Nut-Flange         |             |                    |             |                    |


## Piston and Cylinder Head Assembly

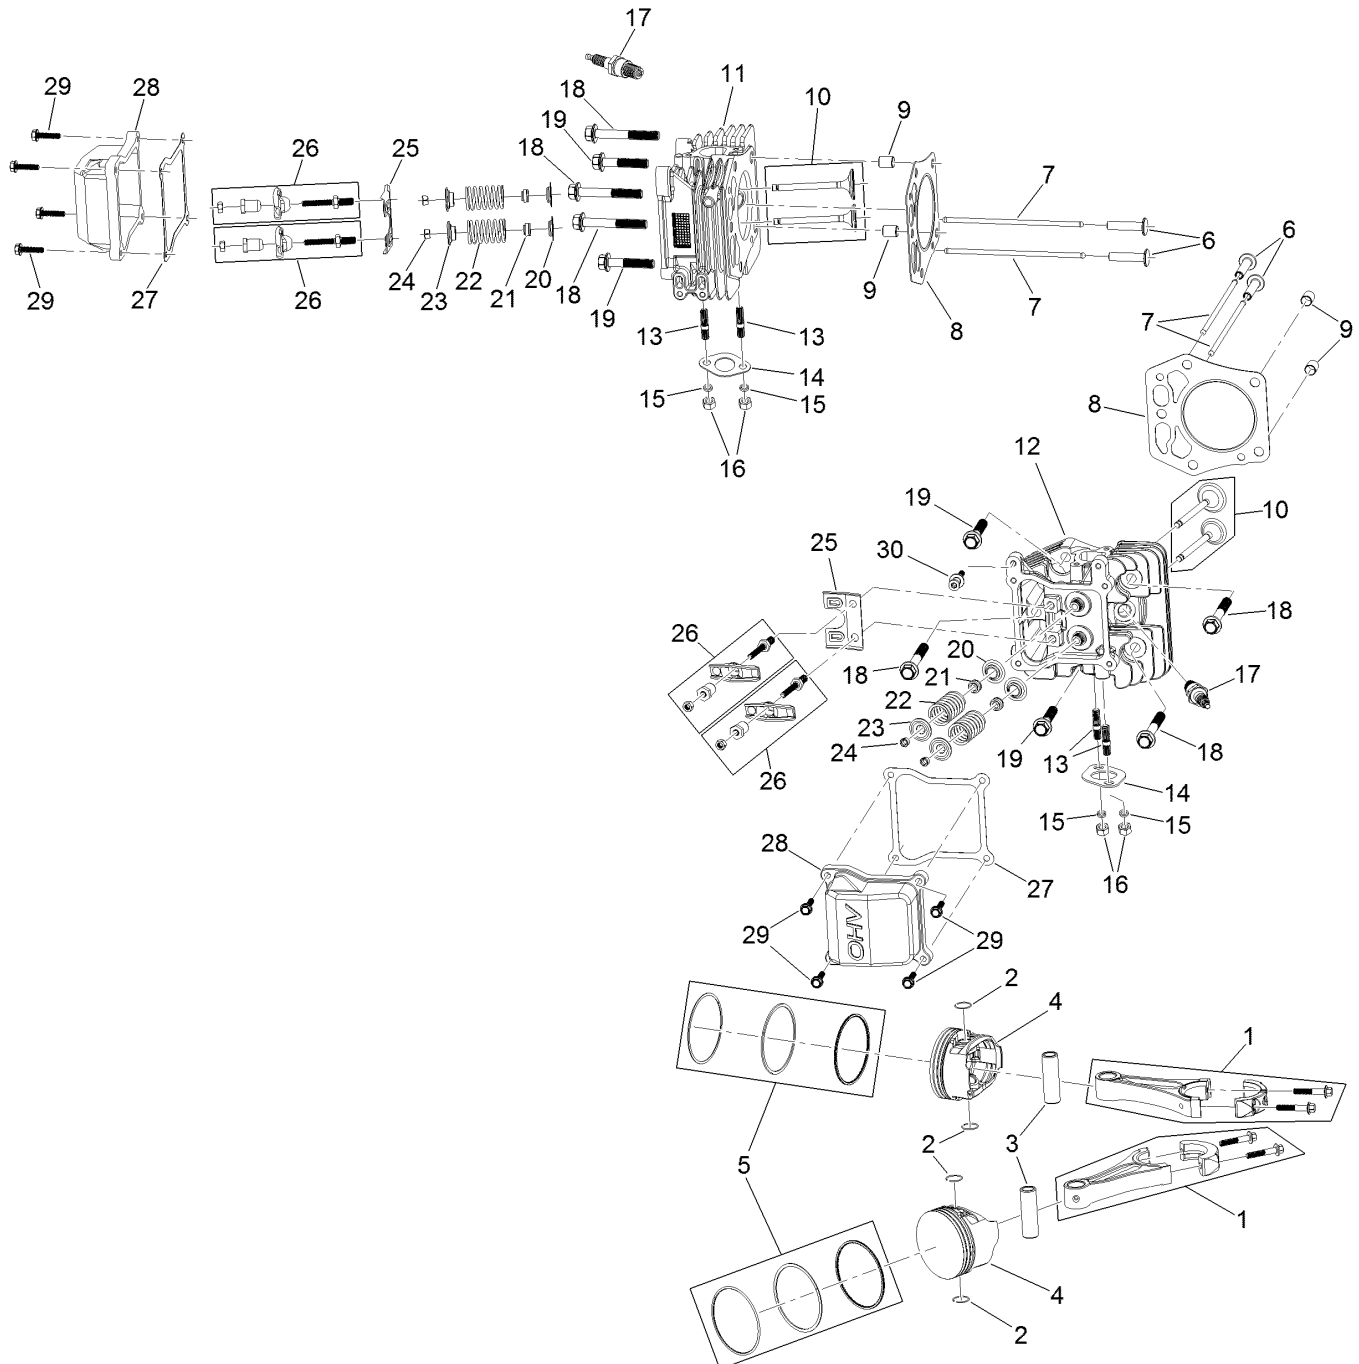

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 127-9256           | 2           | Connecting Rod ASM    | 16          | 121-0199           | 4           | Nut-HH                 |
| 2           | 127-9258           | 4           | Clip-Pin, Piston      | 17          | 81-3250            | 2           | Spark Plug             |
| 3           | 127-9257           | 2           | Pin-Piston            | 18          | 127-9231           | 6           | Screw-HWH              |
| 4           | 127-9259           | 2           | Piston                | 19          | 127-9232           | 4           | Screw-HWH              |
| 5           | 127-9260           | 2           | Piston Ring Set       | 20          | 120-4303           | 4           | Seat-Spring, Valve     |
| 6           | 127-9224           | 4           | Lifter-Valve          | 21          | 120-4304           | 4           | Seal-Stem, Valve       |
| 7           | 127-9225           | 4           | Rod-Push              | 22          | 120-4305           | 4           | Spring-Valve           |
| 8           | 127-9226           | 2           | Gasket-Head, Cylinder | 23          | 120-4306           | 4           | Retainer-Spring, Valve |
| 9           | 127-9227           | 4           | Pin-Dowel             | 24          | 120-4307           | 4           | Keeper-Valve           |
| 10          | 127-9228           | 2           | Valve Set             | 25          | 127-9233           | 2           | Plate-Guide, Push Rod  |
| 11          | 127-9229           | 1           | Head-Cylinder         | 26          | 127-9294           | 4           | Rocker Arm ASM         |
| 12          | 127-9254           | 1           | Head-Cylinder         | 27          | 127-9295           | 2           | Gasket-Valve Cover     |
| 13          | 127-9236           | 4           | Stud                  | 28          | 127-9050           | 2           | Cover-Valve            |
| 14          | 120-4317           | 2           | Gasket-Exhaust        | 29          | 120-4225           | 8           | Screw-HHF              |
| 15          | 127-9279           | 4           | Washer-Lock, Split    | 30          | 120-4214           | 1           | Screw-Shoulder, HH     |

# Blower Housing Assembly

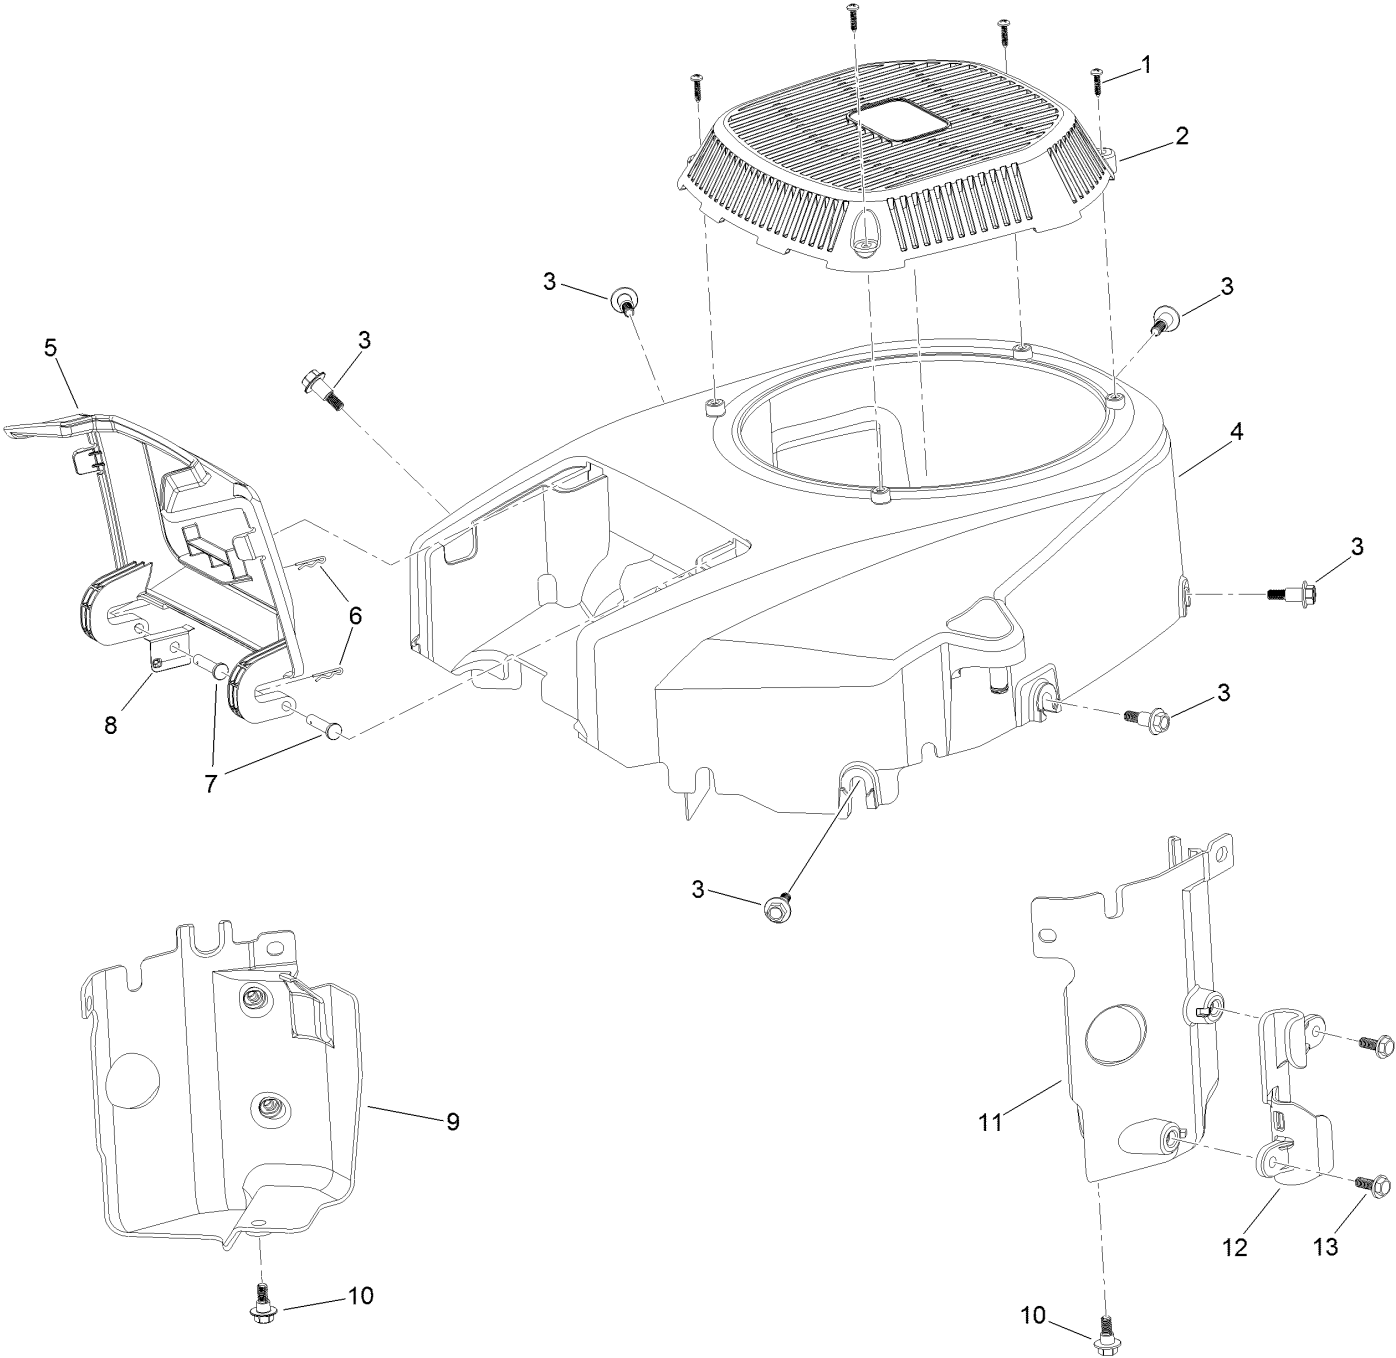


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 127-9195           | 4           | Screw-Plastic, PPH  | 8           | 127-9281           | 1           | Plate-Spring        |
| 2           | 127-9045           | 1           | Cover-Fan           | 9           | 127-9049           | 1           | Baffle-Air, Left    |
| 3           | 127-9196           | 6           | Screw-Shoulder, HWH | 10          | 120-4210           | 2           | Screw-Shoulder, HHF |
| 4           | 127-9044           | 1           | Shroud-Engine       | 11          | 127-9048           | 1           | Baffle-Air, Right   |
| 5           | 127-9046           | 1           | Door-Filter, Air    | 12          | 127-9287           | 1           | Cleat-Hose          |
| 6           | 127-9280           | 2           | Pin-Hair            | 13          | 120-4232           | 2           | Screw-HHF           |
| 7           | 127-9282           | 2           | Pin                 |             |                    |             |                     |

# Gasket and Seal Kit Assembly

1

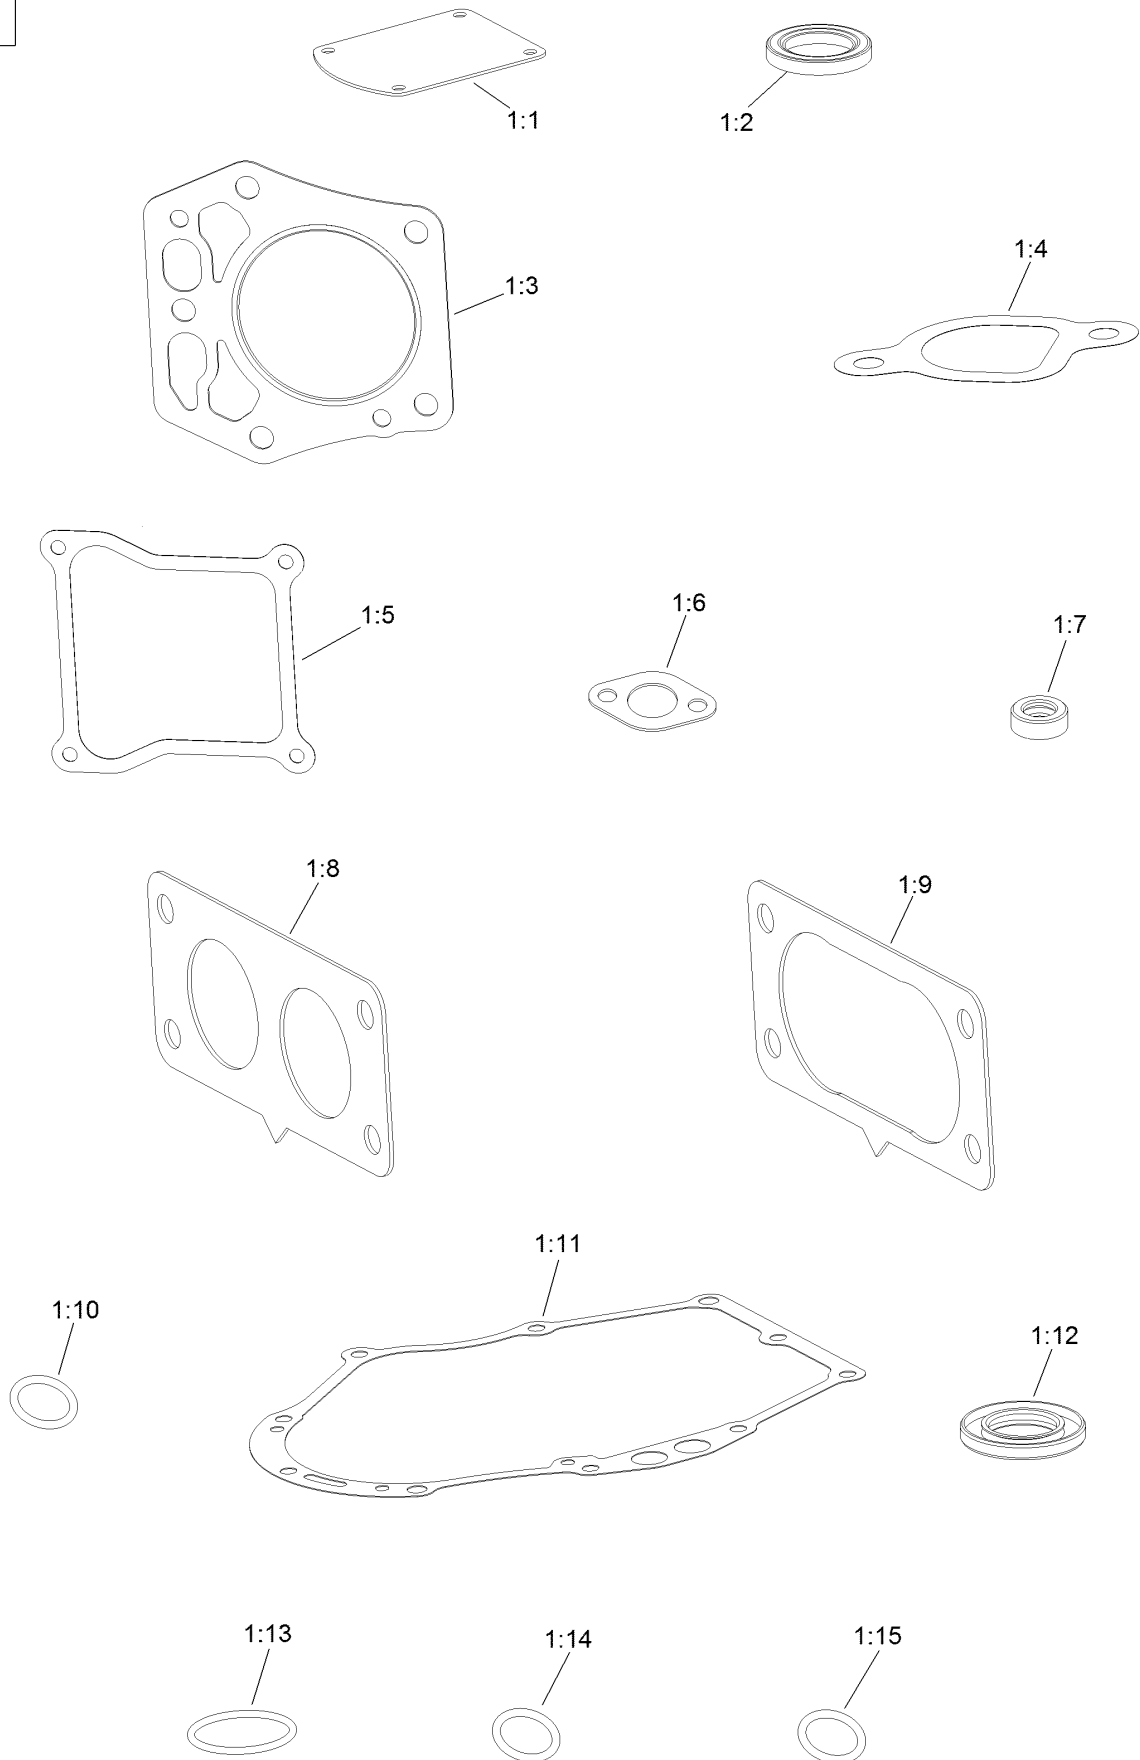




## Gasket and Seal Kit Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9296           | 1           | Gasket And Seal Kit   | 1:8         | 127-9246           | 2           | Gasket-Carburetor       |
| 1:1         | 127-9214           | 1           | Gasket-Breather       | 1:9         | 127-9251           | 1           | Gasket-Carburetor       |
| 1:2         | 120-4267           | 1           | Seal-Oil              | 1:10        | 120-4262           | 2           | O-Ring                  |
| 1:3         | 127-9226           | 2           | Gasket-Head, Cylinder | 1:11        | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 1:4         | 127-9230           | 2           | Gasket-Intake         | 1:12        | 127-9271           | 1           | Seal                    |
| 1:5         | 127-9295           | 2           | Gasket-Valve Cover    | 1:13        | 127-9273           | 1           | O-Ring                  |
| 1:6         | 120-4317           | 2           | Gasket-Exhaust        | 1:14        | 127-9284           | 1           | O-Ring                  |
| 1:7         | 120-4257           | 1           | Seal-Oil              | 1:15        | 127-9286           | 1           | O-Ring                  |


# Body Styling and Fuel Tank Assembly

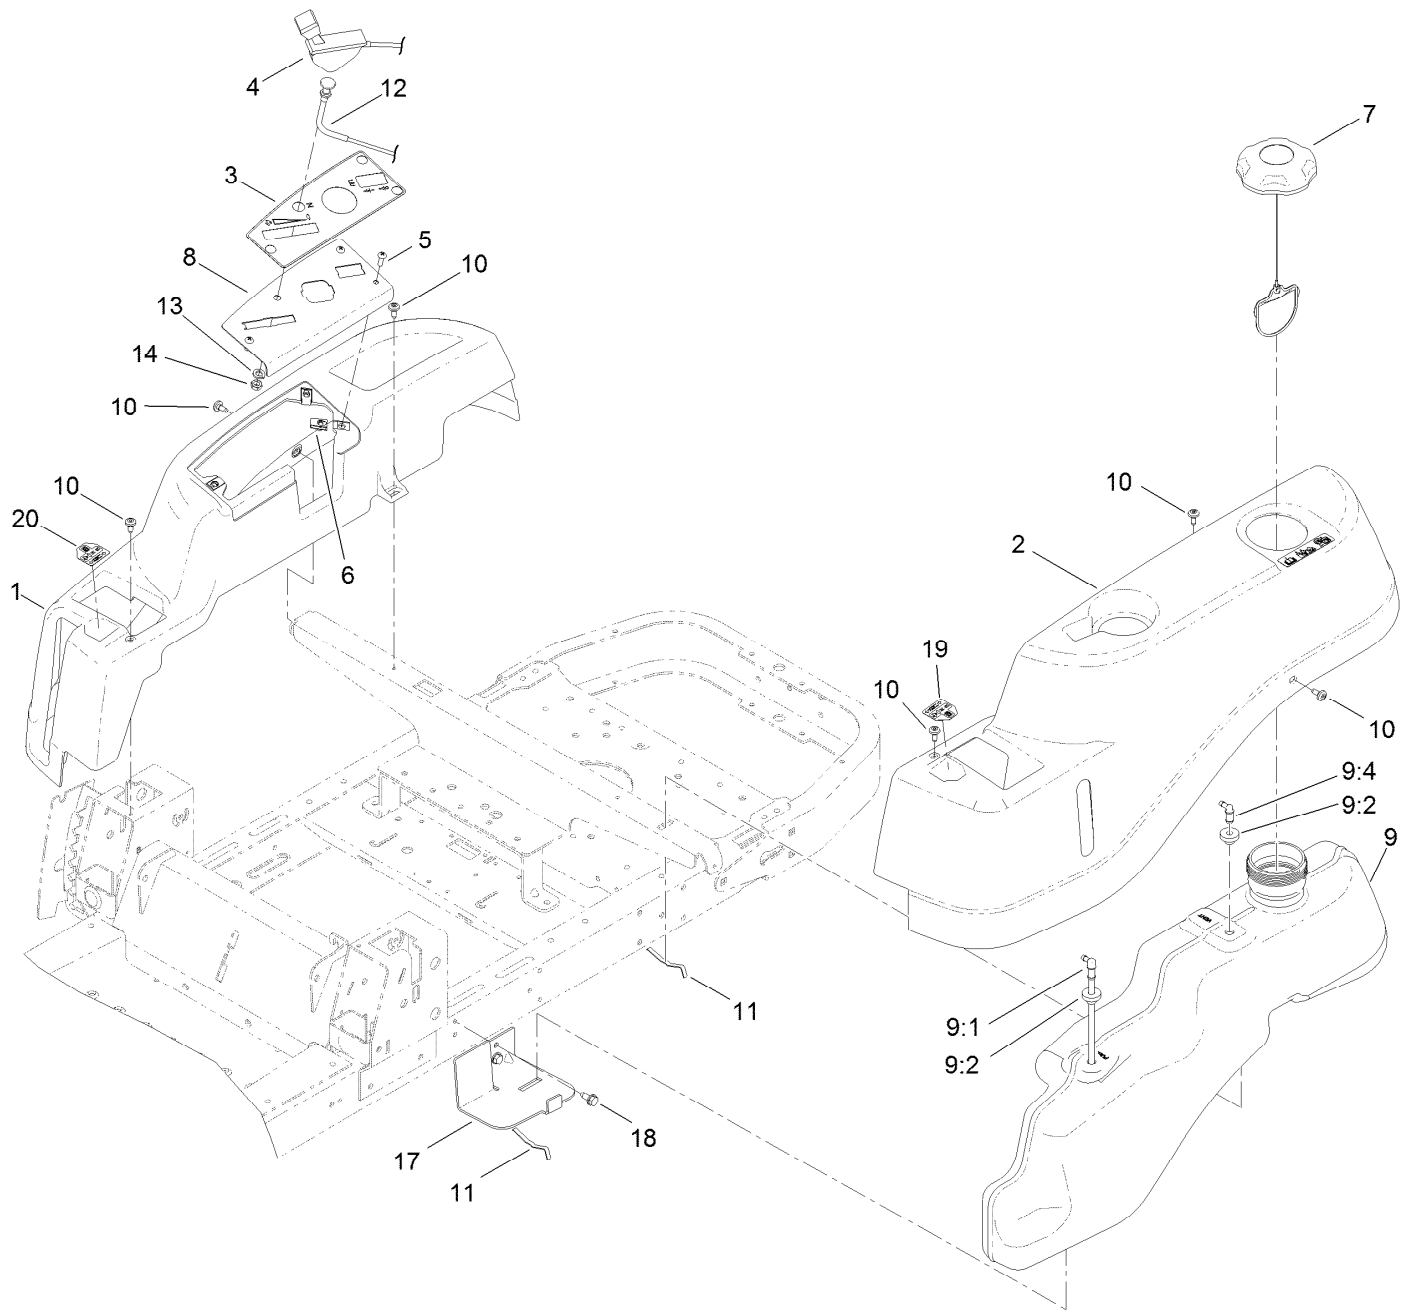

## Body Styling and Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 119-3335           | 1           | Pod-RH                  | 9:4         | 117-7400           | 1           | Fitting-Plastic           |
| 2           | 119-3334           | 1           | Pod-LH                  | 10          | 120-7950           | 6           | Screw-Shoulder            |
| 3           | 121-0772           | 1           | Decal-Panel, Control    | 11          | 609830             | 2           | Spring                    |
| 4           | 121-0769           | 1           | Cable-Throttle          | 12          | 112-9753           | 1           | Cable-Choke               |
| 5           | 3258-166           | 3           | Screw-PRH               | 13          | 3253-21            | 1           | Washer-Lock               |
| 6           | 107069             | 3           | Clip                    | 14          | 3220-3             | 1           | Nut-HJ                    |
| 7           | 120-5461           | 1           | Cap-Fuel, Ratcheting    | 17          | 119-3476-03        | 1           | Support-Tank, Front       |
| 8           | 119-3378-03        | 1           | Plate-Control           | 18          | 32144-70           | 2           | Screw-HWHTF               |
| 9           | 119-3324           | 1           | Fuel Tank ASM           | 19          | 119-8814           | 1           | Decal-Lever, Control (LH) |
| 9:1         | 121-0793           | 1           | Connector-Elbow, 90 DEG | 20          | 119-8815           | 1           | Decal-Lever, Control (RH) |
| 9:2         | 46-6560            | 2           | Bushing                 |             |                    |             |                           |

# Fuel Delivery Assembly

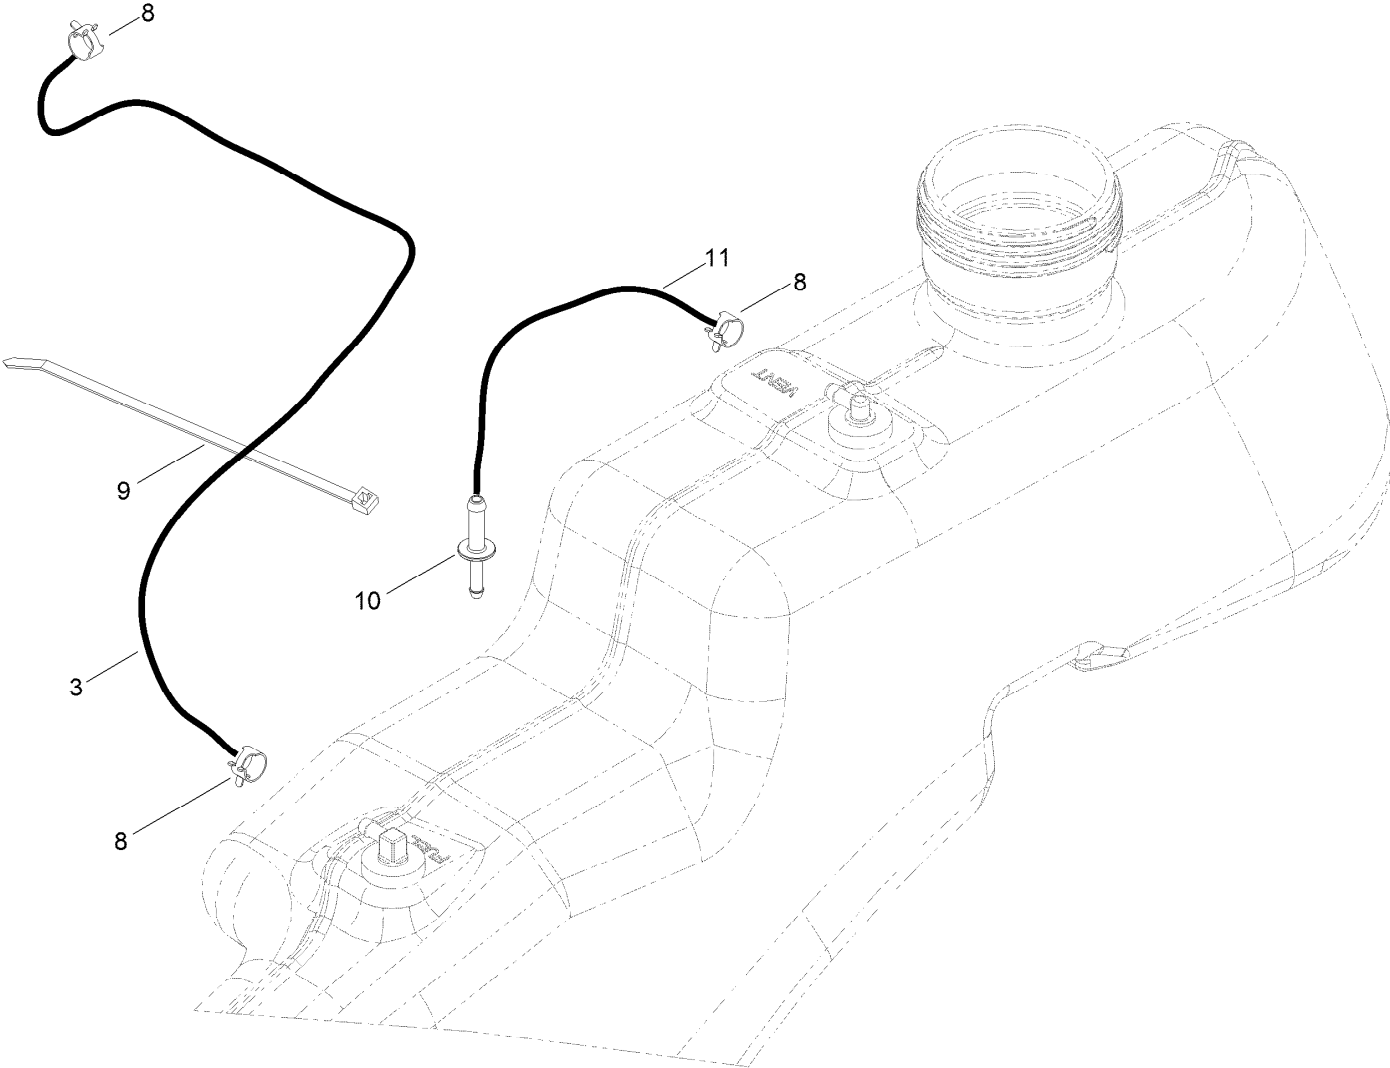


## Fuel Delivery Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 3           | 109-0281           | 1           | Hose-Fuel          |
| 8           | 2412-98            | 3           | Clamp-Hose         |
| 9           | 614249             | 1           | Tie-Cable          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 117-5399           | 1           | Adaptor-Orifice    |
| 11          | 110-1876           | 1           | Hose-Fuel          |


# Battery and Electrical Assembly

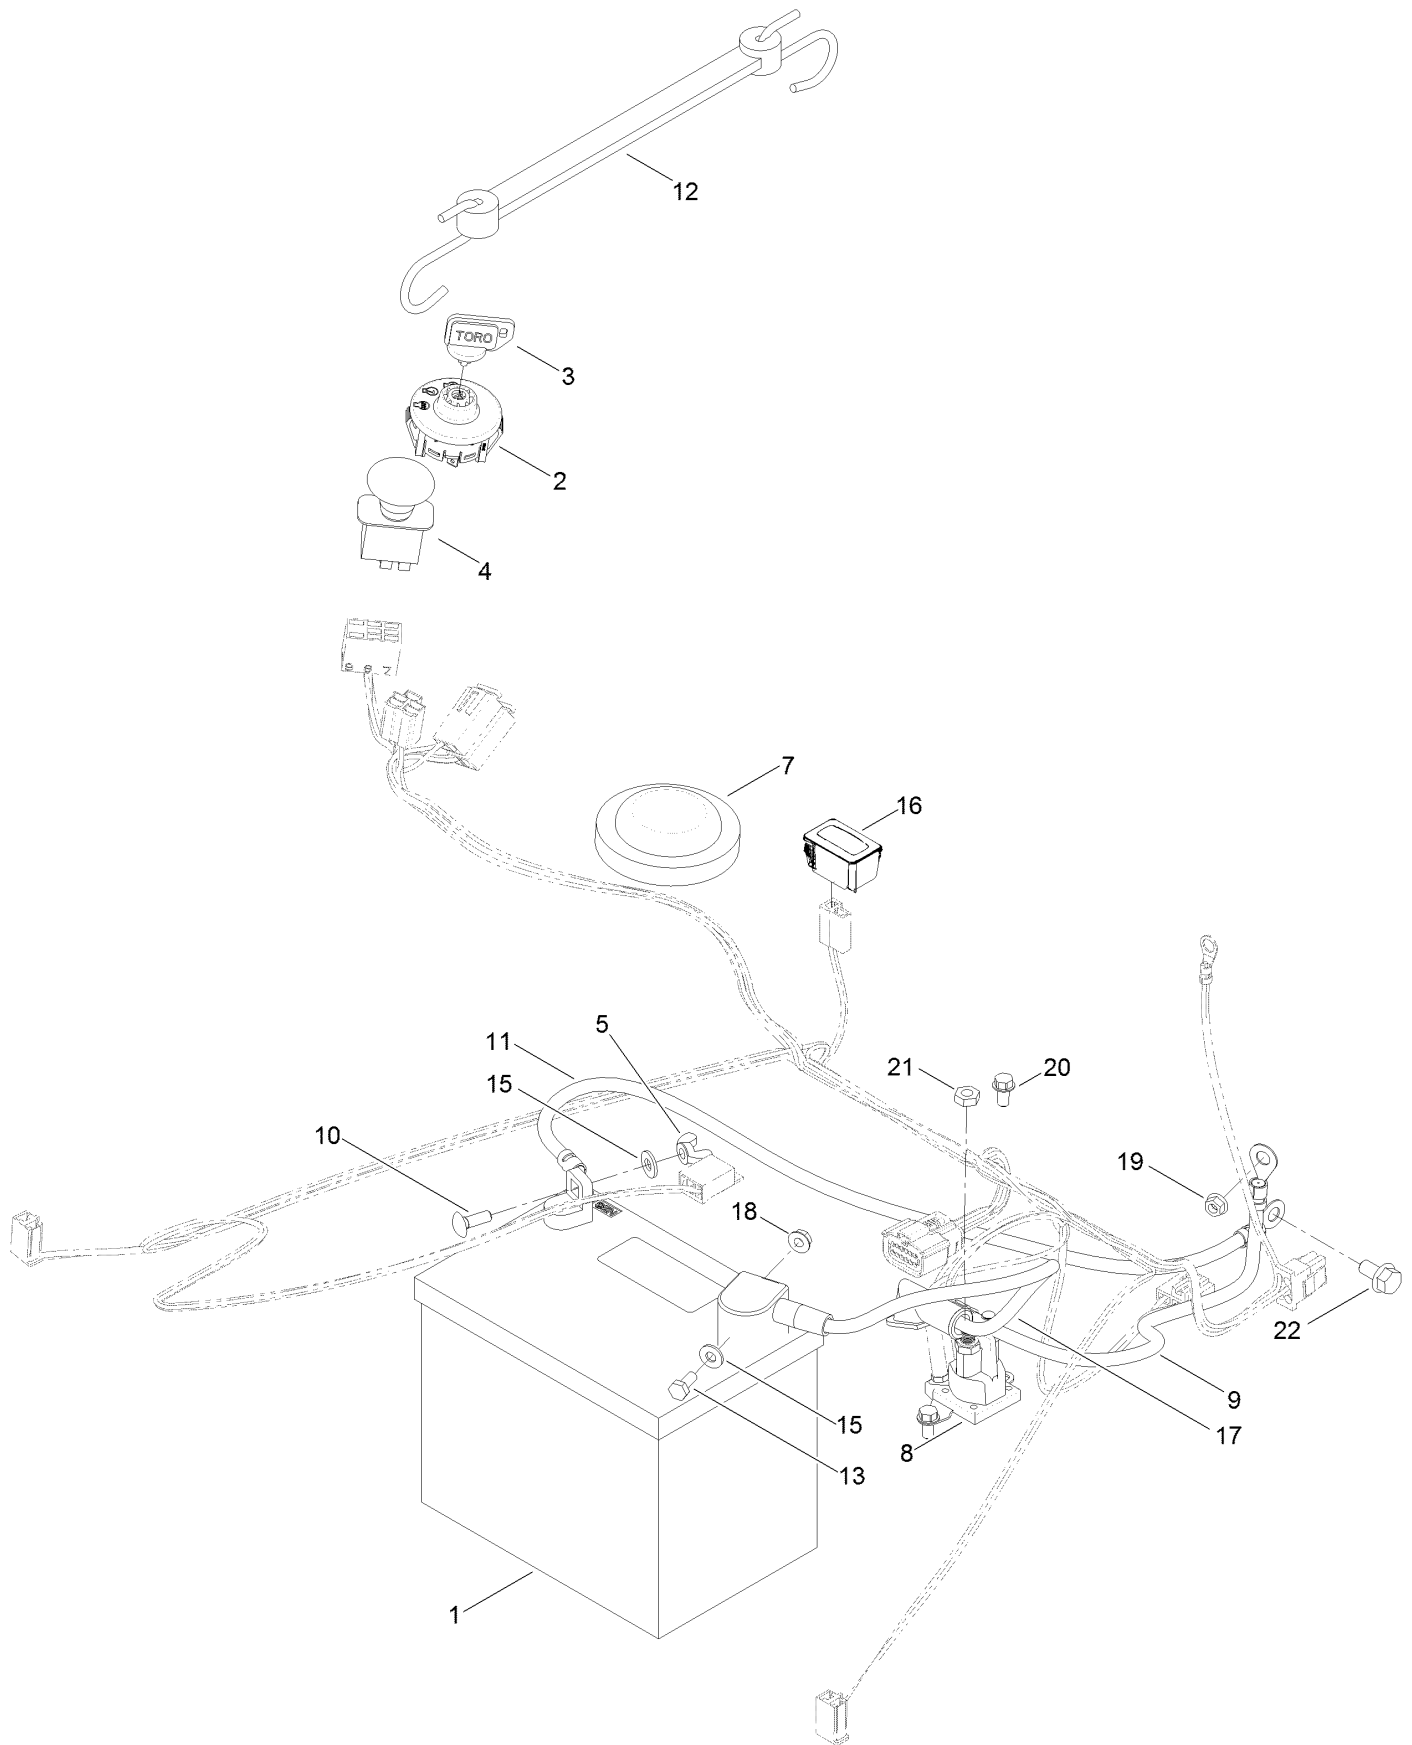

## Battery and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 105-1692           | 1           | Battery                 | 12          | 104-2466           | 1           | Holddown-Battery   |
| 2           | 117-2221           | 1           | Switch-Ignition         | 13          | 321-3              | 1           | Screw-HH           |
| 3           | 63-8360            | 1           | Key-Ignition            | 15          | 3256-22            | 2           | Washer-Flat        |
| 4           | 103-5221           | 1           | Switch-PTO              | 16          | 120-2244           | 1           | Hourmeter          |
| 5           | 32103-22           | 1           | Nut-Wing                | 17          | 119-8897           | 1           | Cable-Battery, Red |
| 7           | 100-3524           | 1           | Switch-Seat             | 18          | 32128-33           | 1           | Nut-HF             |
| 8           | 117-1197           | 1           | Solenoid                | 19          | 33003-00           | 1           | Nut-HF             |
| 9           | 121-0711           | 1           | Cable-Battery, Positive | 20          | 32144-4            | 2           | Screw-HWH          |
| 10          | 3229-1             | 1           | Bolt-CARR               | 21          | 3220-2             | 2           | Nut-Jam            |
| 11          | 119-8899           | 1           | Cable-Battery, Black    | 22          | 3234-14            | 1           | Screw-HHF          |

# Fuse and Wire Harness Assembly

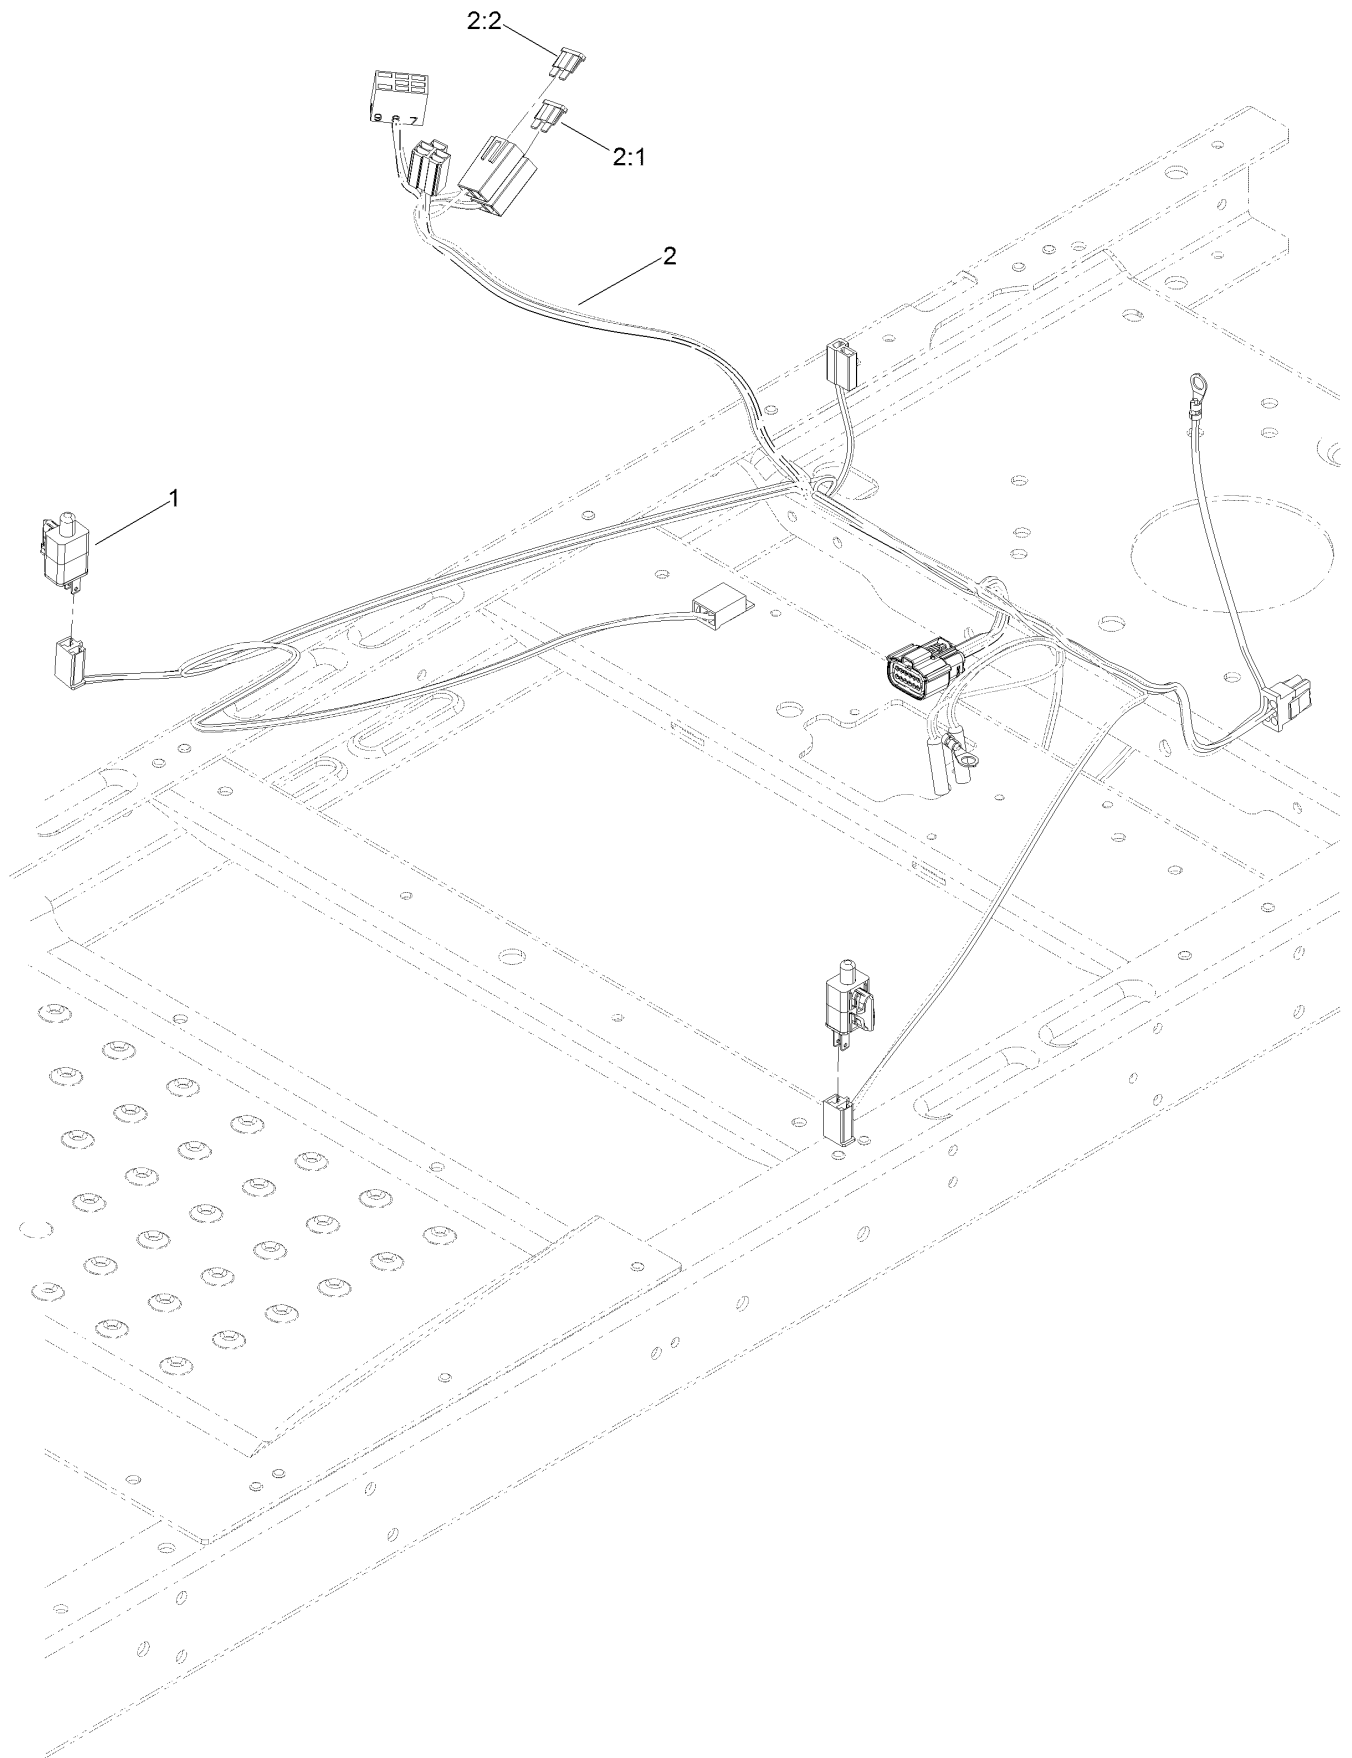




## Fuse and Wire Harness Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 110-6765           | 2           | Switch             |
| 2           | 130-7013           | 1           | Harness-Wire ●     |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2:1         | 109103             | 1           | Fuse-Blade, 30 Amp |
| 2:2         | 109102             | 1           | Fuse-Blade, 25 Amp |

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


# 42 Inch Deck Assembly

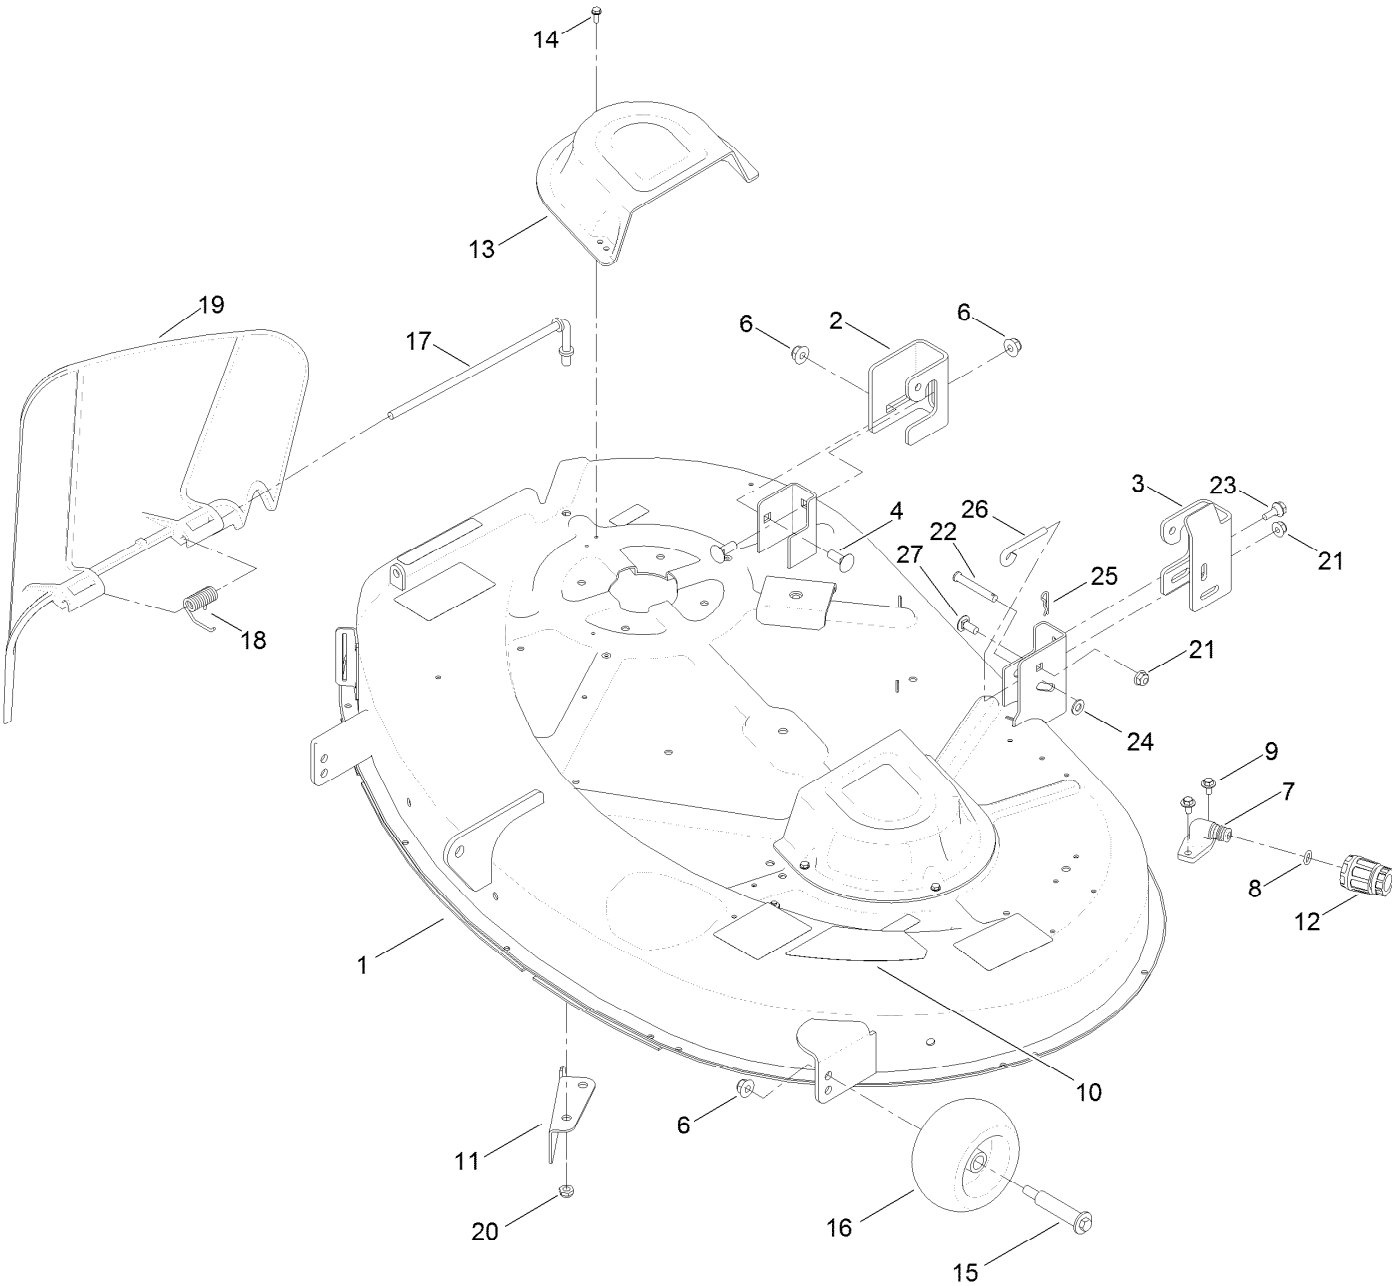

## 42 Inch Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 131-3604           | 1           | 42 Inch Deck And Decal<br>ASM | 15          | 112-3977           | 2           | Bolt-Shoulder       |
| 2           | 131-4138           | 1           | Bracket-Hanger, RH            | 16          | 1-603299           | 2           | Roller-Scalp, Anti  |
| 3           | 131-1091           | 1           | Bracket-Hanger, LH            | 17          | 112-4026           | 1           | Rod-Pivot           |
| 4           | 3231-2             | 2           | Bolt-CARR                     | 18          | 110-6694           | 1           | Spring-Torsion      |
| 6           | 104-8301           | 4           | Nut-HF, NI                    | 19          | 112-3951           | 1           | Deflector           |
| 7           | 95-2747            | 1           | Fitting-Washout               | 20          | 3296-59            | 1           | Nut-Lock, NI        |
| 8           | 46-6290            | 1           | O-Ring                        | 21          | 104-8300           | 2           | Nut-HF, NI          |
| 9           | 46-8560            | 2           | Screw-HHFTF                   | 22          | 110-0618           | 1           | Pin-Clevis          |
| 10          | 117-1222           | 1           | Decal                         | 23          | 120-7024           | 1           | Screw-Shoulder, HHF |
| 11          | 112-3983-03        | 1           | Baffle-Cutoff                 | 24          | 3256-23            | 1           | Washer-Plain        |
| 12          | 95-3270            | 1           | Connector-Hose                | 25          | 1-806003           | 1           | Pin-Cotter          |
| 13          | 108-7889           | 2           | Cover-Belt                    | 26          | 131-0955           | 1           | Rod-Level, Deck     |
| 14          | 32144-1            | 6           | Screw-Taptite                 | 27          | 3230-23            | 1           | Screw-CARR          |

# 42 Inch Deck Assembly No. 131-3604

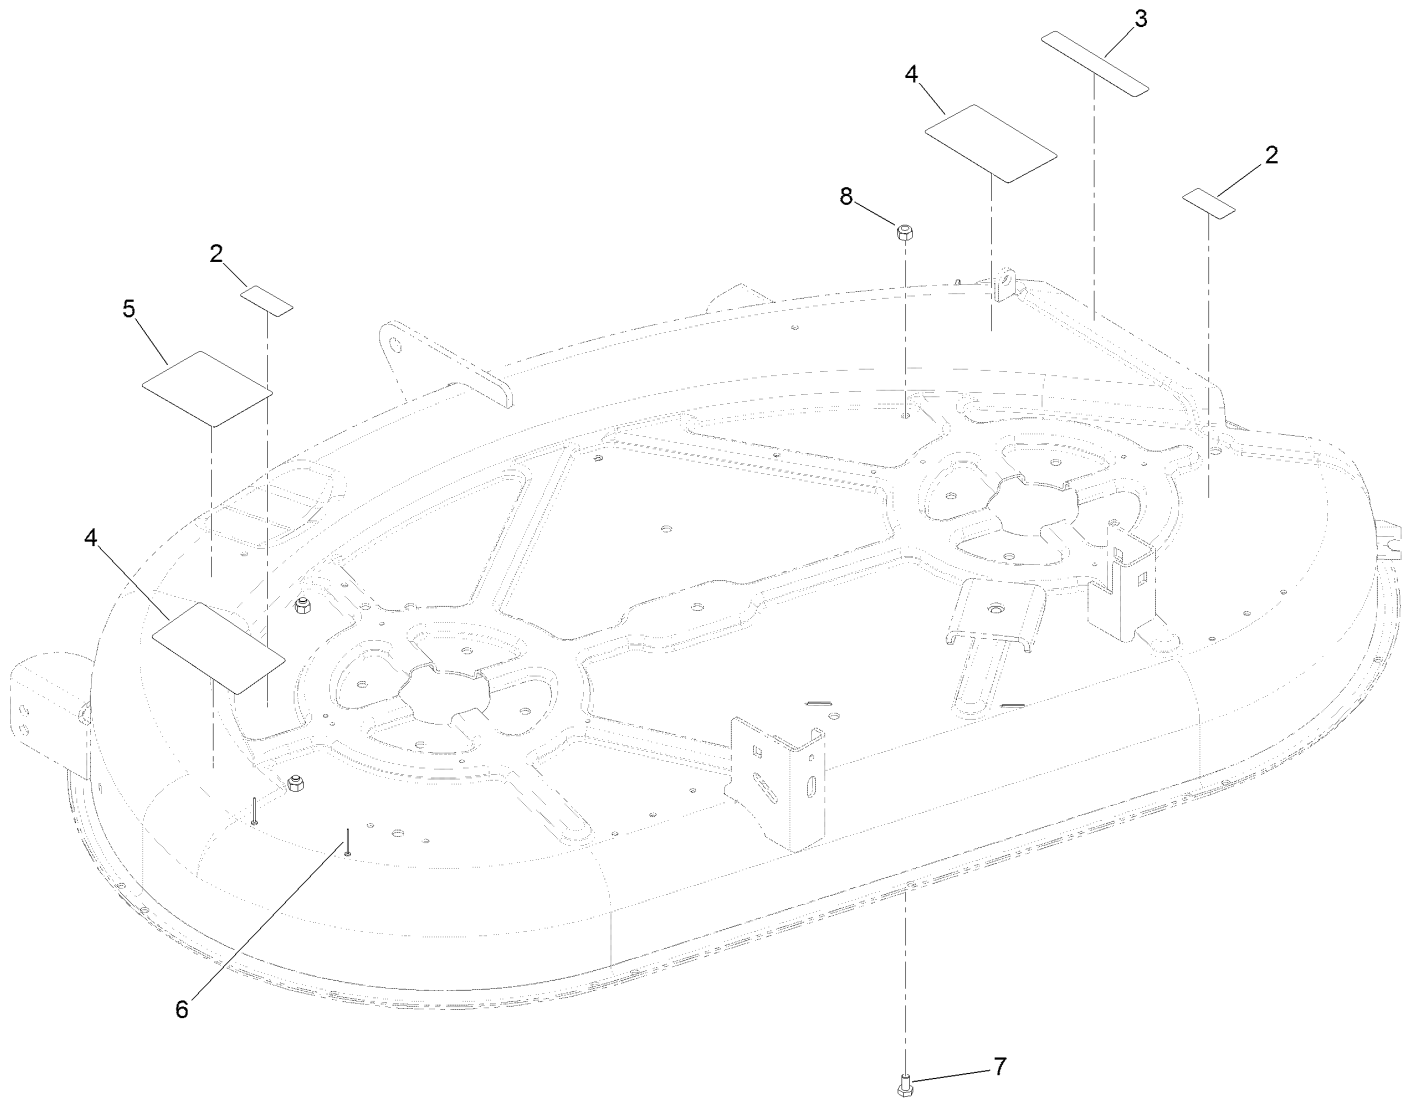


## 42 Inch Deck Assembly No. 131-3604 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 2           | 114-1606           | 2           | Decal-Danger        |
| 3           | 93-7009            | 1           | Decal-Danger        |
| 4           | 110-6691           | 2           | Decal-Danger        |
| 5           | 105-7015           | 1           | Decal-Routing, Belt |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 3290-282           | 2           | Rivet-Blind        |
| 7           | 321-2              | 3           | Screw-HH           |
| 8           | 3296-42            | 3           | Nut-Lock, NI       |

# 42 Inch Deck, Belt and Blade Assembly

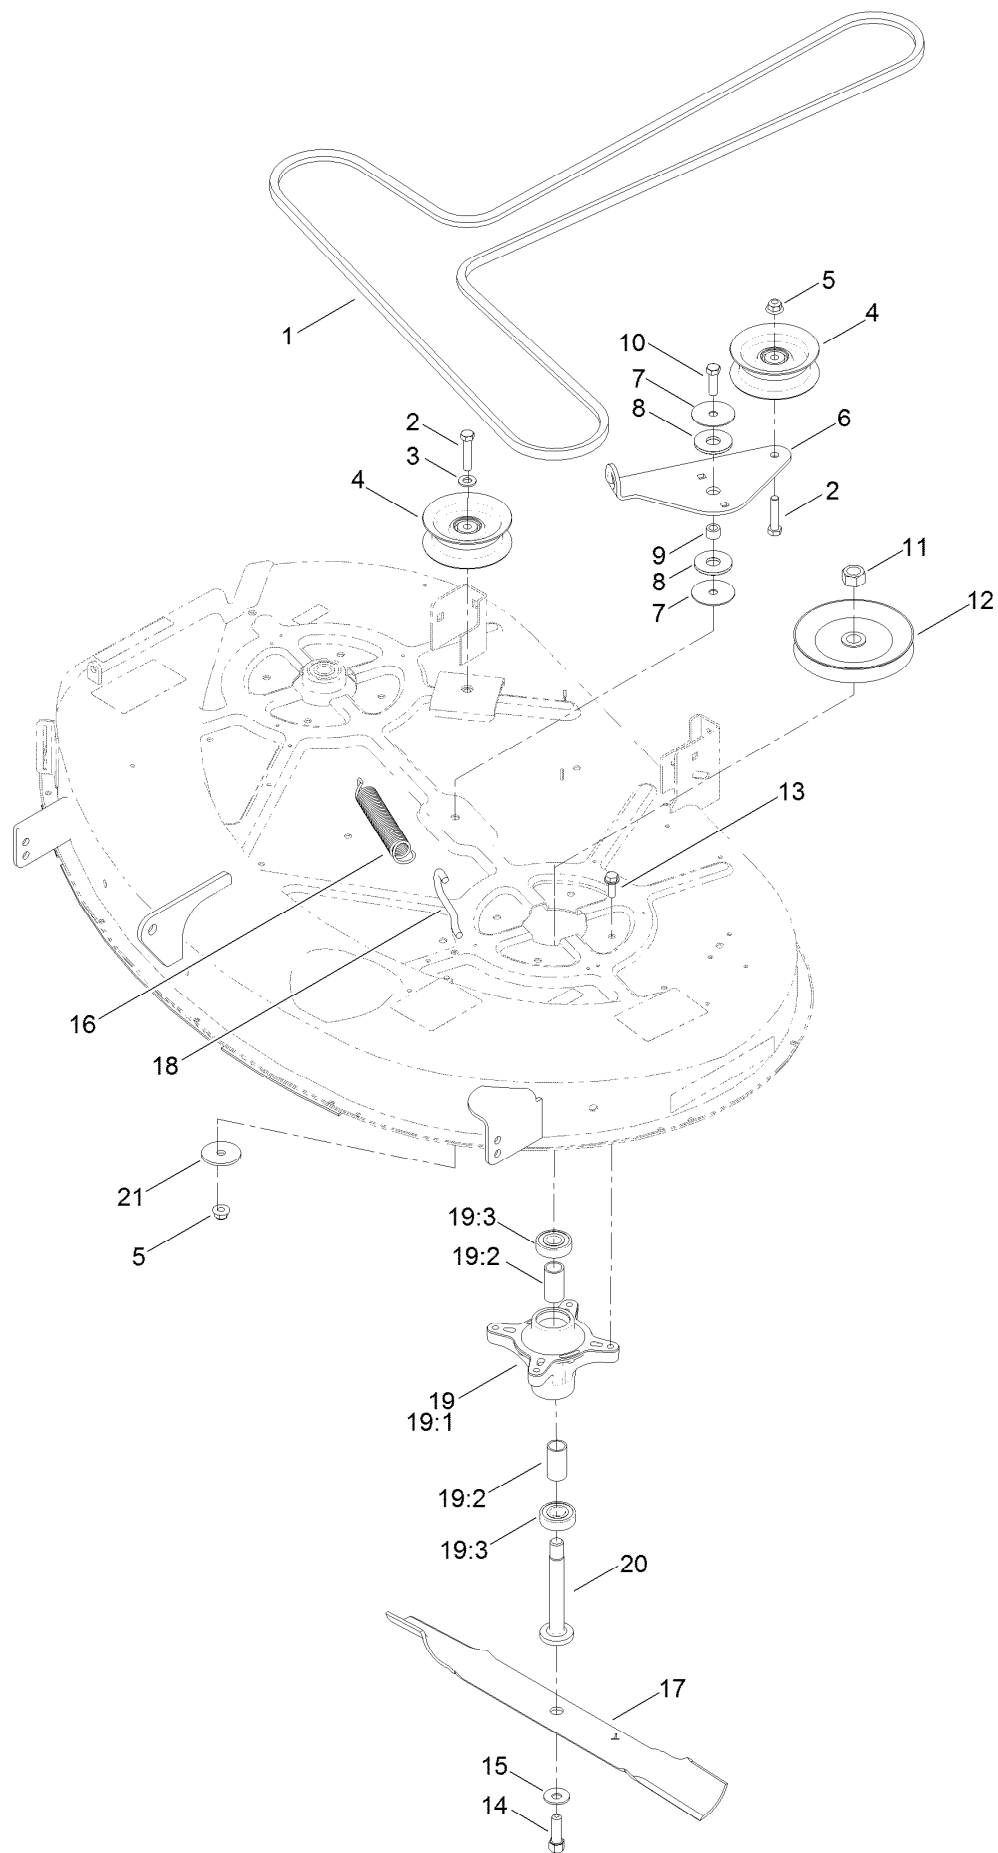

## 42 Inch Deck, Belt and Blade Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 119-8819           | 1           | V-Belt                     | 13          | 32144-41           | 8           | Screw-Taptite       |
| 2           | 323-9              | 2           | Screw-HH                   | 14          | 26-0671            | 2           | Screw-HH            |
| 3           | 3256-24            | 1           | Washer-Flat                | 15          | 3290-465           | 2           | Washer-Belleville   |
| 4           | 106-2175           | 2           | Pulley-Idler, Flat         | 16          | 106-2177           | 1           | Spring-Extension    |
| 5           | 104-8301           | 2           | Nut-HF, NI                 | 17          | 131-3939-03        | 2           | Blade-High Lift     |
| 6           | 114-8540           | 1           | Arm-Idler                  | 18          | 88-5970            | 1           | Hook-Return, Spring |
| 7           | 120-2229           | 2           | Washer                     | 19          | 121-0751           | 2           | Spindle ASM         |
| 8           | 114-0463           | 2           | Washer-Friction, Composite | 19:1        | 117-7267           | 1           | Spindle             |
| 9           | 115-4986           | 1           | Spacer                     | 19:2        | 120-7935           | 2           | Spacer              |
| 10          | 323-7              | 1           | Screw-HH                   | 19:3        | 100-1048           | 2           | Bearing-Ball        |
| 11          | 3219-6             | 2           | Nut-Hex                    | 20          | 117-7268           | 2           | Shaft-Spindle       |
| 12          | 125-5574           | 2           | Pulley                     | 21          | 63-7400            | 1           | Washer-Rebound      |

# Attachments and Accessories

## For 74723 TimeCutter SS 4250 Riding Mower

| Product Name                                                                  | Model/Part   |
|-------------------------------------------------------------------------------|--------------|
| 42in Blowout Ring Kit.....                                                    | 114-1620     |
| All Season Synthetic Oil.....                                                 | 117-0066     |
| Fuel Stabilizer (4oz).....                                                    | 117-0089     |
| Fuel Stabilizer (16oz).....                                                   | 117-0090     |
| Seat Cover w/Arm Rest .....                                                   | 117-0097     |
| Striping Kit .....                                                            | 120-7905     |
| Jack Mount Kit .....                                                          | 126-5251     |
| Jack Kit .....                                                                | 127-6666     |
| Replacement Blade Kit .....                                                   | 131-3939-03P |
| Attachment Mount Kit .....                                                    | 131-3966     |
| 42in Recycler Kit.....                                                        | 131-4182     |
| Weight Kit .....                                                              | 131-7658     |
| Deluxe Seat Kit.....                                                          | 131-7699     |
| HD Air Cleaner Kit .....                                                      | 136-7860     |
| 10w30 4-cycle Engine Oil (32oz Bottle) .....                                  | 38280        |
| Toro 4-cycle SAE 30 Oil (32oz Bottle) .....                                   | 38903        |
| Storage Cover .....                                                           | 490-7516     |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower ..... | 79010        |
| Sunshade Kit .....                                                            | 79011        |
| Cargo Carrier .....                                                           | 79040        |
| Assist Handle and Step Kit .....                                              | 79339        |
| 42in Bagger .....                                                             | 79381        |



**Notes:**

**Notes:**

**Notes:**



**Count on it.**