



Canopy Extension Kit

Workman® GTX Utility Vehicle

Model No. 07920—Serial No. 400000000 and Up

Installation Instructions

Installation

1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the engine and remove the key.
4. Disconnect the battery; refer to your *Operator's Manual*.
5. Raise the cargo bed to the dump position and secure it with the prop rod.



2

Installing the Rear Mounting Tubes to the Existing Canopy

Parts needed for this procedure:

2	Rear mounting tube
4	Carriage bolt (5/16 x 3-1/2 inches)
4	Flange nut (5/16 inch)

Procedure

Secure the 2 rear mounting tubes to the existing canopy rear tubes using the 4 carriage bolts (5/16 x 3-1/2 inches) and 4 flange nuts (5/16 inch) as shown in [Figure 1](#).

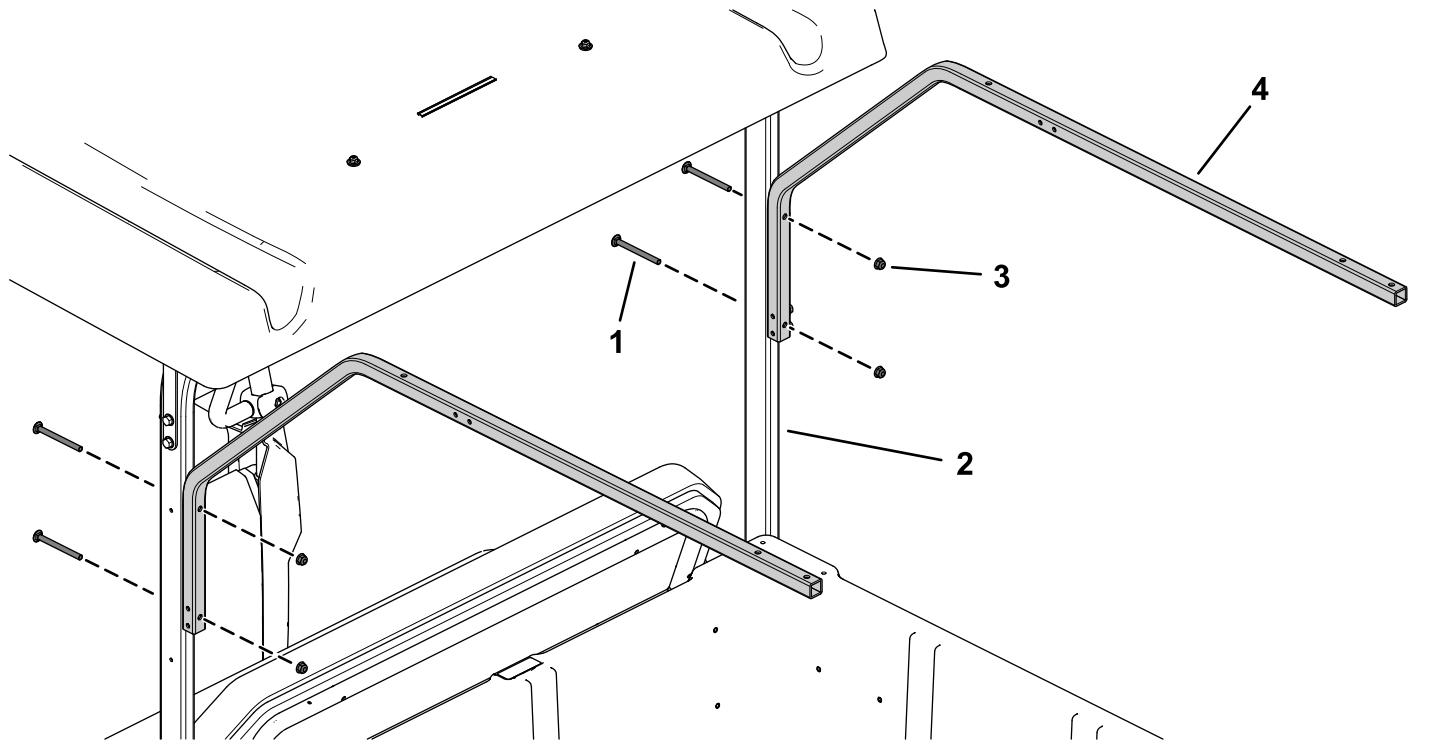


Figure 1

1. Carriage bolt (5/16 x 3-1/2 inches)	3. Flange nut (5/16 inch)
2. Existing canopy rear tube	4. Rear mounting tube

If you are installing on a 2-person canopy (Model 07921), install rear mounting tubes in the **bottom** holes on the existing rear tubes ([Figure 2](#)).

If you are installing on a 4-person canopy (Model 07922), install rear mounting tubes in the **top** holes on the existing rear tubes ([Figure 2](#)).

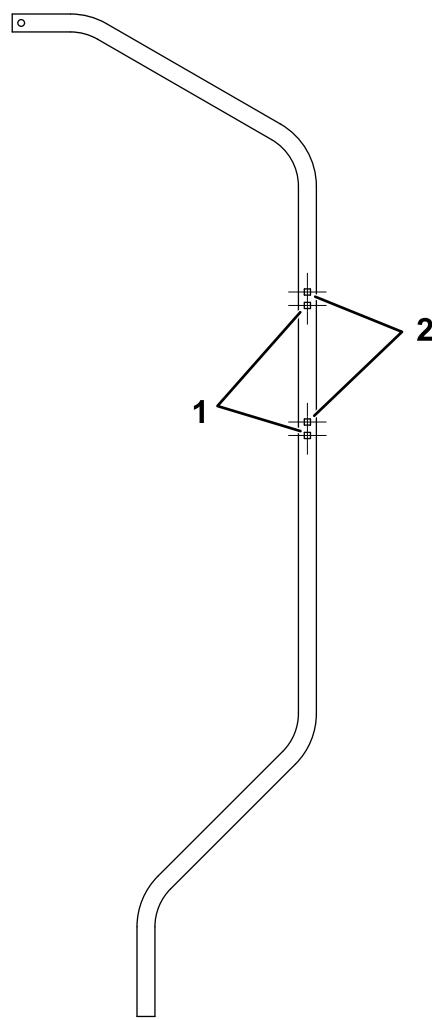


Figure 2

g261563

1. Holes for 2-person canopy (Model 07921)

2. Holes for 4-person canopy (Model 07922)

3

Installing the Support Brackets

Parts needed for this procedure:

2	Support bracket
8	Hex-washer head bolt (5/16 x 3/4 inch)

Procedure

Secure the 2 support brackets to the rear mounting tubes using 8 hex-washer head bolts (5/16 x 3/4 inch) as shown in [Figure 3](#).

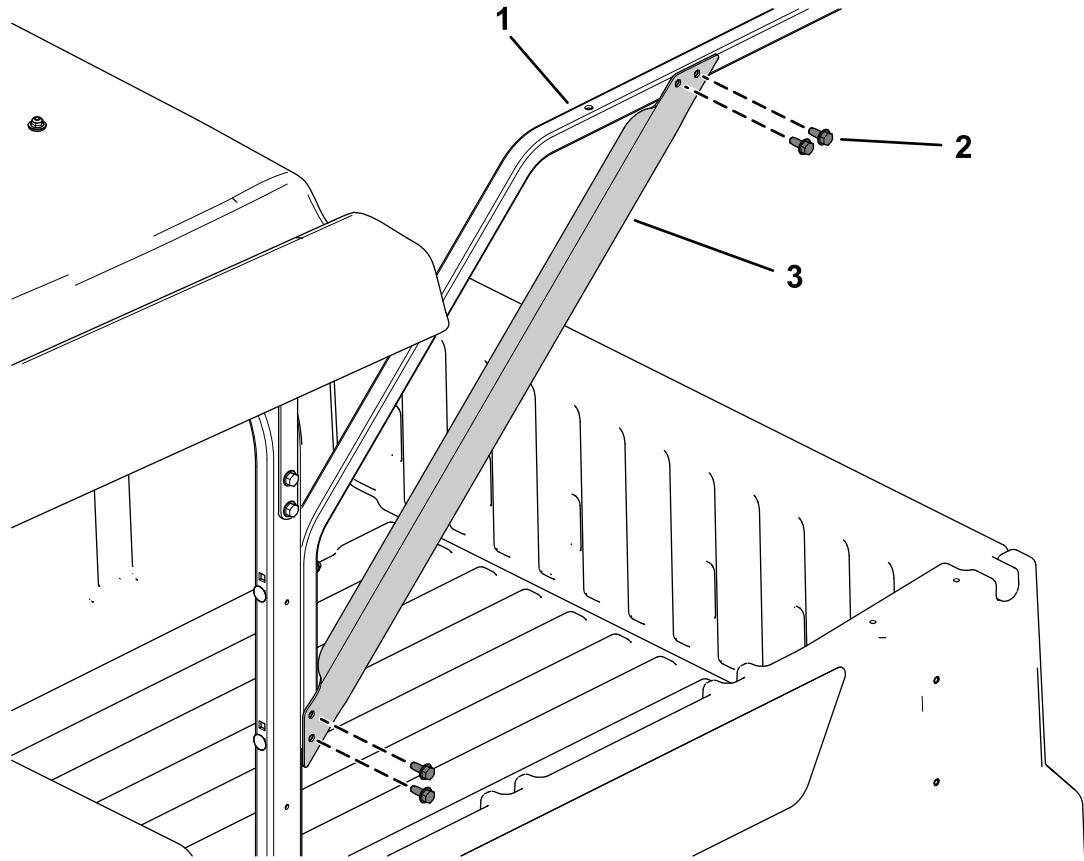


Figure 3
Left side shown

- 1. Rear mounting tube
- 2. Hex-washer head bolt (5/16 x 3/4 inch)
- 3. Support bracket

4


Installing the Canopy Extension

Parts needed for this procedure:

1	Canopy extension
1	Canopy support bracket
6	Sealing washer
6	Locknut (1/4 inch)
2	Flange-head bolt (1/4 x 2-1/4 inches)
4	Flange-head bolt (1/4 x 1-3/4 inches)
1	Trim seal
2	Spacer

Procedure

1. Place the canopy extension on top of the installed rear tube mounts ([Figure 4](#)).

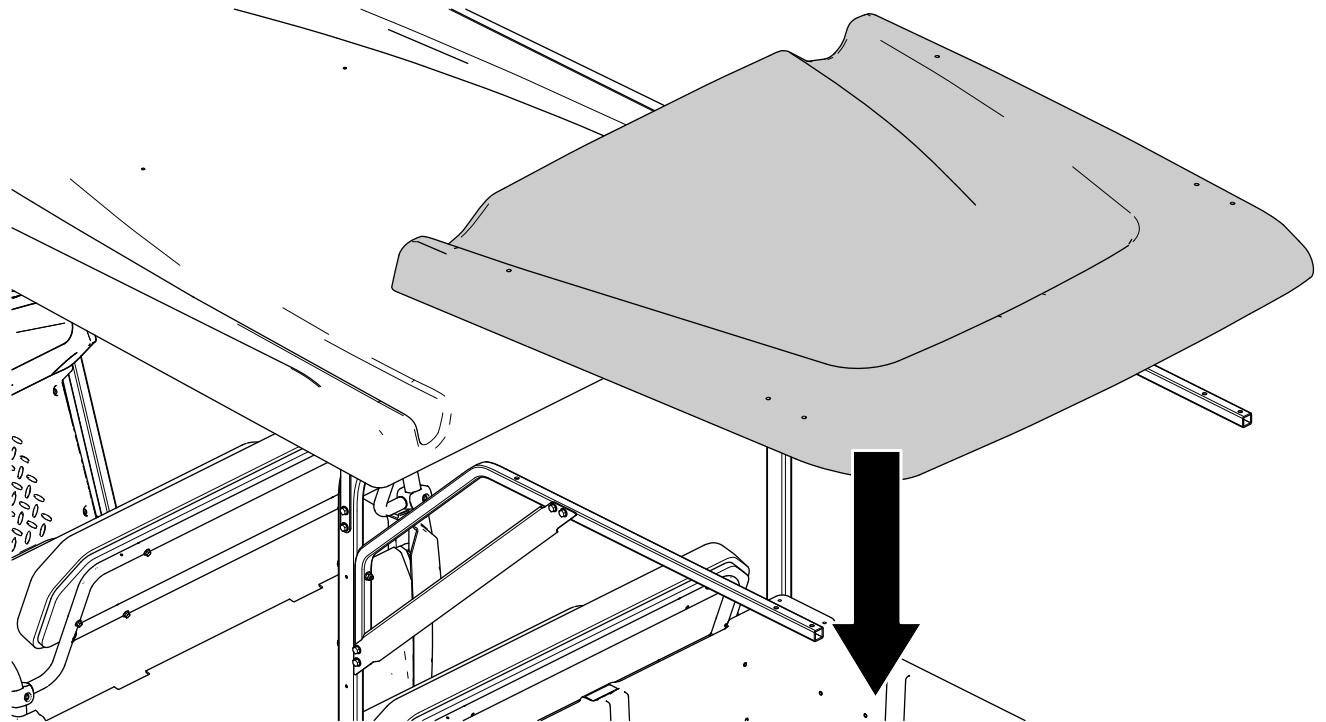

2. Secure the canopy extension using 4 flange-head bolts (1/4 x 1-3/4 inches), 4 sealing washers, and 4 locknuts (1/4 inch) as shown in [Figure 5](#).

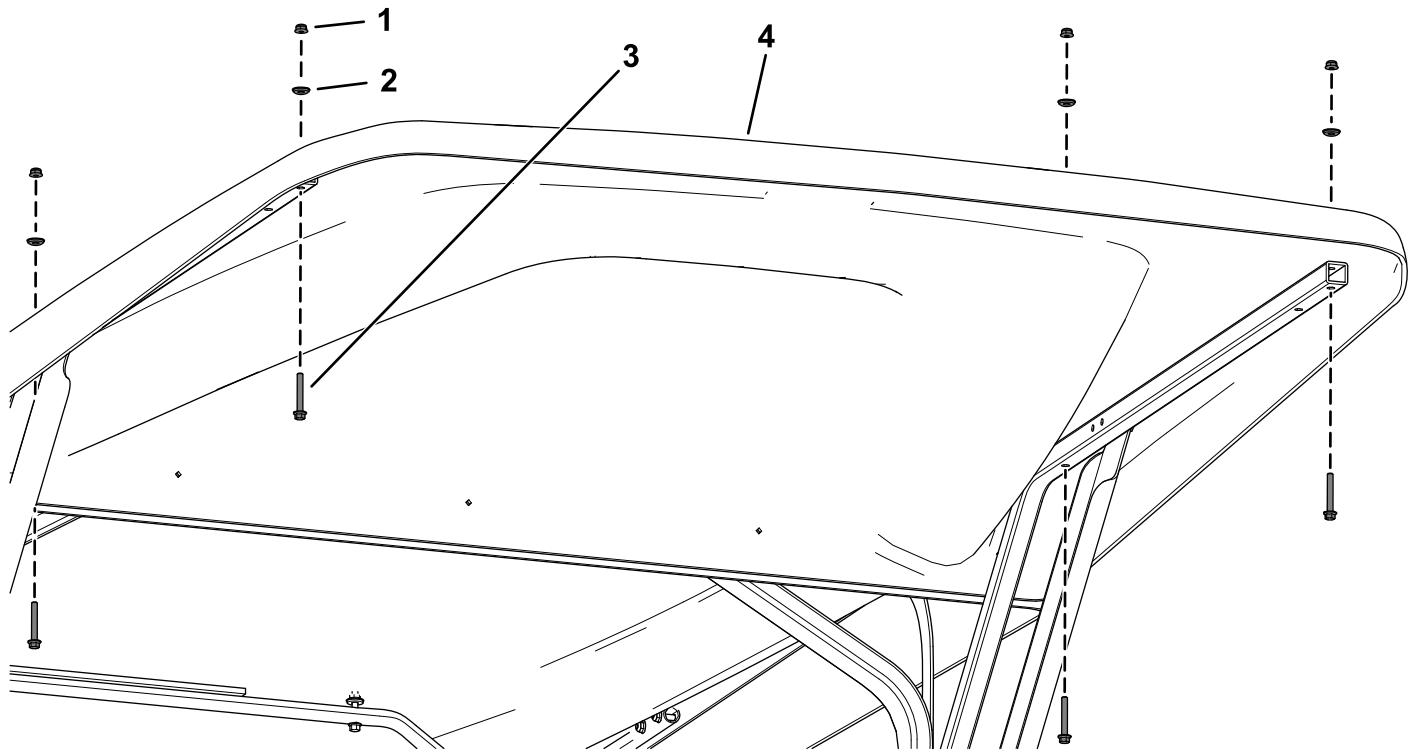


Figure 5

1. Locknut (1/4 inch)	3. Flange-head bolt (1/4 x 1-3/4 inches)
2. Sealing washer	4. Canopy extension

3. Install the trim seal onto the canopy support bracket ([Figure 6](#)).

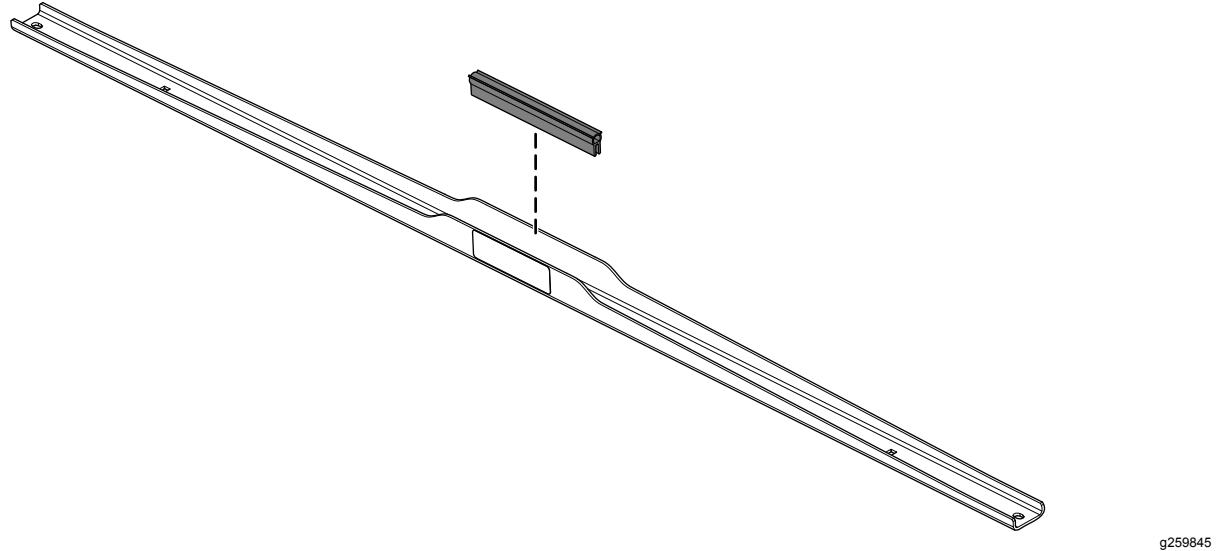


Figure 6

4. Secure the canopy support bracket to the canopy extension using 2 flange-head bolts (1/4 x 2-1/4 inches), 2 spacers, 2 sealing washers, and 2 locknuts (1/4 inch) as shown in [Figure 7](#).

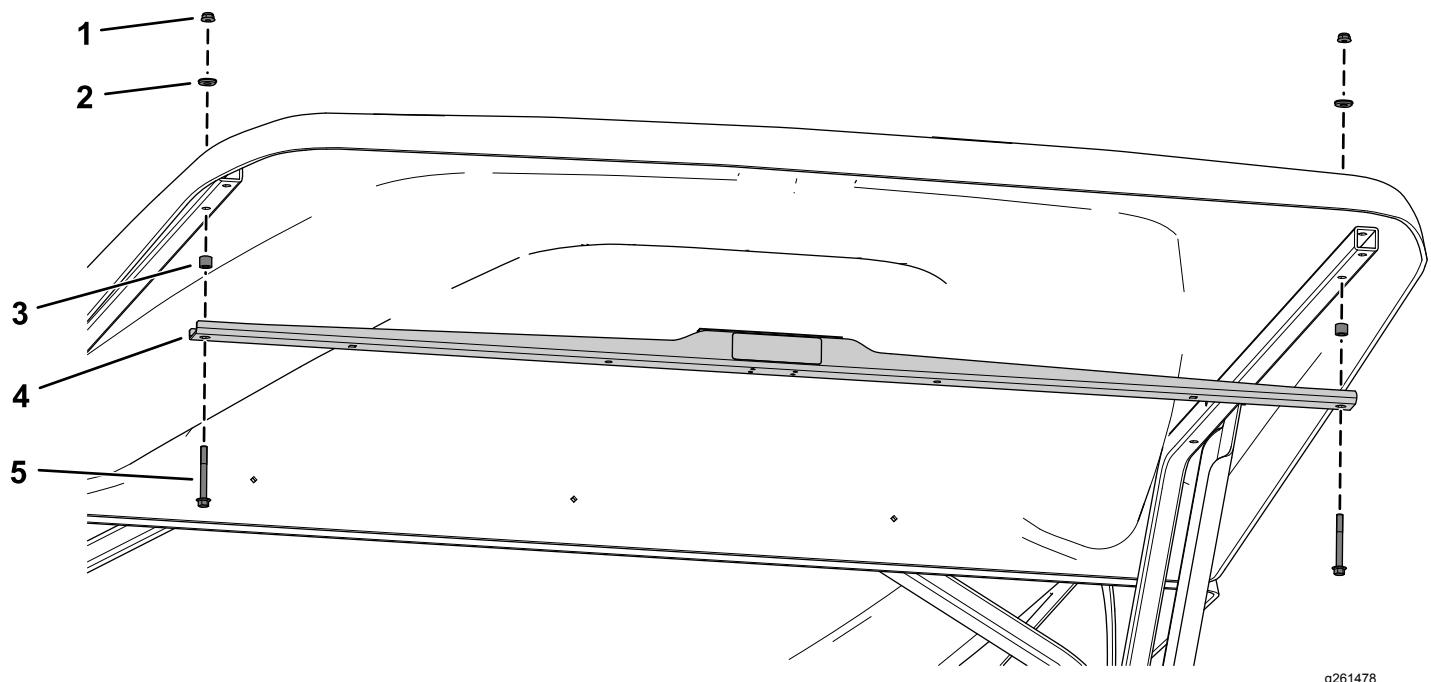


Figure 7

1. Locknut (1/4 inch)	4. Canopy support bracket
2. Sealing washer	5. Flange-head bolt (1/4 x 2-1/4 inches)
3. Spacer	

5

Installing the Rain Gutter

Parts needed for this procedure:

1	Rain gutter
10	Plastic rivet

Procedure

1. Secure the rain gutter to the canopy extension side using 5 plastic rivets (Figure 8).

Note: The orientation of the holes differ on each side of the rain gutter. Ensure that the holes align with the canopy extension before installing the plastic rivets.

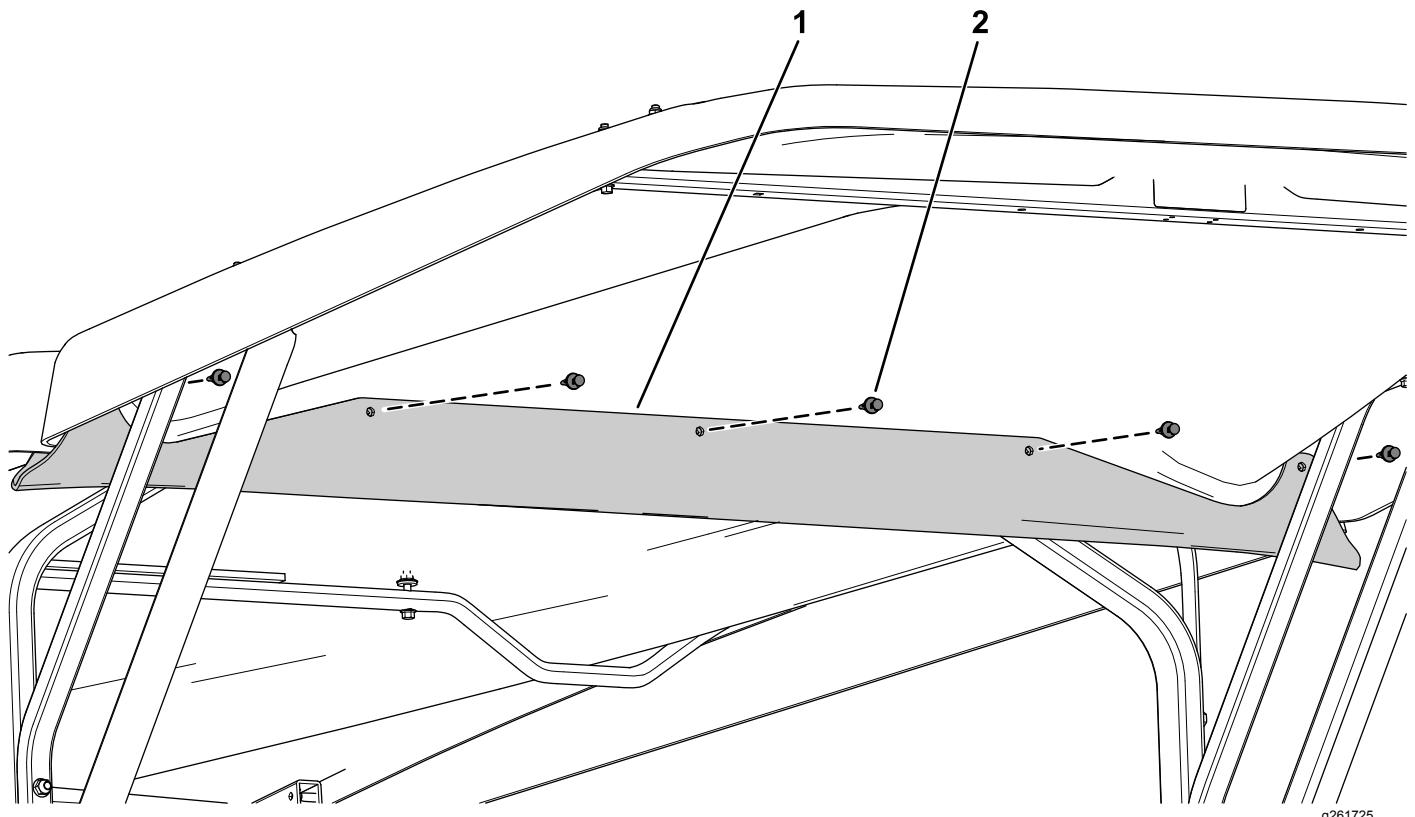


Figure 8

1. Rain gutter
2. Plastic rivet

2. Using the rain gutter as the template, drill 5 holes (6.4 mm or 1/4 inch) into the front canopy ([Figure 9](#)).

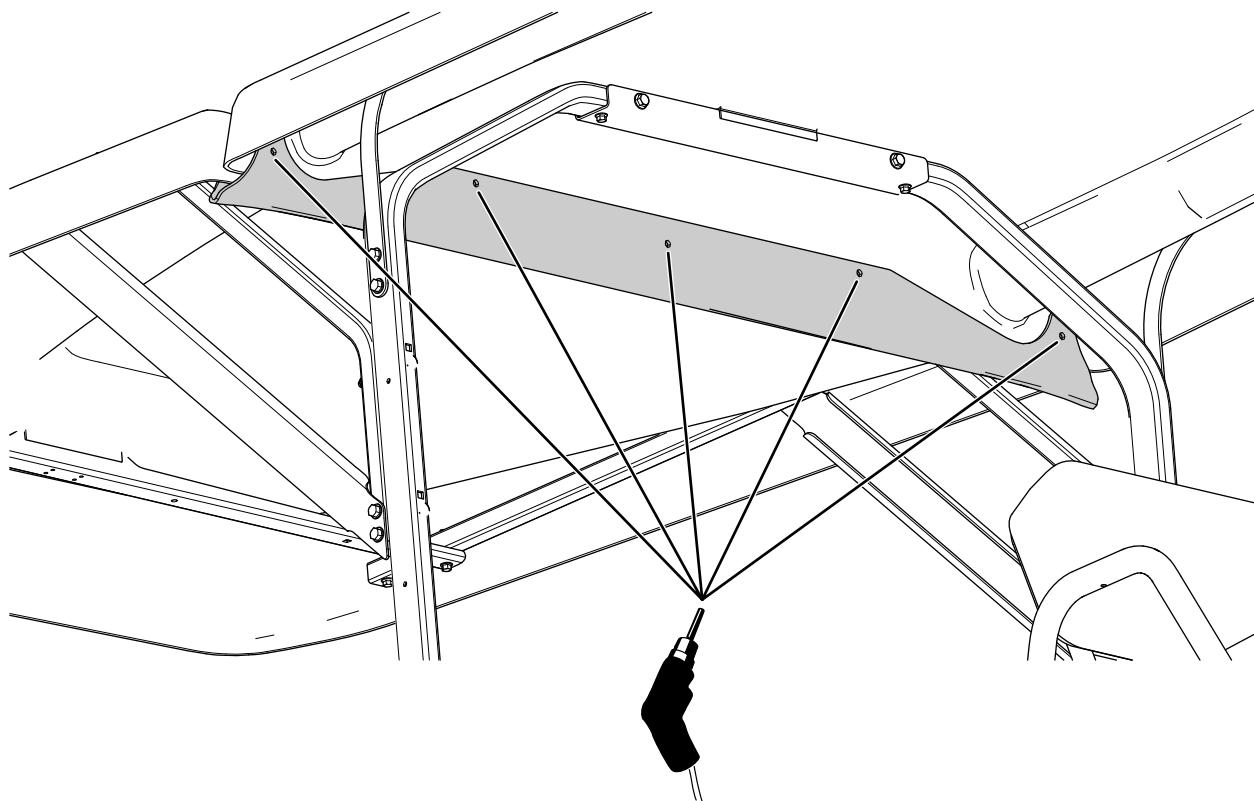


Figure 9

g261568

3. Secure the rain gutter to the front canopy side using 5 plastic rivets ([Figure 10](#)).

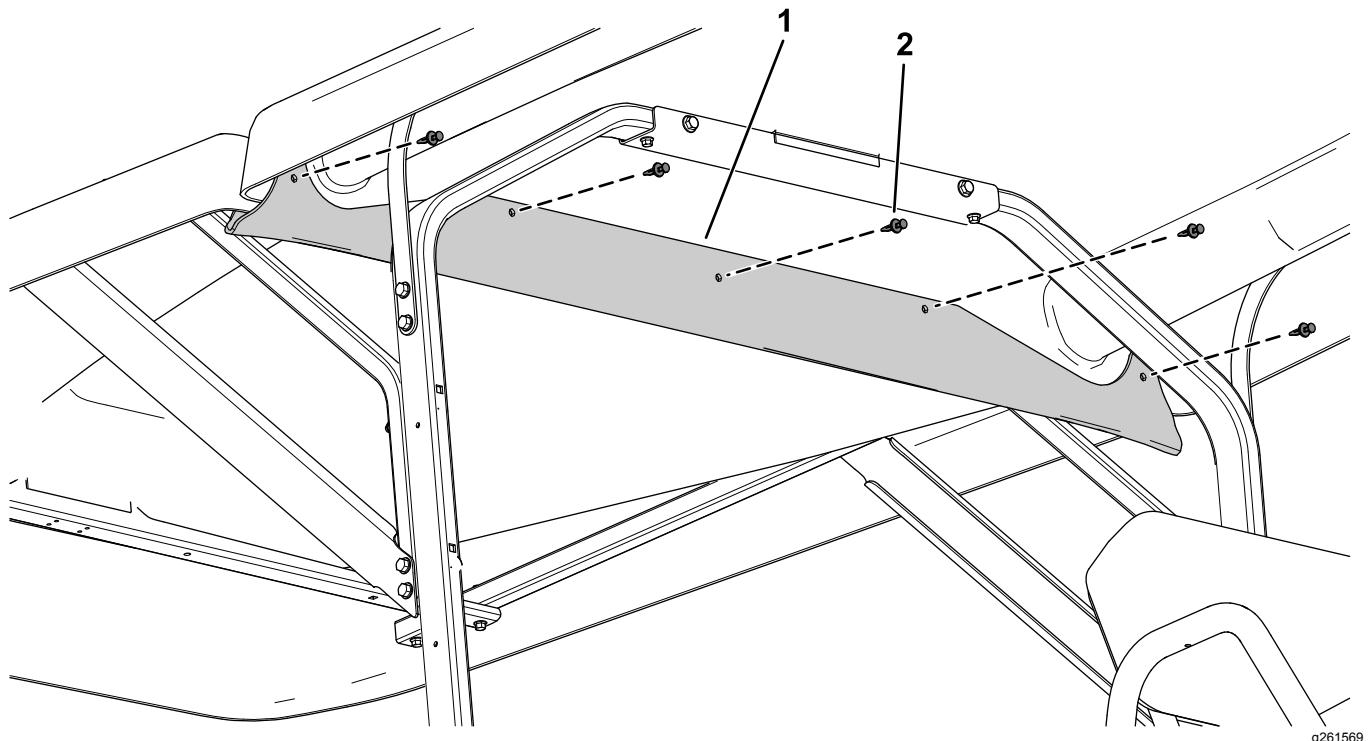


Figure 10

g261569

1. Rain gutter
2. Plastic rivet

6

Connecting the Battery

No Parts Required

Procedure

Connect the battery; refer to your *Operator's Manual*.

Notes:



The Toro Warranty

A Two-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.
* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
952-888-8801 or 800-952-2740
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your *Operator's Manual*. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent, or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved fuels, coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Failure or performance issues due to the use of fuels (e.g. gasoline, diesel, or biodiesel) that do not conform to their respective industry standards.

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Deep Cycle and Lithium-Ion Battery Warranty:

Deep cycle and Lithium-Ion batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense. Note: (Lithium-Ion battery only): A Lithium-Ion battery has a part only prorated warranty beginning year 3 through year 5 based on the time in service and kilowatt hours used. Refer to the *Operator's Manual* for additional information.

Maintenance is at Owner's Expense

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, and completing recommended maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement supplied with your product or contained in the engine manufacturer's documentation for details.