


**TORO®**
**MODEL NO. 09502-90001 & UP**  
**MODEL NO. 09512**
**PARTS**  
**CATALOG**

## FAIRWAY AERATOR

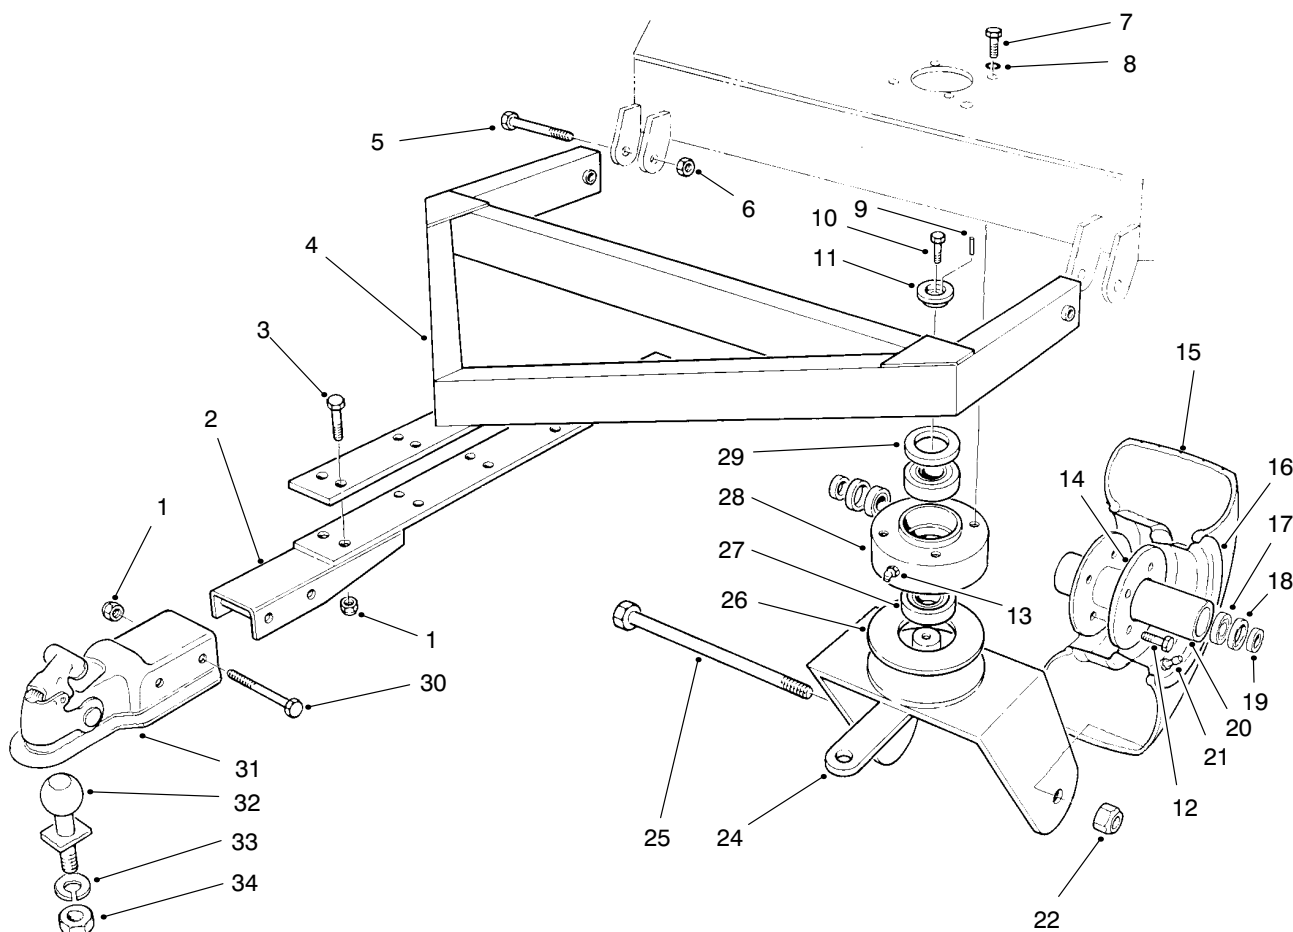


T-1309-1

## HITCH & FRONT WHEEL ASSEMBLY

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 1        | 3296-23  | Nut-Lock           | 6        |
| 2        | 71-7020  | ASM-Adapter, Hitch | 1        |
| 3        | 325-8    | Screw-HH           | 4        |
| 4        | 71-6890  | ASM-Hitch          | 1        |
| 5        | 327-14   | Screw-HH           | 2        |
| 6        | 3217-11  | Nut-Hex.           | 2        |
| 7        | 325-5    | Screw-HH           | 4        |
| 8        | 3253-7   | Washer-Lock        | 4        |
| 9        | 32121-3  | Pin-Roll           | 1        |
| 10       | 325-6    | Screw-HH           | 1        |
| 11       | 71-6820  | Cap-Retaining      | 1        |
| 12       | 3212-5   | Screw-HH           | 4        |
| 13       | 302-61   | Fitting-Grease     | 1        |
| 14       | 71-6760  | Support-Rim        | 1        |
| 15       | 231-119  | Tire               | 1        |
| 16       | 217-60   | Rim                | 1        |
| 17       | 71-6780  | Bearing            | 2        |

| Ref. No. | Part No. | Description     | No. Used |
|----------|----------|-----------------|----------|
| 18       | 71-6790  | Seal-Oil        | 2        |
| 19       | 71-6750  | Spacer-Outer    | 2        |
| 20       | 71-6830  | ASM-Hub Wheel   | 1        |
| 21       | 232-35   | Stem-Valve      | 1        |
| 22       | 3296-70  | Nut-Hex.        | 1        |
| 24       | 71-6730  | ASM-Caster      | 1        |
| 25       | 71-6800  | Shaft-Axle      | 1        |
| 26       | 71-6810  | Disc-Plastic    | 1        |
| 27       | 71-6720  | Bearing         | 2        |
| 28       | 71-6770  | Housing-Bearing | 1        |
| 29       | 71-6710  | Seal-Oil        | 1        |
| 30       | 325-17   | Screw-HH        | 2        |
| 31       | 71-7010  | Coupler-Hitch   | 1        |
| 32       | 71-7070  | Ball-Hitch      | 1        |
| 33       | 3253-11  | Washer-Lock     | 1        |
| 34       | 72-8010  | Nut-Hex.        | 1        |

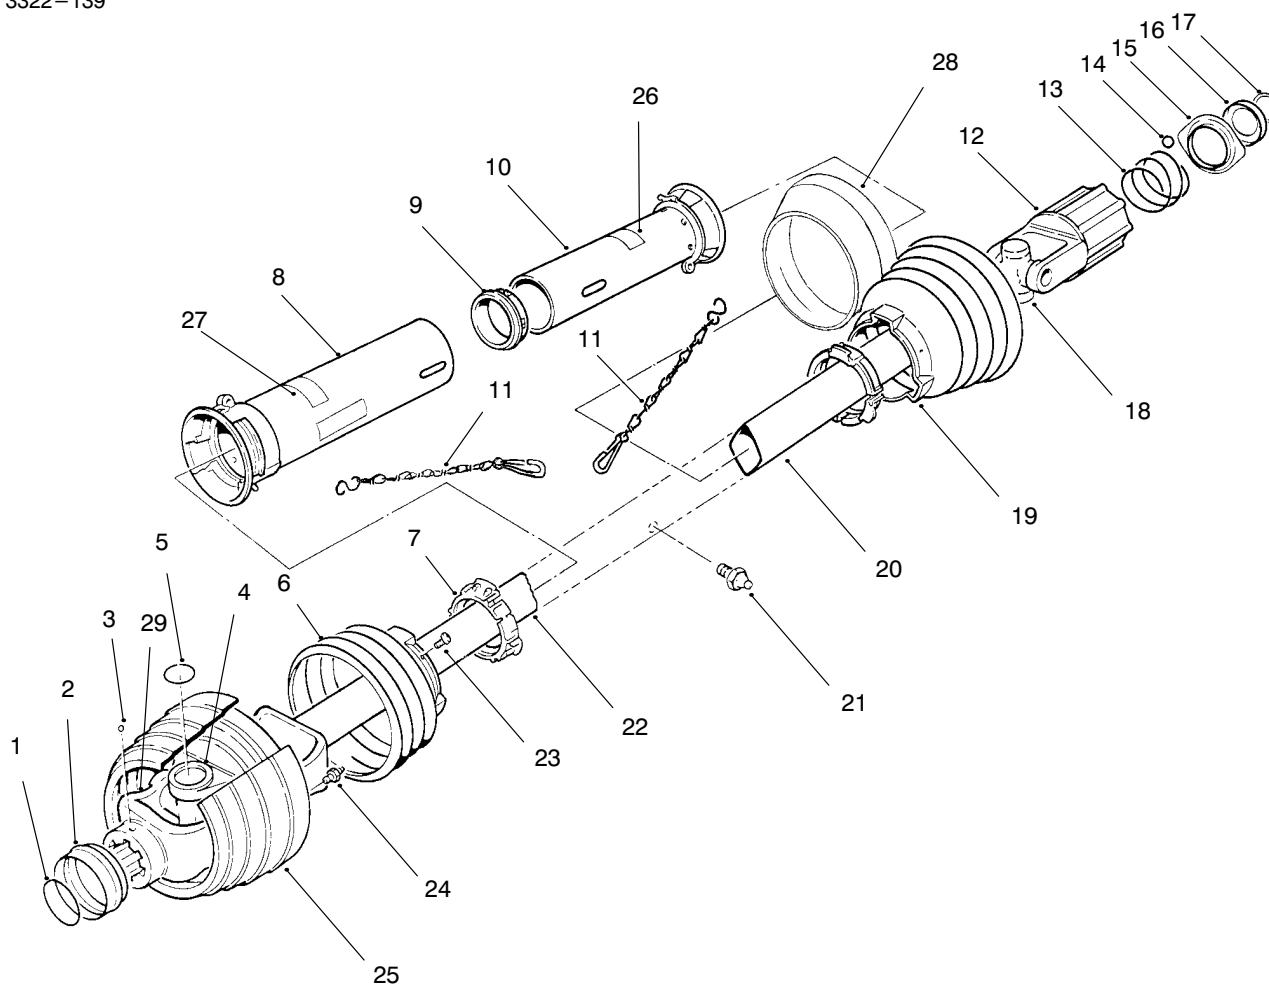

T-1456-1


## FRONT DRIVE LINE ASSEMBLY NO. 94-9144

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 1        |          | Ring-Retaining      | 1        |
| 2        |          | ASM-Collar          | 1        |
| 3        |          | Ball                | 3        |
| 4        | 84-6300  | Yoke-Double         | 1        |
| 5        | 84-6310  | Kit-Cross & Bearing | 2        |
| 6        | 84-6350  | Shield-3 Rib        | 1        |
| 7        | 77-4740  | Ring-Bearing        | 2        |
| 8        | 94-9146  | Tube-Shield, Outer  | 1        |
| 9        | 77-4790  | Bearing-Support     | 1        |
| 10       | 84-6330  | Tube-Shield, Inner  | 1        |
| 11       | 77-4760  | Chain-Safety        | 2        |
| 12       | 94-9145  | Clutch-Radial Pin   | 1        |
| 13       |          | Spring-Compression  | 1        |
| 14       |          | Ball                | 1        |
| 15       |          | Collar-Lock         | 1        |
| 16       |          | Ring-Flanged        | 1        |
| 17       |          | Ring-Snap           | 1        |
| 18       | 77-4720  | Kit-Cross & Bearing | 1        |
| 19       | 77-4730  | Cone-Shield         | 1        |

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 20       | 84-6390  | Outer Shaft & Yoke         | 1        |
| 21       | 84-6370  | Fitting-Grease             | 1        |
| 22       | 84-6380  | Inner Shaft & Yoke         | 1        |
| 23       | 84-6360  | Screw                      | 8        |
| 24       | 84-6290  | Fitting-Grease             | 1        |
| 25       | 84-6340  | ASM-Bearing & Cone         | 1        |
| 26       | 92-7937  | Decal-Inner                | 1        |
| 27       | 92-7936  | Decal-Outer                | 1        |
| 28       | 93-7734  | Reinforced Collar          | 1        |
| 29       | 84-6280  | ASM-Yoke                   | 1        |
|          |          | (Incl. Ref.#1-4)           | 1        |
| *        | 77-4670  | Kit-Collar                 | 1        |
|          |          | (Incl. Ref.#1-3)           | 1        |
| *        | 77-4660  | Kit-Flange                 | 1        |
|          |          | (Incl. Ref.#13-17)         | 1        |
| *        | 94-9144  | Drive Line (Complete)      | 1        |
| **       | 94-1775  | Kit-Clutch, Cams & Springs | 4        |

\*Not Illustrated

\*\*Number of Kits Required to Rebuild Clutch

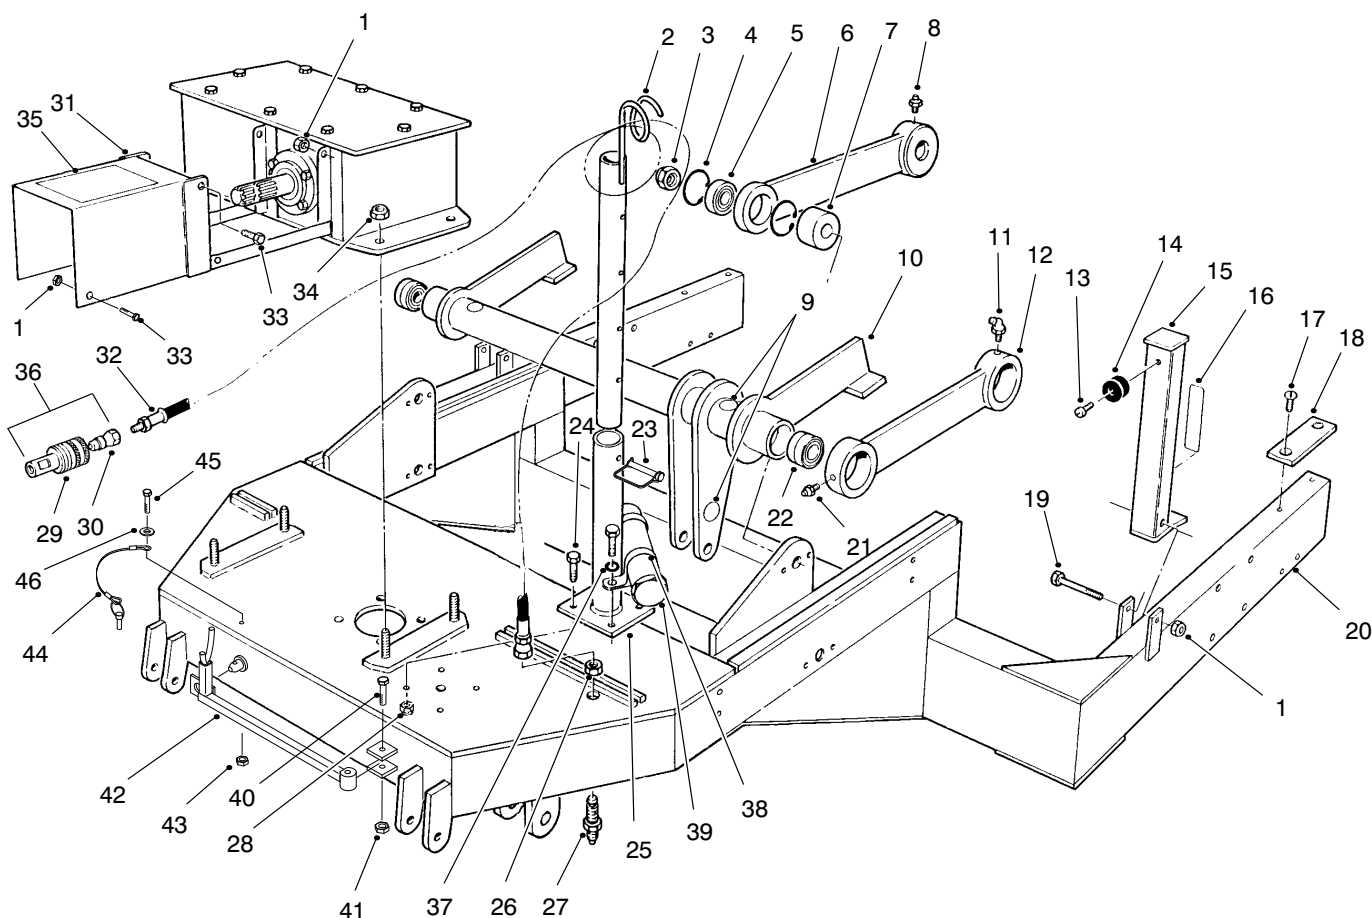


T-0898-3

## CHASSIS ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used | Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|----------------------|----------|----------|----------|-------------------------------------------|----------|
| 1        | 3296-39  | Nut-Lock             | 5        | 25       | 71-6950  | ASM-Stand, Hose                           | 1        |
| 2        | 71-6910  | ASM-Extension, Stand | 1        | †26      |          | Nut-Bulkhead                              | 1        |
| 3        | 3296-70  | Nut-Hex              | 2        | 27       | 354-33   | ASM-Fitting, Bulkhead<br>(Incl. Ref. #26) | 1        |
| 4        | 32120-8  | Ring-Retaining       | 4        | 28       | 3296-29  | Nut-Lock                                  | 4        |
| 5        | 70-9240  | Bearing              | 2        | †29      |          | Body-Female                               | 1        |
| 6        | 71-6590  | Lift Arm-Top         | 2        | †30      |          | Tip-Male                                  | 1        |
| 7        | 72-7970  | Spacer-Lift Arm, Top | 2        | 31       | 95-3122  | Shield-Drive Line<br>(Incl. Ref. #35)     | 1        |
| 8        | 302-55   | Fitting-Grease       | 3        | 32       | 71-6980  | Hose-Hydraulic                            | 1        |
| 9        | 58-6520  | Decal-Grease         | 3        | 33       | 323-6    | Screw-HH                                  | 3        |
| 10       | 71-6510  | ASM-Lift Unit        | 1        | 34       | 3296-23  | Nut-Lock                                  | 4        |
| 11       | 302-61   | Fitting-Grease       | 2        | 35       | 82-9400  | Decal-Danger                              | 1        |
| 12       | 71-6600  | Lift Arm-Bottom, LH  | 1        | 36       | 71-7060  | Coupler-Quick<br>(Incl. Ref. #29 & 30)    | 1        |
| *        | 74-3110  | Lift Arm-Bottom, RH  | 1        | 37       | 3256-74  | Washer-Flat                               | 2        |
| 13       | 47-2830  | Screw                | 2        | 38       | 2412-133 | R-Clamp                                   | 2        |
| 14       | 71-7530  | Grommet              | 2        | 39       | 74-0720  | Tube-Manual                               | 1        |
| 15       | 76-2920  | Stand-Transport      | 2        | 40       | 325-12   | Screw-HH                                  | 1        |
| 16       | 67-5370  | Decal-Caution        | 2        | 41       | 3296-23  | Nut-Lock                                  | 1        |
| 17       | 32108-20 | Screw-Countersink    | 4        | 42       | 94-1762  | Rest-Drive Shaft                          | 1        |
| 18       | 71-7510  | Pad-Absorber, Shock  | 2        | 43       | 3296-29  | Nut-Lock                                  | 1        |
| 19       | 323-15   | Screw-HH             | 2        | 44       | 92-9941  | Lynch Pin & Tie                           | 1        |
| 20       | 94-1778  | ASM-Frame, Carrier   | 1        | 45       | 322-5    | Screw-HH                                  | 1        |
| 21       | 302-55   | Fitting-Grease       | 2        | 46       | 3256-2   | Washer-Flat                               | 1        |
| 22       | 70-9240  | Bearing              | 4        |          |          |                                           |          |
| 23       | 93-4696  | Pin-Snapper          | 1        |          |          |                                           |          |
| 24       | 322-6    | Screw-HH             | 4        |          |          |                                           |          |

\*Not Illustrated

†Not Serviced Separately

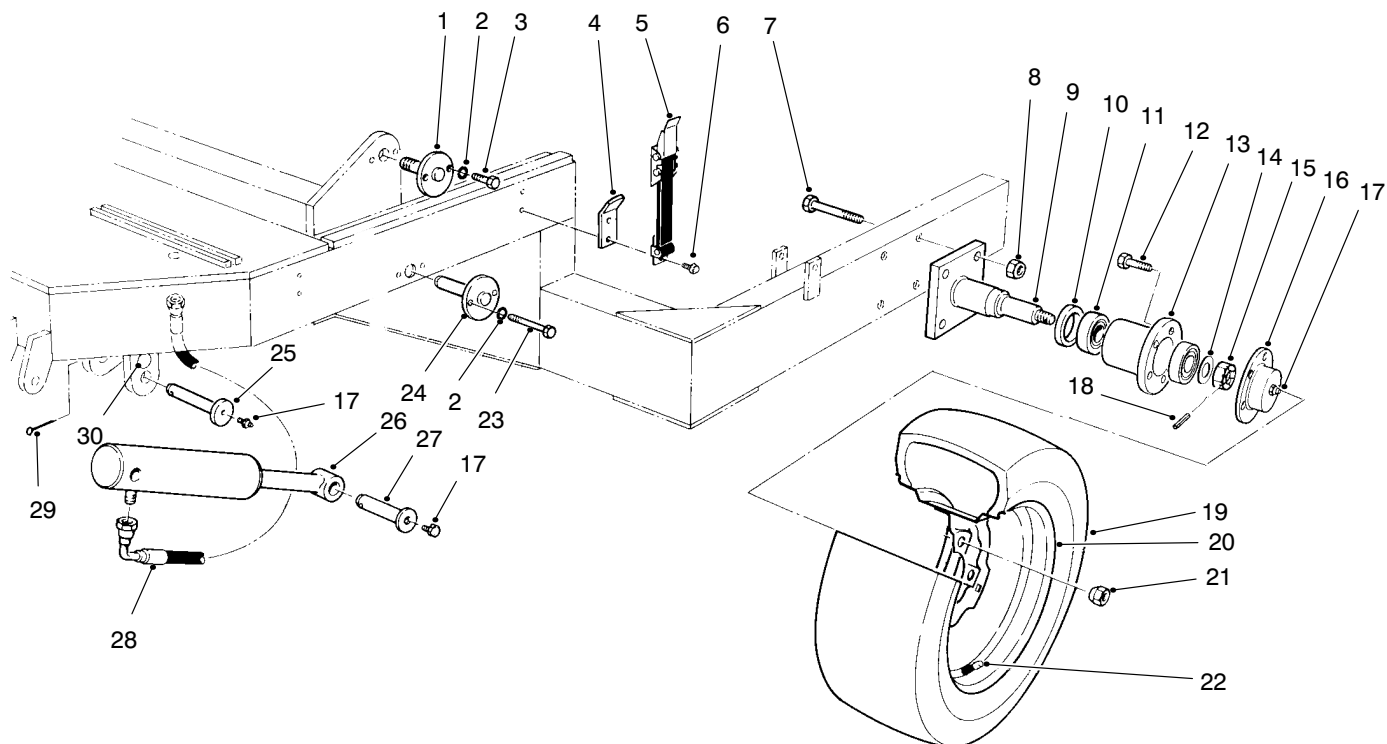


T-0897-1

## REAR WHEEL ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 71-6620  | Pin-Location, Top    | 2        |
| 2        | 3253-21  | Washer-Lock          | 4        |
| 3        | 323-6    | Screw-HH             | 4        |
| 4        | 71-6900  | Guide-Cover, Front   | 4        |
| 5        | 71-6990  | Latch-Draw, Flexible | 4        |
| 6        | 3234-13  | Screw-HFH            | 8        |
| 7        | 327-14   | Screw-HH             | 8        |
| 8        | 3296-61  | Nut-Lock             | 8        |
| 9        | 71-6860  | Shaft-Axle           | 2        |
| 10       | 71-6710  | Seal-Oil             | 2        |
| 11       | 71-6630  | Bearing              | 4        |
| 12       | 77-4520  | Screw-HH             | 10       |
| 13       | 71-6850  | Housing-Bearing      | 2        |
| 14       | 70-9520  | Washer-Flat          | 2        |
| 15       | 70-9460  | Nut-Castle           | 2        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 16       | 71-6840  | Cap-Hub              | 2        |
| 17       | 302-55   | Fitting-Grease       | 2        |
| 18       | 32121-34 | Pin-Roll             | 2        |
| 19       | 231-101  | Tire                 | 2        |
| 20       | 217-117  | Rim                  | 2        |
| 21       | 23-7270  | Nut-Wheel            | 10       |
| 22       | 232-27   | Stem-Valve           | 2        |
| 23       | 323-14   | Screw-HH             | 4        |
| 24       | 71-6520  | Pin-Location, Bottom | 2        |
| 25       | 71-6540  | Pin-Mount, Front     | 1        |
| 26       | 71-6560  | Cylinder-Hydraulic   | 1        |
| 27       | 71-6550  | Pin-Mount, Rear      | 1        |
| 28       | 71-7490  | ASM-Hose             | 1        |
| 29       | 3272-23  | Pin-Cotter           | 2        |
| 30       | 58-6520  | Decal-Grease         | 1        |

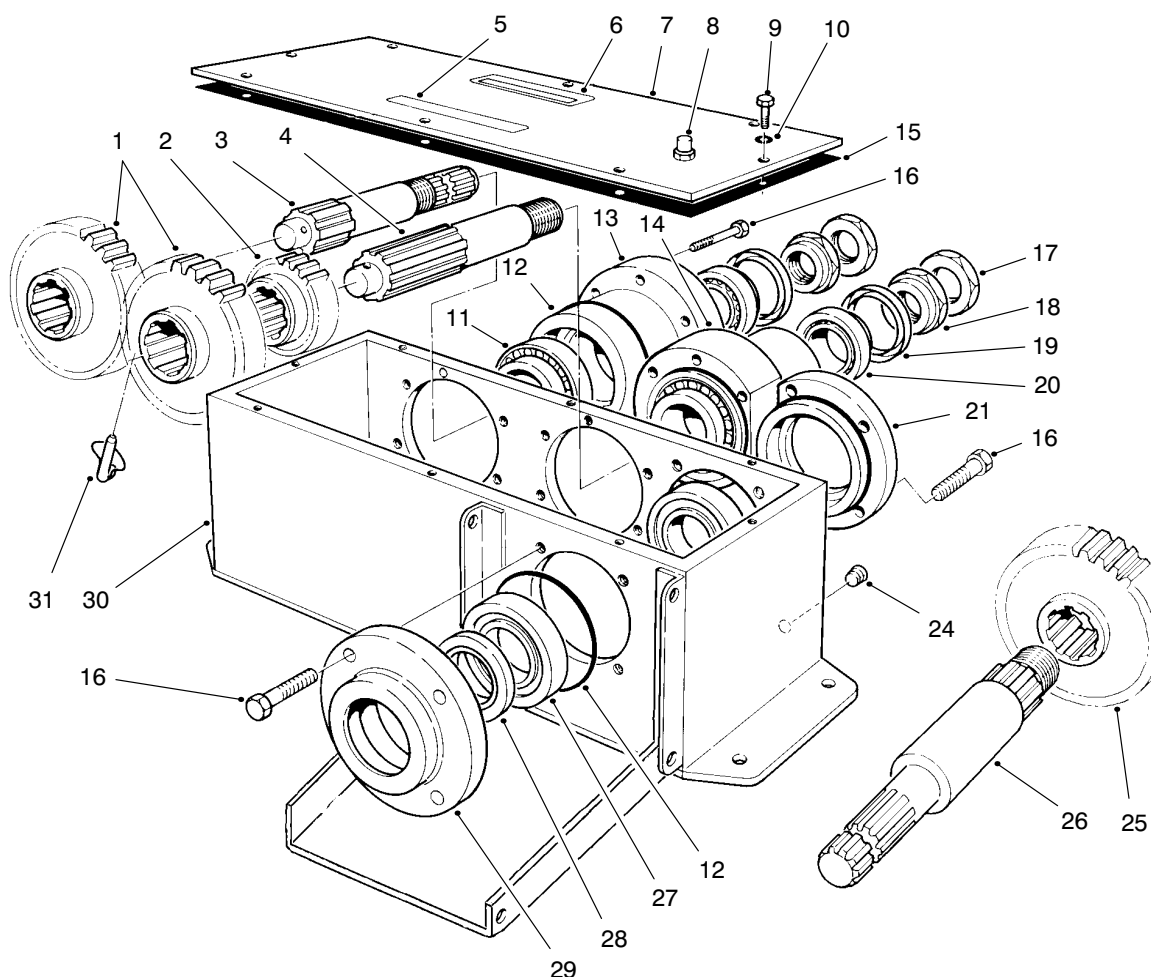


T-0893-1

## FRONT GEAR BOX ASSEMBLY

| Ref. No. | Part No. | Description        | No. Used | Ref. No. | Part No. | Description     | No. Used |
|----------|----------|--------------------|----------|----------|----------|-----------------|----------|
| 1        | 71-7300  | Gear-30 Tooth      | 1        | 11       | 71-6700  | Bearing         | 2        |
| *        | 71-7310  | Gear-31 Tooth      | 1        | 12       | 92-3013  | O-Ring          | 4        |
| *        | 71-7320  | Gear-32 Tooth      | 1        | 13       | 92-3011  | Housing-Bearing | 1        |
| *        | 71-7330  | Gear-33 Tooth      | 1        | 14       | 92-3010  | Housing-Bearing | 1        |
| *        | 71-7340  | Gear-34 Tooth      | 1        | 15       | 71-6610  | Gasket-Cover    | 1        |
| *        | 71-7350  | Gear-35 Tooth      | 2        | 16       | 323-8    | Screw-HH        | 20       |
| *        | 71-7360  | Gear-36 Tooth      | 1        | 17       | 70-9720  | Nut-Jam         | 2        |
| *        | 71-7370  | Gear-37 Tooth      | 1        | 18       | 70-9710  | Nut-Hex         | 2        |
| *        | 71-7380  | Gear-38 Tooth      | 1        | 19       | 71-6490  | Seal-Oil        | 2        |
| *        | 71-7390  | Gear-39 Tooth      | 1        | 20       | 71-6690  | Bearing         | 2        |
| *        | 71-7400  | Gear-40 Tooth      | 1        | 21       | 92-3008  | Cap-Bearing     | 1        |
| 2        | 71-7200  | Gear-20 Tooth      | 1        | 24       | 285-21   | Plug-Pipe       | 1        |
| 3        | 71-6570  | Shaft-Corer        | 1        | 25       | 82-2900  | Gear-35 Tooth   | 1        |
| 4        | 70-9690  | Shaft-Intermediate | 1        | 26       | 94-5309  | Shaft-Tractor   | 1        |
| 5        | 65-3090  | Decal              | 1        | 27       | 72-3820  | Bearing         | 2        |
| 6        | 67-5360  | Decal-Warning      | 1        | 28       | 70-9680  | Seal-Oil        | 1        |
| 7        | 70-9670  | Cover-Gearbox      | 1        | 29       | 92-3009  | Cap-Bearing     | 1        |
| 8        | 72-3800  | Breather           | 1        | 30       | 94-1779  | ASM-Gear Case.  | 1        |
| 9        | 322-5    | Screw-HH           | 8        | 31       | 283-72   | Pin-Lynch       | 2        |
| 10       | 3253-4   | Washer-Lock        | 8        |          |          |                 |          |

\*Not Illustrated

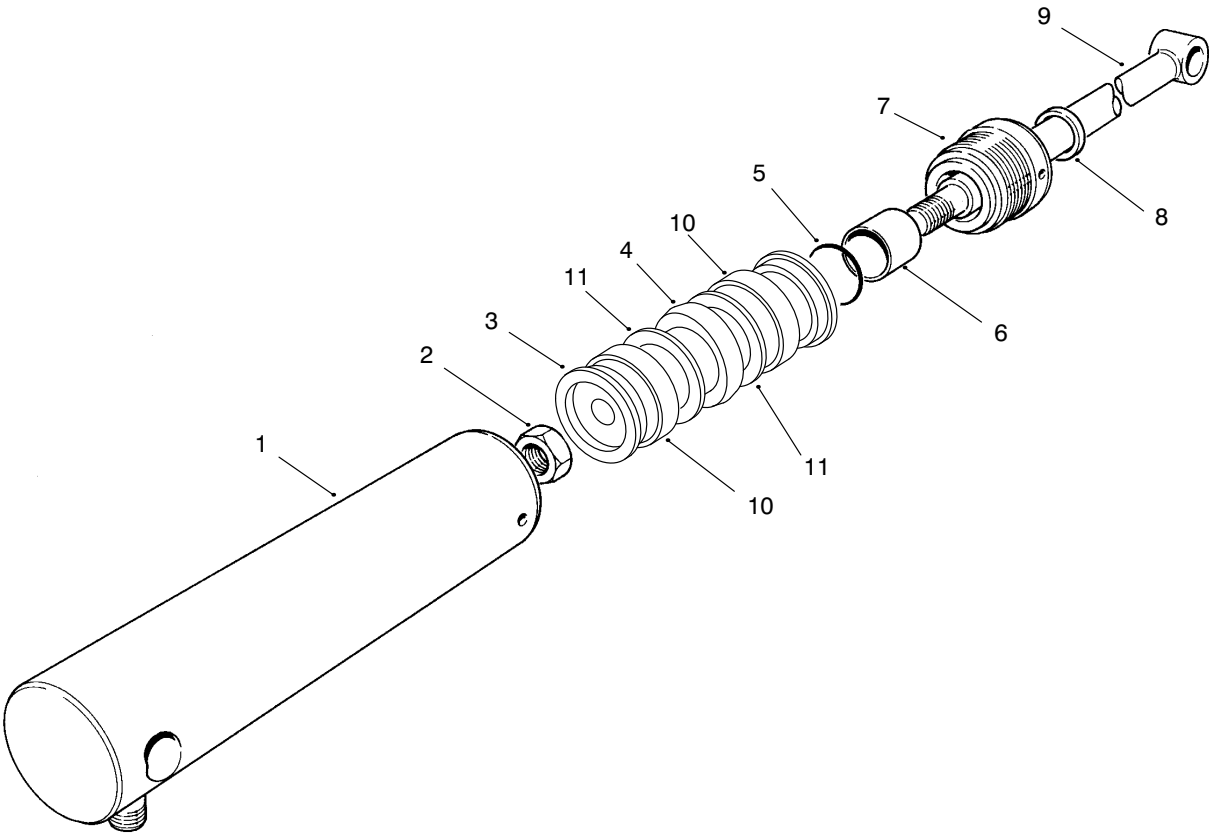


T-0899-1

HYDRAULIC CYLINDER ASSEMBLY NO. 71-6560

| Ref. No. | Part No. | Description    | No. Used |
|----------|----------|----------------|----------|
| 1        | 92-2410  | Barrel         | 1        |
| 2        | 93-8770  | Nut            | 1        |
| 3        | 92-2412  | Piston         | 1        |
| †4       |          | Seal-Piston    | 1        |
| †5       |          | O-Ring         | 1        |
| †6       |          | Bushing-Bronze | 1        |
| 7        | 92-2411  | Cap-End        | 1        |

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| †8       |          | Seal-Wiper                  | 1        |
| 9        | 92-2413  | Rod                         | 1        |
|          |          | (Incl. Ref. #4-6,8,10,11)   | 1        |
| 10       |          | Plastic Anti-Extrusion Ring | 2        |
| 11       |          | Spiral Back-Up Wear Ring    | 2        |
| *        | 71-6640  | Kit-Seal                    | 1        |
|          |          | (Incl. Ref.# 4-6,8,10,11)   |          |

\*Not Illustrated  
†Not Serviced Separately

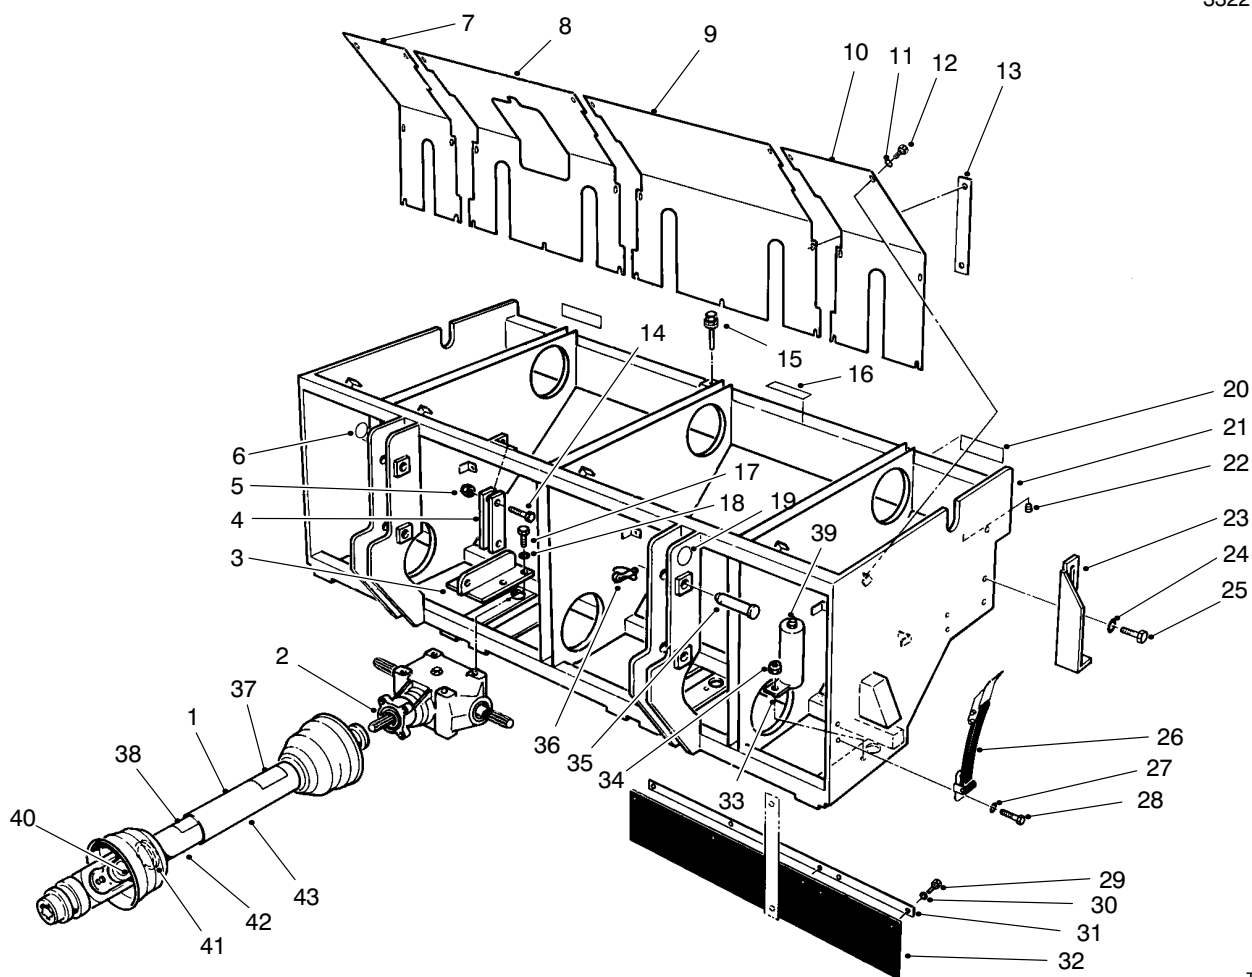


T-1137-1

## FRAME & SHIELD ASSEMBLY

| Ref. No. | Part No. | Description                                    | No. Used |
|----------|----------|------------------------------------------------|----------|
| 1        | 68-8060  | ASM-Drive Line<br>(Incl. Ref. #37, 38 & 40-43) | 1        |
| 2        | 77-3050  | Gearbox-Rear, Bevel                            | 1        |
| 3        | 76-3760  | Plate-Mounting, Gearbox                        | 1        |
| 4        | 71-7150  | Plate-Upright, Gearbox                         | 2        |
| 5        | 3296-23  | Nut-Lock                                       | 2        |
| 6        | 58-6520  | Decal-Grease                                   | 1        |
| 7        | 77-3070  | Screen-Outer, RH                               | 1        |
| 8        | 77-3090  | Screen-Inner, RH                               | 1        |
| 9        | 77-3080  | Screen-Inner, LH                               | 1        |
| 10       | 77-3060  | Screen-Outer, LH                               | 1        |
| 11       | 3253-4   | Washer-Lock                                    | 16       |
| 12       | 322-3    | Screw-HH                                       | 16       |
| 13       | 72-7980  | Strap                                          | 6        |
| 14       | 325-8    | Screw-HH                                       | 2        |
| 15       | 72-7960  | Indicator-Oil Level                            | 1        |
| 16       | 67-5360  | Decal-Warning, Covers                          | 1        |
| 17       | 48-7830  | Screw, HH                                      | 4        |
| 18       | 3253-7   | Washer-Lock                                    | 4        |
| 19       | 58-6520  | Decal-Grease                                   | 1        |
| 20       | 59-9930  | Decal-Danger                                   | 2        |
| 21       | 92-3004  | ASM-Coring Frame                               | 1        |
| 22       | 285-21   | Plug-Pipe                                      | 1        |

| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 23       | 71-7470  | Adjuster-LH                        | 1        |
| *        | 71-7480  | Adjuster-RH                        | 1        |
| 24       | 3256-69  | Washer-Flat                        | 4        |
| 25       | 327-4    | Screw-HH                           | 4        |
| 26       | 71-6990  | Latch-Draw, Flexible<br>(Complete) | 4        |
| 27       | 3253-3   | Washer-Lock                        | 8        |
| 28       | 321-2    | Screw-HH                           | 8        |
| 29       | 322-5    | Screw-HH                           | 10       |
| 30       | 3256-2   | Washer-Flat                        | 10       |
| 31       | 71-7460  | Strap-Securing, Curtain            | 2        |
| 32       | 71-7450  | Curtain-Lower                      | 2        |
| 33       | 71-7180  | Cover-Dust                         | 6        |
| 34       | 3296-39  | Nut-Lock                           | 6        |
| 35       | 71-6530  | Pin-Mount, Lift Arm                | 4        |
| 36       | 283-71   | Pin-Lynch                          | 4        |
| 37       | 92-1581  | Decal-Safety                       | 1        |
| 38       | 92-1582  | Decal-Safety                       | 1        |
| 39       | 302-55   | Fitting-Grease                     | 6        |
| 40       | 72-7990  | Kit-Cross & Bearing                | 1        |
| 41       | 92-1580  | Kit-Nylon Repair                   | 1        |
| 42       | 92-7931  | Inner Guard                        | 1        |
| 43       | 92-7930  | Outer Guard                        | 1        |

\*Not Illustrated

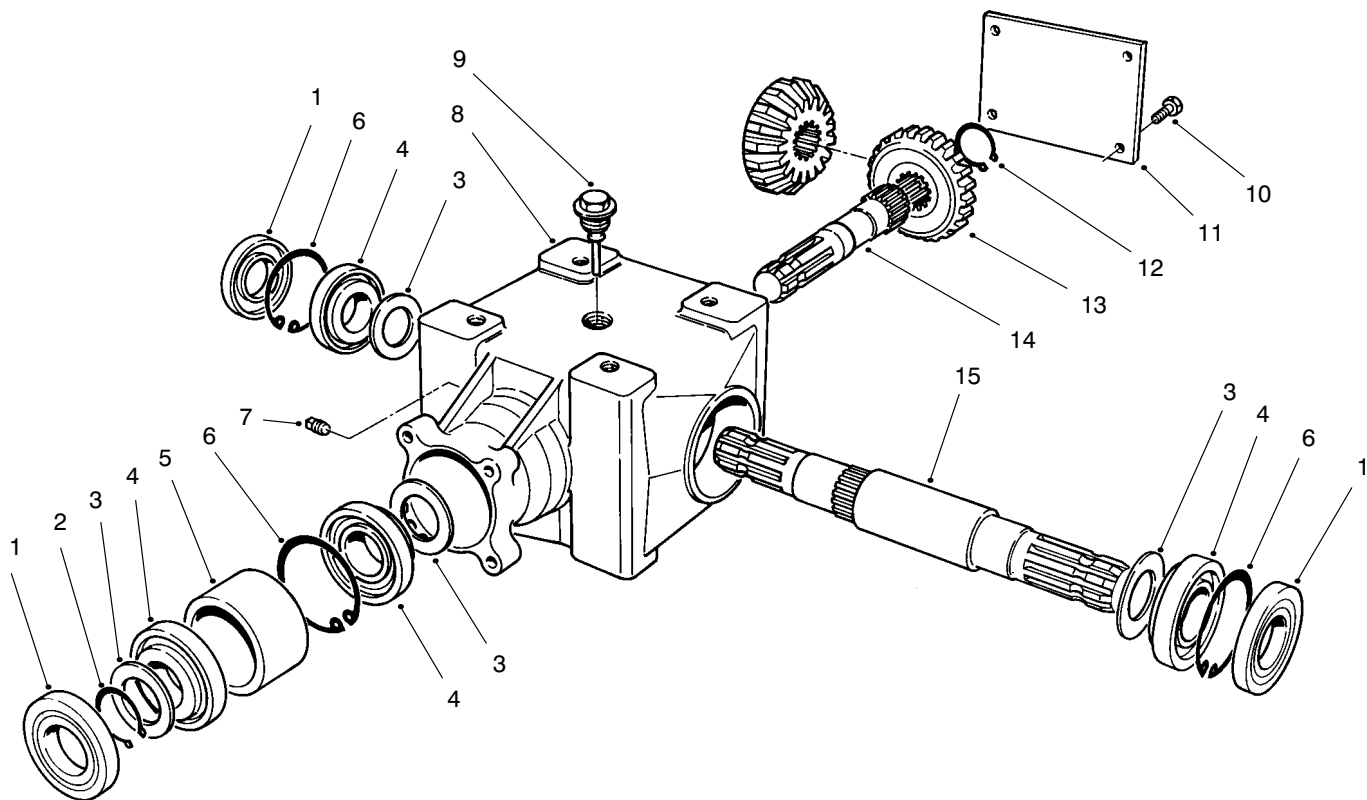


T-1127-1

## GEAR BOX ASSEMBLY NO. 77-3050

| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description    | No. Used |
|----------|----------|-----------------------|----------|----------|----------|----------------|----------|
| 1        | 74-3200  | Seal-Oil              | 3        | 10       | 77-4500  | Bolt-HSH       | 4        |
| 2        | 74-2960  | Ring-Retaining        | 1        | 11       | 77-4470  | Cover          | 1        |
| †3       | 74-2990  | Shim Kit              | 4        | 12       | 77-4460  | Ring-Retaining | 1        |
| 4        | 71-6630  | Bearing               | 4        | 13       | 77-4450  | Gear-18 Tooth  | 2        |
| 5        | 77-4430  | Spacer                | 1        | 14       | 77-4440  | Shaft-Input    | 1        |
| 6        | 32120-31 | Ring-Snap             | 3        | 15       | 77-4480  | Shaft          | 1        |
| 7        | 281-1    | Plug-Pipe             | 1        |          |          |                |          |
| *8       |          | Case                  | 1        |          |          |                |          |
| 9        | 77-4490  | Plug-Oil Level/Filler | 1        |          |          |                |          |

†Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play. Required when replacing items #4, 5, & 13-15. Instruction sheet included.

\*Not Serviced Separately

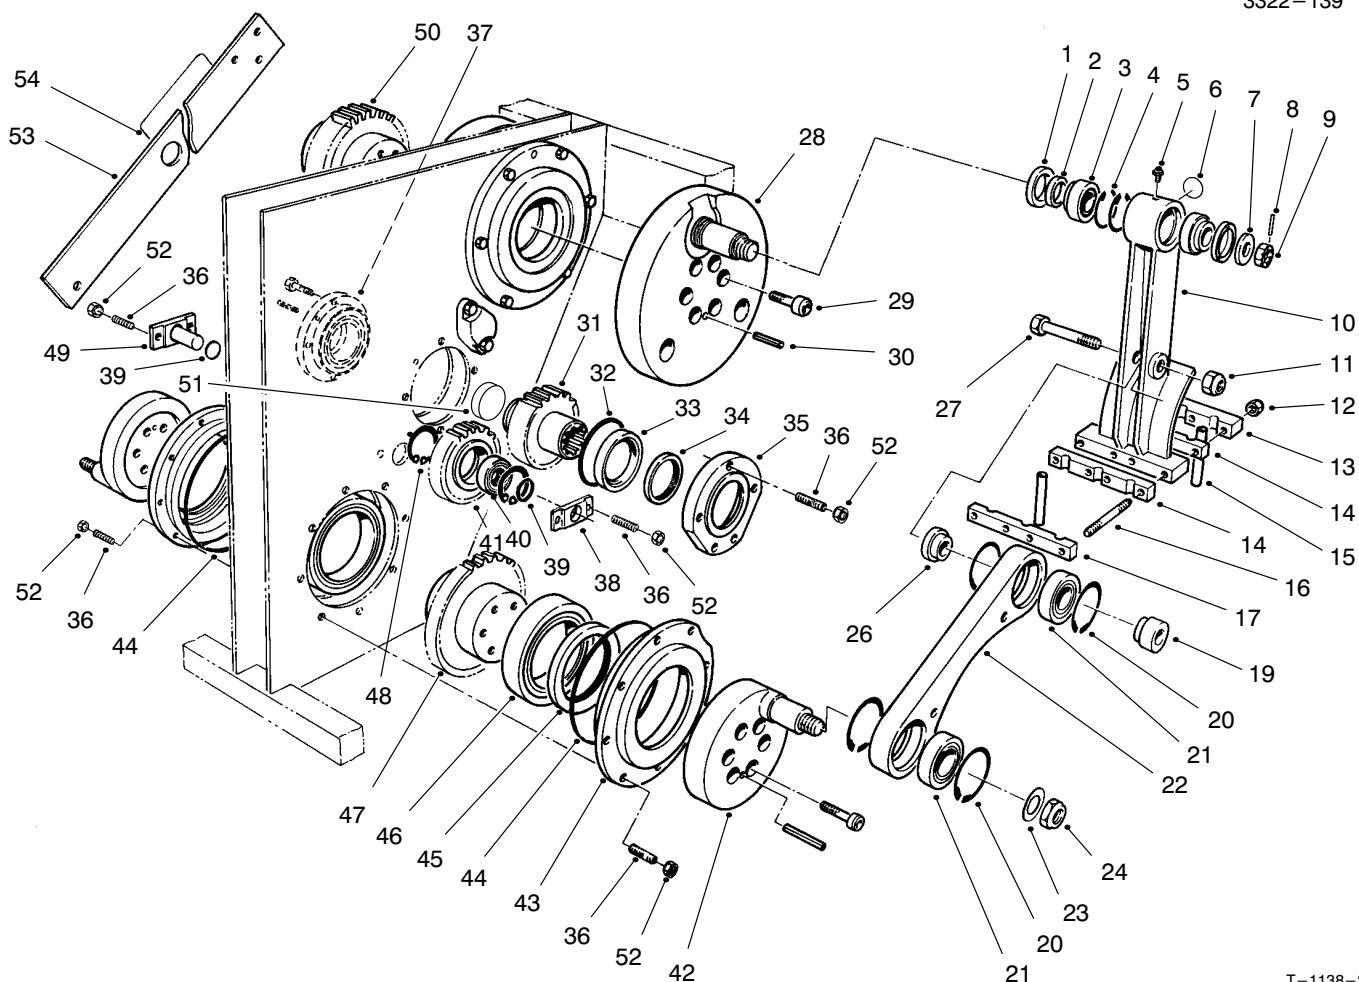


T-1138-2

## FRAME GEAR CASE & STOMPER ARM ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description                | No. Used |
|----------|----------|-----------------------|----------|----------|----------|----------------------------|----------|
| 1        | 72-3840  | Seal-Oil              | 12       | 29       | 3274-4   | Screw-HSH                  | 72       |
| 2        | 70-9580  | Spacer-Inner          | 6        | 30       | 71-7100  | Pin-Roll                   | 12       |
| 3        | 72-3810  | Bearing               | 12       | 31       | 76-3630  | Gear-Shaft, Driver         | 3        |
| 4        | 82-3190  | Ring-Retaining        | 12       | 32       | 92-3013  | O-Ring                     | 6        |
| 5        | 302-55   | Fitting-Grease        | 6        | 33       | 70-9220  | Bearing                    | 6        |
| 6        | 58-6520  | Decal-Grease          | 6        | 34       | 99-6882  | Seal-Oil                   | 4        |
| 7        | 70-9570  | Spacer-Outer          | 6        | 35       | 99-6878  | Housing-Shaft, Drive, Open | 4        |
| 8        | 32121-34 | Pin-Roll              | 6        | 36       | 92-3005  | Stud                       | 150      |
| 9        | 70-9460  | Nut-Castle            | 6        | 37       | 99-6879  | Housing-Closed             | 2        |
| 10       | 70-9420  | Arm-Tine              | 6        | 38       | 92-3003  | Cap-End                    | 6        |
| 11       | 3296-70  | Nut-Lock              | 6        | 39       | 237-168  | O-Ring                     | 12       |
| 12       | 3296-23  | Nut-Lock              | 24       | 40       | 77-4560  | Bearing                    | 6        |
| †13      |          | Block-Outer           |          | 41       | 76-3640  | Gear-Idler                 | 6        |
| †14      |          | Block-Inner           |          | 42       | 72-8100  | Crank-Bottom               | 6        |
| †15      |          | Tine                  |          | 43       | 92-3000  | Flange-Crankshaft          | 12       |
| †16      |          | Stud                  |          | 44       | 92-3012  | O-Ring                     | 12       |
| †17      |          | Block-Bridging        |          | 45       | 99-5398  | Seal-Oil                   | 12       |
| 19       | 72-8060  | Bushing-Spacer, Long  | 6        | 46       | 70-9330  | Bearing                    | 12       |
| 20       | 32151-88 | Ring-Retaining        | 24       | 47       | 76-3660  | Gear-Crankshaft, Bottom    | 3        |
| 21       | 72-8070  | Bearing               | 12       | 48       | 32120-62 | Ring-Retaining             | 12       |
| 22       | 77-3040  | Rod-Connecting        | 6        | 49       | 92-3002  | Shaft-Idler                | 6        |
| 23       | 3256-62  | Washer-Flat           | 6        | 50       | 76-3650  | Gear-Crankshaft, Top       | 3        |
| 24       | 3296-70  | Nut-Lock              | 6        | 51       | 99-6880  | Plug-Drive Gear            | 2        |
| 26       | 72-8090  | Bushing-Spacer, Short | 6        | 52       | 92-3006  | Nut-Lock                   | 150      |
| 27       | 70-9550  | Bolt-Connecting       | 6        | 53       | 82-3200  | Timing Bar                 | 1        |
| 28       | 92-9948  | Crank-Top             | 6        | 54       | 82-3220  | Decal                      | 1        |

† See pages 10 &amp; 11 for selection.

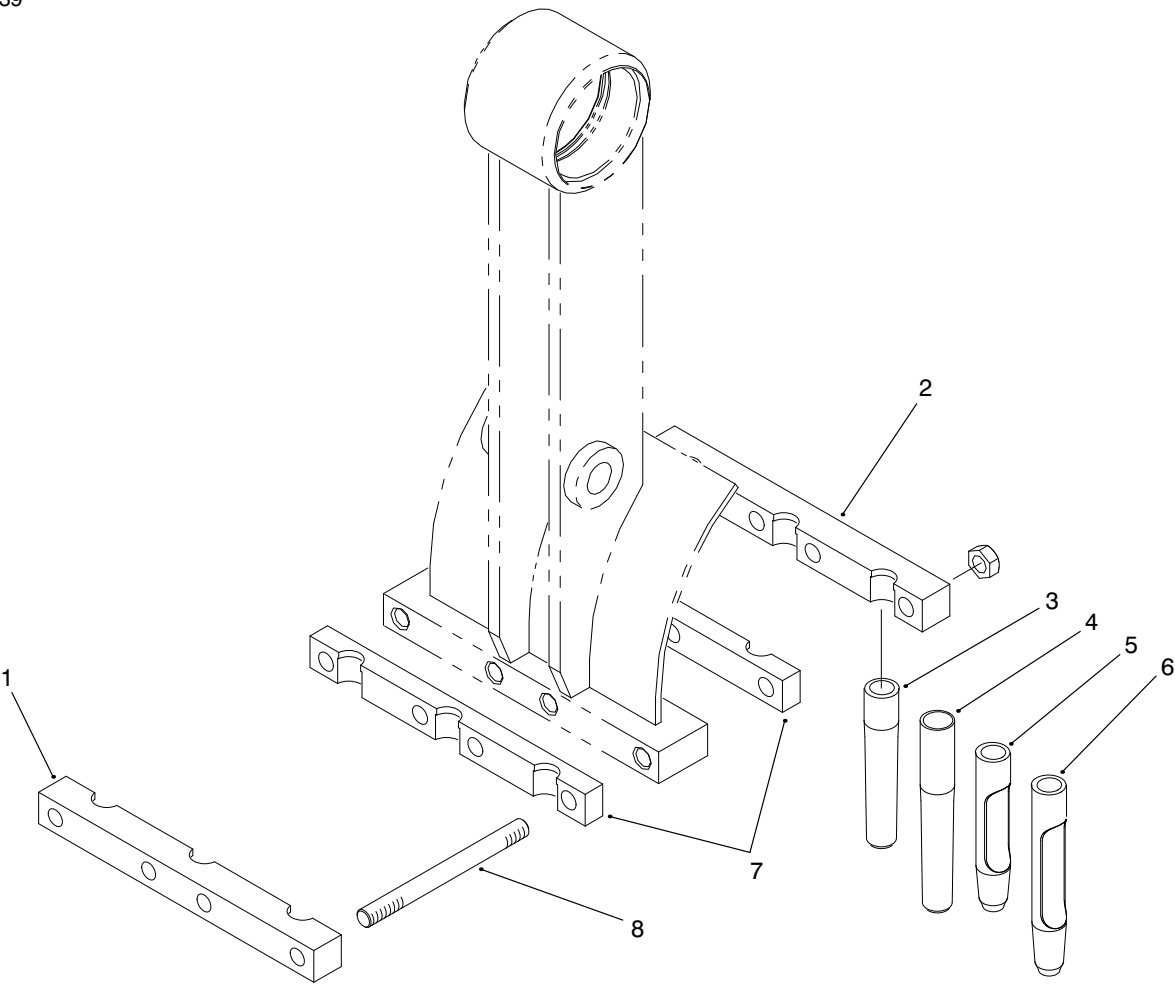


T-2530-1

**6-TINE BLOCKS & .75 DIAMETER TINE SELECTION**

| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 1        | 70-9390  | Block-Bridging, 6-Tine     | 6        |
| 2        | 70-9380  | Block-Outer, 6-Tine        | 6        |
| 3        | 62-4600  | Tine-Tubular<br>.75 x 4.75 | 36       |
| 4        | 86-9720  | Tine-Tubular<br>.75 x 5.75 | 36       |

| Ref. No. | Part No. | Description                    | No. Used |
|----------|----------|--------------------------------|----------|
| 5        | 92-7941  | Tine-Open Center<br>.75 x 4.75 | 36       |
| 6        | 92-7900  | Tine-Open Center<br>.75 x 5.75 | 36       |
| 7        | 70-9400  | Block, Inner, 6-Tine           | 12       |
| 8        | 71-7120  | Stud-.50 x 150mm               | 24       |

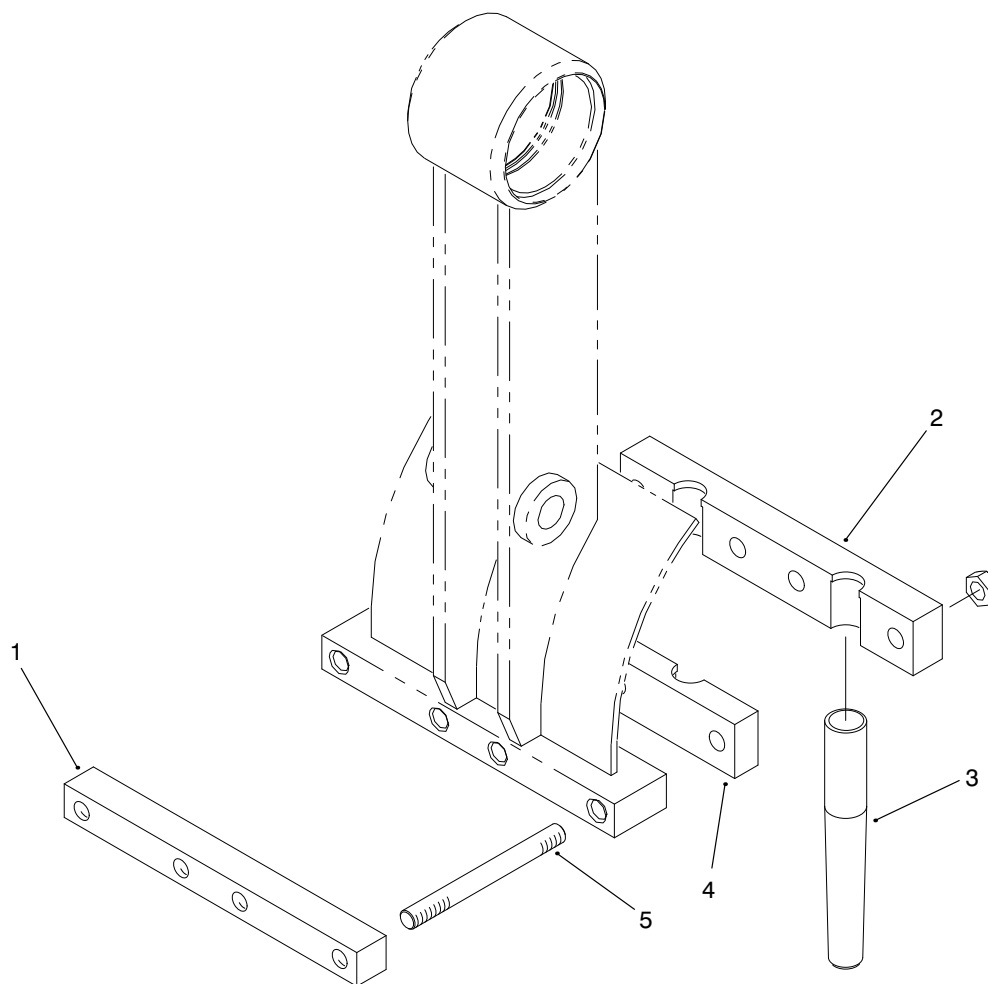


T-2531-1

## 2-TINE BLOCKS & TINE SELECTION

| Ref.<br>No. | Part No. | Description                | No.<br>Used |
|-------------|----------|----------------------------|-------------|
| 1           | 70-9410  | Block-Bridging, 2-Tine     | 6           |
| 2           | 70-9260  | Block-Outer, 2-Tine        | 6           |
| 3           | 71-0940  | Tine-Tubular<br>.88 x 7.00 | 12          |


| Ref.<br>No. | Part No. | Description          | No.<br>Used |
|-------------|----------|----------------------|-------------|
| 4           | 70-9270  | Block- Inner, 2-Tine | 6           |
| 5           | 71-7110  | Stud- .50 x 130mm    | 24          |

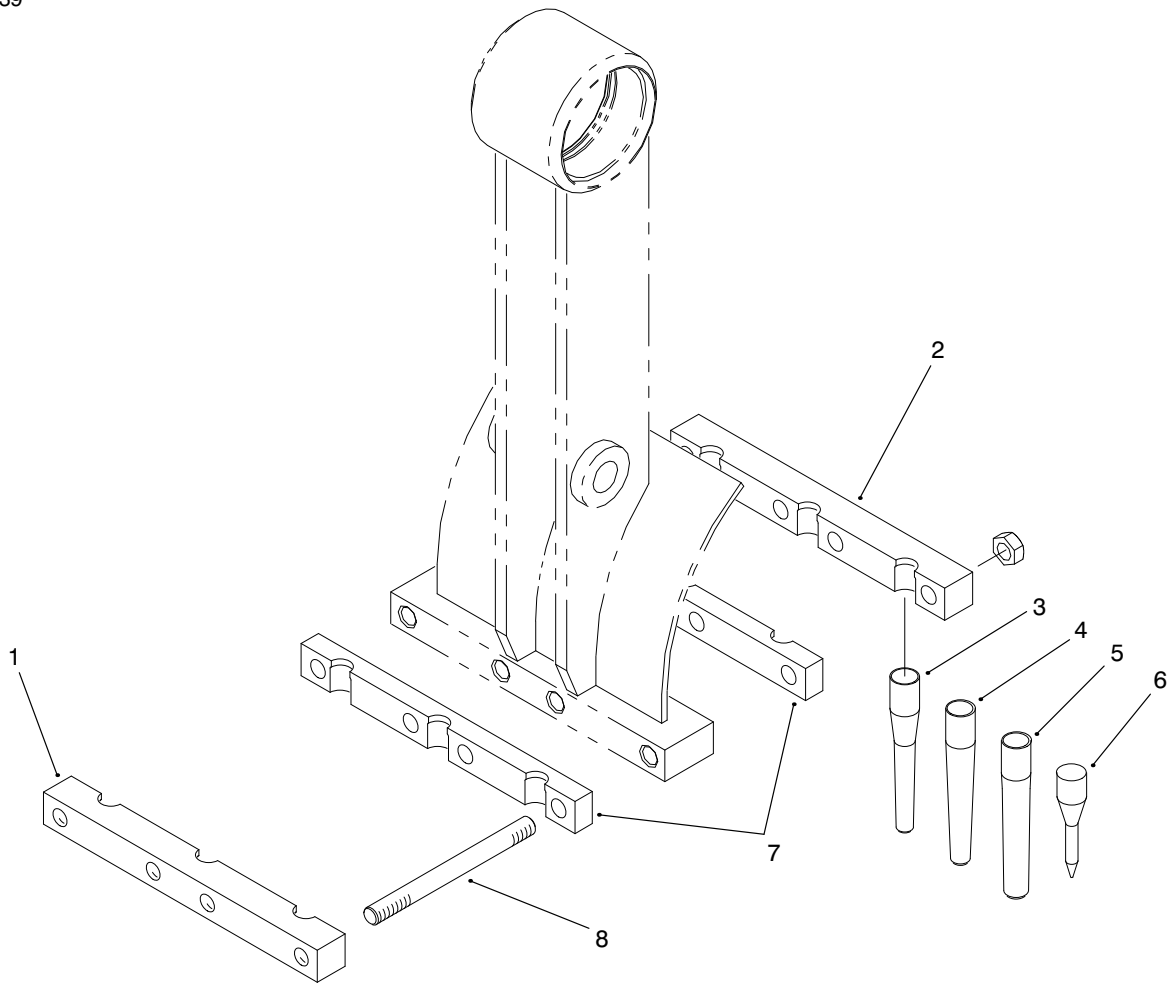

T-2532-1

6-TINE BLOCKS & TINE SELECTION

| Ref. No. | Part No. | Description                | No. Used | Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|----------|----------|----------------------------|----------|
| 1        | 95-3104  | Block-Bridging, 6-Tine     | 6        | 5        | 59-3670  | Tine-Tubular<br>.62 x 4.75 | 36       |
| 2        | 95-3103  | Block-Outer, 6-Tine        | 6        | 6        | 77-5320  | Tine-Spiker<br>.31 x 3.25  | 36       |
| 3        | 59-3690  | Tine-Tubular<br>.38 x 4.75 | 36       | 7        | 95-3105  | Block-Inner, 6-Tine        | 12       |
| 4        | 94-3419  | Tine-Tubular<br>.50 x 4.75 | 36       | 8        | 71-7120  | Stud-.50 x 150mm           | 24       |

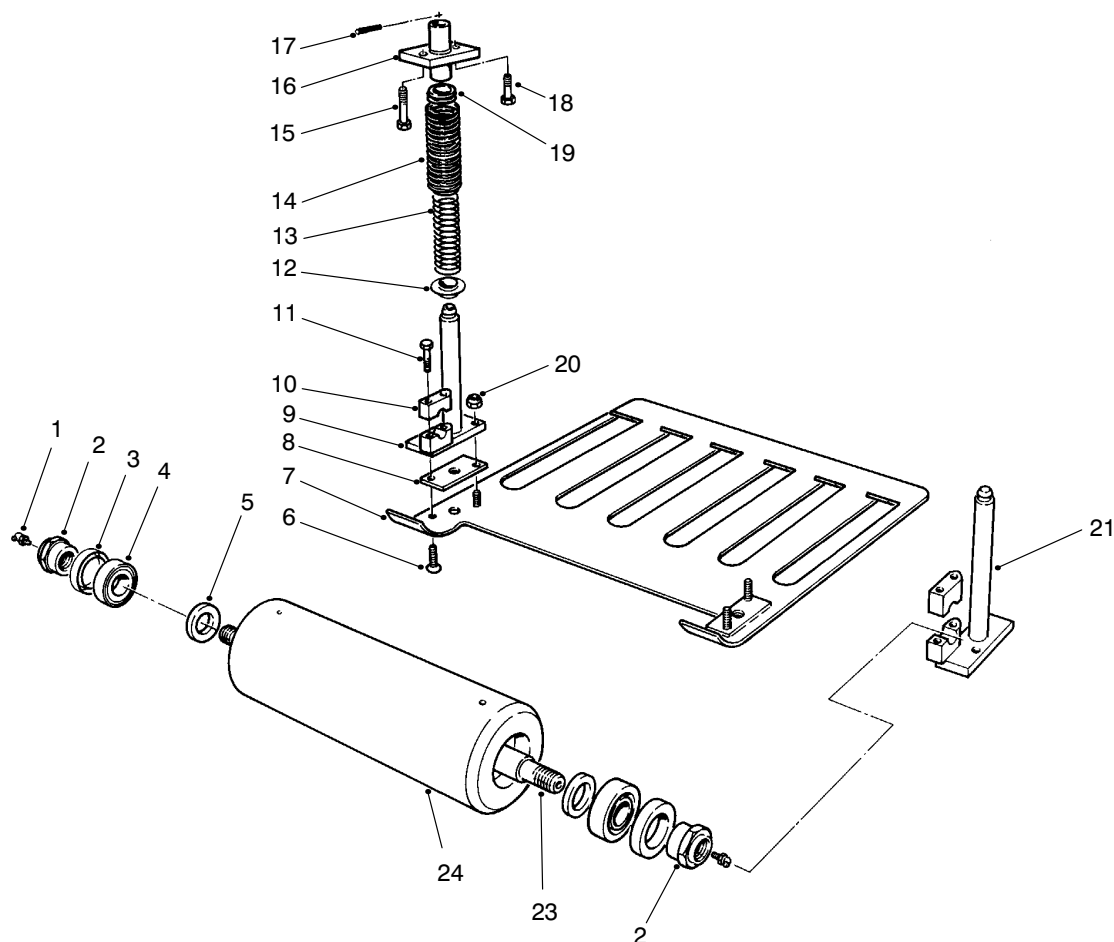


T-0896-1

## ROLLER & FINGER PLATE ASSEMBLY

| Ref. No. | Part No. | Description        | No. Used | Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|--------------------|----------|----------|----------|------------------------------------------|----------|
| 1        | 302-61   | Fitting-Grease     | 6        | 13       | 70-9450  | Spring-Compression                       | 6        |
| 2        | 71-7290  | Nut-Thin           | 6        | 14       | 82-2890  | Shield-Rubber                            | 6        |
| 3        | 71-6790  | Seal-Oil           | 6        | 15       | 323-35   | Screw-HH                                 | 6        |
| 4        | 71-6780  | Bearing            | 6        | 16       | 71-7130  | Bushing                                  | 6        |
| 5        | 72-3830  | Seal-Oil           | 6        | 17       | 32121-15 | Pin-Roll                                 | 6        |
| 6        | 3289-17  | Screw-HSFH         | 12       | 18       | 323-7    | Screw-HH                                 | 6        |
| 7        | 70-9440  | Plate-6 Tine       | 3        | 19       | 71-7230  | Ring-Clamp, Top                          | 6        |
| *        | 70-9430  | Plate-2 Tine       | 3        | 20       | 3296-39  | Nut-Lock                                 | 12       |
| 8        | 71-7270  | Plate-Backing      | 6        | 21       | 71-7210  | Shaft-LH                                 | 3        |
| 9        | 71-7220  | Shaft-RH           | 3        | 23       | 71-7280  | Shaft                                    | 3        |
| 10       | 72-8020  | Block-Clamp, Top   | 6        | 24       | 71-7250  | ASM-Roller<br>(Incl. Ref. #1-5, 22 & 23) | 3        |
| 11       | 3212-6   | Screw-HH           | 12       |          |          |                                          |          |
| 12       | 71-7240  | Ring-Clamp, Bottom | 6        |          |          |                                          |          |


\*Not Illustrated

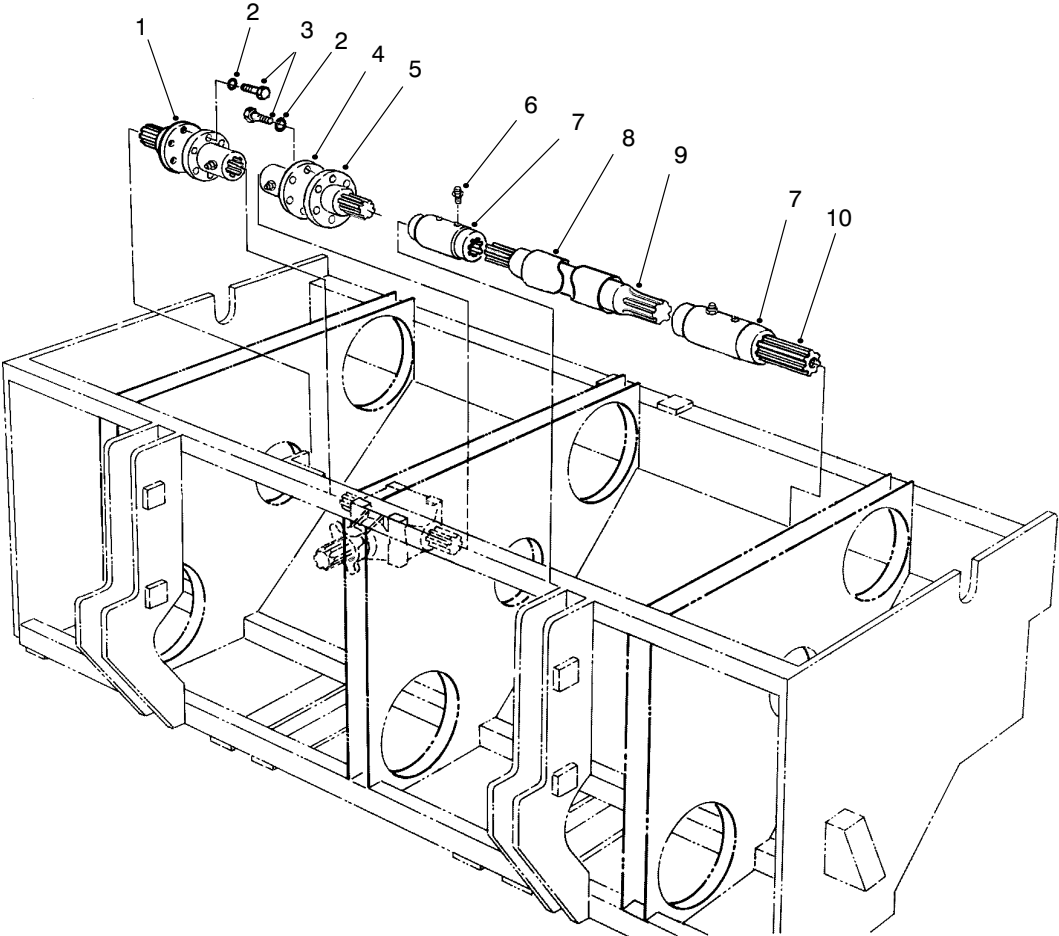

T-3193

DRIVE LINE ASSEMBLY

| Ref. No. | Part No. | Description     | No. Used | Ref. No. | Part No. | Description      | No. Used |
|----------|----------|-----------------|----------|----------|----------|------------------|----------|
| 1        | 98-6872  | Shaft-Splined   | 1        | 6        | 302-55   | Fitting-Grease   | 4        |
| 2        | 3253-7   | Washer-Lock     | 12       | 7        | 98-6876  | Coupling-Splined | 2        |
| 3        | 3274-89  | Screw-HSH       | 12       | 8        | 98-6877  | Tube-Shield      | 1        |
| 5        | 76-3710  | Coupling-Flange | 2        | 9        | 99-6874  | Shaft-Splined    | 1        |
| 8        | 99-6873  | Shaft-Splined   | 1        | 10       | 99-6875  | Shaft-Splined    | 1        |

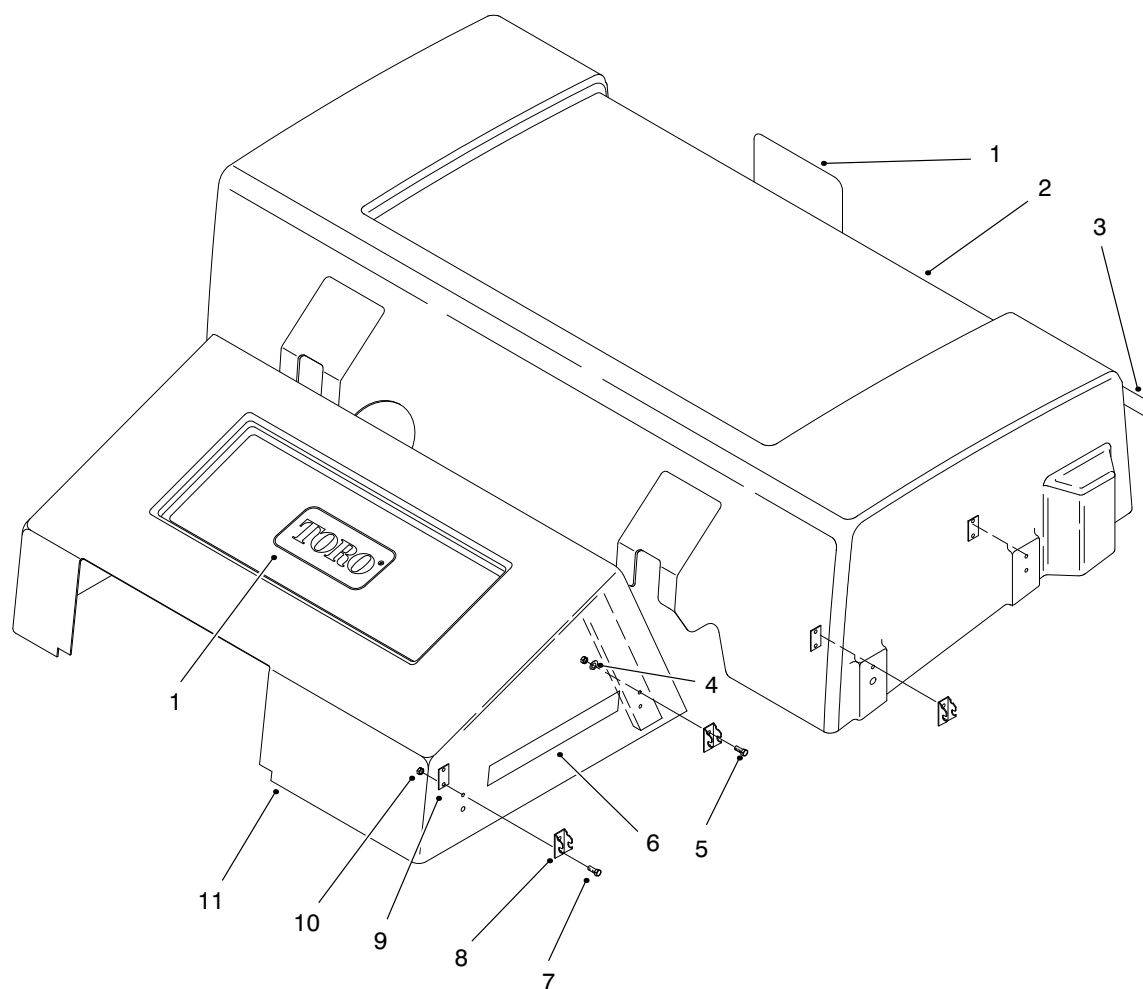

T-0900-2

## AERATOR & CORING HEAD COVERS

| Ref. No. | Part No. | Description            | No. Used | Ref. No. | Part No. | Description                                    | No. Used |
|----------|----------|------------------------|----------|----------|----------|------------------------------------------------|----------|
| 1        | 67-7310  | Decal-Toro             | 2        | 7        | 321-4    | Screw-HH                                       | 12       |
| 2        | 84-5980  | Cover-Coring Head      | 1        | 8        | 71-6990  | Latch (Complete)<br>(Keeper Shown Illustrated) | 4        |
| 3        | 59-9930  | Decal-Danger           | 2        | 9        | 71-6940  | Plate-Backing                                  | 6        |
| 4        | 3256-22  | Washer-Flat            | 4        | 10       | 3296-56  | Nut-Lock                                       | 16       |
| 5        | 321-9    | Screw-HH               | 4        | 11       | 84-5970  | Cover-Front, Aerator                           | 1        |
| 6        | 67-5330  | Decal-Aerator, Fairway | 2        |          |          |                                                |          |

# TORO PART NUMBER INDEX

| Part No. | Description            | Pg. Ref.<br>No. No. Qty. | Part No. | Description             | Pg. Ref.<br>No. No. Qty. |
|----------|------------------------|--------------------------|----------|-------------------------|--------------------------|
| 23-7270  | Nut-Wheel              | 4 21 10                  | 71-6770  | Housing-Bearing         | 1 28 1                   |
| 47-2830  | Screw                  | 3 13 2                   | 71-6780  | Bearing                 | 13 4 6                   |
| 48-7830  | Screw, HH              | 7 17 4                   | 71-6780  | Bearing                 | 1 17 2                   |
| 58-6520  | Decal-Grease           | 7 6 1                    | 71-6790  | Seal-Oil                | 13 3 6                   |
| 58-6520  | Decal-Grease           | 9 6 6                    | 71-6790  | Seal-Oil                | 1 18 2                   |
| 58-6520  | Decal-Grease           | 3 9 3                    | 71-6800  | Shaft-Axle              | 1 25 1                   |
| 58-6520  | Decal-Grease           | 7 19 1                   | 71-6810  | Disc-Plastic            | 1 26 1                   |
| 58-6520  | Decal-Grease           | 4 30 1                   | 71-6820  | Cap-Retaining           | 1 11 1                   |
| 59-3670  | Tine-Tubular           | 12 5 36                  | 71-6830  | ASM-Hub Wheel           | 1 20 1                   |
| 59-3690  | Tine-Tubular           | 12 3 36                  | 71-6840  | Cap-Hub                 | 4 16 2                   |
| 59-9930  | Decal-Danger           | 15 3 2                   | 71-6850  | Housing-Bearing         | 4 13 2                   |
| 59-9930  | Decal-Danger           | 7 20 2                   | 71-6860  | Shaft-Axle              | 4 9 2                    |
| 62-4600  | Tine-Tubular           | 10 3 36                  | 71-6890  | ASM-Hitch               | 1 4 1                    |
| 65-3090  | Decal                  | 5 5 1                    | 71-6900  | Guide-Cover, Front      | 4 4 4                    |
| 67-5330  | Decal-Aerator, Fairway | 15 6 2                   | 71-6910  | ASM-Extension, Stand    | 3 2 1                    |
| 67-5360  | Decal-Warning          | 5 6 1                    | 71-6940  | Plate-Backing           | 15 9 6                   |
| 67-5360  | Decal-Warning, Covers  | 7 16 1                   | 71-6950  | ASM-Stand, Hose         | 3 25 1                   |
| 67-5370  | Decal-Caution          | 3 16 2                   | 71-6980  | Hose-Hydraulic          | 3 32 1                   |
| 67-7310  | Decal-Toro             | 15 1 2                   | 71-6990  | Latch (Complete)        | 15 8 4                   |
| 68-8060  | ASM-Drive Line         | 7 1 1                    | 71-6990  | Latch-Draw, Flexible    | 4 5 4                    |
| 70-9220  | Bearing                | 9 33 6                   | 71-6990  | Latch-Draw, Flexible    | 7 26 4                   |
| 70-9240  | Bearing                | 3 5 2                    | 71-7010  | Coupler-Hitch           | 1 31 1                   |
| 70-9240  | Bearing                | 3 22 4                   | 71-7020  | ASM-Adapter, Hitch      | 1 2 1                    |
| 70-9260  | Block-Outer, 2-Tine    | 11 2 6                   | 71-7060  | Coupler-Quick           | 3 36 1                   |
| 70-9270  | Block-Inner, 2-Tine    | 11 4 6                   | 71-7070  | Ball-Hitch              | 1 32 1                   |
| 70-9330  | Bearing                | 9 46 12                  | 71-7100  | Pin-Roll                | 9 30 12                  |
| 70-9380  | Block-Outer, 6-Tine    | 10 2 6                   | 71-7110  | Stud-.50 x 130mm        | 11 5 24                  |
| 70-9390  | Block-Bridging, 6-Tine | 10 1 6                   | 71-7120  | Stud-.50 x 150mm        | 10 8 24                  |
| 70-9400  | Block, Inner, 6-Tine   | 10 7 12                  | 71-7120  | Stud-.50 x 150mm        | 12 8 24                  |
| 70-9410  | Block-Bridging, 2-Tine | 11 1 6                   | 71-7130  | Bushing                 | 13 16 6                  |
| 70-9420  | Arm-Tine               | 9 10 6                   | 71-7150  | Plate-Upright, Gearbox  | 7 4 2                    |
| 70-9430  | Plate-2 Tine           | 13 * 3                   | 71-7180  | Cover-Dust              | 7 33 6                   |
| 70-9440  | Plate-6 Tine           | 13 7 3                   | 71-7200  | Gear-20 Tooth           | 5 2 1                    |
| 70-9450  | Spring-Compression     | 13 13 6                  | 71-7210  | Shaft-LH                | 13 21 3                  |
| 70-9460  | Nut-Castle             | 9 9 6                    | 71-7220  | Shaft-RH                | 13 9 3                   |
| 70-9460  | Nut-Castle             | 4 15 2                   | 71-7230  | Ring-Clamp, Top         | 13 19 6                  |
| 70-9520  | Washer-Flat            | 4 14 2                   | 71-7240  | Ring-Clamp, Bottom      | 13 12 6                  |
| 70-9550  | Bolt-Connecting        | 9 27 6                   | 71-7250  | ASM-Roller              | 13 24 3                  |
| 70-9570  | Spacer-Outer           | 9 7 6                    | 71-7270  | Plate-Backing           | 13 8 6                   |
| 70-9580  | Spacer-Inner           | 9 2 6                    | 71-7280  | Shaft                   | 13 23 3                  |
| 70-9670  | Cover-Gearbox          | 5 7 1                    | 71-7290  | Nut-Thin                | 13 2 6                   |
| 70-9680  | Seal-Oil               | 5 28 1                   | 71-7300  | Gear-30 Tooth           | 5 1 1                    |
| 70-9690  | Shaft-Intermediate     | 5 4 1                    | 71-7310  | Gear-31 Tooth           | 5 * 1                    |
| 70-9710  | Nut-Hex                | 5 18 2                   | 71-7320  | Gear-32 Tooth           | 5 * 1                    |
| 70-9720  | Nut-Jam                | 5 17 2                   | 71-7330  | Gear-33 Tooth           | 5 * 1                    |
| 71-0940  | Tine-Tubular           | 11 3 12                  | 71-7340  | Gear-34 Tooth           | 5 * 1                    |
| 71-6490  | Seal-Oil               | 5 19 2                   | 71-7350  | Gear-35 Tooth           | 5 * 2                    |
| 71-6510  | ASM-Lift Unit          | 3 10 1                   | 71-7360  | Gear-36 Tooth           | 5 * 1                    |
| 71-6520  | Pin-Location, Bottom   | 4 24 2                   | 71-7370  | Gear-37 Tooth           | 5 * 1                    |
| 71-6530  | Pin-Mount, Lift Arm    | 7 35 4                   | 71-7380  | Gear-38 Tooth           | 5 * 1                    |
| 71-6540  | Pin-Mount, Front       | 4 25 1                   | 71-7390  | Gear-39 Tooth           | 5 * 1                    |
| 71-6550  | Pin-Mount, Rear        | 4 27 1                   | 71-7400  | Gear-40 Tooth           | 5 * 1                    |
| 71-6560  | Cylinder-Hydraulic     | 4 26 1                   | 71-7450  | Curtain-Lower           | 7 32 2                   |
| 71-6570  | Shaft-Corer            | 5 3 1                    | 71-7460  | Strap-Securing, Curtain | 7 31 2                   |
| 71-6590  | Lift Arm-Top           | 3 6 2                    | 71-7470  | Adjuster-LH             | 7 23 1                   |
| 71-6600  | Lift Arm-Bottom, LH    | 3 12 1                   | 71-7480  | Adjuster-RH             | 7 * 1                    |
| 71-6610  | Gasket-Cover           | 5 15 1                   | 71-7490  | ASM-Hose                | 4 28 1                   |
| 71-6620  | Pin-Location, Top      | 4 1 2                    | 71-7510  | Pad-Absorber, Shock     | 3 18 2                   |
| 71-6630  | Bearing                | 8 4 4                    | 71-7530  | Grommet                 | 3 14 2                   |
| 71-6630  | Bearing                | 4 11 4                   | 72-3800  | Breather                | 5 8 1                    |
| 71-6640  | Kit-Seal               | 6 * 1                    | 72-3810  | Bearing                 | 9 3 12                   |
| 71-6690  | Bearing                | 5 20 2                   | 72-3820  | Bearing                 | 5 27 2                   |
| 71-6700  | Bearing                | 5 11 2                   | 72-3830  | Seal-Oil                | 13 5 6                   |
| 71-6710  | Seal-Oil               | 4 10 2                   | 72-3840  | Seal-Oil                | 9 1 12                   |
| 71-6710  | Seal-Oil               | 1 29 1                   | 72-7960  | Indicator-Oil Level     | 7 15 1                   |
| 71-6720  | Bearing                | 1 27 2                   | 72-7970  | Spacer-Lift Arm, Top    | 3 7 2                    |
| 71-6730  | ASM-Caster             | 1 24 1                   | 72-7980  | Strap                   | 7 13 6                   |
| 71-6750  | Spacer-Outer           | 1 19 2                   | 72-7990  | Kit-Cross & Bearing     | 7 40 1                   |
| 71-6760  | Support-Rim            | 1 14 1                   | 72-8010  | Nut-Hex.                | 1 34 1                   |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description             | Pg. Ref.<br>No. No. Qty. | Part No. | Description                | Pg. Ref.<br>No. No. Qty. |
|----------|-------------------------|--------------------------|----------|----------------------------|--------------------------|
| 72-8020  | Block-Clamp, Top        | 13 10 6                  | 92-3002  | Shaft-Idler                | 9 49 6                   |
| 72-8060  | Bushing-Spacer, Long    | 9 19 6                   | 92-3003  | Cap-End                    | 9 38 6                   |
| 72-8070  | Bearing                 | 9 21 12                  | 92-3004  | ASM-Coring Frame           | 7 21 1                   |
| 72-8090  | Bushing-Spacer, Short   | 9 26 6                   | 92-3005  | Stud                       | 9 36 150                 |
| 72-8100  | Crank-Bottom            | 9 42 6                   | 92-3006  | Nut-Lock                   | 9 52 150                 |
| 74-0720  | Tube-Manual             | 3 39 1                   | 92-3008  | Cap-Bearing                | 5 21 1                   |
| 74-2960  | Ring-Retaining          | 8 2 1                    | 92-3009  | Cap-Bearing                | 5 29 1                   |
| 74-2990  | Shim Kit                | 8 3 4                    | 92-3010  | Housing-Bearing            | 5 14 1                   |
| 74-3110  | Lift Arm-Bottom, RH     | 3 * 1                    | 92-3011  | Housing-Bearing            | 5 13 1                   |
| 74-3200  | Seal-Oil                | 8 1 3                    | 92-3012  | O-Ring                     | 9 44 12                  |
| 76-2920  | Stand-Transport         | 3 15 2                   | 92-3013  | O-Ring                     | 5 12 4                   |
| 76-3630  | Gear-Shaft, Driver      | 9 31 3                   | 92-3013  | O-Ring                     | 9 32 6                   |
| 76-3640  | Gear-Idler              | 9 41 6                   | 92-7900  | Tine-Open Center           | 10 6 36                  |
| 76-3650  | Gear-Crankshaft, Top    | 9 50 3                   | 92-7930  | Outer Guard                | 7 43 1                   |
| 76-3660  | Gear-Crankshaft, Bottom | 9 47 3                   | 92-7931  | Inner Guard                | 7 42 1                   |
| 76-3710  | Coupling-Flange         | 14 5 2                   | 92-7936  | Decal-Outer                | 2 27 1                   |
| 76-3760  | Plate-Mounting, Gearbox | 7 3 1                    | 92-7937  | Decal-Inner                | 2 26 1                   |
| 77-3040  | Rod-Connecting          | 9 22 6                   | 92-7941  | Tine-Open Center           | 10 5 36                  |
| 77-3050  | Gearbox-Rear, Bevel     | 7 2 1                    | 92-9941  | Lynch Pin & Tie            | 3 44 1                   |
| 77-3060  | Screen-Outer, LH        | 7 10 1                   | 92-9948  | Crank-Top                  | 9 28 6                   |
| 77-3070  | Screen-Outer, RH        | 7 7 1                    | 93-4696  | Pin-Snapper                | 3 23 1                   |
| 77-3080  | Screen-Inner, LH        | 7 9 1                    | 93-7734  | Reinforced Collar          | 2 28 1                   |
| 77-3090  | Screen-Inner, RH        | 7 8 1                    | 93-8770  | Nut                        | 6 2 1                    |
| 77-4430  | Spacer                  | 8 5 1                    | 94-1762  | Rest-Drive Shaft           | 3 42 1                   |
| 77-4440  | Shaft-Input             | 8 14 1                   | 94-1775  | Kit-Clutch, Cams & Springs | 2 ** 4                   |
| 77-4450  | Gear-18 Tooth           | 8 13 2                   | 94-1778  | ASM-Frame, Carrier         | 3 20 1                   |
| 77-4460  | Ring-Retaining          | 8 12 1                   | 94-1779  | ASM-Gear Case.             | 5 30 1                   |
| 77-4470  | Cover                   | 8 11 1                   | 94-3419  | Tine-Tubular               | 12 4 36                  |
| 77-4480  | Shaft                   | 8 15 1                   | 94-5309  | Shaft-Tractor              | 5 26 1                   |
| 77-4490  | Plug-Oil Level/Filler   | 8 9 1                    | 94-9144  | Drive Line (Complete)      | 2 * 1                    |
| 77-4500  | Bolt-HSH                | 8 10 4                   | 94-9145  | Clutch-Radial Pin          | 2 12 1                   |
| 77-4520  | Screw-HH                | 4 12 10                  | 94-9146  | Tube-Shield, Outer         | 2 8 1                    |
| 77-4560  | Bearing                 | 9 40 6                   | 95-3103  | Block-Outer, 6-Tine        | 12 2 6                   |
| 77-4660  | Kit-Flange              | 2 * 1                    | 95-3104  | Block-Bridging, 6-Tine     | 12 1 6                   |
| 77-4670  | Kit-Collar              | 2 * 1                    | 95-3105  | Block-Inner, 6-Tine        | 12 7 12                  |
| 77-4720  | Kit-Cross & Bearing     | 2 18 1                   | 95-3122  | Shield-Drive Line          | 3 31 1                   |
| 77-4730  | Cone-Shield             | 2 19 1                   | 98-6872  | Shaft-Splined              | 14 1 1                   |
| 77-4740  | Ring-Bearing            | 2 7 2                    | 98-6876  | Coupling-Splined           | 14 7 2                   |
| 77-4760  | Chain-Safety            | 2 11 2                   | 98-6877  | Tube-Shield                | 14 8 1                   |
| 77-4790  | Bearing-Support         | 2 9 1                    | 99-5398  | Seal-Oil                   | 9 45 12                  |
| 77-5320  | Tine-Spiker             | 12 6 36                  | 99-6873  | Shaft-Splined              | 14 8 1                   |
| 82-2890  | Shield-Rubber           | 13 14 6                  | 99-6874  | Shaft-Splined              | 14 9 1                   |
| 82-2900  | Gear-35 Tooth           | 5 25 1                   | 99-6875  | Shaft-Splined              | 14 10 1                  |
| 82-3190  | Ring-Retaining          | 9 4 12                   | 99-6878  | Housing-Shaft, Drive, Open | 9 35 4                   |
| 82-3200  | Timing Bar              | 9 53 1                   | 99-6879  | Housing-Closed             | 9 37 2                   |
| 82-3220  | Decal                   | 9 54 1                   | 99-6880  | Plug-Drive Gear            | 9 51 2                   |
| 82-9400  | Decal-Danger            | 3 35 1                   | 99-6882  | Seal-Oil                   | 9 34 4                   |
| 84-5970  | Cover-Front, Aerator    | 15 11 1                  | 217-60   | Rim                        | 1 16 1                   |
| 84-5980  | Cover-Coring Head       | 15 2 1                   | 217-117  | Rim                        | 4 20 2                   |
| 84-6280  | ASM-Yoke                | 2 29 1                   | 231-101  | Tire                       | 4 19 2                   |
| 84-6290  | Fitting-Grease          | 2 24 1                   | 231-119  | Tire                       | 1 15 1                   |
| 84-6300  | Yoke-Double             | 2 4 1                    | 232-27   | Stem-Valve                 | 4 22 2                   |
| 84-6310  | Kit-Cross & Bearing     | 2 5 2                    | 232-35   | Stem-Valve                 | 1 21 1                   |
| 84-6330  | Tube-Shield, Inner      | 2 10 1                   | 237-168  | O-Ring                     | 9 39 12                  |
| 84-6340  | ASM-Bearing & Cone      | 2 25 1                   | 2412-133 | R-Clamp                    | 3 38 2                   |
| 84-6350  | Shield-3 Rib            | 2 6 1                    | 281-1    | Plug-Pipe                  | 8 7 1                    |
| 84-6360  | Screw                   | 2 23 8                   | 283-71   | Pin-Lynch                  | 7 36 4                   |
| 84-6370  | Fitting-Grease          | 2 21 1                   | 283-72   | Pin-Lynch                  | 5 31 2                   |
| 84-6380  | Inner Shaft & Yoke      | 2 22 1                   | 285-21   | Plug-Pipe                  | 7 22 1                   |
| 84-6390  | Outer Shaft & Yoke      | 2 20 1                   | 285-21   | Plug-Pipe                  | 5 24 1                   |
| 86-9720  | Tine-Tubular            | 10 4 36                  | 302-55   | Fitting-Grease             | 9 5 6                    |
| 92-1580  | Kit-Nylon Repair        | 7 41 1                   | 302-55   | Fitting-Grease             | 14 6 4                   |
| 92-1581  | Decal-Safety            | 7 37 1                   | 302-55   | Fitting-Grease             | 3 8 3                    |
| 92-1582  | Decal-Safety            | 7 38 1                   | 302-55   | Fitting-Grease             | 4 17 2                   |
| 92-2410  | Barrel                  | 6 1 1                    | 302-55   | Fitting-Grease             | 3 21 2                   |
| 92-2411  | Cap-End                 | 6 7 1                    | 302-55   | Fitting-Grease             | 7 39 6                   |
| 92-2412  | Piston                  | 6 3 1                    | 302-61   | Fitting-Grease             | 13 1 6                   |
| 92-2413  | Rod                     | 6 9 1                    | 302-61   | Fitting-Grease             | 3 11 2                   |
| 92-3000  | Flange-Crankshaft       | 9 43 12                  | 302-61   | Fitting-Grease             | 1 13 1                   |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. Ref.<br>No. No. Qty. | Part No. | Description           | Pg. Ref.<br>No. No. Qty. |
|----------|-------------|--------------------------|----------|-----------------------|--------------------------|
| 321-2    | Screw-HH    | 7 28 8                   | 3256-2   | Washer-Flat           | 7 30 10                  |
| 321-4    | Screw-HH    | 15 7 12                  | 3256-2   | Washer-Flat           | 3 46 1                   |
| 321-9    | Screw-HH    | 15 5 4                   | 3256-22  | Washer-Flat           | 15 4 4                   |
| 322-3    | Screw-HH    | 7 12 16                  | 3256-62  | Washer-Flat           | 9 23 6                   |
| 322-5    | Screw-HH    | 5 9 8                    | 3256-69  | Washer-Flat           | 7 24 4                   |
| 322-5    | Screw-HH    | 7 29 10                  | 3256-74  | Washer-Flat           | 3 37 2                   |
| 322-5    | Screw-HH    | 3 45 1                   | 3272-23  | Pin-Cotter            | 4 29 2                   |
| 322-6    | Screw-HH    | 3 24 4                   | 3274-4   | Screw-HSH             | 9 29 72                  |
| 323-6    | Screw-HH    | 4 3 4                    | 3274-89  | Screw-HSH             | 14 3 12                  |
| 323-6    | Screw-HH    | 3 33 3                   | 3289-17  | Screw-HSFH            | 13 6 12                  |
| 323-7    | Screw-HH    | 13 18 6                  | 3296-23  | Nut-Lock              | 1 1 6                    |
| 323-8    | Screw-HH    | 5 16 20                  | 3296-23  | Nut-Lock              | 7 5 2                    |
| 323-14   | Screw-HH    | 4 23 4                   | 3296-23  | Nut-Lock              | 9 12 24                  |
| 323-15   | Screw-HH    | 3 19 2                   | 3296-23  | Nut-Lock              | 3 34 4                   |
| 323-35   | Screw-HH    | 13 15 6                  | 3296-23  | Nut-Lock              | 3 41 1                   |
| 325-5    | Screw-HH    | 1 7 4                    | 3296-29  | Nut-Lock              | 3 28 4                   |
| 325-6    | Screw-HH    | 1 10 1                   | 3296-29  | Nut-Lock              | 3 43 1                   |
| 325-8    | Screw-HH    | 1 3 4                    | 3296-39  | Nut-Lock              | 3 1 5                    |
| 325-8    | Screw-HH    | 7 14 2                   | 3296-39  | Nut-Lock              | 13 20 12                 |
| 325-12   | Screw-HH    | 3 40 1                   | 3296-39  | Nut-Lock              | 7 34 6                   |
| 325-17   | Screw-HH    | 1 30 2                   | 3296-56  | Nut-Lock              | 15 10 16                 |
| 327-4    | Screw-HH    | 7 25 4                   | 3296-61  | Nut-Lock              | 4 8 8                    |
| 327-14   | Screw-HH    | 1 5 2                    | 3296-70  | Nut-Hex               | 3 3 2                    |
| 327-14   | Screw-HH    | 4 7 8                    | 3296-70  | Nut-Hex               | 1 22 1                   |
| 3212-5   | Screw-HH    | 1 12 4                   | 3296-70  | Nut-Lock              | 9 11 6                   |
| 3212-6   | Screw-HH    | 13 11 12                 | 3296-70  | Nut-Lock              | 9 24 6                   |
| 3217-11  | Nut-Hex.    | 1 6 2                    | 32108-20 | Screw-Countersink     | 3 17 4                   |
| 3234-13  | Screw-HFH   | 4 6 8                    | 32120-8  | Ring-Retaining        | 3 4 4                    |
| 3253-3   | Washer-Lock | 7 27 8                   | 32120-31 | Ring-Snap             | 8 6 3                    |
| 3253-4   | Washer-Lock | 5 10 8                   | 32120-62 | Ring-Retaining        | 9 48 12                  |
| 3253-4   | Washer-Lock | 7 11 16                  | 32121-3  | Pin-Roll              | 1 9 1                    |
| 3253-7   | Washer-Lock | 14 2 12                  | 32121-15 | Pin-Roll              | 13 17 6                  |
| 3253-7   | Washer-Lock | 1 8 4                    | 32121-34 | Pin-Roll              | 9 8 6                    |
| 3253-7   | Washer-Lock | 7 18 4                   | 32121-34 | Pin-Roll              | 4 18 2                   |
| 3253-11  | Washer-Lock | 1 33 1                   | 32151-88 | Ring-Retaining        | 9 20 24                  |
| 3253-21  | Washer-Lock | 4 2 4                    | 354-33   | ASM-Fitting, Bulkhead | 3 27 1                   |

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Fairway Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Fairwar Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Fairway Aerator.
2. Part number, description, and the quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS

| Description                                   | Page | Description                                      | Page  |
|-----------------------------------------------|------|--------------------------------------------------|-------|
| Hitch & Front Wheel Assembly .....            | 1    | Corer Gear Case & Stomper Arm Assembly .....     | 9     |
| Drive Line Assembly .....                     | 2    | 6-Tine Blocks & .75 Diameter Tine Selection .... | 10    |
| Chassis Assembly .....                        | 3    | 2-Tine Blocks & Tine Selection .....             | 11    |
| Rear Wheel Assembly .....                     | 4    | 6-Tine Blocks & Tine Selection .....             | 12    |
| Front Gear Box Assembly .....                 | 5    | Roller & Finger Plate Assembly .....             | 13    |
| Hydraulic Cylinder Assembly No. 71-6560 ..... | 6    | Drive Line Assembly .....                        | 14    |
| Corer & Shield Assembly .....                 | 7    | Aerator & Coring Head Covers .....               | 15    |
| Gear Box Assembly No. 77-3050 .....           | 8    | Numerical Parts Index .....                      | 16-18 |

## MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.  
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.