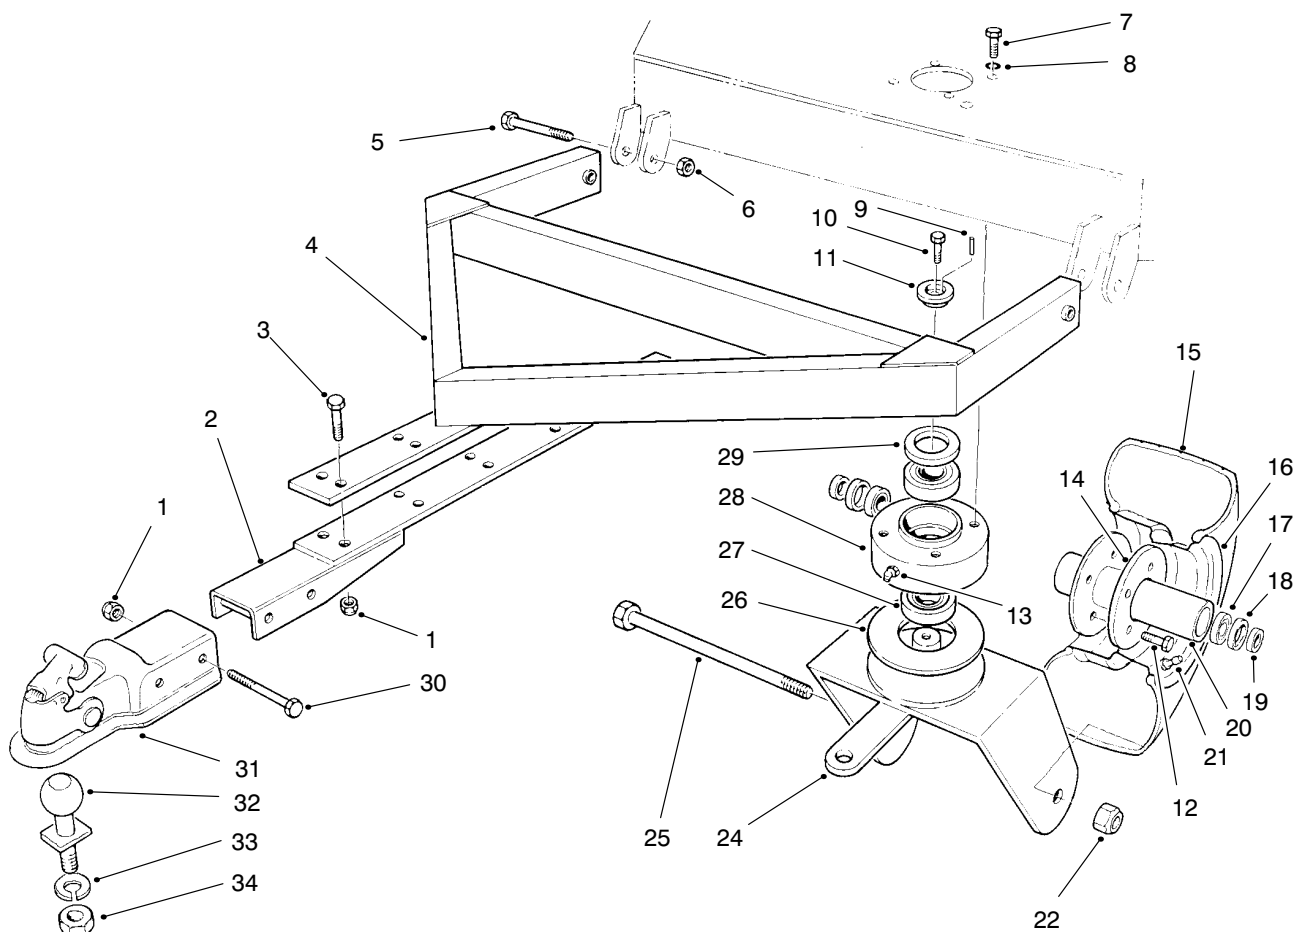



TORO®
MODEL NO. 09502-90001 & UP
MODEL NO. 09512
PARTS
CATALOG
FAIRWAY AERATOR


T-1309-1

HITCH & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut-Lock	6
2	71-7020	ASM-Adapter, Hitch	1
3	325-8	Screw-HH	4
4	71-6890	ASM-Hitch	1
5	327-14	Screw-HH	2
6	3217-11	Nut-Hex.	2
7	325-5	Screw-HH	4
8	3253-7	Washer-Lock	4
9	32121-3	Pin-Roll	1
10	325-6	Screw-HH	1
11	71-6820	Cap-Retaining	1
12	3212-5	Screw-HH	4
13	302-61	Fitting-Grease	1
14	71-6760	Support-Rim	1
15	231-119	Tire	1
16	217-60	Rim	1
17	71-6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71-6790	Seal-Oil	2
19	71-6750	Spacer-Outer	2
20	71-6830	ASM-Hub Wheel	1
21	232-35	Stem-Valve	1
22	3296-70	Nut-Hex.	1
24	71-6730	ASM-Caster	1
25	71-6800	Shaft-Axle	1
26	71-6810	Disc-Plastic	1
27	71-6720	Bearing	2
28	71-6770	Housing-Bearing	1
29	71-6710	Seal-Oil	1
30	325-17	Screw-HH	2
31	71-7010	Coupler-Hitch	1
32	71-7070	Ball-Hitch	1
33	3253-11	Washer-Lock	1
34	72-8010	Nut-Hex.	1

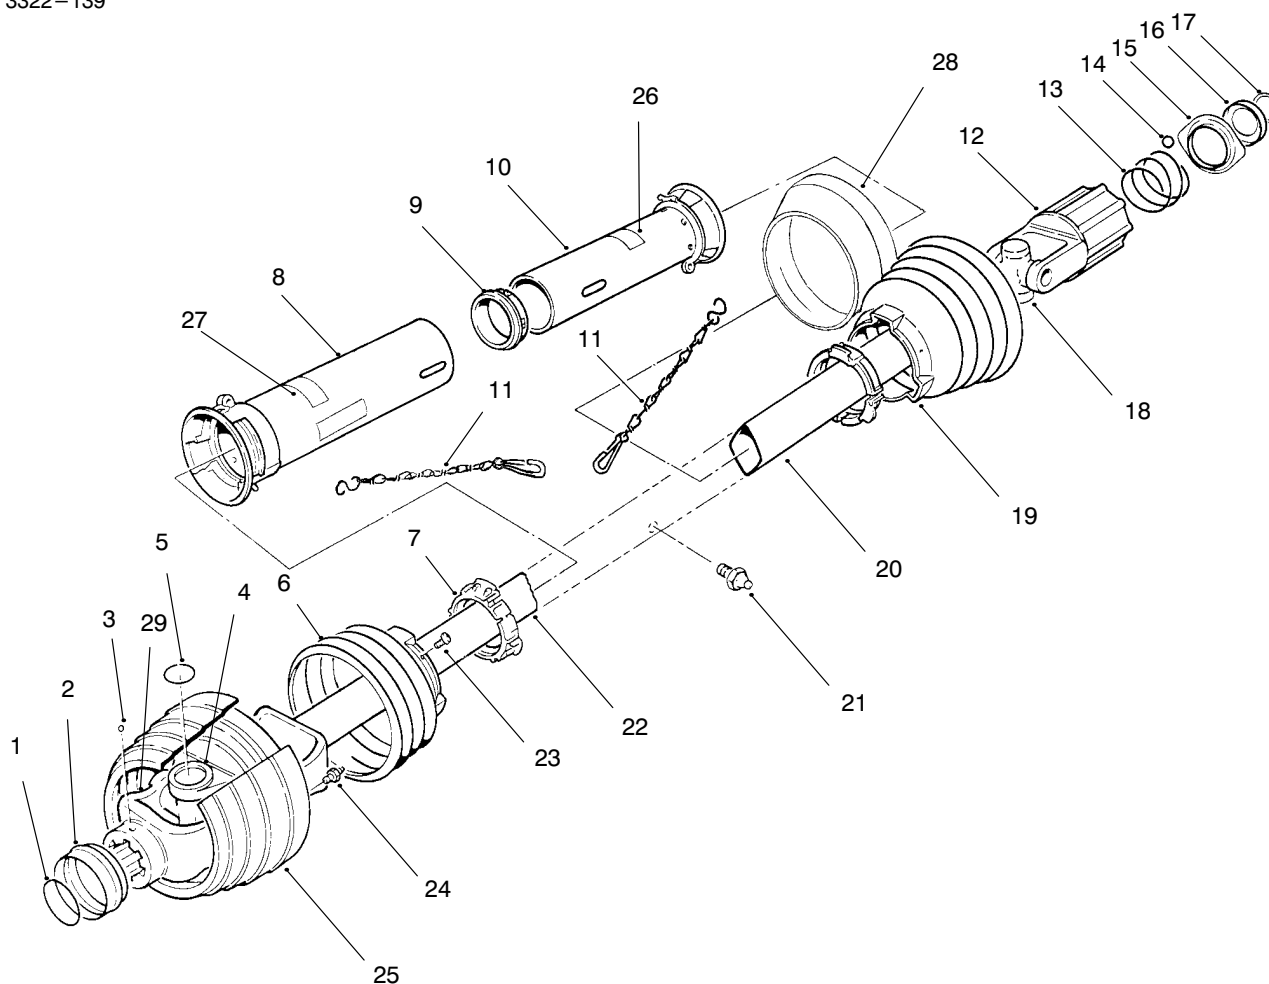

T-1456-1


FRONT DRIVE LINE ASSEMBLY NO. 94-9144

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2		ASM-Collar	1
3		Ball	3
4	84-6300	Yoke-Double	1
5	84-6310	Kit-Cross & Bearing	2
6	84-6350	Shield-3 Rib	1
7	77-4740	Ring-Bearing	2
8	94-9146	Tube-Shield, Outer	1
9	77-4790	Bearing-Support	1
10	84-6330	Tube-Shield, Inner	1
11	77-4760	Chain-Safety	2
12	94-9145	Clutch-Radial Pin	1
13		Spring-Compression	1
14		Ball	1
15		Collar-Lock	1
16		Ring-Flanged	1
17		Ring-Snap	1
18	77-4720	Kit-Cross & Bearing	1
19	77-4730	Cone-Shield	1

Ref. No.	Part No.	Description	No. Used
20	84-6390	Outer Shaft & Yoke	1
21	84-6370	Fitting-Grease	1
22	84-6380	Inner Shaft & Yoke	1
23	84-6360	Screw	8
24	84-6290	Fitting-Grease	1
25	84-6340	ASM-Bearing & Cone	1
26	92-7937	Decal-Inner	1
27	92-7936	Decal-Outer	1
28	93-7734	Reinforced Collar	1
29	84-6280	ASM-Yoke	1
		(Incl. Ref.#1-4)	1
*	77-4670	Kit-Collar	1
		(Incl. Ref.#1-3)	1
*	77-4660	Kit-Flange	1
		(Incl. Ref.#13-17)	1
*	94-9144	Drive Line (Complete)	1
**	94-1775	Kit-Clutch, Cams & Springs	4

*Not Illustrated

**Number of Kits Required to Rebuild Clutch

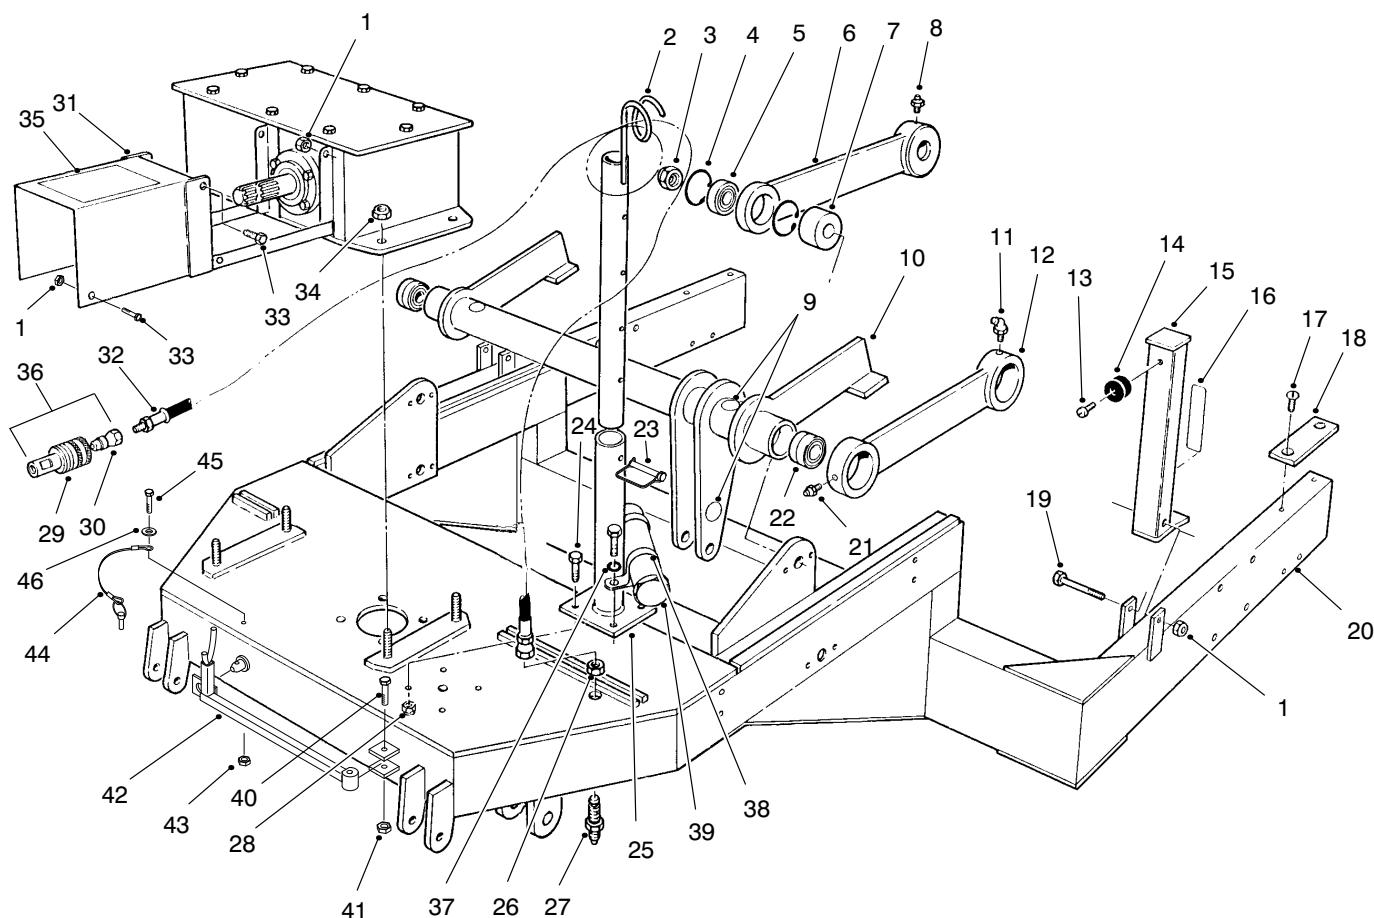

T-0898-3


CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut-Lock	5
2	71-6910	ASM-Extension, Stand	1
3	3296-70	Nut-Hex	2
4	32120-8	Ring-Retaining	4
5	70-9240	Bearing	2
6	71-6590	Lift Arm-Top	2
7	72-7970	Spacer-Lift Arm, Top	2
8	302-55	Fitting-Grease	3
9	58-6520	Decal-Grease	3
10	71-6510	ASM-Lift Unit	1
11	302-61	Fitting-Grease	2
12	71-6600	Lift Arm-Bottom, LH	1
*	74-3110	Lift Arm-Bottom, RH	1
13	47-2830	Screw	2
14	71-7530	Grommet	2
15	76-2920	Stand-Transport	2
16	67-5370	Decal-Caution	2
17	32108-20	Screw-Countersink	4
18	71-7510	Pad-Absorber, Shock	2
19	323-15	Screw-HH	2
20	94-1778	ASM-Frame, Carrier	1
21	302-55	Fitting-Grease	2
22	70-9240	Bearing	4
23	93-4696	Pin-Snapper	1
24	322-6	Screw-HH	4

Ref. No.	Part No.	Description	No. Used
25	71-6950	ASM-Stand, Hose	1
†26		Nut-Bulkhead	1
27	354-33	ASM-Fitting, Bulkhead (Incl. Ref. #26)	1
28	3296-29	Nut-Lock	4
†29		Body-Female	1
†30		Tip-Male	1
31	95-3122	Shield-Drive Line (Incl. Ref. #35)	1
32	71-6980	Hose-Hydraulic	1
33	323-6	Screw-HH	3
34	3296-23	Nut-Lock	4
35	82-9400	Decal-Danger	1
36	71-7060	Coupler-Quick (Incl. Ref. #29 & 30)	1
37	3256-74	Washer-Flat	2
38	2412-133	R-Clamp	2
39	74-0720	Tube-Manual	1
40	325-12	Screw-HH	1
41	3296-23	Nut-Lock	1
42	94-1762	Rest-Drive Shaft	1
43	3296-29	Nut-Lock	1
44	92-9941	Lynch Pin & Tie	1
45	322-5	Screw-HH	1
46	3256-2	Washer-Flat	1

*Not Illustrated

†Not Serviced Separately

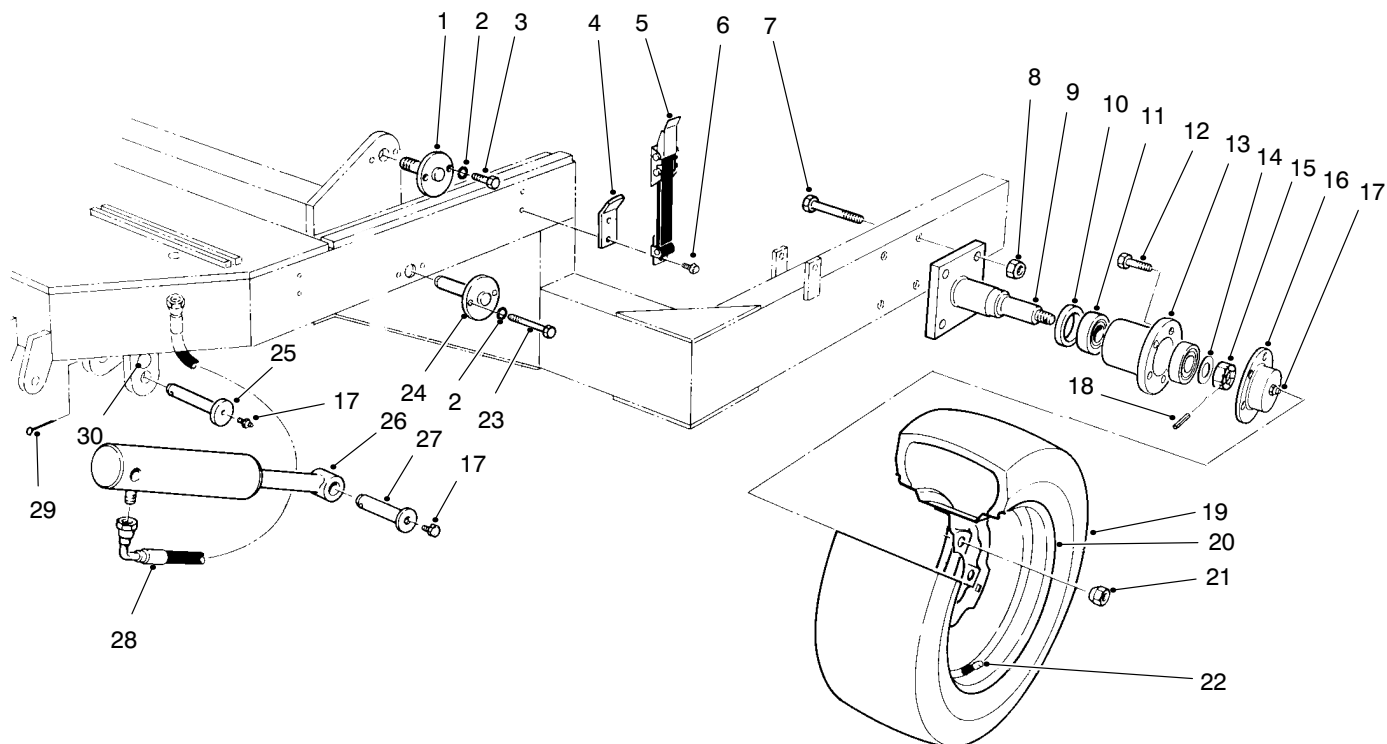


T-0897-1

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-6620	Pin-Location, Top	2
2	3253-21	Washer-Lock	4
3	323-6	Screw-HH	4
4	71-6900	Guide-Cover, Front	4
5	71-6990	Latch-Draw, Flexible	4
6	3234-13	Screw-HFH	8
7	327-14	Screw-HH	8
8	3296-61	Nut-Lock	8
9	71-6860	Shaft-Axle	2
10	71-6710	Seal-Oil	2
11	71-6630	Bearing	4
12	77-4520	Screw-HH	10
13	71-6850	Housing-Bearing	2
14	70-9520	Washer-Flat	2
15	70-9460	Nut-Castle	2

Ref. No.	Part No.	Description	No. Used
16	71-6840	Cap-Hub	2
17	302-55	Fitting-Grease	2
18	32121-34	Pin-Roll	2
19	231-101	Tire	2
20	217-117	Rim	2
21	23-7270	Nut-Wheel	10
22	232-27	Stem-Valve	2
23	323-14	Screw-HH	4
24	71-6520	Pin-Location, Bottom	2
25	71-6540	Pin-Mount, Front	1
26	71-6560	Cylinder-Hydraulic	1
27	71-6550	Pin-Mount, Rear	1
28	71-7490	ASM-Hose	1
29	3272-23	Pin-Cotter	2
30	58-6520	Decal-Grease	1

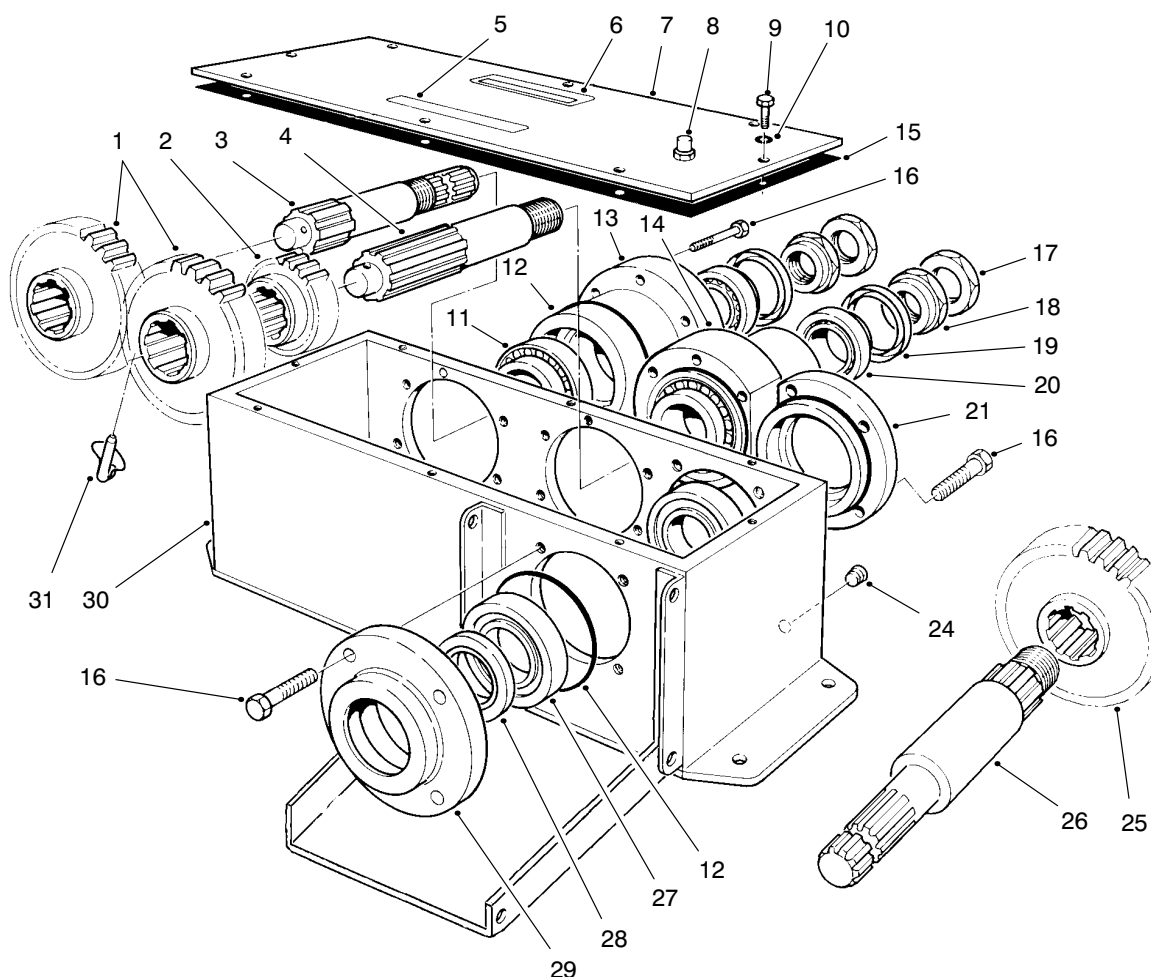


T-0893-1

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-7300	Gear-30 Tooth	1	11	71-6700	Bearing	2
*	71-7310	Gear-31 Tooth	1	12	92-3013	O-Ring	4
*	71-7320	Gear-32 Tooth	1	13	92-3011	Housing-Bearing	1
*	71-7330	Gear-33 Tooth	1	14	92-3010	Housing-Bearing	1
*	71-7340	Gear-34 Tooth	1	15	71-6610	Gasket-Cover	1
*	71-7350	Gear-35 Tooth	2	16	323-8	Screw-HH	20
*	71-7360	Gear-36 Tooth	1	17	70-9720	Nut-Jam	2
*	71-7370	Gear-37 Tooth	1	18	70-9710	Nut-Hex	2
*	71-7380	Gear-38 Tooth	1	19	71-6490	Seal-Oil	2
*	71-7390	Gear-39 Tooth	1	20	71-6690	Bearing	2
*	71-7400	Gear-40 Tooth	1	21	92-3008	Cap-Bearing	1
2	71-7200	Gear-20 Tooth	1	24	285-21	Plug-Pipe	1
3	71-6570	Shaft-Corer	1	25	82-2900	Gear-35 Tooth	1
4	70-9690	Shaft-Intermediate	1	26	94-5309	Shaft-Tractor	1
5	65-3090	Decal	1	27	72-3820	Bearing	2
6	67-5360	Decal-Warning	1	28	70-9680	Seal-Oil	1
7	70-9670	Cover-Gearbox	1	29	92-3009	Cap-Bearing	1
8	72-3800	Breather	1	30	94-1779	ASM-Gear Case.	1
9	322-5	Screw-HH	8	31	283-72	Pin-Lynch	2
10	3253-4	Washer-Lock	8				

*Not Illustrated

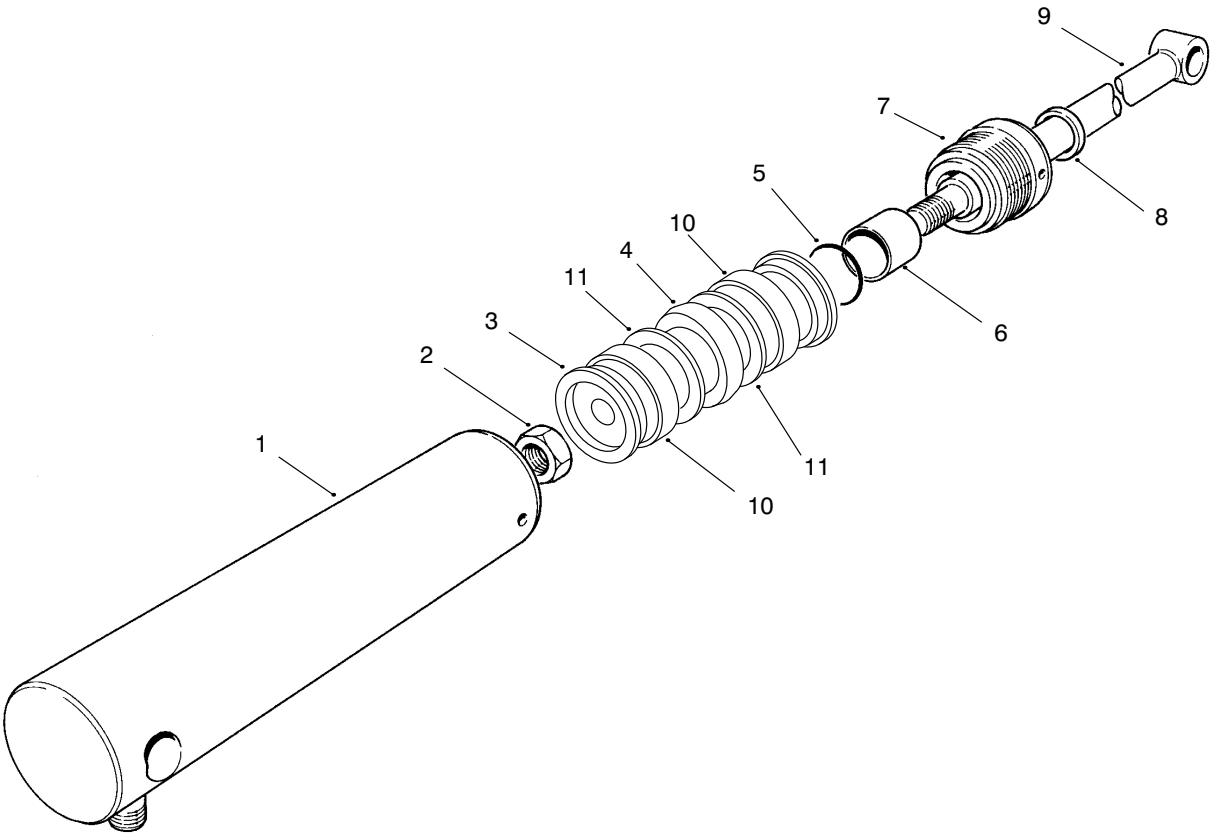


T-0899-1

HYDRAULIC CYLINDER ASSEMBLY NO. 71-6560

Ref. No.	Part No.	Description	No. Used
1	92-2410	Barrel	1
2	93-8770	Nut	1
3	92-2412	Piston	1
†4		Seal-Piston	1
†5		O-Ring	1
†6		Bushing-Bronze	1
7	92-2411	Cap-End	1

Ref. No.	Part No.	Description	No. Used
†8		Seal-Wiper	1
9	92-2413	Rod	1
		(Incl. Ref. #4-6,8,10,11)	1
10		Plastic Anti-Extrusion Ring	2
11		Spiral Back-Up Wear Ring	2
*	71-6640	Kit-Seal	1
		(Incl. Ref.# 4-6,8,10,11)	

*Not Illustrated
†Not Serviced Separately

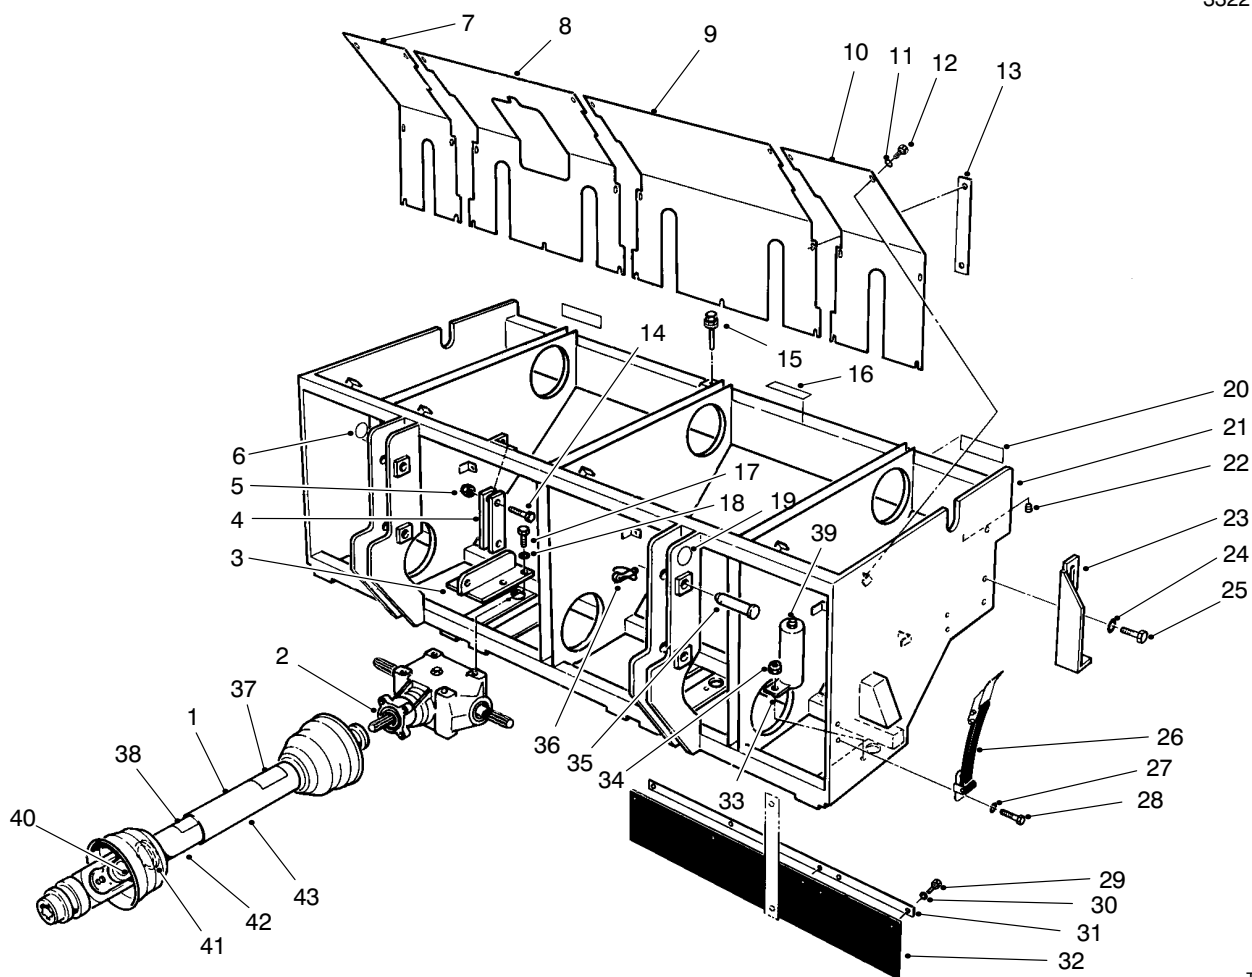


T-1137-1

FRAME & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-8060	ASM-Drive Line (Incl. Ref. #37, 38 & 40-43)	1
2	77-3050	Gearbox-Rear, Bevel	1
3	76-3760	Plate-Mounting, Gearbox	1
4	71-7150	Plate-Upright, Gearbox	2
5	3296-23	Nut-Lock	2
6	58-6520	Decal-Grease	1
7	77-3070	Screen-Outer, RH	1
8	77-3090	Screen-Inner, RH	1
9	77-3080	Screen-Inner, LH	1
10	77-3060	Screen-Outer, LH	1
11	3253-4	Washer-Lock	16
12	322-3	Screw-HH	16
13	72-7980	Strap	6
14	325-8	Screw-HH	2
15	72-7960	Indicator-Oil Level	1
16	67-5360	Decal-Warning, Covers	1
17	48-7830	Screw, HH	4
18	3253-7	Washer-Lock	4
19	58-6520	Decal-Grease	1
20	59-9930	Decal-Danger	2
21	92-3004	ASM-Coring Frame	1
22	285-21	Plug-Pipe	1

Ref. No.	Part No.	Description	No. Used
23	71-7470	Adjuster-LH	1
*	71-7480	Adjuster-RH	1
24	3256-69	Washer-Flat	4
25	327-4	Screw-HH	4
26	71-6990	Latch-Draw, Flexible (Complete)	4
27	3253-3	Washer-Lock	8
28	321-2	Screw-HH	8
29	322-5	Screw-HH	10
30	3256-2	Washer-Flat	10
31	71-7460	Strap-Securing, Curtain	2
32	71-7450	Curtain-Lower	2
33	71-7180	Cover-Dust	6
34	3296-39	Nut-Lock	6
35	71-6530	Pin-Mount, Lift Arm	4
36	283-71	Pin-Lynch	4
37	92-1581	Decal-Safety	1
38	92-1582	Decal-Safety	1
39	302-55	Fitting-Grease	6
40	72-7990	Kit-Cross & Bearing	1
41	92-1580	Kit-Nylon Repair	1
42	92-7931	Inner Guard	1
43	92-7930	Outer Guard	1

*Not Illustrated

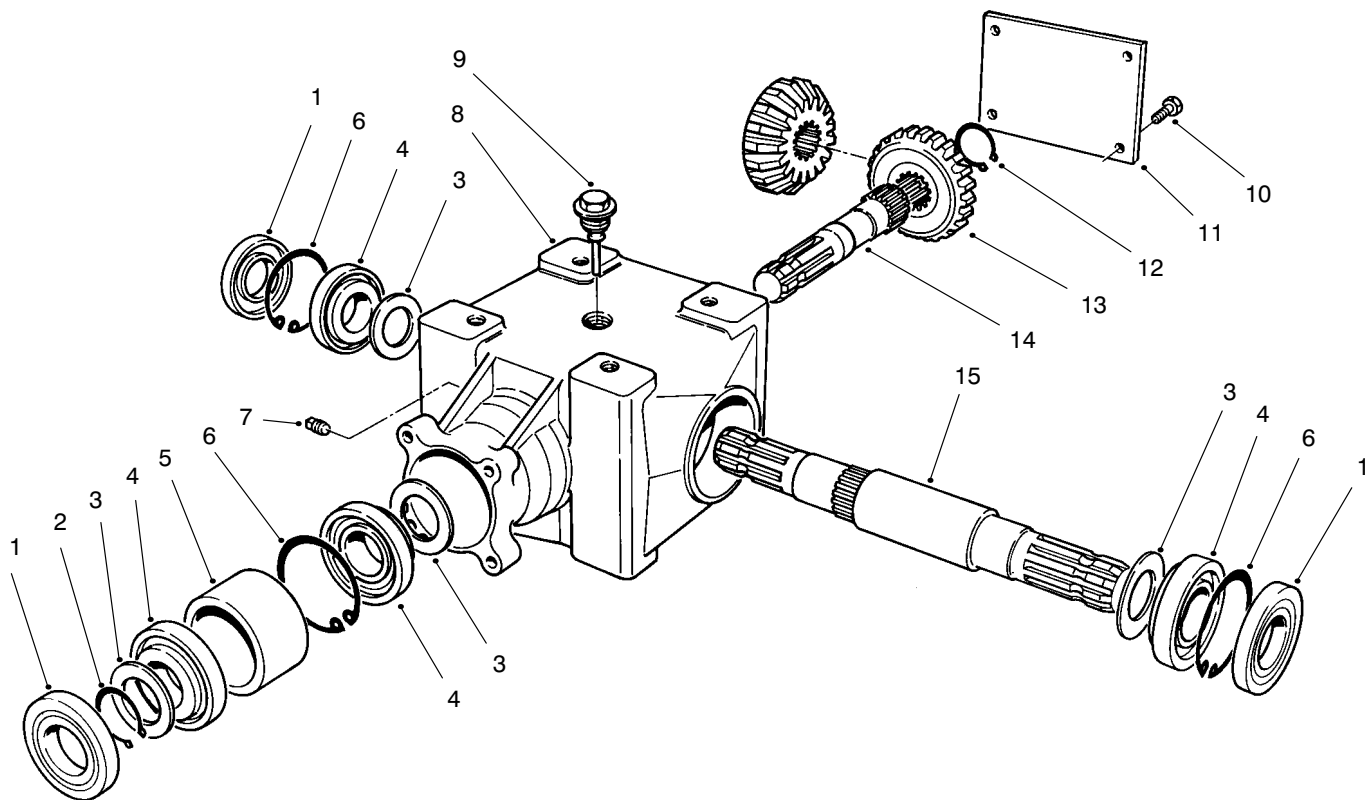


T-1127-1

GEAR BOX ASSEMBLY NO. 77-3050

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-3200	Seal-Oil	3	10	77-4500	Bolt-HSH	4
2	74-2960	Ring-Retaining	1	11	77-4470	Cover	1
†3	74-2990	Shim Kit	4	12	77-4460	Ring-Retaining	1
4	71-6630	Bearing	4	13	77-4450	Gear-18 Tooth	2
5	77-4430	Spacer	1	14	77-4440	Shaft-Input	1
6	32120-31	Ring-Snap	3	15	77-4480	Shaft	1
7	281-1	Plug-Pipe	1				
*8		Case	1				
9	77-4490	Plug-Oil Level/Filler	1				

†Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play. Required when replacing items #4, 5, & 13-15. Instruction sheet included.

*Not Serviced Separately

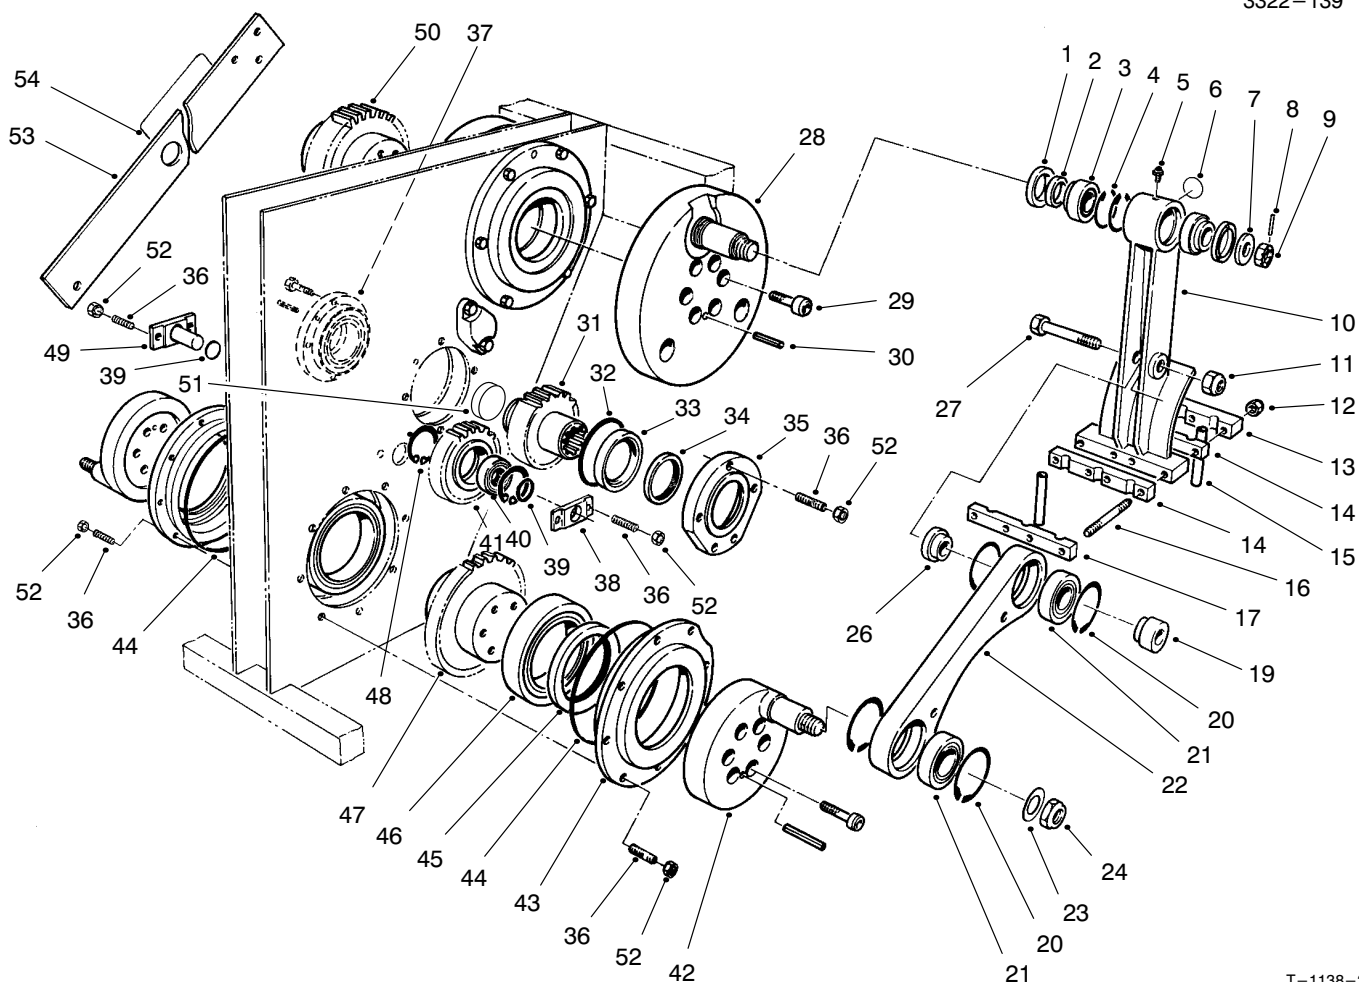


T-1138-2

FRAME GEAR CASE & STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	72-3840	Seal-Oil	12	29	3274-4	Screw-HSH	72
2	70-9580	Spacer-Inner	6	30	71-7100	Pin-Roll	12
3	72-3810	Bearing	12	31	76-3630	Gear-Shaft, Driver	3
4	82-3190	Ring-Retaining	12	32	92-3013	O-Ring	6
5	302-55	Fitting-Grease	6	33	70-9220	Bearing	6
6	58-6520	Decal-Grease	6	34	99-6882	Seal-Oil	4
7	70-9570	Spacer-Outer	6	35	99-6878	Housing-Shaft, Drive, Open	4
8	32121-34	Pin-Roll	6	36	92-3005	Stud	150
9	70-9460	Nut-Castle	6	37	99-6879	Housing-Closed	2
10	70-9420	Arm-Tine	6	38	92-3003	Cap-End	6
11	3296-70	Nut-Lock	6	39	237-168	O-Ring	12
12	3296-23	Nut-Lock	24	40	77-4560	Bearing	6
†13		Block-Outer		41	76-3640	Gear-Idler	6
†14		Block-Inner		42	72-8100	Crank-Bottom	6
†15		Tine		43	92-3000	Flange-Crankshaft	12
†16		Stud		44	92-3012	O-Ring	12
†17		Block-Bridging		45	99-5398	Seal-Oil	12
19	72-8060	Bushing-Spacer, Long	6	46	70-9330	Bearing	12
20	32151-88	Ring-Retaining	24	47	76-3660	Gear-Crankshaft, Bottom	3
21	72-8070	Bearing	12	48	32120-62	Ring-Retaining	12
22	77-3040	Rod-Connecting	6	49	92-3002	Shaft-Idler	6
23	3256-62	Washer-Flat	6	50	76-3650	Gear-Crankshaft, Top	3
24	3296-70	Nut-Lock	6	51	99-6880	Plug-Drive Gear	2
26	72-8090	Bushing-Spacer, Short	6	52	92-3006	Nut-Lock	150
27	70-9550	Bolt-Connecting	6	53	82-3200	Timing Bar	1
28	92-9948	Crank-Top	6	54	82-3220	Decal	1


† See pages 10 & 11 for selection.

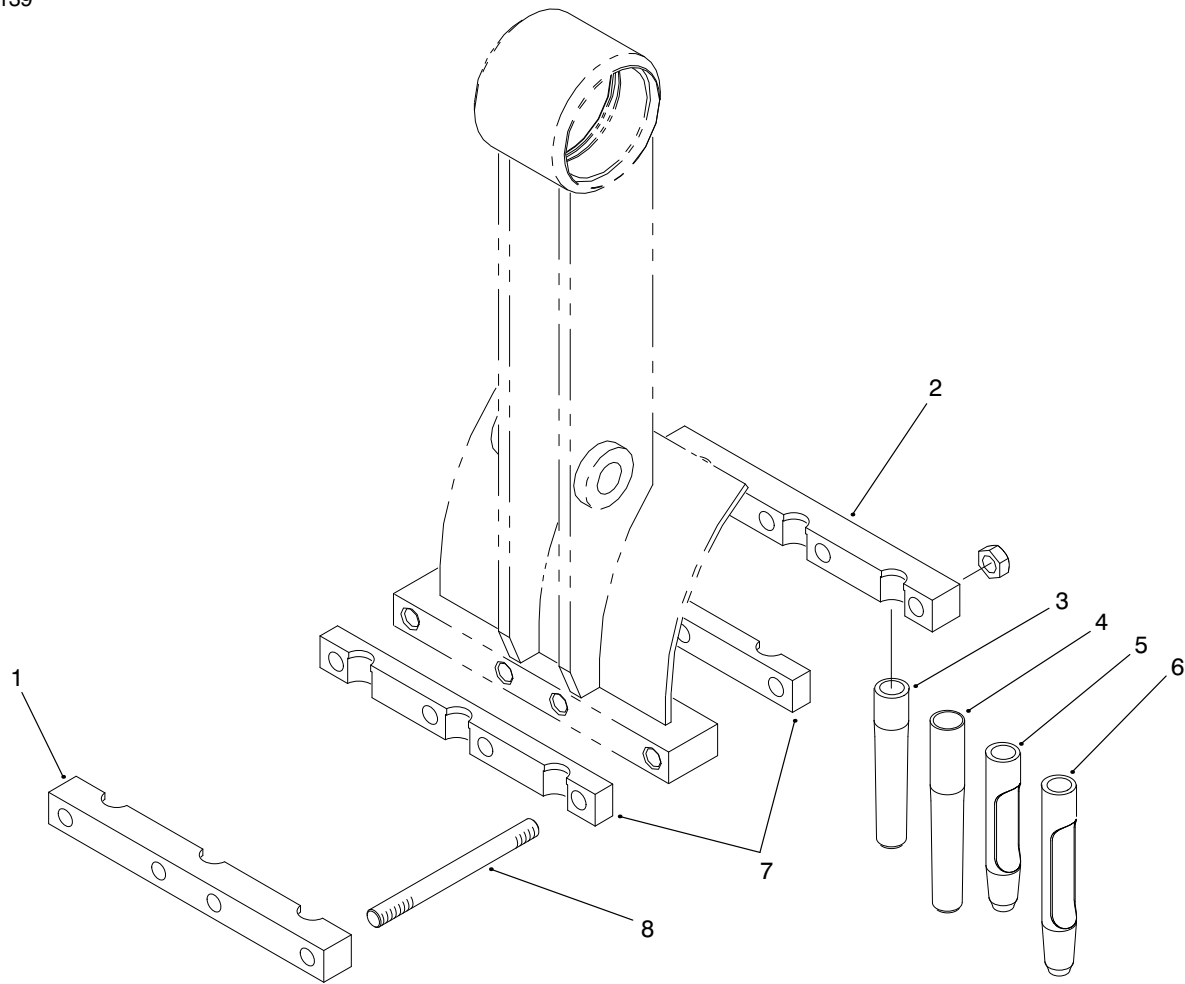

T-2530-1

6-TINE BLOCKS & .75 DIAMETER TINE SELECTION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-9390	Block-Bridging, 6-Tine	6	5	92-7941	Tine-Open Center .75 x 4.75	36
2	70-9380	Block-Outer, 6-Tine	6	6	92-7900	Tine-Open Center .75 x 5.75	36
3	62-4600	Tine-Tubular .75 x 4.75	36	7	70-9400	Block, Inner, 6-Tine	12
4	86-9720	Tine-Tubular .75 x 5.75	36	8	71-7120	Stud-.50 x 150mm	24

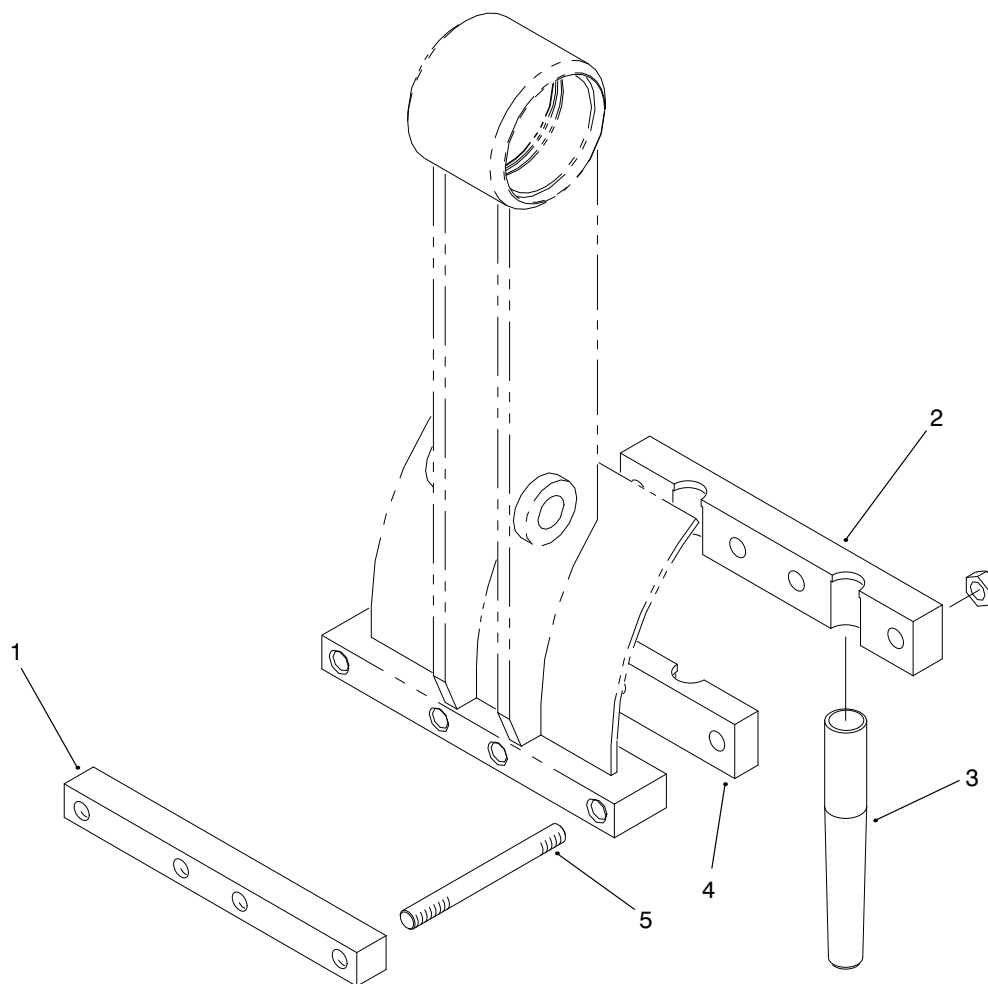


T-2531-1

2-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70-9410	Block-Bridging, 2-Tine	6
2	70-9260	Block-Outer, 2-Tine	6
3	71-0940	Tine-Tubular .88 x 7.00	12


Ref. No.	Part No.	Description	No. Used
4	70-9270	Block-Inner, 2-Tine	6
5	71-7110	Stud-.50 x 130mm	24

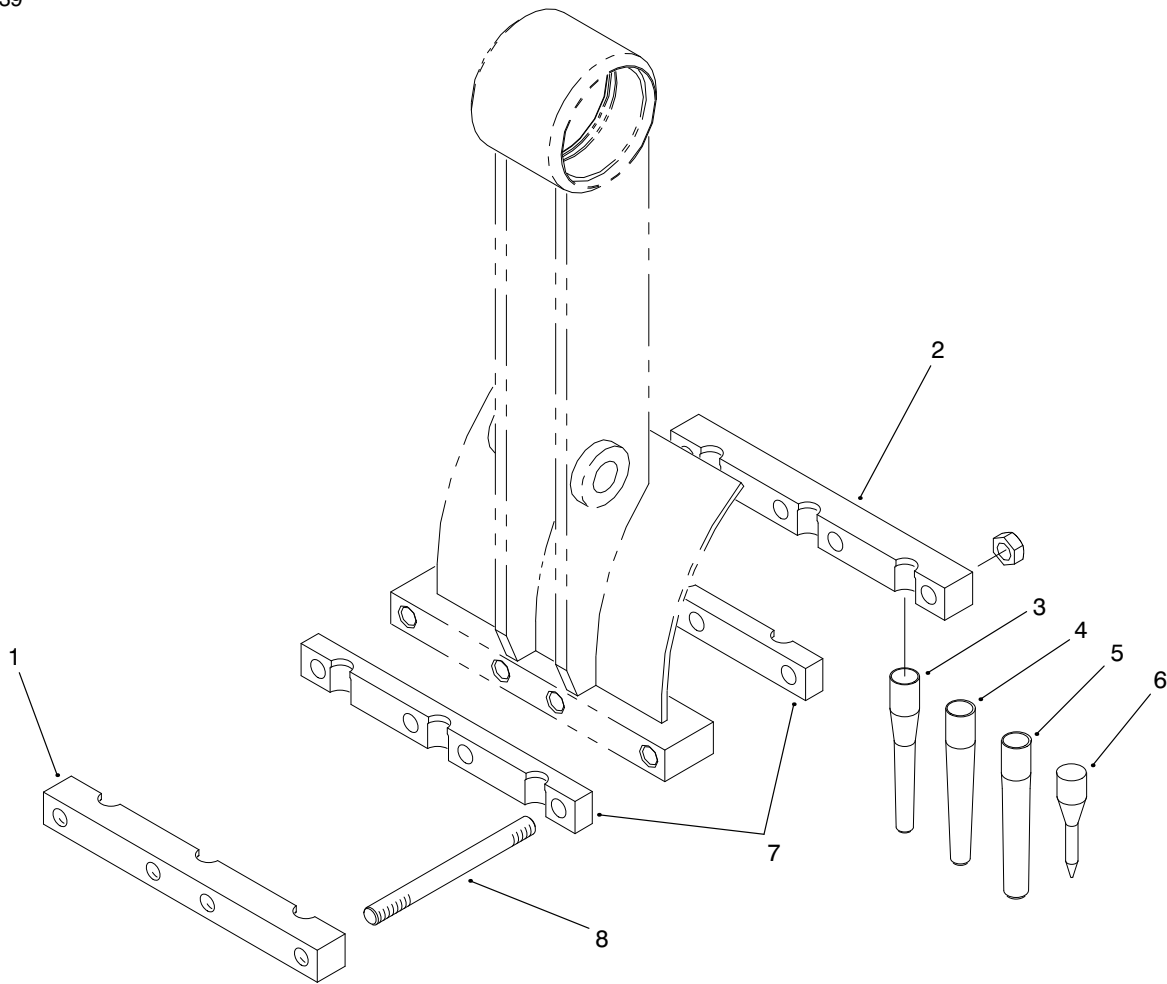

T-2532-1

6-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-3104	Block-Bridging, 6-Tine	6	5	59-3670	Tine-Tubular .62 x 4.75	36
2	95-3103	Block-Outer, 6-Tine	6	6	77-5320	Tine-Spiker .31 x 3.25	36
3	59-3690	Tine-Tubular .38 x 4.75	36	7	95-3105	Block-Inner, 6-Tine	12
4	94-3419	Tine-Tubular .50 x 4.75	36	8	71-7120	Stud-.50 x 150mm	24

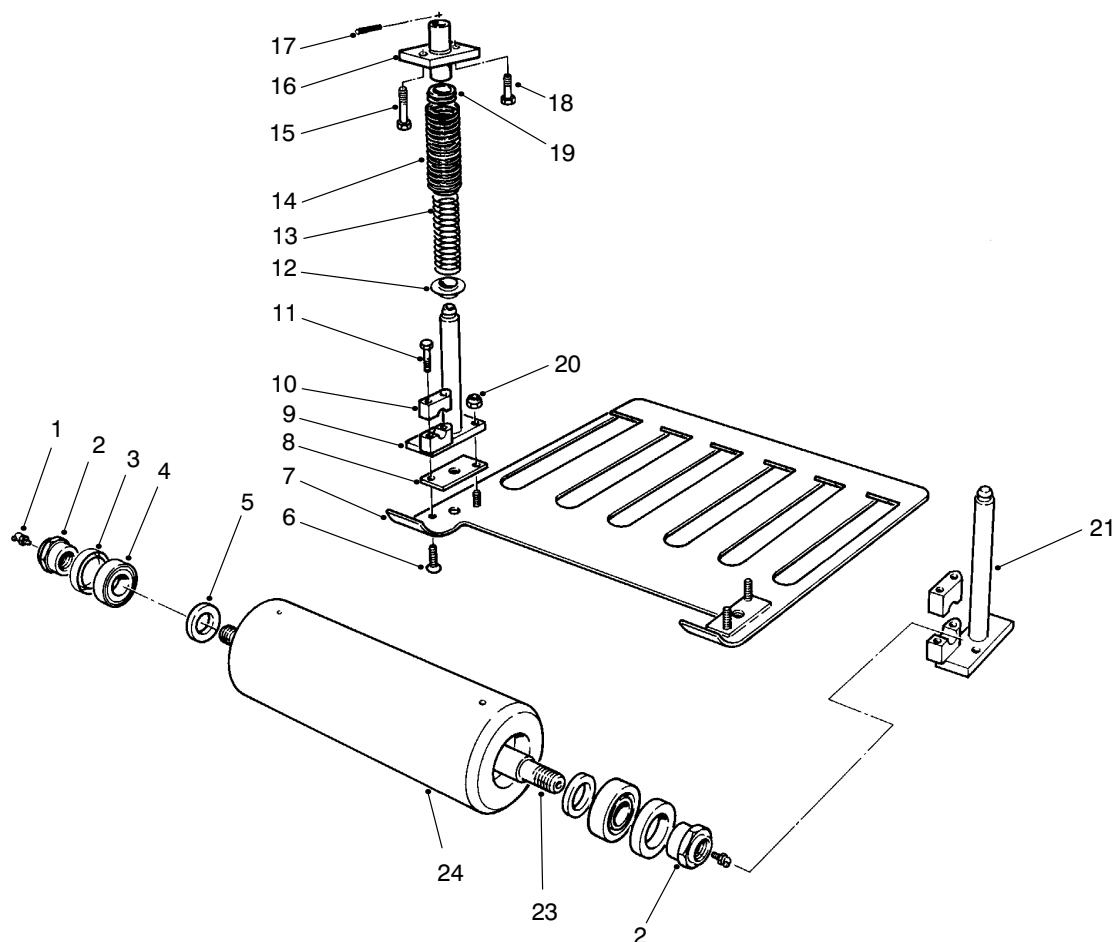


T-0896-1

ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-61	Fitting-Grease	6
2	71-7290	Nut-Thin	6
3	71-6790	Seal-Oil	6
4	71-6780	Bearing	6
5	72-3830	Seal-Oil	6
6	3289-17	Screw-HSFH	12
7	70-9440	Plate-6 Tine	3
*	70-9430	Plate-2 Tine	3
8	71-7270	Plate-Backing	6
9	71-7220	Shaft-RH	3
10	72-8020	Block-Clamp, Top	6
11	3212-6	Screw-HH	12
12	71-7240	Ring-Clamp, Bottom	6

Ref. No.	Part No.	Description	No. Used
13	70-9450	Spring-Compression	6
14	82-2890	Shield-Rubber	6
15	323-35	Screw-HH	6
16	71-7130	Bushing	6
17	32121-15	Pin-Roll	6
18	323-7	Screw-HH	6
19	71-7230	Ring-Clamp, Top	6
20	3296-39	Nut-Lock	12
21	71-7210	Shaft-LH	3
23	71-7280	Shaft	3
24	71-7250	ASM-Roller (Incl. Ref. #1-5, 22 & 23)	3


*Not Illustrated

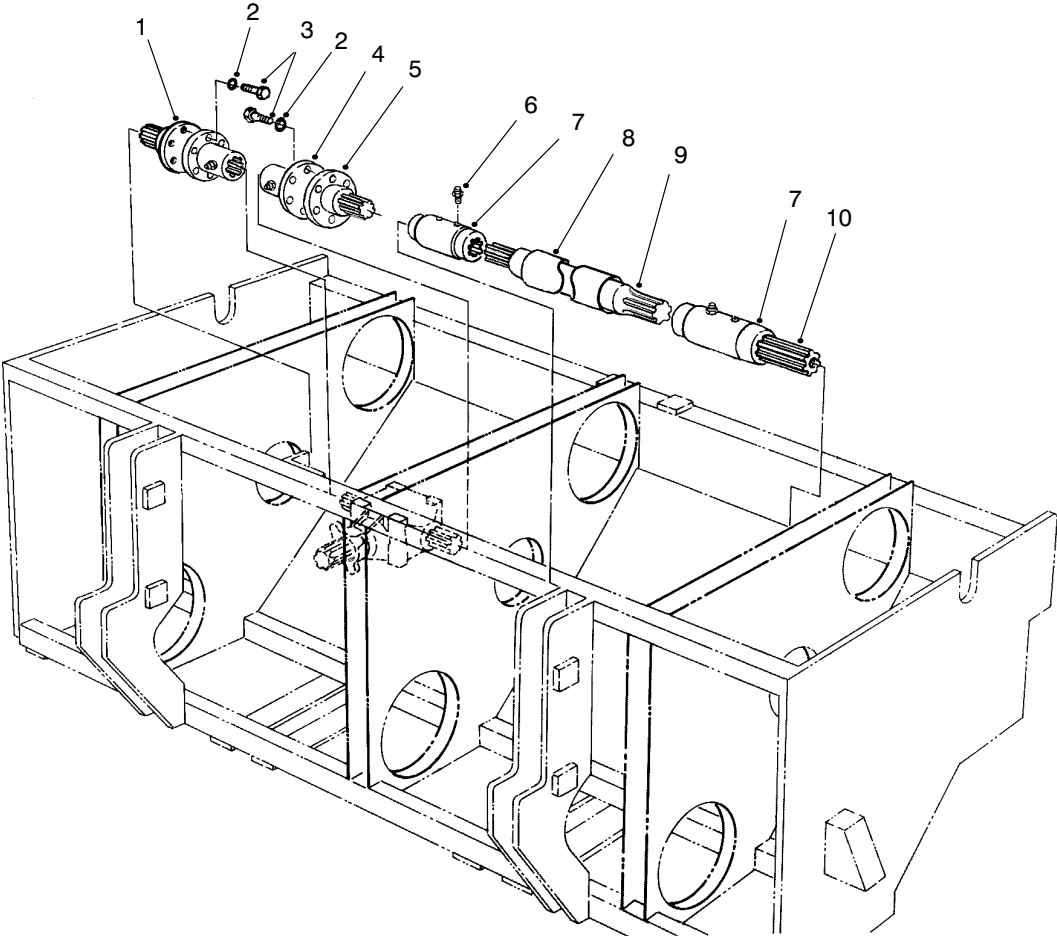

T-3193

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-6872	Shaft-Splined	1	6	302-55	Fitting-Grease	4
2	3253-7	Washer-Lock	12	7	98-6876	Coupling-Splined	2
3	3274-89	Screw-HSH	12	8	98-6877	Tube-Shield	1
5	76-3710	Coupling-Flange	2	9	99-6874	Shaft-Splined	1
8	99-6873	Shaft-Splined	1	10	99-6875	Shaft-Splined	1

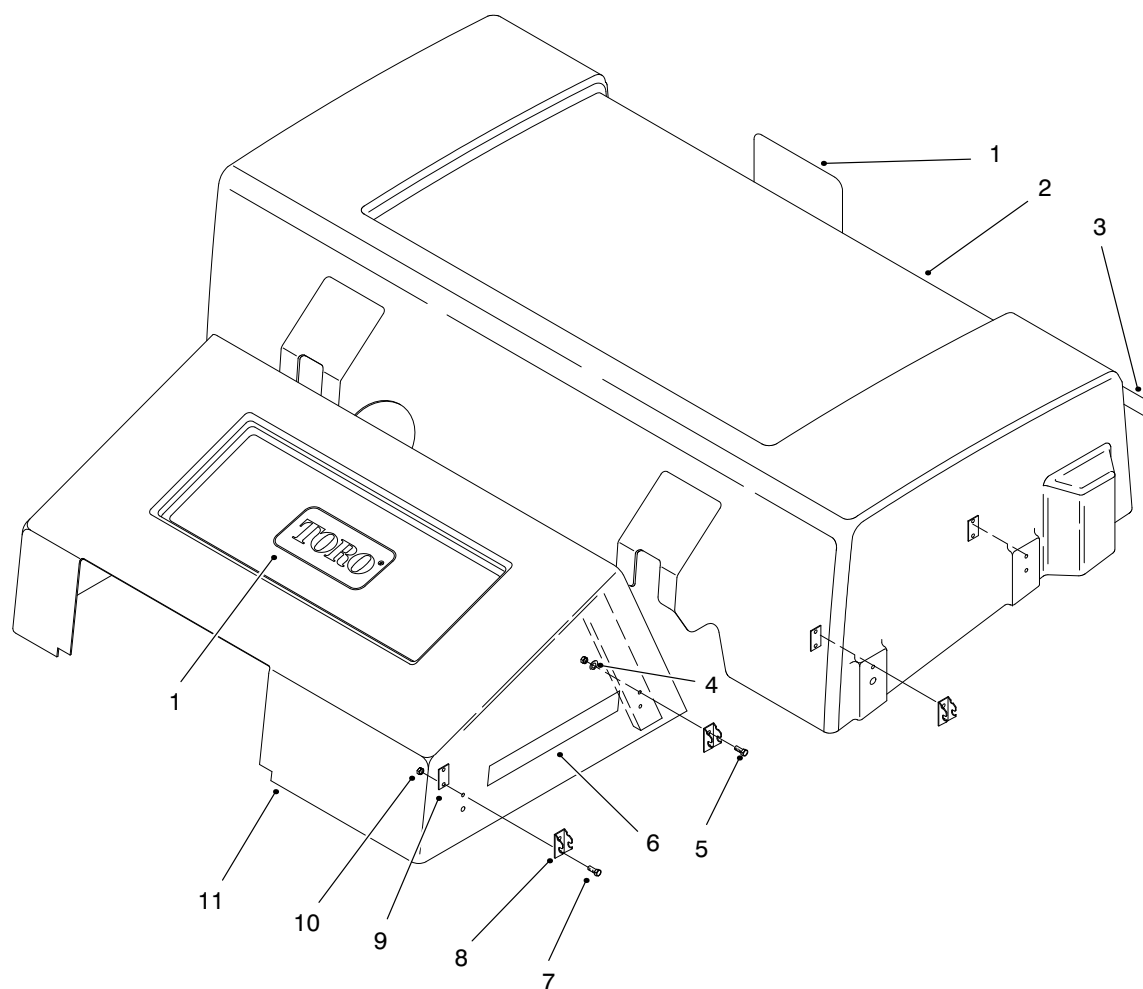

T-0900-2

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-7310	Decal-Toro	2	7	321-4	Screw-HH	12
2	84-5980	Cover-Coring Head	1	8	71-6990	Latch (Complete) (Keeper Shown Illustrated)	4
3	59-9930	Decal-Danger	2	9	71-6940	Plate-Backing	6
4	3256-22	Washer-Flat	4	10	3296-56	Nut-Lock	16
5	321-9	Screw-HH	4	11	84-5970	Cover-Front, Aerator	1
6	67-5330	Decal-Aerator, Fairway	2				

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
23-7270	Nut-Wheel	4 21 10	71-6770	Housing-Bearing	1 28 1
47-2830	Screw	3 13 2	71-6780	Bearing	13 4 6
48-7830	Screw, HH	7 17 4	71-6780	Bearing	1 17 2
58-6520	Decal-Grease	7 6 1	71-6790	Seal-Oil	13 3 6
58-6520	Decal-Grease	9 6 6	71-6790	Seal-Oil	1 18 2
58-6520	Decal-Grease	3 9 3	71-6800	Shaft-Axle	1 25 1
58-6520	Decal-Grease	7 19 1	71-6810	Disc-Plastic	1 26 1
58-6520	Decal-Grease	4 30 1	71-6820	Cap-Retaining	1 11 1
59-3670	Tine-Tubular	12 5 36	71-6830	ASM-Hub Wheel	1 20 1
59-3690	Tine-Tubular	12 3 36	71-6840	Cap-Hub	4 16 2
59-9930	Decal-Danger	15 3 2	71-6850	Housing-Bearing	4 13 2
59-9930	Decal-Danger	7 20 2	71-6860	Shaft-Axle	4 9 2
62-4600	Tine-Tubular	10 3 36	71-6890	ASM-Hitch	1 4 1
65-3090	Decal	5 5 1	71-6900	Guide-Cover, Front	4 4 4
67-5330	Decal-Aerator, Fairway	15 6 2	71-6910	ASM-Extension, Stand	3 2 1
67-5360	Decal-Warning	5 6 1	71-6940	Plate-Backing	15 9 6
67-5360	Decal-Warning, Covers	7 16 1	71-6950	ASM-Stand, Hose	3 25 1
67-5370	Decal-Caution	3 16 2	71-6980	Hose-Hydraulic	3 32 1
67-7310	Decal-Toro	15 1 2	71-6990	Latch (Complete)	15 8 4
68-8060	ASM-Drive Line	7 1 1	71-6990	Latch-Draw, Flexible	4 5 4
70-9220	Bearing	9 33 6	71-6990	Latch-Draw, Flexible	7 26 4
70-9240	Bearing	3 5 2	71-7010	Coupler-Hitch	1 31 1
70-9240	Bearing	3 22 4	71-7020	ASM-Adapter, Hitch	1 2 1
70-9260	Block-Outer, 2-Tine	11 2 6	71-7060	Coupler-Quick	3 36 1
70-9270	Block-Inner, 2-Tine	11 4 6	71-7070	Ball-Hitch	1 32 1
70-9330	Bearing	9 46 12	71-7100	Pin-Roll	9 30 12
70-9380	Block-Outer, 6-Tine	10 2 6	71-7110	Stud-.50 x 130mm	11 5 24
70-9390	Block-Bridging, 6-Tine	10 1 6	71-7120	Stud-.50 x 150mm	10 8 24
70-9400	Block, Inner, 6-Tine	10 7 12	71-7120	Stud-.50 x 150mm	12 8 24
70-9410	Block-Bridging, 2-Tine	11 1 6	71-7130	Bushing	13 16 6
70-9420	Arm-Tine	9 10 6	71-7150	Plate-Upright, Gearbox	7 4 2
70-9430	Plate-2 Tine	13 * 3	71-7180	Cover-Dust	7 33 6
70-9440	Plate-6 Tine	13 7 3	71-7200	Gear-20 Tooth	5 2 1
70-9450	Spring-Compression	13 13 6	71-7210	Shaft-LH	13 21 3
70-9460	Nut-Castle	9 9 6	71-7220	Shaft-RH	13 9 3
70-9460	Nut-Castle	4 15 2	71-7230	Ring-Clamp, Top	13 19 6
70-9520	Washer-Flat	4 14 2	71-7240	Ring-Clamp, Bottom	13 12 6
70-9550	Bolt-Connecting	9 27 6	71-7250	ASM-Roller	13 24 3
70-9570	Spacer-Outer	9 7 6	71-7270	Plate-Backing	13 8 6
70-9580	Spacer-Inner	9 2 6	71-7280	Shaft	13 23 3
70-9670	Cover-Gearbox	5 7 1	71-7290	Nut-Thin	13 2 6
70-9680	Seal-Oil	5 28 1	71-7300	Gear-30 Tooth	5 1 1
70-9690	Shaft-Intermediate	5 4 1	71-7310	Gear-31 Tooth	5 * 1
70-9710	Nut-Hex	5 18 2	71-7320	Gear-32 Tooth	5 * 1
70-9720	Nut-Jam	5 17 2	71-7330	Gear-33 Tooth	5 * 1
71-0940	Tine-Tubular	11 3 12	71-7340	Gear-34 Tooth	5 * 1
71-6490	Seal-Oil	5 19 2	71-7350	Gear-35 Tooth	5 * 2
71-6510	ASM-Lift Unit	3 10 1	71-7360	Gear-36 Tooth	5 * 1
71-6520	Pin-Location, Bottom	4 24 2	71-7370	Gear-37 Tooth	5 * 1
71-6530	Pin-Mount, Lift Arm	7 35 4	71-7380	Gear-38 Tooth	5 * 1
71-6540	Pin-Mount, Front	4 25 1	71-7390	Gear-39 Tooth	5 * 1
71-6550	Pin-Mount, Rear	4 27 1	71-7400	Gear-40 Tooth	5 * 1
71-6560	Cylinder-Hydraulic	4 26 1	71-7450	Curtain-Lower	7 32 2
71-6570	Shaft-Corer	5 3 1	71-7460	Strap-Securing, Curtain	7 31 2
71-6590	Lift Arm-Top	3 6 2	71-7470	Adjuster-LH	7 23 1
71-6600	Lift Arm-Bottom, LH	3 12 1	71-7480	Adjuster-RH	7 * 1
71-6610	Gasket-Cover	5 15 1	71-7490	ASM-Hose	4 28 1
71-6620	Pin-Location, Top	4 1 2	71-7510	Pad-Absorber, Shock	3 18 2
71-6630	Bearing	8 4 4	71-7530	Grommet	3 14 2
71-6630	Bearing	4 11 4	72-3800	Breather	5 8 1
71-6640	Kit-Seal	6 * 1	72-3810	Bearing	9 3 12
71-6690	Bearing	5 20 2	72-3820	Bearing	5 27 2
71-6700	Bearing	5 11 2	72-3830	Seal-Oil	13 5 6
71-6710	Seal-Oil	4 10 2	72-3840	Seal-Oil	9 1 12
71-6710	Seal-Oil	1 29 1	72-7960	Indicator-Oil Level	7 15 1
71-6720	Bearing	1 27 2	72-7970	Spacer-Lift Arm, Top	3 7 2
71-6730	ASM-Caster	1 24 1	72-7980	Strap	7 13 6
71-6750	Spacer-Outer	1 19 2	72-7990	Kit-Cross & Bearing	7 40 1
71-6760	Support-Rim	1 14 1	72-8010	Nut-Hex.	1 34 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
72-8020	Block-Clamp, Top	13 10 6	92-3002	Shaft-Idler	9 49 6
72-8060	Bushing-Spacer, Long	9 19 6	92-3003	Cap-End	9 38 6
72-8070	Bearing	9 21 12	92-3004	ASM-Coring Frame	7 21 1
72-8090	Bushing-Spacer, Short	9 26 6	92-3005	Stud	9 36 150
72-8100	Crank-Bottom	9 42 6	92-3006	Nut-Lock	9 52 150
74-0720	Tube-Manual	3 39 1	92-3008	Cap-Bearing	5 21 1
74-2960	Ring-Retaining	8 2 1	92-3009	Cap-Bearing	5 29 1
74-2990	Shim Kit	8 3 4	92-3010	Housing-Bearing	5 14 1
74-3110	Lift Arm-Bottom, RH	3 * 1	92-3011	Housing-Bearing	5 13 1
74-3200	Seal-Oil	8 1 3	92-3012	O-Ring	9 44 12
76-2920	Stand-Transport	3 15 2	92-3013	O-Ring	5 12 4
76-3630	Gear-Shaft, Driver	9 31 3	92-3013	O-Ring	9 32 6
76-3640	Gear-Idler	9 41 6	92-7900	Tine-Open Center	10 6 36
76-3650	Gear-Crankshaft, Top	9 50 3	92-7930	Outer Guard	7 43 1
76-3660	Gear-Crankshaft, Bottom	9 47 3	92-7931	Inner Guard	7 42 1
76-3710	Coupling-Flange	14 5 2	92-7936	Decal-Outer	2 27 1
76-3760	Plate-Mounting, Gearbox	7 3 1	92-7937	Decal-Inner	2 26 1
77-3040	Rod-Connecting	9 22 6	92-7941	Tine-Open Center	10 5 36
77-3050	Gearbox-Rear, Bevel	7 2 1	92-9941	Lynch Pin & Tie	3 44 1
77-3060	Screen-Outer, LH	7 10 1	92-9948	Crank-Top	9 28 6
77-3070	Screen-Outer, RH	7 7 1	93-4696	Pin-Snapper	3 23 1
77-3080	Screen-Inner, LH	7 9 1	93-7734	Reinforced Collar	2 28 1
77-3090	Screen-Inner, RH	7 8 1	93-8770	Nut	6 2 1
77-4430	Spacer	8 5 1	94-1762	Rest-Drive Shaft	3 42 1
77-4440	Shaft-Input	8 14 1	94-1775	Kit-Clutch, Cams & Springs	2 ** 4
77-4450	Gear-18 Tooth	8 13 2	94-1778	ASM-Frame, Carrier	3 20 1
77-4460	Ring-Retaining	8 12 1	94-1779	ASM-Gear Case.	5 30 1
77-4470	Cover	8 11 1	94-3419	Tine-Tubular	12 4 36
77-4480	Shaft	8 15 1	94-5309	Shaft-Tractor	5 26 1
77-4490	Plug-Oil Level/Filler	8 9 1	94-9144	Drive Line (Complete)	2 * 1
77-4500	Bolt-HSH	8 10 4	94-9145	Clutch-Radial Pin	2 12 1
77-4520	Screw-HH	4 12 10	94-9146	Tube-Shield, Outer	2 8 1
77-4560	Bearing	9 40 6	95-3103	Block-Outer, 6-Tine	12 2 6
77-4660	Kit-Flange	2 * 1	95-3104	Block-Bridging, 6-Tine	12 1 6
77-4670	Kit-Collar	2 * 1	95-3105	Block-Inner, 6-Tine	12 7 12
77-4720	Kit-Cross & Bearing	2 18 1	95-3122	Shield-Drive Line	3 31 1
77-4730	Cone-Shield	2 19 1	98-6872	Shaft-Splined	14 1 1
77-4740	Ring-Bearing	2 7 2	98-6876	Coupling-Splined	14 7 2
77-4760	Chain-Safety	2 11 2	98-6877	Tube-Shield	14 8 1
77-4790	Bearing-Support	2 9 1	99-5398	Seal-Oil	9 45 12
77-5320	Tine-Spiker	12 6 36	99-6873	Shaft-Splined	14 8 1
82-2890	Shield-Rubber	13 14 6	99-6874	Shaft-Splined	14 9 1
82-2900	Gear-35 Tooth	5 25 1	99-6875	Shaft-Splined	14 10 1
82-3190	Ring-Retaining	9 4 12	99-6878	Housing-Shaft, Drive, Open	9 35 4
82-3200	Timing Bar	9 53 1	99-6879	Housing-Closed	9 37 2
82-3220	Decal	9 54 1	99-6880	Plug-Drive Gear	9 51 2
82-9400	Decal-Danger	3 35 1	99-6882	Seal-Oil	9 34 4
84-5970	Cover-Front, Aerator	15 11 1	217-60	Rim	1 16 1
84-5980	Cover-Coring Head	15 2 1	217-117	Rim	4 20 2
84-6280	ASM-Yoke	2 29 1	231-101	Tire	4 19 2
84-6290	Fitting-Grease	2 24 1	231-119	Tire	1 15 1
84-6300	Yoke-Double	2 4 1	232-27	Stem-Valve	4 22 2
84-6310	Kit-Cross & Bearing	2 5 2	232-35	Stem-Valve	1 21 1
84-6330	Tube-Shield, Inner	2 10 1	237-168	O-Ring	9 39 12
84-6340	ASM-Bearing & Cone	2 25 1	2412-133	R-Clamp	3 38 2
84-6350	Shield-3 Rib	2 6 1	281-1	Plug-Pipe	8 7 1
84-6360	Screw	2 23 8	283-71	Pin-Lynch	7 36 4
84-6370	Fitting-Grease	2 21 1	283-72	Pin-Lynch	5 31 2
84-6380	Inner Shaft & Yoke	2 22 1	285-21	Plug-Pipe	7 22 1
84-6390	Outer Shaft & Yoke	2 20 1	285-21	Plug-Pipe	5 24 1
86-9720	Tine-Tubular	10 4 36	302-55	Fitting-Grease	9 5 6
92-1580	Kit-Nylon Repair	7 41 1	302-55	Fitting-Grease	14 6 4
92-1581	Decal-Safety	7 37 1	302-55	Fitting-Grease	3 8 3
92-1582	Decal-Safety	7 38 1	302-55	Fitting-Grease	4 17 2
92-2410	Barrel	6 1 1	302-55	Fitting-Grease	3 21 2
92-2411	Cap-End	6 7 1	302-55	Fitting-Grease	7 39 6
92-2412	Piston	6 3 1	302-61	Fitting-Grease	13 1 6
92-2413	Rod	6 9 1	302-61	Fitting-Grease	3 11 2
92-3000	Flange-Crankshaft	9 43 12	302-61	Fitting-Grease	1 13 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-2	Screw-HH	7 28 8	3256-2	Washer-Flat	7 30 10
321-4	Screw-HH	15 7 12	3256-2	Washer-Flat	3 46 1
321-9	Screw-HH	15 5 4	3256-22	Washer-Flat	15 4 4
322-3	Screw-HH	7 12 16	3256-62	Washer-Flat	9 23 6
322-5	Screw-HH	5 9 8	3256-69	Washer-Flat	7 24 4
322-5	Screw-HH	7 29 10	3256-74	Washer-Flat	3 37 2
322-5	Screw-HH	3 45 1	3272-23	Pin-Cotter	4 29 2
322-6	Screw-HH	3 24 4	3274-4	Screw-HSH	9 29 72
323-6	Screw-HH	4 3 4	3274-89	Screw-HSH	14 3 12
323-6	Screw-HH	3 33 3	3289-17	Screw-HSFH	13 6 12
323-7	Screw-HH	13 18 6	3296-23	Nut-Lock	1 1 6
323-8	Screw-HH	5 16 20	3296-23	Nut-Lock	7 5 2
323-14	Screw-HH	4 23 4	3296-23	Nut-Lock	9 12 24
323-15	Screw-HH	3 19 2	3296-23	Nut-Lock	3 34 4
323-35	Screw-HH	13 15 6	3296-23	Nut-Lock	3 41 1
325-5	Screw-HH	1 7 4	3296-29	Nut-Lock	3 28 4
325-6	Screw-HH	1 10 1	3296-29	Nut-Lock	3 43 1
325-8	Screw-HH	1 3 4	3296-39	Nut-Lock	3 1 5
325-8	Screw-HH	7 14 2	3296-39	Nut-Lock	13 20 12
325-12	Screw-HH	3 40 1	3296-39	Nut-Lock	7 34 6
325-17	Screw-HH	1 30 2	3296-56	Nut-Lock	15 10 16
327-4	Screw-HH	7 25 4	3296-61	Nut-Lock	4 8 8
327-14	Screw-HH	1 5 2	3296-70	Nut-Hex	3 3 2
327-14	Screw-HH	4 7 8	3296-70	Nut-Hex	1 22 1
3212-5	Screw-HH	1 12 4	3296-70	Nut-Lock	9 11 6
3212-6	Screw-HH	13 11 12	3296-70	Nut-Lock	9 24 6
3217-11	Nut-Hex.	1 6 2	32108-20	Screw-Countersink	3 17 4
3234-13	Screw-HFH	4 6 8	32120-8	Ring-Retaining	3 4 4
3253-3	Washer-Lock	7 27 8	32120-31	Ring-Snap	8 6 3
3253-4	Washer-Lock	5 10 8	32120-62	Ring-Retaining	9 48 12
3253-4	Washer-Lock	7 11 16	32121-3	Pin-Roll	1 9 1
3253-7	Washer-Lock	14 2 12	32121-15	Pin-Roll	13 17 6
3253-7	Washer-Lock	1 8 4	32121-34	Pin-Roll	9 8 6
3253-7	Washer-Lock	7 18 4	32121-34	Pin-Roll	4 18 2
3253-11	Washer-Lock	1 33 1	32151-88	Ring-Retaining	9 20 24
3253-21	Washer-Lock	4 2 4	354-33	ASM-Fitting, Bulkhead	3 27 1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Fairway Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Fairway Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Fairway Aerator.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hitch & Front Wheel Assembly	1	Corer Gear Case & Stomper Arm Assembly	9
Drive Line Assembly	2	6-Tine Blocks & .75 Diameter Tine Selection	10
Chassis Assembly	3	2-Tine Blocks & Tine Selection	11
Rear Wheel Assembly	4	6-Tine Blocks & Tine Selection	12
Front Gear Box Assembly	5	Roller & Finger Plate Assembly	13
Hydraulic Cylinder Assembly No. 71-6560	6	Drive Line Assembly	14
Corer & Shield Assembly	7	Aerator & Coring Head Covers	15
Gear Box Assembly No. 77-3050	8	Numerical Parts Index	16-18

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.