



Count on it.

Parts Catalog

Greensmaster® Flex™ 1820 **Traction Unit**

Model No. 04045—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Handle Mount Assembly	4
Grass Basket Assembly	5
Basket Assembly No. 130-6750	6
Left Side Transmission Assembly	7
Right Side Transmission Assembly	8
Clutch Assembly	9
Clutch Assembly No. 133-2315	10
Differential and Traction Drum Assembly	12
Differential Assembly No. 115-6711	13
Drum Drive Assembly	14
Engine Assembly	15
Shift Lever Assembly	16
Handle Assembly	17
Throttle and Console Assembly	18
Crankcase Assembly	19
Crankshaft and Piston Assembly	20
Intake and Exhaust Assembly	21
Air Cleaner Assembly	23
Governor Assembly	24
Recoil and Shroud Assembly	25
Recoil Assembly	26
Fuel Tank Assembly	27
Carburetor Assembly	28
Flywheel and Coil Assembly	29
Gear Reduction Assembly	30
Attachments and Accessories	31

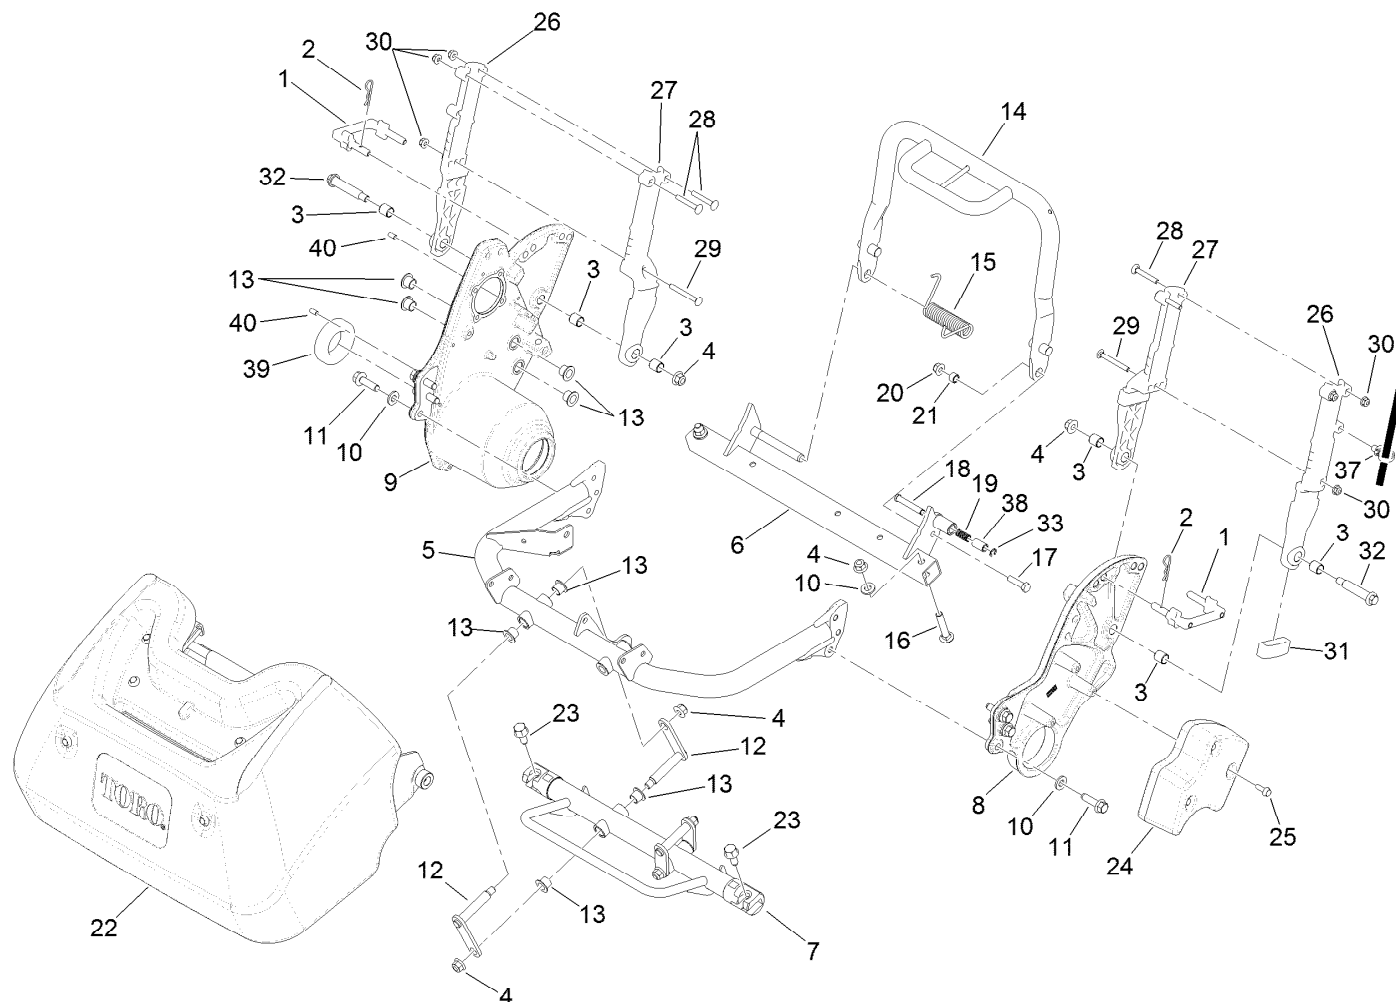


Frame and Handle Mount Assembly

Ref.	Part Number	Qty.	Description
1	120-9241	2	Retainer-Handle
2	120-9717	2	Pin-Hair
3	115-7295	6	Bushing-Straight
4	119-4042	8	Nut-HF, NI
5	132-6977-01	1	Frame
6	115-7179-01	1	Frame-Rear
7	132-6974-01	1	Frame-Roll
8	115-7160	1	Plate-Side, LH
9	115-7154	1	Housing-Drive, Drum
10	115-7293	8	Washer-Hardened
11	115-7024	6	Screw-HHF
12	117-1396	4	Link
13	125-5239	12	Bushing-Flange
14	121-4623-03	1	Kickstand
15	115-7258	1	Spring-Torsion, RH
16	120-9715	2	Screw-CARR
17	120-9696	1	Screw-HH
18	120-9739	1	Pin-Lock
19	107-8885	1	Spring-Compression


Ref.	Part Number	Qty.	Description
20	119-4041	1	Nut-HF
21	120-9697	1	Spacer
22		1	Grass Basket ASM ●
23	131-6211	2	Screw-HH
24	115-7234-03	1	Weight-Counter
25	131-6150	3	Screw-HWHTF
26	125-3522	2	Clamp-Handle
27	125-3524	2	Clamp-Handle, Offset
28	120-9698	4	Bolt-CARR
29	120-9699	2	Screw-CARR
30	119-4040	6	Nut-Flange, NI
31	125-3525	4	Bumper-Handle
32	127-1510	2	Screw-Shoulder
33	701197	1	E-Ring
37	32180-030	1	Clip-Tie
38	120-9740	1	Spacer
39	115-6860	1	Bearing-Ball, Stainless
40	95-0715	2	Pin-Dowel

● Not serviced separately

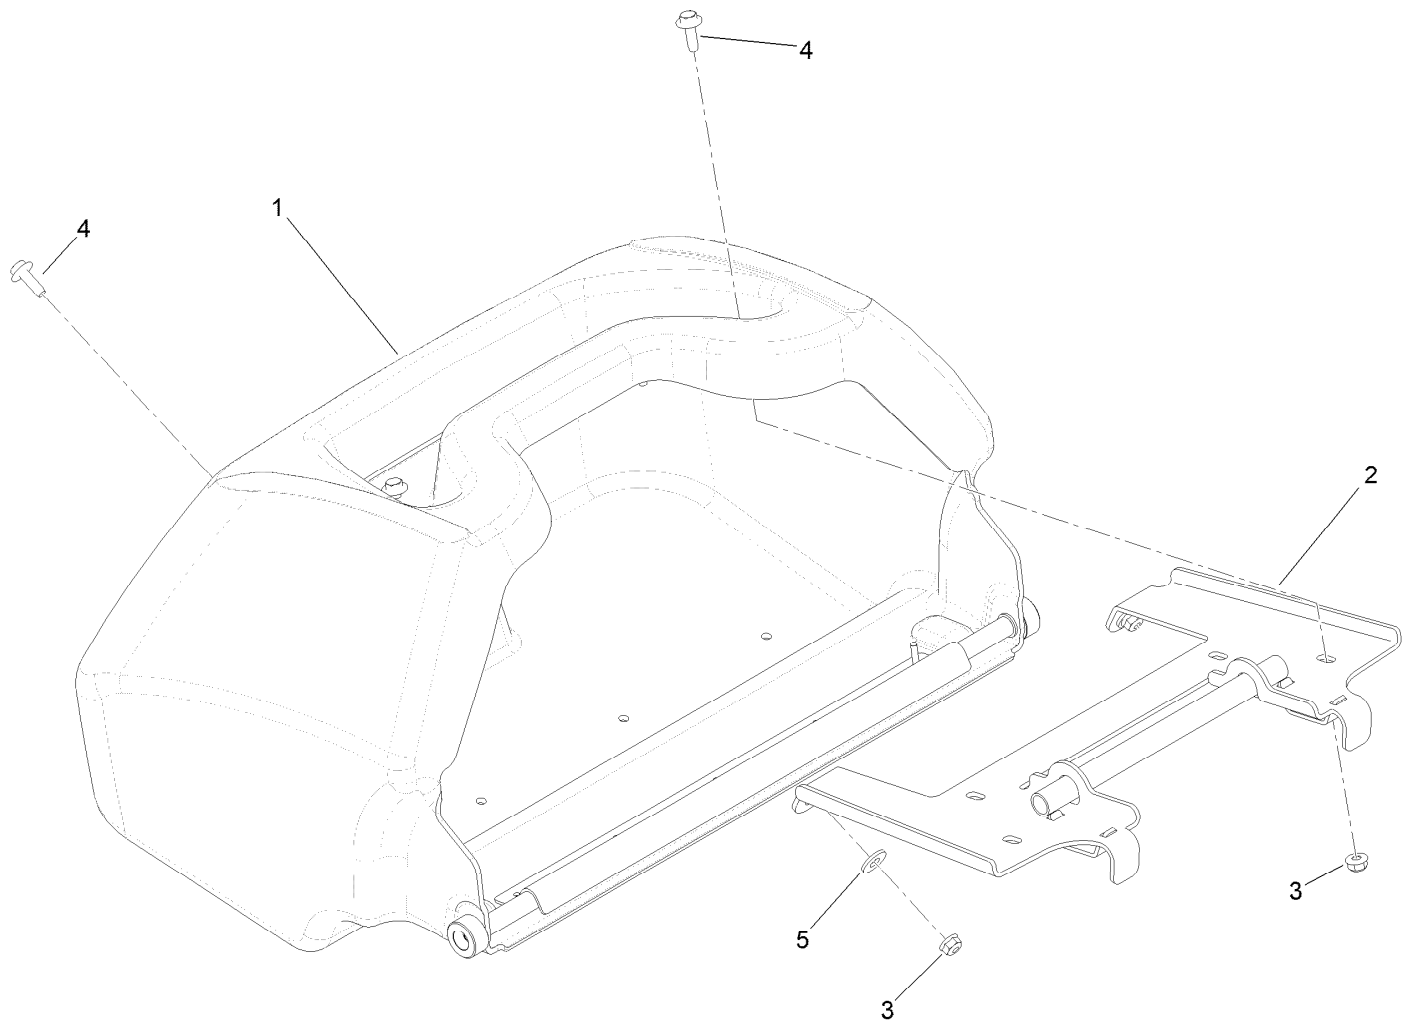


Grass Basket Assembly

Ref.	Part Number	Qty.	Description
1	130-6750	1	Basket ASM
2	125-3546-03	1	Bracket-Basket
3	119-4040	6	Nut-Flange, NI
4	119-4012	6	Screw-HWHTF
5	120-9646	2	Washer-Flat

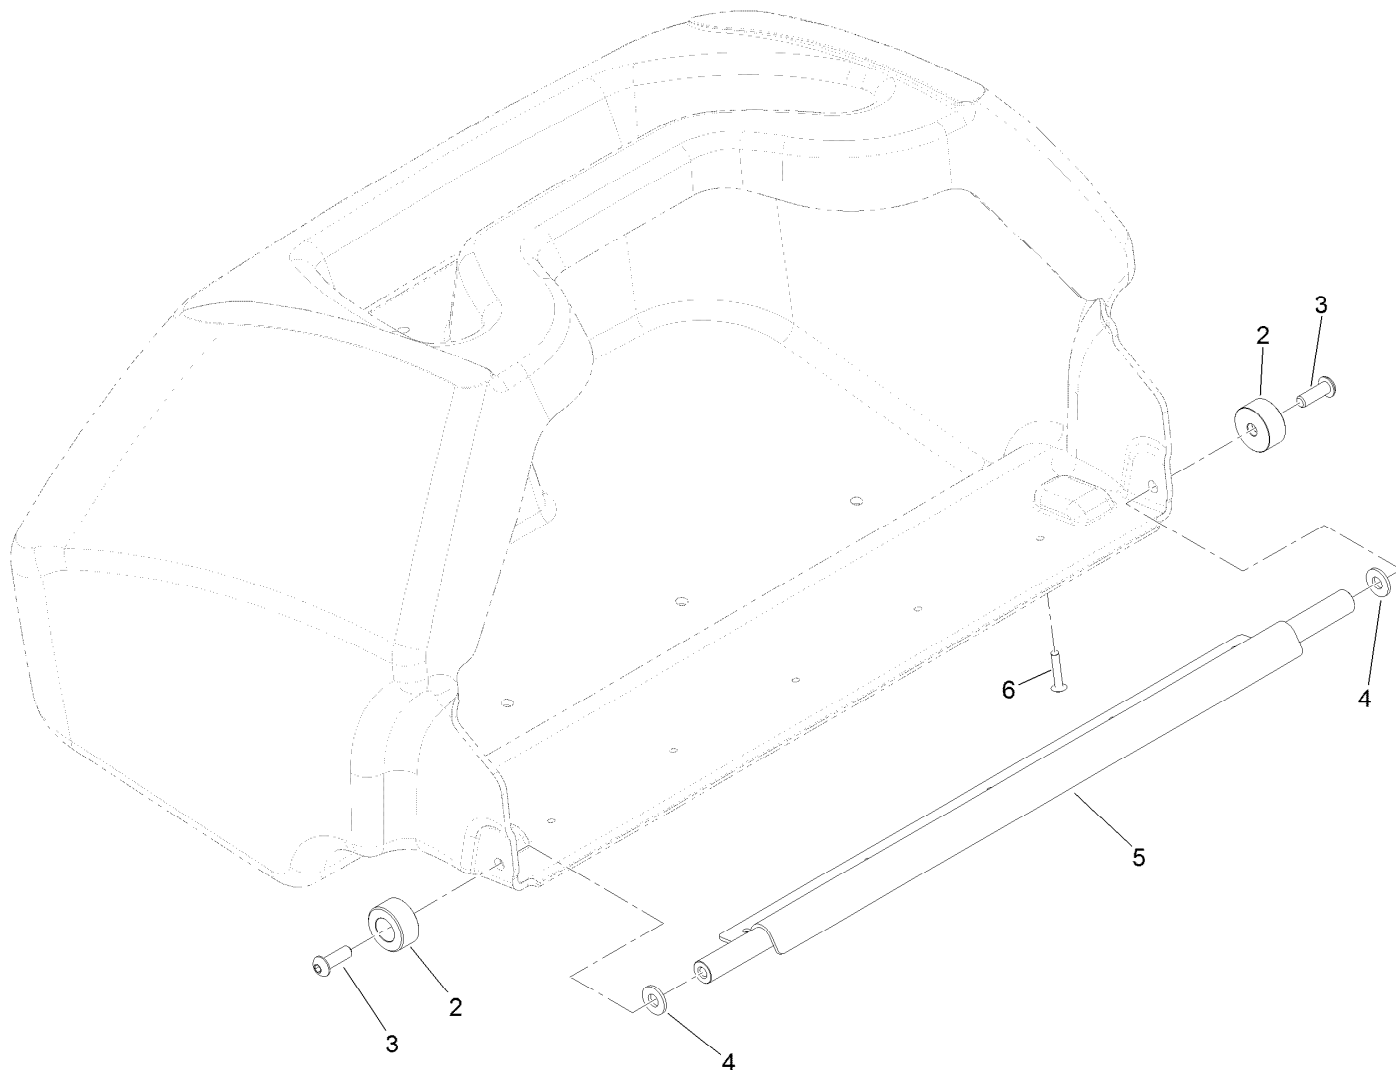

Basket Assembly No. 130-6750


Ref.	Part Number	Qty.	Description
2	121-4730	2	Bumper-Basket
3	3274-69	2	Screw-HSBH
4	120-9679	2	Washer-Flat
5	130-6752	1	Channel
6	3290-382	5	Rivet-Pop

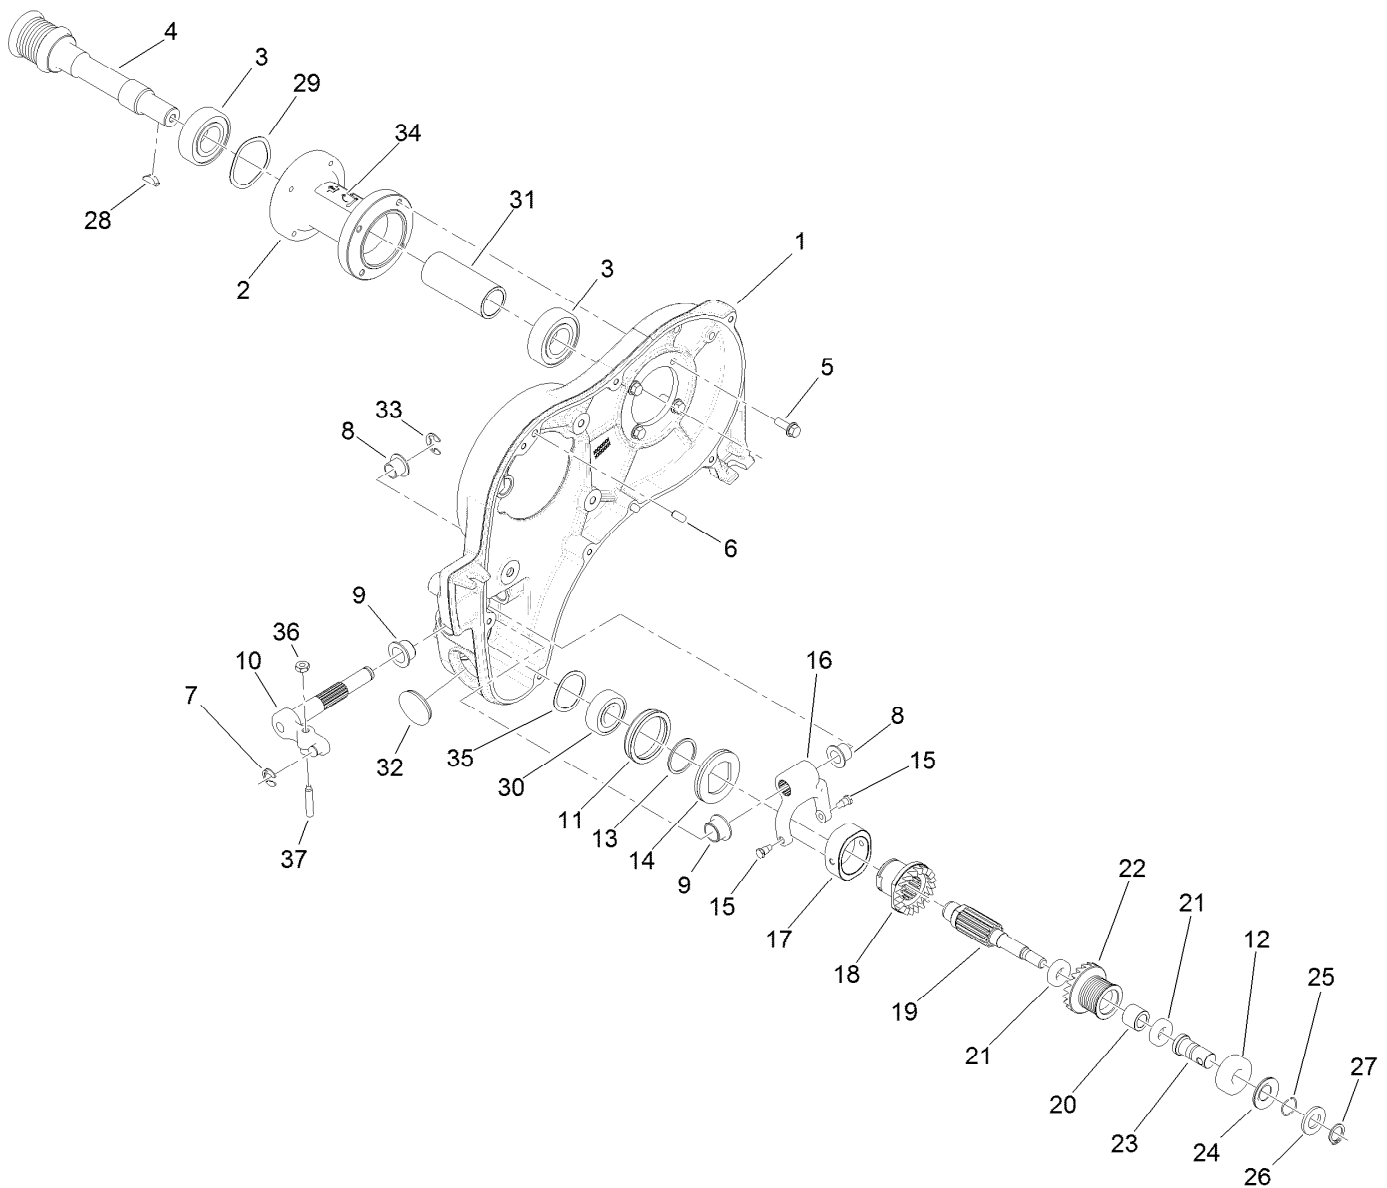

Left Side Transmission Assembly

Ref.	Part Number	Qty.	Description
1	131-3079	1	Housing-Transmission
2	120-9749	1	Housing-Extension
3	251-82	2	Bearing-Ball
4	115-7189	1	Pulley-Driven
5	119-1138	4	Screw-HWH
6	95-0715	2	Pin-Dowel
7	32151-47	1	Ring-Retaining
8	125-5239	2	Bushing-Flange
9	108-2973	2	Bushing-Flange
10	115-7126	1	Lever-Clutch, Reel
11	115-7131	1	Ring-Brake, Reel
12	115-6869	1	Bearing-Ball, Stainless
13	115-7243	1	Ring-Retaining, EXT
14	115-7130	1	Disc-Brake, Reel
15	115-7123	2	Pin-Pivot, Clutch
16	115-7124	1	Fork-Clutch, Reel
17	115-7125	1	Hub-Clutch, Reel
18	131-3158	1	Clutch-Jaw, Slider
19	115-7138	1	Shaft-Clutch


Ref.	Part Number	Qty.	Description
20	115-7222	1	Spacer
21	115-6870	2	Bearing-Ball, Sealed
22	131-3157	1	Clutch-Jaw, Driver
23	131-3117	1	Collar-Bearing
24	115-6923	1	Shield-Bearing, Flocked
25	115-7143	1	Spring-Wave
26	115-7144	1	Washer-Flat
27	115-6755	1	Ring-Retaining
28	3257-30	1	Key-Woodruff
29	3290-485	1	Washer-Wave
30	38-7820	1	Bearing-Ball
31	115-7251	1	Spacer
32	115-7288	1	Plug
33	32120-47	1	Ring-Retaining, External
34	120-9571	1	Decal-Release, Traction
35	131-3170	1	Spring-Wave
36	120-9695	1	Nut-Jam
37	1239	1	Setscrew

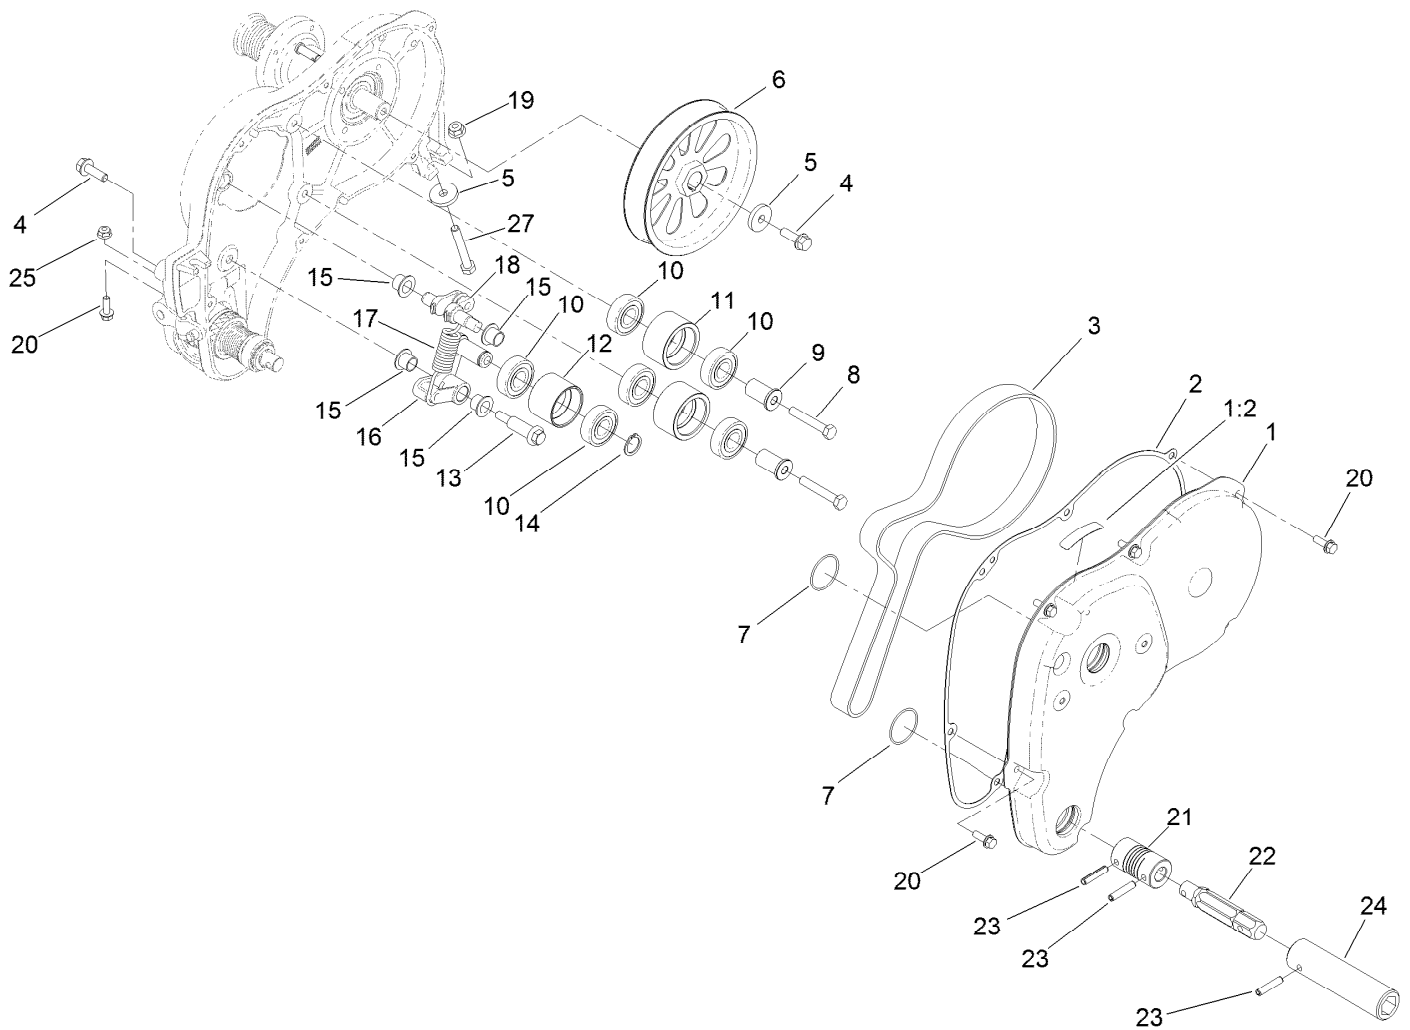

Right Side Transmission Assembly

Ref.	Part Number	Qty.	Description
1	132-9589	1	Transmission Cover ASM
1:2	120-9570	1	Decal-Warning
2	115-7140	1	Gasket-Housing, Main
3	115-6743	1	Belt-Drive, Main
4	115-5142	2	Screw-HHF
5	115-7292	2	Washer-Hardened
6	115-7285	1	Pulley-Driven
7	107-9455	2	O-Ring
8	120-9686	2	Screw-HH
9	115-7129	2	Bushing-Pulley, Idler
10	38-7820	6	Bearing-Ball
11	115-6873	2	Pulley-Idler
12	115-7133	1	Pulley-Idler
13	127-1509	1	Screw-Shoulder


Ref.	Part Number	Qty.	Description
14	32151-12	1	Ring-Retaining
15	125-5239	4	Bushing-Flange
16	115-6847	1	Idler-Drive, Main
17	133-8757	1	Spring-Extension
18	115-7128	1	Lever-Spring
19	119-4041	1	Nut-HF
20	119-1138	8	Screw-HWH
21	133-2341	1	Coupling-Helical
22	132-9511	1	Shaft-Hex
23	125-3542	3	Pin-Spring
24	110-2390	1	Tube-Hex
25	119-4040	1	Nut-Flange, NI
27	120-9738	1	Screw-HH

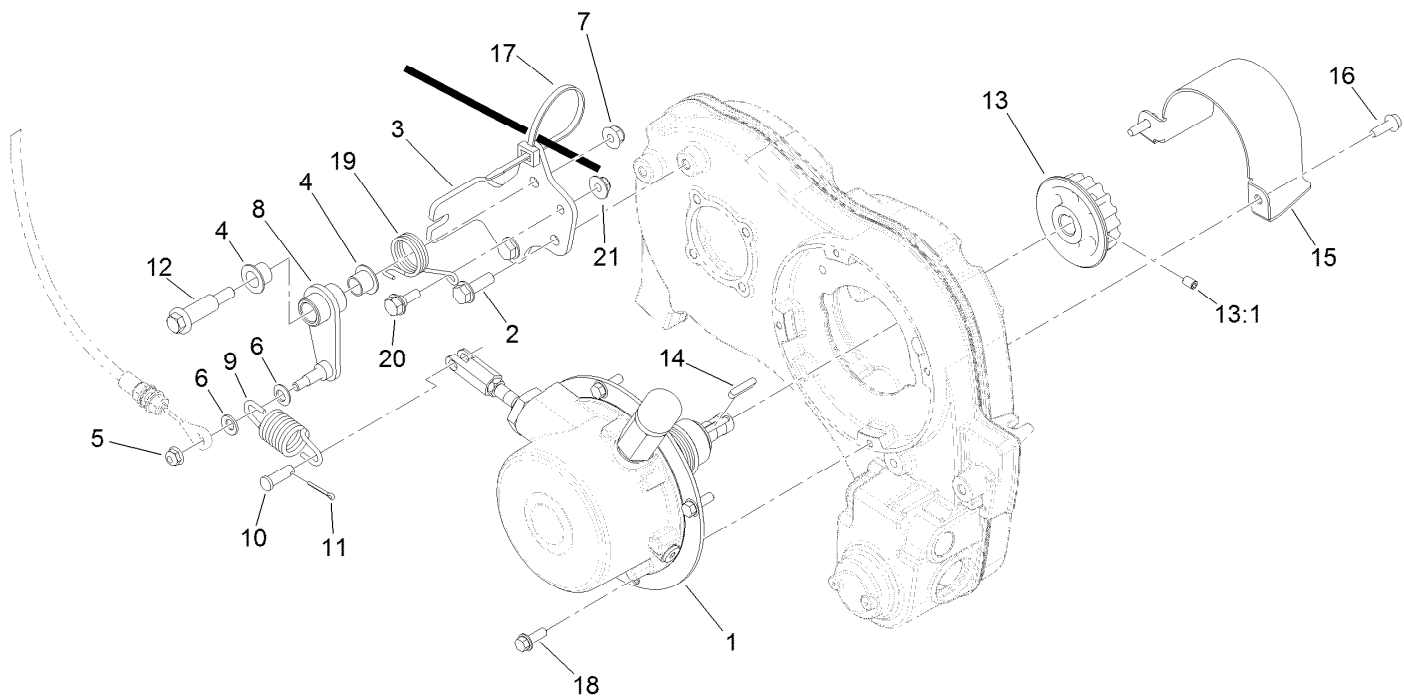

Clutch Assembly

Ref.	Part Number	Qty.	Description
1	133-2315	1	Clutch ASM
2	115-5142	2	Screw-HHF
3	133-2326	1	Bracket-Cable, Traction
4	125-5239	2	Bushing-Flange
5	104-7201	2	Nut-HF
6	3290-475	2	Washer-Belleville
7	104-8300	1	Nut-HF, NI
8	131-3107	1	Lever-Clutch
9	131-3113	1	Spring-Extention
10	1-808280	1	Pin-Clevis
11	3272-6	1	Pin-Cotter

Ref.	Part Number	Qty.	Description
12	127-1509	1	Screw-Shoulder
13	115-7276	1	Endpiece-Coupler, 15Mm
13:1	3245-41	2	Screw-HSH
14	88-7150	1	Key-Square
15	120-9552-03	1	Guard-Coupler
16	131-6150	2	Screw-HWHTF
17	3290-378	1	Tie-Cable
18	119-1138	4	Screw-HWH
19	132-9593	1	Spring-Torsion
20	120-7024	1	Screw-Shoulder, HHF
21	114-3778	1	Nut-HF

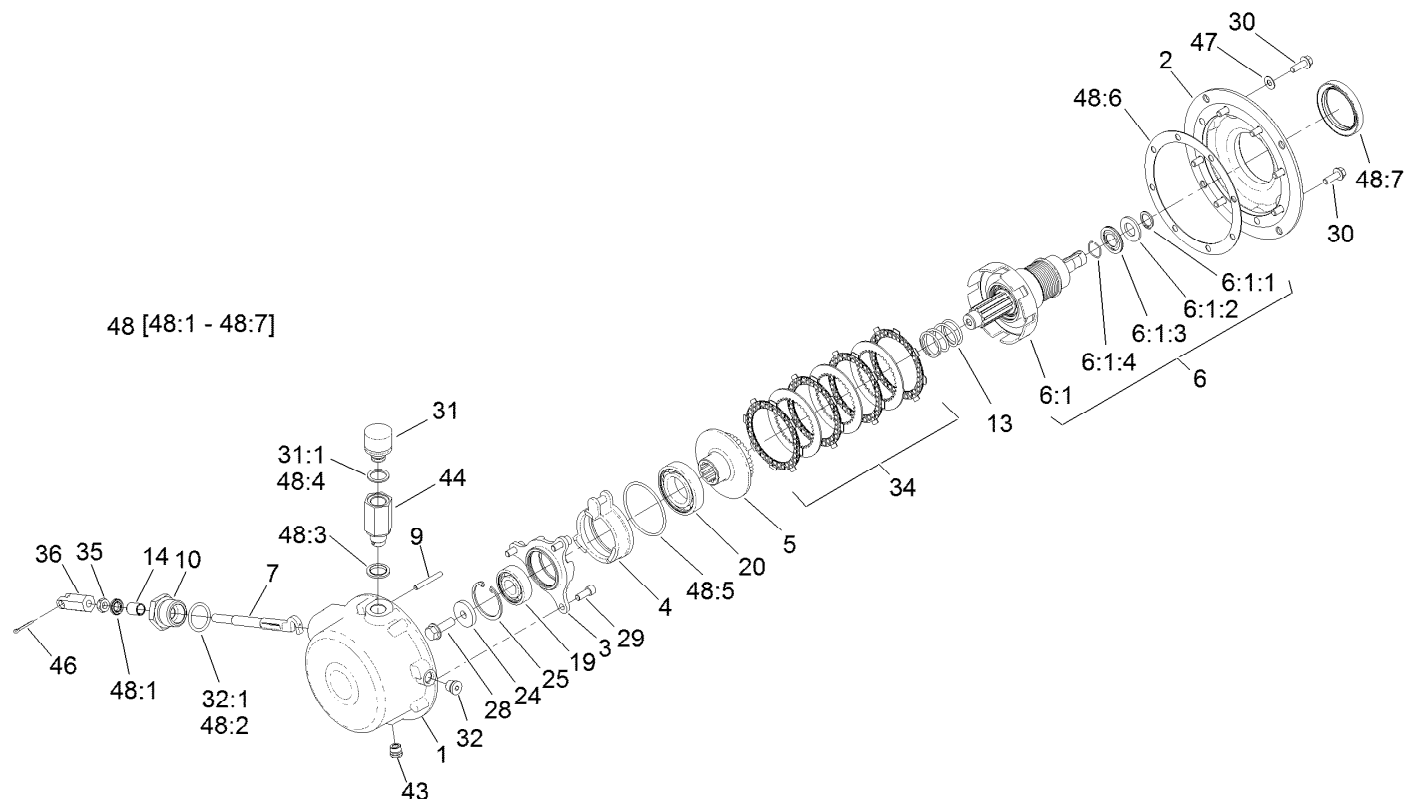


Clutch Assembly No. 133-2315

Ref.	Part Number	Qty.	Description
1	131-3061	1	Cover-Clutch
2	133-8781	1	Cover Service ASM
3	131-3040	1	Cam-Clutch
4	131-3050	1	Actuator-Clutch
5	131-3052	1	Plate-Press
6	133-8899	1	Shaft Service ASM
6:1		1	Shaft ASM ■
6:1:1	115-6755	1	Ring-Retaining
6:1:2	115-7144	1	Washer-Flat
6:1:3	115-6923	1	Shield-Bearing, Flocked
6:1:4	115-7143	1	Spring-Wave
7	131-3051	1	Pin-Actuator
9	131-3036	1	Pin-Locator
10	130-9473	1	Plug-Actuator
13	131-3148	1	Spring-Compression
14	131-3038	1	Bushing-Sleeve
19	131-3037	1	Bearing-Ball
20	130-9464	1	Bearing-Ball

Ref.	Part Number	Qty.	Description
24	115-7292	1	Washer-Hardened
25	107-3530	1	Ring-Retaining
28	115-5142	1	Screw-HHF
29	3274-15	3	Screw-HSH
30	115-5103	8	Screw-HHF
31	133-2359	1	Breather-Vent, Nylon
31:1	133-5659	1	Washer-Rubber
32	353-990	1	Plug ASM
32:1	237-78	1	O-Ring
34	132-5484	1	Clutch Pack Kit
35	AU425-155	1	Nut-Jam
36	131-3172	1	Anchor-Adjust, Spring
43	132-5431	1	Plug-Zero Leak , W/Magnet
44	133-5658	1	Adapter-Vent
46	3272-6	1	Pin-Cotter
47	136-7288	1	Washer-Nylon
48	133-8898	1	MVP Kit-Seal, Clutch
48:1	131-3126	1	Seal-Oil

● Not illustrated

■ Not serviced separately

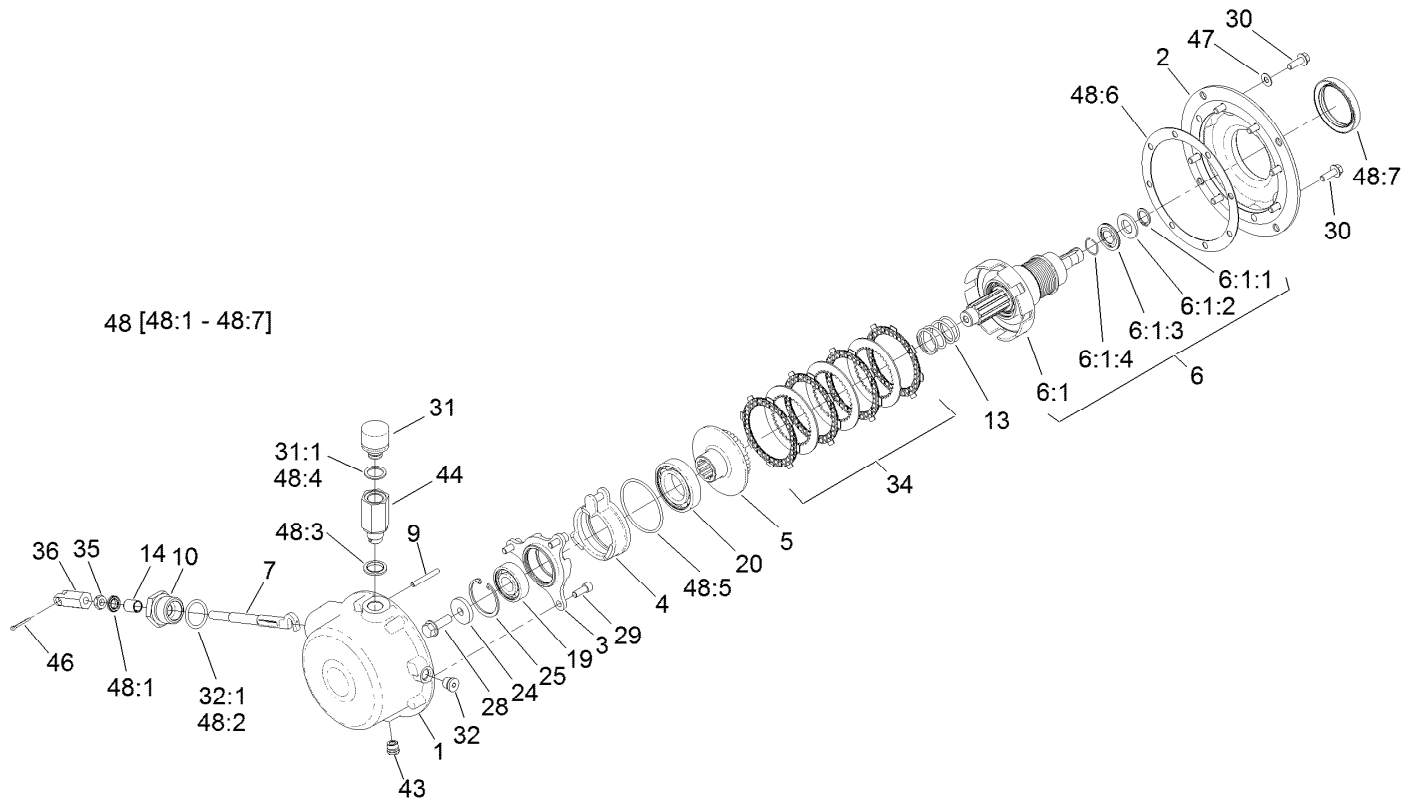


Clutch Assembly No. 133-2315 (continued)

Ref.	Part Number	Qty.	Description
48:2	237-81	1	O-Ring
48:3	10-06-031	1	Seal-Dowty
48:4	133-5659	1	Washer-Rubber
48:5	103-5895	1	O-Ring

Ref.	Part Number	Qty.	Description
48:6	130-9477	1	Gasket
48:7	133-8905	1	Seal-Oil
99	136-7293	1	Sealant-Thread, 6MI Bottle ●

● Not illustrated


■ Not serviced separately

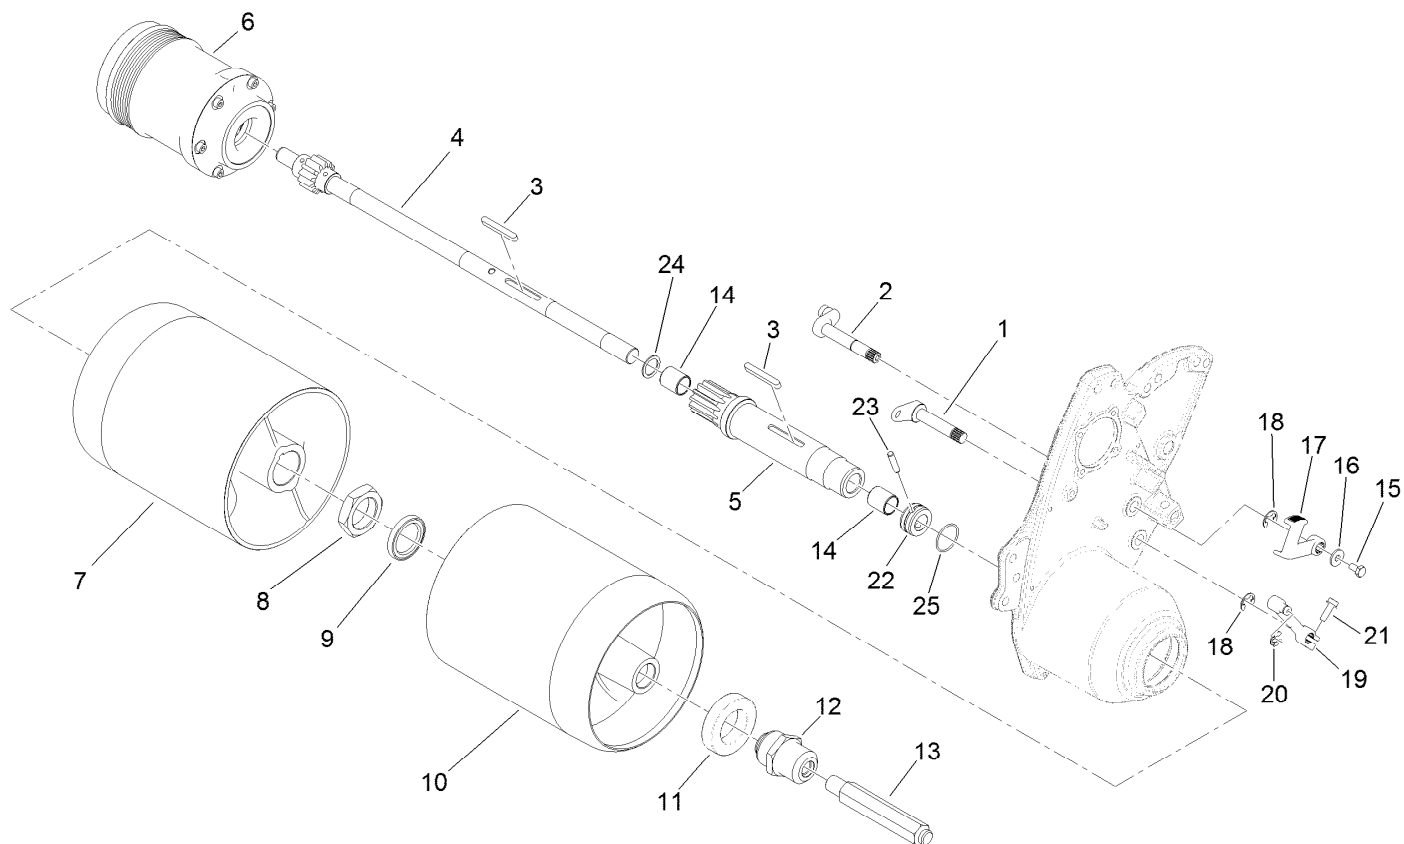

Differential and Traction Drum Assembly


Ref.	Part Number	Qty.	Description
1	115-7119	1	Lever-Brake
2	115-7118	1	Lever-Traction
3	115-6769	2	Key-Sq
4	115-7182	1	Shaft-Drum
5	115-7181	1	Shaft-Drive, Drum
6	115-6711	1	Differential ASM
7	115-7173	1	Drum-Traction, RH
8	115-7025	1	Nut-Jam
9	253-134	1	Seal-Grease
10	115-7174	1	Drum-Traction, LH
11	115-6860	1	Bearing-Ball, Stainless
12	115-6784	1	Nut-Bearing
13	115-6785	1	Shaft-Hex, LH

Ref.	Part Number	Qty.	Description
14	115-7019	2	Bushing-Straight
15	120-9688	1	Screw-HH
16	120-9691	1	Washer-Flat
17	115-7121	1	Lever-Traction, Engage
18	32120-47	2	Ring-Retaining, External
19	115-7120	1	Lever-Brake, Cable
20	32151-47	1	Ring-Retaining
21	131-6150	1	Screw-HWHTF
22	115-7023	1	Collar-Lock
23	125-3529	1	Pin-Shear
24	115-7210	1	Washer-Thrust
25	340-64	1	O-Ring

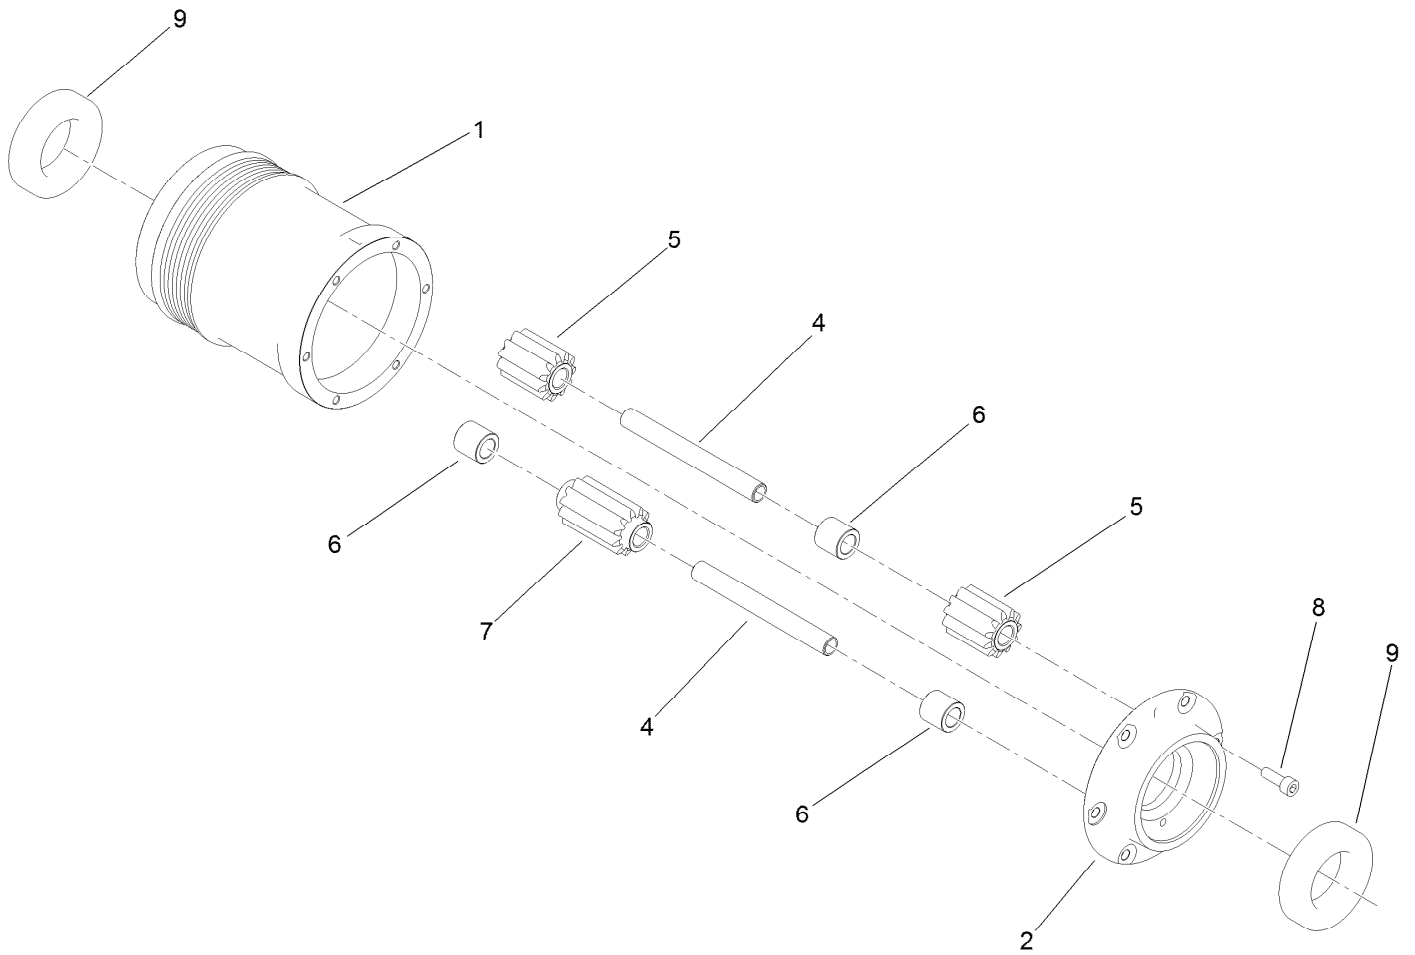

Differential Assembly No. 115-6711


Ref.	Part Number	Qty.	Description
1	115-7017	1	Housing-Differential
2	115-6865	1	Cover-Differential
4	115-6866	6	Pin-Differential
5	115-6715	6	Gear-Spur, Dual
6	115-6862	9	Spacer-Differential, Natural
7	115-6716	3	Gear-Spur
8	3274-101	6	Screw-HSH
9	251-310	2	Bearing-Ball

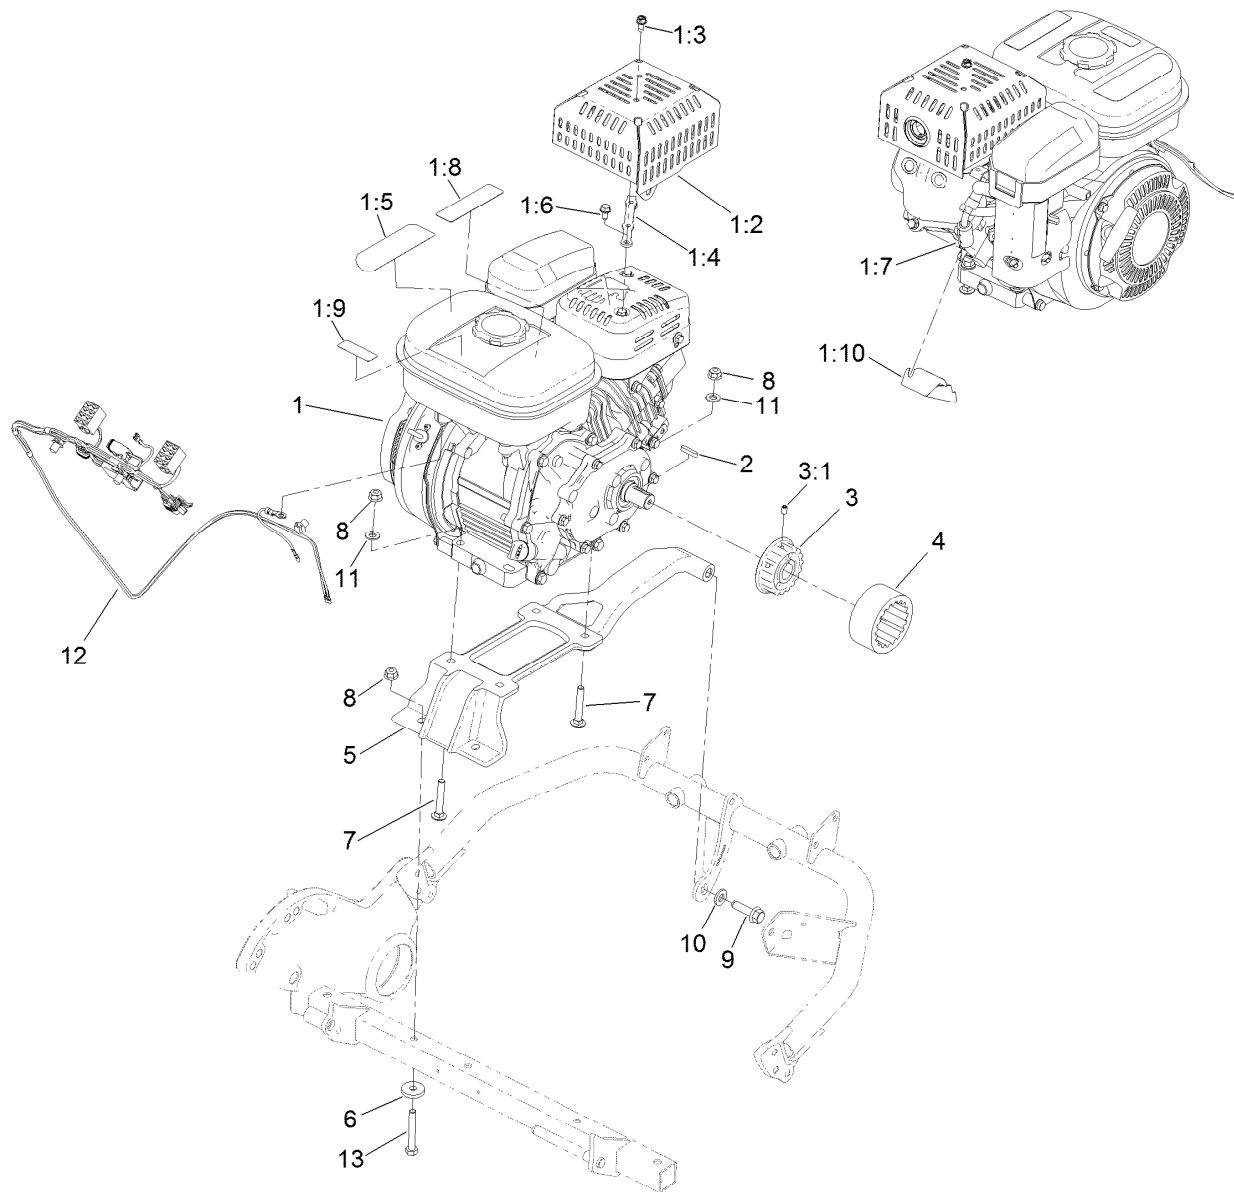

Engine Assembly

Ref.	Part Number	Qty.	Description
1	133-8843	1	Engine ASM
1:2	120-9240-03	1	Guard-Muffler
1:3	120-9551	2	Screw-HWH
1:4	115-7352	1	Bracket-Guard, Muffler
1:5	120-2769	1	Decal-Warning
1:6	104-2628	2	Screw-HWH
1:7	112-1540	1	Ferrite-Snap On
1:8	117-2718	1	Decal-Arrester, Spark
1:9	130-8322	1	Decal-Warning, Ethanol
1:10	133-2355	1	Shield
2	88-7150	1	Key-Square
3	115-7277	1	Endpiece-Coupler


Ref.	Part Number	Qty.	Description
3:1	3245-41	2	Screw-HSH
4	115-7278	1	Sleeve-Coupler
5	127-1535	1	Base-Engine
6	115-7292	2	Washer-Hardened
7	3230-6	4	Screw-CARR
8	119-4041	6	Nut-HF
9	115-7024	1	Screw-HHF
10	115-7293	1	Washer-Hardened
11	120-9683	4	Washer-Plain
12	122-0965	1	Harness-Wire
13	120-9738	2	Screw-HH

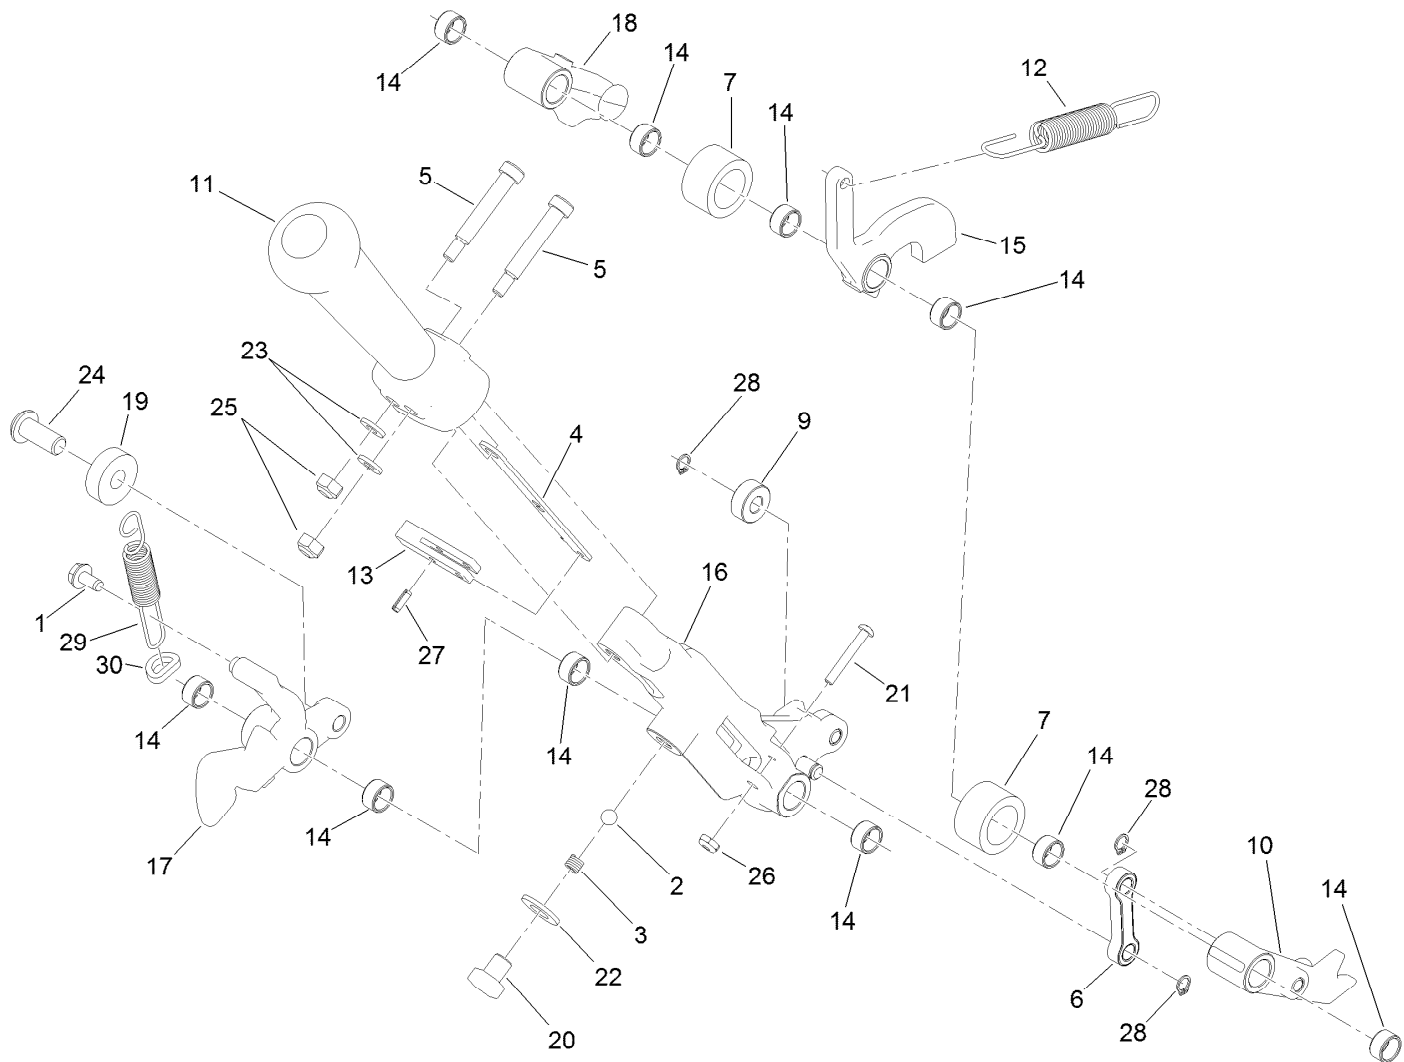

Shift Lever Assembly

Ref.	Part Number	Qty.	Description
1	104-2065	1	Screw-HWH
2	105-2442	1	Ball-Detent
3	105-2443	1	Spring-Detent
4	115-6992	1	Link-Arm, Shift
5	115-6997	2	Screw-Shoulder
6	115-7066	1	Link-Shifter
7	115-7071	2	Bumper-Sleeve, Rubber
9	115-7073	1	Spacer
10	115-7206	1	Spring Lever ASM
11	115-7098	1	Handle-Shift
12	131-3072	1	Spring-Extension
13	120-9703	1	Pin-Latch
14	120-9708	10	Bushing
15	120-9746	1	Latch-Shifter
16	115-7099	1	Lever-Transport


Ref.	Part Number	Qty.	Description
17	120-9711	1	Lever-Shift, Reel
18	120-9712	1	Lever-Cam, Reel
19	251-259	1	Bearing-Ball
20	119-4067	1	Screw-HH
21	120-9693	1	Screw-PPH
22	120-9683	1	Washer-Plain
23	120-9680	2	Washer-Flat
24	133-2381	1	Screw-HSBH
25	120-9681	2	Nut-Lock, NI
26	120-9684	1	Nut-Lock
27	32121-68	1	Pin-Roll
28	613328	3	Ring-Retaining
29	120-9704	1	Spring-Extension
30	120-9729	1	Collar-Spring

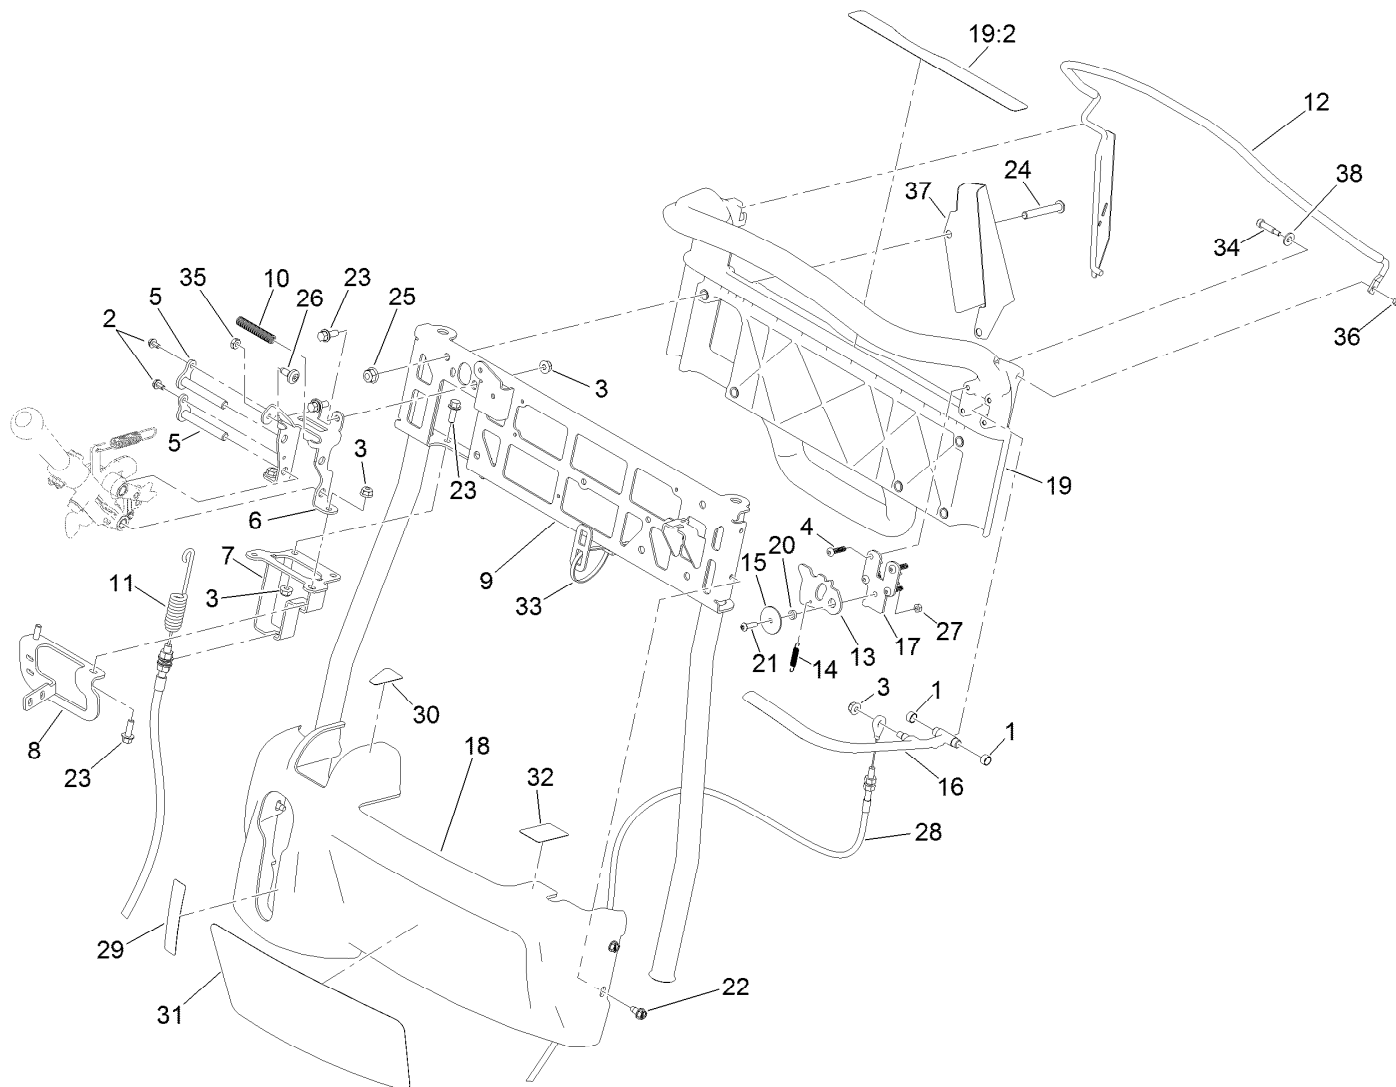

Handle Assembly


Ref.	Part Number	Qty.	Description
1	99-6247	2	Bushing-Bronze
2	104-2065	2	Screw-HWH
3	119-4040	7	Nut-Flange, NI
4	120-9676	4	Screw-Plastite
5	115-6966	2	Shift Lever Pin ASM
6	115-7055-03	1	Bracket-Shifter
7	132-3811	1	Mount-Shift
8	115-7068	1	Bracket-Mount, Switch
9	132-3792-03	1	Tube-Handle
10	115-7299	1	Spring-Extension
11	115-7172	1	Cable-Clutch, Reel
12	130-9372-03	1	Bail-Lift
13	115-7229	1	Latch-Brake
14	115-7230	1	Spring-Extension
15	115-7231	1	Washer
16	115-7232	1	Lever-Brake
17	115-7238	1	Keeper-Lever, Brake
18	131-3097	1	Cover-Console
19	120-9726	1	Upper Handle ASM
19:2	133-2335	1	Decal-Warning

Ref.	Part Number	Qty.	Description
20	115-7291	1	Spacer-Latch, Brake
21	119-1224	1	Screw-HSBH
22	120-9551	4	Screw-HWH
23	120-9678	6	Screw-HHF
24	115-7260	5	Screw-HSBH
25	119-4041	5	Nut-HF
26	120-7950	1	Screw-Shoulder
27	120-9681	1	Nut-Lock, NI
28	115-7171	1	Cable-Brake
29	115-7271	1	Decal-Shift, Gear
30	131-3111	1	Decal-Throttle
31	132-7077	1	Decal
32	120-9598	1	Decal-Brake
33	3290-378	1	Tie-Cable
34	130-9374	1	Screw-Shoulder
35	120-9695	1	Nut-Jam
36	3296-12	1	Nut-Lock, NI
37	130-9373-03	1	Cover-Lever, Bail
38	3256-22	1	Washer-Flat

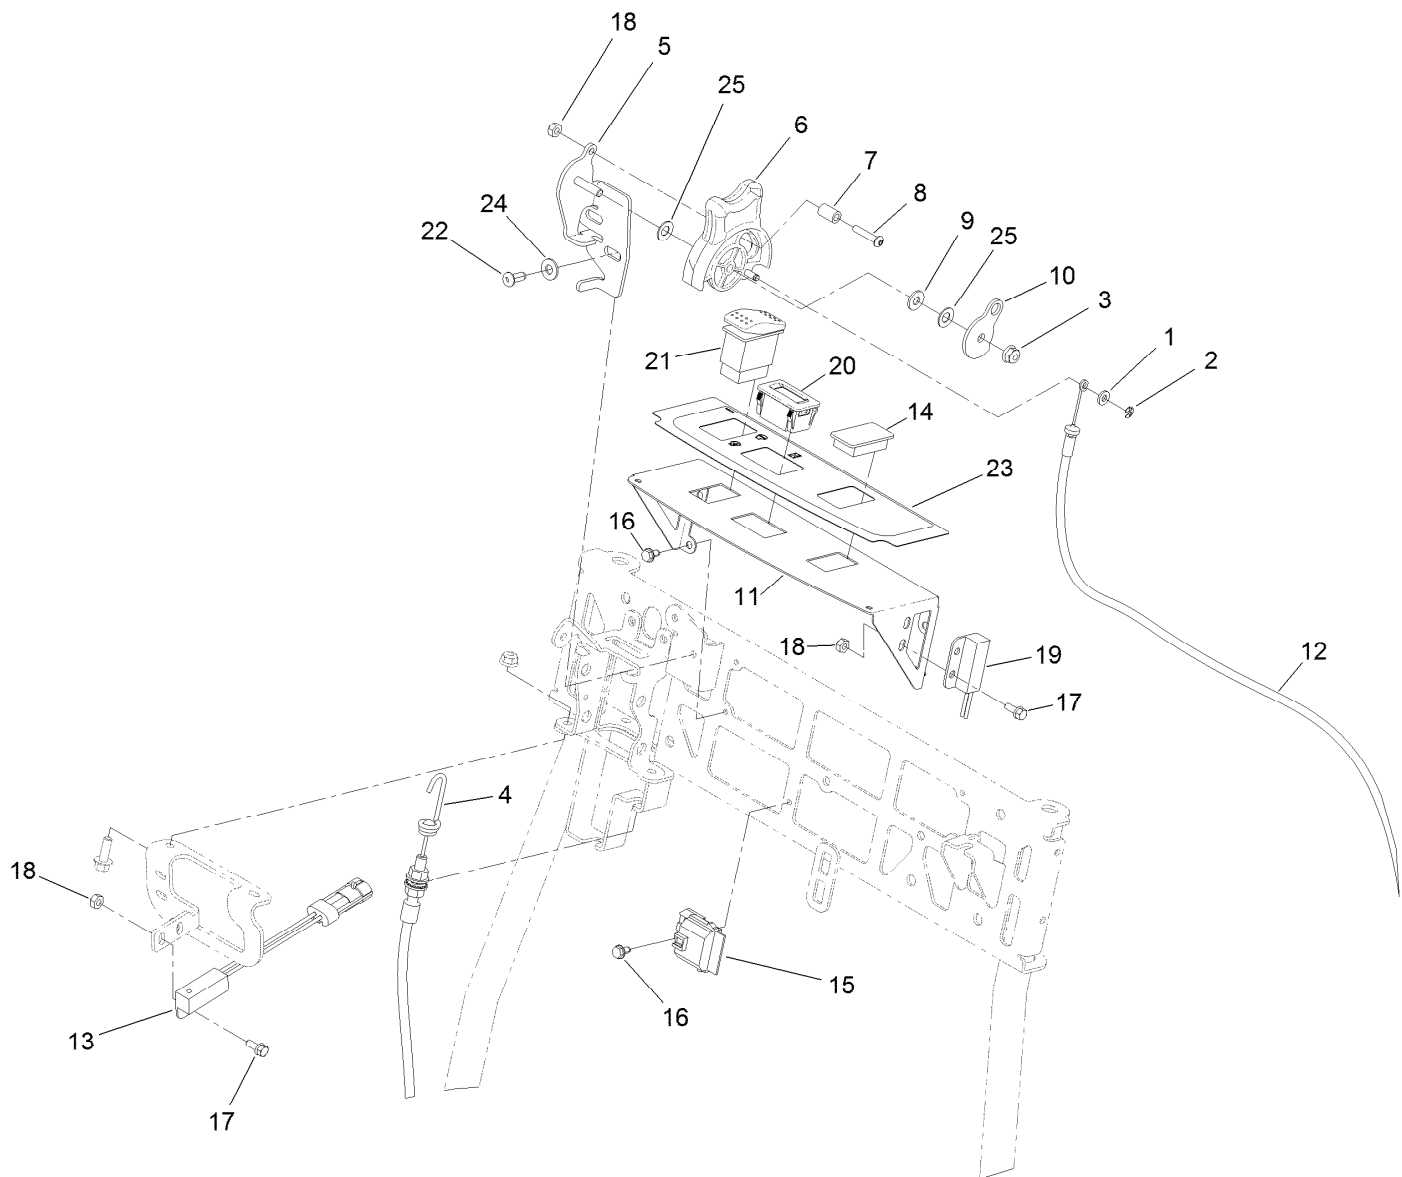

Throttle and Console Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-9680	1	Washer-Flat	14	99-7420	1	Plug-Hole
2	110-1758	1	Ring-Retaining	15	1-323430	1	Module-Interlock
3	119-4040	1	Nut-Flange, NI	16	104-2065	5	Screw-HWH
4	132-3820	1	Cable-Clutch, Traction	17	120-9748	4	Screw-HWH
5	133-8811	1	Bracket-Throttle	18	120-9681	5	Nut-Lock, NI
6	131-3069	1	Throttle Wheel ASM	19	120-6326	1	Sensor-Proximity, Ferrous
7	133-8817	1	Spacer	20	119-1347	1	Meter-Hour
8	108-3153	1	Screw-HSBH	21	95-8999	1	Switch
9	120-9679	1	Washer-Flat	22	63-8590	2	Screw
10	133-8807	1	Plate-Throttle	23	115-7274	1	Decal-Console
11	115-7208-03	1	Panel-Switch	24	3256-22	2	Washer-Flat
12	131-3185	1	Cable-Throttle	25	133-8821	2	Washer-Friction
13	120-6379	1	Sensor-Ferrous Proximity, NC				

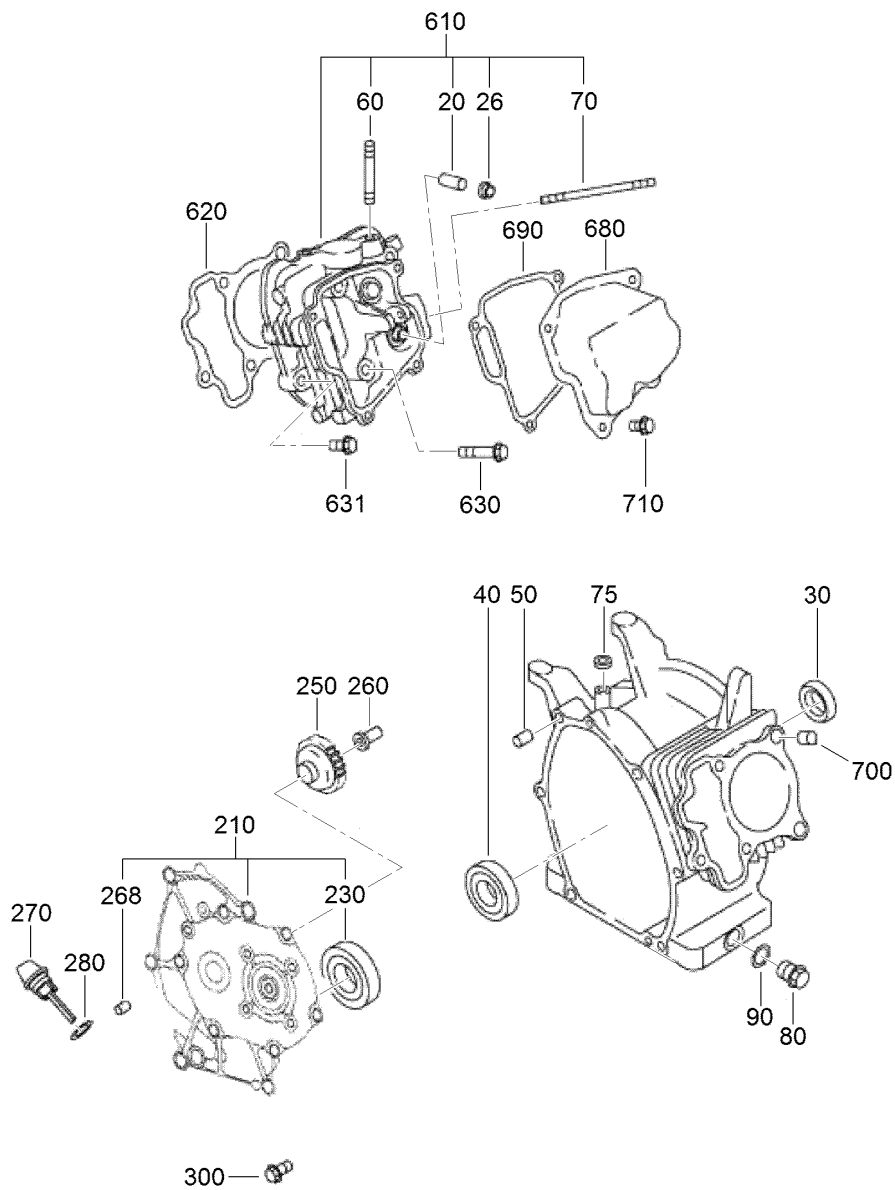


Crankcase Assembly

Ref.	Part Number	Qty.	Description
20	121-0571	2	Guide-Valve
26	121-0611	1	Seal-Stem
30	121-0540	1	Seal-Oil
40	121-0546	1	Bearing-Ball
50	121-0608	2	Pipe-Knock
60	121-0512	2	Stud
70	121-0511	2	Stud
75	121-0539	1	Seal-Oil
80	121-0538	1	Plug
90	121-0532	1	Gasket
210	121-0607	1	Main Bearing Cover ASM
230	121-0544	1	Bearing-Ball
250	121-0652	1	Governor Gear ASM
260	121-0641	1	Sleeve-Governor
268	121-6351	2	Pin-Straight


Ref.	Part Number	Qty.	Description
270	121-0665	1	Gauge-Oil
280	121-6374	1	Gasket
300	121-0502	6	Bolt-Flange
610	121-0672	1	Cylinder Head ASM (Serial No. 1Xxxxxxx)
610	125-9159	1	Cylinder Head ASM (Serial No. 2Xxxxxxx)
620	121-0585	1	Gasket-Head
630	121-0519	4	Bolt-Flange
631	121-0520	1	Bolt-Flange
680	121-0609	1	Rocker Cover ASM
690	121-0610	1	Gasket-Cover, Rocker
700	121-0608	2	Pipe-Knock
710	121-0514	4	Bolt-Flange
960	121-0606	1	Gasket Set ●

● Not illustrated

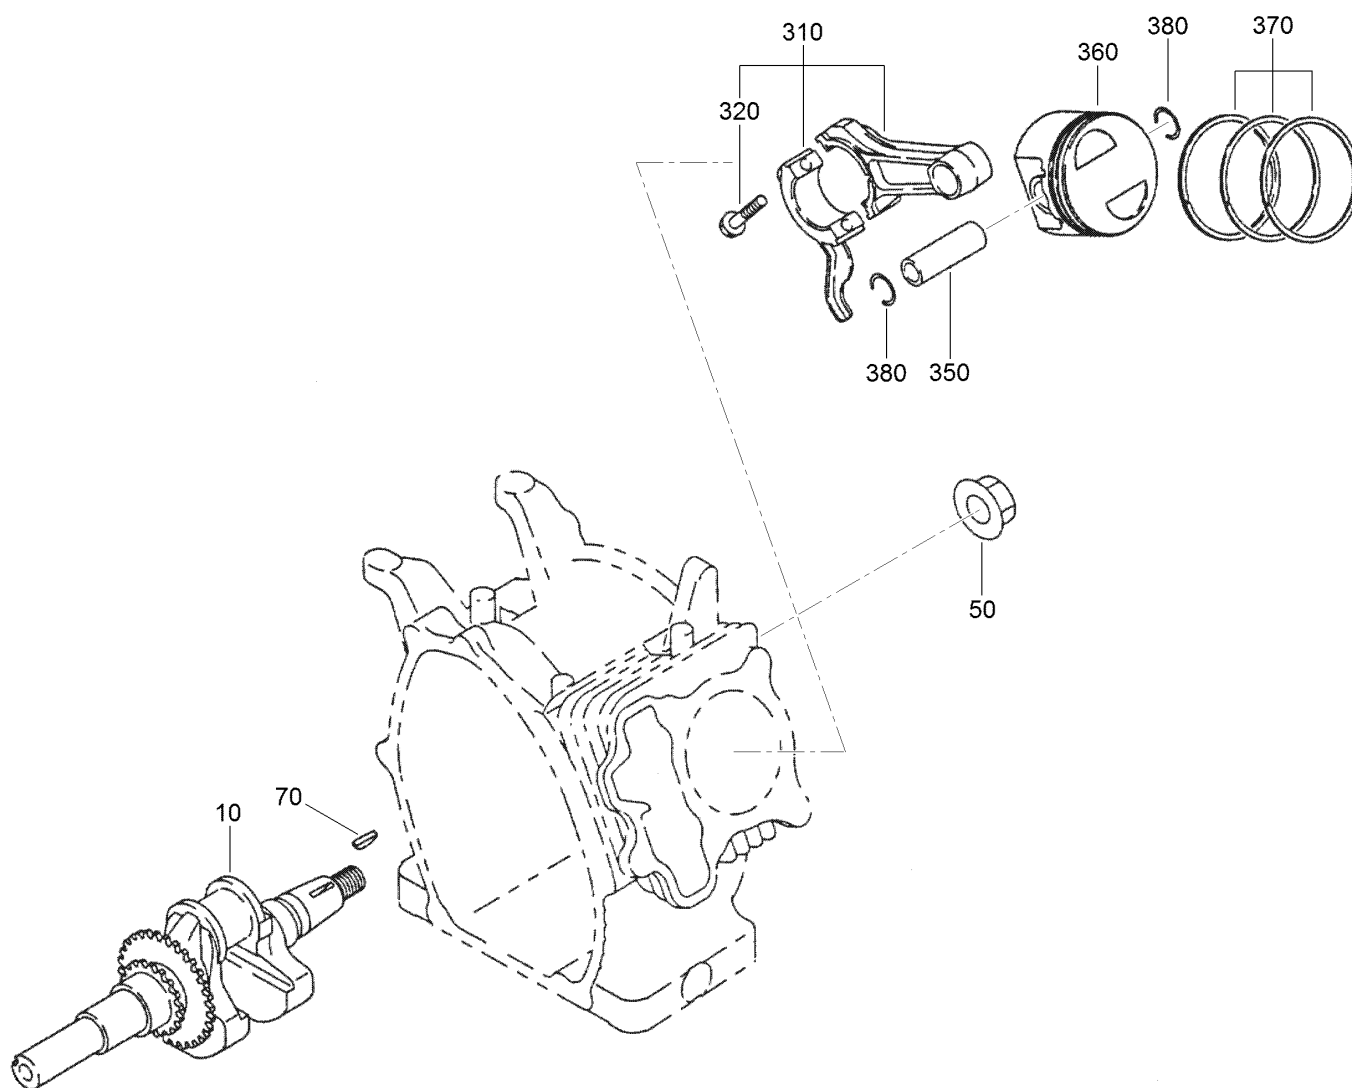

Crankshaft and Piston Assembly


Ref.	Part Number	Qty.	Description
10	121-0586	1	Crankshaft ASM
50	121-0529	1	Nut-Flange
70	121-0537	1	Key-Woodruff
310	121-0587	1	Connecting Rod ASM
310	121-0588	1	Connecting Rod ASM (Undersize)
320	121-0612	2	Bolt-Rod, Connecting
350	121-0589	1	Pin-Piston
360	121-6353	1	Piston (Oversize 0.50 Mm)
360	121-0590	1	Piston (STD)
360	121-0591	1	Piston (Oversize 0.250 Mm)
370	121-0592	1	Piston Ring Set (STD)
370	121-0593	1	Piston Ring Set (Oversize 0.250 Mm)
370	121-0594	1	Piston Ring Set (Oversize 0.50 Mm)
380	121-0561	2	Clip

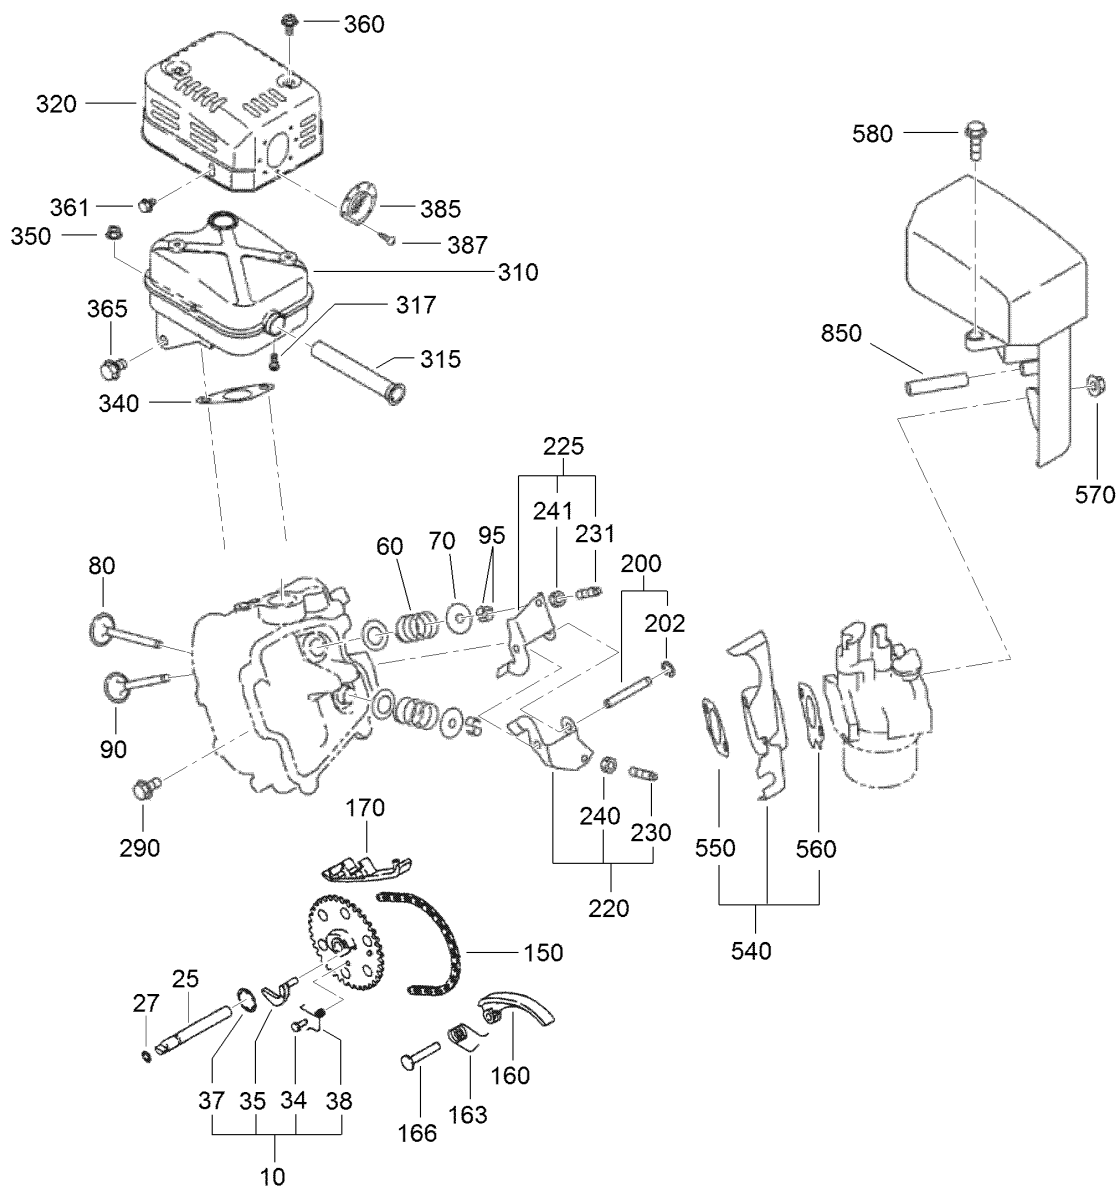

Intake and Exhaust Assembly


Ref.	Part Number	Qty.	Description
10	121-0613	1	Camshaft ASM
25	121-0625	1	Pin-Camshaft
27	121-0535	1	O-Ring
34	121-0639	1	Pin-Spring
35	121-0631	1	Lever-Release
37	121-0632	1	Clip
38	121-0640	1	Spring-Return
60	121-0673	2	Spring-Valve
70	121-0579	2	Retainer-Spring
80	121-0596	1	Valve-Intake
90	121-0597	1	Valve-Exhaust
95	121-0555	4	Collet-Valve
150	121-0599	1	Timing Chain ASM
160	121-0634	1	Tensioner
163	121-0637	1	Spring-Tensioner
166	121-0633	1	Pin-Tensioner
170	121-0635	1	Guide-Chain
200	121-0624	1	Rocker Pin ASM
202	121-0507	1	Clip
220	121-0629	1	Intake Rocker Arm ASM
225	121-0630	1	Exhaust Rocker Arm ASM

Ref.	Part Number	Qty.	Description
230	121-0524	1	Screw-Adjust
231	121-0524	1	Screw-Adjust
240	121-0528	1	Nut
241	121-0528	1	Nut
290	121-0514	1	Bolt-Flange
310	121-0595	1	Muffler ASM
315	121-0638	1	Arrestor-Spark
317	121-0525	1	Screw-Tapping
320	121-0598	1	Muffler Cover ASM
340	121-0626	1	Gasket-Muffler
350	121-6376	2	Nut-Flange
360	121-0527	2	Bolt-Flange
361	121-0513	1	Bolt-Flange
365	121-0521	1	Bolt-Flange
385	121-6354	1	Screen-Complete
387	121-0525	2	Screw-Tapping
540	121-0623	1	Insulator ASM
550	121-0628	1	Gasket-Insulator No.2
560	121-0627	1	Gasket-Insulator No.1
570	121-0506	2	Nut-Flange

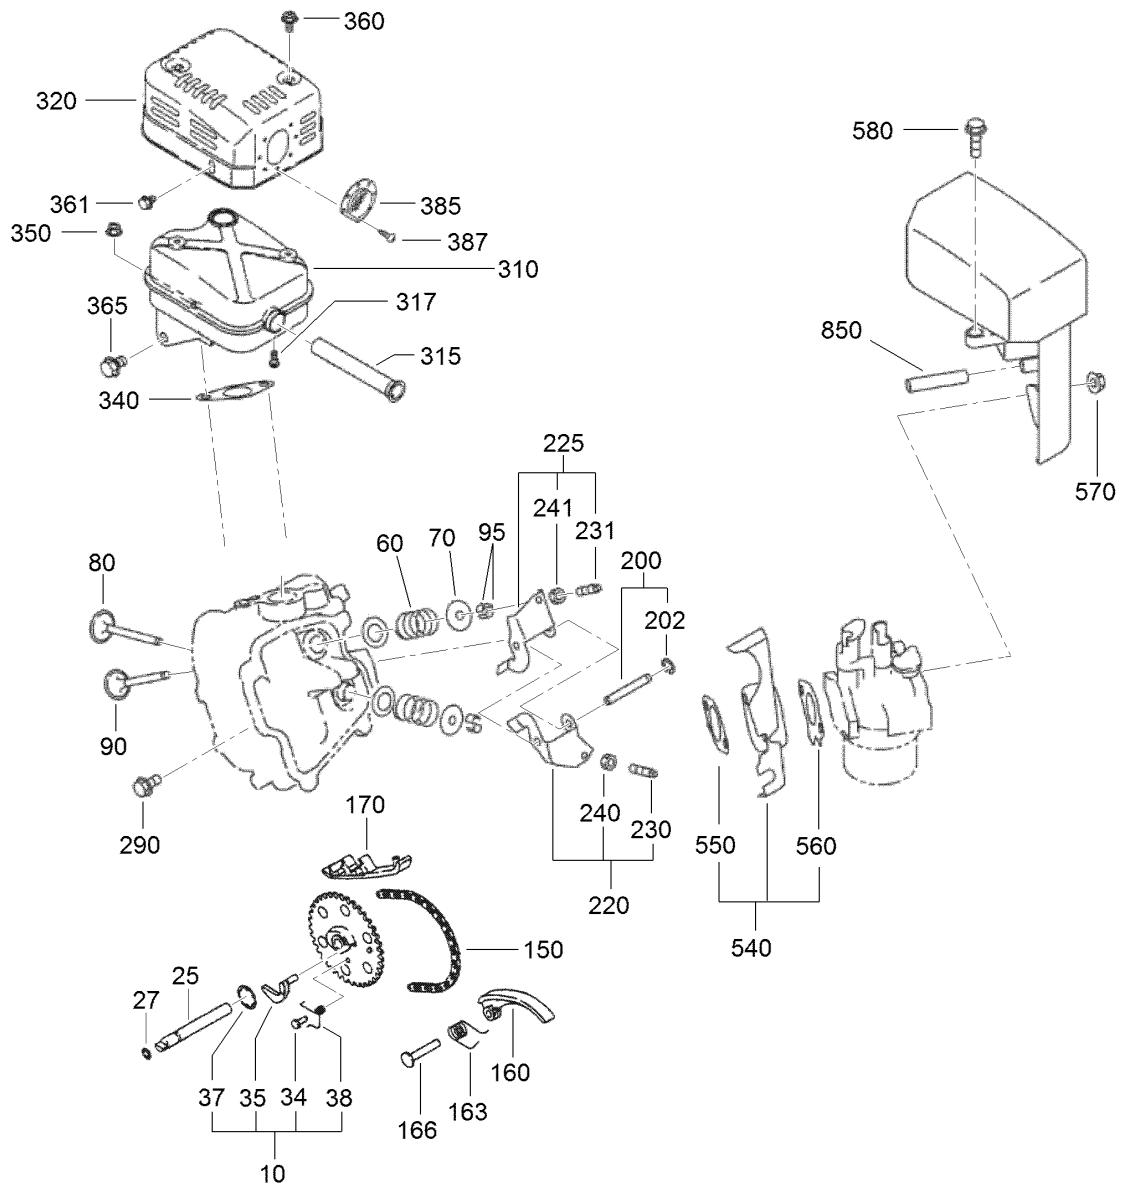


Intake and Exhaust Assembly (continued)

Ref.	Part Number	Qty.	Description
580	121-0516	1	Bolt-Flange
850	121-6375	1	Pipe-Breather

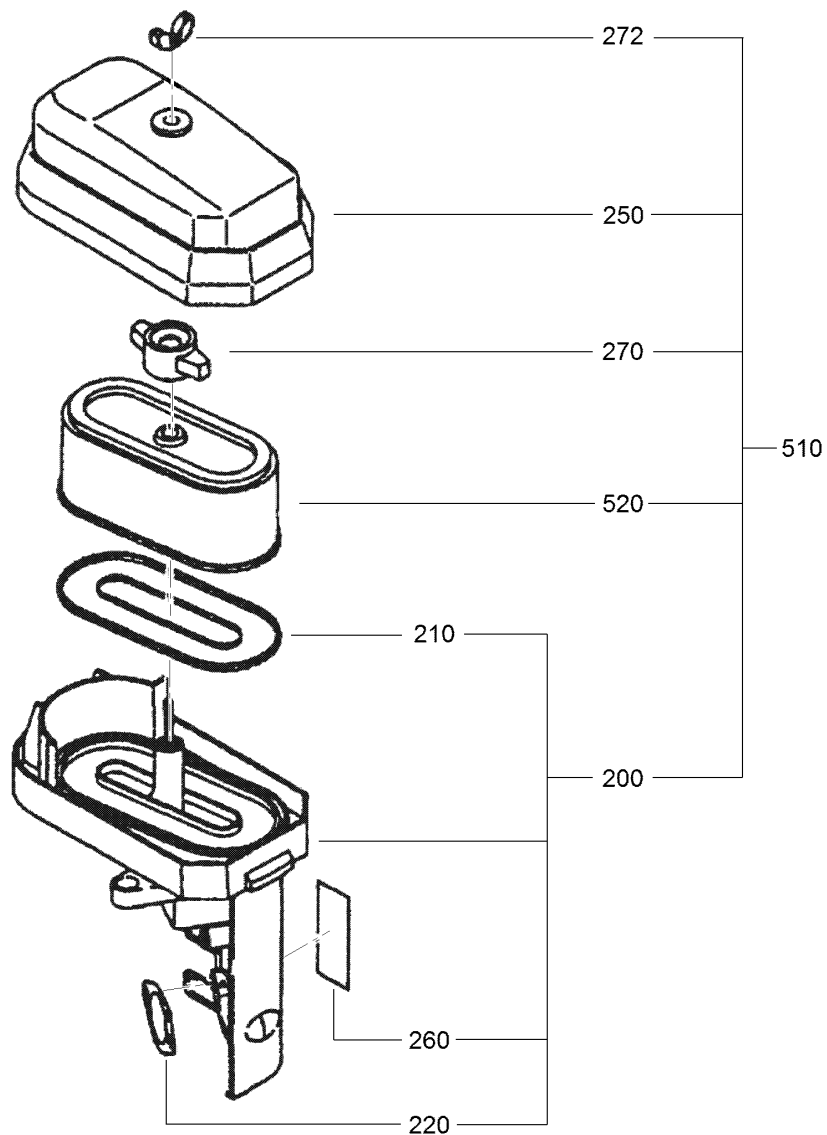

Air Cleaner Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
200	121-0620	1	Base ASM
210	121-0617	1	Packing
220	121-0614	1	Packing
250	121-0621	1	Cover ASM
260	121-0616	1	Label
270	121-0622	1	Nut-Wing
272	121-0615	1	Nut-Wing
510	121-0619	1	Air Cleaner ASM
520	121-0618	1	Set-Element

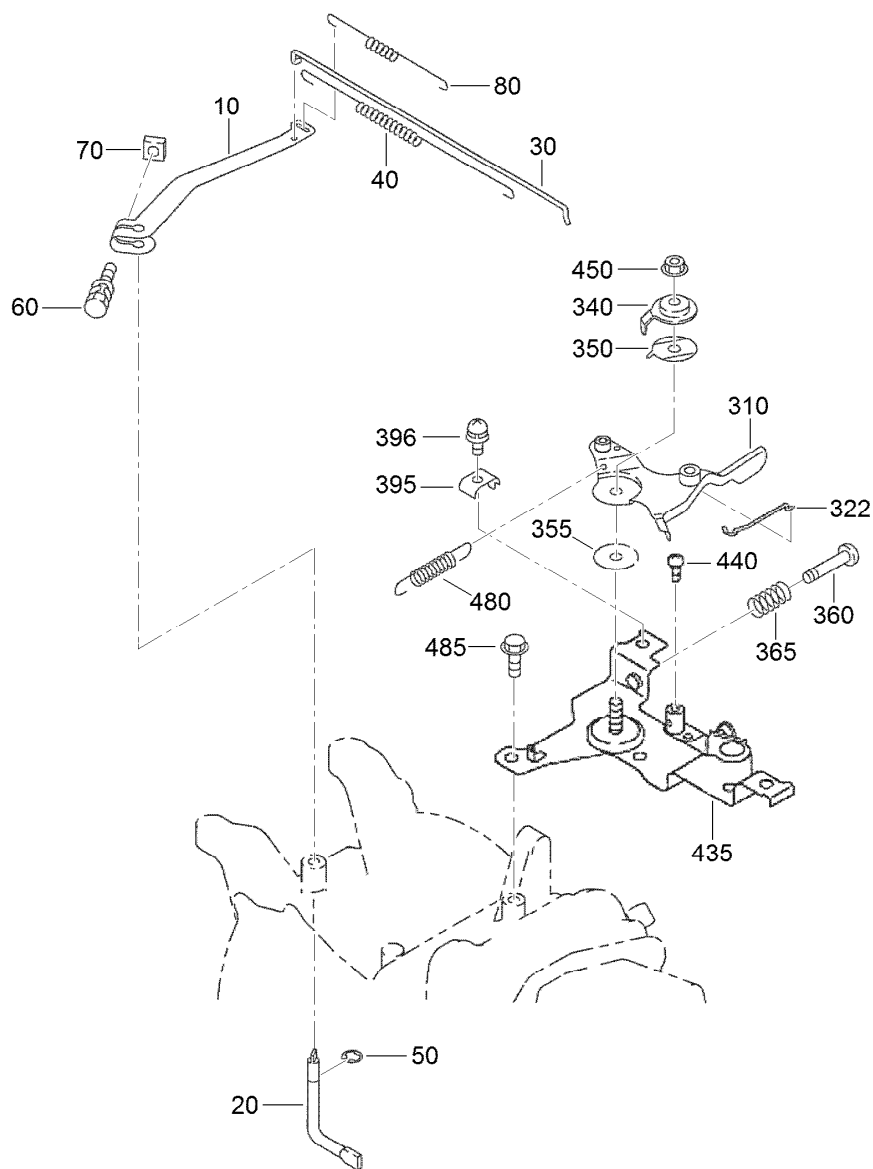

Governor Assembly


Ref.	Part Number	Qty.	Description
10	121-0643	1	Lever-Governor
20	121-0642	1	Shaft-Governor
30	121-0674	1	Governor Rod ASM
40	121-0645	1	Spring-Rod
50	121-0507	1	Clip
60	121-0522	1	Bolt And Washer ASM
70	121-0530	1	Nut
80	121-0644	1	Spring-Governor
310	121-0646	1	Speed Control Lever ASM
322	121-0648	1	Link Rod ASM
340	121-0647	1	Plate-Stop

Ref.	Part Number	Qty.	Description
350	121-0651	1	Washer
355	121-0534	1	Washer-Friction
360	121-0509	1	Screw
365	121-0572	1	Spring-Adjust
395	121-0650	1	Clamp
396	121-0523	1	Screw And Washer ASM
435	121-0654	1	Speed Control Bracket ASM
440	121-0508	1	Screw
450	121-0505	1	Nut-Self Lock
480	121-0653	1	Spring-Return
485	121-0514	2	Bolt-Flange

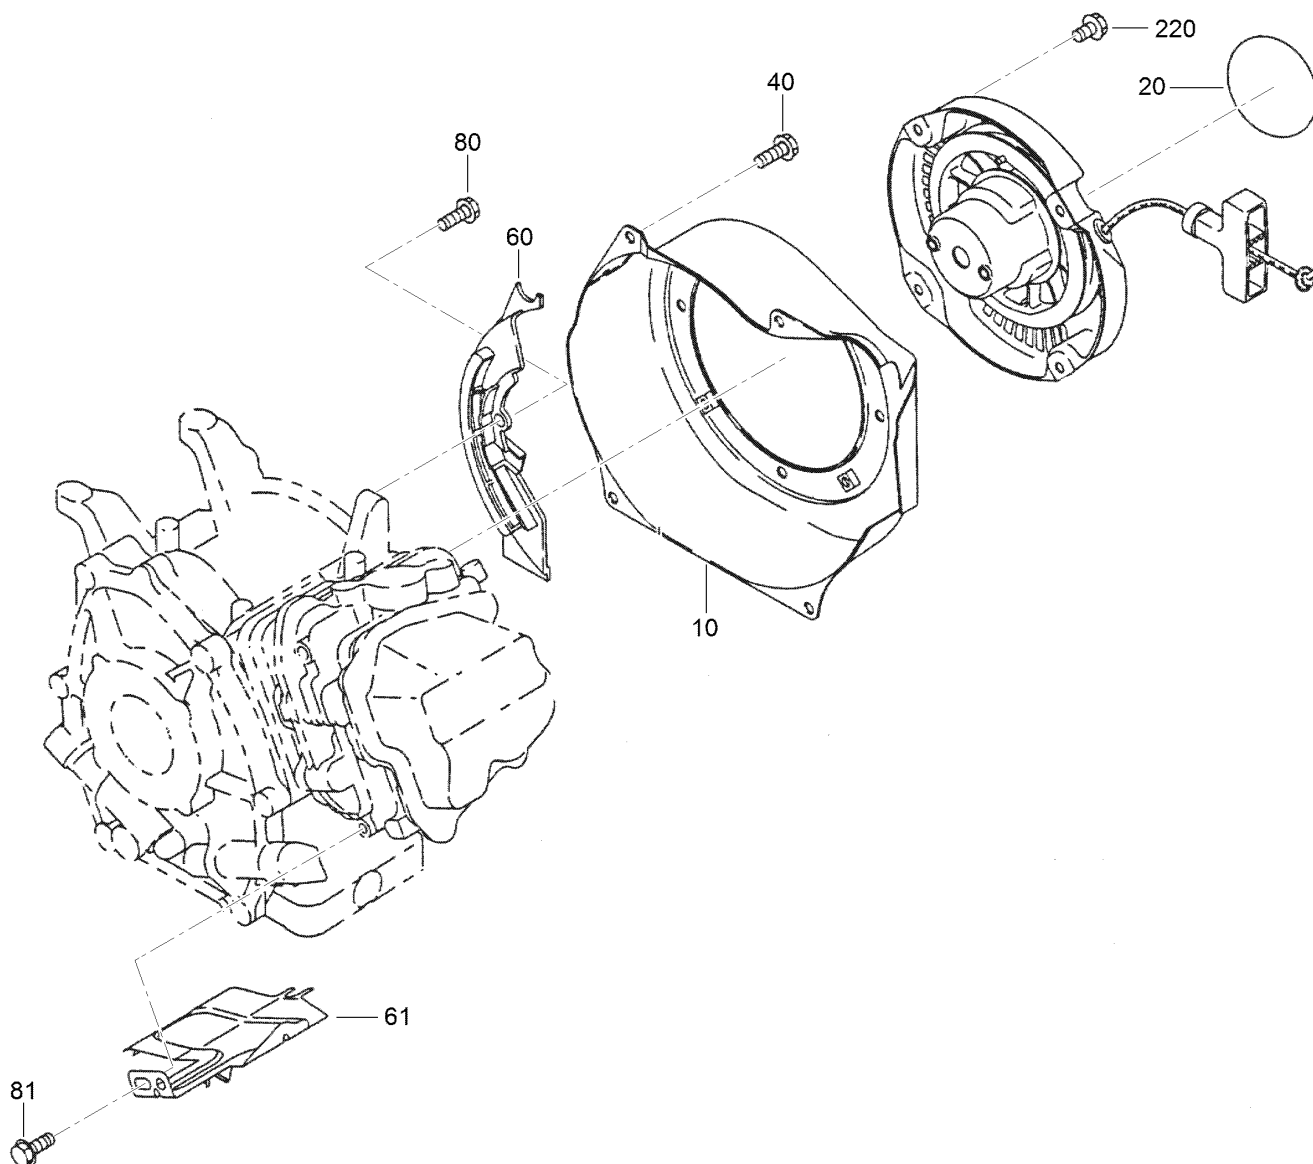


Recoil and Shroud Assembly

Ref.	Part Number	Qty.	Description
10	121-0600	1	Blower Housing ASM
20	121-0550	1	Label-Trademark
40	121-0515	4	Bolt-Flange
60	121-0656	1	Case Baffle No.1 ASM
61	121-0655	1	Case Baffle No.2 ASM
80	121-0500	1	Bolt-Flange
81	121-0514	1	Bolt-Flange
220	121-6377	4	Bolt And Washer ASM

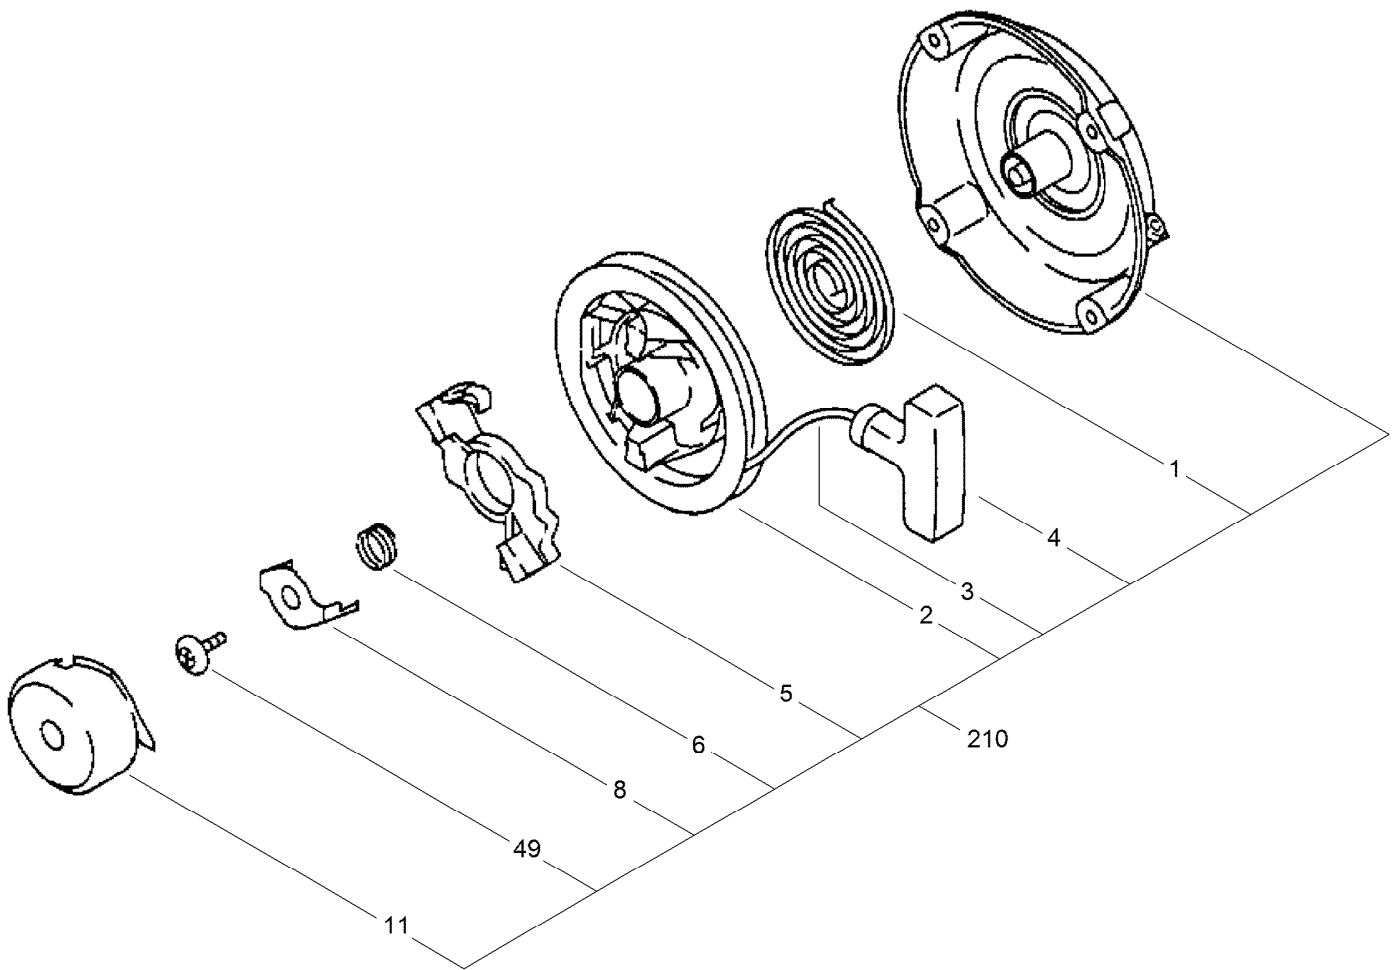


Recoil Assembly

Ref.	Part Number	Qty.	Description
1	133-8872	1	Subaru Recoil Kit
2	121-6357	1	Reel
3	121-0676	1	Starter Rope
4	121-6358	1	Handle-Starter
5	121-6359	1	Ratchet
6	121-6360	1	Spring-Friction
8	121-6361	1	Plate-Friction
11	121-6362	1	Pulley-Starter
49	121-6363	1	Screw-Center
210	133-8897	1	Recoil Starter ASM

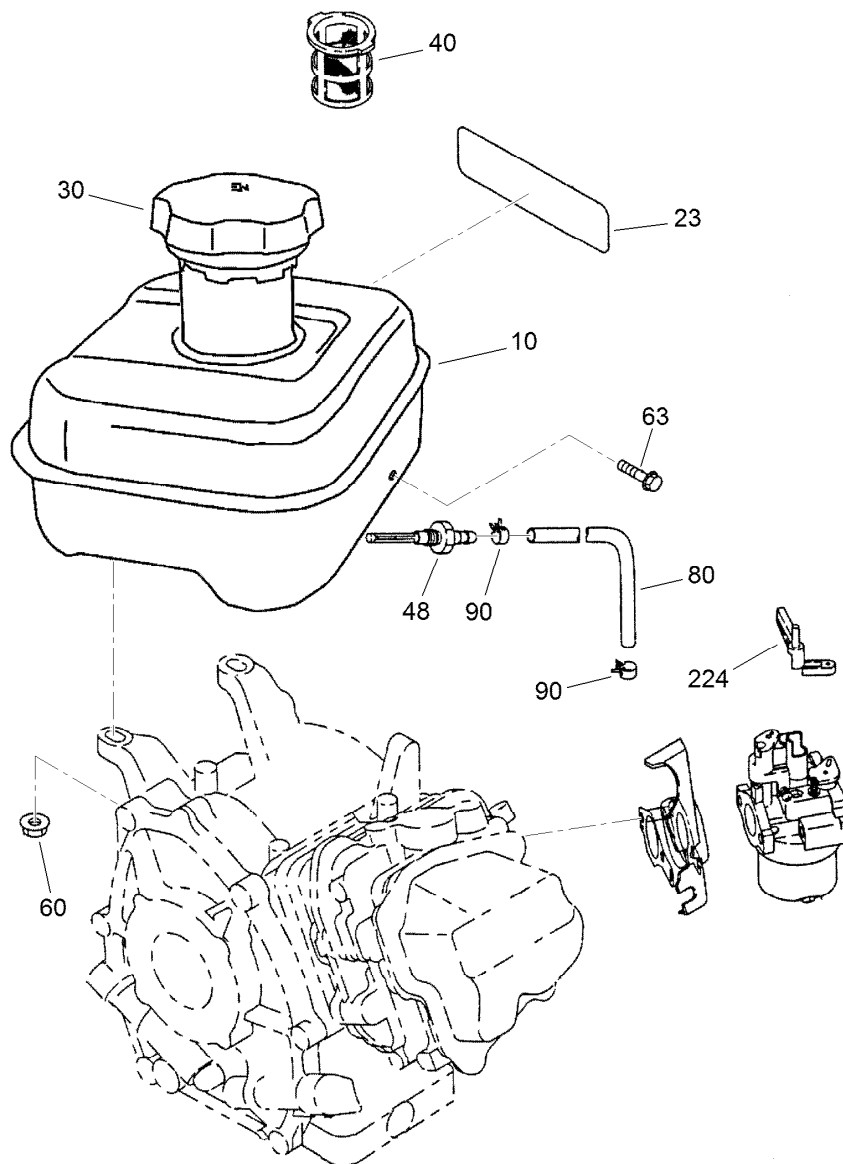

Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
10	125-5241	1	Tank-Fuel
23	121-0605	1	Label-Model
30	121-0684	1	Fuel Tank Cap ASM
40	121-0685	1	Filter-Fuel
48	121-0542	1	Union
60	121-0506	2	Nut-Flange
63	121-0517	1	Bolt-Flange
80	121-6378	1	Pipe-Rubber
90	121-0543	2	Clamp-Hose
224	121-0649	1	Lever-Control, Choke

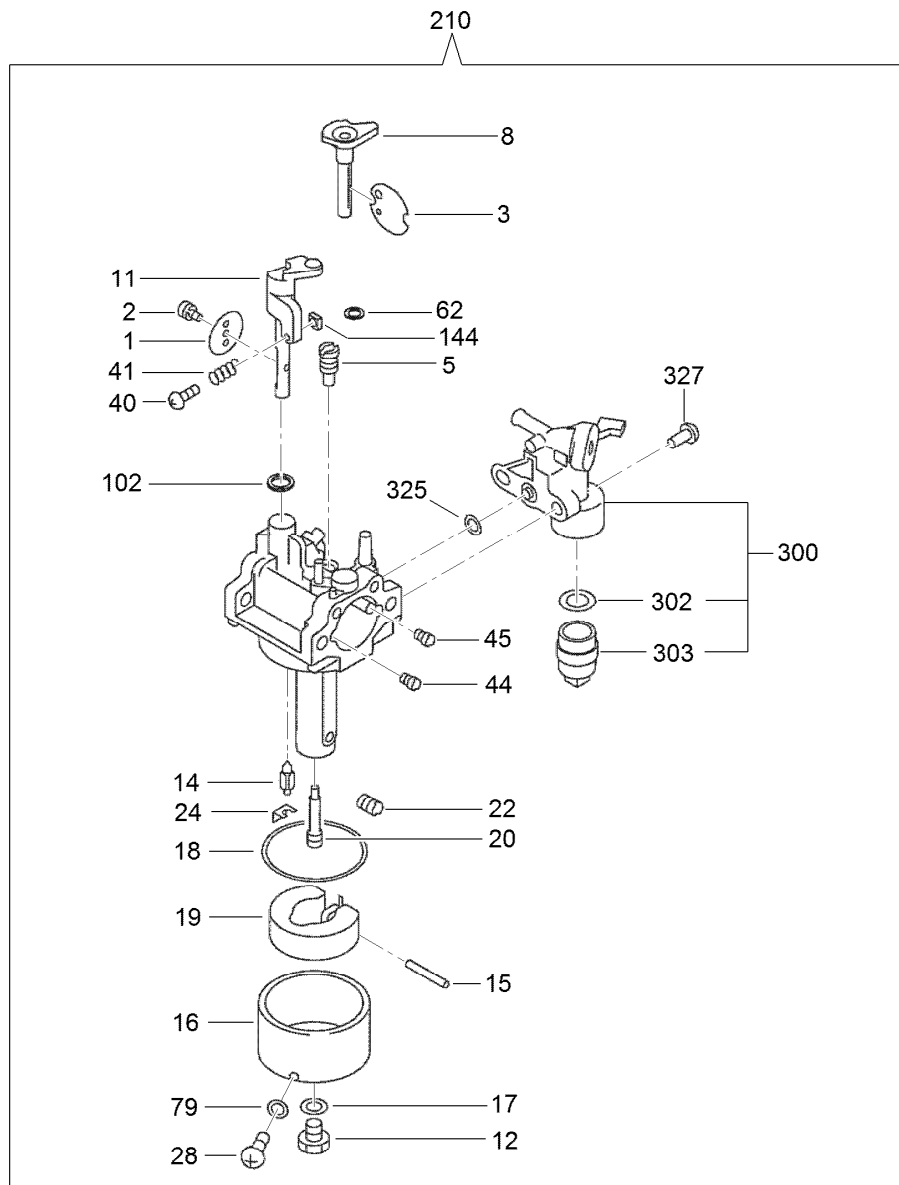

Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	121-0553	1	Valve-Throttle
2	121-0558	1	Screw
3	121-0662	1	Valve-Choke
5	121-0574	1	Jet-Pilot
8	121-0661	1	Lever-Choke
11	121-0602	1	Throttle Shaft ASM
12	121-0568	1	Bolt
14	121-6366	1	Needle
15	121-0660	1	Pin
16	121-0659	1	Float Body ASM
17	121-0559	1	Packing
18	121-0560	1	Packing-Chamber
19	121-0562	1	Float
20	121-0601	1	Nozzle-Main
22	121-0575	1	Jet-Main
24	121-0563	1	Clip

Ref.	Part Number	Qty.	Description
28	121-0567	1	Bolt
40	121-0554	1	Screw
41	121-0677	1	Spring
44	121-0557	1	Jet-Air
45	121-0552	1	Jet-Air, Pilot
62	121-0570	1	Seal
79	121-0569	1	Packing
102	121-0573	1	Seal
144	121-0664	1	Nut
210	121-6365	1	Carburetor ASM
300	121-0675	1	Fuel Strainer ASM
302	121-0658	1	Packing
303	121-0657	1	Cup
325	121-0663	1	O-Ring
327	121-0556	2	Screw

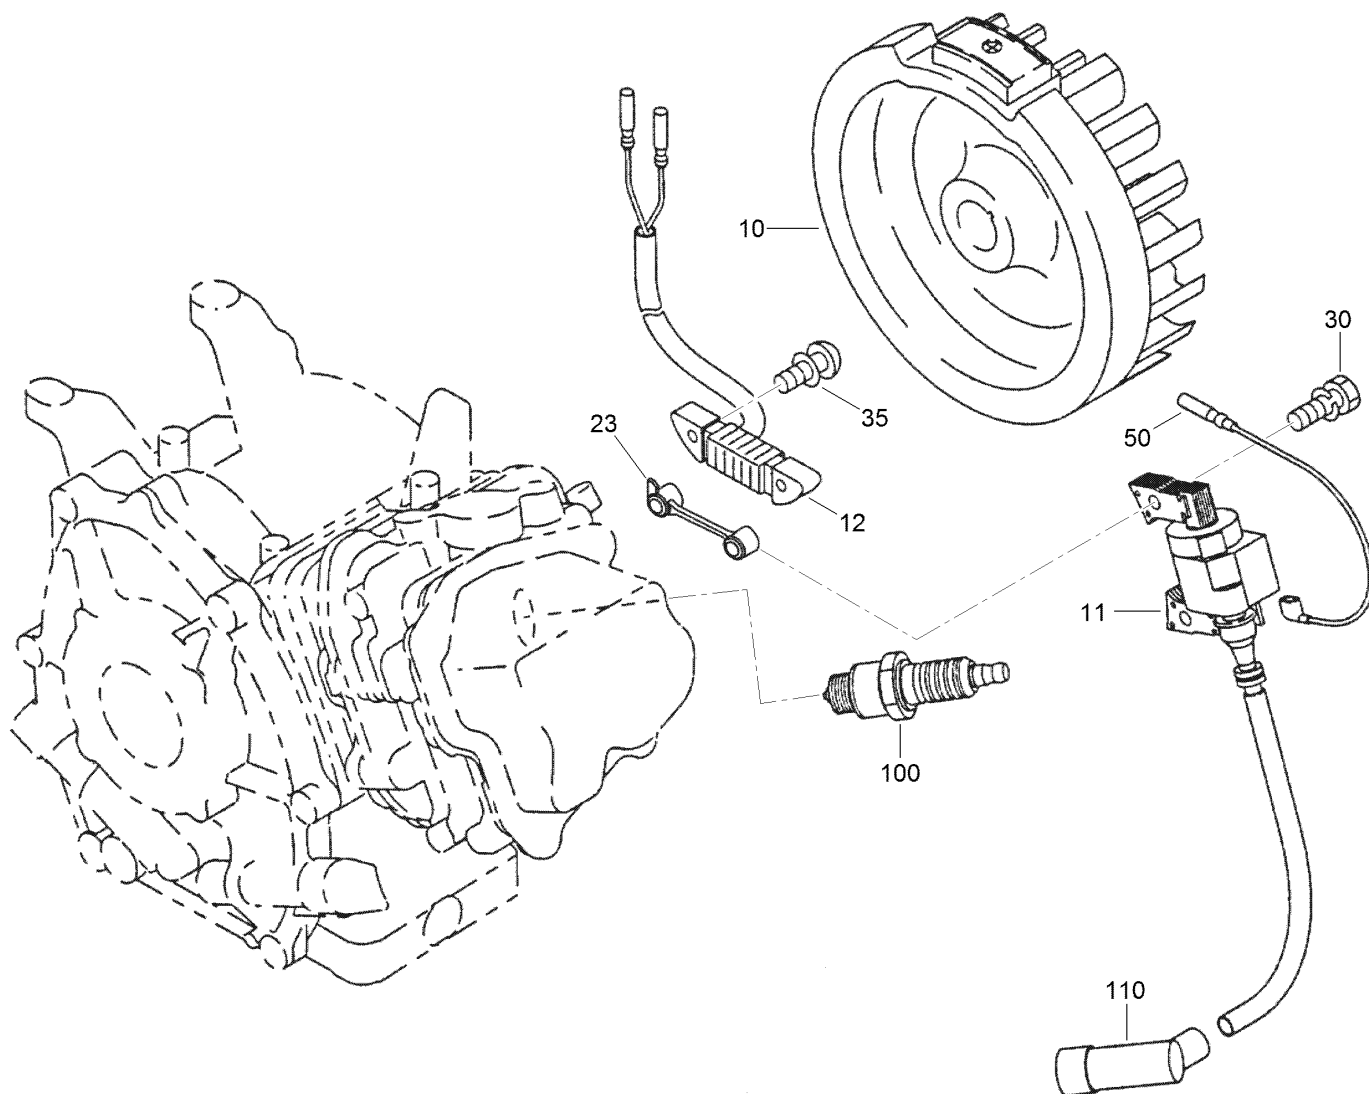

Flywheel and Coil Assembly

Ref.	Part Number	Qty.	Description
10	121-0604	1	Flywheel ASM
11	121-0668	1	Ignition Coil ASM
12	121-6368	1	Lamp Coil ASM
23	121-0669	1	Spacer
30	121-0504	2	Bolt And Washer ASM
35	121-6369	2	Bolt And Washer ASM
50	121-6370	1	Wire-Coil
100	121-0547	1	Plug-Spark
110	133-8849	1	Sparkplug Cap And Boots ASM

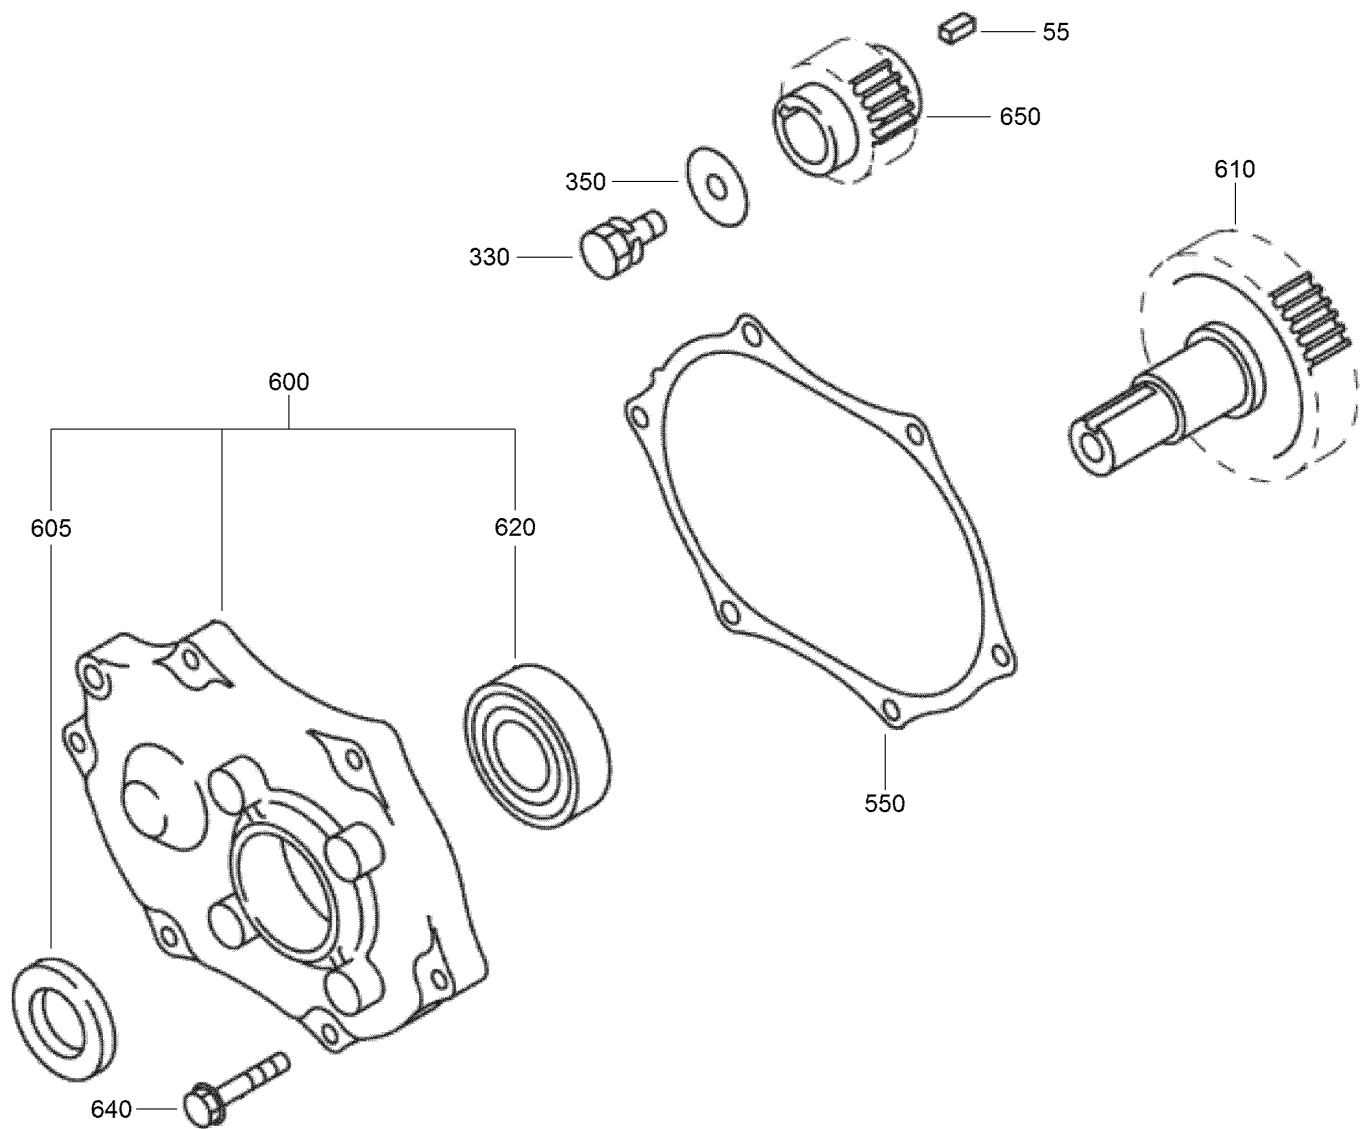

Gear Reduction Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
55	121-0536	1	Key
330	121-0501	1	Bolt-Flange
350	121-0531	1	Washer
550	121-0671	1	Gasket-Cover, Reduction
600	121-0670	1	Reduction Cover ASM
605	121-0541	1	Seal-Oil
610	121-6372	1	Shaft-Driving
620	121-0545	1	Bearing-Ball
640	121-0518	6	Bolt-Flange
650	121-6373	1	Shaft-Driven

Attachments and Accessories

For 04045 Greensmaster Flex 1820 Traction Unit

Product Name	Model/Part
LED Light Kit.....	04064
Wheel Kit	04123
Trans Pro 80 Tow-Behind Trailer.....	04238
Trans Pro 100 Tow-Behind Trailer.....	04240
Flat Ramp	04245
Rail Ramp Kit (Update).....	04247
Rail Ramp Conversion Kit (Update)	04248
Out-Front Brush Kit.....	04266
18in 11-Blade Cutting Unit	04289
18in 14-Blade Cutting Unit.....	04291
Turf Evaluator	04399
Roller Seal Replacement (Qty 1)	107-1594
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
18in Rail Conversion Kit.....	110-7345
18in Transport Conversion Kit.....	110-7355
Hourmeter-Wireless.....	115-4754
High Altitude Jet-Subaru	117-0073
Wire Harness-Wireless Hour Meter	120-9690
Spark Plug	121-0547
Element Set	121-0618
Filter-Fuel	121-0685
MVP Kit, Cutting Unit Re-Build.....	121-2637
Premium Engine Oil 10w30 (55 Gal).....	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Toro Reel Paper (10 Pack).....	125-5610
Toro Reel Shim (0.002in)	125-5611
Angle Indicator.....	131-6828
Angle Indicator Mount.....	131-6829
MVP Kit, Greensmaster Flex 1820 or 2120 Traction Unit	133-8898
MVP Filter and Spark Plug Kit, 2012 and After Walk-Behind Greensmaster Mower	30097
Height-of-Cut Bar.....	94-9010



Count on it.