

### Bucket Mount Kit Z Master® 3000, 5000, or 6000 Series Riding Mower

Model No. 137-9216

**Installation Instructions** 

## **Safety**

### **Safety and Instructional Decals**



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.



137-9231

decal137-9231

1. Maximum weight 7 kg (15 lb)

## Installation

#### **Loose Parts**

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	_	Prepare the machine.
Bucket-holder mount	1	
Bracket-support hinge	1	
Mount strap—for 48, 52, and 60-inch decks	1	
Mount strap—for 72-inch decks	1	Install the kit.
Top bracket	1	
Knob	1	
Carriage bolt (5/16 x 7/8 inch)	4	
Flange nut (5/16 inch)	3	
Flange-head bolt (3/8 x 1 inch)	1	
Locknut (3/8 inch)	1	

## **Preparing the Machine**

- 1. Park the machine on a level surface.
- 2. Move the motion-control levers to the NEUTRAL-LOCK position.
- 3. Engage the parking brake.
- 4. Shut off the engine and remove the key.


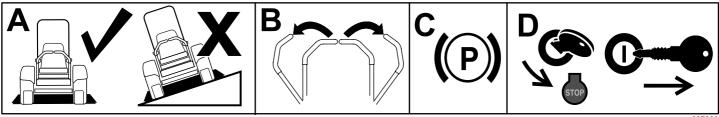


Figure 1

g037289 a037289

### Installing the Kit

 Install the bucket-holder mount into the deck-mounting hole by the discharge plate (Figure 2).

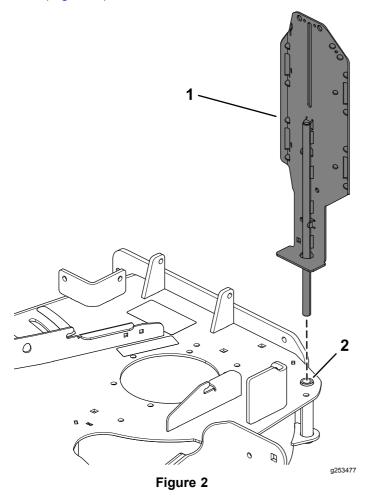

1. Bucket-holder mount

2. Mounting hole

2. Secure the bracket-support hinge and mount strap to the bucket-holder mount using 3 carriage bolts (5/16 x 7/8 inch) and 3 flange nuts (5/16 inch) as shown in Figure 3.

Refer to Figure 4 for the proper mount strap. Use the mount strap with the 51 mm (2 inches) bend offset and 4 holes for 48, 52, and 60-inch decks. Use the mount strap with the 13 mm (1/2 inch) bend offset and 3 holes for 72-inch decks.


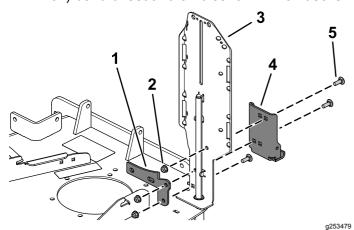


Figure 3

- Mount strap
- Flange nut (5/16 inch)
- Bracket-support hinge
- Carriage bolt (5/16 x 7/8 inch)
- **Bucket-holder mount**

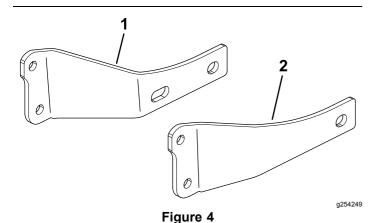

- 1. Mount strap for 48, 52, and 60-inch decks
- 2. Mount strap for 72-inch decks

Secure the mount strap to the mower deck using the flange-head bolt (3/8 x 1 inch) and locknut (3/8 inch) as shown in Figure 5.


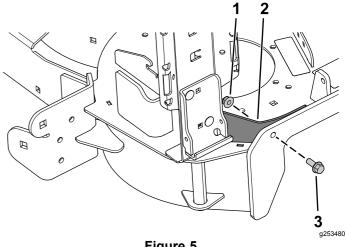


Figure 5

- Locknut (3/8 inch)
- 3. Flange-head bolt (3/8 x 1 inch)
- Mount strap
- Secure the top bracket to the bucket-holder mount using the knob and a carriage bolt (5/16 x 7/8 inch) as shown in Figure 6.

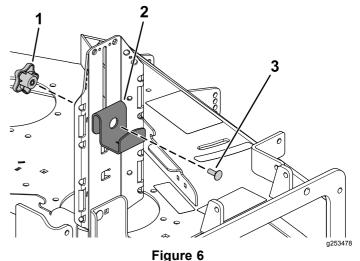

Knob


- Carriage bolt (5/16 x 7/8
- 2. Top bracket

# **Operation**

## **Mounting a Bucket**

Use only Toro-approved attachments and accessories. The maximum capacity is 7 kg (15 lb).

- 1. Loosen the knob and raise the top bracket. Tighten the knob to hold it in place (Figure 7).
- 2. Place the bottom lip of the bucket over the bottom ledge of the welded support bracket (Figure 7).
- Loosen the knob and lower the top bracket as far as possible over the rim of the bucket. Tighten the knob (Figure 7).

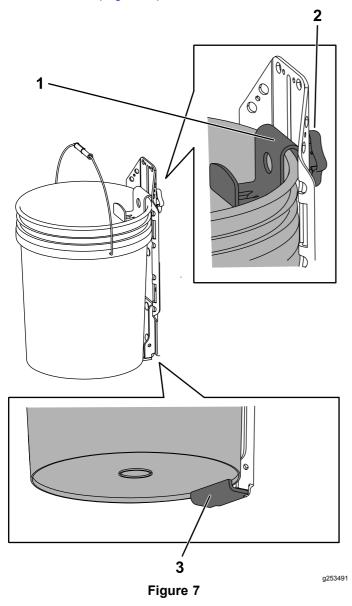

- Top bracket over the rim of 3. Bottom ledge of the the bucket
- support bracket

2. Knob