



Form No. 3422-858 Rev A

Count on it.

Parts Catalog

Safety and Security Cage Kit

**Groundsmaster® 5900 Traction Unit with 2
Post ROPS Extension**

Model No. 31354



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Door Cage and Rear Screen Assembly 4

Upper and Lower Windshield Assembly 6

LH Door Cage Assembly..... 8

RH Door Cage Assembly 10

Door Cage and Rear Screen Assembly

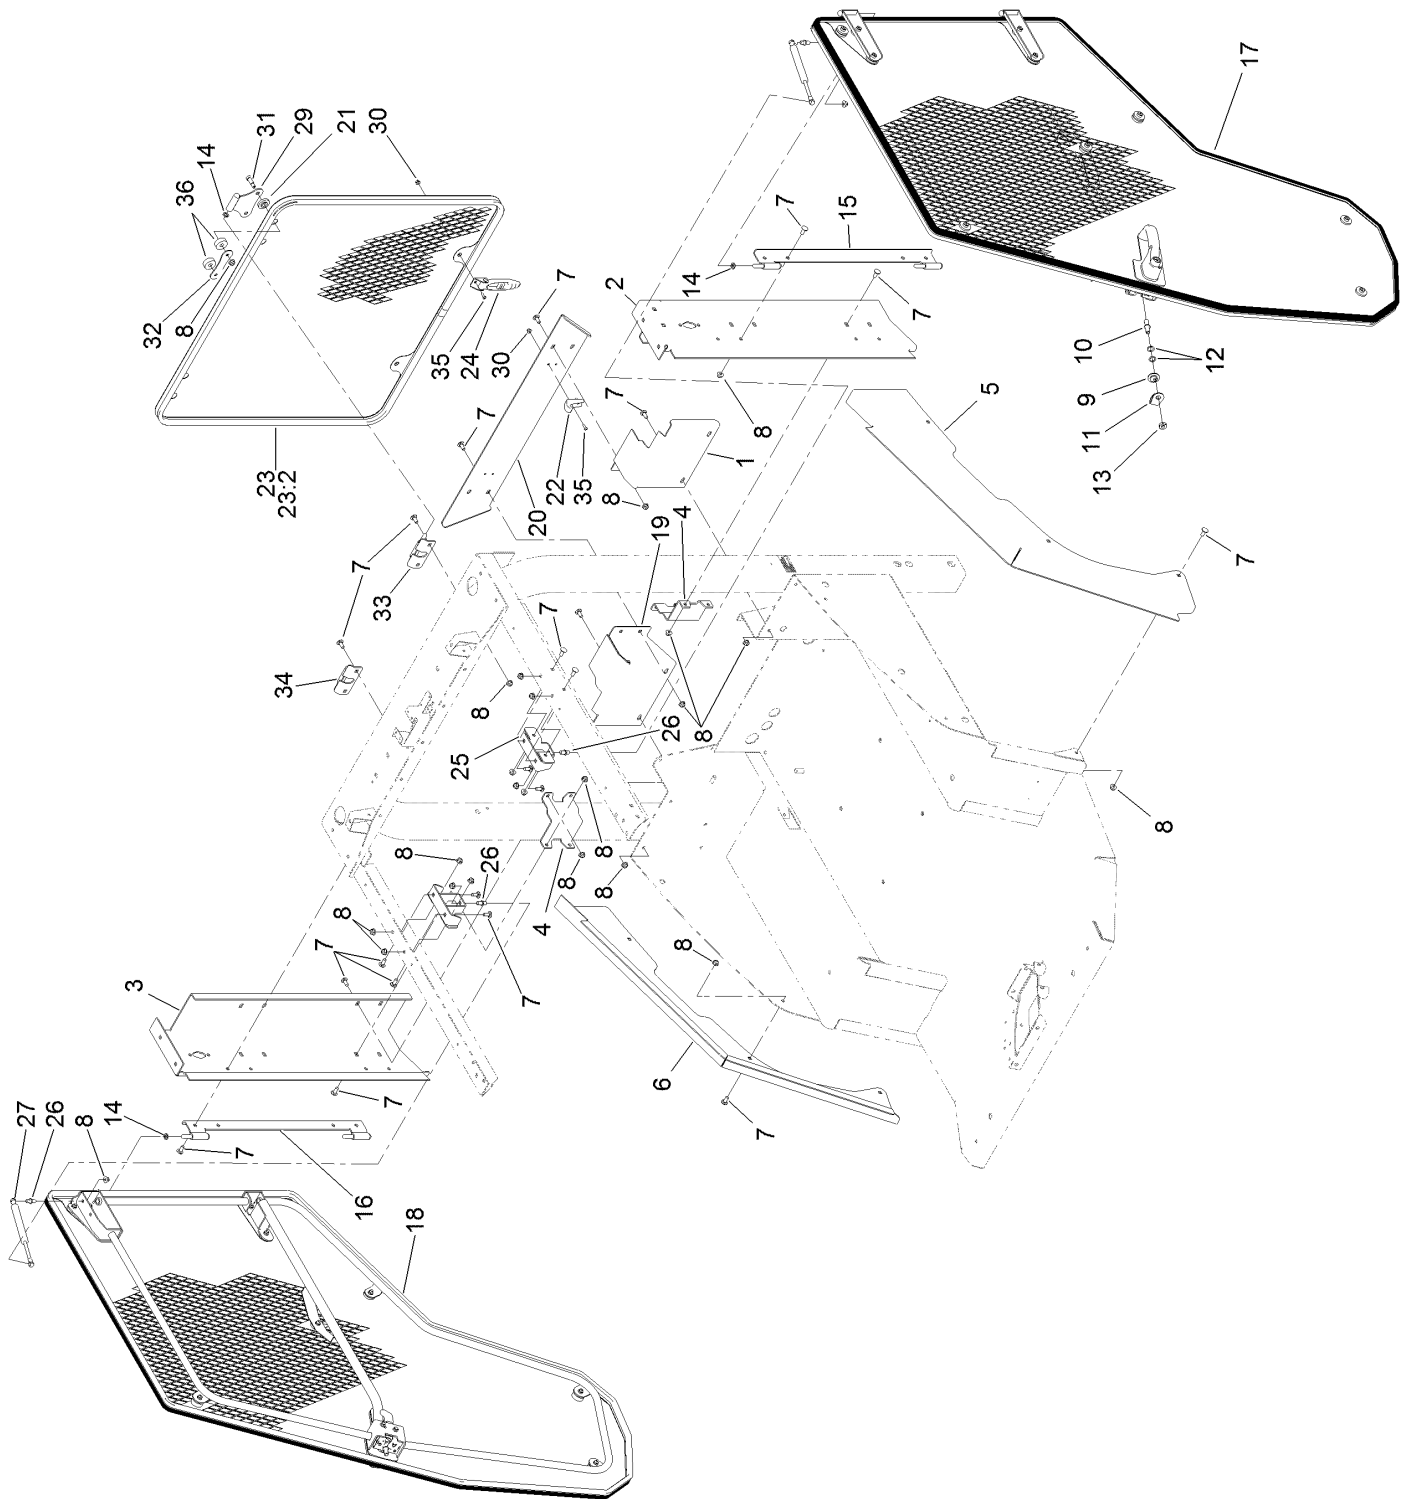


Door Cage and Rear Screen Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-3721-03	1	Panel-Rear, LH	19	132-3733-03	1	Panel-Rear, RH
2	132-3687-03	1	Panel-LH	20	132-3734-03	1	Panel-Rear, Center
3	132-3688-03	1	Panel-RH	21	125-9982	4	Bushing-Flange
4	132-3679-03	2	Mount-Bracket	22	103-2897	2	Latch-Catch
5	132-3689-03	1	Panel-Transition, LH	23	133-0903	1	Rear Screen ASM
6	132-3690-03	1	Panel-Transition, RH	23:2	132-3739	1	Trim-Screen, Rear
7	3230-23	42	Screw-CARR	24	103-2898	2	Latch-Rubber
8	104-8300	50	Nut-HF, NI	25	133-0984-03	2	Mount-Gas Spring
9	125-9992	2	Adjuster-Stud	26	98-3104	4	Stud-Ball
10	132-3718	2	Stud-Striker	27	136-1963	2	Spring-Gas, Door
11	121-8393	2	Guard-Striker	29	121-8535-03	2	Hinge-Window
12	73-0040	4	Washer-Thrust	30	120-4578	6	Nut-HF
13	107-8116	2	Nut-Jam, Adhesive	31	125-9520	4	Screw-Shoulder, HSH
14	121-8441	6	Washer-Spacer	32	127-9933	2	Plate-Backer, Windshield
15	132-3729-03	1	Mount-Door, LH	33	133-0964-03	1	Hinge-LH
16	132-3730-03	1	Mount-Door RH	34	133-0965-03	1	Hinge-RH
17		1	LH Door Cage ASM ●	35	3274-39	6	Screw-HSBH
18		1	RH Door Cage ASM ●	36	125-9537	4	Bushing-Flange

● Not serviced separately

Upper and Lower Windshield Assembly

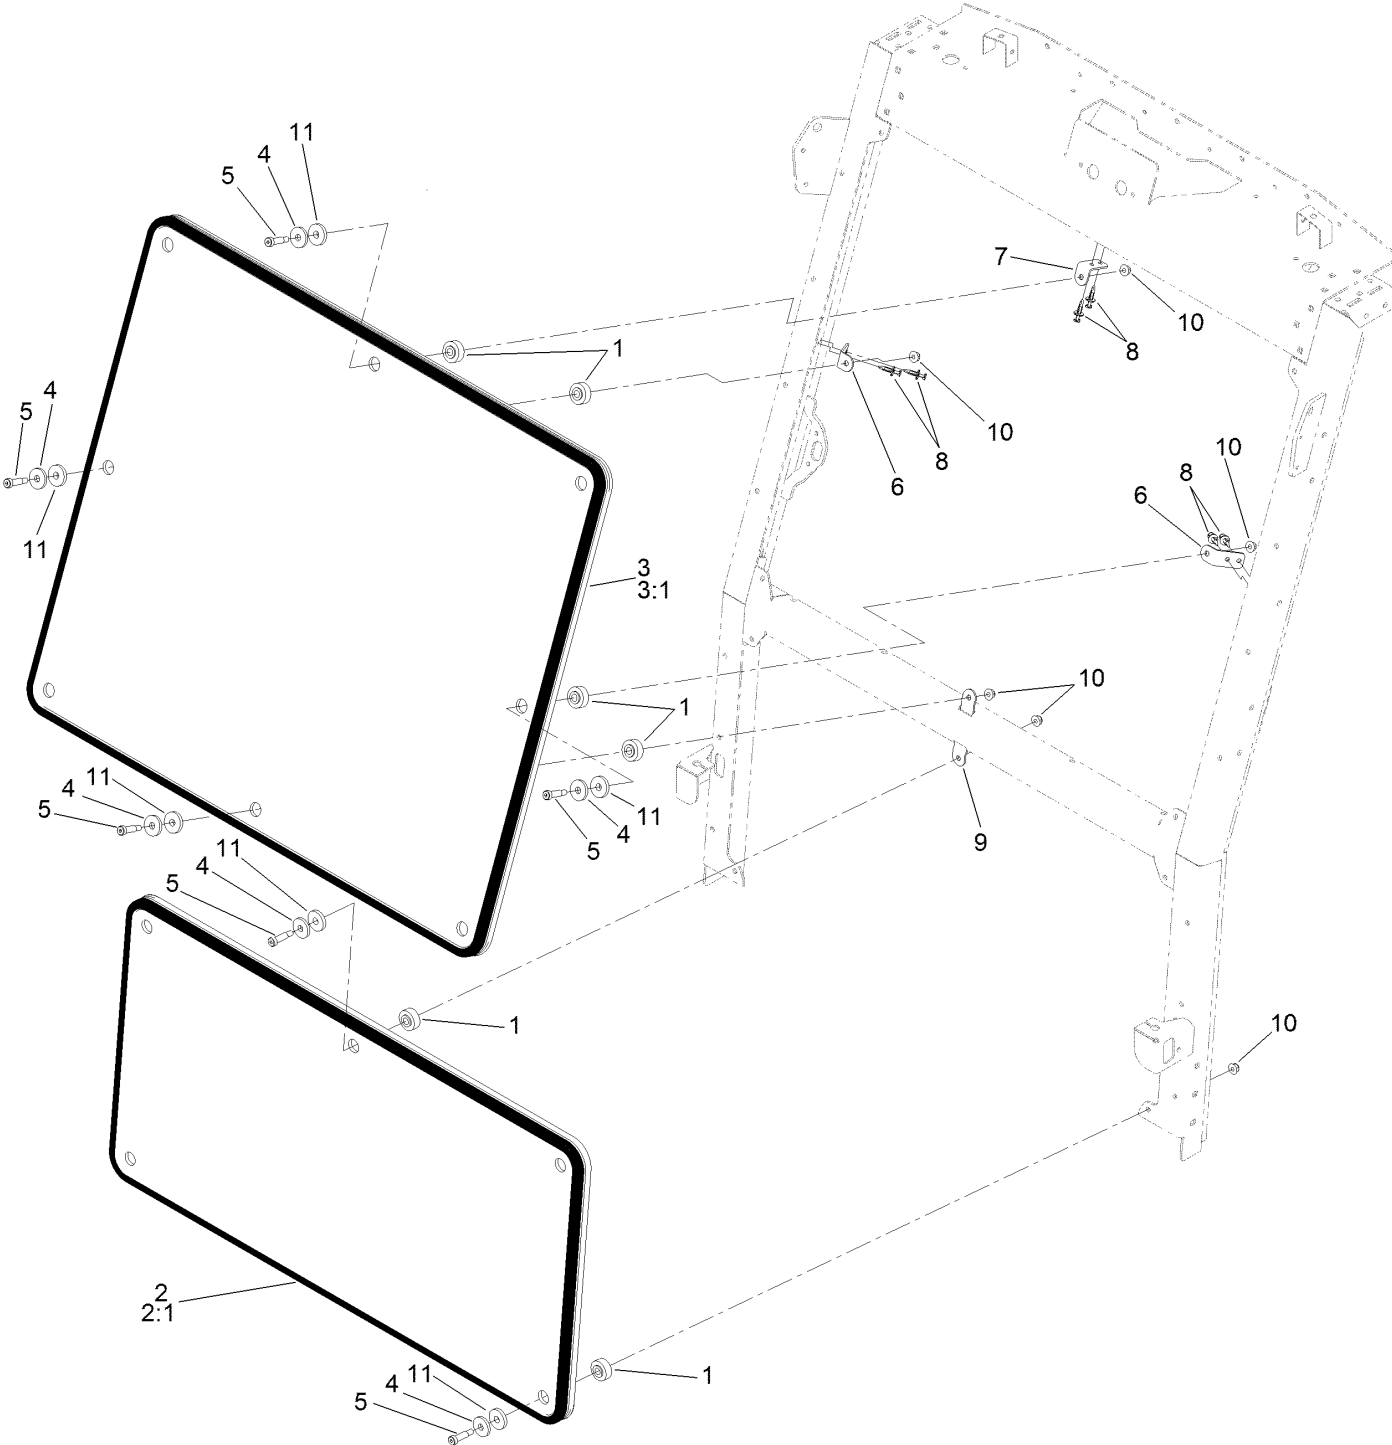


Upper and Lower Windshield Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9537	13	Bushing-Flange
2	133-0836	1	Lower Windshield ASM
2:1	132-3411	1	Trim-Windshield, Lower
3	133-0840	1	Upper Windshield ASM
3:1	132-3414	1	Trim-Windshield, Upper
4	130-5815	13	Washer-Backup
5	125-9521	13	Screw-Shoulder, HSH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	132-3715-03	2	Tab-Mount
7	132-3716-03	1	Tab-Mount
8	125-9622	6	Rivet-Blind
9	132-3717-03	1	Tab-Dual
10	104-8300	13	Nut-HF, NI
11	125-9982	13	Bushing-Flange


LH Door Cage Assembly

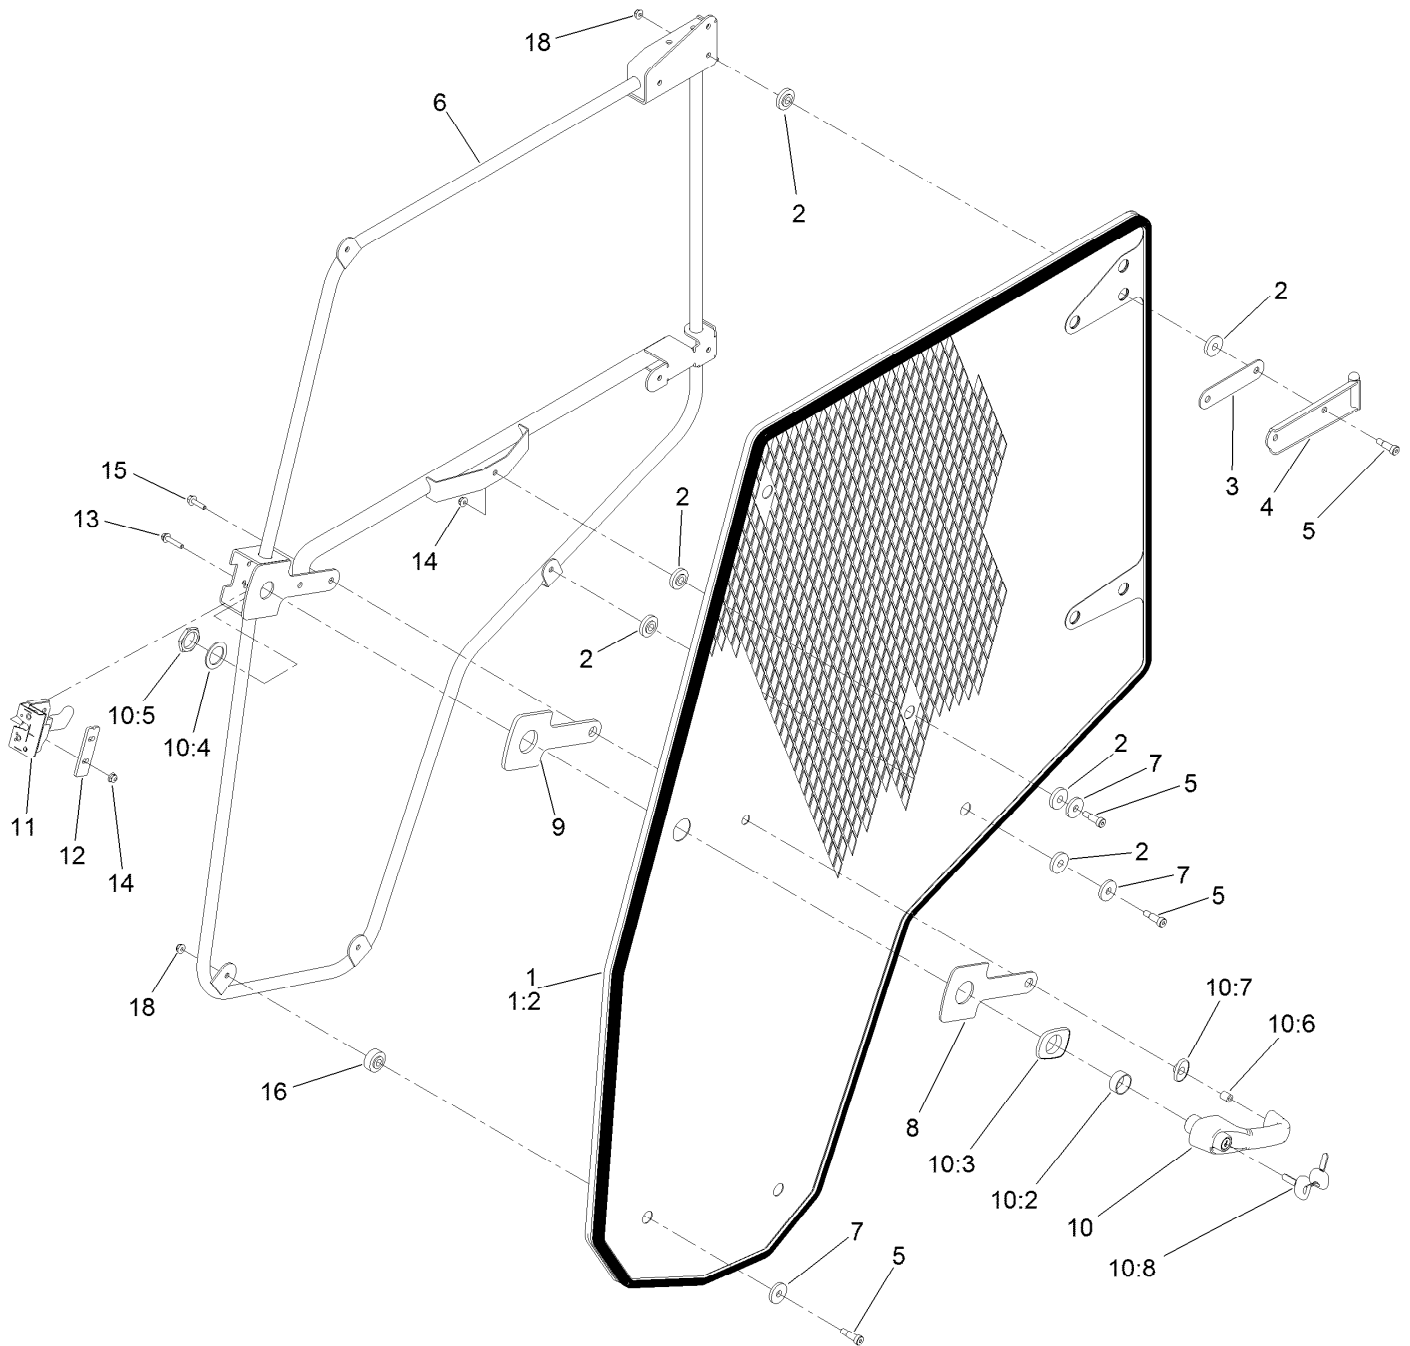

LH Door Cage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-0901	1	LH Screen Door ASM	10:4	121-8327	1	Washer
1:2	133-0900	1	Trim-Door	10:5	121-8328	1	Nut
2	125-9982	14	Bushing-Flange	10:6	121-8627	1	Cylinder-Mounting, End
3	132-3722-03	2	Spacer	10:7	121-8323	1	Grommet-Mounting, Small
4	125-9619-03	2	Hinge-Door, LH	10:8	125-9531	1	Key-Set
5	125-9520	10	Screw-Shoulder, HSH	11	121-8391	1	Latch-LH
6	132-3731-03	1	Frame-Cage, LH Door	12	121-8395	1	Plate-Support, Latch
7	130-5815	6	Washer-Backup	13	3234-21	2	Screw-HHF
8	130-6172-03	1	Spacer	14	104-7201	2	Nut-HF
9	121-8331	1	Gasket-Handle	15	33103-025	1	Screw-HHF
10	121-8630	1	Handle ASM	16	125-9537	3	Bushing-Flange
10:2	121-8628	1	Cylinder-Mounting, Key	18	104-8300	10	Nut-HF, NI
10:3	121-8322	1	Grommet-Mounting, Large				

RH Door Cage Assembly

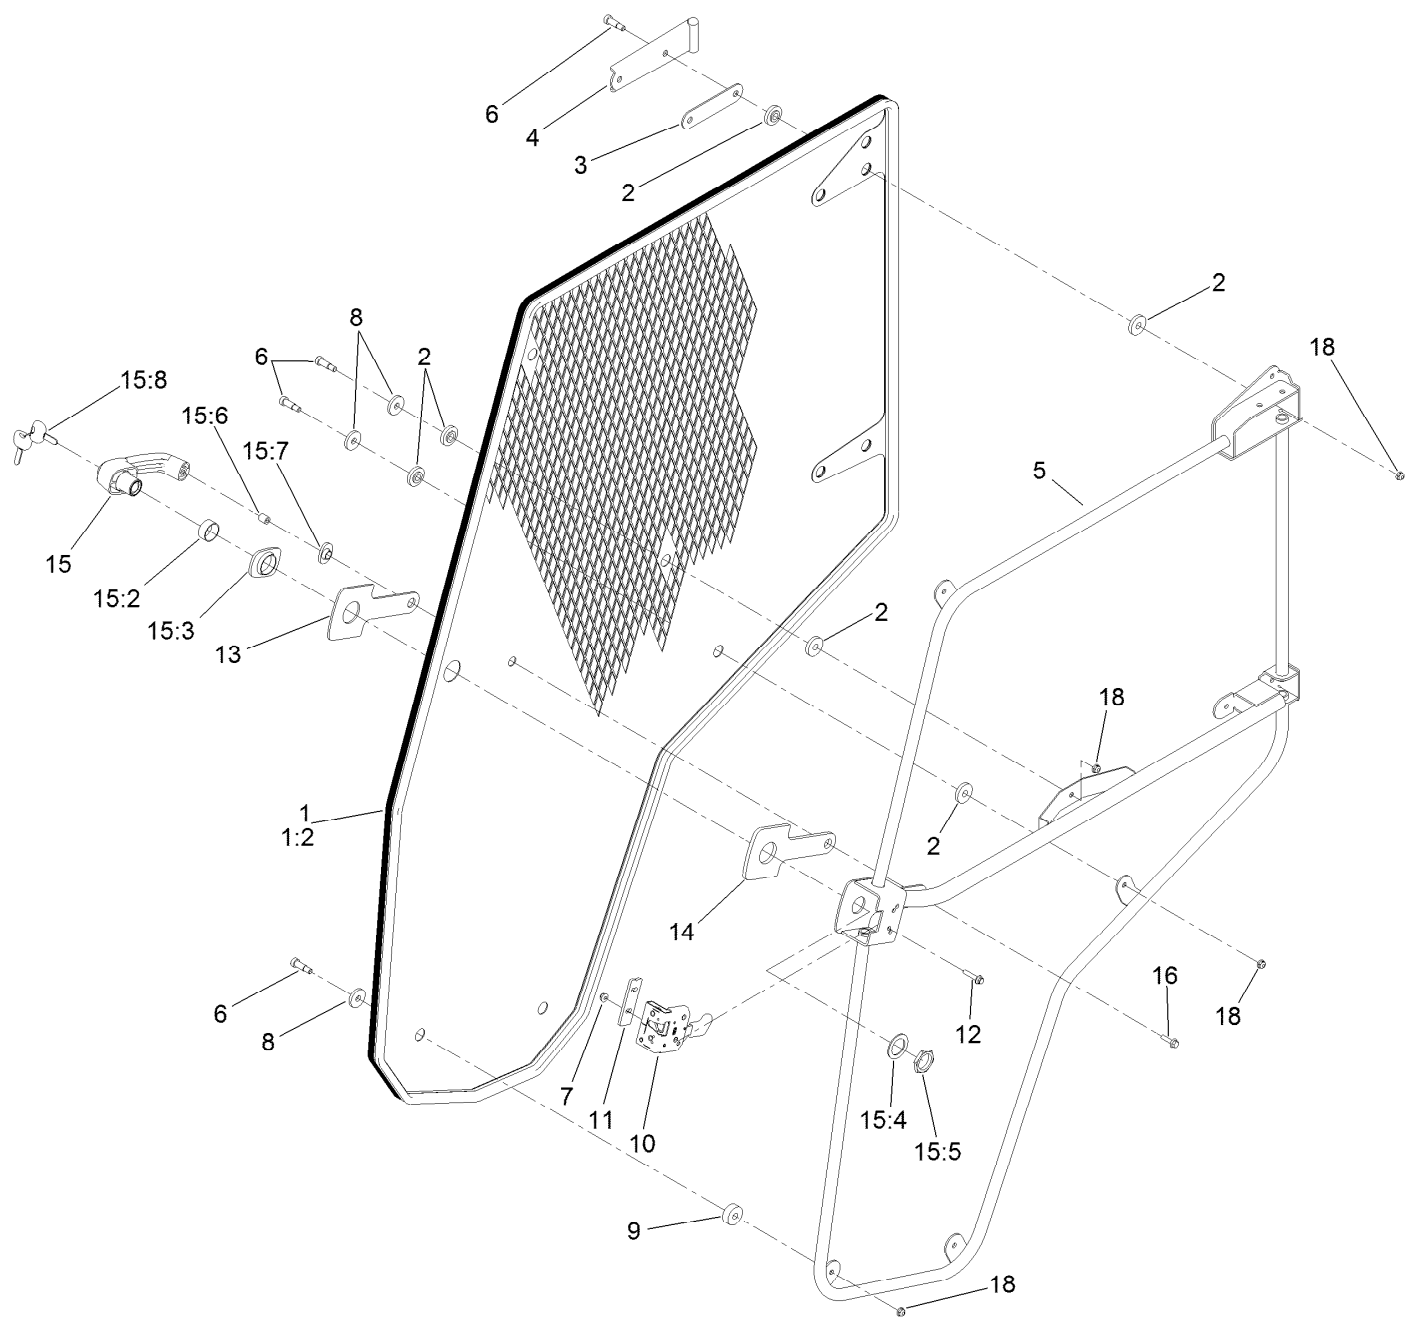

RH Door Cage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-0902	1	RH Screen Door ASM	13	130-6172-03	1	Spacer
1:2	133-0900	1	Trim-Door	14	121-8331	1	Gasket-Handle
2	125-9982	14	Bushing-Flange	15	121-8630	1	Handle ASM
3	132-3722-03	2	Spacer	15:2	121-8628	1	Cylinder-Mounting, Key
4	125-9618-03	2	Hinge-Door, RH	15:3	121-8322	1	Grommet-Mounting, Large
5	132-3732-03	1	Frame-Cage, RH Door	15:4	121-8327	1	Washer
6	125-9520	10	Screw-Shoulder, HSH	15:5	121-8328	1	Nut
7	104-7201	2	Nut-HF	15:6	121-8627	1	Cylinder-Mounting, End
8	130-5815	6	Washer-Backup	15:7	121-8323	1	Grommet-Mounting, Small
9	125-9537	3	Bushing-Flange	15:8	125-9531	1	Key-Set
10	121-8390	1	Latch-RH	16	33103-025	1	Screw-HHF
11	121-8395	1	Plate-Support, Latch	18	104-8300	10	Nut-HF, NI
12	3234-21	2	Screw-HHF				



Count on it.