



Z-MasterTM

**250 Series Z253
with 52" Side
Discharge Mower**

Model No. 74202 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Front Frame Assembly	1	Shields And Clutch Assembly	9
Caster And Wheel Assembly	2	Idler Assembly	10
Rear Frame And Wheel Assembly	3	Electrical System Assembly	11
Brake And Wheel Hub Assembly	4	Frame And Deck Assembly	12
Control Panel Assembly	5	Cover And Rollers Assembly	13
Hydraulic System Assembly	6	Deflector, Spindle And Pulley Assembly	14
Hydraulic System Assembly (Continued)	7	Baffle And Belt Assembly	15
Tank And Fuel Lines Assembly	8	Note:	

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X(Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

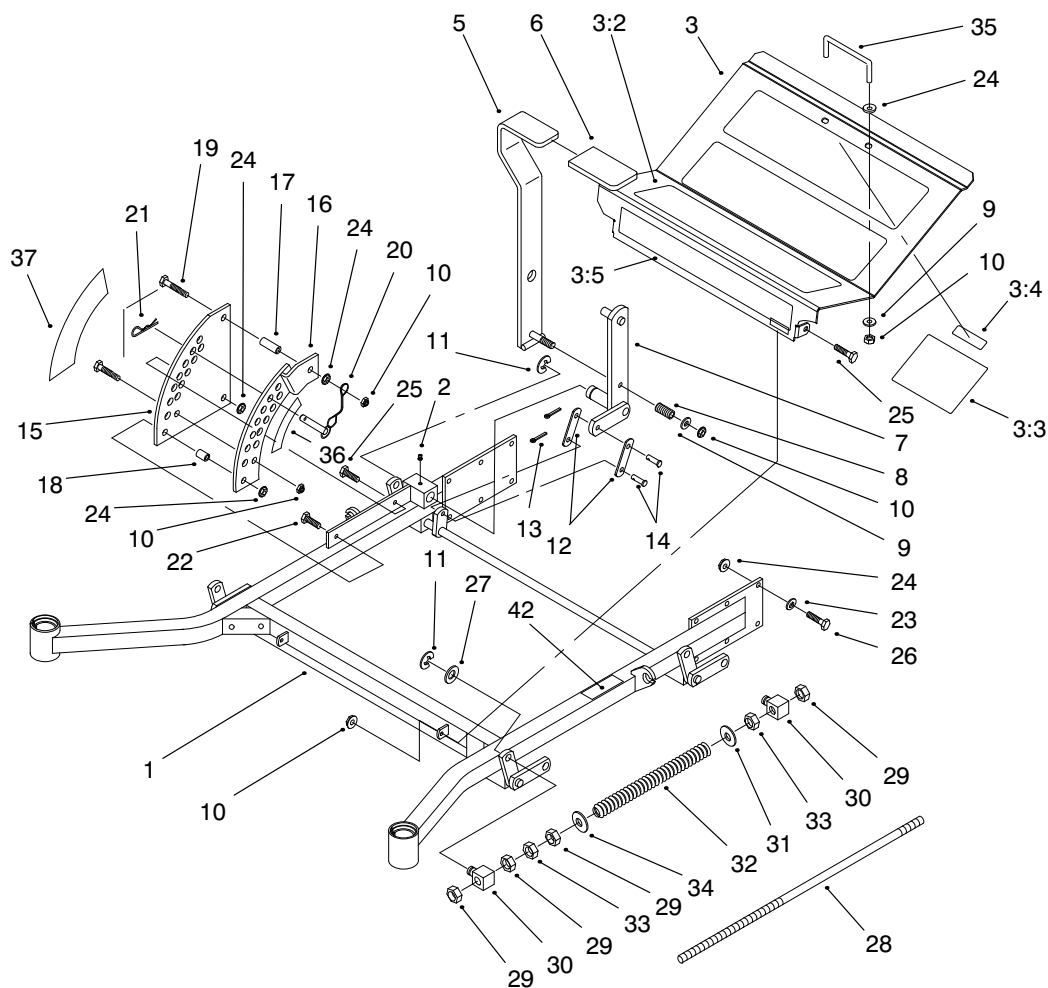


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	E634861	1	Front Frame ASM
2	320-19	5	Fitting-Grease
3	99-4622	1	Floorpan ASM
3:2	E633553	3	Pad-Antiskid
3:3	E633766	1	Decal-Service
3:4	98-5954	1	Decal-Cover Missing
3:5	E633737	1	Decal-Z-Master
5	E632324	1	Lever-Lift
6	E633295	1	Grip-Lift Lever
7	E632219	1	Arm-Deck Lift
8	E633325	1	Spring-Compression
9	3256-24	3	Washer-Flat
10	32146-2	7	Nut-Hex Lock
11	E808505	5	Ring-Retaining
12	E633068	2	Arm-Deck Lift
13	3272-10	2	Pin-Cotter
14	E808284	2	Pin-Clevis
15	E633889	1	Plate-Deck Lift
16	E632899	1	Plate-Deck Lift
17	E633082	1	Bushing
18	E633080	1	Bushing
19	323-13	1	Screw-HH
20	E633097	1	Hitch Pin w/Lanyard
21	E806005	1	Hairpin
22	323-9	2	Screw-HH
23	E303327	12	Washer-Lock


Ref. No.	Part No.	Qty.	Description
24	3290-357	17	Nut-Lock Flange
25	323-6	3	Screw-HH
26	323-7	12	Screw-HH
27	3256-29	4	Washer-Flat
28	E633096	2	Rod-Deck Lift
29	3217-11	8	Nut
30	E633441	4	Swivel-Deck Mount
31	3256-7	2	Washer-Flat
32	E653009	2	Spring-Deck Support
33	3218-6	4	Nut-Hex Jam
34	3256-27	2	Washer-Flat
35	E633587	1	Handle
36	E633706	1	Decal-HOC
37	E633345	1	Decal-HOC
42	E633818	1	Decal

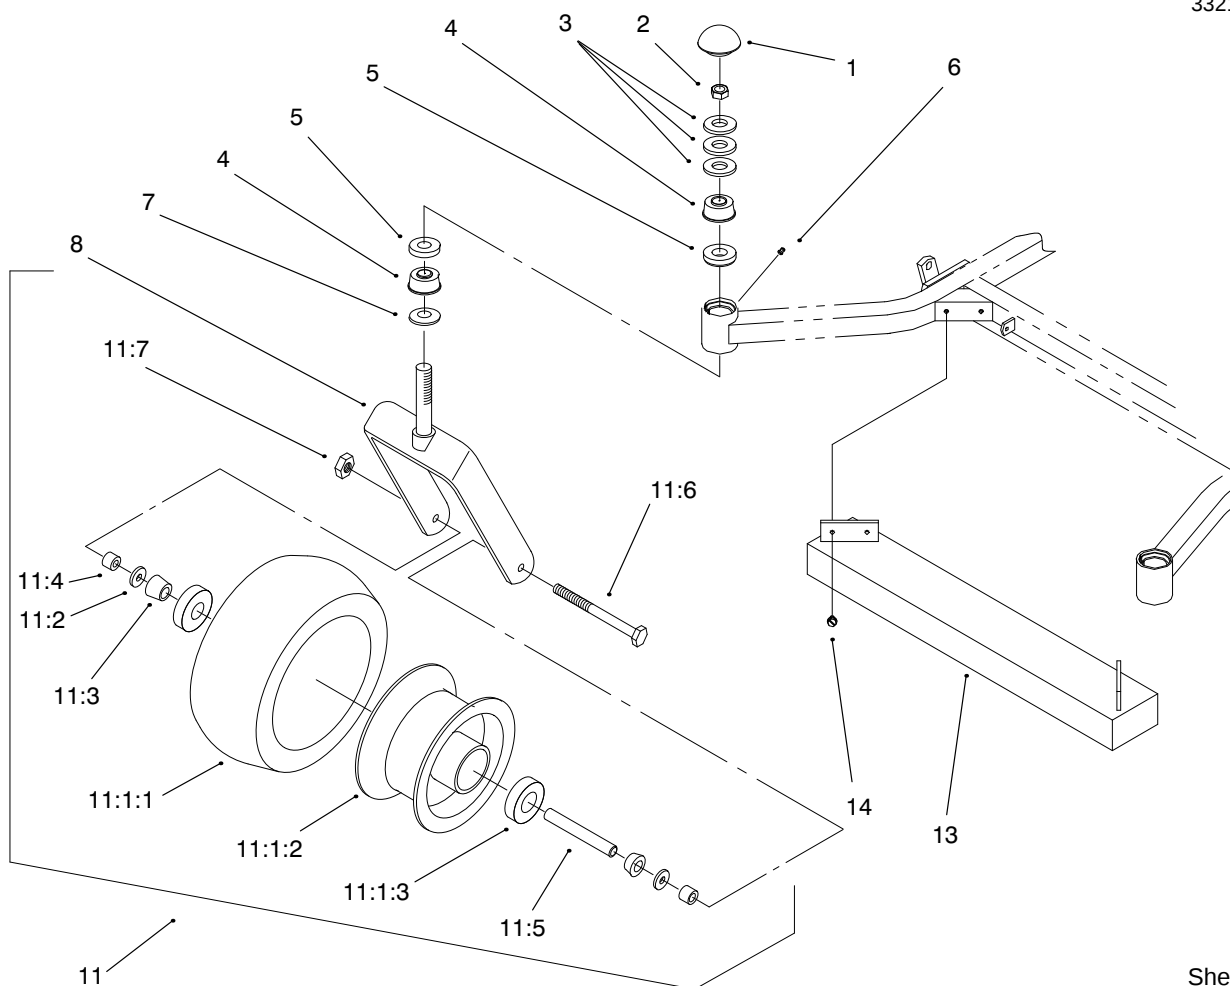

Sheet No.:3

Caster And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E543513	2	Cap—Grease
2	32146—14	2	Nut—Lock
3	E633508	6	Washer—Belleville
4	254—94	4	Cone—Bearing
5	254—72	4	Cup—Bearing
6	E811010	2	Plug
7	E543511	2	Seal—Grease
8	E632511	2	Fork—Castor
11	E634662	2	Caster Wheel ASM
11:1	E633582	2	Wheel & Tire ASM
11:1:1	E633002	2	Tire
11:1:2	E633583	2	Wheel
11:1:3	254—79	4	Cup—Bearing
11:2	E633580	4	Seal—Bearing
11:3	254—78	4	Cone—Bearing
11:4	E633581	4	Spacer — Bearing
11:5	E633579	2	Spacer
11:6	E800339	2	Screw—HH
11:7	E804269	2	Nut—Lock
13	E632802	1	Weight
14	32144—70	4	Screw—Tap

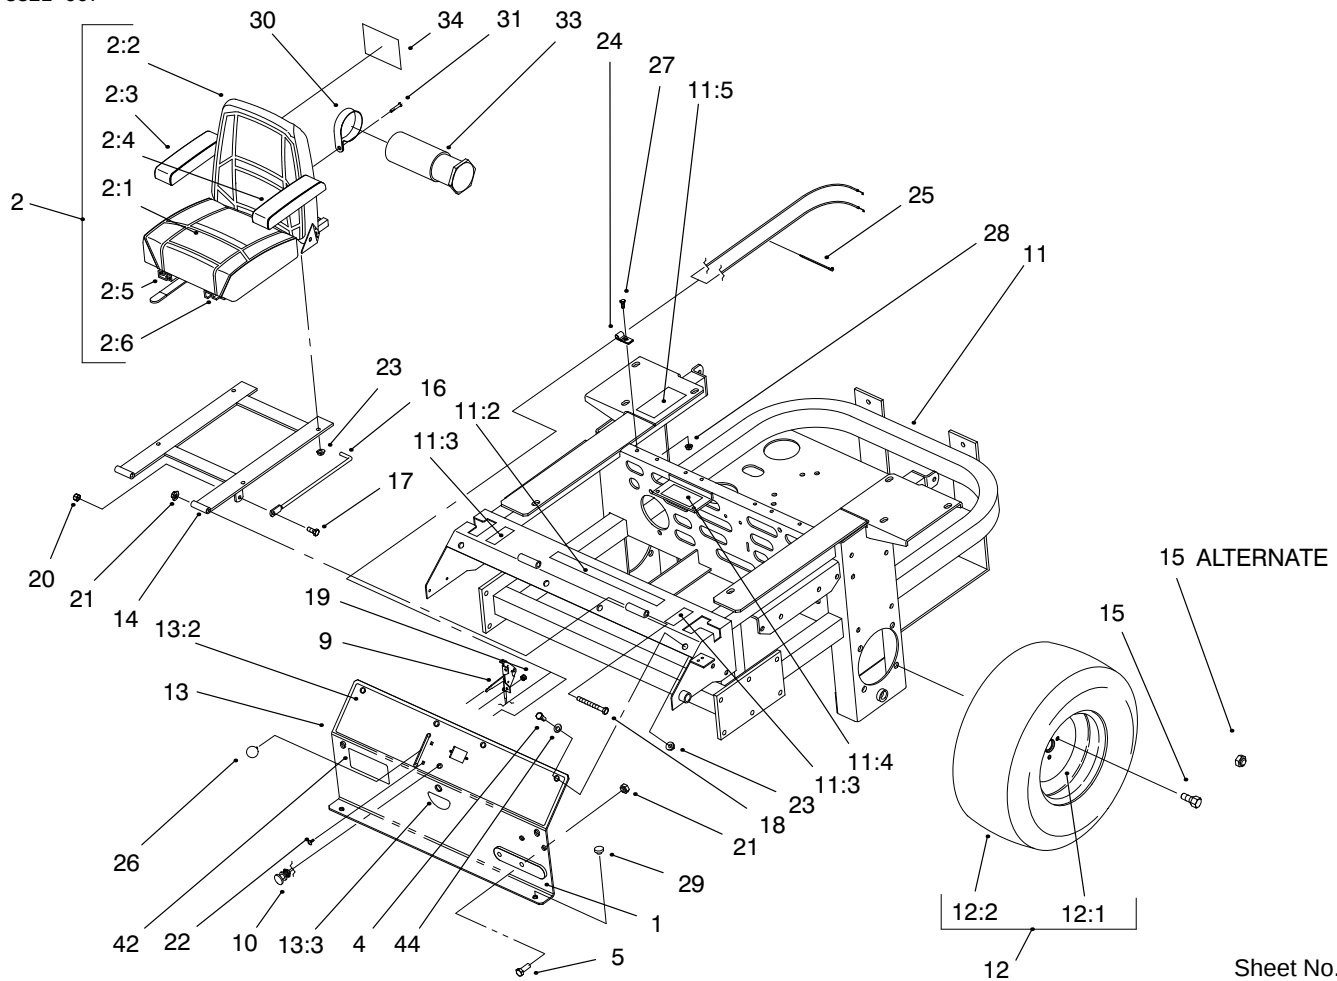


Sheet No.:4

Rear Frame And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E633964	1	Stop-Park Brake
2	99-4635	1	Seat/Armrest ASM (For Serial #990001 – #992999.)
2	E633705	1	Seat/Armrest ASM (For Serial #990001 – #993000 & Up)
2:1	E543407	1	Cushion-Seat
2:2	E633709	1	Cushion-Seat Back
2:3	E633710	1	Armrest-RH
2:4	E633711	1	Armrest-LH
2:5	E543401	4	Spacer-Track
2:6	E523428	1	4" Locking Track Set
4	322-3	8	Screw-HH
5	323-6	2	Screw-HH
9	E633696	1	Cable
10	E603336	1	Cable-Choke
11	99-4624	1	Frame ASM
11:2	E513747	1	Decal-Warning
11:3	E633354	2	Decal-Motion Control
11:4	E513929	1	Decal-Drive Release
11:5	E633771	1	Decal-Pump Belt
12	E633007	2	Wheel & Tire ASM
12:1	E633009	2	Wheel
12:2	E633008	2	Tire
13	99-4623	1	Console ASM

Ref. No.	Part No.	Qty.	Description
13:2	99-4611	1	Decal-Control Panel
13:3	E633346	1	Decal-Fuel Valve
14	E632187	1	Frame-Seat
15	E513011	8	Nut
15	E633273	8	Wheel Bolt
16	E633293	1	Rod-Seat Holdup
17	322-5	1	Screw-HH
18	323-21	2	Screw-HH
19	32146-18	2	Nut-Lock
20	32146-4	2	Nut-Lock
21	32146-2	4	Nut-Hex Lock
22	E807513	2	Bolt-CARR
23	32128-20	12	Nut-Lock
24	E513762	1	Clip
25	E303335	1	Tie-Plastic
26	E513592	1	Knob
27	321-4	1	Screw-HH
28	32128-33	1	Nut-Hex Flange
29	E513658	2	Bumper
30	2412-120	2	Clamp-R
31	E803060	2	Screw
33	74-0720	1	Tube-Manual
34	93-7340	1	Decal-Toro
42	99-4628	1	Decal-Z253
44	3256-23	6	Washer-Flat

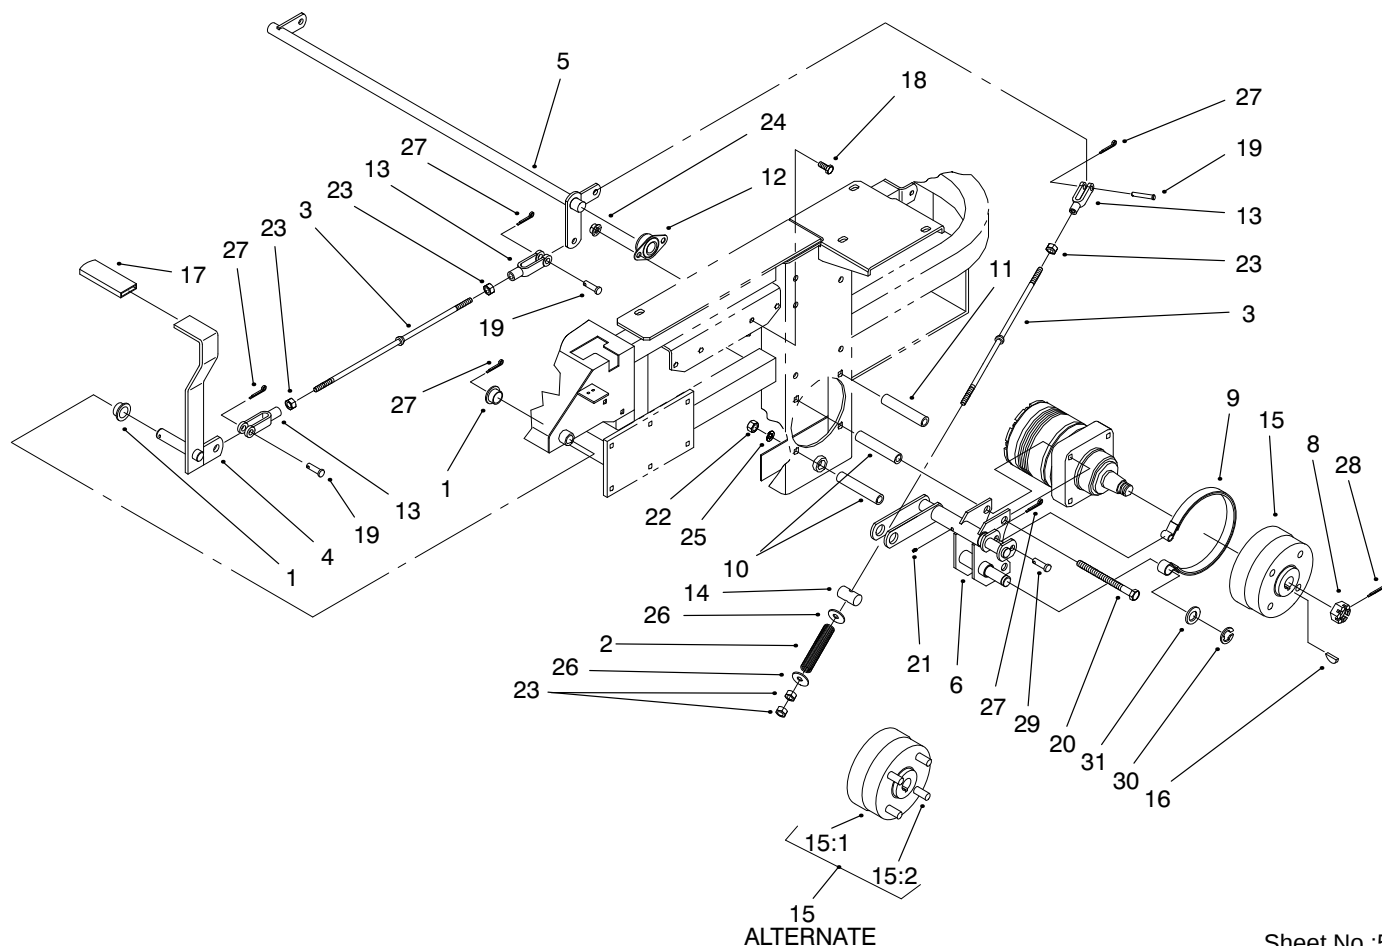


Sheet No.:5

Brake And Wheel Hub Assembly

Ref. No.	Part No.	Qty.	Description
1	E513140	2	Bearing
2	E633454	2	Spring-Brake
3	E633477	3	Rod-Brake
4	E632489	1	Lever-Brake
5	E632217	1	Shaft-Brake
6	E632714	1	Brake Bracket-LH
*7	E632715	1	Brake Bracket-RH
8	E809036	1	Nut
9	E633693	2	Brake Band
10	E633380	4	Spacer
11	E633382	4	Spacer
12	E633102	2	Bearing-Side Flange
13	E633131	4	Yoke-Brake Linkage
14	E633144	2	Pin-Trunnion
15	E633548	2	Hub-Wheel
15	E634927	2	Wheel Hub w/Studs
15:1	E633980	2	Hub
15:2	E633926	8	Stud-Wheel
16	E807020	2	Key-Woodruff
17	E633268	1	Grip-Brake Lever
18	323-4	4	Screw-HH
19	E808285	4	Pin-Clevis
20	325-17	8	Screw-HH
21	E811007	2	Fitting-Grease
22	3217-9	8	Nut-HH
23	3219-3	8	Nut-Hex

Ref. No.	Part No.	Qty.	Description
24	3290-357	4	Nut-Lock Flange
25	3253-7	8	Washer-Lock
26	3256-4	4	Washer-Flat
27	3272-10	7	Pin-Cotter
28	E806800	2	Pin-Cotter
29	E808283	2	Pin-Clevis
30	E808514	2	E Ring Retainer
31	3256-28	2	Washer

* Not Illustrated

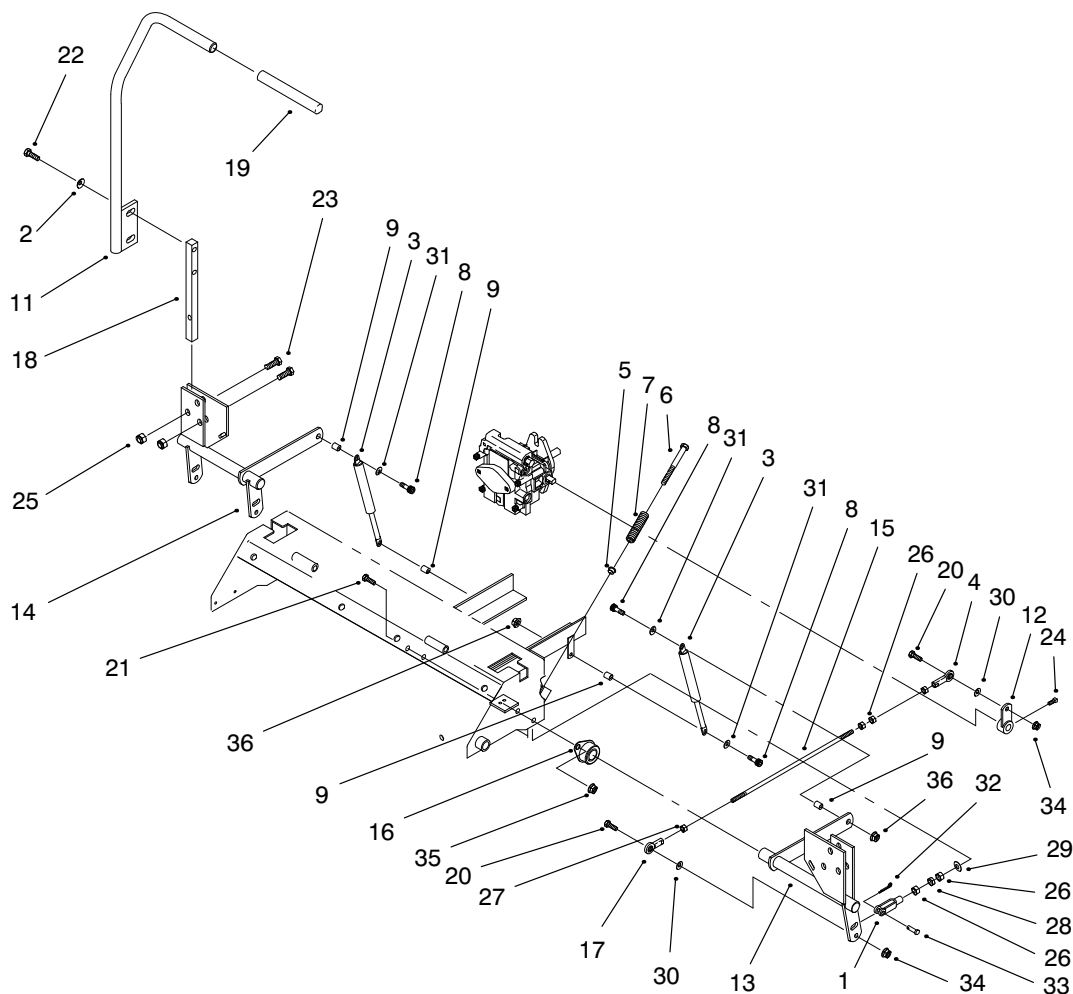


Sheet No.:6

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	E303105	2	Yoke
2	E303327	4	Washer-Lock
3	E523027	2	Damper
4	E543017	2	Ball Joint
5	E603735	2	Bushing
6	E603737	2	Bolt
7	E603807	2	Spring
8	E809057	4	Screw-HSH
9	E603903	4	Spacer
*10	E632191	1	Lever-Control LH
11	E632193	1	Lever-Control RH
12	E632208	2	Arm-Pump Control
13	E632911	1	Motion Control
14	E632912	1	Motion Control
15	E633153	2	Linkage
16	E633102	4	Bearing-Side Flange
17	E633152	2	Ball Joint LH
18	E633177	2	Arm
19	E633257	2	Grip
20	322-6	4	Screw-HH
21	323-4	8	Screw-HH
22	323-6	4	Screw-HH
23	323-9	6	Screw-HH
24	E803022	2	Screw-Set
25	32146-2	6	Nut-Hex Lock
26	3219-2	10	Nut

Ref. No.	Part No.	Qty.	Description
27	E804524	2	Nut
28	3220-2	2	Nut-Jam
29	3256-2	2	Washer-Flat
30	3256-3	4	Washer-Flat
31	3256-23	4	Washer-Flat
32	3272-5	2	Pin-Cotter
33	E808280	2	Pin-Clevis
34	32128-20	4	Nut-Lock
35	3290-357	8	Nut-Lock Flange
36	32128-33	4	Nut-Hex Flange

* Not Illustrated

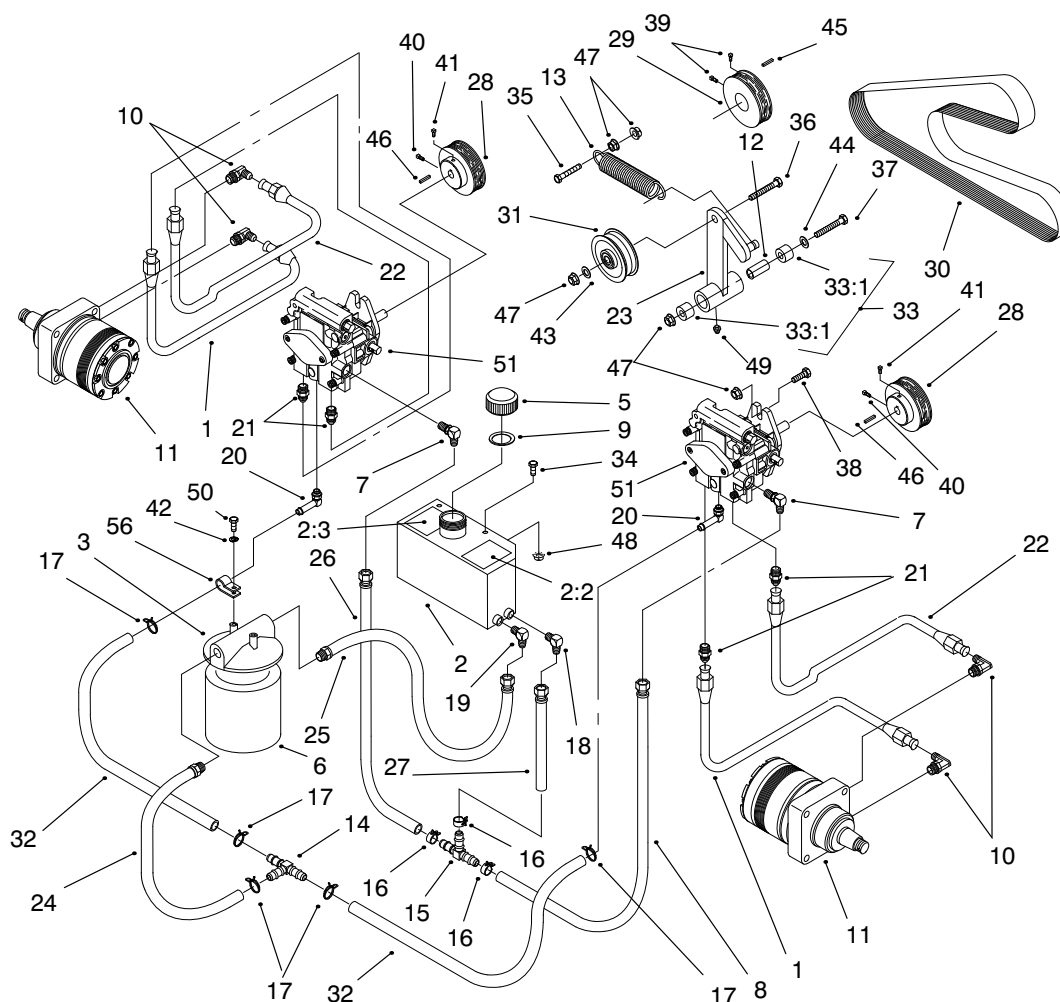


Sheet No.:7

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	E633774	2	Hose	20	E603989	2	Elbow
2	99-4625	1	Hydraulic Tank ASM	21	E603990	4	Adapter
2:2	65-2690	1	Decal-Hot Surface	22	E633775	2	Hose
2:3	E513890	1	Decal-Hydraulic Tank	23	E632201	1	Arm-Pump Idler
3	E513006	1	Filter Head	24	E632281	1	Hose ASM-Low Pressure
5	E513167	1	Cap	25	E632282	1	Hose ASM-Low Pressure
6	E633750	1	Filter-Hydro	26	E632285	1	Hose ASM-Low Pressure
6	E633752	1	Filter-Winter Hydro	27	E632286	1	Hose ASM-Low Pressure
7	E513840	2	Elbow	28	E633568	2	Sheave
8	E522217	1	Hose ASM-Low Pressure	29	E633567	1	Sheave
9	E523103	1	Gasket	30	E633749	1	Belt
10	E633786	4	Elbow 90°	31	E633167	1	Pulley-Idler
11	E523328	2	Motor-Wheel	32	E633335	2	Hose-Low Pressure
*11:1	E000099	2	Kit-Seal	33	E634277	1	Arm ASM
*11:2	E807020	2	Key-Woodruff	33:1	E513034	2	Bearing-Pivot
*11:3	E000139	2	Kit-Bearing	34	321-4	2	Screw-HH
*11:4	E809036	2	Nut	35	323-8	1	Screw-HH
12	E603384	1	Bushing				
13	E603413	1	Spring-Extension				
14	E603721	1	Fitting-Tee				
15	E603722	1	Fitting-Tee				
16	E603826	3	Clamp-Hose				
17	E603827	5	Clamp-Hose				
18	E603987	1	Elbow				
19	E603988	1	Elbow				

* Not illustrated

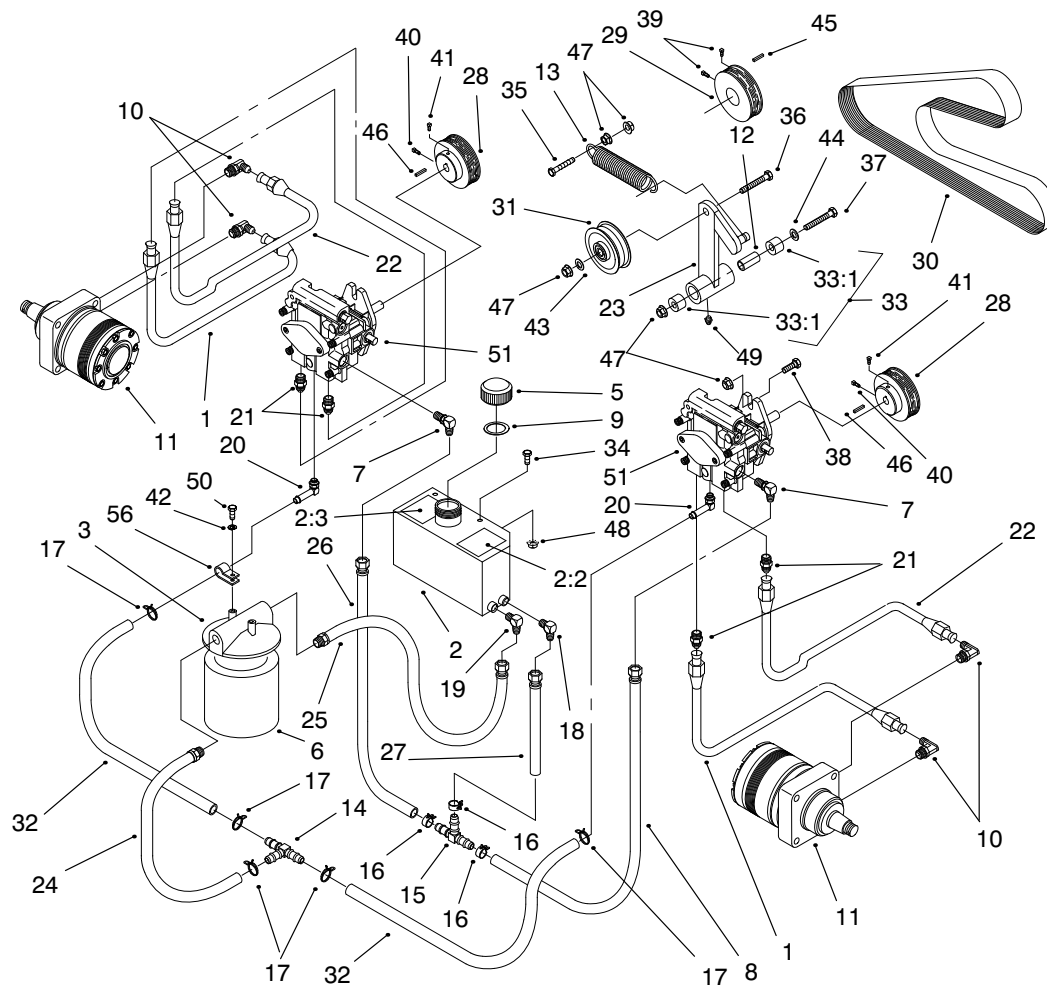


Sheet No.:7

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
36	323-9	1	Screw-HH
37	E800805	1	Screw-HH
38	E803016	4	Bolt
39	E803022	2	Screw-Set
40	3242-6	2	Screw-Sqh Set
41	3242-4	2	Screw-Set
42	3253-3	2	Washer-Lock
43	3256-3	1	Washer-Flat
44	3256-4	1	Washer-Flat
45	13-2840	1	Key
46	E807272	2	Key
47	3290-357	8	Nut-Lock Flange
48	32128-33	2	Nut-Hex Flange
49	E811008	1	Fitting-Grease
50	321-3	2	Screw-HH
51	E603841	2	Pump - Hydro RH
56	E513762	1	Clip

Ref. No.	Part No.	Qty.	Description

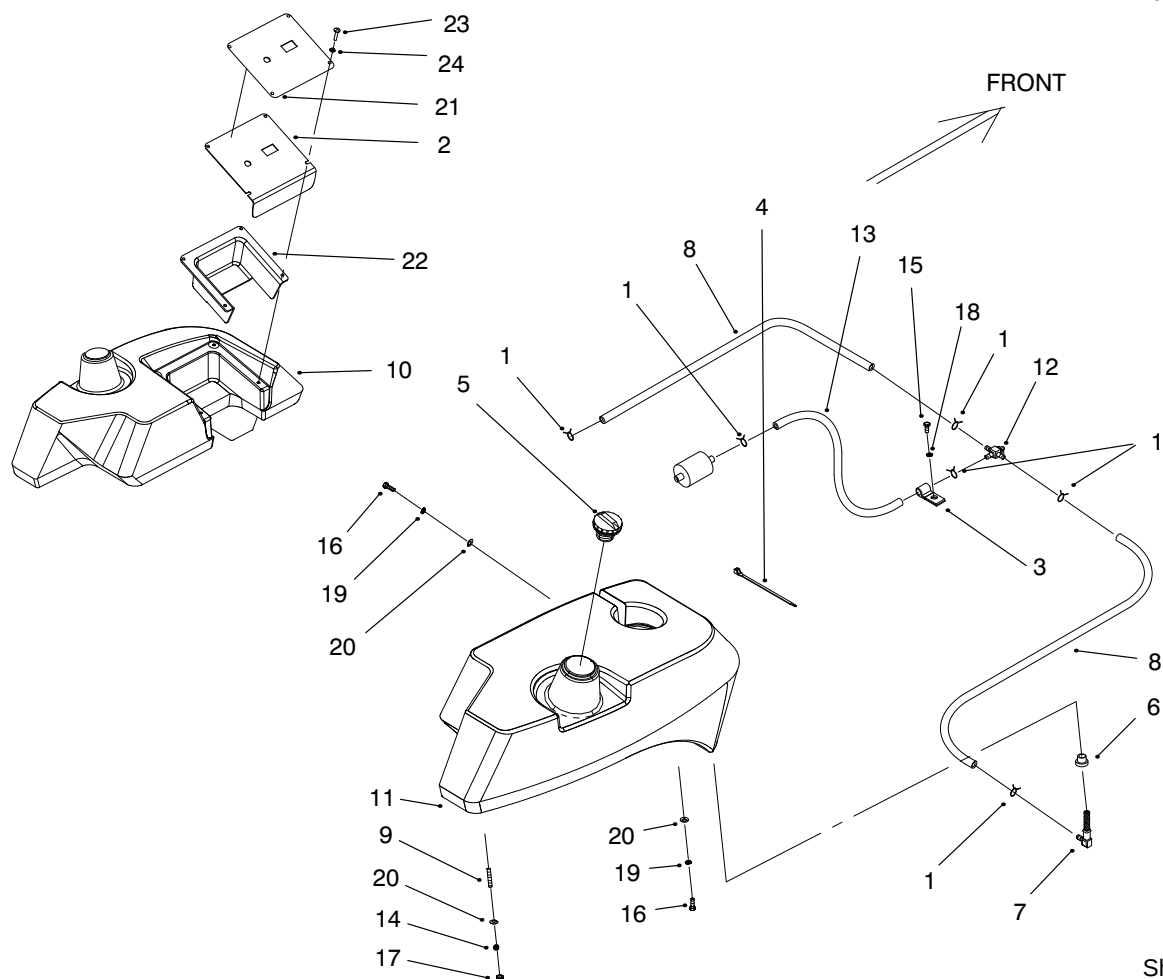


Sheet No.:8

Tank And Fuel Lines Assembly

Ref. No.	Part No.	Qty.	Description
1	E303077	6	Clamp
2	99-4656	1	Panel-Control
3	E513762	1	Clip
4	E303335	1	Tie-Plastic
5	93-3101	2	Gas Cap
6	E513645	2	Bushing
7	E543277	2	Elbow
8	E543456	2	Line-Fuel
9	E653314	6	Stud
10	99-4608	1	Tank-LH Fuel
11	99-4607	1	Tank-RH Fuel
12	E633347	1	Valve-Fuel Line
13	E633348	1	Fuel Line
14	E633349	6	Spring-Fuel Tank
15	321-3	2	Screw-HH
16	322-3	4	Screw-HH
17	3296-29	6	Nut-Lock
18	3253-3	2	Washer-Lock
19	3253-4	4	Washer-Lock
20	3256-23	10	Washer-Flat
21	99-4632	1	Decal-Control Panel
22	99-4940	1	Shield-Control Panel
23	E803071	4	Screw
24	E303435	4	Washer

Ref. No.	Part No.	Qty.	Description

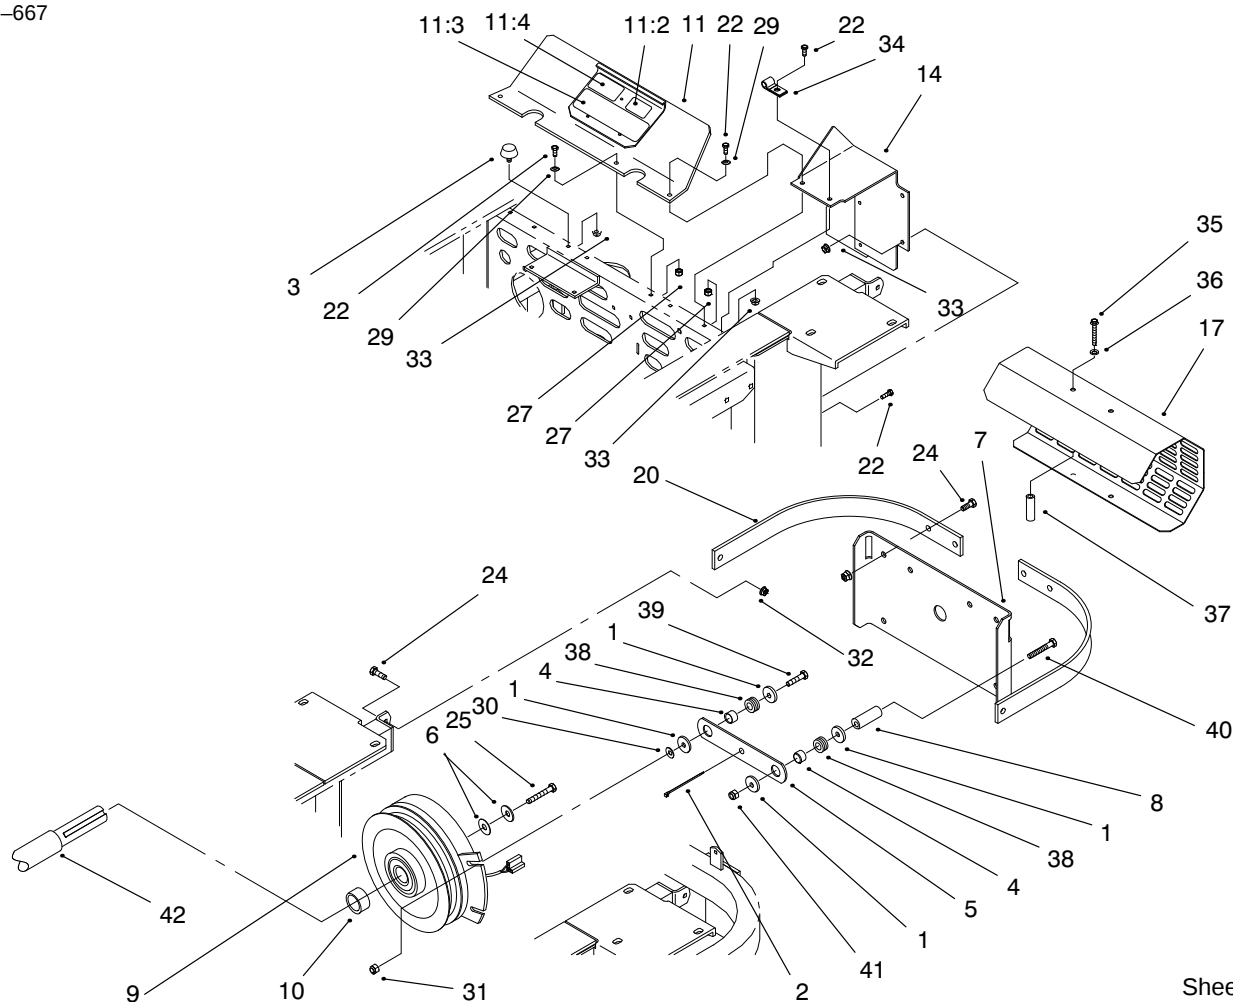


Sheet No.:9

Shields And Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	E613235	4	Washer
2	E303335	1	Tie-Plastic
3	E523420	2	Bumper
4	E633545	2	Spacer-Grommet
5	E633543	1	Strap-Clutch
6	E603610	2	Disc-Spring
7	E633615	1	Guard
8	E633988	1	Spacer
9	E633098	1	Clutch
10	E633453	1	Spacer
11	E634862	1	Shield ASM
11:2	E513748	1	Decal-Guard
11:3	E303517	1	Decal-Belt Drive
11:4	E633462	1	Decal-Important
14	E634796	1	Shield-LH
17	E633466	1	Guard-Muffler
*18	E634797	1	Shield-RH
20	E633613	2	Bracket-Guard
22	321-4	10	Screw-HH
24	323-6	6	Screw-HH
25	3212-10	1	Screw
27	32146-17	4	Nut-Lock
29	3256-2	4	Washer-Flat
30	3256-3	1	Washer-Flat
31	32128-20	1	Nut-Lock
32	3290-357	4	Nut-Lock Flange

Ref. No.	Part No.	Qty.	Description
33	32128-33	7	Nut-Hex Flange
34	E633396	1	Clip
35	E809076	2	Screw-HH
36	E323235	2	Washer-Spring
37	E323236	2	Spacer
38	E633630	2	Grommet
39	322-6	1	Screw-HH
40	322-19	1	Screw
41	3296-29	1	Nut-Lock
42	E643026	1	Kohler Command Ch22


* Not Illustrated

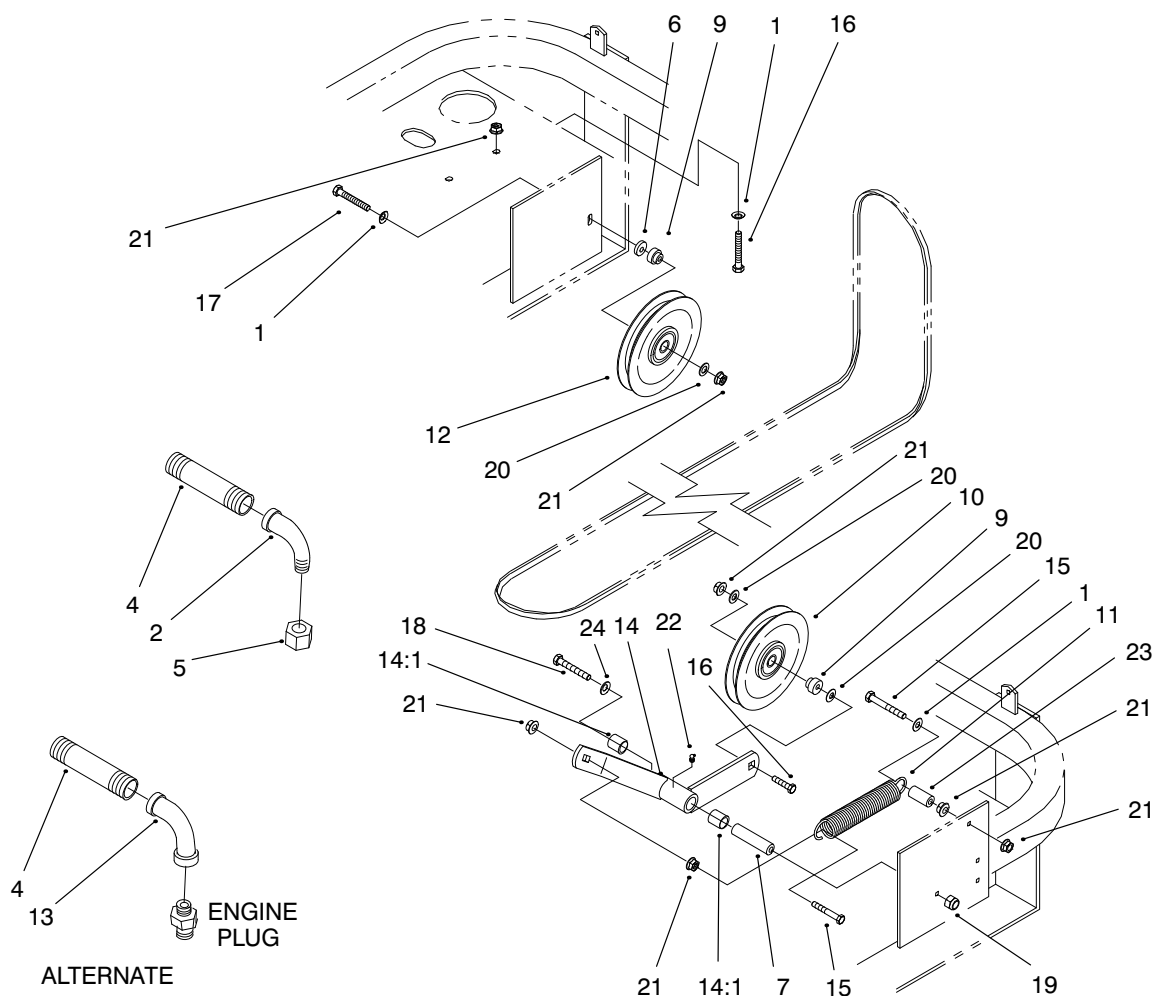

Sheet No.:10

Idler Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	E303327	5	Washer-Lock				
2	E403124	1	Elbow Street				
4	E543232	1	Nipple				
5	E543233	1	Cap				
6	E603050	1	Spacer				
7	E603384	1	Bushing				
9	E603496	2	Bushing				
10	E603805	1	Pulley-Idler				
11	E603402	1	Spring				
12	E633166	1	Pulley-Belt				
13	E303428	1	Elbow				
14	E632469	1	Idler Arm ASM				
14:1	E513034	2	Bearing-Pivot				
15	323-11	2	Screw				
16	323-9	5	Screw-HH				
17	323-13	1	Screw-HH				
18	E800805	1	Screw-HH				
19	32146-2	1	Nut-Hex Lock				
20	3256-24	4	Washer-Flat				
21	3290-357	10	Nut-Lock Flange				
22	E811008	1	Fitting-Grease				
23	E603401	1	Spacer-Fender				
24	3256-4	1	Washer-Flat				

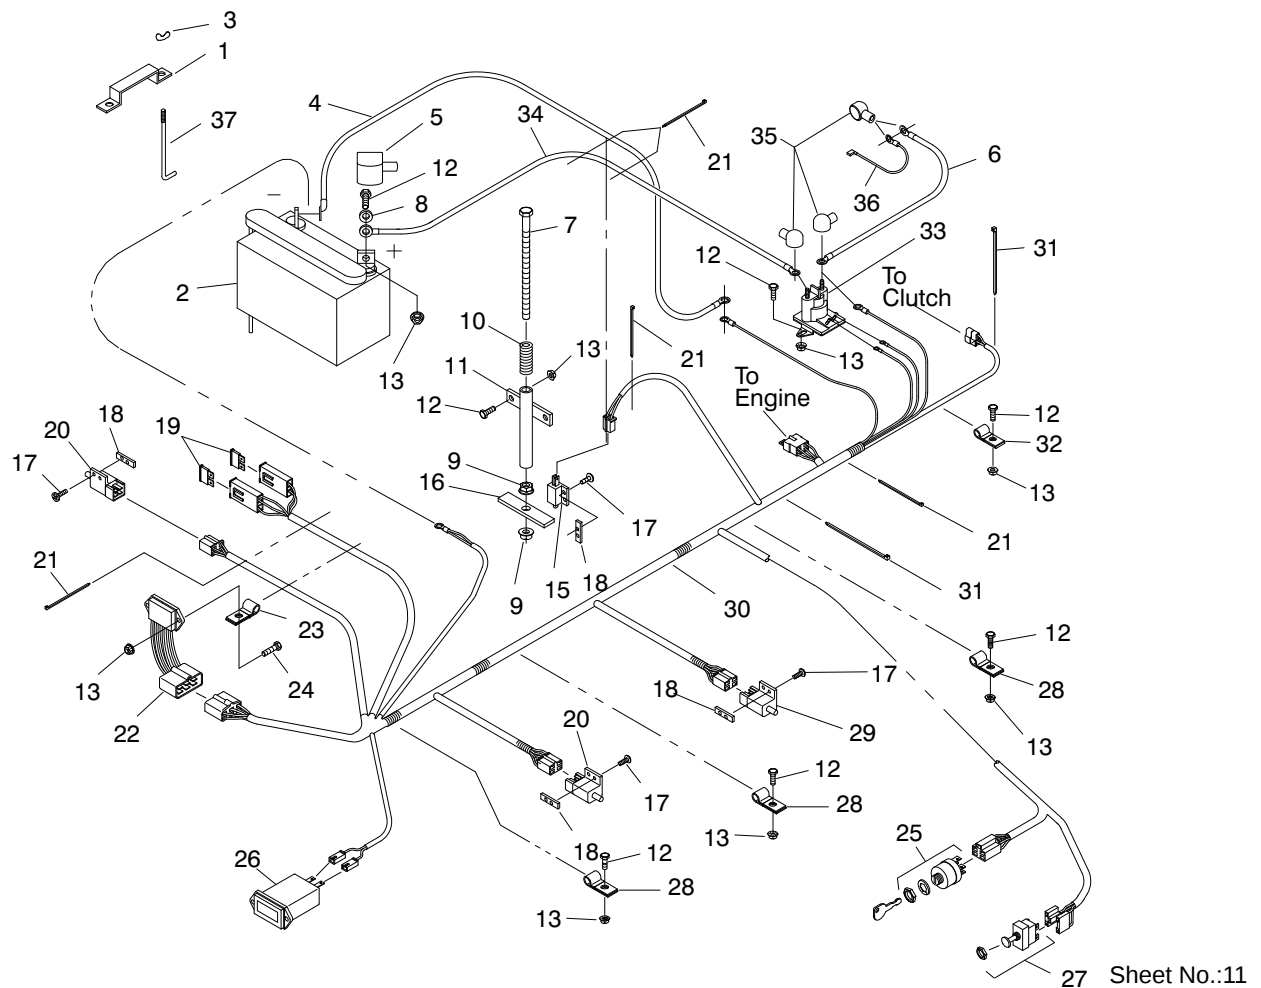

Electrical System Assembly

Ref. No.	Part No.	Qty.	Description
1	E633652	1	Strap-Hold Down
2	E603479	1	Battery
3	E543792	2	Wingnut
4	E633307	1	Wire-Ground
5	E543391	1	Insulator-Battery
6	E633306	1	Wire-Starter
7	E800282	1	Screw
8	3256-2	2	Washer-Flat
9	32128-20	2	Nut-Lock
10	E523415	1	Spring
11	E522424	1	Mount-Spring
12	321-4	8	Screw-HH
13	32128-33	11	Nut-Hex Flange
15	E513152	1	Switch-Seat
16	E513180	1	Actuator-Switch
17	E803028	8	Screw
18	E633181	4	Plate
19	E816001	2	Fuse-20 Amp
20	E633111	2	Switch-Drive Lever
21	E303287	5	Tie-Plastic
22	E543316	1	Module-Interlock
23	E513762	1	Clip
24	321-6	1	Screw-HH
25	E543070	1	Switch-Ignition
26	E513374	1	Meter-Hour
27	E633673	1	Switch-PTO

Ref. No.	Part No.	Qty.	Description
28	E633396	3	Clip
29	E633110	1	Switch-Brake
30	E643119	1	Harness
31	E303335	2	Tie-Plastic
32	E323229	1	Clip
33	E513075	1	Switch-Solenoid
34	E523281	1	Wire-Starter
35	E543393	3	Insulator-Solenoid
36	E543084	1	Wire-Starter Solenoid
37	E633651	2	Bolt-Battery

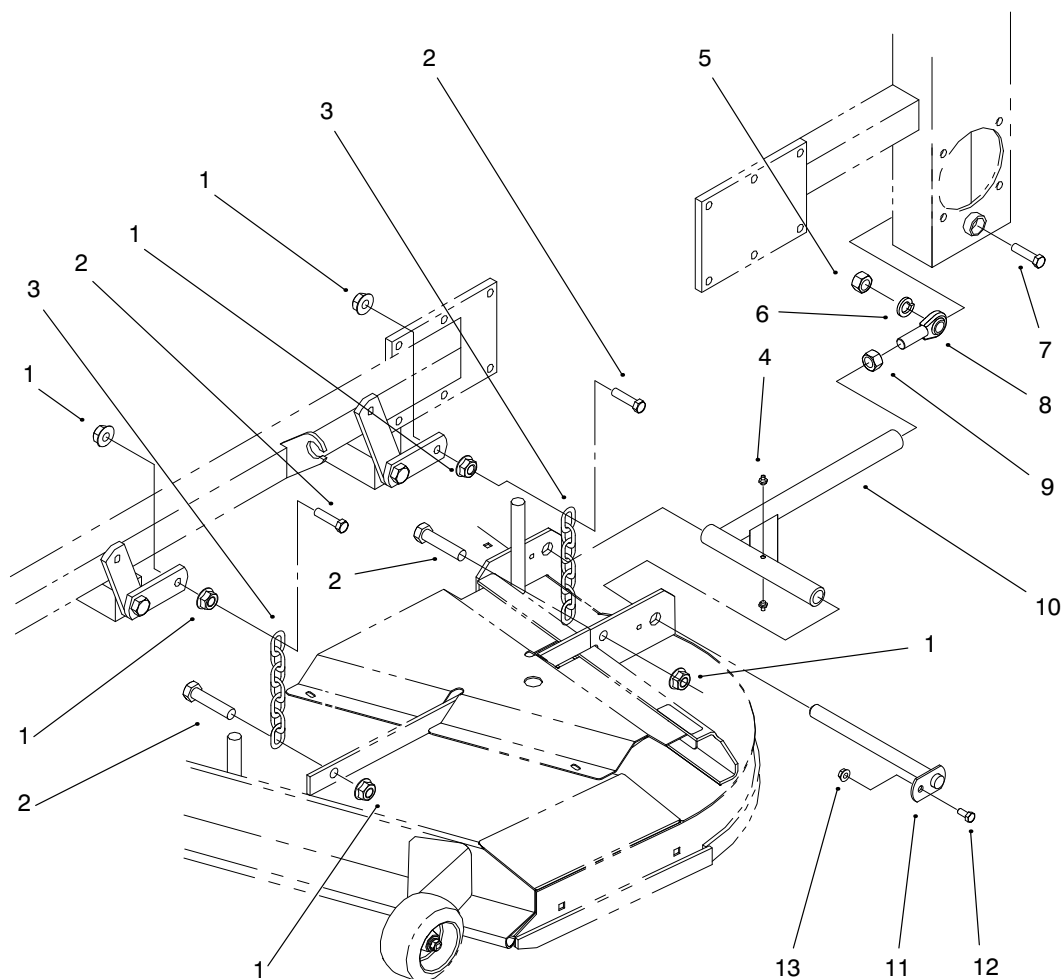


Sheet No.:12

Frame And Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-37	16	Nut-Lock
2	324-6	8	Screw-HH
3	E633447	4	Chain-Lift
4	302-19	2	Fitting-Grease
5	3217-11	2	Nut
6	3253-8	2	Washer-Lock
7	327-11	2	Screw-HH
8	E633029	2	Rod End
9	3219-6	2	Nut-Hex
10	E632690	2	Strut
11	E632199	2	Pin-Strut
12	322-3	2	Screw-HH
13	32128-20	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description

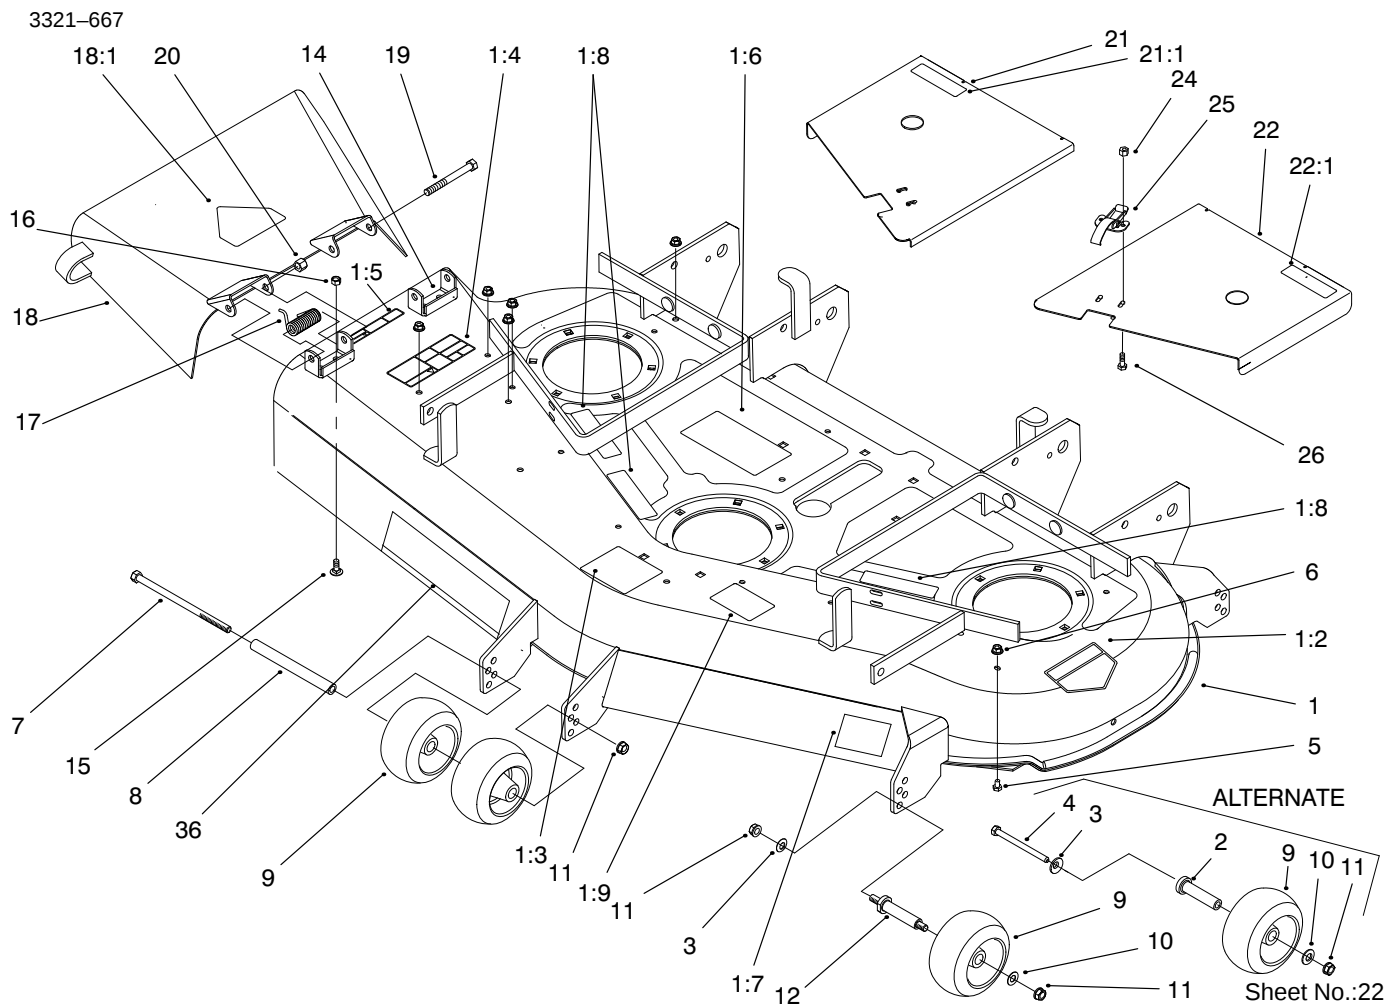

Cover And Rollers Assembly

Ref. No.	Part No.	Qty.	Description
1	99-4588	1	Deck ASM
1:2	43-8480	1	Decal-Danger
1:3	98-3798	1	Decal-Gage Wheel
1:4	66-1340	1	Decal-Discharge
1:5	66-6380	1	Decal-Danger
1:6	98-3799	1	Decal-Belt Routing
1:7	98-3269	1	Decal-Made In USA
1:8	98-5954	3	Decal-Cover Missing
1:9	93-7818	1	Decal-Blade Bolt
			Torque
2	98-3777	4	Spacer-Wheel
3	98-5975	4	Washer
4	98-5961	4	Screw-HH
5	321-1	6	Capscrew
6	32128-33	6	Nut-Hex Flange
7	323-28	1	Screw-HH
8	98-5967	1	Spacer-Wheel
9	68-2730	6	Wheel-Gage
10	E373034	3	Washer-Flat
11	3290-357	7	Nut-Lock
12	99-2842	4	Spacer-Wheel
14	29-5590-03	2	Bracket-Pivot
15	3230-18	4	Screw-CARR
16	32152-1	4	Nut-Lock
17	40-6230	2	Spring-Torsion
18	98-5984	1	Deflector ASM


Ref. No.	Part No.	Qty.	Description
18:1	54-9220	1	Decal-Warning
19	3211-15	2	Screw-HH
20	3296-5	2	Nut-Lock
21	98-5963	1	Cover ASM RH
21:1	67-5360	1	Decal-Danger
22	98-5965	1	LH Cover ASM
22:1	67-5360	1	Decal-Danger
24	32128-17	4	Nut-Lock
25	249-21	2	Latch
26	3290-321	4	Screw-HH
36	98-5953	1	Decal-SFS 52"

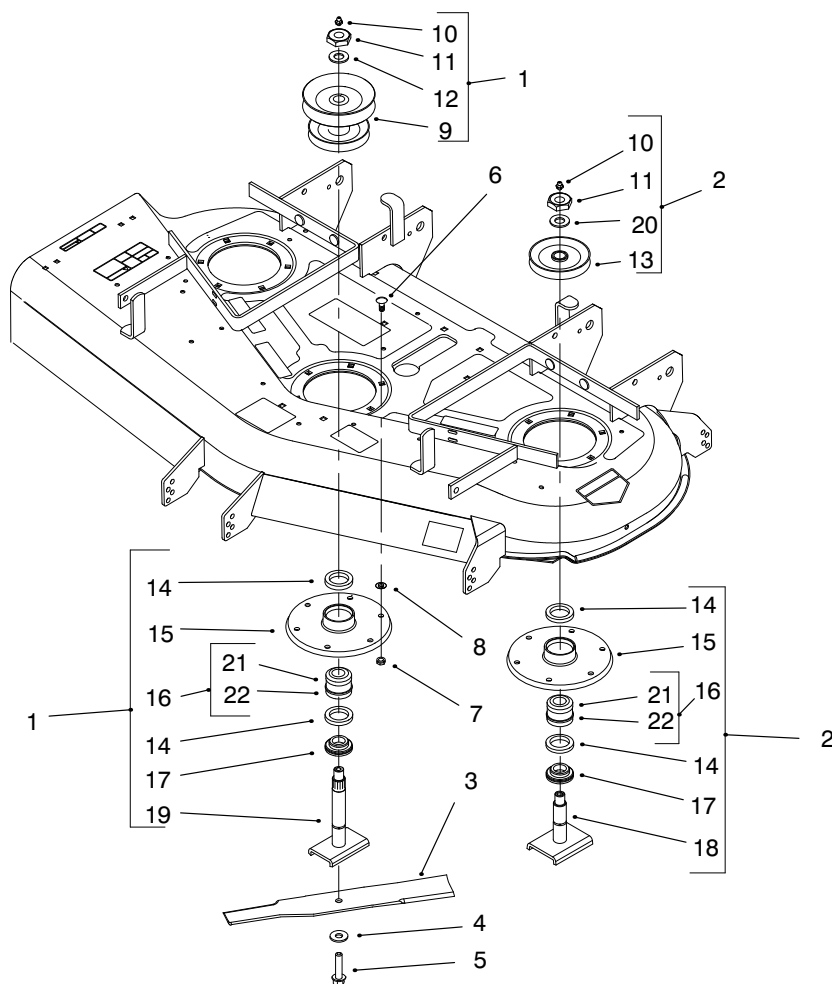

Sheet No.:23

Deflector, Spindle And Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-5974	1	Spindle ASM (Incl. Ref. #9-12,14-17,19)				
2	27-0870-03	2	Spindle ASM (Inc. Ref. #10,11,13-18,20)				
3	27-0990	3	Blade				
4	E513435	3	Washer-Spring				
5	92-5816	3	Screw - Blade				
6	3231-22	16	Bolt-CARR				
7	32128-21	16	Nut-HHF				
8	3256-24	A/R	Washer-Flat				
9	98-3772	1	Pulley & Hub ASM				
10	302-2	3	Fitting-Grease				
11	32146-20	3	Nut-Lock				
12	92-5836	1	Washer				
13	99-4613	2	Pulley & Hub				
14	253-139	6	Seal-Oil				
15	61-4160	3	Spindle-52"				
16	46-8530	3	Bearing ASM (Incl. Ref. #21-22)				
17	27-0950	3	Spacer-Bearing				
18	27-0920	2	Shaft-Spindle				
19	51-3551	1	Spindle-Shaft				
20	7-4150	2	Washer				
21	27-0960	3	Bearing ASM				
22	27-5970	3	Spacer-Matched Set				

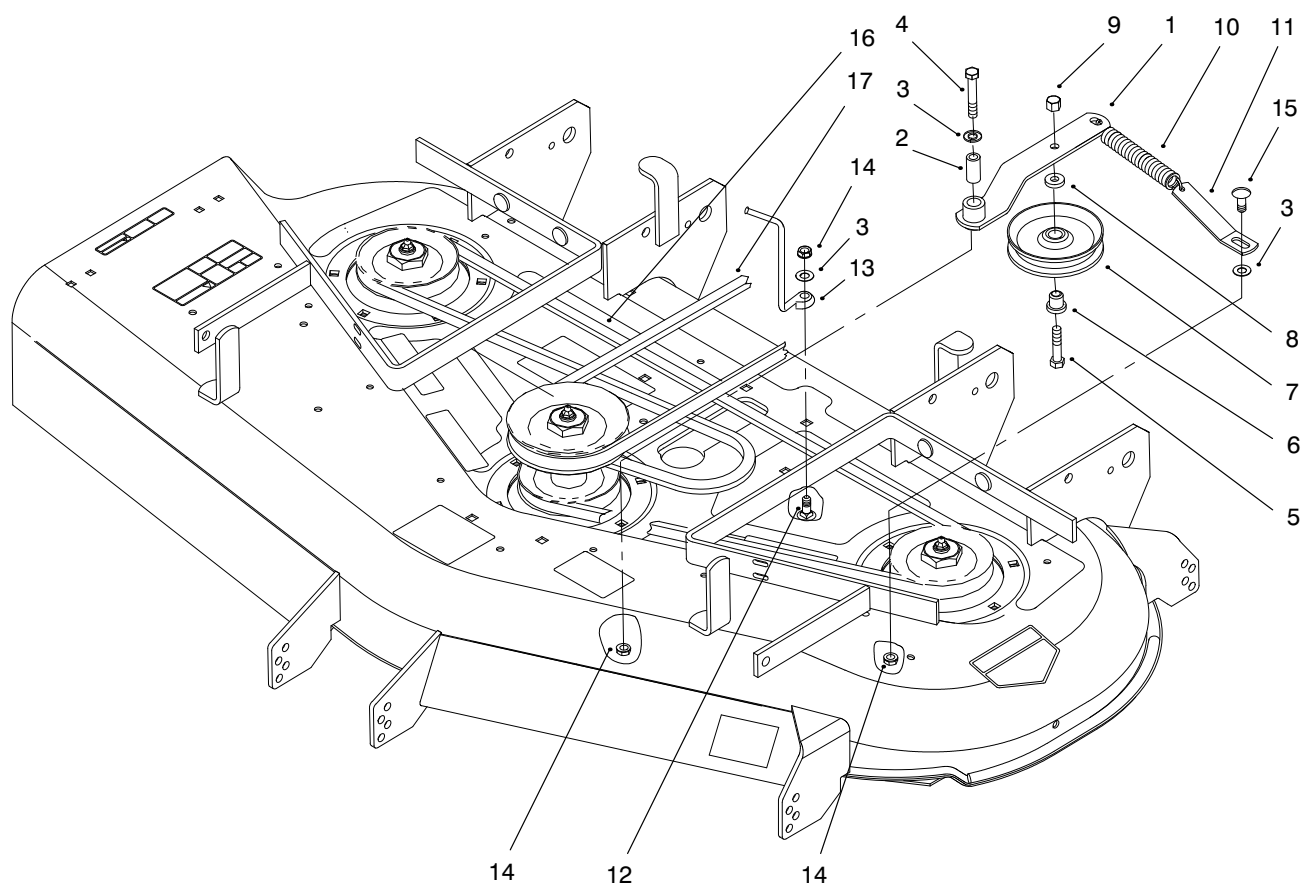


Sheet No.:24

Baffle And Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	55-7640-03	1	Idler Arm
2	51-3640	1	Sleeve-Pivot
3	3256-24	3	Washer-Flat
4	323-11	1	Screw
5	3211-8	1	Screw-HH
6	65-5950	1	Bushing-Pulley
7	65-5940	1	Pulley-Idler
8	7-0081	1	Washer-Special
9	3296-5	1	Nut-Lock
10	51-3650	1	Spring-Extension
11	55-7650	1	Plate-Spring
12	3231-22	1	Bolt-CARR
13	98-5980	1	Guide-Belt
14	32128-21	3	Nut-HHF
15	3231-28	1	Bolt-CARR
16	27-1160	1	"v" Belt Deck
17	98-3780	1	Belt - 52" Deck

Ref. No.	Part No.	Qty.	Description

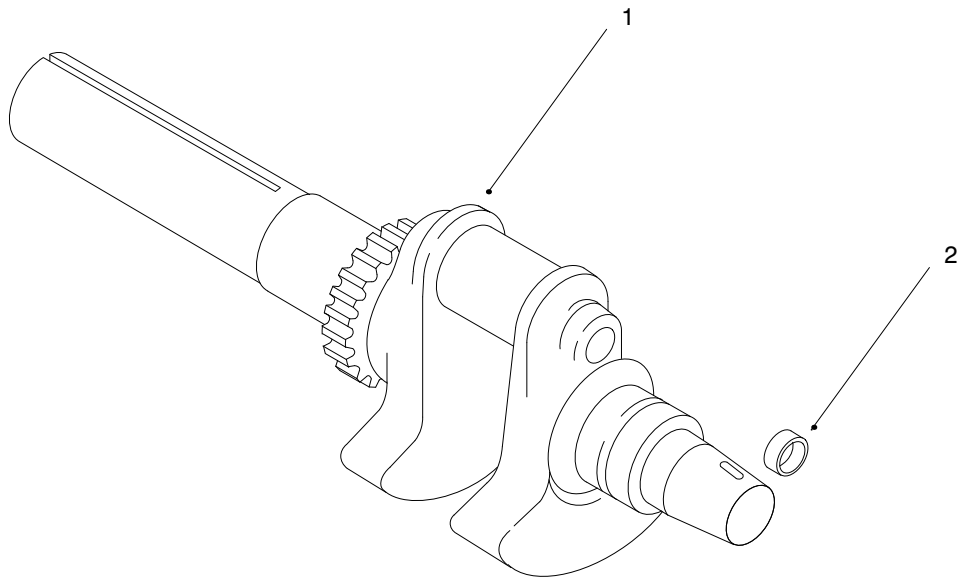


Group 1 – Crankshaft (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 014 84	Crankshaft	1
2	52 139 09	Plug, cup	1

Ref. No.	Part No.	Description	No. Used

Obtain Parts From Kohler

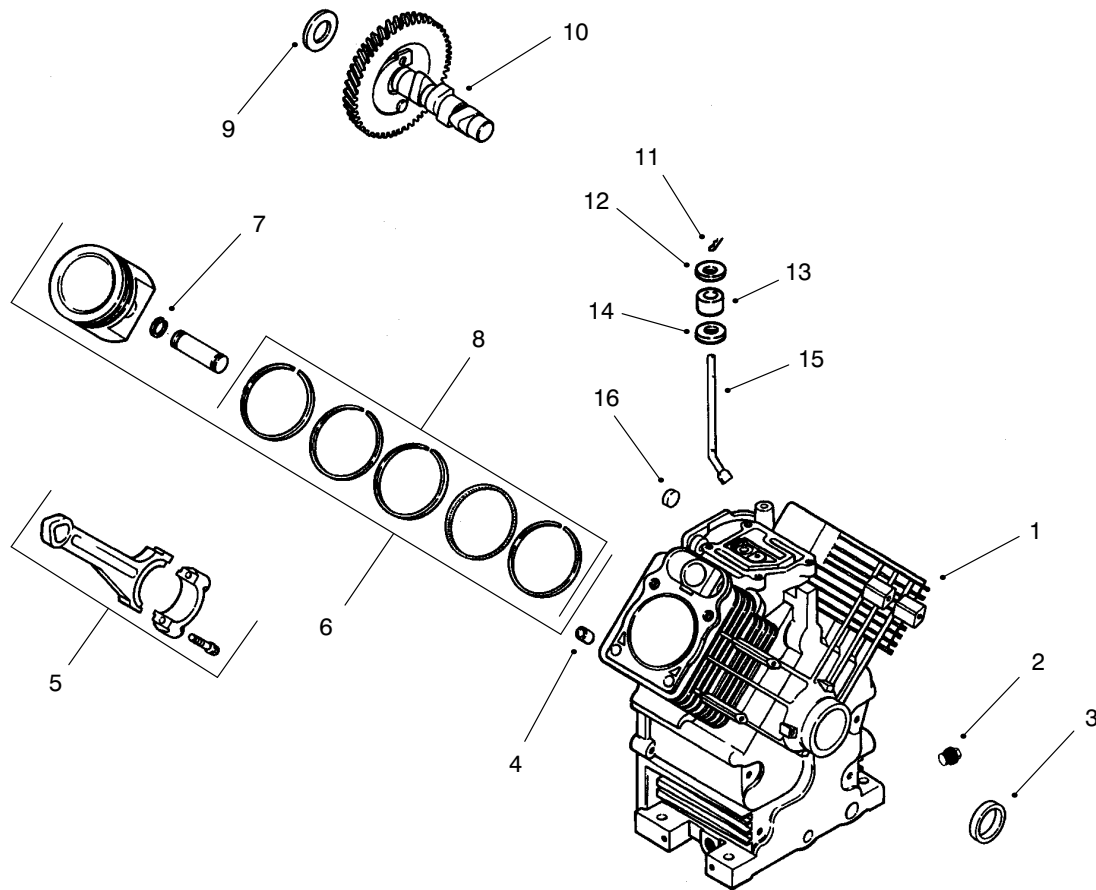


Group 2 – Crankcase (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1		Crankcase	
2	X-75-10	Plug, pipe	2
3	24 032 01	Seal, oil front	1
4	12 380 17	Pin, dowel locating	6
5	24 067 13	Connecting Rod (Std.)	2
	24 067 14	Connecting Rod (.25)	2
6	24 874 09	Piston w/Ring Set (Std.)	2
	24 874 10	Piston w/Ring Set (.25)	2
	24 874 11	Piston w/Ring Set (.50)	2
7	24 018 01	Retainer, piston pin	4
8	24 108 08	Ring Set (Std.)	2
	24 108 09	Ring Set (.25)	2
	24 108 10	Ring Set (.50)	2
9	12 422 09	Shim, camshaft – red	A/R

Ref. No.	Part No.	Description	No. Used
	12 422 13	Shim, camshaft – black	A/R
	12 422 07	Shim, camshaft – white	A/R
	12 422 08	Shim, camshaft – blue	A/R
	12 422 10	Shim, camshaft – yellow	A/R
	12 422 11	Shim, camshaft – green	A/R
	12 422 12	Shim, camshaft – gray	A/R
10	24 012 10	Camshaft	1
11	12 380 04	Pin, hitch	1
12	M-0631005	Washer, flat	1
13	12 032 01	Seal, governor cross shaft	1
14	X-25-102	Washer, plain	1
15	24 144 01	Shaft, governor cross	1
16	52 139 09	Plug, cup	1


Obtain Parts From Kohler

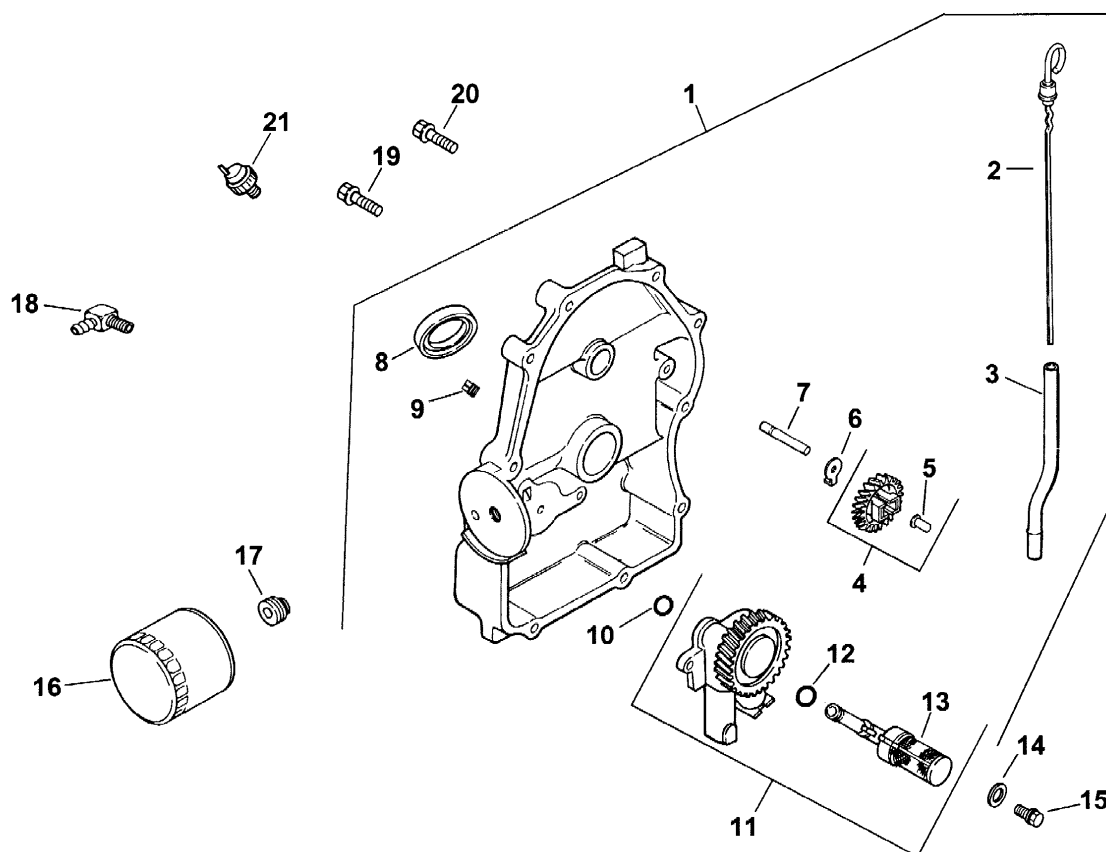

Group 3 – Oil Pan/Lubrication (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 009 83	Plate, closure assembly (Includes 2-12)	1	11	24 393 10	Oil pump assembly (Includes 12,13)	1
2	24 038 06	Dipstick	1	12	24 153 01	O-Ring, oil pick-up	1
3	24 123 08	Tube, dipstick	1	13	24 381 04	Pick-up, oil	1
4	24 043 12	Kit, governor gear (Includes 5)	1	14	M-0631005	Washer, plain 6 mm	2
5	12 380 01	Pin, governor regulating	1	15	M-0645025	Screw, hex flange	2
6	52 448 02	Tab, locking	1	16	52 050 02	Filter, oil	1
7	12 144 02	Shaft, governor gear	1	17	24 136 01	Nipple, oil filter	1
8	52 032 08	Seal, oil (PTO end)	1	18	25 155 02	Connector	1
9	X-75-23	Plug, pipe 1/8"	2	19	24 086 16	Screw, hex flange	9
10	24 153 08	O-Ring	1	20	24 086 17	Screw, hex flange	1
				21	24 099 03	Switch, pressure	1

Obtain Parts From Kohler

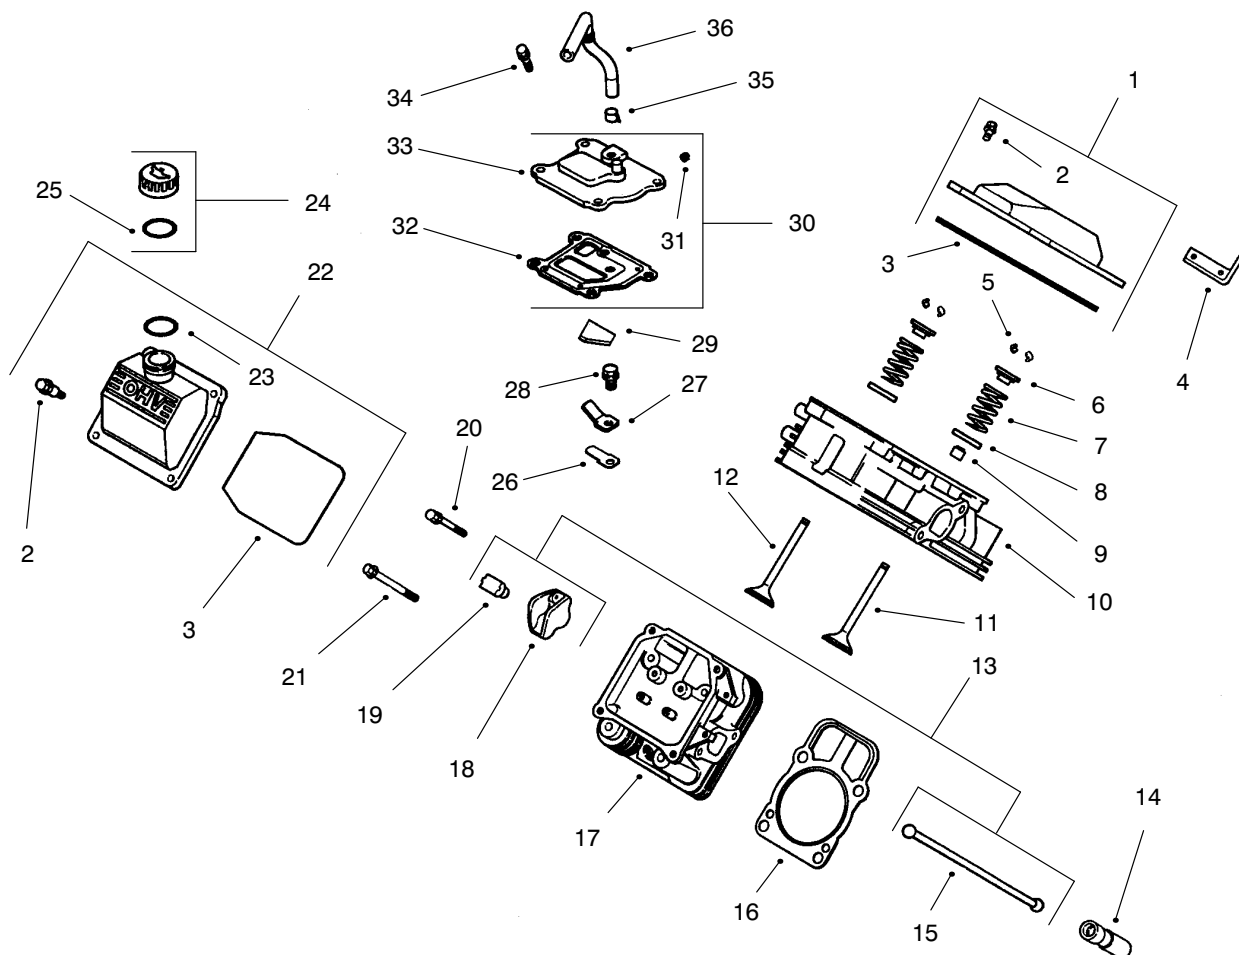


Group 4 – Head/Valve/Breather (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 755 74	Kit, valve cover – plain (Includes 2–3)	1
2	24 086 32	Screw, shoulder	4
3	24 153 16	O–Ring, valve cover	1
4	24 445 01	Strap, lifting	1
5	12 755 03	Kit, retainer	4
6	12 173 01	Cap, valve spring	4
7	24 089 02	Spring, valve	4
8	235011	Retainer, spring	4
9	24 032 05	Seal, valve stem	2
10	24 318 13	Head assembly, #1 cylinder	1
11	24 017 01	Valve, intake (Std.)	2
	24 017 02	Valve, intake (.25)	2
12	24 016 01	Valve, exhaust (Std.)	2
	24 016 02	Valve, exhaust (.25)	2
13	24 755 66	Kit, valve train (Includes 15,18,19)	1
14	12 351 02	Lifter, valve	4
15	24 411 05	Rod, push	4
16	24 041 40	Gasket, cylinder head	2
17	24 318 10	Head assembly, #2 cylinder	1

Ref. No.	Part No.	Description	No. Used
18	25 186 01	Arm, rocker	4
19	24 599 01	Pivot, rocker arm	4
20	M–0640034	Screw, hex. flange	4
21	24 086 44	Screw, hex. flange	8
22	24 755 75	Kit, valve cover – oil fill (Includes 2,3,23)	1
23	24 153 09	O–Ring	1
24	24 755 46	Kit, oil fill cap (Includes 25)	1
25	12 153 03	O–Ring, oil fill cap	1
26	24 402 03	Reed, breather	1
27	12 018 01	Retainer, breather reed	1
28	M–0545010	Screw, hex. flange	1
29	24 050 01	Filter, breather	1
30	24 033 01	Kit, breather (Includes 31–33)	1
31	X–75–23	Plug, allen head pipe	1
32	24 041 23	Gasket, breather	1
33	24 096 02	Cover, breather	1
34	M–0645020	Screw, hex. flange	4
35	X–426–9	Clamp, breather	1
36	24 326 06	Hose, breather	1


Obtain Parts From Kohler

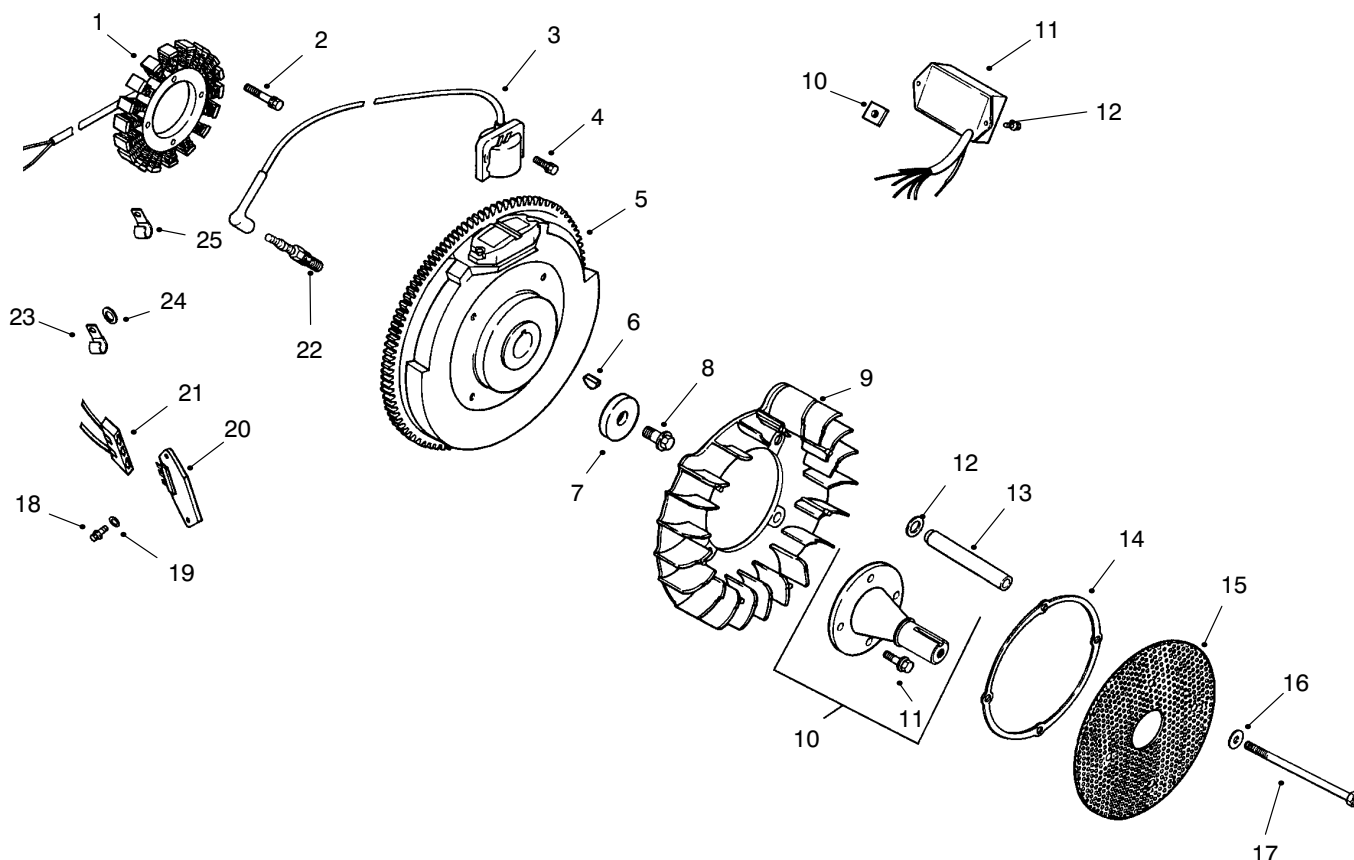

Group 5 – Ignition/Electrical (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54 755 09	Kit, 15 amp stator (Incl. 24 126 71 bracket)	1	17	M-0603100	Screw, hex	4
2	M-0548025	Screw, hex. cap	2	18	24 086 18	Screw, phillips hd.	2
3	24 584 01	Module, ignition	2	19	X-25-92	Washer, plain 3/16	2
4	M-0545020	Screw, hex. socket hd.	4	20	25 403 03	Rectifier-regulator 15 amp	1
5	24 025 11	Flywheel	1	21	236602	Connector	1
6	X-42-15	Key	1	22	12 132 06	Spark Plug	2
7	12 468 03	Washer, plain 3/8"	1	23	48 154 02	Clip, cable	1
8	12 086 14	Screw, hex flange	1	24	X-25-63	Washer, plain 1/4"	1
9	24 157 03	Fan	1	25	235173	Clip, cable	1
10	24 755 08	Kit, front drive shaft (Includes 14)	1			Not Illustrated	
11	M-0839025	Screw, hex flange	4		25 518 28	Lead, black, (4" – 18 gauge – insulated grip barrel eyelet terminals)	1
12	24 468 11	Washer, spring 10mm	4		24 176 07	Harness, wiring	1
13	24 112 14	Spacer	4		24 126 71	Bracket, stator wire	1
14	24 141 06	Ring, support	1		X-22-11	Washer, lock	1
15	24 162 22	Screen, grass	1				
16	X-25-53	Washer, plain 1/4"	4				

Obtain Parts From Kohler

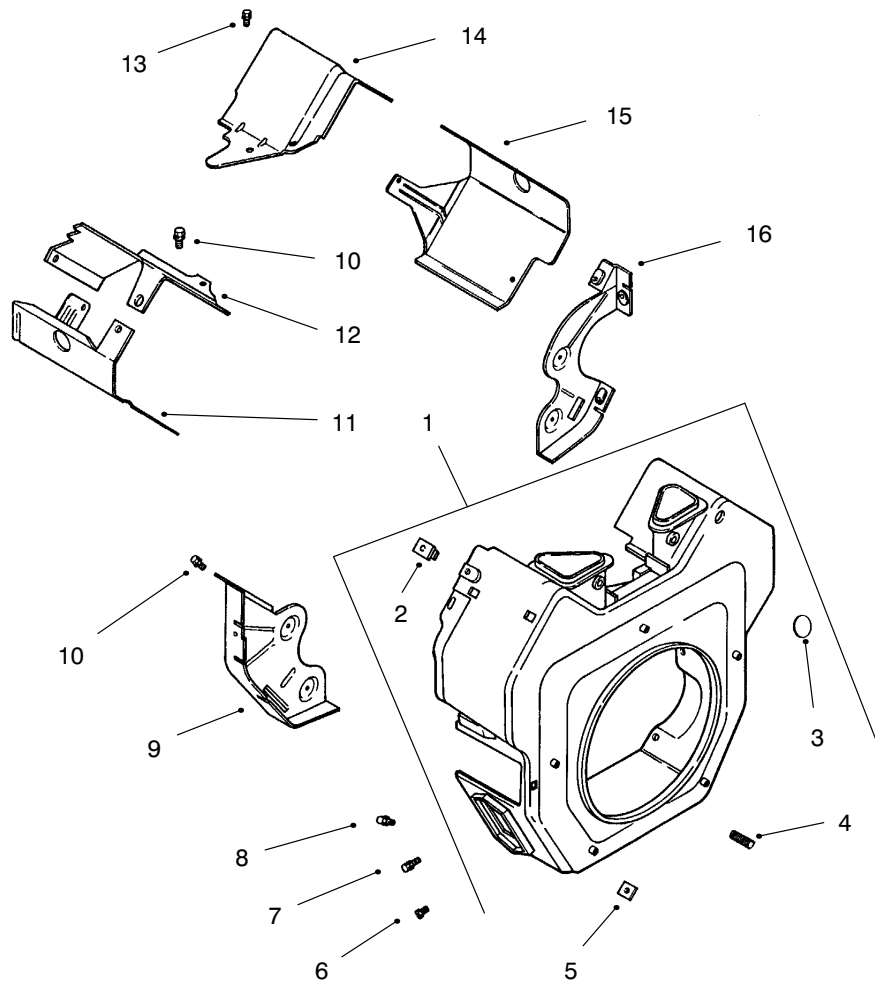


Group 6 – Blower Housing & Baffles (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 027 83	Housing, blower (Includes 2-5)	1
2	24 100 02	Nut, plastic	2
3	24 755 90	Kit, access hole plug	1
4	25 086 43	Screw, set	1
5	24 100 01	Nut, plastic	2
6	M-0551016	Screw, hex. flange	1
7	M-0545016	Screw, hex. flange	5
8	M-0567020	Screw, hex. flange	2
9	24 146 02	Plate, backing – #2 side	1

Ref. No.	Part No.	Description	No. Used
10	M-0645016	Screw, hex. flange	6
11	24 063 20	Baffle, cyl. barrel – #2 side	1
12	24 063 17	Baffle, valley – #2 side	1
13	M-0545010	Screw, hex. flange	2
14	24 063 24	Baffle, valley – #1 side	1
15	24 063 30	Baffle, cyl. barrel – #1 side	1
16	24 146 08	Plate, backing – #1 side	1
		Not Illustrated	
	24 113 62	Decal, HP	1


Obtain Parts From Kohler

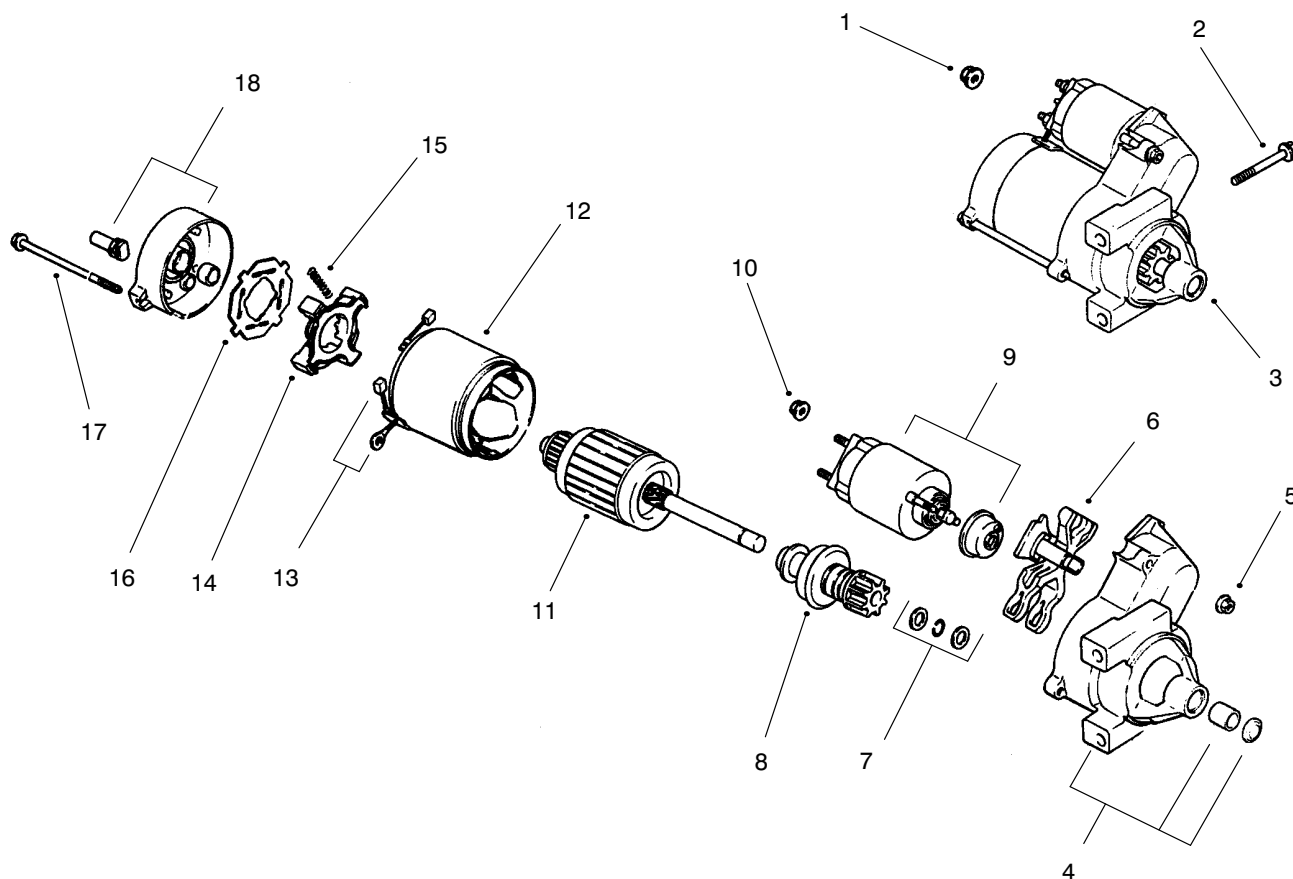

Group 7 – Starting System (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	M-0841080	Nut, hex flange	1	10	52 100 09	Nut, starter	1
2	M-0839080	Screw, hex. flange	2	11	12 170 04	Armature, starter	1
3	24 098 01	Starter, solenoid shift assembly (Incl. 4-18)	1	12	12 471 01	Frame	1
4	24 081 04	Drive, end cap	1	13	52 221 01	Kit, brush & spring (Includes 15)	1
5	52 100 10	Nut, starter	2	14	52 323 03	Holder, brush	1
6	12 090 10	Lever, starter drive	1	15	52 089 09	Spring, brush	4
7	24 755 84	Kit, starter repair	1	16	52 168 01	Insulator	1
8	12 239 01	Drive, pinion	1	17	52 211 05	Bolt, thru	2
9	52 435 02	Solenoid	1	18	24 301 01	Commutator, end cap	1

Obtain Parts From Kohler

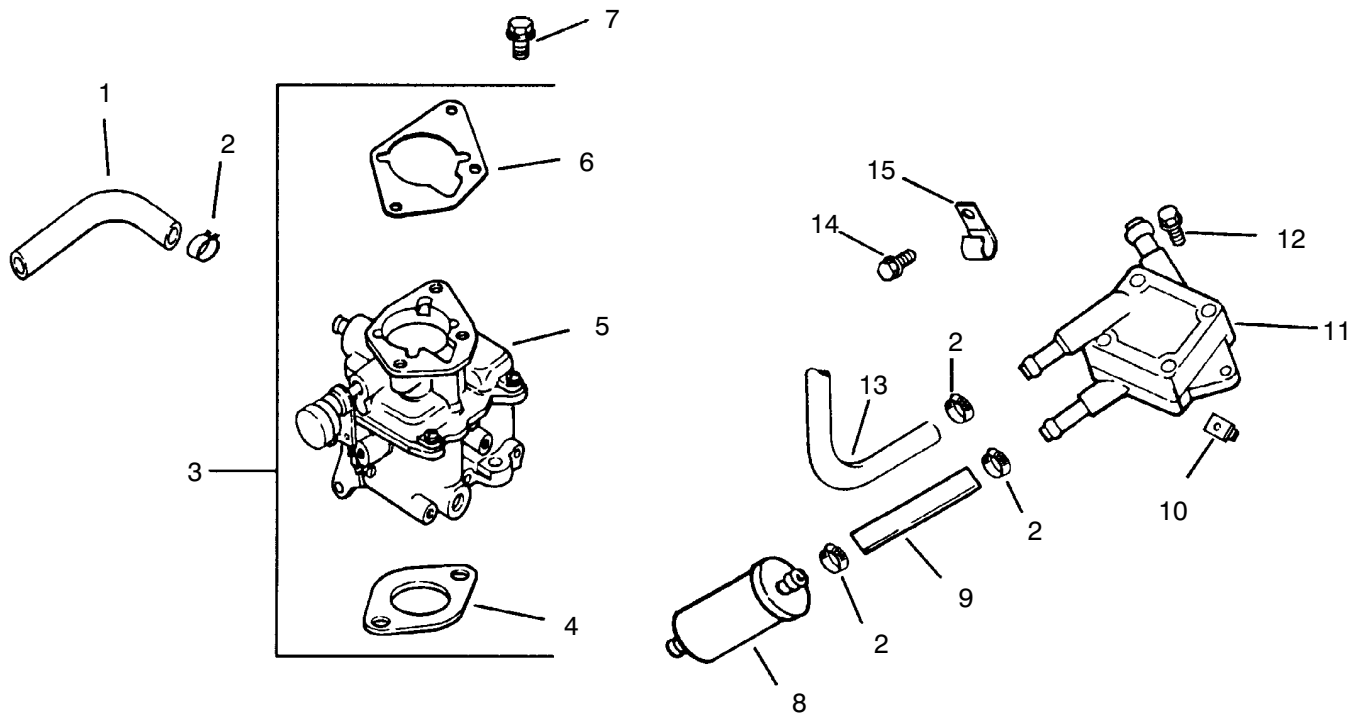


Group 8 – Fuel System (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	25 353 10	Line, fuel – 9"	2
2	X-426-9	Clamp, hose	6
3	24 853 34	Kit, carburetor w/gasket (Includes 4-6)	1
4	24 041 06	Gasket, air cleaner base	1
5	24 053 34	Carburetor assembly (For information only not available separately)	1
6	24 041 17	Gasket, carburetor	1

Ref. No.	Part No.	Description	No. Used
7	M-0651030	Screw, hex. flange	2
8	24 050 02	Filter, fuel	1
9	25 353 15	Line, fuel	1
10	24 100 01	Nut, plastic	2
11	24 393 04	Pump, fuel-pulse	1
12	24 086 12	Screw, hex	2
13	24 353 02	Line, fuel 15-1/2"	1
14	M-0650012	Screw, hex flange	1
15	47 154 01	Clip, cable	1


Obtain Parts From Kohler

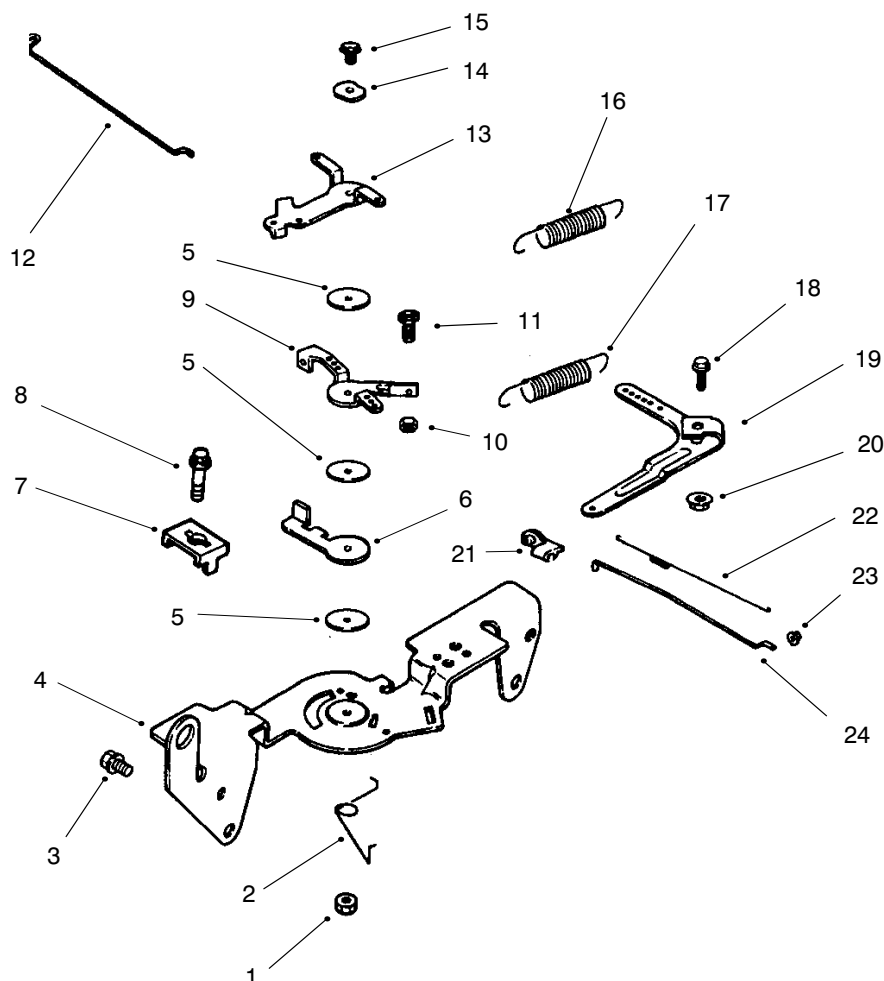

Group 9 – Engine Controls (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	M-0547050	Nut, hex. lock	1	13	24 090 05	Lever, choke	1
2	24 089 03	Spring, choke return	1	14	41 468 03	Washer, spring	1
3	M-0645016	Screw, hex. flange	4	15	M-0545020	Screw, hex. flange	1
4	24 126 56	Bracket, control	1	16	24 089 38	Spring, throttle limiter	1
5	24 468 01	Washer, plain	3	17	24 089 15	Spring, governor	1
6	24 090 07	Lever, throttle actuator	1	18	SM-0642025	Screw, hex. flange	1
7	12 237 01	Clamp, cable	2	19	24 090 14	Lever, governor	1
8	M-0545016	Screw, hex. flange	2	20	M-0641060	Nut, hex. flange	1
9	24 090 03	Lever, throttle control	1	21	25 158 11	Bushing, linkage retaining	1
10	M-0446030	Nut, hex	1	22	24 089 01	Spring, linkage	1
11	M-0401030	Screw, hex. cap	1	23	25 158 08	Bushing, linkage retaining	1
12	24 079 02	Linkage, choke	1	24	24 079 01	Linkage, throttle	1

Obtain Parts From Kohler

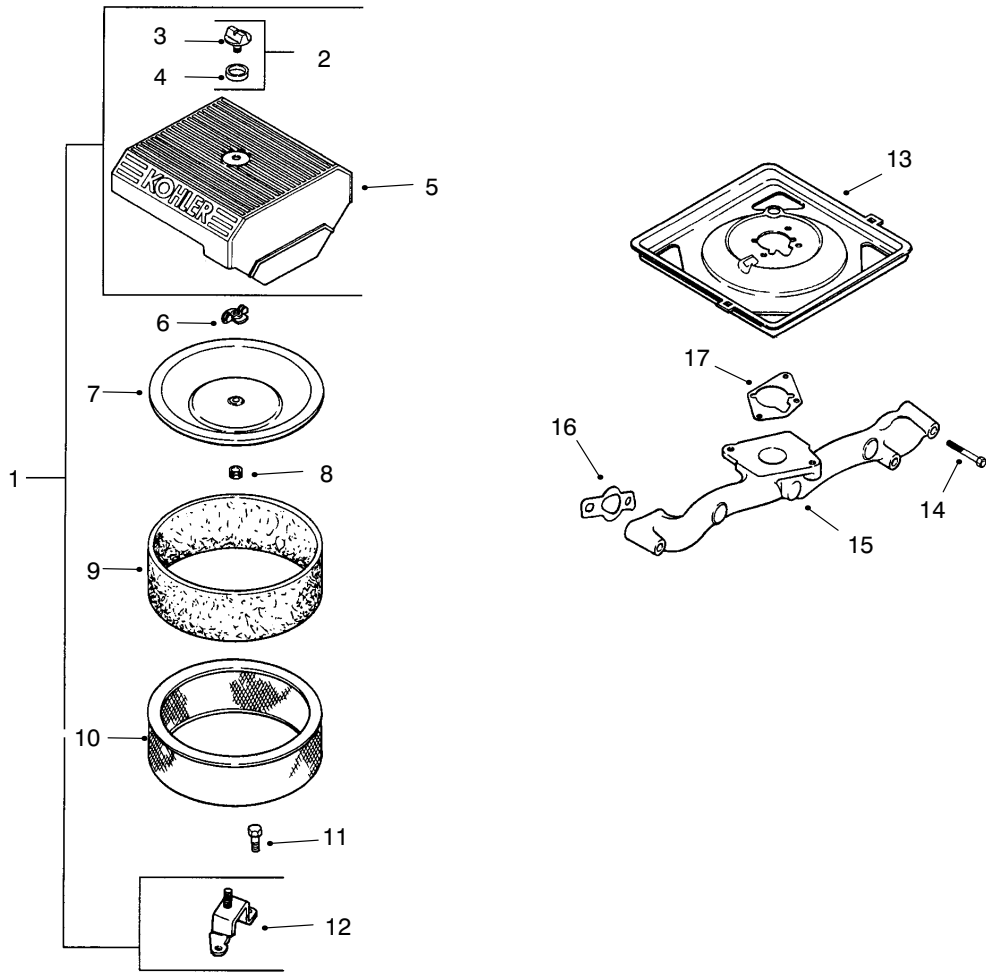


Group 10 – Air Intake/Filtration (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 753 05	Kit, air cleaner (Includes 2-5, 12)	1
2	54 755 01	Kit, air cleaner knob (Includes 3,4)	1
3	25 341 03	Knob, cover	1
4	24 153 15	O-Ring	1
5	24 096 24	Cover, air cleaner	1
6	12 100 01	Wing Nut	2
7	24 096 01	Cover, inner air cleaner	1
8	230046	Seal, inner air cleaner	1

Ref. No.	Part No.	Description	No. Used
9	24 083 05	Precleaner, element	1
10	24 083 03	Element, air cleaner	1
11	M-0645016	Screw, hex flange	3
12	24 126 43	Bracket, air cleaner base	1
13	24 094 11	Base, air cleaner	1
14	M-0651055	Screw, hex flange	4
15	24 164 14	Manifold, intake	1
16	24 041 01	Gasket, intake manifold	2
17	24 041 06	Gasket, air cleaner base	1

Obtain Parts From Kohler

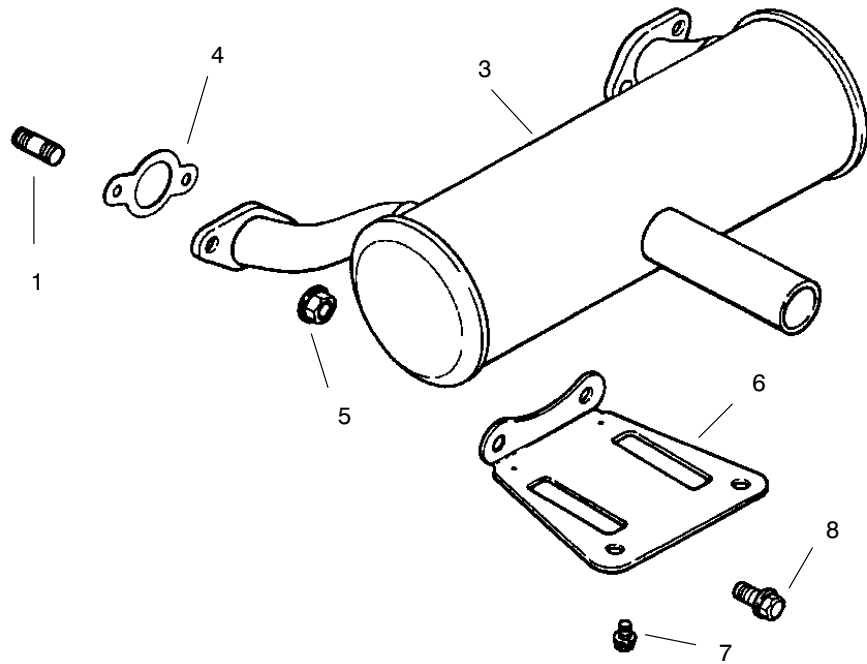

Group 11 – Exhaust (CH22S 76513 Kohler)

Ref. No.	Part No.	Description	No. Used
1	25 072 04	Stud	4
3	24 068 17	Muffler Canister – Center Outlet	1
4	24 041 02	Gasket, exhaust	2

Ref. No.	Part No.	Description	No. Used
5	M-0841080	Nut, hex flange	4
6	24 126 12	Bracket, muffler	1
7	M-0650012	Screw, hex. flange	4
8	M-0839020		2

Obtain Parts From Kohler

TORO PART NUMBER INDEX

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
E000099	7	11:1	2	Kit-Seal	E603610	10	6	2	Disc-Spring
E000139	7	11:3	2	Kit-Bearing	E603721	7	14	1	Fitting-Tee
E303077	9	1	6	Clamp	E603722	7	15	1	Fitting-Tee
E303105	6	1	2	Yoke	E603735	6	5	2	Bushing
E303287	12	21	5	Tie-Plastic	E603737	6	6	2	Bolt
E303327	1	23	12	Washer-Lock	E603805	11	10	1	Pulley-Idler
E303327	6	2	4	Washer-Lock	E603807	6	7	2	Spring
E303327	11	1	5	Washer-Lock	E603826	7	16	3	Clamp-Hose
E303335	3	25	1	Tie-Plastic	E603827	7	17	5	Clamp-Hose
E303335	9	4	1	Tie-Plastic	E603841	8	51	2	Pump - Hydro RH
E303335	10	2	1	Tie-Plastic	E603903	6	9	4	Spacer
E303335	12	31	2	Tie-Plastic	E603987	7	18	1	Elbow
E303428	10	13	1	Elbow	E603988	7	19	1	Elbow
E303435	9	24	4	Washer	E603989	7	20	2	Elbow
E303517	10	11:3	1	Decal-Belt Drive	E603990	7	21	4	Adapter
E323229	12	32	1	Clip	E613235	10	1	4	Washer
E323235	10	36	2	Washer-Spring	E632187	3	14	1	Frame-Seat
E323236	10	37	2	Spacer	E632191	6	10	1	Lever-Control LH
E373034	14	10	3	Washer-Flat	E632193	6	11	1	Lever-Control RH
E373066	1	3:6	1	Decal	E632199	13	11	2	Pin-Strut
E403124	11	2	1	Elbow	E632201	7	23	1	Arm-Pump Idler
E513006	7	3	1	Filter Head	E632208	6	12	2	Arm-Pump Control
E513011	3	15	8	Nut	E632217	5	5	1	Shaft-Brake
E513034	7	33:1	2	Bearing-Pivot	E632219	1	7	1	Arm-Deck Lift
E513034	11	14:1	2	Bearing-Pivot	E632281	7	24	1	Hose ASM-Low Pressure
E513075	12	33	1	Switch-Solenoid	E632282	7	25	1	Hose ASM-Low Pressure
E513140	5	1	2	Bearing	E632285	7	26	1	Hose ASM-Low Pressure
E513152	12	15	1	Switch-Seat	E632286	7	27	1	Hose ASM-Low Pressure
E513167	7	5	1	Cap	E632324	1	5	1	Lever-Lift
E513180	12	16	1	Actuator-Switch	E632469	11	14	1	Idler Arm Asm
E513374	12	26	1	Meter-Hour	E632489	5	4	1	Lever-Brake
E513435	15	4	3	Washer-Spring	E632511	2	8	2	Fork-Castor
E513592	3	26	1	Knob	E632690	13	10	2	Strut
E513645	9	6	2	Bushing	E632712	5	6	1	Brake Bracket-LH
E513658	3	29	2	Bumper	E632713	5	7	1	Brake Bracket-RH
E513747	3	11:2	1	Decal-Warning	E632802	2	13	1	Weight
E513748	10	11:2	1	Decal-Guard	E632899	1	16	1	Plate-Deck Lift
E513762	3	24	1	Clip	E632911	6	13	1	Motion Control
E513762	8	56	1	Clip	E632912	6	14	1	Motion Control
E513762	9	3	1	Clip	E633002	21	1:1:1	2	Tire
E513762	12	23	1	Clip	E633007	3	12	2	Wheel & Tire ASM
E513840	7	7	2	Elbow	E633008	3	12:2	2	Tire
E513890	7	2:3	1	Decal-Hydraulic Tank	E633009	3	12:1	2	Wheel
E513929	3	11:4	1	Decal-Drive Release	E633029	13	8	2	Rod End
E522217	7	8	1	Hose ASM-Low Pressure	E633060	5	10	4	Spacer
E522424	12	11	1	Mount-Spring	E633062	5	11	4	Spacer
E523027	6	3	2	Damper	E633064	1	32	2	Spring-Deck Support
E523103	7	9	1	Gasket	E633068	1	12	2	Arm-Deck Lift
E523281	12	34	1	Wire-Starter	E633080	1	18	1	Bushing
E523328	7	11	2	Motor-Wheel	E633082	1	17	1	Bushing
E523415	12	10	1	Spring	E633096	1	28	2	Rod-Deck Lift
E523420	10	3	2	Bumper	E633097	1	20	1	Hitch Pin w/Lanyard
E523428	3	2:6	1	4" Locking Track Set	E633098	10	9	1	Clutch
E543017	6	4	2	Ball Joint	E633102	5	12	2	Bearing-Side Flange
E543070	12	25	1	Switch-Ignition	E633102	6	16	4	Bearing-Side Flange
E543084	12	36	1	Wire-Starter Solenoid	E633110	12	29	1	Switch-Brake
E543232	11	4	1	Nipple	E633111	12	20	2	Switch-Drive Lever
E543233	11	5	1	Cap	E633131	5	13	4	Yoke-Brake Linkage
E543277	9	7	2	Elbow	E633144	5	14	2	Pin-Trunion
E543316	12	22	1	Module-Interlock	E633152	6	17	2	Ball Joint LH
E543391	12	5	1	Insulator-Battery	E633153	6	15	2	Linkage
E543393	12	35	3	Insulator-Solenoid	E633166	11	12	1	Idler
E543401	3	2:5	4	Spacer-Track	E633167	7	31	1	Pulley-Idler
E543407	3	2:1	1	Cushion-Seat	E633177	6	18	2	Arm
E543456	9	8	2	Line-Fuel	E633181	12	18	4	Plate
E543511	2	7	2	Seal-Grease	E633257	6	19	2	Grip
E543513	2	1	2	Cap-Grease	E633268	5	17	1	Grip-Brake Lever
E543792	12	3	2	Wingnut	E633273	3	15	8	Wheel Bolt
E603050	11	6	1	Spacer	E633293	3	16	1	Rod-Seat Holdup
E603336	3	10	1	Cable-Choke	E633295	1	6	1	Grip-Lift Lever
E603384	7	12	1	Bushing	E633306	12	6	1	Wire-Starter
E603384	11	7	1	Bushing	E633307	12	4	1	Wire-Ground
E603401	11	23	1	Spacer-Fender	E633325	1	8	1	Spring-Compression
E603402	11	11	1	Spring	E633335	7	32	2	Hose-Low Pressure
E603413	7	13	1	Spring-Extension	E633345	1	37	1	Decal-HOC
E603479	12	2	1	Battery	E633346	3	13:3	1	Decal-Fuel Valve
E603496	11	9	2	Bushing	E633347	9	12	1	Valve-Fuel Line

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Pg. No.	Qty.	Ref. No.	Description	Part No.	Pg. No.	Qty.	Ref. No.	Description
E633348	9	13	1	Fuel Line	E806005	1	21	1	Hairpin
E633349	9	14	6	Spring—Fuel Tank	E806800	5	28	2	Pin—Cotter
E633354	3	11:3	2	Decal—Motion Control	E807020	5	16	2	Key—Woodruff
E633396	10	34	1	Clip	E807020	7	11:2	2	Key—Woodruff
E633396	12	28	3	Clip	E807272	8	46	2	Key
E633441	1	30	4	Swivel—Deck Mount	E807513	3	22	2	Bolt—CARR
E633447	13	3	4	Chain—Lift	E808280	6	33	2	Pin—Clevis
E633453	10	10	1	Spacer	E808283	5	29	2	Pin—Clevis
E633454	5	2	2	Spring—Brake	E808284	1	14	2	Pin—Clevis
E633462	10	11:4	1	Decal—Important	E808285	5	19	4	Pin—Clevis
E633466	10	17	1	Guard—Muffler	E808505	1	11	5	Ring—Retaining
E633477	5	3	3	Rod—Brake	E808514	5	30	2	E Ring Retainer
E633508	2	3	6	Washer—Belleville	E809036	5	8	2	Nut
E633543	10	5	1	Strap,Clutch	E809036	7	11:4	2	Nut
E633545	10	4	2	Spacer—Grommet	E809057	6	8	4	Screw—HSH
E633548	5	15	2	Hub—Wheel	E809076	10	35	2	Screw—HH
E633553	1	3:2	3	Pad—Anti skid	E811008	8	49	1	Fitting—Grease
E633567	7	29	1	Sheave	E811008	11	22	1	Fitting—Grease
E633568	7	28	2	Sheave	E811010	2	6	2	Plug
E633579	2	11:5	2	Spacer	E816001	12	19	2	Fuse—20 Amp
E633580	2	11:2	4	Seal—Bearing	7-0081	16	8	1	Washer—Special
E633581	2	11:4	4	Spacer—Bearing	7-4150	15	20	2	Washer
E633582	2	11:1	2	Wheel & Tire ASM	13-2840	8	45	1	Key
E633583	211:1:2	2	2	Wheel	27-0870-03	15	2	2	Spindle Housing ASM
E633587	1	35	1	Handle	27-0920	15	18	2	Shaft—Spindle
E633613	10	20	2	Bracket—Guard	27-0950	15	17	3	Spacer—Bearing
E633615	10	7	1	Guard	27-0960	15	21	3	Bearing ASM
E633630	10	38	2	Grommet	27-0990	15	3	3	Blade
E633651	12	37	2	Bolt—Battery	27-1160	16	16	1	"v" Belt Deck
E633652	12	1	1	Strap—Hold Down	27-5970	15	22	3	Spacer—Matched Set
E633673	12	27	1	Switch—PTO	29-5590-03	14	14	2	Bracket—Pivot
E633693	5	9	2	Brake Band	40-6230	14	17	2	Spring—Torsion
E633696	3	9	1	Cable	43-8480	14	1:2	1	Decal—Danger
E633705	3	2	1	Seat/Armrest ASM	46-8530	15	16	3	Bearing ASM
E633706	1	36	1	Decal—HOC	51-3551	15	19	1	Spindle—Shaft
E633709	3	2:2	1	Cushion—Seat Back	51-3640	16	2	1	Sleeve—Pivot
E633710	3	2:3	1	Armrest—RH	51-3650	16	10	1	Spring—Extension
E633711	3	2:4	1	Armrest—LH	54-9220	14	18:1	1	Decal—Warning
E633737	1	3:5	1	Decal—Z—Master	55-7640-03	16	1	1	Idler Arm ASM
E633749	7	30	1	Belt	55-7650	16	11	1	Plate—Spring
E633750	7	6	1	Filter—Hydro	61-4160	15	15	3	Spindle—52"
E633752	7	6	1	Filter—Winter Hydro	65-2690	7	2:2	1	Decal—Hot Surface
E633766	1	3:3	1	Decal—Service	65-5940	16	7	1	Pulley—Idler
E633771	3	11:5	1	Decal—Pump Belt	65-5950	16	6	1	Bushing—Pulley
E633776	7	1	2	Hose	66-1340	14	1:4	1	Decal—Discharge
E633777	7	22	2	Hose	66-6380	14	1:5	1	Decal—Danger
E633786	7	10	4	Elbow 90 DEG	67-5360	14	21:1	1	Decal—Danger
E633818	1	42	1	Decal—Warning	67-5360	14	22:1	1	Decal—Danger
E633889	1	15	1	Plate—Deck Lift	68-2730	14	9	6	Wheel—Gage
E633926	5	15:2	8	Stud—Wheel	72-9361	15	24	3	Cup—Anti Scalp
E633964	3	1	1	Stop—Park Brake	74-0720	3	33	1	Tube—Manual
E633980	5	15:1	2	Hub	92-5816	15	5	3	Screw—Blade
E633988	10	8	1	Spacer	92-5836	15	12	1	Washer
E634277	7	33	1	Arm ASM	93-3101	9	5	2	Gas Cap
E634308	10	11	1	Lift Shield ASM	93-7340	3	34	1	Decal—Toro
E634662	2	11	2	Caster Wheel ASM	93-7818	14	1:9	1	Decal—Blade Bolt Torque
E634796	10	14	1	Shield—LH	98-3269	14	1:7	1	Decal—Made In USA
E634797	10	18	1	Shield—RH	98-3772	15	9	1	Pulley & Hub
E634860	1	1	1	Front Frame ASM	98-3777	14	2	4	Spacer—Wheel
E634862	10	11	1	Shield ASM	98-3780	16	17	1	Belt—Deck
E634927	5	15	2	Wheel Hub w/Studs	98-3798	14	1:3	1	Decal—Gage Wheel
E643026	10	42	1	Kohler Command Ch23	98-3799	14	1:6	1	Decal—Belt Routing
E643119	12	30	1	Harness	98-5953	14	36	1	Decal—SFS
E653314	9	9	6	Stud	98-5954	1	3:4	1	Decal—Cover Missing
E800282	12	7	1	Screw	98-5954	14	1:8	3	Decal—Cover Missing
E800339	2	11:6	2	Screw—HH	98-5961	14	4	4	Screw—HH
E800805	8	37	1	Screw—HH	98-5963	14	21	1	Cover ASM RH
E800805	11	18	1	Screw—HH	98-5965	14	22	1	LH Cover ASM
E803016	8	38	4	Bolt	98-5967	14	8	1	Spacer—Wheel
E803022	6	24	2	Screw—Set	98-5974	15	1	1	Spindle ASM Center
E803022	8	39	2	Screw—Set	98-5975	14	3	4	Washer
E803028	12	17	8	Screw	98-5980	16	13	1	Guide—Belt
E803060	3	31	2	Screw	98-5984	14	18	1	Deflector ASM
E803071	9	23	4	Screw	99-2842	14	12	4	Spacer—Wheel
E804269	2	11:7	2	Nut—Lock	99-3656	9	21	1	Decal—Control Panel
E804524	6	27	2	Nut	99-4588	14	1	1	Deck ASM
E805269	5	31	2	Washer	99-4607	9	11	1	Tank—RH Fuel

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
99-4608	9	10	1	Tank-LH Fuel	3231-22	16	12	1	Bolt-CARR
99-4611	3	13:2	1	Decal-Control Panel	3231-28	16	15	1	Bolt-CARR
99-4613	15	13	2	Pulley & Hub	3242-4	8	41	2	Screw-Set
99-4622	1	3	1	Floorpan ASM	3242-6	8	40	2	Screw-Sqh Set
99-4623	3	13	1	Console ASM	3253-3	8	42	2	Washer-Lock
99-4624	3	11	1	Frame ASM	3253-3	9	18	2	Washer-Lock
99-4625	7	2	1	Hydraulic Tank ASM	3253-4	9	19	4	Washer-Lock
99-4628	4	42	1	Decal-Z253	3253-7	5	25	8	Washer-Lock
99-4635	3	2	1	Seat/Armrest ASM	3253-8	13	6	2	Washer-Lock
99-4656	9	2	1	Panel-Control	3256-2	6	29	2	Washer-Flat
99-4940	9	22	1	Shield-Control Panel	3256-2	10	29	4	Washer-Flat
249-21	14	25	2	Latch	3256-2	12	8	2	Washer-Flat
2412-120	3	30	2	Clamp-R	3256-3	6	30	4	Washer-Flat
253-139	15	14	6	Seal-Oil	3256-3	8	43	1	Washer-Flat
254-72	2	5	4	Cup-Bearing	3256-3	10	30	1	Washer-Flat
254-78	2	11:3	4	Cone-Bearing	3256-4	5	26	4	Washer-Flat
254-79	2	11:1:3	4	Cup-Bearing	3256-4	8	44	1	Washer-Flat
254-94	2	4	4	Cone-Bearing	3256-4	11	24	1	Washer-Flat
302-2	15	10	3	Fitting-Grease	3256-7	1	31	2	Washer-Flat
302-19	5	21	2	Fitting-Grease	3256-7	1	34	2	Washer-Flat
302-19	13	4	2	Fitting-Grease	3256-23	4	44	6	Washer-Flat
320-19	1	2	5	Fitting-Grease	3256-23	6	31	4	Washer-Flat
321-1	14	5	6	Capscrew	3256-23	9	20	10	Washer-Flat
321-3	8	50	2	Screw-HH	3256-24	1	9	3	Washer-Flat
321-3	9	15	2	Screw-HH	3256-24	11	20	4	Washer-Flat
321-4	3	27	1	Screw-HH	3256-24	15	8	A/R	Washer-Flat
321-4	7	34	2	Screw-HH	3256-24	16	3	3	Washer-Flat
321-4	10	22	10	Screw-HH	3256-29	1	27	4	Washer-Flat
321-4	12	12	8	Screw-HH	3272-5	6	32	2	Pin-Cotter
321-6	12	24	1	Screw-HH	3272-10	1	13	2	Pin-Cotter
322-3	3	4	8	Screw-HH	3272-10	5	27	7	Pin-Cotter
322-3	9	16	4	Screw-HH	3290-321	14	26	4	Screw-HH
322-3	13	12	2	Screw-HH	3290-357	1	24	17	Nut-Lock Flange
322-5	3	17	1	Screw-HH	3290-357	5	24	4	Nut-Lock Flange
322-6	6	20	4	Screw-HH	3290-357	6	35	8	Nut-Lock Flange
322-6	10	39	1	Screw-HH	3290-357	8	47	8	Nut-Lock Flange
322-19	10	40	1	Screw	3290-357	10	32	4	Nut-Lock Flange
323-4	5	18	4	Screw-HH	3290-357	11	21	10	Nut-Lock Flange
323-4	6	21	8	Screw-HH	3290-357	14	11	7	Nut-Lock
323-6	1	25	3	Screw-HH	3296-5	14	20	2	Nut-Lock
323-6	3	5	2	Screw-HH	3296-5	16	9	1	Nut-Lock
323-6	6	22	4	Screw-HH	3296-29	9	17	6	Nut-Lock
323-6	10	24	6	Screw-HH	3296-29	10	41	1	Nut-Lock
323-7	1	26	12	Screw-HH	32128-17	14	24	4	Nut-Lock
323-8	7	35	1	Screw-HH	32128-20	3	23	12	Nut-Lock
323-9	1	22	2	Screw-HH	32128-20	6	34	4	Nut-Lock
323-9	6	23	6	Screw-HH	32128-20	10	31	1	Nut-Lock
323-9	8	36	1	Screw-HH	32128-20	12	9	2	Nut-Lock
323-9	11	16	5	Screw-HH	32128-20	13	13	2	Nut-Lock
323-11	11	15	2	Screw	32128-21	15	7	16	Nut-HHF
323-11	16	4	1	Screw	32128-21	16	14	3	Nut-HHF
323-13	1	19	1	Screw-HH	32128-33	3	28	1	Nut-Hex Flange
323-13	11	17	1	Screw-HH	32128-33	6	36	4	Nut-Hex Flange
323-21	3	18	2	Screw-HH	32128-33	8	48	2	Nut-Hex Flange
323-28	14	7	1	Screw-HH	32128-33	10	33	7	Nut-Hex Flange
324-6	13	2	8	Screw-HH	32128-33	12	13	11	Nut-Hex Flange
325-20	5	20	8	Screw-HH	32128-33	14	6	6	Nut-Hex Flange
327-11	13	7	2	Screw-HH	32128-37	13	1	16	Nut-Lock
3211-8	16	5	1	Screw-HH	32144-70	2	14	4	Screw-Tap
3211-15	14	19	2	Screw-HH	32146-2	1	10	7	Nut-Hex Lock
3212-10	10	25	1	Screw	32146-2	3	21	4	Nut-Hex Lock
3217-9	5	22	8	Nut-HH	32146-2	6	25	6	Nut-Hex Lock
3217-11	1	29	8	Nut	32146-2	11	19	1	Nut-Hex Lock
3217-11	13	5	2	Nut	32146-4	3	20	2	Nut-Lock
3218-6	1	33	4	Nut-Hex Jam	32146-14	2	2	2	Nut-Lock
3219-2	6	26	10	Nut	32146-17	10	27	4	Nut-Lock
3219-3	5	23	8	Nut-Hex	32146-18	3	19	2	Nut-Lock
3219-6	13	9	2	Nut-Hex	32146-20	15	11	3	Nut-Lock
3220-2	6	28	2	Nut-Jam	32152-1	14	16	4	Nut-Lock
3230-18	14	15	4	Screw-CARR					
3231-22	15	6	16	Bolt-CARR					