



Proline
**36" Midsize Cutting
Unit**

Model No. 30135 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Assembly and Decals	1	Spindle Housing Assembly No. 54–7781	5
Carrier Frame and Castor Assembly	2	Toro Part Number Index	6–7
Spindle and Idler Assembly	3	Maintenance	8–9
Spindle Housing Assembly No. 27–0870	4	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X(Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

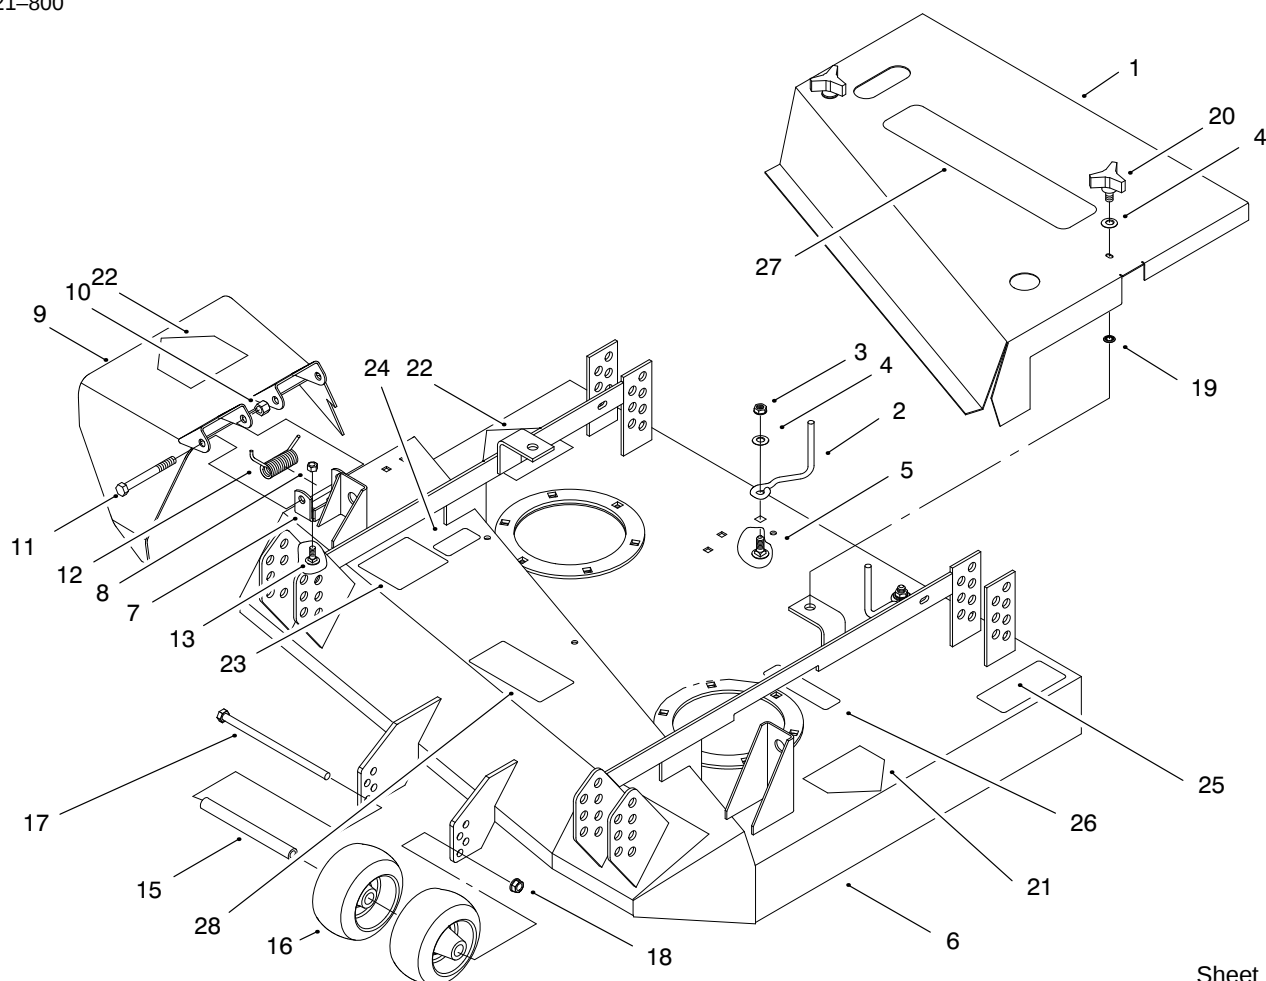


Sheet No.: 2

Deck Assembly and Decals

Ref. No.	Part No.	Qty.	Description
1	82-5460	1	Cover ASM
2	52-4780	2	Rod-Belt
3	32128-21	2	Nut-HF
4	3256-24	4	Washer-Flat
5	3231-22	2	Bolt-CARR
6	82-5480	1	Deck ASM
7	29-5590-03	2	Bracket-Pivot
8	32152-1	4	Nut-Lock
9	51-3670	1	Deflector-Grass
10	3296-5	2	Nut-Lock
11	3211-15	2	Screw-HH
12	40-6230	2	Spring-Torsion
13	3230-18	4	Screw-CARR
15	98-5967	1	Spacer-Wheel
16	68-2730	2	Wheel-Gage
17	323-28	1	Screw-Hex Hd
18	3296-39	1	Nut-Lock
19	32151-72	2	Ring-Retaining
20	62-6520	2	Knob
21	43-8480	1	Decal-Danger
22	93-1122	2	Decal-Danger
23	98-3269	1	Decal-Made In USA
25	68-8340	1	Decal-Torque
26	67-5360	1	Decal-Danger
27	98-8038	1	Decal-36"
28	66-1340	1	Decal-Discharge


Ref. No.	Part No.	Qty.	Description

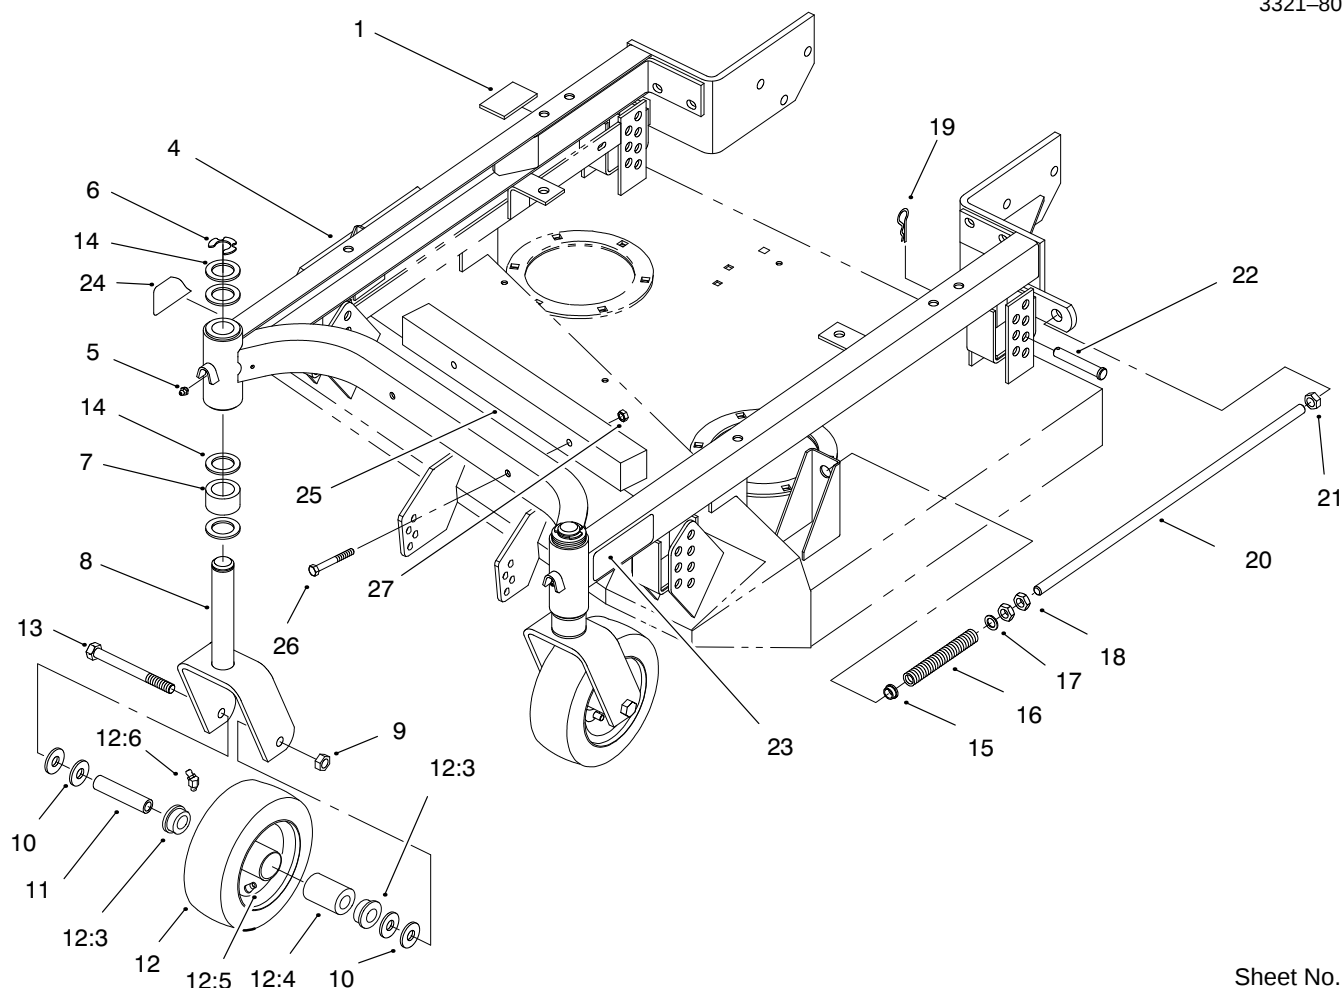

Sheet No.: 3

Carrier Frame and Castor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	74-0350	4	Cushion-Rubber	24	85-7460	1	Decal-HOC RH
4	95-2821	1	36" Carrier Frame ASM	25	80-3340	1	Weight-Front
5	302-5	2	Fitting-Grease	26	322-12	2	Screw-HH
6	32151-91	2	Ring-Retaining	27	3296-29	2	Nut-Lock
7	93-1167	2	Spacer-Castor				
8	98-2857	2	Castor Fork ASM				
9	32153-5	2	Nut-Lock				
10	3256-6	8	Washer-Flat				
11	68-8980	2	Bushing-Spanner				
12	98-2859	2	Wheel & Tire ASM				
12:3	62-5580	4	Bearing-Outside				
12:4	62-5570	2	Bearing-Roller				
12:5	232-27	2	Valve Stem				
12:6	302-11	2	Fitting-Grease				
13	325-19	2	Screw-HH				
14	3-6781	8	Washer-Thrust				
15	256-156	2	Bushing-Flange				
16	74-0290	2	Spring-Compression				
17	41-8440	2	Spacer-Hardened				
18	3218-5	4	Nut-Jam				
19	3290-355	4	Pin-Hair				
20	74-0310	2	Shaft-Adjusting				
21	3296-45	2	Nut				
22	283-55	4	Pin-Clevis				
23	85-7450	1	Decal-HOC LH				

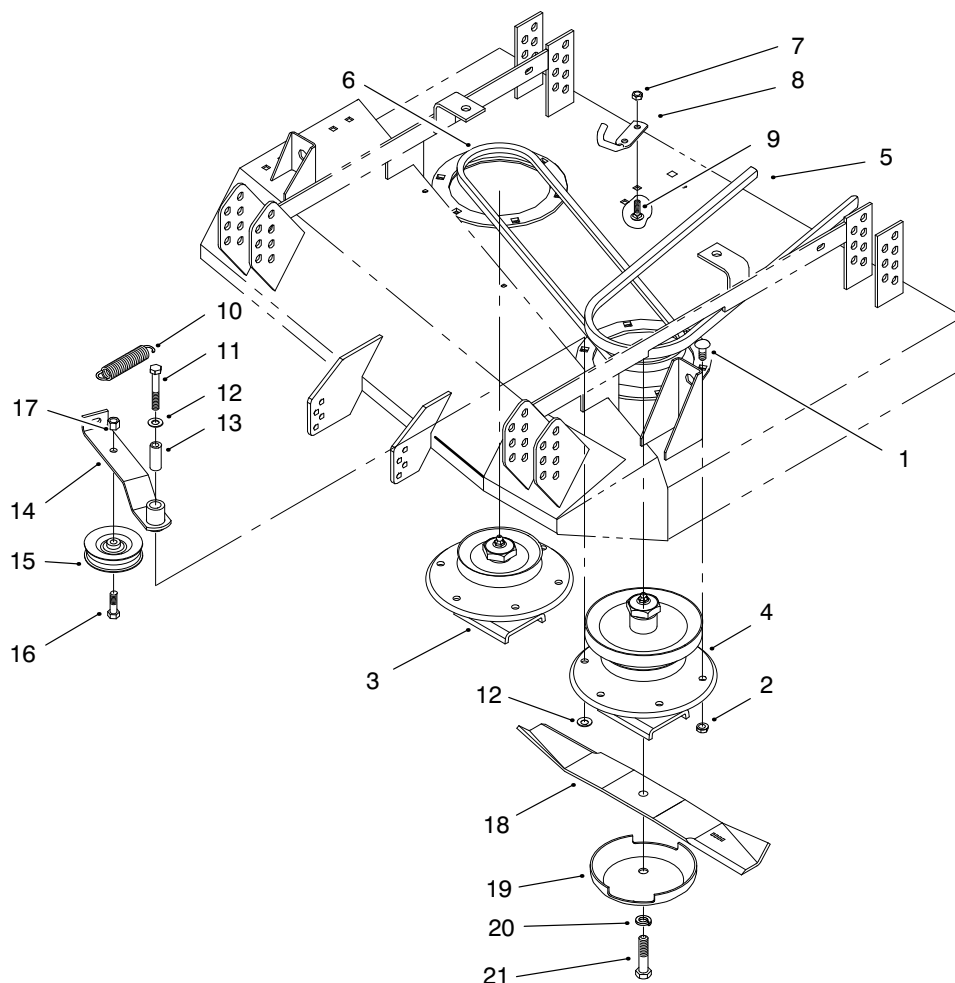


Sheet No.: 4

Spindle and Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	3231-22	11	Bolt-CARR
2	32128-21	12	Nut-HF
3	27-0870	1	Spindle Housing ASM
4	54-7781	1	Housing Spindle ASM
5	55-7660	1	"v" Belt-Drive
6	51-3530	1	"v" Belt
7	3296-29	2	Nut-Lock
8	56-4360	1	Rod-Spring
9	3230-22	2	Screw-CARR
10	51-3650	1	Spring-Extension
11	323-12	1	Screw
12	3256-24	2	Washer-Flat
13	51-3641	1	Sleeve-Pivot
14	56-4341	1	Wa-Arm
15	51-3660	1	Pulley-Idler
16	3211-5	1	Screw-HH
17	3296-5	1	Nut-Lock
18	56-2390	2	Blade-18"
19	72-9361	2	Anti-Scalp Cup
20	3253-27	2	Washer-Lock
21	44-2200	2	Bolt-Blade


Ref. No.	Part No.	Qty.	Description

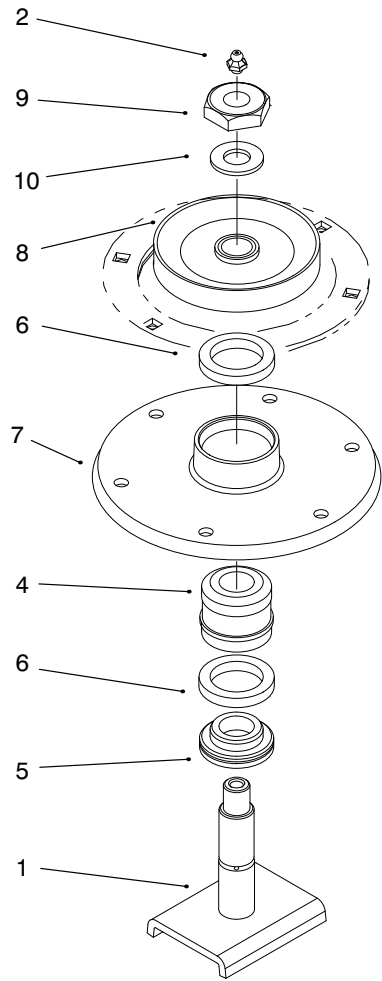

Sheet No.: 300

Spindle Housing Assembly No. 27-0870

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	27-0920	1	Shaft-Spindle				
2	302-2	1	Fitting-Grease				
4	46-8530	1	Bearing ASM				
5	27-0950	1	Spacer-Bearing				
6	253-139	2	Seal-Oil				
7	61-4160	1	Spindle-52"				
8	27-0970	1	Pulley & Hub ASM				
9	32146-20	1	Nut-Lock				
10	7-4150	1	Washer				

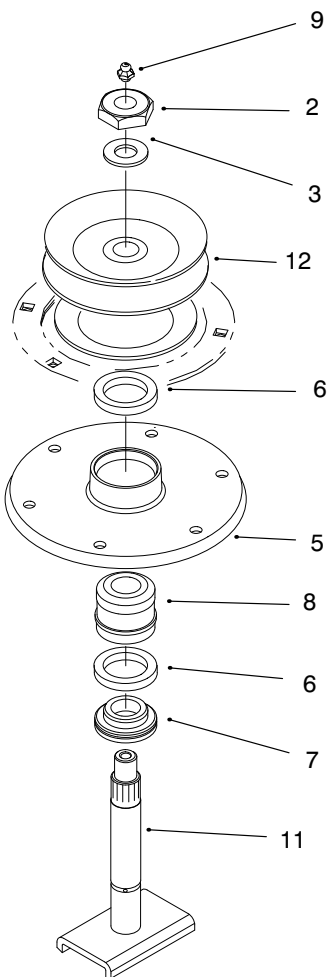

Sheet No.: 201

Spindle Housing Assembly No. 54-7781

Ref. No.	Part No.	Qty.	Description
2	32146-20	1	Nut-Lock
3	7-4150	1	Washer
5	61-4160	1	Spindle-52"
6	253-139	2	Seal-Oil
7	27-0950	1	Spacer-Bearing
8	46-8530	1	Bearing ASM
9	302-2	1	Fitting-Grease
11	51-3551	1	Spindle-Shaft
12	55-7610	1	Pulley & Hub ASM

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-6781	2	14	8	Washer-Thrust
7-4150	4	10	1	Washer
7-4150	5	3	1	Washer
27-0870	3	3	1	Spindle Housing ASM
27-0920	4	1	1	Shaft-Spindle
27-0950	4	5	1	Spacer-Bearing
27-0950	5	7	1	Spacer-Bearing
27-0970	4	8	1	Pulley & Hub ASM
29-5590-03	1	7	2	Bracket-Pivot
40-6230	1	12	2	Spring-Torsion
41-8440	2	17	2	Spacer-Hardened
43-8480	1	21	1	Decal-Danger
44-2200	3	21	2	Bolt-Blade
46-8530	4	4	1	Bearing ASM
46-8530	5	8	1	Bearing ASM
51-3530	3	6	1	"v" Belt
51-3551	5	11	1	Spindle-Shaft
51-3641	3	13	1	Sleeve-Pivot
51-3650	3	10	1	Spring-Extension
51-3660	3	15	1	Pulley-Idler
51-3670	1	9	1	Deflector-Grass
52-4780	1	2	2	Rod-Belt
54-7781	3	4	1	Housing Spindle ASM
55-7610	5	12	1	Pulley & Hub ASM
55-7660	3	5	1	"v" Belt-Drive
56-2390	3	18	2	Blade-18"
56-4341	3	14	1	Wa-Arm
56-4360	3	8	1	Rod-Spring
61-4160	4	7	1	Spindle-52"
61-4160	5	5	1	Spindle-52"
62-5570	2	12:4	2	Bearing-Roller
62-5580	2	12:3	4	Bearing-Outside
62-6520	1	20	2	Knob
66-1340	1	28	1	Decal-Discharge
67-5360	1	26	1	Decal-Danger
68-2730	1	16	2	Wheel-Gage
68-8340	1	25	1	Decal-Torque
68-8980	2	11	2	Bushing-Spanner
72-9361	3	19	2	Anti-Scalp Cup
74-0290	2	16	2	Spring-Compression
74-0310	2	20	2	Shaft-Adjusting
74-0350	2	1	4	Cushion-Rubber
80-3340	2	25	1	Weight-Front
82-5460	1	1	1	Cover ASM
82-5480	1	6	1	Deck ASM
85-7450	2	23	1	Decal-HOC LH
85-7460	2	24	1	Decal-HOC RH
93-1122	1	22	2	Decal-Danger
93-1167	2	7	2	Spacer-Castor
95-2821	2	4	1	36" Carrier Frame ASM
98-2857	2	8	2	Castor Fork ASM
98-2859	2	12	2	Wheel & Tire ASM
98-3269	1	23	1	Decal-Made In USA
98-5967	1	15	1	Spacer-Wheel
98-8038	1	27	1	Decal-36"
232-27	2	12:5	2	Valve Stem
253-139	4	6	2	Seal-Oil
253-139	5	6	2	Seal-Oil
256-156	2	15	2	Bushing-Flange
283-55	2	22	4	Pin-Clevis
302-2	4	2	1	Fitting-Grease
302-2	5	9	1	Fitting-Grease

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
302-5	2	5	2	Fitting-Grease
302-11	2	12:6	2	Fitting-Grease
322-12	2	26	2	Screw-HH
323-12	3	11	1	Screw
323-28	1	17	1	Screw-Hex Hd
325-19	2	13	2	Screw-HH
3211-5	3	16	1	Screw-HH
3211-15	1	11	2	Screw-HH
3218-5	2	18	4	Nut-Jam
3230-18	1	13	4	Screw-CARR
3230-22	3	9	2	Screw-CARR
3231-22	1	5	2	Bolt-CARR
3231-22	3	1	11	Bolt-CARR
3253-27	3	20	2	Washer-Lock
3256-6	2	10	8	Washer-Flat
3256-24	1	4	4	Washer-Flat
3256-24	3	12	2	Washer-Flat
3290-355	2	19	4	Pin-Hair
3296-5	1	10	2	Nut-Lock
3296-5	3	17	1	Nut-Lock
3296-29	2	27	2	Nut-Lock
3296-29	3	7	2	Nut-Lock
3296-39	1	18	1	Nut-Lock
3296-45	2	21	2	Nut
32128-21	1	3	2	Nut-HF
32128-21	3	2	12	Nut-HF
32146-20	4	9	1	Nut-Lock
32146-20	5	2	1	Nut-Lock
32151-72	1	19	2	Ring-Retaining
32151-91	2	6	2	Ring-Retaining
32152-1	1	8	4	Nut-Lock
32153-5	2	9	2	Nut-Lock

[illegible]

