



**Count on it.**

# Parts Catalog

## TimeCutter® SS 4225

### Riding Mower

Model No. 74726—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                                 |    |
|---------------------------------------------------------------------------------|----|
| Frame Assembly . . . . .                                                        | 4  |
| Deck Lift Assembly . . . . .                                                    | 6  |
| Fork and Caster Wheel Assembly . . . . .                                        | 8  |
| Traction Drive Assembly . . . . .                                               | 10 |
| Left Hand Hydro Transaxle Assembly No. 119-3330 . . . . .                       | 12 |
| Right Hand Hydro Transaxle Assembly No. 119-3331 . . . . .                      | 14 |
| Brake Assembly . . . . .                                                        | 16 |
| Tire Assembly No. 131-3671 . . . . .                                            | 18 |
| Seat Assembly . . . . .                                                         | 20 |
| Motion Control Assembly . . . . .                                               | 22 |
| Engine and Muffler Assembly . . . . .                                           | 24 |
| Fuel System Assembly with Non-Canister Style Air Filter . . . . .               | 26 |
| Carburetor Assembly with Non-Canister Style Air Filter . . . . .                | 28 |
| Air Intake and Filtration Assembly with Non-Canister Style Air Filter . . . . . | 30 |
| Ignition and Electrical Assembly . . . . .                                      | 32 |
| Crankcase and Crankshaft Assembly . . . . .                                     | 34 |
| Governor Control Assembly . . . . .                                             | 36 |
| Piston and Cylinder Head Assembly . . . . .                                     | 38 |
| Blower Housing Assembly . . . . .                                               | 40 |
| Gasket and Seal Kit . . . . .                                                   | 42 |
| Body Styling and Fuel Tank Assembly . . . . .                                   | 44 |
| Battery and Electrical Assembly . . . . .                                       | 46 |
| 42 Inch Deck Assembly . . . . .                                                 | 48 |
| 42 Inch Decal Assembly No. 137-7041 . . . . .                                   | 50 |
| Model Specific Decal Assembly . . . . .                                         | 52 |
| Speed Control Decal, HOC Decal and Service Decal Assembly . . . . .             | 54 |
| Clutch Assembly . . . . .                                                       | 56 |
| Attachments and Accessories . . . . .                                           | 58 |


# Frame Assembly

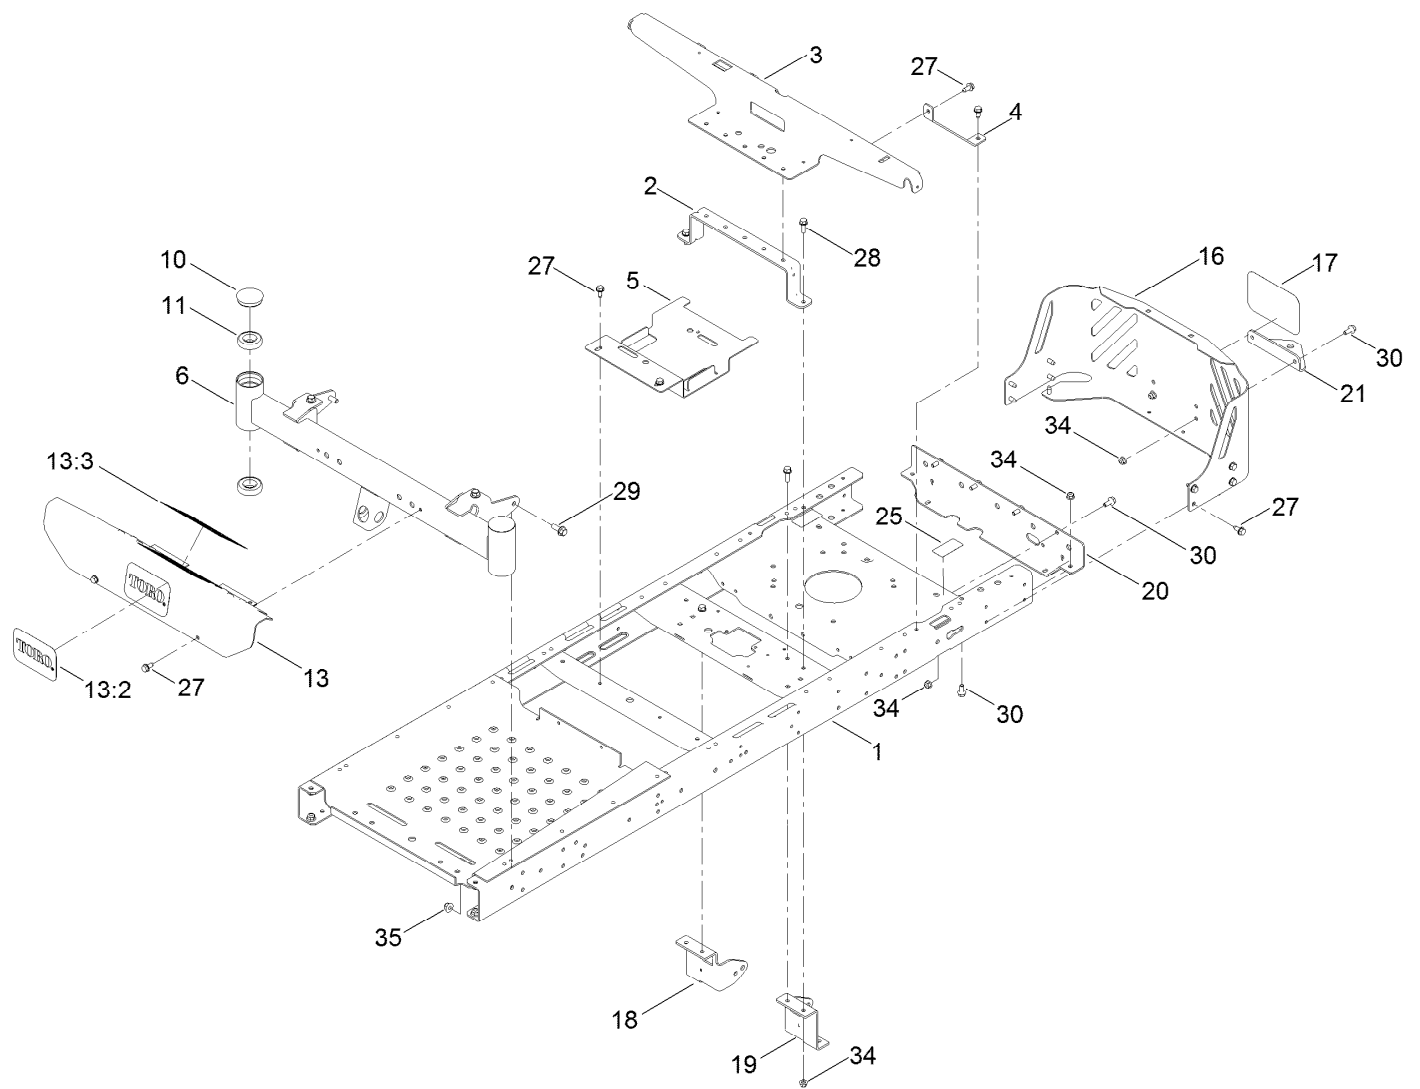

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 135-0509-01        | 1           | Frame ASM                 | 17          | 99-4693            | 1           | Decal                      |
| 2           | 135-0686-03        | 1           | Brace-Seat, Rear (Narrow) | 18          | 137-7020-01        | 1           | Mount-Hydro, Front (Right) |
| 3           | 131-1040-03        | 1           | Support-Pod               | 19          | 137-7021-01        | 1           | Mount-Hydro, Front (Left)  |
| 4           | 119-3431-03        | 2           | Support-Tank, Rear        | 20          | 130-6950-01        | 1           | Crossmember-Rear, Narrow   |
| 5           | 135-0507-03        | 1           | Bracket-Battery           | 21          | 117-1232-03        | 1           | Bracket-Hitch              |
| 6           | 125-1742-01        | 1           | Axle-Front, Narrow        | 25          | 121-2989           | 2           | Decal-Bypass               |
| 10          | 116-4348           | 2           | Cap-Grease                | 27          | 32144-70           | 18          | Screw-HWHTF                |
| 11          | 109-3678           | 4           | Bearing-Ball              | 28          | 3234-29            | 4           | Screw-HHF                  |
| 13          | 132-0890           | 1           | Footrest ASM              | 29          | 3234-42            | 6           | Screw-HHF                  |
| 13:2        | 105-8278           | 1           | Decal                     | 30          | 3234-47            | 8           | Screw-HHF                  |
| 13:3        | 132-0869           | 1           | Decal-Danger              | 34          | 104-8300           | 12          | Nut-HF, NI                 |
| 16          | 127-3353-03        | 1           | Guard-Engine, Narrow      | 35          | 104-8301           | 6           | Nut-HF, NI                 |


# Deck Lift Assembly

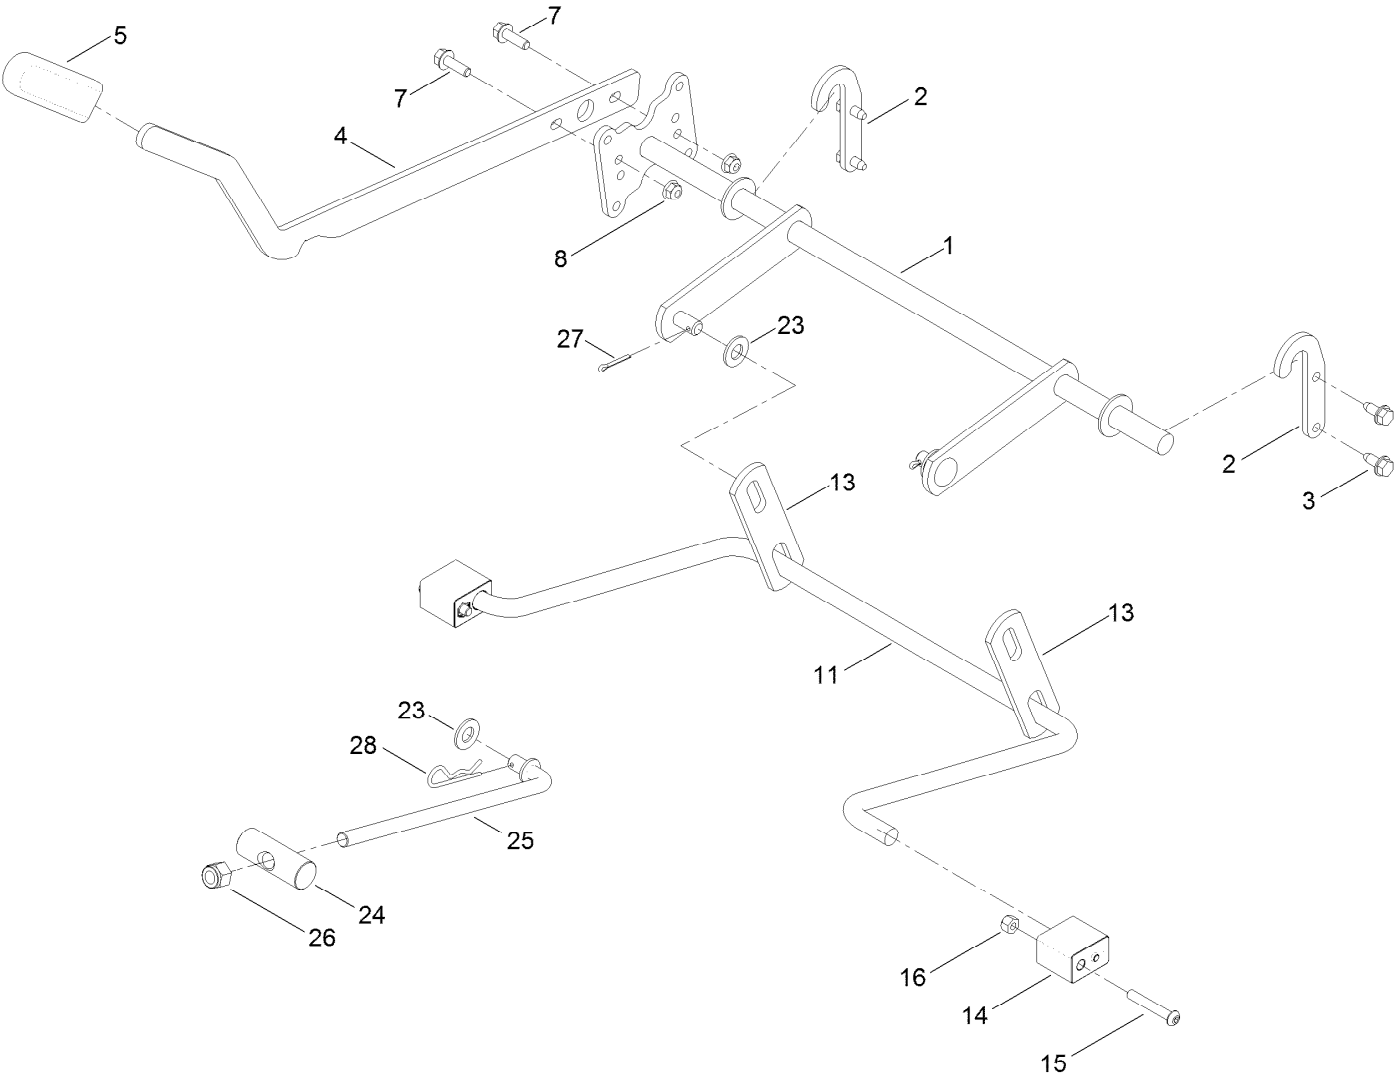

## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-6872-03        | 1           | Lift-Deck, Narrow  | 14          | 108-7845           | 2           | Block-Pivot        |
| 2           | 119-8875           | 2           | Bracket-Lift       | 15          | 120-5499           | 2           | Screw-HSBH         |
| 3           | 32144-70           | 4           | Screw-HWHTF        | 16          | 3296-29            | 2           | Nut-Lock, NI       |
| 4           | 119-3427-03        | 1           | Lever-Lift         | 23          | 3256-26            | 3           | Washer-Flat        |
| 5           | 1-633268           | 1           | Grip-Lever         | 24          | 119-8810           | 1           | Pin-Pivot          |
| 7           | 3234-29            | 2           | Screw-HHF          | 25          | 133-4319           | 1           | Rod-Mount, Deck    |
| 8           | 104-8300           | 2           | Nut-HF, NI         | 26          | 3296-19            | 1           | Nut-Hex            |
| 11          | 108-7839           | 1           | Arm-Lift, Rear     | 27          | 3272-11            | 2           | Pin-Cotter         |
| 13          | 108-7840           | 2           | Link-Lift          | 28          | 1-806005           | 1           | Pin-Cotter         |

# Fork and Caster Wheel Assembly

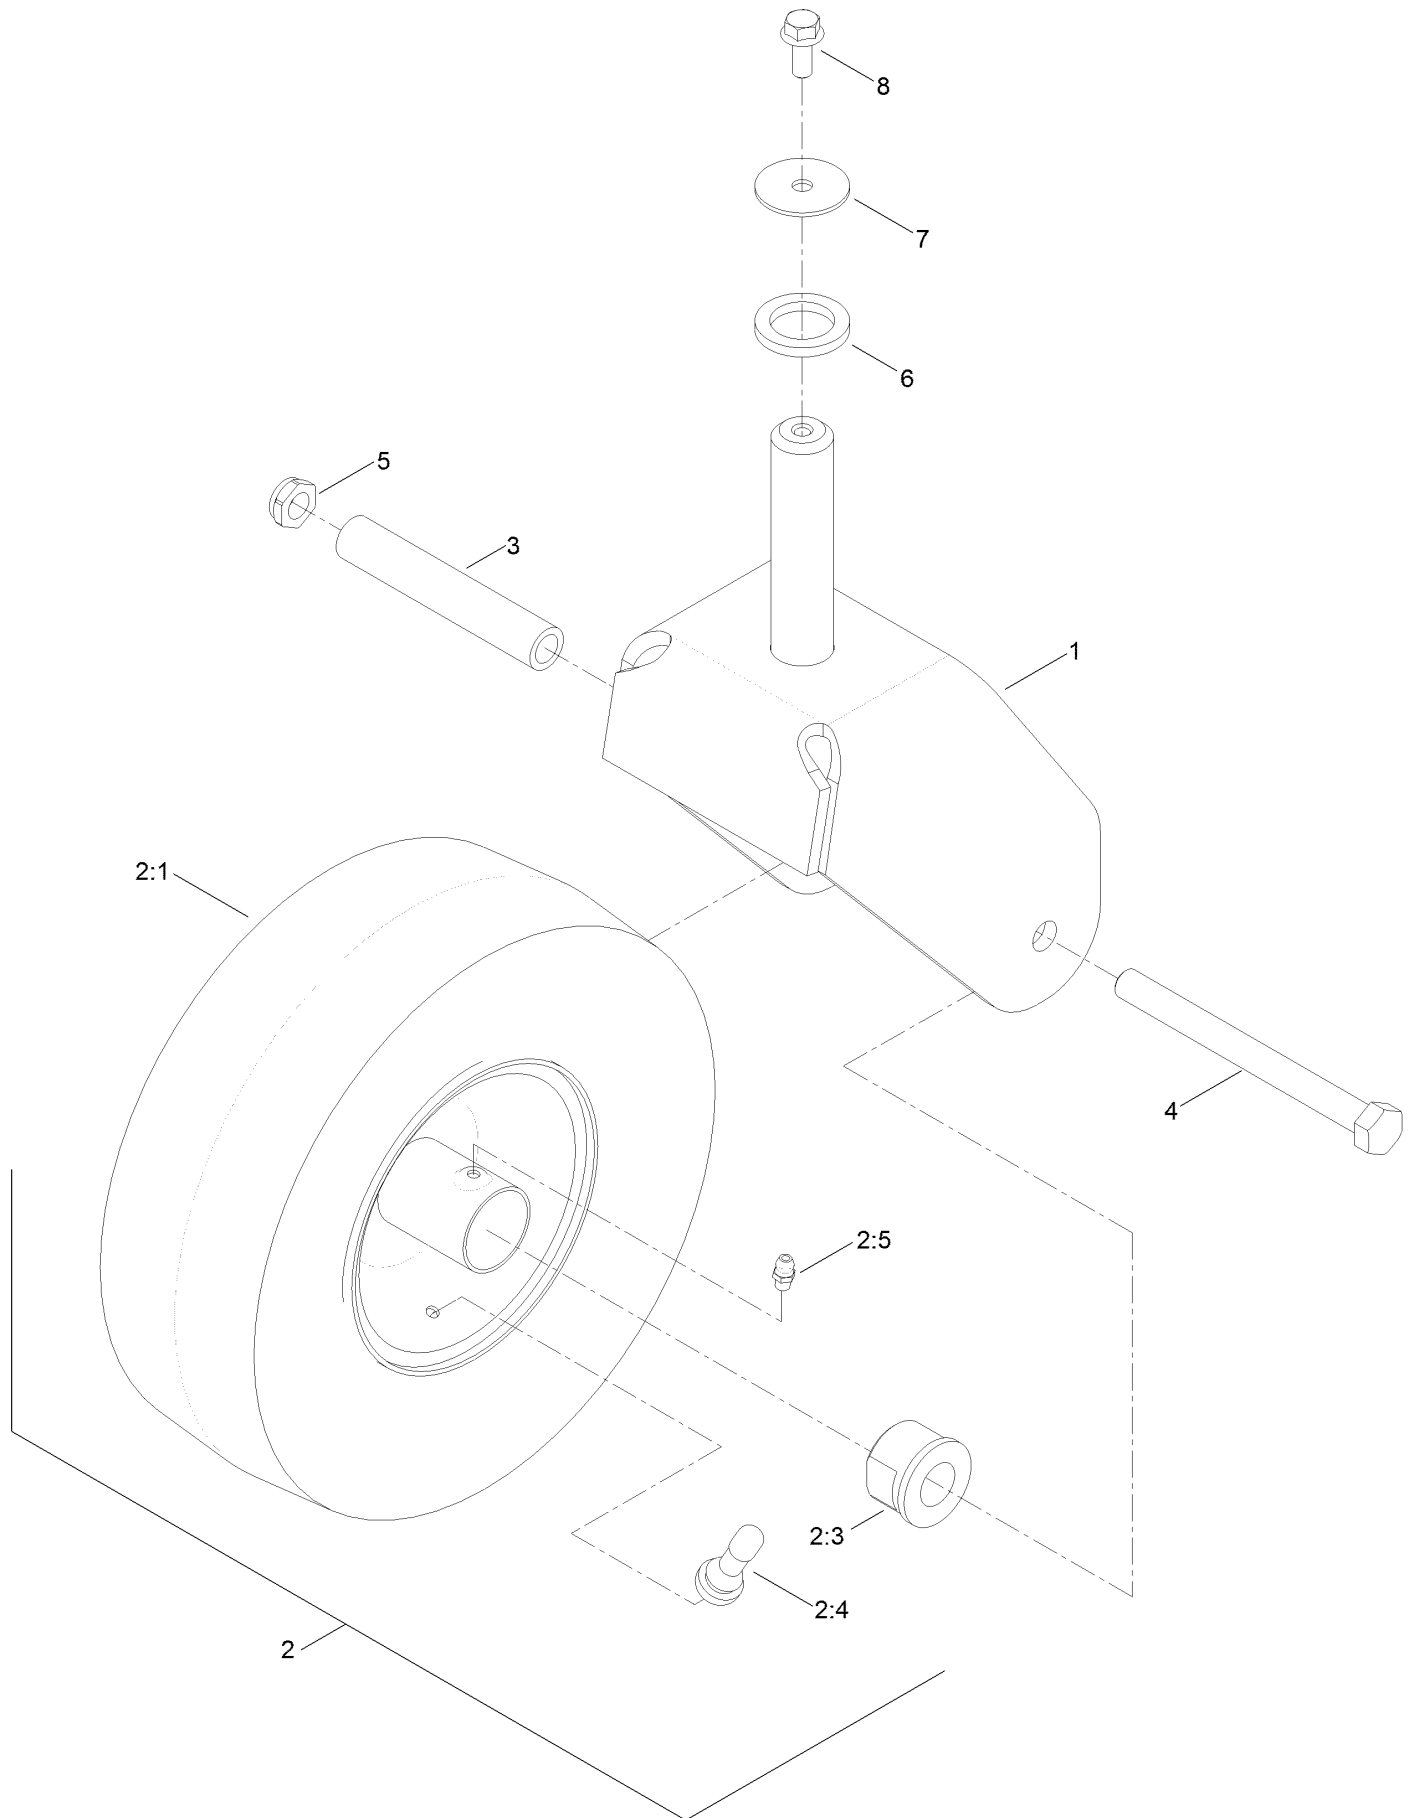

## Fork and Caster Wheel Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-2266-01        | 2           | Fork-Caster        |
| 2           | 130-0736           | 2           | Caster Wheel ASM   |
| 2:1         | 130-0735           | 1           | Tire               |
| 2:3         | 114-1640           | 2           | Bushing-Flange     |
| 2:4         | 232-27             | 1           | Stem-Valve         |
| 2:5         | 302-5              | 1           | Fitting-Grease     |
| 2:6         | 105-0844           | 1           | Tube-Inner ■●      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 3           | 104-3667           | 2           | Bushing-Spanner    |
| 4           | 325-22             | 2           | Screw-HH           |
| 5           | 3296-45            | 2           | Nut-Hex            |
| 6           | 117-7394           | 2           | Washer-Thrust      |
| 7           | 3256-68            | 2           | Washer-Flat        |
| 8           | 3234-47            | 2           | Screw-HHF          |

● Not illustrated

■ Optional Equipment

## Traction Drive Assembly

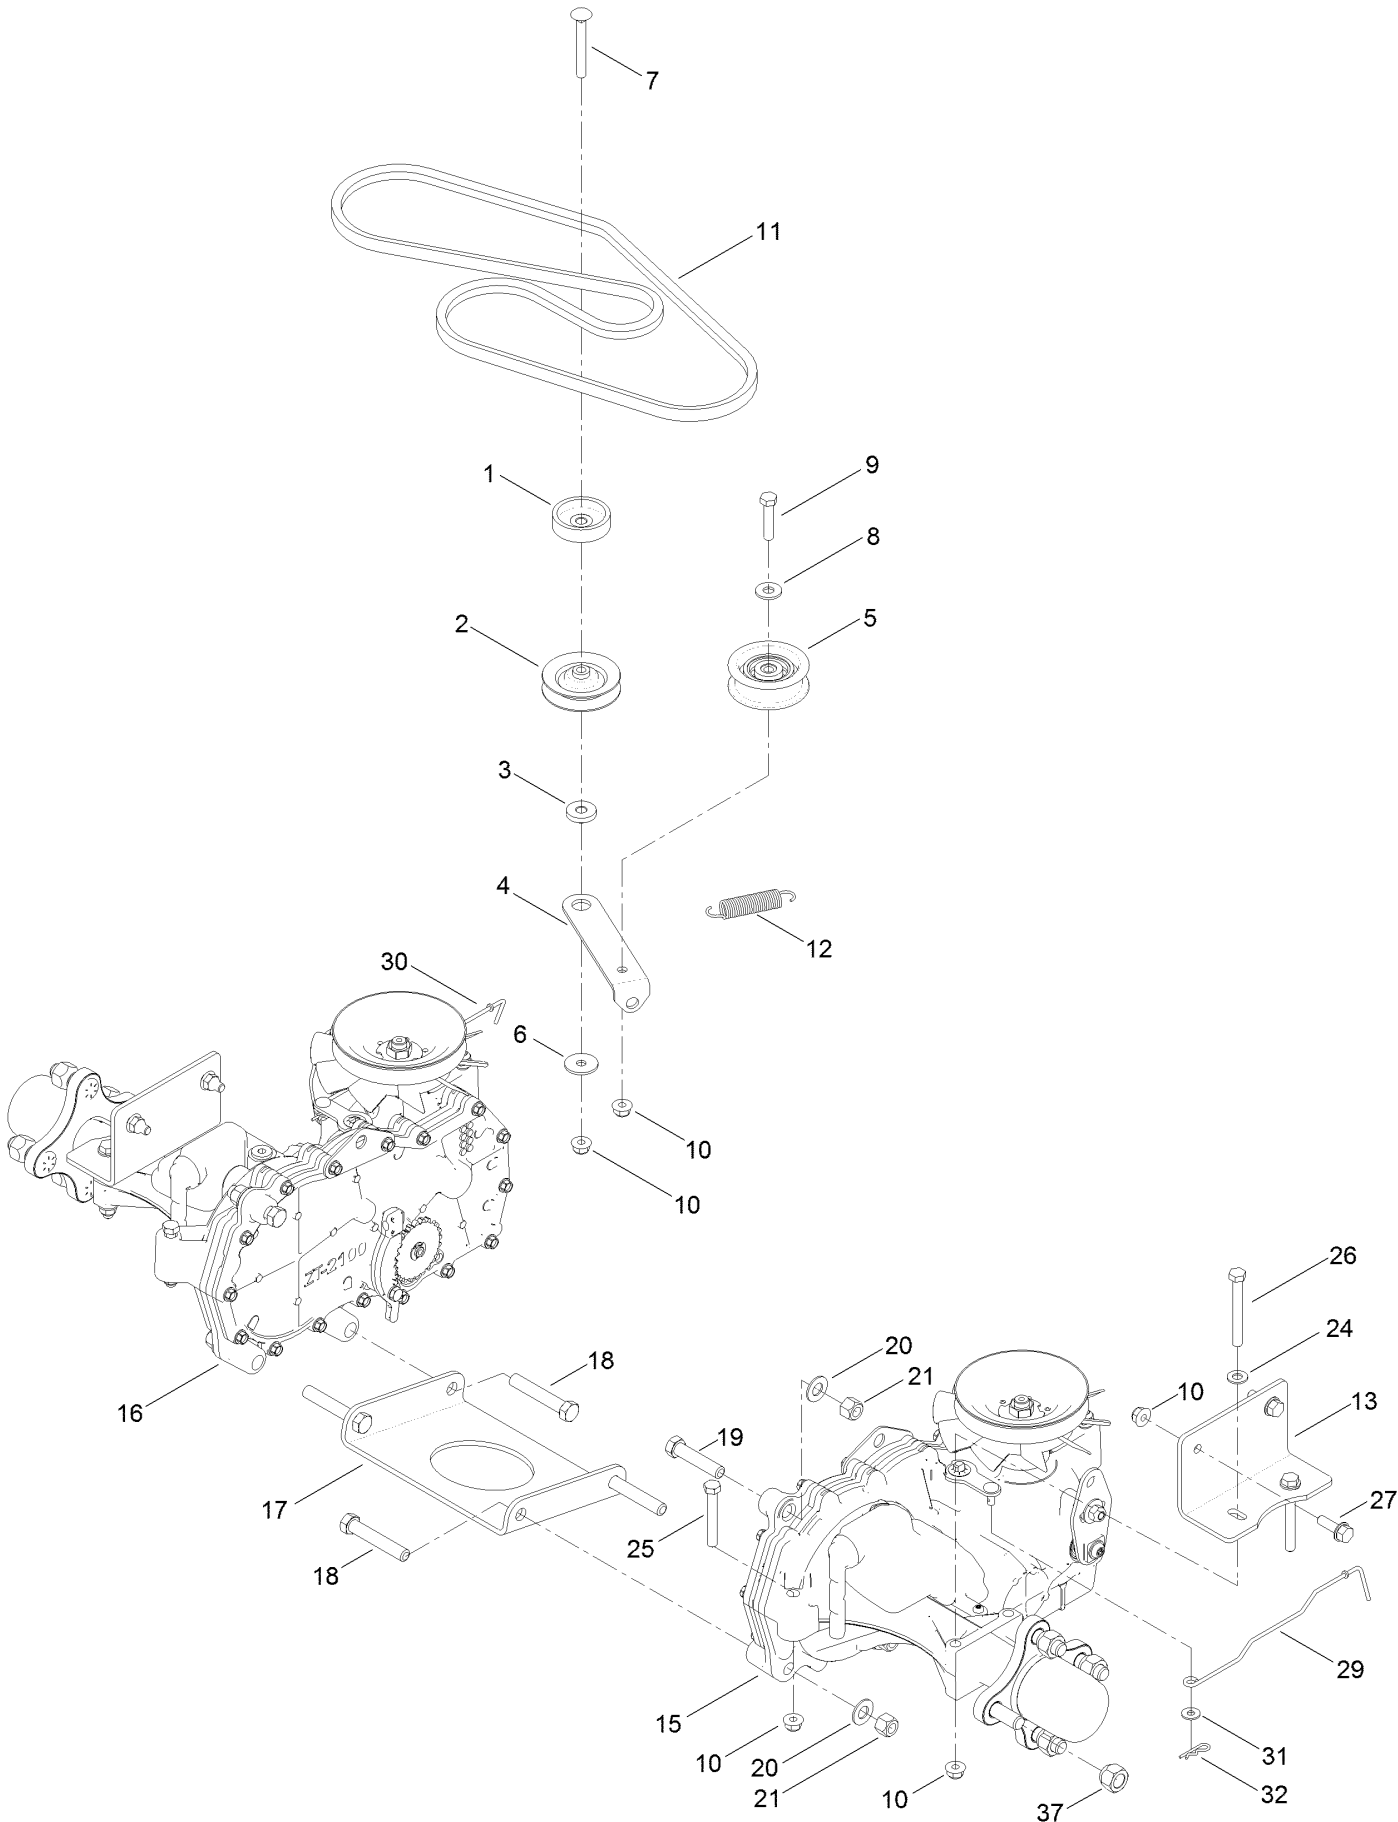

## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3353           | 1           | Spacer                 | 17          | 119-3339-03        | 1           | Plate-Cross, Hydro |
| 2           | 119-8822           | 1           | Pulley-Idler           | 18          | 324-10             | 4           | Screw-HH           |
| 3           | 119-3327           | 1           | Spacer-Arm, Idler      | 19          | 324-8              | 2           | Screw-HH           |
| 4           | 119-3326           | 1           | Arm-Idler              | 20          | 3256-25            | 6           | Washer-Flat        |
| 5           | 106-2176           | 1           | Pulley-Idler           | 21          | 3296-48            | 6           | Nut-Lock, NI       |
| 6           | 5-4460             | 1           | Washer-Pivot           | 24          | 3256-23            | 6           | Washer-Plain       |
| 7           | 3230-8             | 1           | Screw-CARR             | 25          | 322-11             | 4           | Screw-HH           |
| 8           | 3256-3             | 1           | Washer-Flat            | 26          | 322-13             | 4           | Screw-HH           |
| 9           | 322-7              | 1           | Screw-HH               | 27          | 3234-29            | 4           | Screw-HHF          |
| 10          | 104-8300           | 14          | Nut-HF, NI             | 29          | 131-0900           | 1           | Rod-Bypass, LH     |
| 11          | 130-6975           | 1           | V-Belt                 | 30          | 130-7049           | 1           | Rod-Bypass, RH     |
| 12          | 104-6415           | 1           | Spring-Return, Pedal   | 31          | 119-8952           | 2           | Washer             |
| 13          | 117-7264-03        | 2           | Mount-Hydro            | 32          | 3290-307           | 2           | Pin-Cotter         |
| 15          | 119-3330           | 1           | LH Hydro Transaxle ASM | 37          | 242-50             | 8           | Nut-Lug            |
| 16          | 119-3331           | 1           | RH Hydro Transaxle ASM |             |                    |             |                    |

# Left Hand Hydro Transaxle Assembly No. 119-3330




# Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5532           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5534           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Control Arm Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9861           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5730           | 1           | RH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 120-5549           | 1           | Bypass Kit                |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Puller-Hub, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated

# Right Hand Hydro Transaxle Assembly No. 119-3331

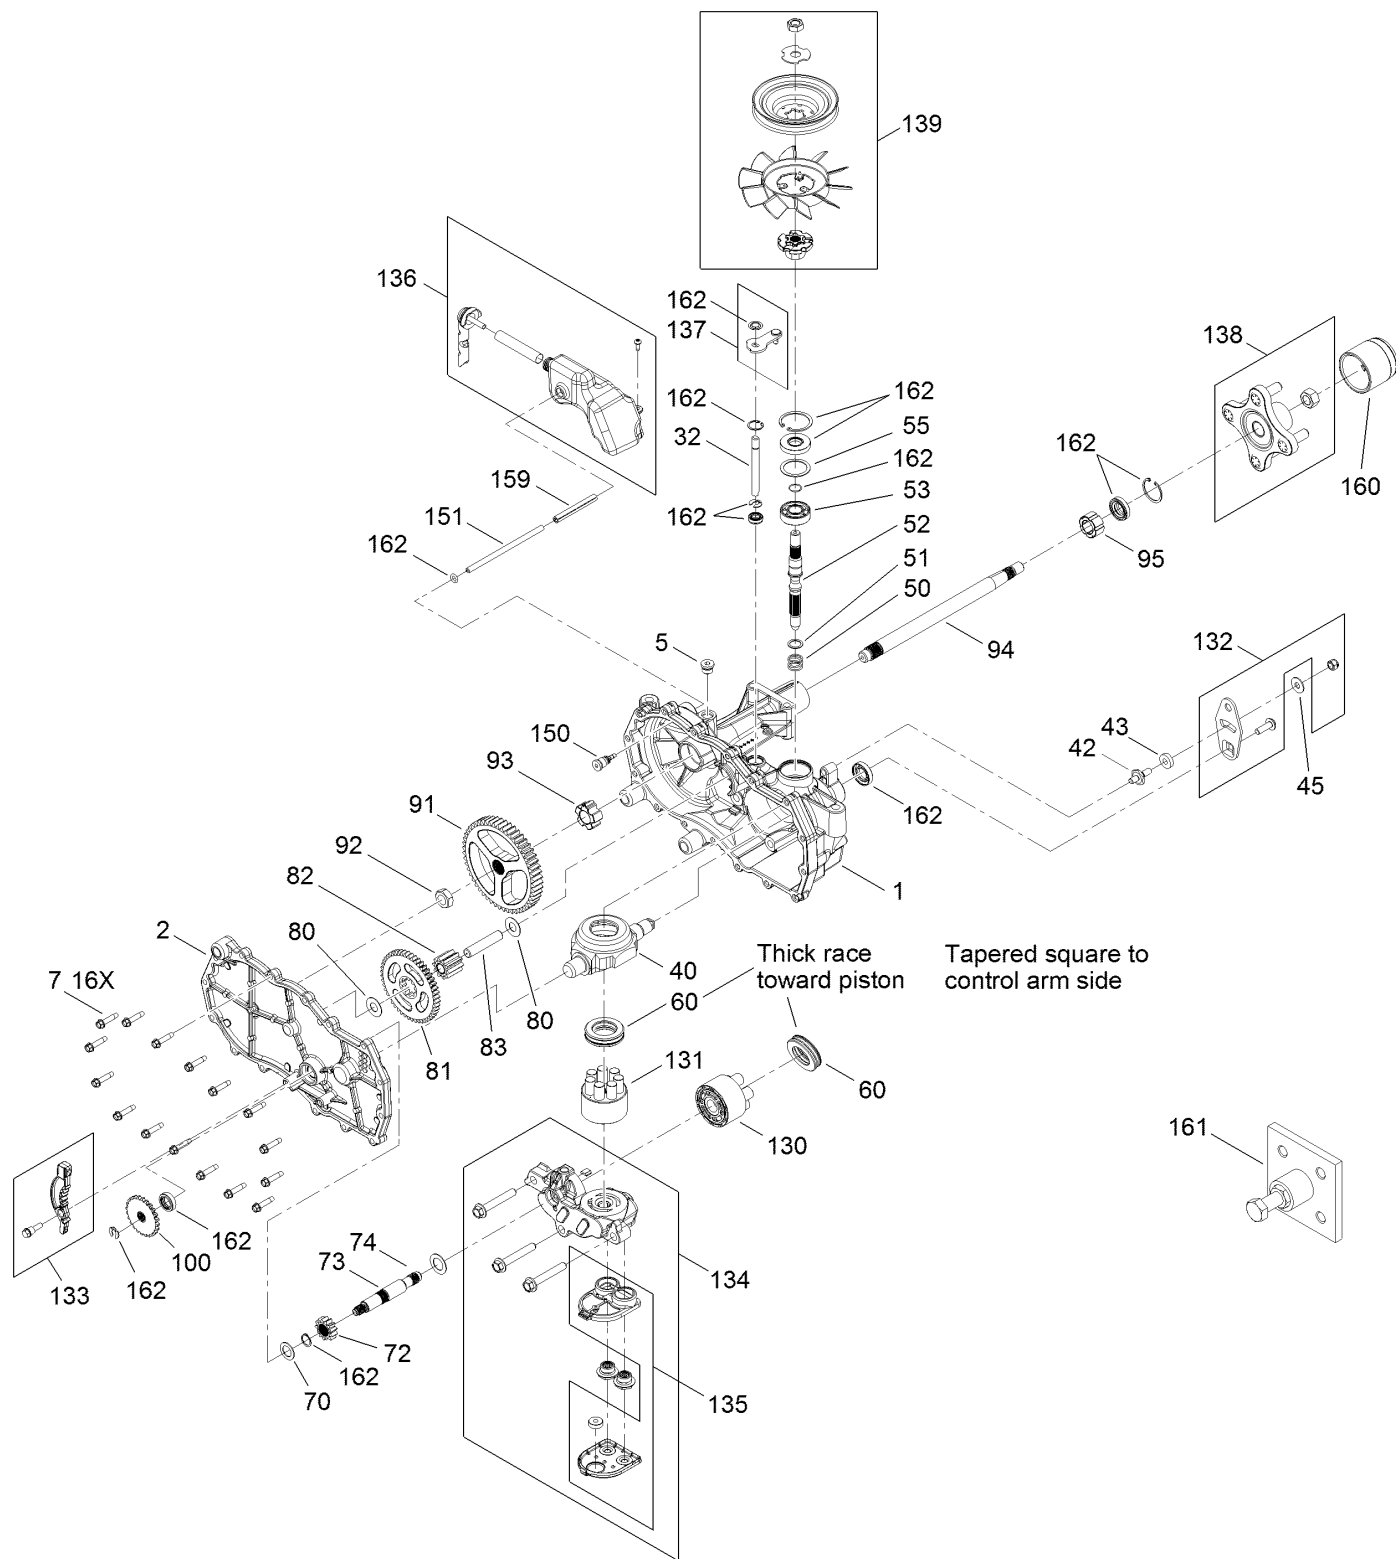


# Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5531           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5533           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Control Arm Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9862           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5735           | 1           | LH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 107-2489           | 1           | Bypass Arm Kit            |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Puller-Hub, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated

## Brake Assembly

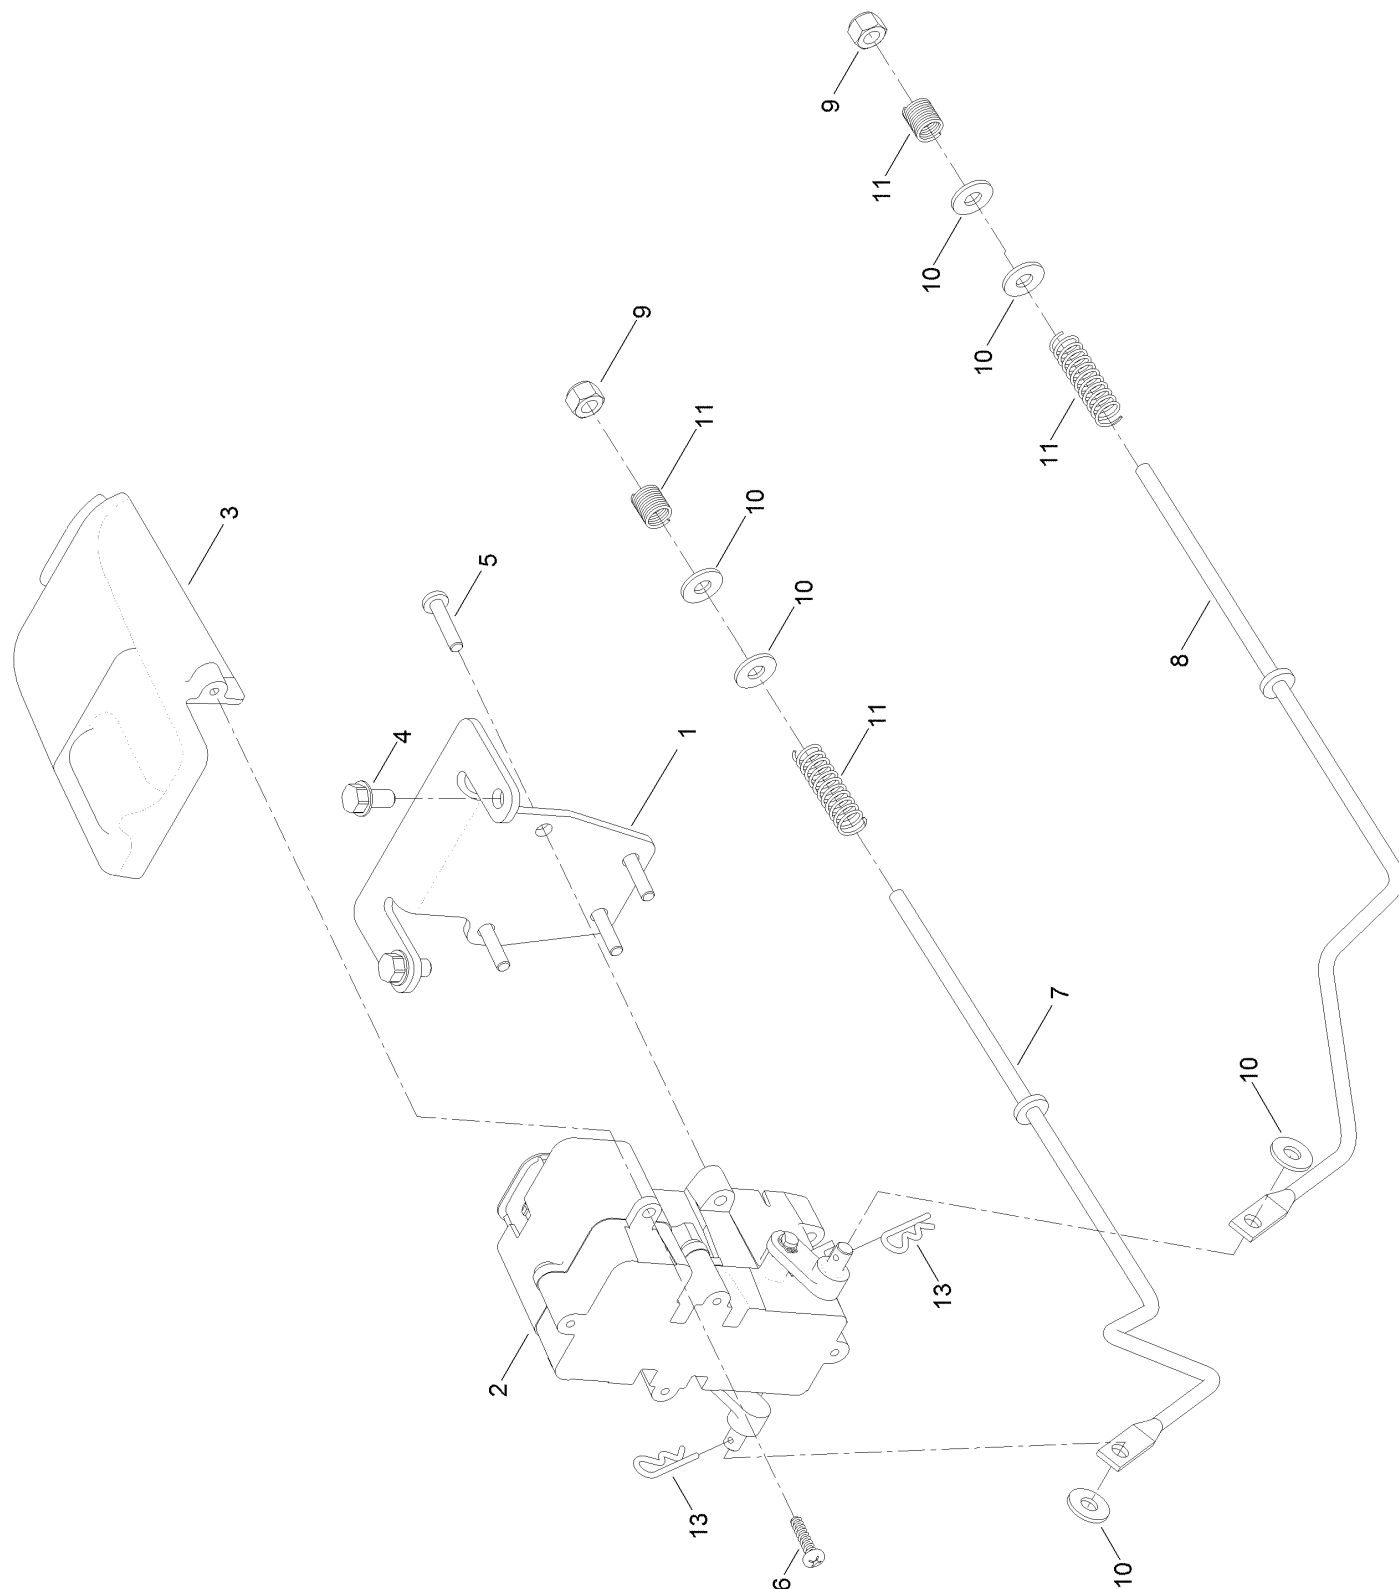

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-0790-03        | 1           | Bracket-Mount, Brake | 7           | 121-2974           | 1           | Rod-Brake, RH      |
| 2           | 136-4213           | 1           | Brake Box ASM        | 8           | 121-2975           | 1           | Rod-Brake, LH      |
| 3           | 132-6949           | 1           | Cover-Connector      | 9           | 3296-42            | 2           | Nut-Lock, NI       |
| 4           | 32144-4            | 2           | Screw-HWH            | 10          | 119-8952           | 6           | Washer             |
| 5           | 32144-36           | 4           | Screw-PPH            | 11          | 117-1169           | 4           | Spring-Compression |
| 6           | 94-4496            | 2           | Screw-PPH            | 13          | 3290-307           | 2           | Pin-Cotter         |

# Tire Assembly No. 131-3671




## Tire Assembly No. 131-3671 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 1           | 131-3671           | 2           | 2 Ply Wheel And Tire ASM |
| 1:1         | 131-3678           | 1           | Tire-2 Ply               |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:3         | 232-27             | 1           | Stem-Valve         |
| 1:99        | 107-2491           | 1           | Tube-Tire ●        |

● Not illustrated


# Seat Assembly

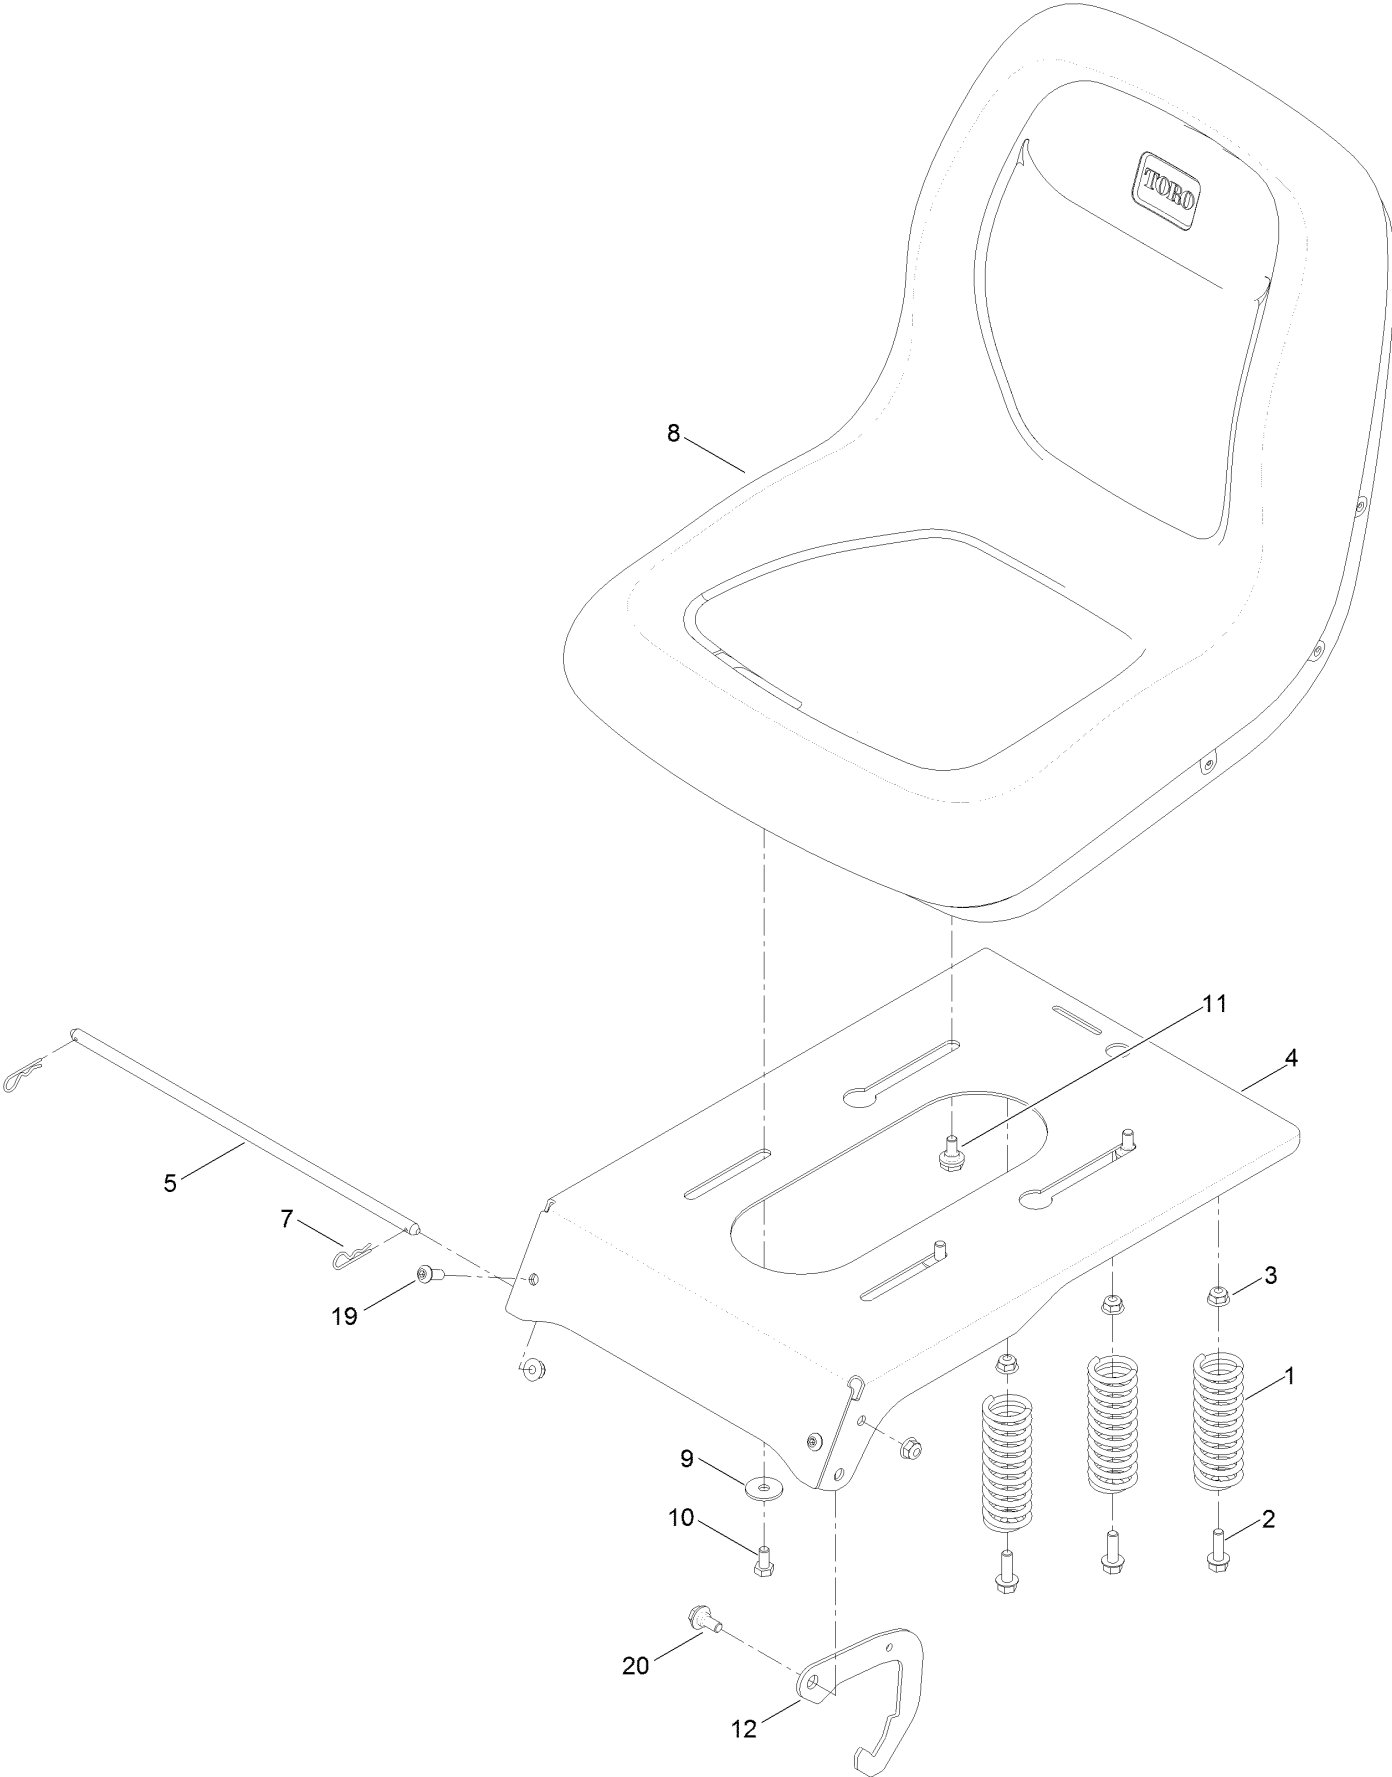

## Seat Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 92-7054            | 3           | Spring-Compression | 9           | 5-4460             | 2           | Washer-Pivot       |
| 2           | 3234-29            | 3           | Screw-HHF          | 10          | 322-2              | 2           | Screw-HH           |
| 3           | 104-8300           | 5           | Nut-HF, NI         | 11          | 37-8771            | 2           | Bolt-Shoulder      |
| 4           | 131-4037-01        | 1           | Pan-Seat           | 12          | 132-9353           | 1           | Latch-Seat         |
| 5           | 119-3433           | 1           | Rod-Pivot, Narrow  | 19          | 3274-55            | 2           | Screw-HSBH         |
| 7           | 3290-250           | 2           | Pin-Cotter         | 20          | 19-1470            | 1           | Screw-Shoulder     |
| 8           | 119-8829           | 1           | Seat-18 Inch       |             |                    |             |                    |


# Motion Control Assembly

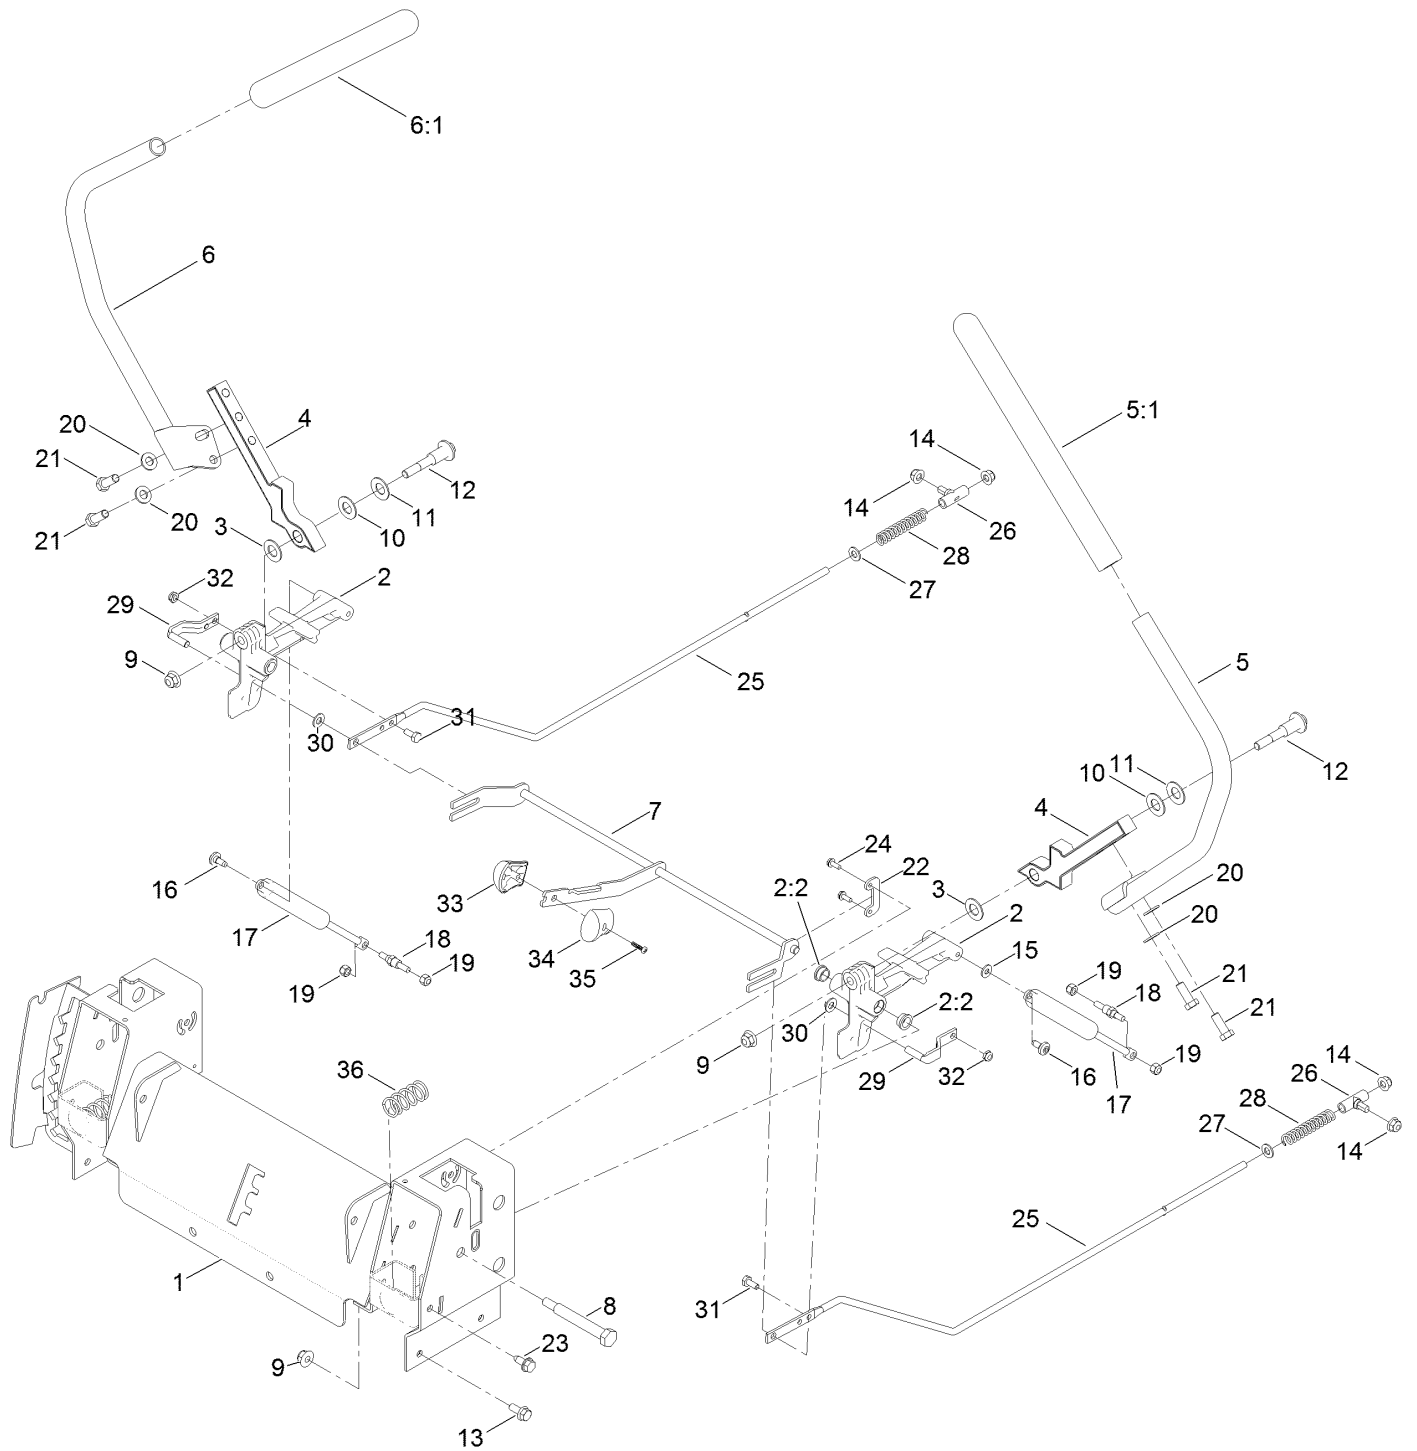

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 136-4156-03        | 1           | Control Box ASM    | 18          | 110-6810           | 2           | Stud-Damper            |
| 2           | 119-3470           | 2           | Actuator Arm ASM   | 19          | 3296-42            | 4           | Nut-Lock, NI           |
| 2:2         | 256-156            | 2           | Bushing-Flange     | 20          | 3256-24            | 4           | Washer-Flat            |
| 3           | 120-2273           | 2           | Washer-Nylon       | 21          | 323-6              | 4           | Screw-HH               |
| 4           | 133-9299-05        | 2           | Arm-Control        | 22          | 117-5385           | 2           | Retainer               |
| 5           | 133-7055           | 1           | Handle-Control, LH | 23          | 32144-70           | 4           | Screw-HWHTF            |
| 5:1         | 121-0726           | 1           | Grip               | 24          | 32144-1            | 4           | Screw-Taptite          |
| 6           | 133-7057           | 1           | Handle-Control, RH | 25          | 117-5388           | 2           | Rod-Hydro              |
| 6:1         | 121-0726           | 1           | Grip               | 26          | 119-8842           | 2           | Mount-Rod, Hydro       |
| 7           | 133-9300           | 1           | Speed Control ASM  | 27          | 3256-23            | 2           | Washer-Plain           |
| 8           | 115-5099           | 2           | Bolt-Pivot         | 28          | 1-603807           | 2           | Spring-Return, Neutral |
| 9           | 104-8301           | 4           | Nut-HF, NI         | 29          | 121-1753           | 2           | Pin-Rod, Hydro         |
| 10          | 117-1240           | 2           | Washer             | 30          | 93-6079            | 2           | Spacer-Nylon           |
| 11          | 119-8925           | 2           | Washer-Belleville  | 31          | 321-3              | 2           | Screw-HH               |
| 12          | 117-1198           | 2           | Bolt-Pivot         | 32          | 3296-56            | 2           | Nut-Lock, NI           |
| 13          | 3234-47            | 6           | Screw-HHF          | 33          | 132-9368           | 1           | Knob-RH                |
| 14          | 104-8300           | 10          | Nut-HF, NI         | 34          | 132-9369           | 1           | Knob-LH                |
| 15          | 119-8952           | 2           | Washer             | 35          | 94-4496            | 1           | Screw-PPH              |
| 16          | 120-7950           | 2           | Screw-Shoulder     | 36          | 119-8876           | 2           | Spring-Return          |
| 17          | 131-4132           | 2           | Damper             |             |                    |             |                        |


# Engine and Muffler Assembly

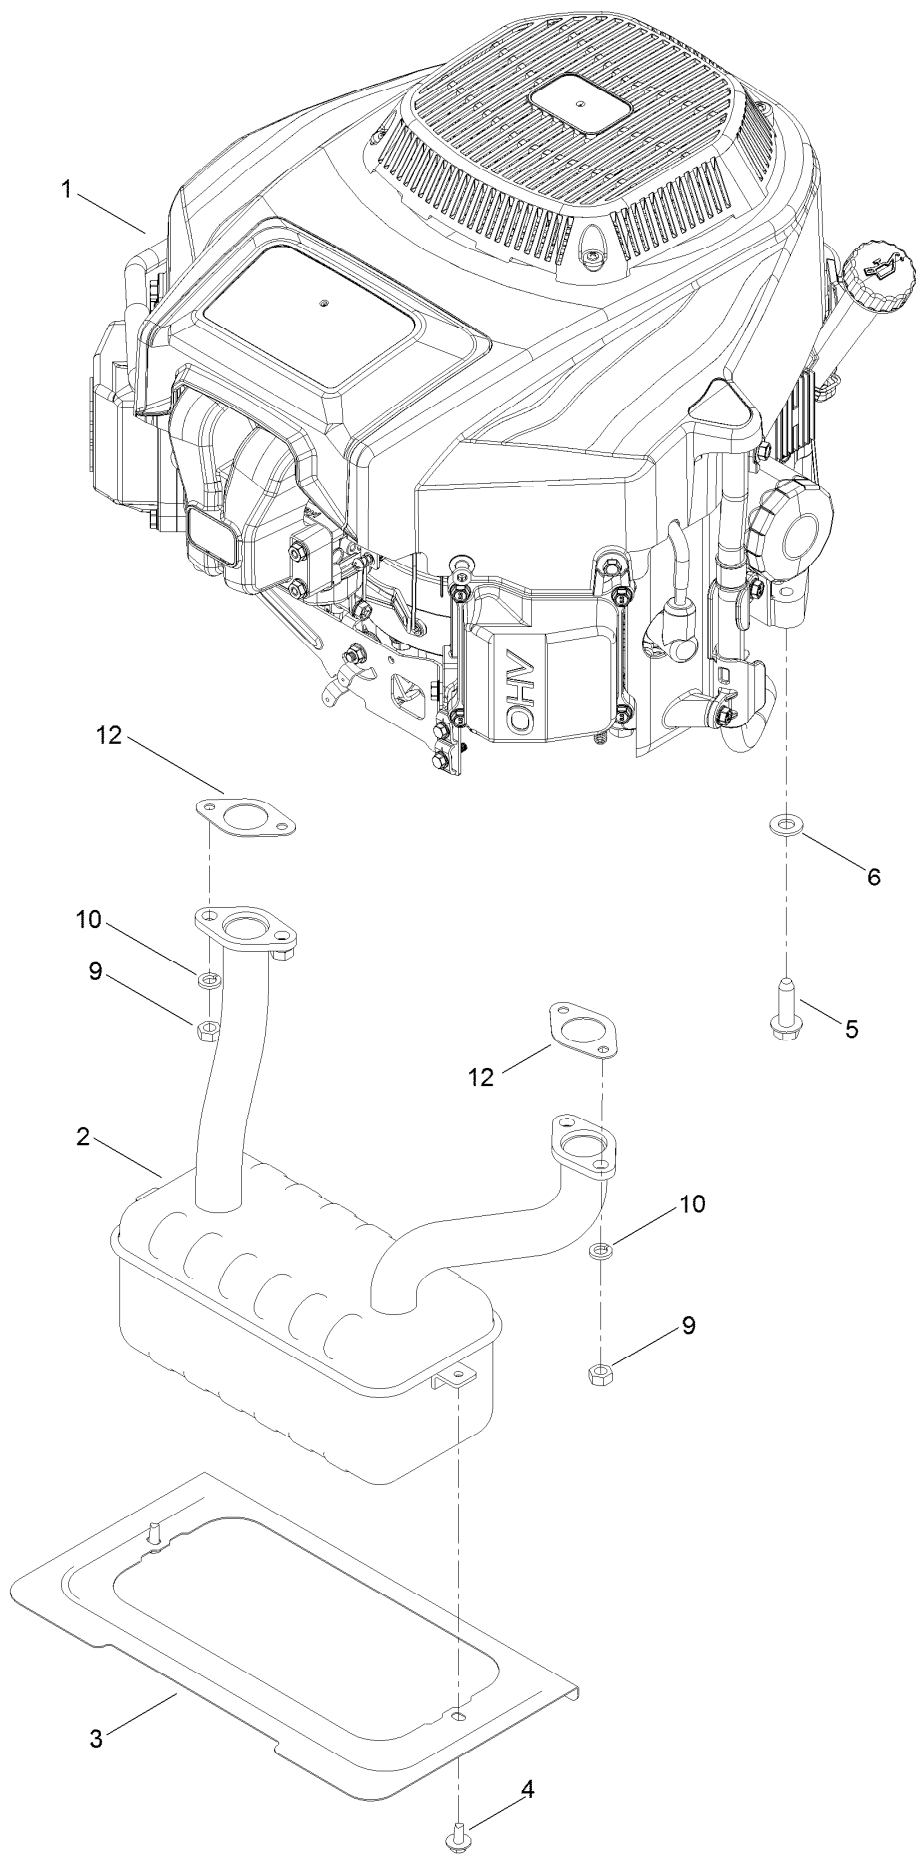



## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 133-1591           | 1           | Engine-2P77F       | 6           | 3256-24            | 3           | Washer-Flat        |
| 2           | 130-6851           | 1           | Muffler            | 9           | 121-0199           | 4           | Nut-HH             |
| 3           | 131-1071-03        | 1           | Shield-Heat        | 10          | 127-9279           | 4           | Washer-Lock, Split |
| 4           | 46-8560            | 2           | Screw-HHFTF        | 12          | 120-4317           | 2           | Gasket-Exhaust     |
| 5           | 32144-109          | 4           | Screw-Thd Form HWH |             |                    |             |                    |

# Fuel System Assembly with Non-Canister Style Air Filter

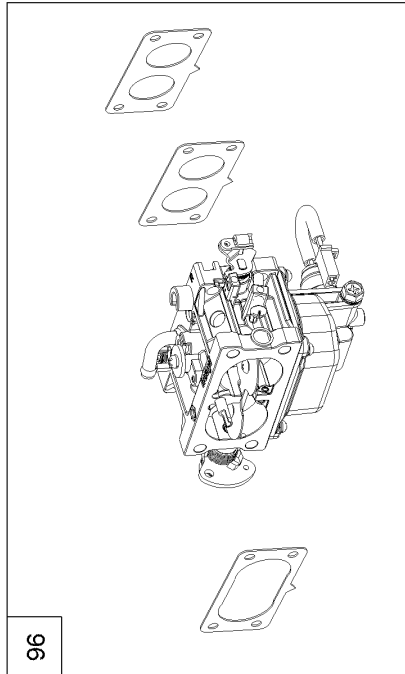

If equipped with canister type air filter refer to kit model 136-7860 for carburetor assembly and internal carburetor parts.

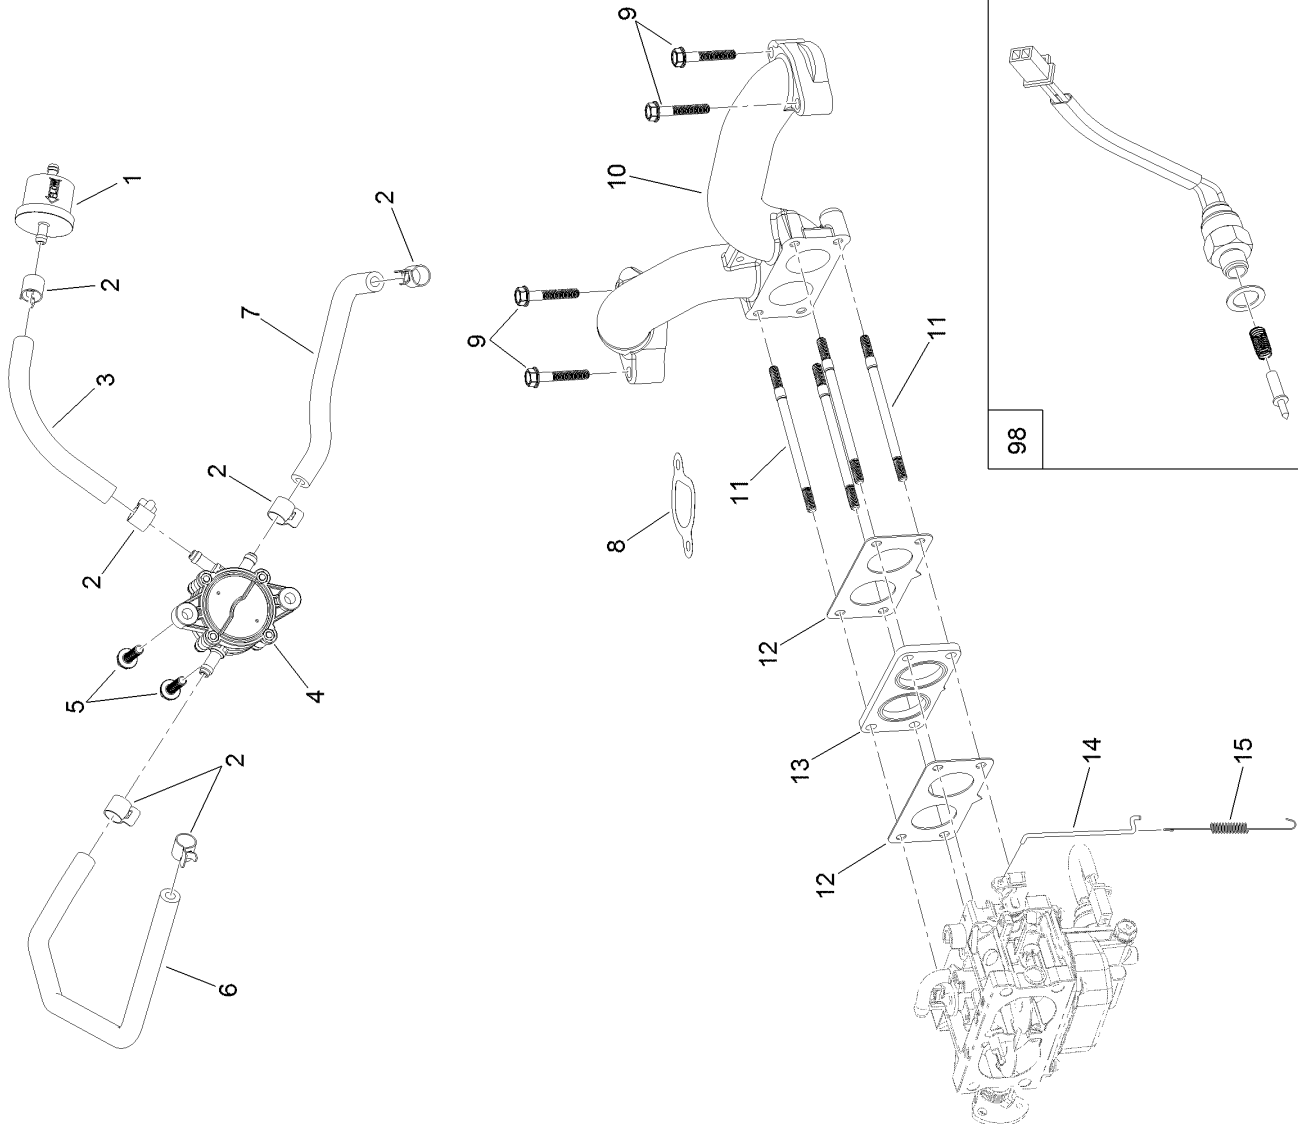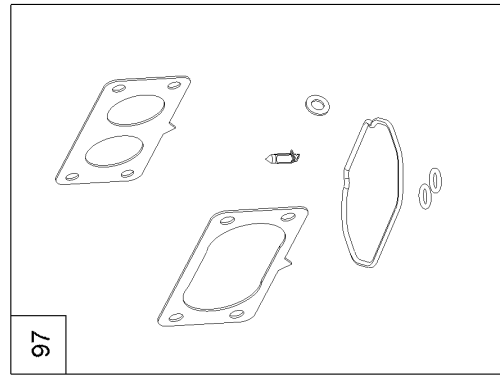


## Fuel System Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-1563           | 1           | Filter-Fuel        | 11          | 127-9245           | 4           | Stud                       |
| 2           | 120-4251           | 6           | Clamp-Fuel Line    | 12          | 127-9246           | 2           | Gasket-Carburetor          |
| 3           | 120-4371           | 1           | Line-Fuel          | 13          | 127-9247           | 1           | Insulator-Carburetor       |
| 4           | 127-9206           | 1           | Pump-Fuel          | 14          | 133-9963           | 1           | Linkage-Throttle           |
| 5           | 120-4225           | 2           | Screw-HHF          | 15          | 133-9964           | 1           | Spring-Return, Throttle    |
| 6           | 127-9205           | 1           | Hose-Fuel          | 96          | 133-9966           | 1           | Carburetor Replacement Kit |
| 7           | 127-9207           | 1           | Hose-Fuel          | 97          | 127-9290           | 1           | Carburetor Repair Kit      |
| 8           | 127-9230           | 2           | Gasket-Intake      | 98          | 127-9292           | 1           | Solenoid Kit               |
| 9           | 120-4284           | 4           | Screw-HHF          | 99          | 133-9968           | 1           | High Altitude Kit ●        |
| 10          | 127-9244           | 1           | Manifold-Intake    |             |                    |             |                            |

● Not illustrated


# Carburetor Assembly with Non-Canister Style Air Filter

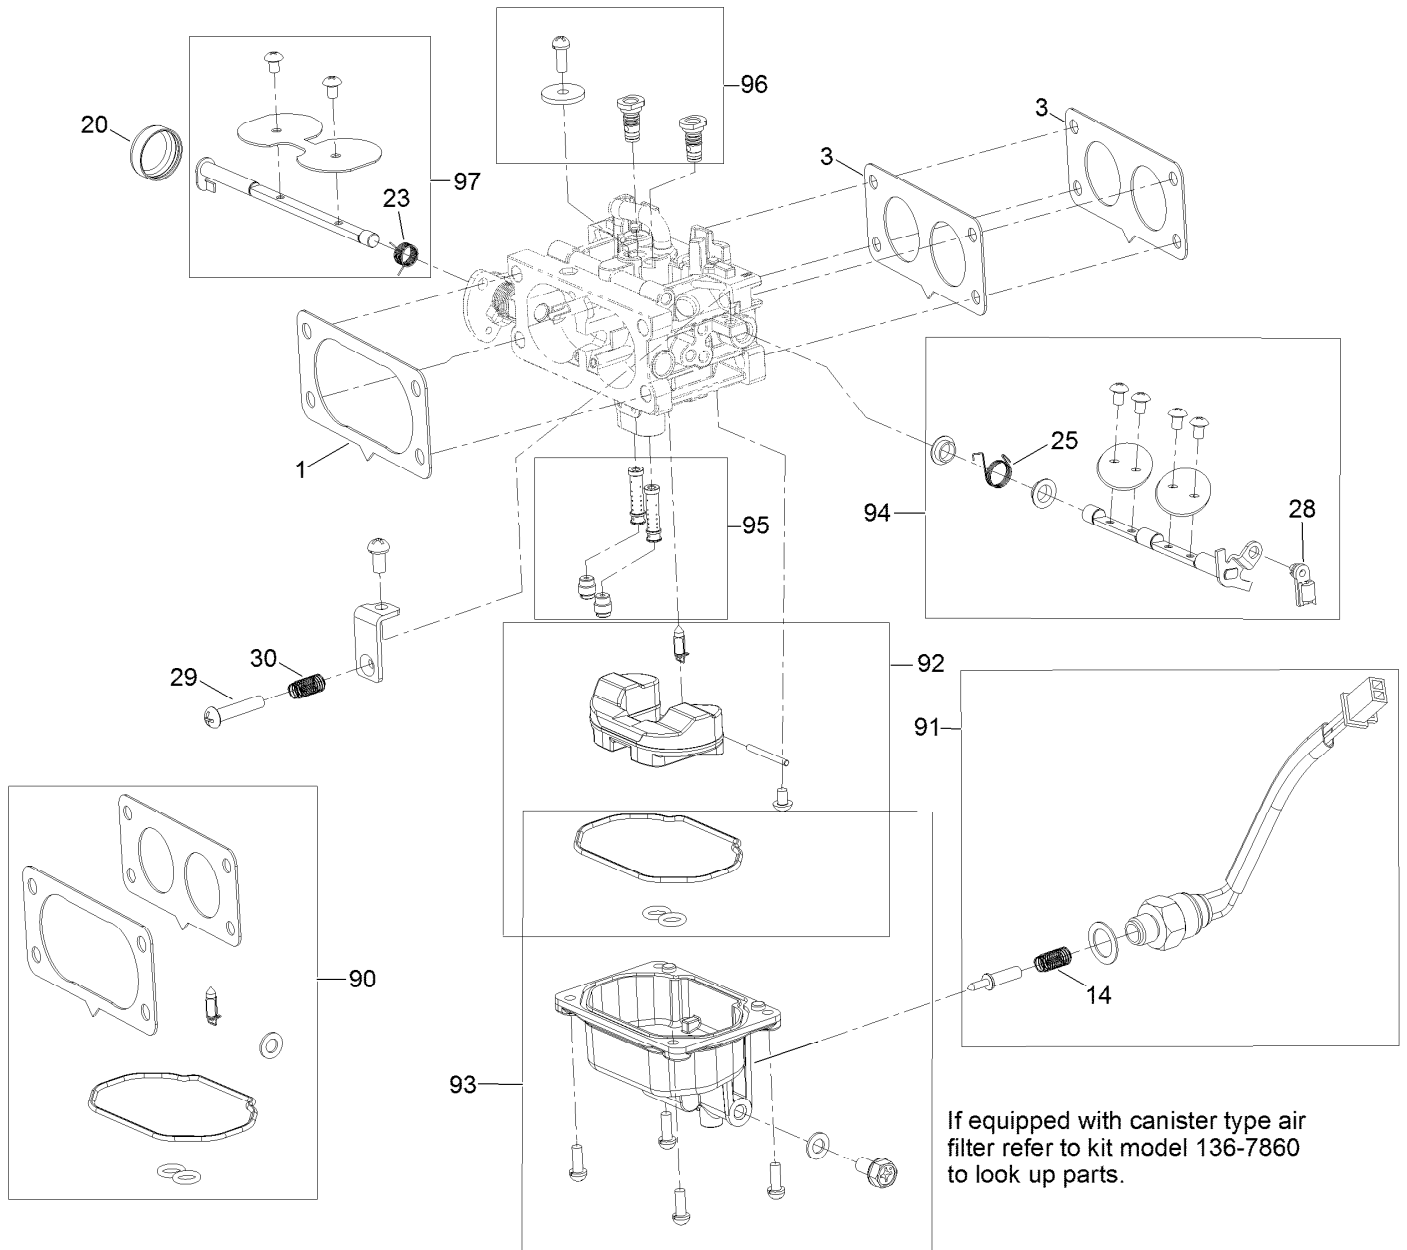

## Carburetor Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 127-9251           | 1           | Gasket-Carburetor  | 90          | 127-9290           | 1           | Carburetor Repair Kit |
| 3           | 127-9246           | 2           | Gasket-Carburetor  | 91          | 127-9292           | 1           | Solenoid Kit          |
| 14          | 127-9319           | 1           | Spring             | 92          | 127-9340           | 1           | Float Kit             |
| 20          | 127-9325           | 1           | Cover-Shaft, Choke | 93          | 127-9341           | 1           | Bowl Kit              |
| 23          | 127-9328           | 1           | Spring             | 94          | 133-9960           | 1           | Throttle Shaft Kit    |
| 25          | 133-9957           | 1           | Spring             | 95          | 133-9959           | 1           | Nozzle And Jet Kit    |
| 28          | 127-9333           | 1           | Clamp-Lock         | 96          | 133-9958           | 1           | Air Jet Kit           |
| 29          | 127-9334           | 1           | Screw-PPH          | 97          | 127-9345           | 1           | Choke Shaft Kit       |
| 30          | 127-9335           | 1           | Spring             |             |                    |             |                       |


# Air Intake and Filtration Assembly with Non-Canister Style Air Filter

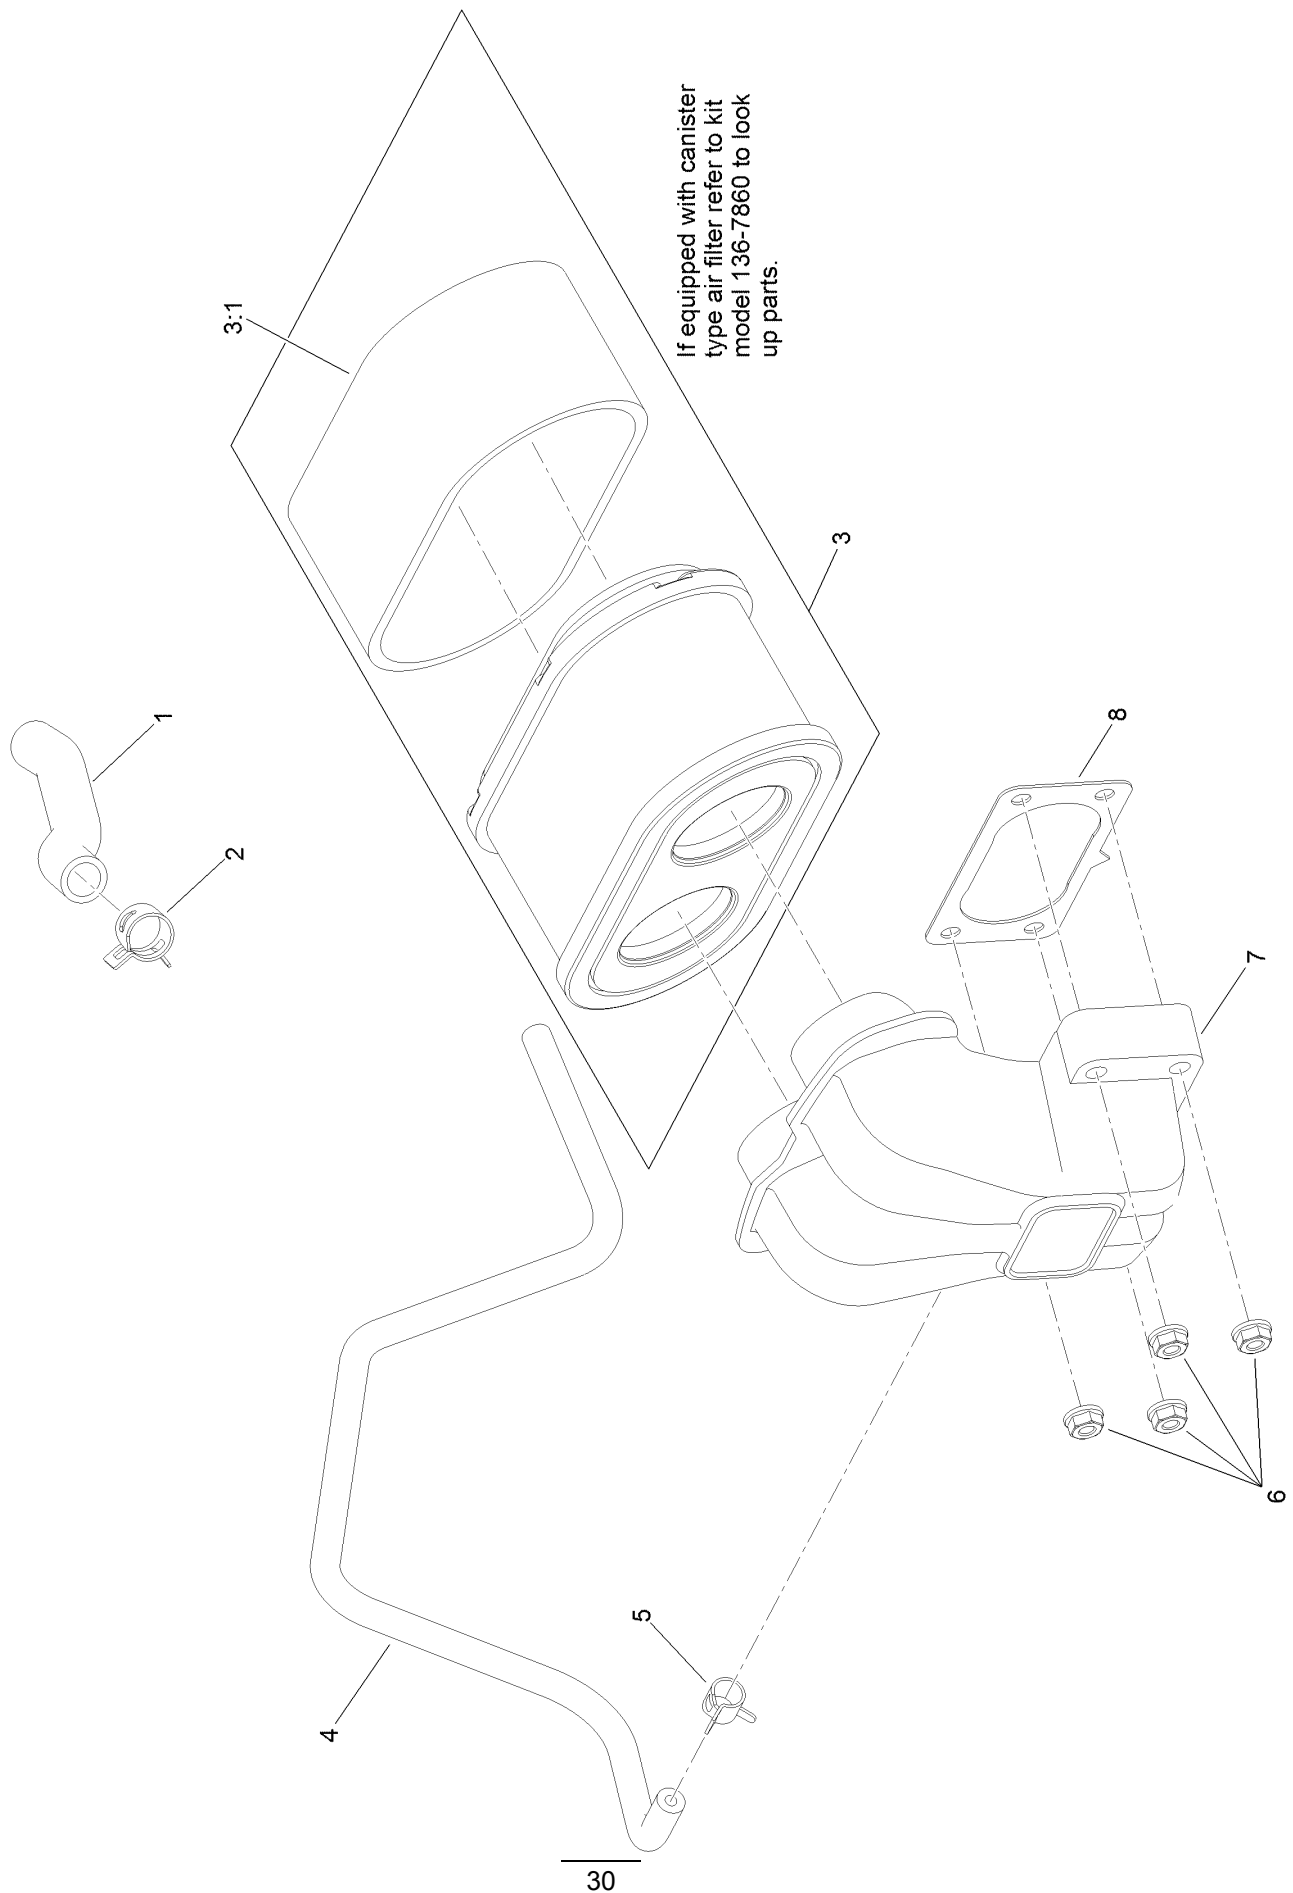

## Air Intake and Filtration Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 127-9235           | 1           | Tube-Breather        | 5           | 127-9187           | 1           | Clamp-Hose           |
| 2           | 127-9234           | 2           | Clamp-Hose           | 6           | 120-4236           | 4           | Nut-Flange           |
| 3           | 127-9252           | 1           | Filter-Air, Complete | 7           | 127-9047           | 1           | Manifold-Filter, Air |
| 3:1         | 127-9288           | 1           | Filter-Pre, Foam     | 8           | 127-9251           | 1           | Gasket-Carburetor    |
| 4           | 127-9253           | 1           | Hose-Fuel            |             |                    |             |                      |

# Ignition and Electrical Assembly

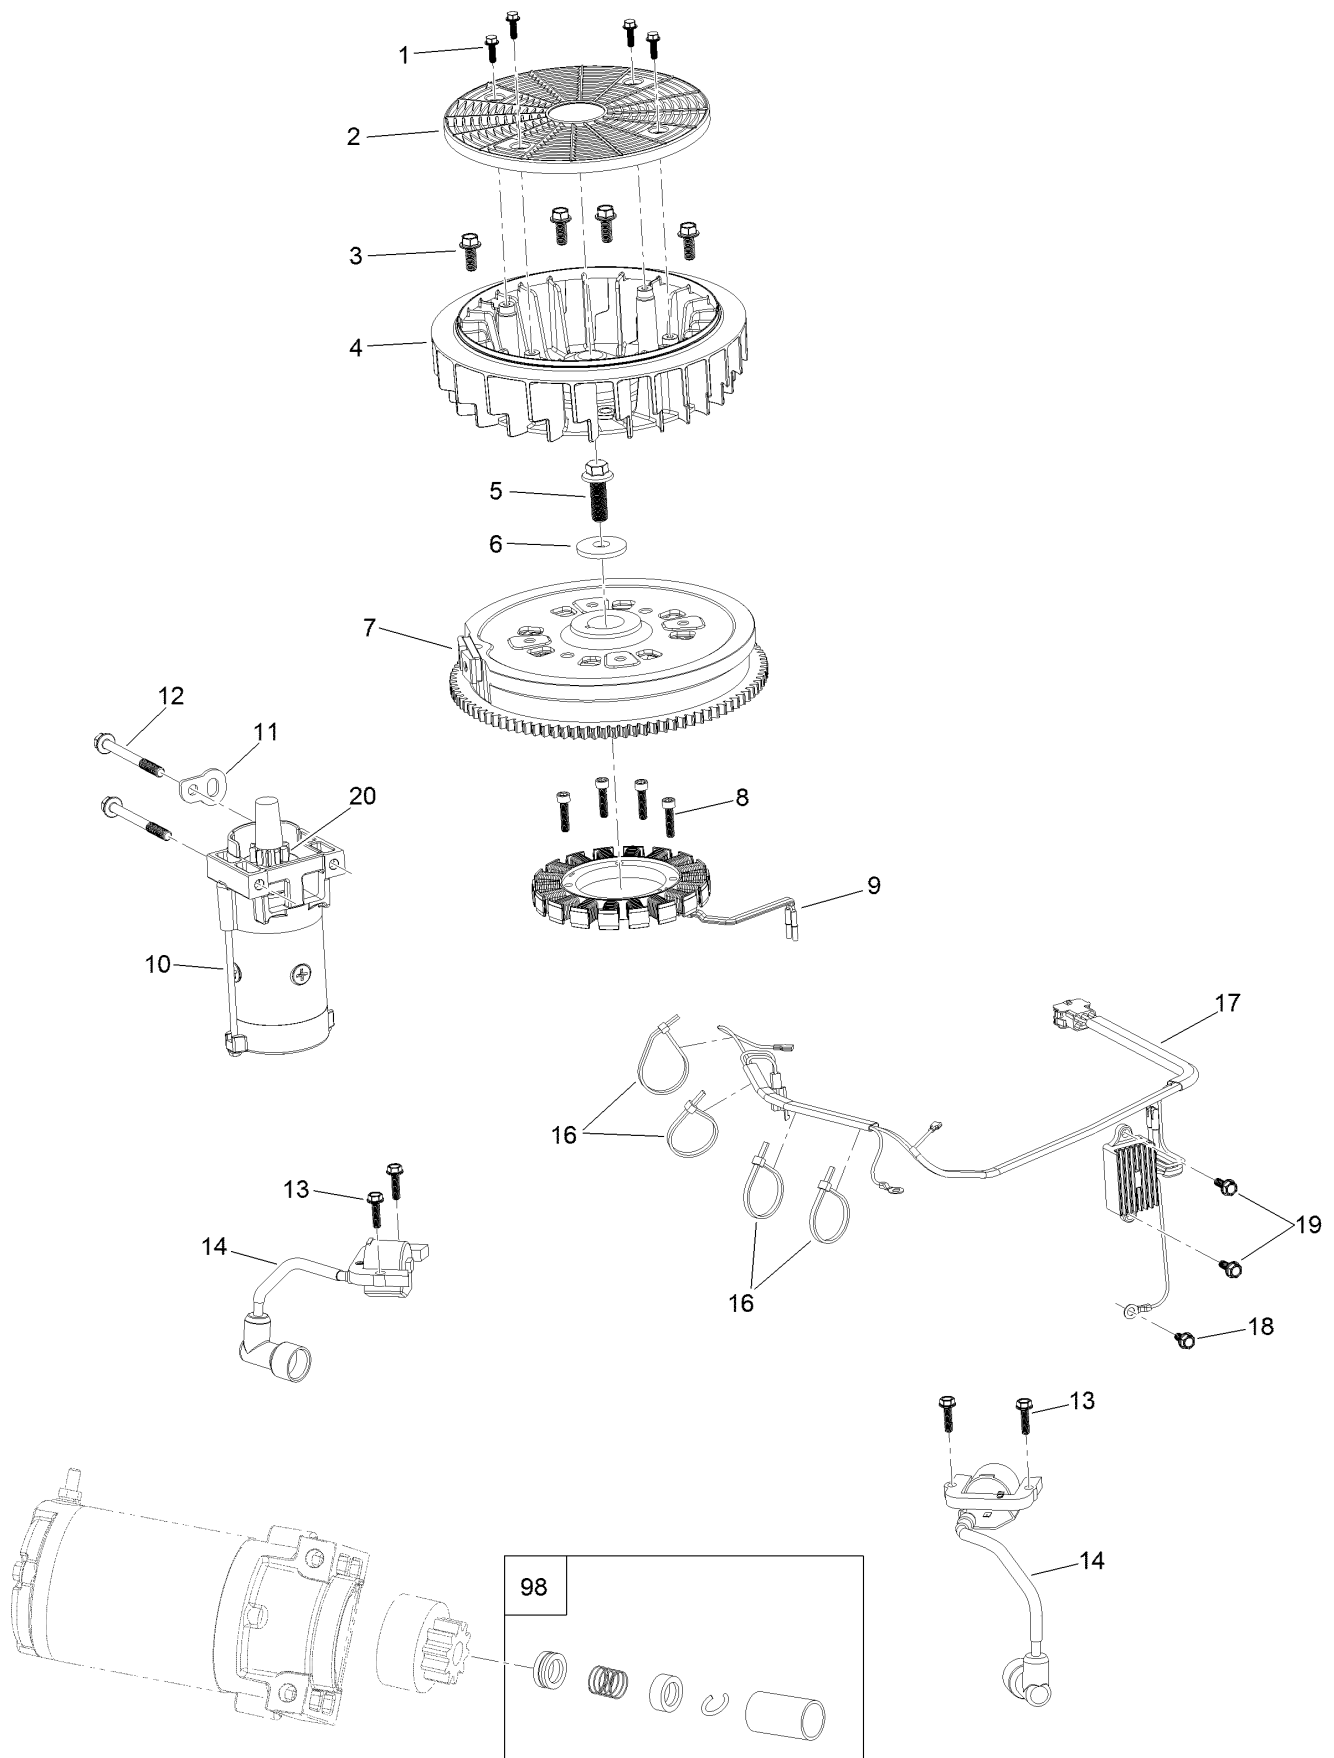

## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 127-9197           | 4           | Screw-HWH          | 12          | 120-4231           | 2           | Screw-HHF                      |
| 2           | 127-9198           | 1           | Screen-Rotating    | 13          | 121-0007           | 4           | Bolt-Flange                    |
| 3           | 127-9199           | 4           | Screw-HWH          | 14          | 127-9216           | 2           | Ignition Coil ASM              |
| 4           | 127-9200           | 1           | Fan-Cooling        | 16          | 127-9220           | 4           | Tie-Zip                        |
| 5           | 127-9201           | 1           | Screw-HWH          | 17          | 127-9219           | 1           | Regulator-Voltage<br>W/Harness |
| 6           | 127-9202           | 1           | Washer-Flat        | 18          | 120-4216           | 1           | Screw-HHF                      |
| 7           | 127-9306           | 1           | Flywheel           | 19          | 120-4232           | 2           | Screw-HHF                      |
| 8           | 127-9210           | 4           | Screw-HSH          | 20          | 133-1562           | 1           | Pinion-Starter                 |
| 9           | 127-9211           | 1           | Alternator         | 98          | 133-1566           | 1           | Starter Repair Kit             |
| 10          | 133-9828           | 1           | Motor-Starter      |             |                    |             |                                |
| 11          | 127-9208           | 1           | Bracket-Lift       |             |                    |             |                                |


# Crankcase and Crankshaft Assembly



## Crankcase and Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4232           | 14          | Screw-HHF           | 20          | 127-9266           | 1           | Valve-Ball              |
| 2           | 127-9212           | 1           | Baffle              | 21          | 120-4262           | 2           | O-Ring                  |
| 3           | 127-9213           | 1           | Cover-Breather      | 22          | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 4           | 127-9214           | 1           | Gasket-Breather     | 23          | 133-9805           | 1           | Plug-Drain              |
| 5           | 127-9215           | 1           | Filter-Breather     | 24          | 127-9268           | 1           | Cover-Crankcase         |
| 6           | 120-4216           | 1           | Screw-HHF           | 25          | 127-9293           | 1           | Oil Drain Hose ASM      |
| 7           | 127-9217           | 1           | Valve-Breather      | 26          | 127-9275           | 1           | Fitting-Hose            |
| 8           | 120-4267           | 1           | Seal-Oil            | 27          | 127-9276           | 1           | Clamp-Hose              |
| 10          | 120-4346           | 1           | Adaptor-Filter, Oil | 28          | 127-9271           | 1           | Seal                    |
| 11          | 120-4276           | 1           | Filter-Oil          | 29          | 121-0473           | 10          | Screw-HHF               |
| 12          | 127-9218           | 1           | Oil Tube ASM        | 30          | 127-9274           | 1           | Cover-Oil Pump          |
| 12:1        | 127-9283           | 1           | Dipstick            | 31          | 127-9273           | 1           | O-Ring                  |
| 12:2        | 127-9284           | 1           | O-Ring              | 32          | 127-9272           | 1           | Oil Pump ASM            |
| 12:4        | 127-9286           | 1           | O-Ring              | 33          | 120-4275           | 1           | Deflector-Oil, Rubber   |
| 13          | 127-9255           | 1           | Crankshaft          | 34          | 133-1568           | 1           | Camshaft                |
| 13:1        | 120-4320           | 1           | Key-Woodruff        | 35          | 133-9807           | 1           | Governor ASM            |
| 14          | 127-9261           | 1           | Cover-Screen, Oil   | 36          | 127-9238           | 1           | Shaft-Governor          |
| 15          | 127-9262           | 1           | Screen-Oil          | 37          | 120-4258           | 2           | Washer-Plain            |
| 16          | 127-9263           | 1           | Retainer-Screen     | 38          | 120-4257           | 1           | Seal-Oil                |
| 17          | 120-4274           | 2           | Pin-Dowel           | 39          | 120-4256           | 1           | Pin-Hair                |
| 18          | 127-9264           | 1           | Plate-Retainer      | 40          | 120-4232           | 2           | Screw-HHF               |
| 19          | 127-9265           | 1           | Spring              |             |                    |             |                         |




# Governor Control Assembly

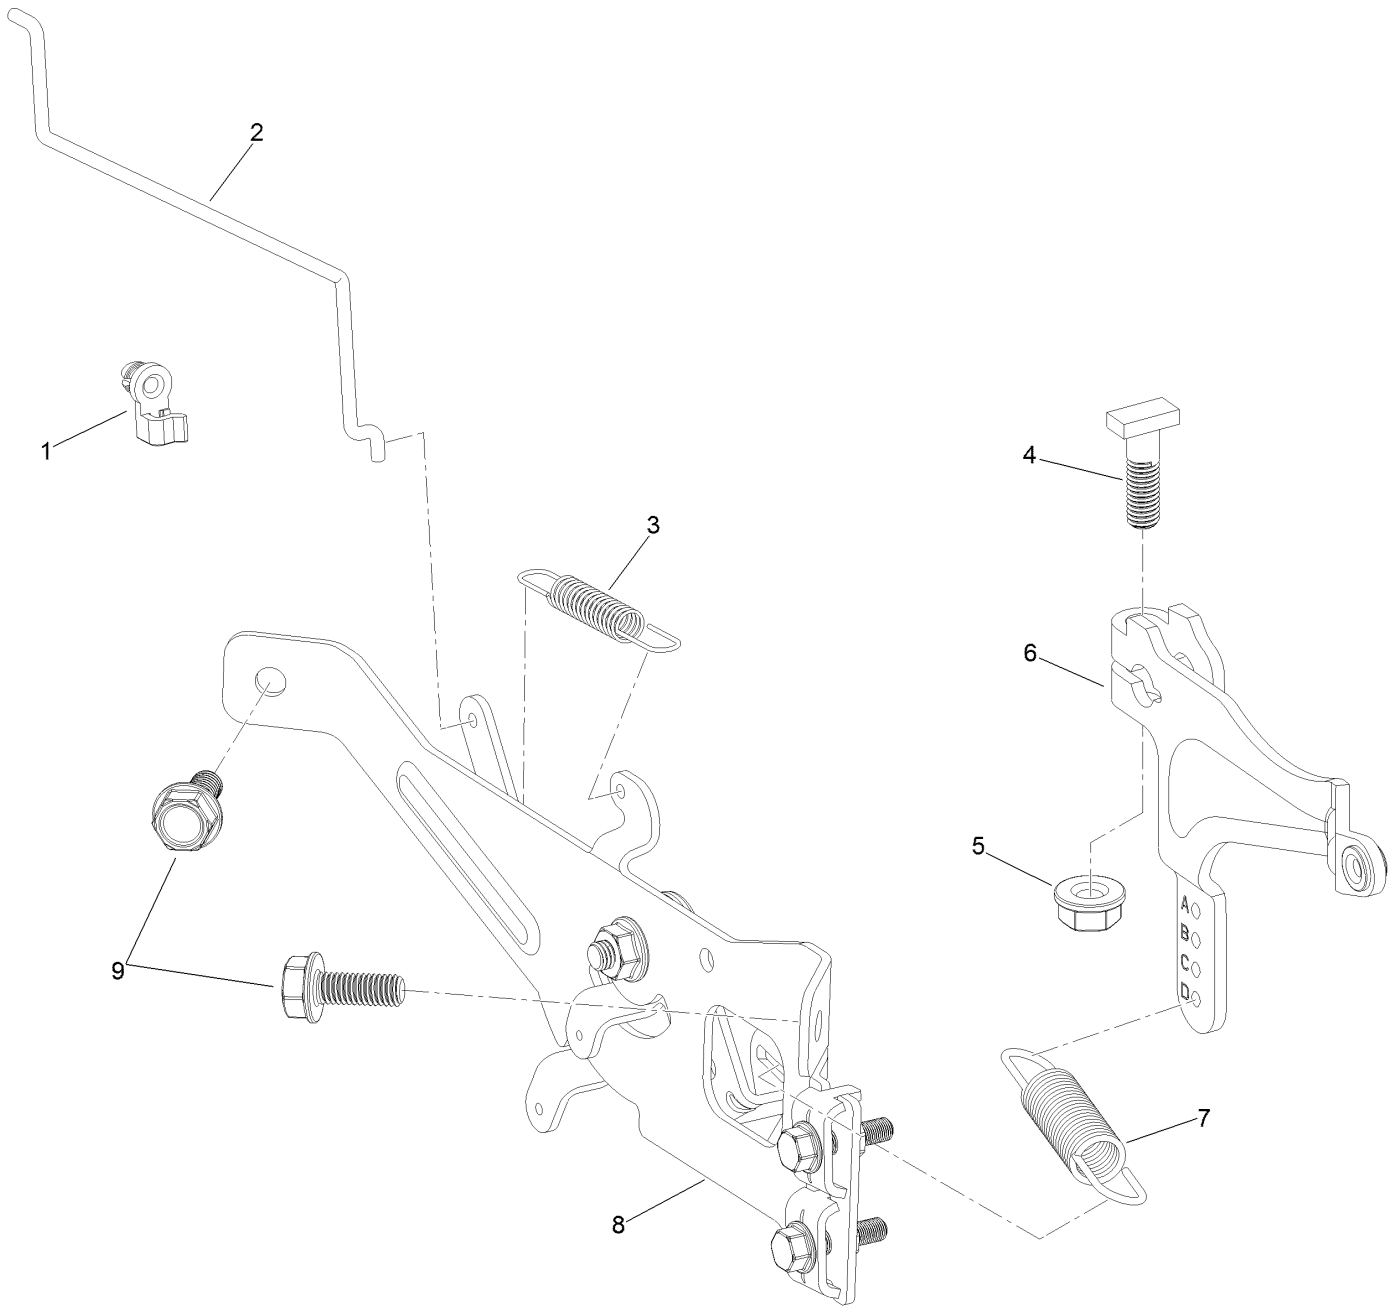

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9250           | 1           | Clip-Linkage       | 6           | 133-9961           | 1           | Arm-Governor       |
| 2           | 127-9242           | 1           | Linkage-Choke      | 7           | 133-9962           | 1           | Spring-Governor    |
| 3           | 127-9241           | 1           | Spring-Governor    | 8           | 133-1570           | 1           | Control Plate ASM  |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 120-4232           | 2           | Screw-HHF          |
| 5           | 120-4236           | 1           | Nut-Flange         |             |                    |             |                    |


## Piston and Cylinder Head Assembly

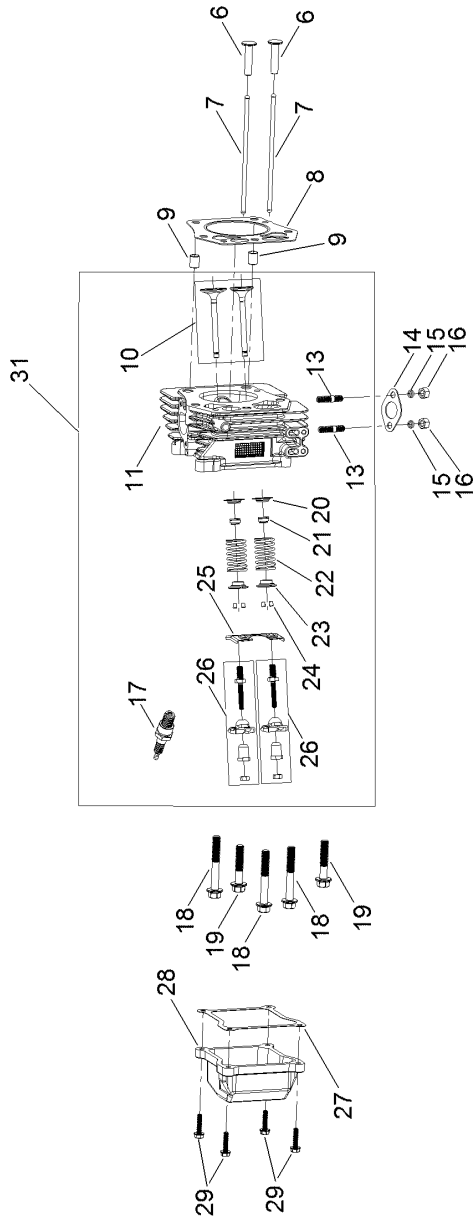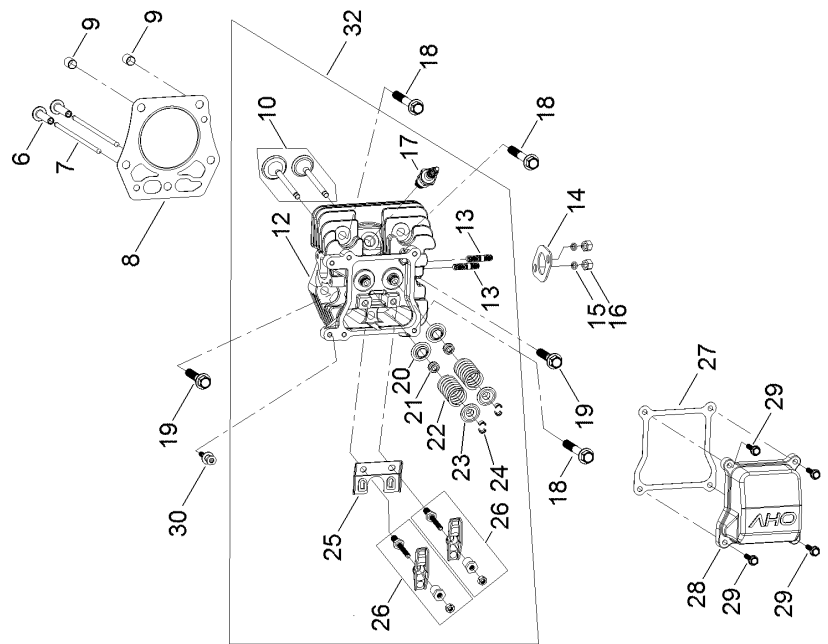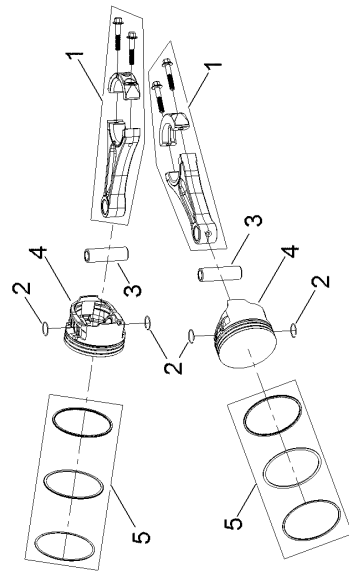

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 127-9256           | 2           | Connecting Rod ASM    | 17          | 81-3250            | 2           | Spark Plug             |
| 2           | 127-9258           | 4           | Clip-Pin, Piston      | 18          | 127-9231           | 6           | Screw-HWH              |
| 3           | 127-9257           | 2           | Pin-Piston            | 19          | 127-9232           | 4           | Screw-HWH              |
| 4           | 127-9259           | 2           | Piston                | 20          | 120-4303           | 4           | Seat-Spring, Valve     |
| 5           | 127-9260           | 2           | Piston Ring Set       | 21          | 120-4304           | 4           | Seal-Stem, Valve       |
| 6           | 127-9224           | 4           | Lifter-Valve          | 22          | 120-4305           | 4           | Spring-Valve           |
| 7           | 127-9225           | 4           | Rod-Push              | 23          | 120-4306           | 4           | Retainer-Spring, Valve |
| 8           | 127-9226           | 2           | Gasket-Head, Cylinder | 24          | 120-4307           | 8           | Keeper-Valve           |
| 9           | 127-9227           | 4           | Pin-Dowel             | 25          | 127-9233           | 2           | Plate-Guide, Push Rod  |
| 10          | 127-9228           | 2           | Valve Set             | 26          | 127-9294           | 4           | Rocker Arm ASM         |
| 11          | 127-9229           | 1           | Head-Cylinder         | 27          | 127-9295           | 2           | Gasket-Valve Cover     |
| 12          | 127-9254           | 1           | Head-Cylinder         | 28          | 127-9050           | 2           | Cover-Valve            |
| 13          | 121-0464           | 4           | Stud-Exhaust          | 29          | 120-4225           | 8           | Screw-HHF              |
| 14          | 120-4317           | 2           | Gasket-Exhaust        | 30          | 120-4214           | 1           | Screw-Shoulder, HH     |
| 15          | 127-9279           | 4           | Washer-Lock, Split    | 31          | 133-9819           | 1           | Right Head ASM         |
| 16          | 121-0199           | 4           | Nut-HH                | 32          | 133-9820           | 1           | Left Head ASM          |

# Blower Housing Assembly

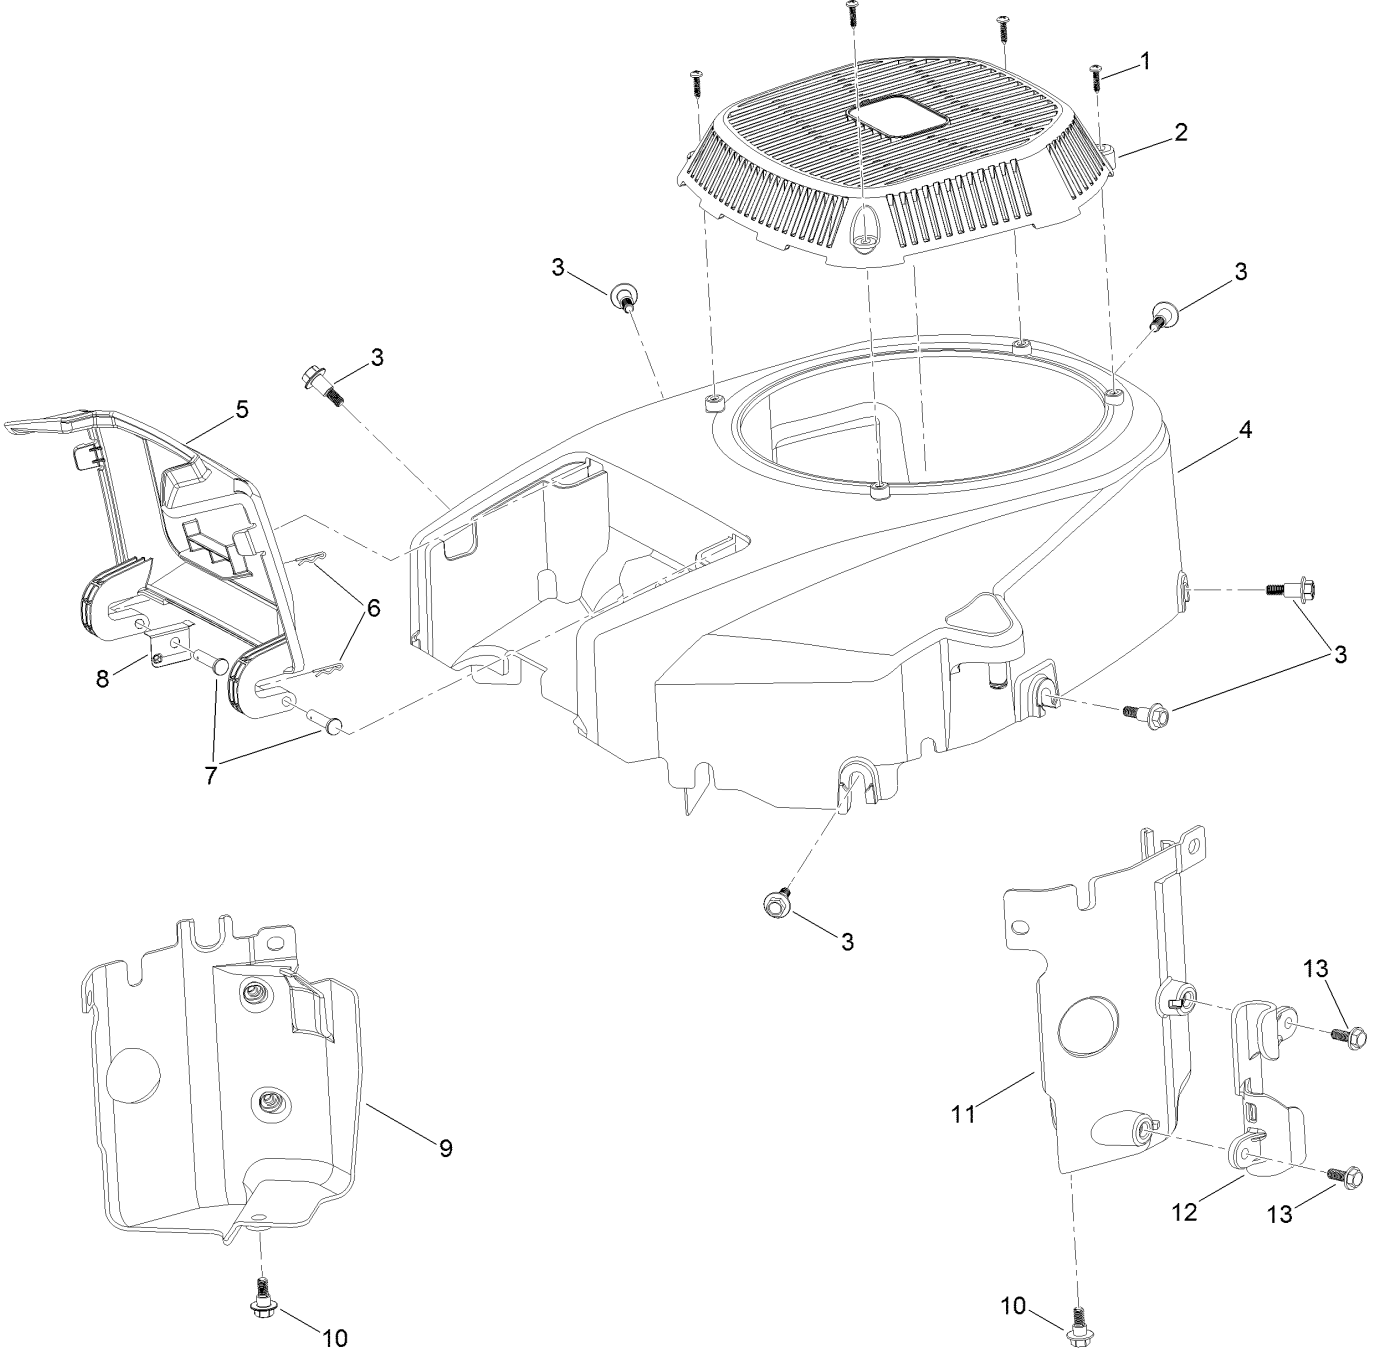


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 133-1571           | 4           | Screw-PPH, Plastic  | 8           | 127-9281           | 1           | Plate-Spring        |
| 2           | 127-9045           | 1           | Cover-Fan           | 9           | 127-9049           | 1           | Baffle-Air, Left    |
| 3           | 127-9196           | 6           | Screw-Shoulder, HWH | 10          | 120-4210           | 2           | Screw-Shoulder, HHF |
| 4           | 133-1572           | 1           | Shroud-Engine       | 11          | 127-9048           | 1           | Baffle-Air, Right   |
| 5           | 127-9046           | 1           | Door-Filter, Air    | 12          | 127-9287           | 1           | Cleat-Hose          |
| 6           | 127-9280           | 2           | Pin-Hair            | 13          | 120-4232           | 2           | Screw-HHF           |
| 7           | 127-9282           | 2           | Pin                 |             |                    |             |                     |

# Gasket and Seal Kit

1

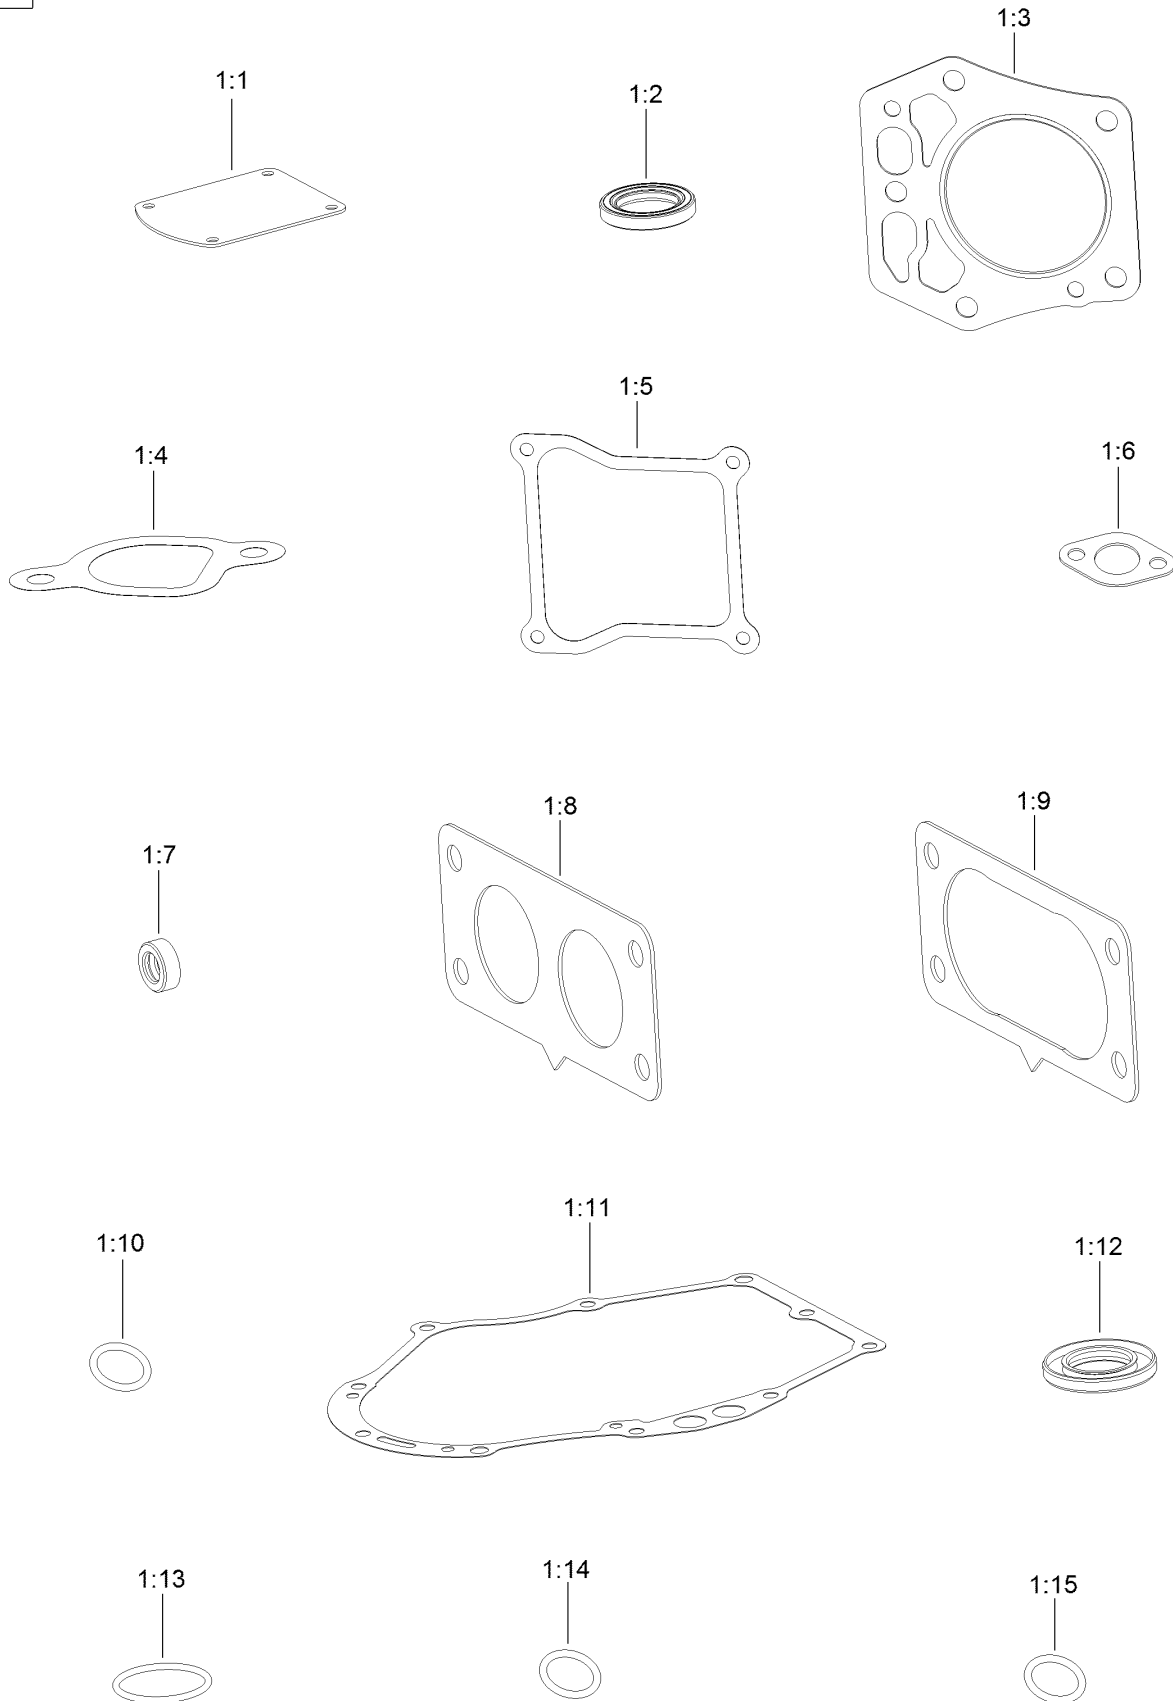

## Gasket and Seal Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9296           | 1           | Gasket And Seal Kit   | 1:8         | 127-9246           | 2           | Gasket-Carburetor       |
| 1:1         | 127-9214           | 1           | Gasket-Breather       | 1:9         | 127-9251           | 1           | Gasket-Carburetor       |
| 1:2         | 120-4267           | 1           | Seal-Oil              | 1:10        | 120-4262           | 2           | O-Ring                  |
| 1:3         | 127-9226           | 2           | Gasket-Head, Cylinder | 1:11        | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 1:4         | 127-9230           | 2           | Gasket-Intake         | 1:12        | 127-9271           | 1           | Seal                    |
| 1:5         | 127-9295           | 2           | Gasket-Valve Cover    | 1:13        | 127-9273           | 1           | O-Ring                  |
| 1:6         | 120-4317           | 2           | Gasket-Exhaust        | 1:14        | 127-9284           | 1           | O-Ring                  |
| 1:7         | 120-4257           | 1           | Seal-Oil              | 1:15        | 127-9286           | 1           | O-Ring                  |


This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The main housing (1) is shown with various internal features and mounting points. Key components include:

- 1**: Main housing or base plate.
- 2**: A large, curved internal component, possibly a diaphragm or impeller.
- 3**: A small circular component, likely a seal or gasket.
- 4**: A rectangular plate or cover.
- 5**: A small rectangular component, possibly a valve or connector.
- 6**: A small circular component, likely a seal or gasket.
- 7**: A small rectangular component, possibly a valve or connector.
- 8**: A small circular component, likely a seal or gasket.
- 9**: A small rectangular component, possibly a valve or connector.
- 9:1**, **9:2**, **9:4**: Different views or configurations of a small rectangular component.
- 10**: A small rectangular component, possibly a valve or connector.
- 11**: A small rectangular component, possibly a valve or connector.
- 12**: A small rectangular component, possibly a valve or connector.
- 13**: A small rectangular component, possibly a valve or connector.
- 14**: A long, thin rod or pin.
- 15**: A small rectangular component, possibly a valve or connector.
- 16**: A small rectangular component, possibly a valve or connector.
- 17**: A small rectangular component, possibly a valve or connector.
- 18**: A small rectangular component, possibly a valve or connector.
- 19**: A small rectangular component, possibly a valve or connector.
- 20**: A small rectangular component, possibly a valve or connector.
- 21**: A small rectangular component, possibly a valve or connector.
- 22**: A small rectangular component, possibly a valve or connector.
- 23**: A small rectangular component, possibly a valve or connector.
- 24**: A small rectangular component, possibly a valve or connector.
- 25**: A small rectangular component, possibly a valve or connector.
- 26**: A small rectangular component, possibly a valve or connector.
- 27**: A small rectangular component, possibly a valve or connector.
- 28**: A small rectangular component, possibly a valve or connector.
- 29**: A small rectangular component, possibly a valve or connector.
- 30**: A small rectangular component, possibly a valve or connector.

## Body Styling and Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 119-3335           | 1           | Pod-RH                  | 12          | 609830             | 2           | Spring                    |
| 2           | 119-3334           | 1           | Pod-LH                  | 13          | 121-0769           | 1           | Cable-Throttle            |
| 3           | 107069             | 3           | Clip                    | 14          | 112-9753           | 1           | Cable-Choke               |
| 4           | 119-3378-03        | 1           | Plate-Control           | 15          | 3253-21            | 1           | Washer-Lock               |
| 5           | 121-0772           | 1           | Decal-Panel, Control    | 16          | 3220-3             | 1           | Nut-HJ                    |
| 7           | 119-3476-03        | 1           | Support-Tank, Front     | 17          | 137-4119           | 1           | Cap-Fuel, Ratcheting      |
| 8           | 32144-70           | 2           | Screw-HWHTF             | 19          | 119-8814           | 1           | Decal-Lever, Control (LH) |
| 9           | 119-3324           | 1           | Fuel Tank ASM           | 20          | 119-8815           | 1           | Decal-Lever, Control (RH) |
| 9:1         | 121-0793           | 1           | Connector-Elbow, 90 DEG | 25          | 109-0281           | 1           | Hose-Fuel                 |
| 9:2         | 46-6560            | 2           | Bushing                 | 27          | 2412-98            | 3           | Clamp-Hose                |
| 9:4         | 117-7400           | 1           | Fitting-Plastic         | 28          | 614249             | 1           | Tie-Cable                 |
| 10          | 3258-166           | 3           | Screw-PRH               | 29          | 117-5399           | 1           | Adaptor-Orifice           |
| 11          | 120-7950           | 6           | Screw-Shoulder          | 30          | 110-1876           | 1           | Hose-Fuel                 |

# Battery and Electrical Assembly

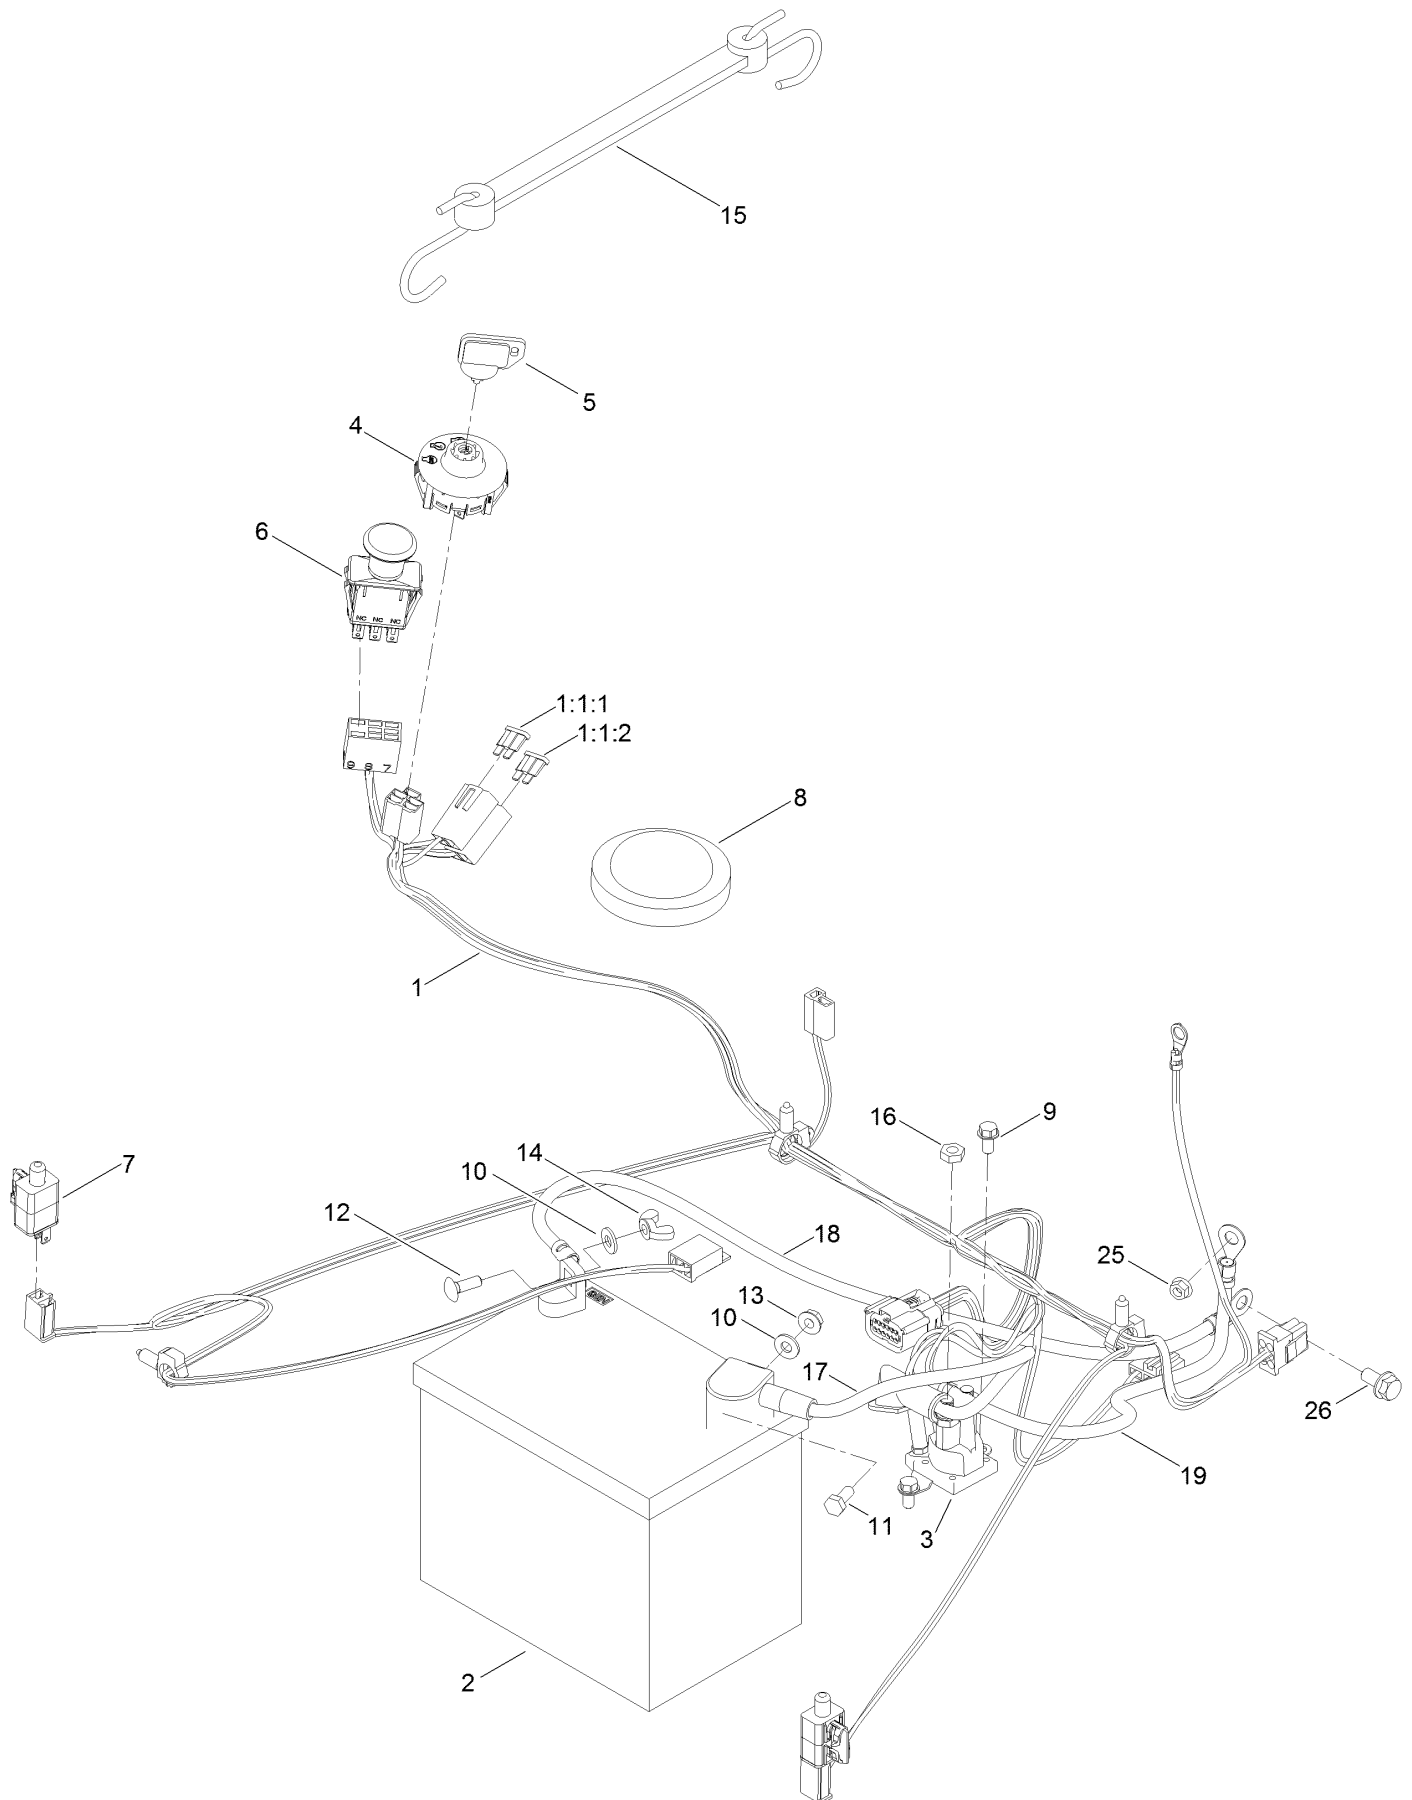


## Battery and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 136-7482           | 1           | Harness-Wire       |
| 1:1:1       | 109103             | 1           | Fuse-Blade, 30 Amp |
| 1:1:2       | 109102             | 1           | Fuse-Blade, 25 Amp |
| 2           | 105-1692           | 1           | Battery            |
| 3           | 117-1197           | 1           | Solenoid           |
| 4           | 137-4100           | 1           | Switch-Ignition    |
| 5           | 63-8360            | 1           | Key-Ignition       |
| 6           | 103-5221           | 1           | Switch-PTO         |
| 7           | 110-6765           | 2           | Switch             |
| 8           | 100-3524           | 1           | Switch-Seat        |
| 9           | 32144-4            | 2           | Screw-HWH          |
| 10          | 3256-22            | 2           | Washer-Flat        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 11          | 321-3              | 1           | Screw-HH                |
| 12          | 3229-1             | 1           | Bolt-CARR               |
| 13          | 32128-33           | 1           | Nut-HF                  |
| 14          | 32103-22           | 1           | Nut-Wing                |
| 15          | 104-2466           | 1           | Holddown-Battery        |
| 16          | 3220-2             | 2           | Nut-Jam                 |
| 17          | 119-8897           | 1           | Cable-Battery, Red      |
| 18          | 121-0711           | 1           | Cable-Battery, Positive |
| 19          | 119-8899           | 1           | Cable-Battery, Black    |
| 25          | 33003-00           | 1           | Nut-HF                  |
| 26          | 3234-14            | 1           | Screw-HHF               |


# 42 Inch Deck Assembly

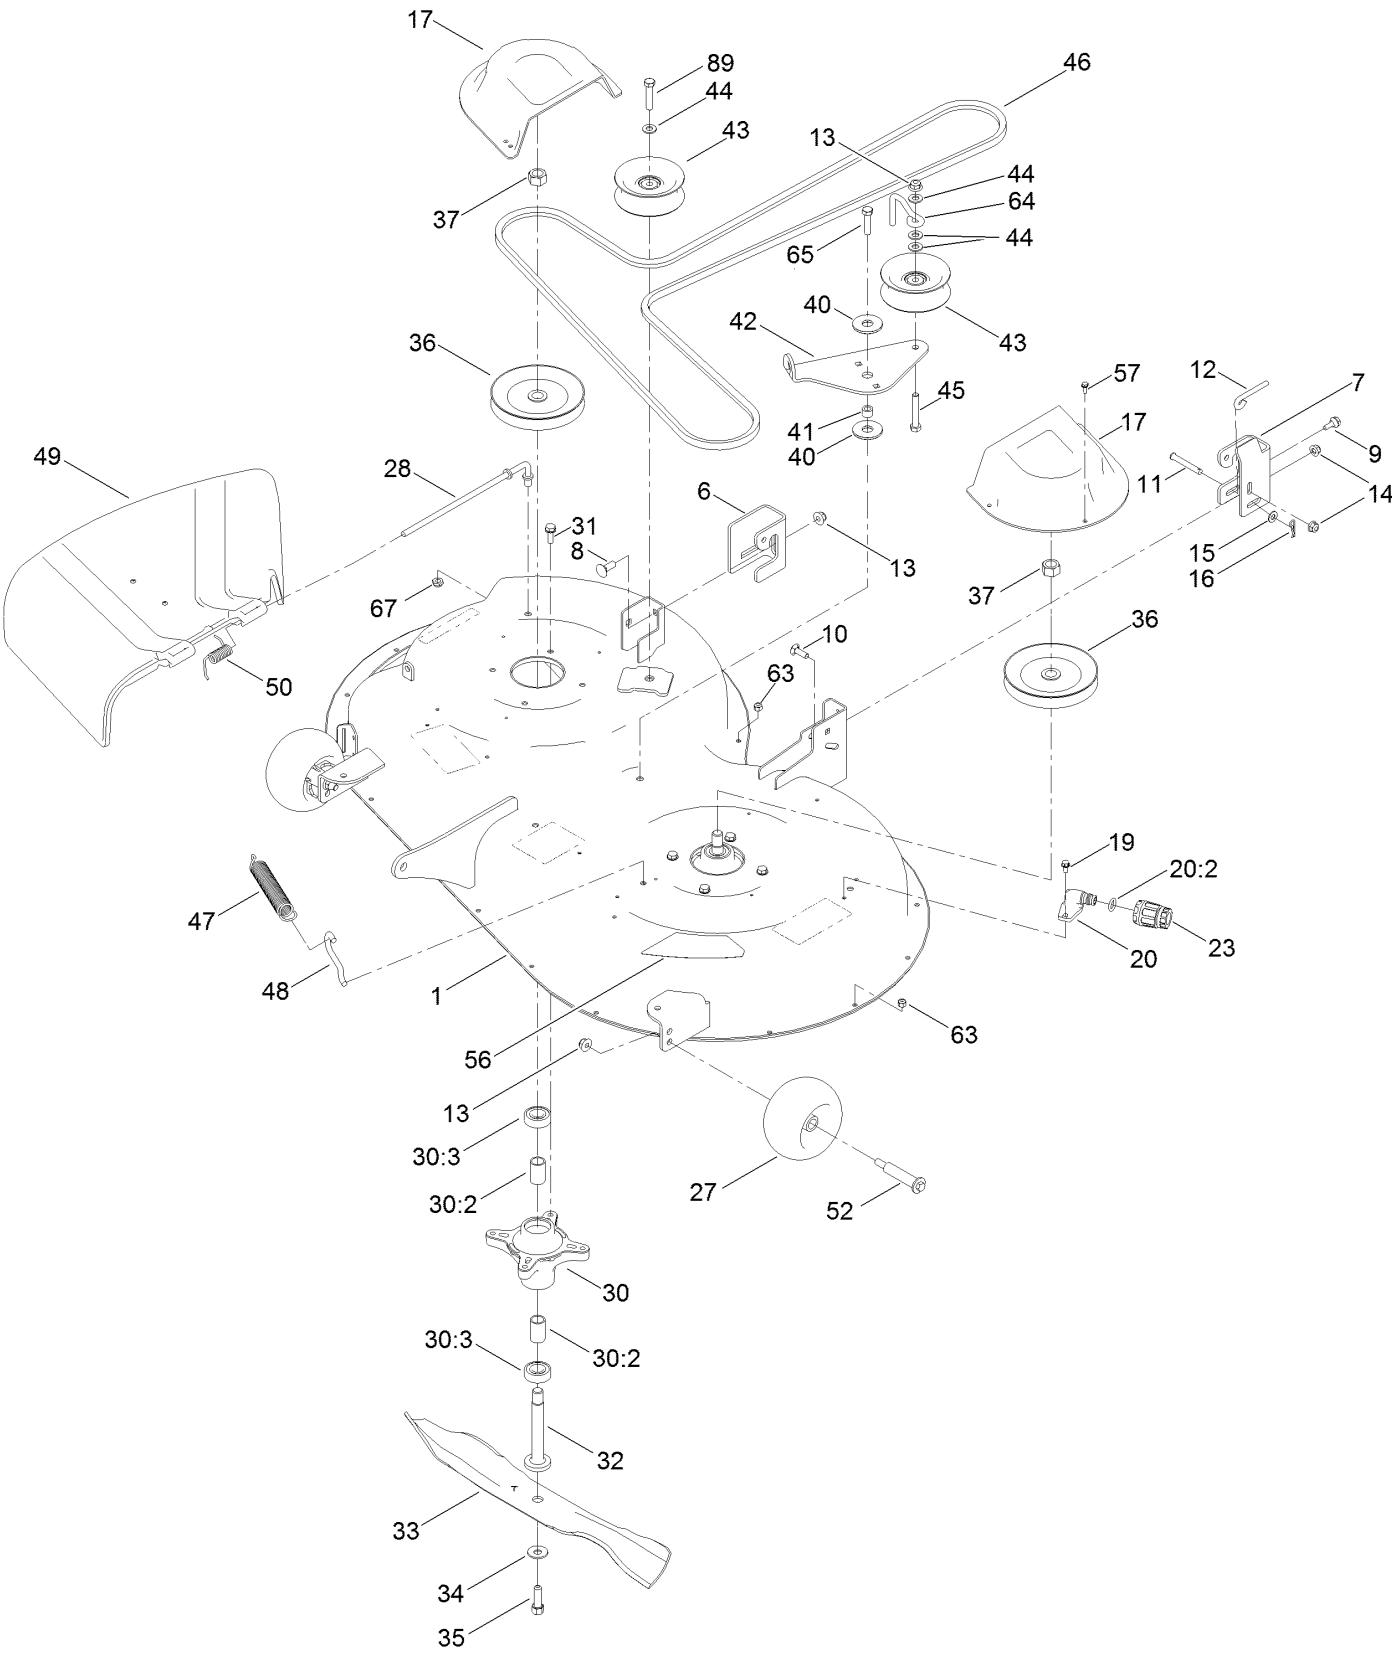

## 42 Inch Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 137-7041           | 1           | 42 Inch Deck And Decal<br>ASM | 33          | 137-1999-03        | 2           | Blade-21.6 In              |
| 6           | 131-4138           | 1           | Bracket-Hanger, RH            | 34          | 3290-465           | 2           | Washer-Belleville          |
| 7           | 131-1091           | 1           | Bracket-Hanger, LH            | 35          | 26-0671            | 2           | Screw-HH                   |
| 8           | 3231-2             | 2           | Bolt-CARR                     | 36          | 125-5574           | 2           | Pulley                     |
| 9           | 120-7024           | 1           | Screw-Shoulder, HHF           | 37          | 3219-6             | 2           | Nut-Hex                    |
| 10          | 3230-22            | 1           | Screw-CARR                    | 40          | 114-0463           | 2           | Washer-Friction, Composite |
| 11          | 110-0618           | 1           | Pin-Clevis                    | 41          | 115-4986           | 1           | Spacer                     |
| 12          | 131-0955           | 1           | Rod-Level, Deck               | 42          | 114-8540           | 1           | Arm-Idler                  |
| 13          | 104-8301           | 6           | Nut-HF, NI                    | 43          | 132-9420           | 2           | Pulley-Idler, Flat         |
| 14          | 104-8300           | 2           | Nut-HF, NI                    | 44          | 3256-24            | 3           | Washer-Flat                |
| 15          | 3256-23            | 1           | Washer-Plain                  | 45          | 323-11             | 1           | Screw-HH                   |
| 16          | 1-806003           | 1           | Pin-Cotter                    | 46          | 119-8819           | 1           | V-Belt                     |
| 17          | 108-7889           | 2           | Cover-Belt                    | 47          | 106-2177           | 1           | Spring-Extension           |
| 19          | 32144-4            | 2           | Screw-HWH                     | 48          | 88-5970            | 1           | Hook-Return, Spring        |
| 20          | 133-9289           | 1           | Fitting-Washout               | 49          | 137-7046           | 1           | Deflector                  |
| 20:2        | 133-9290           | 1           | O-Ring                        | 50          | 110-6694           | 1           | Spring-Torsion             |
| 23          | 95-3270            | 1           | Connector-Hose                | 52          | 112-3977           | 2           | Bolt-Shoulder              |
| 27          | 1-603299           | 2           | Roller-Scalp, Anti            | 56          | 117-1222           | 1           | Decal                      |
| 28          | 137-2019           | 1           | Rod-Pivot                     | 57          | 32144-1            | 6           | Screw-Taptite              |
| 30          | 121-0751           | 2           | Spindle ASM                   | 63          | 3296-42            | 8           | Nut-Lock, NI               |
| 30:2        | 120-7935           | 2           | Spacer                        | 64          | 107-7307           | 1           | Guide-Idler, Belt          |
| 30:3        | 136-5441           | 2           | Bearing-Ball                  | 65          | 323-8              | 1           | Screw-HH                   |
| 31          | 32144-41           | 8           | Screw-Taptite                 | 67          | 3296-59            | 1           | Nut-Lock, NI               |
| 32          | 117-7268           | 2           | Shaft-Spindle                 | 89          | 323-9              | 1           | Screw-HH                   |


# 42 Inch Decal Assembly No. 137-7041

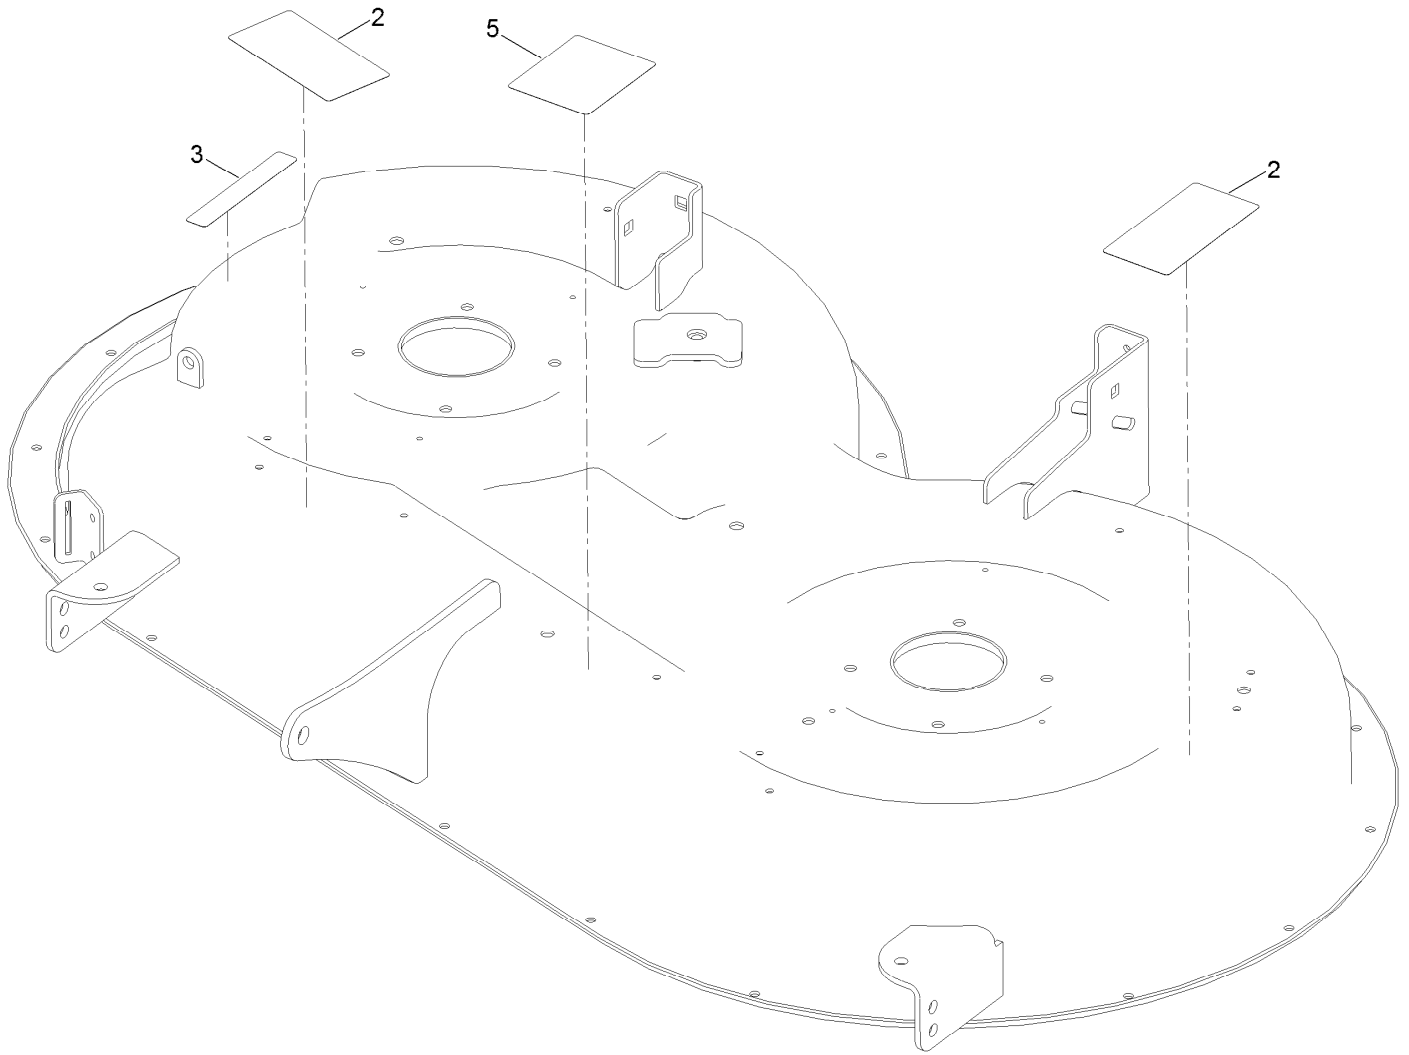

## 42 Inch Decal Assembly No. 137-7041 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 2           | 132-0872           | 2           | Decal-Danger, Deck  |
| 3           | 93-7009            | 1           | Decal-Danger        |
| 5           | 105-7015           | 1           | Decal-Routing, Belt |


# Model Specific Decal Assembly

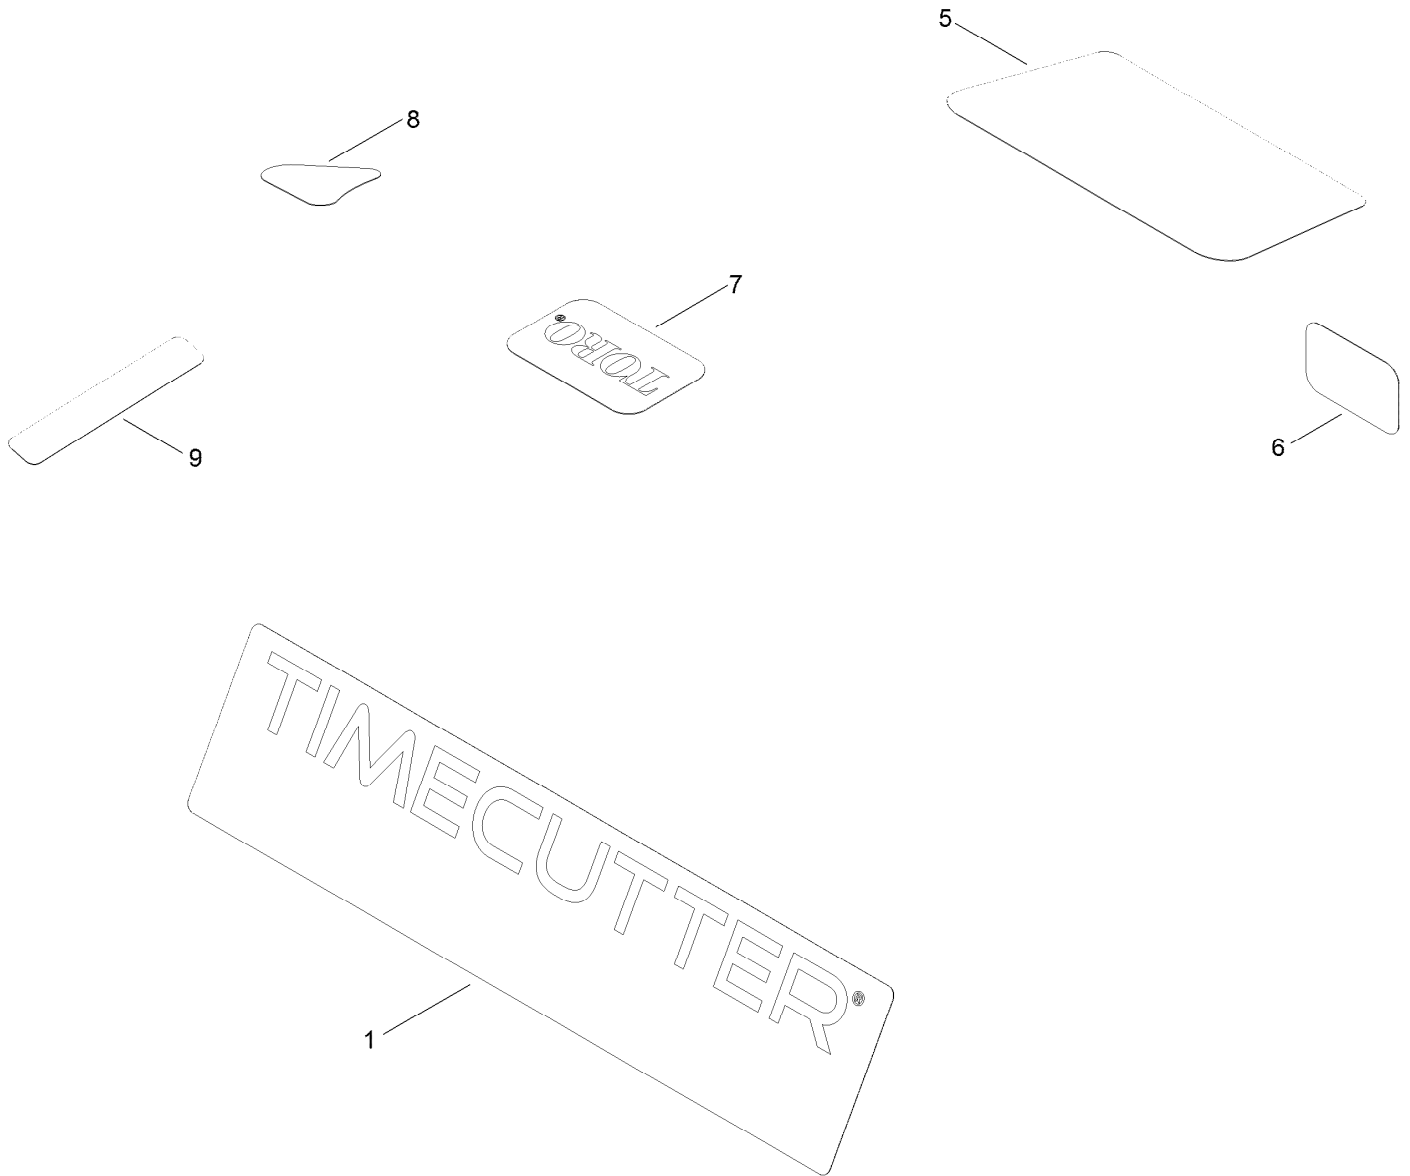

## Model Specific Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 131-3650           | 1           | Decal-Timecutter   | 7           | 131-4157           | 1           | Decal              |
| 5           | 136-5618           | 1           | Decal-Engine       | 8           | 131-1097           | 1           | Decal-Drain, Oil   |
| 6           | 127-9076           | 1           | Placard-Intake     | 9           | 132-0904           | 1           | Decal-Shutdown     |


# Speed Control Decal, HOC Decal and Service Decal Assembly

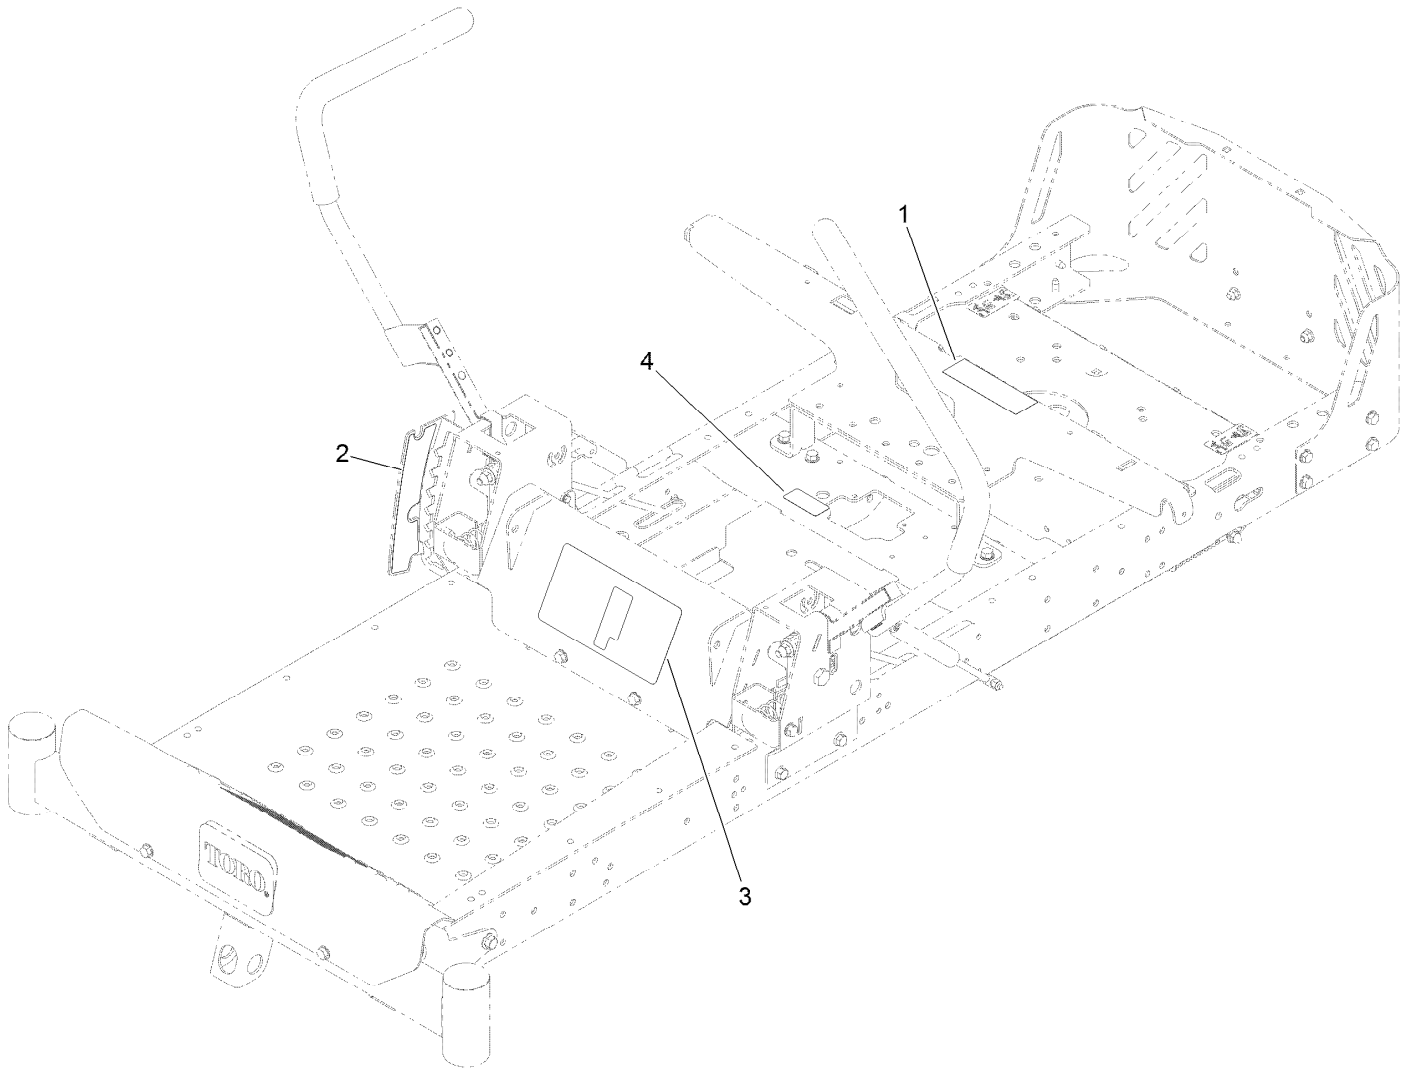

## Speed Control Decal, HOC Decal and Service Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 106-8717           | 1           | Decal-Service, CE  | 3           | 131-3947           | 1           | Decal-Control, Speed              |
| 2           | 119-8871           | 1           | Decal-HOC          | 4           | 121-5684           | 1           | Decal-Location, Service<br>Dealer |

# Clutch Assembly

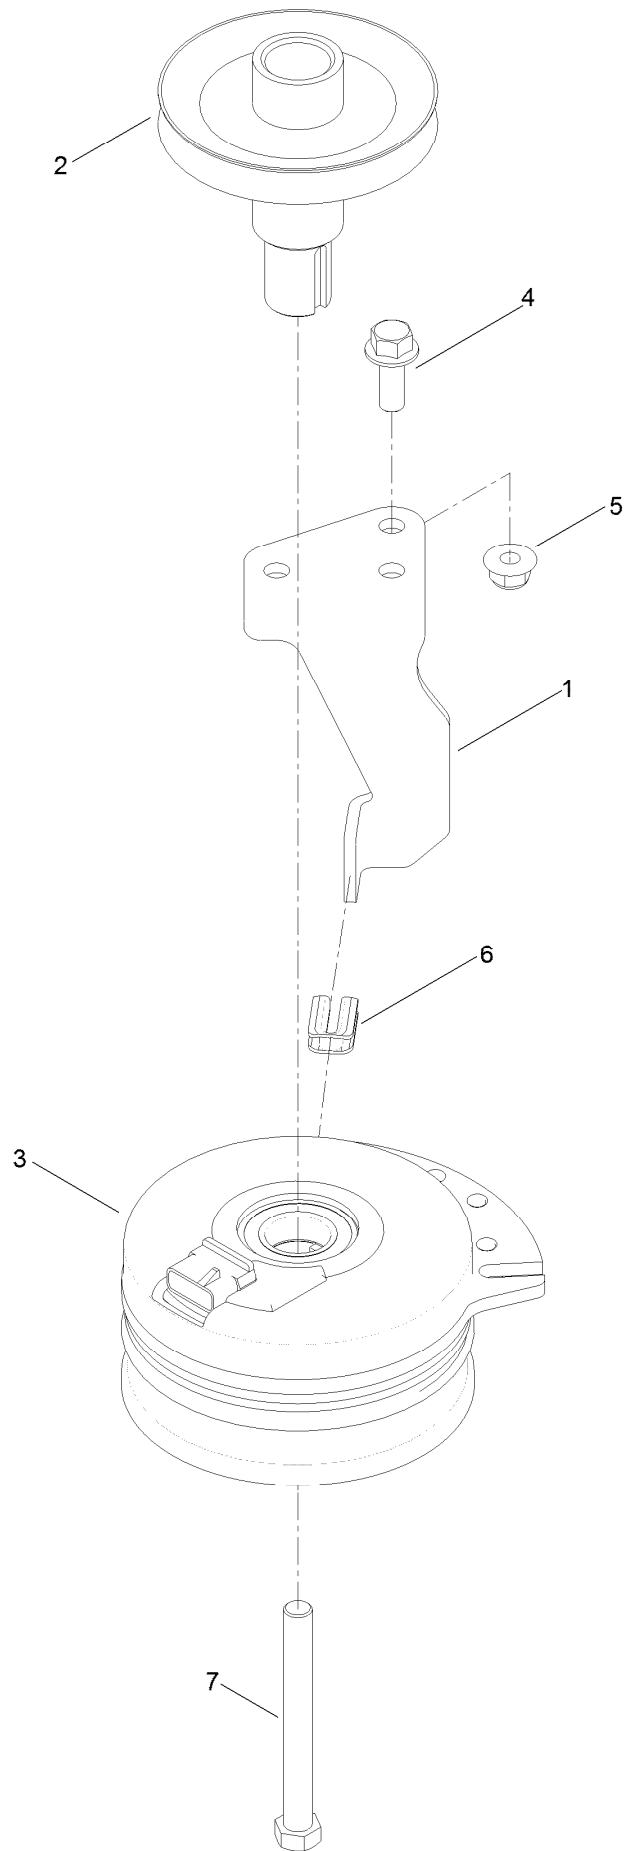

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-8884           | 1           | Stop-Clutch (Narrow) | 5           | 104-8301           | 1           | Nut-HF, NI         |
| 2           | 130-6854           | 1           | Pulley-Engine        | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 117-7468           | 1           | Clutch-Electric      | 7           | 3212-16            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF            |             |                    |             |                    |

# Attachments and Accessories

## For 74726 TimeCutter SS 4225 Riding Mower

| Product Name                                                                  | Model/Part   |
|-------------------------------------------------------------------------------|--------------|
| Armrest Kit .....                                                             | 105-6978     |
| Hourmeter Kit .....                                                           | 116-5461     |
| All Season Synthetic Oil (10W30, QT) .....                                    | 117-0066     |
| Seat Cover W/O Arm Rest - TC 18in.....                                        | 117-0096     |
| Jack Mount Kit .....                                                          | 126-5251     |
| Jack Kit .....                                                                | 127-6666     |
| Fuel Stabilizer .05 oz .....                                                  | 130-2393     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....                                    | 131-3823     |
| Attachment Mount Kit .....                                                    | 131-3966     |
| Toro Premium Fuel Treatment 12 Oz Bottle .....                                | 131-6572     |
| Weight Kit .....                                                              | 131-7658     |
| Deluxe Seat Kit .....                                                         | 131-7699     |
| Toro V-Twin Engine Maintenance Kit .....                                      | 132-4878     |
| Floor Mat Kit .....                                                           | 132-6921     |
| Maintenance Kit Toro V-Twin HD Engine .....                                   | 136-7847     |
| HD Air Cleaner Kit .....                                                      | 136-7860     |
| Replacement Blade Kit .....                                                   | 137-1999-03P |
| Striping Kit .....                                                            | 137-5030     |
| 42in Recycler Kit.....                                                        | 137-7042     |
| Bagging Enhancement Kit .....                                                 | 137-7048     |
| Weight Kit, Zero-Turn-Radius Riding Mower.....                                | 138-2452     |
| Pro-control Damper Kit .....                                                  | 138-7588     |
| 10w30 4-Cycle Engine Oil (32oz Bottle).....                                   | 38280        |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....                                   | 38903        |
| Storage Cover .....                                                           | 490-7516     |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower ..... | 79010        |
| Sunshade Kit .....                                                            | 79011        |
| Assist Handle and Step Kit .....                                              | 79339        |
| 42in Bagger Timecutter SS (2017 And Up) .....                                 | 79397        |

**Notes:**



**Count on it.**