



Wheel Horse®

265-6 Lawn & Garden Tractor

Model No. 72047 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood & Grill Assembly	1	Dash Assembly	13
Front Axle Assembly	2	Gear Shift Linkage Assembly	14
Battery Assembly	3	Gear Drive Components Assembly	15
Fuel Tank Assembly	4	Clutch & Brake Assembly	16
Lower Steering Assembly	5	Transaxle Assembly	17
Steering Wheel & Tilt Assembly	6	Rear Wheel Assembly	18
Hoodstand & Firewall Assembly	7	Peerless Transaxle 820–024	19–22
Lift Lever & HOC Assembly	8	Engine Kohler CV15S–PS41550	23–33
Frame Assembly	9	Toro Part Number Index	34–40
Engine, Muffler & PTO Assembly	10	Maintenance	41
Fender & Footrests Assembly	11		
Seat Assembly	12		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
38" Side Discharge Mower	Model No. 78216	42" Snowthrower Adapter	Part No. 93–7625
42" Side Discharge Mower	Model No. 78231	Power Lift Kit	Part No. 94–5439
48" Side Discharge Mower	Model No. 78260	48" Recycler Kit	Model No. 79195
52" Side Discharge Mower	Model No. 78280	48" Blade Skid Shoe	Part No. 92–6840
11 Cubic Foot Twin Bagger	Model No. 79202	Rear Wheel Weights	Model No. 81115
11 Cubic Foot Vac–Bagger (42" & 48" S.D. Mowers)	Model No. 79203	Front Wheel Weights	Model No. 81214
36" Tiller	Model No. 79271	Tire Chains	Model No. 82522
48" Dozer Blade	Model No. 79252	Cab	Model No. 79911
42" Snowthrower	Model No. 79263	Vinyl Cover	Part No. 110831
38" Recycler Kit	Model No. 79170	R.H. Cleat Tire	Part No. 92–6789
Baffle Kit –42" Side Discharge ..	Model No. 85501	L.H. Cleat Tire	Part No. 92–6790
Indicator Lights	Part No. 92–6831	Non Metallic Hubcap–8"	Part No. 94–3717
48" Blade Adapter	Part No. 92–6828	Non Metallic Hubcap–12"	Part No. 94–3718

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HH	hex head
ASM	assembly	HHF	hex head flange
CARR	carriage	HHST	hex head self tapping
DEG	degrees	HJ	hex jam
FH	flat head	HOC	height-of-cut
GA	gauge	HS	hex socket
HF	hex flange	HSBH	hex socket button head
HFW	hex flange washer	HSFH	hex socket flat head

HSB	hex socket head	SFH	slotted fillister head
HWH	hex washer head	SH	square head
HWHTF	hex washer head thread forming	SHWH	slotted hex washer head
INC	incorporated	SPH	slotted pan head
LH	left hand	STD	standard
PH	pan head	TAP	self tapping
PPH	Phillips pan head	TH	truss head
PTO	power take off	TTH	Torx truss head
RH	right hand	WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y)*. *X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

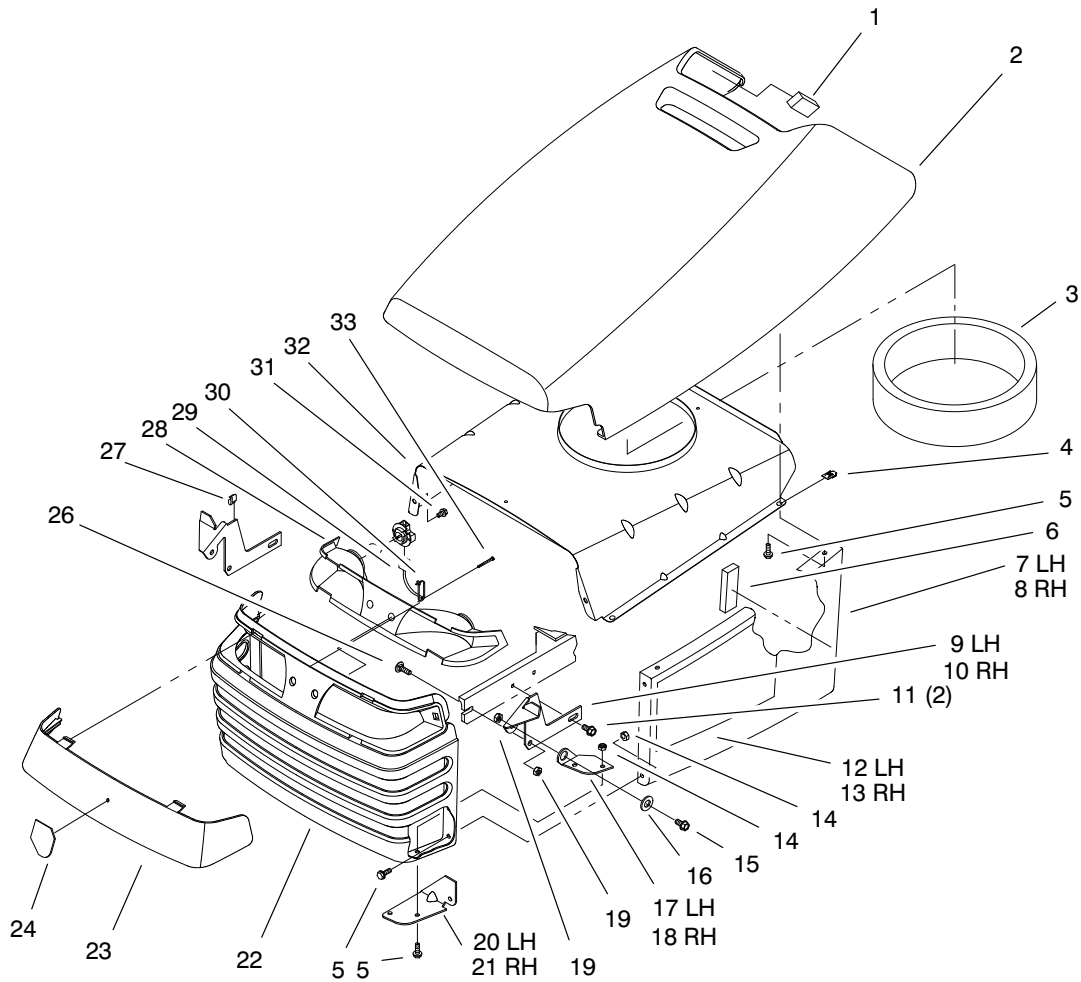


Sheet No.:2

Hood & Grill Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam – Hood
2	93-0490	1	Hood – Service ASM
3	92-7077	1	Seal-Air Inlet Single
4	92-7006	4	Nut – J Type
5	32105-15	12	Screw-Mach
6	92-7148	2	Foam – Sidepanel
7	93-0491	1	LH Hood Side Sa
8	93-0492	1	RH Hood Side Sa
9	92-6918-03	1	Bracket-LH Hinge
10	92-6917-03	1	Bracket-RH Hinge
11	32144-14	2	Screw-HWH
12	95-0801	1	Decal – Hood LH
13	95-0800	1	Decal – Hood RH
14	32128-10	8	Flange Locknut
15	322-3	2	Screw-HH
16	105503	2	Bushing
17	92-6997-03	1	Hinge – LH Hood
18	92-6996-03	1	Hinge – RH Hood
19	3296-29	4	Nut-Lock Ni
20	92-7049-03	1	Brkt-Hood Hinge RH
21	92-7048-03	1	Brkt-Hood Hinge LH
22	93-0494	1	Screen/Grill ASM, Sa
23	92-6656	1	Lens – Headlight
24	92-6987	1	Horsehead Emblem
26	3230-1	2	Screw-CARR
27	519337	1	Clip-Cable


Ref. No.	Part No.	Qty.	Description
28	88-3970	1	Reflector & Lamp ASM
29	88-4320	1	Wire Harness-Lights
30	614249	1	Strap-Tie Sm
31	46-8093	2	Screw-Plastite
32	92-6914-03	1	Baffle-Hood Upper
33	32144-32	2	Screw

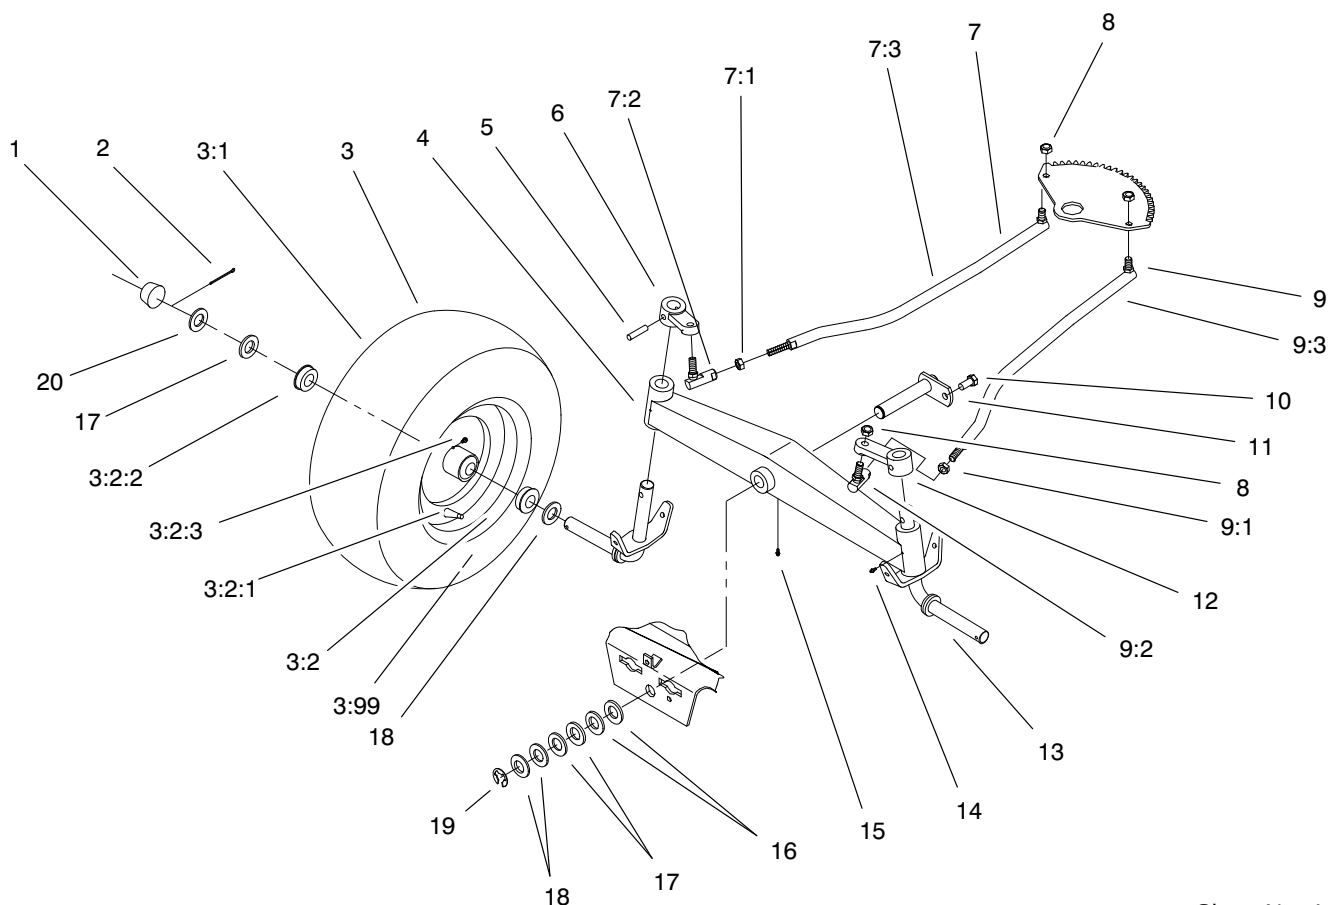

Sheet No.:4

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	61-9780	2	Cap-Hub
2	3272-17	2	Pin-Cotter
3		2	Wheel&tire ASM,Front
3:1	99-2336	1	Tire
3:2	93-9801	1	ASM - Wheel w/Zerk
3:2:1	5108	1	Valve-Tubeless Tire
3:2:2	110513	2	Bearing Wheel
3:2:3	109500	1	Zerk-Grease
3:99	105293	1	Tube
4	78-7960-01	1	Axle-Front
5	933270	2	Pin
6	78-1950-01	1	Arm-Front Spindle
7		1	Steering Linkage, RH
7:1	9150854	1	Jam Nut
7:2	78-2920	1	Ball-Joint
7:3	78-5801	1	Ass'y-Ball Link
8	9150026	4	Nut-Eslok
9		1	Steering Linkage, LH
9:1	9150854	1	Jam Nut
9:2	78-2920	1	Ball-Joint
9:3	78-5811	1	Ass'y-Ball Link L
10	9267154	1	Screw
11	92-7057-03	1	Pin - Axle Wa *Black
12	78-1940-01	1	Arm-Front Spindle
13	78-2601-01	2	Wldmt-Spindle
14	302-5	2	Fitting-Lube

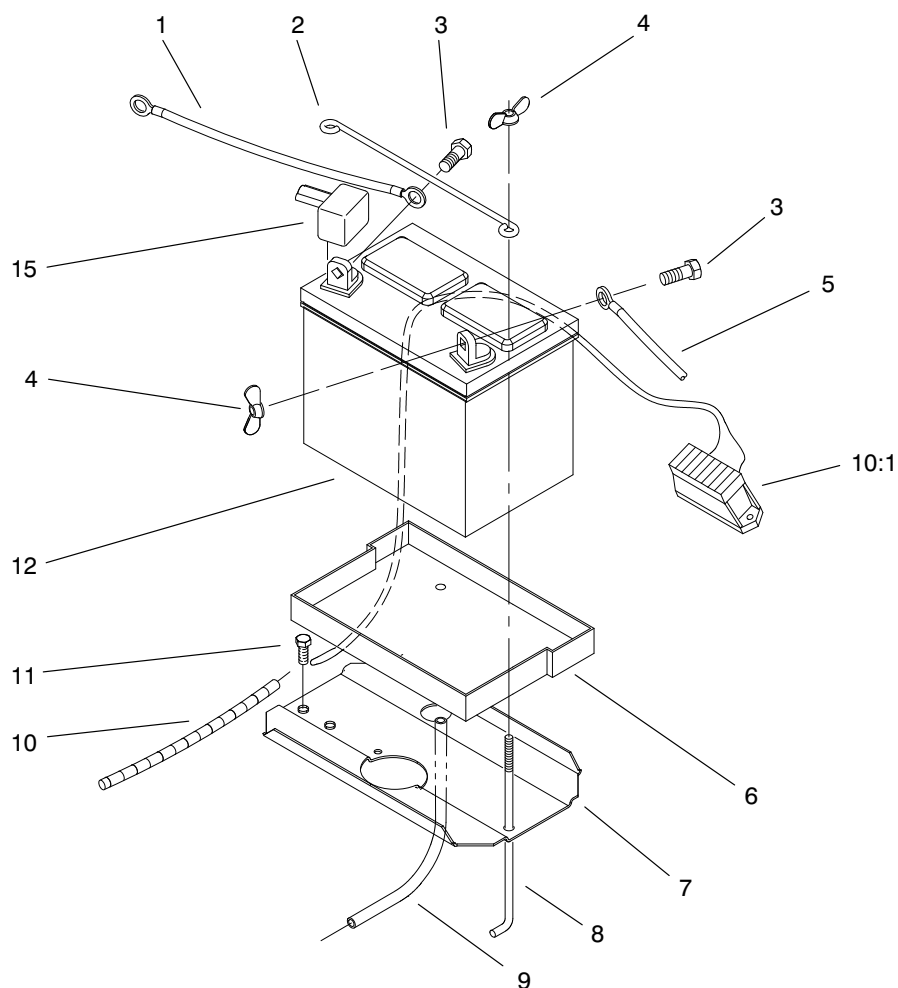


Sheet No.:6

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6990	1	Wire -10" Red
2	117316	1	Rod-Battery Hold Dwn
3	321-4	2	Screw-HH
4	32103-22	4	Nut-Wing
5	111078	1	Wire - 10" Black
6	106948	1	Tray-Battery
7	78-6820-03	1	Plate-Battery
8	109547	2	Hook
9	114720	1	Tube-21" Battery Drain
10	99-8065	1	Harness - Wire, 265-6
11	32144-14	1	Screw-HWH
12	105842	1	Battery (Dry)
15	28-8080	1	Boot-Terminal


Ref. No.	Part No.	Qty.	Description

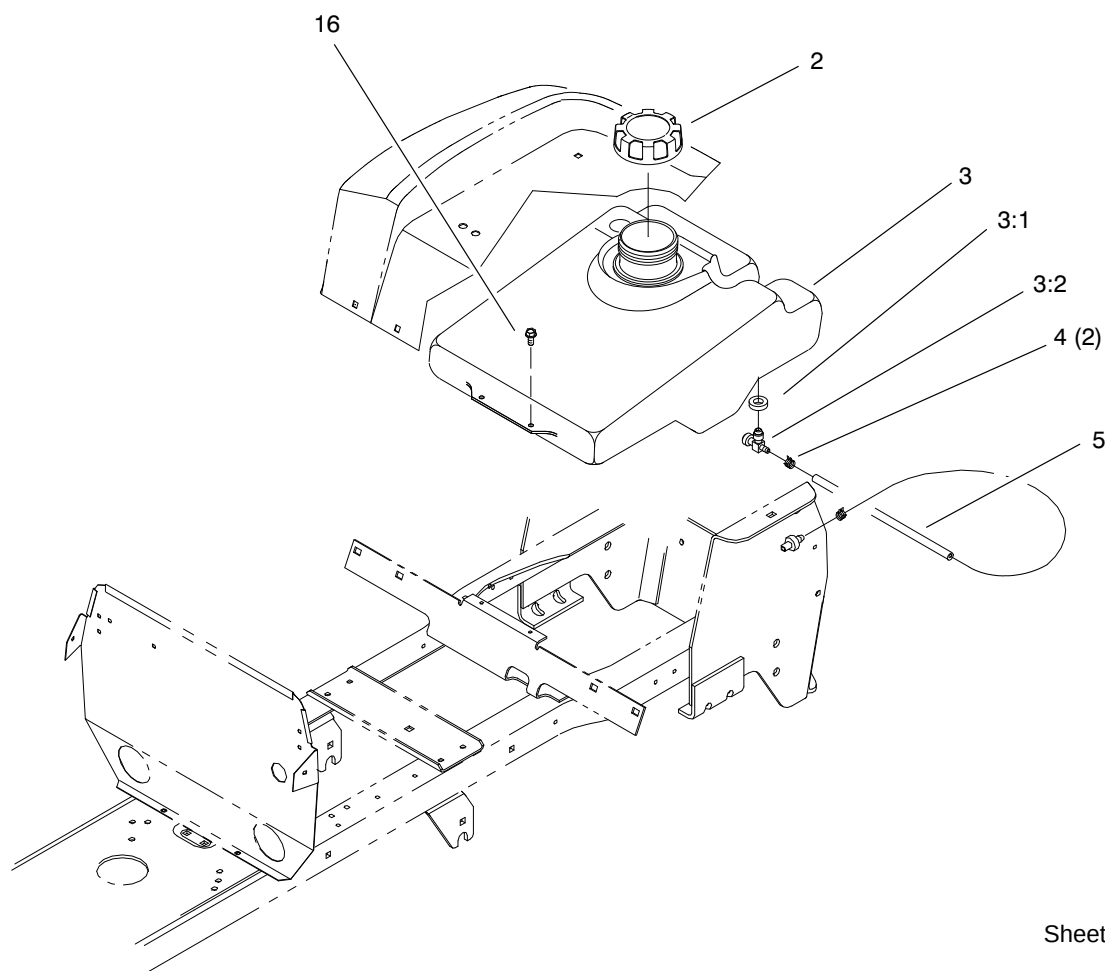

Sheet No.:7

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
2	88-3980	1	Gas Cap Assembly
3	94-6928	1	Tank - Gas
3:1	104048	1	Valve-Fuel
3:2	104047	1	Bushing
4	2412-98	2	Clamp
5	92-6754	1	Hose - Fuel Line Single
16	32144-4	2	Screw-HH

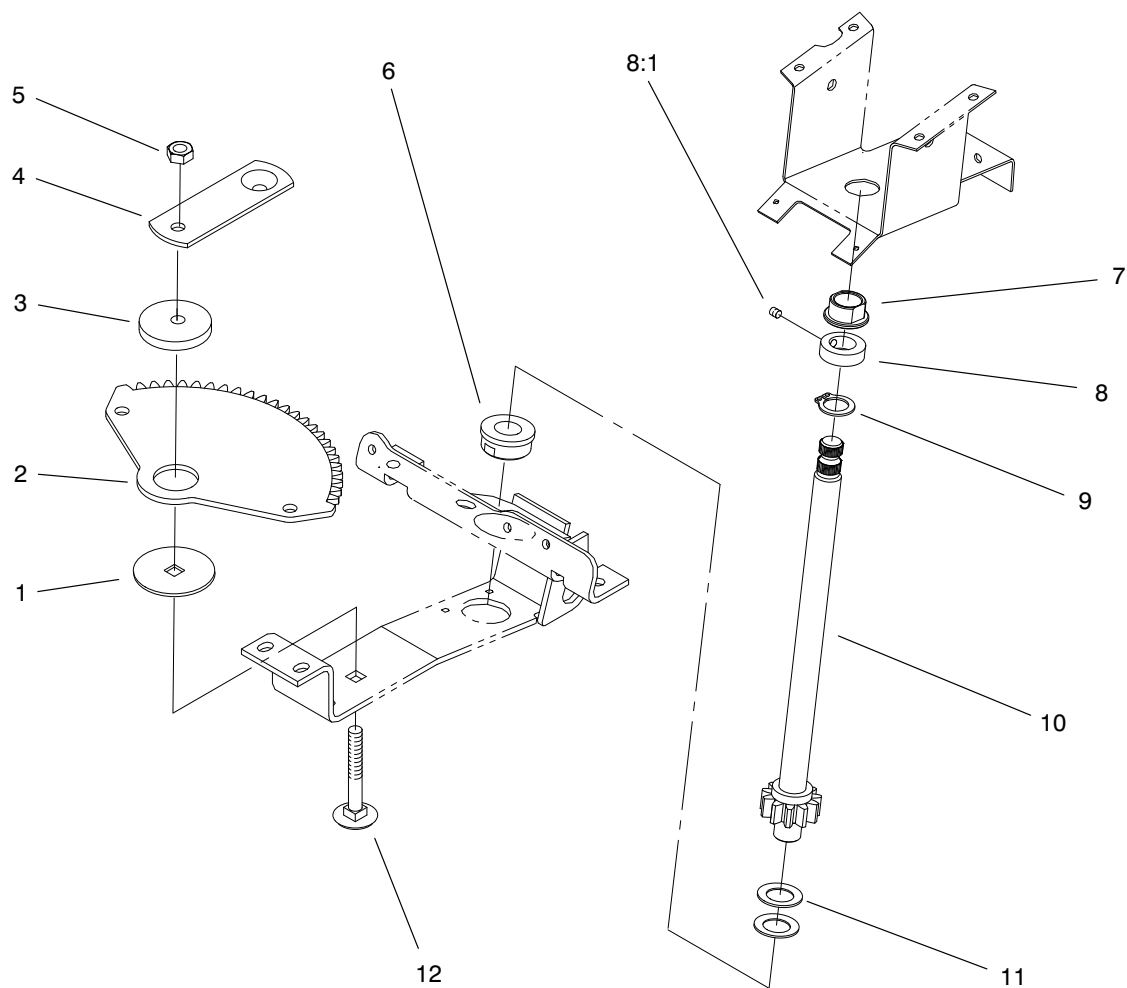


Sheet No.:8

Lower Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	111419	1	Bearing–Washer
2	78–2610	1	Gear–Sector Plated
3	111418	1	Bushing
4	78–9150–03	1	Plate
5	108881	1	Nut–Differential
6	110391	1	Bearing Wheel
7	109189	1	Bearing–Flanged
8	111383	1	Collar
8:1	3245–32	1	Screw–HS
9	111646	1	Grip Ring
10	92–6702	1	Lower Strg Shaft Wa
11	1278	2	Washer
12	3231–4	1	Screw–CARR


Ref. No.	Part No.	Qty.	Description

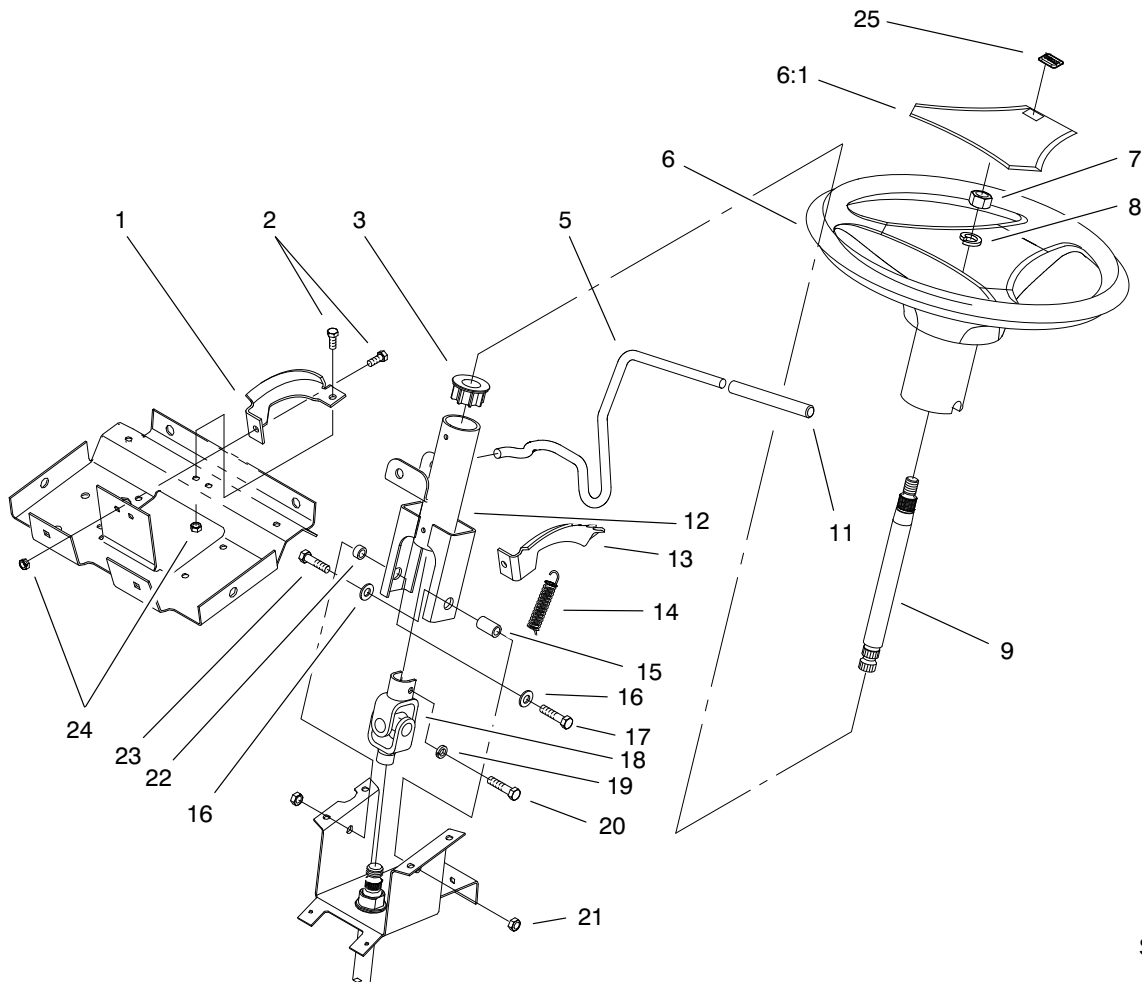

Sheet No.:9

Steering Wheel & Tilt Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6777-03	1	Brkt – Supt Column				
2	321-4	4	Screw-HH				
3	93-1146	1	Bushing – Upper Strg				
5	92-6971	1	Lever – Tilt Plated				
6	98-1471	1	Wheel – Steering 14"				
6:1	98-1468	1	Cover – Wheel, Steering				
7	3217-9	1	Nut-Hex				
8	3253-7	1	Washer-Lock/Sp				
9	94-2874	1	Shaft – Short Steering				
11	92-6798	1	Cap – Rod Tilt				
12	93-1148-03	1	Column – Wa				
13	92-6776	1	Bracket – Detent				
14	93-1357	1	Spring – Ext., Steering				
15	92-6999	1	Spacer – Yoke				
16	3256-23	2	Washer-Flat				
17	322-3	1	Screw-HH				
18	92-6717	1	U Joint – Steering				
19	3253-4	2	Washer-Lock/Sp				
20	33114-030	2	Screw-HH				
21	3296-29	2	Nut-Lock Ni				
22	92-6998	1	Spacer – Yoke, Right				
23	322-17	1	Screw-HH				
24	3296-8	4	Nut-Lock Ni				
25	98-1459	1	Decal – Toro				

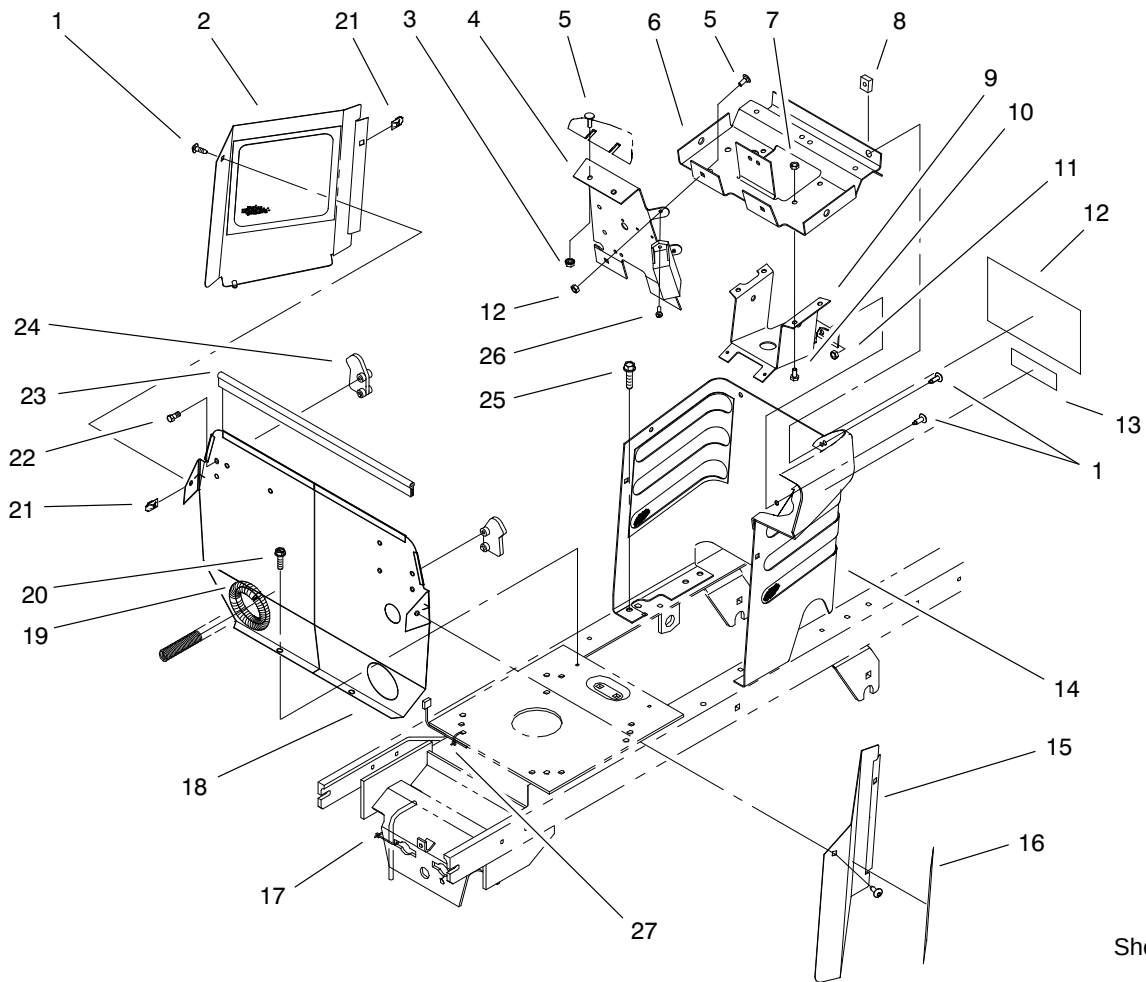


Sheet No.:10

Hoodstand & Firewall Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-HH
2	92-6937-03	1	Cover-RH Side Wa
3	32149-2	2	Nut-Keps
4	99-8040-03	1	Support - Dash
5	3229-11	4	Screw-CARR
6	92-6859-03	1	Support - Dash
7	3296-8	4	Nut-Lock Ni
8	92-6860	4	Nut Retainer - J Type
9	92-6778-03	1	Brkt - Lower Column
10	321-4	4	Screw-HH
11	3296-42	3	Nut-Lock Ni
12	93-0301	1	Decal - Danger
13	83-6620	1	Decal - Instruction
14	92-6694-03	1	Hoodstand Wa (Black)
15	92-6936-03	1	Cover-LH Side Wa
16	95-0803	2	Decal - 265 6-Speed
17	614249	1	Strap-Tie Sm
18	94-1749-03	1	Firewall
19	24-7924	2	Drive Shaft Cover
20	32144-4	2	Screw-HH
21	92-7006	4	Nut - J Type
22	46-8093	2	Screw-Plastite
23	93-1131	1	Trim-Seal Firewall
24	92-6960	2	Latch - Hood
25	32144-14	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description
26	32144-8	2	Screw-HH
27	614249	1	Strap-Tie Sm

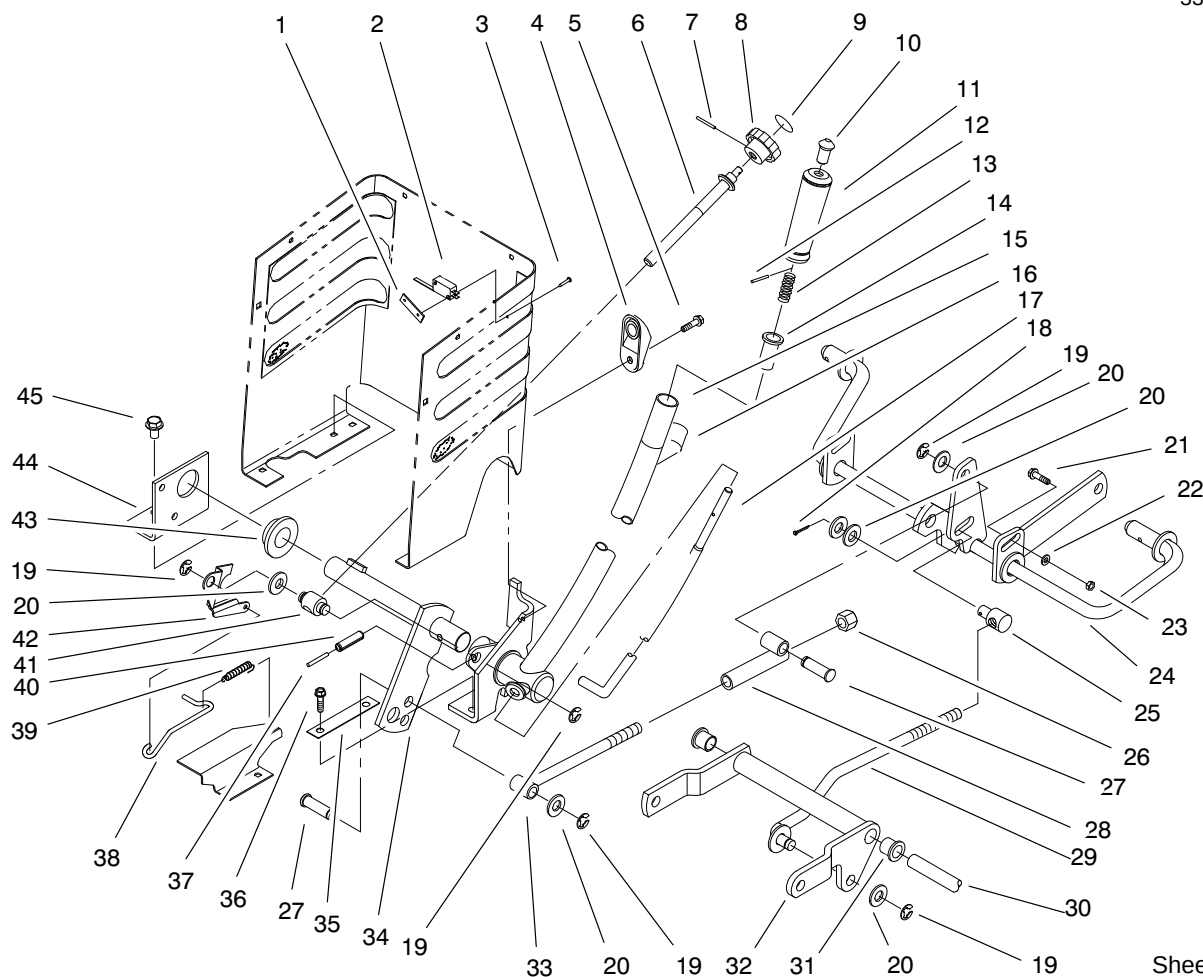


Sheet No.:11

Lift Lever & HOC Assembly


Ref. No.	Part No.	Qty.	Description
1	3290-354	1	Nut-Speed
2	88-9930	1	Switch-Micro
3	95-3003	2	Screw-HH
4	92-6794	1	Wedge - HOC
5	32144-4	1	Screw-HH
6	92-6965	1	Rod - HOC
7	933141	1	Pin-Spirol
8	115593	1	Knob
9	78-9740	1	Decal-Height Knob
10	92-6711	1	Tip - Rod
11	92-6710	1	Grip - Handle
12	933148	1	Spirol Pin
13	3624	1	Spring-Compression
14	8130	1	Retainer-Spring
15	94-3761-03	1	Wa- Lift Lever
16	112168	1	Decal-Lift
17	92-6977-03	1	Rod - Lift Lever
18	3272-6	1	Pin-Cotter
19	32120-47	5	E Ring-External
20	3256-26	6	Washer-Flat
21	3231-25	2	Screw-CARR
22	3256-24	2	Washer-Flat
23	3296-39	2	Nut-Lock Ni
24	79-3401-03	1	Shaft-Gage
25	8870	1	Rod-Trunnion Lift
26	3296-23	1	Nut-Lock Ni

Ref. No.	Part No.	Qty.	Description
27	79-1250	2	Pin
28	78-7390	1	Tube
29	78-2431	1	Rod
30	94-4944	1	Shaft - Pedal Pivot
31	256-90	2	Bshg-Flg
32	92-6855-03	1	Arm-Pivot
33	78-7360	1	Wldmt-Rod
34	94-3552-03	1	Shaft-Lift
35	78-6810-03	1	Plate
36	32144-14	2	Screw-HWH
37	32121-103	1	Pin-Sprl
38	92-6978	1	Rod - HOC Indicator
39	92-7007	1	Spring - Extension
40	32121-25	1	Pin-Roll
41	78-2140	1	Trunnion
42	92-6979	1	Plate - HOC Gage
43	106269	1	Bearing-Flange
44	93-0523-03	1	Brkt-Pivot Linkage
45	32144-70	2	Screw-Tapite

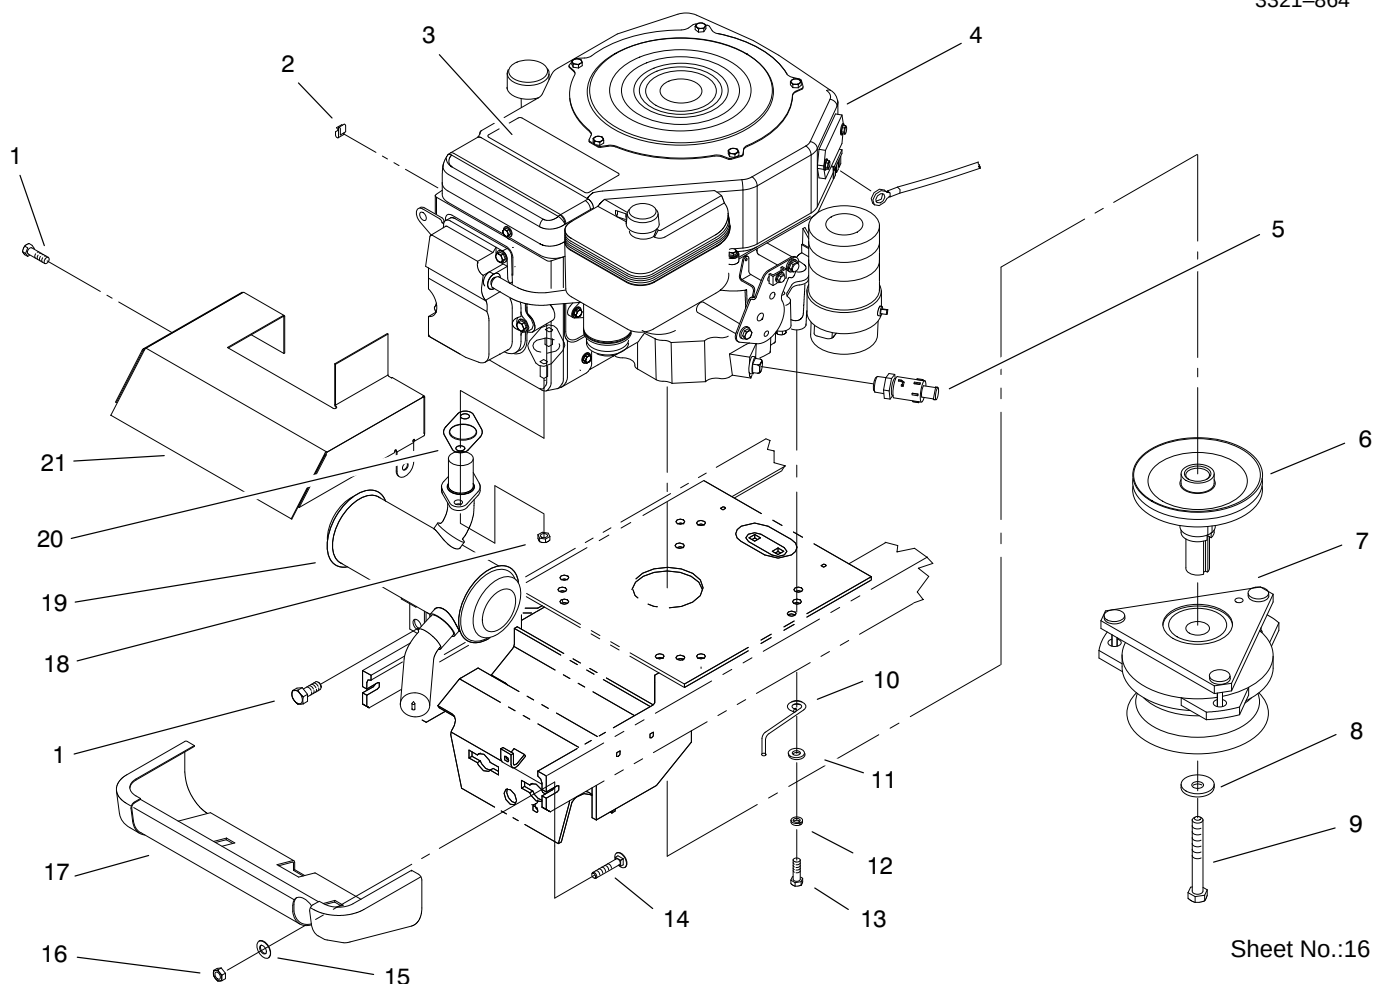

Engine, Muffler & PTO Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	702366	1	Clip-Wire Retainer
3	94-2970	1	Decal - Toro Power + 15
4		1	Engine - Kohler 15
5	92-6877	1	Valve - Oil Drain
6	93-0321	1	Pulley- Engine Gear
7	94-2514	1	Clutch - PTO
8	112843	1	Washer
9	9114466	1	Screw-HH
10	79-0390	1	Guide-Belt
11	3256-23	1	Washer-Flat
12	3253-4	4	Washer-Lock/Sp
13	33114-030	4	Screw-HH
14	3231-25	2	Screw-CARR
15	3256-24	2	Washer-Flat
16	3296-39	2	Nut-Lock Ni
17	92-6867-01	1	Shield-Muffler
18	92-6780	2	Nut-Hex Flange
19	98-1761	1	Muffler - Single
20	92-6716	1	Gasket-Exh.single F/W
21	92-6878-03	1	Shield-Mufflr Single

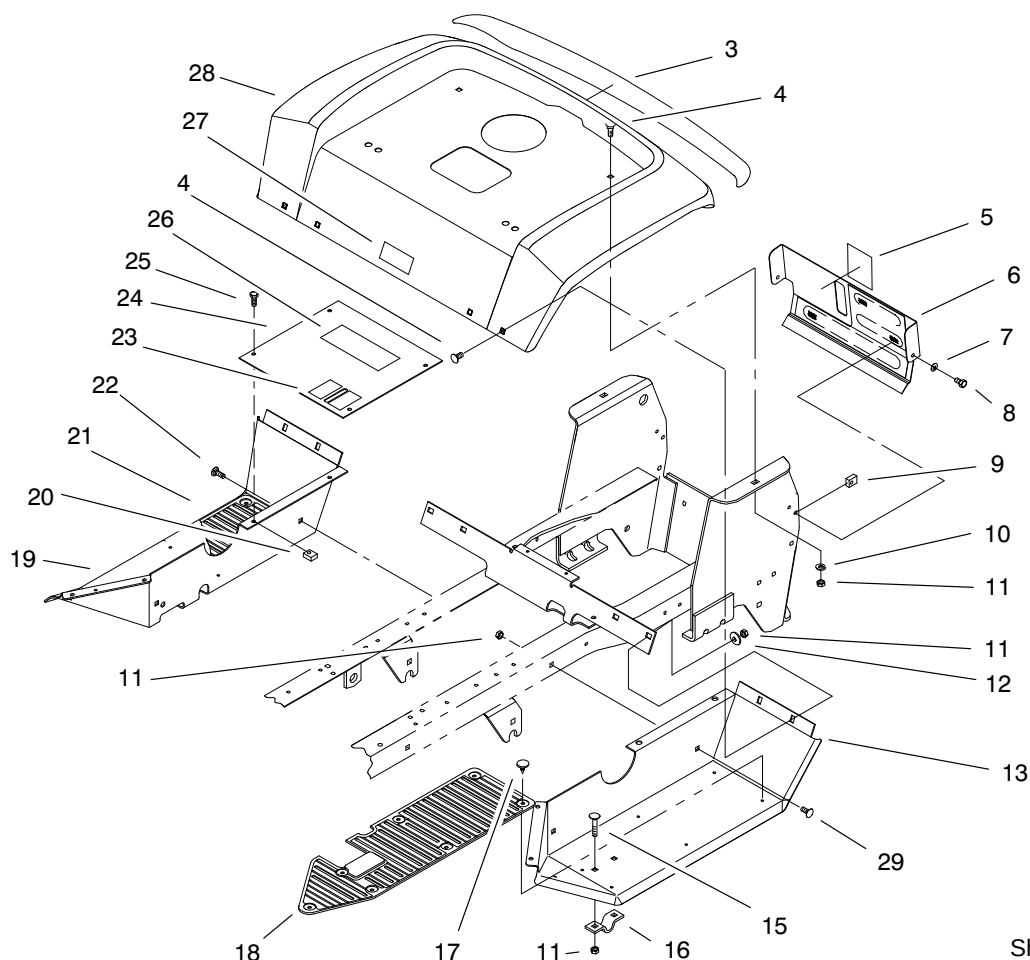


Sheet No.:17

Fender & Footrests Assembly

Ref. No.	Part No.	Qty.	Description
3	95-0802	1	Decal – Rear Fender
4	3230-31	6	Screw– Carriage
5	92-6727	1	Decal – Fuel Level
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer–Flat
8	321-4	2	Screw–HH
9	609900	2	Nut–Speed
10	3256-23	2	Washer–Flat
11	3296-29	14	Nut–Lock Ni
12	94-2869	4	Washer
13	92-6745-01	1	LH Footrest
15	3230-1	4	Screw–CARR
16	106288	2	Clamp
17	3290-479	14	Fastener–Panel
18	92-6690	1	Foot Mat–LH
19	92-6744-01	1	Footrest–RH
20	107069	4	Clip
21	92-6689	1	Foot Mat–RH
22	3230-23	3	Screw–CARR
23	92-6725	1	Decal – HOC
24	93-0489-01	1	Plt – Frest w/Decal
25	92-7020	4	Screw–HH
26	92-8946	1	Decal – Danger
27	76-1340	1	Decal – USA
28	92-6795-01	1	Fender
29	3230-2	1	Screw–CARR


Ref. No.	Part No.	Qty.	Description

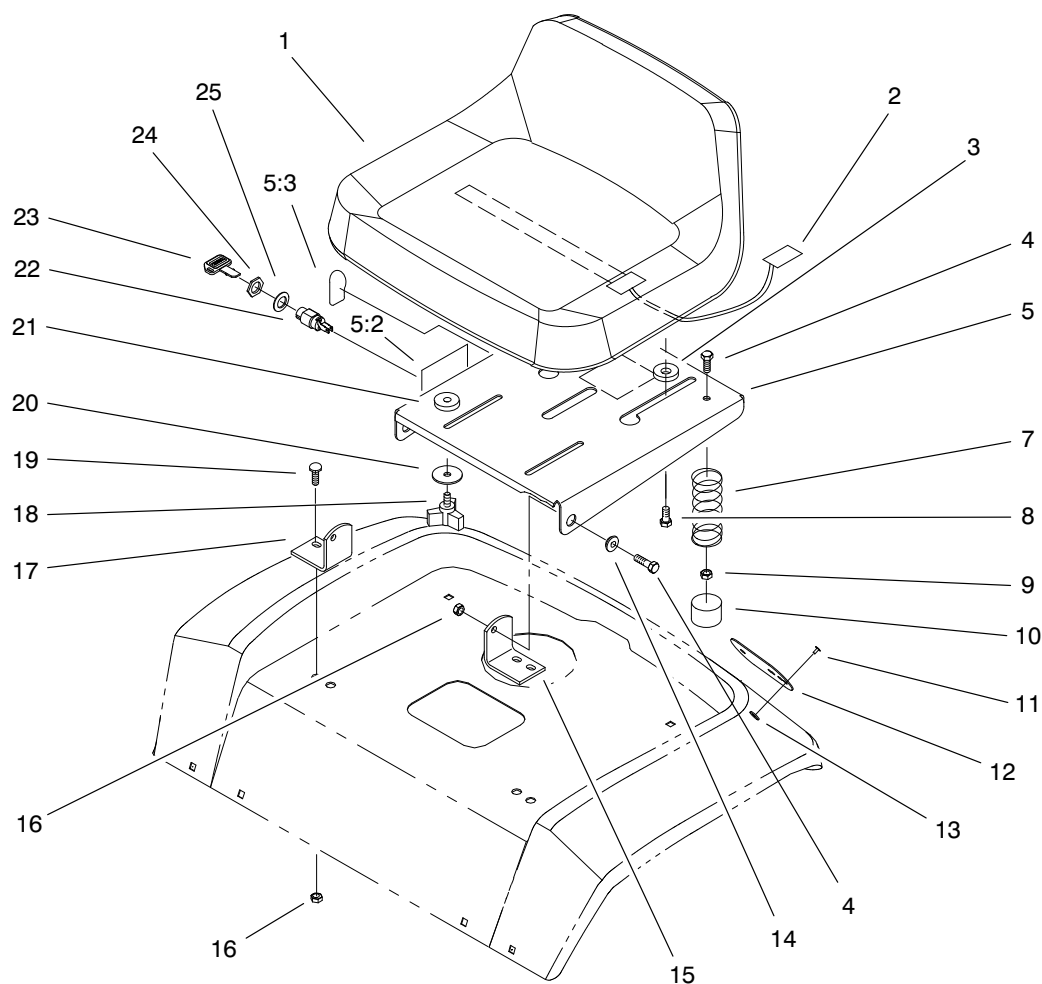

Sheet No.:18

Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-3950	1	Seat – Medium Back V411	24	218-461	1	Nut-F/W [5/8-32]
2	38-1420	1	Switch-Seat	25	3254-5	1	Washer-Lock/Int
3	92-6750	2	Spacer – Nylon				
4	322-5	4	Screw-HH				
5	99-8031	1	Support-Seat				
5:2	99-2985	1	Decal-Danger				
5:3	99-5339	1	Decal-Nmir Switch				
7	92-7054	2	Spring – Compression				
8	92-6986	2	Bolt – Shoulder				
9	3296-58	2	Nut-Lock Ni				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Stl Pop				
12	106557	2	Reflector-Stick On				
13	3256-49	4	Washer-Flat				
14	105503	2	Bushing				
15	79-0970-03	1	Brkt-Pivot L.h.				
16	3296-29	6	Nut-Lock Ni				
17	79-0950-03	1	Brkt-Pivot R.h. (Black)				
18	700806	2	Knob				
19	3230-2	4	Screw-CARR				
20	94-2869	2	Washer				
21	109989	2	Spacer Nylon				
22	46-5780	1	Switch-Starter				
23	62-7770	1	Key-Ignition				

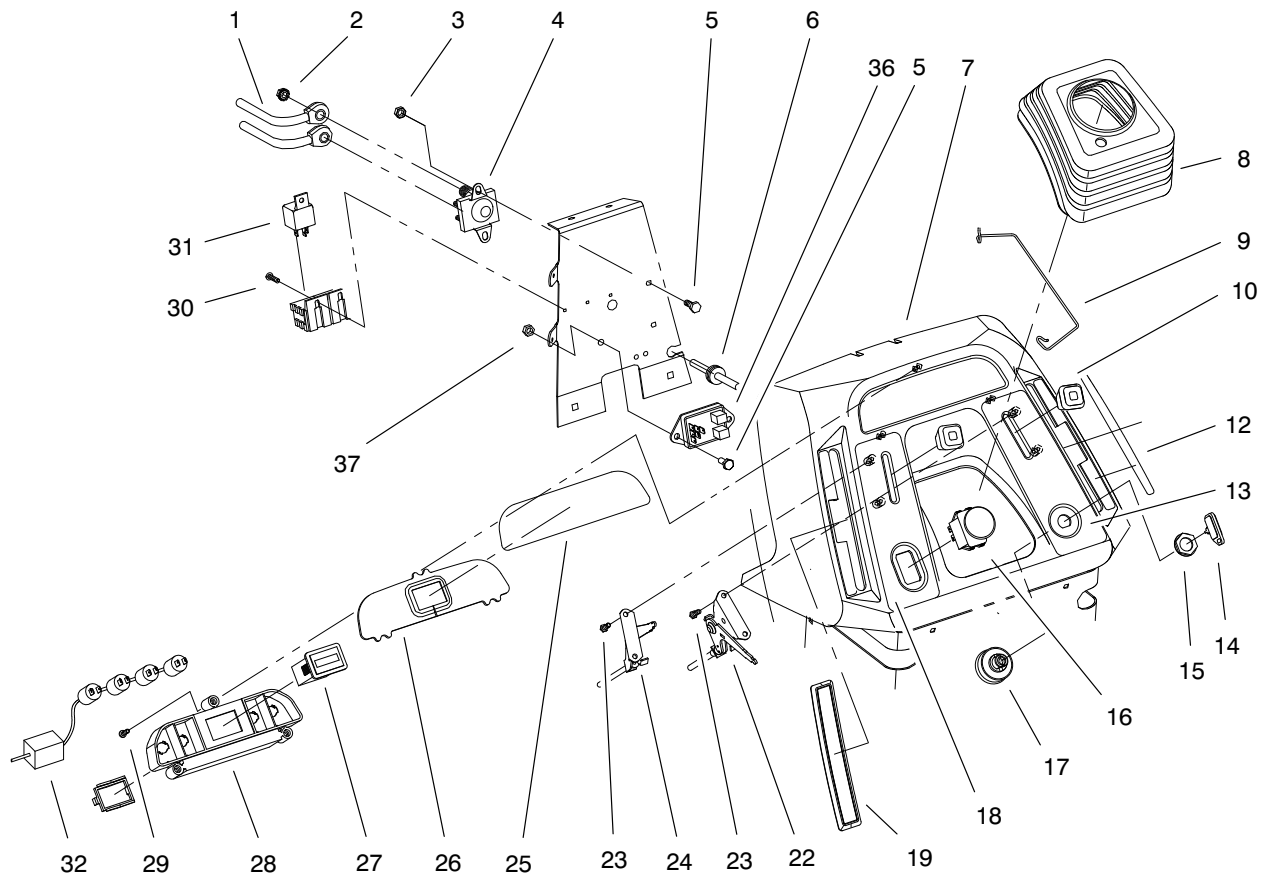


Sheet No.:19

Dash Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Wire – 21" Red
2	32149-2	2	Nut-Keps
3	3296-42	2	Nut-Lock Ni
4	92-9845	1	Solenoid
5	321-4	4	Screw-HH
6	237-141	1	Grommet-Rubber
7	94-1895	1	Dash
8	92-6680	1	Steering Boot
9	94-2966	1	Clip – Boot
10	66-0120	2	Knob
12	92-6722	1	Decal – Shift
13	92-6721	1	Decal – Throttle/Ign
14	62-7770	1	Key-Ignition
15	700919	1	Nut #125
16	93-9998	1	Switch – PTO Toro
17	92-6785	1	Switch – Ignition
18	92-6720	1	Decal – PTO/Choke
19	92-6797	1	Cover – Slot LH
22	94-9779	1	Control – Throttle
23	32144-32	4	Screw
24	92-6781	1	Control-Choke Single
25	99-8038	1	Decal – Dash Lens
26	92-6705	1	Lens – Dash Hm
27	94-4208	1	Hourmeter
28	92-6732	1	Hsg – Indicator Light
29	94-6961	3	Screw


Ref. No.	Part No.	Qty.	Description
30	32144-8	2	Screw-HH
31	98-7249	2	Relay-Spdt
32	99-8066	1	Harness-Lamp
36	99-3701	1	Module-Nmir, Clutch
37	3296-42	2	Nut-Lock Ni

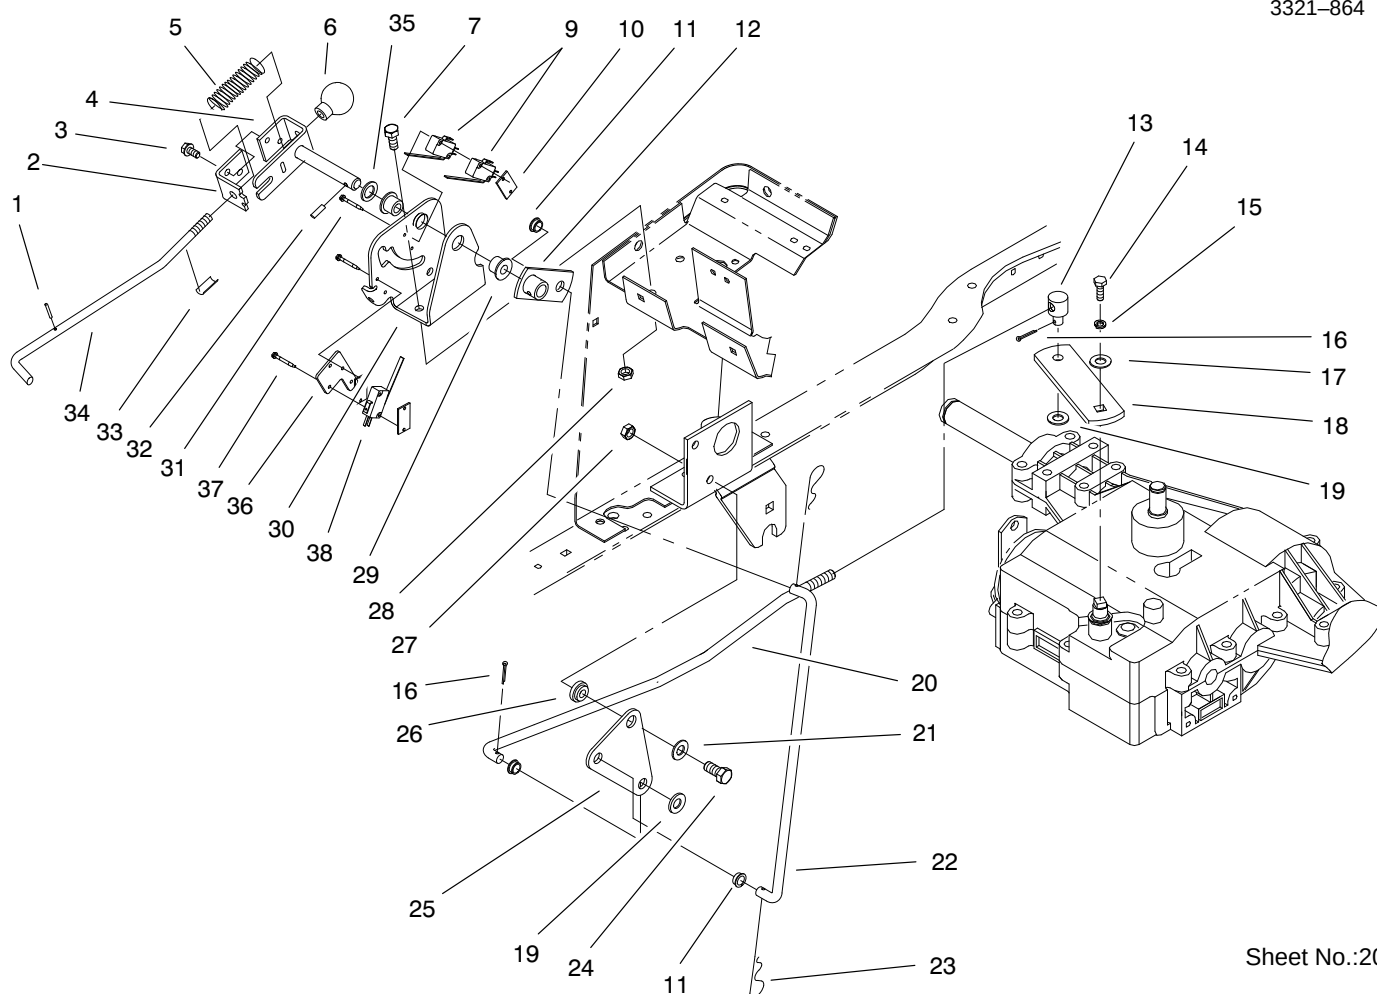

Sheet No.:20

Gear Shift Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32121-97	1	Pin	28	3296-29	2	Nut-Lock Ni
2	92-6921	1	Bracket - Shaft	29	256-219	2	Bushing
3	32144-4	2	Screw-HH	30	99-8041-03	1	Brkt-Pivot Mtg
4	94-9767	1	Arm-Pivot	31	93-0539	2	Screw-HH
5	3624	1	Spring-Compression	32	32121-4	1	Pin-Roll
6	233-42	1	Knob	33	93-3141	1	Decal - Reverse Gear
7	322-3	2	Screw-HH	34	94-9766	1	Rod - Shift
9	115230	2	Switch - Clutch	35	41-8440	1	Washer
10	3290-354	3	Nut-Speed	36	99-8042	1	Bracket-Switch, Nmir
11	92-6875	3	Brg - Shift Linkage	37	147665	4	Screw-HH
12	92-6926-03	1	Tube-Linkage	38	88-9932	1	Switch-Micro
13	110656	1	Trunnion				
14	329-23	1	Screw-HH				
15	3253-3	1	Washer-Lock/Sp				
16	3272-6	2	Pin-Cotter				
17	7-5461	1	Spacer				
18	92-6886	1	Brk-Trasxl Shi				
19	3256-24	2	Washer-Flat				
20	92-6896	1	Rod - Transaxle Shift				
21	3256-71	1	Washer-Flat				
22	92-7005	1	Rod - Linkage				
23	3290-307	2	Cotter-Hairpin				
24	322-5	1	Screw-HH				
25	93-0524	1	Bracket - Pivot				
26	105503	1	Bushing				
27	3296-29	1	Nut-Lock Ni				

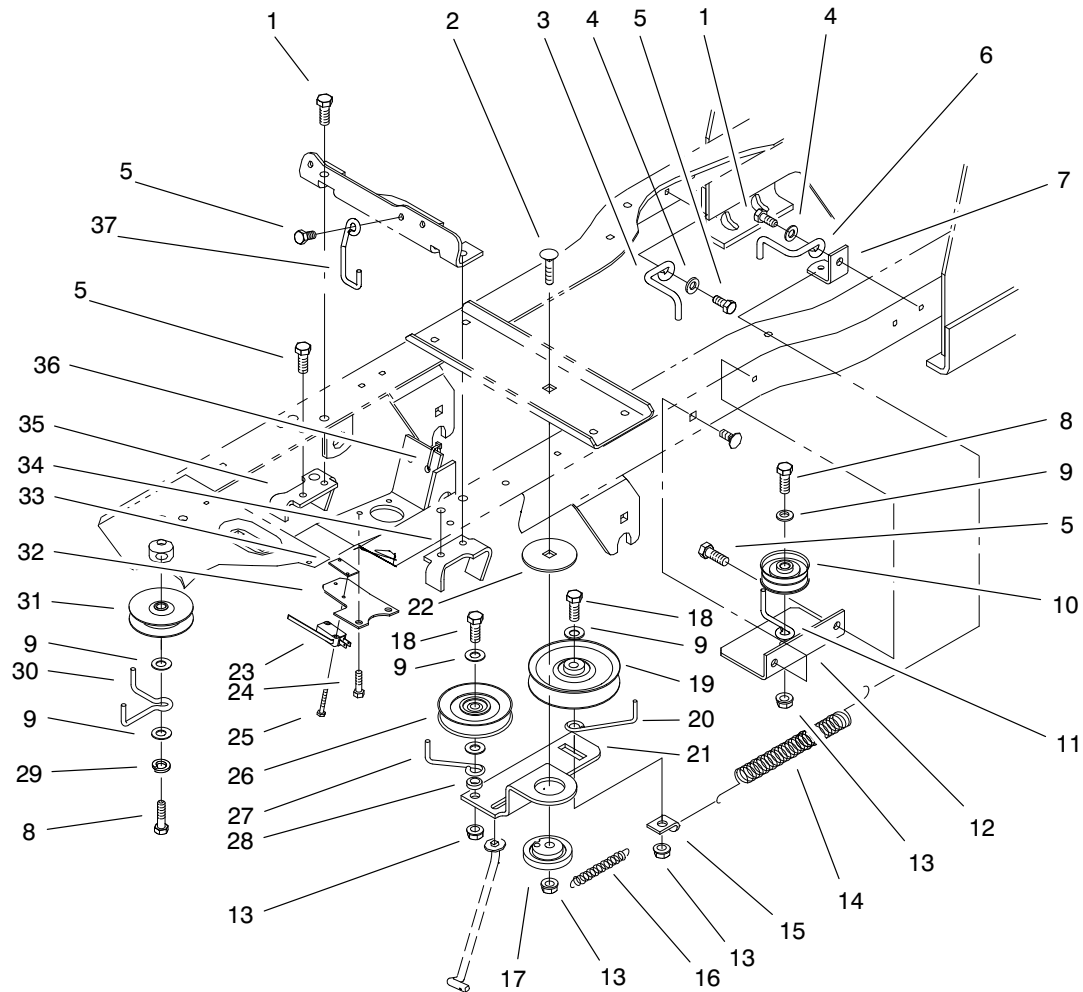


Sheet No.:21

Gear Drive Components Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-70	3	Screw-Taptite
2	3231-25	1	Screw-CARR
3	92-7001	1	Guide - Belt RH
4	3256-23	2	Washer-Flat
5	32144-14	5	Screw-HWH
6	92-7002	1	Guide-Belt LH
7	92-6891-03	1	Brkt-Idler Spring Plt
8	323-9	2	Screw-HH
9	3256-24	6	Washer-Flat
10	607978	1	Pulley Idler Nhi
11	93-0549	1	Guide-Belt
12	92-6894-03	1	Bracket-Rear Idler
13	3296-39	4	Nut-Lock Ni
14	79-7530	1	Spring - Clutch
15	2534	1	Clip - Spring
16	107788	1	Spring-Extension
17	111418	1	Bushing
18	323-10	2	Screw-HH
19	92-7101	1	Pulley - Flat Idler
20	79-0390	1	Guide-Belt
21	78-6771	1	Arm-Idler
22	111419	1	Bearing-Washer
23	88-9932	1	Switch-Micro
24	32144-4	2	Screw-HH
25	147665	2	Screw-HH
26	92-7102	1	Pulley - Idler

Ref. No.	Part No.	Qty.	Description
27	79-0400	1	Guide-Belt
28	93-3658	1	Spacer
29	3253-5	1	Washer-Lock/Sp
30	93-0547	1	Guide-Belt
31	93-0320	1	Pulley - Idler
32	93-0526-03	1	Brkt-Microswitch Gear
33	3290-354	1	Nut-Speed
34	92-6670	1	Clutch Pedal Stop
35	92-6671	1	Brake Bracket Plated
36	614249	1	Strap-Tie Sm
37	93-0548	1	Guide-Belt

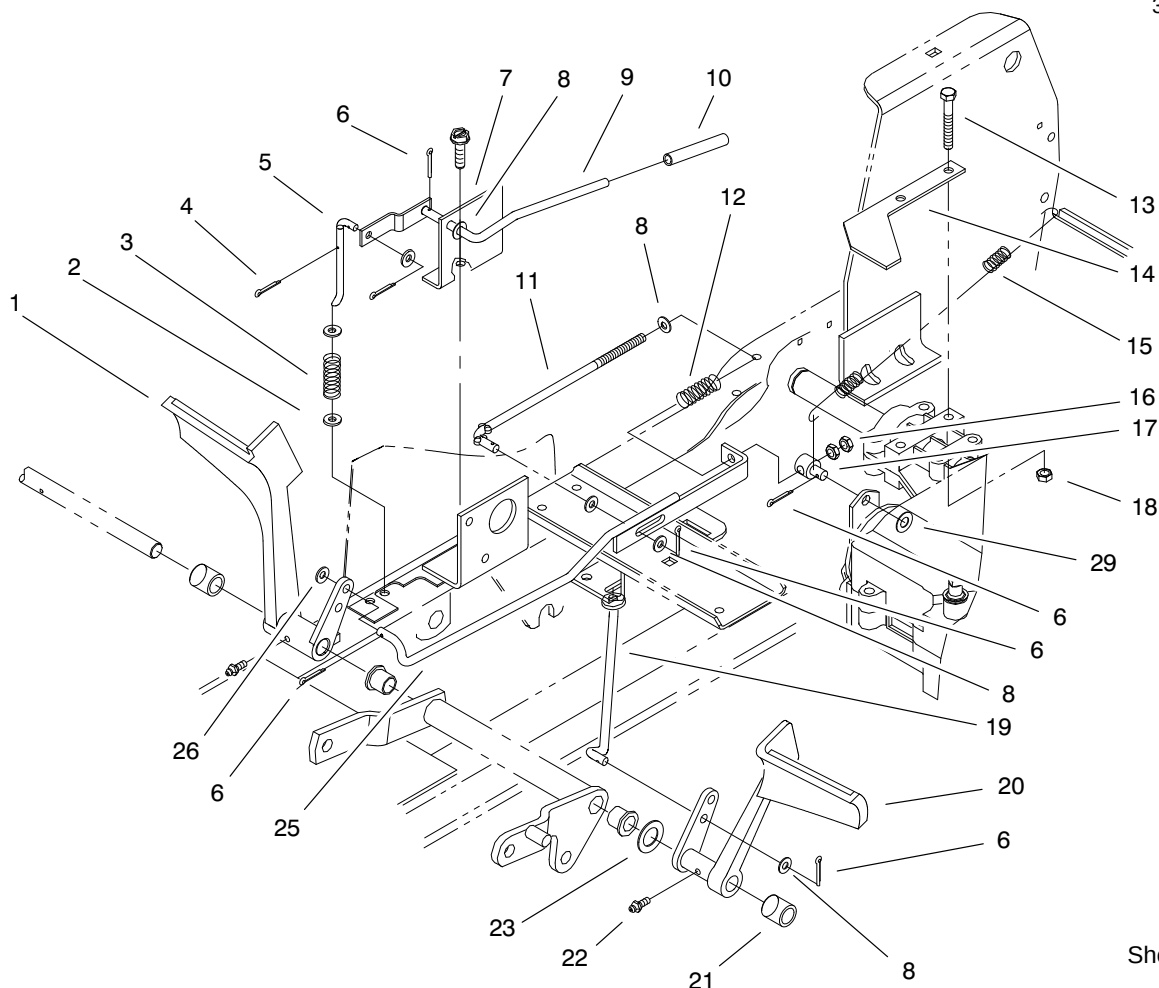


Sheet No.:22

Clutch & Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3228-03	1	Pedal – Brake
2	3256-22	3	Washer-Flat
3	92-7116	1	Spring – Compression
4	3272-2	2	Pin-Cotter
5	92-7019	1	Rod – Parking Brake
6	3272-6	5	Pin-Cotter
7	92-6929-03	1	Brkt-Parking Brake
8	3256-23	5	Washer-Flat
9	92-6931-03	1	Lever-Park Brake
10	92-7009	1	Grip – Parking Brake
11	94-1729	1	Rod – Spring
12	94-1734	1	Spring – Compression
13	322-11	2	Screw-HH
14	94-1723-03	1	Stop – Brake
15	94-1733	1	Spring – Extension
16	3218-2	2	Nut-Jam
17	94-2688	1	Trunion
18	3296-29	2	Nut-Lock Ni
19	92-6924	1	Clutch Rod Wa
20	78-8180-03	1	Pedal-Clutch
21	94-1862	2	Spacer
22	302-5	2	Fitting-Lube
23	111712	1	Washer-Wave
25	95-3039-03	1	Arm-Brake
26	3256-3	1	Washer-Flat
29	3256-24	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description

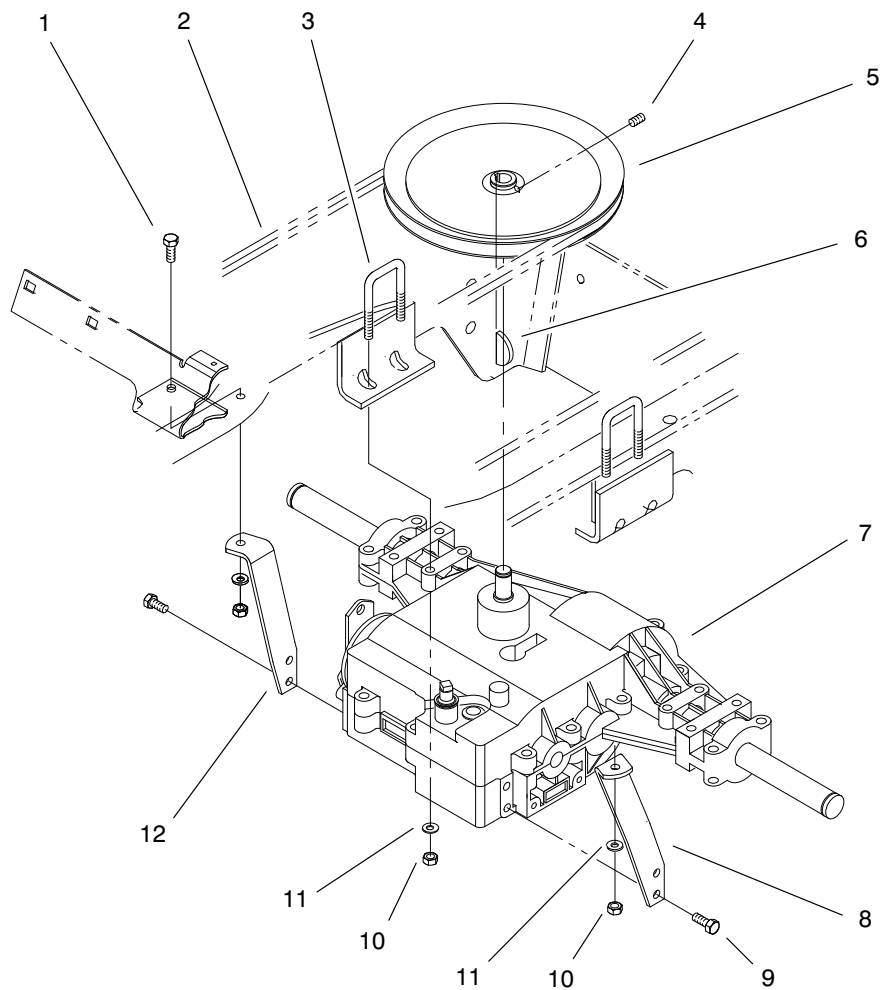


Sheet No.:23

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	92-6955	1	Belt - V Gear
3	92-6769	2	U-Bolt
4	909543	2	Screw-Sq Hd Set
5	92-6887	1	Pulley-Trans (Gear)
6	937225	1	Key-Hi-Pro
7	92-6761	1	Transaxle 820-024
8	92-6889-03	1	Strap - LH Torque
9	32144-70	4	Screw-Taprite
10	3296-29	6	Nut-Lock Ni
11	3256-23	6	Washer-Flat
12	92-6890-03	1	Strap - RH Torque

Ref. No.	Part No.	Qty.	Description

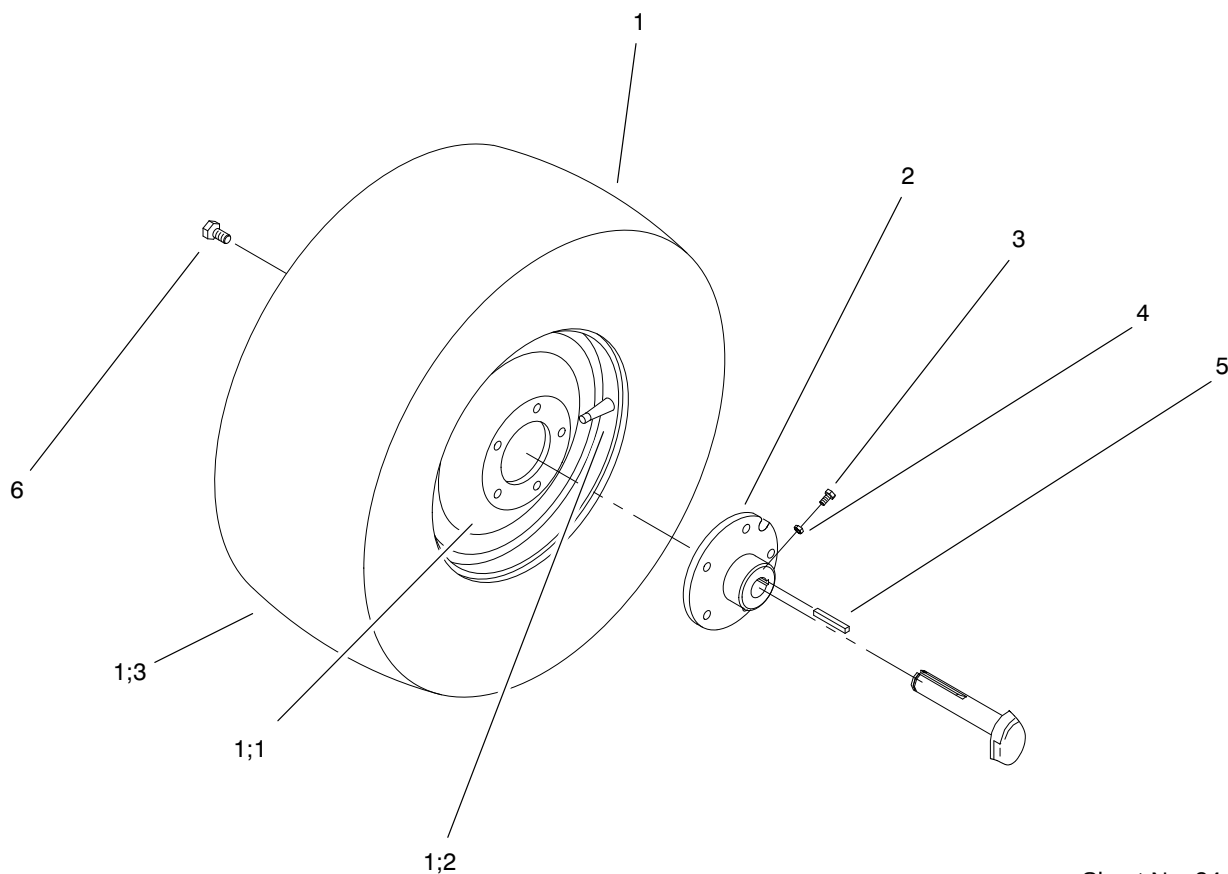


Sheet No.:24

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1		2	Wheel&tire ASM,Rear
1:1	99-2334	1	Tire
1:2	78-1221	1	Wheel
1:2:1	5108	1	Valve-Tubeless Tire
1:99	7007	1	Tube-Inner
2	93-3659-03	2	Hub-Wheel
3	3243-5	4	Screw-Set
4	3218-3	4	Nut-Jam
5	5-1336	2	Key
6	83-2720	10	Lug-bolt

Ref. No.	Part No.	Qty.	Description


Peerless Transaxle 820-024

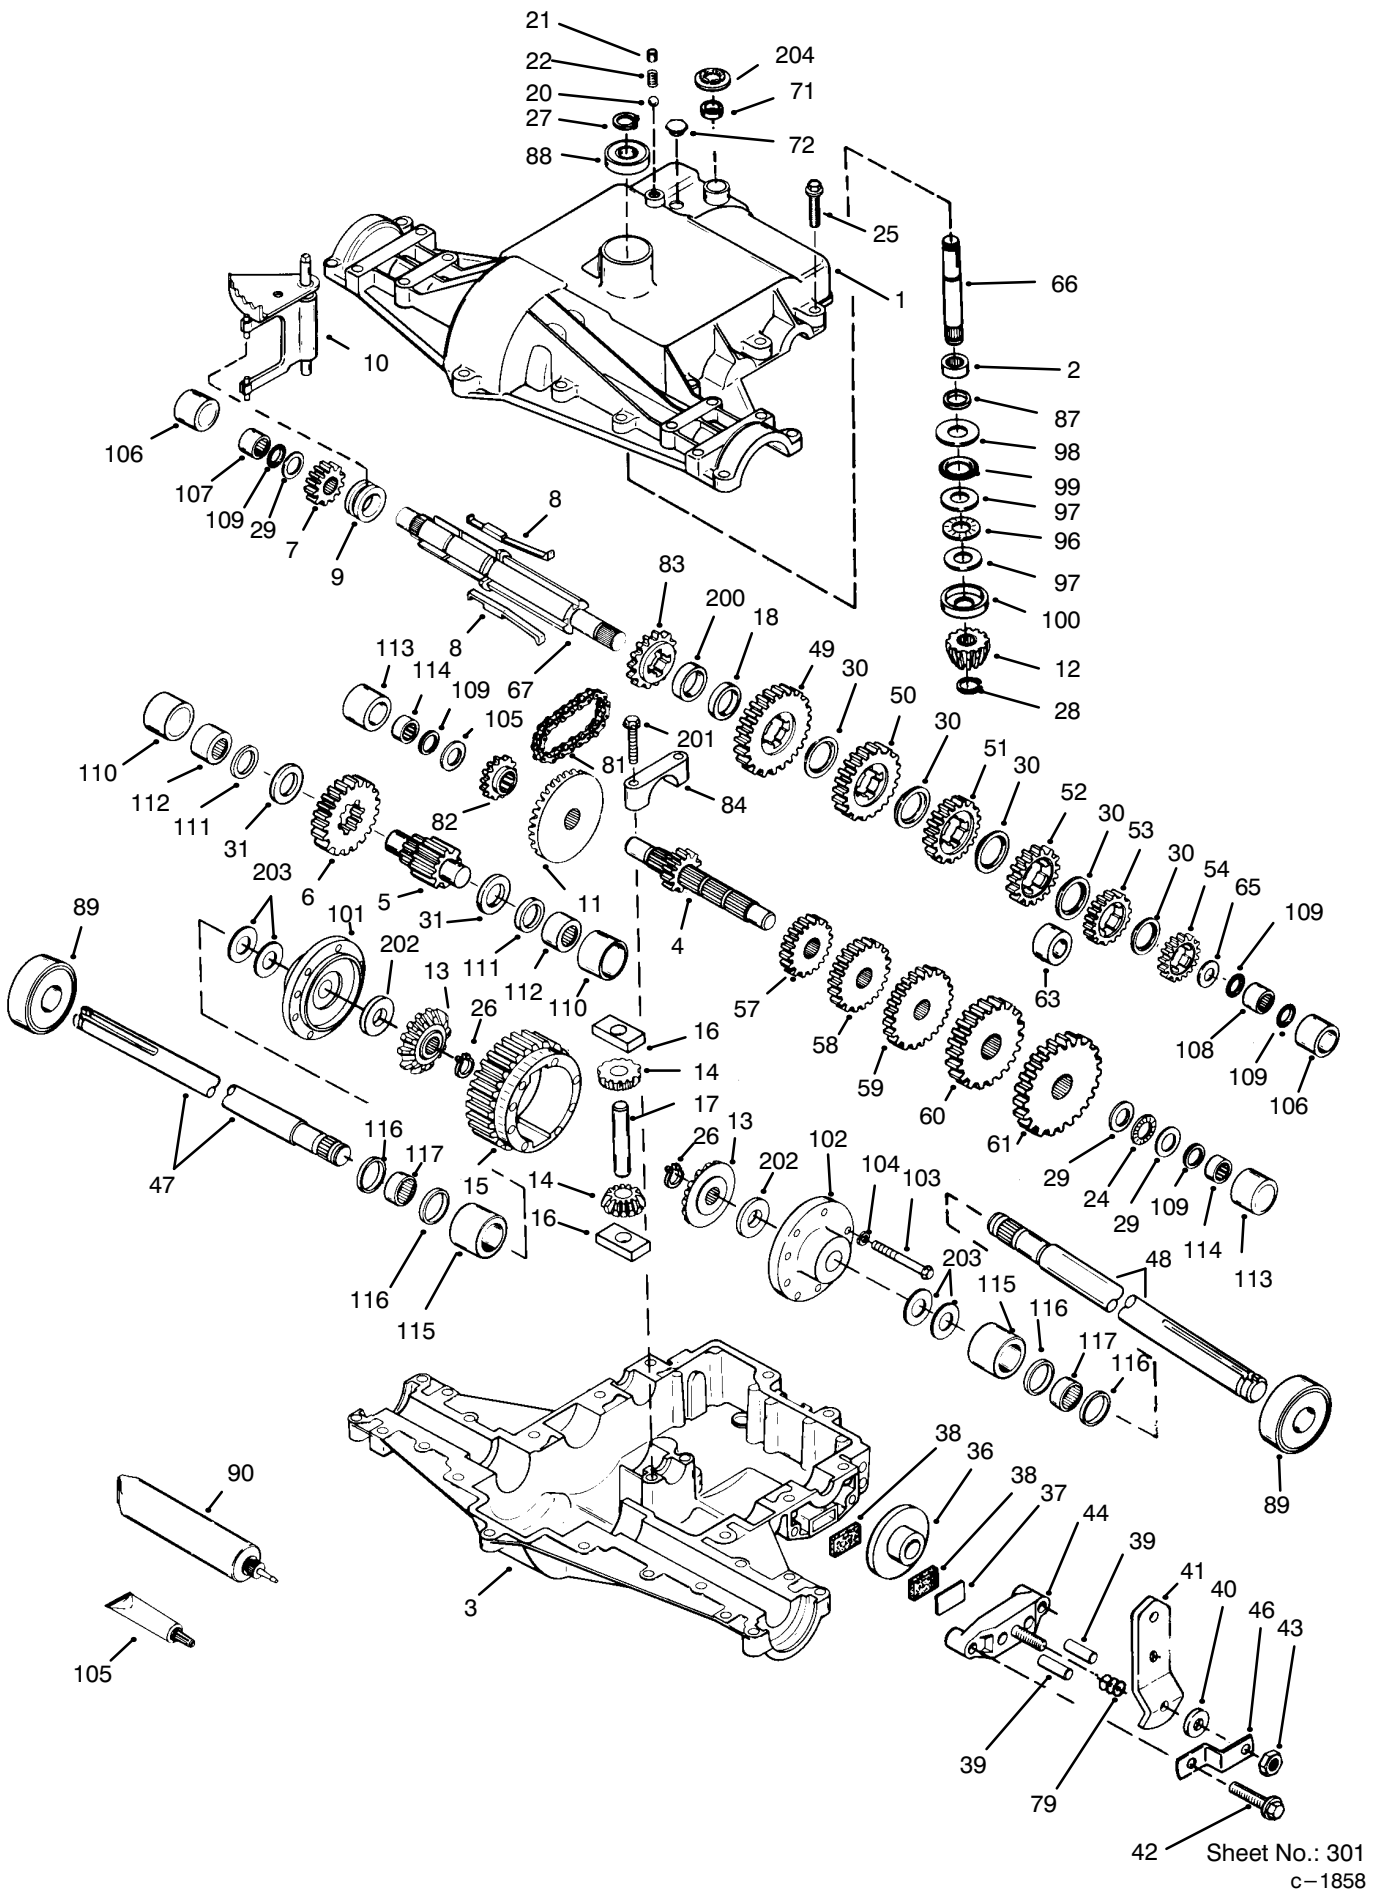

Peerless Transaxle 820-024


Ref. No.	Part No.	Qty.	Description
1	772098a	1	Cover-Transaxle
2	780155	1	Bearing-Needle
3	770088	1	Case-Transaxle
4	776291	1	Countershaft-Gear 9t
5	776275	1	Shaft-Output
6	778247	1	Gear-Output 35t
7	778253	1	Gear-Spur 15t
8	792138	4	Key-Shift
9	784216	1	Collar-Shift
10	784342	1	Fork-Shift
11	778246	1	Gear-Bevel 33t
12	778245	1	Pinion-Input Bevel 13t
13	778198	2	Gear-Bevel 16t
14	778197	2	Pinion-Bevel 10t
15	778248	1	Gear-Ring
16	786027	2	Block-Drive
17	786019	1	Pin-Drive
18	786121	1	Spacer .350-.340 Thick
20	792077	1	Ball-Steel
21	792078	1	Screw-Set 3/8-16x3/8
22	792079	1	Spring
24	780071	1	Bearing-Thrust
25	792129	17	Screw 5/16-18x1 1/4
26	792018	2	Ring-Retaining
27	792018	1	Ring-Retaining
28	788040	1	Ring-Retaining
29	780072	3	Washer)
30	780108	5	Washer
31	780128	2	Washer)
36	790043	1	Disk-Brake
37	790007	1	Plate-Brake Pad
38	799021	1	Pad-Brake 2/Pkg)
39	786026	2	Pin-Dowel
40	792076a	1	Washer
41	790013	1	Lever-Brake
42	792073	2	Screw 1/4-20x1 1/4
43	792075	1	Nut-Lock 5/16x24
44	790025	1	Holder-Brake Pad
46	786086	1	Bracket-Brake Lever
47	774958	1	Axle 12 9/16" Long
48	774959	1	Axle 16 7/16" Long
49	778216a	1	Gear-Spur 41t
50	778206a	1	Gear-Spur 35t
51	778205a	1	Gear-Spur 30t
52	778204a	1	Gear Spur 25t
53	778203a	1	Gear Spur 22t
54	778273	1	Gear Spur 19t
57	778199	1	Gear Spur 15t
58	778200	1	Gear Spur 20t
59	778201	1	Gear Spur 25t
60	778202	1	Gear Spur 28t
61	778222	1	Gear Spur 30t
65	780109	1	Washer
66	776293	1	Shaft-Input 30.910" Lg
67	776313	1	Shaft-Shifter/Brake
71	788069	1	Ring-Square Cut
72	792074	1	Plug-Threaded 9/16-18
79	792144	1	Spring
81	786062a	1	Chain-Roller #41 22" Lg
82	786061	1	Sprocket 10t

Peerless Transaxle 820-024

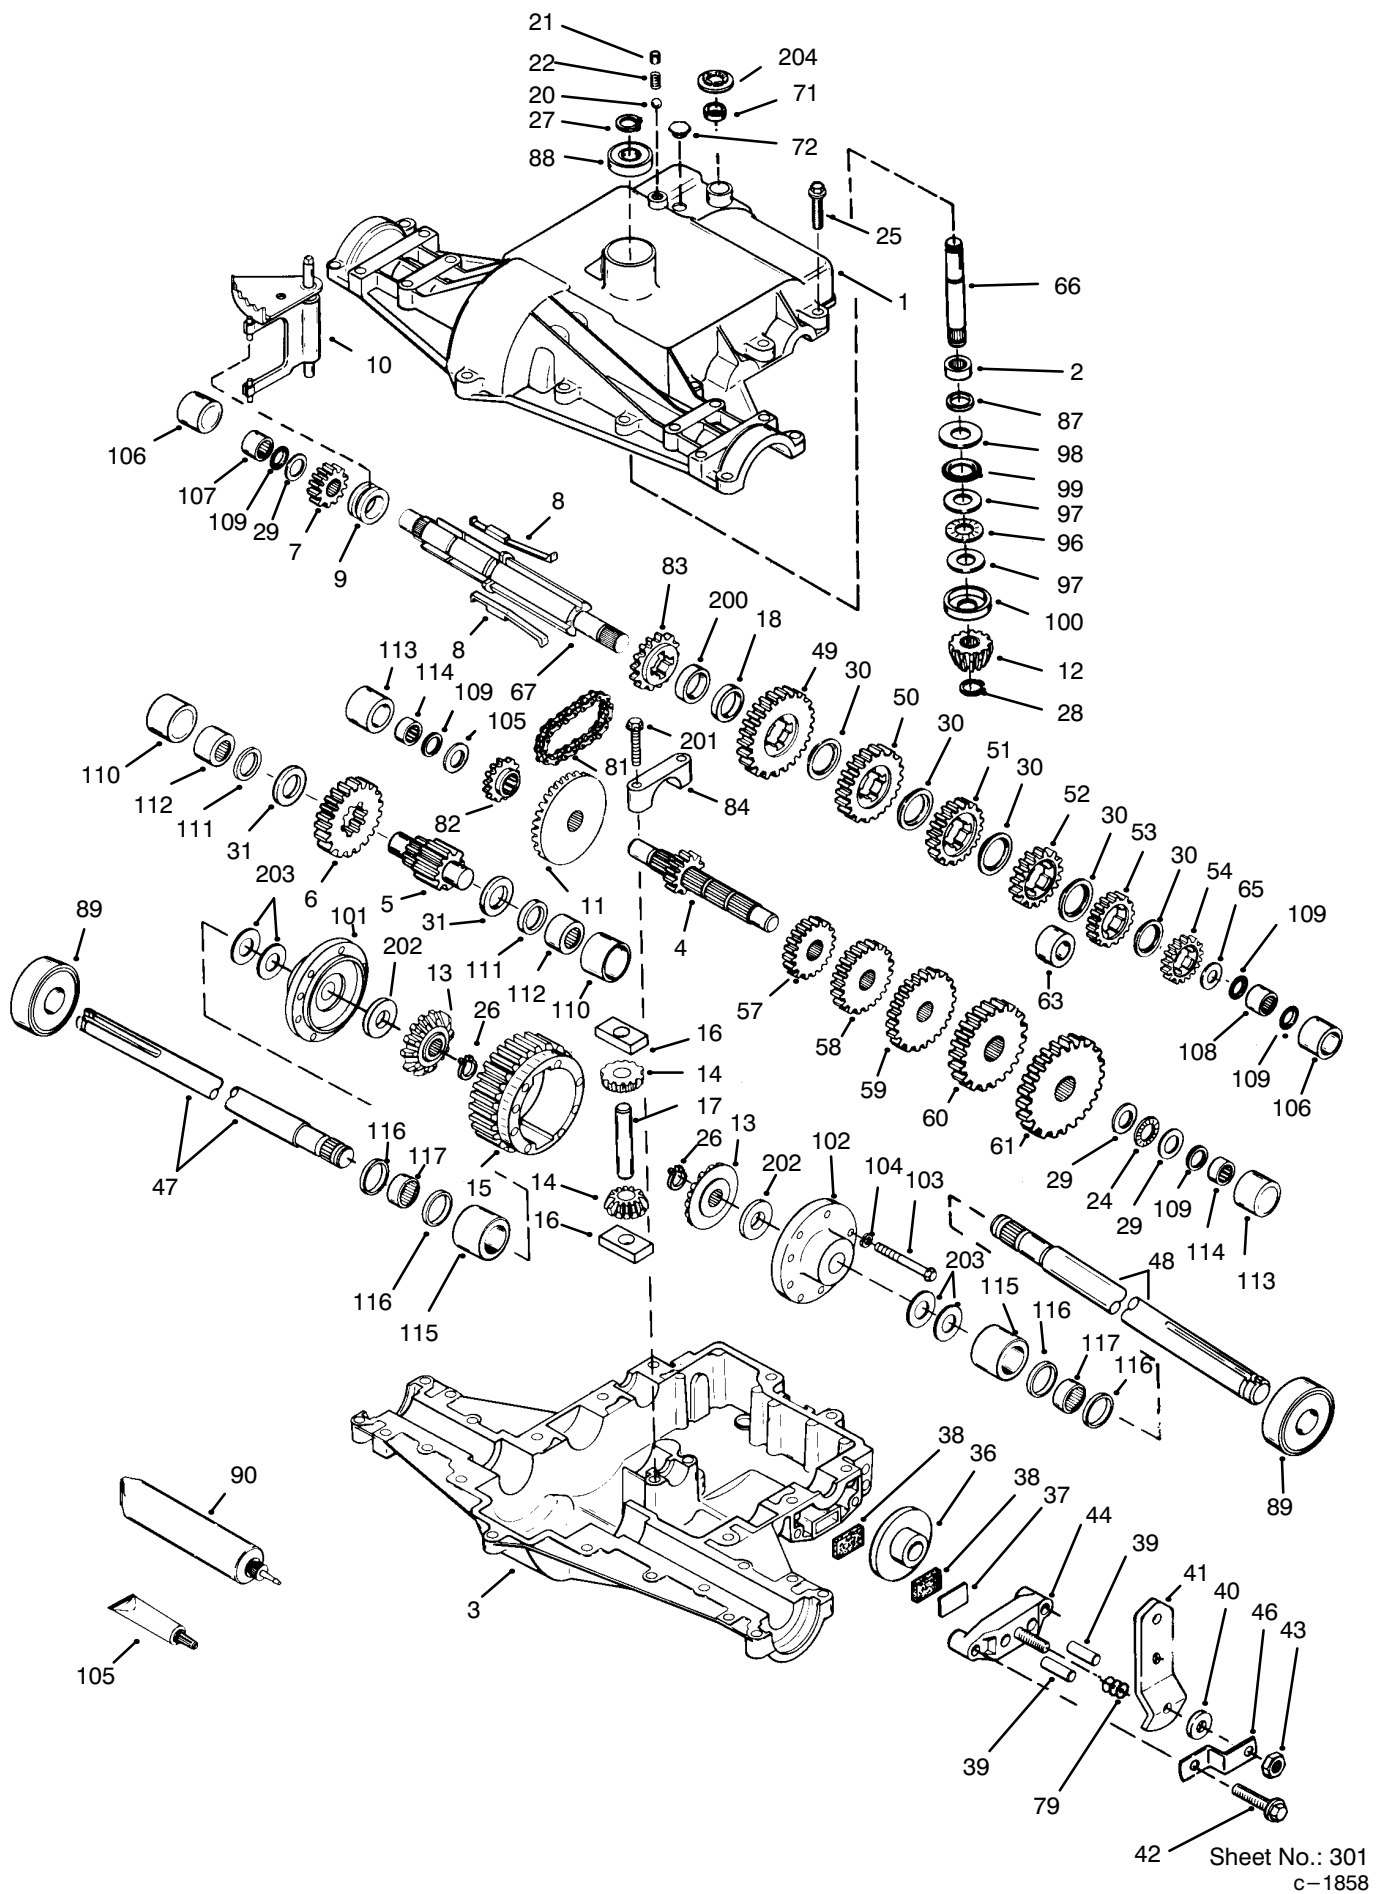

Peerless Transaxle 820-024

Ref. No.	Part No.	Qty.	Description
83	786124	1	Sprocket-Reverse 14t
84	786131	1	Cap-Bearing
87	788042	1	Seal-Oil 3/4"
88	780119	1	Bearing-Ball
89	780050	2	Bearing-Ball
90	788067b	1	Grease 32 Oz Bentonite
96	780084	1	Bearing-Thrust
97	780051	2	Washer
98	780165	1	Washer
99	788077	1	O Ring
100	780166	1	Washer-Cupped
101	774833	1	Carrier-Differential
102	774834	1	Carrier-Differential
103	792020	8	Screw 14-20x2 1/4
104	792006	8	Washer-Lock
105	780153	1	Washer
106	786144	1	Sleeve
107	780152	1	Bearing-Needle
108	780150	1	Bearing-Needle
109	792001	5	O Ring
110	786142	2	Sleeve
111	788071	2	Ring-Square Cut
112	780168	2	Bearing-Needle
113	786143	2	Sleeve
114	780151	2	Bearing-Needle
115	786145	2	Sleeve
116	788070	4	Ring-Square Cut
117	780031	2	Bearing-Needle
150	510334	1	Gasket Loctite #515
200	786122	1	Spacer .276-.268 Thick
201	792073	2	Screw 1/4-20x1 1/4
202	780107	2	Washer
203	780042	4	Washer
204	792145	1	Nut-Push

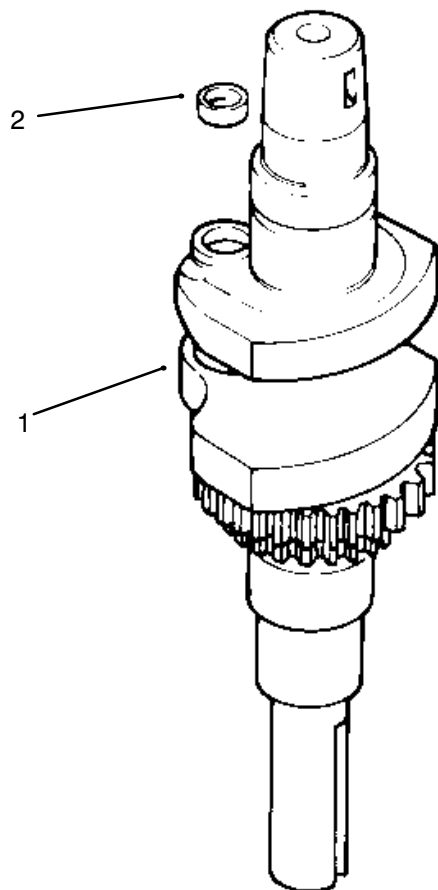


Sheet No.: 101
C-1948

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	12 014 37	1	Crankshaft
2	12 139 01	1	Plug-Cup

Ref. No.	Part No.	Qty.	Description

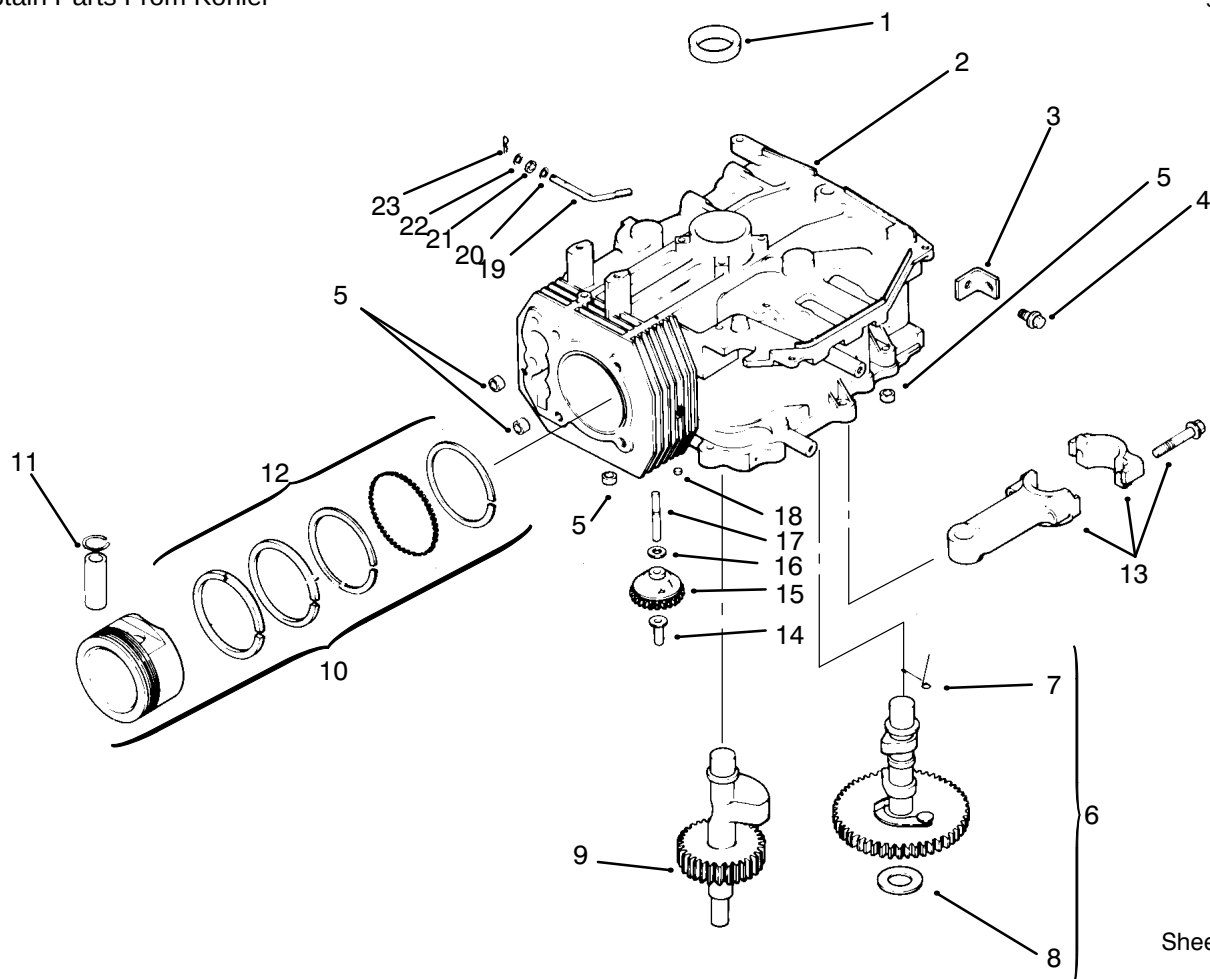

Sheet No.: 102
C-1949


Crankcase

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal-Crankshaft	13	12 067 05	1	Rod Connecting STD
2	12 522 18	1	Block-Short	13	12 067 06	1	Rod Connecting .25
3	12 445 02	1	Strap-Lifting	14	12 380 01	1	Pin-Governor
4	M-0839025	1	Screw M8x1.25x22				Regulating
5	12 380 03	4	Dowel-Locating	15	12 043 05	1	Gear-Governor ASM
6	12 755 49	1	Kit-Camshaft INC 7-8	16	M-0631005	1	Washer-Governor
†7	12 089 18	1	Spring-Actuating	17	12 144 02	1	Shaft-Governor Gear
†8	12 422 07	1	Shim-Camshaft A/R	18	52 139 09	1	Plug-Cup
†8	12 422 08	1	Shim-Camshaft A/R	19	12 755 64	1	Shaft-Governor Cross
†8	12 422 09	1	Shim-Camshaft A/R	20	M-0631015	1	Washer-Governor
†8	12 422 10	1	Shim-Camshaft A/R				Shaft
†8	12 422 11	1	Shim-Camshaft A/R	21	12 032 01	1	Seal-Governor Shaft
†8	12 422 12	1	Shim-Camshaft A/R	22	X-25-102	1	Washer-Flat
†8	12 422 13	1	Shim-Camshaft A/R	23	12 154 05	1	Pin-Governor Hitch
9	12 144 27	1	Shaft-Balance	*	12 722 59	1	Gasket Set
10	12 874 07	1	Piston ASM STD Incl 11-2				
10	12 874 08	1	Piston ASM .25 Incl 11-2				
10	12 874 09	1	Piston ASM .50 Incl 11-2				
†11	12 018 02	2	Retainer-Piston Pin				
12	12 018 07	1	Ring Set STD				
12	12 018 08	1	Ring Set .25				
12	12 018 09	1	Ring Set .50				

† Included in a service kit or in an assembly

* Not illustrated

3321-864

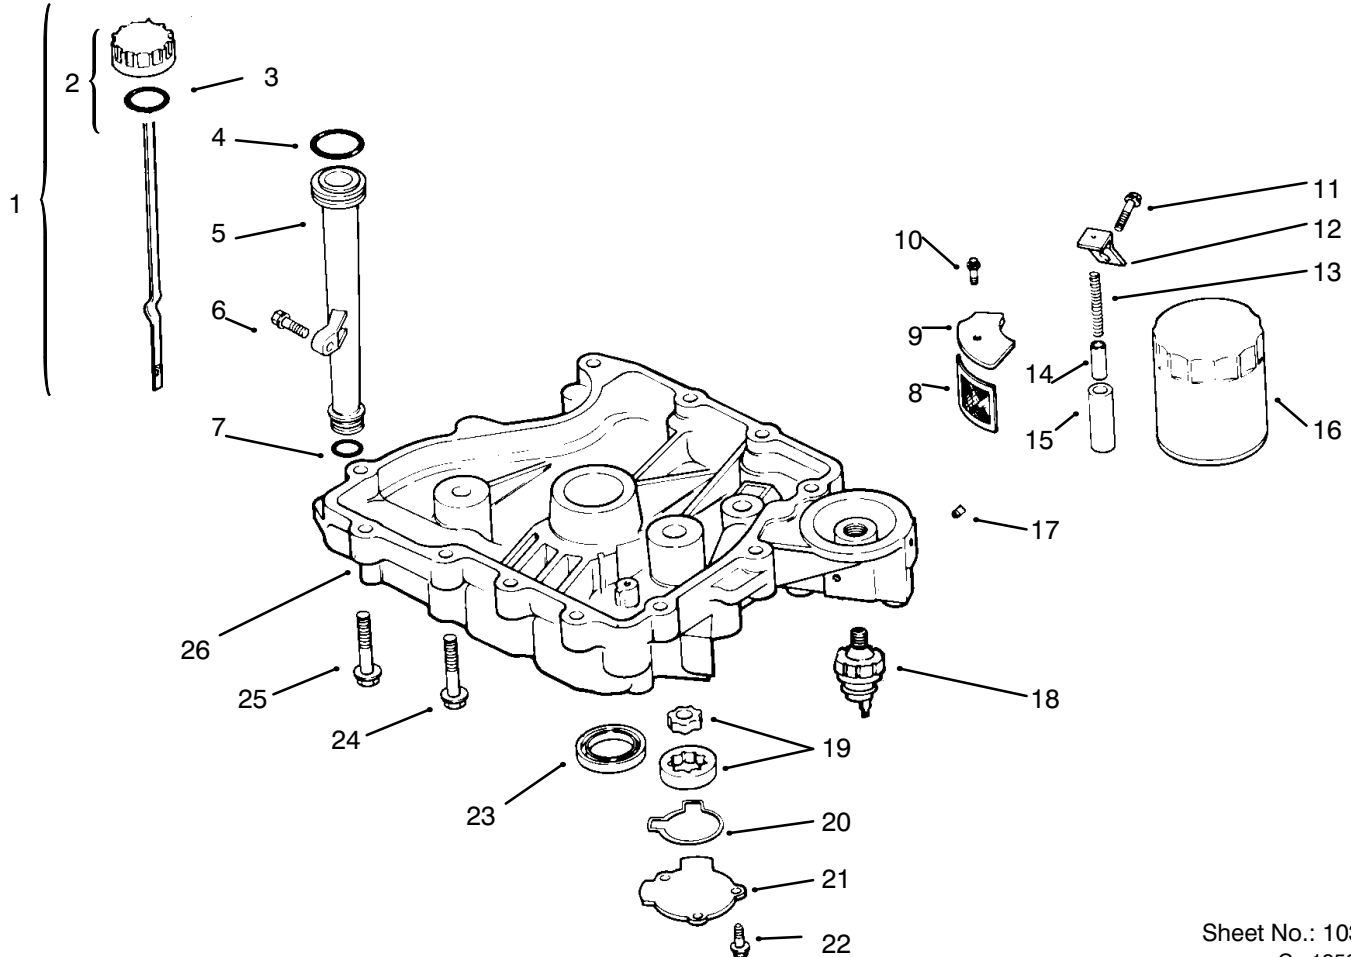

Sheet No.: 103
C-1950


Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2-3
†2	25 755 13	1	Kit-Oil Cap INC 3
†3	12 153 03	1	O Ring-Fill Cap
4	12 153 02	1	O Ring-Upper Fill Tube
5	12 123 04	1	Tube-Oil Fill
6	M-0545020	1	Screw M5x0.8x20
7	12 153 01	1	O Ring-Lower Fill Tube
8	12 162 07	1	Screen-Oil Pickup
9	12 096 03	1	Cover-Oil Pickup Screen
10	M-0545016	1	Screw M5x0.8x16
11	M-1039025	1	Screw M10x1.5x25
12	12 126 02	1	Bracket-Oil Pump Relief
13	12 089 03	1	Spring-Oil Relief Valve
14	12 462 01	1	Piston-Oil Relief Valve
15	12 208 01	1	Body-Oil Relief Valve
16	12 050 01	1	Filter-Oil
17	X-75-10	2	Plug-SH 3/8 NPTF
18	52 099 06	1	Switch-Oil Pressure
19	12 393 01	1	Pump-Oil
20	12 032 04	1	O Ring-Oil Pump Cover
21	12 096 02	1	Cover-Oil Pump

Ref. No.	Part No.	Qty.	Description
22	M-0545016	3	Screw M5x0.8x16
23	12 032 03	1	Seal-Crankshaft
24	24 086 16	11	Screw M8x1.25x45
25	24 086 17	11	Screw M8x1.25x45
26	12 199 21	1	Pan-Oil
*	52 518 21	1	Lead-Oil Switch w/Tabs

† Included in a service kit or in an assembly

* Not illustrated

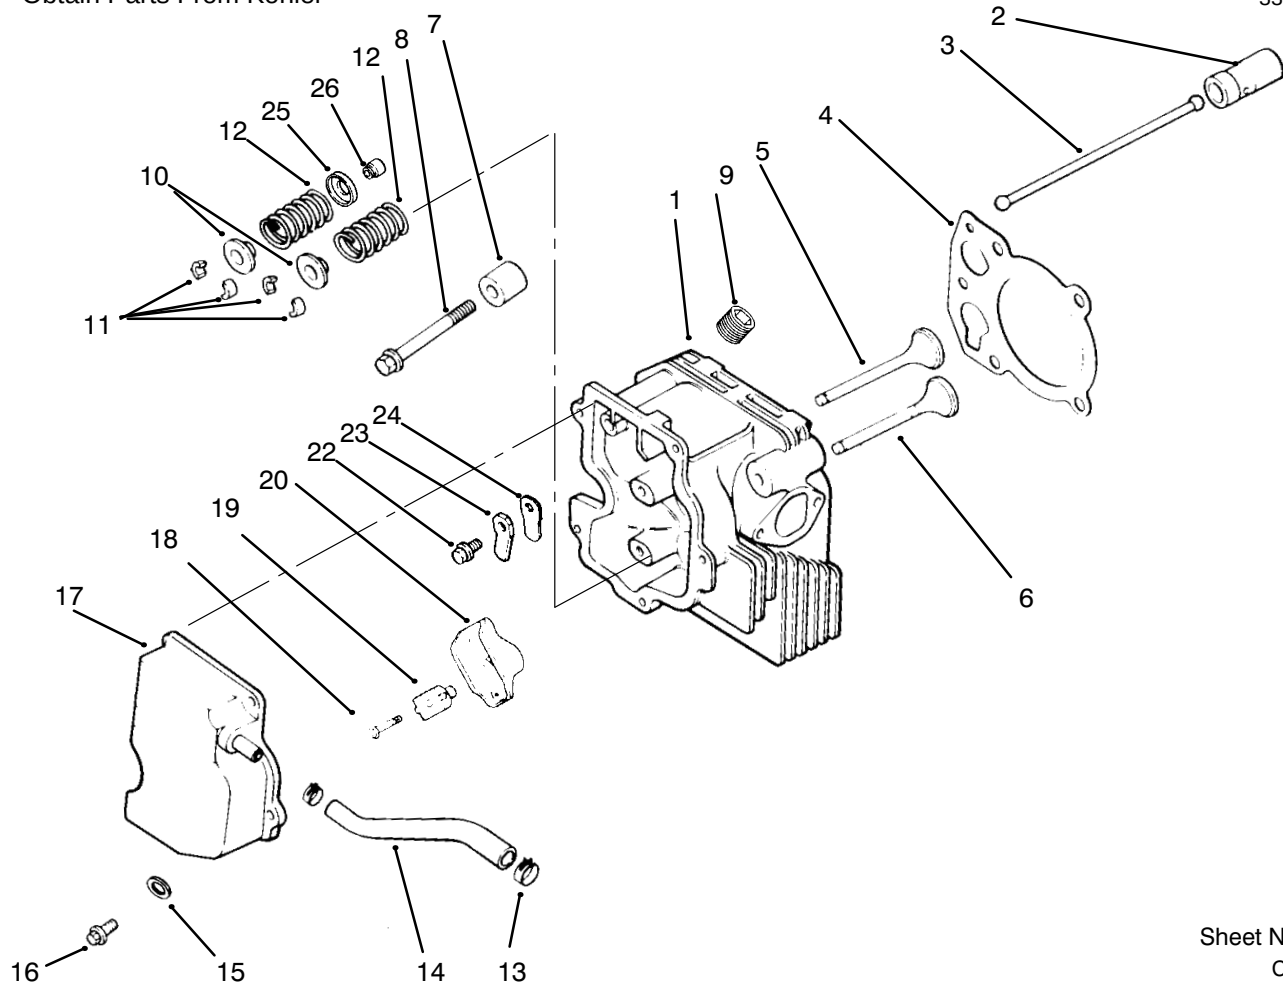


Sheet No.: 104

C-1951

Cylinder Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 318 15	1	Cylinder Head	24	24 402 02	1	Reed-Breather
2	12 351 02	1	Lifter-Valve	25	235011	2	Retainer-Spring
3	12 411 01	2	Rod-Push	26	24 032 05	2	Seal-Valve Stem
4	12 041 10	1	Gasket-Cylinder Head	*	12 755 63	1	Kit-Cylinder Head (Incl. 3-12,17-20 25 & 26)
5	12 017 01	1	Valve-Intake STD				
5	12 017 02	1	Valve-Intake .25				
6	12 016 01	1	Valve-Exhaust STD				
6	12 016 02	1	Valve-Exhaust .25				
7	12 112 13	1	Spacer-Head Bolt Exhaust				
8	12 086 15	5	Screw M10x1.5x80				
9	X-75-23	1	Plug				
10	12 173 01	2	Cap-Valve Spring				
11	12 755 03	2	Kit-Retainer				
12	12 089 01	2	Spring-Valve				
13	X-426-9	2	Clamp-Hose				
14	12 326 03	1	Hose-Breather				
15	12 468 05	1	Washer-Flat				
16	M-0645020	5	Screw-HH M6x1.0x20				
17	12 096 07	1	Cover-Valve w/Nipple				
18	M-0640034	2	Screw M6x1.0x34				
19	12 599 03	2	Pivot-Rocker Arm				
20	25 186 01	2	Arm-Rocker				
22	M-0545010	1	Screw M5x0.8x10				
23	12 018 01	1	Retainer-Breather Reed				

* Not illustrated

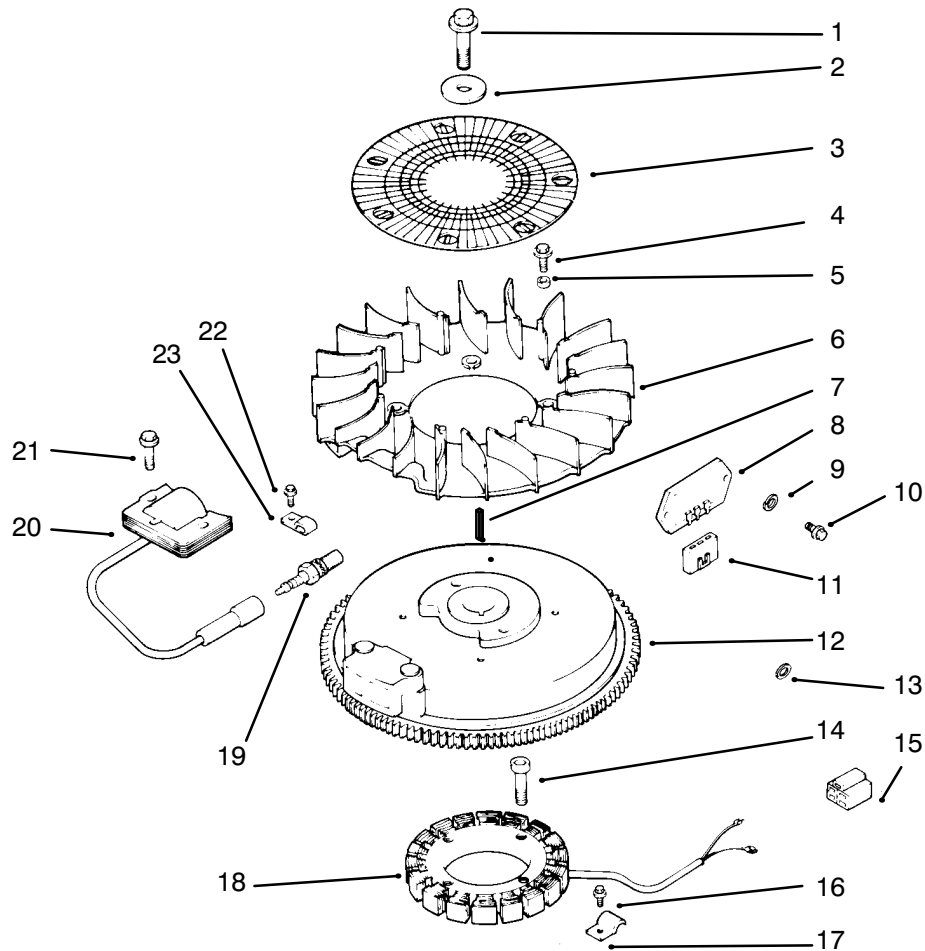
Sheet No.: 105
C-1952

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw-Flywheel Mounting
2	12 468 03	1	Washer-Flywheel Screw
3	24 162 03	1	Screen-Grass
4	M-0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer-Fan
6	12 157 02	1	Fan
7	X-42-15	1	Key
8	41 403 09	1	Rectifier-Regulator
9	X-22-11	1	Washer-Lock
10	M-0639016	2	Screw M6x1.0x16
11	236602	1	Connector-Regulator
12	12 025 15	1	Flywheel ASM
13	X-25-5	1	Washer-Flat
14	M-0548025	4	Screw M5x0.8x25
15	48 155 01	1	Connector-5 Contact
16	M-0545010	1	Screw M5x0.8x10
17	12 154 02	1	Clip-Stator Harness
18	24 085 01	1	Stator-15 Amp
19	12 132 02	1	Spark Plug
20	12 584 01	1	Module-Ignition
21	M-0545020	2	Screw M5x0.8x20
22	M-0545010	1	Screw M5x0.8x10
23	X-728-1	1	Clip-Kill Lead
*	12 518 01	1	Lead-White

Ref. No.	Part No.	Qty.	Description
*	25 518 05	1	Lead-Black
*	25 518 29	1	Lead-Black

* Not illustrated

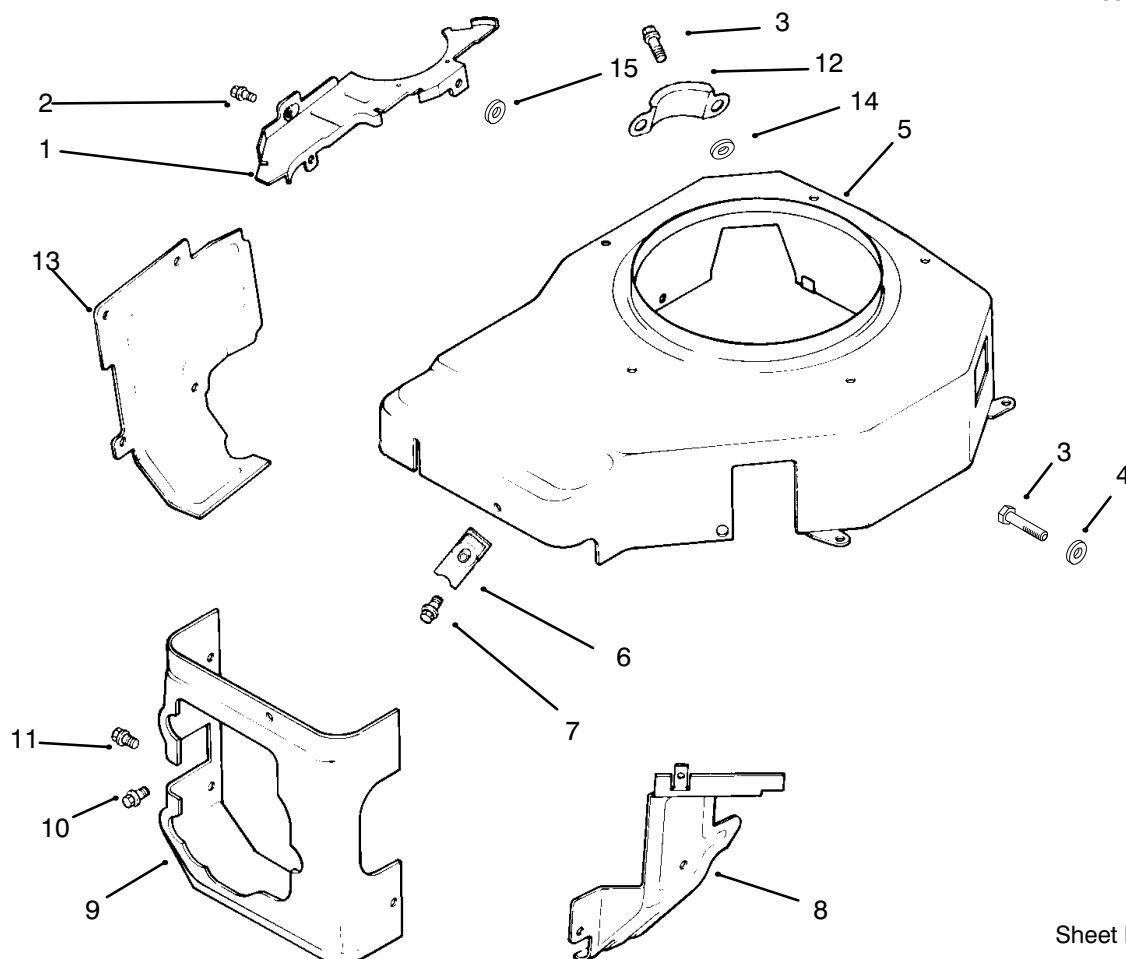


Sheet No.: 106
C-1953

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	12 146 07	1	Plate—Blower Housing
2	M—0545010	8	Screw M5x0.8x10
3	24 086 18	2	Screw—Phillips
4	X—25—92	2	Washer—Flat
5	12 027 32	1	Housing—Blower
6	25 154 02	3	Clip
7	M—0545020	3	Screw M5x0.8x20
8	12 063 05	1	Baffle—Carburetor
9	12 063 08	1	Baffle—Cylinder Head
10	M—0645016	2	Screw—HH M6x1.0x16
11	M—0645020	1	Screw—HH M6x1.0x20
12	24 096 05	1	Cover—Pinion
13	12 063 01	1	Baffle—Cylinder Barrel
14	220534	2	Washer Plain 5/16
15	24 468 10	1	Washer Plain 1/4

Ref. No.	Part No.	Qty.	Description

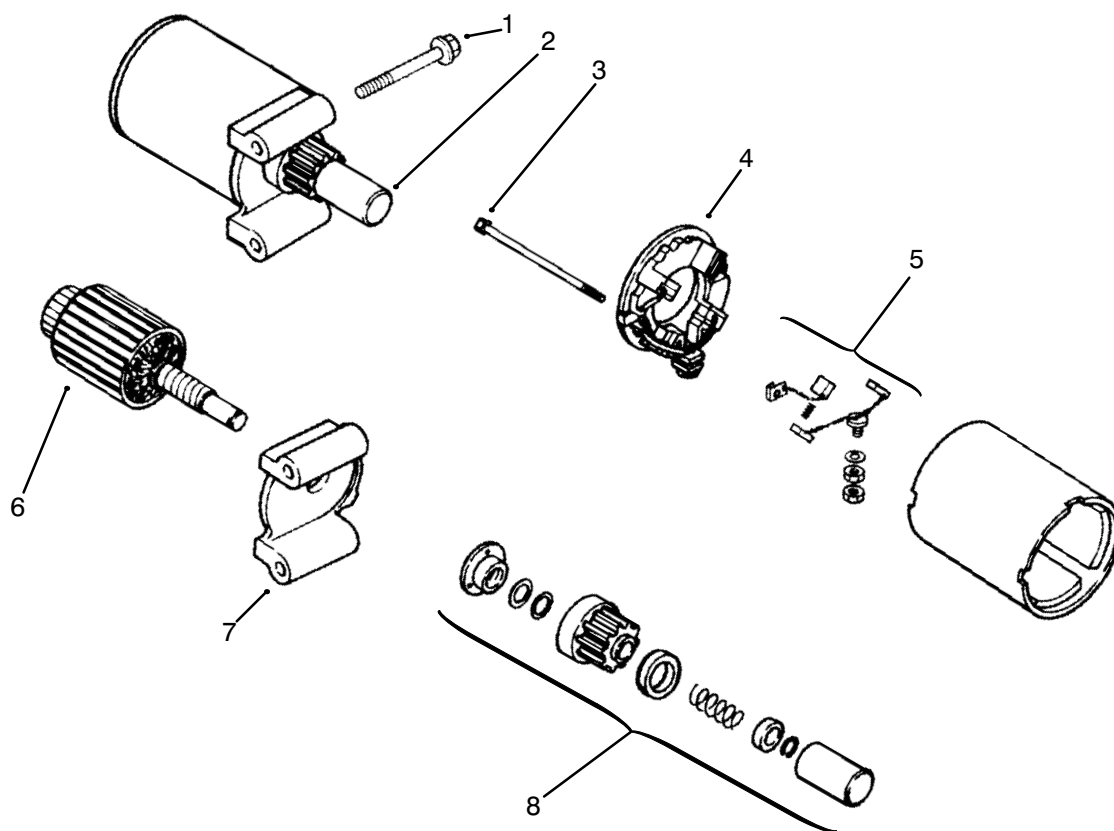

Sheet No.: 107
C-


Starting System

Ref. No.	Part No.	Qty.	Description
1	M0839070	2	Screw M8x1.25x70
2	12 098 13	1	Starter ASM Incl 3–8
†3	12 211 01	2	Bolt
†4	12 227 13	1	Cap–Commutator Incl 5
†5	12 221 01	1	Kit–Brush And Spring
†6	12 170 05	1	Armature–Starter
†7	12 227 05	1	Cap–Drive End
†8	12 755 53	1	Kit–Drive
*	52 357 01	1	Lubricant–Starter

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

* Not illustrated

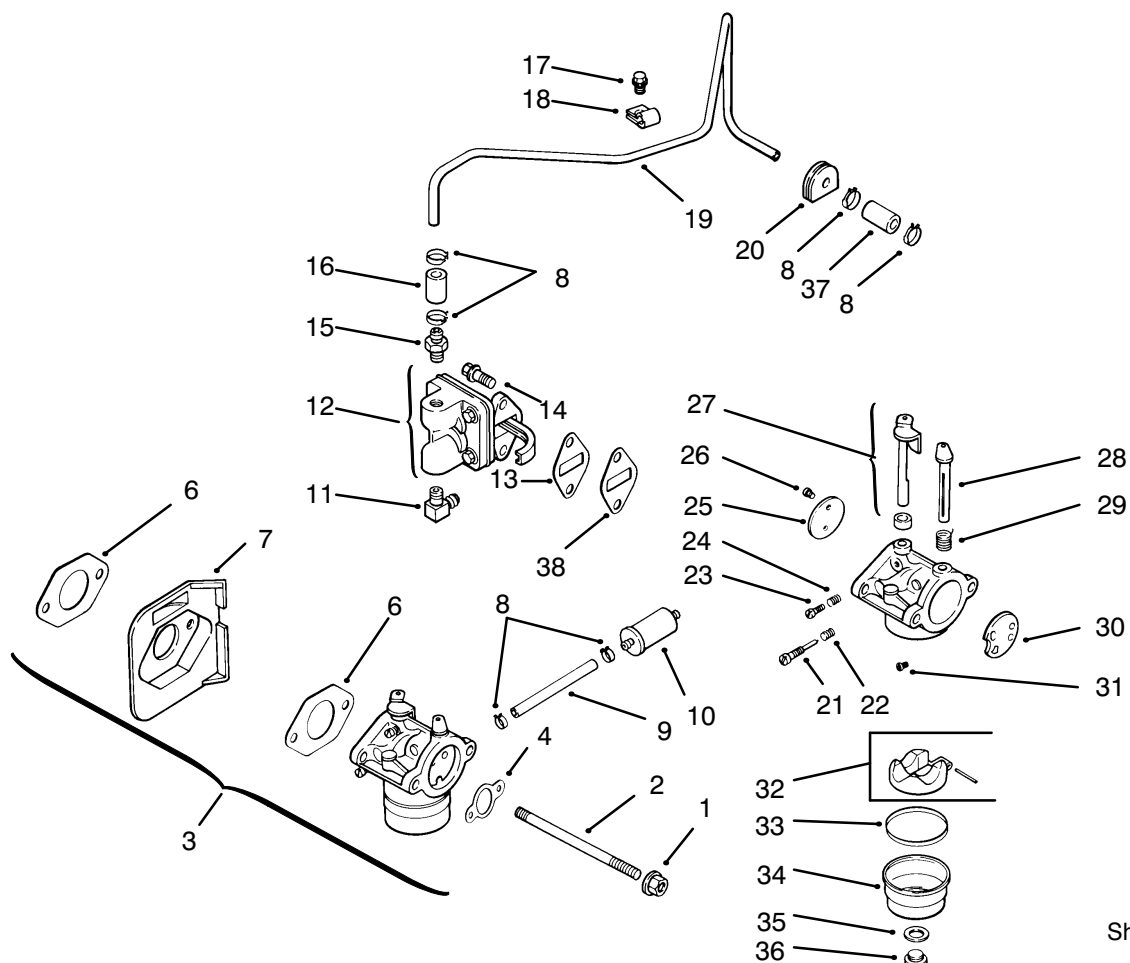

Sheet No.: 108
C-


Fuel System

Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut M6x1.0
2	M-0629122	2	Stud M6x1.0x110
3	12 853 57	1	Kit-Carburetor w/Gasket Incl 4-6
†4	12 041 02	1	Gasket-Air Cleaner
†5	12 053 57	1	Carurator ASM Incl 21-36
†6	12 041 01	2	Gasket-Carburetor
7	12 265 04	1	Deflector-Heat
8	X-426-9	1	Clamp-Hose
9	12 353 10	1	Line-Fuel
10	25 050 02	1	Filter-Fuel
11	25 155 02	1	Connector-90°
12	12 559 01	1	Kit-Pump INC 13-14
†13	25 041 09	1	Gasket-Fuel Pump
†14	M-0645020	2	Screw-HH M6x1.0x20
15	X-380-1	1	Connector-Straight
16	12 353 01	1	Line-Fuel 1.25 Inch
17	M-0545010	1	Screw M5x0.8x10
18	12 154 01	1	Clamp-Fuel Line
19	12 123 19	1	Line-Fuel
20	12 313 01	1	Grommet
†21	12 368 05	1	Needle-Idle Fuel Adjust
†22	12 089 09	1	Spring-Idle Fuel

Ref. No.	Part No.	Qty.	Description
†23	12 086 04	1	Screw-Idle Speed Adjust
†24	12 089 09	1	Spring-Idle Fuel
†25	12 146 03	1	Plate-Throttle
†26	25 086 27	1	Screw-Throttle Plate
†27	12 144 09	1	Shaft-w/Lever & Seal
†28	12 144 08	1	Shaft-Choke
†29	12 089 10	1	Spring-Choke Return
†30	12 146 02	1	Plate-Choke
†31	12 337 03	1	Jet-Main
†32	12 757 02	1	Kit-Float
†33	12 041 05	1	Gasket-Bowl
†34	12 104 01	1	Bowl-Fuel
†35	12 041 06	1	Gasket-Bowl Screw
†36	12 086 05	1	Screw-Fuel Bowl
37	25 353 02	1	Line-Fuel 3"
38	12 112 05	1	Spacer-Fuel Pump
*	12 041 01	1	Gasket-Carburetor
*	12 757 03	1	Kit-Carburetor Repair

† Included in a service kit or in an assembly

* Not illustrated

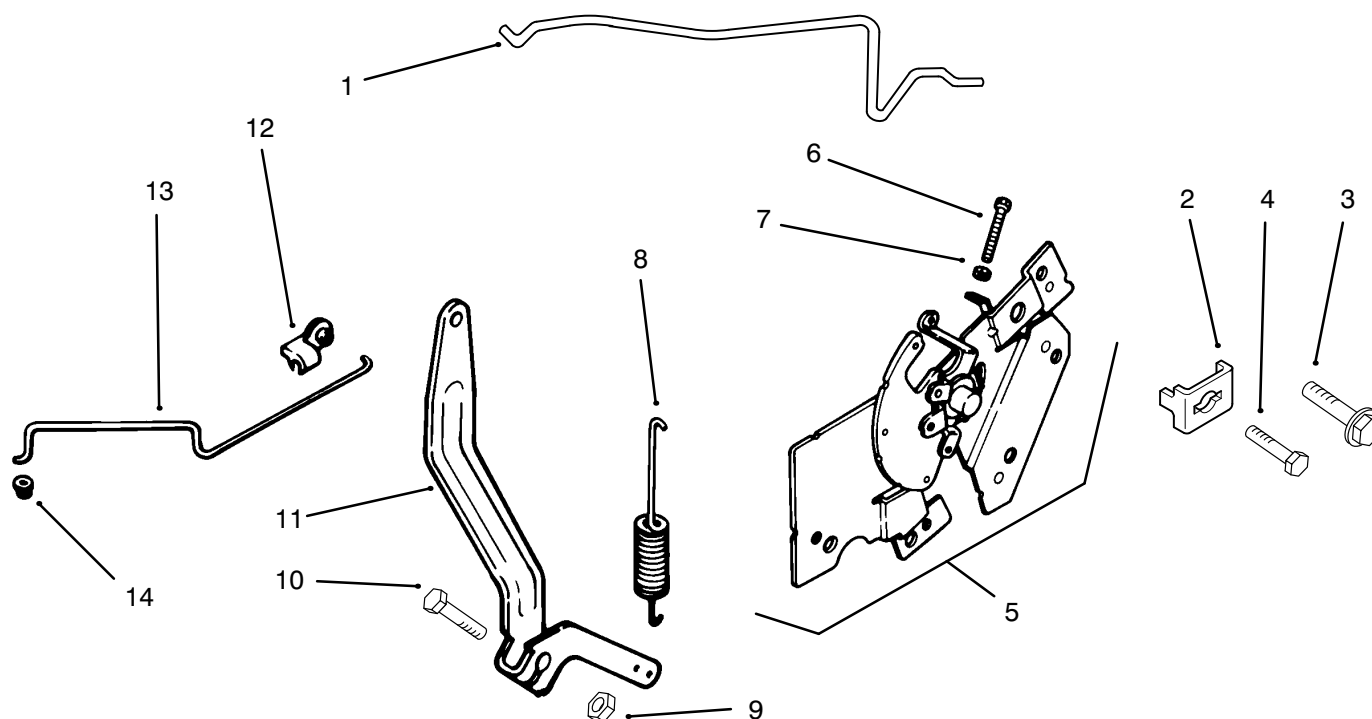


Sheet No.: 109
C-1956

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	2	Clamp–Cable
3	M–0664020	2	Screw Socket
4	M–0545016	2	Screw M5x0.8x16
5	12 536 02	1	Control–ASM INC 6–7
†6	M–0401030	1	Screw–HHF M4x0.7x28
†7	M–0446030	1	Nut–Hex M4x0.7
8	52 089 07	1	Spring–Governor
9	M–0641060	1	Nut M6x1.0
10	Sm–0642025	1	Screw M6x1.0x25
11	12 090 05	1	Lever–Governor
12	25 158 11	1	Bushing–Linkage
13	12 079 01	1	Linkage–Throttle
14	25 158 08	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

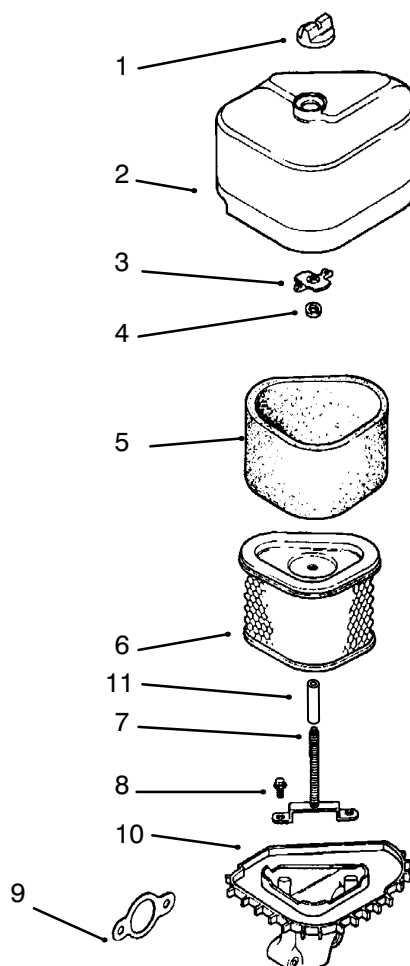


Sheet No.: 110

Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	25 341 03	1	Knob-Air Cleaner Cover				
2	12 096 45	1	Cover-Air Cleaner				
3	12 100 01	1	Nut-Wing				
4	X-25-63	1	Washer-Flat				
5	12 083 05	1	Element-Air Cleaner Incl 11				
6	12 083 08	1	Precleaner-Element				
7	12 072 05	1	Stud-Mounting Plate				
8	12 086 01	1	Screw-Mounting Plate				
9	12 041 02	1	Gasket-Air Cleaner				
10	12 094 05	1	Base-Air Cleaner Incl 7				
11	12 032 10	1	Seal				
*	12 113 04	1	Decal-Air Cleaner				
*	12 743 04	1	Kit-Air Cleaner Incl 1-11				

 
* Not illustrated



Ref. No.	Part No.	Qty.	Description
1	M-0829033	2	Stud M8x1.25x20
2	12 455 06	1	Strap-Lifting
3	12 041 03	1	Gasket-Exhaust Manifold
4	M-0645025	1	Screw-Valve Cover

33

34

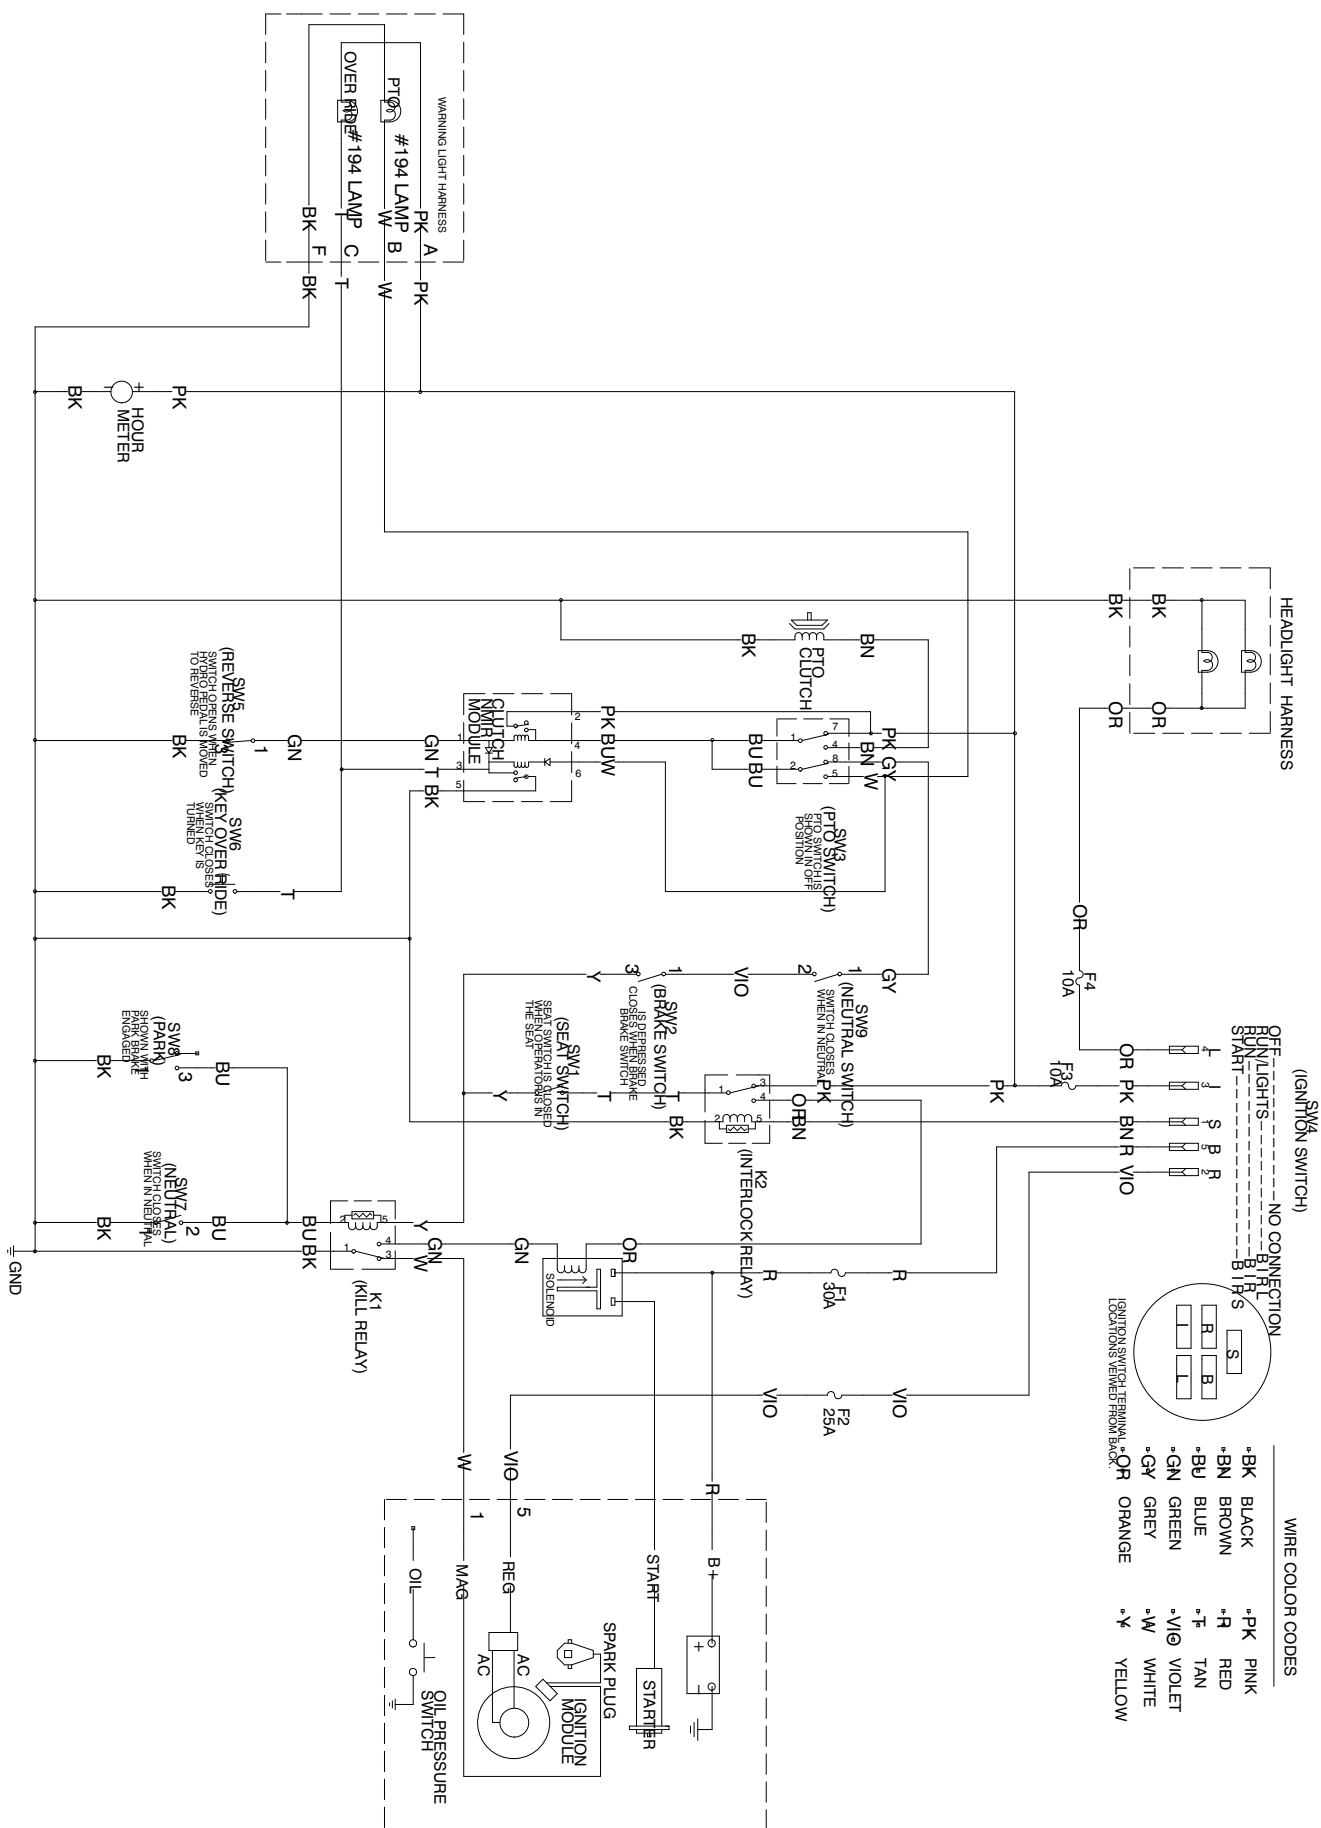

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
	10	4	1	Engine – Kohler 15
1278	2	17	4	Washer
1278	5	11	2	Washer
2534	15	15	1	Clip – Spring
3624	8	13	1	Spring–Compression
3624	14	5	1	Spring–Compression
5108	2	3:2:1	1	Valve–Tubeless Tire
5108	18	1:2:1	1	Valve–Tubeless Tire
5210	2	18	4	Shim Washer
5618	2	19	1	E–Ring
7007	18	1:99	1	Tube–Inner
8130	8	14	1	Retainer–Spring
8830	9	16	1	Clip
8870	8	25	1	Rod–Trunnion Lift
104047	4	3:2	1	Bushing
104048	4	3:1	1	Valve–Fuel
105293	2	3:99	1	Tube
105503	1	16	2	Bushing
105503	12	14	2	Bushing
105503	14	26	1	Bushing
105842	3	12	1	Battery (Dry)
106269	8	43	1	Bearing–Flange
106288	11	16	2	Clamp
106557	12	12	2	Reflector–Stick On
106948	3	6	1	Tray–Battery
107069	11	20	4	Clip
107788	15	16	1	Spring–Extension
108881	5	5	1	Nut–Differential
109189	5	7	1	Bearing–Flanged
109500	2	3:2:3	1	Zerk–Grease
109547	3	8	2	Hook
109989	12	21	2	Spacer Nylon
110391	5	6	1	Bearing Wheel
110513	2	3:2:2	2	Bearing Wheel
110656	14	13	1	Trunnion
111078	3	5	1	Wire – 10” Black
111383	5	8	1	Collar
111418	5	3	1	Bushing
111418	15	17	1	Bushing
111419	5	1	1	Bearing–Washer
111419	15	22	1	Bearing–Washer
111646	5	9	1	Grip Ring
111712	16	23	1	Washer–Wave
112168	8	16	1	Decal–Lift
112843	10	8	1	Washer
114720	3	9	1	Tube–21” Battery Drain
115230	14	9	2	Switch – Clutch
115593	8	8	1	Knob
117316	3	2	1	Rod–Battery Hold Dwn
147665	14	37	4	Screw–HH
147665	15	25	2	Screw–HH
519337	1	27	1	Clip–Cable
607978	15	10	1	Pulley Idler Nhi
609900	11	9	2	Nut–Speed
614249	1	30	1	Strap–Tie Sm
614249	7	17	1	Strap–Tie Sm
614249	7	27	1	Strap–Tie Sm
614249	9	11	1	Strap–Tie Sm
614249	15	36	1	Strap–Tie Sm
700806	12	18	2	Knob
700919	13	15	1	Nut #125
701178	12	10	2	Cap–Protector

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
702366	10	2	1	Clip—Wire Retainer
909543	17	4	2	Screw—Sq Hd Set
933141	8	7	1	Pin—Spirol
933148	8	12	1	Spirol Pin
933270	2	5	2	Pin
937225	17	6	1	Key—Hi—Pro
9114466	10	9	1	Screw—HH
9150026	2	8	4	Nut—Eslok
9150854	2	7:1	1	Jam Nut
9150854	2	9:1	1	Jam Nut
9202324	2	16	2	Washer
9267154	2	10	1	Screw
5-1336	18	5	2	Key
7-5461	14	17	1	Spacer
24-7924	7	19	2	Drive Shaft Cover
28-2480	2	20	2	Washer
28-8080	3	15	1	Boot—Terminal
38-1420	12	2	1	Switch—Seat
41-8440	14	35	1	Washer
46-5780	12	22	1	Switch—Starter
46-8093	1	31	2	Screw—Plastite
46-8093	7	22	2	Screw—Plastite
61-9780	2	1	2	Cap—Hub
62-7770	12	23	1	Key—Ignition
62-7770	13	14	1	Key—Ignition
66-0120	13	10	2	Knob
76-1340	11	27	1	Decal — USA
78-1221	18	1:2	1	Wheel
78-1940-01	2	12	1	Arm—Front Spindle
78-1950-01	2	6	1	Arm—Front Spindle
78-2140	8	41	1	Trunnion
78-2431	8	29	1	Rod
78-2491-03	9	15	1	Wldmt—PTO Stop
78-2601-01	2	13	2	Wldmt—Spindle
78-2610	5	2	1	Gear—Sector Plated
78-2920	2	7:2	1	Ball—Joint
78-2920	2	9:2	1	Ball—Joint
78-5801	2	7:3	1	Ass'y—Ball Link
78-5811	2	9:3	1	Ass'y—Ball Link L
78-6771	15	21	1	Arm—Idler
78-6810-03	8	35	1	Plate
78-6820-03	3	7	1	Plate—Battery
78-7360	8	33	1	Wldmt—Rod
78-7390	8	28	1	Tube
78-7960-01	2	4	1	Axle—Front
78-8180-03	16	20	1	Pedal—Clutch
78-9150-03	5	4	1	Plate
78-9740	8	9	1	Decal—Height Knob
79-0390	10	10	1	Guide—Belt
79-0390	15	20	1	Guide—Belt
79-0400	15	27	1	Guide—Belt
79-0950-03	12	17	1	Brkt—Pivot R.h. (Black)
79-0970-03	12	15	1	Brkt—Pivot L.h.
79-1250	8	27	2	Pin
79-3401-03	8	24	1	Shaft—Gage
79-7530	15	14	1	Spring — Clutch
83-2720	18	6	10	Lug—bolt
83-6620	7	13	1	Decal — Instruction
88-3950	12	1	1	Seat — Medium Back V411
88-3970	1	28	1	Reflector & Lamp ASM
88-3980	4	2	1	Gas Cap Assembly
88-4320	1	29	1	Wire Harness—Lights

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-9930	8	2	1	Switch-Micro
88-9932	14	38	1	Switch-Micro
88-9932	15	23	1	Switch-Micro
92-6656	1	23	1	Lens - Headlight
92-6670	15	34	1	Clutch Pedal Stop
92-6671	15	35	1	Brake Bracket Plated
92-6674-03	9	7	1	Support - Fender
92-6680	13	8	1	Steering Boot
92-6689	11	21	1	Foot Mat-RH
92-6690	11	18	1	Foot Mat-LH
92-6694-03	7	14	1	Hoodstand Wa (Black)
92-6702	5	10	1	Lower Strg Shaft Wa
92-6705	13	26	1	Lens - Dash Hm
92-6710	8	11	1	Grip - Handle
92-6711	8	10	1	Tip - Rod
92-6716	10	20	1	Gasket-Exh.single F/W
92-6717	6	18	1	U Joint - Steering
92-6720	13	18	1	Decal - PTO/Choke
92-6721	13	13	1	Decal - Throttle/Ign
92-6722	13	12	1	Decal - Shift
92-6725	11	23	1	Decal - HOC
92-6727	11	5	1	Decal - Fuel Level
92-6732	13	28	1	Hsg - Indicator Light
92-6744-01	11	19	1	Footrest-RH
92-6745-01	11	13	1	LH Footrest
92-6750	12	3	2	Spacer - Nylon
92-6754	4	5	1	Hose - Fuel Line Single
92-6761	17	7	1	Transaxle 820-024
92-6769	17	3	2	U-Bolt
92-6776	6	13	1	Bracket - Detent
92-6777-03	6	1	1	Brkt - Supt Column
92-6778-03	7	9	1	Brkt - Lower Column
92-6780	10	18	2	Nut-Hex Flange
92-6781	13	24	1	Control-Choke Single
92-6785	13	17	1	Switch - Ignition
92-6794	8	4	1	Wedge - HOC
92-6795-01	11	28	1	Fender
92-6797	13	19	1	Cover - Slot LH
92-6798	6	11	1	Cap - Rod Tilt
92-6855-03	8	32	1	Arm-Pivot
92-6859-03	7	6	1	Support - Dash
92-6860	7	8	4	Nut Retainer - J Type
92-6867-01	10	17	1	Shield-Muffler
92-6868-03	9	4	1	Brkt-Idler Plate
92-6875	14	11	3	Brg - Shift Linkage
92-6877	10	5	1	Valve - Oil Drain
92-6878-03	10	21	1	Shield-Mufflr Single
92-6886	14	18	1	Brk-Trasxl Shi
92-6887	17	5	1	Pulley-Trans (Gear)
92-6889-03	17	8	1	Strap - LH Torque
92-6890-03	17	12	1	Strap - RH Torque
92-6891-03	15	7	1	Brkt-Idler Spring Plt
92-6894-03	15	12	1	Bracket-Rear Idler
92-6896	14	20	1	Rod - Transaxle Shift
92-6914-03	1	32	1	Baffle-Hood Upper
92-6917-03	1	10	1	Bracket-RH Hinge
92-6918-03	1	9	1	Bracket-LH Hinge
92-6921	14	2	1	Bracket - Shaft
92-6924	16	19	1	Clutch Rod Wa
92-6926-03	14	12	1	Tube-Linkage
92-6929-03	16	7	1	Brkt-Parking Brake
92-6931-03	16	9	1	Lever-Park Brake

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6936-03	7	15	1	Cover-LH Side Wa
92-6937-03	7	2	1	Cover-RH Side Wa
92-6955	17	2	1	Belt - V Gear
92-6960	7	24	2	Latch - Hood
92-6964-03	9	6	1	Bracket-HOC Gage
92-6965	8	6	1	Rod - HOC
92-6971	6	5	1	Lever - Tilt Plated
92-6977-03	8	17	1	Rod - Lift Lever
92-6978	8	38	1	Rod - HOC Indicator
92-6979	8	42	1	Plate - HOC Gage
92-6986	12	8	2	Bolt - Shoulder
92-6987	1	24	1	Horsehead Emblem
92-6989	13	1	1	Wire - 21" Red
92-6990	3	1	1	Wire - 10" Red
92-6992-03	9	12	1	Steering Brkt Wa
92-6996-03	1	18	1	Hinge - RH Hood
92-6997-03	1	17	1	Hinge - LH Hood
92-6998	6	22	1	Spacer - Yoke, Right
92-6999	6	15	1	Spacer - Yoke
92-7001	15	3	1	Guide - Belt RH
92-7002	15	6	1	Guide-Belt LH
92-7005	14	22	1	Rod - Linkage
92-7006	1	4	4	Nut - J Type
92-7006	7	21	4	Nut - J Type
92-7007	8	39	1	Spring - Extension
92-7009	16	10	1	Grip - Parking Brake
92-7019	16	5	1	Rod - Parking Brake
92-7020	7	1	9	Screw-HH
92-7020	11	25	4	Screw-HH
92-7048-03	1	21	1	Brkt-Hood Hinge LH
92-7049-03	1	20	1	Brkt-Hood Hinge RH
92-7054	12	7	2	Spring - Compression
92-7057-03	2	11	1	Pin - Axle Wa *Black
92-7077	1	3	1	Seal-Air Inlet Single
92-7101	15	19	1	Pulley - Flat Idler
92-7102	15	26	1	Pulley - Idler
92-7116	16	3	1	Spring - Compression
92-7148	1	6	2	Foam - Sidepanel
92-8747	9	14	2	Decal Attach-A-Matic
92-8946	11	26	1	Decal - Danger
92-9845	13	4	1	Solenoid
93-0301	7	12	1	Decal - Danger
93-0320	15	31	1	Pulley - Idler
93-0321	10	6	1	Pulley- Engine Gear
93-0489-01	11	24	1	Plt - Ftrest w/Decal
93-0490	1	2	1	Hood - Service ASM
93-0491	1	7	1	LH Hood Side Sa
93-0492	1	8	1	RH Hood Side Sa
93-0494	1	22	1	Screen/Grill ASM, Sa
93-0523-03	8	44	1	Brkt-Pivot Linkage
93-0524	14	25	1	Bracket - Pivot
93-0526-03	15	32	1	Brkt-Microswitch Gear
93-0539	14	31	2	Screw-HH
93-0547	15	30	1	Guide-Belt
93-0548	15	37	1	Guide-Belt
93-0549	15	11	1	Guide-Belt
93-1131	7	23	1	Trim-Seal Firewall
93-1146	6	3	1	Bushing - Upper Strg
93-1148-03	6	12	1	Column - Wa
93-1357	6	14	1	Spring - Ext., Steering
93-3141	14	33	1	Decal - Reverse Gear
93-3228-03	16	1	1	Pedal - Brake

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-3658	15	28	1	Spacer
93-3659-03	18	2	2	Hub-Wheel
93-9801	2	3:2	1	ASM - Wheel w/Zerk
93-9998	13	16	1	Switch - PTO Toro
94-1723-03	16	14	1	Stop - Brake
94-1729	16	11	1	Rod - Spring
94-1733	16	15	1	Spring - Extension
94-1734	16	12	1	Spring - Compression
94-1749-03	7	18	1	Firewall
94-1862	16	21	2	Spacer
94-1895	13	7	1	Dash
94-1980	1	1	2	Foam - Hood
94-2514	10	7	1	Clutch - PTO
94-2688	16	17	1	Trunion
94-2869	11	12	4	Washer
94-2869	12	20	2	Washer
94-2874	6	9	1	Shaft - Short Steering
94-2966	13	9	1	Clip - Boot
94-2970	10	3	1	Decal - Toro Power + 15
94-3552-03	8	34	1	Shaft-Lift
94-3761-03	8	15	1	Wa- Lift Lever
94-4208	13	27	1	Hourmeter
94-4944	8	30	1	Shaft - Pedal Pivot
94-6928	4	3	1	Tank - Gas
94-6961	13	29	3	Screw
94-9766	14	34	1	Rod - Shift
94-9767	14	4	1	Arm-Pivot
94-9779	13	22	1	Control - Throttle
95-0800	1	13	1	Decal - Hood RH
95-0801	1	12	1	Decal - Hood LH
95-0802	11	3	1	Decal - Rear Fender
95-0803	7	16	2	Decal - 265 6-Speed
95-3003	8	3	2	Screw-HH
95-3039-03	16	25	1	Arm-Brake
98-1459	6	25	1	Decal - Toro
98-1468	6	6:1	1	Cover - Wheel, Steering
98-1471	6	6	1	Wheel - Steering 14"
98-1761	10	19	1	Muffler - Single
98-7249	13	31	2	Relay-Spdt
99-2334	18	1:1	1	Tire
99-2336	2	3:1	1	Tire
99-2985	12	5:2	1	Decal-Danger
99-3701	13	36	1	Module-Nmir, Clutch
99-5339	12	5:3	1	Decal-Nmir Switch
99-6765-03	11	6	1	Rear Panel ASM
99-6772-03	9	10	1	Wa - Frame
99-8031	12	5	1	Support-Seat
99-8038	13	25	1	Decal - Dash Lens
99-8040-03	7	4	1	Support - Dash
99-8041-03	14	30	1	Brkt-Pivot Mtg
99-8042	14	36	1	Bracket-Switch, Nmir
99-8065	3	10	1	Harness - Wire, 265-6
99-8066	13	32	1	Harness-Lamp
218-461	12	24	1	Nut-F/W [5/8-32]
233-42	14	6	1	Knob
237-141	13	6	1	Grommet-Rubber
2412-98	4	4	2	Clamp
256-90	8	31	2	Bshg-Flg
256-219	14	29	2	Bushing
302-5	2	14	2	Fitting-Lube
302-5	16	22	2	Fitting-Lube
302-11	2	15	1	Zerk-45 Degree

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
321-4	3	3	2	Screw-HH
321-4	6	2	4	Screw-HH
321-4	7	10	4	Screw-HH
321-4	11	8	2	Screw-HH
321-4	13	5	4	Screw-HH
322-3	1	15	2	Screw-HH
322-3	6	17	1	Screw-HH
322-3	14	7	2	Screw-HH
322-5	9	8	1	Screw-HH
322-5	12	4	4	Screw-HH
322-5	14	24	1	Screw-HH
322-6	17	1	1	Screw-HH
322-11	16	13	2	Screw-HH
322-17	6	23	1	Screw-HH
323-9	15	8	2	Screw-HH
323-10	15	18	2	Screw-HH
329-23	14	14	1	Screw-HH
3217-9	6	7	1	Nut-Hex
3218-2	16	16	2	Nut-Jam
3218-3	18	4	4	Nut-Jam
3229-11	7	5	4	Screw-CARR
3230-1	1	26	2	Screw-CARR
3230-1	11	15	4	Screw-CARR
3230-2	9	3	2	Screw-CARR
3230-2	11	29	1	Screw-CARR
3230-2	12	19	4	Screw-CARR
3230-23	11	22	3	Screw-CARR
3230-31	11	4	6	Screw- Carriage
3231-4	5	12	1	Screw-CARR
3231-25	8	21	2	Screw-CARR
3231-25	10	14	2	Screw-CARR
3231-25	15	2	1	Screw-CARR
3243-5	18	3	4	Screw-Set
3245-32	5	8:1	1	Screw-HS
3253-3	14	15	1	Washer-Lock/Sp
3253-4	6	19	2	Washer-Lock/Sp
3253-4	10	12	4	Washer-Lock/Sp
3253-5	15	29	1	Washer-Lock/Sp
3253-7	6	8	1	Washer-Lock/Sp
3254-5	12	25	1	Washer-Lock/Int
3256-3	16	26	1	Washer-Flat
3256-22	11	7	2	Washer-Flat
3256-22	16	2	3	Washer-Flat
3256-23	6	16	2	Washer-Flat
3256-23	9	2	2	Washer-Flat
3256-23	10	11	1	Washer-Flat
3256-23	11	10	2	Washer-Flat
3256-23	15	4	2	Washer-Flat
3256-23	16	8	5	Washer-Flat
3256-23	17	11	6	Washer-Flat
3256-24	8	22	2	Washer-Flat
3256-24	10	15	2	Washer-Flat
3256-24	14	19	2	Washer-Flat
3256-24	15	9	6	Washer-Flat
3256-24	16	29	1	Washer-Flat
3256-26	8	20	6	Washer-Flat
3256-49	12	13	4	Washer-Flat
3256-71	14	21	1	Washer-Flat
3272-2	16	4	2	Pin-Cotter
3272-6	8	18	1	Pin-Cotter
3272-6	14	16	2	Pin-Cotter
3272-6	16	6	5	Pin-Cotter

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3272-17	2	2	2	Pin-Cotter
3290-282	12	11	4	Rivet-Stl Pop
3290-307	14	23	2	Cotter-Hairpin
3290-354	8	1	1	Nut-Speed
3290-354	14	10	3	Nut-Speed
3290-354	15	33	1	Nut-Speed
3290-479	11	17	14	Fastener-Panel
3296-8	6	24	4	Nut-Lock Ni
3296-8	7	7	4	Nut-Lock Ni
3296-23	8	26	1	Nut-Lock Ni
3296-29	1	19	4	Nut-Lock Ni
3296-29	6	21	2	Nut-Lock Ni
3296-29	9	1	2	Nut-Lock Ni
3296-29	11	11	14	Nut-Lock Ni
3296-29	12	16	6	Nut-Lock Ni
3296-29	14	27	1	Nut-Lock Ni
3296-29	14	28	2	Nut-Lock Ni
3296-29	16	18	2	Nut-Lock Ni
3296-29	17	10	6	Nut-Lock Ni
3296-39	8	23	2	Nut-Lock Ni
3296-39	10	16	2	Nut-Lock Ni
3296-39	15	13	4	Nut-Lock Ni
3296-42	7	11	3	Nut-Lock Ni
3296-42	13	3	2	Nut-Lock Ni
3296-42	13	37	2	Nut-Lock Ni
3296-58	12	9	2	Nut-Lock Ni
32103-22	3	4	4	Nut-Wing
32105-15	1	5	12	Screw-Mach
32120-47	8	19	5	E Ring-External
32121-4	14	32	1	Pin-Roll
32121-25	8	40	1	Pin-Roll
32121-97	14	1	1	Pin
32121-103	8	37	1	Pin-Sprl
32128-10	1	14	8	Flange Locknut
32144-4	4	16	2	Screw-HH
32144-4	7	20	2	Screw-HH
32144-4	8	5	1	Screw-HH
32144-4	14	3	2	Screw-HH
32144-4	15	24	2	Screw-HH
32144-8	7	26	2	Screw-HH
32144-8	13	30	2	Screw-HH
32144-14	1	11	2	Screw-HWH
32144-14	3	11	1	Screw-HWH
32144-14	7	25	2	Screw-HWH
32144-14	8	36	2	Screw-HWH
32144-14	9	5	6	Screw-HWH
32144-14	10	1	3	Screw-HWH
32144-14	15	5	5	Screw-HWH
32144-32	1	33	2	Screw
32144-32	13	23	4	Screw
32144-70	8	45	2	Screw-Taptite
32144-70	15	1	3	Screw-Taptite
32144-70	17	9	4	Screw-Taptite
32149-2	7	3	2	Nut-Keps
32149-2	13	2	2	Nut-Keps
33114-030	6	20	2	Screw-HH
33114-030	10	13	4	Screw-HH

*Not Illustrated