



Wheel Horse®

270-H Lawn & Garden Tractor

270-H Lawn & Garden Tractor Int'l

Model No. 72106 – 9900001 & Up
Model No. 72115 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood & Grill Assembly	1	Fender & Footrests Assembly	15
Hydro Drive Components	2	Seat Assembly	16
Front Axle Assembly	3	Dash Assembly	17
Twin Cyl. Engine, Muffler, & PTO Assembly	4	Rear Wheel Assembly	18
Battery Assembly	5	Cruise Control Assembly	19
Fuel Tank & Hydro Reservoir Assembly	6	Power Lift Assembly	20
Lower Steering Assembly	7	Tuff Torq Transmission K61	21–33
Steering Wheel & Tile Assembly	8	Engine Assembly	34–45
Hoodstand & Firewall Assembly	9	Schematic	46
Lift Lever & H.O.C. Assembly	10	Pump Assembly	47
Hydro Brake Assembly	11	Toro Part Number Index	48–55
Hydro Controls Assembly	12	Maintenance	56–57
Frame Assembly	13		
Hydro Transaxle Assembly	14		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
38" Side Discharge Mower (Model No. 72106 only)	Model No. 78216	48" Dozer Blade	Model No. 79252
38" Side Discharge Mower (Model No. 72115 only)	Model No. 78218	42" Snowthrower	Model No. 79263
42" Side Discharge Mower (Model No. 72106 only)	Model No. 78231	38" Recycler Kit	Model No. 79170
42" Side Discharge Mower (Model No. 72115 only)	Model No. 78232	Baffle Kit—42" Side Discharge ..	Model No. 85501
48" Side Discharge Mower (Model No. 72106 only)	Model No. 78260	48" Blade Adapter	Part No. 92–6828
48" Side Discharge Mower (Model No. 72115 only)	Model No. 78268	42" Snowthrower Adapter	Part No. 93–7625
52" Side Discharge Mower (Model No. 72106 only)	Model No. 78280	48" Recycler Kit	Model No. 79195
52" Side Discharge Mower (Model No. 72115 only)	Model No. 78252	52" Recycler Kit	Model No. 79185
11 Cubic Foot Twin Bagger (38" S.D. Mower)	Model No. 79202	48" Blade Skid Shoe (Model No. 72115 only)	Part No. 92–6840
11 Cubic Foot Vac-Bagger (42" & 48" S.D. Mowers)	Model No. 79203	Rear Wheel Weights	Model No. 81115
36" Tiller	Model No. 79271	Front Wheel Weights	Model No. 81214
		Tire Chains	Model No. 82531
		Cab	Model No. 79911
		Vinyl Cover	Part No. 110831
		R.H. Cleat Tire	Part No. 92–6789
		L.H. Cleat Tire	Part No. 92–6790
		Non Metallic Hubcap—8" (Model No. 72115 only)	Part No. 94–3717
		Non Metallic Hubcap—12" (Model No. 72115 only)	Part No. 94–3718

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFW	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSH	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form X (Y). X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

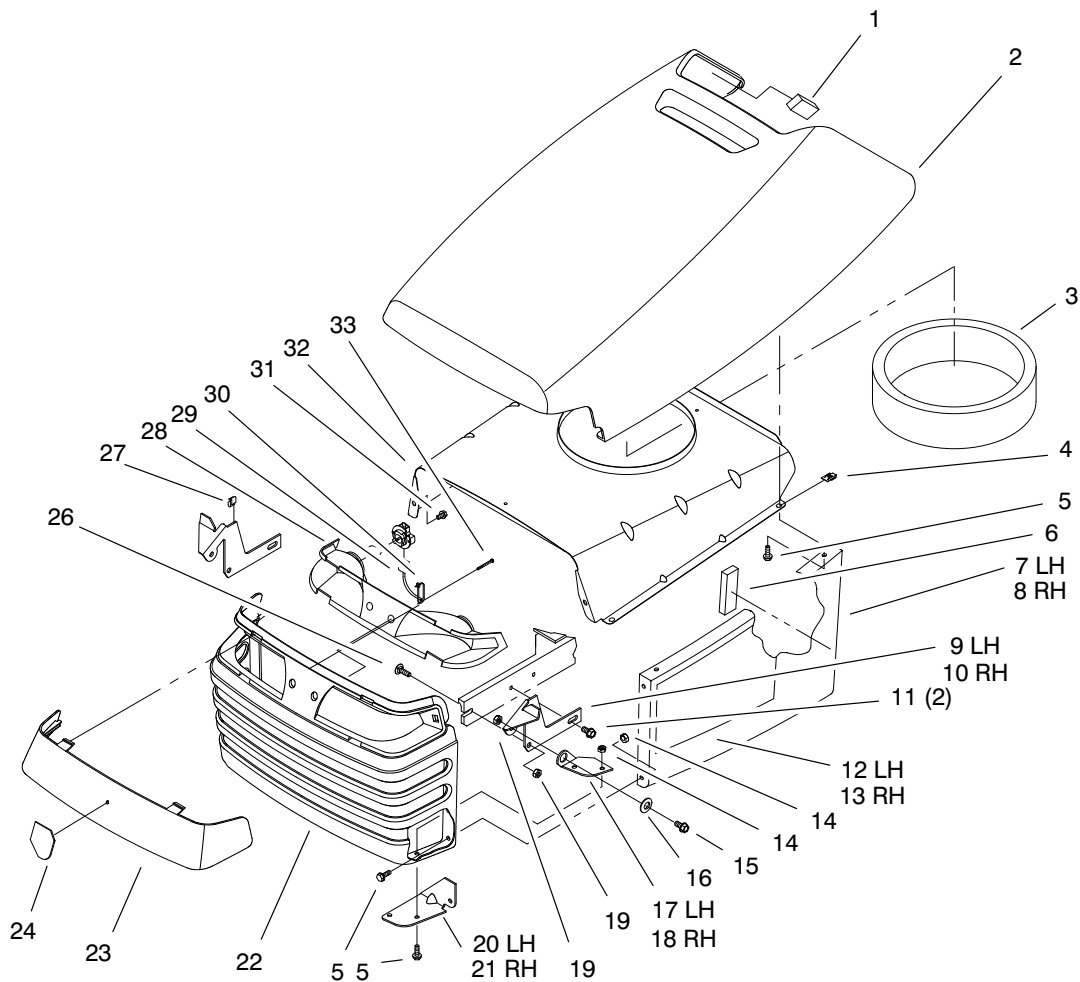


Sheet No.:2

Hood & Grill Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam – Hood
2	93-0490	1	Hood – Service ASM
3	92-7076	1	Seal-Air Inlet Twin
4	92-7006	4	Nut – J Type
5	32105-15	12	Screw-Mach
6	92-7148	2	Foam – Sidepanel
7	92-6652	1	LH Hood Side (Toro)
8	92-6650	1	RH Hood Side (Toro)
9	92-6918-03	1	Bracket-LH Hinge
10	92-6917-03	1	Bracket-RH Hinge
11	32144-14	2	Screw-HWH
12	95-0801	1	Decal – Hood LH
13	95-0800	1	Decal – Hood RH
14	32128-10	8	Flange Locknut
15	322-3	2	Screw-HH
16	105503	2	Bushing
17	92-6997-03	1	Hinge – LH Hood
18	92-6996-03	1	Hinge – RH Hood
19	3296-29	4	Nut-Lock Ni
20	92-7049-03	1	Brkt-Hood Hinge RH
21	92-7048-03	1	Brkt-Hood Hinge LH
22	93-0494	1	Screen/Grill ASM
23	92-6656	1	Lens – Headlight
24	92-6987	1	Horsehead Emblem
26	3230-1	2	Screw-CARR
27	519337	1	Clip-Cable


Ref. No.	Part No.	Qty.	Description
28	88-3970	1	Reflector & Lamp ASM
29	88-4320	1	Wire Harness-Lights
30	614249	1	Strap-Tie Sm
31	46-8093	2	Screw-Plastite
32	92-6914-03	1	Baffle-Hood Upper
33	32144-32	2	Screw

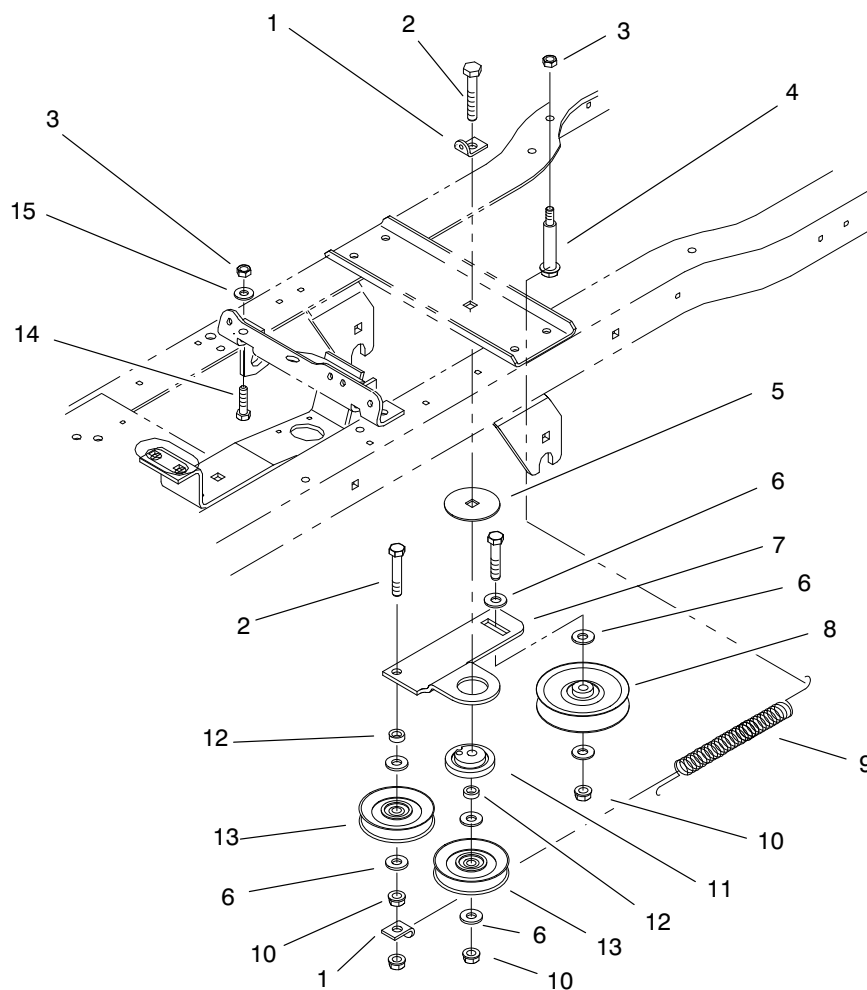

Sheet No.:3

Hydro Drive Components

Ref. No.	Part No.	Qty.	Description
1	2534	2	Clip – Spring
2	323–10	3	Screw–HH
3	3296–29	3	Nut–Lock Ni
4	88–4590	1	Bolt–Shoulder
5	111419	1	Bearing–Washer
6	3256–24	7	Washer–Flat
7	92–6900	1	Arm – Idler Hydro
8	92–7101	1	Pulley – Flat Idler
9	79–7530	1	Spring – Clutch
10	3296–59	4	Nut–Lock Ni
11	111418	1	Bushing
12	93–3658	2	Spacer
13	92–7102	2	Pulley – Idler
14	322–5	2	Screw–HH
15	3256–23	2	Washer–Flat

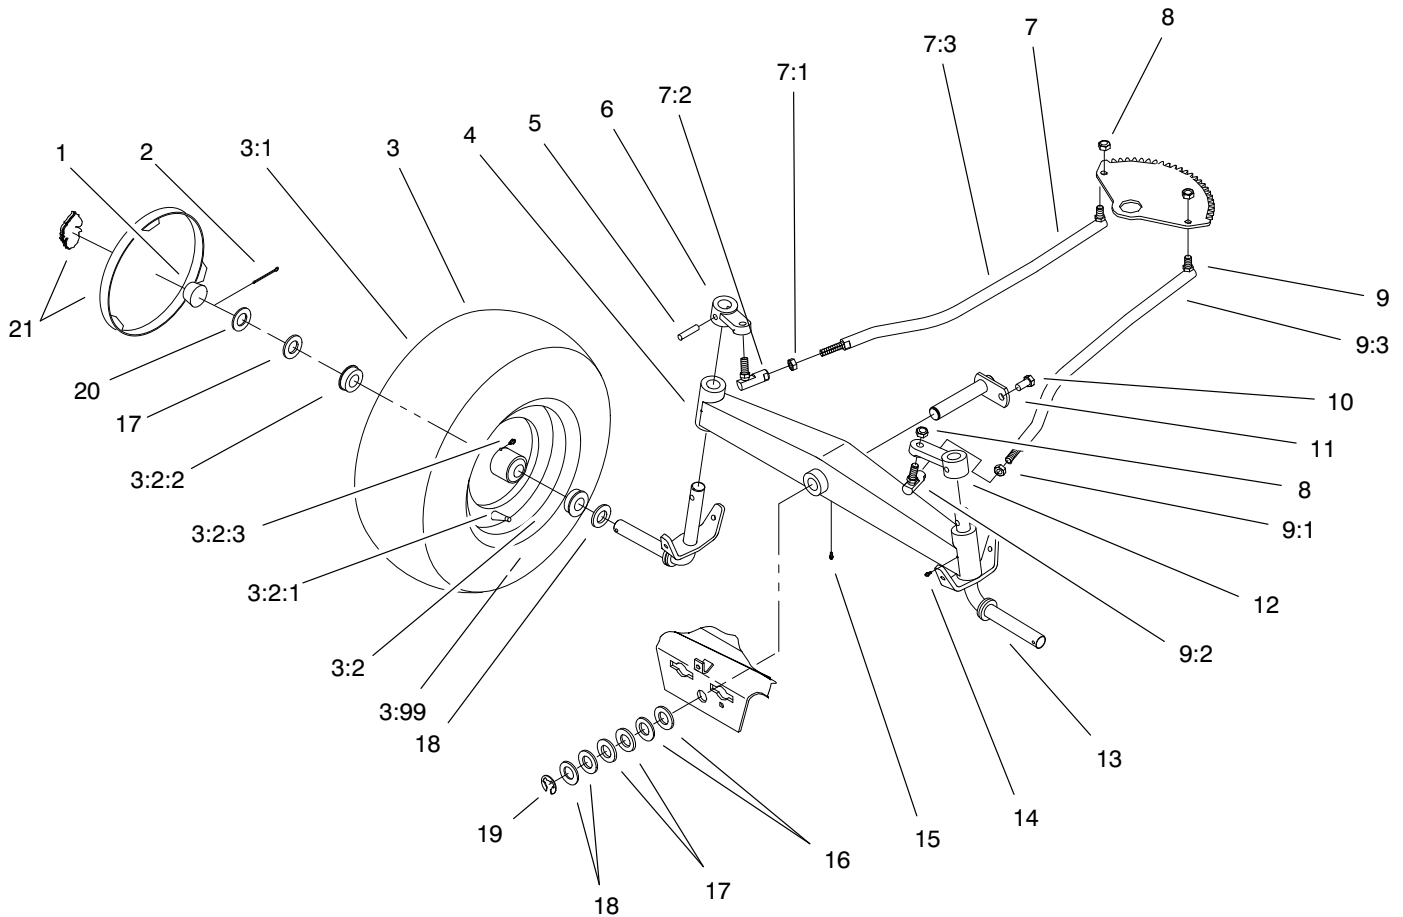


Sheet No.:4

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	61-9780	2	Cap-Hub
2	3272-17	2	Pin-Cotter
3		2	Wheel&tire ASM,Front
3:1	99-2336	1	Tire
3:2	93-9801	1	ASM - Wheel w/Zerk
3:2:1	5108	1	Valve-Tubeless Tire
3:2:2	110513	2	Bearing Wheel
3:2:3	109500	1	Zerk-Grease
3:99	105293	1	Tube
4	78-7960-01	1	Axle-Front
5	933270	2	Pin
6	78-1950-01	1	Arm-Front Spindle
7	92-6883	1	Steering Linkage, RH
7:1	9150854	1	Jam Nut
7:2	78-2920	1	Ball-Joint
7:3	78-5801	1	Ass'y-Ball Link
8	9150026	4	Nut-Eslok
9	92-6884	1	Steering Linkage, LH
9:1	9150854	1	Jam Nut
9:2	78-2920	1	Ball-Joint
9:3	78-5811	1	Ass'y-Ball Link L
10	9267154	1	Screw
11	92-7057-03	1	Pin - Axle Wa
12	78-1940-01	1	Arm-Front Spindle
13	78-2601-01	2	Wldmt-Spindle
14	302-5	2	Fitting-Lube


Ref. No.	Part No.	Qty.	Description
15	302-11	1	Zerk-45 Degree
16	9202324	2	Washer
17	1278	4	Washer
18	5210	4	Shim Washer
19	5618	1	E-Ring
20	28-2480	2	Washer
21	94-3717	2	Kit-Silver Hub Cap/Logo (Only On: 72106)

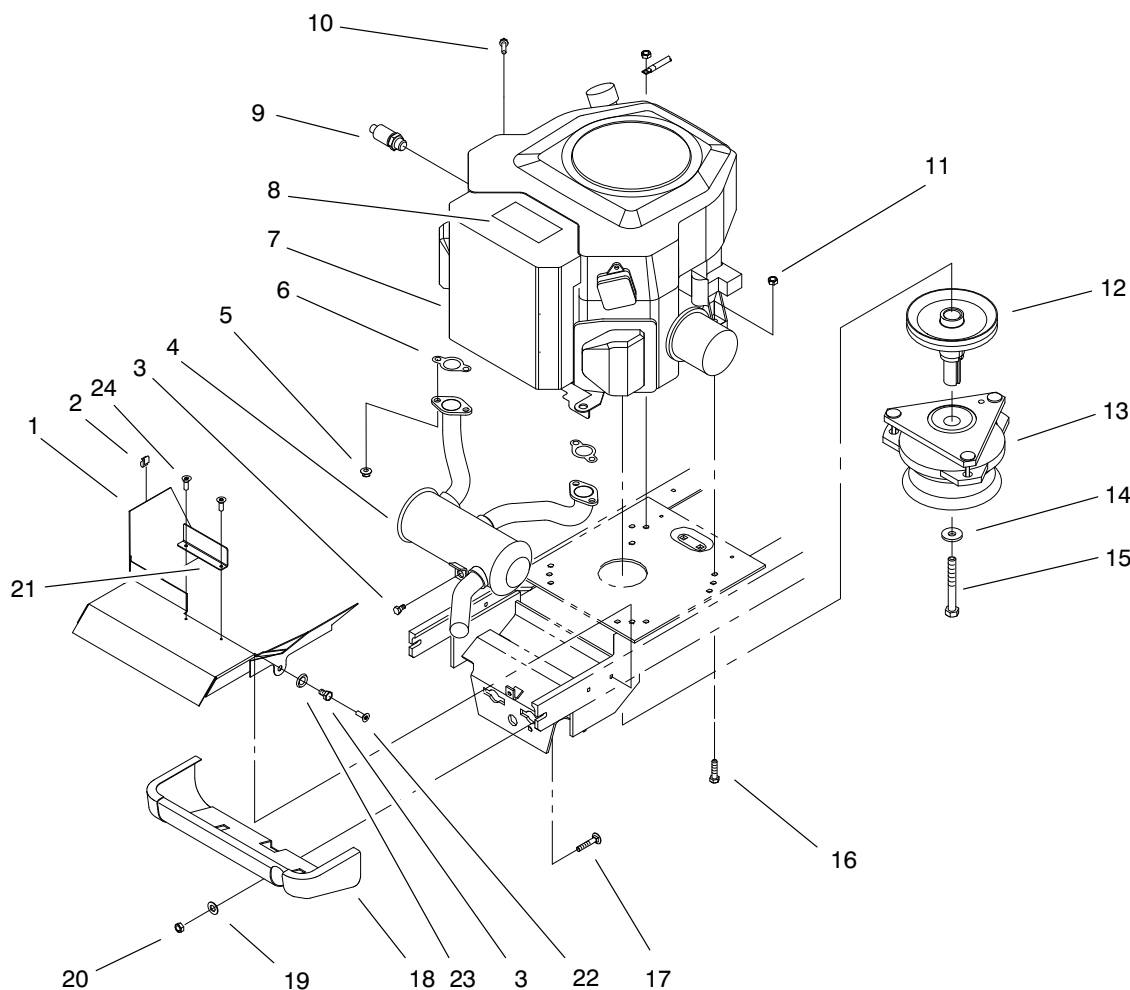

Sheet No.:5

Twin Cyl. Engine, Muffler, & PTO Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-6950-03	1	Shield-Muf Wa Twin (Black)	15	9114466	1	Screw-HH
2	702366	1	Clip-Wire Retainer	16	322-9	4	Screw-HH
3	32144-14	3	Screw-HWH (Only On: 72106)	17	3231-25	2	Screw-CARR
3	32144-14	1	Screw-HWH (Only On: 72115)	18	92-6867-01	1	Shield-Muffler
4	98-9003	1	Muffler - Twin	19	3256-24	2	Washer-Flat
5	92-6780	4	Nut-Hex Flange	20	3296-39	2	Nut-Lock Ni
6	93-0350	2	Gasket - Exhaust F/W Eng.	21	99-6764-03	1	Guard-Throttle (Only On: 72115)
7		1	Engine - Kohler 20 (Only On: 72106)	22	100-1325	2	Screw-Countersunk Torx (Only On: 72115)
7		1	Engine - Kohler 20 Int'l (Only On: 72115)	23	100-1326	2	Washer-Countersunk (Only On: 72115)
8	94-2870	1	Decal - Toro Power + 20	24	100-1320	2	Screw-Panhead Torx (Only On: 72115)
9	92-6877	1	Valve - Oil Drain				
10	32144-118	2	Screw-PPH				
11	3296-29	4	Nut-Lock Ni				
12	92-6888	1	Pulley-Engine (Hydro)				
13	94-2514	1	Clutch - PTO (Only On: 72106)				
13	92-6885	1	Clutch - Elec PTO (Only On: 72115)				
14	112843	1	Washer				

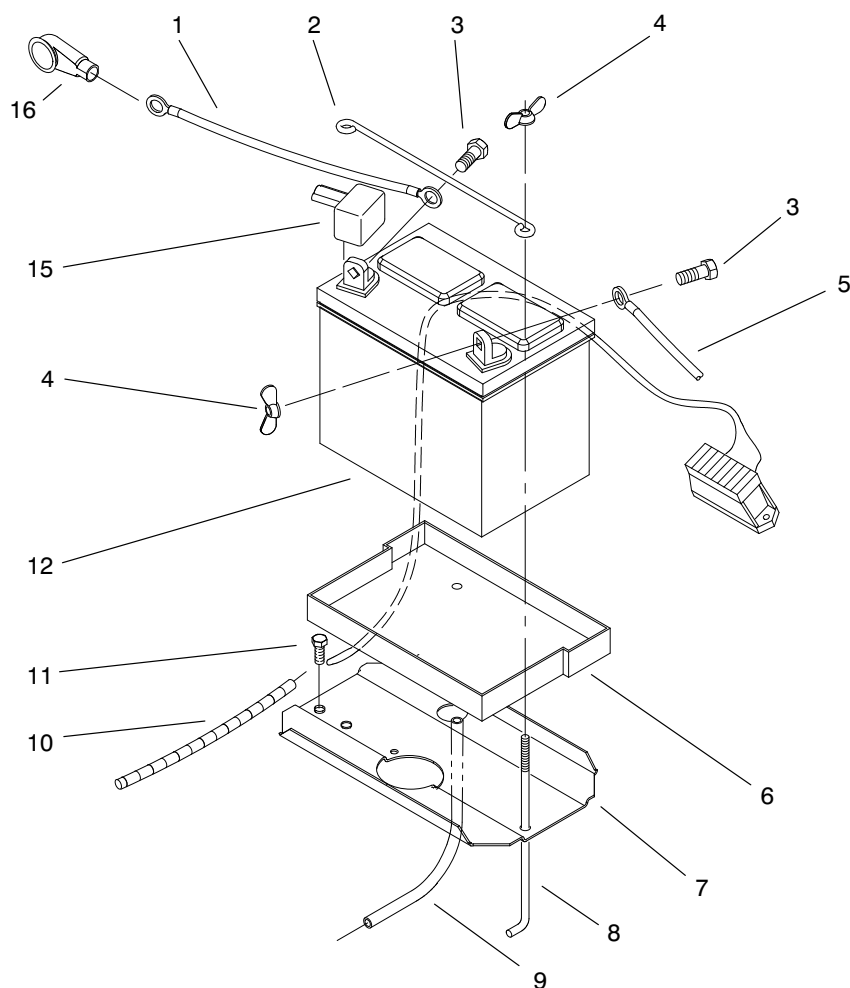


Sheet No.:6

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Wire - 21" Red
2	117316	1	Rod-Battery Hold Dwn
3	321-4	2	Screw-HH
4	32103-22	4	Nut-Wing
5	93-0324	1	Cable - 18" Black
6	106948	1	Tray-Battery
7	78-6820-03	1	Plate-Battery
8	109547	2	Hook
9	114720	1	Tube-21" Battery Drain
10	99-8071	1	Harness - Wire, 269h
11	32144-14	1	Screw-HWH
12	115877	1	Battery
15	28-8080	1	Boot-Terminal
16	93-3190	1	Boot-Terminal Insulator


Ref. No.	Part No.	Qty.	Description

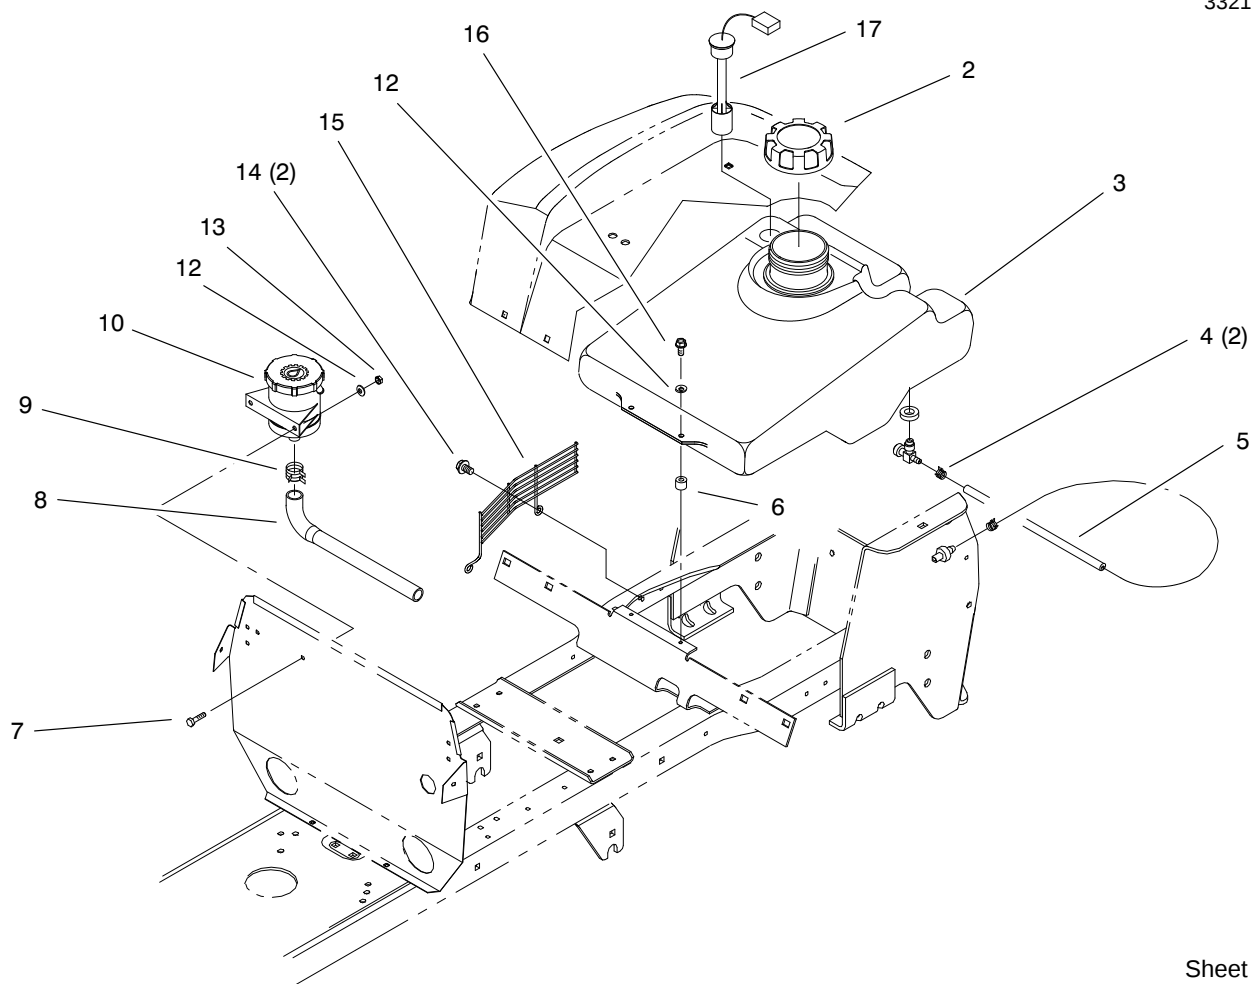

Sheet No.:7

Fuel Tank & Hydro Reservoir Assembly

Ref. No.	Part No.	Qty.	Description
2	88-3980	1	Gas Cap Assembly
3	94-6927	1	Tank – Fuel
4	2412-98	2	Clamp
5	93-1627	1	Hose – Fuel Line Twin
6	93-1144	2	Spacer – Fuel Tank
7	321-4	2	Screw-HH
8	92-6737	1	Hose – Hydro
9	2412-129	2	Hose Clamp
10	79-3500	1	Ass'y-Reservoir
12	3256-22	4	Washer-Flat
13	3296-42	2	Nut-Lock Ni
14	32144-14	2	Screw-HWH (Only On: 72115)
15	93-9275	1	Guard – Fan (Only On: 72115)
16	32104-96	2	Screw-HH
17	94-1716	1	Sensor – Low Fuel

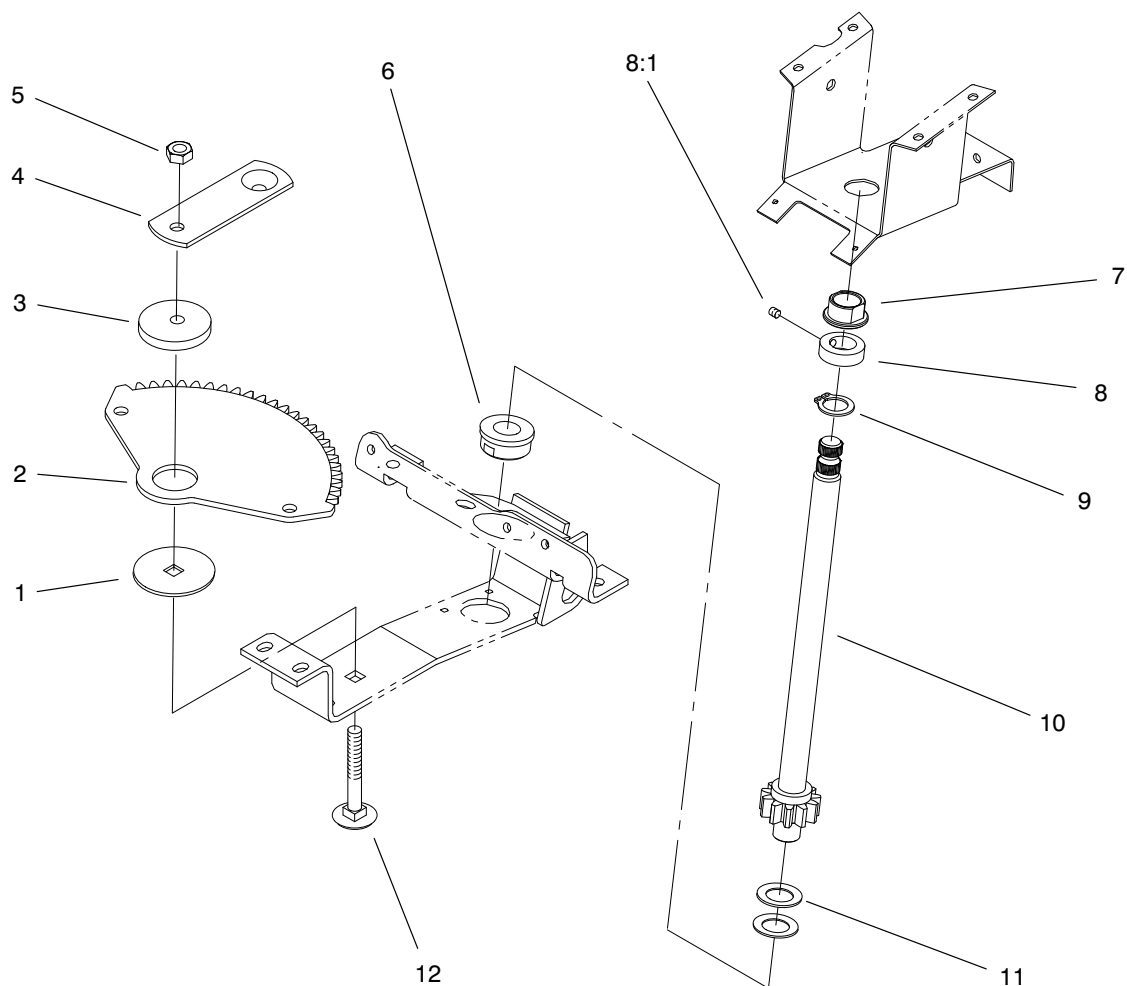

Sheet No.:8


Lower Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	111419	1	Bearing–Washer
2	78–2610	1	Gear–Sector Plated
3	111418	1	Bushing
4	78–9150–03	1	Plate
5	108881	1	Nut–Differential
6	110391	1	Bearing Wheel
7	109189	1	Bearing–Flanged
8	111383	1	Collar
8:1	3245–32	1	Screw–HS
9	111646	1	Grip Ring
10	92–6702	1	Lower Strg Shaft Wa
11	1278	2	Washer
12	3231–4	1	Screw–CARR

Ref. No.	Part No.	Qty.	Description

Steering Wheel & Tile Assembly

8

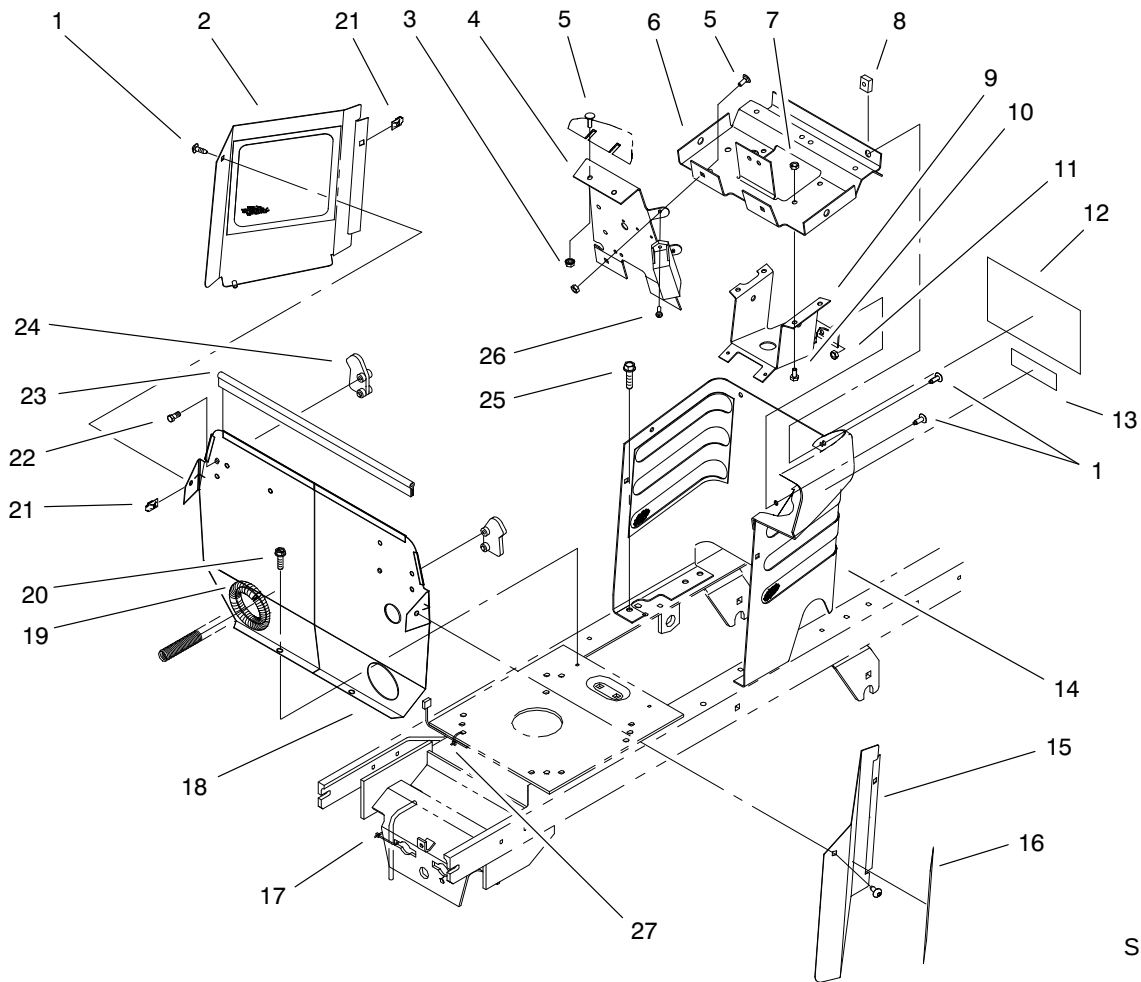


Sheet No.:10

Hoodstand & Firewall Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-HH
2	92-6937-03	1	Cover-RH Side Wa
3	32149-2	2	Nut-Keps
4	99-8040-03	1	Support - Dash
5	3229-11	4	Screw-CARR
6	92-6859-03	1	Support - Dash
7	3296-8	4	Nut-Lock Ni
8	92-6860	4	Nut Retainer - J Type
9	92-6778-03	1	Brkt - Lower Column
10	321-4	4	Screw-HH
11	3296-42	3	Nut-Lock Ni
12	93-7313	1	Decal-Slope/Hydro- nt'l (Only On: 72115)
12	93-0302	1	Decal - Danger (Only On: 72106)
13	83-6620	1	Decal - Instruction
14	93-0486	1	Hoodstand (Only On 72106)
14	93-0488	1	Hoodstand (Only On 72115)
15	92-6936-03	1	Cover-LH Side Wa
16	95-0811	2	Decal - 270 Hydro
17	614249	1	Strap-Tie Sm
18	94-1749-03	1	Firewall
19	24-7924	2	Drive Shaft Cover
20	32144-4	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
21	92-7006	4	Nut - J Type
22	46-8093	2	Screw-Plastite
23	93-1131	1	Trim-Seal Firewall
24	92-6960	2	Latch - Hood
25	32144-14	2	Screw-HWH
26	32144-8	2	Screw-HH
27	250-7	1	Cable Tie

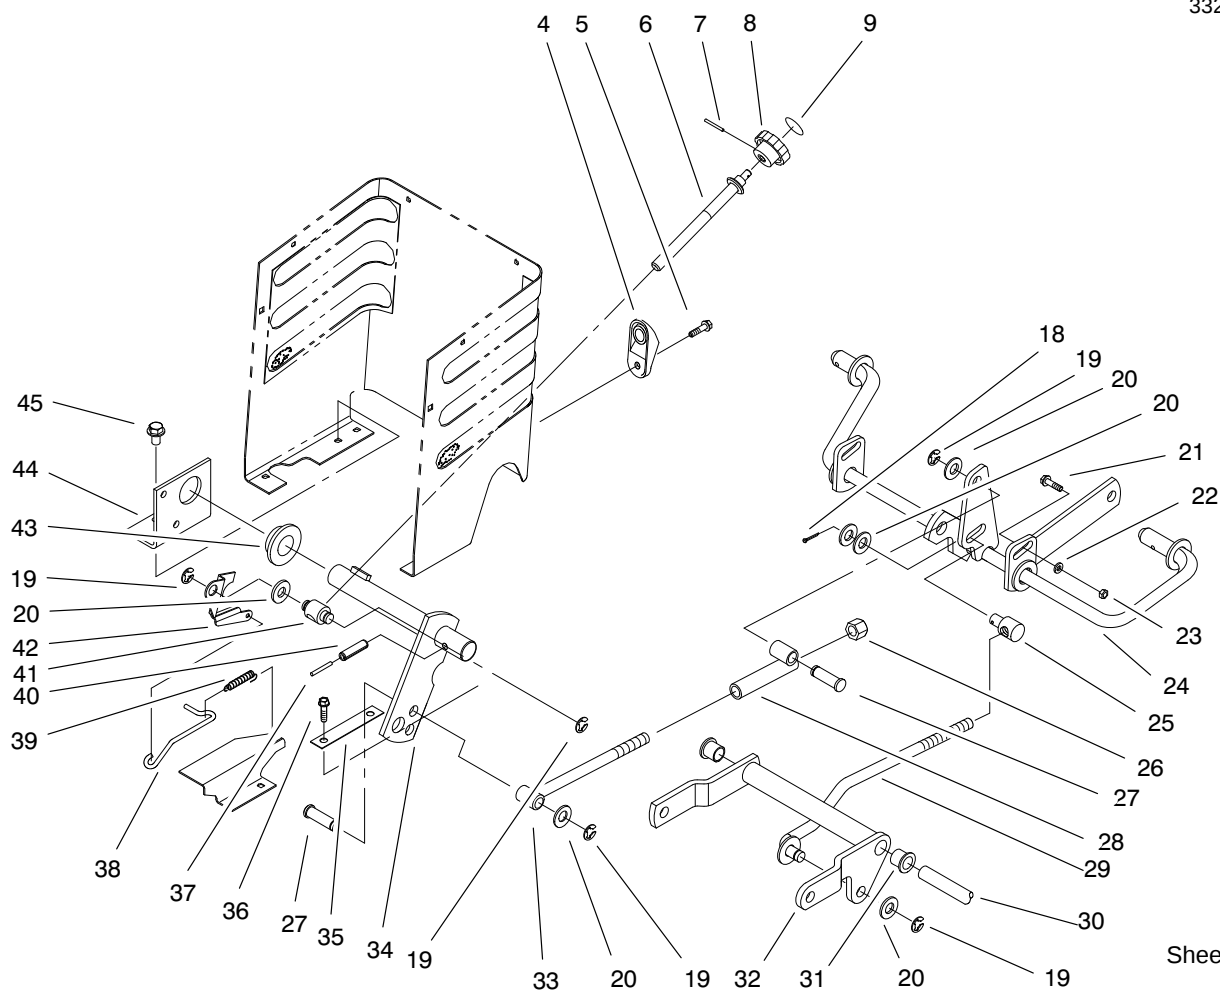


Sheet No.:11

Lift Lever & H.O.C. Assembly

Ref. No.	Part No.	Qty.	Description
4	92-6794	1	Wedge – HOC
5	32144-4	1	Screw-HH
6	92-6965	1	Rod – HOC
7	933141	1	Pin-Spirol
8	115593	1	Knob
9	78-9740	1	Decal-Height Knob
18	3272-6	1	Pin-Cotter
19	32120-47	5	E Ring-External
20	3256-26	6	Washer-Flat
21	3231-25	2	Screw-CARR
22	3256-24	2	Washer-Flat
23	3296-39	2	Nut-Lock Ni
24	79-3401-03	1	Shaft-Gage
25	8870	1	Rod-Trunnion Lift
26	3296-23	1	Nut-Lock Ni
27	79-1250	2	Pin
28	78-7390	1	Tube
29	78-2431	1	Rod
30	94-4944	1	Shaft – Pedal Pivot
31	256-90	2	Bshg-Flg
32	92-6855-03	1	Arm-Pivot
33	78-7360	1	Wldmt-Rod
34	94-3552-03	1	Shaft-Lift
35	78-6810-03	1	Plate
36	32144-14	2	Screw-HWH
37	32121-103	1	Pin-Sprl


Ref. No.	Part No.	Qty.	Description
38	92-6978	1	Rod – HOC Indicator
39	92-7007	1	Spring – Extension
40	32121-25	1	Pin-Roll
41	78-2140	1	Trunnion
42	92-6979	1	Plate – HOC Gage
43	106269	1	Bearing-Flange
44	93-0523-03	1	Brkt-Pivot Linkage
45	32144-14	2	Screw-HWH

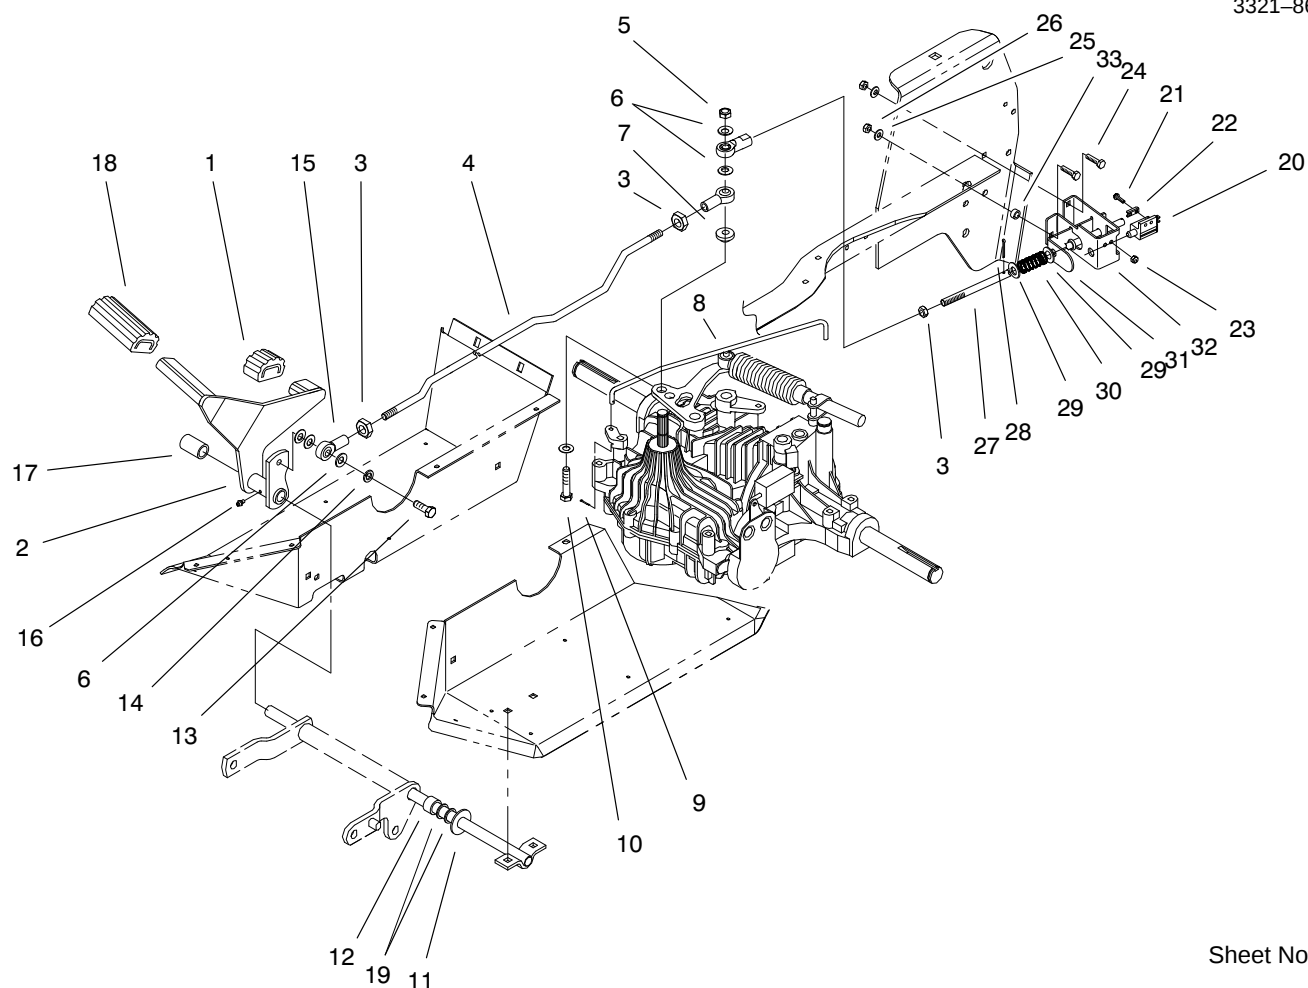

Sheet No.:13

Hydro Controls Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6903	1	Pedal Pad	26	3296-42	2	Nut-Lock Ni
2	92-6913-03	1	Pedal-Hydro Wa	27	99-6759	1	Rod-Nmir
3	3220-3	3	Nut-Jam	28	3272-6	1	Pin-Cotter
4	92-7018	1	Rod - Hydro	29	3256-24	2	Washer-Flat
5	3296-59	1	Nut-Lock Ni	30	38-2340	1	Comp Spring
6	3256-24	5	Washer-Flat	31	99-6760	1	Arm-Push
7	92-6962	1	Bushing	32	99-6758-03	1	Bracket, Nmir
8	94-1588	1	Rod - Bypass	33	92-6998	1	Spacer - Yoke, Right
9	3272-2	1	Pin-Cotter				
10	323-11	1	Screw-HH				
11	94-6875	1	Washer				
12	94-4945	1	Spacer				
13	323-7	1	Screw-HH				
14	3253-5	1	Washer-Lock/Sp				
15	92-7008	3	Rod End - Female				
16	302-26	1	Zerk				
17	92-6966	1	Spacer				
18	92-6902	1	Pedal Pad				
19	9202154	2	Washer				
20	95-1653	1	Switch - Single Pole				
21	3290-392	2	Screw - Hex Head Slot				
22	94-7905	1	Retainer-Screw				
23	3296-1	2	Nut-Lock Ni				
24	321-6	2	Screw-HH				
25	3256-22	4	Washer-Flat				

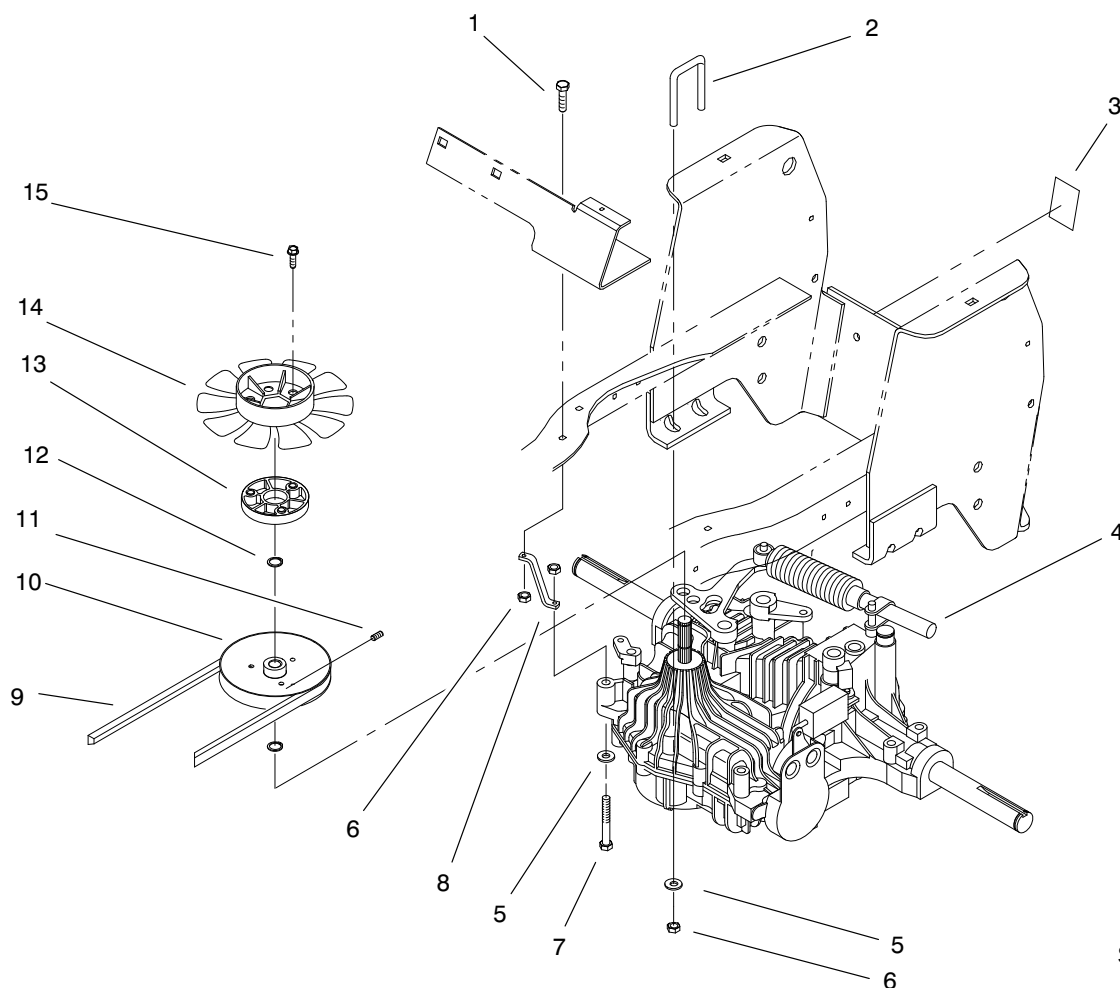

Sheet No.:15

Hydro Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	92-6769	2	U-Bolt
3	92-6726	1	Decal - Hydro Valve (Only On: 72106)
3	92-7090	1	Decal - Bypass Valve (Only On: 72115)
4	94-4205	1	Transaxle - Hydrostatic
5	3256-23	5	Washer-Flat
6	3296-29	6	Nut-Lock Ni
7	322-12	1	Screw-HH
8	93-0546-03	1	Strap-Trq Hy
9	92-6954	1	Belt - V Hydro
10	92-6686	1	Pulley-Hydro Trans
11	3245-32	1	Screw-HS
12	936118	2	Snap Ring
13	92-6943	1	Spacer - Fan
14	92-6742	1	Fan - Hydro
15	49-2040	3	Screw-Taptite

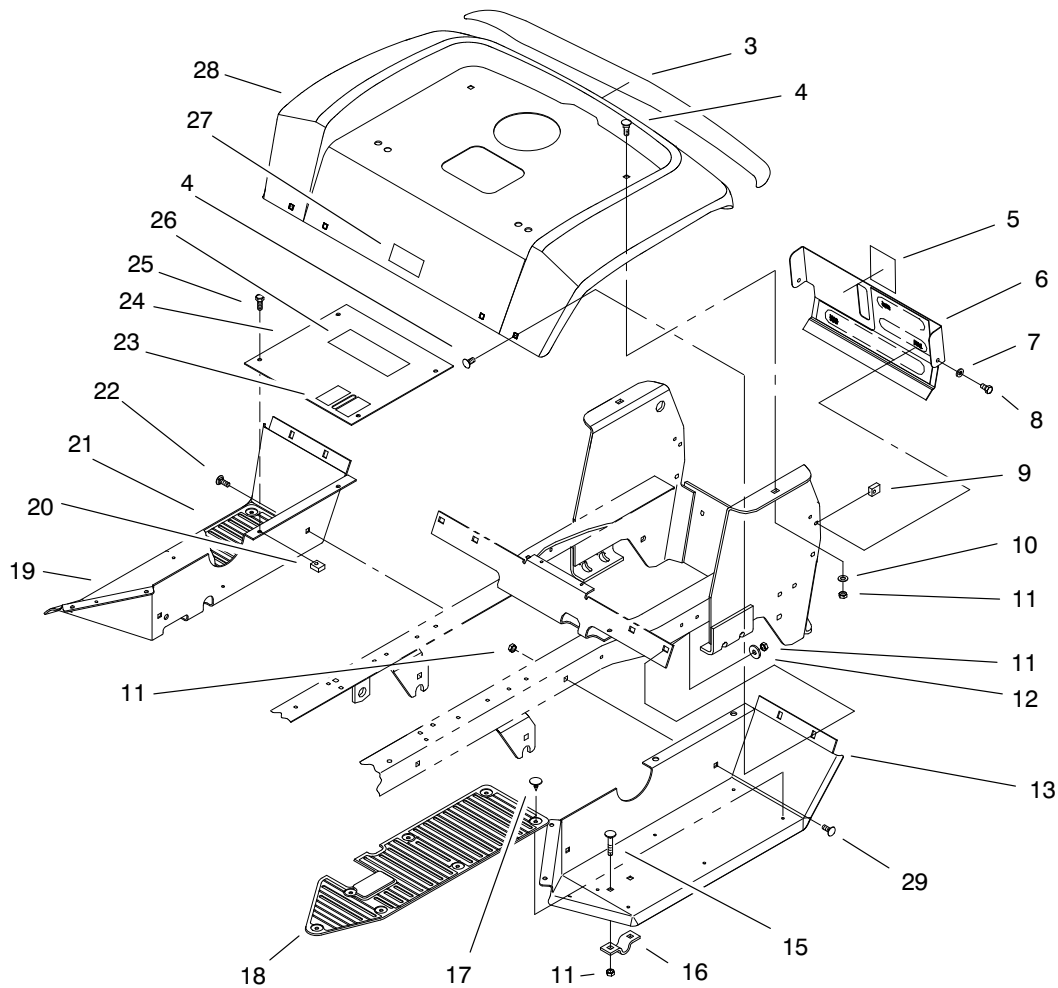


Sheet No.:17

Fender & Footrests Assembly

Ref. No.	Part No.	Qty.	Description
3	95-0802	1	Decal – Rear Fender
4	3230-31	6	Screw– Carriage
5	92-6727	1	Decal – Fuel Level
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer–Flat
8	321-4	2	Screw–HH
9	609900	2	Nut–Speed
10	3256-23	2	Washer–Flat
11	3296-29	14	Nut–Lock Ni
12	94-2869	4	Washer
13	94-1711-01	1	Footrest–LH Hydro(Red)
15	3230-1	4	Screw–CARR
16	106288	2	Clamp
17	3290-479	14	Fastener–Panel
18	92-6688	1	LH Foot Mat (Hydro)
19	92-6747-01	1	RH Footrest (Hydro)
20	107069	4	Clip
21	92-6687	1	RH Foot Mat (Hydro)
22	3230-23	3	Screw–CARR
23	92-7092	1	Decal – HOC Int'l (Only On: 72115)
23	92-6725	1	Decal – HOC (Only On: 72106)
24	93-0489-01	1	Plate–Footrest (Only On 72106)


Ref. No.	Part No.	Qty.	Description
24	93-4243	1	Plate–Footrest (Only On 72115)
25	92-7020	4	Screw–HH
26	93-7314	1	Decal – Danger (Only On: 72115)
26	92-8946	1	Decal – Danger (Only On: 72106)
27	76-1340	1	Decal – USA (Only On: 72106)
28	92-6795-01	1	Fender
29	3230-23	1	Screw–CARR

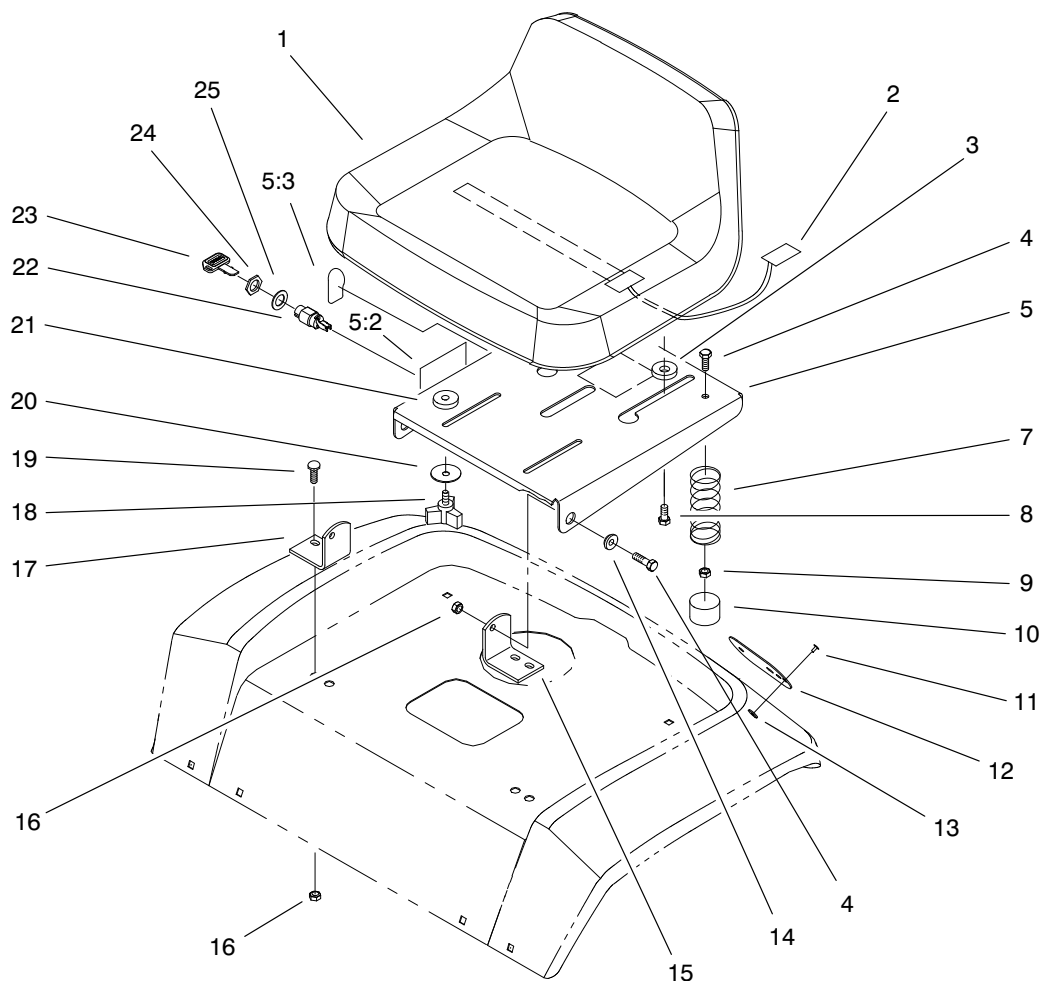

Sheet No.:18

Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6511	1	Seat V-511	17	79-0950-03	1	Brkt-Pivot R.h. (Black)
2	38-1420	1	Switch-Seat	18	700806	2	Knob
3	92-6750	2	Spacer - Nylon	19	3230-2	4	Screw-CARR
4	322-5	4	Screw-HH	20	94-2869	2	Washer
5	99-8030	1	Support-Seat, He	21	109989	2	Spacer Nylon
			ASM (Only On: 72115)	22	46-5780	1	Switch-Starter
5	99-8031	1	Support-Seat (Only	23	62-7770	1	Key-Ignition
			On: 72106)	24	218-461	1	Nut-F/W
5:2	99-2986	1	Decal-Danger Intl	25	3254-5	1	Washer-Lock/Int
			(Only On: 72115)				
5:2	99-2985	1	Decal-Danger (Only				
			On: 72106)				
5:3	99-5340	1	Decal-Nmir Switch Intl				
			(Only On: 72115)				
5:3	99-5339	1	Decal-Nmir Switch				
			(Only On: 72106)				
7	92-7054	2	Spring - Compression				
8	92-6986	2	Bolt - Shoulder				
9	3296-58	2	Nut-Lock Ni				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Stl Pop				
12	106557	2	Reflector				
13	3256-49	4	Washer-Flat				
14	105503	2	Bushing				
15	79-0970-03	1	Brkt-Pivot L.h.				
16	3296-29	6	Nut-Lock Ni				

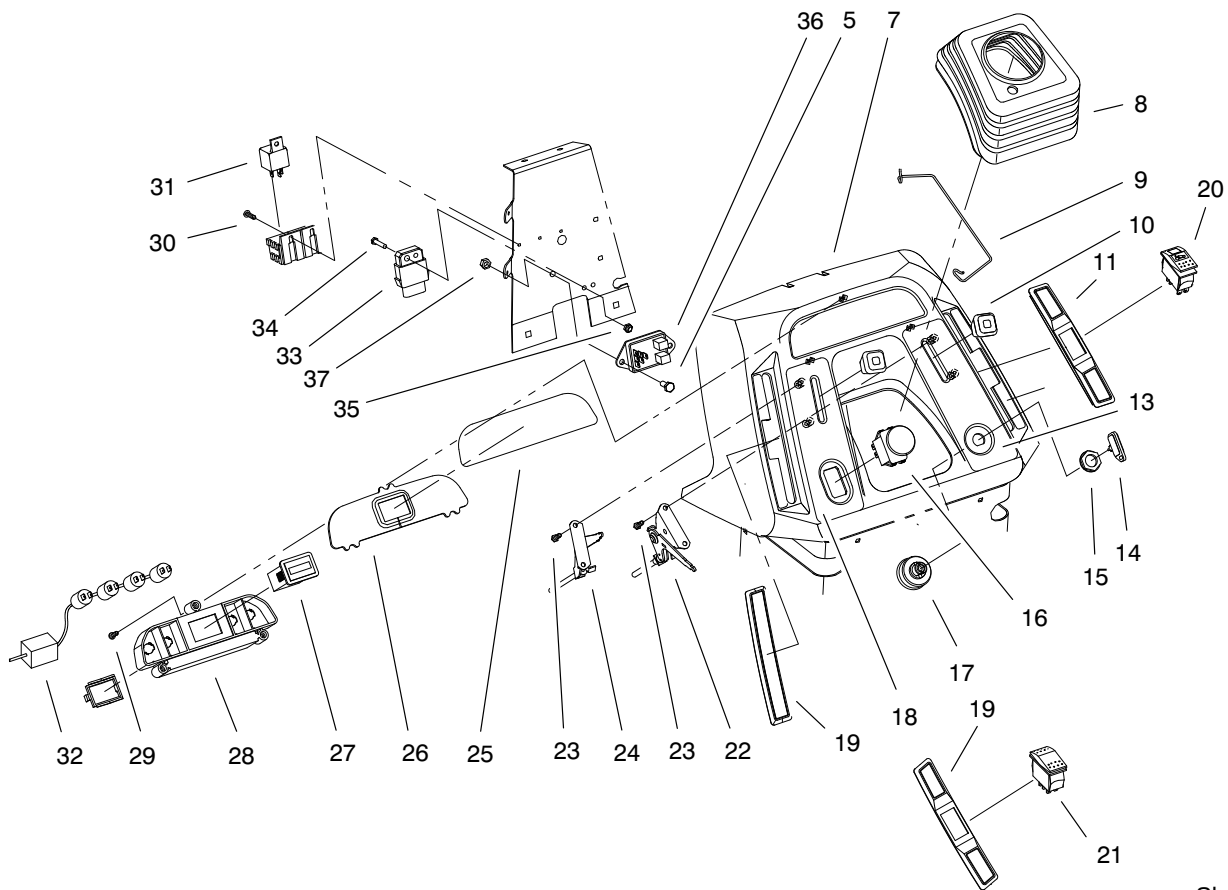


Sheet No.:19

Dash Assembly

Ref. No.	Part No.	Qty.	Description
5	321-4	2	Screw-HH
7	94-1894	1	Dash
8	92-6680	1	Steering Boot
9	94-2966	1	Clip - Boot
10	66-0120	2	Knob
11	93-0516	1	Cover - RH Slot (Only On: 72106)
11	93-0533	1	Cover - RH Slot (Only On: 72115)
13	93-7255	1	Decal - Dash Throt/Ign (Only On: 72115)
13	92-6721	1	Decal - Throttle/Ign (Only On: 72106)
14	62-7770	1	Key-Ignition
15	700919	1	Nut
16	93-9998	1	Switch - PTO Toro
17	92-6785	1	Switch - Ignition
18	93-7256	1	Decal - Dash PTO/Choke (Only On: 72115)
18	92-6720	1	Decal - PTO/Choke (Only On: 72106)
19	94-3513	1	Cover - Lift (Only On: 72115)

Ref. No.	Part No.	Qty.	Description
19	94-1710	1	Cover-Lift (Only On: 72106)
20	93-0527	1	Switch - Cruise
21	94-1742	1	Switch
22	92-6784	1	Control-Throttle Twin
23	32144-32	4	Screw
24	92-6783	1	Control - Choke Twin
25	99-8035	1	Decal - Dash Lens
26	92-6705	1	Lens - Dash Hm
27	94-4208	1	Hourmeter
28	94-1714	1	Housing - Light
29	94-6961	3	Screw
30	32144-8	2	Screw-HH
31	98-7249	4	Relay-Spdt
32	99-8072	1	Harness-6 Lamp
33	99-1933	1	Module-Low Voltage
34	32105-12	2	Screw
35	3296-2	2	Nut-Lock Esna
36	99-3701	1	Module-Nmir, Clutch
37	3296-42	2	Nut-Lock Ni

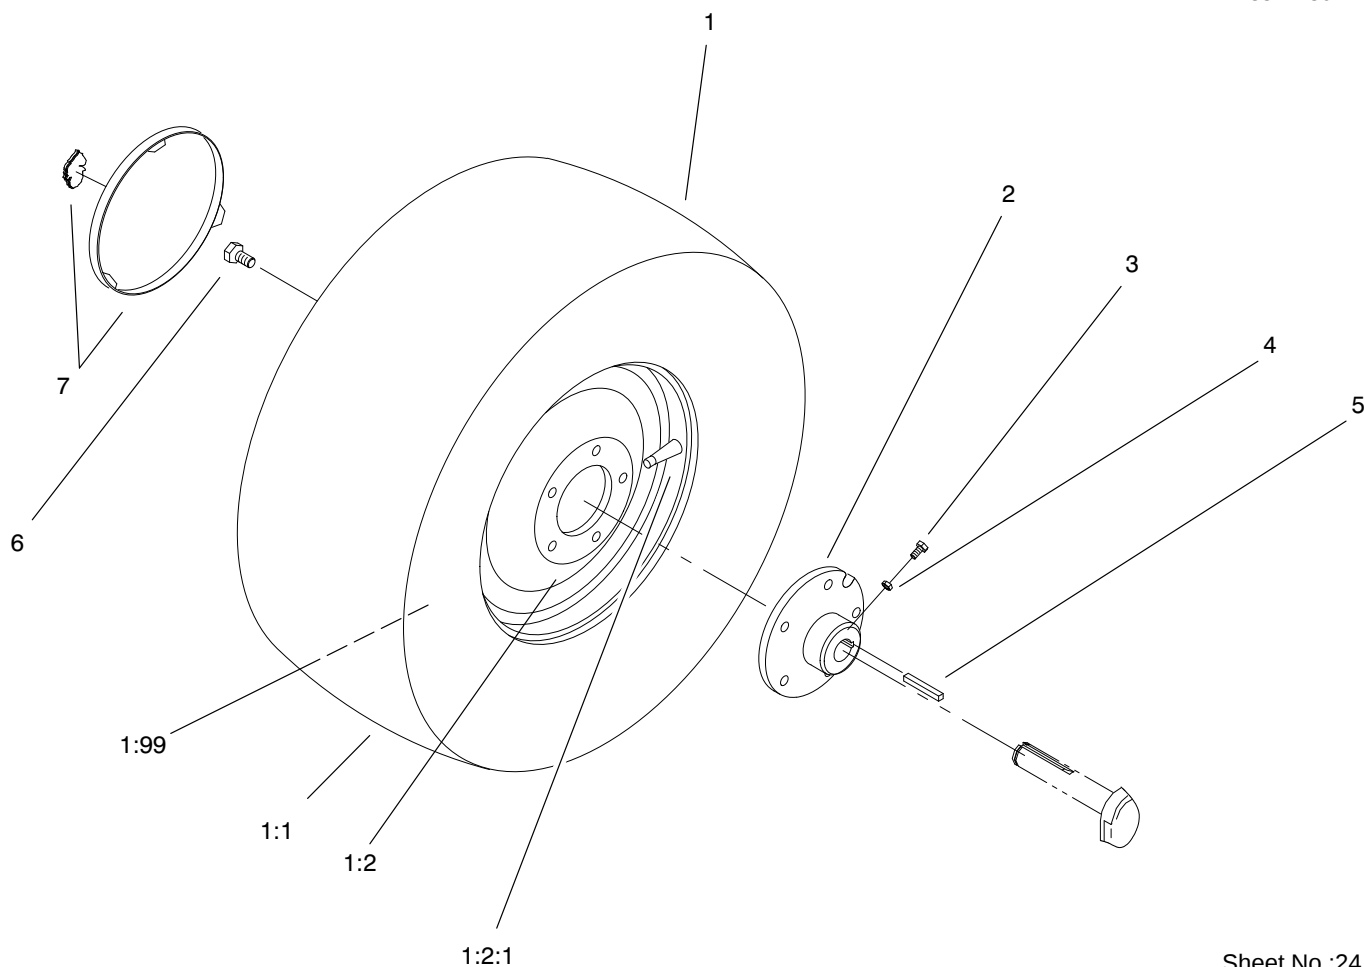


Sheet No.:24

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1		2	Wheel&tire ASM,Rear
1:1	99-2334	1	Tire
1:2	78-1221	1	Wheel
1:2:1	5108	1	Valve-Tubeless Tire
1:99	7007	1	Tube-Inner
2	93-3659-03	2	Hub-Wheel
3	3243-5	4	Screw-Set
4	3218-3	4	Nut-Jam
5	5-1336	2	Key
6	83-2720	10	Lug-Bolt
7	94-3718	2	Hubcap ASM - 12", Ygt (Horsehead Logo) (Only On: 72106)

Ref. No.	Part No.	Qty.	Description

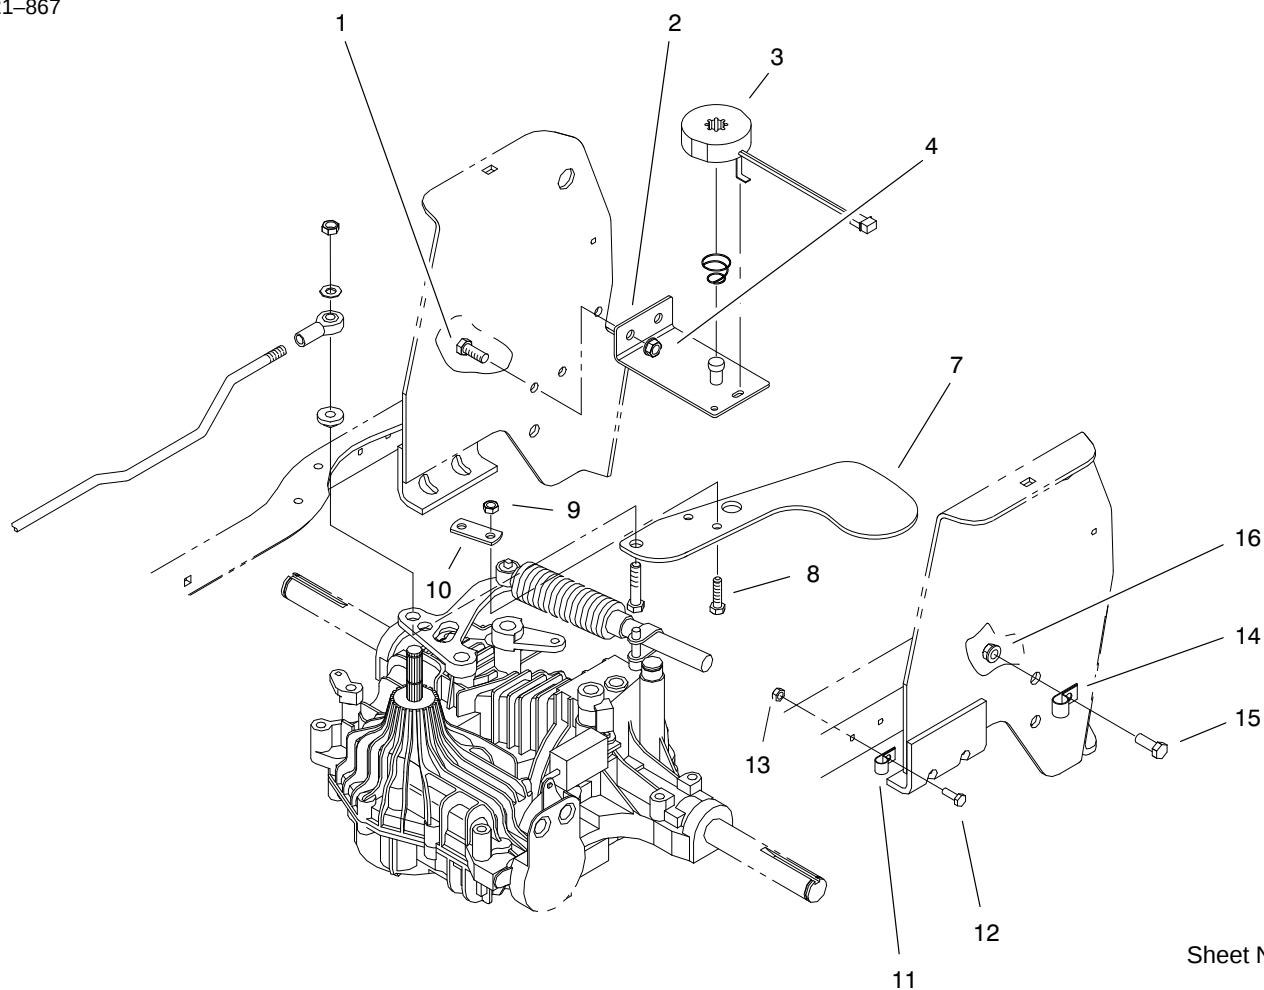


Sheet No.:25

Cruise Control Assembly

Ref. No.	Part No.	Qty.	Description
1	323-6	2	Screw-HH
2	99-6767-03	1	Bracket - Cruise, Wa
3	93-4366	1	ASM - Magnet
4	3296-39	3	Nut-Lock Ni
7	93-0511	1	Arm - Cruise
8	322-5	2	Screw-HH
9	3296-29	2	Nut-Lock Ni
10	93-0515	1	Clamp - Cruise
11	2412-89	1	R-Clamp Vinyl Covered
12	321-4	1	Screw-HH
13	3296-42	1	Nut-Lock Ni
14	99-8719	1	Clip-Light Duty
15	323-6	1	Screw-HH
16	3296-22	1	Nut-Lock

Ref. No.	Part No.	Qty.	Description

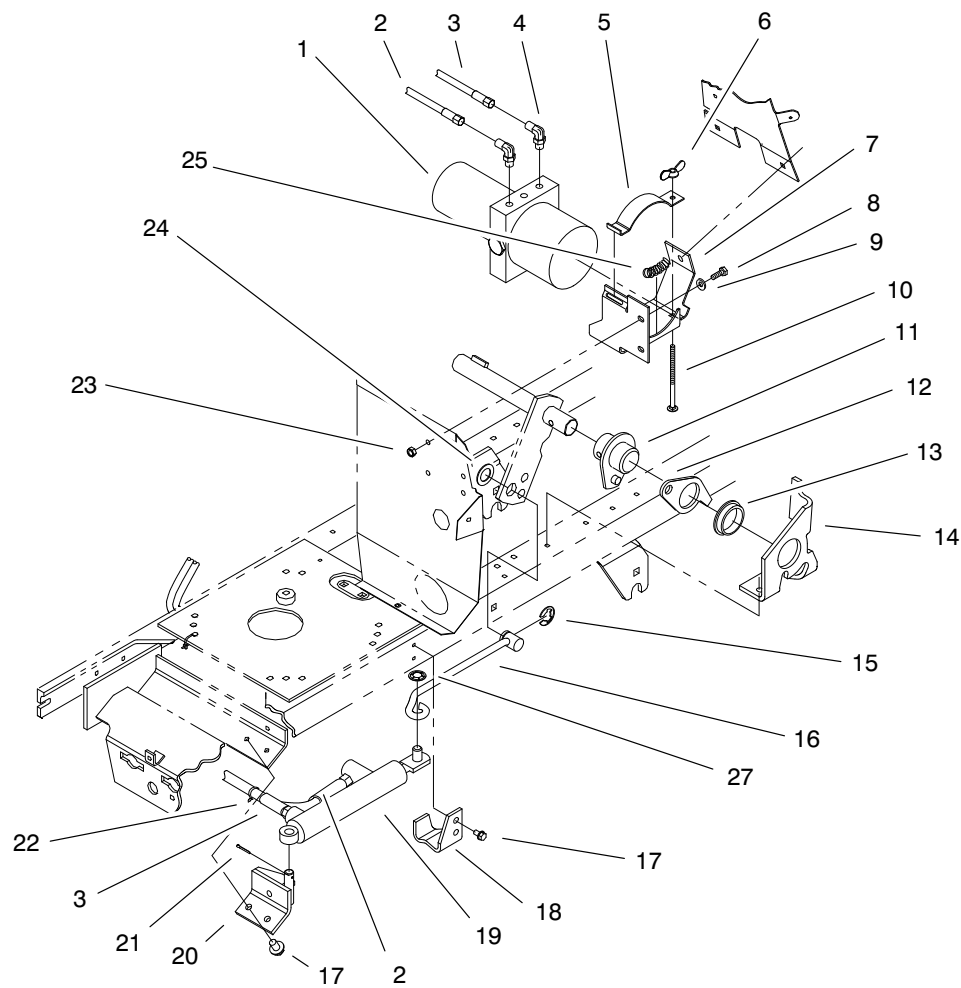


Sheet No.:26

Power Lift Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1700	1	Pump – Hydraulic	24	1278	1	Washer
2	94-3344	1	Hose – Hydraulic	25	94-1743	1	Tubing – Conduit
3	94-1713	1	Hose – Hydraulic	27	92-7047	1	Pushnut
4	94-3561	2	Ring-O Male Jic 90 DEG				
5	94-1748-03	1	Clamp-Hydraulic				
6	32103-22	1	Nut-Wing				
7	94-1747-03	1	Brkt- Pump Mounting (Black)				
8	321-4	2	Screw-HH				
9	3256-22	2	Washer-Flat				
10	3229-33	1	Screw-CARR (only on: 72106)				
11	94-3553	1	Wa – End Cap				
12	94-4927	1	Arm – HOC				
13	92-6869	1	Bushing				
14	94-4928	1	Bracket – Lift Arm				
15	5618	1	E-Ring				
16	94-1708	1	Wa – Lift Rod				
17	32144-14	5	Screw-HWH				
18	94-1709-03	1	Bracket – Support				
19	94-1701	1	Cylinder – Hydraulic				
20	94-1705	1	Cyl Mtg Brkt				
21	3272-6	1	Pin-Cotter				
22	614249	1	Strap-Tie Sm				
23	3296-8	2	Nut-Lock Ni				

Tuff Torq Transmission K61 (Toro)

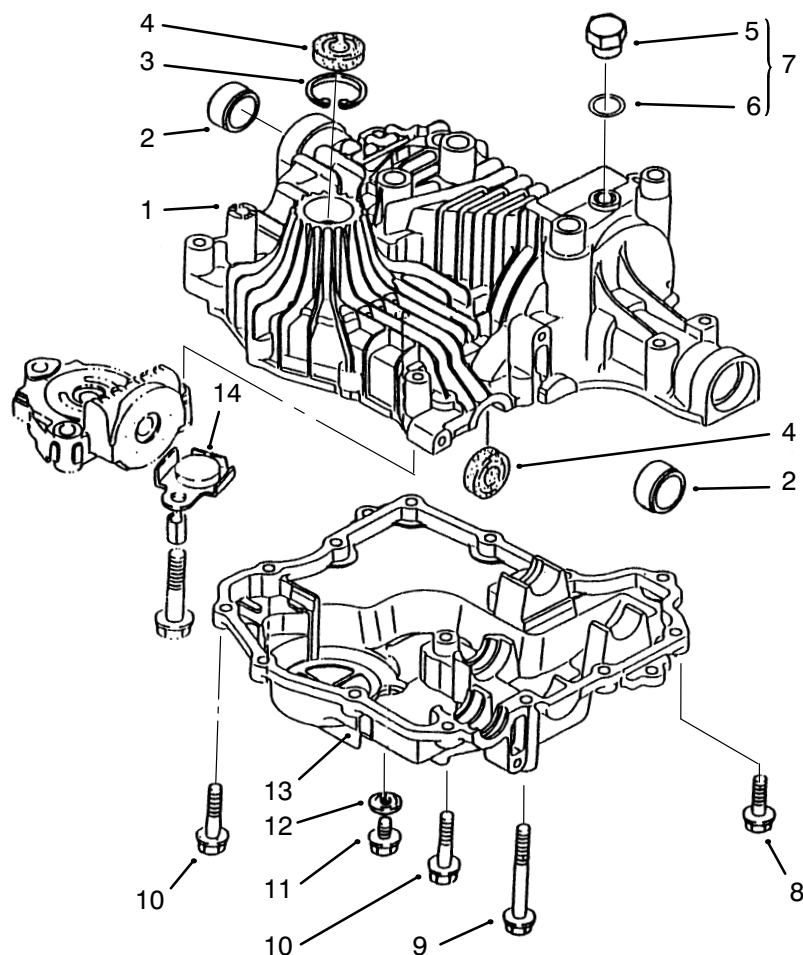

Sheet No.: 401


c-1860

Transaxle Case

Ref. No.	Part No.	Qty.	Description
1	94-4206	1	Upper Case ASM INC 2-6
†2		2	Bushing
†3	93-0360	1	Ring
†4	93-0361	2	Seal
†5		1	Plug
†6		1	Packing
7	93-0356	1	Plug/Packing INC 5-6
8	93-0363	11	Screw-TAP
9	93-0354	1	Bolt
10	93-0364	2	Screw-TAP
11	93-0362	1	Bolt
12	93-0359	1	Washer-Seal
13	94-4207	1	Case-Lower
14	93-0355	1	Magnet

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

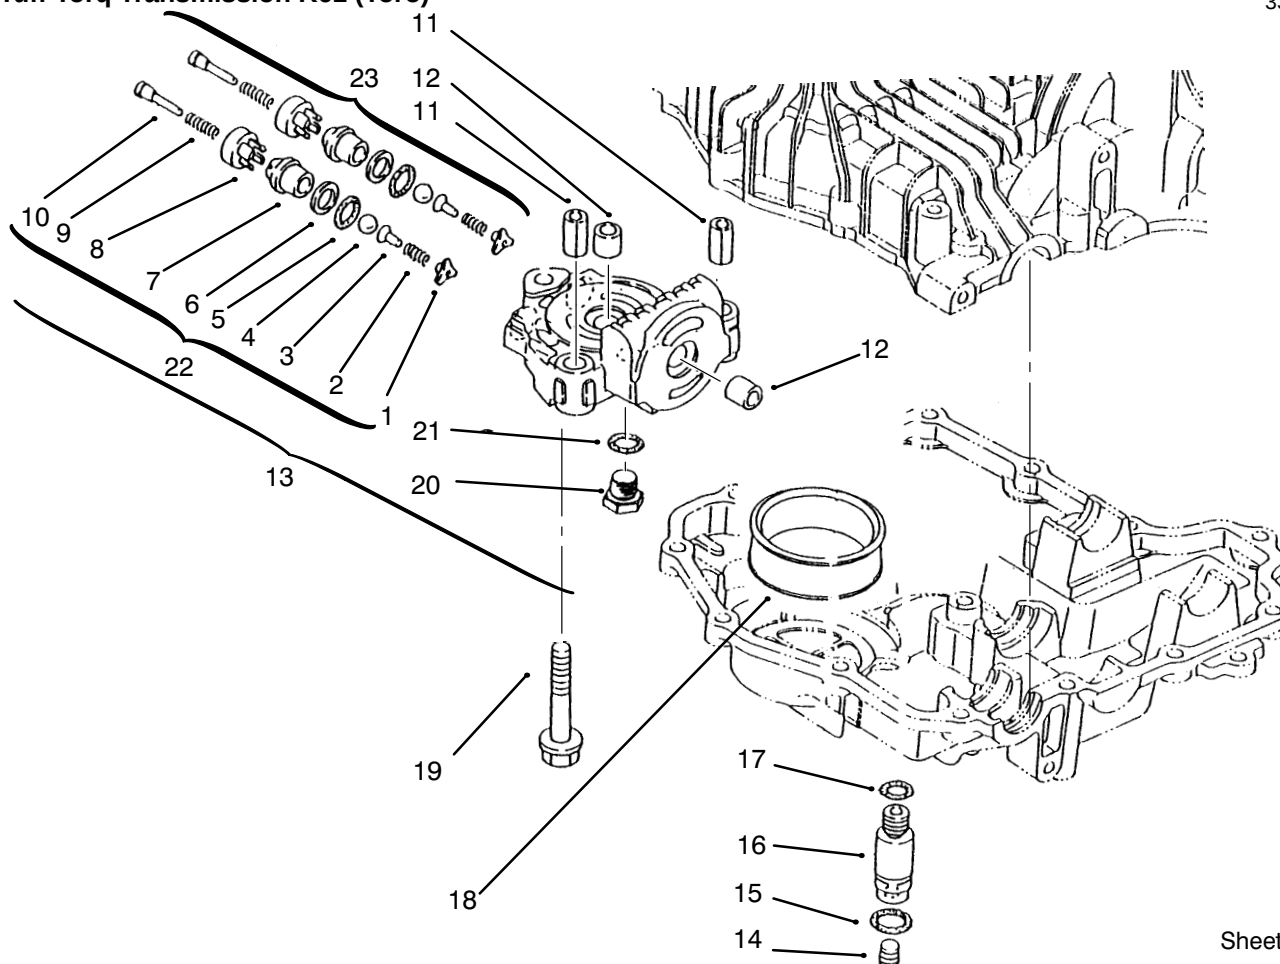


C-1877

Center Case

Ref. No.	Part No.	Qty.	Description
†1	93-0461	2	Holder-Bypass
†2		2	Spring
†3		2	Holder-Ball
†4		1	Ball
†5	93-0465	2	Packing
†6	93-0466	2	Ring-Back Up
†7		1	Sleeve A1
†8		2	Valve B
†9		2	Spring
†10		2	Pin-Push
†11	93-0471	2	Pin-Knock
†12	93-0472	2	Bushing
13	93-0484	1	Case INC 11-12 & 20-23
14	93-0474	1	Plug
15	93-0475	1	Packing
16	93-0476	1	Connector
17	93-0481	1	Packing
18	93-0478	1	Filter
19	93-0479	3	Bolt
20	93-0480	1	Plug
21	93-0481	1	Packing
22	93-0482	1	Valve ASM A1 INC 1-10
23	93-0483	1	Valve ASM A2

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

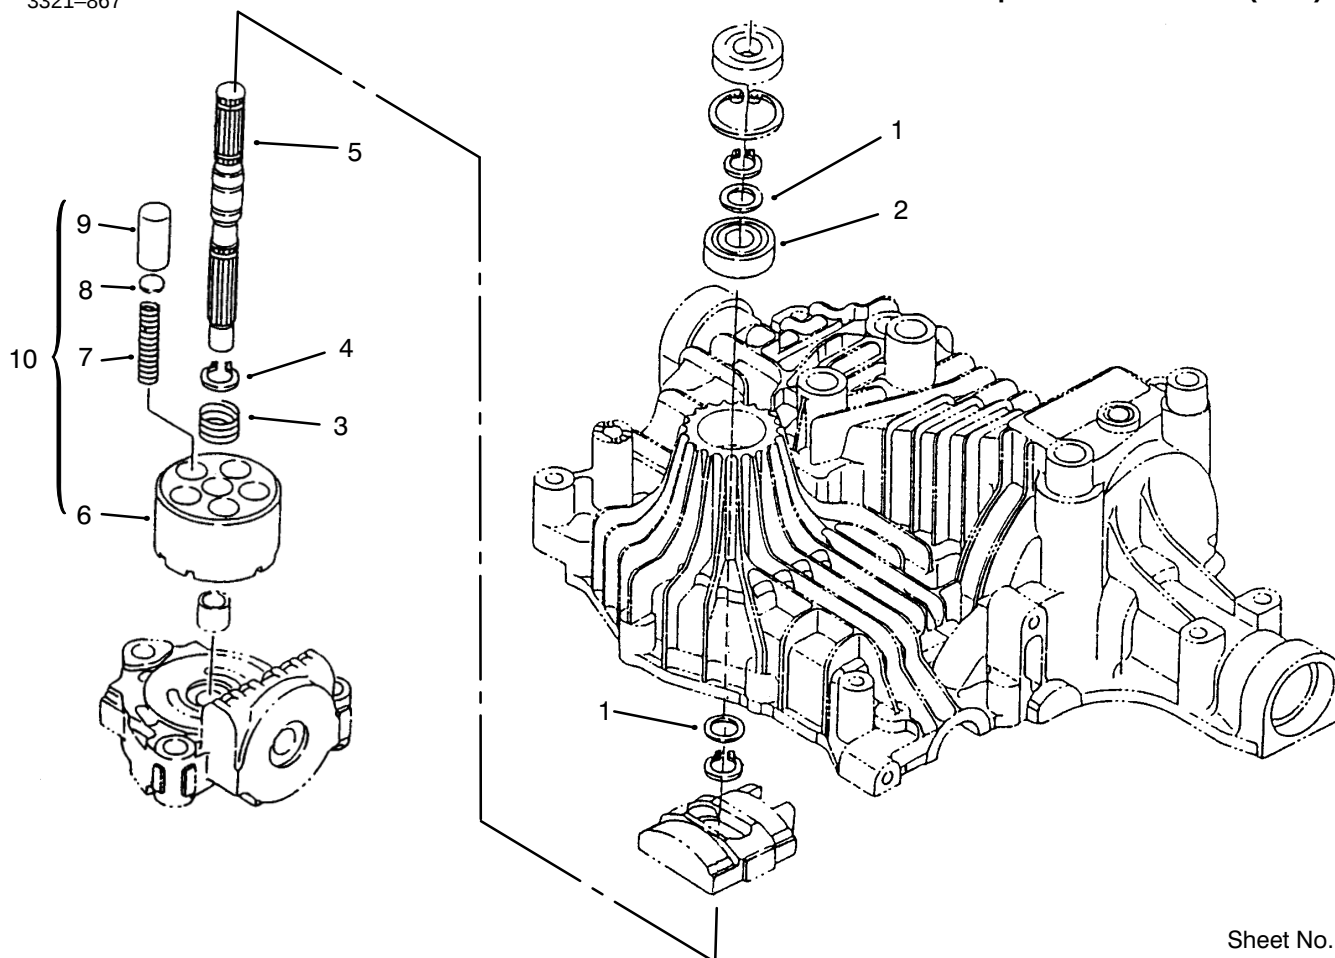

Sheet No.: 403


C-1861

Pump Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0371	2	Washer
2	93-0374	1	Bearing-Ball
3	93-0370	1	Spring
4	93-0373	3	Ring-Snap
5	93-0372	1	Shaft-Pump
†6		1	Block-Cylinder
†7		5	Spring
†8		5	Washer
†9		5	Piston
10	93-0365	1	Cylinder ASM INC 6-9

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

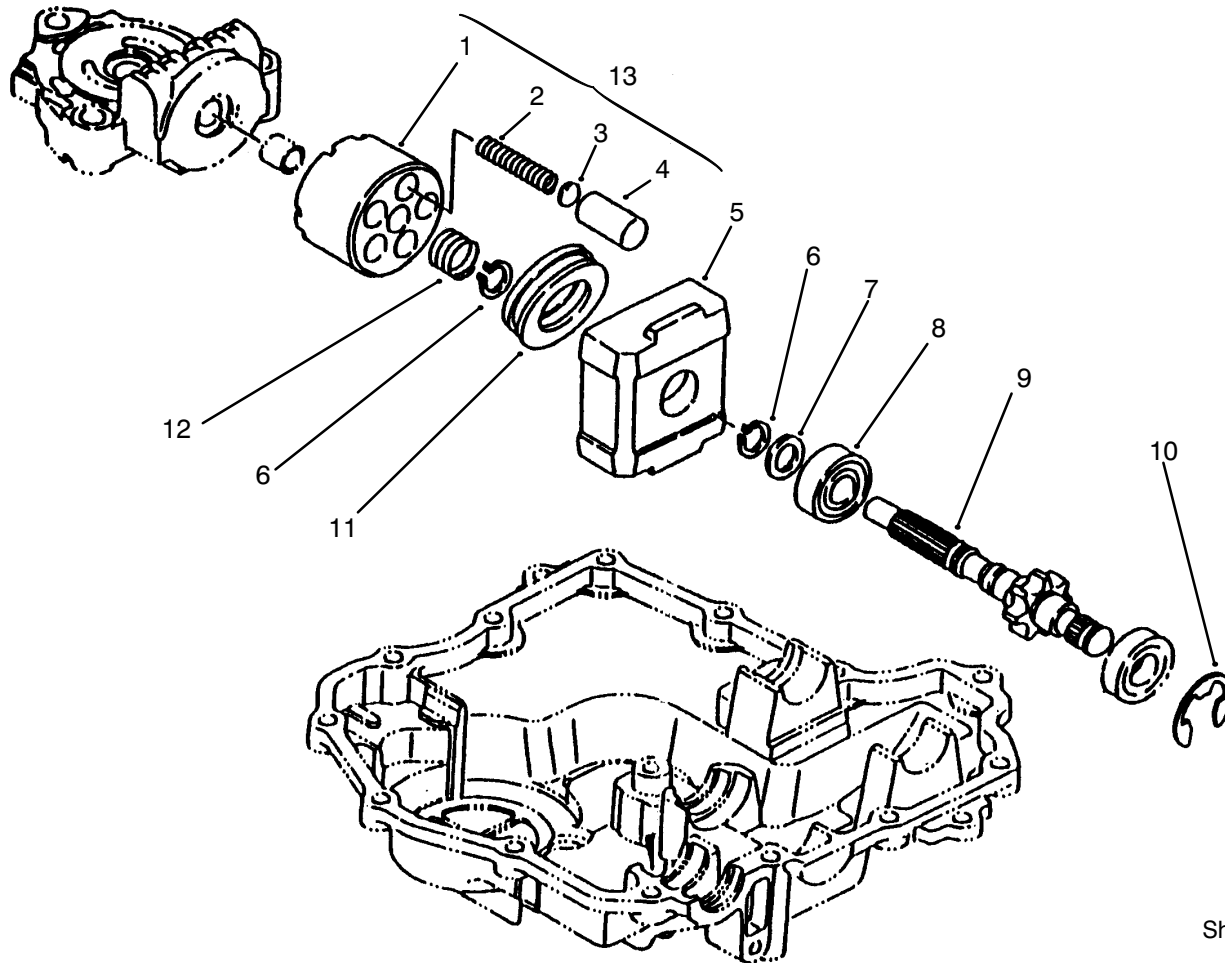


Sheet No.: 404

c-1862

Motor Shaft

Ref. No.	Part No.	Qty.	Description
1		1	Block-Cylinder
2		1	Spring
3		5	Washer
4		5	Piston
5	93-0375	1	Housing
6	93-0373	2	Ring-Snap
7	93-0371	1	Washer
8	93-0374	1	Bearing-Ball
9	93-0386	1	Shaft-Motor
10	93-0387	1	E Ring
11	93-0376	1	Bearing-Thrust
12		1	Spring
13	93-0365	1	Cylinder ASM INC
			1-4

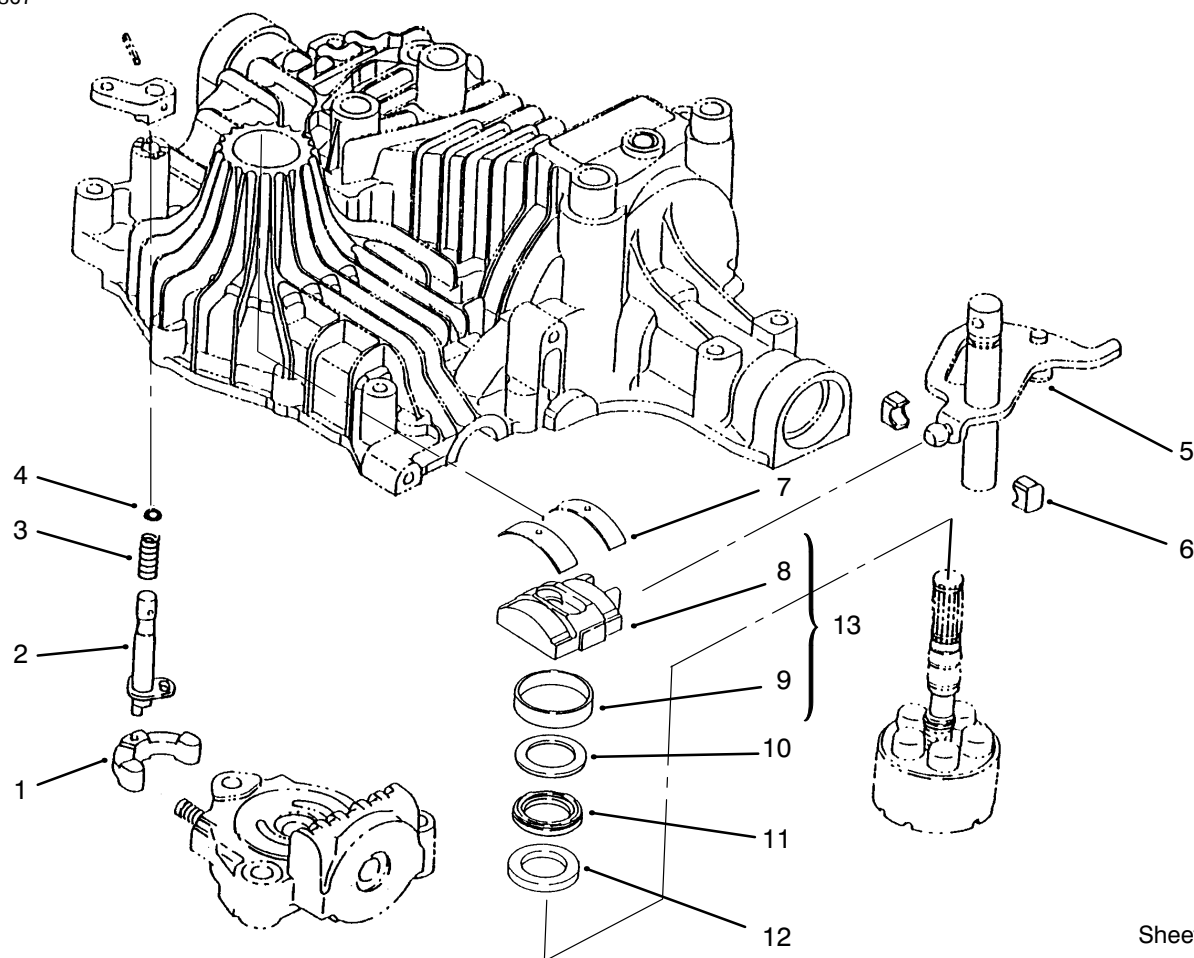

Sheet No.: 405


c-1863

Range Shift


Ref. No.	Part No.	Qty.	Description
1	93-0395	1	Arm
2	93-0397	1	Shaft-Bypass
3	93-0396	1	Spring
4	93-0400	1	Packing
5	93-0398	1	Block Set INC 6
†6		1	Block-Shift
7	93-0388	2	Thrust Metal
†8		1	Plate-Swash
†9		1	Bushing-Swashplate
10	93-0394	1	Plate-Thrust
11	93-0392	1	Bearing
12	93-0393	1	Plate-Thrust
13	93-0389	1	Swash Plate INC 8-9

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly



Ref. No.	Part No.	Qty.	Description
1	93-0401	1	Rod-Bypass
2	93-0402	1	Arm-Valve Release
3	93-0403	1	Pin-Roll

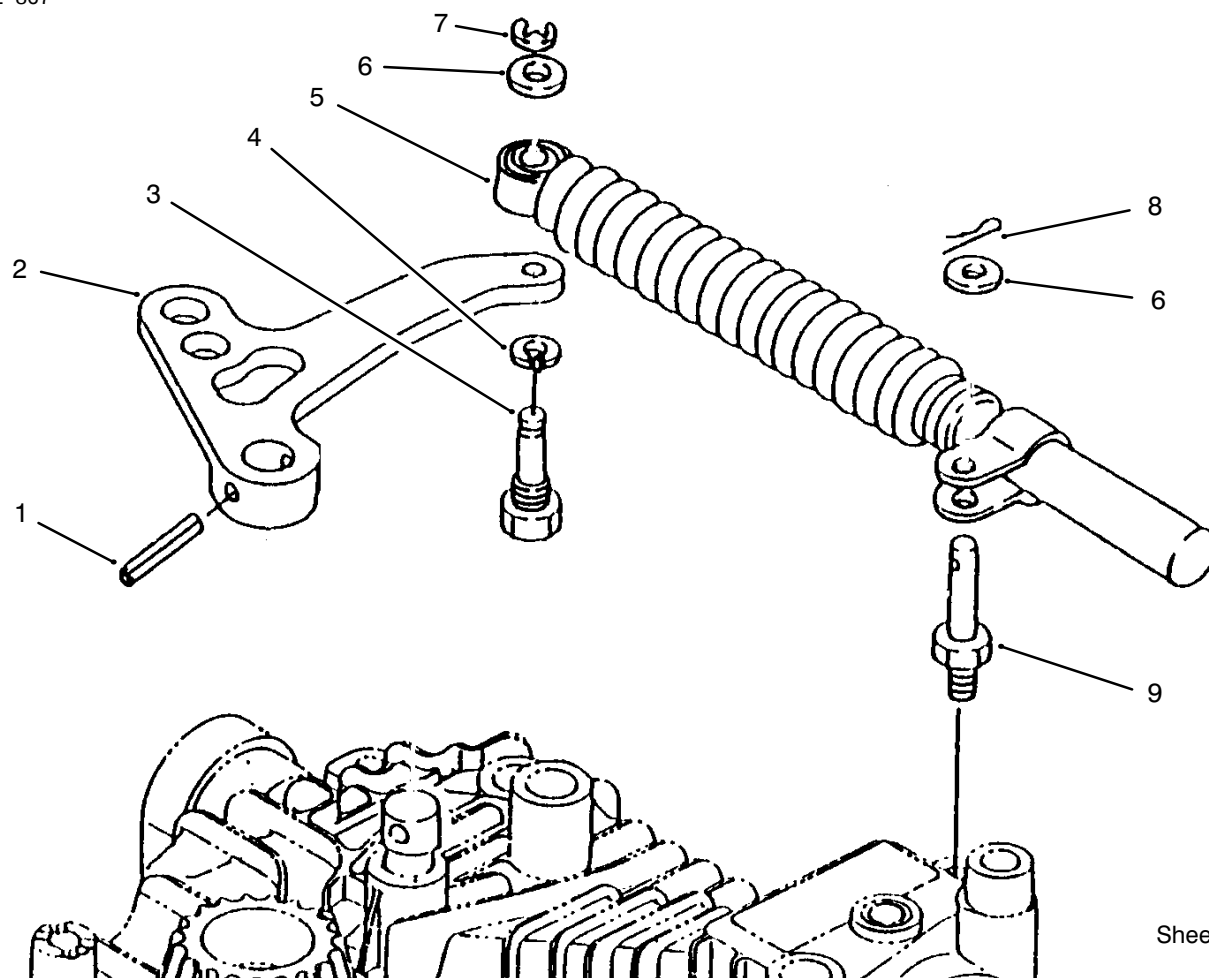


Sheet No.: 407

C-1865

Lever Damper

Ref. No.	Part No.	Qty.	Description
1	93-0411	1	Pin-Roll
2	93-0404	1	Arm
3	99-6763	1	Bolt
4	93-0409	1	Washer
5	99-6761	1	Shock Absorber
6	93-0408	2	Washer
7	93-0410	1	Ring
8	93-0412	1	Pin-Cotter
9	99-6762	1	Stud

Ref. No.	Part No.	Qty.	Description

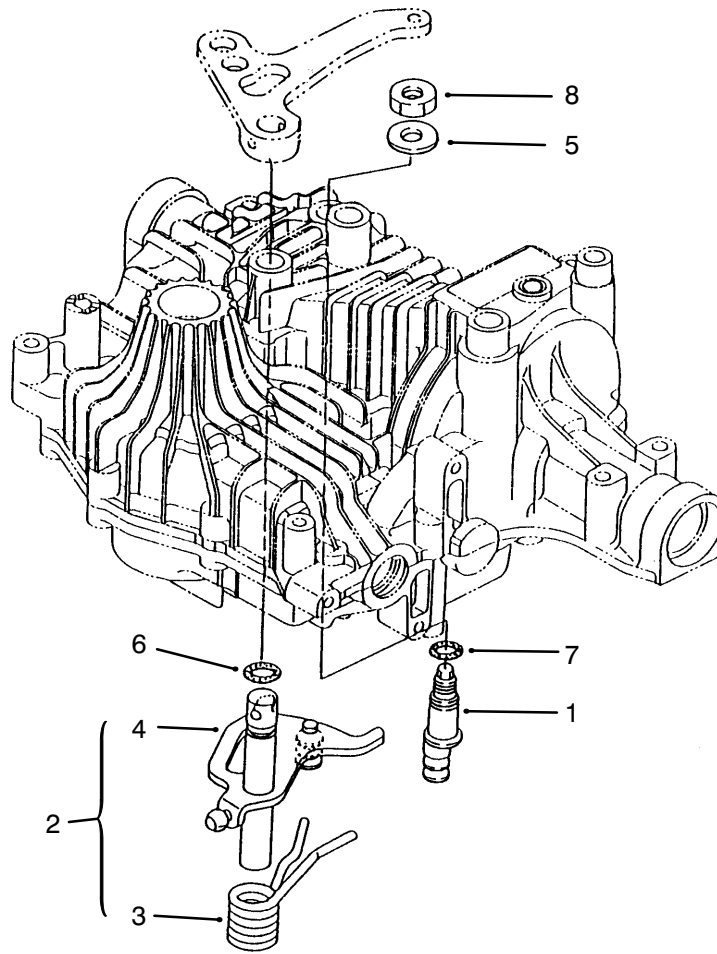

Sheet No.: 408


C-1866

N-Centering

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-0413	1	Fulcrum				
2	93-0414	1	Shaft ASM INC 3-4				
†3		1	Spring				
†4		1	Shaft-Control				
5	93-0417	1	Washer				
6	93-0418	1	Packing				
7	93-0419	1	Packing				
8	93-0420	1	Nut				

† Included in a service kit or in an assembly

Tuff Torq Transmission K61 (Toro)

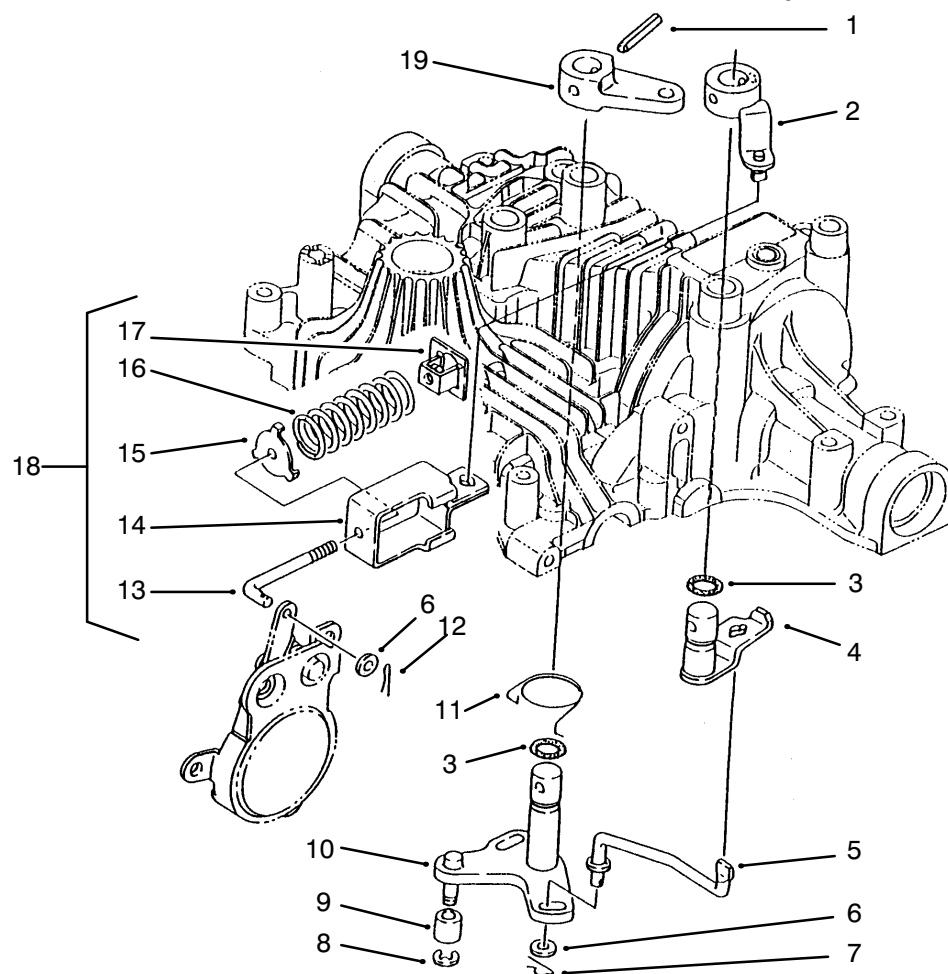

Sheet No.: 409


C-1867

Brake Interlock

Ref. No.	Part No.	Qty.	Description
1	93-0411	2	Pin-Roll
2	93-0433	1	Arm-Brake B
3	93-0418	2	Packing
4	93-0432	1	Arm-Brake A
5	93-0431	1	Rod-Brake
6	93-0435	2	Washer
7	93-0434	1	Pin-Snap
8	93-0410	1	Ring
9	93-0421	1	Bushing
10	93-0430	1	Shaft-Brake
11	93-0422	1	Return-Brake
12	93-0412	1	Pin-Cotter
†13	93-0428	1	Rod-Adjuster
†14	93-0426	1	Holder-Spring
†15	93-0425	1	Guide-Spring
†16	93-0427	1	Spring
†17	93-0424	1	Adjuster
18	93-0423	1	Rod ASM INC 13-17
19	93-0429	1	Arm-Brake

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

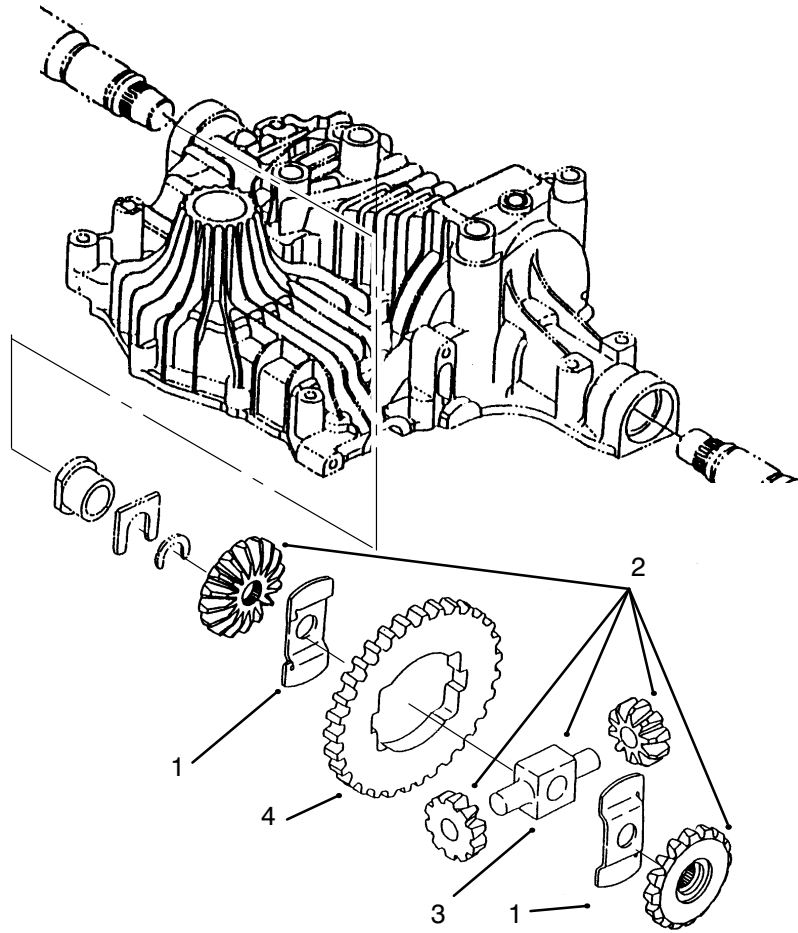


Sheet No.: 410

c-1868

Differential Gear

Ref. No.	Part No.	Qty.	Description
1	93-0444	2	Washer-Thrust
2	95-7871	1	Kit-Gear ASM (Used before Ser. Nos. 15132)
2	95-7872	1	Kit-Gear ASM (Used after Ser. Nos. 15131 & UP)
3	93-0443	1	Shaft-Pinion
4	93-0445	1	Gear-Final

Ref. No.	Part No.	Qty.	Description

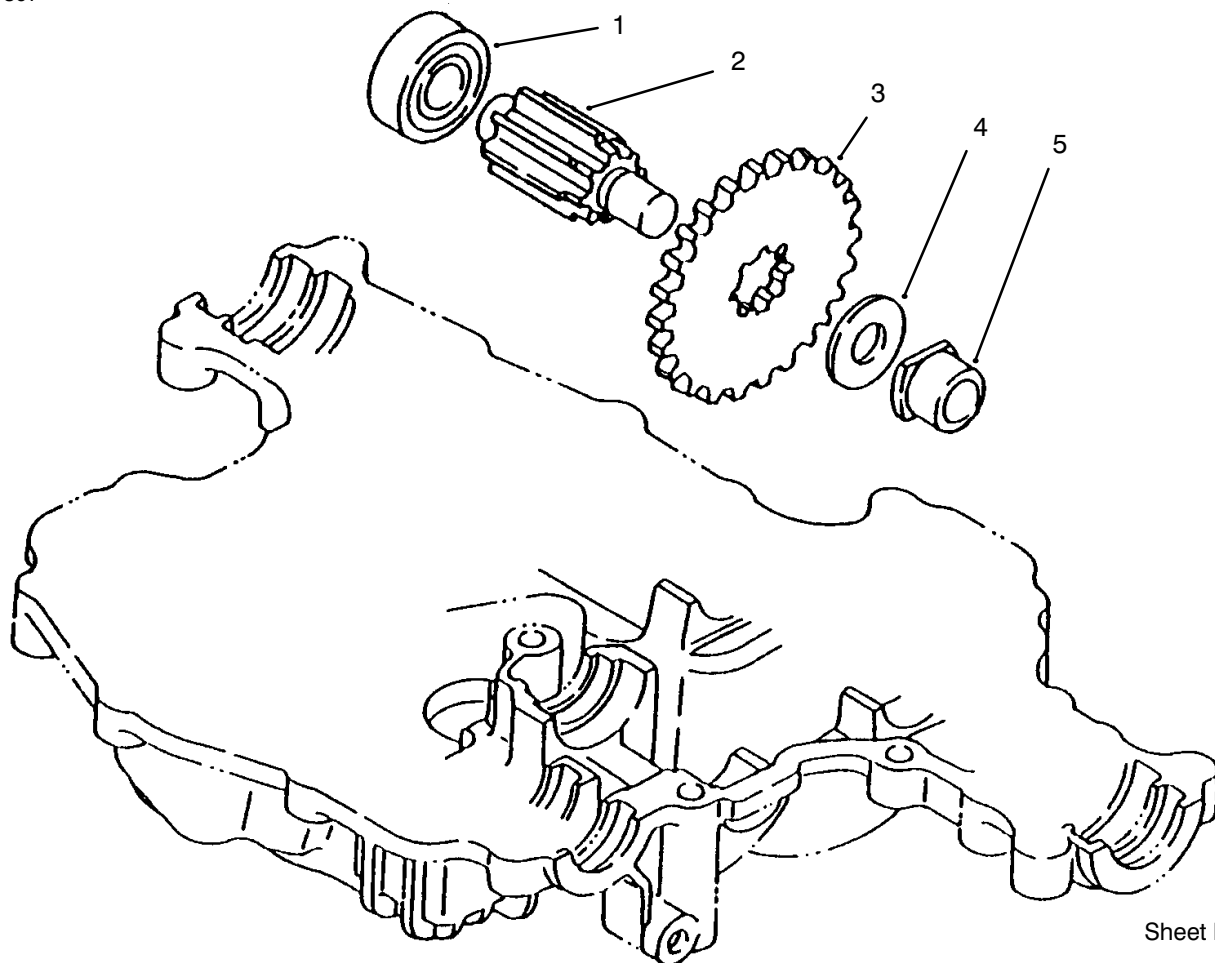


Sheet No.: 411

C-1869

Final Pinion


Ref. No.	Part No.	Qty.	Description
1	93-0446	1	Bearing
2	93-0447	1	Shaft-Final Pinion
3	93-0448	1	Gear-Final Shaft
4	93-0449	1	Washer
5	93-0450	1	Bushing

Ref. No.	Part No.	Qty.	Description

 

Ref. No.	Part No.	Qty.	Description
1	93-0451	2	Seal
2	93-0452	1	Shaft-Axle Right
3	93-0454	2	Bushing
4	93-0455	2	Washer-Thrust
5	93-0456	2	Ring
*	93-0453	1	Shaft-Axle Left

32

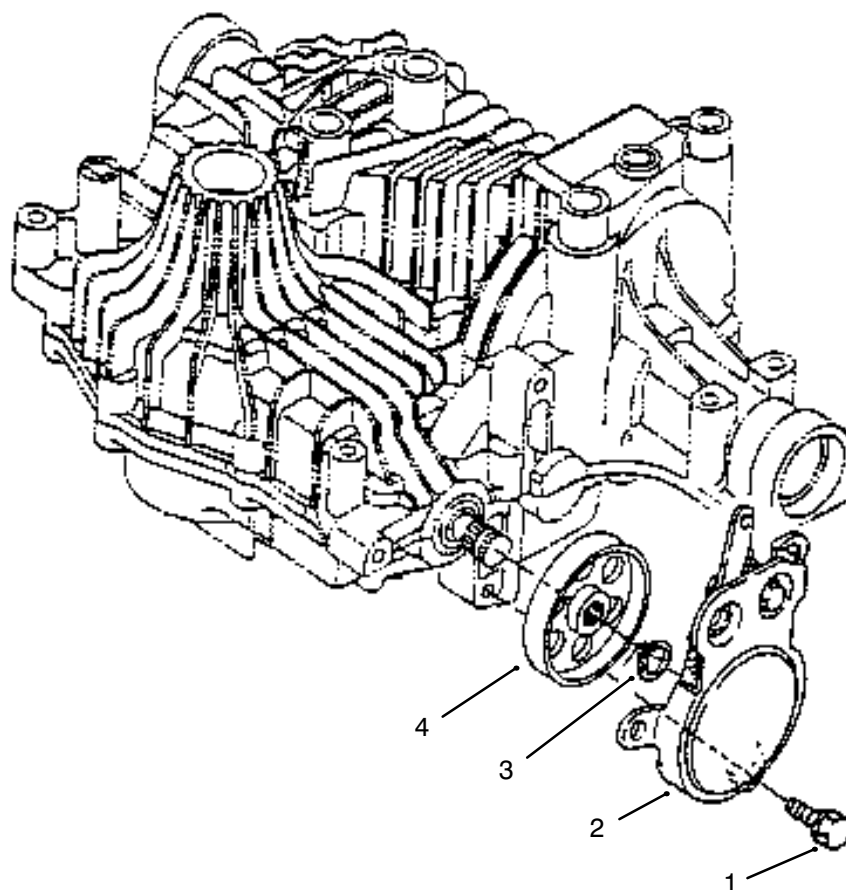


Sheet No.: 413
C-1871

Brake

Ref. No.	Part No.	Qty.	Description
1	93-0457	3	Bolt w/Washer
2	93-0458	1	Band-Brake Interlock
3	93-0373	1	Ring-Snap
4	93-0460	1	Drum-Brake


Ref. No.	Part No.	Qty.	Description

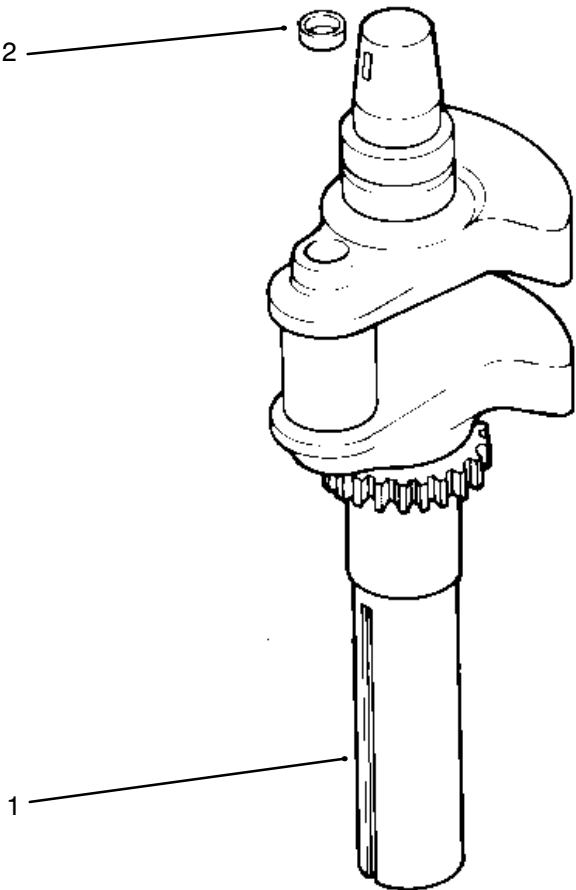

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	24 014 42	1	Crankshaft
2	52 139 09	1	Plug-Cup

Ref. No.	Part No.	Qty.	Description

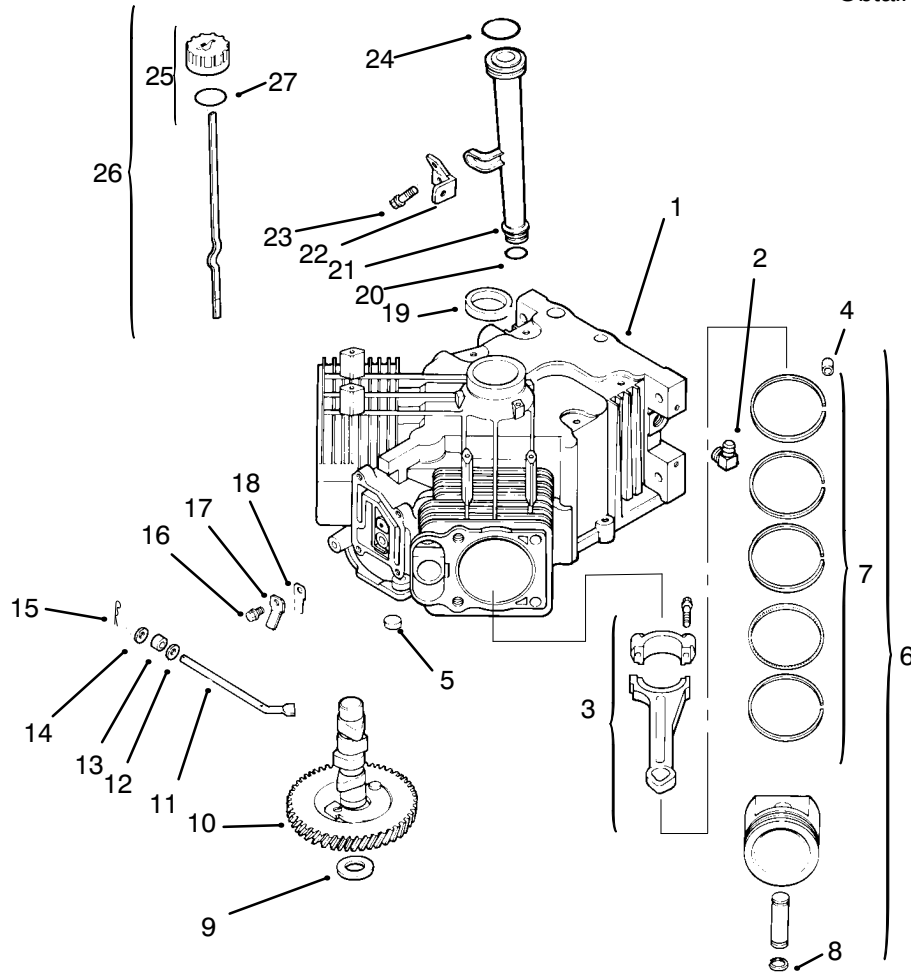

Sheet No.: 202

C-1960


Crankcase

Ref. No.	Part No.	Qty.	Description
1	24 522 09	1	Short Block
2	25 155 02	1	Connector-90 DEG
3	24 067 01	2	Connecting Rod STD
3	24 067 02	2	Connecting Rod .25
†4	12 380 03	6	Dowel-Locating
5	52 139 09	1	Plug-Cup
6	24 874 01	2	Piston ASM STD INC 4/7/8
6	24 874 02	2	Piston ASM .25 INC 4/7/8
6	24 874 03	2	Piston ASM .50 INC 4/7/8
†7	24 108 01	2	Ring Set STD INC 4/8
7	24 108 02	2	Ring Set .25 INC 4/8
7	24 108 03	2	Ring Set .50 INC 4/8
†8	24 018 01	4	Retainer-Piston Pin
9	12 422 07	1	Shim-Camshaft A/R
9	12 422 08	1	Shim-Camshaft A/R
9	12 422 09	1	Shim-Camshaft A/R
9	12 422 10	1	Shim-Camshaft A/R
9	12 422 11	1	Shim-Camshaft A/R
9	12 422 12	1	Shim-Camshaft A/R
9	12 422 13	1	Shim-Camshaft A/R
10	24 012 05	1	Camshaft
11	24 144 01	1	Shaft-Governor Cross
12	X-25-63	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
13	12 032 01	1	Seal-Governor Shaft
14	X-25-102	1	Washer-Flat
15	12 380 04	1	Pin-Governor Hitch
16	M-0545010	2	Screw M5x0.8x10
17	24 018 04	2	Retainer-Reed
18	24 402 01	2	Beed-Breather
19	24 032 01	1	Seal-Oil
20	12 153 01	1	O Ring-Lower Fill Tube
21	12 123 04	1	Tube-Oil Fill
22	24 126 19	1	Bracket-Oil Fill Tube
23	M-0549016	1	Screw M5x0.8x16
24	12 153 02	1	O Ring-Upper Fill Tube
25	24 038 04	1	Dipstick INC 26-27
†26	25 755 13	1	Kit-Oil Cap INC 3
†27	12 153 03	1	O Ring-Fill Cap
*	24 755 03	1	Gasket Set

† Included in a service kit or in an assembly

* Not illustrated

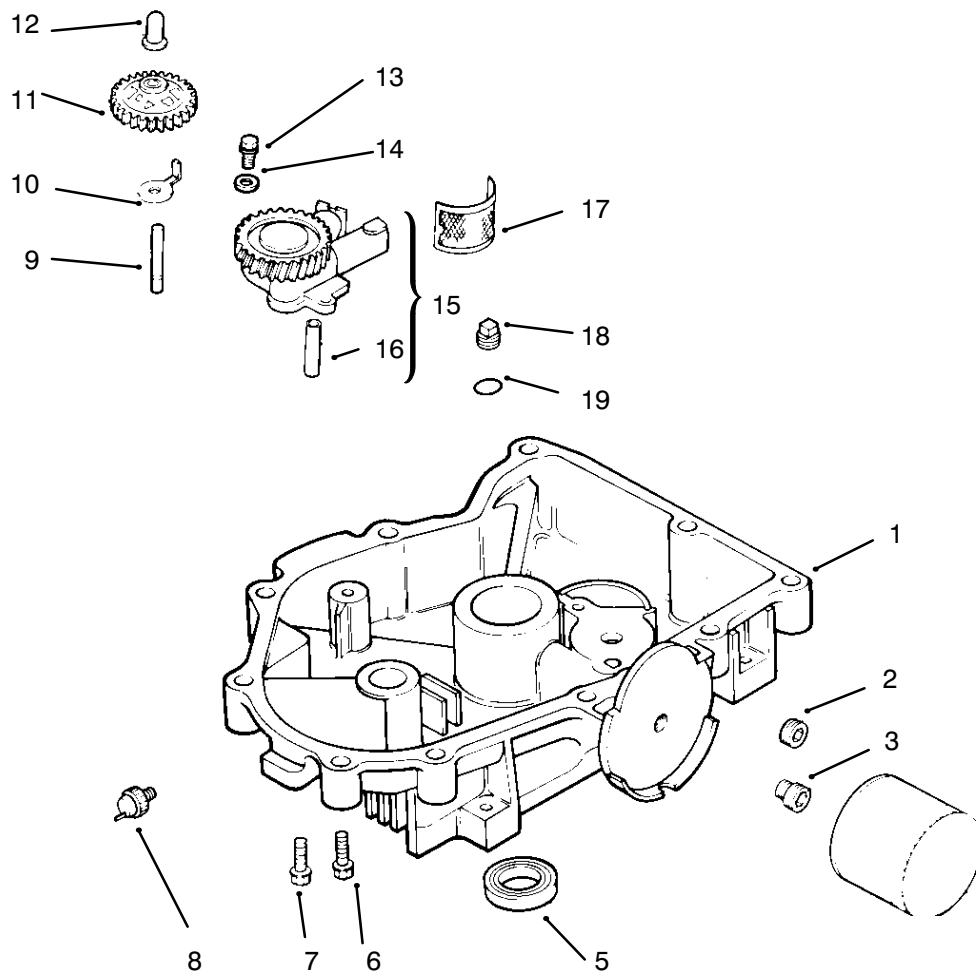


Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	24 199 01	1	Oil Pan				
2	X-75-32	1	Plug-HS 3/8 NPTF				
3	24 136 01	1	Nipple-Oil Filter				
4	12 050 01	1	Filter-Oil				
5	52 032 08	1	Seal-Oil				
6	24 086 17	1	Screw M8x1.25x45				
7	24 086 16	9	Screw M8x1.25x45				
8	52 099 06	1	Switch-Oil Pressure				
9	12 144 02	1	Shaft-Governor Gear				
10	52 448 02	1	Tab-Locking				
11	24 043 11	1	Governor Gear ASM				
12	12 380 01	1	Pin-Governor Regulating				
13	M-0645025	2	Screw-Valve Cover				
14	Sm-0631005	2	Washer-Governor				
15	24 393 05	1	Oil Pump ASM INC 16				
†16	24 123 05	1	Tube-Oil Pickup				
17	12 162 02	1	Screen-Oil Pickup				
18	X-75-10	1	Plug-SH 3/8 NPTF				
19	24 153 08	1	O Ring				
*	25 113 05	1	Decal-Oil Sentry				

† Included in a service kit or in an assembly

* Not illustrated

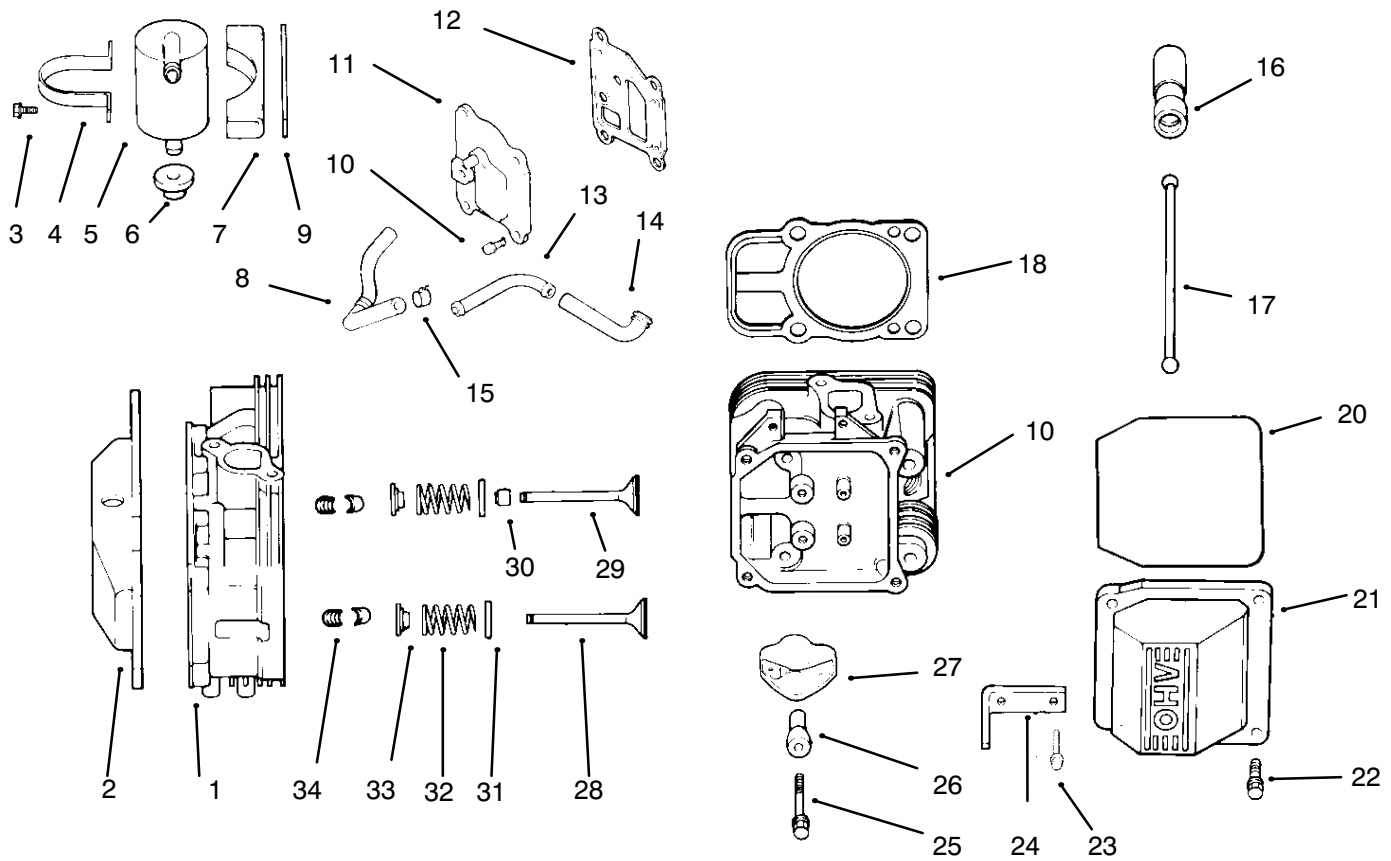


Sheet No.: 204

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	24 318 11	1	Head ASM-#1
2	24 096 16	1	Cylinder
3	24 755 20	1	Cover-Rocker
†4	25 313 02	1	Kit-Breather INC 4
5	24 096 15	1	Grommet-Rubber
6	Sm-0645020	1	Cover-Breather
7	24 326 05	4	Screw M6x1.0x20
8	12 755 03	1	Hose-Breather
9	12 173 01	4	Kit-Retainer
10	24 089 02	4	Cap-Valve Spring
11	52 018 01	4	Spring-Valve
12	24 016 01	4	Retainer-Spring
13	24 017 01	2	Valve-Exhaust
14	24 032 05	2	Valve-Intake
15	24 294 02	2	Seal-Valve Stem
16	24 326 04	1	Fitting
17	12 351 01	1	Hose-Breather
18	24 411 02	4	Lifter-Valve
19	24 041 08	4	Rod-Push
20	24 318 12	2	Gasket-Cylinder Head
21	24 186 02	1	Head ASM-#2
22	24 194 01	4	Cylinder
23	M-0640034	4	Arm-Rocker
24	24 096 12	4	Ball-Rocker Pivot
		4	Screw M6x1.0x34
		1	Cover-Rocker

Ref. No.	Part No.	Qty.	Description
25	12 086 16	8	Screw M10x1.5x91
26	M-0651030	8	Screw M6x1.0x30
27	24 445 01	1	Strap-Lifting

† Included in a service kit or in an assembly

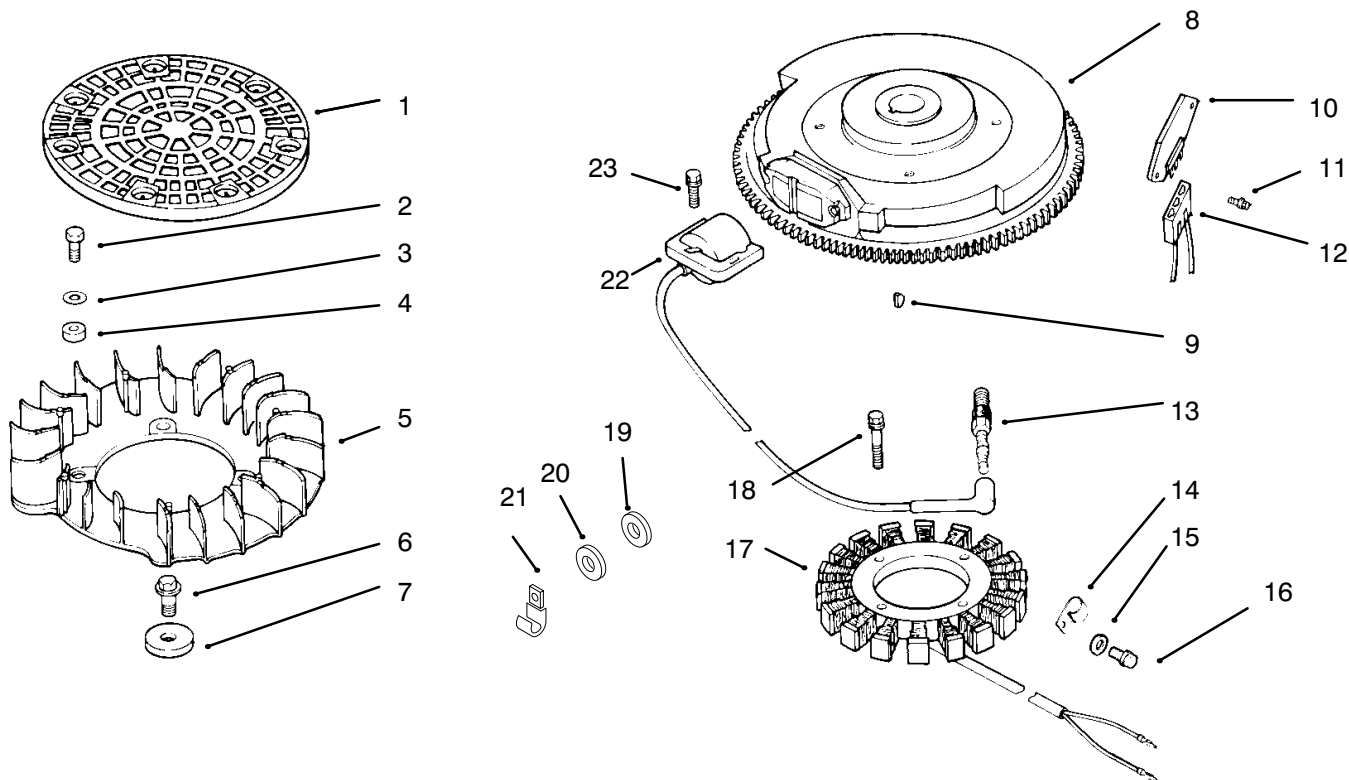


Sheet No.: 205
C-1963

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	24 162 17	1	Screen-Grass
2	M-0401025	4	Screw M4x0.7x24
3	X-25-92	4	Washer-Flat
4	24 112 04	1	Spacer-Fan
5	24 157 03	1	Fan
6	M-0639016	4	Screw M6x1.0x16
7	12 112 01	4	Spacer-Fan
8	24 025 04	1	Flywheel ASM
9	X-42-15	1	Key
10	25 403 03	1	Rectifier-Regulator
11	24 086 06	2	Screw-Phillips
12	236602	1	Connector-Regulator
13	12 132 02	2	Spark Plug
14	48 154 02	1	Clip-Stator Harness
15	12 468 03	1	Washer-Flywheel
16	12 086 14	1	Screw-Flywheel Mounting
17	24 085 01	1	Stator-15 Amp
18	M-0548025	2	Screw M5x0.8x25
19	X-25-63	2	Washer-Flat
20	X-25-92	2	Washer-Flat
21	235173	1	Clip-Cable
22	24 584 01	1	Module-Ignition
23	M-0545020	4	Screw M5x0.8x20
*	24 113 18	1	Decal-Grass Screen


Ref. No.	Part No.	Qty.	Description
*	24 176 06	1	Harness-Wire
*	24 518 04	1	Lead-Green

 * Not illustrated



Ref. No.	Part No.	Qty.	Description
1	24 027 20	1	Housing–Blower ASM
2	M–0549016	3	Screw M5x0.8x16
3	Sm–0645016	4	Screw M6x1.0x16
4	24 314 05	1	Guard–Flywheel
5	24 146 02	1	Plate–Backing #2 Side
6	M–0545020	2	Screw M5x0.8x20
7	M–0551016	1	Screw M5x0.8x14
8	24 063 20	1	Baffle–Cylinder #2 Side
9	24 063 15	1	Baffle–Valley #1 Side
10	M–0549010	2	Screw M5x0.8x10
11	24 063 14	1	Baffle–Valley #2 Side
12	M–0549016	2	Screw M5x0.8x16
13	24 063 06	1	Baffle–Cylinder #1 Side
14	M–0649016	2	Screw M6x1.0x16
15	24 146 14	1	Plate–Backing #1 Side
16	24 100 01	4	Nut–Plastic
17	47 154 01	1	Clip–Cable
18	24 086 12	1	Screw–Cable Clip
*	24 100 02	2	Nut INC W/Blower Hsng
*	24 113 10	1	Decal–Horsepower
*	244 113 01	1	Decal–Horsepower
*	25 139 16	1	Plug INC W/Blower Hsng

Ref. No.	Part No.	Qty.	Description

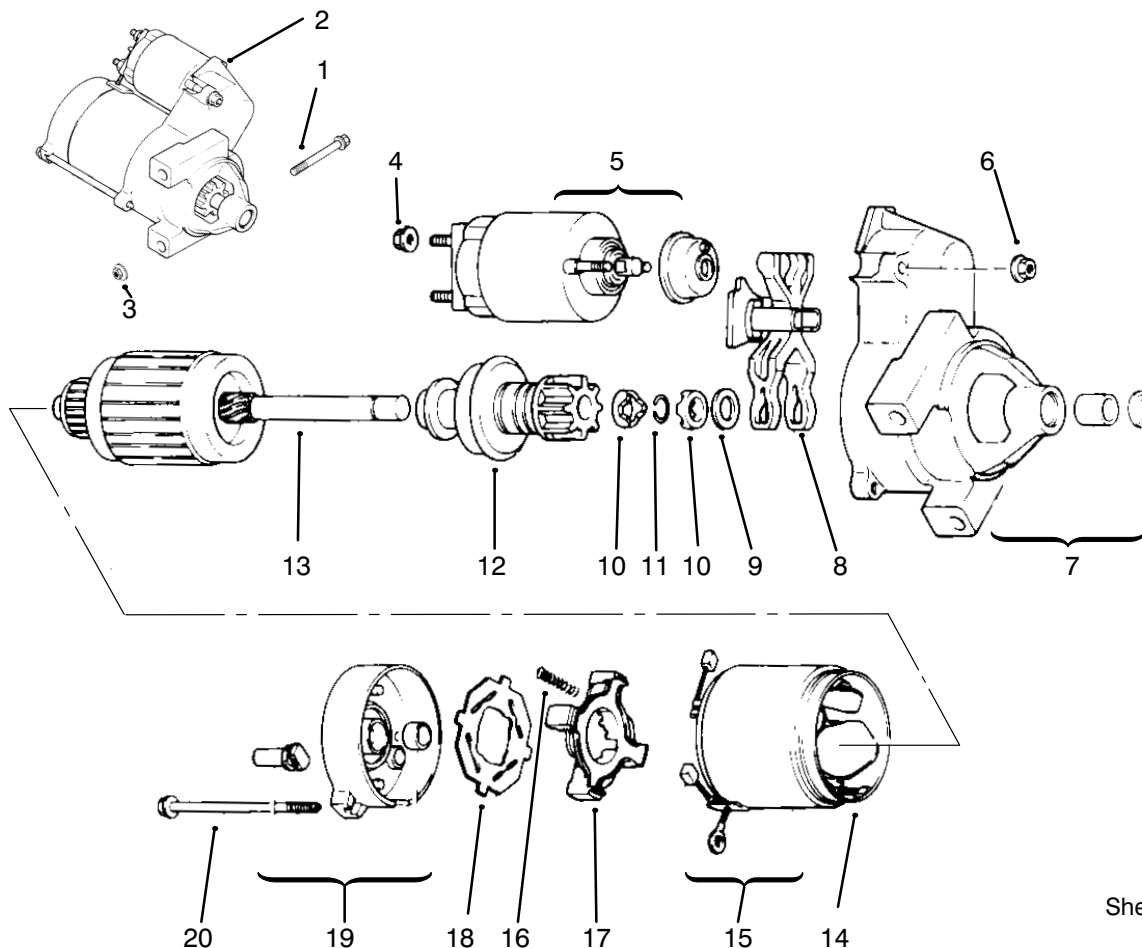


Sheet No.: 207
C-1965

Starting System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0839080	2	Screw M8x1.25x80				
2	12 098 03	1	Starter INC 4-20				
3	M-0841080	1	Nut M8x1.25				
†4	52 100 09	1	Nut-Starter				
†5	52 435 02	1	Solenoid				
†6	52 100 10	2	Nut Starter				
†7	12 081 02	1	Cap-Drive End				
†8	12 090 10	1	Lever Starter Drive				
†9	42 468 14	1	Washer-Thrust				
†10	52 100 08	2	Nut-Stop Collar				
†11	52 141 03	1	Ring-Retainer				
†12	12 239 01	1	Drive-Pinion				
†13	12 170 03	1	Armature-Starter				
†14	12 471 01	1	Frame				
†15	52 221 01	1	Kit-Brush INC 16				
†16	52 089 09	4	Spring-Brush				
†17	52 323 03	1	Holder-Brush				
†18	52 168 01	1	Insulator				
†19	12 301 01	1	Cap-Commutator End				
†20	52 211 05	2	Bolt				

† Included in a service kit or in an assembly

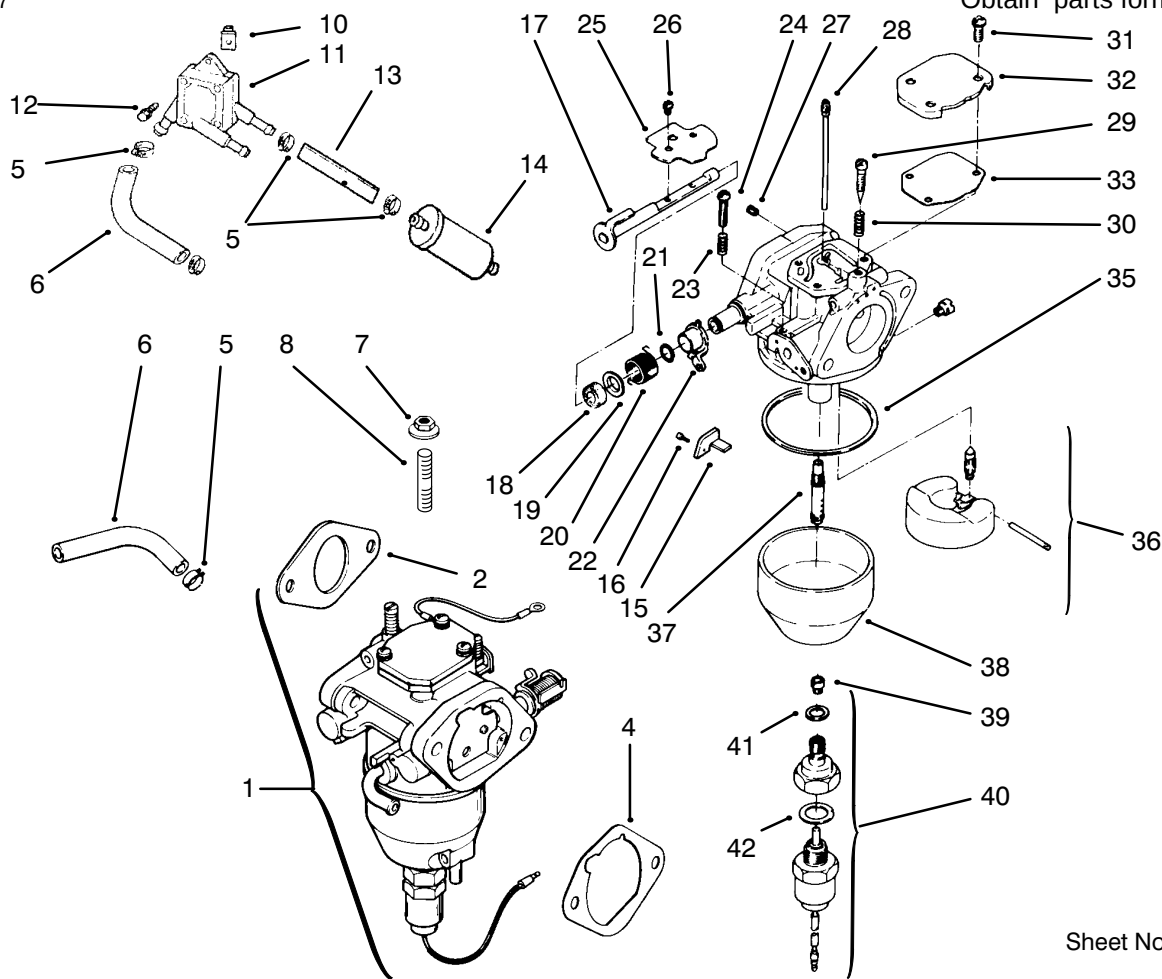

Sheet No.: 208


Fuel System

Ref. No.	Part No.	Qty.	Description
1	24 853 19	1	Kit-Carb INC 2/4/15-42
†2	24 041 15	1	Gasket-Carburetor
†4	24 041 14	1	Gasket-A/C Base
5	X-426-9	6	Clamp-Hose
6	24 353 03	1	Line-Fuel 10 1/2"
7	Sm-0641060	2	Nut M6x1.0
8	M-0629095	2	Stud M6x1.0x95
9	52 353 22	1	Line-Fuel 12"
10	24 100 01	2	Nut-Plastic
11	24 393 04	1	Pump-Fuel
12	24 086 12	2	Screw-Cable Clip
13	25 353 15	1	Line-Fuel 3 1/2"
14	25 050 02	1	Filter-Fuel
†15	24 126 29	1	Bracket-Throttle Stop
†16	M-0259006	1	Screw M2.5x45x5.5
†17	24 144 15	1	Shaft-Choke
†18	24 468 05	1	Washer
†19	24 241 01	1	Collar-Choke
†20	24 089 22	1	Spring-Choke Return
†21	24 141 04	1	Ring-Choke Lever
†22	24 090 10	1	Lever-Choke
†23	24 089 24	1	Spring-Throttle Screw
†24	24 086 19	1	Screw-Throttle Adjust
†25	24 462 02	1	Valve-Choke
†26	24 086 20	4	Screw-Throttle Shaft

Ref. No.	Part No.	Qty.	Description
†27	24 337 27	1	Jet-Air Bleed
†28	24 337 11	1	Jet-Slow
†29	24 086 22	1	Screw-Idle Adjust
†30	24 089 23	1	Spring-Idle Adjust Screw
†31	24 086 21	3	Screw
†32	24 096 13	1	Cover-Passage
†33	24 041 18	1	Gasket-Passage Cover
†35	24 041 19	1	Gasket-Float Chamber
†36	24 757 05	1	Kit-Float Repair
†37	24 369 01	1	Nozzle-Main
†38	24 234 01	1	Chamber-Float
†39	24 337 20	1	Jet-Main
†40	24 755 15	1	Kit-Solenoid INC 41-42
†41	24 041 21	1	Gasket-Chamber Screw
†42	24 041 20	1	Gasket-Solenoid
*	24 041 15	1	Gasket-Carburetor
*	24 063 22	1	Baffle-Carburetor
*	24 755 25	1	Kit-Hi Alt 1500-3000 M
*	24 755 26	1	Kit-Hi Alt Over 3000 M

† Included in a service kit or in an assembly

* Not illustrated

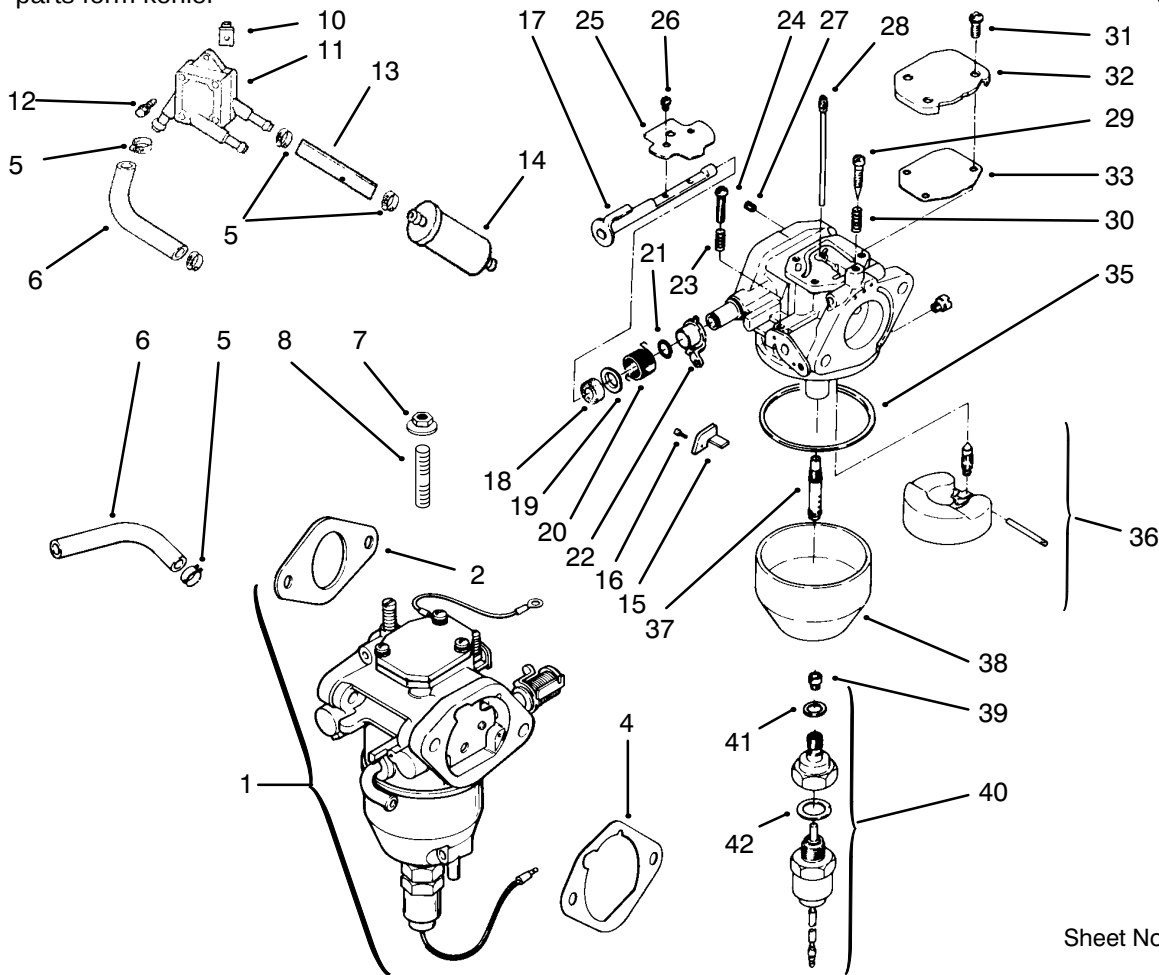


Sheet No.: 208

Fuel System

Ref. No.	Part No.	Qty.	Description
*	24 757 06	1	Kit-Carburetor Repair

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly
* Not illustrated



Ref. No.	Part No.	Qty.	Description
1	Sm-0642025	1	Screw M6x1.0x25
2	24 090 11	1	Lever-Governor
3	Sm-0641060	1	Nut M6x1.0
4	24 089 01	1	Spring-Linkage
5	25 158 08	1	Bushing-Linkage
6	24 079 04	1	Linkage-Throttle
7	25 158 11	1	Bushing-Linkage
8	24 126 13	1	Bracket-Control
9	24 089 03	1	Spring-Choke Return
10	M-0547050	1	Nut M5x0.8
11	Sm-0545016	1	Screw M5x0.8x16
12	M-0446030	1	Nut-Hex M4x0.7
13	Sm-0645016	4	Screw M6x1.0x16
14	12 237 01	2	Clamp-Cable
15	Sm-0545016	2	Screw M5x0.8x16
16	24 090 07	1	Lever-Throttle Actuator
17	24 468 01	3	Washer
18	24 090 03	1	Lever-Throttle Control
19	24 090 05	1	Lever-Choke
20	24 079 05	1	Linkage-Choke
21	M-0545020	1	Screw M5x0.8x20
22	41 468 03	1	Washer-Wave
23	M-0401025	1	Screw M4x0.7x24
24	24 089 18	1	Spring-Governor

43



Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description
1	24 743 01	1	Kit—A/C Cover INC 2—4
†2	24 089 04	2	Spring—Latch
†3	24 344 01	2	Latch—Lever
†4	24 380 03	2	Pin—Latch Lever
5	12 100 01	1	Nut—Wing
6	24 032 03	1	Seal—Air Intake
7	24 096 01	1	Cover—Inner Air Cleaner
8	24 083 02	1	Element—Precleaner
9	47 083 03	1	Element—Air Cleaner
10	24 109 01	1	Cup—Fuel Spitback
11	24 041 13	1	Gasket—Fuel Spitback Cup
12	24 094 02	1	Base—Air Cleaner
13	24 041 14	1	Gasket—A/C Base
14	24 164 06	1	Manifold—Intake
15	24 041 01	2	Gasket—Intake Manifold
16	M—0639055	4	Screw M6x1.0x18

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly



Ref. No.	Part No.	Qty.	Description
1	24 041 02	2	Gasket-Exhaust
2	M-0829033	4	Stud M8x1.25x20

Ref. No.	Part No.	Qty.	Description





Ref. No.	Part No.	Qty.	Description
1	94-9724	1	Motor
2	94-9725	1	Adapter
3	94-9726	1	Reservoir
*	94-1700	1	Pump-Hydraulic (ref)

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1278	3	17	4	Washer
1278	7	11	2	Washer
1278	20	24	1	Washer
2534	2	1	2	Clip – Spring
5108	3	3:2:1	1	Valve–Tubeless Tire
5108	18	1:2:1	1	Valve–Tubeless Tire
5210	3	18	4	Shim Washer
5618	3	19	1	E–Ring
5618	20	15	1	E–Ring
7007	18	1:99	1	Tube–Inner
8830	13	16	1	Clip
8870	10	25	1	Rod–Trunnion Lift
105293	3	3:99	1	Tube
105503	1	16	2	Bushing
105503	16	14	2	Bushing
106269	10	43	1	Bearing–Flange
106288	15	16	2	Clamp
106557	16	12	2	Reflector
106948	5	6	1	Tray–Battery
107069	15	20	4	Clip
108881	7	5	1	Nut–Differential
109189	7	7	1	Bearing–Flanged
109500	3	3:2:3	1	Zerk–Grease
109547	5	8	2	Hook
109989	16	21	2	Spacer Nylon
110391	7	6	1	Bearing Wheel
110513	3	3:2:2	2	Bearing Wheel
111383	7	8	1	Collar
111418	2	11	1	Bushing
111418	7	3	1	Bushing
111419	2	5	1	Bearing–Washer
111419	7	1	1	Bearing–Washer
111646	7	9	1	Grip Ring
112843	4	14	1	Washer
114720	5	9	1	Tube–21” Battery Drain
115593	10	8	1	Knob
115877	5	12	1	Battery
117316	5	2	1	Rod–Battery Hold Dwn
519337	1	27	1	Clip–Cable
609900	15	9	2	Nut–Speed
614249	1	30	1	Strap–Tie Sm
614249	9	17	1	Strap–Tie Sm
614249	13	11	1	Strap–Tie Sm
614249	20	22	1	Strap–Tie Sm
700806	16	18	2	Knob
700919	17	15	1	Nut
701178	16	10	2	Cap–Protector
702366	4	2	1	Clip–Wire Retainer
933141	10	7	1	Pin–Spirol
933270	3	5	2	Pin
936118	14	12	2	Snap Ring
9114466	4	15	1	Screw–HH
9150026	3	8	4	Nut–Esllok
9150854	3	7:1	1	Jam Nut
9150854	3	9:1	1	Jam Nut
9202154	12	19	2	Washer
9202324	3	16	2	Washer
9267154	3	10	1	Screw
5–1336	18	5	2	Key
24–7924	9	19	2	Drive Shaft Cover
28–2480	3	20	2	Washer
28–8080	5	15	1	Boot–Terminal

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
38-1420	16	2	1	Switch-Seat
38-2340	12	30	1	Comp Spring
46-5780	16	22	1	Switch-Starter
46-8093	1	31	2	Screw-Plastite
46-8093	9	22	2	Screw-Plastite
49-2040	14	15	3	Screw-Taptite
61-9780	3	1	2	Cap-Hub
62-7770	16	23	1	Key-Ignition
62-7770	17	14	1	Key-Ignition
65-2920	11	16	1	Pad-Pedal
66-0120	17	10	2	Knob
76-1340	15	27	1	Decal - USA (Only On: 72106)
78-1221	18	1:2	1	Wheel
78-1940-01	3	12	1	Arm-Front Spindle
78-1950-01	3	6	1	Arm-Front Spindle
78-2140	10	41	1	Trunnion
78-2431	10	29	1	Rod
78-2491-03	13	15	1	Wldmt-PTO Stop
78-2601-01	3	13	2	Wldmt-Spindle
78-2610	7	2	1	Gear-Sector Plated
78-2920	3	7:2	1	Ball-Joint
78-2920	3	9:2	1	Ball-Joint
78-5801	3	7:3	1	Ass'y-Ball Link
78-5811	3	9:3	1	Ass'y-Ball Link L
78-6810-03	10	35	1	Plate
78-6820-03	5	7	1	Plate-Battery
78-7360	10	33	1	Wldmt-Rod
78-7390	10	28	1	Tube
78-7960-01	3	4	1	Axle-Front
78-9150-03	7	4	1	Plate
78-9740	10	9	1	Decal-Height Knob
79-0950-03	16	17	1	Brkt-Pivot R.h. (Black)
79-0970-03	16	15	1	Brkt-Pivot L.h.
79-1250	10	27	2	Pin
79-3401-03	10	24	1	Shaft-Gage
79-3500	6	10	1	Ass'y-Reservoir
79-7530	2	9	1	Spring - Clutch
83-2720	18	6	10	Lug-Bolt
83-6620	9	13	1	Decal - Instruction
88-3970	1	28	1	Reflector & Lamp ASM
88-3980	6	2	1	Gas Cap Assembly
88-4320	1	29	1	Wire Harness-Lights
88-4590	2	4	1	Bolt-Shoulder
88-9932	11	18	2	Switch-Micro
92-6511	16	1	1	Seat V-511
92-6650	1	8	1	RH Hood Side (Toro)
92-6652	1	7	1	LH Hood Side (Toro)
92-6656	1	23	1	Lens - Headlight
92-6674-03	13	7	1	Support - Fender
92-6680	17	8	1	Steering Boot
92-6686	14	10	1	Pulley-Hydro Trans
92-6687	15	21	1	RH Foot Mat (Hydro)
92-6688	15	18	1	LH Foot Mat (Hydro)
92-6702	7	10	1	Lower Strg Shaft Wa
92-6705	17	26	1	Lens - Dash Hm
92-6717	8	18	1	U Joint - Steering
92-6720	17	18	1	Decal - PTO/Choke (Only On: 72106)
92-6721	17	13	1	Decal - Throttle/Ign (Only On: 72106)
92-6725	15	23	1	Decal - HOC (Only On: 72106)
92-6726	14	3	1	Decal - Hydro Valve (Only On: 72106)
92-6727	15	5	1	Decal - Fuel Level
92-6737	6	8	1	Hose - Hydro

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6742	14	14	1	Fan – Hydro
92-6747-01	15	19	1	RH Footrest (Hydro)
92-6750	16	3	2	Spacer – Nylon
92-6769	14	2	2	U-Bolt
92-6776	8	13	1	Bracket – Detent
92-6777-03	8	1	1	Brkt – Supt Column
92-6778-03	9	9	1	Brkt – Lower Column
92-6780	4	5	4	Nut-Hex Flange
92-6783	17	24	1	Control – Choke Twin
92-6784	17	22	1	Control-Throttle Twin
92-6785	17	17	1	Switch – Ignition
92-6794	10	4	1	Wedge – HOC
92-6795-01	15	28	1	Fender
92-6798	8	11	1	Cap – Rod Tilt
92-6855-03	10	32	1	Arm-Pivot
92-6859-03	9	6	1	Support – Dash
92-6860	9	8	4	Nut Retainer – J Type
92-6867-01	4	18	1	Shield-Muffler
92-6868-03	13	4	1	Brkt-Idler Plate
92-6869	20	13	1	Bushing
92-6877	4	9	1	Valve – Oil Drain
92-6883	3	7	1	Steering Linkage, RH
92-6884	3	9	1	Steering Linkage, LH
92-6885	4	13	1	Clutch – Elec PTO (Only On: 72115)
92-6888	4	12	1	Pulley-Engine (Hydro)
92-6900	2	7	1	Arm – Idler Hydro
92-6902	12	18	1	Pedal Pad
92-6903	12	1	1	Pedal Pad
92-6913-03	12	2	1	Pedal-Hydro Wa
92-6914-03	1	32	1	Baffle-Hood Upper
92-6917-03	1	10	1	Bracket-RH Hinge
92-6918-03	1	9	1	Bracket-LH Hinge
92-6936-03	9	15	1	Cover-LH Side Wa
92-6937-03	9	2	1	Cover-RH Side Wa
92-6943	14	13	1	Spacer – Fan
92-6954	14	9	1	Belt – V Hydro
92-6960	9	24	2	Latch – Hood
92-6962	12	7	1	Bushing
92-6964-03	13	6	1	Bracket-HOC Gage
92-6965	10	6	1	Rod – HOC
92-6966	12	17	1	Spacer
92-6968	11	5	1	Trunnion – Brake
92-6971	8	5	1	Lever – Tilt Plated
92-6978	10	38	1	Rod – HOC Indicator
92-6979	10	42	1	Plate – HOC Gage
92-6982	11	14	1	Spacer – Brake
92-6986	16	8	2	Bolt – Shoulder
92-6987	1	24	1	Horsehead Emblem
92-6988	11	8	1	Rod – Brake
92-6989	5	1	1	Wire – 21” Red
92-6992-03	13	12	1	Steering Brkt Wa
92-6996-03	1	18	1	Hinge – RH Hood
92-6997-03	1	17	1	Hinge – LH Hood
92-6998	8	22	1	Spacer – Yoke, Right
92-6998	12	33	1	Spacer – Yoke, Right
92-6999	8	15	1	Spacer – Yoke
92-7000-03	11	4	1	Brkt-Parking Brake
92-7004-03	11	22	1	Support – P. Brake
92-7006	1	4	4	Nut – J Type
92-7006	9	21	4	Nut – J Type
92-7007	10	39	1	Spring – Extension
92-7008	12	15	3	Rod End – Female

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-7009	11	2	1	Grip - Parking Brake
92-7018	12	4	1	Rod - Hydro
92-7020	9	1	9	Screw-HH
92-7020	15	25	4	Screw-HH
92-7047	20	27	1	Pushnut
92-7048-03	1	21	1	Brkt-Hood Hinge LH
92-7049-03	1	20	1	Brkt-Hood Hinge RH
92-7054	16	7	2	Spring - Compression
92-7057-03	3	11	1	Pin - Axle Wa
92-7076	1	3	1	Seal-Air Inlet Twin
92-7090	14	3	1	Decal - Bypass Valve (Only On: 72115)
92-7092	15	23	1	Decal - HOC Int'l (Only On: 72115)
92-7101	2	8	1	Pulley - Flat Idler
92-7102	2	13	2	Pulley - Idler
92-7148	1	6	2	Foam - Sidepanel
92-8747	13	14	2	Decal Attach-A-Matic
92-8946	15	26	1	Decal - Danger (Only On: 72106)
93-0302	9	12	1	Decal - Danger (Only On: 72106)
93-0324	5	5	1	Cable - 18" Black
93-0350	4	6	2	Gasket - Exhaust F/W Eng.
93-0486	9	14	1	Hoodstand (Only On 72106)
93-0488	9	14	1	Hoodstand (Only On 72115)
93-0489-01	15	24	1	Plate-Footrest (Only On 72106)
93-0490	1	2	1	Hood - Service ASM
93-0494	1	22	1	Screen/Grill ASM
93-0511	19	7	1	Arm - Cruise
93-0515	19	10	1	Clamp - Cruise
93-0516	17	11	1	Cover - RH Slot (Only On: 72106)
93-0520-03	11	21	1	Brkt - Brake Switch
93-0523-03	10	44	1	Brkt-Pivot Linkage
93-0527	17	20	1	Switch - Cruise
93-0533	17	11	1	Cover - RH Slot (Only On: 72115)
93-0539	11	17	2	Screw-HH
93-0540	11	9	1	Spring - Extension
93-0546-03	14	8	1	Strap-Trq Hy
93-1131	9	23	1	Trim-Seal Firewall
93-1144	6	6	2	Spacer - Fuel Tank
93-1146	8	3	1	Bushing - Upper Strg
93-1148-03	8	12	1	Column - Wa
93-1357	8	14	1	Spring - Ext., Steering
93-1627	6	5	1	Hose - Fuel Line Twin
93-3167	11	1	1	Rod - Parking Brake
93-3190	5	16	1	Boot-Terminal Insulator
93-3240	11	20	2	Plunger-Seal
93-3658	2	12	2	Spacer
93-3659-03	18	2	2	Hub-Wheel
93-4243	15	24	1	Plate-Footrest (Only On 72115)
93-4366	19	3	1	ASM - Magnet
93-7255	17	13	1	Decal - Dash Throt/Ign (Only On: 72115)
93-7256	17	18	1	Decal - Dash PTO/Choke (Only On: 72115)
93-7313	9	12	1	Decal-Slope/Hydro-Int'l (Only On: 72115)
93-7314	15	26	1	Decal - Danger (Only On: 72115)
93-7324	13	13	2	Decal - Belt Instr. (Only On: 72115)
93-9275	6	15	1	Guard - Fan (Only On: 72115)
93-9801	3	3:2	1	ASM - Wheel w/Zerk
93-9998	17	16	1	Switch - PTO Toro
94-1588	12	8	1	Rod - Bypass
94-1700	20	1	1	Pump - Hydraulic
94-1701	20	19	1	Cylinder - Hydraulic
94-1705	20	20	1	Cyl Mtg Brkt
94-1708	20	16	1	Wa - Lift Rod
94-1709-03	20	18	1	Bracket - Support (Black)

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-1710	17	19	1	Cover-Lift (Only On: 72106)
94-1711-01	15	13	1	Footrest-LH Hydro(Red)
94-1713	20	3	1	Hose - Hydraulic
94-1714	17	28	1	Housing - Light
94-1716	6	17	1	Sensor - Low Fuel
94-1722-03	11	10	1	Wa - Brake Lever
94-1742	17	21	1	Switch
94-1743	20	25	1	Tubing - Conduit
94-1747-03	20	7	1	Brkt- Pump Mounting (Black)
94-1748-03	20	5	1	Clamp-Hydraulic (Black)
94-1749-03	9	18	1	Firewall
94-1894	17	7	1	Dash
94-1980	1	1	2	Foam - Hood
94-2514	4	13	1	Clutch - PTO (Only On: 72106)
94-2869	15	12	4	Washer
94-2869	16	20	2	Washer
94-2870	4	8	1	Decal - Toro Power + 20
94-2874	8	9	1	Shaft - Short Steering
94-2966	17	9	1	Clip - Boot
94-3344	20	2	1	Hose - Hydraulic
94-3513	17	19	1	Cover - Lift (Only On: 72115)
94-3552-03	10	34	1	Shaft-Lift
94-3553	20	11	1	Wa - End Cap
94-3561	20	4	2	Ring-O Male Jic 90 DEG
94-3717	3	21	2	Kit-Silver Hub Cap/Logo (Only On: 72106)
94-3718	18	7	2	Hubcap ASM - 12", Ygt (Horsehead Logo) (Only On: 72106)
94-4205	14	4	1	Transaxle - Hydrostatic
94-4208	17	27	1	Hourmeter
94-4233-03	11	15	1	Lever - Brake Wa
94-4927	20	12	1	Arm - HOC
94-4928	20	14	1	Bracket - Lift Arm
94-4944	10	30	1	Shaft - Pedal Pivot
94-4945	12	12	1	Spacer
94-6875	12	11	1	Washer
94-6927	6	3	1	Tank - Fuel
94-6950-03	4	1	1	Shield-Muf Wa Twin (Black)
94-6961	17	29	3	Screw
94-7905	12	22	1	Retainer-Screw
95-0800	1	13	1	Decal - Hood RH
95-0801	1	12	1	Decal - Hood LH
95-0802	15	3	1	Decal - Rear Fender
95-0811	9	16	2	Decal - 270 Hydro
95-1653	12	20	1	Switch - Single Pole
98-1459	8	25	1	Decal - Toro
98-1472	8	6	1	Wheel - Steering, Toro
98-7249	17	31	4	Relay-Spdt
98-9003	4	4	1	Muffler - Twin
99-1933	17	33	1	Module-Low Voltage
99-2334	18	1:1	1	Tire
99-2336	3	3:1	1	Tire
99-2985	16	5:2	1	Decal-Danger (Only On: 72106)
99-2986	16	5:2	1	Decal-Danger Intl (Only On: 72115)
99-3701	17	36	1	Module-Nmir, Clutch
99-5339	16	5:3	1	Decal-Nmir Switch (Only On: 72106)
99-5340	16	5:3	1	Decal-Nmir Switch Intl (Only On: 72115)
99-6758-03	12	32	1	Bracket, Nmir
99-6759	12	27	1	Rod-Nmir
99-6760	12	31	1	Arm-Push
99-6764-03	4	21	1	Guard-Throttle (Only On: 72115)
99-6765-03	15	6	1	Rear Panel ASM
99-6767-03	19	2	1	Bracket - Cruise, Wa
99-6772-03	13	10	1	Wa - Frame

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
99-8030	16	5	1	Support-Seat, He ASM (Only On: 72115)
99-8031	16	5	1	Support-Seat (Only On: 72106)
99-8035	17	25	1	Decal - Dash Lens
99-8040-03	9	4	1	Support - Dash
99-8071	5	10	1	Harness - Wire, 269h
99-8072	17	32	1	Harness-6 Lamp
99-8719	19	14	1	Clip-Light Duty
100-1320	4	24	2	Screw-Panhead Torx (Only On: 72115)
100-1325	4	22	2	Screw-Countersunk Torx (Only On: 72115)
100-1326	4	23	2	Washer-Countersunk (Only On: 72115)
218-461	16	24	1	Nut-F/W
2412-89	19	11	1	R-Clamp Vinyl Covered
2412-98	6	4	2	Clamp
2412-129	6	9	2	Hose Clamp
250-7	9	27	1	Cable Tie
256-90	10	31	2	Bshg-Flg
256-90	11	12	2	Bshg-Flg
302-5	3	14	2	Fitting-Lube
302-11	3	15	1	Zerk-45 Degree
302-26	12	16	1	Zerk
321-4	5	3	2	Screw-HH
321-4	6	7	2	Screw-HH
321-4	8	2	4	Screw-HH
321-4	9	10	4	Screw-HH
321-4	15	8	2	Screw-HH
321-4	17	5	2	Screw-HH
321-4	19	12	1	Screw-HH
321-4	20	8	2	Screw-HH
321-6	12	24	2	Screw-HH
322-3	1	15	2	Screw-HH
322-3	8	17	1	Screw-HH
322-5	2	14	2	Screw-HH
322-5	13	8	1	Screw-HH
322-5	16	4	4	Screw-HH
322-5	19	8	2	Screw-HH
322-6	14	1	1	Screw-HH
322-9	4	16	4	Screw-HH
322-12	14	7	1	Screw-HH
322-17	8	23	1	Screw-HH
323-6	19	1	2	Screw-HH
323-6	19	15	1	Screw-HH
323-7	12	13	1	Screw-HH
323-10	2	2	3	Screw-HH
323-11	12	10	1	Screw-HH
3217-9	8	7	1	Nut-Hex
3218-3	18	4	4	Nut-Jam
3220-3	12	3	3	Nut-Jam
3229-11	9	5	4	Screw-CARR
3229-33	20	10	1	Screw-CARR (Only On: 72106)
3230-1	1	26	2	Screw-CARR
3230-1	15	15	4	Screw-CARR
3230-2	13	3	2	Screw-CARR
3230-2	16	19	4	Screw-CARR
3230-23	15	22	3	Screw-CARR
3230-23	15	29	1	Screw-CARR
3230-31	15	4	6	Screw- Carriage
3231-4	7	12	1	Screw-CARR
3231-25	4	17	2	Screw-CARR
3231-25	10	21	2	Screw-CARR
3243-5	18	3	4	Screw-Set
3245-32	7	8:1	1	Screw-HS
3245-32	14	11	1	Screw-HS

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3253-4	8	19	2	Washer-Lock/Sp
3253-5	12	14	1	Washer-Lock/Sp
3253-7	8	8	1	Washer-Lock/Sp
3254-5	16	25	1	Washer-Lock/Int
3256-22	6	12	4	Washer-Flat
3256-22	12	25	4	Washer-Flat
3256-22	15	7	2	Washer-Flat
3256-22	20	9	2	Washer-Flat
3256-23	2	15	2	Washer-Flat
3256-23	8	16	2	Washer-Flat
3256-23	11	7	1	Washer-Flat
3256-23	13	2	2	Washer-Flat
3256-23	14	5	5	Washer-Flat
3256-23	15	10	2	Washer-Flat
3256-24	2	6	7	Washer-Flat
3256-24	4	19	2	Washer-Flat
3256-24	10	22	2	Washer-Flat
3256-24	11	13	1	Washer-Flat
3256-24	12	6	5	Washer-Flat
3256-24	12	29	2	Washer-Flat
3256-26	10	20	6	Washer-Flat
3256-49	16	13	4	Washer-Flat
3272-2	12	9	1	Pin-Cotter
3272-6	10	18	1	Pin-Cotter
3272-6	11	6	2	Pin-Cotter
3272-6	12	28	1	Pin-Cotter
3272-6	20	21	1	Pin-Cotter
3272-17	3	2	2	Pin-Cotter
3290-282	16	11	4	Rivet-Stl Pop
3290-354	11	19	1	Nut-Speed
3290-392	12	21	2	Screw - Hex Head Slot
3290-479	15	17	14	Fastener-Panel
3296-1	12	23	2	Nut-Lock Ni
3296-2	17	35	2	Nut-Lock Esna
3296-8	8	24	4	Nut-Lock Ni
3296-8	9	7	4	Nut-Lock Ni
3296-8	20	23	2	Nut-Lock Ni
3296-22	19	16	1	Nut-Lock
3296-23	10	26	1	Nut-Lock Ni
3296-29	1	19	4	Nut-Lock Ni
3296-29	2	3	3	Nut-Lock Ni
3296-29	4	11	4	Nut-Lock Ni
3296-29	8	21	2	Nut-Lock Ni
3296-29	13	1	2	Nut-Lock Ni
3296-29	13	9	1	Nut-Lock Ni
3296-29	14	6	6	Nut-Lock Ni
3296-29	15	11	14	Nut-Lock Ni
3296-29	16	16	6	Nut-Lock Ni
3296-29	19	9	2	Nut-Lock Ni
3296-39	4	20	2	Nut-Lock Ni
3296-39	10	23	2	Nut-Lock Ni
3296-39	19	4	3	Nut-Lock Ni
3296-42	6	13	2	Nut-Lock Ni
3296-42	9	11	3	Nut-Lock Ni
3296-42	12	26	2	Nut-Lock Ni
3296-42	17	37	2	Nut-Lock Ni
3296-42	19	13	1	Nut-Lock Ni
3296-58	16	9	2	Nut-Lock Ni
3296-59	2	10	4	Nut-Lock Ni
3296-59	12	5	1	Nut-Lock Ni
32103-22	5	4	4	Nut-Wing
32103-22	20	6	1	Nut-Wing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32104-96	6	16	2	Screw-HH
32105-12	17	34	2	Screw
32105-15	1	5	12	Screw-Mach
32120-47	10	19	5	E Ring-External
32121-25	10	40	1	Pin-Roll
32121-69	11	11	1	Pin - Spring
32121-103	10	37	1	Pin-Sprl
32128-10	1	14	8	Flange Locknut
32144-4	9	20	2	Screw-HH
32144-4	10	5	1	Screw-HH
32144-8	9	26	2	Screw-HH
32144-8	17	30	2	Screw-HH
32144-14	1	11	2	Screw-HWH
32144-14	5	11	1	Screw-HWH
32144-14	9	25	2	Screw-HWH
32144-14	10	36	2	Screw-HWH
32144-14	10	45	2	Screw-HWH
32144-14	11	3	4	Screw-HWH
32144-14	13	5	6	Screw-HWH
32144-14	20	17	5	Screw-HWH
32144-14	4	3	3	Screw-HWH (Only On: 72106)
32144-14	4	3	1	Screw-HWH (Only On: 72115)
32144-14	6	14	2	Screw-HWH (Only On: 72115)
32144-32	1	33	2	Screw
32144-32	17	23	4	Screw
32144-118	4	10	2	Screw-PPH
32149-2	9	3	2	Nut-Keps
33114-030	8	20	2	Screw-HH

[illegible]

57