


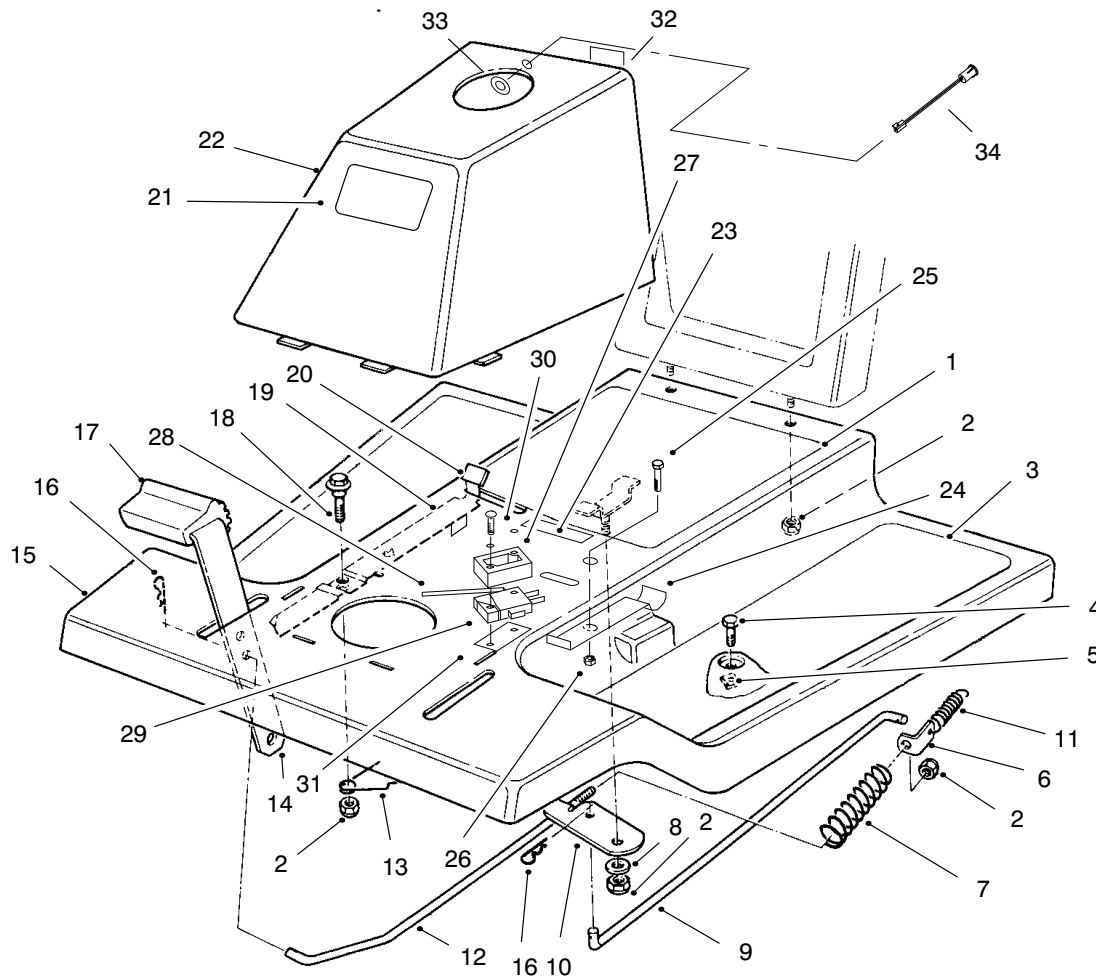


MODEL NO. 70122-9900001 & UP

**PARTS
CATALOG**
**WHEEL HORSE®
8-25 RIDING MOWER**


C-0004A

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7006	Decal - Instruction	1	19	98-0711-03	Lever - Brake, Parking	1
2	3296-29	Nut - Lock	5	20	19-2200	Tip - Brake, Parking	1
3	44-7030	Tread - Foot Rest	2	21	92-7981	Decal - Toro	1
4	32104-110	Screw - Cap Hex. Hd.	4	22	99-2968	Tower	1
5	3290-347	Nut - U-Type	4			(Incl. Ref. #21)	
6	67-1590	Bracket - Brake Return	1	23	93-7011	Decal - Parking Brake	1
7	67-1430	Spring - Compression	1	24	98-0709	Clamp	1
8	26-9530	Washer - Pivot	1	25	321-2	Screw - Hex Hd. Cap	1
9	67-1340	Rod - Brake, Transmission	1	26	3296-16	Nut - Hex Lock	1
10	67-1330-03	Lever - Brake, Bellcrank	1	27	88-4880	Spacer	1
11	67-1450	Spring - Extension	1	28	88-9932	Switch - Micro	1
12	67-1350	Rod - Front, Brake	1	29	93-3240	Seal - Plunger	1
13	19-1970	Spring - Brake, Parking	1	30	9104784	Screw	2
14	67-1130-01	Pedal - Brake & Clutch	2	31	3290-354	Nut - Speed	1
15	98-2387-01	Body W.A. - Front	1	32	99-2982	Decal - Indicator Light	1
16	3290-250	Pin - Hair, Cotter	2	33	99-6059	Clip - Retainer	1
17	65-2920	Pad - Pedal	2	34	95-7652	Light - Indicator	1
18	19-1470	Bolt - Shoulder	1				

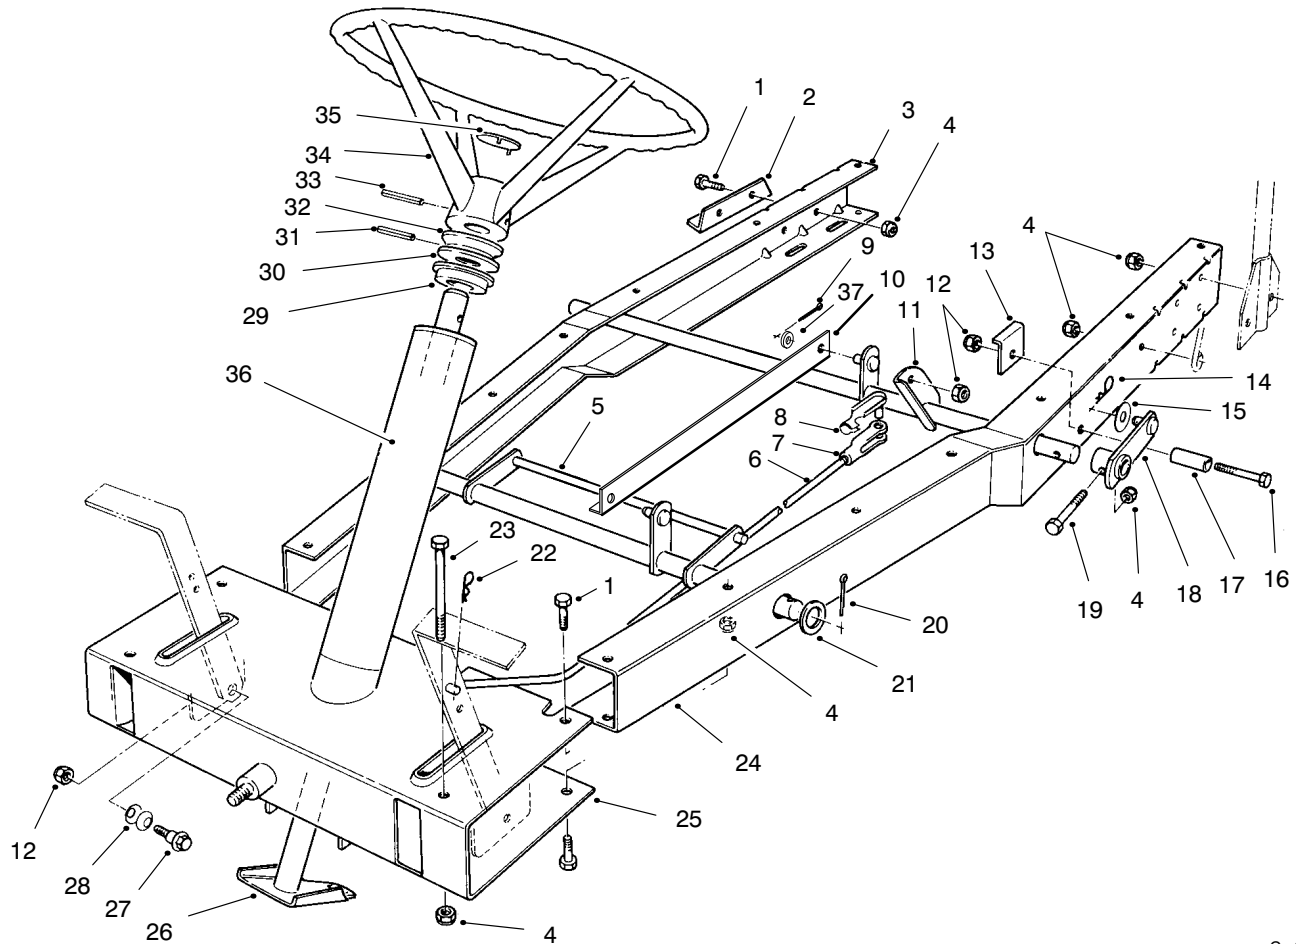


C-0005A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140-01	Mount - Bearing, Axle	1
3	67-0520-01	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010-03	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8	67-1530	Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	76-3890	Bracket - Link, H.O.C.	1
11	67-0050-01	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510-01	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	76-3790	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530-01	Channel - L.H.	1
25	67-0450-01	Frame W.A. - Front	1
26	67-0830-03	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3242	Wheel - Steering	1
35	92-7990	Insert - Wheel, Steering	1
36	76-4080	Decal	1
37	3256-22	Washer - Flat	1
*	13-6049	Kit - Loose parts	1


*Not Illustrated

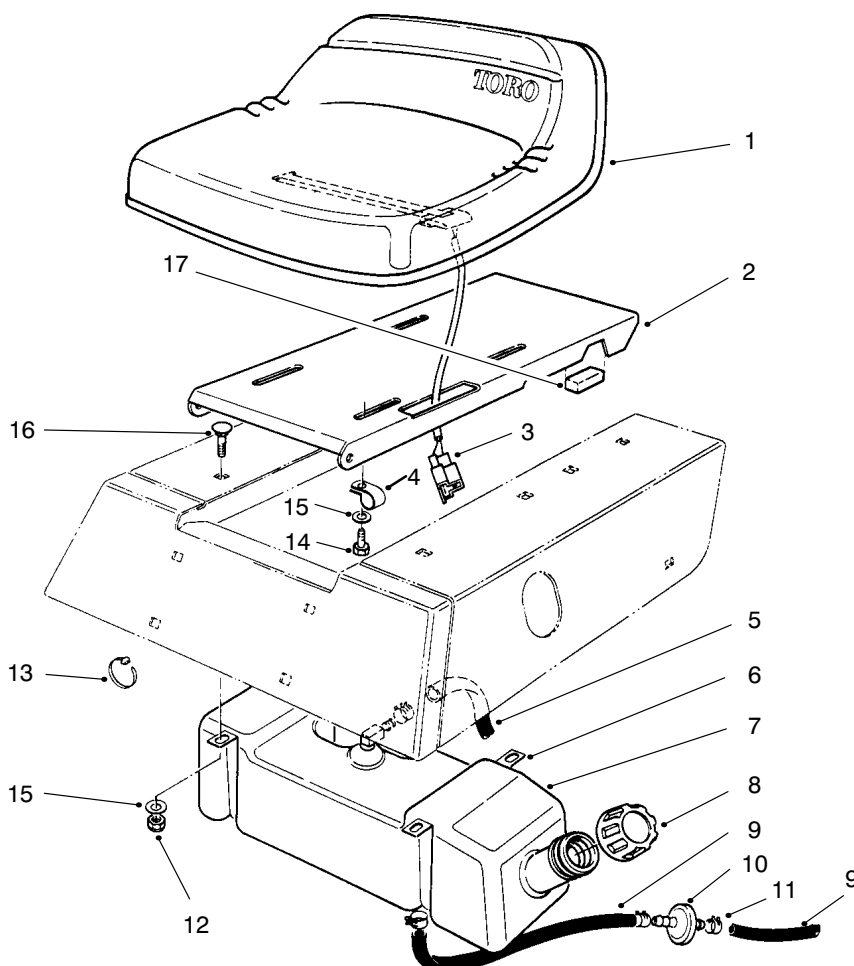

C-0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1	10	56-6360	Filter	1
2	67-1242-01	Base - Seat	1	11	2412-98	Clamp - Hose	5
3	38-1420	Switch - Seat	1	12	3296-29	Nut - Lock	4
4	18-2970	R-Clamp	1	13	3290-378	Tie - Cable	1
5	47-2986	Hose - Gas	1	14	322-3	Screw - Cap Hex. Hd.	4
6	67-0950	Strap - Tank, Gas	2	15	3256-23	Washer - Flat	8
7	80-4580	Tank - Gas	1	16	3230-1	Bolt - Carriage	4
8	55-3576	Assembly - Cap, Gas	1	17	66-6920	Pad - Isolator	2
9	47-2964	Hose - Gas	2				

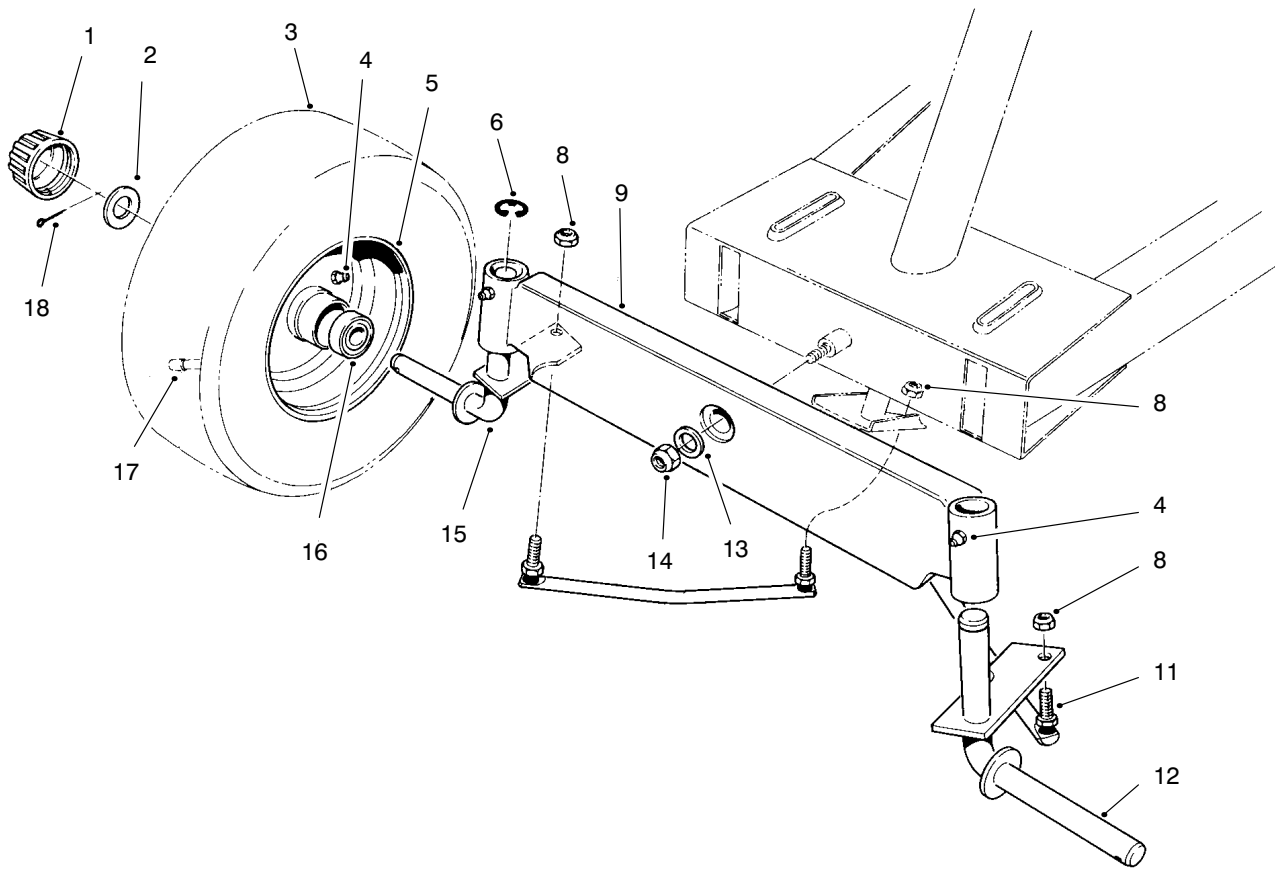


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	99-2990	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990-01	Axle - Front	1
11	67-0880	Assembly - Tie Rod	2

Ref. No.	Part No.	Description	No. Used
12	67-0810-01	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800-01	Spindle - R.H.	1
16	110513	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2
*	232-44	Tube - Inner	2

* Not Illustrated

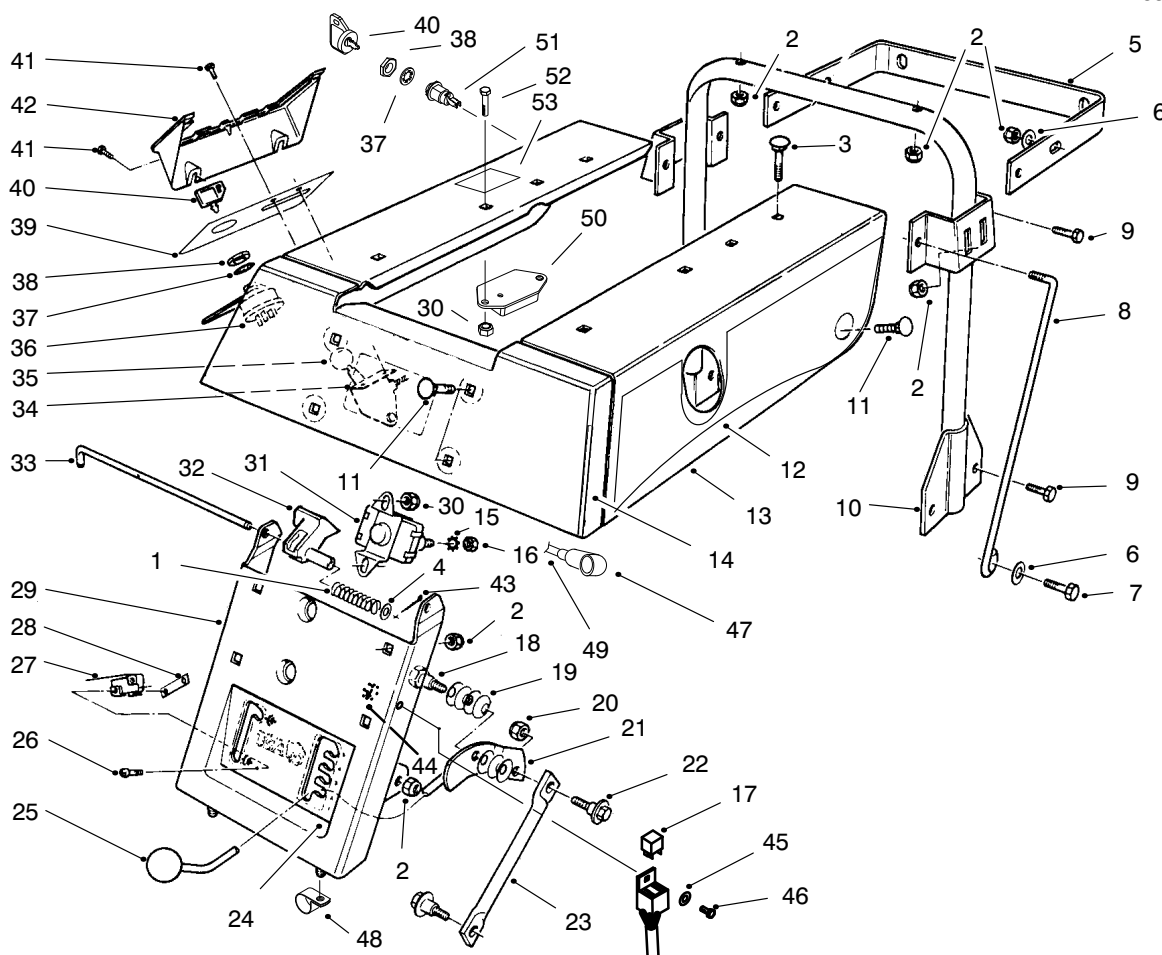


C-0007B

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1	27	88-9932	Switch - Micro	1
2	3296-29	Nut - Lock	11	28	3290-354	Nut - Double	1
3	3230-3	Bolt - Carriage	2	29	67-1090-03	Support W.A. - Seat	1
4	3256-22	Washer - Flat	1	30	3296-42	Nut - Lock	4
5	67-1500-03	Bar - Stand	1	31	47-1910	Solenoid	1
6	3256-23	Washer - Flat	4	32	80-4330	Prop - Seat	1
7	322-5	Screw - Cap Hex. Hd.	2	33	80-4550	Rod - Base, Seat	1
8	67-1480	Brace - Support, Seat	2	34	66-6640	Control - Throttle	1
9	322-3	Screw - Cap Hex. Hd.	6	35	233-25	Knob	1
10	67-0790-03	Support W.A. - Seat	1	36	88-9830	Switch - Ignition (Incl. Ref. #37 & 38)	1
11	3230-1	Bolt - Carriage	6	37	3254-5	Washer - Lock, Int. Tooth	2
12	98-1456	Decal - Toro L.H.	1	38	218-461	Nut - Hex.	2
*	99-2984	Decal - Toro R.H.	1	39	92-7976	Decal - Panel, Control	1
13	99-2964-01	Body W.A. - Rear	1	40	63-8360	Key	2
14	92-7978	Decal - Insignia	1	41	32144-42	Screw - Hex. Hd. Tapping	4
15	3253-3	Washer - Lock	2	42	67-1030	Cover - Panel, Control	1
16	3218-1	Nut - Jam	2	43	3272-4	Pin - Cotter	1
17	98-7249	Relay	1	44	3296-2	Nut - Lock	1
18	28-0540	Bolt - Shoulder	1	45	3256-14	Washer - Flat	1
19	3290-413	Washer - Belleville	7	46	3290-134	Screw - Cap Mach. Hd.	1
20	3296-39	Nut - Lock	1	47	93-3190	Boot - Terminal Insulator	1
21	67-0270	Handle W.A. - H.O.C.	1	48	18-2970	Clamp	1
22	67-0870	Bolt - Shoulder	2	49	98-0707	Cable	2
23	67-0080	Link - H.O.C.	1	50	99-3700	Module - NMIR	1
24	92-7977	Decal - H.O.C. Deck Engage.	1	51	46-5780	Switch - Starter	1
25	233-22	Knob	1	52	321-4	Screw - Hex Hd.	2
26	3290-313	Screw - Pan Head	2	53	99-2986	Decal - Danger Int'l	1

*Not Illustrated

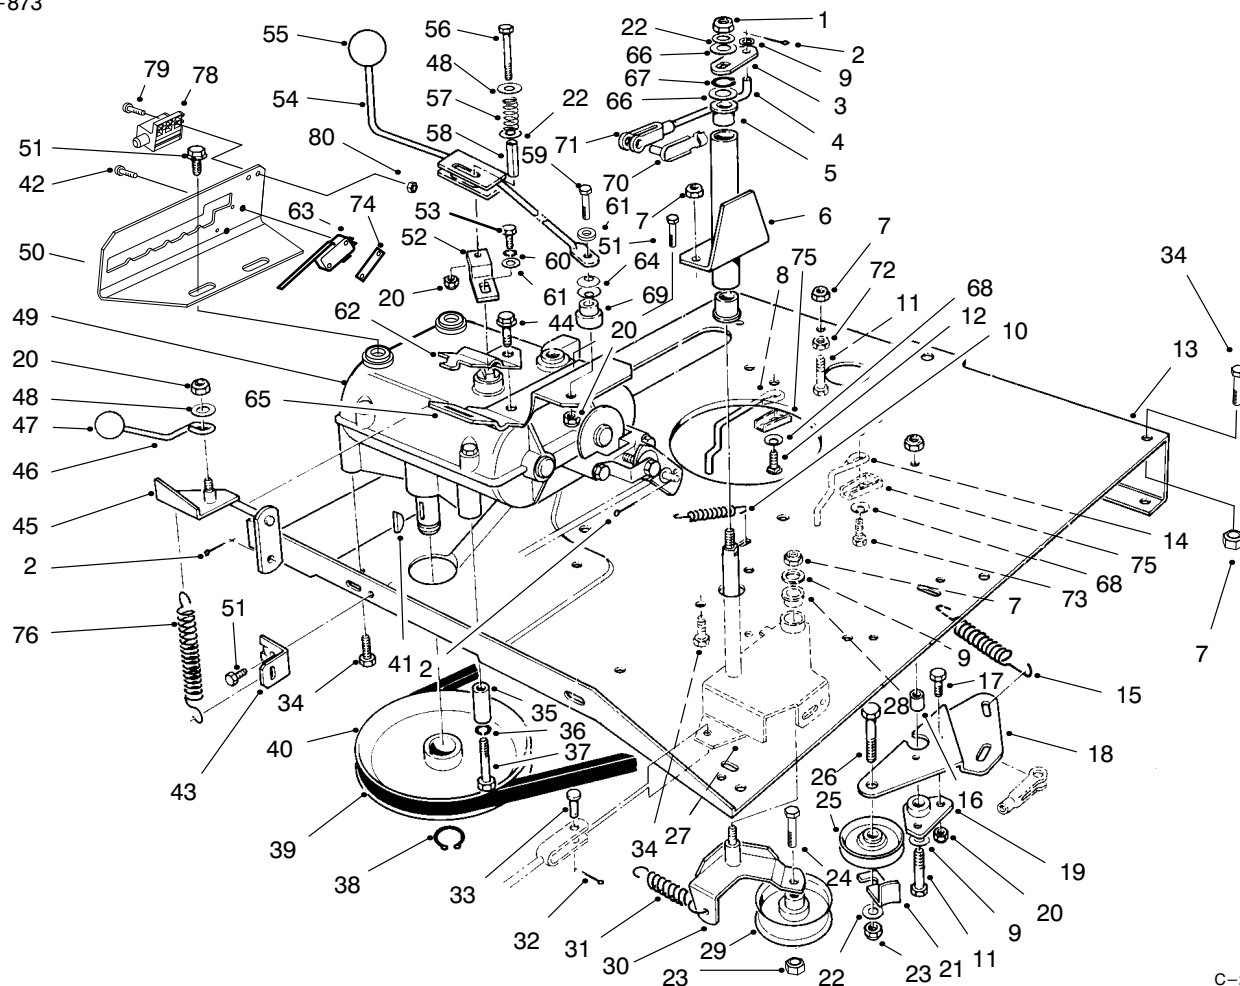


C-2106A

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	1
2	3272-6	Pin - Cotter	2
3	67-0690-03	Flat - Deck Engage Bracket	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	2
6	67-0540-03	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	13
8	99-2976	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	2
12	32144-49	Bolt - Carriage	1
13	76-4090-01	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420-03	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	2


Ref. No.	Part No.	Description	No. Used
24	323-9	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330-03	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3272-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	14
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
42	9104784	Screw - Tapping	4
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600-03	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage Rod	1

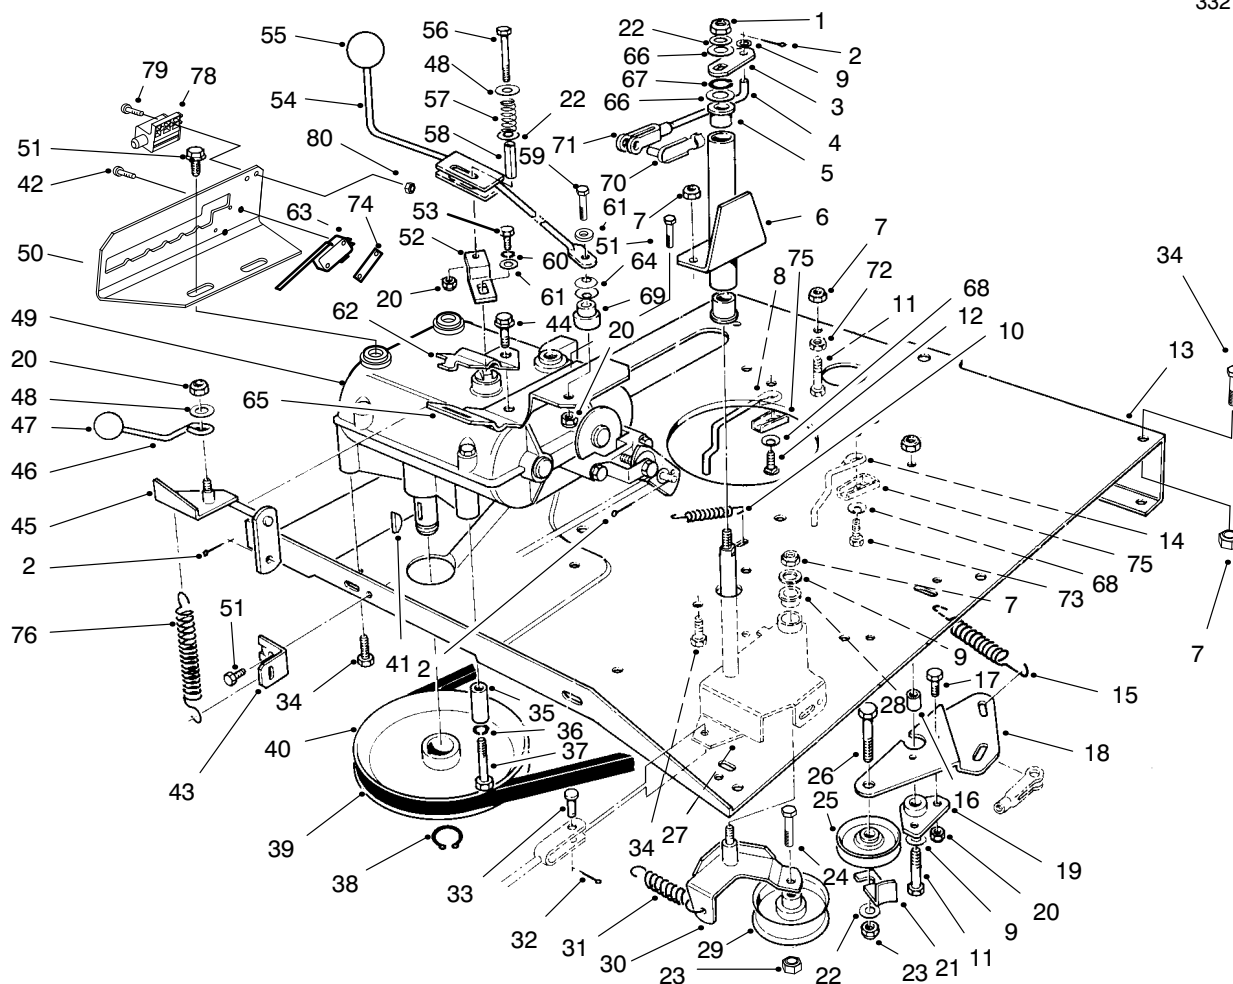

C-2106A

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1	64	3290-478	Washer - Belleville	2
48	3256-55	Washer - Fender	2	65	67-0660	Bracket - Mount, Shifter	1
49	67-1400	Transmission	1	66	20-3220	Washer - Flat	2
50	99-2970-03	Gate - Shift	1	67	32151-62	Ring - Retaining	1
51	32144-14	Screw - Wash. Hd., Tap.	4	68	3290-456	Washer - Belleville	2
52	56-7620	Lever - Shift	1	69	76-3970	Spacer - Pivot	1
53	329-4	Screw - Cap Hex. Hd.	1	70	67-1530	Assembly - Pin, Clevis	1
54	76-3940-03	Lever W.A. - Shift	1	71	282-27	Clevis	1
55	233-48	Knob	1	72	3218-2	Nut - Jam	1
56	321-15	Screw - Cap Hex. Hd.	1	73	3230-2	Bolt - Carriage	1
57	56-7730	Spring	1	74	3290-354	Nut - Double	1
58	56-7740	Spacer	1	75	76-3820	Anchor - Guide, Belt	2
59	321-8	Screw - Cap Hex. Hd.	1	76	76-4660	Spring	1
60	3253-3	Washer - Lock	1	77	3290-378	Tie - Cable	1
61	3256-22	Washer - Flat	2	78	95-1653	Switch - Single Pole	1
62	67-0670	Bracket - Engage, Deck	1	79	3290-392	Screw - Hex Slot Hd	2
63	88-9930	Switch - Micro	1	80	3296-1	Nut - Lock	2

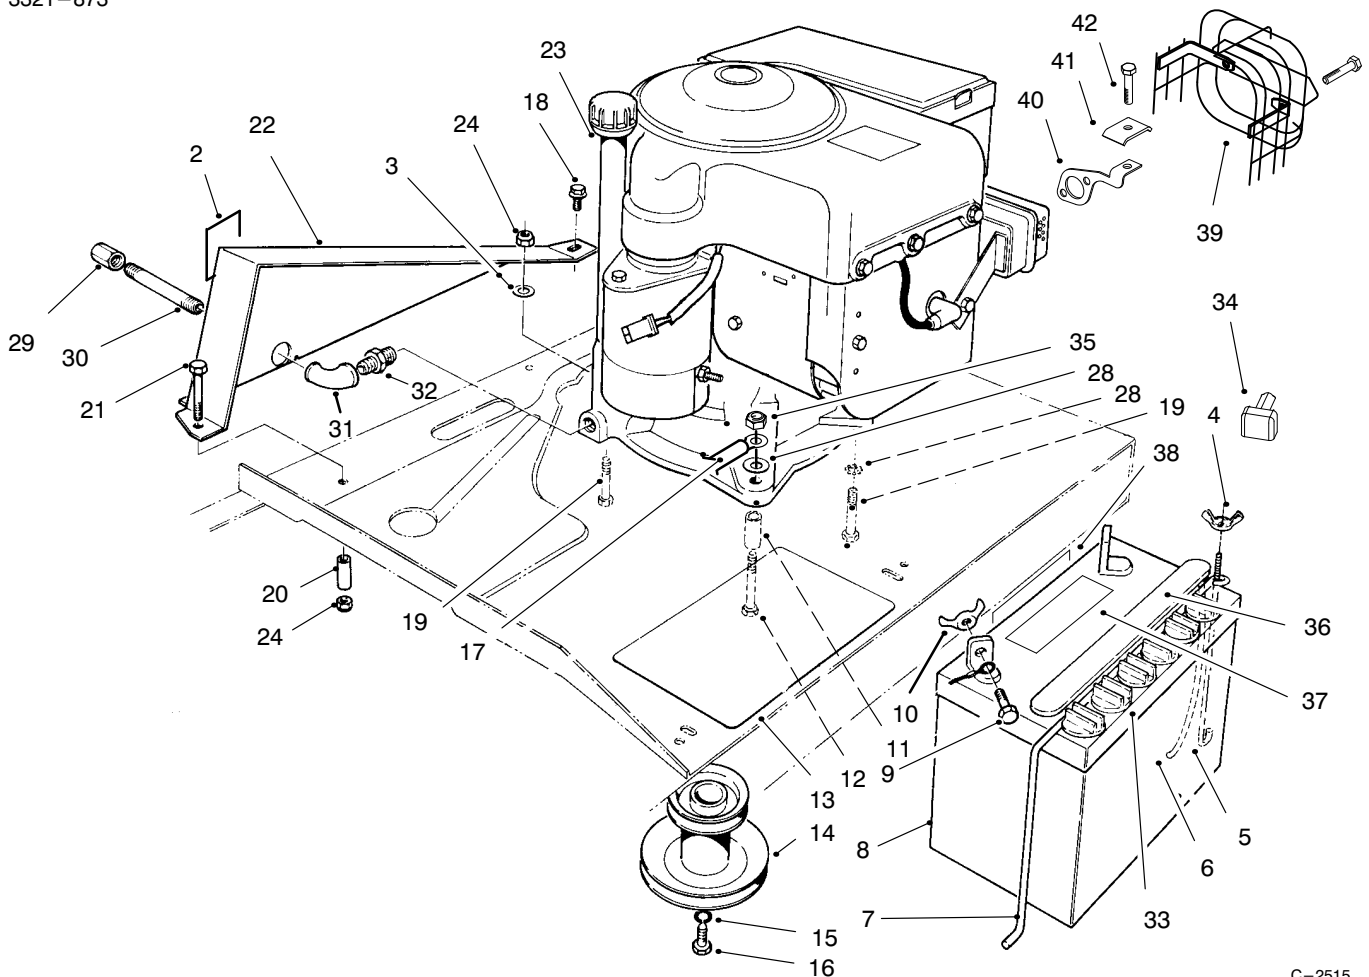


C-2515

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	114621	Decal – European Noise	1
3	3256-23	Washer – Flat	2
4	32103-12	Nut – Wing	1
5	56-7720	Post – Hold Down, Battery	1
6	56-2540	Tube – Drain	1
7	56-7710	Hold Down – Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw – Cap Hex. Hd.	2
10	32103-22	Nut – Wing	2
11	80-4560	Spacer	1
12	322-12	Screw – Cap Hex. Hd.	1
13	62-4300	Pad – Anti-Skid	1
14	98-0712	Pulley – Engine	1
15	3256-25	Washer – Flat	1
16	62-3760	Screw – Cap Hex. Hd.	1
17	54-3091	Assembly – Wire Battery to Ground	2
18	32144-14	Screw – Self Tapping	1
19	322-7	Screw – Cap Hex. Hd.	3
20	67-0920	Guide – Belt	1
21	322-10	Screw – Cap Hex. Hd.	1
22	67-0962-01	Guard – Chain	1

Ref. No.	Part No.	Description	No. Used
23		Engine – 8 H.P. B & S	1
24	3296-29	Nut – Lock	4
28	3255-8	Washer – Lock	3
29	288-2	Cap – Pipe	1
30	289-34	Nipple – Pipe	1
31	2811-17	Elbow – Street	1
32	2812-1	Reducer	1
33	218-560	Cap – Battery	6
34	28-8080	Boot – Battery Terminal	1
35	32153-3	Nut – Lock	1
36	93-9354	Decal – Battery	1
37	93-7276	Decal – Danger	1
38	93-6668	Decal – Battery Charging Instructions	1
39	94-6426	Guard – Muffler	1
40	94-6425	Bracket – Muffler Guard	1
41	94-6424	Tab – Muffler Guard	1
42	32104-76	Screw – Self Tap	3
*	94-6427	Muffler Guard Assembly (Incl. Ref. #39-42)	1
*	88-4490	Reducer – Throttle	1


*Not Illustrated

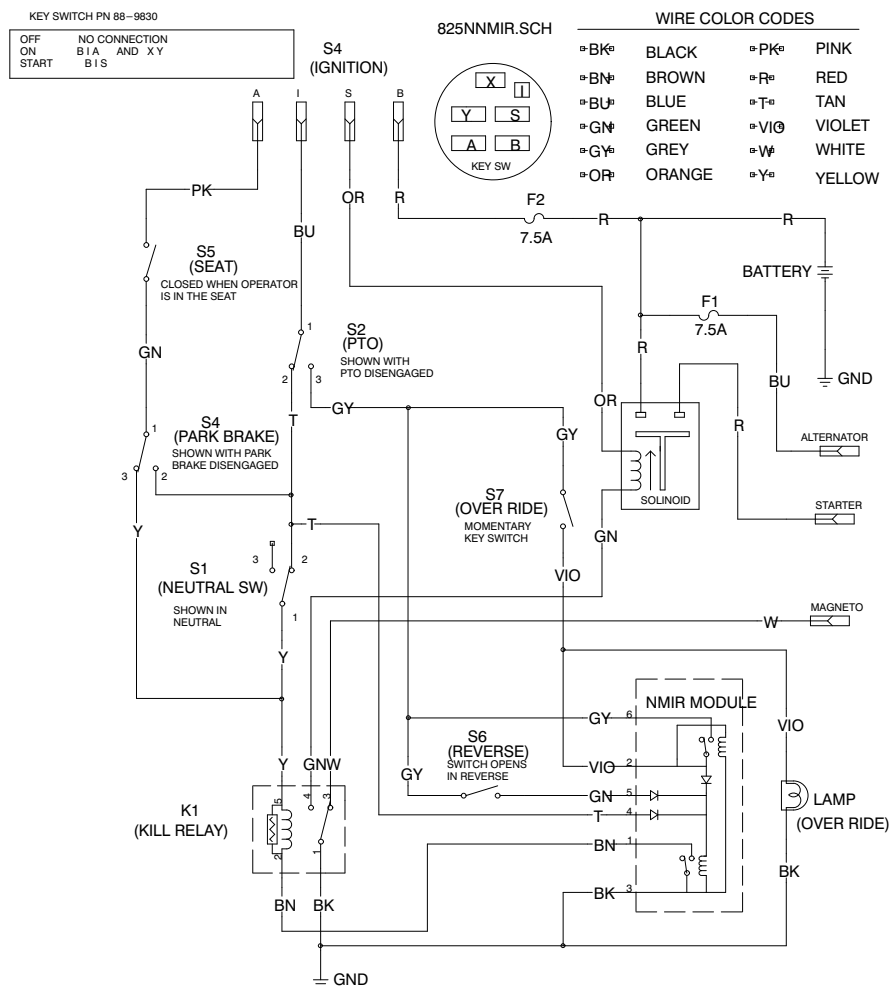

C-2378

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	99-2325	Harness – Wire	1

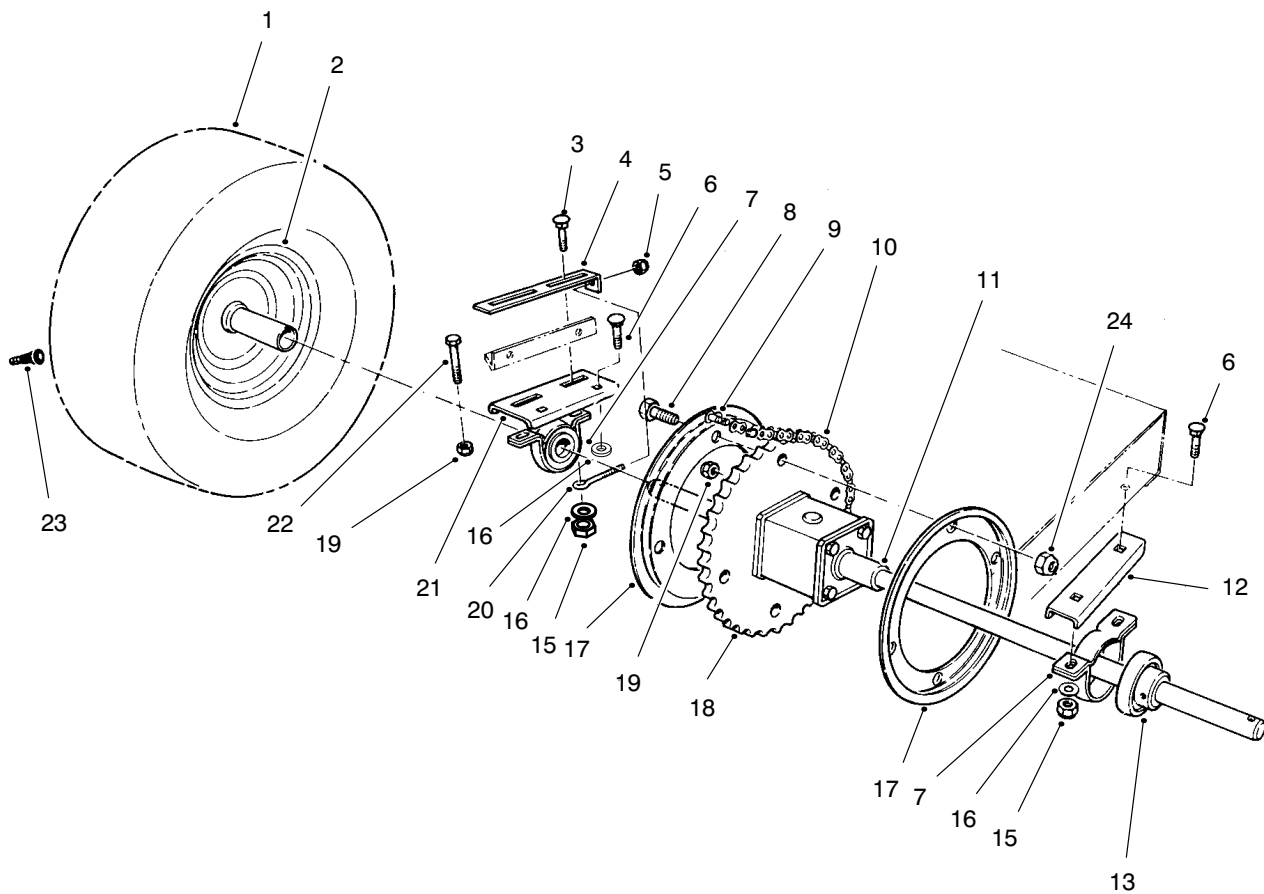


C-0008B

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	99-2992	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	1
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain (Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630-01	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing (Incl. Ref. #14)	2
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	6
17	76-1580-03	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620-03	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2
24	3296-8	Nut - Lock	4
*	232-38	Tube - Inner	2

*Not Illustrated

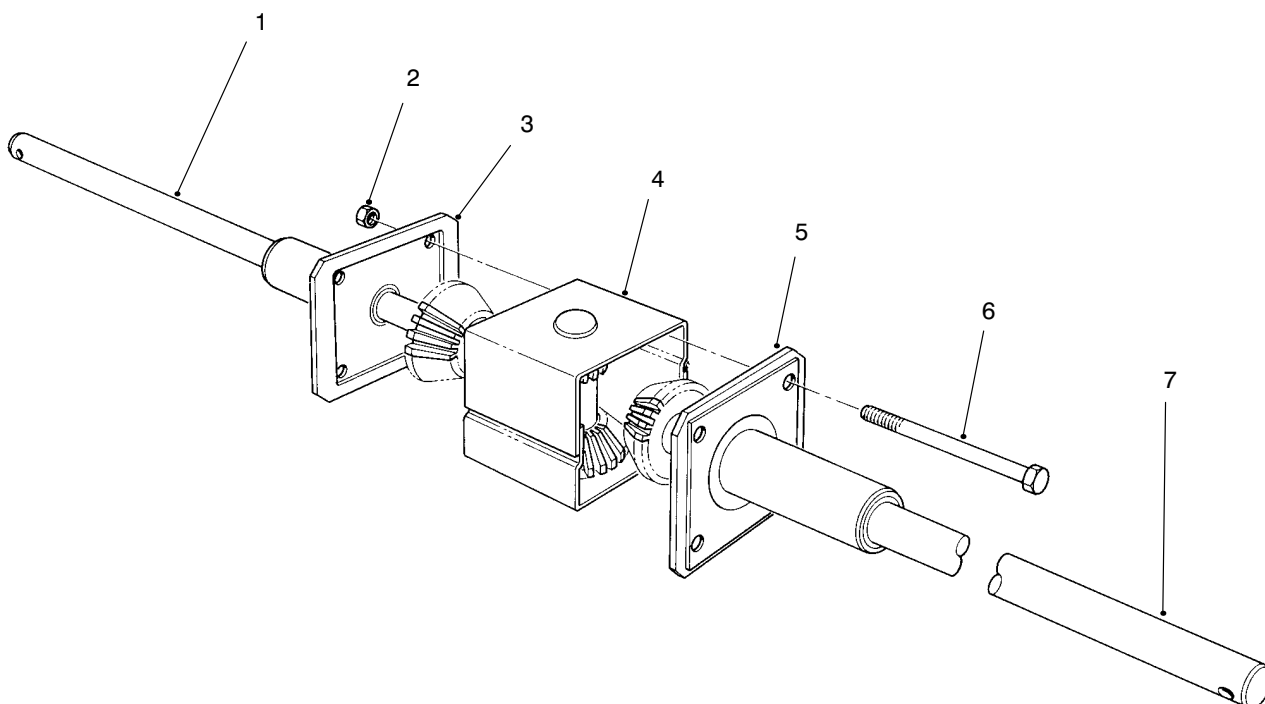


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1	5	55-7771	Cap - End, L.H.	1
2	32152-1	Nut - Lock	4	6	322-22	Screw - Cap Hex. Hd.	4
3	55-7770	Cap - End, R.H.	1	7	55-7763	Axle - L.H.	1
4	55-7780	Case - Gear, Transfer	1	*	56-9960	Differential - Complete	


*Not Illustrated

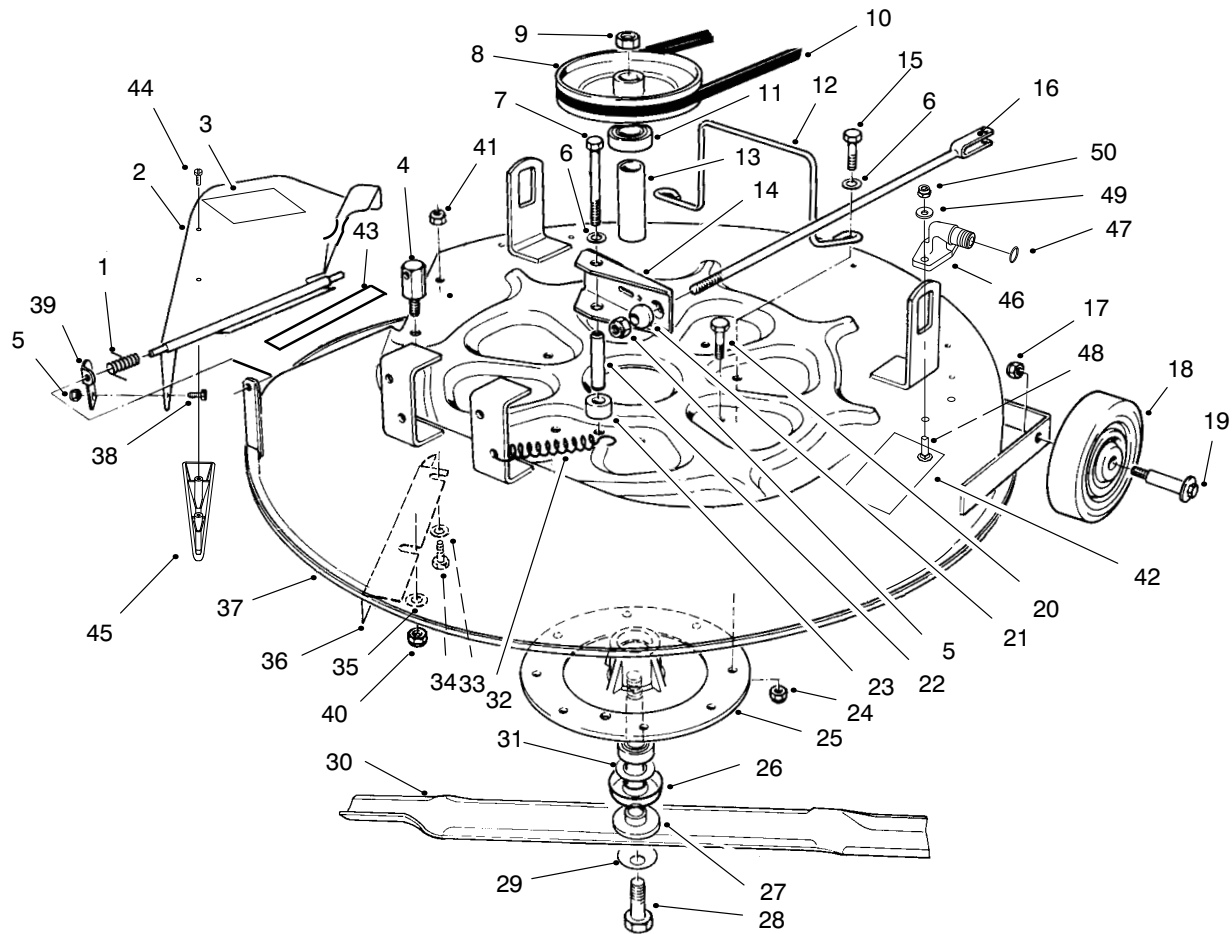

C-0001B

CUTTING UNIT ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1	26	80-4360	Shield - Bearing	1
2	93-9492	Deflector (Incl. Ref. #3)	1	27	80-4340	Shaft - Spindle	1
3	93-7010	Decal - Danger	1	28	26-0671	Bolt - Blade	1
4	67-0140	Post - Pivot	1	29	3290-465	Washer - Belleville	1
5	3296-8	Nut - Lock	2	30	67-0200	Blade	1
6	3256-23	Washer - Lock	3	31	80-4380	Spacer - Spindle	1
7	322-19	Screw - Cap Hex. Hd.	1	32	67-1440	Spring - Brake	1
8	80-4420	Pulley - Deck	1	33	3256-22	Washer - Flat	1
9	3219-6	Nut - Hex.	1	34	3234-21	Screw - Cap Hex. Hd.	1
10	98-0710	V-Belt	1	35	3256-24	Washer - Flat	1
11	38-7820	Bearing - Ball	2	36	67-0130-01	Baffle	1
12	80-4520	Guide - Belt	1	37	95-7485	Deck (Incl. Ref. #42 & 43)	1
13	62-3660	Spacer - Bearing	1	38	321-5	Screw - Cap Hex. Hd.	9
14	67-1370	Assy. - Brake, Deck	1	39	67-1600-01	Bracket - Deflector	1
15	322-6	Screw - Cap Hex. Hd.	2	40	3296-59	Nut - Lock	1
16	67-0570	Rod W.A. - Brake, Deck	1	41	3296-42	Nut - Lock	1
17	3296-39	Nut - Lock	2	42	93-7010	Decal - Danger	1
18	61-9760	Wheel - Deck	2	43	93-7009	Decal - Warning	1
19	56-6590	Bolt - Wheel	2	44	32144-111	Screw - Phillips Pan Hd.	4
20	322-3	Screw - Cap Hex. Hd.	6	45	93-7696	Kicker - CE	2
21	67-0710	Ball - Swivel	1	46	95-2747	Fitting - Washout	1
22	67-0730	Post - Mount, Brake	1	47	46-6290	O-Ring	1
23	76-3810	Spacer - Brake, Deck	1	48	3229-1	Screw - Hex Hd. Cap	2
24	3296-29	Nut - Lock	9	49	3256-1	Washer	2
25	67-0970	Hub - Spindle	1	50	3296-16	Nut - Hex	2

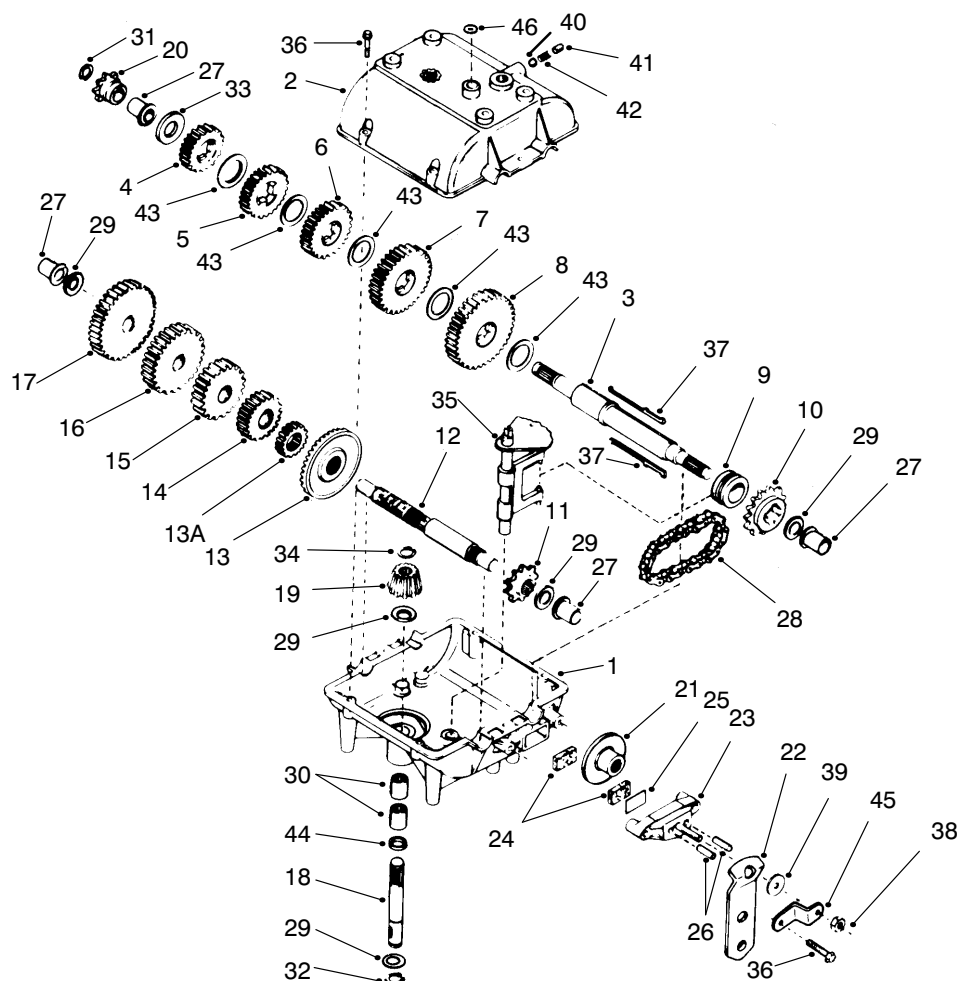

C-0441A

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1	24	790006	Pad - Brake	2
2	772083	Cover - Transmission	1	25	790007	Plate - Pad, Brake	1
3	776217	Shaft - Output	1	26	786026	Pin - Dowel	2
4	778121A	Gear - Spur (20 Teeth)	1	27	780105A	Bushing - Flange	4
5	778122A	Gear - Spur (22 Teeth)	1	28	786081	Chain - Roller (No. 41 Chain, 24 Links)	1
6	778123A	Gear - Spur (25 Teeth)	1	29	780072	Washer - Thrust	5
7	778124A	Gear - Spur (30 Teeth)	1	30	780086	Bearing - Needle	2
8	778125	Gear - Spur (35 Teeth)	1	31	792072	Ring - Retaining	1
9	784266	Collar - Shift	1	32	792035	Ring - Retaining	1
10	786083	Sprocket (18 Teeth)	1	33	780109	Washer	1
11	786082	Sprocket (9 Teeth)	1	34	788040	Ring - Retaining	1
12	776134	Shaft - Counter	1	35	784267	Assy. Rod & Fork - Shift	1
13	788137A	Gear - Bevel (42 Teeth)	1	36	792073	Screw - Thread Forming	8
13A	778136	Gear - Spur (15 Teeth)	1	37	792089A	Key	2
14	778126A	Gear - Spur (20 Teeth)	1	38	792075	Nut - Lock	1
15	778127A	Gear - Spur (25 Teeth)	1	39	792076	Washer	1
16	778128A	Gear - Spur (28 Teeth)	1	40	792077	Ball - Steel	1
17	778129A	Gear - Spur (30 Teeth)	1	41	792078	Screw - Set	1
18	776135	Shaft - Input	1	42	792079	Spring	1
19	778113A	Bevel - Pinion, Input	1	43	780108	Washer - Thrust	5
20	786047	Sprocket (8 Teeth)	1	44	792001	O-Ring	1
21	790003	Disk - Brake	1	45	786086	Bracket - Lever, Brake	1
22	790008A	Lever - Brake	1	46	788069	Seal - Square Cut	1
23	790025	Holder - Pad, Brake	1				

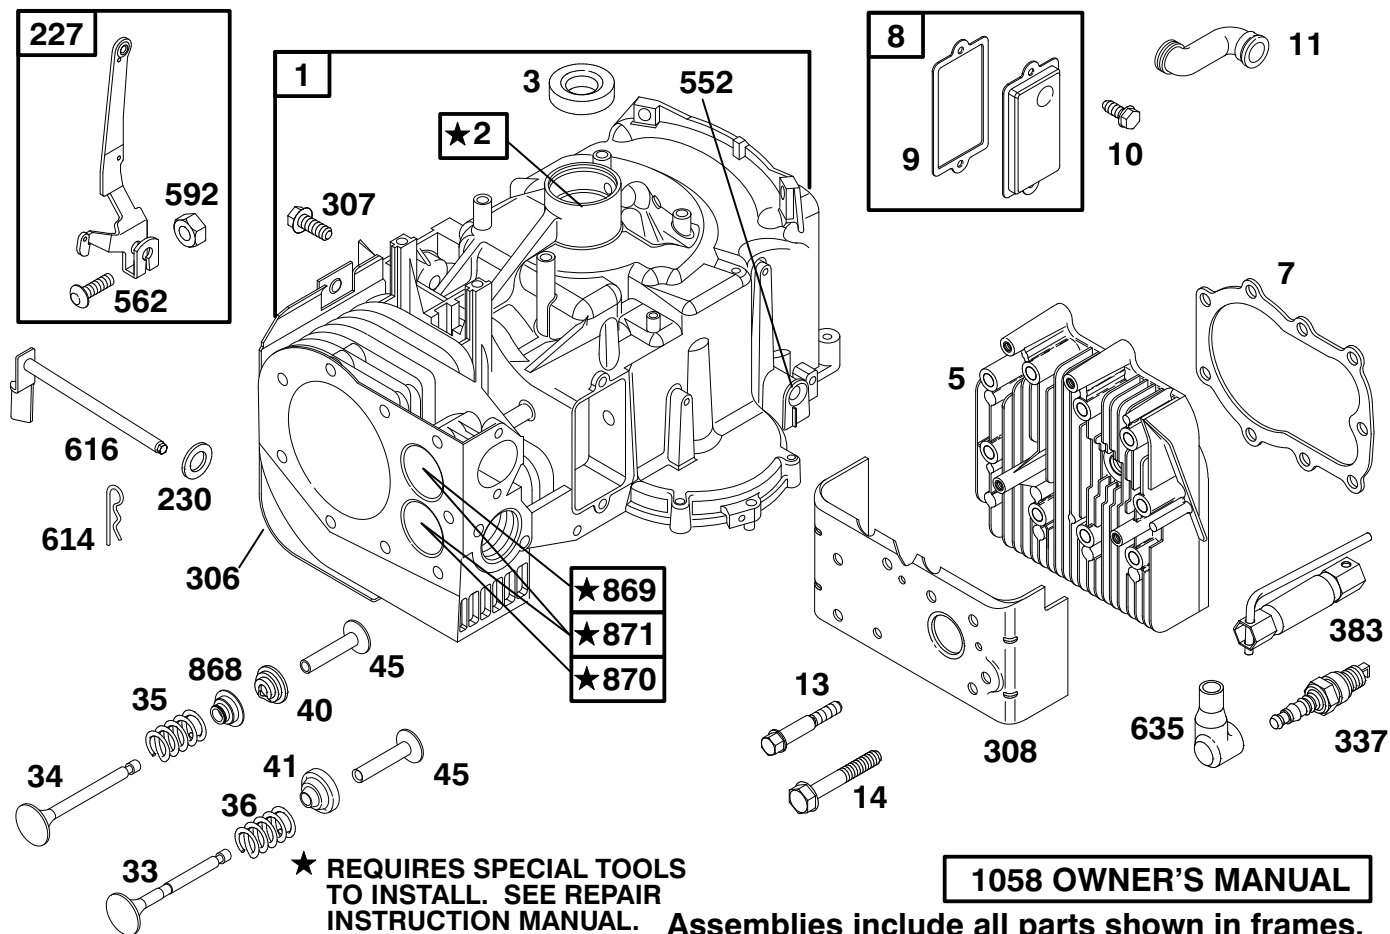


ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
1	495623	Cylinder Assembly	1
2	495657	Bushing	1
★3	391086	Seal-Oil	1
5	214015	Head-Cylinder	1
†★7	272163	Gasket-Cylinder Head	1
8	495735	Breather Assy.	1
†★9	27803	Gasket-Breather	1
10	94621	Screw-Breather Mtg.	1
11	280005	Grommet	1
13	94565	Screw-Cylinder Head	1
14	94622	Screw-Cylinder Head	1
33	390420	Valve-Exhaust	1
34	261055	Valve-Intake	1
35	65906	Spring-Valve (Intake)	1
36	691597	Spring-Valve (Exhaust)	1
40	221596	Retainer-Valve	1
41	691939	Retainer-Valve	1
45	260933	Tappet-Valve	1
227	493935	Lever Assy.-Governor	1

Ref. No.	Part No.	Description	No. Used
230	94927	Washer	1
306	496797	Shield-Cylinder	1
307	94930	Screw-Hex. Hd.	1
308	224896	Cover-Cylinder Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
552	491986	Bushing-Gov. Crank	1
562	94907	Bolt-Carriage	1
592	231978	Nut-Hex.	1
614	93306	Pin-Cotter	1
616	495157	Crank-Governor	1
635	66538	Elbow-Spark Plug	1
868	497656	Seal-Valve	1
869	211661	Seat-Int. Valve	1
870	211661	Seat-Ex. Valve	1
871	261961	Guide-Exhaust Valve	1
	231218	Guide-Intake Valve	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set-Part No. 299577.
 • Included in Carburetor Kit-Part No. 497535.

♦ Included in Carburetor Gasket Set-Part No. 494385.
 † Included in Valve Overhaul Gasket Set-Part No. 498536.

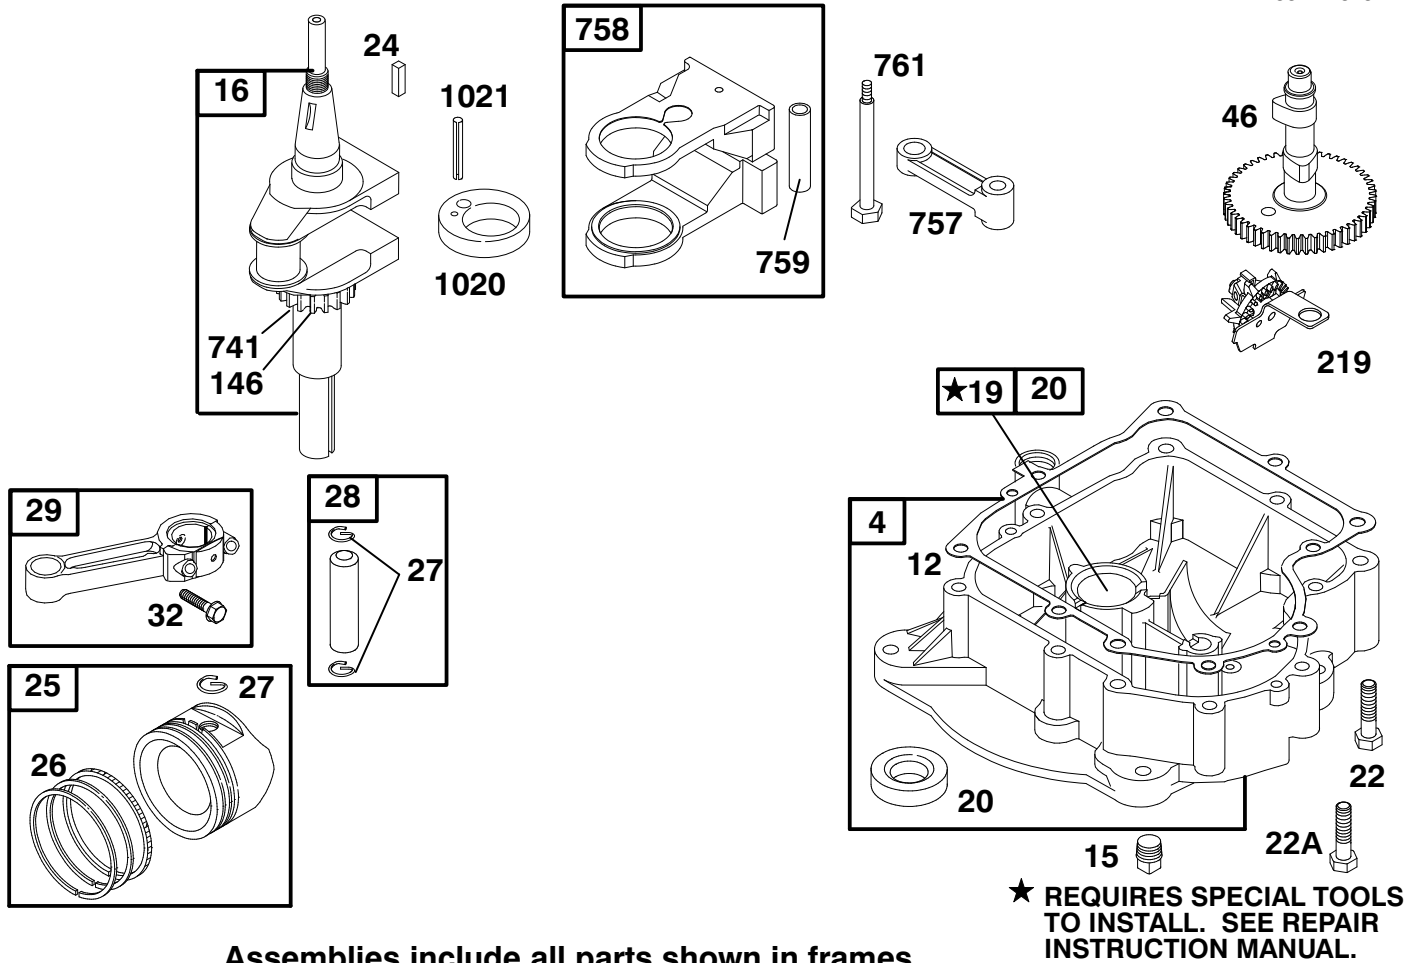

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
4	392548	Sump-Engine	1
★12	271701	Gasket-Crankcase (.015" Thick, Std.)	1
★	27876	Gasket-Crankcase (.005" Thick)	1
★	27877	Gasket-Crankcase (.009" Thick)	1
15	94239	Plug-Oil Drain	1
16	495629	Crankshaft	1
19	295963	Bushing	1
★20	391086	Seal-Oil	1
22	93585	Screw-Hex.	1
22A	94690	Screw-Hex. (Used in Pos. #1)	1
24	222698	Key-Flywheel	1
25	499907	Piston Assy. (Std.)	1
	499908	Piston Assy. (.010" O.S.)	1
	499909	Piston Assy. (.020" O.S.)	1
	499910	Piston Assy. (.030" O.S.)	1


- ★ Included in Gasket Set-Part No. 299577.
- Included in Carburetor Kit-Part No. 497535.

Ref. No.	Part No.	Description	No. Used
26	499421	Ring Set (Std.)	1
	299743	Ring Set (Std. Chrome)	1
	391670	Ring Set (.010" O.S.)	1
	391671	Ring Set (.020" O.S.)	1
	391672	Ring Set (.030" O.S.)	1
27	690975	Lock-Piston Pin	1
28	499911	Pin-Piston (Std.)	1
	499920	Pin-Piston (.005" O.S.)	1
29	390402	Rod-Connecting	1
	390773	Rod-Connecting (.020" U.S.)	1
32	94670	Screw-Conn. Rod	1
46	214786	Gear-Cam	1
146	94388	Key-Timing	1
219	491397	Gear-Governor	1
741	263025	Gear-Timing	1
757	213998	Link-Counterweight	1
758	390172	Counterweight	1
759	230787	Pin-Counterweight	1
761	94592	Screw-Shoulder	1
1020	261190	Eccentric	1
1021	94853	Pin-Groove	1

- ◆ Included in Carburetor Gasket Set-Part No. 494385.
- † Included in Valve Overhaul Gasket Set-Part No. 498536.

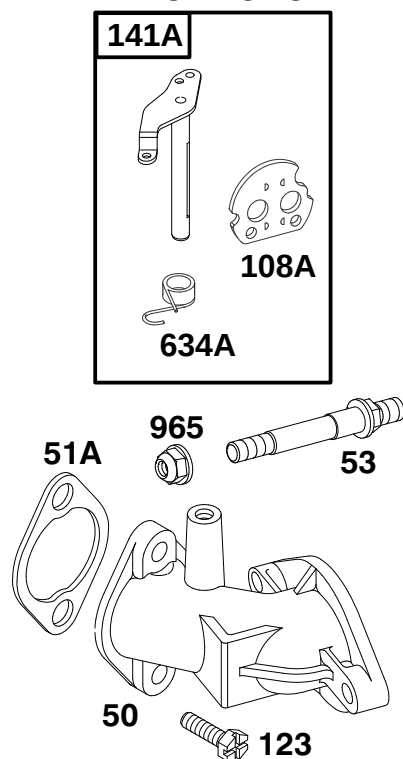REMOTE CHOKE

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

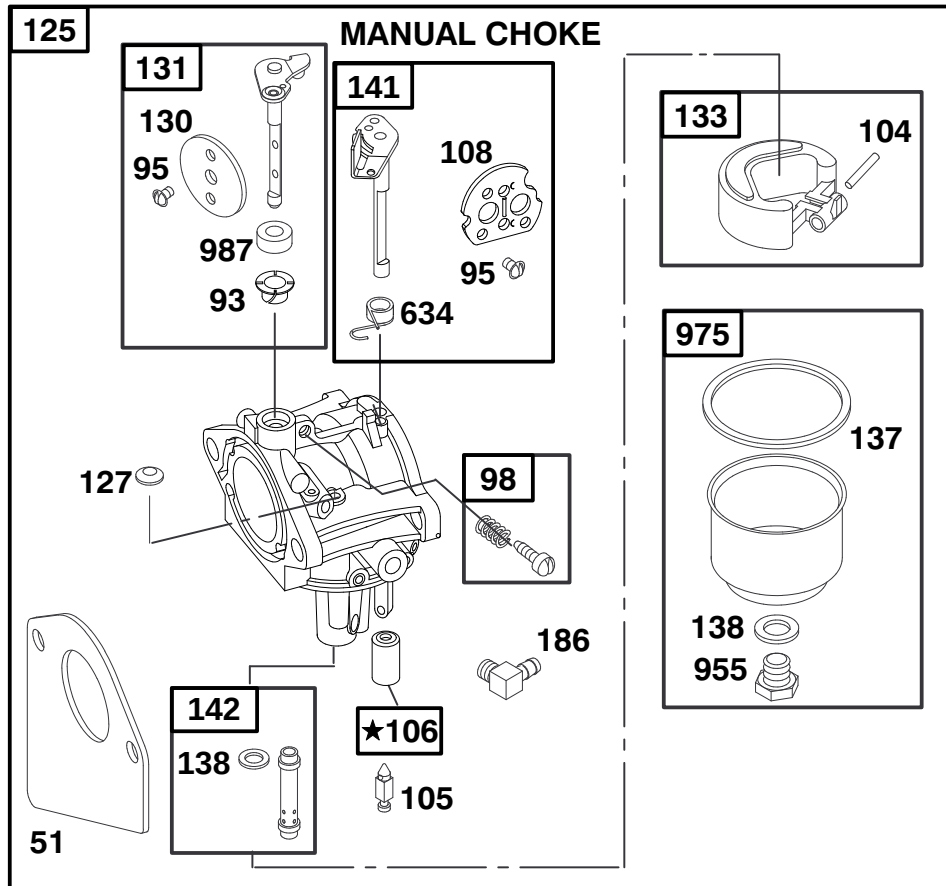125**MANUAL CHOKE**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold-Intake	1
◆●51	272465	Gasket-Carb. Elbow	1
★†51A	272554	Gasket-Carb. Mtg.	1
53	94637	Stud-Carb. Mtg.	1
93	281346	Bushing-Throttle Shaft	1
●95	94098	Screw-Slotted	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve-Needle	1
●106	231854	Seat-Inlet	1
108	224558	Valve-Manual Choke	1
108A	224540	Valve-Remote Choke	1
123	94913	Screw-TorxRHex.	1
125	692684	Carburetor	1
●127		Plug-Welch	1
		Note: Sold in Kit Only.	1
130	224668	Valve-Throttle	1


Ref. No.	Part No.	Description	No. Used
131	494885	Shaft-Throttle	1
133	494381	Float-Carburetor	1
◆●137	281165	Gasket-Float Bowl	1
◆●138	281164	Washer	1
141	495097	Shaft-Manual Choke	1
141A	495931	Shaft-Remote Choke	1
142	692687	Nozzle-Carburetor	1
		(Standard) Nozzle-Carburetor	1
		(High Altitude)	1
186	493496	Connector-Hose	1
●634	494453	Seal-Choke Shaft	1
●634A	494455	Seal-Choke Shaft	1
955	94642	Plug	1
965	94010	Nut-Hex.	1
975	495933	Bowl-Float	1
◆987	281166	Seal-Throttle Shaft	1

★ Included in Gasket Set-Part No. 299577.

● Included in Carburetor Kit-Part No. 497535.

◆ Included in Carburetor Gasket Set-Part No. 494385.

† Included in Valve Overhaul Gasket Set-Part No. 498536.

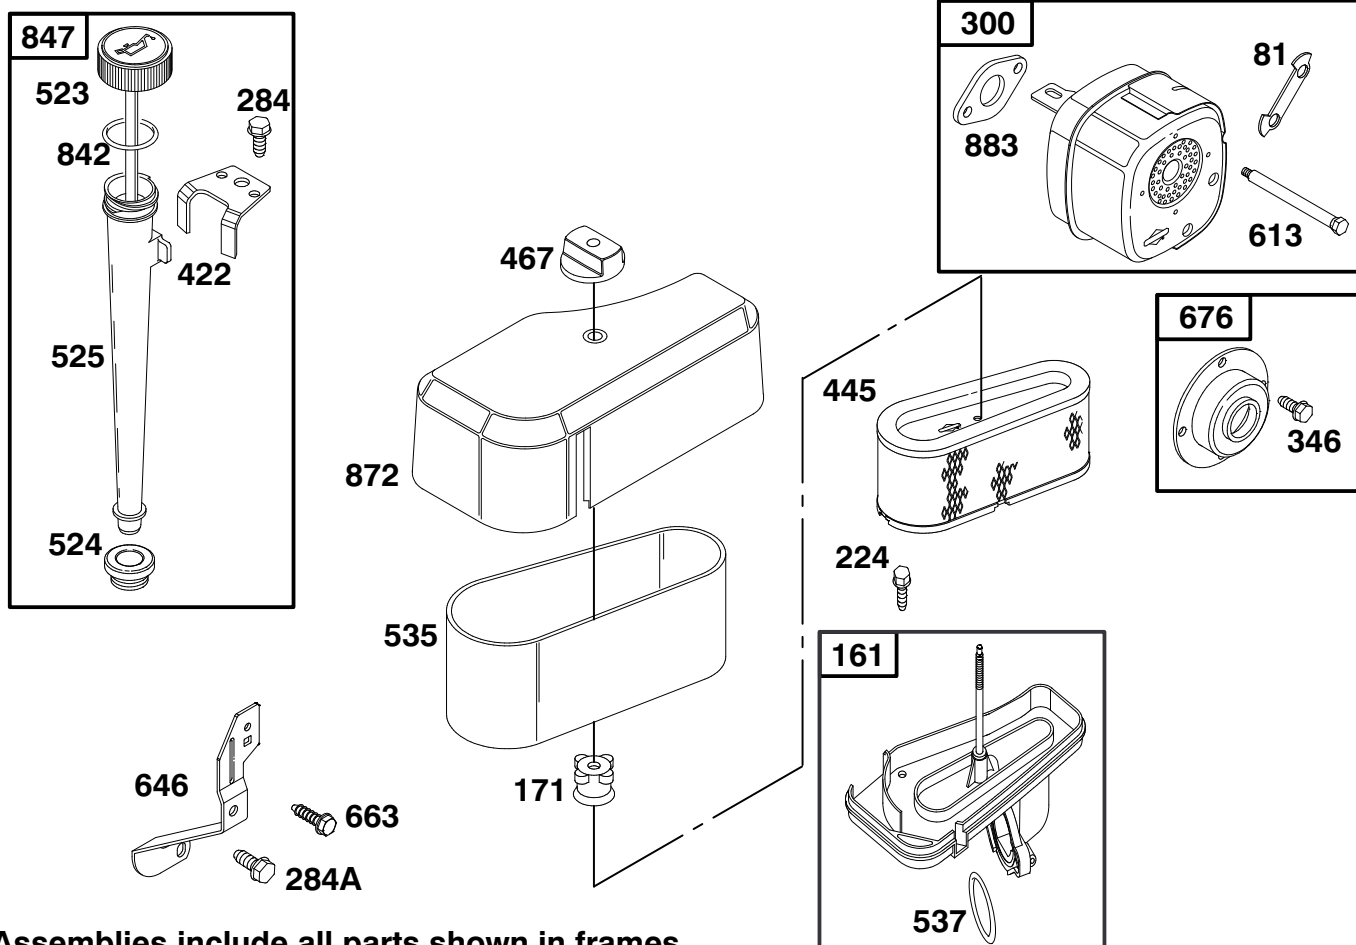

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
81	222263	Lock—Screw	1	★524	81370	Grommet	1
161	494827	Base—Air Cleaner	1	525	280133	Tube—Oil Fill	1
171	281051	Nut	1	535	272477	Filter—Air	1
224	94730	Screw—Hex.	1	★537	281106	Gasket—Air Cleaner	1
284	94874	Screw—Hex.	1	613	94042	Screw—Shoulder	1
284A	94704	Screw—Hex.	1	646	224614	Brace	1
300	692304	Muffler—Exhaust	1	663	94929	Screw—Hex.	1
346	94896	Screw—Hex.	1	676	395700	Deflector—Exhaust	1
422	224872	Bracket—Oil Fill	1	★842	270920	Seal—O-Ring	1
445	493910	Filter—Air	1	847	392066	Dipstick/Tube Assembly	1
467	493903	Knob	1	872	281105	Cover—Air Cleaner	1
523	495228	Dipstick	1	†★883	272309	Gasket—Exhaust	1

★ Included in Gasket Set—Part No. 299577.

● Included in Carburetor Kit—Part No. 497535.

◆ Included in Carburetor Gasket Set—Part No. 494385.

† Included in Valve Overhaul Gasket Set—Part No. 498536.

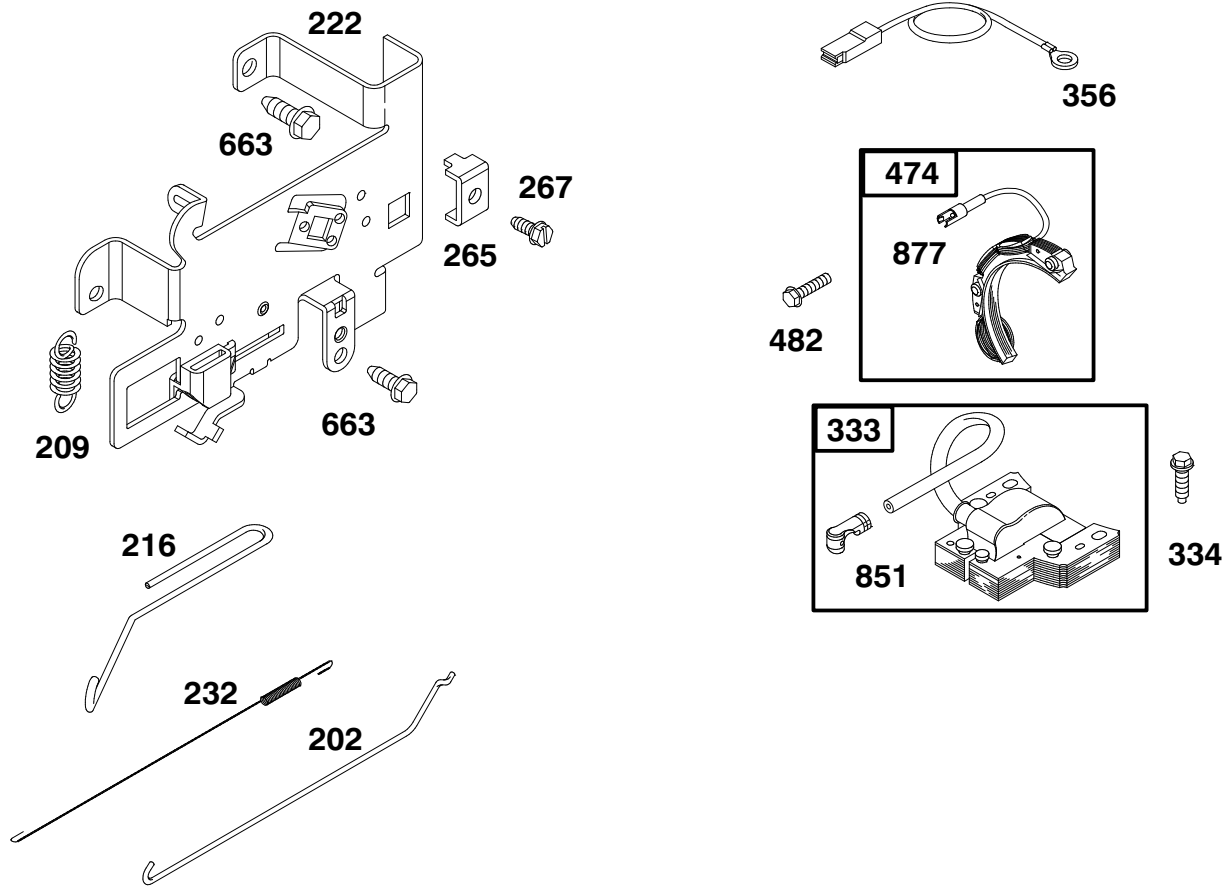


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
202	262769	Link-Mechanical Governor	1
209	260871	Spring-Governor	1
216	262768	Link-Choke	1
222	495611	Bracket-Control	1
232	262787	Spring-Link	1
265	221535	Clamp-Casing	1
267	94906	Screw-Hex.	1

Ref. No.	Part No.	Description	No. Used
333	398811	Armature-Magneto	1
334	94731	Screw-Hex.	1
356	494328	Wire-Stop	1
474	391529	Alternator	1
482	93621	Screw-Hex.	1
663	94929	Screw-Hex.	1
851	493880	Terminal-Cable	1
877	393814	Wire-Alternator	1

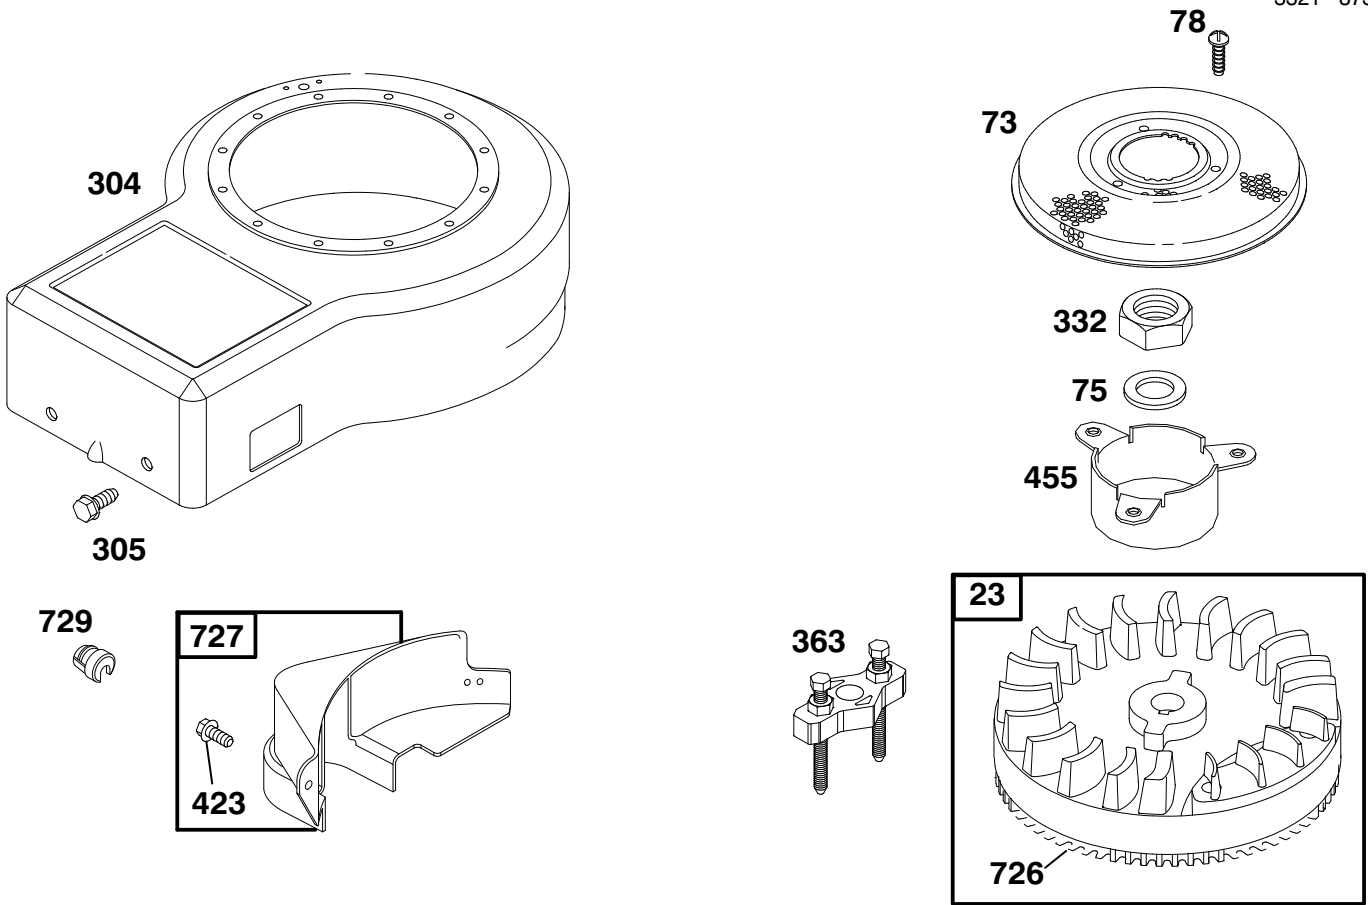


Assemblies include all parts shown in frames.

1036 LABEL KIT-EMISSIONS

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel	1
73	224517	Screen-Rotating	1
75	225136	Washer-Flywheel	1
78	94626	Screw-Hex.	1
304	494084	Housing-Blower	1
305	94786	Screw-Hex.	1
332	94877	Nut-Flywheel	1

Ref. No.	Part No.	Description	No. Used
363	19165	Flywheel Puller	1
423	94625	Screw-Shoulder	1
455	222561	Cup-Flywheel	1
726	392134	Gear-Ring	1
727	395405	Guard-Starter Drive	1
729	281395	Clip-Wire	1
1036	499356	Label Kit - Emissions	1




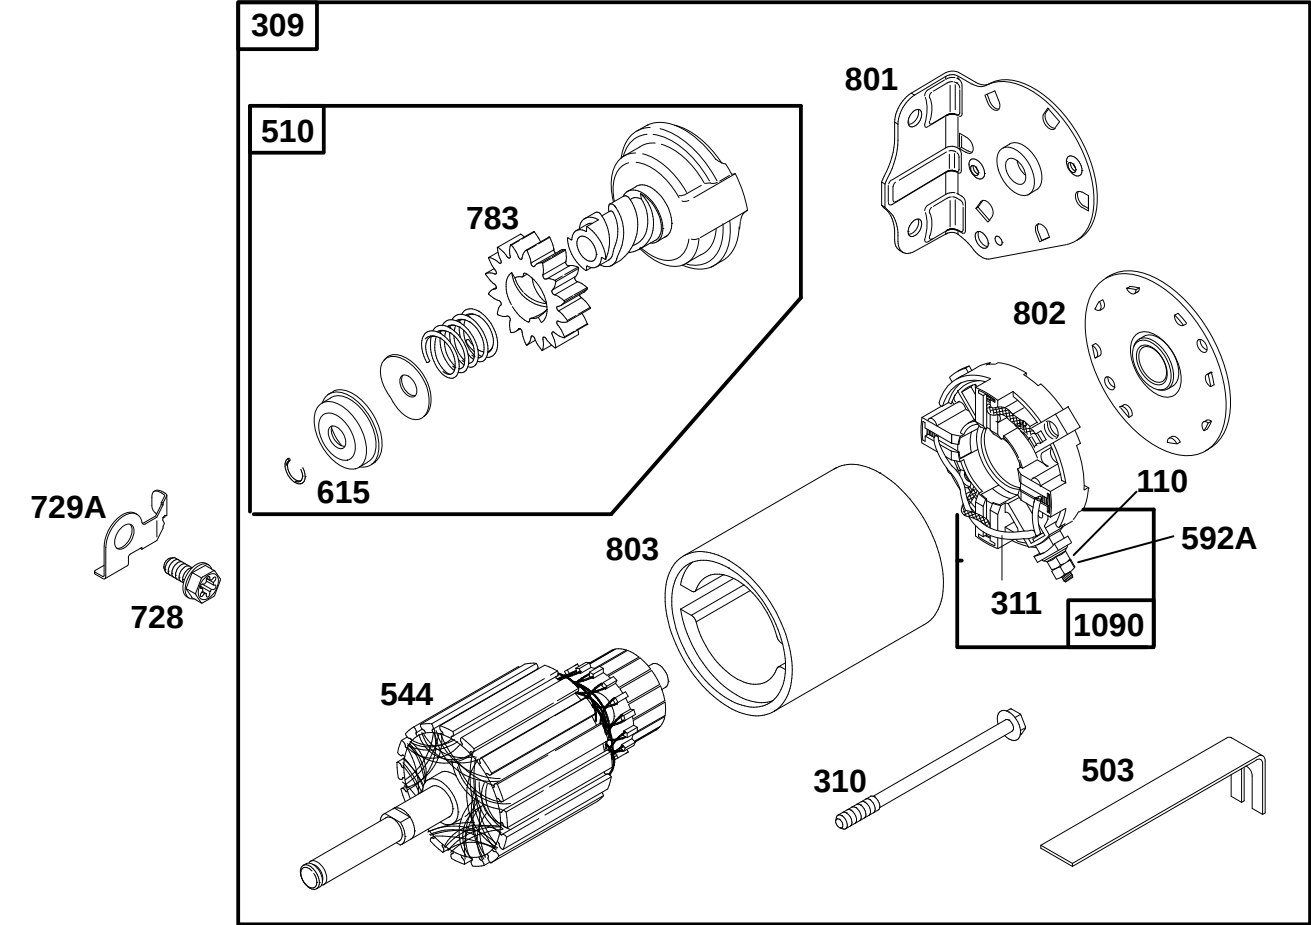


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
110	225137	Washer-Flat	1
309	497595	Motor-Starter	1
310	94003	Screw-Hex.	1
311	497608	Brush Set	1
592A	92278	Nut-Hex.	1
503	806006	Strap-Starter	1
510	497606	Drive-Starter	1
544	497603	Armature-Starter	1

Ref. No.	Part No.	Description	No. Used
615	263080	Retainer	1
728	94951	Screw-Torx® Hex.	1
729A	225170	Clip-Wire	1
783	280104	Gear-Starter	1
801	394856	Cap-Drive	1
802	497607	Cap-End	1
803	497604	Housing-Starter	1
1090	497605	Retainer-Brush	1

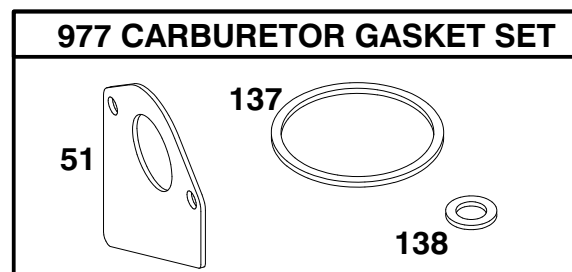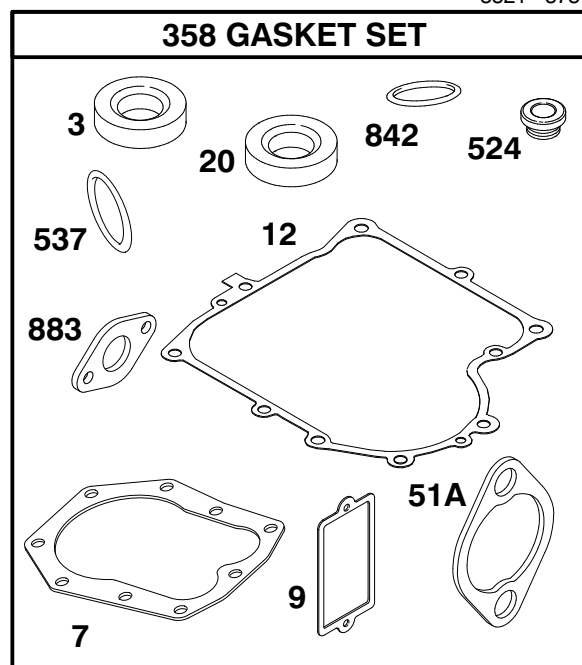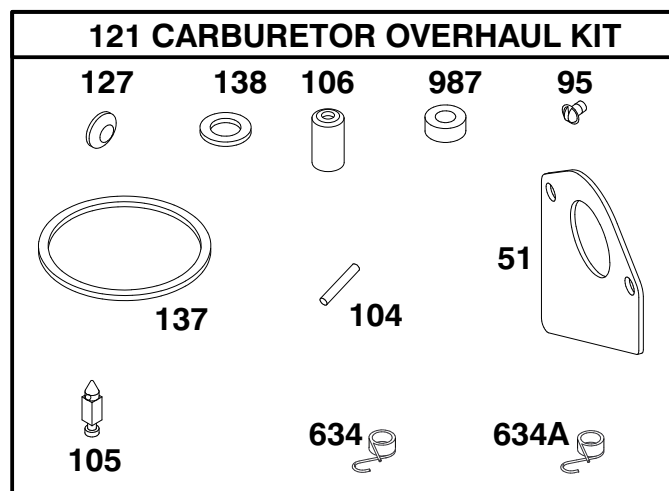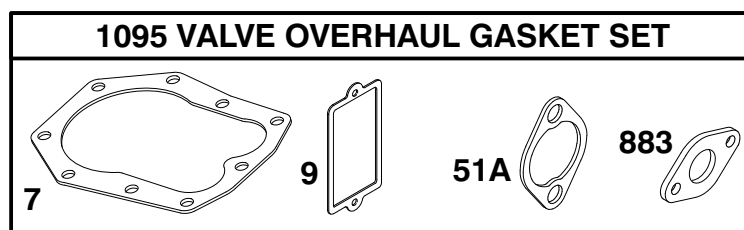

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707-0421-E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
†★7	272163	Gasket—Cylinder Head	1
†★9	27803	Gasket—Breather	1
★12	271701	Gasket—Crankcase (.015" Thick, Std.)	1
★	27876	Gasket—Crankcase (.005" Thick)	1
★	27877	Gasket—Crankcase (.009" Thick)	1
★20	391086	Seal—Oil	1
◆●51	272465	Gasket—Carburetor Elbow	1
†★51A	272554	Gasket—Carb. Mtg.	1
●95	94098	Screw—Slotted	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve—Needle	1
●106	231854	Seat—Inlet	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug—Welch	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer	1
358	299577	Gasket Set	1
★524	281370	Grommet	1
★537	281106	Gasket—Air Cleaner	1
●634	494453	Seal—Choke Shaft	1
●634A	494455	Seal—Choke Shaft	1
★842	270920	Seal—O-Ring	1
†★883	272309	Gasket—Exhaust	1
977	494385	Gasket Set—Carburetor	1
◆987	281166	Seal—Throttle Shaft	1
1095	498536	Gasket Set— Valve Overhaul	1

★ Included in Gasket Set—Part No. 299577.
● Included in Carburetor Kit—Part No. 497535.

◆ Included in Carburetor Gasket Set—Part No. 494385.
† Included in Valve Overhaul Gasket Set—Part No. 498536.

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]