



Proline 53cm

Recycler[®] /Rear Bagging Mower

Model No. 22158 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Rear Wheel Assembly	8
Housing Assembly (cont.)	2	Gear Case Assembly	9
Engine Assembly	3	Bagging Assembly	10
Fuel Tank Assembly	4	Engine GTS–200	11–19
Handle Assembly	5	Toro Part Number Index	20–23
Rear Wheel & Gear Case Assembly	6	Maintenance	24–25
Front Wheel Assembly	7		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Kit	Model No. 59113		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

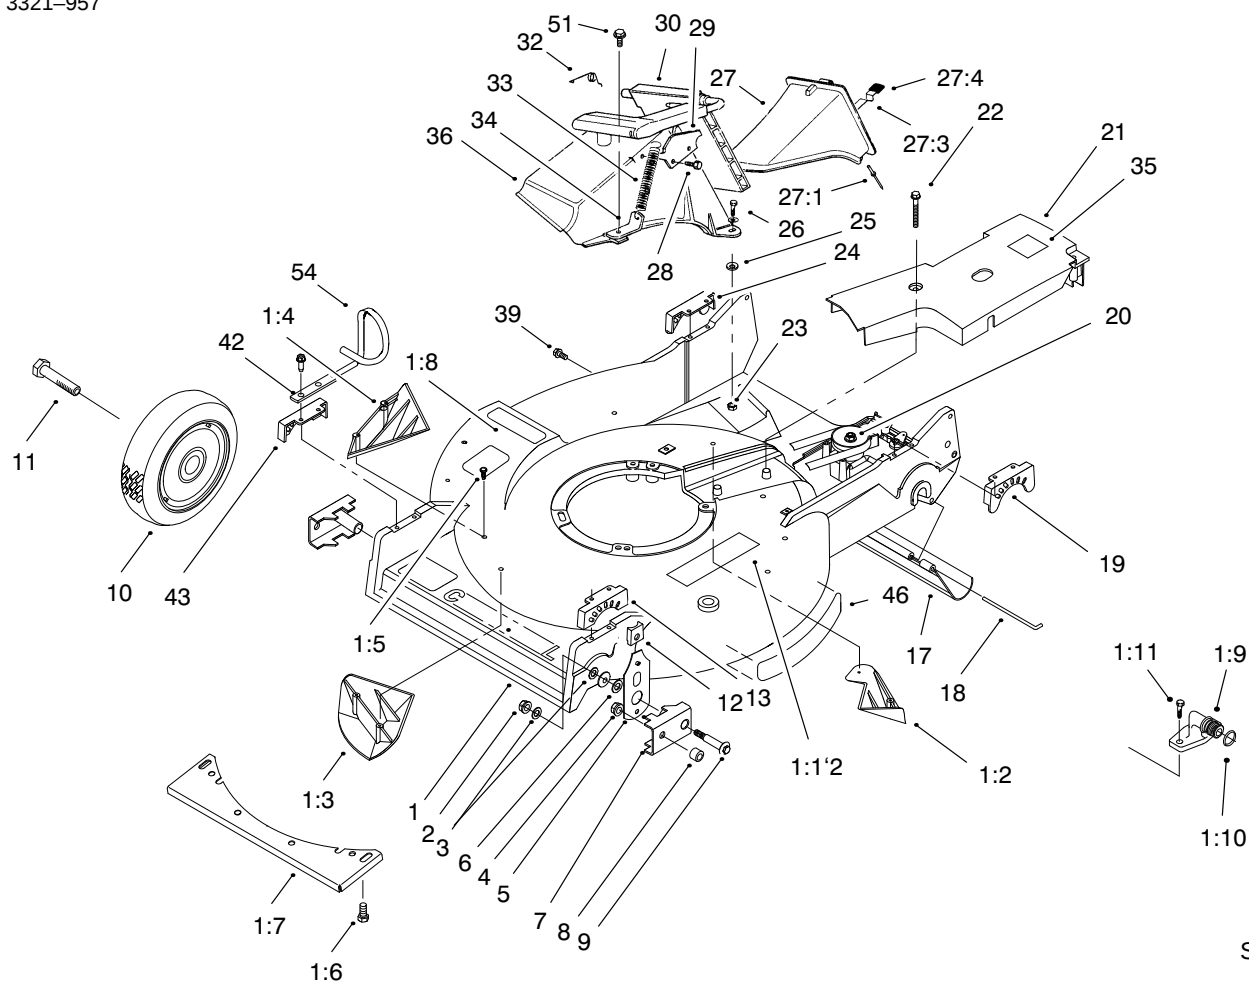


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7142	1	Housing – Service
1:2	92-1750	1	Kicker – Rear, Sp
1:3	92-1720	1	Kicker – Front
1:4	92-1730	1	Kicker – R.h.
1:5	32144-111	6	Screw-Plask
1:6	32144-70	4	Screw-Taptite
1:7	46-5400-03	1	Shield-21 In
1:8	93-6654	1	Decal – Danger – Covers
1:9	95-2747	1	Fitting – Washout
1:10	46-6290	1	O Ring
1:11	46-6811	2	Screw/Washer V
1:12	93-6657	1	Decal – Danger
2	3296-6	2	Nut-Lock Ni
3	40-1940	4	Washer-Wheel Bolt
4	32152-2	2	Nut-Conelock
5	66-7560	2	Front Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Pivot Arm Wa – Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	53-7720	2	Wheel & Tire ASM
11	323-12	2	Screw-HH
12	25-7740	2	Knob-Arm
13	49-8760	1	Quadrant-LH Front
17	44-0580	1	Shield – Trailing


Ref. No.	Part No.	Qty.	Description
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-LH Rear
20		1	Gear Case Assembly
21	98-3214	1	Cover-Belt, Sp (Com'l)
22	37-7260	2	Screw-HH
23	3296-42	2	Nut-Lock Ni
24	49-8750	1	Quadrant-RH Rear
25	3256-22	2	Washer-Flat
26	321-7	2	Screw-HH
27	77-0502	1	Discharge Plug Assembly
27:1	3295-35	1	Rivet-Alum
27:3	76-4640	1	Latch-Disc. Plug +
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	ASM - Discharge Door
32	80-3770	1	Spring-Door Ret
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	93-6664	1	Decal - Int'l Grease
36	82-9151	1	Tunnel-Discharge
39	46-6810	1	Screw & Washer ASM
42	49-2040	8	Screw-Taptite
43	49-8770	1	Quadrant-RH Front

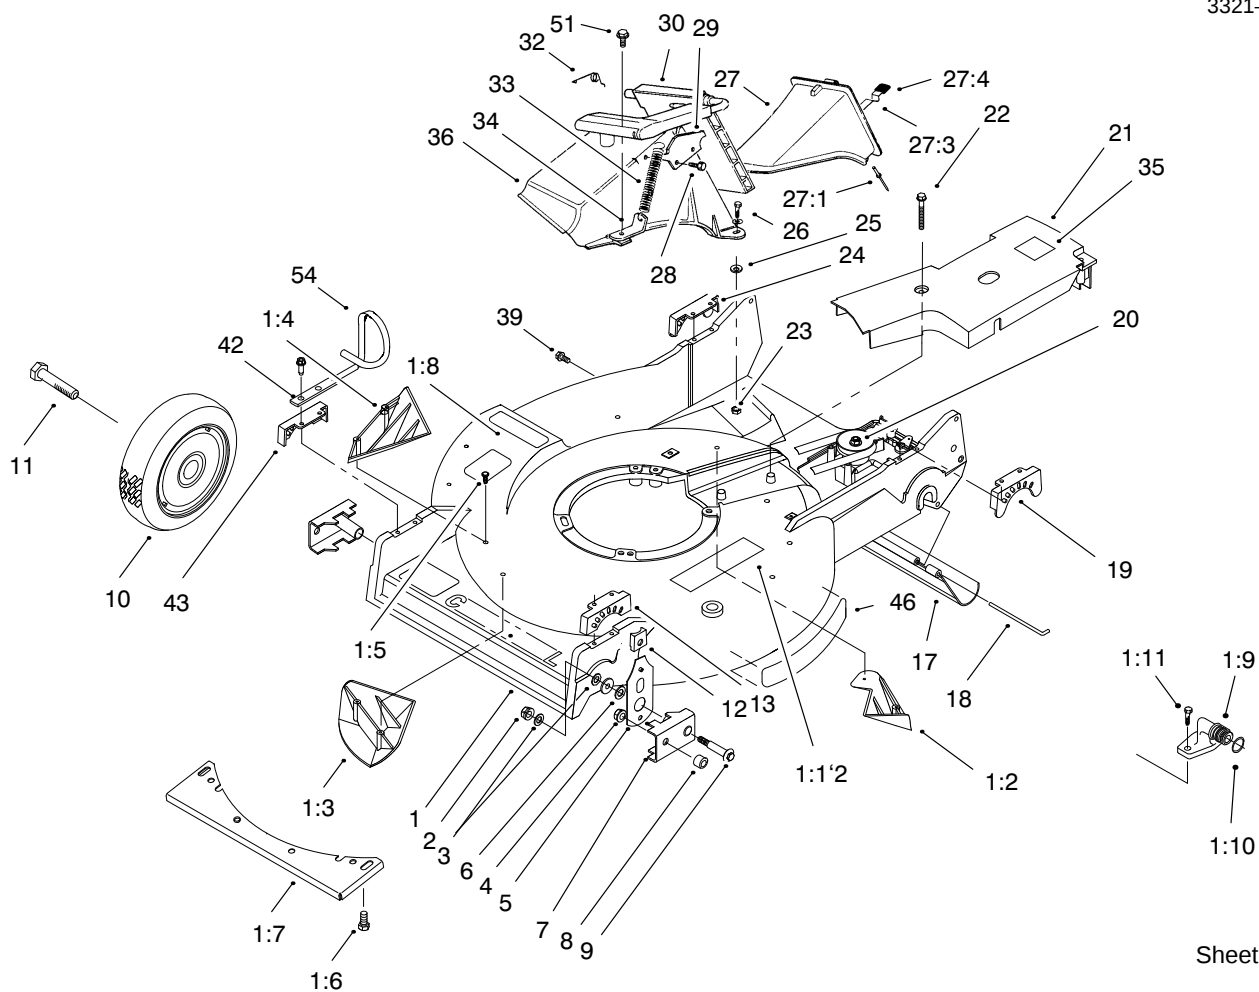

Sheet No.:2

Housing Assembly (cont.)


Ref. No.	Part No.	Qty.	Description
46	92-7988	1	Decal – Recycler
51	46-6811	1	Screw/Washer V
54	98-9227	1	Guard – Primer

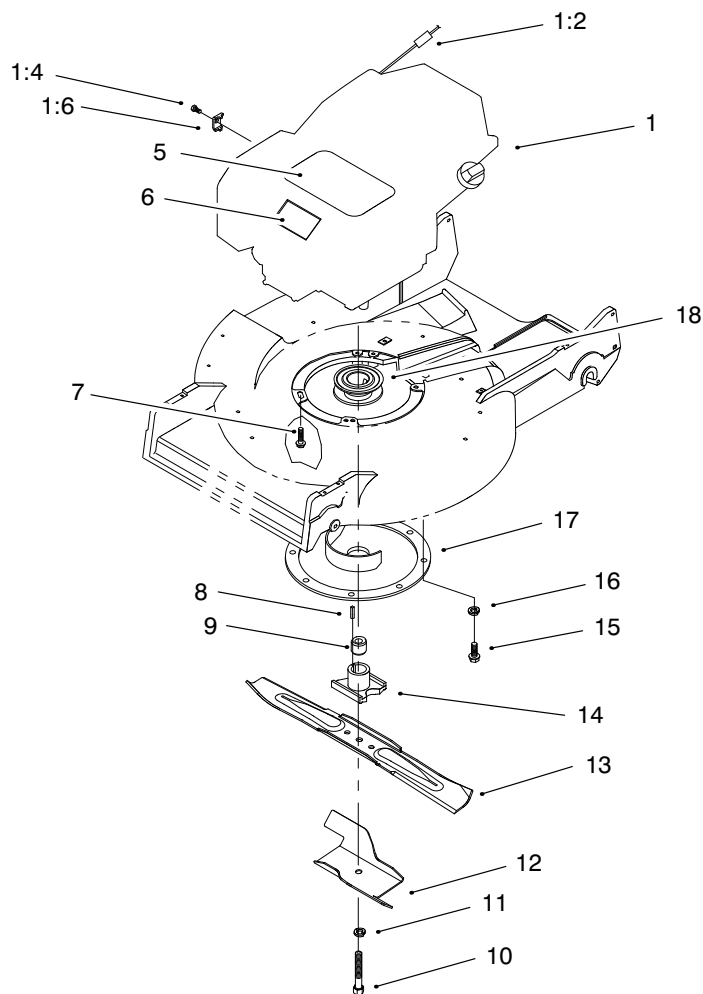

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9236	1	ASM – Engine Replacement				
1:2	2210-316	1	Stop-Rope F/W Engine				
1:4	93-8470	1	Screw-Clamp F/W Engine				
1:6	2210-249	1	Clamp-Casing W Engine				
5	98-2004	1	Decal – Engine				
6	84-4960	1	Decal – Proline				
7	32144-102	3	Screw-HH				
8	27-6300	1	Key-Square				
9	52-2190	1	Spacer-Blade Ret				
10	26-0670	1	Screw-Blade				
11	3253-22	1	Washer-Lock/Sp				
12	92-1599-03	1	Stiffener-Blade				
13	14-9419	1	Blade w/Decal				
14	52-2170	1	Blade Retainer Wa				
15	32144-70	3	Screw-Taptite				
16	3254-6	3	Washer-Lock/Int				
17	65-5860	1	Crankshaft Protector As				
18	46-7910	1	Pulley-Driver				

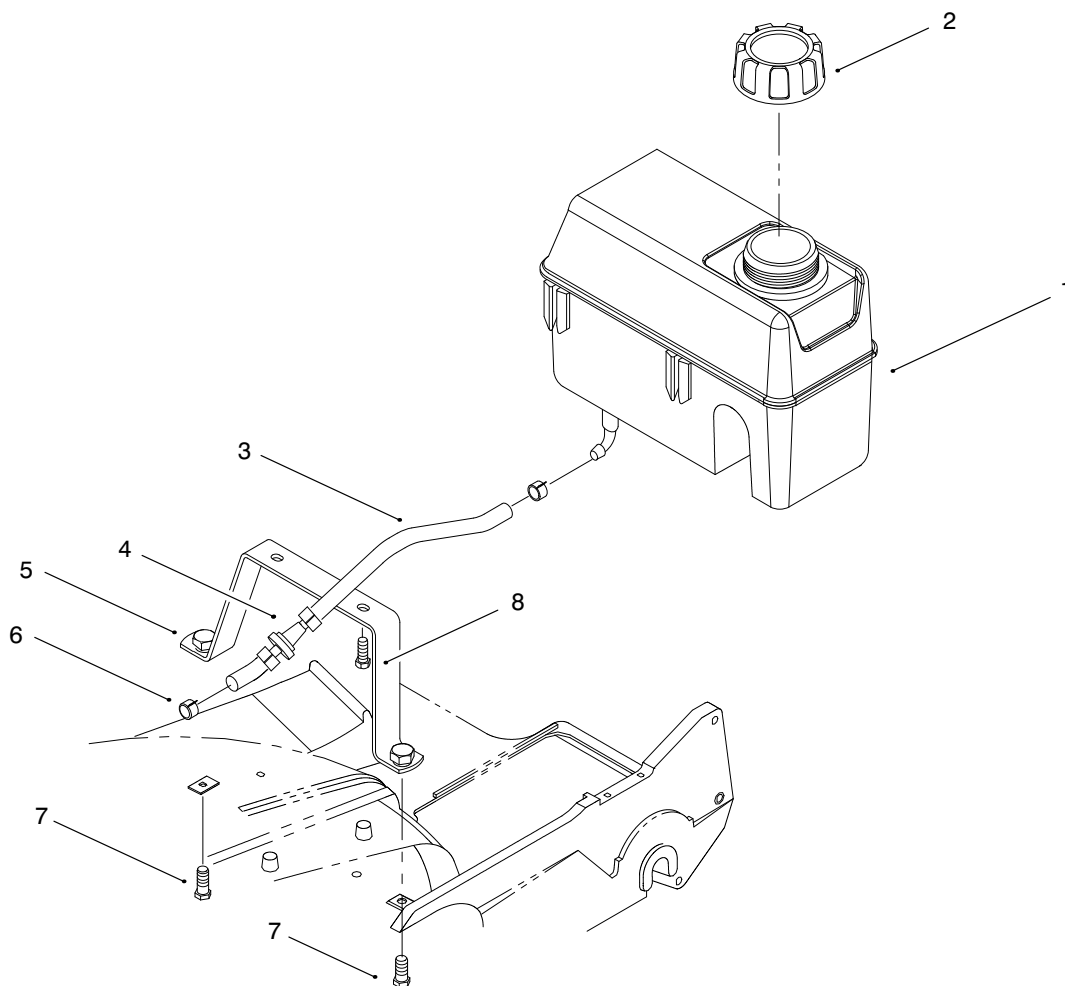


Sheet No.:4

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3166	1	Tank - Fuel
2	93-7198	1	Gas Cap Assembly
3	51-3210	2	Line-Fuel 5.68
4	71-9280	1	Filter-Fuel
5	84-9170-03	1	Tank Base Wa
6	2412-95	4	Clamp-Fuel Line
7	95-1727	2	Screw-Taptite w/Patch
8	46-8091	2	Special-HWH

Ref. No.	Part No.	Qty.	Description

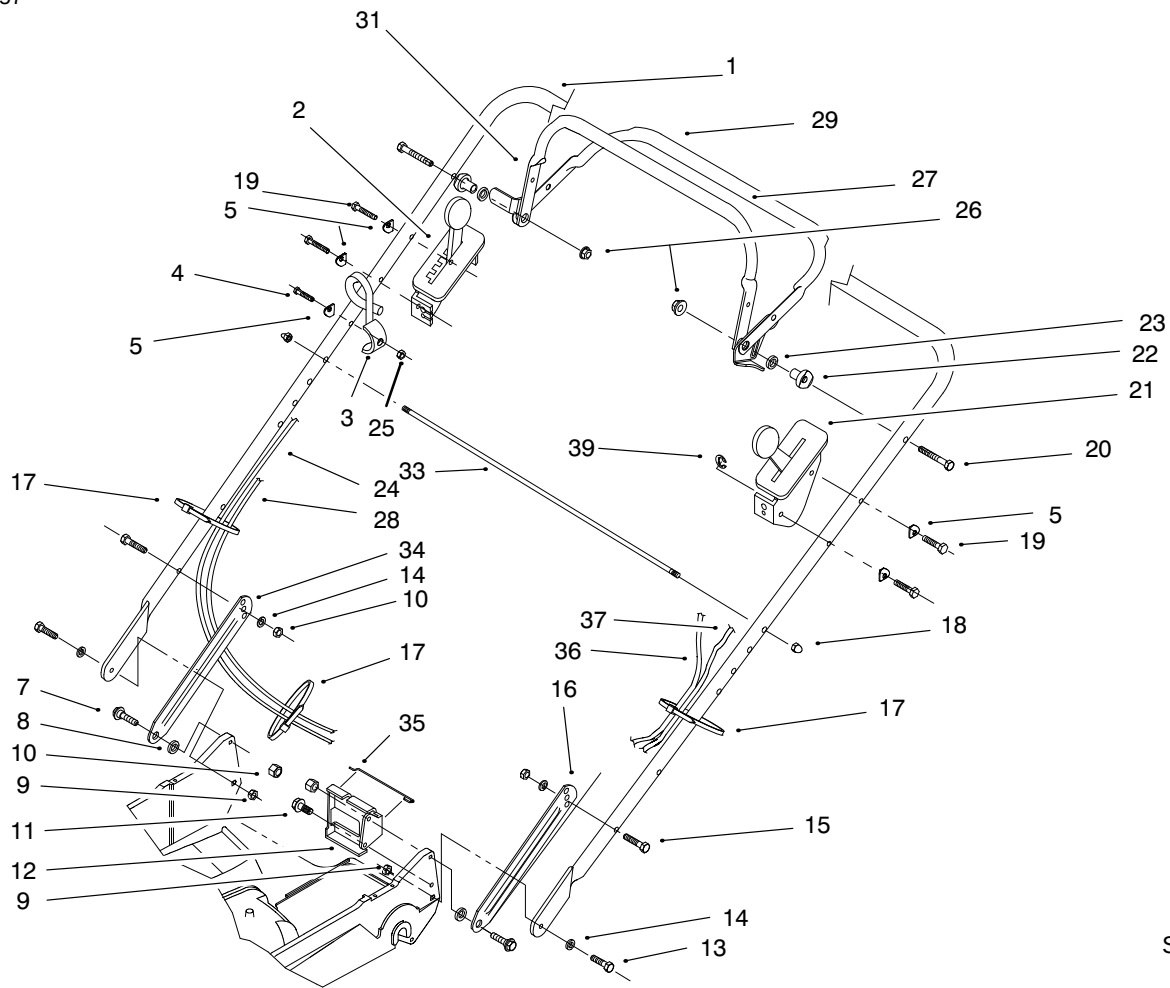


Sheet No.:5

Handle Assembly


Ref. No.	Part No.	Qty.	Description
1	99-2545-03	1	Handle-Proline
2	99-2544	1	Control-Shift,Zs
3	46-8081	1	Guide-Rope
4	321-9	1	Screw-HH
5	3-7501	5	Washer
7	27-7210	2	Screw-Shoulder
8	3-3287	2	Spacer-Handle Latch
9	3296-47	2	Nut-Lock Ni
10	3296-29	4	Nut-Lock Ni
11	32144-70	1	Screw-Taptite
12	74-1741-03	1	Brkt-Traction Adj.
13	322-6	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
16	84-8361-03	1	Latch-LH Handle
17	3290-378	3	Tie-Cable
18	32111-7	2	Nut-Cap
19	321-13	4	Screw-HH
20	322-12	2	Screw-HH
21	98-2001	1	Brkt-Throttle Cont'l Head
22	49-1631	2	Spacer-Support
23	256-276	2	Spacer-Nylon
24	99-6103	1	Cable-Brake,Gts 200
25	3296-42	1	Nut-Lock Ni
26	3296-58	2	Nut-Lock Ni

Ref. No.	Part No.	Qty.	Description
27	94-6046	1	Decal - Operation
28	99-2543	1	Cable-Shift,Zs
29	94-4371-03	1	Wa - Traction Bail
31	94-4370-03	1	Wa-Brake Bail
33	48-2810	1	Rod-Bag Support
34	84-8401-03	1	Latch-RH Handle
35	46-7030	1	Retainer-Cable
36	74-1791	1	Cable-Traction
37	98-2047	1	Cable - Throttle
39	32151-86	4	E-Ring - Throt & Tract

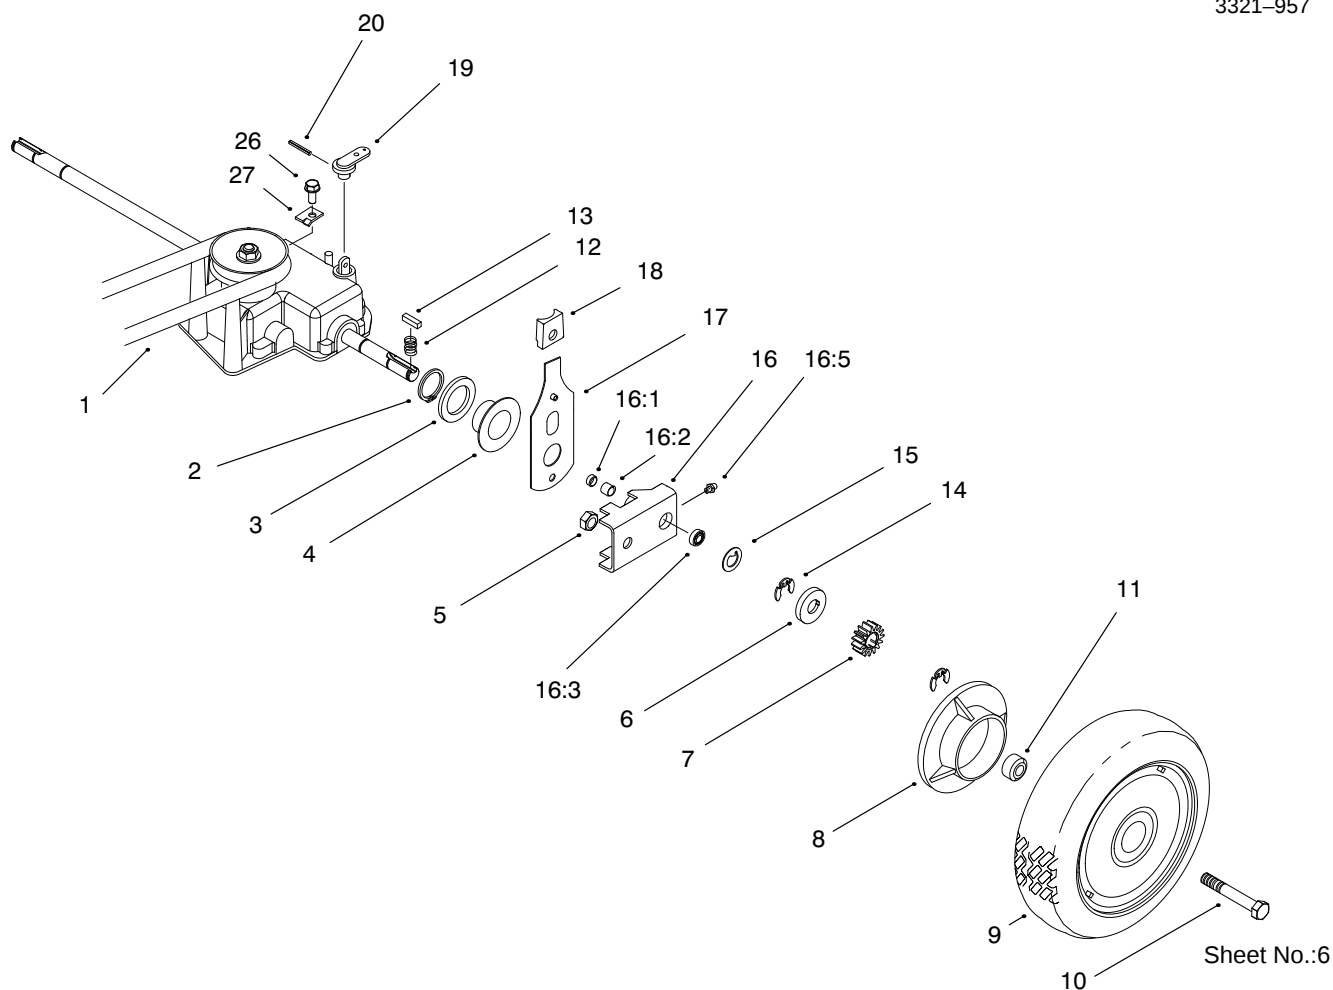

Rear Wheel & Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Outer Thrust
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM Sp
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Wheel Cover
12	39-9650	2	Spring-Comp
13	612066	2	Key Burg-Nort
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Outer Thrust
16	74-1851	2	Pivot Arm Assembly
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel +
16:5	92-6316	1	Zerk - Special Drive
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Shift Lever
20	32121-99	1	Pin-Coil
26	32144-70	1	Screw-Taptite
27	62-3720	1	Cable Clamp

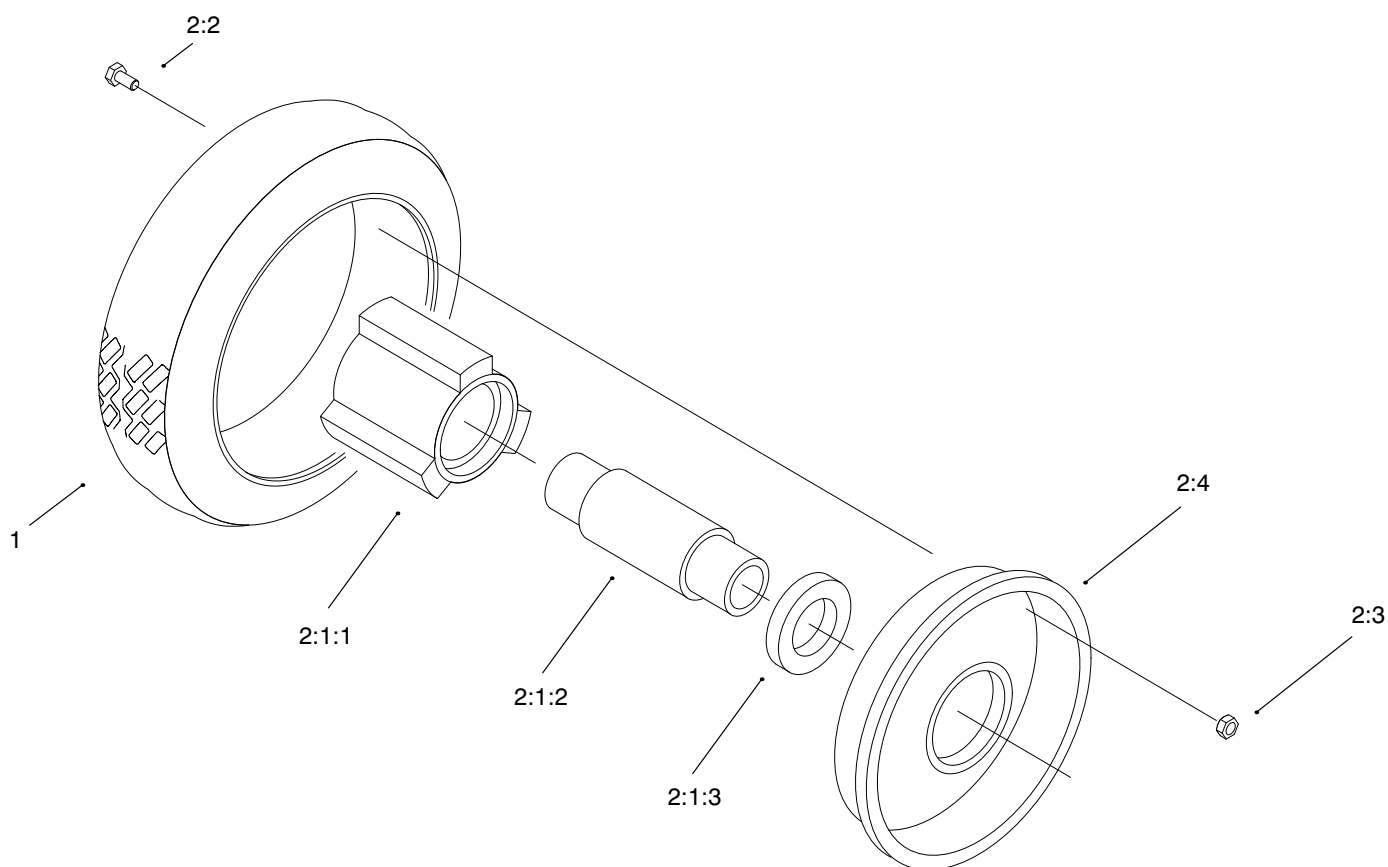


Sheet No.: A1

Front Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM HP *
2:1		1	Hub & Brg ASM
2:1:1	52-2410	1	Hub-Bearing Supt +
2:1:2	52-2440	1	Spacer-Bearing +
2:1:3	52-2450	2	Bearing-Wheel +
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock Ni
2:4	53-7780-06	2	Plate-Wheel Half

Ref. No.	Part No.	Qty.	Description

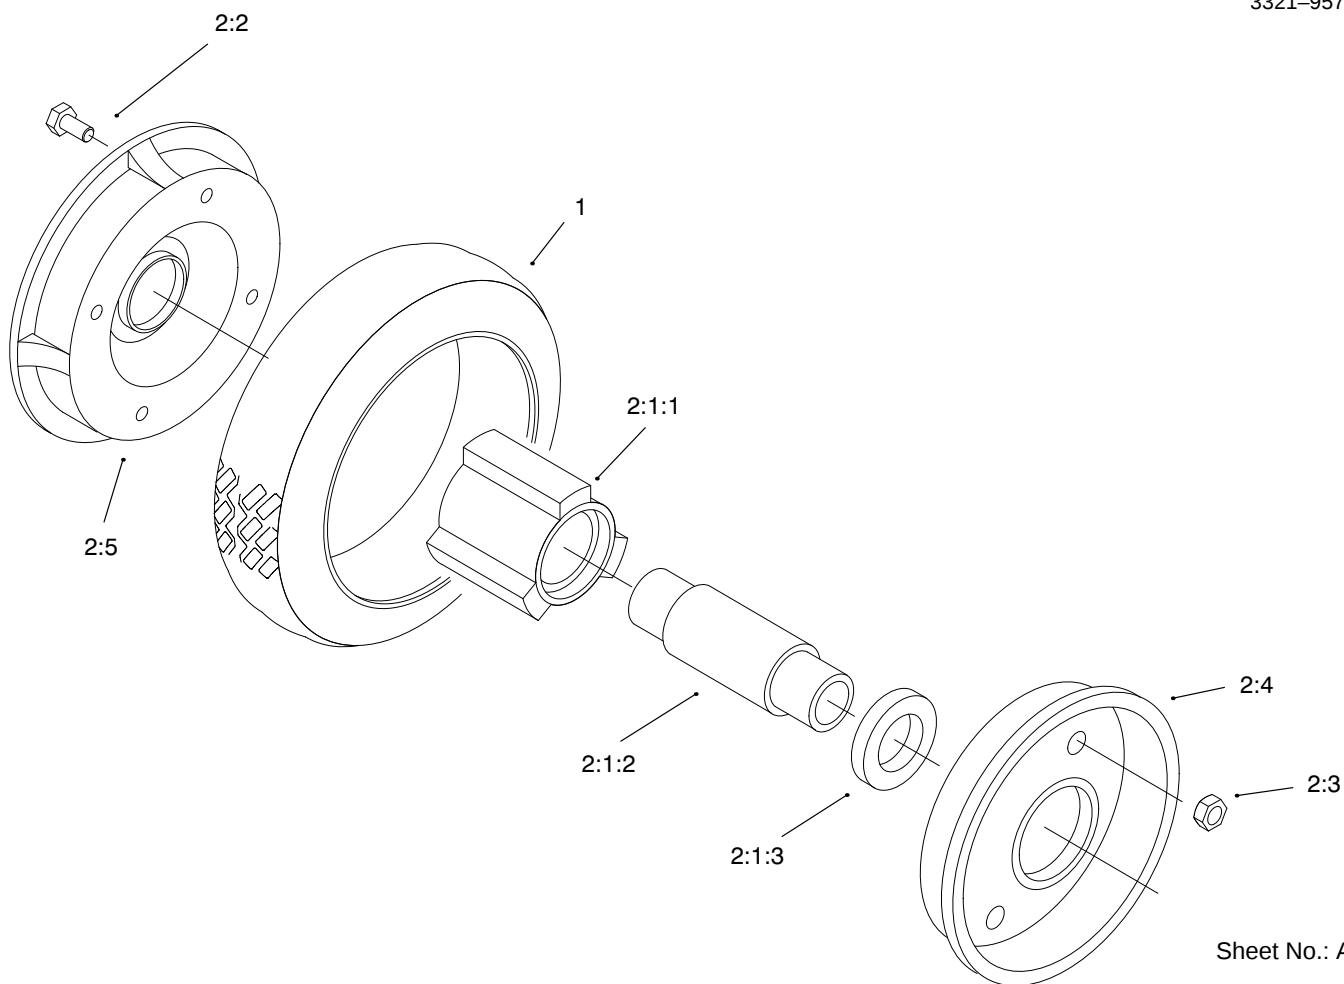


Sheet No.: A3

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM Sp *
2:1		1	Hub & Brg ASM
2:1:1	52-2410	1	Hub-Bearing Supt +
2:1:2	52-2440	1	Spacer-Bearing +
2:1:3	52-2450	2	Bearing-Wheel +
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock Ni
2:4	53-7780-06	1	Plate-Wheel Half
2:5	92-4957-06	1	Wheel Half/Gear ASM

Ref. No.	Part No.	Qty.	Description

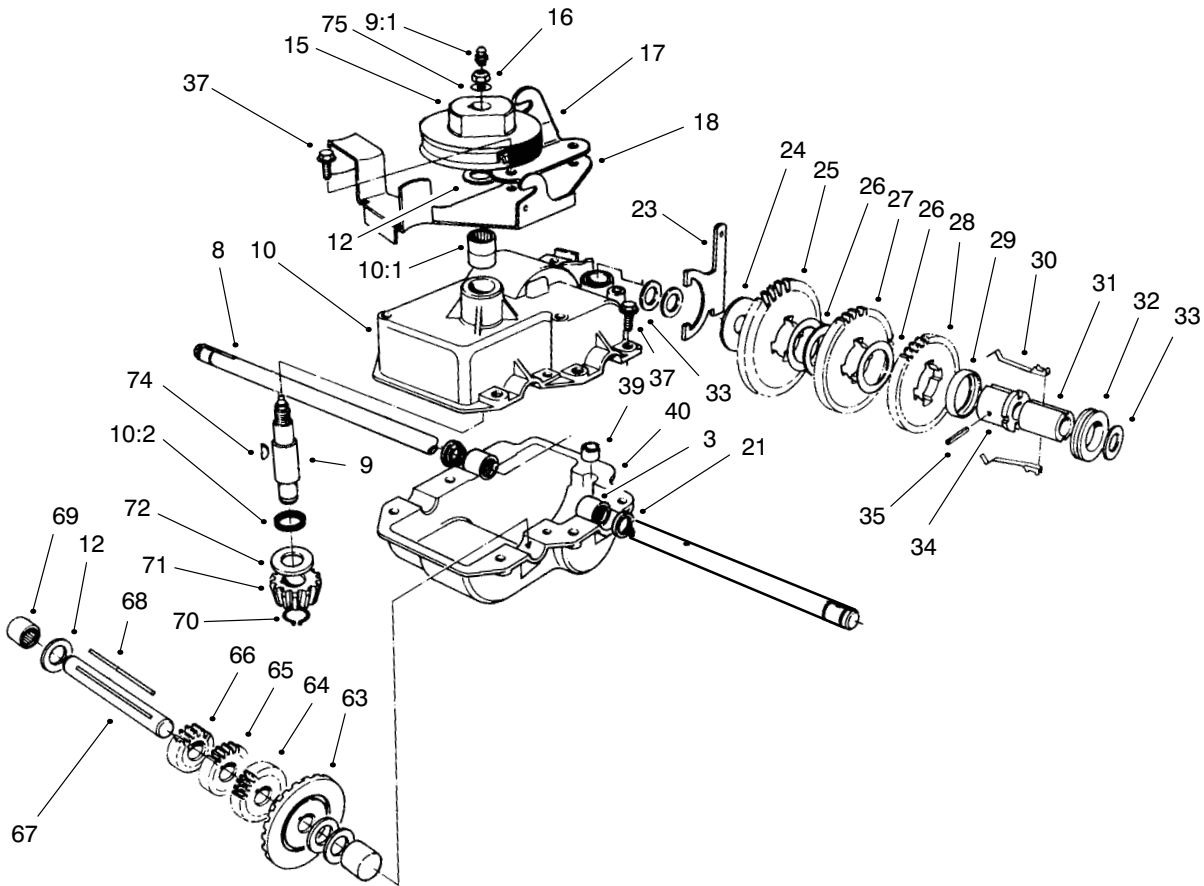


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
3	48-2060	2	Bearing-Roller
8	74-1890	1	Shaft-Output
9	13-5149	1	Input Shaft w/Zerk
9:1	302-63	1	Zerk
10	13-9739	1	Upper Case Assembly
10:1	47-7270	2	Bearing
10:2	47-7260	1	Seal
12	36-4792	4	Washer-Thrust
15	39-6740	2	Pulley
16	3296-5	2	Nut-Lock Ni
17	74-1750-03	1	Brk-Traction Engage
18	49-8461-03	1	Bracket-Belt Guide
21	47-6730	2	Seal-Oil
23	60-8870	1	Yoke-Shift
24	29-9690	1	Washer
25	46-3560	1	Gear
26	36-4770	3	Washer
27	29-9271	1	Gear-42 Tooth
28	42-4740	1	Gear-38 Tooth
29	55-8020	1	Retainer-Key
30	29-9330	2	Key
31	39-6720	1	Sleeve
32	29-9340	1	Collar-Shift
33	36-4780	3	Washer
34	55-8010	1	Sleeve-Gear
35	3285-19	1	Pin-Groove


Ref. No.	Part No.	Qty.	Description
37	49-2040	6	Screw-Taptite
39	29-9570	1	Bushing-Yoke
40	74-1920	1	Case-Lower Gear
63	74-1760	1	Gear-Bevel
64	39-6650	1	Gear-18t
65	46-3550	1	Gear
66	46-3540	1	Gear
67	53-7950	1	Shaft-Intermediate
68	39-7842	1	Key
69	252-103	2	Bearing-Closed
70	32151-57	1	Ring-Retaining
71	39-6660	1	Pinion-Bevel
72	47-2910	1	Washer-Thrust
74	3257-1	2	Key-Woodruff
75	3256-45	1	Washer-Flat
*	74-1861	1	Gear Case ASM (Service)

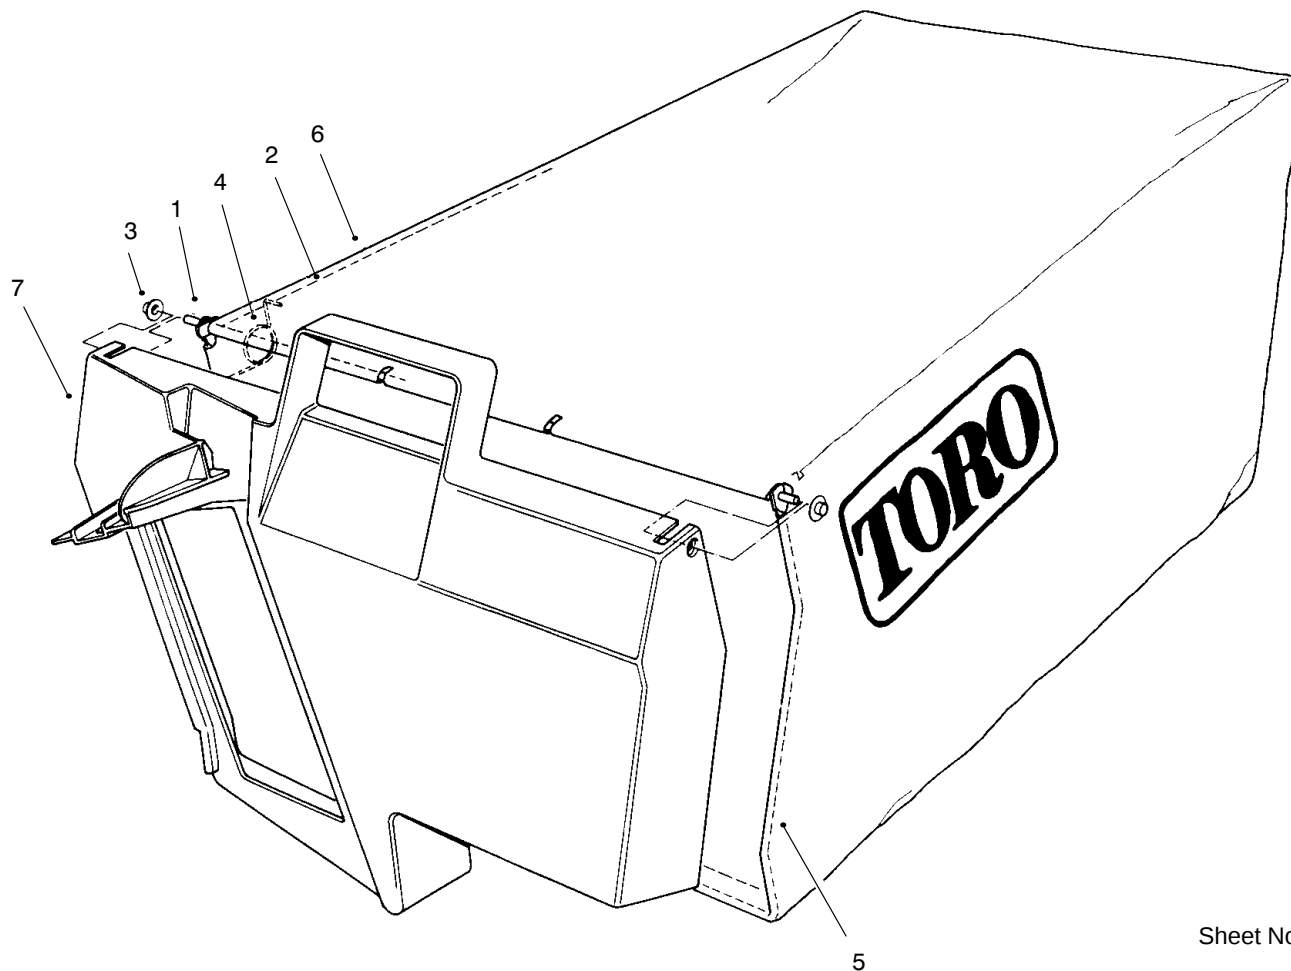

Sheet No.:200

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
1	33-4820	1	Hinge-Bag Door
2	42-4030	1	Frame-Upper Bag
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9222	1	ASM - Grass Bag
7	48-2840	1	Door-Grass Bag
*	99-2535	1	Grass Bag
			Assy-service Only

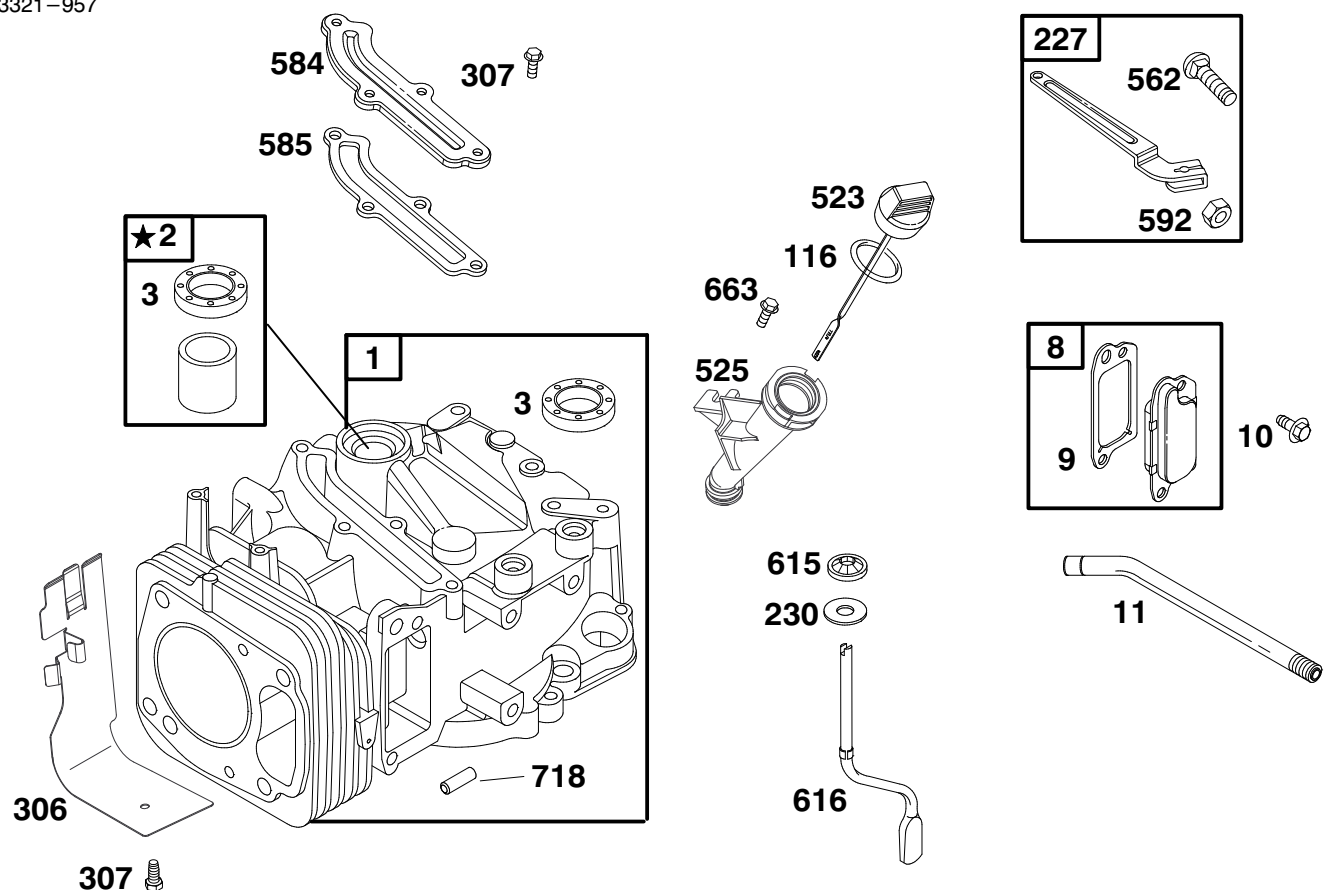

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
1	99-0900	Cylinder Assembly	1
2	99-0911	Bushing	1
★3	99-0912	Seal - Oil	1
8	77-9260	Breather Assy.	1
†★9	99-0913	Gasket - Breather	1
10	99-0914	Screw - Hex.	1
11	99-0915	Tube - Breather	1
★116	99-0916	Seal - O Ring	1
227	99-0917	Lever Assembly - Gov.	1
230	99-0918	Washer - Gov. Crank	1
306	99-0919	Shield - Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	99-0920	Screw - Hex.	1
523	77-7260	Dipstick	1
525	99-0906	Tube - Oil Filler	1
562	99-0921	Screw - Hex.	1
584	99-0922	Baffle - Cylinder	1
★585	99-0923	Gasket - Breather	1
592	99-0924	Nut - Hex.	1
615	99-0925	Fastener	1
616	99-0926	Crank - Governor	1
663	99-0927	Screw - Hex.	1
718	99-0928	Dowel - Sleeve	1

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

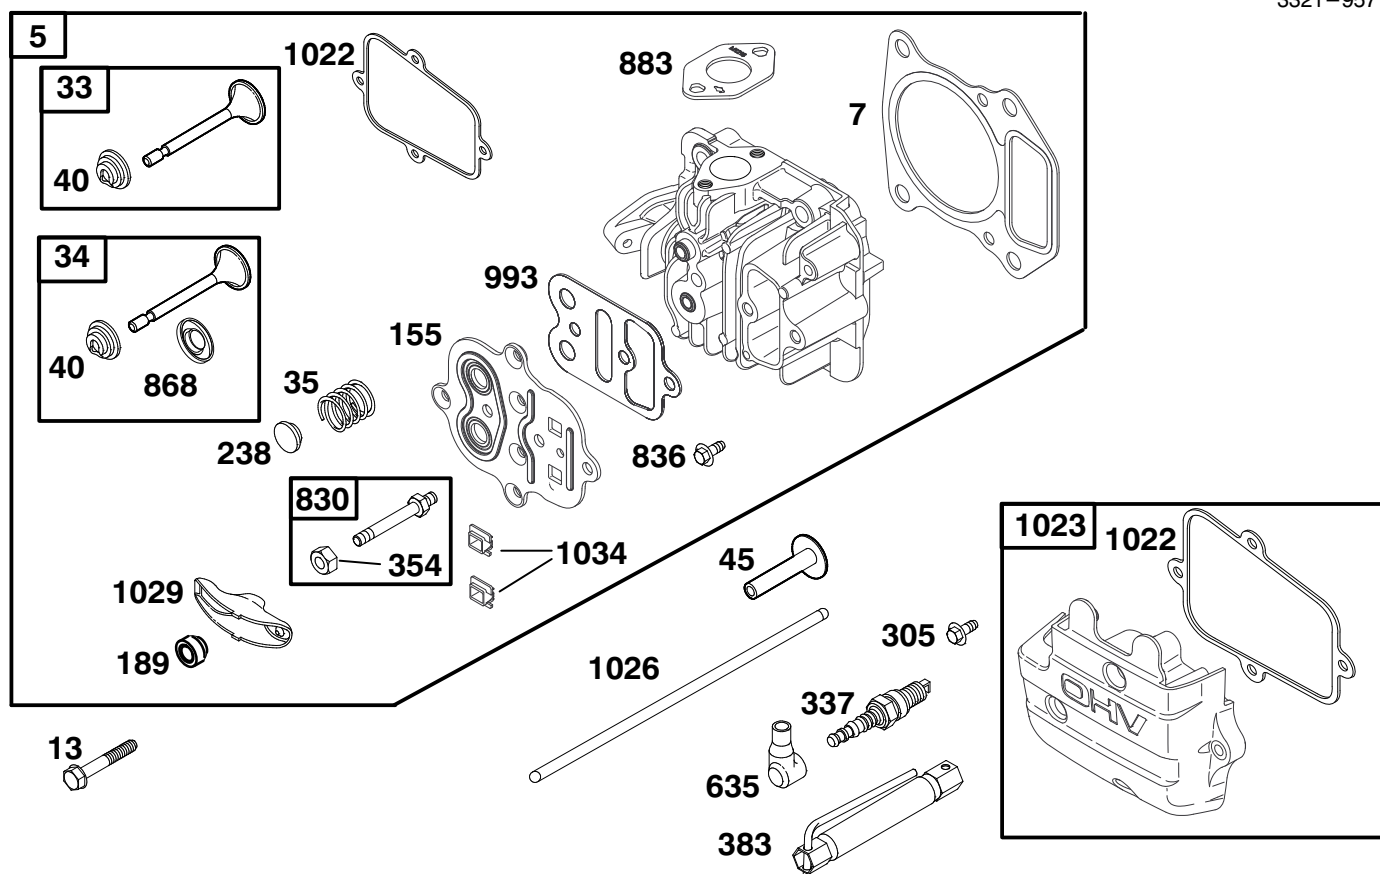


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
5	99-0929	Head - Cylinder	1	383	99-0944	Wrench - Spark Plug	1
†★7	99-0930	Gasket - Cylinder Head	1	635	77-9190	Elbow - Spark Plug	1
13	99-0931	Screw - Hex.	1	830	99-0945	Stud - Rocker Arm	1
33	99-0932	Valve - Exhaust	1	836	99-0941	Screw - Hex.	1
34	99-0933	Valve - Intake	1	†★868	99-0946	Seal - Valve	1
35	99-0934	Spring - Valve	1	†★883	99-0947	Gasket - Exhaust	1
40	99-0935	Retainer - Valve Spring	1	†★993	99-6264	Gasket - Plate	1
45	99-0936	Tappet - Valve	1	†★1022	99-0907	Gasket - Rocker Cover	1
155	99-0938	Plate - Cylinder Head	1	1023	98-9211	Cover - Rocker	1
189	99-0939	Ball - Rocker Arm	1	1026	99-0949	Rod - Push	1
238	99-0940	Cap - Valve	1	1029	99-0950	Arm - Rocker	1
305	99-0942	Screw - Hex.	1	1034	99-0951	Guide - Push Rod	1
337	99-0943	Plug - Spark	1				
354		Nut - Hex. (Sold in Kit Only).	1				

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

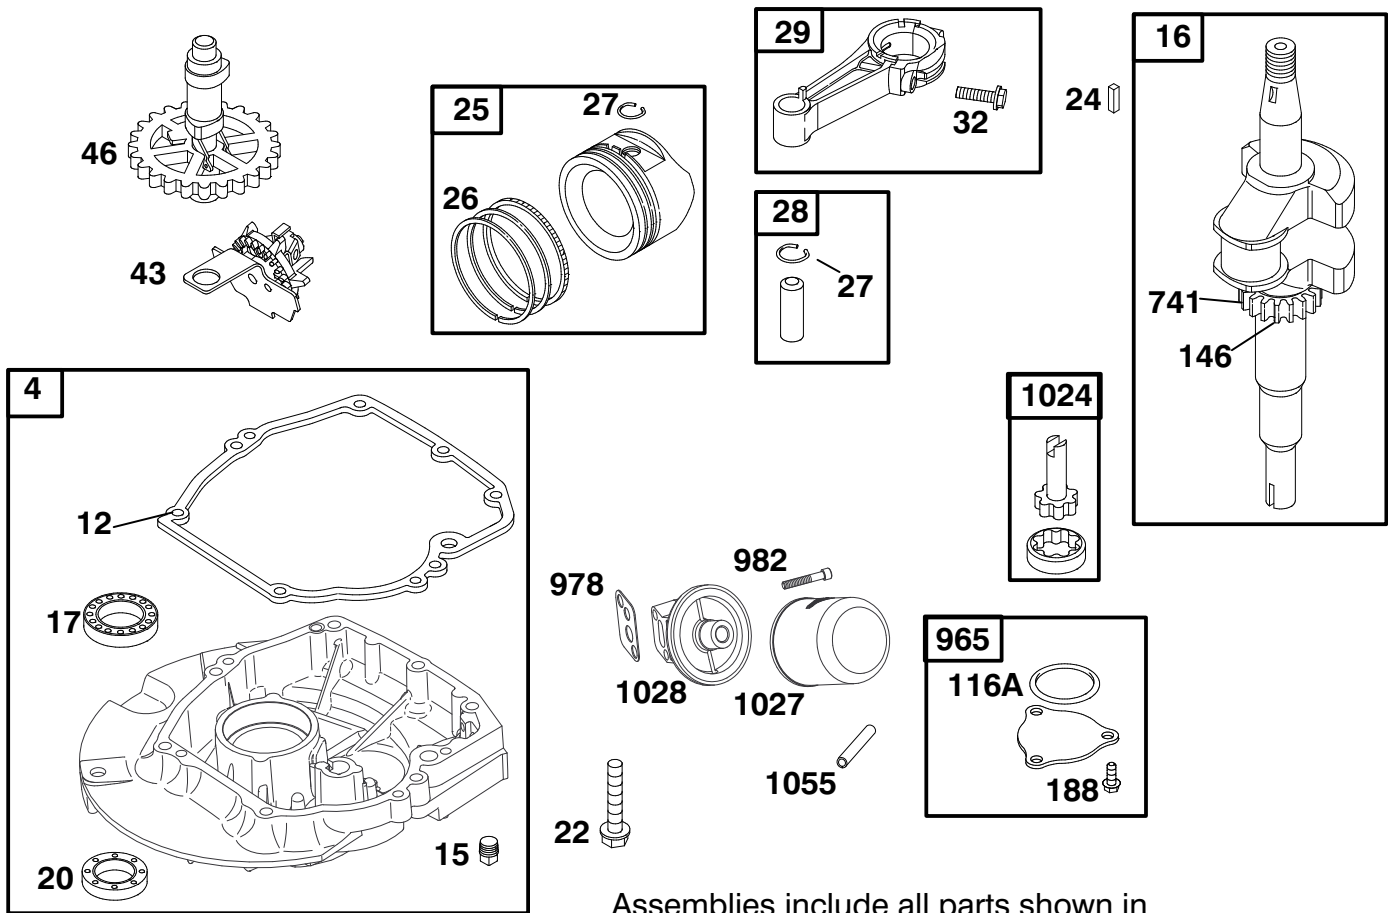


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
4	99-0980	Sump – Engine	1
★12	99-0953	Gasket – Crankcase	1
15	99-0954	Plug – Oil Drain	1
16	98-9214	Crankshaft	1
17	99-1031	Bearing – Ball	1
★20	99-0955	Seal – Oil	1
22	99-0956	Screw – Hex.	
		Note: 99-1040	
		Screw – Hex.	
		(One (1) Used in Hole Nearest Breather)	1
24	99-0957	Key – Flywheel	1
25	99-0958	Piston Assy. (Standard)	1
26	99-0959	Ring Set (Standard)	1
27	99-0960	Lock – Piston Pin	1
28	99-0961	Pin – Piston (Standard)	1

Ref. No.	Part No.	Description	No. Used
29	99-0962	Rod – Connecting	1
32	99-0963	Screw – Connecting Rod	1
43	99-0937	Governor/Oil Slinger	1
46	99-0965	Gear – Cam	1
116A	99-1032	Seal – O-Ring	1
146	99-0966	Key – Timing	1
188	99-1033	Screw – Hex.	1
741	99-0967	Gear – Timing	1
965	99-1034	Cover – Oil Pump	1
978	99-1035	Gasket – Adapter	1
982	99-1036	Screw – Soc. Hd.	1
1024	99-1037	Pump – Oil	1
1027	98-9217	Filter – Oil	1
1028	99-1038	Adapter – Oil Filter	1
1055	99-1039	Tube – Oil Pump	1

★ Included in Gasket Set – Part No. 99-0902

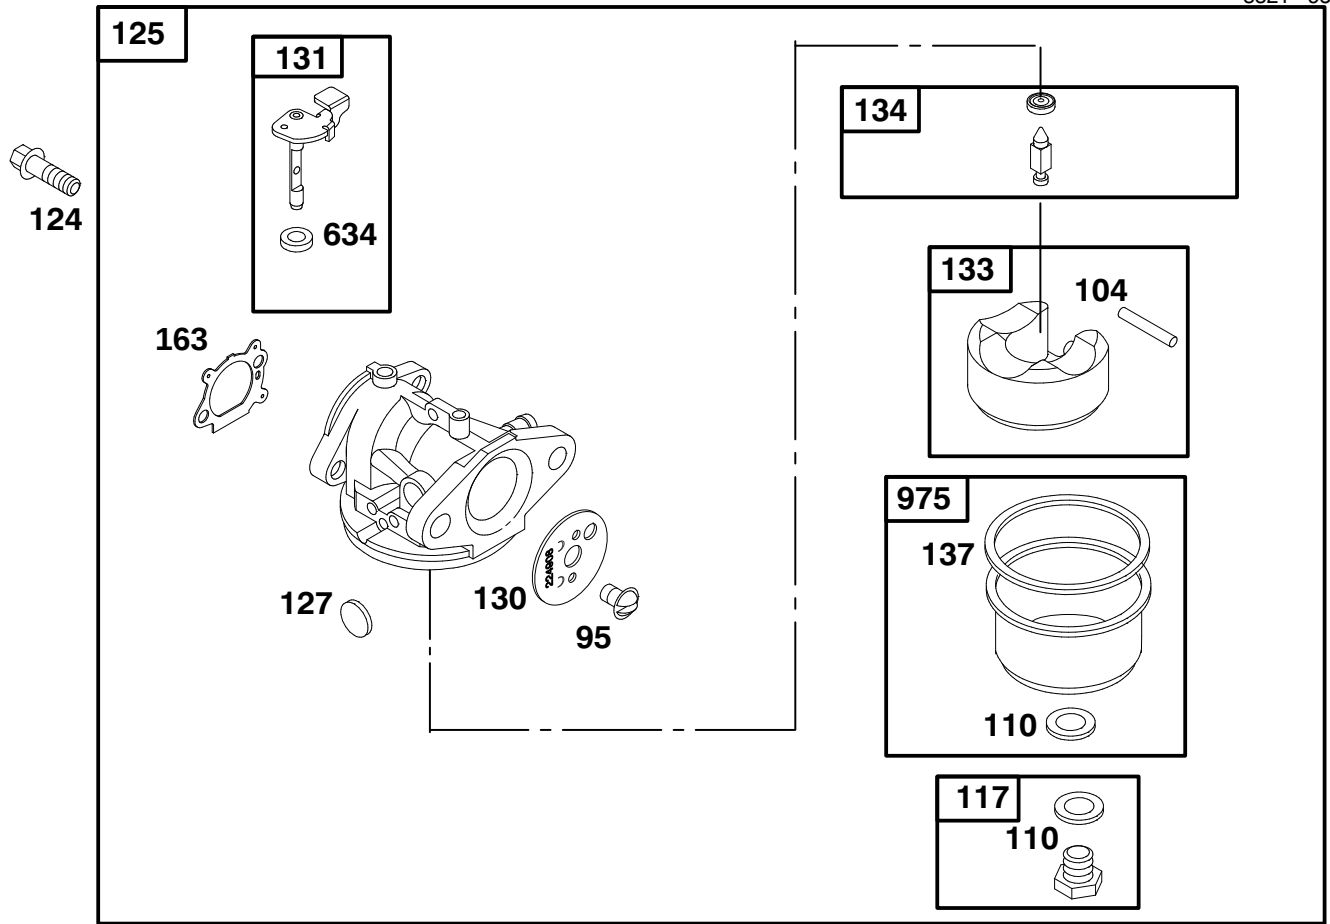

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	99-0969	Screw - Slotted	1	130	99-0974	Valve - Throttle	1
●104	99-0970	Pin - Float Hinge	1	131	99-0975	Shaft - Throttle	1
◆110		Washer - Bowl (Sold in Kit Only)	1	133	77-8170	Float - Carburetor	1
117	99-0971	Jet - Main (Std.) Note: 99-1041 Jet - Main (High Altitude)	1	●134	77-8110	Valve - Needle	1
124	99-0972	Screw - Shoulder	1	◆137		Gasket - Bowl (Sold in Kit Only).	1
125	99-0973	Carburetor	1	◆◆★163	99-0976	Gasket - Air Cleaner	1
●127		Plug - Welch (Sold in Kit Only).	1	◆◆634		Washer - Foam (Sold in Kit Only).	1
				975	99-0977	Bowl - Float	1

● Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

★ Included in Gasket Set - Part No. 99-0902

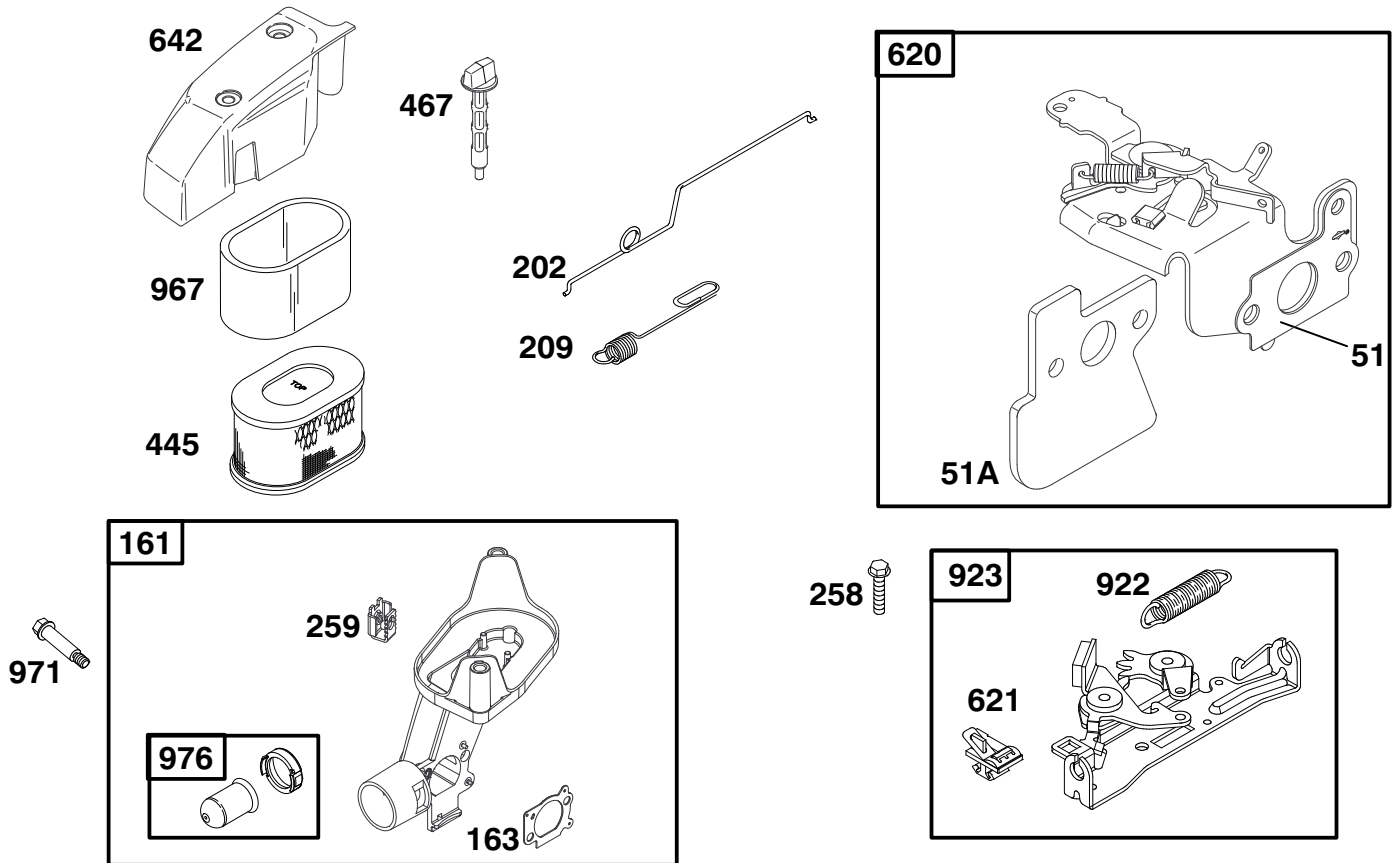

Assemblies include all parts shown in frames.

ENGINE GTS-200





Ref. No.	Part No.	Description	No. Used
51	99-0968	Gasket - Intake	1
51A	99-0978	Gasket - Intake	1
161	99-0979	Base - Air Cleaner/Primer	1
◆★163	99-0976	Gasket - Air Cleaner	1
202	99-0981	Link - Governor	1
209	99-0982	Spring - Governor	1
258	99-0983	Screw - Hex.	1
259	99-0984	Grommet	1
445	98-9212	Filter - Air	1

Ref. No.	Part No.	Description	No. Used
467	98-9208	Knob	1
620	99-0985	Bracket - Control	1
621	99-0986	Switch - Stop	1
642	98-9207	Cover - Air Cleaner	1
922	99-0987	Spring - Brake	1
923	99-0988	Brake Assembly	1
967	99-0989	Filter - Air	1
971	99-0990	Screw - Hex.	1
976	99-0991	Primer - Carburetor	1

● Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

★ Included in Gasket Set - Part No. 99-0902

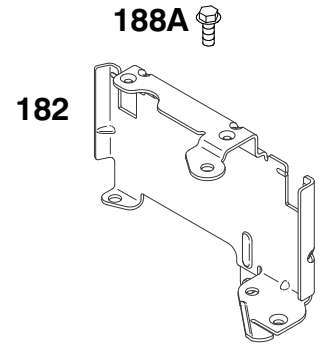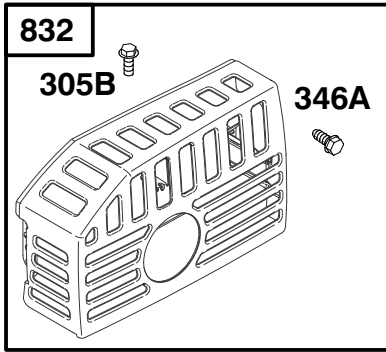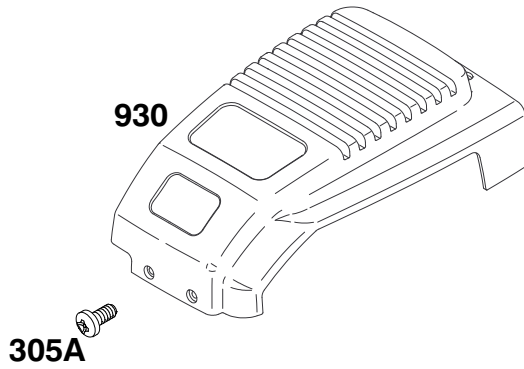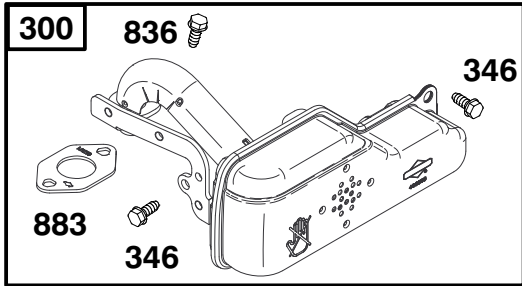

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
182	98-9205	Bracket - Tank Mounting	1
188A	98-9202	Screw - Hex.	1
300	99-0995	Muffler - Exhaust	1
305A	98-9204	Screw - Hex.	1
305B	99-0998	Screw - Hex.	1
346	99-1047	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
346A	99-0999	Screw - Hex.	1
832	98-9206	Guard - Muffler	1
836	99-0941	Screw - Hex.	1
†★883	99-0947	Gasket - Exhaust	1
930	98-9203	Guard - Rewind	1

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

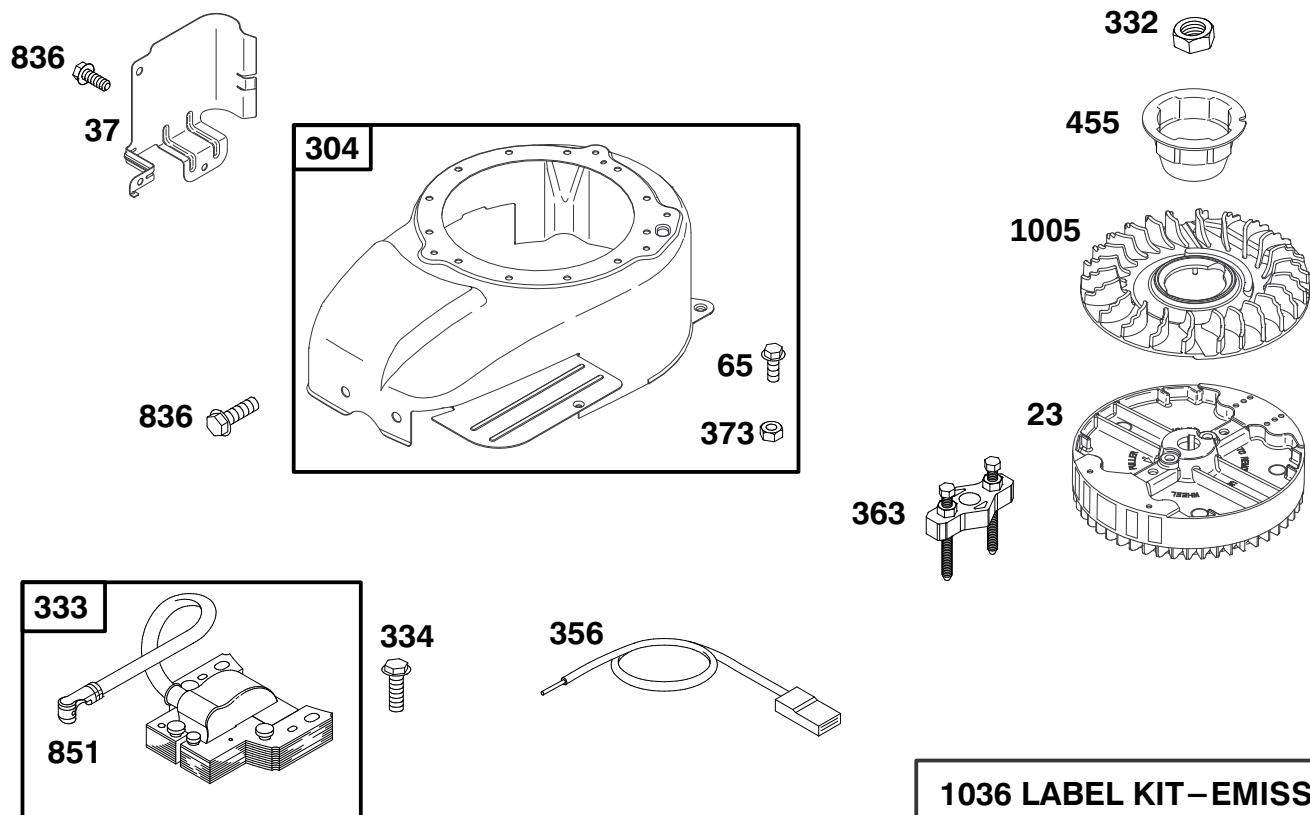


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
23	99-1001	Flywheel	1
37	99-1013	Guard - Flywheel	1
65	99-1002	Screw - Hex.	1
304	99-1003	Housing - Blower	1
332	99-1004	Nut - Flywheel	1
333	99-1005	Armature - Magneto	1
334	99-1006	Screw - Hex.	1
356	99-1007	Wire - Stop	1

Ref. No.	Part No.	Description	No. Used
363	99-1008	Puller - Flywheel	1
373	99-1009	Nut - Hex.	1
455	99-1010	Cup - Flywheel	1
836	99-0941	Screw - Hex.	1
851	77-9450	Terminal - Cable	1
1005	99-1015	Fan - Flywheel	1
1036	99-1016	Label Kit - Emission	1




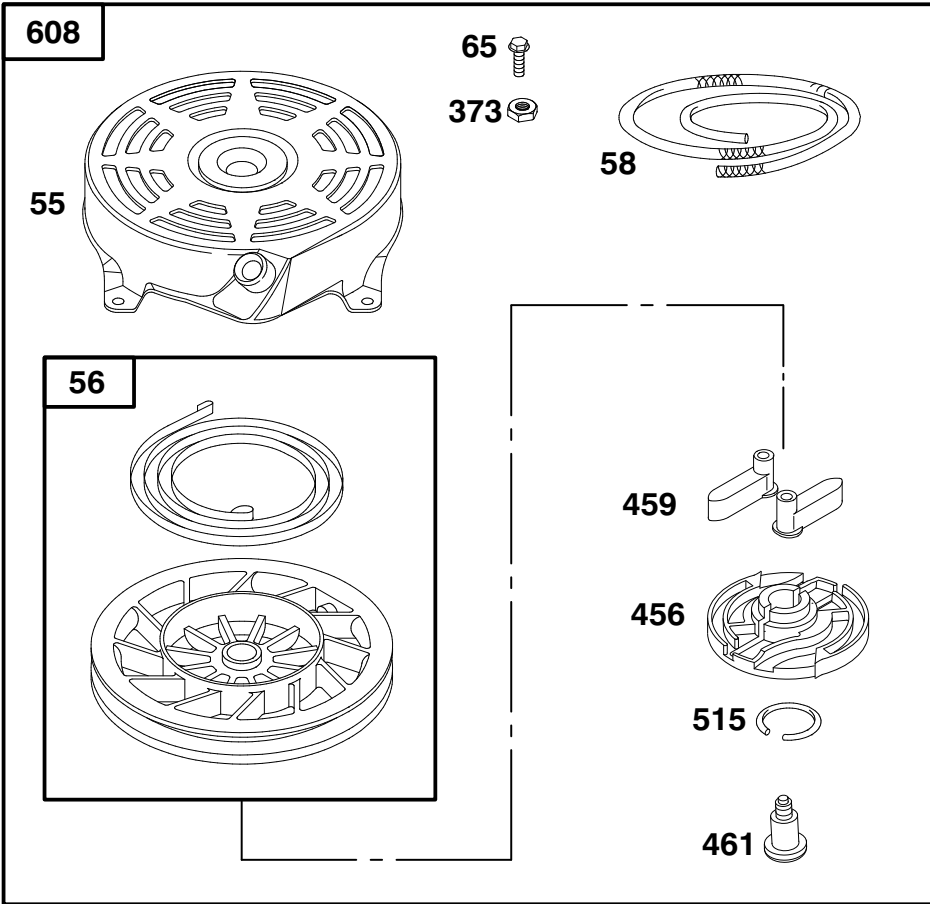


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
55	99-1048	Housing - Rewind Starter	1
56	94-1657	Pulley - Starter	1
58	94-1668	Rope - Starter	1
59	77-7210	Insert - Starter Grip	1
60	77-8520	Grip - Starter Rope	1
65	99-1002	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut - Hex.	1
456	94-1659	Retainer - Spring	1
459	94-1654	Pawl - Ratchet	1
461	94-1600	Screw - Shoulder	1
515	94-1655	Spring - Friction	1
608	98-9215	Starter - Rewind	1

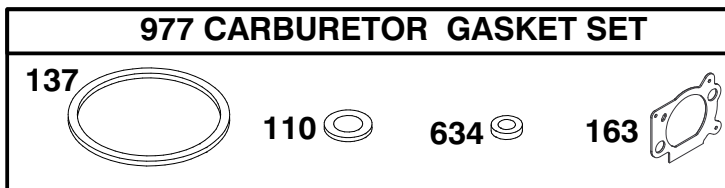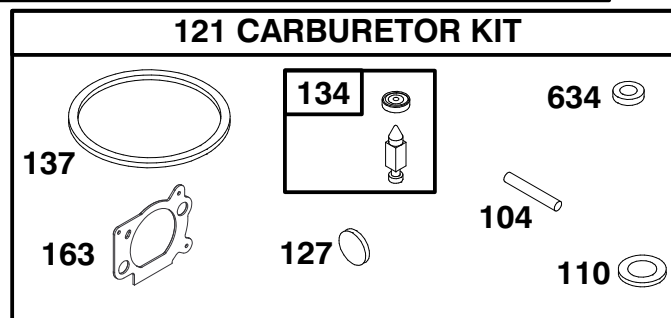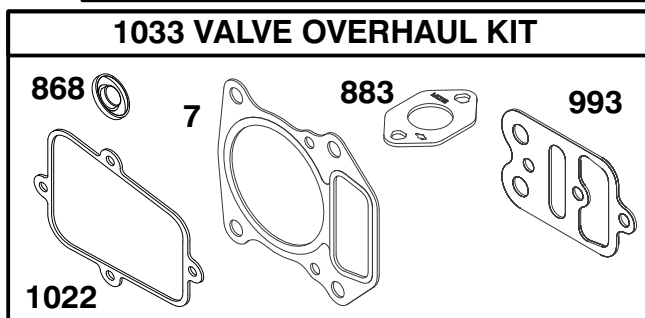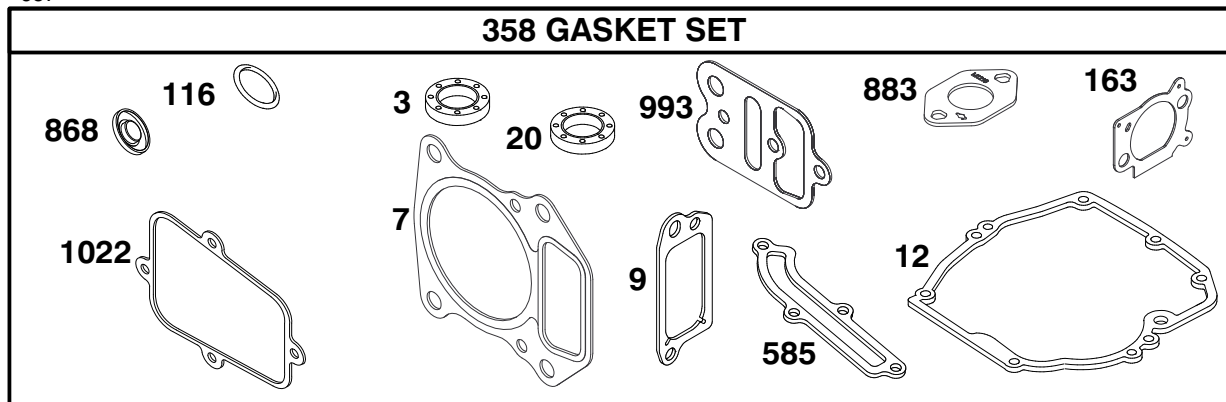

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
★3	99-0912	Seal – Oil	1
†★7	99-0930	Gasket – Cylinder Head	1
†★9	99-0913	Gasket – Breather	1
★12	99-0953	Gasket – Crankcase	1
★20	99-0955	Seal – Oil	1
●104	99-0970	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	99-0916	Seal – O Ring	1
121	99-0901	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1
●134	77-8110	Valve – Needle	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●◆★163	99-0976	Gasket – Air Cleaner	1
358	99-0902	Gasket Set	1
★585	99-0923	Gasket – Breather	1
●◆634		Washer – Foam (Sold in Kit Only).	1
†★868	99-0946	Seal – Valve	1
†★883	99-0947	Gasket – Exhaust	1
977	99-0903	Gasket Set – Carburetor	1
†★993	99-0948	Gasket – Plate	1
†★1022	99-0907	Gasket – Rocker Cover	1
1033	99-0904	Gasket Set – Valve Overhaul	1

★ Included in Gasket Set – Part No. 99-0902

† Included in Valve Overhaul Gasket Set – Part No. 99-0904

◆ Included in Carburetor Gasket Set – Part No. 99-0903

● Included in Carburetor Kit – Part No. 99-0901

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
612066	6	13	2	Key Burg-Nort
3-3287	5	8	2	Spacer-Handle Latch
3-7501	5	5	5	Washer
13-5149	9	9	1	Input Shaft w/Zerk
13-9739	9	10	1	Upper Case Assembly
14-9419	3	13	1	Blade w/Decal
25-7740	1	12	2	Knob-Arm
25-7740	6	18	2	Knob-Arm
26-0670	3	10	1	Screw-Blade
27-6232	1	9	2	Bolt-Wheel
27-6300	3	8	1	Key-Square
27-7210	5	7	2	Screw-Shoulder
29-9271	9	27	1	Gear-42 Tooth
29-9330	9	30	2	Key
29-9340	9	32	1	Collar-Shift
29-9560	6	19	1	Shift Lever
29-9570	9	39	1	Bushing-Yoke
29-9690	9	24	1	Washer
33-3208	1	18	1	Rod-Shield
33-4820	10	1	1	Hinge-Bag Door
36-4770	9	26	3	Washer
36-4780	9	33	3	Washer
36-4792	9	12	4	Washer-Thrust
36-6910	10	4	2	Spring
36-8070	6	1	1	V-Belt
37-7260	1	22	2	Screw-HH
39-6650	9	64	1	Gear-18t
39-6660	9	71	1	Pinion-Bevel
39-6720	9	31	1	Sleeve
39-6740	9	15	2	Pulley
39-7842	9	68	1	Key
39-9160	6	7	2	Gear-Pinion
39-9650	6	12	2	Spring-Comp
40-1940	1	3	4	Washer-Wheel Bolt
42-4020	10	5	1	Frame-Bag
42-4030	10	2	1	Frame-Upper Bag
42-4740	9	28	1	Gear-38 Tooth
44-0580	1	17	1	Shield - Trailing
46-3540	9	66	1	Gear
46-3550	9	65	1	Gear
46-3560	9	25	1	Gear
46-5400-03	1	1:7	1	Shield-21 In
46-6290	1	1:10	1	O Ring
46-6810	1	39	1	Screw & Washer ASM
46-6811	1	1:11	2	Screw/Washer V
46-6811	2	51	1	Screw/Washer V
46-7030	5	35	1	Retainer-Cable
46-7910	3	18	1	Pulley-Driver
46-8081	5	3	1	Guide-Rope
46-8090	1	28	2	Screw-Plastite
46-8091	4	8	2	Special-HWH
47-2910	9	72	1	Washer-Thrust
47-6730	6	16:1	1	Seal-Oil
47-6730	9	21	2	Seal-Oil
47-7260	9	10:2	1	Seal
47-7270	9	10:1	2	Bearing
48-2060	6	16:2	1	Bearing-Roller
48-2060	9	3	2	Bearing-Roller
48-2170	6	4	2	Cap-End
48-2810	5	33	1	Rod-Bag Support
48-2840	10	7	1	Door-Grass Bag
49-1631	5	22	2	Spacer-Support

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
49-2040	1	42	8	Screw-Taptite
49-2040	9	37	6	Screw-Taptite
49-7700	6	15	2	Washer-Outer Thrust
49-8461-03	9	18	1	Bracket-Belt Guide
49-8740	1	19	1	Quadrant-LH Rear
49-8750	1	24	1	Quadrant-RH Rear
49-8760	1	13	1	Quadrant-LH Front
49-8770	1	43	1	Quadrant-RH Front
51-3210	4	3	2	Line-Fuel 5.68
52-2170	3	14	1	Blade Retainer Wa
52-2190	3	9	1	Spacer-Blade Ret
52-2410	7	2:1:1	1	Hub-Bearing Supt +
52-2410	8	2:1:1	1	Hub-Bearing Supt +
52-2440	7	2:1:2	1	Spacer-Bearing +
52-2440	8	2:1:2	1	Spacer-Bearing +
52-2450	6	16:3	1	Bearing-Wheel +
52-2450	7	2:1:3	2	Bearing-Wheel +
52-2450	8	2:1:3	2	Bearing-Wheel +
52-2480	1	8	2	Spacer-Wheel
53-7720	1	10	2	Wheel & Tire ASM
53-7740	7	1	1	Tire
53-7740	8	1	1	Tire
53-7780-06	7	2:4	2	Plate-Wheel Half
53-7780-06	8	2:4	1	Plate-Wheel Half
53-7950	9	67	1	Shaft-Intermediate
55-8010	9	34	1	Sleeve-Gear
55-8020	9	29	1	Retainer-Key
60-8870	9	23	1	Yoke-Shift
61-8300	1	7	2	Pivot Arm Wa - Front
62-3720	6	27	1	Cable Clamp
62-3830	6	6	2	Washer-Outer Thrust
65-5860	3	17	1	Crankshaft Protector As
66-7560	1	5	2	Front Spring Arm ASM
66-7561	6	17	2	Rear Spring Arm ASM
71-9280	4	4	1	Filter-Fuel
71-9350	1	34	1	Bracket-Spring
74-1640	6	8	2	Cover-Wheel
74-1650	6	11	2	Spacer-Wheel Cover
74-1720	6	9	2	Wheel & Tire ASM Sp
74-1741-03	5	12	1	Brkt-Traction Adj.
74-1750-03	9	17	1	Brk-Traction Engage
74-1760	9	63	1	Gear-Bevel
74-1791	5	36	1	Cable-Traction
74-1810	6	3	2	Washer
74-1851	6	16	2	Pivot Arm Assembly
74-1861	9	*	1	Gear Case ASM (Service)
74-1890	9	8	1	Shaft-Output
74-1920	9	40	1	Case-Lower Gear
76-4640	1	27:3	1	Latch-Disc. Plug +
76-4650	1	27:4	1	Grip-Latch
76-4660	1	33	1	Spring-Door
77-0502	1	27	1	Discharge Plug Assembly
80-3770	1	32	1	Spring-Door Ret
82-9151	1	36	1	Tunnel-Discharge
84-4960	3	6	1	Decal - Proline
84-8361-03	5	16	1	Latch-LH Handle
84-8401-03	5	34	1	Latch-RH Handle
84-9170-03	4	5	1	Tank Base Wa
92-1599-03	3	12	1	Stiffener-Blade
92-1720	1	1:3	1	Kicker - Front
92-1730	1	1:4	1	Kicker - R.h.
92-1750	1	1:2	1	Kicker - Rear, Sp

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-4957-06	8	2:5	1	Wheel Half/Gear ASM
92-6316	6	16:5	1	Zerk - Special Drive
92-7988	2	46	1	Decal - Recycler
93-3154	1	29	1	Latch-Plate
93-3166	4	1	1	Tank - Fuel
93-6654	1	1:8	1	Decal - Danger - Covers
93-6657	1	1:12	1	Decal - Danger
93-6664	1	35	1	Decal - Int'l Grease
93-7198	4	2	1	Gas Cap Assembly
93-7351	1	30	1	ASM - Discharge Door
93-8470	3	1:4	1	Screw-Clamp F/W Engine
94-4370-03	5	31	1	Wa-Brake Bail
94-4371-03	5	29	1	Wa - Traction Bail
94-6046	5	27	1	Decal - Operation
95-1727	4	7	2	Screw-Taptite w/Patch
95-2747	1	1:9	1	Fitting - Washout
98-2001	5	21	1	Brkt-Throttle Cont'l Head
98-2004	3	5	1	Decal - Engine
98-2047	5	37	1	Cable - Throttle
98-3214	1	21	1	Cover-Belt,Sp (Com'l)
98-7142	1	1	1	Housing - Service
98-9222	10	6	1	ASM - Grass Bag
98-9227	2	54	1	Guard - Primer
98-9236	3	1	1	ASM - Engine Replacement
99-2535	10	*	1	Grass Bag Assy-service Only
99-2543	5	28	1	Cable-Shift,Zs
99-2544	5	2	1	Control-Shift,Zs
99-2545-03	5	1	1	Handle-Proline
99-6103	5	24	1	Cable-Brake,Gts 200
2210-249	3	1:6	1	Clamp-Casing W Engine
2210-316	3	1:2	1	Stop-Rope F/W Engine
2412-95	4	6	4	Clamp-Fuel Line
252-103	9	69	2	Bearing-Closed
256-276	5	23	2	Spacer-Nylon
257-3	1	6	2	Washer-Thrust
302-63	9	9:1	1	Zerk
321-2	7	2:2	4	Screw-HH
321-2	8	2:2	4	Screw-HH
321-7	1	26	2	Screw-HH
321-9	5	4	1	Screw-HH
321-13	5	19	4	Screw-HH
322-6	5	13	2	Screw-HH
322-7	5	15	2	Screw-HH
322-12	5	20	2	Screw-HH
323-12	1	11	2	Screw-HH
323-13	6	10	2	Screw-HH
3253-22	3	11	1	Washer-Lock/Sp
3254-6	3	16	3	Washer-Lock/Int
3256-22	1	25	2	Washer-Flat
3256-45	9	75	1	Washer-Flat
3257-1	9	74	2	Key-Woodruff
3285-19	9	35	1	Pin-Groove
3290-378	5	17	3	Tie-Cable
3290-422	10	3	2	Nut-Push
3290-456	5	14	4	Washer-Belleville
3295-35	1	27:1	1	Rivet-Alum
3296-5	9	16	2	Nut-Lock Ni
3296-6	1	2	2	Nut-Lock Ni
3296-29	5	10	4	Nut-Lock Ni
3296-42	1	23	2	Nut-Lock Ni
3296-42	5	25	1	Nut-Lock Ni
3296-42	7	2:3	4	Nut-Lock Ni

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-42	8	2:3	4	Nut-Lock Ni
3296-47	5	9	2	Nut-Lock Ni
3296-58	5	26	2	Nut-Lock Ni
32111-7	5	18	2	Nut-Cap
32121-99	6	20	1	Pin-Coil
32144-70	1	1:6	4	Screw-Taptite
32144-70	3	15	3	Screw-Taptite
32144-70	5	11	1	Screw-Taptite
32144-70	6	26	1	Screw-Taptite
32144-102	3	7	3	Screw-HH
32144-111	1	1:5	6	Screw-Plask
32151-36	6	2	2	Ring-Retaining
32151-57	9	70	1	Ring-Retaining
32151-68	6	14	4	Ring-Retaining
32151-86	5	39	4	E-Ring - Throt & Tract
32152-2	1	4	2	Nut-Conelock
32152-2	6	5	2	Nut-Conelock

[illegible]

MAINTENANCE RECORD

[illegible]