



Count on it.

Parts Catalog

RT1200 Traction Unit

Model No. 25450—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame, Hood and Fender Mounting Assembly	4
Engine Assembly	6
Engine Heat Shield and Hose Assembly	8
Wheel and Drive Assembly	10
Constant Velocity Joint Assembly No. AU106121-03	12
Drive Shaft Assembly No. AU106109-03	14
Air Cleaner and Mounting Assembly	16
Muffler and Mounting Assembly	18
Operator Platform and Seat Assembly	20
Seat Assembly No. AU118589	22
Operator Dash and Panel Assembly	24
Pedal Assembly No. AU106377	26
Operator Storage Assembly	28
Backfill Blade and Mounting Assembly	30
Hydraulic Cylinder Assembly No. 127-1797	32
Hydraulic Cylinder Assembly No. 127-1798	34
Hydraulic Cylinder Assembly No. 127-1799	36
Backfill Blade Hydraulic Plumbing Assembly	38
ROPS Assembly	40
Fuel Tank Assembly	42
Main Valve and Manifold Assembly	44
Fan Drive Valve and Flow Divider Assembly	46
Hydraulic Tank Assembly	48
Hydraulic Tank Assembly No. AU118190	50
Tandem Pump Plumbing Assembly	52
Tandem Pump and Main Valve Hydraulic Plumbing Assembly	54
Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2	56
Steering Column and Hydraulic Plumbing Assembly	58
Hydraulic Plumbing Assembly	60
Main Electrical Harness Assembly	62
Controller and Display Assembly	64
Seat Harness and Joystick Control Assembly	66
Battery Assembly	68
Cooling System Assembly	70
Coolant Recovery Tank and Plumbing Assembly	72
Tilt Frame Assembly	74
Hydraulic Cylinder Assembly No. AU126558	76
Attachments and Accessories	78


Main Frame, Hood and Fender Mounting Assembly

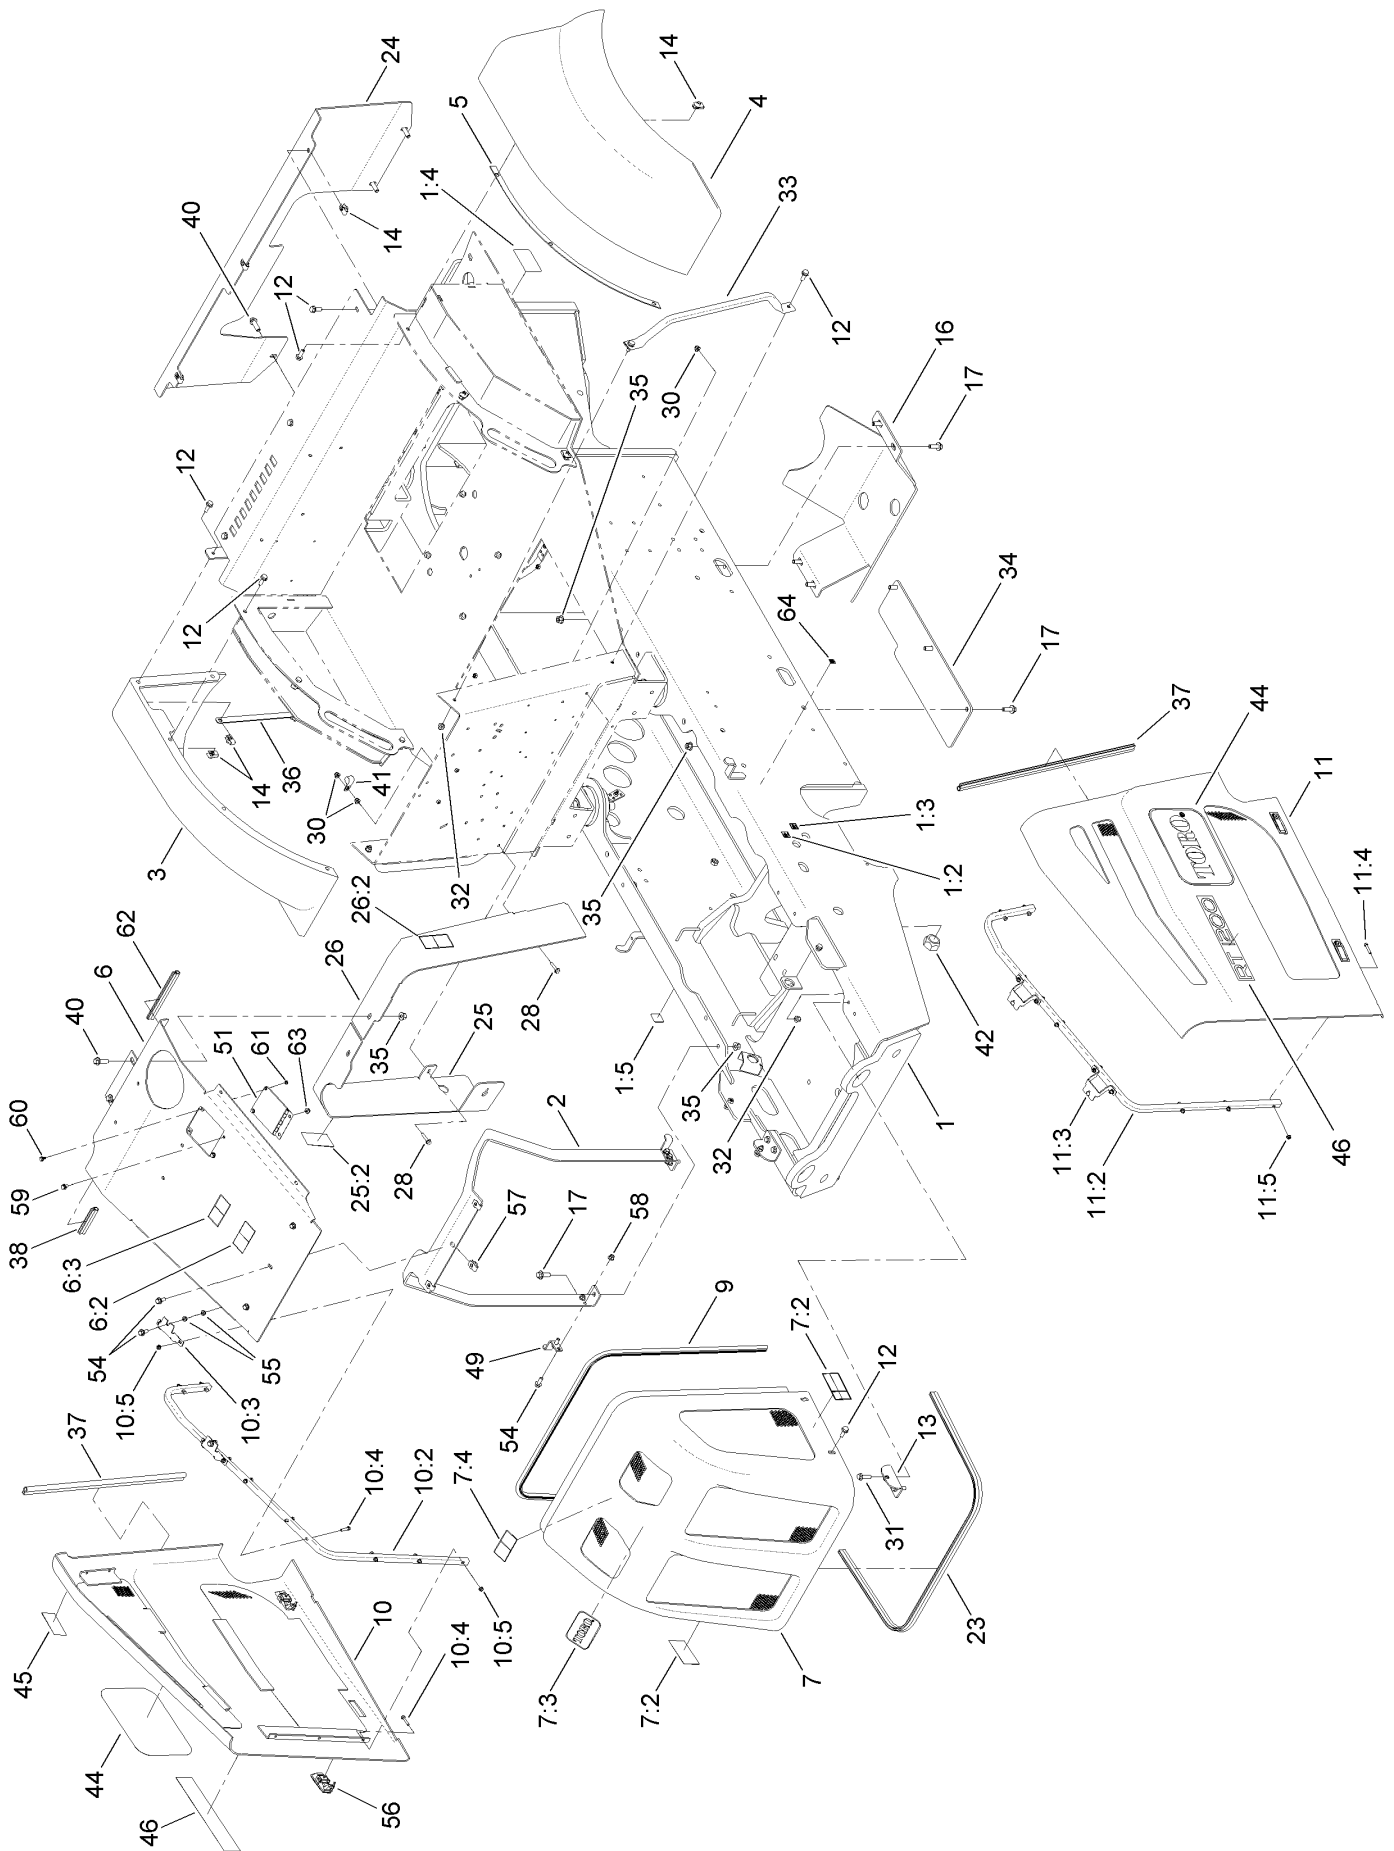

Main Frame, Hood and Fender Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1705	1	Main Frame ASM	25:2	125-8480	1	Decal-Warning, No Riders
1:2	125-8481	1	Decal-Fluid, Hydraulic (Out)	26	130-8412	1	Support Mount ASM
1:3	125-8482	1	Decal-Fluid, Hydraulic (In)	26:2	125-8480	1	Decal-Warning, No Riders
1:4	125-6139	2	Decal-Lift/Tie Down	28	33104-035	2	Screw-HHF
1:5	127-1829	1	Decal-Drain, Oil	30	104-3082	3	Nut-Lock, HHF
2	131-0453-03	1	Hoop-Support	31	AU100331	4	Screw-HHF
3	AU118197	1	Fender-RH	32	103-9511	8	Nut-Lock, NI
4	AU118198	1	Fender-LH	33	130-7458-03	2	Handle-Operator
5	AU118199-03	2	Support-Fender	34	AU109540-03	1	Plate-Skid
6	131-0476	1	Hood Plate ASM	35	115-1115	11	Nut-Lock, HHF
6:2	125-4963	1	Decal-Surface, Hot	36	AU122083-03	2	Plate-Reinforcement, Fender
6:3	125-8479	1	Decal-Warning, Radiator	37	127-1769	2	Seal-Hood
7	127-1702	1	Front Hood ASM	38	127-1770	1	Seal-Hood
7:2	125-6689	2	Decal-Warning, Fan	40	33106-040	5	Screw-HHF
7:3	67-1300	1	Decal	41	2412-4	1	Clamp-R
7:4	125-8479	1	Decal-Warning, Radiator	42	AU232-41120	4	Nut-Hex
9	131-0443	1	Seal-Hood	44	114-0990	2	Decal
10	131-1281	1	RH Hood ASM	45	125-4963	1	Decal-Surface, Hot
10:2	131-0462-03	1	Tube-Bent	46	127-1825	2	Decal
10:3	131-0454-03	2	Bracket-Hood	49	131-0460-03	2	Plate-Bent
10:4	321-13	10	Screw-HH	51	131-0467-01	1	Cover ASM
10:5	119-4040	10	Nut-Flange, NI	54	3234-42	11	Screw-HHF
11	131-1282	1	LH Hood ASM	55	121-4600	8	Nut-Hex
11:2	131-0452-03	1	Tube-Bent	56	AU50GB2302	4	Latch-Trigger, Raised (W/Lock)
11:3	131-0454-03	2	Bracket-Hood	57	112-4576	3	Nut-Clip, U
11:4	321-13	10	Screw-HH	58	119-4042	4	Nut-HF, NI
11:5	119-4040	10	Nut-Flange, NI	59	3234-14	2	Screw-HHF
12	33105-030	21	Screw-HHF	60	99-6810	2	Screw-HHF
13	AU119006-03	2	Support-Cover, Engine	61	106-8737	2	Nut-Retainer
14	AU100863	13	Nut-U	62	131-0478	1	Seal-Hood
16	AU107716-03	1	Plate-Skid	63	119-4041	2	Nut-HF
17	33106-035	9	Screw-HHF	64	125-8295	1	Decal-Eac
23	AU112099	1	Seal-Bottom, Nose				
24	AU124404-03	1	Plate-Cover, Rear				
25	130-8411	1	Support Mount ASM				

 Engine Assembly

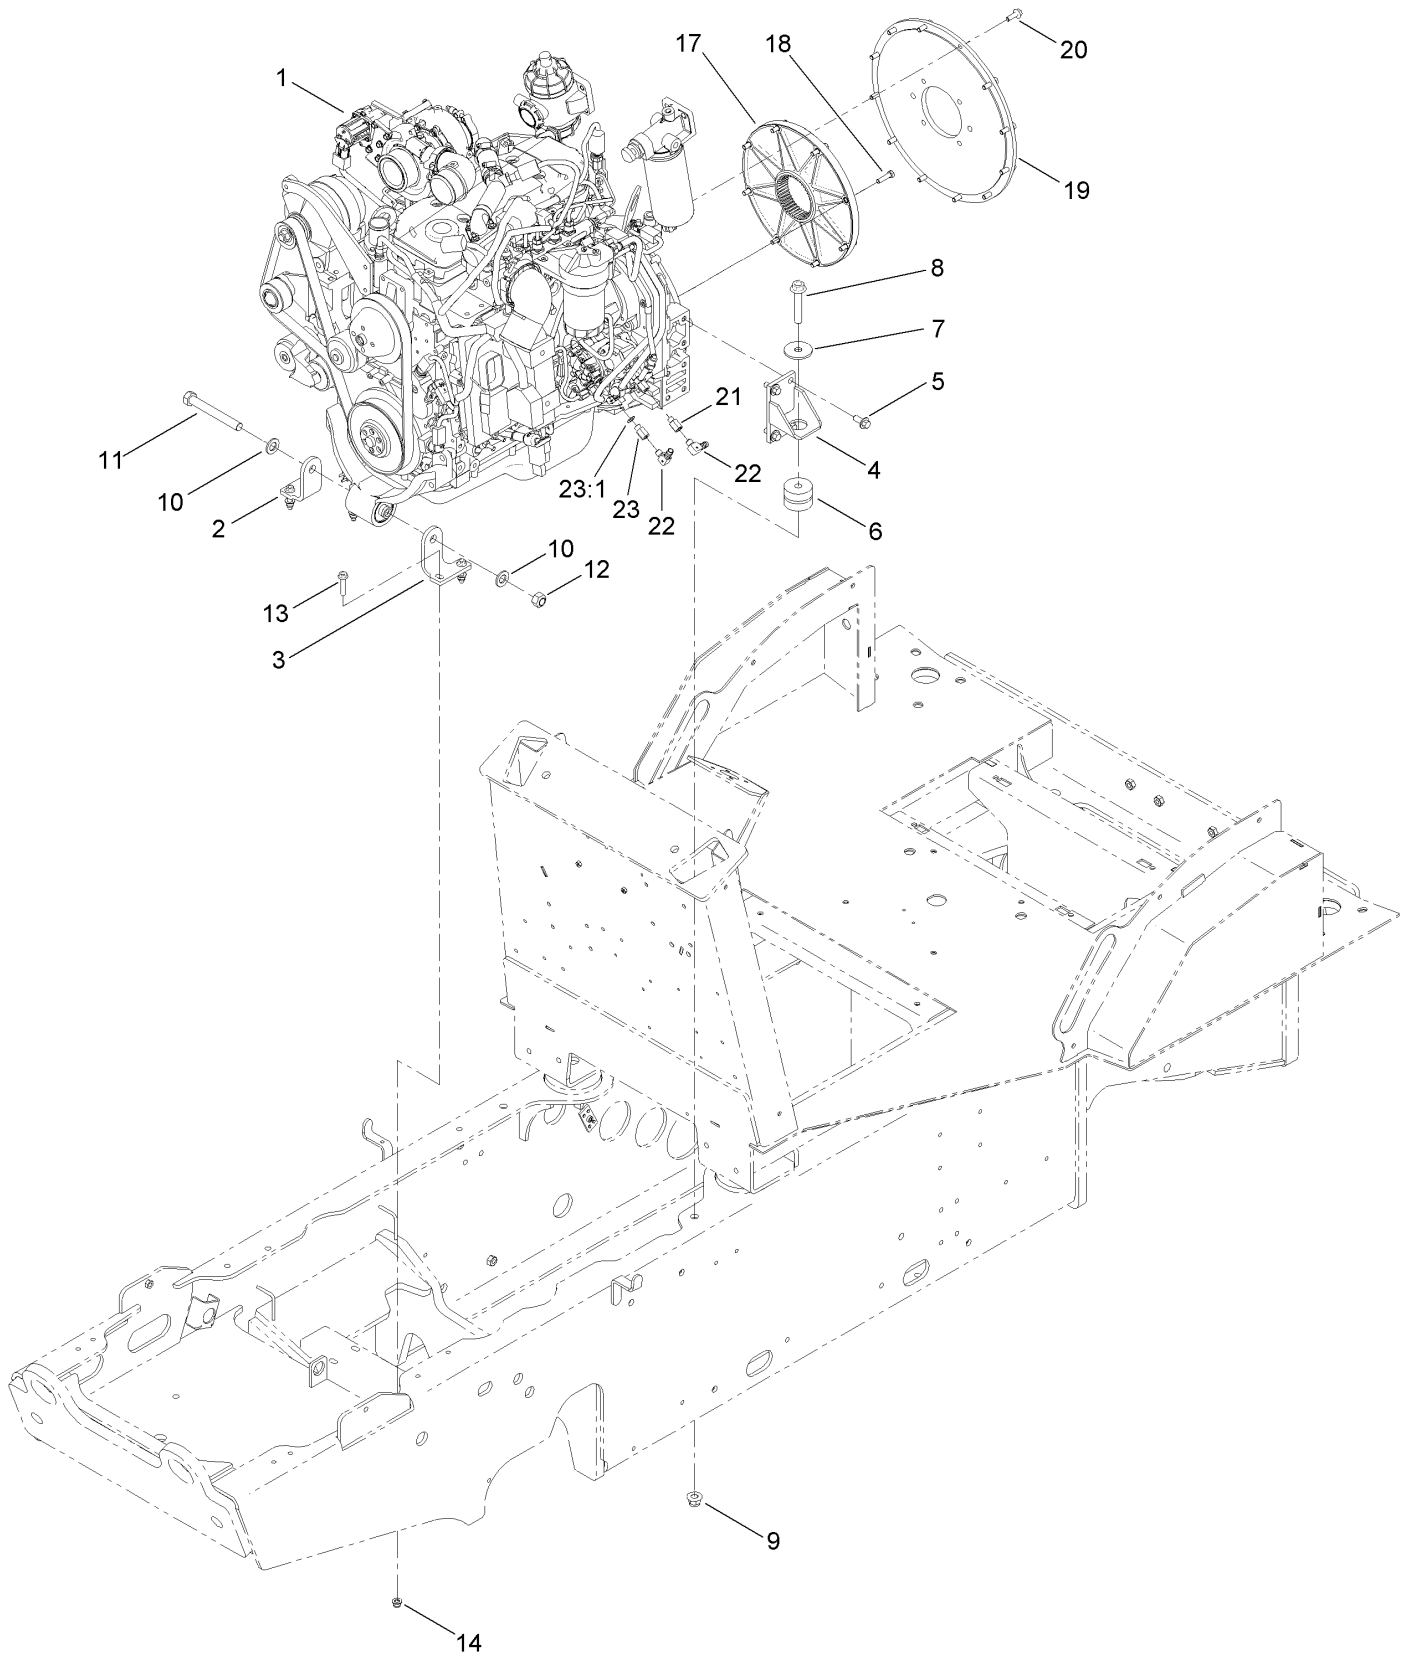


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine ASM ●	12	120-7252	1	Nut-Lock
2	127-1781-03	1	Bracket-Engine Support, LH	13	AU100333	4	Screw-Flange
3	127-1782-03	1	Bracket-Engine Support, RH	14	AU100527	4	Nut-Flange, Nylock
4	AU116622-03	2	Mount-Engine, Rear	17	AU8PD92006	1	Coupling-Drive, Nylon
5	33106-030	8	Screw-HHF	18	323-43	8	Screw-HH
6	AU116662	2	Isolator-Wear Plate, Green	19	AU360643A1	1	Plate-Mounting, Pump
7	AU496-81025	2	Washer	20	AU100877	12	Screw-HH
8	AU100366	2	Screw-Flange	21	AU120770	1	Fitting-Reducer
9	AU100529	2	Nut-HHF	22	127-3870	2	Fitting-Elbow, 90
10	AU496-11081	2	Washer	23	AU123748	1	Fitting-Reducer
11	AU426-1296	1	Screw-HH	23:1	AU121717	1	Seal-Fitting, Fuel

● Not serviced separately

 
Engine Heat Shield and Hose Assembly

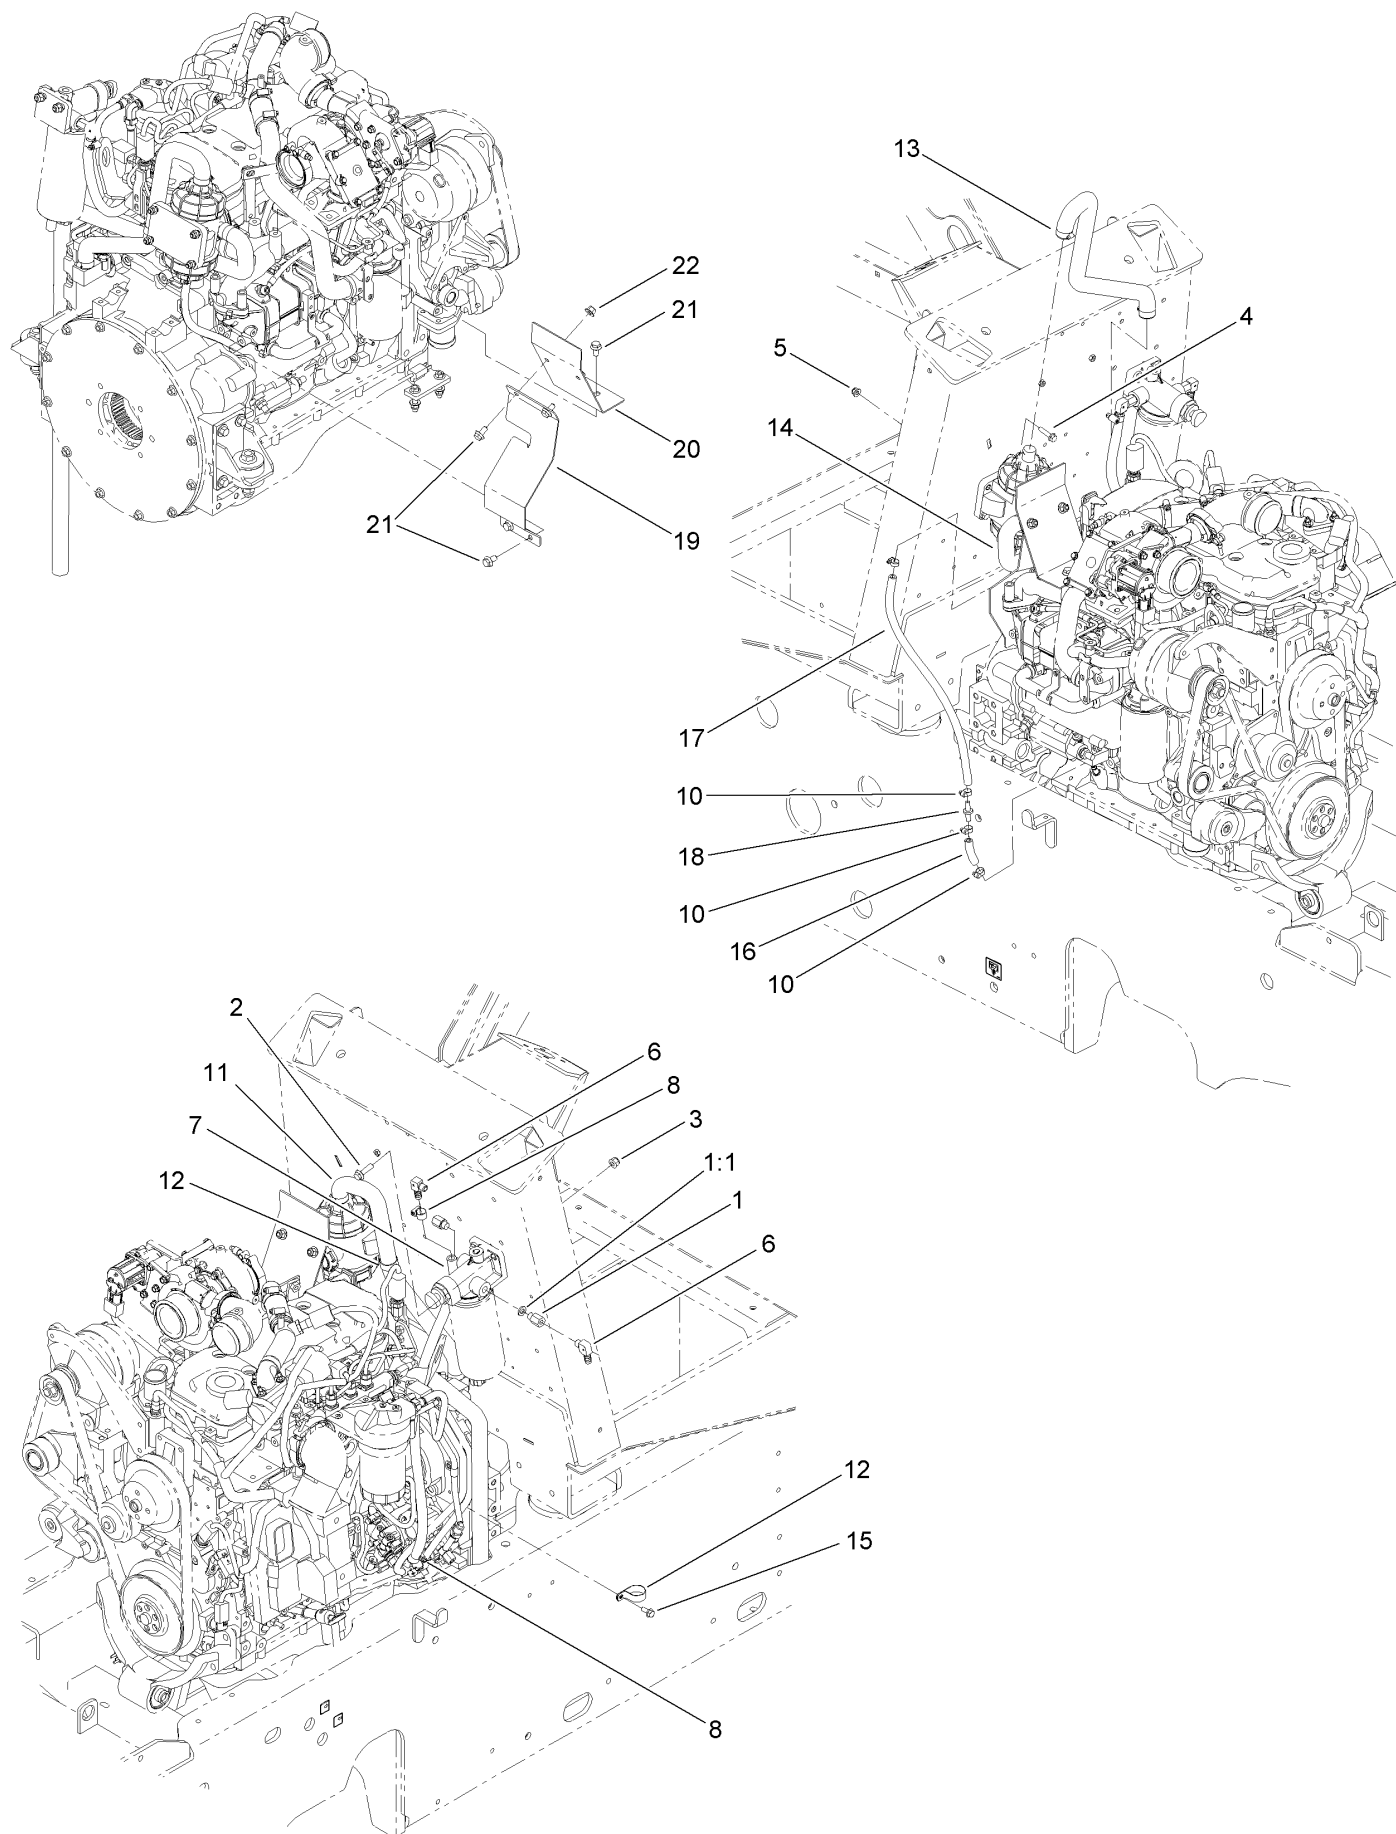

Engine Heat Shield and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU123748	2	Fitting-Reducer	12	2412-74	2	R-Clamp
1:1	AU121717	1	Seal-Fitting, Fuel	13	2412-34	3	Clamp-Hose
2	33105-035	2	Screw-HHF	14	127-1773	1	Hose
3	103-9511	2	Nut-Lock, NI	15	33104-020	1	Screw-HHF
4	33104-035	4	Screw-HHF	16	99-7375	1	Hose-Breather
5	104-3082	4	Nut-Lock, HHF	17	115-7642	1	Hose-Breather
6	127-3870	2	Fitting-Elbow, 90	18	131-0449	1	Valve-Check
7	127-1777	1	Hose-Fuel	19	131-0447	1	Plate-Heat Shield, Lower
8	2412-119	2	Clamp-Hose, Worm Drive	20	131-0448	1	Plate-Heat Shield, Upper
10	2412-108	4	Clamp-Worm	21	33105-020	6	Screw-HHF
11	127-1774	1	Hose	22	104-2611	2	Nut-HF

 Wheel and Drive Assembly

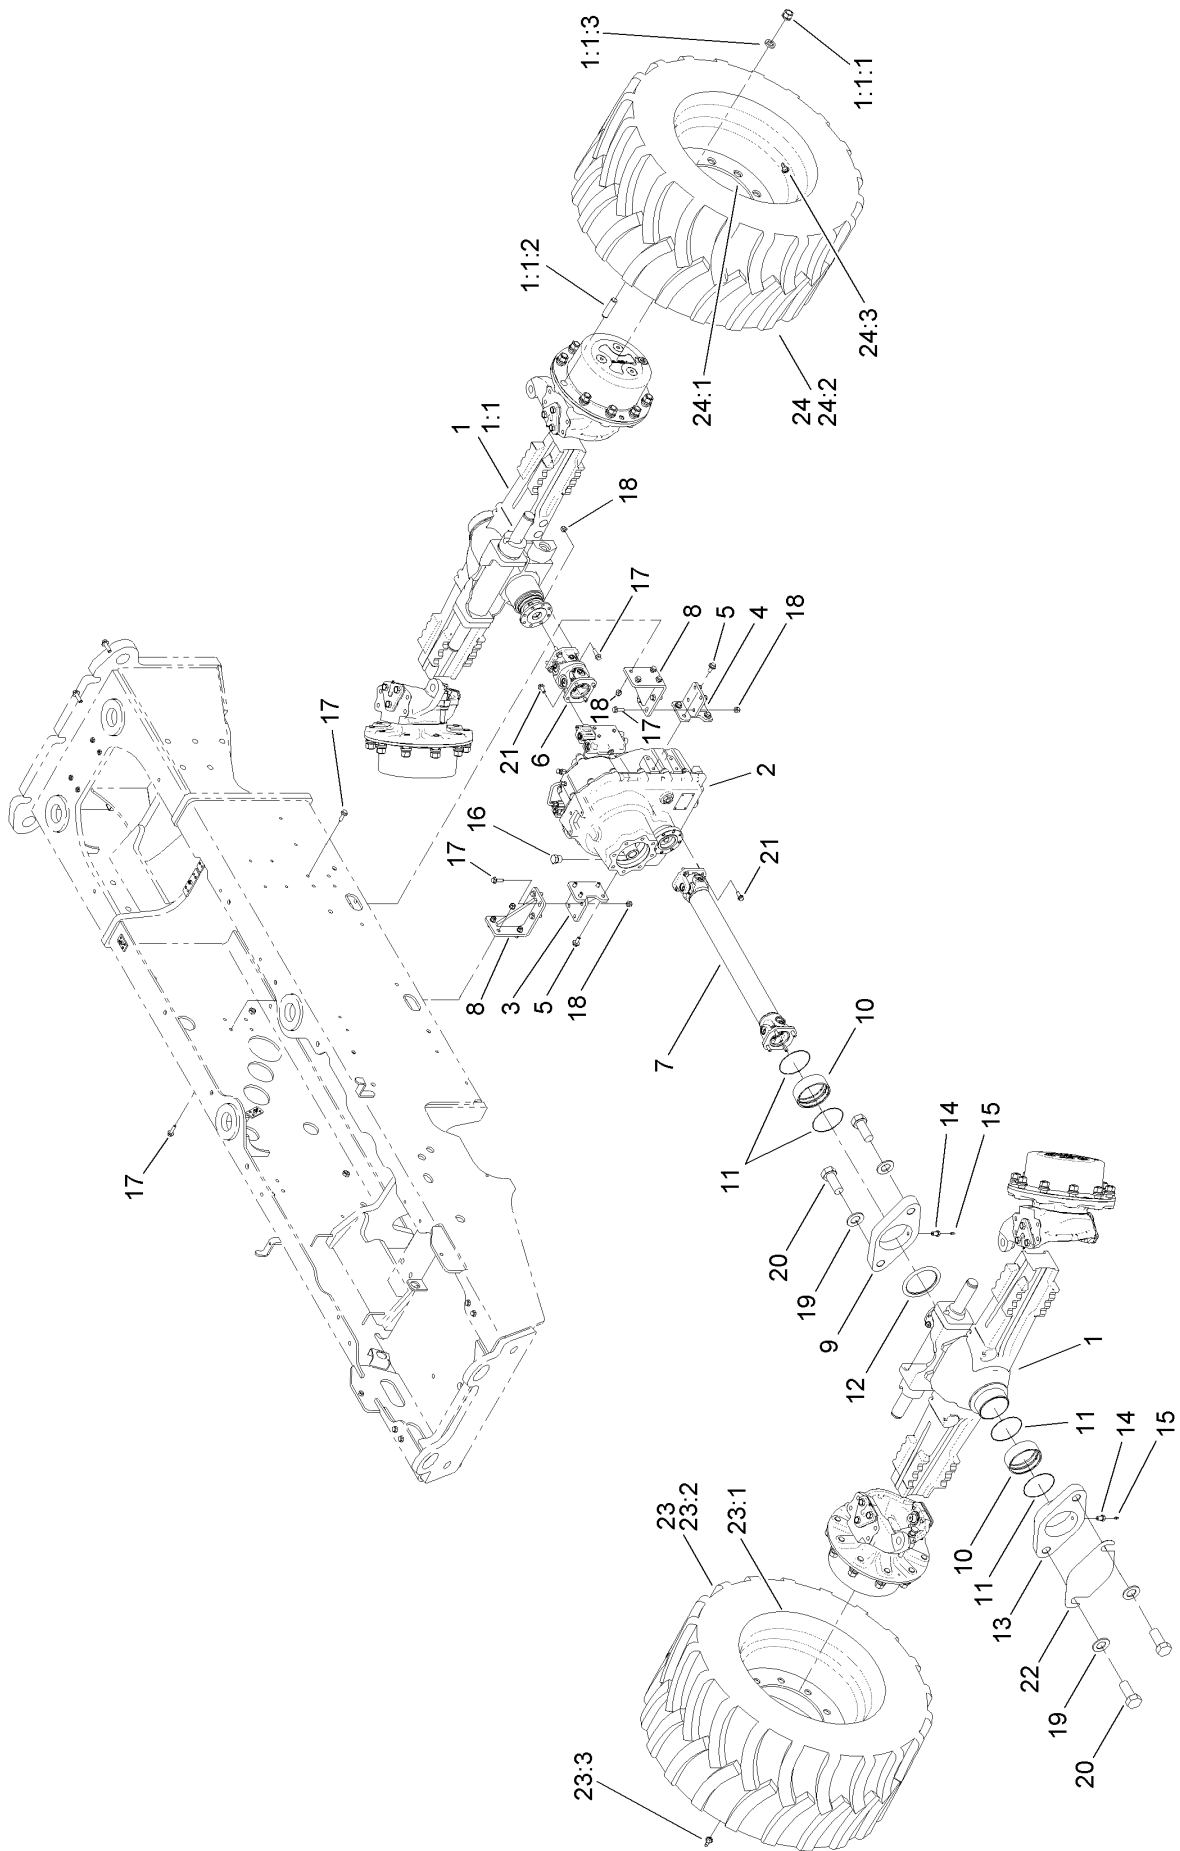


Wheel and Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106863-03	2	Axle ASM	14	127-1813	2	Adapter-Locating
1:1		1	Axle ●	15	302-5	2	Fitting-Grease
1:1:1	AU118806	20	Nut-Lug	16	AU217-414	1	Plug-HYD
1:1:2	AU120121	20	Stud-Wheel	17	33105-035	24	Screw-HHF
1:1:3	AU120122	20	Washer-Lock	18	103-9511	24	Nut-Lock, NI
2	AU106132	1	Transmission-2 Speed, Powershift	19	AUH426858	4	Washer
3	AU106160-03	1	Mount-Transmission, RH	20	AU426-2048	4	Bolt
4	AU106134-03	1	Mount-Transmission, LH	21	108-1531	8	Screw-HHF
5	33106-025	8	Screw-HHF	22	AUH433359	1	Shim-Mount, Axle
6	AU106121-03	1	Constant Velocity Joint ASM	23	125-6846	2	RH Tire ASM
7	AU106109-03	1	Front Axle Drive Shaft ASM	23:1	125-6842	1	Wheel
8	AU106161-03	2	Mount-Transmission	23:2	125-6843	1	Tire-Trencher
9	AU407398A1-03	1	Housing-Mount, Trunion	23:3	232-24	1	Stem-Valve
10	AUK965265	2	Bushing-Pivot	24	125-6845	2	LH Tire ASM
11	AUK965267	4	O-Ring	24:1	125-6842	1	Wheel
12	AUK395023	1	Washer-Thrust	24:2	125-6843	1	Tire-Trencher
13	AUH433408-03	1	Housing-Mount, Trunion	24:3	232-24	1	Stem-Valve

● Not serviced separately

 
Constant Velocity Joint Assembly No. AU106121-03

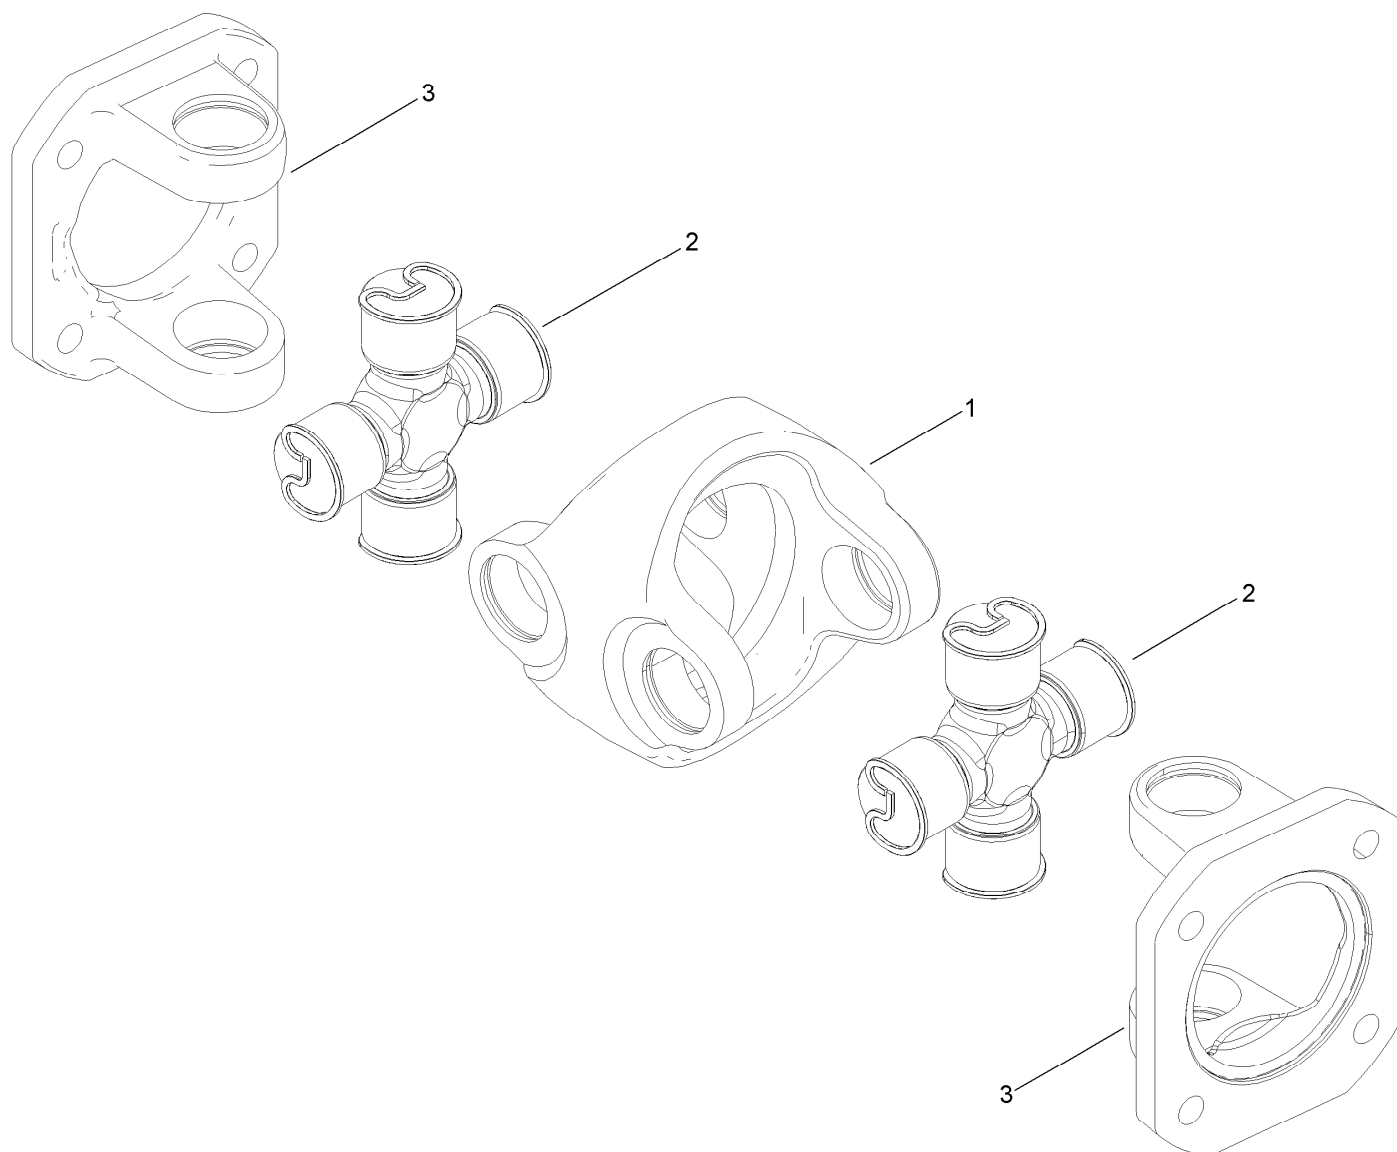

Constant Velocity Joint Assembly No. AU106121-03 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106123	1	Connector-Center
2	AU106122	2	Joint-Universal
3	AU106124	2	Flange-Connection

 
Drive Shaft Assembly No. AU106109-03

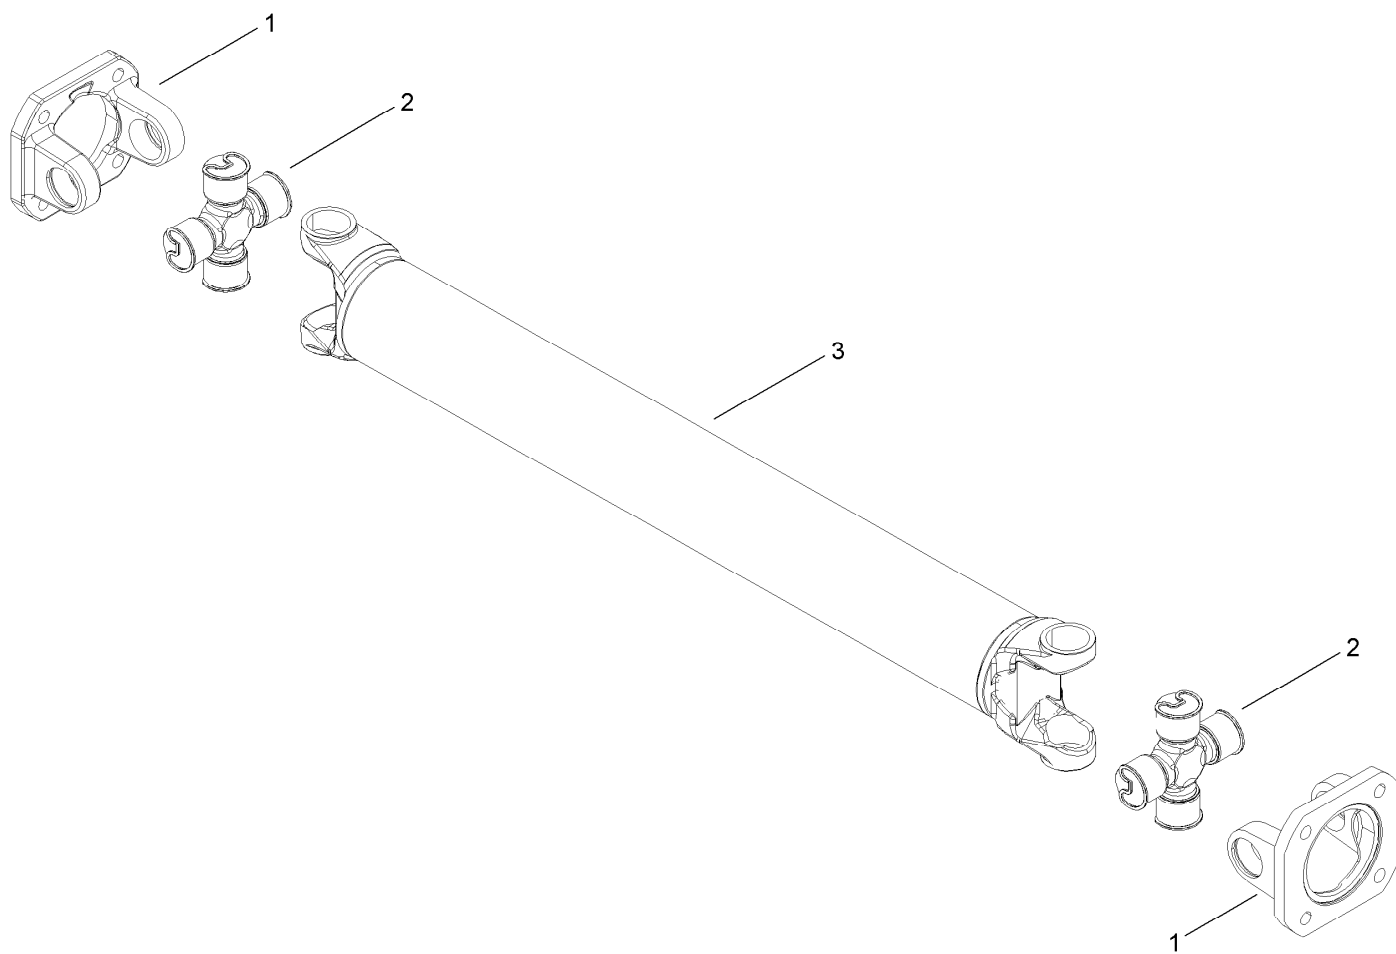

Drive Shaft Assembly No. AU106109-03 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106124	2	Flange-Connection
2	AU106122	2	Joint-Universal
3	AU106125	1	Shaft

 
Air Cleaner and Mounting Assembly

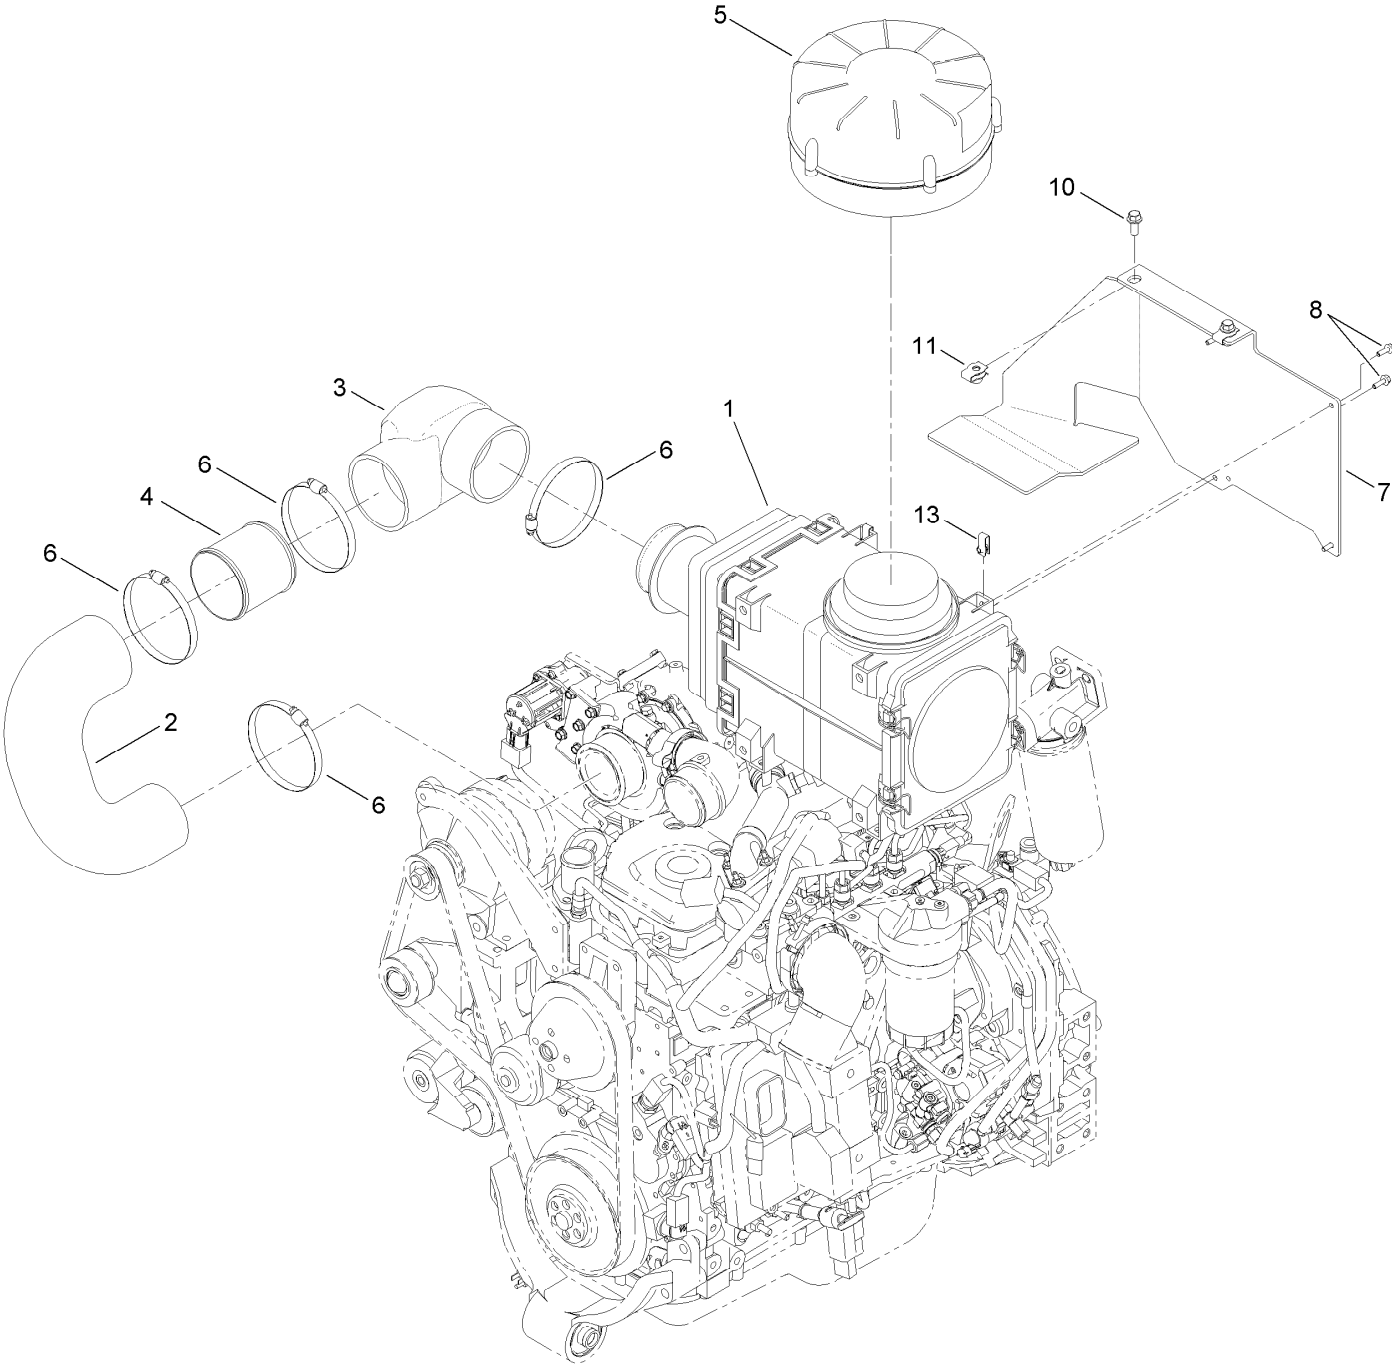

Air Cleaner and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1844	1	Air Cleaner ASM	7	131-0450-03	1	Mount-Box, Air
2	127-1779	1	Hose-Intake	8	33103-020	4	Screw-HHF
3	AU130446	1	Elbow-Intake, Air Cleaner	10	3234-42	2	Screw-HHF
4	127-1778	1	Connector-Intake, Air	11	112-4576	2	Nut-Clip, U
5	127-1737	1	Precleaner-Intake, Air	13	AU100861	4	Nut-U
6	2412-140	4	Clamp-Hose				

 Muffler and Mounting Assembly

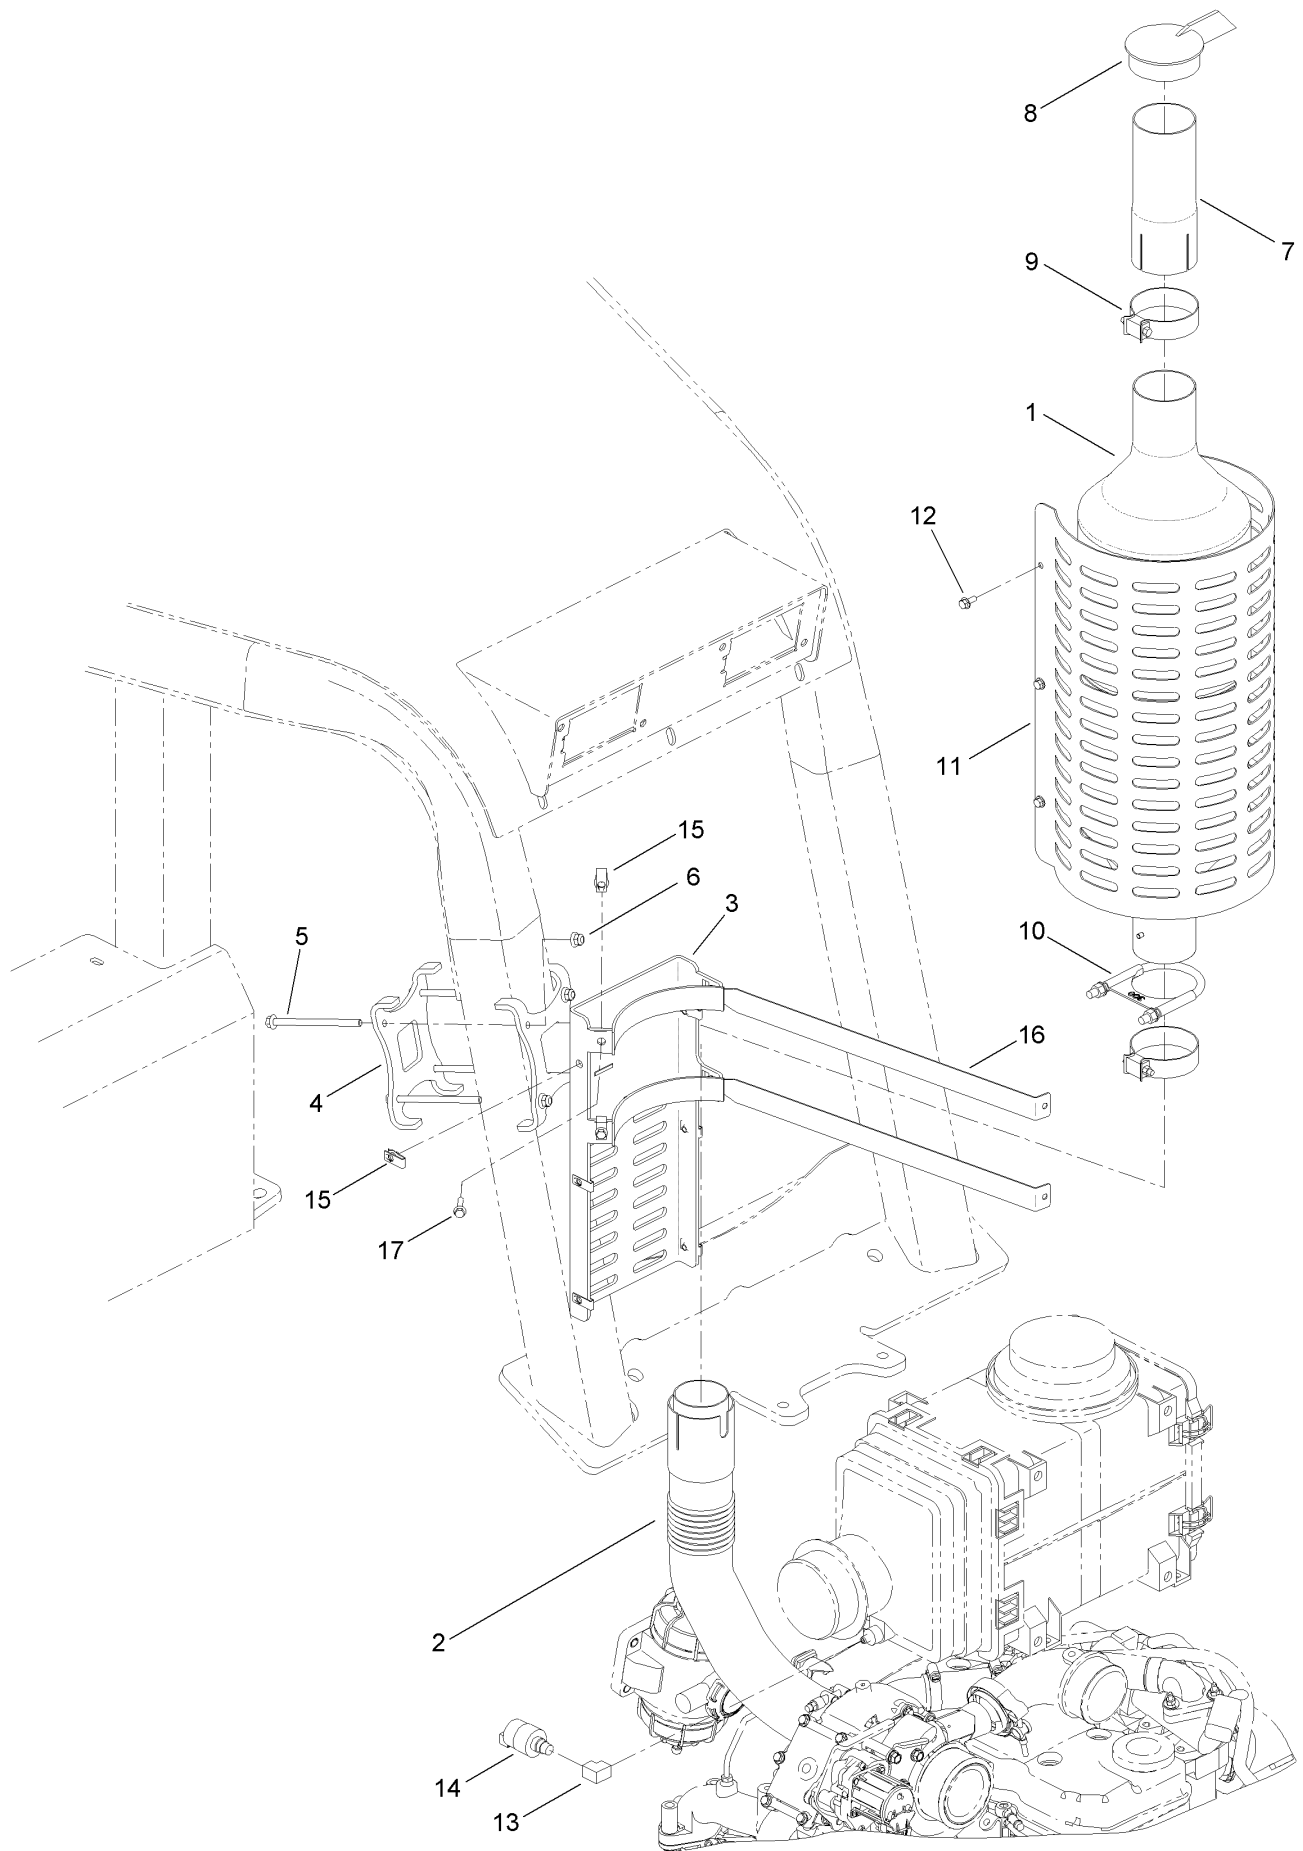


Muffler and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1845	1	Muffler
2	127-1780	1	Pipe-Turbo
3	127-1731-03	1	Mount-Muffler
4	131-0475-03	1	Plate-Bent
5	AU100330	4	Screw-Flange, Metric
6	104-3082	4	Nut-Lock, HHF
7	127-1739	1	Tube-Exhaust
8	AU121736	1	Cap-Rain
9	AU130579	2	Clamp-Torctite

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	AU8NG28118	1	Clamp-Guillotine
11	127-1783-03	1	Shield-Muffler
12	33103-025	6	Screw-HHF
13	AU217-1050	1	Fitting-Elbow, 90
14	AU293797A1	1	Switch ASM
15	AU108120	8	Nut-U
16	127-1709-03	2	Strap-Muffler
17	33103-030	2	Screw-HHF

 Operator Platform and Seat Assembly

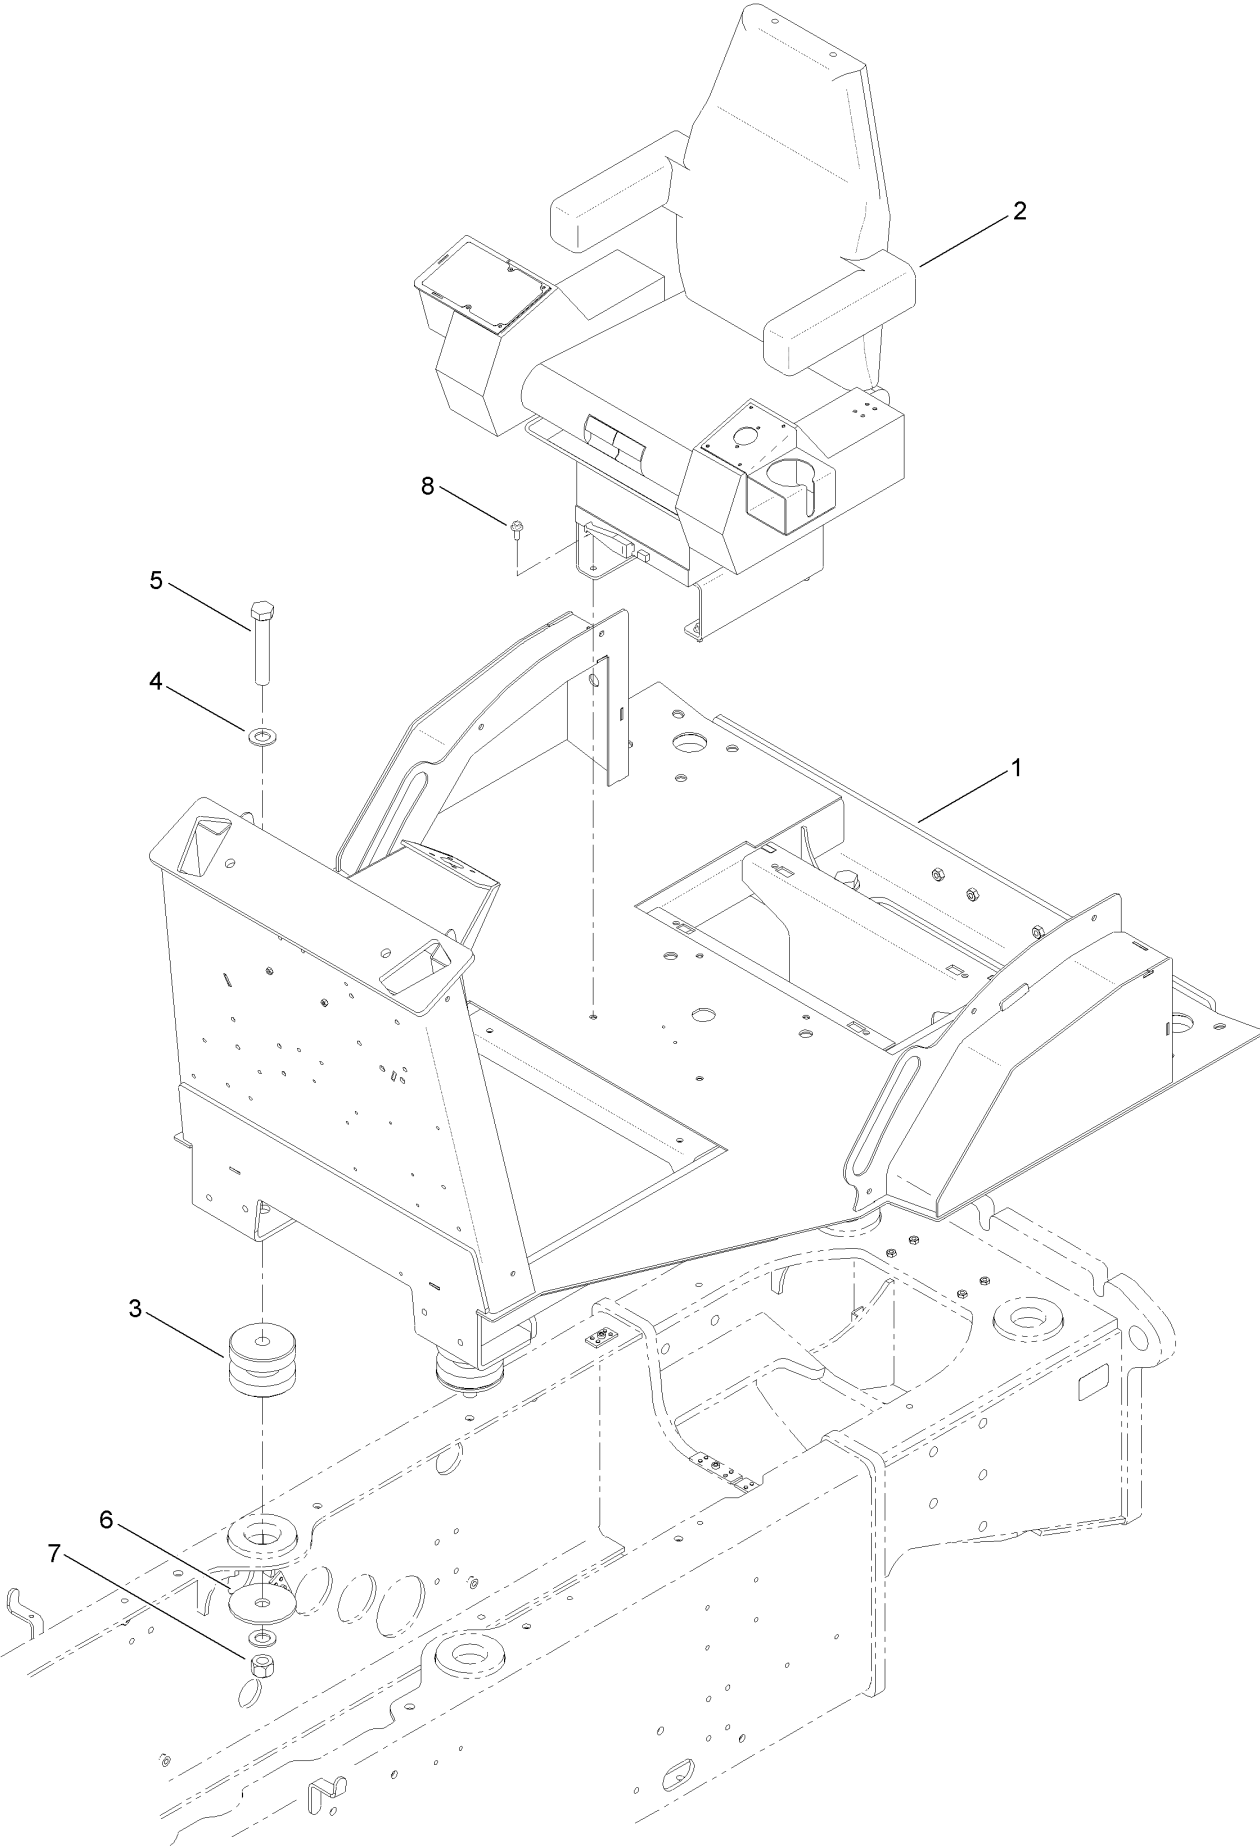


Operator Platform and Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1740-03	1	Platform-Operator
2	AU118589	1	Seat ASM
3	AU30-760-5018	4	Mount-Rubber
4	AUH426833	8	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	AU426-1696	4	Bolt-HH
6	AU101521	4	Washer-Snubber
7	AU232-41116	4	Nut-Hex
8	AU100876	4	Screw-Flange

 
Seat Assembly No. AU118589

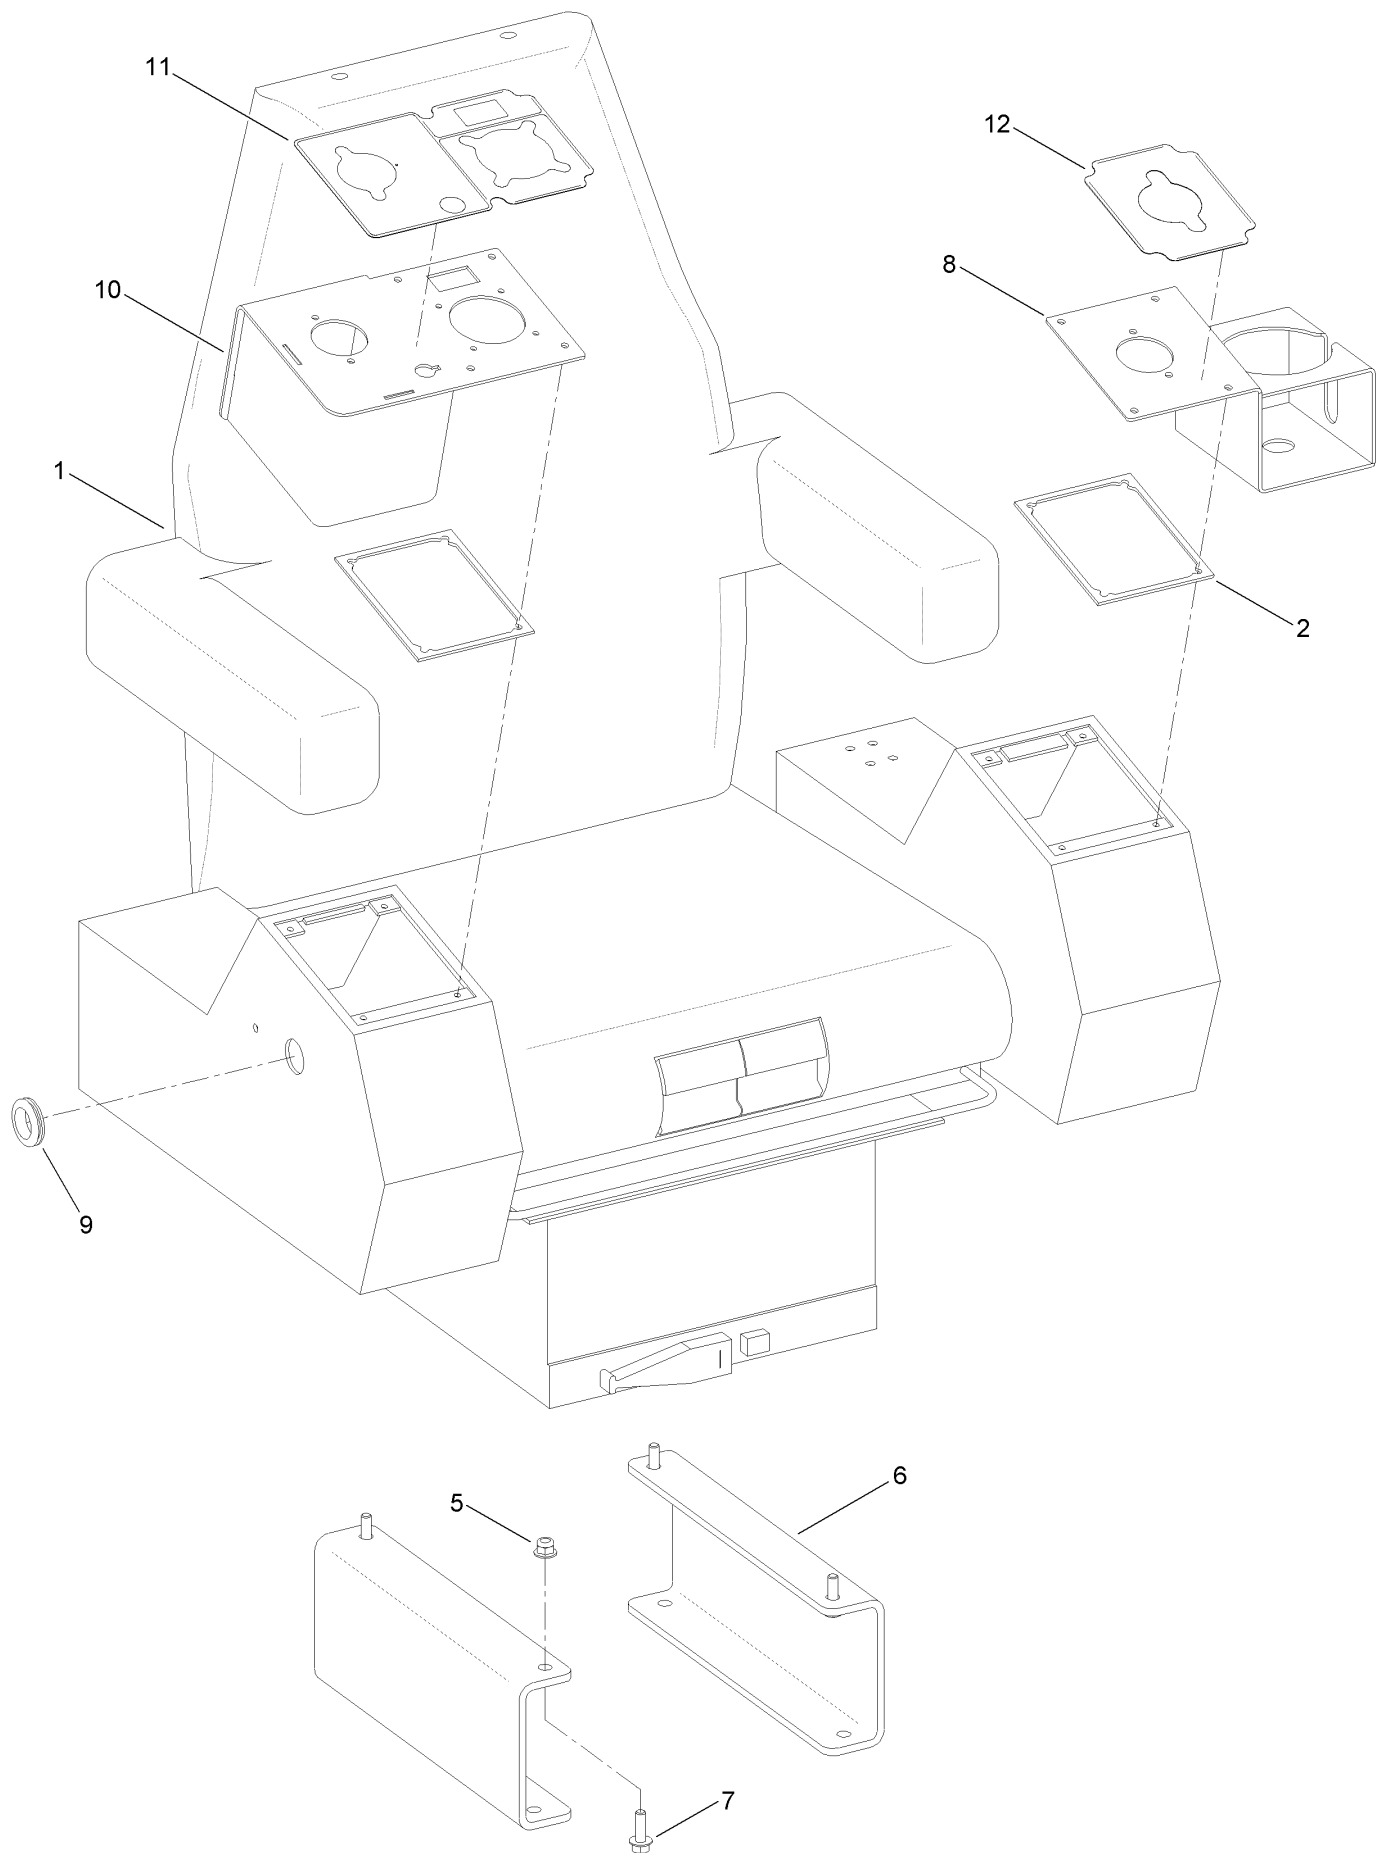

Seat Assembly No. AU118589 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU107706	1	Armchair-Operator	9	240-5	1	Grommet
2	AU108507-03	2	Plate-Spacer	10	131-0485-03	1	Mount-Joystick
5	AU100526	4	Nut-Torque, Prevailing	11	125-8496	1	Decal-Joystick, RH
6	AU107510-03	2	Riser-Operator Seat	12	125-8499	1	Decal-Control, Drive (Ground)
7	93-7773	4	Screw-HHF				
8	AU112736-03	1	Cup-Holder				

 
Operator Dash and Panel Assembly

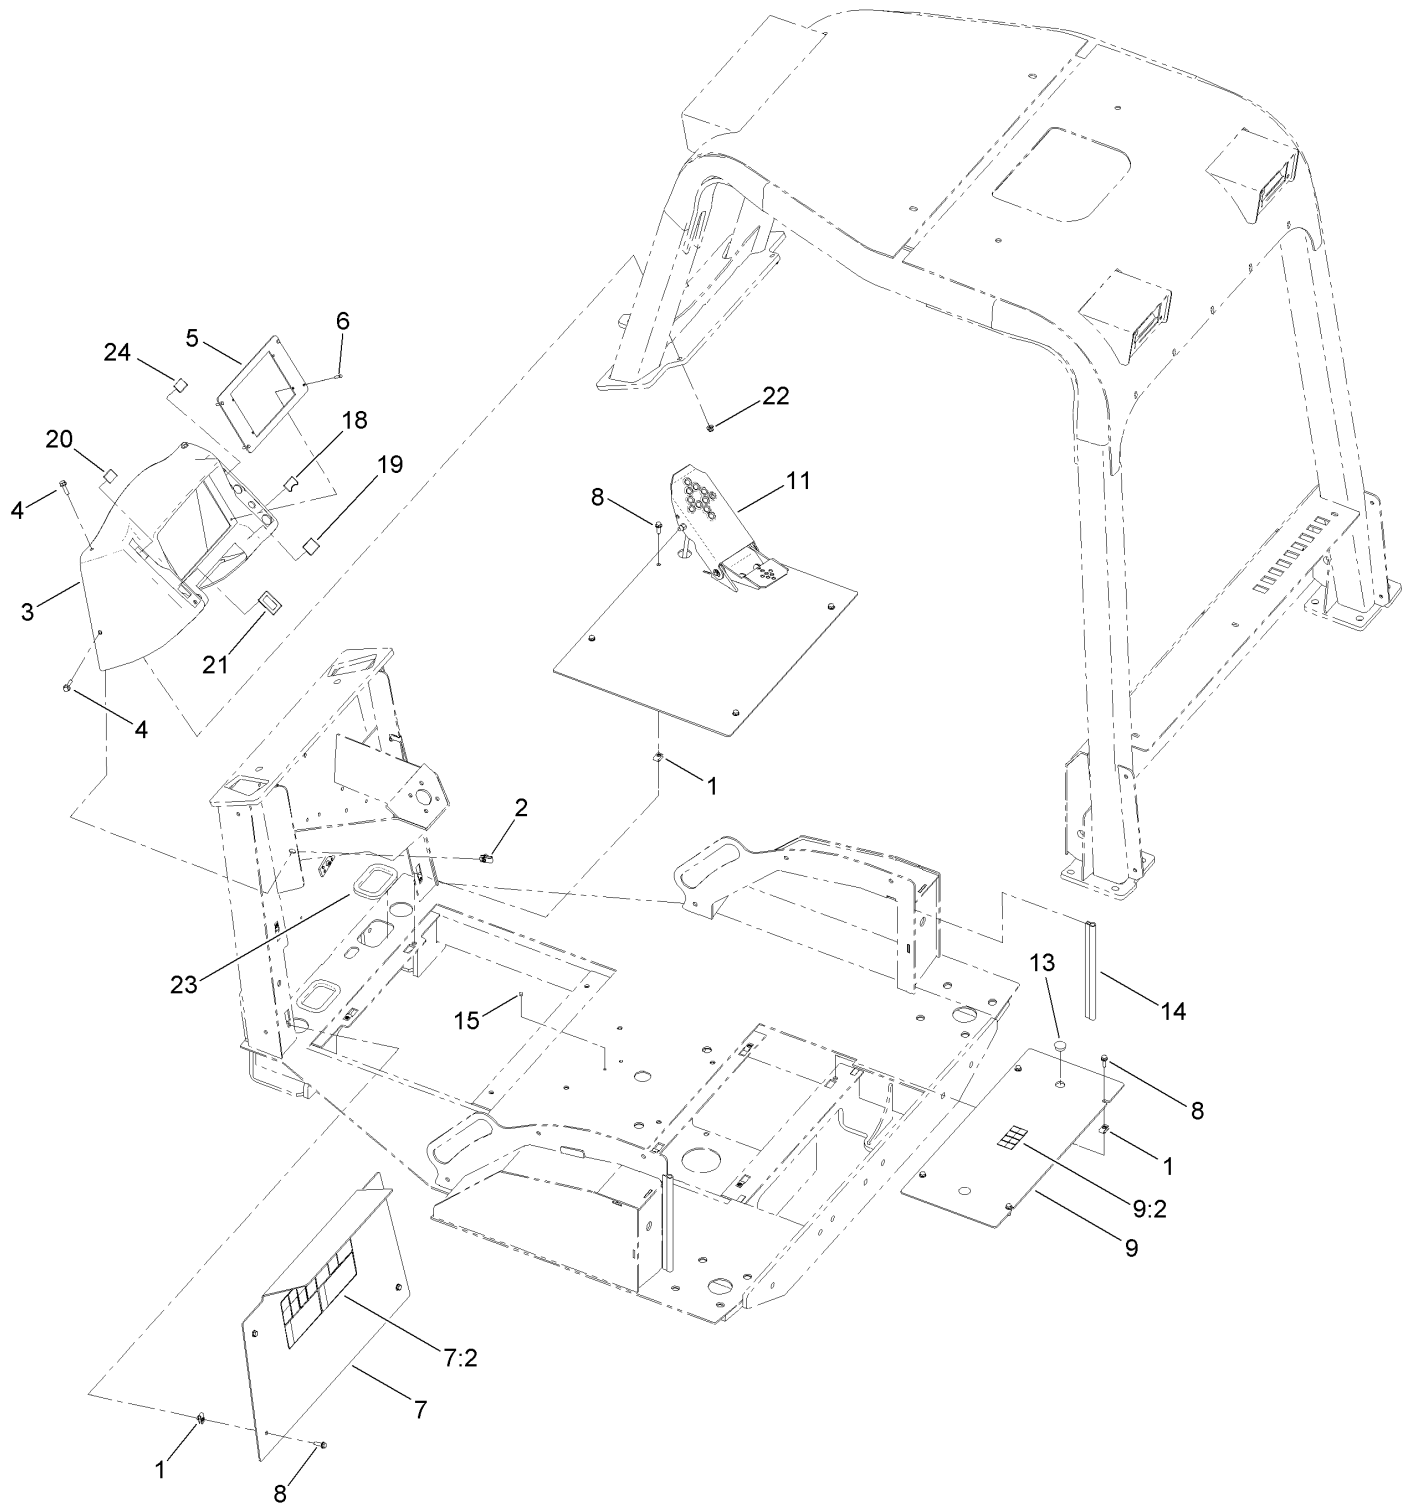

Operator Dash and Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7721	10	Nut-Clip, U	11	AU106377	1	Pedal ASM
2	AU100862	2	Nut-U	13	AU353-411	2	Plug-Dome
3	131-0438	1	Dash-Panel	14	AU118602	2	Seal-Hood
4	33104-030	4	Screw-HHF	15	AU353-400	2	Plug-Dome
5	AU103959-03	1	Plate-Mount, Display	18	125-8484	1	Decal-Aux Power
6	AU463-11012	4	Screw-HH	19	130-7539	1	Decal-Ignition
7	130-8409	1	Kick Panel ASM	20	131-0439	1	Decal-Lock, Differential
7:2	130-7540	1	Decal-Safety	21	127-1830	1	Decal-Aux Power
8	108-3748	12	Screw-HHF	22	104-3082	2	Nut-Lock, HHF
9	130-8410	1	Battery Cover ASM	23	127-1293	2	Trim-Battery
9:2	125-8473	1	Decal-Warning, Battery	24	131-0440	1	Decal-Brake, Parking

 
Pedal Assembly No. AU106377

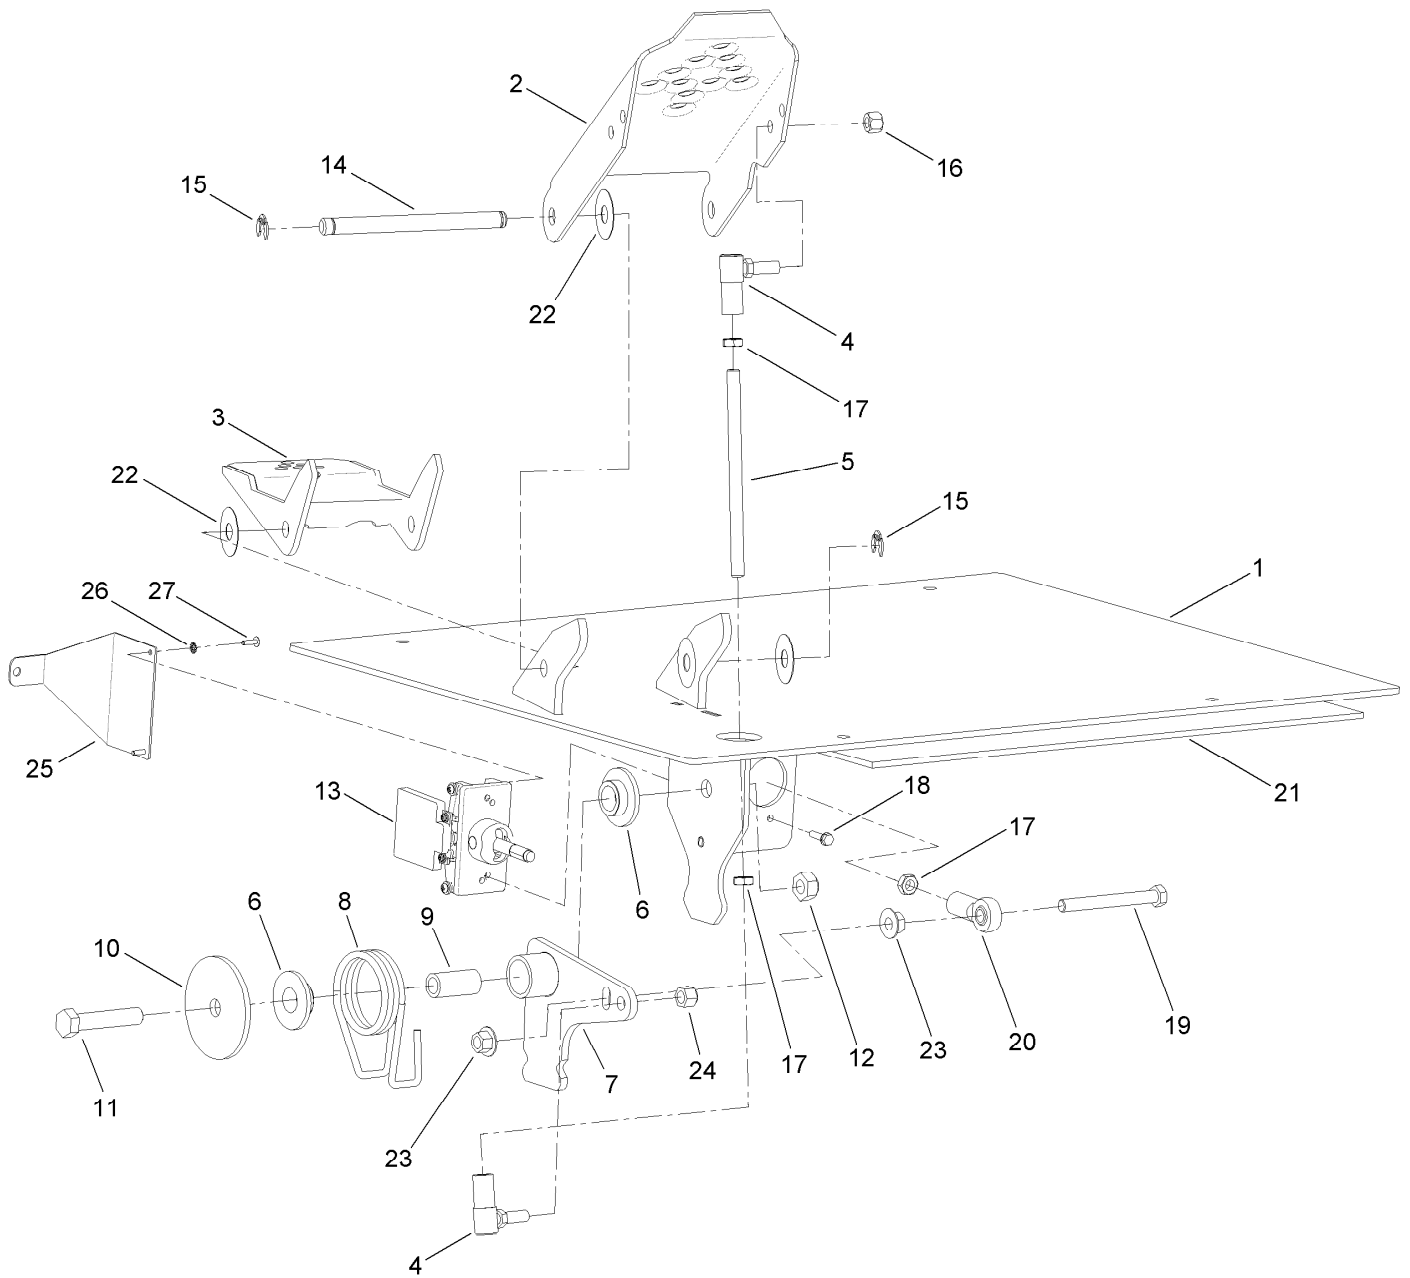

Pedal Assembly No. AU106377 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106362-03	1	Plate-Floor	15	65-2720	2	Ring-Retaining,Clip
2	AUH403816-03	1	Pedal-Foot, Ground Drive	16	AU232-4616	1	Nut-Hex
3	AUH672181-03	1	Pedal-Heel	17	3220-3	3	Nut-HJ
4	AUD38296	2	Joint-Ball	18	32144-64	2	Tscrew-HWH
5	AU398314A1	1	Rod-Control	19	1-800805	1	Screw-HH
6	AUD128616	2	Bushing-Insert, Plastic	20	AUS108030	1	Rod-End
7	AU106453	1	Pivot-W/Bellcrank	21	AU109930	1	Insulation-Floor
8	AUH436303	1	Spring	22	AU126572	4	Washer
9	AUH435694	1	Spacer	23	32128-43	2	Nut-Flange
10	AUH436215	1	Washer-Special	24	3296-6	1	Nut-Lock
11	325-10	1	Screw-HH	25	131-0481	1	Plate-Sensor, Pedal
12	97-1206	1	Locknut	26	3255-24	2	Washer-Lock / EXT
13	131-0434	1	Sensor-Traction	27	3249-3	2	Screw-PRH
14	AUH403840	1	Pin				

 
Operator Storage Assembly

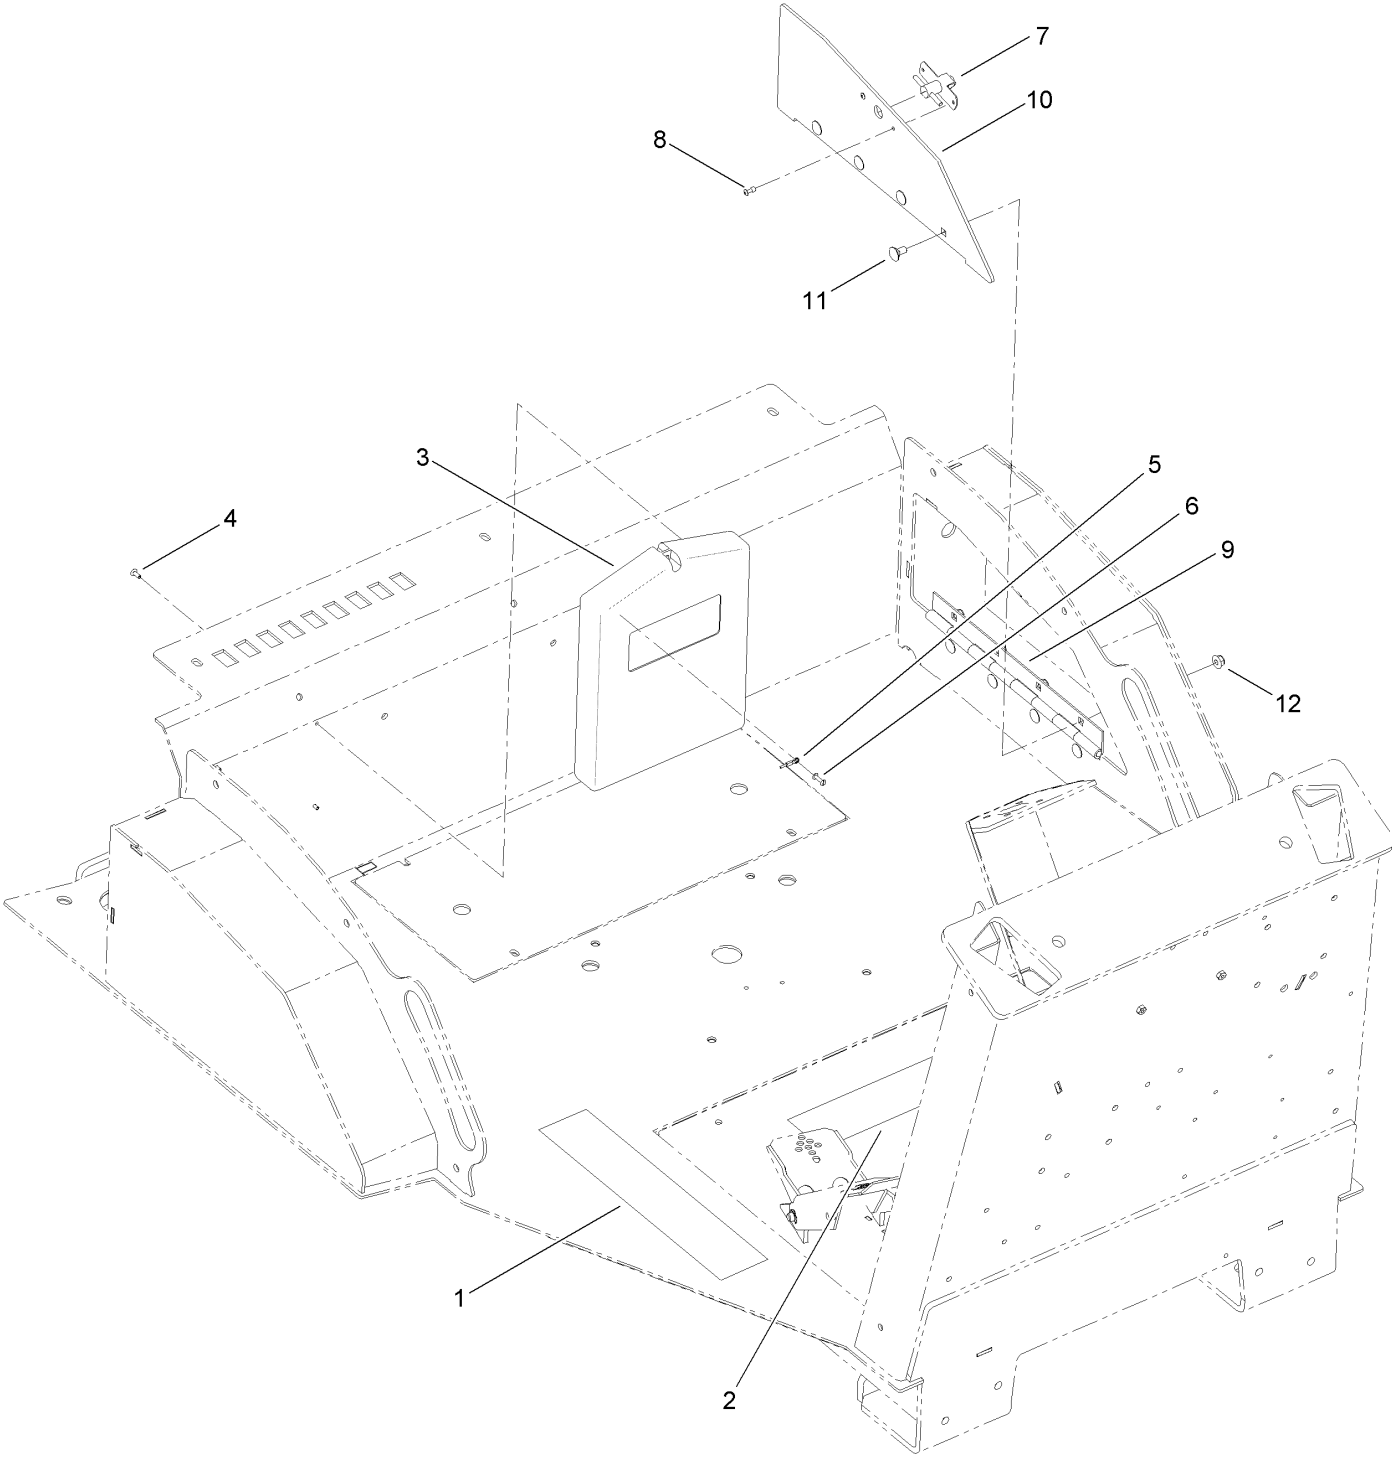

Operator Storage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU105911	2	Tape-Anti Skid, Upper Step	7	AUL102515	1	Latch
2	AU105912	2	Tape-Anti Skid, Lower Step	8	103-0138	2	Rivet-Pop
3	AU103216	1	Holder-Manual, Operator	9	127-1784	1	Hinge
4	114439	4	Rivet-Blind	10	127-1785-03	1	Plate-Door
5	AUR46465	1	Lanyard	11	3231-1	8	Screw-CARR
6	AUR46463	1	Post-Manual	12	104-8301	8	Nut-HF, NI

 
Backfill Blade and Mounting Assembly

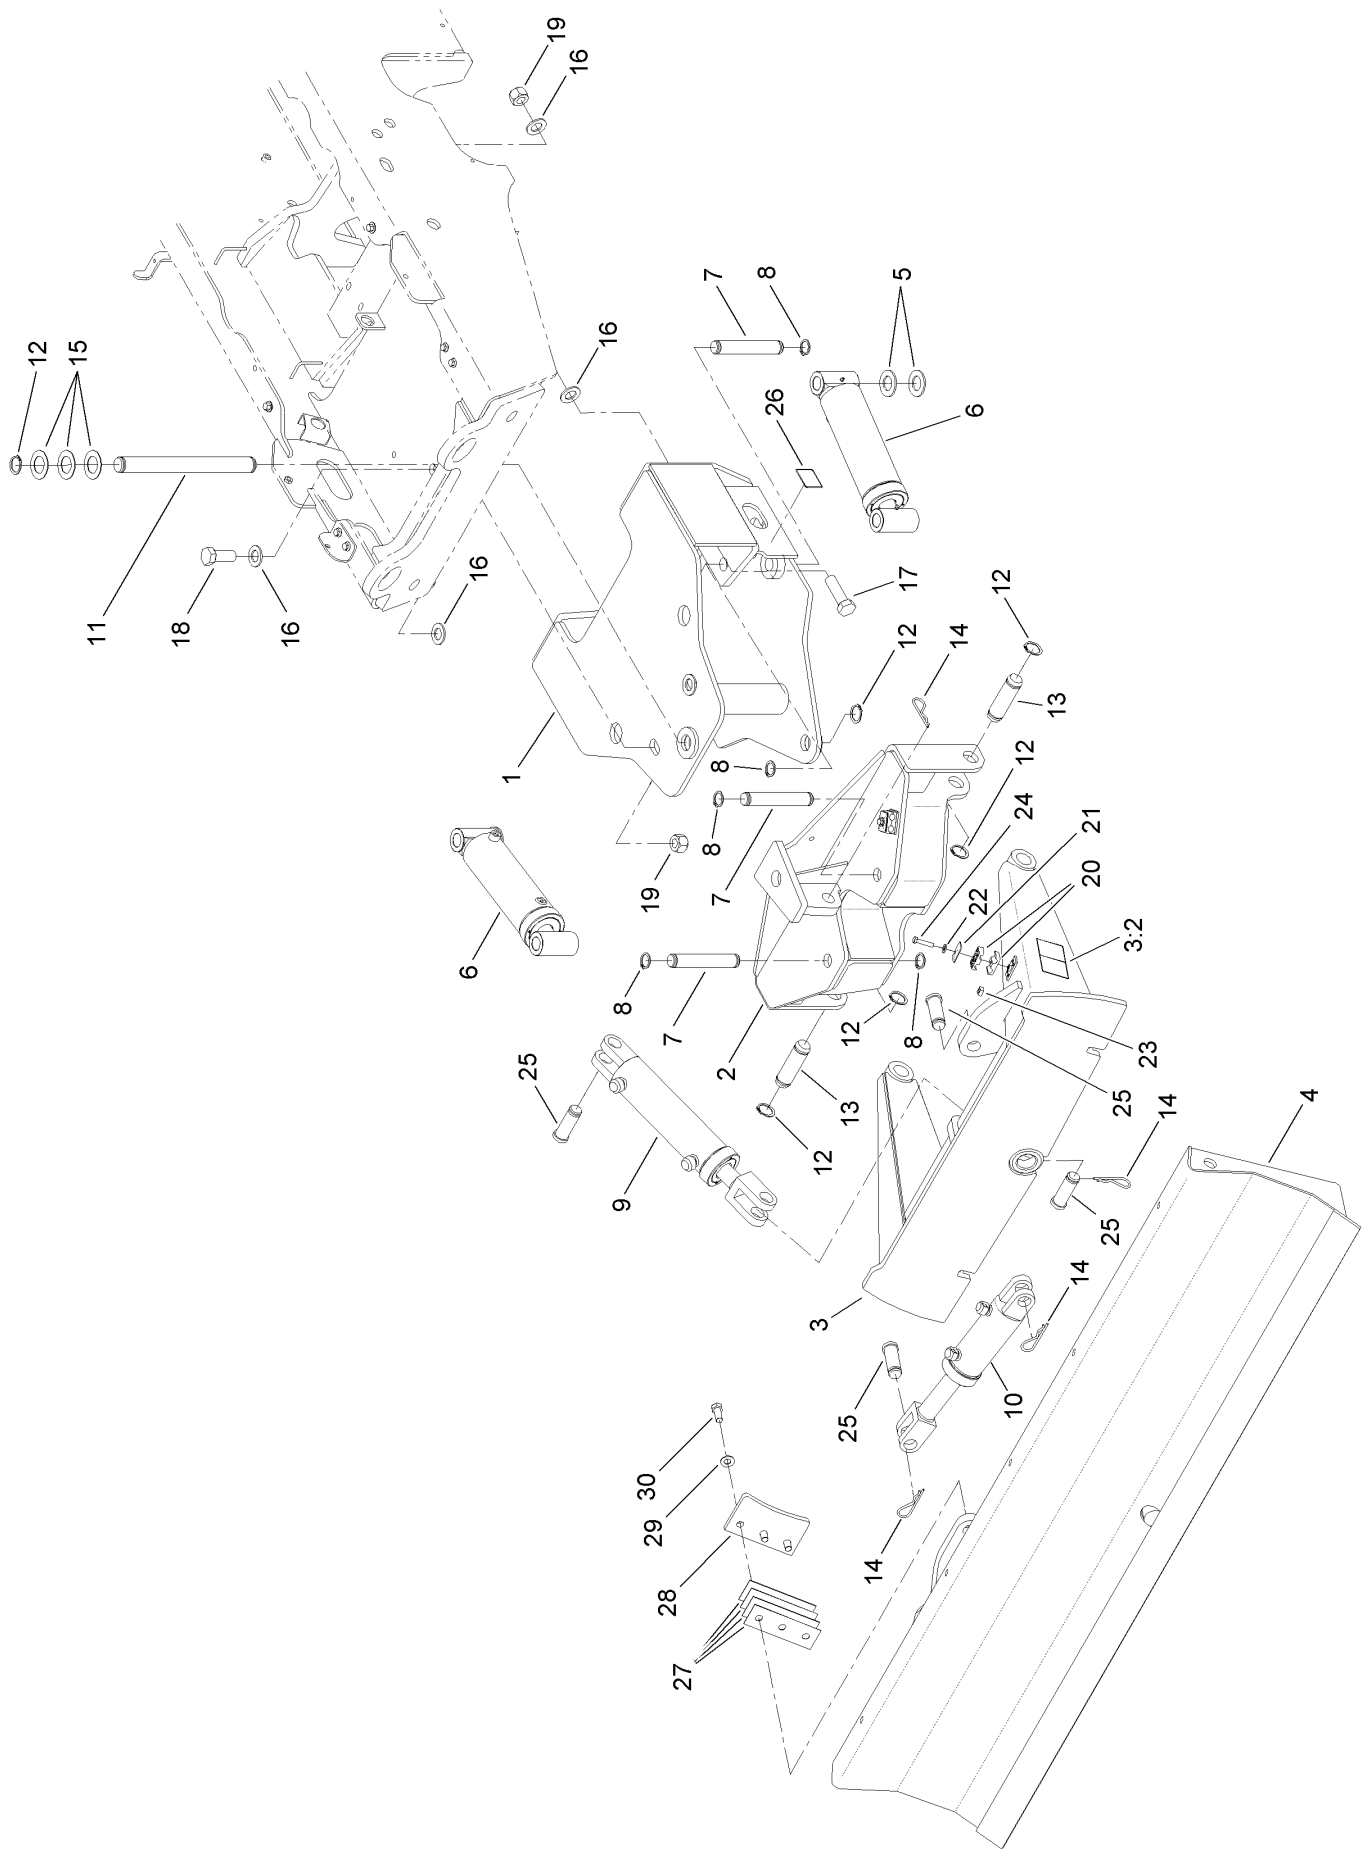

Backfill Blade and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU117156-03	1	Frame-Blade, Backfill	16	AUH426833	8	Washer
2	AU115400-03	1	Pivot-Blade, Backfill	17	AU426-1656	2	Screw-Cap, HH
3	131-0437	1	Backfill Arm ASM	18	AU426-1640	2	Bolt
3:2	130-7541	2	Decal-Danger	19	AU232-41116	4	Nut-Hex
4	131-0487-03	1	Blade-Backfill	20	56-7971	4	Clamp-Tube
5	AU495-81209	4	Washer-Flat	21	69-9760	2	Coverplate
6	127-1797	2	HYD Cylinder ASM	22	100-4852	2	Washer-Hardened
7	AUH432880	4	Pin-Angle, Cylinder	23	AU224-2246	2	Nut-Square
8	32151-77	8	Ring-Retaining, External	24	323-52	2	Screw-HH
9	127-1798	1	HYD Cylinder ASM	25	AUN14001	4	Pin-Clevis
10	127-1799	1	HYD Cylinder ASM	26	125-6694	2	Decal-Tie Down
11	AUH432906	1	Pin-Blade	27	AUH438278-03	8	Shim-Retainer
12	AUD25279	6	Ring	28	AUH438273-03	2	Retainer-Blade
13	AUH432898	2	Pin-Blade	29	3256-27	6	Washer-Flat
14	AU1978738C1	4	Pin-Cotter, Quick Attach	30	327-4	6	Screw-HH
15	AUH117606	3	Washer				

 
Hydraulic Cylinder Assembly No. 127-1797

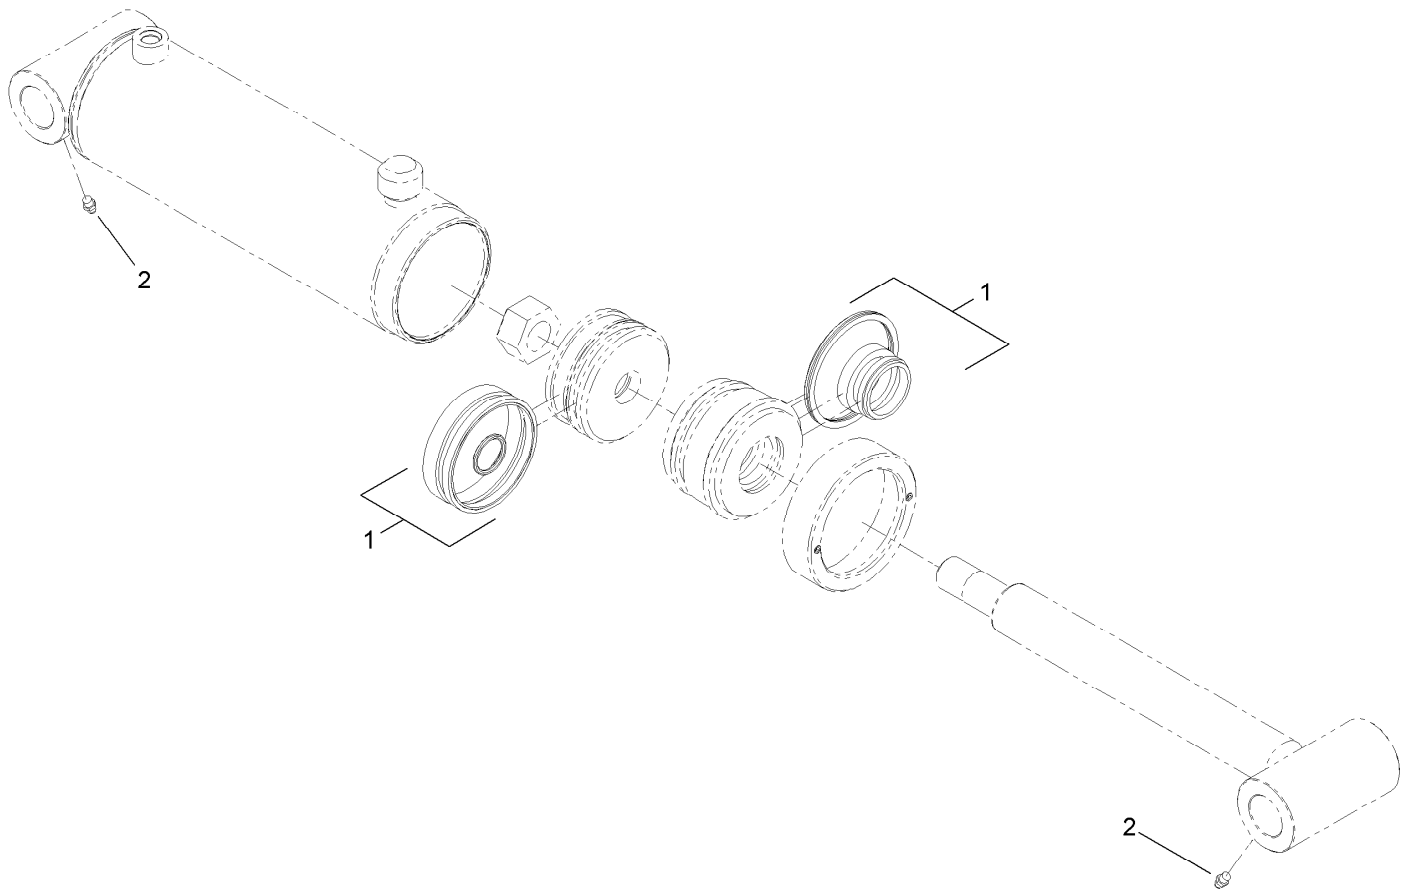

Hydraulic Cylinder Assembly No. 127-1797 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3822	1	Seal Kit
2	302-2	2	Fitting-Grease

 
Hydraulic Cylinder Assembly No. 127-1798

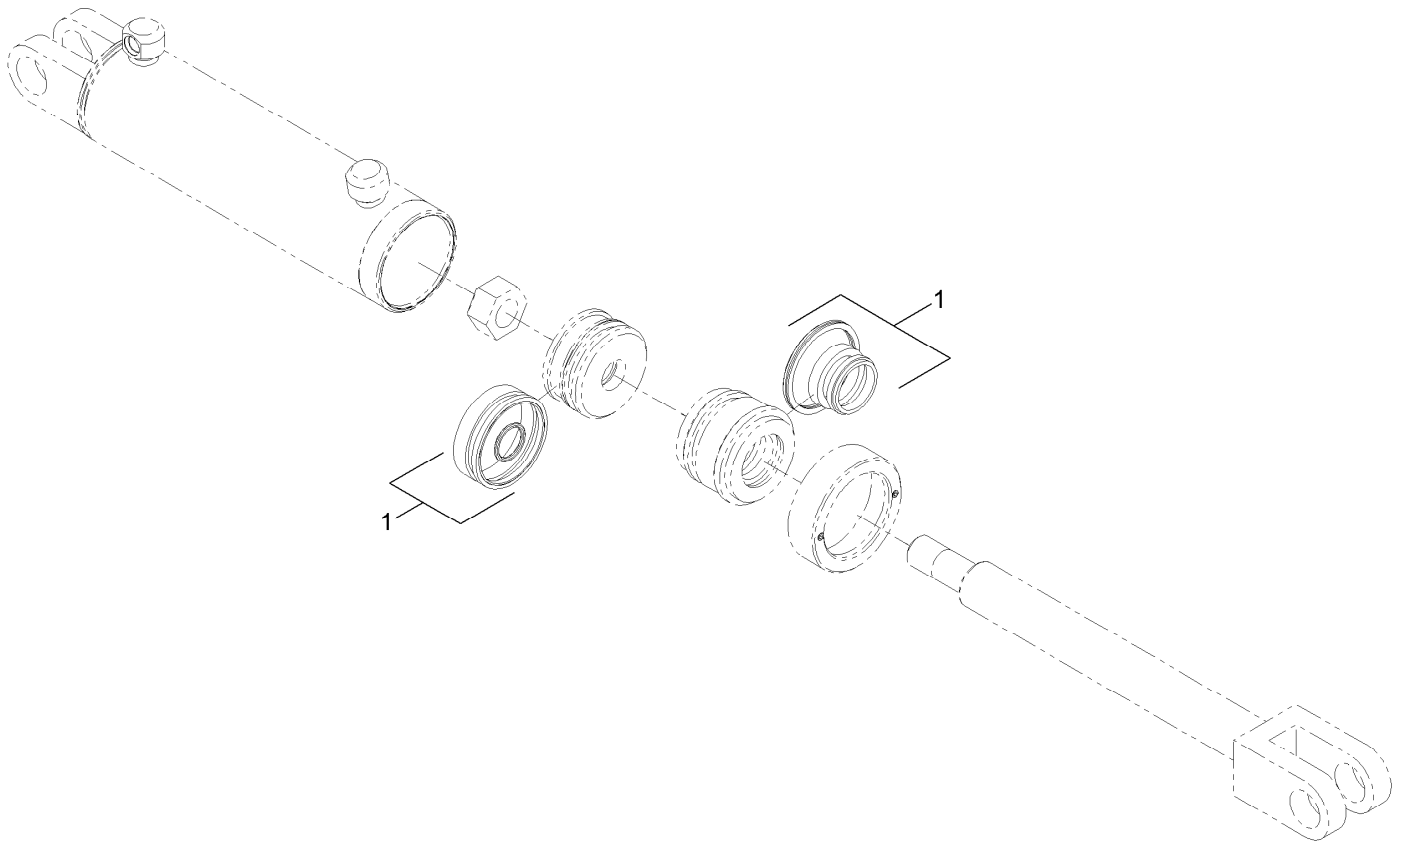

Hydraulic Cylinder Assembly No. 127-1798 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1854	1	Seal Kit

 
Hydraulic Cylinder Assembly No. 127-1799

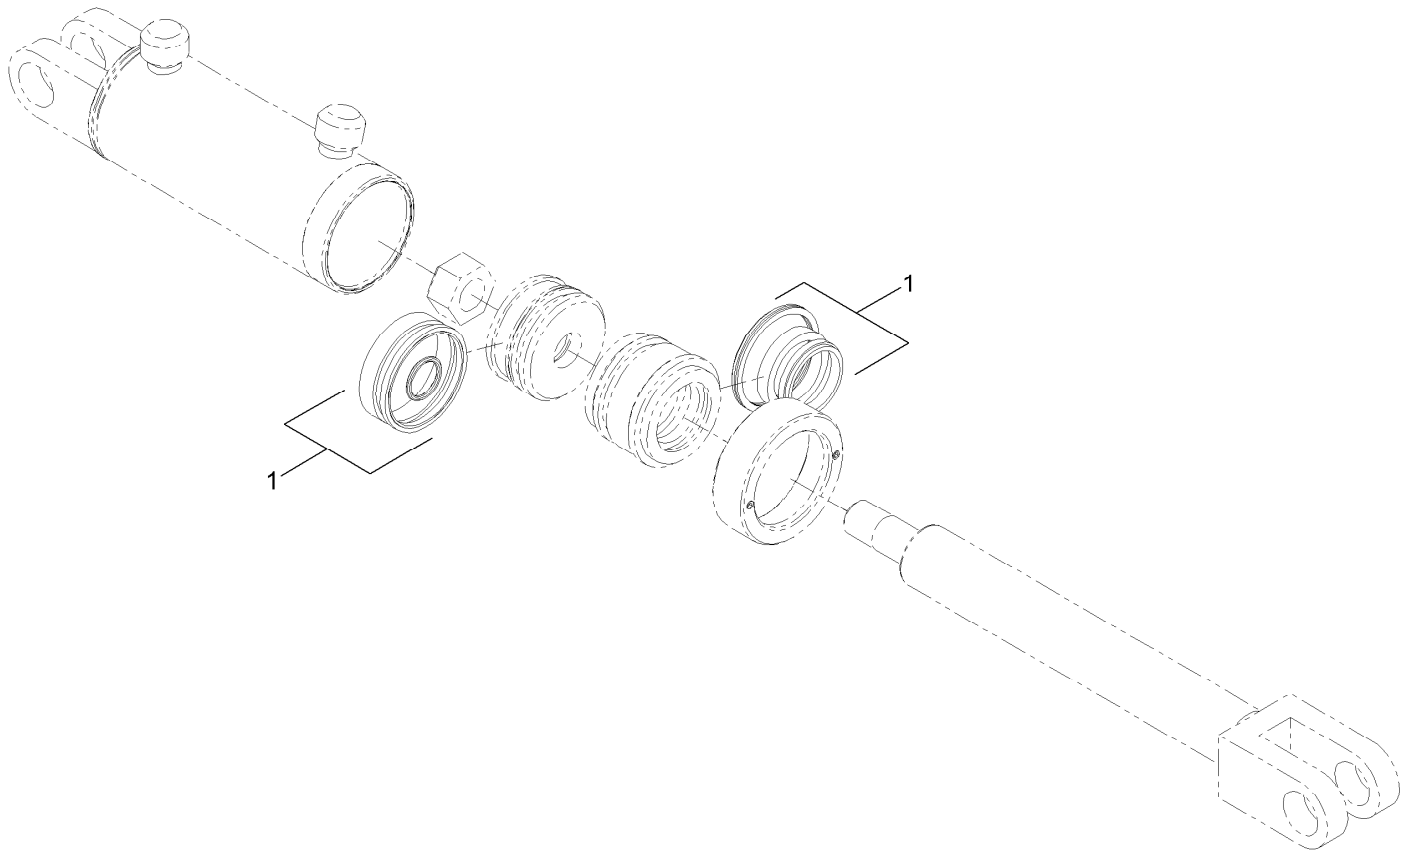

Hydraulic Cylinder Assembly No. 127-1799 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1853	1	Seal Kit

 Backfill Blade Hydraulic Plumbing Assembly

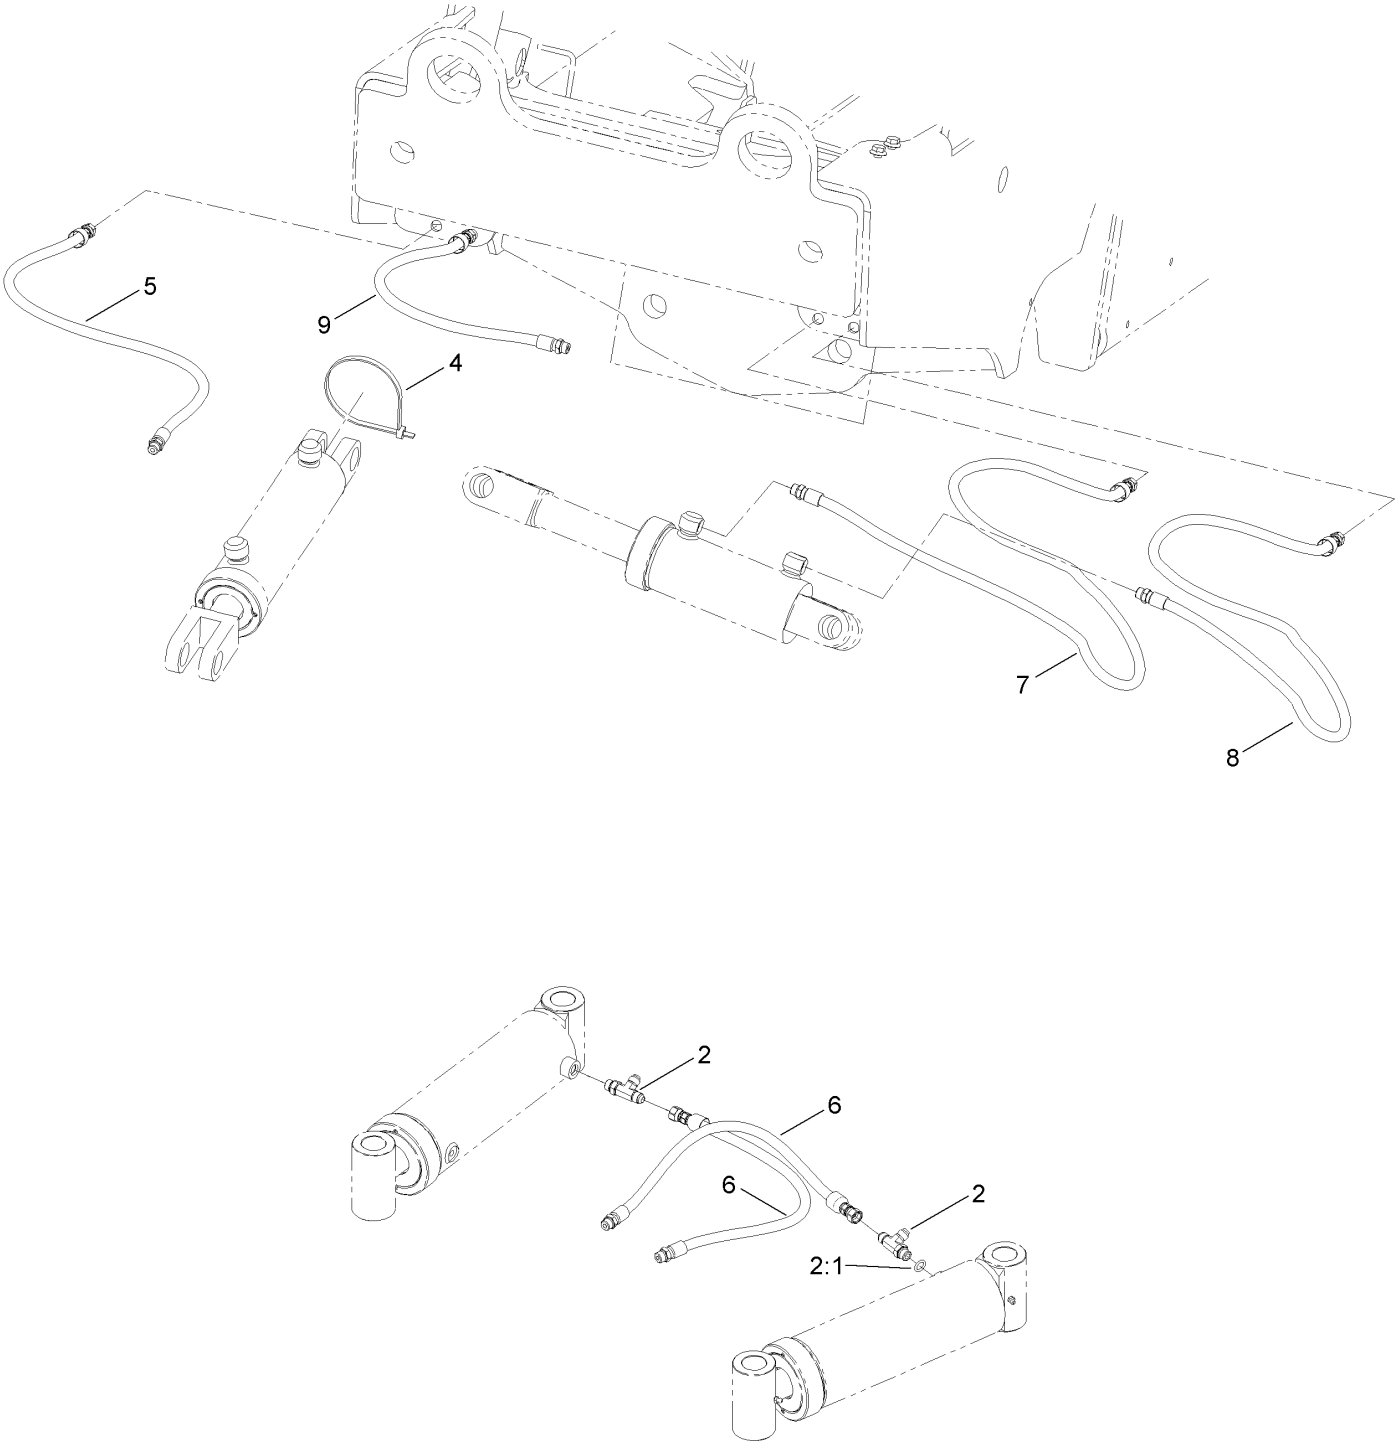


Backfill Blade Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	AU218-5243	2	Fitting-Tee
2:1	237-42	1	O-Ring
4	3334-945	1	Tie-Cable
5	127-1815	1	HYD Hose ASM, HP

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	127-1795	2	HYD Hose ASM, HP
7	127-1818	1	HYD Hose ASM
8	127-1817	1	HYD Hose ASM, HP
9	131-0425	1	HYD Hose ASM, HP

 
ROPS Assembly

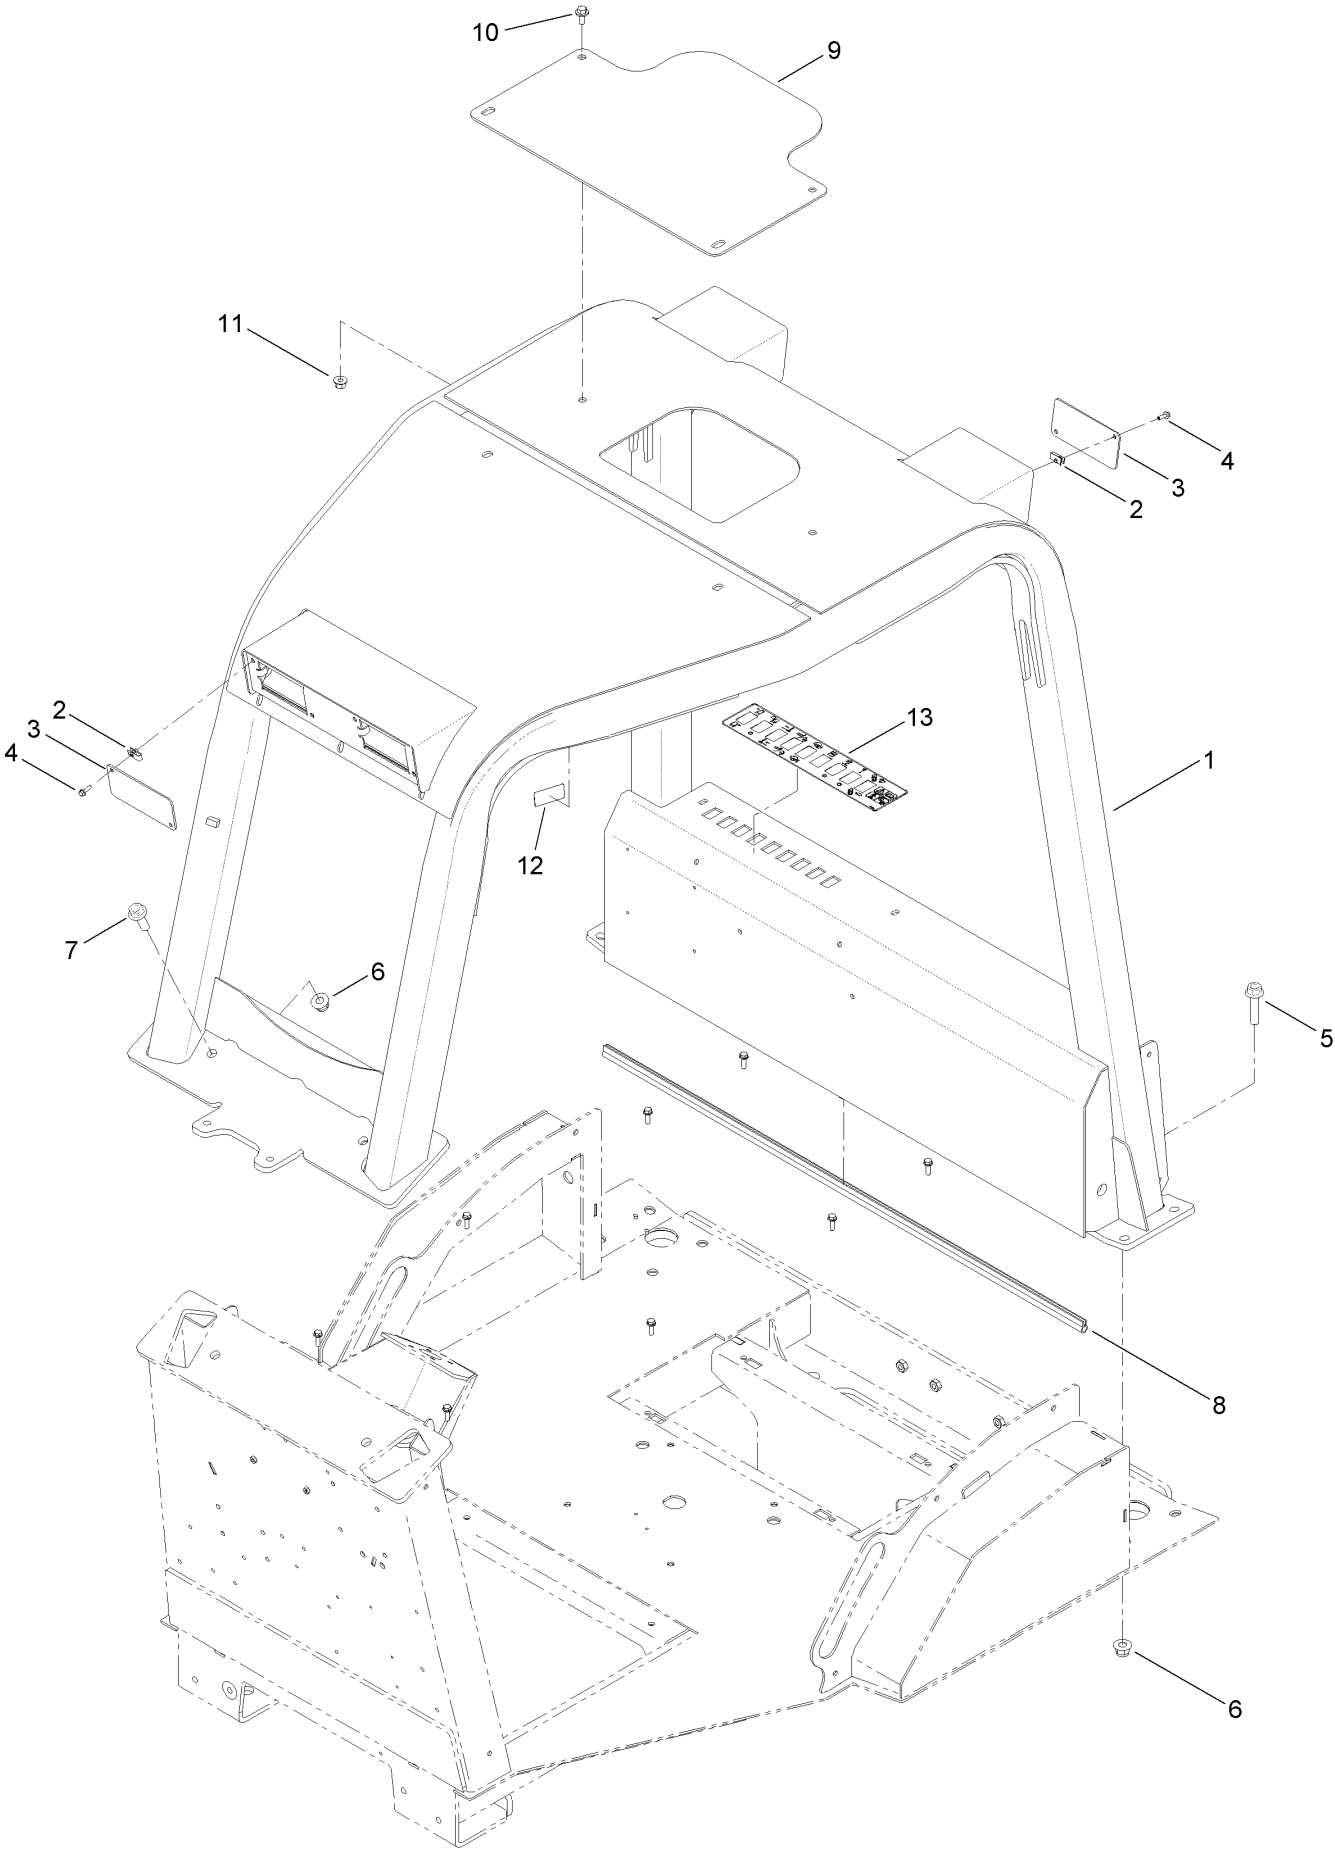

ROPS Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU116756-03	1	Main ROPS ASM	8	AU118604	1	Seal-Hood
2	AU100861	8	Nut-U	9	AU119456-03	1	Cover-ROPS
3	AU105156-03	4	Plate-Cover	10	33106-025	4	Screw-HHF
4	33103-020	8	Screw-HHF	11	115-1115	4	Nut-Lock, HHF
5	AU100364	8	Screw-Flange	12	127-1841	1	Decal-ROPS
6	AU100529	10	Nut-HHF	13	125-8495	1	Decal-Switches, Rear
7	AU100832	2	Screw-Flange				Control

 
Fuel Tank Assembly

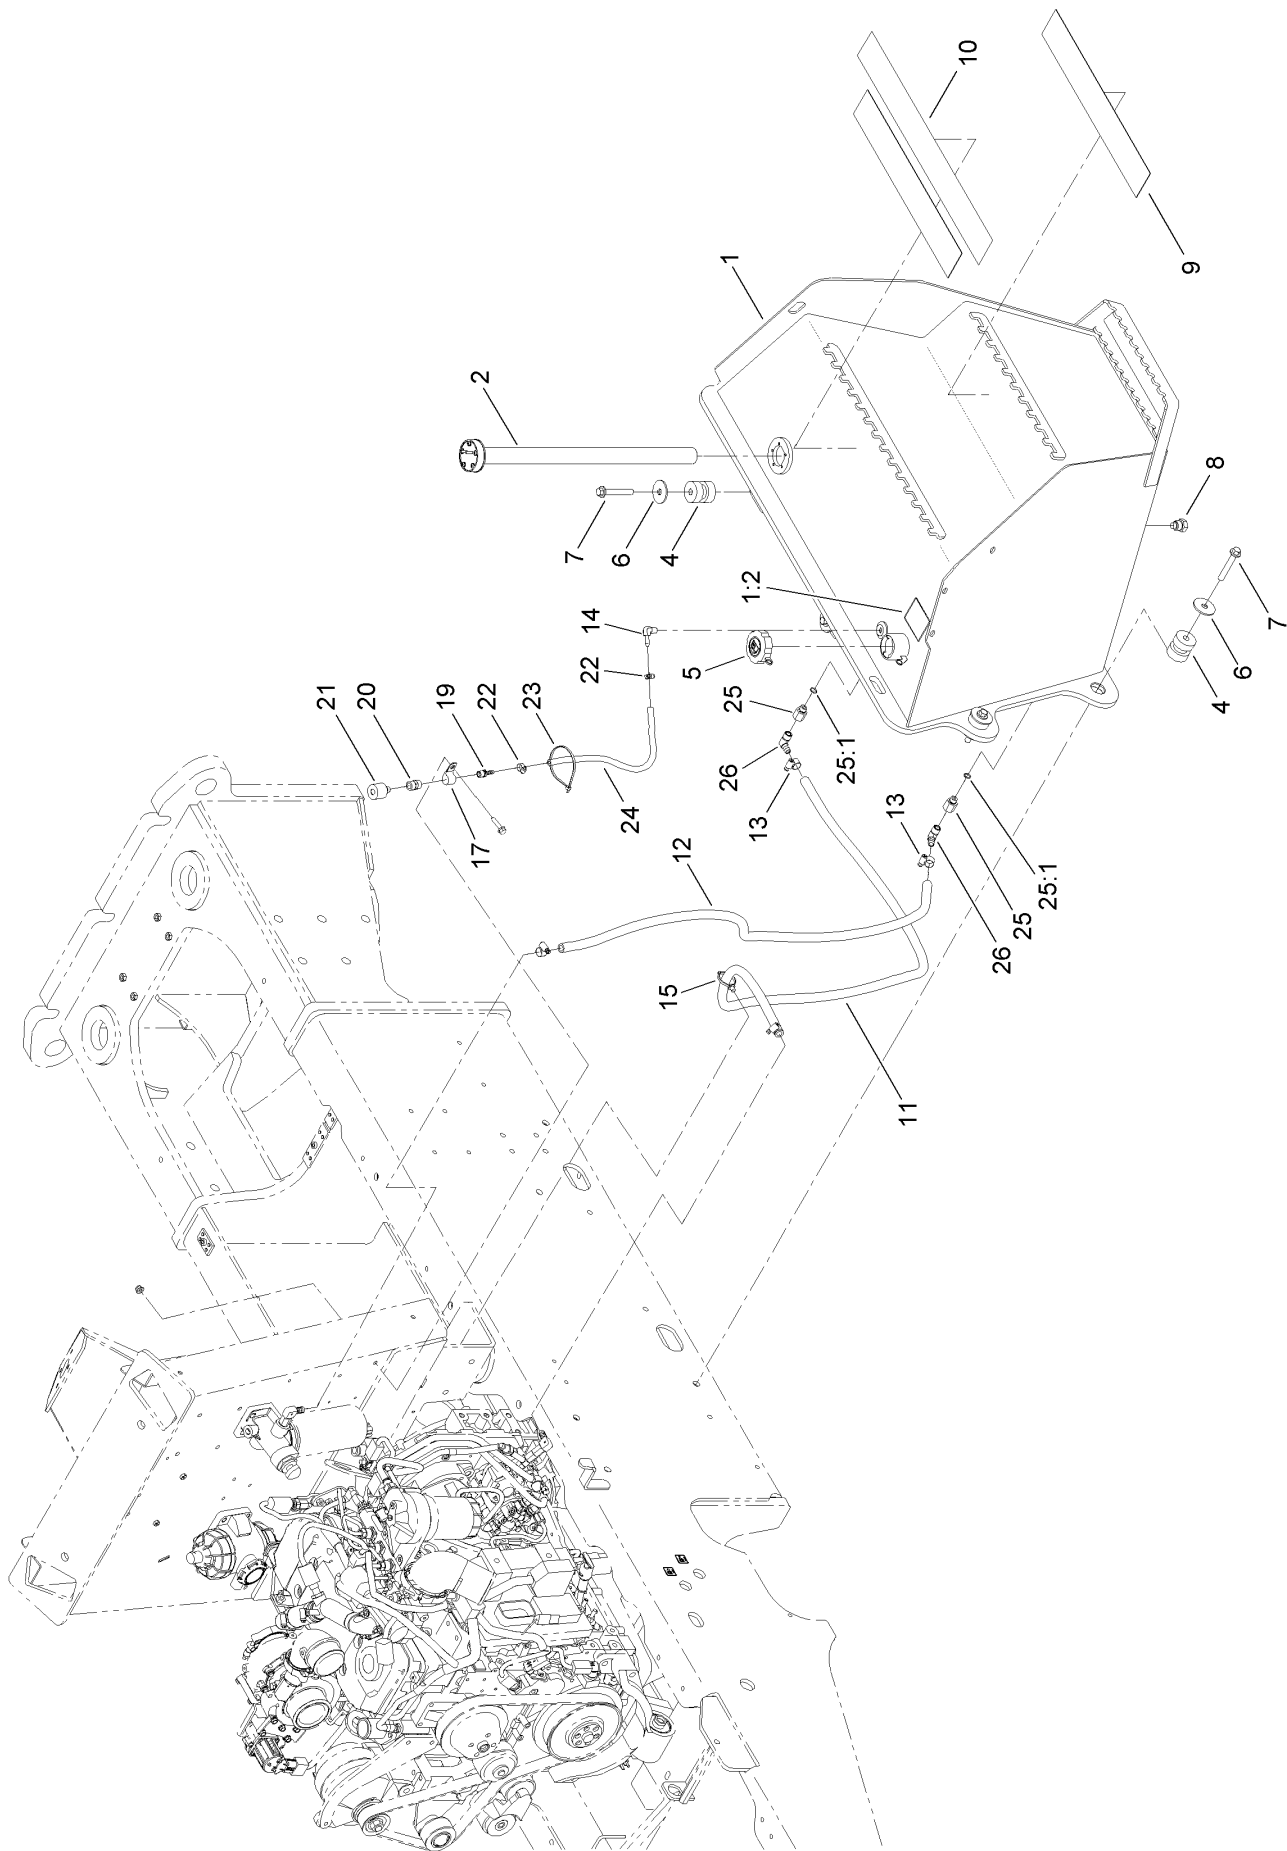

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1821	1	Fuel Tank ASM	13	2412-119	4	Clamp-Hose, Worm Drive
1:2	125-6135	1	Decal-Diesel, Ultra-Low	14	AU217-294	1	Stem-90 (Barb Hose)
2	AU21000893	1	Sender-Fuel	15	32180-030	1	Clip-Tie
4	AU8NG28121	5	Isolator-Mounting, Universal	17	2412-4	1	Clamp-R
5	127-1292	1	Cap-Diesel Fuel, Non-Vented	19	115-1447	1	Fitting-Straight
6	AU496-81018	5	Washer-Flat	20	AU217-1101	1	Coupling-Pipe (NPTF)
7	33106-080	5	Screw-HHF	21	AU31543	1	Breather
8	AU119908	1	Plug-Hex, Magnetic	22	2412-108	2	Clamp-Worm
9	AU105912	2	Tape-Anti Skid, Lower Step	23	3290-379	1	Tie-Cable
10	AUH433994	1	Strip-Anti Skid	24	109-0296	1	Hose-Fuel
11	127-1745	1	Hose-Fuel	25	106-1381	2	Fitting-Straight
12	127-1746	1	Hose-Fuel	25:1	237-42	1	O-Ring
				26	116-1127	2	Elbow-90 DEG



 
Main Valve and Manifold Assembly

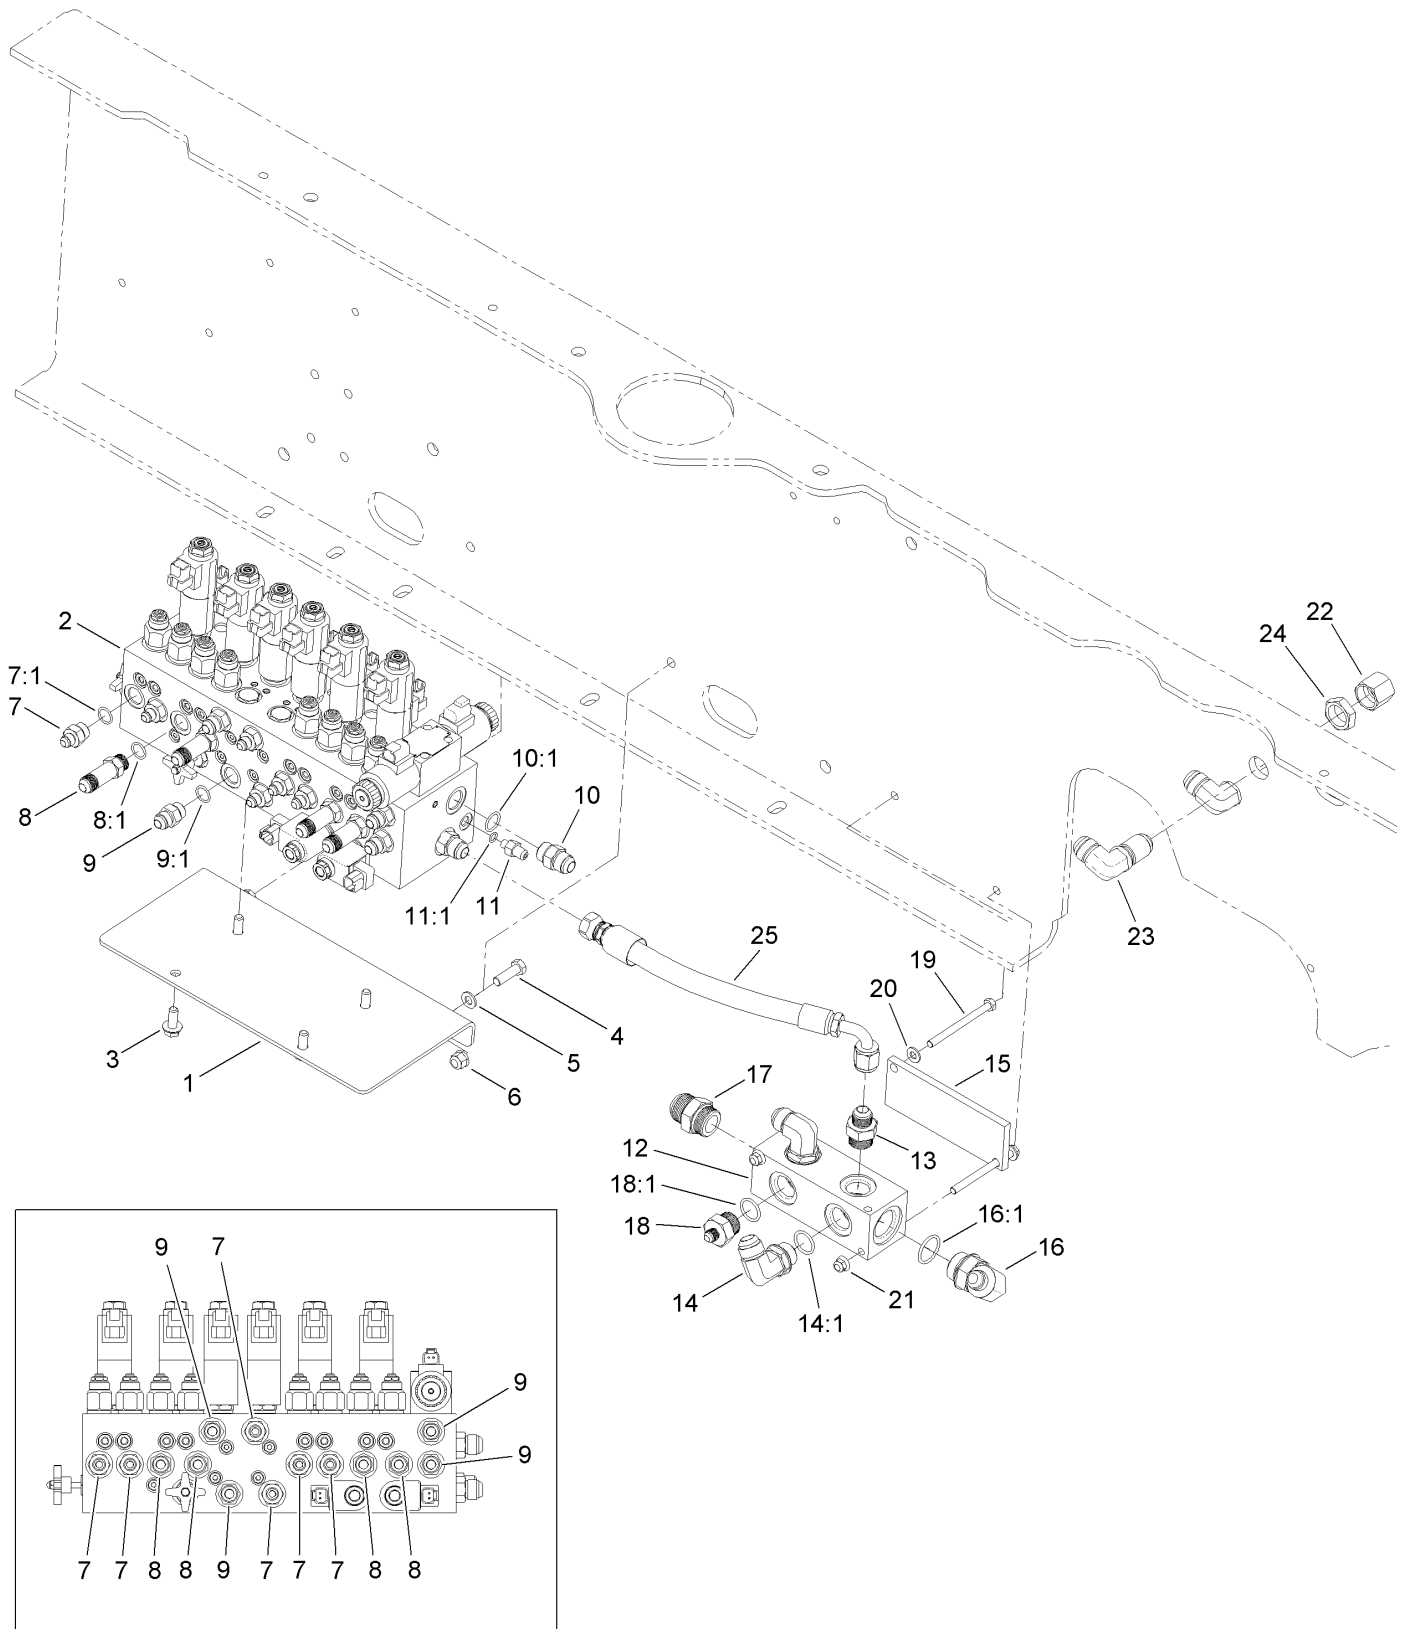

Main Valve and Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU121481-03	1	Plate-Mount, Filter	13	AU218-5063	1	Fitting-Straight
2	131-0421	1	Main Valve ASM	14	353-369	2	Fitting-Elbow, 90 DEG
3	33105-025	4	Screw-HHF	14:1	237-81	1	O-Ring
4	33115-035	2	Screw-HH	15	AU120043-03	1	Spacer
5	33095-00	2	Washer-Flat	16	AU218-5130	1	Elbow-90, Adj
6	103-9511	2	Nut-Lock, NI	16:1	237-146	1	O-Ring
7	AU218-5058	6	Connector	17	AU218-5069	1	Fitting-Straight
7:1	237-79	1	O-Ring	18	AU218-5044	1	Adapter-Straight
8	130-7462	4	Fitting-Straight, Long	18:1	237-81	1	O-Ring
8:1	237-79	1	O-Ring	19	33114-100	2	Screw-HH
9	353-388	4	Fitting-Straight	20	33094-00	2	Washer-Plain
9:1	237-79	1	O-Ring	21	104-3082	2	Nut-Lock, HHF
10	353-385	2	Fitting-Straight	22	AU218-335	2	Cap
10:1	237-80	1	O-Ring	23	AU218-696	2	Fitting-Elbow, 90
11	AU218-5352	1	Adapter-Straight	24	AU218-1256	2	Nut-Lock, Bulkhead
11:1	237-78	1	O-Ring	25	125-6856	1	HYD Hose ASM, HP
12	AU106457	1	Manifold-Return, Hydraulic				

   
Fan Drive Valve and Flow Divider Assembly

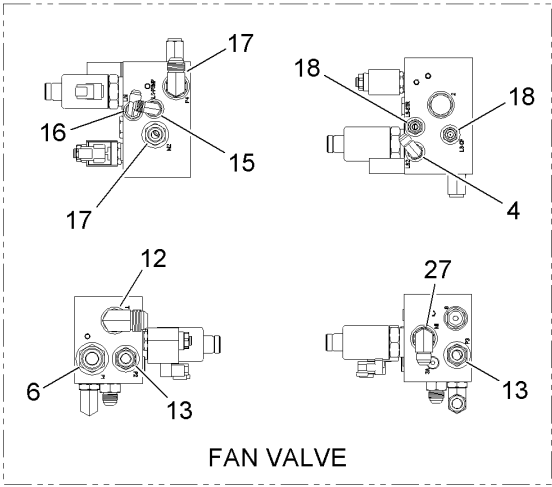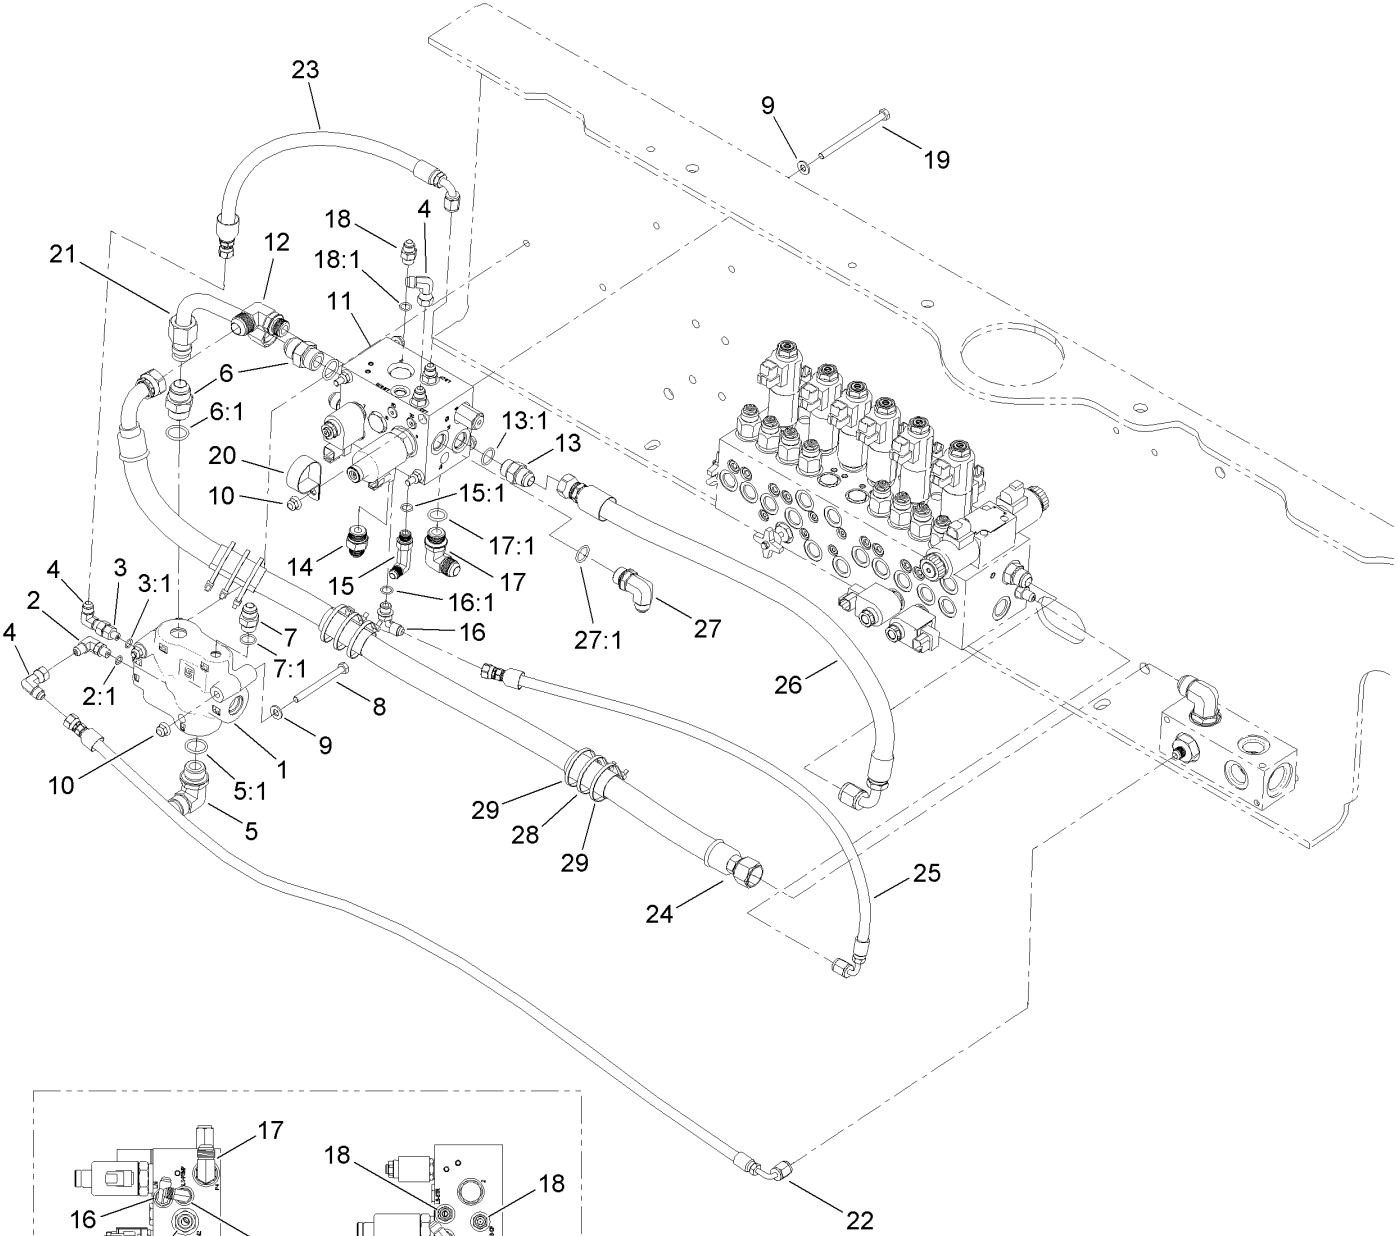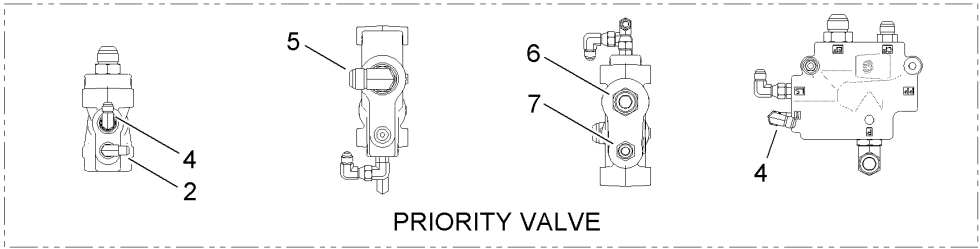

Fan Drive Valve and Flow Divider Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115763	1	Valve-Flow Divider, Priority	15	92-3505	1	Fitting-Adaptor, 90 DEG
2	AU218-5278	1	Elbow-90, Adj	15:1	237-42	1	O-Ring
2:1	237-78	1	O-Ring	16	353-374	1	Fitting-Elbow, 90 DEG
3	AU218-5352	1	Adapter-Straight	16:1	237-42	1	O-Ring
3:1	237-78	1	O-Ring	17	353-370	1	Fitting-Elbow, 90 DEG
4	AU218-980	3	Elbow-Swivel, 90 DEG	17:1	237-80	1	O-Ring
5	353-369	1	Fitting-Elbow, 90 DEG	18	353-384	3	Fitting-Straight
5:1	237-81	1	O-Ring	18:1	237-42	1	O-Ring
6	AU218-5064	2	Fitting-Straight	19	33114-120	4	Screw-HH
6:1	237-81	1	O-Ring	20	2412-147	1	Clamp-R
7	353-388	1	Fitting-Straight	21	AU122191	1	Tube
7:1	237-79	1	O-Ring	22	125-6801	1	HYD Hose ASM
8	33114-090	2	Screw-HH	23	125-6805	1	HYD Hose ASM
9	33094-00	6	Washer-Plain	24	125-6857	1	HYD Return Hose ASM
10	104-3082	6	Nut-Lock, HHF	25	125-6789	1	HYD Hose ASM
11	AU115768	1	Fan Drive Valve ASM	26	125-6870	1	HYD Hose ASM
12	95-0581	1	Fitting-Elbow, 90 DEG	27	353-426	1	Fitting-90 DEG
13	353-385	2	Fitting-Straight	27:1	237-80	1	O-Ring
13:1	237-80	1	O-Ring	28	AU112950	3	Protector-Hose
14	353-433	1	Fitting-Straight	29	3290-379	9	Tie-Cable

 
Hydraulic Tank Assembly

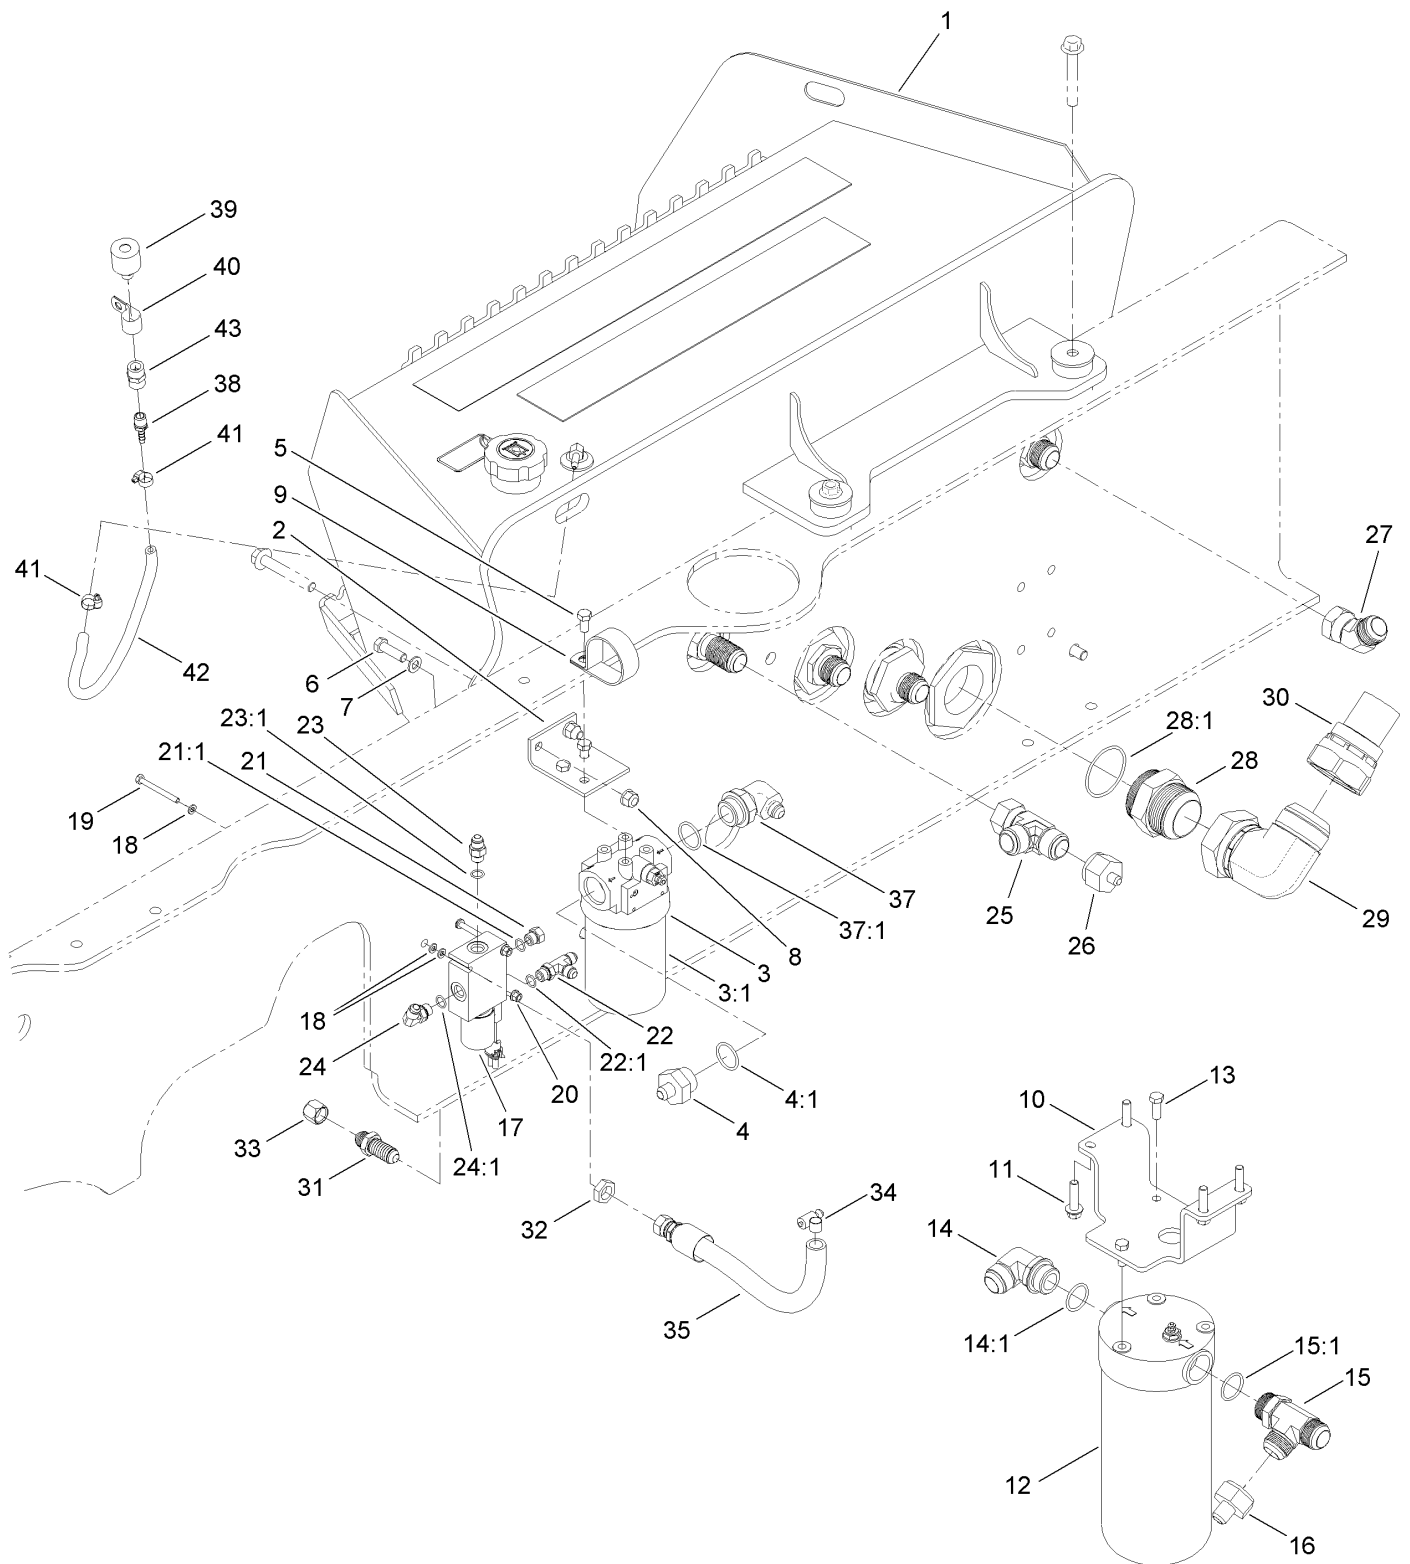

Hydraulic Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU118190	1	HYD Tank ASM	22	AU218-5243	1	Fitting-Tee
2	AU111774A1-03	1	Bracket-Mounting, Filter	22:1	237-42	1	O-Ring
3	AUD121629	1	Oil Filter ASM	23	353-384	1	Fitting-Straight
3:1	110-4146	1	Filter-HYD	23:1	237-42	1	O-Ring
4	AU218-5071	1	Connector ASM	24	353-374	1	Fitting-Elbow, 90 DEG
4:1	237-146	1	O-Ring	24:1	237-42	1	O-Ring
5	323-4	3	Screw-HH	25	AU218-5223	1	Tee-Swivel
6	33115-035	2	Screw-HH	26	AU218-724	1	Reducer
7	33095-00	2	Washer-Flat	27	AU218-5176	1	Fitting-Elbow, 45
8	103-9511	2	Nut-Lock, NI	28	AU91-202702-32-3	1	Adapter
9	110-6245	1	Clamp-R	28:1	237-189	1	O-Ring(3-932)
10	127-1862-03	1	Bracket-Filter	29	AU91-2071-32-32S	1	Adapter-90 DEG
11	114-4681	4	Screw-HHF	30	130-7530	1	Fitting-Straight
12	AUH674791	1	Filter-Return, HYD	31	AU218-674	1	Union
13	323-6	3	Screw-HH	32	AU218-1255	1	Nut-Lock
14	AU218-5110	1	Elbow-90 DEG	33	AU218-755	1	Cap
14:1	237-146	1	O-Ring	34	AU214-1408	1	Clamp-Hose
15	130-7531	1	Fitting-Tee	35	125-6882	1	HYD Hose ASM, LP
15:1	237-146	1	O-Ring	37	131-0407	1	Fitting-Elbow, 90
16	AU91-2215-16-8S	1	Adapter-Reducer	37:1	237-146	1	O-Ring
17	AU187505C91	1	Solenoid Valve ASM	38	115-1447	1	Fitting-Straight
18	33093-00	6	Washer-Flat	39	AU31543	1	Breather
19	33113-060	2	Screw-HH	40	2412-4	1	Clamp-R
20	81-0130	2	Nut-Flange, NI	41	2412-108	2	Clamp-Worm
21	353-508	1	Plug-HH	42	109-0296	1	Hose-Fuel
21:1	237-42	1	O-Ring	43	AU217-1101	1	Coupling-Pipe (NPTF)

 Hydraulic Tank Assembly No. AU118190

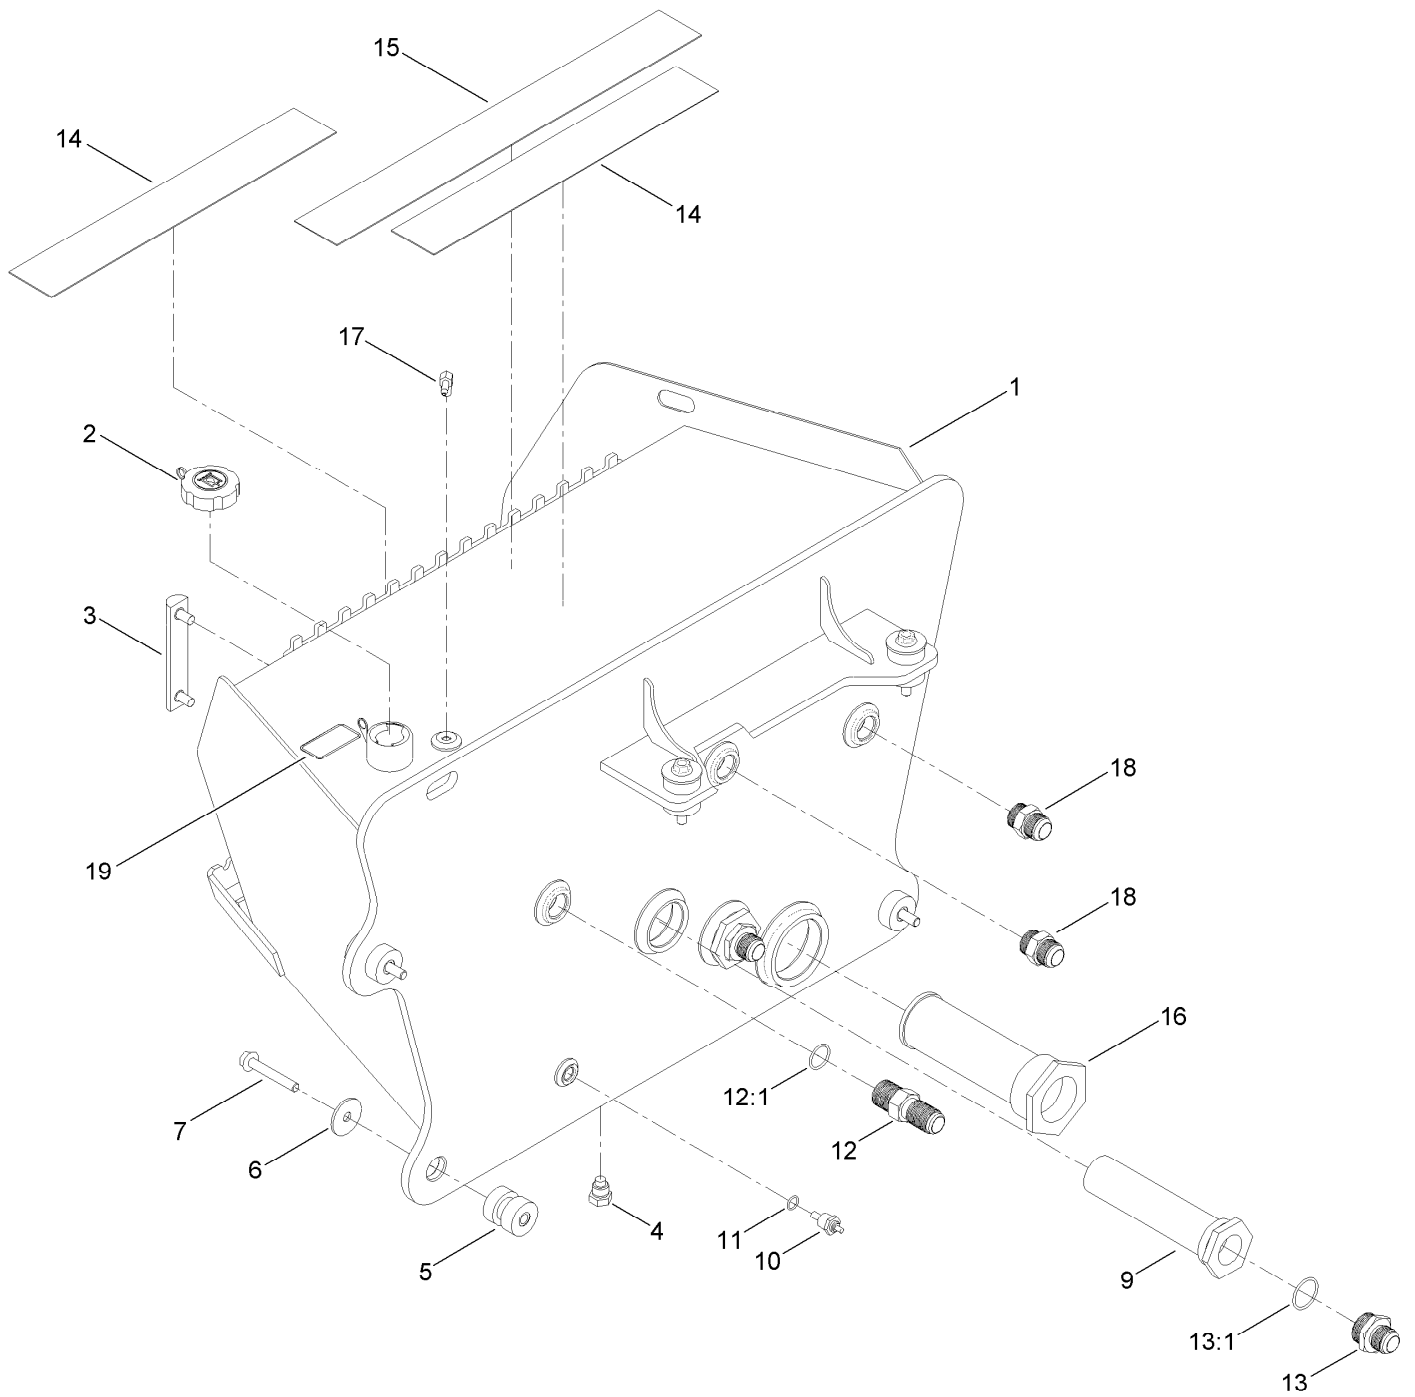


Hydraulic Tank Assembly No. AU118190 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1837-01	1	Tank-Hydraulic
2	AU105820	1	Cap-HYD Fluid (W/ Lock)
3	AUL116247	1	Gauge-Sight
4	AU119908	1	Plug-Hex, Magnetic
5	AU8NG28121	5	Isolator-Mounting, Universal
6	AU496-81018	5	Washer-Flat
7	AU100353	5	Screw-HHF
9	AU118209	2	Strainer-Mounted, Tank
10	AU119493	1	Sensor-Sender, Oil/Water Temp
11	AU637-63153	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	AU91-202713-16-1	1	Adapter
12:1	237-146	1	O-Ring
13	AU218-5086	2	Adapter-Straight
13:1	237-101	1	O-Ring
14	AU105912	2	Tape-Anti Skid, Lower Step
15	AUH433994	1	Strip-Anti Skid
16	AU8FL10013	1	Strainer-Suction
17	AU217-294	1	Stem-90 (Barb Hose)
18	AU218-5069	2	Fitting-Straight
19	125-8483	1	Decal-HYD Fluid

 
Tandem Pump Plumbing Assembly

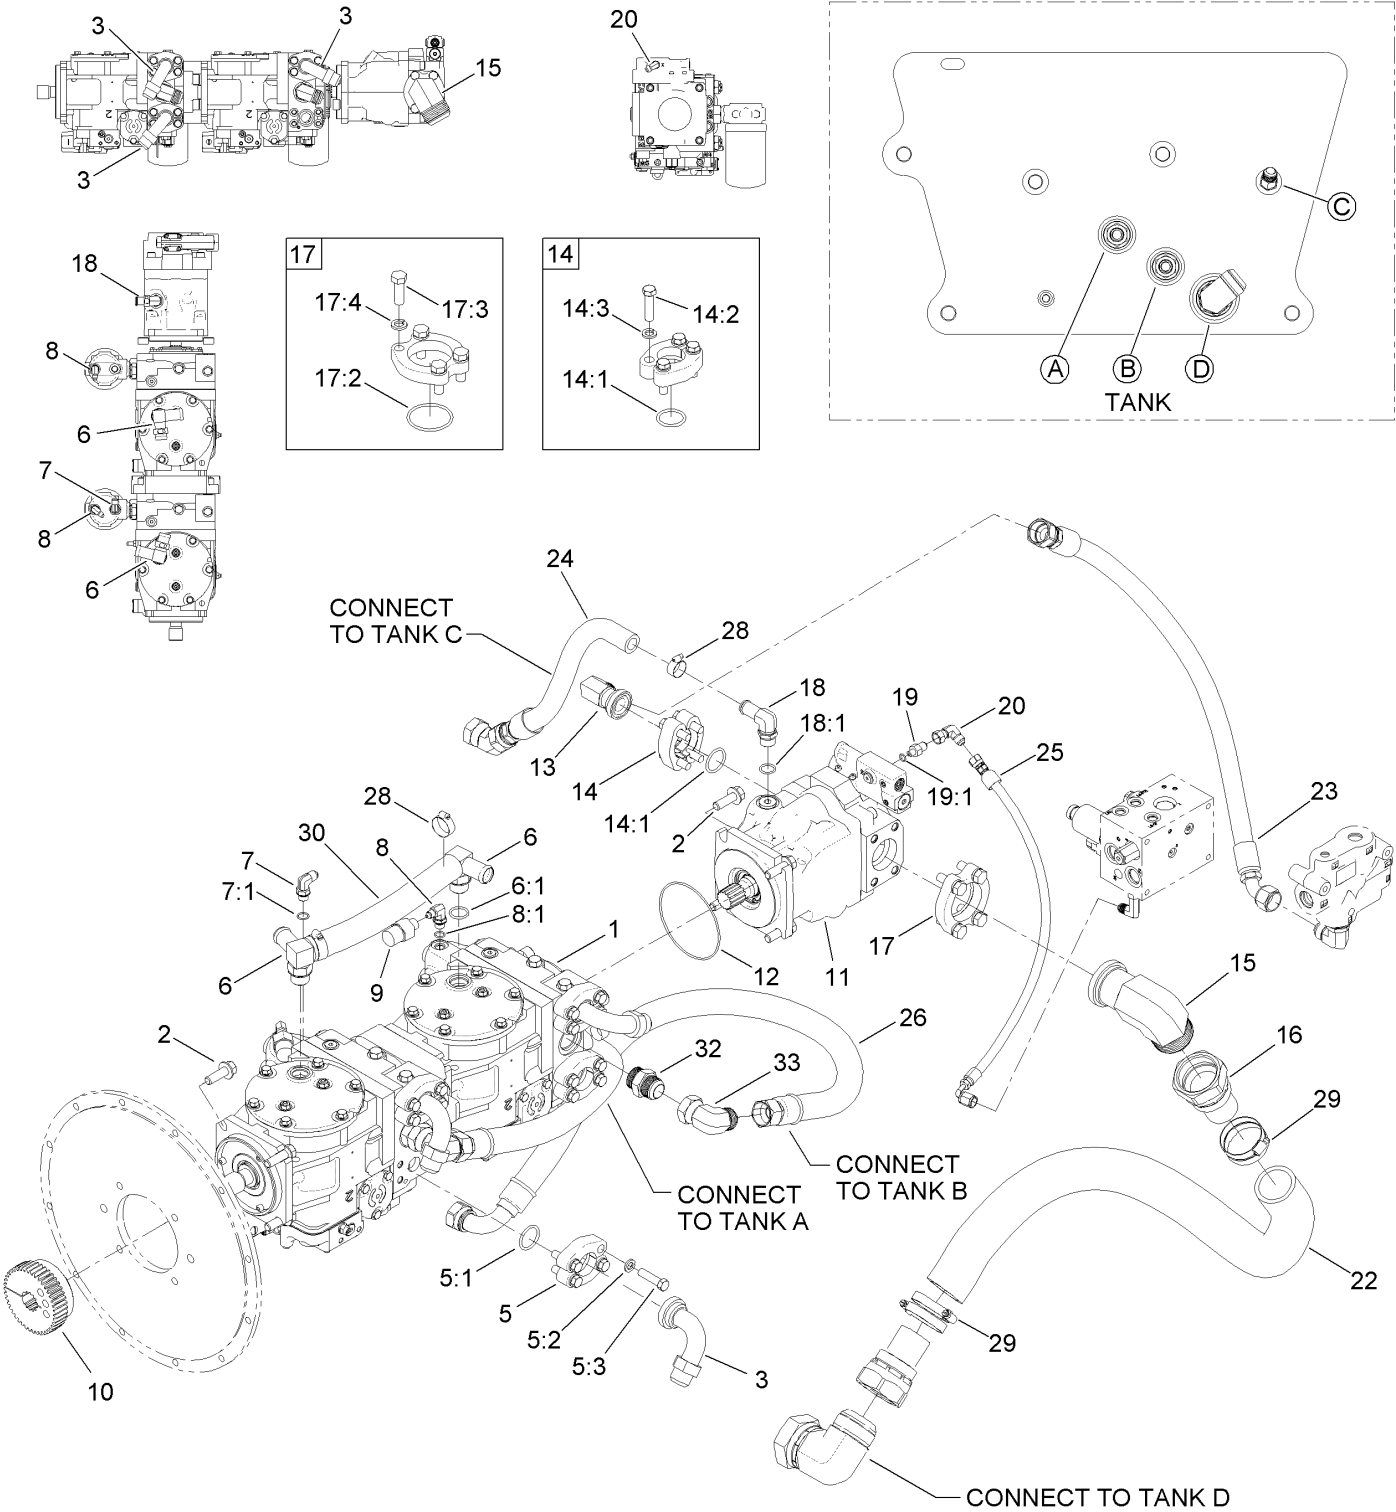

Tandem Pump Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115782	1	Tandem Pump ASM	15	AU91-500024-32S	1	Adapter-Flange, Split
2	100-6116	8	Screw-HHF	16	130-7530	1	Fitting-Straight
3	AUH439280	3	Fitting-Elbow	17	125-4538	1	Flange Kit
5	AU114285A1	4	HYD Flange Kit	17:2	125-6148	1	O-Ring
5:1	121-3904	1	O-Ring	17:3	325-6	4	Screw-HH
5:2	3253-6	4	Washer-Lock	17:4	3253-7	4	Washer-Lock
5:3	AU113-372	4	Screw-HH	18	87-8170	1	Fitting-90
6	AU375462A1	2	Connector	18:1	237-80	1	O-Ring
6:1	237-81	1	O-Ring	19	AU218-5352	1	Adapter-Straight
7	353-374	1	Fitting-Elbow, 90 DEG	19:1	237-78	1	O-Ring
7:1	237-42	1	O-Ring	20	AU218-980	1	Elbow-Swivel, 90 DEG
8	340-134	2	Fitting-Elbow, 90	22	AU124968	1	Hose-Fuel, Tank Fill
8:1	237-42	1	O-Ring	23	125-6802	1	HYD Hose ASM, HP
9	AU443897A1	2	Switch-Pressure	24	125-6812	1	HYD Hose ASM, LP
10	AU358988A1	1	Hub-Coupler	25	125-6773	1	HYD Hose ASM
11	AU115760	1	HYD Pump ASM	26	125-6815	2	HYD Return Hose ASM
12	AU70-9004104-158	1	Seal-O Ring	28	2412-34	3	Clamp-Hose
13	AU91-500024-16S	1	Adapter-Flange, Split	29	2412-42	4	Clamp-Hose
14	AU91-FF593-16	1	Flange Kit	30	125-6853	1	Hose
14:1	121-3904	1	O-Ring	32	AU218-5069	2	Fitting-Straight
14:2	AU426-728	4	Bolt	33	AU218-5234	2	Fitting-Elbow, 90
14:3	3253-6	4	Washer-Lock				

 
Tandem Pump and Main Valve Hydraulic Plumbing Assembly

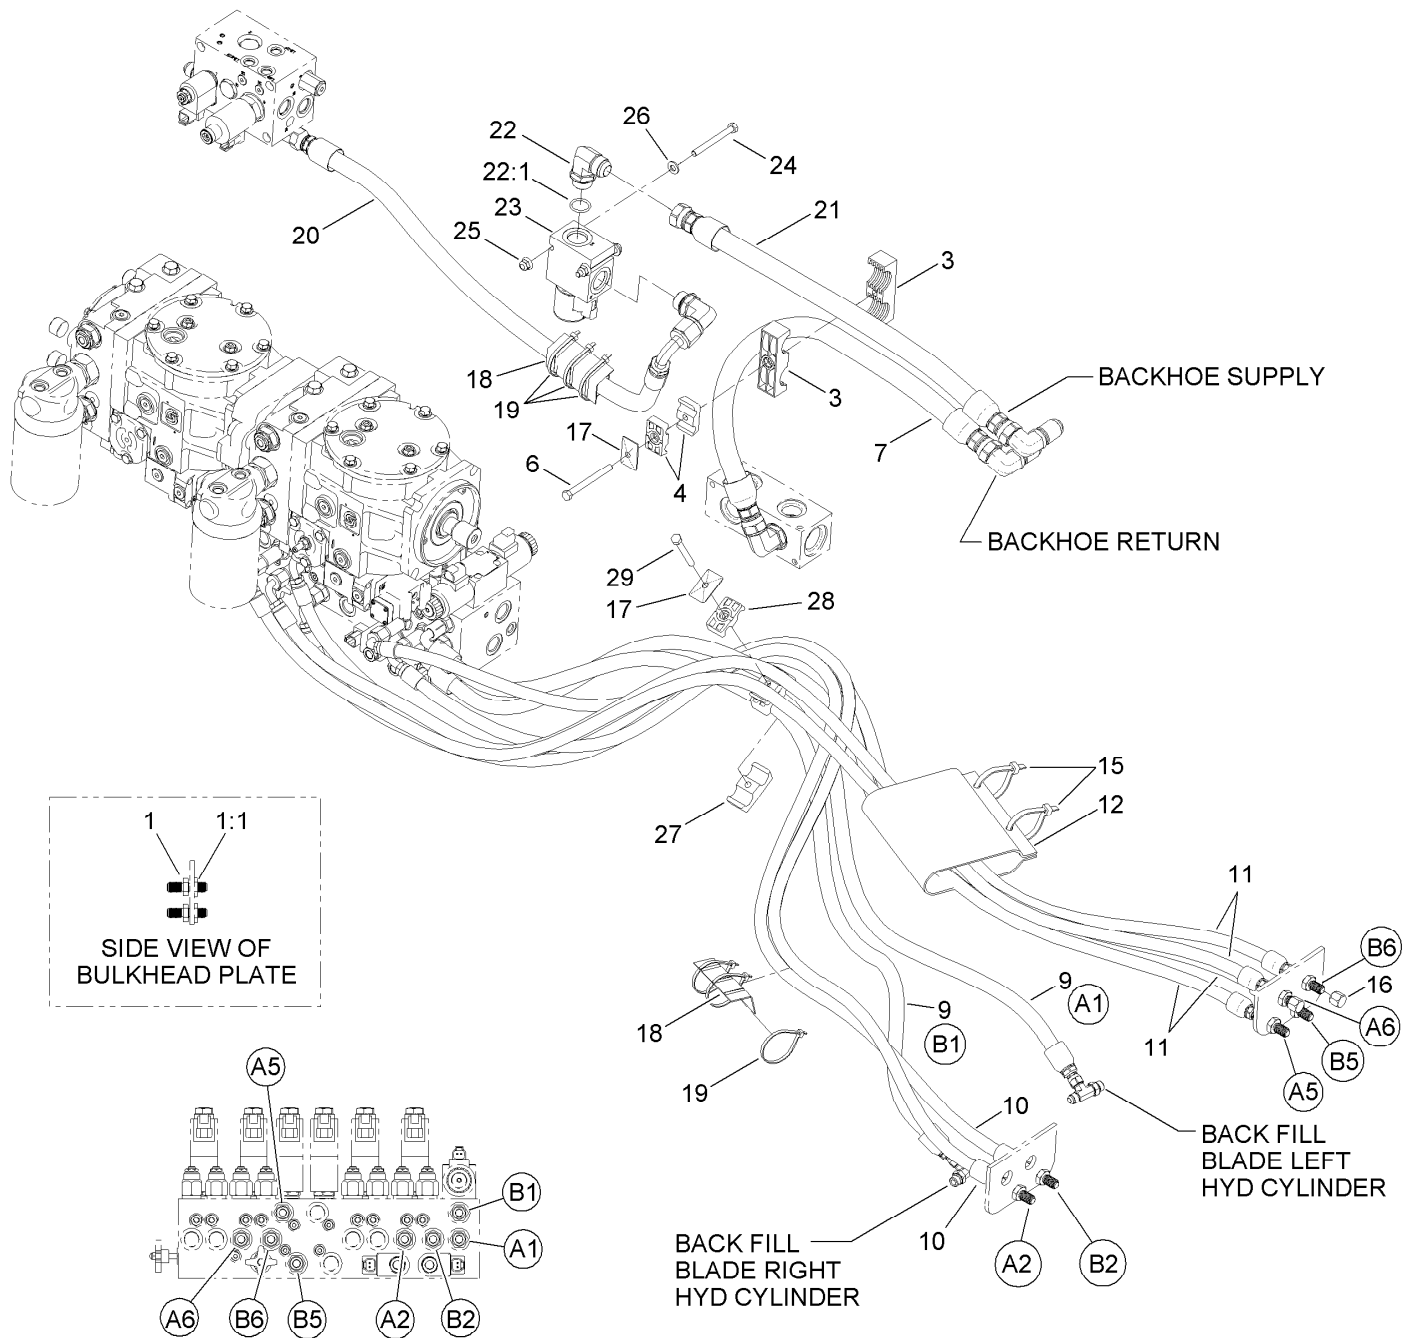

Tandem Pump and Main Valve Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU218-673	6	Union-Bulkhead	18	AU112950	2	Protector-Hose
1:1	AU218-1254	1	Nut-Lock, Bulkhead	19	3290-379	6	Tie-Cable
3	130-7450	1	Clamp-Twin	20	131-0435	1	HYD Hose ASM
4	56-7976	2	Clamp-Tube	21	131-0436	1	HYD Hose ASM
6	322-22	1	Screw-HH	22	353-369	2	Fitting-Elbow, 90 DEG
7	125-6855	1	HYD Hose ASM	22:1	237-81	1	O-Ring
9	125-6877	2	HYD Hose ASM	23	131-0433	1	Valve-Blocking
10	125-6878	2	HYD Hose ASM	24	33114-080	2	Screw-HH
11	125-6880	4	HYD Hose ASM	25	104-3082	2	Nut-Lock, HHF
12	AU107409	1	Boot-Hose	26	33094-00	2	Washer-Plain
15	3334-945	2	Tie-Cable	27	94-8105	2	Clamp-Tube
16	01-201-4520	2	Cap	28	56-7971	2	Clamp-Tube
17	69-9760	2	Coverplate	29	322-13	1	Screw-HH






 
Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2

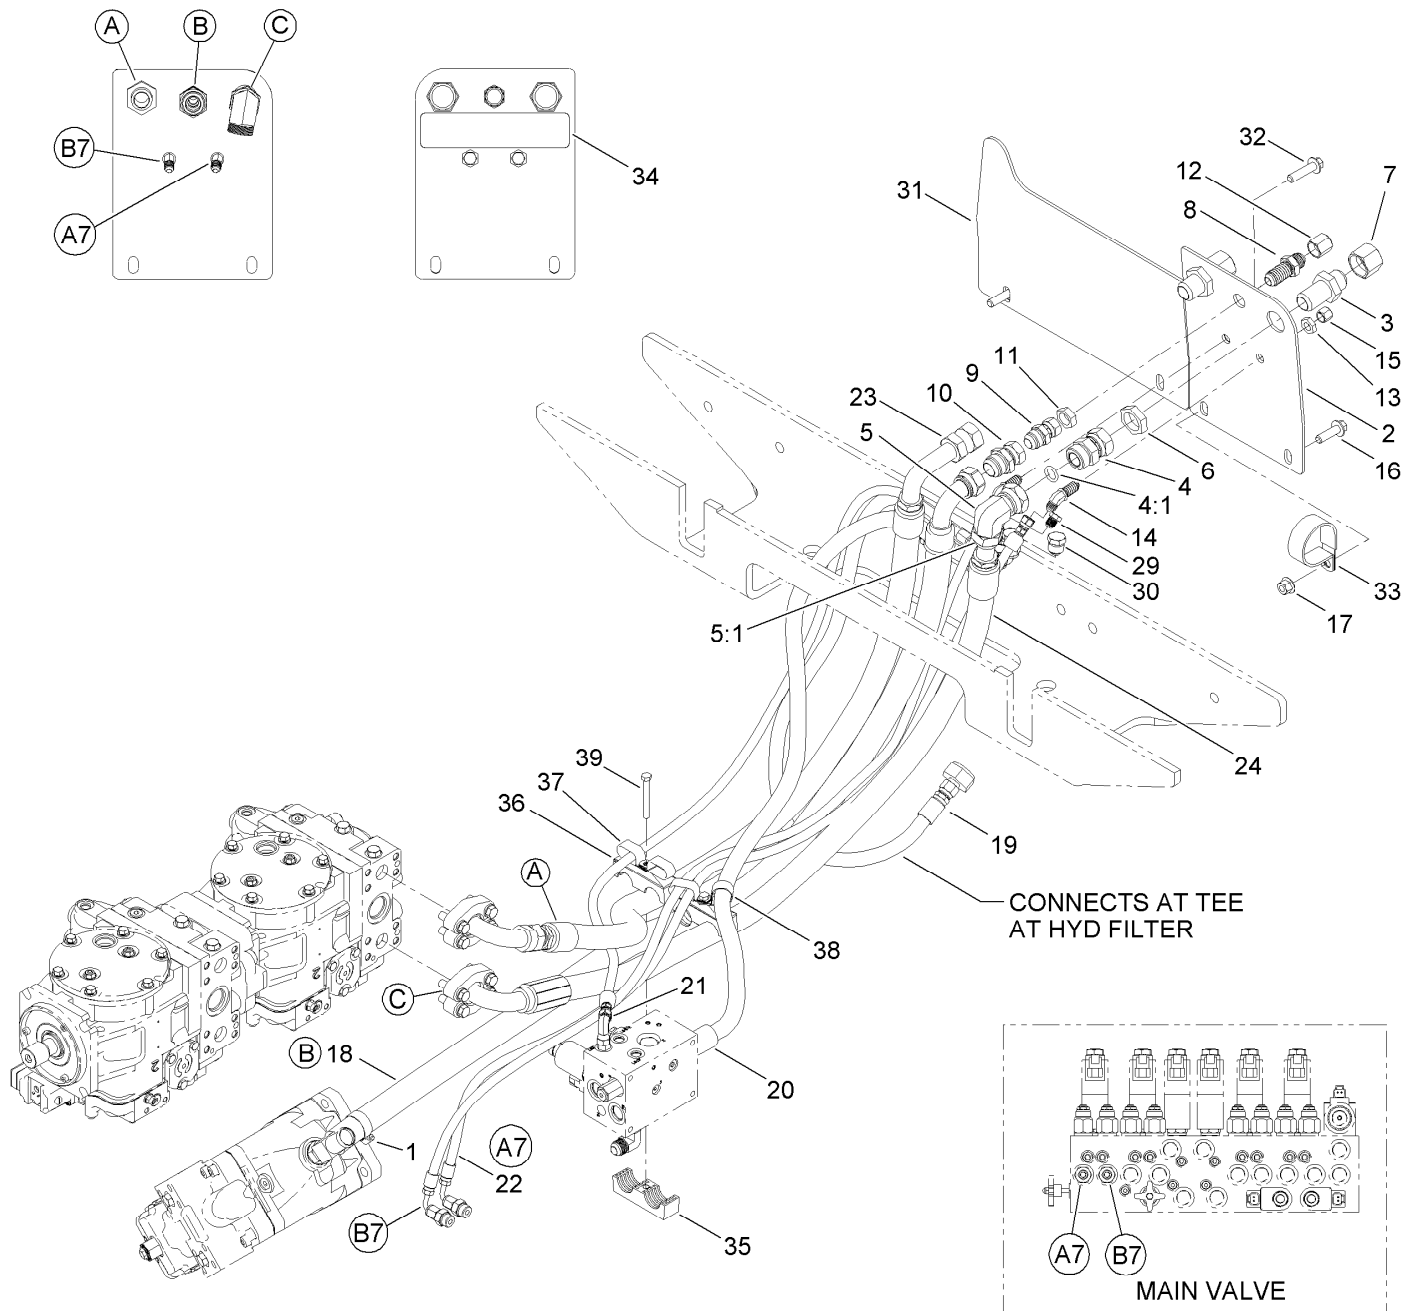

Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	2412-34	1	Clamp-Hose	18	125-6851	1	HYD Return Hose ASM
2	AU118263-03	1	Plate-Mounting, HYD Fittings	19	125-6866	1	HYD Hose ASM, HP
3	AU218-678	2	Union-Bulkhead	20	125-6867	1	HYD Hose ASM, HP
4	130-7535	1	Fitting-Straight	21	125-6879	1	HYD Hose ASM, HP
4:1	340-65	1	O-Ring	22	125-6881	2	HYD Hose ASM, HP
5	92-7645	1	Fitting-Swivel, 90 DEG	23	125-6811	1	HYD Hose ASM, HP
5:1	340-65	1	O-Ring	24	130-7506	1	HYD Hose ASM
6	AU218-1250	2	Nut-Lock, Bulkhead	29	AU218-774	1	Plug
7	AU218-758	2	Cap	30	AU218-776	2	Plug
8	AU218-675	1	Union-Bulkhead	31	AU124405-03	1	Plate-Cover
9	AU91-2215-10-12S	1	Adapter-Reducer	32	33106-050	1	Screw-HHF
10	AU91-2215-12-16S	1	Adapter-Reducer	33	2412-102	1	Clamp-R
11	AU218-1251	1	Nut-Lock, Bulkhead	34	127-1828	1	Decal-Attachment Connection
12	AU218-756	1	Fitting-Cap	35	130-7450	2	Clamp-Twin
13	AU218-1254	2	Nut-Lock, Bulkhead	36	127-8425	2	Plate-Reatainer, Clamp
14	130-7463	2	Fitting-Bulkhead, Elbow 45	37	120-1959	3	Clamp
15	01-201-4520	2	Cap	38	2412-126	1	R-Clamp
16	33106-040	3	Screw-HHF	39	322-13	2	Screw-HH
17	115-1115	1	Nut-Lock, HHF				

     
 
Steering Column and Hydraulic Plumbing Assembly

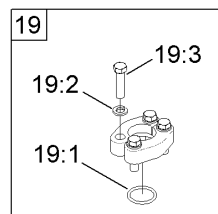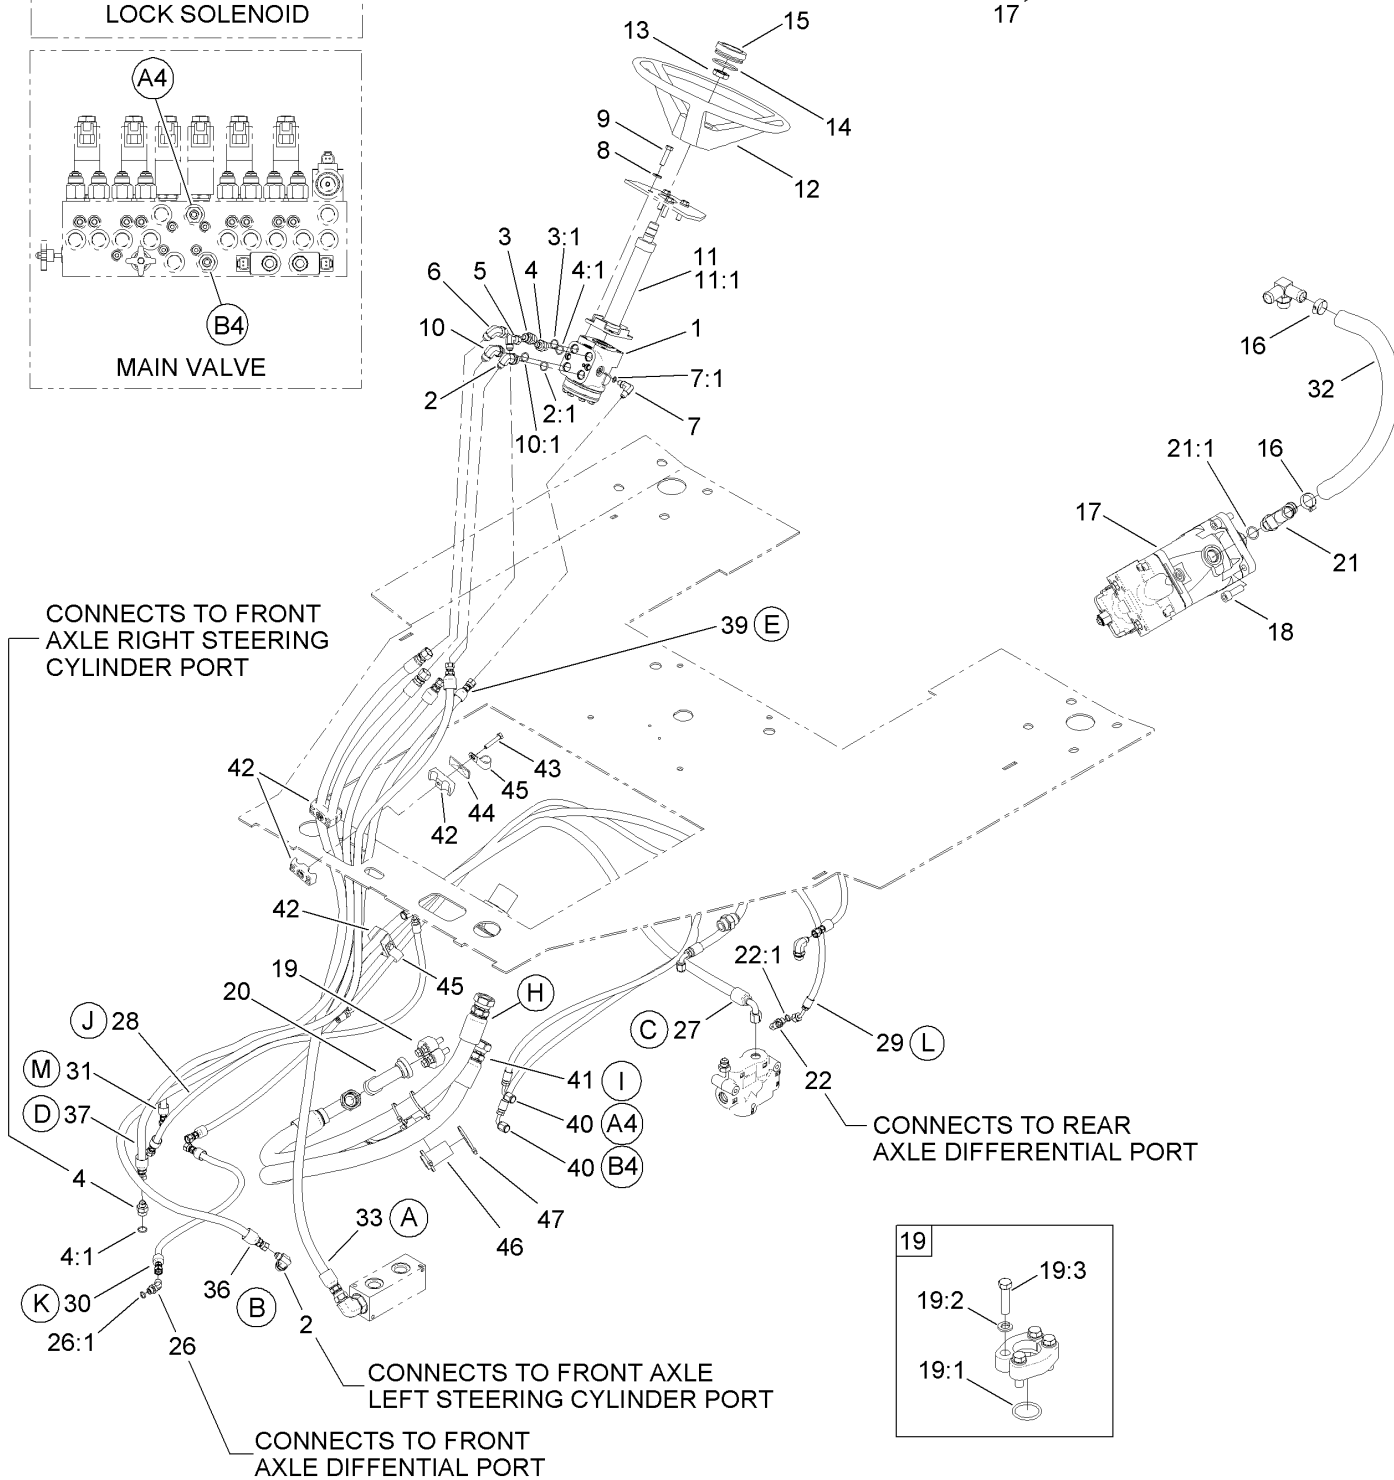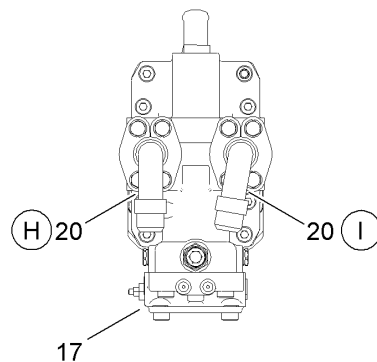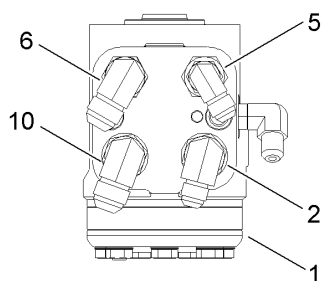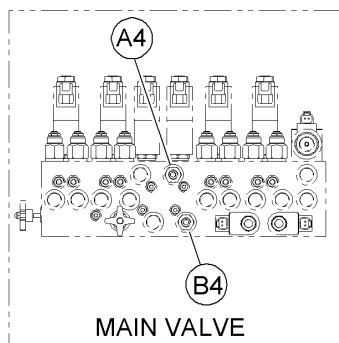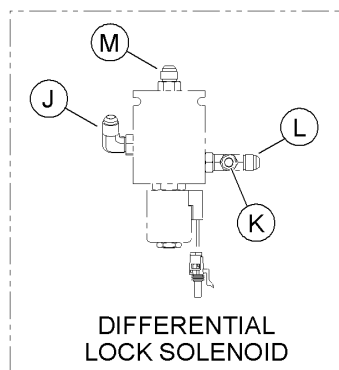

Steering Column and Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115762	1	Steering Valve ASM	19:3	AU113-372	4	Screw-HH
2	353-537	4	Fitting-Elbow, 90 DEG	20	AUH439280	2	Fitting-Elbow
2:1	237-79	1	O-Ring	21	131-0492	1	Fitting-Tee, Run
3	353-388	1	Fitting-Straight	21:1	237-81	1	O-Ring
3:1	237-79	1	O-Ring	22	353-374	1	Fitting-Elbow, 90 DEG
4	AU218-5058	2	Connector	22:1	237-42	1	O-Ring
4:1	237-79	1	O-Ring	26	353-212	1	Fitting-Elbow, 45 DEG
5	AU218-980	1	Elbow-Swivel, 90 DEG	26:1	237-42	1	O-Ring
6	01-201-2410	1	Fitting-Elbow, 90	27	125-6804	1	HYD Hose ASM, HP
7	AU218-5278	1	Elbow-90, Adj	28	125-6816	1	HYD Hose ASM, HP
7:1	237-78	1	O-Ring	29	125-6817	1	HYD Hose ASM, HP
8	100-4852	4	Washer-Hardened	30	125-6779	1	HYD Hose ASM
9	323-43	4	Screw-HH	31	125-6773	1	HYD Hose ASM
10	353-371	1	Fitting-Elbow, 90	32	131-0493	1	Hose
10:1	237-79	1	O-Ring	33	125-6858	1	HYD Hose ASM, HP
11	AUH672220	1	Steering Column ASM	36	125-6862	1	HYD Hose ASM, HP
11:1	120-2593	1	Boot-Rubber, Bearing	37	130-7499	1	HYD Hose ASM
12	AUA65544	1	Wheel-Steering	39	125-6864	1	HYD Hose ASM, HP
13	AUF19646	1	Nut	40	125-6879	2	HYD Hose ASM, HP
14	AU238-5227	1	O-Ring	41	125-6810	2	HYD Hose ASM, HP
15	AU114882A2	1	Cap-Steering Wheel	42	94-8105	6	Clamp-Tube
16	2412-34	2	Clamp-Hose	43	322-9	3	Screw-HH
17	AU385343A2	1	HYD Motor ASM	44	69-9761	3	Plate-Cover
18	AU864-14040	4	Screw-HSH	45	2412-4	2	Clamp-R
19	AU114285A1	2	HYD Flange Kit	46	AU112950	2	Protector-Hose
19:1	121-3904	1	O-Ring	47	3290-379	4	Tie-Cable
19:2	3253-6	4	Washer-Lock				

  
Hydraulic Plumbing Assembly

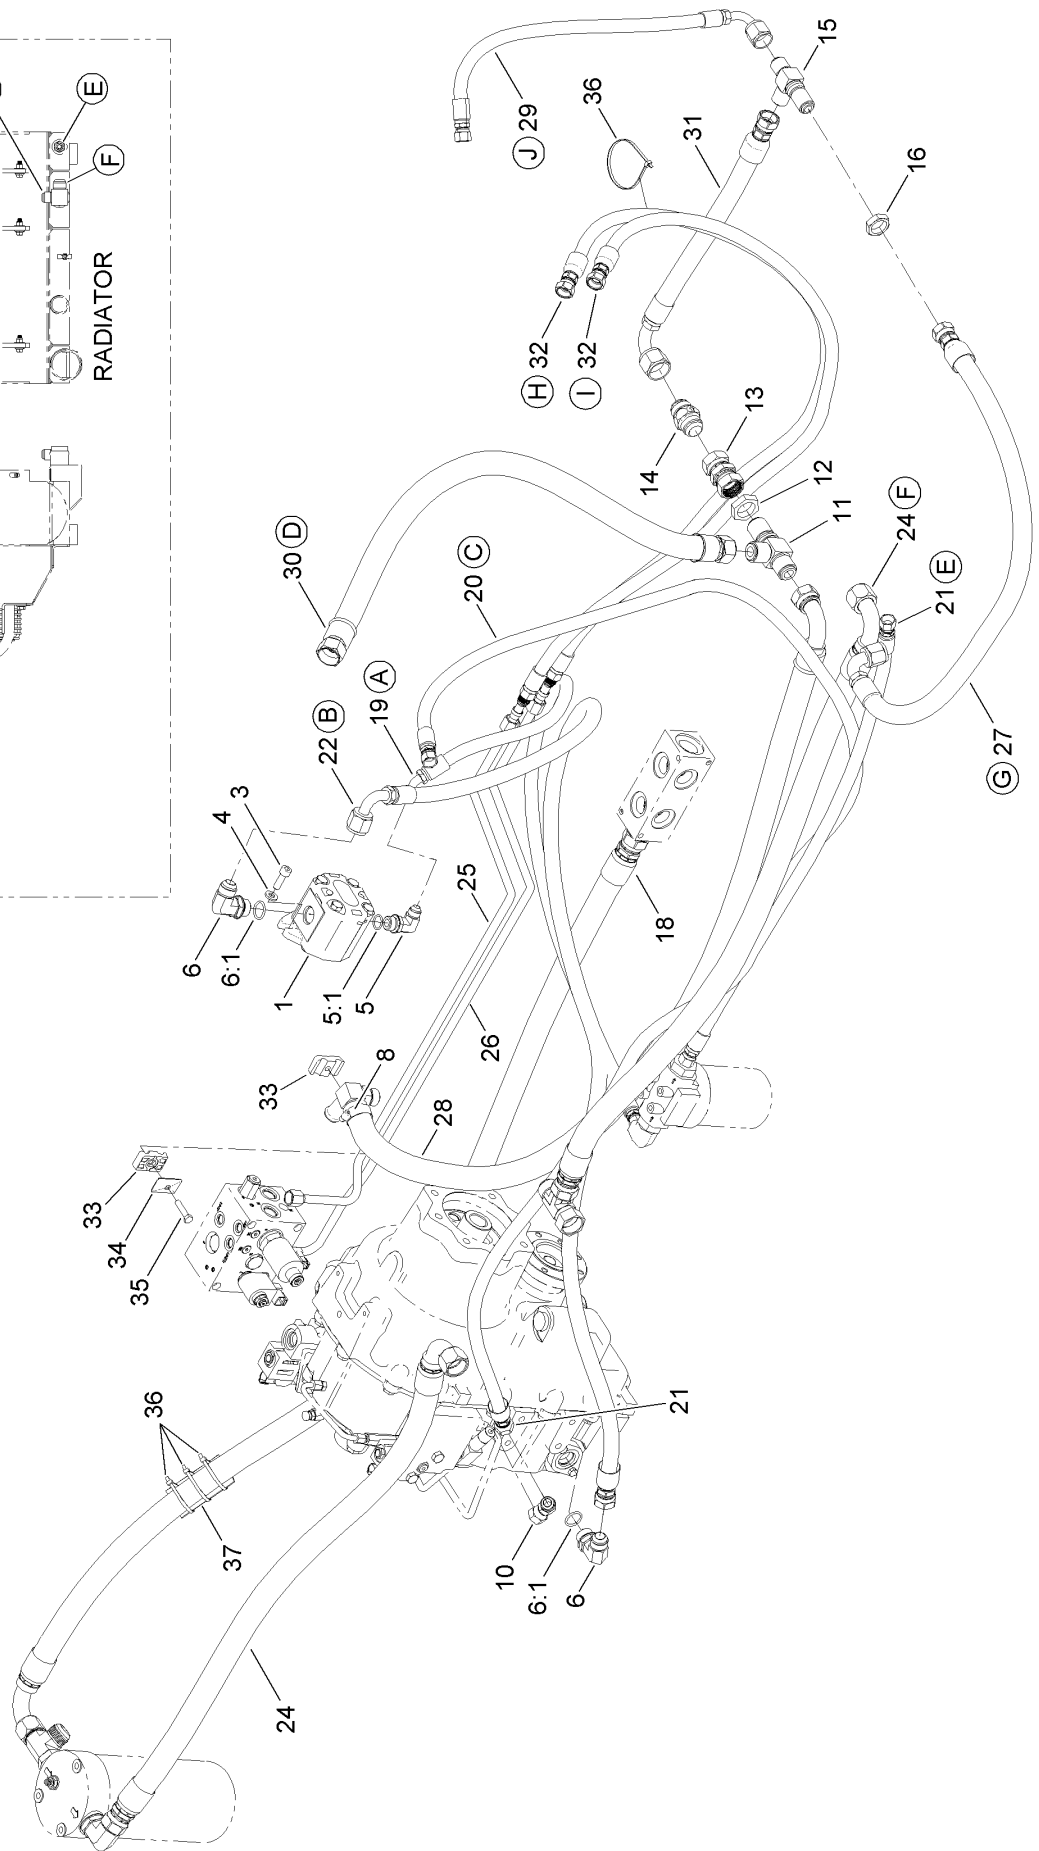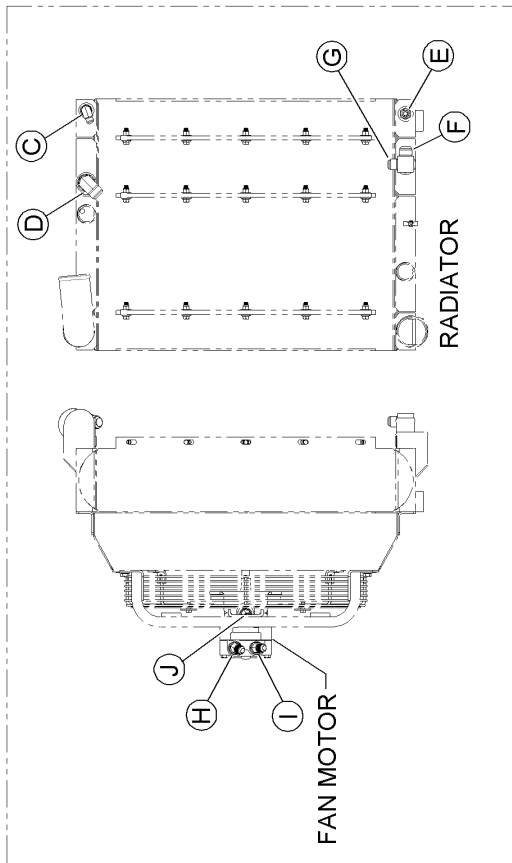

Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU121451	1	Gear Pump ASM	20	125-6807	1	HYD Hose ASM, HP
3	AU862-10030	2	Screw-HSH	21	125-6808	1	HYD Hose ASM, LP
4	100-4852	2	Washer-Hardened	22	125-6809	1	HYD Hose ASM, HP
5	353-426	1	Fitting-90 DEG	24	125-6872	2	HYD Hose ASM, LP
5:1	237-80	1	O-Ring	25	130-8401	1	HYD Tube ASM
6	353-369	2	Fitting-Elbow, 90 DEG	26	130-8402	1	HYD Tube ASM
6:1	237-81	1	O-Ring	27	125-6873	1	HYD Hose ASM, HP
8	2412-34	1	Clamp-Hose	28	125-6874	1	HYD Hose ASM, LP
10	127-0519	1	Fitting-Elbow, 45 DEG	29	125-6875	1	HYD Hose ASM, HP
11	127-1850	1	Fitting-Tee, Bulkhead	30	125-6876	1	HYD Hose ASM, LP
12	AU218-1250	1	Nut-Lock, Bulkhead	31	125-6819	1	HYD Hose ASM, HP
13	130-7534	1	Fitting-Straight	32	130-8405	2	HYD Hose ASM, HP
14	127-1852	1	Valve-Check	33	56-7976	2	Clamp-Tube
15	127-1851	1	Fitting-Tee, Bulkhead	34	69-9760	1	Coverplate
16	AU218-1256	1	Nut-Lock, Bulkhead	35	322-7	1	Screw-HH
18	125-6803	1	HYD Hose ASM, LP	36	3290-379	4	Tie-Cable
19	125-6806	1	HYD Hose ASM, HP	37	AU112950	1	Protector-Hose

 
Main Electrical Harness Assembly

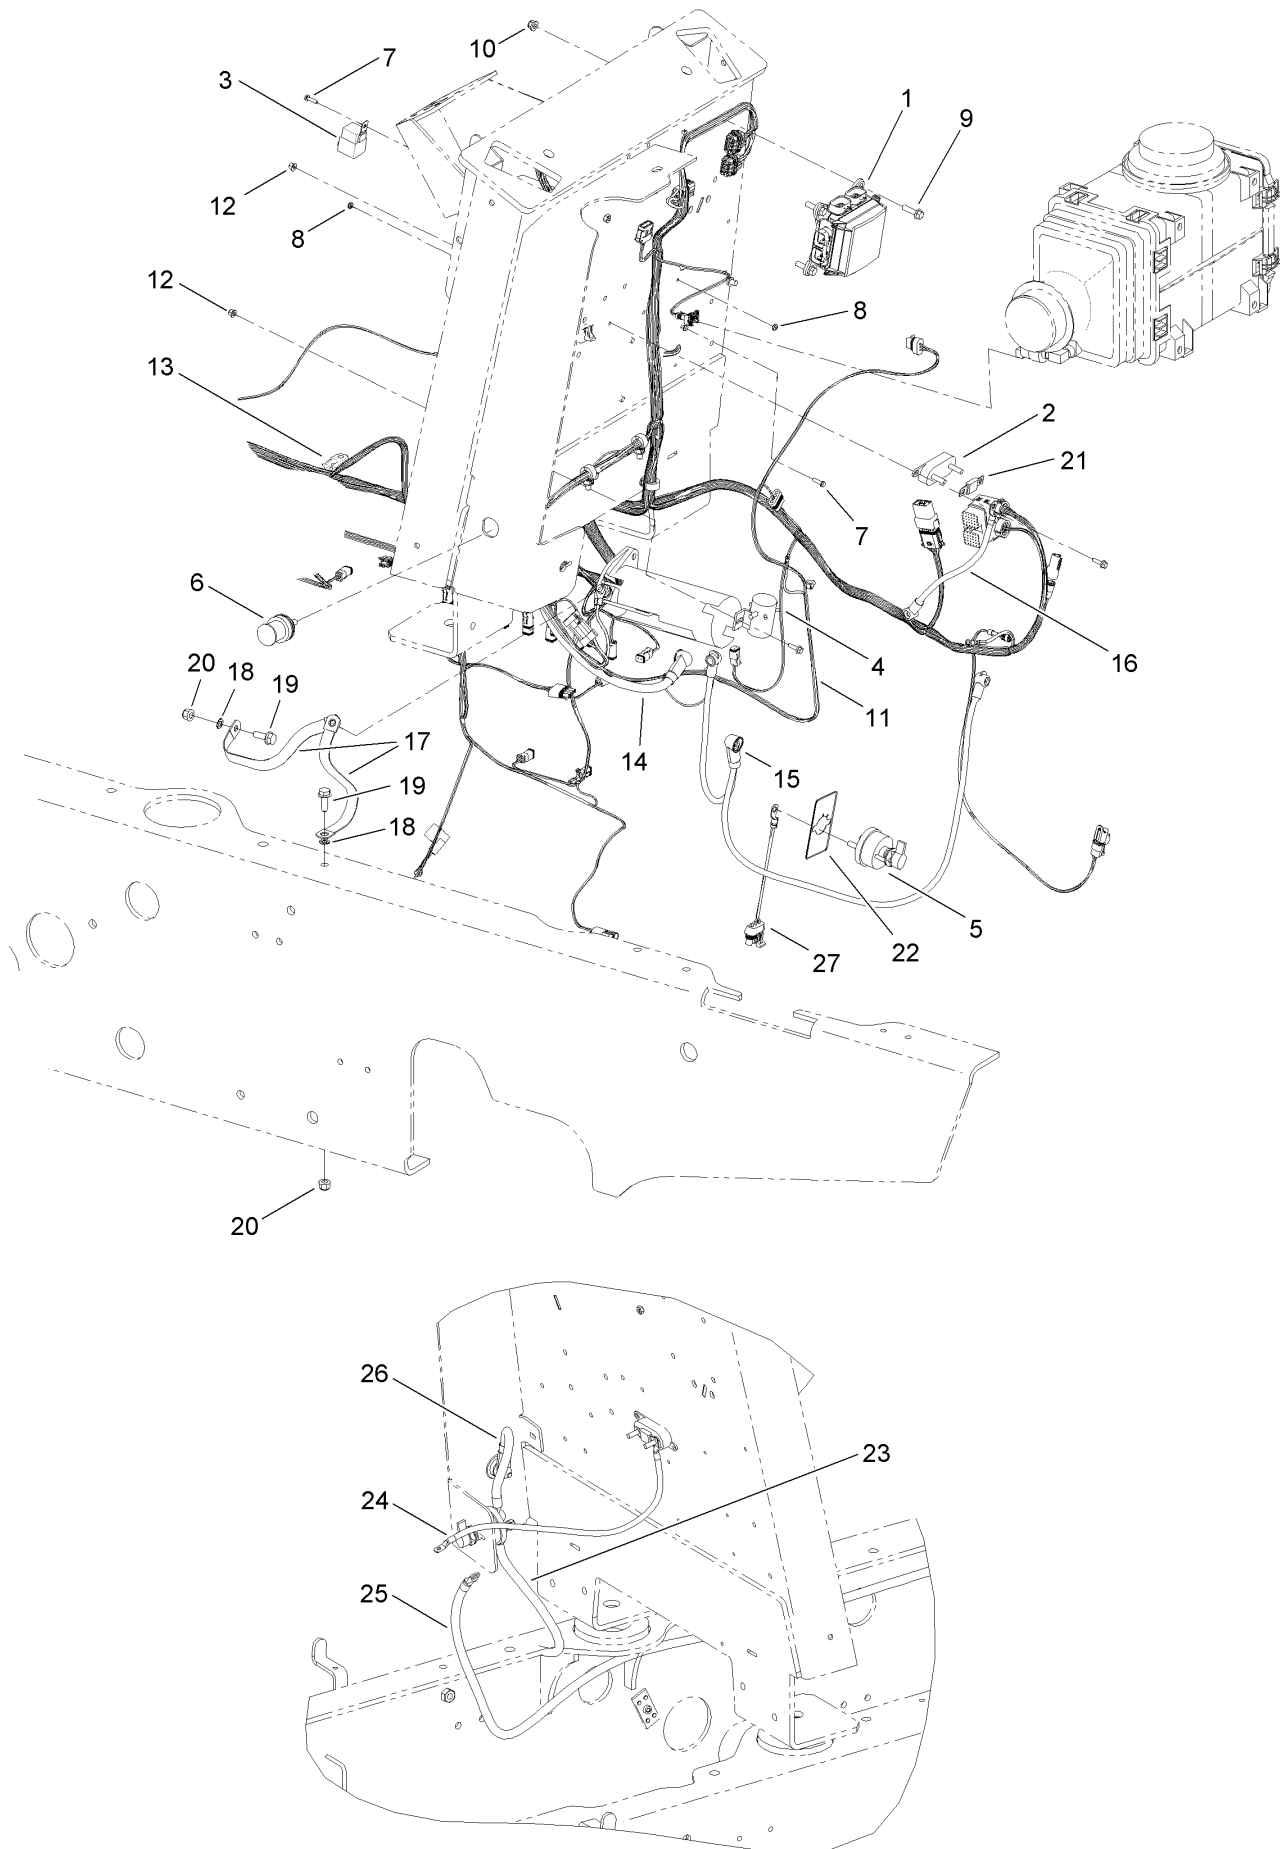

Main Electrical Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU116154	1	Box-Vehicle, Main	15	122-0291	1	Cable-Battery, Positive
2	AU126233	1	Holder-Fuse	16	122-0365	1	Cable-Battery, Positive
3	99-7430	1	Relay	17	AUD127018	2	Strap-Grounding
4	AU126234	1	Solenoid-Relay 12V, 300A	18	3255-9	2	Washer-Lock
5	AUR52278	1	Switch-Disconnect, Master	19	33105-030	2	Screw-HHF
6	AU105186	1	Post-Battery, Remote	20	103-9511	2	Nut-Lock, NI
7	AU63-81012	3	Screw-HWH	21	AU126232	1	Fuse-100A
8	3296-27	3	Nut-Lock, NI	22	125-6157	1	Decal-Disconnect, Battery
9	33104-030	4	Screw-HHF	23	122-0289	1	Cable-Battery, Positive
10	104-3082	4	Nut-Lock, HHF	24	122-0293	1	Cable-Battery, Positive
11	33103-020	4	Screw-HHF	25	122-0294	1	Cable-Battery, Negative
12	120-9645	4	Nut-HHF	26	122-0295	1	Cable-Battery, Positive
13	127-1748	1	Harness-Main	27	122-0084	1	Harness-Wire, Fusible Link
14	122-0290	1	Cable-Battery, Positive				

 
Controller and Display Assembly

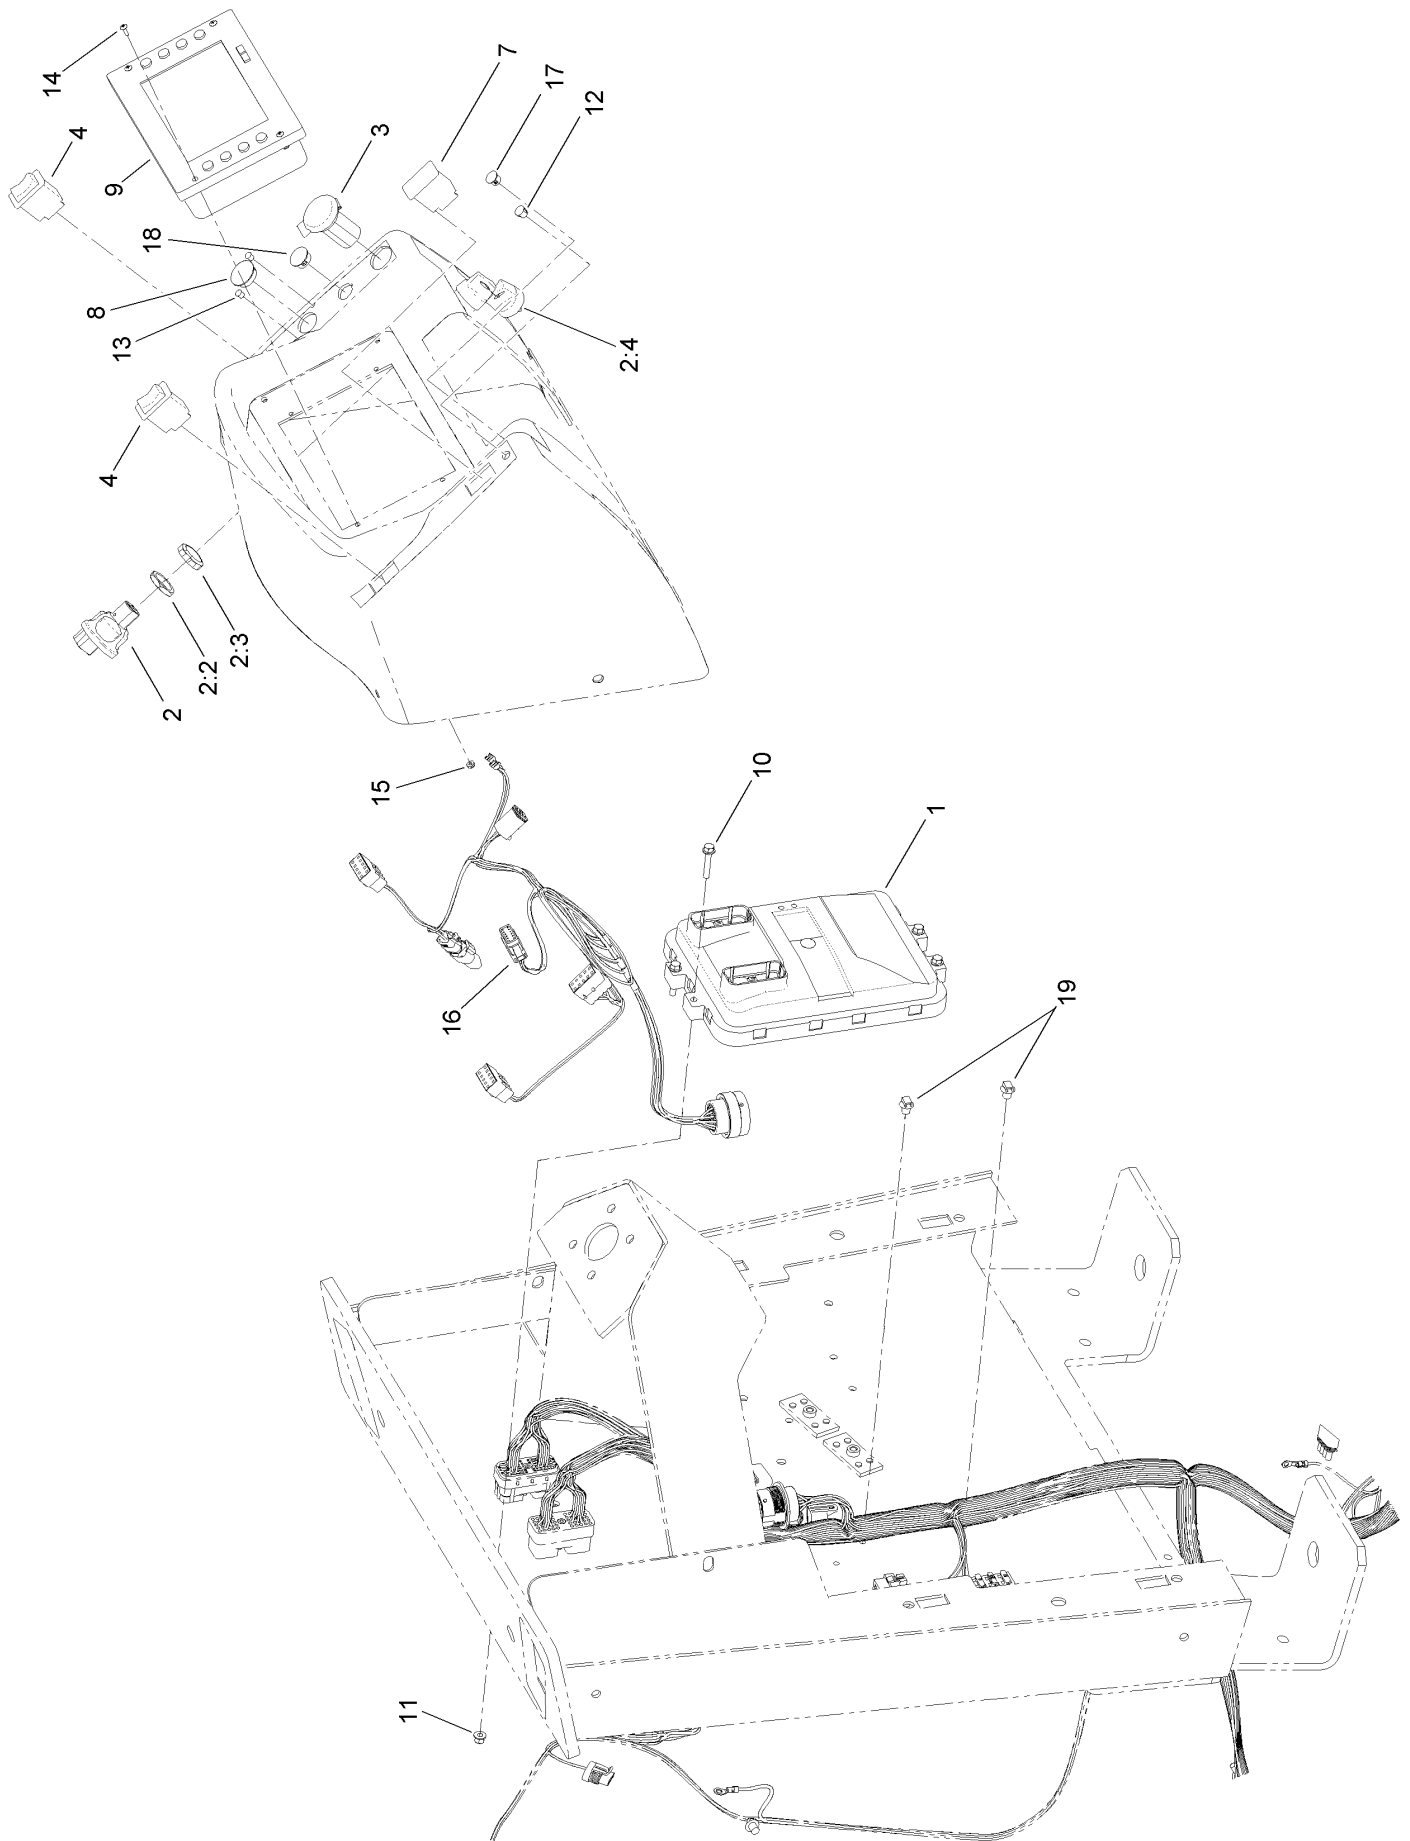

Controller and Display Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU117890	1	Controller ASM (88 Pin, Unprogrammed)	10	33103-035	4	Screw-HHF
2	121-5159	1	Ignition Switch ASM	11	120-9645	4	Nut-HHF
2:2	121-5160	1	Nut-Hex	12	104-9368	1	Plug-Dome
2:3	121-5161	1	Nut-Face	13	AU353-400	2	Plug-Dome
2:4	121-5162	1	Ignition Key Set	14	3249-3	8	Screw-PRH
3	AU22000121	1	Receptical-12V Dc	15	3296-9	8	Nut-Hex
4	AU113662	2	Switch-Rocker, 2 Pole (On/Off)	16	125-6884	1	Harness-Dash
7	AU124043	1	Plug-Panel	17	130-8444	1	Plug-Dome
8	103-8018	1	Plug-Dome	18	130-8439	1	Plug-Dome
9	AU103384	1	Display-Dp600, Unprogrammed	19	32180-030	2	Clip-Tie

 
Seat Harness and Joystick Control Assembly

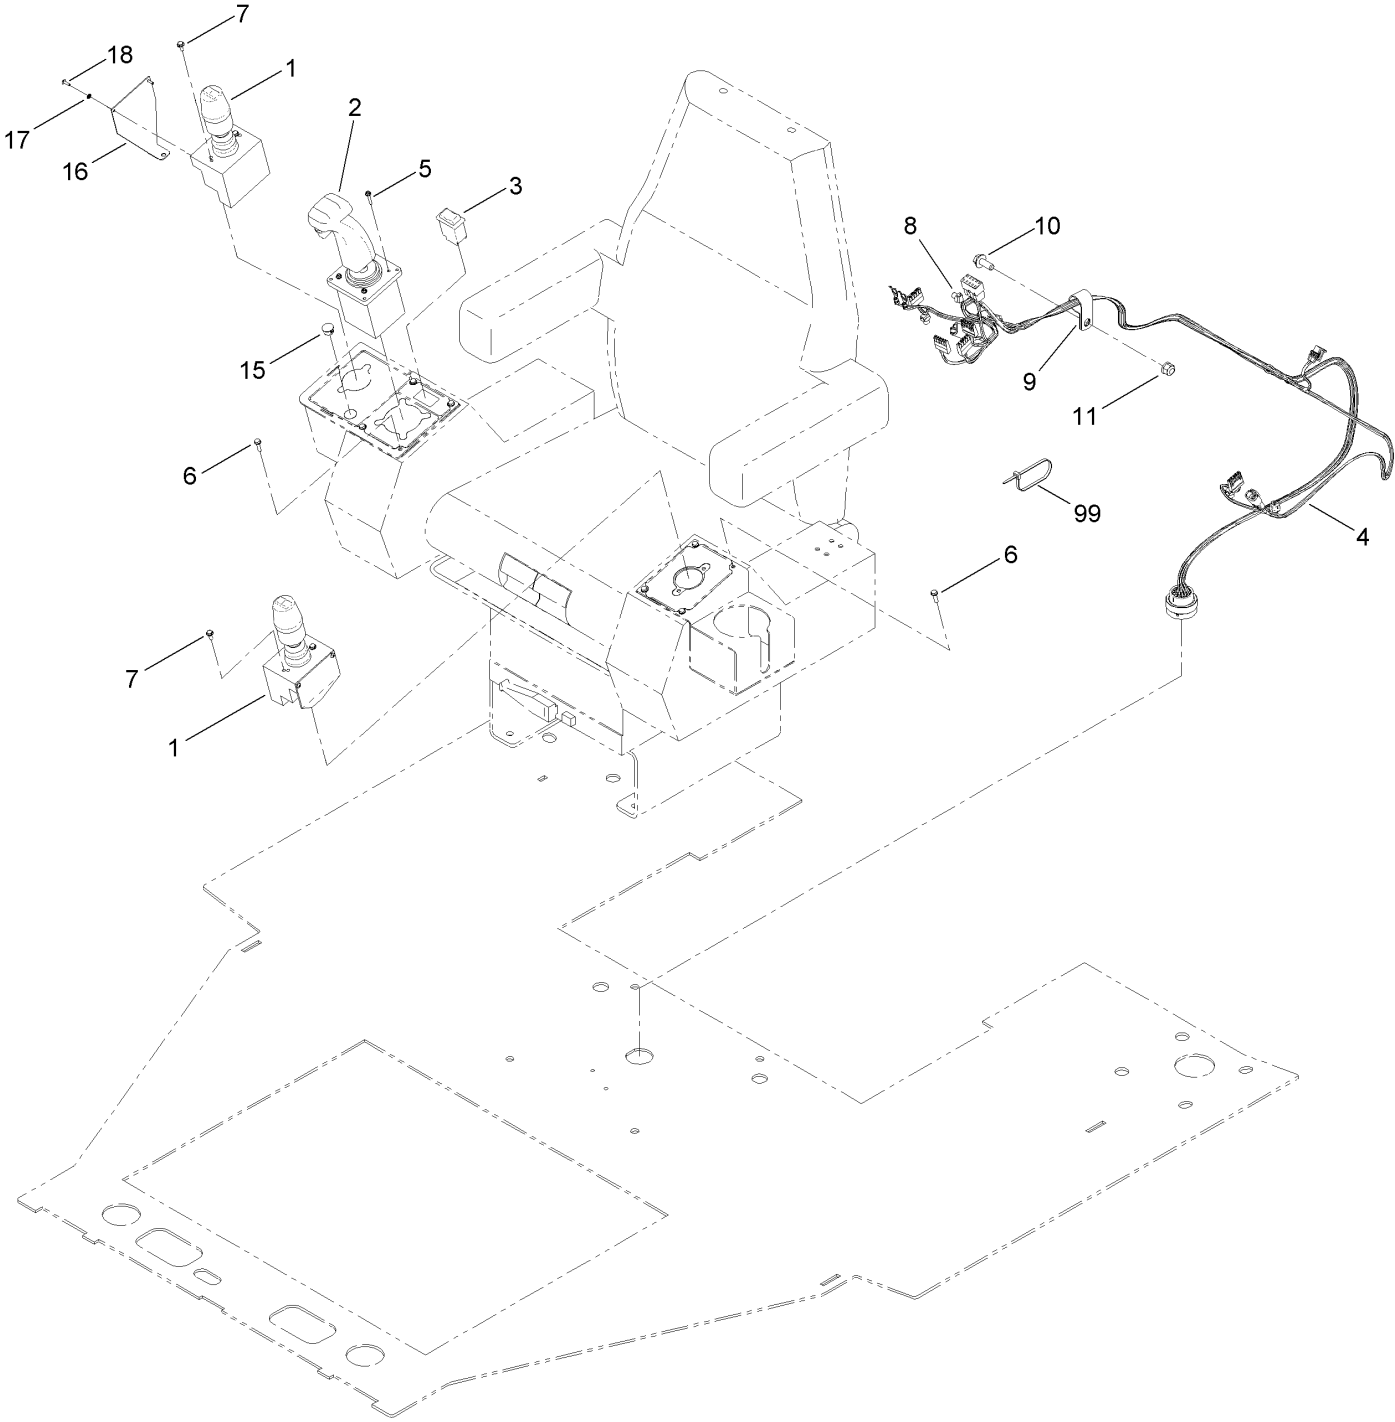

Seat Harness and Joystick Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU118424	2	Single Axis Joystick ASM	9	2412-71	1	Clamp-R
2	AU118423	1	Joystick-Control (W/ Handle)	10	33105-025	1	Screw-HHF
3	AU113664	1	Switch-Rocker, 2 Pole	11	103-9511	1	Nut-Lock, NI
4	125-6883	1	Harness-Wire, Seat	15	127-1843	1	Plug-Dome
5	32105-29	4	Screw-SHWH	16	131-0481	2	Plate-Sensor, Pedal
6	AU63-81012	8	Screw-HWH	17	3255-24	4	Washer-Lock / EXT
7	112-6349	4	Screw-HWH	18	3249-3	4	Screw-PRH
8	32180-030	1	Clip-Tie	99	3290-378	10	Tie-Cable

 
Battery Assembly

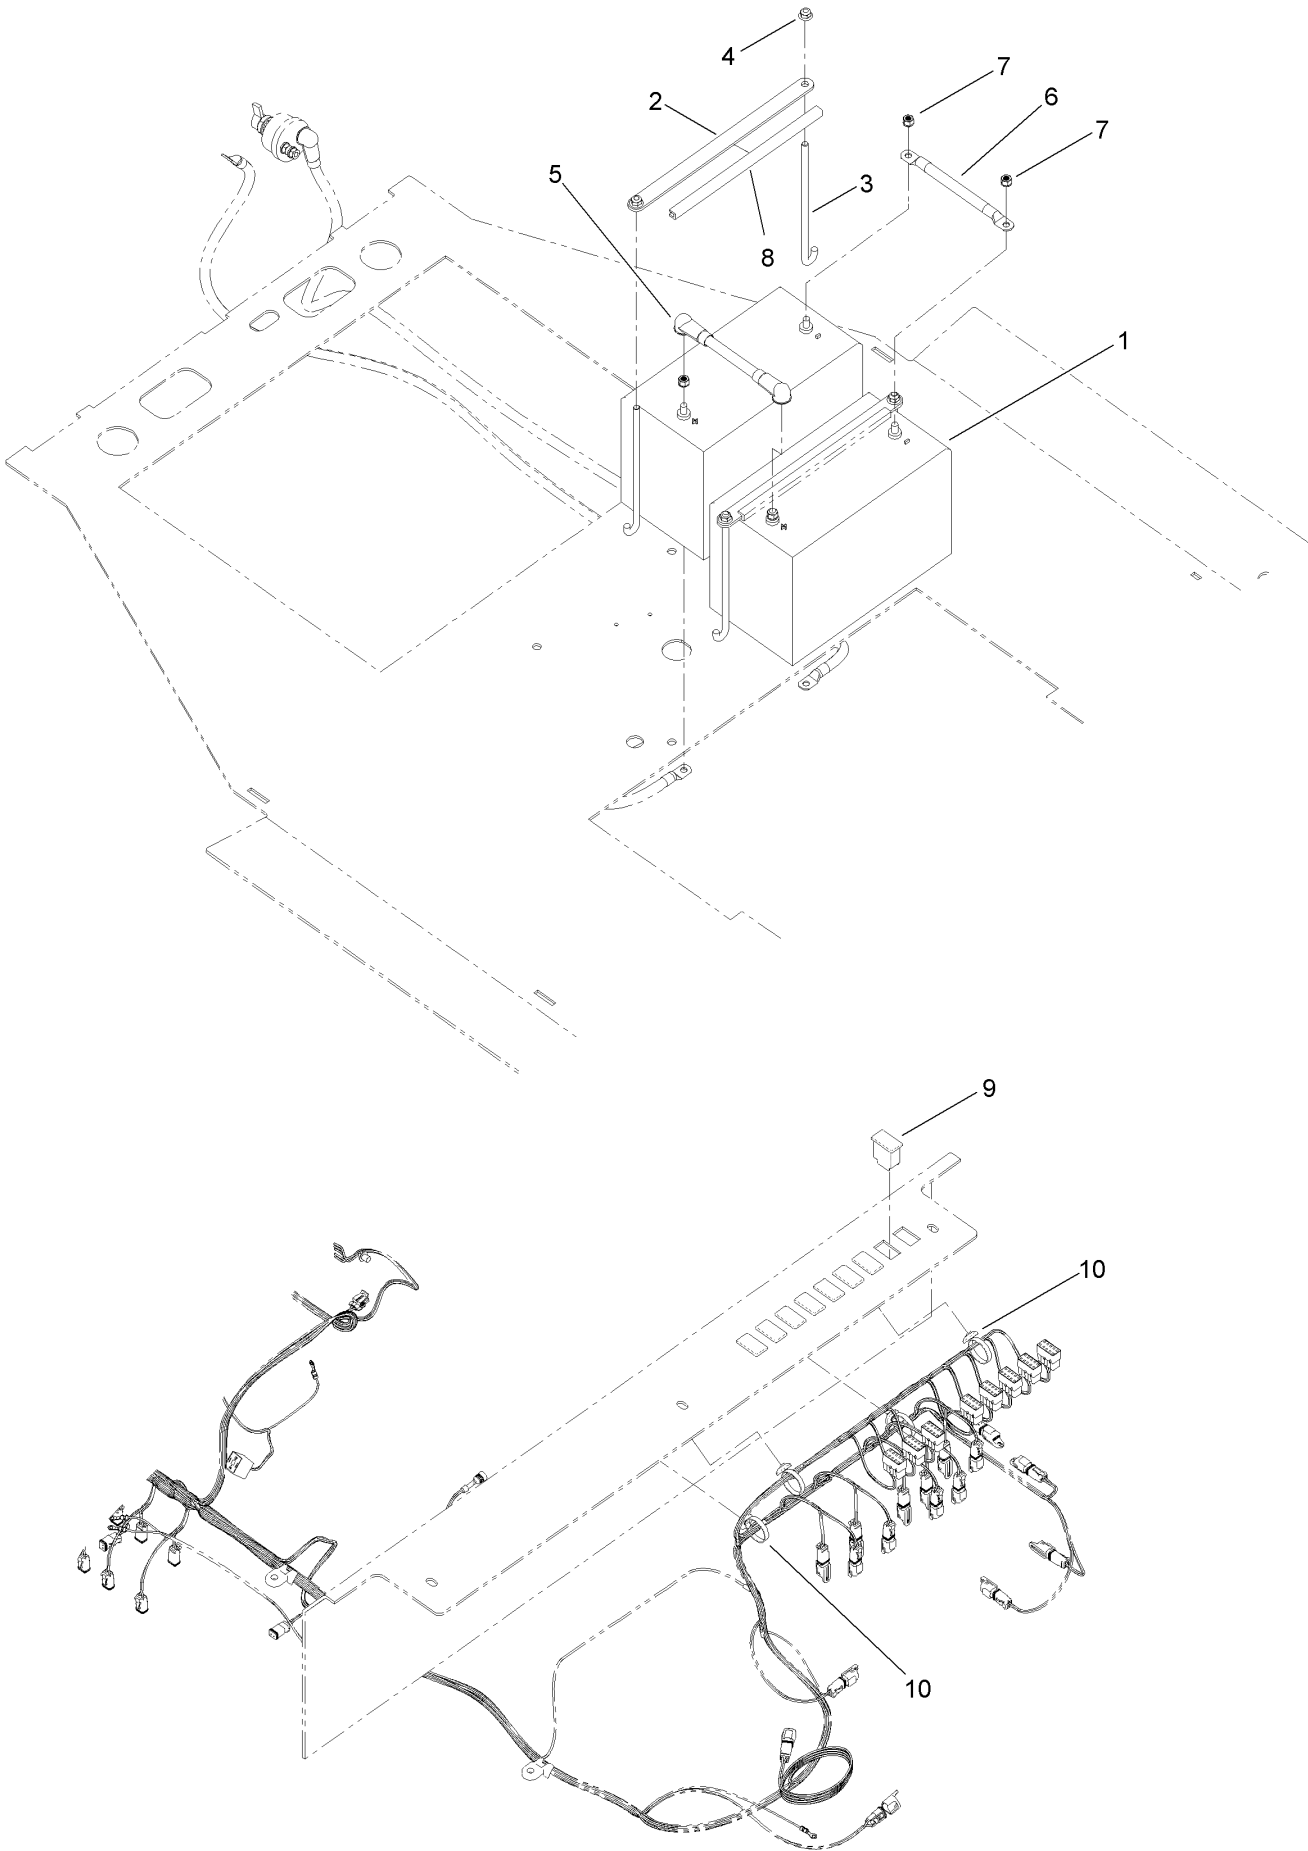

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-0968	2	Battery	6	122-0106	1	Cable-Battery, Negative
2	AU117616-03	2	Plate-Hold Down, Battery	7	32149-10	4	Nut-Keps
3	AUH436311	4	Bolt-Holddown, Battery	8	127-1293	2	Trim-Battery
4	104-8301	4	Nut-HF, NI	9	AU124043	8	Plug-Panel
5	122-0105	1	Cable-Battery, Positive	10	32180-149	4	Tie-Button Head

 
Cooling System Assembly

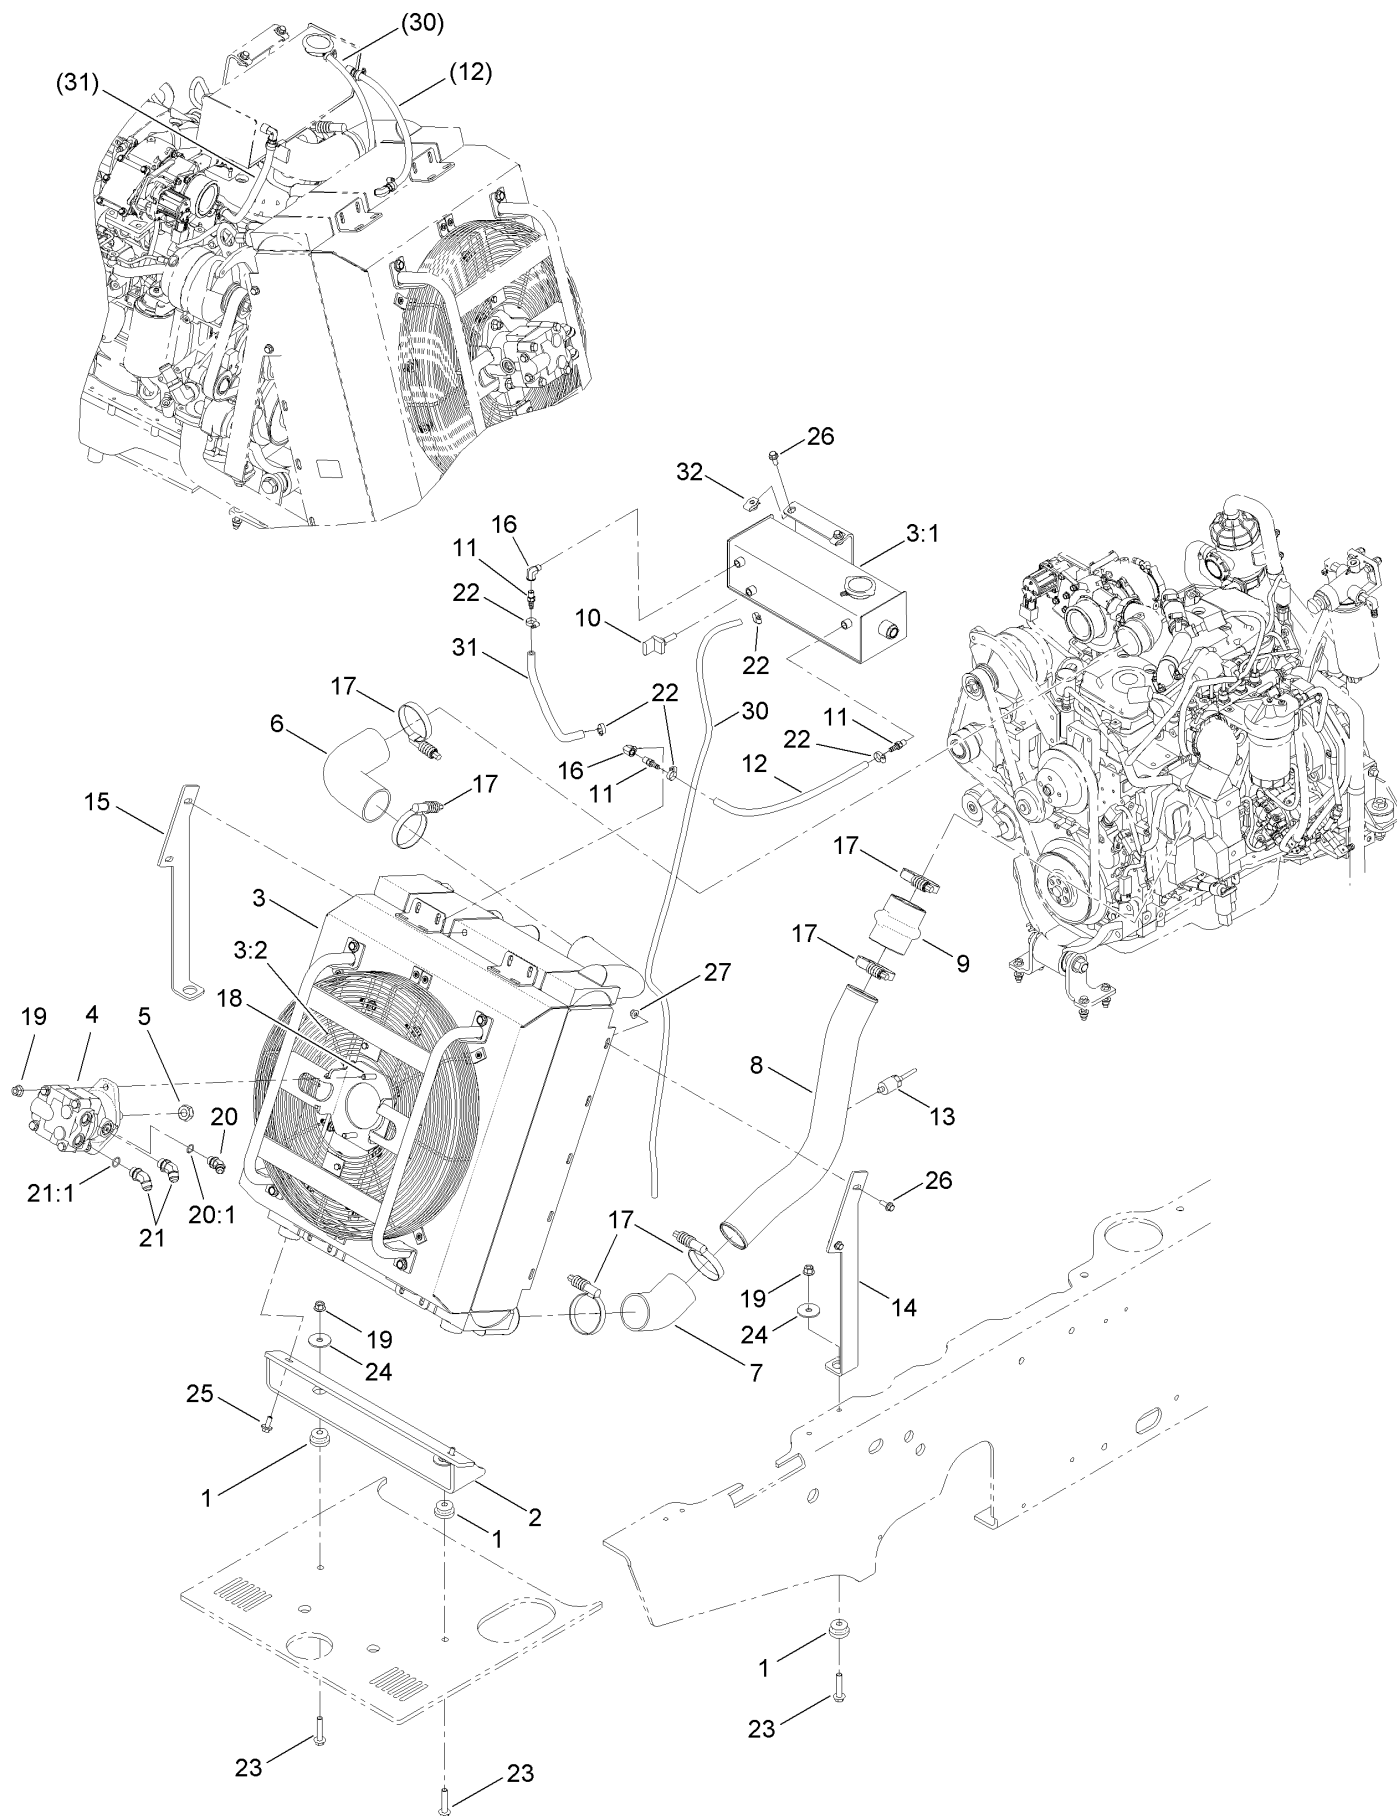

Cooling System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUL13142	4	Isolator-Mount, Rubber	16	125-9088	2	Fitting-Elbow, 90
2	127-1753-03	1	Plate-Mount, Radiator	17	AU21001153	6	Clamp-Torque, Constant
3	127-1750	1	Cooling Package ASM	18	33106-040	2	Screw-HHF
3:1	127-1730	1	Tank-Recovery, Coolant	19	115-1115	6	Nut-Lock, HHF
3:2	130-7415	1	Fan-Cooling, 22 Inch	20	353-379	1	Fitting-Elbow, 45 DEG
4	AU118007	1	HYD Motor ASM	20:1	237-79	1	O-Ring
5	3296-67	1	Nut-Lock, NI	21	AU218-5137	2	Fitting-Elbow-45 DEG
6	127-1760	1	Elbow-Cooler, Air	21:1	237-80	1	O-Ring
7	AU130820	1	Elbow-Cooler, Air	22	2412-36	5	Clamp-Hose
8	127-1758	1	Tube ASM	23	33106-060	4	Screw-HHF
9	AU21000205	1	Adapter-Hump	24	AU496-81018	4	Washer-Flat
10	AU120127	1	Sensor-Level, Coolant	25	33106-025	2	Screw-HHF
11	108-0342	3	Fitting-Straight	26	3234-42	6	Screw-HHF
12	127-1762	1	Hose-Coolant	27	119-4042	4	Nut-HF, NI
13	AU129089	1	Transducer-Temperature	30	131-0430	1	Hose-Coolant
14	127-1756-03	1	Bracket-Cooling, LH	31	131-0432	1	Hose-Coolant
15	127-1757-03	1	Bracket-Cooling, RH	32	112-4576	2	Nut-Clip, U

 
Coolant Recovery Tank and Plumbing Assembly

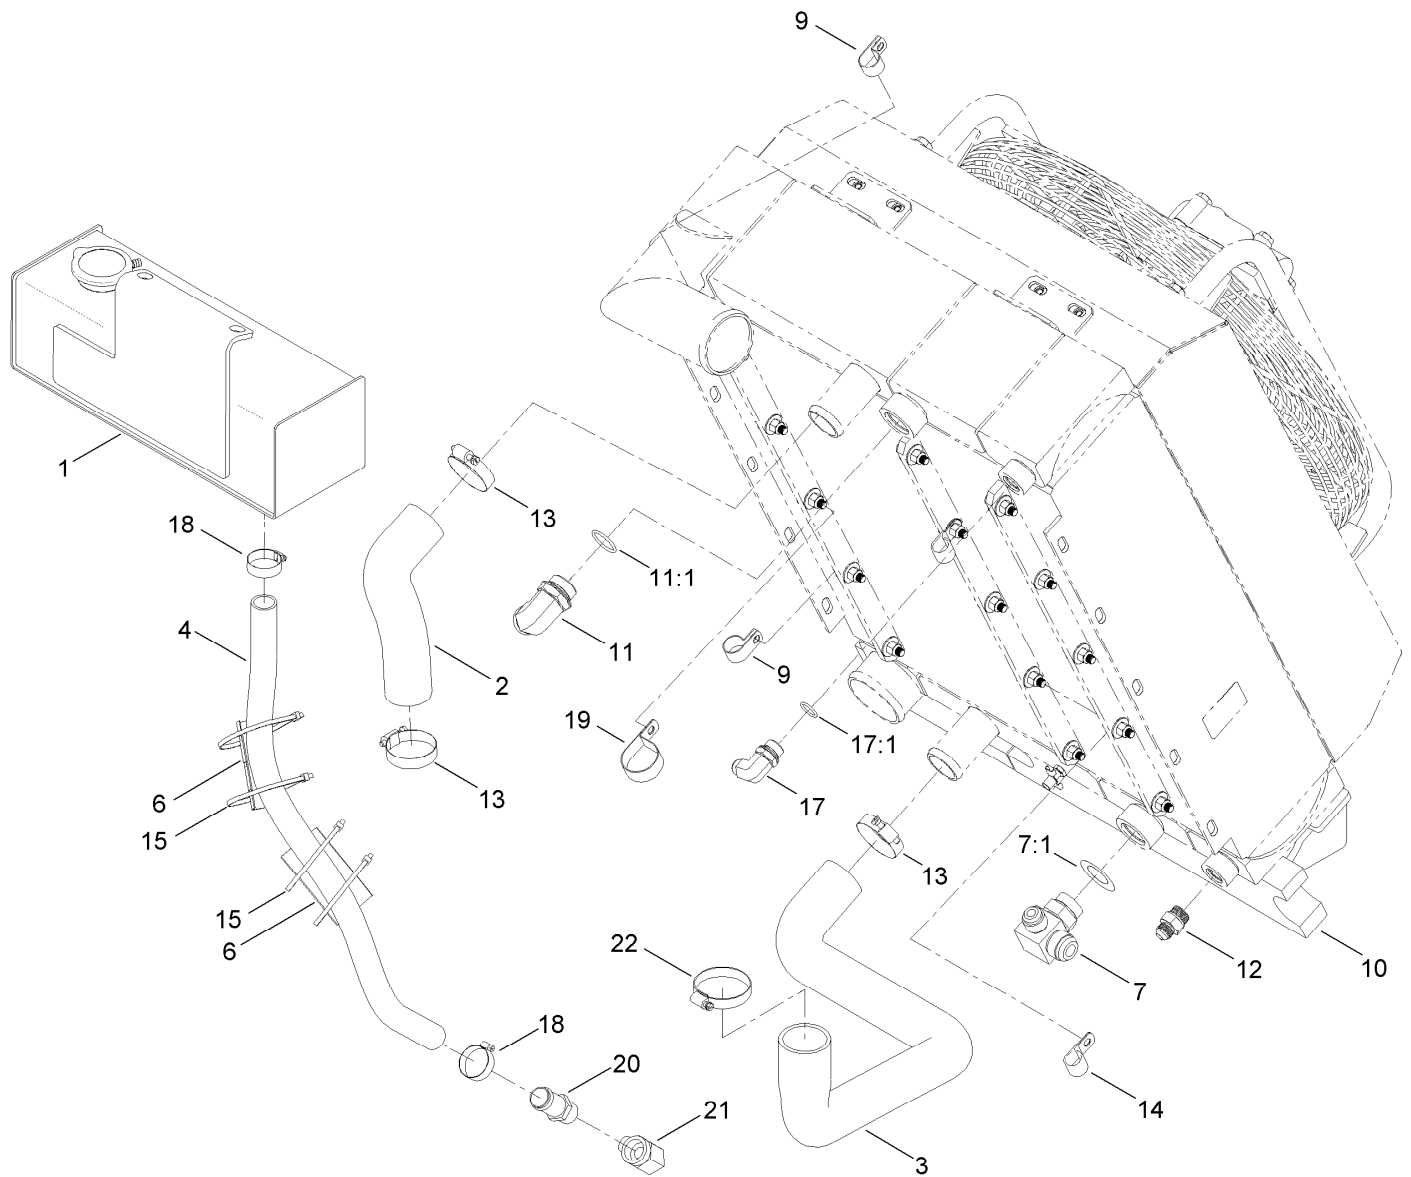

Coolant Recovery Tank and Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1730	1	Tank-Recovery, Coolant	12	353-433	1	Fitting-Straight
2	127-1751	1	Hose-Radiator, Top	13	2412-92	3	Clamp-Hose
3	127-1761	1	Hose-Radiator, Bottom	14	2412-4	2	Clamp-R
4	127-1765	1	Hose-Inlet	15	3290-379	4	Tie-Cable
6	AU112950	2	Protector-Hose	17	353-426	1	Fitting-90 DEG
7	AU103754A1	1	Fitting-HYD, Special	17:1	237-80	1	O-Ring
7:1	237-146	1	O-Ring	18	2412-34	2	Clamp-Hose
9	2412-41	2	Clamp-R	19	2412-147	1	Clamp-R
10	AU131469	1	Seal-Foam	20	AU217-375	1	Fitting-STR
11	AU218-5110	1	Elbow-90 DEG	21	127-6221	1	Fitting-Elbow, 90 DEG
11:1	237-146	1	O-Ring	22	2412-42	1	Clamp-Hose

 
Tilt Frame Assembly

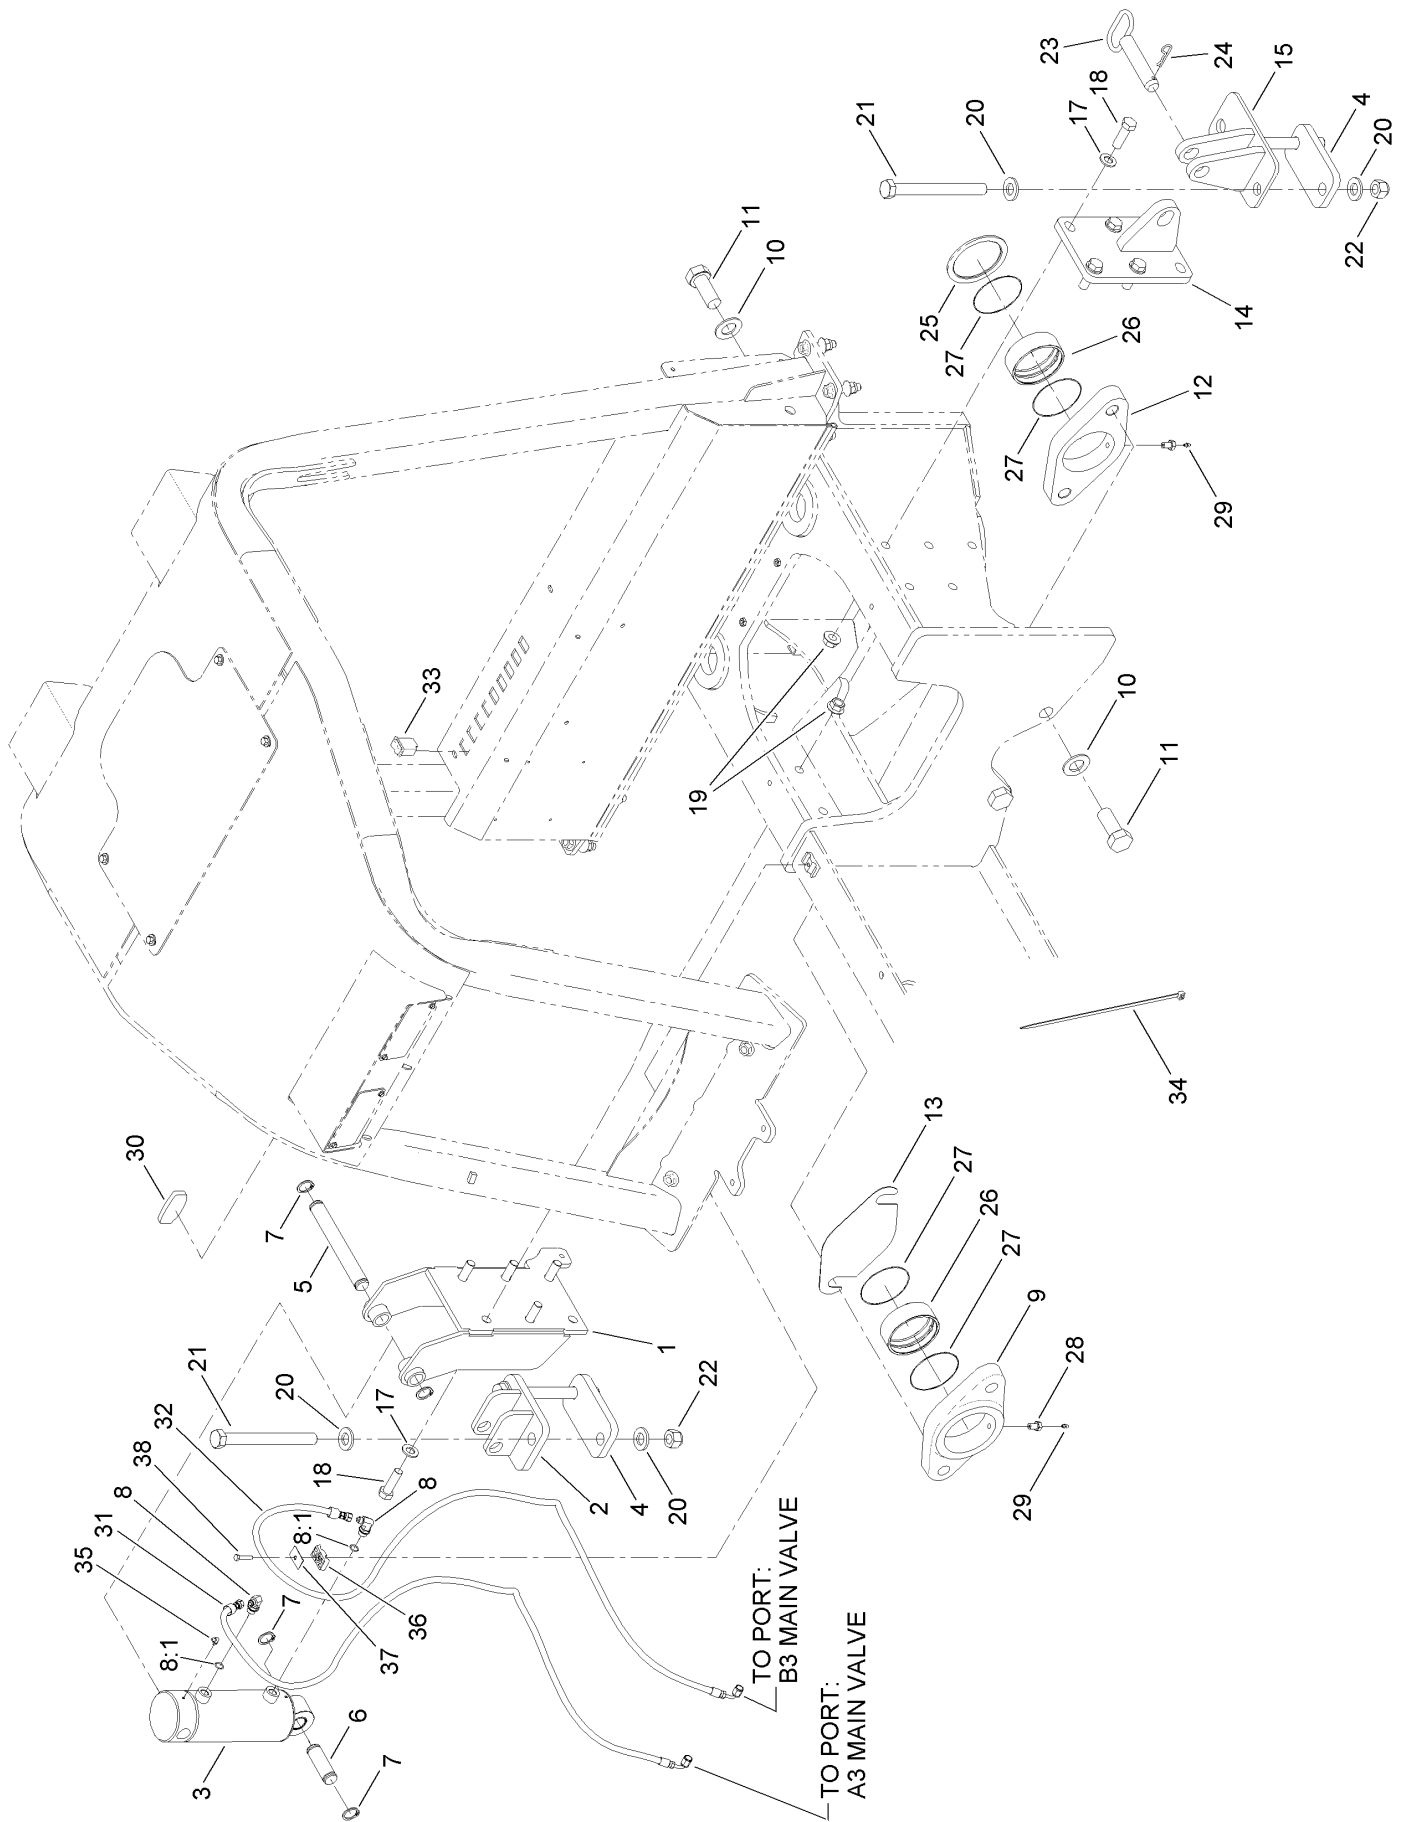

Tilt Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU104865-01	1	Mount-Cylinder, Frame	20	AU496-21106	8	Washer
2	AU104861-01	1	Mount-Axle, Rear	21	AU426-16160	4	Screw-HH
3	AU126558	1	HYD Cylinder ASM	22	120-0888	4	Nut-HH
4	AU105394-01	2	Plate-Mounting	23	AU106861	1	Pin
5	AUH434493	1	Pin-Plow	24	AUH32292	1	Pin-Hair
6	AUH434556	1	Pin-Clevis	25	AUK395023	1	Washer-Thrust
7	32151-77	4	Ring-Retaining, External	26	AUK965265	2	Bushing-Pivot
8	353-537	2	Fitting-Elbow, 90 DEG	27	AUK965267	4	O-Ring
8:1	237-79	1	O-Ring	28	127-1813	2	Adapter-Locating
9	AUH433408-03	1	Housing-Mount, Trunion	29	302-5	2	Fitting-Grease
10	AUH426858	4	Washer	30	AU104200	1	Meter-Slope
11	AU426-2048	4	Bolt	31	127-1867	1	HYD Hose ASM
12	AU407398A1-03	1	Housing-Mount, Trunion	32	127-1868	1	HYD Hose ASM
13	AUH433359	1	Shim-Mount, Axle	33	AU113664	1	Switch-Rocker, 2 Pole
14	AU105590-01	1	Lockout-Frame	34	3290-378	6	Tie-Cable
15	AU105593-01	1	Lockout-Axle	35	302-40	1	Fitting-Grease, 90 DEG
17	AU496-11081	10	Washer	36	56-7976	2	Clamp-Tube
18	328-2	10	Screw-HH	37	69-9760	1	Coverplate
19	32128-45	10	Nut-HHF	38	322-7	1	Screw-HH

 Hydraulic Cylinder Assembly No. AU126558

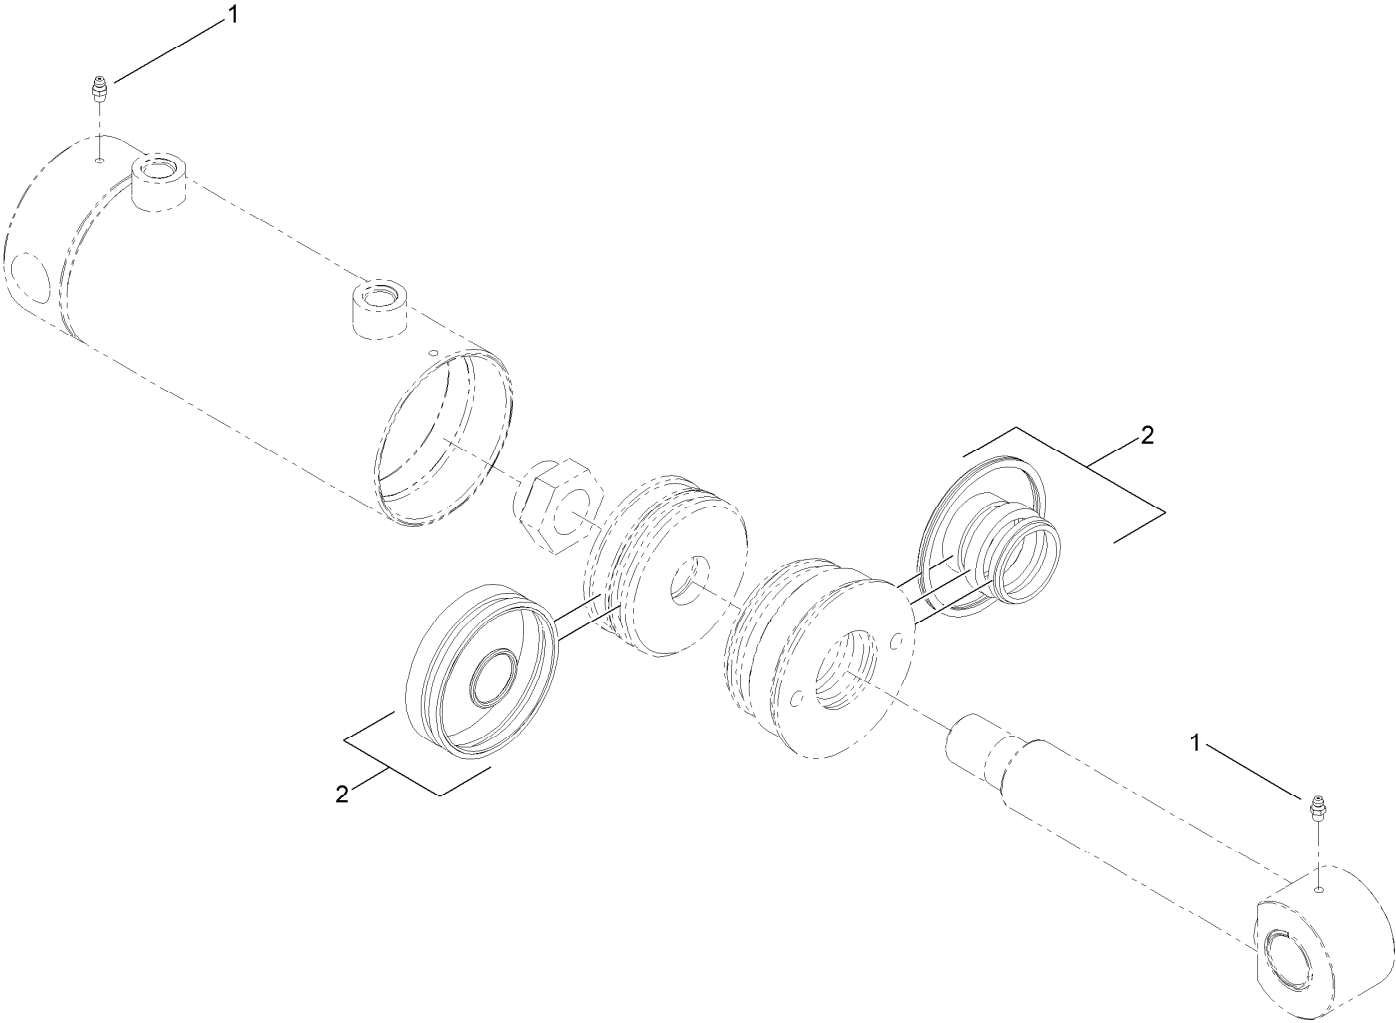

Hydraulic Cylinder Assembly No. AU126558 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	302-2	2	Fitting-Grease
2	131-2749	1	Seal Kit

Attachments and Accessories

For 25450 RT1200 Traction Unit

Product Name	Model/Part
Backhoe.....	25452E
Center Trencher.....	25453E
Sliding Attachment Kit.....	25454E
48in Rock Boom	25456E
60in Rock Boom	25457E
Counterweight Kit	25458E
Counterweight And Reel Kit.....	25459E
Auxiliary Hydraulics Kit	25460E
Track Kit.....	25462E
Plow Kit.....	25463E
Work Light Kit	25464E
4ft Manual Crumber	25465E
5ft Manual Crumber	25466E
Auxiliary Control Kit, 762 Backhoe.....	25467E
Block Heater Kit.....	25468E
Load Control Kit.....	25510E
Auto Tilt Chassis Kit.....	25511E
Advanced Steering Control Kit.....	25512E

Notes:



Count on it.