



Count on it.

Parts Catalog

RT1200 Traction Unit

Model No. 25450—Serial No. 315000001 and Up

Model No. 25450A—Serial No. 315000001 and Up

Model No. 25450C—Serial No. 315000001 and Up

Model No. 25450W—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame, Hood and Fender Mounting Assembly	6
Engine Assembly	8
Engine Heat Shield and Hose Assembly	10
Wheel and Drive Assembly	12
Axle Housing Assembly Axle Assembly No. AU106863	14
Swivel Housings And Steering Cylinder Assembly Axle Assembly No. AU106863	16
Bevel Gear Set Assembly Axle Assembly No. AU106863	18
Differential Locking Assembly Axle Assembly No. AU106863	20
Double U-Joint Assembly Axle Assembly No. AU106863	22
Wheel Hub Assembly Axle Assembly No. AU106863	24
Final Reduction Assembly Axle Assembly No. AU106863	26
Housing And Covers Assembly Transmission Assembly No. AU106132	28
Planetary Carrier Assembly Transmission Assembly No. AU106132	30
Clutch Shaft Assembly Transmission Assembly No. AU106132	32
Clutch Bell Assembly Transmission Assembly No. AU106132	34
Brakes Assembly Transmission Assembly No. AU106132	36
Output Shaft Assembly Transmission Assembly No. AU106132	38
Valves And Pipes Assembly Transmission Assembly No. AU106132	40
Constant Velocity Joint Assembly No. AU106121-03	42
Drive Shaft Assembly No. AU106109-03	44
Air Cleaner and Mounting Assembly	46
Air Cleaner Assembly No. 127-1844	48
Muffler and Mounting Assembly	50
Operator Platform and Seat Assembly	52
Seat Assembly No. AU118589	54
Operator Dash and Panel Assembly	56
Pedal Assembly No. AU106377	58
Operator Storage Assembly	60
Backfill Blade and Mounting Assembly	62
Hydraulic Cylinder Assembly No. 127-1797	64
Hydraulic Cylinder Assembly No. 127-1798	66
Hydraulic Cylinder Assembly No. 127-1799	68
Backfill Blade Hydraulic Plumbing Assembly	70
ROPS Assembly	72
Fuel Tank Assembly	74
Main Valve and Manifold Assembly	76
Main Hydraulic Valve Assembly No. 131-0421	78
Fan Drive Valve and Flow Divider Assembly	80
Hydraulic Tank Assembly	82
Hydraulic Tank Assembly No. AU118190	84
Tandem Pump Plumbing Assembly	86
Hydraulic Gear Pump Assembly No. 127-1812	88
Tandem Pump and Main Valve Hydraulic Plumbing Assembly	90
Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2	92
Steering Column and Hydraulic Plumbing Assembly	94
Steering Valve Assembly No. AU115762	96
Hydraulic Motor Assembly No. AU385343A2	98
Hydraulic Plumbing Assembly	100
Main Electrical Harness Assembly	102
Controller and Display Assembly	104
Seat Harness and Joystick Control Assembly	106
Battery Assembly	108
Main Harness Mounting Assembly	110
Cooling System Assembly	112

Contents (continued)

Hydraulic Motor Assembly No. AU118007 114

 
Coolant Recovery Tank and Plumbing Assembly 116

Tilt Frame Assembly 118

Hydraulic Cylinder Assembly No. AU126558 120

Attachments and Accessories 122


Main Frame, Hood and Fender Mounting Assembly

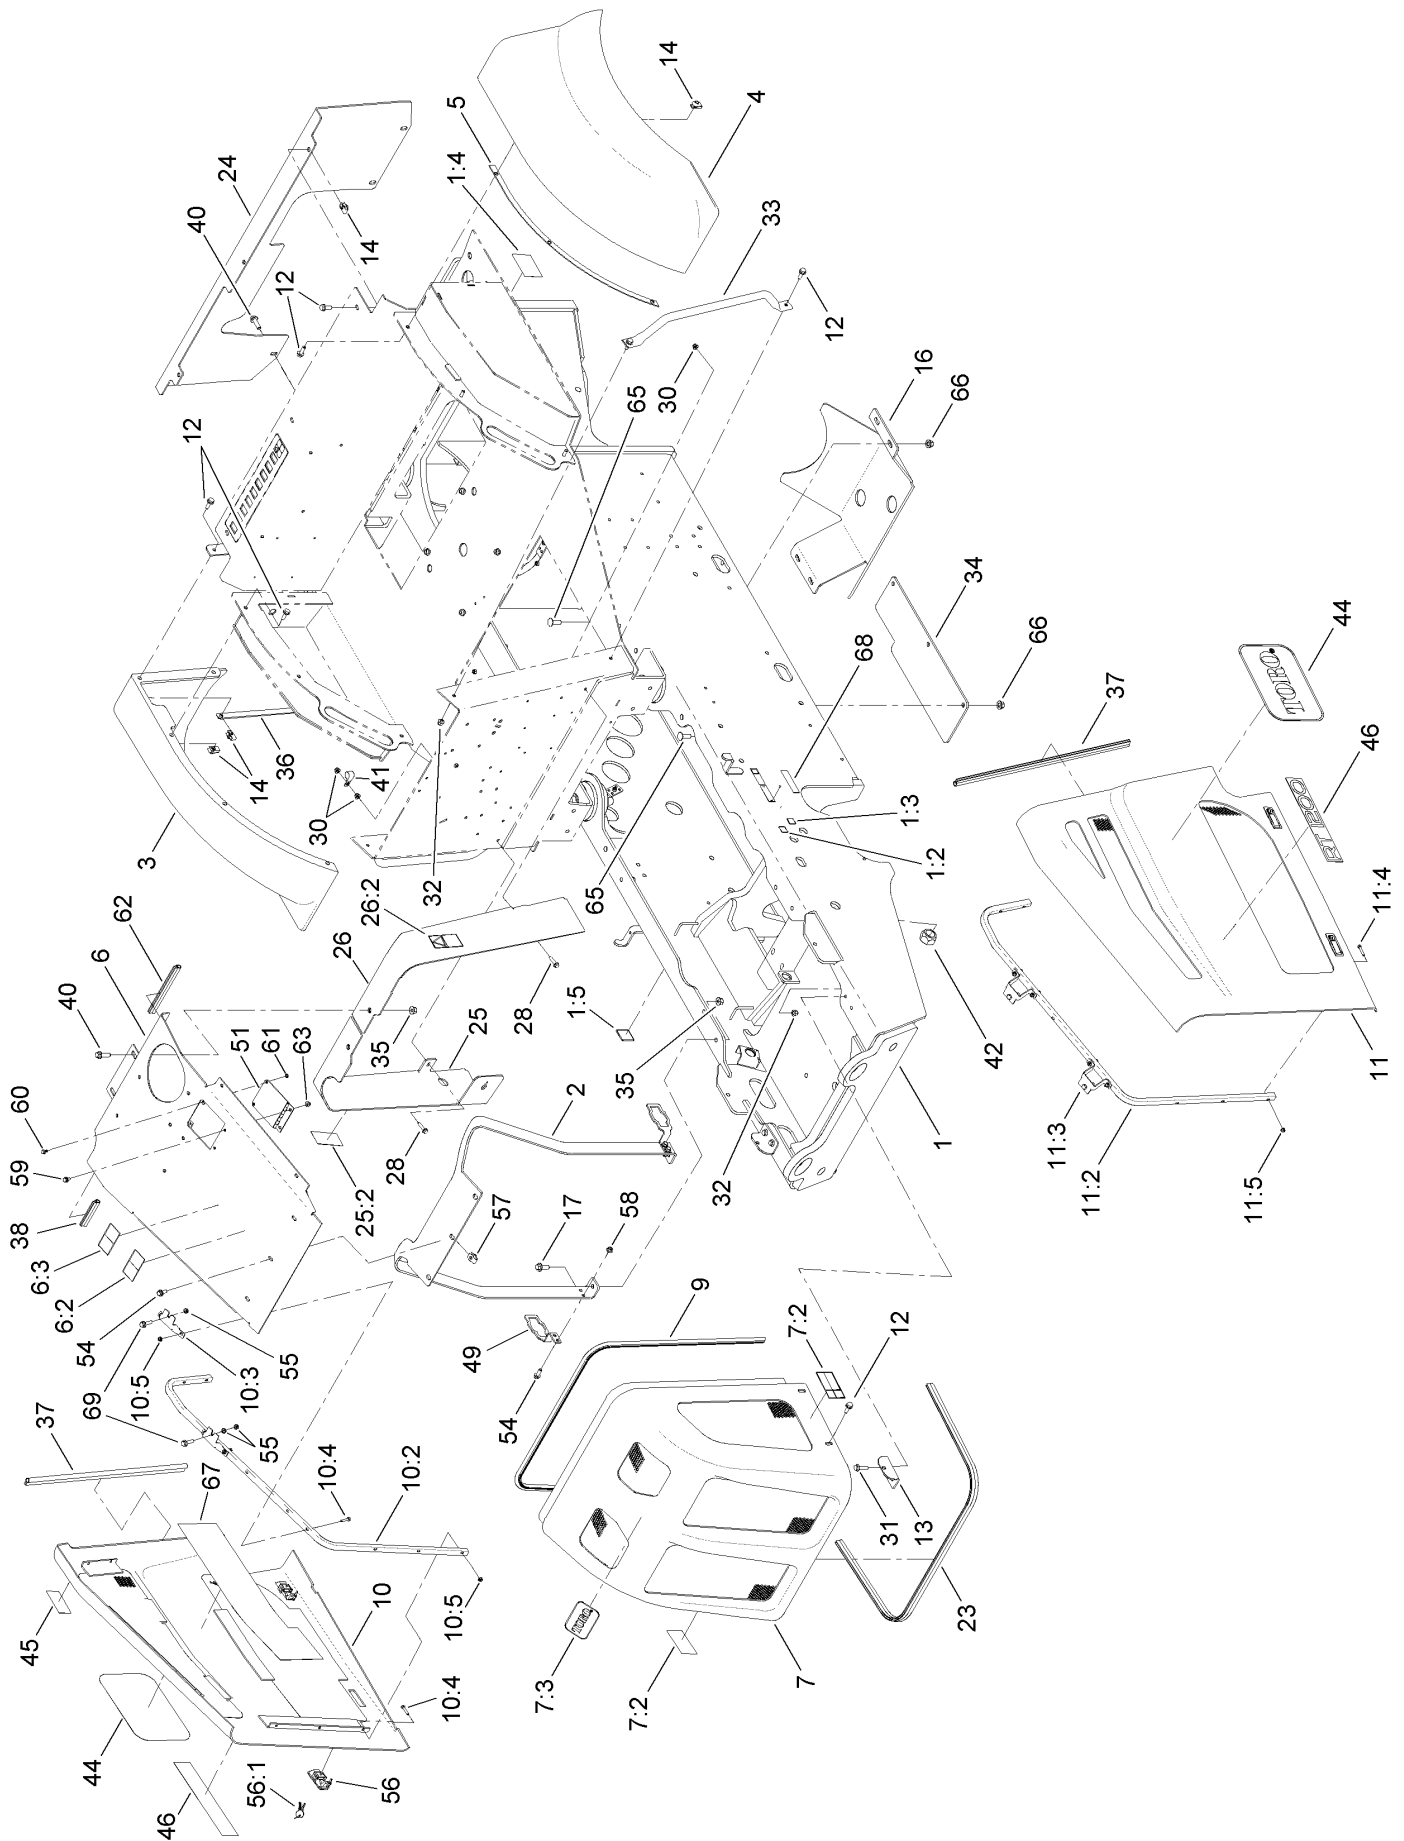

Main Frame, Hood and Fender Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1705	1	Main Frame ASM	28	33104-035	2	Screw-HHF
1:2	125-8481	1	Decal-Fluid, Hydraulic (Out)	30	104-3082	3	Nut-Lock, HHF
1:3	125-8482	1	Decal-Fluid, Hydraulic (In)	31	AU100331	4	Screw-HHF
1:4	125-6139	2	Decal-Lift/Tie Down	32	103-9511	8	Nut-Lock, NI
1:5	127-1829	1	Decal-Drain, Oil	33	130-7458-03	2	Handle-Operator
2	131-1305-03	1	Support-Hood	34	AU109540-03	1	Plate-Skid
3	AU118197	1	Fender-RH	35	115-1115	4	Nut-Lock, HHF
4	AU118198	1	Fender-LH	36	AU122083-03	2	Plate-Reinforcement, Fender
5	AU118199-03	2	Support-Fender	37	127-1769	2	Seal-Hood
6	131-0476	1	Hood Plate ASM	38	127-1770	1	Seal-Hood
6:2	125-4963	1	Decal-Surface, Hot	40	33106-040	5	Screw-HHF
6:3	125-8479	1	Decal-Warning, Radiator	41	2412-4	1	Clamp-R
7	127-1702	1	Front Hood ASM	42	AU232-41120	4	Nut-Hex
7:2	125-6689	2	Decal-Warning, Fan	44	114-0990	2	Decal
7:3	67-1300	1	Decal	45	125-4963	1	Decal-Surface, Hot
9	131-0443	1	Seal-Hood	46	127-1825	2	Decal
10	131-1281	1	RH Hood ASM	49	131-1338-03	2	Plate-Bent
10:2	131-0462-03	1	Tube-Bent	51	131-0467-01	1	Cover ASM
10:3	131-0454-03	2	Bracket-Hood	54	3234-42	7	Screw-HHF
10:4	321-13	10	Screw-HH	55	121-4600	6	Nut-Hex
10:5	119-4040	10	Nut-Flange, NI	56	AU50GB2302	4	Latch-Trigger, Raised (W/Lock)
11	131-1282	1	LH Hood ASM	56:1	131-0148	1	Key-Replacement
11:2	131-0452-03	1	Tube-Bent	57	112-4576	3	Nut-Clip, U
11:3	131-0454-03	2	Bracket-Hood	58	119-4042	4	Nut-HF, NI
11:4	321-13	10	Screw-HH	59	3234-14	2	Screw-HHF
11:5	119-4040	10	Nut-Flange, NI	60	99-6810	2	Screw-HHF
12	33105-030	21	Screw-HHF	61	106-8737	2	Nut-Retainer
13	AU119006-03	2	Support-Cover, Engine	62	131-0478	1	Seal-Hood
14	AU100863	13	Nut-U	63	119-4041	2	Nut-HF
16	AU107716-03	1	Plate-Skid	65	3233-2	7	Screw-CARR
17	33106-035	2	Screw-HHF	66	99-5107	7	Nut-Lock
23	AU112099	1	Seal-Bottom, Nose	67	131-1302	1	Foil-Heat
24	AU124404-03	1	Plate-Cover, Rear	68	117-2718	1	Decal-Arrester, Spark
25	130-8411	1	Support Mount ASM	69	114-4681	4	Screw-HHF
25:2	125-8480	1	Decal-Warning, No Riders				
26	130-8412	1	Support Mount ASM				
26:2	125-8480	1	Decal-Warning, No Riders				

 Engine Assembly

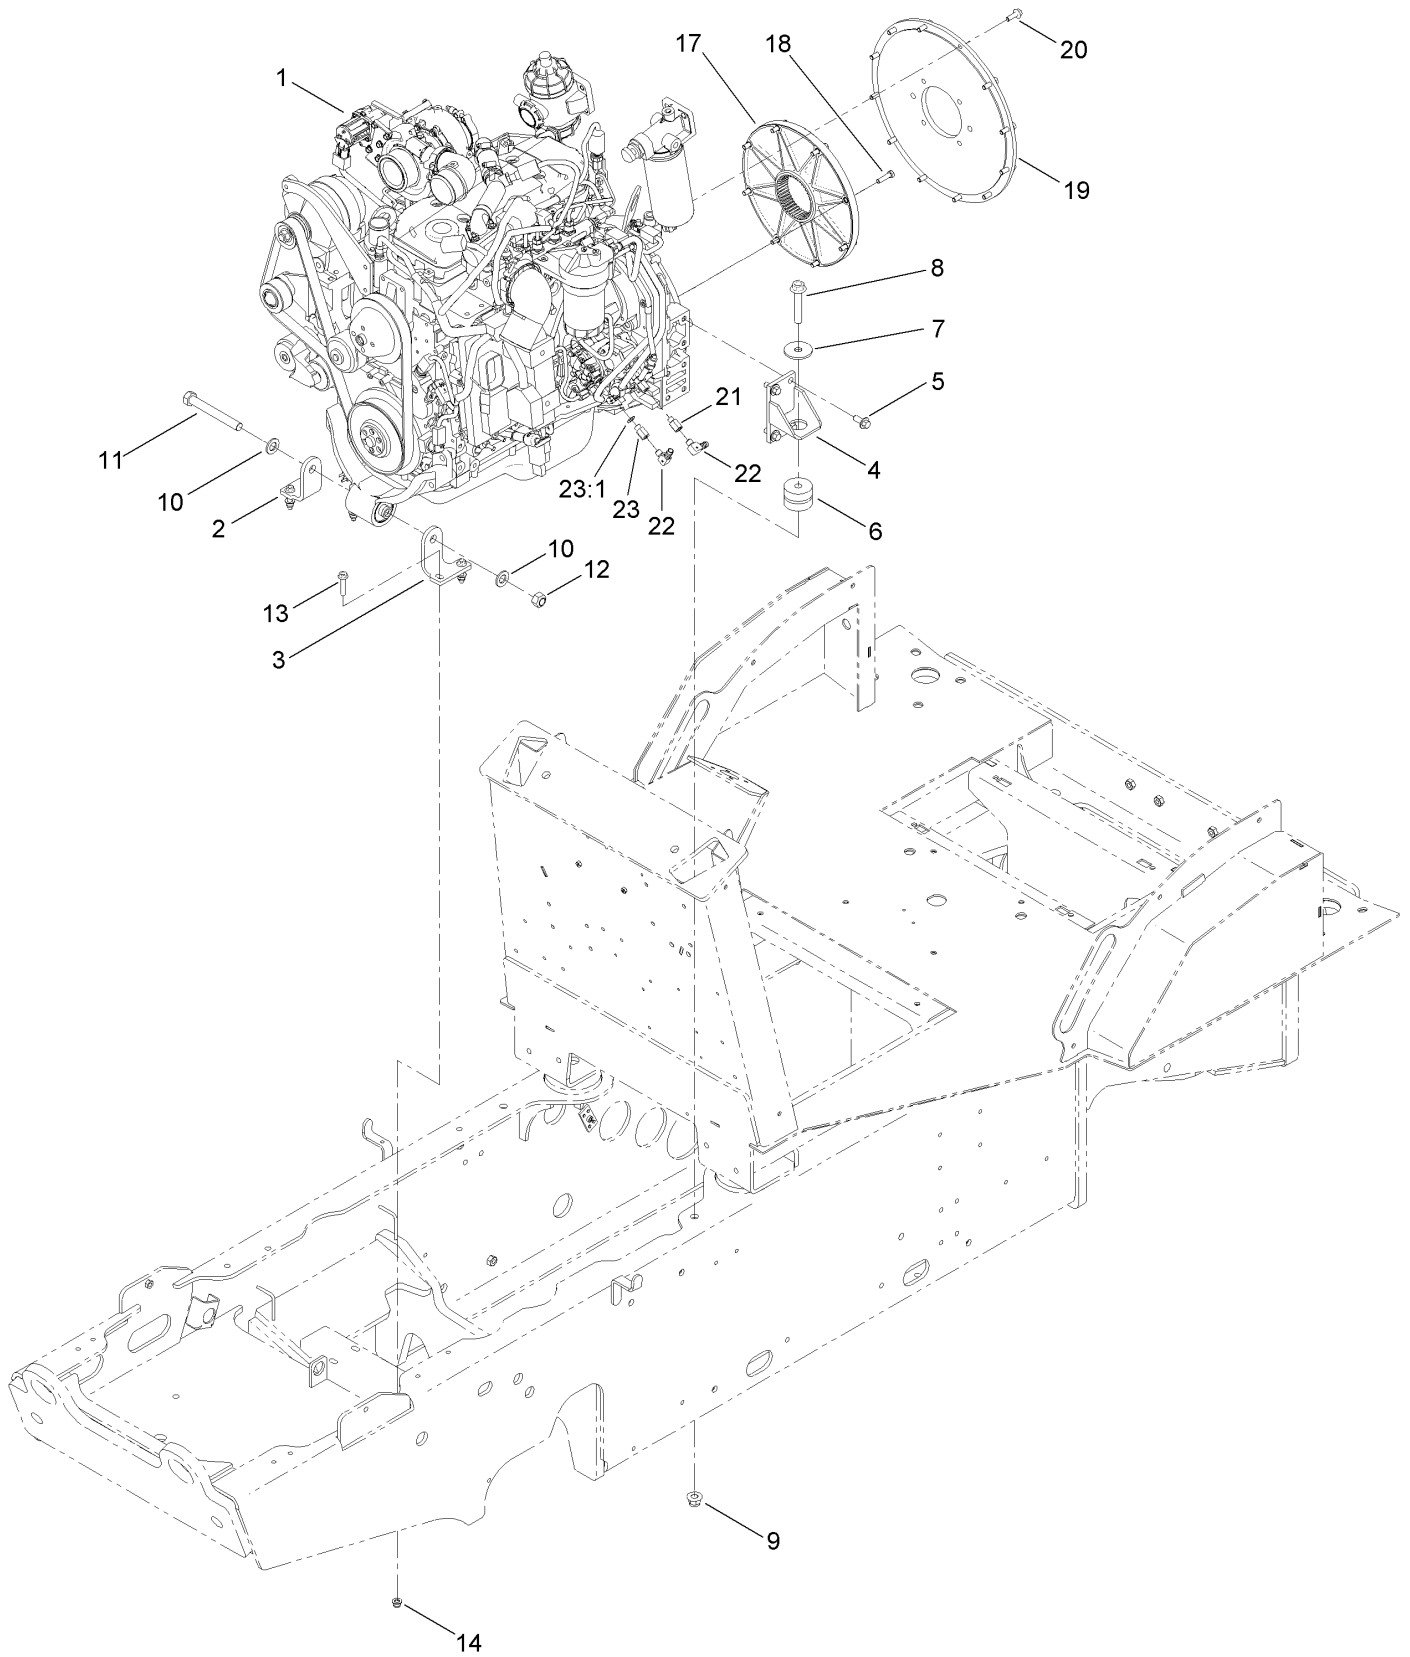


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine ASM ●	12	120-7252	1	Nut-Lock
2	127-1781-03	1	Bracket-Engine Support, LH	13	AU100333	4	Screw-Flange
3	127-1782-03	1	Bracket-Engine Support, RH	14	AU100527	4	Nut-Flange, Nylock
4	AU116622-03	2	Mount-Engine, Rear	17	AU8PD92006	1	Coupling-Drive, Nylon
5	33106-030	8	Screw-HHF	18	323-43	8	Screw-HH
6	AU116662	2	Isolator-Wear Plate, Green	19	AU360643A1	1	Plate-Mounting, Pump
7	AU496-81025	2	Washer	20	AU100877	12	Screw-HH
8	AU100366	2	Screw-Flange	21	AU120770	1	Fitting-Reducer
9	AU100529	2	Nut-HHF	22	127-3870	2	Fitting-Elbow, 90
10	AU496-11081	2	Washer	23	AU123748	1	Fitting-Reducer
11	AU426-1296	1	Screw-HH	23:1	AU121717	1	Seal-Fitting, Fuel

● Not serviced separately

 
Engine Heat Shield and Hose Assembly

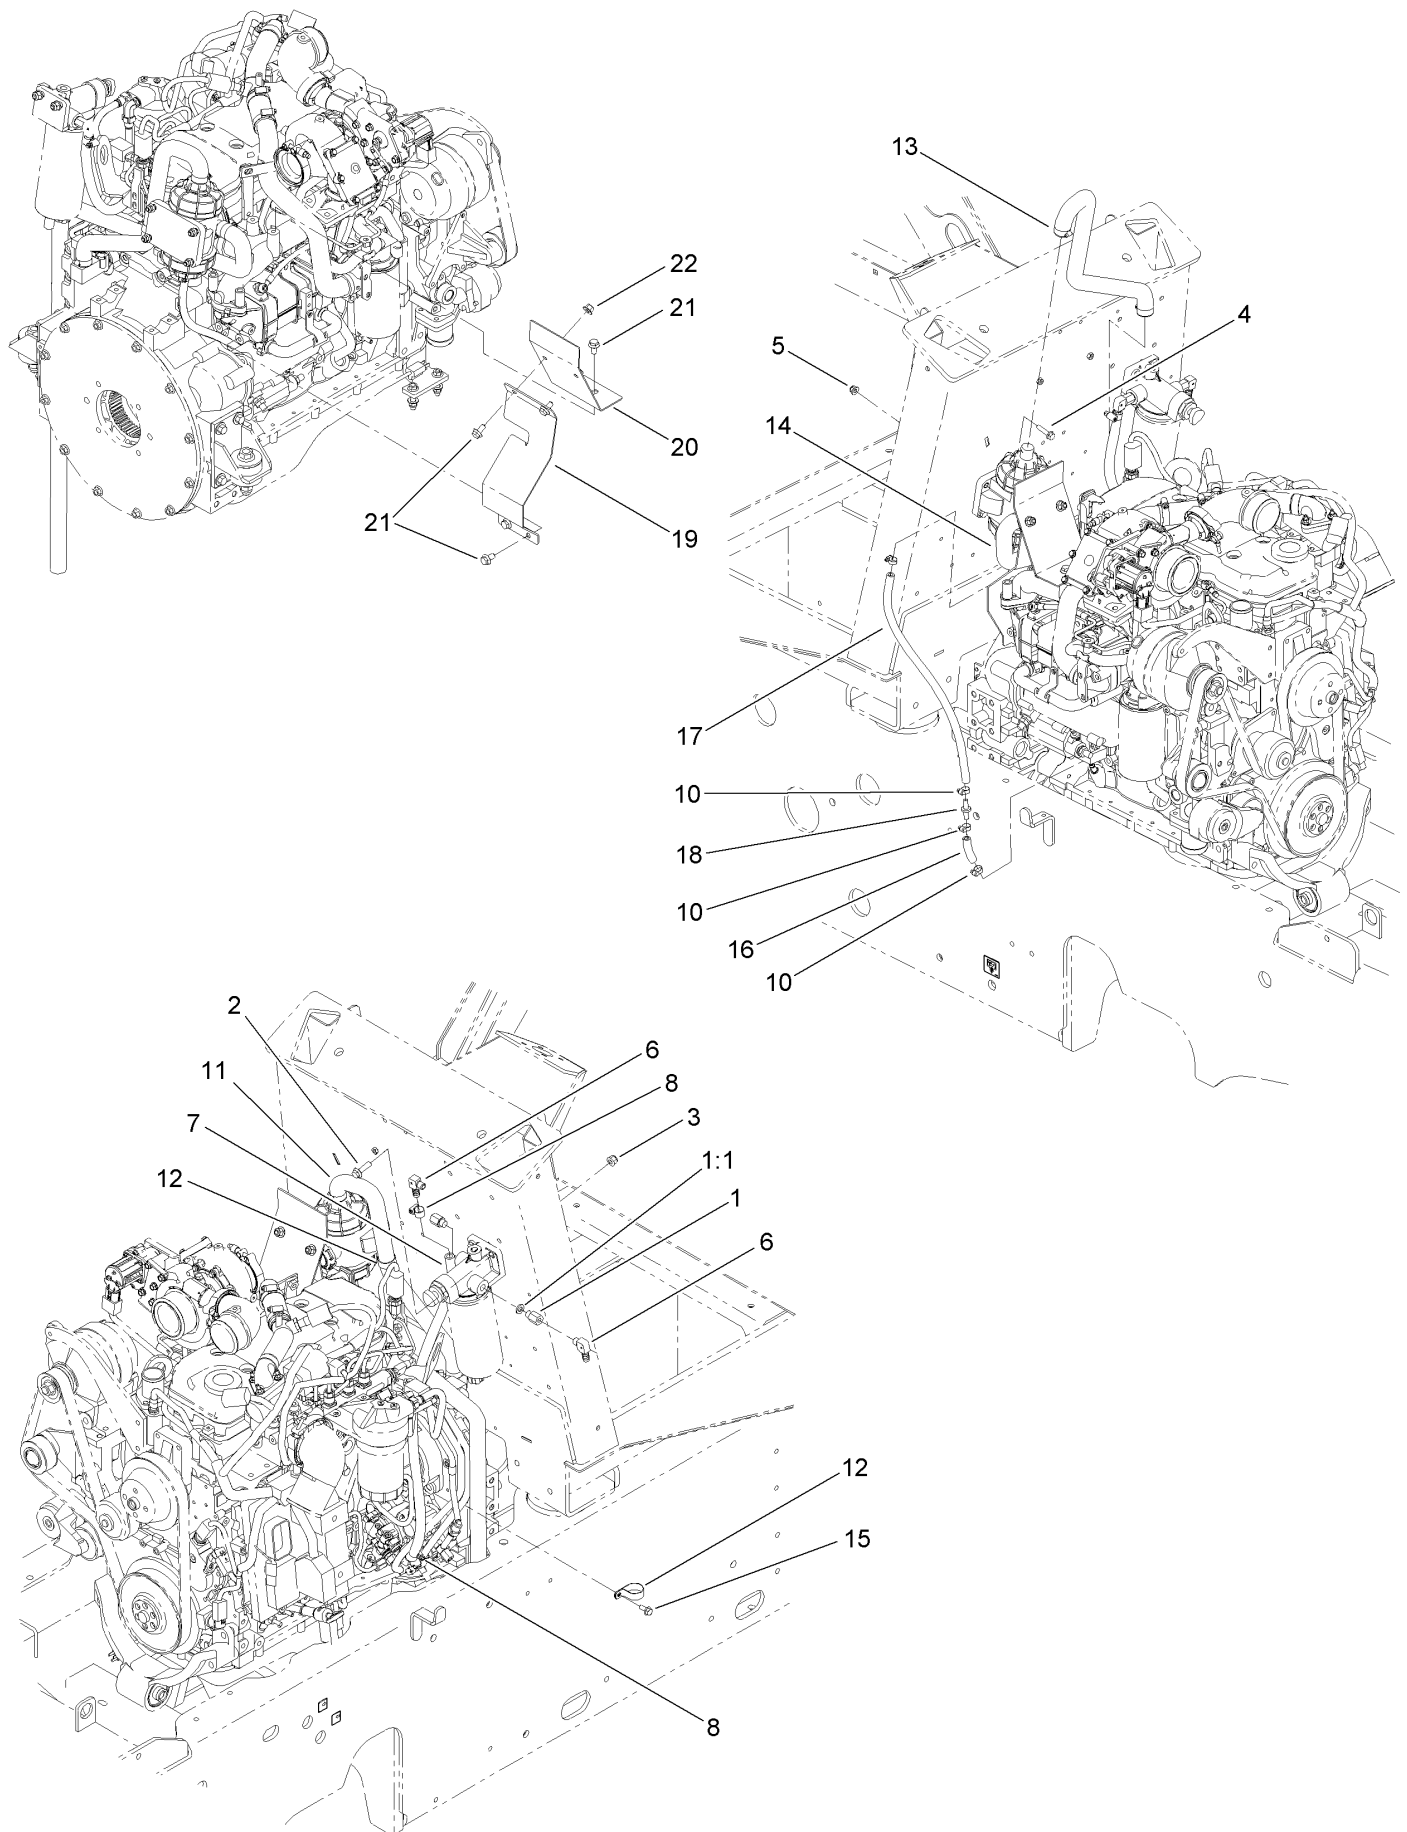

Engine Heat Shield and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU123748	2	Fitting-Reducer	12	2412-74	2	R-Clamp
1:1	AU121717	1	Seal-Fitting, Fuel	13	2412-34	3	Clamp-Hose
2	33105-035	2	Screw-HHF	14	127-1773	1	Hose
3	103-9511	2	Nut-Lock, NI	15	33104-020	1	Screw-HHF
4	33104-035	4	Screw-HHF	16	99-7375	1	Hose-Breather
5	104-3082	4	Nut-Lock, HHF	17	115-7642	1	Hose-Breather
6	127-3870	2	Fitting-Elbow, 90	18	131-0449	1	Valve-Check
7	127-1777	1	Hose-Fuel	19	131-0447	1	Plate-Heat Shield, Lower
8	2412-119	2	Clamp-Hose, Worm Drive	20	131-0448	1	Plate-Heat Shield, Upper
10	2412-108	4	Clamp-Worm	21	33105-020	6	Screw-HHF
11	127-1774	1	Hose	22	104-2611	2	Nut-HF

 Wheel and Drive Assembly

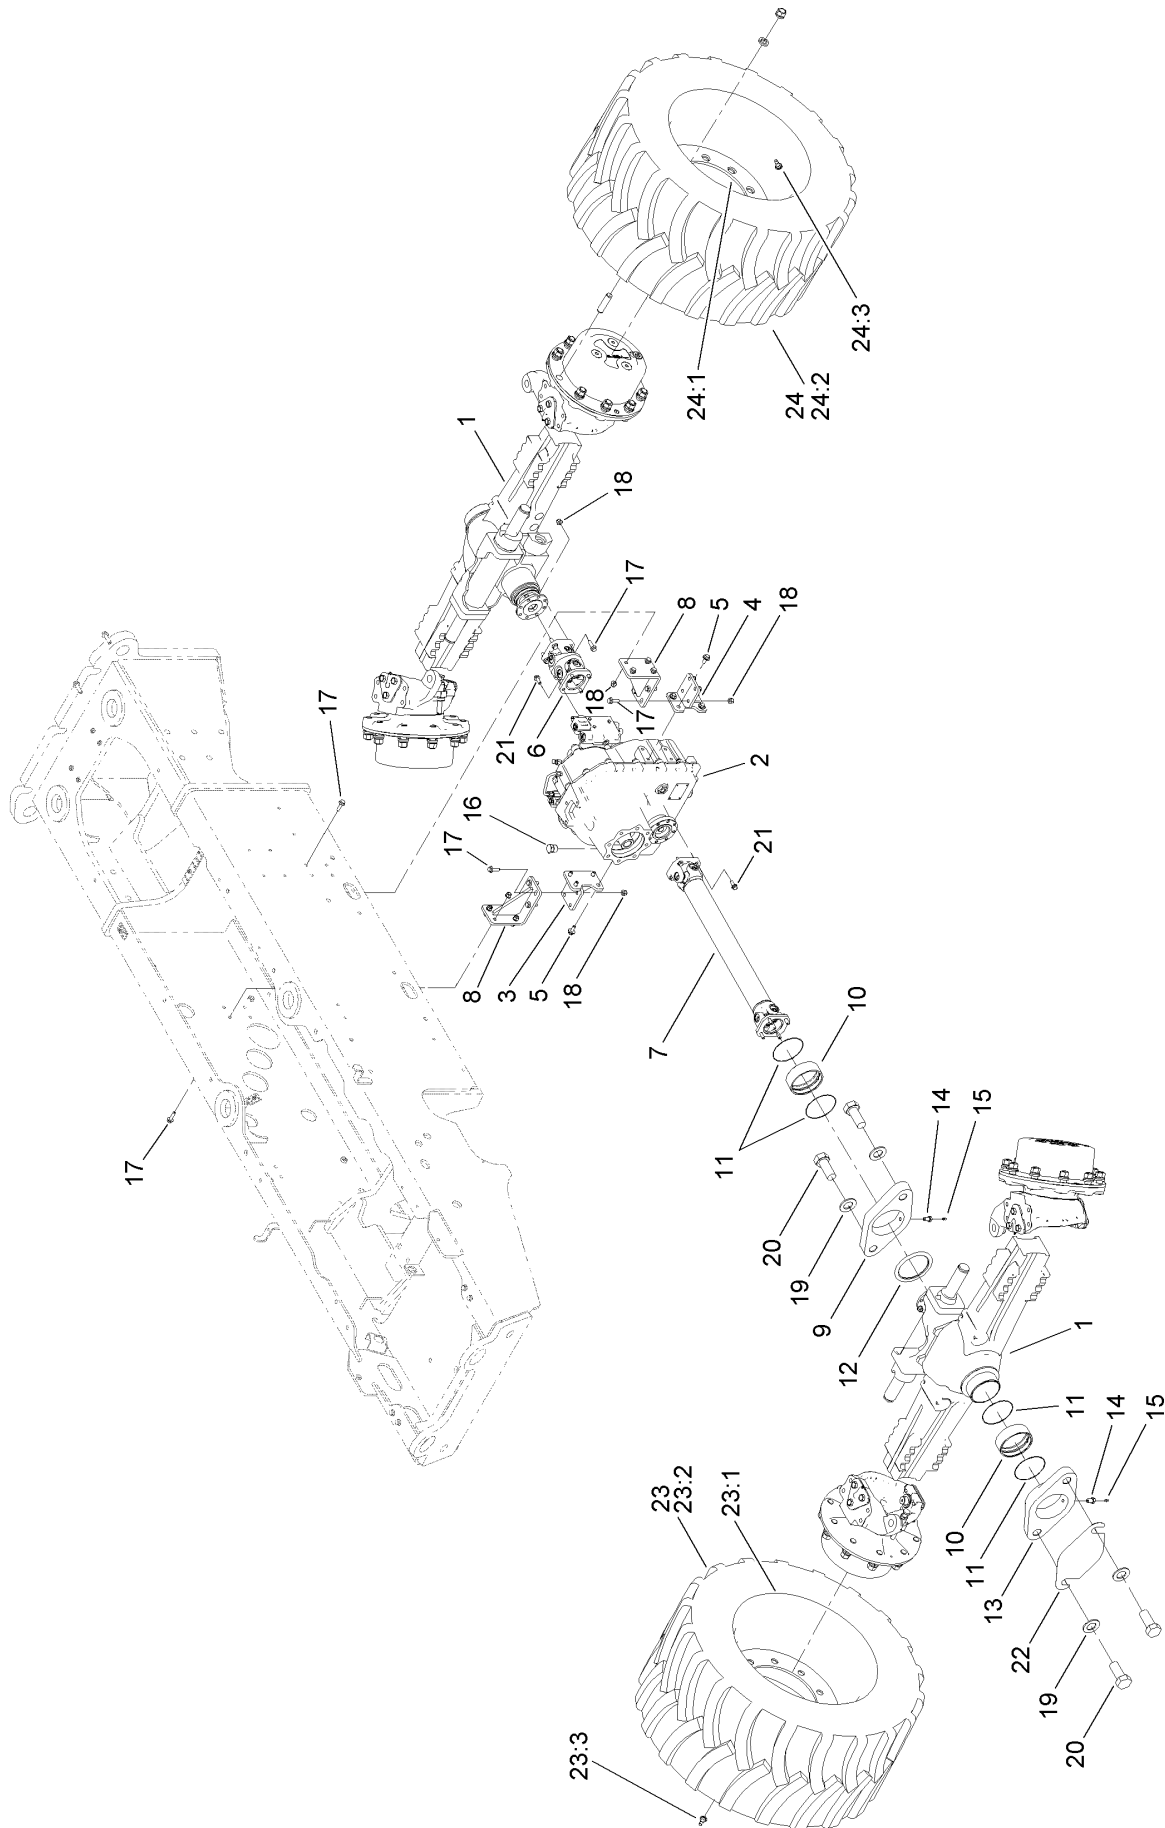


Wheel and Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106863-03	2	Axle ASM	16	AU217-414	1	Plug-HYD
2	AU106132	1	Transmission-2 Speed, Powershift	17	33105-035	24	Screw-HHF
3	AU106160-03	1	Mount-Transmission, RH	18	103-9511	24	Nut-Lock, NI
4	AU106134-03	1	Mount-Transmission, LH	19	AUH426858	4	Washer
5	33106-025	8	Screw-HHF	20	AU426-2048	4	Bolt
6	AU106121-03	1	Constant Velocity Joint ASM	21	108-1531	8	Screw-HHF
7	AU106109-03	1	Front Axle Drive Shaft ASM	22	AUH433359	1	Shim-Mount, Axle
8	AU106161-03	2	Mount-Transmission	23	125-6846	2	RH Tire ASM
9	AU407398A1-03	1	Housing-Mount, Trunion	23:1	125-6842	1	Wheel
10	AUK965265	2	Bushing-Pivot	23:2	125-6843	1	Tire-Trencher
11	AUK965267	4	O-Ring	23:3	232-24	1	Stem-Valve
12	AUK395023	1	Washer-Thrust	24	125-6845	2	LH Tire ASM
13	AUH433408-03	1	Housing-Mount, Trunion	24:1	125-6842	1	Wheel
14	127-1813	2	Adapter-Locating	24:2	125-6843	1	Tire-Trencher
15	302-5	2	Fitting-Grease	24:3	232-24	1	Stem-Valve

Axle Housing Assembly

 Axle Assembly No. AU106863

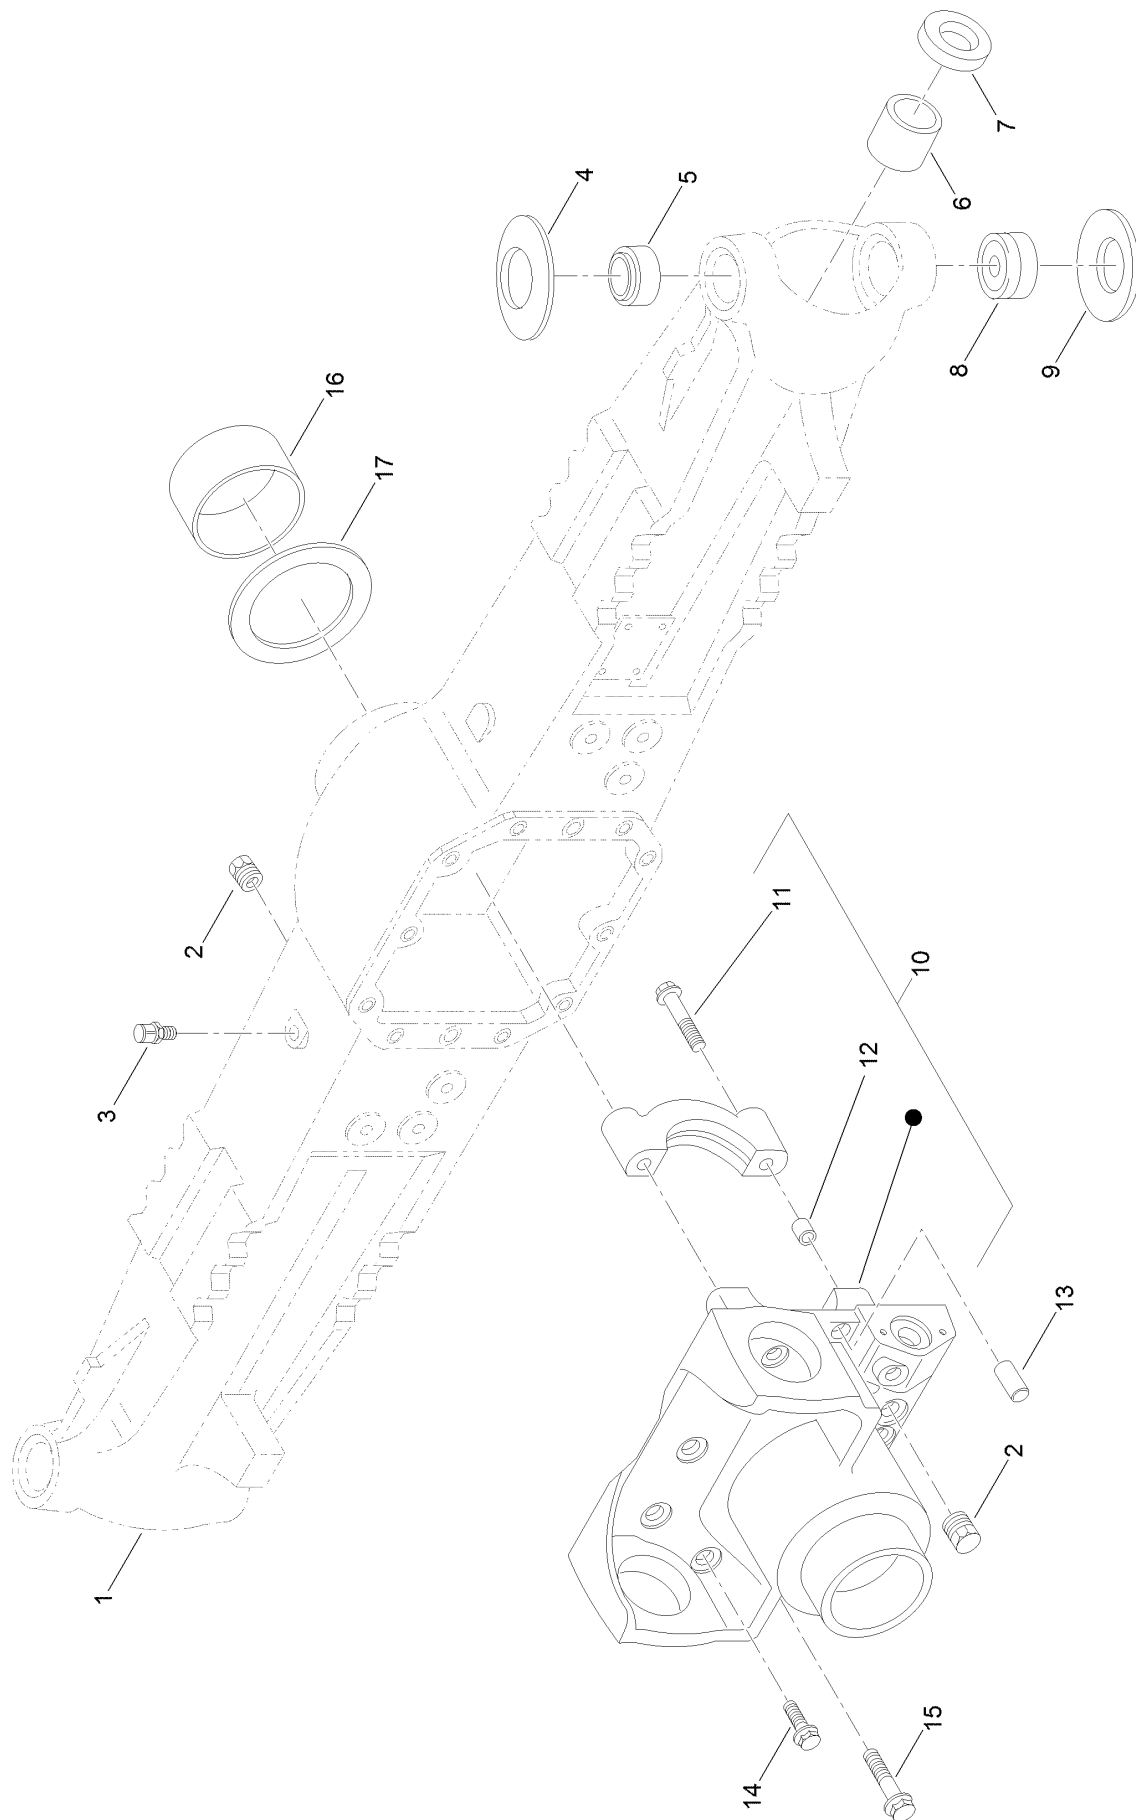


Axle Housing Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Axle ●	10	133-5207	1	Support-Differential
2	133-5200	2	Plug	11	133-5208	4	Bolt
3	AU1966149C2	1	Breather	12	133-5209	4	Bushing-Centering
4	133-5201	2	Washer-Belleville	13	133-5210	2	Pin
5	133-5202	2	Bushing	14	133-5211	5	Bolt
6	133-5203	2	Bushing	15	133-5212	5	Bolt
7	133-5204	2	Seal-Ring	16	133-5213	1	Bushing
8	133-5205	2	Bearing-Spherical	17	133-5214	1	Washer
9	133-5206	2	Washer-Belleville				

● Not serviced separately

 **Swivel Housings And Steering Cylinder Assembly
Axle Assembly No. AU106863**

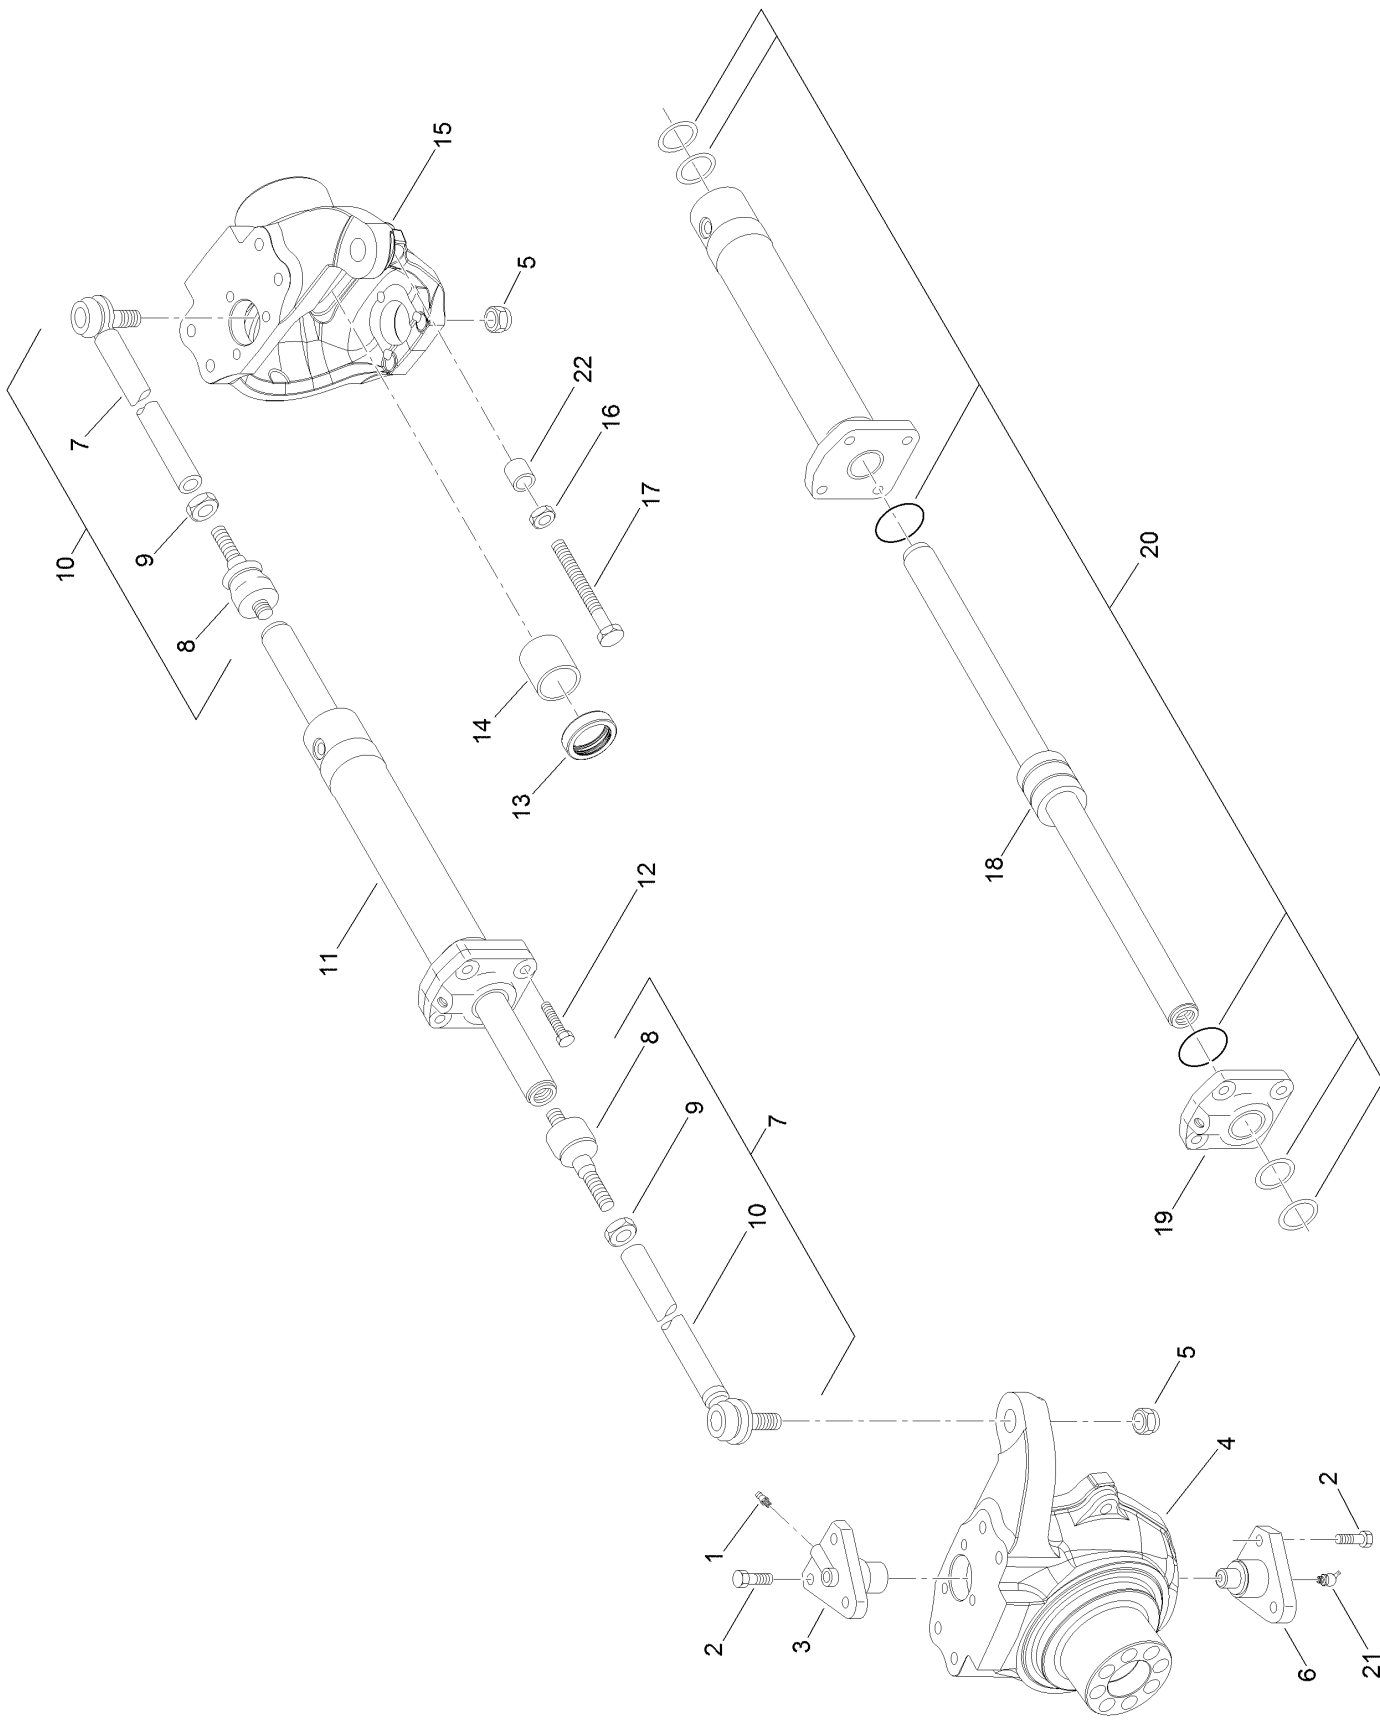


Swivel Housings And Steering Cylinder Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5215	2	Nipple-Greaser	12	133-5226	4	Bolt
2	133-5216	12	Bolt	13	133-5227	2	Seal-Ring
3	133-5217	2	Pin-King	14	133-5228	2	Bushing
4	133-5218	1	LH Swivel Housing ASM	15	133-5229	1	RH Swivel Housing ASM
5	133-5219	2	Nut	16	133-5230	2	Nut
6	133-5220	2	Pin-King	17	133-5231	2	Bolt
7	133-5221	2	Steering Arm ASM	18	133-5232	1	Rod
8	133-5222	2	Joint-Ball	19	133-5233	1	Head-Cylinder
9	133-5223	2	Nut	20	133-5234	1	Oil Seal Kit
10	133-5224	2	Rod-Tie	21	133-5235	2	Nipple-Greaser
11	133-5225	1	Steering Cylinder ASM	22	133-5236	2	Bushing

 Bevel Gear Set Assembly **Axle Assembly No. AU106863**

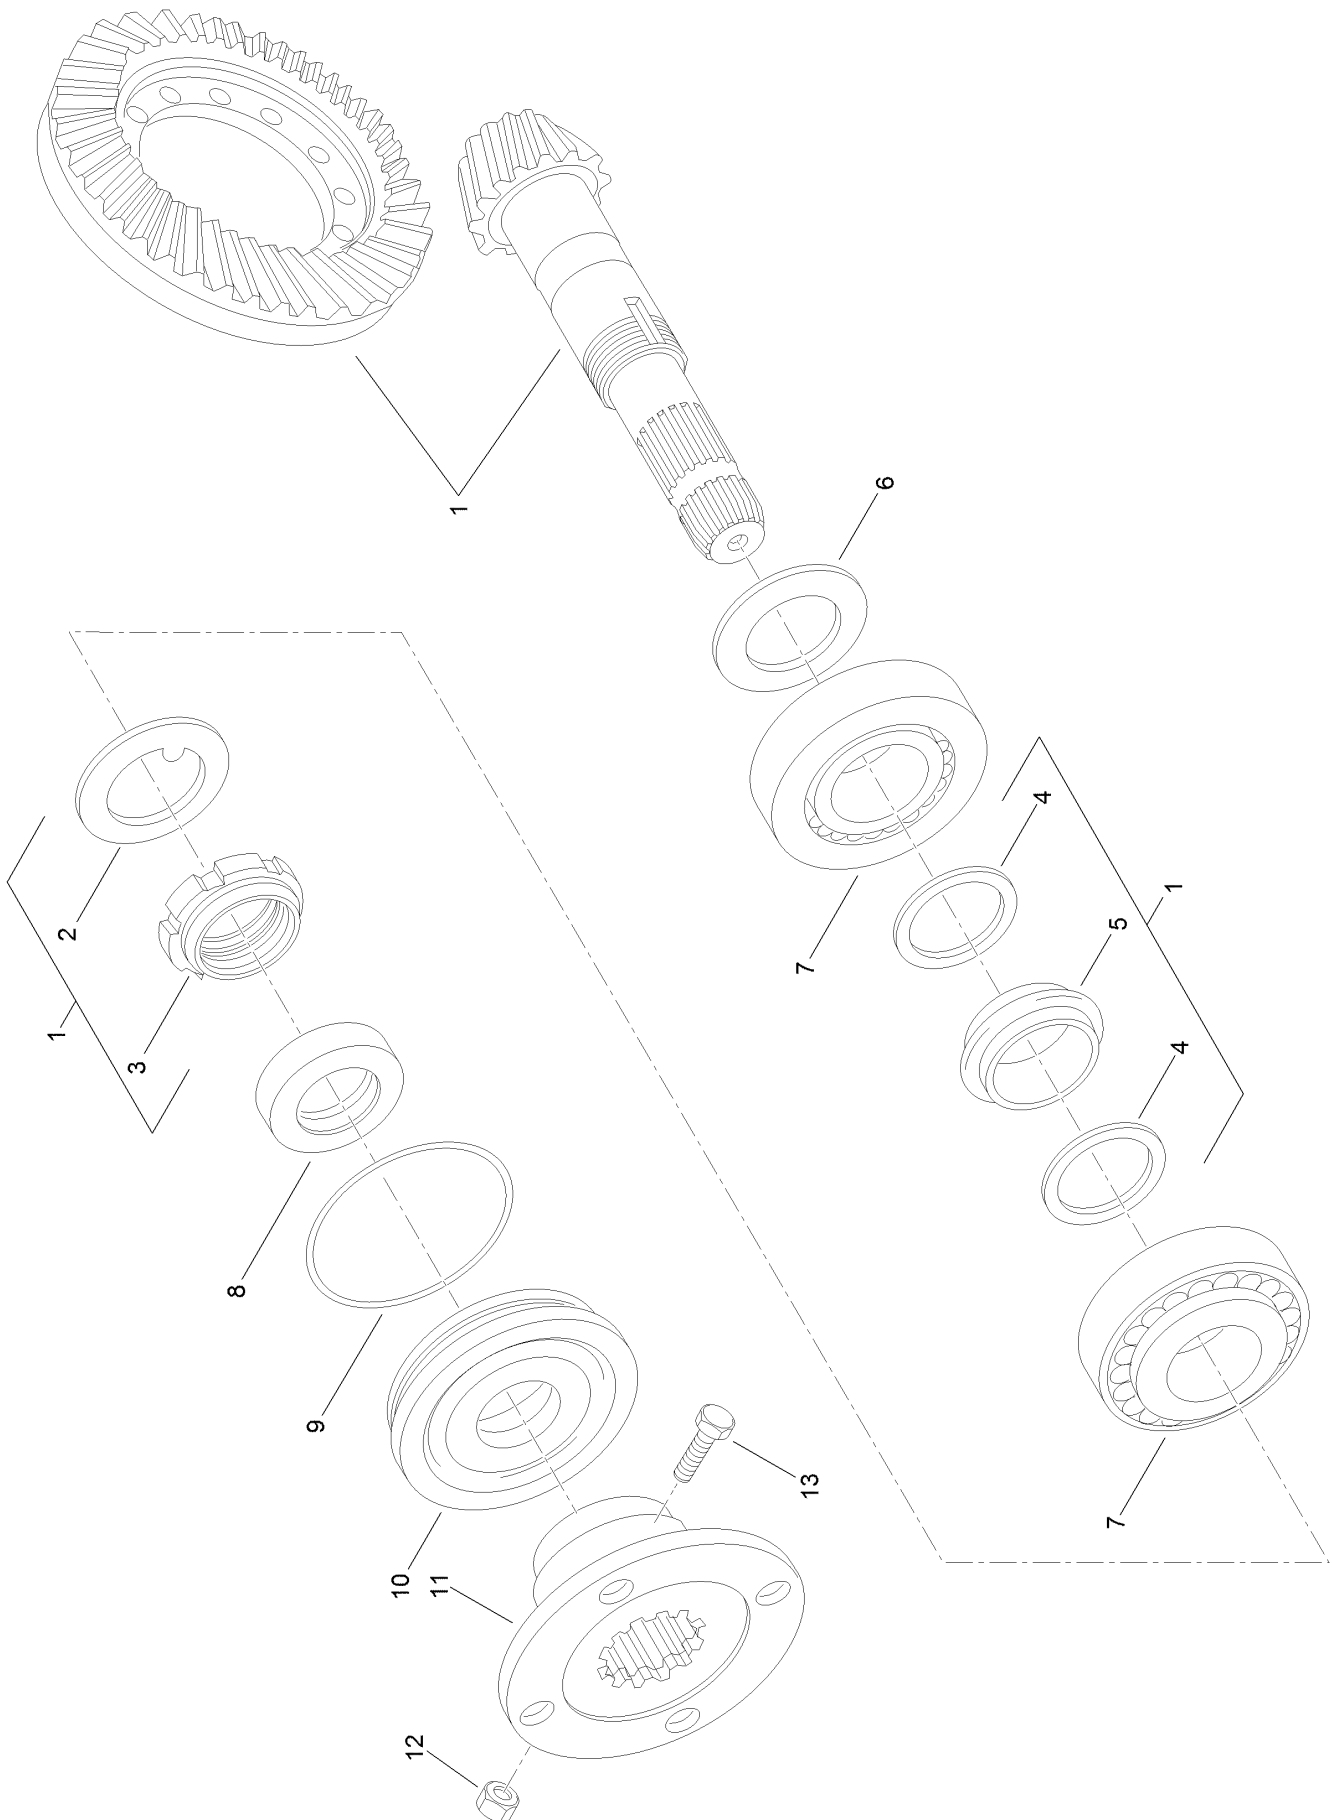


Bevel Gear Set Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5237	1	Bevel Gear Set	6	133-5245	1	Shim (2.80Mm)
2	133-5238	1	Lockwasher	6	133-5243	1	Shim (2.60Mm)
3	133-5239	1	Nut-Ring	6	133-5242	1	Shim (2.50Mm)
4	133-5240	2	Washer	6	133-5244	1	Shim (2.70Mm)
5	133-5241	1	Spacer-Collapsible	7	133-5252	2	Bearing
6	133-5251	1	Shim (3.40Mm)	8	133-5253	1	Ring-Seal, Oil
6	133-5250	1	Shim (3.30Mm)	9	133-5254	1	O-Ring
6	133-5249	1	Shim (3.20Mm)	10	133-5255	1	Cover-Seal, Oil
6	133-5248	1	Shim (3.10Mm)	11	133-5256	1	Flange
6	133-5247	1	Shim (3.00Mm)	12	133-5257	2	Nut
6	133-5246	1	Shim (2.90Mm)	13	133-5258	2	Bolt

 Differential Locking Assembly Axle Assembly No. AU106863

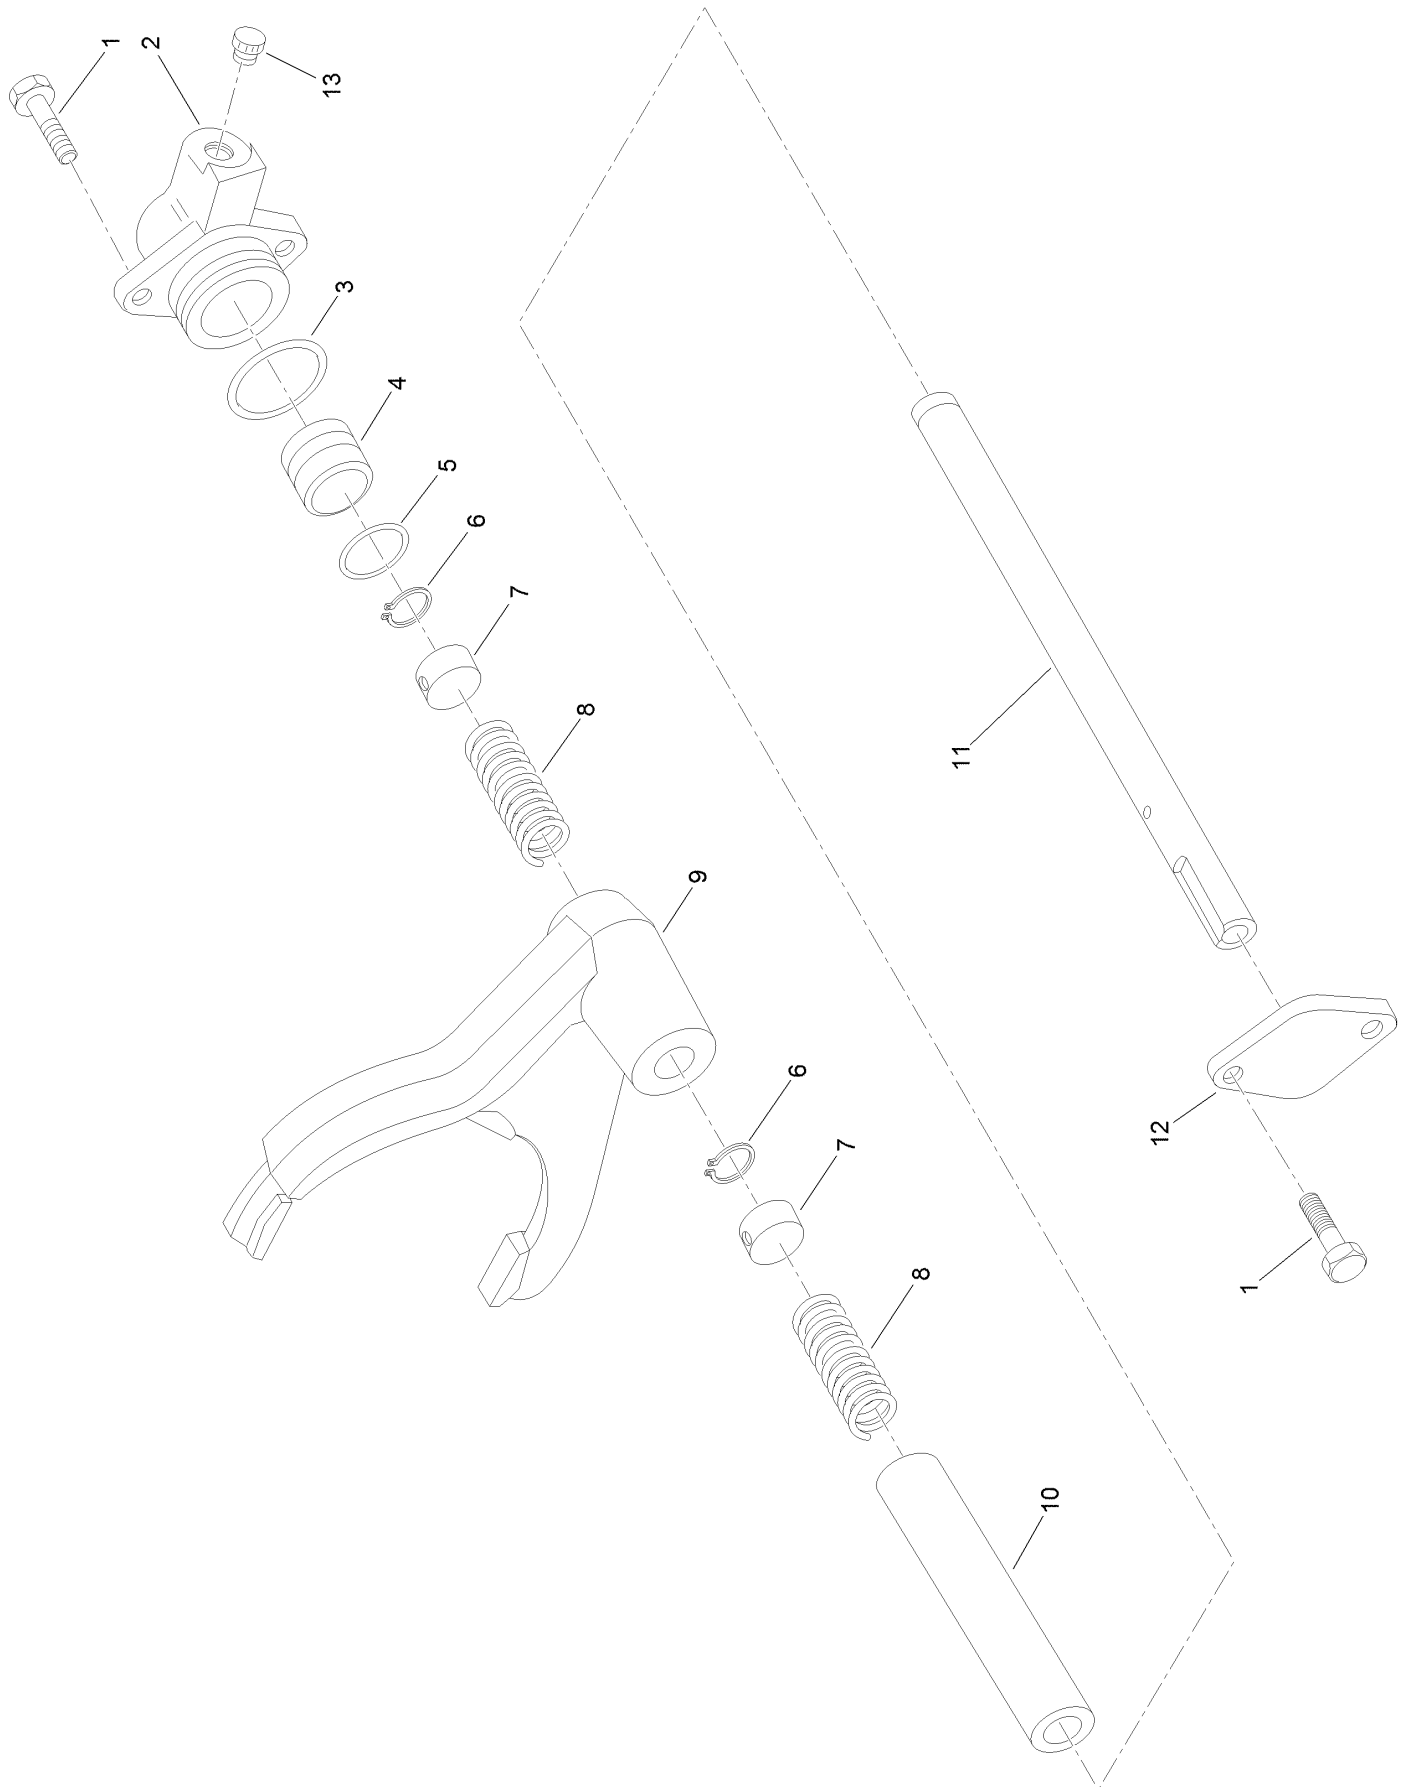


Differential Locking Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5259	4	Bolt	8	133-5266	2	Spring
2	133-5260	1	Support-Cylinder	9	133-5267	1	Fork
3	133-5261	1	O-Ring	10	133-5268	1	Bush
4	133-5262	1	Piston	11	133-5269	1	Shaft-Drive
5	133-5263	1	O-Ring	12	133-5270	1	Flange
6	133-5264	2	Ring-Snap	13	133-5271	1	Plug
7	133-5265	2	Spacer				

 Double U-Joint Assembly Axle Assembly No. AU106863

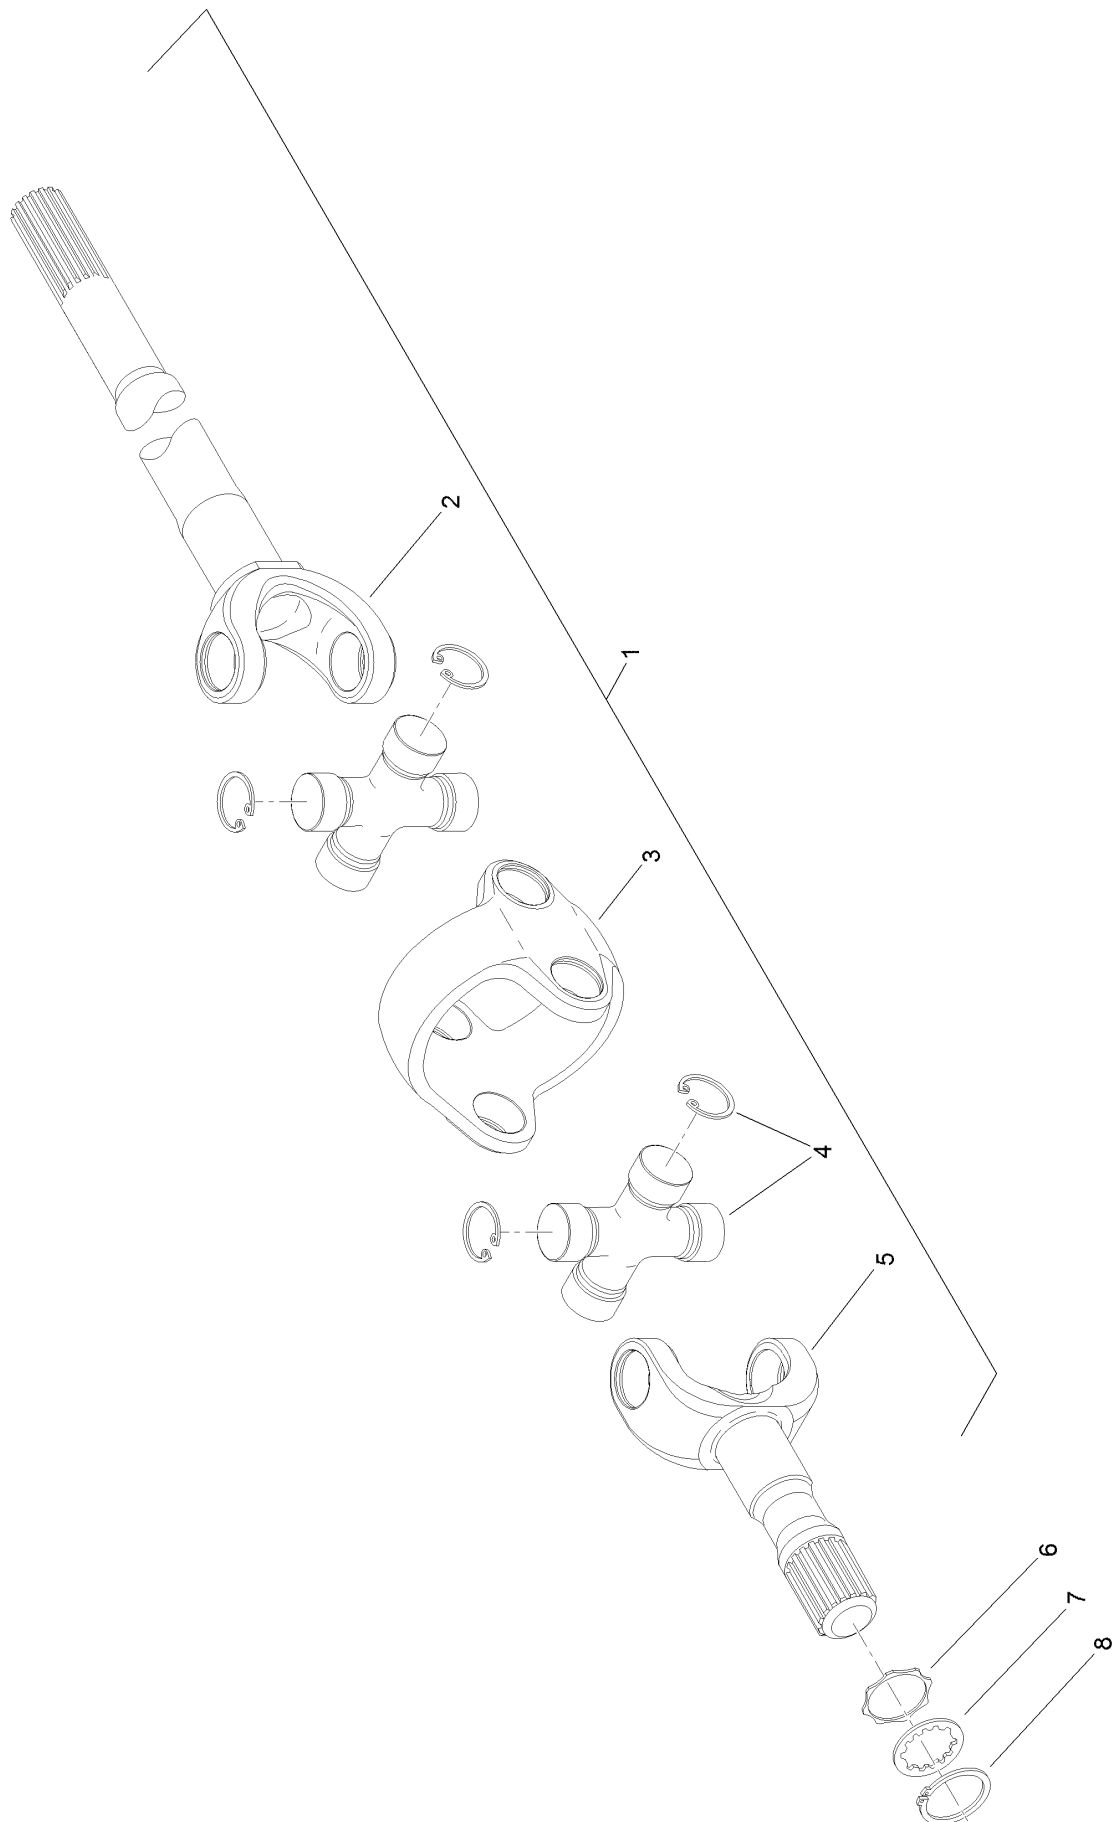


Double U-Joint Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5272	2	Double Joint ASM	5		2	Fork (Wheel Side) ●
2		2	Fork (Differential Side) ●	6	133-5273	2	Washer-Thrust
3		2	Body-Central ●	7	133-5274	2	Washer
4		4	Spider ●	8	133-5275	2	Ring-Snap

● Not serviced separately

 Wheel Hub Assembly Axle Assembly No. AU106863

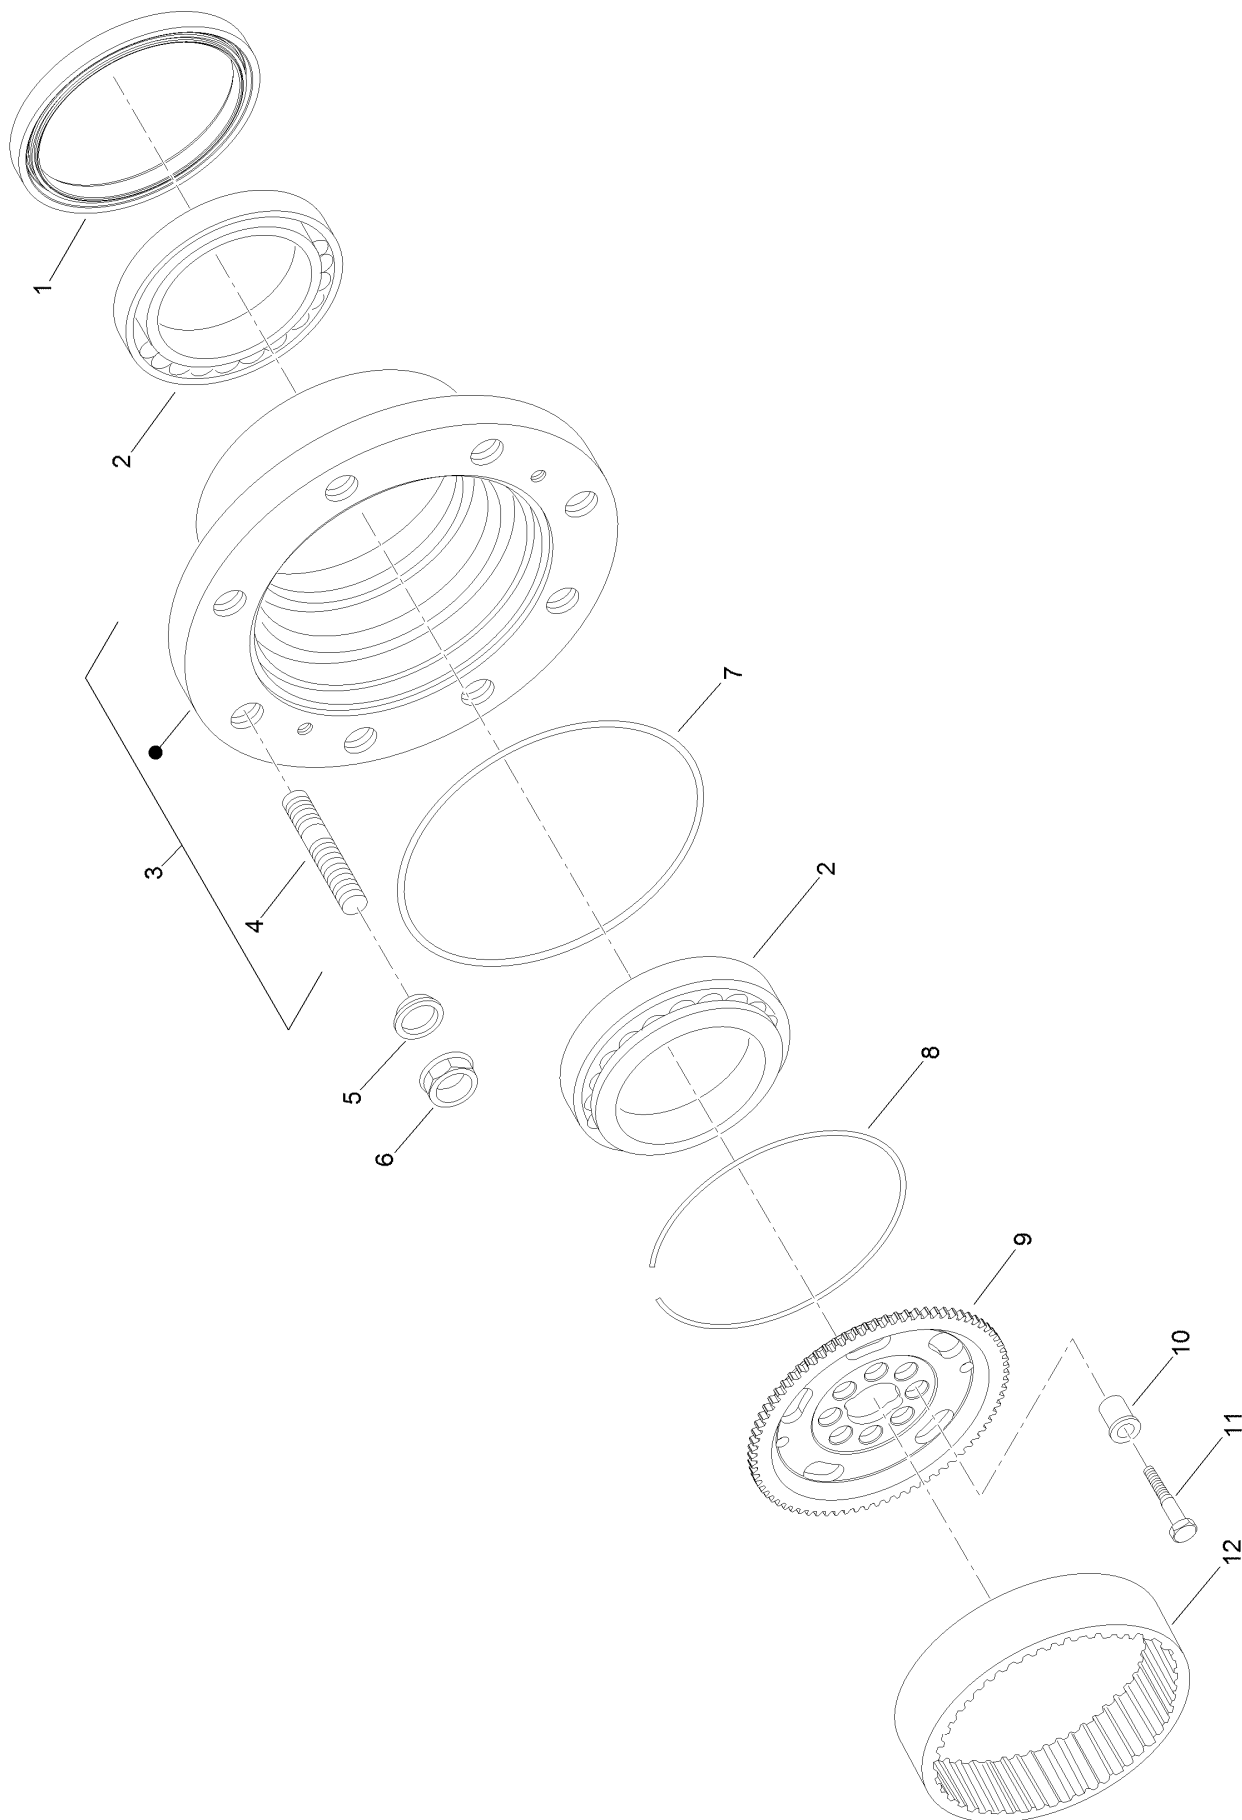


Wheel Hub Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5276	2	Ring-Seal	7	133-5282	2	O-Ring
2	133-5277	4	Bearing	8	133-5283	2	Ring
3	133-5278	2	Wheel Hub Kit	9	133-5284	2	Carrier-Wheel
4	AU120121	20	Stud-Wheel	10	133-5285	16	Bushing-Centering
5	AU120122	20	Washer-Lock	11	133-5286	16	Bolt
6	AU118806	20	Nut-Lug	12	133-5287	2	Gear-Crown

 Final Reduction Assembly Axle Assembly No. AU106863

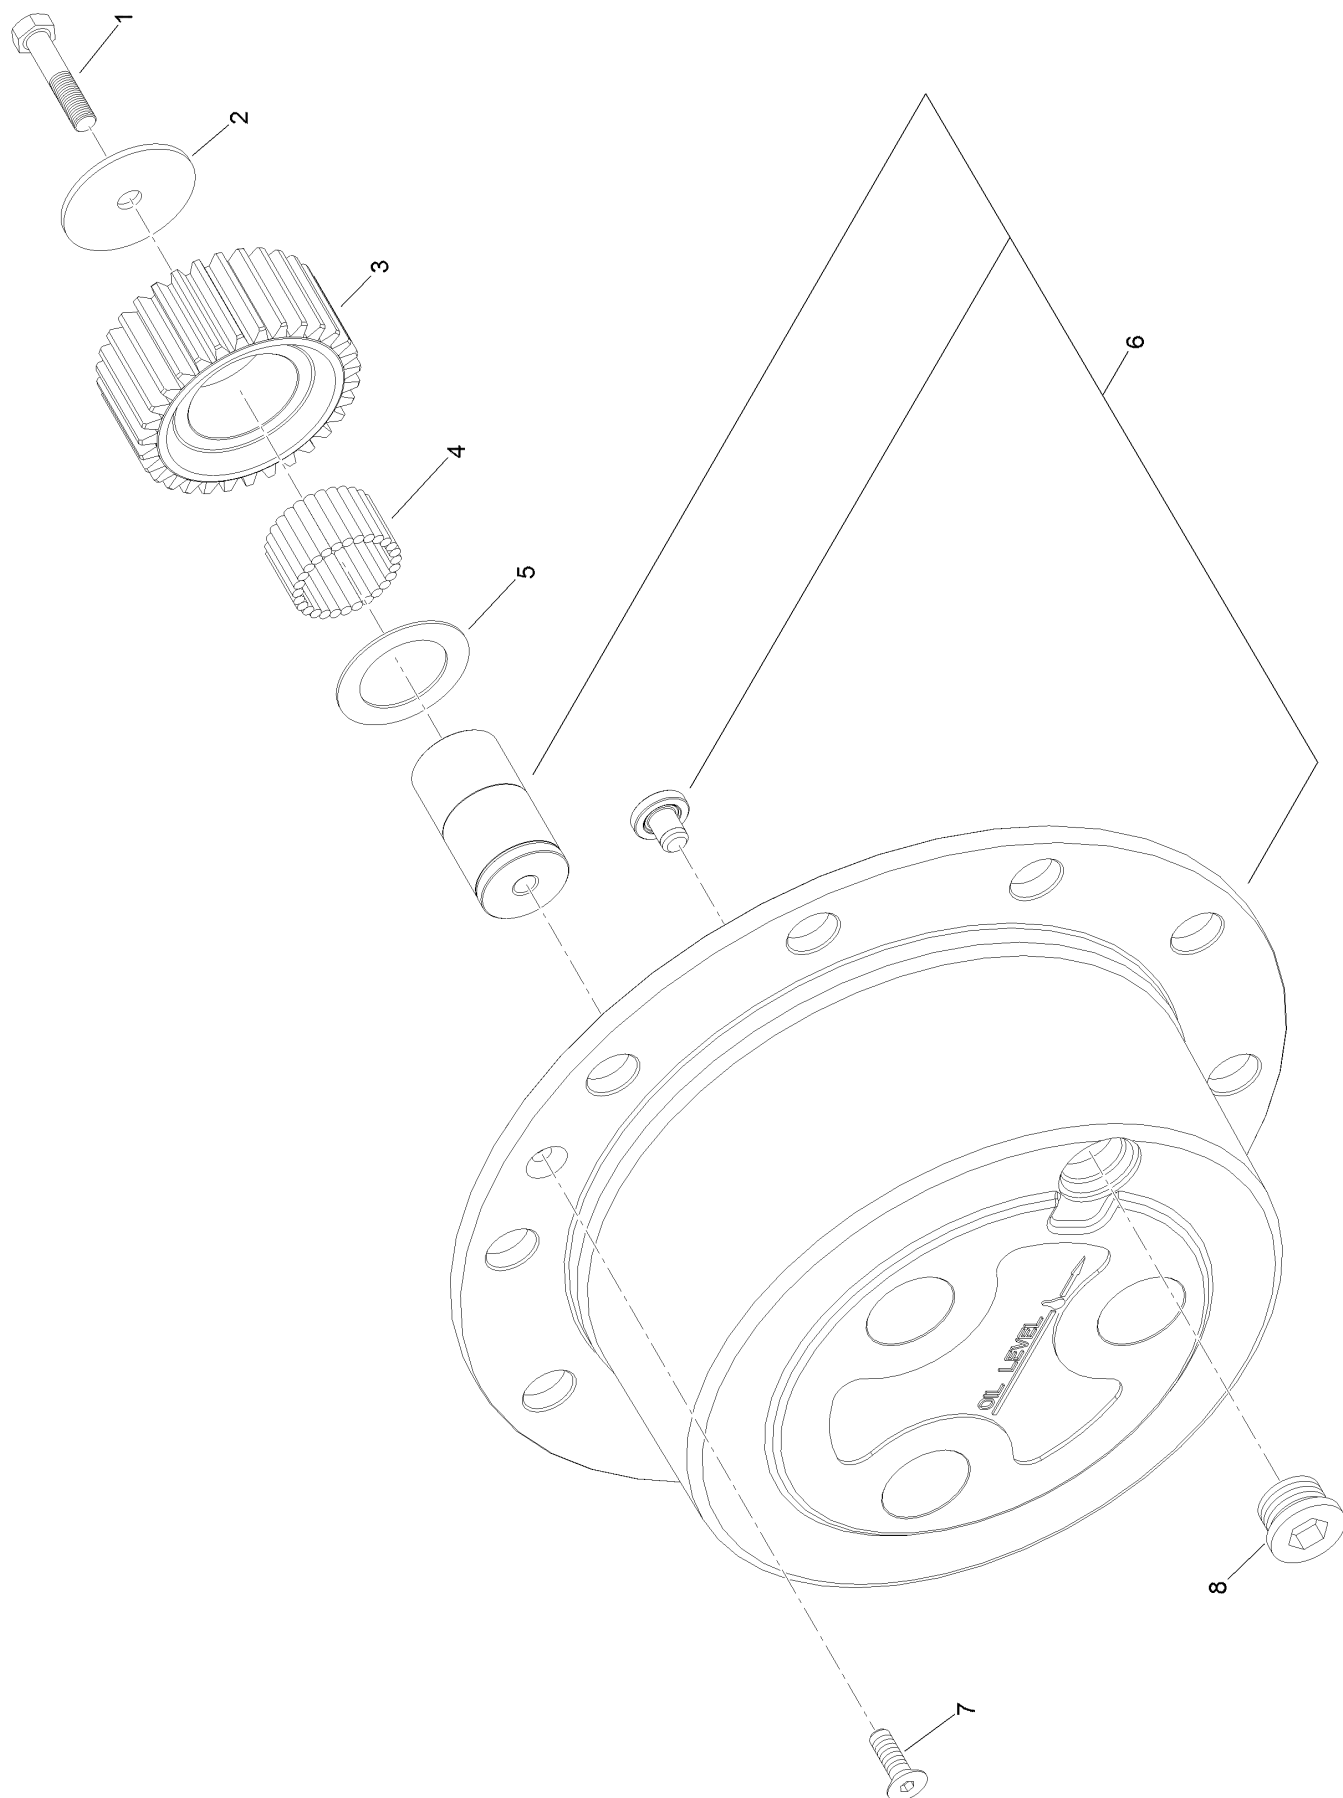


Final Reduction Assembly

Axle Assembly No. AU106863 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-5288	6	Bolt	5	133-5292	6	Washer
2	133-5289	6	Washer	6	133-5293	2	Planetary Carrier ASM
3	133-5290	6	Gear	7	133-5294	4	Bolt
4	133-5291	17	Bearing-Needle (By Tens)	8	133-5295	2	Plug

 Housing And Covers Assembly Transmission Assembly No. AU106132

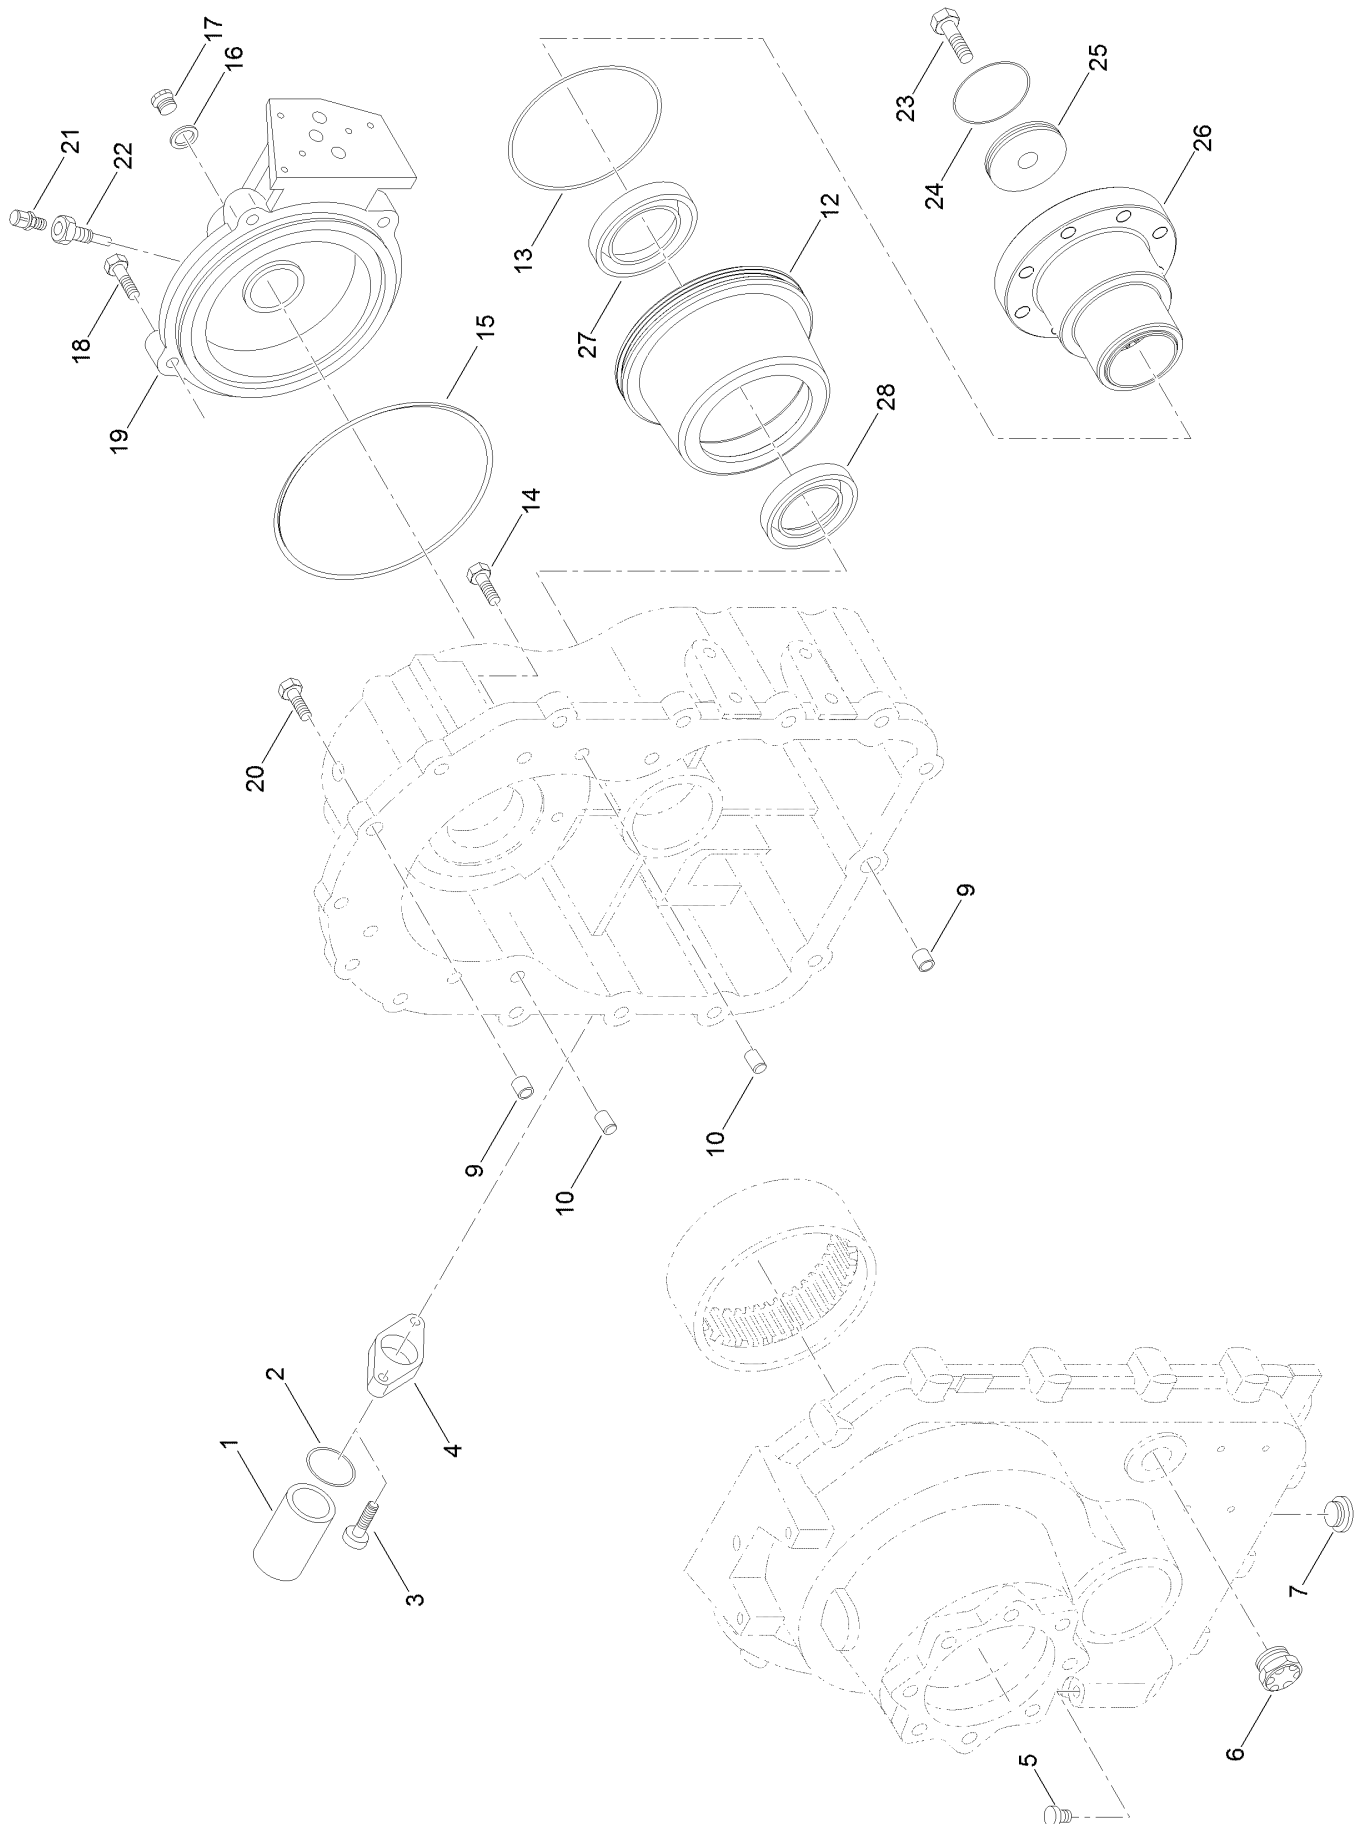


Housing And Covers Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU238-5221	1	O-Ring	16	AU934667R1	1	Ring-A
2	AU278534A1	1	Filter-Screen	17	AU181100A1	1	Plug
3	AU614-8030	2	Screw-Cap	18	AU614-12030	4	Screw-Cap
4	AU363577A1	1	Plug	19	AU363479A1	1	Housing-Cover, Park Brake
5	AU408499A1	1	Plug	20	AU614-10030	13	Bolt-HH
6	AU408481A1	1	Plug-Level, Oil	21	AU1966149C2	1	Breather
7	AU100557A1	1	Plug-Drain	22	AU123027	1	Extension-Breather
9	AU363466A1	2	Bushing	23	AU614-12040	1	Bolt-HH
10	AUK260177	2	Pin-Dowel	24	AU238-5136	1	O-Ring
12	AU106434	1	Shaft-Output	25	AU438402A1	1	Washer
13	AU106429	1	O-Ring	26	AU408477A1	1	Flange
14	AU844-10035	6	Bolt-Hex Flg	27	AU363487A1	1	Seal-Lip
15	AU238-5263	1	O-Ring	28	AU363476A1	1	Seal-Lip

 Planetary Carrier Assembly Transmission Assembly No. AU106132

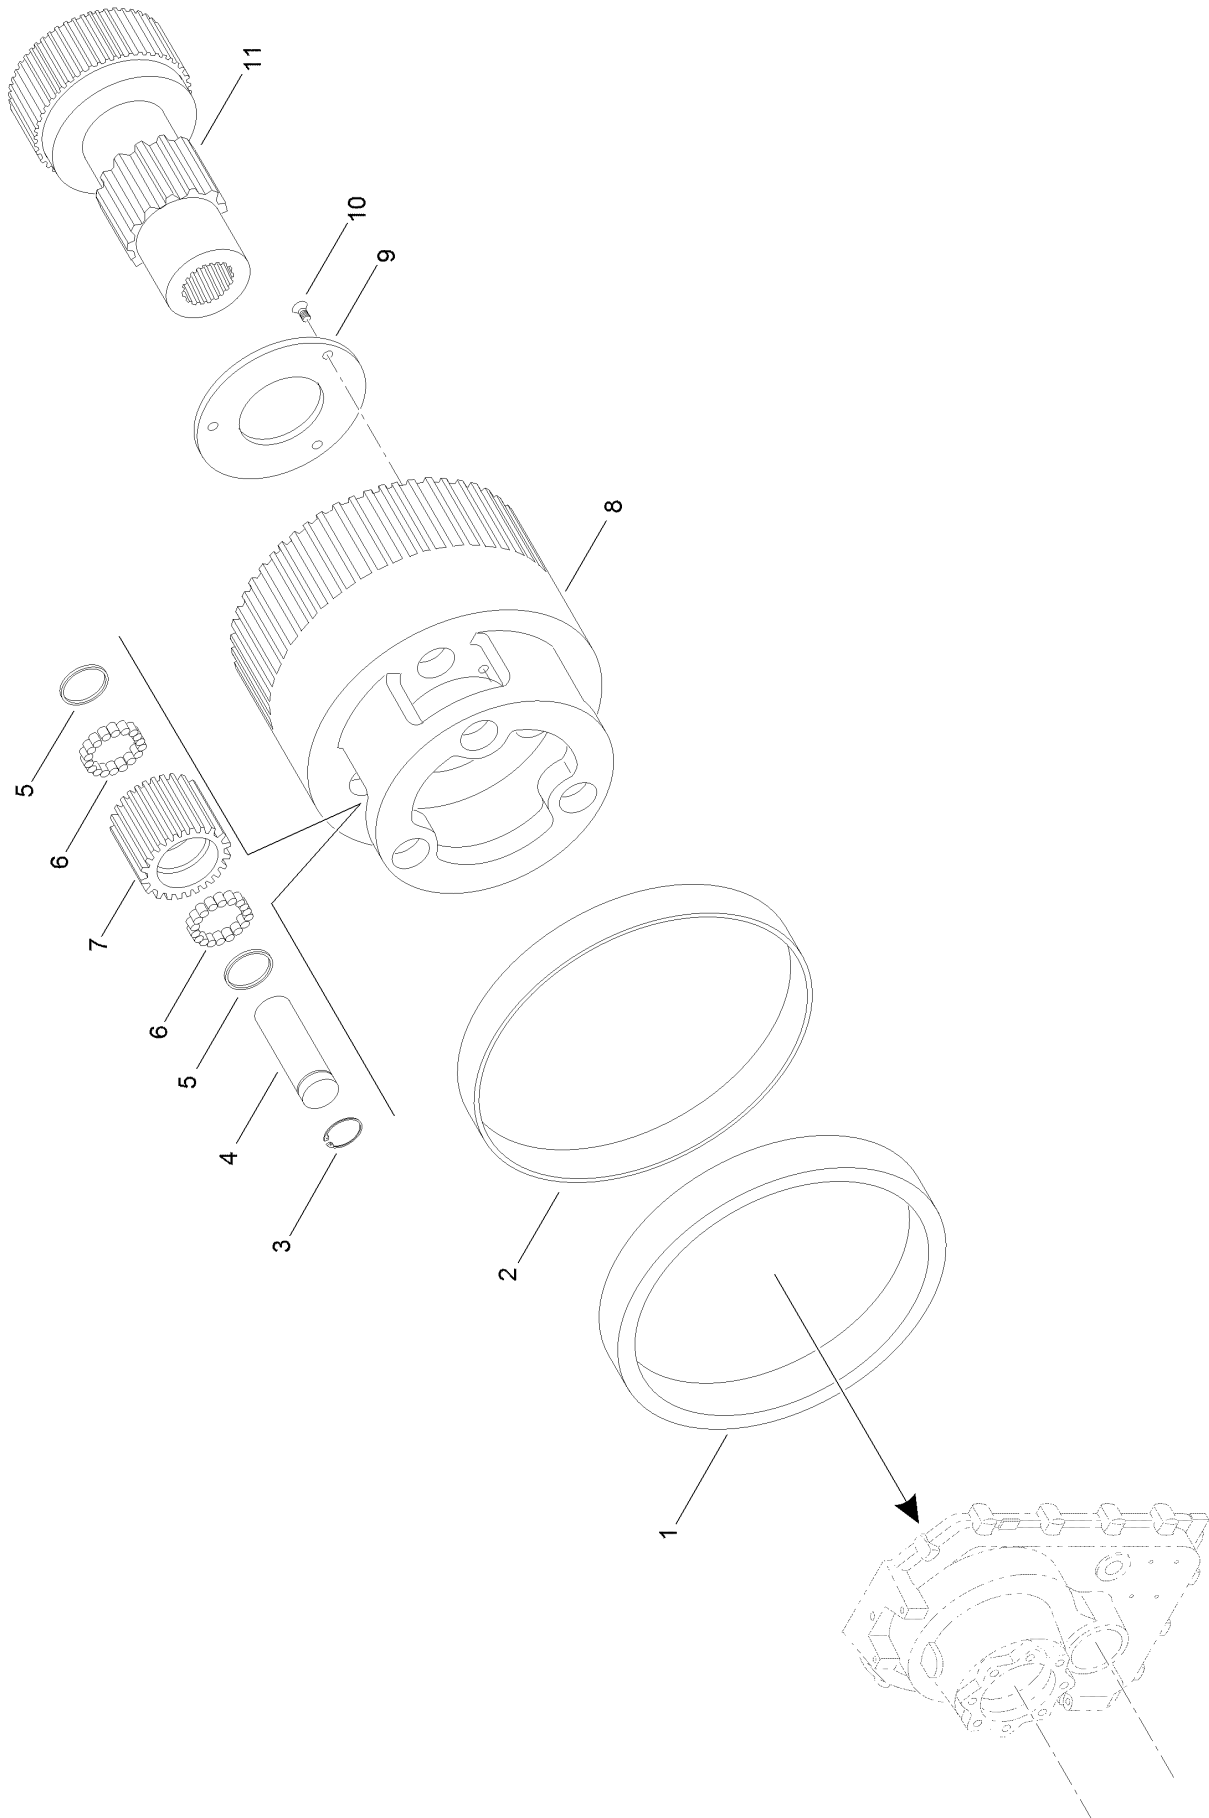


Planetary Carrier Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU408493A1	1	Bushing
2	AU408494A1	1	Bushing
3	AU800-2121	3	Ring-Retaining, Int
4	AU363464A1	3	Pin-Carrier
5	AU363457A1	6	Washer
6	AU247550A1	10	Bearing-Needle

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	AU363458A1	3	Gear-Planetary
8	AU363456A1	1	Gear-Hub, Planetary
9	AU408476A1	1	Washer-Thrust
10	AU806-6012	3	Bolt
11	AU363452A1	1	Shaft-Sun Gear, 30T

 Clutch Shaft Assembly Transmission Assembly No. AU106132

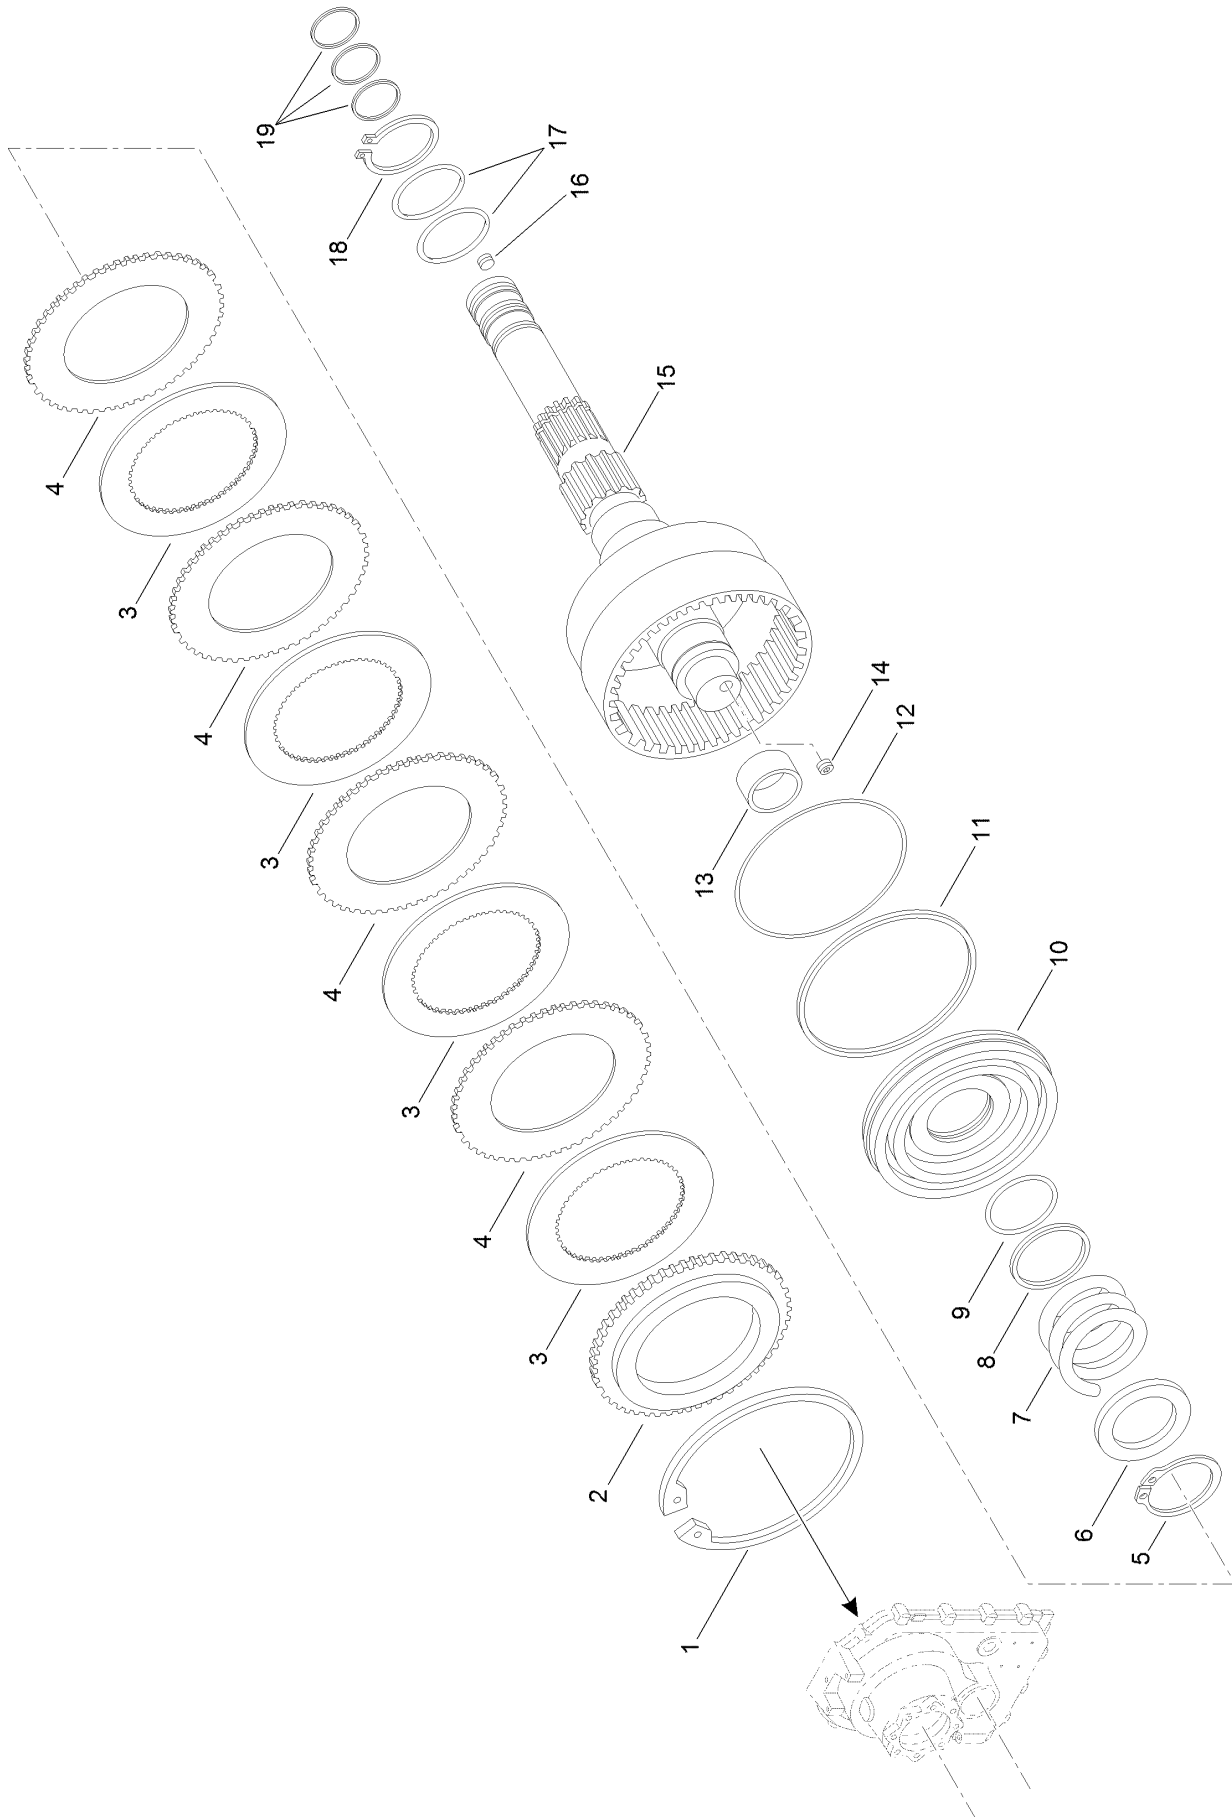


Clutch Shaft Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU345337A1	1	Ring	10	AU329889A1	1	Piston-Clutch, PTO
2	AU345336A1	1	Plate-Backing, Clutch	11	AU329896A1	1	Seal-Piston, External
3	AU345334A1	4	Plate-Friction	12	AU238-5158	1	O-Ring
4	AU345335A2	4	Plate-Separator	13	AU408480A1	1	Bushing
5	AU100-16175	1	Ring-Retaining	14	AU408479A1	1	Plug-M10X1
6	AUA188044	1	Retainer-Return Spring, Piston	15	AU408482A1	1	Clutch Shaft ASM
7	AUA188080	1	Spring-Return, Piston	16	AUD142898	2	Plug
8	AUA159297	1	Seal	17	AUK261826	2	Seal-Transmission
9	AU238-5137	1	O-Ring	18	AU800-1152	1	Ring-Retaining, EXT
				19	AUA175509	3	Ring-Sealing, Shaft

Clutch Bell Assembly

 Transmission Assembly No. AU106132

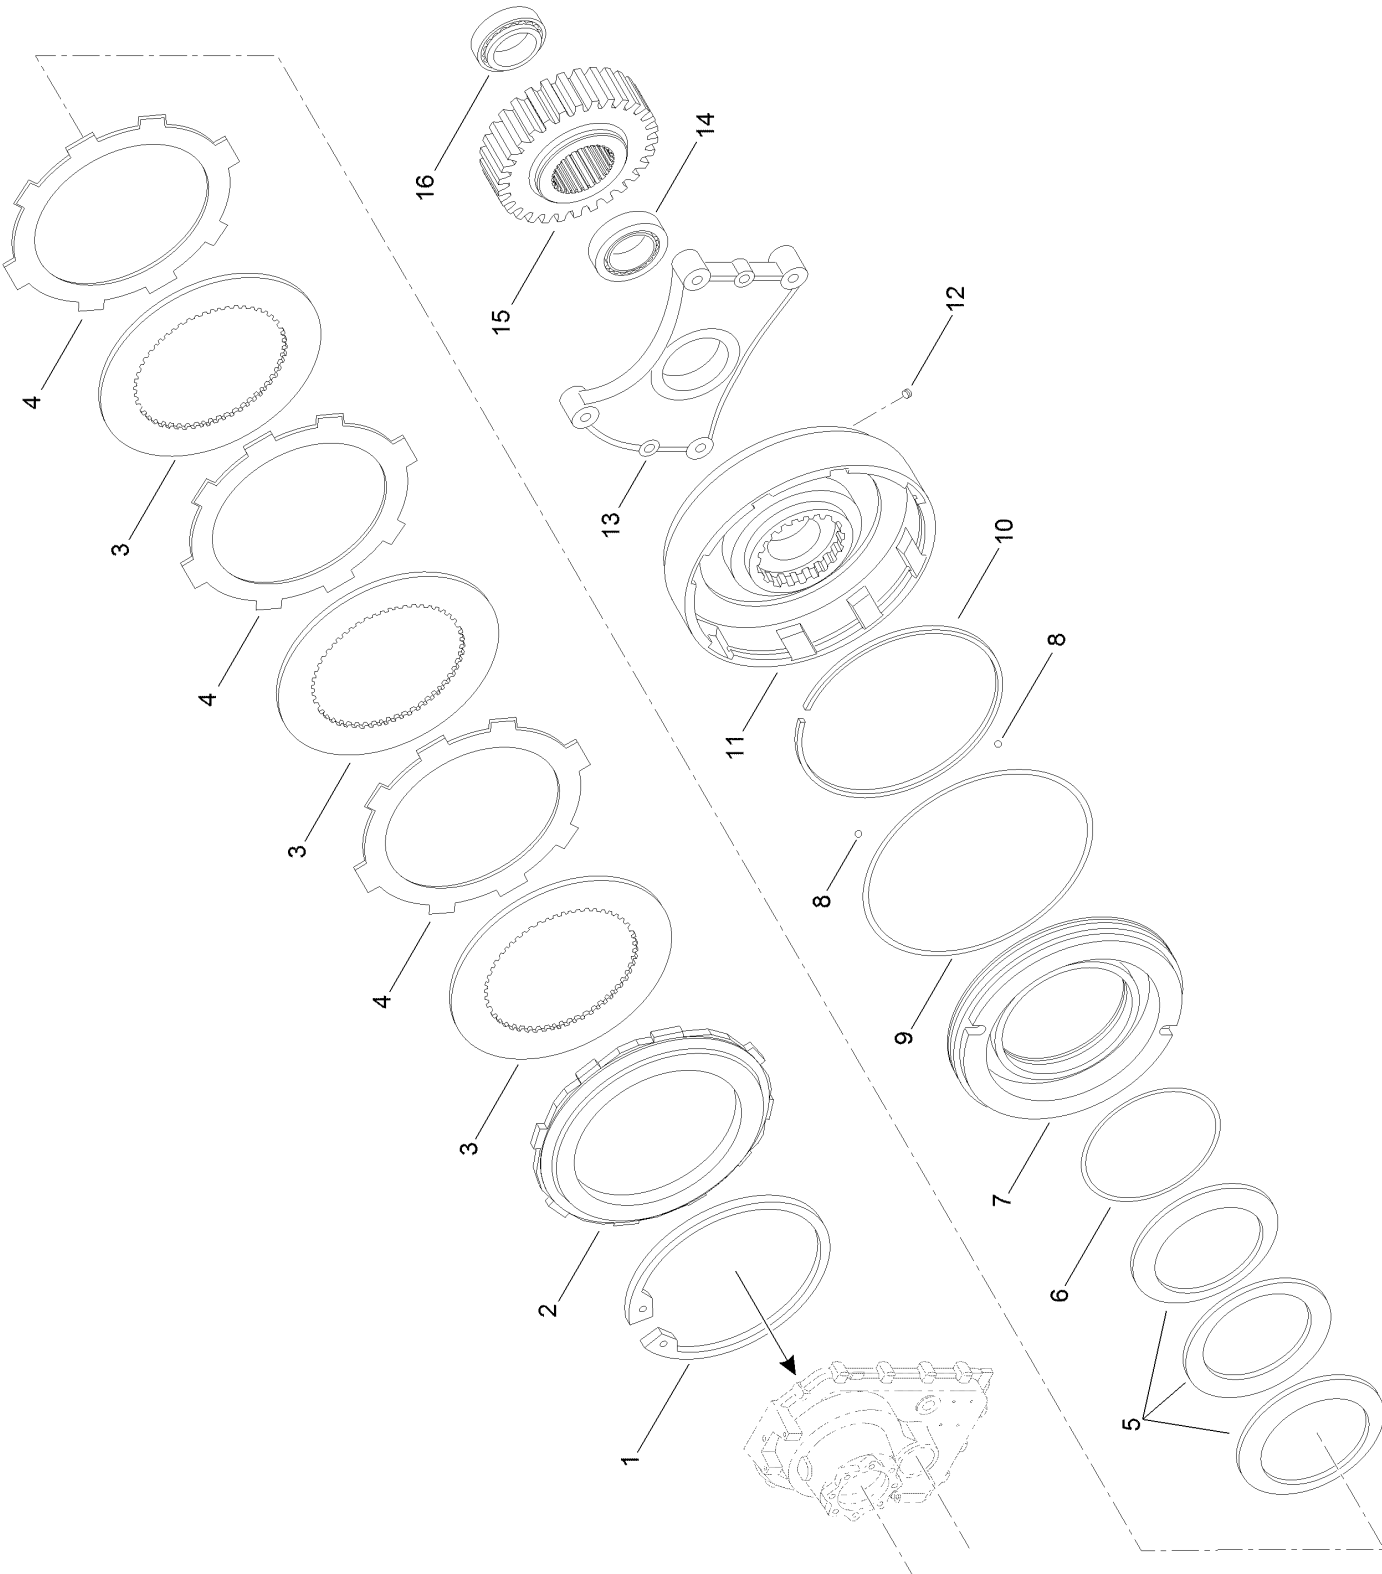


Clutch Bell Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU1963876C1	1	Ring-Snap, Int
2	AU363463A1	1	Plate-Back
3	AU1285975C2	3	Disc
4	AU1285974C1	3	Plate-Separator
5	AU93129C1	3	Washer-Cushion, Clutch
6	AU238-5160	1	O-Ring
7	AU363460A1	1	Piston-Clutch
8	AU511-1060	2	Ball

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	AU238-5174	1	O-Ring
10	AU408498A1	2	Ring-External
11	AU363459A1	1	Housing-Clutch
12	AU408497A1	4	Rivet
13	AU363469A1	1	Housing-Web, Center
14	AU389105A1	1	Bearing-Taper
15	AU363470A1	1	Gear-Drive, Drop Set
16	AU389103A1	1	Bearing-Taper

 Brakes Assembly Transmission Assembly No. AU106132

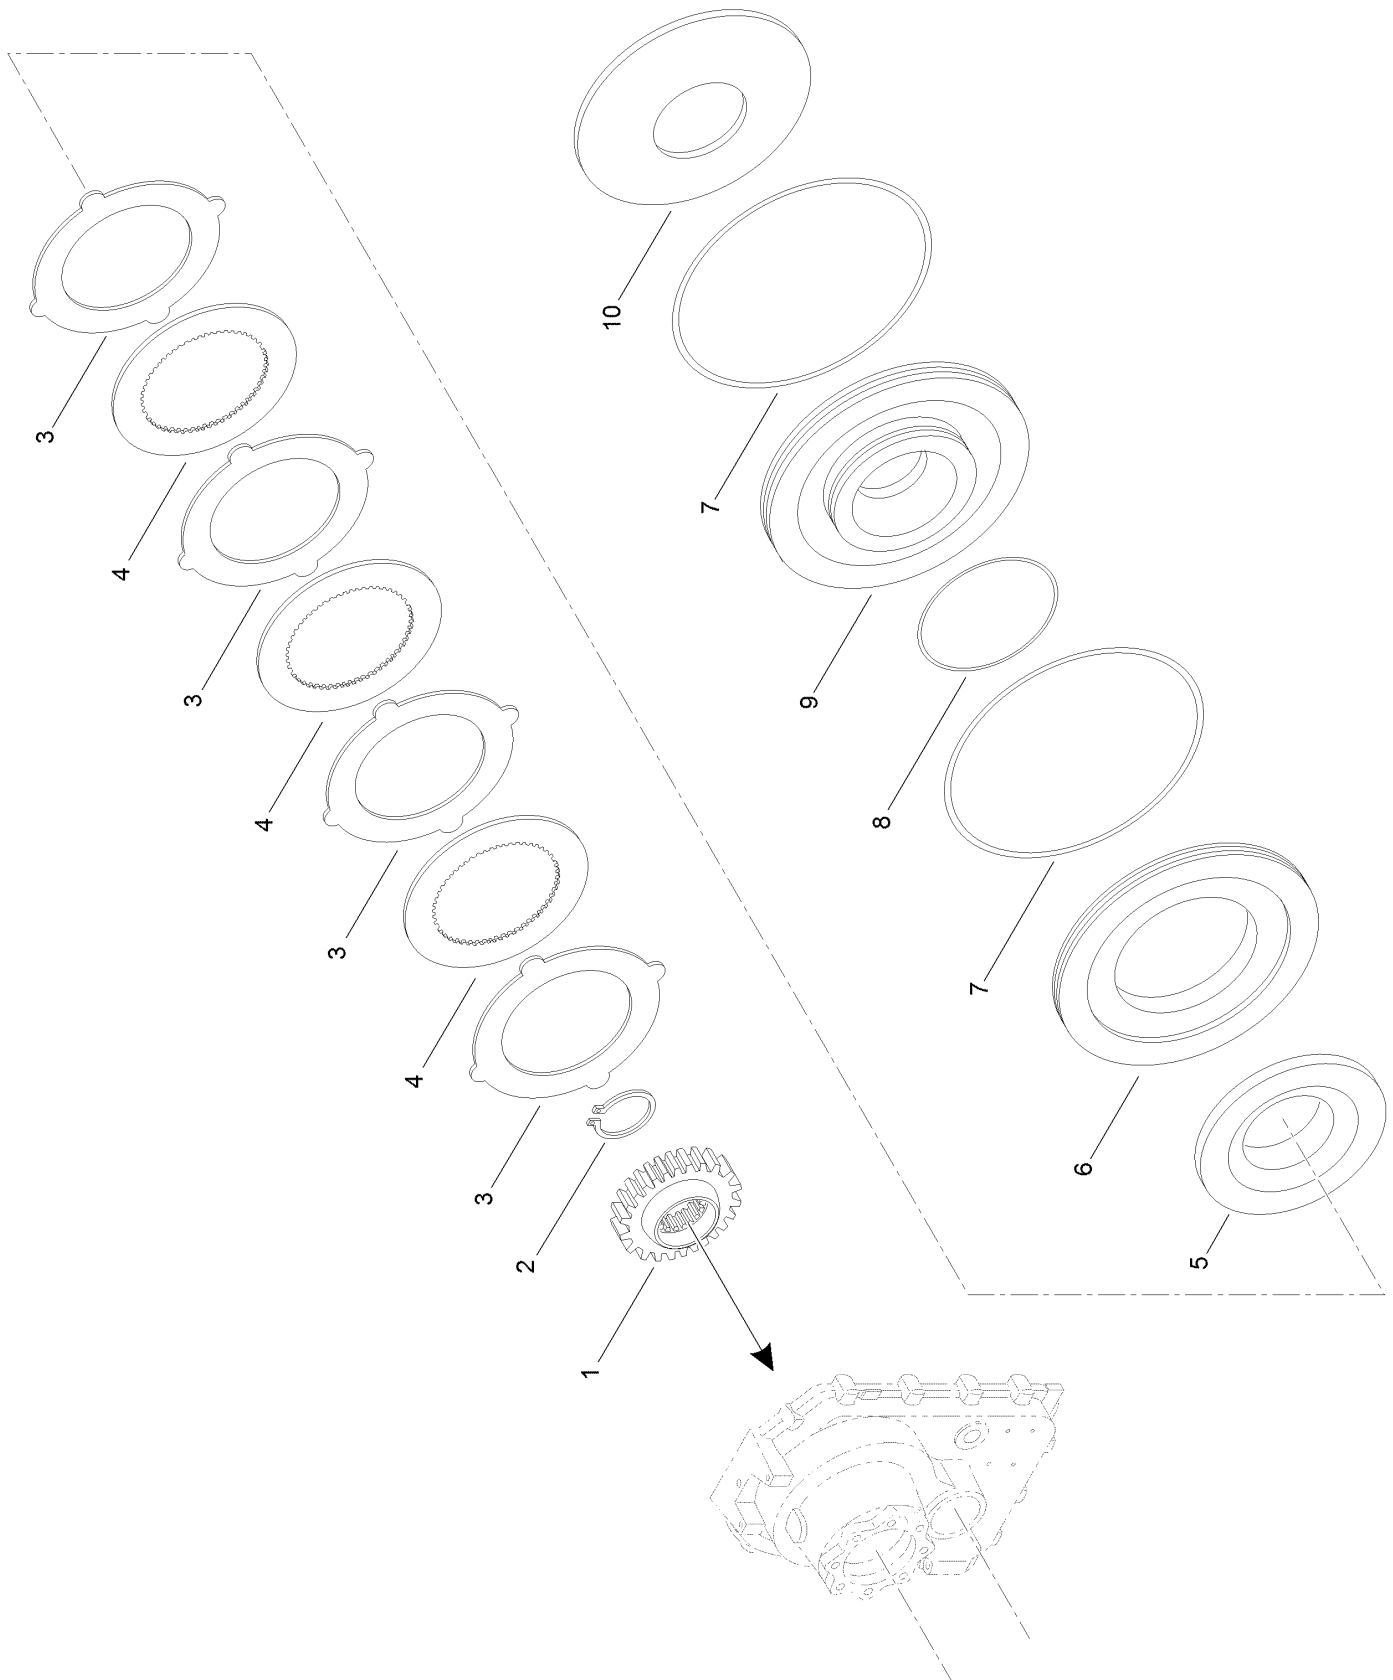


Brakes Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU363472A1	1	Sleeve-Brake, Park	6	AU363482A1	1	Plate-Stop, Piston
2	AU247557A1	1	Ring-Snap	7	AU238-5263	2	O-Ring
3	AU363486A1	4	Plate-Separator	8	AU238-5239	1	O-Ring
4	AU345334A1	3	Plate-Friction	9	AU363484A1	1	Piston-Brake, Park
5	AU363483A1	1	Piston-Pusher	10	AU363485A1	1	Washer-Spring, Bellville

 Output Shaft Assembly Transmission Assembly No. AU106132

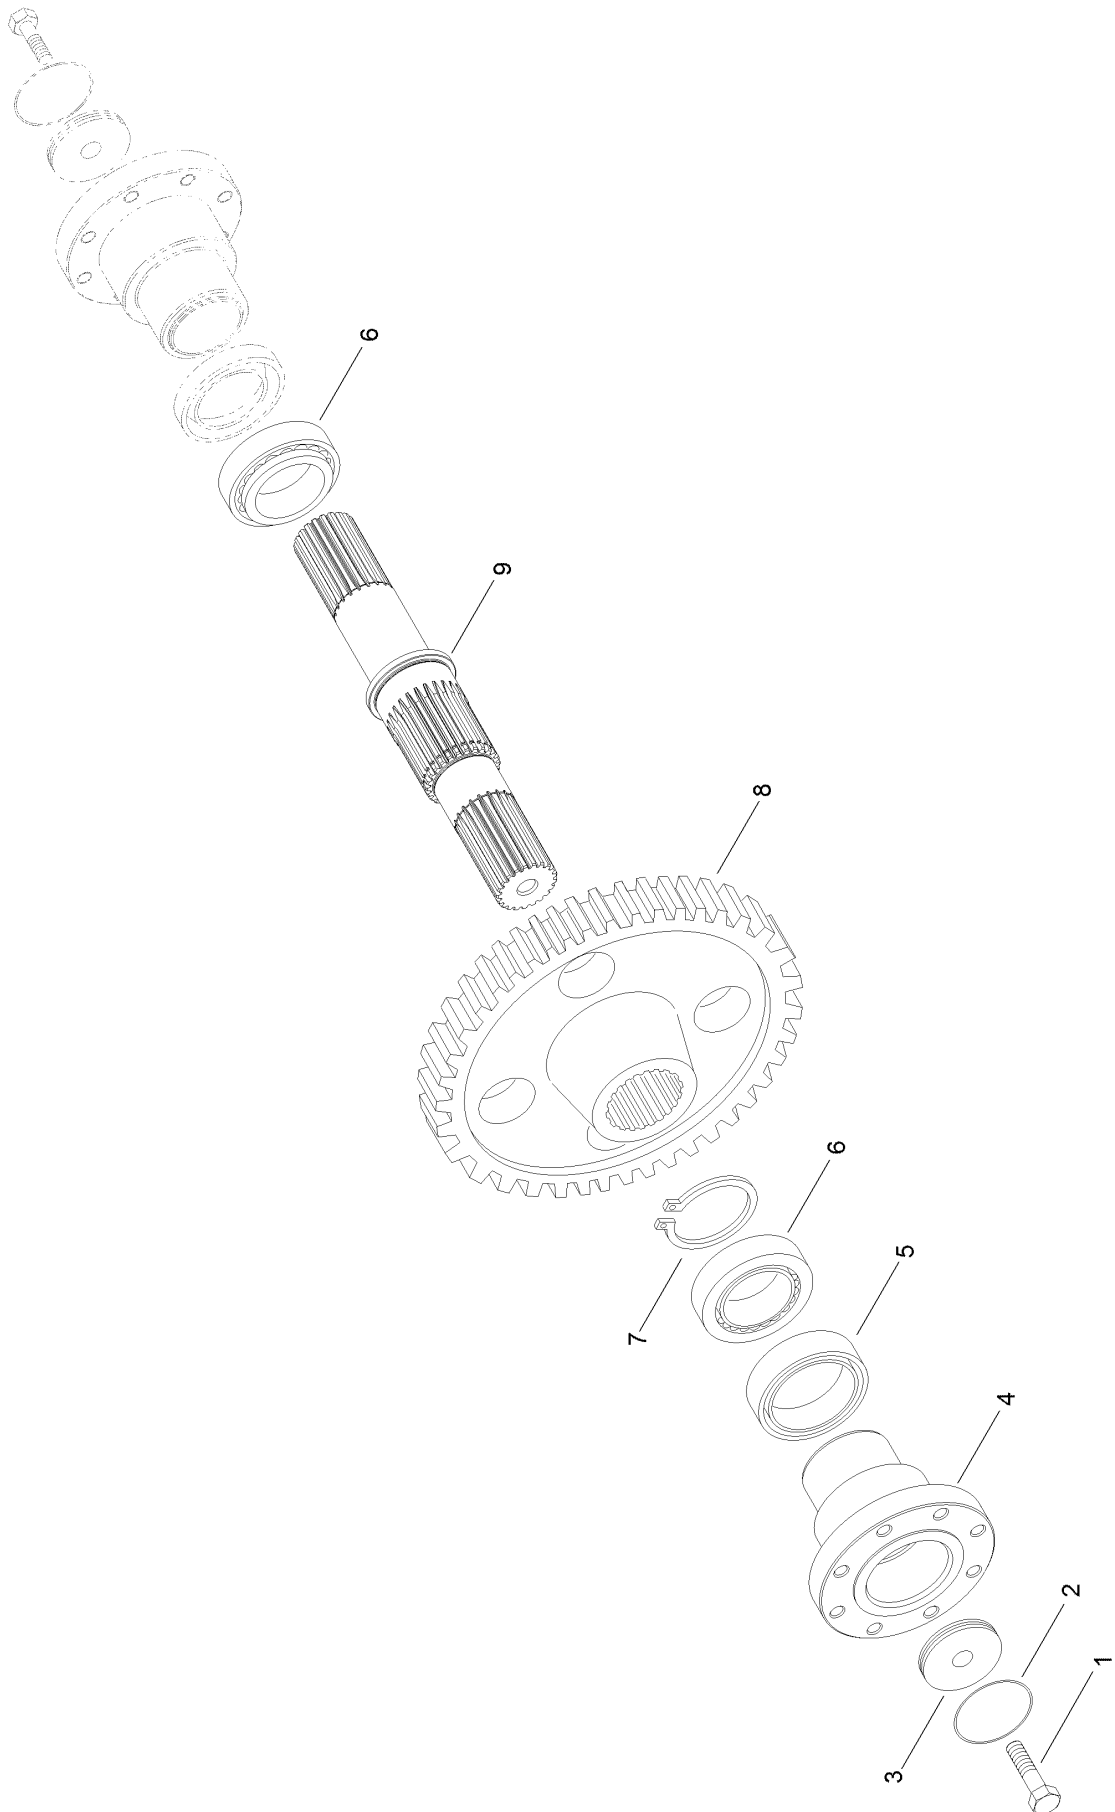


Output Shaft Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU614-12040	1	Bolt-HH
2	AU238-5136	1	O-Ring
3	AU438402A1	1	Washer
4	AU408477A1	1	Flange
5	AU363487A1	1	Seal-Lip

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	AU389105A1	2	Bearing-Taper
7	AU800-1155	1	Ring-Retaining
8	AU363578A1	1	Gear-Driven, Drop Set
9	AU106434	1	Shaft-Output

 Valves And Pipes Assembly Transmission Assembly No. AU106132

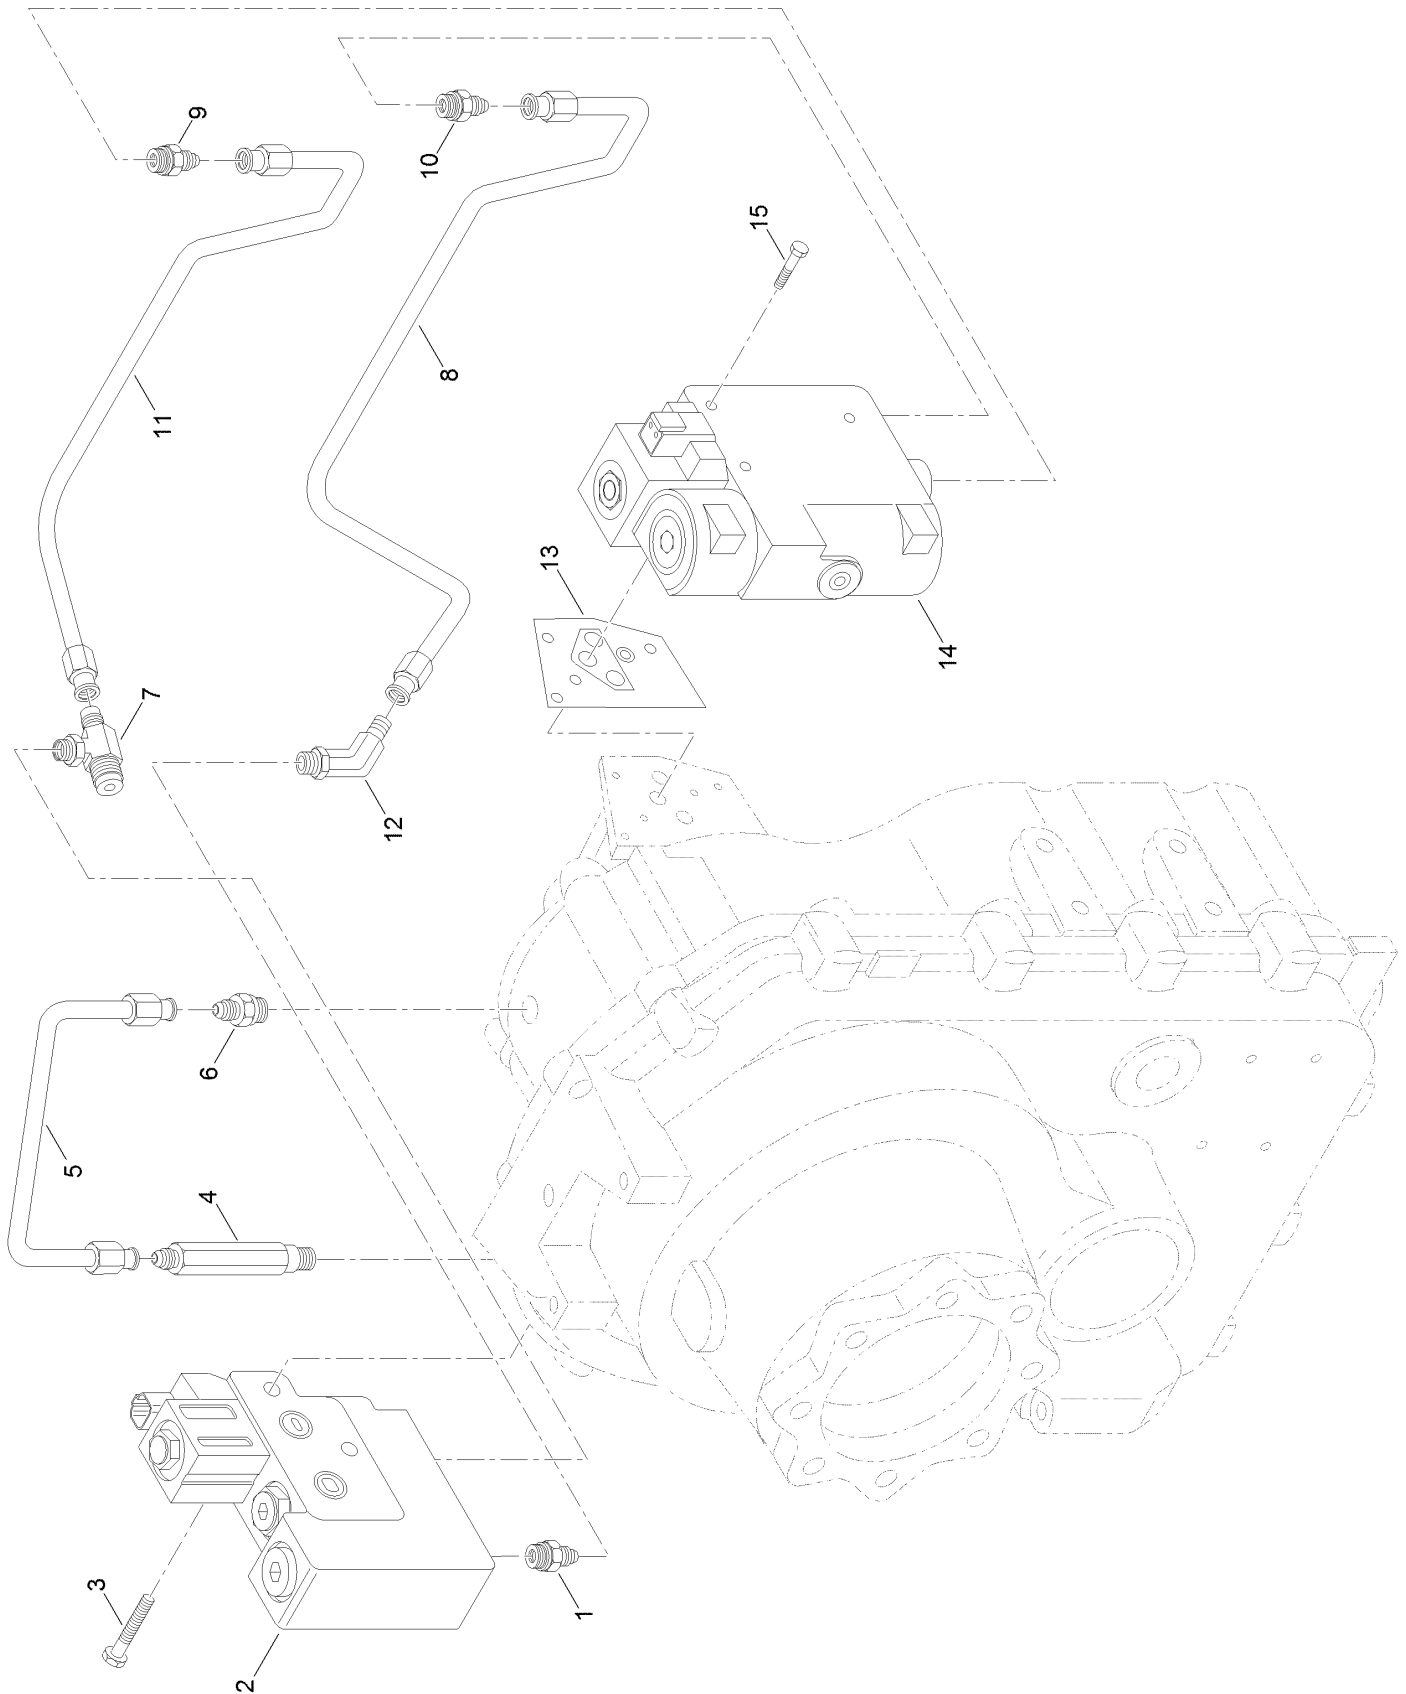


Valves And Pipes Assembly

Transmission Assembly No. AU106132 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU408483A1	1	Fitting-Pipe
2	AU383591A2	1	Valve-Control, Brake
3	AU844-10060	2	Bolt
4	AU408489A1	1	Fitting-Nf
5	AU408485A1	1	Pipe
6	AU218-1023	1	Connector
7	AU408484A1	1	Fitting-Nf
8	AU408488A1	1	Pipe

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	AU408486A1	1	Fitting-Nf
10	AU310930A1	1	Connector
11	AU408487A1	1	Pipe
12	AU408474A1	1	Fitting-Pipe
13	AU408490A1	1	Gasket-Valve, Control
14	AU379939A2	1	Valve-Control, Clutch
15	AU814-6060	3	Bolt

 
Constant Velocity Joint Assembly No. AU106121-03

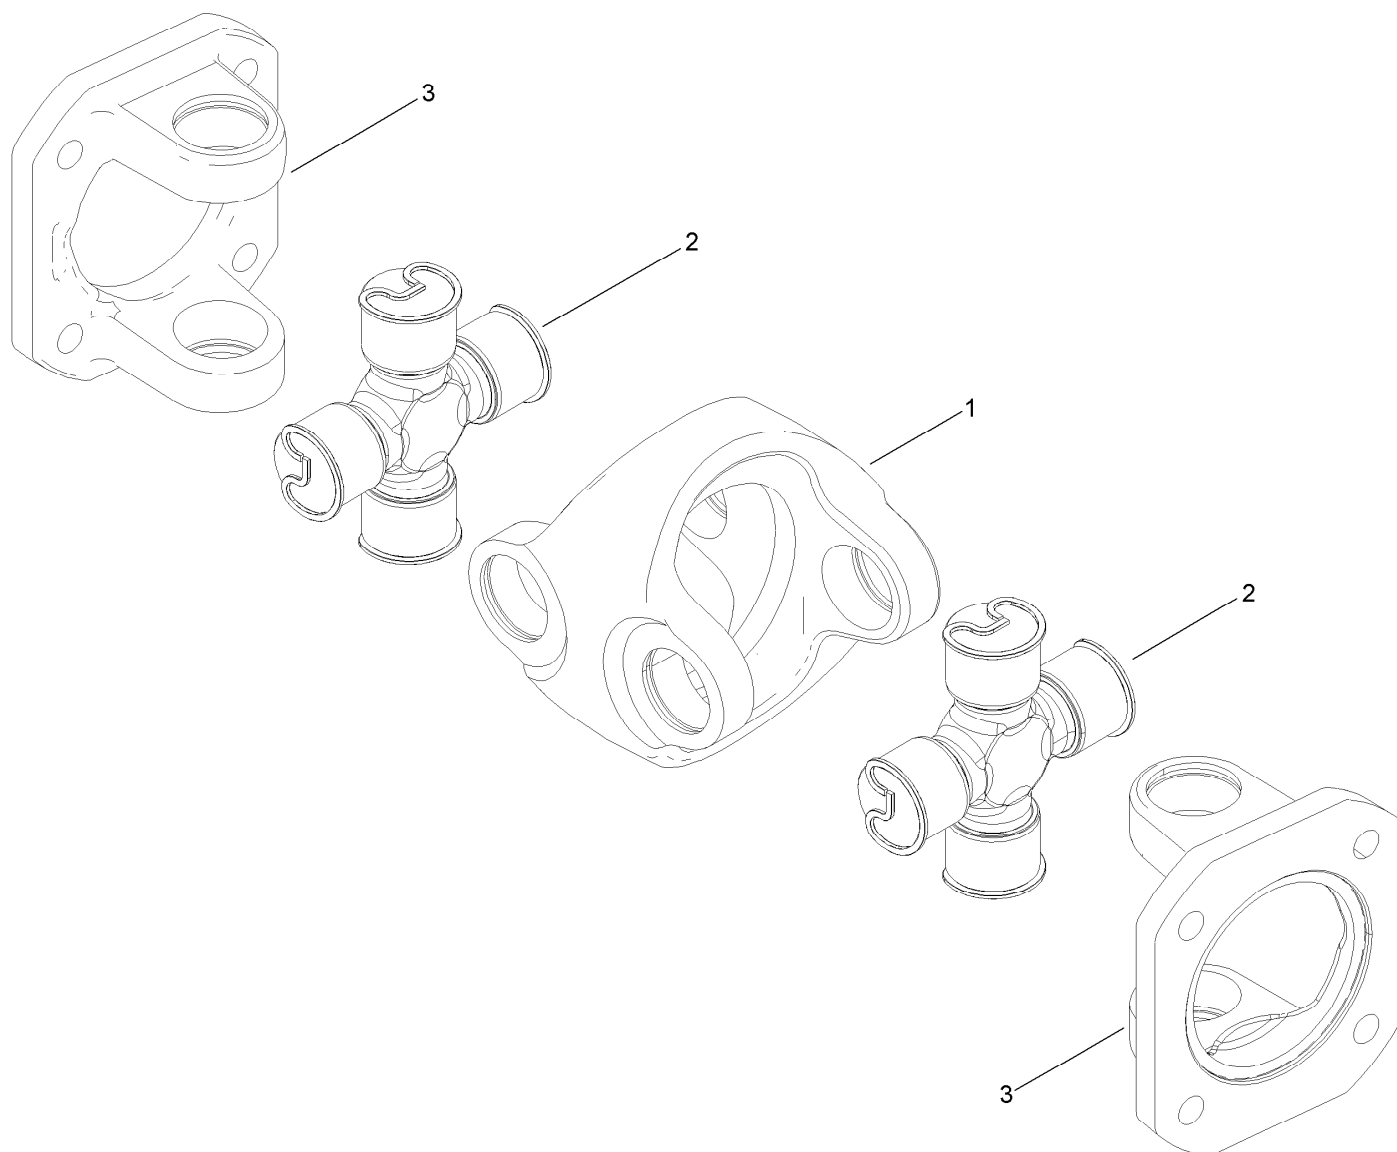

Constant Velocity Joint Assembly No. AU106121-03 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106123	1	Connector-Center
2	AU106122	2	Joint-Universal
3	AU106124	2	Flange-Connection

 
Drive Shaft Assembly No. AU106109-03

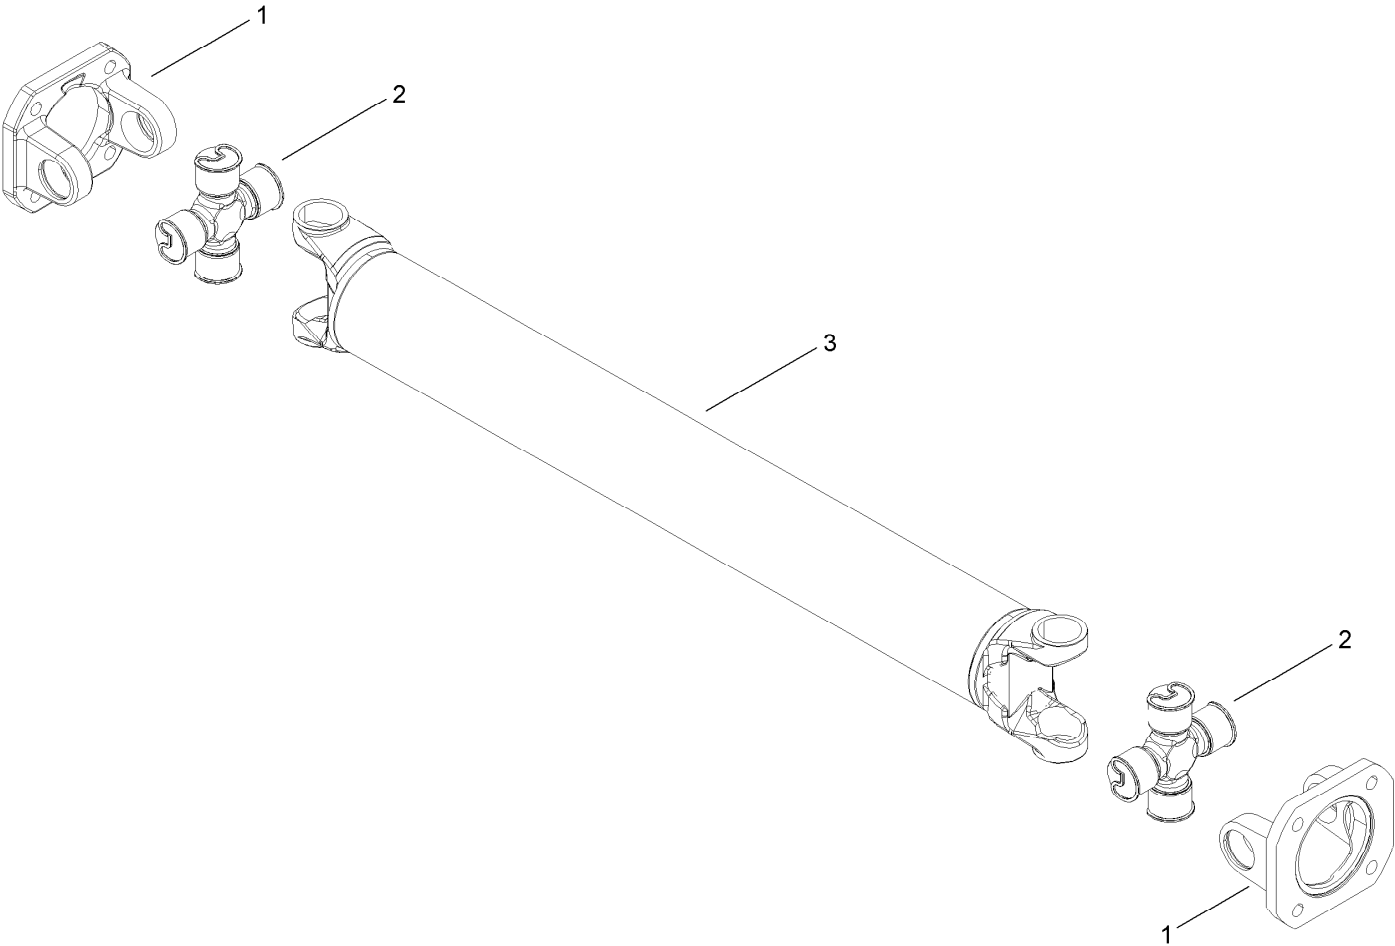

Drive Shaft Assembly No. AU106109-03 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106124	2	Flange-Connection
2	AU106122	2	Joint-Universal
3	AU106125	1	Shaft

 
Air Cleaner and Mounting Assembly

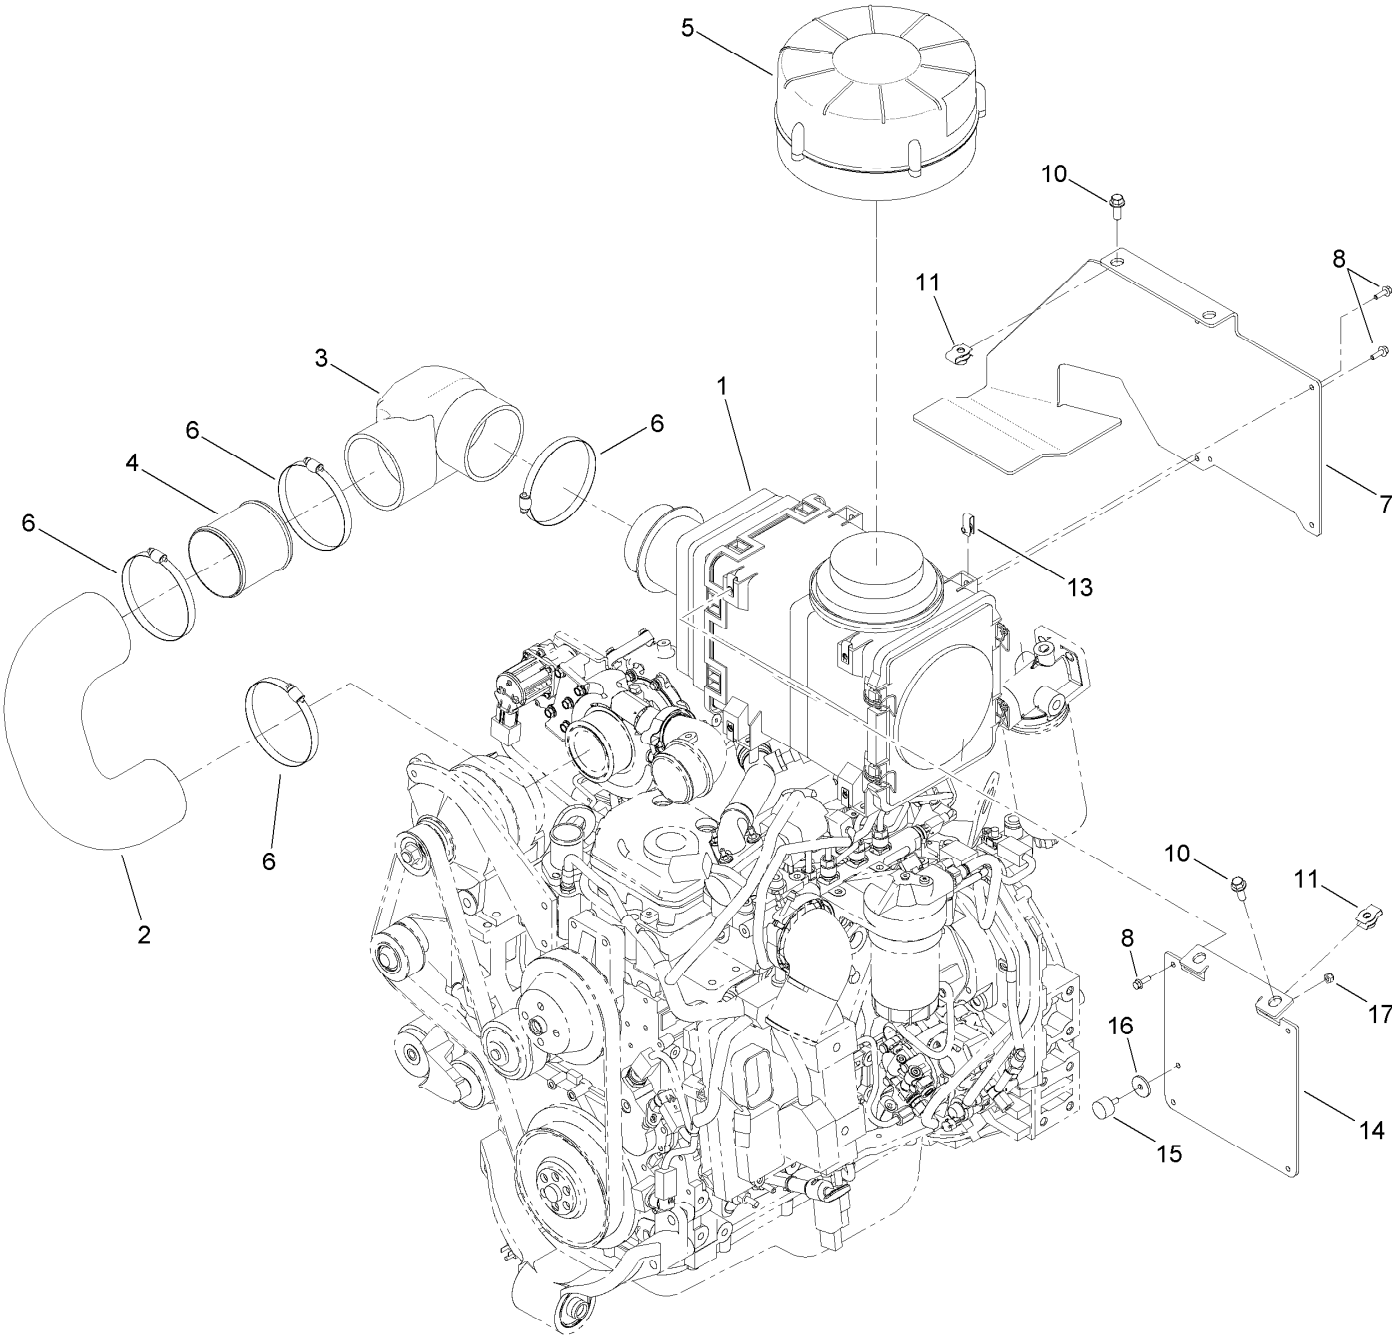

Air Cleaner and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1844	1	Air Cleaner ASM	10	3234-42	4	Screw-HHF
2	127-1779	1	Hose-Intake	11	112-4576	4	Nut-Clip, U
3	AU130446	1	Elbow-Intake, Air Cleaner	13	AU100861	8	Nut-U
4	127-1778	1	Connector-Intake, Air	14	131-1296-03	1	Bracket-Air Box
5	127-1737	1	Precleaner-Intake, Air	15	1-523420	1	Bumper
6	2412-140	4	Clamp-Hose	16	105-3048	2	Washer-Flat
7	131-0450-03	1	Mount-Box, Air	17	3296-73	1	Nut-Lock, NI
8	33103-020	8	Screw-HHF				

 
Air Cleaner Assembly No. 127-1844

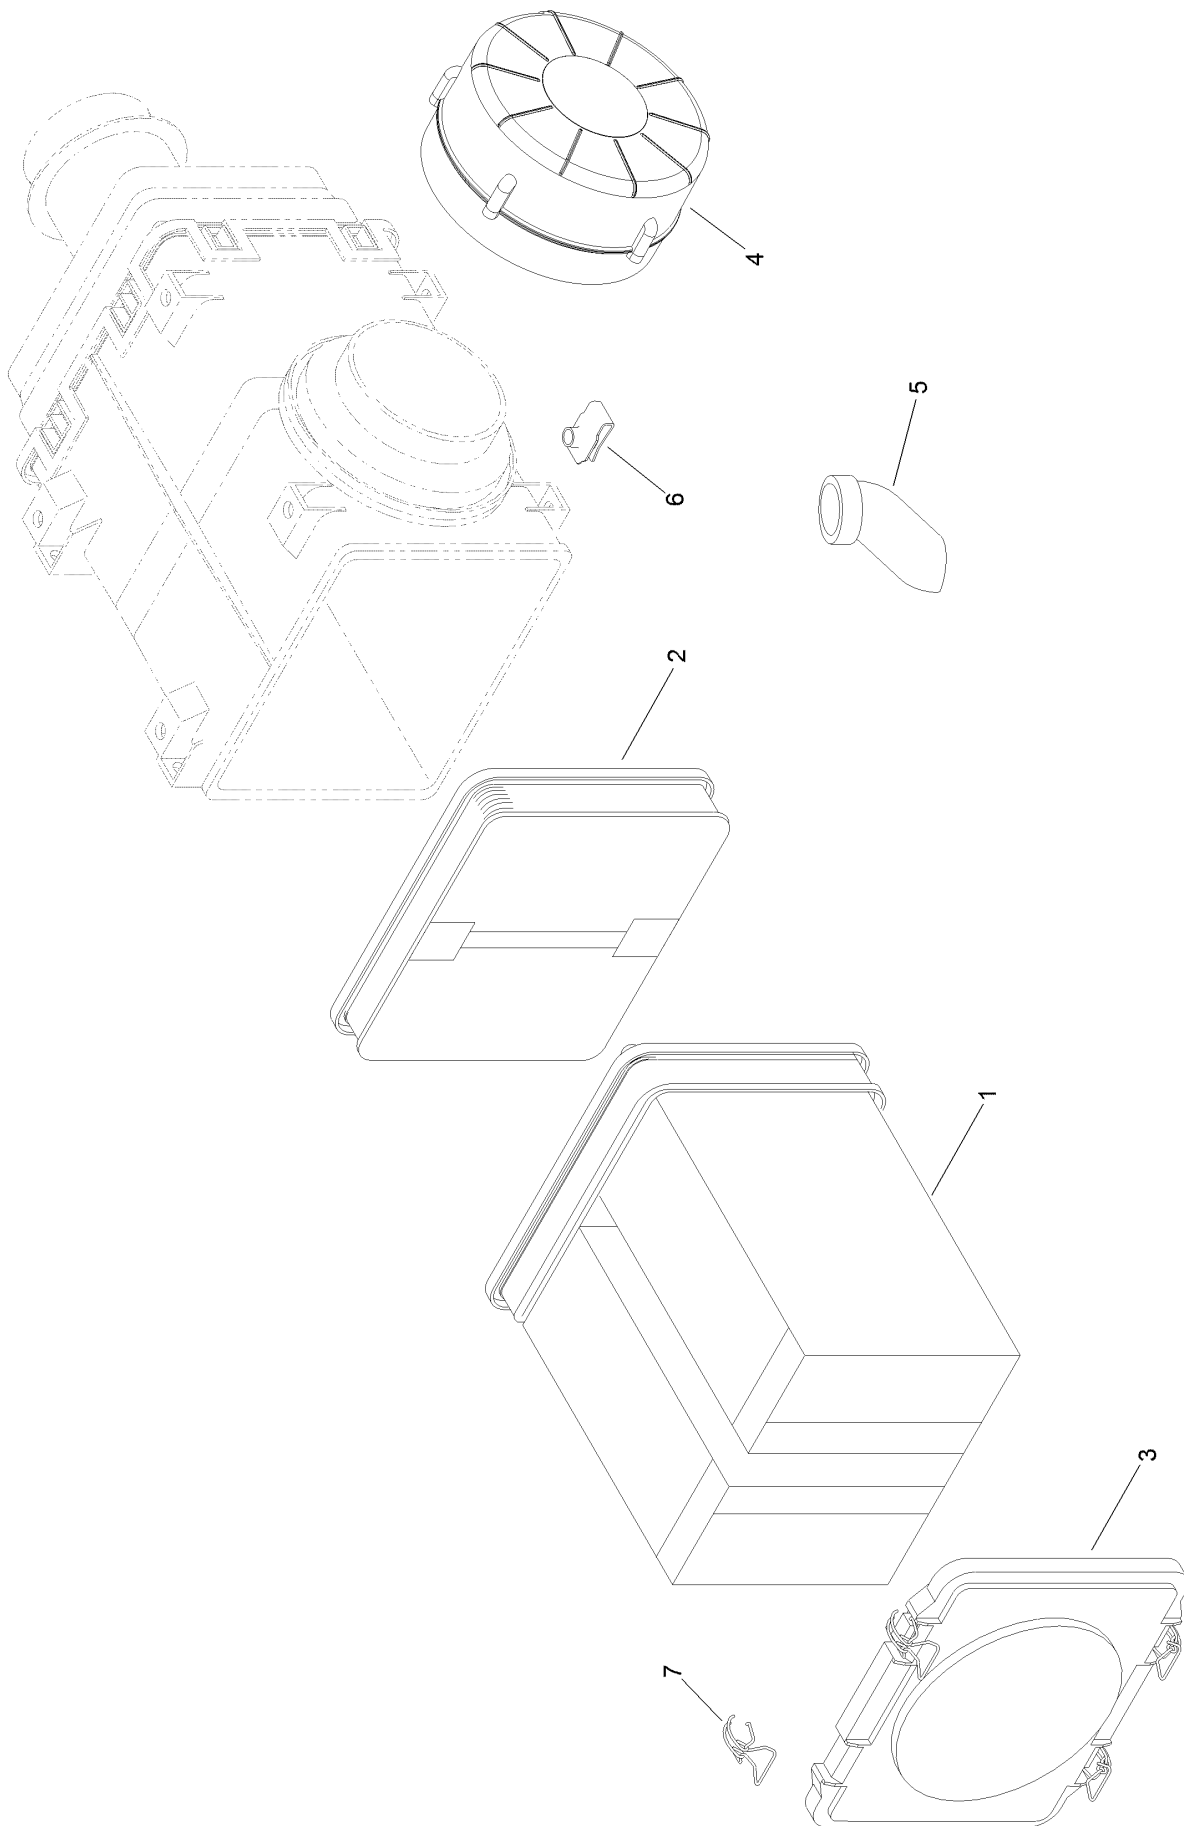

Air Cleaner Assembly No. 127-1844 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-7352	1	Cleaner-Air, Primary	5	131-8646	1	Valve-Ejection, Dust
2	131-7353	1	Cleaner-Air, Safety	6	131-8647	4	Clip-Mounting, M6
3	131-8648	1	Cover-Service, Front	7	131-2596	4	Latch-Cover, Service
4	131-2595	1	Cleaner-Pre				

 Muffler and Mounting Assembly

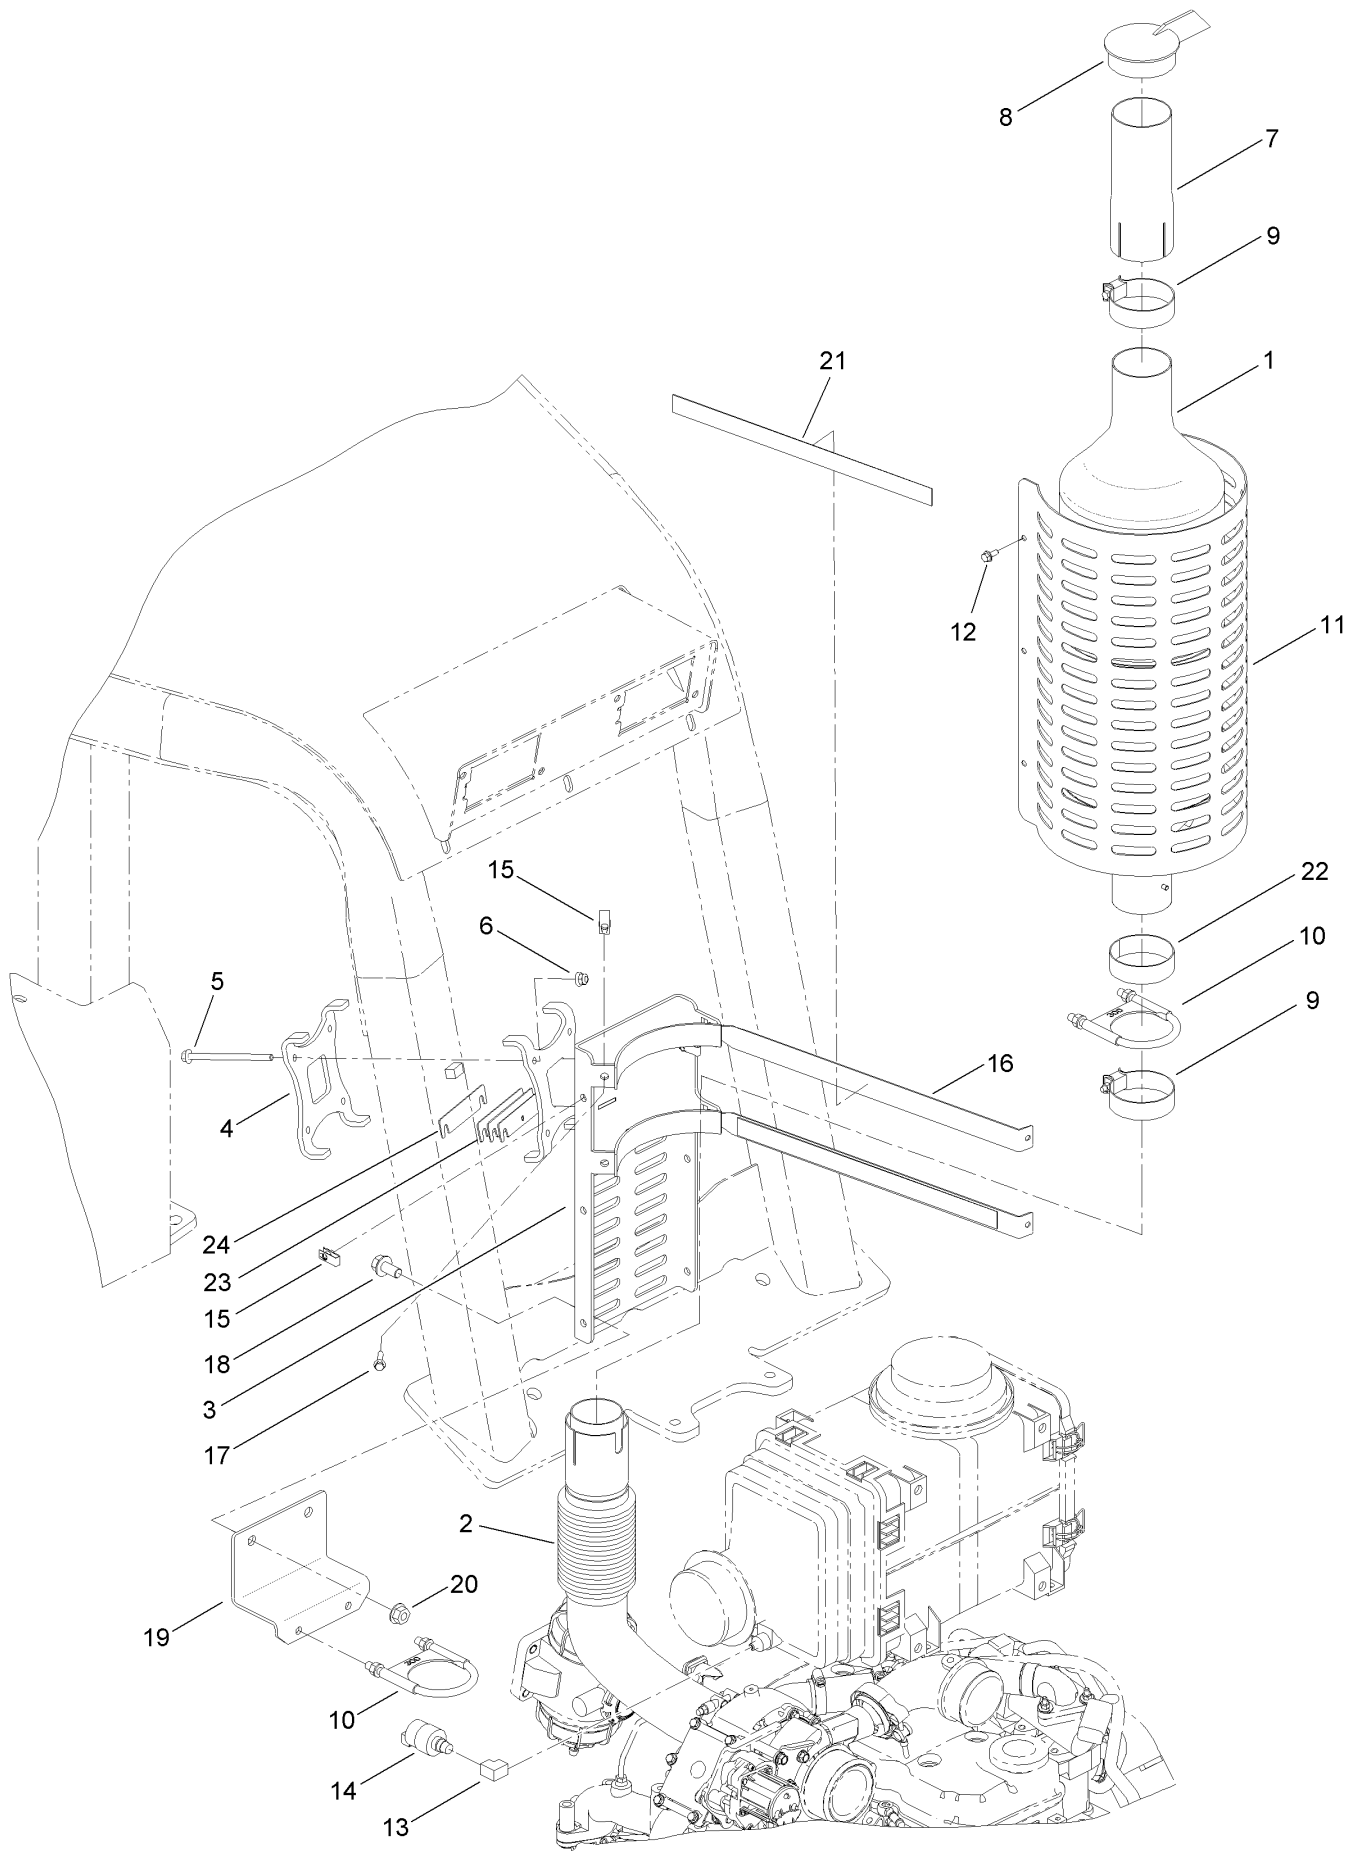


Muffler and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1845	1	Muffler
2	131-1323	1	Turbo Pipe ASM
3	127-1731-03	1	Mount-Muffler
4	131-0475-03	1	Plate-Bent
5	AU100330	4	Screw-Flange, Metric
6	104-3082	4	Nut-Lock, HHF
7	127-1739	1	Tube-Exhaust
8	AU121736	1	Cap-Rain
9	AU130579	2	Clamp-Torctite
10	AU8NG28118	2	Clamp-Guillotine
11	127-1783-03	1	Shield-Muffler
12	33103-025	6	Screw-HHF

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13	AU217-1050	1	Fitting-Elbow, 90
14	AU293797A1	1	Switch ASM
15	AU100861	8	Nut-U
16	127-1709-03	2	Strap-Muffler
17	33103-030	2	Screw-HHF
18	3234-6	2	Screw-HHF
19	131-1294-03	1	Plate-Retainer
20	32128-49	2	Nut-HHF
21	131-1293	2	Tape-Adhesive, Muffler
22	131-1297	1	Tape-Adhesive, Inlet
23	131-2807	3	Plate-Shim
24	131-2855	1	Plate-Shim

 Operator Platform and Seat Assembly

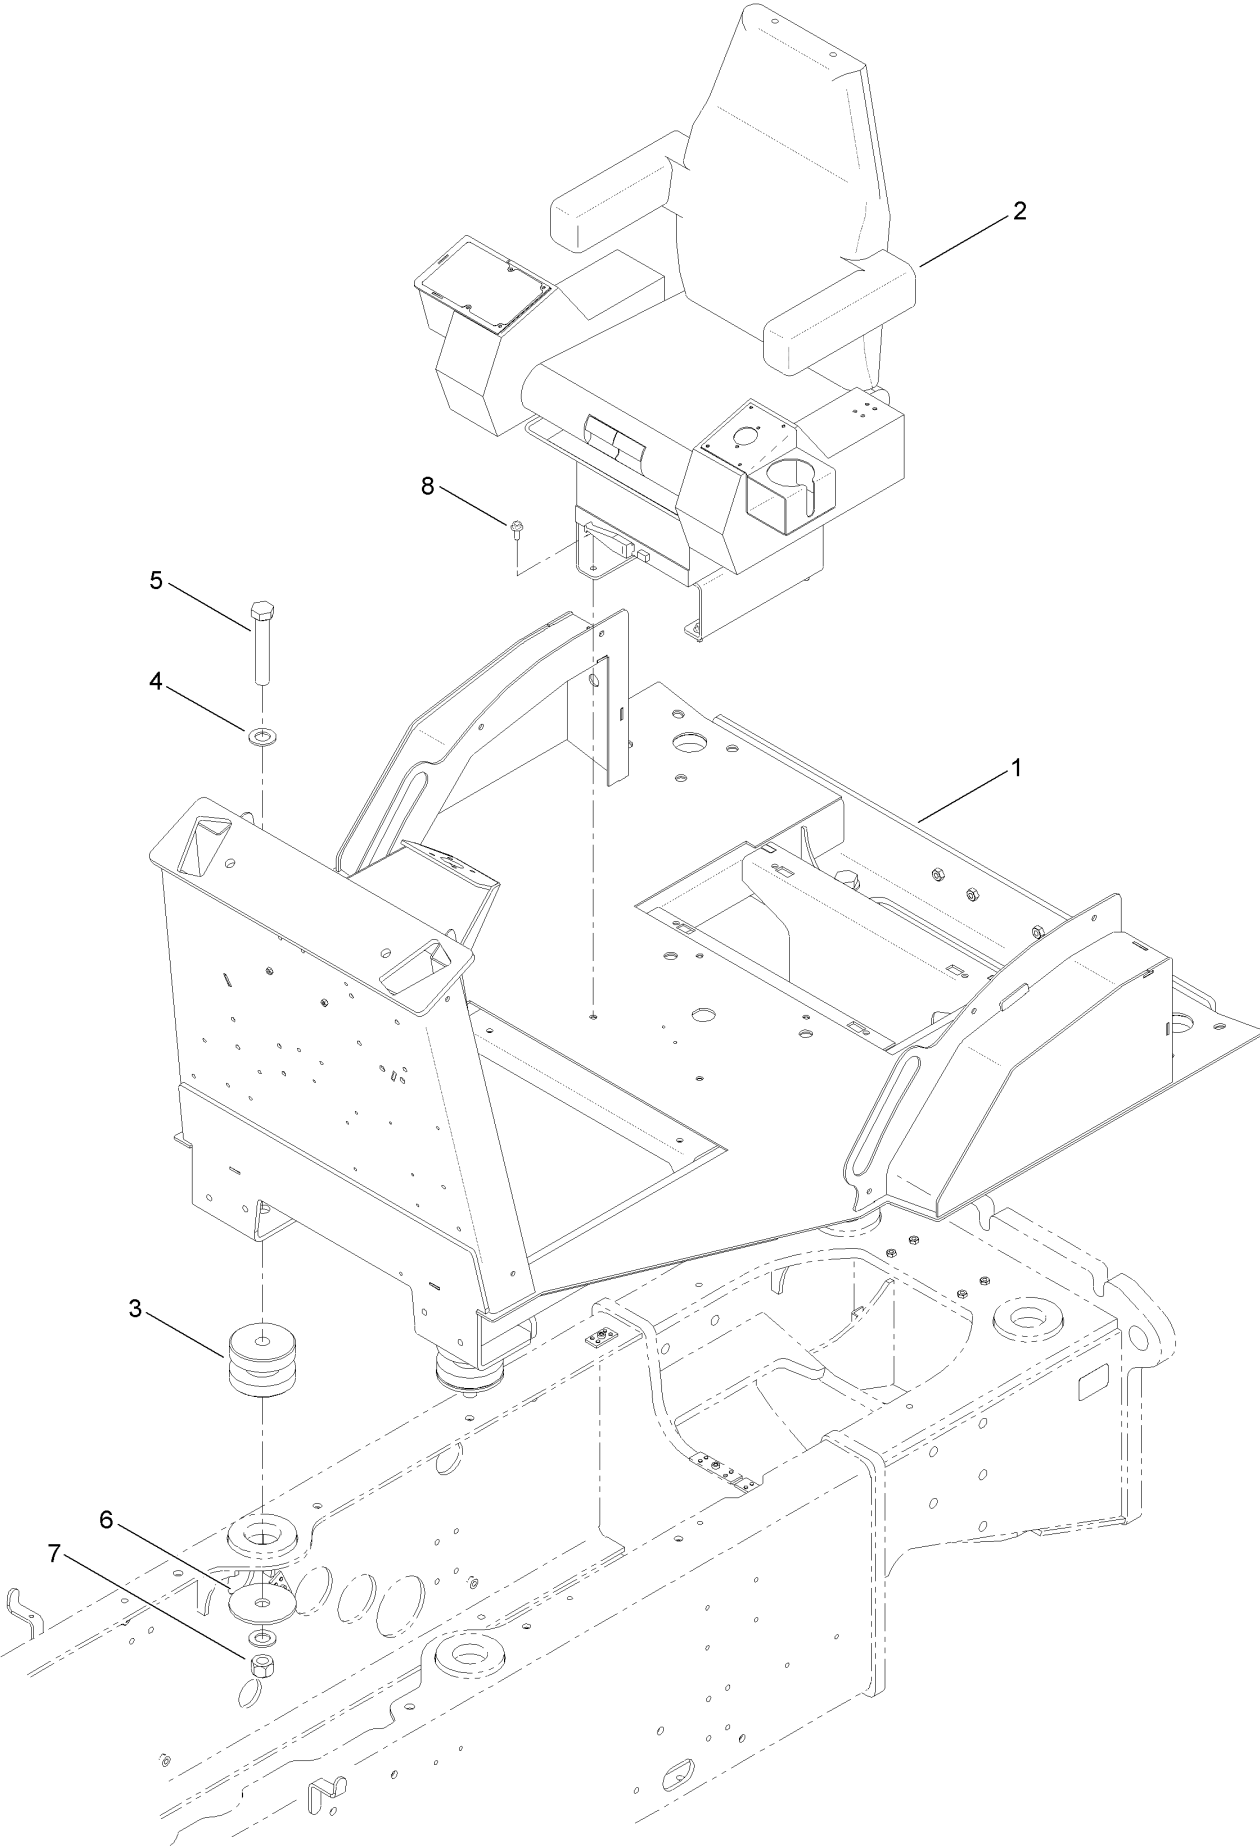


Operator Platform and Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1740-03	1	Platform-Operator
2	AU118589	1	Seat ASM
3	AU30-760-5018	4	Mount-Rubber
4	AUH426833	8	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	AU426-1696	4	Bolt-HH
6	AU101521	4	Washer-Snubber
7	AU232-41116	4	Nut-Hex
8	AU100876	4	Screw-Flange

 
Seat Assembly No. AU118589

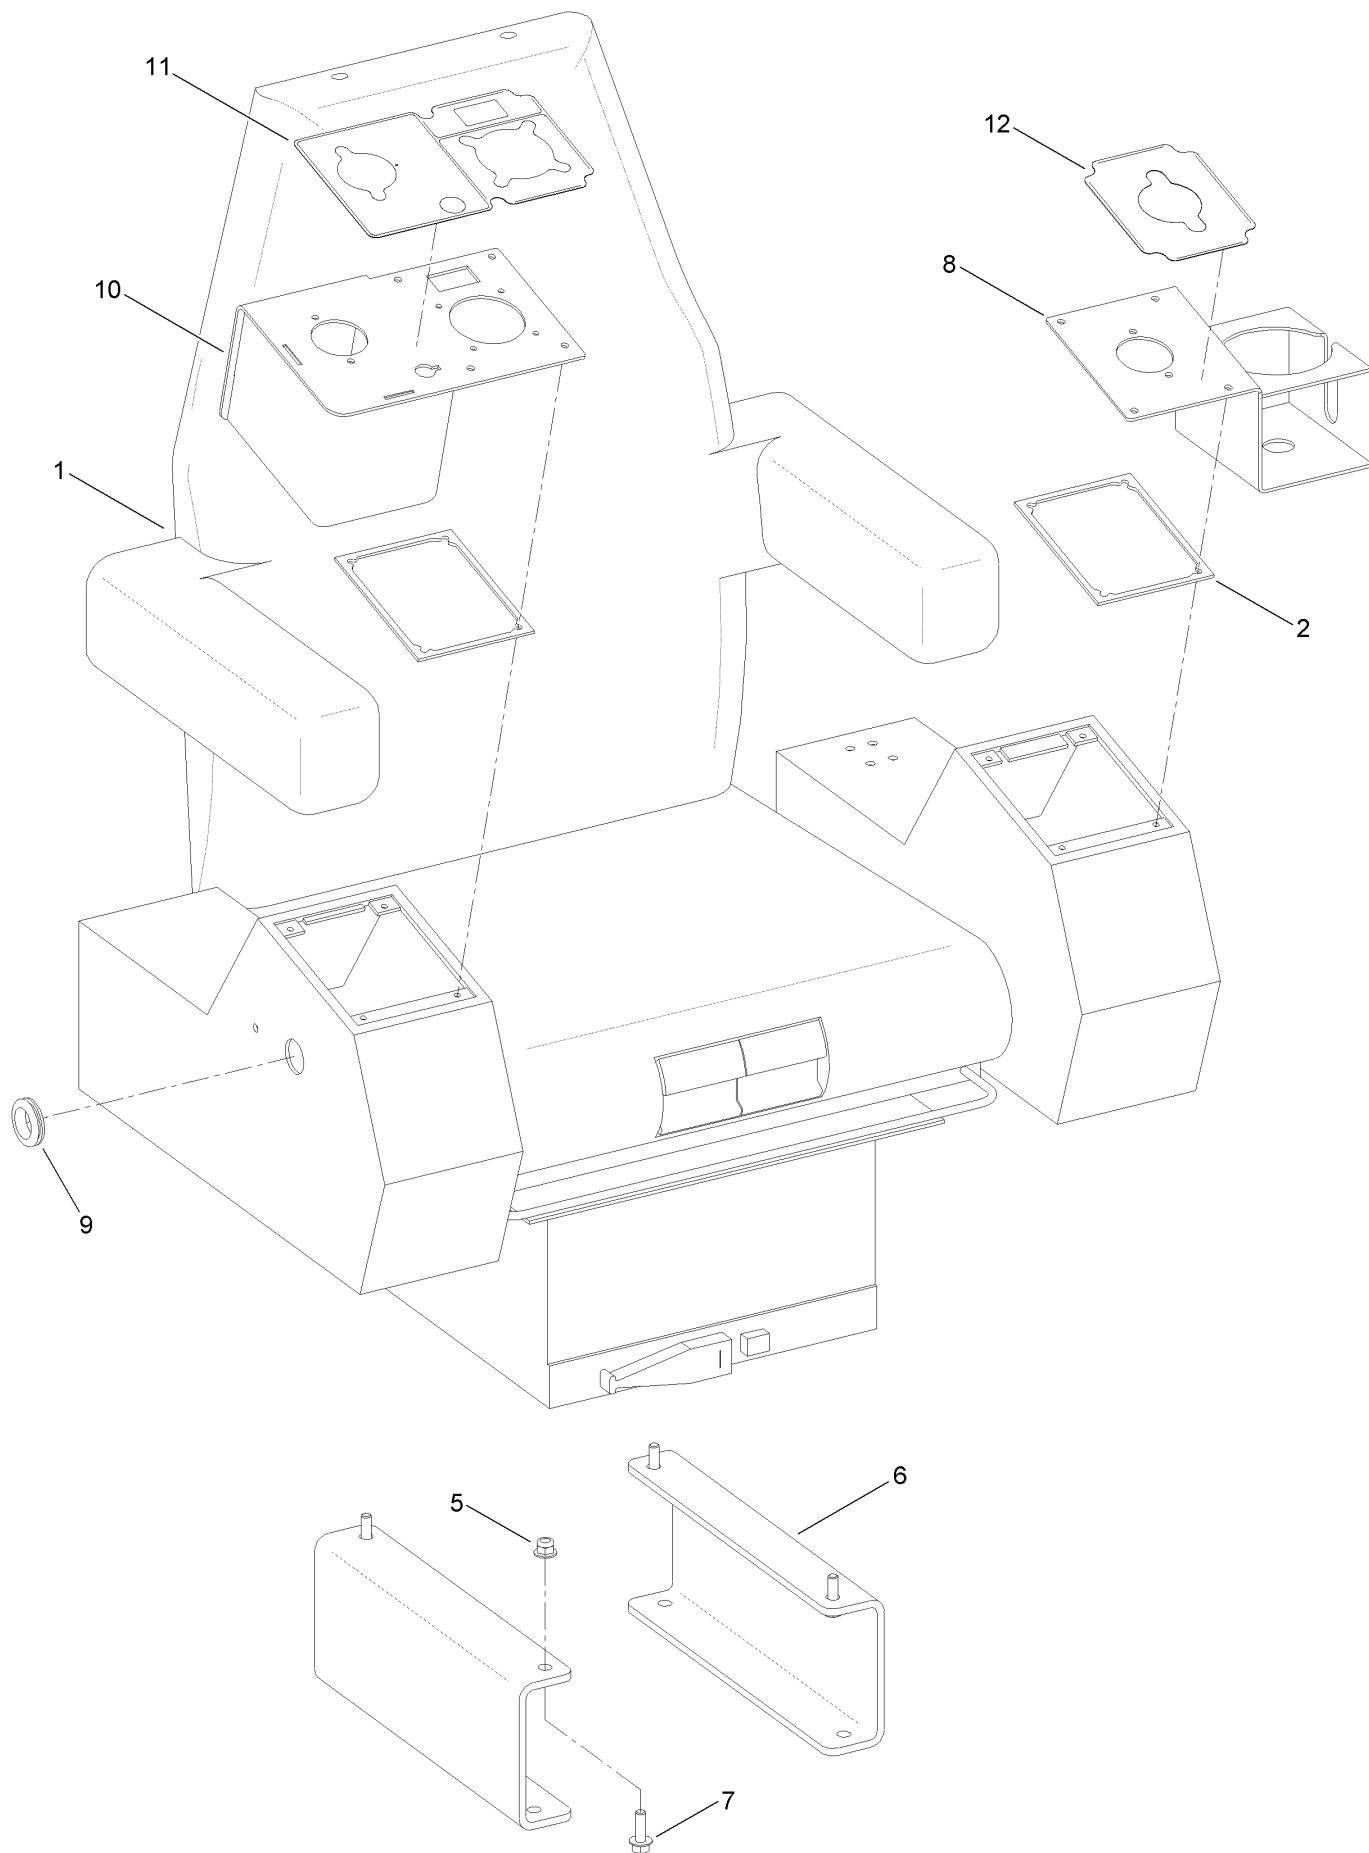

Seat Assembly No. AU118589 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU107706	1	Armchair-Operator	9	240-5	1	Grommet
2	AU108507-03	2	Plate-Spacer	10	131-0485-03	1	Mount-Joystick
5	AU100526	4	Nut-Torque, Prevailing	11	125-8496	1	Decal-Joystick, RH
6	AU107510-03	2	Riser-Operator Seat	12	125-8499	1	Decal-Control, Drive (Ground)
7	93-7773	4	Screw-HHF				
8	AU112736-03	1	Cup-Holder				

 
Operator Dash and Panel Assembly

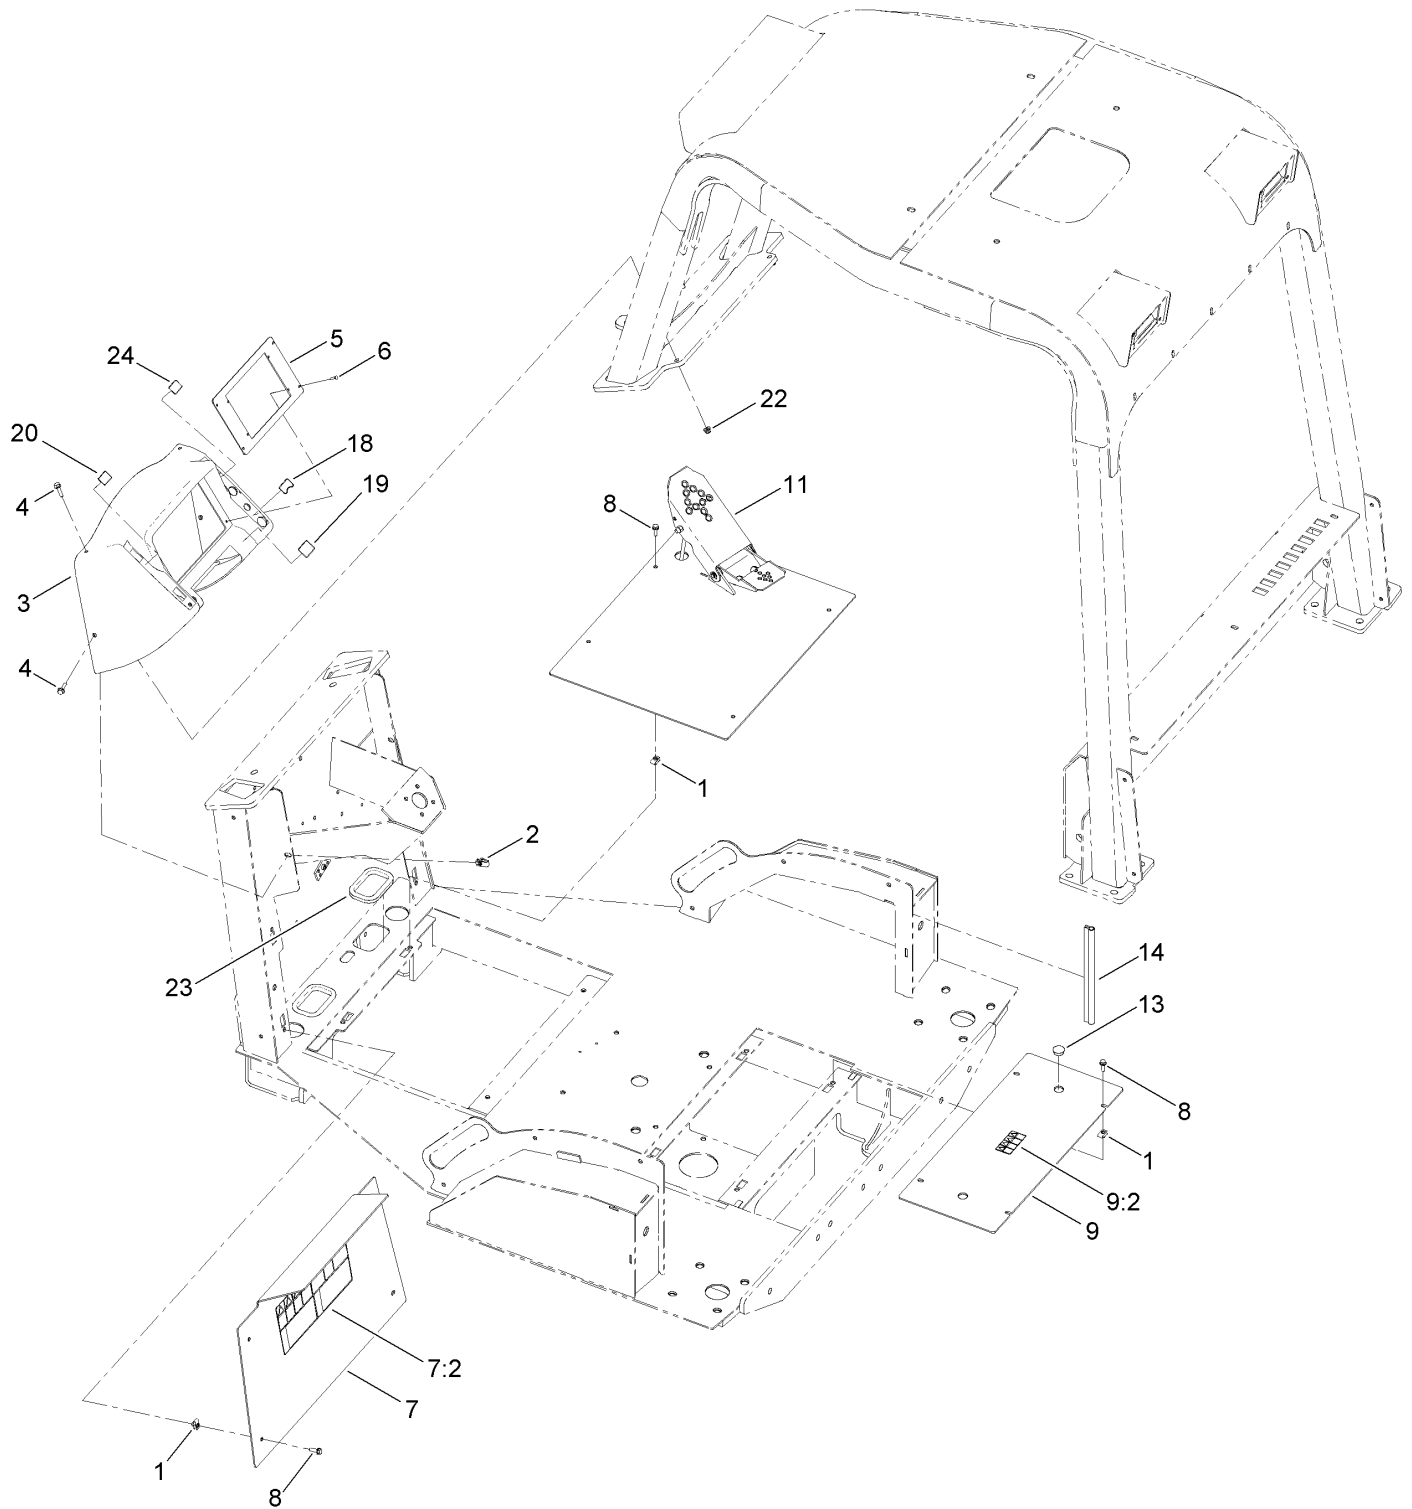

Operator Dash and Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7721	10	Nut-Clip, U	9:2	125-8473	1	Decal-Warning, Battery
2	AU100862	2	Nut-U	11	AU106377	1	Pedal ASM
3	131-0438	1	Dash-Panel	13	AU353-411	2	Plug-Dome
4	33104-030	4	Screw-HHF	14	AU118602	2	Seal-Hood
5	AU103959-03	1	Plate-Mount, Display	18	125-8484	1	Decal-Aux Power
6	AU463-11012	4	Screw-HH	19	130-7539	1	Decal-Ignition
7	130-8409	1	Kick Panel ASM	20	131-0439	1	Decal-Lock, Differential
7:2	130-7540	1	Decal-Safety	22	104-3082	2	Nut-Lock, HHF
8	108-3748	12	Screw-HHF	23	127-1293	2	Trim-Battery
9	130-8410	1	Battery Cover ASM	24	131-0440	1	Decal-Brake, Parking

 
Pedal Assembly No. AU106377

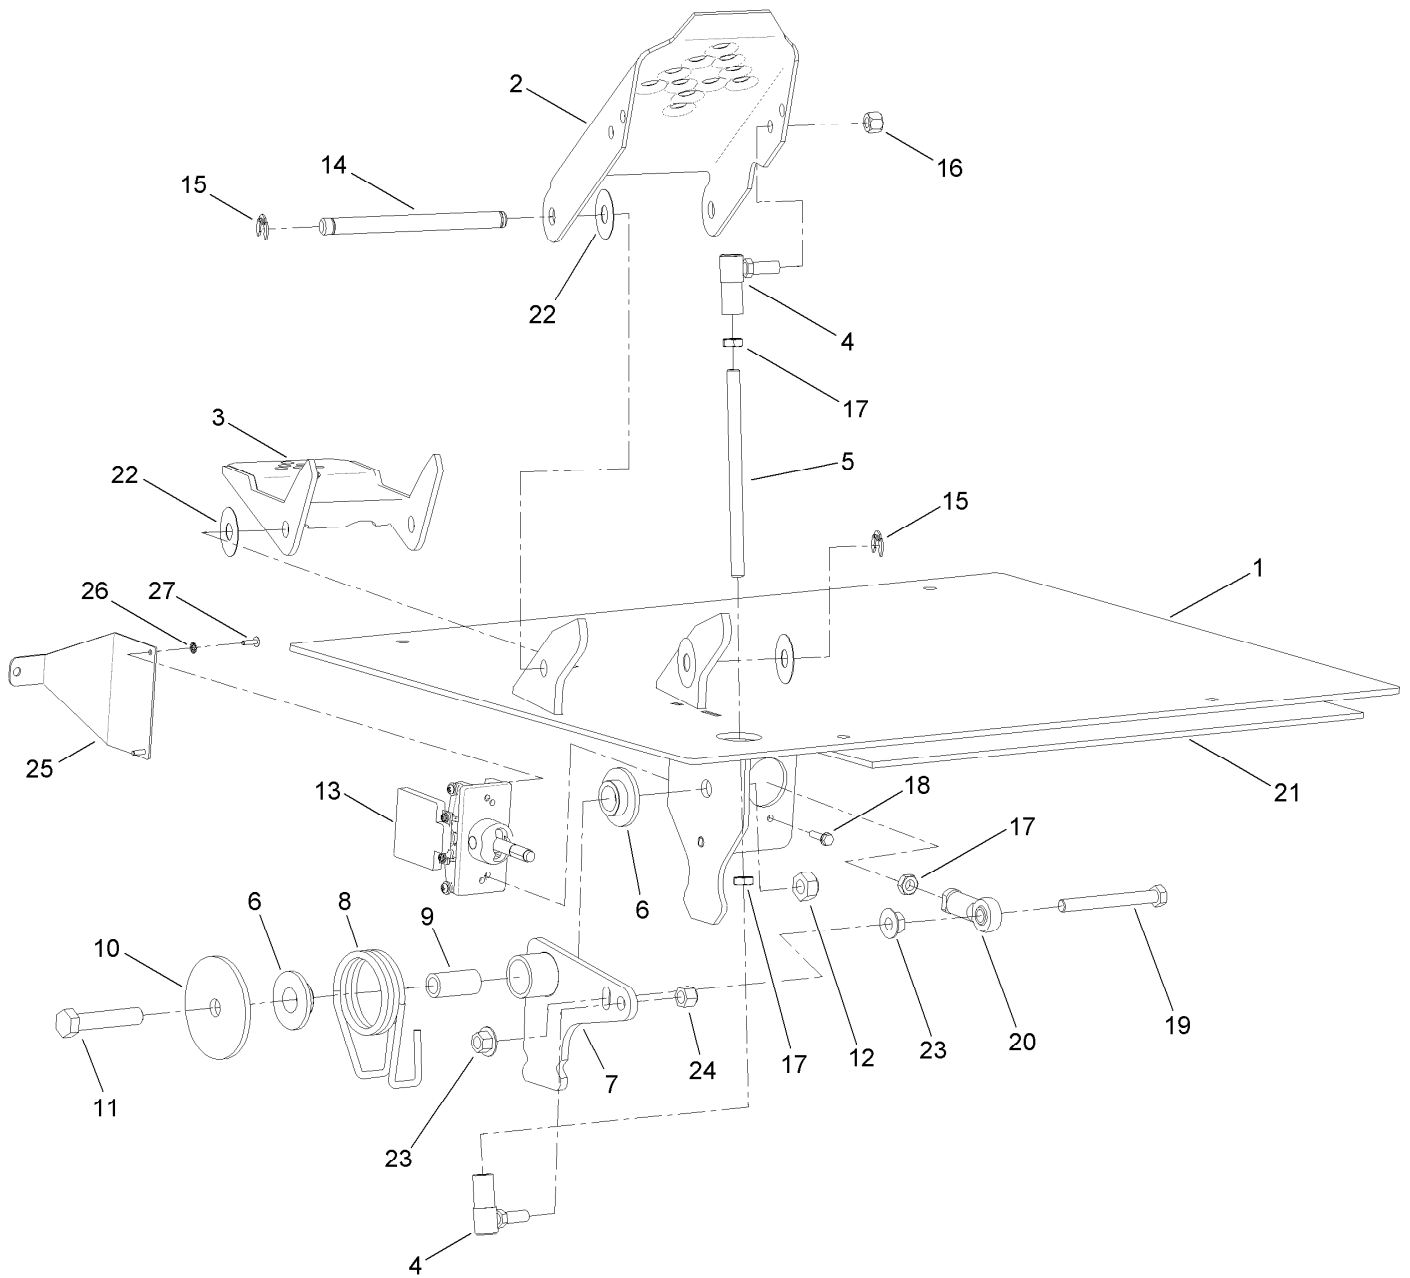

Pedal Assembly No. AU106377 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU106362-03	1	Plate-Floor	15	65-2720	2	Ring-Retaining,Clip
2	AUH403816-03	1	Pedal-Foot, Ground Drive	16	AU232-4616	1	Nut-Hex
3	AUH672181-03	1	Pedal-Heel	17	3220-3	3	Nut-HJ
4	AUD38296	2	Joint-Ball	18	32144-64	2	Tscrew-HWH
5	AU398314A1	1	Rod-Control	19	1-800805	1	Screw-HH
6	AUD128616	2	Bushing-Insert, Plastic	20	92-7008	1	End-Rod, Female
7	AU106453	1	Pivot-W/Bellcrank	21	AU109930	1	Insulation-Floor
8	AUH436303	1	Spring	22	AU126572	4	Washer
9	AUH435694	1	Spacer	23	32128-43	2	Nut-Flange
10	AUH436215	1	Washer-Special	24	3296-6	1	Nut-Lock
11	325-10	1	Screw-HH	25	131-0481	1	Plate-Sensor, Pedal
12	97-1206	1	Locknut	26	3255-24	2	Washer-Lock / EXT
13	131-0434	1	Sensor-Traction	27	3249-3	2	Screw-PRH
14	AUH403840	1	Pin				

 
Operator Storage Assembly

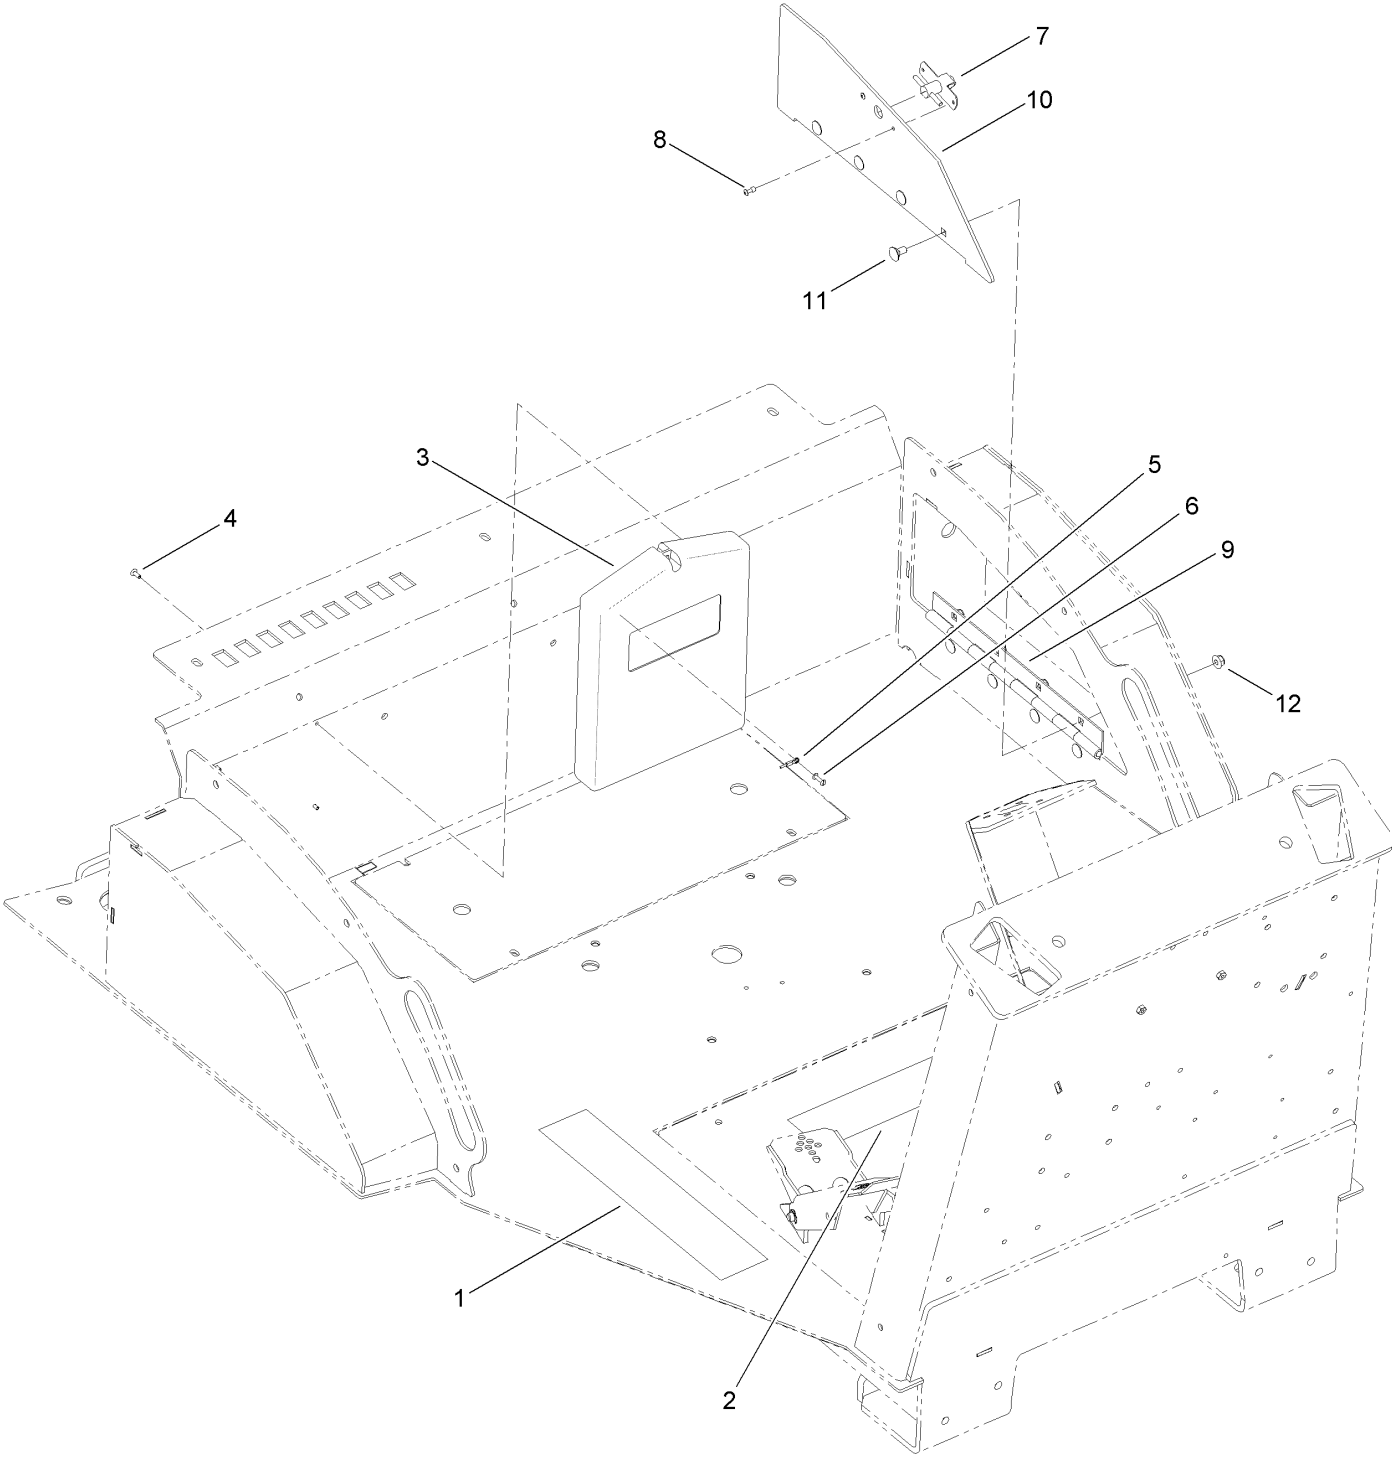

Operator Storage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU105911	2	Tape-Anti Skid, Upper Step	7	AUL102515	1	Latch
2	AU105912	2	Tape-Anti Skid, Lower Step	8	103-0138	2	Rivet-Pop
3	AU103216	1	Holder-Manual, Operator	9	127-1784	1	Hinge
4	114439	4	Rivet-Blind	10	127-1785-03	1	Plate-Door
5	AUR46465	1	Lanyard	11	3231-1	8	Screw-CARR
6	AUR46463	1	Post-Manual	12	104-8301	8	Nut-HF, NI

 
Backfill Blade and Mounting Assembly

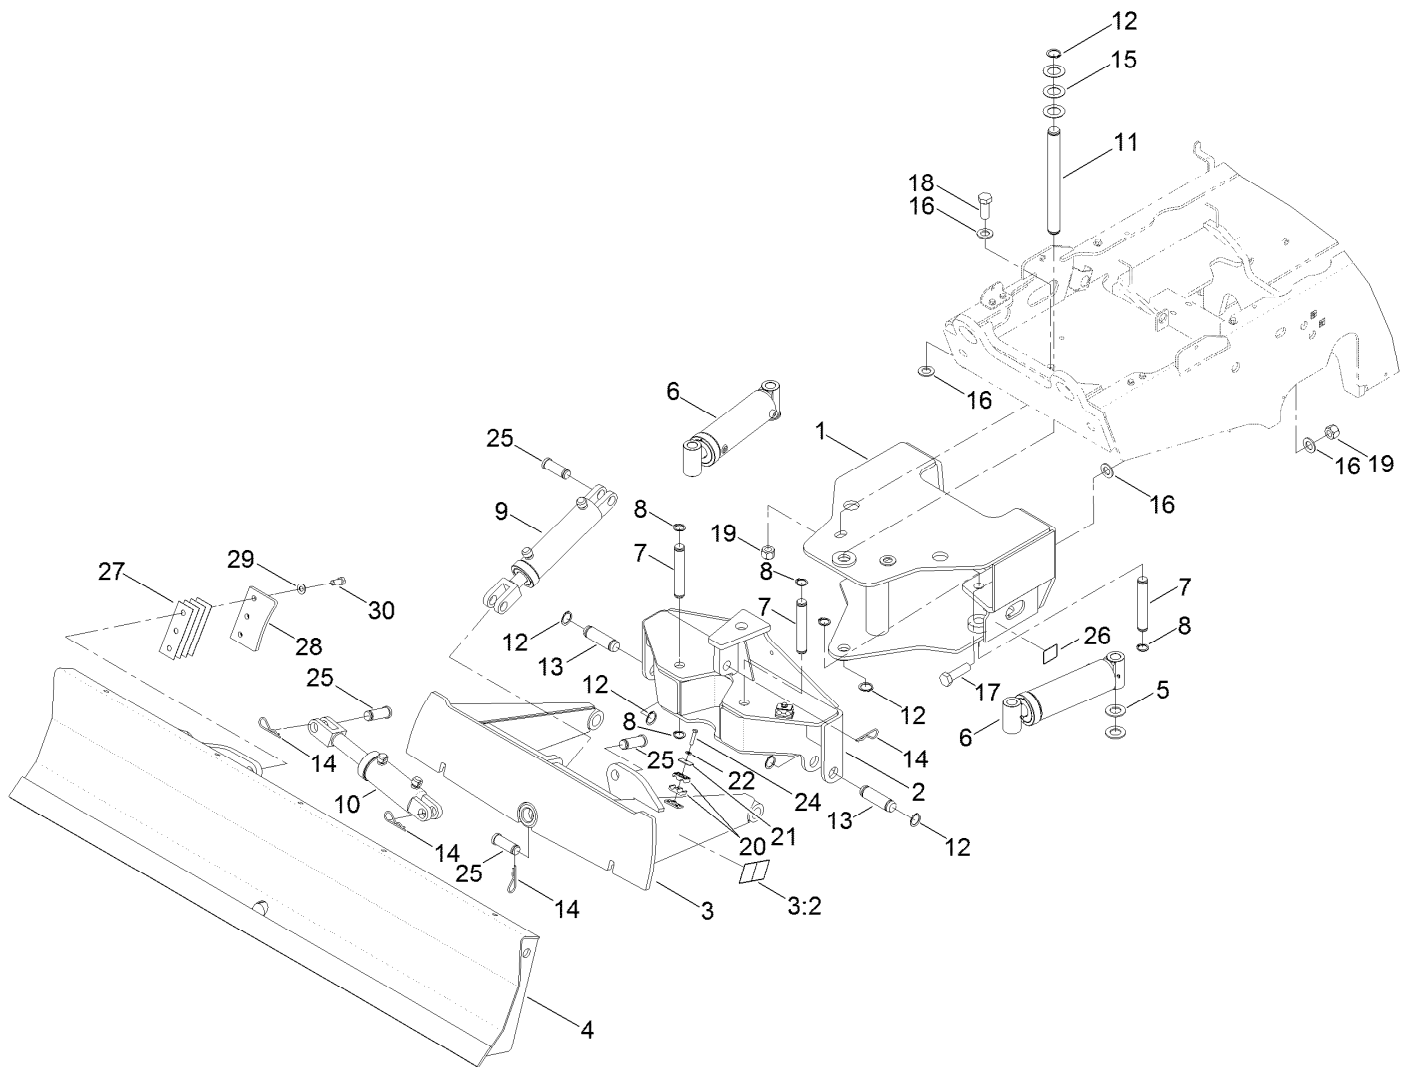

Backfill Blade and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU117156-03	1	Frame-Blade, Backfill	15	AUH117606	3	Washer
2	AU115400-03	1	Pivot-Blade, Backfill	16	AUH426833	8	Washer
3	131-0437	1	Backfill Arm ASM	17	AU426-1656	2	Screw-Cap, HH
3:2	130-7541	2	Decal-Danger	18	AU426-1640	2	Bolt
4	131-0487-03	1	Blade-Backfill	19	AU232-41116	4	Nut-Hex
5	AU495-81209	4	Washer-Flat	20	56-7971	4	Clamp-Tube
6	127-1797	2	HYD Cylinder ASM	21	69-9760	2	Coverplate
7	AUH432880	4	Pin-Angle, Cylinder	22	100-4852	2	Washer-Hardened
8	32151-77	8	Ring-Retaining, External	24	323-52	2	Screw-HH
9	127-1798	1	HYD Cylinder ASM	25	AUN14001	4	Pin-Clevis
10	127-1799	1	HYD Cylinder ASM	26	125-6694	2	Decal-Tie Down
11	AUH432906	1	Pin-Blade	27	AUH438278-03	8	Shim-Retainer
12	AUD25279	6	Ring	28	AUH438273-03	2	Retainer-Blade
13	AUH432898	2	Pin-Blade	29	3256-27	6	Washer-Flat
14	AU1978738C1	4	Pin-Cotter, Quick Attach	30	327-4	6	Screw-HH

 
Hydraulic Cylinder Assembly No. 127-1797

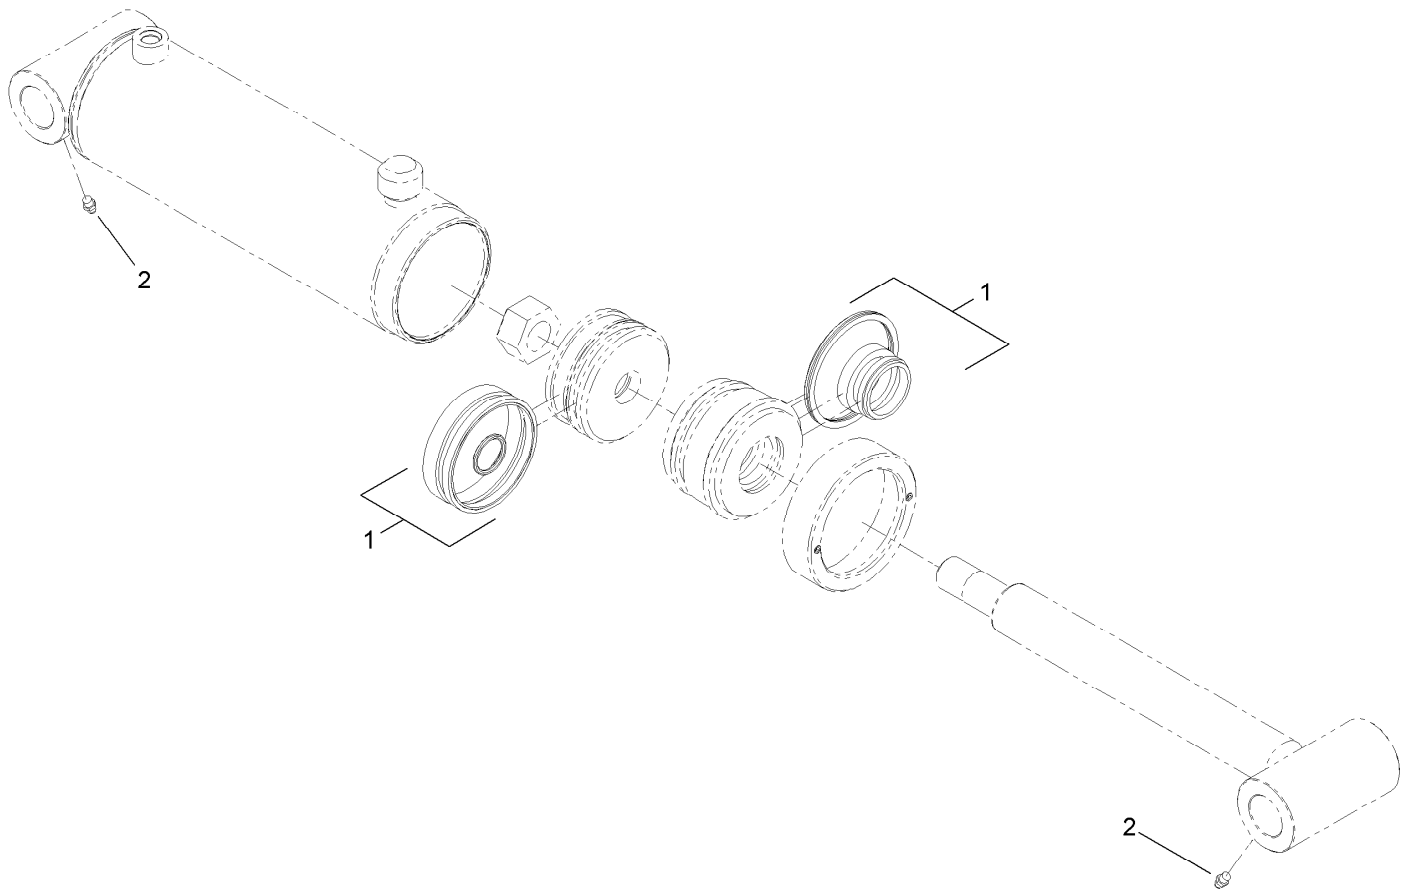

Hydraulic Cylinder Assembly No. 127-1797 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3822	1	Seal Kit
2	302-2	2	Fitting-Grease

 
Hydraulic Cylinder Assembly No. 127-1798

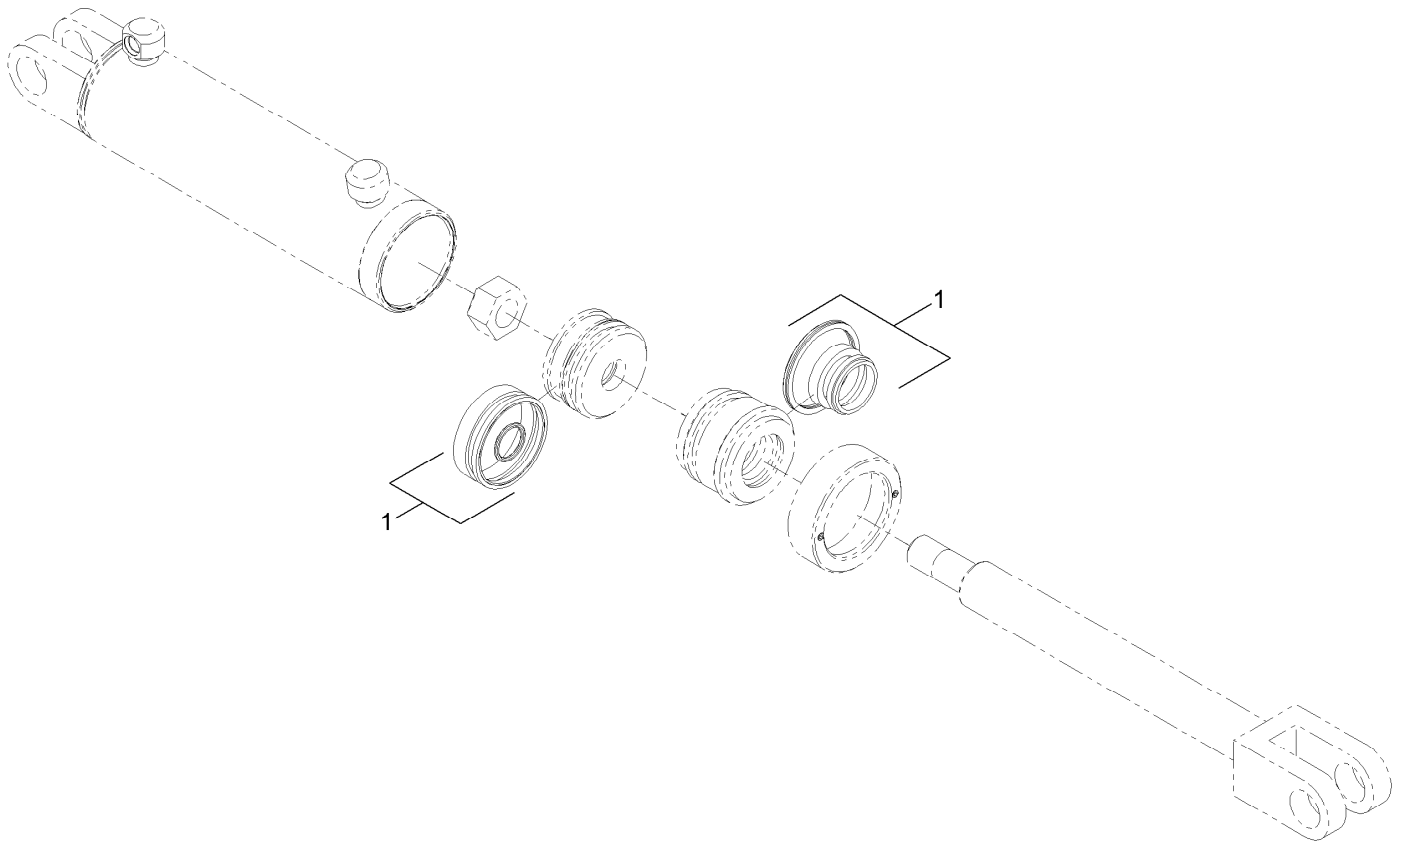

Hydraulic Cylinder Assembly No. 127-1798 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1854	1	Seal Kit

 
Hydraulic Cylinder Assembly No. 127-1799

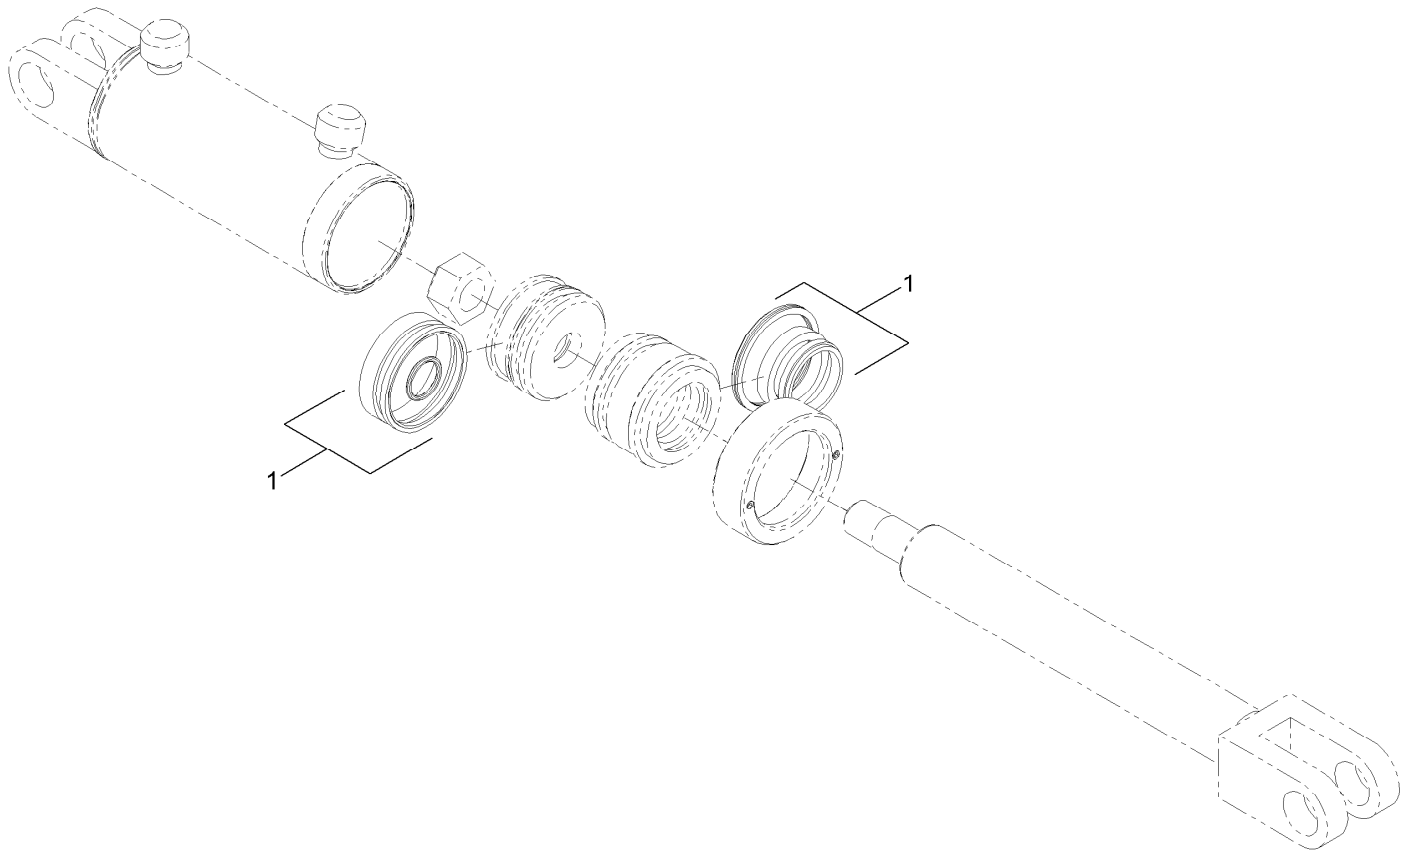

Hydraulic Cylinder Assembly No. 127-1799 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1853	1	Seal Kit

 Backfill Blade Hydraulic Plumbing Assembly

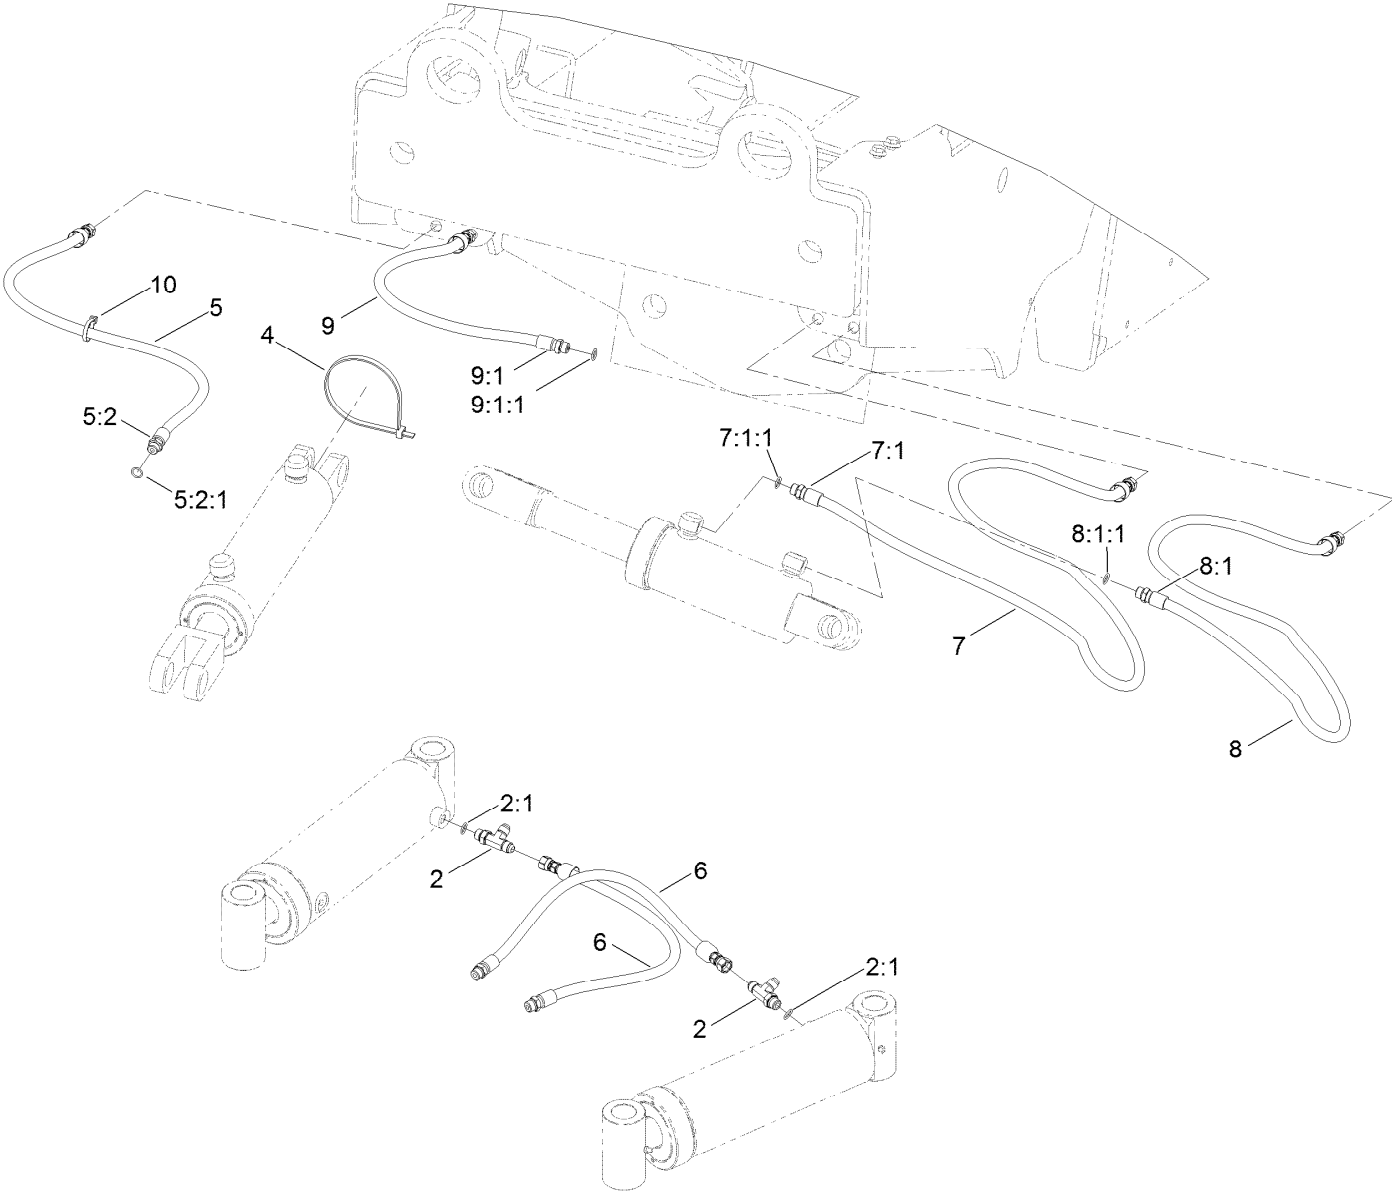


Backfill Blade Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	AU218-5243	2	Fitting-Tee	7:1:1	237-42	1	O-Ring
2:1	237-42	1	O-Ring	8	127-1817	1	HYD Hose ASM, HP
4	3334-945	1	Tie-Cable	8:1		1	Fitting-Straight, Rigid ●
5	127-1815	1	HYD Hose ASM, HP	8:1:1	237-42	1	O-Ring
5:2		1	Fitting-Straight, Rigid ●	9	131-0425	1	HYD Hose ASM, HP
5:2:1	237-42	1	O-Ring	9:1		1	Fitting-Straight, Rigid ●
6	127-1795	2	HYD Hose ASM, HP	9:1:1	237-42	1	O-Ring
7	127-1818	1	HYD Hose ASM	10	3290-379	1	Tie-Cable
7:1		1	Fitting-Straight, Rigid ●				

● Not serviced separately

 ROPS Assembly

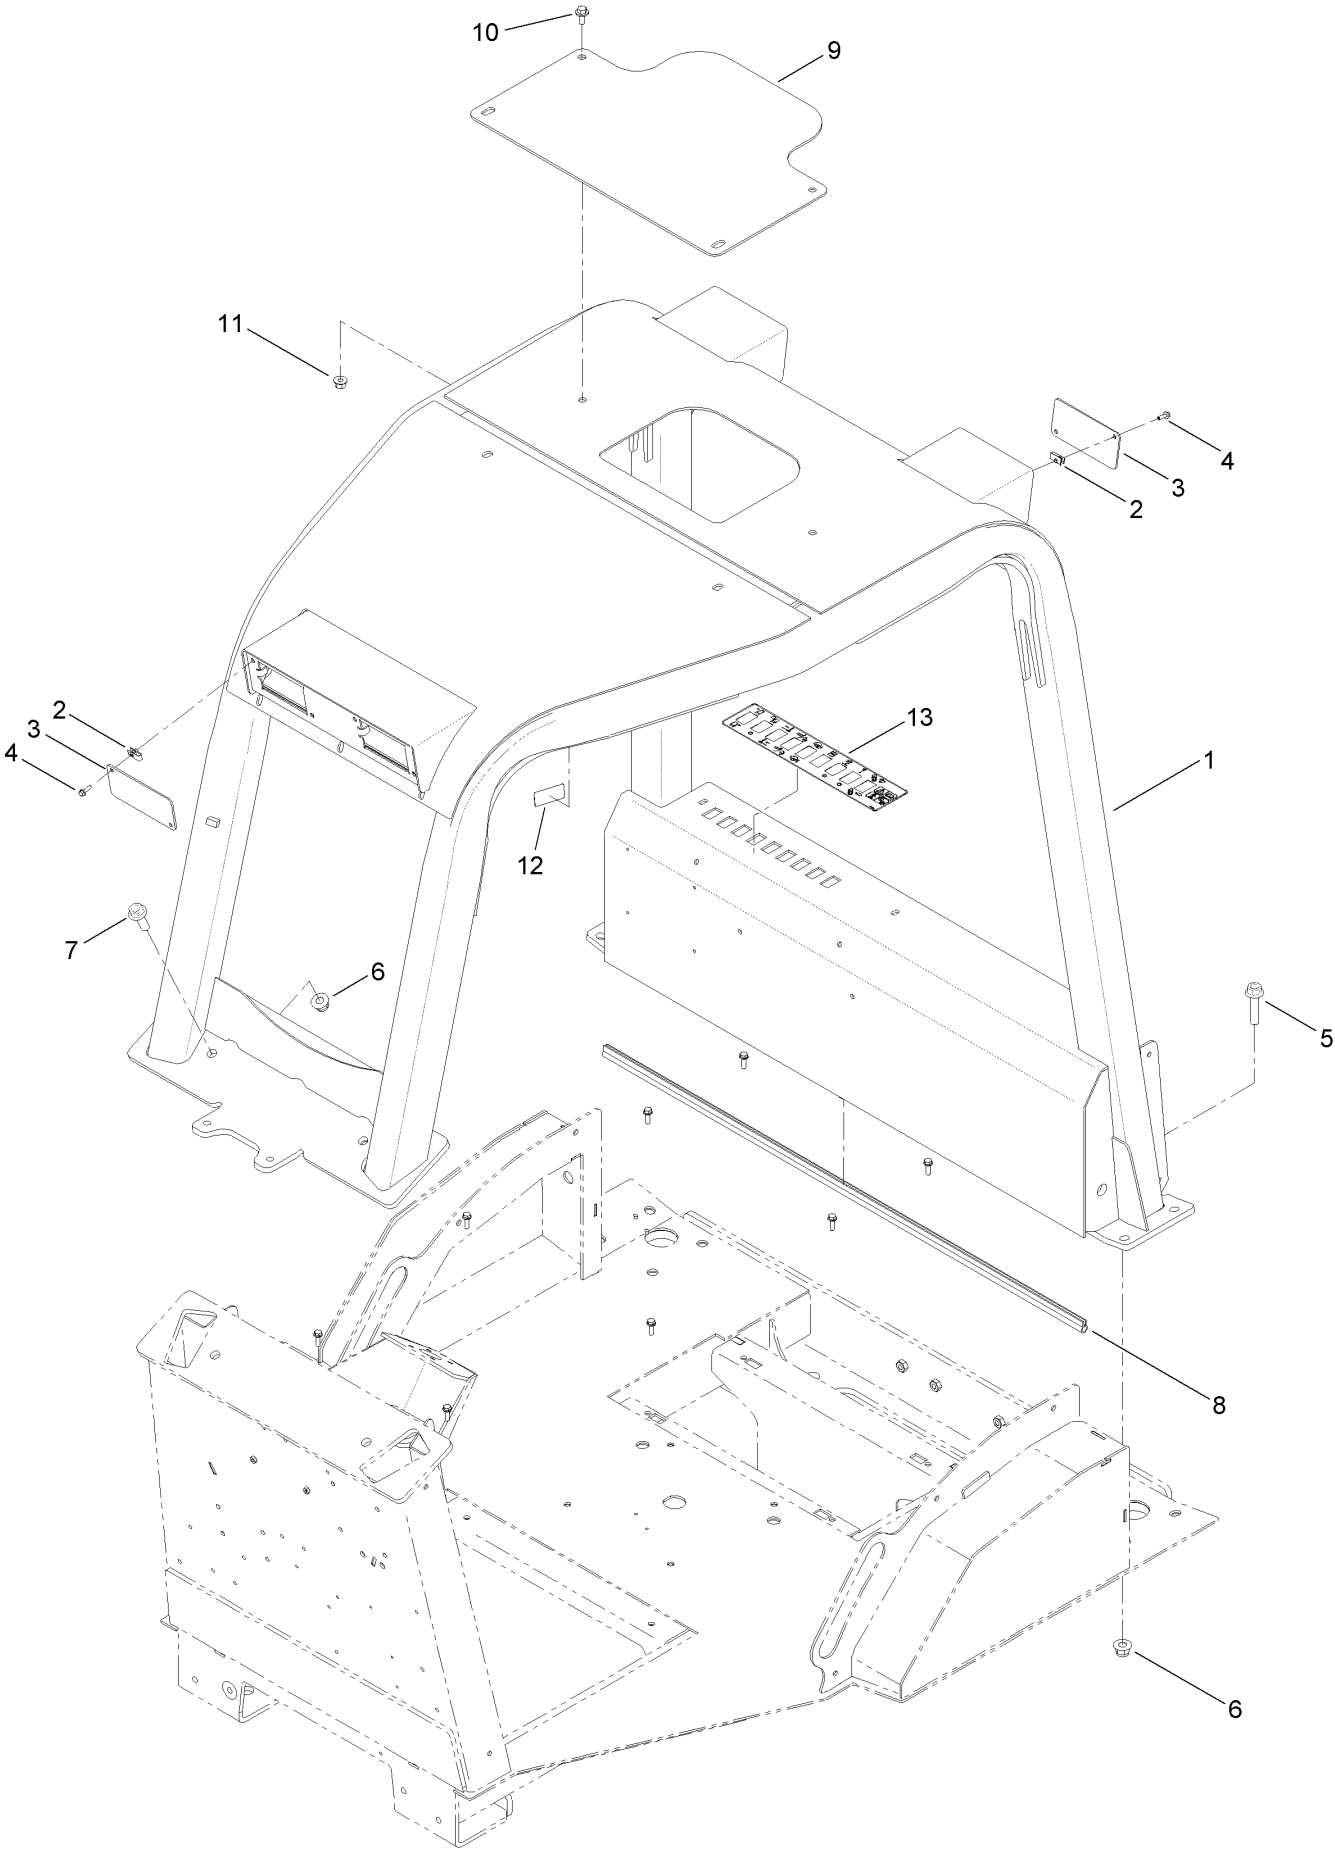

ROPS Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU116756-03	1	Main ROPS ASM	8	AU118604	1	Seal-Hood
2	AU100861	8	Nut-U	9	AU119456-03	1	Cover-ROPS
3	AU105156-03	4	Plate-Cover	10	33106-025	4	Screw-HHF
4	33103-020	8	Screw-HHF	11	115-1115	4	Nut-Lock, HHF
5	AU100364	8	Screw-Flange	12	127-1841	1	Decal-ROPS
6	AU100529	10	Nut-HHF	13	125-8495	1	Decal-Switches, Rear
7	AU100832	2	Screw-Flange				Control


Fuel Tank Assembly



Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1821	1	Fuel Tank ASM	13	2412-119	4	Clamp-Hose, Worm Drive
1:2	125-6135	1	Decal-Diesel, Ultra-Low	14	AU217-294	1	Stem-90 (Barb Hose)
2	AU21000893	1	Sender-Fuel	15	32180-030	1	Clip-Tie
4	AU8NG28121	5	Isolator-Mounting, Universal	17	2412-4	1	Clamp-R
5	127-1292	1	Cap-Diesel Fuel, Non-Vented	19	115-1447	1	Fitting-Straight
6	AU496-81018	5	Washer-Flat	20	AU217-1101	1	Coupling-Pipe (NPTF)
7	AU100353	5	Screw-HHF	21	AU31543	1	Breather
8	AU119908	1	Plug-Hex, Magnetic	22	2412-108	2	Clamp-Worm
9	AU105912	2	Tape-Anti Skid, Lower Step	23	3290-379	1	Tie-Cable
10	AUH433994	1	Strip-Anti Skid	24	109-0296	1	Hose-Fuel
11	127-1745	1	Hose-Fuel	25	106-1381	2	Fitting-Straight
12	127-1746	1	Hose-Fuel	25:1	237-42	1	O-Ring
				26	116-1127	2	Elbow-90 DEG

 
Main Valve and Manifold Assembly

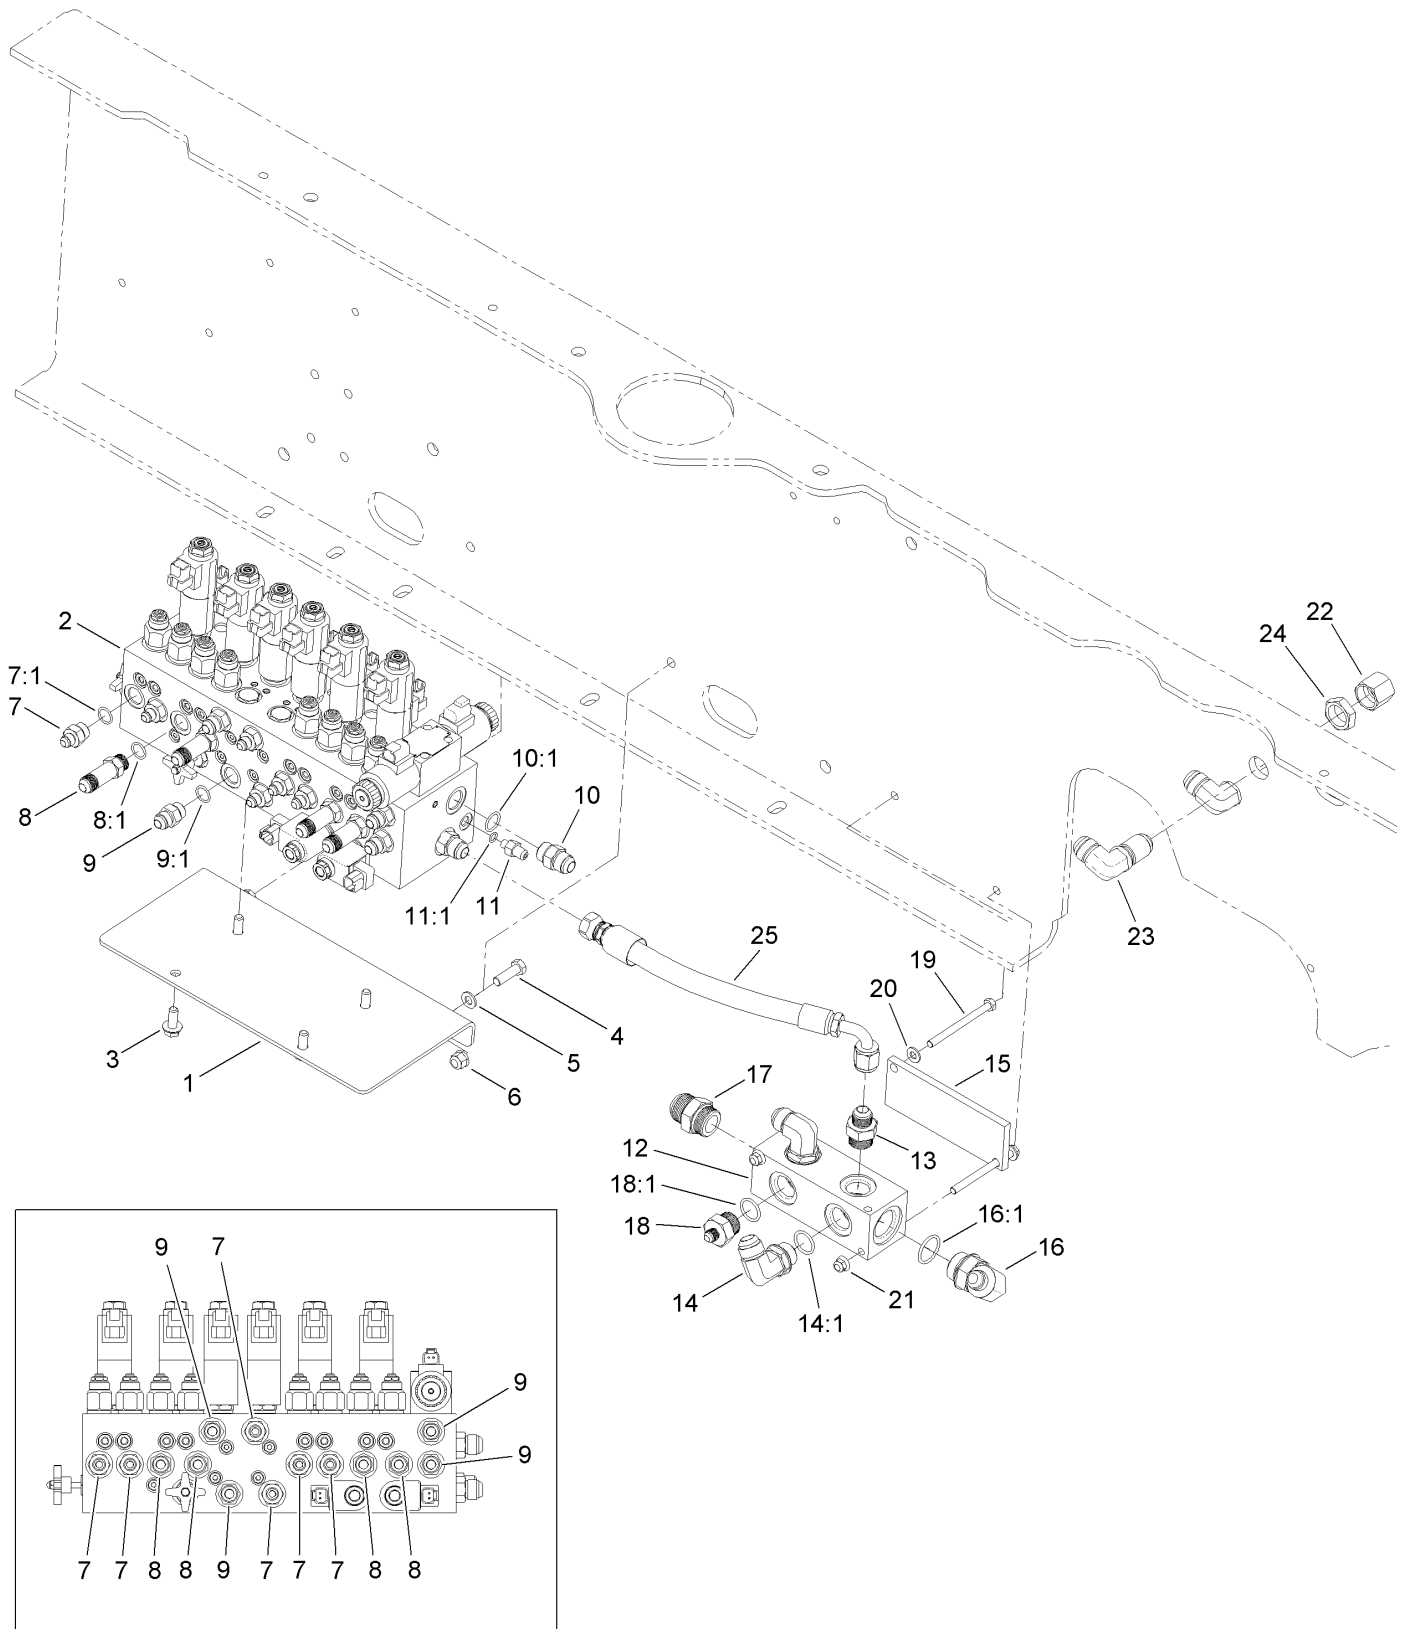

Main Valve and Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU121481-03	1	Plate-Mount, Filter	13	AU218-5063	1	Fitting-Straight
2	131-0421	1	Main Valve ASM	14	353-369	2	Fitting-Elbow, 90 DEG
3	33105-025	4	Screw-HHF	14:1	237-81	1	O-Ring
4	33115-035	2	Screw-HH	15	AU120043-03	1	Spacer
5	33095-00	2	Washer-Flat	16	AU218-5130	1	Elbow-90, Adj
6	103-9511	2	Nut-Lock, NI	16:1	237-146	1	O-Ring
7	AU218-5058	6	Connector	17	AU218-5069	1	Fitting-Straight
7:1	237-79	1	O-Ring	18	AU218-5044	1	Adapter-Straight
8	130-7462	4	Fitting-Straight, Long	18:1	237-81	1	O-Ring
8:1	237-79	1	O-Ring	19	33114-100	2	Screw-HH
9	353-388	4	Fitting-Straight	20	33094-00	2	Washer-Plain
9:1	237-79	1	O-Ring	21	104-3082	2	Nut-Lock, HHF
10	353-385	2	Fitting-Straight	22	AU218-335	2	Cap
10:1	237-80	1	O-Ring	23	AU218-696	2	Fitting-Elbow, 90
11	AU218-5352	1	Adapter-Straight	24	AU218-1256	2	Nut-Lock, Bulkhead
11:1	237-78	1	O-Ring	25	125-6856	1	HYD Hose ASM, HP
12	AU106457	1	Manifold-Return, Hydraulic				

 Main Hydraulic Valve Assembly No. 131-0421

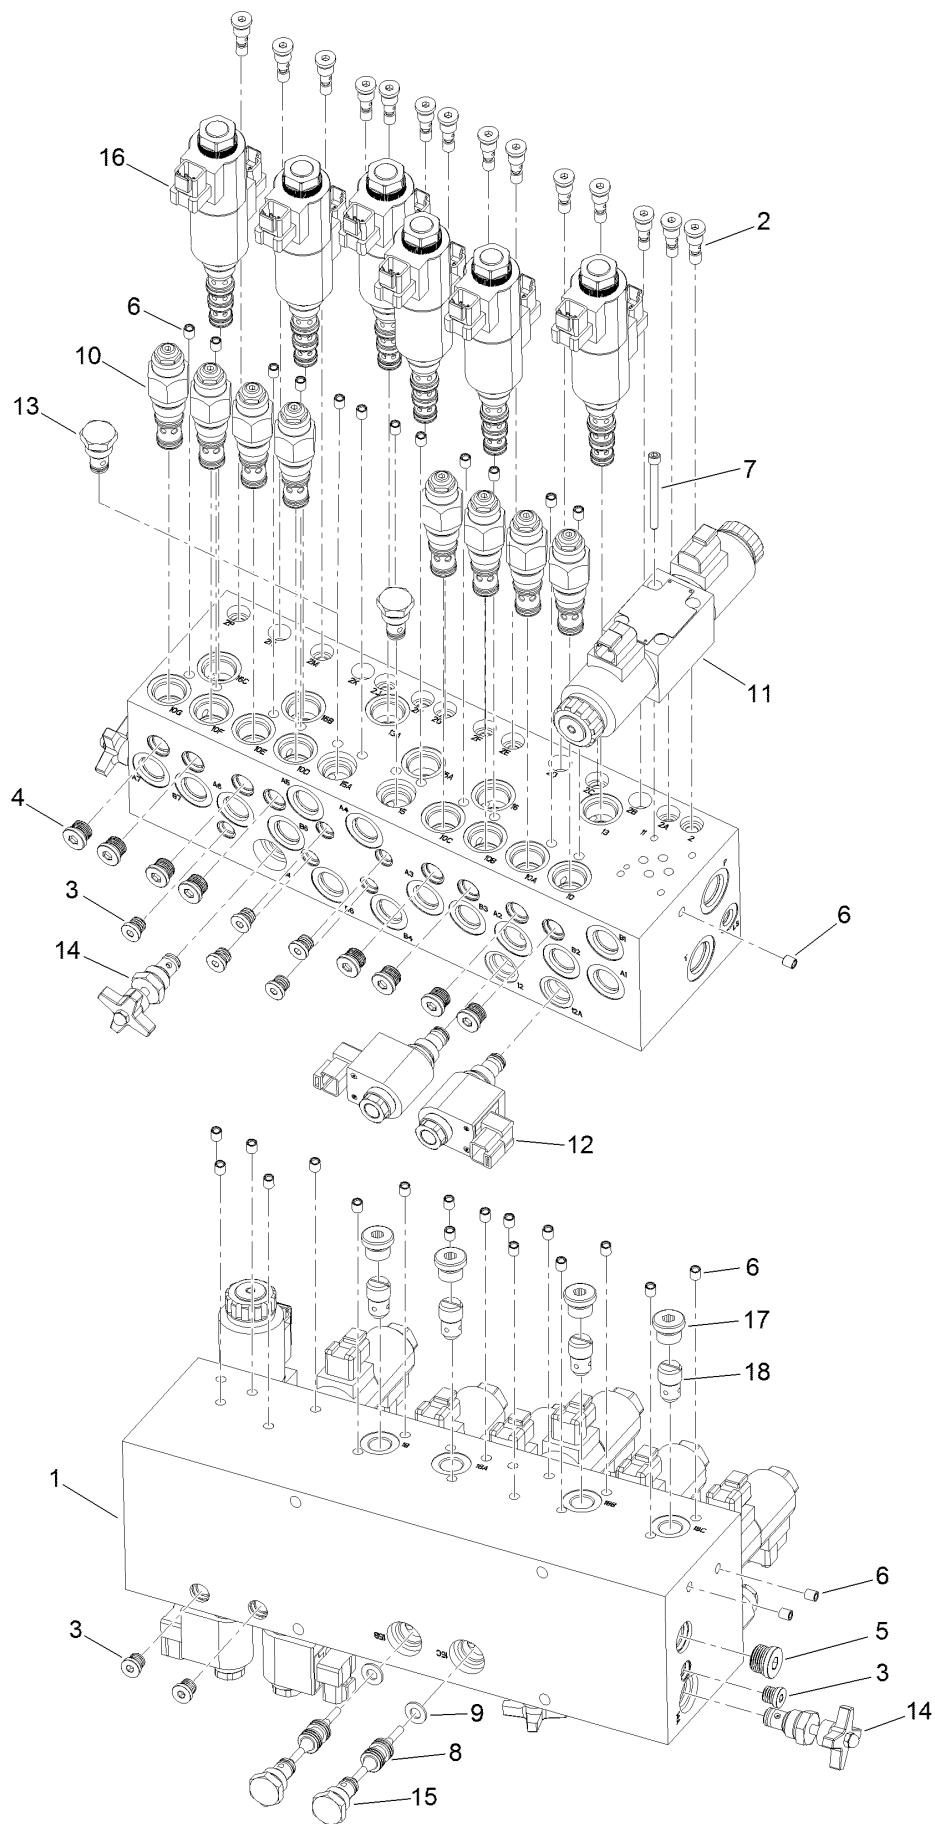


Main Hydraulic Valve Assembly No. 131-0421 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Block-Manifold ●	11	131-3813	1	Valve-Proportional
2	131-3805	14	Valve-Check	12	131-3814	2	Valve-Solenoid
3	131-3806	8	Plug	13	AU119090	2	Cartridge-Hydraulics, Auxiliary
4	131-3807	8	Plug	14	131-3817	1	Valve-Needle
5	131-3808	1	Plug	15	131-3818	2	Valve-Check
6		32	Plug-Expansion ●	16	131-3819	4	Valve-Solenoid
7	131-3809	4	Screw-Shcs	17	131-3820	1	Plug
8	131-3810	2	Piston	18	133-5296	4	Valve-Flow Control, Pressure Compensated
9	131-3811	4	Ring-Backup				
10	131-3812	8	Valve-Counterbalance				

● Not serviced separately

 
Fan Drive Valve and Flow Divider Assembly

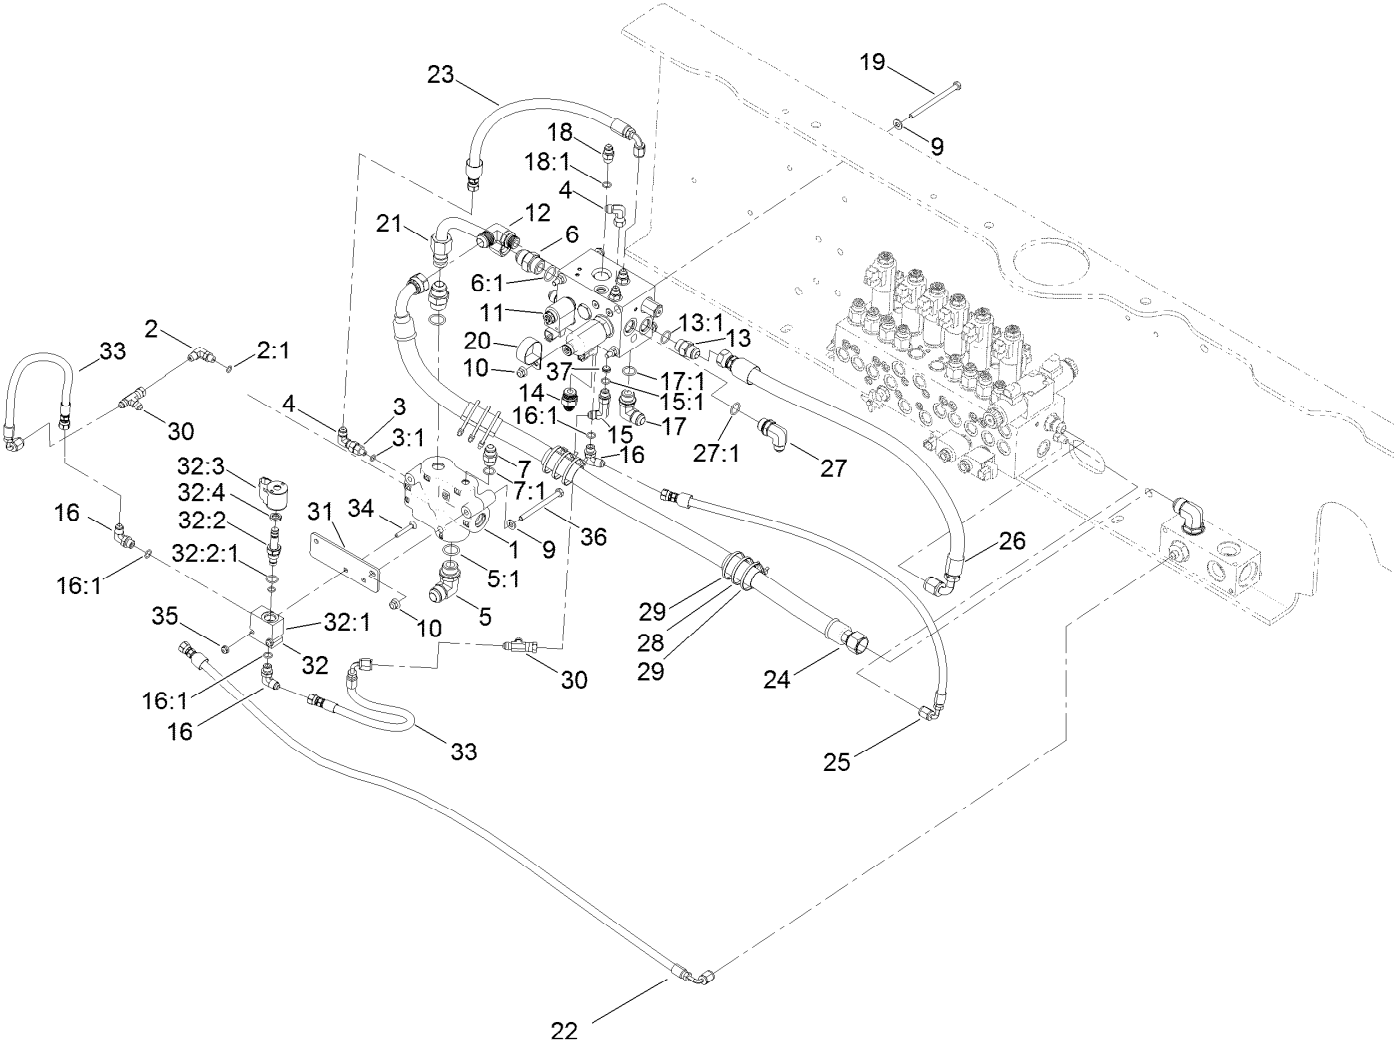

Fan Drive Valve and Flow Divider Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115763	1	Valve-Flow Divider, Priority	18:1	237-42	1	O-Ring
2	AU218-5278	1	Elbow-90, Adj	19	33114-120	4	Screw-HH
2:1	237-78	1	O-Ring	20	2412-147	1	Clamp-R
3	AU218-5352	1	Adapter-Straight	21	AU122191	1	Tube
3:1	237-78	1	O-Ring	22	125-6801	1	HYD Hose ASM
4	AU218-980	2	Elbow-Swivel, 90 DEG	23	125-6805	1	HYD Hose ASM
5	353-369	1	Fitting-Elbow, 90 DEG	24	125-6857	1	HYD Return Hose ASM
5:1	237-81	1	O-Ring	25	125-6789	1	HYD Hose ASM
6	AU218-5064	2	Fitting-Straight	26	125-6870	1	HYD Hose ASM
6:1	237-81	1	O-Ring	27	353-426	1	Fitting-90 DEG
7	353-388	1	Fitting-Straight	27:1	237-80	1	O-Ring
7:1	237-79	1	O-Ring	28	AU112950	3	Protector-Hose
9	33094-00	6	Washer-Plain	29	3290-379	9	Tie-Cable
10	104-3082	6	Nut-Lock, HHF	30	353-877	2	Fitting-HYD, Tee
11	AU115768	1	Fan Drive Valve ASM	31	131-2846-03	1	Plate-Mounting, Valve
12	95-0581	1	Fitting-Elbow, 90 DEG	32	131-2884	1	Valve-Solenoid
13	353-385	2	Fitting-Straight	32:1	131-2845	1	Body, Valve
13:1	237-80	1	O-Ring	32:2	107-7518	1	Valve-Solenoid
14	353-433	1	Fitting-Straight	32:2:1	107-7527	1	Seal Kit
15	92-3505	1	Fitting-Adaptor, 90 DEG	32:3	119-8036	1	Coil
15:1	237-42	1	O-Ring	32:4	105-9332	1	Nut-E Coil
16	103-1802	3	Fitting-Elbow, 90 DEG	33	125-6790	2	Hose ASM
16:1	237-42	1	O-Ring	34	3229-5	2	Screw-CARR
17	353-370	1	Fitting-Elbow, 90 DEG	35	104-7201	2	Nut-HF
17:1	237-80	1	O-Ring	36	33114-100	2	Screw-HH
18	353-384	3	Fitting-Straight	37	131-2882	1	Orifice-Disc

 
Hydraulic Tank Assembly

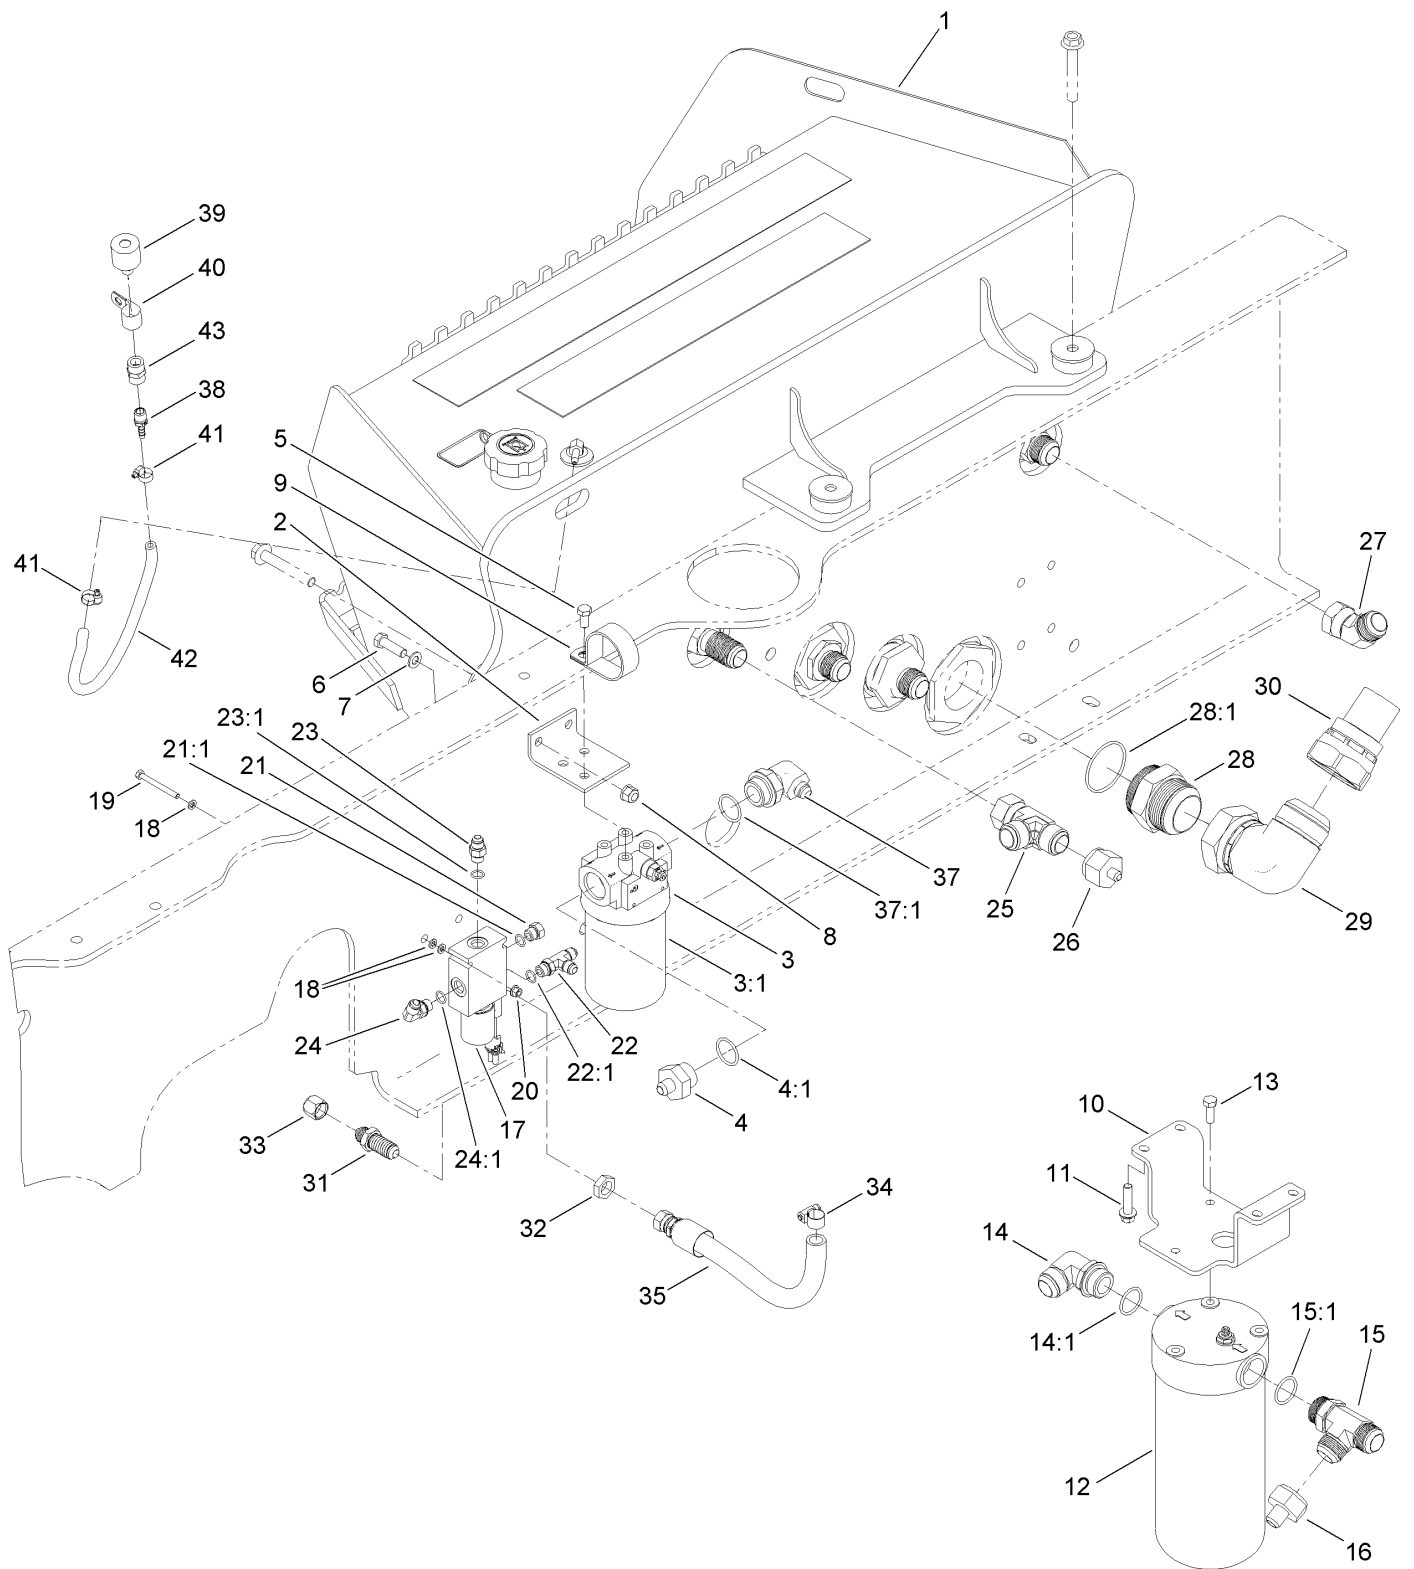

Hydraulic Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU118190	1	HYD Tank ASM	22	AU218-5243	1	Fitting-Tee
2	AU111774A1-03	1	Bracket-Mounting, Filter	22:1	237-42	1	O-Ring
3	AUD121629	1	Oil Filter ASM	23	353-384	1	Fitting-Straight
3:1	110-4146	1	Filter-HYD	23:1	237-42	1	O-Ring
4	AU218-5071	1	Connector ASM	24	103-1802	1	Fitting-Elbow, 90 DEG
4:1	237-146	1	O-Ring	24:1	237-42	1	O-Ring
5	323-4	3	Screw-HH	25	AU218-5223	1	Tee-Swivel
6	33115-035	2	Screw-HH	26	AU218-724	1	Reducer
7	33095-00	2	Washer-Flat	27	AU218-5176	1	Fitting-Elbow, 45
8	103-9511	2	Nut-Lock, NI	28	AU91-202702-32-3	1	Adapter
9	110-6245	1	Clamp-R	28:1	237-189	1	O-Ring(3-932)
10	127-1862-03	1	Bracket-Filter	29	AU91-2071-32-32S	1	Adapter-90 DEG
11	114-4681	4	Screw-HHF	30	130-7530	1	Fitting-Straight
12	AUH674791	1	Filter-Return, HYD	31	AU218-674	1	Union
13	323-6	3	Screw-HH	32	AU218-1255	1	Nut-Lock
14	AU218-5110	1	Elbow-90 DEG	33	AU218-755	1	Cap
14:1	237-146	1	O-Ring	34	2412-119	1	Clamp-Hose, Worm Drive
15	130-7531	1	Fitting-Tee	35	125-6882	1	HYD Hose ASM, LP
15:1	237-146	1	O-Ring	37	131-0407	1	Fitting-Elbow, 90
16	AU91-2215-16-8S	1	Adapter-Reducer	37:1	237-146	1	O-Ring
17	AU187505C91	1	Solenoid Valve ASM	38	115-1447	1	Fitting-Straight
18	33093-00	6	Washer-Flat	39	AU31543	1	Breather
19	33113-060	2	Screw-HH	40	2412-4	1	Clamp-R
20	81-0130	2	Nut-Flange, NI	41	2412-108	2	Clamp-Worm
21	353-508	1	Plug-HH	42	109-0296	1	Hose-Fuel
21:1	237-42	1	O-Ring	43	AU217-1101	1	Coupling-Pipe (NPTF)

 Hydraulic Tank Assembly No. AU118190

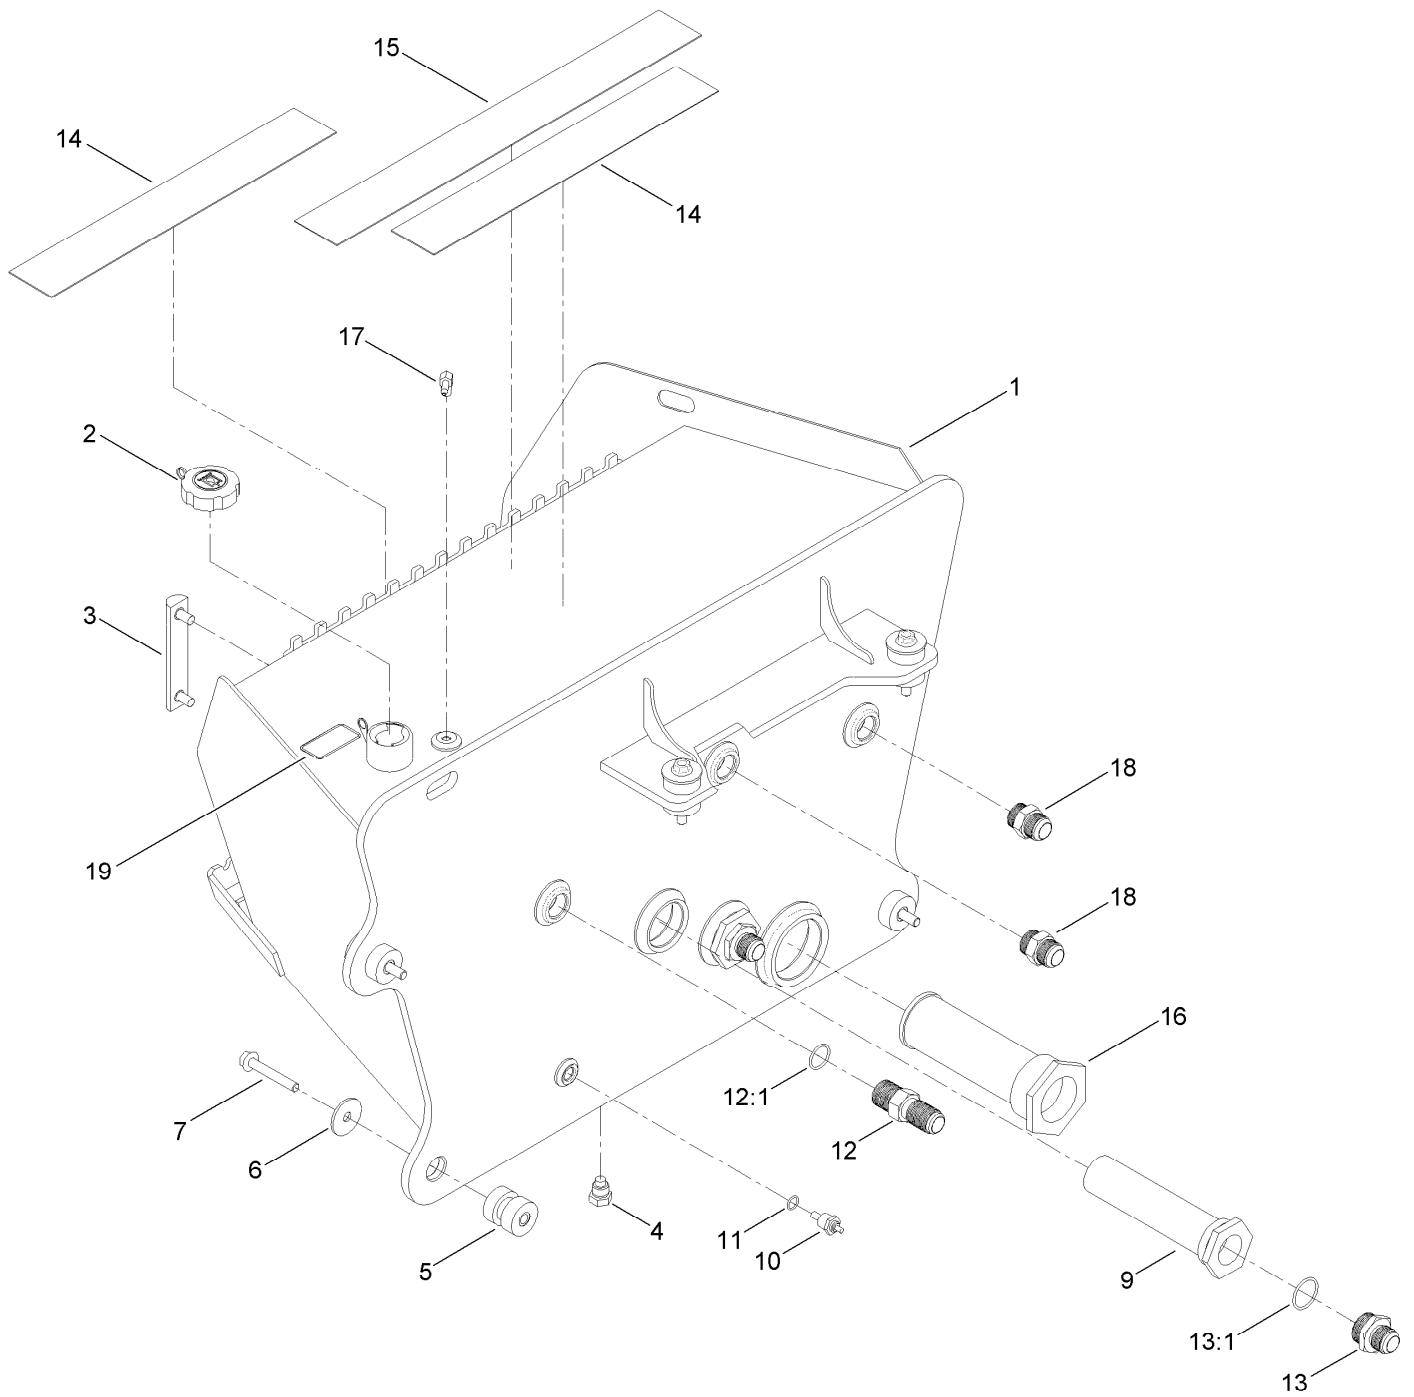


Hydraulic Tank Assembly No. AU118190 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1837-01	1	Tank-Hydraulic
2	AU105820	1	Cap-HYD Fluid (W/ Lock)
3	AUL116247	1	Gauge-Sight
4	AU119908	1	Plug-Hex, Magnetic
5	AU8NG28121	5	Isolator-Mounting, Universal
6	AU496-81018	5	Washer-Flat
7	AU100353	5	Screw-HHF
9	AU118209	2	Strainer-Mounted, Tank
10	AU119493	1	Sensor-Sender, Oil/Water Temp
11	AU637-63153	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	AU91-202713-16-1	1	Adapter
12:1	237-146	1	O-Ring
13	AU218-5086	2	Adapter-Straight
13:1	237-101	1	O-Ring
14	AU105912	2	Tape-Anti Skid, Lower Step
15	AUH433994	1	Strip-Anti Skid
16	AU8FL10013	1	Strainer-Suction
17	AU217-294	1	Stem-90 (Barb Hose)
18	AU218-5069	2	Fitting-Straight
19	125-8483	1	Decal-HYD Fluid

 Tandem Pump Plumbing Assembly

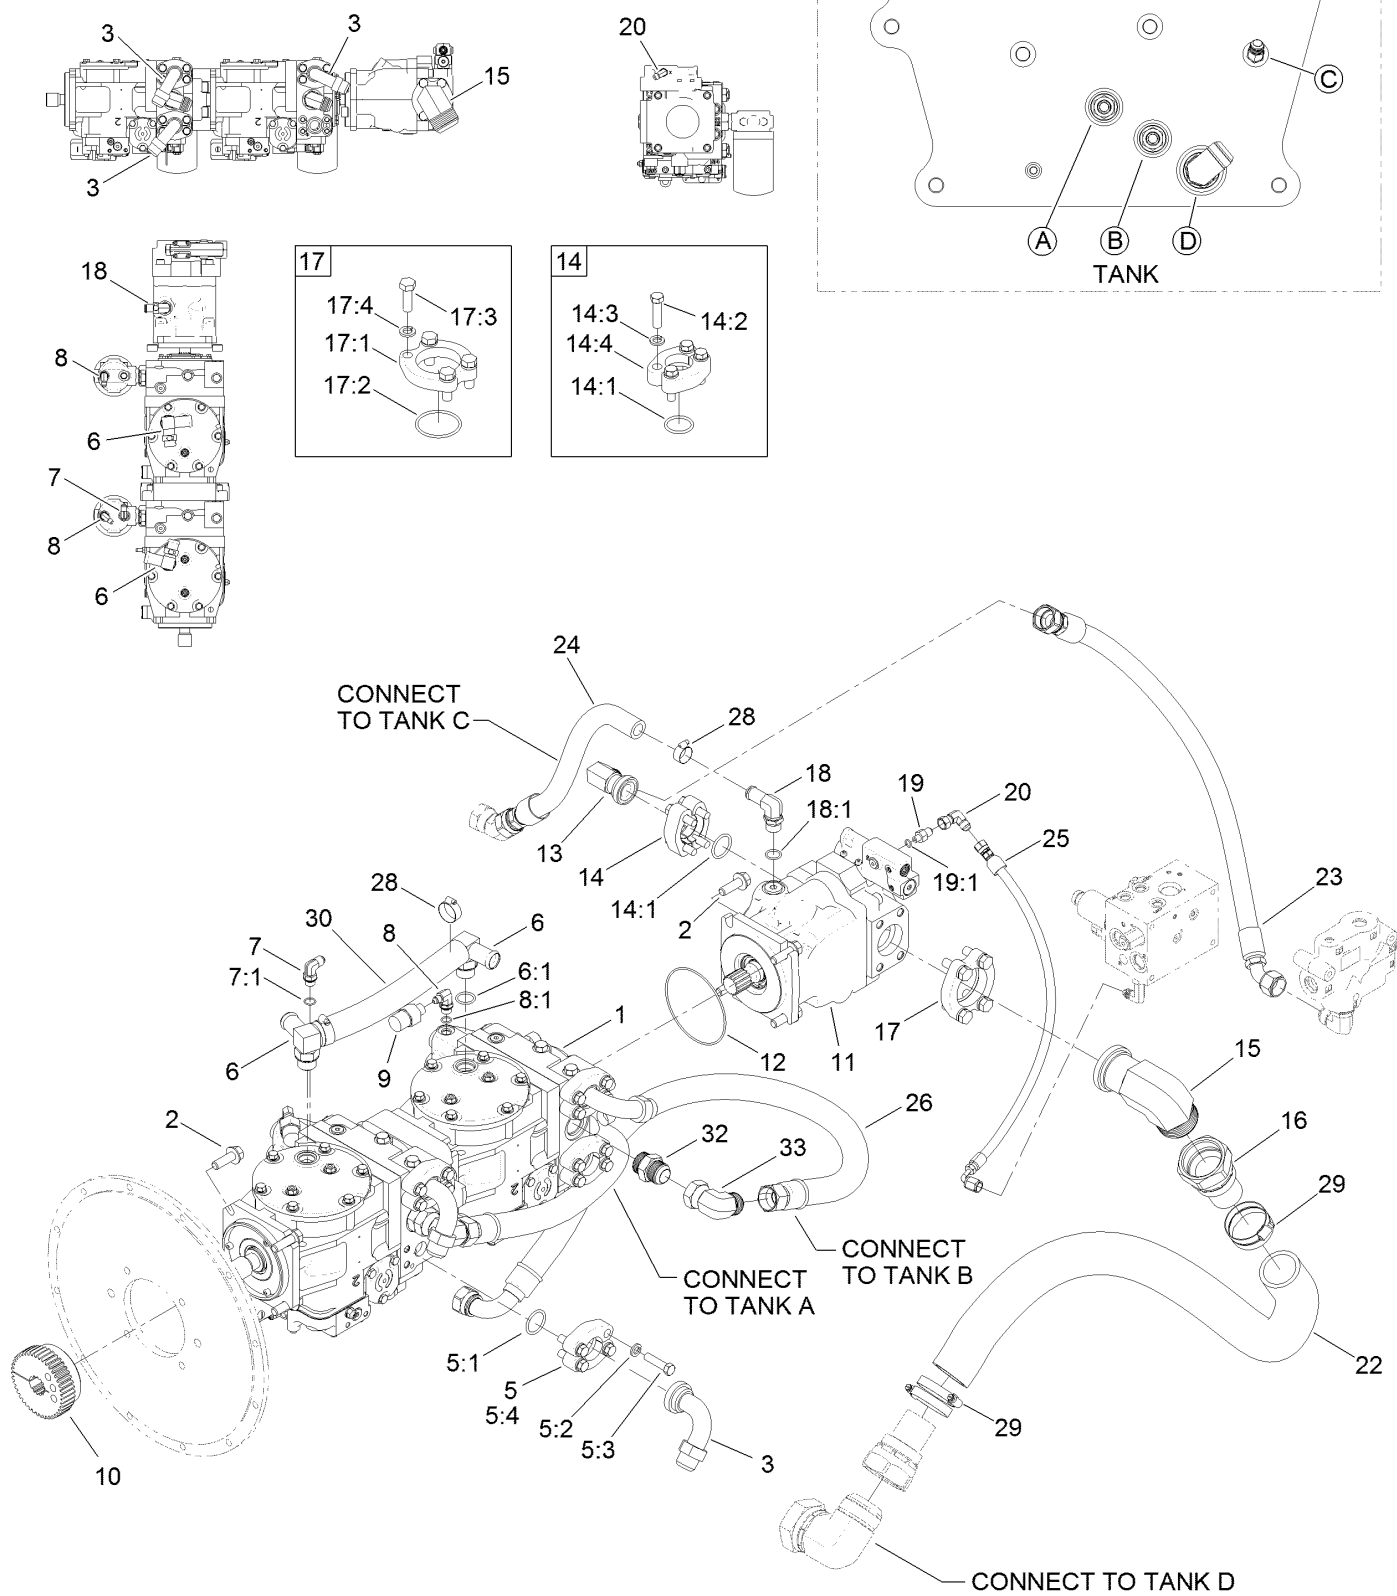


Tandem Pump Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115782	1	Tandem Pump ASM	14:4	138-5115	2	Code 61 Split Flange Half
2	100-6116	8	Screw-HHF	15	AU91-500024-32S	1	Adapter-Flange, Split
3	AUH439280	3	Fitting-Elbow	16	130-7530	1	Fitting-Straight
5	AU114285A1	4	HYD Flange Kit	17	125-4538	1	Flange Kit
5:1	121-3904	1	O-Ring	17:1		1	Flange-Code 61 ●
5:2	3253-6	4	Washer-Lock	17:2	125-6148	1	O-Ring
5:3	AU113-372	4	Screw-HH	17:3	325-6	4	Screw-HH
5:4		2	Flange-Half, Code 62 ●	17:4	3253-7	4	Washer-Lock
6	AU375462A1	2	Connector	18	87-8170	1	Fitting-90
6:1	237-81	1	O-Ring	18:1	237-80	1	O-Ring
7	103-1802	1	Fitting-Elbow, 90 DEG	19	AU218-5352	1	Adapter-Straight
7:1	237-42	1	O-Ring	19:1	237-78	1	O-Ring
8	340-134	2	Fitting-Elbow, 90	20	AU218-980	1	Elbow-Swivel, 90 DEG
8:1	237-42	1	O-Ring	22	AU124968	1	Hose-Fuel, Tank Fill
9	AU443897A1	2	Switch-Pressure	23	125-6802	1	HYD Hose ASM, HP
10	AU358988A1	1	Hub-Coupler	24	125-6812	1	HYD Hose ASM, LP
11	127-1812	1	HYD Pump ASM	25	125-6773	1	HYD Hose ASM
12	AU70-9004104-158	1	Seal-O Ring	26	125-6815	2	HYD Return Hose ASM
13	AU91-500024-16S	1	Adapter-Flange, Split	28	2412-34	3	Clamp-Hose
14	AU91-FF593-16	1	Flange Kit	29	2412-42	4	Clamp-Hose
14:1	121-3904	1	O-Ring	30	125-6853	1	Hose
14:2	323-44	4	Screw-HH	32	AU218-5069	2	Fitting-Straight
14:3	3253-21	4	Washer-Lock	33	AU218-5234	2	Fitting-Elbow, 90

● Not serviced separately

 
Hydraulic Gear Pump Assembly No. 127-1812

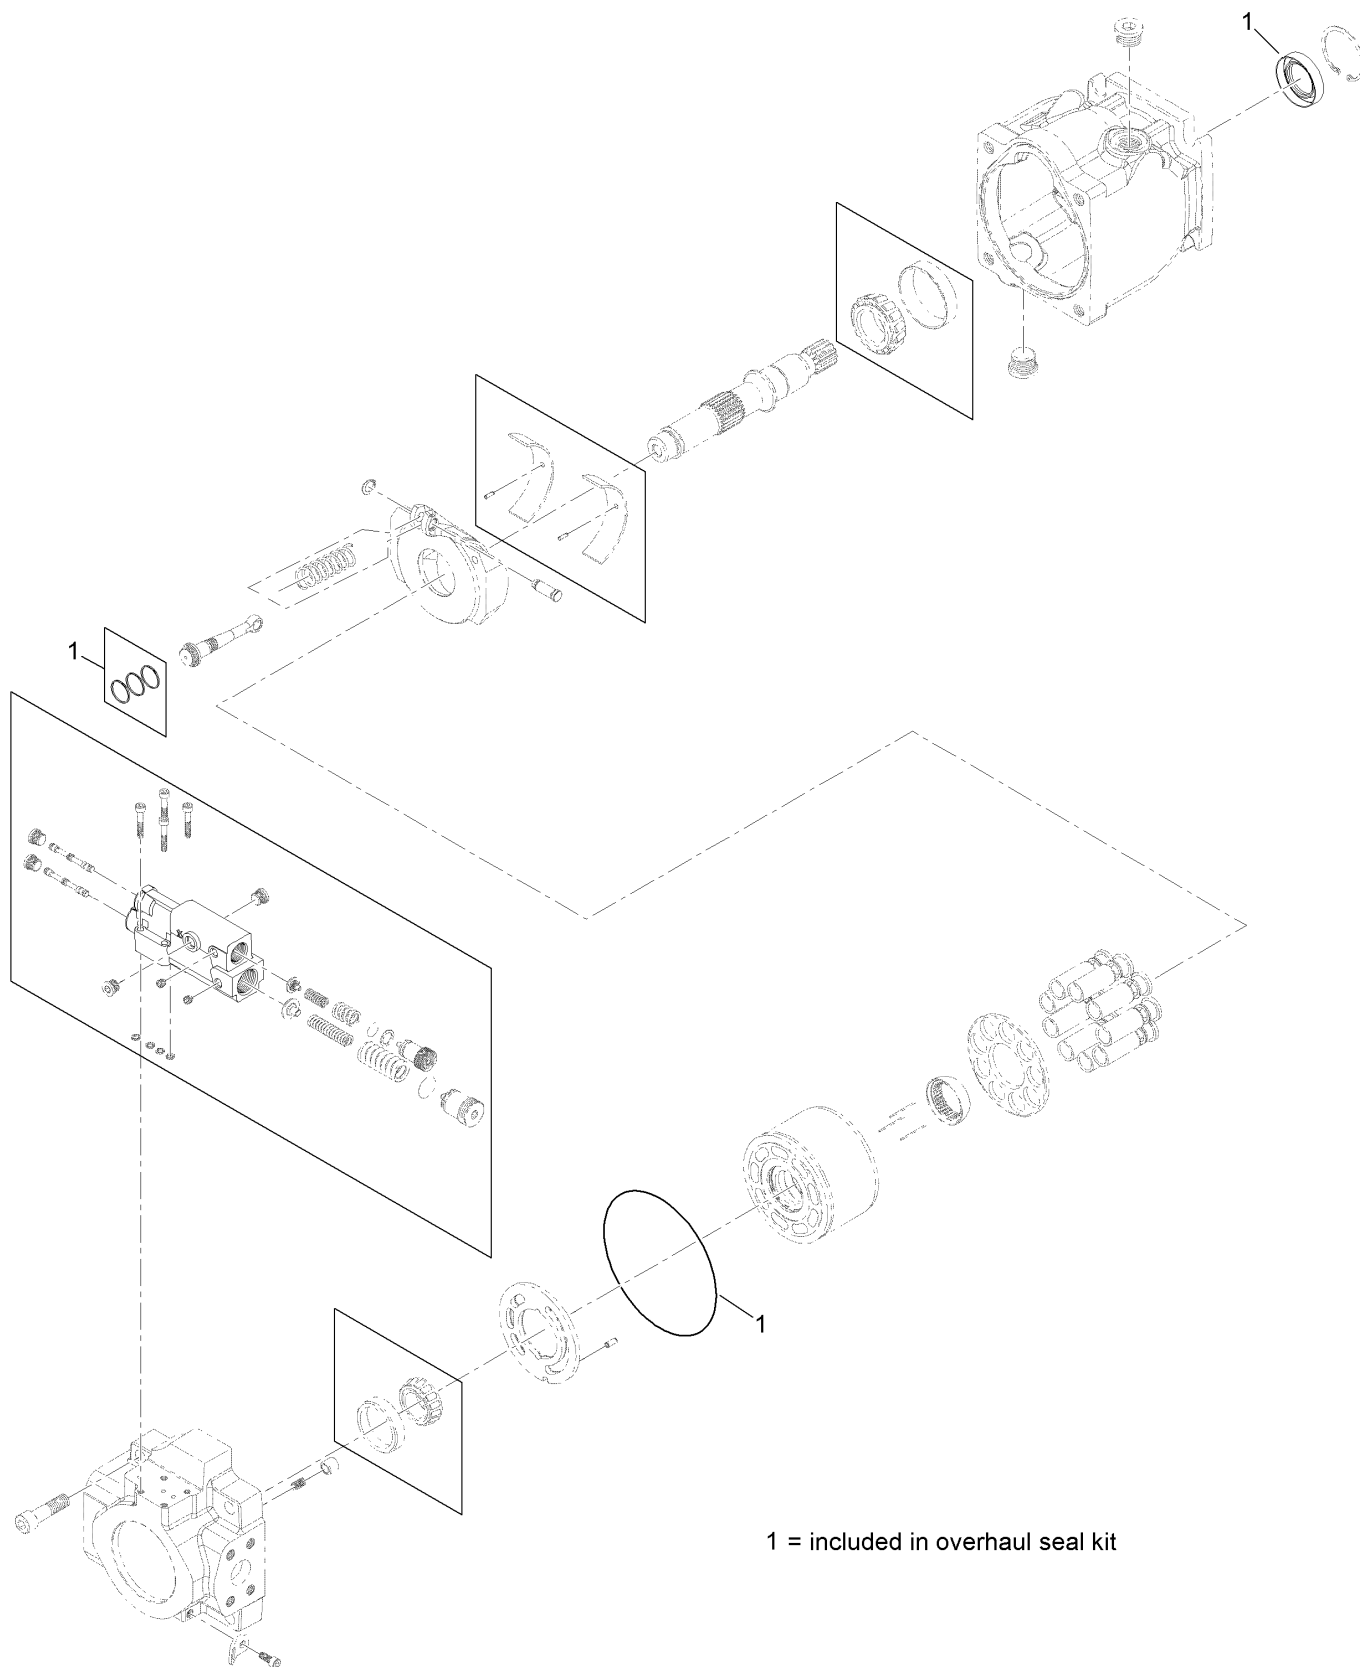

Hydraulic Gear Pump Assembly No. 127-1812 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8412	1	Overhaul Seal Kit

 
Tandem Pump and Main Valve Hydraulic Plumbing Assembly

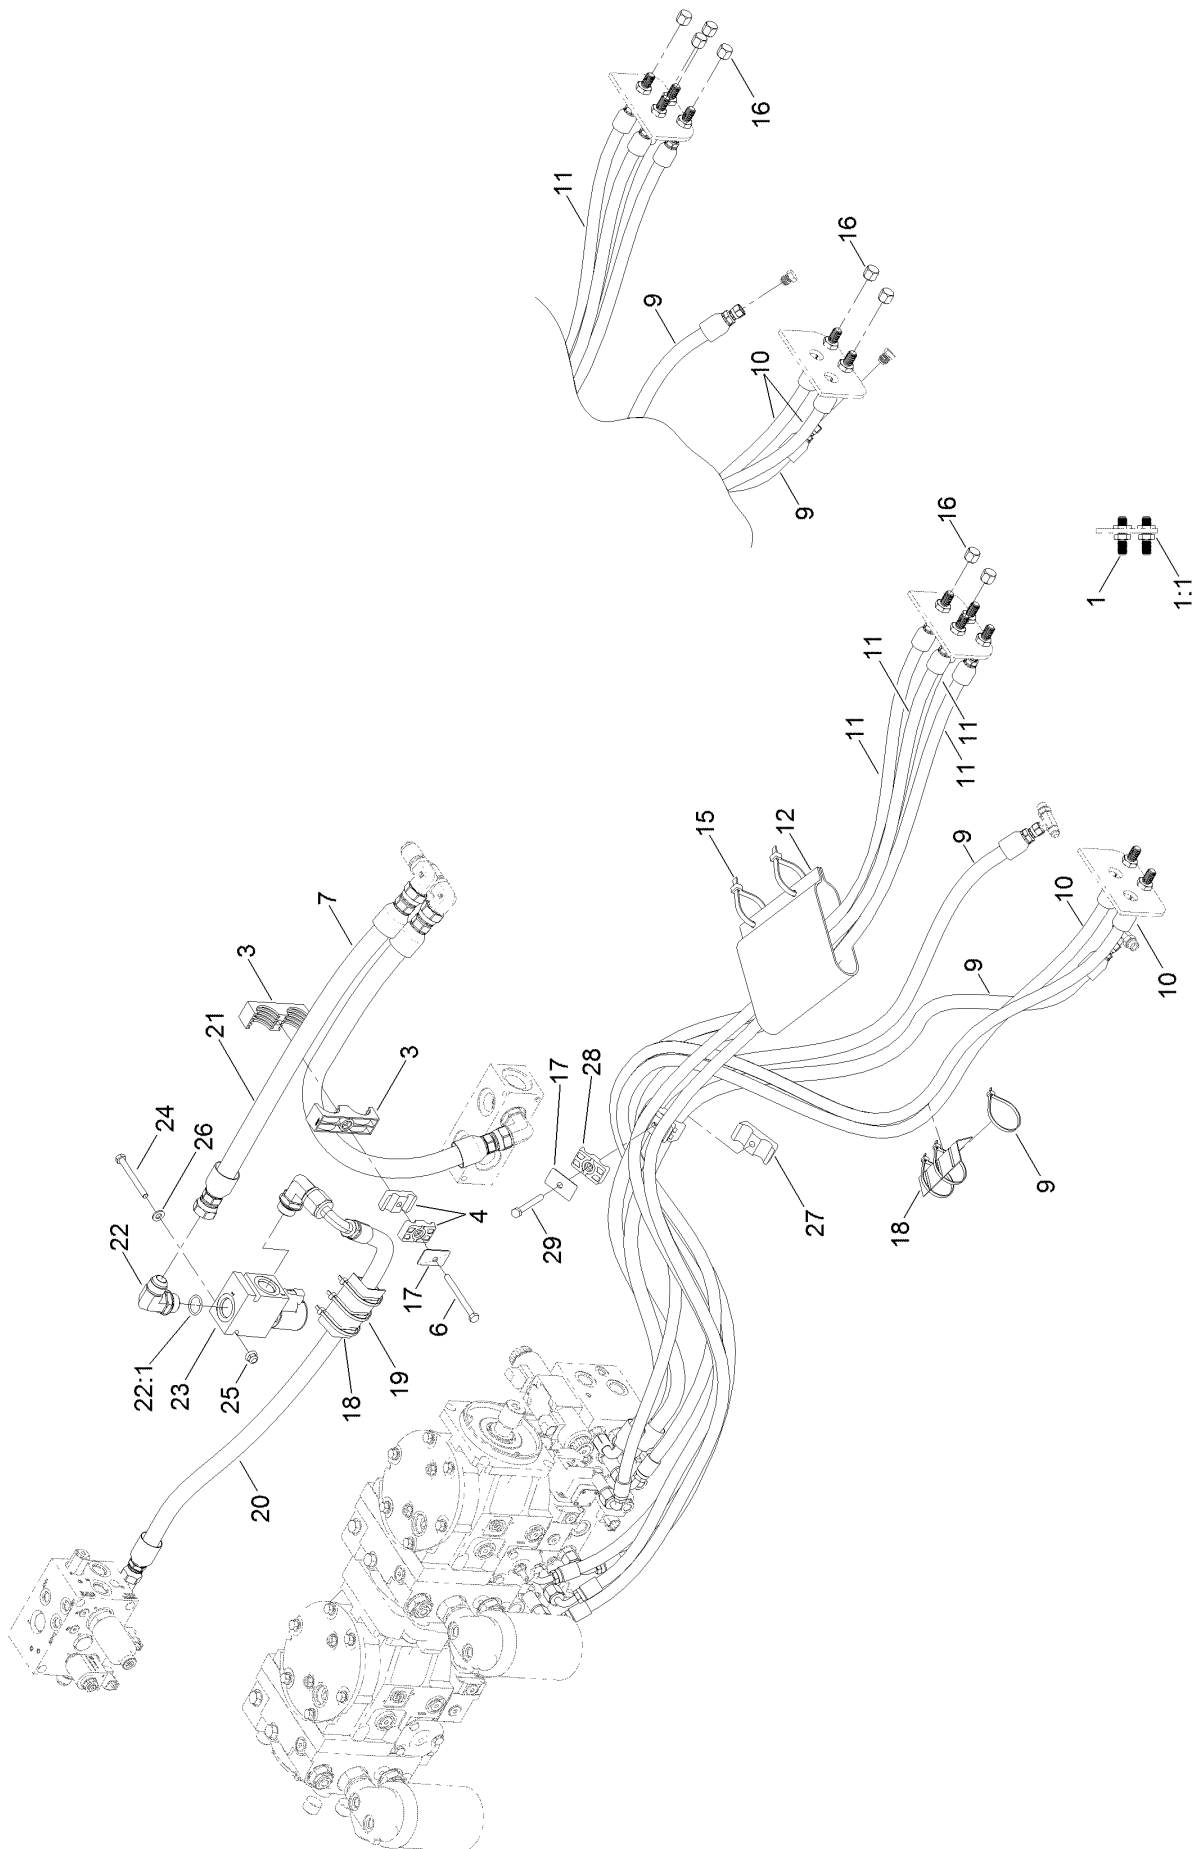

Tandem Pump and Main Valve Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU218-673	6	Union-Bulkhead	18	AU112950	2	Protector-Hose
1:1	AU218-1254	1	Nut-Lock, Bulkhead	19	3290-379	6	Tie-Cable
3	130-7451	1	Clamp-Twin	20	131-0435	1	HYD Hose ASM
4	56-7976	2	Clamp-Tube	21	131-0436	1	HYD Hose ASM
6	322-22	1	Screw-HH	22	353-369	2	Fitting-Elbow, 90 DEG
7	125-6855	1	HYD Hose ASM	22:1	237-81	1	O-Ring
9	125-6877	2	HYD Hose ASM	23	131-0433	1	Valve-Blocking
10	125-6878	2	HYD Hose ASM	24	33114-080	2	Screw-HH
11	125-6880	4	HYD Hose ASM	25	104-3082	2	Nut-Lock, HHF
12	AU107409	1	Boot-Hose	26	33094-00	2	Washer-Plain
15	3334-945	2	Tie-Cable	27	94-8105	2	Clamp-Tube
16	01-201-4520	2	Cap	28	56-7971	2	Clamp-Tube
17	69-9760	2	Coverplate	29	322-14	1	Screw-HH






 
Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2

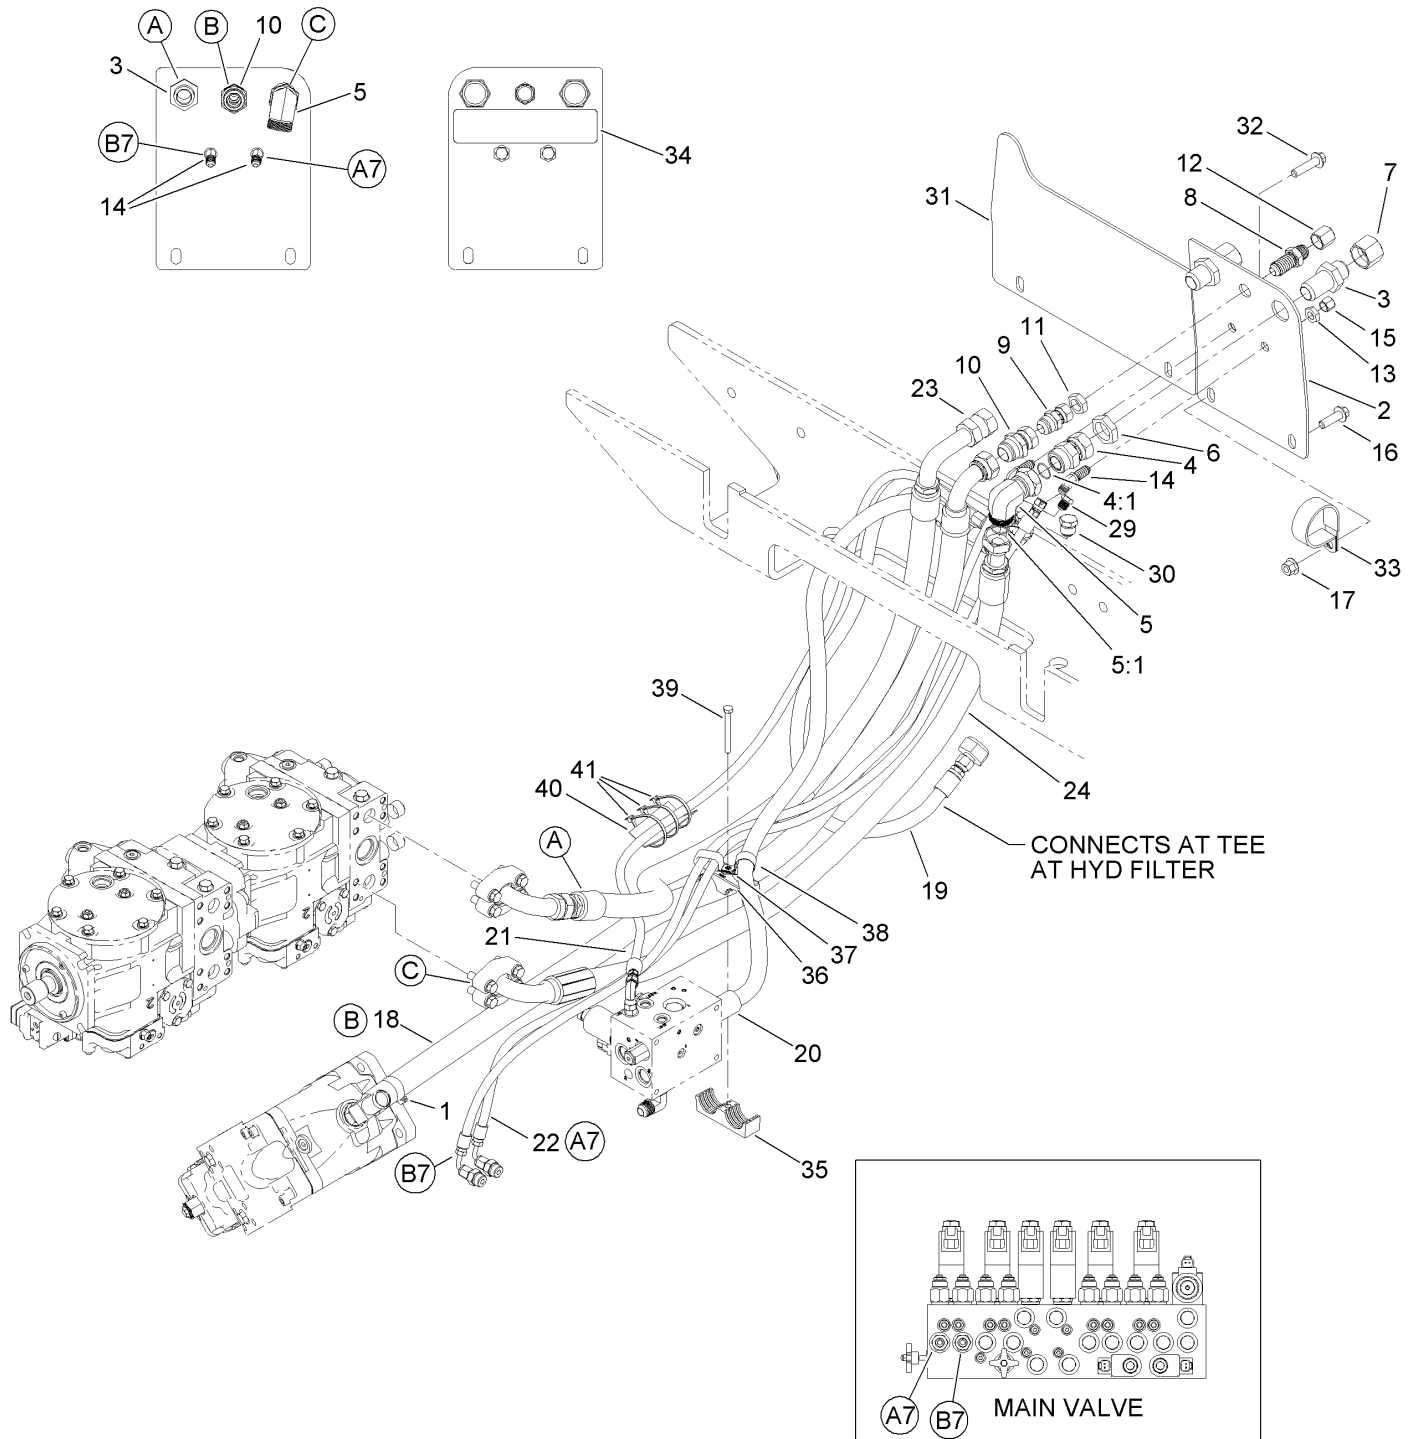

Tandem Pump and Main Valve Hydraulic Plumbing Assembly No. 2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	2412-34	1	Clamp-Hose	19	125-6866	1	HYD Hose ASM, HP
2	AU118263-03	1	Plate-Mounting, HYD Fittings	20	125-6867	1	HYD Hose ASM, HP
3	AU218-678	2	Union-Bulkhead	21	125-6879	1	HYD Hose ASM, HP
4	130-7535	1	Fitting-Straight	22	125-6881	2	HYD Hose ASM, HP
4:1	340-65	1	O-Ring	23	125-6811	1	HYD Hose ASM, HP
5	92-7645	1	Fitting-Swivel, 90 DEG	24	130-7506	1	HYD Hose ASM
5:1	340-65	1	O-Ring	29	AU218-774	1	Plug
6	AU218-1250	2	Nut-Lock, Bulkhead	30	AU218-776	2	Plug
7	AU218-758	2	Cap	31	AU124405-03	1	Plate-Cover
8	AU218-675	1	Union-Bulkhead	32	33106-050	1	Screw-HHF
9	AU91-2215-10-12S	1	Adapter-Reducer	33	2412-102	1	Clamp-R
10	AU91-2215-12-16S	1	Adapter-Reducer	34	127-1828	1	Decal-Attachment Connection
11	AU218-1251	1	Nut-Lock, Bulkhead	35	130-7451	1	Clamp-Twin
12	AU218-756	1	Fitting-Cap	36	127-8425	1	Plate-Reatainer, Clamp
13	AU218-1254	2	Nut-Lock, Bulkhead	37	120-1959	1	Clamp
14	130-7463	2	Fitting-Bulkhead, Elbow 45	38	2412-126	1	R-Clamp
15	01-201-4520	2	Cap	39	322-14	1	Screw-HH
16	33106-040	3	Screw-HHF	40	AU112950	1	Protector-Hose
17	115-1115	1	Nut-Lock, HHF	41	3290-379	3	Tie-Cable
18	125-6851	1	HYD Return Hose ASM				

      Steering Column and Hydraulic Plumbing Assembly

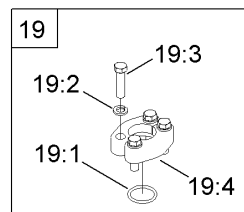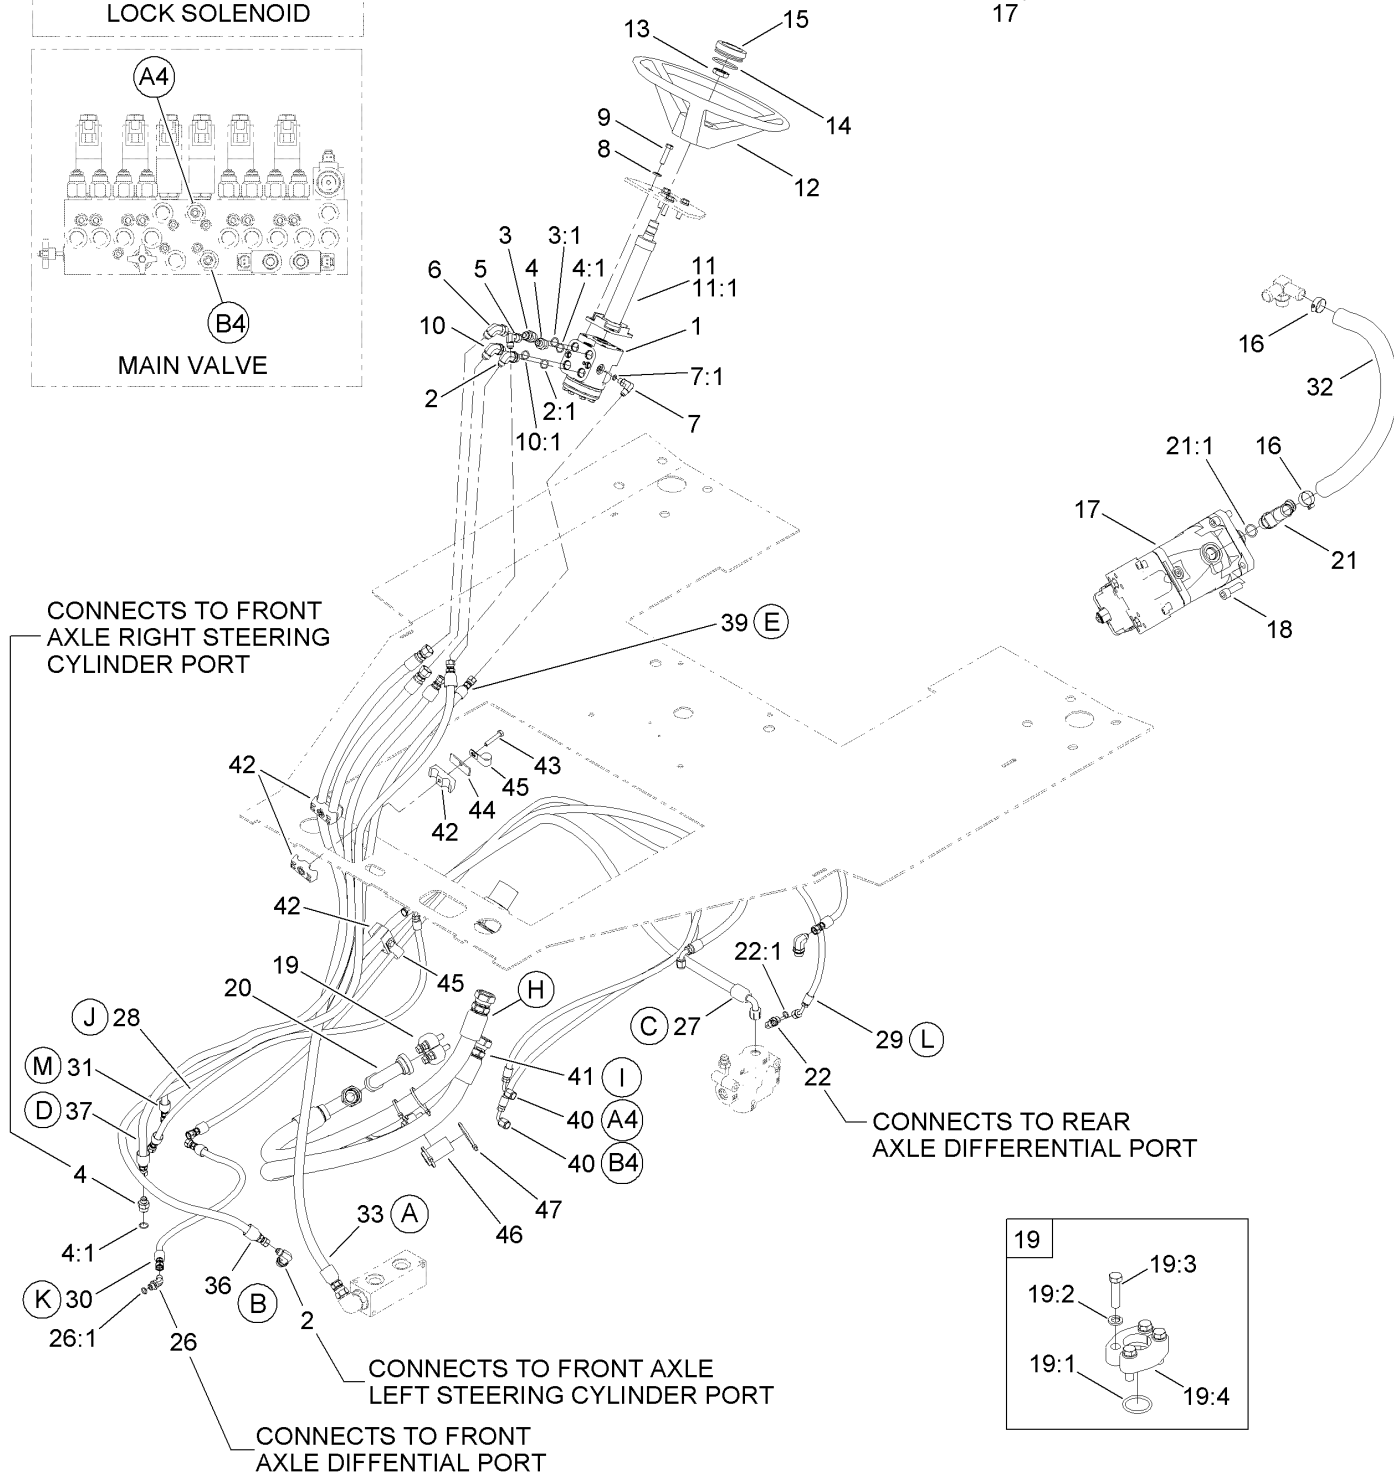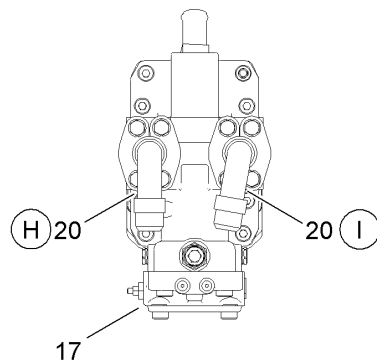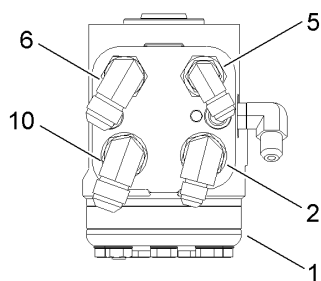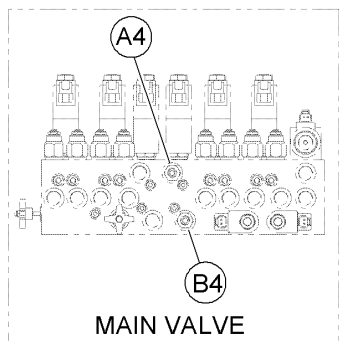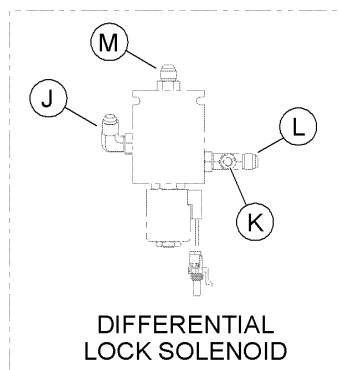


Steering Column and Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU115762	1	Steering Valve ASM	19:3	AU113-372	4	Screw-HH
2	353-537	4	Fitting-Elbow, 90 DEG	19:4		2	Flange-Half, Code 62 ■
2:1	237-79	1	O-Ring ●	20	AUH439280	2	Fitting-Elbow
3	353-388	1	Fitting-Straight	21	131-0492	1	Fitting-Tee, Run
3:1	237-79	1	O-Ring	21:1	237-81	1	O-Ring
4	AU218-5058	2	Connector	22	103-1802	1	Fitting-Elbow, 90 DEG
4:1	237-79	1	O-Ring	22:1	237-42	1	O-Ring
5	AU218-980	1	Elbow-Swivel, 90 DEG	26	353-212	1	Fitting-Elbow, 45 DEG
6	01-201-2410	1	Fitting-Elbow, 90	26:1	237-42	1	O-Ring
7	AU218-5278	1	Elbow-90, Adj	27	125-6804	1	HYD Hose ASM, HP
7:1	237-78	1	O-Ring	28	125-6816	1	HYD Hose ASM, HP
8	100-4852	4	Washer-Hardened	29	125-6817	1	HYD Hose ASM, HP
9	323-43	4	Screw-HH	30	125-6779	1	HYD Hose ASM
10	AU218-5106	1	Fitting-Elb 90	31	125-6773	1	HYD Hose ASM
10:1	237-79	1	O-Ring	32	131-0493	1	Hose
11	AUH672220	1	Steering Column ASM	33	125-6858	1	HYD Hose ASM, HP
11:1	120-2593	1	Boot-Rubber, Bearing	36	125-6862	1	HYD Hose ASM, HP
12	AUA65544	1	Wheel-Steering	37	130-7499	1	HYD Hose ASM
13	AUF19646	1	Nut	39	125-6864	1	HYD Hose ASM, HP
14	AU238-5227	1	O-Ring	40	125-6879	2	HYD Hose ASM, HP
15	AU114882A2	1	Cap-Steering Wheel	41	125-6810	2	HYD Hose ASM, HP
16	2412-34	2	Clamp-Hose	42	94-8105	6	Clamp-Tube
17	AU385343A2	1	HYD Motor ASM	43	322-9	3	Screw-HH
18	AU864-14040	4	Screw-HSH	44	69-9761	3	Plate-Cover
19	AU114285A1	2	HYD Flange Kit	45	2412-4	2	Clamp-R
19:1	121-3904	1	O-Ring	46	AU112950	2	Protector-Hose
19:2	3253-6	4	Washer-Lock	47	3290-379	4	Tie-Cable

● Not illustrated

■ Not serviced separately

 Steering Valve Assembly No. AU115762

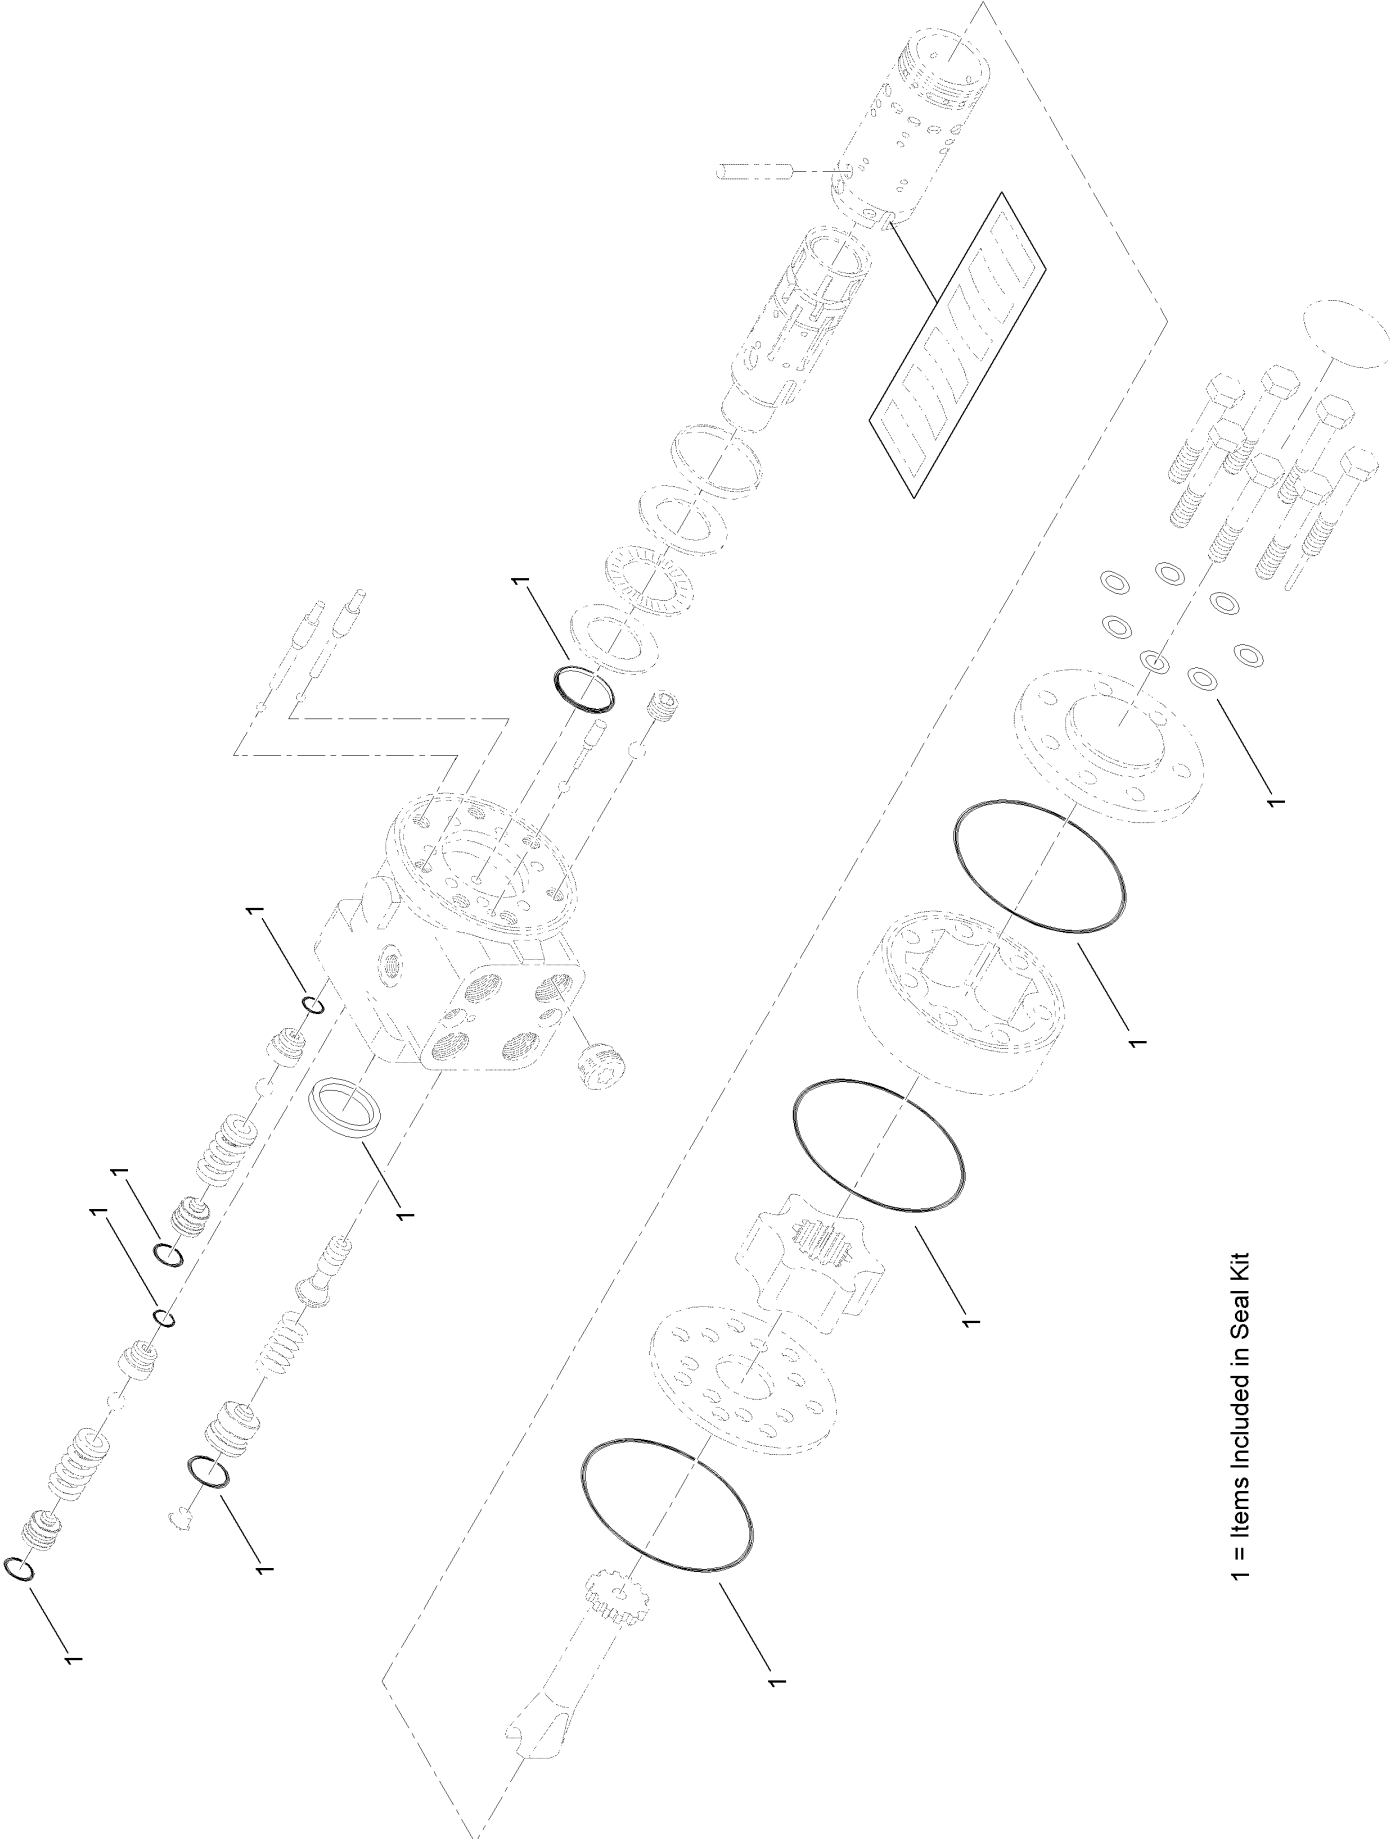


1 = Items Included in Seal Kit

Steering Valve Assembly No. AU115762 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	150N4038	1	Danfoss Spare Parts Bag (Obtain Part From Your Local Danfoss Dealer) ●

● Obtain locally.

 Hydraulic Motor Assembly No. AU385343A2

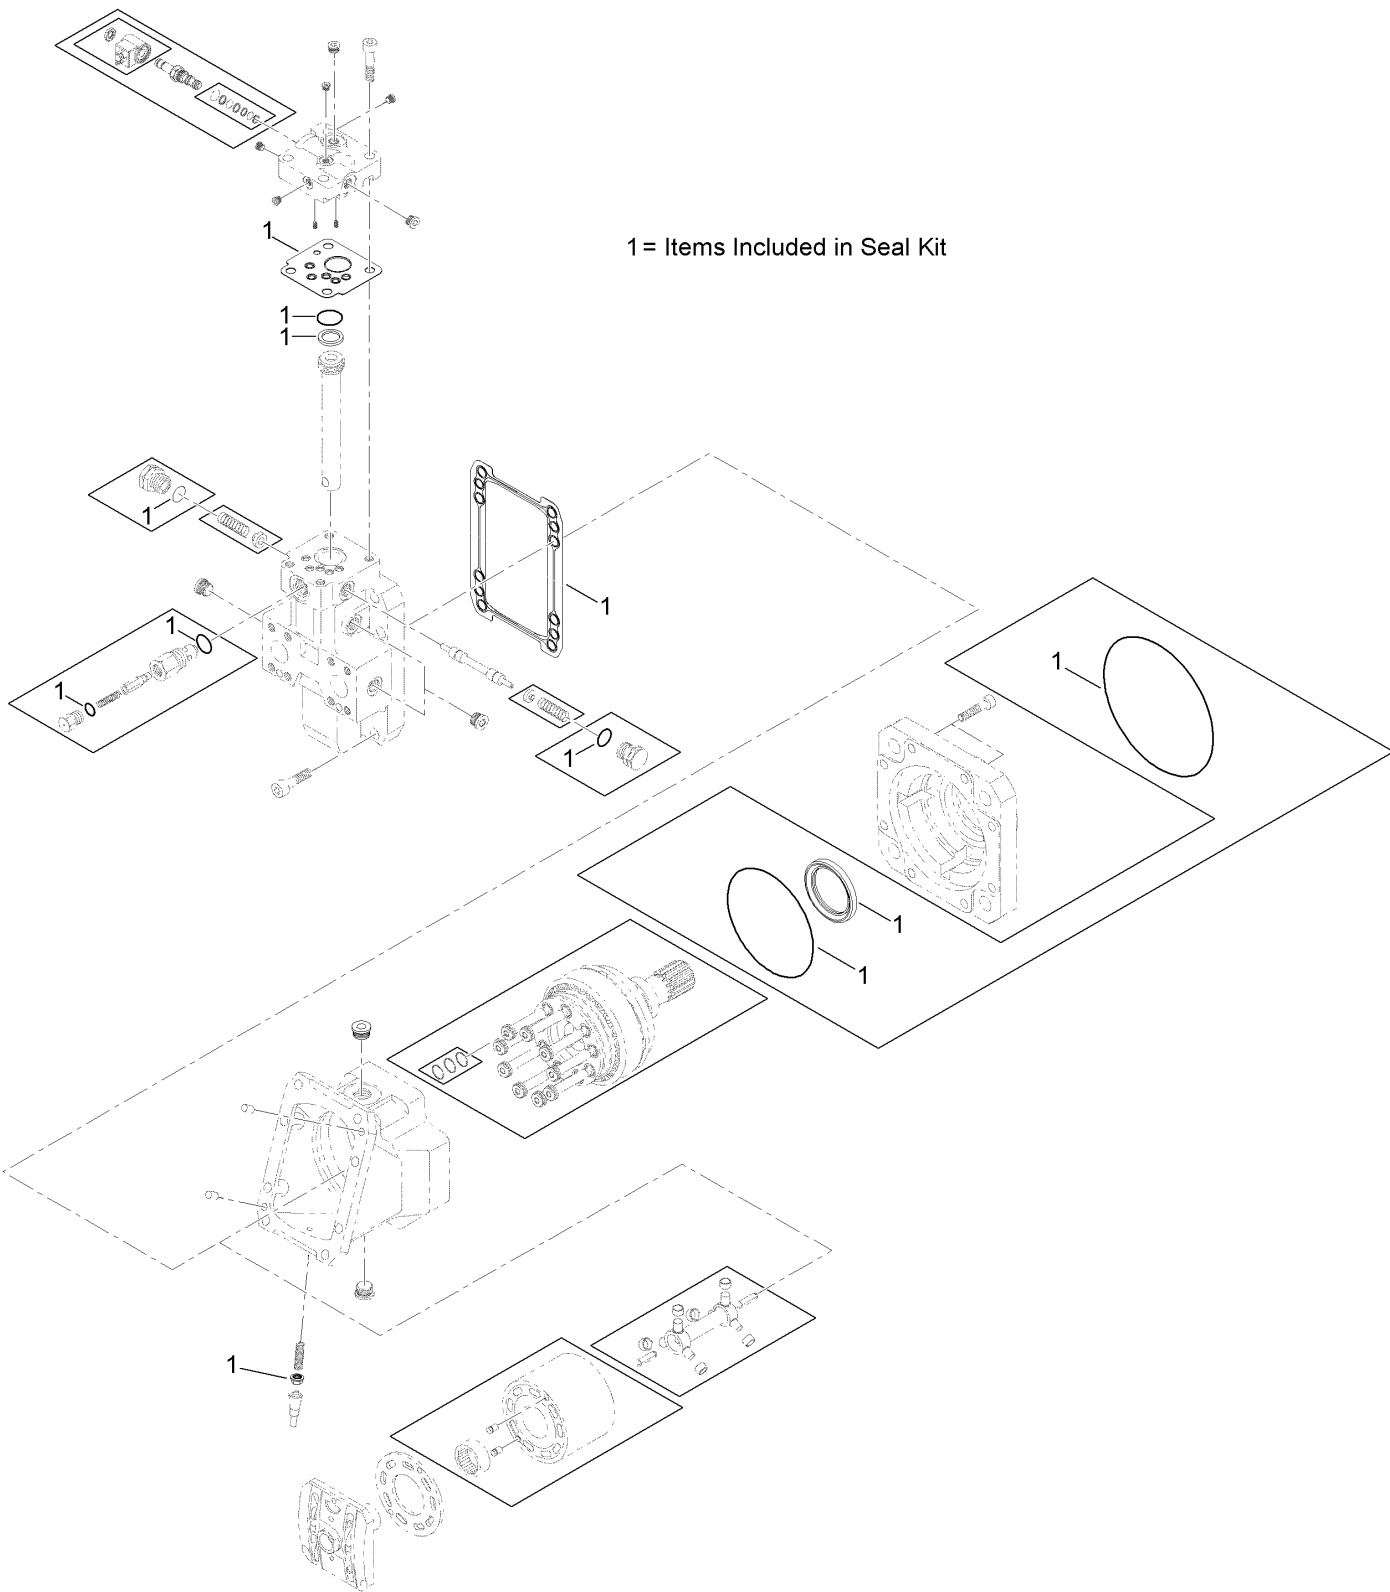


Hydraulic Motor Assembly No. AU385343A2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	11122327	1	Danfoss Seal Kit (Obtain Part From Your Local Danfoss Dealer) ●

● Obtain locally.

 
Hydraulic Plumbing Assembly

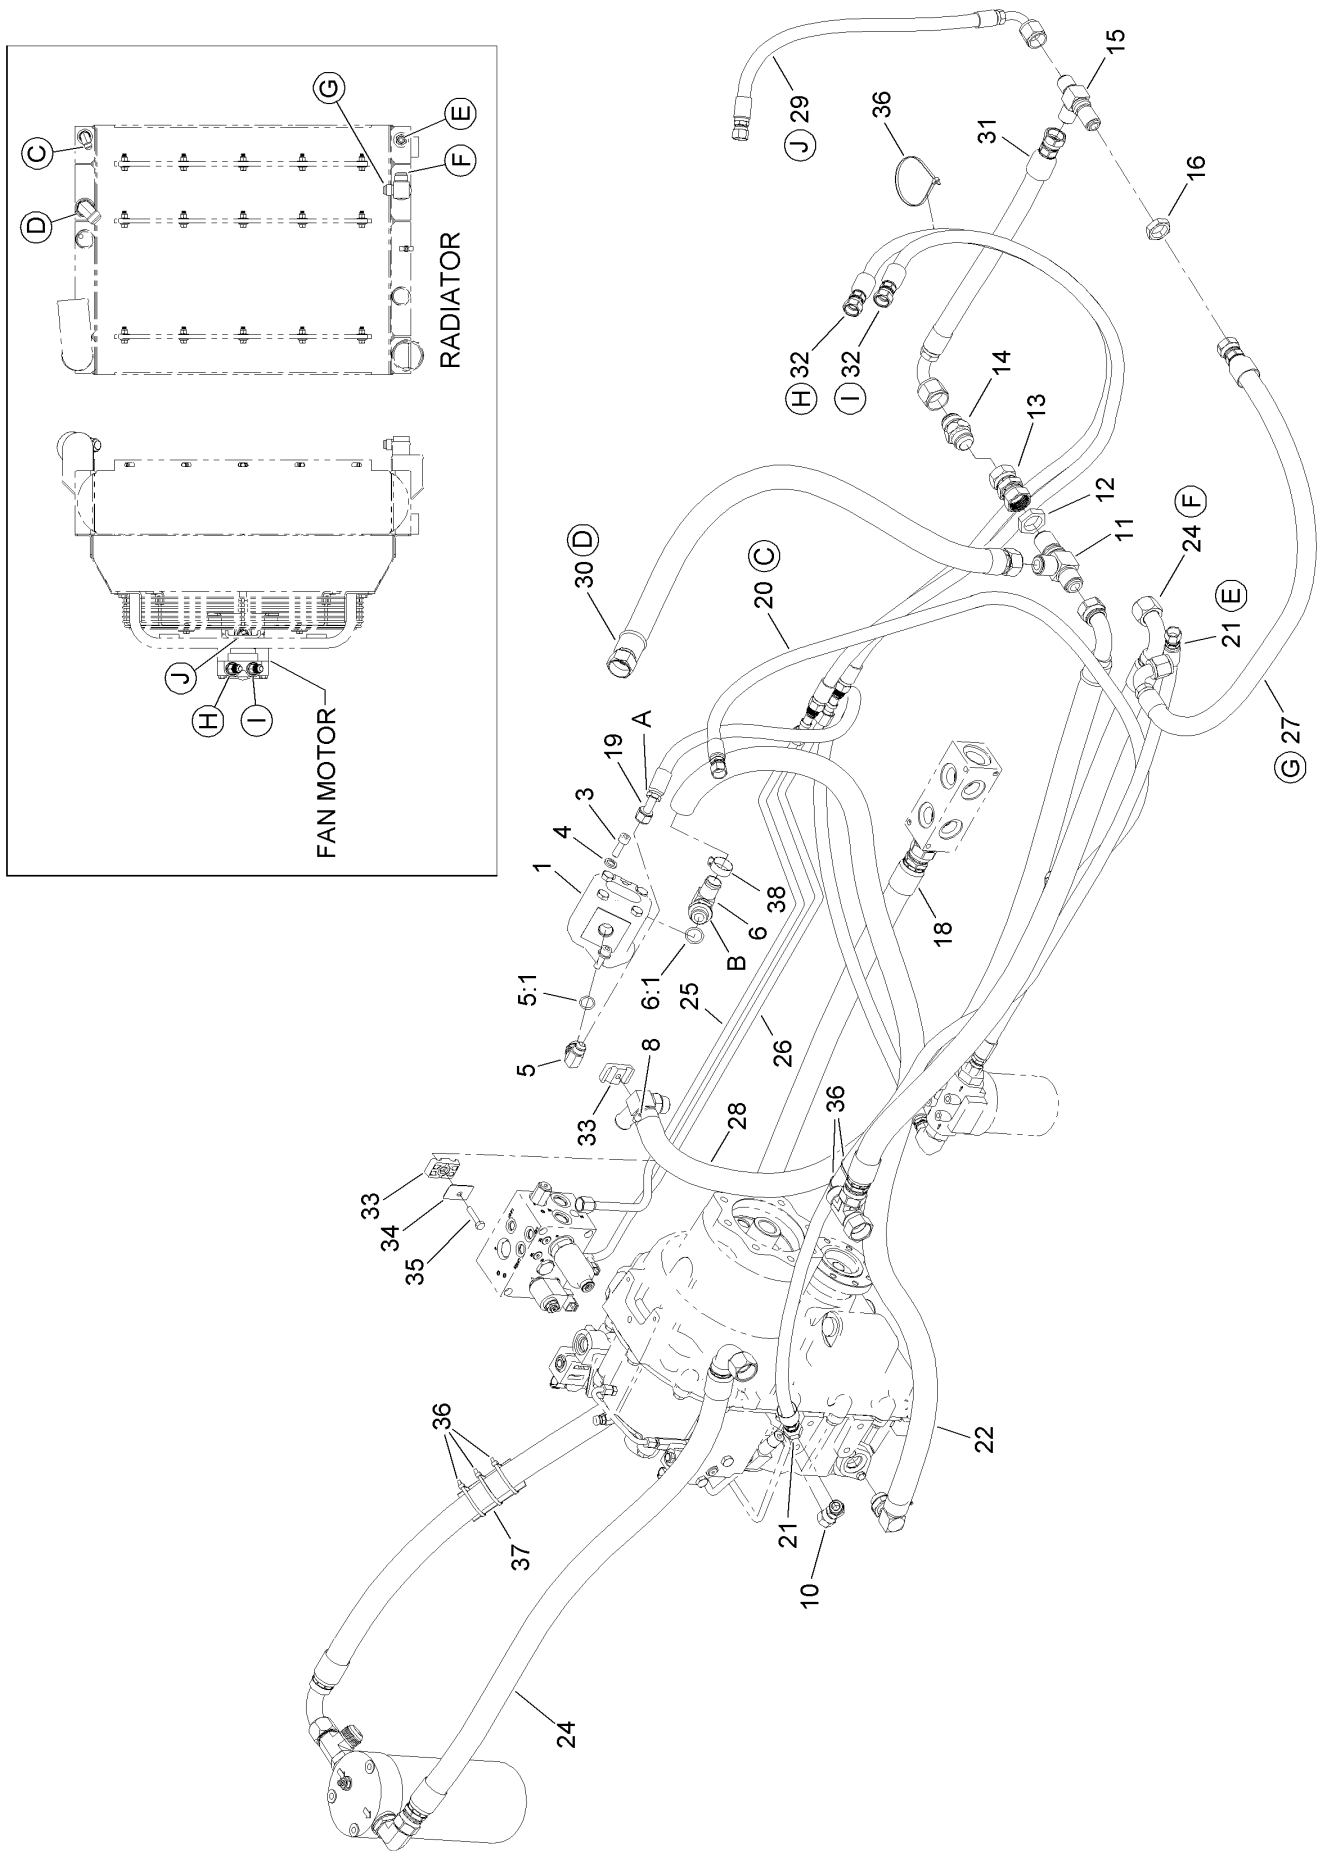

Hydraulic Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU121451	1	Gear Pump ASM	21	125-6808	1	HYD Hose ASM, LP
3	AU862-10030	2	Screw-HSH	22	131-1295	1	Hose-Suction
4	100-4852	2	Washer-Hardened	24	125-6872	2	HYD Hose ASM, LP
5	353-426	1	Fitting-90 DEG	25	130-8401	1	HYD Tube ASM
5:1	237-80	1	O-Ring	26	130-8402	1	HYD Tube ASM
6	100-4202	2	Fitting-90	27	125-6873	1	HYD Hose ASM, HP
6:1	237-81	1	O-Ring	28	125-6874	1	HYD Hose ASM, LP
8	2412-34	1	Clamp-Hose	29	125-6875	1	HYD Hose ASM, HP
10	127-0519	1	Fitting-Elbow, 45 DEG	30	125-6876	1	HYD Hose ASM, LP
11	127-1850	1	Fitting-Tee, Bulkhead	31	125-6819	1	HYD Hose ASM, HP
12	AU218-1250	1	Nut-Lock, Bulkhead	32	130-8405	2	HYD Hose ASM, HP
13	130-7534	1	Fitting-Straight	33	56-7976	2	Clamp-Tube
14	127-1852	1	Valve-Check	34	69-9760	1	Coverplate
15	127-1851	1	Fitting-Tee, Bulkhead	35	322-7	1	Screw-HH
16	AU218-1256	1	Nut-Lock, Bulkhead	36	3290-379	6	Tie-Cable
18	125-6803	1	HYD Hose ASM, LP	37	AU112950	1	Protector-Hose
19	125-6806	1	HYD Hose ASM, HP	38	2412-34	2	Clamp-Hose
20	125-6807	1	HYD Hose ASM, HP				

 Main Electrical Harness Assembly

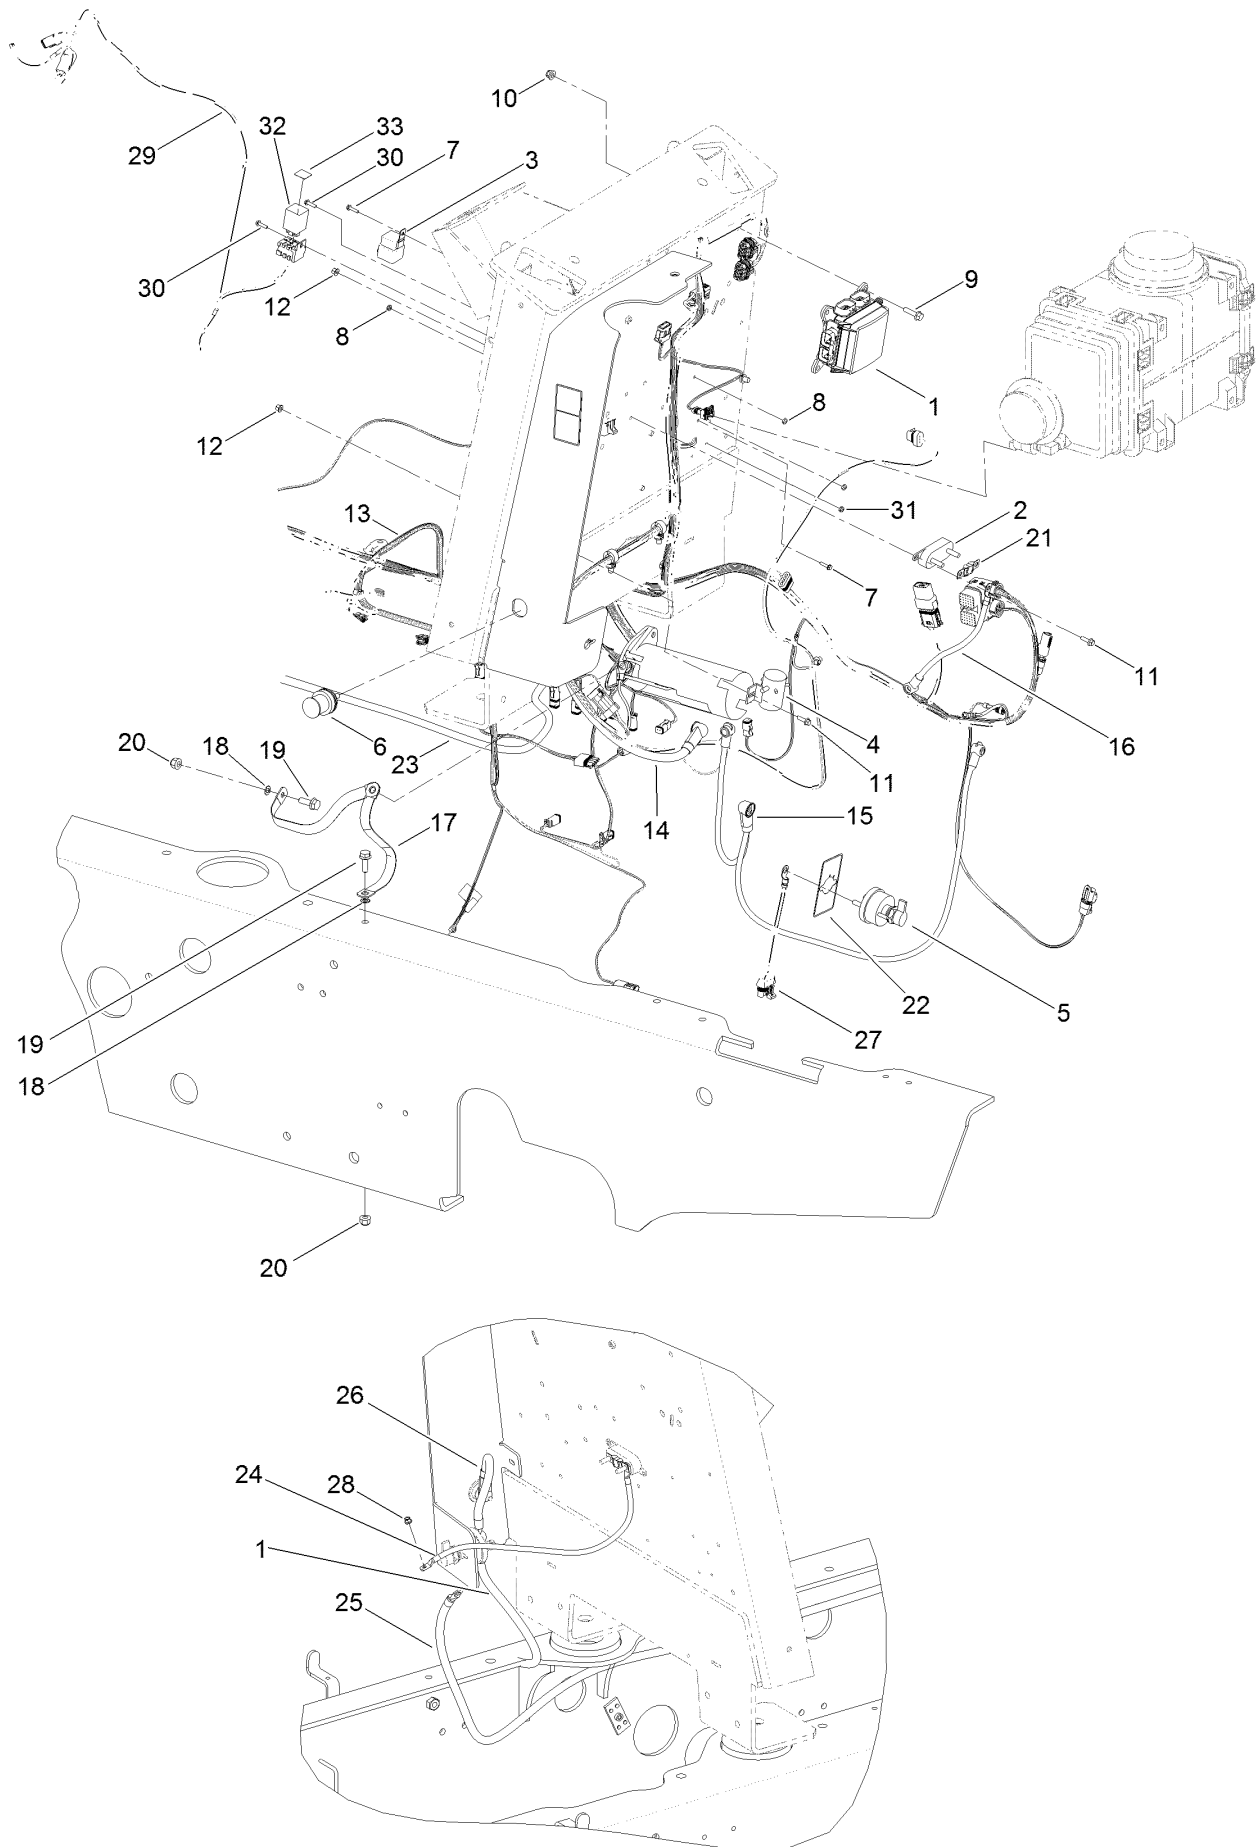


Main Electrical Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU116154	1	Box-Vehicle, Main	19	33105-030	2	Screw-HHF
2	AU126233	1	Holder-Fuse	20	103-9511	2	Nut-Lock, NI
3	99-7430	1	Relay	21	127-2305	1	Fuse-250 Amp
4	AU126234	1	Solenoid-Relay 12V, 300A	22	125-6157	1	Decal-Disconnect, Battery
5	AUR52278	1	Switch-Disconnect, Master	23	122-0289	1	Cable-Battery, Positive
6	AU105186	1	Post-Battery, Remote	24	122-0293	1	Cable-Battery, Positive
7	AU63-81012	3	Screw-HWH	25	122-0294	1	Cable-Battery, Negative
8	3296-27	3	Nut-Lock, NI	26	122-0295	1	Cable-Battery, Positive
9	33104-030	4	Screw-HHF	27	122-0084	1	Harness-Wire, Fusible Link
10	104-3082	4	Nut-Lock, HHF	28	120-9645	1	Nut-HHF
11	33103-020	4	Screw-HHF	29	122-0670	1	Harness-Wire, Hydraulic Bypass
12	120-9645	4	Nut-HHF	30	AU63-81012	2	Screw-HWH
13	127-1748	1	Harness-Main	31	3296-27	2	Nut-Lock, NI
14	122-0290	1	Cable-Battery, Positive	32	127-8417	1	Relay-Adjustable Rel 12V
15	122-0291	1	Cable-Battery, Positive	33	127-8420	1	Decal-Cover
16	122-0365	1	Cable-Battery, Positive	99	505-177	1	Protection-Terminal, Aerosol
17	AUD127018	2	Strap-Grounding				●
18	3255-9	2	Washer-Lock				

● Not illustrated

 
Controller and Display Assembly

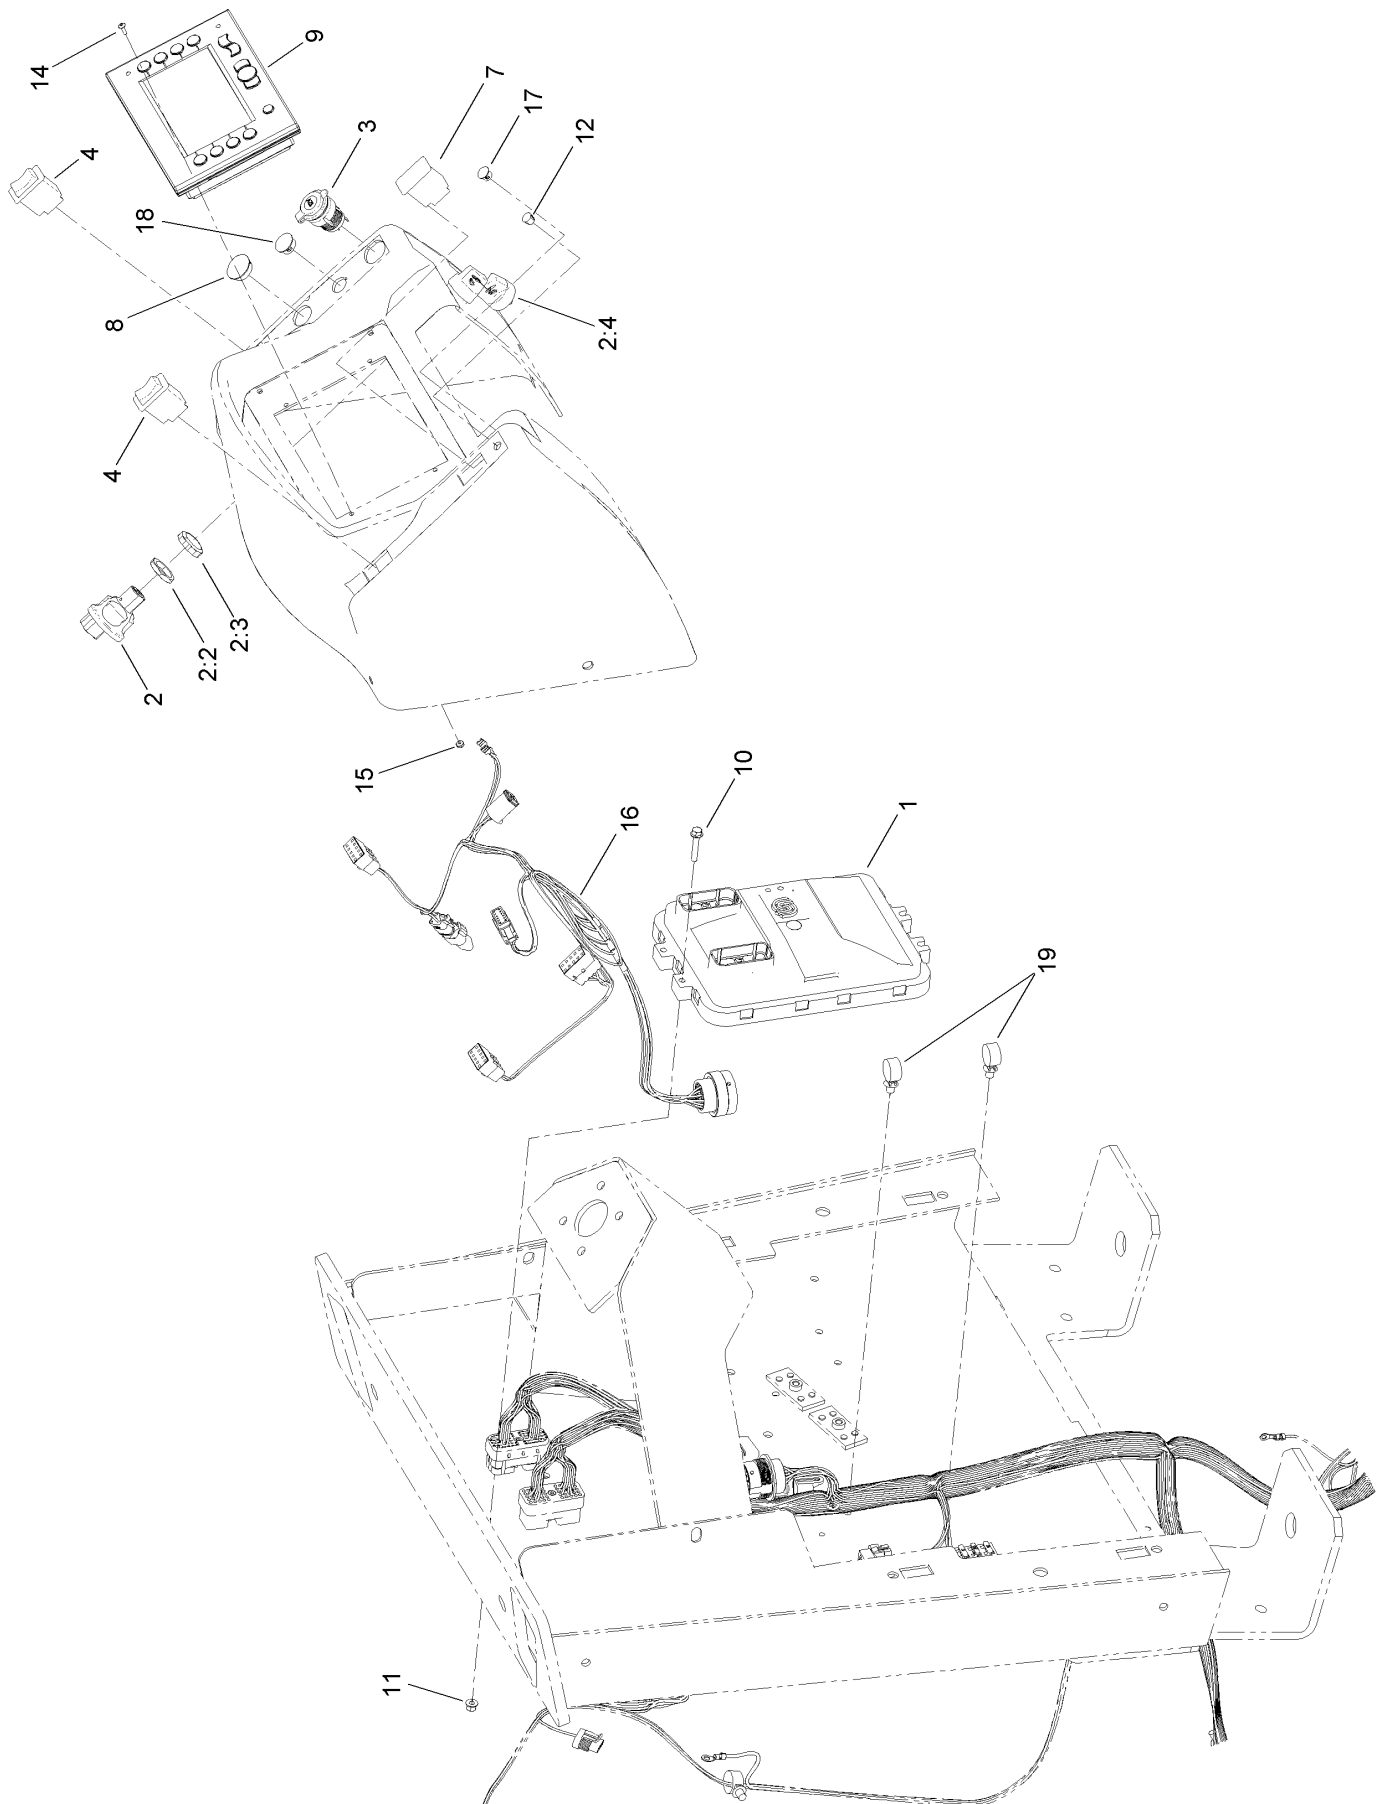

Controller and Display Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU117890	1	Controller ASM (88 Pin, Unprogrammed)	9	131-0118	1	Display-Dp610Tm, Unprogrammed
2	121-5159	1	Ignition Switch ASM	10	33103-035	4	Screw-HHF
2:2	121-5160	1	Nut-Hex	11	120-9645	4	Nut-HHF
2:3	121-5161	1	Nut-Face	12	104-9368	1	Plug-Dome
2:4	121-5162	1	Ignition Key Set	14	3249-3	8	Screw-PRH
3	109-9376	1	Receptacle-12V	15	3296-9	8	Nut-Hex
4	AU113662	2	Switch-Rocker, 2 Pole (On/Off)	16	125-6884	1	Harness-Dash
7	AU124043	1	Plug-Panel	17	130-8444	1	Plug-Dome
8	103-8018	1	Plug-Dome	18	130-8439	1	Plug-Dome
				19	32180-030	2	Clip-Tie

 
Seat Harness and Joystick Control Assembly

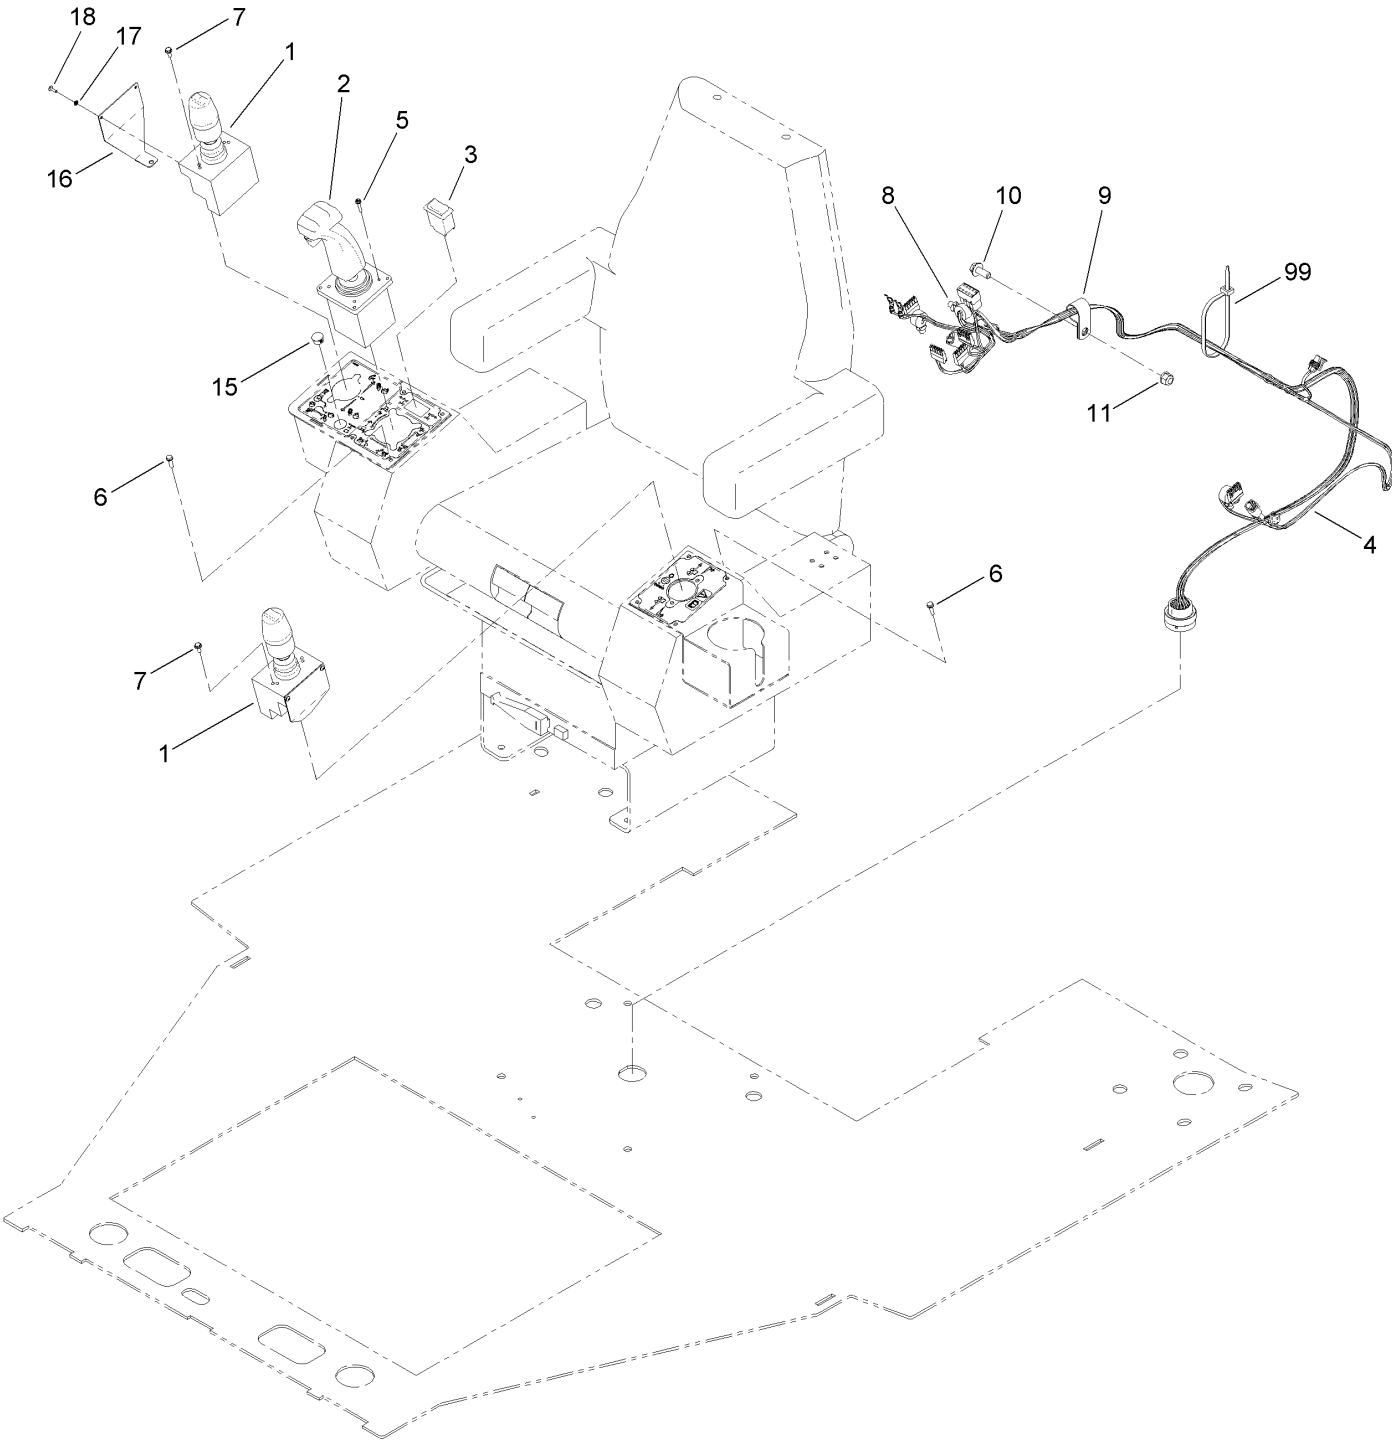

Seat Harness and Joystick Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU118424	2	Single Axis Joystick ASM	9	2412-71	1	Clamp-R
2	AU118423	1	Joystick-Control (W/ Handle)	10	33105-025	1	Screw-HHF
3	AU113664	1	Switch-Rocker, 2 Pole	11	103-9511	1	Nut-Lock, NI
4	125-6883	1	Harness-Wire, Seat	15	127-1843	1	Plug-Dome
5	32105-29	4	Screw-SHWH	16	131-0481-03	2	Plate-Sensor, Pedal
6	AU63-81012	8	Screw-HWH	17	3255-24	4	Washer-Lock / EXT
7	112-6349	4	Screw-HWH	18	3249-3	4	Screw-PRH
8	32180-030	1	Clip-Tie	99	3290-378	10	Tie-Cable

 Battery Assembly

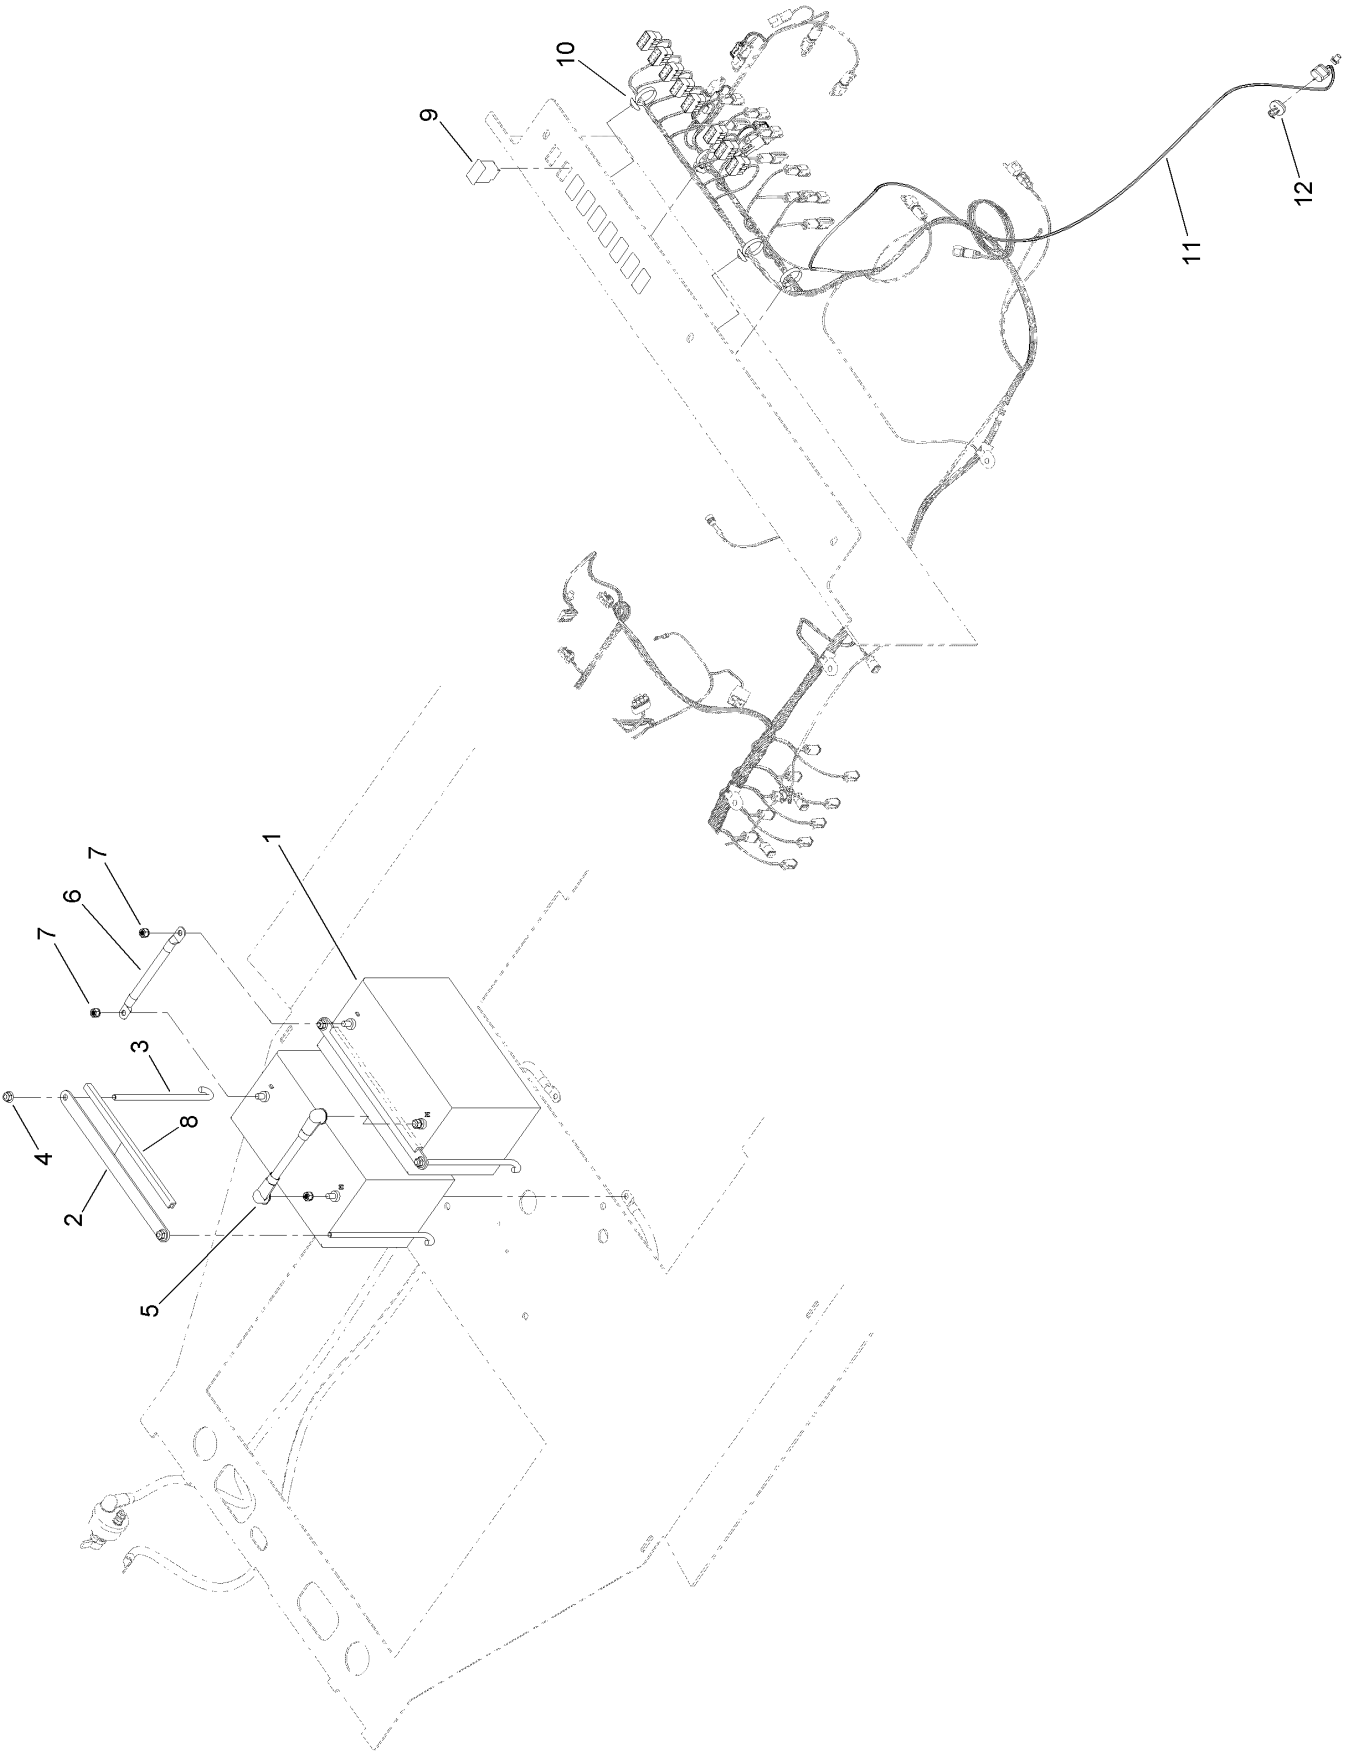

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-0968	2	Battery	8	127-1293	2	Trim-Battery
2	AU117616-03	2	Plate-Hold Down, Battery	9	AU124043	8	Plug-Panel
3	AUH436311	4	Bolt-Holddown, Battery	10	32180-149	4	Tie-Button Head
4	104-8301	4	Nut-HF, NI	11	122-0690	1	Harness Wire, Boom Home
5	122-0105	1	Cable-Battery, Positive	12	122-0528	1	Harness-Wire, Prox Sensor Jumper
6	122-0106	1	Cable-Battery, Negative				
7	32149-10	4	Nut-Keps				


Main Harness Mounting Assembly



Main Harness Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3234-19	3	Screw-HHF
2	104-8301	3	Nut-HF, NI
3	32180-042	1	Cap-Diagnostic

 
Cooling System Assembly

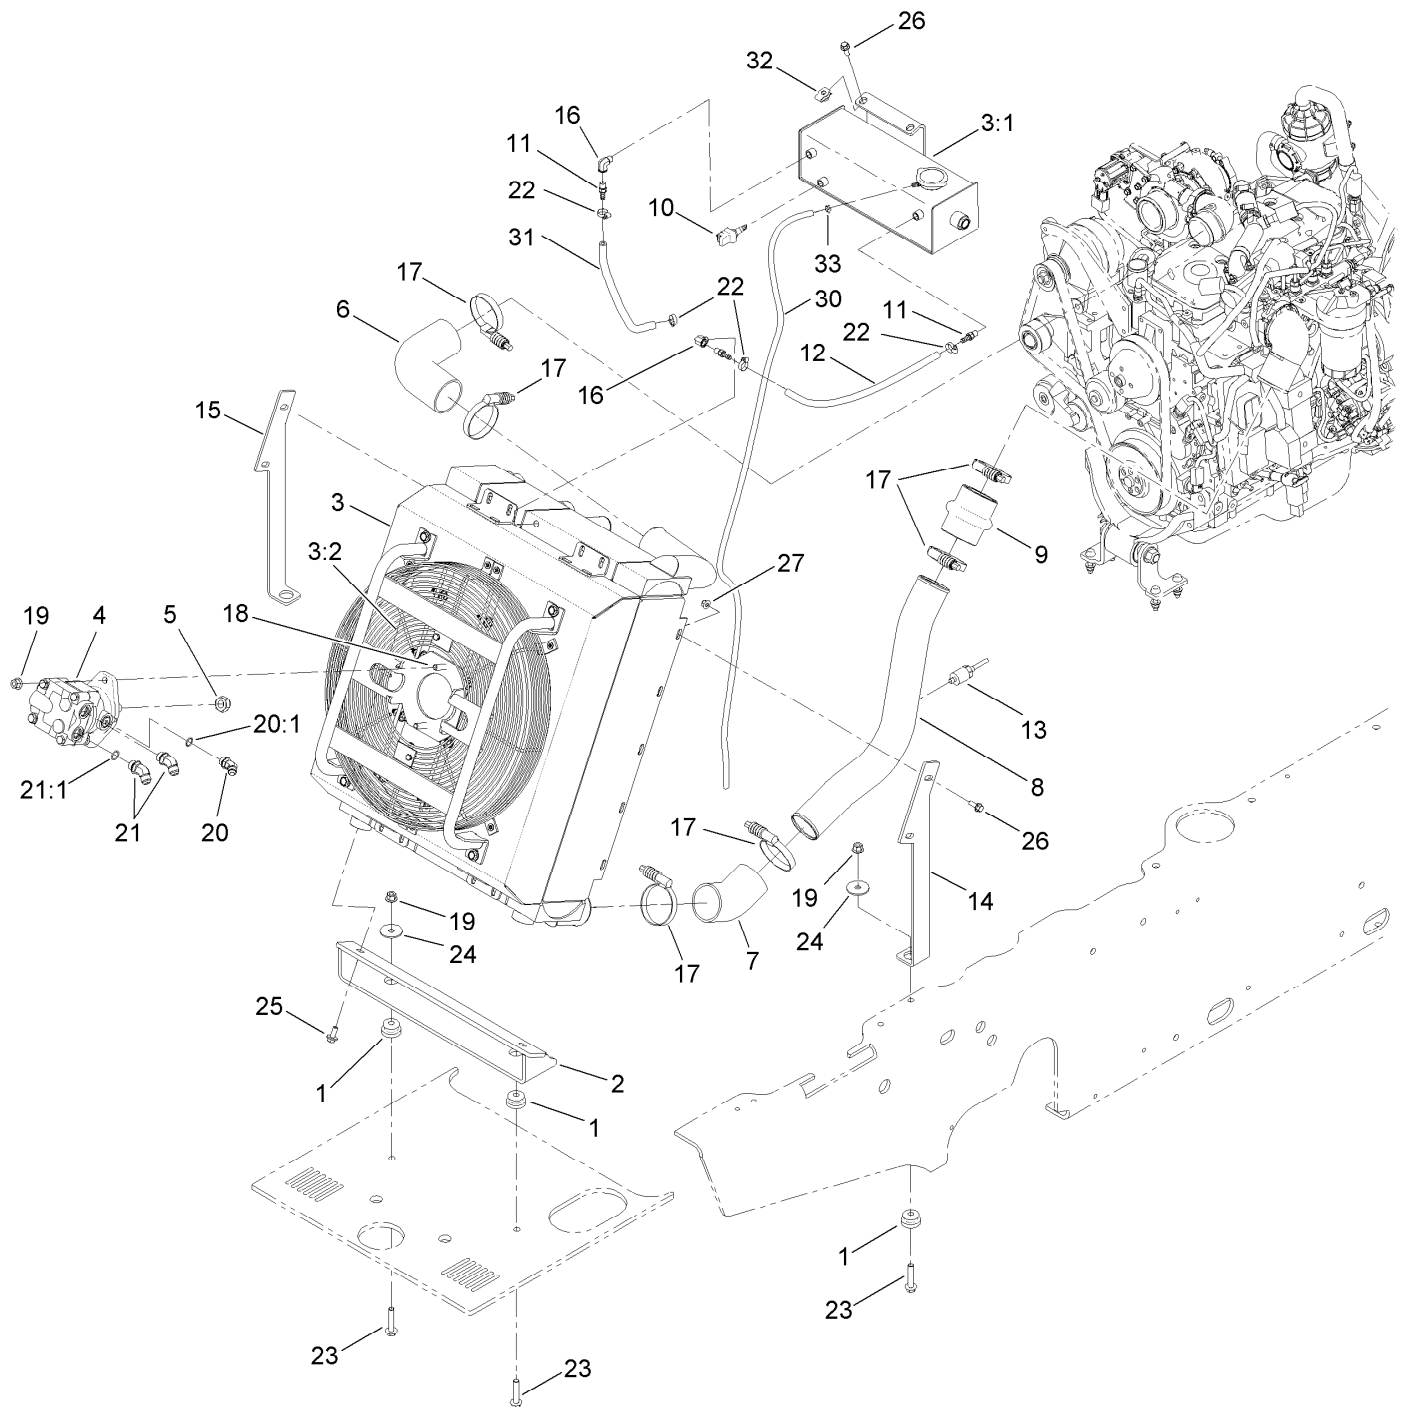

Cooling System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUL13142	4	Isolator-Mount, Rubber	17	AU21001153	6	Clamp-Torque, Constant
2	127-1753-03	1	Plate-Mount, Radiator	18	33106-040	2	Screw-HHF
3	127-1750	1	Cooling Package ASM	19	115-1115	6	Nut-Lock, HHF
3:1	127-1730	1	Tank-Recovery, Coolant	20	353-379	1	Fitting-Elbow, 45 DEG
3:2	130-7415	1	Fan-Cooling, 22 Inch	20:1	237-79	1	O-Ring
4	AU118007	1	HYD Motor ASM	21	AU218-5137	2	Fitting-Elbow-45 DEG
5	3296-67	1	Nut-Lock, NI	21:1	237-80	1	O-Ring
6	127-1760	1	Elbow-Cooler, Air	22	2412-36	4	Clamp-Hose
7	AU130820	1	Elbow-Cooler, Air	23	33106-060	4	Screw-HHF
8	127-1758	1	Tube ASM	24	AU496-81018	4	Washer-Flat
9	AU21000205	1	Adapter-Hump	25	33106-025	2	Screw-HHF
10	110-8828	1	Sensor-Level, Coolant	26	3234-42	6	Screw-HHF
11	108-0342	2	Fitting-Straight	27	119-4042	4	Nut-HF, NI
12	127-1762	1	Hose-Coolant	30	131-0430	1	Hose-Coolant
13	AU129089	1	Transducer-Temperature	31	131-0432	1	Hose-Coolant
14	127-1756-03	1	Bracket-Cooling, LH	32	112-4576	2	Nut-Clip, U
15	127-1757-03	1	Bracket-Cooling, RH	33	2412-98	1	Clamp-Hose
16	125-9088	2	Fitting-Elbow, 90				

 
Hydraulic Motor Assembly No. AU118007

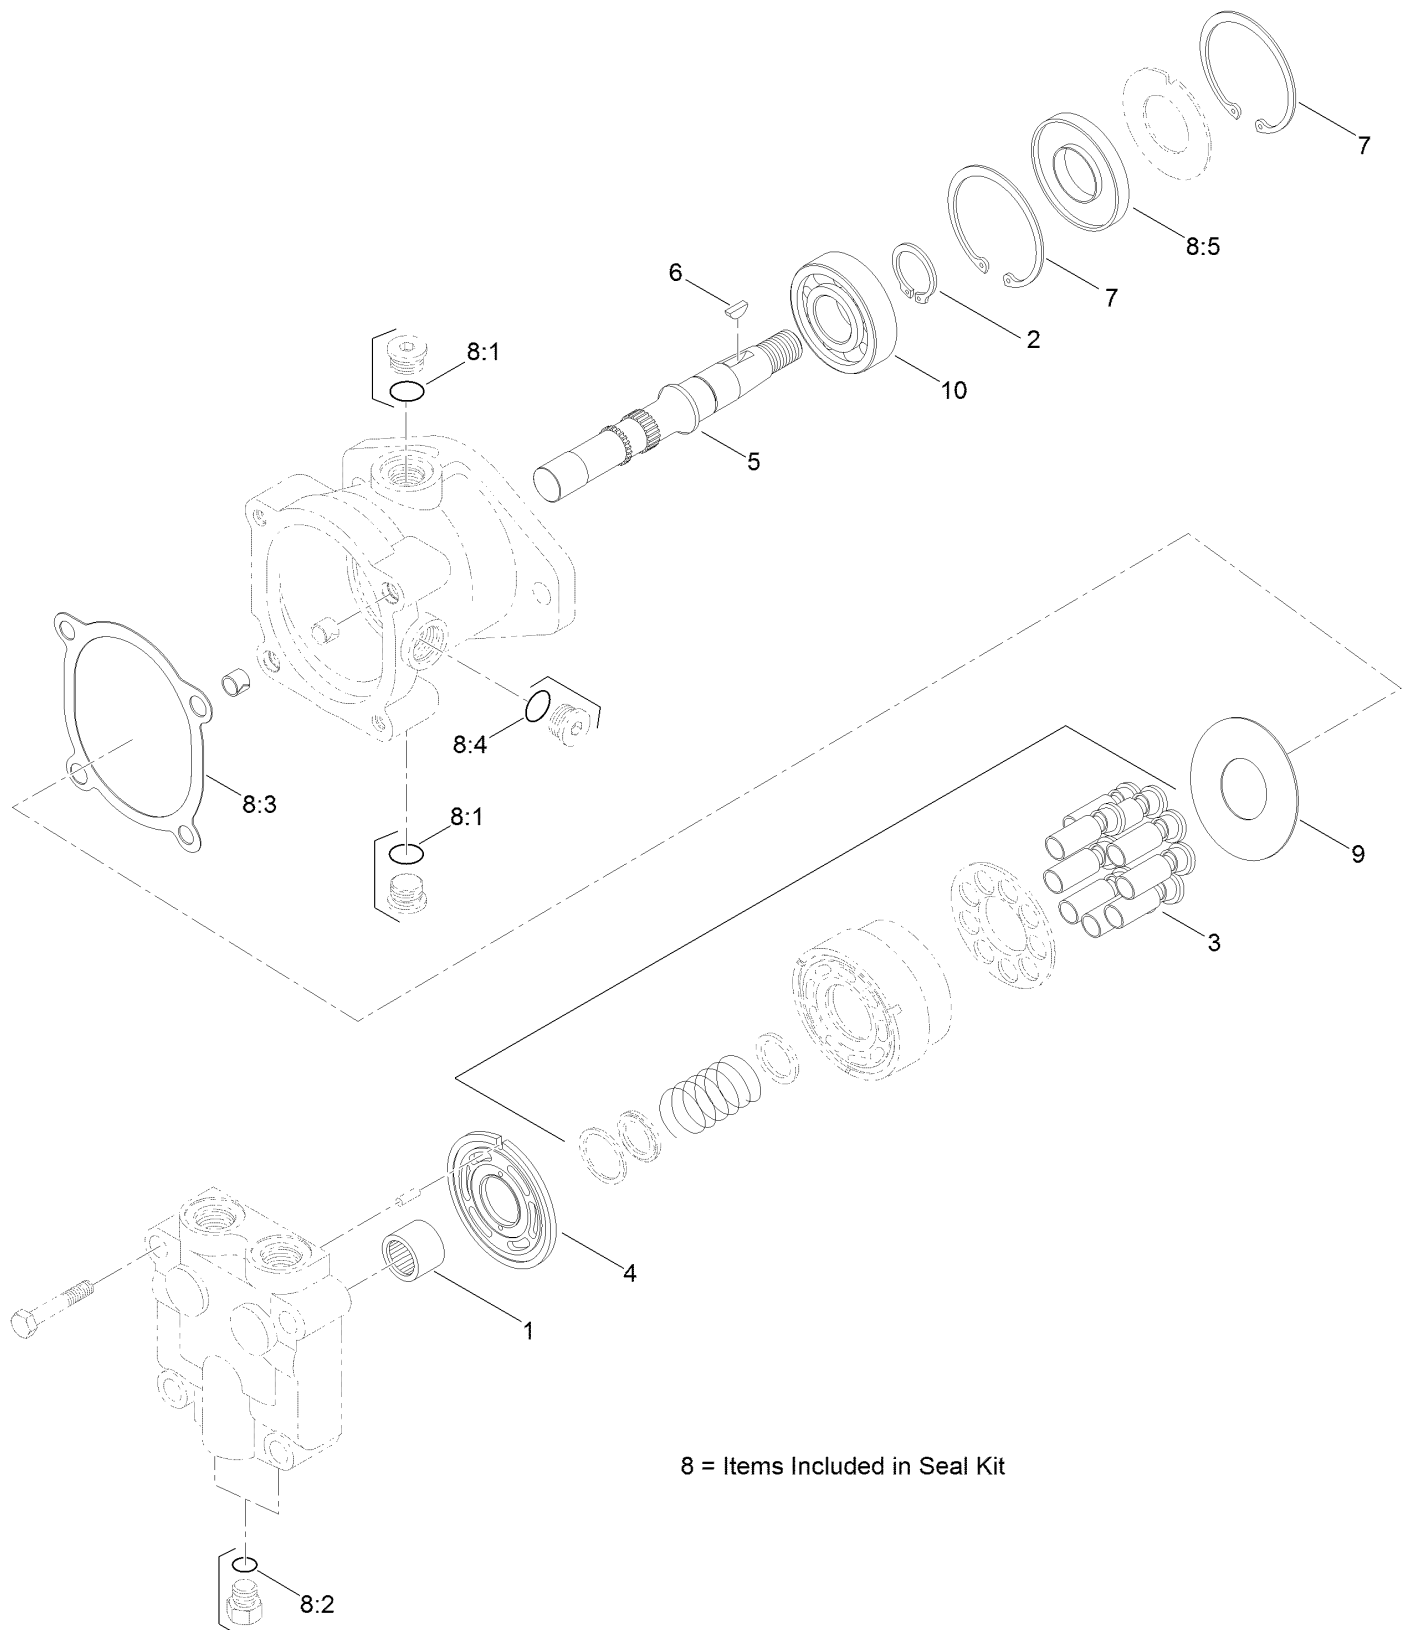

Hydraulic Motor Assembly No. AU118007 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	75-0500	1	Bearing-Needle	8:1	75-0240	2	O-Ring
2	125-5280	1	Ring-Retaining	8:2	92-8777	2	O-Ring
3	131-7619	9	Piston ASM	8:3	131-7618	1	Gasket-Cap, End
4	131-7620	1	Plate-Valve	8:4	28-3570	1	O-Ring
5	131-7644	1	Shaft-Motor	8:5	127-6214	1	Seal-Lip
6	131-8612	1	Key	9	75-0400	1	Plate-Thrust
7	131-8616	2	Ring-Retaining	10	75-0460	1	Bearing-Ball
8	131-8633	1	Overhaul Seal Kit				

 
Coolant Recovery Tank and Plumbing Assembly

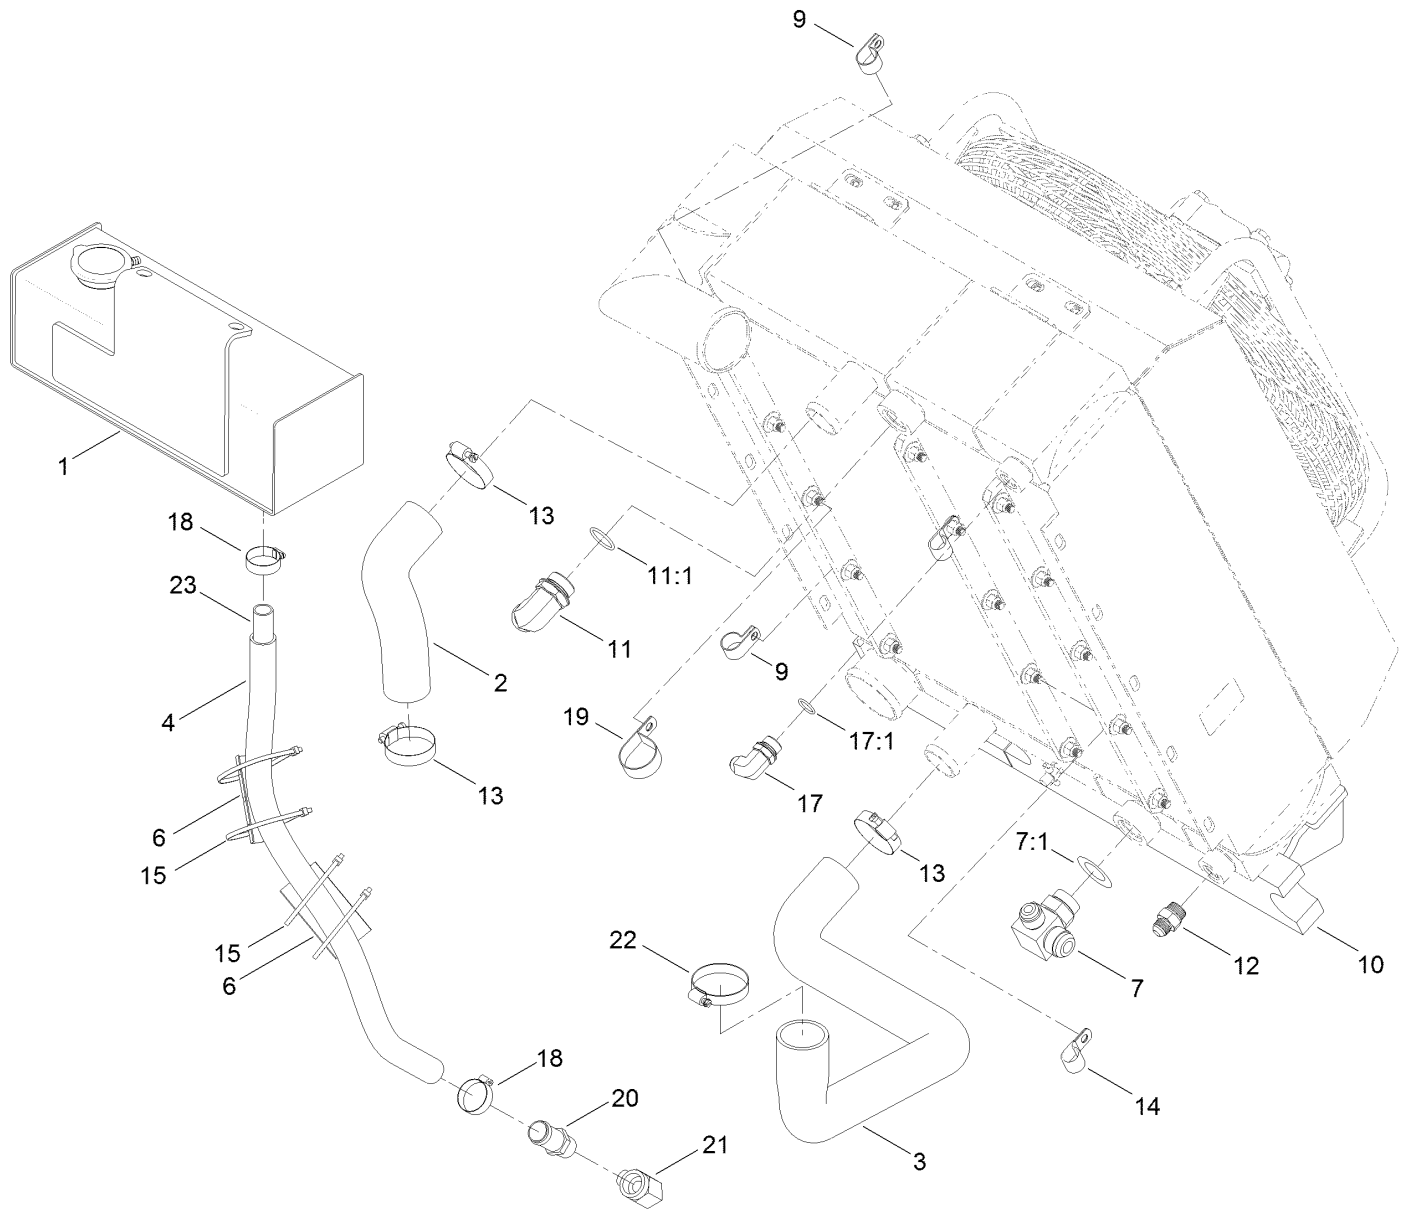

Coolant Recovery Tank and Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1730	1	Tank-Recovery, Coolant	13	2412-92	3	Clamp-Hose
2	127-1751	1	Hose-Radiator, Top	14	2412-4	2	Clamp-R
3	127-1761	1	Hose-Radiator, Bottom	15	3290-379	4	Tie-Cable
4	127-1765	1	Hose-Inlet	17	353-426	1	Fitting-90 DEG
6	AU112950	2	Protector-Hose	17:1	237-80	1	O-Ring
7	AU103754A1	1	Fitting-HYD, Special	18	2412-34	2	Clamp-Hose
7:1	237-146	1	O-Ring	19	2412-147	1	Clamp-R
9	2412-41	2	Clamp-R	20	AU217-375	1	Fitting-STR
10	AU131469	1	Seal-Foam	21	127-6221	1	Fitting-Elbow, 90 DEG
11	AU218-5110	1	Elbow-90 DEG	22	2412-42	1	Clamp-Hose
11:1	237-146	1	O-Ring	23	136-5453	1	Sleeve-Inlet
12	353-433	1	Fitting-Straight				

 Tilt Frame Assembly

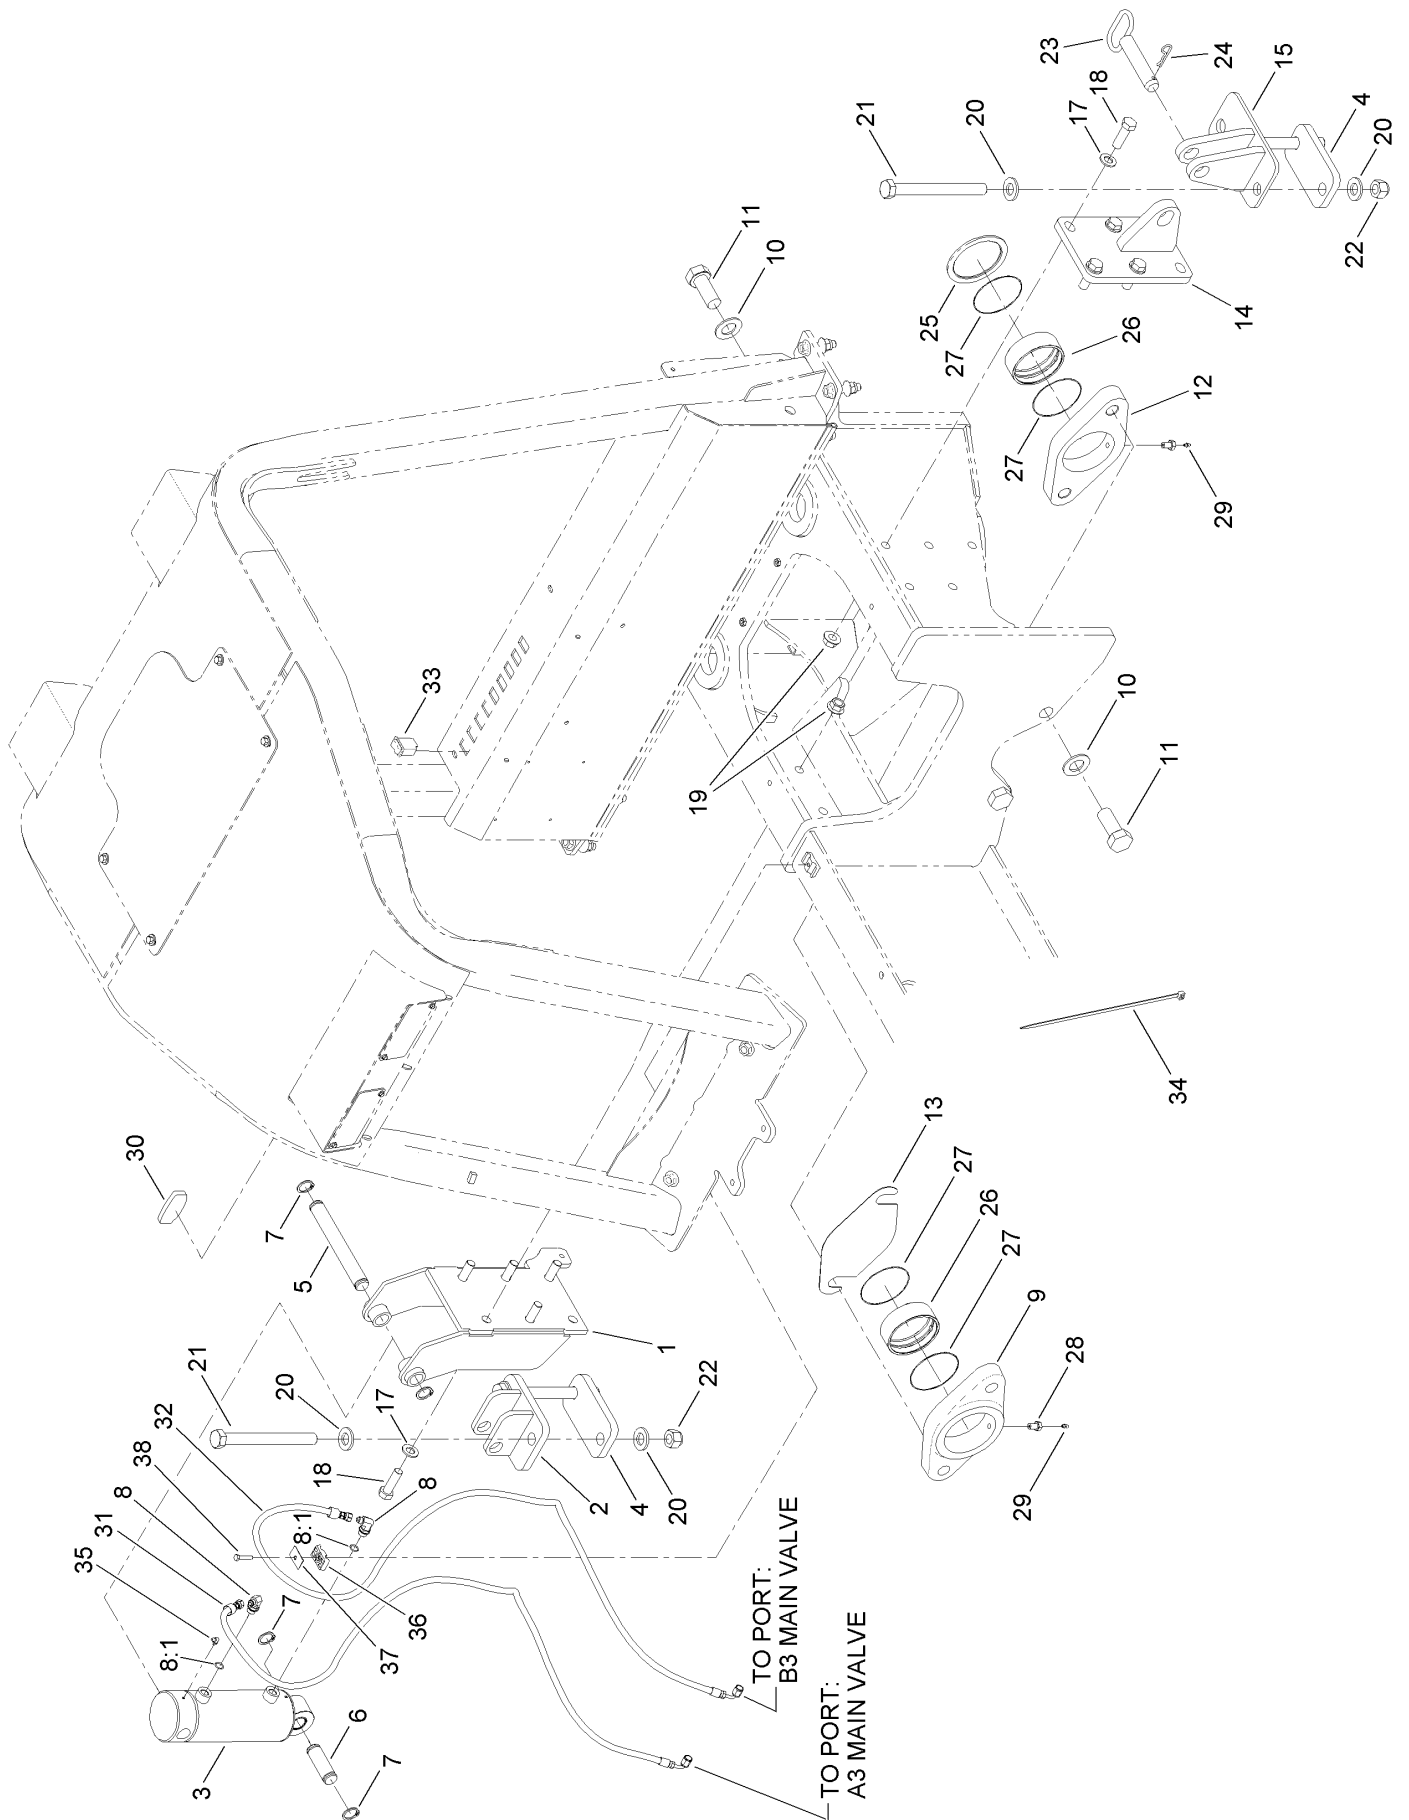


Tilt Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU104865-01	1	Mount-Cylinder, Frame	20	AU496-21106	8	Washer
2	AU104861-01	1	Mount-Axle, Rear	21	AU426-16160	4	Screw-HH
3	AU126558	1	HYD Cylinder ASM	22	120-0888	4	Nut-HH
4	AU105394-01	2	Plate-Mounting	23	AU106861	1	Pin
5	AUH434493	1	Pin-Plow	24	AUH32292	1	Pin-Hair
6	AUH434556	1	Pin-Clevis	25	AUK395023	1	Washer-Thrust
7	32151-77	4	Ring-Retaining, External	26	AUK965265	2	Bushing-Pivot
8	353-537	2	Fitting-Elbow, 90 DEG	27	AUK965267	4	O-Ring
8:1	237-79	1	O-Ring ●	28	127-1813	2	Adapter-Locating
9	AUH433408-03	1	Housing-Mount, Trunion	29	302-5	2	Fitting-Grease
10	AUH426858	4	Washer	30	AU104200	1	Meter-Slope
11	AU426-2048	4	Bolt	31	127-1867	1	HYD Hose ASM
12	AU407398A1-03	1	Housing-Mount, Trunion	32	127-1868	1	HYD Hose ASM
13	AUH433359	1	Shim-Mount, Axle	33	AU113664	1	Switch-Rocker, 2 Pole
14	AU105590-01	1	Lockout-Frame	34	3290-378	6	Tie-Cable
15	AU105593-01	1	Lockout-Axle	35	302-40	1	Fitting-Grease, 90 DEG
17	AU496-11081	10	Washer	36	56-7976	2	Clamp-Tube
18	328-2	10	Screw-HH	37	69-9760	1	Coverplate
19	32128-45	10	Nut-HHF	38	322-7	1	Screw-HH

● Not illustrated

 Hydraulic Cylinder Assembly No. AU126558

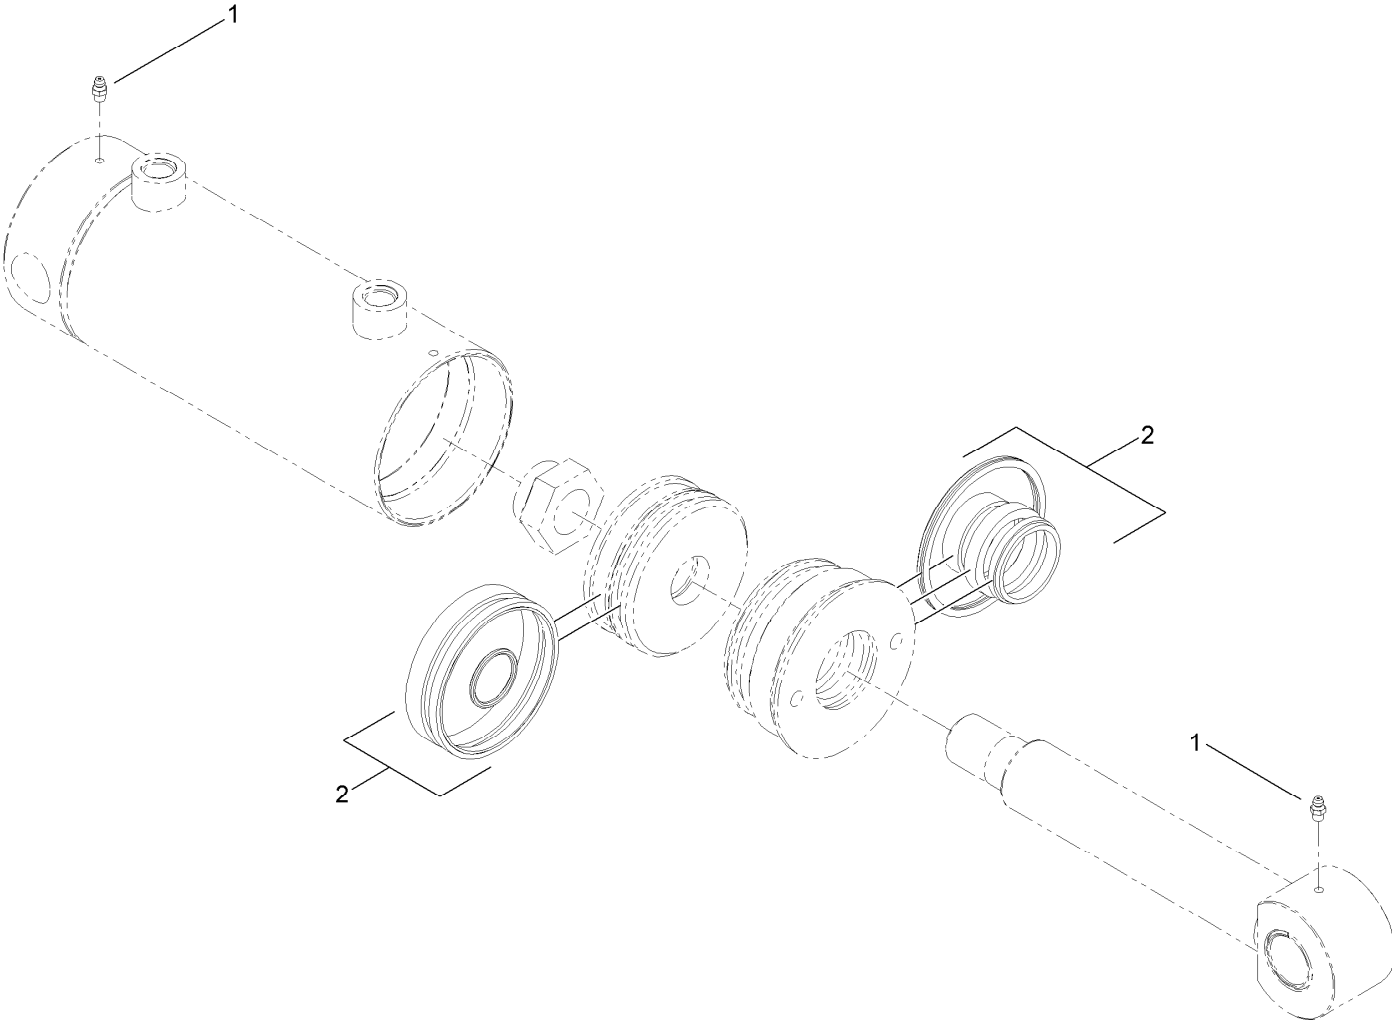

Hydraulic Cylinder Assembly No. AU126558 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	302-2	2	Fitting-Grease
2	131-2749	1	Seal Kit

Attachments and Accessories

For 25450 RT1200 Traction Unit

Product Name	Model/Part
Standard Pulling Blade, VST-24E 18/24 Plow Depth	131-6284
Standard Pulling Blade, VST-24F 18/24 Plow Depth.....	131-6285
Standard Pulling Blade, 24/30 Plow Depth	131-6286
Standard Pulling Blade, 30/36 Plow Depth	131-6287
Standard Pulling Blade, 36/42 Plow Depth	131-6288
Standard Pulling Blade, 42/48 Plow Depth	131-6289
Plow Blade, 18/24 Plow Depth.....	132-4950
Plow Blade, .75 W, 18/24 G-C, 10.0 R	132-4951
Plow Blade, .75 W, 24/30 G-C, 8.0 R	132-4952
Plow Blade, .75 W, 24/30 G-C, 10.0 R	132-4953
Plow Blade, .75 W, 30/36 G-C, 8.0 R	132-4954
Plow Blade, .75 W, 30/36 G-C, 10.0 R	132-4955
Plow Blade, 1.00 W, 18/24 G-C, 8.0 R	132-4956
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4957
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4958
Plow Blade, 1.00 W, 24/30 G-C, 10.0 R	132-4959
Plow Blade, 1.00 W, 30/36 G-C, 8.0 R	132-4960
Plow Blade, 1.00 W, 30/36 G-C, 10.0 R	132-4961
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4962
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4963
Plow Blade, 1.50 W, 18/24 G-C, 10.0 R	132-4964
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4965
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4966
Plow Blade, 1.50 W, 24/30 G-C, 10.0 R	132-4967
Plow Blade, 1.50 W, 24/30 G-C, 13.0 R	132-4968
Plow Blade, 1.50 W, 30/36 G-C, 8.0 R	132-4969
Plow Blade, 1.50 W, 30/36 G-C, 10.0 R	132-4970
Plow Blade, 1.50 W, 30/36 G-C, 13.0 R	132-4971
Plow Blade, 1.50 W, 36/42 G-C, 8.0 R	132-4972
Plow Blade, 1.50 W, 36/42 G-C, 10.0 R	132-4973
Plow Blade, 1.50 W, 36/42 G-C, 13.0 R	132-4974
Plow Blade, 2.00 W, 18/24 G-C, 10.0 R	132-4975
Plow Blade, 2.00 W, 18/24 G-C, 13.0 R	132-4976
Plow Blade, 2.00 W, 24/30 G-C, 10.0 R	132-4977
Plow Blade, 2.00 W, 24/30 G-C, 13.0 R	132-4978
Plow Blade, 2.00 W, 30/36 G-C, 10.0 R	132-4979
Plow Blade, 2.00 W, 30/36 G-C, 13.0 R	132-4980
Plow Blade, 2.00 W, 36/42 G-C, 10.0 R	132-4981
Plow Blade, 2.00 W, 36/42 G-C, 13.0 R	132-4982
Plow Blade, 2.50 W, 24/30 G-C, 13.0 R	132-4983
Plow Blade, 2.50 W, 24/30 G-C, 20.0 R	132-4984
Plow Blade, 2.50 W, 30/36 G-C, 13.0 R	132-4985
Plow Blade, 2.50 W, 30/36 G-C, 20.0 R	132-4986
Plow Blade, 2.50 W, 36/42 G-C, 13.0 R	132-4987
Plow Blade, 2.50 W, 36/42 G-C, 20.0 R	132-4988
Plow Blade, 3.00 W, 30/36 G-C, 13.0 R	132-4989

Attachments and Accessories (continued)

Plow Blade, 3.00 W, 30/36 G-C, 20.0 R	132-4990
Plow Blade, 3.00 W, 36/42 G-C, 13.0 R	132-4991
Plow Blade, 3.00 W, 36/42 G-C, 20.0 R	132-4992
Additional Depth Setting	132-4993
Tape Tube	132-4994
Blade, MAXI-TRAC 18/24 Depth, E	132-4995
Blade, MAXI-TRAC 18/24 Depth, F	132-4996
Blade, MAXI-TRAC 24/30 Depth, F	132-4997
Blade, MAXI-TRAC 30/36 Depth, F	132-4998
Blade, MAXI-TRAC 36/42 Depth, F	132-4999
Blade, MAXI-TRAC 42/48 Depth, H	132-5000
Bullet, 2.00	132-5001
Bullet, 3.00	132-5002
Bullet, 4.00	132-5003
Bullet, 5.00	132-5004
Bullet, 6.00	132-5005
Plow Blade, .75 CW, 18/24 GC, 8 RAD	132-5006
Plow Blade, .75 CW, 18/24 GC, 10 RAD	132-5007
Plow Blade, .75 CW, 24/30 GC, 8 RAD	132-5008
Plow Blade, .75 CW, 24/30 GC, 10 RAD	132-5009
Plow Blade, 1.00 CW, 18/24 GC, 8 RAD	132-5010
Plow Blade, 1.00 CW, 18/24 GC, 10 RAD	132-5011
Plow Blade, 1.00 CW, 24/30 GC, 8 RAD	132-5012
Plow Blade, 1.00 CW, 24/30 GC, 10 RAD	132-5013
Plow Blade, 1.00 CW, 30/36 GC, 8 RAD	132-5014
Plow Blade, 1.00 CW, 30/36 GC, 10 RAD	132-5015
Plow Blade, 1.00 CW, 30/36 GC, 13 RAD	132-5016
Plow Blade, 1.50 CW, 18/24 GC, 8 RAD	132-5017
Plow Blade, 1.50 CW, 18/24 GC, 10 RAD	132-5018
Plow Blade, 1.50 CW, 18/24 GC, 13 RAD	132-5019
Plow Blade, 1.50 CW, 24/30 GC, 8 RAD	132-5020
Plow Blade, 1.50 CW, 24/30 GC, 10 RAD	132-5021
Plow Blade, 1.50 CW, 24/30 GC, 13 RAD	132-5022
Plow Blade, 1.50 CW, 30/36 GC, 8 RAD	132-5023
Plow Blade, 1.50 CW, 30/36 GC, 10 RAD	132-5024
Plow Blade, 1.50 CW, 30/36 GC, 13 RAD	132-5025
Plow Blade, 1.50 CW, 36/42 GC, 8 RAD	132-5026
Plow Blade, 1.50 CW, 36/42 GC, 10 RAD	132-5027
Plow Blade, 1.50 CW, 36/42 GC, 13 RAD	132-5028
Plow Blade, 2.00 CW, 18/24 GC, 10 RAD	132-5029
Plow Blade, 2.00 CW, 18/24 GC, 13 RAD	132-5030
Plow Blade, 2.00 CW, 24/30 GC, 10 RAD	132-5031
Plow Blade, 2.00 CW, 24/30 GC, 13 RAD	132-5032
Plow Blade, 2.00 CW, 30/36 GC, 10 RAD	132-5033
Plow Blade, 2.00 CW, 30/36 GC, 13 RAD	132-5034
Plow Blade, 2.00 CW, 36/42 GC, 10 RAD	132-5035
Plow Blade, 2.00 CW, 36/42 GC, 13 RAD	132-5036
Plow Blade, 2.50 CW, 24/30 GC, 13 RAD	132-5037
Plow Blade, 2.50 CW, 24/30 GC, 20 RAD	132-5038

Attachments and Accessories (continued)

Plow Blade, 2.50 CW, 30/36 GC, 13 RAD	132-5039
Plow Blade, 2.50 CW, 30/36 GC, 20 RAD	132-5040
Plow Blade, 2.50 CW, 36/42 GC, 13 RAD	132-5041
Plow Blade, 2.50 CW, 36/42 GC, 20 RAD	132-5042
Plow Blade, 3.00 CW, 30/36 GC, 13 RAD	132-5043
Plow Blade, 3.00 CW, 30/36 GC, 20 RAD	132-5044
Plow Blade, 3.00 CW, 36/42 GC, 13 RAD	132-5045
Plow Blade, 3.00 CW, 36/42 GC, 20 RAD	132-5046
STATION-CHAIN, FOUR, BARE	136-3979
Combo for Heavy Duty Drive Trencher and P105 Plow, RT1200 Traction Unit	25205
Combo for Heavy Duty Drive Trencher and P105 Plow, RT1200 Traction Unit	25205E
Plow Mount Cable Guide Kit	25407
Plow Mount Cable Guide Kit	25407E
Horn Kit, RT600 or RT1200 Trencher	25409
Horn Kit, RT600 or RT1200 Trencher	25409E
Beacon Kit, RT600 or RT1200 Trencher	25415
Beacon Kit, RT600 or RT1200 Trencher	25415E
Back-Up Alarm Kit	25427
Back-Up Alarm Kit	25427E
Quad Track Kit, RT1200 Trencher	25429
Quad Track Kit, RT1200 Trencher	25429E
48in Rock Boom, RT1200 Trencher	25443
48in Rock Boom, RT1200 Trencher	25443E
60in Rock Boom, RT1200 Trencher	25444
60in Rock Boom, RT1200 Trencher	25444E
48in Hydraulic Crumber, RT1200 Traction Unit	25446
48in Hydraulic Crumber, RT1200 Traction Unit	25446E
60in Hydraulic Crumber, RT1200 Traction Unit	25447
60in Hydraulic Crumber, RT1200 Traction Unit	25447E
72in Hydraulic Crumber, RT1200 Traction Unit	25448
72in Hydraulic Crumber, RT1200 Traction Unit	25448E
Backhoe, RT1200 Trencher	25452
Backhoe	25452E
Center Trencher	25453
Center Trencher	25453E
Sliding Attachment Kit	25454
Sliding Attachment Kit	25454E
48in Rock Boom	25456
48in Rock Boom	25456E
60in Rock Boom	25457
60in Rock Boom	25457E
Counterweight Kit	25458
Counterweight Kit	25458E
Counterweight And Reel Kit	25459
Counterweight And Reel Kit	25459E
Auxiliary Hydraulics Kit	25460
Auxiliary Hydraulics Kit	25460E
Track Kit	25462
Track Kit	25462E

Attachments and Accessories (continued)

Plow Kit.....	25463
Plow Kit.....	25463E
Work Light Kit	25464
Work Light Kit	25464E
4ft Manual Crumber	25465
4ft Manual Crumber	25465E
5ft Manual Crumber	25466
5ft Manual Crumber	25466E
Auxiliary Control Kit, 762 Backhoe for RT1200 Trencher	25467
Auxiliary Control Kit, 762 Backhoe	25467E
Track Mount Kit.....	25469
Track Mount Kit.....	25469E
Tilt Steering Kit, RT1200 Traction Unit	25497
Tilt Steering Kit, RT1200 Traction Unit	25497E
Cable Guide Kit, RT1200 Trencher	25498
Cable Guide Kit, RT1200 Trencher	25498E
Backfill Blade Kit, RT1160 or RT1200 Trencher	25501
Backfill Blade Kit, RT1160 or RT1200 Trencher	25501E
Load Control	25510
Load Control Kit.....	25510E
Auto Tilt Chassis	25511
Auto Tilt Chassis Kit.....	25511E
Advanced Steering Control	25512
Advanced Steering Control Kit.....	25512E
12in Boom Extension.....	25513
12in Boom Extension.....	25513E
Trencher Sliding Offset Mount Kit, RT1200 Traction Unit	25514
Trencher Sliding Offset Mount Kit, RT1200 Traction Unit	25514E
Dual Function Auxiliary Hydraulics Kit, RT1200 Traction Unit	25515
Dual Function Auxiliary Hydraulics Kit, RT1200 Traction Unit	25515E
7in x 48in 2 Pitch Cup Chain, Utility Trencher	TR31107233
7in x 60in 2 Pitch Cup Chain, Utility Trencher	TR31107237
7in x 72in 2 Pitch Cup Chain, Utility Trencher	TR31107241
7in x 48in Terminator and Cup Combo Chain, Utility Trencher	TR31107C33
7in x 60in Terminator and Cup Combo Chain, Utility Trencher	TR31107C37
7in x 72in Terminator and Cup Combo Chain, Utility Trencher	TR31107C41
7in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR31107H33
7in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR31107H37
7in x 72in H-Plate, Rock and Frost Chain, Utility Trencher	TR31107H41
7in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR31107M33
7in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR31107M37
7in x 72in Mixed Rock and Frost Chain, Utility Trencher.....	TR31107M41
7in x 48in Rock and Frost Chain, Utility Trencher	TR31107R33
7in x 60in Rock and Frost Chain, Utility Trencher	TR31107R37
7in x 72in Rock and Frost Chain, Utility Trencher	TR31107R41
7in x 48in Solid Weld Terminator Chain, Utility Trencher	TR31107S33
7in x 60in Solid Weld Terminator Chain, Utility Trencher	TR31107S37
7in x 72in Solid Weld Terminator Chain, Utility Trencher	TR31107S41
7in x 48in Bolt-On Terminator Chain, Utility Trencher	TR31107T33

Attachments and Accessories (continued)

7in x 60in Bolt-On Terminator Chain, Utility Trencher	TR31107T37
7in x 72in Bolt-On Terminator Chain, Utility Trencher	TR31107T41
8in x 48in 2 Pitch Cup Chain, Utility Trencher	TR31108233
8in x 60in 2 Pitch Cup Chain, Utility Trencher	TR31108237
8in x 72in 2 Pitch Cup Chain, Utility Trencher	TR31108241
8in x 48in Terminator and Cup Combo Chain, Utility Trencher	TR31108C33
8in x 60in Terminator and Cup Combo Chain, Utility Trencher	TR31108C37
8in x 72in Terminator and Cup Combo Chain, Utility Trencher	TR31108C41
8in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR31108H33
8in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR31108H37
8in x 72in H-Plate, Rock and Frost Chain, Utility Trencher	TR31108H41
8in x 48in Mixed Rock and Frost Chain, Utility Trencher	TR31108M33
8in x 60in Mixed Rock and Frost Chain, Utility Trencher	TR31108M37
8in x 72in Mixed Rock and Frost Chain, Utility Trencher	TR31108M41
8in x 48in Rock and Frost Chain, Utility Trencher	TR31108R33
8in x 60in Rock and Frost Chain, Utility Trencher	TR31108R37
8in x 72in Rock and Frost Chain, Utility Trencher	TR31108R41
8in x 48in Solid Weld Terminator Chain, Utility Trencher	TR31108S33
8in x 60in Solid Weld Terminator Chain, Utility Trencher	TR31108S37
8in x 72in Solid Weld Terminator Chain, Utility Trencher	TR31108S41
8in x 48in Bolt-On Terminator Chain, Utility Trencher	TR31108T33
8in x 60in Bolt-On Terminator Chain, Utility Trencher	TR31108T37
8in x 72in Bolt-On Terminator Chain, Utility Trencher	TR31108T41
CHAIN-DIGGING, 311-12X60IN, 37 CUP	TR31112237
CHAIN-DIGGING, 311-12X60IN, 37 SHARK-	TR31112C37
8in x 48in 2 Pitch Cup Chain, Utility Trencher	TR40808225
8in x 60in 2 Pitch Cup Chain, Utility Trencher	TR40808228
8in x 72in 2 Pitch Cup Chain, Utility Trencher	TR40808231
8in x 48in Terminator and Cup Combo Chain, Utility Trencher	TR40808C25
8in x 60in Terminator and Cup Combo Chain, Utility Trencher	TR40808C28
8in x 72in Terminator and Cup Combo Chain, Utility Trencher	TR40808C31
8in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR40808H25
8in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR40808H28
8in x 72in H-Plate, Rock and Frost Chain, Utility Trencher	TR40808H31
8in x 48in Mixed Rock and Frost Chain, Utility Trencher	TR40808M25
8in x 60in Mixed Rock and Frost Chain, Utility Trencher	TR40808M28
8in x 72in Mixed Rock and Frost Chain, Utility Trencher	TR40808M31
8in x 48in Rock and Frost Chain, Utility Trencher	TR40808R25
8in x 60in Rock and Frost Chain, Utility Trencher	TR40808R28
8in x 72in Rock and Frost Chain, Utility Trencher	TR40808R31
8in x 48in Solid Weld Terminator Chain, Utility Trencher	TR40808S25
8in x 60in Solid Weld Terminator Chain, Utility Trencher	TR40808S28
8in x 72in Solid Weld Terminator Chain, Utility Trencher	TR40808S31
8in x 48in Bolt-On Terminator Chain, Utility Trencher	TR40808T25
8in x 60in Bolt-On Terminator Chain, Utility Trencher	TR40808T28
8in x 72in Bolt-On Terminator Chain, Utility Trencher	TR40808T31

Notes:



Count on it.