



Form No. 3423-848 Rev A

Count on it.

Parts Catalog

Twin Bagger Grandstand® Mower

Model No. 78524—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Bagger Assembly 4


Hood Assembly No. 138-4942..... 6

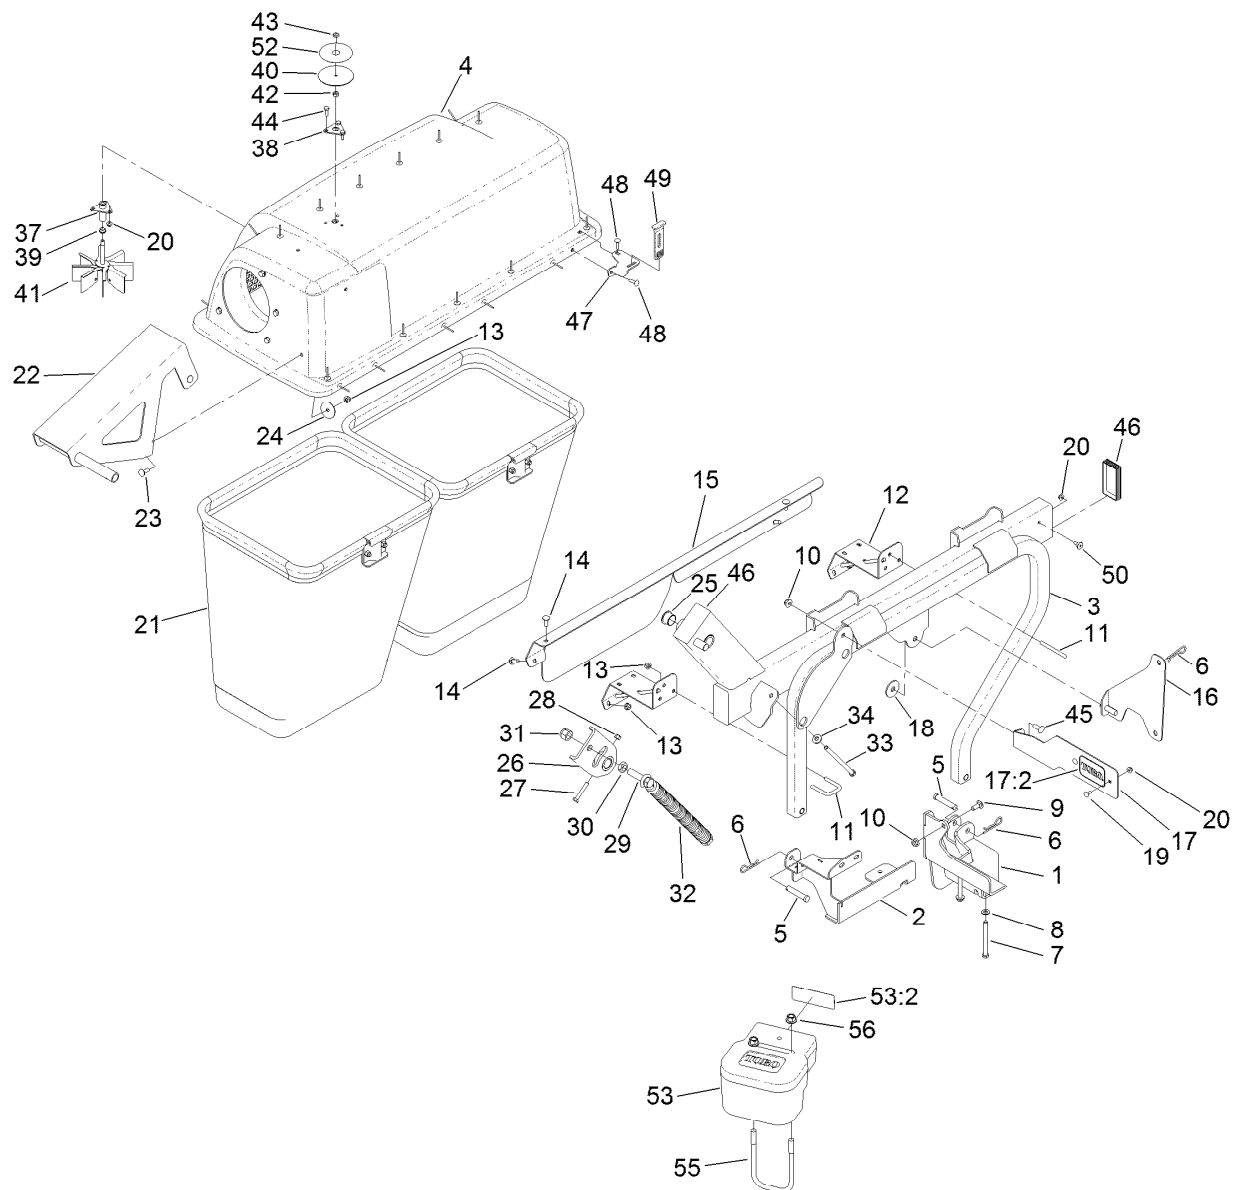

Bagger Assembly

Ref.	Part Number	Qty.	Description
1	133-8655-01	1	Mount-Bagger
2	133-8670-01	1	Bracket-Extension, Tube
3	136-4055-03	1	Frame-Bagger
4	138-4942	1	Hood ASM
5	92-2743	2	Pin-Clevis
6	1-806005	3	Pin-Cotter
7	323-16	2	Screw-HH
8	3256-24	2	Washer-Flat
9	3231-2	1	Bolt-CARR
10	104-8301	2	Nut-HF, NI
11	301950	2	U-Bolt-Square
12	133-8706-03	2	Cover, Wheel
13	104-8300	11	Nut-HF, NI
14	3230-10	4	Bolt-CARR
15	133-8707-03	1	Cover-Wheel
16	133-8668-03	1	Mount-Support, Bagger
17	136-4072	1	Bracket-Mount, Bagger W/Decal
17:2	70-2200	1	Decal
18	86-1990	1	Washer-Thrust
19	3229-11	2	Screw-CARR


Ref.	Part Number	Qty.	Description
20	104-7201	8	Nut-HF
21	133-8700	2	Bag And Frame ASM
22	136-4060-03	1	Pivot-Hood
23	3230-2	3	Bolt-CARR
24	1-653036	3	Washer
25	127-0369	2	Bushing
26	136-4070-03	1	Bellcrank ASM
27	112-3305	1	Screw-HH
28	3296-29	1	Nut-Lock, NI
29	327-7	1	Screw-HH
30	3218-6	1	Nut-Jam
31	3296-53	1	Nut-Lock, NI
32	116-0000	1	Spring-Extension
33	323-58	1	Bolt-TAP, HH
34	98-5975	1	Washer-Belleville
37	136-4100-03	1	Mount-Fill Indicator
38	136-4099-03	1	Plate-Fill Indicator
39	1-603735	2	Bushing-Flanged
40	136-4104-03	1	Plate-Fill Indicator
41	136-4140-03	1	Bag Fill Fan ASM
42	32153-3	1	Nut-Hex, Side Deform

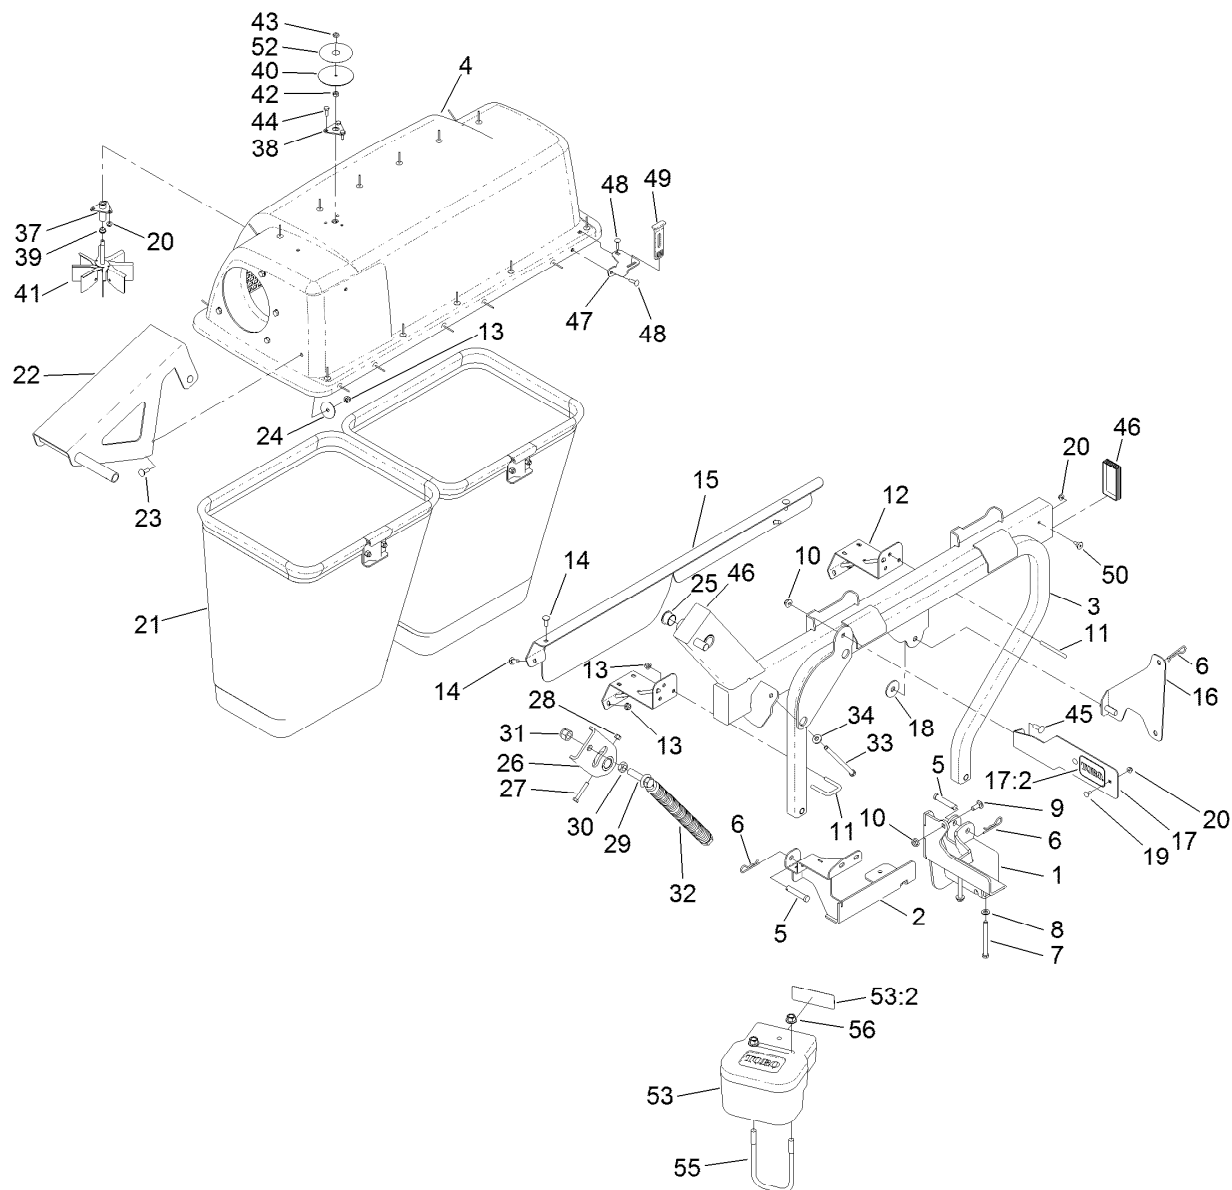

Bagger Assembly (continued)

Ref.	Part Number	Qty.	Description
43	3218-2	1	Nut-Jam
44	321-4	3	Screw-HH
45	3231-22	1	Screw-CARR
46	136-4112	3	Cap-End
47	136-4115-03	1	Bracket-Strap
48	3229-30	2	Screw-CARR
49	131-8402	1	Strap-Down, Hold

Ref.	Part Number	Qty.	Description
50	125-1122	1	Screw
52	136-5663	1	Decal-Rotation Indicator
53	106-0872	1	Weight ASM
53:2	136-4053	1	Decal-Warning, Counterweight
55	136-4090	1	U-Bolt
56	99-5107	2	Nut-Lock

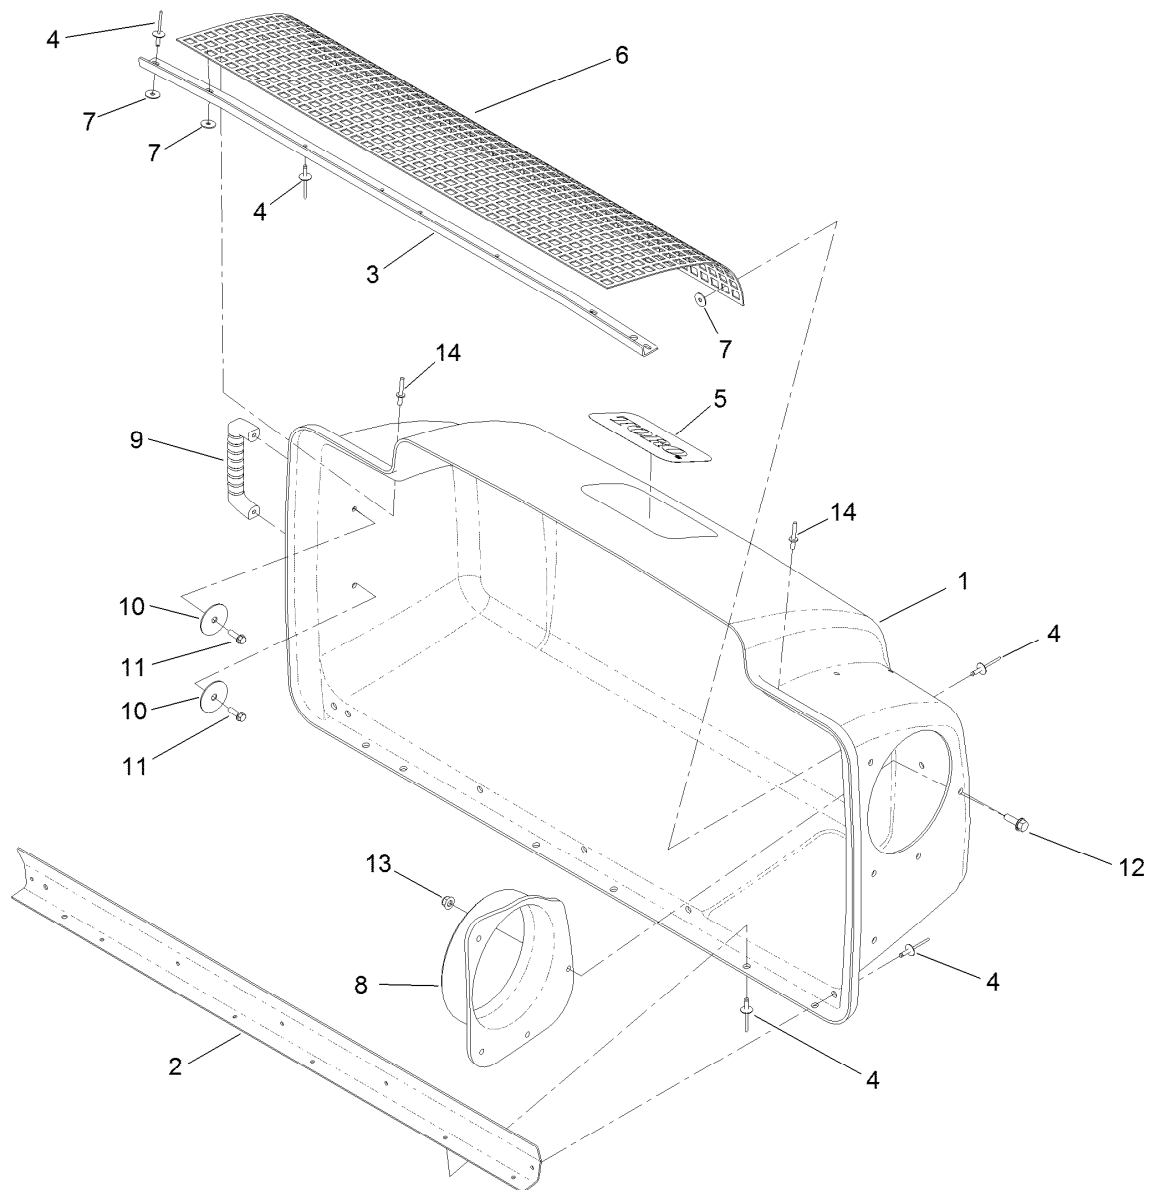

Hood Assembly No. 138-4942

Ref.	Part Number	Qty.	Description
1	139-2873	1	Top-Bagger
2	136-4111-03	1	Stiffener-Bagger, Top
3	138-5849-03	1	Support, Screen
4	114439	26	Rivet-Blind
5	99-4693	1	Decal
6	114967	1	Screen-Bagger
7	3256-61	14	Washer-Flat
8	137-6426	1	Adapter-Inlet, Hood
9	65-5100	1	Handle-Door
10	1-653036	2	Washer
11	46-8091	2	Screw-HWH
12	3234-29	4	Screw-HHF
13	104-8300	4	Nut-HF, NI
14	3269-22	2	Rivet-Pop

Notes:



Count on it.