



WHEEL HORSE[®]
312-8 CLASSIC
314-8 CLASSIC
GARDEN TRACTOR

Model No. 73429 – 9900001 & Up

Model No. 73449 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood Assembly	1	Wheels Assembly	15
Frame, Axle & Steering System	2	Hitch Assembly	16
Hoodstand, Console Assembly	3	Battery Assembly	17
Hoodstand, Console Assembly (cont.)	4	Fuel Tank Assembly	18
Footrest & Hoodstand Side Covers Assembly	5	Hoodstand Electrical Mounting Assembly	19
Gauges, Warnig Lights & Controls Assembly	6	Electrical Schematic	20–21
Mahual Lift System Assembly	7	Transmission 8–Speed 4 Pinion (Model 73429 Only)	22–23
Clutch System Assembly	8	Engine (Model 73429 Only)	24–34
Brake System Assembly	9	Transmission 8 – Speed 8 Pinion (Model 73449 Only)	35–36
Fender , Seat & Tail Lights/Reflectors Assembly	10	Engine (Model 73449 Only)	37–47
PTO Clutch & Cover Assembly	11	Toro Part Number Index	48–55
PTO Clutch System & Belt Guide Assembly	12	Maintenance	56–57
Engine Assembly	13		
Transaxle Assembly	14		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
36" Rear Discharge Mower	Model No. 78305	Blower Vac (For 42" SD Mower)	Model No. 79301
42" Side Discharge Mower	Model No. 78345	RearWheel Assembly (Left)	Part No. 110933
42" Rear Discharge Mower	Model No. 78350	RearWheel Assembly (Right)	Part No. 110934
48" Side Discharge Mower	Model No. 78361	Wheel Weights (Rear)	Part No. 81115
36" Tiller	Model No. 79370	Wheel Weights (Rear Flush)	Part No. 81117
48" Dozer Blade	Model No. 79360	Wheel Weights (Front) (Model No. 73449 Only)	Part No. 81214
50" Grader Blade	Model No. 79351		
42" Single Stage Snowthrower	Model No. 79360		
44" Two Stage Snowthrower	Model No. 79361		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HHST	hex head self tapping
ASM	assembly	HJ	hex jam
CARR	carriage	HOC	height-of-cut
DEG	degrees	HS	hex socket
FH	flat head	HSBH	hex socket button head
GA	gauge	HSFH	hex socket flat head
HF	hex flange	HSH	hex socket head
HFW	hex flange washer	HWH	hex washer head
HH	hex head	HWHTF	hex washer head thread forming
HHF	hex head flange		

INC	incorporated	SHWH	slotted hex washer head
LH	left hand	SPH	slotted pan head
PH	pan head	STD	standard
PPH	Phillips pan head	TAP	self tapping
PTO	power take off	TH	truss head
RH	right hand	TTH	Torx truss head
SFH	slotted fillister head	WH	wing head
SH	square head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y)*. *X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

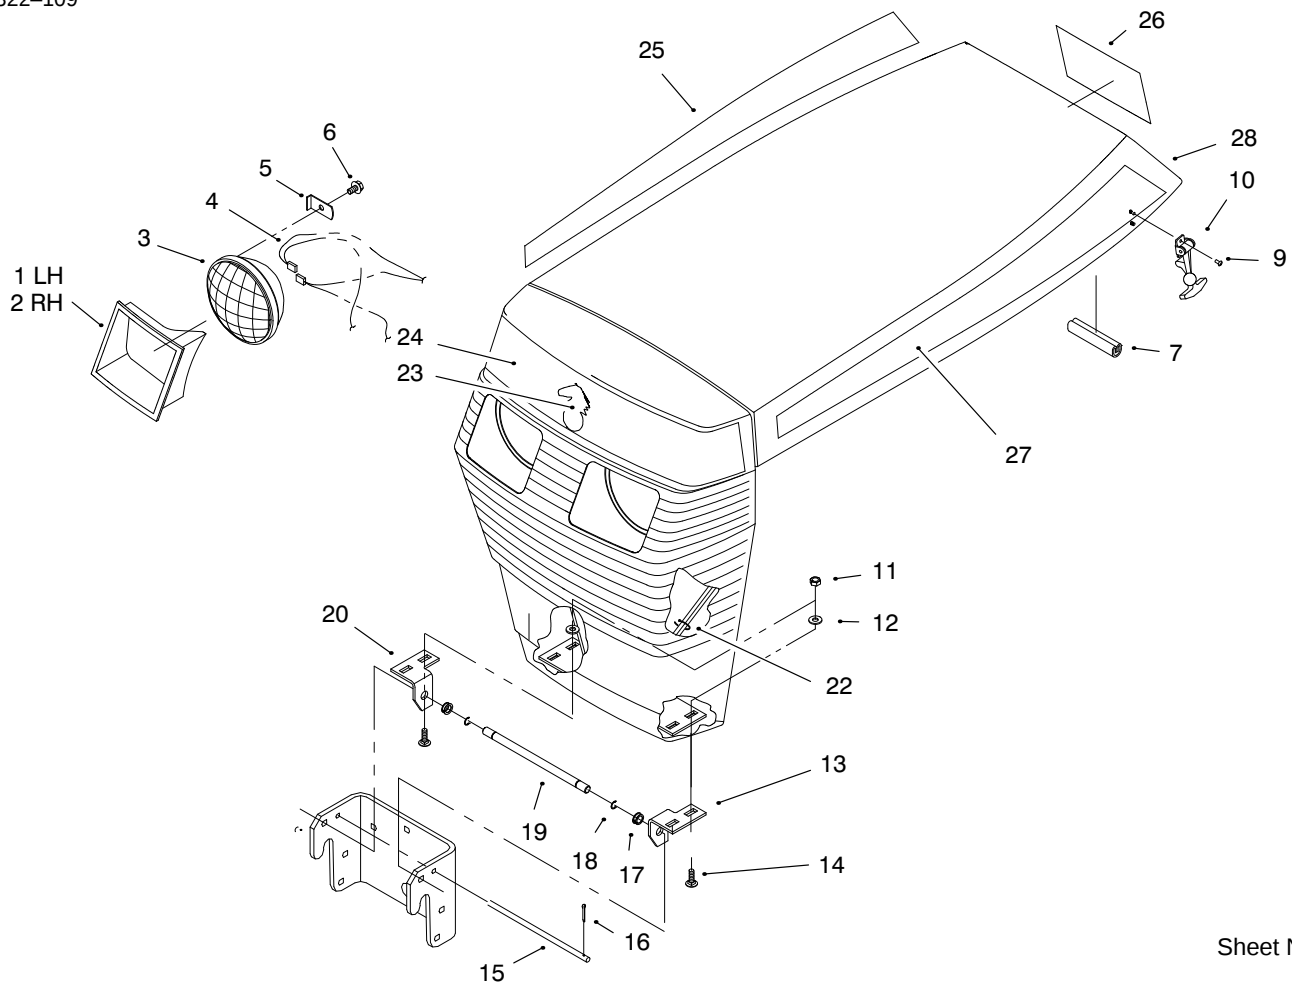


Sheet No.:2

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	109495	1	LH Bezel Headlight
2	109494	1	RH Bezel Headlight
3	102881	2	Headlamp
4	95-7679	1	Harness – Headlight
5	109459	2	Lock Headlight
6	9266714	2	Screw-HWH
7	111757	1	Edging Console
9	117432	4	Poprivet
10	117344	2	Handle-Ass'y
11	3296-42	4	Nut-Lock Ni
12	3256-22	4	Washer-Flat
13	116747	1	Bracket-Grill L.h
14	3229-25	4	Screw-CARR
15	101850	1	Hood Stop Rod
16	3272-1	2	Pin-Cotter
17	5979	2	Nyliner Bushing
18	105797	2	E-Ring
19	116745	1	Rod-Grill Pivot
20	116746	1	Bracket-Grill R.h
22	3290-378	1	Tie-Cable
23	94-3736	1	Logo – Horshead (Silver)
24	92-9826	1	Decal – Frt Hood Top
25	92-9825	1	Decal – RH Hood Top
26	98-0750	1	Decal – Danger Hood


Ref. No.	Part No.	Qty.	Description
27	92-9824	1	Decal – LH Hood Top
28	112358-01	1	Hood Wa (Red)

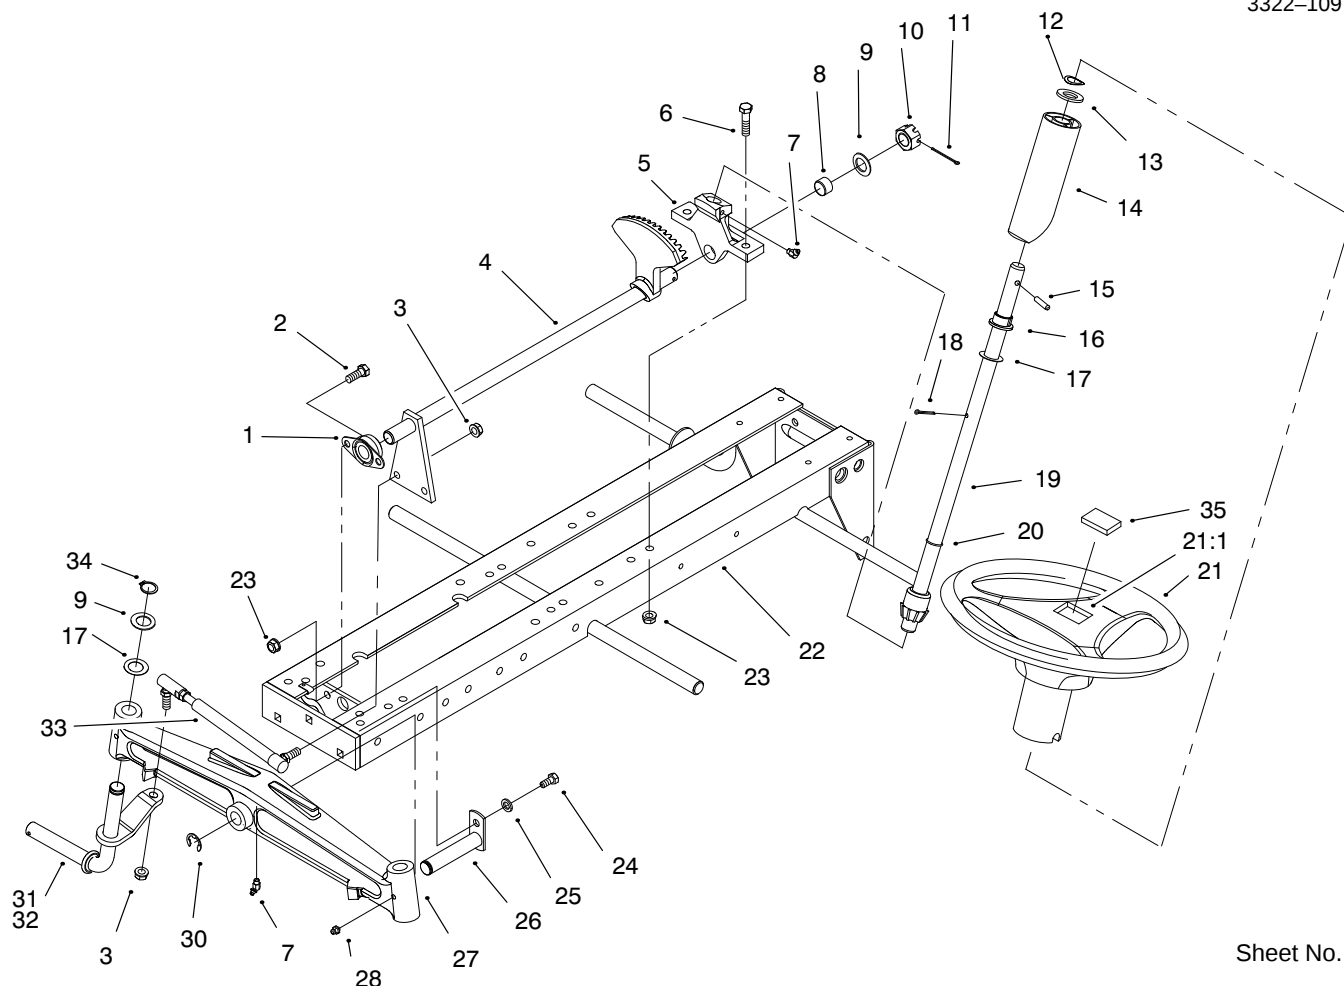

Sheet No.:3

Frame, Axle & Steering System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	6472	1	Flanged Bearing	24	322-1	1	Screw-HH
2	323-6	2	Screw-HH	25	3253-4	1	Washer-Lock/Sp
3	3296-6	4	Nut-Lock Ni	26	6216	1	Assy Pin & Plate
4	78-2880-03	1	Wlmt-Lwer Ster	27	5638-01	1	Axle Front
5	88-2710-03	1	Support Lower Stg	28	302-5	2	Zerk
6	323-8	2	Screw-HH	30	5618	1	E-Ring
7	302-11	2	Zerk-45 Degree	31	113379-01	1	LH Spindle Wa* (Only On: 73429)
8	6397	1	Bearing-Bronze	31	113382-01	1	Spindle-RH, Wa (Only On: 73449)
9	1278	3	Washer	32	113381-01	1	Spindle-LH, Wa (Only On: 73449)
10	32136-5	1	Nut-Sltd	32	113380-01	1	Spindle-RH, Wa (Only On: 73429)
11	3272-19	1	Pin-Cotter	33	78-2900-01	2	Ass'y-Tie Rod (Red)
12	7896	1	Bowed Washer	34	32120-93	2	Ex Hd S-Ring
13	109262	2	Washer-Wheel	35	98-1459	1	Decal - Urethane, Toro
14	113443	1	Tube-Steering				
15	32121-111	1	Pin-Roll				
16	109189	1	Bearing-Flanged				
17	5210	14	Shim Washer				
18	3272-21	1	Cotter Pin				
19	92-4987	1	Steering Shaft Wa				
20	237-69	1	O-Ring				
21	98-1473	1	Wheel-Steering, 15" Soft				
21:1	98-1468	1	Cover - Wheel, Steering				
22	94-6673-01	1	Wa Frame (Red)				
23	3296-39	4	Nut-Lock Ni				

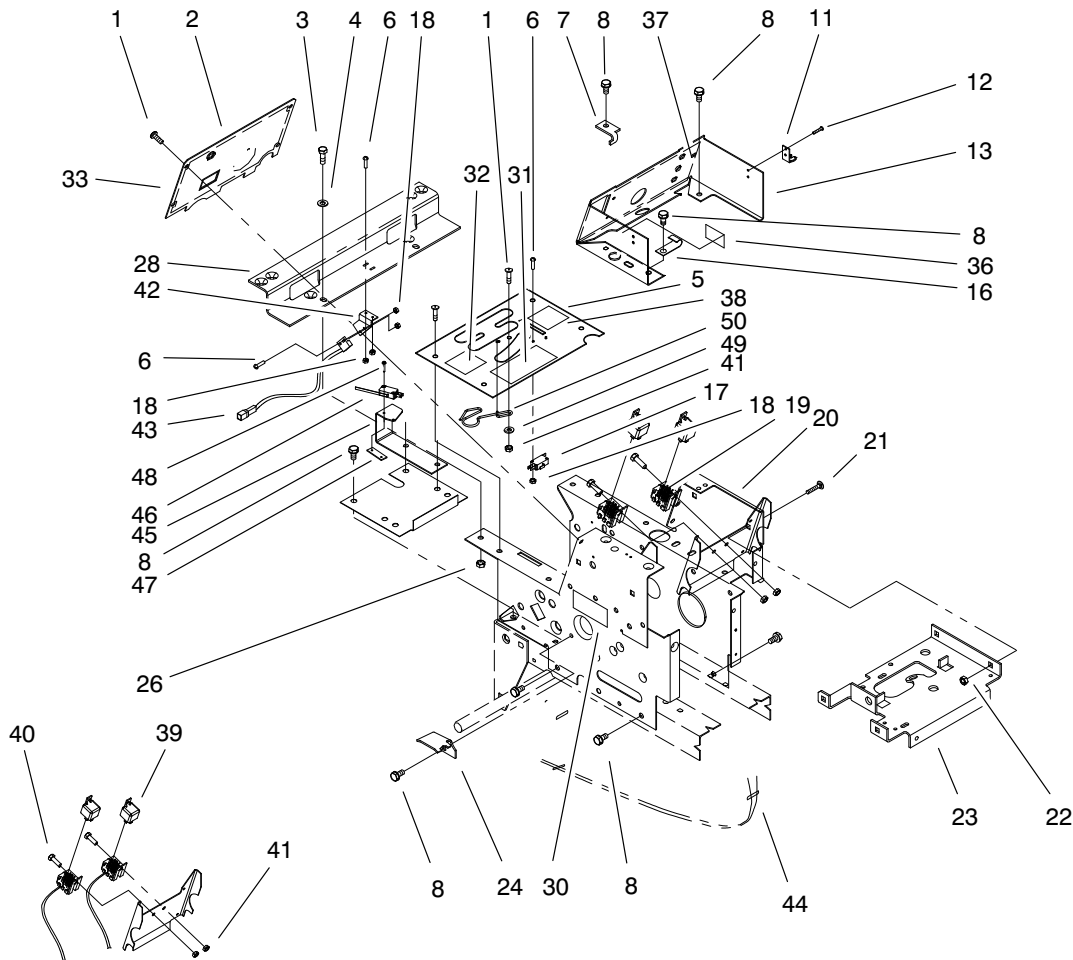


Sheet No.:4

Hoodstand, Console Assembly

Ref. No.	Part No.	Qty.	Description
1	9108372	9	Screw Phc
2	95-7674-03	1	Plate-Hoodstand (Only On: 73429)
2	95-7675-03	1	Plate-Hoodstand (Only On: 73449)
3	322-5	2	Screw-HH
4	3256-23	2	Washer-Flat
5	99-8026-03	1	Plate-Shift
6	9109484	6	Screw Pchr
7	112415	1	Stop-PTO
8	9266944	11	Bolt
11	117343	2	Keeper-Latch
12	117432	4	Poprivet (Only On: 73429)
13	99-3669-03	1	Console (Only On: 73429)
13	95-7670-03	1	Console (Only On: 73449)
16	111392	1	J-Clip
17	111332	1	Switch
18	9157324	6	Nut-Hex
19	107069	4	Clip
20	95-7676-03	1	Wa - Hoodstand
21	117371	4	Bolt CARR.
22	9151126	4	Nut-Hex
23	78-3010-03	1	Suport-Batery


Ref. No.	Part No.	Qty.	Description
24	88-2170-03	1	Brket-Blt Spt
26	3296-29	2	Nut-Lock Ni
27	106250-03	1	Cover-Dust
28	95-7665-03	1	Bracket-Fender
30	92-9828	2	Decal - Model 312-8 (Only On: 73429)
30	92-9829	2	Decal - Model 314-8 (Only On: 73449)
31	92-8946	1	Decal - Danger
32	111534	1	Decal Shift Pattern
33	98-0675	1	Decal - Dash, Lower (Only On: 73449)
33	98-0674	1	Decal - Dash, Lower (Only On: 73429)
36	111926	1	Decal Elect System
37	99-5342	1	Decal-Console (Only On: 73429)
37	99-5341	1	Decal-Console (Only On: 73449)
38	111510	1	Decal-Parking-Brake
39	98-7249	2	Relay-Spdt
40	3234-33	2	Screw-Hex Flange
41	3296-42	3	Nut-Lock Ni
42	95-7666	1	Brkt-Switch, Reed
43	95-7669	1	Switch - Reed, Magnetic

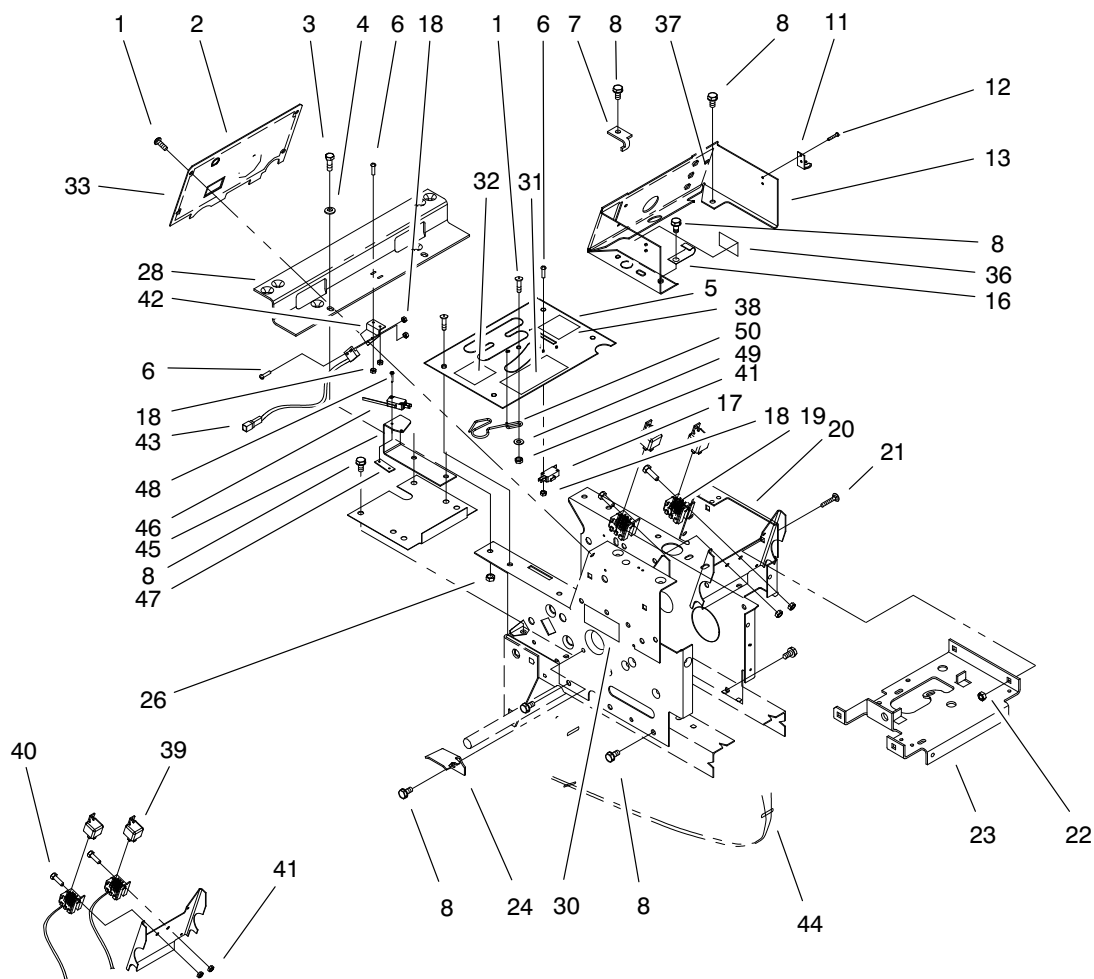

Sheet No.:4

Hoodstand, Console Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
44	3290-378	2	Tie-Cable
45	99-8049-03	1	Bracket-Switch, Reverse
46	88-9931	1	Switch-Micro
47	3290-354	1	Nut-Speed
48	147665	2	Screw
49	3256-22	1	Washer-Flat
50	99-8028	1	Spring-Shift Control

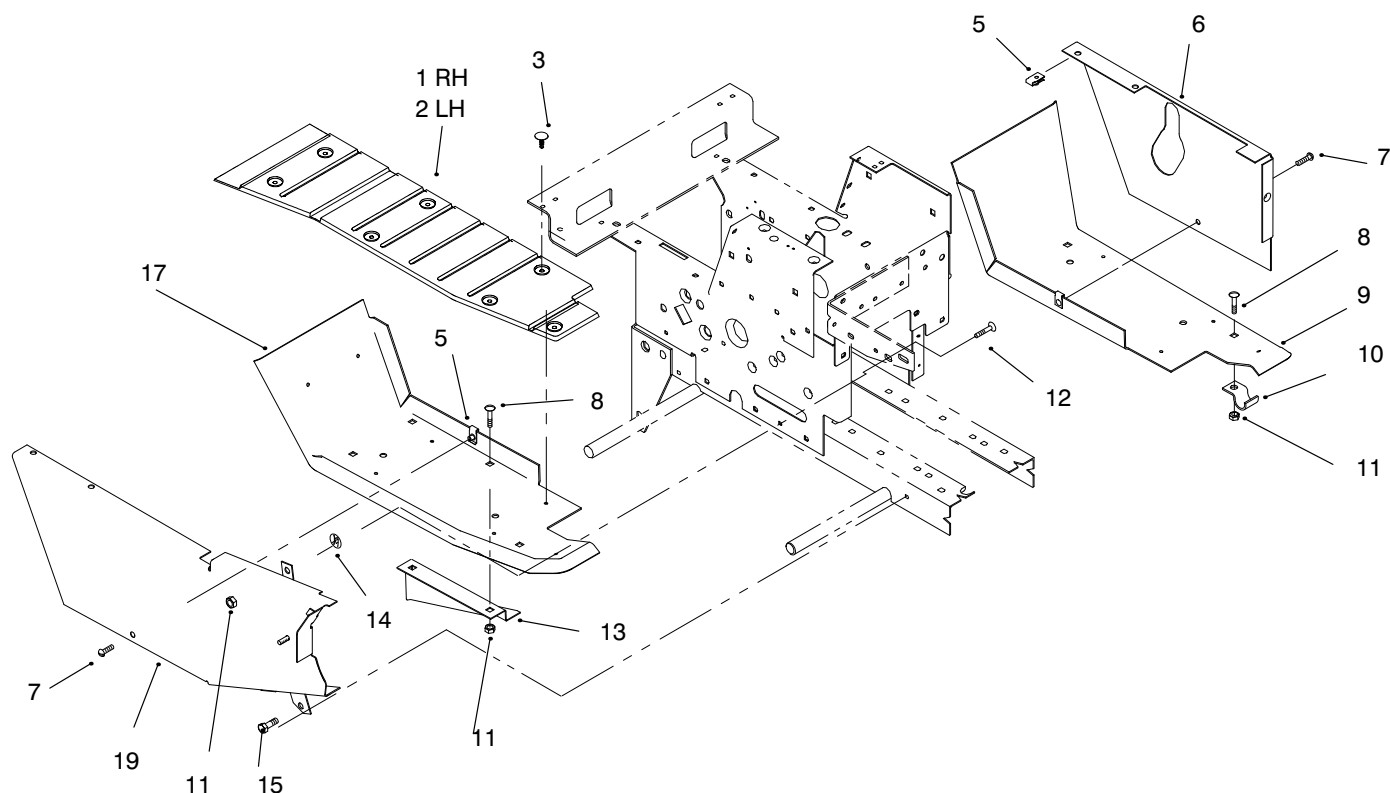


Sheet No.:5

Footrest & Hoodstand Side Covers Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3710	1	Pad – Foot
2	94-3712	1	Pad – Foot
3	3290-479	16	Fastener-Panel
5	107069	6	Clip
6	113935-01	1	Cover-L.h.
7	9108372	2	Screw
8	116000	6	Bolt-CARR
9	94-3522-01	1	Footrest-LH
10	7456	4	Bracket
11	3296-29	7	Nut-Lock Ni
12	3230-1	1	Screw-CARR
13	106352-01	1	Guid-Lower Blt
14	108457	1	Push Nut
15	9266944	1	Bolt 5/16-18x5/8 St
17	94-3521-01	1	Footrest-RH
19	95-7695-01	1	Guard-Belt, (Single) W.a.

Ref. No.	Part No.	Qty.	Description

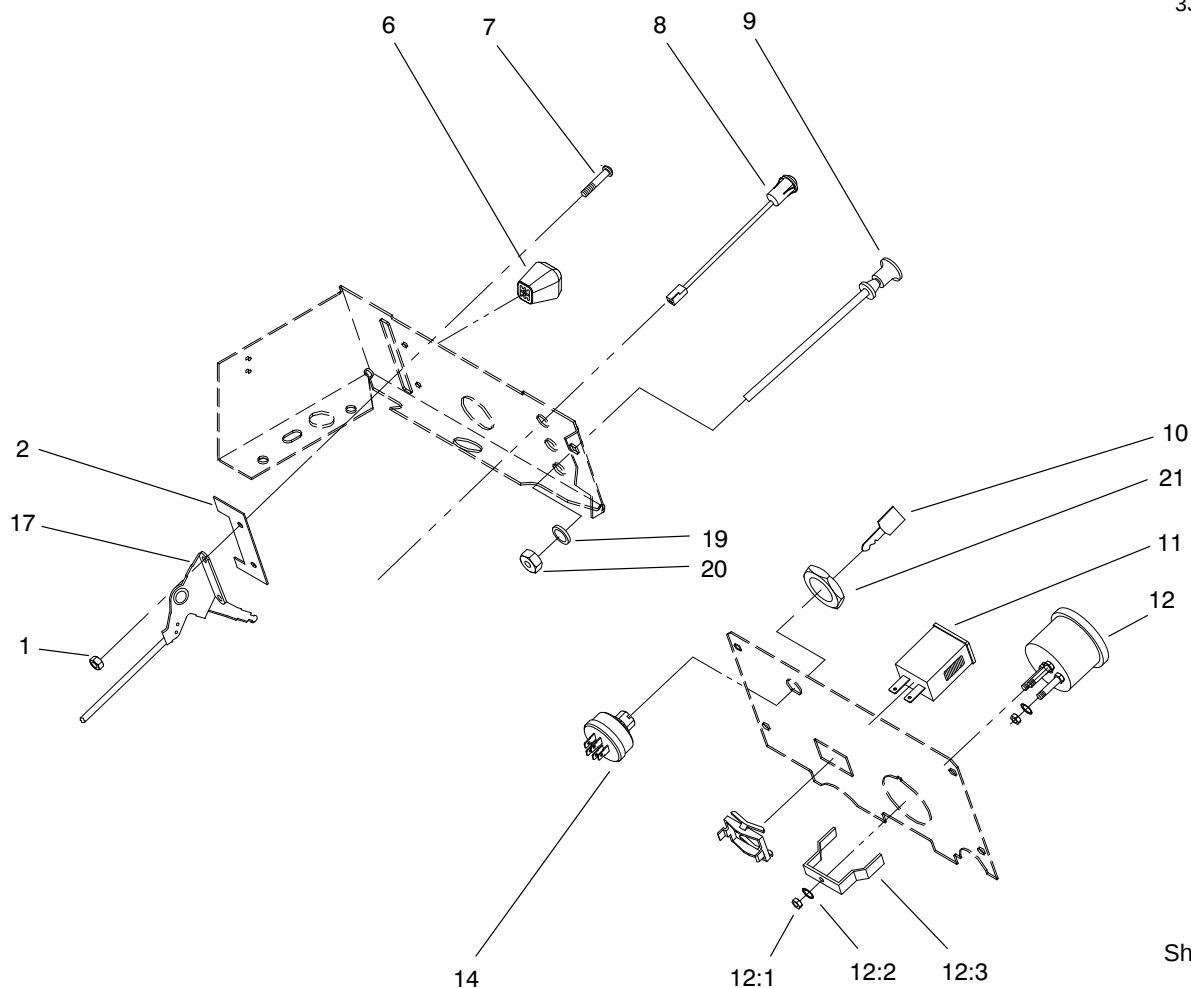


Sheet No.:6

Gauges, Warning Lights & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-2	2	Nut-Lock Ni
2	120590-03	1	Stop-Throttle
6	66-0120	1	Knob
7	9107922	2	Scrw-Phcr
8	95-7652	1	Light - Indicator (Only On: 73429)
8	95-7652	3	Light - Indicator (Only On: 73449)
9	95-7656	1	ASM - Control, Choke
10	62-7770	1	Key-Ignition
11	94-4208	1	Hourmeter
12	79-0060	1	Voltmeter (Only On: 73449)
12:1	3217-27	1	Nut-Hex (Only On: 73449)
12:2	3255-25	1	Washer-Lock/Ext (Only On: 73449)
12:3	78-0080	1	Brkt-Gauge Mtg F/W (Only On: 73449)
14	92-6785	1	Switch - Ignition
17	95-7657	1	ASM - Control, Throttle
19	3256-37	1	Washer-Flat
20	109530	1	Nut-Hex Palnut
21	700919	1	Nut #125


Ref. No.	Part No.	Qty.	Description

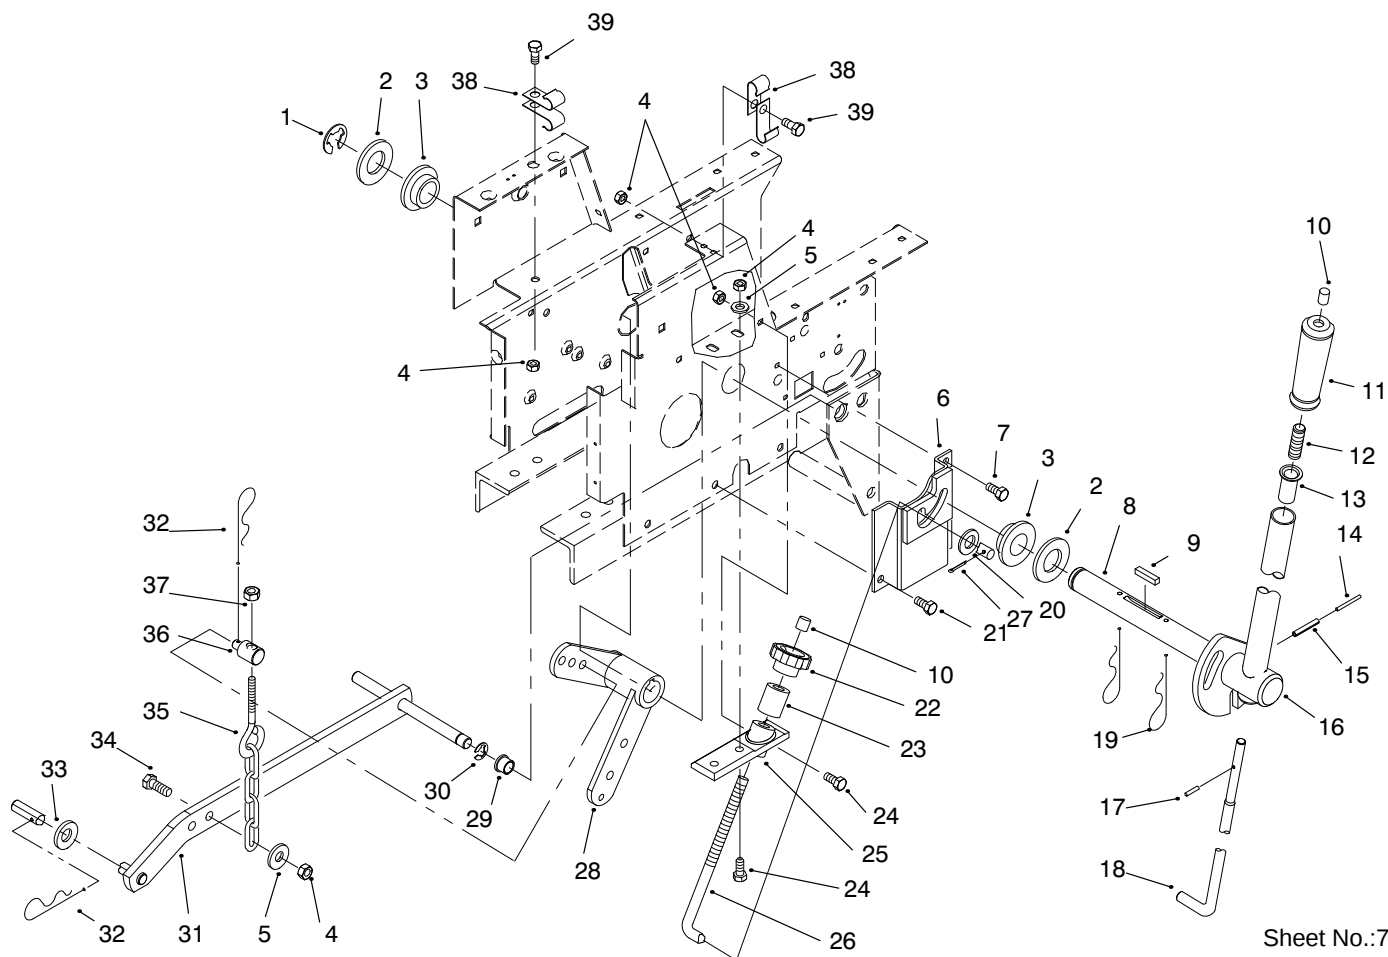

Manual Lift System Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-91	1	Tru Arc Ring
2	3256-62	2	Washer-Flat
3	106269	2	Bearing-Flange
4	3296-29	6	Nut-Lock Ni
5	3256-23	3	Washer-Flat
6	106411-03	1	Lift Lever Wa
7	9266944	1	Bolt
8	108565	1	Shaft-Lift Lever
9	1121	1	Sq Key
10	105316	2	Cap-Plunger Rod
11	92-6710	1	Grip - Handle
12	3624	1	Compression Spring
13	8130	1	Retainer Spring
14	32121-103	1	Pin-Sprl
15	32121-25	1	Pin-Roll
16	108563-03	1	Lift Handle Wa
17	933148	1	Spirol Pin
18	106257	1	Rod-Latch Lift
19	9335074	2	Hair Pin Cotter
20	3256-5	1	Washer-Flat
21	9266964	2	Trs
22	5280	1	Knob-Lift Control
23	106258-03	1	Slev-Lift Adjs
24	322-5	3	Screw-HH
25	106345-03	1	Casting-Lift Lever
26	110653	1	Rod Height Control


Ref. No.	Part No.	Qty.	Description
27	3272-10	1	Pin-Cotter
28	78-1550	1	Wldmt-Lift Lever
29	6229	1	Bearing
30	32120-47	1	E Ring-External
31	113445-03	1	Lift Bar Wa
32	9335054	2	Pin-Hair Cotter
33	3256-26	1	Washer-Flat
34	322-6	1	Screw-HH
35	106522	1	Chain-Lift
36	6739	1	Stud-Lift
37	3296-39	1	Nut-Lock Ni
38	8830	4	Clip
39	322-2	2	Screw-HH

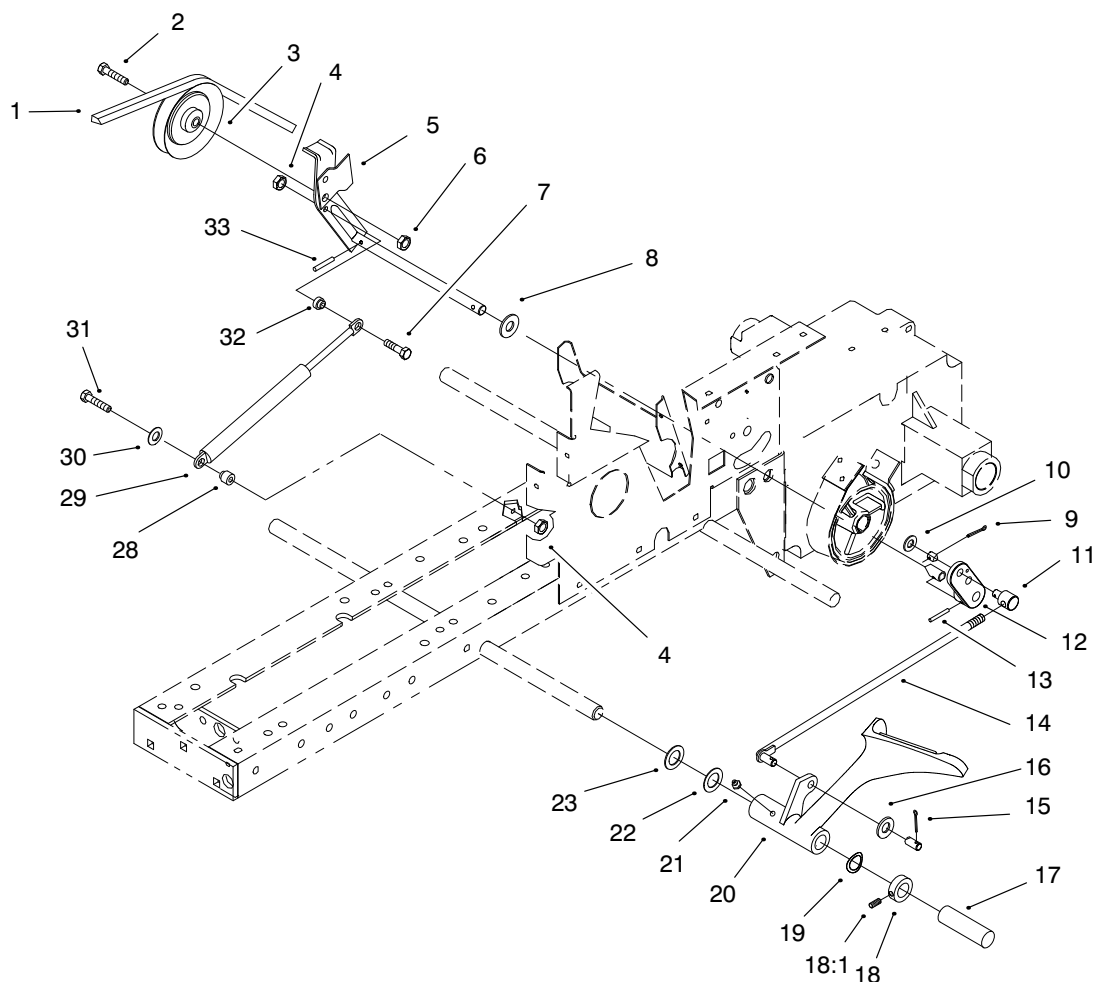

Sheet No.:8

Clutch System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-9808	1	Belt – V	30	3256-22	1	Washer–Flat
2	106193	1	Bolt–Special Hex	31	321-9	1	Screw–HH
3	95-7668	1	Pulley – V, Idler	32	78-3260	1	Spacer–Shoulder
4	3296-42	2	Nut–Lock Ni	33	933267	1	Spirol Pin
5	98-1746	1	Idlr Arm w/A				
6	32146-2	1	Nut–Lock Ni				
7	321-5	1	Screw–HH				
8	3765	1	Washer Shim				
9	3272-6	1	Pin–Cotter				
10	3256-24	1	Washer–Flat				
11	101161	1	Trunion				
12	105896-03	1	Arm–Clutch Rod				
13	933190	1	Spirol Pin				
14	103347	1	Assy–Rod & Guide				
15	3272-10	1	Pin–Cotter				
16	920248	1	Washer–Nylon				
17	94-6683	1	Sleeve – Protective				
18	111383	1	Collar				
18:1	3245-32	1	Screw–HS				
19	7896	1	Bowed Washer				
20	94-3703-01	1	Pedal–Brake, Clutch				
21	302-5	1	Zerk				
22	1278	1	Washer				
23	9202254	1	Washer				
28	78-3250	1	Spacer–Shoulder				
29	78-3240	1	Ass'y–Gas Spring				

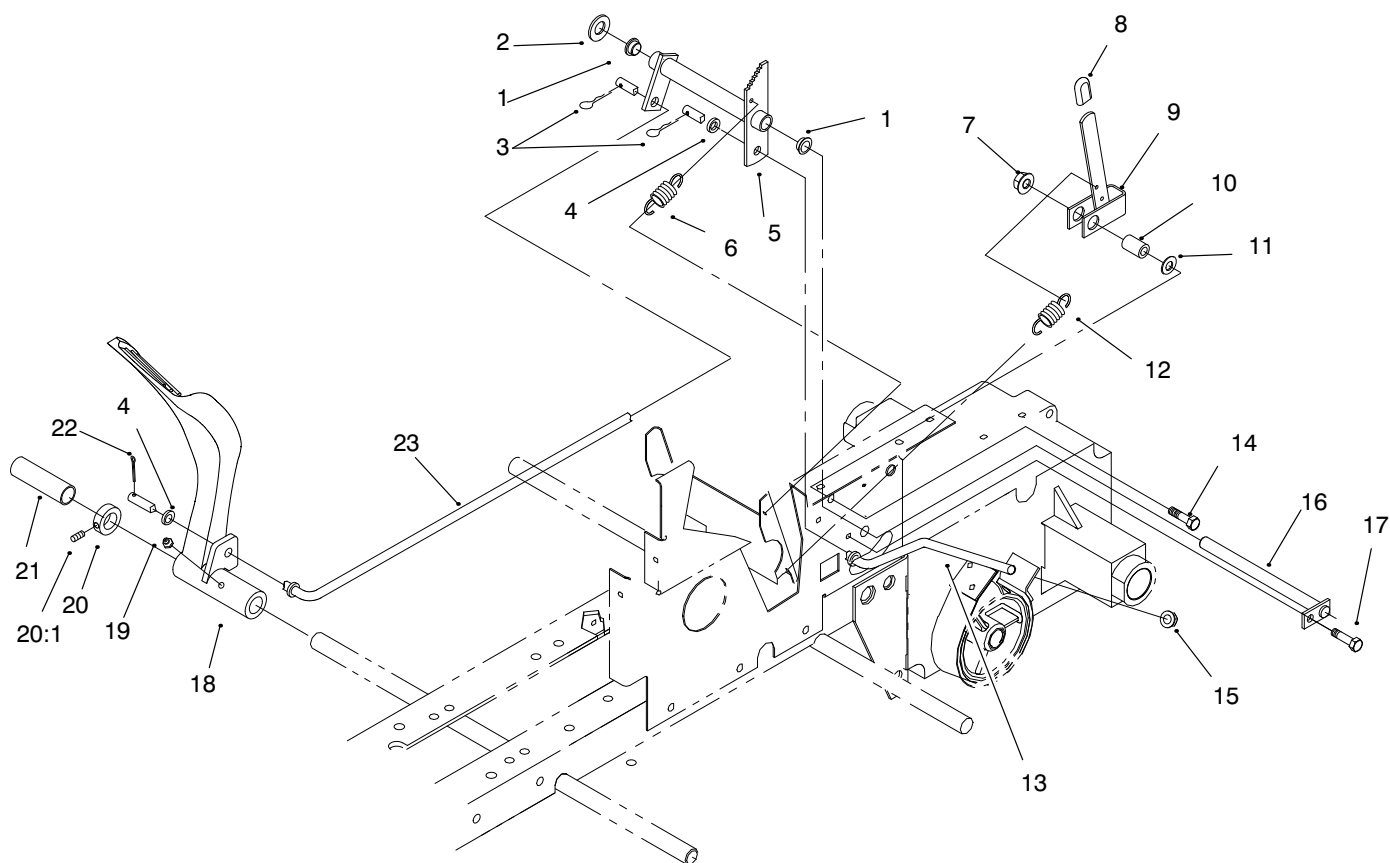


Sheet No.:9

Brake System Assembly

Ref. No.	Part No.	Qty.	Description
1	7879	2	Bushing—Flanged
2	3256—26	1	Washer—Flat
3	9335054	2	Pin—Hair Cotter
4	920248	2	Washer—Nylon
5	103543—03	1	Bellcrank ASM
6	103628	1	Spring—Extension
7	32128—19	1	Locknut—Flange
8	6820	1	Grip
9	106451—03	1	Assy—Brake Lever Wa
10	102025	1	Spacer
11	3256—24	1	Washer—Flat
12	107677	1	Spring—Brake
13	105900	1	Rod—Rear Brake
14	323—9	1	Screw—HH
15	3296—39	1	Nut—Lock Ni
16	106417	1	Assy—Rod Wa
17	9266944	1	Bolt
18	94—3706—01	1	Pedal—Brake, Gear
19	302—5	1	Zerk
20	111383	1	Collar
20:1	3245—32	1	Screw—HS
21	94—6683	1	Sleeve — Protective
22	3272—10	1	Pin—Cotter
23	92—6849	1	Rod — Brake

Ref. No.	Part No.	Qty.	Description

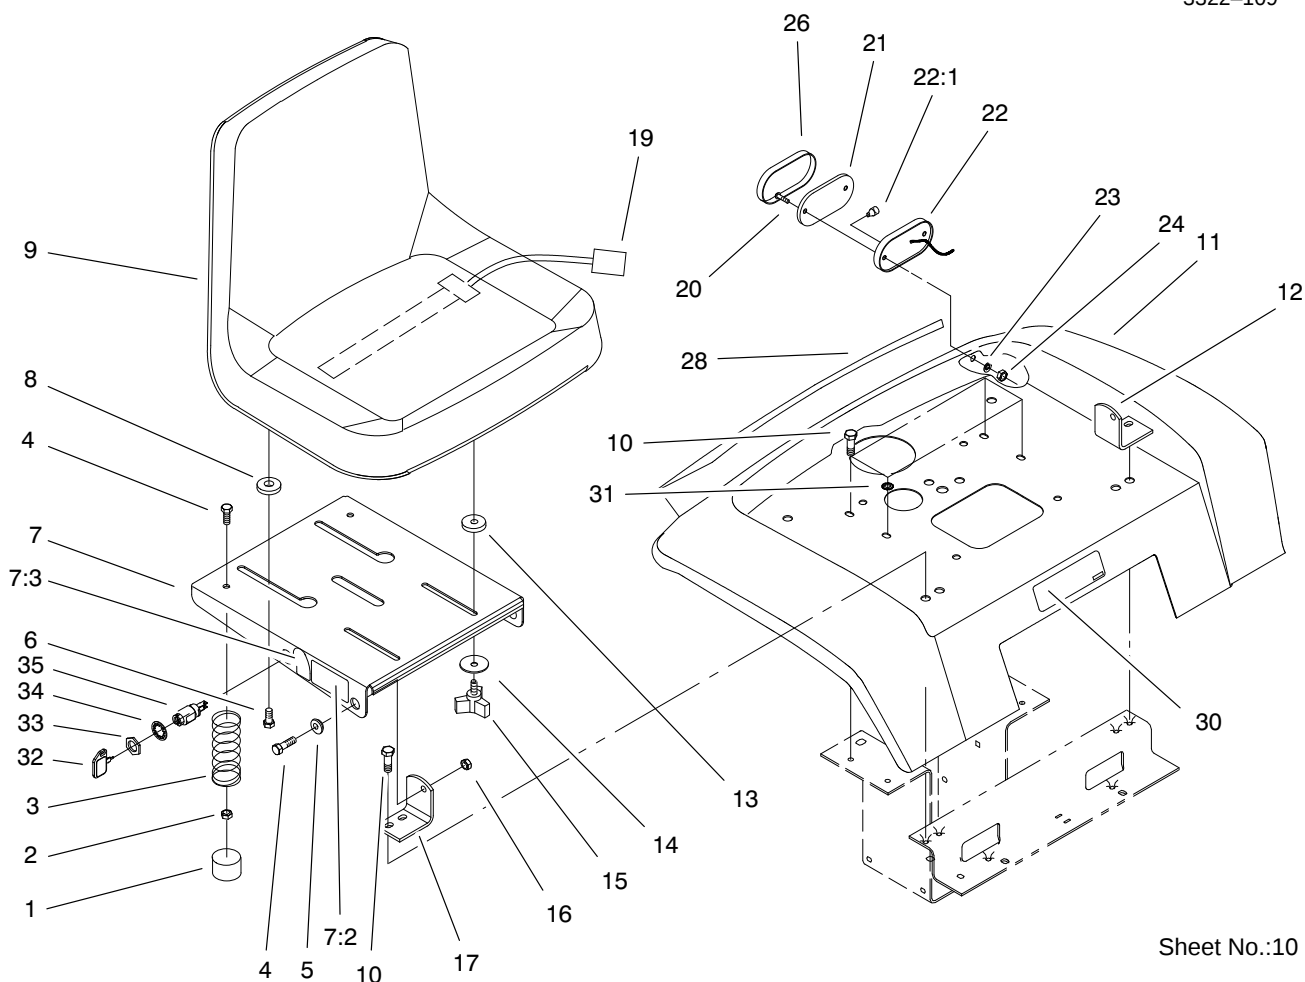


Sheet No.:10

Fender , Seat & Tail Lights/Reflectors Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	3296-58	2	Nut-Lock Ni
3	92-7054	2	Spring - Compression
4	322-4	4	Screw-HH
5	105503	2	Bushing
6	92-6986	2	Bolt - Shoulder
7	99-8031	1	Support-Seat, ASM
7:2	99-2985	1	Decal-Danger
7:3	99-5339	1	Decal-Nmir Switch
8	92-6750	2	Spacer - Nylon
9	92-6511	1	Seat V-511
10	9266944	8	Bolt
11	94-3722-01	1	Fender
12	79-0970-03	1	Brkt-Pivot L.h.
13	109989	2	Spacer Nylon
14	94-2869	2	Washer
15	700806	2	Knob
16	3296-29	2	Nut-Lock Ni
17	79-0950-03	1	Brkt-Pivot R.h.
19	38-1420	1	Switch-Seat
20	3250-31	4	Screw-PPH
21	108547	2	Reflector (Only On: 73429)
22	105202	2	Base-Taillight (Only On: 73449)
22:1	109045	2	Bulb (Only On: 73449)


Ref. No.	Part No.	Qty.	Description
23	3254-1	4	Washer-Lock/Int (Only On: 73449)
24	3296-27	4	Nut-Lock Ni
26	112564	2	Lens-Tail Light (Only On: 73449)
28	92-9827	1	Decal - Rear Fender
30	76-1340	1	Decal - USA
31	3255-8	1	Washer-Lock/Ext (Only On: 73449)
32	62-7770	1	Key-Ignition
33	218-461	1	Nut-F/W And Other
34	3254-5	1	Washer-Lock/Int
35	46-5780	1	Switch-Starter

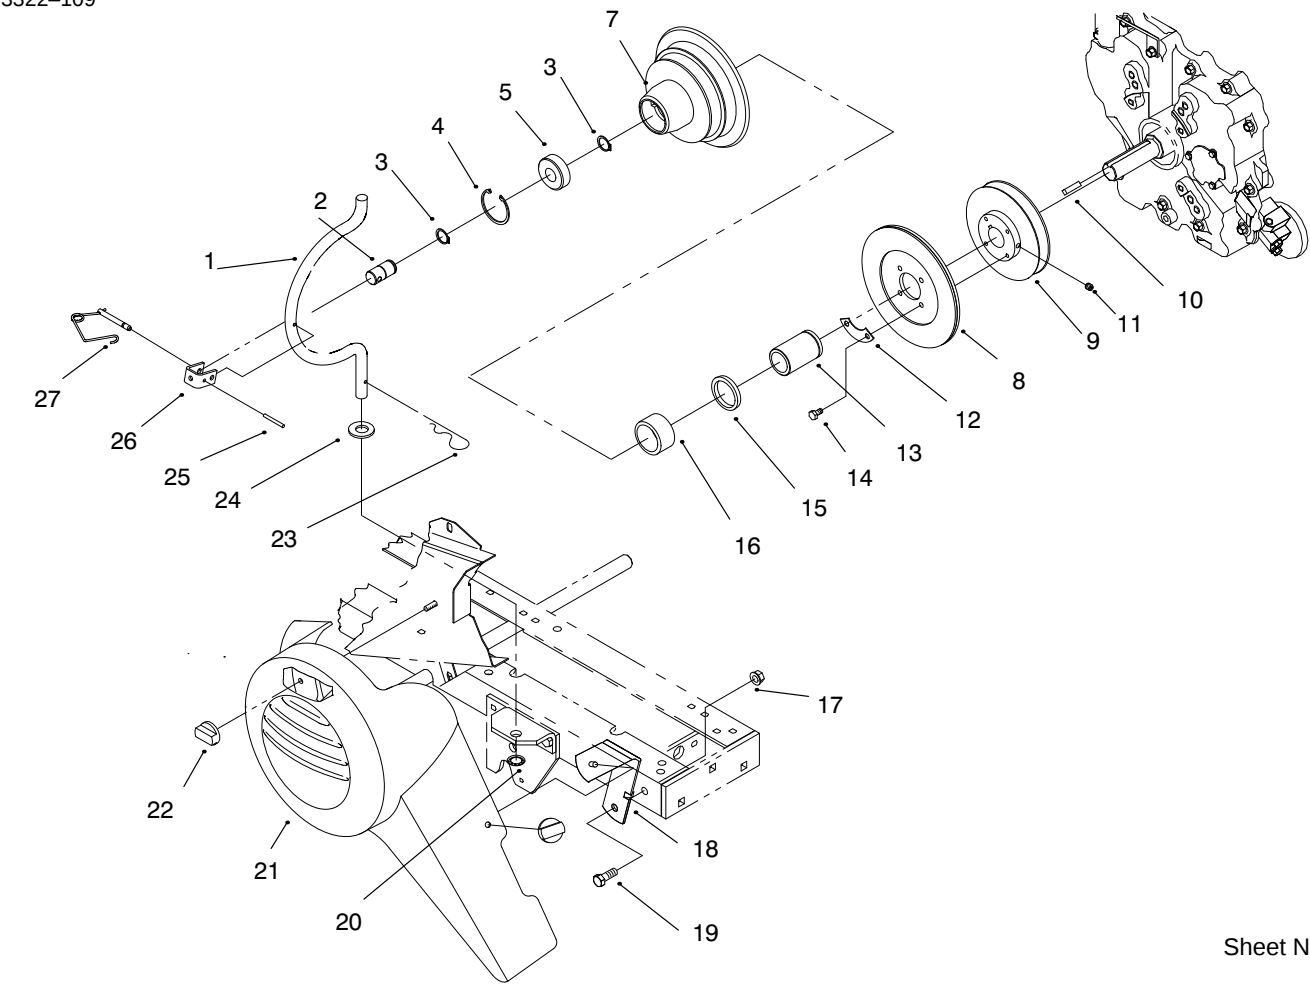

Sheet No.:11

PTO Clutch & Cover Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	113108	1	Rod-Housing				
2	102872	1	PTO Shaft				
3	32120-72	2	Ex Snap Ring				
4	32120-62	1	In Snp Ring				
5	109842	1	Bearing Ball				
7	103478-01	1	Housing-Clutch				
8	94-6650	1	Ass'y-Clutch Plate				
9	7466	1	Pulley				
10	105453	1	Key				
11	3246-2	2	Hx So Ss				
12	6659	2	Retainer				
13	6658	1	Bearing Race				
14	9080026	4	Hhcs				
15	6663	1	Oil Seal				
16	6662	1	Needle Bearing				
17	32128-40	1	Flange Nut				
18	94-3726-03	1	Brkt Wa-Belt Cover				
19	323-6	1	Screw-HH				
20	106695	1	Ring Reinforced Circ				
21	94-3704	1	Guard - Belt				
22	94-3735	2	Nut - Wing				
23	9335064	1	Hair Pin Cotter				
24	3256-27	1	Washer-Flat				
25	933274	1	Pin				
26	113107	1	Clevis				
27	111314	1	Assy Pin Locking				

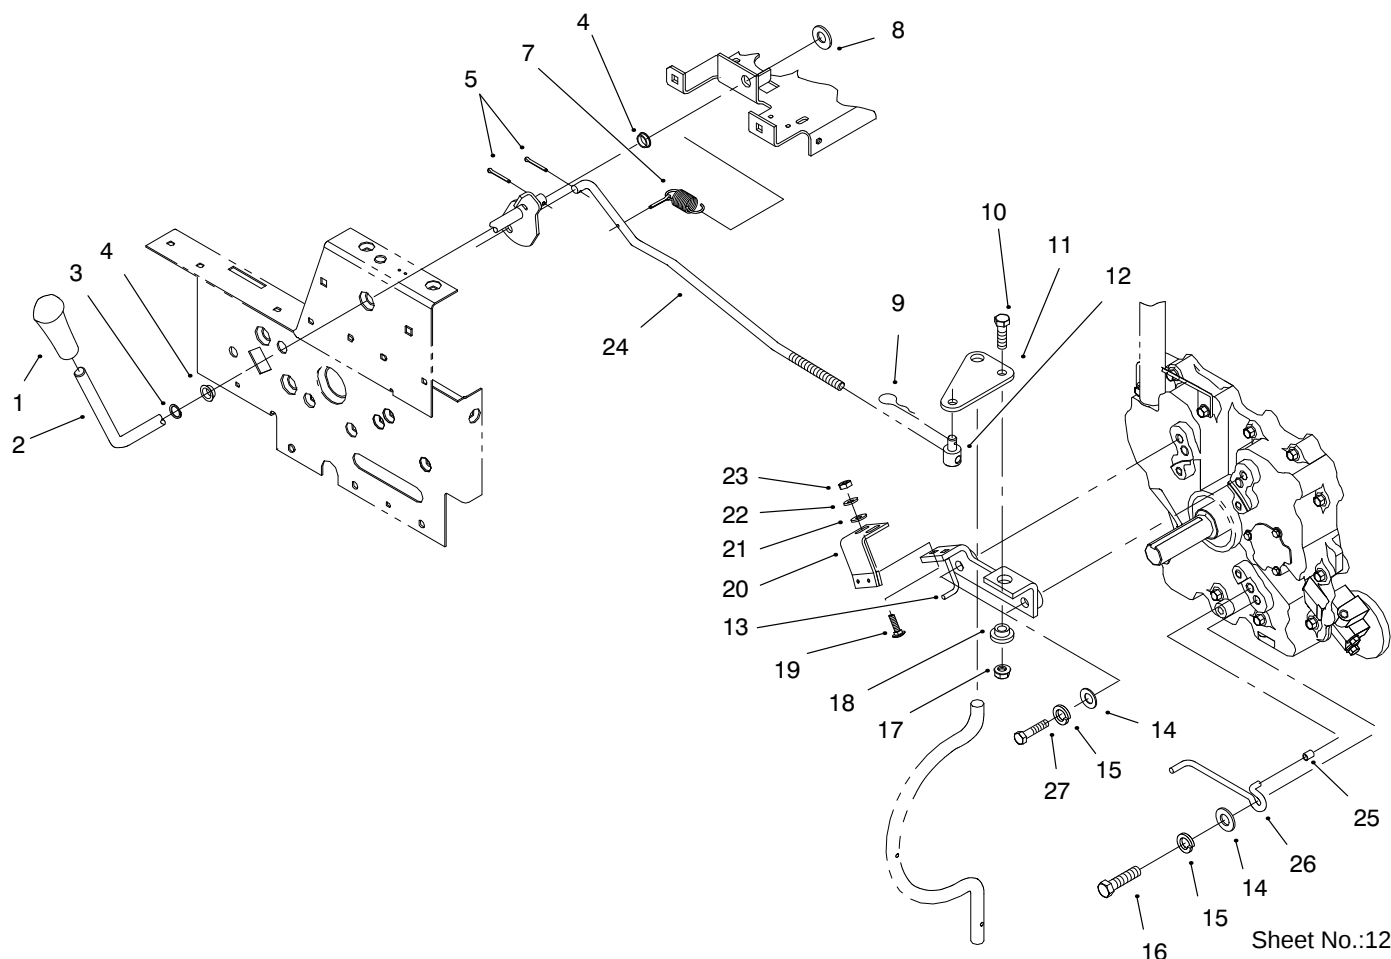


Sheet No.:12

PTO Clutch System & Belt Guide Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3727	1	Knob
2	94-3701	1	ASM – PTO Clutch Lever
3	32151-11	1	Ex Grip Ring
4	5666	2	Bushing-Nyliner
5	3272-10	3	Pin-Cotter
7	103125	1	Spring
8	3765	1	Washer Shim
9	9335054	1	Pin-Hair Cotter
10	323-6	1	Screw-HH
11	110669	1	Plate
12	110656	1	Trunnion
13	98-1742-03	1	Wa-Brkt,Engine
14	3256-25	3	Washer-Flat
15	3253-6	3	Washer-Lock/Sp
16	324-5	1	Screw-HH
17	3296-59	1	Nut-Lock Ni
18	104859	1	Spacer-Lift Link
19	3229-1	2	Screw-CARR
20	94-6652	1	Assy Brake
21	3256-22	2	Washer-Flat
22	3253-3	2	Washer-Lock/Sp
23	3218-1	2	Nut-Jam
24	111052	1	Rod PTO Clutch
25	112841	1	Cap#.234-5 Trim


Ref. No.	Part No.	Qty.	Description
26	98-1700	1	Wire – Guide, Belt
27	324-7	2	Screw-HH

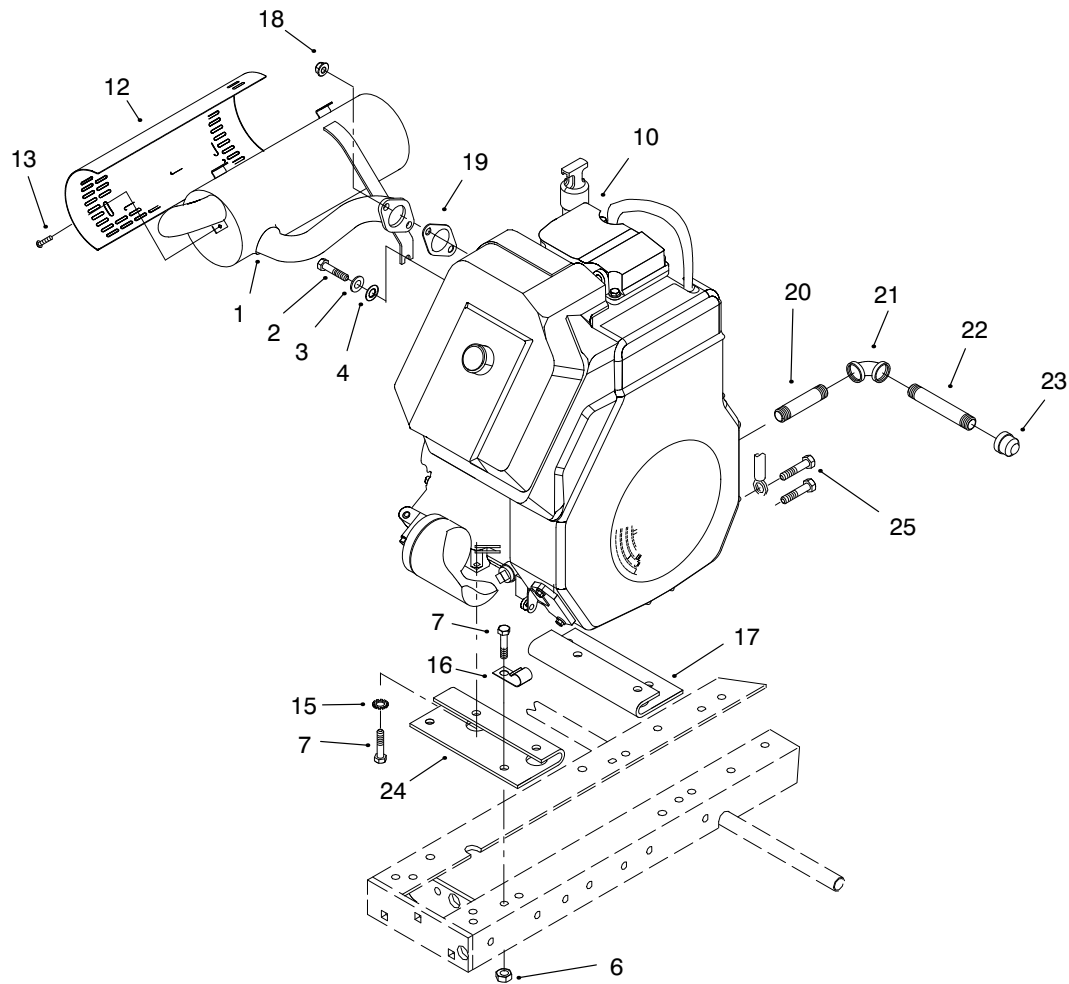

Sheet No.:13

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7662	1	Muffler				
2	24 086 45	1	Screw-HHF				
3	3253-4	1	Washer-Lock/Sp				
4	3256-23	1	Washer-Flat				
6	3296-39	4	Nut-Lock Ni				
7	323-6	8	Screw-HH				
10	95-7681	1	Engine – 14 HP, Kohler (Only On: 73449)				
10	95-7680	1	Engine – 12 HP, Kohler (Only On: 73429)				
12	94-3738	1	Shield – Heat				
13	9103312	4	Screw				
15	3255-9	4	Washer-Lock/Ext				
16	8830	1	Clip				
17	98-1730-03	1	Brkt-Eng Mtg, Rear				
18	92-6780	2	Nut-Hex Flange				
19	92-6716	1	Gasket-Exh.single F/W				
20	289-51	1	Nipple				
21	2811-16	1	Elbow-90 Degree				
22	289-45	1	Pipe Nipple				
23	288-4	1	Pipe Cap				
24	98-1731-03	1	Brkt-Eng Mtg, Front				
25	M-0839070	2	Screw-HHF				

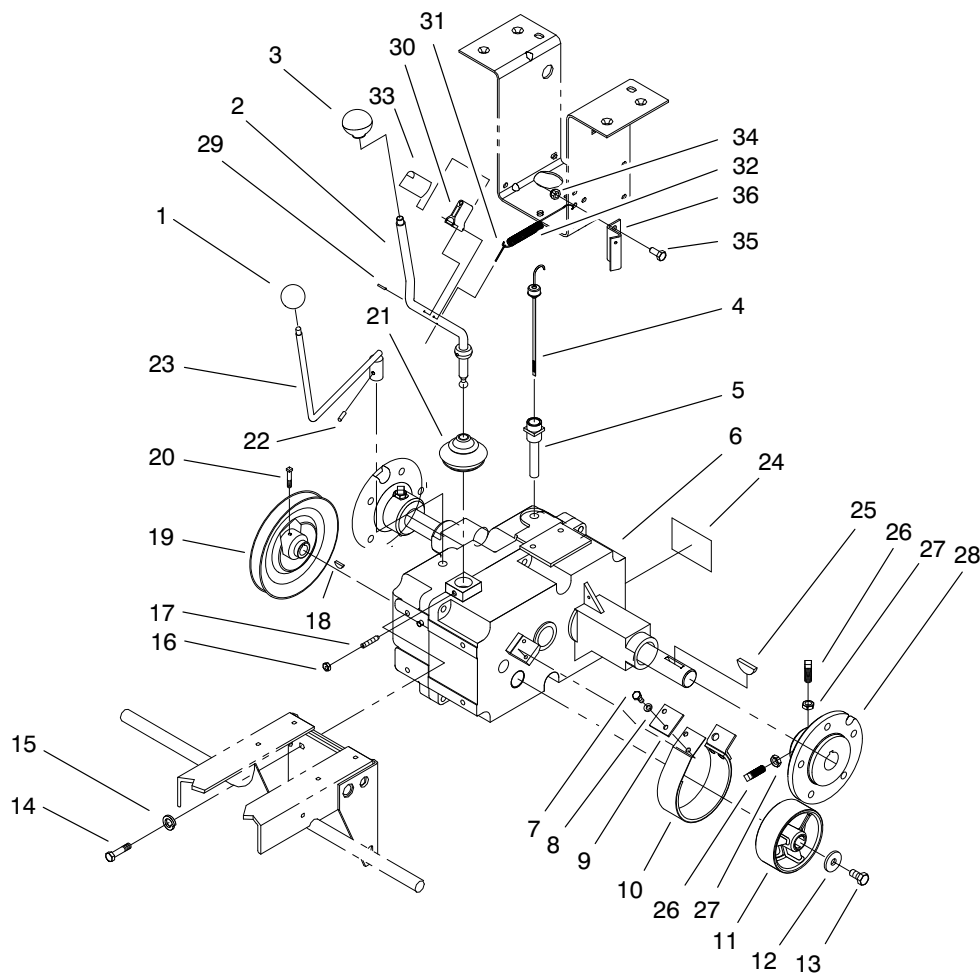


Sheet No.:14

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	83-2710	1	Knob
2	95-7684	1	ASM – Rod, Shift
3	108758	1	Knob
4	101847-03	1	Dipstick
5	102703	1	Trans Nipple
6	94-6670	1	Transmission ASM 8 Spd 4 (Only On: 73429)
6	94-6671	1	Transmission ASM 8 Spd 8 (Only On: 73449)
7	321-3	2	Screw-HH
8	3253-3	2	Washer-Lock/Sp
9	94-6696-03	1	Plate Brake
10	9593	1	Brake Band Assy
11	106719	1	Brake Drum
12	2844	1	Washer
13	110234	1	Hhcs
14	323-5	4	Screw-HH
15	3253-21	4	Washer-Lock/Sp
16	3217-5	1	Nut-Hex
17	1239	1	Set Screw
18	937221	1	Hi Pro Key
19	106165	1	Pulley Trans
20	3242-2	1	Sq Hd Ss
21	3577	1	Dust Cover

Ref. No.	Part No.	Qty.	Description
22	933184	1	Pinspirol
23	110727	1	Rod – Shift Wa
24	94-1834	1	Decal – Unidrive
25	937108	2	Woodruff Key
26	3243-5	4	Screw-Set
27	3218-3	4	Nut-Jam
28	105763-03	2	Hub-Whl
29	32121-97	2	Pin
30	95-7683	1	ASM – Clip, Magnet
31	3272-6	1	Pin-Cotter
32	110769	1	Spring Extension
33	98-1748	1	Shield – Magnet
34	3296-29	2	Nut-Lock Ni
35	322-3	2	Screw-HH
36	99-8029-03	1	Bracket-Spring

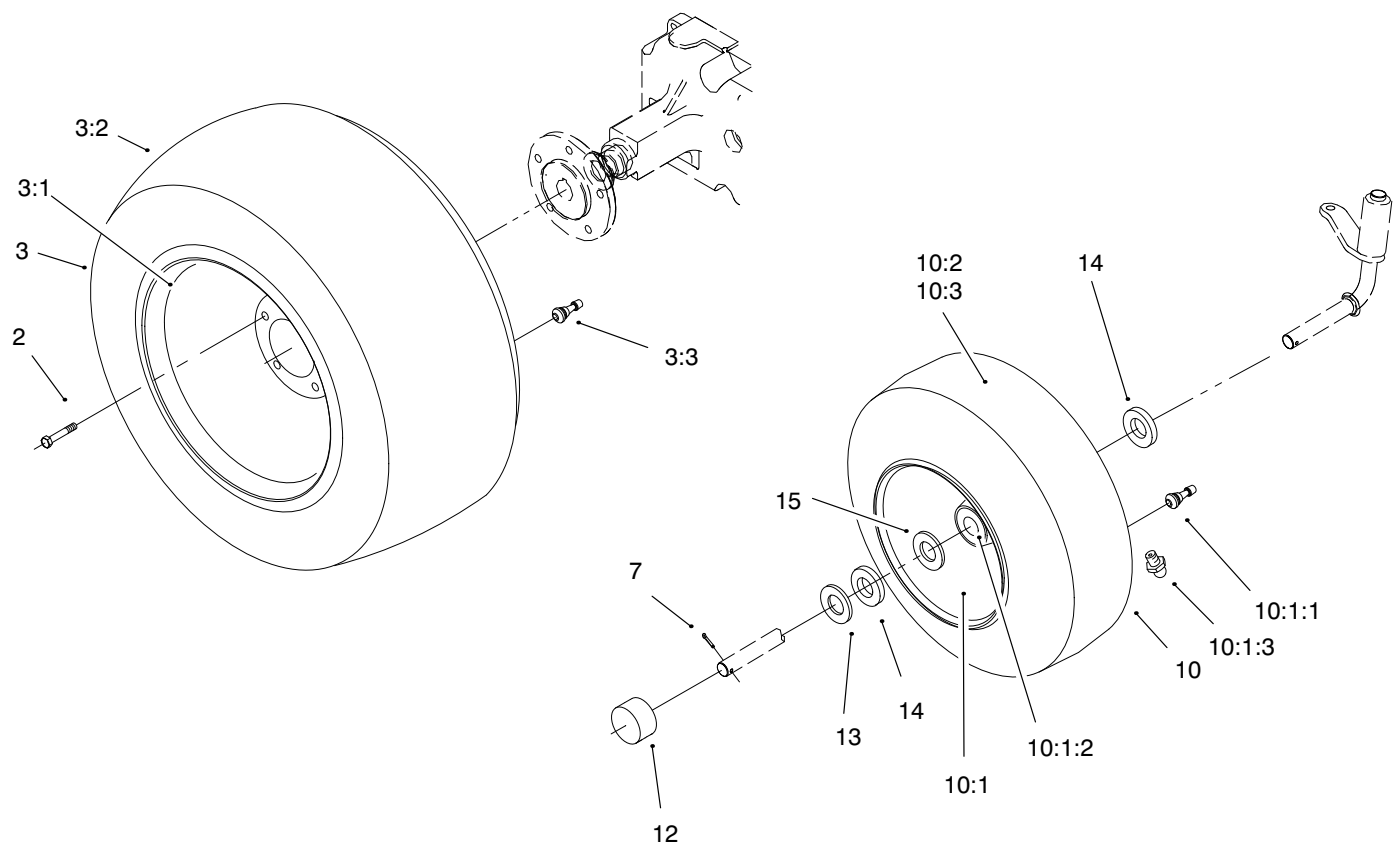


Sheet No.:15

Wheels Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	83-2720	10	Lug-Bolt	10:1:3	109500	1	Zerk-Grease (Only On: 73449)
3		2	Ass'y-Tire 23x9.50-12 (Only On: 73449)	10:2	116884	1	Tire-15 X 6.00-6 (Only On: 73429)
3		2	Ass'y-Tire 23x850-12 (Only On: 73429)	10:3	117127	1	Tire (Only On: 73449)
3:1	111516	1	Wheel	12	61-9780	2	Cap-Hub
3:2	116744	1	Tire-23 X 950-12 (Only On: 73449)	13	28-2480	2	Washer
3:2	116742	1	Tire-23x8.50-12 2ply (Only On: 73429)	14	1278	4	Washer
3:3	5108	1	Valve-Tubeless Tire	15	5210	2	Shim Washer
7	3272-17	2	5/32 X 1-1/4 Cotter				
*10		2	Wheel ASM-Front-Toro (Only On: 73449)				
*10		2	Ass'y Tire 15x600-6 (Only On: 73429)				
10:1	93-9801	1	ASM - Wheel w/Zerk (Only On: 73449)				
10:1	117285	1	Ass'y-Wheel (Only On: 73429)				
10:1:1	5108	1	Valve-Tubeless Tire (Only On: 73449)				
10:1:2	110513	2	Bearing Wheel (Only On: 73449)				

* Not Illustrated

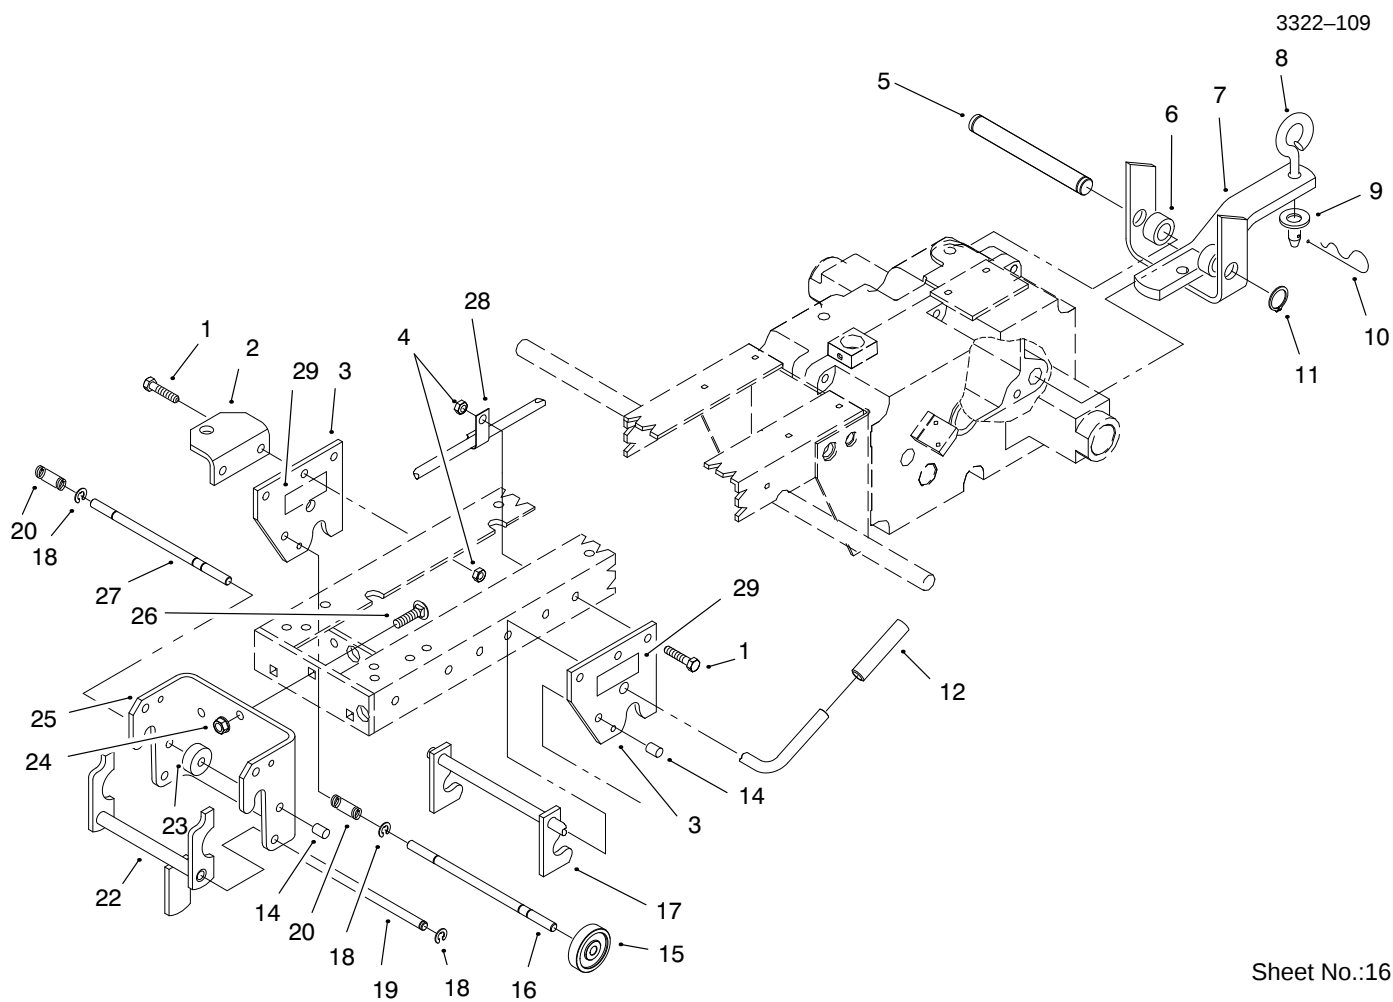


Sheet No.:16

Hitch Assembly

Ref. No.	Part No.	Qty.	Description
1	323-44	6	Screw-HH
2	102870-01	1	Support
3	102644-01	2	Hitch Plate
4	108881	6	Nut-Differential
5	105269	1	Pin-Stationary Hitch
6	9791204	2	Spacer
7	98-8083-01	1	Hitch Wa
8	106634	1	Pin-Tool
9	3256-26	1	Washer-Flat
10	9335054	1	Pin-Hair Cotter
11	5618	2	E-Ring
12	9038	1	Grip
14	105316	2	Cap-Plunger Rod
15	101017	1	Lock
16	83-6520	1	Rod-Lock
17	117930	1	Wldmt-Mid Hitch
18	105797	8	E-Ring 3/8 Shaft
19	101750	1	Rod Latch Pivot
20	8616	2	Spring
22	93-1613	1	Assy-Latch Wa
23	101707	1	Lock
24	3296-39	3	Nut-Lock Ni
25	101711-01	1	Front Hitch (Red)
26	3231-25	3	Screw-CARR
27	101751	1	Rod Lock
28	8830	1	Clip

Ref. No.	Part No.	Qty.	Description
29	92-8747	2	Decal Attach-A-Matic

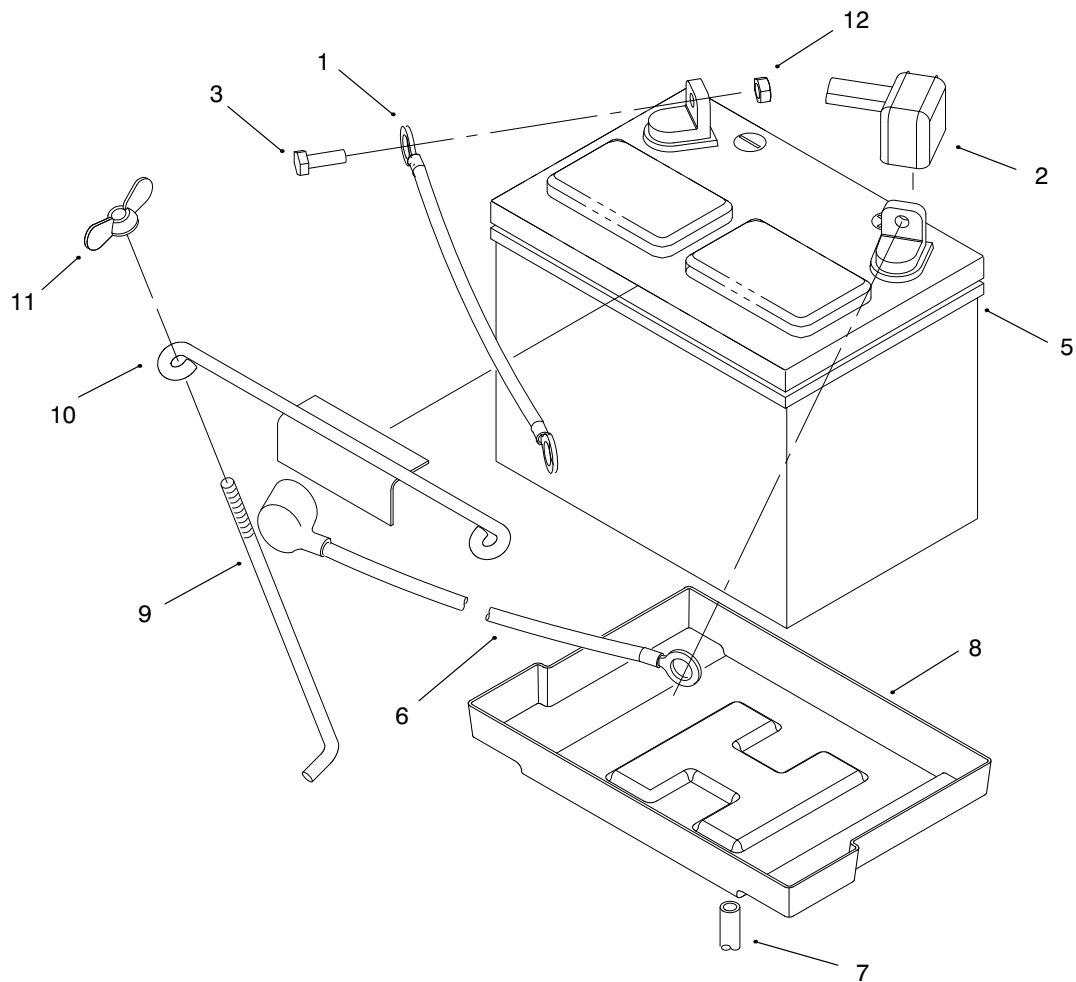


Sheet No.:17

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7654	1	Cable
2	28-8080	1	Boot-Terminal
3	321-4	2	Screw-HH
5	104962	1	Battery (Dry)
5	94-1865	1	Battery (Dry)
6	95-7655	1	Cable
7	114720	1	Tube-21"
8	106948	1	Tray-Battery
9	113969	2	Hook-Battery Retain
10	113010	1	Batt Hold Down
11	32103-22	2	Nut-Wing
12	3296-42	2	Nut-Lock Ni


Ref. No.	Part No.	Qty.	Description

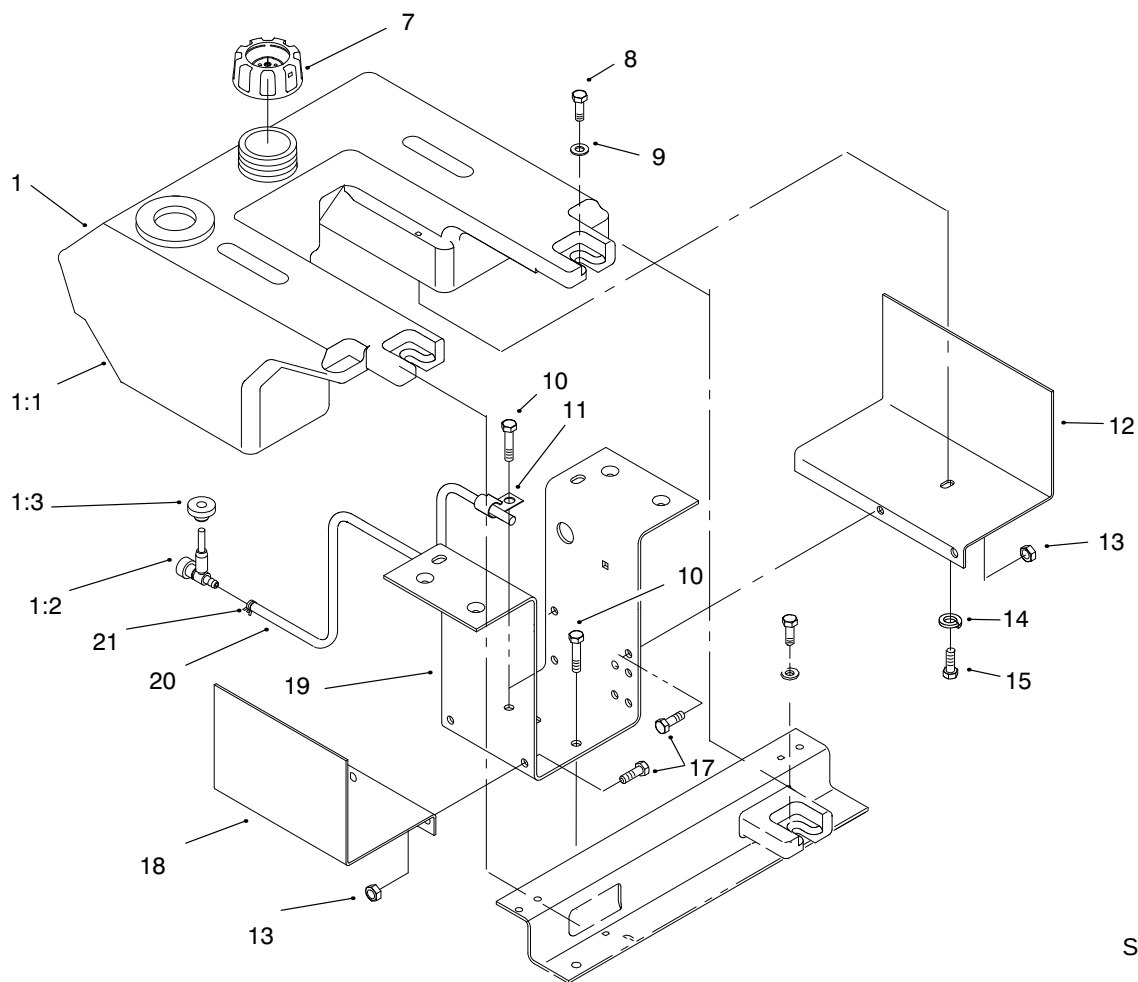

Sheet No.:18

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	106234	1	Fuel Tank
1:1	106235	1	Tank–Fuel
1:2	104048	1	Valve–Fuel
1:3	104047	1	Bushing Sm
7	55–3570	1	Gas Cap Assembly
8	9266974	2	Thr–Forming
9	3256–4	2	Washer–Flat
10	3235–22	2	Screw–HH
11	8830	1	Clip
12	94–6693–03	1	Brket–Suport
13	3296–29	4	Nut–Lock Ni
14	3253–4	2	Washer–Lock/Sp
15	322–2	2	Screw–HH
17	322–3	4	Screw–HH
18	94–6692–03	1	Bracket–Suport
19	79–4990–03	1	Suport–Fender
20	92–9514	1	Fuel Line–39"
21	2412–98	2	Clamp

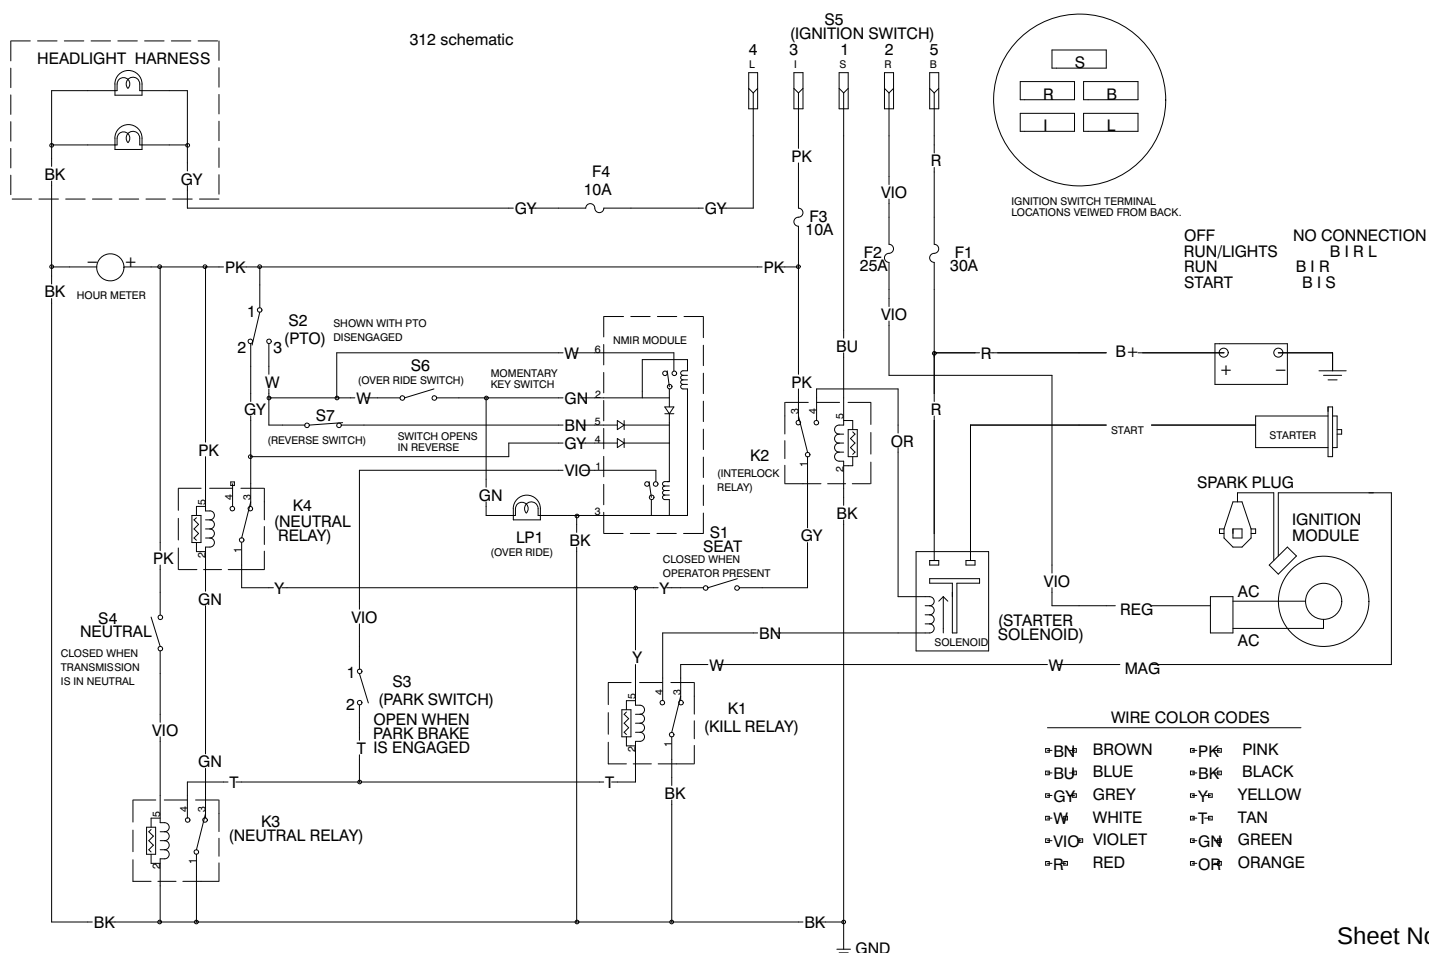


Sheet No.:

Electrical Schematic (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
F1	Nn10277	1	Fuse—30 Amp
F2	109102	1	Fuse—25 Amp
F3 & F4	114594	2	Fuse—10 Amp

Ref. No.	Part No.	Qty.	Description

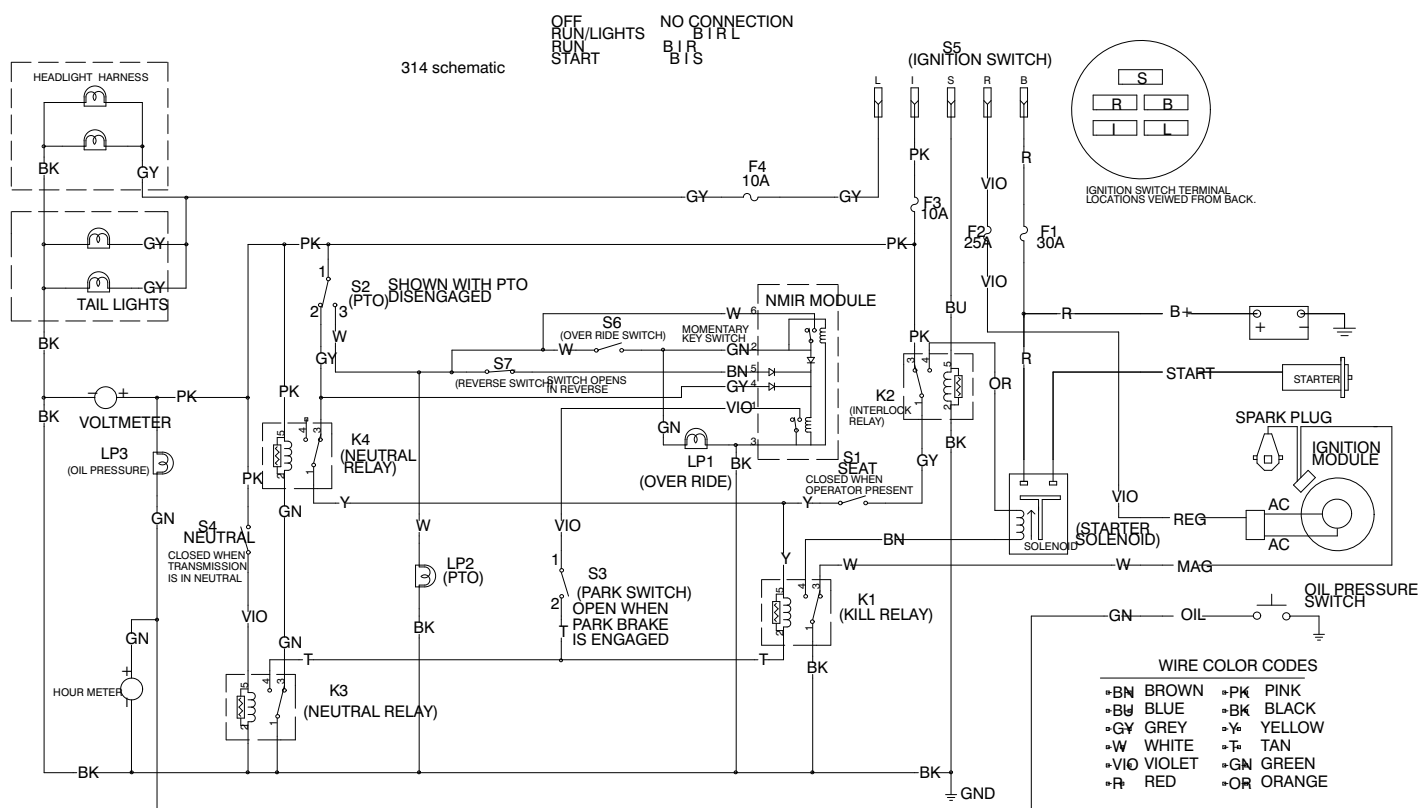


Sheet No.:

Electrical Schematic (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
F1	Nn10277	1	Fuse—30 Amp
F2	109102	1	Fuse—25 Amp
F3 & F4	114594	2	Fuse—10 Amp

Ref. No.	Part No.	Qty.	Description

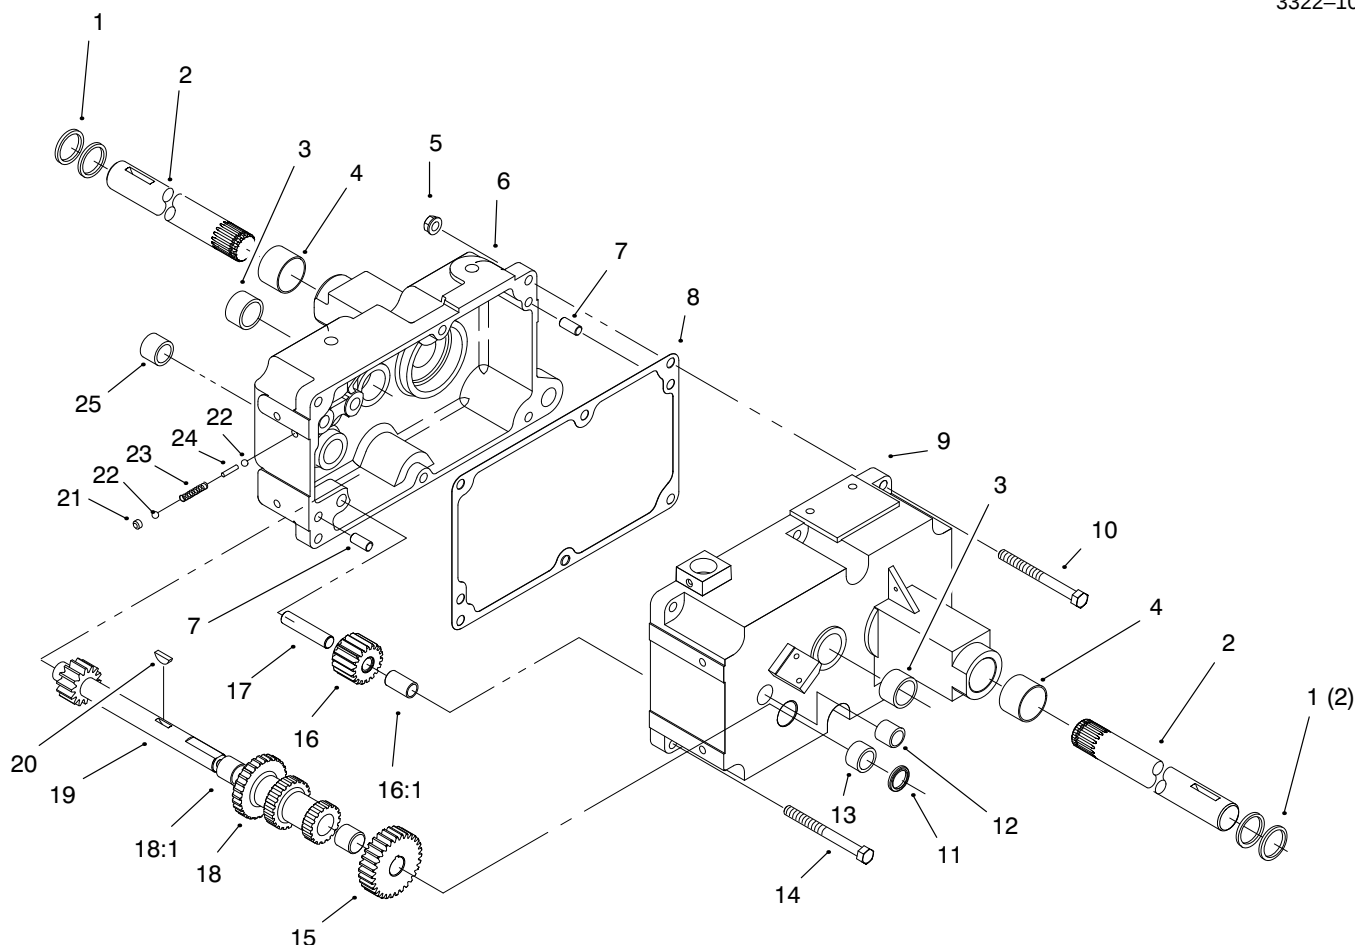


Sheet No.: 101

Transmission 8-Speed 4 Pinion (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	100443	4	Seal—Oil
2	105875	2	Axle—Rear
3	1532	2	Bearing—Needle
4	9416	1	Bearing—Needle
5	3296—39	6	Nut—Lock
6	111200—01	1	Case—Trans
7	3915	2	Pin—Dowel
8	3912	1	Gasket—Transmission
9	95—5143—01	1	Case—Trans
10	323—16	1	Screw—HH
11	100441	1	Seal—Oil
12	83—2890	1	Bearing—Needle
13	1523	1	Bearing—Needle
14	323—11	5	Screw
15	3527	1	Gear—Cluster
16	4204	1	Gear—Idler
17	3909	1	Pin
18	7269	1	Gear Cluster ASM
18:1	1504	2	Bushing
19	83—3530	1	Shaft—Cluster
20	937089	1	Key—Woodruff
21	1243	1	Plug—Cup
22	3517	2	Ball—Detent
23	106030	1	Spring—Stop
24	5614	1	Pin—Shift
25	1529	1	Bearing—Needle

Ref. No.	Part No.	Qty.	Description

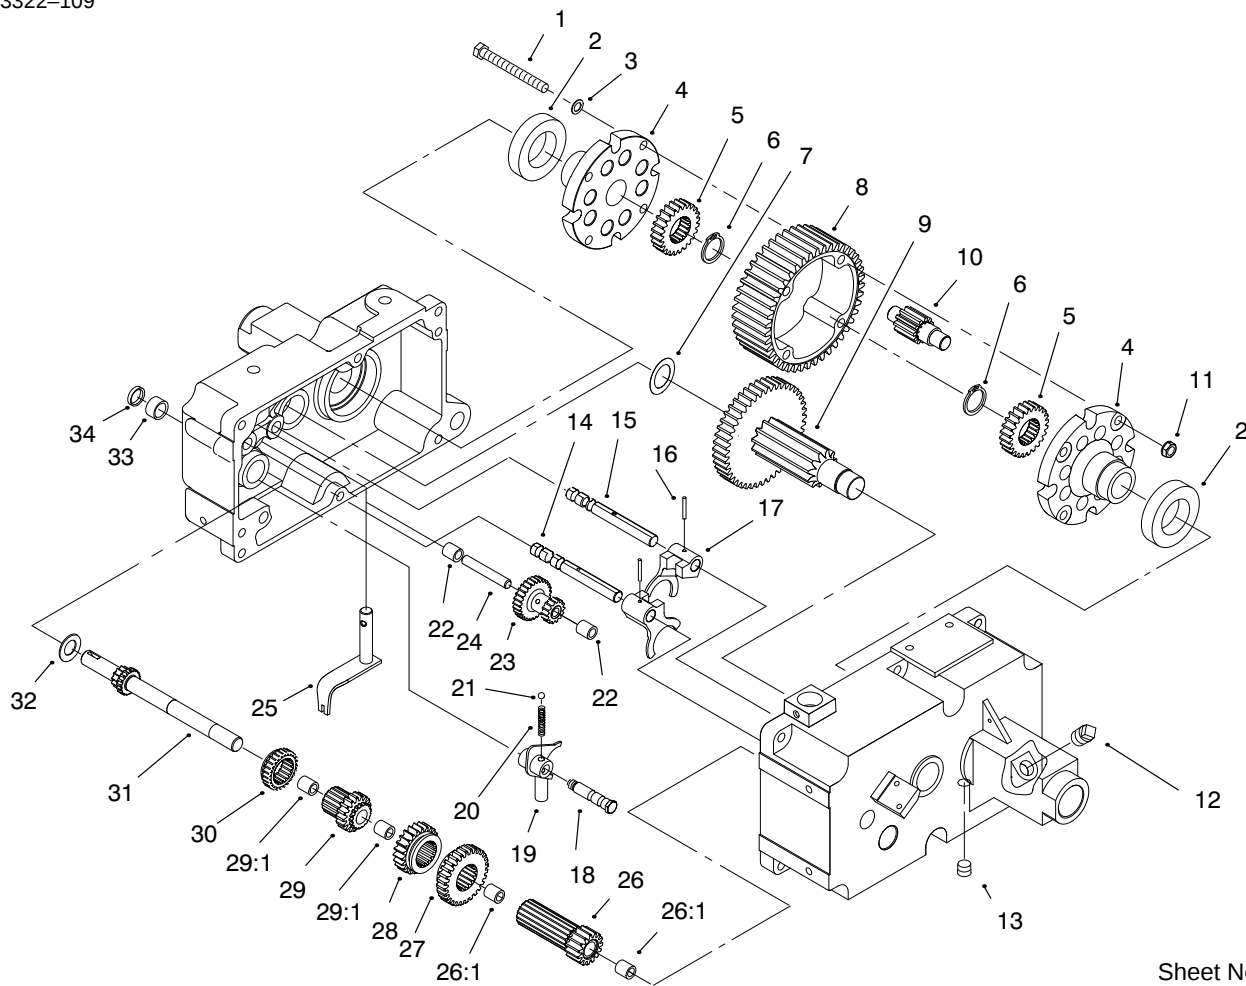


Sheet No.: 102

Transmission 8-Speed 4 Pinion (cont.) (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	911423	4	Screw-HH
2	111199	2	Bearing-Ball
3	107374	4	Washer-Flat
4	111196	2	Cap-End
5	101889	2	Gear-Axle
6	105876	2	Ring-Retaining
7	9547	1	Washer-Thrust
8	105061	1	Gear-Differential
9	102974	1	Gear-ASM
10	101623	4	Gear-Pinion
11	108881	1	Nut-Hex
12	281-2	1	Plug-Pipe
13	281-10	1	Plug-Pipe
14	5615	1	Rail-Shift
15	5616	1	Rail-Shift
16	933156	2	Pin-Spirol
17	3503	2	Fork-Shift
18	7213	1	Screw-Detent
19	116636	1	Fork ASM
20	106030	1	Spring-Stop
21	3517	1	Ball-Detent
22	7207	1	Bearing-Needle
23	7206	1	Gear-Reduction
24	7208	1	Shaft-Gear
25	7214	1	Lever-Shift
26	111099	1	Gear

Ref. No.	Part No.	Qty.	Description
26	5175	1	Gear ASM
26:1	1518	2	Bearing-Needle
27	5174	1	Gear-Low And Reverse
29	111096	1	Gear
29	7204	1	Gear ASM
29:1	1518	2	Bearing-Needle
30	7205	1	Gear-Sliding
31	7201	1	Shaft-Input
32	7418	1	Washer-Thrust
33	1542	1	Bearing-Needle
34	100442	1	Seal-Oil

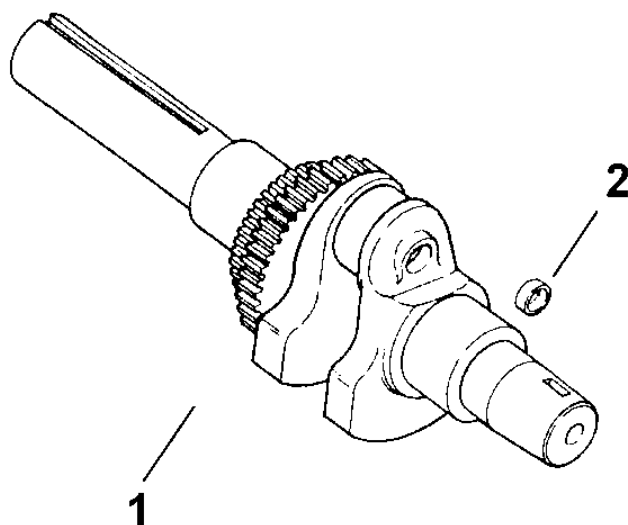


Crankshaft (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	12 014 48	2	Crankshaft (Incl. # 2)
2	12 139 01	2	Plug, cup

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH12.5PS-1935 Obtain Parts From Kohler

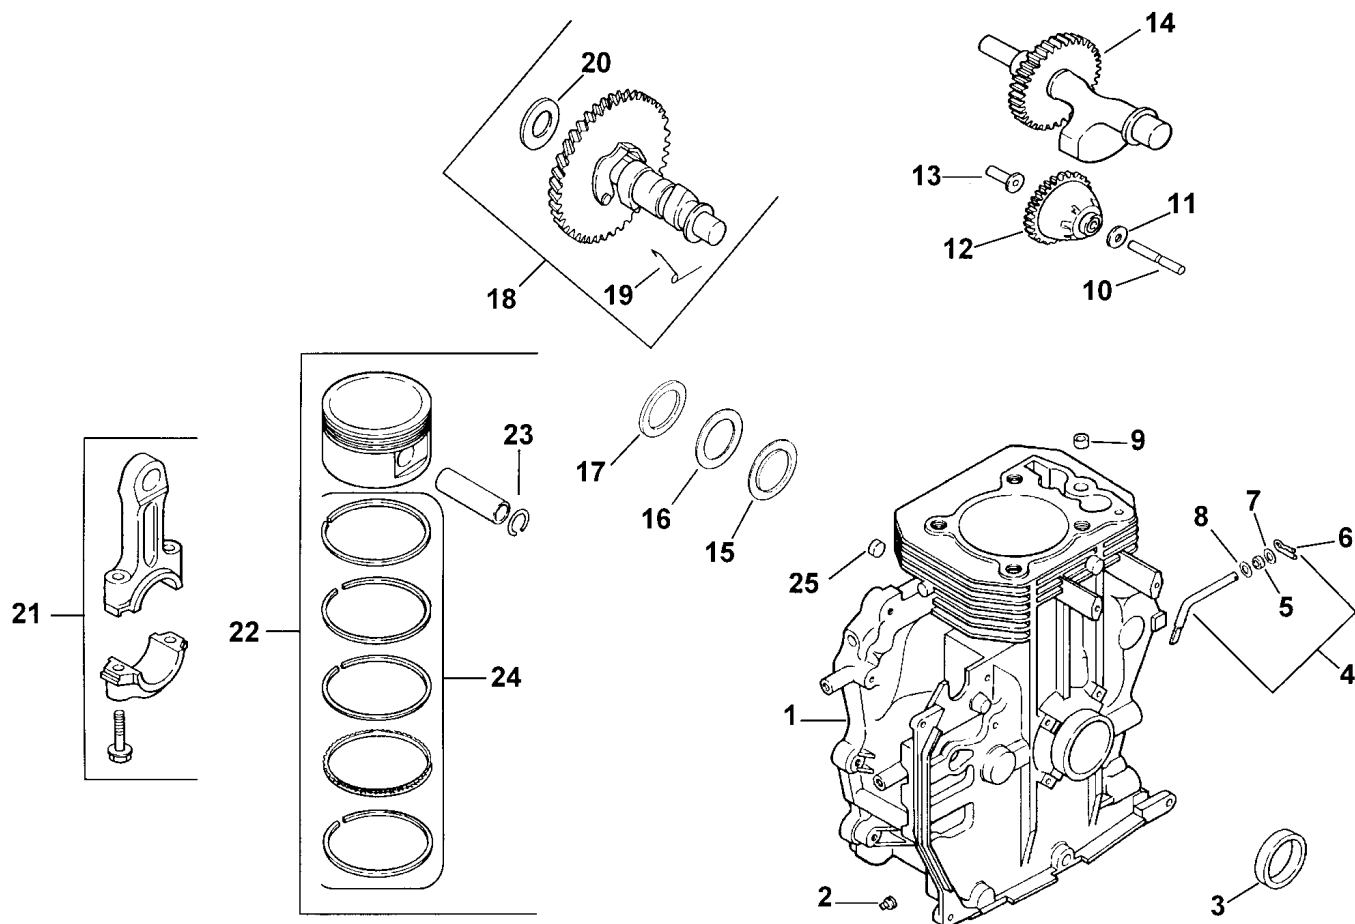


Crankcase (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1		1	Short Block
2	X-75-10	2	Plug, solid sq. hd. 3/8
3	12 032 03		Seal, crankshaft
4	12 755 64	6	Kit, governor cross shaft (Includes # 6)
5	12 032 01		Seal, governor cross shaft
6	12 154 05		Clip, hitch pin
7	X-25-102		Washer, plain 1/4
8	M-0631015		Washer, plain 6 mm
9	12 380 17	4	Dowel, locating
10	12 144 02		Shaft, governor gear
11	M-0631005		Washer, plain 6 mm
12	12 043 05		Gear, governor
13	12 380 01		Pin, governor regulating
14	12 144 26		Shaft, balance
15	24 030 08		Bearing, thrust
16	52 114 04		Washer, thrust
17	24 422 04		Shim, thrust
18	12 755 50		Kit, camshaft (Includes
19	12 089 31		Spring, actuating
20	12 422 08		Shim, camshaft (A.R.) blue

Ref. No.	Part No.	Qty.	Description
	12 422 09		Shim, camshaft (A.R.) red
	12 422 10		Shim, camshaft (A.R.) yellow
	12 422 11		Shim, camshaft (A.R.) green
	12 422 12		Shim, camshaft (A.R.) gray
	12 422 13		Shim, camshaft (A.R.) black
	12 422 07		Shim, camshaft (A.R.) white
21	12 067 05	1	Connecting Rod (Std.)
	12 067 06		Connecting Rod (.25)
22	12 874 01		Piston w/Ring Set (Std.) (Includes 23,24)
	12 874 02		Piston w/Ring Set (.25)
	12 874 03		Piston w/Ring Set (.50)
23	12 018 02		Retainer, piston pin
24	12 108 01		Ring Set (Std.)
	12 108 02		Ring Set (.25)
	12 108 03		Ring Set (.50)
25	52 139 09		Plug, cup


Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

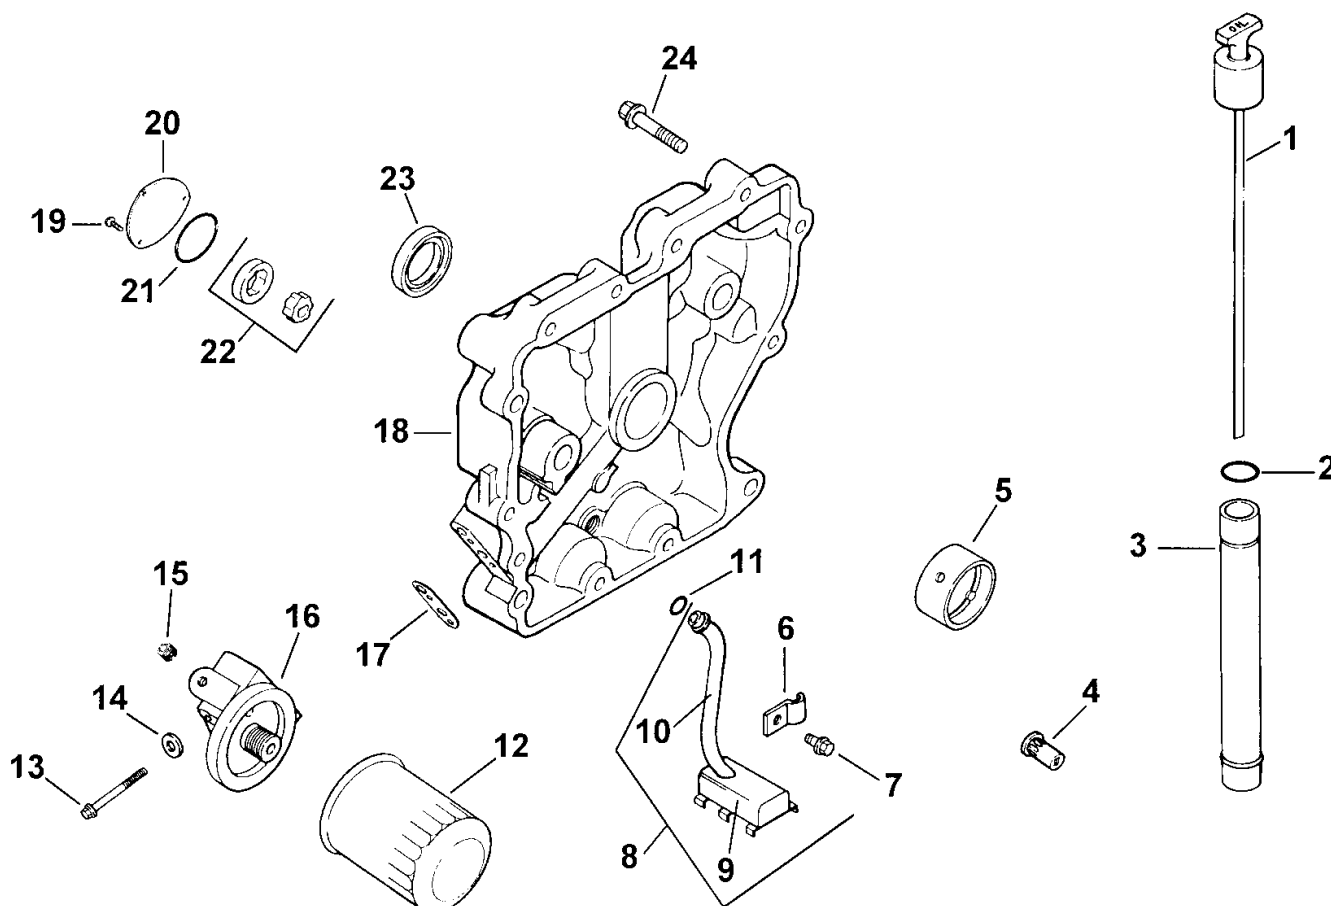

Oil Pan / Lubrication (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	47 038 26		Dipstick	20	12 096 21		Cover, oil pump
2	41 153 01		O-Ring, oil fill tube	21	12 153 05		O-Ring, oil pump cover
3	24 123 11		Tube, oil fill	22	12 393 01		Pump, oil
4	25 462 09		Valve, oil pressure relief	23	12 032 03		Seal, oil (P.T.O. end)
5	12 030 05		Bearing, crankshaft	24	24 086 16	11	Screw, hex. flange M8x1.25x45
6	52 154 01		Clip	24	24 086 17		Screw, hex. flange M8x1.25x45
7	M-0545016		Screw ,hex.flange M5x0.8x16				
8	12 755 73		Kit, oil pick-up (Includes 9,10)				
9	25 381 01		Pick-up, oil screen				
10	12 123 21		Tubing, oil pick-up				
11	12 153 04		O-Ring, oil pick-up				
12	52 050 02		Filter, oil				
13	M-0651060	2	Screw, hex. flange M6x1.0x60				
14	X-25-12	2	Washer, plain 1/4				
15	X-75-23		Plug, allen hd. 1/8" pip				
16	12 029 01		Adapter, oil filter				
17	12 041 07		Gasket, oil filter adapter				
18	1200936		Plate, closure Asm (Includes 4,5,19-22)				
19	M-0545016	3	Screw, hex. flange M5x0.8x16				

Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

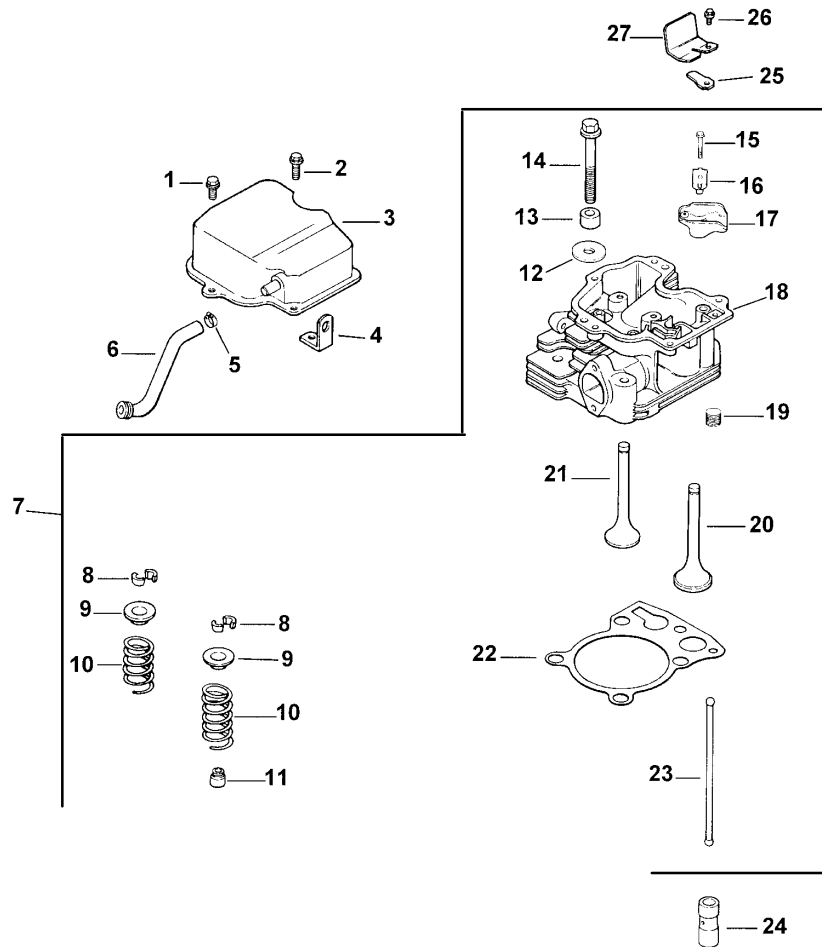


Cylinder Head / Valve & Breather (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0645020	4	Screw, hex. flange M6x1.0x20
2	M-0645025		Screw, hex. flange M6x1.0x25
3	12 096 07		Cover, valve w/nipple
4	12 445 05		Strap, lifting (PTO side)
5	X-426-9		Clamp, hose
6	12 326 09		Hose, breather
7	12 041 01		Kit, cylinder head (Includes 8-23,
	12 041 02	2	carburetor gasket , air cleaner, base
	12 041 03		gasket, & exhaust manifold
	12 755 81		gasket)
8	12 755 03	2	Kit, retainer
9	12 173 01	2	Cap, valve spring
10	12 089 01	2	Spring, valve
11	24 032 05	2	Seal, valve stem
12	12 468 05		Washer, plain 13/32
13	12 112 13		Spacer, head bolt exhaust port
14	12 086 15	5	Screw, hex. flange M10x1.5x81
15	M-0640034	2	Screw, hex. flange M6x1.0x34

Ref. No.	Part No.	Qty.	Description
16	12 599 03	2	Pivot, rocker arm
17	25 186 01	2	Arm, rocker
18	12 318 19		Head, cylinder
19	X-75-23		Plug, allen hd. 1/8 pipe
20	12 017 01		Valve, intake (Std.)
21	12 016 01		Valve, exhaust (Std.)
22	12 041 08		Gasket, cylinder head
23	12 411 01	2	Rod, push
24	12 351 02	2	Lifter, valve
25	12 402 02		Reed, breather
26	M-0545010		Screw, hex. flange M5x0.8x10
27	12 018 03		Retainer, breather reed
	12 017 02		Valve, intake (.25)
	12 016 02		Valve, exhaust (.25)


Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

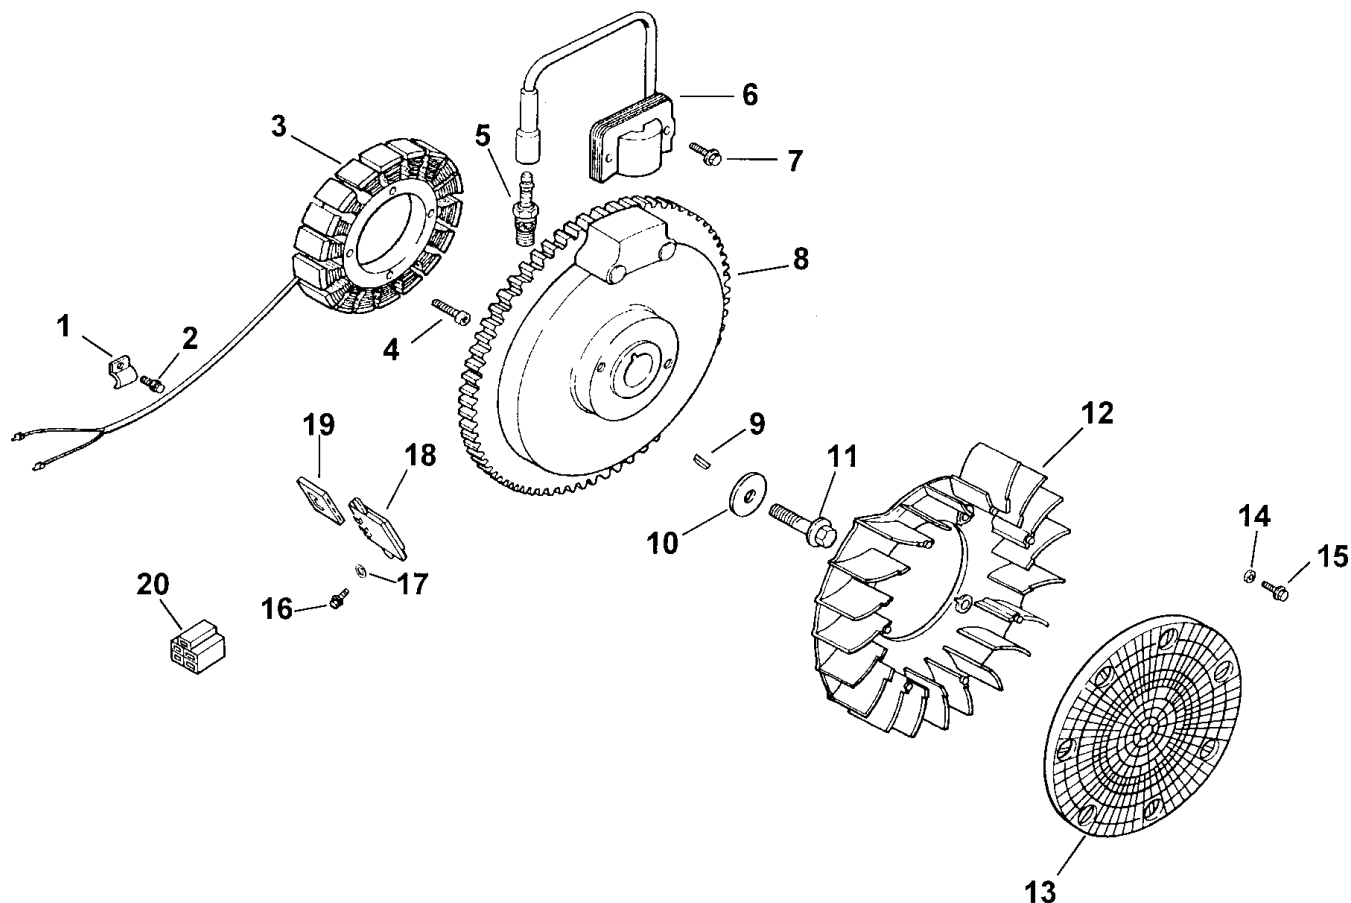

Ignition / Electrical (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	X-728-1	2	Clip	19	236602		Connector
2	M-0545010	2	Screw, hex. flange M5x0.8x10	20	48 155 01		Connector
3	24 126 71		Kit, 15 amp stator (Includes Bracket).		25 518 29		NOT ILLUSTRATED Lead, black (6" – 18 gauge – insulated grip barrel eyelet terminals)
4	54 755 09		Screw, hex. cap M5x0.8x25		12 518 01		Lead, white, ground to kill (19" – 18 gauge – insulated push on tab, uninsulated push on tab terminals)
5	12 132 02		Spark Plug		25 518 05		Lead, black, rectifier-regulator (5" – 14 gauge – uninsulated push on tab terminals)
6	12 584 04		Module, ignition		24 126 71		Bracket, stator wire
7	M-0545020	2	Screw, hex. flange M5x0.8x20				
8	12 025 15		Flywheel				
9	X-42-15		Key				
10	12 468 03		Washer, plain 3/8				
11	12 086 14		Screw, hex. flange M10x1.5x46				
12	12 157 03		Fan				
13	24 162 03		Screen, grass				
14	12 112 01	4	Spacer, fan				
15	M-0639016	4	Screw, hex. flange M6x1.0x16				
16	M-0639016	2	Screw, hex. flange M6x1.0x16				
17	X-22-11		Washer, lock 1/4"				
18	41 403 09		Rectifier-regulator				


Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

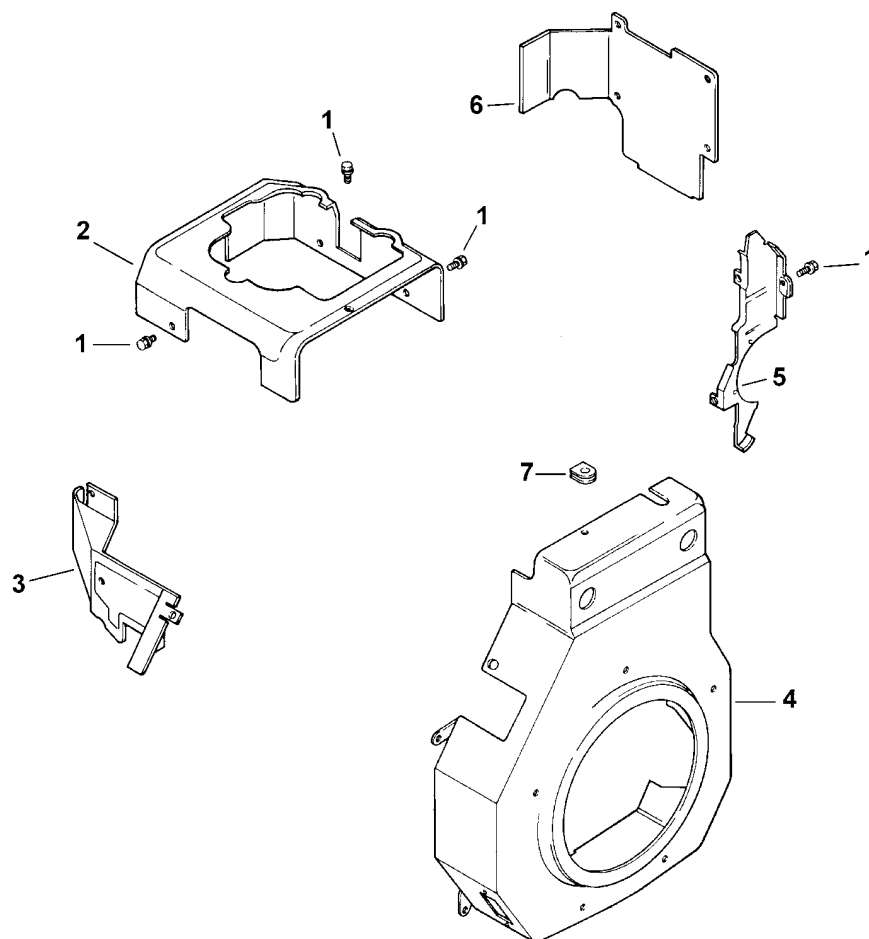

Blower Housing & Baffles (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0545010	14	Screw, hex. flange M5x0.8x10
2	12 063 08		Baffle, cylinder head
3	12 063 05		Baffle, intake side
4	12 027 39		Housing, blower
5	12 146 07		Plate, blower housing
6	12 063 01		Baffle, cylinder barrel
7	12 313 03		Grommet, blower housing Not Illustrated
	12 113 30		Decal, HP

Ref. No.	Part No.	Qty.	Description

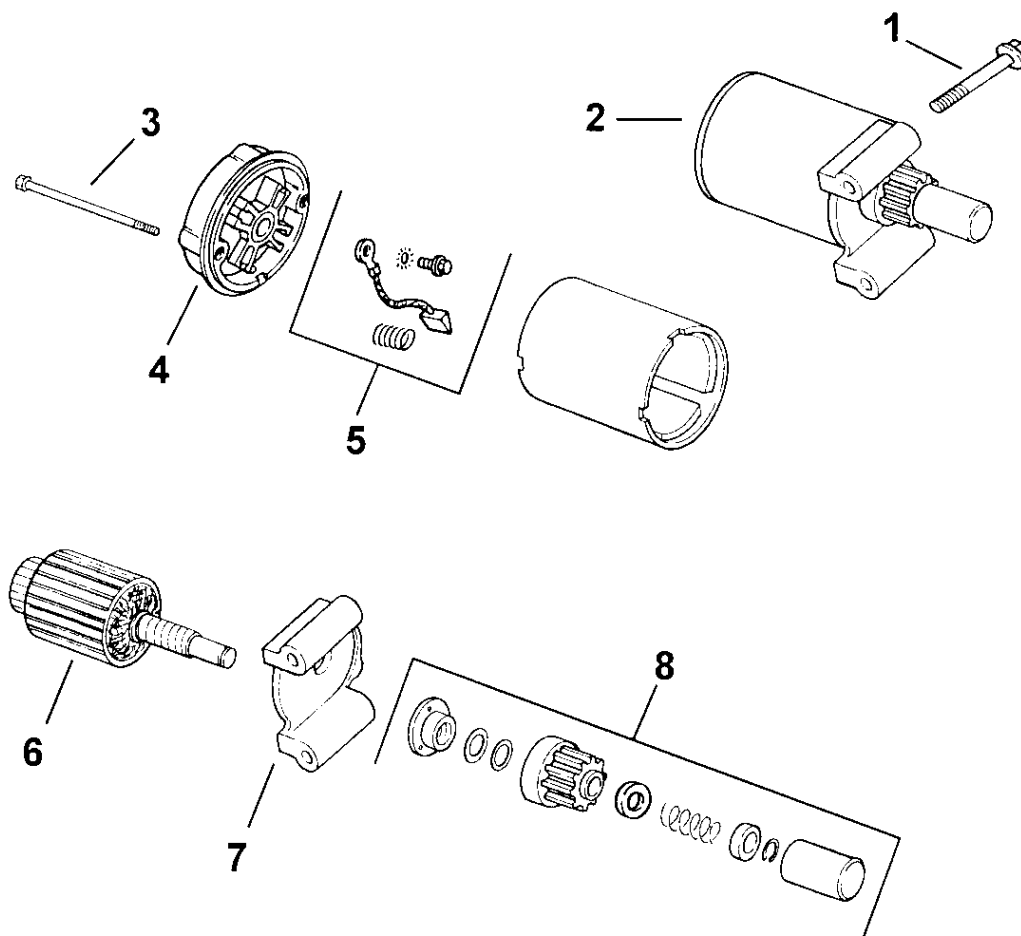


Starter (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0839070D	2	Screw, hex. flange M8x1.25x70
2	12 098 12		Starter assembly (Includes 3-8)
3	12 086 25	2	Screw, hex. flange 1/4-20x4-5/8
4	12 227 10		Cap, commutator end
5	82 755 28		Kit, brush & spring
6	45 170 03		Armature
7	12 227 05		Cap, drive end
8	12 755 53		Kit, drive

Kohler Engine CH12.5PS-1935

Obtain Parts From Kohler

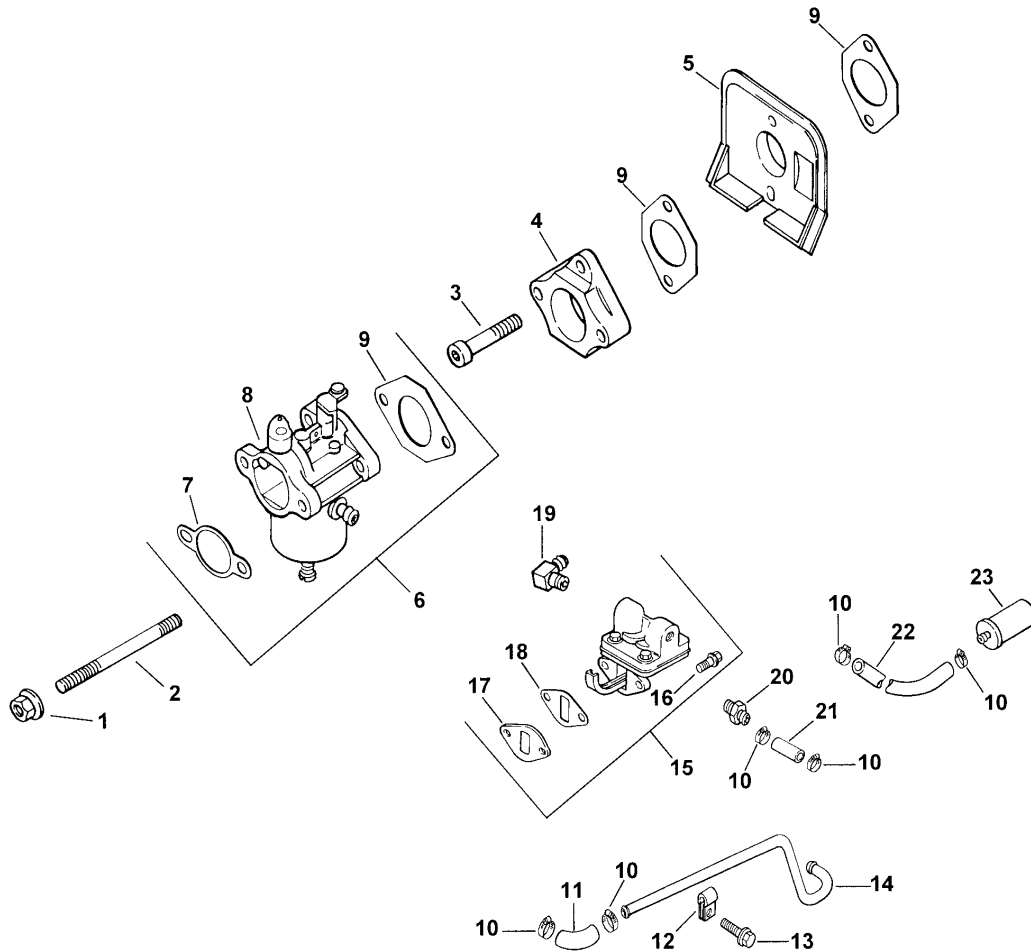


Carburetor & Fuel Pump (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut, hex. flange M6x1.0
2	M-0629085	2	Stud M6x1.0x85
3	M-0644035	2	Screw, hex. socket cap M6x1.0x35
4	12 029 04		Adapter, carburetor
5	12 265 04		Deflector, heat
6	12 853 60	1	Kit, carburetor w/gaskets (Incl. 7-90)
7	12 041 02		Gasket, air cleaner
8	12 053 60		Carburetor assembly (For information only not available separately) (Service with parts listed under "Not Illustrated")
9	12 041 01	3	Gasket, carburetor
10	X-426-9	6	Clamp, hose
11	12 353 07		Line, fuel
12	12 154 01		Clip, tube
13	M-0545010		Screw, hex. flange M5x0.8x10
14	12 353 11		Line, fuel - metal
15	12 559 01		Kit, fuel pump (Includes 16-18)
16	M-0645020	2	Screw, hex. flange M6x1.0x20
17	12 112 05		Spacer
18	25 041 09	2	Gasket, fuel pump
19	25 155 02		Connector, 90_ hose

Ref. No.	Part No.	Qty.	Description
20	X-380-1		Connector, straight hose
21	12 353 01		Line, fuel 1-1/4"
22	25 353 02		Line, fuel 3"
23	25 050 02		Filter, fuel
	12 368 05		NOT ILLUSTRATED
	12 089 09	2	Needle, idle fuel adjusting
	12 086 04		Spring, idle adjusting
	12 146 03		Screw, idle speed adjusting
	25 086 27	2	Plate, throttle
	12 144 09		Screw, throttle plate
	12 337 04		Shaft, throttle w/lever & seal
	12 757 08		Jet, main
	12 146 12		Kit, choke repair
	12 173 06		Plate, choke
	25 086 27	2	Cap, choke lever
	12 757 02		Screw, choke plate
	12 041 05		Kit, float
	12 104 01		Gasket, bowl
	12 086 05		Bowl, fuel
	12 041 06		Screw, fuel bowl retainer
	12 757 03		Gasket, bowl retainer screw
			Kit, carburetor repair


Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

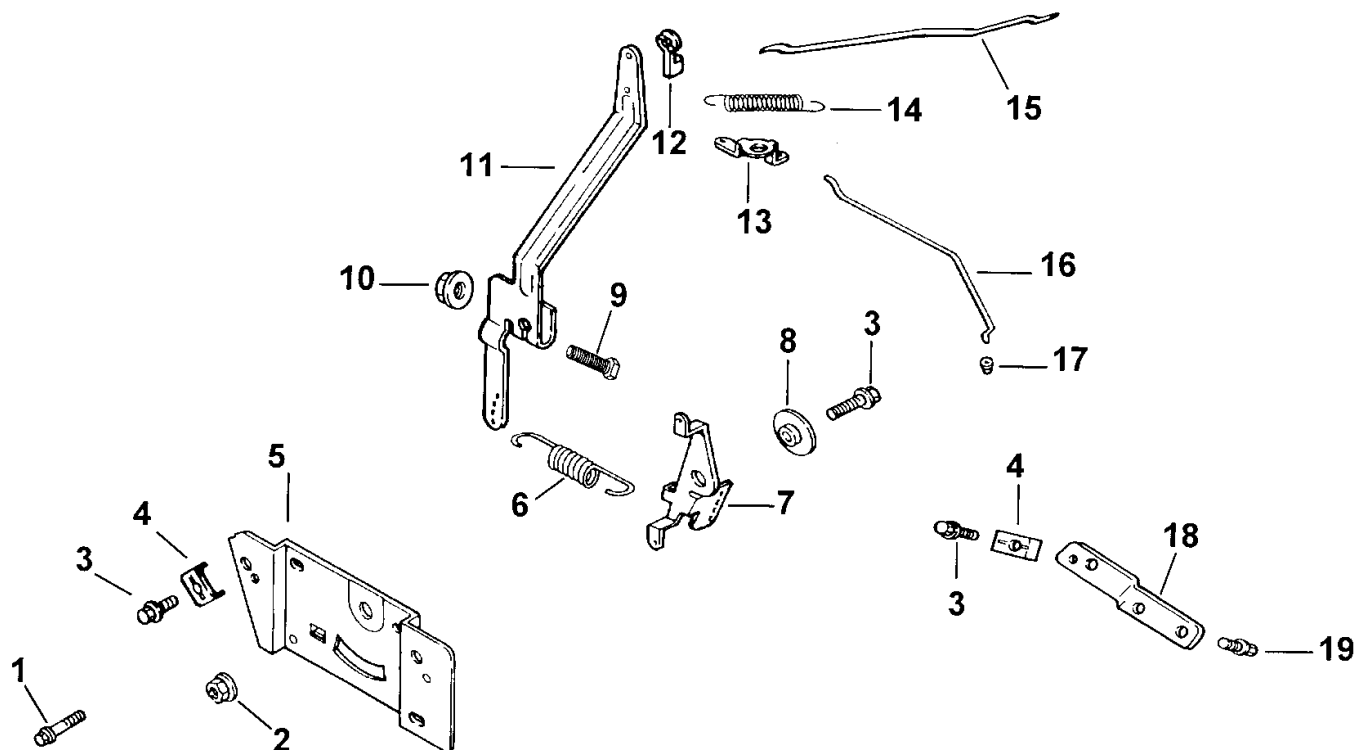

Engine Controls (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0664020	2	Screw, lobed socket M6x1.0x20				
2	M-0541050		Nut, hex. flange M5x0.8				
3	M-0545016	4	Screw, hex. flange M5x0.8x16				
4	12 237 01	3	Clamp, cable				
5	12 146 05		Plate, control				
6	12 089 17		Spring, governor				
7	12 090 13		Lever, throttle control				
8	12 112 07		Spacer, throttle control				
9	SM-0642025		Screw, hex. flange M6x1.0x25				
10	M-0641060		Nut, hex. flange M6x1.0				
11	12 090 19		Lever, governor				
12	25 158 11		Bushing, throttle				
13	12 090 14		Lever, choke – upper				
14	230117	2	Spring, linkage				
15	12 079 04		Linkage, throttle				
16	12 079 08		Linkage, choke – upper				
17	25 158 08		Bushing, linkage				
18	12 126 15		Bracket, choke mount				
19	M-0545010		Screw, hex. flange M5x0.8x10				

Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

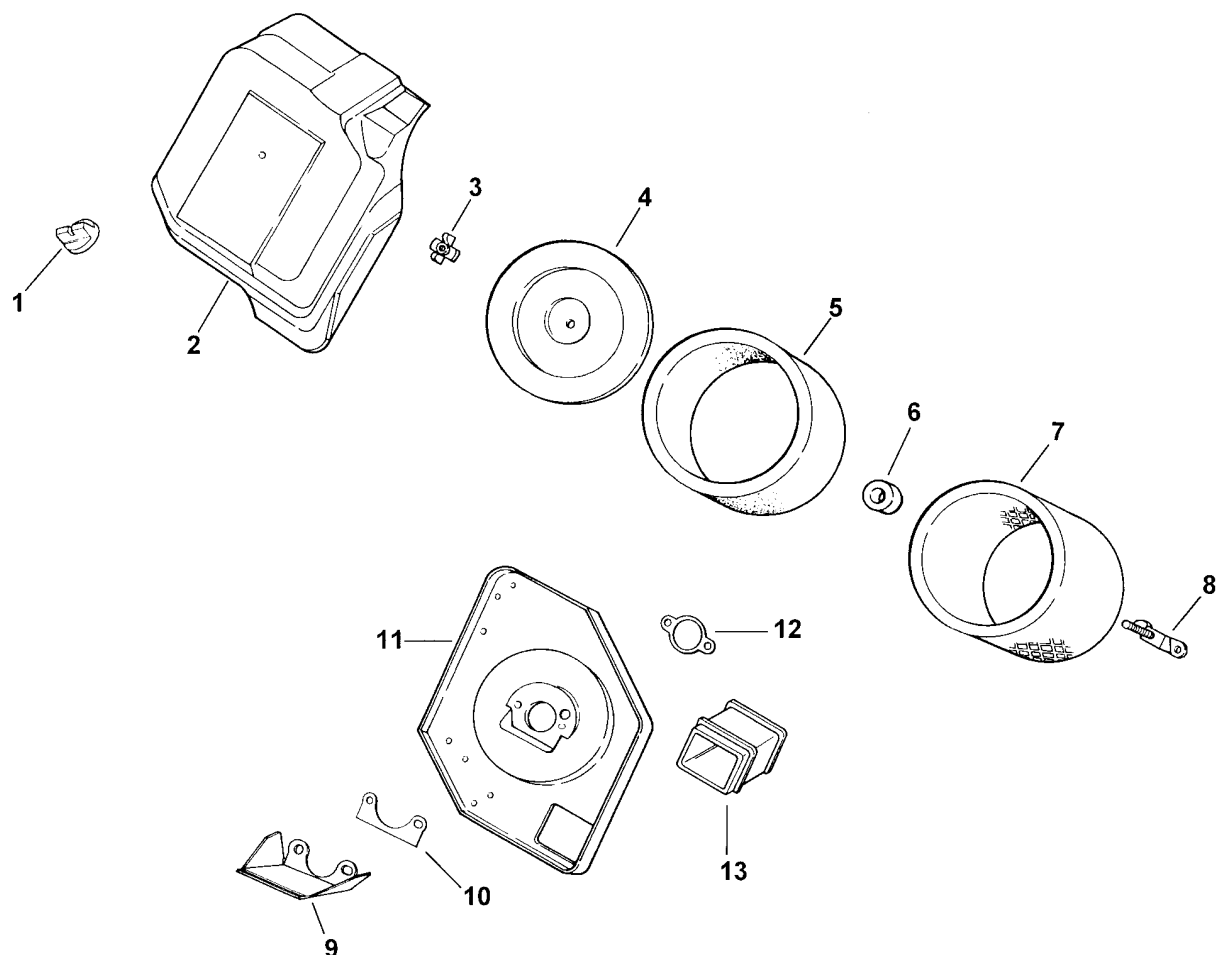


Air Intake / Filtration (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	25 341 03		Knob, cover
2	12 096 15		Cover, air cleaner
3	12 100 01		Wing Nut
4	12 096 35		Cover, air cleaner element with deflector
5	52 083 01		Precleaner, element
6	24 032 03		Seal, insert
7	47 083 01		Element, air cleaner
8	12 126 47		Bracket, air cleaner
9	12 146 14		Plate, air cleaner
10	12 041 09		Gasket, collector plate
11	12 094 06		Base, air cleaner
12	12 041 02		Gasket, air cleaner
13	12 123 07		Tube, air intake
	12 113 04		Not Illustrated Decal, air cleaner

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH12.5PS-1935 Obtain Parts From Kohler

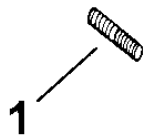


Exhaust (Model 73429 Only)

Ref. No.	Part No.	Qty.	Description
1	25 072 04 12 755 82	2	Stud M8x1.25x33 Gasket Set

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH12.5PS-1935
Obtain Parts From Kohler

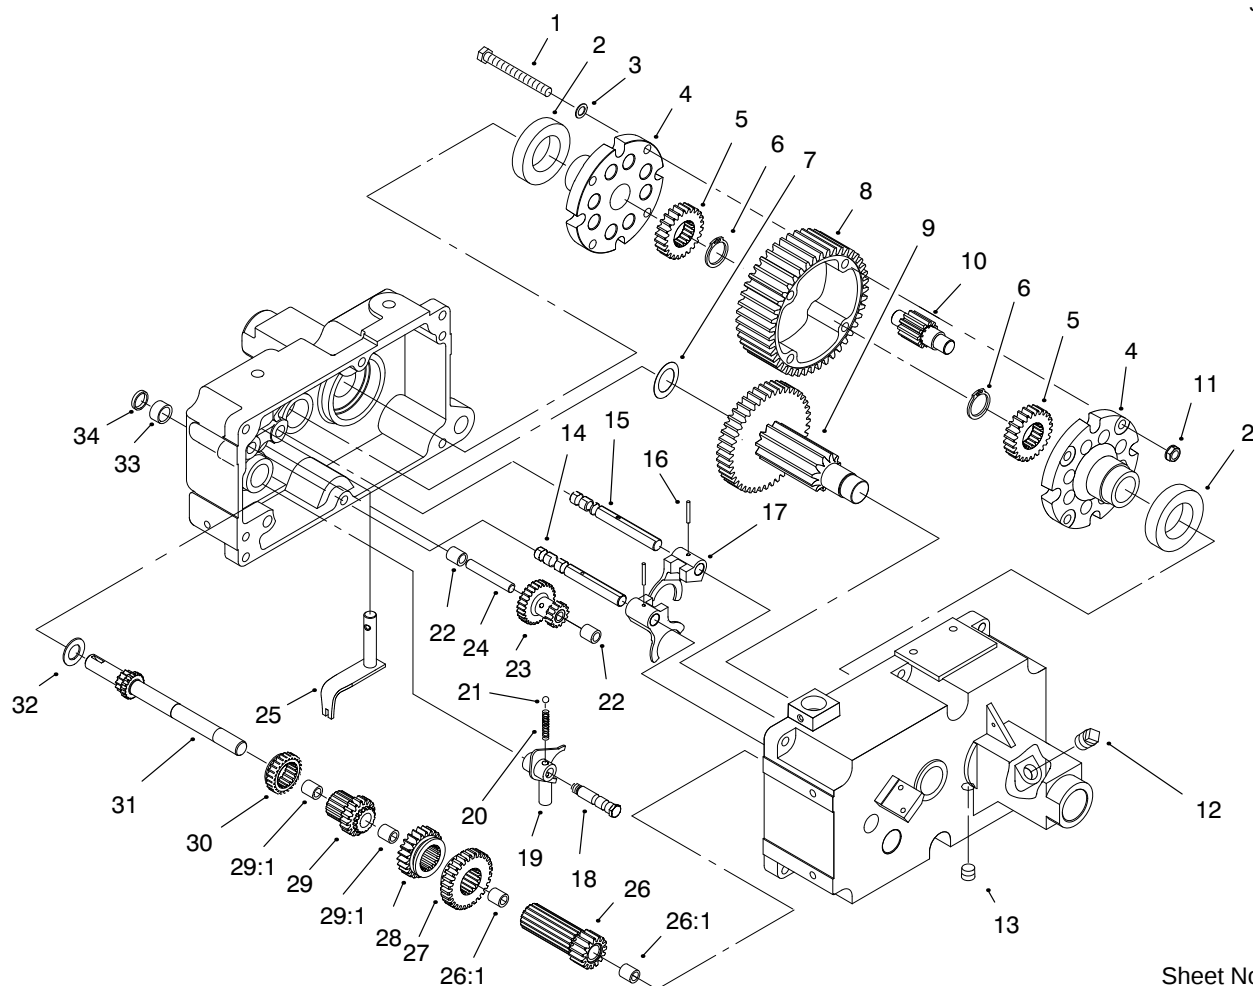


Sheet No.: 102

Transmission 8-Speed 8 Pinion (cont.) (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	911423	4	Screw-HH	26	5175	1	Gear ASM
2	111199	2	Bearing-Ball	26:1	1518	2	Bearing-Needle
3	107374	4	Washer-Flat	27	5174	1	Gear-Low And Reverse
4	111196	2	Cap-End	28	5173	1	Gear-Hi And 2nd
5	101889	2	Gear-Axle	29	111096	1	Gear
6	105876	2	Ring-Retaining	29	7204	1	Gear ASM
7	9547	1	Washer-Thrust	29:1	1518	2	Bearing-Needle
8	105061	1	Gear-Differential	30	7205	1	Gear-Sliding
9	102974	1	Gear-ASM	31	7201	1	Shaft-Input
10	101623	8	Gear-Pinion	32	7418	1	Washer-Thrust
11	108881	4	Nut-Hex	33	1542	1	Bearing-Needle
12	281-2	1	Plug-Pipe	34	100442	1	Seal-Oil
13	281-10	1	Plug-Pipe				
14	5615	1	Rail-Shift				
15	5616	1	Rail-Shift				
16	933156	2	Pin-Spirol				
17	3503	2	Fork-Shift				
18	7213	1	Screw-Detent				
19	116636	1	Fork ASM				
20	106030	1	Spring-Stop				
21	3517	1	Ball-Detent				
22	7207	2	Bearing-Needle				
23	7206	1	Gear-Reduction				
24	7208	1	Shaft-Gear				
25	7214	1	Lever-Shift				
26	111099	1	Gear				



Ref. No.	Part No.	Qty.	Description

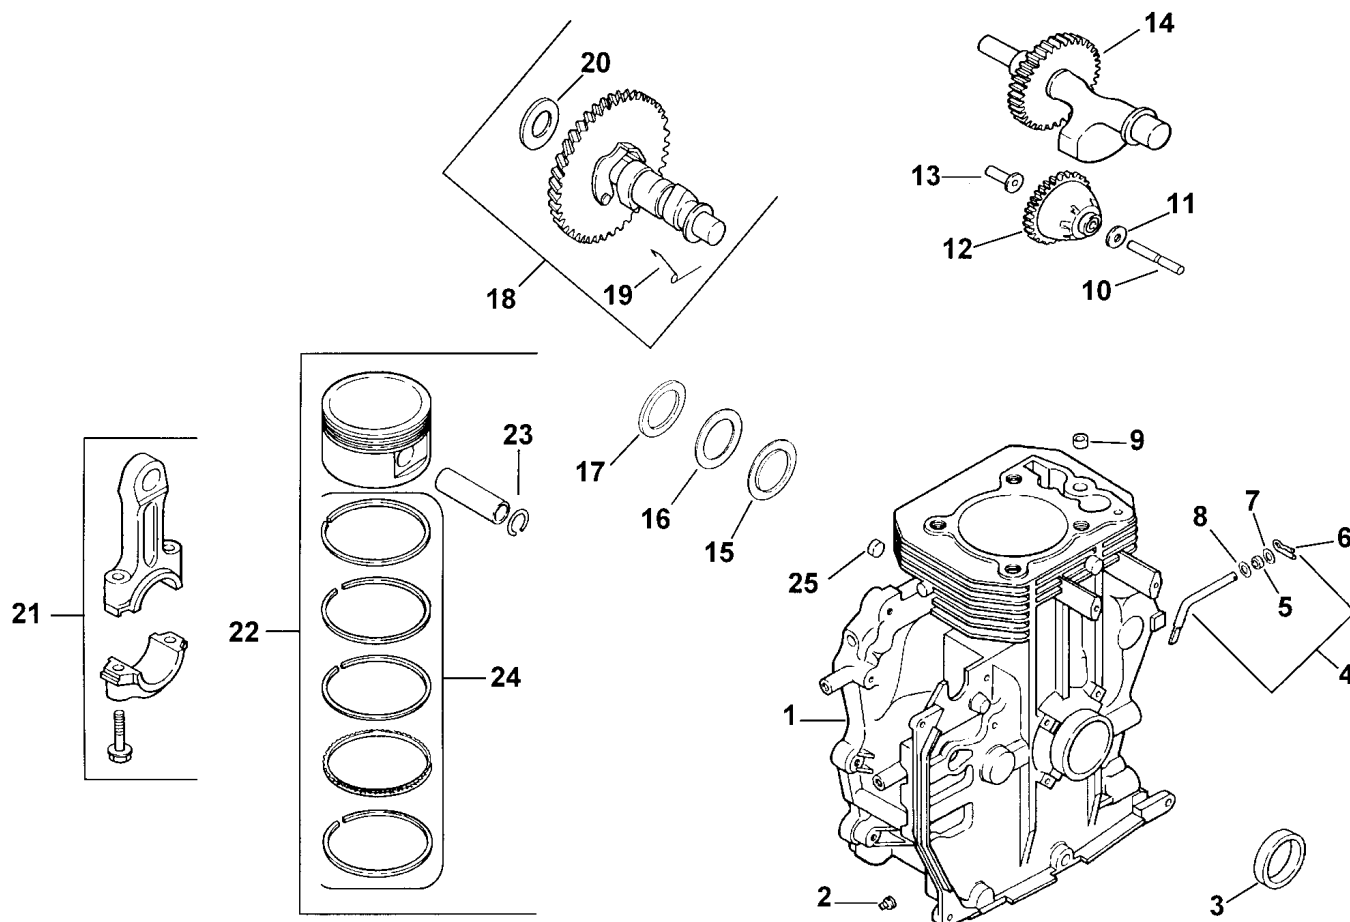


Crankcase (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1		1	Short Block
2	X-75-10	2	Plug, solid sq. hd. 3/8
3	12 032 03		Seal, crankshaft
4	12 755 64	6	Kit, governor cross shaft (Includes # 6)
5	12 032 01		Seal, governor cross shaft
6	12 154 05		Clip, hitch pin
7	X-25-102		Washer, plain 1/4
8	M-0631015		Washer, plain 6 mm
9	12 380 17	4	Dowel, locating
10	12 144 02		Shaft, governor gear
11	M-0631005		Washer, plain 6 mm
12	12 043 05		Gear, governor
13	12 380 01		Pin, governor regulating
14	12 144 26		Shaft, balance
15	24 030 08		Bearing, thrust
16	52 114 04		Washer, thrust
17	24 422 04		Shim, thrust
18	12 755 50		Kit, camshaft (Includes
19	12 089 31		Spring, actuating
20	12 422 08		Shim, camshaft (A.R.) blue

Ref. No.	Part No.	Qty.	Description
	12 422 09		Shim, camshaft (A.R.) red
	12 422 10		Shim, camshaft (A.R.) yellow
	12 422 11		Shim, camshaft (A.R.) green
	12 422 12		Shim, camshaft (A.R.) gray
	12 422 13		Shim, camshaft (A.R.) black
	12 422 07		Shim, camshaft (A.R.) white
21	12 067 05	1	Connecting Rod (Std.)
	12 067 06		Connecting Rod (.25)
22	12 874 01		Piston w/Ring Set (Std.) (Includes 23,24)
	12 874 02		Piston w/Ring Set (.25)
	12 874 03		Piston w/Ring Set (.50)
23	12 018 02		Retainer, piston pin
24	12 108 01		Ring Set (Std.)
	12 108 02		Ring Set (.25)
	12 108 03		Ring Set (.50)
25	52 139 09		Plug, cup

Kohler Engine CH14PS-1838
Obtain Parts From Kohler

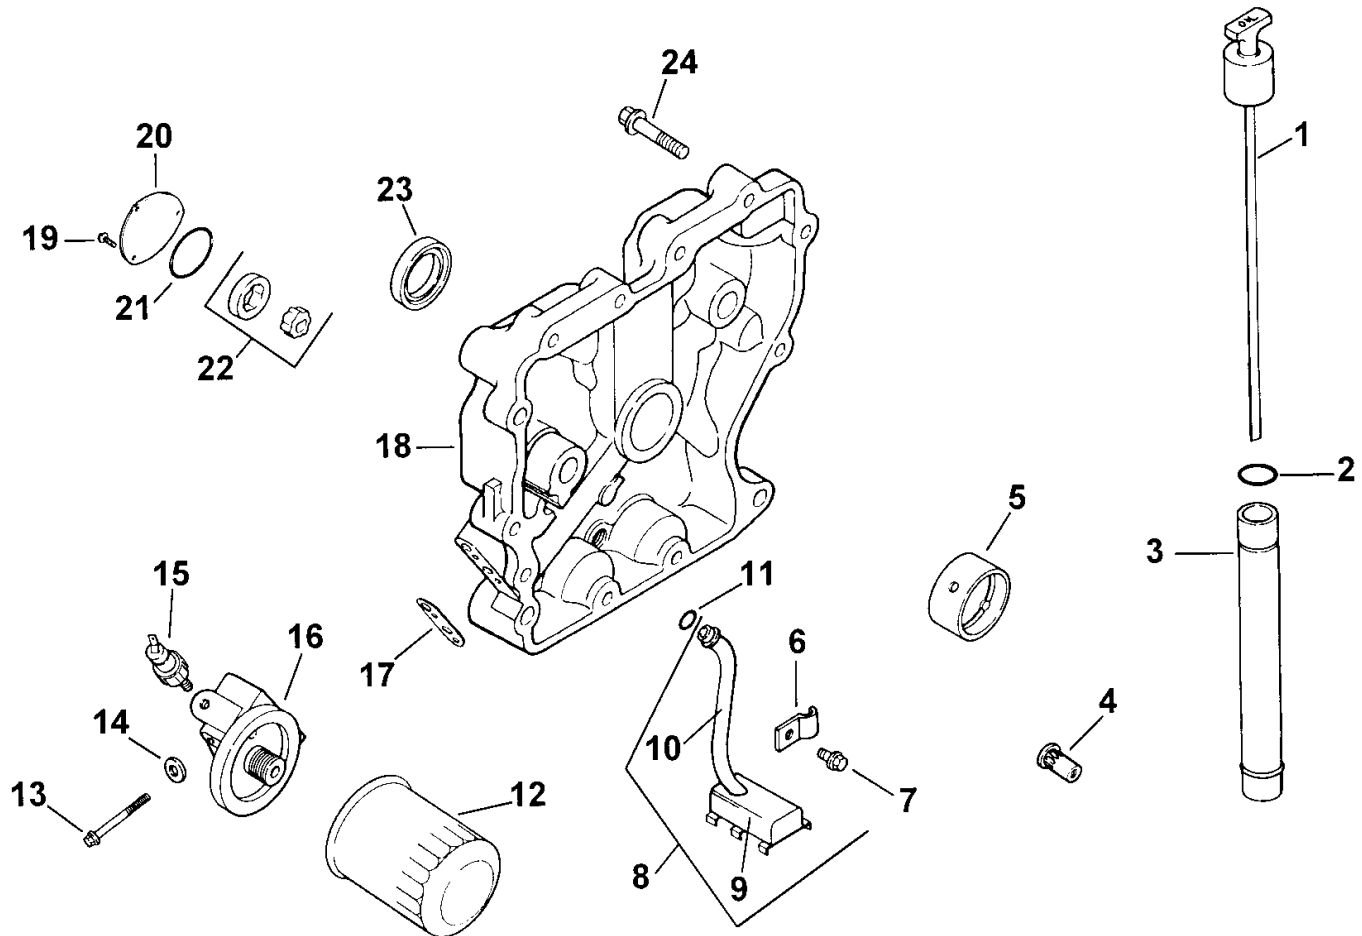


Oil Pan / Lubrication (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	47 038 26		Dipstick
2	41 153 01		O-Ring, oil fill tube
3	24 123 11		Tube, oil fill
4	25 462 09		Valve, oil pressure relief
5	12 030 05		Bearing, crankshaft
6	52 154 01		Clip
7	M-0545016		Screw, hex. flange M5x0.8x16
8	12 755 73		Kit, oil pick-up (Includes 9,10)
9	25 381 01		Pick-up, oil screen
10	12 123 21		Tubing, oil pick-up
11	12 153 04		O-Ring, oil pick-up
12	52 050 02		Filter, oil
13	M-0651060	2	Screw, hex. flange M6x1.0x60
14	X-25-12	2	Washer, plain 1/4
15	25 029 24		Switch, oil pressure
16	12 029 01		Adapter, oil filter
17	12 041 07		Gasket, oil filter adapter
18	1200936		Plate, closure Asm (Includes 4,5,19-22)
19	M-0545016	3	Screw, hex. flange M5x0.8x16

Ref. No.	Part No.	Qty.	Description
20	12 096 21		Cover, oil pump
21	12 153 05		O-Ring, oil pump cover
22	12 393 01		Pump, oil
23	12 032 03		Seal, oil (P.T.O. end)
24	24 086 16	11	Screw, hex. flange M8x1.25x45
24	24 086 17		Screw, hex. flange M8x1.25x45
	25 113 05		Decal, oil sentry


Kohler Engine CH14-1838
Obtain Parts From Kohler

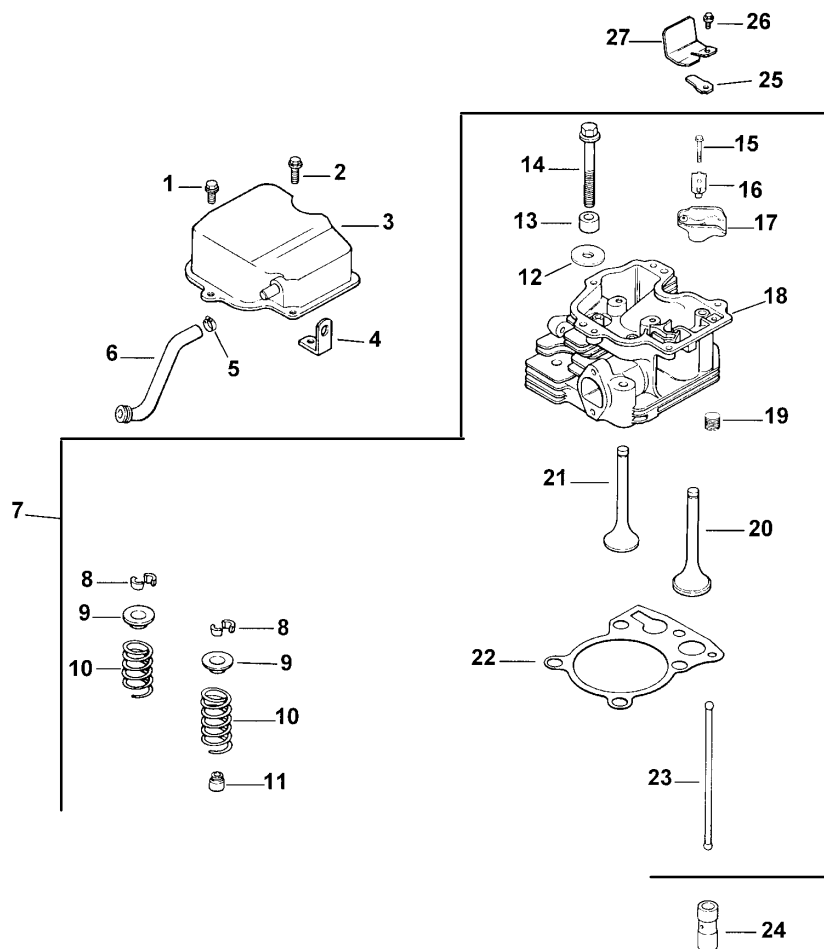

Cylinder Head / Valve & Breather (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0645020	4	Screw, hex. flange M6x1.0x20	16	12 599 03	2	Pivot, rocker arm
2	M-0645025		Screw, hex. flange M6x1.0x25	17	25 186 01	2	Arm, rocker
3	12 096 07		Cover, valve w/nipple	18	12 318 19		Head, cylinder
4	12 445 05		Strap, lifting (PTO side)	19	X-75-23		Plug, allen hd. 1/8 pipe
5	X-426-9		Clamp, hose	20	12 017 01		Valve, intake (Std.)
6	12 326 09		Hose, breather	21	12 016 01		Valve, exhaust (Std.)
7	12 041 01		Kit, cylinder head (Includes 8-23,	22	12 041 08		Gasket, cylinder head
	12 041 02	2	carburetor gasket ,	23	12 411 01	2	Rod, push
	12 041 03		air cleaner, base	24	12 351 02	2	Lifter, valve
	12 755 81		gasket,	25	12 402 02		Reed, breather
8	12 755 03	2	& exhaust manifold	26	M-0545010		Screw, hex. flange M5x0.8x10
9	12 173 01	2	gasket)	27	12 018 03		Retainer, breather reed
10	12 089 01	2	Kit, retainer		12 017 02		Not Illustrated Valve, intake (.25)
11	24 032 05	2	Cap, valve spring		12 016 02		Valve, exhaust (.25)
12	12 468 05	2	Spring, valve				
13	12 112 13		Seal, valve stem				
14	12 086 15	5	Washer, plain 13/32				
15	M-0640034	2	Spacer, head bolt exhaust port				
			Screw, hex. flange M10x1.5x81				
			Screw, hex. flange M6x1.0x34				

Kohler Engine CH14PS-1838
Obtain Parts From Kohler

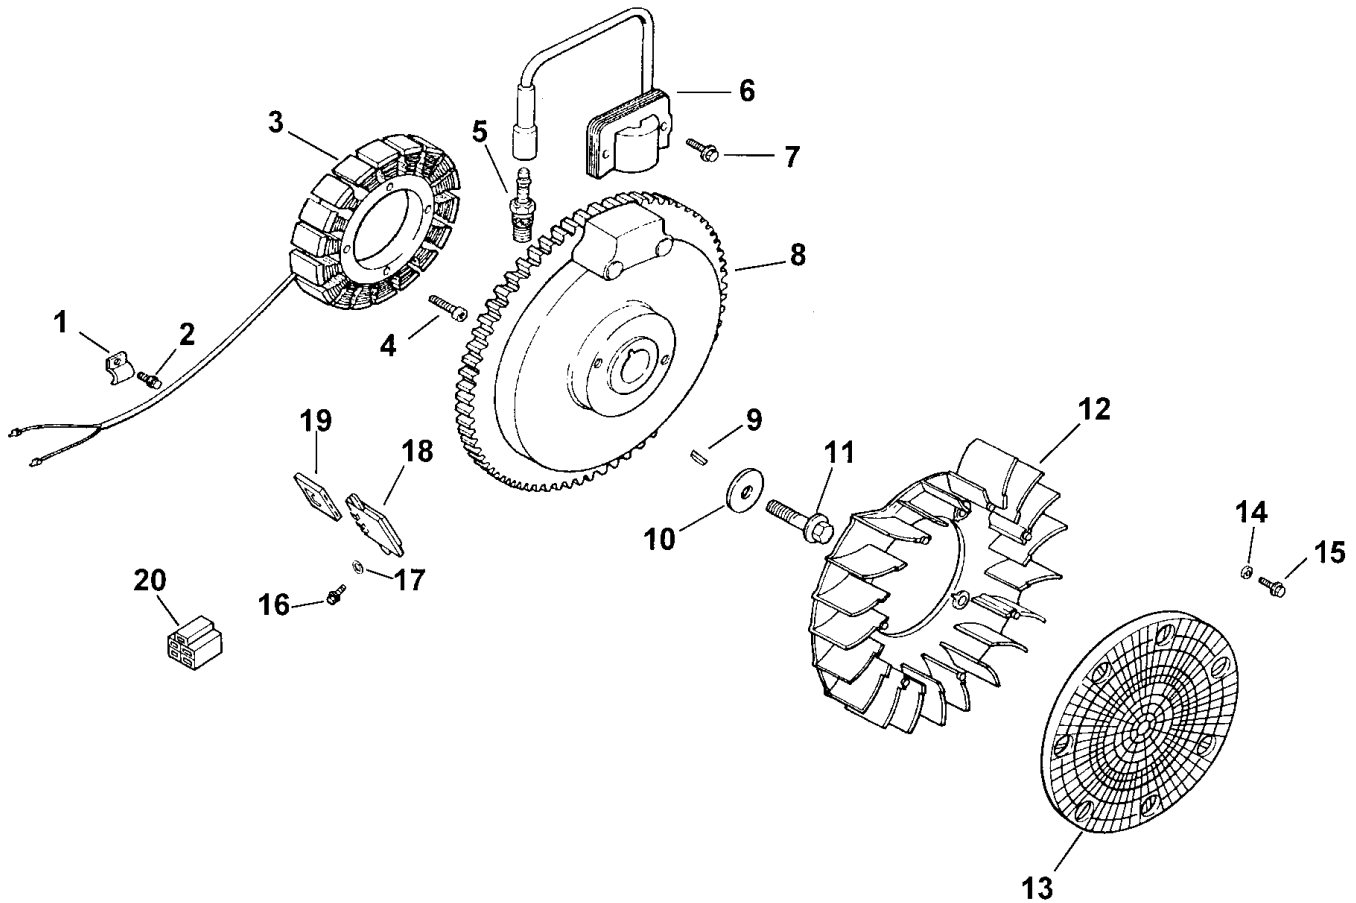


Ignition / Electrical (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	X-728-1	2	Clip
2	M-0545010	2	Screw, hex. flange M5x0.8x10
3	24 126 71		Kit, 15 amp stator (Includes Bracket).
4	54 755 09 M-0548025	2	Screw, hex. cap M5x0.8x25
5	12 132 02		Spark Plug
6	12 584 04		Module, ignition
7	M-0545020	2	Screw, hex. flange M5x0.8x20
8	12 025 15		Flywheel
9	X-42-15		Key
10	12 468 03		Washer, plain 3/8
11	12 086 14		Screw, hex. flange M10x1.5x46
12	12 157 03		Fan
13	24 162 03		Screen, grass
14	12 112 01	4	Spacer, fan
15	M-0639016	4	Screw, hex. flange M6x1.0x16
16	M-0639016	2	Screw, hex. flange M6x1.0x16
17	X-22-11		Washer, lock 1/4"
18	41 403 09		Rectifier-regulator

Ref. No.	Part No.	Qty.	Description
19	236602		Connector
20	48 155 01		Connector
	25 518 29		Lead, black (6" – 18 gauge – insulated grip barrel eyelet terminals)
	12 518 01		Lead, white, ground to kill (19" – 18 gauge – insulated push on tab, uninsulated push on tab terminals)
	25 518 05		Lead, black, rectifier-regulator (5" – 14 gauge – uninsulated push on tab terminals)
	24 126 71		Bracket, stator wire

Kohler Engine CH14PS-1838
Obtain Parts From Kohler

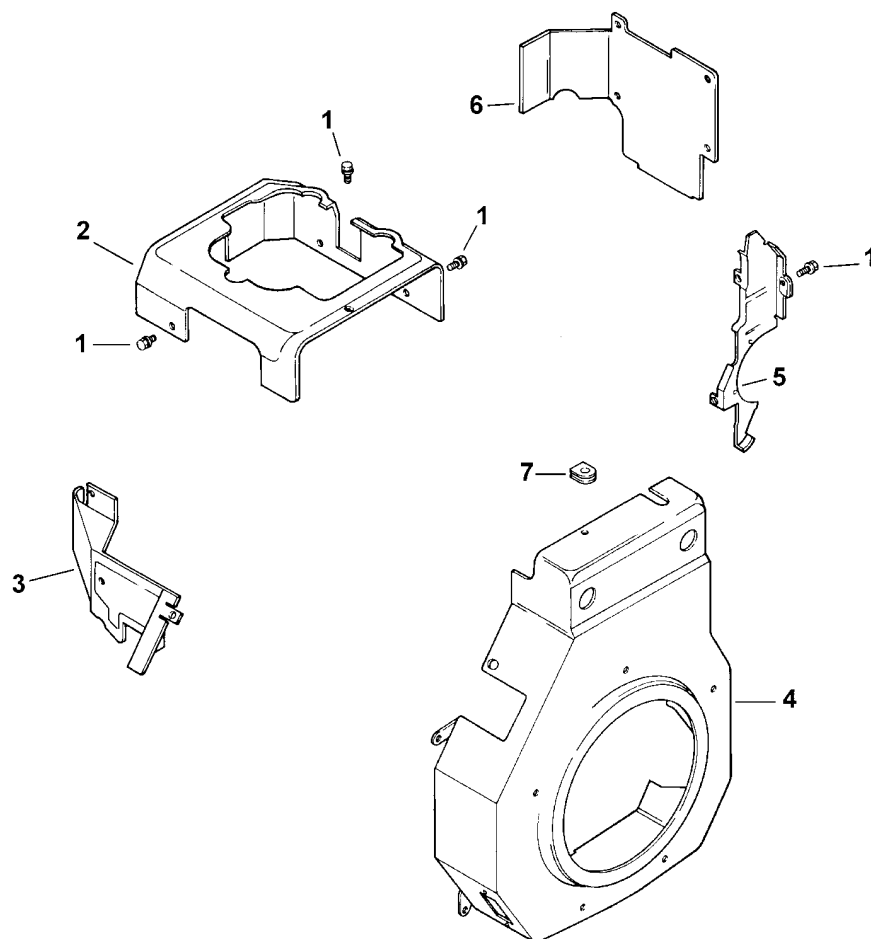


Blower Housing & Baffles (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0545010	14	Screw, hex. flange M5x0.8x10
2	12 063 08		Baffle, cylinder head
3	12 063 05		Baffle, intake side
4	12 027 39		Housing, blower
5	12 146 07		Plate, blower housing
6	12 063 01		Baffle, cylinder barrel
7	12 313 03		Grommet, blower housing
	12 113 30		Not Illustrated Decal, HP

Kohler Engine CH14PS-1838

Obtain Parts From Kohler

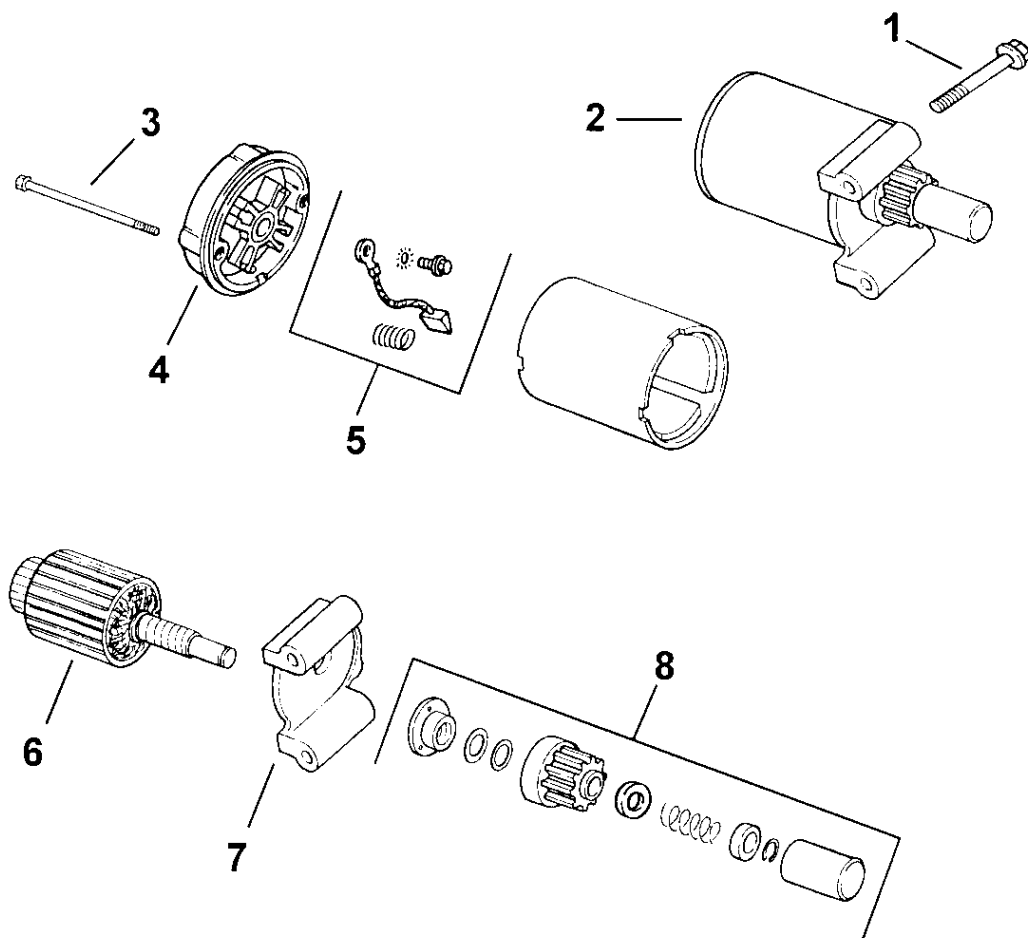


Starter (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0839070D	2	Screw, hex. flange M8x1.25x70
2	12 098 12		Starter assembly (Includes 3-8)
3	12 086 25	2	Screw, hex. flange 1/4-20x4-5/8
4	12 227 10		Cap, commutator end
5	82 755 28		Kit, brush & spring
6	45 170 03		Armature
7	12 227 05		Cap, drive end
8	12 755 53		Kit, drive

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH14PS-1838


Obtain Parts From Kohler

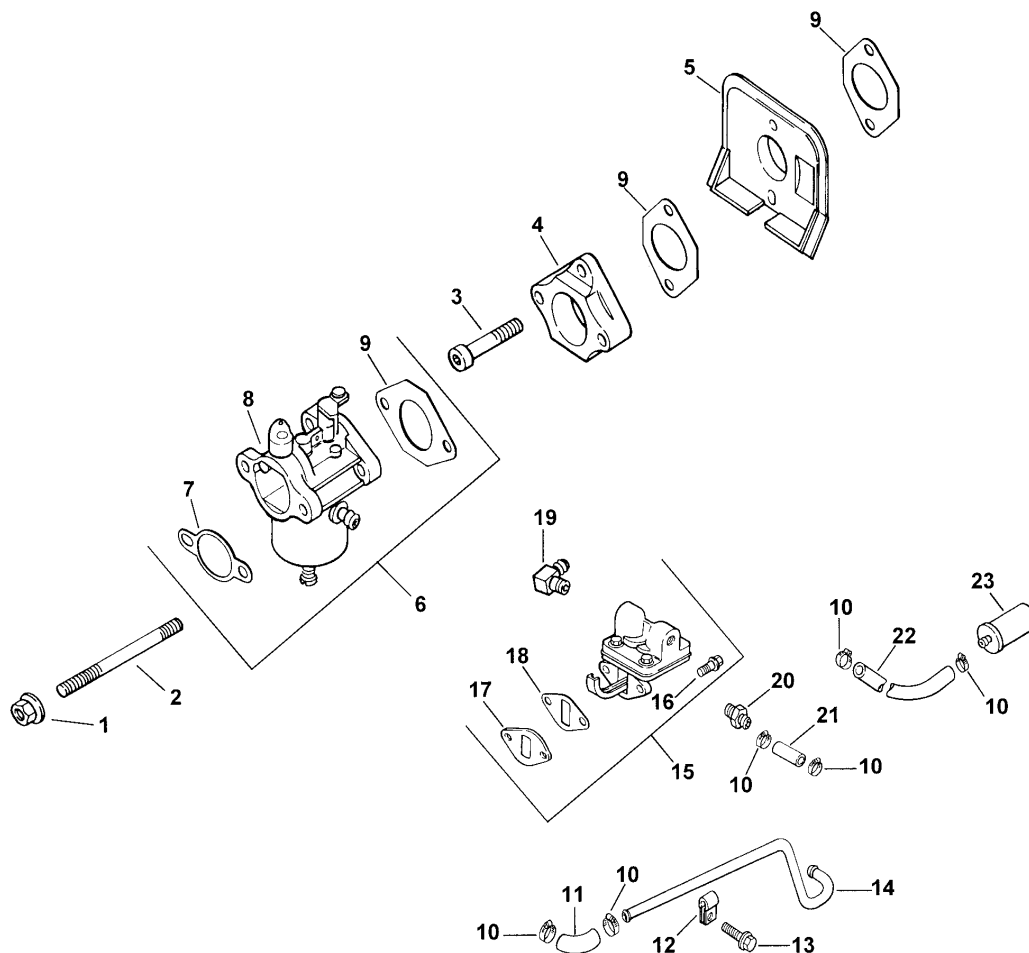

Carburetor & Fuel Pump (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut, hex. flange M6x1.0
2	M-0629085	2	Stud M6x1.0x85
3	M-0644035	2	Screw, hex. socket cap M6x1.0x35
4	12 029 04	1	Adapter, carburetor
5	12 265 04		Deflector, heat
6	12 853 60		Kit, carburetor w/gaskets (Incl. 7-90)
7	12 041 02		Gasket, air cleaner
8	12 053 60	3	Carburetor assembly (For information only not available separately) (Service with parts listed under "Not Illustrated")
9	12 041 01		Gasket, carburetor
10	X-426-9		Clamp, hose
11	12 353 07		Line fuel
12	12 154 01	6	Clip, tube
13	M-0545010		Screw, hex. flange M5x0.8x10
14	12 353 11		Line, fuel - metal
15	12 559 01		Kit, fuel pump (Includes 16-18)
16	M-0645020	2	Screw, hex. flange M6x1.0x20
17	12 112 05	2	Spacer
18	25 041 09		Gasket, fuel pump
19	25 155 02		Connector, 90_ hose

Kohler Engine CH14PS-1838

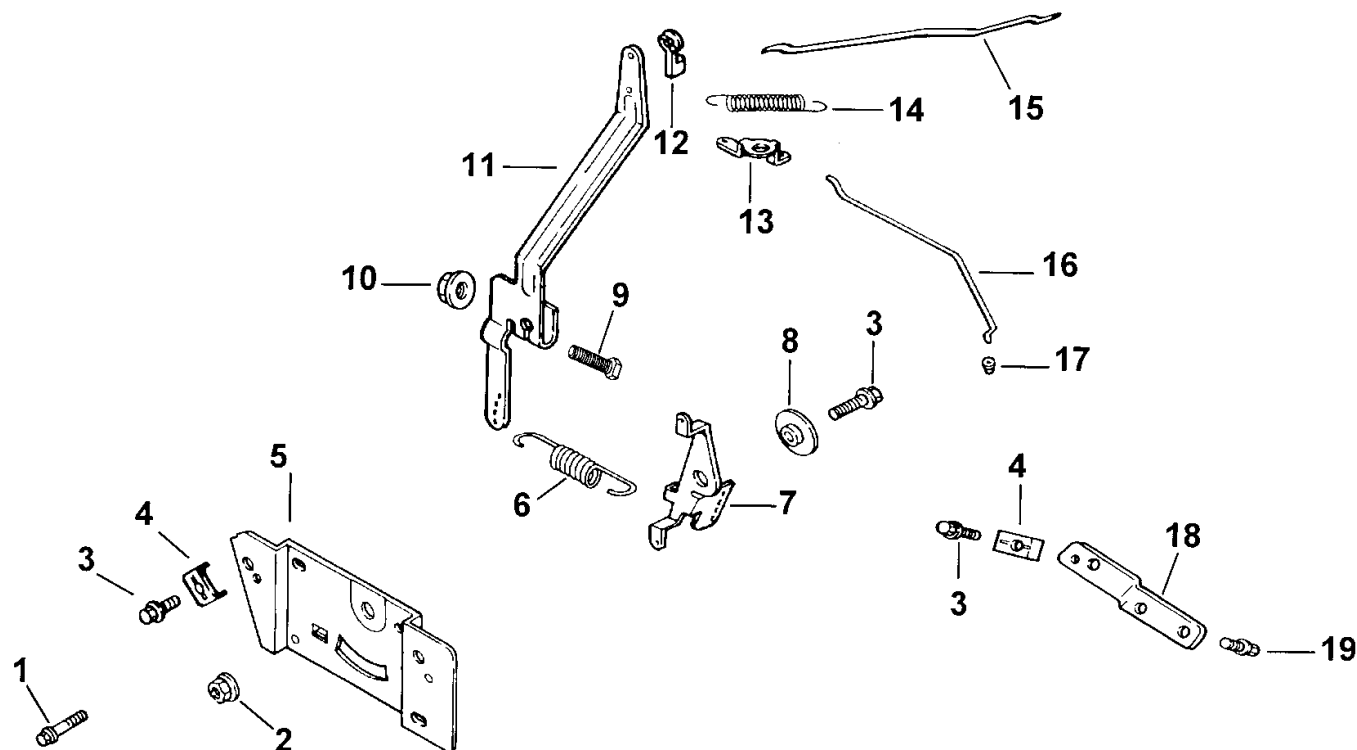


Engine Controls (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	M-0664020	2	Screw, lobed socket M6x1.0x20
2	M-0541050		Nut, hex. flange M5x0.8
3	M-0545016	4	Screw, hex. flange M5x0.8x16
4	12 237 01	3	Clamp, cable
5	12 146 05		Plate, control
6	12 089 17		Spring, governor
7	12 090 13		Lever, throttle control
8	12 112 07		Spacer, throttle control
9	SM-0642025		Screw, hex. flange M6x1.0x25
10	M-0641060		Nut, hex. flange M6x1.0
11	12 090 19		Lever, governor
12	25 158 11		Bushing, throttle
13	12 090 14		Lever, choke – upper
14	230117	2	Spring, linkage
15	12 079 04		Linkage, throttle
16	12 079 08		Linkage, choke – upper
17	25 158 08		Bushing, linkage
18	12 126 15		Bracket, choke mount
19	M-0545010		Screw, hex. flange M5x0.8x10

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH14PS-1838

Obtain Parts From Kohler

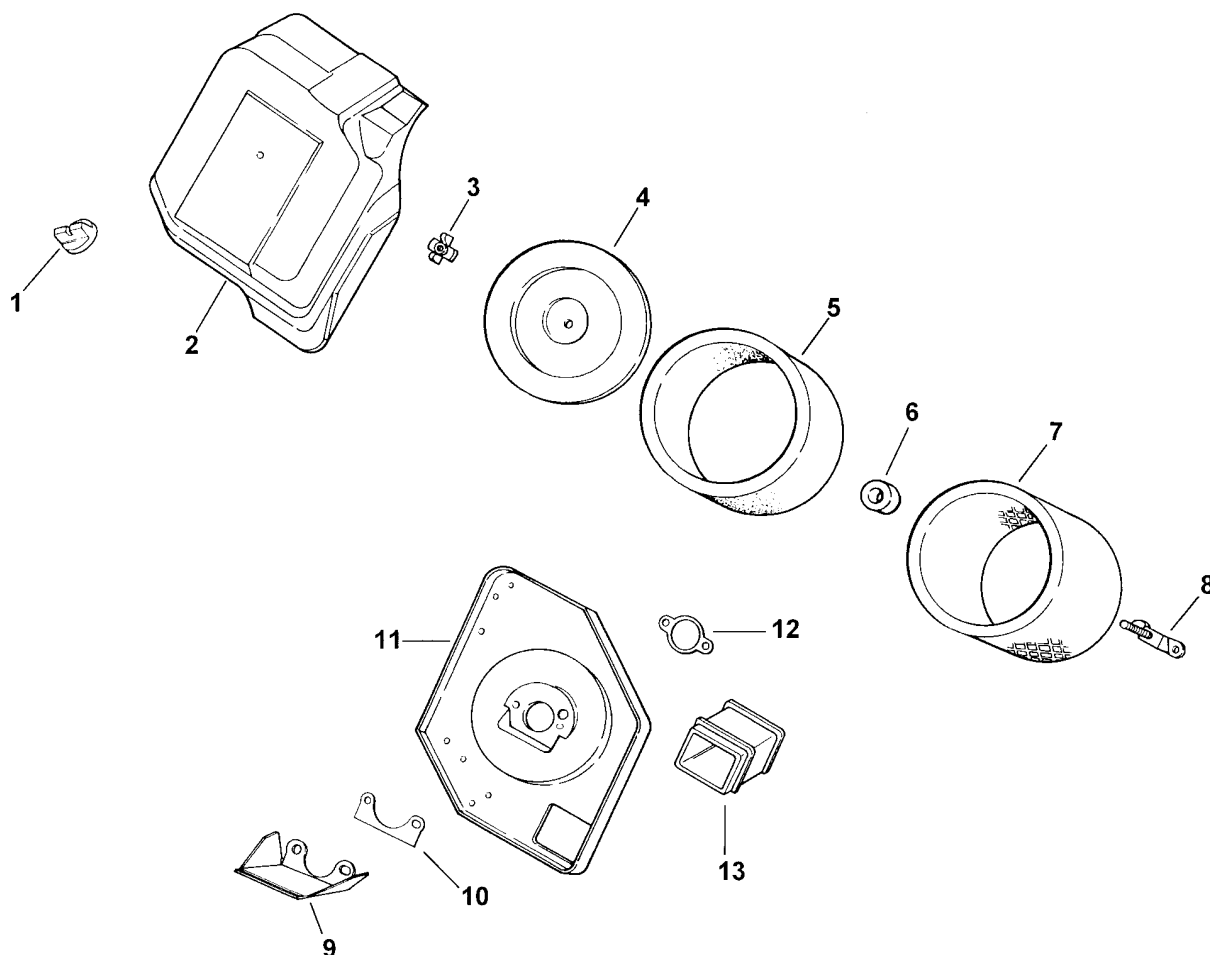


Air Intake / Filtration (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	25 341 03		Knob, cover
2	12 096 15		Cover, air cleaner
3	12 100 01		Wing Nut
4	12 096 35		Cover, air cleaner element with deflector
5	52 083 01		Precleaner, element
6	24 032 03		Seal, insert
7	47 083 01		Element, air cleaner
8	12 126 47		Bracket, air cleaner
9	12 146 14		Plate, air cleaner
10	12 041 09		Gasket, collector plate
11	12 094 06		Base, air cleaner
12	12 041 02		Gasket, air cleaner
13	12 123 07		Tube, air intake
			Not Illustrated
	12 113 04		Decal, air cleaner

Kohler Engine CH14PS-1838

Obtain Parts From Kohler

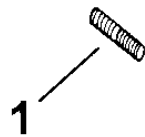

Exhaust (Model 73449 Only)

Ref. No.	Part No.	Qty.	Description
1	25 072 04 12 755 82	2	Stud M8x1.25x33 Gasket Set

Ref. No.	Part No.	Qty.	Description

Kohler Engine CH14PS-1838
Obtain Parts From Kohler

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
24 086 45	13	2	1	Screw—HHF
1121	7	9	1	Sq Key
1239	14	17	1	Set Screw
1278	2	9	3	Washer
1278	8	22	1	Washer
1278	15	14	4	Washer
2844	14	12	1	Washer
3577	14	21	1	Dust Cover
3624	7	12	1	Compression Spring
3765	8	8	1	Washer Shim
3765	12	8	1	Washer Shim
5108	15	3:3	1	Valve—Tubeless Tire
5108	15	10:1:1	1	Valve—Tubeless Tire (Only On: 73449)
5210	2	17	14	Shim Washer
5210	15	15	2	Shim Washer
5280	7	22	1	Knob—Lift Control
5618	2	30	1	E—Ring
5618	16	11	2	E—Ring
5666	12	4	2	Bushing—Nyliner
5979	1	17	2	Nyliner Bushing
6216	2	26	1	Assy Pin & Plate
6229	7	29	1	Bearing
6397	2	8	1	Bearing—Bronze
6472	2	1	1	Flanged Bearing
6658	11	13	1	Bearing Race
6659	11	12	2	Retainer
6662	11	16	1	Needle Bearing
6663	11	15	1	Oil Seal
6739	7	36	1	Stud—Lift
6820	9	8	1	Grip
7456	5	10	4	Bracket
7466	11	9	1	Pulley
7879	9	1	2	Bushing—Flanged
7896	2	12	1	Bowed Washer
7896	8	19	1	Bowed Washer
8130	7	13	1	Retainer Spring
8616	16	20	2	Spring
8830	7	38	4	Clip
8830	13	16	1	Clip
8830	16	28	1	Clip
8830	18	11	1	Clip
9038	16	12	1	Grip
9593	14	10	1	Brake Band Assy
101017	16	15	1	Lock
101161	8	11	1	Trunion
101707	16	23	1	Lock
101750	16	19	1	Rod Latch Pivot
101751	16	27	1	Rod Lock
101850	1	15	1	Hood Stop Rod
102025	9	10	1	Spacer
102703	14	5	1	Trans Nipple
102872	11	2	1	PTO Shaft
102881	1	3	2	Headlamp
103125	12	7	1	Spring
103347	8	14	1	Assy—Rod & Guide
103628	9	6	1	Spring—Extension
104047	18	1:3	1	Bushing Sm
104048	18	1:2	1	Valve—Fuel
104859	12	18	1	Spacer—Lift Link
104962	17	5	1	Battery (Dry)
105202	10	22	2	Base—Taillight (Only On: 73449)
105269	16	5	1	Pin—Stationary Hitch

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
105316	7	10	2	Cap-Plunger Rod
105316	16	14	2	Cap-Plunger Rod
105453	11	10	1	Key
105503	10	5	2	Bushing
105797	1	18	2	E-Ring
105797	16	18	8	E-Ring 3/8 Shaft
105900	9	13	1	Rod-Rear Brake
106165	14	19	1	Pulley Trans
106193	8	2	1	Bolt-Special Hex
106234	18	1	1	Fuel Tank
106235	18	1:1	1	Tank-Fuel
106257	7	18	1	Rod-Latch Lift
106269	7	3	2	Bearing-Flange
106417	9	16	1	Assy-Rod Wa
106522	7	35	1	Chain-Lift
106634	16	8	1	Pin-Tool
106695	11	20	1	Ring Reinforced Circ
106719	14	11	1	Brake Drum
106948	17	8	1	Tray-Battery
107069	3	19	4	Clip
107069	5	5	6	Clip
107677	9	12	1	Spring-Brake
108457	5	14	1	Push Nut
108547	10	21	2	Reflector (Only On: 73429)
108565	7	8	1	Shaft-Lift Lever
108758	14	3	1	Knob
108881	16	4	6	Nut-Differential
109045	10	22:1	2	Bulb (Only On: 73449)
109189	2	16	1	Bearing-Flanged
109262	2	13	2	Washer-Wheel
109459	1	5	2	Lock Headlight
109494	1	2	1	RH Bezel Headlight
109495	1	1	1	LH Bezel Headlight
109500	15	10:1:3	1	Zerk-Grease (Only On: 73449)
109530	6	20	1	Nut-Hex Palnut
109842	11	5	1	Bearing Ball
109989	10	13	2	Spacer Nylon
110234	14	13	1	Hhcs
110513	15	10:1:2	2	Bearing Wheel (Only On: 73449)
110653	7	26	1	Rod Height Control
110656	12	12	1	Trunnion
110669	12	11	1	Plate
110727	14	23	1	Rod - Shift Wa
110769	14	32	1	Spring Extension
111052	12	24	1	Rod PTO Clutch
111314	11	27	1	Assy Pin Locking
111332	3	17	1	Switch
111332	19	4	1	Switch
111383	8	18	1	Collar
111383	9	20	1	Collar
111392	3	16	1	J-Clip
111510	3	38	1	Decal-Parking-Brake
111516	15	3:1	1	Wheel
111534	3	32	1	Decal Shift Pattern
111757	1	7	1	Edging Console
111926	3	36	1	Decal Elect System
112415	3	7	1	Stop-PTO
112564	10	26	2	Lens-Tail Light (Only On: 73449)
112841	12	25	1	Cap#.234-5 Trim
113010	17	10	1	Batt Hold Down
113107	11	26	1	Clevis
113108	11	1	1	Rod-Housing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
113443	2	14	1	Tube—Steering
113969	17	9	2	Hook—Battery Retain
114720	17	7	1	Tube—21"
115411	19	2	1	Bracket—Switch
116000	5	8	6	Bolt—CARR
116742	15	3:2	1	Tire—23x8.50—12 2ply (Only On: 73429)
116744	15	3:2	1	Tire—23 X 950—12 (Only On: 73449)
116745	1	19	1	Rod—Grill Pivot
116746	1	20	1	Bracket—Grill R.h
116747	1	13	1	Bracket—Grill L.h
116884	15	10:2	1	Tire—15 X 6.00—6 (Only On: 73429)
117127	15	10:3	1	Tire (Only On: 73449)
117285	15	10:1	1	Ass'y—Wheel (Only On: 73429)
117343	3	11	2	Keeper—Latch
117344	1	10	2	Handle—Ass'y
117371	3	21	4	Bolt CARR.
117432	1	9	4	Poprivet
117432	3	12	4	Poprivet (Only On: 73429)
117930	16	17	1	Wldmt—Mid Hitch
147665	4	48	2	Screw
700806	10	15	2	Knob
700919	6	21	1	Nut #125
701178	10	1	2	Cap—Protector
M-0839070	13	25	2	Screw—HHF
920248	8	16	1	Washer—Nylon
920248	9	4	2	Washer—Nylon
933148	7	17	1	Spirol Pin
933184	14	22	1	Pinspirol
933190	8	13	1	Spirol Pin
933267	8	33	1	Spirol Pin
933274	11	25	1	Pin
937108	14	25	2	Woodruff Key
937221	14	18	1	Hi Pro Key
9080026	11	14	4	Hhcs
9103312	13	13	4	Screw
9107922	6	7	2	Scrw—Phcr
9107944	19	8	2	Screw—Pan
9108372	5	7	2	Screw
9108372	3	1	9	Screw Phc
9109484	3	6	6	Screw Pchr
9109484	19	5	2	Screw—Pchr
9151126	3	22	4	Nut—Hex
9157324	3	18	6	Nut—Hex
9157324	19	1	2	Nut—Hex
9202254	8	23	1	Washer
9266714	1	6	2	Screw—HWH
9266714	19	6	1	Screw—HWH
9266944	19	20	5	Bolt
9266944	3	8	11	Bolt
9266944	7	7	1	Bolt
9266944	9	17	1	Bolt
9266944	10	10	8	Bolt
9266944	5	15	1	Bolt 5/16—18x5/8 St
9266964	7	21	2	Trs
9266974	18	8	2	Thr—Forming
9335054	7	32	2	Pin—Hair Cotter
9335054	9	3	2	Pin—Hair Cotter
9335054	12	9	1	Pin—Hair Cotter
9335054	16	10	1	Pin—Hair Cotter
9335064	11	23	1	Hair Pin Cotter
9335074	7	19	2	Hair Pin Cotter
9791204	16	6	2	Spacer

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
28-2480	15	13	2	Washer
28-8080	17	2	1	Boot-Terminal
38-1420	10	19	1	Switch-Seat
46-5780	10	35	1	Switch-Starter
55-3570	18	7	1	Gas Cap Assembly
61-9780	15	12	2	Cap-Hub
62-7770	6	10	1	Key-Ignition
62-7770	10	32	1	Key-Ignition
66-0120	6	6	1	Knob
76-1340	10	30	1	Decal - USA
78-0080	6	12:3	1	Brkt-Gauge Mtg F/W (Only On: 73449)
78-1550	7	28	1	Wldmt-Lift Lever
78-2880-03	2	4	1	Wlmt-Lwer Ster
78-2900-01	2	33	2	Ass'y-Tie Rod (Red)
78-3010-03	3	23	1	Suport-Batery
78-3240	8	29	1	Ass'y-Gas Spring
78-3250	8	28	1	Spacer-Shoulder
78-3260	8	32	1	Spacer-Shoulder
79-0060	6	12	1	Voltmeter (Only On: 73449)
79-0950-03	10	17	1	Brkt-Pivot R.h.
79-0970-03	10	12	1	Brkt-Pivot L.h.
79-4990-03	18	19	1	Suport-Fender
83-2710	14	1	1	Knob
83-2720	15	2	10	Lug-Bolt
83-6520	16	16	1	Rod-Lock
88-2170-03	3	24	1	Brket-Blt Spt
88-2710-03	2	5	1	Support Lower Stg
88-9931	4	46	1	Switch-Micro
92-4987	2	19	1	Steering Shaft Wa
92-6511	10	9	1	Seat V-511
92-6710	7	11	1	Grip - Handle
92-6716	13	19	1	Gasket-Exh.single F/W
92-6750	10	8	2	Spacer - Nylon
92-6780	13	18	2	Nut-Hex Flange
92-6785	6	14	1	Switch - Ignition
92-6849	9	23	1	Rod - Brake
92-6986	10	6	2	Bolt - Shoulder
92-7054	10	3	2	Spring - Compression
92-8747	16	29	2	Decal Attach-A-Matic
92-8946	3	31	1	Decal - Danger
92-9514	18	20	1	Fuel Line-39"
92-9824	1	27	1	Decal - LH Hood Top
92-9825	1	25	1	Decal - RH Hood Top
92-9826	1	24	1	Decal - Frt Hood Top
92-9827	10	28	1	Decal - Rear Fender
92-9828	3	30	2	Decal - Model 312-8 (Only On: 73429)
92-9829	3	30	2	Decal - Model 314-8 (Only On: 73449)
92-9845	19	15	1	Solenoid
93-1613	16	22	1	Assy-Latch Wa
93-9801	15	10:1	1	ASM - Wheel w/Zerk (Only On: 73449)
93-9808	8	1	1	Belt - V
94-1834	14	24	1	Decal - Unidrive
94-1865	17	5	1	Battery (Dry)
94-2869	10	14	2	Washer
94-3521-01	5	17	1	Footrest-RH
94-3522-01	5	9	1	Footrest-LH
94-3701	12	2	1	ASM - PTO Clutch Lever
94-3703-01	8	20	1	Pedal-Brake, Clutch
94-3704	11	21	1	Guard - Belt
94-3706-01	9	18	1	Pedal-Brake, Gear
94-3710	5	1	1	Pad - Foot
94-3712	5	2	1	Pad - Foot

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-3722-01	10	11	1	Fender
94-3726-03	11	18	1	Brkt Wa-Belt Cover
94-3727	12	1	1	Knob
94-3735	11	22	2	Nut - Wing
94-3736	1	23	1	Logo - Horsrhead (Silver)
94-3738	13	12	1	Shield - Heat
94-4208	6	11	1	Hourmeter
94-6650	11	8	1	Ass'y-Clutch Plate
94-6652	12	20	1	Assy Brake
94-6670	14	6	1	Transmission ASM 8 Spd 4 (Only On: 73429)
94-6671	14	6	1	Transmission ASM 8 Spd 8 (Only On: 73449)
94-6673-01	2	22	1	Wa Frame (Red)
94-6683	8	17	1	Sleeve - Protective
94-6683	9	21	1	Sleeve - Protective
94-6692-03	18	18	1	Bracket-Suport
94-6693-03	18	12	1	Brket-Suport
94-6696-03	14	9	1	Plate Brake
95-7652	6	8	1	Light - Indicator (Only On: 73429)
95-7652	6	8	3	Light - Indicator (Only On: 73449)
95-7653	19	23	1	Cable
95-7654	17	1	1	Cable
95-7655	17	6	1	Cable
95-7656	6	9	1	ASM - Control, Choke
95-7657	6	17	1	ASM - Control, Throttle
95-7662	13	1	1	Muffler
95-7665-03	3	28	1	Bracket-Fender
95-7666	3	42	1	Brkt-Switch, Reed
95-7668	8	3	1	Pulley - V, Idler
95-7669	3	43	1	Switch - Reed, Magnetic
95-7670-03	3	13	1	Console (Only On: 73449)
95-7674-03	3	2	1	Plate-Hoodstand (Only On: 73429)
95-7675-03	3	2	1	Plate-Hoodstand (Only On: 73449)
95-7676-03	3	20	1	Wa - Hoodstand
95-7679	1	4	1	Harness - Headlight
95-7680	13	10	1	Engine - 12 HP, Kohler (Only On: 73429)
95-7681	13	10	1	Engine - 14 HP, Kohler (Only On: 73449)
95-7683	14	30	1	ASM - Clip, Magnet
95-7684	14	2	1	ASM - Rod, Shift
95-7695-01	5	19	1	Guard-Belt, (Single) W.a.
98-0674	3	33	1	Decal - Dash, Lower (Only On: 73429)
98-0675	3	33	1	Decal - Dash, Lower (Only On: 73449)
98-0750	1	26	1	Decal - Danger Hood
98-1459	2	35	1	Decal - Urethane, Toro
98-1468	2	21:1	1	Cover - Wheel, Steering
98-1473	2	21	1	Wheel-Steering, 15" Soft
98-1700	12	26	1	Wire - Guide, Belt
98-1730-03	13	17	1	Brkt-Eng Mtg, Rear
98-1731-03	13	24	1	Brkt-Eng Mtg, Front
98-1742-03	12	13	1	Wa-Brkt,Engine
98-1746	8	5	1	Idlr Arm w/A
98-1748	14	33	1	Shield - Magnet
98-7249	3	39	2	Relay-Spdt
98-7249	19	17	2	Relay-Spdt
98-8083-01	16	7	1	Hitch Wa
99-2985	10	7:2	1	Decal-Danger
99-3669-03	3	13	1	Console (Only On: 73429)
99-3700	19	28	1	Module-nmir
99-5339	10	7:3	1	Decal-Nmir Switch
99-5341	3	37	1	Decal-Console (Only On: 73449)
99-5342	3	37	1	Decal-Console (Only On: 73429)
99-5352	19	9	1	Harness-Wire,Kohler,14hp (Only On: 73449)
99-5353	19	9	1	Harness-Wire, Kohler,12hp (Only On: 73429)

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
99-8026-03	3	5	1	Plate-Shift
99-8028	4	50	1	Spring-Shift Control
99-8029-03	14	36	1	Bracket-Spring
99-8031	10	7	1	Support-Seat, ASM
99-8034-03	19	22	1	Plate-Hoodstand, Front
99-8049-03	4	45	1	Bracket-Switch, Reverse
101711-01	16	25	1	Front Hitch (Red)
101847-03	14	4	1	Dipstick
102644-01	16	3	2	Hitch Plate
102870-01	16	2	1	Support
103478-01	11	7	1	Housing-Clutch
103543-03	9	5	1	Bellcrank ASM
105763-03	14	28	2	Hub-Whl
105896-03	8	12	1	Arm-Clutch Rod
106250-03	3	27	1	Cover-Dust
106258-03	7	23	1	Slev-Lift Adjs
106345-03	7	25	1	Casting-Lift Lever
106352-01	5	13	1	Guid-Lower Blt
106411-03	7	6	1	Lift Lever Wa
106451-03	9	9	1	Assy-Brake Lever Wa
108563-03	7	16	1	Lift Handle Wa
109554-03	19	18	1	Bracket-Belt
112358-01	1	28	1	Hood Wa (Red)
113379-01	2	31	1	LH Spindle Wa* (Only On: 73429)
113380-01	2	32	1	Spindle-RH, Wa (Only On: 73429)
113381-01	2	32	1	Spindle-LH, Wa (Only On: 73449)
113382-01	2	31	1	Spindle-RH, Wa (Only On: 73449)
113445-03	7	31	1	Lift Bar Wa
113935-01	5	6	1	Cover-L.h.
117331-03	19	11	1	Fuse Holder
120590-03	6	2	1	Stop-Throttle
218-461	10	33	1	Nut-F/W And Other
237-69	2	20	1	O-Ring
2412-98	18	21	2	Clamp
288-4	13	23	1	Pipe Cap
289-45	13	22	1	Pipe Nipple
289-51	13	20	1	Nipple
2811-16	13	21	1	Elbow-90 Degree
302-5	2	28	2	Zerk
302-5	8	21	1	Zerk
302-5	9	19	1	Zerk
302-11	2	7	2	Zerk-45 Degree
321-3	14	7	2	Screw-HH
321-4	17	3	2	Screw-HH
321-5	8	7	1	Screw-HH
321-9	8	31	1	Screw-HH
322-1	2	24	1	Screw-HH
322-2	7	39	2	Screw-HH
322-2	18	15	2	Screw-HH
322-3	14	35	2	Screw-HH
322-3	18	17	4	Screw-HH
322-4	10	4	4	Screw-HH
322-5	3	3	2	Screw-HH
322-5	7	24	3	Screw-HH
322-6	7	34	1	Screw-HH
323-5	14	14	4	Screw-HH
323-6	2	2	2	Screw-HH
323-6	11	19	1	Screw-HH
323-6	12	10	1	Screw-HH
323-6	13	7	8	Screw-HH
323-8	2	6	2	Screw-HH
323-9	9	14	1	Screw-HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
323-44	16	1	6	Screw-HH
324-5	12	16	1	Screw-HH
324-7	12	27	2	Screw-HH
3217-5	14	16	1	Nut-Hex
3217-27	6	12:1	1	Nut-Hex (Only On: 73449)
3218-1	12	23	2	Nut-Jam
3218-3	14	27	4	Nut-Jam
3229-1	12	19	2	Screw-CARR
3229-25	1	14	4	Screw-CARR
3230-1	5	12	1	Screw-CARR
3231-25	16	26	3	Screw-CARR
3234-33	3	40	2	Screw-Hex Flange
3234-33	19	24	8	Screw-Hex Flange
3235-22	18	10	2	Screw-HH
3242-2	14	20	1	Sq Hd Ss
3243-5	14	26	4	Screw-Set
3245-32	8	18:1	1	Screw-HS
3245-32	9	20:1	1	Screw-HS
3246-2	11	11	2	Hx So Ss
3250-31	10	20	4	Screw-PPH
3253-3	12	22	2	Washer-Lock/Sp
3253-3	14	8	2	Washer-Lock/Sp
3253-4	2	25	1	Washer-Lock/Sp
3253-4	13	3	1	Washer-Lock/Sp
3253-4	18	14	2	Washer-Lock/Sp
3253-6	12	15	3	Washer-Lock/Sp
3253-21	14	15	4	Washer-Lock/Sp
3254-1	10	23	4	Washer-Lock/Int (Only On: 73449)
3254-5	10	34	1	Washer-Lock/Int
3255-8	10	31	1	Washer-Lock/Ext (Only On: 73449)
3255-9	13	15	4	Washer-Lock/Ext
3255-25	6	12:2	1	Washer-Lock/Ext (Only On: 73449)
3256-4	18	9	2	Washer-Flat
3256-5	7	20	1	Washer-Flat
3256-22	1	12	4	Washer-Flat
3256-22	4	49	1	Washer-Flat
3256-22	8	30	1	Washer-Flat
3256-22	12	21	2	Washer-Flat
3256-23	3	4	2	Washer-Flat
3256-23	7	5	3	Washer-Flat
3256-23	13	4	1	Washer-Flat
3256-24	8	10	1	Washer-Flat
3256-24	9	11	1	Washer-Flat
3256-25	12	14	3	Washer-Flat
3256-26	7	33	1	Washer-Flat
3256-26	9	2	1	Washer-Flat
3256-26	16	9	1	Washer-Flat
3256-27	11	24	1	Washer-Flat
3256-37	6	19	1	Washer-Flat
3256-62	7	2	2	Washer-Flat
3272-1	1	16	2	Pin-Cotter
3272-6	8	9	1	Pin-Cotter
3272-6	14	31	1	Pin-Cotter
3272-10	7	27	1	Pin-Cotter
3272-10	8	15	1	Pin-Cotter
3272-10	9	22	1	Pin-Cotter
3272-10	12	5	3	Pin-Cotter
3272-17	15	7	2	5/32 X 1-1/4 Cotter
3272-19	2	11	1	Pin-Cotter
3272-21	2	18	1	Cotter Pin
3290-354	4	47	1	Nut-Speed
3290-378	1	22	1	Tie-Cable

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3290-378	4	44	2	Tie-Cable
3290-479	5	3	16	Fastener-Panel
3296-2	6	1	2	Nut-Lock Ni
3296-2	19	12	2	Nut-Lock Ni
3296-6	2	3	4	Nut-Lock Ni
3296-27	10	24	4	Nut-Lock Ni
3296-29	3	26	2	Nut-Lock Ni
3296-29	5	11	7	Nut-Lock Ni
3296-29	7	4	6	Nut-Lock Ni
3296-29	10	16	2	Nut-Lock Ni
3296-29	14	34	2	Nut-Lock Ni
3296-29	18	13	4	Nut-Lock Ni
3296-39	2	23	4	Nut-Lock Ni
3296-39	7	37	1	Nut-Lock Ni
3296-39	9	15	1	Nut-Lock Ni
3296-39	13	6	4	Nut-Lock Ni
3296-39	16	24	3	Nut-Lock Ni
3296-42	1	11	4	Nut-Lock Ni
3296-42	3	41	3	Nut-Lock Ni
3296-42	8	4	2	Nut-Lock Ni
3296-42	17	12	2	Nut-Lock Ni
3296-42	19	19	8	Nut-Lock Ni
3296-58	10	2	2	Nut-Lock Ni
3296-59	12	17	1	Nut-Lock Ni
32103-22	17	11	2	Nut-Wing
32120-47	7	30	1	E Ring-External
32120-72	11	3	2	Ex Snap Ring
32120-93	2	34	2	Ex Hd S-Ring
32121-25	7	15	1	Pin-Roll
32121-97	14	29	2	Pin
32121-103	7	14	1	Pin-Sprl
32121-111	2	15	1	Pin-Roll
32128-19	9	7	1	Locknut-Flange
32128-40	11	17	1	Flange Nut
32136-5	2	10	1	Nut-Sltd
32146-2	8	6	1	Nut-Lock Ni
32149-2	19	27	2	Nut-Keps
32151-11	12	3	1	Ex Grip Ring
32151-91	7	1	1	Tru Arc Ring
5638-01	2	27	1	Axle Front

[illegible]

[illegible]