


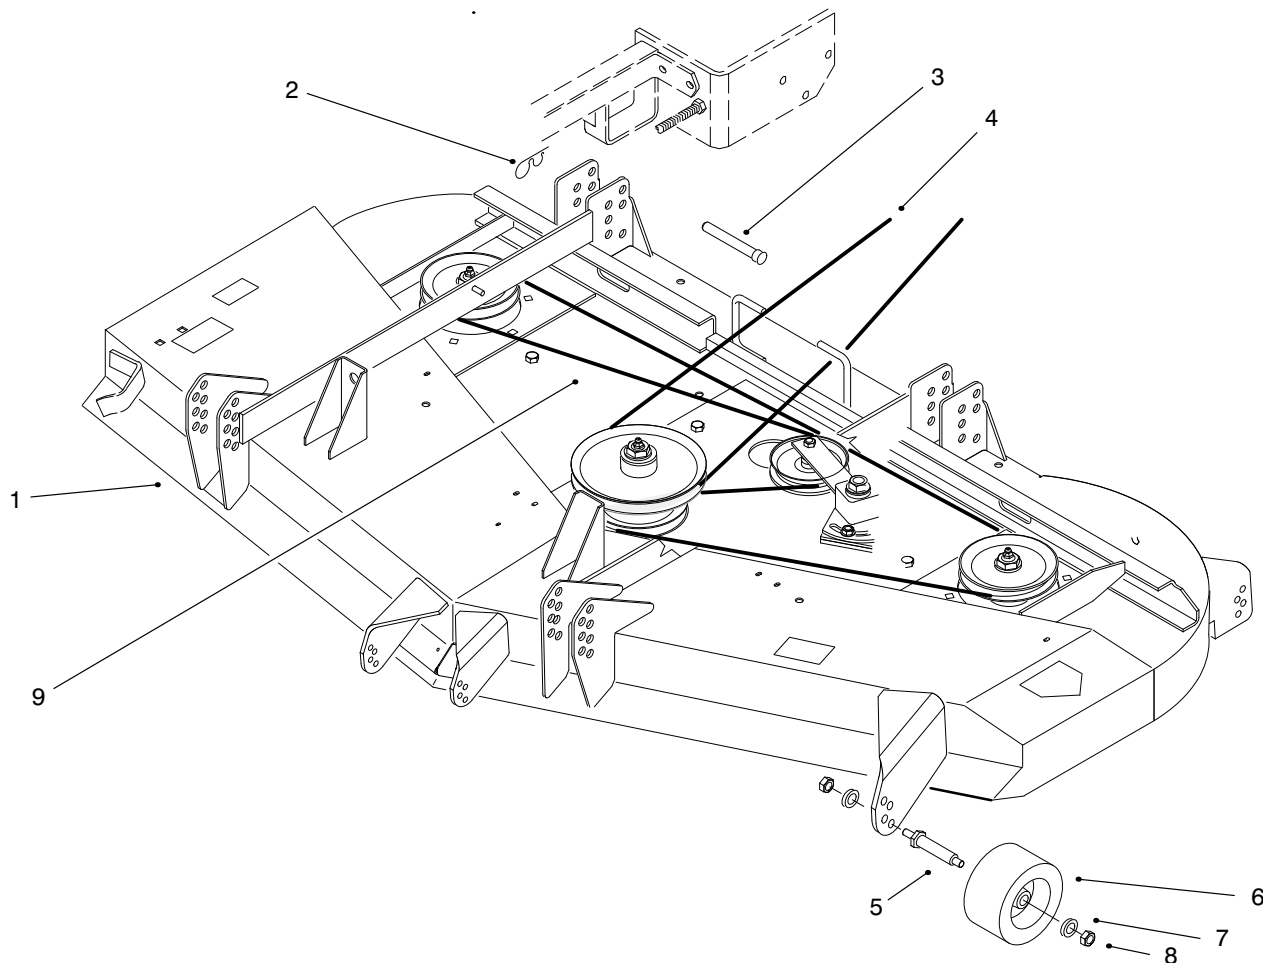

MODEL NO. 30162 – 990001 & UP

**PARTS
CATALOG**
62" SIDE DISCHARGE DECK
 ProLine Cutting Unit


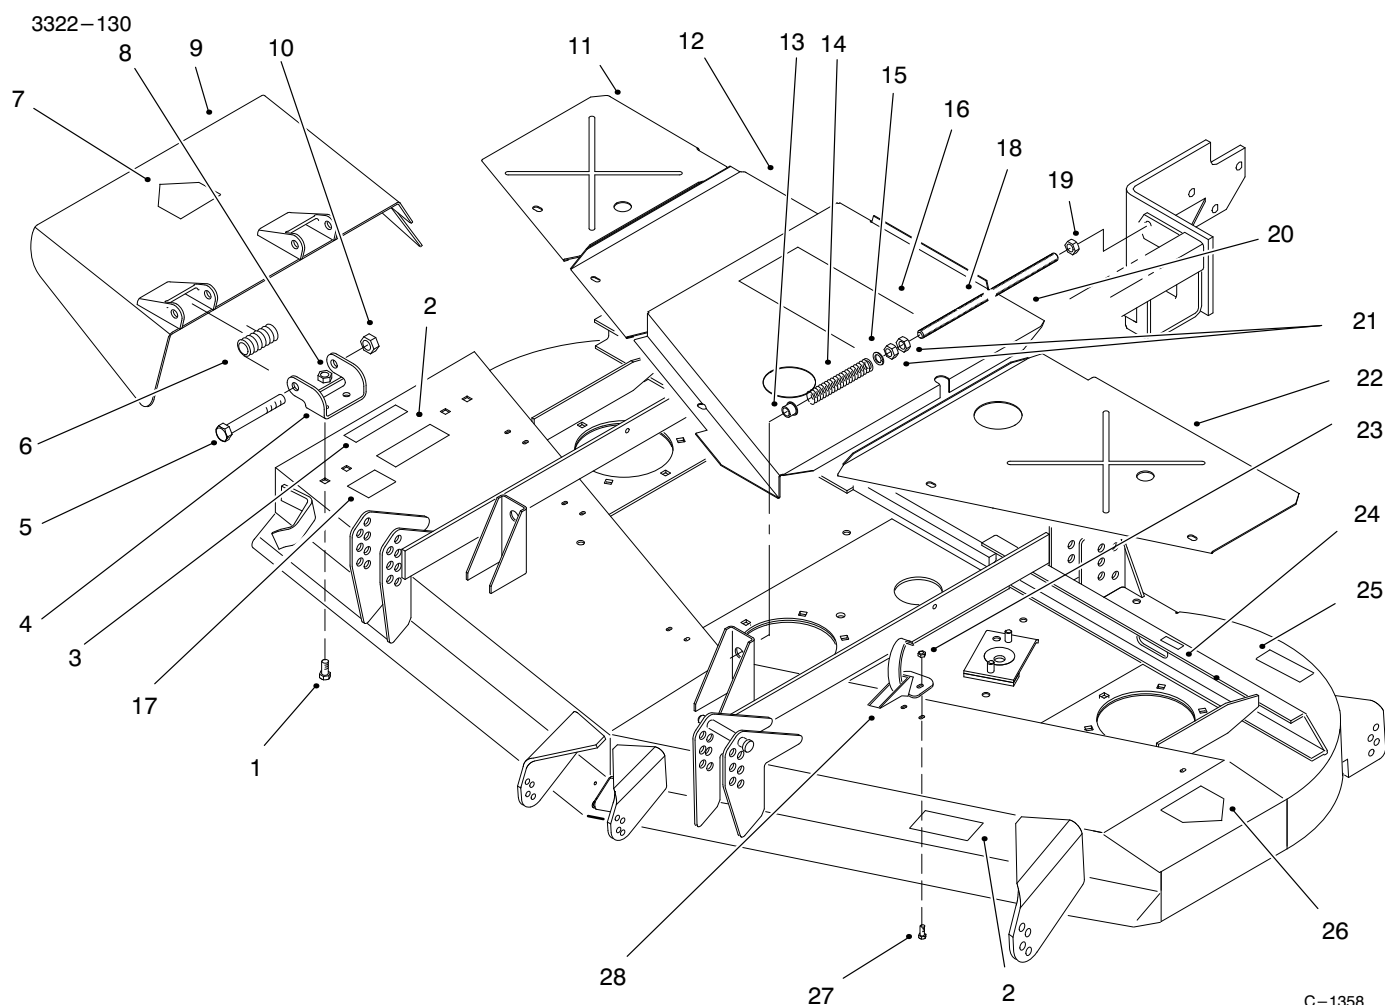
C-1357

BELTS, ROLLERS AND GAGE WHEEL

Ref. No.	Part No.	Description	No. Used
1	99-6443	Deck Assembly (Incl. Decals on page 2)	1
2	3290-355	Pin – Cotter	4
3	283-55	Pin – Clevis	4
4	74-1330	"V" Belt – Deck Drive	1
5	99-2842	Spacer – Wheel	5

Ref. No.	Part No.	Description	No. Used
6	68-2730	Wheel – Gauge	5
7	3256-24	Washer – Flat	10
8	3296-39	Nut – Lock	10
9	44-6260	"V" Belt – Deck	1

* Not Illustrated




C-1358

GRASS DEFLECTOR, BELT COVERS & DECALS

Ref. No.	Part No.	Description	No. Used
1	3231-27	Bolt - Carriage	4
2	66-1340	Decal - Danger	2
3	66-6380	Decal - Deflector Missing	1
4	51-1530	Bracket - Hinge	2
5	325-17	Screw - Hex. Hd.	2
6	51-1550	Spring	2
7	93-1122	Decal	1
8	3290-357	Nut - Flange Lock	4
9	14-0909	Deflector Assembly (Incl. Ref.#7)	1
10	32153-5	Nut - Lock	2
11	63-9830	Cover - Deck R.H.	1
12	74-1310	Cover - Deck, Center R.H.	1
13	256-156	Bushing	2
14	74-0290	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
15	41-8440	Spacer - Hardened	2
16	98-5952	Decal - 62"	1
17	98-3269	Decal - Made in USA	1
18	74-0311	Shaft - Adjusting	2
19	3296-45	Nut - Lock	2
20	74-1320	Cover - Deck, Center L.H.	1
21	3218-5	Nut - Lock	4
22	44-6291	Cover - Deck L.H.	1
23	32128-17	Nut - Lock	10
24	67-5360	Decal - Shield Missing	4
25	68-8340	Decal - Blade Torque	1
26	43-8480	Decal - Danger	1
27	3290-321	Screw - Hex. Hd. Mach.	10
28	249-21	Latch - Draw	5

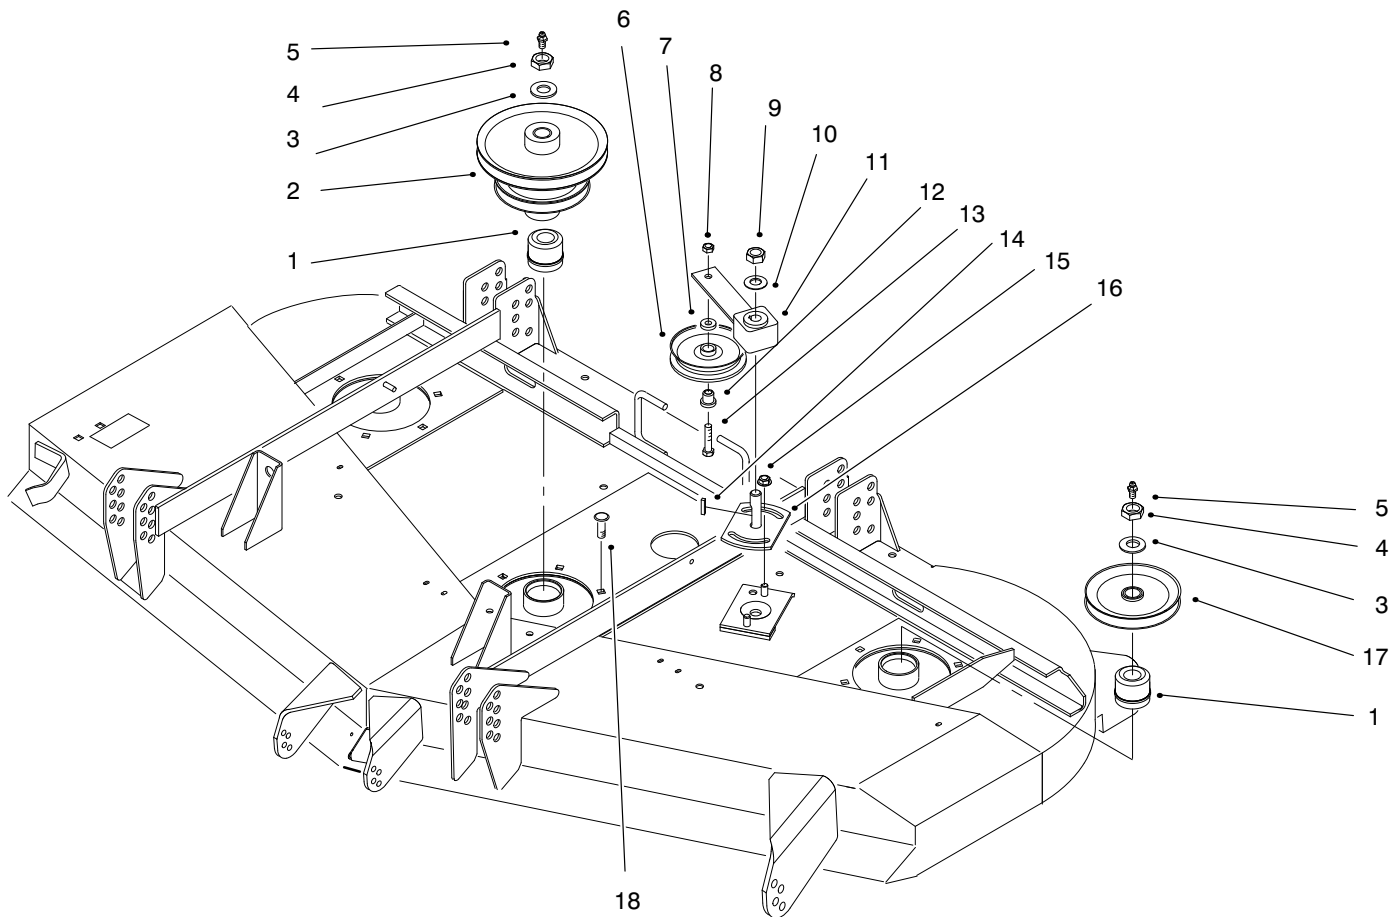


C-1361

PULLEYS AND IDLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8530	Bearing Assembly	3
2	74-1230	Pulley & Hub Assembly	1
3	7-4150	Washer - Thrust	3
4	32146-20	Nut - Lock	1
5	302-2	Fitting - Grease	3
6	65-5940	Pulley - Idler	1
7	7-0081	Washer - Special	1
8	3296-5	Nut - Lock	1
9	3296-71	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
10	3256-27	Washer - Flat	1
11	27-8580	Idler Socket Assembly	1
12	65-5950	Bushing - Pulley	1
13	3211-8	Screw - Hex. Hd.	1
14	5-1077	Key - Square	1
15	3290-357	Nut - Flange Lock	6
16	44-6301	Plate Assembly Idler	1
17	44-6340	Pulley Hub Assembly	2
18	3231-22	Bolt - Carriage	18

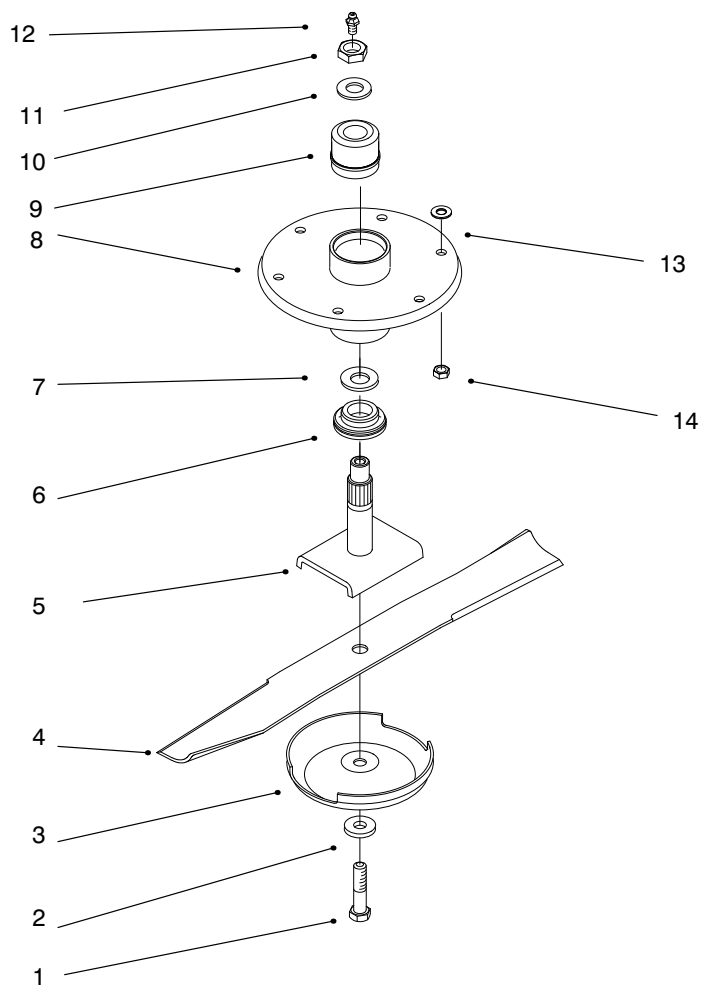


C-1362

SPINDLE ASSEMBLY & BLADE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-2200	Screw - Blade	3	9	46-8530	Bearing Assembly	3
2	67-5770	Washer - Flat	3	10	7-4150	Washer - Thrust	3
3	72-9361	Cup - Anti Scalp	3	11	32146-20	Nut - Lock	1
4	44-6250	Blade	3	12	302-2	Fitting - Grease	3
5	51-3551	Shaft - Spindle (Center)	1	13	3256-24	Washer - Flat	A/R
*	27-0920	Shaft - Spindle (Outer)	2	14	32128-21	Nut - Lock	18
6	27-0950	Spacer - Spindle Bearing	3	*	44-6370	Spindle Housing Assembly (Incl. Ref. # 6-8, 9 & 11-13)	2
7	253-139	Seal - Wave	6				
8	61-4160	Spindle	3				

*Not Illustrated

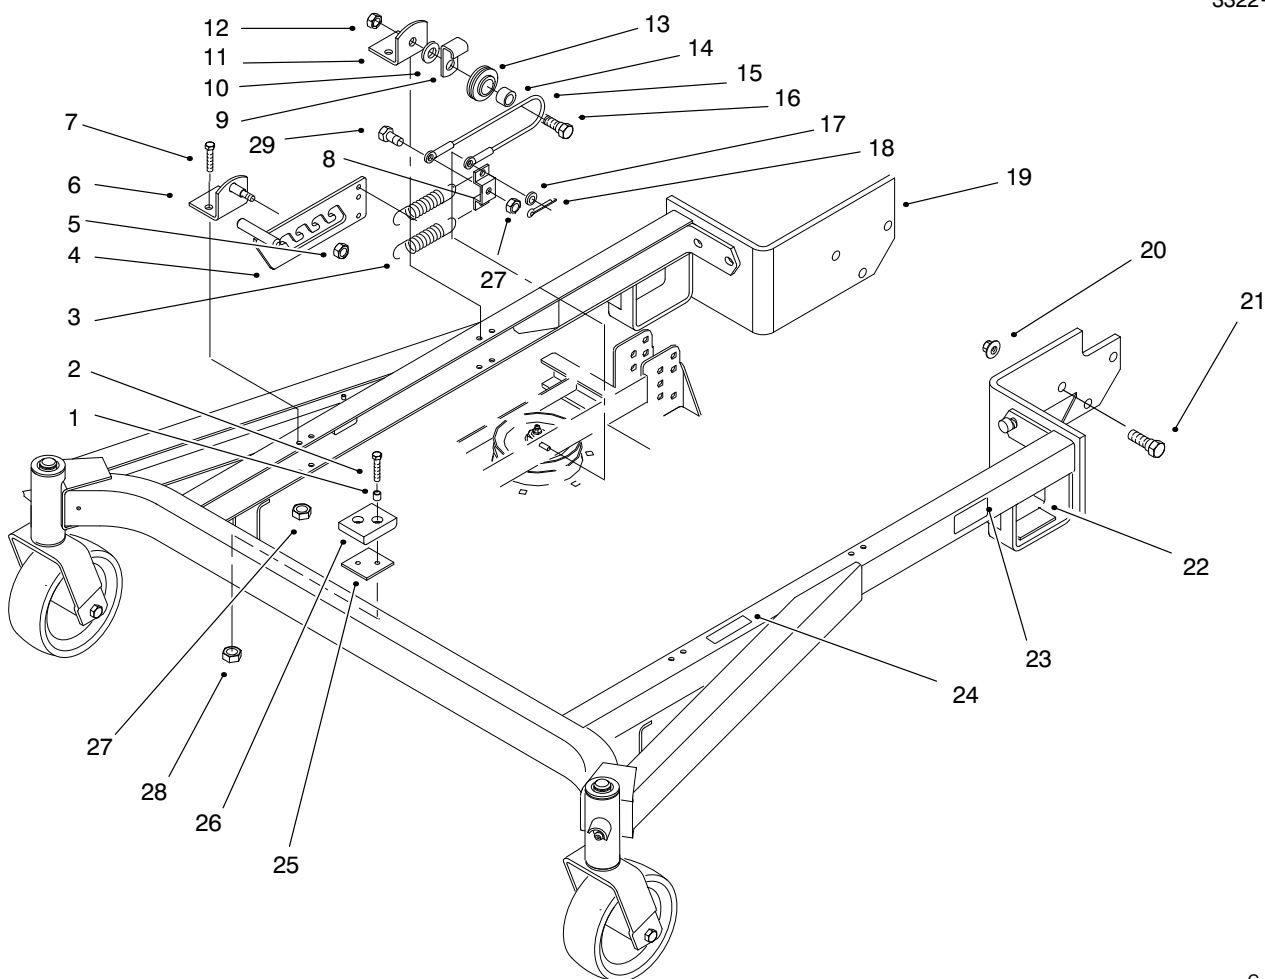


C-1363

CARRIER FRAME

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	40-9520	Spacer	4	16	59-5400	Bolt - Shoulder	2
2	32122-28	Screw - Hex. Hd. Mach.	4	17	3256-1	Washer - Flat	2
3	56-2770	Spring - Extension	3	18	3290-307	Pin - Cotter	2
4	56-3330	Tension Adjusting Control	2	19	16-2009	Carrier Frame Assembly (Incl. Ref. #23, 24)	1
5	32128-13	Nut - Lock	2	20	32128-23	Nut - Lock	8
6	56-3340	Bracket - Tension Adjusting	2	21	3234-6	Screw - Hex. Flange Hd.	6
7	321-4	Screw - Hex	8	22	92-5416	Pad - Rubber	2
8	59-5390	Bracket - Spring	1	23	85-7450	Decal - H.O.C. L. H. 2-5"	1
9	56-2780	Retainer - Cable	2	*	85-7460	Decal - H.O.C. R. H. 2-5"	1
10	252-98	Washer - Thrust	2	24	55-4300	Decal - Warning	2
11	56-3360	Bracket - Pulley	2	25	92-5418	Shim - Front Cushion	3
12	3296-47	Nut - Lock	2	26	92-5417	Cushion - Rubber, Front	2
13	3-8775	Pulley Assembly (Incl. Ref. #14)	2	27	3296-42	Nut - Lock	9
14	256-159	Bushing	2	28	3296-2	Nut - Lock	4
15	56-3350	Cable	2	29	321-5	Screw - Hex Hd	1

*Not Illustrated

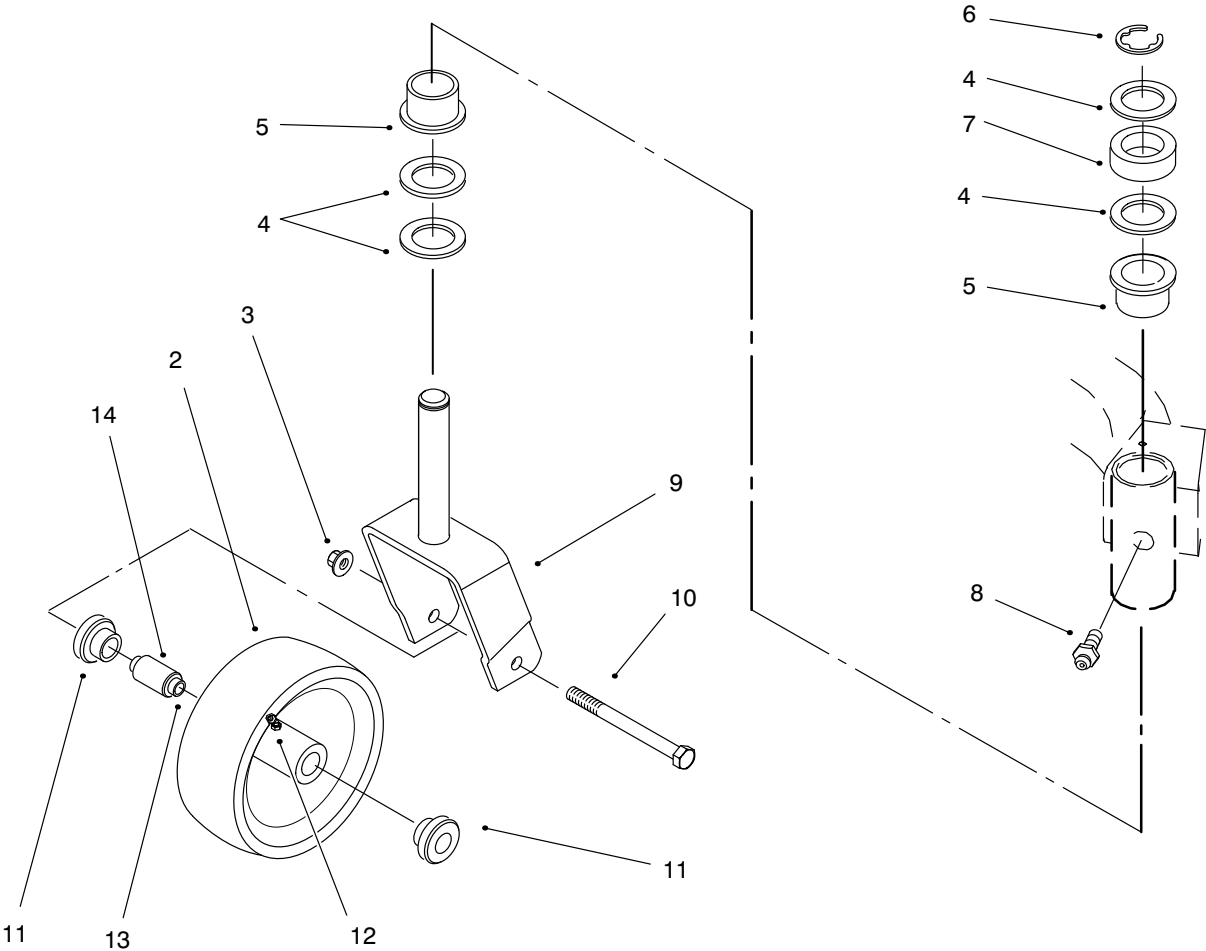

C-1364

CASTER FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	85-5760	Wheel & Tire Assembly (Incl. Ref. #1 & 11-13)	2
3	32128-23	Nut - Lock	2
4	3-6781	Washer - Thrust	8
5	94-1291	Bushing	4
6	32151-91	Ring - Retaining	2
7	93-1167	Spacer	2

Ref. No.	Part No.	Description	No. Used
8	302-5	Fitting - Grease	2
9	92-5408	Fork - Castor	2
10	325-22	Bolt - Wheel	2
11	62-5580	Bushing	2
12	302-40	Fitting - Grease	2
13	62-4340	Bushing - Spanner	2
14	83-4740	Bearing - Roller	2

TORO PART NUMBER INDEX

3322-130

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer - Thrust	6 4 8	92-5408	Fork - Castor	6 9 2
3-8775	Pulley Assembly	5 13 2	92-5416	Pad - Rubber	5 22 2
5-1077	Key - Square	3 14 1	92-5417	Cushion - Rubber, Front	5 26 2
7-0081	Washer - Special	3 7 1	92-5418	Shim - Front Cushion	5 25 3
7-4150	Washer - Thrust	3 3 3	93-1122	Decal	2 7 1
7-4150	Washer - Thrust	4 10 3	93-1167	Spacer	6 7 2
14-0909	Deflector Assembly	2 9 1	94-1291	Bushing	6 5 4
16-2009	Carrier Frame Assembly	5 19 1	98-3269	Decal - Made in USA	2 17 1
27-0920	Shaft - Spindle (Outer)	4 * 2	98-5952	Decal - 62	2 16 1
27-0950	Spacer - Spindle Bearing	4 6 3	99-2842	Spacer - Wheel	1 5 5
27-8580	Idler Socket Assembly	3 11 1	99-6443	Deck Assembly	1 1 1
40-9520	Spacer	5 1 4	249-21	Latch - Draw	2 28 5
41-8440	Spacer - Hardened	2 15 2	252-98	Washer - Thrust	5 10 2
43-8480	Decal - Danger	2 26 1	253-139	Seal - Wave	4 7 6
44-2200	Screw - Blade	4 1 3	256-156	Bushing	2 13 2
44-6250	Blade	4 4 3	256-159	Bushing	5 14 2
44-6260	VBelt - Deck	1 9 1	283-55	Pin - Clevis	1 3 4
44-6291	Cover - Deck L.H.	2 22 1	302-2	Fitting - Grease	3 5 3
44-6301	Plate Assembly Idler	3 16 1	302-2	Fitting - Grease	4 12 3
44-6340	Pulley Hub Assembly	3 17 2	302-5	Fitting - Grease	6 8 2
44-6370	Spindle Housing Assembly	4 * 2	302-40	Fitting - Grease	6 12 2
46-8530	Bearing Assembly	3 1 3	321-4	Screw - Hex	5 7 8
46-8530	Bearing Assembly	4 9 3	321-5	Screw-Hex Hd	5 29 1
51-1530	Bracket - Hinge	2 4 2	325-17	Screw - Hex. Hd.	2 5 2
51-1550	Spring	2 6 2	325-22	Bolt - Wheel	6 10 2
51-3551	Shaft - Spindle (Center)	4 5 1	3211-8	Screw - Hex. Hd.	3 13 1
55-4300	Decal - Warning	5 24 2	3218-5	Nut - Lock	2 21 4
56-2770	Spring - Extension	5 3 3	3231-22	Bolt - Carriage	3 18 18
56-2780	Retainer - Cable	5 9 2	3231-27	Bolt - Carriage	2 1 4
56-3330	Tension Adjusting Control	5 4 2	3234-6	Screw - Hex. Flange Hd.	5 21 6
56-3340	Bracket - Tension Adjusting	5 6 2	3256-1	Washer - Flat	5 17 2
56-3350	Cable	5 15 2	3256-24	Washer - Flat	1 7 10
56-3360	Bracket - Pulley	5 11 2	3256-24	Washer - Flat	4 13 A/R
59-5390	Bracket - Spring	5 8 1	3256-27	Washer - Flat	3 10 1
59-5400	Bolt - Shoulder	5 16 2	3290-307	Pin - Cotter	5 18 2
61-4160	Spindle	4 8 3	3290-321	Screw - Hex. Hd. Mach.	2 27 10
62-4340	Bushing - Spanner	6 13 2	3290-355	Pin -Cotter	1 2 4
62-5580	Bushing	6 11 2	3290-357	Nut - Flange Lock	2 8 4
63-9830	Cover - Deck R.H.	2 11 1	3290-357	Nut - Flange Lock	3 15 6
65-5940	Pulley - Idler	3 6 1	3296-2	Nut - Lock	5 28 4
65-5950	Bushing - Pulley	3 12 1	3296-5	Nut - Lock	3 8 1
66-1340	Decal - Danger	2 2 2	3296-39	Nut - Lock	1 8 10
66-6380	Decal - Deflector Missing	2 3 1	3296-42	Nut - Lock	5 27 9
67-5360	Decal - Shield Missing	2 24 4	3296-45	Nut - Lock	2 19 2
67-5770	Washer - Flat	4 2 3	3296-47	Nut - Lock	5 12 2
68-2730	Wheel - Gauge	1 6 5	3296-71	Nut - Lock	3 9 1
68-8340	Decal - Blade Torque	2 25 1	32122-28	Screw - Hex. Hd. Mach.	5 2 4
72-9361	Cup - Anti Scalp	4 3 3	32128-13	Nut - Lock	5 5 2
74-0290	Spring - Compression	2 14 2	32128-17	Nut - Lock	2 23 10
74-0311	Shaft - Adjusting	2 18 2	32128-21	Nut - Lock	4 14 18
74-1230	Pulley & Hub Assembly	3 2 1	32128-23	Nut - Lock	6 3 2
74-1310	Cover - Deck, Center R.H.	2 12 1	32128-23	Nut - Lock	5 20 8
74-1320	Cover - Deck, Center L.H.	2 20 1	32146-20	Nut - Lock	3 4 1
74-1330	VBelt - Deck Drive	1 4 1	32146-20	Nut - Lock	4 11 1
83-4740	Bearing - Roller	6 14 2	32151-91	Ring - Retaining	6 6 2
85-5760	Wheel & Tire Assembly	6 2 2	32153-5	Nut - Lock	2 10 2
85-7450	Decal - H.O.C. L. H. 2-5	5 23 1			
85-7460	Decal - H.O.C. R. H. 2-5	5 * 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]