 


TORO®

MODEL NO. 03805-90001 & UP

PARTS CATALOG


REELMASTER® 6700D - 4WD TRACTION UNIT

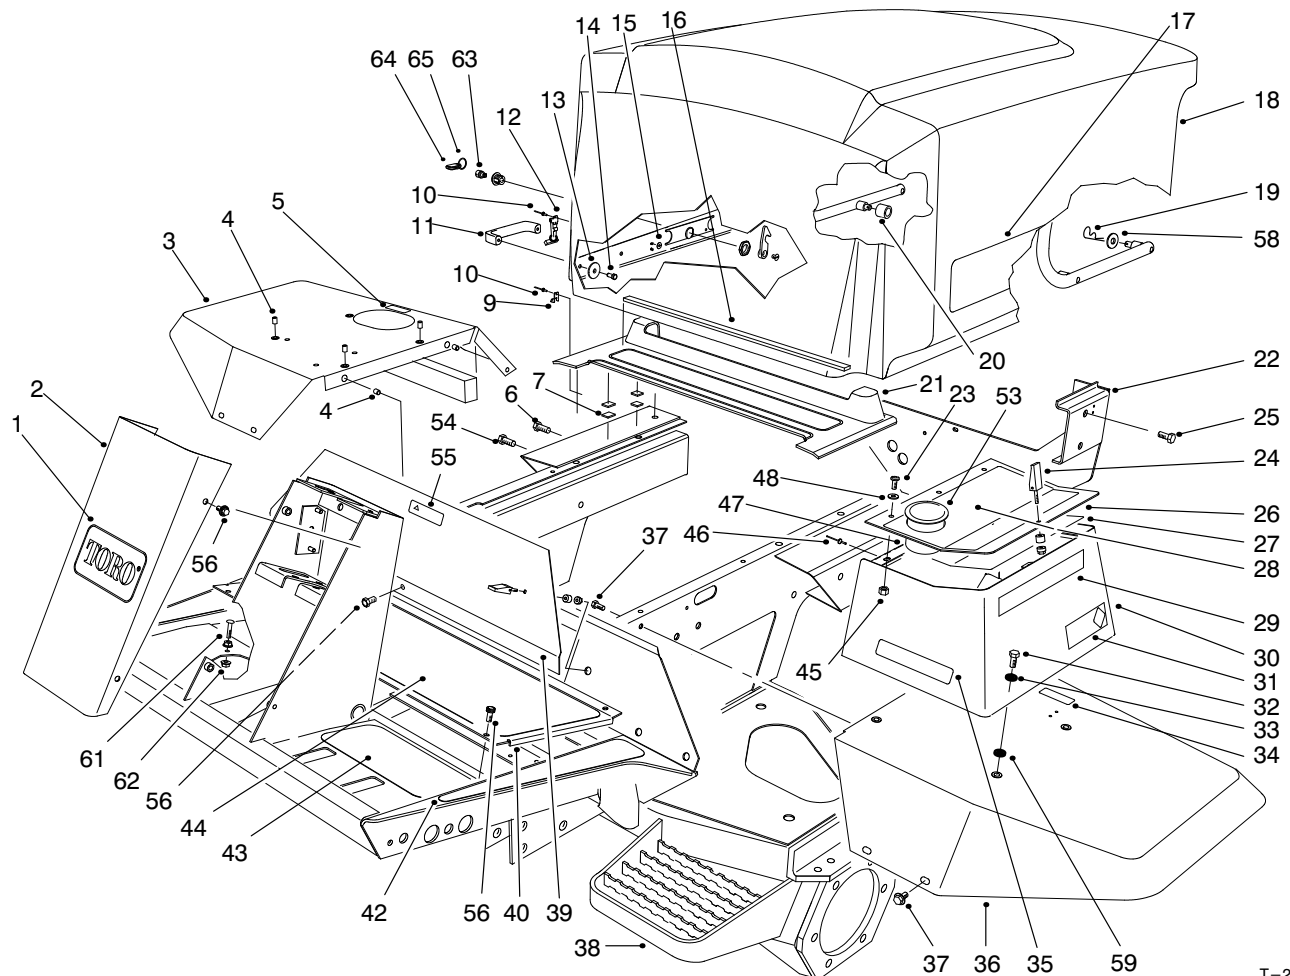

T-2366-9

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal-Toro	1	18	92-7511	Hood	1
2	93-7996	Cover-Tower	1	19	3290-467	Pin-Cotter, Hair	2
3	94-3049	Fender-RH	1	20	93-7582	Hose	1
4	32148-7	Nut-Clinch	5	21	94-2617	Cover-Pump	1
5	93-6686	Decal-Hydraulic Oil	1	22	98-8814	Frame-Rear (Incl. Ref. #1, Page 43)	1
5	88-1980	Decal-Hydraulic Oil (Japan)	1	23	3258-166	Screw	3
6	33106-035	Screw-HHF	8	24	74-5950	Latch-Swell	3
7	93-9155	Velcro	2	25	33108-035	Screw-HHF	8
9	249-40	Keeper	1	26	93-9180	Cover-Box, Tool	1
10	3269-8	Rivet-Pop	4	27	98-3728	Decal-Service	1
11	65-5100	Handle-Hood	1	27	98-8135	Decal-Service (Danish)	1
12	59-9740	Latch-Draw	1	27	98-8136	Decal-Service (Dutch)	1
13	3256-78	Washer-Flat	2	27	98-8137	Decal-Service (Finnish)	1
14	46-8091	Screw-Tapping	2	27	98-8138	Decal-Service (French)	1
15	3269-10	Washer-Flat	2	27	98-8139	Decal-Service (German)	1
16	92-7633	Strip-Bumper, Hood	1	27	98-8140	Decal-Service (Italian)	1
17	92-7524	Decal-RM6700D	2	27	98-8141	Decal-Service (Norwegian)	1

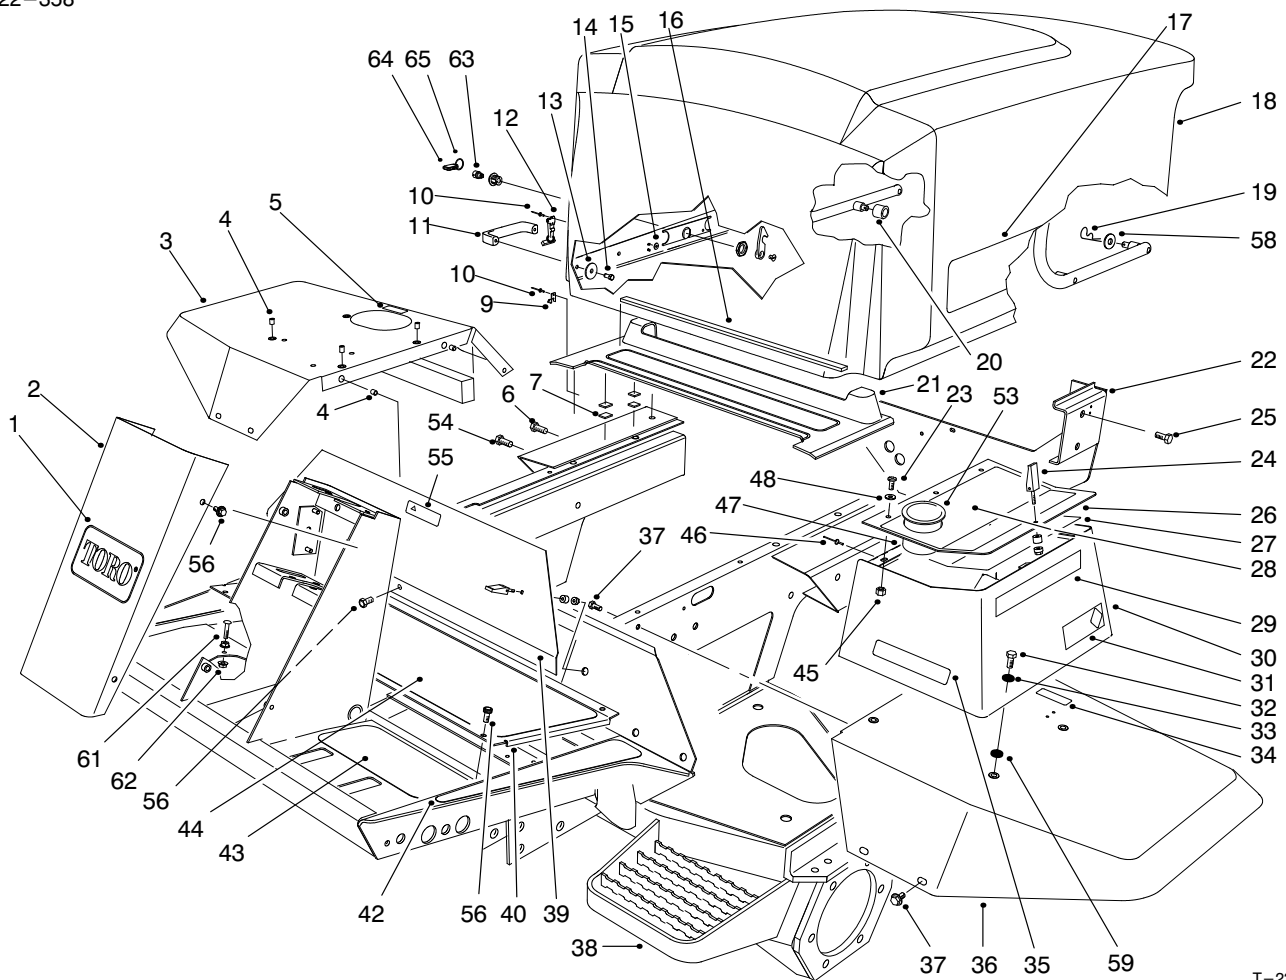 


T-2366-9

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
27	94-2943	Decal-Service (Portuguese)	1	40	75-1410	Plate-Access, Floor	1
27	94-2944	Decal-Service (Spanish)	1	42	93-7592	Tread-Footrest	2
27	94-2945	Decal-Service (Swedish)	1	43	75-0620	Tread-Foot, LH	1
27	94-2941	Decal-Service (Japan)	1	*	75-0610	Tread-Foot, RH	1
28	93-1262	Decal-Hillside	1	44	75-0630	Tread-Foot, Center	1
28	94-4572	Decal-Hillside (Japan)	1	45	32128-33	Nut-HFH	3
29	72-3560	Decal-4WD	1	46	93-8744	Rivet-Pop	3
30	75-5810	Box-Tool	1	47	75-5780	Hinge-Cover	1
31	93-0096	Decal-ACE	2	48	3256-1	Washer-Flat	3
32	322-3	Screw-HH	4	53	94-1410	Holder-Can, Beverage	1
33	3256-3	Washer-Flat	4	54	3234-18	Screw-Flange	2
34	93-6680	Decal-Fuel, Diesel	1	55	93-9425	Decal-Danger	1
34	84-2860	Decal-Fuel, Diesel (Japan)	1	55	94-4579	Decal-Danger (Japan)	1
35	93-6689	Decal-No Riders	1	56	3234-7	Screw	9
35	84-3420	Decal-No Riders (Japan)	1	58	66-6480	Washer	2
36	75-3860	Fender-LH	1	59	66-2920	Washer	4
37	3234-14	Screw-Flange	10	61	17-9420	Screw-Handle	1
38	94-9953	Frame-Front (Incl. Ref. #42, 43 & on Page 33, #31)	1	62	32128-20	Nut-HFH	2
39	75-1390	Cover-Access, Front	1	63	98-5398	Asm-Latch, Hood	1
				64	99-8970	Key-Latch, Hood	1
				65	98-9321	Ring-Key	1

 *Not Illustrated

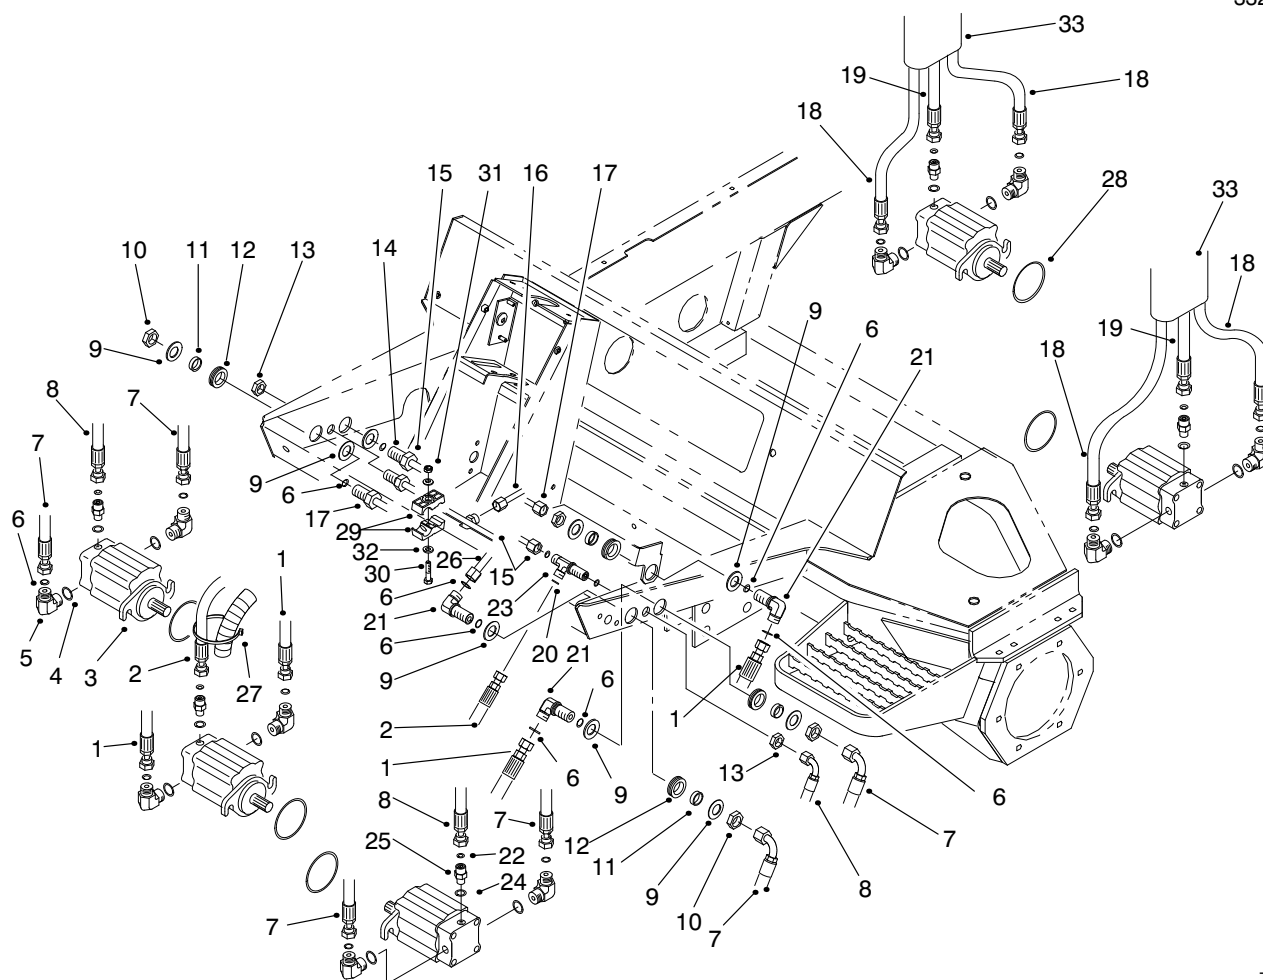


T-2090-5

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7556	Asm-Hose	2	18	99-5613	Asm-Hose	4
2	92-7560	Asm-Hose	1	19	99-5614	Asm-Hose	2
3	98-9999	Motor-Hydraulic	5	20	237-22	O-Ring	3
4	237-79	O-Ring	10	21	93-9151	Fitting-Hydraulic 90° (Incl. Ref. #6)	3
5	340-98	Fitting-Hydraulic 90° (Incl. Ref. #4 & 6)	10	22	237-21	O-Ring	5
6	237-30	O-Ring	18	23	340-68	Fitting-Hydraulic, Tee (Incl. Ref. #20)	1
7	92-7555	Asm-Hose	4	24	237-78	O-Ring	5
8	92-7559	Asm-Hose	2	25	340-92	Fitting-Hydraulic (Incl. Ref. #22 & 24)	5
9	69-8930	Washer	10	26	93-4217	Asm-Tube	1
10	340-127	Nut-Bulkhead	5	27	3290-378	Tie-Cable	1
11	69-8960	Spacer	5	28	93-9783	O-Ring	10
12	240-5	Grommet	5	29	56-7972	Clamp-Tube	4
13	340-70	Nut-Bulkhead	2	30	322-7	Screw-HH	2
14	93-4216	Asm-Tube (Incl. Ref. #6)	1	31	3296-47	Nut-Lock	2
15	93-4223	Asm-Tube, Front Drain (Incl. Ref. #20)	1	32	3256-23	Washer-Flat	4
16	93-4222	Asm-Tube, Drain Return	1	33	99-5617	Sleeve-Protector	2
17	93-4219	Asm-Tube, #1 Bulkhead (Incl. Ref. #6)	1				

 3322-358

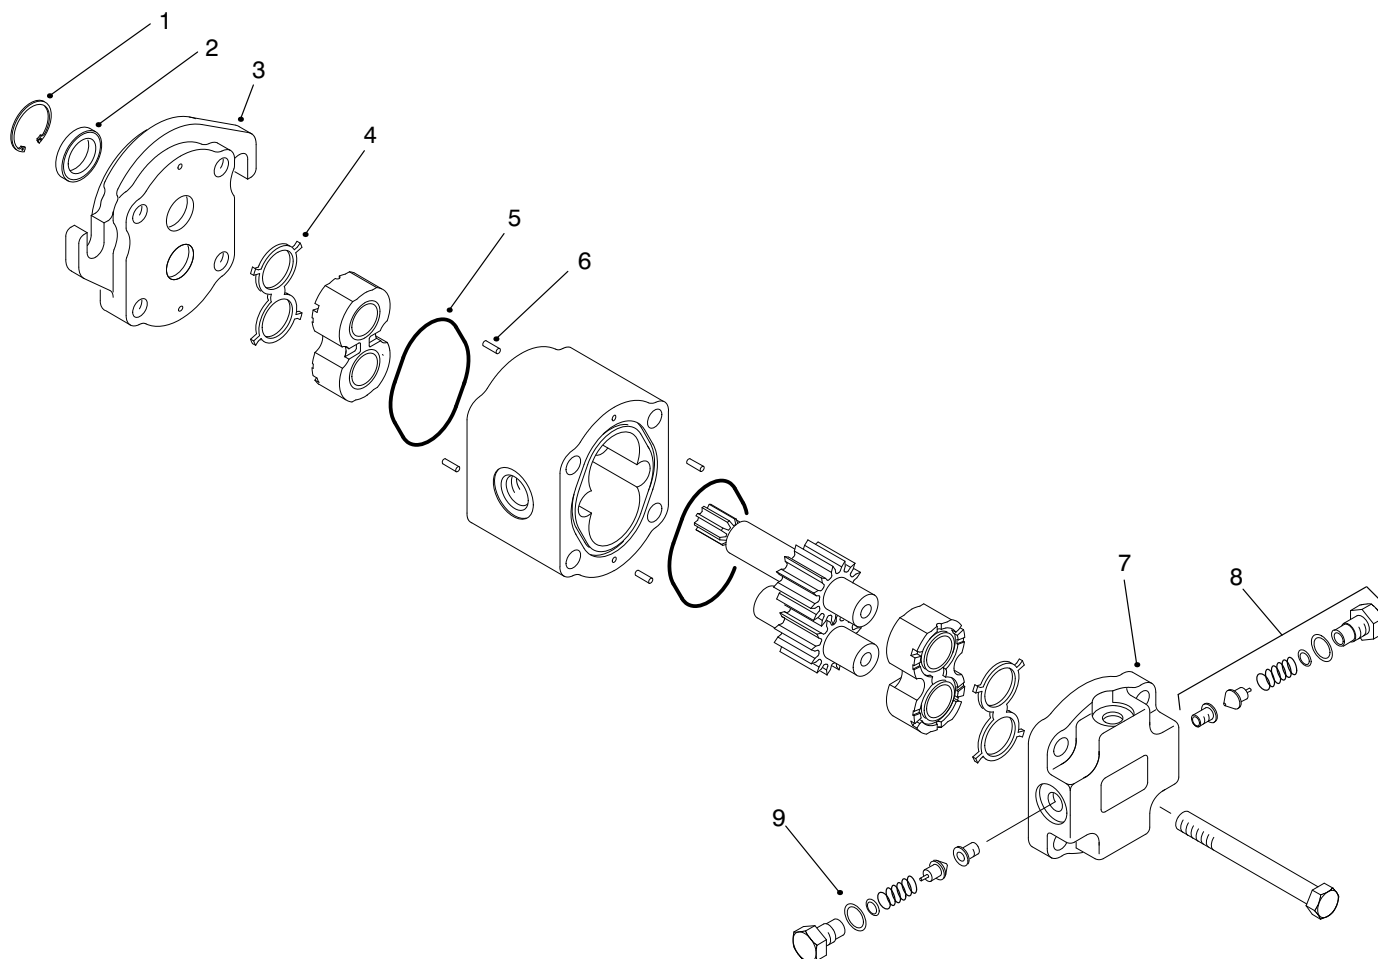


T-2091-3

REEL MOTOR NO. 98-9999 ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2		Seal-Shaft	1
3		Flange	1
4		E-Seal	2
5		O-Ring	2
6		Pin-Dowel	4
7		Block-Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve-Adjusting	2
9		O-Ring	2
*	93-9152	Kit-Flange (Incl. Ref. #1-3 & 6)	1
*	98-9997	Kit-Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93-9154	Kit-Valve Block (Incl. Ref. #6 & 7)	1

 
*Not Illustrated

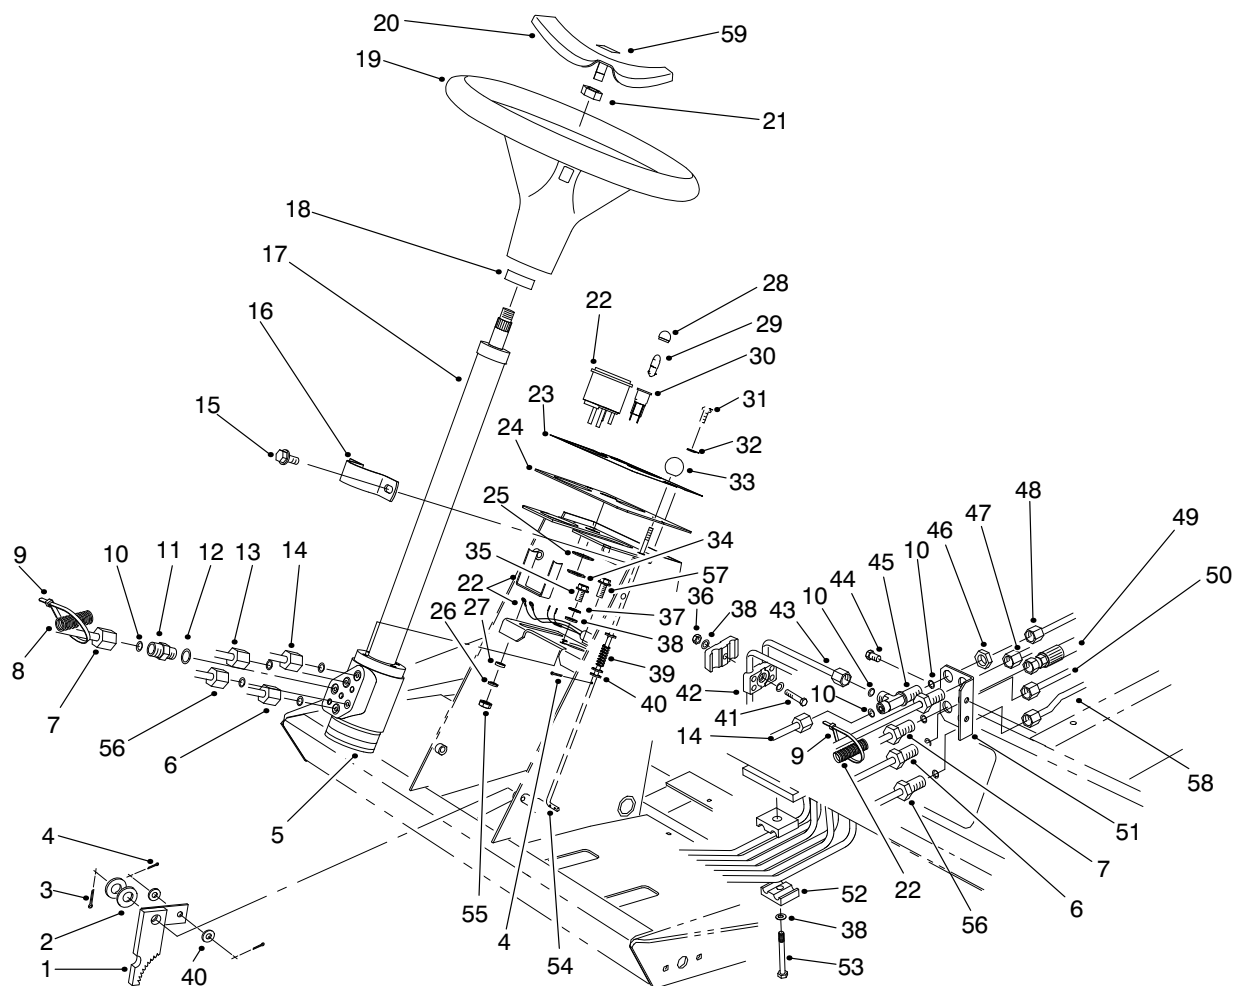

T-2464-4

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	24	93-7998	Plate-Instrument	1
2	3256-26	Washer-Flat	2	25	218-536	Washer-Lock	1
3	3272-10	Pin-Cotter	1	26	3253-2	Washer-Lock	3
4	3272-5	Pin-Cotter	3	27	3256-14	Washer-Flat	2
5	99-8959	Asm-Valve, Steering	1	28	218-533	Lens-Red	1
6	94-3059	Tube-Steering, RH	1	29	93-7480	Bulb-LED	1
7	94-3061	Tube-Steering, Front, In	1	30	44-2210	Asm-Light, Warning	1
8	99-8963	Harness-Wire, Main	1			(Incl. Ref. #25, 28, 29, & 34)	
9	3290-378	Tie-Cable	4	31	87-6620	Screw-Torx Pan Hd.	2
10	237-22	O-Ring	10	32	3256-1	Washer-Flat	2
11	340-2	Adapter		33	233-17	Knob	1
		(Incl. Ref. #10 & 12)	4	34	218-535	Nut-Lock	1
12	237-42	O-Ring	4	35	33103-025	Screw-HHF	1
13	94-3060	Tube-Steering, Front LH	1	36	3296-47	Nut-Lock	1
14	94-3062	Tube-Steering, Front, Out	1	37	3255-8	Washer-Lock	1
15	3234-7	Screw	2	38	3256-23	Washer-Flat	6
16	75-2810	Bracket-Column, Steering	1	39	95-1821	Spring-Brake, Park	1
17	94-9951	Asm-Column, Steering	1	40	3256-22	Washer-Flat	5
18	21-9260	Cover-Dust	1	41	322-7	Screw-HH	1
19	98-1471	Wheel-Steering	1	42	56-7972	Clamp	2
		(Incl. Ref. #20)	1	43	94-1447	Tube-Steering, Return	1
20	98-1468	Cover	1	44	32144-11	Screw-Thread Forming	2
21	94-9952	Nut-Jam	1	45	340-68	Fitting-Tee, Bulkhead	1
22	93-4213	Asm-Speedometer	1			(Incl. Ref. #10)	
		(Incl. Ref. #26, 27 & 55)	1	46	340-70	Nut-Lock, Bulkhead	5
23	93-1263	Decal-Tower	1	47	92-7495	Asm-Tube, Steering Rear	1
23	94-4573	Decal-Tower (Japan)	1	48	92-7602	Asm-Tube, Return	1

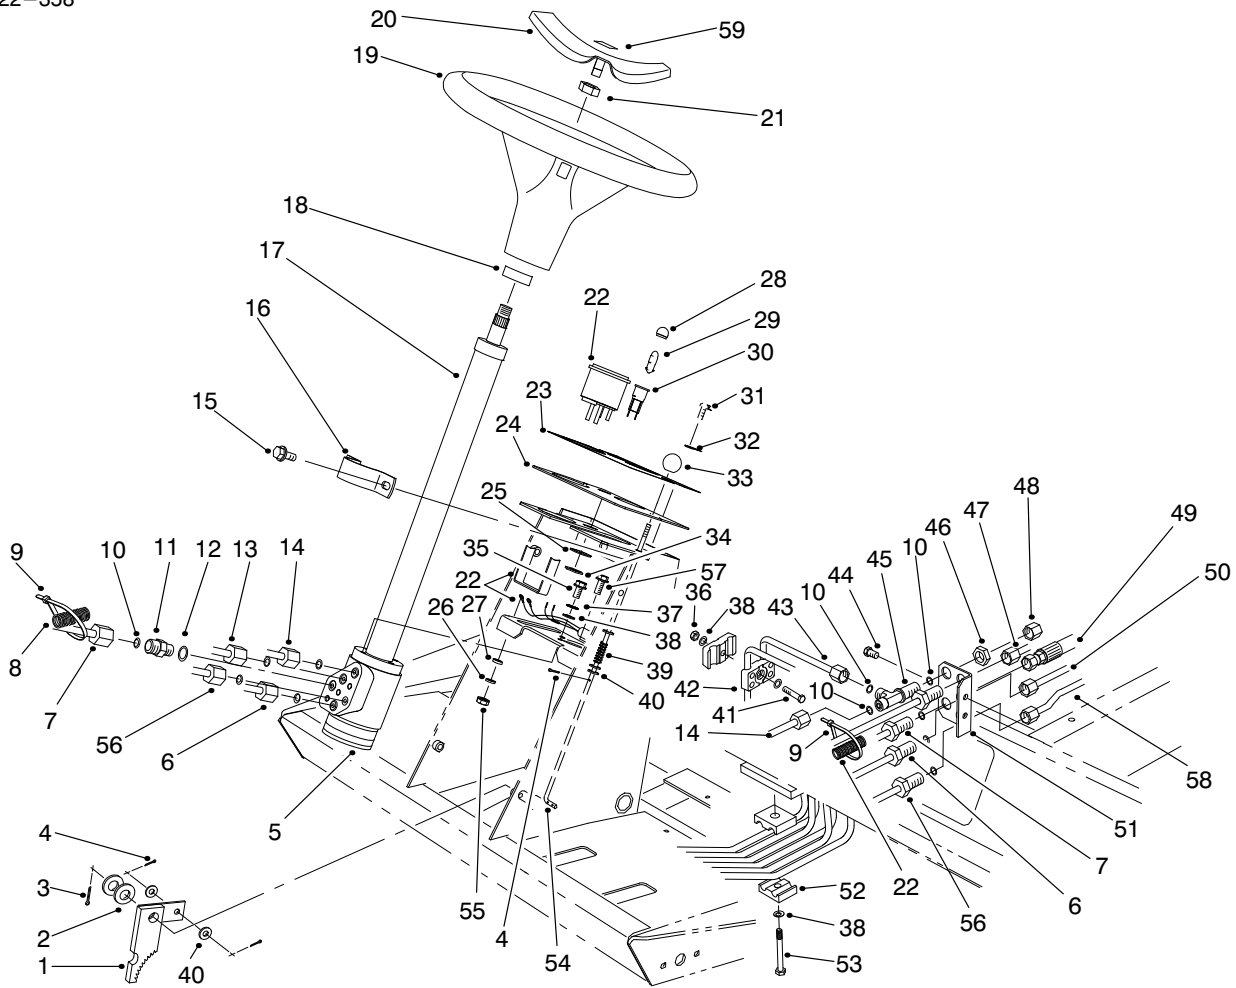 


T-2464-4

STEERING TOWER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
49	92-7622	Hose-Steering	1
50	92-7494	Asm-Tube Steering Rear	1
51	92-7606	Bracket-Bulkhead	1
52	56-7973	Clamp	6
53	322-6	Screw-HH	3
54	75-1490	Rod-Brake, Park	1

Ref. No.	Part No.	Description	No. Used
55	3219-14	Nut-Hex.	9
56	94-3071	Asm-Tube, Front, Aux.	1
57	33103-020	Screw-HHF	2
58	92-7601	Asm-Tube, Rear, Aux.	1
59	98-1459	Decal-Urethane, Toro	1

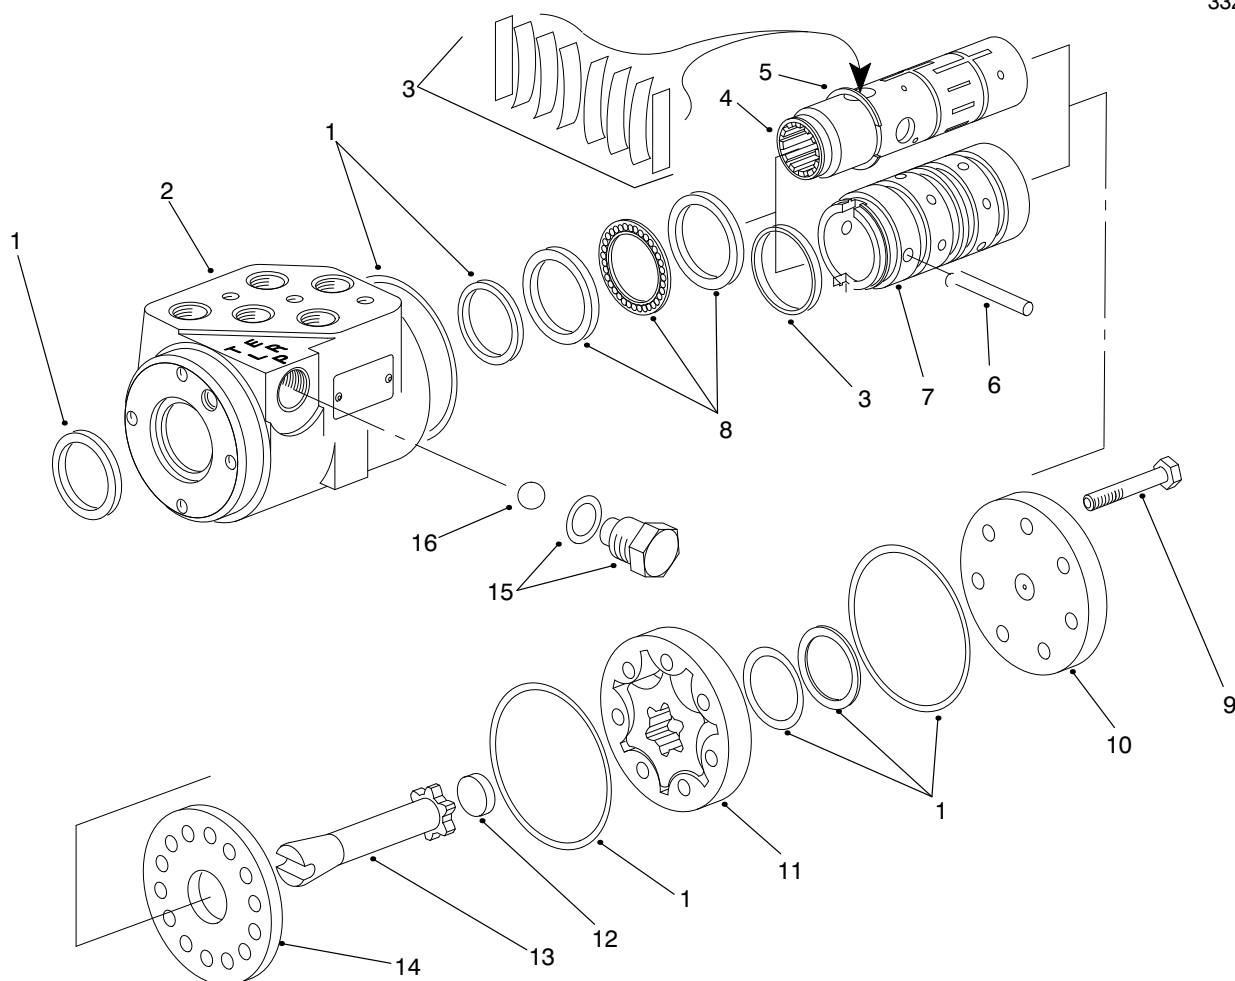 


T-3216

STEERING VALVE ASSEMBLY NO. 99-8959

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit-Seal	1	9	94-4088	Screw	7
†2		Housing	1	10	94-4089	Cap-End	1
3	94-4095	Kit-Spring, Centering	1	11	94-4090	Gerotor	1
†4		Spool	1	12	94-4091	Spacer	1
5	94-4098	Ring-Retaining	1	13	94-4093	Drive	1
6	94-4094	Pin	1	14	94-4092	Plate-Wear	1
†7		Sleeve	1	15	94-4097	Asm-Plug	1
8	94-4096	Kit-Bearing	1	16	94-4100	Ball	1

 † Not Serviced Separately.

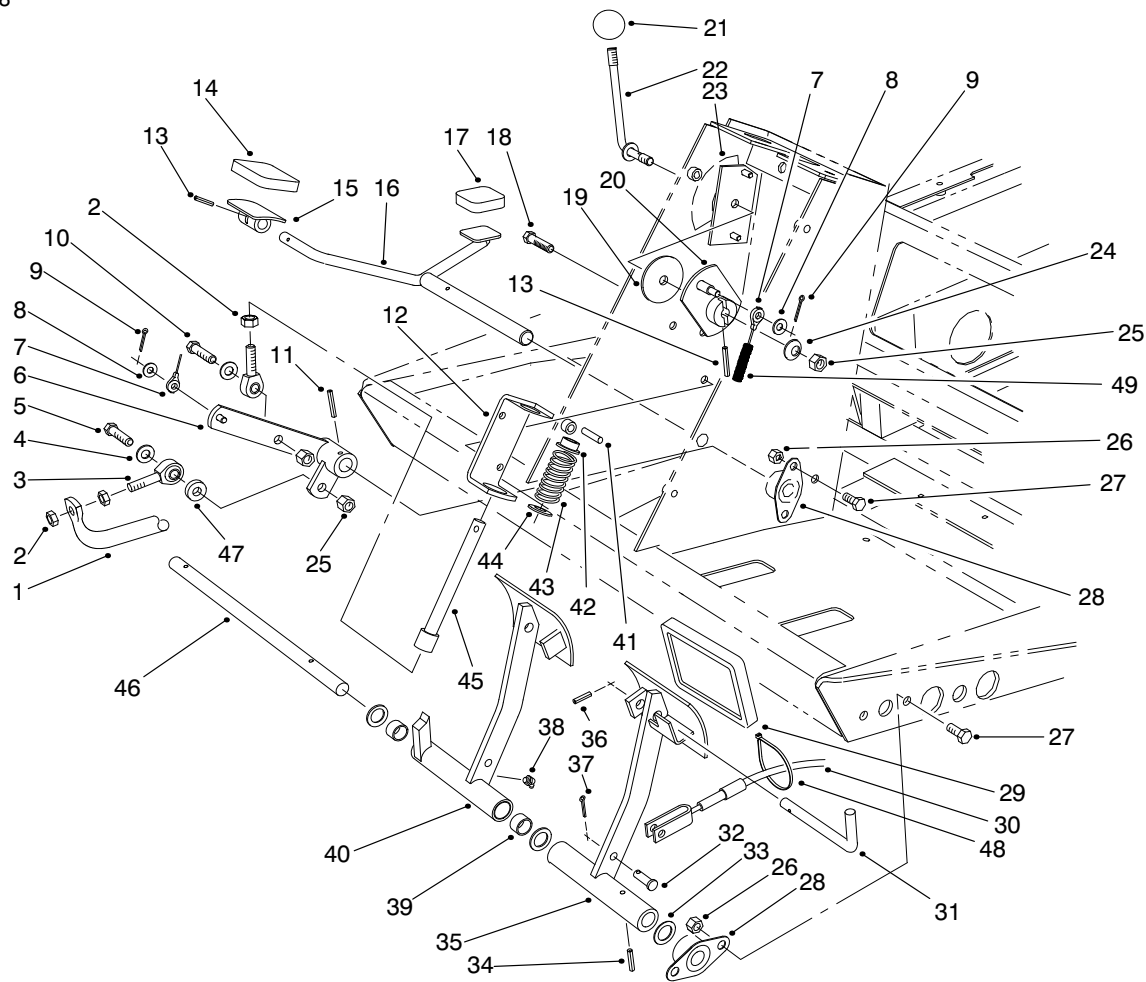


T-2063-4

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube-Control, Pump	1
2	3220-3	Nut-Jam	3
3	2411-36	Bearing-Rod End	2
4	3256-24	Washer-Flat	2
5	323-9	Screw-HH	1
6	75-3270	Hub-Pivot, Traction	1
7	75-6580	Cable-Pedal	1
8	3256-22	Washer-Flat	2
9	3272-2	Pin-Cotter	2
10	323-7	Screw-HH	1
11	32121-6	Pin-Roll	1
12	92-7608	Bracket-Spring	1
13	32121-45	Pin-Roll	2
14	74-9100	Pad-Pedal, Forward	1
15	49-6440	Pedal-Accelerator	1
16	75-2970	Pedal-Traction	1
17	74-9110	Pad-Pedal, Reverse	1
18	32144-14	Screw-HH	2
19	75-6550	Disc-Friction	1
20	75-6510	Bracket-Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	93-6699	Decal-Fast/Slow	1
23	84-3500	Decal-Fast/Slow (Japan)	1
24	3290-461	Washer-Belleville	1
25	3296-39	Nut-Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut-HFH	8
27	322-3	Screw-HH	8
28	256-236	Bearing-Flange	4
29	93-8742	Pad-Brake	2
30	92-7530	Asm-Cable, Brake LH	1
*	92-7529	Asm-Cable, Brake RH	1
31	63-7880	Pin-Latch, Brake	1
32	283-58	Pin-Clevis	2
33	3256-69	Washer-Flat	3
34	32121-16	Pin-Roll	1
35	75-1440	Pedal-Brake, LH	1
36	32121-50	Pin-Roll	1
37	3272-10	Pin-Cotter	2
38	302-60	Fitting-Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal-Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin-Roll	1
42	92-7610	Retainer-Spring	1
43	60-5700	Spring-Compression	1
44	3256-5	Washer-Flat	1
45	92-7609	Shaft-Spring	1
46	75-1470	Pin-Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie-Cable	1
49	95-7151	Tube-Convolute	1

 *Not Illustrated

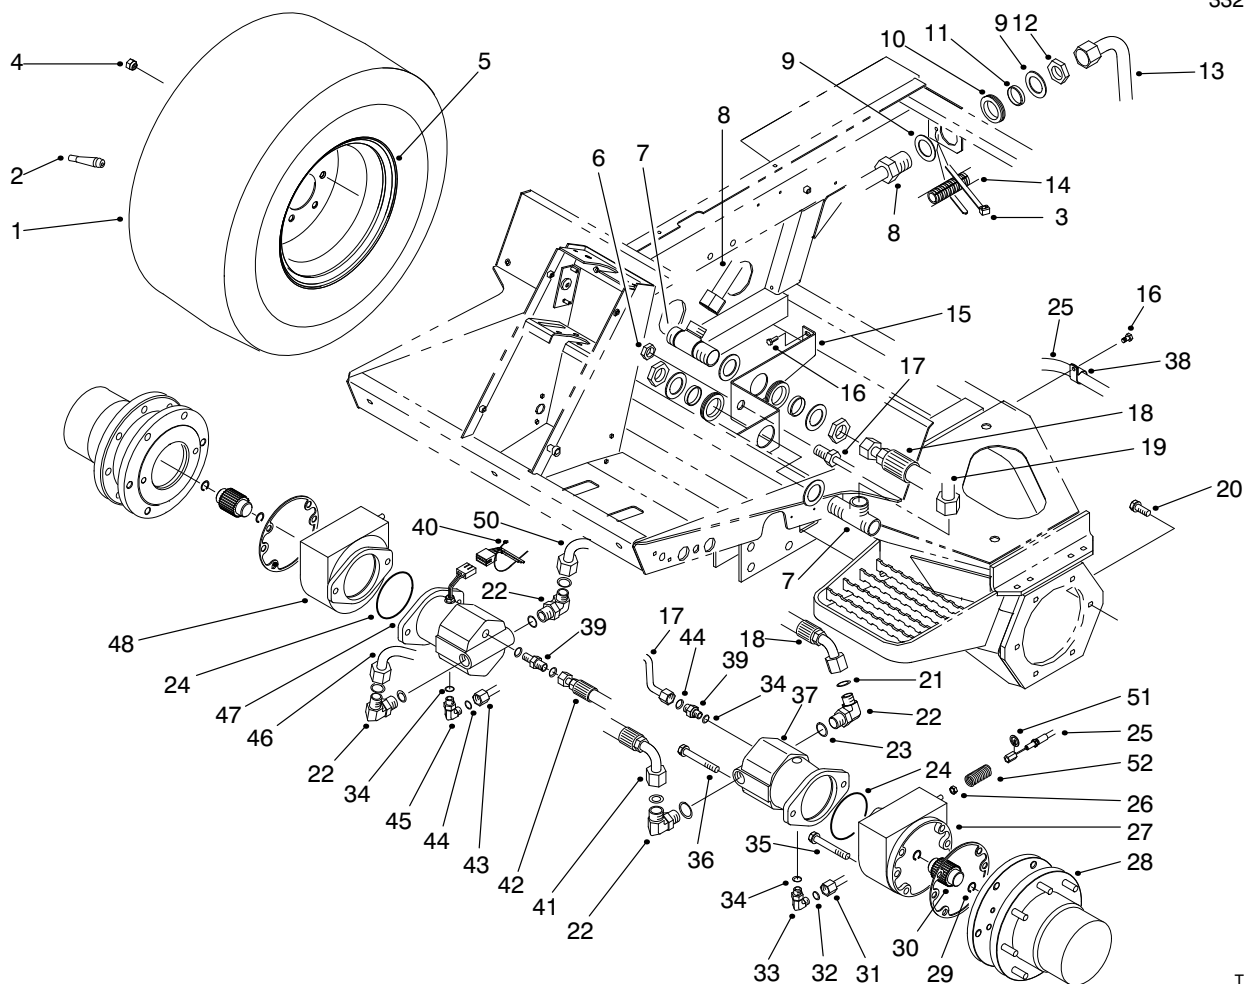


T-2364-3

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-3465	Tire	2	28	92-7415	Asm-Drive, Planetary	2
2	232-24	Stem-Valve	2	29	93-7972	Ring-Retaining	4
3	3290-379	Tie-Cable	2	30	93-7966	Shaft-Splined, Brake	2
4	92-7483	Nut-Lug	16	31	92-7598	Asm-Tube, Frt. Drain	1
5	95-3464	Rim	2	32	237-22	O-Ring	1
6	340-127	Nut-Bulkhead	1	33	340-18	Fitting-Hydraulic 90° (Incl. Ref. #32 & 34)	1
7	92-7550	Fitting-Tee, Bulkhead (Incl. Ref. #49)	2	34	237-79	O-Ring	4
8	92-7474	Asm-Tube, Front	1	35	33106-090	Screw-HHF	8
9	69-8920	Washer	6	36	33116-120	Screw-HH	4
10	240-2	Grommet	3	37	92-7385	Motor-Planetary	1
11	69-8950	Spacer	3	38	2412-93	R-Clamp	2
12	340-128	Nut-Bulkhead	3	39	340-5	Fitting-Hydraulic (Incl. Ref. #34 & 44)	2
13	92-7473	Asm-Tube, Rear	1	40	3290-378	Tie-Cable	2
14	99-8963	Harness-Wire, Main	1	41	92-7487	Asm-Tube	1
15	92-7455	Plate-Bulkhead	1	42	92-7488	Asm-Hose	1
16	32144-11	Screw-Thread Forming	5	43	92-7478	Asm-Tube, Motor RH	1
17	92-7477	Asm-Tube, Motor Drain	1	44	237-30	O-Ring	3
18	92-7486	Asm-Hose	1	45	340-98	Fitting-Hydraulic 90° (Incl. Ref. #34 & 44)	1
19	92-7485	Asm-Hose	1	46	92-7476	Asm-Tube, Traction	1
20	33106-030	Screw-HHF	12	47	93-7476	Motor-Hydraulic W/Sensor	1
21	237-58	O-Ring	4	48	92-7414	Asm-Brake, RH	1
22	340-142	Fitting-Hydraulic 90° (Incl. Ref. #21 & 23)	4	*49	340-65	O-Ring	6
23	237-81	O-Ring	4	50	92-7475	Asm-Tube, Traction	1
24	237-166	O-Ring	2	51	94-3050	Plate-Spring	2
25	92-7530	Cable-Brake, LH	1	52	94-3088	Spring-Brake	2
26	3218-4	Nut-Jam	2				
27	92-7417	Asm-Brake, LH	1				

 *Not Illustrated

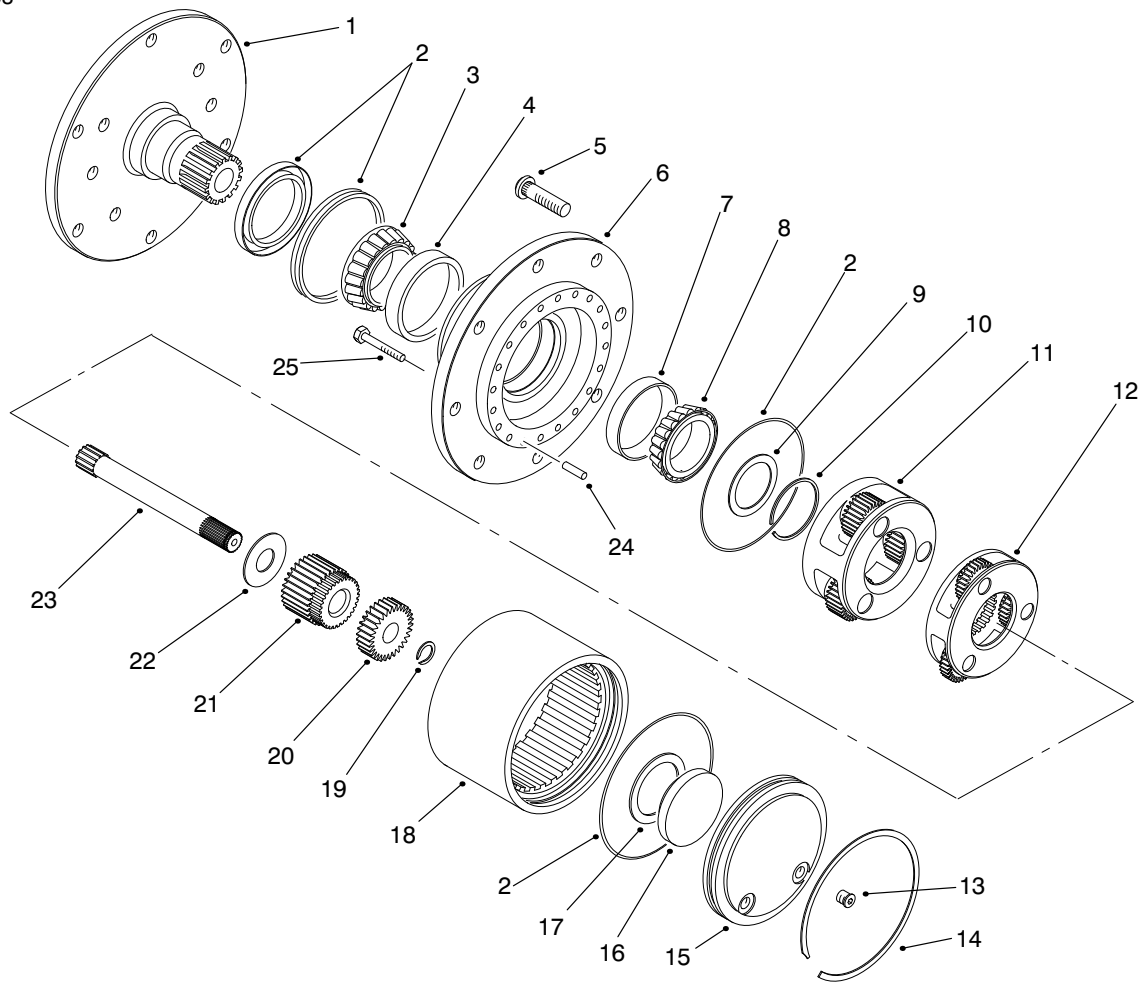


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1
2	93-7474	Kit-Seal	1
3	93-7451	Cone-Bearing	1
4	93-7452	Cup-Bearing	1
5	93-7455	Stud-Wheel	8
6	93-7453	Housing	1
7	93-7470	Cup-Bearing	1
8	93-7469	Cone-Bearing	1
9	93-7468	Washer-Thrust	1
10	93-7467	Ring-Retaining, External	1
11	93-7472	Asm-Carrier, Secondary	1
12	93-7473	Asm-Carrier, Primary	1
13	93-7461	Plug-Pipe	2
14	93-7462	Ring-Retaining, Internal	1

Ref. No.	Part No.	Description	No. Used
15	93-7458	Plate-Cover	1
16	93-7457	Spacer-Input	1
17	93-7460	Washer-Thrust	1
18	93-7456	Gear-Ring	1
19	93-7459	Ring-Retaining, External	1
20	93-7463	Gear-Sun	1
21	93-7464	Gear-Sun	1
22	93-7465	Washer-Thrust	1
23	93-7471	Shaft-Input	1
24	93-7466	Pin-Dowel	2
25	93-7454	Screw-HH	18
*	92-7415	Asm-Complete (Incl. Ref. #1-25)	1

 *Not Illustrated

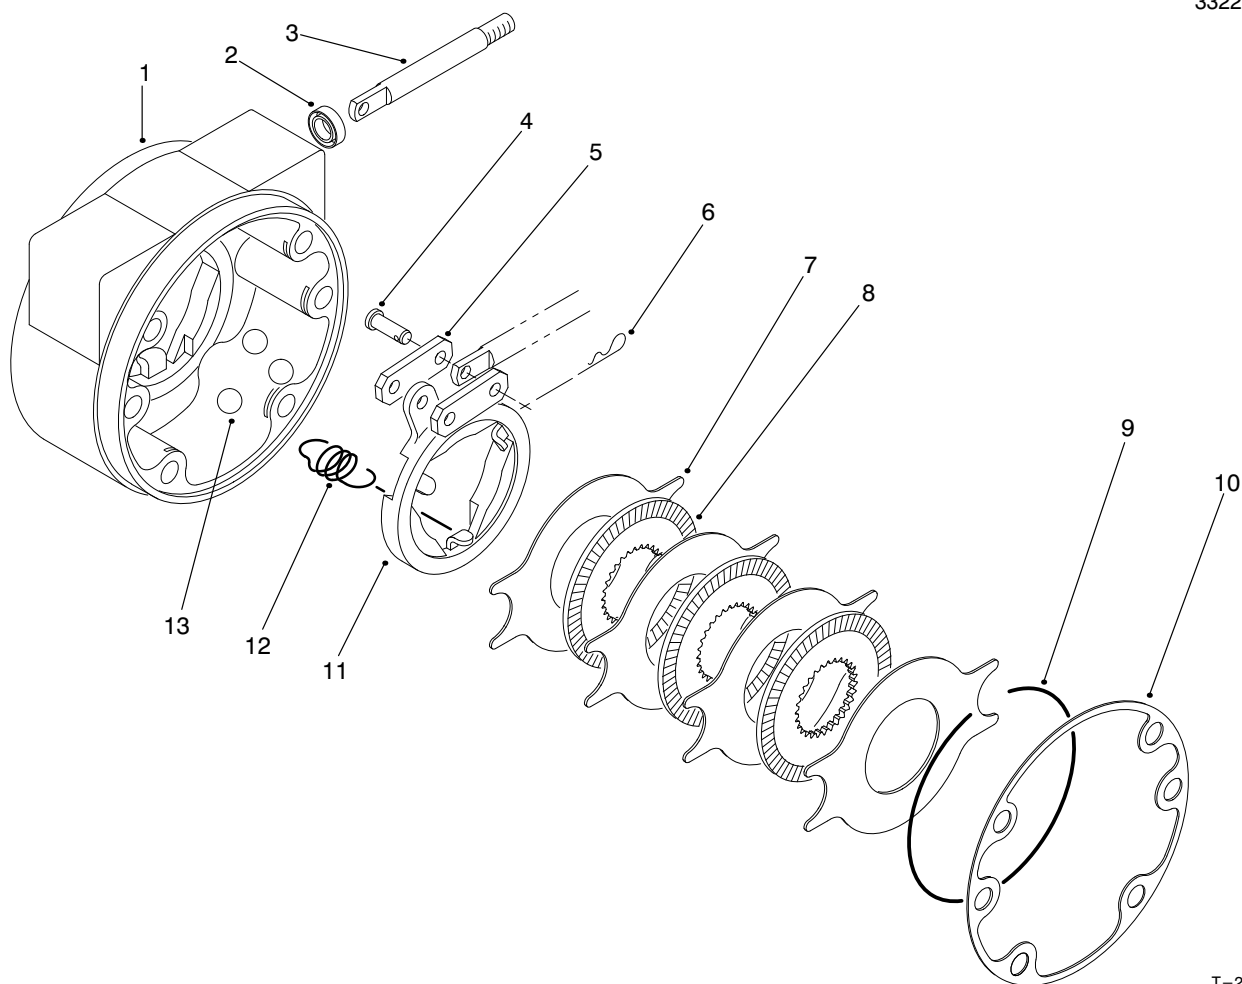


T-2071-1

BRAKE ASSEMBLY 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Housing-Brake, LH	1	7	93-7986	Disc-Stationary	4
†*		Housing-Brake, RH	1	8	93-7981	Disc-Rotating	3
2	93-7977	Seal	1	9	93-7976	Ring-Retaining	1
3	93-7978	Rod-Pull	1	10	93-7984	Gasket	1
4	93-7983	Pin-Clevis	2	11	93-7982	Actuator	1
5	93-7980	Link	2	12	93-7987	Spring-Extension	3
6	93-7979	Pin-Cotter, Hair	2	13	93-7985	Ball	3

*Not Illustrated

 †Not Serviced Separately

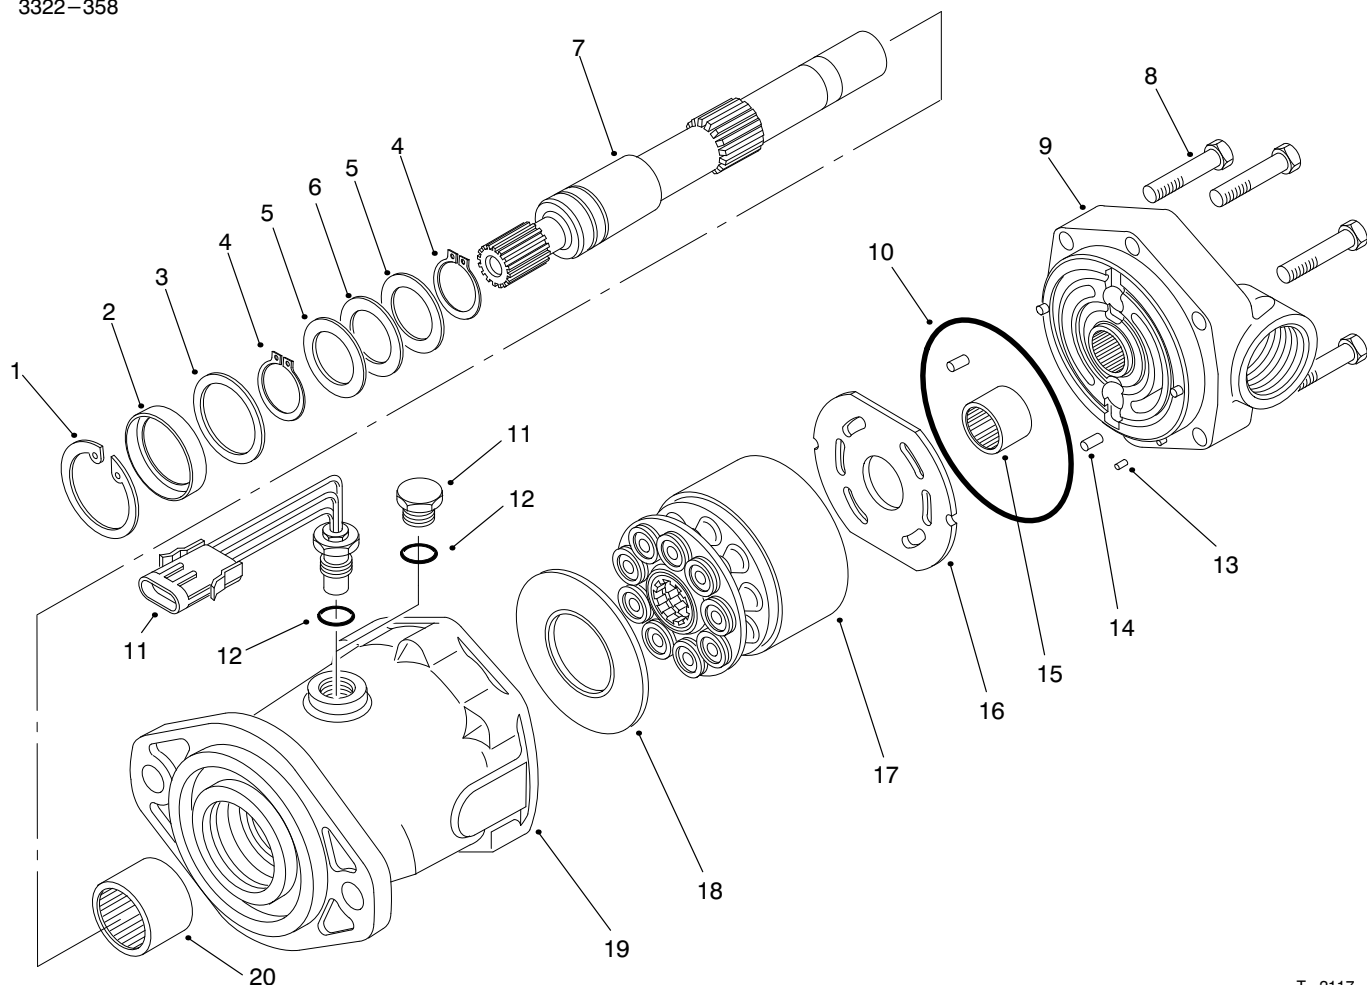

T-2117-2


HYDRAULIC MOTOR ASM NO. 92-7385 RH & 93-7476 LH

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm-Backplate (Incl. Ref. #13-15)	1
10	76-6980	O-Ring	1
†11	94-3009	Asm-Plug (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
‡11	94-3010	Sensor-Speed Pickup (Incl. Ref. #12)	1
12		O-Ring	1
13		Pin-Dowel	1
14		Pin-Dowel	3
15		Bearing-Needle	1
16	94-3003	Plate-Valve	1
17	76-6910	Kit-Rotating	1
18	76-6970	Insert-Camplate	1
19	94-3006	Housing (Incl. Ref. #20)	1
20		Bearing-Needle	1

† Used on 93-7385 RH Motor.

 
‡ Used on 93-7476 LH Motor.

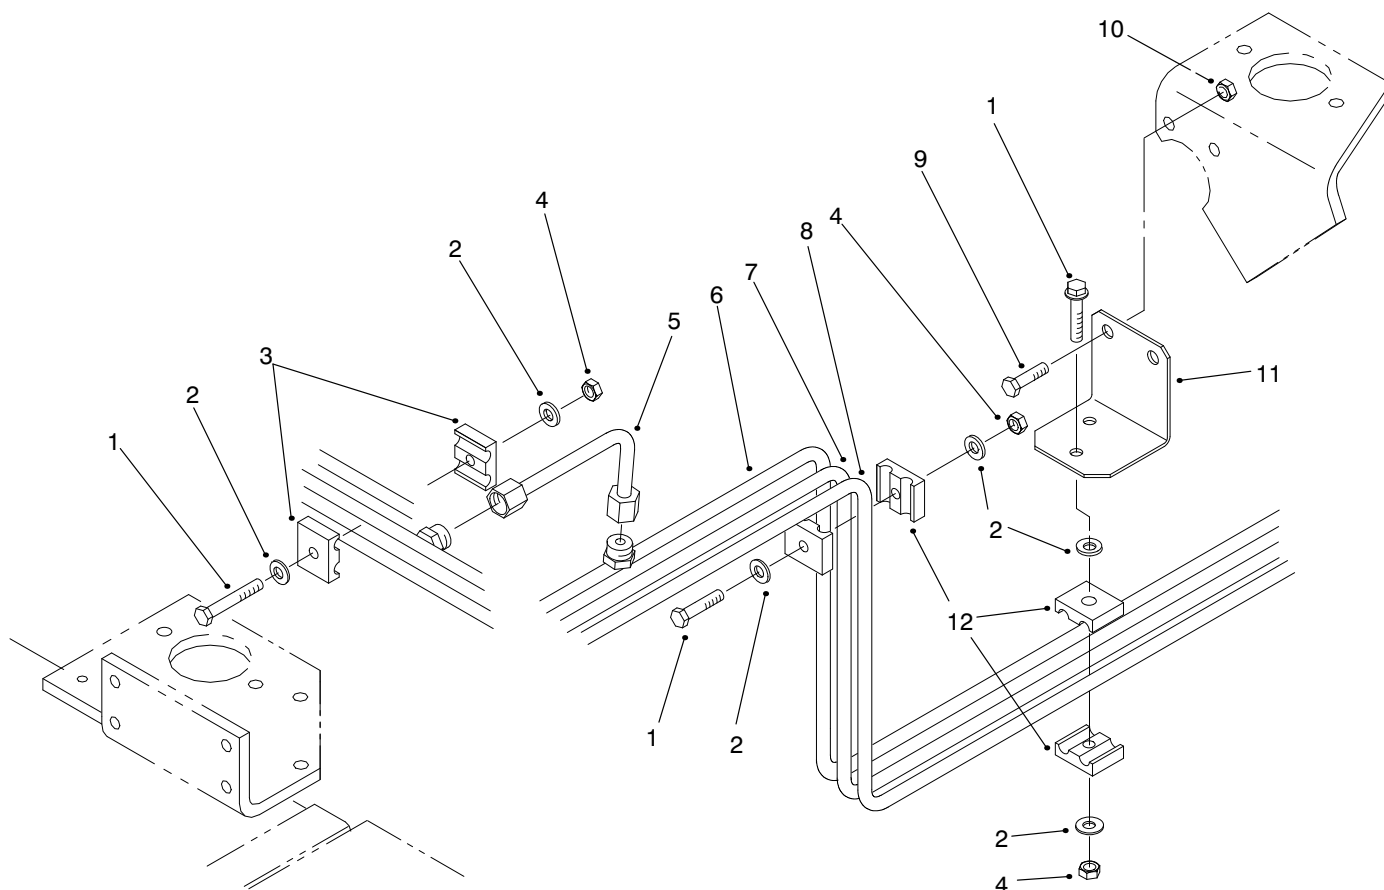

T-2365-1

HYDRAULIC TUBES & CLAMPS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-7	Screw-HH	3	7	92-7494	Asm-Tube, Rear Steering	1
2	3256-23	Washer-Flat	7	8	92-7495	Asm-Tube, Rear Steering	1
3	56-7972	Clamp-Tube	2	9	323-6	Screw-HH	2
4	3296-47	Nut-Lock	3	10	32128-21	Nut-HFH	2
5	93-4206	Asm-Tube, Drain	1	11	94-2834	Bracket-Clamp	1
6	92-7553	Asm-Tube, Rear Drain	1	12	56-7973	Clamp-Tube	4

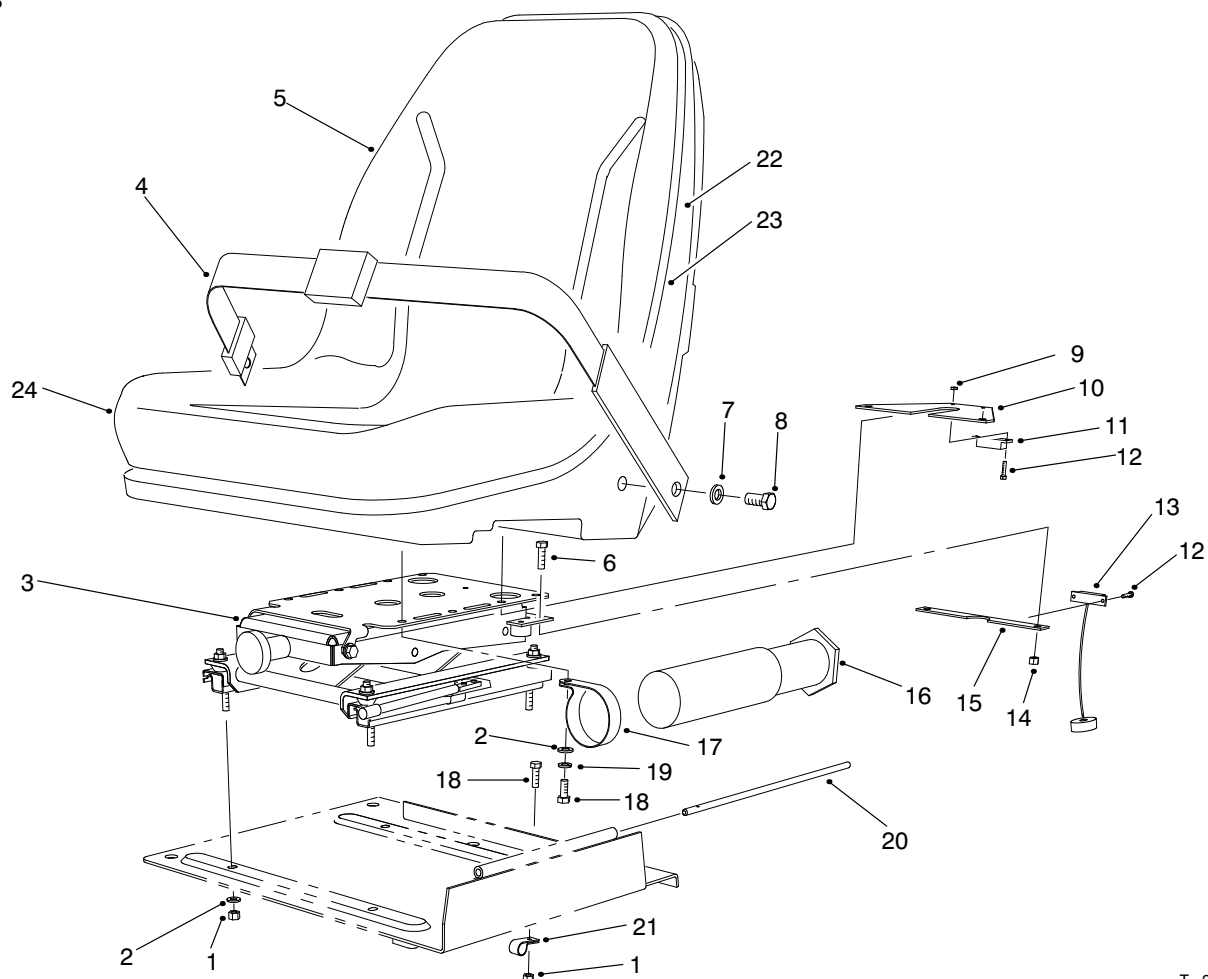 


T-2064-2

SEAT FRAME & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut-Lock	5
2	3256-23	Washer-Flat	4
3		Suspension-Seat	1
4	21-4191	Asm-Seat Belt	1
5	92-1180	Asm-Seat (Incl. Ref. #22-24)	1
6	323-4	Screw-HH	2
7	3253-6	Washer-Lock	2
8	3212-4	Screw	2
9	3296-54	Nut-Lock	4
10	75-4370	Bracket-Seat	1
11	92-8753	Magnet-Switch, Reed	1
12	3250-29	Screw	4


Ref. No.	Part No.	Description	No. Used
13	92-8001	Sensor-Switch, Reed	1
14	3296-39	Nut-Lock	2
15	75-4360	Bracket-Suspension, Seat	1
16	74-0720	Tube-Manual	1
17	2412-133	Clamp-R	2
18	322-3	Screw-HH	2
19	3253-4	Washer-Lock	4
20	75-3400	Shaft-Pivot, Seat	1
21	2412-93	Clamp-R	1
22	92-6534	Shell	1
23	351-78	Edging	1
24	92-6533	Kit-Cushion	1

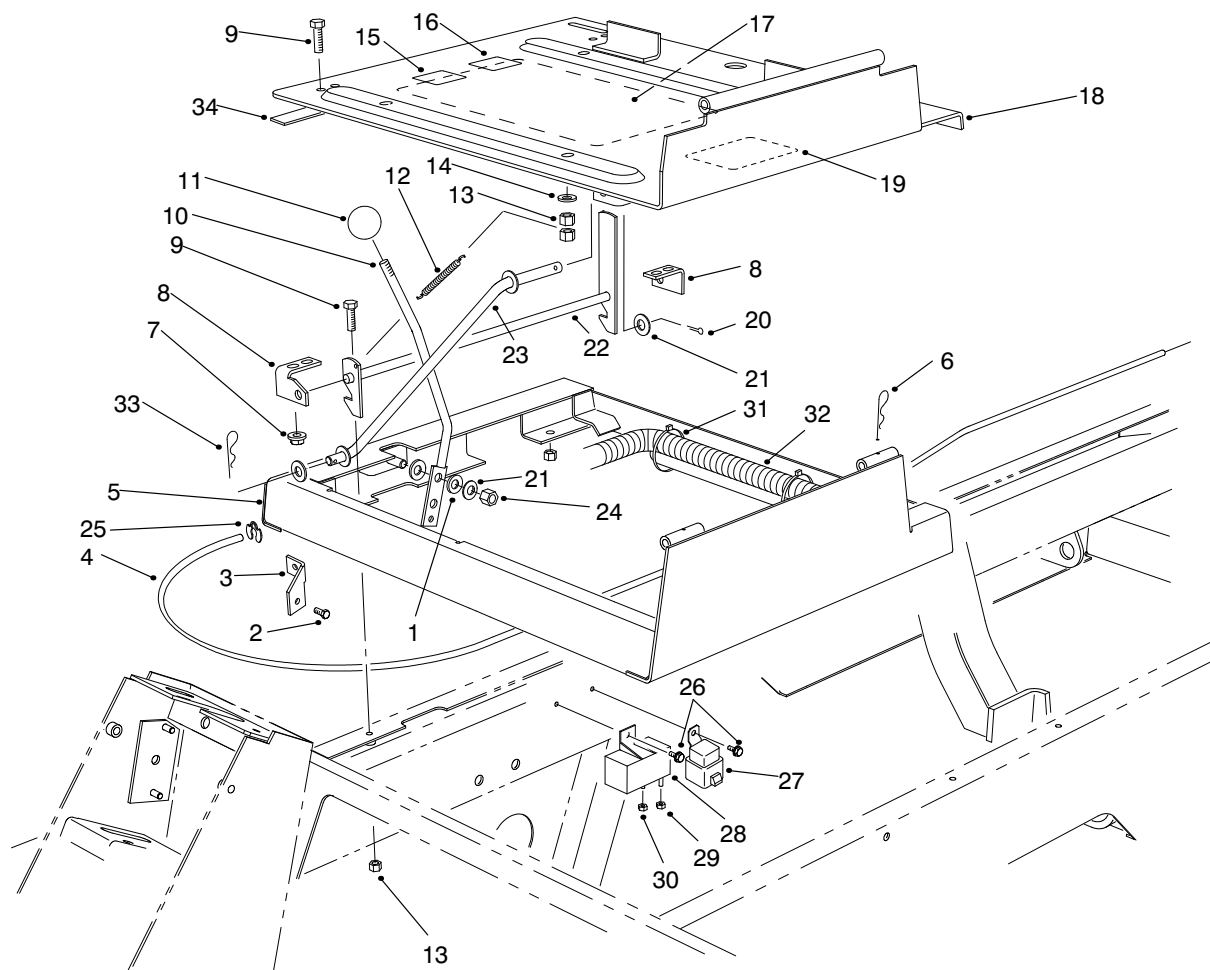 

T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer-Nylon	2	18	98-2350	Plate-Seat	1
2	49-2040	Screw-HH	1	19	98-8108	Decal-Rear Manifold Block	1
3	92-7396	Mount-Cable	1	19	94-2919	Decal-Rear Manifold (Japan)	1
4	92-7520	Cable-Throttle	1	20	3272-10	Pin-Cotter	1
5	98-2352	Frame-Seat	1	21	3256-24	Washer-Flat	3
6	3290-467	Pin-Cotter, Hair	1	22	98-2354	Latch-Seat	1
7	32128-25	Nut-HFH	4	23	75-3680	Rod-Seat	1
8	98-2353	Bracket-Latch, Seat	2	24	3296-39	Nut-Lock	1
9	322-3	Screw-HH	8	25	52-5910	Ring-Retaining	1
10	93-7598	Lever-Throttle	1	26	32144-10	Screw	2
11	233-42	Knob	1	27	70-1480	Relay	1
12	66-4190	Spring	1	28	76-5260	Relay-Glow Plug	1
13	3296-29	Nut-Lock	5	29	48-7880	Nut	1
14	3256-23	Washer-Flat	4	30	48-7890	Nut	1
15	63-9920	Decal-EEC 105 DBA	1	31	3290-378	Tie-Cable	2
16	85-6910	Decal-EEC 86 DBA	1	32	99-8963	Harness-Wire, Main	1
17	98-8110	Decal-Instructions, Clip	1	33	3290-307	Pin-Cotter, Hair	1
17	95-3477	Decal-Clip (Japan)	1	34	94-8146	Strip-Foam, Seat	1

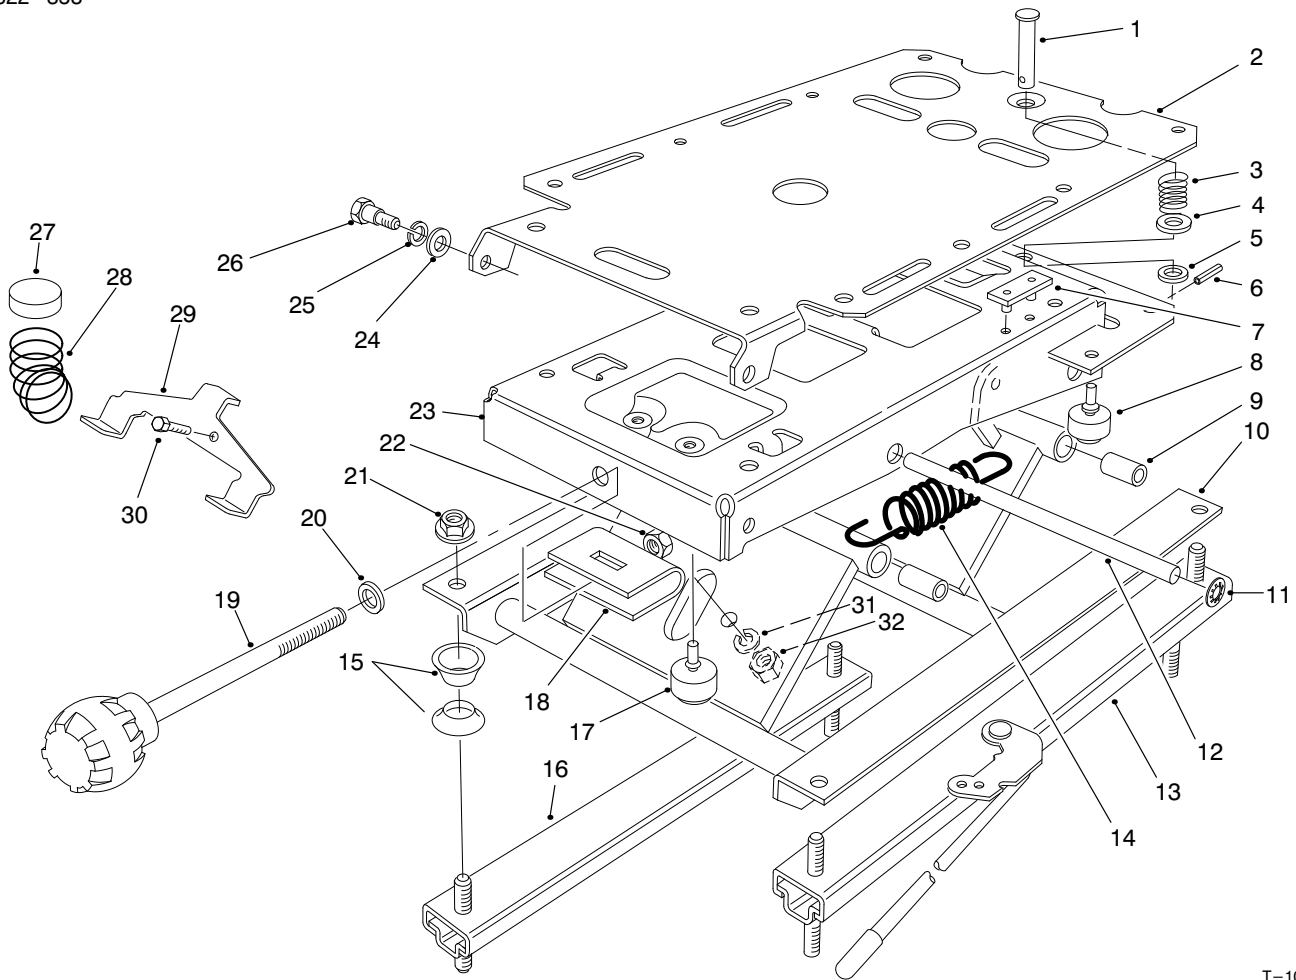 


T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin-Clevis	1
2	75-3580	Plate-Mounting, Seat	1
3	75-3530	Spring-Compression	1
4	3256-5	Washer-Flat	1
5	3256-24	Washer-Flat	1
6	75-3540	Pin-Roll	1
7	75-3550	Bumper-Seat	2
8	76-2940	Bumper-Rubber	2
9	76-1920	Bushing-Sleeve	4
10	66-8610	Weldment-Lower	1
11	66-8560	Nut-Push	4
12	76-1910	Shaft-Pivot	2
13	82-9060	Adjuster W/Handle	1
14	76-1940	Spring-Extension	2
15	66-9290	Spacer	6
16	66-8530	Adjuster	1


Ref. No.	Part No.	Description	No. Used
17	66-8520	Bumper-Down Stop	2
18	77-2870	Weldment-Hanger	1
19	76-1930	Knob-Tension Adjustment	1
20	3256-46	Washer-Flat	1
21	32128-26	Nut-HFH	4
22	3296-44	Nut-Lock	1
23	75-3480	Weldment-Upper	1
24	3256-26	Washer-Flat	2
25	3253-6	Washer-Lock	2
26	75-3510	Bolt-Shoulder	2
27	93-3164	Cap	2
28	93-3163	Spring	1
29	93-3165	Bracket	1
30	322-6	Screw-HH	1
31	3253-33	Washer-Lock	1
32	3217-6	Nut-Jam	1

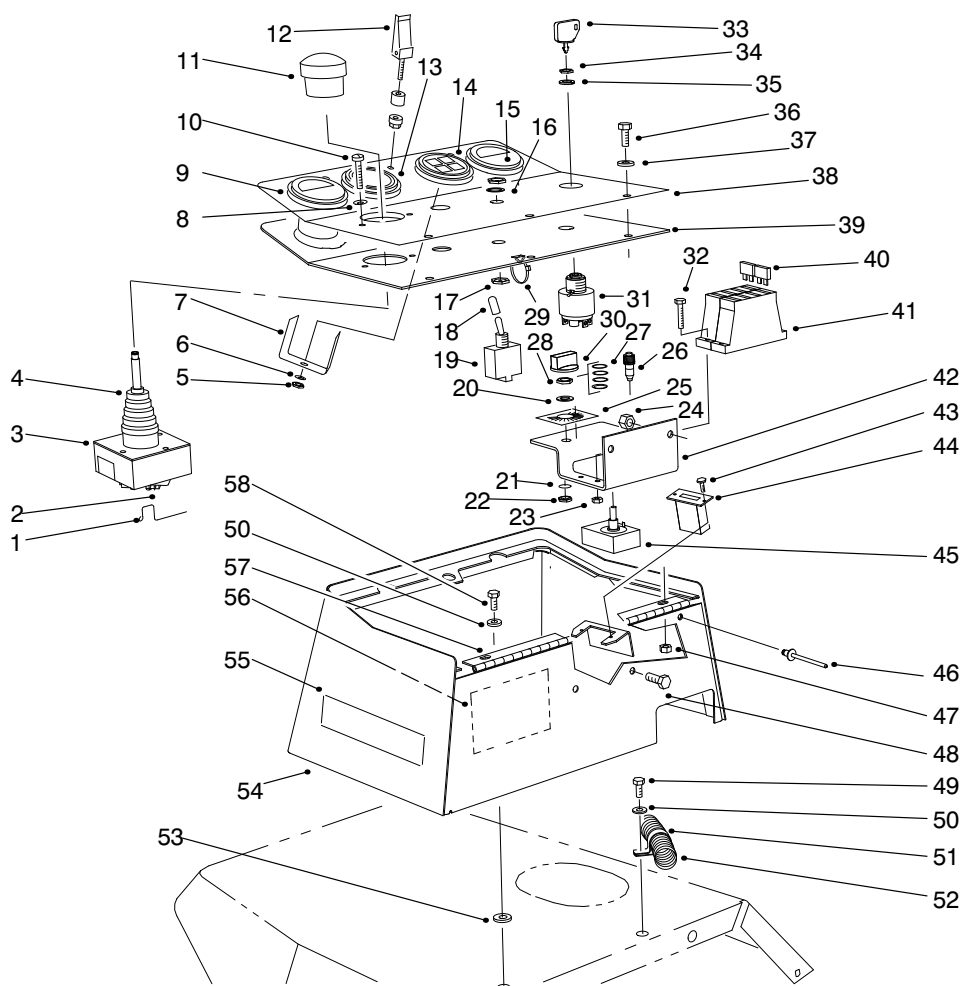 

T-3217

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-2602	Actuator-Joystick	2	23	3296-2	Nut-Lock	4
2	94-2601	Microswitch-Interlock	2	24	3296-42	Nut-Lock	2
3	93-9196	Joystick-6 Position (Incl. Ref. #1-2, 4 & 11)	1	25	93-1268	Decal-HOC Selector	1
4	94-2600	Boot	1	25	94-4582	Decal-HOC Selector (Japan)	1
5	3217-26	Nut	1	†26	85-4491	Lamp-Diagnostic	1
6	3254-1	Washer-Lock	1	27	237-7	O-Ring	4
7		Clamp	1	28	3220-24	Nut-Lock	1
8	3256-75	Washer-Flat	4	29	3290-378	Tie-Cable	2
9	93-8497	Gauge-Fuel (Incl. Ref. #52-56)	1	30	85-4480	Knob	1
10	60-6500	Screw-Pan Hd.	4	31	27-2360	Switch-Ignition (Incl. Ref. #34 & 35)	1
11	3290-489	Knob-Cap Style	1	32	32105-13	Screw-HH	4
12	74-5950	Latch-Swell	1	33	63-8360	Key-Ignition	1
13	93-7484	Light-Warning Bank (Incl. Ref. #5-7 & 59-60)	1	34	218-447	Nut-Hex	1
14	93-7483	Light-Warning Bank (Incl. Ref. #5-7 & 59-60)	1	35	218-446	Washer-Lock	1
15	76-9060	Gauge-Temperature (Incl. Ref. #57-58)	1	36	3258-166	Screw	3
16	218-589	Washer-Lock	3	37	3256-1	Washer-Flat	3
17	218-498	Nut-Hex.	6	38	99-8964	Decal-Console	1
18	94-2613	Sleeve-Switch, Red	1	38	99-8969	Decal-Console (Japan)	1
19	99-8352	Switch (Incl. Ref. #16, 17 & 61-62)	2	39	94-1401	Cover-Box, Control	1
20	3254-6	Washer-Lock	1	†40	94-6710	Fuse-2A	1
21		Washer-Lock	1	†*	218-574	Fuse-7.5A	1
22		Nut-Lock	1	*	218-578	Fuse-10A	4
				*	218-581	Fuse-15A	1
				*	218-594	Fuse-20A	1
				†41	67-7160	Block-Fuse	2
				42	93-7587	Bracket-Fuse Block	1

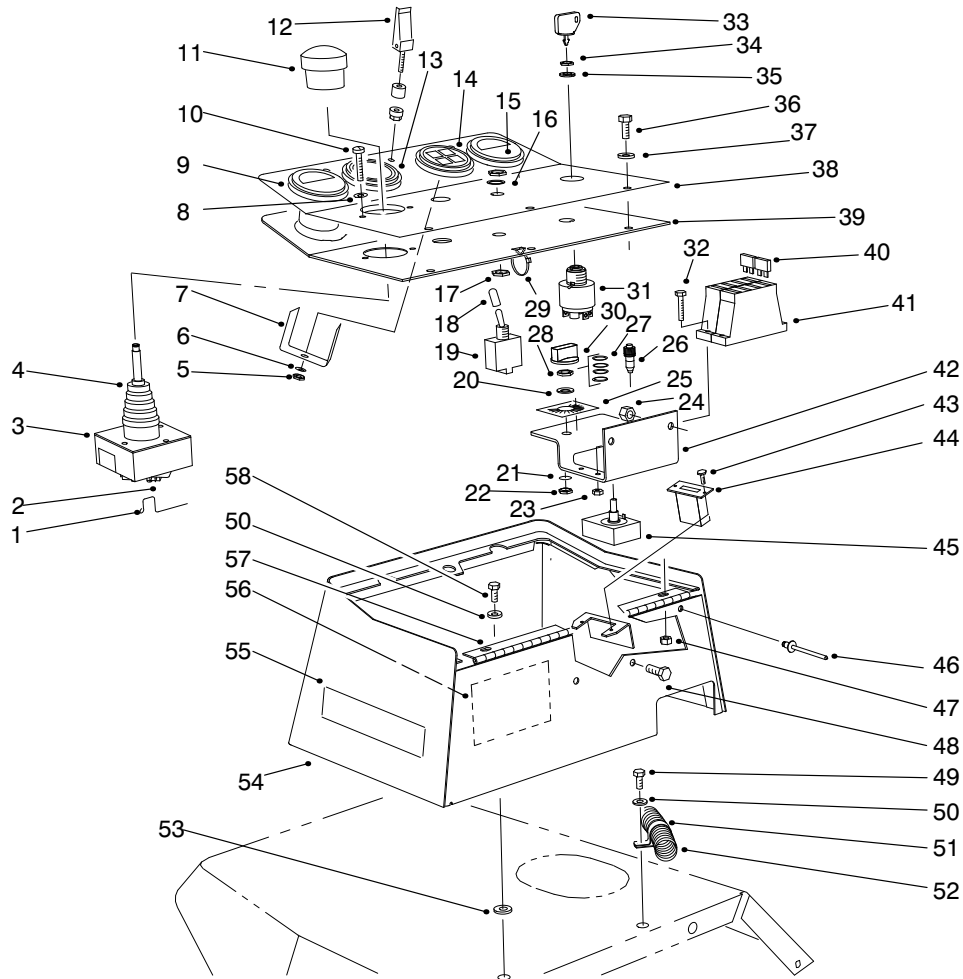 


T-3217

CONTROL CONSOLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	32144-18	Screw-HWH	2	54	75-5740	Box-Control	1
44	75-6820	Hour Meter	1	55	93-6689	Decal-No Riders	1
45	85-4470	Potentiometer (Incl. Ref. #20 & 28) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	55	84-3420	Decal-No Riders (Japan)	1
46	93-8744	Rivet-Pop	3	56	94-6349	Decal-Fuse	1
47	32128-33	Nut-HFH	3	56	94-3091	Decal-Fuse (Japan)	1
48	321-39	Screw-HH	2	57	75-5780	Hinge-Cover	1
49	322-5	Screw-HH	1	58	322-3	Screw-HH	3
50	3256-23	Washer-Flat	3	*59	87-6270	Socket-Light	4
51	2412-126	Clamp-R	1	*60	219-17	Bulb	4
52	94-3090	Harness-Wire, Main	1	*61	3217-25	Nut-Hex.	2
52	99-8963	Harness-Wire, RM6700D	1	*62	3253-15	Washer-Lock	2
53	66-2920	Washer	3	*63	3217-29	Nut-Hex.	6
				*64	3255-24	Washer-Lock	3
				*65	3219-14	Nut-Hex.	8
				*66	3253-2	Washer-Lock	5
				*	94-6343	Decal-Wire Ident. #1	1
				*	94-6344	Decal-Wire Ident. #2	1

*Not Illustrated

 
† Included in main wire harness.

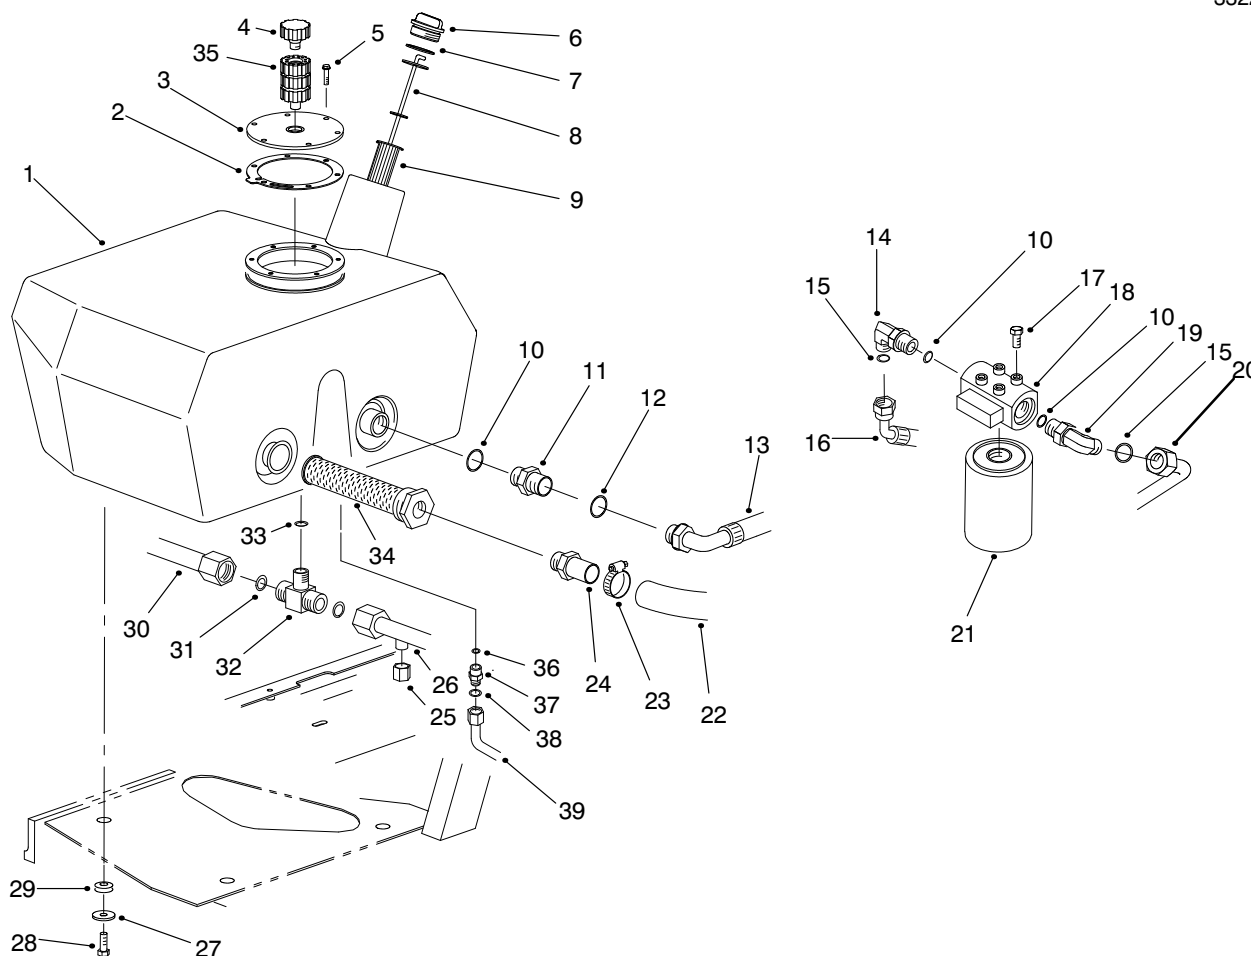

T-2067-1

HYDRAULIC FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank-Hydraulic	1	20	92-7493	Hose-Filter	1
2	93-7499	Gasket-Flange	1	21	94-2621	Element	1
3	99-2580	Cover-Tank	1	22	92-7465	Hose-Suction	1
4	68-6150	Breather-Air	1	23	2412-111	Clamp	1
5	33104-020	Screw-HHF	6	24	92-7525	Fitting-Hose	1
6	93-7498	Plug-Plastic	1	25	92-7551	Cap-Fitting	1
7	94-8166	O-Ring	1	26	94-1446	Tube-Drain	1
8	75-3710	Dipstick	1	27	63-8410	Washer-Flat	3
9	61-2790	Filter-Screen	1	28	33105-025	Screw-HHF	3
10	237-81	O-Ring	3	29	240-11	Grommet	3
11	340-9	Fitting-Hydraulic (Incl. Ref. #10 & 12)	1	30	92-7478	Tube-Motor, RH	1
12	237-58	O-Ring	1	31	237-30	O-Ring	2
13	92-7489	Hose-Return	1	32	340-157	Fitting-Tee (Incl. Ref. #31 & 33)	1
14	340-139	Fitting-Elbow 90° (Incl. Ref. #10 & 15)	1	33	237-79	O-Ring	1
15	237-65	O-Ring	2	34	92-7527	Strainer-Suction	1
16	92-7490	Hose-Filter	1	35	92-8020	Adapter-Breather	3
17	3234-1	Screw	2	36	237-42	O-Ring	1
18	94-2620	Head-Filter (Incl. Ref. #21)	1	37	340-2	Adapter (Incl. Ref. #36 & 38)	1
19	340-142	Fitting-Hydraulic 90° (Incl. Ref. #10 & 15)	1	38	237-22	O-Ring	1
				39	94-1447	Tube-Steering, Return	1

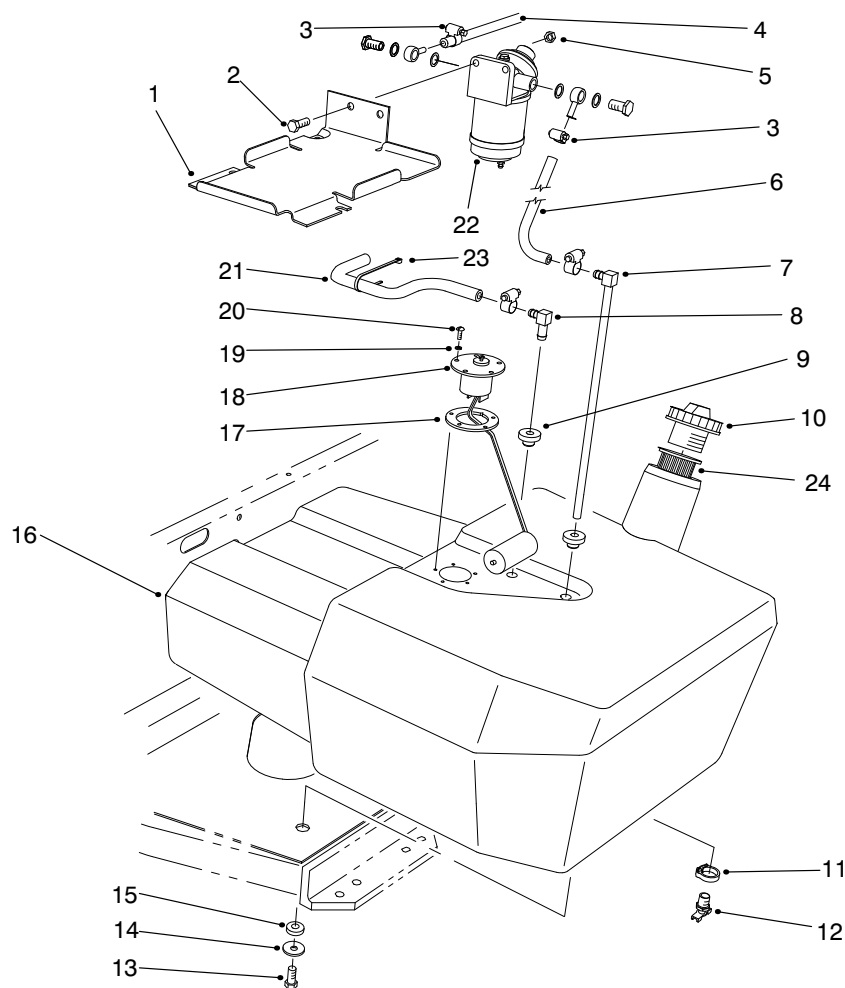 


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate-Box, Battery	1	14	63-8410	Washer-Flat	3
2	33105-030	Screw-HHF	2	15	240-11	Grommet	3
3	2412-108	Clamp-Hose	4	16	92-7422	Tank-Fuel (Incl. Ref. #11 & 12)	1
4	63-7627	Hose-Fuel	1	17	62-7650	Gasket	1
5	33005-00	Nut-HF	2	18	63-7640	Sender-Fuel	1
6	92-7522	Hose-Fuel	1	19	3253-15	Washer-Lock	5
7	66-8121	Standpipe	1	20	32122-24	Screw	5
8	46-6550	Fitting-Connector	1	21	92-7521	Hose-Fuel	1
9	46-6560	Bushing	2	†22	76-5300	Asm-Filter, Fuel	1
10	93-3102	Cap-Fuel, Diesel	1	23	3290-378	Tie-Cable	3
11	2412-36	Clamp-Drain	1	24	61-2790	Filler-Screen	1
12	304-46	Fitting-Drain	1				
13	33105-025	Screw-HHF	3				

 
†Furnished with engine.

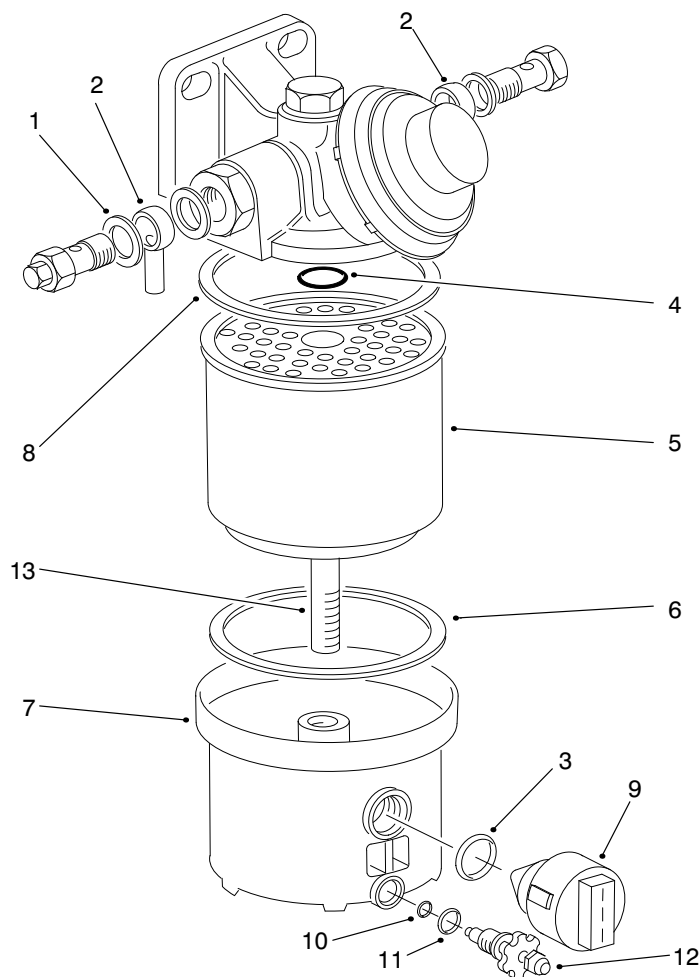

T-0966-2

FUEL FILTER ASSEMBLY NO. 76-5300

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer-Copper	4	9	76-5320	Sensor-Water (Incl. Ref. #3)	1
2	76-5190	Fitting-Adjustable	2	10	94-8027	O-Ring	1
3	94-8025	O-Ring	1	11	94-8028	O-Ring	1
4		O-Ring	1	12	94-8026	Asm-Vent (Incl. Ref. #10 & 11)	1
5	76-5220	Element-Filter (Incl. Ref. #4, 6 & 8)	1	13		Bolt	1
6		Seal-Gasket	1				
7		Cap-Filter, Fuel	1				
8		Seal-Gasket	1				

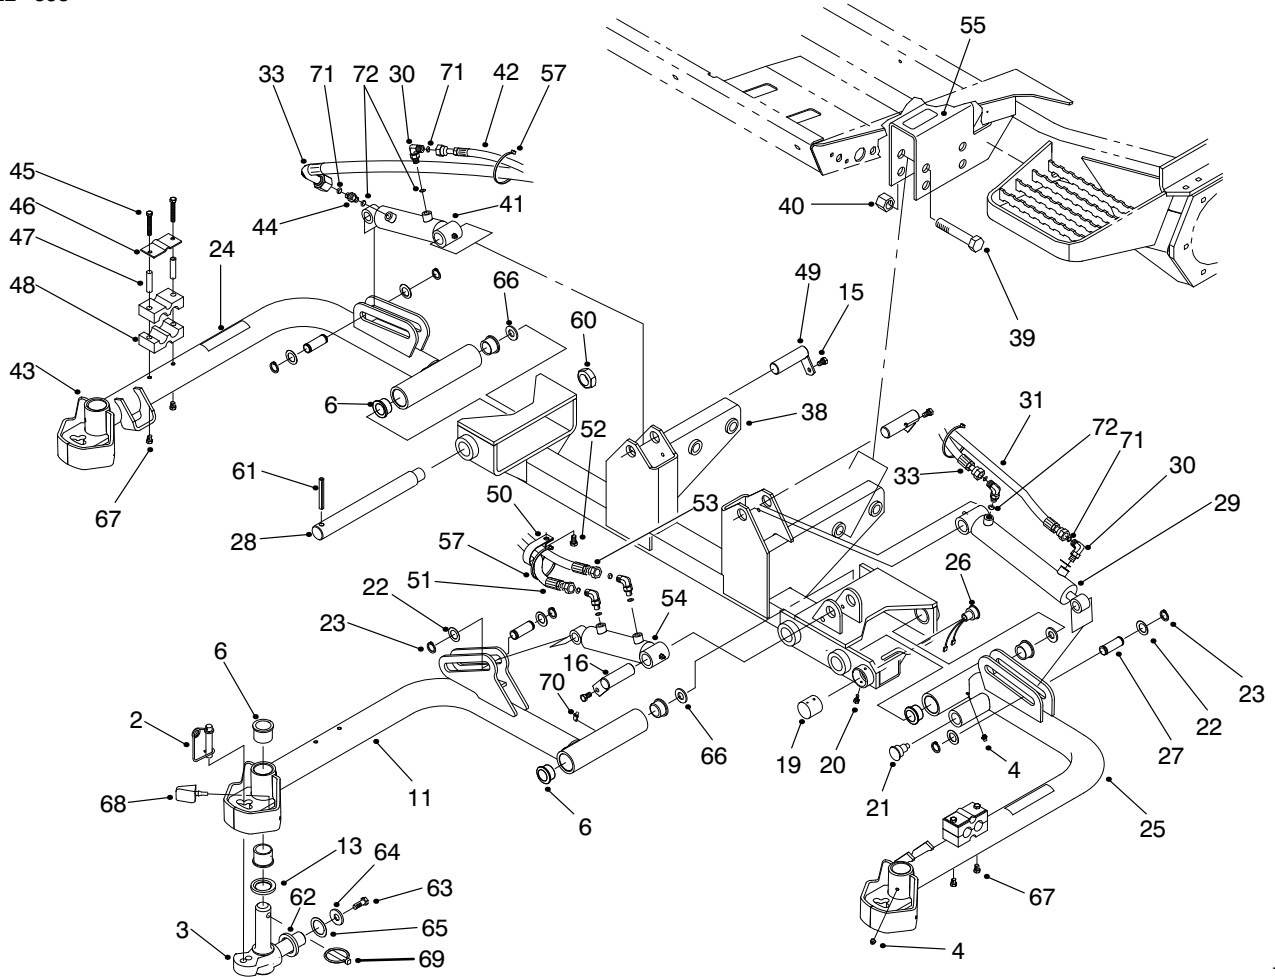 


T-2986

FRONT LIFT ARMS ASSEMBLY – NO. 1, 4 & 5

Ref. No.	Part No.	Description	No. Used
2	99-5610	Pin	3
3	98-1880	Knuckle-Pivot	3
4	302-5	Fitting-Grease	5
6	94-8947	Bushing-Flange	12
11	99-2561	Asm-Arm, Lift No. 1	1
13	94-8946	Washer	3
15	32144-14	Screw-HWHTF	3
16	83-6970	Pin-Cylinder, Short	1
19	75-6370	Cap-Sensor	1
20	32104-76	Screw-TAP	2
21	92-8754	Magnet-Switch, Reed	1
22	94-9998	Washer-Thrust	6
23	94-9974	Ring-Retaining	6
24	93-6687	Decal-No Step	2
24	94-4584	Decal-Warning, Japan	2
25	99-2564	Arm-Lift No. 4	1
26	92-8002	Sensor-Switch, Reed	1
27	75-5350	Pin-Slide, Cylinder	3
28	95-7158	Pin-Pivot	3
29	98-8811	Cylinder-Hydraulic No. 4	1
30	340-132	Fitting-90° (Incl. Ref. #71 & 72)	5
31	82-6490	Hose	1
33	75-5890	Hose	1
38	99-5615	Asm-Frame, Carrier	1
39	328-7	Screw-HH	4
40	3296-51	Nut-Lock	4
41	98-8069	Cylinder-Hydraulic No. 5	1
42	92-7564	Asm-Hose	1


Ref. No.	Part No.	Description	No. Used
43	99-2565	Arm-Lift No. 5	1
44	340-92	Fitting-Straight (Incl. Ref. #71 & 72)	1
45	60-6700	Screw-HH	6
46	93-7961	Clamp-Drain, Case	3
47	93-7960	Spacer	6
48	82-8170	Clamp	6
49	83-6780	Pin-Cylinder	2
50	2412-96	Clamp-R	1
51	92-7565	Asm-Hose	1
52	322-4	Screw-HH	1
53	92-7562	Asm-Hose	1
54	93-2650	Cylinder-Hydraulic No.1	1
55	93-6693	Decal-Plate, Floor	1
57	3290-378	Tie-Cable	3
60	3296-49	Nut-Lock	3
61	32121-110	Pin-Spring	3
62	98-7974	Washer-Thrust	3
63	98-7993	Screw-Flange Head	3
64	3256-6	Washer-Flat	3
65	3-6781	Washer-Thrust	3
66	76-2980	Washer-Thrust	3
67	33114-010	Screw-HH	4
68	98-9976	Bumper	6
69	283-71	Pin-Lynch	3
70	302-60	Fitting-Grease 90°	1
71	237-21	O-Ring	6
72	237-78	O-Ring	6

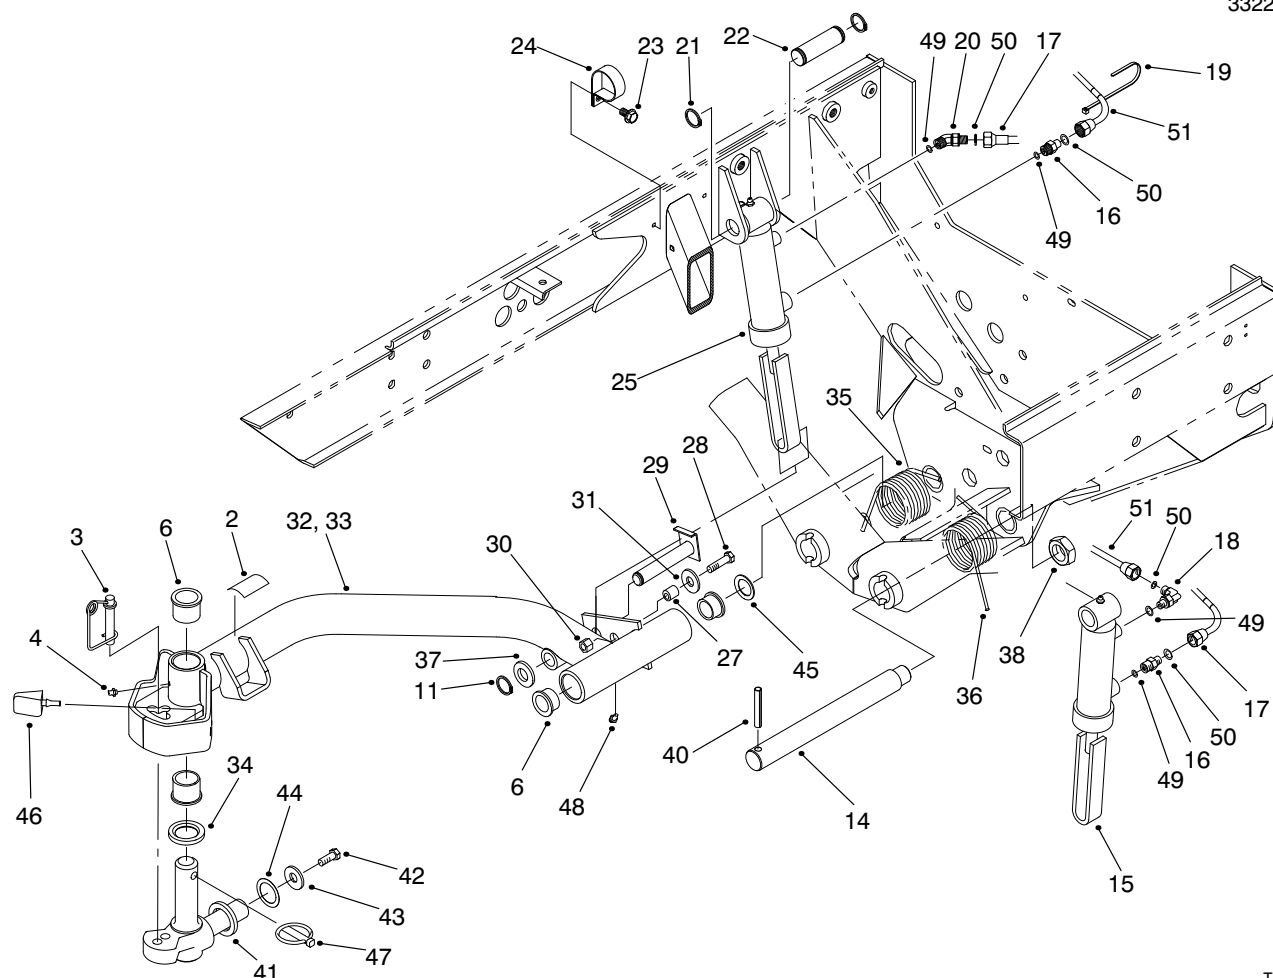 

T-3218

REAR LIFT ARM ASSEMBLY – NO. 2 & 3

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-1880	Knuckle-Pivot	2	29	99-2560	Pin	2
2	93-6696	Decal-Danger	2	30	3296-29	Nut-Lock	2
3	99-5610	Pin	2	31	3256-3	Washer-Flat	2
4	302-5	Fitting-Grease	2	32	99-2563	Lift Arm-#3	1
6	94-8947	Bushing-Flange	8	33	99-2562	Lift Arm-#2	1
11	94-9974	Ring-Retaining	2	34	94-8946	Washer-PM	2
14	95-7158	Pin-Pivot	2	35	99-5608	Spring-Torsion, RH	2
15	98-8813	Cylinder-Hyd. No. 2	1	36	99-5609	Spring-Torsion, LH	2
16	340-92	Fitting-Hydraulic (Incl. Ref. #49 & 50)	2	37	67-6570	Spacer-Wheel	2
17	92-7636	Asm-Hose	1	38	3296-49	Nut-Lock	2
18	340-132	Fitting-Hydraulic 90° (Incl. Ref. #49 & 50)	1	40	33104-010	Screw-HH	2
19	3290-378	Tie-Cable	2	41	98-7974	Washer-Thrust	2
20	340-103	Fitting-Hydraulic 45° (Incl. Ref. #49 & 50)	1	42	98-7993	Screw-Flange Head	2
21	32151-36	Ring-Retaining	4	43	3256-6	Washer-Flat	2
22	92-7548	Pin-Cylinder	2	44	3-6781	Washer-Thrust	2
23	32144-11	Screw-Self Tapping	1	45	76-2980	Washer-Thrust	2
24	2412-96	Clamp-R	1	46	99-5605	Bumper	4
25	98-8812	Cylinder-Hyd. No. 3	1	47	283-71	Pin-Lynch	2
27	82-6840	Spacer	2	48	302-11	Fitting-Grease	2
28	322-7	Screw-HH	2	49	237-78	O-Ring	4
				50	237-21	O-Ring	4
				51	92-7638	Asm-Hose	1

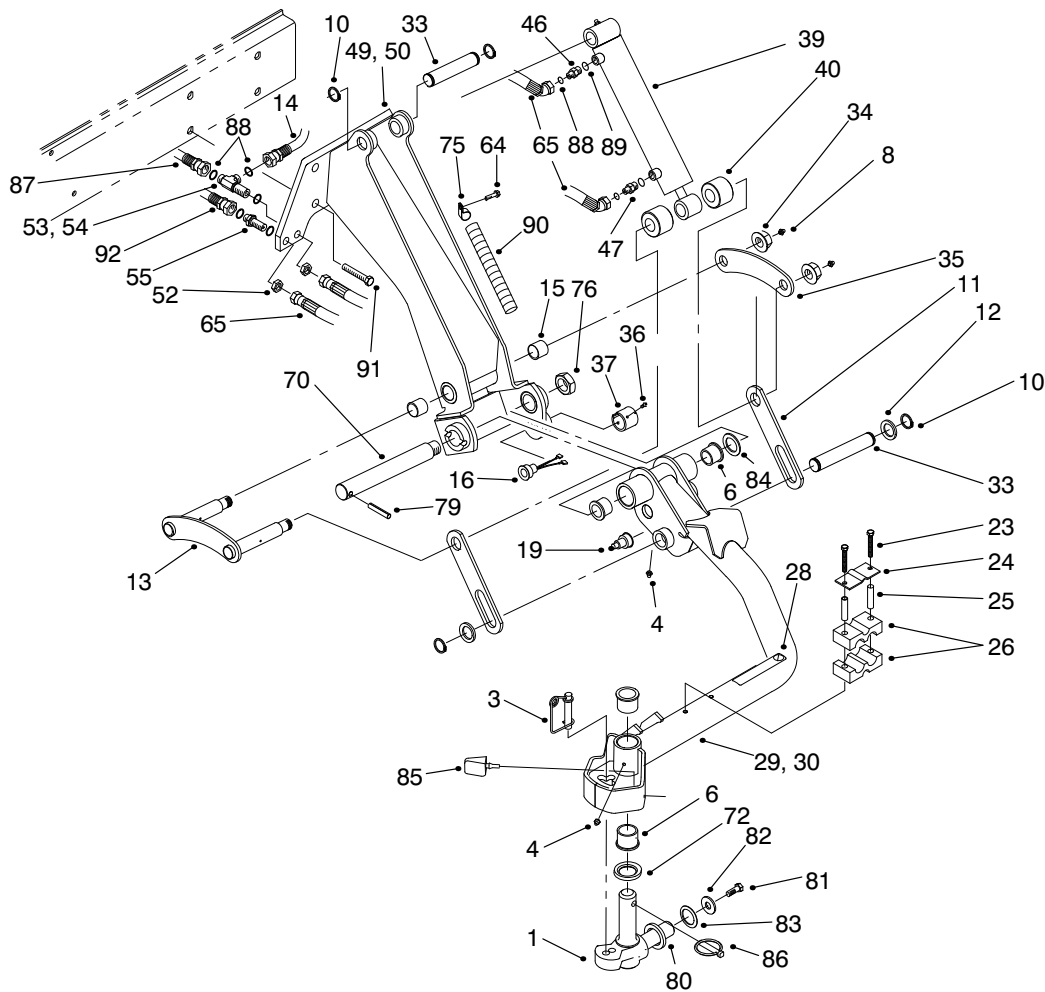 


T-2988

WING LIFT ARM ASSEMBLY—NO. 6 & 7

Ref. No.	Part No.	Description	No. Used
1	92-7637	Asm—Hose	1
3	99-5610	Pin	2
4	302-5	Fitting—Grease	4
6	94-8947	Bushing—Flange	8
8	302-2	Fitting—Grease	4
10	32151-36	Ring—Retaining	8
11	93-2704	Link—Lift	4
12	256-115	Washer—Thrust	4
13	98-8823	Link—Welded	2
14	92-7637	Asm—Hose	1
15	67-1750	Bushing—Axle	4
16	92-8002	Sensor—Switch, Reed	2
19	92-8754	Magnet—Switch, Reed	2
23	60-6700	Screw—HH	4
24	93-7961	Clamp—Drain, Case	2
25	93-7960	Spacer	4
26	82-8170	Clamp	4
28	93-6687	Decal—No Step	2
28	94-4584	Decal—Warning (Japan)	2
29	99-2566	Asm—Arm, Lift No. 6	1
30	99-2567	Asm—Arm, Lift No. 7	1
33	93-2699	Pin	4
34	33029-00	Nut—Lock	4
35	98-8821	Link—Rear	2
36	32104-76	Screw—TAP	4
37	75-6370	Cap—Sensor	2
39	93-2631	Cylinder—Lift	2
40	93-2700	Roller—Plastic	4
46	340-92	Fitting—Straight (Incl. Ref. #88 & 89)	2

Ref. No.	Part No.	Description	No. Used
47	94-1449	Fitting—Valve, Restrictor (Incl. Ref. #88 & 89)	2
49	98-2427	Asm—Support, Arm	1
50	98-2426	Asm—Support, Arm	1
52	340-78	Nut—Bulkhead	4
53	340-75	Fitting—Bulkhead, Tee LH (Incl. Ref. #88)	1
54	94-1443	Fitting—Bulkhead, 90° RH (Incl. Ref. #88)	1
55	94-1444	Fitting—Bulkhead, Straight (Incl. Ref. #88)	2
64	32144-11	Screw—TAP	6
65	92-7643	Asm—Hose	4
70	98-8826	Pin—Pivot	2
72	94-8946	Washer—PM	2
75	2412-93	Clamp—R	6
76	3296-49	Nut—Lock	2
79	32121-110	Pin—Spring	2
80	98-7974	Washer—Thrust	2
81	98-7993	Screw—HFH	2
82	3256-6	Washer—Flat	2
83	3-6781	Washer—Thrust	2
84	76-2980	Washer—Thrust	2
85	99-5605	Bumper	4
86	283-71	Pin—Lynch	2
87	92-7640	Asm—Hose	1
88	237-21	O—Ring	14
89	237-78	O—Ring	4
90	92-7632	Harness—Wire, RM6700D	1
91	33108-035	Screw—HHF	6

 *Not Illustrated

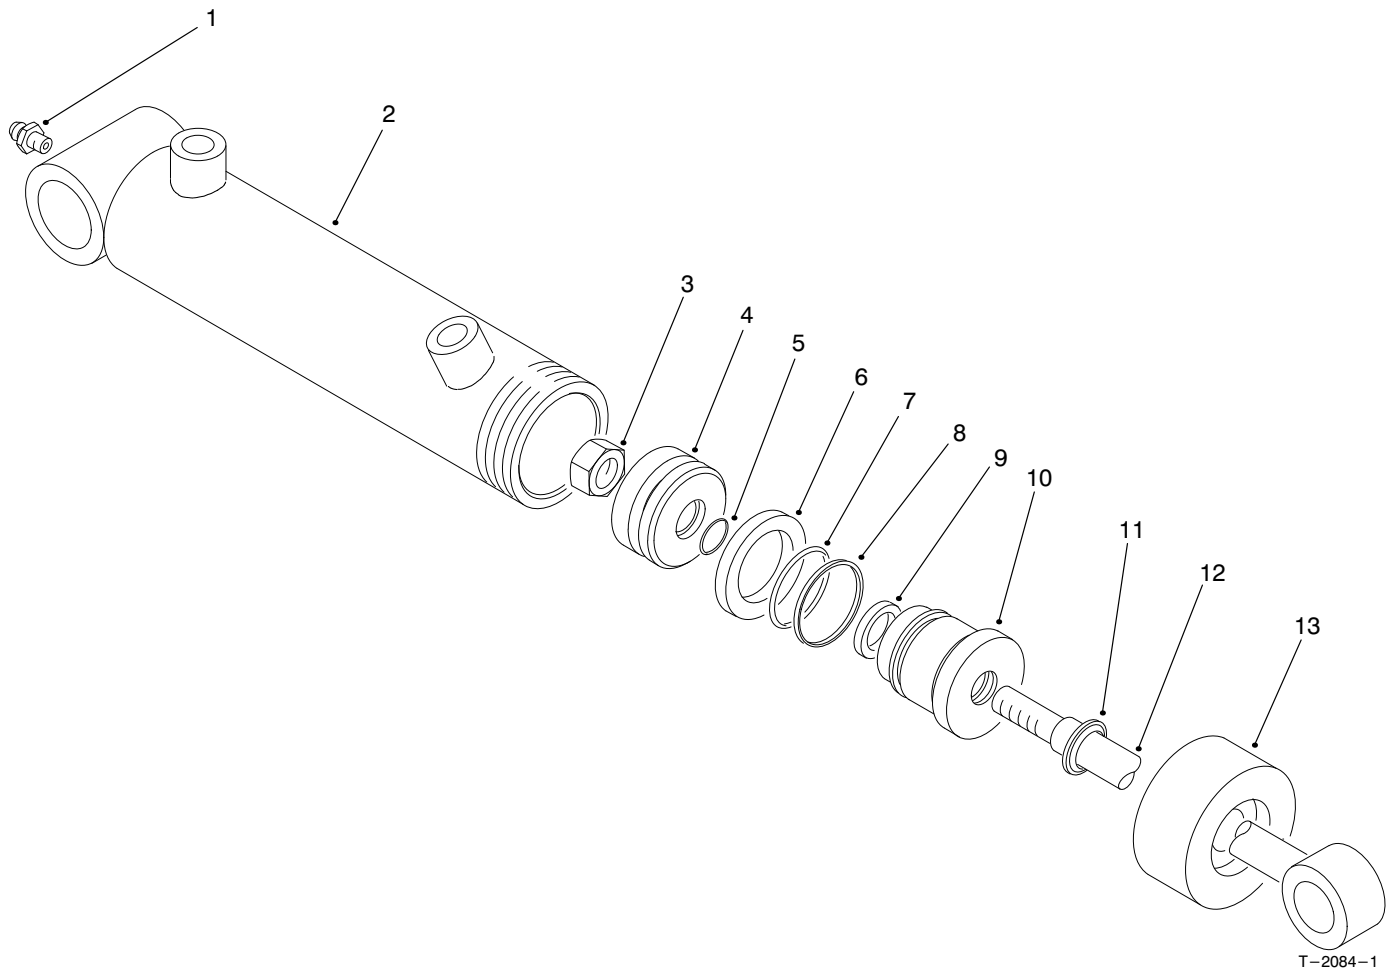


T-2084-1

HYDRAULIC LIFT CYLINDER NO. 1 (93-2650)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	†9		Seal-Rod	1
†2		Asm-Barrel	1	10	93-7990	Head	1
3	32152-10	Nut-Lock	1	†11		Seal-Dust	1
4	70-2780	Piston	1	12	94-2644	Shaft With Clevis	1
†5		O-Ring	1	13	93-7991	Collar	1
†6		Seal-Special	1	*	86-7330	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O-Ring	1				
†8		Backup	1				

 † Not Serviced Separately.
*Not Illustrated

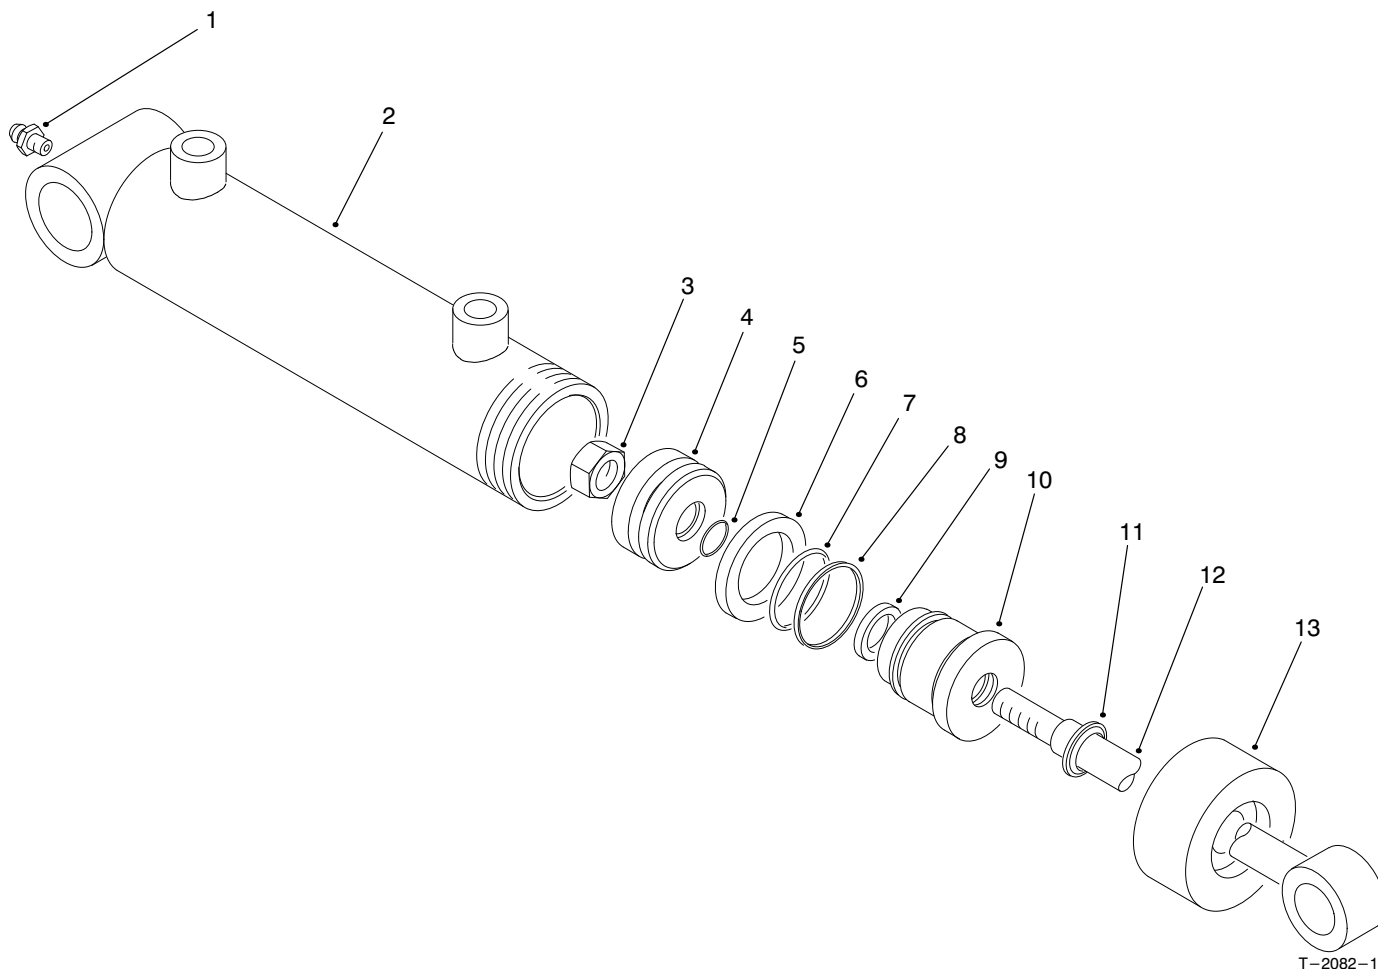

T-2082-1


HYDRAULIC LIFT CYLINDER NO. 4 (98-8811)

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	70-2780	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	98-7353	Head	1
†11		Seal—Dust	1
12	75-2120	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1

†Not Serviced Separately.

 *Not Illustrated

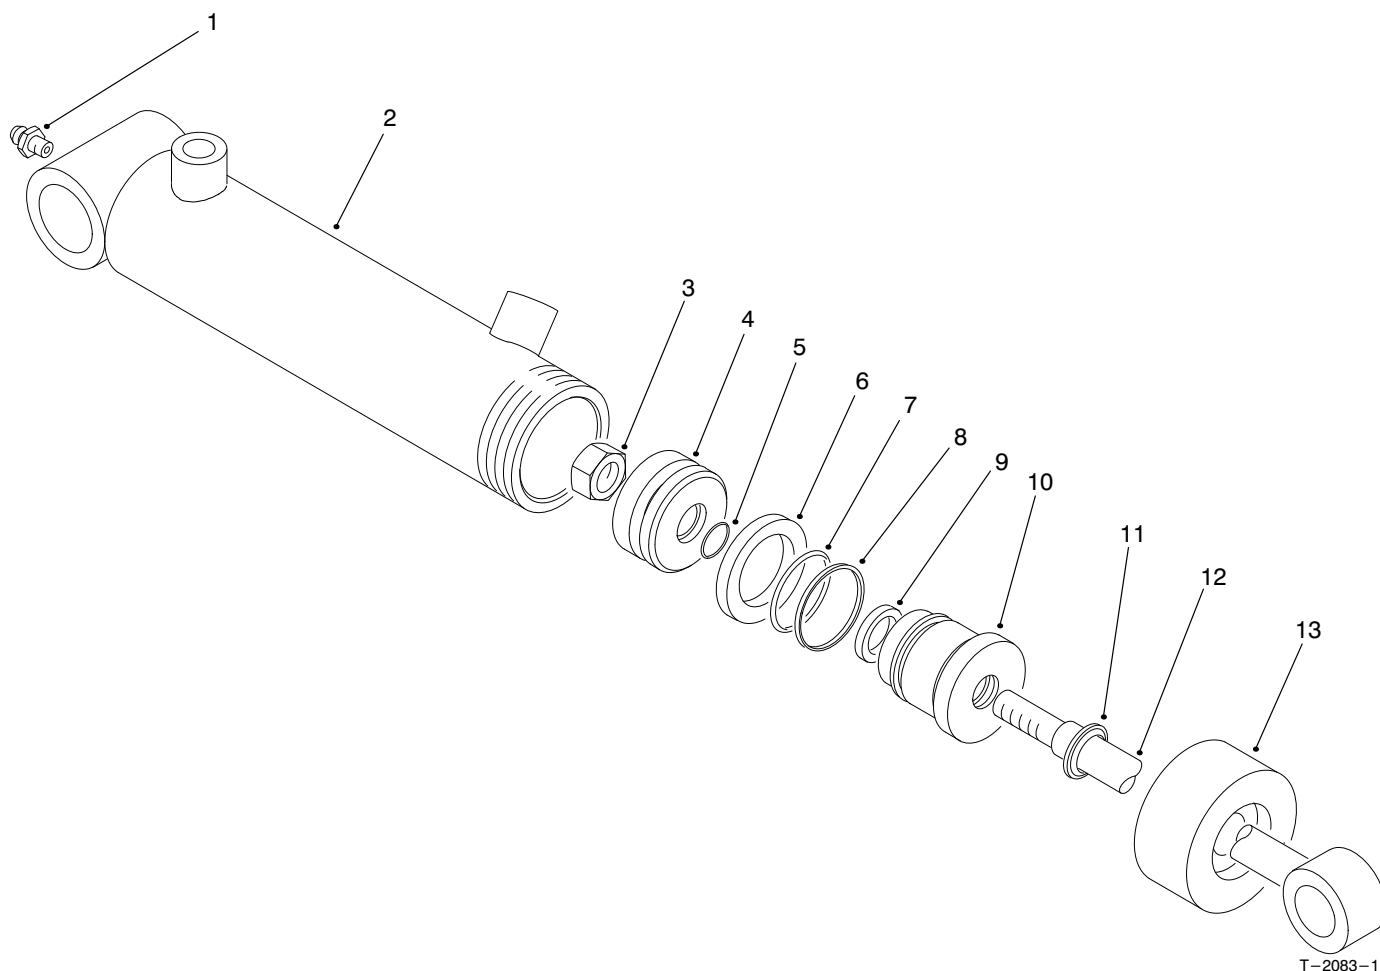


T-2083-1

HYDRAULIC LIFT CYLINDER NO. 5 (98-9069)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1	†9		Seal—Rod	1
†2		Asm—Barrel	1	10	98-7354	Head	1
3	32152-10	Nut—Lock	1	†11		Seal—Dust	1
4	84-1710	Piston	1	12	84-1740	Shaft With Clevis	1
†5		O—Ring	1	13	93-7994	Collar	1
†6		Seal—Special	1	*	84-1760	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O—Ring	1				
†8		Backup	1				

† Not Serviced Separately.

 *Not Illustrated

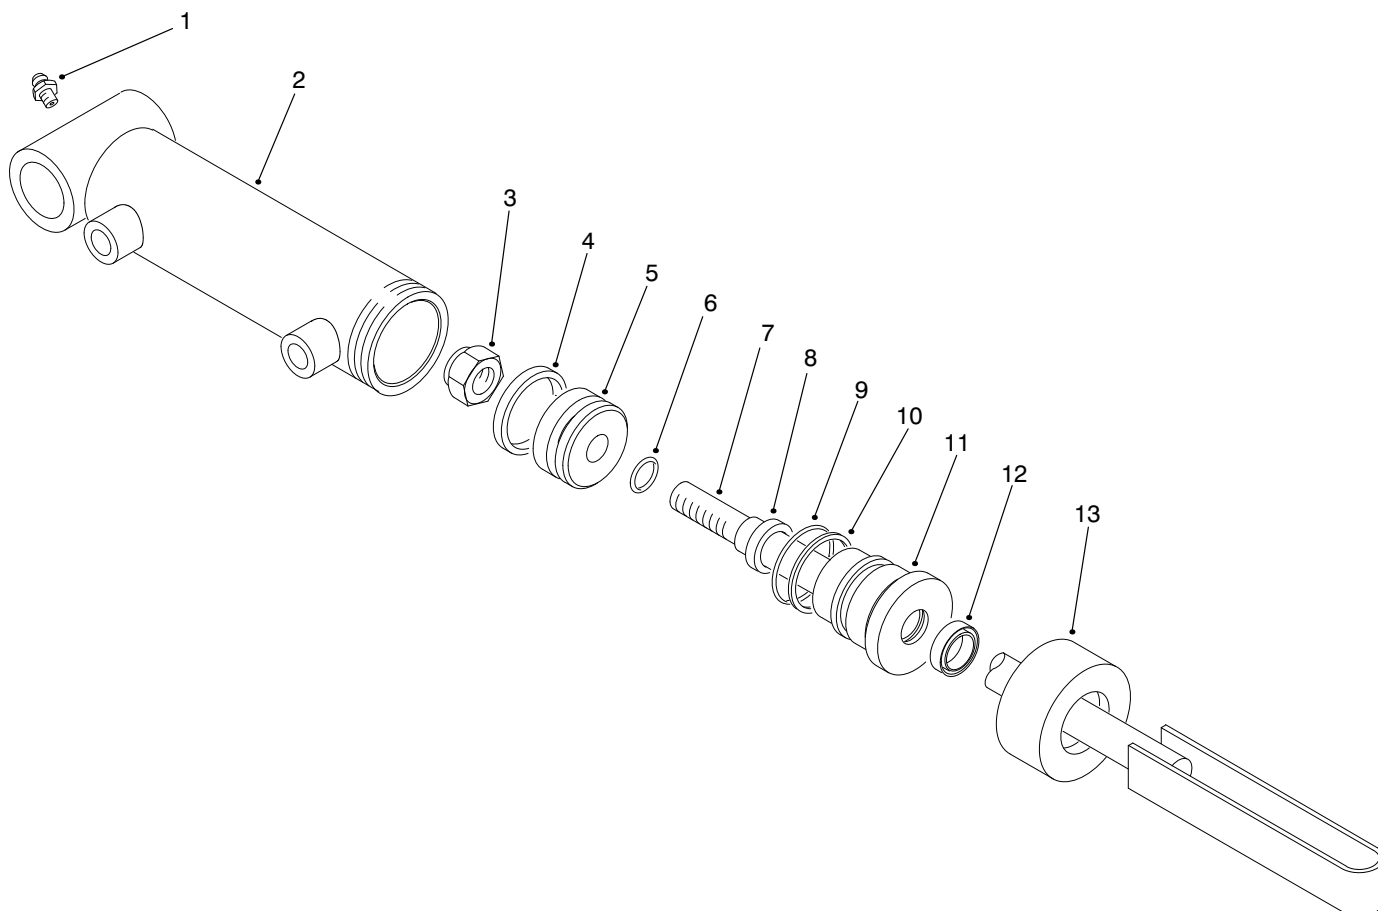

T-2087-1


HYDRAULIC LIFT CYLINDER NO. 2 (98-8813)

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
2	93-7995	Asm-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	98-7354	Head	1
†12		Seal-Dust	1
13	93-7994	Collar	1
*	84-1760	Kit-Seal Repair (Incl. Ref. #4, 6, 8-10 & 12)	1

*Not Illustrated

 †Not Serviced Separately.

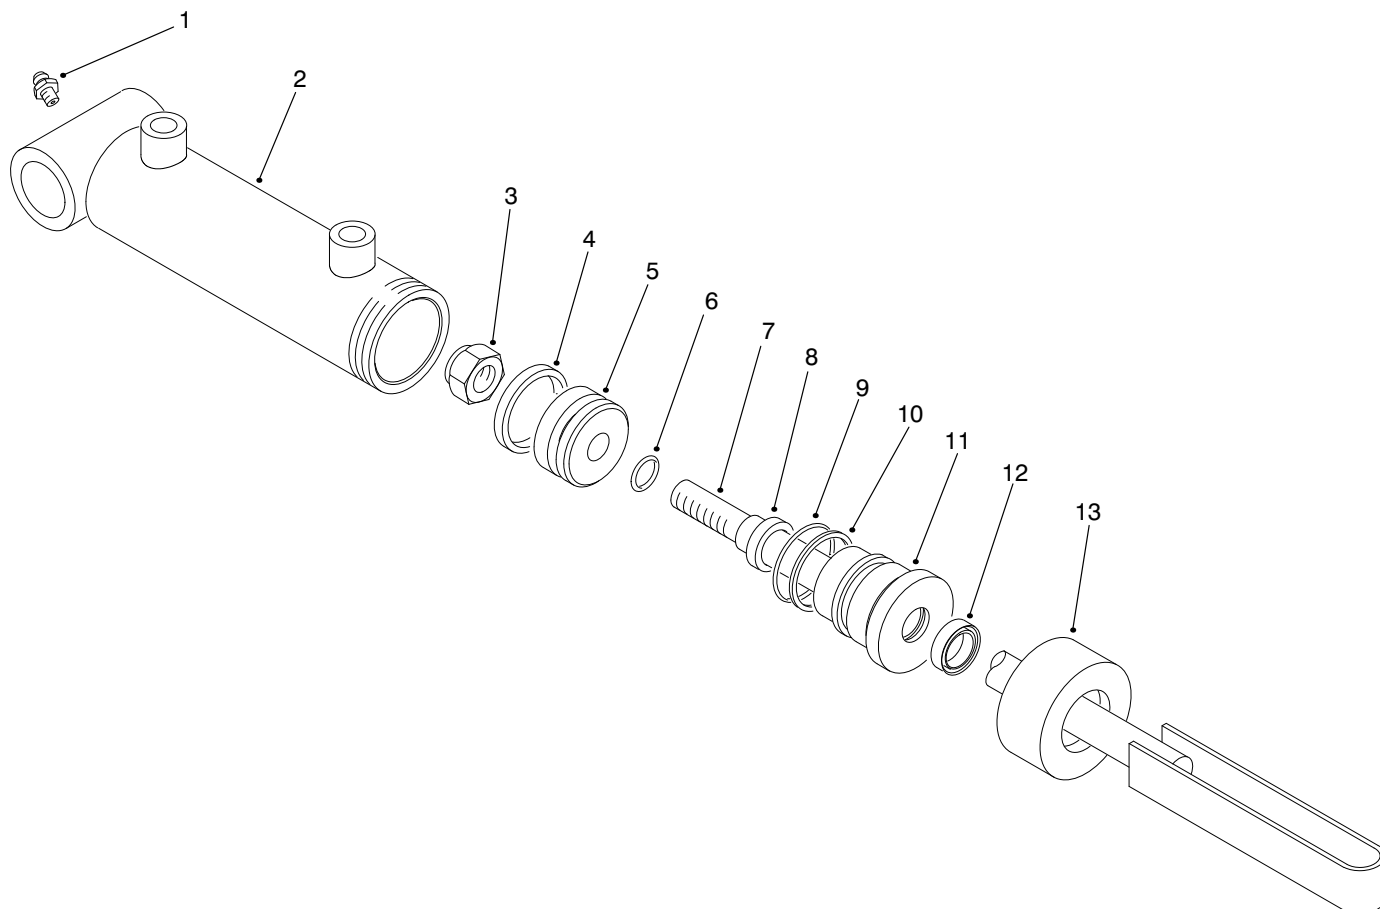

T-2086-1


HYDRAULIC LIFT CYLINDER NO. 3 (98-8812)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	9		O-Ring	1
2	93-7992	Asm-Barrel	1	†10		Backup	1
3	32152-10	Nut	1	11	98-7353	Head	1
†4		Uni-ring	1	†12		Seal-Dust	1
5	70-2780	Piston	1	13	93-7991	Collar	1
†6		O-Ring	1	*	86-7330	Kit-Seal Repair (Incl. Ref. #4, 6, 8-10 & 12)	1
7	93-7989	Shaft W/Clevis	1				
†8		Seal-Rod	1				

*Not Illustrated

† Not Serviced Separately.

 3322-358

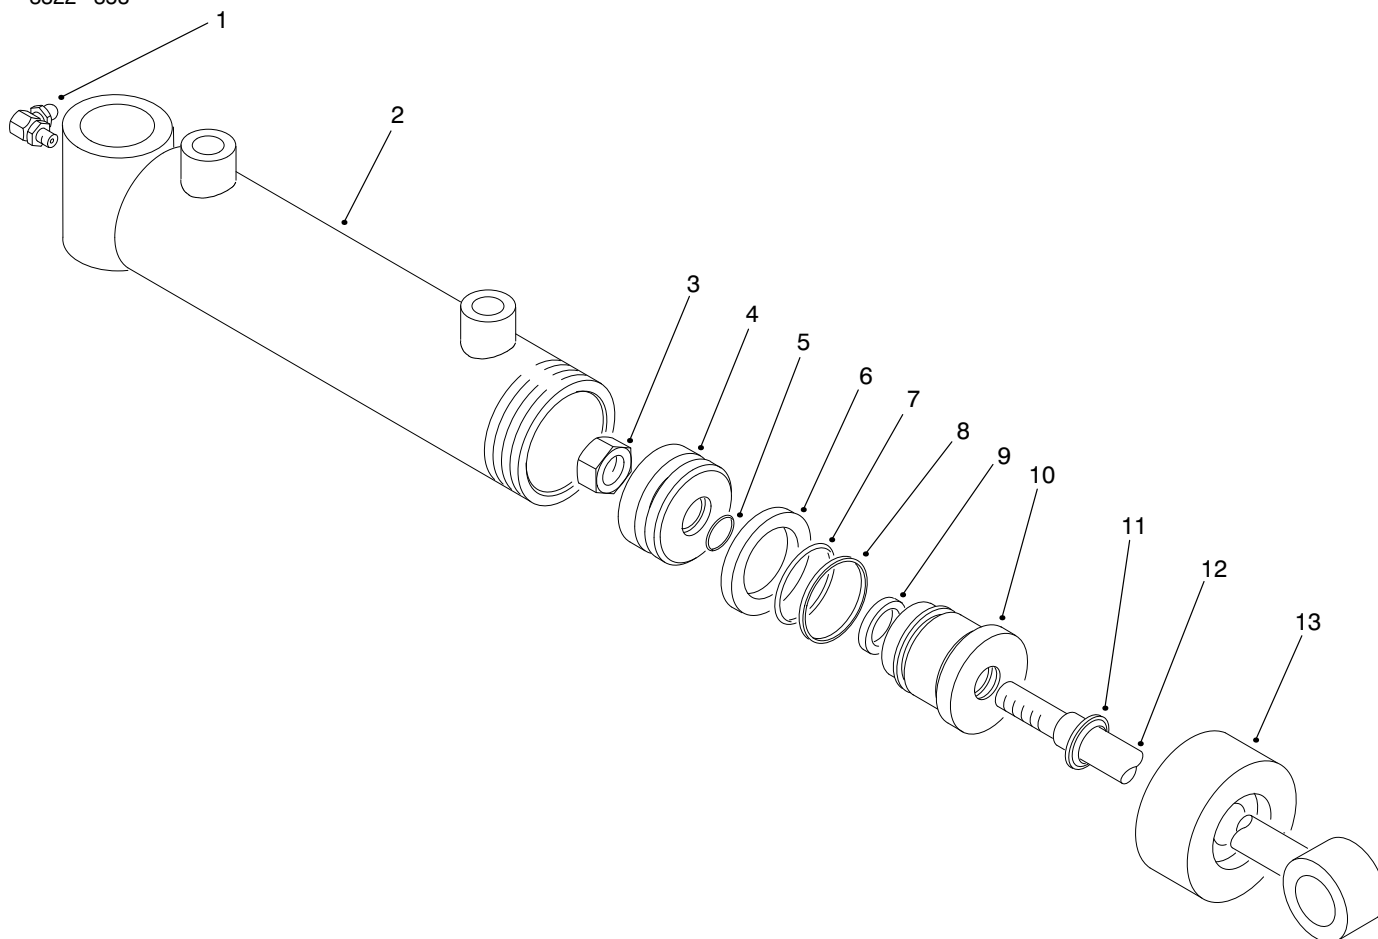

T-2363-1


HYDRAULIC LIFT CYLINDER NO. 6 & 7 (93-2631)

Ref. No.	Part No.	Description	No. Used
1	302-33	Fitting—Grease 90°	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	94-2603	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	94-2604	Head	1
†11		Seal—Dust	1
12	94-2606	Shaft	1
13	94-2605	Collar	1
*	94-2608	Kit—Seal Repair (Incl. Ref. #5-9 & 11)	1

*Not Illustrated

 
†Not Serviced Separately.

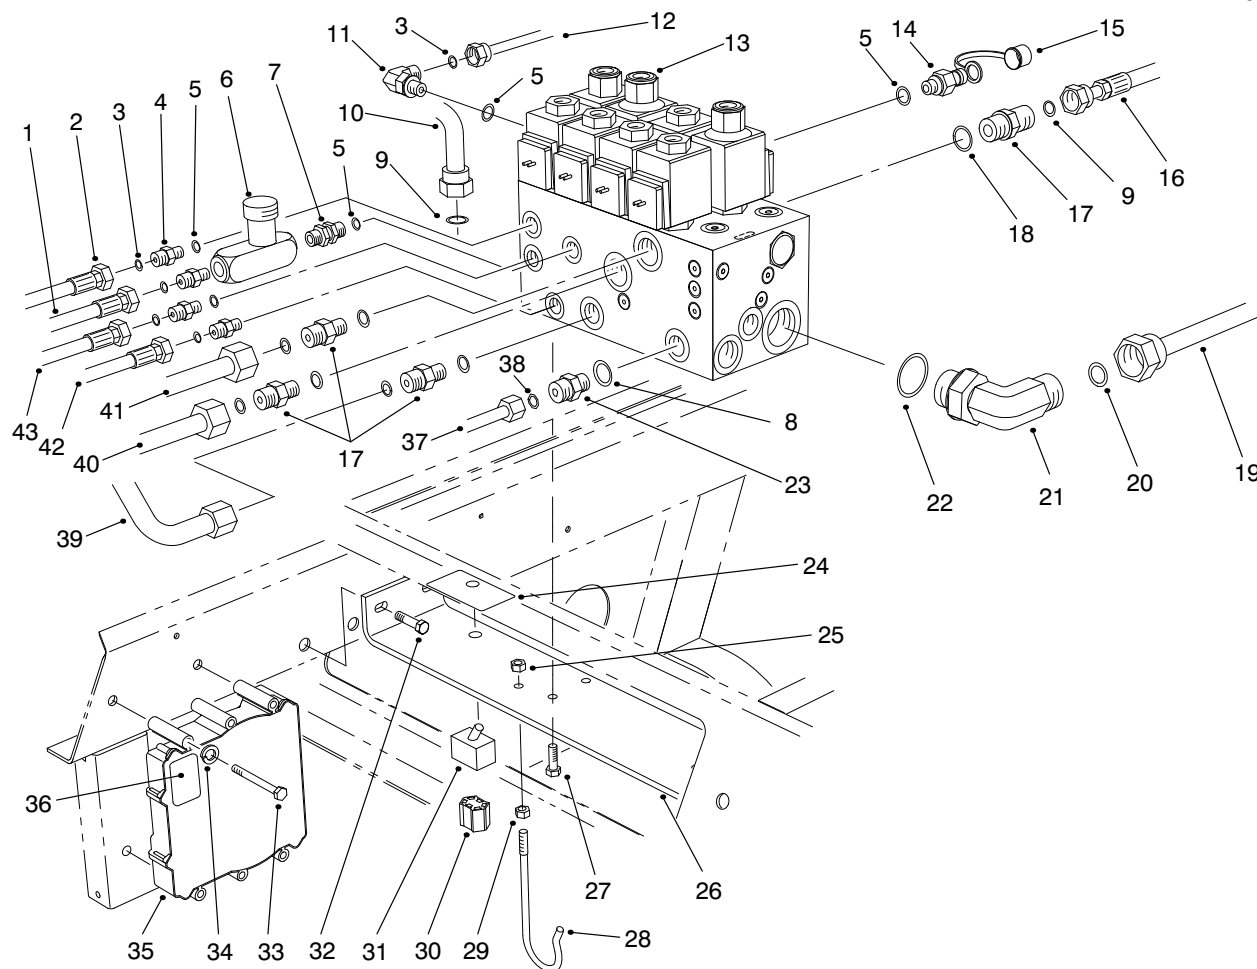

T-2374-1

FRONT HYDRAULIC BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-6490	Asm-Hose	1	22	237-81	O-Ring	1
2	92-7562	Asm-Hose	1	23	340-2	Adapter-Hydraulic (Incl. Ref. #8 & 38)	1
3	237-21	O-Ring	5	24	93-1264	Decal-Switch, Backlap	1
4	340-92	Fitting-Hydraulic (Incl. Ref. #3 & 5)	4	24	94-4580	Decal-Switch, Backlap (Japan)	1
5	237-78	O-Ring	8	25	3296-29	Nut-Lock	1
6	93-7489	Valve-Control, Flow	1	26	92-7519	Bracket-Block, Manifold	1
7	93-7597	Fitting-SAE (Incl. Ref. #5)	1	27	33104-016	Screw-HHF	4
8	237-42	O-Ring	1	28	93-7970	Form-Wire, Hose Mount	1
9	237-30	O-Ring	4	29	3217-6	Nut-Jam	1
10	92-7479	Asm-Tube	1	30	99-8963	Harness-Wire, Main	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)	1	31	93-7487	Switch-Toggle	1
12	92-7591	Asm-Tube	1	32	3234-17	Screw-HFH	4
13	92-7418	Asm-Block, Control	1	33	321-36	Screw-HH	3
14	354-77	Fitting-Quick Connect (Incl. Ref. #5)	1	34	3253-3	Washer-Lock	3
15	354-79	Cap-Fitting	1	35	92-5720	Controller-Solid State	2
16	92-7491	Asm-Hose	1	36	93-8053	Decal-ECU Label (Europe)	1
17	340-4	Fitting-Hydraulic (Incl. Ref. #9 & 18)	4	37	93-4222	Asm-Tube, Drain Return	1
18	237-79	O-Ring	4	38	237-22	O-Ring	1
19	92-7557	Asm-Tube	1	39	94-1447	Asm-Tube, Steering Ret.	1
20	237-65	O-Ring	1	40	93-4217	Asm-Tube	1
21	340-139	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1	41	93-4216	Asm-Tube	1
				42	92-7565	Asm-Hose	1
				43	92-7564	Asm-Hose	1

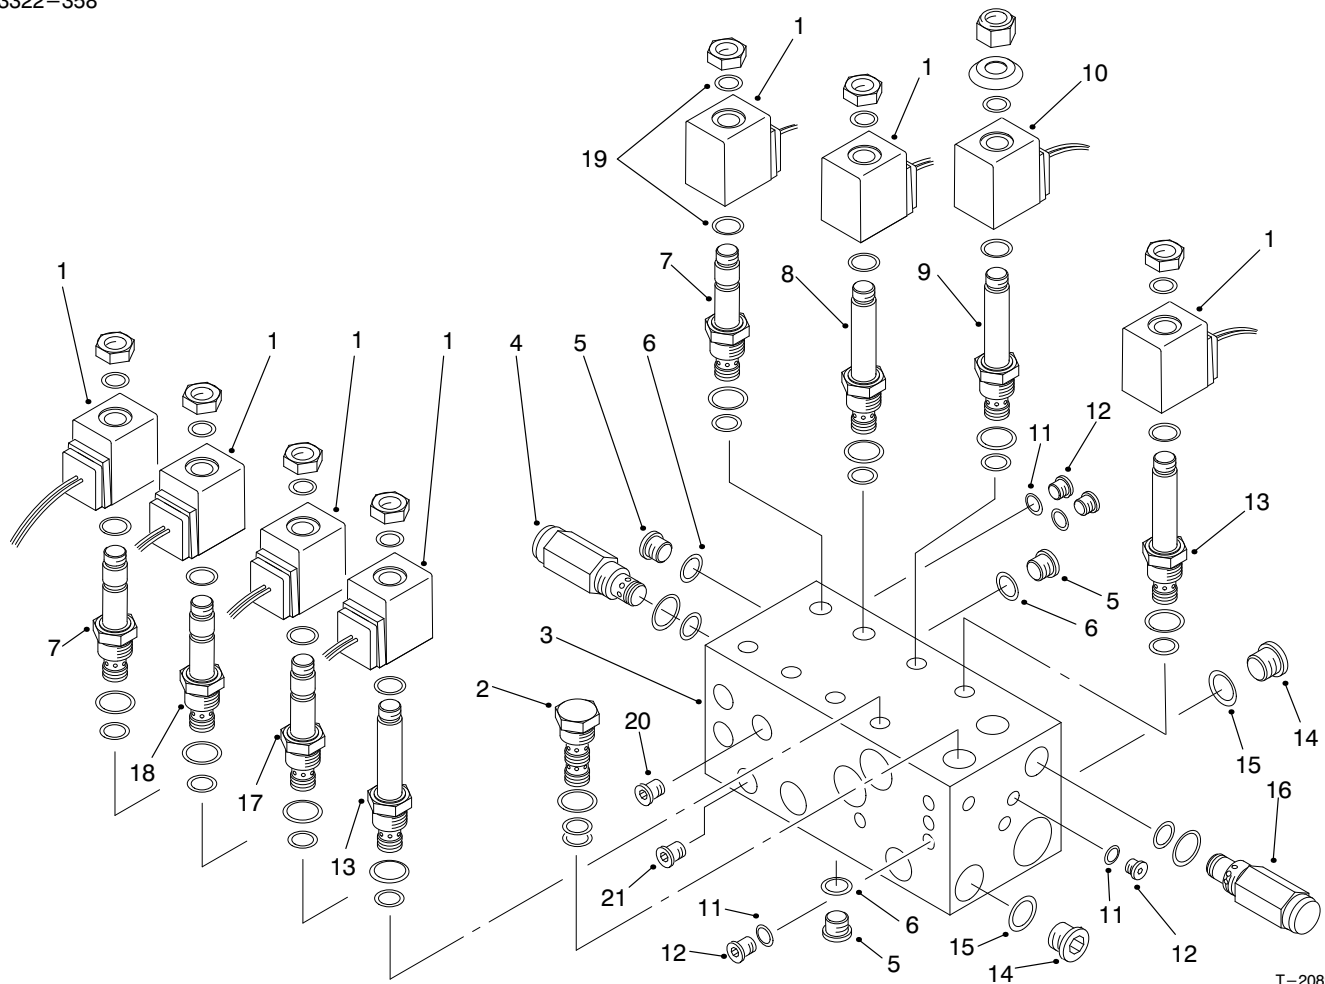 

T-2089-2


FRONT MANIFOLD BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	7
2	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1
†3		Block-Manifold, Front	1
4	93-7492	Cartridge-Relief 2300 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10
6	237-78	O-Ring	10
7	88-6990	Cartridge-N.C. (Use Seal Kit 75-2080)	2
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1
9	95-3459	Cartridge-N.O. (Use Seal Kit 75-2080)	1
10	88-9200	Solenoid-28 Watt	1
11	237-156	O-Ring	10
12	353-991	Plug (Incl. Ref. #11)	10

Ref. No.	Part No.	Description	No. Used
13	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
14	353-989	Plug (Incl. Ref. #15)	5
15	237-42	O-Ring	5
16	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
17	88-6980	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	1
18	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
19	94-5438	Seal-Solenoid	16
20	94-3077	Plug-Orifice	1
21	94-8140	Plug-Orifice	1
*	75-2080	Seal Kit	7
*	69-4260	Seal Kit	2

*Not Illustrated

 
†Not Serviced Separately

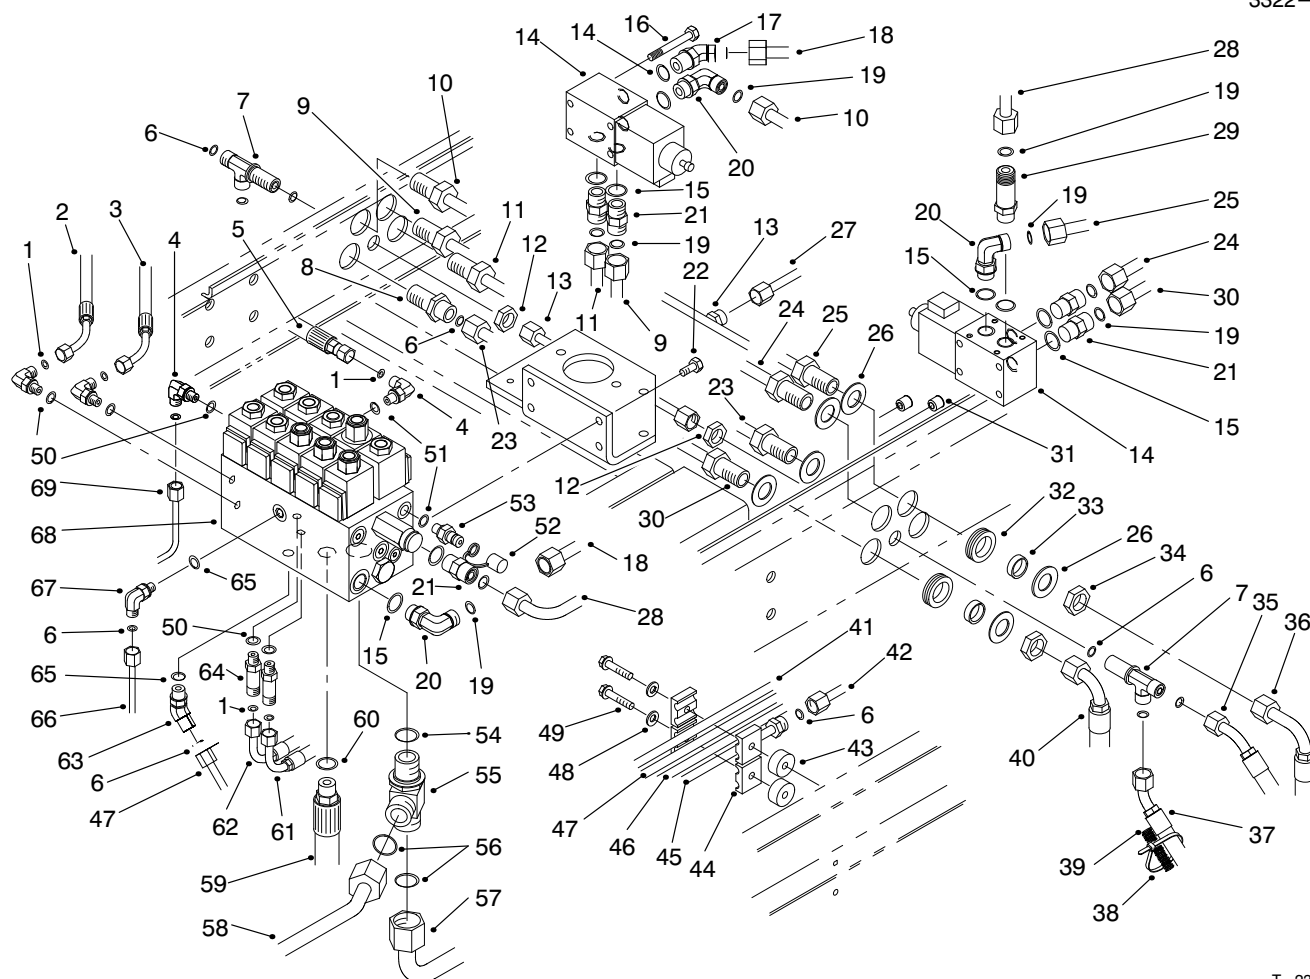

T-2360-2

REAR HYDRAULIC MANIFOLD BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-21	O-Ring	4	28	93-7950	Asm-Tube	1
2	92-7635	Asm-Hose	1	29	94-2628	Adapter-Hydraulic	1
3	92-7641	Asm-Hose	1	30	93-7954	Asm-Tube	1
4	340-132	Fitting-90°	4	31	32148-7	Nut-Clinch	4
5	92-7638	Asm-Hose	1	32	240-5	Grommet-Rubber	4
6	237-22	O-Ring	10	33	69-8960	Spacer	4
7	340-68	Fitting-Tee	2	34	340-127	Nut-Bulkhead	4
8	340-161	Fitting-Bulkhead Adapter	1	35	94-1433	Asm-Hose	2
9	93-7957	Asm-Tube	1	36	94-1432	Asm-Hose	4
10	93-7955	Asm-Tube	1	37	99-5614	Asm-Hose	2
11	93-7956	Asm-Tube	1	38	3290-378	Tie-Cable	6
12	340-70	Nut-Lock, Bulkhead	2	39	99-8963	Harness-Wire, Main	1
13	93-7959	Asm-Tube	1	40	99-5613	Asm-Hose	4
14	76-9970	Asm-Valve, Solenoid	2	41	92-7495	Asm-Steering Tube, Rear	1
15	237-79	O-Ring	9	42	92-7553	Asm-Tube, Rear Drain	1
17	340-101	Fitting-45°	1	43	80-8660	Spacer	2
18	93-7951	Asm-Tube	1	44	56-7973	Clamp-Tube	10
19	237-30	O-Ring	9	45	92-7598	Asm-Tube, Front Drain	1
20	340-98	Fitting-90°	3	46	92-7601	Asm-Tube, Rear Aux.	1
21	340-4	Fitting-Hydraulic	5	47	92-7494	Asm-Steering Tube, Rear	1
22	33104-025	Screw-HHF	4	48	3256-23	Washer-Flat	7
23	93-7958	Asm-Tube	1	49	32104-37	Screw-HH	2
24	93-7053	Asm-Tube	1	50	237-78	O-Ring	5
25	93-7952	Asm-Tube	1	51	354-77	Fitting-Quick Connect	1
26	69-8930	Washer	16	52	354-79	Cap-Fitting	1
27	94-2629	Asm-Tube, Drain	1	54	237-81	O-Ring	1

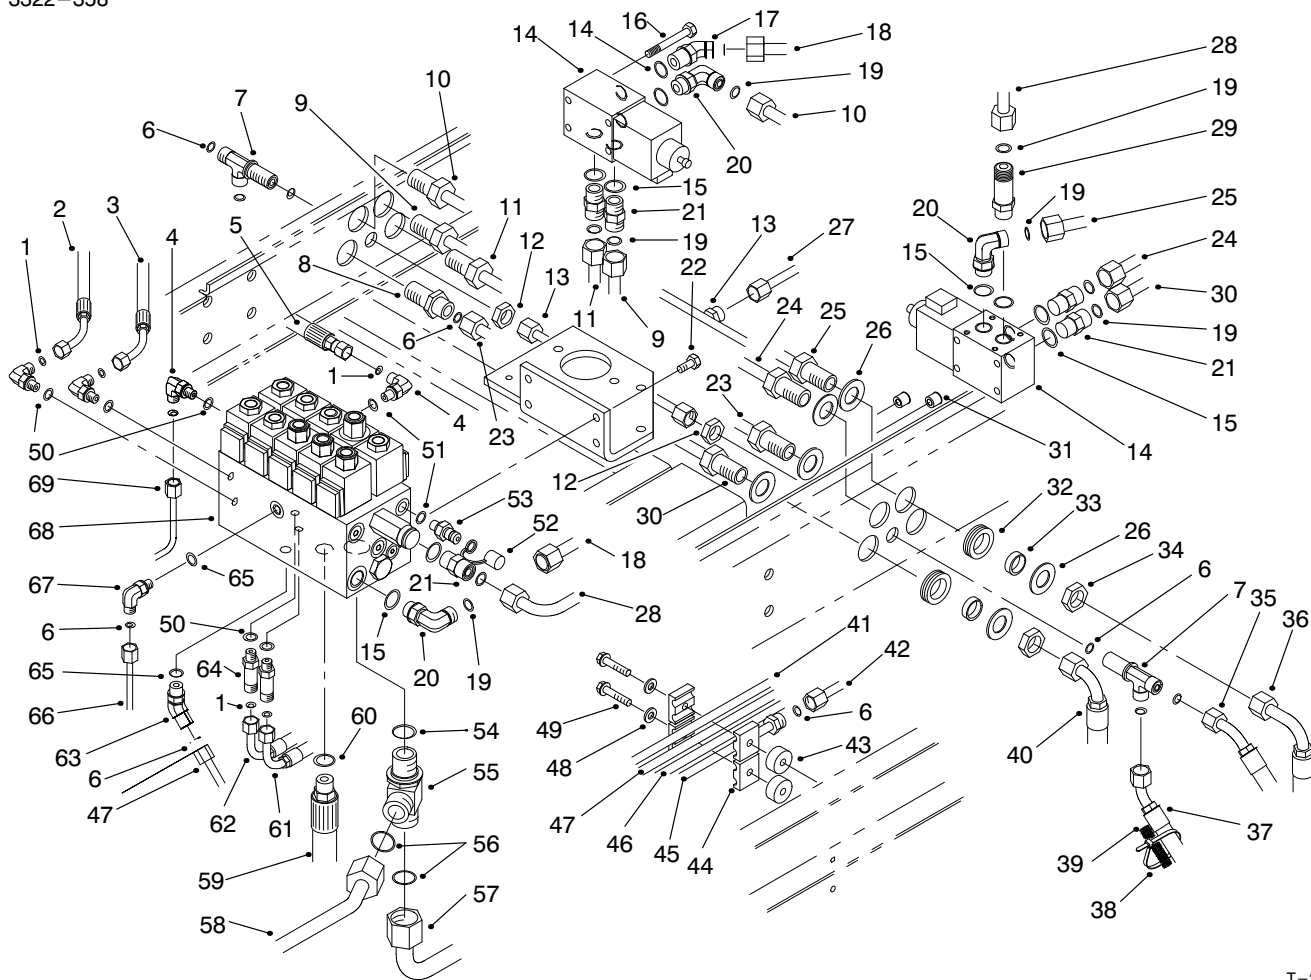 


T-2360-2

REAR HYDRAULIC MANIFOLD BLOCK & HOSES (Cont.)

Ref. No.	Part No.	Description	No. Used
55	340-148	Fitting-Tee	1
56	237-58	O-Ring	2
57	92-7558	Asm-Rear Cooler Tube	1
58	92-7557	Asm-Front Cooler Tube	1
59	92-7492	Asm-Hose	1
60	237-80	O-Ring	1
61	92-7640	Asm-Hose	1
62	92-7639	Asm-Hose	1

Ref. No.	Part No.	Description	No. Used
63	340-87	Fitting-45°	1
64	94-1403	Adapter-Hydraulic	2
65	237-42	O-Ring	2
66	92-7602	Asm-Tube, Aux. Return	1
67	340-77	Fitting-90°	1
68	92-7384	Asm-Block, Manifold	1
69	92-7592	Asm-Tube	1

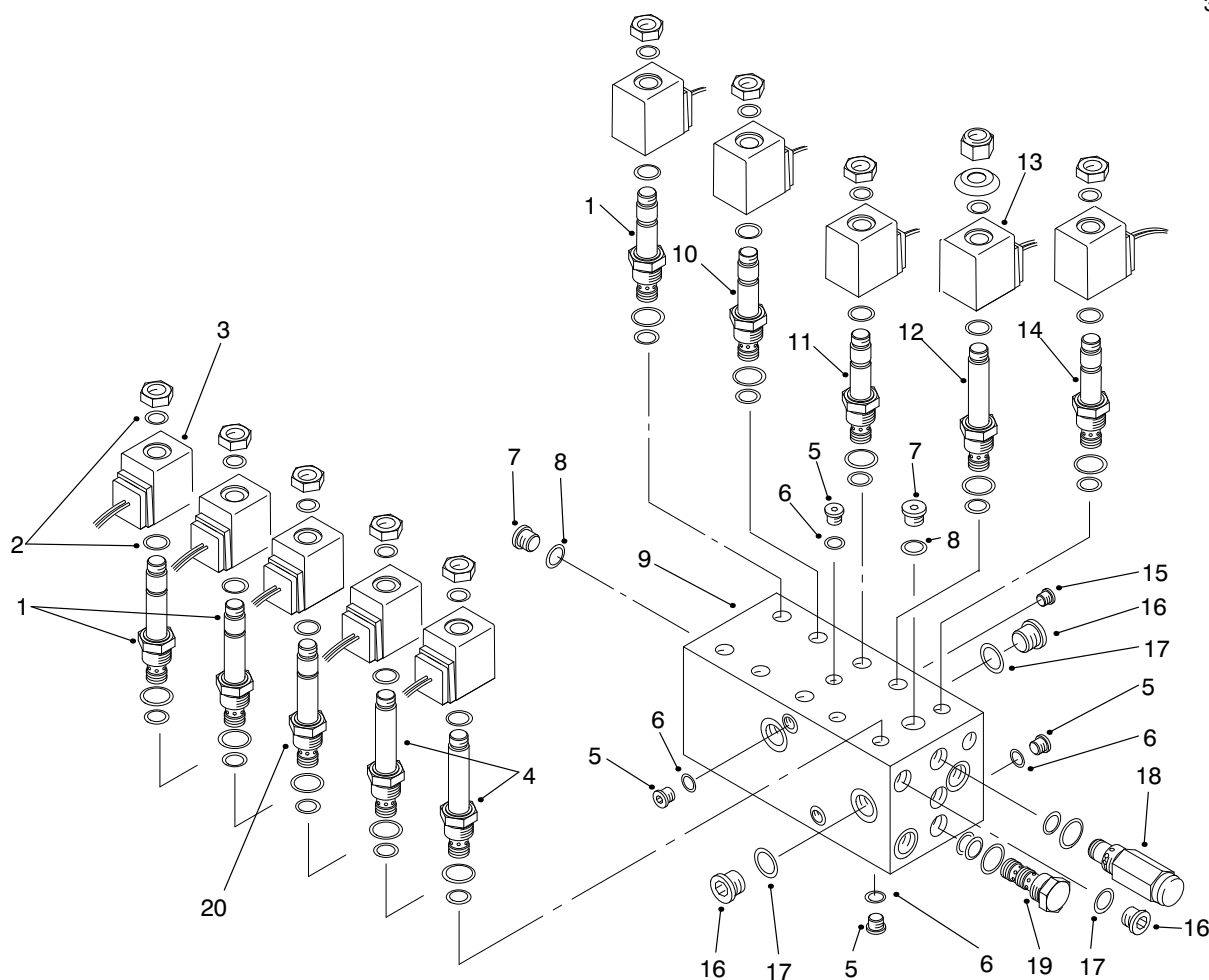 


T-2372-1

REAR MANIFOLD BLOCK ASSEMBLY NO. 92-7384

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-6990	Cartridge-N.C. Spool (Use Seal Kit 75-2080)	3	13	88-9200	Solenoid-28 Watt	1
2	94-5438	Seal-Solenoid	20	14	88-6980	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
3	88-9190	Solenoid-20 Watt	9	15	94-2626	Plug-Orifice	1
4	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2	16	353-989	Plug (Incl. Ref. #17)	5
5	353-991	Plug (Incl. Ref. #6)	13	17	237-42	O-Ring	5
6	237-156	O-Ring	13	18	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
7	353-990	Plug (Incl. Ref. #8)	5	19	93-7491	Cartridge-N.O. Poppet (Use Seal Kit 69-4260)	1
8	237-78	O-Ring	5	20	93-7495	Cartridge-3W2P Pull (Use Seal Kit 69-4260)	1
†9		Block-Manifold, Rear	1	*	69-4260	Seal Kit	2
10	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1	*	75-2080	Seal Kit	6
11	94-2627	Cartridge-W/2P (Use Seal Kit 75-2090)	1	*	75-2090	Seal Kit	1
12	95-3459	Cartridge-No Flow (Use Seal Kit 75-2080)	1				

*Not Illustrated

 †Not Serviced Separately

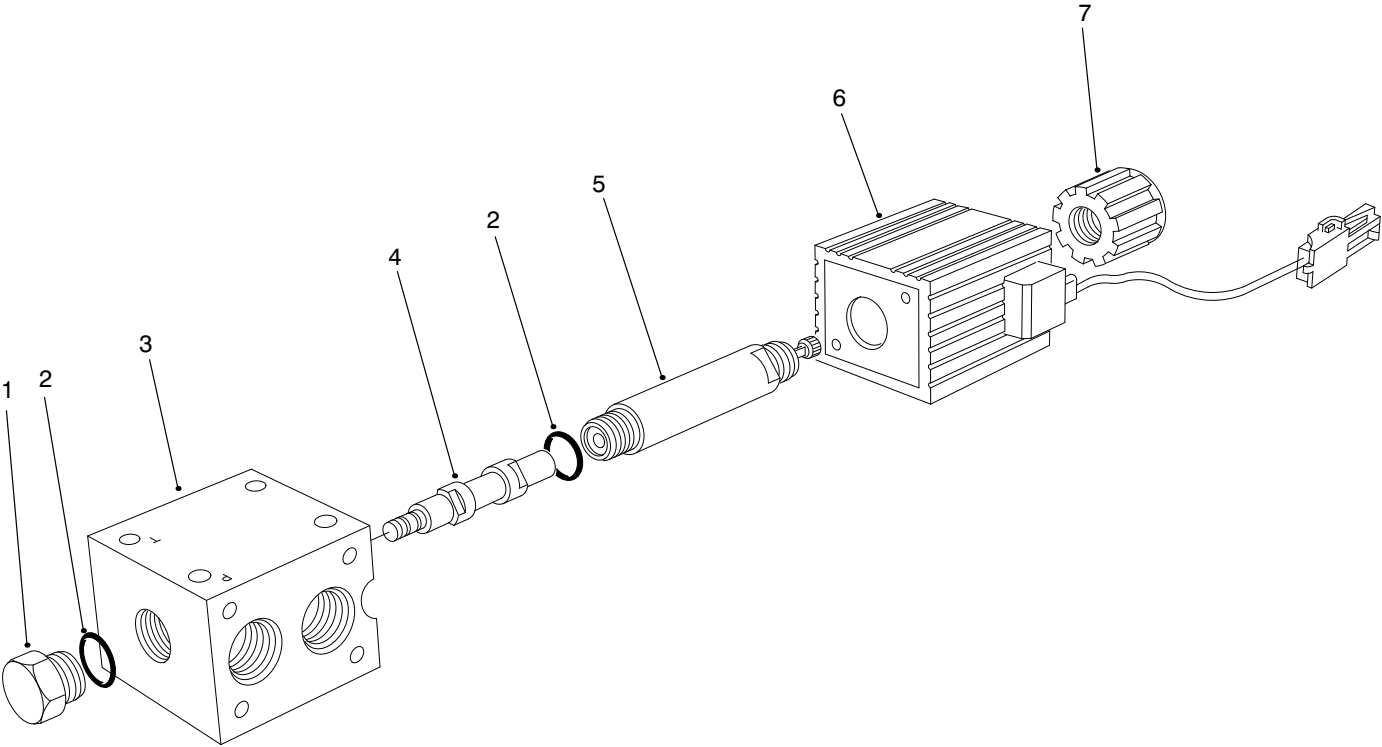


T-1126-1

SOLENOID VALVE ASSEMBLY NO. 76-9970

Ref. No.	Part No.	Description	No. Used
1	237-80	Asm-Adapter (Incl. Ref. #2)	1
2		O-Ring	2
3		Valve-Directional	1
4		Spool	1

Ref. No.	Part No.	Description	No. Used
5	218-591	Asm-Tube (Incl. Ref. #2)	1
6		Asm-Coil	1
7		Nut-Coil	1

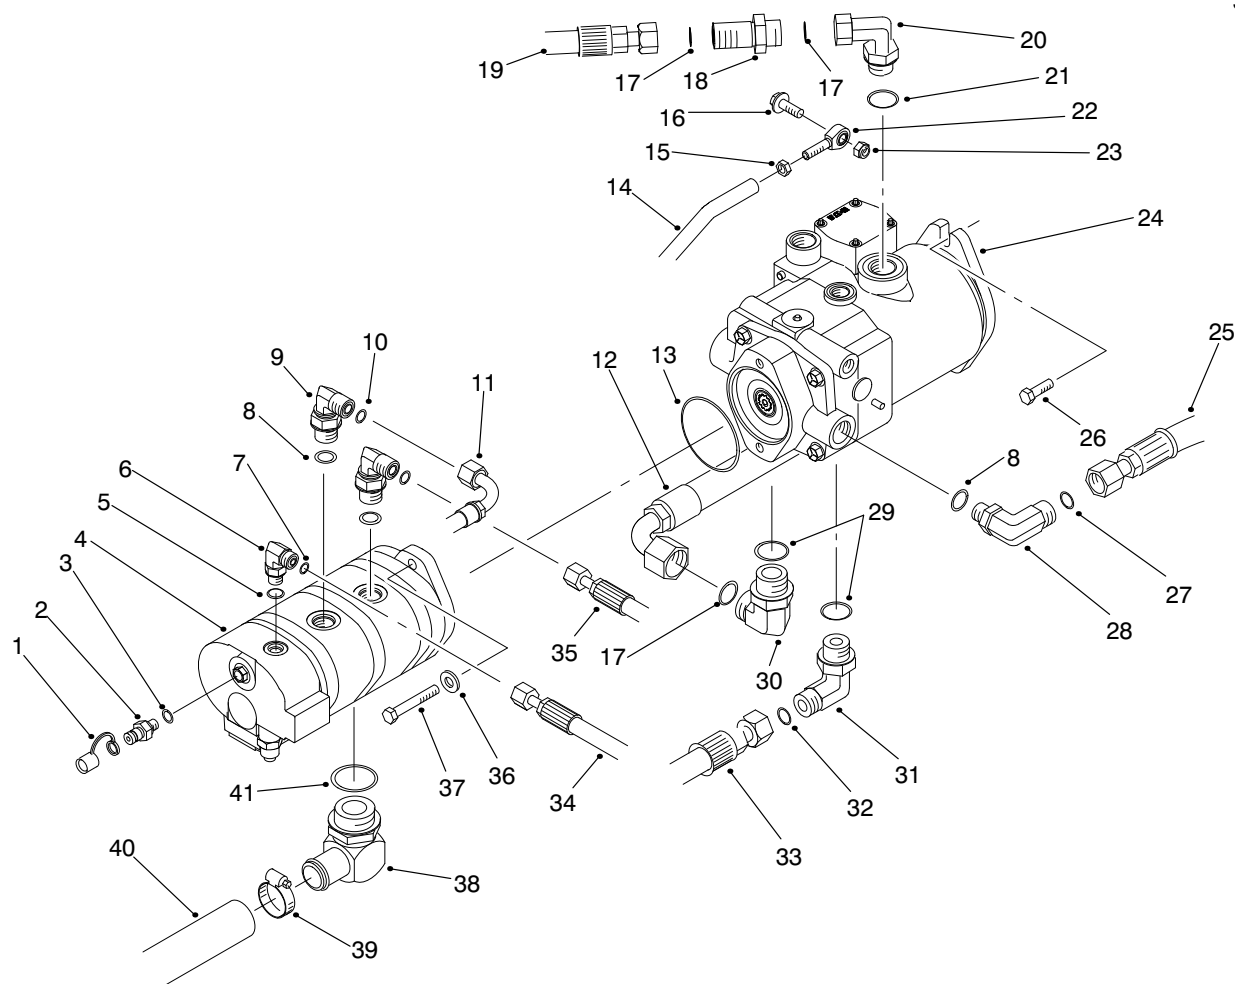 


T-2370-1

PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	354-79	Cap-Dust	4	21	237-81	O-Ring	1
2	354-77	Fitting-Quick Connect (Incl. Ref. #3)	4	22	2411-36	Bearing-Rod End	1
3	237-78	O-Ring	4	23	3296-59	Nut-Lock	1
4	94-3066	Asm-Pump, Gear	1	24	98-3730	Pump-Piston	1
5	237-42	O-Ring	1	25	92-7490	Asm-Hose, Filter	1
6	340-77	Fitting-Hydraulic 90° (Incl. Ref. #5 & 7)	1	26	82-5050	Screw-HH	2
7	237-22	O-Ring	1	27	237-65	O-Ring	1
8	237-80	O-Ring	3	28	340-17	Fitting-Hydraulic 90° (Incl. Ref. #8 & 27)	1
9	340-105	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	2	29	237-146	O-Ring	2
10	237-30	O-Ring	2	30	340-15	Fitting-Hydraulic 90° (Incl. Ref. #17 & 29)	1
11	92-7491	Asm-Hose	1	31	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32)	1
12	92-7484	Asm-Hose	1	32	340-65	O-Ring	2
13	237-99	O-Ring	1	33	92-7485	Asm-Hose	1
14	92-7531	Tube-Rod, Control	1	34	92-7622	Asm-Hose, Steering	1
15	3220-3	Nut-Jam	1	35	92-7492	Asm-Hose	1
16	3234-11	Screw-HFH	1	36	3256-46	Washer-Flat	2
17	237-58	O-Ring	3	37	323-7	Screw-HH	2
18	94-2637	Fitting-Hydraulic, Straight (Incl. Ref. #17)	1	38	92-7526	Fitting-Hydraulic, Suction	1
19	92-7489	Hose-Return	1	39	2412-111	Clamp-Hose	2
20	94-2636	Fitting-Hydraulic 90°	1	40	92-7465	Hose-Suction	1
				41	237-101	O-Ring	1

*Not Illustrated

 SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

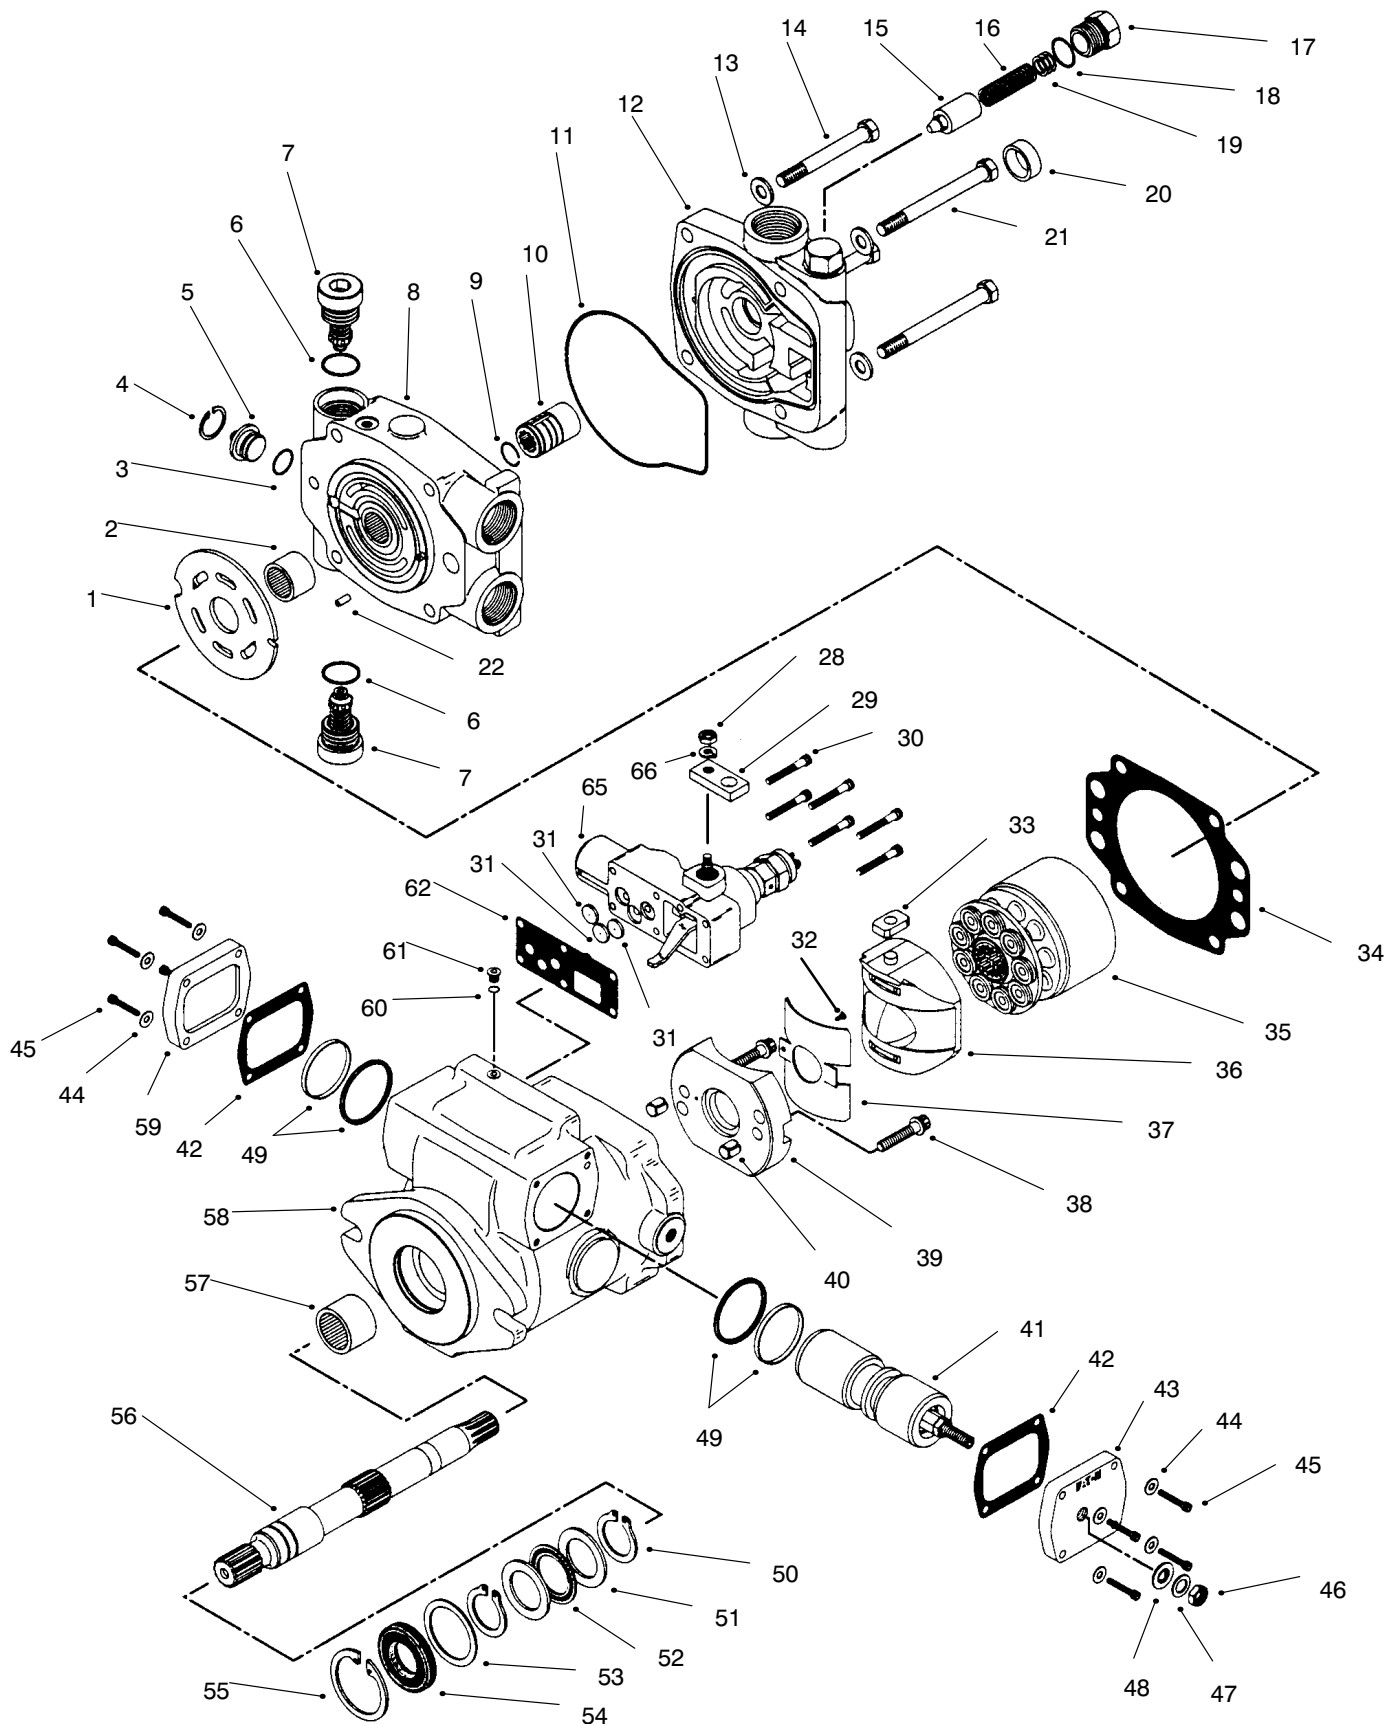


SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate-Valve	1
†2		Bearing	1
3	94-3036	Ring-Quad	1
4	94-3037	Ring-Retaining	1
5	94-3038	Plug-Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve-Relief	2
8	94-3016	Asm-Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring-Lock	1
10	94-3023	Coupler	1
†11		O-Ring, Molded	1
12	94-3017	Adaptor-Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer-Flat	4
14	94-3028	Screw	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw	2
†22		Pin-Roll	1
28	3217-5	Nut	1
29	94-3031	Arm-Control	1
30	3274-59	Screw	6
31	94-3040	Orifice-Valve, Control	3
†32		Screw	1
33	94-3032	Follower-Piston	1
†34		Gasket-Housing	1
35	94-3021	Asm-Kit, Rotating	1
36	94-3026	Asm-Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw	1
†39		Asm-Cradle	1
†40		Dowel-Bushing	2
41	94-3025	Asm-Piston, Servo	1
†42		Gasket-Plate, Cover	2
43	94-3034	Plate-Cover	1
44	3256-77	Washer-Flat	8
45	3274-81	Screw	8
46	3220-3	Nut-Jam	1
47	94-3030	Washer	1
48	94-3027	Washer-Seal	1
†49		Seal	2
50	76-7000	Ring-Retaining	2
51	76-6950	Race-Thrust	1
52	76-6960	Bearing-Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal-Shaft	1
55	76-7010	Ring-Retaining	1
56	94-3020	Shaft-Drive	1
†57		Bearing	1
58	94-3018	Asm-Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate-Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control-Servo, Manual	1
66	3253-3	Washer-Lock	1
*	94-3039	Kit-Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

 †Not Serviced Separately.

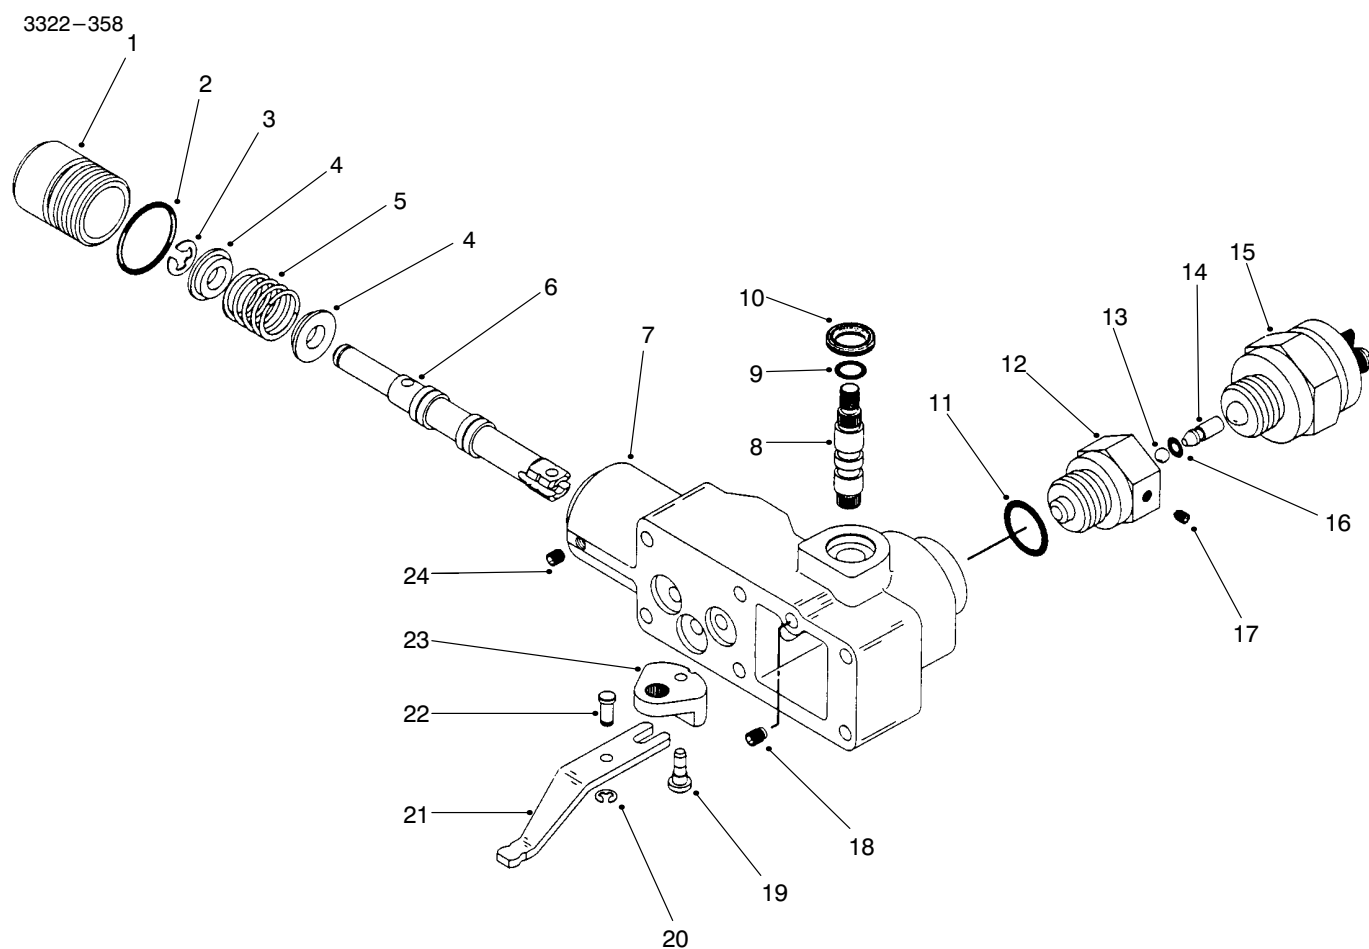

T-2119-1


MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used
1		Plug	1
2		O-Ring	1
3		Ring-Retaining	1
4		Retainer-Spring	2
5		Spring	1
6		Valve-Spool	1
7		Housing-Control	1
8		Shaft-Input	1
9		O-Ring	1
10		Seal-Wiper	1
11		O-Ring	1
12		Adaptor	1
13		Ball	1

Ref. No.	Part No.	Description	No. Used
14		Pin	1
15	94-3043	Switch	1
16		O-Ring	1
17		Screw-Set	1
18		Screw-Set	1
19		Pin	1
20		Ring-Retaining	1
21		Link	1
22		Pin-Dowel	1
23		Crank-Bell	1
24		Screw-Set	1
*	94-3044	Kit-Seal (Incl. Ref. #2, 9-11 & 16)	1

*Not Illustrated

 GEAR PUMP ASSEMBLY NO. 94-3066

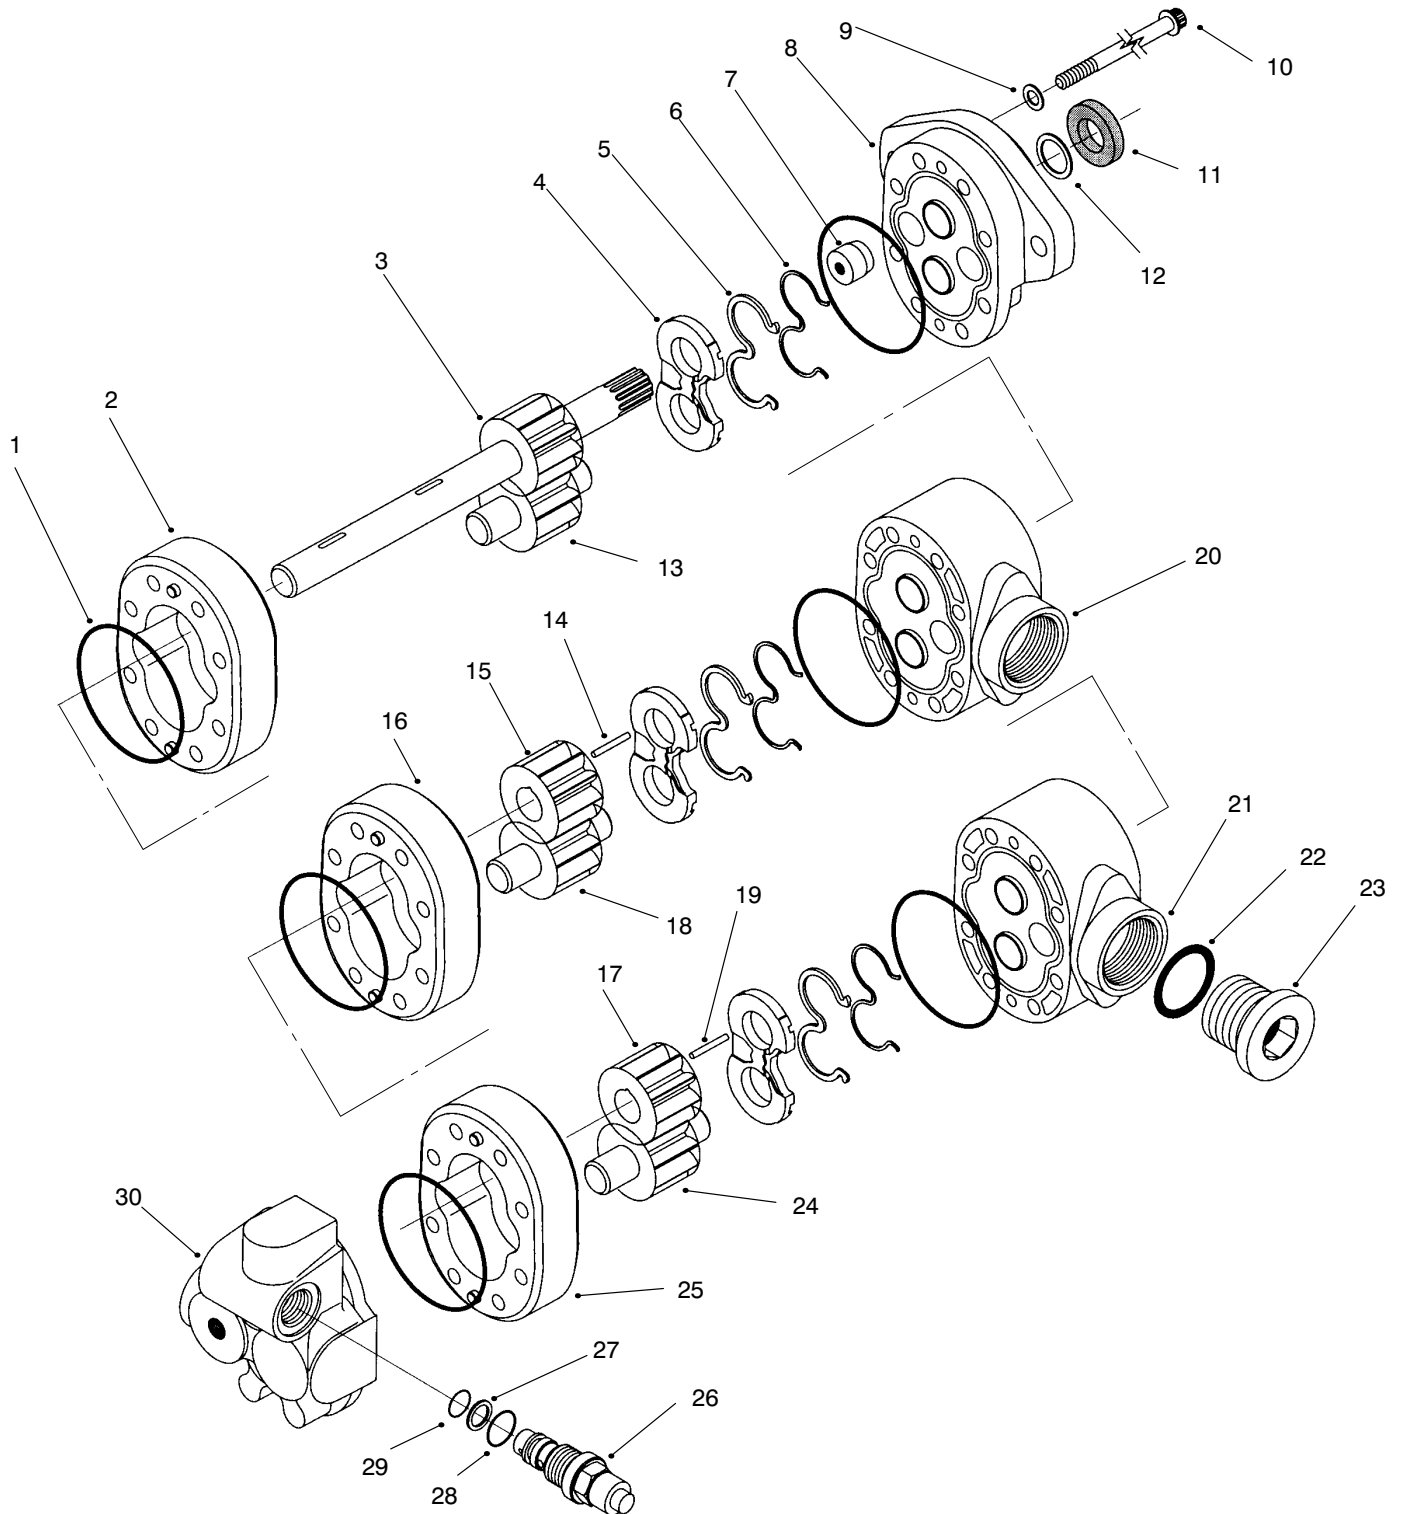


GEAR PUMP ASSEMBLY NO. 94-3066

Ref. No.	Part No.	Description	No. Used
1	56-6710	O-Ring	6
†2		Body	1
†3		Asm-Gear, Drive	1
4		Plate-Wear	3
5		Seal-Pressure, Balance	3
6		Gasket-Backup	3
7	94-3011	Plug	1
†8		Asm-Plate, Front	1
9	74-8920	Washer-Copper	4
10	94-3012	Screw-Cap	8
11	49-2640	Seal-Shaft	1
12	60-5890	Washer	1
†13		Gear-Idler	1
†14		Key	1
†15		Gear	1
†16		Body	1
†17		Gear	1

Ref. No.	Part No.	Description	No. Used
†18		Gear-Idler	1
†19		Key	1
†20		Plate-Adaptor	1
†21		Plate-Adaptor	1
†22		O-Ring	1
23	94-3013	Plug (Incl. Ref. #22)	1
†24		Gear-Idler	1
†25		Body	1
26	94-3014	Valve-Relief (Incl. Ref. #27-29)	1
†27		Washer-Backup	1
†28		O-Ring	1
†29		O-Ring	1
†30		Asm-Backplate	1
*	94-3015	Kit-Seal (Incl. Ref. #1, & 4-6)	1

*Not Illustrated

 † Not Serviced Separately.

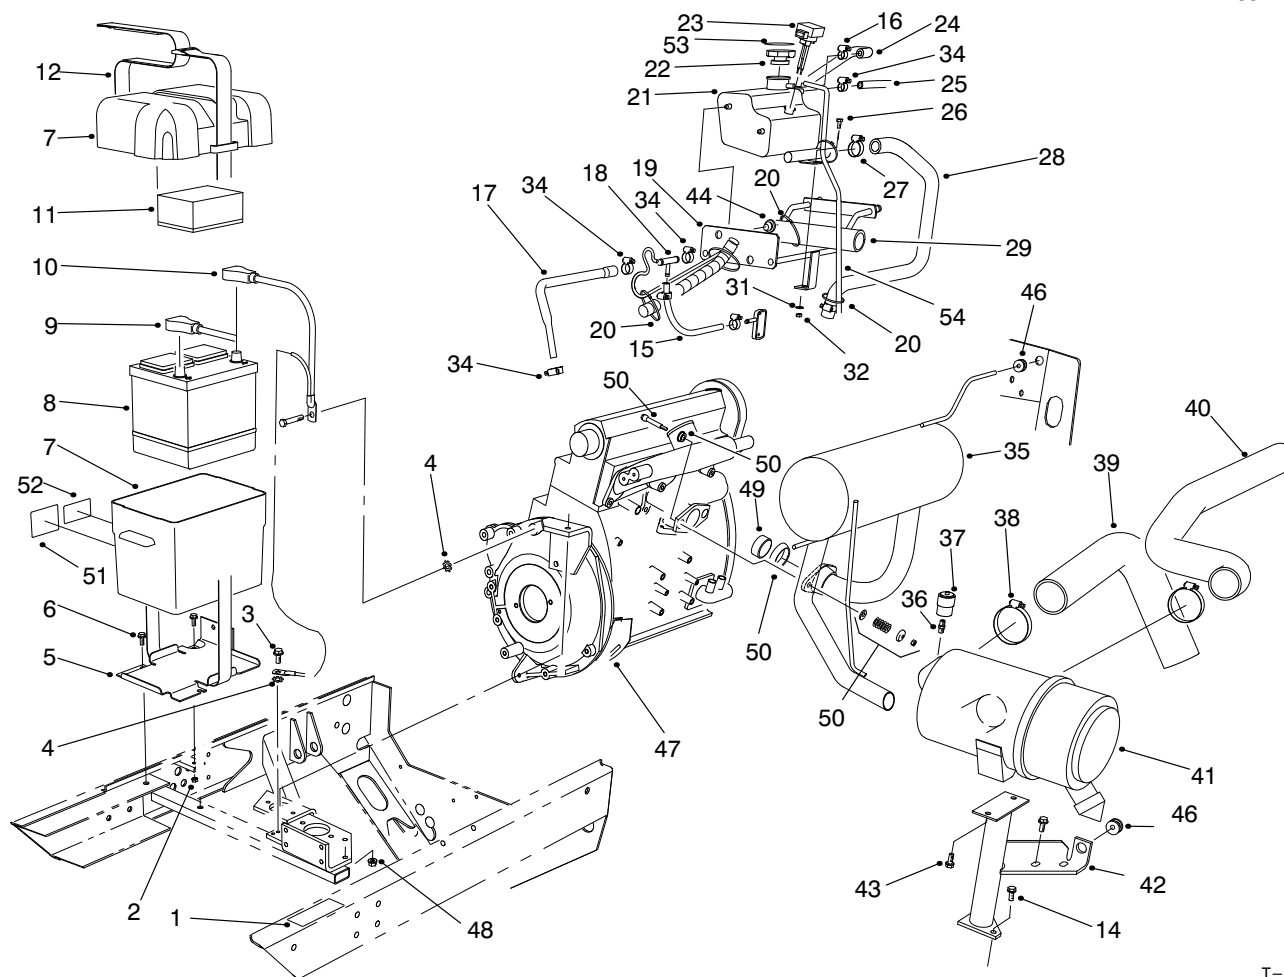


T-2373-7

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-1265	Decal-Hot Surface	1	27	2412-129	Clamp-Hose	2
1	94-4578	Decal-Hot Surface (Japan)	1	28	93-7589	Hose-Overflow	1
2	3296-29	Nut-Lock	1	29	93-4215	Hose-Radiator, Upper Rear	1
3	32144-11	Screw-TAP	1	31	33093-00	Washer	1
4	3255-9	Washer-Lock	2	32	33023-00	Nut-Lock	1
5	93-7974	Plate-Battery, Box	1	34	2412-36	Clamp-Hose	4
6	3234-5	Screw-FH	3	35	93-9178	Muffler	1
7	93-7595	Asm-Box, Battery	1	*	94-2849	Muffler-Spark Arrestor	1
†8		Battery	1	36	94-1416	Adapter-Indicator	1
9	75-1370	Cable-Battery, Positive	1	37	93-9164	Indicator-Service	1
10	94-1411	Cable-Battery, Negative	1	38	2412-125	Clamp-Hose	2
11	93-7968	Pad-Foam, Battery	1	39	94-2624	Hose-Manifold	1
12	94-1445	Strap-Battery	1	40	93-7584	Hose-Intake	1
14	33105-030	Screw-HHF	2	41	93-7485	Asm-Filter, Air	1
15	63-7622	Hose-Fuel	1	42	94-8108	Support-Filter, Air	1
16	2412-108	Clamp-Hose	3	43	33104-016	Screw-HHF	2
17	94-2630	Hose-Return	1	†44	94-2801	Grommet-Rubber	2
18	93-4207	Fitting-Tee	1	46	94-2812	Grommet	2
19	94-1408	Wireform-Overflow	1	†47	77-3600	Plate-Closing	1
20	3290-378	Tie-Cable	5	48	33005-00	Nut-HF	2
†21	98-1805	Box-Degassing	1	†49	94-2815	Sleeve-Exhaust Flange	1
†22	94-2800	Cap-Radiator	1	†50	94-2814	Kit-Exhaust Coupler	1
†23	94-9984	Sensor-Water Level	1	51	93-6668	Decal-Charging (Europe)	1
24	93-7591	Hose-Return	1	52	93-7276	Decal-Danger (Europe)	1
25	92-7424	Hose-Overflow, Radiator	1	53	93-7840	Decal-Cap (Europe)	1
26	33103-020	Screw-HHF	1	54	55-4130	Hose-Fuel	1

† Furnished with engine.

 ‡ Obtain locally.

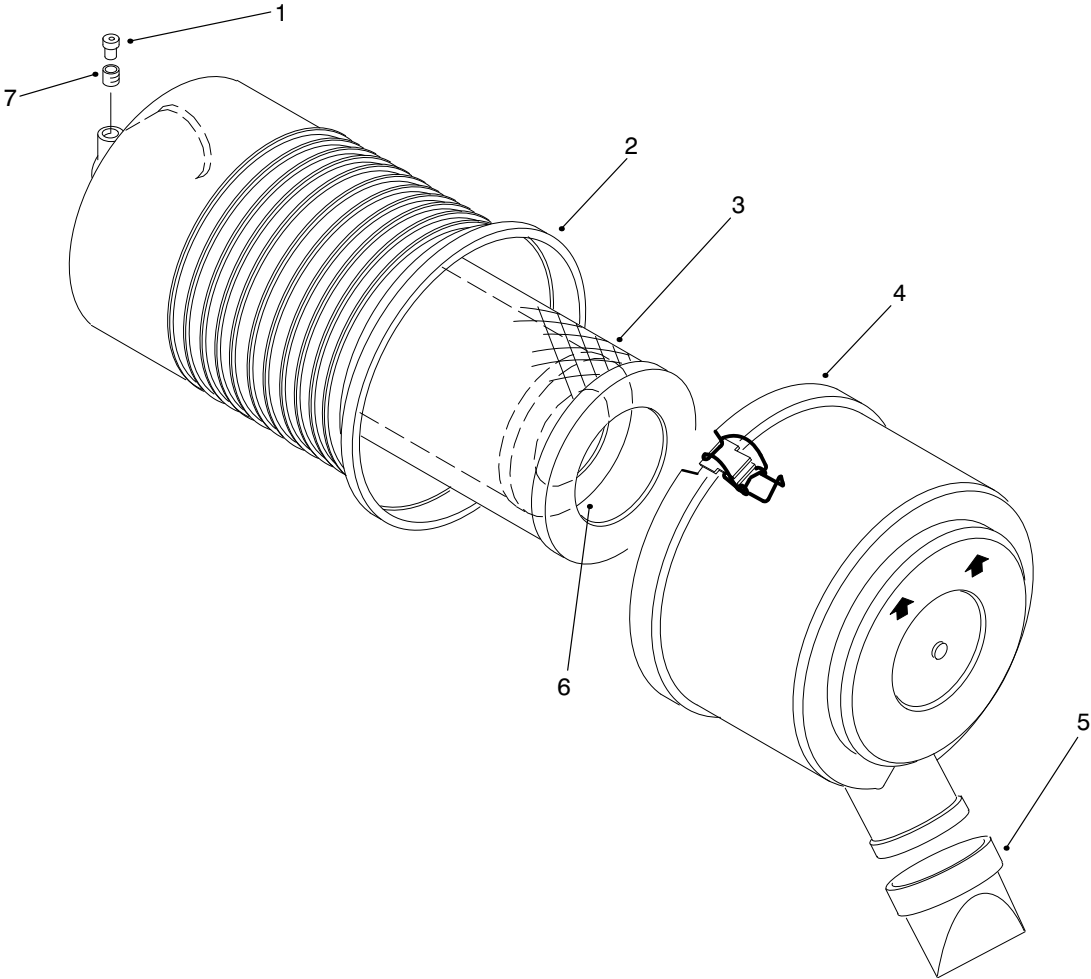


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm-Body	1
3	93-9162	Filter-Primary	1
4	93-5986	Asm-Cover	1


Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve-Vacuator	1
6	93-9163	Filter-Safety	1
7	94-1416	Asm-Adaptor	1

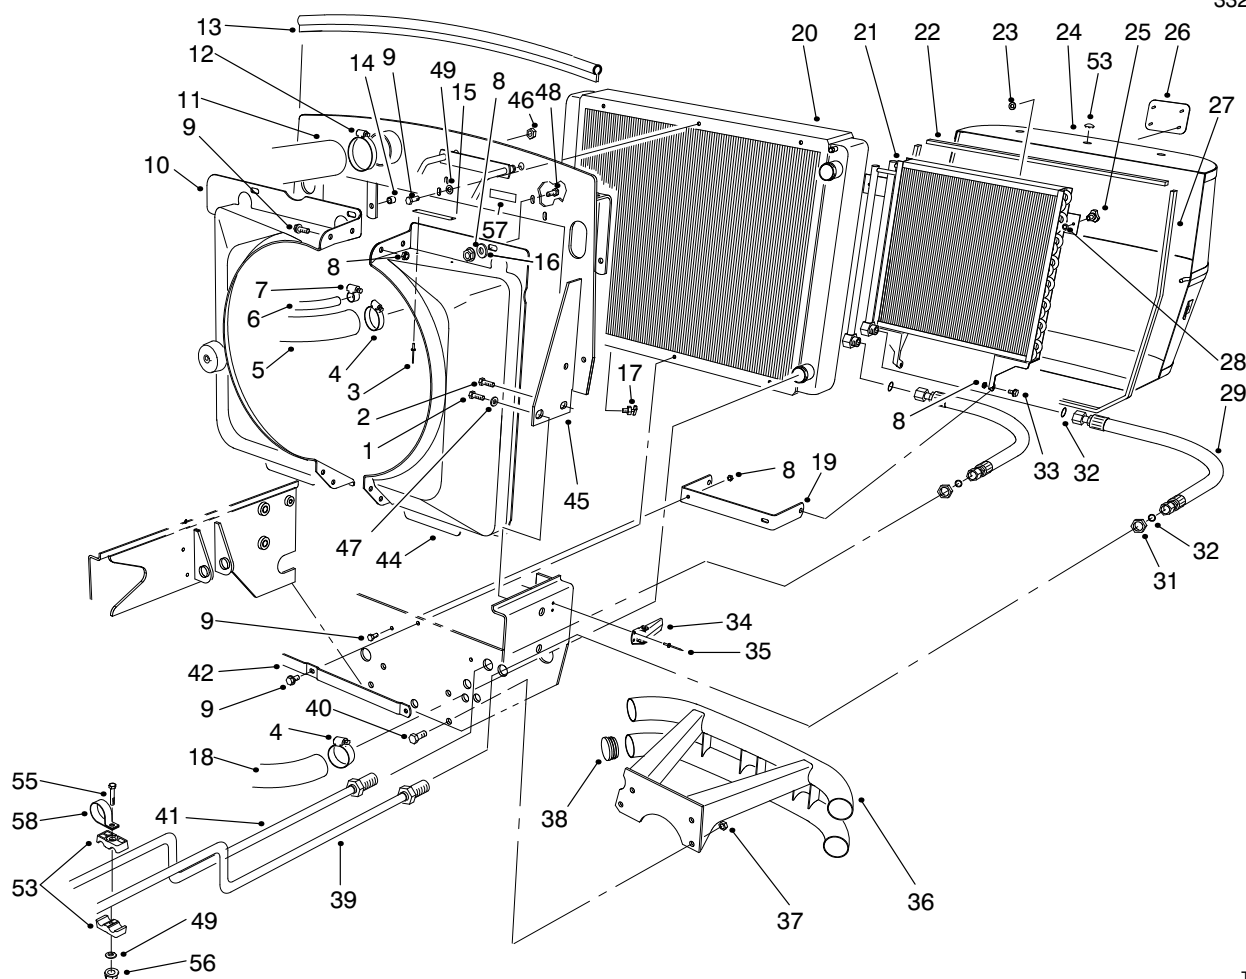 

T-2073-7

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw-HHF	2	28	32151-72	Retainer-Push On	2
2	3234-18	Screw-HHF	2	29	92-7535	Asm-Hose, Oil Cooler	2
3	3290-271	Rivet-Pop	2	31	340-74	Nut-Bulkhead	2
4	2412-3	Clamp-Hose	2	32	237-65	O-Ring	4
5	93-4215	Hose-Radiator, Upper Rear	1	33	37-8771	Bolt-Shoulder	2
6	92-7424	Hose-Radiator, Overflow	1	34	69-3020	Latch-Draw	2
7	2412-36	Clamp-Hose	1	35	3269-4	Rivet-Pop	4
8	32128-20	Nut-HFH	4	36	92-7623	Bumper	1
9	3234-5	Screw-HF	9	37	3296-23	Nut-Lock	4
10	92-7374	Shroud-Fan RH	1	38	2410-42	Cap-Bumper	4
11	93-7584	Hose-Intake	1	39	92-7493	Asm-Tube, Filter	1
12	2412-125	Clamp-Hose	1	40	325-5	Screw-HH	2
13	93-7553	Seal-Hood	1	41	92-7558	Asm-Tube, Cooler	1
14	32148-10	Nut-Clinch	2	42	92-7416	Strap-Radiator	1
15	76-8750	Plate-Warning, Fan	1	44	92-7375	Shroud-Fan LH	1
16	3256-56	Washer-Flat	3	45	92-7388	Support-Radiator	1
17	304-46	Nut-Drain Cock	1	46	3296-23	Nut-Lock	2
18	92-7463	Hose-Radiator, Lower	1	47	3256-27	Washer-Flat	2
19	92-7516	Bracket-Support, Cooler	1	48	3230-2	Screw-Carriage	3
20	74-3410	Asm-Radiator	1	49	3256-23	Washer-Flat	4
21	82-3740	Cooler-Oil	1	53	2410-64	Button-Plug	3
22	92-7631	Sealstrip-Screen	1	54	94-8105	Clamp-Tube	2
23	94-2638	Nut-Push On	4	55	322-9	Screw-HH	1
24	92-7505	Screen	1	56	3296-47	Nut-Lock	1
25	77-3620	Retainer-Cover	2	57	93-6681	Decal-Warning, (Europe)	1
26	93-6028	Plate-Logo, Toro	1	58	2412-147	Clamp-R	1
27	93-4208	Strip-Seal, Screen	1				

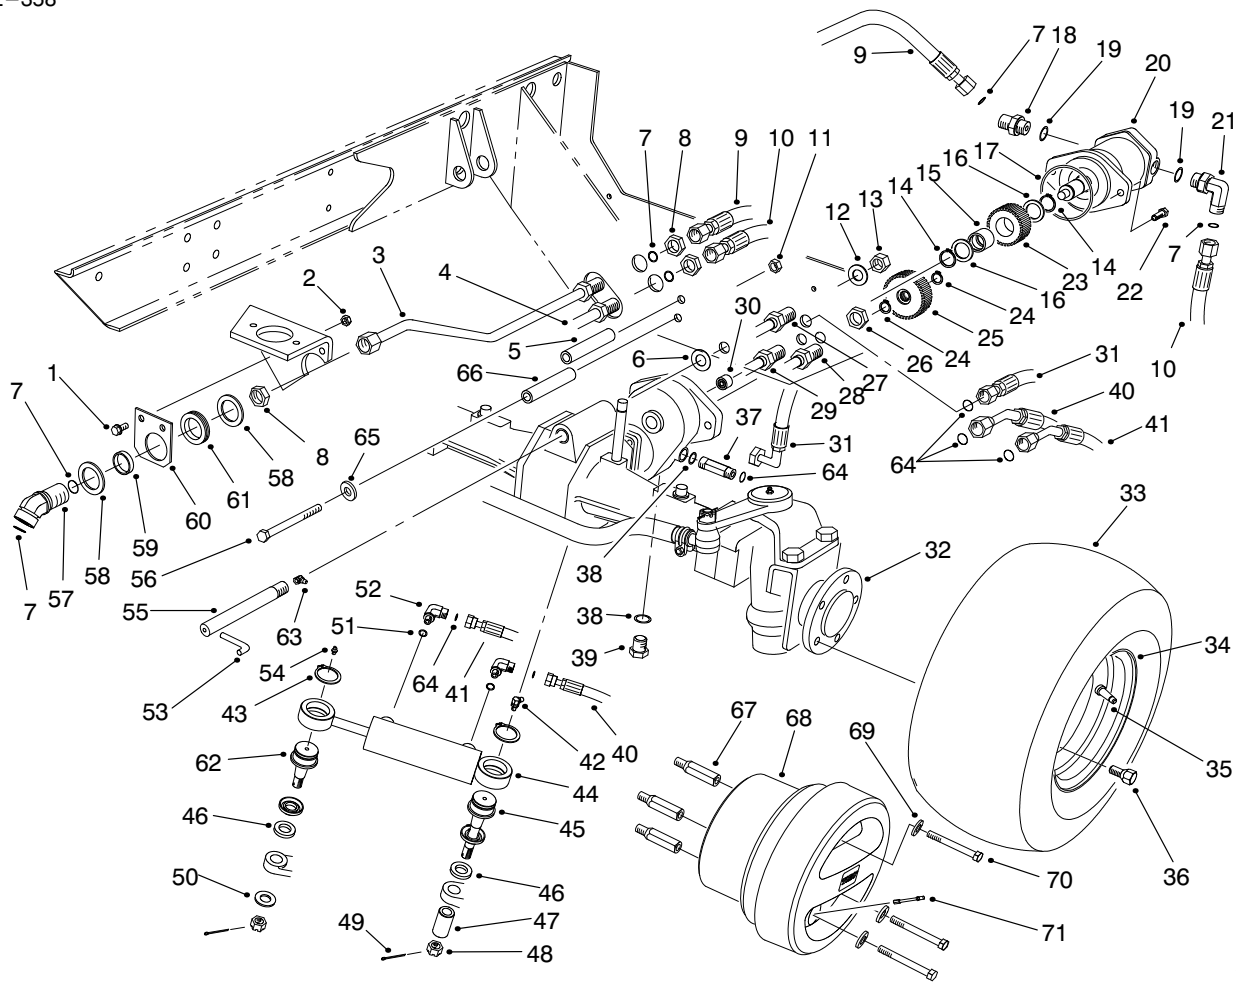 


T-2077-6

4-WD AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	2
2	32128-21	Nut-HFH	2
3	92-7472	Asm-Tube, Rear (Incl. Ref. #7)	1
4	92-7473	Asm-Tube, Rear (Incl. Ref. #7)	1
5	76-8350	Stop-Axle, 4WD	2
6	93-7247	Washer-Thrust	1
7	237-58	O-Ring	6
8	340-126	Nut-Bulkhead	3
9	92-7536	Asm-Hose, Rear Motor	1
10	92-7537	Asm-Hose, Rear Motor	1
11	3296-45	Nut-Lock	4
12	3256-29	Washer-Flat	1
13	94-8000	Nut-Lock	1
14	32151-96	Ring-Retaining	1
15	71-4580	Clutch-Roller	1
16	71-4590	Washer-Thrust	2
17	237-166	O-Ring	1
18	340-9	Fitting-Hydraulic (Incl. Ref. #7 & 19)	1
19	237-81	O-Ring	2
20	92-7386	Motor-Hydraulic	1
21	340-142	Fitting-Hydraulic 90° (Incl. Ref. #7 & 19)	1
22	325-4	Screw-HH	2
23	94-3099	Gear-Driver	1
24	32120-15	Ring-Retaining	2


Ref. No.	Part No.	Description	No. Used
25	94-3098	Gear-Driven	1
26	340-70	Nut-Lock	3
27	92-7553	Asm-Tube, Rear Drain (Incl. Ref. #64)	1
28	92-7495	Asm-Tube, Steering (Incl. Ref. #64)	1
29	92-7494	Asm-Tube, Steering (Incl. Ref. #64)	1
30	74-5700	Bearing-Needle	1
31	92-7534	ASM-Hose	1
32	98-2447	Axle-4WD	1
33	86-5910	Tire	2
34	217-125	Wheel	2
35	232-27	Stem-Valve	2
36	74-5500	Bolt-Wheel	10
37	340-2	Adapter (Incl. Ref. #38 & 64)	1
38	237-42	O-Ring	2
39	353-508	Plug (Incl. Ref. #38)	1
40	92-7539	Asm-Hose	1
41	92-7538	Asm-Hose	1
42	302-60	Fitting-Grease 90°	1
43	98-9973	Ring-Retaining	2
44	94-8141	Cylinder-Hydraulic	1
45	92-5839	Ball Joint	1
46	92-5833	Spacer-Ball Joint	2
47	92-5844	Spacer-Ball Joint	1

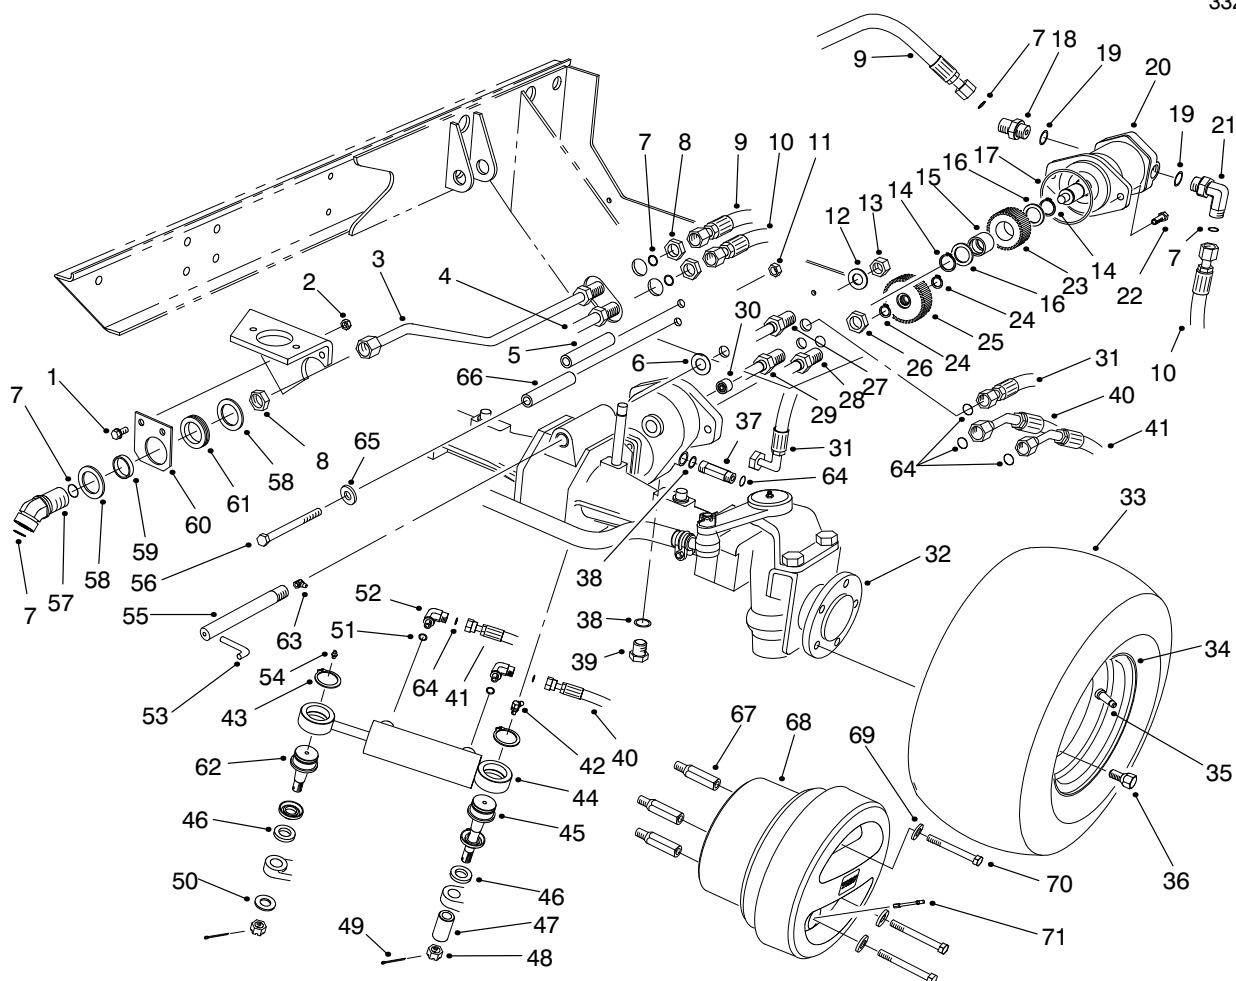 

T-2077-6

4-WD AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	32136-14	Nut-Hex. Slotted	2	60	92-7552	Bracket-Bulkhead	1
49	3272-12	Pin-Cotter	2	61	240-7	Grommet	1
50	92-5836	Washer-Axle	1	62	92-5838	Ball Joint	1
51	237-78	O-Ring	2	63	302-33	Fitting-Grease 90°	1
52	340-97	Fitting-Hydraulic 90° (Incl. Ref. #51 & 64)	2	64	237-22	O-Ring	6
53	92-7604	Pin-Stop	1	65	3256-26	Washer-Flat	7
54	302-5	Fitting-Grease	1	66	88-1550	Stop-Axle	2
55	94-8115	Pin-Axle, Pivot	1	67	94-2806	Adapter-Bolt, Wheel (Europe)	6
56	325-33	Screw-HH	4	68	94-3052	Weight-Wheel (Europe)	2
57	92-7646	Fitting-Hydraulic 45° (Incl. Ref. #7)	1	69	3256-26	Washer-Flat (Europe)	6
58	69-8910	Washer	2	70	3213-14	Screw-HH (Europe)	6
59	69-8900	Spacer	1	71	94-3063	Extension-Valve (Europe)	2

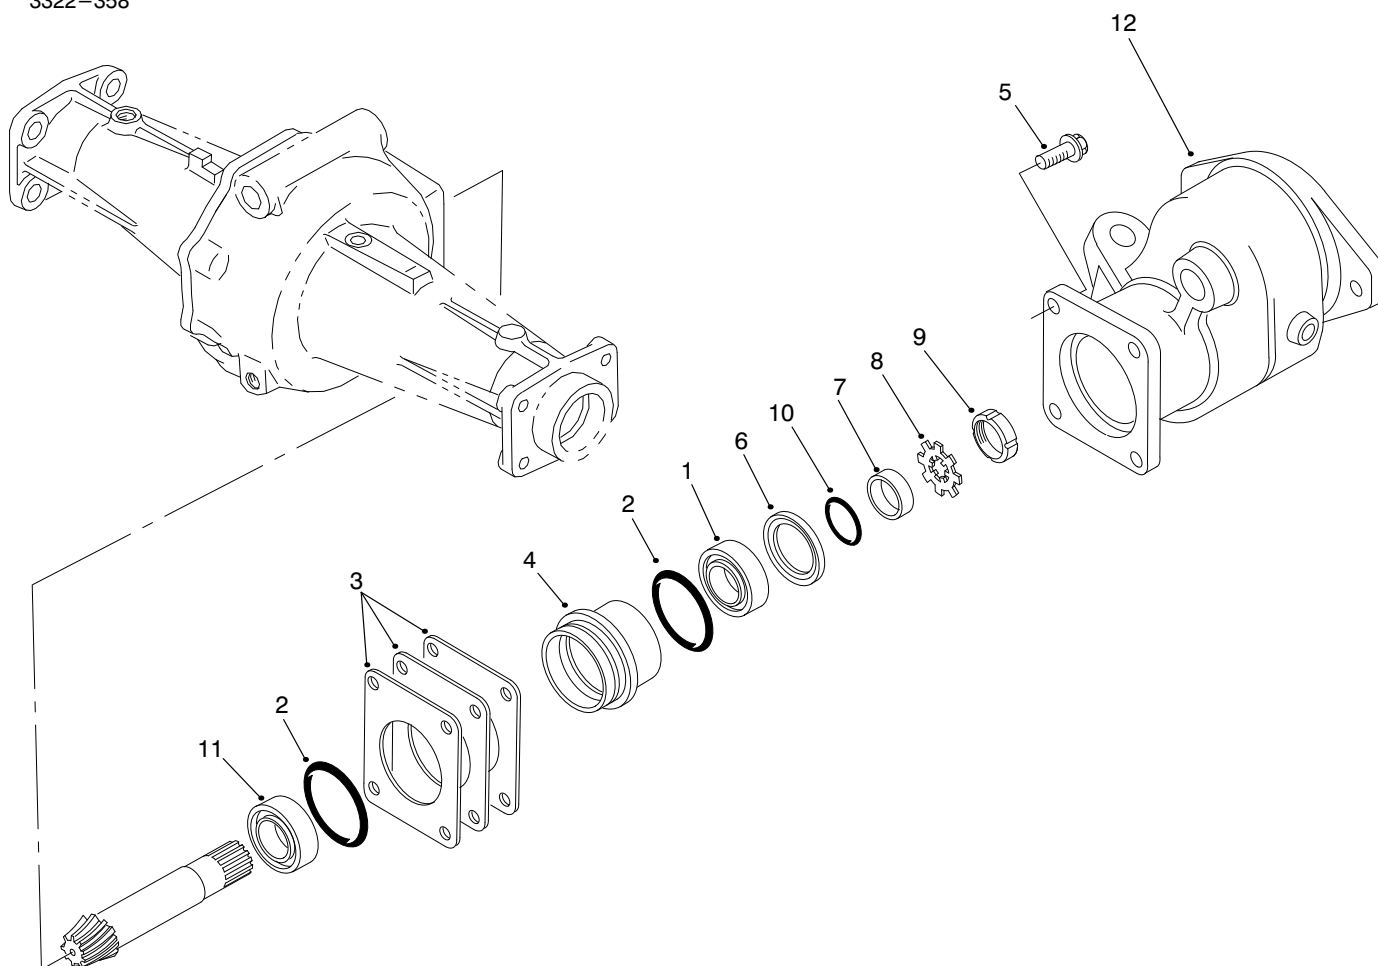 


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 98-2447

Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim-0.1 mm	A/R
*	76-7420	Shim-0.2 mm	A/R
*	76-7430	Shim-0.4 mm	A/R
4	76-7320	Sleeve	1
5	93-7773	Bolt	4
6	76-7340	Seal-Oil	1

Ref. No.	Part No.	Description	No. Used
7	76-7350	Bushing	1
8	76-7380	Washer	1
9	76-7390	Nut-Lock	1
10	76-7360	O-Ring	1
11	76-7370	Bearing	1
12	76-8070	Adapter	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

 
*Not Illustrated

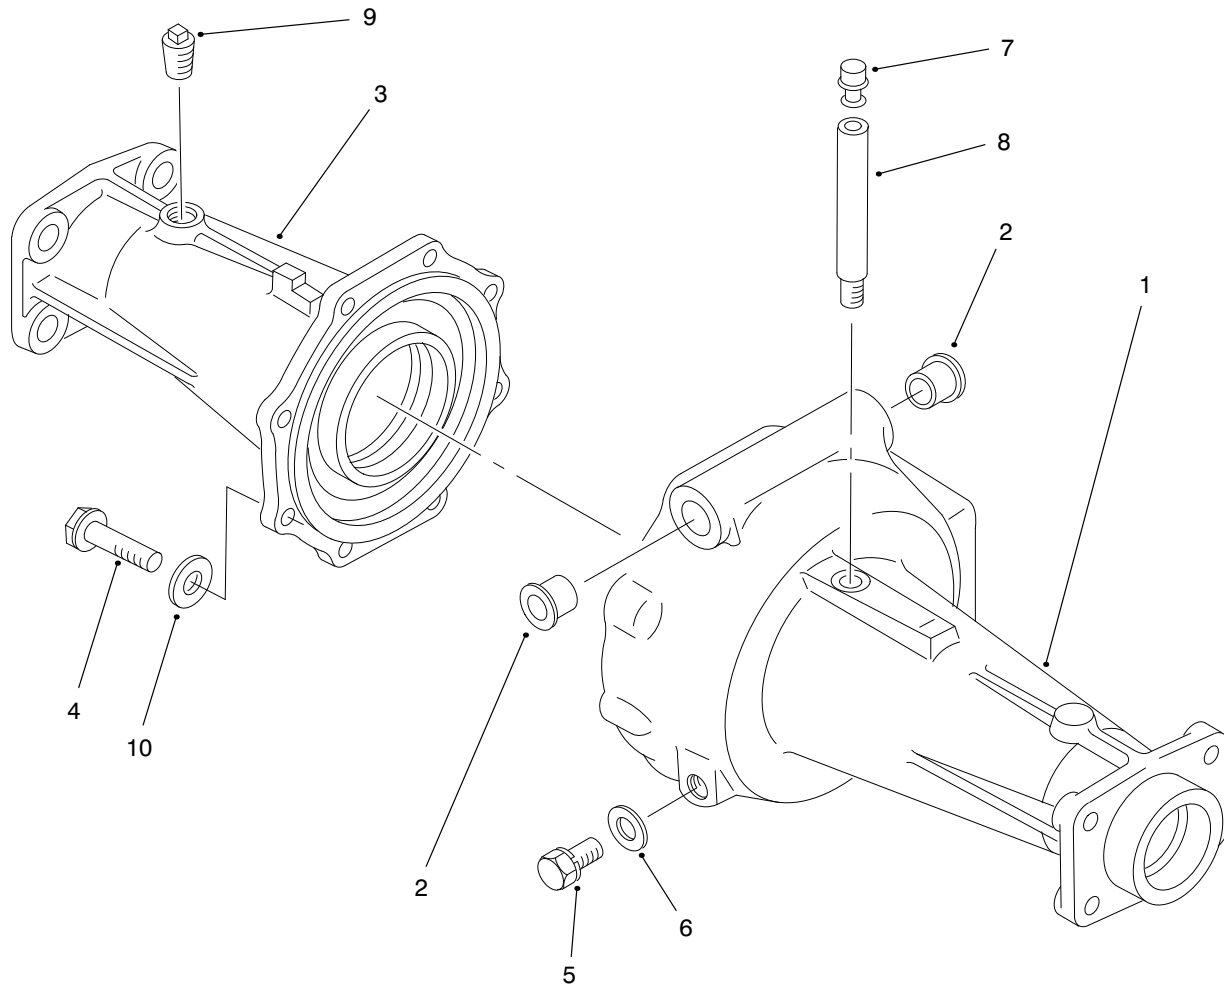

T-1112-2

AXLE HOUSING ASSEMBLY NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing-Axle A	1	6	76-7120	Seal-Washer	1
2	93-7787	Bushing-Flange	2	7	76-7480	Plug-Vent	1
3	93-7779	Housing-Axle B	1	8	76-7470	Pipe	1
4	93-7782	Screw-HHF	8	9	76-7140	Plug	1
5	76-7110	Plug	1	10	93-7781	Washer	8

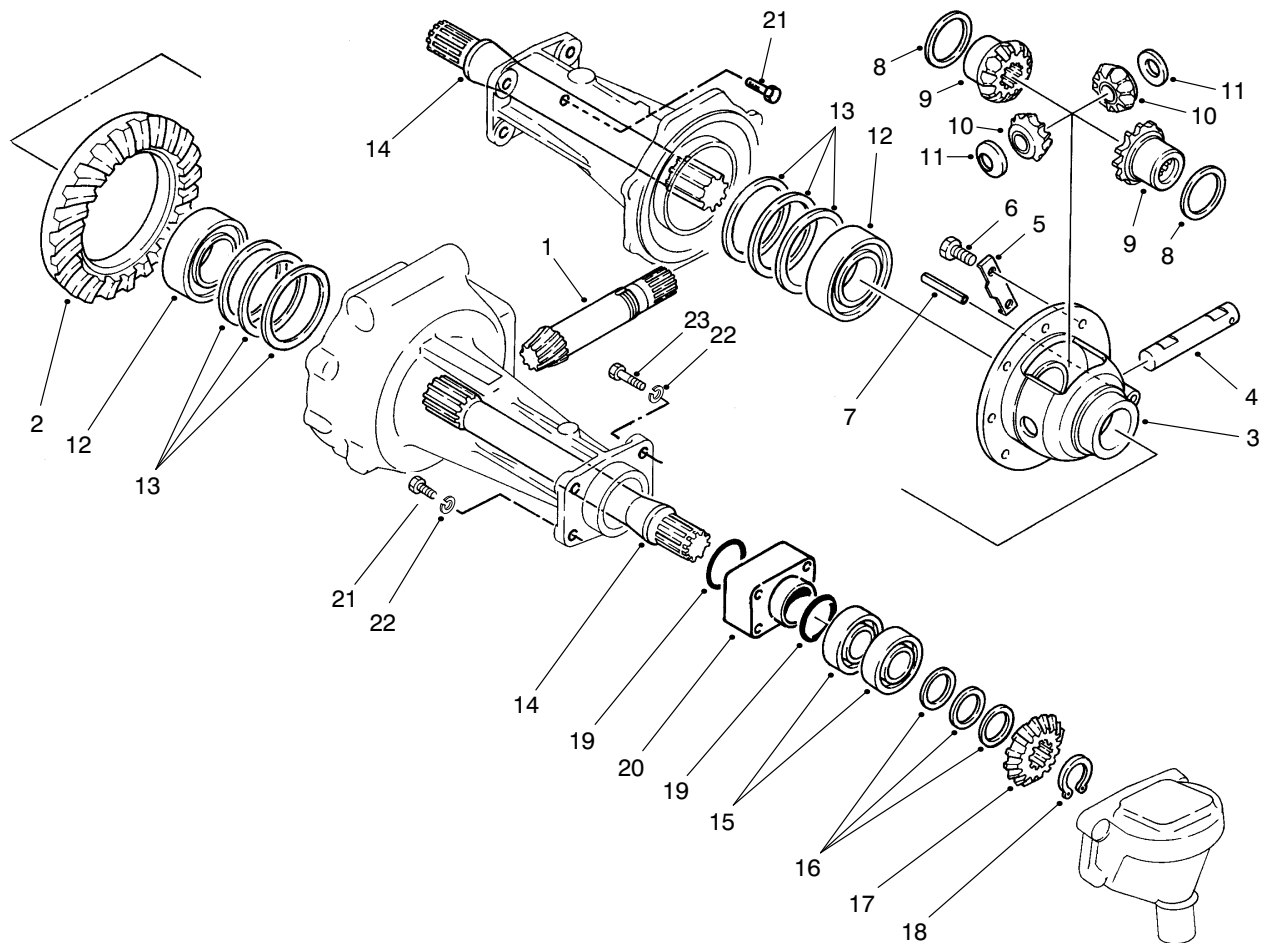 


T-1111-2

DIFFERENTIAL & SHAFT ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft-Drive	1	16	76-7520	Shim-0.1 mm	A/R
2	76-7240	Ring-Gear	1	*	76-7530	Shim-0.2 mm	A/R
3	76-7170	Case-Differential	1	*	76-7540	Shim-0.4 mm	A/R
4	76-7200	Shaft-Pinion	1	17	76-7510	Pinion-14T	2
5	76-7230	Washer-Lock	4	18	76-7550	Ring-Retaining	2
6	76-7260	Bolt	8	19	76-7580	O-Ring	4
7	76-7270	Pin-Spring	1	20	76-7590	Spacer	2
8	76-7220	Washer-Thrust	2	21	76-7600	Bolt-Reamer	2
9	76-7190	Gear-Side	2	22	76-7620	Washer-Lock	8
10	76-7180	Pinion-Mate	2	23	76-7610	Bolt	6
11	76-7210	Washer-Thrust	2	*	76-7160	Asm-Gear Case (Incl. Ref. #2-11)	1
12	76-7280	Bearing	2	*	77-4000	Shim Set (Incl. Ref. #13)	1
13	76-7290	Shim-0.1 mm	A/R	*	77-4020	Shim Set (Incl. Ref. #16)	1
*	76-7300	Shim-0.2 mm	A/R				
*	76-7310	Shim-0.3 mm	A/R				
14	76-7490	Shaft-Differential	2				
15	76-7500	Bearing	4				

 *Not Illustrated

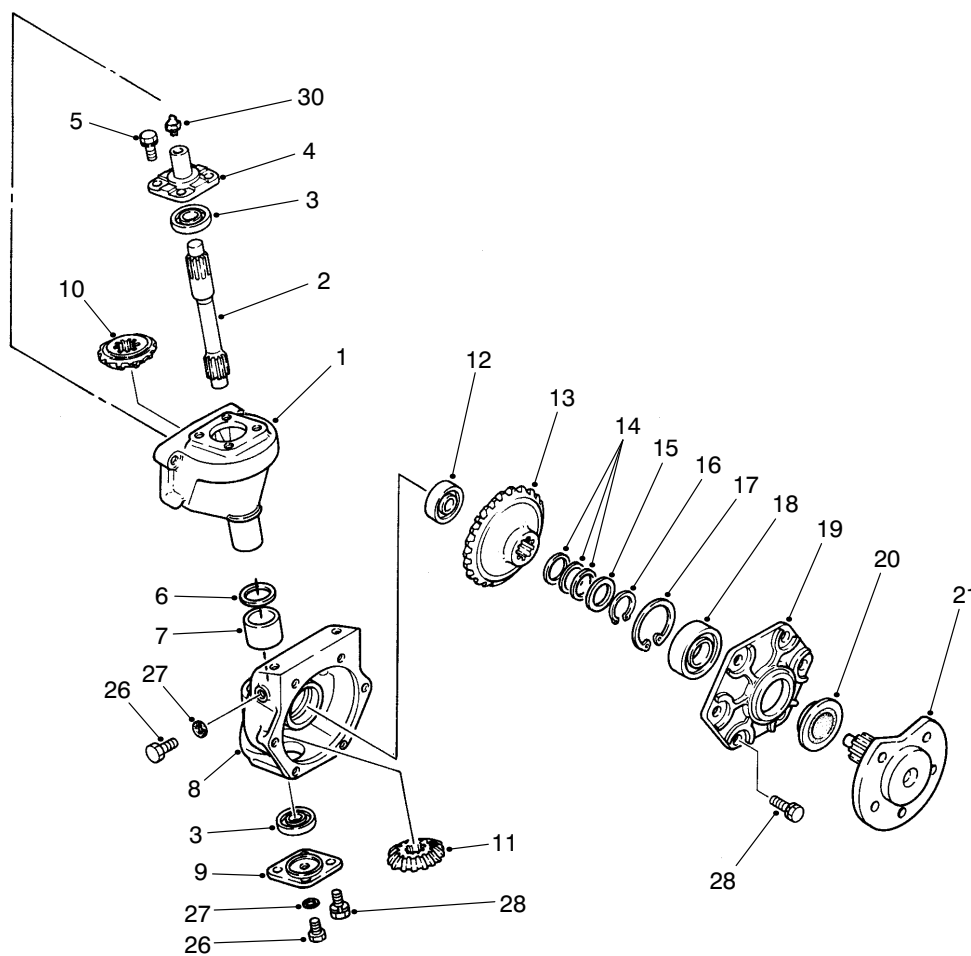


T-1110-1

STEERING GEAR CASE ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7560	Case-Gear	2	*	76-7910	Shim-0.4 mm	A/R
2	76-7650	Shaft-Final Drive	2	15	76-7880	Spacer	2
3	76-7670	Bearing	4	16	76-7920	Ring-Retaining	2
4	76-7660	Holder-20 mm LH	1	17	76-7930	Ring-Retaining	2
*	76-7630	Holder-25 mm RH	1	18	93-7775	Bearing	2
5	76-7640	Bolt	8	19	76-7810	Holder-Bearing	2
6	76-7740	Seal-Oil	2	20	76-7870	Seal-Oil	2
7	76-7730	Bushing	2	21	76-7830	Shaft-Wheel	2
8	76-7680	Case-Final Drive	2	26	76-7110	Plug	4
9	76-7770	Cover	2	27	76-7120	Seal-Washer	4
10	76-7510	Pinion-14T	2	28	76-7640	Bolt	20
11	76-7750	Pinion-15T	2	30	76-7960	Fitting-Grease	2
12	94-2803	Bearing	2	*	77-4030	Shim Set (Incl. Ref. #14)	1
13	76-7840	Gear-Bevel	2				
14	76-7890	Shim-0.15 mm	A/R				
*	76-7900	Shim-0.2 mm	A/R				

 *Not Illustrated

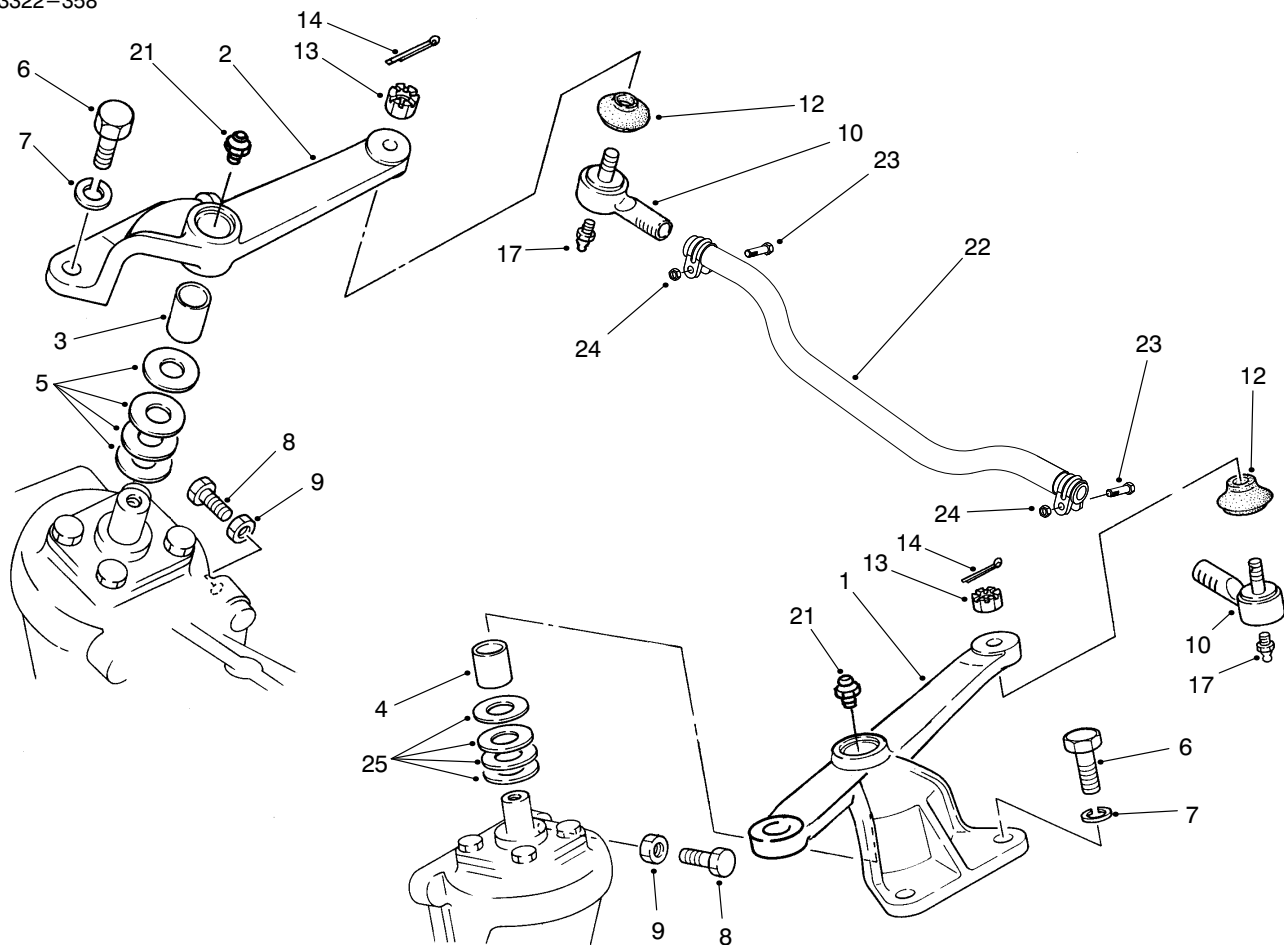


7-1

STEERING ARM LINKAGE ASM NO. 98-2447 (Continued)

Ref. No.	Part No.	Description	No. Used
1	98-2444	Arm- Drag Link	1
2	98-2446	Arm- Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim-1.0 mm	A/R
*	76-7970	Shim-1.4 mm	A/R
*	76-7980	Shim-1.2 mm	A/R
*	76-7990	Shim-.08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	2411-45	Tie Rod End	2
12	71-4760	Seal	2
13	32136-13	Nut-Hex. Slotted	2
14	3272-7	Pin-Cotter	2

Ref. No.	Part No.	Description	No. Used
17	302-55	Fitting-Grease	2
21	76-7960	Fitting-Grease	2
22	98-8841	Asm-Bar & Clamp	1
23	323-9	Screw-HH	2
24	3296-39	Nut-Lock	2
25	76-7700	Shim-0.8 mm	A/R
*	76-7760	Shim-1.0 mm	A/R
*	76-7780	Shim-1.2 mm	A/R
*	76-7790	Shim-1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1
*	98-8838	Tie Rod-4WD (Incl. Ref. #10-13, 17 & 22-24)	1

 *Not Illustrated

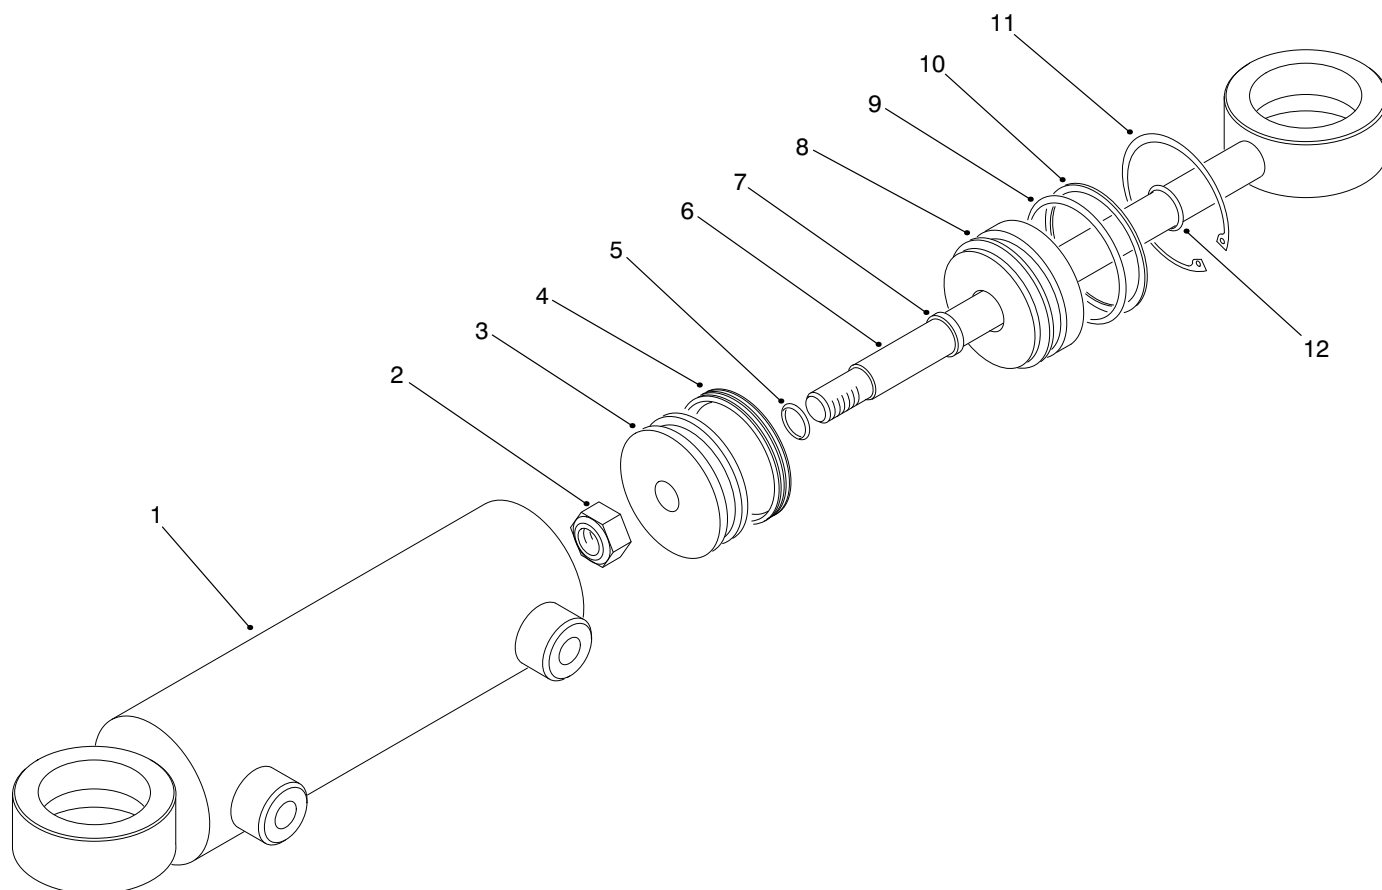


T-2452-1

HYDRAULIC STEERING CYLINDER NO. 94-8141

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-9955	Asm-Barrel	1	9		O-Ring	1
2	32152-10	Nut-Lock	1	10		Backup	1
3	94-9957	Piston	1	11	32120-8	Ring-Retaining	1
4		Uniring	1	12		O-Ring	1
5		O-Ring	1	*	86-5390	Kit-Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1
6	94-9956	Asm-Piston Rod	1				
7		Seal-Rod	1				
8	94-9958	Gland-Cylinder	1				

 *Not Illustrated

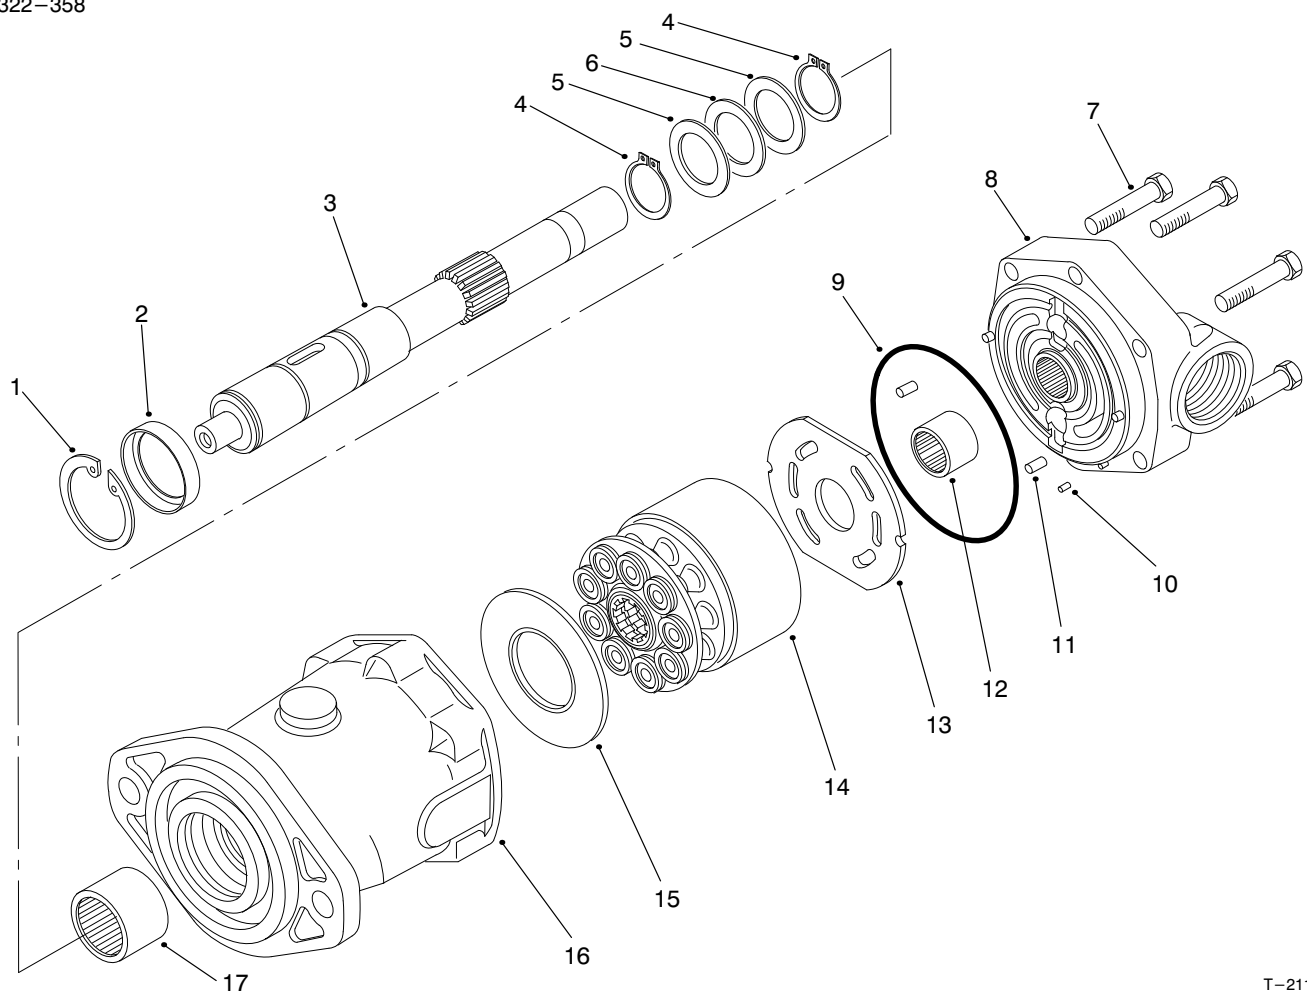


T-2118-1

4 WD HYDRAULIC MOTOR ASSEMBLY NO. 92-7386

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	76-7020	Spacer	1
3	76-6930	Shaft-Drive, Straight	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3002	Screw-HH	6
8	94-3000	Asm-Backplate (Incl. Ref. #10-12)	1
9	76-6980	O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Pin-Dowel	3
11		Pin-Dowel	1
12		Bearing-Needle	1
13	94-3003	Plate-Valve	1
14	76-6910	Kit-Rotating	1
15	76-6970	Insert-Camplate	1
16	94-3001	Housing (Incl. Ref. #17)	1
17		Bearing-Needle	1

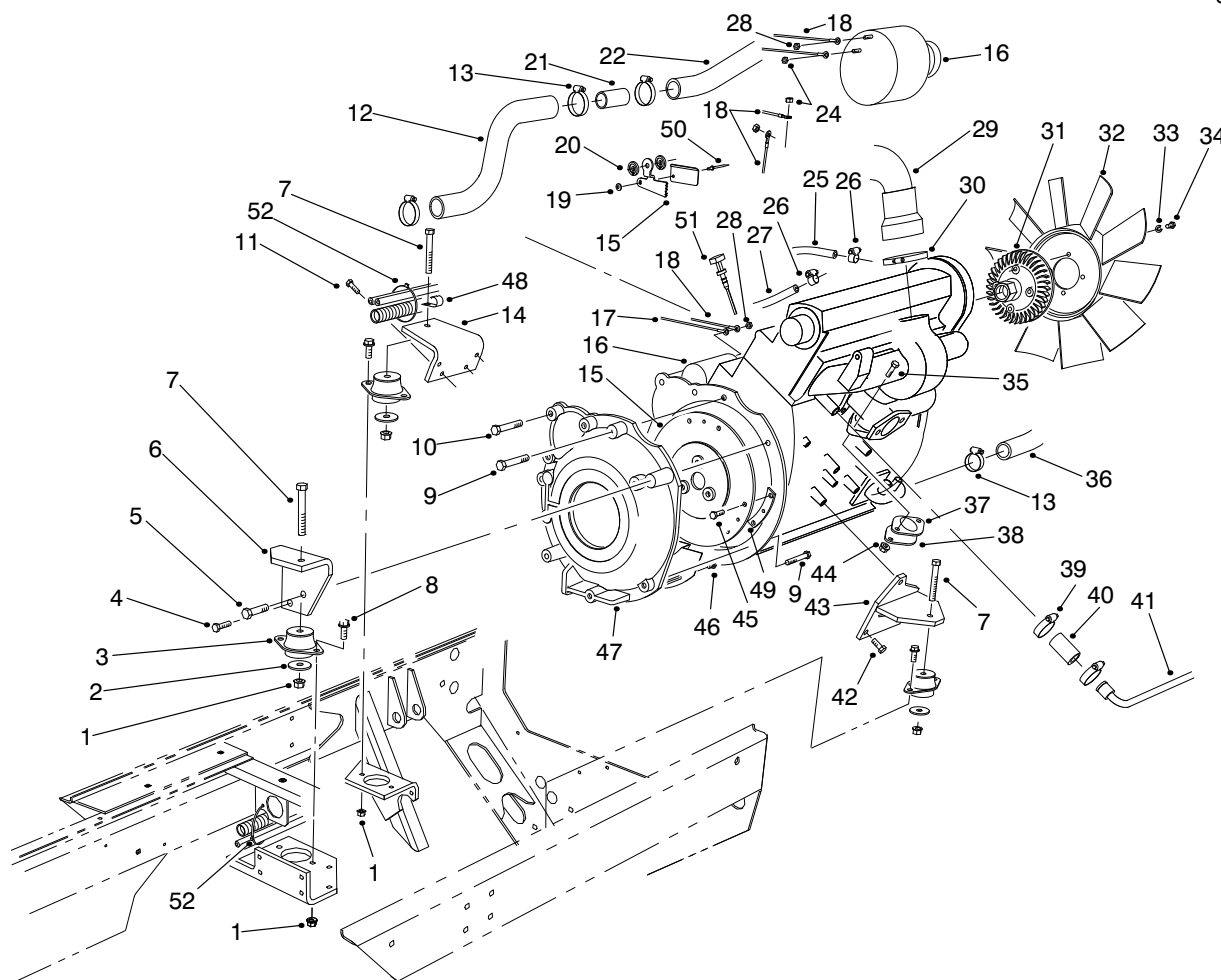 


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut-HF	9	27	63-7627	Hose-Fuel	1
2	87-5100	Washer-Snubbing	3	28	48-7930	Nut-Hex.	2
3	53-9681	Mount-Rubber	3	29	94-2624	Hose-Manifold	1
4	48-9470	Screw	1	30	2412-125	Clamp-Hose	1
5	48-7840	Screw-HH	1	31	92-7466	Clutch-Fan	1
6	92-7425	Support-Mount, Engine	1	32	74-3650	Fan-Engine	1
7	33105-070	Screw-HHF	3	33	3253-4	Washer-Lock	4
8	33105-030	Screw-HHF	6	34	33104-016	Screw-HH	4
9	48-7570	Screw-HH	3	35	33104-020	Screw-HHF	2
10	48-7810	Screw-HH	3	36	92-7463	Hose-Radiator, Lower	1
11	66-3160	Screw	4	37	77-3700	Gasket-Exhaust, Manifold	1
12	94-1418	Hose-Radiator, Upper	1	38	92-7382	Cover-Manifold	1
13	2412-3	Clamp-Hose	4	39	2412-129	Clamp-Hose	4
14	92-7429	Mount-Motor, RH	1	40	74-6490	Hose-Water Line	2
15	94-1421	Coupling-Center, Spring	1	41	92-7381	Tube-Water, Return	1
16	93-4233	Asm-Engine	1	42	48-7780	Screw-HH	3
17	75-1370	Cable-Battery, Positive	1	43	92-7426	Mount-Motor	1
18	99-8963	Harness-Wire, Main	1	44	33004-00	Nut-HF	2
*	94-9967	Circuit Breaker-50 Amp	1	45	48-7700	Screw-HH	6
*	94-9968	Circuit Breaker-100 Amp	1	46	48-7610	Screw-HH	3
19	3256-49	Washer-Flat	1	47	82-5120	Adapter-Pump To Engine	1
20	86-2990	Mount-Cable, Throttle	2	48	2412-150	J-Clip	1
21	93-7594	Spacer-Tubular	1	49	92-1422	Spacer-Coupler	3
22	93-4215	Hose-Radiator, Upper Rear	1	50	3290-282	Rivet-Pop	1
24	48-7880	Nut	3	51	93-9176	Dipstick-Peugeot	1
25	92-7521	Hose-Fuel	1	52	3290-378	Tie-Cable	2
26	2412-108	Clamp-Hose	2				

 *Not Illustrated

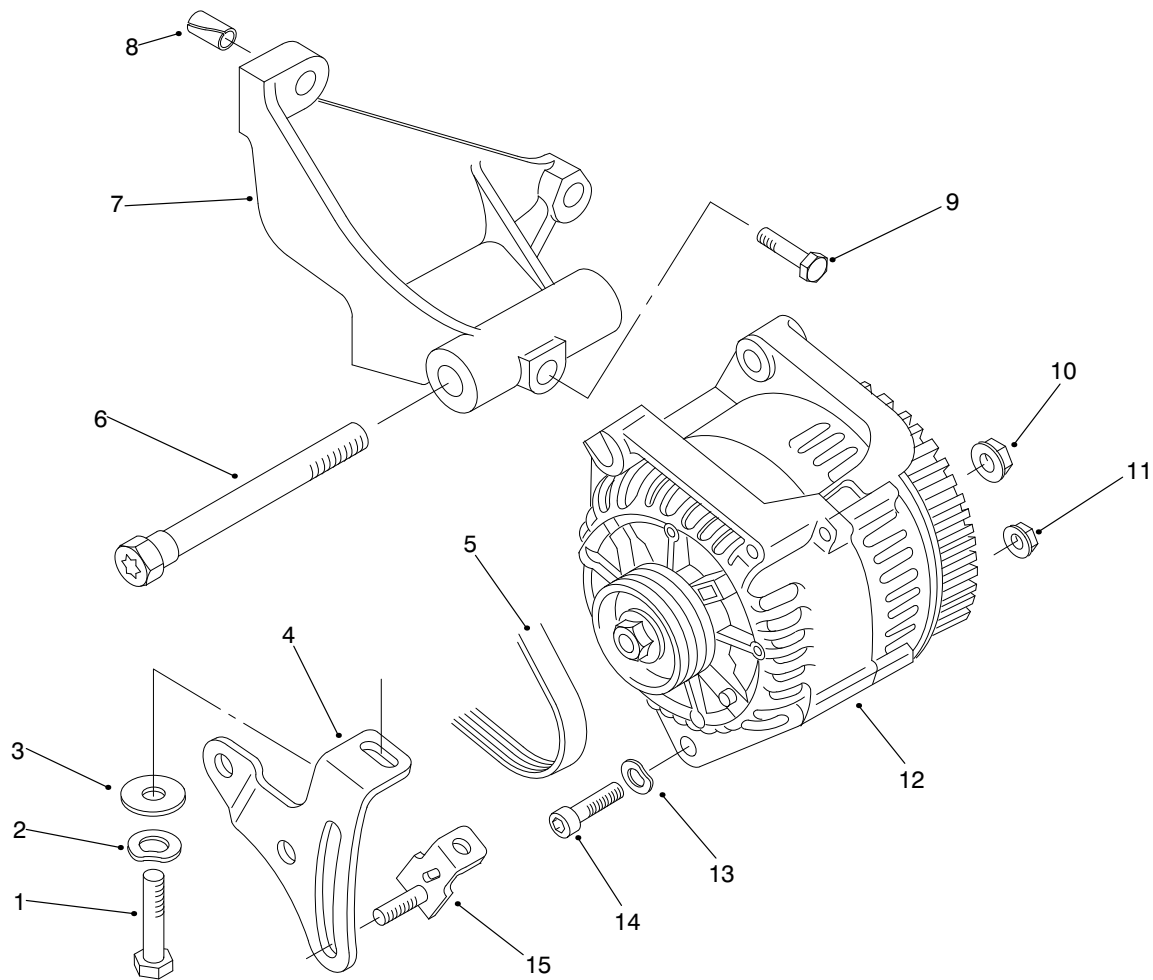


T-2147

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer-Spring	1
3	94-3260	Washer-Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2


Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer-Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

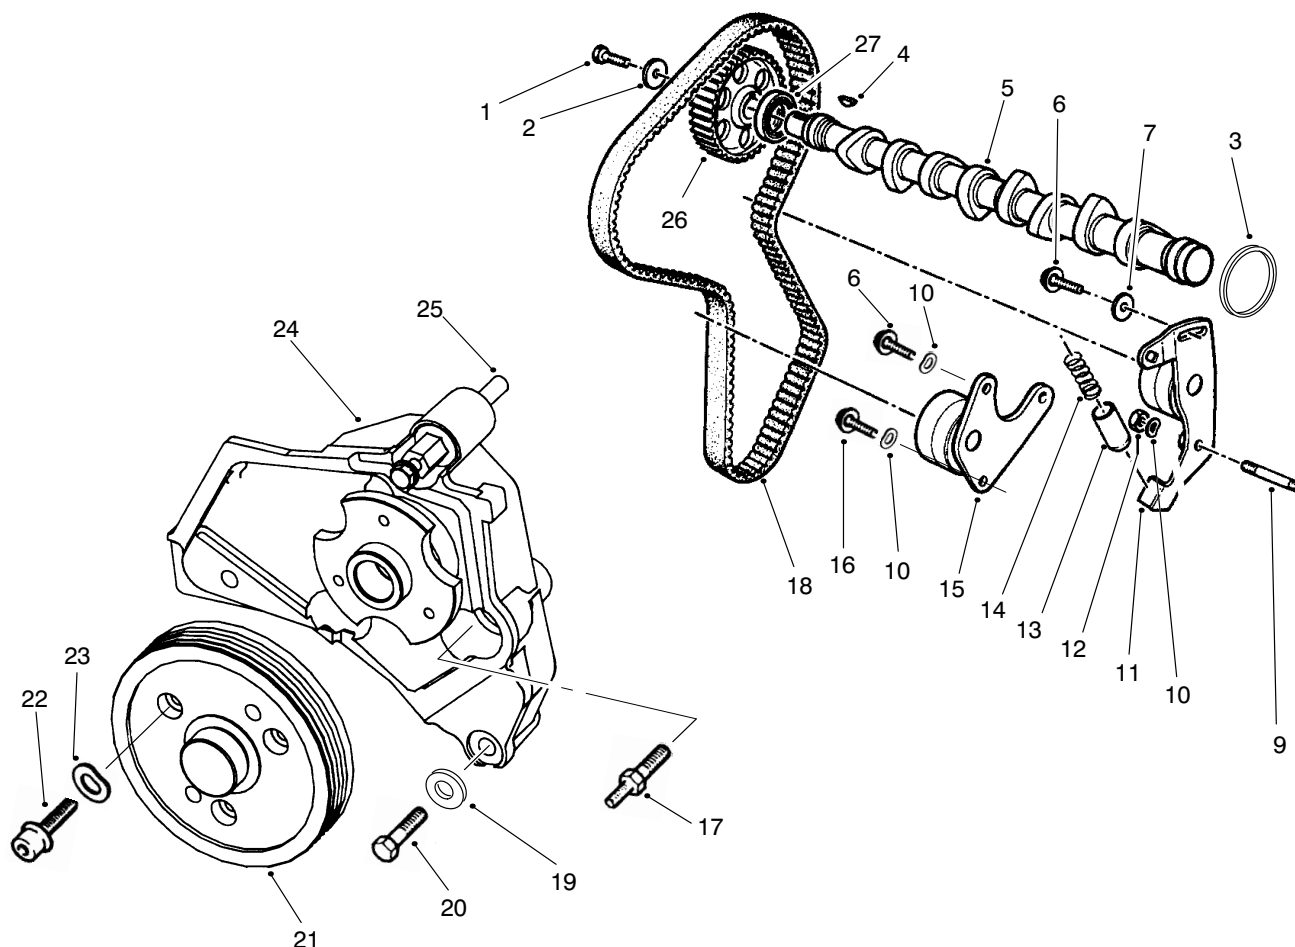 

T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2	15	94-3160	Asm-Roller	1
2	77-3450	Washer	2	16	94-3161	Screw	2
3	77-3420	Gasket	1	17	94-3170	Screw	1
4	77-3410	Key	1	18	74-8830	Belt	1
5	77-3400	Camshaft	1	19	94-3172	Washer	3
6	94-3163	Screw	1	20	94-3171	Screw	2
7	94-3166	Washer-Flat	1	21	94-3168	Pulley-Fan	1
9	94-3162	Stud	1	22	94-3173	Screw	3
10	94-3164	Washer-Spring	4	23	76-5010	Washer	3
11	94-3159	Asm-Roller	1	24	94-3167	Bracket-Fan	1
12	94-3165	Nut-Lock	1	25	94-3169	Screw	1
13	77-3520	Cup	1	26	92-7787	Pulley-Camshaft	1
14	77-3510	Spring	1	27	94-9994	Gasket-Camshaft	1

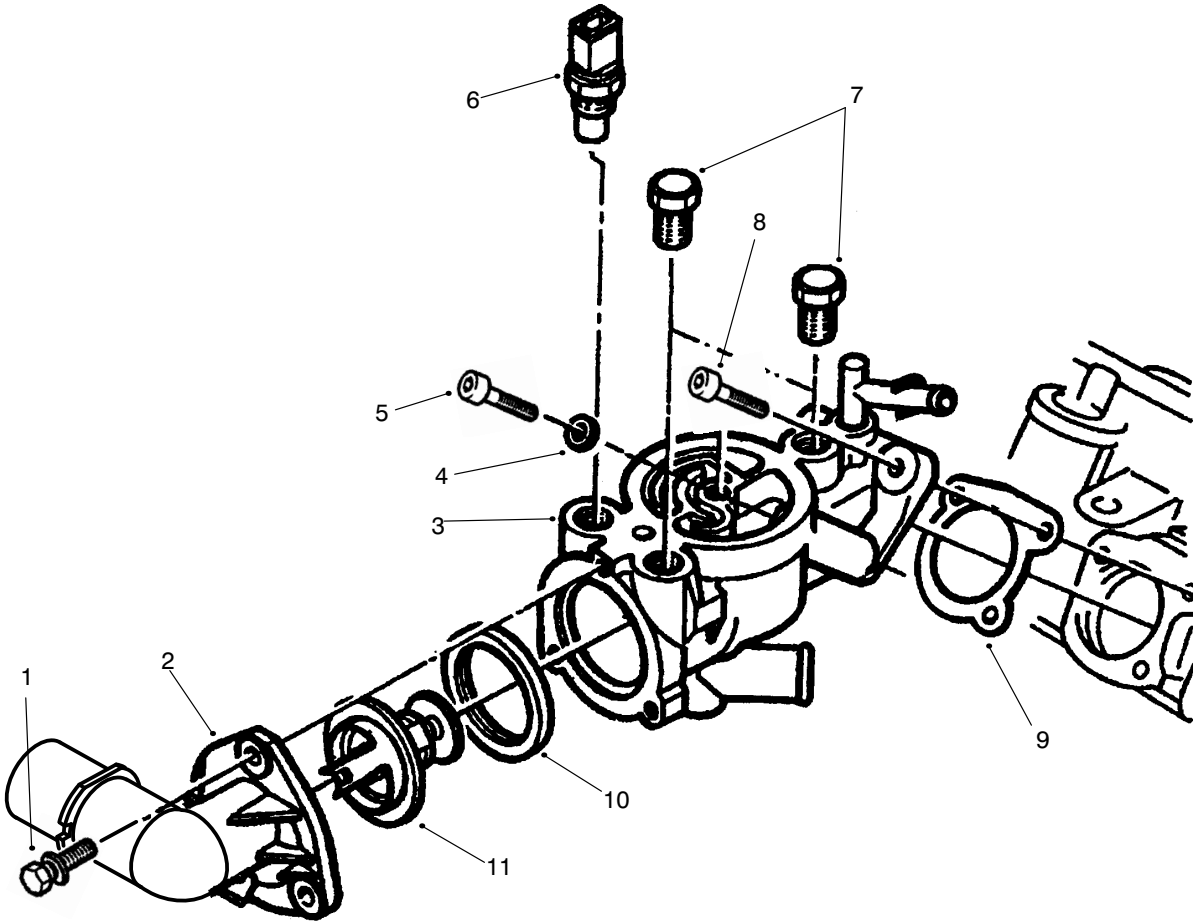 


T-2143-3

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub-Outlet	1
3	98-9970	Box-Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

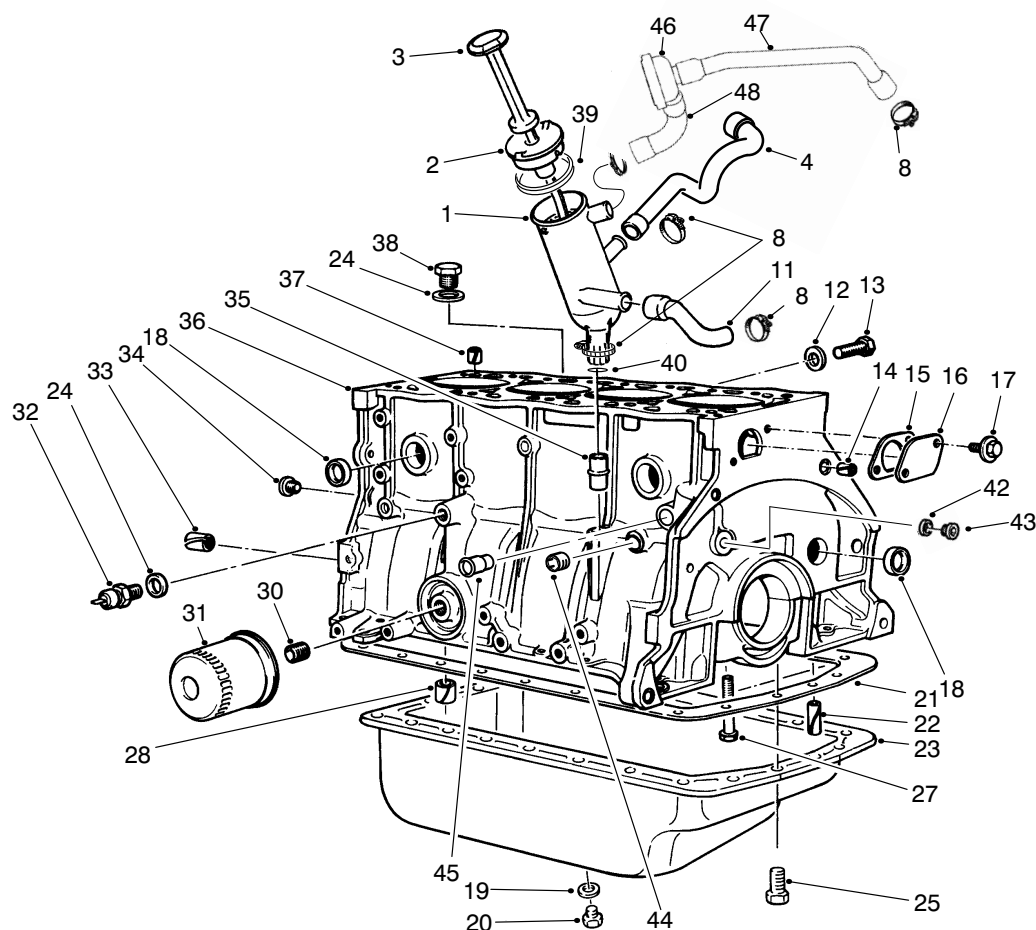 


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1	27	74-7930	Screw-Bearing Cap	10
2	94-3182	Plug	1	28	74-7940	Bushing-Spring	1
3	93-9176	Dipstick-Oil	1	29	74-7950	Screw-Plate	6
4	94-3184	Union	1	30	74-7960	Stud-Filter	1
8	2412-129	Clamp-Hose	8	31	74-7970	Filter-Oil	1
11	74-7770	Hose-Crankcase	1	32	94-3180	Switch-Pressure	1
12	74-7780	Gasket	1	33	74-7990	Pin-Spring	4
13	74-7790	Screw	1	34	74-8000	Plug	2
14	94-3102	Pin	2	35	74-8010	Guide-Dipstick	1
15	74-7810	Gasket-Plate	1	36	94-3100	Asm-Short Block (Incl. Pistons next page)	1
16	74-7820	Plate	1	37	74-8030	Pin-Spring	1
17	94-3112	Screw-Washer Hd.	2	38	94-3105	Plug-Drain	1
18	74-7840	Plug-27 mm Dia.	8	39	94-3183	Gasket	1
*	94-3108	Plug-27.5 mm Dia.	8	40	94-3186	O-Ring	1
*	94-3109	Plug-28.5 mm Dia.	9	42	94-3106	Gasket	2
19	74-7320	Gasket	1	43	94-3104	Plug-Threaded	2
20	74-7310	Plug-Threaded	1	44	94-3103	Plug-Threaded	1
21	74-7380	Gasket-Oil Pan	1	45	94-3110	Stud	1
22	94-3111	Pin-Groove	2	46	94-3190	PCV Valve	1
23	74-7300	Pan-Oil	1	47	94-3192	Union	1
24	94-3107	Gasket	2	48	94-3191	Union	1
25	74-7330	Screw-HH	23	*	94-3101	Gasket Set (Without Head Gasket)	1
26	77-3790	Plug-Drain	1				

 *Not Illustrated

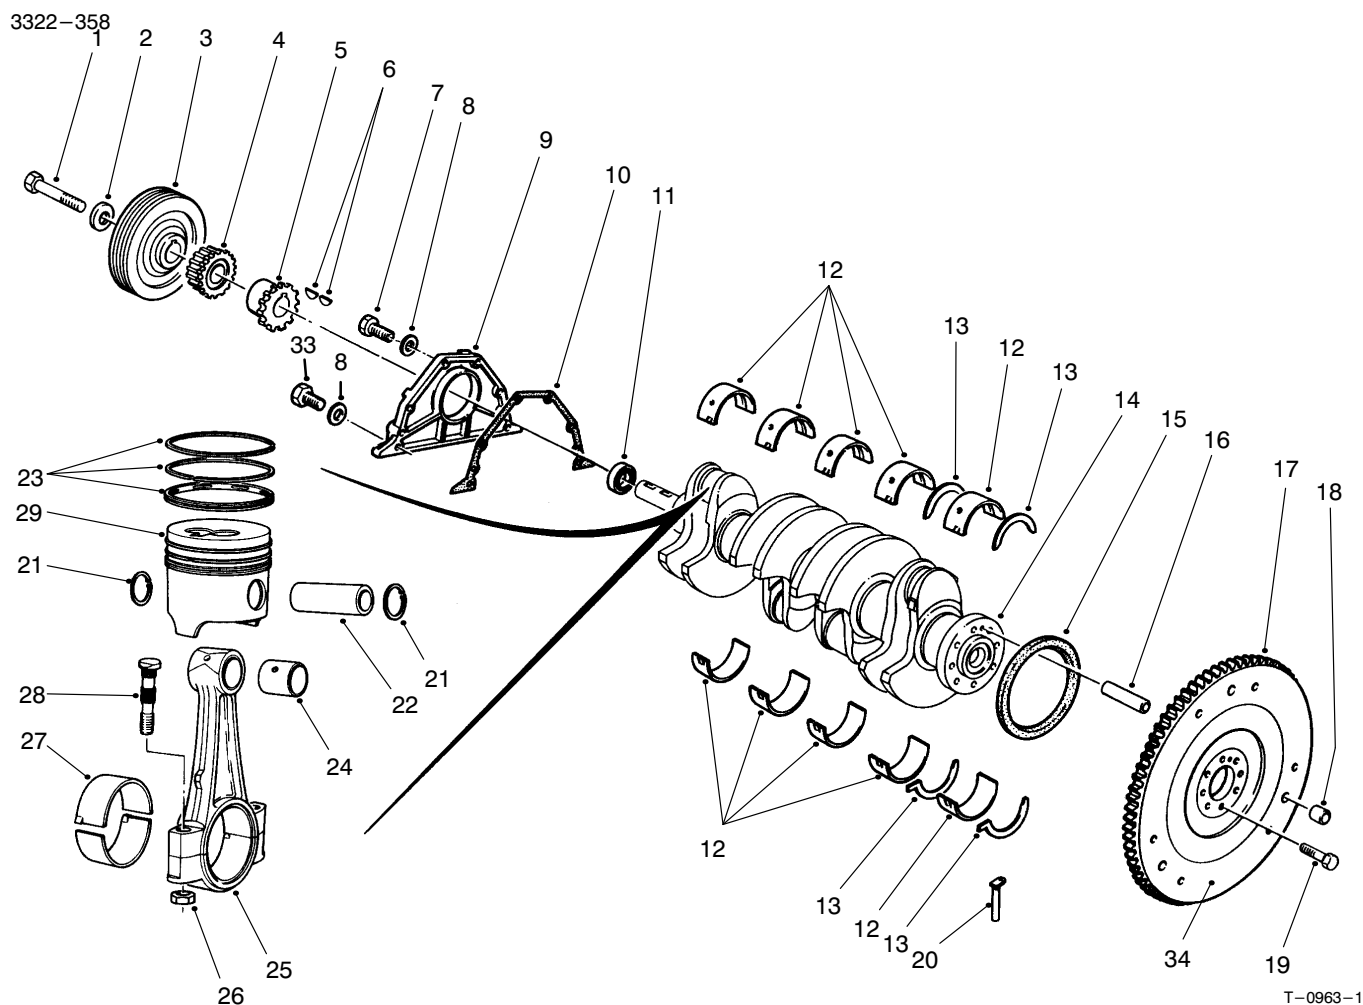


T-0963-1

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw-HH	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear-Pinion	1
5	95-3485	Sprocket-Oil Pump	1
6	74-8120	Key-Woodruff	2
7	94-3150	Screw-HH	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket-Cover	1
11	94-3148	Seal-Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear-Flywheel	1
18	74-8270	Pin	3
19	95-3484	Screw-HH	8
20	74-8290	Seal-#1 Bearing Cap	2
21	74-8300	Clip-Piston Pin	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin-Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set-0.20 mm	4
*	74-8330	Piston Ring Set-0.50 mm	4
*	74-8340	Piston Ring Set-0.80 mm	4
24	98-9965	Bushing-Sleeve	4
25	74-8360	Rod-Connecting (Set of 4)	4
26		Nut-Hex.	8
27	74-8380	Bearing-Connecting Rod (Std.)	4
*	94-3155	Bearing-Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt-Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set-Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set-Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set-Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set-Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw-HH	2
34	74-8260	Flywheel	1

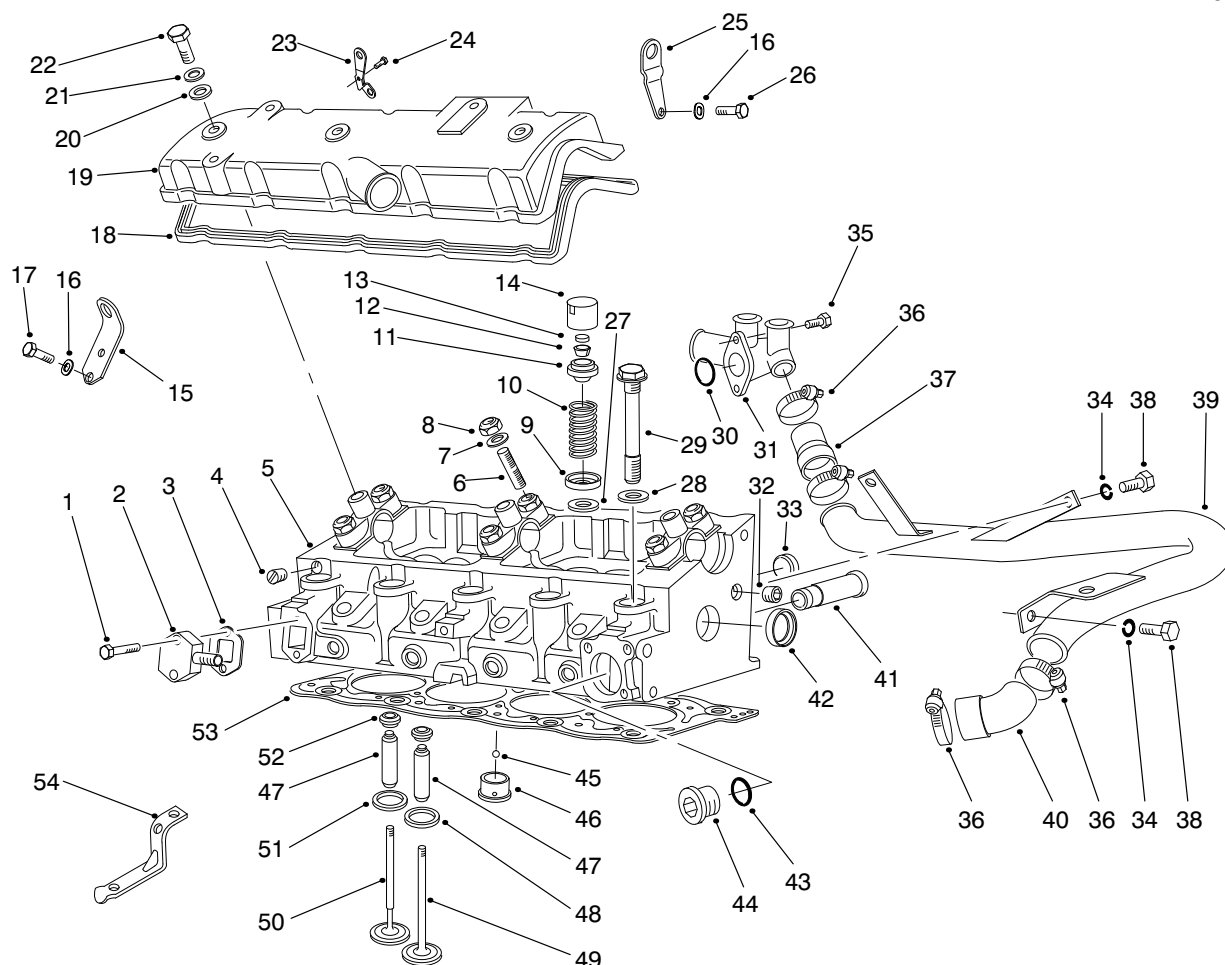 


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw-HH	2	13	74-6720	Insert-Valve (2.400mm)	8
2	94-3117	Plate	1	*	74-6730	Insert-Valve (2.425mm)	8
3	94-3116	Gasket	1	*	74-6740	Insert-Valve (2.450mm)	8
4	74-7600	Plug	4	*	74-6750	Insert-Valve (2.475mm)	8
5	94-3113	Asm-Cylinder Head	1	*	74-6760	Insert-Valve (2.500mm)	8
6	76-5130	Stud	6	*	74-6770	Insert-Valve (2.525mm)	8
7	74-8900	Washer-Flat	6	*	74-6780	Insert-Valve (2.550mm)	8
8	94-3115	Nut-Lock	6	*	74-6790	Insert-Valve (2.575mm)	8
9	74-6570	Cup-Lower Valve Spring	8	*	74-6800	Insert-Valve (2.600mm)	8
10	74-6560	Spring-Valve	8	*	74-6810	Insert-Valve (2.625mm)	8
11	74-6550	Cup-Upper Valve Spring	8	*	74-6820	Insert-Valve (2.650mm)	8
12	74-7240	Collar-Split	16	*	74-6830	Insert-Valve (2.675mm)	8
13	74-6580	Insert-Valve (1.650mm)	8	*	74-6840	Insert-Valve (2.700mm)	8
*	74-6590	Insert-Valve (1.725mm)	8	*	74-6850	Insert-Valve (2.725mm)	8
*	74-6600	Insert-Valve (1.800mm)	8	*	74-6860	Insert-Valve (2.750mm)	8
*	74-6610	Insert-Valve (1.900mm)	8	*	74-6870	Insert-Valve (2.775mm)	8
*	74-6620	Insert-Valve (1.975mm)	8	*	74-6880	Insert-Valve (2.800mm)	8
*	74-6630	Insert-Valve (2.050mm)	8	*	74-6890	Insert-Valve (2.825mm)	8
*	74-6640	Insert-Valve (2.125mm)	8	*	74-6900	Insert-Valve (2.850mm)	8
*	74-6650	Insert-Valve (2.225mm)	8	*	74-6910	Insert-Valve (2.875mm)	8
*	74-6660	Insert-Valve (2.250mm)	8	*	74-6920	Insert-Valve (2.900mm)	8
*	74-6670	Insert-Valve (2.275mm)	8	*	74-6930	Insert-Valve (2.925mm)	8
*	74-6680	Insert-Valve (2.300mm)	8	*	74-6940	Insert-Valve (2.950mm)	8
*	74-6690	Insert-Valve (2.325mm)	8	*	74-6950	Insert-Valve (2.975mm)	8
*	74-6700	Insert-Valve (2.350mm)	8	*	74-6960	Insert-Valve (3.000mm)	8
*	74-6710	Insert-Valve (2.375mm)	8	*	74-6970	Insert-Valve (3.025mm)	8

 *Not Illustrated

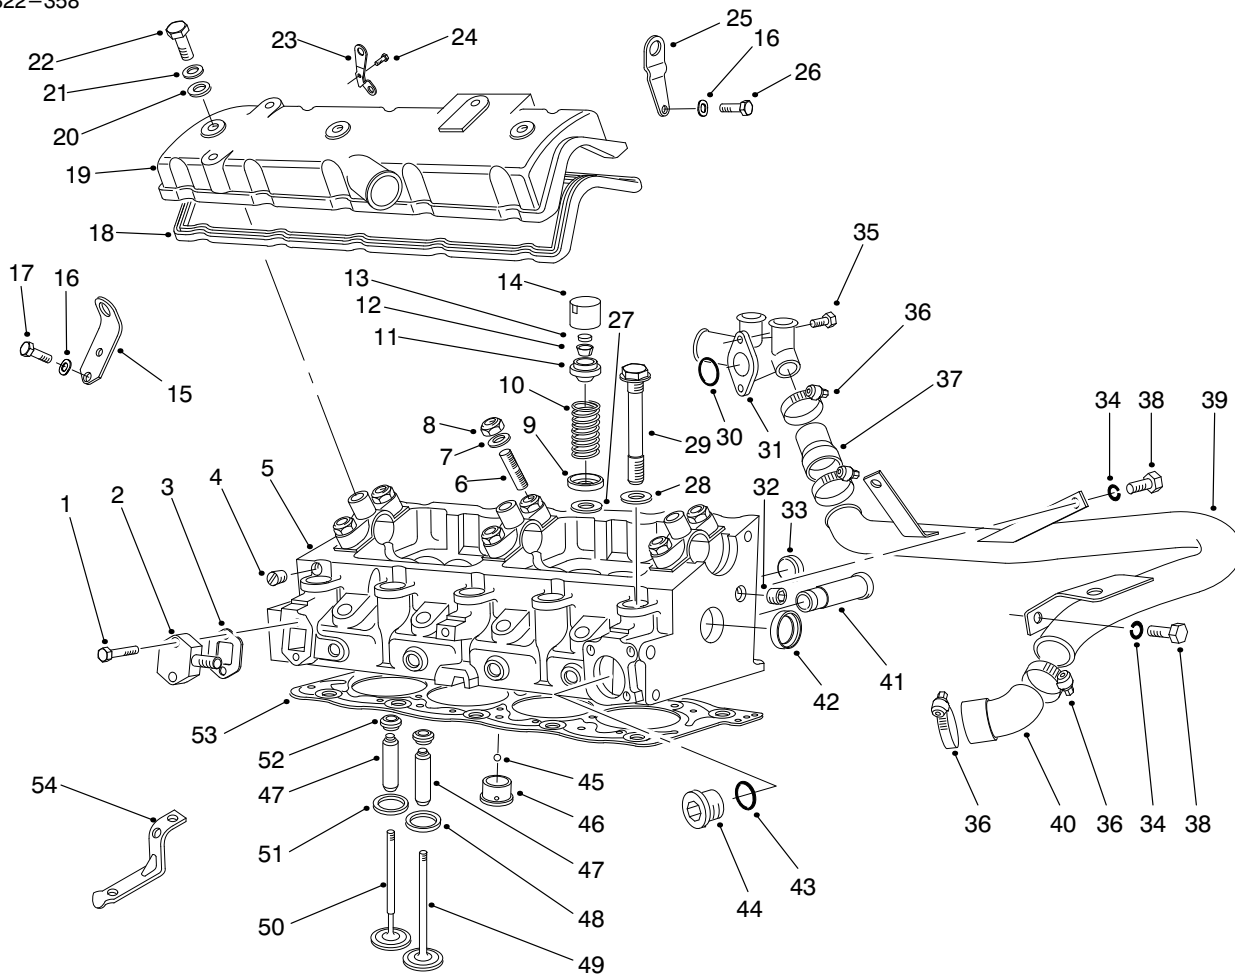


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert-Valve (3.050mm)	8
*	74-6990	Insert-Valve (3.075mm)	8
*	74-7000	Insert-Valve (3.100mm)	8
*	74-7010	Insert-Valve (3.125mm)	8
*	74-7020	Insert-Valve (3.150mm)	8
*	74-7030	Insert-Valve (3.175mm)	8
*	74-7040	Insert-Valve (3.200mm)	8
*	74-7050	Insert-Valve (3.225mm)	8
*	74-7060	Insert-Valve (3.250mm)	8
*	74-7070	Insert-Valve (3.275mm)	8
*	74-7080	Insert-Valve (3.300mm)	8
*	74-7090	Insert-Valve (3.325mm)	8
*	74-7100	Insert-Valve (3.350mm)	8
*	74-7110	Insert-Valve (3.375mm)	8
*	74-7120	Insert-Valve (3.400mm)	8
*	74-7130	Insert-Valve (3.425mm)	8
*	74-7140	Insert-Valve (3.450mm)	8
*	74-7150	Insert-Valve (3.475mm)	8
*	74-7160	Insert-Valve (3.500mm)	8
*	74-7170	Insert-Valve (3.550mm)	8
*	74-7180	Insert-Valve (3.625mm)	8
*	74-7190	Insert-Valve (3.700mm)	8
*	74-7200	Insert-Valve (3.775mm)	8
*	74-7210	Insert-Valve (3.850mm)	8
*	74-7220	Insert-Valve (3.925mm)	8
*	74-7230	Insert-Valve (4.000mm)	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	74-6540	Tappet-Valve	8
15	94-3135	Bracket-Lifting	1
16	74-7560	Washer-Spring	3
17	76-5440	Screw	2
18	74-7630	Gasket-Valve Cover	1
19	74-7640	Cover-Valve	1
20	74-7650	Washer-Flat	3
21	94-3125	Washer	3
22	94-3124	Bolt-Valve Cover	3
23	94-3136	Bracket-Lifting	1
24	94-3138	Screw	1
25	94-3137	Bracket-Lifting	1
26	94-3139	Screw	1
27	94-3174	Washer	8
28	74-7270	Washer-Flat	10
29	74-7260	Bolt-Head	10
30	94-3197	O-Ring	1
31	94-3196	Inlet-Water	1
32	94-3118	Plug	1
33	74-7840	Plug-27 mm Dia.	2
*	94-3108	Plug-27.5 mm Dia.	2
*	94-3109	Plug-28.5 mm Dia.	2
34	68-9420	Washer-Lock	3
35	94-3198	Screw	2
36	2412-129	Clamp-Hose	4
37	94-3200	Hose-By-Pass	1

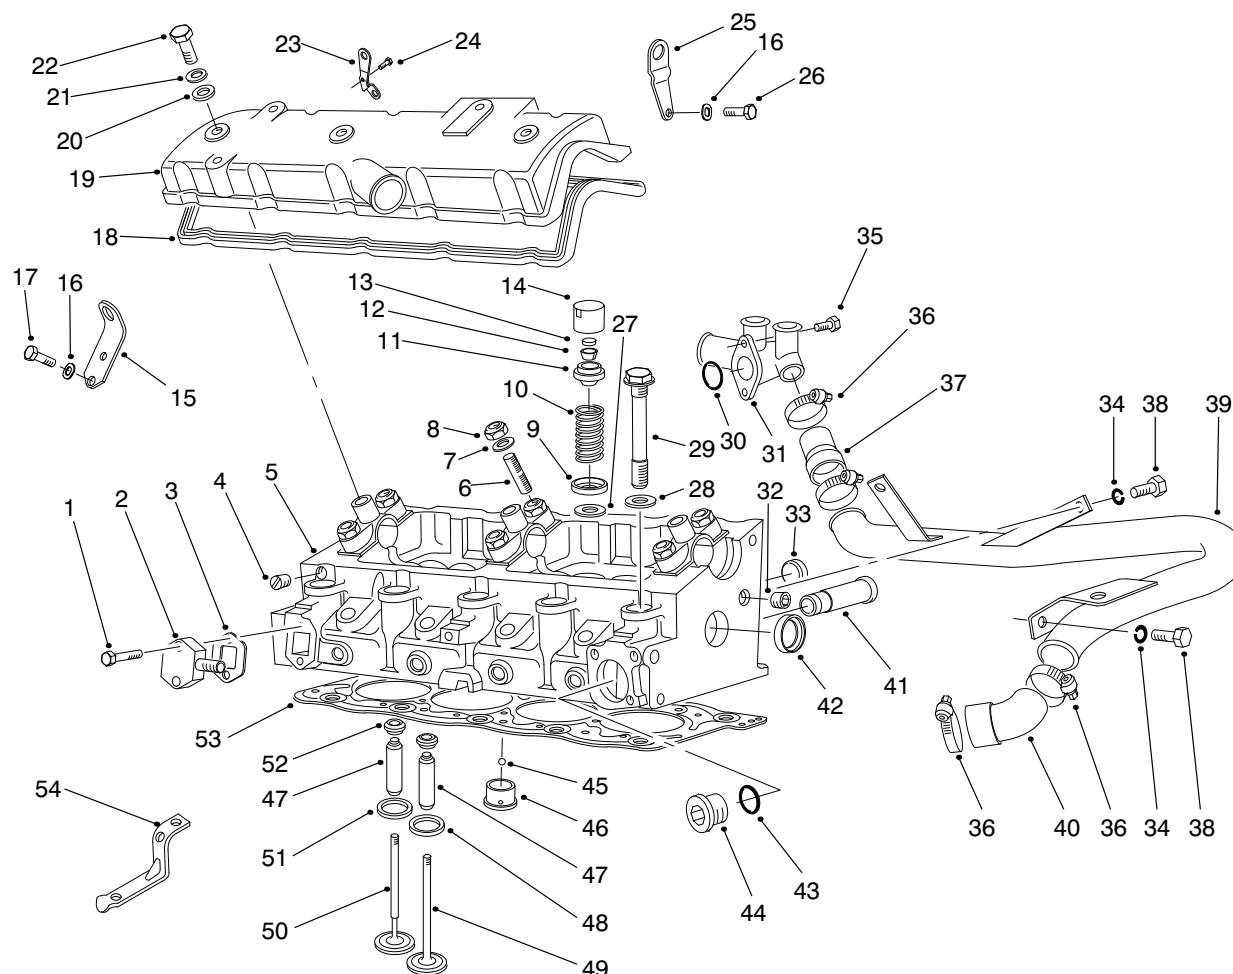 


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw-HH	3	49	74-7480	Valve-Intake	4
39	94-3199	Pipe-By-Pass	1	50	92-7794	Valve-Exhaust	4
40	98-9971	Hose-By-Pass	1	51	92-7795	Seat-Exhaust Valve (34.5mm)	4
41	74-7400	Tube	1	52	92-7791	Seal-Valve	8
42	74-7840	Plug	2	53	94-8132	Gasket-Head (1.48 mm)	1
43	94-3122	Gasket	1	*	94-8133	Gasket-Head (1.52 mm)	1
44	94-3121	Plug	1	*	94-8134	Gasket-Head (1.58 mm)	1
45	74-7420	Ball	4	*	94-8135	Gasket-Head (1.62 mm)	1
46	74-7430	Chamber-Turbulence (32.45mm)	4	54	94-3120	Bracket	1
*	74-7440	Chamber-Turbulence (32.65mm)	4	*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
47	92-7792	Guide-Valve (14.29mm)	8	*	94-3119	Kit-Gasket	1
*	92-7793	Guide-Valve (14.59mm)	8	*	94-9965	Asm-Head, Cylinder	1
48	74-7450	Seat-Intake Valve (39.3mm)	4				
*	74-7460	Seal-Intake Valve (39.5mm)	4				

*Not Illustrated

 3322-358

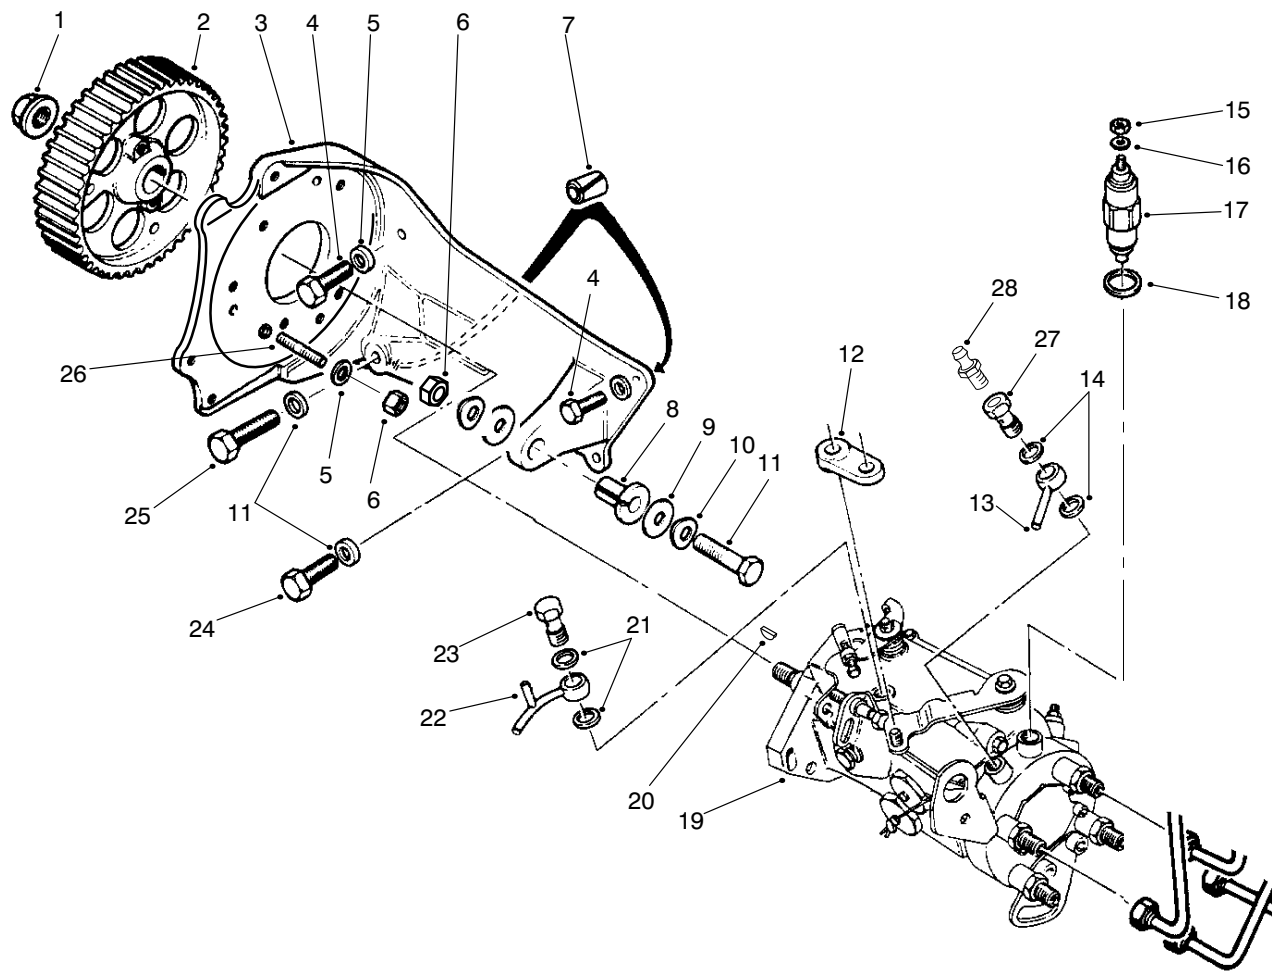


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear-Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing-Flange	1
9	94-3224	Washer-Flat	2
10	94-3164	Washer-Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union-Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	98-8806	Valve-Solenoid	1
18	94-3274	O-Ring	1
19	94-3219	Pump-Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube-Outlet	1
23	94-3250	Screw-Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw-Connection	1
28	93-5835	Screw-Purge	1

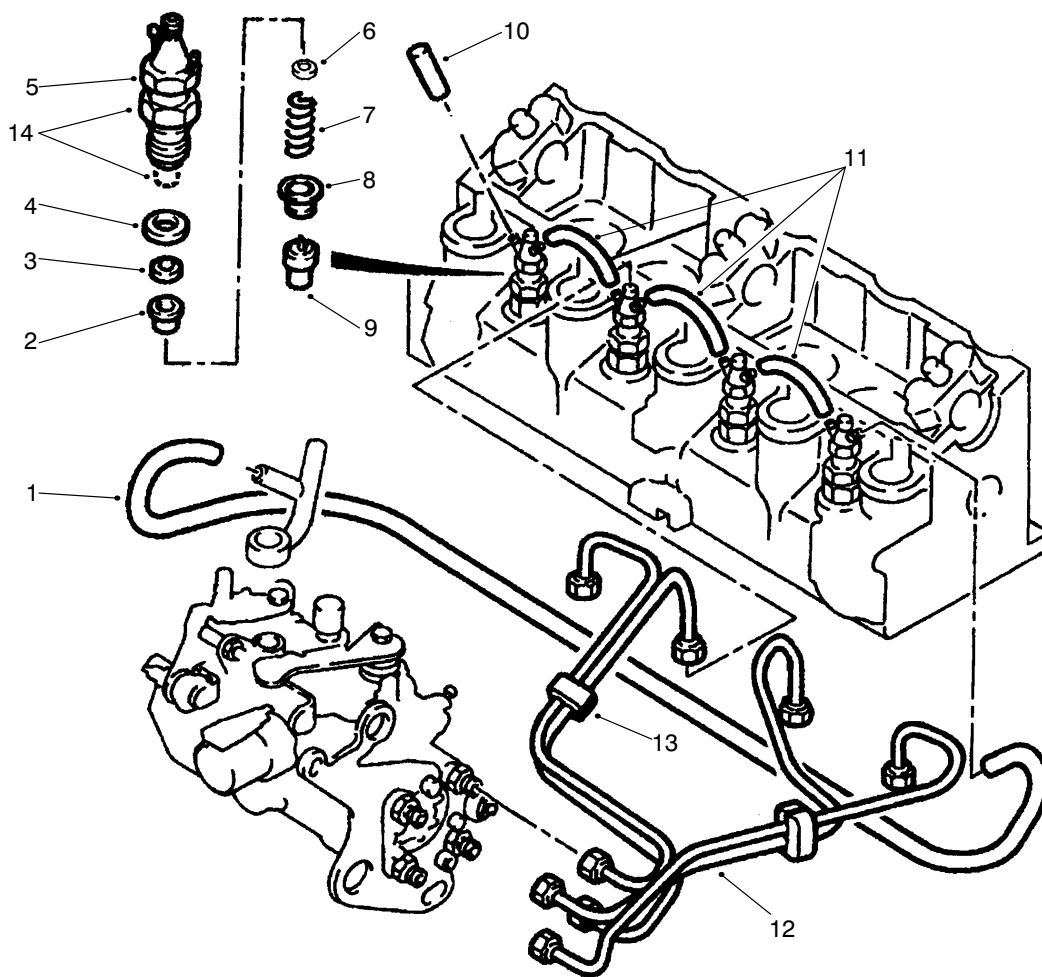 


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1	6	94-3242	Washer-1.30 mm	4
2	76-5540	Plug	4	*	94-3243	Washer-1.33 mm	4
3	76-5530	Gasket-Injector	4	*	94-3244	Washer-1.36 mm	4
4	94-3226	Gasket-Injector	4	*	94-3245	Washer-1.39 mm	4
5	76-5520	Holder-Injector	4	*	94-3246	Washer-1.42 mm	4
6	94-3232	Washer-0.79 mm	4	*	94-3247	Washer-1.45 mm	4
*	94-3233	Washer-0.82 mm	4	*	94-3248	Washer-1.48 mm	4
*	94-3234	Washer-0.85 mm	4	7	94-3228	Spring	4
*	94-3235	Washer-0.88 mm	4	8	94-3227	Spacer	4
*	94-3236	Washer-0.91 mm	4	9	94-8147	Nozzle-Injector	4
*	94-3237	Washer-0.94 mm	4	10	74-8770	Plug	1
*	94-3238	Washer-0.97 mm	4	11	94-3229	Union	3
*	94-3239	Washer-1.00 mm	4	12	74-8750	Pipe	1
*	94-3240	Washer-1.03 mm	4	13	94-3231	Bracket	2
*	94-3241	Washer-1.06 mm	4	14	76-5600	Asm-Holder, Injector	4

*Not Illustrated

 3322-358

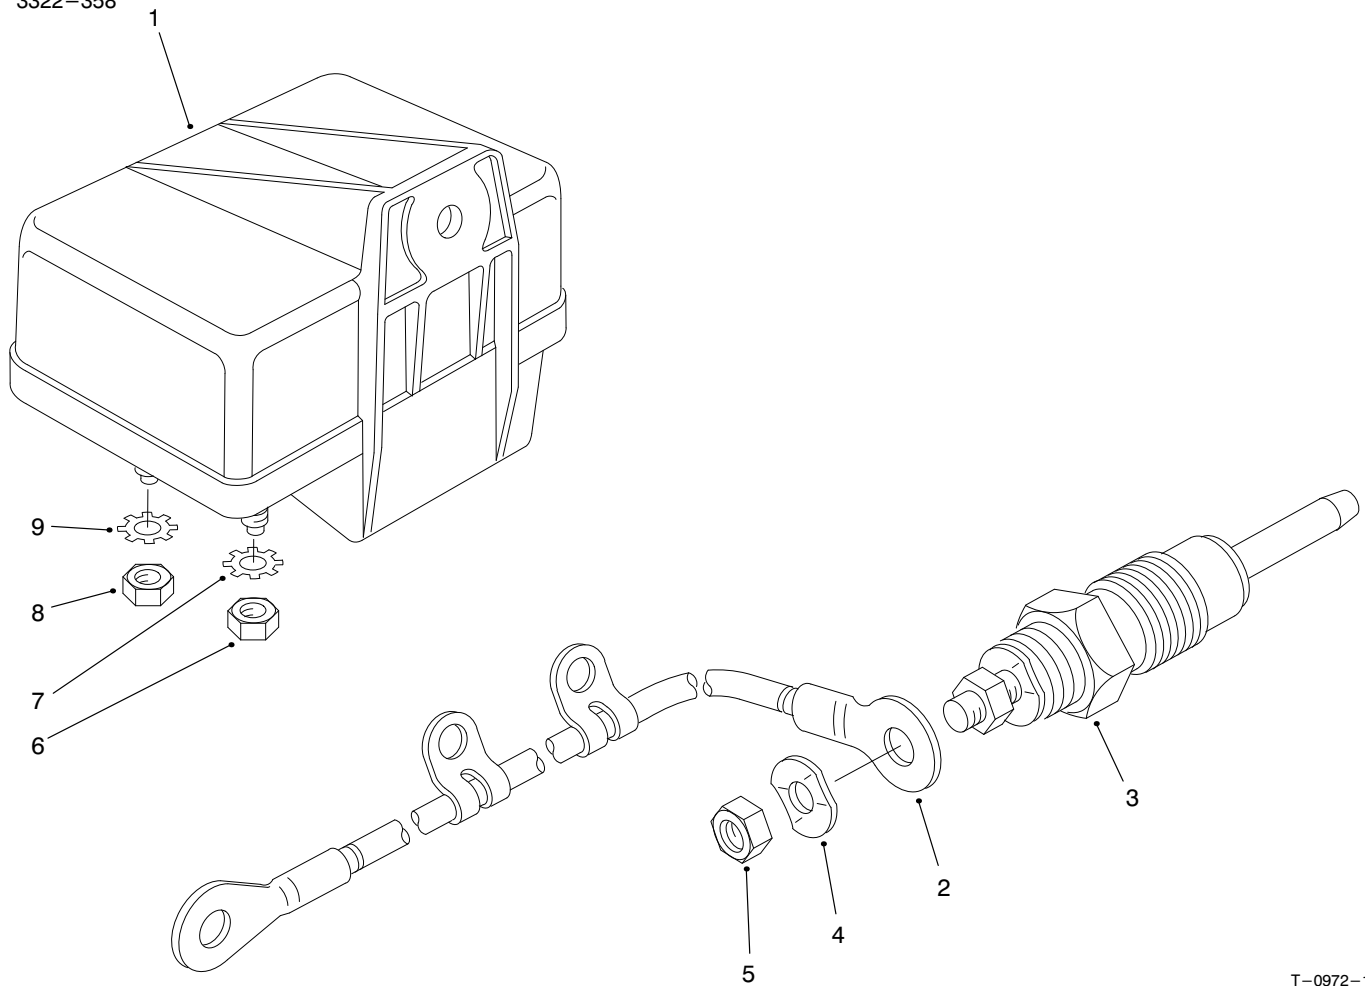


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay-Glow Plug	1
2	94-3265	Cable-Glow Plug	4
3	94-3264	Plug-Glow	4
4	76-5290	Washer-Spring	4
5	94-3266	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut-Lock	1
7	76-5310	Washer-Lock	1
8	94-3251	Nut-Lock	1
9	74-8710	Washer-Lock	1

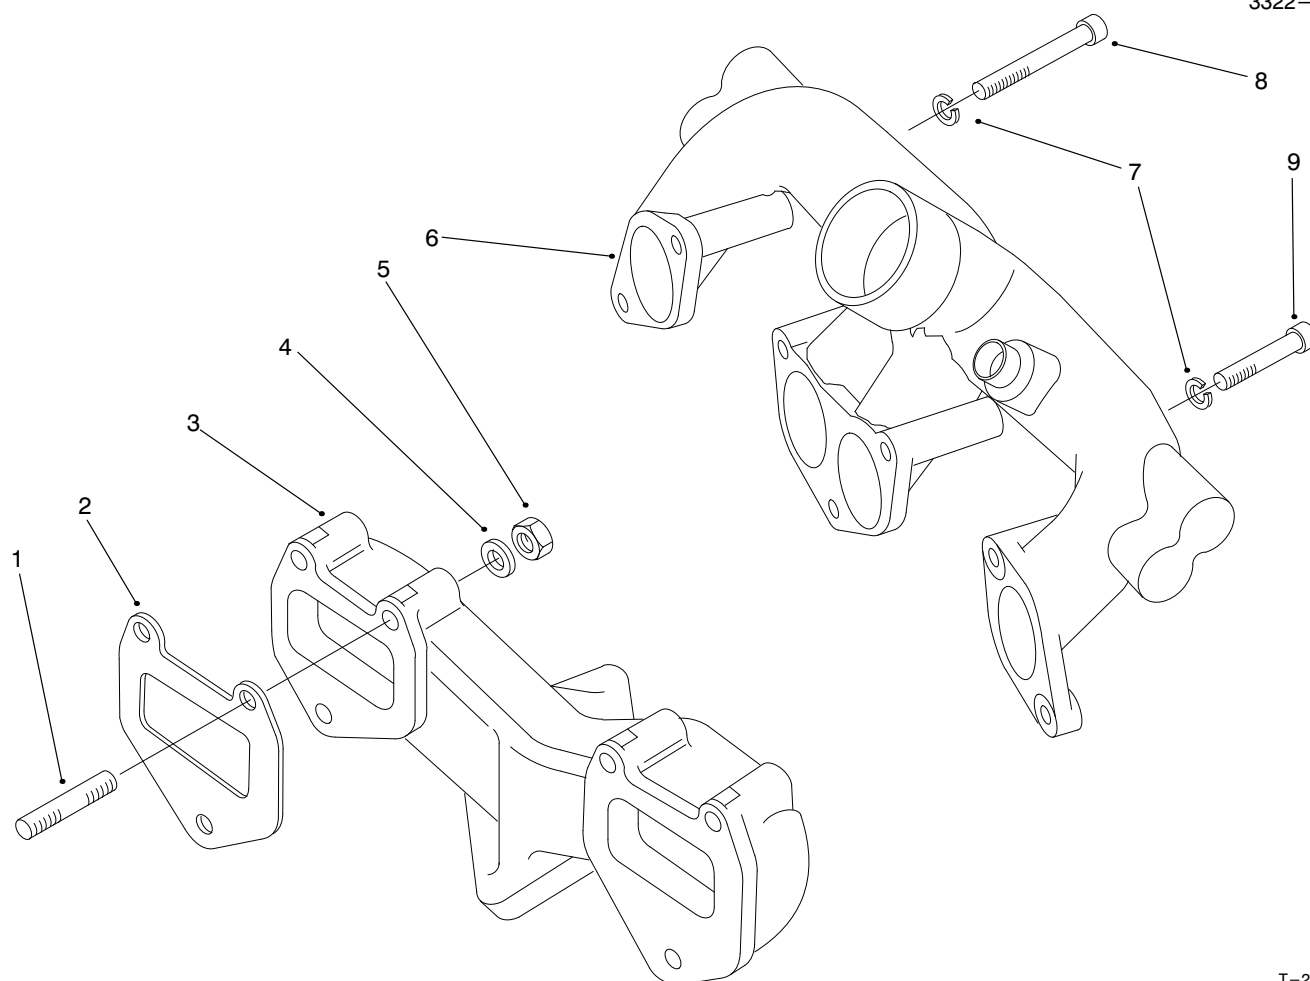 


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6	6	94-3215	Manifold-Intake	1
2	77-3310	Gasket	2	7	94-3164	Washer-Spring	7
3	77-3340	Manifold-Exhaust	1	8	94-3216	Screw	5
4	68-9420	Washer-Lock	6	9	94-3217	Screw	4
5	77-3320	Nut-Hex	6	*	94-3218	Screw	1

 
*Not Illustrated

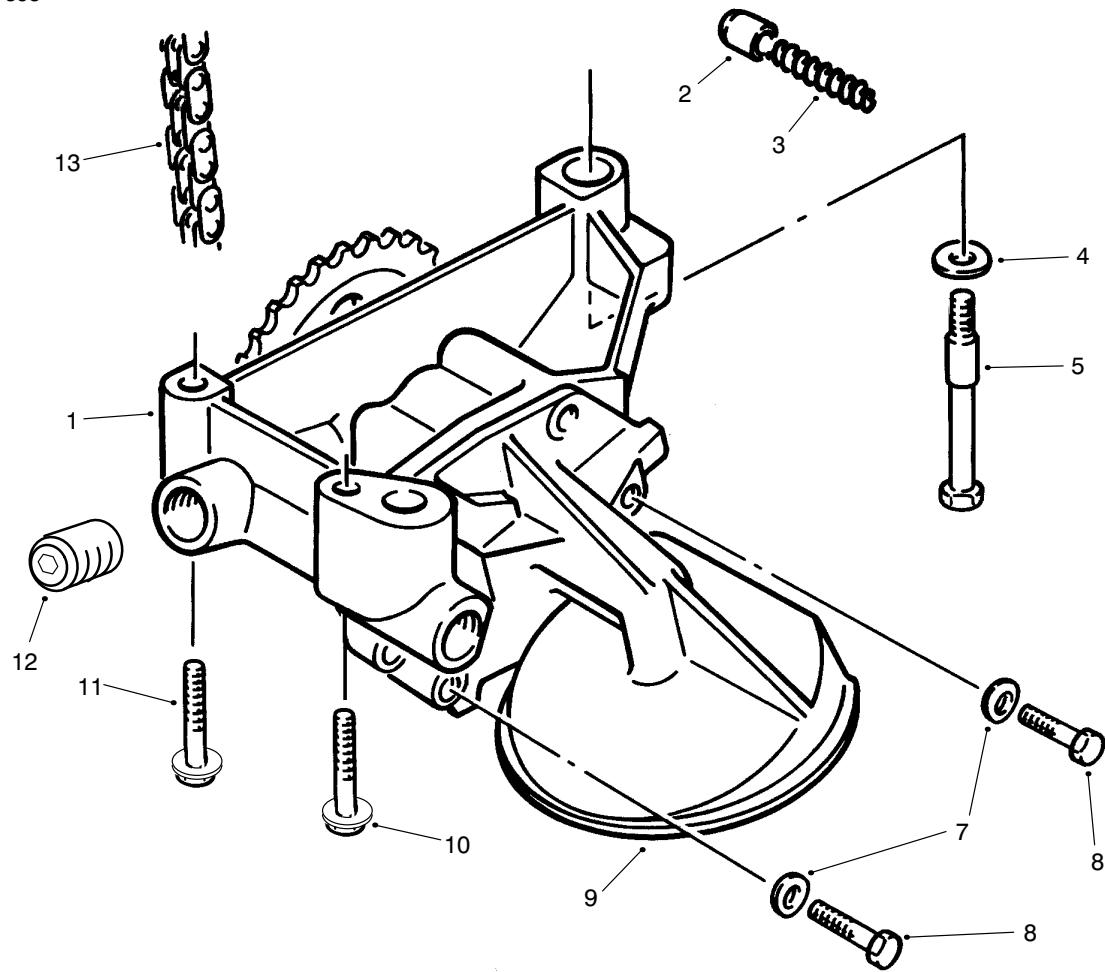

T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5070	Asm-Oil Pump	1	8	94-3124	Screw-HH	2
2	94-3176	Gear-Oil Pump	1	9	94-3178	Strainer	1
3	76-5090	Spring-Piston	1	10	77-3470	Screw	1
4	94-3179	Washer-Spring	3	11	77-3490	Screw	1
5	76-5100	Bolt-Shoulder	1	12	94-3177	Plug	2
7	76-5010	Washer-Spring	5	13	76-5170	Chain-Pump Drive	1

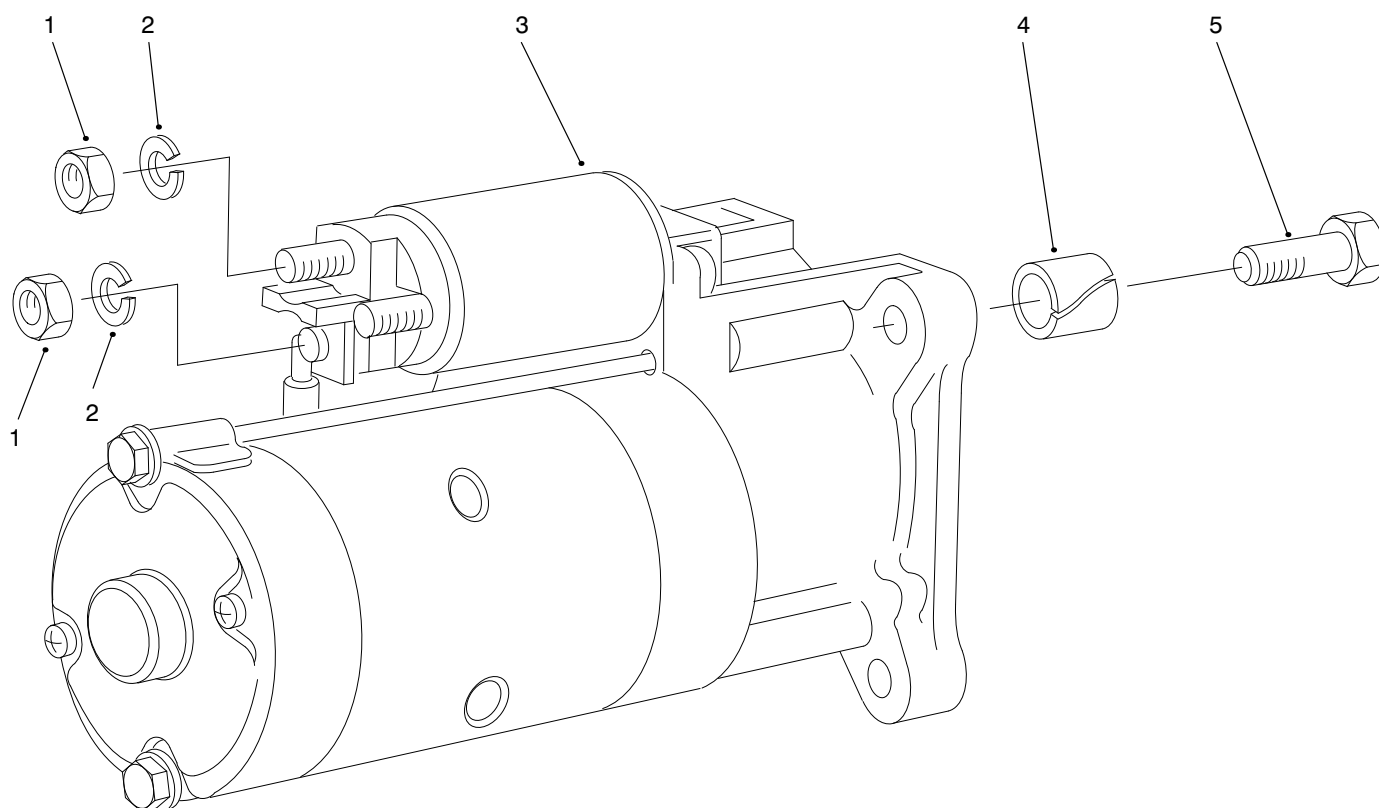 


T-0968-1

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	76-5580	Starter	1
4	76-5590	Sleeve-Spring	1

Ref. No.	Part No.	Description	No. Used
5 *	48-7810 94-3275	Screw-Mounting Solenoid-Starter	3 1

 *Not Illustrated

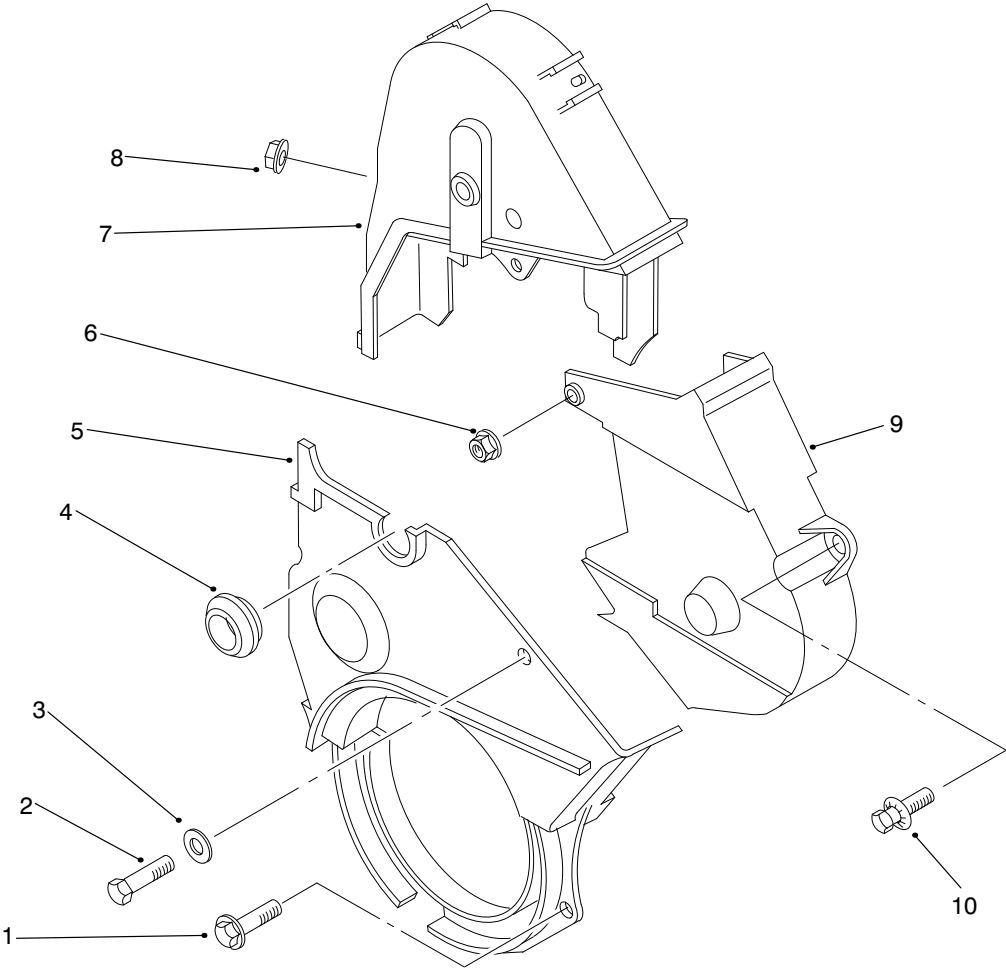


T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2
2	94-3130	Screw	1
3	94-3125	Washer-Flat	1
4	94-3129	Plug	1
5	94-3126	Protector-Lower	1

Ref. No.	Part No.	Description	No. Used
6	94-3133	Nut W/Washer	1
7	94-3127	Case-Timing, Left	1
8	94-3134	Nut	1
9	94-3128	Case-Timing, Right	1
10	94-3131	Screw	1

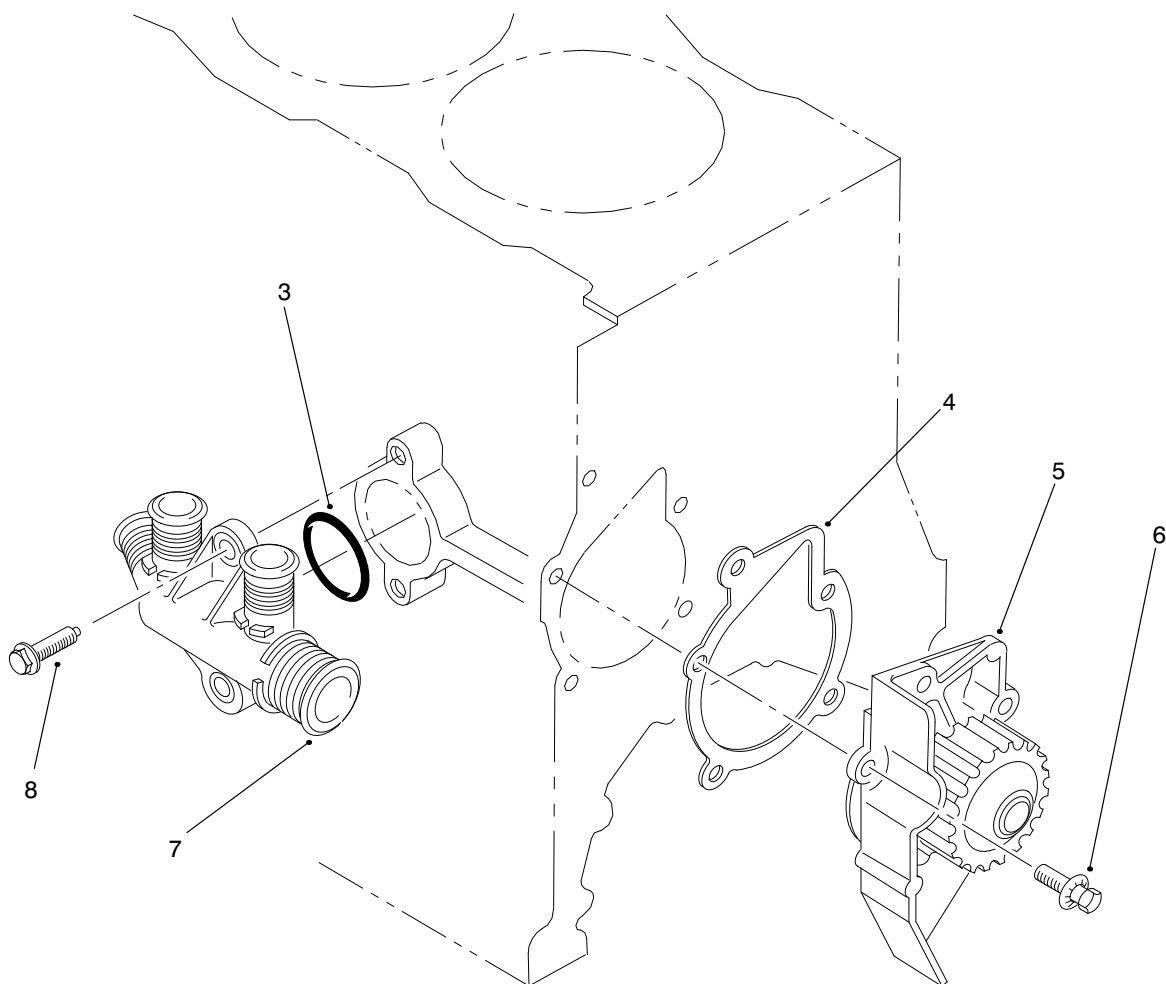 


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket-Pump, Water	1
5	98-9972	Cover-Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet-Water	1
8	94-3198	Screw	2

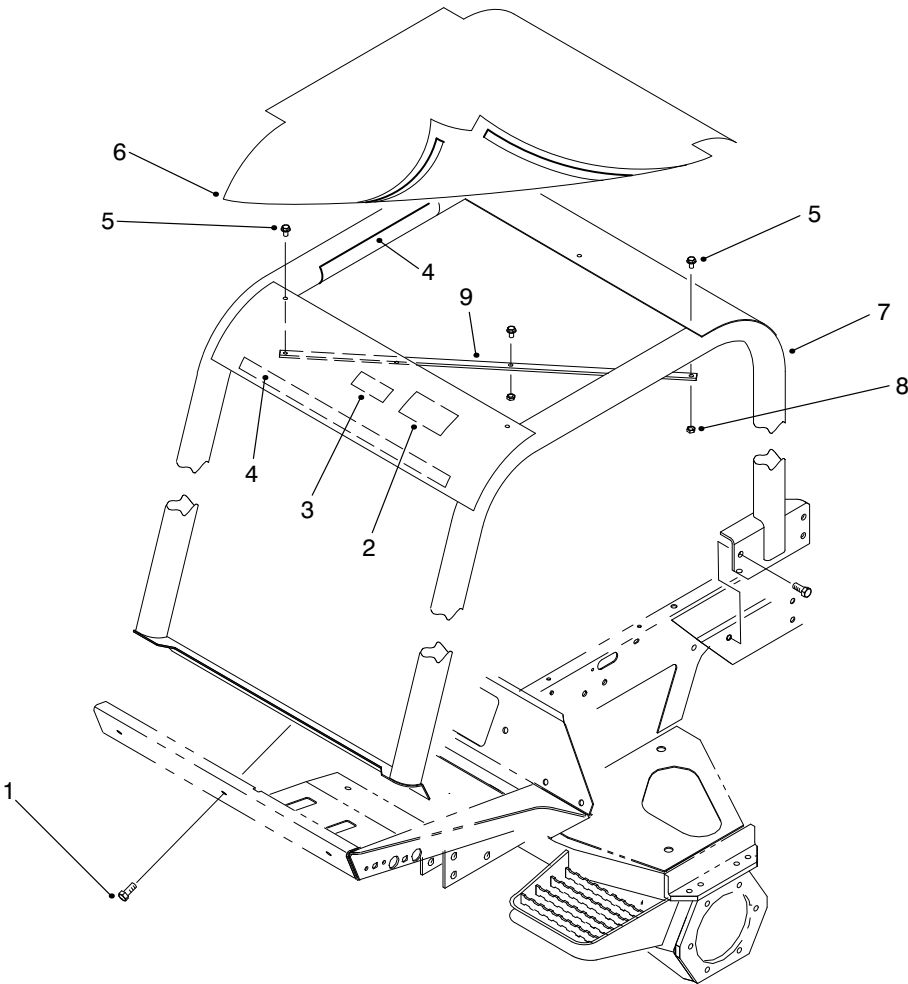 


T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw-HHF	3
2	83-7430	Decal-Danger	1
2	93-8050	Decal-Warning (Europe)	1
2	84-4300	Decal-Danger (Japan)	1
3	92-7540	Decal-ROPS	1
3	93-8073	Decal-Blank (Europe)	1
4	93-9157	Velcro	4

Ref. No.	Part No.	Description	No. Used
5	33104-030	Screw-HHF	5
6	93-9160	Cover-ROPS	1
7	94-2643	Frame-ROPS (Incl. Ref. #2-4)	1
8	33024-00	Nut-Lock	5
9	93-9159	Strap-Cover	2

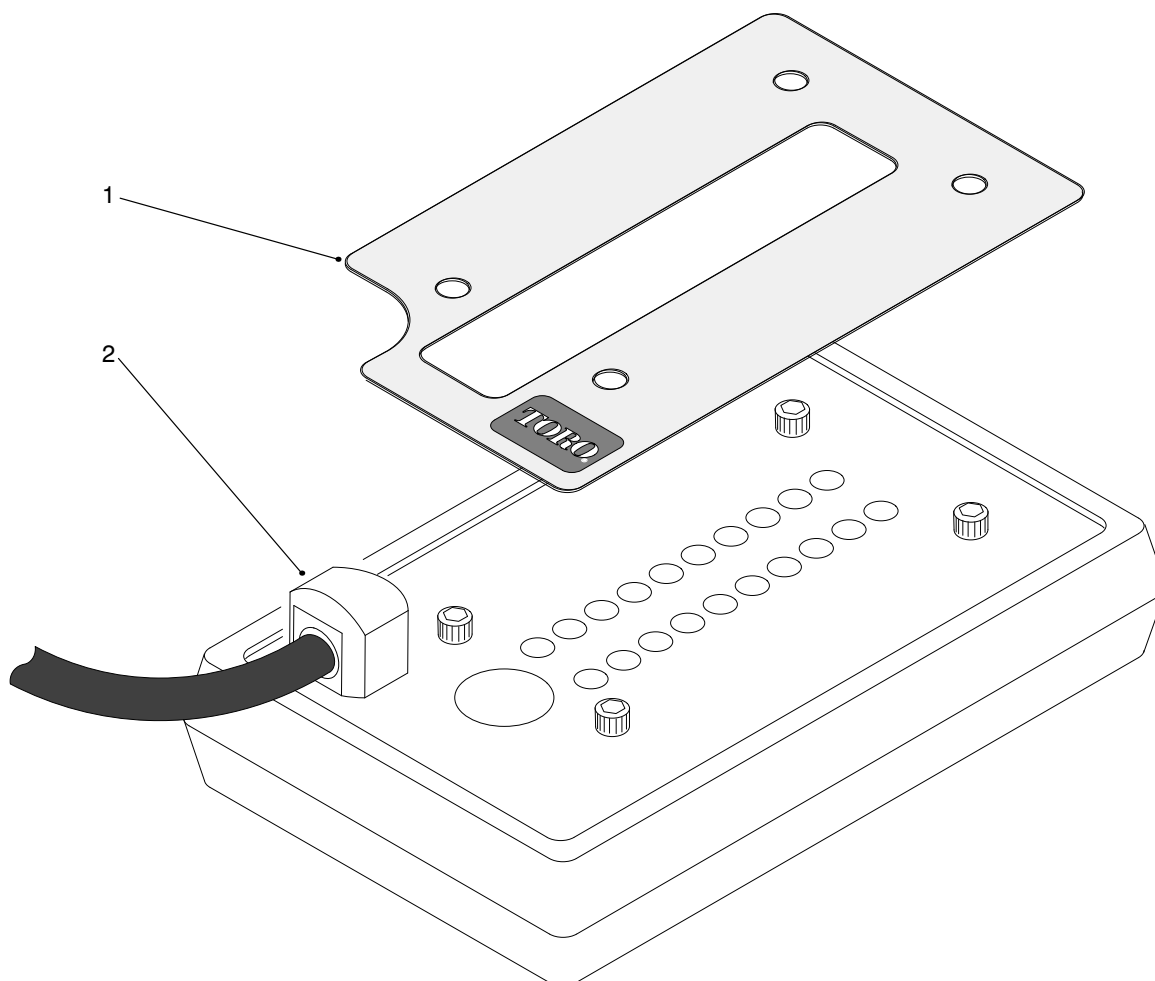 

T-1458-1


DIAGNOSTIC-ACE DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
■1	92-7549	Decal-Diagnostic ACE V 1.0 (English)	1	▲1	94-3354	Decal-Diagnostic ACE V 1.0 (Danish)	1
▲1	98-8801	Decal-Diagnostic ACE V 1.0 (English)	1	▲1	94-3355	Decal-Diagnostic ACE V 1.0 (Dutch)	1
■1	94-4588	Decal-Diagnostic ACE V 1.0 (Danish)	1	▲1	94-3356	Decal-Diagnostic ACE V 1.0 (Finnish)	1
■1	94-4589	Decal-Diagnostic ACE V 1.0 (Dutch)	1	▲1	94-3357	Decal-Diagnostic ACE V 1.0 (French)	1
■1	94-4590	Decal-Diagnostic ACE V 1.0 (Finnish)	1	▲1	94-3358	Decal-Diagnostic ACE V 1.0 (German)	1
■1	94-4591	Decal-Diagnostic ACE V 1.0 (French)	1	▲1	94-3359	Decal-Diagnostic ACE V 1.0 (Italian)	1
■1	94-4592	Decal-Diagnostic ACE V 1.0 (German)	1	▲1	94-3361	Decal-Diagnostic ACE V 1.0 (Norwegian)	1
■1	94-4593	Decal-Diagnostic ACE V 1.0 (Italian)	1	▲1	94-3362	Decal-Diagnostic ACE V 1.0 (Portuguese)	1
■1	94-4595	Decal-Diagnostic ACE V 1.0 (Norwegian)	1	▲1	94-3363	Decal-Diagnostic ACE V 1.0 (Spanish)	1
■1	94-4596	Decal-Diagnostic ACE V 1.0 (Portuguese)	1	▲1	94-3364	Decal-Diagnostic ACE V 1.0 (Swedish)	1
■1	94-4597	Decal-Diagnostic ACE V 1.0 (Spanish)	1	▲1	94-2844	Decal-Diagnostic ACE V 1.0 (Japan)	1
■1	94-4598	Decal-Diagnostic ACE V 1.0 (Swedish)	1	2	85-4750	Display-Diagnostic ACE	1
■1	94-4594	Decal-Diagnostic ACE V 1.0 (Japan)	1				

*Not Illustrated

▲Controller No.1

 ■Controller No.2

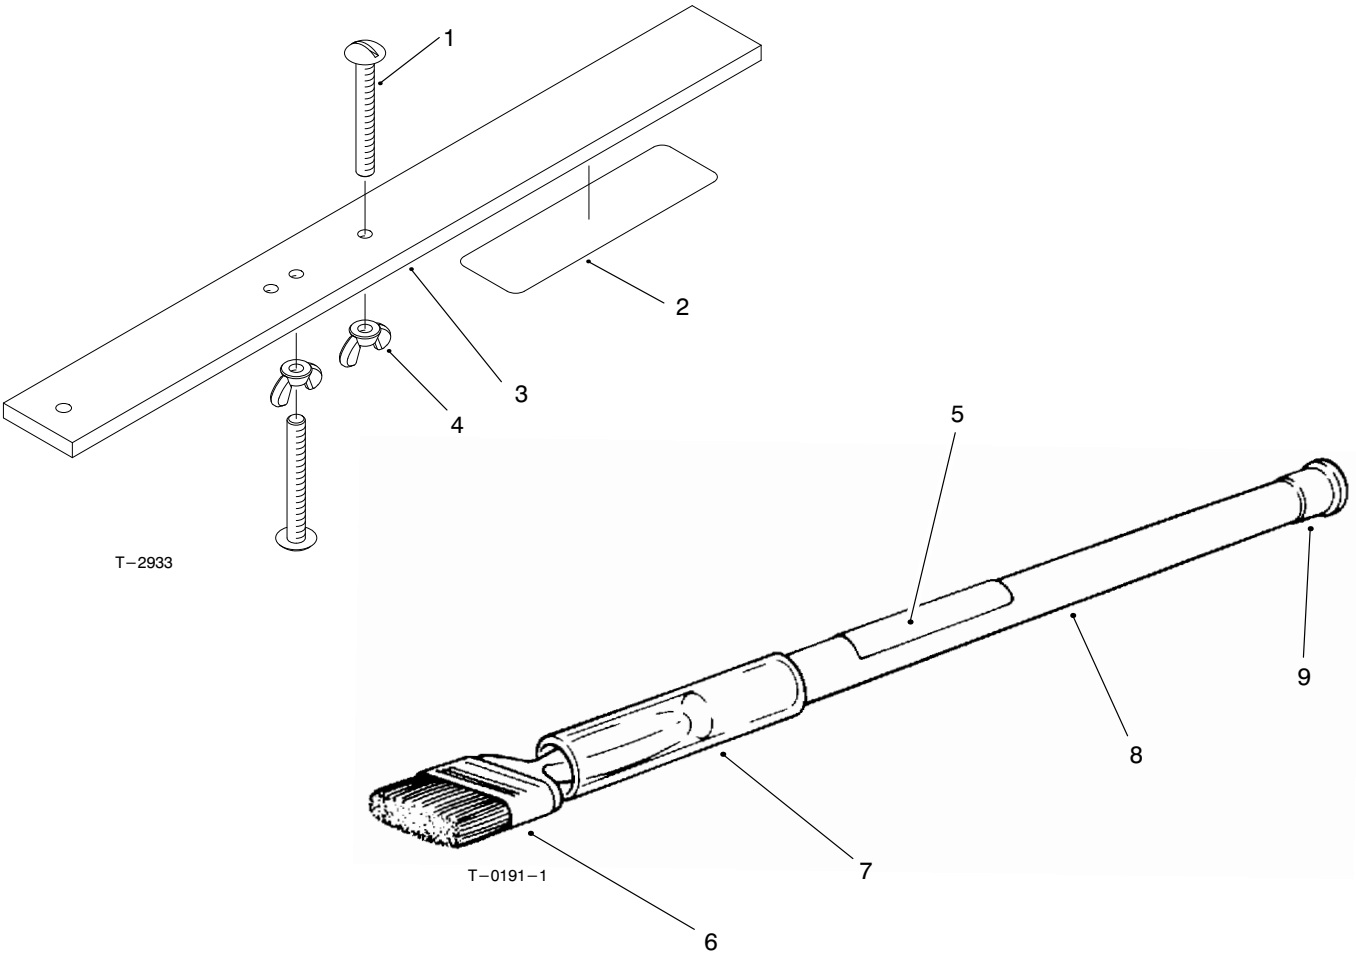


GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw-Machine Slot Hd.	2
2	98-7976	Decal	1
3	98-1852	Asm-Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut-Wing	2
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose-Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm-Backlapping Brush (Incl. Ref. #5-9)	1

*Not Illustrated

 
RM6700D HYDRAULIC SCHEMATIC

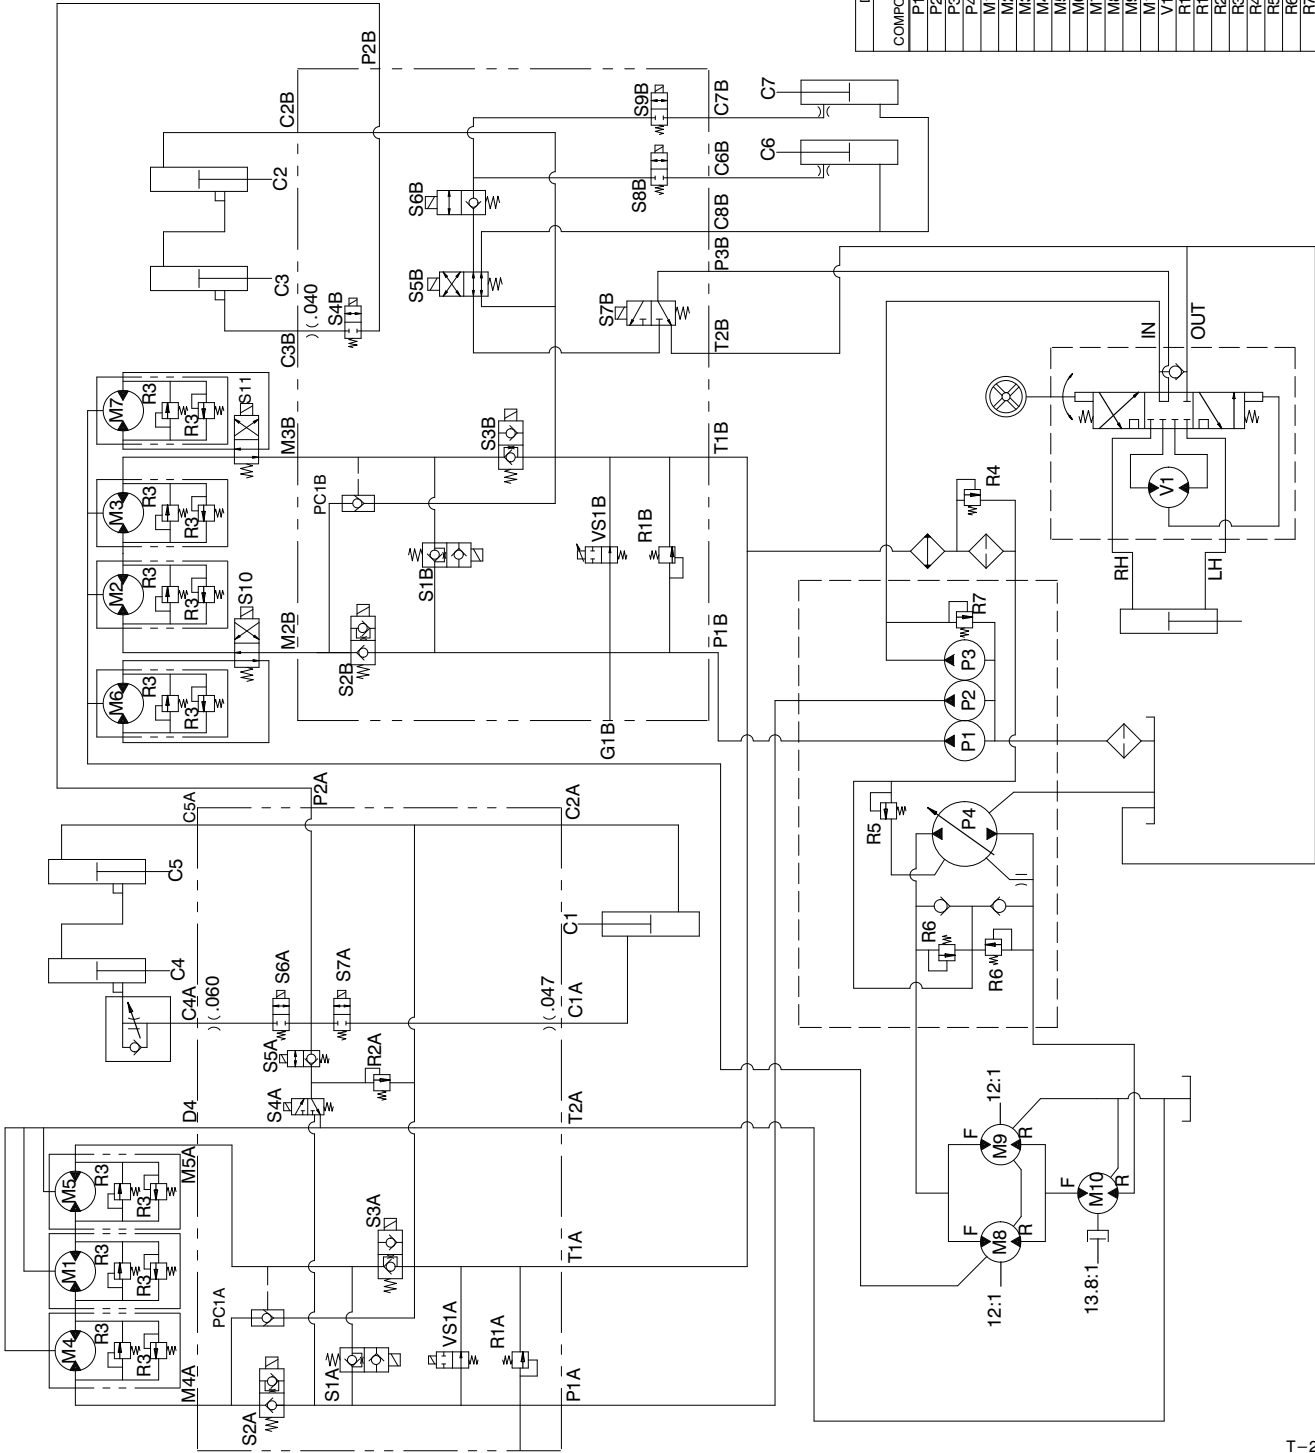


DISPLACEMENT, FLOW RATE, AND PRESSURE CHART				
COMPONENT	DISPLACEMENT in ³ /rev	PRESSURE lbs/in ²	FLOW RATE *	
			GPM	LPM
P1	.58	9.5	6.8	25.6
P2	.58	9.5	6.8	25.6
P3	.31	5.1	3.6	13.7
P4	2.48	40.6	28.9	109.5
M1	1.16	19		
M2	1.16	19		
M3	1.16	19		
M4	1.16	19		
M5	1.16	19		
M6	1.16	19		
M7	1.16	19		
M8	2.01	32.9		
M9	2.48	40.6		
M10	.66	10.8		
V1				
R1A		3000	207	
R1B		3000	207	
R2A		2750	190	
R3		1500	103	
R4		50	3	
R5		180	12	
R6		4000	276	
R7		1250	86	

* FLOW RATE CALCULATED AT 2750 RPM AND 98% EFFICIENCY.

 RM6700D ELECTRICAL SCHEMATIC

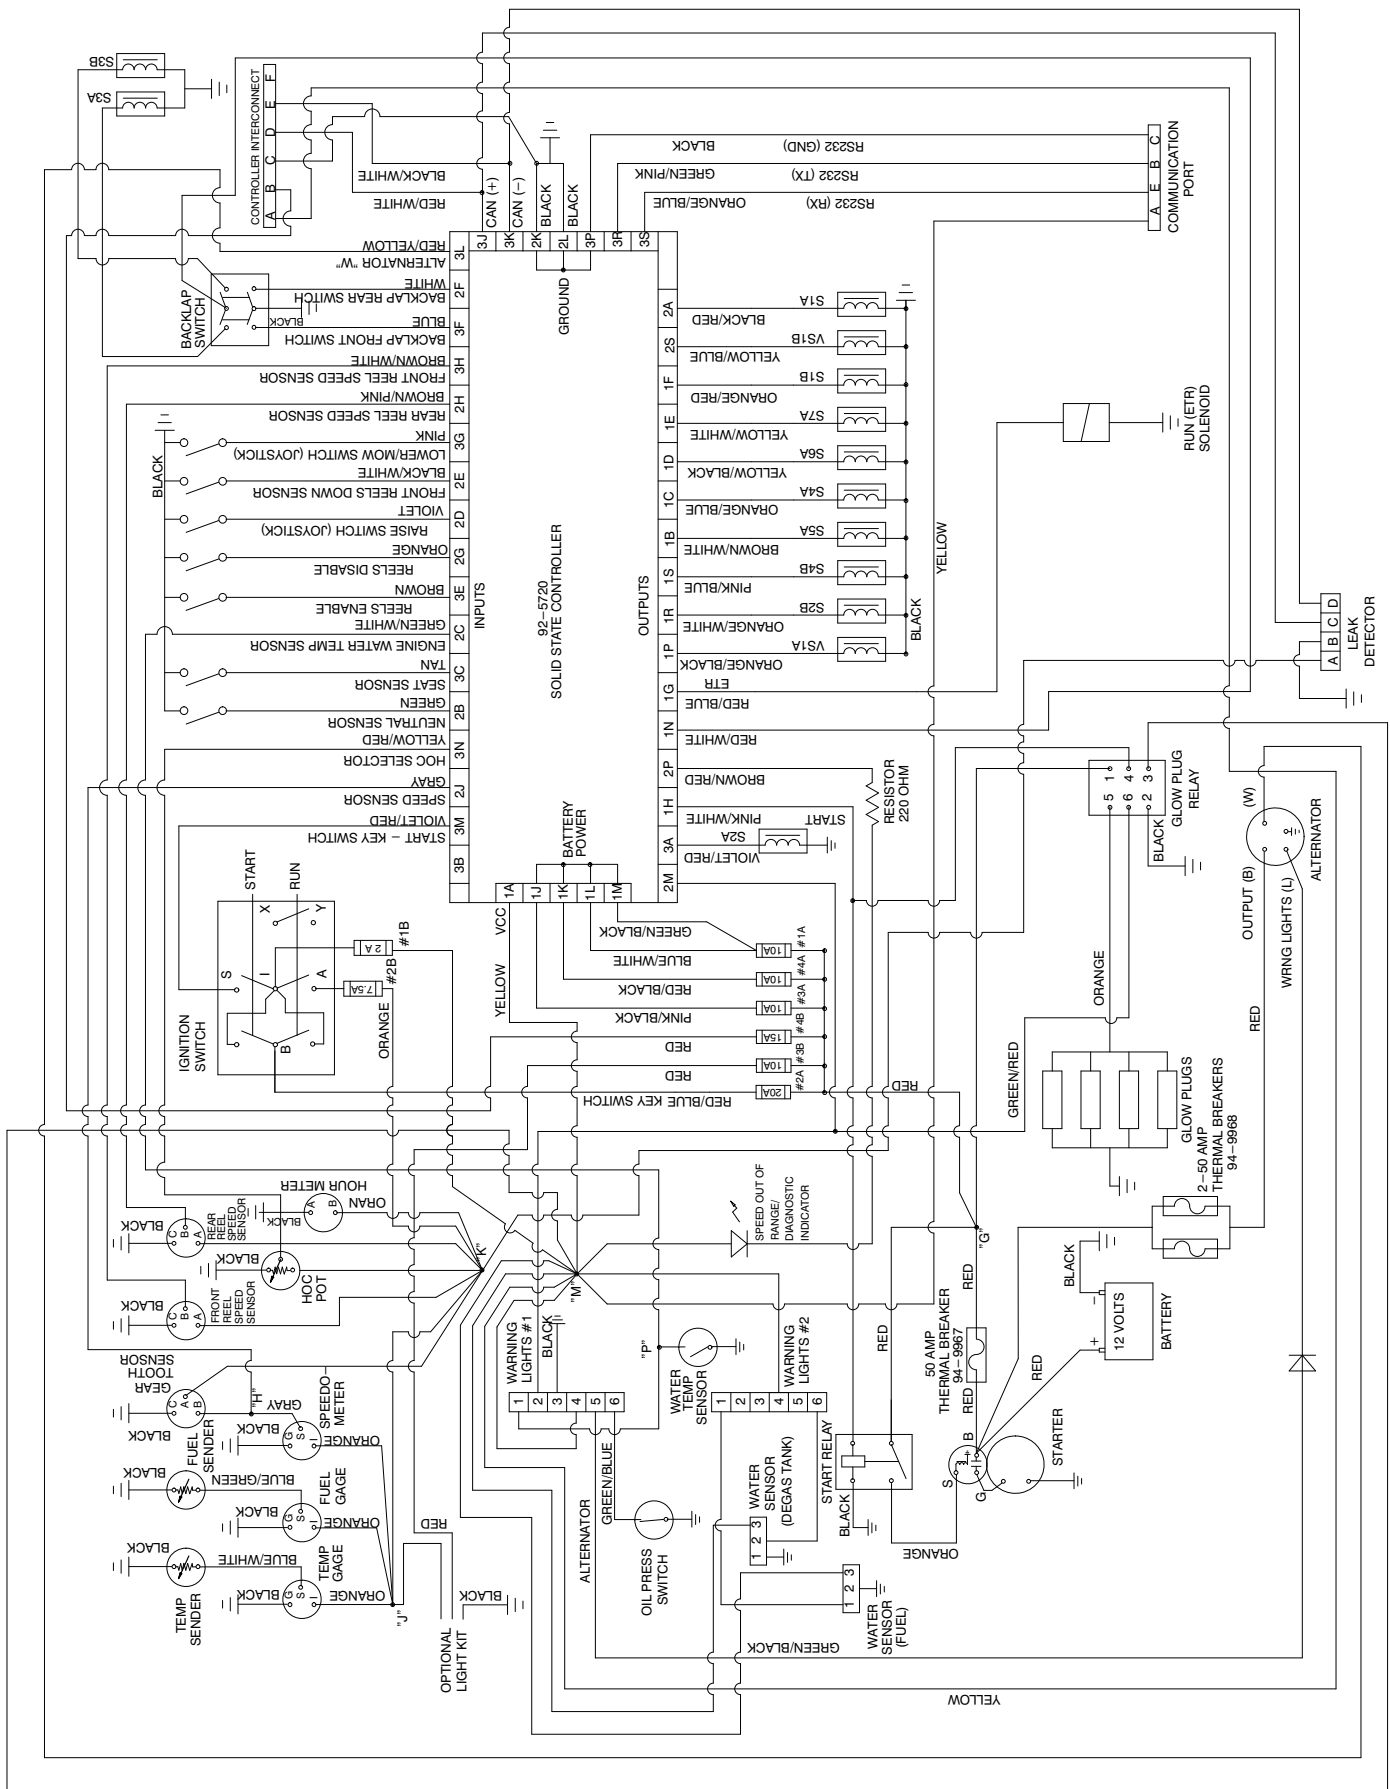

CONTROLLER ELECTRICAL SCHEMATIC

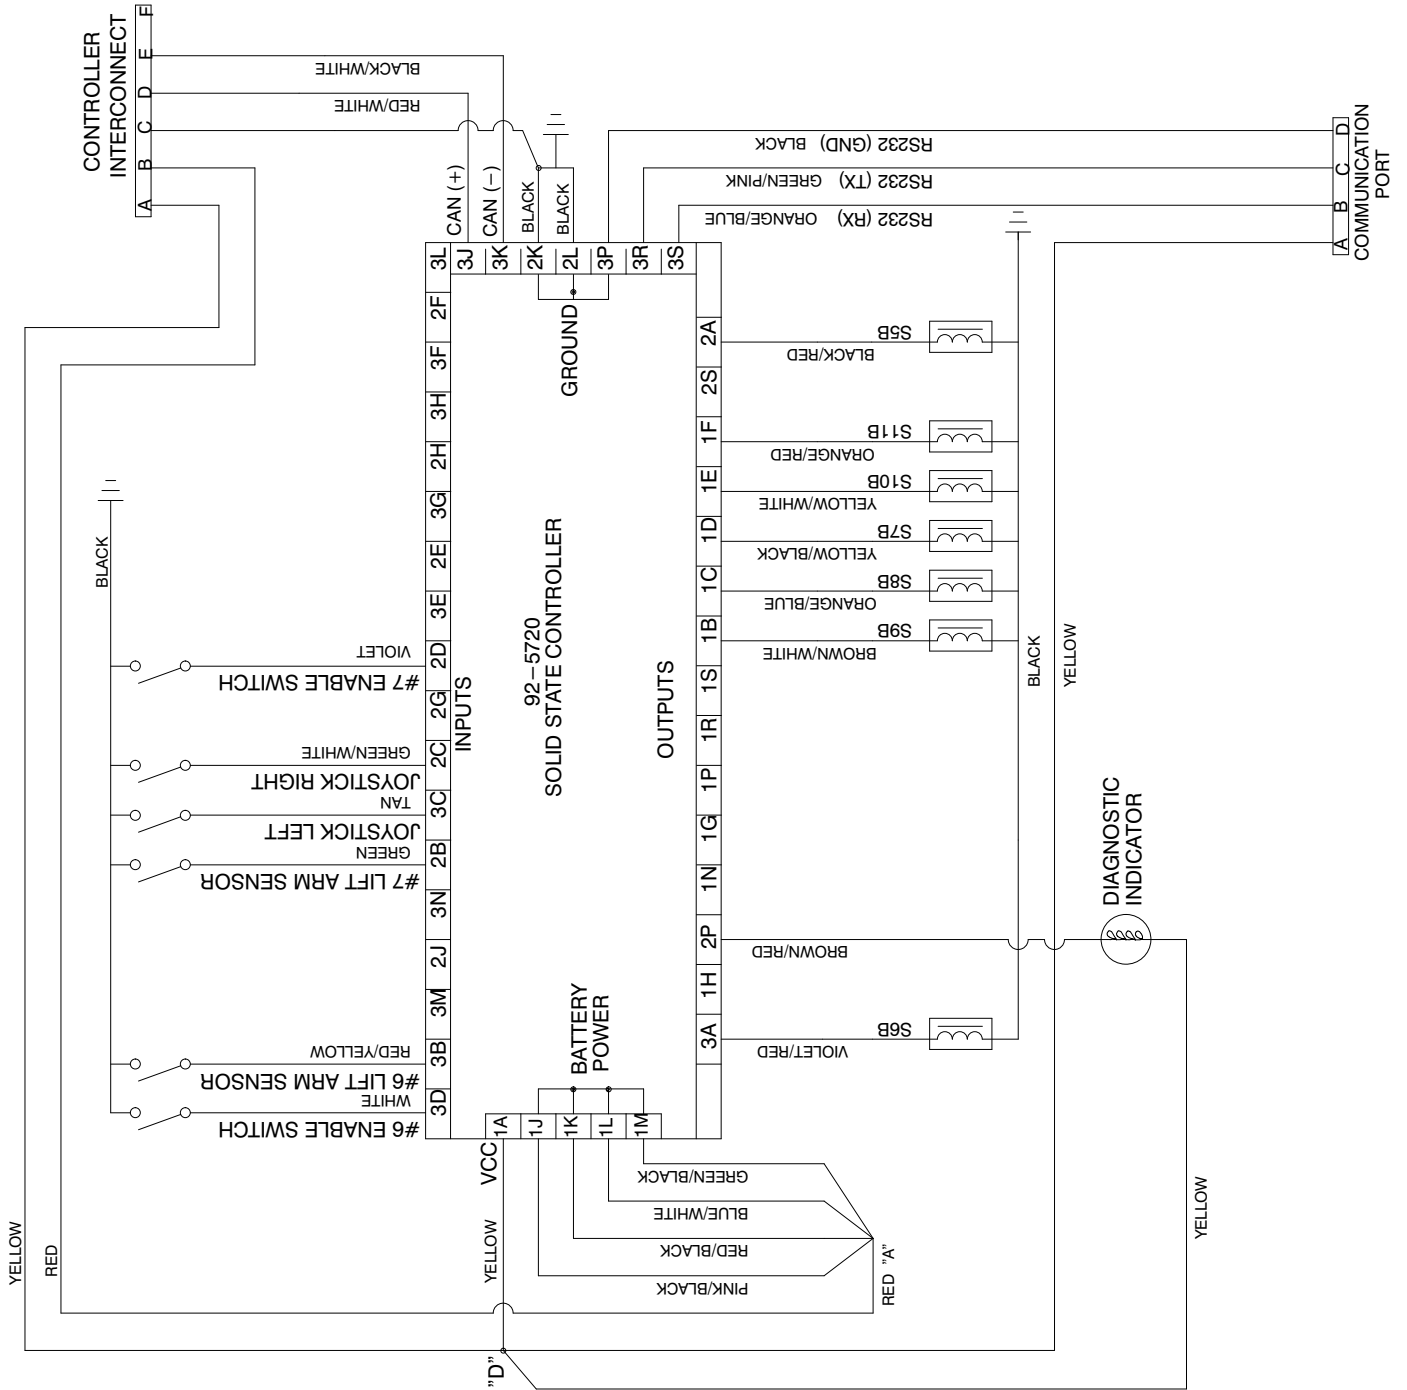 

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer-Thrust	23 44 2	66-6480	Washer	2 58 2
3-6781	Washer-Thrust	22 65 3	66-8121	Standpipe	20 7 1
3-6781	Washer-Thrust	24 83 2	66-8520	Bumper-Down Stop	16 17 2
5-0652	Spacer	8 47 1	66-8530	Adjuster	16 16 1
12-9140	Decal	74 5 1	66-8560	Nut-Push	16 11 4
17-9420	Screw-Handle	2 61 1	66-8610	Weldment-Lower	16 10 1
21-4191	Asm-Seat Belt	14 4 1	66-9290	Spacer	16 15 6
21-9260	Cover-Dust	5 18 1	67-1750	Bushing-Axle	24 15 4
27-2360	Switch-Ignition	17 31 1	67-6570	Spacer-Wheel	23 37 2
29-9080	Handle	74 8 1	67-7160	Block-Fuse	17 41 2
29-9090	Hose-Handle	74 7 1	68-6150	Breather-Air	19 4 1
29-9100	Asm-Backlapping Brush	74 * 1	68-9420	Washer-Lock	67 4 6
36-4310	Brush	74 6 1	68-9420	Washer-Lock	62 34 3
37-8771	Bolt-Shoulder	45 33 2	69-3020	Latch-Draw	45 34 2
44-2210	Asm-Light, Warning	5 30 1	69-4260	Seal Kit	32 * 2
46-0330	Nut-Hex	69 1 2	69-4260	Seal Kit	35 * 2
46-6550	Fitting-Connector	20 8 1	69-8900	Spacer	47 59 1
46-6560	Bushing	20 9 2	69-8910	Washer	47 58 2
46-8091	Screw-Tapping	1 14 2	69-8920	Washer	9 9 6
48-7570	Screw-HH	55 9 3	69-8930	Washer	3 9 10
48-7610	Screw-HH	55 46 3	69-8930	Washer	33 26 16
48-7700	Screw-HH	63 38 3	69-8950	Spacer	9 11 3
48-7700	Screw-HH	55 45 6	69-8960	Spacer	3 11 5
48-7780	Screw-HH	55 42 3	69-8960	Spacer	33 33 4
48-7810	Screw-HH	55 10 3	70-1480	Relay	15 27 1
48-7810	Screw-Mounting	69 5 3	70-2780	Piston	25 4 1
48-7840	Screw-HH	55 5 1	70-2780	Piston	26 4 1
48-7880	Nut	55 24 3	70-2780	Piston	29 5 1
48-7880	Nut	15 29 1	71-4580	Clutch-Roller	46 15 1
48-7890	Nut	15 30 1	71-4590	Washer-Thrust	46 16 2
48-7930	Nut-Hex.	55 28 2	71-4760	Seal	52 12 2
48-9470	Screw	55 4 1	72-3560	Decal-4WD	2 29 1
49-2040	Screw-HH	15 2 1	74-0720	Tube-Manual	14 16 1
49-2640	Seal-Shaft	42 11 1	74-3410	Asm-Radiator	45 20 1
49-6440	Pedal-Accelerator	8 15 1	74-3650	Fan-Engine	55 32 1
52-5910	Ring-Retaining	15 25 1	74-5500	Bolt-Wheel	46 36 10
53-9681	Mount-Rubber	55 3 3	74-5700	Bearing-Needle	46 30 1
55-4130	Hose-Fuel	43 54 1	74-5950	Latch-Swell	17 12 1
56-6710	O-Ring	42 1 6	74-5950	Latch-Swell	1 24 3
56-7972	Clamp	5 42 2	74-6490	Hose-Water Line	55 40 2
56-7972	Clamp-Tube	13 3 2	74-6540	Tappet-Valve	62 14 8
56-7972	Clamp-Tube	3 29 4	74-6550	Cup-Upper Valve Spring	61 11 8
56-7973	Clamp	6 52 6	74-6560	Spring-Valve	61 10 8
56-7973	Clamp-Tube	13 12 4	74-6570	Cup-Lower Valve Spring	61 9 8
56-7973	Clamp-Tube	33 44 10	74-6580	Insert-Valve (1.650mm)	61 13 8
59-9740	Latch-Draw	1 12 1	74-6590	Insert-Valve (1.725mm)	61 * 8
60-5700	Spring-Compression	8 43 1	74-6600	Insert-Valve (1.800mm)	61 * 8
60-5890	Washer	42 12 1	74-6610	Insert-Valve (1.900mm)	61 * 8
60-6500	Screw-Pan Hd.	17 10 4	74-6620	Insert-Valve (1.975mm)	61 * 8
60-6700	Screw-HH	24 23 4	74-6630	Insert-Valve (2.050mm)	61 * 8
60-6700	Screw-HH	22 45 6	74-6640	Insert-Valve (2.125mm)	61 * 8
61-2790	Filler-Screen	20 24 1	74-6650	Insert-Valve (2.225mm)	61 * 8
61-2790	Filter-Screen	19 9 1	74-6660	Insert-Valve (2.250mm)	61 * 8
62-5550	Decal-Toro	1 1 1	74-6670	Insert-Valve (2.275mm)	61 * 8
62-7650	Gasket	20 17 1	74-6680	Insert-Valve (2.300mm)	61 * 8
63-7622	Hose-Fuel	43 15 1	74-6690	Insert-Valve (2.325mm)	61 * 8
63-7627	Hose-Fuel	20 4 1	74-6700	Insert-Valve (2.350mm)	61 * 8
63-7627	Hose-Fuel	55 27 1	74-6710	Insert-Valve (2.375mm)	61 * 8
63-7640	Sender-Fuel	20 18 1	74-6720	Insert-Valve (2.400mm)	61 13 8
63-7880	Pin-Latch, Brake	8 31 1	74-6730	Insert-Valve (2.425mm)	61 * 8
63-7900	Rack	5 1 1	74-6740	Insert-Valve (2.450mm)	61 * 8
63-8360	Key-Ignition	17 33 1	74-6750	Insert-Valve (2.475mm)	61 * 8
63-8410	Washer-Flat	20 14 3	74-6760	Insert-Valve (2.500mm)	61 * 8
63-8410	Washer-Flat	19 27 3	74-6770	Insert-Valve (2.525mm)	61 * 8
63-9920	Decal-EEC 105 DBA	15 15 1	74-6780	Insert-Valve (2.550mm)	61 * 8
65-5100	Handle-Hood	1 11 1	74-6790	Insert-Valve (2.575mm)	61 * 8
66-2920	Washer	18 53 3	74-6800	Insert-Valve (2.600mm)	61 * 8
66-2920	Washer	2 59 4	74-6810	Insert-Valve (2.625mm)	61 * 8
66-2920	Washer-Nylon	15 1 2	74-6820	Insert-Valve (2.650mm)	61 * 8
66-3160	Screw	55 11 4	74-6830	Insert-Valve (2.675mm)	61 * 8
66-4190	Spring	15 12 1	74-6840	Insert-Valve (2.700mm)	61 * 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6850	Insert-Valve (2.725mm)	61 * 8	74-7960	Stud-Filter	59 30 1
74-6860	Insert-Valve (2.750mm)	61 * 8	74-7970	Filter-Oil	59 31 1
74-6870	Insert-Valve (2.775mm)	61 * 8	74-7990	Pin	60 16 1
74-6880	Insert-Valve (2.800mm)	61 * 8	74-7990	Pin-Spring	59 33 4
74-6890	Insert-Valve (2.825mm)	61 * 8	74-8000	Plug	59 34 2
74-6900	Insert-Valve (2.850mm)	61 * 8	74-8010	Guide-Dipstick	59 35 1
74-6910	Insert-Valve (2.875mm)	61 * 8	74-8030	Pin-Spring	59 37 1
74-6920	Insert-Valve (2.900mm)	61 * 8	74-8100	Gear-Pinion	60 4 1
74-6930	Insert-Valve (2.925mm)	61 * 8	74-8120	Key-Woodruff	60 6 2
74-6940	Insert-Valve (2.950mm)	61 * 8	74-8140	Cover	60 9 1
74-6950	Insert-Valve (2.975mm)	61 * 8	74-8150	Gasket-Cover	60 10 1
74-6960	Insert-Valve (3.000mm)	61 * 8	74-8170	Bearing Set (Std.)	60 12 2
74-6970	Insert-Valve (3.025mm)	61 * 8	74-8210	Thrust Bearing Set	60 * 2
74-6980	Insert-Valve (3.050mm)	62 13 8	74-8230	Crankshaft	60 14 1
74-6990	Insert-Valve (3.075mm)	62 * 8	74-8260	Flywheel	60 34 1
74-7000	Insert-Valve (3.100mm)	62 * 8	74-8270	Pin	60 18 3
74-7010	Insert-Valve (3.125mm)	62 * 8	74-8290	Seal-#1 Bearing Cap	60 20 2
74-7020	Insert-Valve (3.150mm)	62 * 8	74-8300	Clip-Piston Pin	60 21 8
74-7030	Insert-Valve (3.175mm)	62 * 8	74-8310	Pin-Piston	60 22 4
74-7040	Insert-Valve (3.200mm)	62 * 8	74-8320	Piston Ring Set-0.20 mm	60 * 4
74-7050	Insert-Valve (3.225mm)	62 * 8	74-8330	Piston Ring Set-0.50 mm	60 * 4
74-7060	Insert-Valve (3.250mm)	62 * 8	74-8340	Piston Ring Set-0.80 mm	60 * 4
74-7070	Insert-Valve (3.275mm)	62 * 8	74-8360	Rod-Connecting	60 25 4
74-7080	Insert-Valve (3.300mm)	62 * 8	74-8380	Bearing-Connecting Rod	60 27 4
74-7090	Insert-Valve (3.325mm)	62 * 8	74-8420	Piston Set-Stage #1	60 29 1
74-7100	Insert-Valve (3.350mm)	62 * 8	74-8430	Piston Set-Stage #2	60 * 1
74-7110	Insert-Valve (3.375mm)	62 * 8	74-8440	Piston Set-Stage #3	60 * 1
74-7120	Insert-Valve (3.400mm)	62 * 8	74-8610	Pin	64 7 2
74-7130	Insert-Valve (3.425mm)	62 * 8	74-8610	Pin	56 8 2
74-7140	Insert-Valve (3.450mm)	62 * 8	74-8630	Bushing-Flange	64 8 1
74-7150	Insert-Valve (3.475mm)	62 * 8	74-8650	Journal	64 12 1
74-7160	Insert-Valve (3.500mm)	62 * 8	74-8670	Union-Inlet	64 13 1
74-7170	Insert-Valve (3.550mm)	62 * 8	74-8680	Gasket	64 14 2
74-7180	Insert-Valve (3.625mm)	62 * 8	74-8710	Washer	64 16 1
74-7190	Insert-Valve (3.700mm)	62 * 8	74-8710	Washer-Lock	66 9 1
74-7200	Insert-Valve (3.775mm)	62 * 8	74-8750	Pipe	65 12 1
74-7210	Insert-Valve (3.850mm)	62 * 8	74-8770	Plug	65 10 1
74-7220	Insert-Valve (3.925mm)	62 * 8	74-8830	Belt	57 18 1
74-7230	Insert-Valve (4.000mm)	62 * 8	74-8870	Gasket	64 21 2
74-7240	Collar-Split	61 12 16	74-8900	Washer-Flat	61 7 6
74-7260	Bolt-Head	62 29 10	74-8920	Washer-Copper	42 9 4
74-7270	Washer-Flat	62 28 10	74-9100	Pad-Pedal, Forward	8 14 1
74-7300	Pan-Oil	59 23 1	74-9110	Pad-Pedal, Reverse	8 17 1
74-7310	Plug-Threaded	59 20 1	75-0610	Tread-Foot, RH	2 * 1
74-7320	Gasket	59 19 1	75-0620	Tread-Foot, LH	2 43 1
74-7330	Screw-HH	59 25 23	75-0630	Tread-Foot, Center	2 44 1
74-7380	Gasket-Oil Pan	59 21 1	75-0920	Cartridge-Relief 3000 psi	32 16 1
74-7400	Tube	63 41 1	75-0920	Cartridge-Relief 3000 psi	35 18 1
74-7420	Ball	63 45 4	75-1370	Cable-Battery, Positive	43 9 1
74-7430	Chamber-Turbulence	63 46 4	75-1370	Cable-Battery, Positive	55 17 1
74-7440	Chamber-Turbulence	63 * 4	75-1390	Cover-Access, Front	2 39 1
74-7450	Seat-Intake Valve	63 48 4	75-1410	Plate-Access, Floor	2 40 1
74-7460	Seal-Intake Valve	63 * 4	75-1430	Pedal-Brake, RH	8 40 1
74-7480	Valve-Intake	63 49 4	75-1440	Pedal-Brake, LH	8 35 1
74-7560	Washer-Spring	62 16 3	75-1470	Pin-Pivot, Brake	8 46 1
74-7600	Plug	61 4 4	75-1490	Rod-Brake, Park	6 54 1
74-7630	Gasket-Valve Cover	62 18 1	75-2080	Seal Kit	32 * 7
74-7640	Cover-Valve	62 19 1	75-2080	Seal Kit	35 * 6
74-7650	Washer-Flat	62 20 3	75-2090	Seal Kit	35 * 1
74-7670	Head Bolt & Washer Set	63 * 1	75-2120	Shaft With Clevis	26 12 1
74-7770	Hose-Crankcase	59 11 1	75-2810	Bracket-Column, Steering	5 16 1
74-7780	Gasket	59 12 1	75-2970	Pedal-Traction	8 16 1
74-7790	Screw	59 13 1	75-3270	Hub-Pivot, Traction	8 6 1
74-7810	Gasket-Plate	59 15 1	75-3400	Shaft-Pivot, Seat	14 20 1
74-7820	Plate	59 16 1	75-3480	Weldment-Upper	16 23 1
74-7840	Plug	63 42 2	75-3510	Bolt-Shoulder	16 26 2
74-7840	Plug-27 mm Dia.	59 18 8	75-3530	Spring-Compression	16 3 1
74-7840	Plug-27 mm Dia.	62 33 2	75-3540	Pin-Roll	16 6 1
74-7930	Screw-Bearing Cap	59 27 10	75-3550	Bumper-Seat	16 7 2
74-7940	Bushing-Spring	59 28 1	75-3580	Plate-Mounting, Seat	16 2 1
74-7950	Screw-Plate	59 29 6	75-3680	Rod-Seat	15 23 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-3710	Dipstick	19 8 1	76-7000	Ring-Retaining	12 4 2
75-3860	Fender-LH	2 36 1	76-7000	Ring-Retaining	54 4 2
75-4360	Bracket-Suspension, Seat	14 15 1	76-7000	Ring-Retaining	39 50 2
75-4370	Bracket-Seat	14 10 1	76-7010	Ring-Retaining	12 1 1
75-5350	Pin-Slide, Cylinder	22 27 3	76-7010	Ring-Retaining	54 1 1
75-5740	Box-Control	18 54 1	76-7010	Ring-Retaining	39 55 1
75-5780	Hinge-Cover	2 47 1	76-7020	Spacer	54 2 1
75-5780	Hinge-Cover	18 57 1	76-7110	Plug	49 5 1
75-5810	Box-Tool	2 30 1	76-7110	Plug	51 26 4
75-5890	Hose	22 33 1	76-7120	Seal-Washer	49 6 1
75-6370	Cap-Sensor	22 19 1	76-7120	Seal-Washer	51 27 4
75-6370	Cap-Sensor	24 37 2	76-7140	Plug	49 9 1
75-6490	Lever	8 22 1	76-7160	Asm-Gear Case	50 * 1
75-6510	Bracket-Lever	8 20 1	76-7170	Case-Differential	50 3 1
75-6550	Disc-Friction	8 19 1	76-7180	Pinion-Mate	50 10 2
75-6580	Cable-Pedal	8 7 1	76-7190	Gear-Side	50 9 2
75-6820	Hour Meter	18 44 1	76-7200	Shaft-Pinion	50 4 1
76-1910	Shaft-Pivot	16 12 2	76-7210	Washer-Thrust	50 11 2
76-1920	Bushing-Sleeve	16 9 4	76-7220	Washer-Thrust	50 8 2
76-1930	Knob-Tension Adjustment	16 19 1	76-7230	Washer-Lock	50 5 4
76-1940	Spring-Extension	16 14 2	76-7240	Ring-Gear	50 2 1
76-2940	Bumper-Rubber	16 8 2	76-7250	Shaft-Drive	50 1 1
76-2980	Washer-Thrust	23 45 2	76-7260	Bolt	50 6 8
76-2980	Washer-Thrust	22 66 3	76-7270	Pin-Spring	50 7 1
76-2980	Washer-Thrust	24 84 2	76-7280	Bearing	50 12 2
76-4260	Bushing	52 3 1	76-7290	Shim-0.1 mm	50 13 A/R
76-4910	Stud	64 26 3	76-7300	Shim-0.2 mm	50 * A/R
76-4930	Washer	64 5 3	76-7310	Shim-0.3 mm	50 * A/R
76-4940	Gear-Pump, Injection	64 2 1	76-7320	Sleeve	48 4 1
76-4950	Nut	64 1 1	76-7330	Bearing	48 1 1
76-4990	Bracket	56 15 1	76-7340	Seal-Oil	48 6 1
76-5010	Washer	57 23 3	76-7350	Bushing	48 7 1
76-5010	Washer-Spring	56 2 1	76-7360	O-Ring	48 10 1
76-5010	Washer-Spring	68 7 5	76-7370	Bearing	48 11 1
76-5060	Screw	56 1 1	76-7380	Washer	48 8 1
76-5070	Asm-Oil Pump	68 1 1	76-7390	Nut-Lock	48 9 1
76-5090	Spring-Piston	68 3 1	76-7400	O-Ring	48 2 2
76-5100	Bolt-Shoulder	68 5 1	76-7410	Shim-0.1 mm	48 3 A/R
76-5130	Stud	61 6 6	76-7420	Shim-0.2 mm	48 * A/R
76-5170	Chain-Pump Drive	68 13 1	76-7430	Shim-0.4 mm	48 * A/R
76-5180	Washer-Copper	21 1 4	76-7470	Pipe	49 8 1
76-5190	Fitting-Adjustable	21 2 2	76-7480	Plug-Vent	49 7 1
76-5220	Element-Filter	21 5 1	76-7490	Shaft-Differential	50 14 2
76-5260	Relay-Glow Plug	66 1 1	76-7500	Bearing	50 15 4
76-5260	Relay-Glow Plug	15 28 1	76-7510	Pinion-14T	51 10 2
76-5290	Washer-Spring	66 4 4	76-7510	Pinion-14T	50 17 2
76-5300	Asm-Filter, Fuel	20 22 1	76-7520	Shim-0.1 mm	50 16 A/R
76-5310	Washer-Lock	66 7 1	76-7530	Shim-0.2 mm	50 * A/R
76-5320	Sensor-Water	21 9 1	76-7540	Shim-0.4 mm	50 * A/R
76-5440	Screw	62 17 2	76-7550	Ring-Retaining	50 18 2
76-5500	Screw	71 6 5	76-7560	Case-Gear	51 1 2
76-5520	Holder-Injector	65 5 4	76-7580	O-Ring	50 19 4
76-5530	Gasket-Injector	65 3 4	76-7590	Spacer	50 20 2
76-5540	Plug	65 2 4	76-7600	Bolt-Reamer	50 21 2
76-5570	Washer-Lock	69 2 2	76-7610	Bolt	50 23 6
76-5580	Starter	69 3 1	76-7620	Washer-Lock	50 22 8
76-5590	Sleeve-Spring	69 4 1	76-7630	Holder-25 mm RH	51 * 1
76-5600	Asm-Holder, Injector	65 14 4	76-7640	Bolt	51 5 8
76-6910	Kit-Rotating	54 14 1	76-7640	Bolt	51 28 20
76-6910	Kit-Rotating	12 17 1	76-7650	Shaft-Final Drive	51 2 2
76-6930	Shaft-Drive, Straight	54 3 1	76-7660	Holder-20 mm LH	51 4 1
76-6950	Race-Thrust	12 5 2	76-7670	Bearing	51 3 4
76-6950	Race-Thrust	54 5 2	76-7680	Case-Final Drive	51 8 2
76-6950	Race-Thrust	39 51 1	76-7700	Shim-0.8 mm	52 25 A/R
76-6960	Bearing-Thrust	12 6 1	76-7710	Bolt	52 8 2
76-6960	Bearing-Thrust	54 6 1	76-7720	Nut	52 9 4
76-6960	Bearing-Thrust	39 52 1	76-7730	Bushing	51 7 2
76-6970	Insert-Camplate	54 15 1	76-7740	Seal-Oil	51 6 2
76-6970	Insert-Camplate	12 18 1	76-7750	Pinion-15T	51 11 2
76-6980	O-Ring	54 9 1	76-7760	Shim-1.0 mm	52 * A/R
76-6980	O-Ring	12 10 1	76-7770	Cover	51 9 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7780	Shim-1.2 mm	52 * A/R	84-3420	Decal-No Riders (Japan)	18 55 1
76-7790	Shim-1.4 mm	52 * A/R	84-3500	Decal-Fast/Slow (Japan)	8 23 1
76-7810	Holder-Bearing	51 19 2	84-4300	Decal-Danger (Japan)	72 2 1
76-7820	Shim-1.0 mm	52 5 A/R	85-4470	Potentiometer	18 45 1
76-7830	Shaft-Wheel	51 21 2	85-4480	Knob	17 30 1
76-7840	Gear-Bevel	51 13 2	85-4491	Lamp-Diagnostic	17 26 1
76-7870	Seal-Oil	51 20 2	85-4750	Display-Diagnostic ACE	73 2 1
76-7880	Spacer	51 15 2	85-6910	Decal-EEC 86 DBA	15 16 1
76-7890	Shim-0.15 mm	51 14 A/R	86-2990	Mount-Cable, Throttle	55 20 2
76-7900	Shim-0.2 mm	51 * A/R	86-5390	Kit-Seal	53 * 1
76-7910	Shim-0.4 mm	51 * A/R	86-5910	Tire	46 33 2
76-7920	Ring-Retaining	51 16 2	86-7330	Kit-Seal Repair	25 * 1
76-7930	Ring-Retaining	51 17 2	86-7330	Kit-Seal Repair	26 * 1
76-7950	Bushing	52 4 1	86-7330	Kit-Seal Repair	29 * 1
76-7960	Fitting-Grease	52 21 2	87-5100	Washer-Snubbing	55 2 3
76-7960	Fitting-Grease	51 30 2	87-6270	Socket-Light	18 * 59 4
76-7970	Shim-1.4 mm	52 * A/R	87-6620	Screw-Torx Pan Hd.	5 31 2
76-7980	Shim-1.2 mm	52 * A/R	88-1550	Stop-Axle	47 66 2
76-7990	Shim-.08 mm	52 * A/R	88-1980	Decal-Hydraulic Oil	1 5 1
76-8000	Bolt	52 6 4	88-6980	Cartridge-N.C. Poppet	35 14 1
76-8010	Washer	52 7 2	88-6980	Cartridge-N.O. Poppet	32 17 1
76-8070	Adapter	48 12 1	88-6990	Cartridge-N.C.	32 7 2
76-8350	Stop-Axle, 4WD	46 5 2	88-6990	Cartridge-N.C. Spool	35 1 3
76-8750	Plate-Warning, Fan	45 15 1	88-9190	Solenoid-20 Watt	32 1 7
76-9060	Gauge-Temperature	17 15 1	88-9190	Solenoid-20 Watt	35 3 9
76-9970	Asm-Valve, Solenoid	33 14 2	88-9200	Solenoid-28 Watt	32 10 1
77-2870	Weldment-Hanger	16 18 1	88-9200	Solenoid-28 Watt	35 13 1
77-3300	Stud	67 1 6	92-1180	Asm-Seat	14 5 1
77-3310	Gasket	67 2 2	92-1422	Spacer-Coupler	55 49 3
77-3320	Nut-Hex	67 5 6	92-3071	Solenoid	32 8 1
77-3340	Manifold-Exhaust	67 3 1	92-5720	Controller-Solid State	31 35 2
77-3400	Camshaft	57 5 1	92-5833	Spacer-Ball Joint	46 46 2
77-3410	Key	57 4 1	92-5836	Washer-Axle	47 50 1
77-3420	Gasket	57 3 1	92-5838	Ball Joint	47 62 1
77-3440	Screw	57 1 2	92-5839	Ball Joint	46 45 1
77-3450	Washer	57 2 2	92-5844	Spacer-Ball Joint	46 47 1
77-3470	Screw	68 10 1	92-6315	Cartridge-N.C. Poppet	35 10 1
77-3490	Screw	68 11 1	92-6315	Cartridge-N.C. Poppet	32 18 1
77-3510	Spring	57 14 1	92-6533	Kit-Cushion	14 24 1
77-3520	Cup	57 13 1	92-6534	Shell	14 22 1
77-3600	Plate-Closing	43 47 1	92-7374	Shroud-Fan RH	45 10 1
77-3620	Retainer-Cover	45 25 2	92-7375	Shroud-Fan LH	45 44 1
77-3700	Gasket-Exhaust, Manifold	55 37 1	92-7381	Tube-Water, Return	55 41 1
77-3790	Plug-Drain	59 26 1	92-7382	Cover-Manifold	55 38 1
77-4000	Shim Set	50 * 1	92-7384	Asm-Block, Manifold	34 68 1
77-4010	Shim Set	48 * 1	92-7385	Motor-Planetary	9 37 1
77-4020	Shim Set	50 * 1	92-7386	Motor-Hydraulic	46 20 1
77-4030	Shim Set	51 * 1	92-7388	Support-Radiator	45 45 1
77-4040	Shim Set	52 * 1	92-7396	Mount-Cable	15 3 1
77-4050	Shim Set	52 * 1	92-7414	Asm-Brake, RH	9 48 1
80-4860	Pin-Clevis	16 1 1	92-7415	Asm-Complete	10 * 1
80-8660	Spacer	33 43 2	92-7415	Asm-Drive, Planetary	9 28 2
82-3740	Cooler-Oil	45 21 1	92-7416	Strap-Radiator	45 42 1
82-5050	Screw-HH	37 26 2	92-7417	Asm-Brake, LH	9 27 1
82-5120	Adapter-Pump To Engine	55 47 1	92-7418	Asm-Block, Control	31 13 1
82-6490	Asm-Hose	31 1 1	92-7422	Tank-Fuel	20 16 1
82-6490	Hose	22 31 1	92-7424	Hose-Overflow, Radiator	43 25 1
82-6840	Spacer	23 27 2	92-7424	Hose-Radiator, Overflow	45 6 1
82-8170	Clamp	24 26 4	92-7425	Support-Mount, Engine	55 6 1
82-8170	Clamp	22 48 6	92-7426	Mount-Motor	55 43 1
82-9060	Adjuster W/Handle	16 13 1	92-7429	Mount-Motor, RH	55 14 1
83-6780	Pin-Cylinder	22 49 2	92-7455	Plate-Bulkhead	9 15 1
83-6970	Pin-Cylinder, Short	22 16 1	92-7463	Hose-Radiator, Lower	45 18 1
83-7430	Decal-Danger	72 2 1	92-7463	Hose-Radiator, Lower	55 36 1
84-1710	Piston	27 4 1	92-7465	Hose-Suction	19 22 1
84-1710	Piston	28 5 1	92-7465	Hose-Suction	37 40 1
84-1740	Shaft With Clevis	27 12 1	92-7466	Clutch-Fan	55 31 1
84-1760	Kit-Seal Repair	27 * 1	92-7472	Asm-Tube, Rear	46 3 1
84-1760	Kit-Seal Repair	28 * 1	92-7473	Asm-Tube, Rear	46 4 1
84-2860	Decal-Fuel, Diesel (Japan)	2 34 1	92-7473	Asm-Tube, Rear	9 13 1
84-3420	Decal-No Riders (Japan)	2 35 1	92-7474	Asm-Tube, Front	9 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-7475	Asm-Tube, Traction	9 50 1	92-7562	Asm-Hose	31 2 1
92-7476	Asm-Tube, Traction	9 46 1	92-7562	Asm-Hose	22 53 1
92-7477	Asm-Tube, Motor Drain	9 17 1	92-7564	Asm-Hose	22 42 1
92-7478	Asm-Tube, Motor RH	9 43 1	92-7564	Asm-Hose	31 43 1
92-7478	Tube-Motor, RH	19 30 1	92-7565	Asm-Hose	31 42 1
92-7479	Asm-Tube	31 10 1	92-7565	Asm-Hose	22 51 1
92-7483	Nut-Lug	9 4 16	92-7591	Asm-Tube	31 12 1
92-7484	Asm-Hose	37 12 1	92-7592	Asm-Tube	34 69 1
92-7485	Asm-Hose	9 19 1	92-7598	Asm-Tube, Front Drain	33 45 1
92-7485	Asm-Hose	37 33 1	92-7598	Asm-Tube, Frt. Drain	9 31 1
92-7486	Asm-Hose	9 18 1	92-7601	Asm-Tube, Rear Aux.	33 46 1
92-7487	Asm-Tube	9 41 1	92-7601	Asm-Tube, Rear, Aux.	6 58 1
92-7488	Asm-Hose	9 42 1	92-7602	Asm-Tube, Aux. Return	34 66 1
92-7489	Hose-Return	19 13 1	92-7602	Asm-Tube, Return	5 48 1
92-7489	Hose-Return	37 19 1	92-7604	Pin-Stop	47 53 1
92-7490	Asm-Hose, Filter	37 25 1	92-7606	Bracket-Bulkhead	6 51 1
92-7490	Hose-Filter	19 16 1	92-7608	Bracket-Spring	8 12 1
92-7491	Asm-Hose	37 11 1	92-7609	Shaft-Spring	8 45 1
92-7491	Asm-Hose	31 16 1	92-7610	Retainer-Spring	8 42 1
92-7492	Asm-Hose	37 35 1	92-7622	Asm-Hose, Steering	37 34 1
92-7492	Asm-Hose	34 59 1	92-7622	Hose-Steering	6 49 1
92-7493	Asm-Tube, Filter	45 39 1	92-7623	Bumper	45 36 1
92-7493	Hose-Filter	19 20 1	92-7631	Sealstrip-Screen	45 22 1
92-7494	Asm-Steering Tube, Rear	33 47 1	92-7632	Harness-Wire, RM6700D	24 90 1
92-7494	Asm-Tube Steering Rear	6 50 1	92-7633	Strip-Bumper, Hood	1 16 1
92-7494	Asm-Tube, Rear Steering	13 7 1	92-7635	Asm-Hose	33 2 1
92-7494	Asm-Tube, Steering	46 29 1	92-7636	Asm-Hose	23 17 1
92-7495	Asm-Steering Tube, Rear	33 41 1	92-7637	Asm-Hose	24 1 1
92-7495	Asm-Tube, Rear Steering	13 8 1	92-7637	Asm-Hose	24 14 1
92-7495	Asm-Tube, Steering	46 28 1	92-7638	Asm-Hose	33 5 1
92-7495	Asm-Tube, Steering Rear	5 47 1	92-7638	Asm-Hose	23 51 1
92-7505	Screen	45 24 1	92-7639	Asm-Hose	34 62 1
92-7511	Hood	1 18 1	92-7640	Asm-Hose	34 61 1
92-7516	Bracket-Support, Cooler	45 19 1	92-7640	Asm-Hose	24 87 1
92-7519	Bracket-Block, Manifold	31 26 1	92-7641	Asm-Hose	33 3 1
92-7520	Cable-Throttle	15 4 1	92-7643	Asm-Hose	24 65 4
92-7521	Hose-Fuel	20 21 1	92-7646	Fitting-Hydraulic 45°	47 57 1
92-7521	Hose-Fuel	55 25 1	92-7787	Pulley-Camshaft	57 26 1
92-7522	Hose-Fuel	20 6 1	92-7791	Seal-Valve	63 52 8
92-7524	Decal-RM6700D	1 17 2	92-7792	Guide-Valve (14.29mm)	63 47 8
92-7525	Fitting-Hose	19 24 1	92-7793	Guide-Valve (14.59mm)	63 * 8
92-7526	Fitting-Hydraulic, Suction	37 38 1	92-7794	Valve-Exhaust	63 50 4
92-7527	Strainer-Suction	19 34 1	92-7795	Seat-Exhaust Valve	63 51 4
92-7529	Asm-Cable, Brake RH	8 * 1	92-8001	Sensor-Switch, Reed	14 13 1
92-7530	Asm-Cable, Brake LH	8 30 1	92-8002	Sensor-Switch, Reed	24 16 2
92-7530	Cable-Brake, LH	9 25 1	92-8002	Sensor-Switch, Reed	22 26 1
92-7531	Tube-Control, Pump	8 1 1	92-8020	Adapter-Breather	19 35 3
92-7531	Tube-Rod, Control	37 14 1	92-8753	Magnet-Switch, Reed	14 11 1
92-7534	ASM-Hose	46 31 1	92-8754	Magnet-Switch, Reed	24 19 2
92-7535	Asm-Hose, Oil Cooler	45 29 2	92-8754	Magnet-Switch, Reed	22 21 1
92-7536	Asm-Hose, Rear Motor	46 9 1	93-0096	Decal-ACE	2 31 2
92-7537	Asm-Hose, Rear Motor	46 10 1	93-1262	Decal-Hillside	2 28 1
92-7538	Asm-Hose	46 41 1	93-1263	Decal-Tower	5 23 1
92-7539	Asm-Hose	46 40 1	93-1264	Decal-Switch, Backlap	31 24 1
92-7540	Decal-ROPS	72 3 1	93-1265	Decal-Hot Surface	43 1 1
92-7548	Pin-Cylinder	23 22 2	93-1268	Decal-HOC Selector	17 25 1
92-7549	Decal-Diagnostic ACE	73 1 1	93-2631	Cylinder-Lift	24 39 2
92-7550	Fitting-Tee, Bulkhead	9 7 2	93-2650	Cylinder-Hydraulic No.1	22 54 1
92-7551	Cap-Fitting	19 25 1	93-2699	Pin	24 33 4
92-7552	Bracket-Bulkhead	47 60 1	93-2700	Roller-Plastic	24 40 4
92-7553	Asm-Tube, Rear Drain	13 6 1	93-2704	Link-Lift	24 11 4
92-7553	Asm-Tube, Rear Drain	46 27 1	93-3102	Cap-Fuel, Diesel	20 10 1
92-7553	Asm-Tube, Rear Drain	33 42 1	93-3163	Spring	16 28 1
92-7555	Asm-Hose	3 7 4	93-3164	Cap	16 27 2
92-7556	Asm-Hose	3 1 2	93-3165	Bracket	16 29 1
92-7557	Asm-Front Cooler Tube	34 58 1	93-4206	Asm-Tube, Drain	13 5 1
92-7557	Asm-Tube	31 19 1	93-4207	Fitting-Tee	43 18 1
92-7558	Asm-Rear Cooler Tube	34 57 1	93-4208	Strip-Seal, Screen	45 27 1
92-7558	Asm-Tube, Cooler	45 41 1	93-4213	Asm-Speedometer	5 22 1
92-7559	Asm-Hose	3 8 2	93-4215	Hose-Radiator, Upper Rear	45 5 1
92-7560	Asm-Hose	3 2 1	93-4215	Hose-Radiator, Upper Rear	55 22 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-4215	Hose-Radiator, Upper Rear	43 29 1	93-7584	Hose-Intake	43 40 1
93-4216	Asm-Tube	3 14 1	93-7587	Bracket-Fuse Block	17 42 1
93-4216	Asm-Tube	31 41 1	93-7589	Hose-Overflow	43 28 1
93-4217	Asm-Tube	3 26 1	93-7591	Hose-Return	43 24 1
93-4217	Asm-Tube	31 40 1	93-7592	Tread-Footrest	2 42 2
93-4219	Asm-Tube, #1 Bulkhead	3 17 1	93-7594	Spacer-Tubular	55 21 1
93-4222	Asm-Tube, Drain Return	3 16 1	93-7595	Asm-Box, Battery	43 7 1
93-4222	Asm-Tube, Drain Return	31 37 1	93-7597	Fitting-SAE	31 7 1
93-4223	Asm-Tube, Front Drain	3 15 1	93-7598	Lever-Throttle	15 10 1
93-4233	Asm-Engine	55 16 1	93-7773	Bolt	48 5 4
93-5835	Screw-Purge	64 28 1	93-7775	Bearing	51 18 2
93-5986	Asm-Cover	44 4 1	93-7778	Housing-Axle A	49 1 1
93-6028	Plate-Logo, Toro	45 26 1	93-7779	Housing-Axle B	49 3 1
93-6668	Decal-Charging (Europe)	43 51 1	93-7781	Washer	49 10 8
93-6680	Decal-Fuel, Diesel	2 34 1	93-7782	Screw-HHF	49 4 8
93-6681	Decal-Warning, (Europe)	45 57 1	93-7787	Bushing-Flange	49 2 2
93-6686	Decal-Hydraulic Oil	1 5 1	93-7840	Decal-Cap (Europe)	43 53 1
93-6687	Decal-No Step	22 24 2	93-7950	Asm-Tube	33 28 1
93-6687	Decal-No Step	24 28 2	93-7951	Asm-Tube	33 18 1
93-6689	Decal-No Riders	2 35 1	93-7952	Asm-Tube	33 25 1
93-6689	Decal-No Riders	18 55 1	93-7954	Asm-Tube	33 30 1
93-6693	Decal-Plate, Floor	22 55 1	93-7955	Asm-Tube	33 10 1
93-6696	Decal-Danger	23 2 2	93-7956	Asm-Tube	33 11 1
93-6699	Decal-Fast/Slow	8 23 1	93-7957	Asm-Tube	33 9 1
93-7053	Asm-Tube	33 24 1	93-7958	Asm-Tube	33 23 1
93-7247	Washer-Thrust	46 6 1	93-7959	Asm-Tube	33 13 1
93-7276	Decal-Danger (Europe)	43 52 1	93-7960	Spacer	24 25 4
93-7450	Spindle	10 1 1	93-7960	Spacer	22 47 6
93-7451	Cone-Bearing	10 3 1	93-7961	Clamp-Drain, Case	24 24 2
93-7452	Cup-Bearing	10 4 1	93-7961	Clamp-Drain, Case	22 46 3
93-7453	Housing	10 6 1	93-7966	Shaft-Splined, Brake	9 30 2
93-7454	Screw-HH	10 25 18	93-7968	Pad-Foam, Battery	43 11 1
93-7455	Stud-Wheel	10 5 8	93-7970	Form-Wire, Hose Mount	31 28 1
93-7456	Gear-Ring	10 18 1	93-7972	Ring-Retaining	9 29 4
93-7457	Spacer-Input	10 16 1	93-7974	Plate-Battery, Box	43 5 1
93-7458	Plate-Cover	10 15 1	93-7974	Plate-Box, Battery	20 1 1
93-7459	Ring-Retaining, External	10 19 1	93-7976	Ring-Retaining	11 9 1
93-7460	Washer-Thrust	10 17 1	93-7977	Seal	11 2 1
93-7461	Plug-Pipe	10 13 2	93-7978	Rod-Pull	11 3 1
93-7462	Ring-Retaining, Internal	10 14 1	93-7979	Pin-Cotter, Hair	11 6 2
93-7463	Gear-Sun	10 20 1	93-7980	Link	11 5 2
93-7464	Gear-Sun	10 21 1	93-7981	Disc-Rotating	11 8 3
93-7465	Washer-Thrust	10 22 1	93-7982	Actuator	11 11 1
93-7466	Pin-Dowel	10 24 2	93-7983	Pin-Clevis	11 4 2
93-7467	Ring-Retaining, External	10 10 1	93-7984	Gasket	11 10 1
93-7468	Washer-Thrust	10 9 1	93-7985	Ball	11 13 3
93-7469	Cone-Bearing	10 8 1	93-7986	Disc-Stationary	11 7 4
93-7470	Cup-Bearing	10 7 1	93-7987	Spring-Extension	11 12 3
93-7471	Shaft-Input	10 23 1	93-7989	Shaft W/Clevis	28 7 1
93-7472	Asm-Carrier, Secondary	10 11 1	93-7989	Shaft W/Clevis	29 7 1
93-7473	Asm-Carrier, Primary	10 12 1	93-7990	Head	25 10 1
93-7474	Kit-Seal	10 2 1	93-7991	Collar	25 13 1
93-7476	Motor-Hydraulic W/Sensor	9 47 1	93-7991	Collar	26 13 1
93-7480	Bulb-LED	5 29 1	93-7991	Collar	29 13 1
93-7483	Light-Warning Bank	17 14 1	93-7992	Asm-Barrel	29 2 1
93-7484	Light-Warning Bank	17 13 1	93-7994	Collar	27 13 1
93-7485	Asm-Filter, Air	43 41 1	93-7994	Collar	28 13 1
93-7487	Switch-Toggle	31 31 1	93-7995	Asm-Barrel	28 2 1
93-7488	Tank-Hydraulic	19 1 1	93-7996	Cover-Tower	1 2 1
93-7489	Valve-Control, Flow	31 6 1	93-7998	Plate-Instrument	5 24 1
93-7491	Cartridge-N.O. Poppet	35 19 1	93-8050	Decal-Warning (Europe)	72 2 1
93-7491	Cartridge-Pilot Check	32 2 1	93-8053	Decal-ECU Label (Europe)	31 36 1
93-7492	Cartridge-Relief 2300 psi	32 4 1	93-8073	Decal-Blank (Europe)	72 3 1
93-7494	Cartridge-N.O. Poppet	35 4 2	93-8497	Gauge-Fuel	17 9 1
93-7494	Cartridge-N.O. Poppet	32 13 2	93-8742	Pad-Brake	8 29 2
93-7495	Cartridge-3W2P Pull	35 20 1	93-8744	Rivet-Pop	18 46 3
93-7498	Plug-Plastic	19 6 1	93-8744	Rivet-Pop	2 46 3
93-7499	Gasket-Flange	19 2 1	93-9151	Fitting-Hydraulic 90°	3 21 3
93-7553	Seal-Hood	45 13 1	93-9152	Kit-Flange	4 * 1
93-7582	Hose	1 20 1	93-9154	Kit-Valve Block	4 * 1
93-7584	Hose-Intake	45 11 1	93-9155	Velcro	1 7 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-9157	Velcro	72 4 4	94-2944	Decal-Service (Spanish)	2 27 1
93-9159	Strap-Cover	72 9 2	94-2945	Decal-Service (Swedish)	2 27 1
93-9160	Cover-ROPS	72 6 1	94-3000	Asm-Backplate	54 8 1
93-9162	Filter-Primary	44 3 1	94-3001	Housing	54 16 1
93-9163	Filter-Safety	44 6 1	94-3002	Screw-HH	54 7 6
93-9164	Indicator	44 1 1	94-3002	Screw-HH	12 8 6
93-9164	Indicator-Service	43 37 1	94-3003	Plate-Valve	54 13 1
93-9176	Dipstick-Oil	59 3 1	94-3003	Plate-Valve	12 16 1
93-9176	Dipstick-Peugeot	55 51 1	94-3004	Shaft-Drive, Splined	12 7 1
93-9178	Muffler	43 35 1	94-3005	Asm-Backplate	12 9 1
93-9180	Cover-Box, Tool	1 26 1	94-3006	Housing	12 19 1
93-9196	Joystick-6 Position	17 3 1	94-3007	Washer	12 3 1
93-9425	Decal-Danger	2 55 1	94-3007	Washer	39 53 1
93-9783	O-Ring	3 28 10	94-3008	Seal-Shaft	12 2 1
94-1401	Cover-Box, Control	17 39 1	94-3008	Seal-Shaft	39 54 1
94-1403	Adapter-Hydraulic	34 64 2	94-3009	Asm-Plug	12 11 1
94-1408	Wireform-Overflow	43 19 1	94-3010	Sensor-Speed Pickup	12 11 1
94-1410	Holder-Can, Beverage	2 53 1	94-3011	Plug	42 7 1
94-1411	Cable-Battery, Negative	43 10 1	94-3012	Screw-Cap	42 10 8
94-1414	Valve-Vacuator	44 5 1	94-3013	Plug	42 23 1
94-1416	Adapter-Indicator	43 36 1	94-3014	Valve-Relief	42 26 1
94-1416	Asm-Adaptor	44 7 1	94-3015	Kit-Seal	42 * 1
94-1418	Hose-Radiator, Upper	55 12 1	94-3016	Asm-Backplate	39 8 1
94-1421	Coupling-Center, Spring	55 15 1	94-3017	Adaptor-Charge Relief	39 12 1
94-1432	Asm-Hose	33 36 4	94-3018	Asm-Housing	39 58 1
94-1433	Asm-Hose	33 35 2	94-3019	Control-Servo, Manual	39 65 1
94-1443	Fitting-Bulkhead, 90° RH	24 54 1	94-3020	Shaft-Drive	39 56 1
94-1444	Fitting-Bulkhead, Straight	24 55 2	94-3021	Asm-Kit, Rotating	39 35 1
94-1445	Strap-Battery	43 12 1	94-3022	Plate-Valve	39 1 1
94-1446	Tube-Drain	19 26 1	94-3023	Coupler	39 10 1
94-1447	Asm-Tube, Steering Ret.	31 39 1	94-3025	Asm-Piston, Servo	39 41 1
94-1447	Tube-Steering, Return	19 39 1	94-3026	Asm-Camplate	39 36 1
94-1447	Tube-Steering, Return	5 43 1	94-3027	Washer-Seal	39 48 1
94-1449	Fitting-Valve, Restrictor	24 47 2	94-3028	Screw	39 14 2
94-2600	Boot	17 4 1	94-3029	Screw	39 21 2
94-2601	Microswitch-Interlock	17 2 2	94-3030	Washer	39 47 1
94-2602	Actuator-Joystick	17 1 2	94-3031	Arm-Control	39 29 1
94-2603	Piston	30 4 1	94-3032	Follower-Piston	39 33 1
94-2604	Head	30 10 1	94-3033	Plate-Cover	39 59 1
94-2605	Collar	30 13 1	94-3034	Plate-Cover	39 43 1
94-2606	Shaft	30 12 1	94-3035	Ring-Lock	39 9 1
94-2608	Kit-Seal Repair	30 * 1	94-3036	Ring-Quad	39 3 1
94-2613	Sleeve-Switch, Red	17 18 1	94-3037	Ring-Retaining	39 4 1
94-2617	Cover-Pump	1 21 1	94-3038	Plug-Dump Valve	39 5 1
94-2620	Head-Filter	19 18 1	94-3039	Kit-Seal	39 * 1
94-2621	Element	19 21 1	94-3040	Orifice-Valve, Control	39 31 3
94-2624	Hose-Manifold	55 29 1	94-3043	Switch	40 15 1
94-2624	Hose-Manifold	43 39 1	94-3044	Kit-Seal	40 * 1
94-2626	Plug-Orifice	35 15 1	94-3049	Fender-RH	1 3 1
94-2627	Cartridge-W/2P	35 11 1	94-3050	Plate-Spring	9 51 2
94-2628	Adapter-Hydraulic	33 29 1	94-3052	Weight-Wheel (Europe)	47 68 2
94-2629	Asm-Tube, Drain	33 27 1	94-3059	Tube-Steering, RH	5 6 1
94-2630	Hose-Return	43 17 1	94-3060	Tube-Steering, Front LH	5 13 1
94-2636	Fitting-Hydraulic 90°	37 20 1	94-3061	Tube-Steering, Front, In	5 7 1
94-2637	Fitting-Hydraulic, Straight	37 18 1	94-3062	Tube-Steering, Front, Out	5 14 1
94-2638	Nut-Push On	45 23 4	94-3063	Extension-Valve (Europe)	47 71 2
94-2643	Frame-ROPS	72 7 1	94-3066	Asm-Pump, Gear	37 4 1
94-2644	Shaft With Clevis	25 12 1	94-3071	Asm-Tube, Front, Aux.	6 56 1
94-2800	Cap-Radiator	43 22 1	94-3077	Plug-Orifice	32 20 1
94-2801	Grommet-Rubber	43 44 2	94-3088	Spring-Brake	9 52 2
94-2803	Bearing	51 12 2	94-3090	Harness-Wire, Main	18 52 1
94-2806	Adapter-Bolt, Wheel	47 67 6	94-3091	Decal-Fuse (Japan)	18 56 1
94-2812	Grommet	43 46 2	94-3098	Gear-Driven	46 25 1
94-2814	Kit-Exhaust Coupler	43 50 1	94-3099	Gear-Driver	46 23 1
94-2815	Sleeve-Exhaust Flange	43 49 1	94-3100	Asm-Short Block	59 36 1
94-2834	Bracket-Clamp	13 11 1	94-3101	Gasket Set	59 * 1
94-2844	Decal-Diagnostic ACE	73 Y1 1	94-3102	Pin	59 14 2
94-2849	Muffler-Spark Arrestor	43 * 1	94-3103	Plug-Threaded	59 44 1
94-2919	Decal-Rear Manifold (Japan)	15 19 1	94-3104	Plug-Threaded	59 43 2
94-2941	Decal-Service (Japan)	2 27 1	94-3105	Plug-Drain	59 38 1
94-2943	Decal-Service (Portuguese)	2 27 1	94-3106	Gasket	59 42 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3107	Gasket	59 24 2	94-3172	Washer	57 19 3
94-3108	Plug-27.5 mm Dia.	59 * 8	94-3173	Screw	57 22 3
94-3108	Plug-27.5 mm Dia.	62 * 2	94-3174	Washer	62 27 8
94-3109	Plug-28.5 mm Dia.	59 * 9	94-3176	Gear-Oil Pump	68 2 1
94-3109	Plug-28.5 mm Dia.	62 * 2	94-3177	Plug	68 12 2
94-3110	Stud	59 45 1	94-3178	Strainer	68 9 1
94-3111	Pin-Groove	59 22 2	94-3179	Washer-Spring	68 4 3
94-3112	Screw-Washer Hd.	59 17 2	94-3180	Switch-Pressure	59 32 1
94-3113	Asm-Cylinder Head	61 5 1	94-3181	Oil Filler	59 1 1
94-3115	Nut-Lock	61 8 6	94-3182	Plug	59 2 1
94-3116	Gasket	61 3 1	94-3183	Gasket	59 39 1
94-3117	Plate	61 2 1	94-3184	Union	59 4 1
94-3118	Plug	62 32 1	94-3186	O-Ring	59 40 1
94-3119	Kit-Gasket	63 * 1	94-3190	PCV Valve	59 46 1
94-3120	Bracket	63 54 1	94-3191	Union	59 48 1
94-3121	Plug	63 44 1	94-3192	Union	59 47 1
94-3122	Gasket	63 43 1	94-3195	Gasket-Pump, Water	71 4 1
94-3123	Screw-HH	61 1 2	94-3196	Inlet-Water	71 7 1
94-3124	Bolt-Valve Cover	62 22 3	94-3196	Inlet-Water	62 31 1
94-3124	Screw-HH	68 8 2	94-3197	O-Ring	71 3 1
94-3125	Washer	62 21 3	94-3197	O-Ring	62 30 1
94-3125	Washer-Flat	70 3 1	94-3198	Screw	71 8 2
94-3126	Protector-Lower	70 5 1	94-3198	Screw	62 35 2
94-3127	Case-Timing, Left	70 7 1	94-3199	Pipe-By-Pass	63 39 1
94-3128	Case-Timing, Right	70 9 1	94-3200	Hose-By-Pass	62 37 1
94-3129	Plug	70 4 1	94-3206	Gasket	58 9 1
94-3130	Screw	70 2 1	94-3207	Ring	58 4 1
94-3131	Screw	58 1 3	94-3208	Stub-Outlet	58 2 1
94-3131	Screw	70 10 1	94-3209	Thermostat	58 11 1
94-3132	Screw	70 1 2	94-3210	Gasket	58 10 1
94-3133	Nut W/Washer	70 6 1	94-3211	Temp Sending Unit	58 6 1
94-3134	Nut	70 8 1	94-3212	Plug	58 7 2
94-3135	Bracket-Lifting	62 15 1	94-3213	Screw	58 8 1
94-3136	Bracket-Lifting	62 23 1	94-3214	Screw	58 5 1
94-3137	Bracket-Lifting	62 25 1	94-3215	Manifold-Intake	67 6 1
94-3138	Screw	62 24 1	94-3216	Screw	67 8 5
94-3139	Screw	62 26 1	94-3217	Screw	67 9 4
94-3140	Bearing Set (.30mm OS)	60 * 2	94-3218	Screw	67 * 1
94-3141	Thrust Bearing Set (Std.)	60 13 2	94-3219	Pump-Injection	64 19 1
94-3142	Thrust Bearing Set	60 * 2	94-3220	Bracket	64 3 1
94-3143	Thrust Bearing Set	60 * 2	94-3221	Screw	64 11 1
94-3144	Pulley	60 3 1	94-3222	Key	64 20 1
94-3145	Screw-HH	60 1 1	94-3223	Screw	64 25 1
94-3146	Washer	60 2 1	94-3224	Washer-Flat	64 9 2
94-3147	Seal	60 15 1	94-3225	Screw	64 4 2
94-3148	Seal-Shaft	60 11 1	94-3226	Gasket-Injector	65 4 4
94-3149	Gear-Flywheel	60 17 1	94-3227	Spacer	65 8 4
94-3150	Screw-HH	60 7 4	94-3228	Spring	65 7 4
94-3151	Washer	60 8 6	94-3229	Union	65 11 3
94-3152	Screw-HH	60 33 2	94-3230	Hose	65 1 1
94-3155	Bearing-Connecting Rod	60 * 4	94-3231	Bracket	65 13 2
94-3156	Bolt-Connecting Rod	60 28 8	94-3232	Washer-0.79 mm	65 6 4
94-3157	Piston Set-Std.	60 29 1	94-3233	Washer-0.82 mm	65 * 4
94-3158	Piston Ring Set Std.	60 23 4	94-3234	Washer-0.85 mm	65 * 4
94-3159	Asm-Roller	57 11 1	94-3235	Washer-0.88 mm	65 * 4
94-3160	Asm-Roller	57 15 1	94-3236	Washer-0.91 mm	65 * 4
94-3161	Screw	57 16 2	94-3237	Washer-0.94 mm	65 * 4
94-3161	Screw	64 24 1	94-3238	Washer-0.97 mm	65 * 4
94-3162	Stud	57 9 1	94-3239	Washer-1.00 mm	65 * 4
94-3163	Screw	57 6 1	94-3240	Washer-1.03 mm	65 * 4
94-3164	Washer-Spring	67 7 7	94-3241	Washer-1.06 mm	65 * 4
94-3164	Washer-Spring	57 10 4	94-3242	Washer-1.30 mm	65 6 4
94-3164	Washer-Spring	64 10 6	94-3243	Washer-1.33 mm	65 * 4
94-3165	Nut	64 6 4	94-3244	Washer-1.36 mm	65 * 4
94-3165	Nut-Lock	57 12 1	94-3245	Washer-1.39 mm	65 * 4
94-3166	Washer-Flat	57 7 1	94-3246	Washer-1.42 mm	65 * 4
94-3167	Bracket-Fan	57 24 1	94-3247	Washer-1.45 mm	65 * 4
94-3168	Pulley-Fan	57 21 1	94-3248	Washer-1.48 mm	65 * 4
94-3169	Screw	57 25 1	94-3249	Tube-Outlet	64 22 1
94-3170	Screw	57 17 1	94-3250	Screw-Connection	64 23 1
94-3171	Screw	57 20 2	94-3251	Nut	64 15 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3251	Nut-Lock	66 8 1	94-8105	Clamp-Tube	45 54 2
94-3252	Alternator	56 12 1	94-8108	Support-Filter, Air	43 42 1
94-3253	Bracket	56 7 1	94-8115	Pin-Axle, Pivot	47 55 1
94-3254	Screw	56 6 1	94-8132	Gasket-Head (1.48 mm)	63 53 1
94-3255	Slide	56 4 1	94-8133	Gasket-Head (1.52 mm)	63 * 1
94-3256	Belt	56 5 1	94-8134	Gasket-Head (1.58 mm)	63 * 1
94-3257	Washer-Spring	56 13 1	94-8135	Gasket-Head (1.62 mm)	63 * 1
94-3258	Screw	56 14 1	94-8140	Plug-Orifice	32 21 1
94-3259	Screw	56 9 1	94-8141	Cylinder-Hydraulic	46 44 1
94-3260	Washer-Flat	56 3 1	94-8146	Strip-Foam, Seat	15 34 1
94-3261	Nut	56 11 1	94-8147	Nozzle-Injector	65 9 4
94-3262	Nut	56 10 1	94-8166	O-Ring	19 7 1
94-3264	Plug-Glow	66 3 4	94-8946	Washer	22 13 3
94-3265	Cable-Glow Plug	66 2 4	94-8946	Washer-PM	23 34 2
94-3266	Nut-Hex.	66 5 4	94-8946	Washer-PM	24 72 2
94-3267	Nut-Lock	66 6 1	94-8947	Bushing-Flange	22 6 12
94-3274	O-Ring	64 18 1	94-8947	Bushing-Flange	23 6 8
94-3275	Solenoid-Starter	69 * 1	94-8947	Bushing-Flange	24 6 8
94-3354	Decal-Diagnostic ACE	73 1 1	94-9951	Asm-Column, Steering	5 17 1
94-3355	Decal-Diagnostic ACE	73 1 1	94-9952	Nut-Jam	5 21 1
94-3356	Decal-Diagnostic ACE	73 1 1	94-9953	Frame-Front	2 38 1
94-3357	Decal-Diagnostic ACE	73 1 1	94-9955	Asm-Barrel	53 1 1
94-3358	Decal-Diagnostic ACE	73 1 1	94-9956	Asm-Piston Rod	53 6 1
94-3359	Decal-Diagnostic ACE	73 1 1	94-9957	Piston	53 3 1
94-3361	Decal-Diagnostic ACE	73 1 1	94-9958	Gland-Cylinder	53 8 1
94-3362	Decal-Diagnostic ACE	73 1 1	94-9965	Asm-Head, Cylinder	53 * 1
94-3363	Decal-Diagnostic ACE	73 1 1	94-9967	Circuit Breaker-50 Amp	55 * 1
94-3364	Decal-Diagnostic ACE	73 1 1	94-9968	Circuit Breaker-100 Amp	55 * 1
94-4088	Screw	7 9 7	94-9969	Screw-Connection	64 27 1
94-4089	Cap-End	7 10 1	94-9974	Ring-Retaining	23 11 2
94-4090	Gerotor	7 11 1	94-9974	Ring-Retaining	22 23 6
94-4091	Spacer	7 12 1	94-9984	Sensor-Water Level	43 23 1
94-4092	Plate-Wear	7 14 1	94-9994	Gasket-Camshaft	57 27 1
94-4093	Drive	7 13 1	94-9998	Washer-Thrust	22 22 6
94-4094	Pin	7 6 1	94-9999	Valve-Relief	39 7 2
94-4095	Kit-Spring, Centering	7 3 1	95-1821	Spring-Brake, Park	5 39 1
94-4096	Kit-Bearing	7 8 1	95-3459	Cartridge-N.O.	32 9 1
94-4097	Asm-Plug	7 15 1	95-3459	Cartridge-No Flow	35 12 1
94-4098	Ring-Retaining	7 5 1	95-3464	Rim	9 5 2
94-4099	Kit-Seal	7 1 1	95-3465	Tire	9 1 2
94-4100	Ball	7 16 1	95-3477	Decal-Clip (Japan)	15 17 1
94-4572	Decal-Hillside (Japan)	2 28 1	95-3484	Screw-HH	60 19 8
94-4573	Decal-Tower (Japan)	5 23 1	95-3485	Sprocket-Oil Pump	60 5 1
94-4578	Decal-Hot Surface (Japan)	43 1 1	95-7151	Tube-Convoluted	8 49 1
94-4579	Decal-Danger (Japan)	2 55 1	95-7158	Pin-Pivot	23 14 2
94-4580	Decal-Switch, Backlap	31 24 1	95-7158	Pin-Pivot	22 28 3
94-4582	Decal-HOC Selector	17 25 1	98-1459	Decal-Urethane, Toro	6 59 1
94-4584	Decal-Warning (Japan)	24 28 2	98-1468	Cover	5 20 1
94-4584	Decal-Warning, Japan	22 24 2	98-1471	Wheel-Steering	5 19 1
94-4588	Decal-Diagnostic ACE	73 1 1	98-1805	Box-Degassing	43 21 1
94-4589	Decal-Diagnostic ACE	73 1 1	98-1852	Asm-Gauge Bar	74 3 1
94-4590	Decal-Diagnostic ACE	73 1 1	98-1880	Knuckle-Pivot	23 1 2
94-4591	Decal-Diagnostic ACE	73 1 1	98-1880	Knuckle-Pivot	22 3 3
94-4592	Decal-Diagnostic ACE	73 1 1	98-2350	Plate-Seat	15 18 1
94-4593	Decal-Diagnostic ACE	73 1 1	98-2352	Frame-Seat	15 5 1
94-4594	Decal-Diagnostic ACE	73 1 1	98-2353	Bracket-Latch, Seat	15 8 2
94-4595	Decal-Diagnostic ACE	73 1 1	98-2354	Latch-Seat	15 22 1
94-4596	Decal-Diagnostic ACE	73 1 1	98-2426	Asm-Support, Arm	24 50 1
94-4597	Decal-Diagnostic ACE	73 1 1	98-2427	Asm-Support, Arm	24 49 1
94-4598	Decal-Diagnostic ACE	73 1 1	98-2444	Arm-Drag Link	52 1 1
94-5438	Seal-Solenoid	35 2 20	98-2446	Arm-Tie Rod	52 2 1
94-5438	Seal-Solenoid	32 19 16	98-2447	Axle-4WD	46 32 1
94-6343	Decal-Wire Ident. #1	18 * 1	98-3728	Decal-Service	1 27 1
94-6344	Decal-Wire Ident. #2	18 * 1	98-3730	Pump-Piston	37 24 1
94-6349	Decal-Fuse	18 56 1	98-5398	Asm-Latch, Hood	2 63 1
94-6710	Fuse-2A	17 40 1	98-7353	Head	26 10 1
94-8000	Nut-Lock	46 13 1	98-7353	Head	29 11 1
94-8025	O-Ring	21 3 1	98-7354	Head	27 10 1
94-8026	Asm-Vent	21 12 1	98-7354	Head	28 11 1
94-8027	O-Ring	21 10 1	98-7974	Washer-Thrust	23 41 2
94-8028	O-Ring	21 11 1	98-7974	Washer-Thrust	22 62 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
98-7974	Washer-Thrust	24 80 2	218-447	Nut-Hex	17 34 1
98-7976	Decal	74 2 1	218-498	Nut-Hex.	17 17 6
98-7993	Screw-Flange Head	23 42 2	218-533	Lens-Red	5 28 1
98-7993	Screw-Flange Head	22 63 3	218-535	Nut-Lock	5 34 1
98-7993	Screw-HFH	24 81 2	218-536	Washer-Lock	5 25 1
98-8069	Cylinder-Hydraulic No. 5	22 41 1	218-574	Fuse-7.5A	17 * 1
98-8108	Decal-Rear Manifold Block	15 19 1	218-578	Fuse-10A	17 * 4
98-8110	Decal-Instructions, Clip	15 17 1	218-581	Fuse-15A	17 * 1
98-8135	Decal-Service (Danish)	1 27 1	218-589	Washer-Lock	17 16 3
98-8136	Decal-Service (Dutch)	1 27 1	218-591	Asm-Coil	36 6 1
98-8137	Decal-Service (Finnish)	1 27 1	218-592	Nut-Coil	36 7 1
98-8138	Decal-Service (French)	1 27 1	218-594	Fuse-20A	17 * 1
98-8139	Decal-Service (German)	1 27 1	219-17	Bulb	18 *60 4
98-8140	Decal-Service (Italian)	1 27 1	232-24	Stem-Valve	9 2 2
98-8141	Decal-Service (Norwegian)	1 27 1	232-27	Stem-Valve	46 35 2
98-8801	Decal-Diagnostic ACE	73 1 1	233-17	Knob	5 33 1
98-8806	Valve-Solenoid	64 17 1	233-42	Knob	15 11 1
98-8811	Cylinder-Hydraulic No. 4	22 29 1	233-42	Knob	8 21 1
98-8812	Cylinder-Hyd. No. 3	23 25 1	237-7	O-Ring	17 27 4
98-8813	Cylinder-Hyd. No. 2	23 15 1	237-21	O-Ring	33 1 4
98-8814	Frame-Rear	1 22 1	237-21	O-Ring	31 3 5
98-8821	Link-Rear	24 35 2	237-21	O-Ring	3 22 5
98-8823	Link-Welded	24 13 2	237-21	O-Ring	23 50 4
98-8826	Pin-Pivot	24 70 2	237-21	O-Ring	22 71 6
98-8838	Tie Rod-4WD	52 * 1	237-21	O-Ring	24 88 14
98-8841	Asm-Bar & Clamp	52 22 1	237-22	O-Ring	33 6 10
98-9321	Ring-Key	2 65 1	237-22	O-Ring	37 7 1
98-9965	Bushing-Sleeve	60 24 4	237-22	O-Ring	5 10 10
98-9970	Box-Outlet	58 3 1	237-22	O-Ring	3 20 3
98-9971	Hose-By-Pass	63 40 1	237-22	O-Ring	9 32 1
98-9972	Cover-Pump, Water	71 5 1	237-22	O-Ring	19 38 1
98-9973	Ring-Retaining	46 43 2	237-22	O-Ring	31 38 1
98-9976	Bumper	22 68 6	237-22	O-Ring	47 64 6
98-9997	Kit-Seal	4 * 1	237-30	O-Ring	3 6 18
98-9999	Motor-Hydraulic	3 3 5	237-30	O-Ring	31 9 4
99-2560	Pin	23 29 2	237-30	O-Ring	37 10 2
99-2561	Asm-Arm, Lift No. 1	22 11 1	237-30	O-Ring	33 19 9
99-2562	Lift Arm-#2	23 33 1	237-30	O-Ring	19 31 2
99-2563	Lift Arm-#3	23 32 1	237-30	O-Ring	9 44 3
99-2564	Arm-Lift No. 4	22 25 1	237-42	O-Ring	37 5 1
99-2565	Arm-Lift No. 5	22 43 1	237-42	O-Ring	31 8 1
99-2566	Asm-Arm, Lift No. 6	24 29 1	237-42	O-Ring	5 12 4
99-2567	Asm-Arm, Lift No. 7	24 30 1	237-42	O-Ring	32 15 5
99-2580	Cover-Tank	19 3 1	237-42	O-Ring	35 17 5
99-5605	Bumper	23 46 4	237-42	O-Ring	19 36 1
99-5605	Bumper	24 85 4	237-42	O-Ring	46 38 2
99-5608	Spring-Torsion, RH	23 35 2	237-42	O-Ring	34 65 2
99-5609	Spring-Torsion, LH	23 36 2	237-58	O-Ring	46 7 6
99-5610	Pin	22 2 3	237-58	O-Ring	19 12 1
99-5610	Pin	23 3 2	237-58	O-Ring	37 17 3
99-5610	Pin	24 3 2	237-58	O-Ring	9 21 4
99-5613	Asm-Hose	3 18 4	237-58	O-Ring	34 56 2
99-5613	Asm-Hose	33 40 4	237-65	O-Ring	19 15 2
99-5614	Asm-Hose	3 19 2	237-65	O-Ring	31 20 1
99-5614	Asm-Hose	33 37 2	237-65	O-Ring	37 27 1
99-5615	Asm-Frame, Carrier	22 38 1	237-65	O-Ring	45 32 4
99-5617	Sleeve-Protector	3 33 2	237-78	O-Ring	37 3 4
99-8352	Switch	17 19 2	237-78	O-Ring	31 5 8
99-8959	Asm-Valve, Steering	5 5 1	237-78	O-Ring	32 6 10
99-8963	Harness-Wire, Main	5 8 1	237-78	O-Ring	35 8 5
99-8963	Harness-Wire, Main	9 14 1	237-78	O-Ring	3 24 5
99-8963	Harness-Wire, Main	55 18 1	237-78	O-Ring	23 49 4
99-8963	Harness-Wire, Main	31 30 1	237-78	O-Ring	33 50 5
99-8963	Harness-Wire, Main	15 32 1	237-78	O-Ring	47 51 2
99-8963	Harness-Wire, Main	33 39 1	237-78	O-Ring	22 72 6
99-8963	Harness-Wire, RM6700D	18 52 1	237-78	O-Ring	24 89 4
99-8964	Decal-Console	17 38 1	237-79	O-Ring	3 4 10
99-8969	Decal-Console (Japan)	17 38 1	237-79	O-Ring	33 15 9
99-8970	Key-Latch, Hood	2 64 1	237-79	O-Ring	31 18 4
217-125	Wheel	46 34 2	237-79	O-Ring	19 33 1
218-446	Washer-Lock	17 35 1	237-79	O-Ring	9 34 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
237-80	O-Ring	36	2	2	302-5	Fitting-Grease	47	54	1
237-80	O-Ring	37	8	3	302-11	Fitting-Grease	23	48	2
237-80	O-Ring	34	60	1	302-33	Fitting-Grease 90°	30	1	1
237-81	O-Ring	19	10	3	302-33	Fitting-Grease 90°	47	63	1
237-81	O-Ring	46	19	2	302-55	Fitting-Grease	52	17	2
237-81	O-Ring	37	21	1	302-60	Fitting-Grease	8	38	1
237-81	O-Ring	31	22	1	302-60	Fitting-Grease 90°	46	42	1
237-81	O-Ring	9	23	4	302-60	Fitting-Grease 90°	22	70	1
237-81	O-Ring	33	54	1	304-46	Fitting-Drain	20	12	1
237-99	O-Ring	37	13	1	304-46	Nut-Drain Cock	45	17	1
237-101	O-Ring	37	41	1	321-36	Screw-HH	31	33	3
237-146	O-Ring	37	29	2	321-39	Screw-HH	18	48	2
237-156	O-Ring	35	6	13	322-3	Screw-HH	15	9	8
237-156	O-Ring	32	11	10	322-3	Screw-HH	14	18	2
237-166	O-Ring	46	17	1	322-3	Screw-HH	8	27	8
237-166	O-Ring	9	24	2	322-3	Screw-HH	2	32	4
240-2	Grommet	9	10	3	322-3	Screw-HH	18	58	3
240-5	Grommet	3	12	5	322-4	Screw-HH	22	52	1
240-5	Grommet-Rubber	33	32	4	322-5	Screw-HH	18	49	1
240-7	Grommet	47	61	1	322-6	Screw-HH	16	30	1
240-11	Grommet	20	15	3	322-6	Screw-HH	6	53	3
240-11	Grommet	19	29	3	322-7	Screw-HH	13	1	3
249-40	Keeper	1	9	1	322-7	Screw-HH	23	28	2
2410-18	Plug	74	9	1	322-7	Screw-HH	3	30	2
2410-42	Cap-Bumper	45	38	4	322-7	Screw-HH	5	41	1
2410-64	Button-Plug	45	53	3	322-9	Screw-HH	45	55	1
2411-36	Bearing-Rod End	8	3	2	323-4	Screw-HH	14	6	2
2411-36	Bearing-Rod End	37	22	1	323-6	Screw-HH	46	1	2
2411-45	Tie Rod End	52	10	2	323-6	Screw-HH	13	9	2
2412-3	Clamp-Hose	45	4	2	323-7	Screw-HH	8	10	1
2412-3	Clamp-Hose	55	13	4	323-7	Screw-HH	37	37	2
2412-36	Clamp-Drain	20	11	1	323-9	Screw-HH	8	5	1
2412-36	Clamp-Hose	45	7	1	323-9	Screw-HH	52	23	2
2412-36	Clamp-Hose	43	34	4	325-4	Screw-HH	46	22	2
2412-93	Clamp-R	14	21	1	325-5	Screw-HH	45	40	2
2412-93	Clamp-R	24	75	6	325-33	Screw-HH	47	56	4
2412-93	R-Clamp	9	38	2	328-7	Screw-HH	22	39	4
2412-96	Clamp-R	23	24	1	3212-4	Screw	14	8	2
2412-96	Clamp-R	22	50	1	3213-14	Screw-HH (Europe)	47	70	6
2412-108	Clamp-Hose	20	3	4	3217-5	Nut	39	28	1
2412-108	Clamp-Hose	43	16	3	3217-6	Nut-Jam	31	29	1
2412-108	Clamp-Hose	55	26	2	3217-6	Nut-Jam	16	32	1
2412-111	Clamp	19	23	1	3217-25	Nut-Hex.	18	*61	2
2412-111	Clamp-Hose	37	39	2	3217-26	Nut	17	5	1
2412-125	Clamp-Hose	45	12	1	3217-29	Nut-Hex.	18	*63	6
2412-125	Clamp-Hose	55	30	1	3218-4	Nut-Jam	9	26	2
2412-125	Clamp-Hose	43	38	2	3219-14	Nut-Hex.	18	*65	8
2412-126	Clamp-R	18	51	1	3219-14	Nut-Hex.	6	55	9
2412-129	Clamp-Hose	59	8	8	3220-3	Nut-Jam	8	2	3
2412-129	Clamp-Hose	43	27	2	3220-3	Nut-Jam	37	15	1
2412-129	Clamp-Hose	62	36	4	3220-3	Nut-Jam	39	46	1
2412-129	Clamp-Hose	55	39	4	3220-24	Nut-Lock	17	28	1
2412-133	Clamp-R	14	17	2	3230-2	Screw-Carriage	45	48	3
2412-147	Clamp-R	45	58	1	3234-1	Screw	19	17	2
2412-150	J-Clip	55	48	1	3234-5	Screw-FH	43	6	3
256-42	Bushing	8	39	2	3234-5	Screw-HF	45	9	9
256-115	Washer-Thrust	24	12	4	3234-7	Screw	5	15	2
256-236	Bearing-Flange	8	28	4	3234-7	Screw	2	56	9
283-58	Pin-Clevis	8	32	2	3234-11	Screw-HFH	37	16	1
283-71	Pin-Lynch	23	47	2	3234-14	Screw-Flange	2	37	10
283-71	Pin-Lynch	22	69	3	3234-17	Screw-HFH	31	32	4
283-71	Pin-Lynch	24	86	2	3234-18	Screw-Flange	2	54	2
302-2	Fitting-Grease	24	8	4	3234-18	Screw-HHF	45	2	2
302-5	Fitting-Grease	25	1	1	3250-29	Screw	14	12	4
302-5	Fitting-Grease	26	1	1	3253-2	Washer-Lock	18	*66	5
302-5	Fitting-Grease	27	1	1	3253-2	Washer-Lock	5	26	3
302-5	Fitting-Grease	28	1	1	3253-3	Washer-Lock	31	34	3
302-5	Fitting-Grease	29	1	1	3253-3	Washer-Lock	39	66	1
302-5	Fitting-Grease	22	4	5	3253-4	Washer-Lock	14	19	4
302-5	Fitting-Grease	23	4	2	3253-4	Washer-Lock	55	33	4
302-5	Fitting-Grease	24	4	4	3253-6	Washer-Lock	14	7	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-358

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3253-6	Washer-Lock	16 25 2	3290-378	Tie-Cable	15 31 2
3253-15	Washer-Lock	18 *62 2	3290-378	Tie-Cable	33 38 6
3253-15	Washer-Lock	20 19 5	3290-378	Tie-Cable	9 40 2
3253-33	Washer-Lock	16 31 1	3290-378	Tie-Cable	8 48 1
3254-1	Washer-Lock	17 6 1	3290-378	Tie-Cable	55 52 2
3254-6	Washer-Lock	17 20 1	3290-378	Tie-Cable	22 57 3
3255-8	Washer-Lock	5 37 1	3290-379	Tie-Cable	9 3 2
3255-9	Washer-Lock	43 4 2	3290-461	Washer-Belleville	8 24 1
3255-24	Washer-Lock	18 *64 3	3290-467	Pin-Cotter, Hair	15 6 1
3256-1	Washer-Flat	5 32 2	3290-467	Pin-Cotter, Hair	1 19 2
3256-1	Washer-Flat	17 37 3	3290-489	Knob-Cap Style	17 11 1
3256-1	Washer-Flat	2 48 3	3296-2	Nut-Lock	17 23 4
3256-3	Washer-Flat	23 31 2	3296-23	Nut-Lock	45 37 4
3256-3	Washer-Flat	2 33 4	3296-23	Nut-Lock	45 46 2
3256-5	Washer-Flat	16 4 1	3296-29	Nut-Lock	14 1 5
3256-5	Washer-Flat	8 44 1	3296-29	Nut-Lock	43 2 1
3256-6	Washer-Flat	23 43 2	3296-29	Nut-Lock	15 13 5
3256-6	Washer-Flat	22 64 3	3296-29	Nut-Lock	31 25 1
3256-6	Washer-Flat	24 82 2	3296-29	Nut-Lock	23 30 2
3256-14	Washer-Flat	5 27 2	3296-39	Nut-Lock	14 14 2
3256-22	Washer-Flat	8 8 2	3296-39	Nut-Lock	15 24 1
3256-22	Washer-Flat	5 40 5	3296-39	Nut-Lock	52 24 2
3256-23	Washer-Flat	13 2 7	3296-39	Nut-Lock	8 25 3
3256-23	Washer-Flat	14 2 4	3296-42	Nut-Lock	17 24 2
3256-23	Washer-Flat	15 14 4	3296-44	Nut-Lock	16 22 1
3256-23	Washer-Flat	3 32 4	3296-45	Nut-Lock	46 11 4
3256-23	Washer-Flat	5 38 6	3296-47	Nut-Lock	13 4 3
3256-23	Washer-Flat	33 48 7	3296-47	Nut-Lock	3 31 2
3256-23	Washer-Flat	45 49 4	3296-47	Nut-Lock	5 36 1
3256-23	Washer-Flat	18 50 3	3296-47	Nut-Lock	45 56 1
3256-24	Washer-Flat	8 4 2	3296-49	Nut-Lock	23 38 2
3256-24	Washer-Flat	16 5 1	3296-49	Nut-Lock	22 60 3
3256-24	Washer-Flat	39 13 4	3296-49	Nut-Lock	24 76 2
3256-24	Washer-Flat	15 21 3	3296-51	Nut-Lock	22 40 4
3256-26	Washer-Flat	5 2 2	3296-54	Nut-Lock	14 9 4
3256-26	Washer-Flat	16 24 2	3296-59	Nut-Lock	37 23 1
3256-26	Washer-Flat	47 65 7	32103-3	Nut-Wing	74 4 2
3256-26	Washer-Flat (Europe)	47 69 6	32104-37	Screw-HH	33 49 2
3256-27	Washer-Flat	45 47 2	32104-76	Screw-TAP	22 20 2
3256-29	Washer-Flat	46 12 1	32104-76	Screw-TAP	24 36 4
3256-46	Washer-Flat	16 20 1	32105-13	Screw-HH	17 32 4
3256-46	Washer-Flat	37 36 2	32120-8	Ring-Retaining	53 11 1
3256-49	Washer-Flat	55 19 1	32120-15	Ring-Retaining	46 24 2
3256-56	Washer-Flat	45 16 3	32121-6	Pin-Roll	8 11 1
3256-69	Washer-Flat	8 33 3	32121-11	Pin-Roll	8 41 1
3256-75	Washer-Flat	17 8 4	32121-16	Pin-Roll	8 34 1
3256-77	Washer-Flat	39 44 8	32121-45	Pin-Roll	8 13 2
3256-78	Washer-Flat	1 13 2	32121-50	Pin-Roll	8 36 1
3258-166	Screw	1 23 3	32121-110	Pin-Spring	22 61 3
3258-166	Screw	17 36 3	32121-110	Pin-Spring	24 79 2
3269-4	Rivet-Pop	45 35 4	32122-24	Screw	20 20 5
3269-8	Rivet-Pop	1 10 4	32122-54	Screw-Machine Slot Hd.	74 1 2
3269-10	Washer-Flat	1 15 2	32128-20	Nut-HFH	45 8 4
3272-2	Pin-Cotter	8 9 2	32128-20	Nut-HFH	8 26 8
3272-5	Pin-Cotter	5 4 3	32128-20	Nut-HFH	2 62 2
3272-7	Pin-Cotter	52 14 2	32128-21	Nut-HFH	46 2 2
3272-10	Pin-Cotter	5 3 1	32128-21	Nut-HFH	13 10 2
3272-10	Pin-Cotter	15 20 1	32128-25	Nut-HFH	15 7 4
3272-10	Pin-Cotter	8 37 2	32128-26	Nut-HFH	16 21 4
3272-12	Pin-Cotter	47 49 2	32128-33	Nut-HFH	2 45 3
3274-59	Screw	39 30 6	32128-33	Nut-HFH	18 47 3
3274-81	Screw	39 45 8	32136-13	Nut-Hex. Slotted	52 13 2
3290-271	Rivet-Pop	45 3 2	32136-14	Nut-Hex. Slotted	47 48 2
3290-282	Rivet-Pop	55 50 1	32144-10	Screw	15 26 2
3290-307	Pin-Cotter, Hair	15 33 1	32144-11	Screw-Self Tapping	23 23 1
3290-378	Tie-Cable	5 9 4	32144-11	Screw-TAP	43 3 1
3290-378	Tie-Cable	23 19 2	32144-11	Screw-TAP	24 64 6
3290-378	Tie-Cable	43 20 5	32144-11	Screw-Thread Forming	9 16 5
3290-378	Tie-Cable	20 23 3	32144-11	Screw-Thread Forming	5 44 2
3290-378	Tie-Cable	3 27 1	32144-14	Screw-HH	8 18 2
3290-378	Tie-Cable	17 29 2	32144-14	Screw-HWHTF	22 15 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32144-18	Screw-HWH	18 43 2	340-18	Fitting-Hydraulic 90°	9 33 1
32148-7	Nut-Clinch	1 4 5	340-65	O-Ring	9 *49 6
32148-7	Nut-Clinch	33 31 4	340-65	O-Ring	37 32 2
32148-10	Nut-Clinch	45 14 2	340-68	Fitting-Hydraulic, Tee	3 23 1
32151-36	Ring-Retaining	24 10 8	340-68	Fitting-Tee	33 7 2
32151-36	Ring-Retaining	23 21 4	340-68	Fitting-Tee, Bulkhead	5 45 1
32151-72	Retainer-Push On	45 28 2	340-70	Nut-Bulkhead	3 13 2
32151-96	Ring-Retaining	46 14 1	340-70	Nut-Lock	46 26 3
32152-10	Nut	28 3 1	340-70	Nut-Lock, Bulkhead	33 12 2
32152-10	Nut	29 3 1	340-70	Nut-Lock, Bulkhead	5 46 5
32152-10	Nut-Lock	53 2 1	340-74	Nut-Bulkhead	45 31 2
32152-10	Nut-Lock	25 3 1	340-75	Fitting-Bulkhead, Tee LH	24 53 1
32152-10	Nut-Lock	26 3 1	340-77	Fitting-90°	34 67 1
32152-10	Nut-Lock	27 3 1	340-77	Fitting-Hydraulic 90°	37 6 1
32152-10	Nut-Lock	30 3 1	340-78	Nut-Bulkhead	24 52 4
33004-00	Nut-HF	55 44 2	340-87	Fitting-45°	34 63 1
33005-00	Nut-HF	55 1 9	340-92	Fitting-Hydraulic	31 4 4
33005-00	Nut-HF	20 5 2	340-92	Fitting-Hydraulic	23 16 2
33005-00	Nut-HF	43 48 2	340-92	Fitting-Hydraulic	3 25 5
33023-00	Nut-Lock	43 32 1	340-92	Fitting-Straight	22 44 1
33024-00	Nut-Lock	72 8 5	340-92	Fitting-Straight	24 46 2
33029-00	Nut-Lock	24 34 4	340-97	Fitting-Hydraulic 90°	47 52 2
33093-00	Washer	43 31 1	340-98	Fitting-90°	33 20 3
33103-020	Screw-HHF	43 26 1	340-98	Fitting-Hydraulic 90°	3 5 10
33103-020	Screw-HHF	6 57 2	340-98	Fitting-Hydraulic 90°	9 45 1
33103-025	Screw-HHF	5 35 1	340-101	Fitting-45°	33 17 1
33104-010	Screw-HH	23 40 2	340-103	Fitting-Hydraulic 45°	23 20 1
33104-016	Screw-HH	55 34 4	340-105	Fitting-Hydraulic 90°	37 9 2
33104-016	Screw-HHF	31 27 4	340-126	Nut-Bulkhead	46 8 3
33104-016	Screw-HHF	43 43 2	340-127	Nut-Bulkhead	9 6 1
33104-020	Screw-HHF	19 5 6	340-127	Nut-Bulkhead	3 10 5
33104-020	Screw-HHF	55 35 2	340-127	Nut-Bulkhead	33 34 4
33104-025	Screw-HHF	33 22 4	340-128	Nut-Bulkhead	9 12 3
33104-030	Screw-HHF	72 5 5	340-129	Fitting-Hydraulic 90°	37 31 1
33105-025	Screw-HHF	20 13 3	340-132	Fitting-90°	33 4 4
33105-025	Screw-HHF	19 28 3	340-132	Fitting-90°	22 30 5
33105-030	Screw-HHF	20 2 2	340-132	Fitting-Hydraulic 90°	31 11 1
33105-030	Screw-HHF	55 8 6	340-132	Fitting-Hydraulic 90°	23 18 1
33105-030	Screw-HHF	43 14 2	340-139	Fitting-Elbow 90°	19 14 1
33105-070	Screw-HHF	55 7 3	340-139	Fitting-Hydraulic 90°	31 21 1
33106-030	Screw-HHF	9 20 12	340-142	Fitting-Hydraulic 90°	46 21 1
33106-035	Screw-HHF	72 1 3	340-142	Fitting-Hydraulic 90°	9 22 4
33106-035	Screw-HHF	1 6 8	340-142	Fitting-Hydraulic 90°	19 19 1
33106-090	Screw-HHF	9 35 8	340-148	Fitting-Tee	34 55 1
33108-025	Screw-HHF	45 1 2	340-157	Fitting-Tee	19 32 1
33108-035	Screw-HHF	1 25 8	340-161	Fitting-Bulkhead Adapter	33 8 1
33108-035	Screw-HHF	24 91 6	351-78	Edging	14 23 1
33114-010	Screw-HH	22 67 4	353-508	Plug	46 39 1
33116-120	Screw-HH	9 36 4	353-989	Plug	32 14 5
340-2	Adapter	5 11 4	353-989	Plug	35 16 5
340-2	Adapter	19 37 1	353-990	Plug	32 5 10
340-2	Adapter	46 37 1	353-990	Plug	35 7 5
340-2	Adapter-Hydraulic	31 23 1	353-991	Plug	35 5 13
340-4	Fitting-Hydraulic	31 17 4	353-991	Plug	32 12 10
340-4	Fitting-Hydraulic	33 21 5	354-77	Fitting-Quick Connect	37 2 4
340-5	Fitting-Hydraulic	9 39 2	354-77	Fitting-Quick Connect	31 14 1
340-9	Fitting-Hydraulic	19 11 1	354-77	Fitting-Quick Connect	33 51 1
340-9	Fitting-Hydraulic	46 18 1	354-79	Cap-Dust	37 1 4
340-15	Fitting-Hydraulic 90°	37 30 1	354-79	Cap-Fitting	31 15 1
340-17	Fitting-Hydraulic 90°	37 28	354-79	Cap-Fitting	33 52 1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6700D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6700D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1–2	Manual Servo Control No. 94–3019	40
Reel Motor & Hoses	3	Gear Pump Assembly No. 94–3066	41–42
Reel Motor Assembly No. 98–99999	4	Engine Components Assembly	43
Steering Tower Assembly	5–6	Air Cleaner Assembly No. 93–7485	44
Steering Valve Assembly 99–8959	7	Radiator & Shroud Assembly	45
Traction & Brake Pedal Assembly	8	4–WD Axle Assembly	46–47
Front Hydraulic Drive & Brake Assembly	9	Sleeve Assembly Axle No. 98–2447	48
Planetary Drive Assembly No. 92–7415	10	Axle Housing Assembly No. 98–2447	49
Brake Assembly No. 92–7414 RH & 92–7417 LH	11	Differential & Shaft Assembly No. 98–2447	50
Hydraulic Motor Assembly No. 92–7385 RH & 93–7476 LH	12	Steering Gear Case Assembly No. 98–2447	51
Hydraulic Tubes & Clamps	13	Steering Arm Linkage No. 98–2447	52
Seat Frame & Throttle Assembly	14–15	Hydraulic Steering Cylinder No. 94–8141	53
Seat Suspension Assembly	16	4–WD Hydraulic Motor Assembly No. 92–7386	54
Control Console Assembly	17–18	Engine Installation Assembly	55
Hydraulic Filter & Reservoir Assembly	19	Alternator Assembly	56
Fuel Tank & Filter Assembly	20	Camshaft & Fan Support Assembly	57
Fuel Filter Assembly No. 76–5300	21	Collector Assembly	58
Front Lift Arms Assembly – No. 1, 4 & 5	22	Crankcase Assembly	59
Rear Lift Arm Assembly – No. 2 & 3	23	Crankshaft Assembly	60
Lift Arm Assembly – No. 6 & 7	24	Cylinder Head Assembly	61–63
Hydraulic Cylinder No. 1 (93–2650)	25	Fuel Injection Pump Assembly	64
Hydraulic Cylinder No. 4 (98–8811))	26	Fuel Injector Assembly	65
Hydraulic Cylinder No. 5 (98–9069)	27	Glow Plug & Glow Relay	66
Hydraulic Cylinder No. 2 (98–8813)	28	Intake & Exhaust Manifold Assembly	67
Hydraulic Cylinder No. 3 (98–8812)	29	Oil Pump Assembly	68
Hydraulic Cylinder No. 6 & 7 (93–2631)	30	Starter Assembly	69
Front Hydraulic Block & Hoses	31	Timing Cover	70
Front Manifold Block Assembly No. 92–7418	32	Water Pump Assembly	71
Rear Hydraulic Manifold Block & Hoses	33–34	Roll Over Protection System (ROPS)	72
Rear Manifold Block Assembly No. 92–7384	35	Diagnostic – ACE Display Assembly	73
Solenoid Valve Assembly No. 76–9970	36	Gauge Bar & Backlapping Brush Assembly	74
Pump Installation Assembly	37	RM6700D Hydraulic Schematic	75
Servo Controlled Piston Pump Assembly		RM6700D Electrical Schematic	76
No. 98–3730	38–39	Controller Electrical Schematic	77
		Numerical Parts Index	78–90

MAINTENANCE RECORD

[illegible]