

LAWN-BOY®

Commercial Walk-Behind Mower

Model No. 22260 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Short Block Assembly	6
Engine & Blade Assembly	2	Carburetor Assembly	7
Handle Assembly	3	Lawn–Boy Part Number Index	8–10
Engine Assembly	4	Maintenance	11–13
Engine Assembly (cont.)	5		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Rear Bagging Kit	Model No. 89800
Leaf Bag	Model No. 89804	Mulching Plate	Model No. 89864
Leaf Shredder Kit	Model No. 89860	Leaf Bag w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

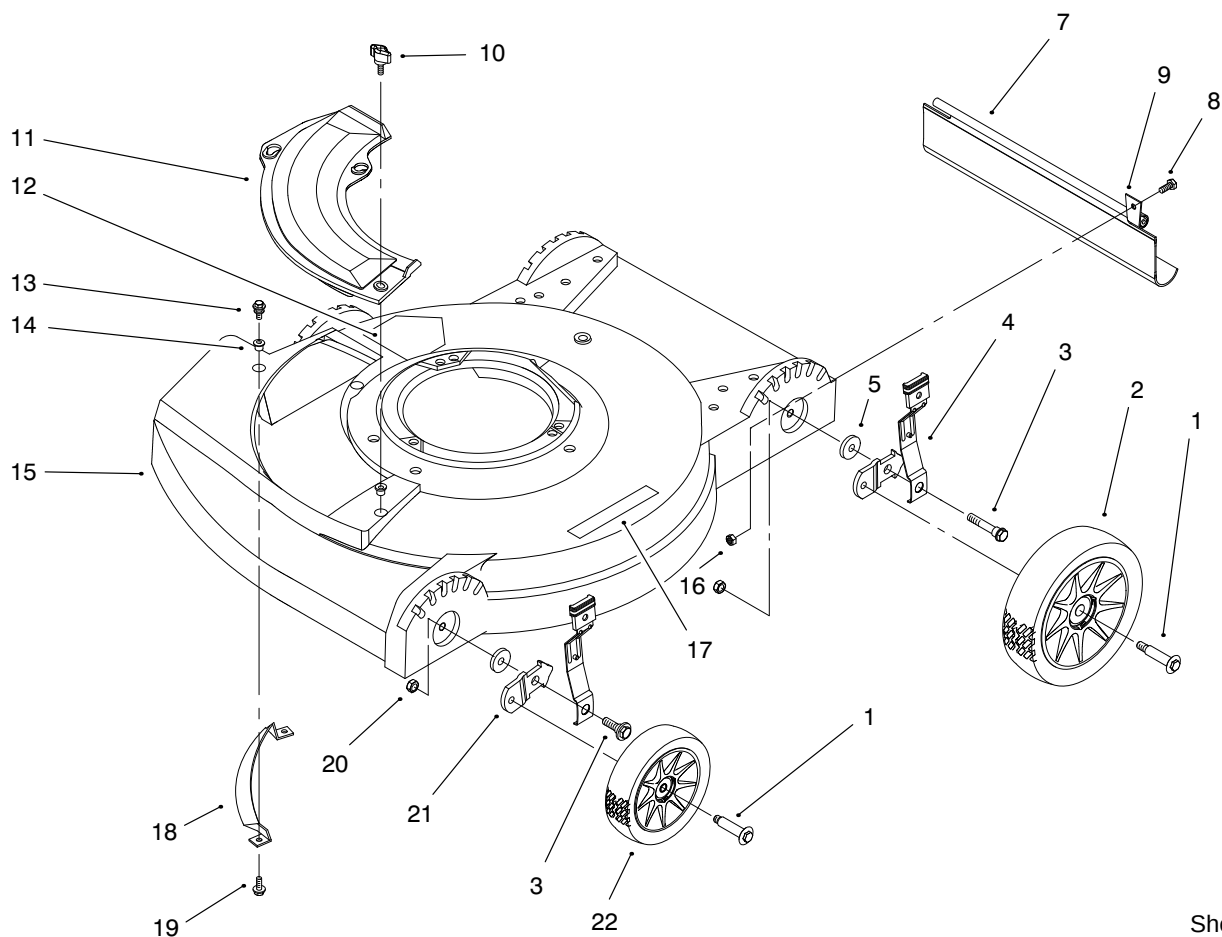


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	603567	4	Bolt
2	683464	2	8" Whel/Tire ASM
3	610646	4	Bolt
4	153444	4	Knob&spring Formc
5	608834	4	Washer
7	93-7368	1	Shield – Trailing
8	321-3	2	Screw-HH
9	93-7693	2	Clamp – Shield
10	98-8332	1	Knob
11	95-7052	1	Plate – Chute Opening
12	39-5770	1	Decal – Cut Finger
13	614677	2	Screw- Sems
14	94-1610	3	Grommet – Plastic
15	95-7442-02	1	Hsg-Commercial 21"
16	3296-56	2	Nut-Lock Ni
17	93-7250	1	Decal – Safety Instruct
18	608175	1	Toe Bar 21"
19	46-6811	2	Screw/Washer
20	3296-39	4	Nut-Lock Ni
21	608833-03	4	Whl Hgt Brkt
22	684159	2	6" Whel/Tire ASM

Ref. No.	Part No.	Qty.	Description

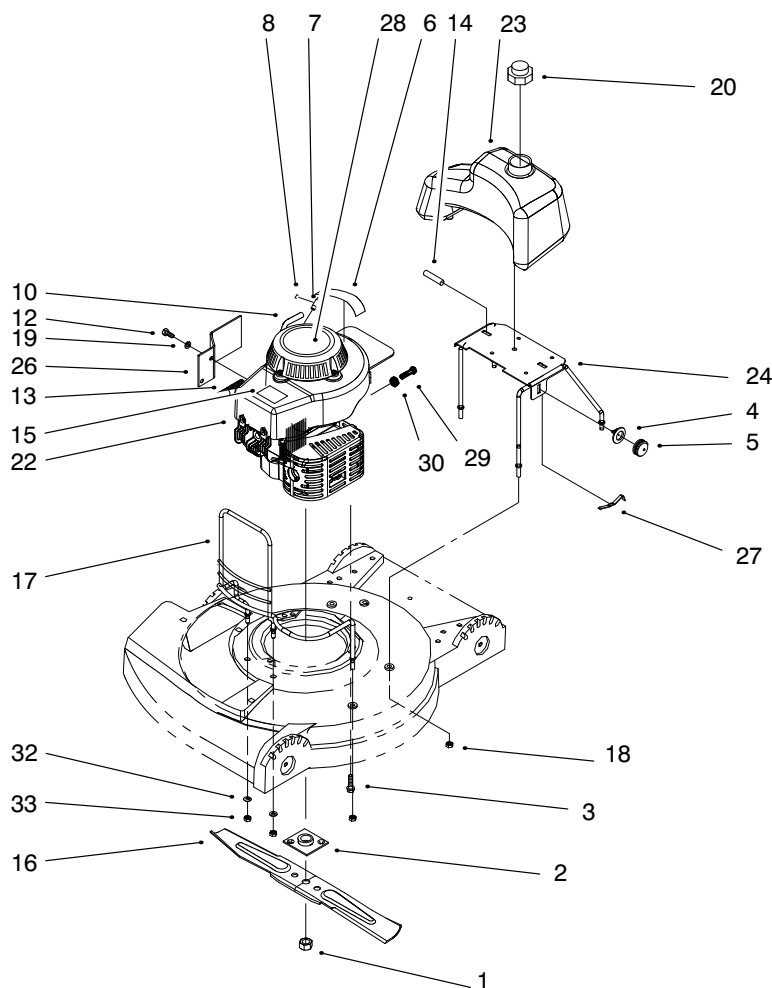


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade	29	314576	1	Screw-Sems
2	677525	1	Plate & Collar ASM	30	306531	1	Nut-Hex
3	98-4480	3	Screw-Sems	32	68-5920	2	Hood Pivot Washer
4	44-2750	1	Body-Primer	33	3296-39	2	Nut-Lock
5	66-7460	1	Bulb-Primer				
6	99-1518	1	Decal-Fuel Mix				
7	47-2480	1	Rope Stop				
8	3290-443	1	Staple				
10	612782	1	Line-Gas				
12	322-3	2	Screw-HH				
13	93-4306	1	Spring - Compression				
14	2410-76	1	Plug-Cap				
15	99-1517	1	Decal-Lawn Boy				
16	612543	1	Blade-21" Whirl				
17	98-1598	1	Muffler-Guard				
18	608311	5	Nut-Lock				
19	3253-4	2	Washer-Lock/Sp				
20	98-8344	1	Assembly - Cap, Fuel/Oil				
22	99-2910	1	Engine ASM For Service				
23	98-4497	1	Tank - Fuel				
24	98-4458-03	1	Tank Brkt ASM				
26	99-1515-03	1	Guard-Brake				
27	609830	2	Spring				
28	98-8342	1	Decal-Recoil				

Handle Assembly


Ref. No.	Part No.	Qty.	Description

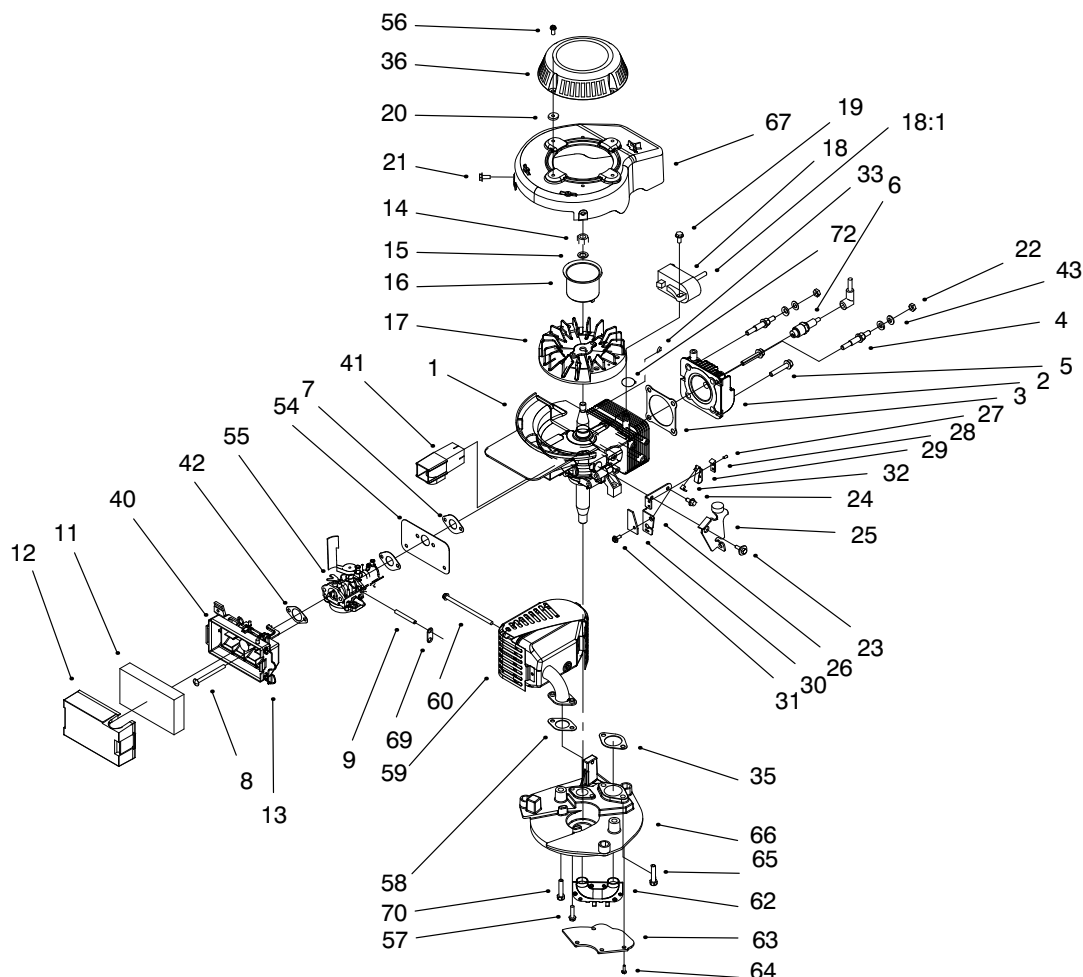

Sheet No.:A3

Engine Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7636	1	E-S/Block Ser.	26	84-7820	1	Plate-Brake Mtg
2	94-5776	1	Head-(Mach)	27	3290-459	2	Rivet-Plastic
3	94-5778	1	Gasket-Head	28	92-2925	1	Strap-Insulation
4	94-5779	2	Stud	29	60-9010	1	Strap-Ground
5	94-5780	2	Bolt - Head	30	53-4690	1	Stop-Gr Strap
6	50-1170	1	Plug-Spark	31	12-5450	1	Screw-Special
7	94-5795	2	Gasket-Intake	32	98-7037	1	Wire - Lead
8	612507	2	Screw	33	607199	1	Key
9	44-3170	1	Primer Hose	35	95-1778	1	Gasket-Exhaust
11	95-5574	1	Filter-Air	36	684566	1	Starter Assy Sm
12	95-5577	1	Cover-Air Filter	40	95-5588	1	Base Ay-(Air Filter)
13	610383	1	Retainer-Fil.	41	95-5578	1	Tunnel
14	130743	1	Nut	42	95-7613	1	Gasket-Filter
15	316959	1	Washer-Lock	43	3290-456	4	Washer-Belleville
16	612949	1	Hub Starter	54	98-1388	1	Shield - Carb.
17	95-1866	1	Flywheel-Machined	55	98-7042	1	Carburetor ASM With Gaskets
18	92-1152	1	Ignition-Cd	56	98-4484	4	Screw Sems
18:2	681678	1	Ht Lead&cover	57	613208	2	Screw-Cd Mtg
18:2	684698	1	Cover & Term. Ay	58	98-1392	1	Gasket
19	613208	2	Screw-Cd Mtg	59	99-2904	1	Muffler And Guard ASM
20	98-4478	4	Spacer	59:4	98-1394	2	Screw-HWH
21	700094	2	Screw-HH	59:5	3254-1	2	Washer-Lock/Int
22	146501	2	Nut	60	611228	1	Bolt-Console
23	95-1870	1	Screw-Shoulder	62	98-1557	1	Pipe-Transfer
24	95-1871	1	Screw-HWH				
25	93-4312	1	Brake Plate Ay				

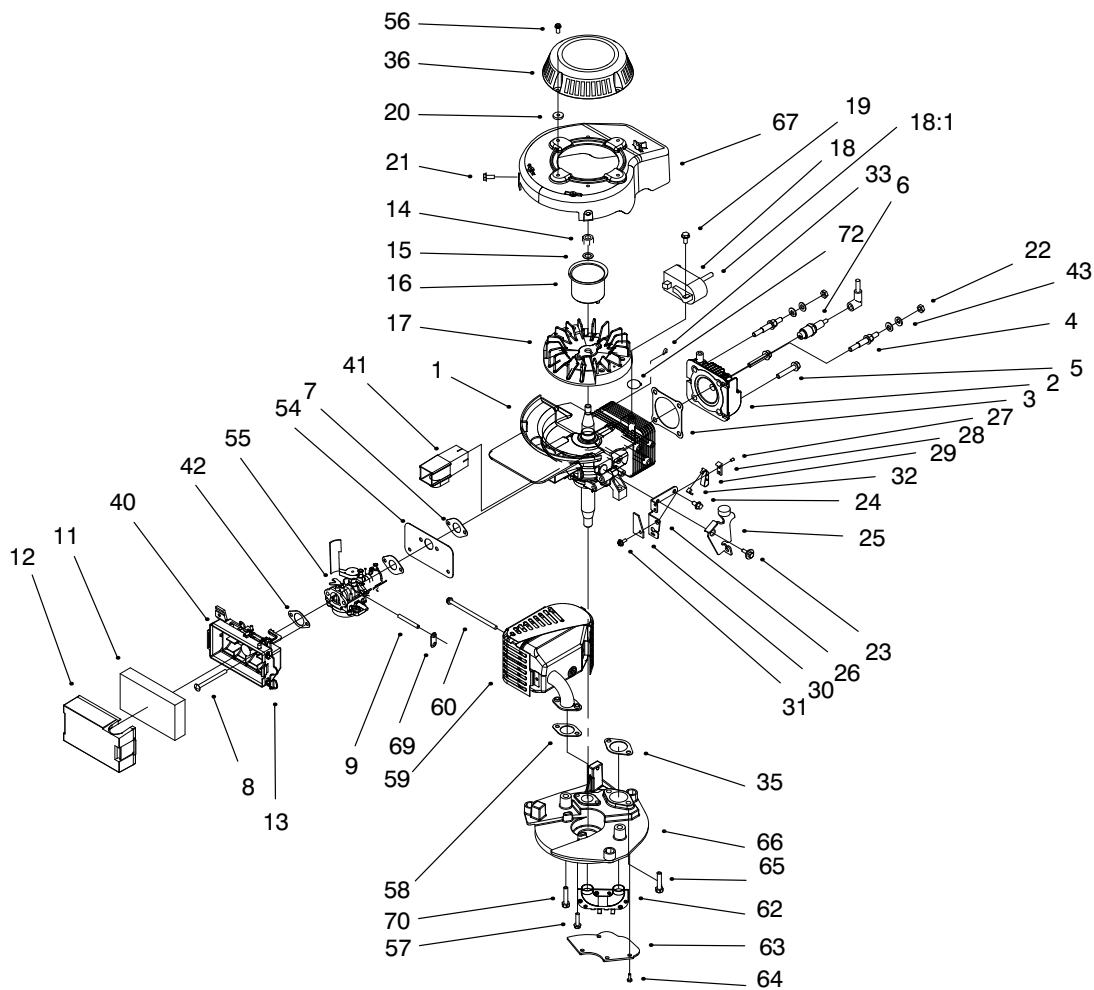

Sheet No.:A3

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
63	98-1591	1	Cover-Muffler				
64	700822	4	Screw-HH				
65	322-17	2	Screw-HH				
66	98-1383	1	Mtg. Plate				
67	98-4467	1	Assembly - Shroud				
69	95-7615	1	Hose-Retainer				
70	613233	2	Screw H.hd.wash				
72	317893	1	Strap-Tie				

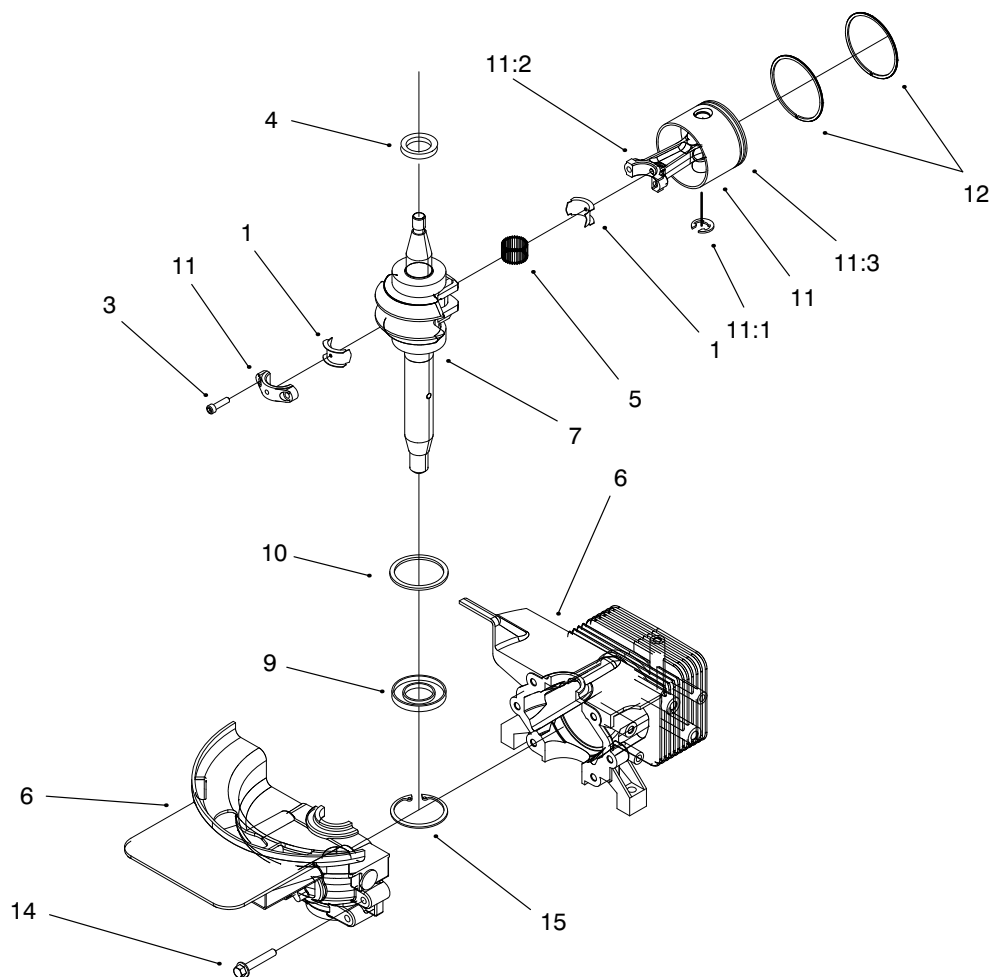


Sheet No.:A5

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner Ay
†2	610372	2	Sealer–Loctite
†2	609790	2	Sealant–50cc #2
3	611393	4	Screw–Rod
4	611396	1	Seal– Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
7	99–2920	1	Crankshaft And Bearing ASM For Service
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston&rod Ay
11:1	303712	2	Ring– Retaining
11:2	95–7629	1	Connecting Rod ASM
11:3	95–7628	1	Piston ASM With Piston Rings
12	95–7626	1	Ring Set – Service
14	94–5781	12	Screw
15	98–7046	1	Ring – Retaining

† Not Illustrated

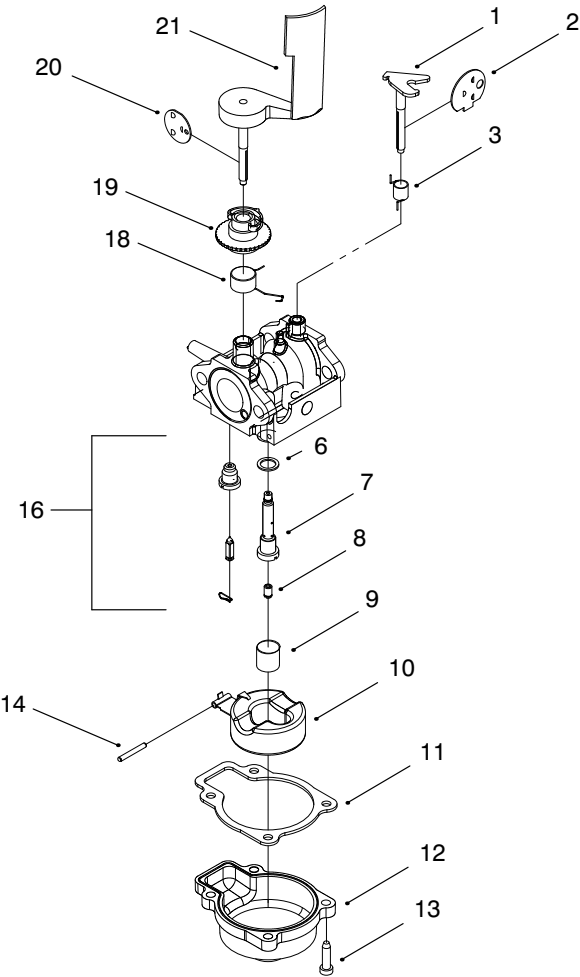

Sheet No.:A6

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc - Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet - Main 77.5				
9	94-5787	1	Filter - Fuel				
10	95-1899	1	Float&arm Ay				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Gov.				
19	610834	1	Airvane-Collar				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane&shaft				

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	4	14	1	Nut
146501	4	22	2	Nut
153444	1	4	4	Knob&spring Formc
303712	6	11:1	2	Ring— Retaining
306531	2	30	1	Nut—Hex
314576	2	29	1	Screw—Sems
316959	4	15	1	Washer—Lock
317893	5	72	1	Strap—Tie
603164	2	1	1	Nut—Blade
603567	1	1	4	Bolt
607188	3	19	4	Screw
607199	4	33	1	Key
608175	1	18	1	Toe Bar 21”
608311	2	18	5	Nut—Lock
608834	1	5	4	Washer
608850	7	13	4	Screw—HH
609739	3	17	2	Washer — Curved
609790	6	2	2	Sealant—50cc #2
609830	2	27	2	Spring
610372	6	2	2	Sealer—Loctite
610383	4	13	1	Retainer—Fil.
610646	1	3	4	Bolt
610834	7	19	1	Airvane—Collar
611228	4	60	1	Bolt—Console
611393	6	3	4	Screw—Rod
611396	6	4	1	Seal— Oil
612383	7	6	1	Washer
612507	4	8	2	Screw
612543	2	16	1	Blade—21” Whirl
612782	2	10	1	Line—Gas
612824	3	10	1	Starter—Clip Eat
612825	3	11	1	Handle—Start Eat
612949	4	16	1	Hub Starter
613208	4	19	2	Screw—Cd Mtg
613208	4	57	2	Screw—Cd Mtg
613233	5	70	2	Screw H.hd.wash
614249	3	3	2	Strap—Tie Sm
614677	1	13	2	Screw— Sems
677525	2	2	1	Plate & Collar ASM
677982	6	1	1	Liner Ay
681678	4	18:2	1	Ht Lead&cover
683464	1	2	2	8” Whel/Tire ASM
683911	6	5	1	Bearing—Needle
684159	1	22	2	6” Whel/Tire ASM
684566	4	36	1	Starter Assy Sm
684698	4	18:2	1	Cover & Term. Ay
700094	4	21	2	Screw—HH
700822	5	64	4	Screw—HH
12—5450	4	31	1	Screw—Special
39—5770	1	12	1	Decal — Cut Finger
44—2750	2	4	1	Body—Primer
44—3170	4	9	1	Primer Hose
46—6811	1	19	2	Screw/Washer
47—2480	2	7	1	Rope Stop
50—1170	4	6	1	Plug—Spark
53—4690	4	30	1	Stop—Gr Strap
60—9010	4	29	1	Strap—Ground
66—7460	2	5	1	Bulb—Primer
68—5920	2	32	2	Hood Pivot Washer
84—7820	4	26	1	Plate—Brake Mtg
92—1152	4	18	1	Ignition—Cd
92—2925	4	28	1	Strap—Insulation

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-5412	3	9	1	Stop-Pivot
92-6376	7	21	1	Air Vane&shaft
92-6389	7	14	1	Pin
92-8632	3	30	1	Washer
92-9691	7	12	1	Chamber-Float
92-9697	7	16	1	Val/Seat-Float
93-4306	2	13	1	Spring - Compression
93-4312	4	25	1	Brake Plate Ay
93-7250	1	17	1	Decal - Safety Instruct
93-7368	1	7	1	Shield - Trailing
93-7383	3	13	1	Rope - Guide
93-7693	1	9	2	Clamp - Shield
94-1610	1	14	3	Grommet - Plastic
94-5764	6	9	1	Seal-Oil
94-5765	6	10	1	Ring-Retaining
94-5776	4	2	1	Head-(Mach)
94-5778	4	3	1	Gasket-Head
94-5779	4	4	2	Stud
94-5780	4	5	2	Bolt - Head
94-5781	6	14	12	Screw
94-5787	7	9	1	Filter - Fuel
94-5788	7	2	1	Disc - Choke
94-5795	4	7	2	Gasket-Intake
95-1778	4	35	1	Gasket-Exhaust
95-1866	4	17	1	Flywheel-Machined
95-1870	4	23	1	Screw-Shoulder
95-1871	4	24	1	Screw-HWH
95-1899	7	10	1	Float&arm Ay
95-5574	4	11	1	Filter-Air
95-5577	4	12	1	Cover-Air Filter
95-5578	4	41	1	Tunnel
95-5581	7	1	1	Shaft-Choke
95-5583	7	3	1	Spring-Choke
95-5588	4	40	1	Base Ay - (Air Filter)
95-7052	1	11	1	Plate - Chute Opening
95-7442-02	1	15	1	Hsg-Commercial 21"
95-7613	4	42	1	Gasket-Filter
95-7615	5	69	1	Hose-Retainer
95-7626	6	12	1	Ring Set - Service
95-7628	6	11:3	1	Piston ASM With Piston Rings
95-7629	6	11:2	1	Connecting Rod ASM
95-7631	6	6	1	Cylinder And Crankcase ASM
95-7636	4	1	1	E-S/Block Ser.
98-1357	7	8	1	Jet - Main 77.5
98-1362	7	11	1	Gasket
98-1383	5	66	1	Mtg. Plate
98-1388	4	54	1	Shield - Carb.
98-1392	4	58	1	Gasket
98-1394	4	59:4	2	Screw-HWH
98-1557	4	62	1	Pipe-Transfer
98-1591	5	63	1	Cover-Muffler
98-1598	2	17	1	Muffler-Guard
98-4458-03	2	24	1	Tank Brkt ASM
98-4467	5	67	1	Assembly - Shroud
98-4478	4	20	4	Spacer
98-4480	2	3	3	Screw-Sems
98-4484	4	56	4	Screw Sems
98-4497	2	23	1	Tank - Fuel
98-7001	7	7	1	Nozzle
98-7011	7	18	1	Spring-Gov.
98-7037	4	32	1	Wire - Lead
98-7042	4	55	1	Carburetor ASM With Gaskets

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-7046	6	15	1	Ring – Retaining
98-7047	7	20	1	Disc–Throttle
98-8332	1	10	1	Knob
98-8342	2	28	1	Decal – Recoil
98-8344	2	20	1	Assembly – Cap, Fuel/Oil
99-1515-03	2	26	1	Guard – Brake
99-1517	2	15	1	Decal – Lawn Boy
99-1518	2	6	1	Decal – Fuel Mix
99-2904	4	59	1	Muffler And Guard ASM
99-2910	2	22	1	Engine ASM For Service
99-2920	6	7	1	Crankshaft And Bearing ASM For Service
100-1172	3	6	1	Cable – Throttle Com Lb
100-1173	3	14	1	Cable – Brake Com Lb
100-1174	3	8	1	Bail – Control, Assy
2410-76	2	14	1	Plug – Cap
321-3	1	8	2	Screw – HH
321-48	3	29	1	Screw – HH
321-49	3	12	1	Screw – Hex Hd
322-3	2	12	2	Screw – HH
322-9	3	4	2	Screw – HH
322-17	5	65	2	Screw – HH
3230-29	3	1	2	Screw – CARR
3253-4	2	19	2	Washer – Lock/Sp
3253-33	3	18	2	Washer – Lock/Sp
3254-1	4	59:5	2	Washer – Lock/Int
3290-443	2	8	1	Staple
3290-456	4	43	4	Washer – Belleville
3290-459	4	27	2	Rivet – Plastic
3296-29	3	5	4	Nut – Lock Ni
3296-39	2	33	2	Nut – Lock
3296-39	1	20	4	Nut – Lock Ni
3296-56	1	16	2	Nut – Lock Ni
3296-73	3	15	2	Nut – Lock
608833-03	1	21	4	Whl Hgt Brkt
613048-05	3	2	1	Handle Section – Lower
614515-05	3	7	1	Handle Sect – Top
684057-03	3	16	1	Wa: RH Bracket & Pin
684058-03	3	20	1	Wa: LH Bracket & Pin

[illegible]

[illegible]

13