

LAWN-BOY®

Commercial Walk-Behind Mower

Model No. 11003 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Short Block Assembly	7
Rear Axle Assembly	2	Gear Case Assembly	8
Engine & Blade Assembly	3	Carburetor Assembly	9
Handle Assembly	4	Lawn–Boy Part Number Index	10–13
Engine Assembly	5		
Engine Assembly (cont.)	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Mulch Plate	Model No. 89864

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

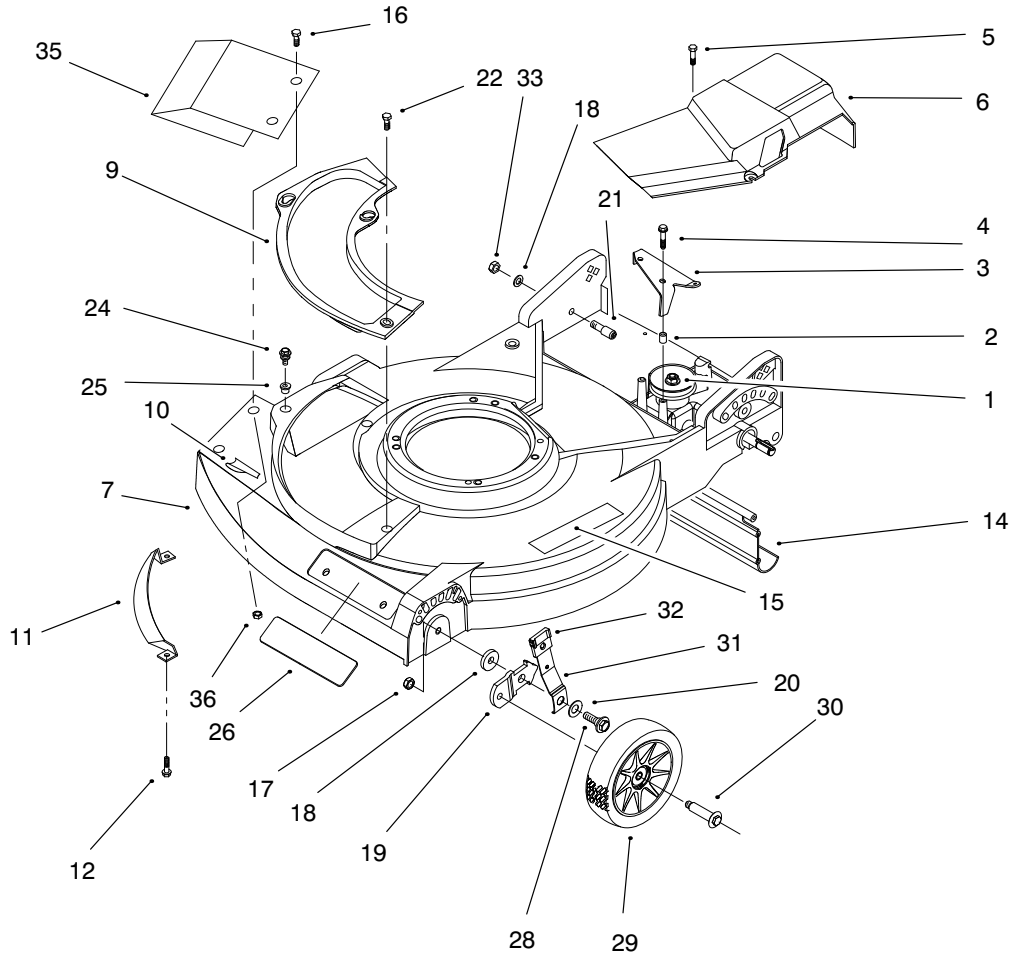


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7869	1	ASM-Gear Case
2	46-5551	2	Bushing-Spacer
3	92-7699-03	1	Bracket-Actuator
4	92-7748	2	Screw
5	12-5450	2	Screw-Thread Forming
6	98-4493	1	Cover-Drive
7	99-5204	1	Housing-21" Sp
9	95-7052	1	Plate-Cover
10	93-7009	1	Decal-Deflector Danger
11	608175	1	Toe Bar 21
12	46-6811	2	Screw-HWH
14	92-7736	1	Shield-Trailing
15	93-4105	1	Decal-Danger
16	32105-15	2	Screw-HH
17	3296-39	2	Nut-Lock
18	40-1940	4	Washer
19	95-7403-03	2	Bracket-Wheel Height Adj
20	3290-413	2	Washer-Spring
21	92-9673	2	Bolt-Shoulder
22	49-2040	7	Screw-HH
24	614677	2	Screw-Sems
25	94-1610	3	Grommet-Plastic
26	99-1503	1	Decal-Deck 550cs


Ref. No.	Part No.	Qty.	Description
28	92-4856	2	Bolt-Shoulder
29	684159	2	Wheel & Tire
30	603567	2	Bolt-Wheel
31	92-1006	2	ASM-Spring Arm
32	92-1008	4	Knob-Height Adjust
35	93-7415-03	1	Guard-Plate
36	3296-42	2	Nut-Lock

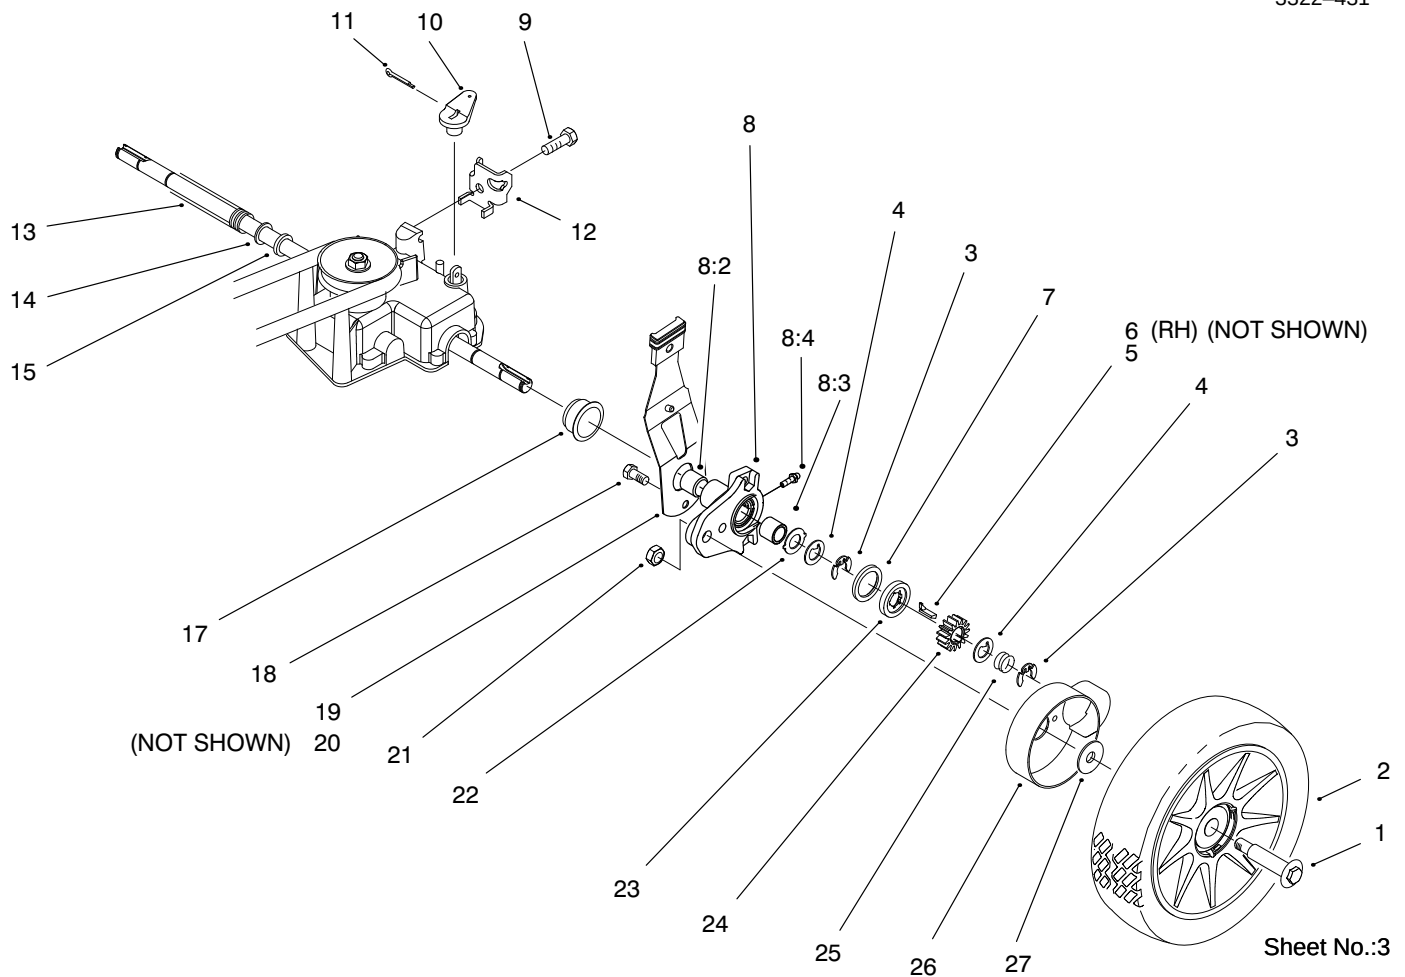

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	95-1714	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	32144-70	1	Screw-TAP
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Retainer-Cable
13	24-7920	1	Cover-Drive Shaft
14	303259	1	Washer
15	605255	1	Washer-Flat
17	92-6535	2	Cap-End
18	32144-85	2	Screw-HH
19	92-6540	1	ASM-Spring Arm
20	92-6539	1	ASM-Spring Arm
21	610358	2	Nut-Lock
22	65-4730	2	Washer-Thrust
23	65-4760	2	Washer
24	65-4750	2	Gear-Pinion


Ref. No.	Part No.	Qty.	Description
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel
27	614426	2	Washer-Stepped

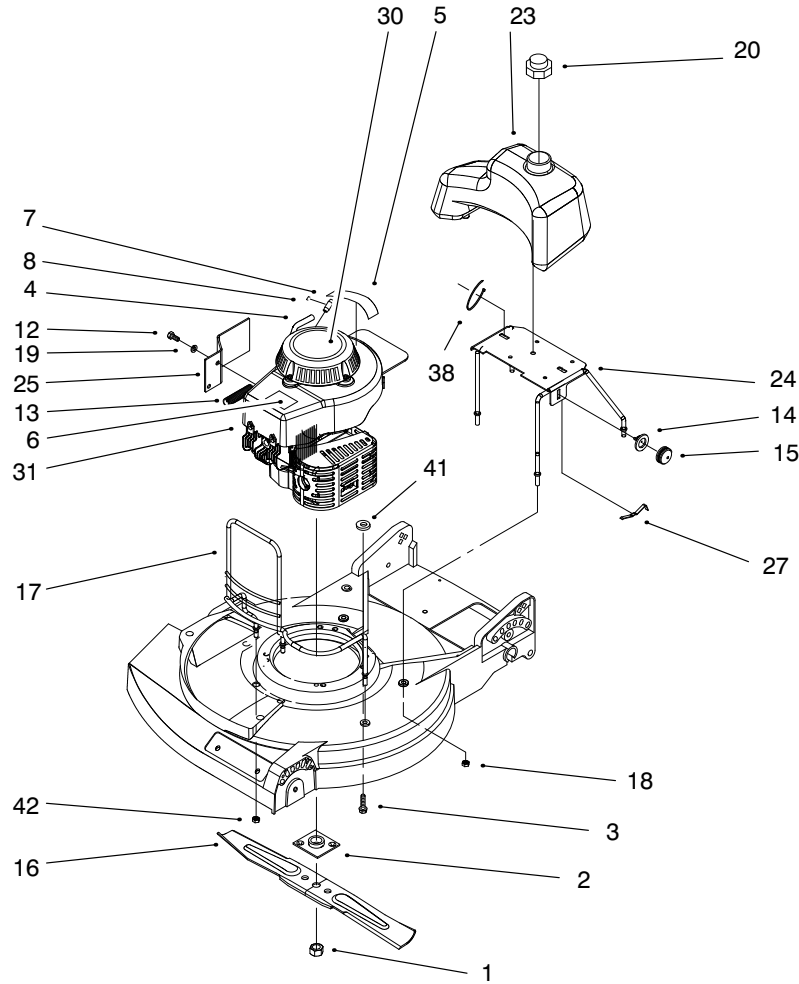

Sheet No.:4

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade	41	68-5920	3	Washer
2	677525	1	ASM-Plate & Collar	42	3296-39	2	Locknut
3	98-4480	3	Screw-Sems				
4	612782	1	Gas Line				
5	99-1518	1	Decal-Fuel Mix				
6	99-1517	1	Decal-Lawn Boy				
7	47-2480	1	Rope Stop				
8	3290-443	1	Staple				
12	322-3	2	Screw-HH				
13	93-4306	1	Spring-Compression				
14	44-2750	1	Body-Primer				
15	66-7460	1	Bulb-Primer				
16	612543	1	Blade-21" Whirl				
17	98-1598	1	Guard-Engine				
18	608311	4	Locknut				
19	3253-4	2	Washer-Lock				
20	98-8344	1	ASM-Fuel/Oil Cap				
21	306531	1	Nut-Throttle Cable				
22	314576	1	Screw-Throttle Cable				
23	98-4497	1	Tank-Fuel				
24	98-4459-03	1	Tank Bkt ASM				
25	99-1515-03	1	Guard-Brake				
27	609830	2	Spring				
30	92-9551	1	Decal - Recoil				
31		1	Engine ASM				
38	614249	1	Tie Strap				

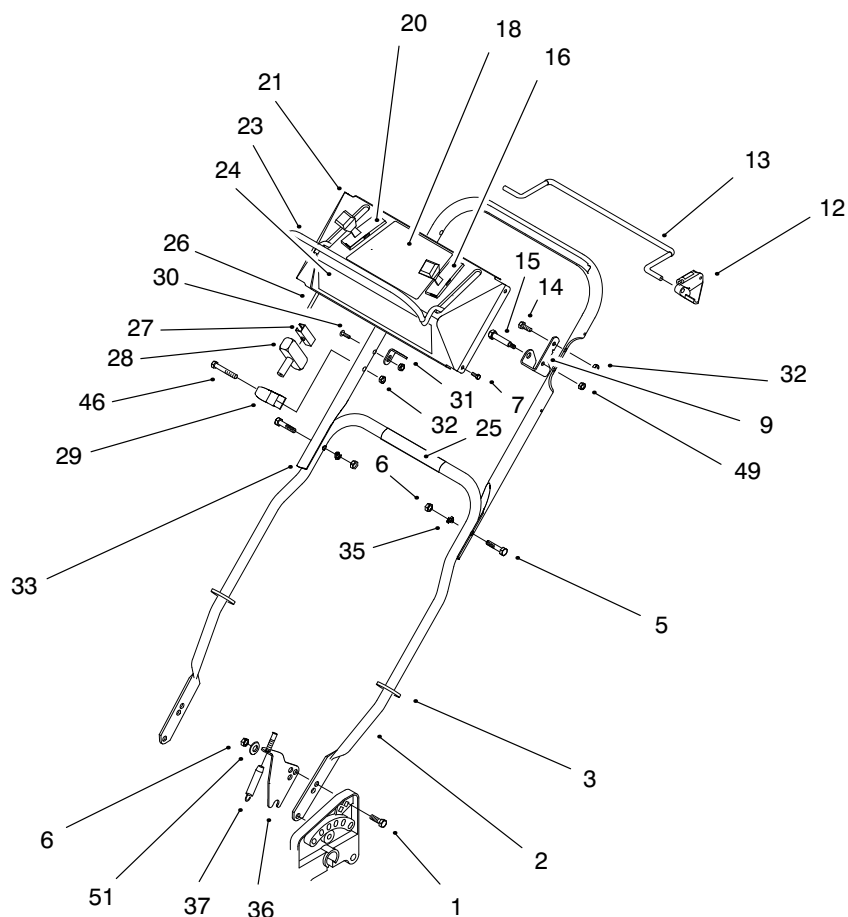

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Bolt-CARR	35	609739	2	Washer
2	92-6537-05	1	Handle Section-Lower	36	92-7899-03	1	Bracket-Traction
3	614249	5	Tie Strap				Cable
5	322-9	2	Screw-HH	37	92-6518	1	Cable
6	3296-29	4	Nut-Lock	46	321-51	1	Bolt-Hex
7	92-9665	4	Screw-Phil	49	3296-56	1	Nut-Lock
9	92-1094	1	Bail Stop Bracket	51	3256-23	2	Washer-Flat
12	92-5412	1	Stop-Pivot				
13	92-1001-03	1	Bail-Sp Control				
14	321-4	1	Screw-HH				
15	613050	1	Bolt				
16	95-7410	1	Throttle Cable				
18	98-8349	1	Decal-Control Panel				
20	92-8926	1	Control-Speed				
21	95-1710-03	1	Panel-Control				
23	92-1093	1	Engine Control Bail				
24	93-0297	1	Decal-Console				
25	93-7266	1	Decal-Operation				
26	95-7411	1	Cable-Control				
27	612824	1	Clip-Rope				
28	612825	1	Handle-Starter				
29	93-7383	1	Guide-Rope				
30	92-2268	1	Handle Screw				
31	92-2928	1	Bracket-Cable Anchor				
32	3296-73	3	Nut-Lock				
33	92-1092-05	1	Handle-Upper				

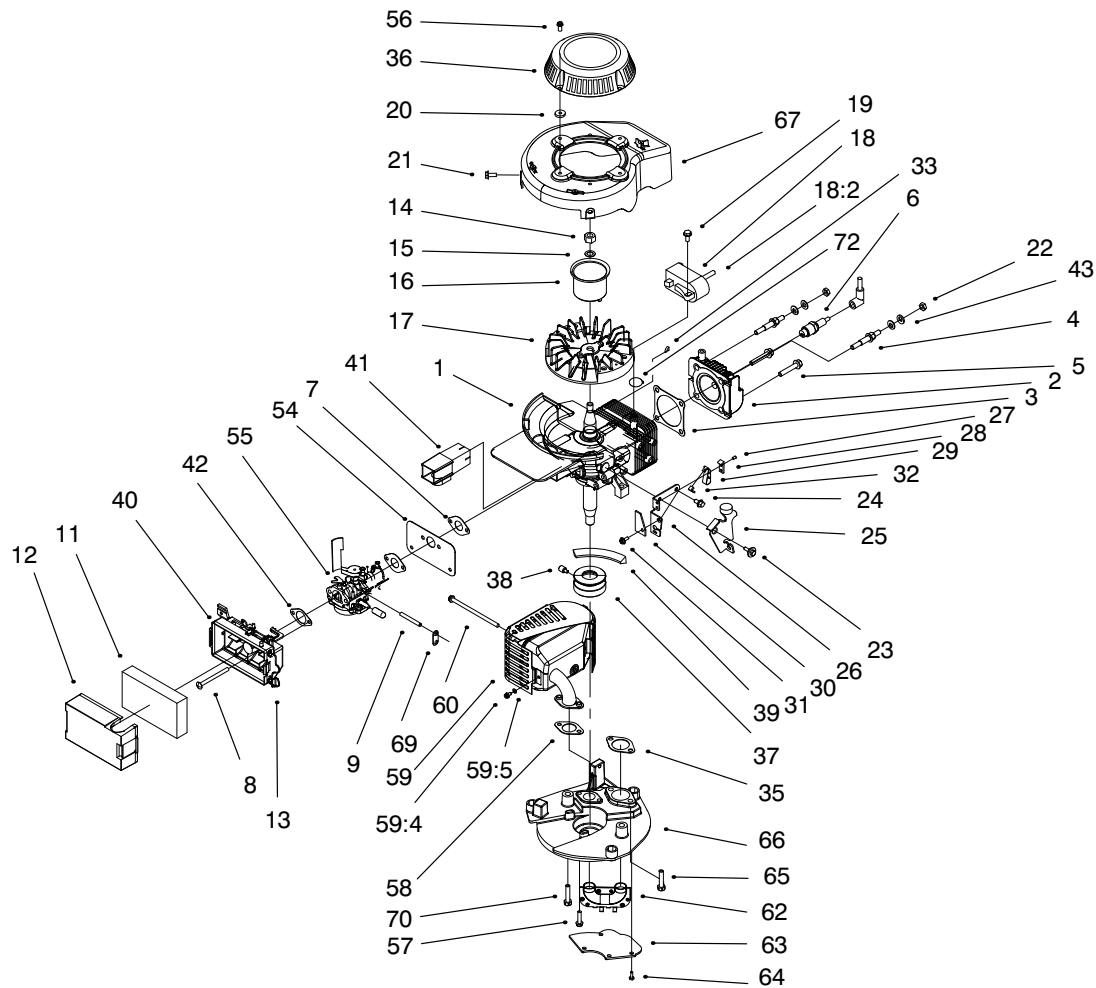


Sheet No.:A3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	E-S/Block Ser.
2	94-5776	1	Head-(Mach)
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	44-3170	1	Primer Hose
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Fil.
14	130743	1	Nut
15	316959	1	Washer-Lock
16	612949	1	Hub Starter
17	95-1866	1	Flywheel-Machined
18	92-1152	1	Ignition-Cd
18:2	681678	1	Ht Lead&cover
18:2	684698	1	Cover & Term. Ay
19	613208	2	Screw-Cd Mtg
20	98-4478	4	Spacer
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate Ay


Ref. No.	Part No.	Qty.	Description
26	84-7820	1	Plate-Brake Mtg
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	53-4690	1	Stop-Gr Strap
31	12-5450	1	Screw-Special
32	98-7037	1	Wire - Lead
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	684566	1	Starter Assy Sm
37	95-1878	1	Pulley
38	613227	1	Screw-Set
39	92-1043	1	V-Belt
40	95-5588	1	Base Ay-(Air Filter)
41	95-5578	1	Tunnel
42	95-7613	1	Gasket-Filter
43	3290-456	4	Washer-Belleville
54	98-1388	1	Shield - Carb.
55	98-7042	1	Carburetor ASM With Gaskets
56	98-4484	4	Screw Sems
57	613208	2	Screw-Cd Mtg
58	98-1392	1	Gasket
59	99-2904	1	Muffler And Guard ASM
59:4	98-1394	2	Screw-HWH

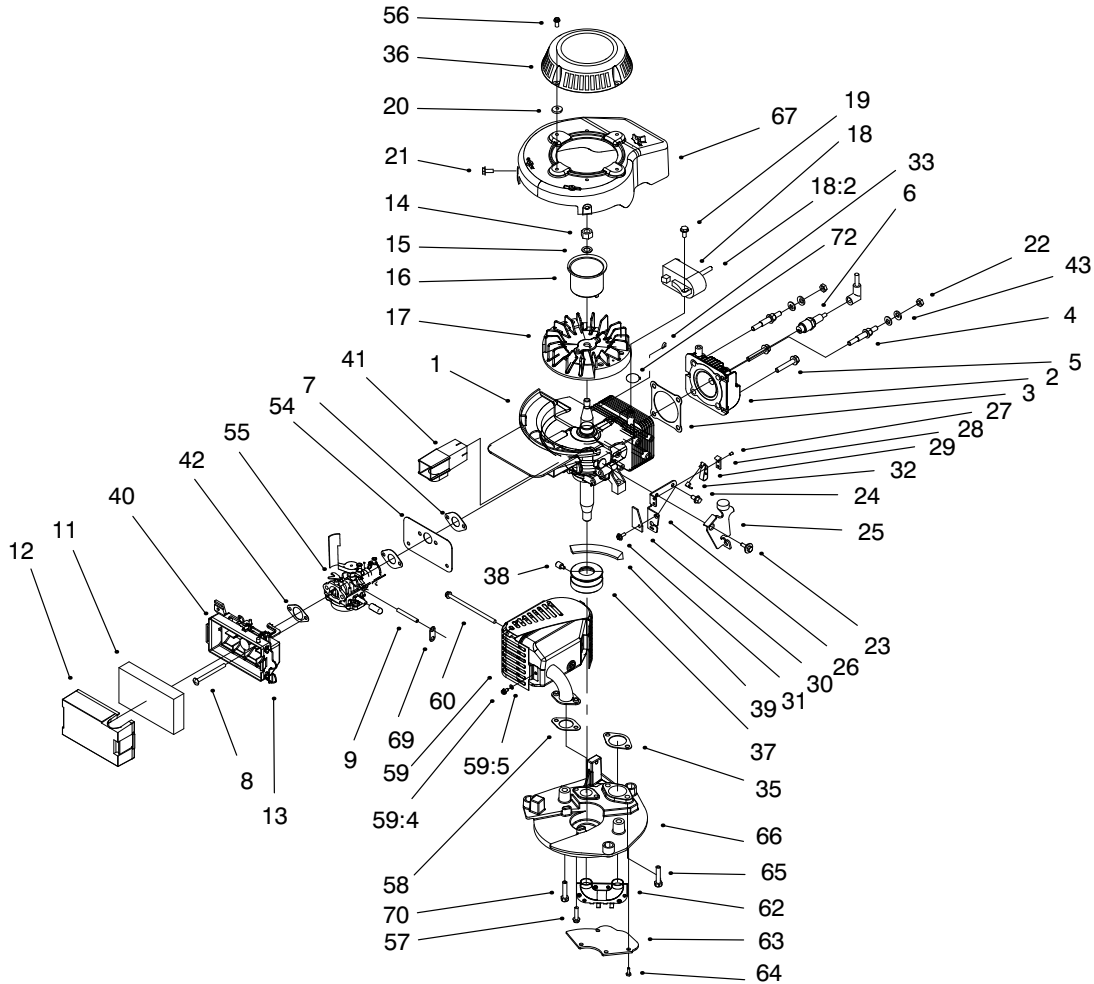

Sheet No.:A3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
59:5	3254-1	2	Washer-Lock/Int				
60	611228	1	Bolt-Console				
62	98-1557	1	Pipe-Transfer				
63	98-1591	1	Cover-Muffler				
64	700822	4	Screw-HH				
65	322-17	2	Screw-HH				
66	98-1383	1	Mtg. Plate				
67	98-4467	1	Assembly - Shroud				
69	95-7615	1	Hose-Retainer				
70	613233	2	Screw H.hd.wash				
72	317893	1	Strap-Tie				

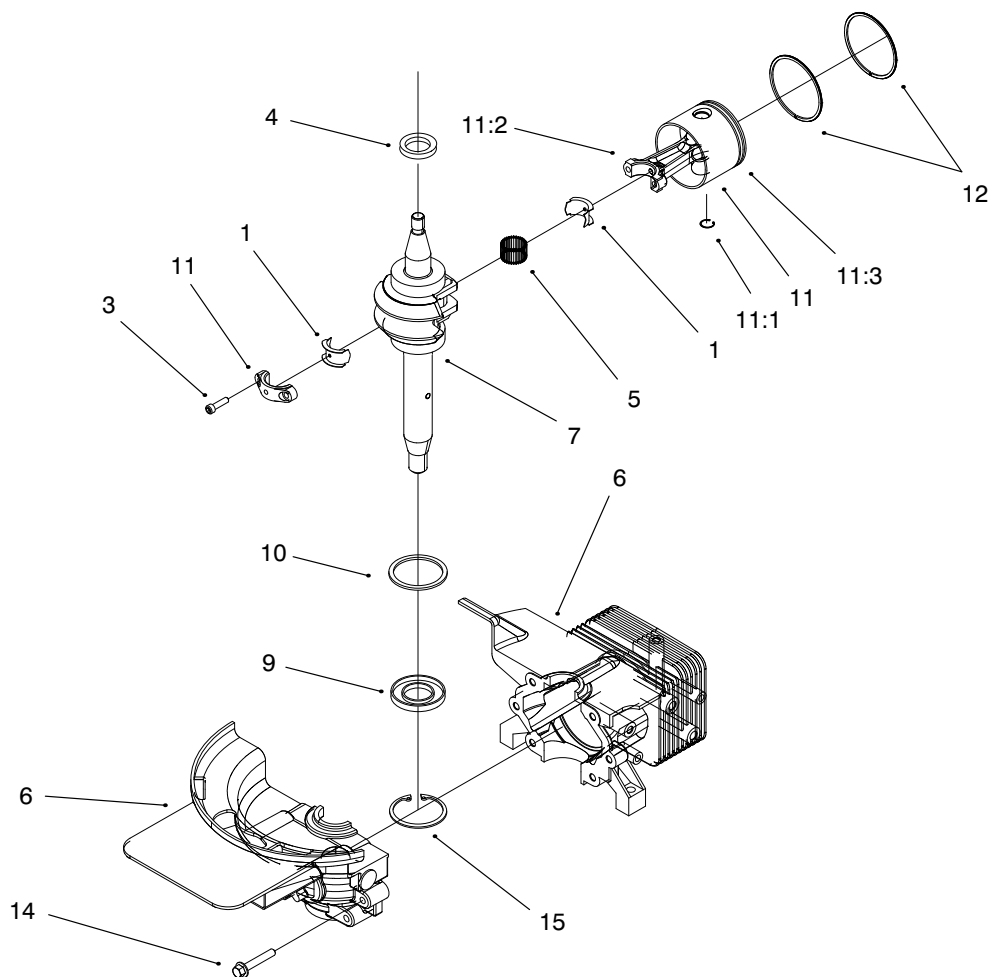


Sheet No.:A5

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner Ay
†2	610372	2	Sealer–Loctite
†2	609790	2	Sealant–50cc #2
3	611393	4	Screw–Rod
4	611396	1	Seal– Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
7	99–2920	1	Crankshaft And Bearing ASM For Service
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston&rod Ay
11:1	303712	2	Ring– Retaining
11:2	95–7629	1	Connecting Rod ASM
11:3	95–7628	1	Piston ASM With Piston Rings
12	95–7626	1	Ring Set – Service
14	94–5781	12	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description


† Not Illustrated

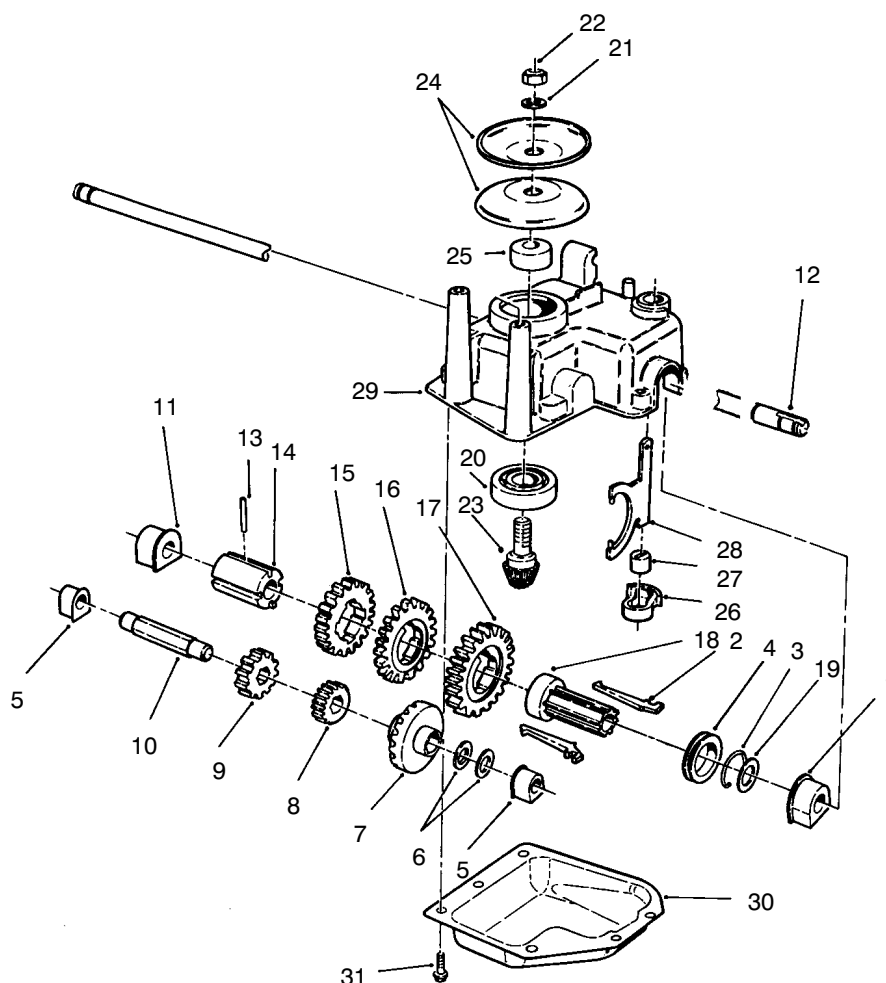

Sheet No.:300

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output Shaft	27	29-9570	1	Bushing-Yoke
2	76-0760	2	Key-Shift	28	60-8870	1	Yoke-Shift
3	65-5250	1	Clip-Spring	29	60-8710	1	Gearcase-Upper 3 Sp
4	76-0770	1	Collar-Shift	30	60-8730-03	1	Cover-Gearcase
5	60-8750	2	Bushing	31	49-2040	6	Screw-HH
6	36-4791	2	Washer-Thrust				
7	55-3760	1	15 T Pinion				
8	55-3780	1	Pinion 20t 2nd Gear				
9	55-3800	1	Pinion 25t 3rd Gear				
10	60-8800	1	Shaft-Intermediate				
11	60-8850	1	Bushing-Output				
12	65-4770	1	Shaft-Output				
13	3285-19	1	Pin-Spirol				
14	60-8790	1	Sleeve-Gear				
15	55-3810	1	Gear 39t 3rd Gear				
16	55-3790	1	Gear 44t 2nd Gear				
17	55-3770	1	Gear 49t 1st Gear				
18	76-0780	1	Sleeve-Shift Key				
19	36-4780	1	Washer-Thrust				
20	38-7820	1	Bearing-Ball				
21	3256-24	1	Washer-Flat				
22	3296-5	1	Nut-Lock				
23	92-5790	1	Pinion-Bevel				
24	100-1176	2	Pulley-Half				
25	92-5791	1	Spacer-Pulley				
26	60-8810	1	Retainer-Shift-Fork				

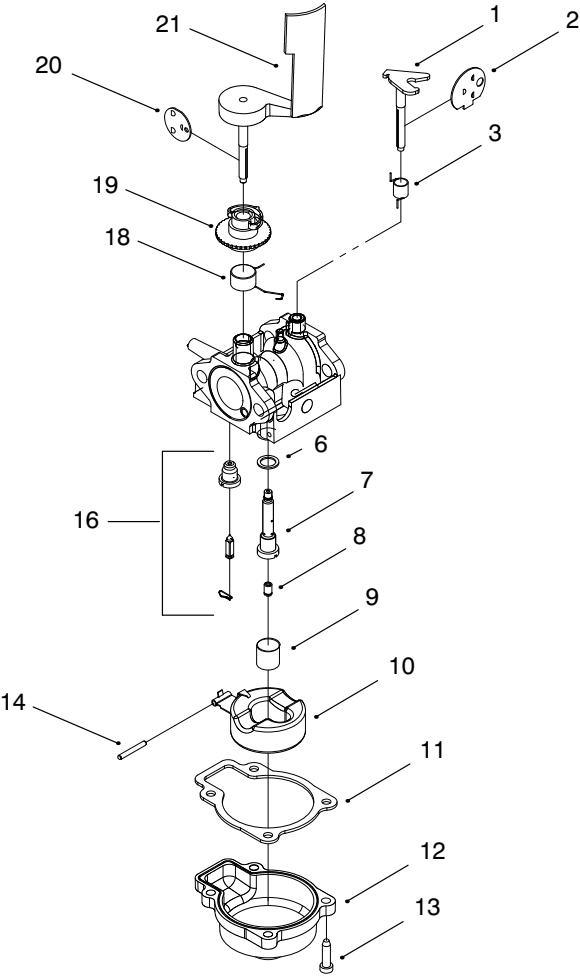

Sheet No.:A6

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc - Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet - Main 77.5				
9	94-5787	1	Filter - Fuel				
10	95-1899	1	Float&arm Ay				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Gov.				
19	610834	1	Airvane-Collar				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane&shaft				

Lawn—Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	5	14	1	Nut
146501	5	22	2	Nut
303259	2	14	1	Washer
303712	7	11:1	2	Ring—Retaining
306531	3	21	1	Nut—Throttle Cable
314576	3	22	1	Screw—Throttle Cable
316959	5	15	1	Washer—Lock
317893	6	72	1	Strap—Tie
603164	3	1	1	Nut—Blade
603567	1	30	2	Bolt—Wheel
605255	2	15	1	Washer—Flat
607199	5	33	1	Key
608175	1	11	1	Toe Bar 21
608311	3	18	4	Locknut
608850	9	13	4	Screw—HH
609739	4	35	2	Washer
609790	7	2	2	Sealant—50cc #2
609830	3	27	2	Spring
610358	2	21	2	Nut—Lock
610372	7	2	2	Sealer—Loctite
610383	5	13	1	Retainer—Fil.
610834	9	19	1	Airvane—Collar
611228	6	60	1	Bolt—Console
611393	7	3	4	Screw—Rod
611396	7	4	1	Seal—Oil
612383	9	6	1	Washer
612507	5	8	2	Screw
612543	3	16	1	Blade—21" Whirl
612782	3	4	1	Gas Line
612824	4	27	1	Clip—Rope
612825	4	28	1	Handle—Starter
612949	5	16	1	Hub Starter
613050	4	15	1	Bolt
613208	5	19	2	Screw—Cd Mtg
613208	5	57	2	Screw—Cd Mtg
613227	5	38	1	Screw—Set
613233	6	70	2	Screw H.hd.wash
614249	3	38	1	Tie Strap
614249	4	3	5	Tie Strap
614426	2	27	2	Washer—Stepped
614677	1	24	2	Screw—Sems
677525	3	2	1	ASM—Plate & Collar
677982	7	1	1	Liner Ay
681678	5	18:2	1	Ht Lead&cover
683911	7	5	1	Bearing—Needle
684159	1	29	2	Wheel & Tire
684566	5	36	1	Starter Assy Sm
684698	5	18:2	1	Cover & Term. Ay
700094	5	21	2	Screw—HH
700822	6	64	4	Screw—HH
12-5450	5	31	1	Screw—Special
12-5450	1	5	2	Screw—Thread Forming
24-7920	2	13	1	Cover—Drive Shaft
29-9570	8	27	1	Bushing—Yoke
36-4780	8	19	1	Washer—Thrust
36-4791	8	6	2	Washer—Thrust
38-7820	8	20	1	Bearing—Ball
40-1940	1	18	4	Washer
44-2750	3	14	1	Body—Primer
44-3170	5	9	1	Primer Hose
46-5551	1	2	2	Bushing—Spacer
46-6811	1	12	2	Screw—HWH

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
47-2480	3	7	1	Rope Stop
47-2900	2	8:3	2	Bushing
49-2040	1	22	7	Screw-HH
49-2040	8	31	6	Screw-HH
50-1170	5	6	1	Plug-Spark
53-4690	5	30	1	Stop-Gr Strap
55-3760	8	7	1	15 T Pinion
55-3770	8	17	1	Gear 49t 1st Gear
55-3780	8	8	1	Pinion 20t 2nd Gear
55-3790	8	16	1	Gear 44t 2nd Gear
55-3800	8	9	1	Pinion 25t 3rd Gear
55-3810	8	15	1	Gear 39t 3rd Gear
60-8710	8	29	1	Gearcase-Upper 3 Sp
60-8730-03	8	30	1	Cover-Gearcase
60-8750	8	5	2	Bushing
60-8770	8	1	1	Bushing-Output Shaft
60-8790	8	14	1	Sleeve-Gear
60-8800	8	10	1	Shaft-Intermediate
60-8810	8	26	1	Retainer-Shift-Fork
60-8821	2	10	1	Lever-Shift
60-8850	8	11	1	Bushing-Output
60-8870	8	28	1	Yoke-Shift
60-9010	5	29	1	Strap-Ground
65-2720	2	3	4	Ring-Retaining
65-4710	2	7	2	Ring-Friction
65-4720	2	25	2	Spring-Compression
65-4730	2	22	2	Washer-Thrust
65-4740	2	4	4	Washer-Thrust
65-4750	2	24	2	Gear-Pinion
65-4760	2	23	2	Washer
65-4770	8	12	1	Shaft-Output
65-5250	8	3	1	Clip-Spring
66-6040	2	6	1	Key-Locking RH
66-6050	2	5	1	Key-Rocking LH
66-7460	3	15	1	Bulb-Primer
68-5920	3	41	3	Washer
70-9760	2	8:2	2	Bushing
76-0760	8	2	2	Key-Shift
76-0770	8	4	1	Collar-Shift
76-0780	8	18	1	Sleeve-Shift Key
82-8780	2	12	1	Retainer-Cable
84-7820	5	26	1	Plate-Brake Mtg
92-1001-03	4	13	1	Bail-Sp Control
92-1006	1	31	2	ASM-Spring Arm
92-1008	1	32	4	Knob-Height Adjust
92-1043	5	39	1	V-Belt
92-1057	2	1	2	Bolt-Shoulder
92-1092-05	4	33	1	Handle-Upper
92-1093	4	23	1	Engine Control Bail
92-1094	4	9	1	Bail Stop Bracket
92-1152	5	18	1	Ignition-Cd
92-2268	4	30	1	Handle Screw
92-2925	5	28	1	Strap-Insulation
92-2928	4	31	1	Bracket-Cable Anchor
92-4856	1	28	2	Bolt-Shoulder
92-5412	4	12	1	Stop-Pivot
92-5790	8	23	1	Pinion-Bevel
92-5791	8	25	1	Spacer-Pulley
92-6376	9	21	1	Air Vane&shaft
92-6389	9	14	1	Pin
92-6518	4	37	1	Cable
92-6535	2	17	2	Cap-End

*Not Illustrated

Lawn—Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6537-05	4	2	1	Handle Section—Lower
92-6539	2	20	1	ASM—Spring Arm
92-6540	2	19	1	ASM—Spring Arm
92-7699-03	1	3	1	Bracket—Actuator
92-7736	1	14	1	Shield—Trailing
92-7746	2	8	2	ASM—Hgt Adj Arm
92-7748	1	4	2	Screw
92-7869	1	1	1	ASM—Gear Case
92-7899-03	4	36	1	Bracket—Traction Cable
92-8926	4	20	1	Control—Speed
92-9551	3	30	1	Decal — Recoil
92-9665	4	7	4	Screw—Phil
92-9673	1	21	2	Bolt—Shoulder
92-9691	9	12	1	Chamber—Float
92-9697	9	16	1	Val/Seat—Float
93-0297	4	24	1	Decal—Console
93-4105	1	15	1	Decal—Danger
93-4306	3	13	1	Spring—Compression
93-4312	5	25	1	Brake Plate Ay
93-7009	1	10	1	Decal—Deflector Danger
93-7266	4	25	1	Decal—Operation
93-7383	4	29	1	Guide—Rope
93-7415-03	1	35	1	Guard—Plate
94-1609	2	26	2	Cover—Wheel
94-1610	1	25	3	Grommet—Plastic
94-5764	7	9	1	Seal—Oil
94-5765	7	10	1	Ring—Retaining
94-5776	5	2	1	Head—(Mach)
94-5778	5	3	1	Gasket—Head
94-5779	5	4	2	Stud
94-5780	5	5	2	Bolt — Head
94-5781	7	14	12	Screw
94-5787	9	9	1	Filter — Fuel
94-5788	9	2	1	Disc — Choke
94-5795	5	7	2	Gasket—Intake
95-1710-03	4	21	1	Panel—Control
95-1714	2	2	2	ASM—Whl
95-1778	5	35	1	Gasket—Exhaust
95-1866	5	17	1	Flywheel—Machined
95-1870	5	23	1	Screw—Shoulder
95-1871	5	24	1	Screw—HWH
95-1878	5	37	1	Pulley
95-1899	9	10	1	Float&arm Ay
95-5574	5	11	1	Filter—Air
95-5577	5	12	1	Cover—Air Filter
95-5578	5	41	1	Tunnel
95-5581	9	1	1	Shaft—Choke
95-5583	9	3	1	Spring—Choke
95-5588	5	40	1	Base Ay—(Air Filter)
95-7052	1	9	1	Plate—Cover
95-7403-03	1	19	2	Bracket—Wheel Height Adj
95-7410	4	16	1	Throttle Cable
95-7411	4	26	1	Cable—Control
95-7613	5	42	1	Gasket—Filter
95-7615	6	69	1	Hose—Retainer
95-7626	7	12	1	Ring Set — Service
95-7628	7	11:3	1	Piston ASM With Piston Rings
95-7629	7	11:2	1	Connecting Rod ASM
95-7631	7	6	1	Cylinder And Crankcase ASM
95-7636	5	1	1	E—S/Block Ser.
98-1357	9	8	1	Jet — Main 77.5
98-1362	9	11	1	Gasket

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-1383	6	66	1	Mtg. Plate
98-1388	5	54	1	Shield - Carb.
98-1392	5	58	1	Gasket
98-1394	5	59:4	2	Screw-HWH
98-1557	6	62	1	Pipe-Transfer
98-1591	6	63	1	Cover-Muffler
98-1598	3	17	1	Guard-Engine
98-4459-03	3	24	1	Tank Bkt ASM
98-4467	6	67	1	Assembly - Shroud
98-4478	5	20	4	Spacer
98-4480	3	3	3	Screw-Sems
98-4484	5	56	4	Screw Sems
98-4493	1	6	1	Cover-Drive
98-4497	3	23	1	Tank-Fuel
98-7001	9	7	1	Nozzle
98-7011	9	18	1	Spring-Gov.
98-7037	5	32	1	Wire - Lead
98-7042	5	55	1	Carburetor ASM With Gaskets
98-7046	7	15	1	Ring - Retaining
98-7047	9	20	1	Disc-Throttle
98-8344	3	20	1	ASM-Fuel/Oil Cap
98-8349	4	18	1	Decal-Control Panel
99-1503	1	26	1	Decal-Deck 550cs
99-1515-03	3	25	1	Guard-Brake
99-1517	3	6	1	Decal-Lawn Boy
99-1518	3	5	1	Decal-Fuel Mix
99-2904	5	59	1	Muffler And Guard ASM
99-2920	7	7	1	Crankshaft And Bearing ASM For Service
99-5204	1	7	1	H0using-21" Sp
100-1176	8	24	2	Pulley-Half
302-56	2	8:4	2	Fitting-Grease
321-4	4	14	1	Screw-HH
321-51	4	46	1	Bolt-Hex
322-3	3	12	2	Screw-HH
322-9	4	5	2	Screw-HH
322-17	6	65	2	Screw-HH
3230-29	4	1	2	Bolt-CARR
3253-4	3	19	2	Washer-Lock
3254-1	6	59:5	2	Washer-Lock/Int
3256-23	4	51	2	Washer-Flat
3256-24	8	21	1	Washer-Flat
3272-10	2	11	1	Pin-Cotter
3285-19	8	13	1	Pin-Spirol
3290-413	1	20	2	Washer-Spring
3290-443	3	8	1	Staple
3290-456	5	43	4	Washer-Belleville
3290-459	5	27	2	Rivet-Plastic
3296-5	8	22	1	Nut-Lock
3296-29	4	6	4	Nut-Lock
3296-39	3	42	2	Locknut
3296-39	1	17	2	Nut-Lock
3296-42	1	36	2	Nut-Lock
3296-56	4	49	1	Nut-Lock
3296-73	4	32	3	Nut-Lock
32105-15	1	16	2	Screw-HH
32144-70	2	9	1	Screw-TAP
32144-85	2	18	2	Screw-HH

*Not Illustrated