


TORO®

MODEL NO. 33455-80001 & UP

PARTS CATALOG

REELMASTER® TRANSPORT FRAME 5 UNIT

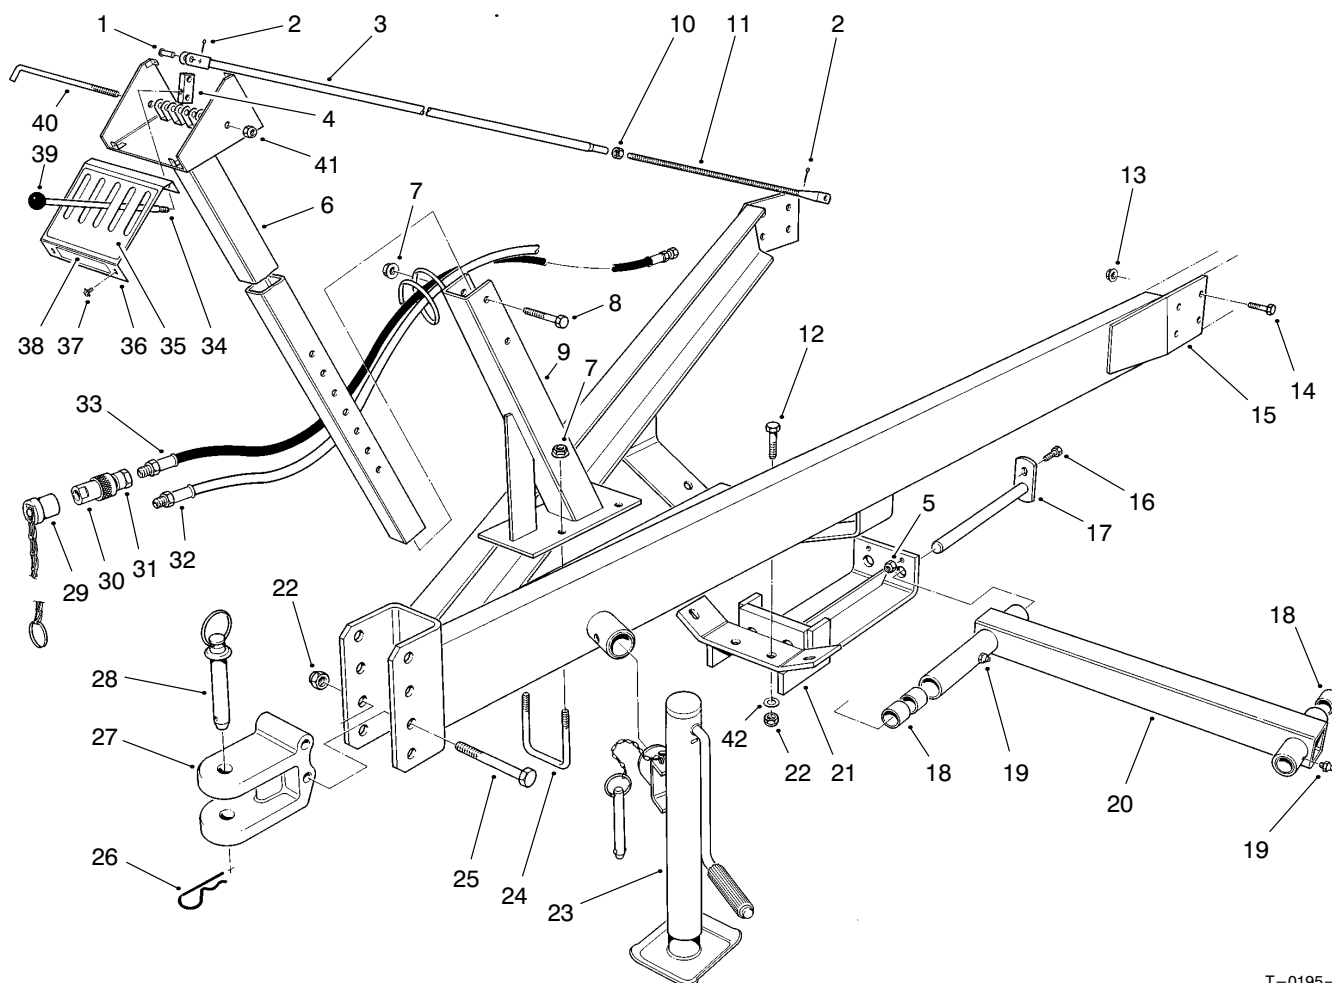


T-0195-2

CONTROL TOWER & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	283-6	Pin-Clevis	3
2	3272-10	Pin-Cotter	6
3	47-3880	Linkage-Control	3
4	47-3620	Lever-Block, Pivot	3
5	32153-3	Nut-Lock	2
6	47-3680	Tower-Control, Upper	1
7	3290-357	Nut-Flange	6
8	323-13	Screw-HH	2
9	47-3380	Tower-Control, Lower	1
10	3217-8	Nut-Hex	3
11	47-3630	Rod-Linkage, Control	3
12	327-6	Screw-HH	4
13	32128-23	Nut-HFH	8
14	325-6	Screw-HH	8
15	55-7380	Tongue	1
16	322-6	Screw-HH	2

Ref. No.	Part No.	Description	No. Used
17	26-8250	Pin-Arm, Lift	2
18	3-0348	Bushing	12
19	302-5	Fitting-Grease	4
20	47-3250	Arm-Lift #2 & 3 Cutting Units (Incl. Ref. #18)	2
21	26-8160	Support-Arm, Lift	1
22	3296-24	Nut-Lock	6
23	98-5016	Asm-Jack	1
24	47-3460	U-Bolt	2
25	327-23	Screw-HH	2
26	3290-343	Pin-Cotter, Hair	1
27	47-3550	Hitch-Clevis	1
28	13-6200	Pin-Pointed (Incl. Ref. #26)	1
29	49-8180	Cap-Dust	2
30	353-819	Body-Coupler, Quick Disc.	2

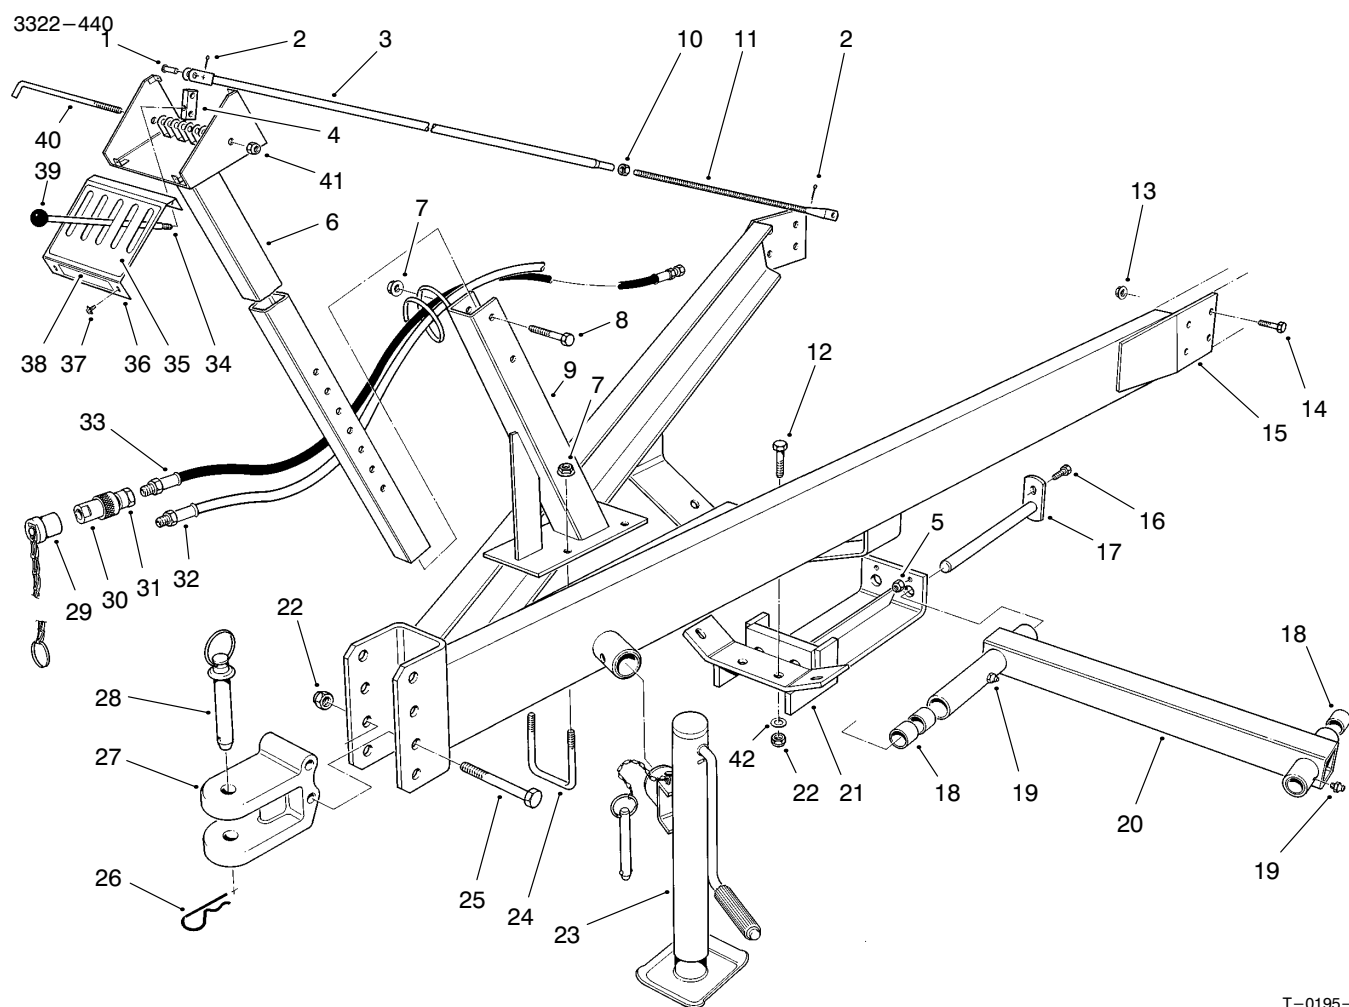


T-0195-2

CONTROL TOWER & LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	353-820	Tip-Coupler, Quick Disc.	2
32	52-5990	Hose-Hydraulic (Orange)	1
33	52-5991	Hose-Hydraulic (Black)	1
34	47-3810	Lever-Valve	3
35	47-5600	Decal-Operation	1
36	47-3820	Cover-Column, Control	1

Ref. No.	Part No.	Description	No. Used
37	3234-13	Screw-HH	4
38	47-3770	Decal-Manual, Operator's	1
39	3-0631	Knob	3
40	47-3450	Pin-Pivot	1
41	3296-29	Nut-Lock	1
42	3256-27	Washer-Flat	4

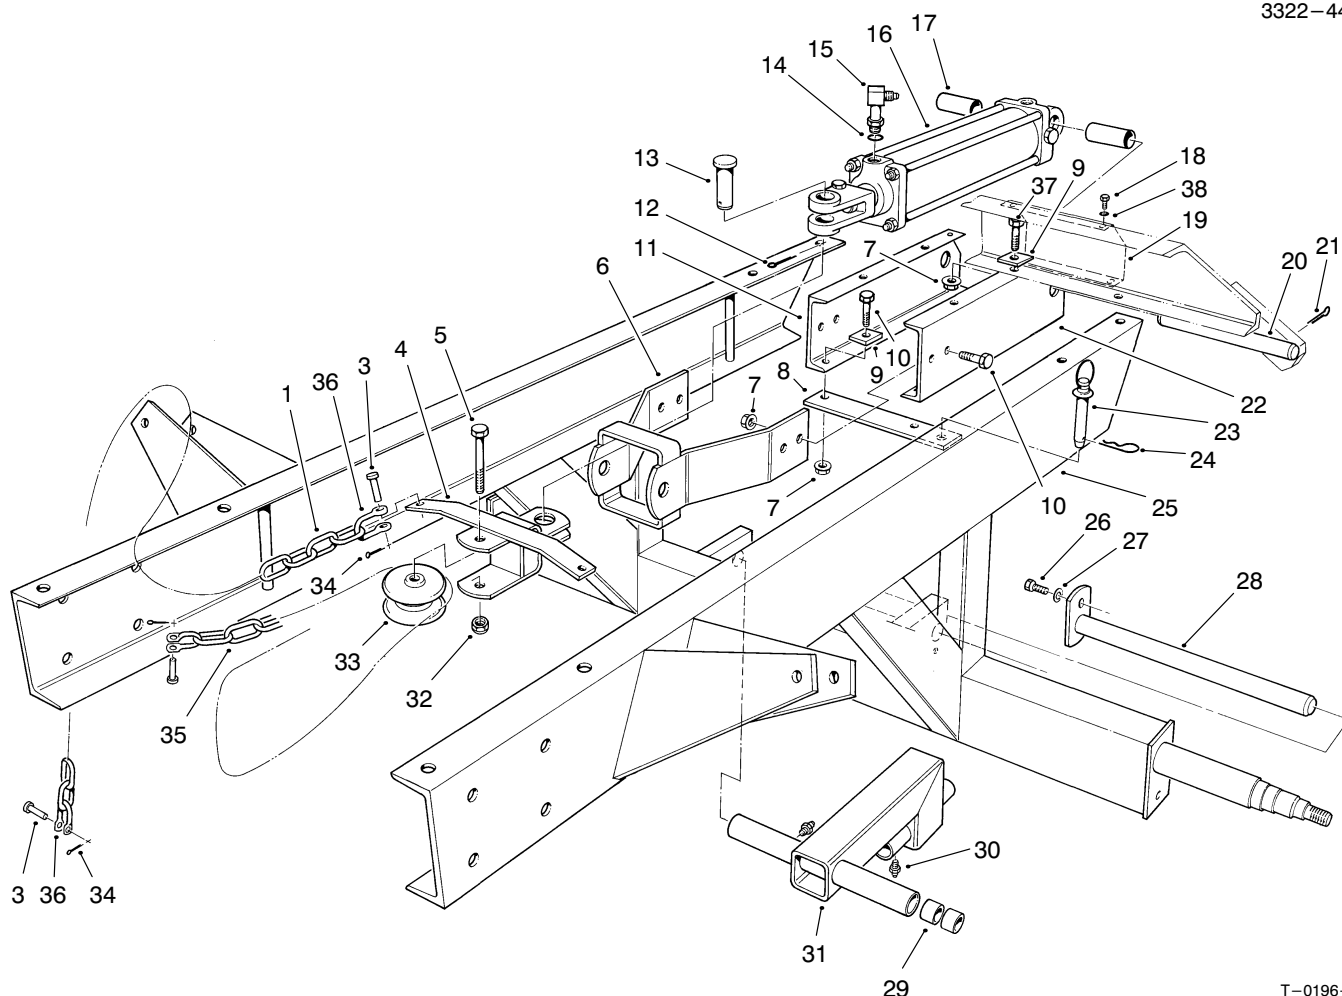


T-0196-1

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3650	Chain-Lift, No. 2 & 3 Cutting Units	2	21	3272-24	Pin-Cotter	2
3	283-10	Pin-Clevis	5	22	47-3860	Channel-LH	1
4	51-0850	Support-Pulley	1	23	13-6200	Pin-Pointed (Incl. Ref. #24)	1
5	325-17	Screw-HH	1	24	3290-343	Pin-Cotter, Hair	1
6	47-3930	Bracket-Lockup	1	25	47-3010	Frame-Trailer	1
7	32128-23	Nut-HFH	10	26	322-3	Screw-HH	1
8	47-3640	Rest-Cylinder	1	27	3253-4	Washer-Lock	1
9	3290-216	Washer-Tapered	10	28	60-9110	Bail-Pin, Lift	1
10	325-6	Screw-HH	6	29	3-0348	Bushing	6
11	47-3870	Channel-RH	1	30	302-5	Fitting-Grease	2
12	3272-13	Pin-Cotter	1	31	47-3230	Arm-Lift (Incl. Ref. #29)	1
13	26-8590	Pin-Cylinder	1	32	32153-5	Nut-Lock	1
14	237-79	O-Ring	2	33	3-2196	Sheave	1
15	353-537	Elbow-Male (Incl. Ref. #14)	2	34	3272-10	Pin-Cotter	5
16	47-3720	Cylinder-Hydraulic	1	35	47-3660	Chain-Lift, No. 1 Cut. Unit	1
17	20-4390	Tube-Spacer	2	36	5-2942	Shackle-Long	5
18	32104-17	Screw-TAP	4	37	325-7	Screw-HH	4
19	42-3550	Cover-Mount, Cylinder	1	38	3256-22	Washer-Flat	4
20	3-0144	Shaft	1	*	52-3500	Kit-Spindle, Replacement	1

*Not Illustrated

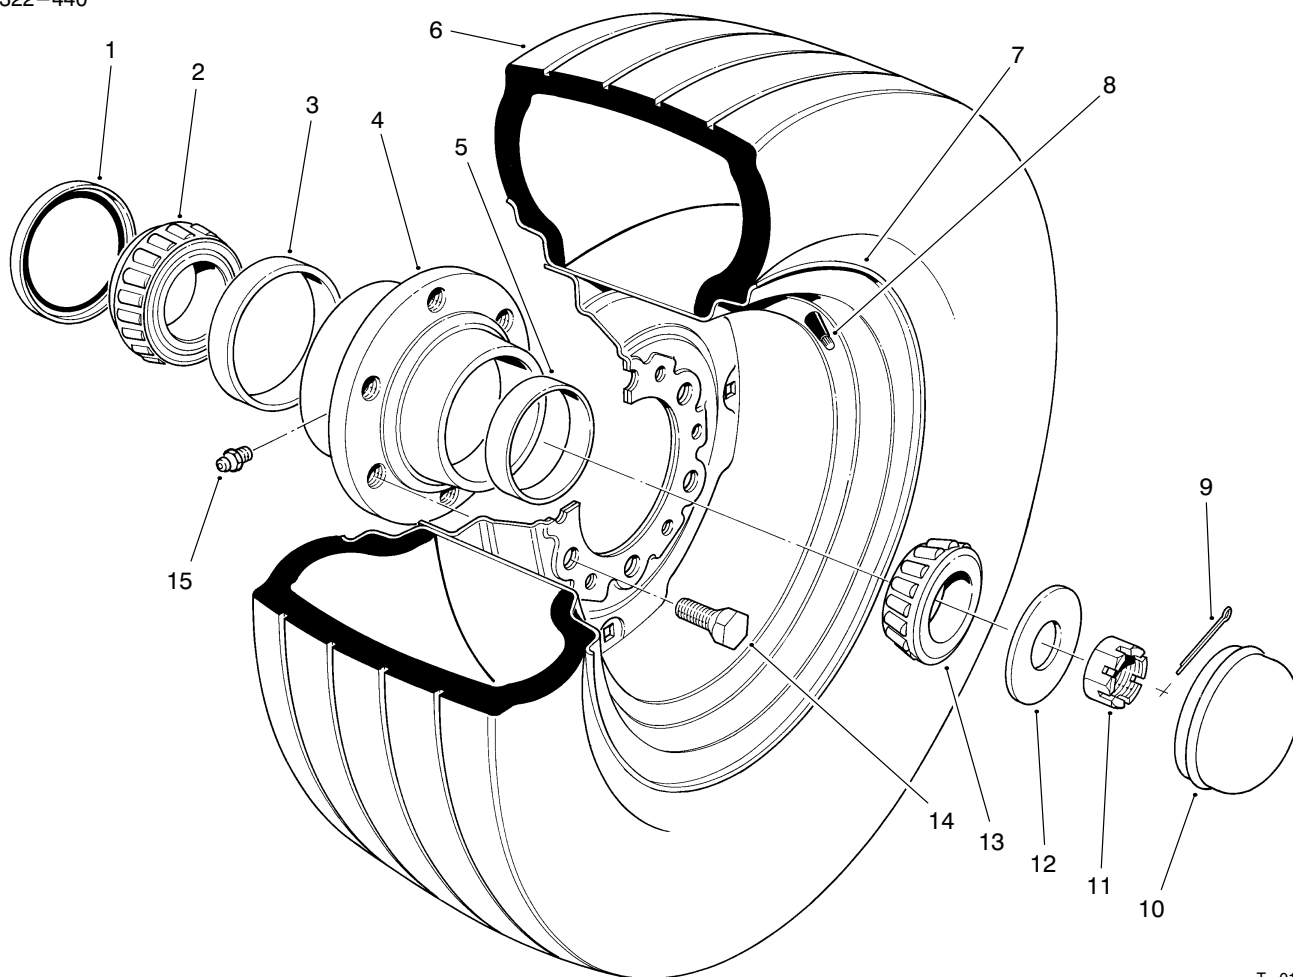


T-0197-1

WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	253-144	Seal-Grease	2
2	254-103	Cone-Bearing, Inner	2
3	254-104	Cup-Bearing	2
4	77-0650	Hub	2
		(Incl. Ref. #3, 5 & 15)	2
5	254-61	Cup-Bearing	2
6	56-7960	Tire	2
7	217-109	Wheel	2


Ref. No.	Part No.	Description	No. Used
8	232-27	Stem-Valve	2
9	3272-19	Pin-Cotter	2
10	217-111	Cap-Hub	2
11	32136-1	Nut-Slotted	2
12	47-2540	Washer	2
13	254-62	Cone-Bearing, Outer	2
14	217-103	Bolt-Wheel	12
15	302-2	Fitting-Grease	1

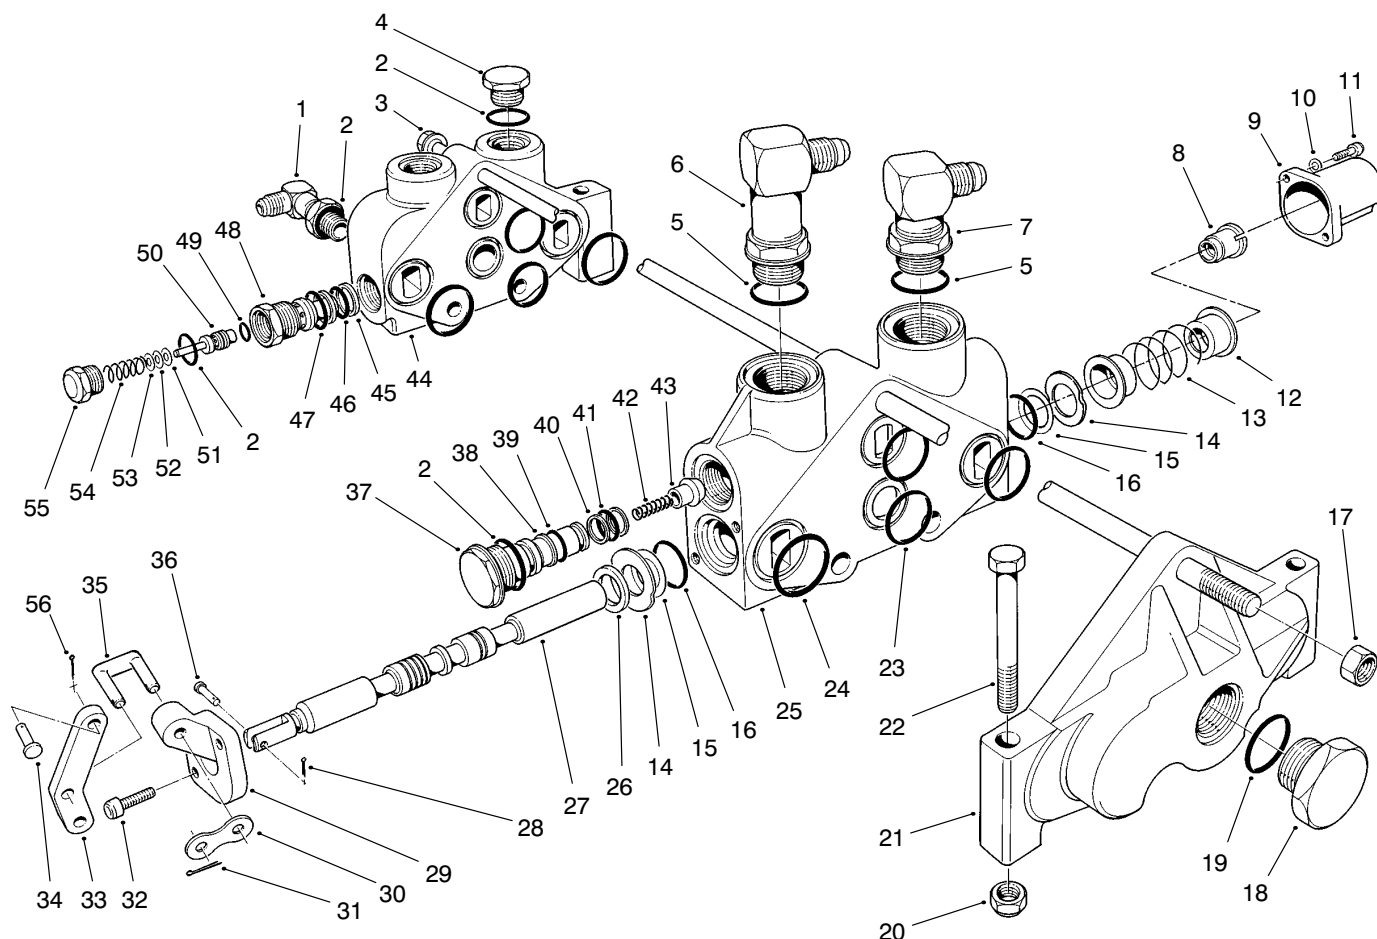

T-0198-2

HYDRAULIC VALVE ASSEMBLY NO. 63-8510

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	353-426	Elbow (Incl. Ref. #2)	2	20	32153-3	Nut-Lock	3
2	237-80	O-Ring	8	21	353-798	Plate-Cover, Right	1
3	44-7612	Bolt-HWH	3	22	322-13	Screw-HH	3
4	353-721	Asm-Plug (Incl. Ref. #2)	2	23		O-Ring	16
5	237-79	O-Ring	10	24		O-Ring	16
6	38-5540	Elbow-Male (Incl. Ref. #5)	3	25		Housing-Valve	1
7	353-537	Elbow-Male (Incl. Ref. #5)	3	*	63-8520	Section-Valve, 1 Spool (Incl. Ref. #2, 8-16, 25-27, 29 & 37-43)	5
8	52-5860	Spool-Collar	1	26	353-318	Seal-Wiper	1
9	68-4240	Bonnet	1	27		Spool-4 Way	1
10	3253-3	Washer-Lock	2	28	353-321	Pin-Cotter	5
11	353-976	Screw-Socket Head	2	29	353-324	Bracket-Handle	1
12	353-417	Collar-Spring	2	30	63-8760	Link-Connecting	3
13	44-7650	Spring-Compression	1	31	3272-1	Pin-Cotter	6
14	353-959	Plate-Retainer, Seal	2	32	52-5900	Screw-HSH	2
15	353-958	Washer-Backup	2	33	52-5670	Lever-Control (Incl. Ref. #34)	3
16	353-570	O-Ring	2	34	283-62	Pin-Clevis	3
17	3219-3	Nut-Hex	3	35	63-8760	Pin-Link	3
18	353-799	Asm-Conversion Plug (Incl. Ref. #19)	1	36	353-322	Pin	3
19	353-800	O-Ring	1	37	44-7660	Plug-Check	2
				38	353-306	Washer-Backup	2
				39	353-305	O-Ring	2

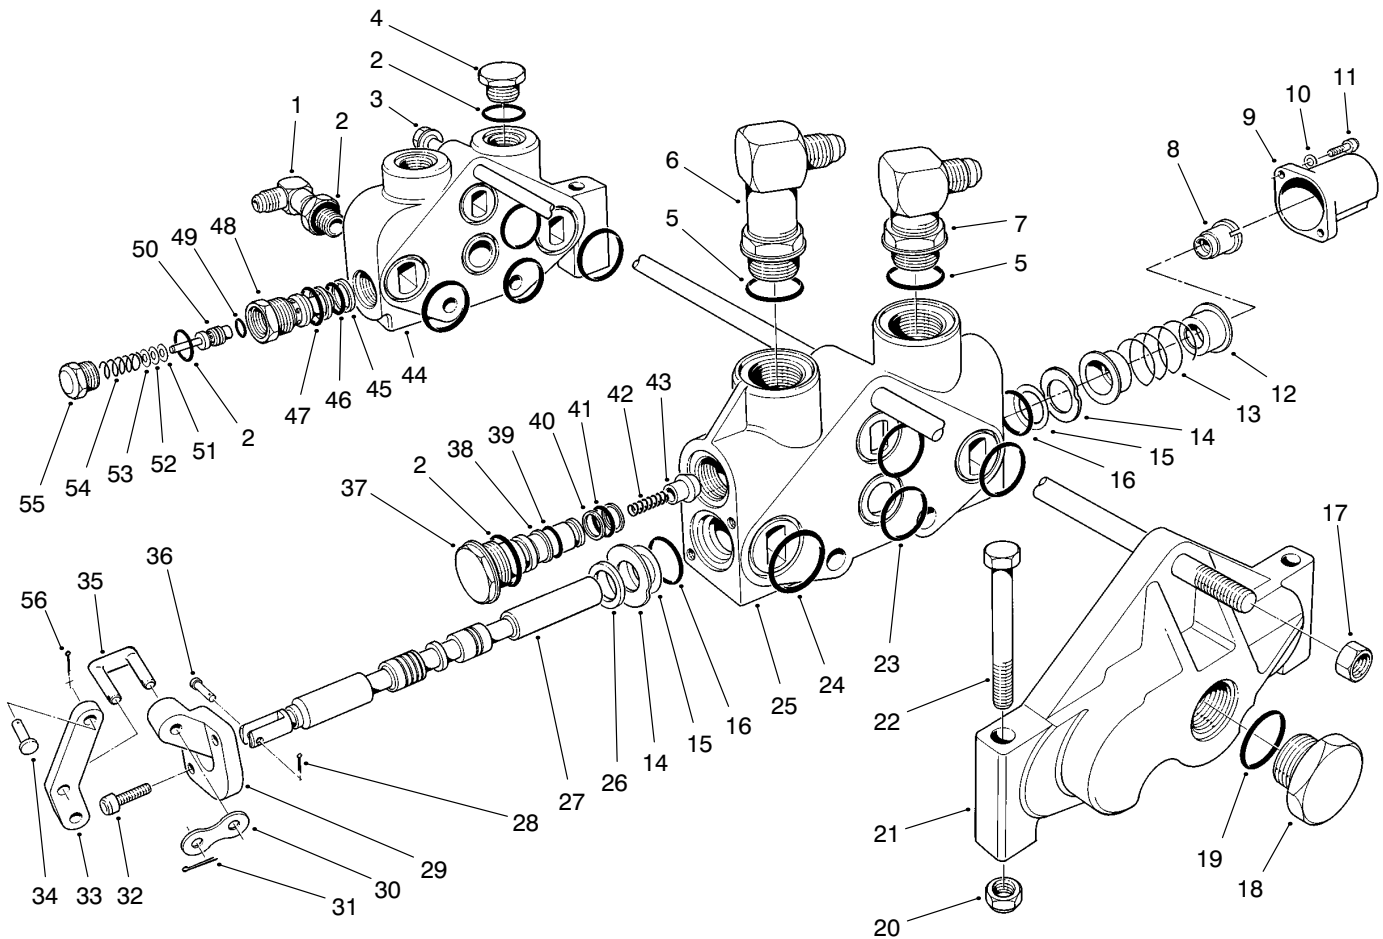

T-0198-2


HYDRAULIC VALVE ASSEMBLY NO. 63-8510 (Continued)

Ref. No.	Part No.	Description	No. Used
40	353-303	Seal-Backup	4
41	353-302	O-Ring	2
42	353-304	Poppet-Spring	2
43	353-301	Poppet-Lift, Check	2
44	44-7621	Plate-Cover, V20 L.E.	1
45	353-952	Seal-Backup	1
46	353-758	O-Ring	1
47	353-331	O-Ring	1
48	353-760	Body-"WH" Relief	1
49	353-392	Seal-Relief, Poppet	1
50	353-531	Asm-Poppet-Relief (Incl. Ref. #49)	1
51	353-328	Washer-Shim .040	A/R
52	353-329	Washer-Shim .020	A/R
53	353-330	Washer-Shim .010	A/R

Ref. No.	Part No.	Description	No. Used
54	46-2380	Spring-Relief	1
55	353-334	Cap-Relief	1
56	3272-10	Pin-Cotter	3
*	84-2190	Kit-Seal, Sectional (Incl. Ref. #23 & 24)	1
*	353-481	Asm-Plug-Load Check (Incl. Ref. #2 & 37-41)	2
*	353-515	Kit-Seal, Spool (Incl. Ref. #14-16)	1
*	63-8760	Kit-Pin, Link (Incl. Ref. #30, 31, 35 & 36)	3
*	353-743	Kit-Seal (Incl. Ref. #2 & 38-41)	1
*	353-988	Asm-Plug (Incl. Ref. #5)	3

*Not Illustrated


Note: Quantities indicated are for one valve section.

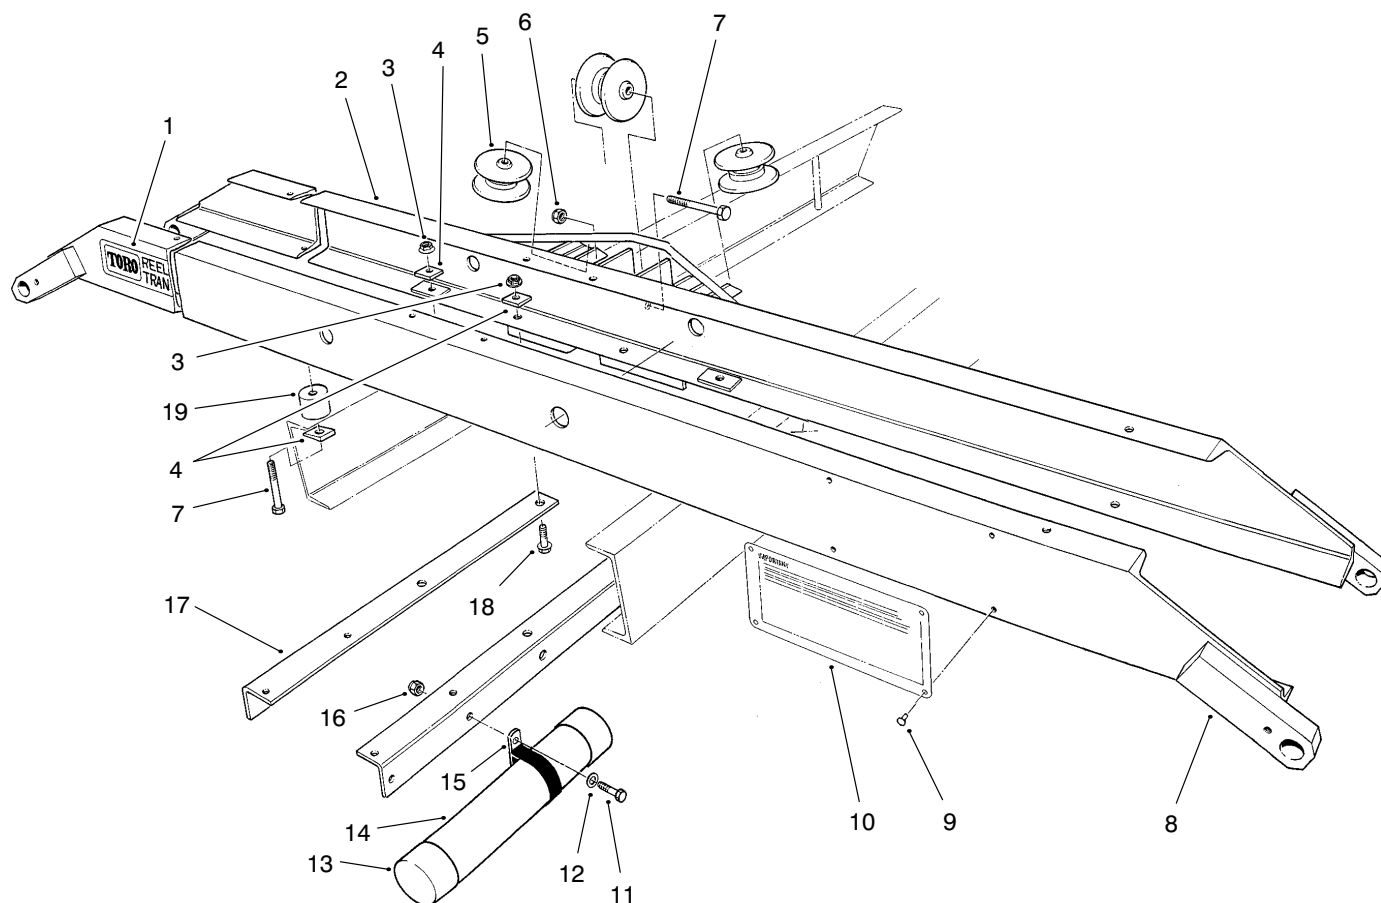

T-1876-1

FRONT CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3990	Decal-Toro	1	11	322-3	Screw-HH	2
2	47-3570	Channel-Cross, Rear	1	12	3256-2	Washer-Flat	2
3	32128-23	Nut-Flange	8	13	65-5890	Cap-Tube, Manual	2
4	3290-216	Washer-Tapered	12	14	65-5871	Tube-Manual	1
5	3-2196	Sheave	3	15	2412-102	R-Clamp	2
6	32153-5	Nut-Lock	3	16	32153-3	Nut-Lock	2
7	325-14	Screw-HH	7	17	47-3470	Support-Valve	2
8	47-3560	Channel-Cross, Front	1	18	325-6	Screw-HH	4
9	3290-274	Rivet	4	19	49-8170	Spacer	4
10	47-3900	Plate-Information	1				

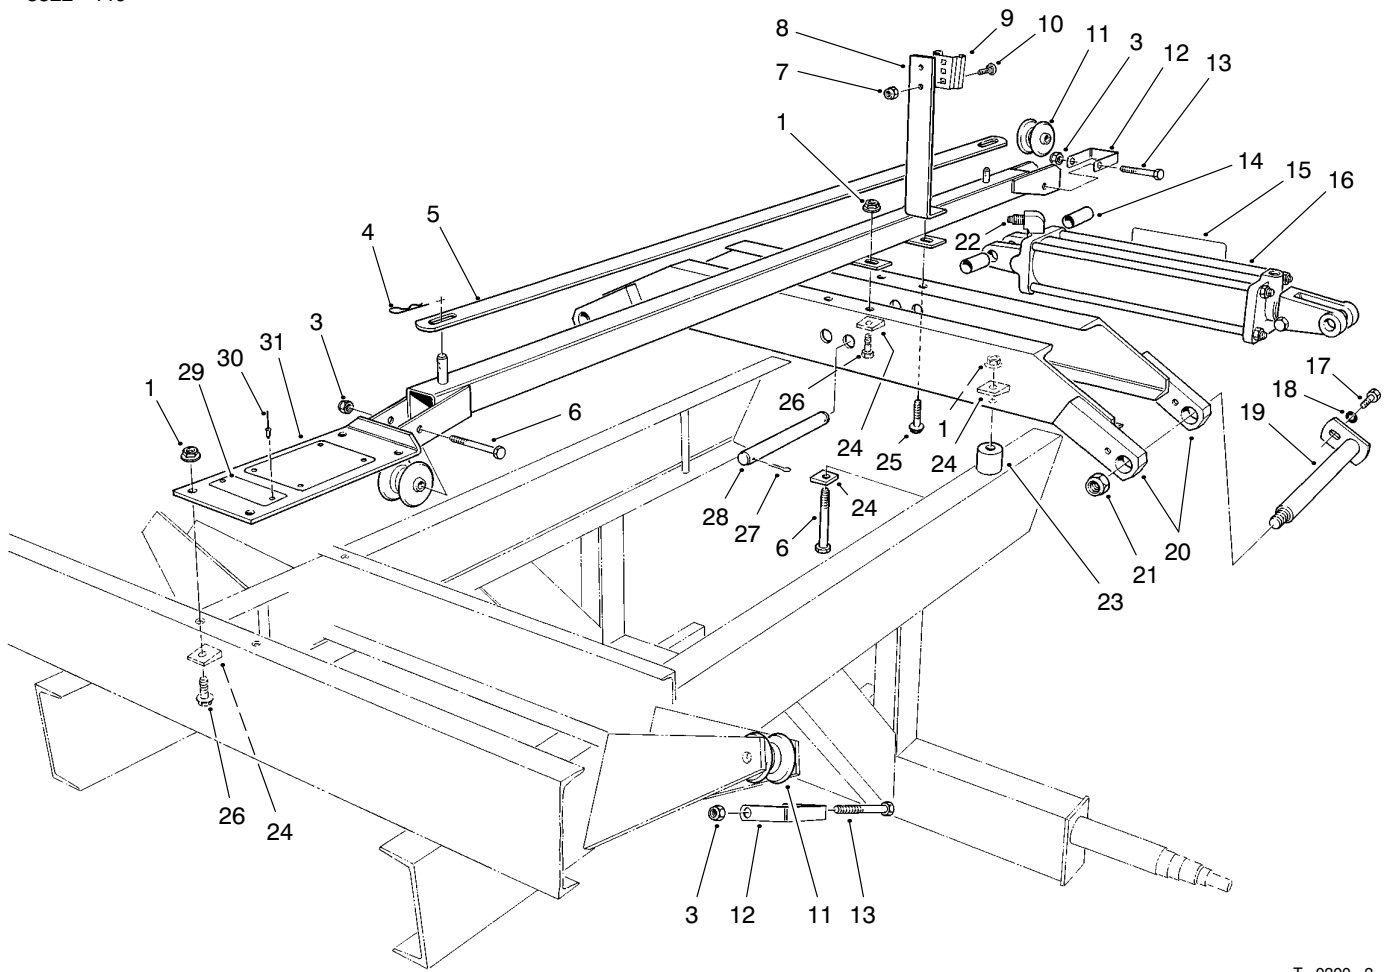


T-0200-2

REAR CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut-HFH	12
3	32153-5	Nut-Lock	4
4	3290-355	Pin-Cotter, Hair	2
5	47-3800	Strap-Locking	1
6	325-14	Screw-HH	5
7	32128-20	Nut-HFH	2
8	47-3480	Bracket-Slow Moving Vehicle	1
9	38-6200	Socket-Slow Moving Vehicle	1
10	3230-1	Bolt-Carriage	2
11	3-2196	Sheave	4
12	3-0136	Keeper-Chain	3
13	325-18	Screw-HH	3
14	20-4390	Tube-Spacer	4
15	47-3990	Decal-Toro	1

Ref. No.	Part No.	Description	No. Used
16	22-7520	Cylinder-Hydraulic, 10"	2
17	322-3	Screw-HH	2
18	3253-4	Washer-Lock	2
19	37-2760	Bail-Pin, Lift	2
20	8-1280	Channel-Cross, Rear	2
21	3296-50	Nut-Lock	2
22	47-3840	Elbow-.094 Orifice	4
23	49-8170	Spacer	4
24	3290-216	Washer-Tapered	16
25	3234-22	Screw-HH	1
26	325-6	Screw-HH	7
27	3272-24	Pin-Cotter	4
28	3-0144	Shaft	2
29	65-2710	Plate-Information	1
30	3290-274	Rivet-Pop	6
31	47-3500	Brace-Channel	1

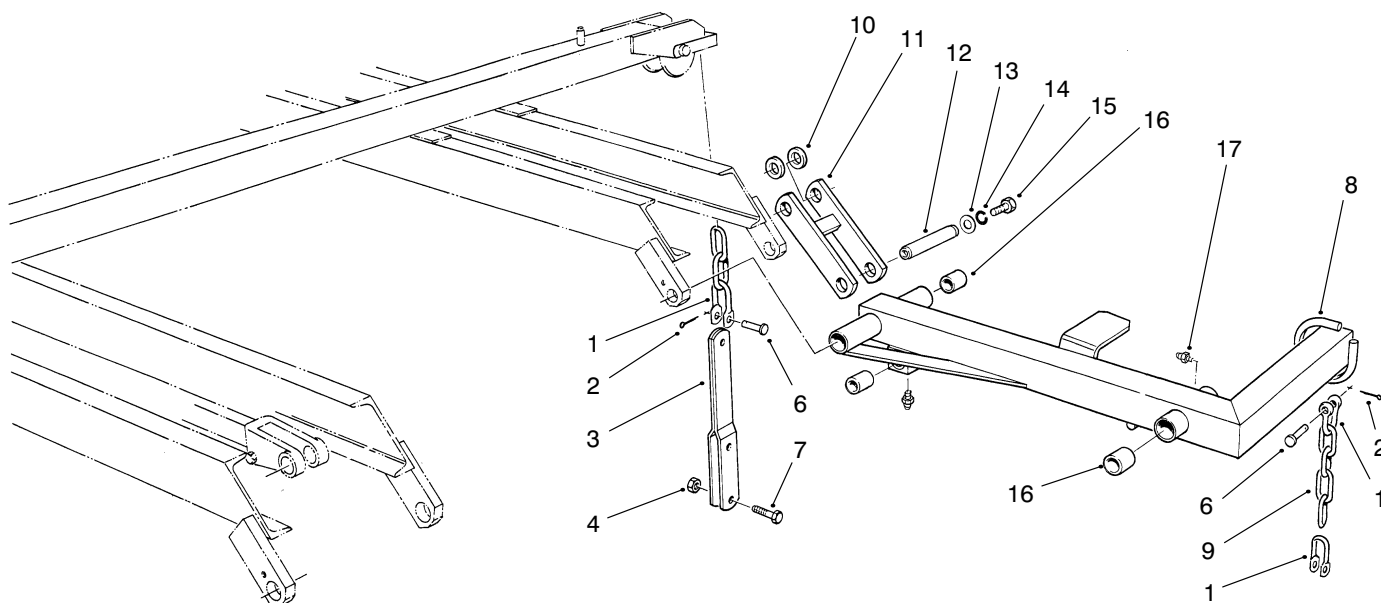


T-1877-1

LIFT ARM ASSEMBLIES NO. 4 & 5

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-2942	Shackle-Long	5	9	3-4636	Chain-Bail, Lift	2
2	3272-10	Pin-Cotter	5	10	3256-62	Washer-Flat	4
3	47-3430	Bracket-Lift	1	11	23-2610	Link	2
4	32153-2	Nut-Lock	1	12	3-0128	Shaft	4
6	283-10	Pin-Clevis	3	13	5-1720	Washer	8
7	323-8	Screw-HH	1	14	3253-5	Washer-Lock	8
8	47-3280	Arm-Short, No. 4 Cutting Unit (Incl. Ref. #16)	1	15	3211-4	Screw-HH	8
*	47-3270	Arm-Short, No. 5 Cutting Unit (Incl. Ref. #16)	1	16	3-0348	Bushing	16
				17	302-5	Fitting-Grease	4

*Not Illustrated

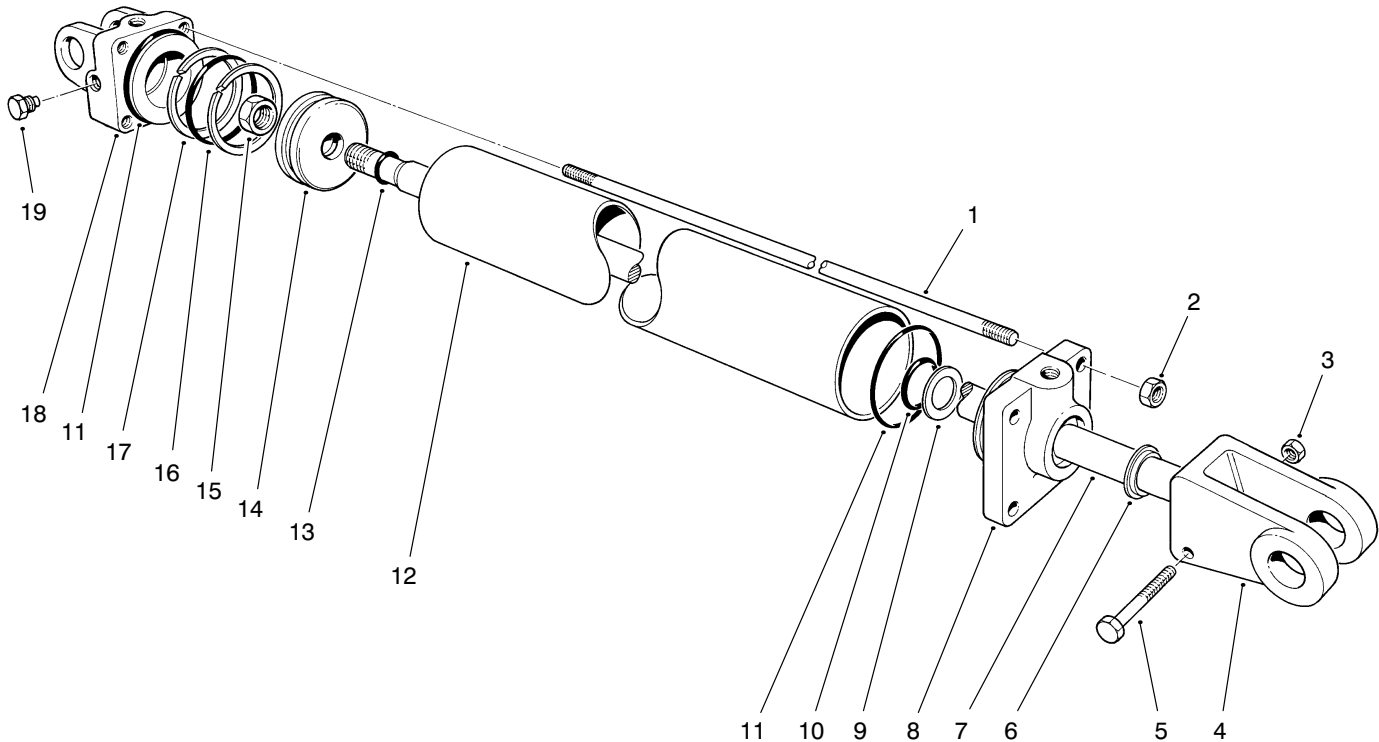

T-0202-2


HYDRAULIC CYLINDERS 10"(22-7520) & 14"(47-3720)

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10" (Incl. Ref. #2)	4
*	47-2660	Tie Rod 14" (Incl. Ref. #2)	4
2	3217-9	Nut-Hex.	4
3	32153-3	Nut-Lock	1
4	22-8680	Asm-Clevis	1
5	322-11	Screw-HH	1
6	22-8660	Wiper-Seal, 10"	1
*	47-5630	Wiper-Seal, 14"	1
7	22-8610	Rod-Piston, 10"	1
*	47-2690	Rod-Piston, 14"	1
8	22-8630	Head-10"	1
*	47-2670	Head-14"	1
9	22-8650	Washer-Backup, 10"	1
*	47-2290	Washer-Backup, 14"	1
10	22-8640	O-Ring-10"	1
*	47-2280	U-Cup Seal, 14"	1
11	22-8550	O-Ring, 10"	2
*	47-2270	O-Ring, 14"	2

Ref. No.	Part No.	Description	No. Used
12	22-7520	Barrel-10"	1
*	47-2680	Barrel-14"	1
13	22-8600	O-Ring	1
14	22-8590	Piston	1
15	22-8560	Nut-Lock	1
16	22-8570	O-Ring	1
17	22-8580	Washer-Backup	2
18	22-8540	Butt-Cap, End 10"	1
*	47-2700	Butt-Cap, End 14"	1
*	22-8720	Kit-Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 10" Cylinder	1
*	47-3730	Kit-Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 14" Cylinder	1
19	281-2	Plug-10" Cylinder	1
*	353-497	Plug-14" Cylinder	1

*Not Illustrated

Note: Quantities indicated are for one cylinder.

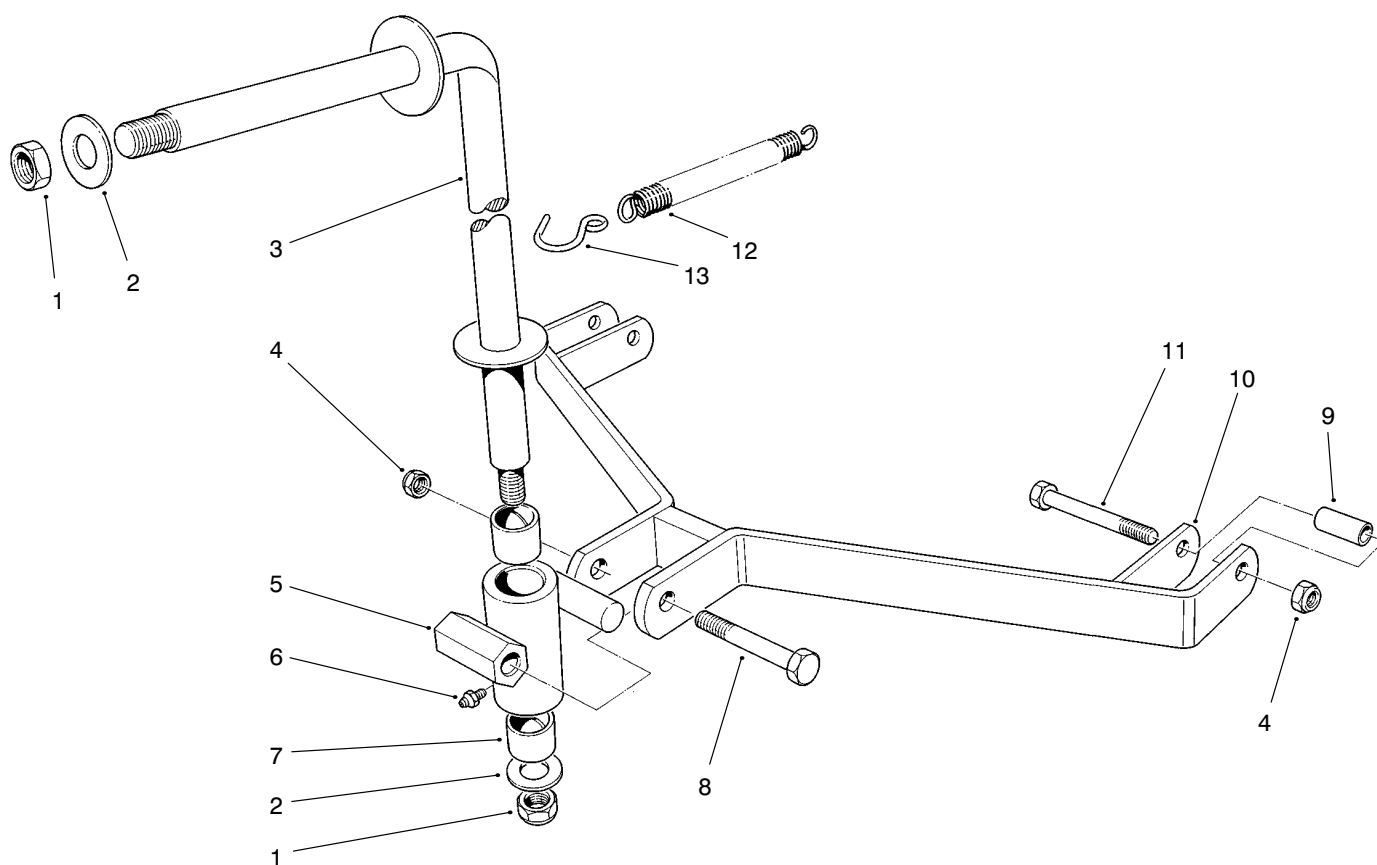


T-0203-2

LIFT BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-50	Nut-Lock	10	6	302-5	Fitting-Grease	5
2	3-8448	Washer-Thrust	10	7	3-0348	Bushing	10
3	26-8310	Bail-Lift, No. 1, 2 & 3 Cutting Units	3	8	325-17	Screw-HH	5
*	28-8720	Bail-Lift, No. 4 & 5 Cutting Units	2	9	5-1091	Spacer	10
4	32153-5	Nut-Lock	15	10	3-9280	Bar-Draw	5
5	6-1030	Asm-Housing (Incl. Ref. #6 & 7)	5	11	325-14	Screw-HH	10
				12	5-1706	Spring	5
				13	3-2198	S-Hook	5

*Not Illustrated

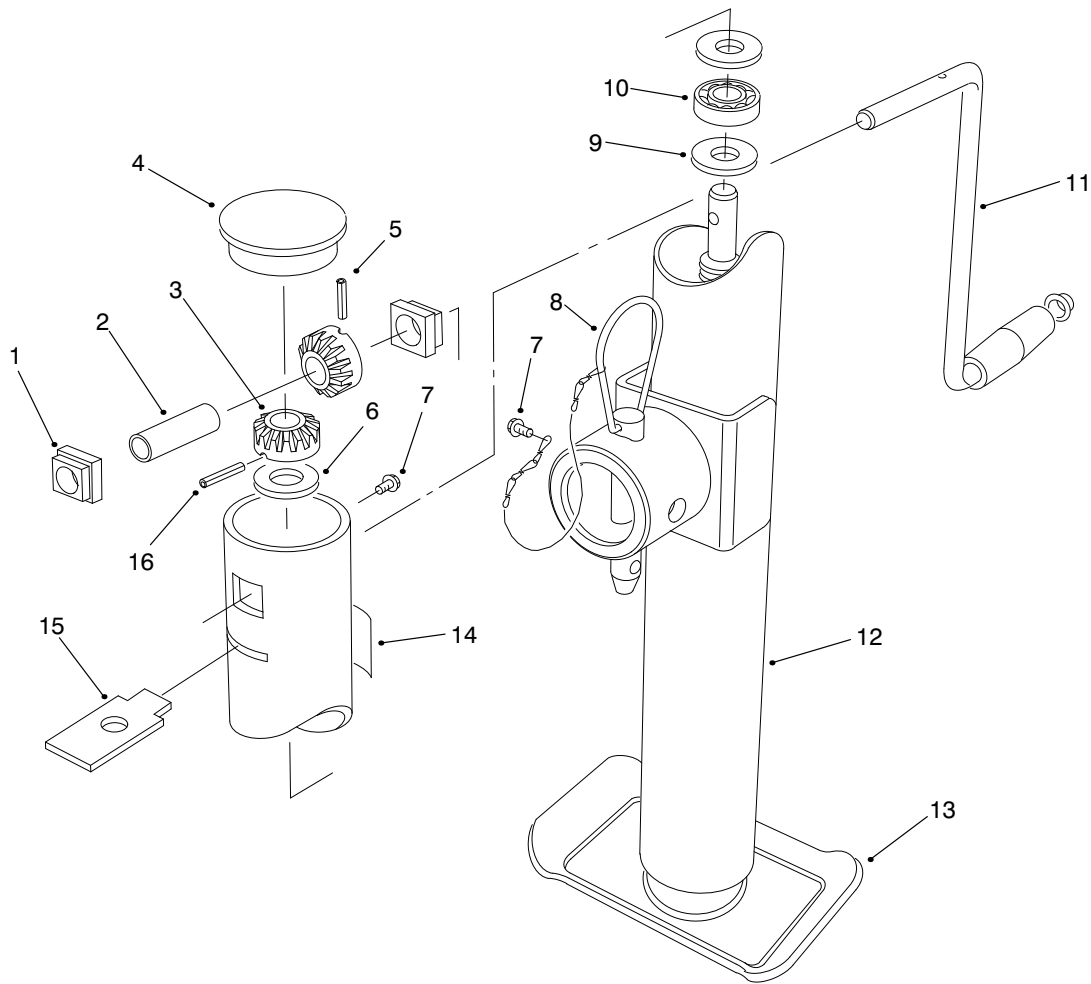


T-3200

JACK ASSEMBLY NO. 98-5016

Ref. No.	Part No.	Description	No. Used
1	98-5021	Bushing-Square	2
2		Spacer-Gear	1
3		Gear-Bevel	2
4		Cap-Tube, Jack	1
5		Pin-Roll	1
6	55-7190	Washer	1
7		Screw-TAP	2
8		Asm-Pin & Chain	1
9		Washer	2
10		Bearing-Open Cage	1

Ref. No.	Part No.	Description	No. Used
11	98-5019	Asm-Handle	1
12	98-5017	Tube-Outer	1
13	98-5018	Asm-Tube, Inner	1
14		Decal	1
15	98-5020	Plate-Support	1
16		Pin-Roll	1
*	60-8910	Kit-Bearing (Incl. Ref. #9 & 10)	1
*	98-5022	Kit-Gear, Bevel (Incl. Ref. #2, 3, 5, 6 & 15)	1

*Not Illustrated

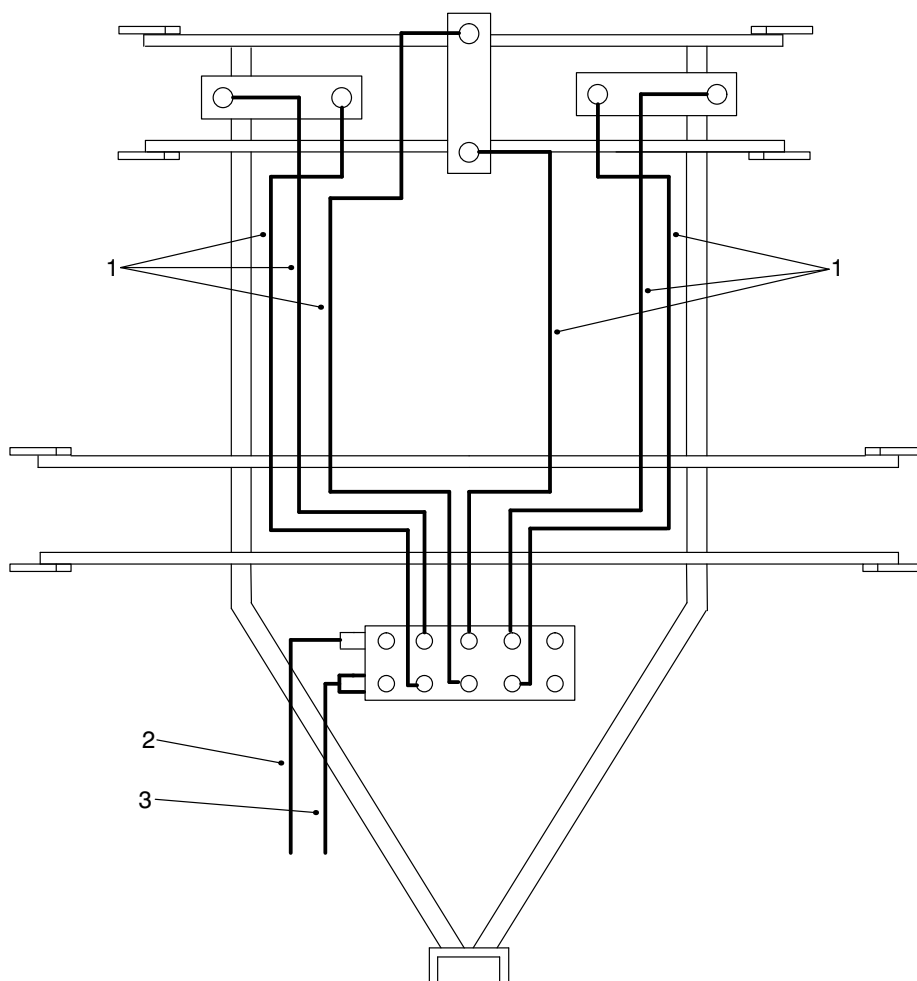

T-1875-1

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	47-3760	Asm-Hydraulic Hose	6
2	52-5990	Hose-Hydraulic (Orange)	1

Ref. No.	Part No.	Description	No. Used
3	52-5991	Hose-Hydraulic (Black)	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0128	Shaft	9 12 4	47-3280	Arm-Short, No. 4 Cutting	9 8 1
3-0136	Keeper-Chain	8 12 3	47-3380	Tower-Control, Lower	1 9 1
3-0144	Shaft	3 20 1	47-3430	Bracket-Lift	9 3 1
3-0144	Shaft	8 28 2	47-3450	Pin-Pivot	2 40 1
3-0348	Bushing	11 7 10	47-3460	U-Bolt	1 24 2
3-0348	Bushing	9 16 16	47-3470	Support-Valve	7 17 2
3-0348	Bushing	1 18 12	47-3480	Bracket-Slow Moving Vehicle	8 8 1
3-0348	Bushing	3 29 6	47-3500	Brace-Channel	8 31 1
3-0631	Knob	2 39 3	47-3550	Hitch-Clevis	1 27 1
3-2196	Sheave	7 5 3	47-3560	Channel-Cross, Front	7 8 1
3-2196	Sheave	8 11 4	47-3570	Channel-Cross, Rear	7 2 1
3-2196	Sheave	3 33 1	47-3620	Lever-Block, Pivot	1 4 3
3-2198	S-Hook	11 13 5	47-3630	Rod-Linkage, Control	1 11 3
3-4636	Chain-Bail, Lift	9 9 2	47-3640	Rest-Cylinder	3 8 1
3-8448	Washer-Thrust	11 2 10	47-3650	Chain-Lift, No. 2 & 3	3 1 2
3-9280	Bar-Draw	11 10 5	47-3660	Chain-Lift, No. 1 Cut. Unit	3 35 1
5-1091	Spacer	11 9 10	47-3680	Tower-Control, Upper	1 6 1
5-1706	Spring	11 12 5	47-3720	Cylinder-Hydraulic	3 16 1
5-1720	Washer	9 13 8	47-3730	Kit-Seal	10 * 1
5-2942	Shackle-Long	9 1 5	47-3760	Asm-Hydraulic Hose	13 1 6
5-2942	Shackle-Long	3 36 5	47-3770	Decal-Manual, Operator's	2 38 1
6-1030	Asm-Housing	11 5 5	47-3800	Strap-Locking	8 5 1
8-1280	Channel-Cross, Rear	8 20 2	47-3810	Lever-Valve	2 34 3
13-6200	Pin-Pointed	3 23 1	47-3820	Cover-Column, Control	2 36 1
13-6200	Pin-Pointed	1 28 1	47-3840	Elbow-.094 Orifice	8 22 4
20-4390	Tube-Spacer	8 14 4	47-3860	Channel-LH	3 22 1
20-4390	Tube-Spacer	3 17 2	47-3870	Channel-RH	3 11 1
22-7520	Barrel-10"	10 12 1	47-3880	Linkage-Control	1 3 3
22-7520	Cylinder-Hydraulic, 10"	8 16 2	47-3900	Plate-Information	7 10 1
22-8540	Butt-Cap, End 10"	10 18 1	47-3930	Bracket-Lockup	3 6 1
22-8550	O-Ring, 10"	10 11 2	47-3990	Decal-Toro	7 1 1
22-8560	Nut-Lock	10 15 1	47-3990	Decal-Toro	8 15 1
22-8570	O-Ring	10 16 1	47-5600	Decal-Operation	2 35 1
22-8580	Washer-Backup	10 17 2	47-5630	Wiper-Seal, 14"	10 * 1
22-8590	Piston	10 14 1	49-8170	Spacer	7 19 4
22-8600	O-Ring	10 13 1	49-8170	Spacer	8 23 4
22-8610	Rod-Piston, 10"	10 7 1	49-8180	Cap-Dust	1 29 2
22-8630	Head-10"	10 8 1	51-0850	Support-Pulley	3 4 1
22-8640	O-Ring-10	10 10 1	52-3500	Kit-Spindle, Replacement	3 * 1
22-8650	Washer-Backup, 10"	10 9 1	52-5670	Lever-Control	5 33 3
22-8660	Wiper-Seal, 10"	10 6 1	52-5860	Spool-Collar	5 8 1
22-8670	Tie Rod 10"	10 1 4	52-5900	Screw-HSH	5 32 2
22-8680	Asm-Clevis	10 4 1	52-5990	Hose-Hydraulic (Orange)	13 2 1
22-8720	Kit-Seal	10 * 1	52-5990	Hose-Hydraulic (Orange)	2 32 1
23-2610	Link	9 11 2	52-5991	Hose-Hydraulic (Black)	13 3 1
26-8160	Support-Arm, Lift	1 21 1	52-5991	Hose-Hydraulic (Black)	2 33 1
26-8250	Pin-Arm, Lift	1 17 2	55-7190	Asm-Pin & Chain	12 8 1
26-8310	Bail-Lift, No. 1, 2 & 3	11 3 3	55-7380	Tongue	1 15 1
26-8590	Pin-Cylinder	3 13 1	56-7960	Tire	4 6 2
28-8720	Bail-Lift, No. 4 & 5	11 * 2	60-8910	Kit-Bearing	12 * 1
37-2760	Bail-Pin, Lift	8 19 2	60-9110	Bail-Pin, Lift	3 28 1
38-5540	Elbow-Male	5 6 3	63-8520	Section-Valve, 1 Spool	5 * 5
38-6200	Socket-Slow Moving Vehicle.	8 9 1	63-8760	Kit-Pin, Link	6 * 3
42-3550	Cover-Mount, Cylinder	3 19 1	63-8760	Link-Connecting	5 30 3
44-7612	Bolt-HWH	5 3 3	63-8760	Pin-Link	5 35 3
44-7621	Plate-Cover, V20 L.E.	6 44 1	65-2710	Plate-Information	8 29 1
44-7650	Spring-Compression	5 13 1	65-5871	Tube-Manual	7 14 1
44-7660	Plug-Check	5 37 2	65-5890	Cap-Tube, Manual	7 13 2
46-2380	Spring-Relief	6 54 1	68-4240	Bonnet	5 9 1
47-2270	O-Ring, 14"	10 * 2	77-0650	Hub	4 4 2
47-2280	U-Cup Seal, 14"	10 * 1	84-2190	Kit-Seal, Sectional	6 * 1
47-2290	Washer-Backup, 14"	10 * 1	98-5016	Asm-Jack	1 23 1
47-2540	Washer	4 12 2	98-5017	Tube-Outer	12 12 1
47-2660	Tie Rod 14"	10 * 4	98-5018	Asm-Tube, Inner	12 13 1
47-2670	Head-14"	10 * 1	98-5019	Asm-Handle	12 11 1
47-2680	Barrel-14"	10 * 1	98-5020	Plate-Support	12 15 1
47-2690	Rod-Piston, 14"	10 * 1	98-5021	Cap-Tube, Jack	12 4 1
47-2700	Butt-Cap, End 14"	10 * 1	98-5022	Kit-Gear, Bevel	12 * 1
47-3010	Frame-Trailer	3 25 1	217-103	Bolt-Wheel	4 14 12
47-3230	Arm-Lift	3 31 1	217-109	Wheel	4 7 2
47-3250	Arm-Lift #2 & 3 Cutting	1 20 2	217-111	Cap-Hub	4 10 2
47-3270	Arm-Short, No. 5 Cutting	9 * 1	232-27	Stem-Valve	4 8 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-79	O-Ring	5 5 10	3290-216	Washer-Tapered	8 24 16
237-79	O-Ring	3 14 2	3290-274	Rivet	7 9 4
237-80	O-Ring	5 2 8	3290-274	Rivet-Pop	8 30 6
2412-102	R-Clamp	7 15 2	3290-343	Pin-Cotter, Hair	3 24 1
253-144	Seal-Grease	4 1 2	3290-343	Pin-Cotter, Hair	1 26 1
254-61	Cup-Bearing	4 5 2	3290-355	Pin-Cotter, Hair	8 4 2
254-62	Cone-Bearing, Outer	4 13 2	3290-357	Nut-Flange	1 7 6
254-103	Cone-Bearing, Inner	4 2 2	3296-24	Nut-Lock	1 22 6
254-104	Cup-Bearing	4 3 2	3296-29	Nut-Lock	2 41 1
281-2	Plug-10" Cylinder	10 19 1	3296-50	Nut-Lock	11 1 10
283-6	Pin-Clevis	1 1 3	3296-50	Nut-Lock	8 21 2
283-10	Pin-Clevis	3 3 5	32104-17	Screw-TAP	3 18 4
283-10	Pin-Clevis	9 6 3	32128-20	Nut-HFH	8 7 2
283-62	Pin-Clevis	5 34 3	32128-23	Nut-Flange	7 3 8
302-2	Fitting-Grease	4 15 1	32128-23	Nut-HFH	8 1 12
302-5	Fitting-Grease	11 6 5	32128-23	Nut-HFH	3 7 10
302-5	Fitting-Grease	9 17 4	32128-23	Nut-HFH	1 13 8
302-5	Fitting-Grease	1 19 4	32136-1	Nut-Slotted	4 11 2
302-5	Fitting-Grease	3 30 2	32153-2	Nut-Lock	9 4 1
322-3	Screw-HH	7 11 2	32153-3	Nut-Lock	10 3 1
322-3	Screw-HH	8 17 2	32153-3	Nut-Lock	1 5 2
322-3	Screw-HH	3 26 1	32153-3	Nut-Lock	7 16 2
322-6	Screw-HH	1 16 2	32153-3	Nut-Lock	5 20 3
322-11	Screw-HH	10 5 1	32153-5	Nut-Lock	8 3 4
322-13	Screw-HH	5 22 3	32153-5	Nut-Lock	11 4 15
323-8	Screw-HH	9 7 1	32153-5	Nut-Lock	7 6 3
323-13	Screw-HH	1 8 2	32153-5	Nut-Lock	3 32 1
325-6	Screw-HH	3 10 6	353-301	Poppet-Lift, Check	6 43 2
325-6	Screw-HH	1 14 8	353-302	O-Ring	6 41 2
325-6	Screw-HH	7 18 4	353-303	Seal-Backup	6 40 4
325-6	Screw-HH	8 26 7	353-304	Poppet-Spring	6 42 2
325-7	Screw-HH	3 37 4	353-305	O-Ring	5 39 2
325-14	Screw-HH	8 6 5	353-306	Washer-Backup	5 38 2
325-14	Screw-HH	7 7 7	353-318	Seal-Wiper	5 26 1
325-14	Screw-HH	11 11 10	353-321	Pin-Cotter	5 28 5
325-17	Screw-HH	3 5 1	353-322	Pin	5 36 3
325-17	Screw-HH	11 8 5	353-324	Bracket-Handle	5 29 1
325-18	Screw-HH	8 13 3	353-328	Washer-Shim .040	6 51 A/R
327-6	Screw-HH	1 12 4	353-329	Washer-Shim .020	6 52 A/R
327-23	Screw-HH	1 25 2	353-330	Washer-Shim .010	6 53 A/R
3211-4	Screw-HH	9 15 8	353-331	O-Ring	6 47 1
3217-8	Nut-Hex	1 10 3	353-334	Cap-Relief	6 55 1
3217-9	Nut-Hex	10 2 4	353-392	Seal-Relief, Poppet	6 49 1
3219-3	Nut-Hex	5 17 3	353-417	Collar-Spring	5 12 2
3230-1	Bolt-Carriage	8 10 2	353-426	Elbow	5 1 2
3234-13	Screw-HH	2 37 4	353-481	Asm-Plug-Load Check	6 * 2
3234-22	Screw-HH	8 25 1	353-497	Plug-14" Cylinder	10 * 1
3253-3	Washer-Lock	5 10 2	353-515	Kit-Seal, Spool	6 * 1
3253-4	Washer-Lock	8 18 2	353-531	Asm-Poppet-Relief	6 50 1
3253-4	Washer-Lock	3 27 1	353-537	Elbow-Male	5 7 3
3253-5	Washer-Lock	9 14 8	353-537	Elbow-Male	3 15 2
3256-2	Washer-Flat	7 12 2	353-570	O-Ring	5 16 2
3256-22	Washer-Flat	3 38 4	353-721	Asm-Plug	5 4 2
3256-27	Washer-Flat	2 42 4	353-743	Kit-Seal	6 * 1
3256-62	Washer-Flat	9 10 4	353-758	O-Ring	6 46 1
3272-1	Pin-Cotter	5 31 6	353-760	Body-WH Relief	6 48 1
3272-10	Pin-Cotter	1 2 6	353-798	Plate-Cover, Right	5 21 1
3272-10	Pin-Cotter	9 2 5	353-799	Asm-Conversion Plug	5 18 1
3272-10	Pin-Cotter	3 34 5	353-800	O-Ring	5 19 1
3272-10	Pin-Cotter	6 56 3	353-819	Body-Coupler, Quick Disc.	1 30 2
3272-13	Pin-Cotter	3 12 1	353-820	Tip-Coupler, Quick Disc.	2 31 2
3272-19	Pin-Cotter	4 9 2	353-952	Seal-Backup	6 45 1
3272-24	Pin-Cotter	3 21 2	353-958	Washer-Backup	5 15 2
3272-24	Pin-Cotter	8 27 4	353-959	Plate-Retainer, Seal	5 14 2
3290-216	Washer-Tapered	7 4 12	353-976	Screw-Socket Head	5 11 2
3290-216	Washer-Tapered	3 9 10	353-988	Asm-Plug	6 * 3

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster Transport Frame has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Reelmaster Transport Frame, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Reelmaster Transport Frame.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Control Tower & Linkage Assembly	1-2	Hydraulic Cylinder No. 22-7520	10
Main Frame Assembly	3	Hydraulic Cylinder No. 47-3720	10
Wheel & Tire Assembly	4	Lift Bail Assembly	11
Hydraulic Valve Assembly No. 63-8510	5-6	Jack Assembly No. 98-5016	12
Front Cross Channel Assembly	7	Hydraulic Schematic	13
Rear Cross Channel Assembly	8	TORO Part Number Index	14-15
Lift Arm Assemblies No. 4 & 5	9		