



Count on it.

Parts Catalog

52in E-Z Vac™

Blower and Drive Kit 2016 and After Grandstand® Mower

Model No. 78575—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Blower and Drive Assembly 4

Idler Assembly No. 136-0575..... 5

Blower Assembly 6

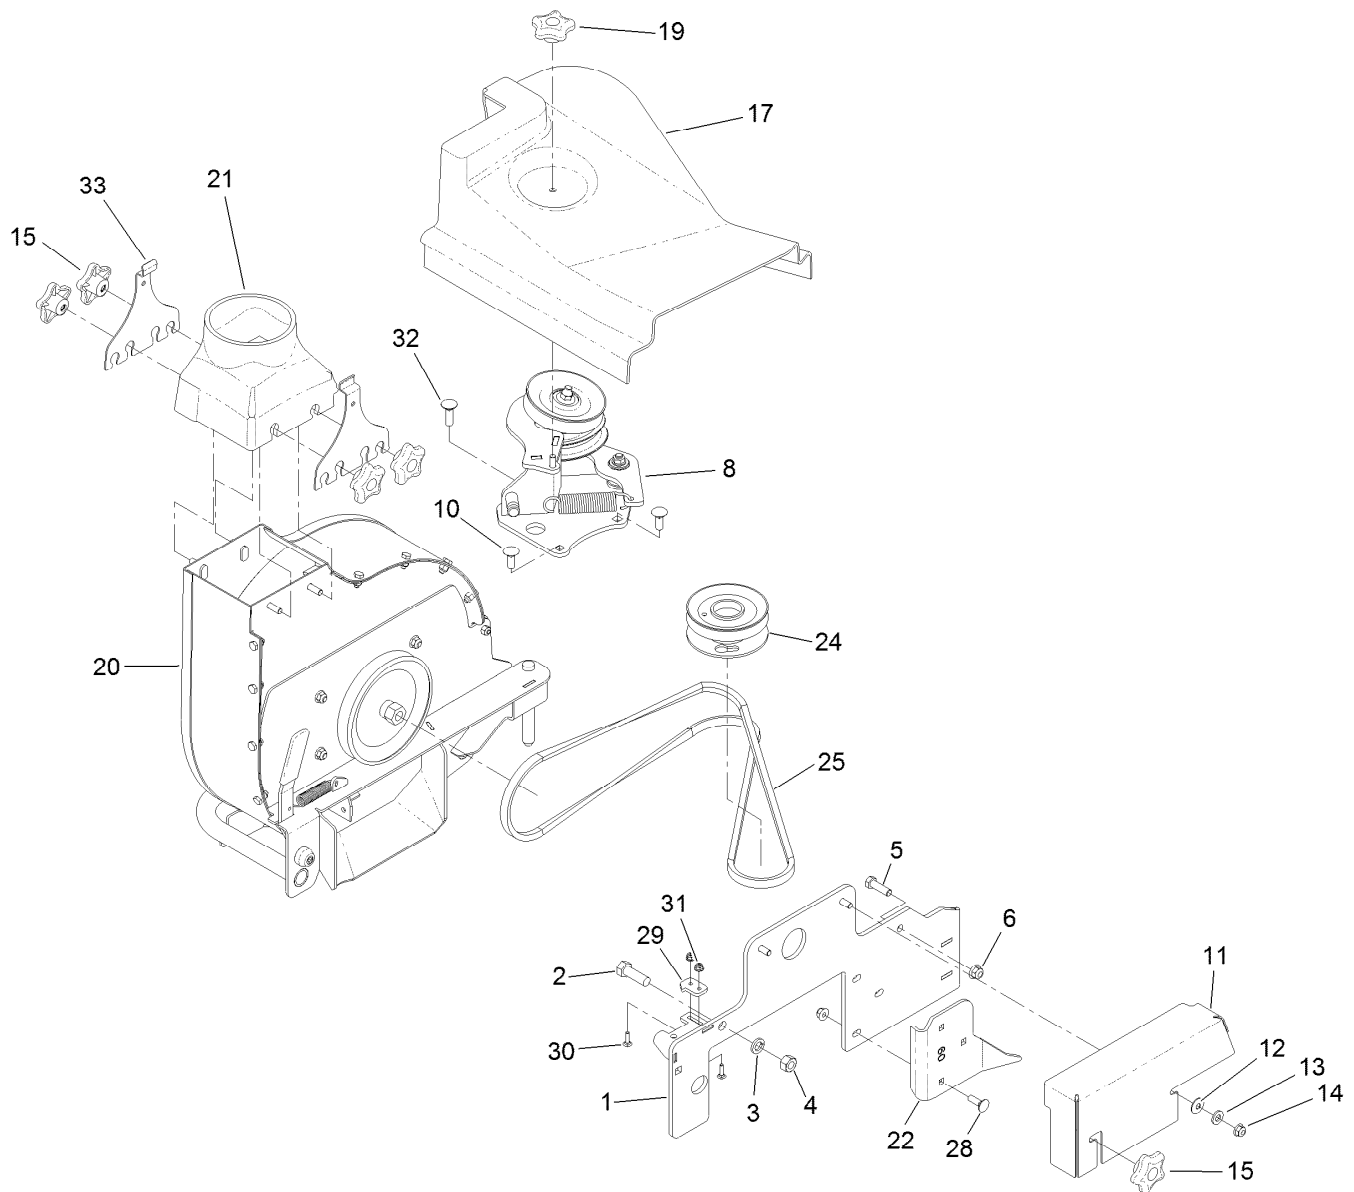


Blower and Drive Assembly

Ref.	Part Number	Qty.	Description
1	136-0569-03	1	Mount-Deck, Blower
2	325-6	1	Screw-HH
3	3253-7	1	Washer-Lock
4	3217-9	1	Nut-HH
5	323-7	1	Screw-HH
6	104-8301	1	Nut-HF, NI
8	136-0575	1	Idler ASM
10	3231-2	2	Bolt-CARR
11	133-8735-03	1	Guard-Belt, Blower
12	3290-456	1	Washer-Belleville
13	62-1230	1	Washer-Rubber
14	104-8300	4	Nut-HF, NI
15	117-5976	5	Knob-Handle


Ref.	Part Number	Qty.	Description
17	133-8729	1	Cover-Belt
19	106-4161	1	Knob-Handle
20		1	Blower ASM ●
21	133-8682	1	Transition-Blower
22	136-4081-03	1	Baffle
24	112-8668-03	1	Pulley-Blower
25	136-4108	1	Belt-V
28	3230-2	3	Bolt-CARR
29	136-4118	1	Plate-Latch
30	3229-20	2	Screw-CARR
31	120-4578	2	Nut-HF
32	3231-25	1	Bolt-CARR
33	136-5688-03	2	Clamp-Hose

● Not serviced separately

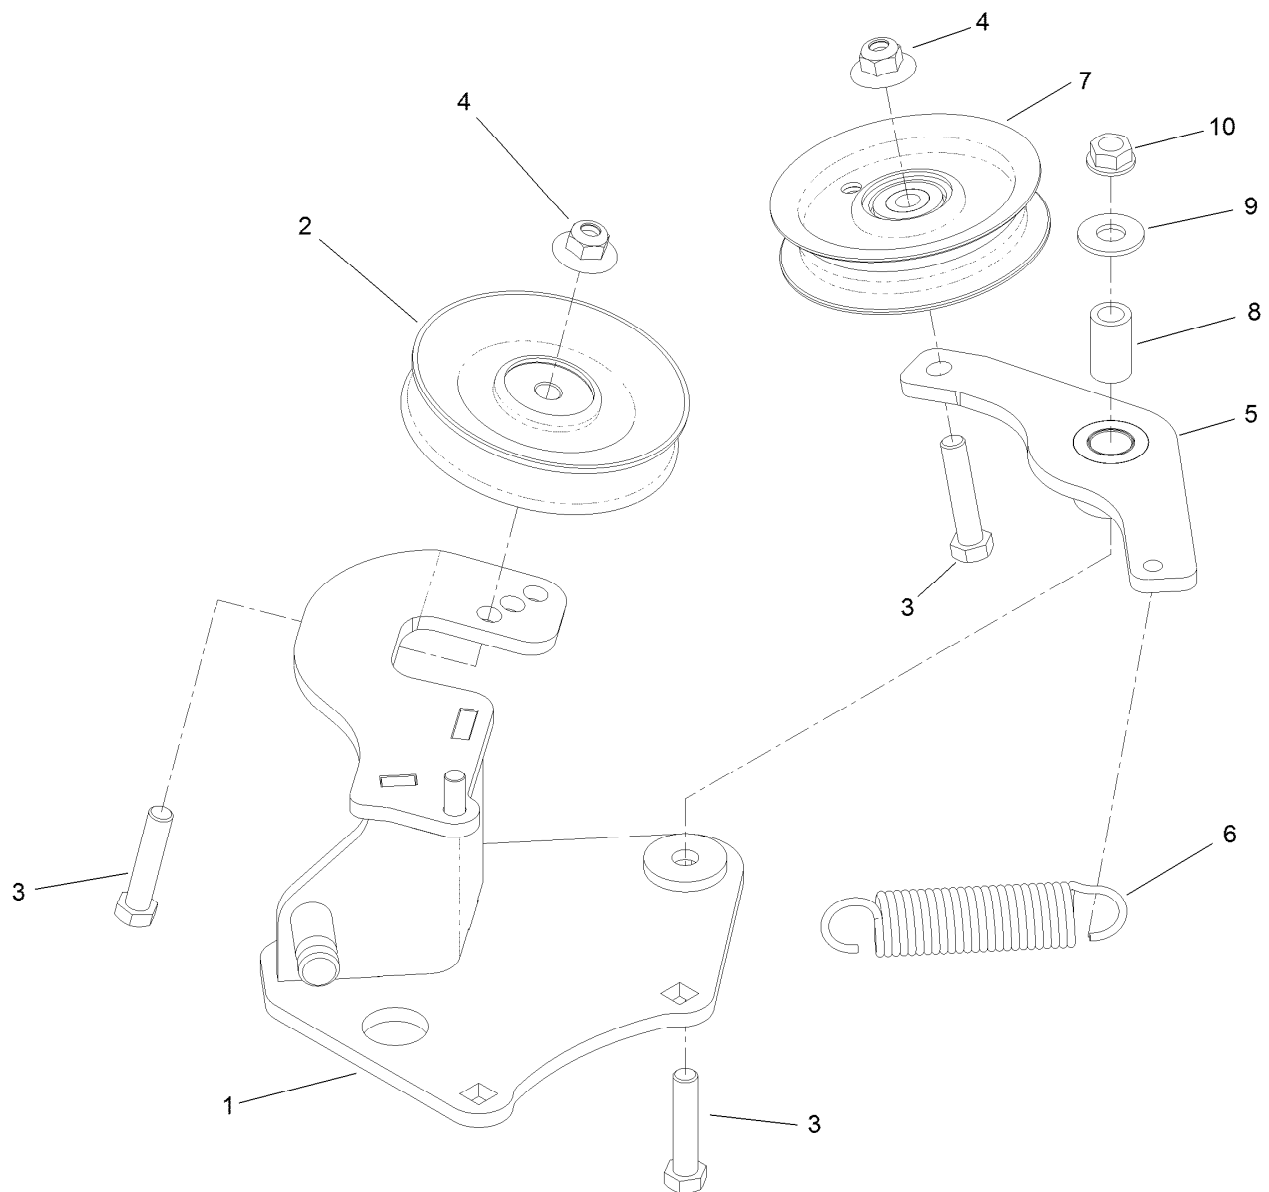

Idler Assembly No. 136-0575

Ref.	Part Number	Qty.	Description
1	136-0559-03	1	Bracket-Idler
2	92-7099	1	Pulley-Idler
3	323-9	3	Screw-HH
4	109-6658	2	Nut-Flange, NI
5	136-0554	1	Idler ASM
6	115-4712	1	Spring-Extension
7	92-7084	1	Pulley-Idler, Flat
8	103-0130	1	Bushing-Pivot, Idler
9	3256-4	1	Washer-Flat
10	3290-357	1	Nut-HHF, Whiz

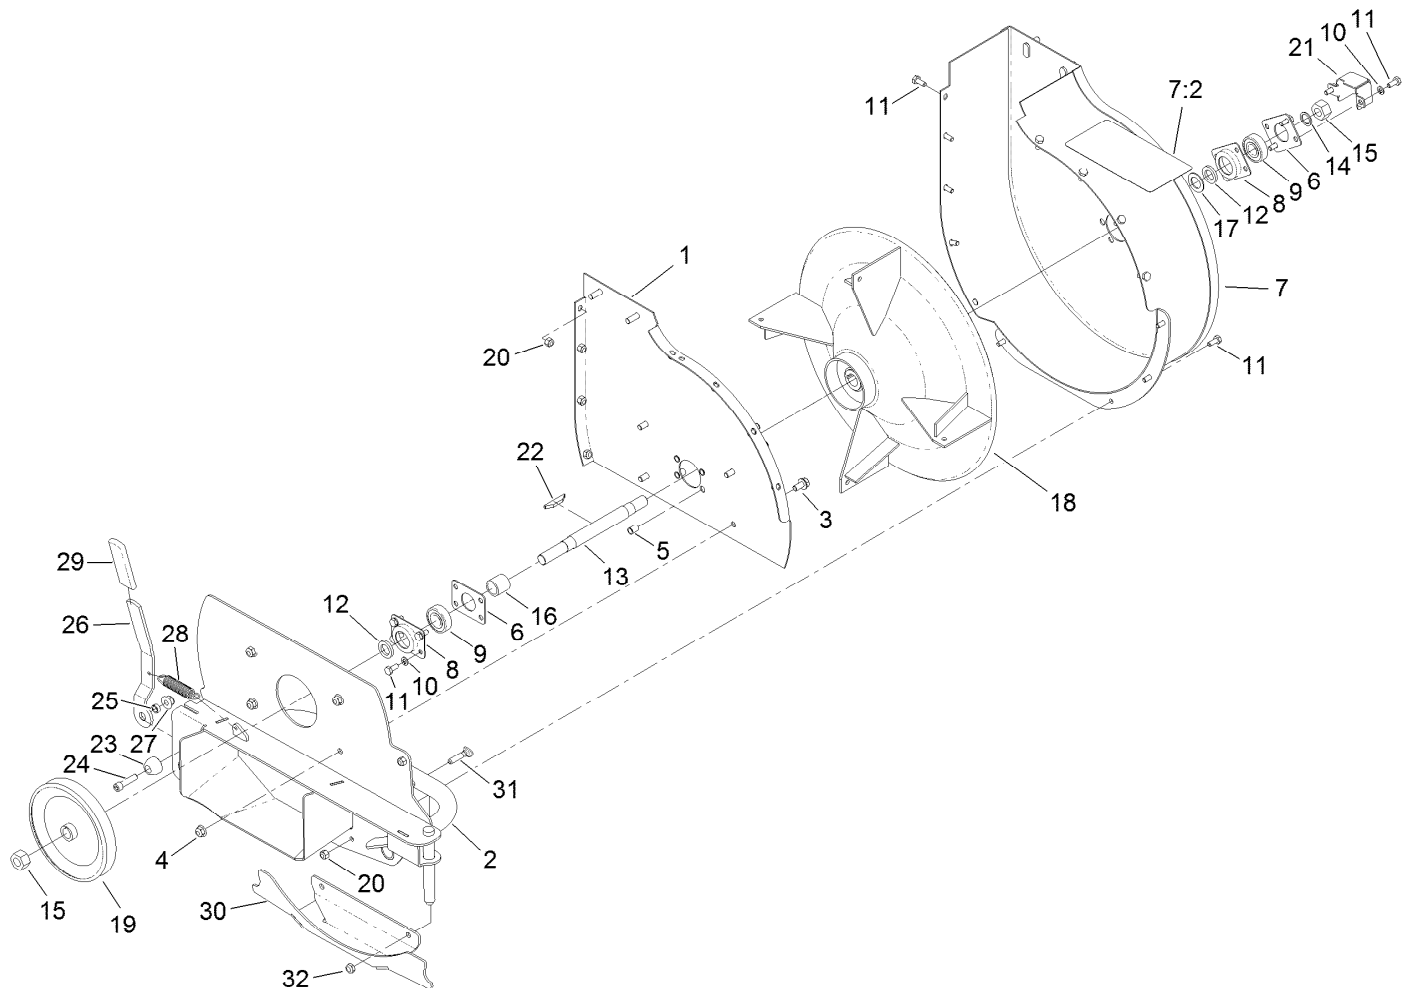

Blower Assembly

Ref.	Part Number	Qty.	Description
1	133-8665-03	1	Mounting Plate ASM
2	136-0573-03	1	Blower Pivot ASM
3	3234-14	4	Screw-HHF
4	104-8300	4	Nut-HF, NI
5	32117-2	8	Nut-Clinch
6	63-9700-03	2	Plate-Cover
7	136-0578	1	Blower Housing Outer ASM
7:2	136-4087	1	Decal-Warning, Blower
8	37-6730	2	Cup-Bearing
9	38-7820	2	Bearing-Ball
10	3253-3	8	Washer-Lock
11	321-3	20	Screw-HH
12	63-9710	2	Spacer-Bearing
13	105-5893	1	Shaft-Blower
14	9202154	1	Washer-Flat
15	3217-11	2	Nut-Hex
16	7989	1	Spacer

Ref.	Part Number	Qty.	Description
17	1535	1	Washer-Thrust
18	56-4780-03	1	Impeller ASM
19	92-0874	1	Pulley-Transaxle
20	3296-42	12	Nut-Lock, NI
21	106-3076-03	1	Cover-Shaft
22	3257-40	1	Key
23	136-4135	1	Pin-Guide
24	3274-18	1	Screw-HSH
25	99-2018	1	Spacer-Arm, Idler
26	136-4116	1	Handle
27	104-8301	1	Nut-HF, NI
28	104-6415	1	Spring-Return, Pedal
29	47-1970	1	Grip
30	136-4097-03	1	Plate-Skid
31	92-4095	2	Screw-Handle
32	3296-47	2	Nut-Lock, NI

Notes:



Count on it.