



Form No. 3367-778 Rev E

Count on it.

Parts Catalog

Groundsmaster® 4110-D Rotary Mower

Model No. 30447—Serial No. 311000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Rear Axle Mount and Bumper Assembly	6
Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750	8
Differential Assembly Rear Axle Assembly No. 110-4750	9
Axle Support Assembly Rear Axle Assembly No. 110-4750	10
Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750	11
Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750	12
Axle Case Assembly Rear Axle Assembly No. 110-4750	13
Axle Assembly Rear Axle Assembly No. 110-4750	14
4-Wheel Drive Manifold Assembly No. 112-9123	15
Lift Manifold Assembly No. 119-5344	16
Rear Axle and Tire Assembly	17
Piston Motor Assembly No. 104-0764	18
Steering Cylinder Assembly No. 105-0775	19
Planetary, Brake and Wheel Assembly	20
Planetary Assembly No. 105-4588	22
Brake Assembly No. 100-3069-03	23
Front Piston Motor Assembly No. 105-7376	24
Hydraulic PTO Manifold Assembly No. 115-8467	25
Brake Assembly No. 100-3070-03	26
Hydraulic PTO Manifold Assembly No. 115-8469	27
Hydraulic PTO Manifold Assembly No. 115-8468	28
Platform and Seat Base Assembly	29
Cloth Premium Seat Assembly No. 117-9429	31
Air Ride Seat Suspension Assembly No. 108-1488	32
Steering Tower Assembly	34
Steering Valve Assembly No. 114-5074	36
Traction Pedal and Linkage Assembly	37
Brake Pedal and Linkage Assembly	38
Controller and Tool Box Assembly	39
Control Console Assembly	40
Fuel Tank and Battery Assembly	42
Front Deck, Lift Arm and Cylinder Assembly	44
Hydraulic Cylinder Assembly No. 107-0189	46
Gear Motor Assembly No. 99-5489	47
Hood and Screen Assembly	48
Air Cleaner and Muffler Assembly	50
Air Cleaner Assembly No. 99-5410	52
Radiator, Oil Cooler and Support Assembly	53
Engine Mount, Fuel Line and Fan Drive Assembly	55
Hydraulic Motor Assembly No. 117-4769	56
Flywheel and Throttle Assembly	57
Hydraulic Reservoir and Filter Assembly	58
Hydraulic Filter Manifold Assembly No. 114-8129	59
Pump Installation and Filter Assembly	60
Piston Pump Assembly No. 114-9769	62
Control Assembly No. 115-4446	63
Fan Drive Manifold Assembly No. 114-3847	64
Pump Assembly No. 114-9771	65
Traction Hydraulic Assembly	66
Power-Take-Off Hydraulic Assembly	67
Lift Arm Hydraulic Assembly	68
Steering Hydraulic Assembly	69
Cab Installation, Alternator and Compressor Assembly	70
Head Light Assembly No. 114-5928	72

Contents (continued)

Left Door Assembly	73
Left-Lower Window Assembly	74
Left Window Assembly	75
Right-Lower Window Assembly	76
Right Window Assembly	77
Right-Escape Window Assembly	78
Rear Window Assembly	79
Front Window Assembly	80
Deck Stop, Door Striker, Mirror and Wiper Assembly	81
Shielding Assembly	82
Headliner Assembly	83
Evaporator and Hose Assembly	84
Switchplate and Fuseblock Assembly	85
A/C Heater and Evaporator Cab Assembly	86
Condensor Assembly	87
Center Deck Assembly	88
Low Driven Spindle Assembly No. 119-4776	90
Wing Lift Cylinder Assembly No. 107-0190	91
High Driven Spindle Assembly No. 119-4549	92
Right Hand and Left Hand Deck Installation Assembly	93
Center Caster Arm and Fork Assembly	95
Spindle and Blade Assembly	96
Driving Spindle Assembly No. 119-4547	97
Double Driven Spindle Assembly No. 119-5298	98
Deck Cover Assembly	99
Rear Discharge Baffle Assembly	100
Crankcase Assembly	101
Oil Pan Assembly	102
Cylinder Head Assembly	103
Gear Case Assembly	104
Cylinder Head Cover Assembly	105
Oil Filter Assembly	106
Dipstick and Guide Assembly	107
Oil Pump Assembly	108
Main Bearing Case Assembly	109
Cam Shaft and Idle Gear Assembly	110
Piston and Crankshaft Assembly	111
Flywheel Assembly	112
Fuel Camshaft and Governor Shaft Assembly	113
Idle Apparatus and Stop Solenoid Assembly	114
Injection Pump Assembly	115
Governor Assembly	116
Speed Control Plate Assembly	117
Nozzle Holder and Glow Plug Assembly	118
Alternator and Pulley Assembly	119
Alternator Component Part Assembly	120
Starter Assembly	121
Starter Components Assembly	122
Water Flange and Thermostat Assembly	123
Water Pump Assembly	124
Valve and Rocker Arm Assembly	125
Inlet and Exhaust Manifold Assembly	126
Turbo Charger Assembly	127
Oil Pipe (Turbo Charger) Assembly	128

Contents (continued)

 
Oil Cooler Assembly 129

Muffler Gasket, Glow Controller and Operator Manual 130

Upper Gasket Kit 131


Lower Gasket Kit 132

Attachments and Accessories 133

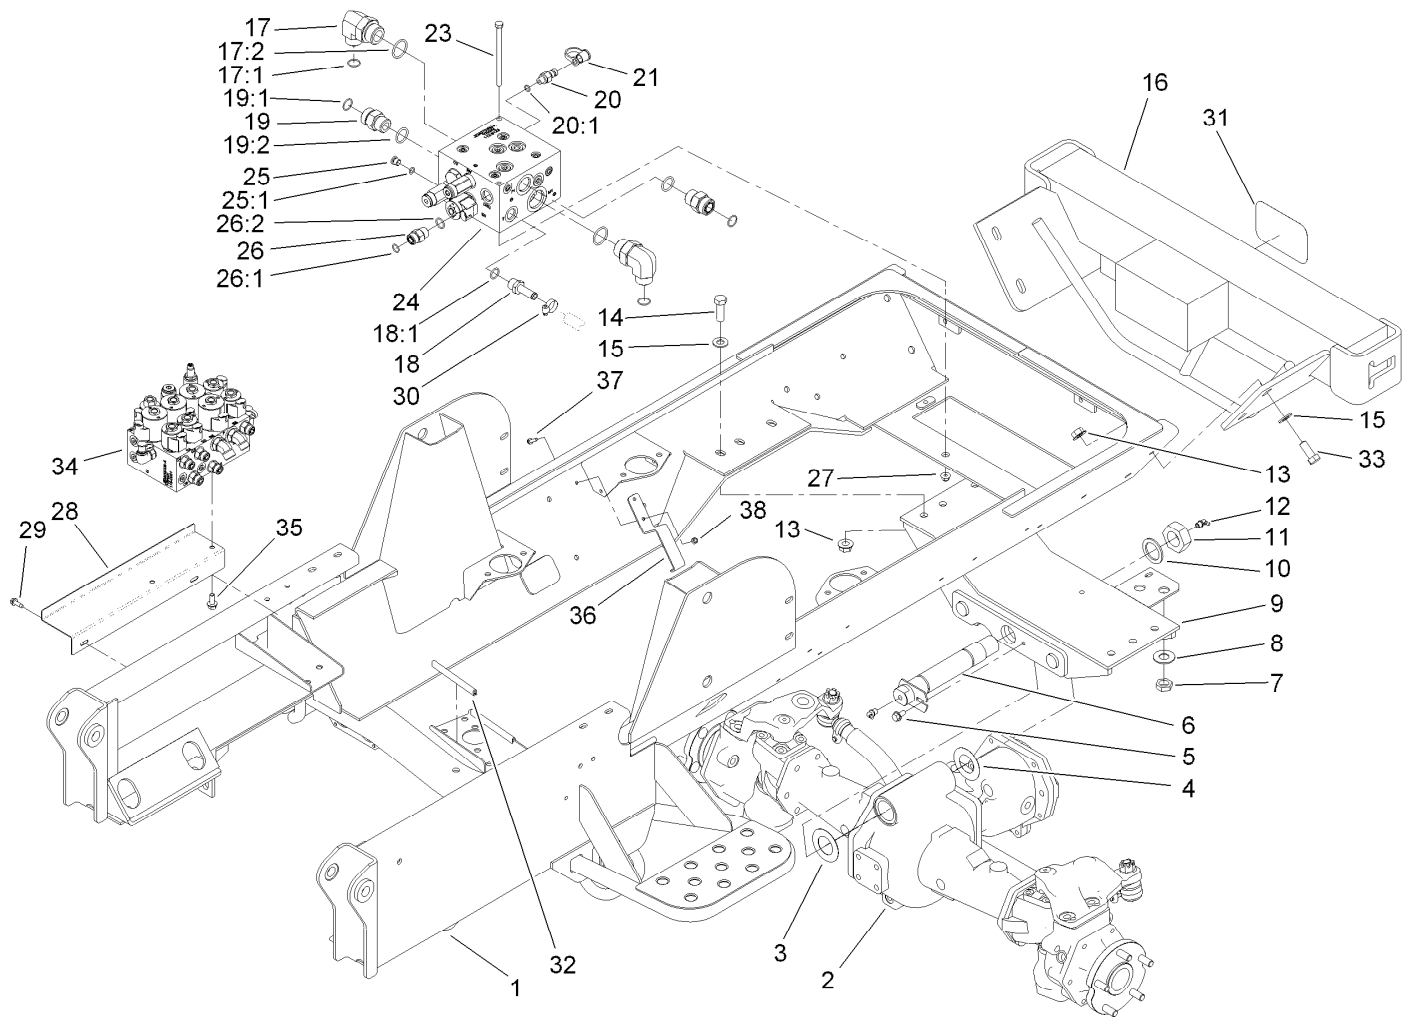

Frame, Rear Axle Mount and Bumper Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	105-7310-03	1	Frame ASM	19	340-9	2	Fitting-STR
2	110-4750	1	Drive Axle ASM	19:1	237-58	1	O-Ring
3	99-8431	2	Washer-Thrust	19:2	237-81	1	O-Ring
4	99-8432	2	Washer-Thrust	20	354-77	1	Fitting-Quick
5	32144-14	1	Screw-HWHTF	20:1	237-78	1	O-Ring
6	98-7077	1	Pin-Axle, Rear	21	354-79	1	Cap-Dust
7	340-70	2	Nut-Lock	23	322-29	2	Screw-HH
8	69-8940	2	Washer	24	112-9123	1	4-Wheel Drive Manifold ASM
9	107-0230-03	1	Mount-Rear	25	353-990	1	Plug ASM
10	92-1765	1	Washer-Thrust	25:1	237-78	1	O-Ring
11	3296-68	1	Nut-Lock, NI	26	340-4	1	Fitting-Straight
12	302-33	2	Fitting-Grease	26:1	237-30	1	O-Ring
13	32128-23	10	Nut-HF	26:2	237-79	1	O-Ring
14	325-6	6	Screw-HH	27	104-8300	2	Nut-HF, NI
15	3256-26	10	Washer-Flat	28	117-5706-03	1	Shield-Splash
16	106-4278-03	1	Bumper	29	32104-95	2	Screw-HWH
17	340-15	2	Fitting-Elbow 90	30	2412-36	1	Clamp-Hose
17:1	237-58	1	O-Ring	31	67-1300	1	Decal
17:2	237-146	1	O-Ring	32	108-8079	2	Trim
18	354-121	1	Fitting-STR	33	325-5	4	Screw-HH
18:1	237-79	1	O-Ring				

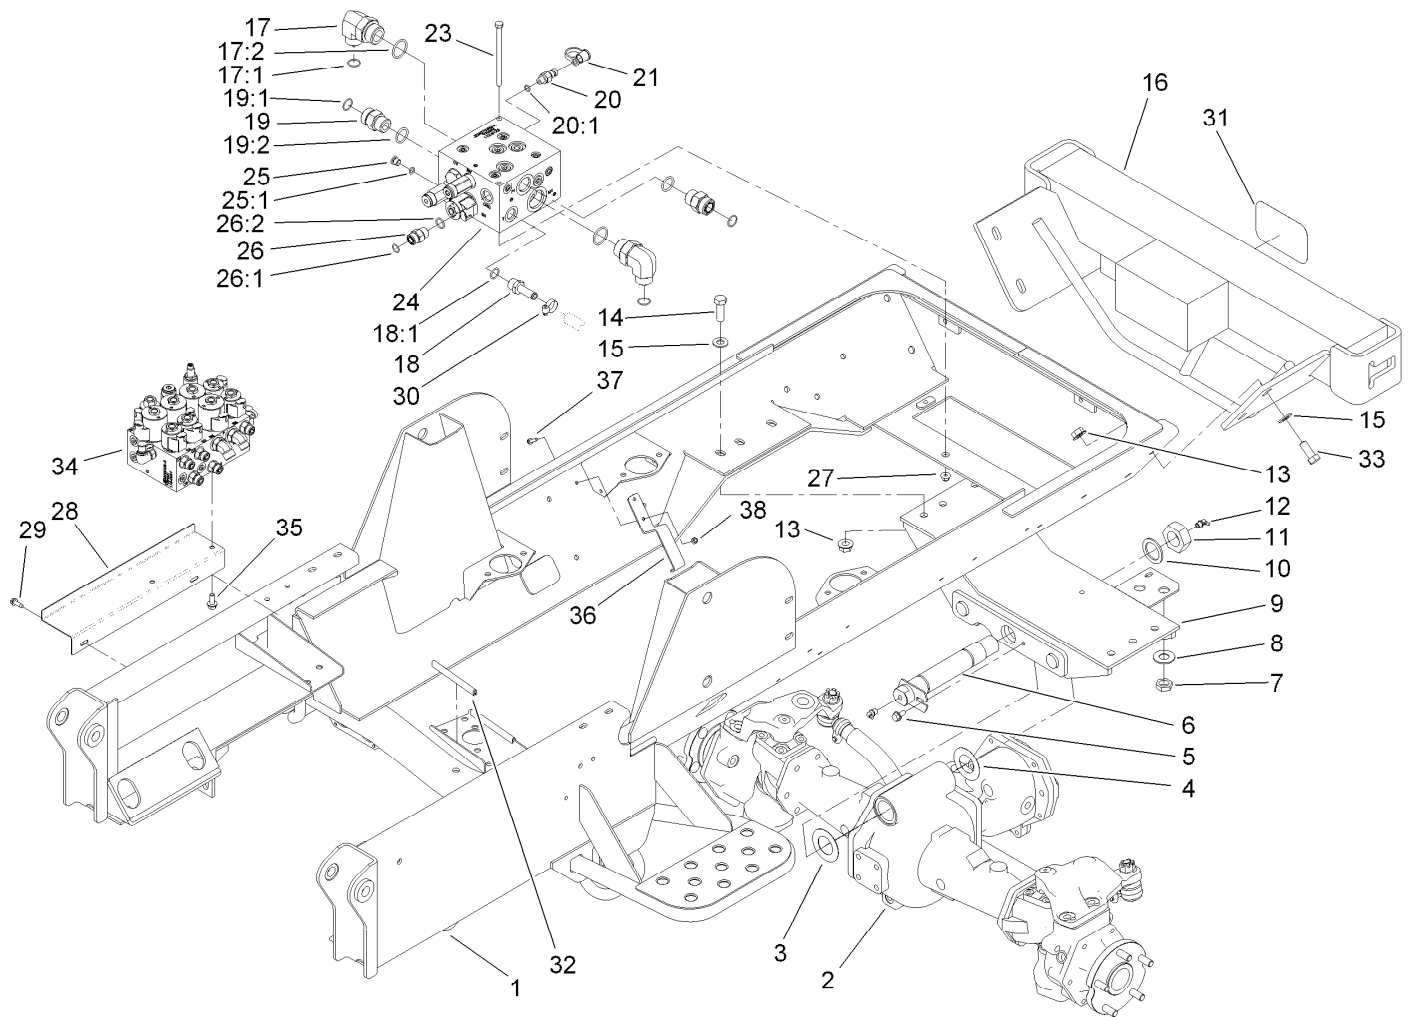 

Frame, Rear Axle Mount and Bumper Assembly (continued)


Ref.	Part Number	Qty.	Description
34	119-5344	1	Lift Manifold ASM
35	3234-14	2	Screw-HHF
36	119-0070	1	Clamp-Hose

Ref.	Part Number	Qty.	Description
37	3290-126	2	Screw-HWH
38	3296-2	2	Nut-Lock, NI

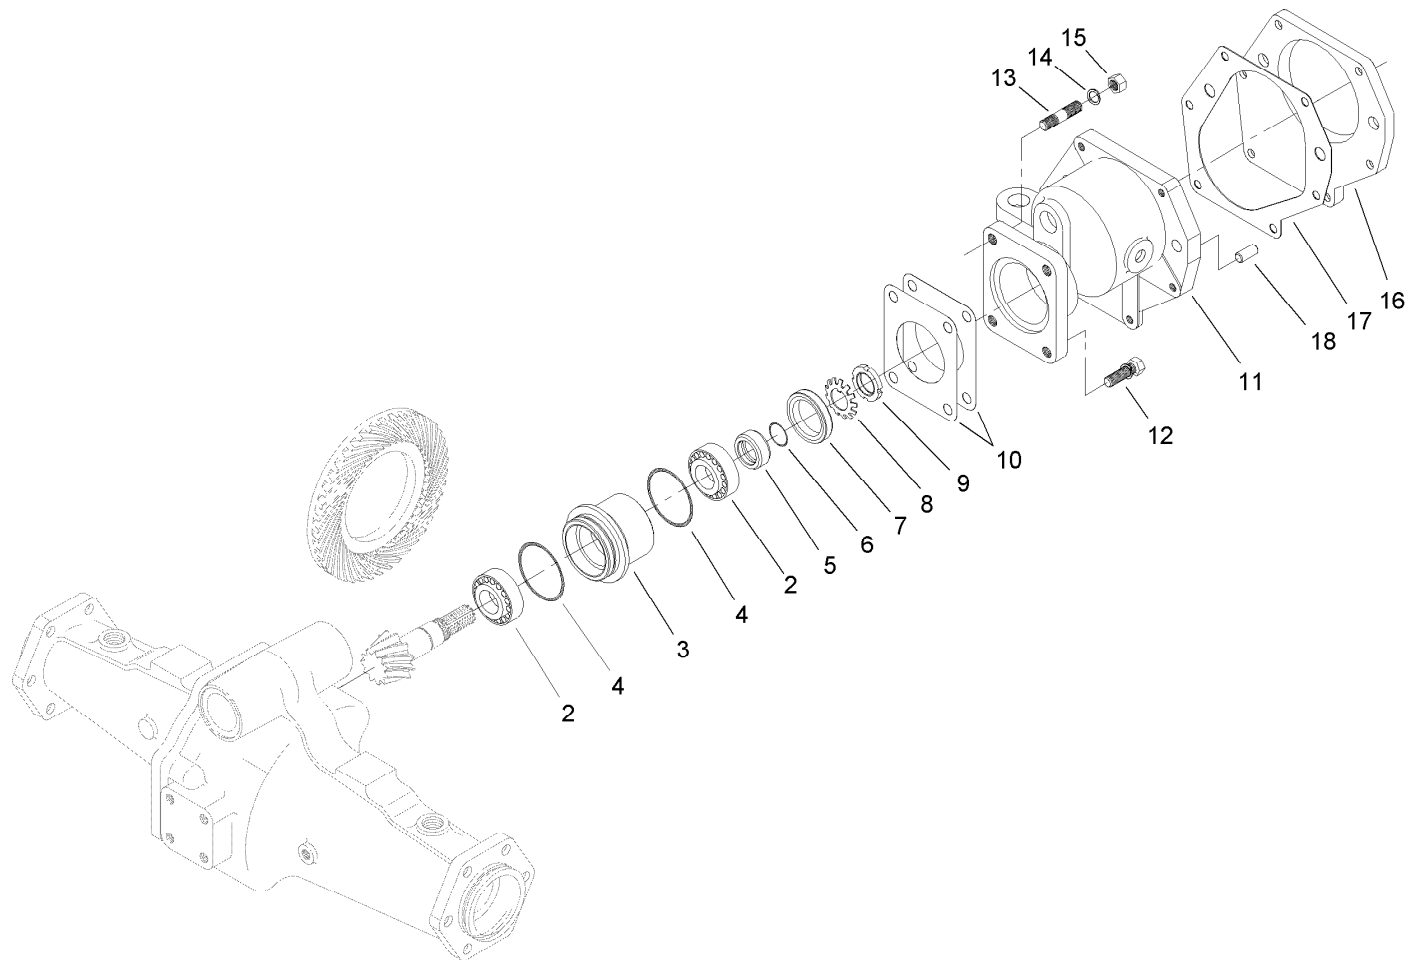 


Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
2	99-7570	2	Bearing-Roller, Taper
3	95-7534	1	Case-Bearing
4	106-1065	2	O-Ring
5	99-7572	1	Collar-Seal, Oil
6	106-1066	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock
10	99-7550	2	Shim 0.1
10	99-7551	2	Shim 0.2
11	95-7533	1	Case-Gear
12	99-7575	2	Bolt
13	98-7735	2	Stud
14	99-7527	2	Washer-Spring
15	99-7526	2	Nut
16	95-7541	1	Plate-Cover
17	106-1140	1	Gasket
18	104-2353	2	Pin-Dowel

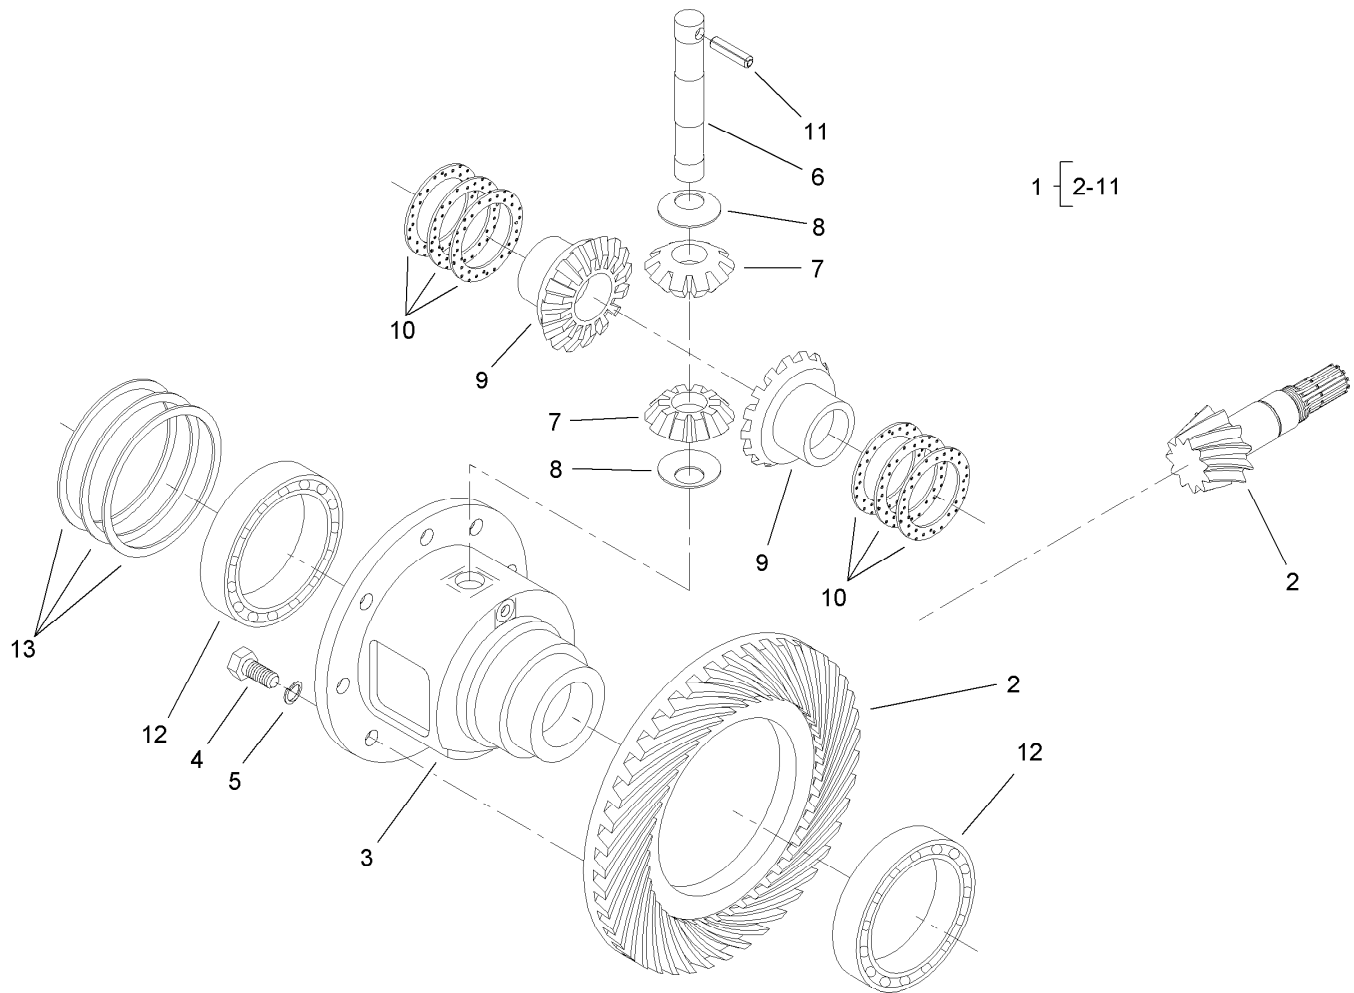 


Differential Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
1	95-7503	1	Differential ASM
2	100-2555	1	Ring And Pinion Matched Set
3	95-7502	1	Case-Differential
4	99-7576	8	Bolt
5	3253-4	8	Washer-Lock
6	99-7578	1	Shaft-Differential
7	99-7579	2	Pinion-Differential
8	99-7580	2	Washer-Differential
9	99-7581	2	Gear-Differential
10	99-7582	2	Washer-Differential
10	99-7583	2	Washer-Differential
10	99-7584	2	Washer-Differential
11	99-7588	1	Pin-Spring
12	99-7562	2	Bearing-Ball
13	99-7585	2	Shim 0.1
13	99-7586	2	Shim 0.2
13	99-7587	2	Shim 0.4

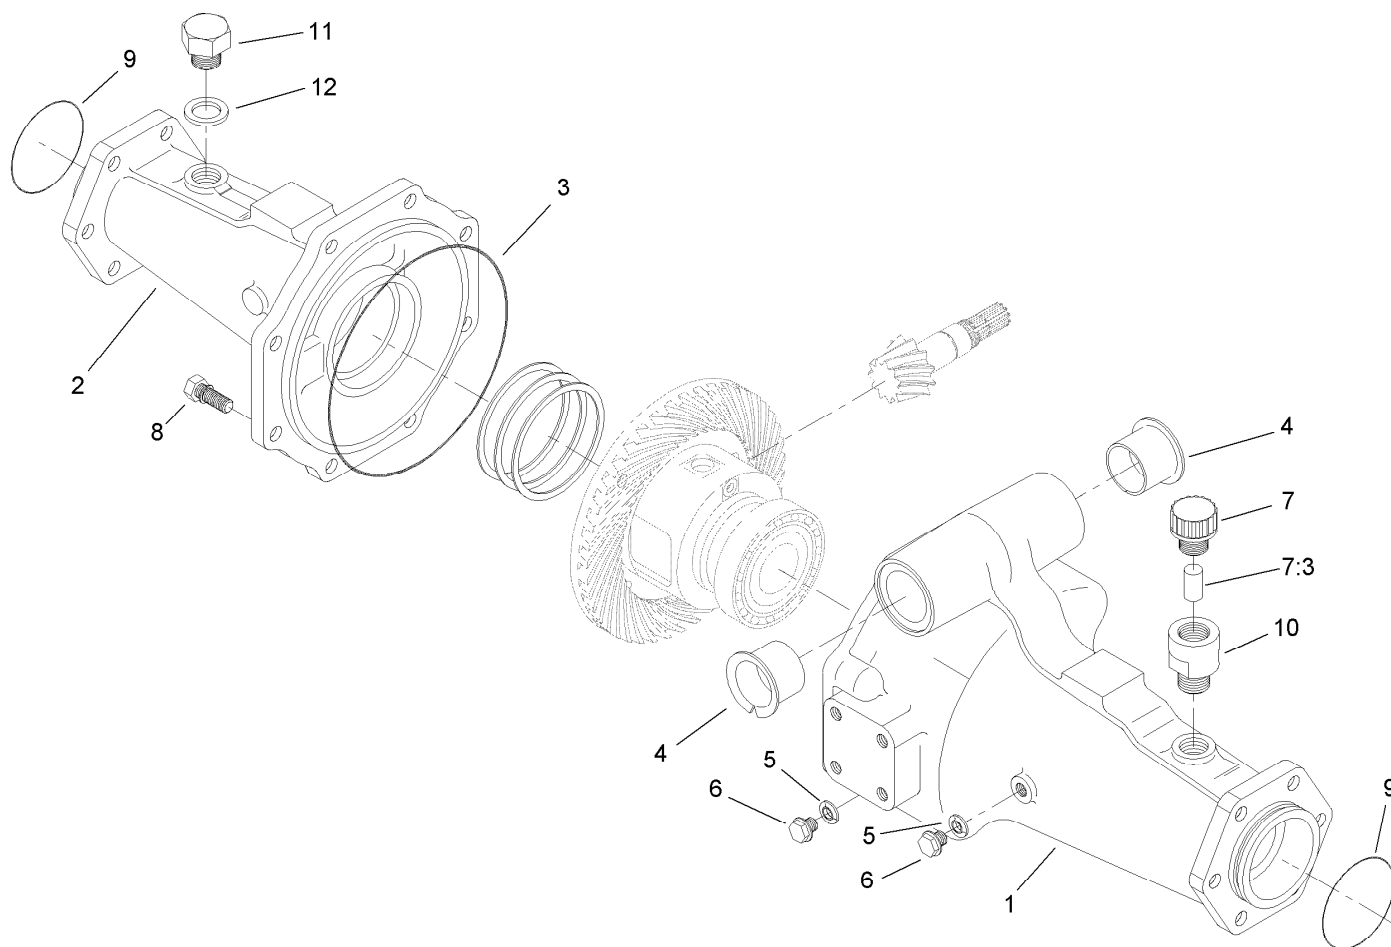 

Axle Support Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7508	1	Support-Axle
2	95-7506	1	Support-Axle
3	106-1067	1	O-Ring
4	95-7537	2	Bushing-Flanged
5	99-7590	2	Washer-Seal
6	99-7589	2	Plug
7	110-4812	1	Axle Vent ASM
7:3	110-4815	1	Insert-Filter, Foam
8	99-7592	8	Bolt
9	106-1068	2	O-Ring
10	104-2377	1	Extension-Vent
11	104-8643	1	Plug
12	104-8644	1	O-Ring

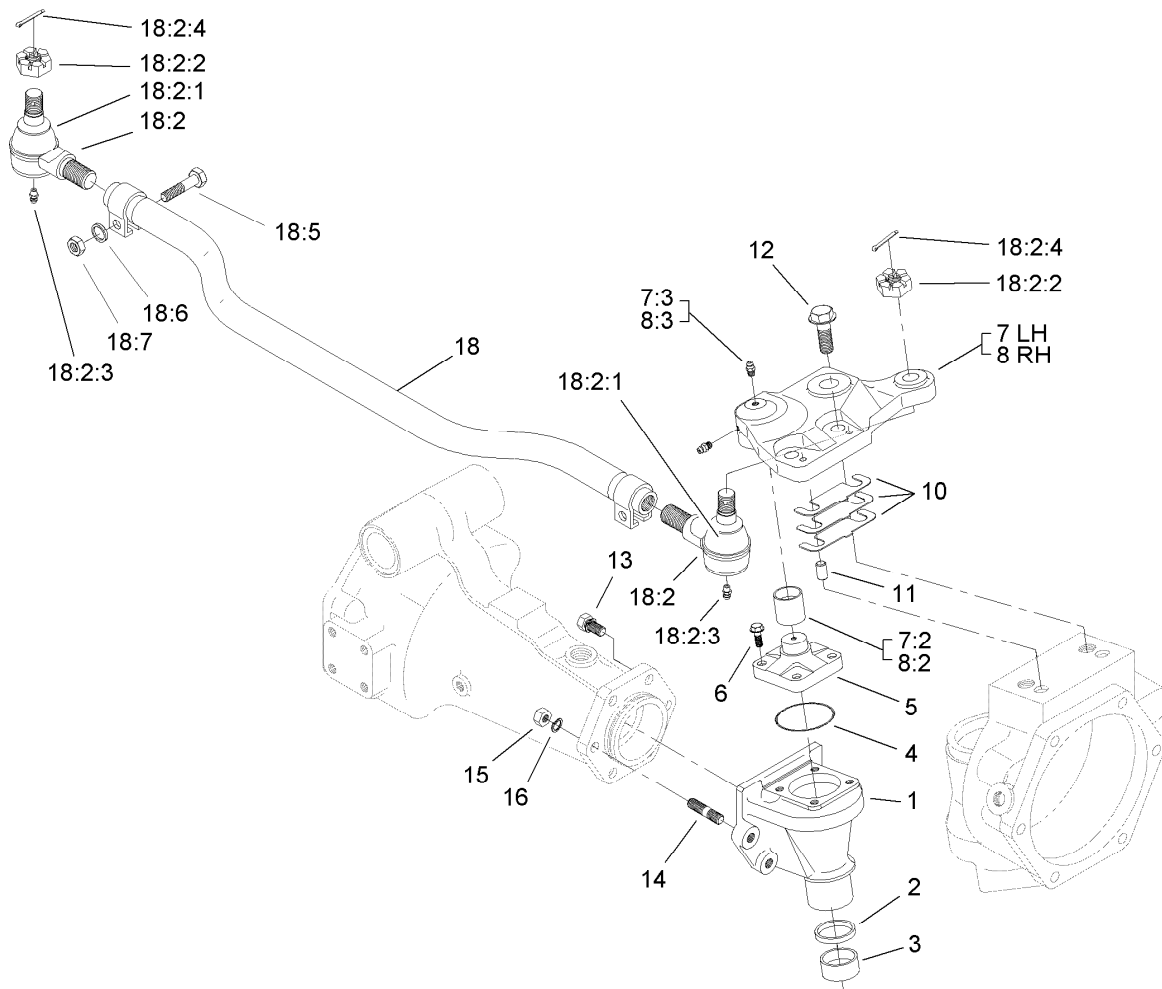 

Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	110-4752	2	Case-Gear, Bevel
2	110-4754	2	Seal-Oil
3	104-2378	2	Bushing
4	106-1069	2	O-Ring
5	104-2373	2	Knuckle
6	104-2374	8	Bolt
7	100-3768	1	LH Steering Arm ASM
7:2	104-8634	1	Bushing
7:3	106-1104	2	Fitting-Grease
8	100-3766	1	RH Steering Arm ASM
8:2	104-8634	1	Bushing
8:3	106-1104	2	Fitting-Grease
10	95-7547	2	Shim 0.1
10	95-7548	2	Shim 0.2
10	95-7549	2	Shim 0.3
11	99-7597	4	Pin-Dowel

Ref.	Part Number	Qty.	Description
12	104-2375	4	Bolt
13	99-7599	8	Bolt
14	99-7525	4	Stud
15	99-7526	4	Nut
16	99-7527	4	Washer-Spring
18	106-1141	1	Steering Tie Rod ASM
18:2	106-1113	2	Tie Rod End ASM - RH
18:2:1	100-3853	1	Cover-Dust
18:2:2	100-3854	1	Nut-Castle
18:2:3	110-4755	1	Fitting-Grease
18:2:4	3272-11	1	Pin-Cotter
18:5	100-3855	2	Bolt
18:6	99-7527	2	Washer-Spring
18:7	99-7526	2	Nut

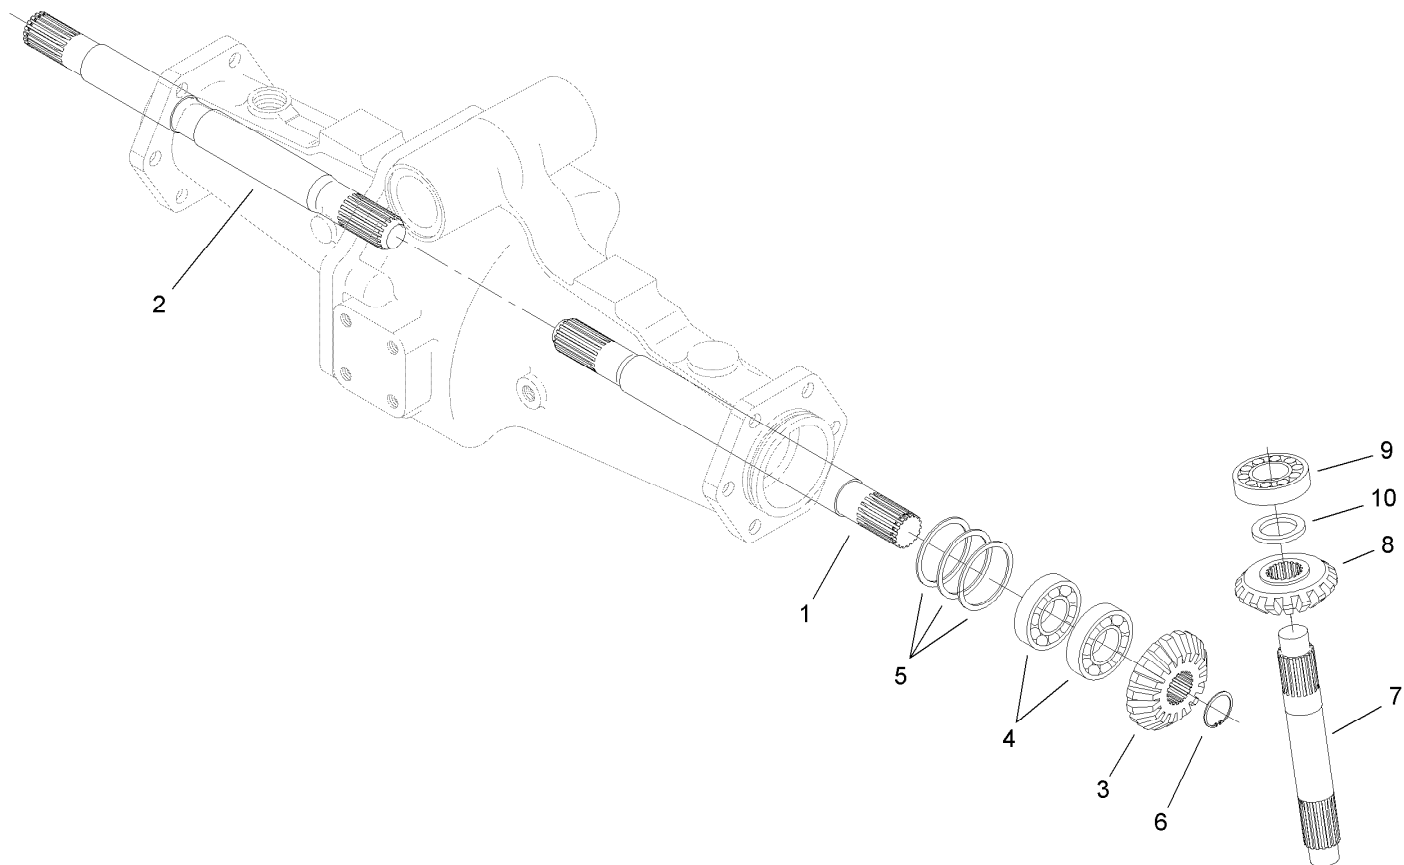 


Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
1	95-7509	1	Shaft-Gear, Differential
2	95-7512	1	Shaft-Gear, Differential
3	95-7517	2	Gear-Bevel, 15 Tooth
4	99-7530	4	Bearing-Ball
5	99-7552	2	Shim 0.1
5	99-7553	2	Shim 0.2
5	99-7554	2	Shim 0.5
6	99-7531	2	Clip
7	110-4753	2	Shaft-Gear, Bevel
8	95-7519	2	Gear-Bevel, 17 Tooth
9	99-7532	2	Bearing-Roller, Taper
10	99-7558	2	Collar

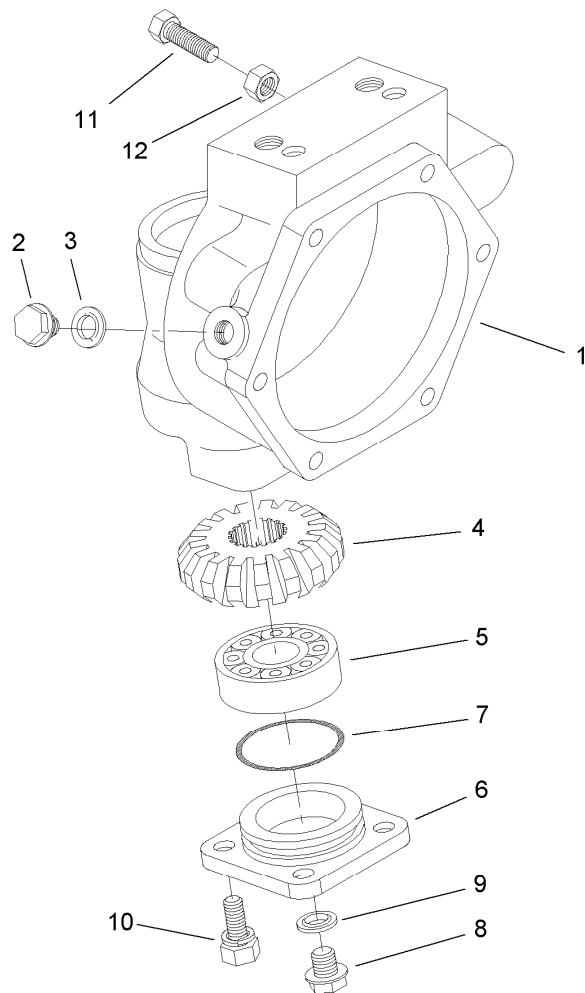 


Axle Case Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
1	110-4751	2	Case-Axle
2	99-7535	2	Plug
3	99-7536	2	Washer-Seal
4	95-7527	2	Gear-Bevel, 17 Tooth
5	99-7532	2	Bearing-Roller, Taper
6	100-2560	2	Cover
7	106-1070	2	O-Ring
8	99-7589	2	Plug
9	99-7590	2	Washer-Seal
10	100-2562	8	Bolt
11	106-1102	2	Bolt-Stop
12	106-1103	2	Nut

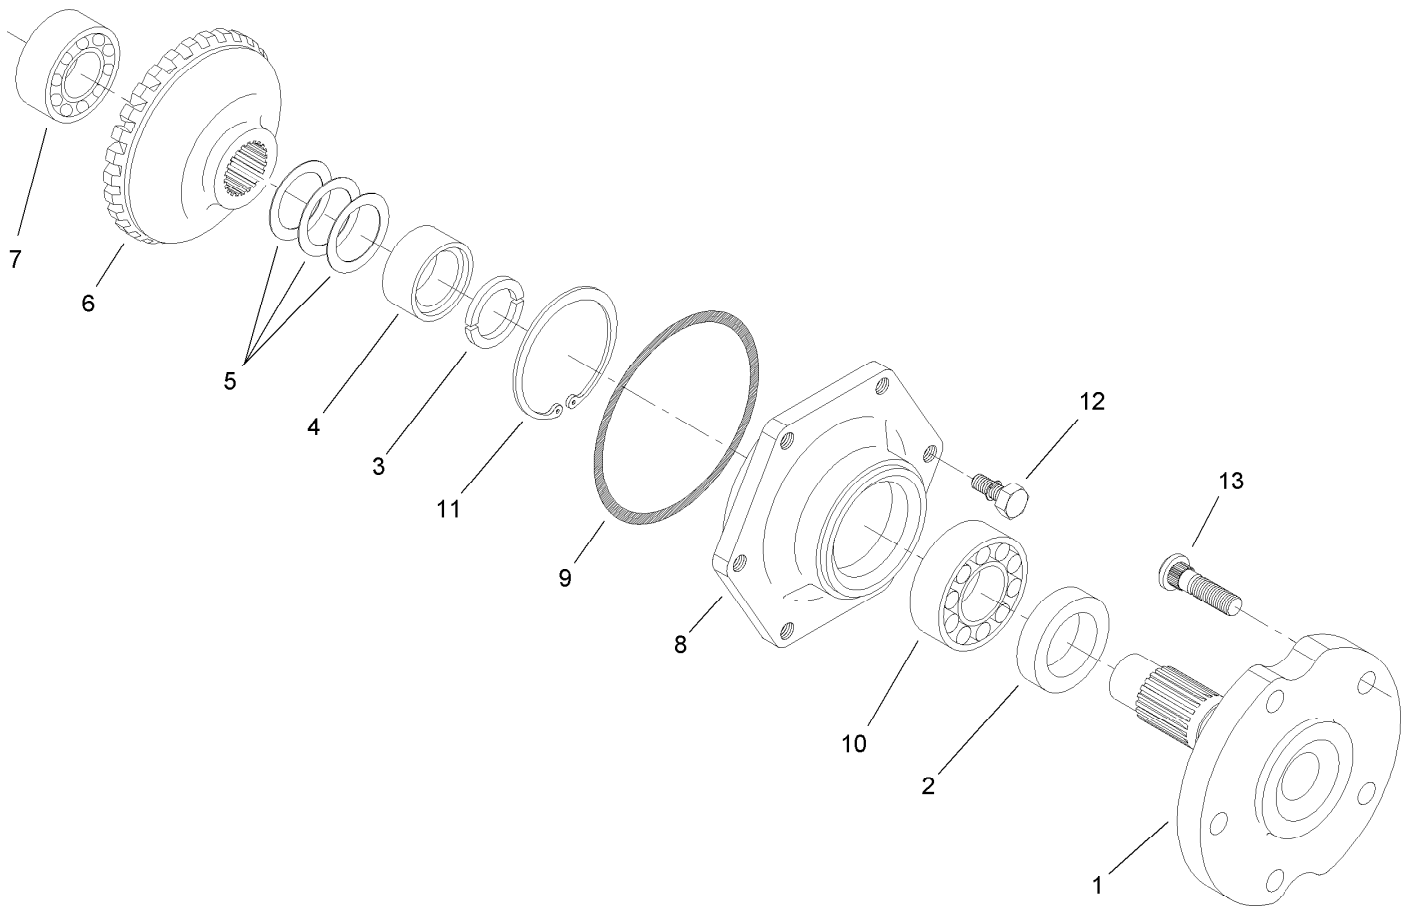 

Axle Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
1	95-7522	2	Axle
2	99-7564	2	Seal-Oil
3	95-7544	4	Clip
4	95-7523	2	Spacer
5	99-7555	2	Shim 0.3
5	99-7556	2	Shim 0.2
5	99-7557	2	Shim 0.5
6	95-7524	2	Gear-Bevel, 29 Tooth
7	99-7534	2	Bearing-Ball
8	95-7521	2	Cover-Axle
9	106-1071	2	O-Ring
10	99-7561	2	Bearing-Ball
11	99-7539	2	Clip
12	99-7596	12	Bolt
13	99-7563	10	Stud

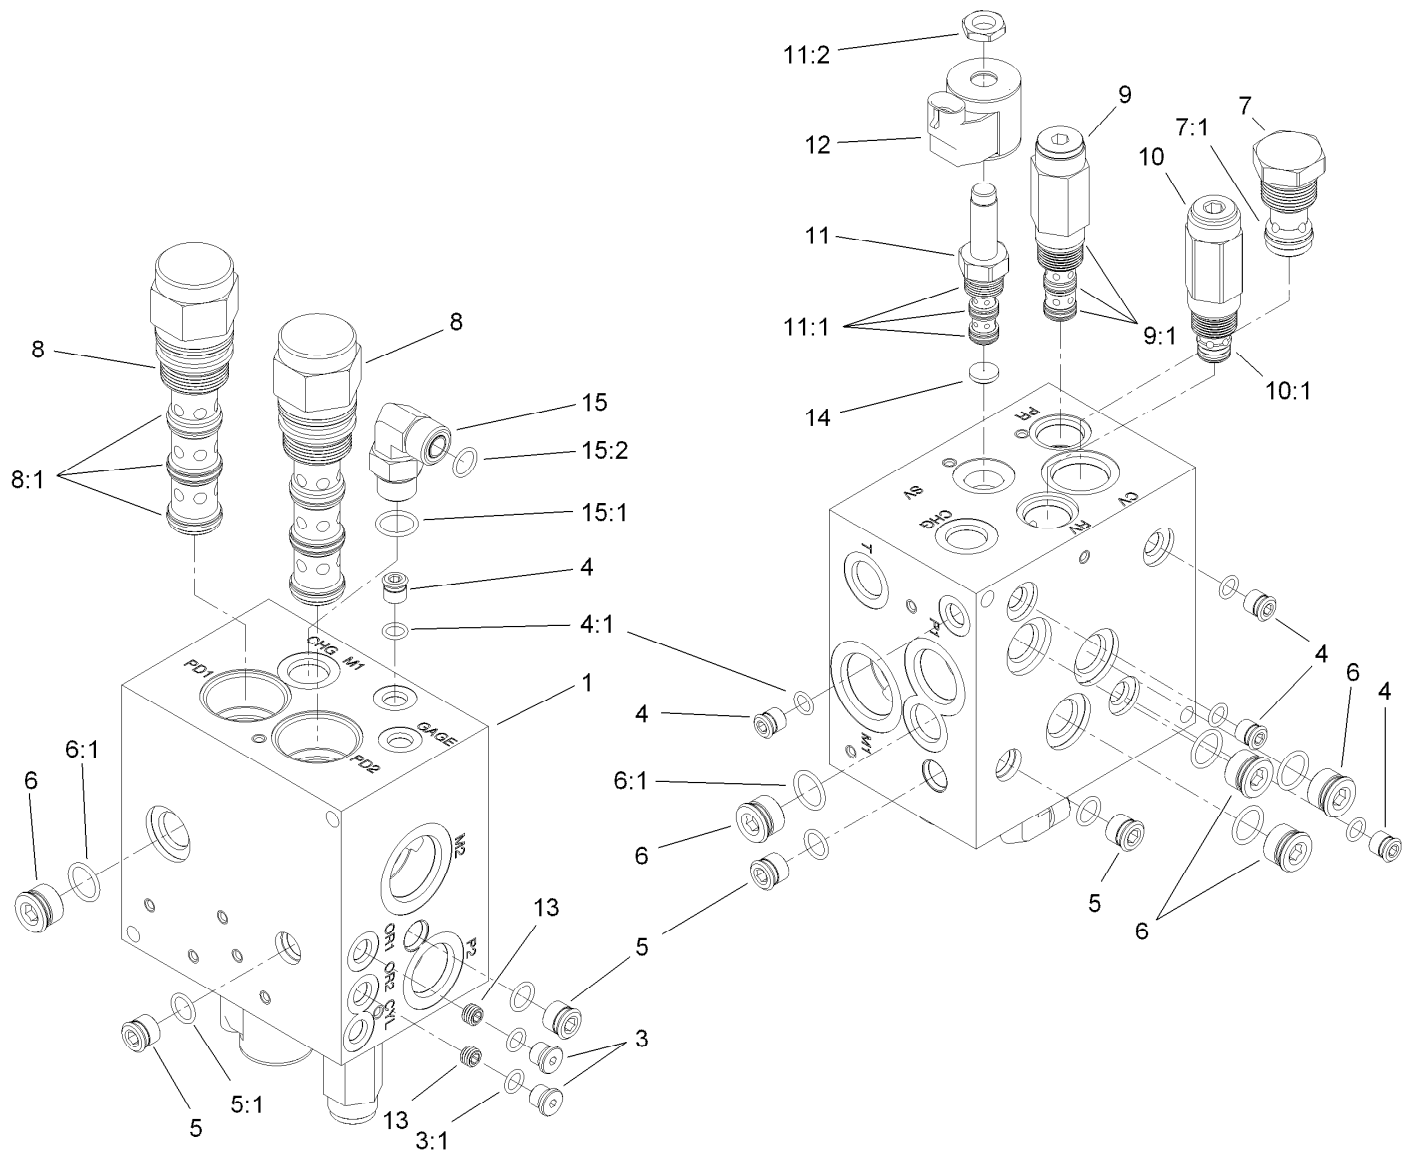 


4-Wheel Drive Manifold Assembly No. 112-9123

Ref.	Part Number	Qty.	Description
1		1	Manifold Block ●
3	353-990	2	Plug ASM
3:1	237-78	1	O-Ring
4	106-1025	5	Plug-HYD
4:1	237-78	1	O-Ring
5	106-1026	4	Plug-HYD
5:1	237-42	1	O-Ring
6	106-1027	5	Plug-HYD
6:1	237-79	1	O-Ring
7	110-0468	1	Valve-Check, 5 PSI
7:1	110-0470	1	Seal Kit
8	110-0491	2	Valve-Directional
8:1	106-6775	1	Seal Kit

Ref.	Part Number	Qty.	Description
9	110-0499	1	Valve-Reducing, Pressure
9:1	105-9154	1	Seal Kit
10	110-0493	1	Valve-Relief
10:1	110-6316	1	Seal Kit
11	110-0494	1	Valve-Solenoid
11:1	110-8773	1	Seal Kit
11:2	110-2634	1	Nut-Coil
12	110-0497	1	Coil-Solenoid
13	110-0495	2	Plug-Orifice (0.050 Inch)
14	110-0498	1	Orifice (.030)
15	340-98	1	Fitting-Elbow, 90 DEG
15:1	237-79	1	O-Ring
15:2	237-30	1	O-Ring

 
● Not serviced separately

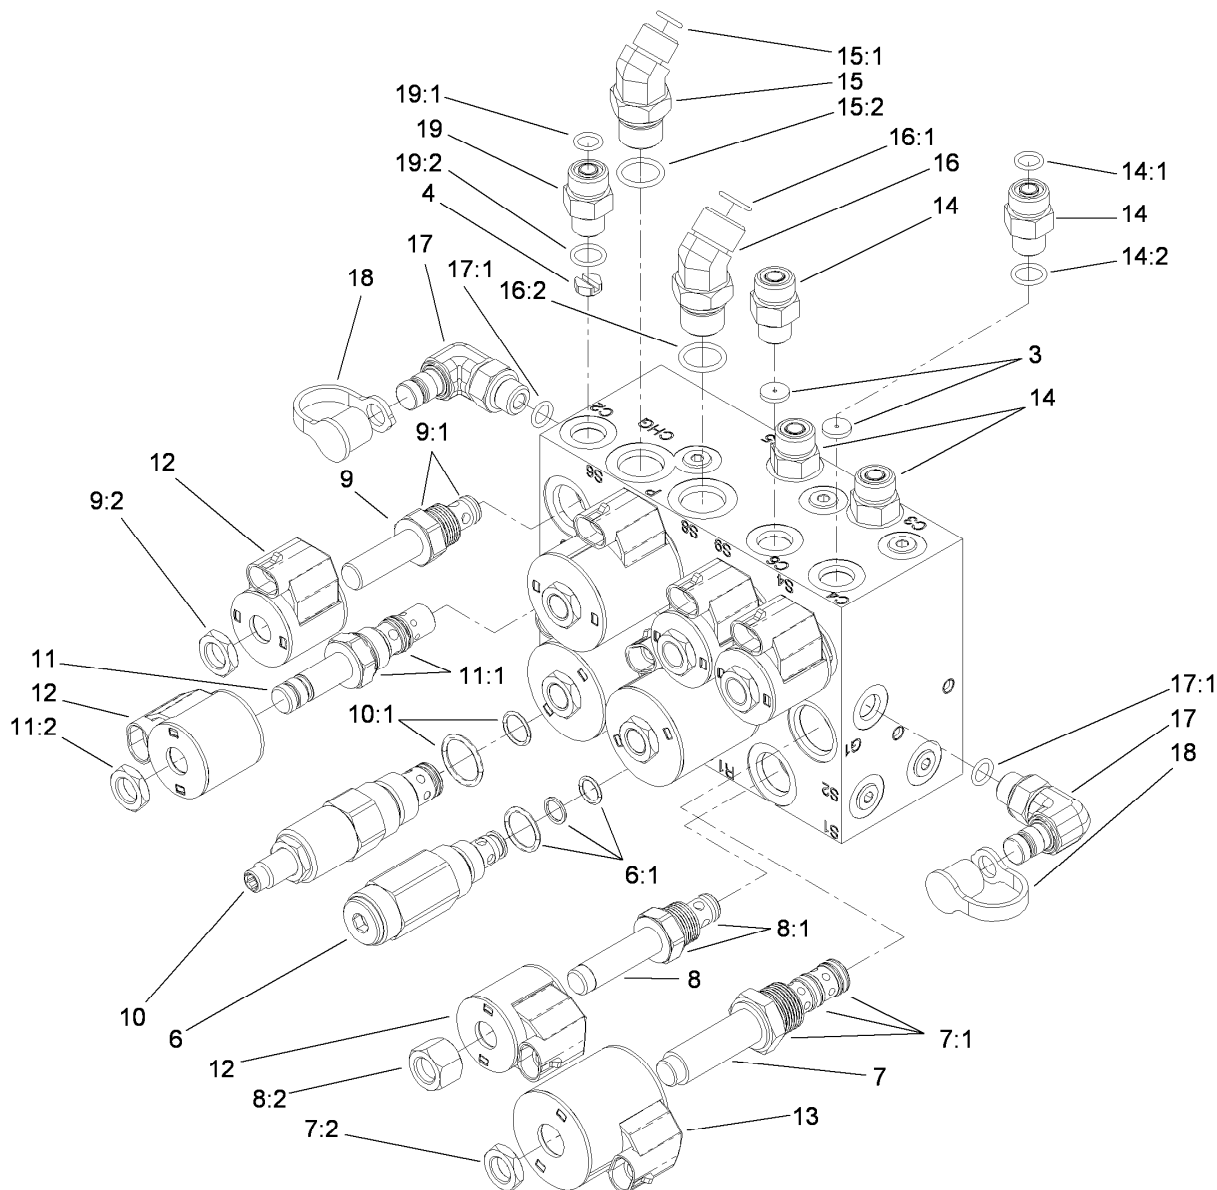

Lift Manifold Assembly No. 119-5344

Ref.	Part Number	Qty.	Description
3	117-4757	2	Orifice-Disk, .063
4	117-4756	1	Orifice-Flow Control, .080
6	119-5341	1	Valve-Relief
6:1	105-9156	1	Seal Kit
7	115-5400	4	Solenoid Valve ASM
7:1	107-7813	1	Seal Kit
7:2	110-2634	1	Nut-Coil
8	107-7517	1	Valve-Solenoid
8:1	105-9156	1	Seal Kit
8:2	107-7812	1	Nut-Solenoid
9	112-9206	3	Solenoid Valve ASM
9:1	105-9156	1	Seal Kit
9:2	110-2634	1	Nut-Coil
10	119-0062	1	Valve-Relief
10:1	110-6316	1	Seal Kit
11	115-5405	1	Solenoid Valve ASM
11:1	115-5413	1	Seal Kit
11:2	110-2634	1	Nut-Coil

Ref.	Part Number	Qty.	Description
12	110-0497	5	Coil-Solenoid
13	110-6344	4	Coil-12V, Dc
14	340-2	4	Fitting-Straight
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring
15	340-138	1	Fitting-HYD, 45 DEG
15:1	237-79	1	O-Ring
15:2	237-22	1	O-Ring
16	340-101	1	Fitting-HYD, 45 DEG
16:1	237-30	1	O-Ring
16:2	237-79	1	O-Ring
17	115-9147	2	Fitting-Elbow, 90 DEG
17:1	237-78	1	O-Ring
18	354-79	2	Cap-Dust
19	119-5343	1	Fitting-HYD, Straight
19:1	237-22	1	O-Ring
19:2	237-42	1	O-Ring

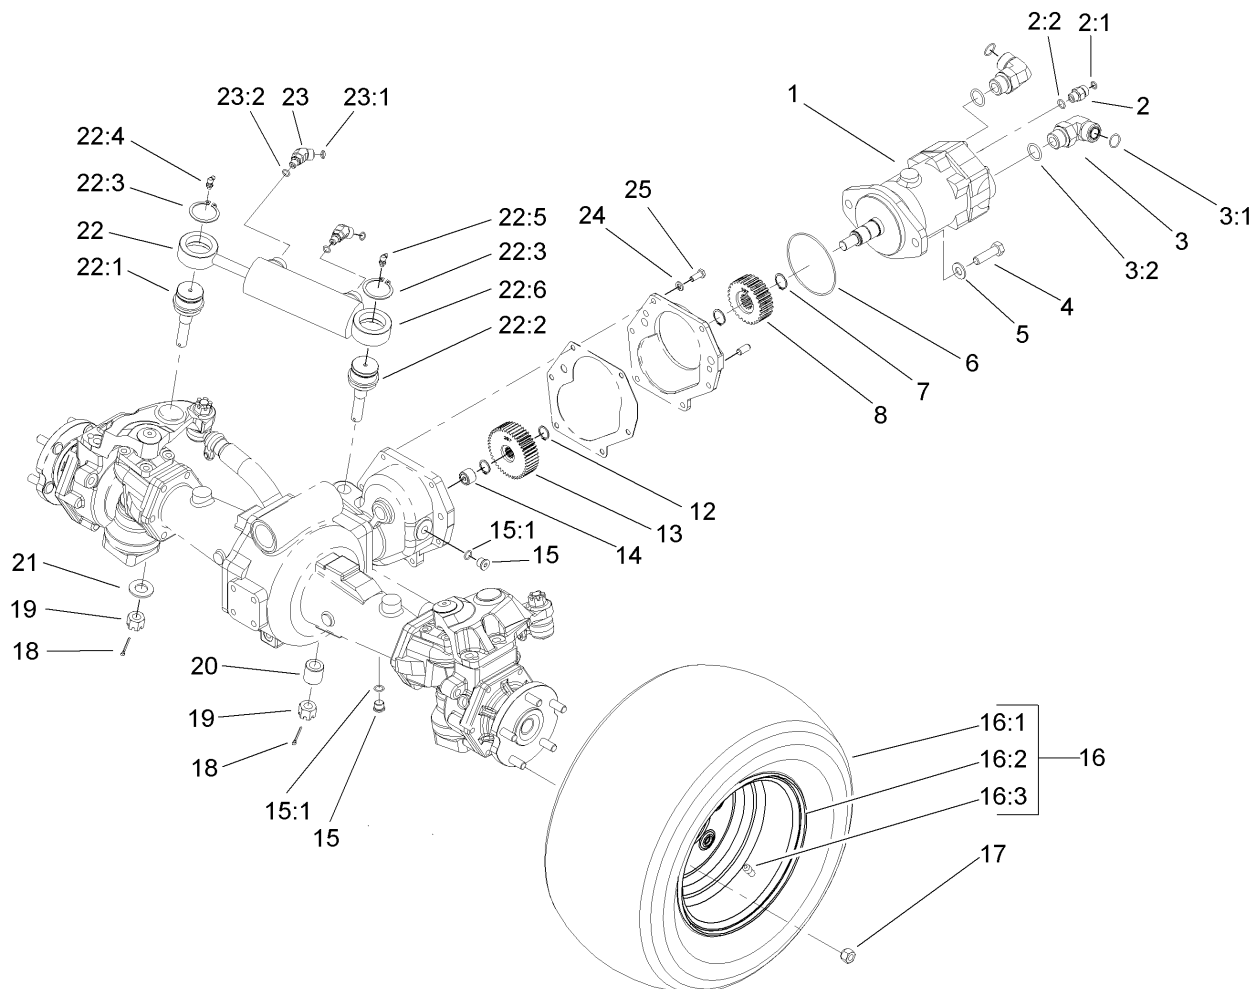 


Rear Axle and Tire Assembly

Ref.	Part Number	Qty.	Description
1	104-0764	1	Piston Motor ASM
2	340-2	1	Fitting-Straight
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	340-142	2	Fitting-Elbow-90
3:1	237-58	1	O-Ring
3:2	237-81	1	O-Ring
4	325-7	2	Screw-HH
5	3256-26	2	Washer-Flat
6	237-166	1	O-Ring
7	32120-76	2	Ring-Snap, EXT
8	105-7447	1	Pinion-33T
12	32120-15	2	Ring-Snap, EXT
13	105-7446	1	Gear-39T
14	74-5700	1	Bearing-Needle, Roller
15	353-989	2	Plug-Hex, Hollow
15:1	237-42	1	O-Ring
16		2	Wheel And Tire ASM ●
16:1	94-5236	1	Tire

Ref.	Part Number	Qty.	Description
16:2	100-2582	1	Rim
16:3	232-27	1	Stem-Valve
17	93-5268	10	Nut-Lug
18	3272-12	2	Pin-Cotter
19	32136-14	2	Nut-Hst
20	100-3796	1	Spacer-Joint, Ball
21	92-5836	1	Washer
22	105-0775	1	Steering Cylinder ASM
22:1	106-6774	1	Joint-Ball
22:2	100-3795	1	Joint-Ball
22:3	32151-104	2	Ring-Retaining, External
22:4	302-5	1	Fitting-Grease
22:5	302-60	1	Fitting-Grease
22:6		1	Cylinder-Steering ●
23	340-54	2	Elbow-45 DEG
23:1	237-22	1	O-Ring
23:2	237-78	1	O-Ring
24	3253-4	6	Washer-Lock
25	33114-020	6	Screw-HH

 
● Not serviced separately

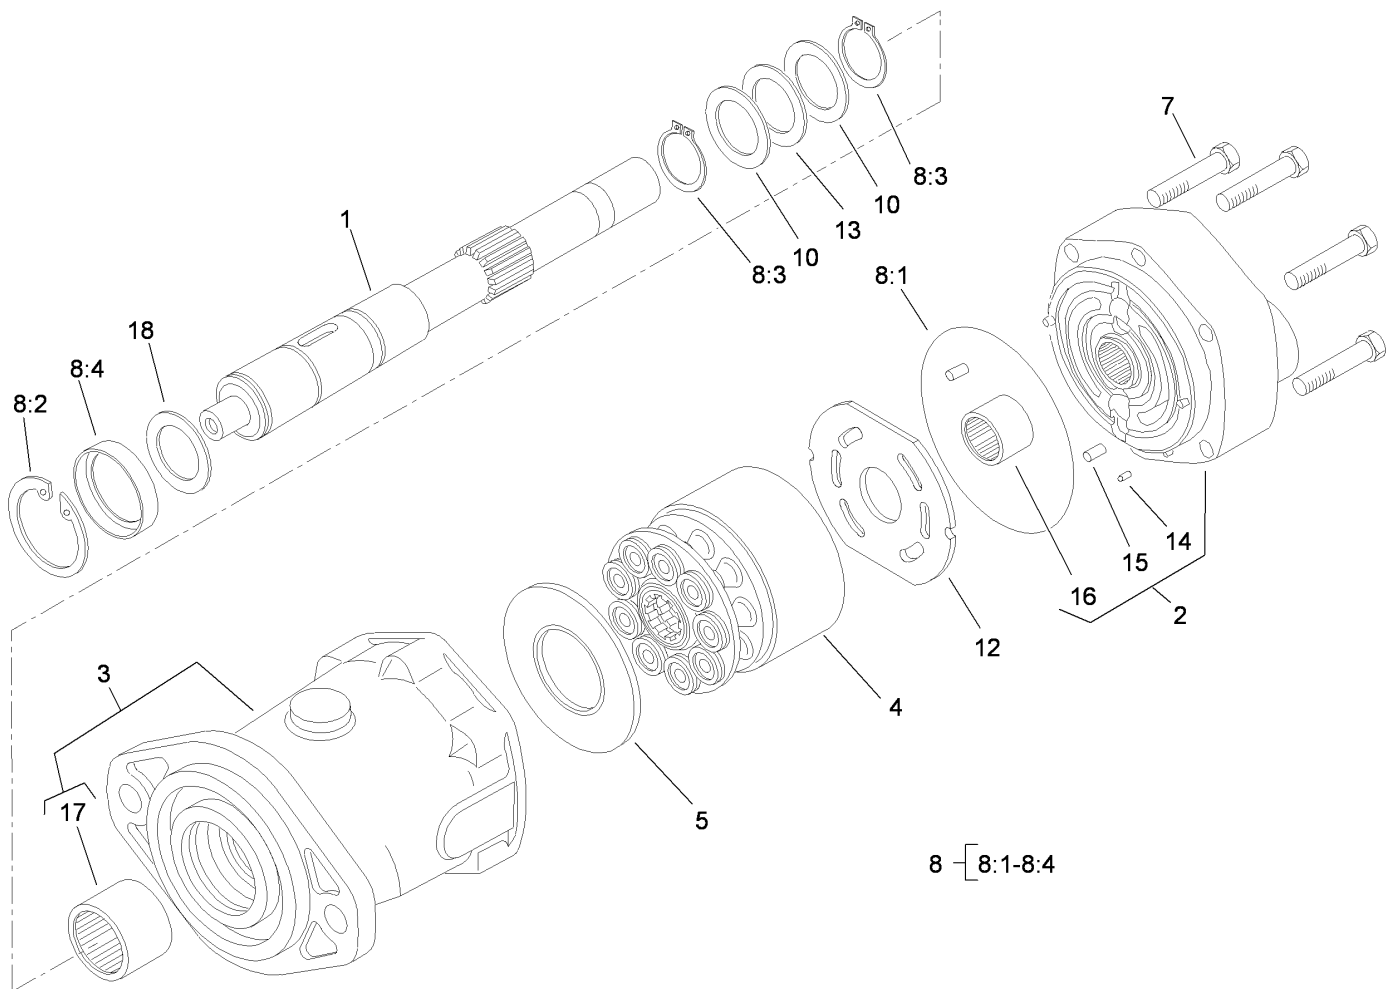

Piston Motor Assembly No. 104-0764

Ref.	Part Number	Qty.	Description
1	105-2853	1	Shaft-Drive
2	105-2854	1	Backplate ASM
3	105-2855	1	Housing ASM
4	76-6910	1	Rotating Kit
5	76-6970	1	Insert-Plate, Cam
7	94-3002	6	Screw-Cap
8	106-6876	1	Seal Kit
8:1		1	Ring-Retaining ●
8:2	76-7010	1	Ring-Retaining
8:3	76-7000	2	Ring-Retaining
8:4		1	Seal-Shaft ●
10	76-6950	2	Race-Thrust
12	94-3003	1	Plate-Valve
13	76-6960	1	Bearing-Thrust
14		3	Pin-Dowel ●
15		1	Pin-Dowel ●
16		1	Bearing-Needle ●
17		1	Bearing-Needle ●
18	60-6240	1	Washer

 
● Not serviced separately

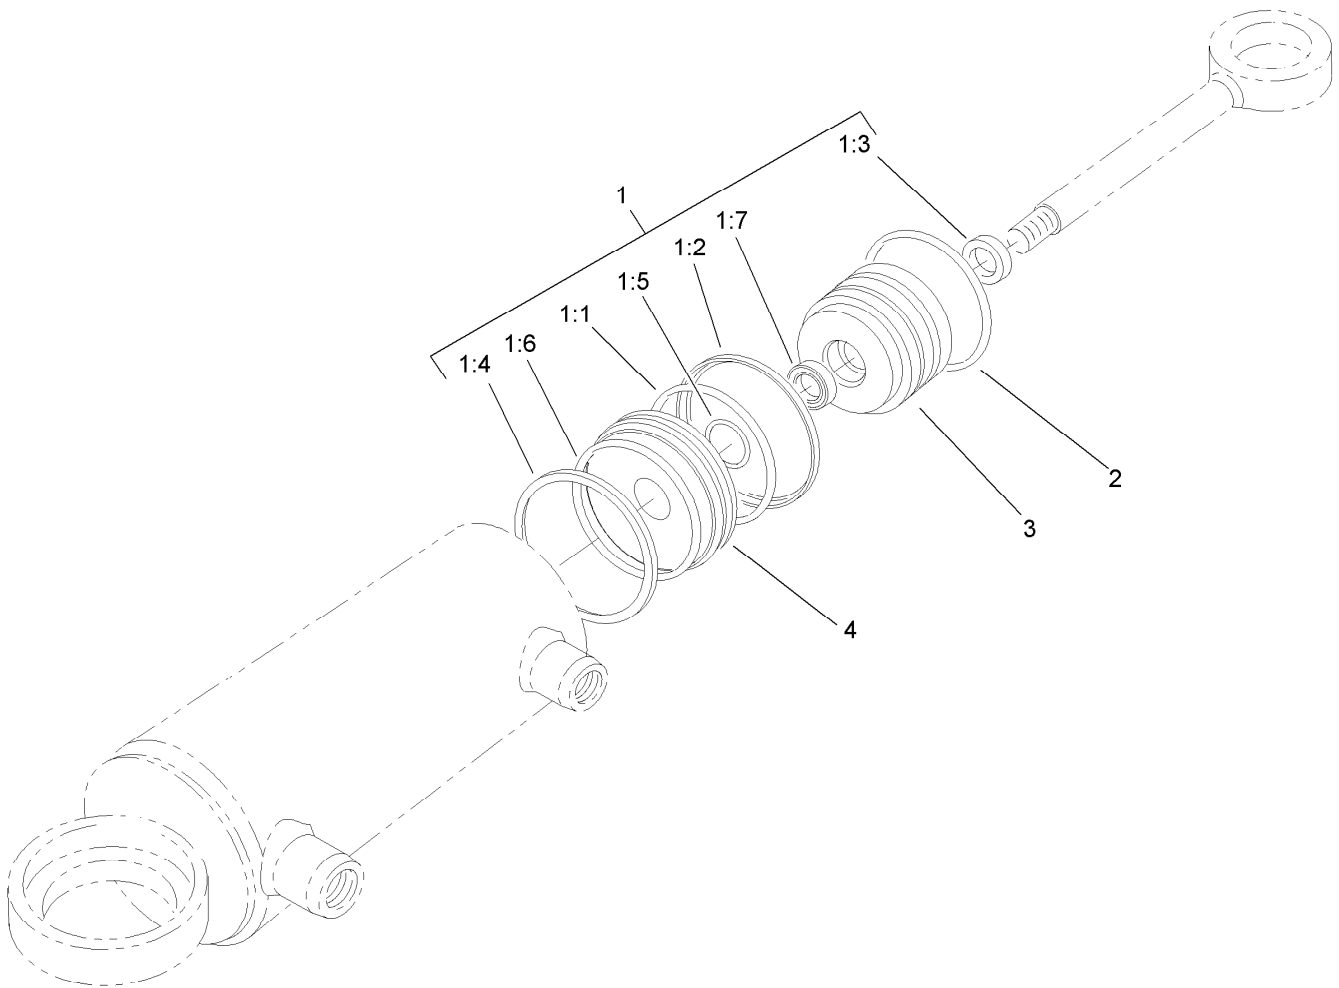

Steering Cylinder Assembly No. 105-0775

Ref.	Part Number	Qty.	Description
1	107-0245	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2		1	Back-Up ●
1:3		1	Wiper ●
1:4		1	Seal ●
1:5		1	Ring-Retaining ●
1:6		1	Ring-Retaining ●
1:7		1	Seal ●
2		1	Ring-Retaining ●
3		1	Head ●
4		1	Piston ●

 ● Not serviced separately

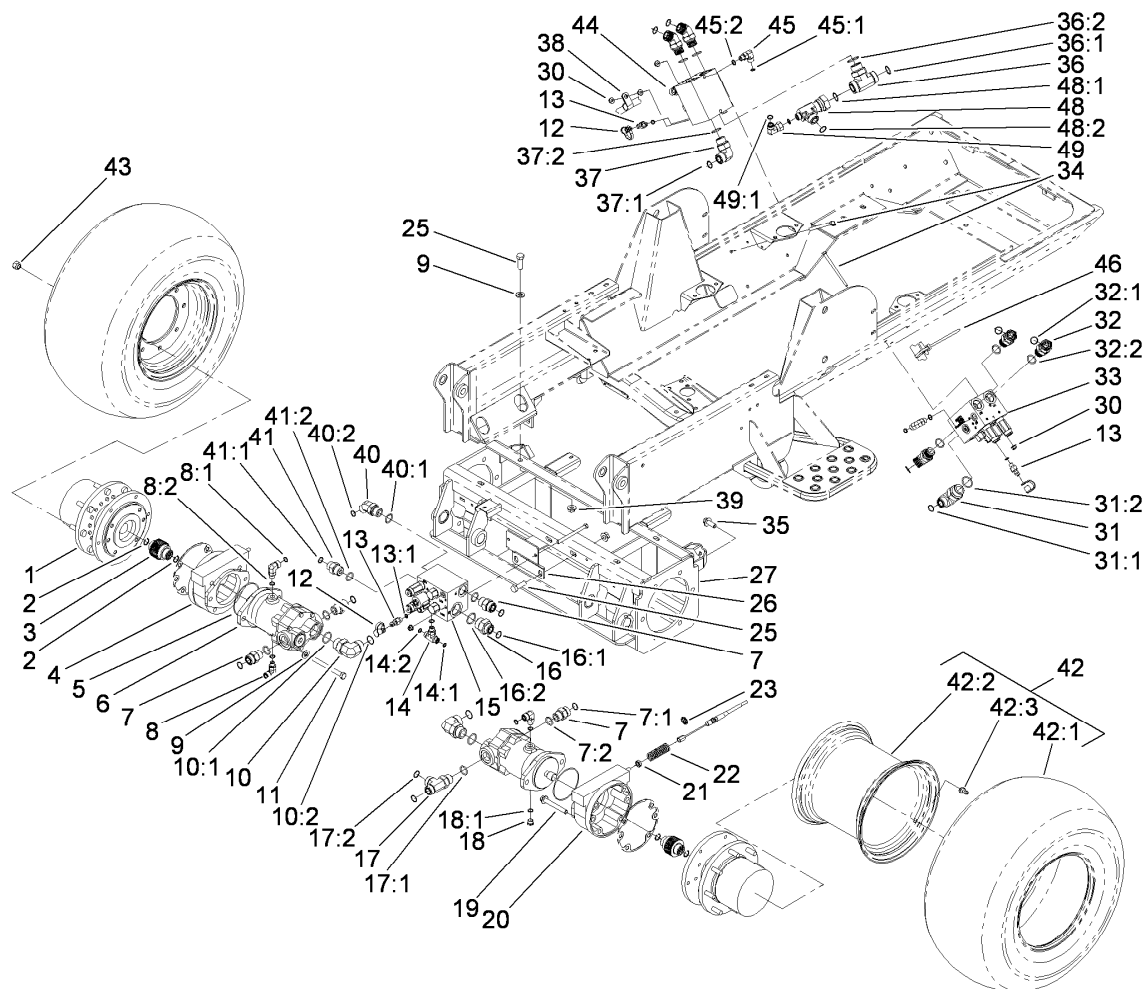


Planetary, Brake and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	105-4588	2	Planetary ASM
2	93-7972	4	Ring-Retaining, Internal
3	100-3046	2	Shaft-Brake, Splined
4	100-3069-03	1	Brake ASM
5	237-166	2	O-Ring
6	105-7376	2	Front Piston Motor ASM
7	340-9	4	Fitting-STR
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring
8	340-99	3	Fitting-HYD, 90 DEG
8:1	237-30	1	O-Ring
8:2	237-42	1	O-Ring
9	3256-26	10	Washer-Flat
10	340-129	2	Fitting-Elbow, 90 DEG
10:1	237-146	1	O-Ring
10:2	340-65	1	O-Ring
11	33116-120	4	Screw-HH
12	354-79	3	Cap-Dust
13	354-77	3	Fitting-Quick
13:1	237-78	1	O-Ring
14	340-94	1	Adapter
14:1	237-22	2	O-Ring
14:2	237-42	1	O-Ring
15	115-8467	1	PTO Manifold ASM
16	340-91	1	Fitting-STR

Ref.	Part Number	Qty.	Description
16:1	237-58	1	O-Ring
16:2	237-146	1	O-Ring
17	340-148	1	Fitting-Tee
17:1	237-81	1	O-Ring
17:2	237-58	2	O-Ring
18	353-989	1	Plug-Hex, Hollow
18:1	237-42	1	O-Ring
19	33106-090	8	Screw-HHF
20	100-3070-03	1	Brake ASM
21	3218-4	2	Nut-Jam
22	94-3088	2	Spring-Compression
23	119-0111	4	Plate-Spring
25	325-6	8	Screw-HH
26	104-0746-03	1	Bracket-Manifold
27	114-9775-03	1	Frame-Front
30	104-8300	7	Nut-HF, NI
31	340-15	1	Fitting-Elbow 90
31:1	237-58	1	O-Ring
31:2	237-146	1	O-Ring
32	100-5530	5	Fitting-45 DEG
32:1	237-58	1	O-Ring
32:2	237-81	1	O-Ring
33	115-8469	1	PTO Manifold ASM
34	322-38	6	Screw-HH
35	33106-030	12	Screw-HHF

 ● Not serviced separately

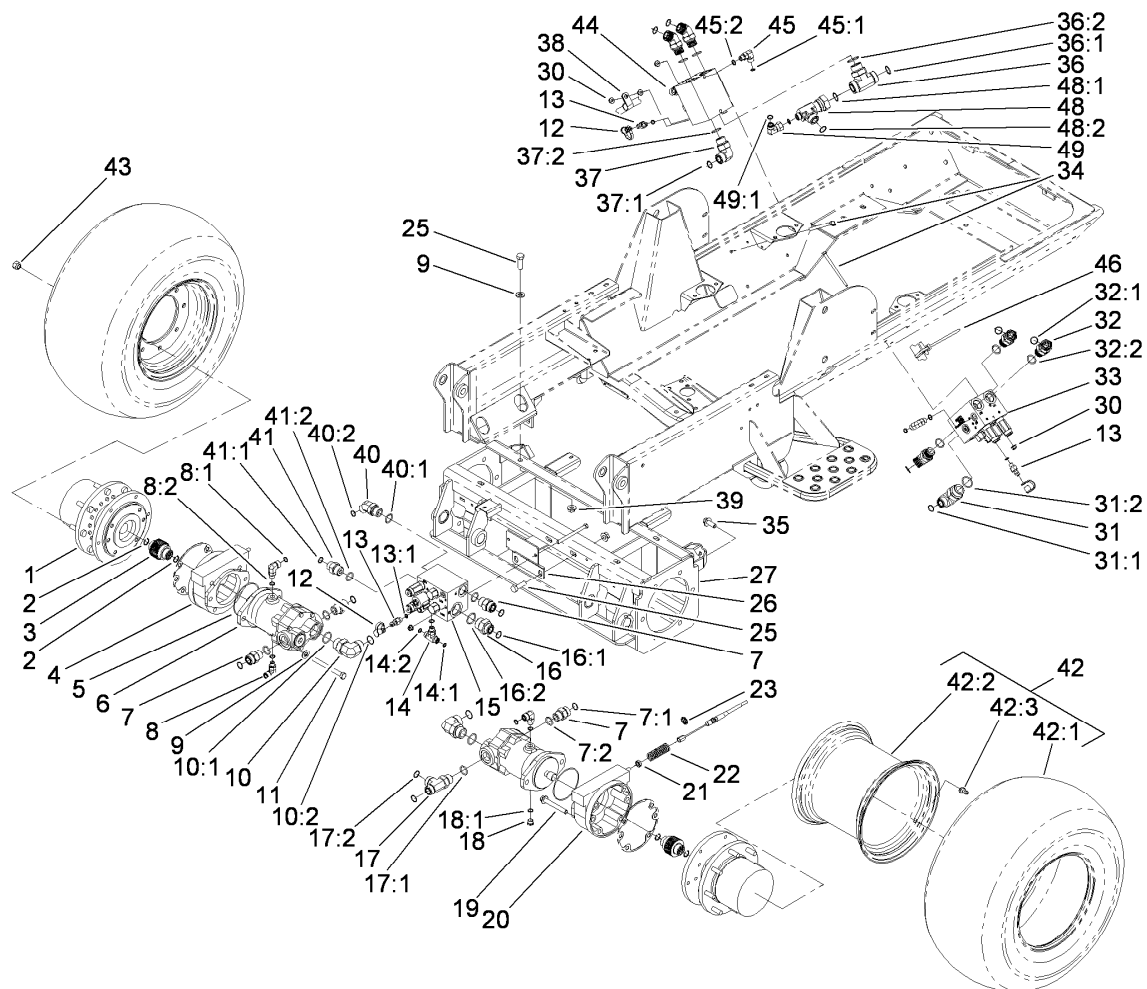


Planetary, Brake and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
36	104-7501	1	Fitting-HYD
36:1	340-65	2	O-Ring
36:2	237-146	1	O-Ring
37	340-142	1	Fitting-Elbow-90
37:1	237-58	1	O-Ring
37:2	237-81	1	O-Ring
38	2412-81	1	Clamp-R
39	32128-23	8	Nut-HF
40	340-156	1	Fitting-Elbow 45
40:1	237-65	1	O-Ring
40:2	237-81	1	O-Ring
41	340-8	1	Fitting-Straight
41:1	237-65	1	O-Ring
41:2	237-81	1	O-Ring
42		2	Wheel And Tire ASM ●

Ref.	Part Number	Qty.	Description
42:1	119-8313	1	Tire
42:2	119-8314	1	Rim
42:3	232-27	1	Stem-Valve
43	242-50	16	Nut-Lug
44	115-8468	1	PTO Manifold ASM
45	340-77	2	Fitting-Elbow, 90 DEG
45:1	237-22	1	O-Ring
45:2	237-42	1	O-Ring
46	3290-378	3	Tie-Cable
48	115-8472	1	Fitting-HYD, Tee
48:1	237-30	1	O-Ring
48:2	237-58	1	O-Ring
49	94-6031	1	Fitting-HYD
49:1	237-30	1	O-Ring

 ● Not serviced separately

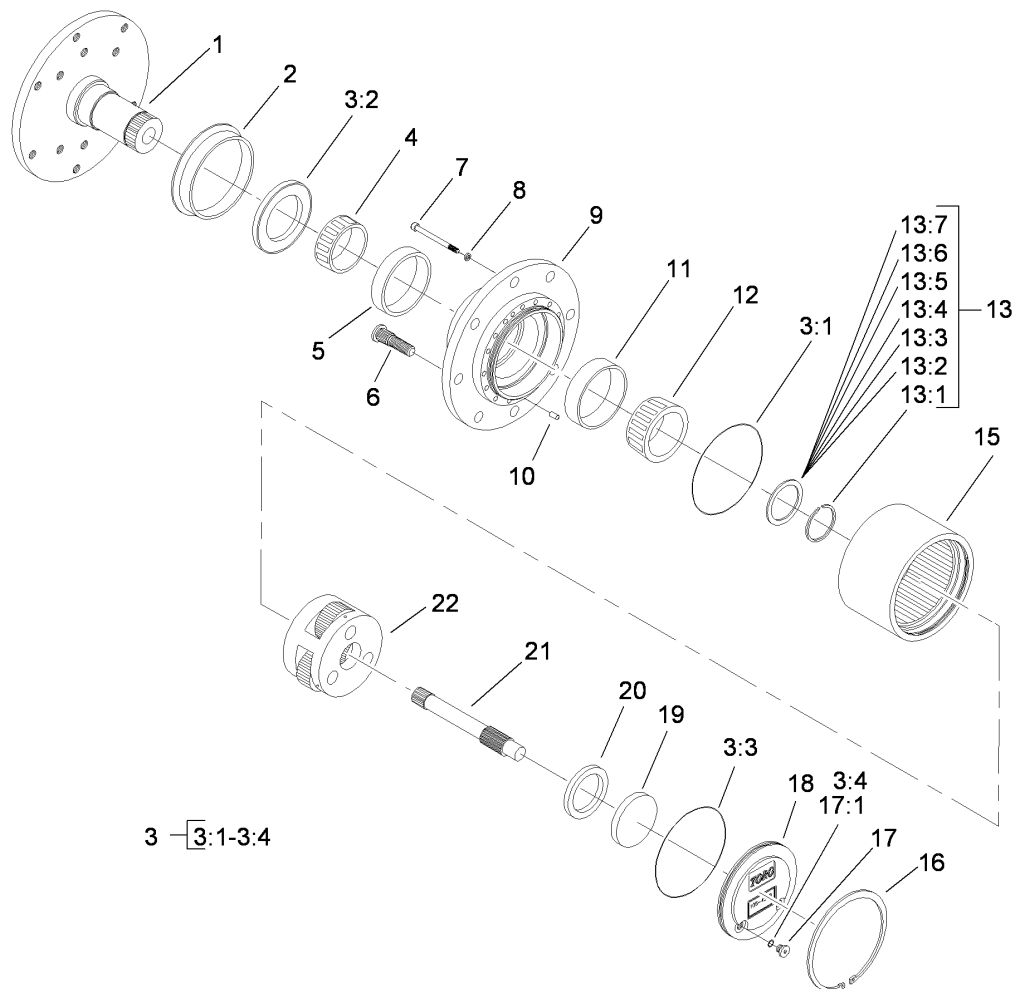


Planetary Assembly No. 105-4588

Ref.	Part Number	Qty.	Description
1		1	Spindle ●
2	105-8122	1	Seal-Boot
3	105-8137	1	Seal Kit
3:1		1	O Ring-Flange Cap ●
3:2		1	Seal-Oil ●
3:3		2	O Ring-End Cap ●
3:4	237-78	2	O-Ring
4	105-8120	1	Bearing-Cone
5	105-8119	1	Bearing-Cup
6	105-8124	8	Stud-Wheel
7	105-8125	16	Bolt-Head, Socket
8	3253-18	16	Washer-Lock
9		1	Housing ●
10	105-8121	2	Pin-Dowel
11	105-8117	1	Bearing-Cup
12	105-8118	1	Bearing-Cone
13	105-8136	1	Shim Kit


Ref.	Part Number	Qty.	Description
13:1		1	Ring-Snap ●
13:2		1	Shim-Bearing, 2.9Mm ●
13:3		1	Shim-Bearing, 2.8Mm ●
13:4		1	Shim-Bearing, 2.7Mm ●
13:5		1	Shim-Bearing, 2.6Mm ●
13:6		1	Shim-Bearing, 2.5Mm ●
13:7		1	Shim-Bearing, 2.4Mm ●
15	105-8113	1	Gear-Ring
16	105-8132	1	Ring-Retaining
17	353-990	2	Plug ASM
17:1	237-78	1	O-Ring
18	105-8138	1	Cap-End
19	105-8135	1	Plug-Thrust
20	106-6864	1	Washer-Thrust
21	105-8116	1	Shaft-Drive
22	106-6865	1	Secondary Carrier ASM

 ● Not serviced separately

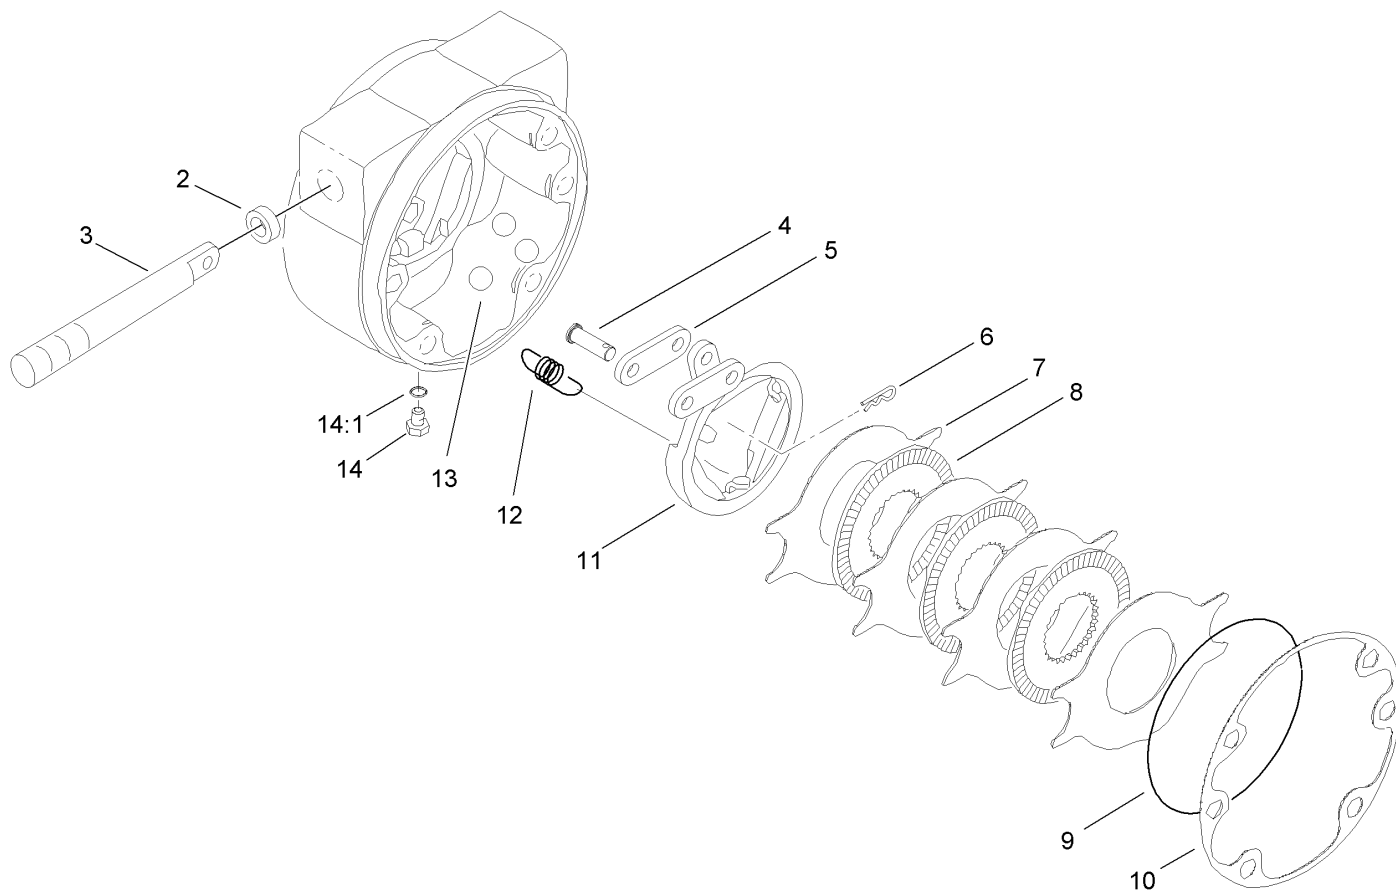

Brake Assembly No. 100-3069-03


Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4280	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

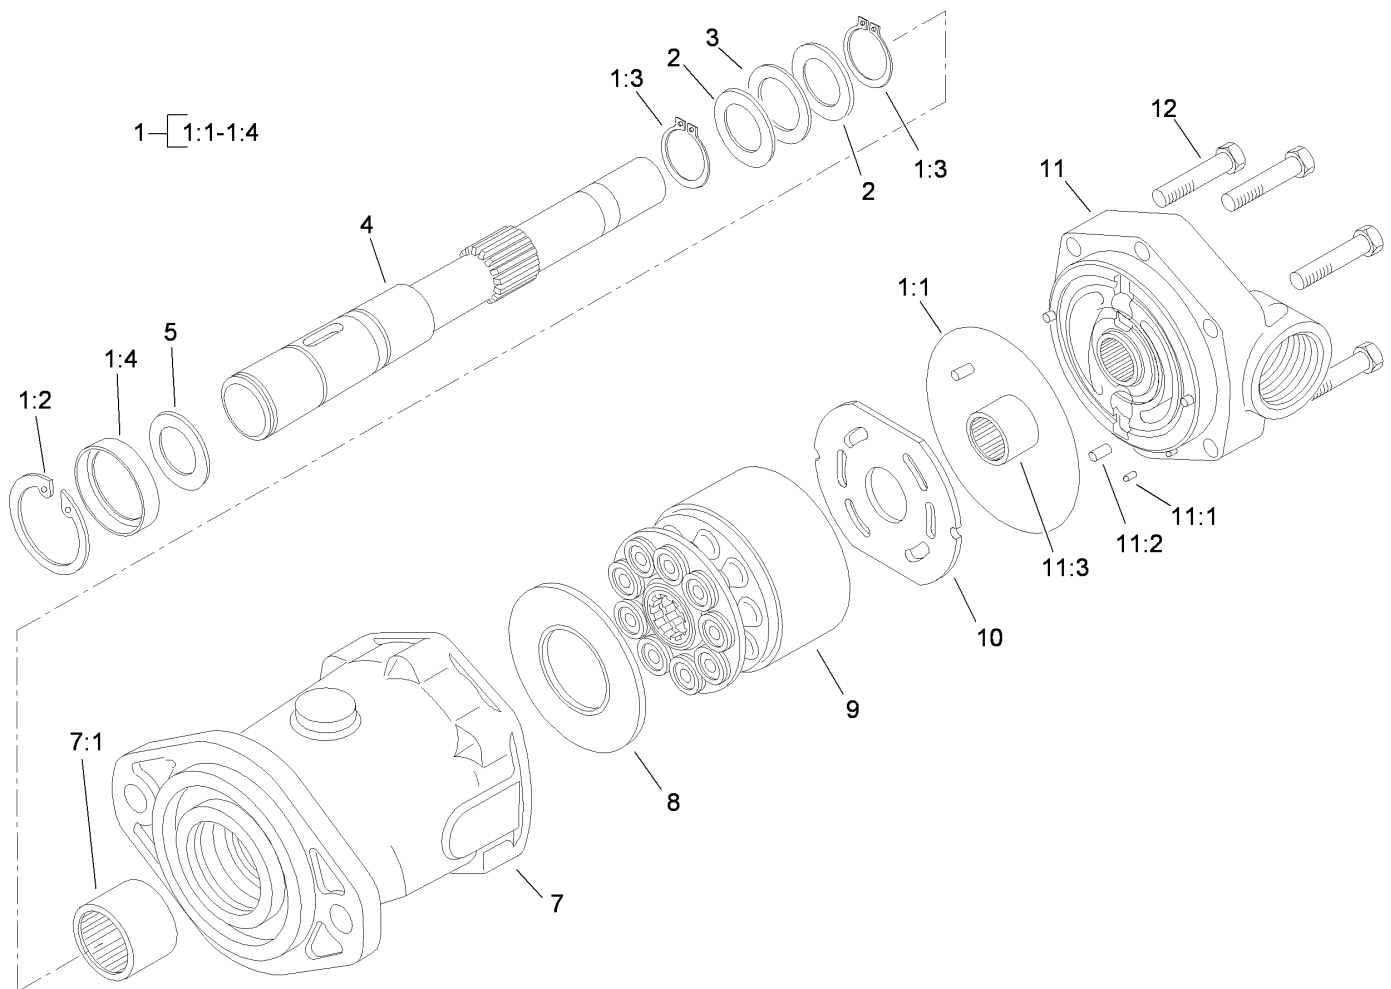 

Front Piston Motor Assembly No. 105-7376


Ref.	Part Number	Qty.	Description
1	106-6876	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2	76-7010	1	Ring-Retaining
1:3	76-7000	2	Ring-Retaining
1:4		1	Seal-Shaft ●
2	60-6160	2	Race
3	76-6960	1	Bearing-Thrust
4	106-6874	1	Shaft-Drive
5	60-6240	1	Washer
7	105-2852	1	Housing ASM
7:1		1	Bearing-Needle ●
8	76-6970	1	Insert-Plate, Cam
9	106-6875	1	Rotating Kit
10	94-3003	1	Plate-Valve
11	105-2851	1	Backplate ASM
11:1		3	Pin-Dowel ●
11:2		1	Pin-Dowel ●
11:3		1	Bearing-Needle ●
12	100-2550	6	Screw-Cap

 ● Not serviced separately

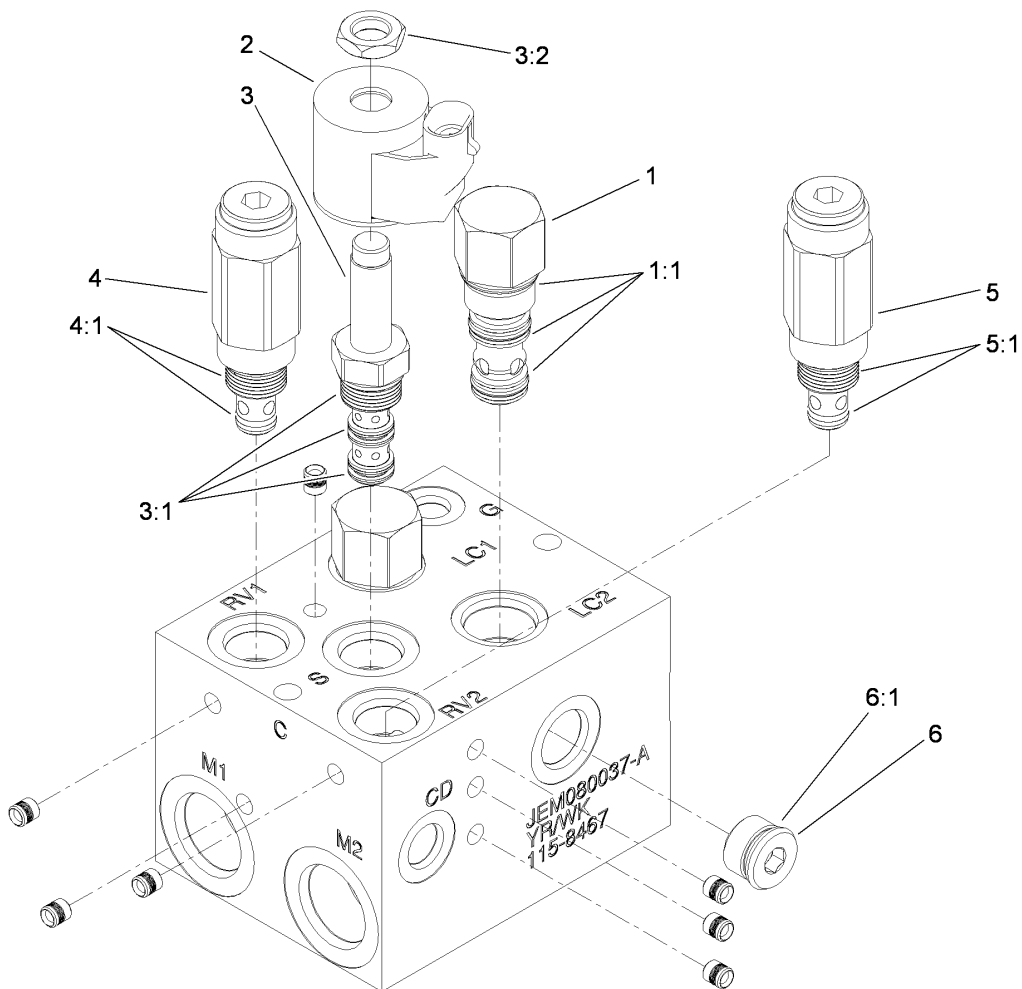



Hydraulic PTO Manifold Assembly No. 115-8467

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-9153	2	Element-Logic, Vented
1:1	105-9154	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring

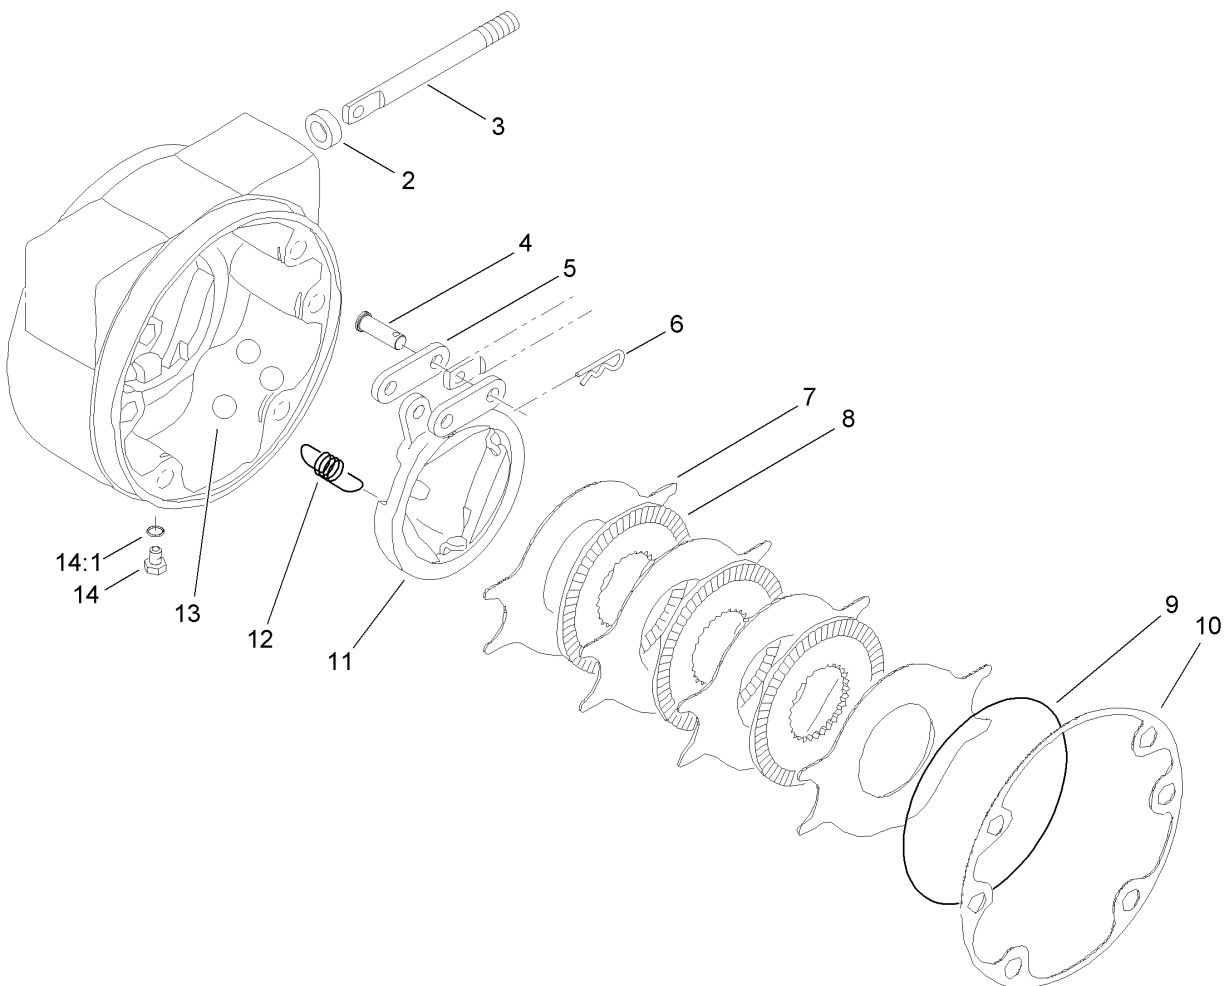 


Brake Assembly No. 100-3070-03

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4279	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

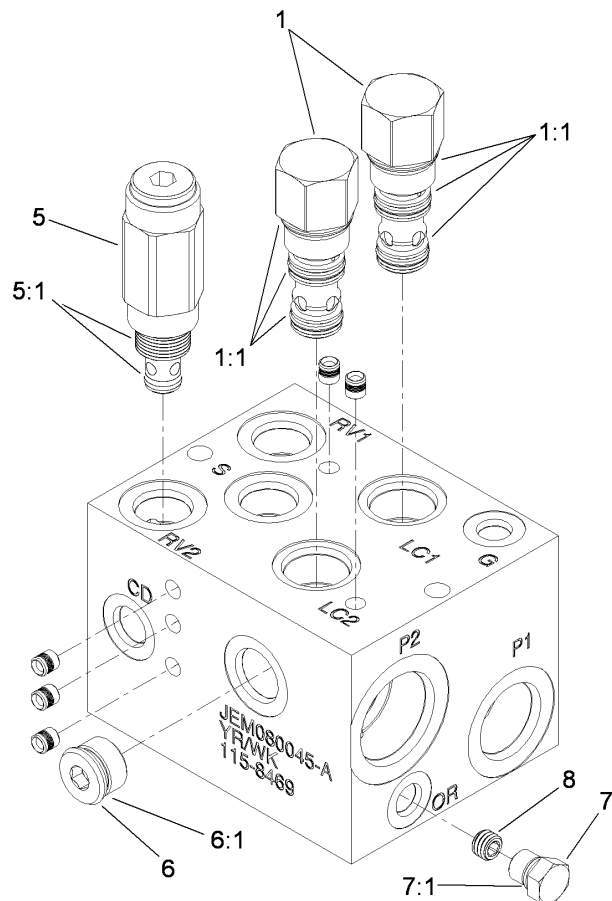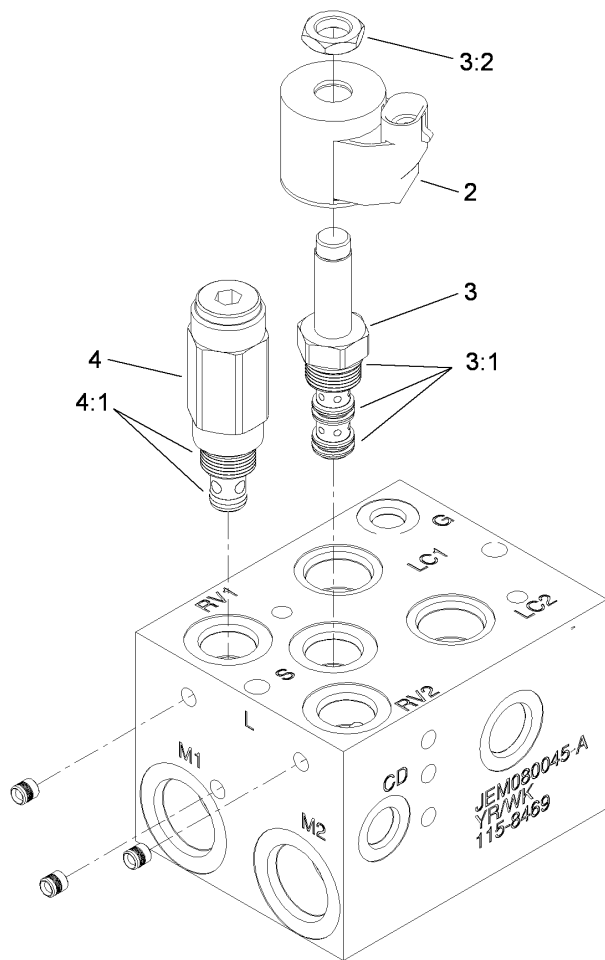  


Hydraulic PTO Manifold Assembly No. 115-8469

Ref.	Part Number	Qty.	Description
1	105-9153	2	Element-Logic, Vented
1:1	105-9154	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring
7	353-512	1	Plug
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063 Inch)

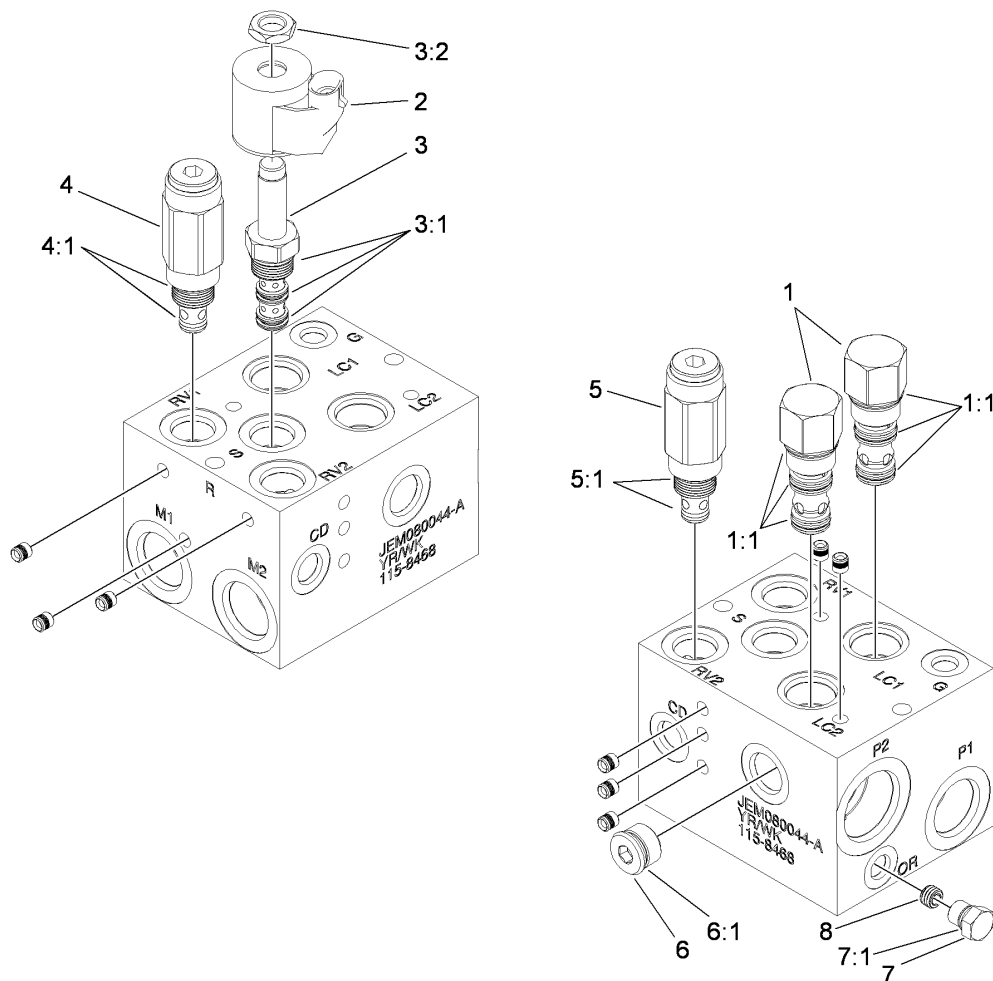 

Hydraulic PTO Manifold Assembly No. 115-8468


Ref.	Part Number	Qty.	Description
1	105-9153	2	Element-Logic, Vented
1:1	105-9154	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5514	1	Valve-Relief, 2000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring
7	353-512	1	Plug
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063 Inch)

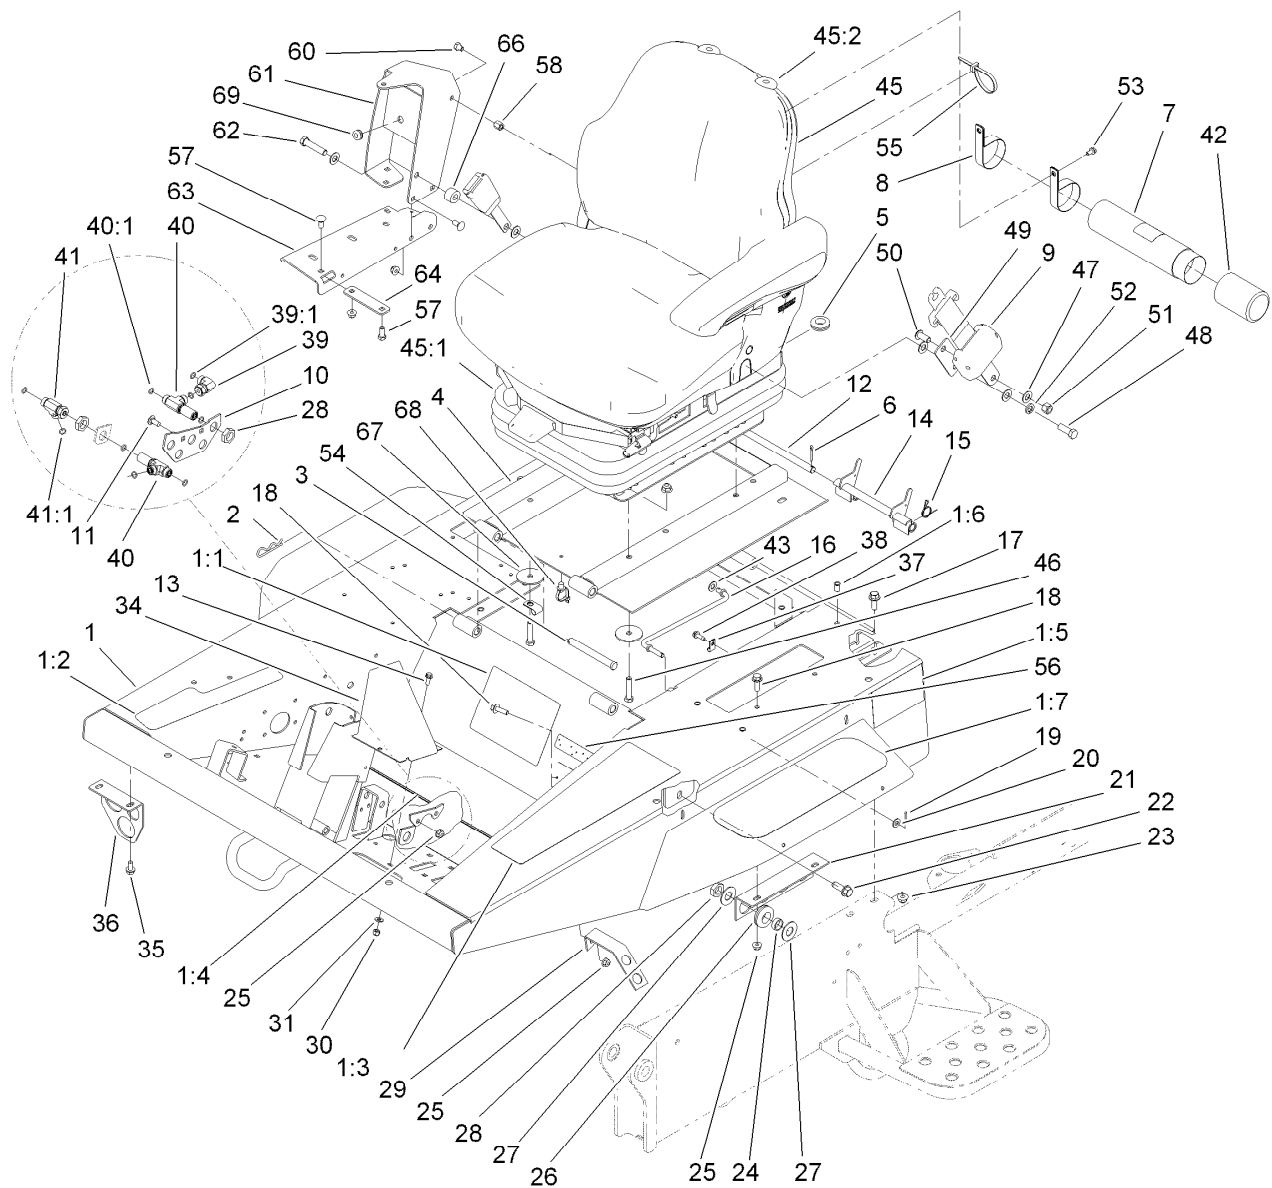 

Platform and Seat Base Assembly

Ref.	Part Number	Qty.	Description
1	117-5710	1	Platform ASM
1:1	117-5735	1	Decal-Operating Instructions
1:2	104-3599	1	Decal-Pedal, Traction
1:3	93-5507	1	Abrasive-Platform
1:4	93-5349	2	Abrasive-Floor
1:5	94-8099	2	Decal
1:6	32148-6	15	Nut-Clinch
1:7	105-7375	1	Abrasive-Platform
2	3290-355	2	Pin-Hair
3	283-83	2	Pin-Clevis
4	117-5727-03	1	Plate-Seat
5	100-4866	1	Grommet
6	3272-11	2	Pin-Cotter
7	104-7050	1	Tube-Manual
8	2412-133	2	Clamp-R
9	110-0413	1	Seatbelt-Retractable
10	119-0063-01	1	Plate-Bulkhead
11	3230-23	2	Screw-CARR
12	93-5366	1	Shaft-Latch
13	3234-4	2	Screw-HHF


Ref.	Part Number	Qty.	Description
14	93-5363	1	Latch ASM
15	93-5367	1	Spring-Torsion
16	93-5338	1	Rod-Prop
17	3234-42	2	Screw-HHF
18	3234-29	3	Screw-HHF
19	3272-5	2	Pin-Cotter
20	3256-23	1	Washer-Plain
21	100-3149-03	1	Bracket-Bulkhead
22	32144-67	2	Screw
23	104-8301	6	Nut-HF, NI
24	69-8970	4	Spacer
25	104-8300	11	Nut-HF, NI
26	240-4	4	Grommet-Rubber
27	69-8940	8	Washer
28	340-70	6	Nut-Lock
29	100-5500-03	1	Support
30	3296-42	2	Nut-Lock, NI
31	3256-22	2	Washer-Flat
34	100-3045-01	1	Cover-Tubes
35	32144-14	4	Screw-HWHTF
36	105-7373-01	1	Bracket-Bulkhead, LH

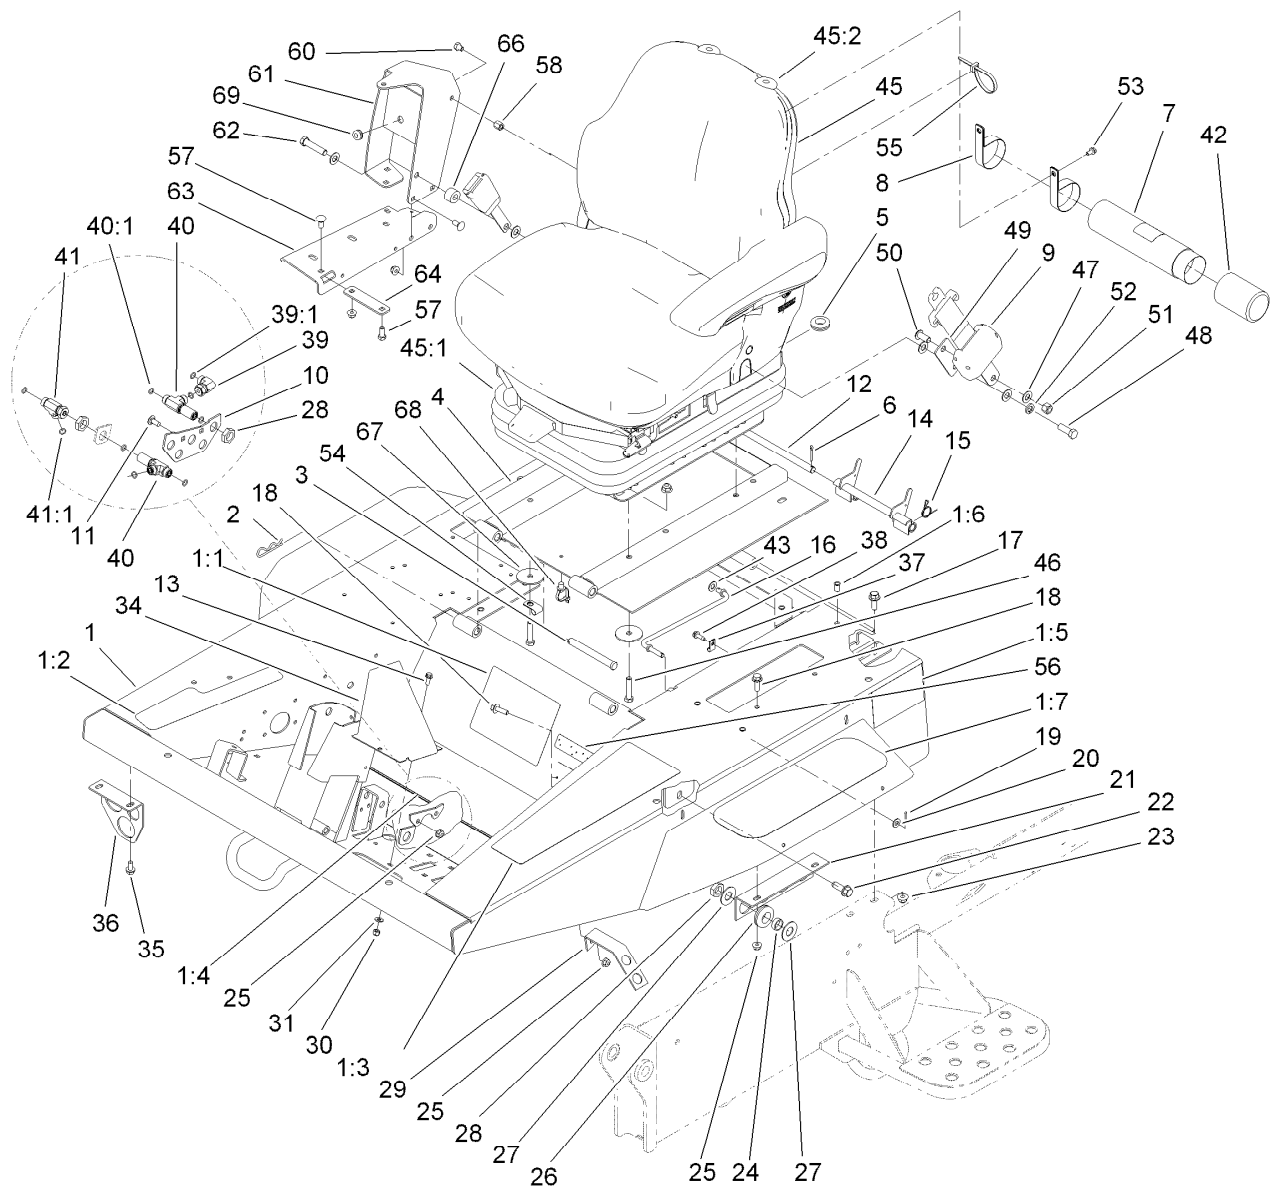 

Platform and Seat Base Assembly (continued)

Ref.	Part Number	Qty.	Description
36	105-7489-01	1	Bracket-Bulkhead, RH
37	2412-72	1	Clip-Closed, Insulated
38	32104-95	1	Screw-HWH
39	340-159	1	Fitting-HYD, 90 DEG
39:1	237-22	2	O-Ring
40	340-68	2	Fitting-Tee, Bulkhead
40:1	237-22	3	O-Ring
41	340-115	1	Fitting-Tee, Swivel Nut
41:1	237-22	2	O-Ring
42	104-7048	1	Cap-Housing
43	3256-82	1	Washer-Flat
45	117-9428	1	Seat / Suspension ASM
45:1	108-1488	1	Seat Suspension ASM
45:2	117-9429	1	Matrix Cloth Seat ASM
46	323-9	4	Screw-HH
47	3256-25	5	Washer-Flat
48	3212-5	1	Screw-HH
49	108-1516	1	Mount-Belt, Seat

Ref.	Part Number	Qty.	Description
50	3274-105	1	Screw-HSBH
51	3296-48	1	Nut-Lock, NI
52	3253-6	1	Washer-Lock
53	32104-116	2	Screw-HWHTF
54	2412-113	1	Clamp-R
55	3290-378	2	Tie-Cable
56	117-2718	1	Decal-Arrester, Spark
57	3230-23	6	Screw-CARR
58	112-7405	1	Nut-Hex, Coupling
60	108-8646	1	Screw-HH, Lock
61	117-4798-03	1	Arm-Support
62	3212-8	1	Screw-HH
63	119-0000-03	1	Channel-Support
64	112-7449-03	1	Bracket-Support
66	17-7190	1	Spacer-Finger
67	83-1040	4	Washer-Flat
68	32180-030	1	Clip-Tie
69	237-136	1	Grommet

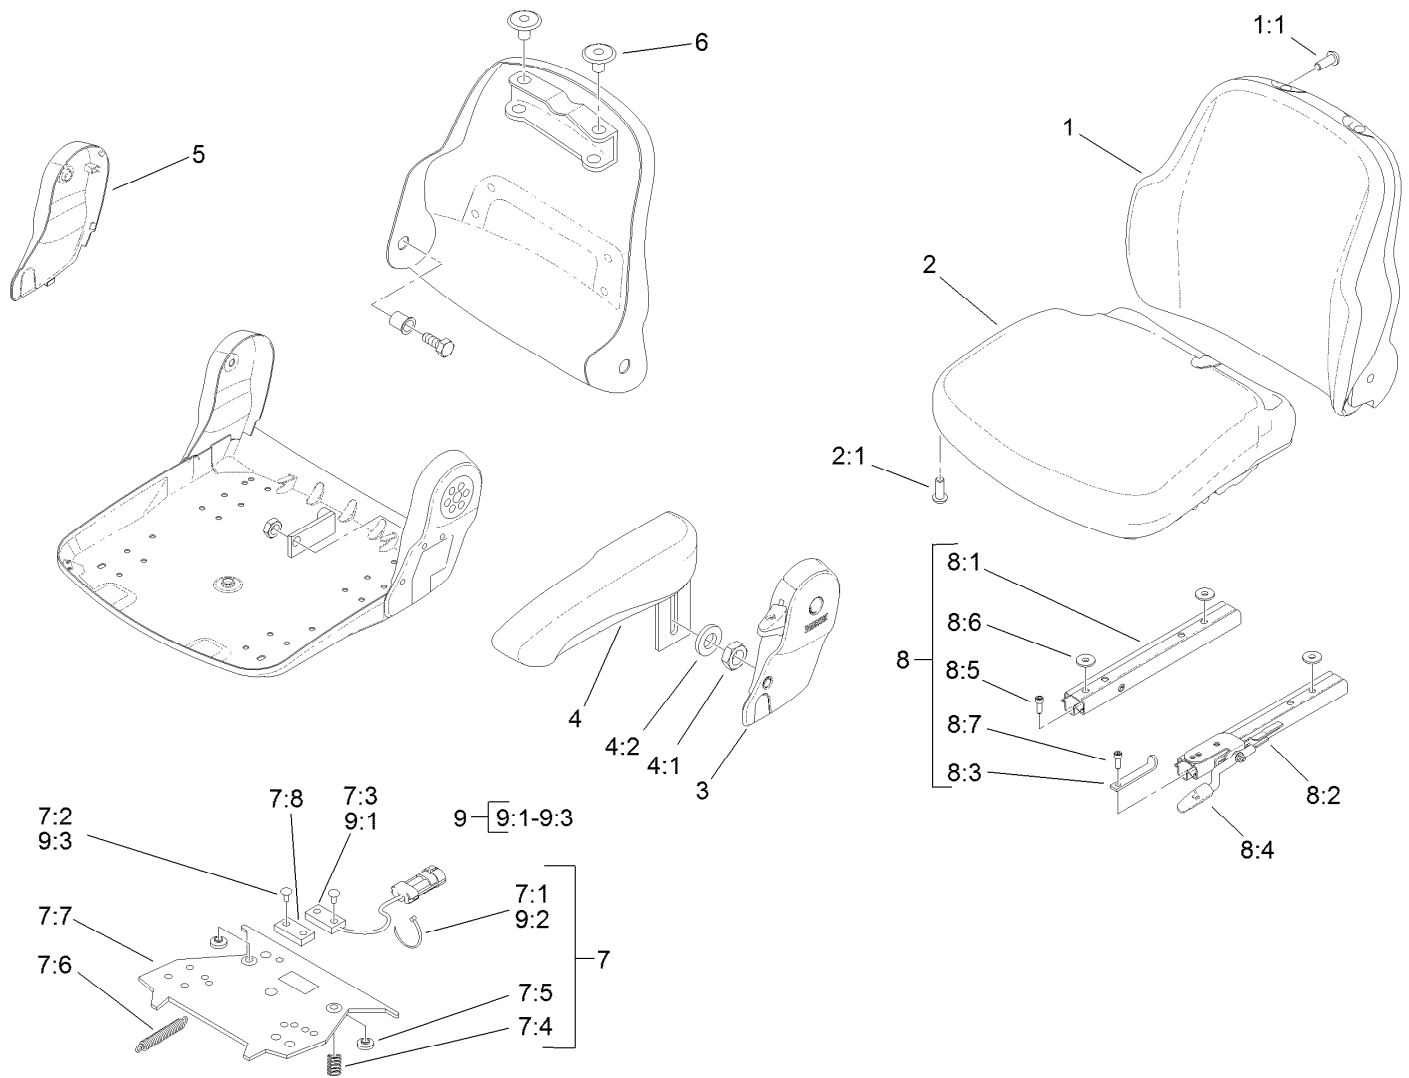 


Cloth Premium Seat Assembly No. 117-9429

Ref.	Part Number	Qty.	Description
1	117-9415	1	Backrest Cushion ASM
1:1	119-7742	4	Screw-Cushion
2	117-9416	1	Seat Cushion ASM
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
5	108-8021	1	Cover-Armrest
6	108-8022	2	Cover-Black
7	108-8024	1	Switch Kit
7:1		3	Wire Tie ●
7:2		4	Rivet ●
7:3		1	Sensor-Seat Switch ●
7:4		2	Spring-Compression ●
7:5		2	Bumper-Pressure Plate ●

Ref.	Part Number	Qty.	Description
7:6		1	Spring-Extension ●
7:7		1	Plate-Mounting ●
7:8		1	Magnet ●
8	108-8025	1	Adjustment Rail Set
8:1		1	Rail-Adjustment, RH ●
8:2		1	Rail-Adjustment, LH ●
8:3		1	Stop-Rail ●
8:4		1	Handle ●
8:5		3	Screw ●
8:6		3	Washer ●
8:7		1	Screw ●
9	110-6189	1	Switch Kit
9:1		1	Switch ●
9:2		3	Wire Tie ●
9:3		2	Rivet ●

● Not serviced separately

 Air Ride Seat Suspension Assembly No. 108-1488

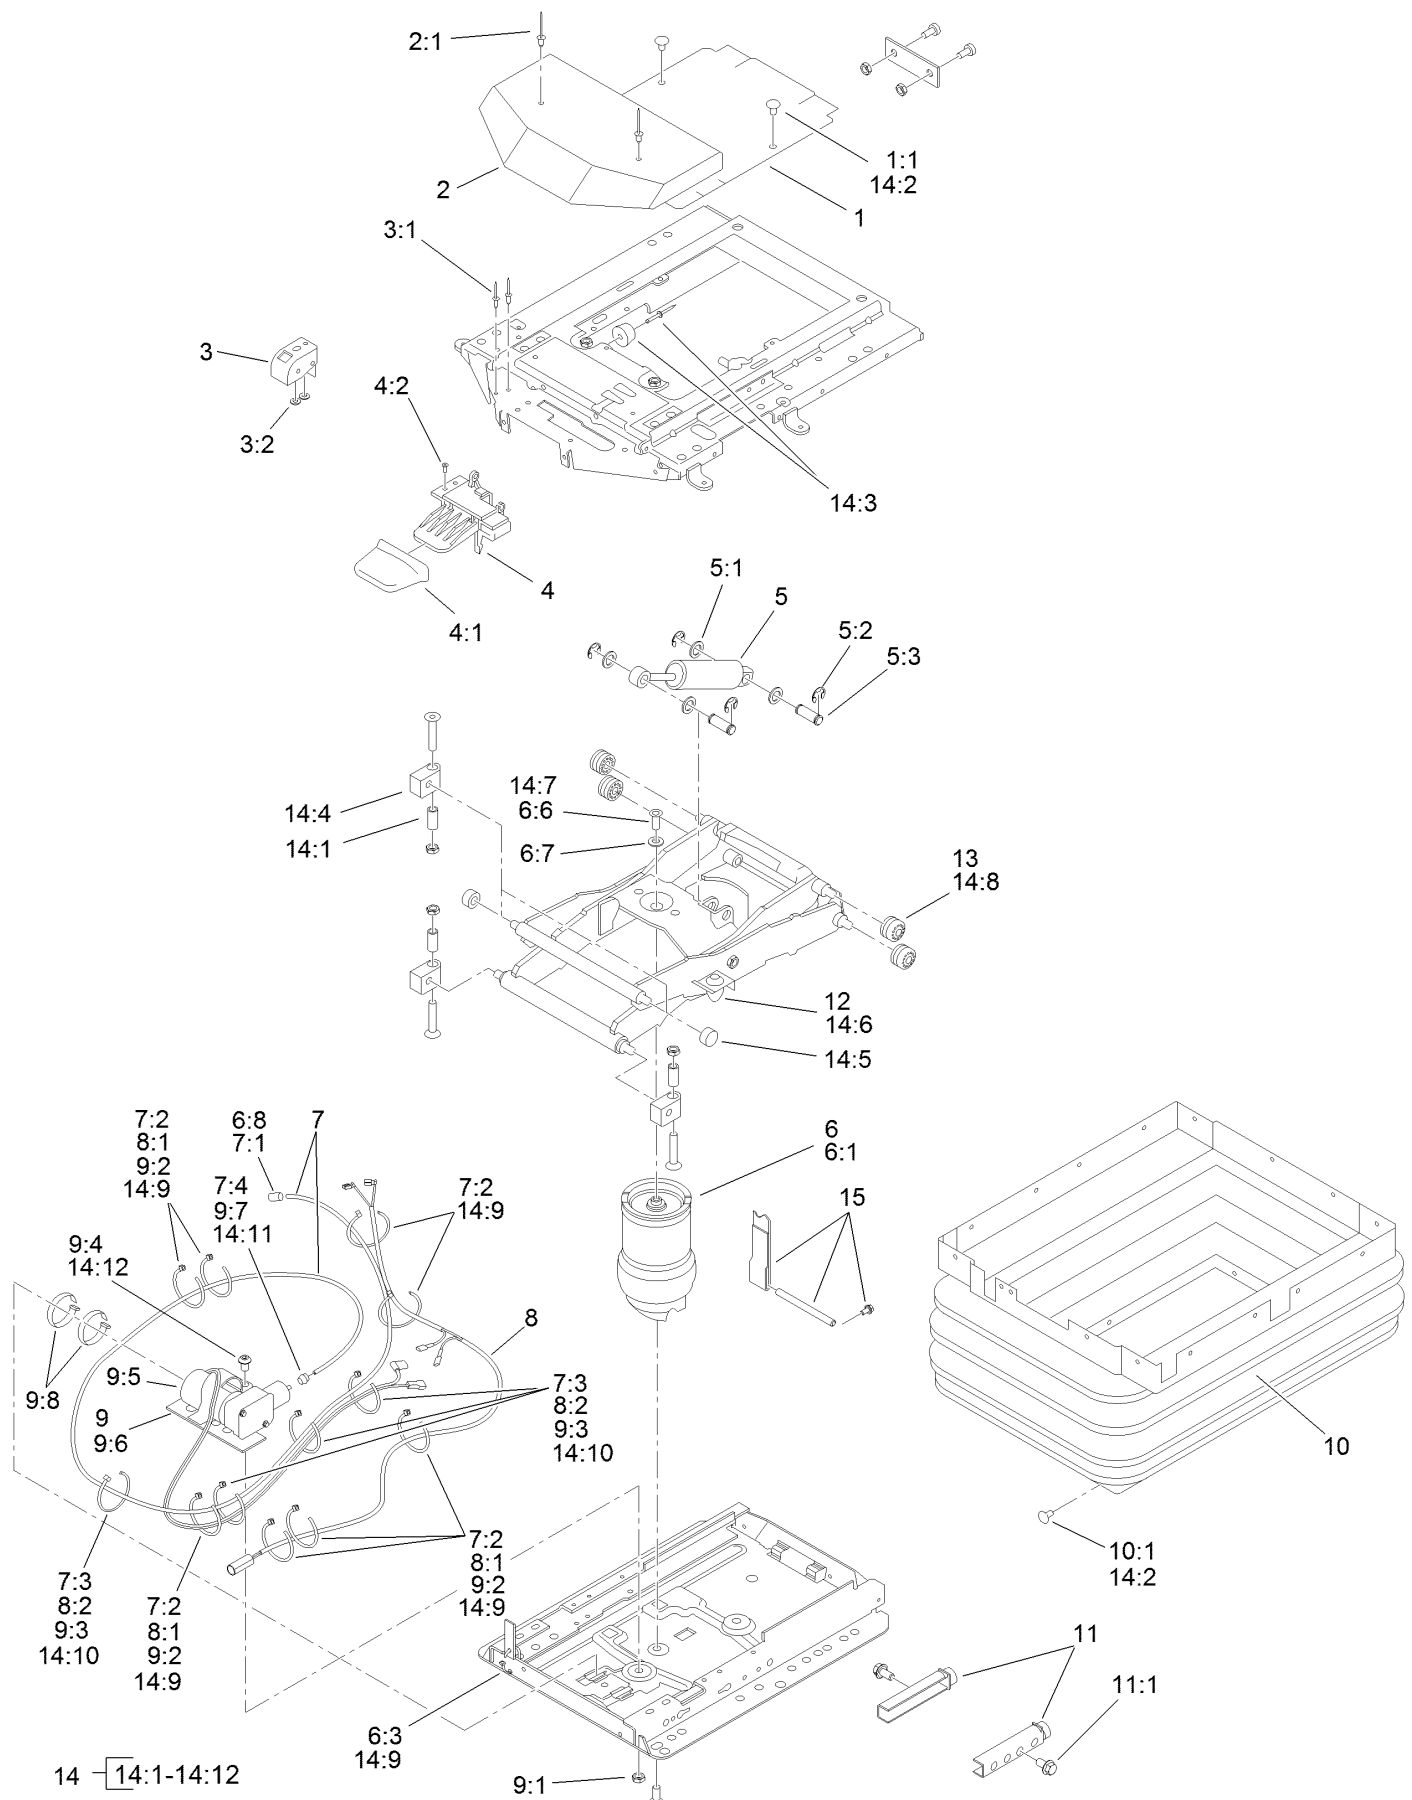


Air Ride Seat Suspension Assembly No. 108-1488 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-8026	1	Cover ASM	9:1		1	Nut ■
1:1	39-5710	2	Plug-Plastic	9:2		5	Tie-Wire ■
2	108-8027	1	Cover	9:3		4	Tie-Wire ■
2:1		2	Rivet ■	9:4		1	Screw ■
3	108-8028	1	Level Indicator Kit	9:5		1	Compressor ■
3:1		2	Rivet ■	9:6		1	Plate-Mounting ■
3:2		2	Washer ■	9:7		1	Nipple-Hose ■
4	108-8029	1	Valve-Control, Air	9:8		2	Clamp ■
4:1		1	Handle ■	10	108-8035	1	Bellows ASM
4:2		3	Screw ■	10:1	39-5710	23	Plug-Plastic
5	108-8030	1	Shock Absorber Kit	11	108-8036	1	Stop Kit
5:1		4	Washer ■	11:1		2	Screw ■
5:2		4	C-Clip ■	12	107-1213	2	Bumper Set
5:3		2	Pin ■	13	108-8037	4	Roller
6	108-8031	1	Air Spring Kit	14	108-8038	1	Wear Parts Kit ●
6:1		1	Air Spring ■	14:1		4	Spacer ■
6:3		2	Cable Tie ■	14:2	39-5710	2	Plug-Plastic
6:6		2	Screw ■	14:3		1	Bumper ■
6:7		1	Washer ■	14:4		4	Support-Housing ■
6:8		1	Nipple-Hose ■	14:5		2	Roller ■
7	108-8032	1	Air Tube ASM	14:6	107-1213	2	Bumper Set
7:1		1	Nipple-Hose ■	14:7		2	Screw ■
7:2		7	Tie-Wire ■	14:8	108-8037	4	Roller
7:3		4	Tie-Wire ■	14:9		9	Tie-Wire ■
7:4		1	Nipple-Hose ■	14:10		4	Tie-Wire ■
8	108-8033	1	Connecting Cable ASM	14:11		1	Nipple-Hose ■
8:1		8	Tie-Wire ■	14:12		1	Screw ■
8:2		4	Tie-Wire ■	15	119-2161	1	Tether Kit
9	108-8034	1	Compressor Kit				

● Not illustrated

 
■ Not serviced separately

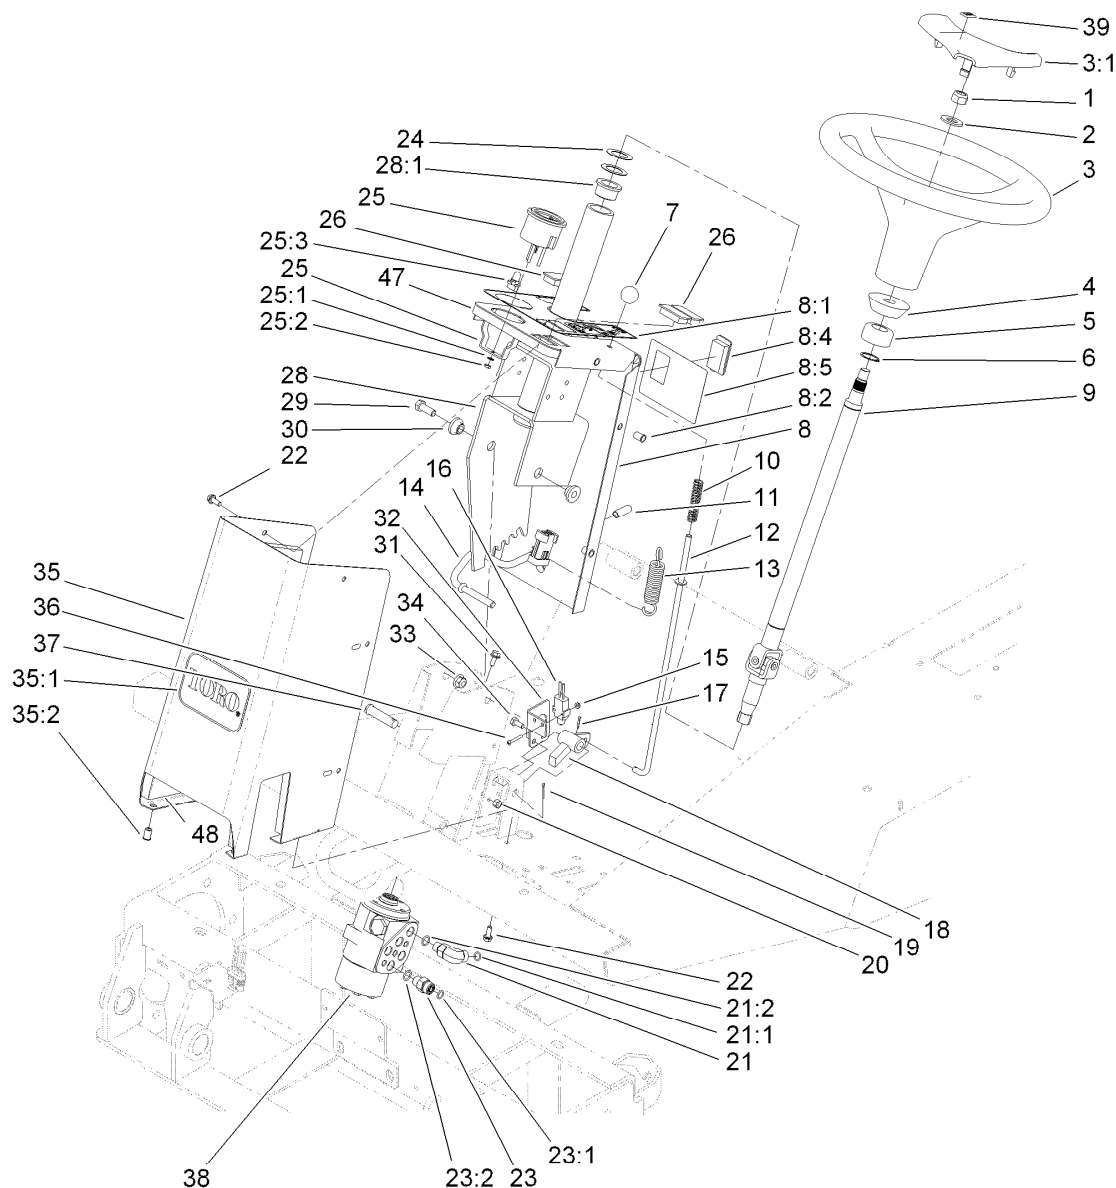

Steering Tower Assembly

Ref.	Part Number	Qty.	Description
1	108-9342	1	Nut-Hex
2	3256-27	1	Washer-Flat
3	98-1471	1	Wheel-Steering
3:1	98-1468	1	Cover-Wheel, Steering
4	93-5429	1	Collar-Foam
5	93-5439	1	Seal-Steering
6	32151-29	2	Ring-Retaining
7	93-5312	1	Knob
8	117-5705	1	Tower Cover ASM
8:1	119-0067	1	Decal-Steering Tower
8:2	32148-6	6	Nut-Clinch
8:4	99-7420	1	Plug-Hole
8:5	119-8322	1	Decal-Accessory
9	93-5428	1	Shaft-Steering
10	71-8310	1	Spring-Compression
11	93-5446	1	Cap-Vinyl
12	104-8308	1	Rod ASM
13	93-5985	1	Spring-Extension
14	93-5989	1	Rod-Tilt
15	3296-9	2	Nut-Hex
16	99-3410	1	Switch


Ref.	Part Number	Qty.	Description
17	3272-5	1	Pin-Cotter
18	93-5276-03	1	Brake Pawl ASM
19	3272-6	1	Pin-Cotter
20	3296-42	2	Nut-Lock, NI
21	340-77	1	Fitting-Elbow, 90 DEG
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	3234-4	10	Screw-HHF
23	340-2	4	Fitting-Straight
23:1	237-22	1	O-Ring
23:2	237-42	1	O-Ring
24	9547	4	Washer-Thrust
25	98-9339	1	Gauge-Fuel
25:1	3254-1	3	Washer-Lock, Int
25:2	3217-27	3	Nut-Hex
25:3	105-9265	1	Bulb And Lamp ASM
26	99-7420	3	Plug-Hole
28	104-8332	1	Steering Column ASM
28:1	256-132	2	Bushing-Flange
29	323-6	2	Screw-HH
30	93-5988	2	Hub-Pivot

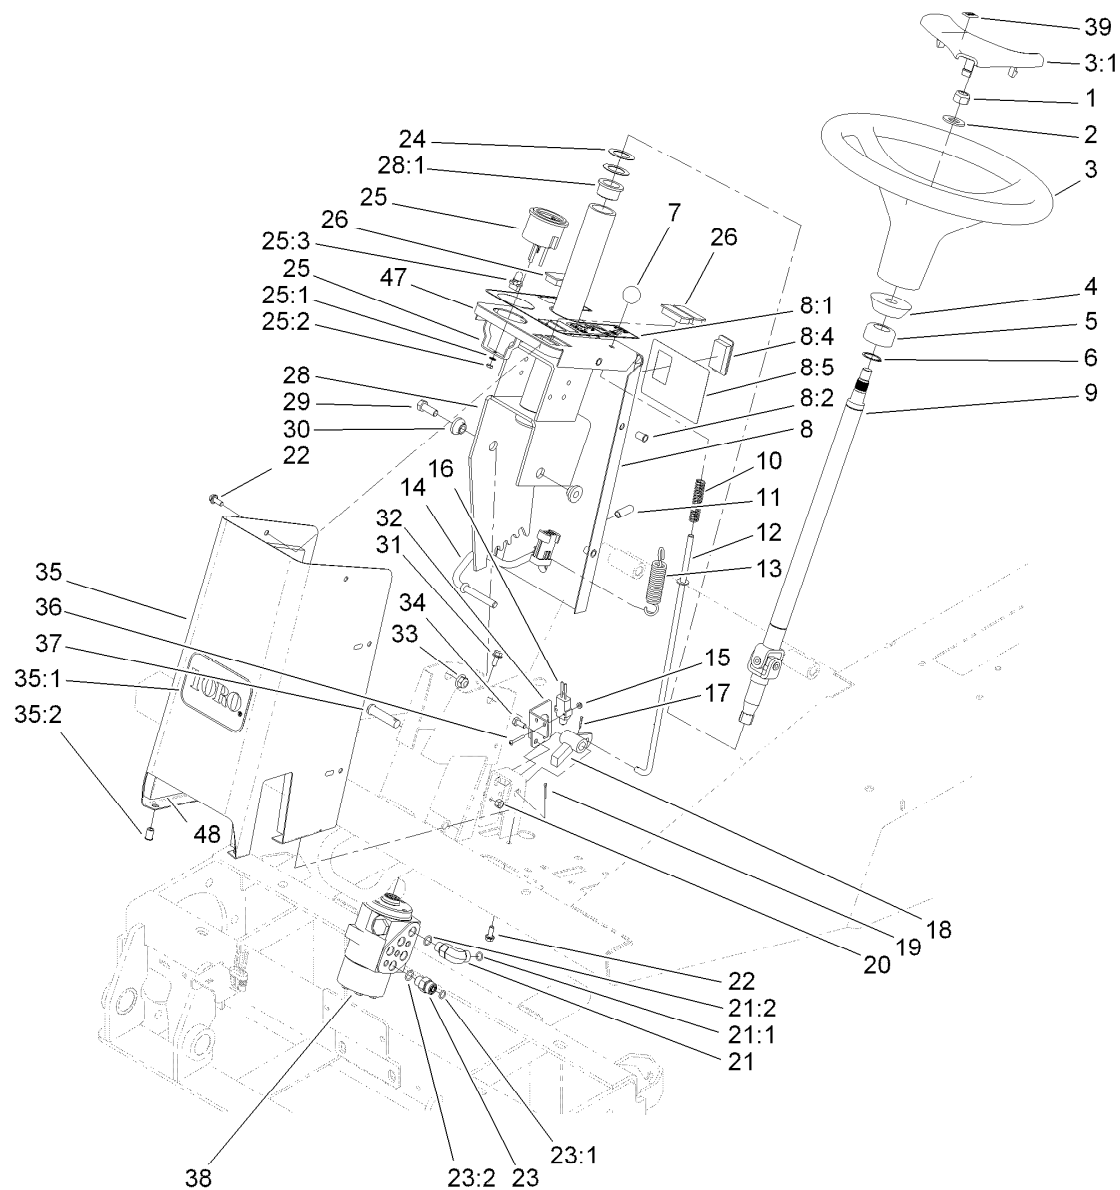 

Steering Tower Assembly (continued)


Ref.	Part Number	Qty.	Description
31	33103-016	4	Screw-HHF
32	104-0128	1	Bracket-Switch
33	104-8301	2	Nut-HF, NI
34	321-3	2	Screw-HH
35	100-3038	1	Steering Tower ASM
35:1	67-1300	1	Decal
35:2	32148-6	4	Nut-Clinch

Ref.	Part Number	Qty.	Description
36	3250-35	2	Screw-PPH
37	283-5	1	Pin-Clevis
38	114-5074	1	HYD Steering Valve ASM
39	98-1459	1	Decal
47	119-0143	1	Foam-Tower, Rear
48	119-0144	1	Foam-Tower, Front

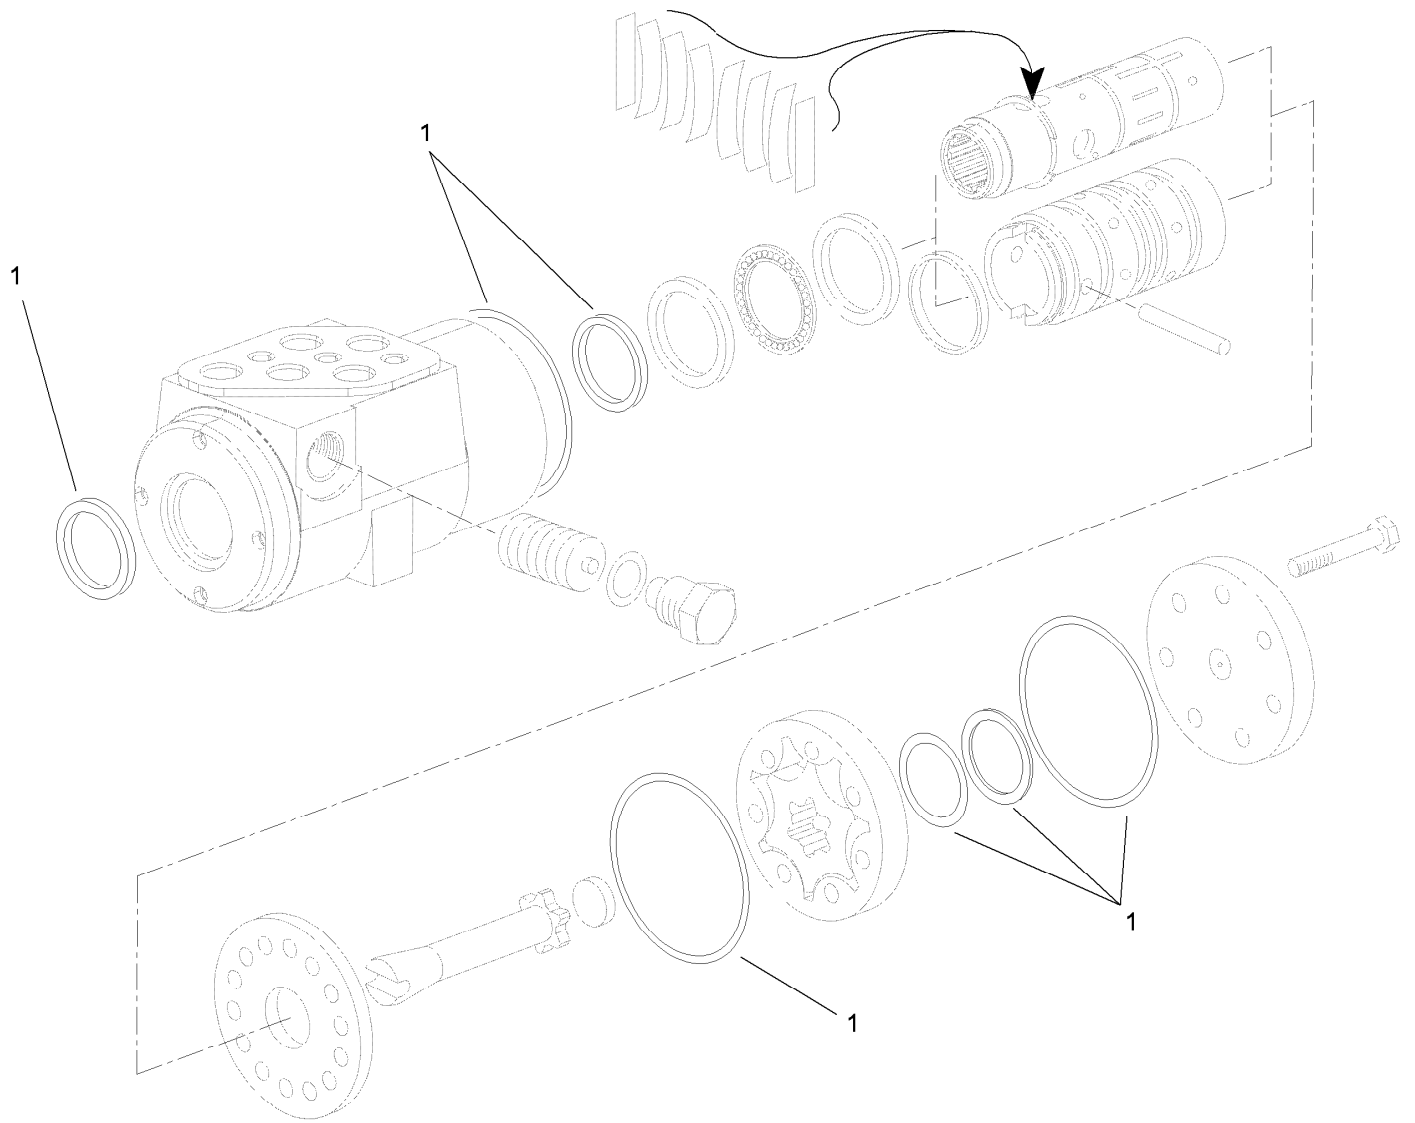 

Steering Valve Assembly No. 114-5074


Ref.	Part Number	Qty.	Description
1	108-1519	1	Seal Kit

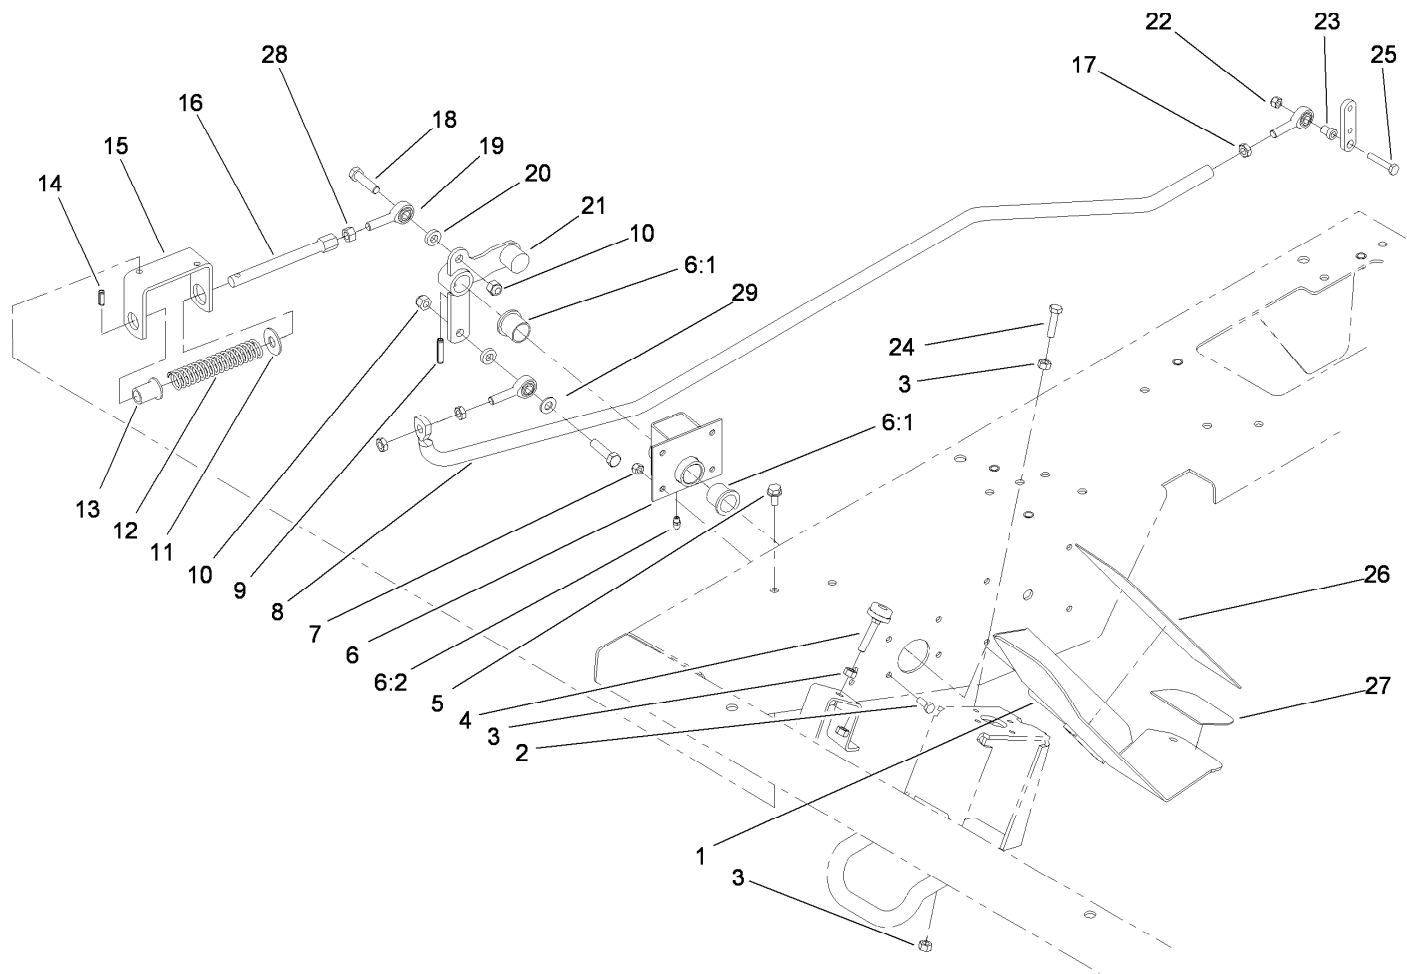 

Traction Pedal and Linkage Assembly

Ref.	Part Number	Qty.	Description
1	93-5133-01	1	Pedal-Traction
2	321-4	4	Screw-HH
3	3217-6	4	Nut-Hex
4	32141-36	1	Screw-Adjustment, Level
5	32144-14	2	Screw-HWHTF
6	104-3565	1	Pedal Bracket ASM
6:1	256-10	2	Bushing-Flange
6:2	302-5	1	Fitting-Grease
7	3296-42	4	Nut-Lock, NI
8	117-5668-03	1	Rod-Traction
9	32121-9	1	Pin-Roll, Slotted
10	3296-39	2	Nut-Lock, NI
11	3256-5	1	Washer-Flat
12	84-9100	1	Spring
13	92-7610	1	Retainer-Spring
14	32121-11	1	Pin-Roll


Ref.	Part Number	Qty.	Description
15	100-3137-03	1	Bracket-Spring
16	92-7609	1	Shaft-Spring
17	3220-3	3	Nut-HJ
18	323-9	2	Screw-HH
19	2411-36	3	Bearing-End, Rod
20	80-7730	2	Spacer
21	114-2715	1	Lever-Traction
22	3296-42	1	Nut-Lock, NI
23	104-7517	1	Spacer
24	322-6	1	Screw-HH
25	321-9	1	Screw-HH
26	93-5347	1	Abrasive-Pedal
27	93-5368	1	Abrasive-Pedal
28	3219-3	1	Nut-Hex
29	3256-24	1	Washer-Flat

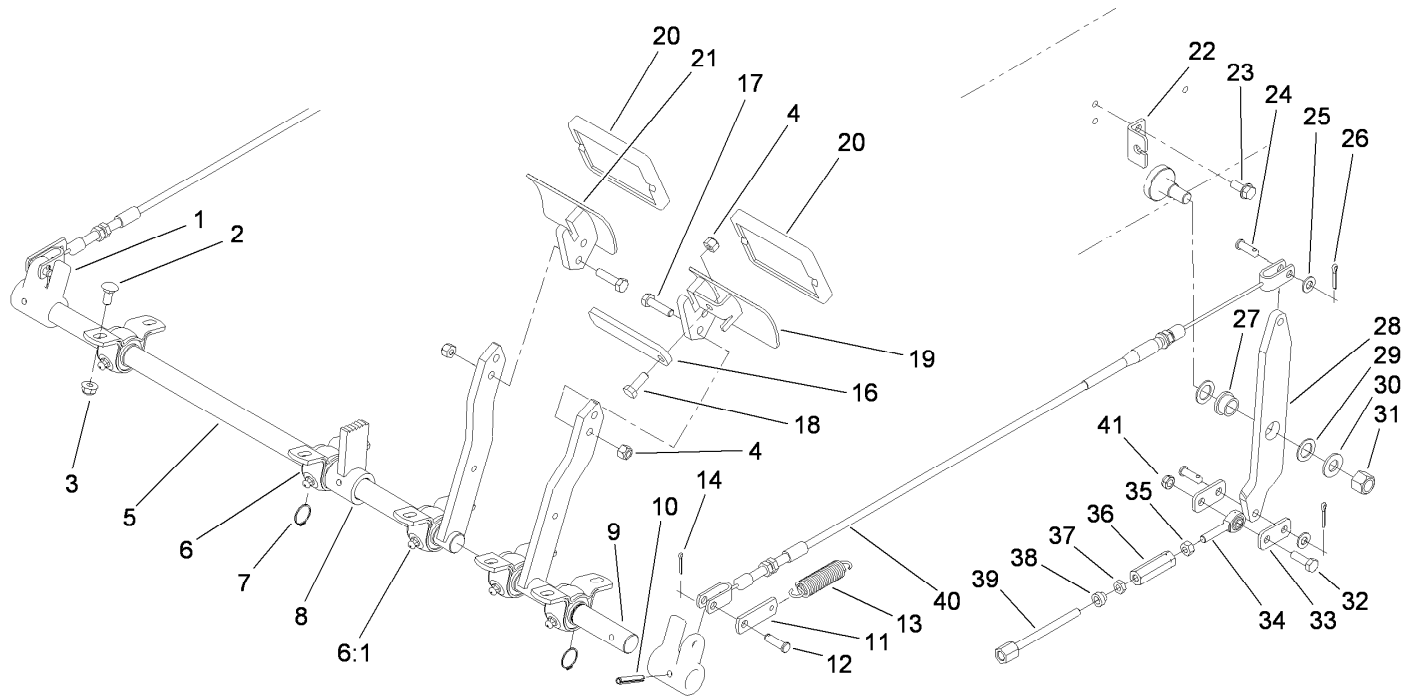 

Brake Pedal and Linkage Assembly

Ref.	Part Number	Qty.	Description
1	114-2714	2	Lever-Brake
2	3230-1	10	Bolt-CARR
3	104-8300	10	Nut-HF, NI
4	3296-29	5	Nut-Lock, NI
5	100-3000-03	1	RH Brake Arm ASM
6	93-4849	5	Bearing-Block, Pillow
6:1	302-5	1	Fitting-Grease
7	32151-83	3	Ring-Snap
8	93-5475-03	1	Brake Latch ASM
9	100-2997-03	1	LH Brake Arm ASM
10	32121-15	3	Pin-Roll
11	100-5540	2	Strap-Brake
12	283-61	2	Pin-Yoke
13	93-5262	2	Spring-Extension
14	3272-6	2	Pin-Cotter
16	93-5568	1	Arm-Lock
17	322-6	4	Screw-HH
18	322-4	1	Screw-HH
19	105-4553-03	1	LH Pedal ASM
20	93-8743	2	Footpad-Turn
21	105-4554-03	1	RH Pedal ASM


Ref.	Part Number	Qty.	Description
22	119-0109	2	Bracket-Cable
23	32144-11	4	Screw-HWHTF
24	283-58	4	Pin-Clevis
25	3256-23	4	Washer-Plain
26	3272-10	4	Pin-Cotter
27	105-3455	2	Bushing
28	119-0105-03	2	Lever-Brake
29	105-3481	4	Washer-Thrust
30	3256-26	2	Washer-Flat
31	3296-23	2	Nut-Lock, NI
32	322-5	2	Screw-HH
33	119-0110	4	Link-Brake
34	2411-53	2	Bearing-Rod End, LH
35	3220-20	2	Nut-Jam
36	119-0112	2	Hex-Link
37	3220-2	2	Nut-Jam
38	110-2158	2	Spacer-Flanged
39	119-0106	2	Hex-Link
40	119-0113	2	Cable-Brake
41	3296-47	2	Nut-Lock, NI

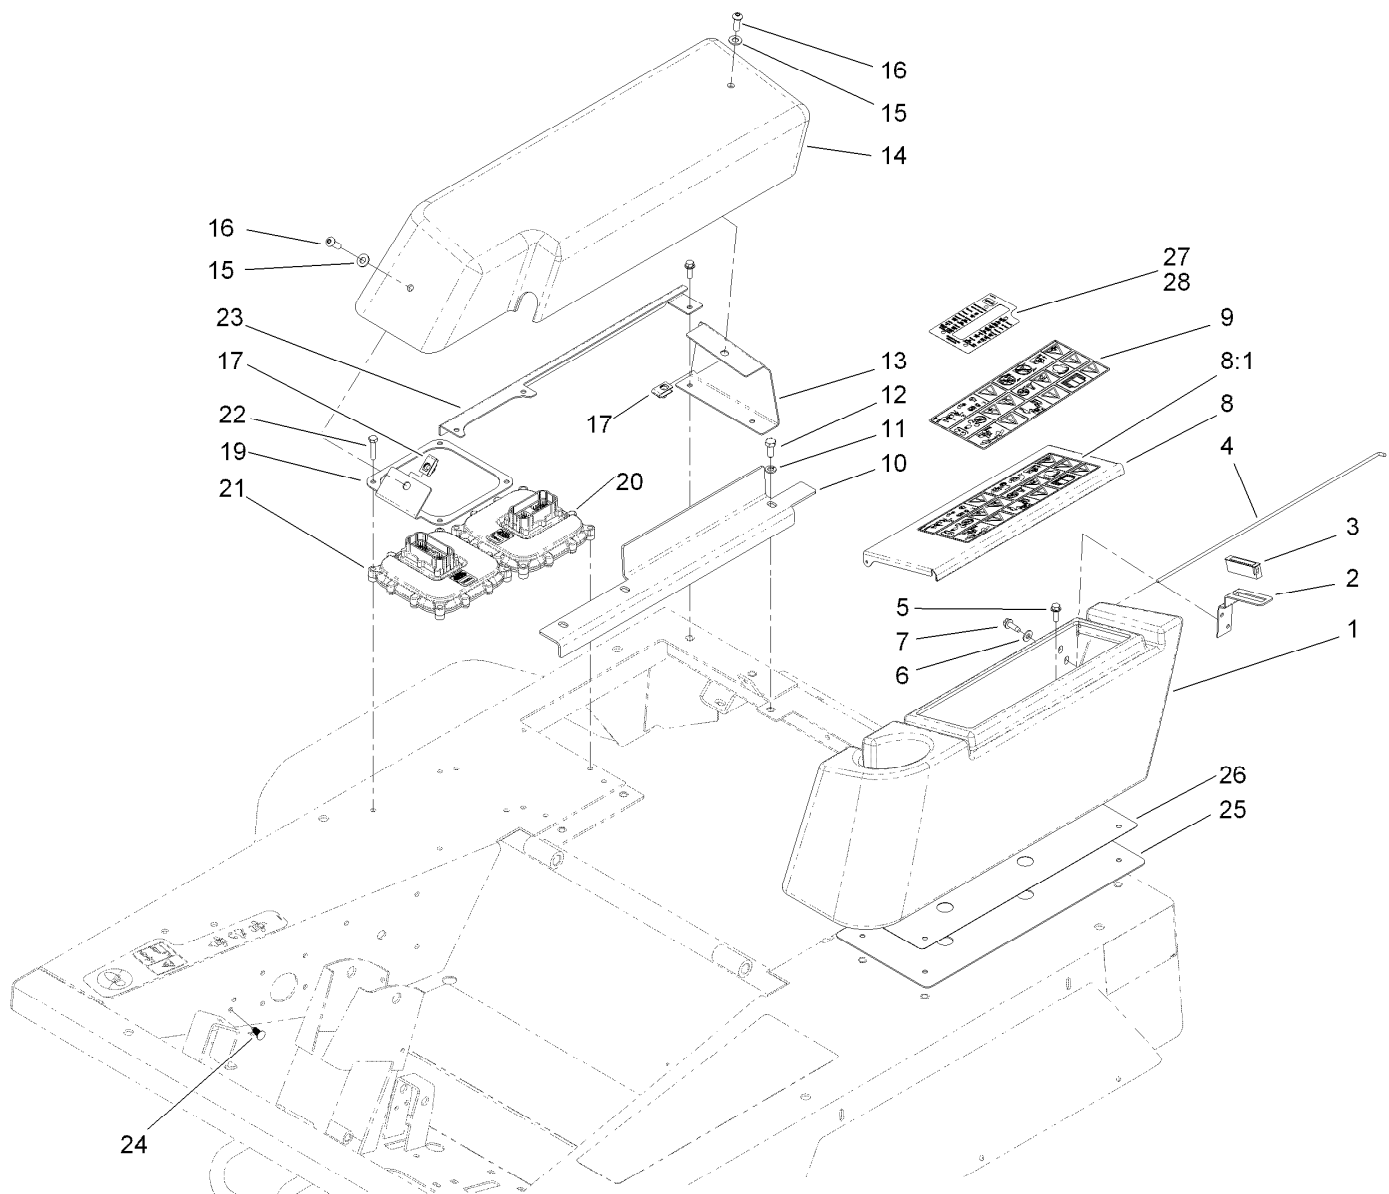 

Controller and Tool Box Assembly

Ref.	Part Number	Qty.	Description
1	104-7515	1	Housing-Box, Tool
2	104-7545	1	Bracket-Latch
3	58-4250	1	Catch-Magnetic
4	104-7548	1	Rod-Hinge
5	3234-4	6	Screw-HHF
6	3256-22	2	Washer-Flat
7	32104-95	2	Screw-HWH
8	104-8321	1	Tool Box Cover ASM
8:1	117-2766	1	Decal-Warning, CE
8:1	117-2754	1	Decal-Warning
9	117-2766	1	Decal-Warning, CE
10	117-5724-01	1	Bracket-Support
11	3253-4	3	Washer-Lock
12	322-3	3	Screw-HH
13	119-0074-03	1	Mount-Cover, Rear
14	119-0071	1	Cover-Controllers


Ref.	Part Number	Qty.	Description
15	3256-70	2	Washer-Flat
16	3274-32	2	Screw-HSBH
17	94-2413	2	Nut-U
19	119-0073-03	1	Mount-Cover, Front
20	115-1900	1	Controller
21	114-3321	1	Controller-Tec
22	321-8	8	Screw-HH
23	119-0136-03	1	Mount-Cover, Right
24	114-4899	8	Plug-Plastic
25	119-5306-01	1	Plate-Platform
26	119-0139	1	Abrasive-Platform
27	119-5303	1	Decal-Diagnostic Controller, Master
28	119-5304	1	Decal-Diagnostic Controller, Slave

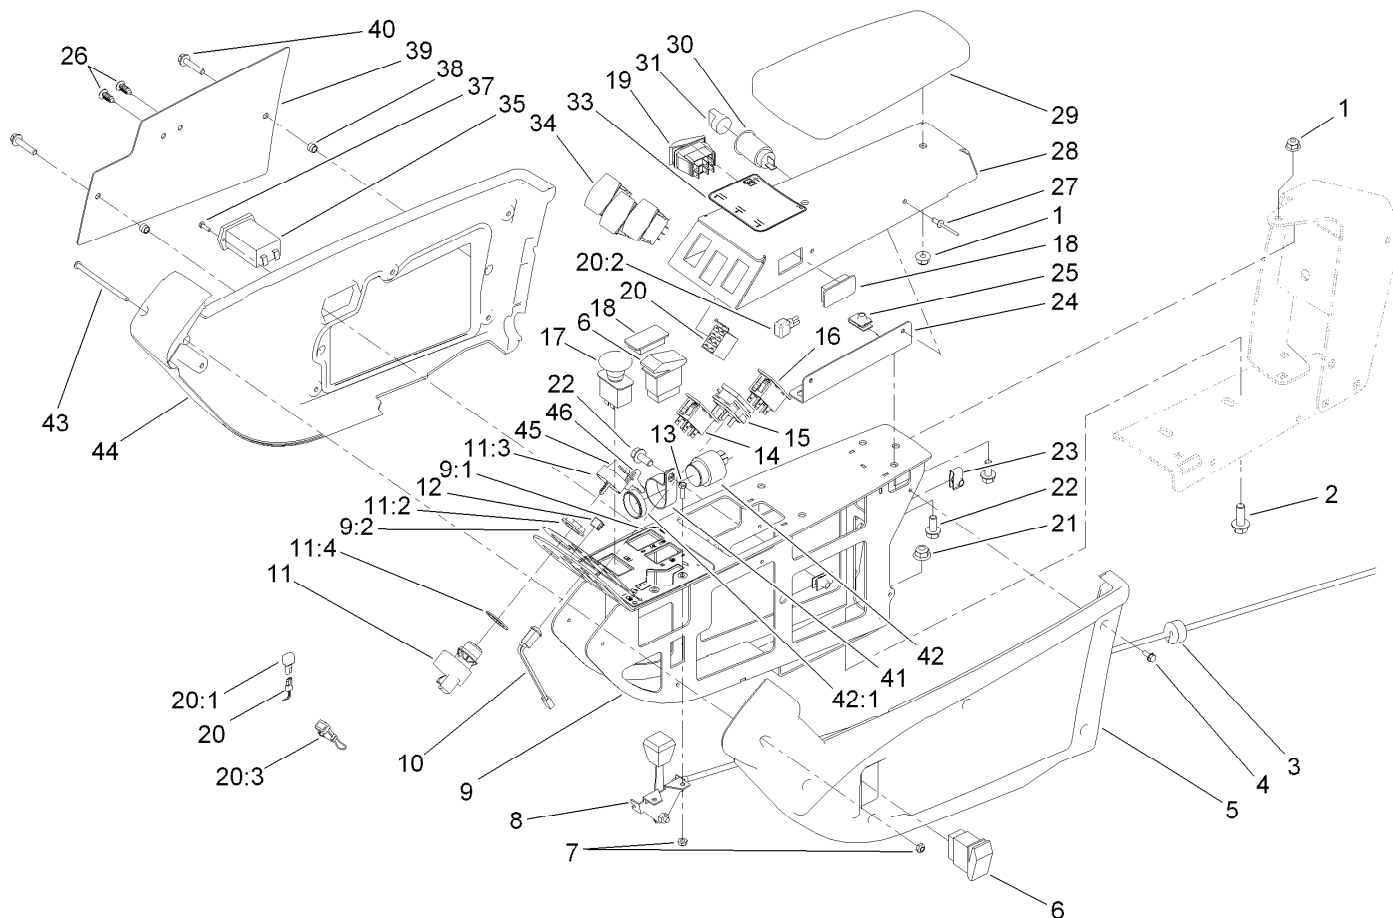 

Control Console Assembly

Ref.	Part Number	Qty.	Description
1	104-8300	3	Nut-HF, NI
2	3234-42	2	Screw-HHF
3	110-8911	1	Seal-Foam
4	32144-112	10	Screw-HWH
5	108-7604	1	Cover-LH
6	95-8999	2	Switch
7	3296-12	3	Nut-Lock, NI
8	119-0084	1	Control-Throttle
9	117-5737	1	Control Panel ASM
9:1	117-5723	1	Decal-Console, Lower
9:2	117-2385	1	Decal-Console, Upper
10	95-7652	1	Light-Indicator
11	106-5269	1	Ignition Switch ASM
11:2	108-8660	1	Nut-Mounting
11:3	106-5270	1	Ignition Key Set
11:4	108-8659	1	Washer-Backup
12	2410-64	1	Plug-Button
13	3290-134	2	Screw
14	100-8070	1	Lamp-Warning
15	110-0941	1	Gauge-Temperature
16	100-8071	1	Lamp-Warning


Ref.	Part Number	Qty.	Description
17	93-9999	1	Switch-PTO
18	99-7420	2	Plug-Hole
19	106-2027	1	Switch-Intermittent
20	119-7770	1	Harness-Wire, Platform
20:1	104-4022	1	Resistor-75 Ohm
20:2	32180-043	2	Resistor-120 Ohm
20:3	119-7778	1	Harness-Wire, Machine Selector
21	104-8301	2	Nut-HF, NI
22	3234-5	6	Screw-HHF
23	107069	2	Clip
24	112-7404	1	Angle-Mounting
25	94-2413	5	Nut-U
26	114-4899	2	Plug-Plastic
27	3290-409	2	Rivet
28	117-2380-03	1	Panel-Switches, Control Arm
29	108-7602	1	Rest-Arm
30	99-7411	1	Point-Power
31	99-7416	1	Cap
33	117-2387	1	Decal-Lift

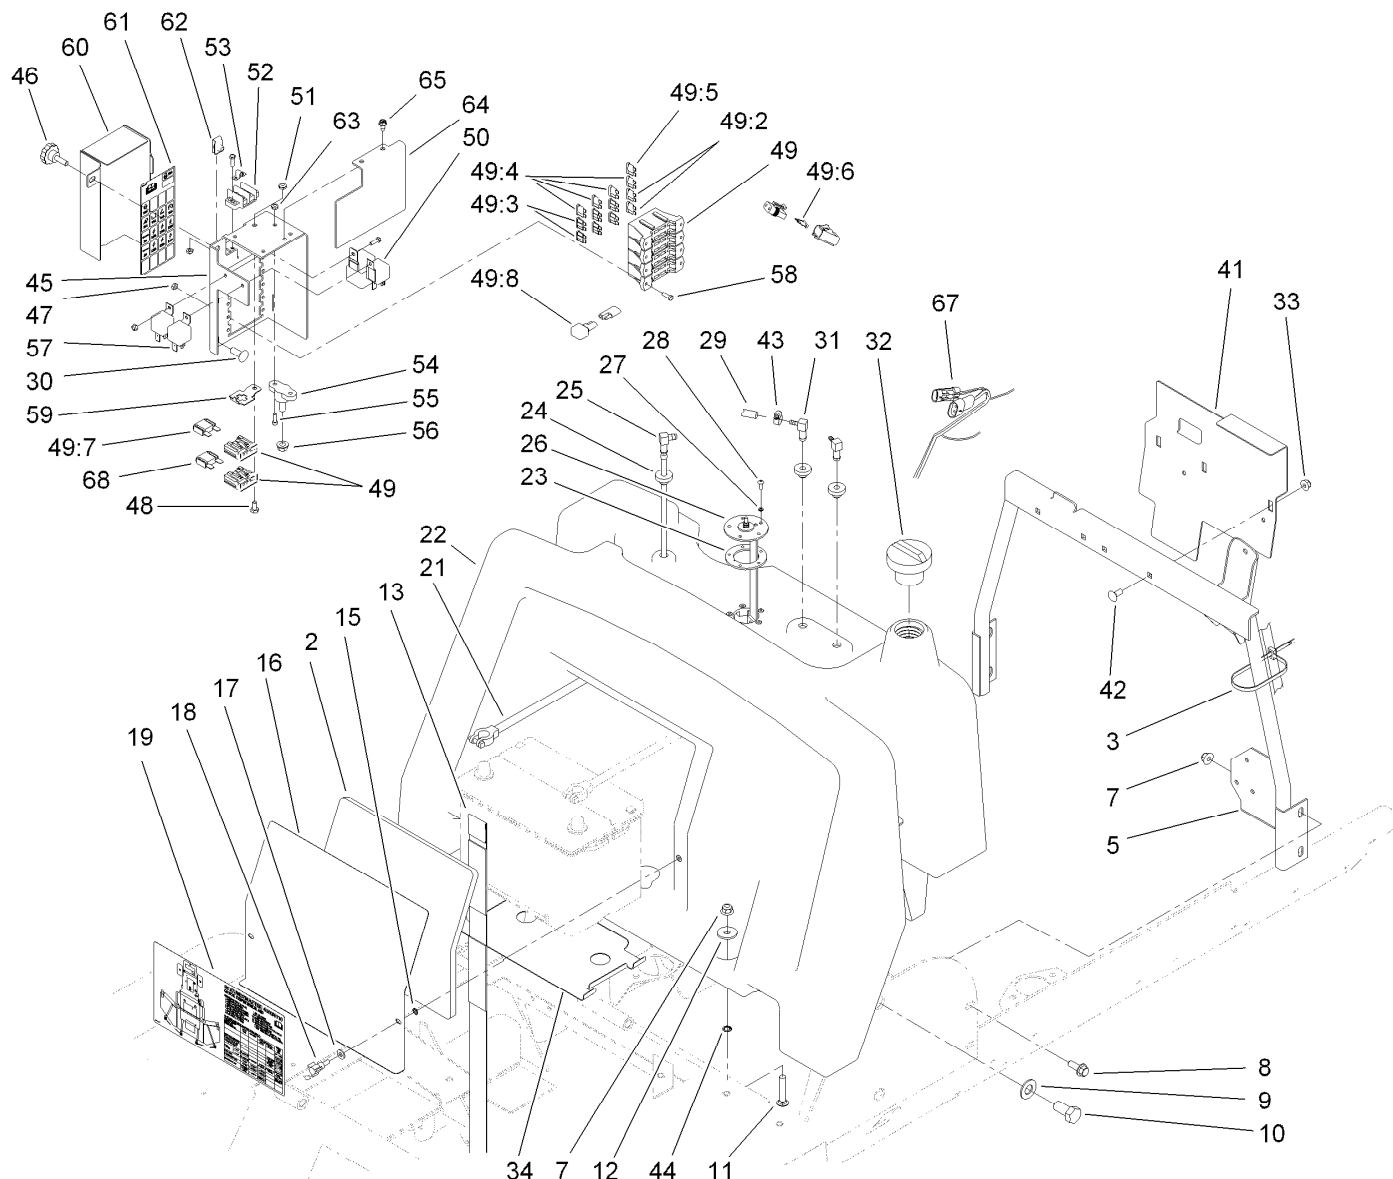 

Fuel Tank and Battery Assembly

Ref.	Part Number	Qty.	Description
2	119-0123	1	Foam-Battery
3	3290-378	1	Tie-Cable
5	117-5694-03	1	Support-Tank
7	104-8301	6	Nut-HF, NI
8	3234-42	2	Screw-HHF
9	3256-27	4	Washer-Flat
10	327-3	4	Screw-HH
11	3231-6	2	Screw-CARR
12	63-8410	2	Washer
13	94-1445	1	Strap-Battery
15	32151-106	2	Ring-Retaining
16	104-0717-03	1	Cover-Battery
17	3256-22	2	Washer-Flat
18	233-70	2	Knob-Star, Three
19	115-8455	1	Decal-Service
21	117-4746	1	Cable-Battery, Positive
22	115-3788	1	Tank-Fuel
23	62-7650	1	Gasket
24	46-6560	3	Bushing
25	114-3836	1	Pipe-Stand
26	104-0700	1	Sender-Fuel


Ref.	Part Number	Qty.	Description
27	3253-15	5	Washer-Lock
28	32122-24	5	Screw-PTH
29	55-8210	1	Hose-Fuel
30	3231-22	2	Screw-CARR
31	104-5228	2	Fitting-Elbow, 90 DEG
32	115-5305	1	Cap-Fuel
33	104-8300	2	Nut-HF, NI
34	105-0774-03	1	Plate-Battery
41	119-0069-03	1	Bracket-Fuel Tank
42	3230-1	2	Bolt-CARR
43	2412-108	2	Clamp-Worm
44	32151-72	4	Ring-Retaining
45	117-5695-03	1	Mount-Power
46	99-6137	1	Knob-Control, Chute
47	3296-12	8	Nut-Lock, NI
48	321-2	1	Screw-HH
49	117-5715	1	Harness-Wire, Rear
49:2	94-6710	2	Fuse-2 Amp
49:3	114241	6	Fuse-Blade, 7.5 Amp
49:4	218-578	5	Fuse-Blade, 10 Amp
49:5	109101	1	Fuse-Blade, 20 Amp

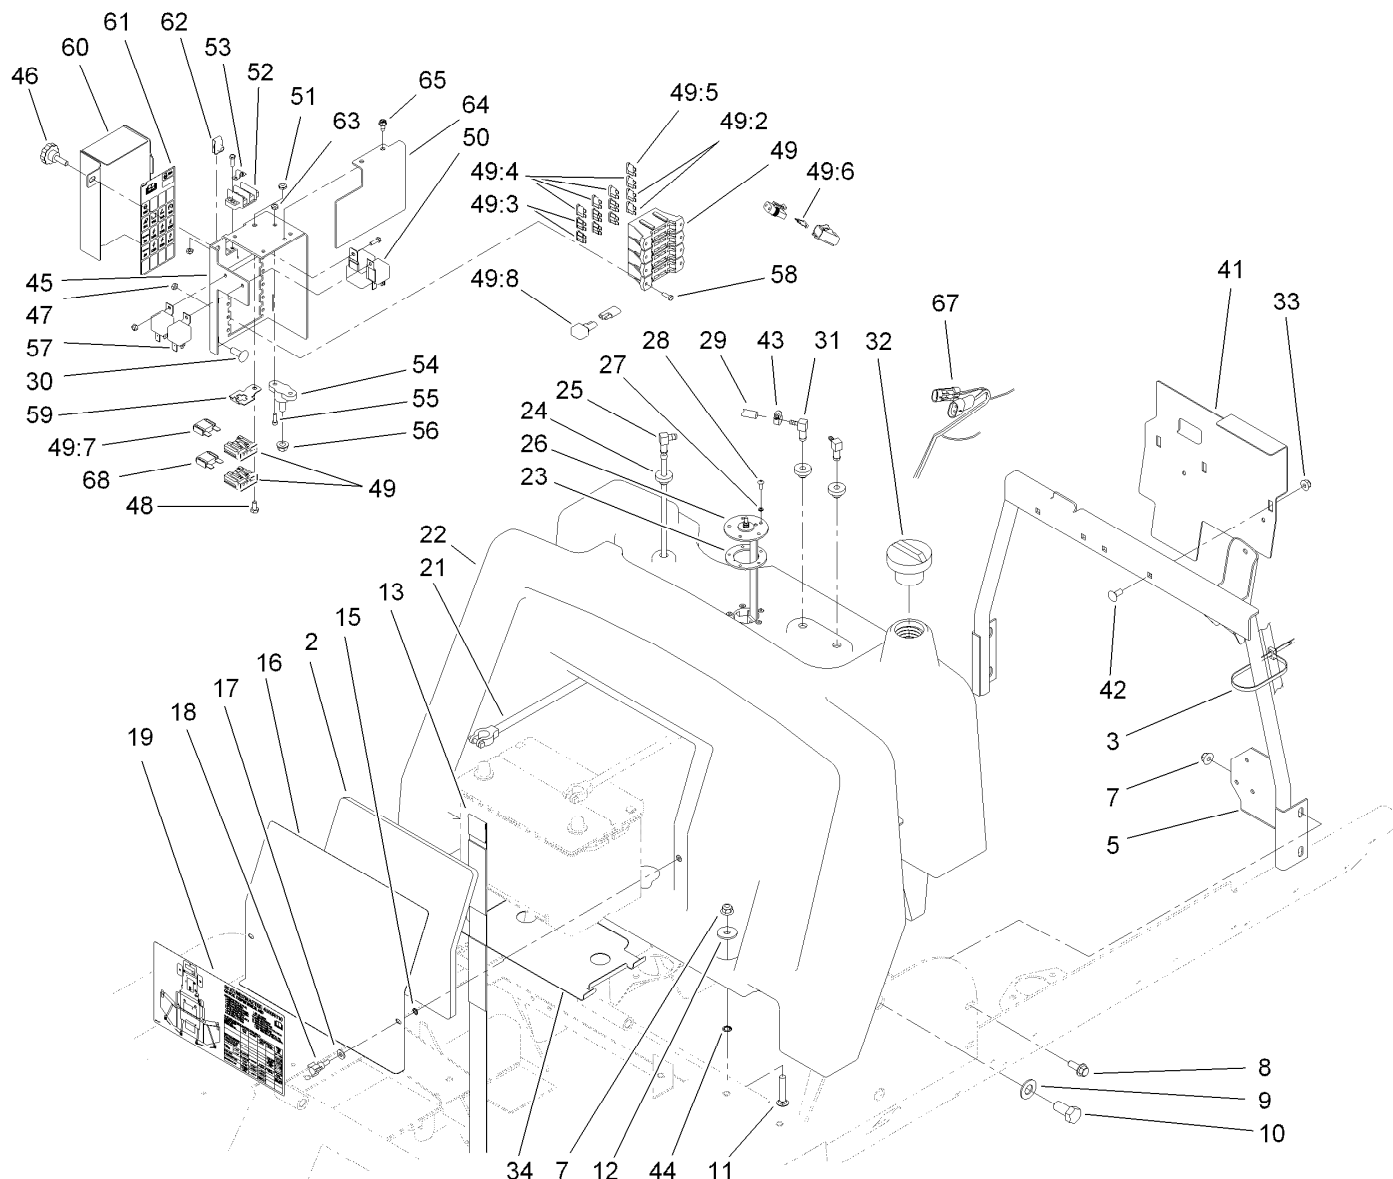 

Fuel Tank and Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
49:6	99-6124	1	Fuse-40 Amp
49:7	114-3342	1	Fuse-Maxi, 60 Amp
49:8	100-4918	1	Diode
50	99-7430	1	Relay-Mini 280
51	3296-56	1	Nut-Lock, NI
52	42862	1	Block-Terminal, Ground
53	42863	1	Strip-Jumper
54	110-8822	1	Block-Junction
55	3273-26	2	Screw-HSH
56	3290-357	1	Nut-HHF, Whiz
57	99-7435	3	Relay


Ref.	Part Number	Qty.	Description
58	3290-134	8	Screw
59	114-5502	1	Clip-Fuse
60	119-0072-03	1	Cover-Fuses
61	119-0075	1	Decal-Fuses
62	94-2413	1	Nut-U
63	3296-27	2	Nut-Lock, NI
64	117-5748-03	1	Shield-Heat
65	32104-17	1	Screw-HWH
67	119-1333	1	Harness-Wire, Cab Interconnect
68	114-3342	1	Fuse-Maxi, 60 Amp

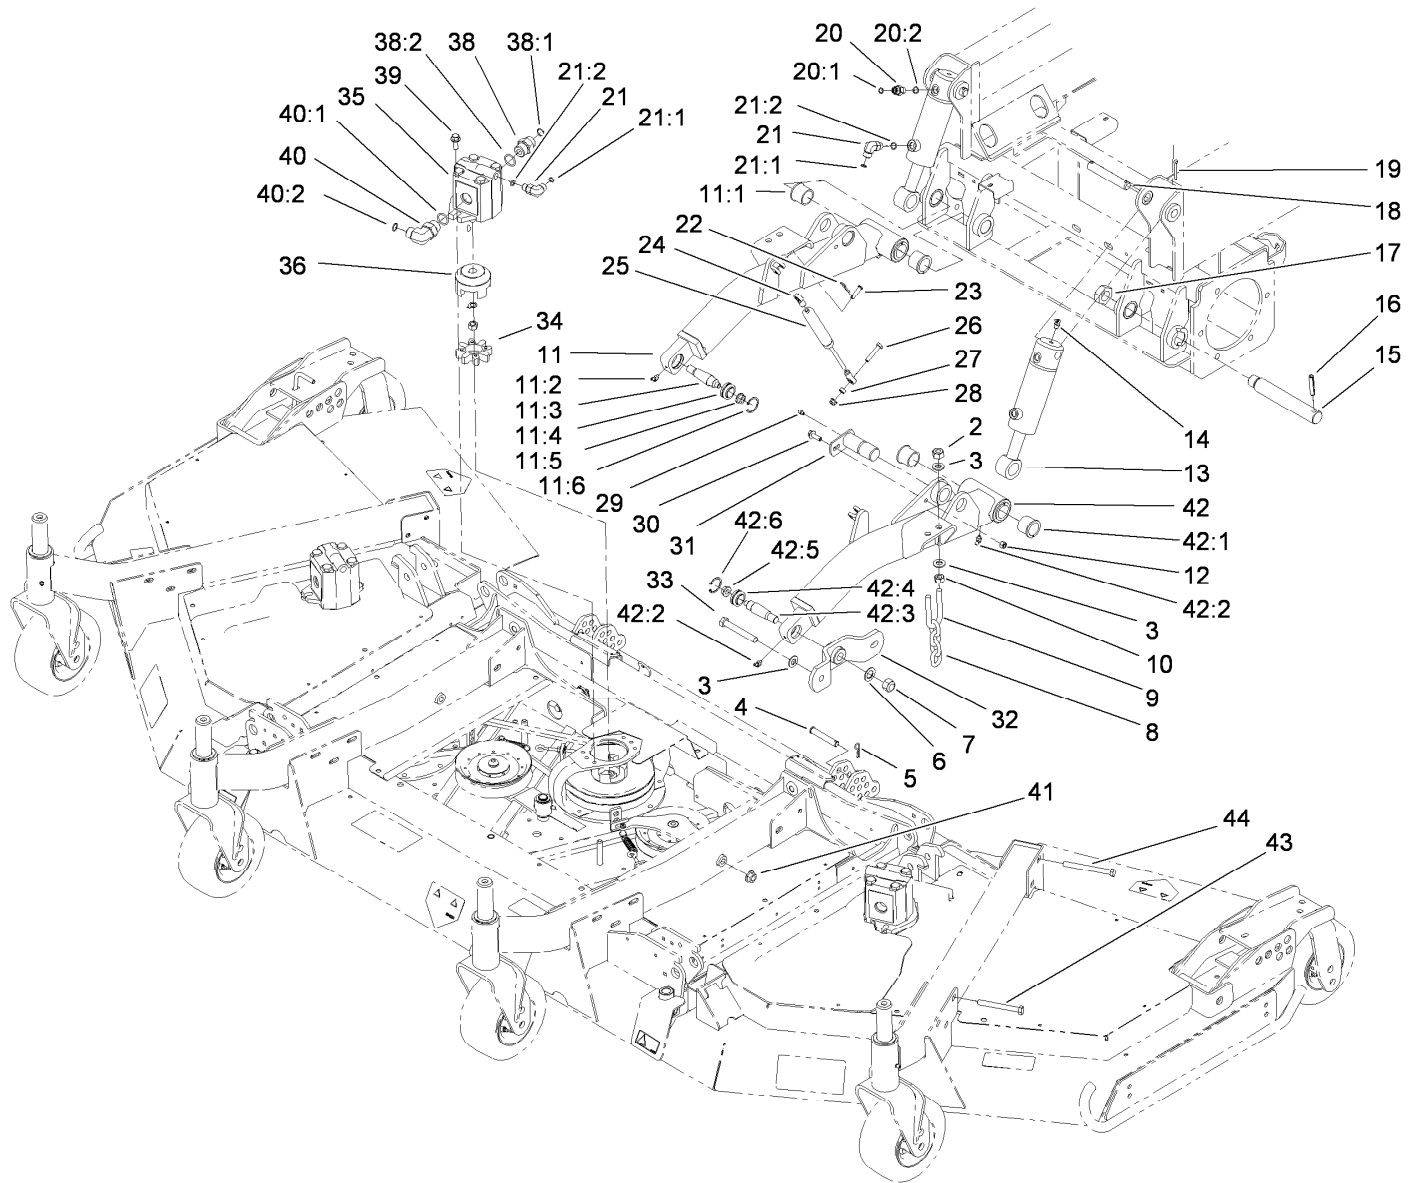 

Front Deck, Lift Arm and Cylinder Assembly

Ref.	Part Number	Qty.	Description
2	3296-25	4	Nut-Lock, NI
3	3256-26	12	Washer-Flat
4	283-55	2	Pin-Clevis
5	3290-467	2	Pin-Hair
6	86-1440	2	Washer-Flat
7	3296-41	2	Nut-Lock NI
8	95-6231	2	Chain-HOC
9	104-0108	2	U-Bolt
10	3217-9	4	Nut-HH
11	105-7345	1	RH Arm ASM
11:1	104-0015	2	Bushing-Flange
11:2	302-11	2	Fitting-Lube, 45 DEG
11:3	105-7468	1	Stud-Tapered
11:4	105-7441	1	Bearing-Spherical
11:5	32128-42	1	Nut-HF
11:6	32151-34	1	Ring-Retaining
12	3296-29	2	Nut-Lock, NI
13	107-0189	2	HYD Cylinder ASM
14	302-33	2	Fitting-Grease
15	100-3017	2	Pin-Arm, Lift
16	32121-110	2	Pin-Roll, Slotted


Ref.	Part Number	Qty.	Description
17	3296-49	2	Nut-Lock, NI
18	105-7456	2	Pin-Pivot
19	3272-23	4	Pin-Cotter
20	340-2	3	Fitting-Straight
20:1	237-22	1	O-Ring
20:2	237-42	1	O-Ring
21	340-77	4	Fitting-Elbow, 90 DEG
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	3290-467	2	Pin-Hair
23	283-6	2	Pin-Clevis
24	104-8331	4	End-Rod, Spherical
25	105-3249	2	Damper
26	322-9	2	Screw-HH
27	92-6998	2	Spacer-Yoke, Right
28	104-8300	2	Nut-HF, NI
29	302-5	2	Fitting-Grease
30	3234-29	2	Screw-HHF
31	105-7325	2	Pin
32	115-5442-01	2	Support-Hub
33	325-35	4	Screw-HH

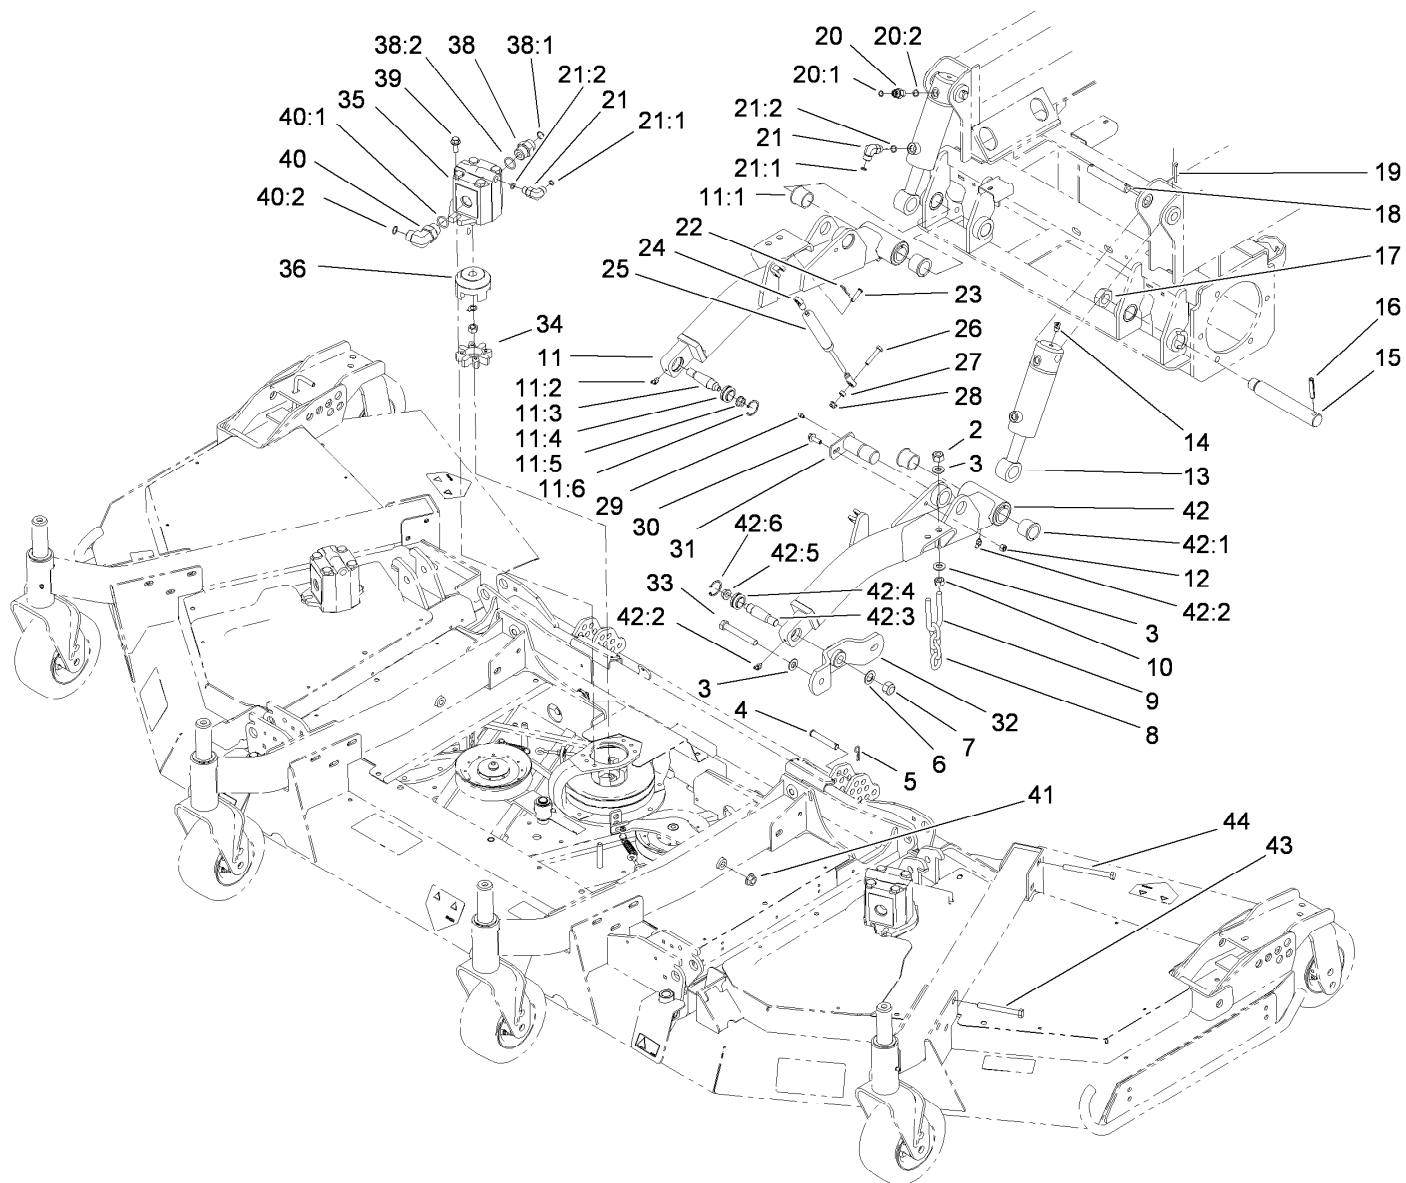 

Front Deck, Lift Arm and Cylinder Assembly (continued)

Ref.	Part Number	Qty.	Description
34	104-3542	3	Spider
35	99-5489	3	Gear Motor ASM
36	104-3541	3	Hub-Spider
38	340-8	3	Fitting-Straight
38:1	237-65	1	O-Ring
38:2	237-81	1	O-Ring
39	3234-42	6	Screw-HHF
40	340-139	3	Fitting-Elbow 90
40:1	237-81	1	O-Ring
40:2	237-65	1	O-Ring


Ref.	Part Number	Qty.	Description
41	32128-23	4	Nut-HF
42	105-7346	1	LH Arm ASM
42:1	104-0015	2	Bushing-Flange
42:2	302-11	2	Fitting-Lube, 45 DEG
42:3	105-7468	1	Stud-Tapered
42:4	105-7441	1	Bearing-Spherical
42:5	32128-42	1	Nut-HF
42:6	32151-34	1	Ring-Retaining
43	323-15	16	Screw-HH
44	323-16	4	Screw-HH

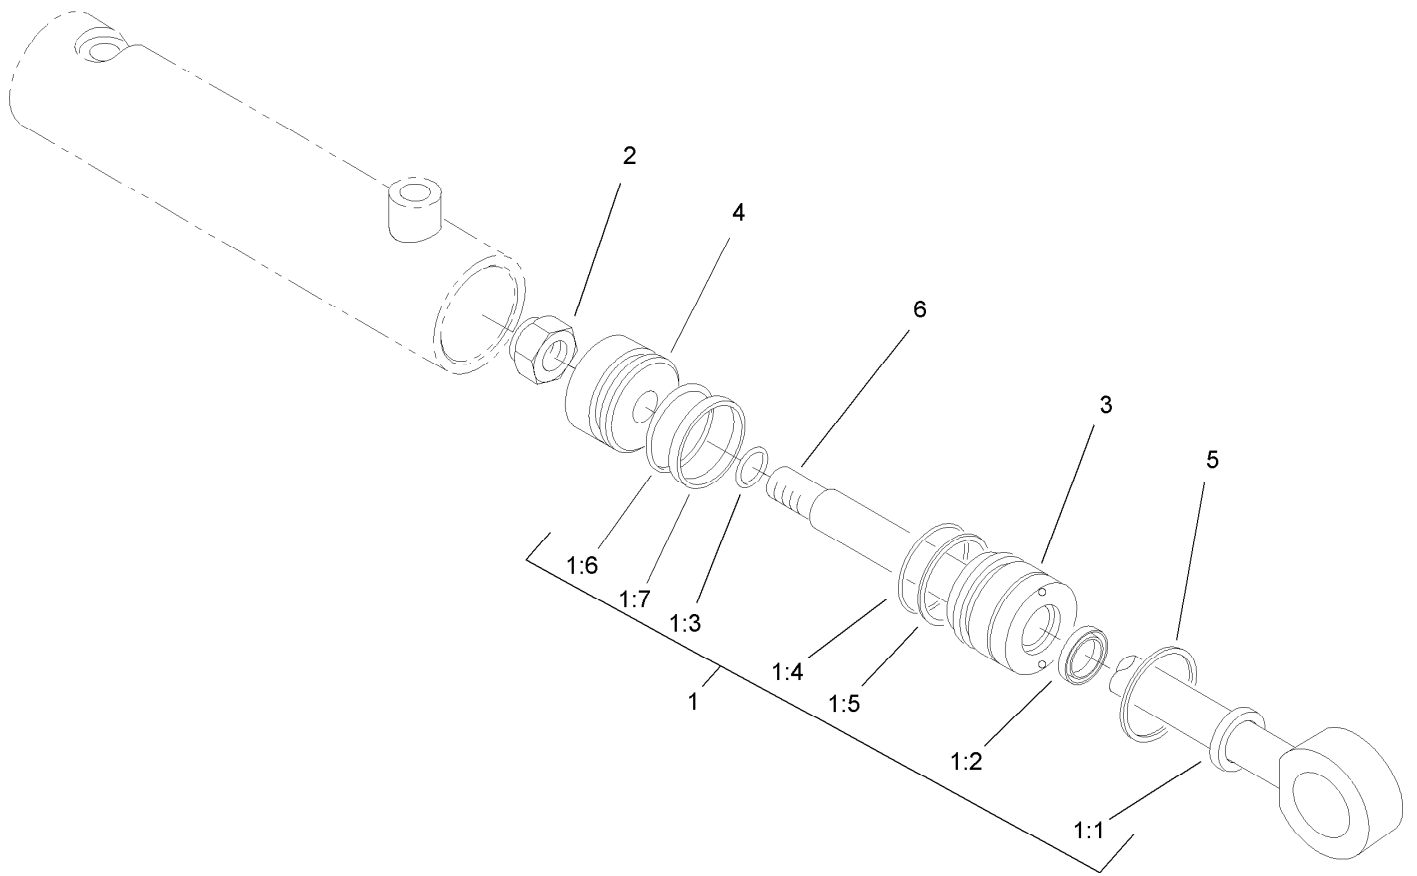 

Hydraulic Cylinder Assembly No. 107-0189

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-0246	1	Seal Kit
1:1		1	Wiper ●
1:2		1	Seal ●
1:3		1	Ring-Retaining ●
1:4		1	Ring-Retaining ●
1:5		1	Back-Up ●
1:6		1	Seal W/Loader ●
1:7		1	Wear Ring ●
2		1	Locknut ●
3		1	Head ●
4		1	Piston ●
5		1	Ring, Retaining ●
6		1	Rod ASM ●

 
● Not serviced separately

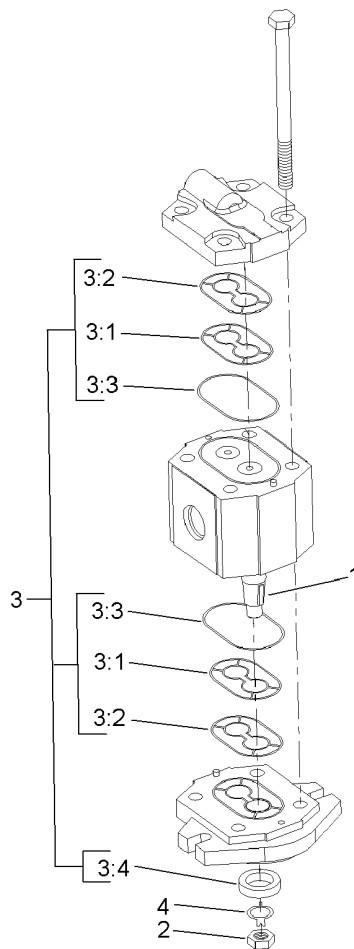

Gear Motor Assembly No. 99-5489

Ref.	Part Number	Qty.	Description
1	3257-3	1	Key-Woodruff
2	110-8815	1	Nut-Hex
3	104-4284	1	Seal Kit
3:1		2	Anti-Ext Ring ●
3:2		2	Seal ●
3:3		2	Ring-Retaining ●
3:4		1	Seal-Lip, Shaft ●
4	104-4283	1	Washer-Tab

 
● Not serviced separately

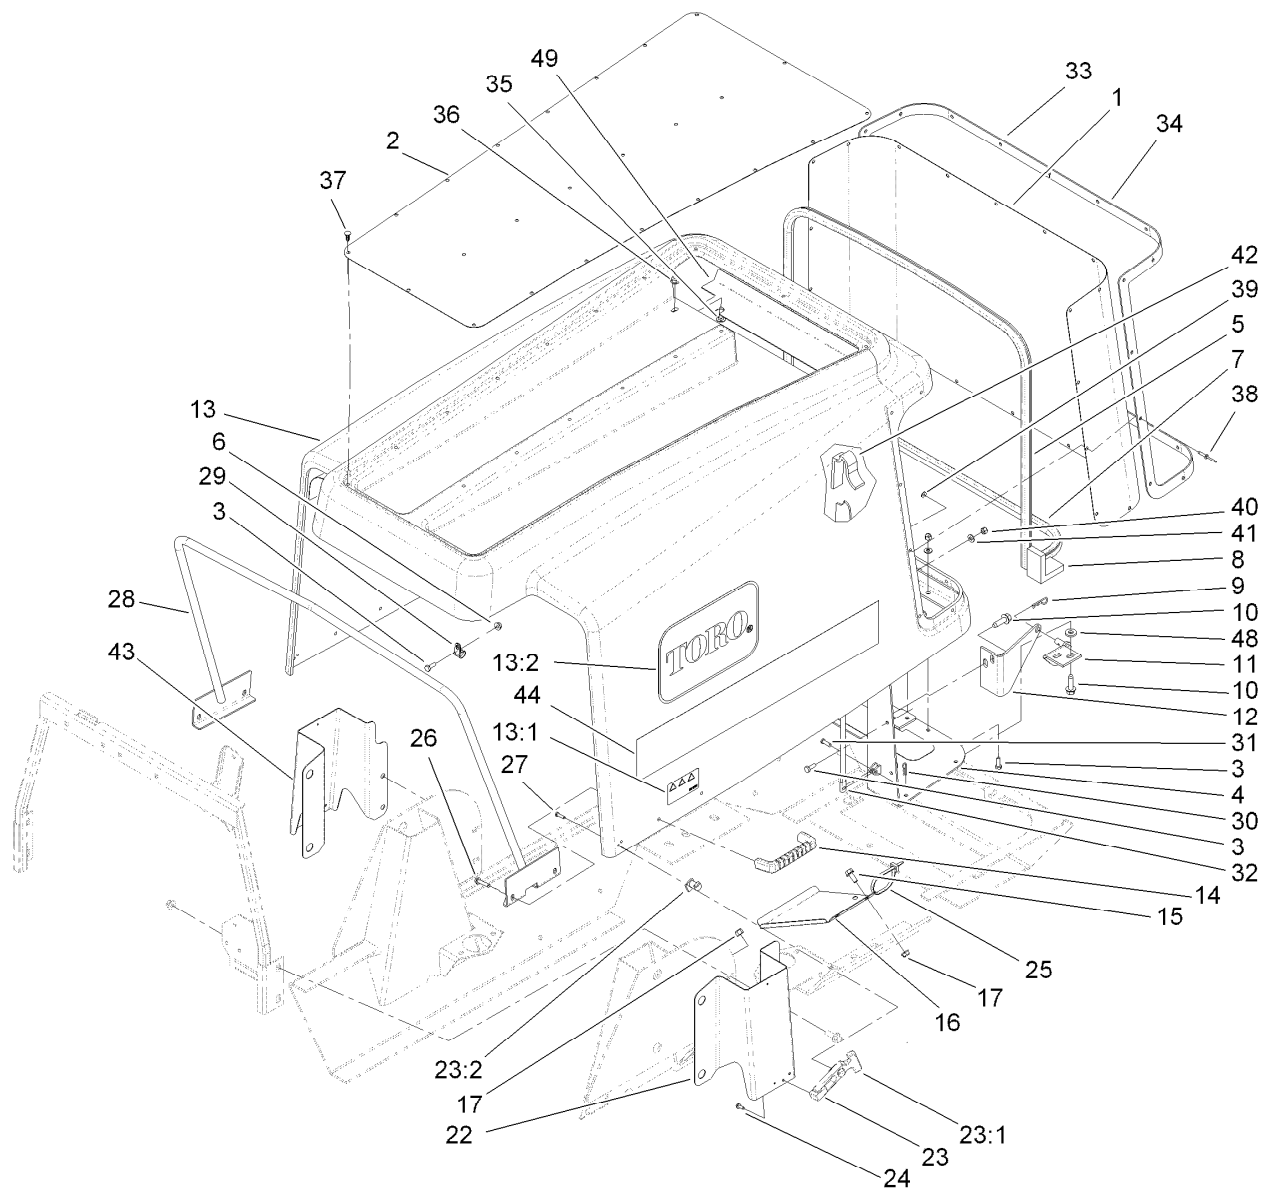

Hood and Screen Assembly

Ref.	Part Number	Qty.	Description
1	114-3844-03	1	Screen-Rear
2	114-3845-03	1	Screen-Top
3	321-4	22	Screw-HH
4	114-3824-03	1	Screen ASM
5	114-3823	1	Seal-Bulb
6	32128-33	2	Nut-HF
7	104-3590	1	Seal-Bulb
8	104-3580	2	Seal-Corner, Screen
9	3290-467	2	Pin-Hair
10	32144-109	8	Screw-Thd Form HWH
11	104-3589	2	Pivot-Screen
12	104-3588-03	2	Pivot-Screen
13	119-0056	1	Hood ASM
13:1	106-6754	1	Decal-Danger
13:2	66-1210	2	Decal
14	65-5100	2	Handle-Door
15	3234-5	2	Screw-HHF
16	104-3560-03	1	Deflector-Filter, Oil
17	32128-20	2	Nut-HF
22	105-7467-03	1	Bracket-Latch, LH
23	94-5626	2	Flexible Draw Latch ASM


Ref.	Part Number	Qty.	Description
23:1	103-4080	1	Latch-Rubber
23:2	103-4081	1	Latch-Keeper
24	32144-1	4	Screw-Taptite
25	3290-378	1	Tie-Cable
26	46-8092	4	Screw-Plastite
27	32104-4	2	Screw
28	104-3505-03	1	Support-Hood
29	2412-134	2	Clamp-R
30	3290-307	2	Pin-Cotter
31	283-67	2	Pin-Clevis
32	104-8313	2	Rod-Hood
33	115-3759-03	1	Mount-Screen, RH
34	115-3758-03	1	Mount-Screen, LH
35	3230-2	2	Bolt-CARR
36	104-8300	2	Nut-HF, NI
37	114-4899	24	Plug-Plastic
38	3269-28	22	Rivet-Pop
39	3269-26	22	Washer-Plain
40	3296-42	20	Nut-Lock, NI
41	3256-22	20	Washer-Flat
42	115-8479	2	Seal-Foam

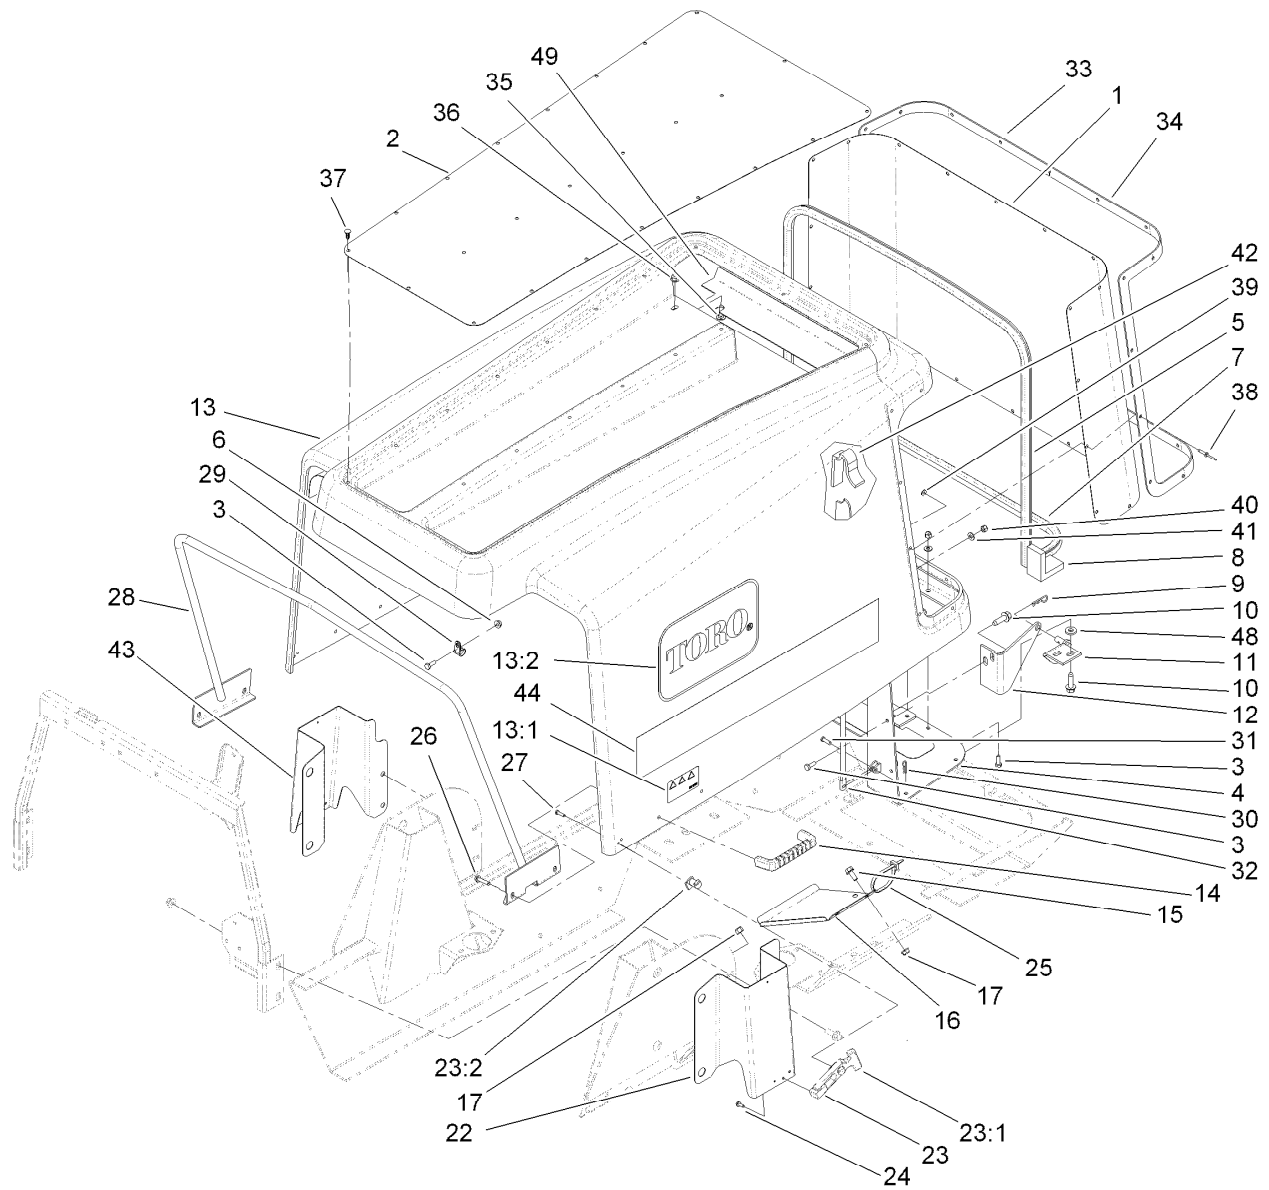 

Hood and Screen Assembly (continued)

Ref.	Part Number	Qty.	Description
43	105-7466-03	1	Bracket-Latch, RH
44	119-0055	2	Decal-Hood


Ref.	Part Number	Qty.	Description
48	43-0940	4	Spacer
49	119-0097-03	1	Shield-Hood

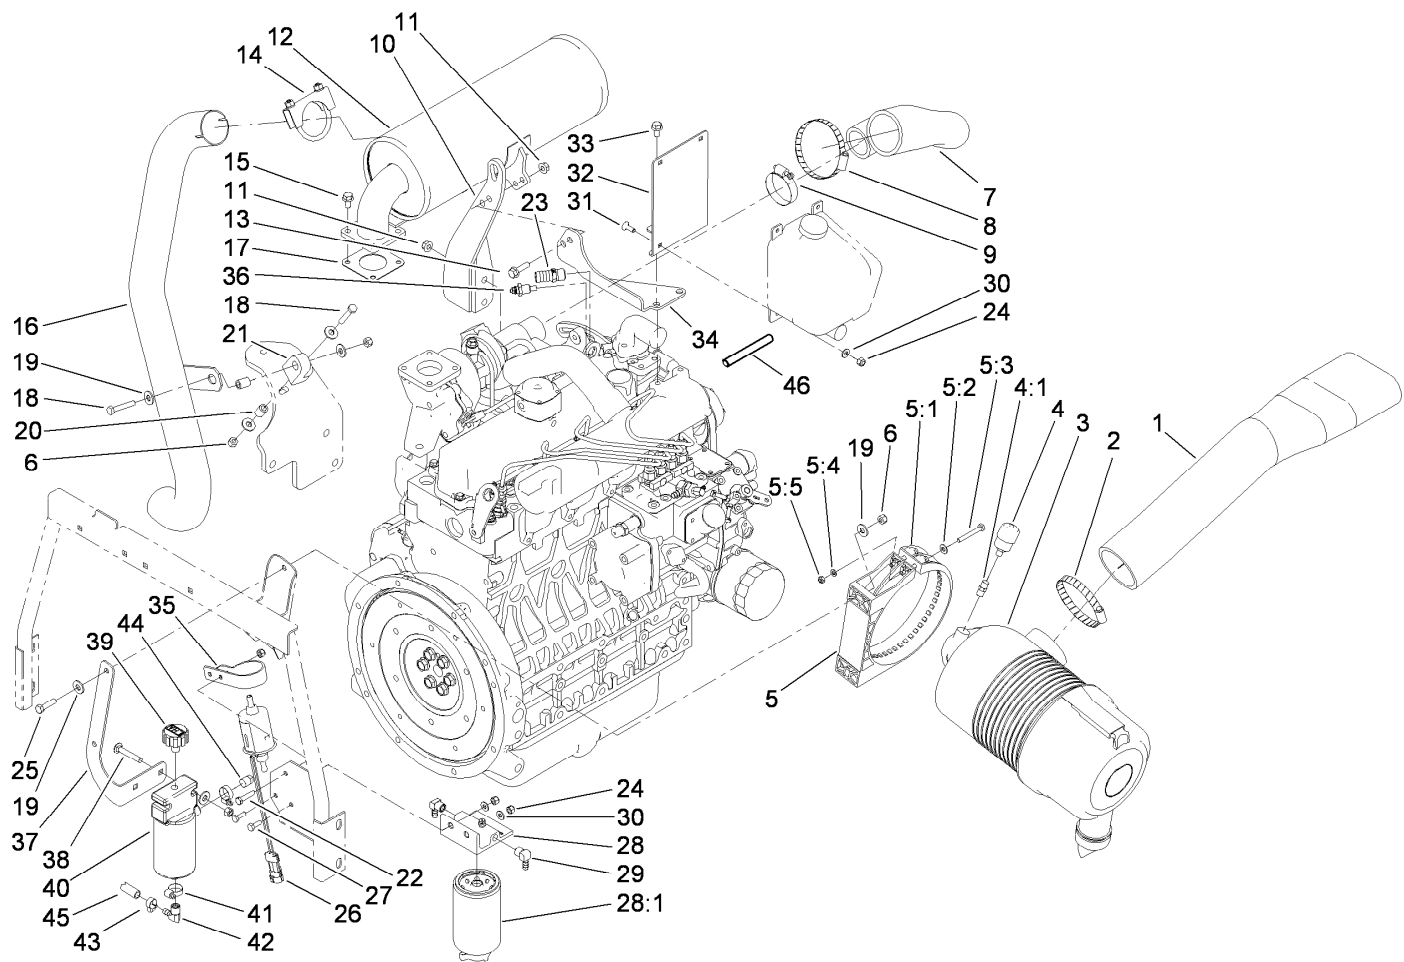 

Air Cleaner and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	114-3846	1	Hose-Air Cleaner
2	2412-125	1	Clamp-Hose
3	99-5410	1	Air Cleaner ASM
4	104-3563	1	Indicator
4:1	94-1416	1	Adapter-Indicator
5	99-5414	1	Strap-Cleaner, Air
5:1	108-1512	2	Spring
5:2	3256-22	2	Washer-Flat
5:3	33113-050	2	Screw-HH
5:4	33093-00	2	Washer-Flat
5:5	33023-00	2	Nut-Lock
6	3296-29	6	Nut-Lock, NI
7	117-2396	1	Hose-Air Cleaner
8	2412-110	1	Clamp-Band/Screw
9	2412-92	1	Clamp-Hose
10	114-9781-03	1	Mount-Exhaust
11	33004-00	4	Nut-HF
12	114-3849	1	Muffler-Turbo
13	33104-030	2	Screw-HHF
14	49-2580	1	Clamp-Muffler
15	33104-016	4	Screw-HHF


Ref.	Part Number	Qty.	Description
16	119-0100	1	Pipe-Exhaust
17	100-9333	1	Gasket-Muffler
18	322-9	2	Screw-HH
19	3256-3	10	Washer-Flat
20	93-5023	2	Spacer
21	95-5622	1	Hanger-Rubber
22	321-8	1	Screw-HH
23	117-9410	1	Fitting-Straight
24	3296-42	6	Nut-Lock, NI
25	322-6	2	Screw-HH
26	110-8806	1	Pump-Fuel
27	321-4	2	Screw-HH
28	110-9044	1	Separator-Filter
28:1	110-9049	1	Filter-Spin On
29	353-781	2	Fitting-HYD, 90
30	3256-22	5	Washer-Flat
31	1-807512	3	Bolt-CARR
32	119-0099-03	1	Mount-Bottle, Washer
33	33104-020	2	Screw-HHF
34	112-9113-03	1	Mount-Exhaust
35	110-8817	1	Bracket-Pump, Fuel

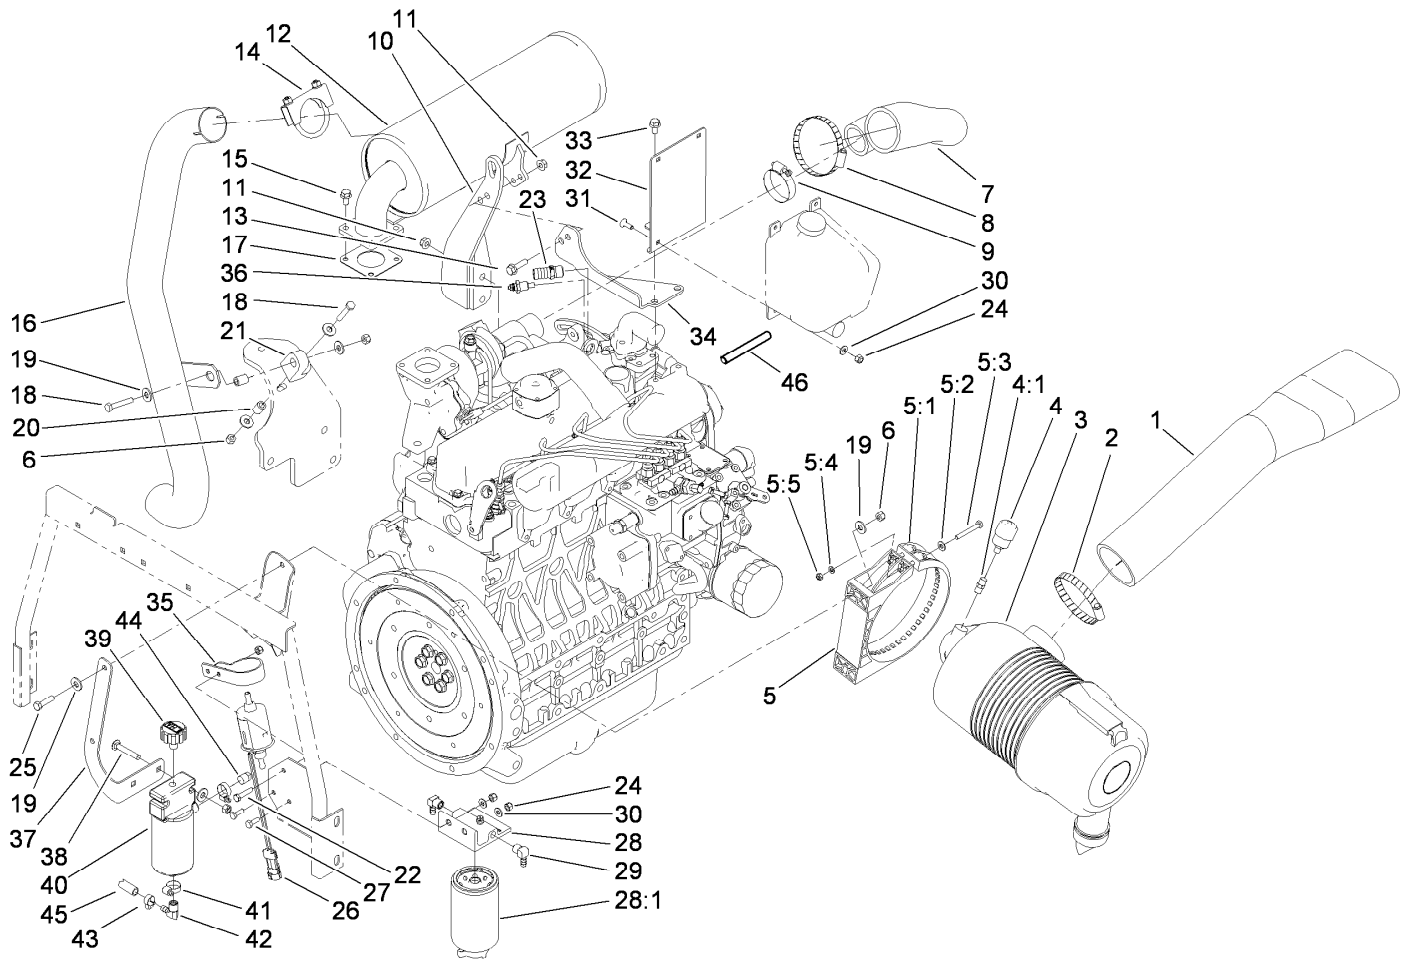 

Air Cleaner and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
36	98-9346	1	Sender-Temperature
37	119-0085-03	1	Mount-Overflow
38	3230-5	2	Bolt-Car
39	68-6150	1	Breather
40	119-0098	1	Tank-Overflow
41	2412-36	2	Clamp-Hose


Ref.	Part Number	Qty.	Description
42	353-781	1	Fitting-HYD, 90
43	2412-108	1	Clamp-Worm
44	281-1	1	Plug-Pipe, SQH
45	110-4100	1	Hose-Fuel
46	119-5293	1	Tubing-Convolut

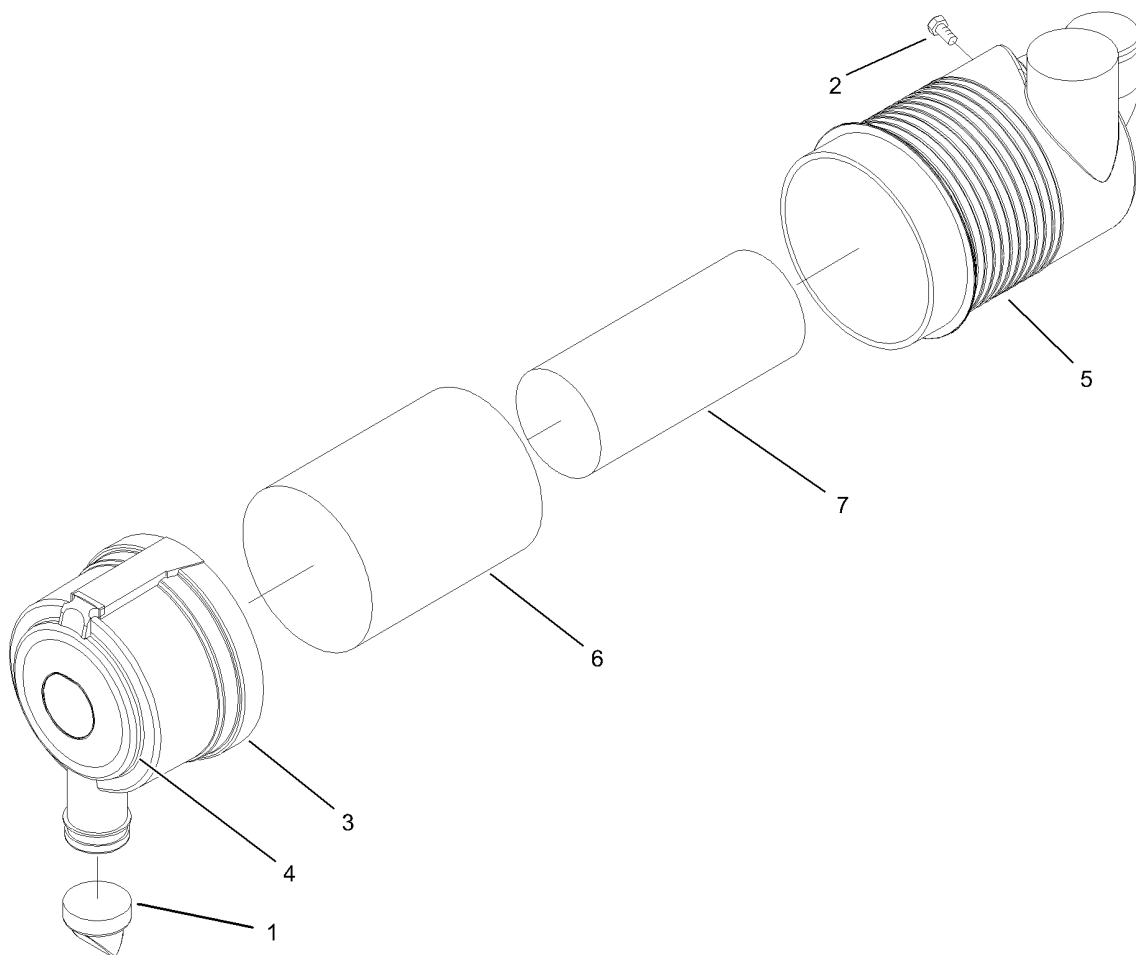 

Air Cleaner Assembly No. 99-5410

Ref.	Part Number	Qty.	Description
1	104-4258	1	Valve-Vacuator
2		1	Plug-Pipe ●
3	104-4259	1	Cover
4		1	Marking ●
5		1	Body ASM ●
6	108-3814	1	Filter-Air
7	108-3816	1	Filter-Air

 
● Not serviced separately

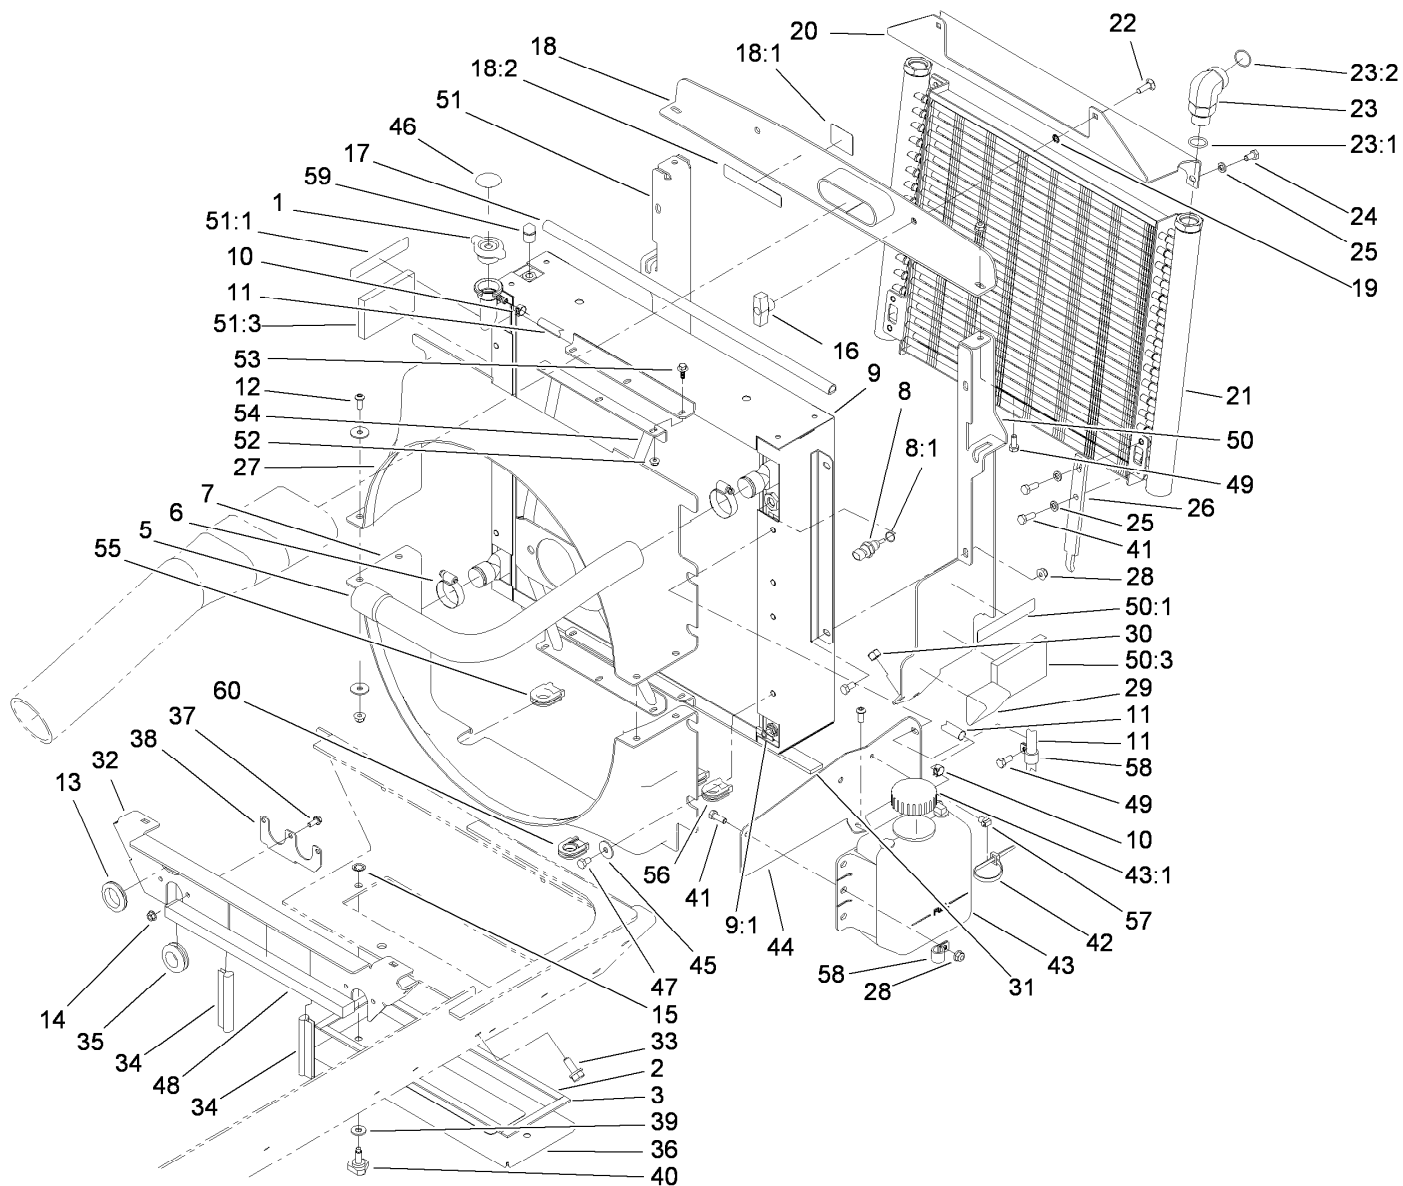

Radiator, Oil Cooler and Support Assembly


Ref.	Part Number	Qty.	Description
1	93-5957	1	Cap-Radiator
2	105-0777	2	Strip-Foam
3	105-0778	2	Strip-Foam
5	114-3831	1	Hose-Radiator, Upper
6	2412-111	4	Clamp
7	114-3834	1	Shroud-Radiator, Lower
8	110-8829	1	Sender-Temperature
8:1	237-42	1	O-Ring
9	114-3833	1	Radiator
9:1	304-46	1	Draincock
10	92-2379	3	Clamp-Hose
11	109-0277	2	Hose-Fuel
12	3274-55	4	Screw-HSBH
13	240-3	1	Grommet-Rubber
14	32128-33	4	Nut-HF
15	32151-72	2	Ring-Retaining
16	98-7134	2	Knob-Handle
17	114-3828	1	Seal-Bulb
18	114-3813	1	Radiator Top Support ASM
18:1	93-7275	1	Decal-Fluid, Starting
18:2	93-7272	1	Decal-Warning

Ref.	Part Number	Qty.	Description
19	104-8310	2	Ring-Retaining
20	117-5667-03	1	Bracket-Oil Cooler
21	110-0485	1	Cooler-Oil
22	3230-22	2	Screw-CARR
23	104-3796	2	Fitting-Elbow 90
23:1	237-81	1	O-Ring
23:2	340-65	1	O-Ring
24	322-2	6	Screw-HH
25	3253-4	6	Washer-Lock
26	114-3816	1	Shroud-Radiator, Upper
27	117-5657-03	2	Plate-Mount, Oil Cooler
28	104-8300	12	Nut-HF, NI
29	93-5954	2	Plug-Foam
30	3296-39	6	Nut-Lock, NI
31	104-2226	1	Strip-Foam
32	114-9763-03	1	Bracket-Base
33	3234-24	6	Screw-HHF
34	104-2224	2	Seal-Bulb
35	237-165	2	Grommet
36	110-6157-03	1	Cover
37	3234-33	4	Screw-HHF

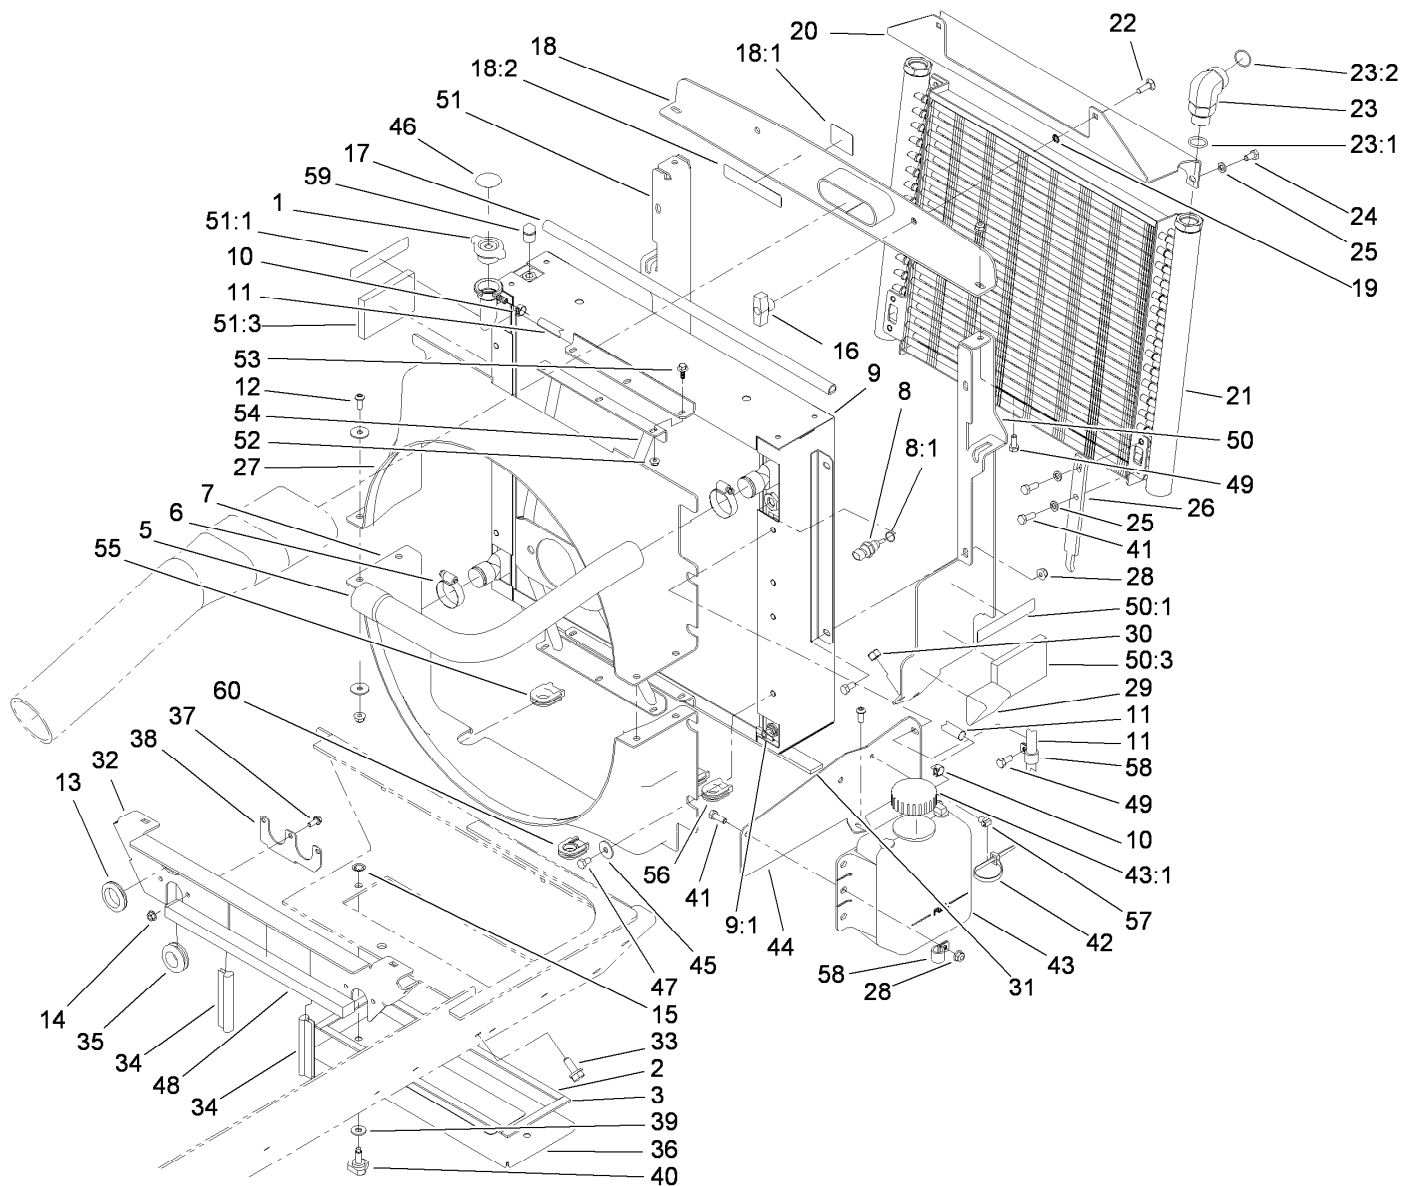 

Radiator, Oil Cooler and Support Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
38	106-6773-03	2	Plate	50:1	93-7272	1	Decal-Warning
39	3256-3	2	Washer-Flat	50:3	100-2196	1	Pad-Foam
40	95-9648	2	Knob	51	114-3803	1	Radiator RH Support ASM
41	322-4	6	Screw-HH	51:1	93-7272	1	Decal-Warning
42	3290-378	1	Tie-Cable	51:3	100-2196	1	Pad-Foam
43	104-2276	1	Reservoir-Coolant	52	104-7201	6	Nut-HF
43:1	87-7050	1	Cap-Reservoir	53	99-6810	6	Screw-HHF
44	114-3801-03	1	Bracket-Tank	54	114-9764-03	1	Bracket-Motor, Fan
45	3256-82	13	Washer-Flat	55	240-3	1	Grommet-Rubber
46	106-6755	1	Decal-Cap, Radiator	56	115-3764	1	Grommet (.680 ID)
47	322-1	7	Screw-HH	57	32180-030	1	Clip-Tie
48	95-4231	1	Foam-Seal, Side Screen	58	92-6064	2	Clamp-R
49	322-3	3	Screw-HH	59	281-13	1	Plug-Pipe
50	114-3805	1	Radiator LH Support ASM	60	115-3763	1	Grommet (.800 ID)

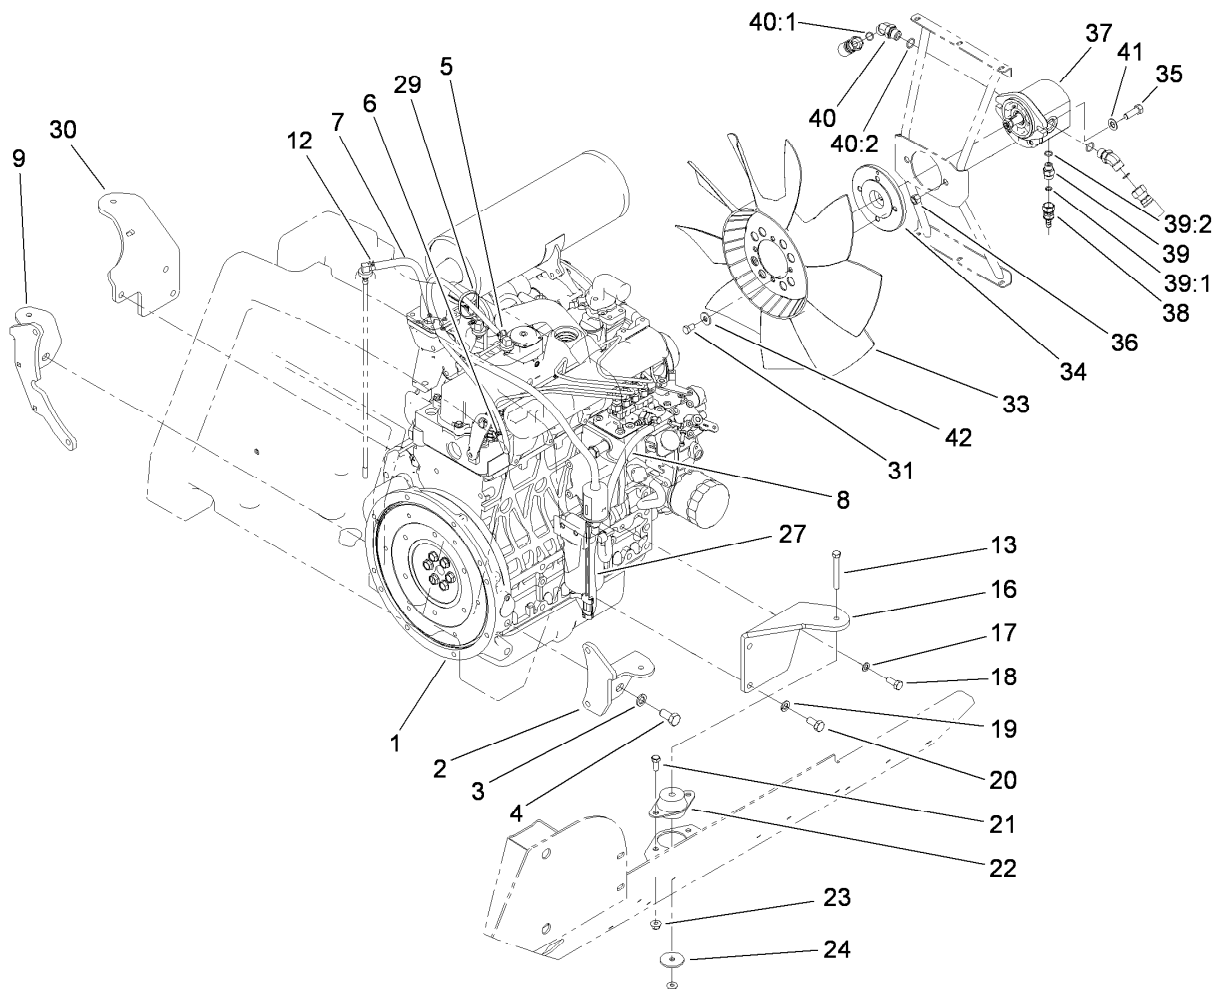 

Engine Mount, Fuel Line and Fan Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-3800	1	Engine ASM
2	117-5659-03	1	Mount-Engine, LH
3	43-5950	2	Washer-Lock, Spring
4	43-3210	2	Screw-HH
5	2412-108	1	Clamp-Worm
6	2412-80	1	Clamp-Hose
7	110-3257	1	Hose-Fuel
8	110-3254	1	Hose-Fuel
9	117-5658-03	1	Mount-Engine, RH
12	92-2379	7	Clamp-Hose
13	323-14	4	Screw-HH
16	114-3817-03	1	Mount-Engine, LH
17	48-9590	1	Washer-Lock
18	43-0090	1	Screw-HH
19	48-8070	5	Washer-Lock
20	42-9250	5	Bolt
21	323-5	8	Screw-HH
22	53-9682	4	Mount-Engine
23	104-8301	12	Nut-HF, NI


Ref.	Part Number	Qty.	Description
24	63-7400	4	Washer-Rebound
27	109-0274	2	Hose-Fuel
29	3290-378	1	Tie-Cable
30	115-3766-03	1	Mount-Engine, Rear RH
31	115-8486	4	Screw-HH
33	114-3825	1	Fan
34	117-2364	1	Hub-Fan
35	324-5	2	Screw-HH
36	3296-48	2	Nut-Lock, NI
37	117-4769	1	HYD Motor ASM
38	115-3756	1	Hose ASM
39	340-2	1	Fitting-Straight
39:1	237-22	1	O-Ring
39:2	237-42	1	O-Ring
40	340-101	2	Fitting-HYD, 45 DEG
40:1	237-30	1	O-Ring
40:2	237-79	1	O-Ring
41	3256-25	2	Washer-Flat
42	80-6990	4	Washer-Hardened

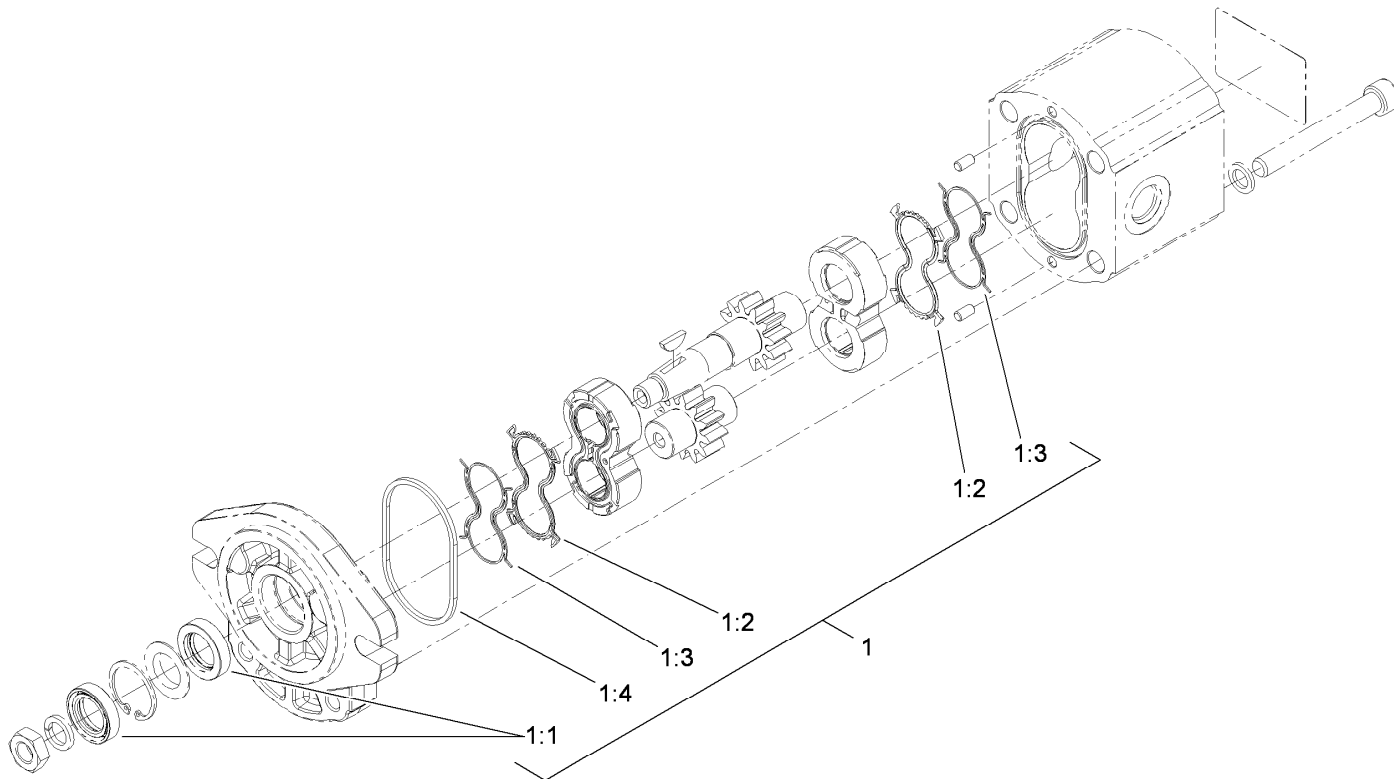 

Hydraulic Motor Assembly No. 117-4769

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-4110	1	Seal Kit
1:1		2	Seal-Shaft ●
1:2		2	Seal-Plate, Balancing ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	O Ring-Housing ●

 
● Not serviced separately

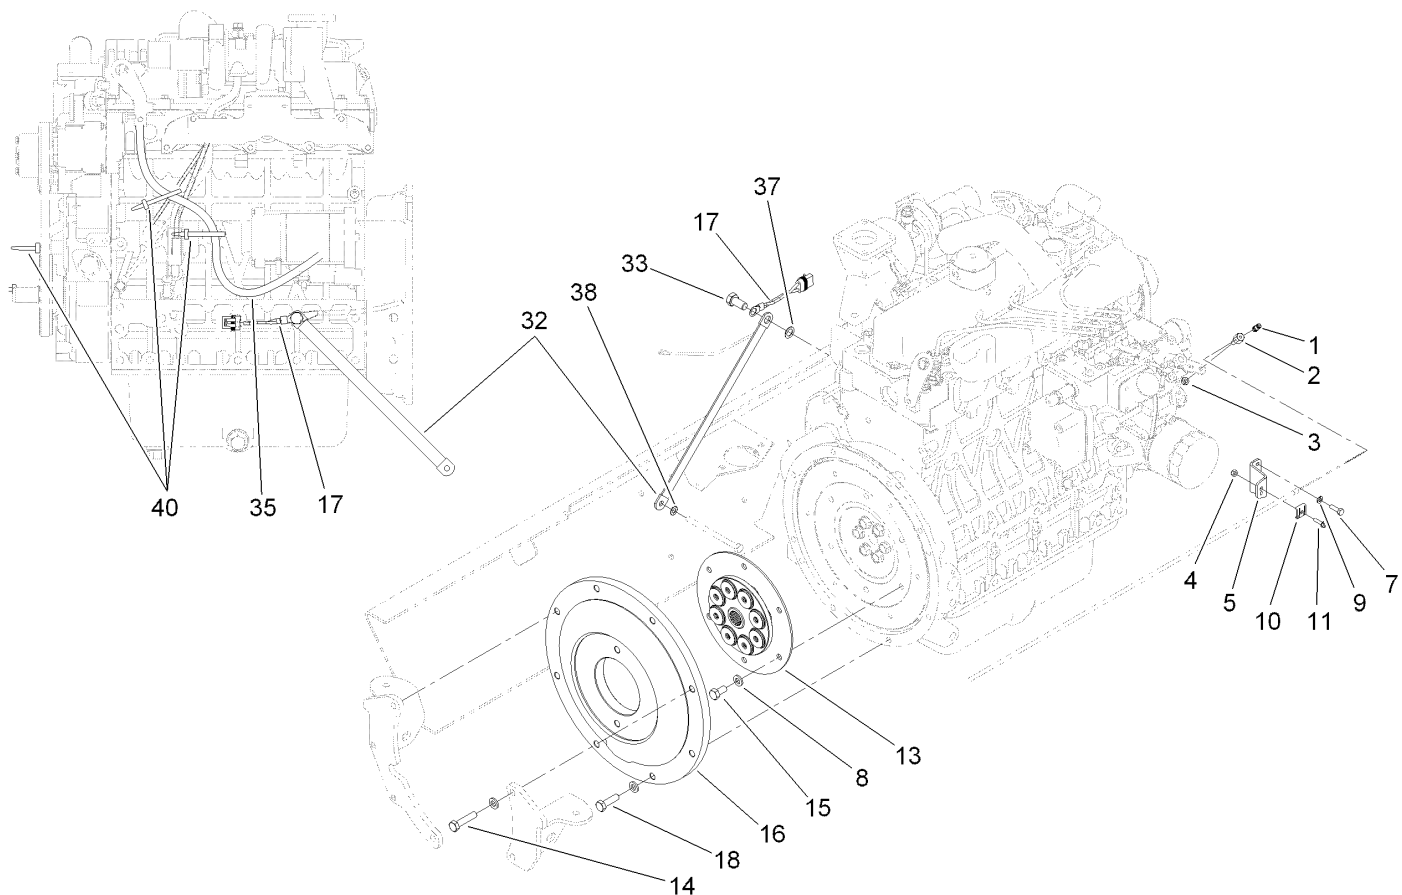

Flywheel and Throttle Assembly

Ref.	Part Number	Qty.	Description
1	112-9919	1	Stop-Cable, Throttle
2	93-0021	1	Swivel-Cable, Throttle
3	3296-13	1	Nut-Lock, NI
4	3296-2	1	Nut-Lock, NI
5	115-9114-03	1	Support-Cable, Throttle
7	33113-020	2	Screw-HH
8	107-1413	14	Washer-Hardened
9	43-5930	2	Washer-Lock, Spring
10	81-1690	1	Clamp-Cable
11	32105-13	1	Screw-HWH
13	114-3848	1	Coupler-Spring, Flywheel


Ref.	Part Number	Qty.	Description
14	117-5664	4	Screw-HH
15	99-5130	6	Bolt
16	115-6657-03	1	Plate-Flywheel
17	117-2370	1	Harness-Ground
18	117-5663	4	Screw-HH
32	117-2377	1	Cable-Battery, Negative
33	42-9250	1	Bolt
35	117-4745	1	Cable-Battery, Positive
37	3255-2	1	Washer-Lock, EXT
38	3255-8	1	Washer-Lock
40	3290-378	5	Tie-Cable

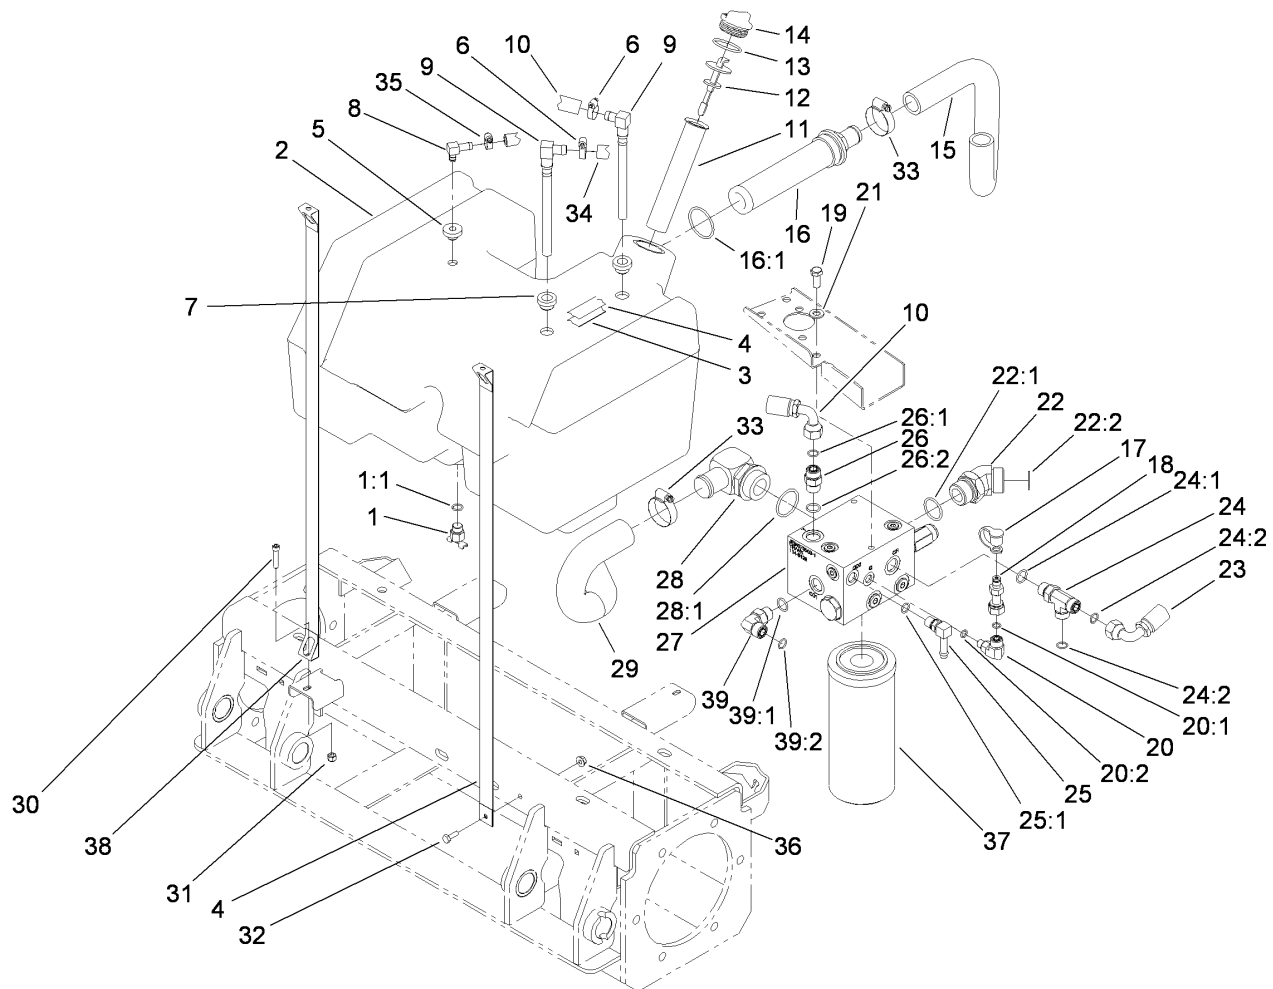 

Hydraulic Reservoir and Filter Assembly

Ref.	Part Number	Qty.	Description
1	104-8334	1	Petcock
1:1	237-42	1	O-Ring
2	114-9773	1	Reservoir-HYD
3	93-5273	2	Strap-Felt
4	104-0794	1	Strap
5	46-6560	1	Bushing
6	2412-36	2	Clamp-Hose
7	104-0790	2	Bushing
8	46-6550	1	Fitting-Elbow, 90 DEG
9	104-0791	2	Pipe-Stand
10	115-8471	1	Hose ASM
11	61-2790	1	Filter-Screen
12	105-2812	1	Dipstick
13	94-8166	1	O-Ring
14	93-7498	1	Plug-Plastic
15	100-5528	1	Hose-Suction
16	104-7546	1	Tank Strainer ASM
16:1	340-136	1	O-Ring
17	354-79	1	Cap-Dust
18	86-5480	1	Nipple-Test
19	323-5	2	Screw-HH
20	340-97	1	Fitting-Elbow, 90 DEG
20:1	237-22	1	O-Ring
20:2	237-78	1	O-Ring
21	3256-24	2	Washer-Flat
22	104-3509	1	Fitting-HYD, 45 DEG
22:1	237-146	1	O-Ring


Ref.	Part Number	Qty.	Description
22:2	340-65	1	O-Ring
23	105-7927	1	Hose-HYD
24	340-109	1	Fitting-Tee
24:1	237-79	1	O-Ring
24:2	237-30	2	O-Ring
25	100-4887	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	340-4	1	Fitting-Straight
26:1	237-30	1	O-Ring
26:2	237-79	1	O-Ring
27	114-8129	1	HYD Filter Manifold ASM
28	92-7526	1	Fitting-HYD 90 Spcl
28:1	237-101	1	O-Ring
29	115-8454	1	Hose-Filter
30	3274-51	3	Screw-HSH
31	3296-42	3	Nut-Lock, NI
32	321-4	1	Screw-HH
33	2412-111	2	Clamp
34	110-6151	1	Hose
35	2412-108	1	Clamp-Worm
36	32128-33	1	Nut-HF
37	94-2621	1	Element-Filter
38	114-9783	1	Strap
39	340-98	1	Fitting-Elbow, 90 DEG
39:1	237-79	1	O-Ring
39:2	237-30	1	O-Ring

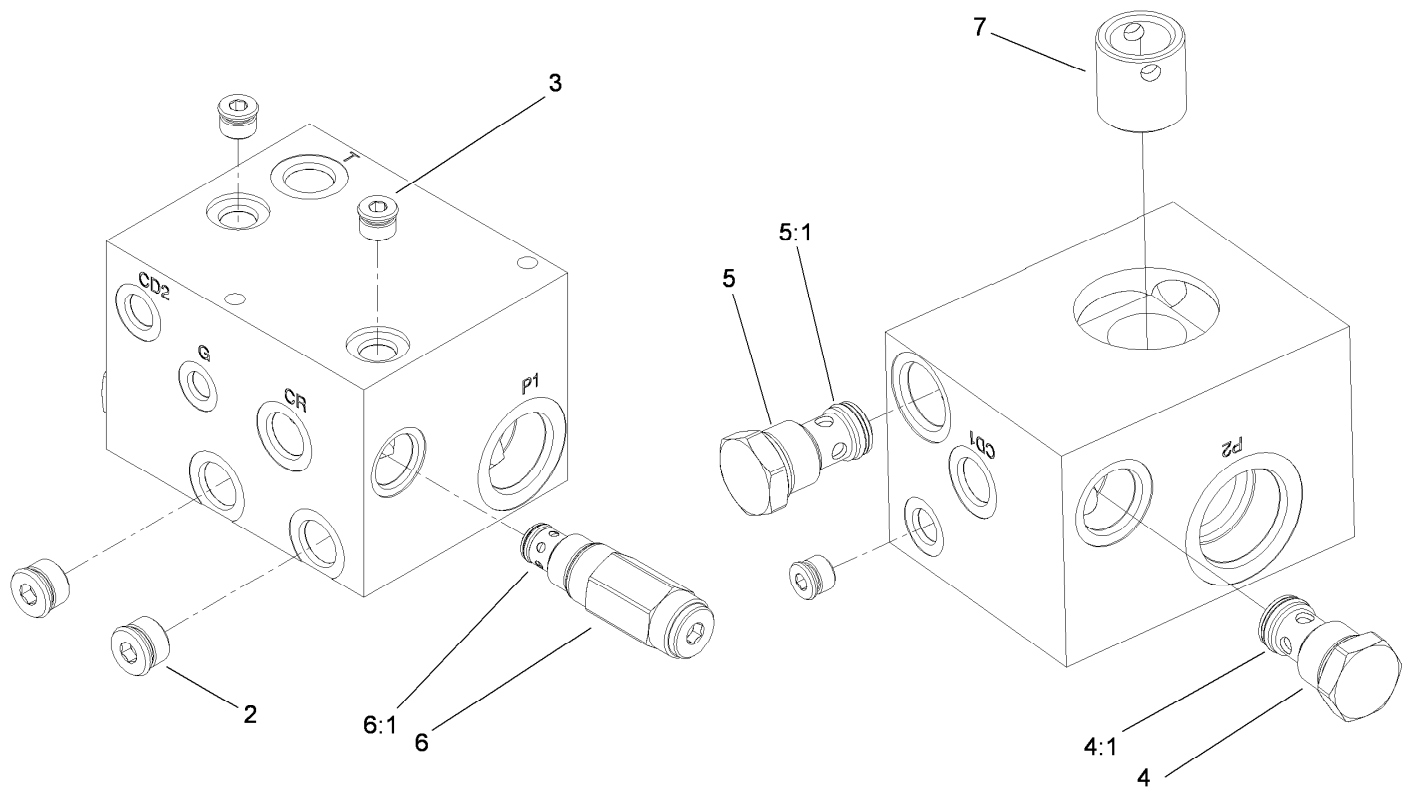 

Hydraulic Filter Manifold Assembly No. 114-8129

Ref.	Part Number	Qty.	Description
2		2	Plug ●
3		3	Plug ●
4	110-0468	1	Valve-Check, 5 PSI
4:1	110-0470	1	Seal Kit
5	110-0467	1	Valve-Check, 40 PSI
5:1	110-0470	1	Seal Kit
6	115-4140	1	Valve-Check
6:1	105-9159	1	Seal Kit
7		1	Filter Nipple ●

 
● Not serviced separately

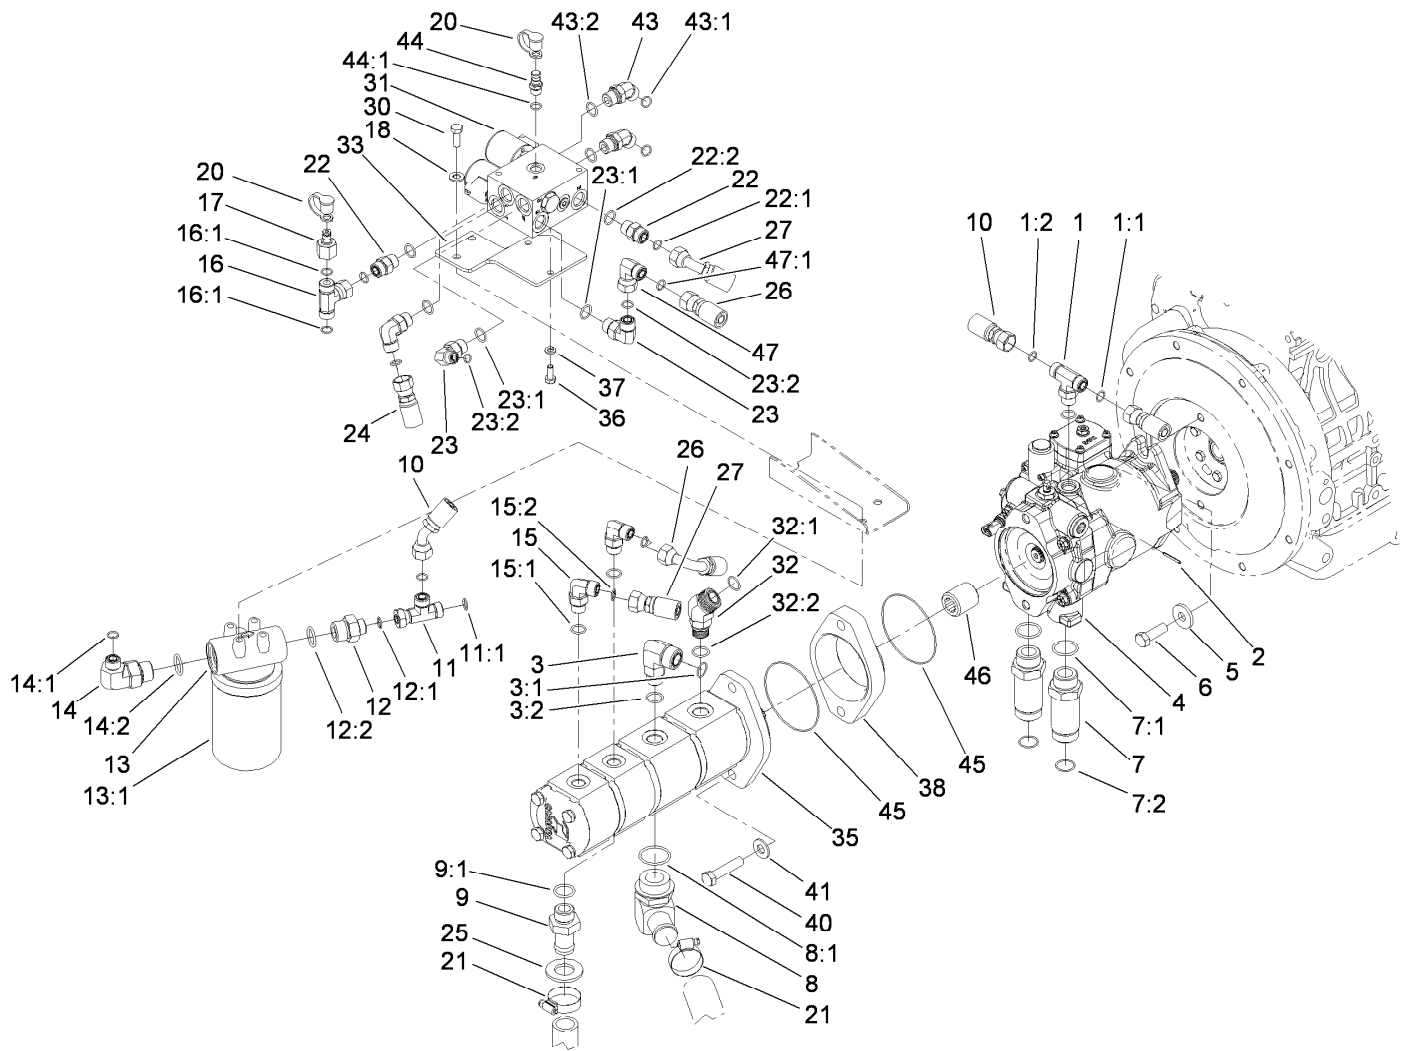

Pump Installation and Filter Assembly

Ref.	Part Number	Qty.	Description
1	340-157	1	Fitting-HYD, Tee
1:1	237-79	1	O-Ring
1:2	237-30	2	O-Ring
2	32121-77	1	Pin-Roll
3	340-16	1	Fitting-HYD, 90 DEG
3:1	237-80	1	O-Ring
3:2	237-58	1	O-Ring
4	114-9769	1	Piston Pump ASM
5	110-6147	2	Washer-Flat
6	115-8487	2	Screw-HH
7	100-5565	2	Fitting-STR
7:1	237-146	1	O-Ring
7:2	340-65	1	O-Ring
8	92-7526	1	Fitting-HYD 90 Spcl
8:1	237-101	1	O-Ring
9	99-3017	1	Fitting
9:1	237-81	1	O-Ring
10	100-5521	1	Hose ASM
11	340-104	1	Fitting-HYD, Tee
11:1	237-30	2	O-Ring
12	100-4240	1	Fitting-STR


Ref.	Part Number	Qty.	Description
12:1	237-30	1	O-Ring
12:2	237-81	1	O-Ring
13	93-2242	1	Filter-Oil
13:1	75-1310	1	Filter-HYD
14	340-131	1	Fitting-HYD, 90 DEG
14:1	237-30	1	O-Ring
14:2	237-81	1	O-Ring
15	340-98	4	Fitting-Elbow, 90 DEG
15:1	237-79	1	O-Ring
15:2	237-30	1	O-Ring
16	93-6810	1	Fitting-Tee
16:1	237-30	2	O-Ring
17	100-5616	1	Fitting
18	3256-24	2	Washer-Flat
20	354-79	2	Cap-Dust
21	2412-111	2	Clamp
22	340-4	2	Fitting-Straight
22:1	237-30	1	O-Ring
22:2	237-79	1	O-Ring
23	340-18	1	Fitting-HYD, 90 DEG
23:1	237-79	1	O-Ring

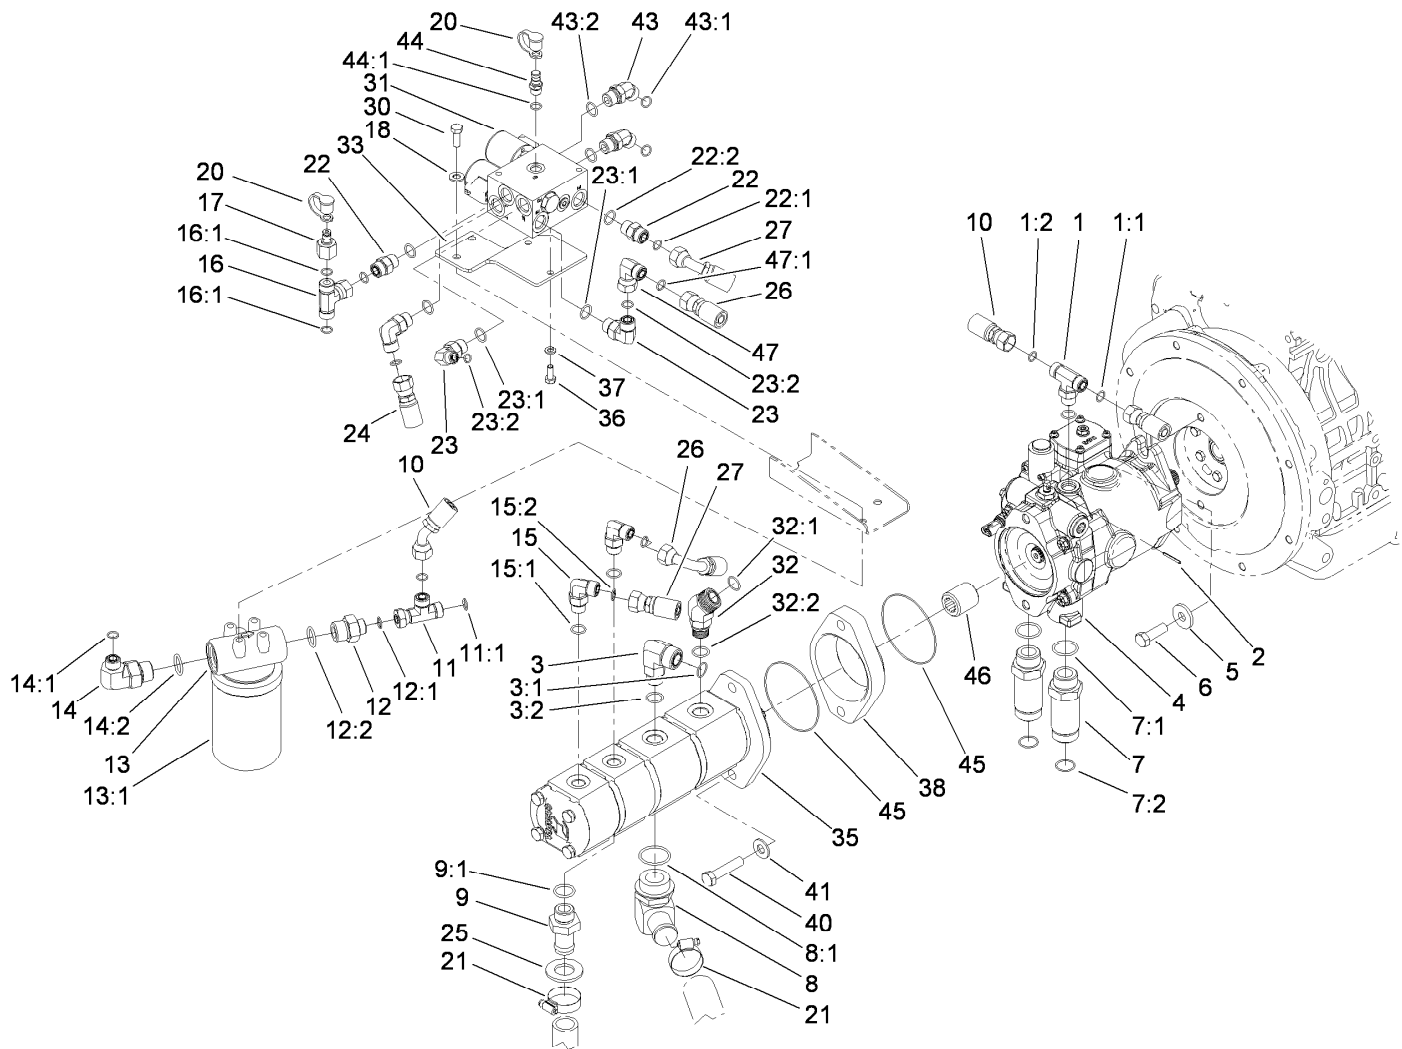 

Pump Installation and Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
23:2	237-22	1	O-Ring
24	114-9772	1	Hose ASM
25	3256-62	1	Washer-Flat
26	105-3985	1	Hose-HYD
27	95-3737	1	HYD Hose ASM
30	323-6	2	Screw-HH
31	114-3847	1	Fan Drive Manifold ASM
32	115-3768	1	Fitting-HYD, 45 DEG
32:1	237-58	1	O-Ring
32:2	237-80	1	O-Ring
33	114-9784-03	1	Mount-Manifold
35	114-9771	1	Pump ASM
36	322-3	2	Screw-HH

Ref.	Part Number	Qty.	Description
37	3253-4	2	Washer-Lock
38	115-3757	1	Spacer-Pump
40	115-8488	2	Screw-HH
41	87-7270	2	Washer-Thrust
43	340-101	2	Fitting-HYD, 45 DEG
43:1	237-30	1	O-Ring
43:2	237-79	1	O-Ring
44	59-7410	1	Fitting-Diagnostic
44:1	237-42	1	O-Ring
45	115-3009	2	O-Ring
46	115-3011	1	Coupler-Pump
47	94-6031	1	Fitting-HYD
47:1	237-30	1	O-Ring

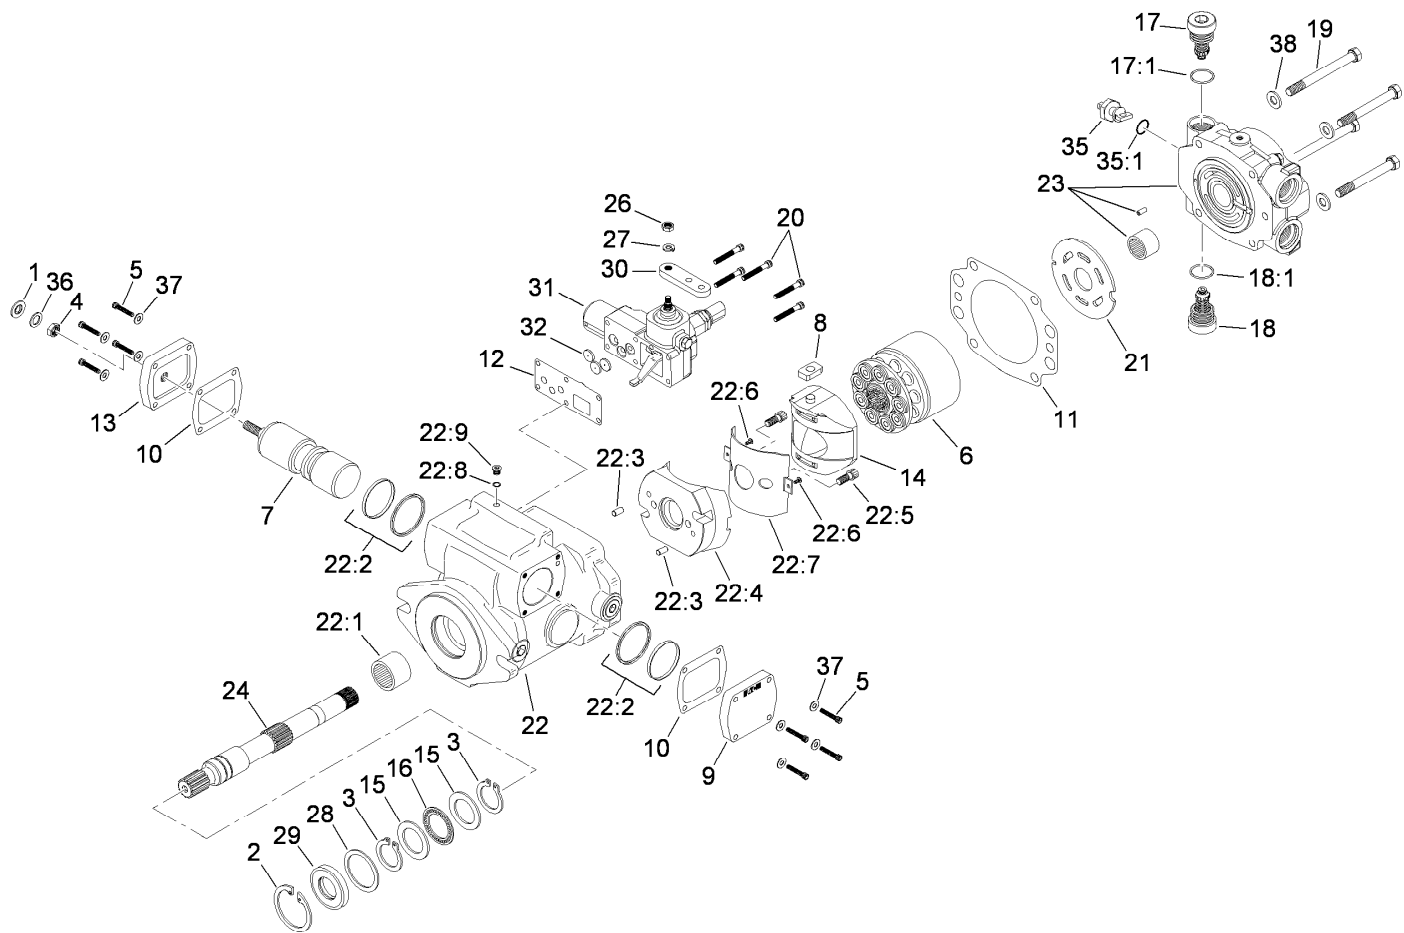 


Piston Pump Assembly No. 114-9769

Ref.	Part Number	Qty.	Description
1	3220-3	1	Nut-HJ
2	60-6260	1	Ring
3	76-7000	2	Ring-Retaining
4	94-3027	1	Washer-Seal
5	93-6337	8	Screw
6	99-8701	1	Rotating Kit
7	105-4572	1	Servo Piston ASM
8	94-3032	1	Follower-Piston
9	94-3033	1	Plate-Cover
10	93-6339	2	Gasket
11	105-2900	1	Gasket-Housing
12	105-2901	1	Gasket-Housing, Control
13	105-9853	1	Plate-Cover
14	94-3026	1	Camplate ASM
15	76-6950	2	Race-Thrust
16	76-6960	1	Bearing-Thrust
17	105-2857	1	Valve-Relief
17:1		1	Ring-Retaining ●
18	105-2858	1	Valve-Relief
18:1		1	Ring-Retaining ●
19	323-45	4	Screw-HH
20	93-6324	6	Screw
21	99-8704	1	Plate-Valve
22	105-2859	1	Housing ASM

Ref.	Part Number	Qty.	Description
22:1		1	Bearing ●
22:2		2	Seal ●
22:3		2	Pin-Dowel ●
22:4		1	Cradle ASM ●
22:5		2	Screw ●
22:6		2	Screw ●
22:7		1	Bushing ●
22:8		1	Ring-Retaining ●
22:9		1	Plug ●
23	115-3007	1	Endcover Sub-Assembly
24	115-3008	1	Shaft-Drive
26	93-6327	1	Nut
27	3253-3	1	Washer-Lock
28	60-6240	1	Washer
29	105-3331	1	Seal-Shaft
30	105-2862	1	Arm-Control
31	115-4446	1	Control-Servo, Manual
32	105-2863	3	Orifice
35	105-2864	1	Valve-Bypass
35:1		1	Ring-Retaining ●
36	94-3030	1	Washer
37	93-6336	8	Washer
38	105-9762	4	Washer

 ● Not serviced separately


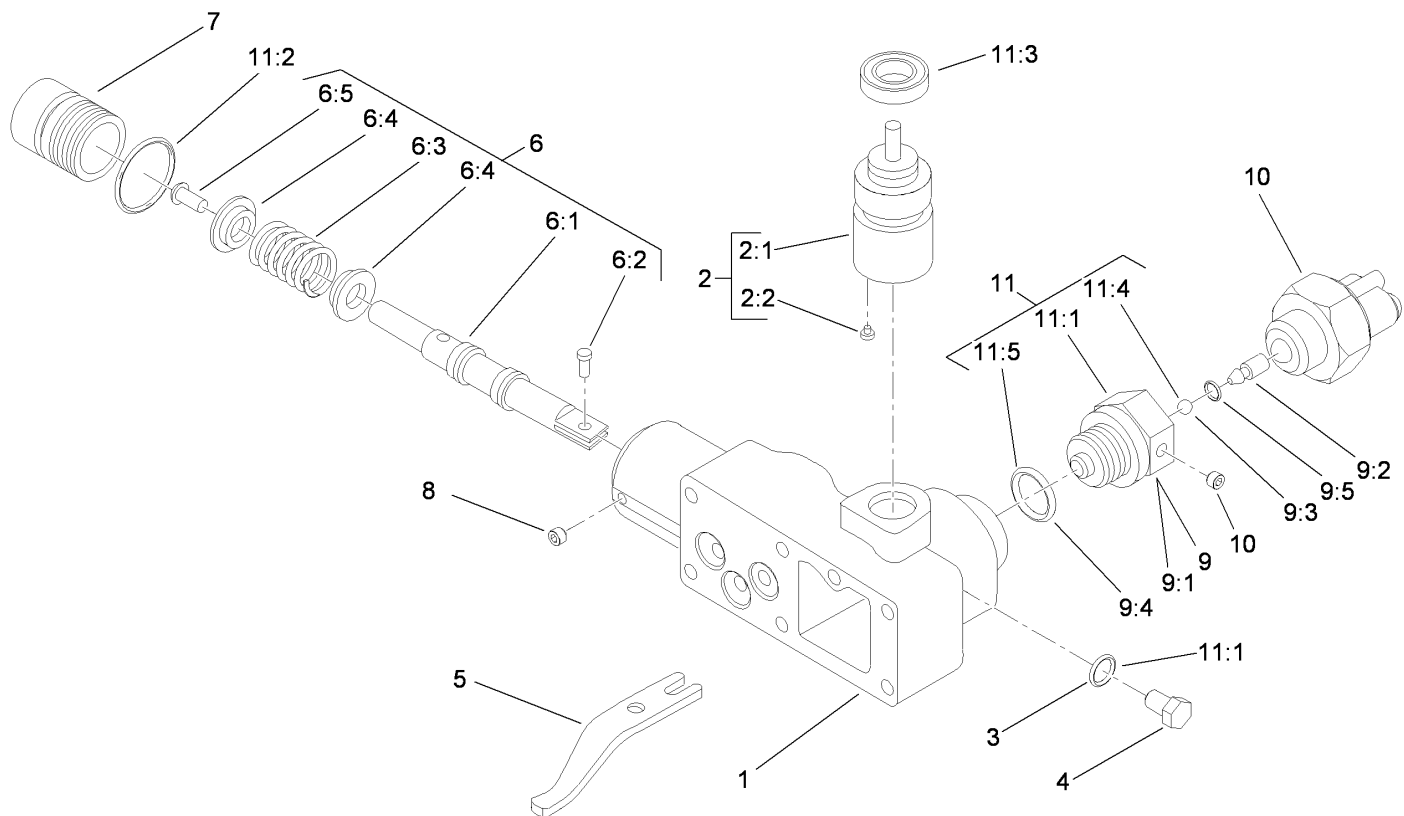


Control Assembly No. 115-4446

Ref.	Part Number	Qty.	Description
1		1	Housing-Control ●
2	108-7099	1	Input Control Shaft ASM
2:1		1	Shaft ●
2:2		1	Pin ●
3		1	Ring-Retaining ●
4		1	Plug ●
5		1	Link-Feedback ●
6	108-7098	1	Valve Spool ASM
6:1		1	Valve-Spool ●
6:2		1	Pin-Dowel ●
6:3		1	Spring ●
6:4		2	Retainer ●
6:5		1	Screw ●
7		1	Plug ●


Ref.	Part Number	Qty.	Description
8		2	Screw-Set ●
9	108-8003	1	Adaptor ASM
9:1		1	Adaptor-Lockout, Neutral ●
9:2		1	Pin ●
9:3		1	Ball ●
9:4		1	Ring-Retaining ●
9:5		1	Ring-Retaining ●
10	115-3795	1	Switch-Neutral
11	94-3044	1	Seal Kit
11:1	117-8979	1	Seal-Shaft
11:2	105-2901	1	Gasket-Housing, Control
11:3		1	Ring-Retaining ●
11:4		1	Ring-Retaining ●
11:5		1	Seal-Wiper ●

  ● Not serviced separately

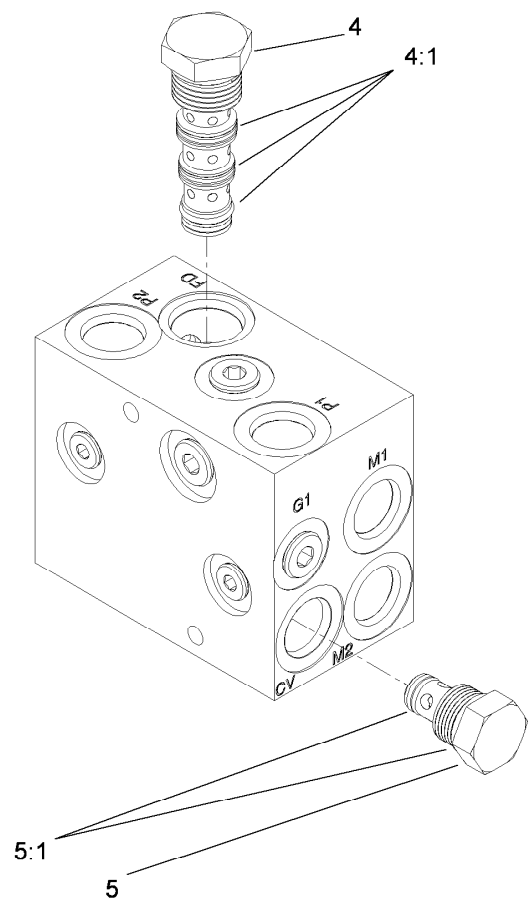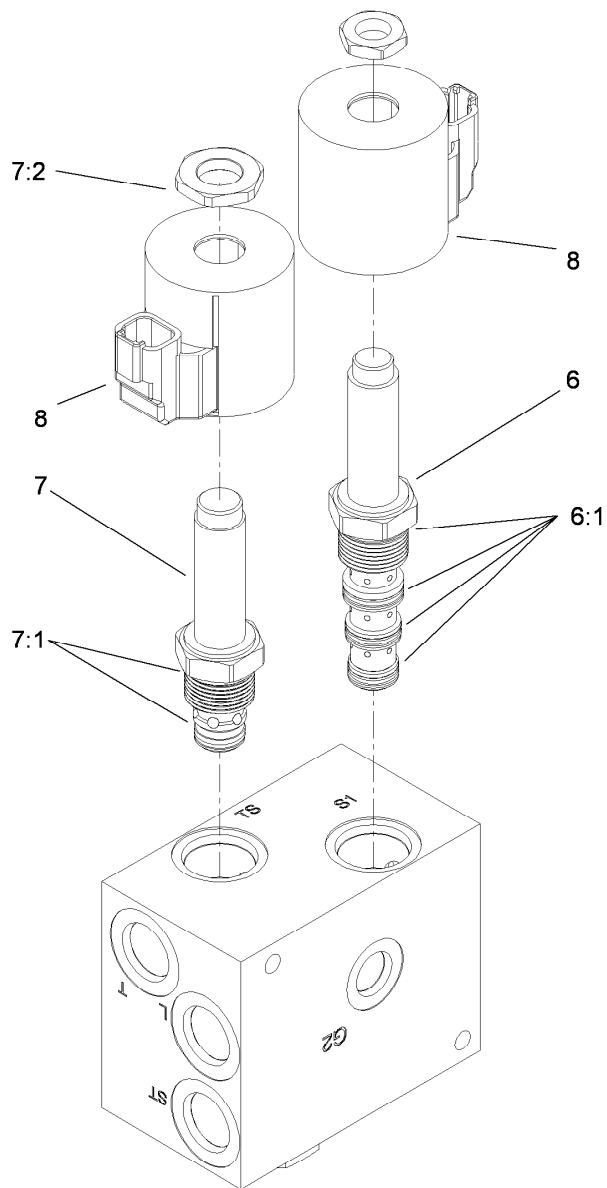

Fan Drive Manifold Assembly No. 114-3847


Ref.	Part Number	Qty.	Description
4	115-3024	1	Valve-Flow Divider/Combiner
4:1	115-3025	1	Seal Kit
5	105-9321	1	Check Valve ASM
5:1	105-9156	1	Seal Kit
6	115-3023	1	Solenoid Valve ASM
6:1	110-8908	1	Spool Valve Seal Kit
7	115-3022	1	Relief-Proportional
7:1	110-6316	1	Seal Kit
7:2	119-7715	1	Nut-Coil
8	110-6344	2	Coil-12V, Dc

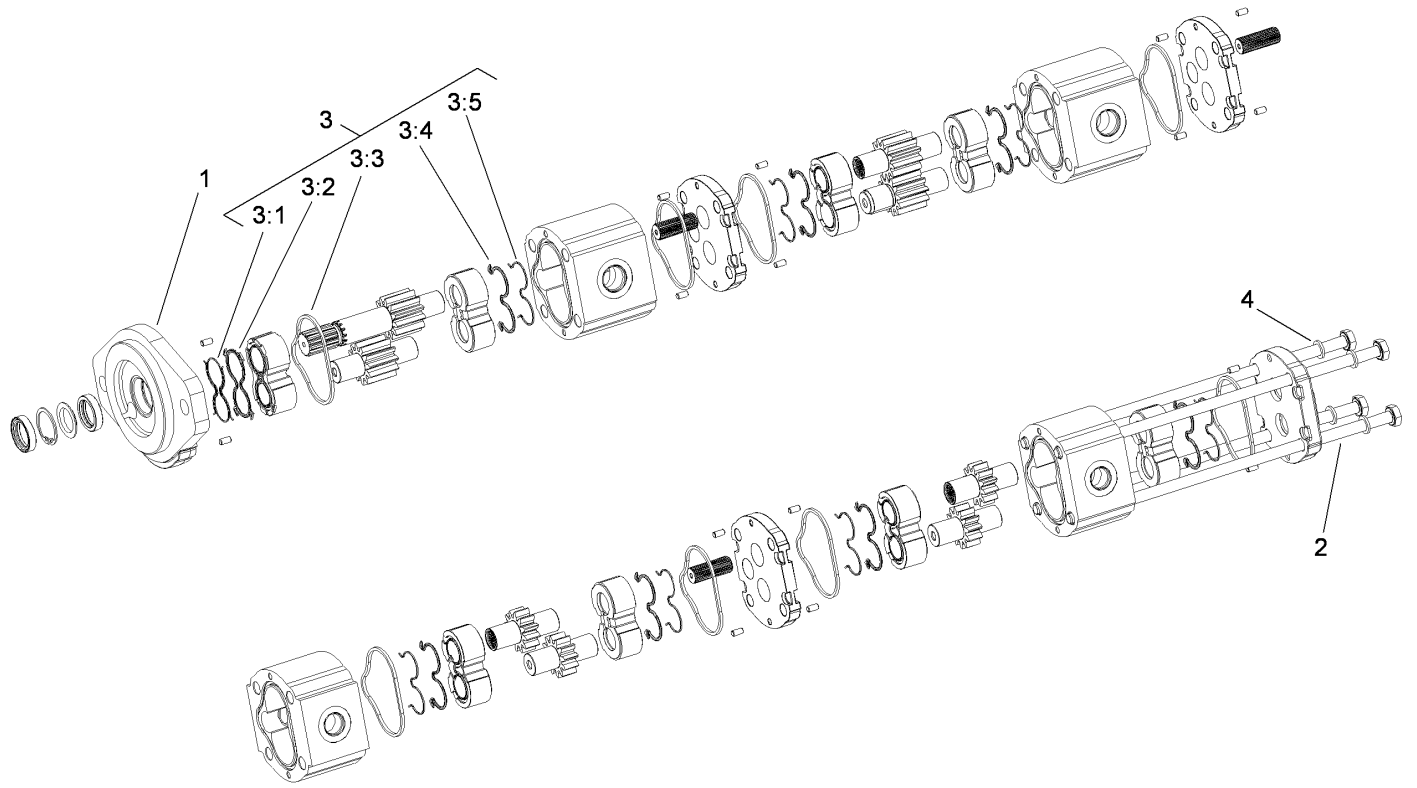 

Pump Assembly No. 114-9771

Ref.	Part Number	Qty.	Description
1	115-3774	1	Cover-Front
2	115-3777	4	Bolt
3	115-3776	1	Seal Kit
3:1		1	Seal ●
3:2		1	Seal ●
3:3		8	Seal ●
3:4		7	Seal ●
3:5		7	Seal ●
4	115-9138	4	Washer

 
● Not serviced separately

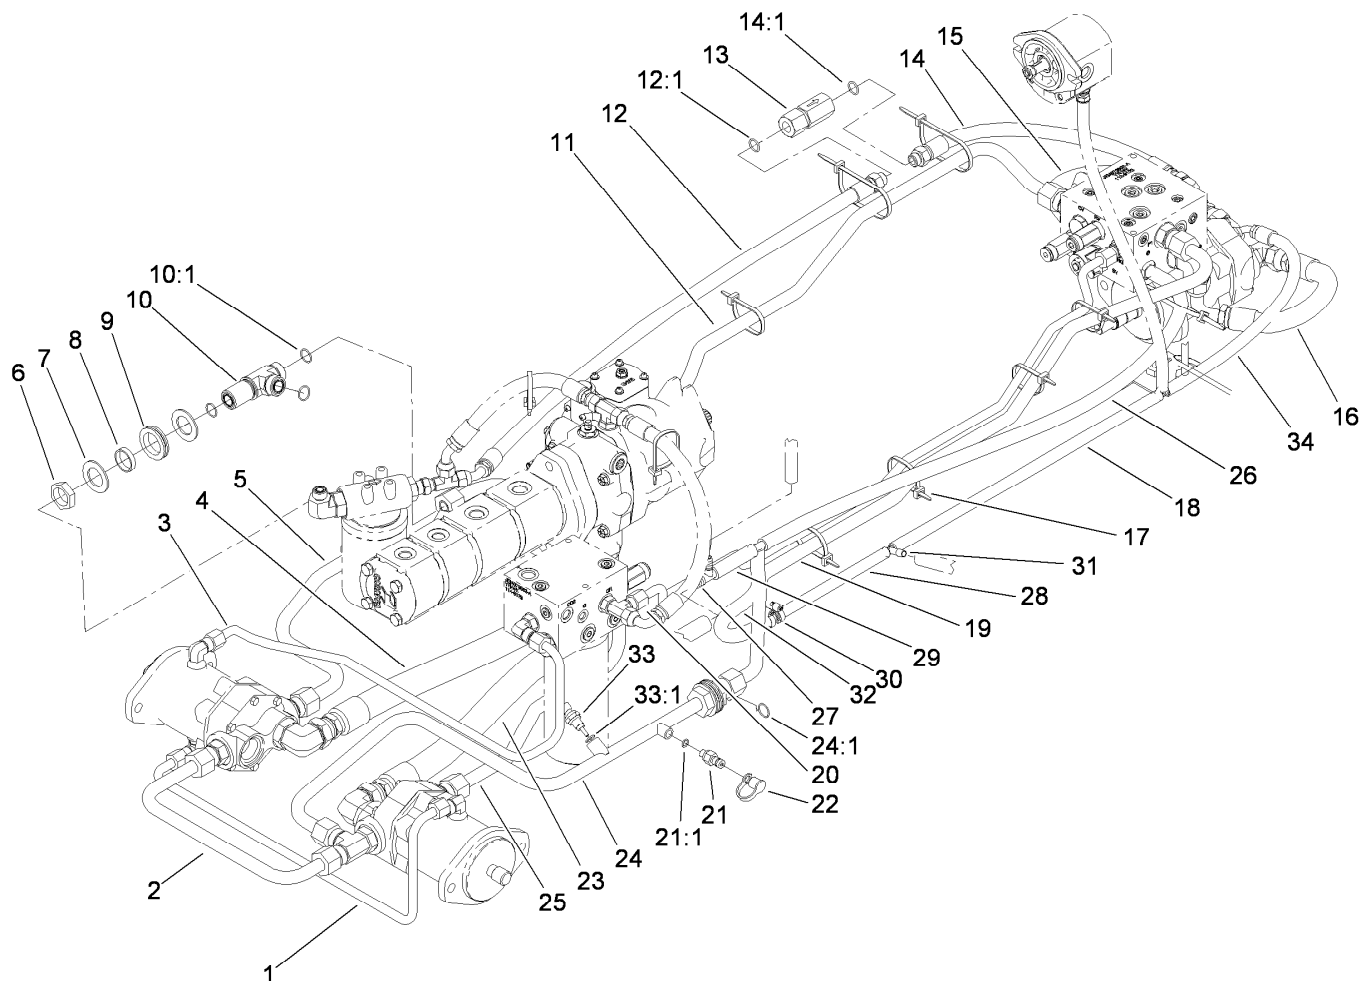

Traction Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	100-3095	1	Tube-HYD
2	100-5574	1	Tube-HYD, Motor Front
3	115-8451	1	Tube-HYD
4	115-8483	1	HYD Hose ASM
5	104-3581	1	Tube-HYD, RH Motor
6	340-126	2	Nut-Bulkhead
7	69-8910	4	Washer
8	69-8900	2	Spacer
9	240-7	2	Grommet-Rubber
10	104-3558	1	Fitting-Bulkhead
10:1	237-58	3	O-Ring
11	100-5571	1	Tube-HYD, RH Rear
12	104-2237	1	Hose ASM
12:1	237-79	1	O-Ring
13	100-5600	1	Valve-Check
14	100-5617	1	Hose ASM
14:1	237-79	1	O-Ring
15	104-3502	1	Hose ASM
16	100-5579	1	Hose ASM
17	3290-378	13	Tie-Cable


Ref.	Part Number	Qty.	Description
18	115-8466	1	Hose
19	115-3769	1	Tube-HYD, Traction LH
20	115-8453	1	Tube-HYD, Charge LH
21	354-77	2	Fitting-Quick
21:1	237-78	1	O-Ring
22	354-79	2	Cap-Dust
23	115-8484	1	HYD Hose ASM
24	115-8463	1	HYD Tube ASM
24:1	237-58	1	O-Ring
25	115-8450	1	Tube-HYD, Motor LH
26	110-6153	1	Hose
27	99-7371	2	Connector-Tee
28	100-5649	1	Hose
29	110-6190	1	Hose
30	2412-36	15	Clamp-Hose
31	354-107	3	Fitting-HYD, Tee
32	100-5607	1	Hose
33	110-8829	1	Sender-Temperature
33:1	237-42	1	O-Ring
34	115-8465	1	Hose ASM

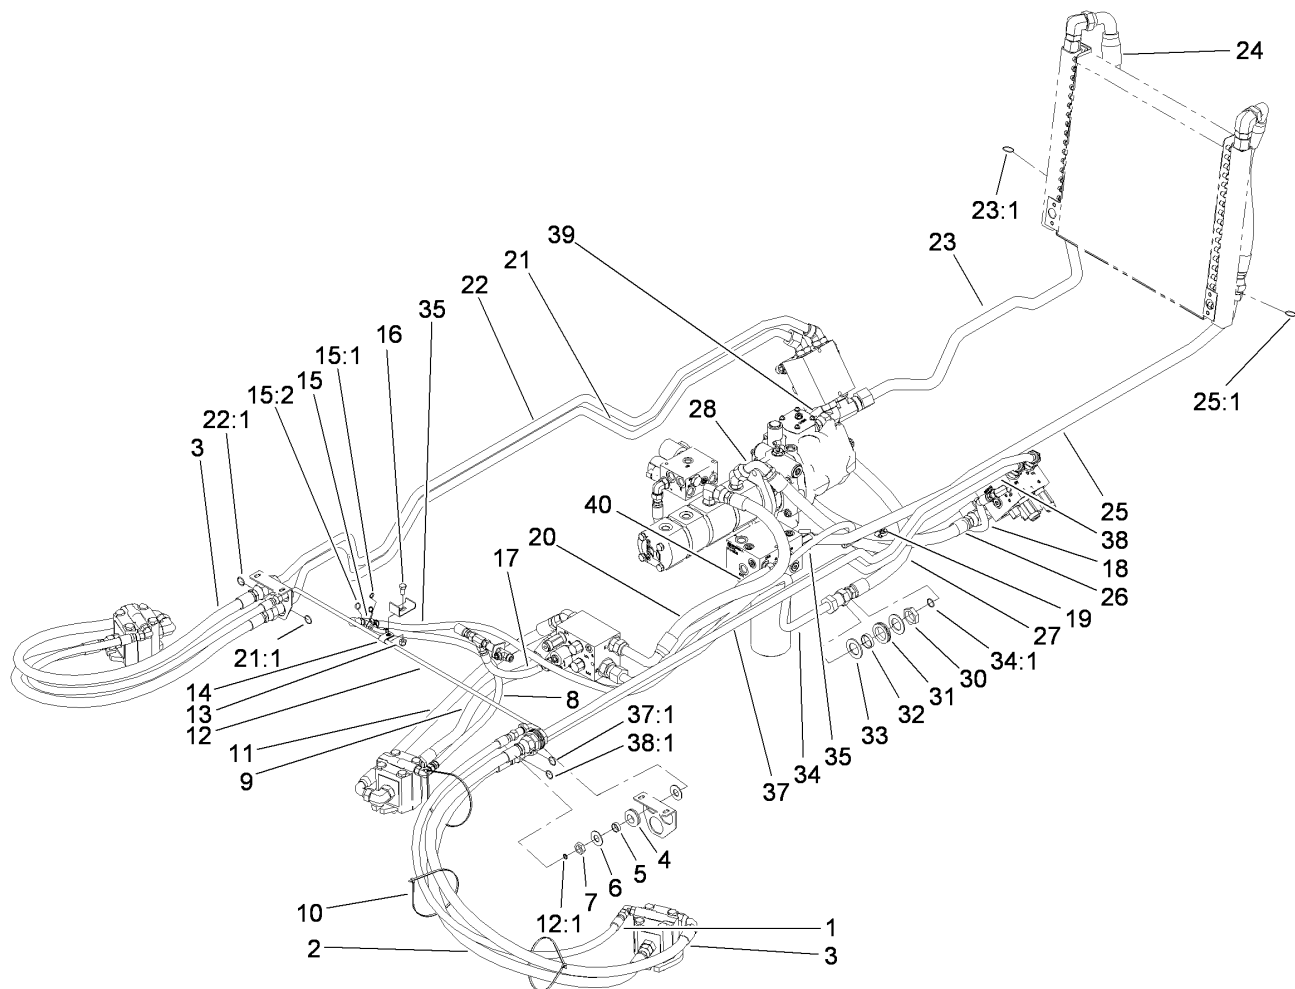 

Power-Take-Off Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	105-7462	2	Hose ASM
2	105-7460	2	Hose ASM
3	105-7461	2	Hose ASM
4	240-4	2	Grommet-Rubber
5	69-8970	2	Spacer
6	69-8940	4	Washer
7	340-70	2	Nut-Lock
8	112-9121	1	Hose ASM
9	105-7459	1	Hose ASM
10	3290-379	9	Tie-Cable
11	98-7404	1	Hose ASM
12	105-7374	1	Tube-HYD
12:1	237-22	2	O-Ring
13	3296-39	1	Nut-Lock, NI
14	2412-113	1	Clamp-R
15	340-86	1	Fitting-Tee
15:1	237-22	2	O-Ring
15:2	237-42	1	O-Ring
16	323-4	1	Screw-HH
17	104-2234	1	Hose-HYD
18	100-5641	1	Hose ASM
19	2412-36	2	Clamp-Hose
20	95-0961	1	Hose ASM
21	105-7366	1	Tube-HYD

Ref.	Part Number	Qty.	Description
21:1	237-58	1	O-Ring
22	105-7365	1	Tube-HYD
22:1	237-58	1	O-Ring
23	104-0796	1	Tube-HYD, RH Cooler
23:1	340-65	1	O-Ring
24	115-3771	2	Hose ASM
25	115-8452	1	HYD Tube ASM
25:1	340-65	1	O-Ring
26	100-5645	1	Hose ASM
27	115-3772	1	Hose ASM
28	114-3837	1	Hose ASM
30	340-126	5	Nut-Bulkhead
31	240-7	5	Grommet-Rubber
32	69-8900	5	Spacer
33	69-8910	10	Washer
34	104-0795	1	Tube-HYD, Front PTO
34:1	237-58	1	O-Ring
35	112-9122	1	Hose ASM
37	105-7363	1	Tube-HYD
37:1	237-58	1	O-Ring
38	105-7364	1	Tube-HYD
38:1	237-58	1	O-Ring
39	100-5570	1	Hose ASM
40	115-8476	1	Hose ASM

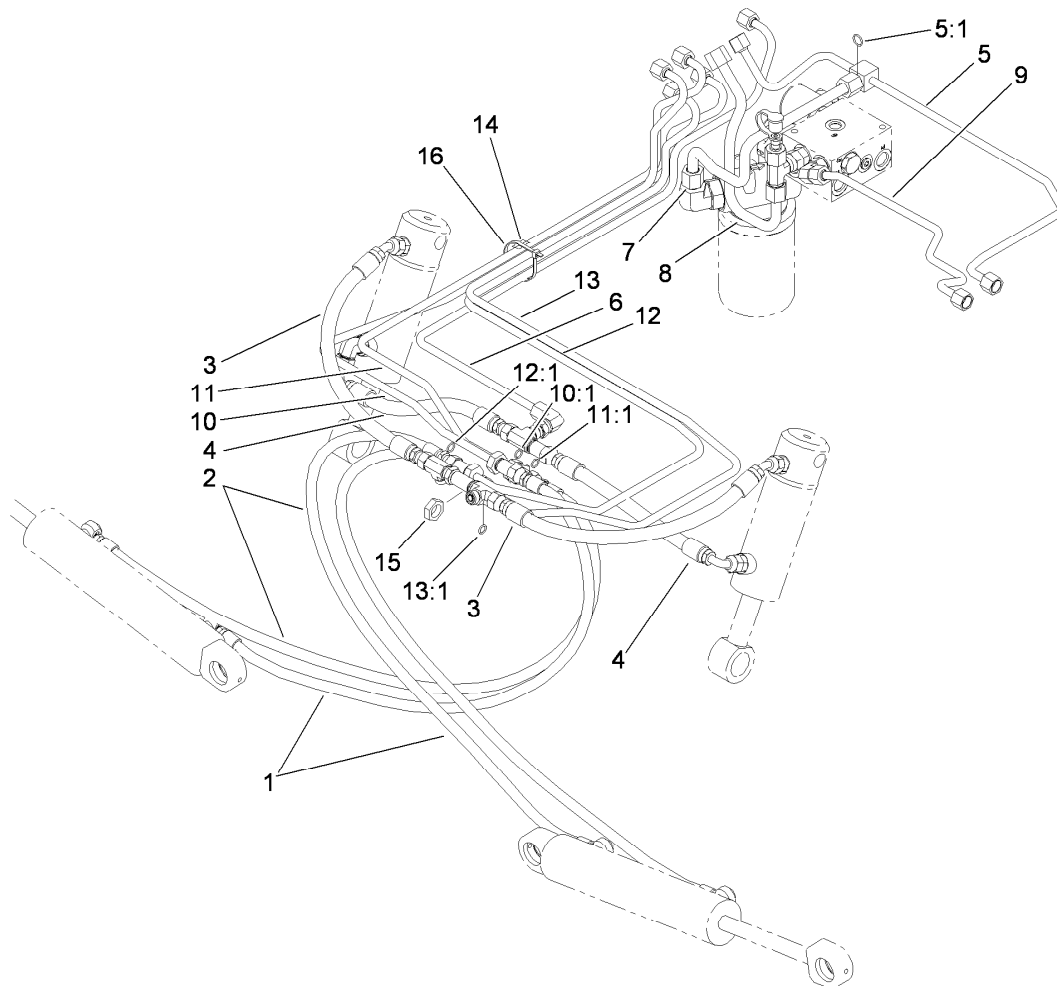 

Lift Arm Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	107-0222	2	Hose ASM
2	107-0221	2	Hose ASM
3	92-7595	2	Hose-HYD
4	104-2234	2	Hose-HYD
5	117-5681	1	HYD Tube ASM
5:1	237-30	1	O-Ring
6	117-5684	1	Hydraulic Tube ASM
7	117-5687	1	HYD Tube ASM
8	117-5680	1	HYD Tube ASM
9	117-5688	1	Hydraulic Tube ASM
10	119-0057	1	Hydraulic Tube ASM
10:1	237-22	1	O-Ring
11	119-0058	1	Hydraulic Tube ASM
11:1	237-22	1	O-Ring
12	119-0059	1	Hydraulic Tube ASM
12:1	237-22	1	O-Ring
13	119-0060	1	Hydraulic Tube ASM
13:1	237-22	1	O-Ring
14	92-2992	1	Foam-Strap
15	340-70	4	Nut-Lock
16	3290-379	4	Tie-Cable

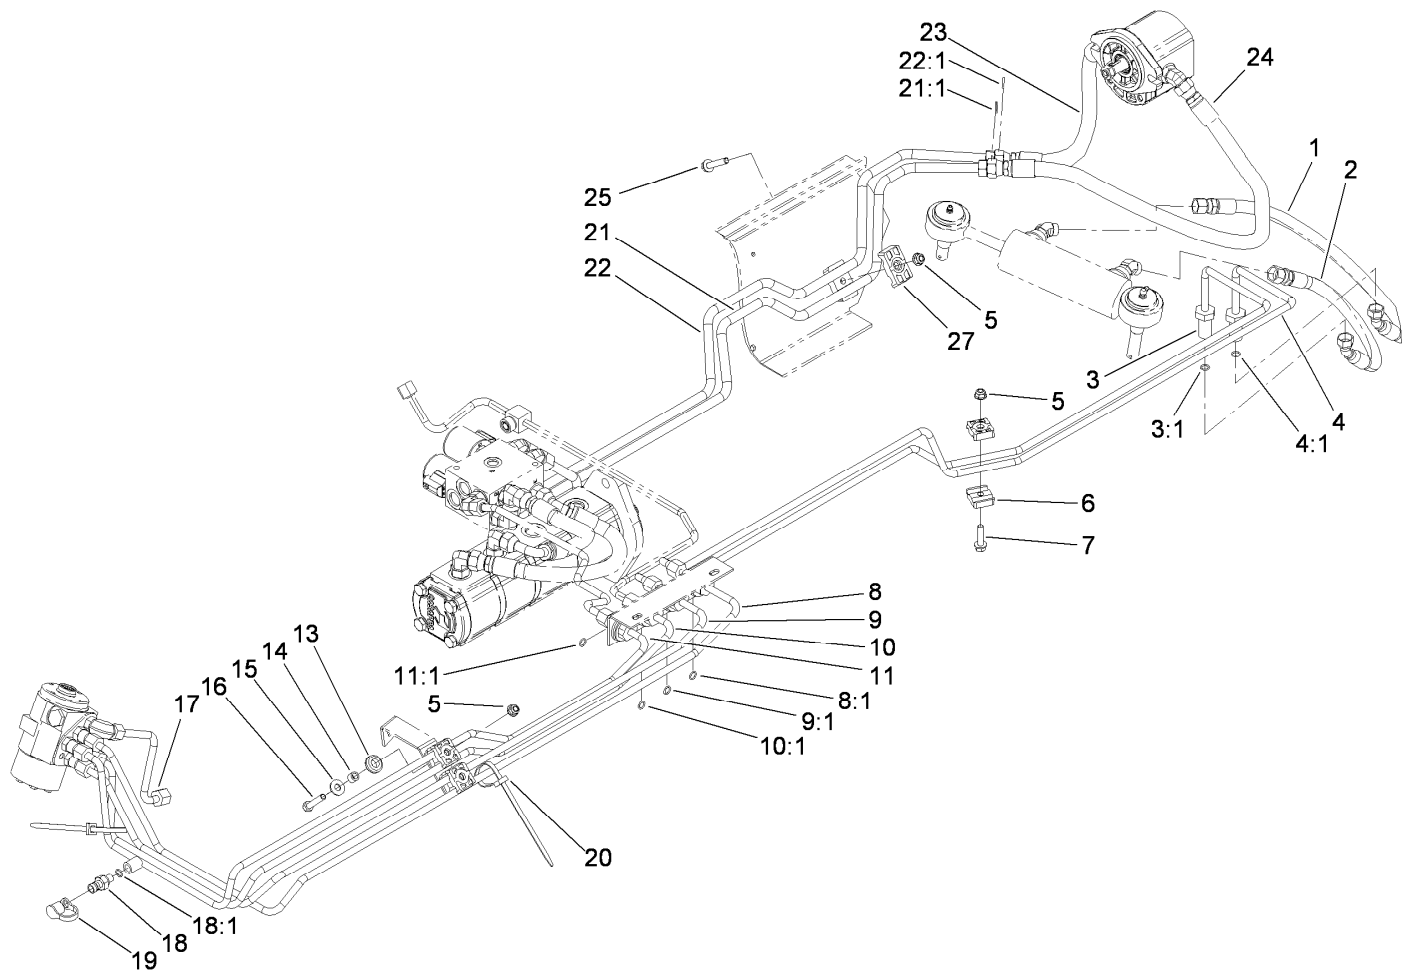 

Steering Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	92-7538	1	Hose ASM
2	92-7539	1	Hose-HYD
3	100-5576	1	Tube-HYD, Steering, Rear, RH
3:1	237-22	1	O-Ring
4	100-5575	1	Tube-HYD, Steering, Rear, LH
4:1	237-22	1	O-Ring
5	104-8300	4	Nut-HF, NI
6	56-7973	6	Clamp-Tube
7	3234-36	1	Screw-HHF
8	100-3091	1	Tube-HYD, Steering, Front, LH
8:1	237-22	1	O-Ring
9	100-3092	1	Tube-HYD, Steering, Front, RH
9:1	237-22	1	O-Ring
10	100-3093	1	Tube-HYD (Beyond Power Steering)
10:1	237-22	1	O-Ring


Ref.	Part Number	Qty.	Description
11	100-3090	1	Tube-HYD, Pressure Steering
11:1	237-22	1	O-Ring
13	93-5108	2	Grommet-Rubber
14	93-5109	2	Spacer
15	3256-71	2	Washer-Flat
16	322-8	2	Screw-HH
17	100-5588	1	Tube-HYD (Steer And Drain)
18	354-77	1	Fitting-Quick
18:1	237-78	1	O-Ring
19	354-79	1	Cap-Dust
20	3290-378	2	Tie-Cable
21	115-8481	1	HYD Tube ASM
21:1	237-30	1	O-Ring
22	115-8482	1	HYD Tube ASM
22:1	237-30	1	O-Ring
23	117-5692	1	HYD Hose ASM
24	106-9676	1	HYD Hose ASM
25	94-5780	1	Screw-HWH
27	56-7976	2	Clamp-Tube

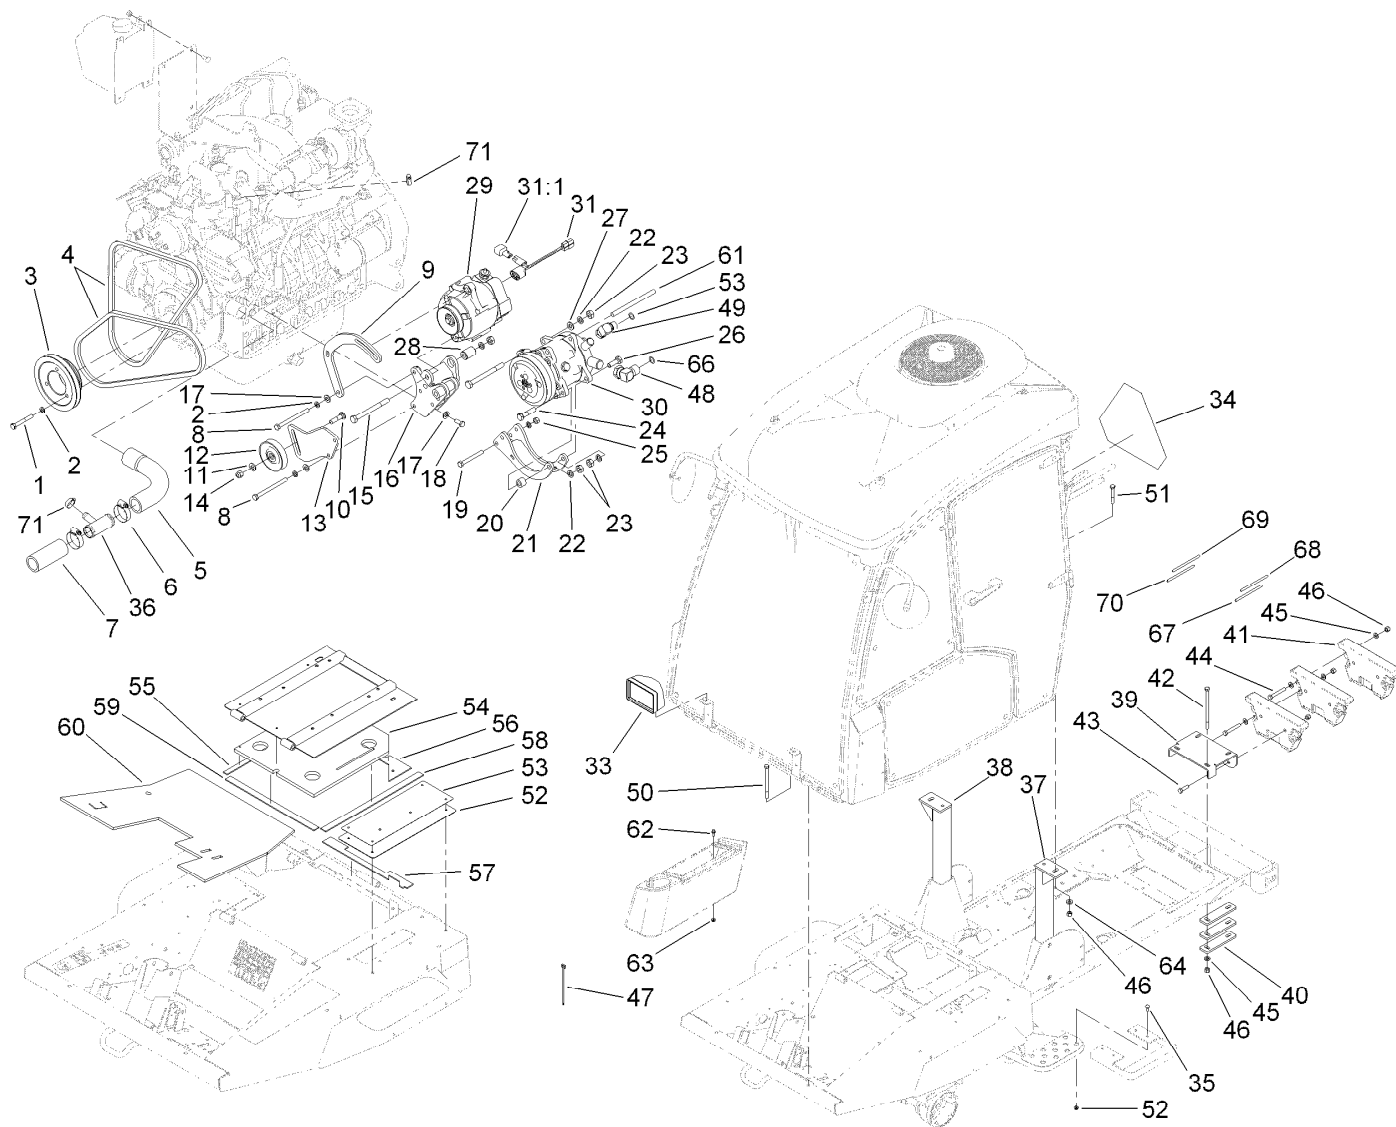 

Cab Installation, Alternator and Compressor Assembly


Ref.	Part Number	Qty.	Description
1	33114-060	3	Screw-HH
2	3253-4	8	Washer-Lock
3	115-8493	1	Pulley-Single
4	117-5674	2	V-Belt
5	119-0102	1	Hose-Radiator, Lower
6	2412-111	2	Clamp
7	119-0101	1	Hose-Radiator, Lower
8	33114-100	3	Screw-HH
9	117-5655-03	1	Plate-Arm, Alternator
10	3231-4	1	Screw-CARR
11	3256-24	1	Washer-Flat
12	62-4530	1	Pulley
13	117-5656-03	1	Plate-Idler, Bracket
14	112-0236	1	Nut-Lock
15	33115-110	3	Screw-HH
16	117-5650-03	1	Mount-A/C
17	33094-00	5	Washer-Plain
18	33114-020	2	Screw-HH
19	33114-070	2	Screw-HH

Ref.	Part Number	Qty.	Description
20	117-5673	1	Spacer
21	117-5669-03	1	Arm-Compressor
22	48-9590	5	Washer-Lock
23	33015-00	5	Nut-Hex
24	33115-045	1	Screw-HH
25	33014-00	2	Nut-Hex
26	33115-030	1	Screw-HH
27	33095-00	1	Washer-Flat
28	117-5652	2	Spacer
29	119-2155	1	90-Amp Alternator ASM
30	119-0103	1	Compressor
31	114-3334	1	Harness-Wire
31:1	104-4022	1	Resistor-75 Ohm
33	114-5928	2	Headlight ASM
34	120-0250	1	Decal-Warning
35	3231-2	4	Bolt-CARR
36	119-0142	1	Fitting-Radiator
37	119-0148-03	1	Mount-LH
38	119-0149-03	1	Mount-RH

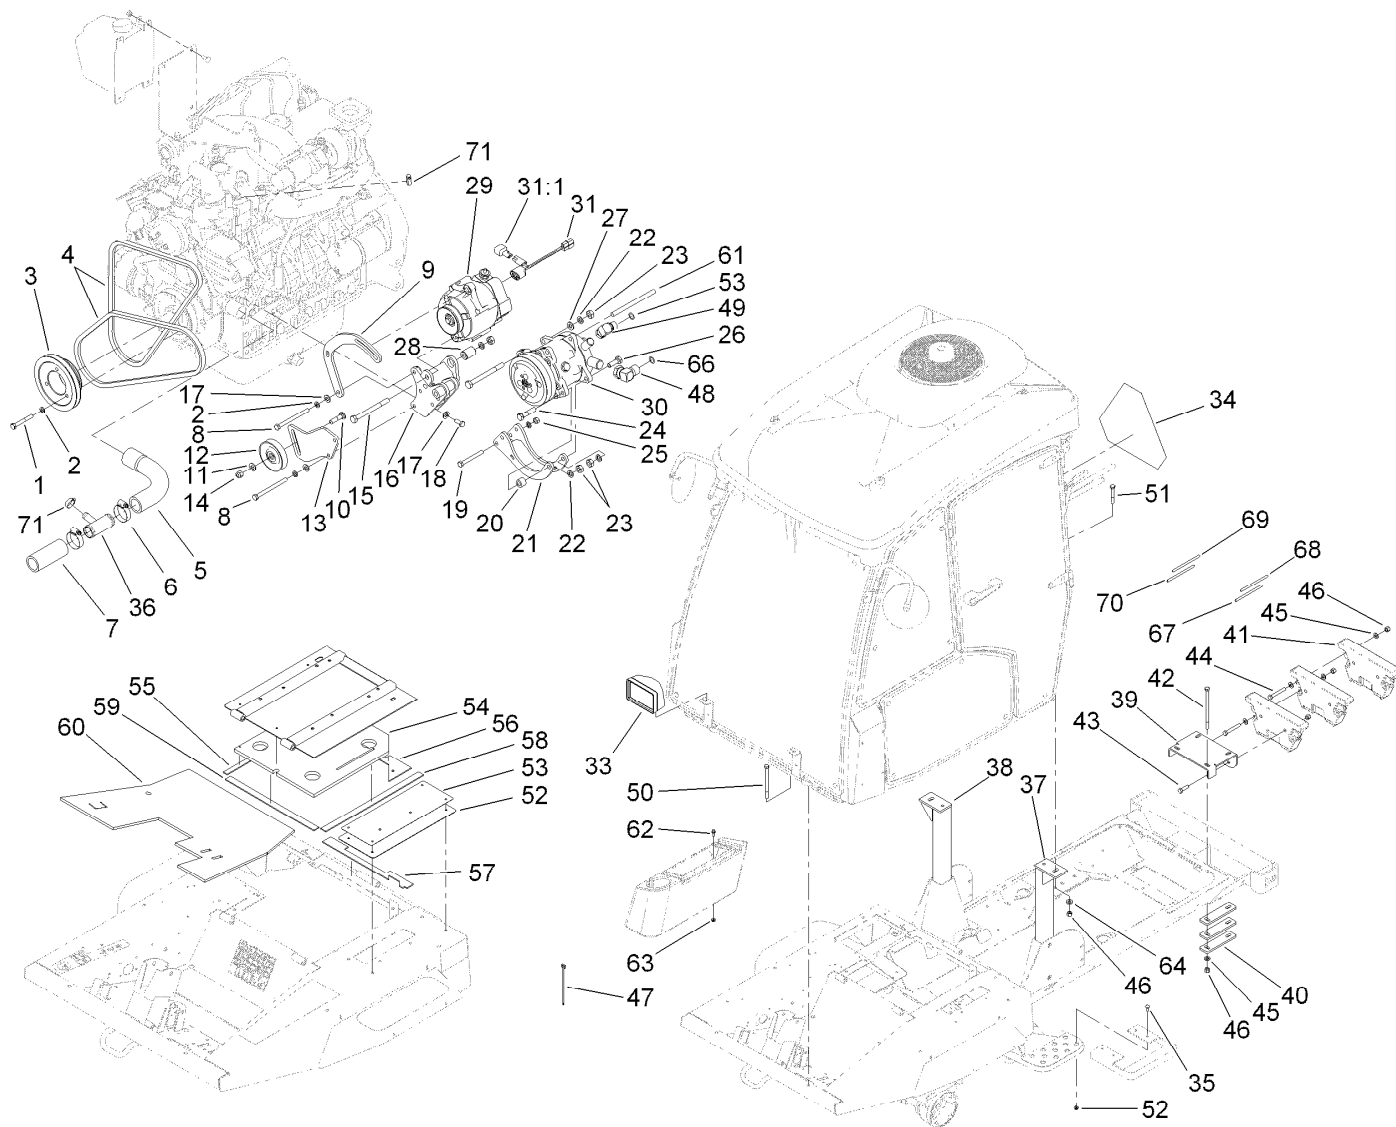 


Cab Installation, Alternator and Compressor Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
39	119-0130-03	1	Mount-Weight	55	119-5345	1	Seal-Foam
40	119-0131-03	6	Plate-Weight	56	119-5346	1	Seal-Foam
41	24-5790-03	3	Weight-Rear	57	119-5347	1	Seal-Foam
42	9114314	4	Screw-HH	58	119-5348	1	Seal-Foam
43	325-7	2	Screw-HH	59	119-5349	1	Seal-Foam
44	325-14	4	Screw-HH	60	119-0119	1	Foam-Floor
45	3256-26	18	Washer-Flat	61	115-8882	1	Conduit-Convolutd
46	3296-23	14	Nut-Lock, NI	62	3234-4	4	Screw-HHF
47	3290-378	14	Tie-Cable	63	32128-33	4	Nut-HF
48	119-0128	1	Fitting-Elbow, 90 DEG	64	107-3395	2	Washer-Hardened
49	119-0129	1	Fitting-Elbow, 90 DEG	66	117-2780	1	O-Ring
50	325-33	2	Screw-HH	67	119-5290	1	Tubing-Convolutd
51	112-7264	2	Screw-HH	68	119-5294	1	Tubing-Convolutd
52	104-8301	4	Nut-HF, NI	69	119-5291	1	Tubing-Convolutd
53	117-2779	1	O-Ring	70	119-5292	1	Tubing-Convolutd
54	119-0137	1	Foam-Seat	71	2412-141	2	Clamp-Drive, Worm

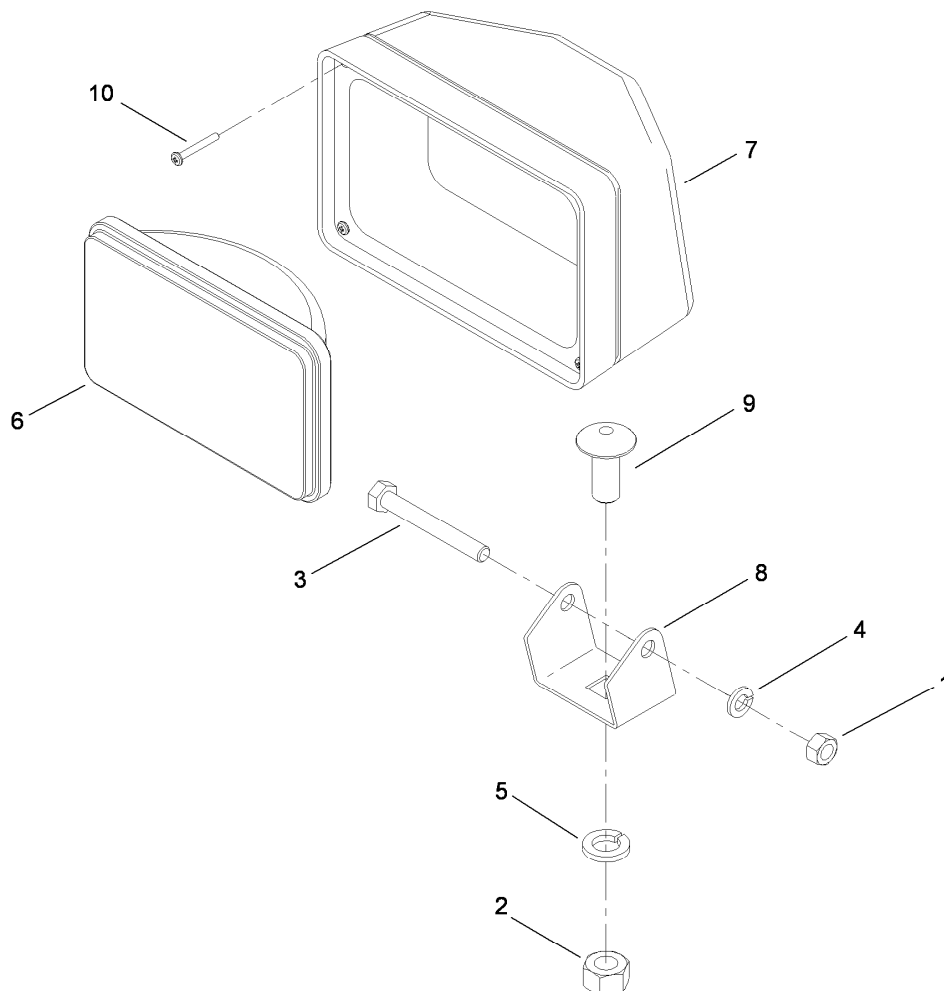 

Head Light Assembly No. 114-5928

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3217-6	1	Nut-Hex
2	3217-9	1	Nut-HH
3	322-12	1	Screw-HH
4	3253-4	1	Washer-Lock
5	3253-7	1	Washer-Lock
6	92-6595	1	Lamp-Beam, Sealed
7	92-6596	1	Bezel
8	92-6597	1	Bracket-Mounting
9	92-6598	1	Bolt-Carriage, Drilled
10	92-6599	4	Screw

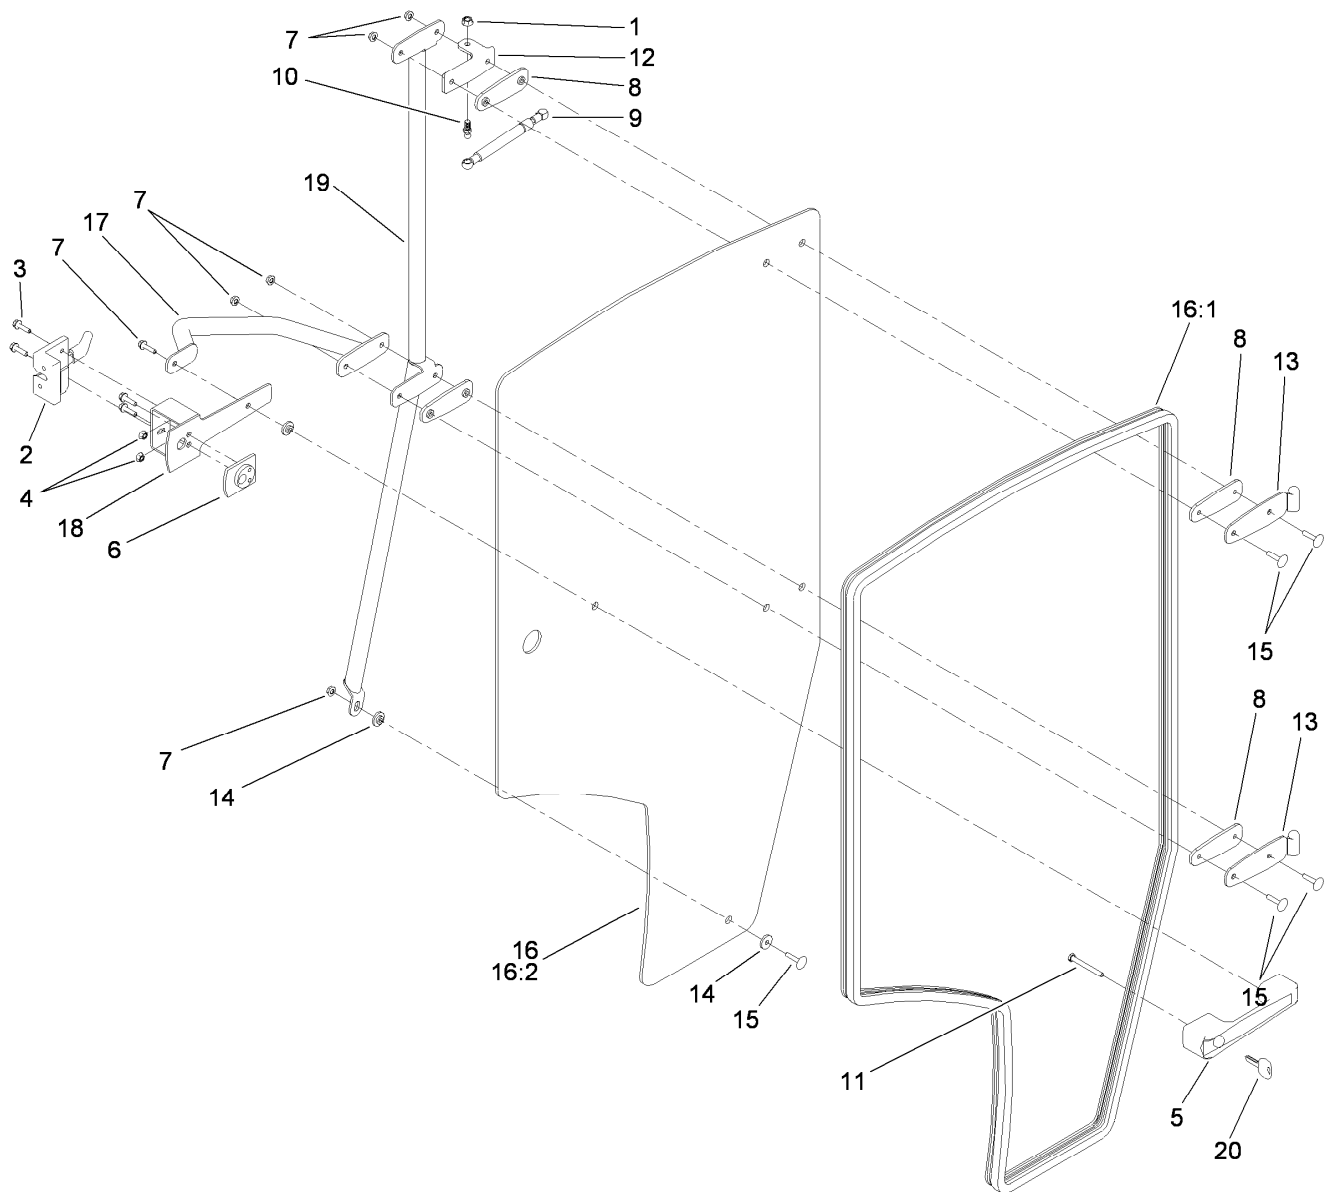 


Left Door Assembly

Ref.	Part Number	Qty.	Description
1	32128-26	1	Nut-Flange
2	115-5539	1	Latch-Rotary, LH
3	33103-025	5	Screw-HHF
4	33003-00	2	Nut-HF
5	119-8382	1	Handle-Push Button
6	119-8381	1	Gasket-Door Handle
7	115-5572	5	Nut-Flange
8	115-7950	4	Bushing-Boxer, Door Hinge
9	115-7997	1	Shock-Door, Gas
10	98-3104	1	Stud-Ball
11	321-15	1	Screw-HH

Ref.	Part Number	Qty.	Description
12	119-5267	1	Plate-Door Mount, RH
13	119-5272	2	Hinge-Door, LH
14	115-5570	3	Bushing-Thin
15	115-5571	5	Bolt-Step
16	119-8375	1	LH Door Window Glass Kit
16:1	119-8374	1	Seal-Bulb
16:2		1	Glass-Door, LH ●
17	119-8386	1	Grab Bar-Door
18	119-8387	1	Latch ASM-Door, Left
19	119-8388	1	Support-Door Hinge
20	115-5545	1	Key-Cab

 
● Not serviced separately

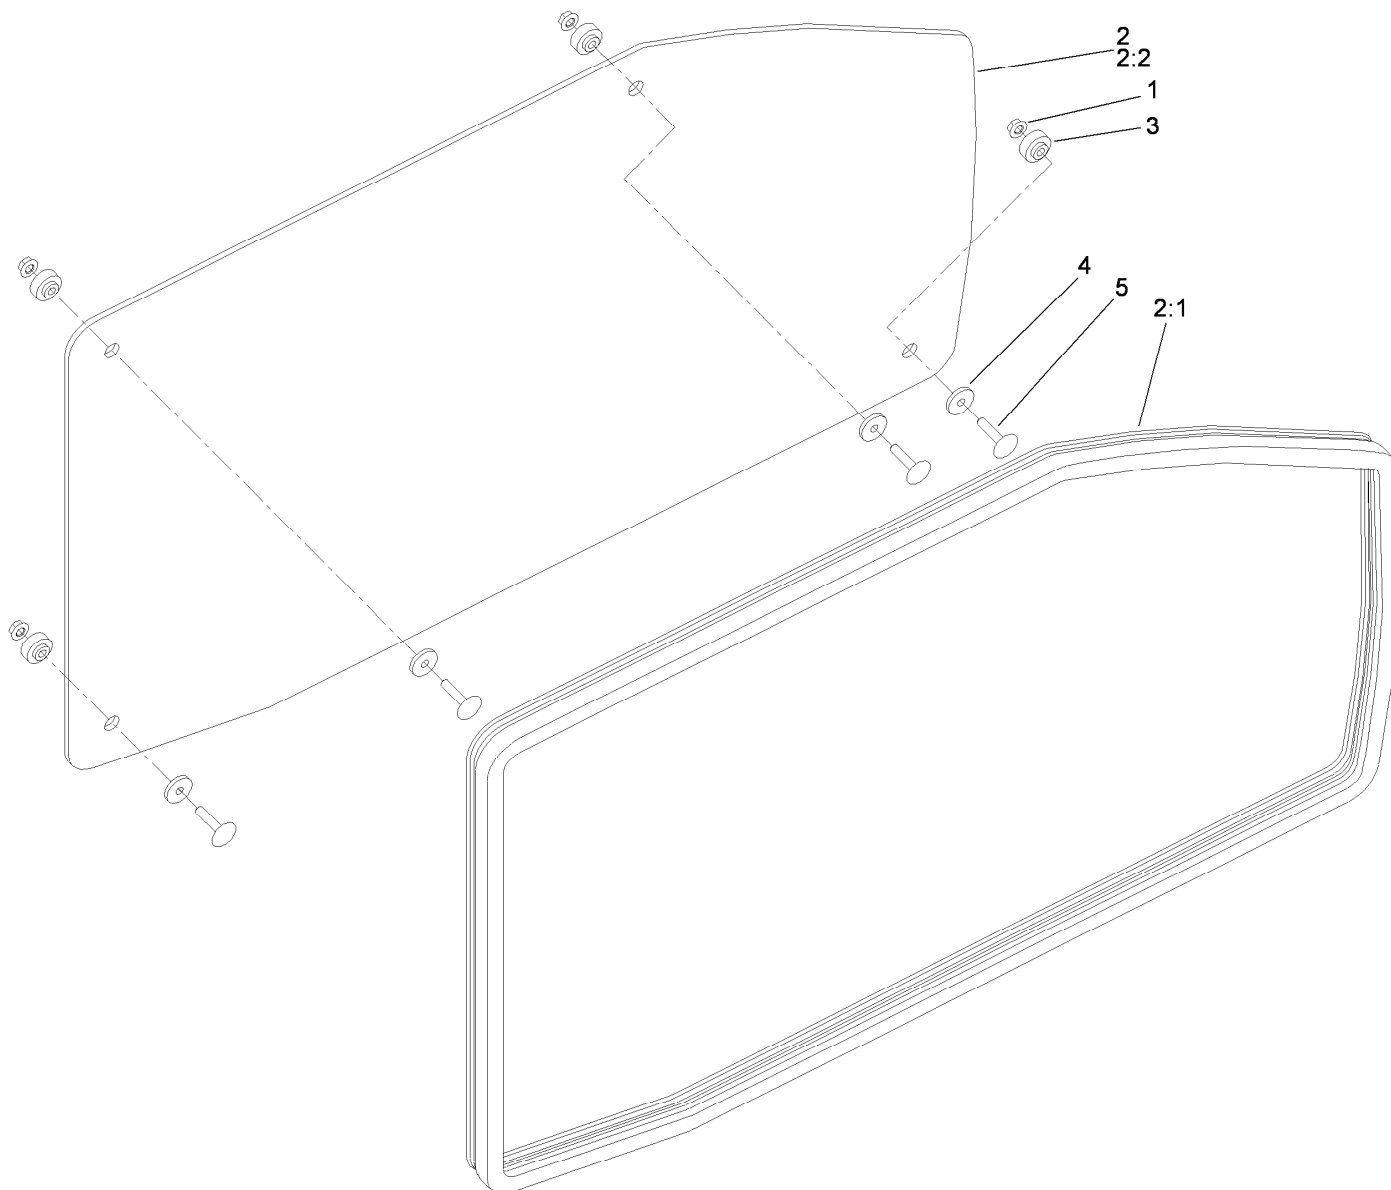

Left-Lower Window Assembly

Ref.	Part Number	Qty.	Description
1	115-5572	4	Nut-Flange
2	119-8380	1	Lower-LH Window Glass Kit
2:1	119-8379	1	Seal-Bulb
2:2		1	Glass-Lower LH ●
3	115-5574	4	Bushing-Thick
4	115-5570	4	Bushing-Thin
5	115-5571	4	Bolt-Step

 
● Not serviced separately

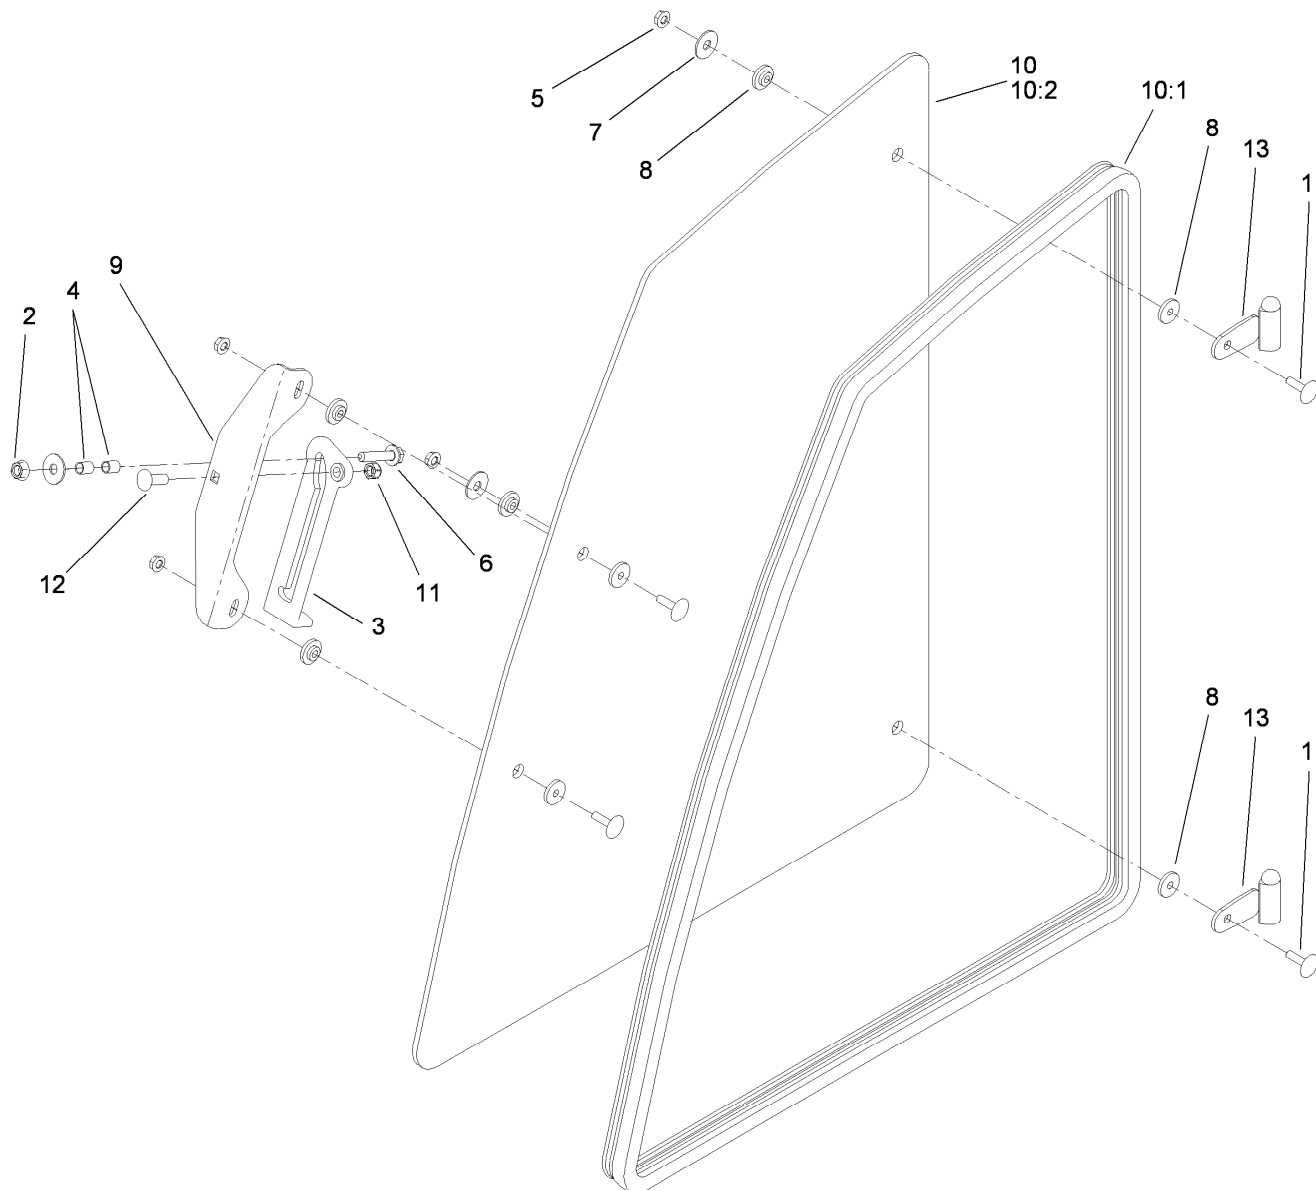

Left Window Assembly

Ref.	Part Number	Qty.	Description
1	115-7685	4	Bolt-Step
2	32128-26	1	Nut-Flange
3	115-7695	1	Slider-Window, RH
4	115-7693	2	Sleeve-Slide, Window
5	115-5572	4	Nut-Flange
6	115-1794	1	Screw-HHF
7	115-5581	3	Washer-Flat
8	115-5570	8	Bushing-Thin
9	119-8384	1	Mount-Latch, Side
10	119-8378	1	LH Window Glass Kit
10:1	119-8377	1	Seal-Bulb
10:2		1	Glass-Window, Left ●
11	3296-29	1	Nut-Lock, NI
12	3230-2	1	Bolt-CARR
13	119-8385	2	Top Hinge ASM

 
● Not serviced separately

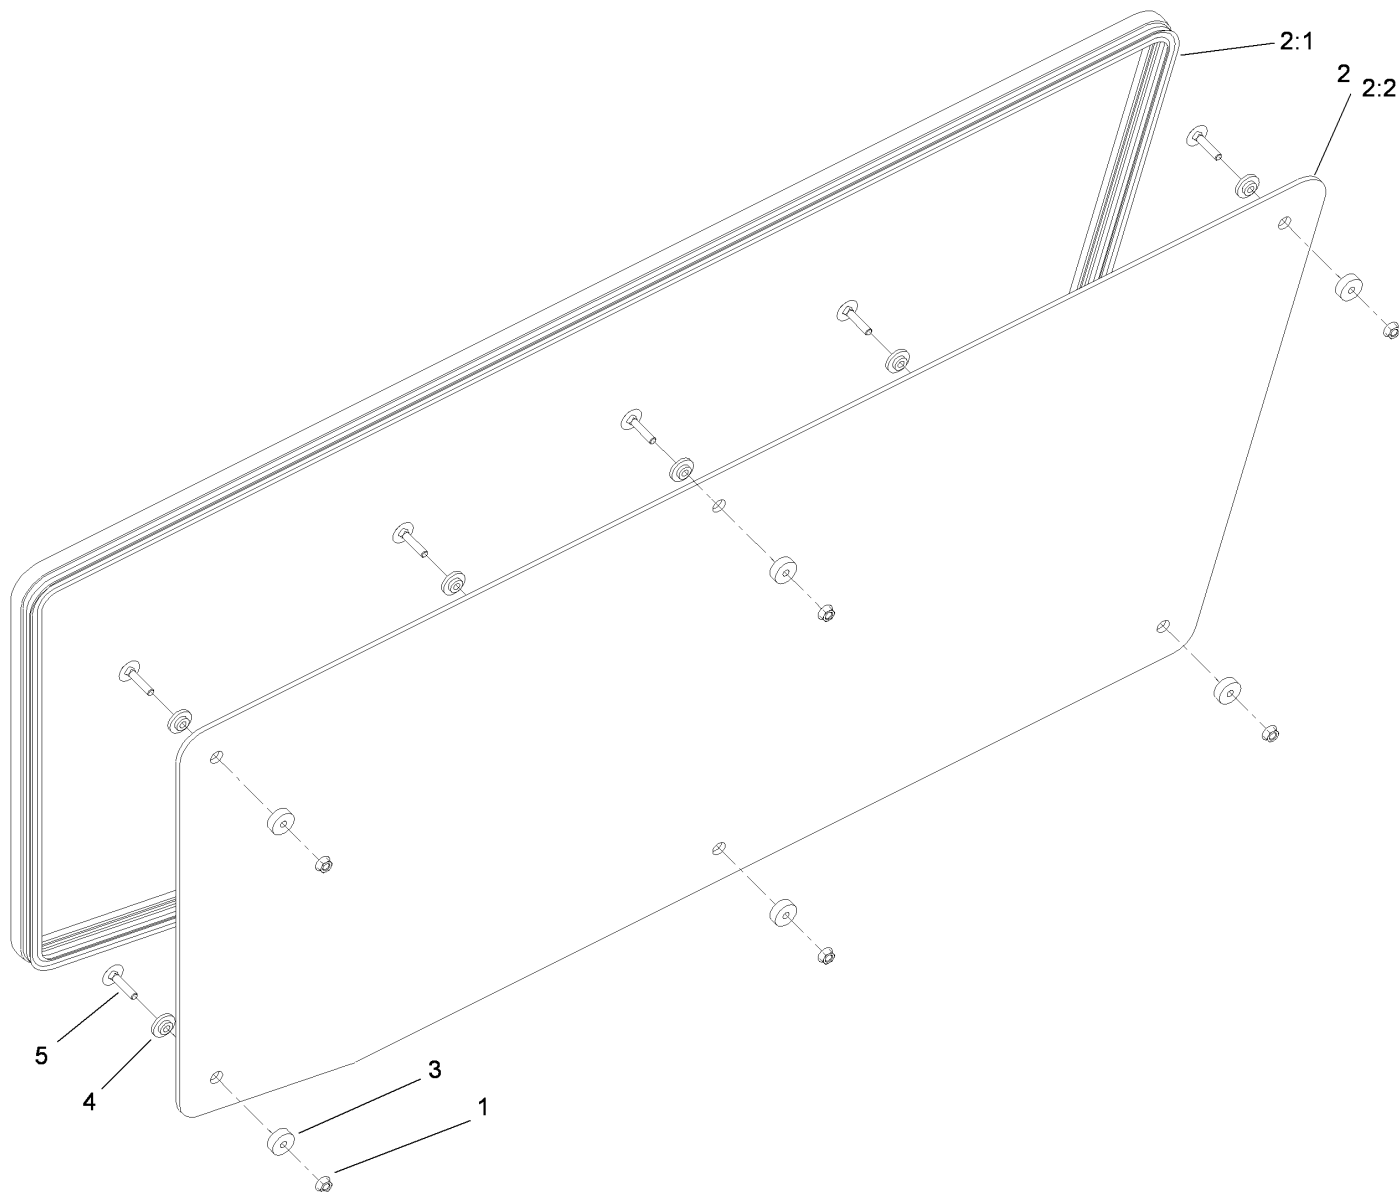

Right-Lower Window Assembly

Ref.	Part Number	Qty.	Description
1	115-5572	6	Nut-Flange
2	119-8391	1	Lower-RH Window Glass Kit
2:1	119-8390	1	Seal-Bulb
2:2		1	Glass-Lower RH ●
3	115-5574	6	Bushing-Thick
4	115-5570	6	Bushing-Thin
5	115-5571	6	Bolt-Step

 
● Not serviced separately

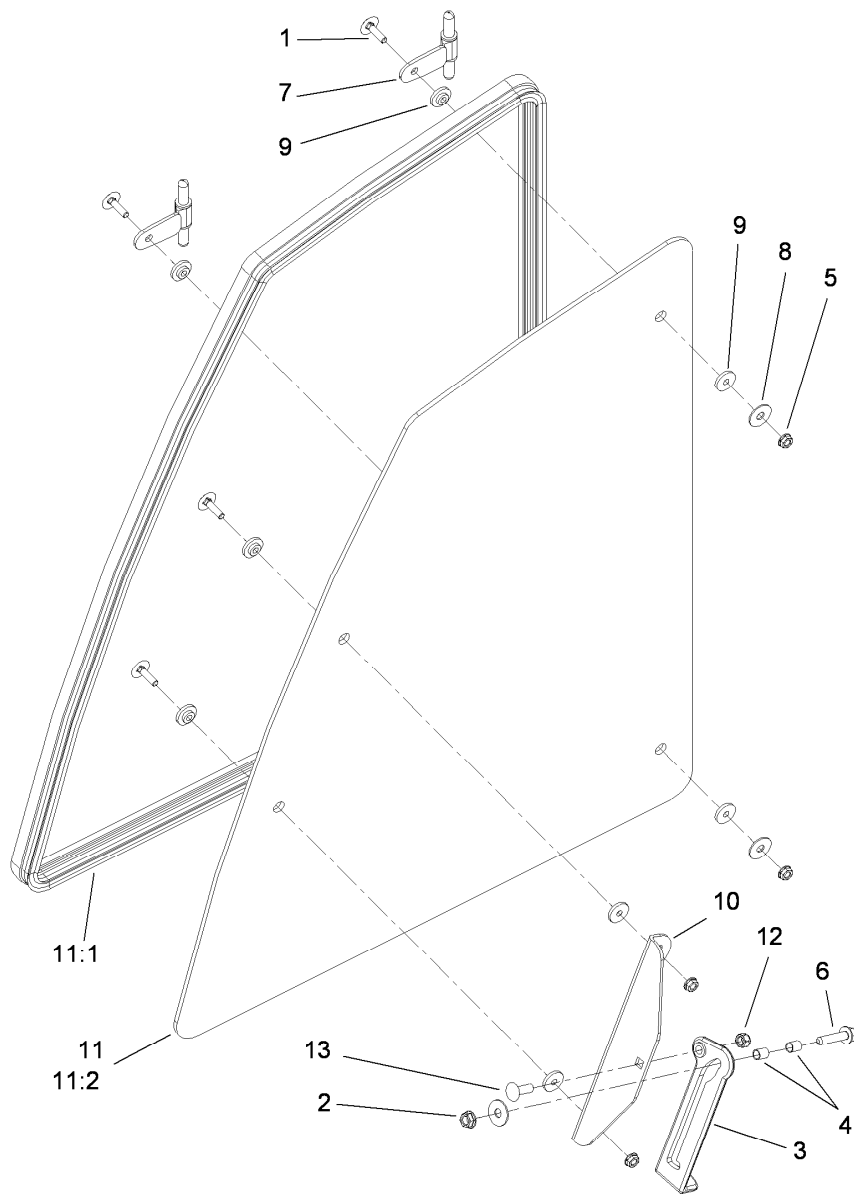

Right Window Assembly

Ref.	Part Number	Qty.	Description
1	115-7685	4	Bolt-Step
2	32128-26	1	Nut-Flange
3	115-7694	1	Slider-Window, LH
4	115-7693	2	Sleeve-Slide, Window
5	115-5572	4	Nut-Flange
6	115-1794	1	Screw-HHF
7	119-5383	2	Washer
8	115-5581	3	Washer-Flat
9	115-5570	8	Bushing-Thin
10	119-8384	1	Mount-Latch, Side
11	119-8376	1	RH Window Glass Kit
11:1	119-8377	1	Seal-Bulb
11:2		1	Glass-Window, Right ●
12	3296-29	1	Nut-Lock, NI
13	3230-2	1	Bolt-CARR

 
● Not serviced separately

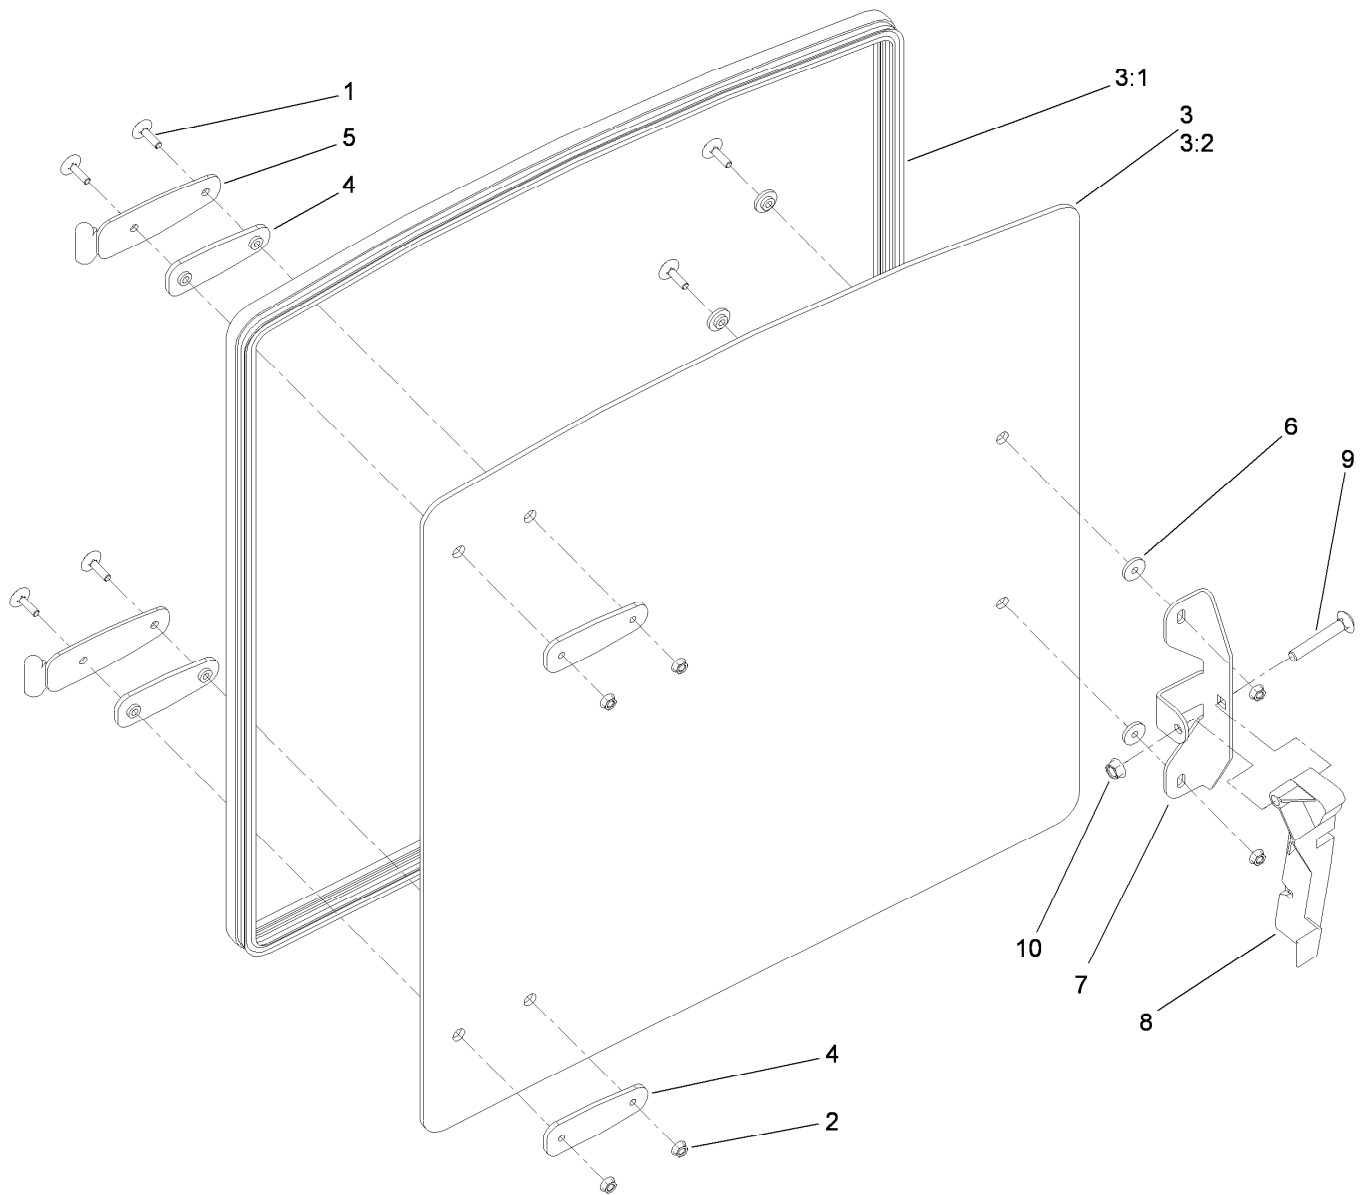

Right-Escape Window Assembly

Ref.	Part Number	Qty.	Description
1	115-7685	6	Bolt-Step
2	115-5572	6	Nut-Flange
3	119-8395	1	RH-Escape Window Glass Kit
3:1	119-8394	1	Bulb-Seal
3:2		1	Glass-Window, Escape RH ●
4	115-7950	4	Bushing-Boxer, Door Hinge
5	119-5272	2	Hinge-Door, LH
6	115-5570	4	Bushing-Thin
7	119-8393	1	Mount-Arm, Escape Window
8	119-8392	1	Latch-Window, Escape
9	3231-44	1	Screw-CARR
10	104-8301	1	Nut-HF, NI

 
● Not serviced separately

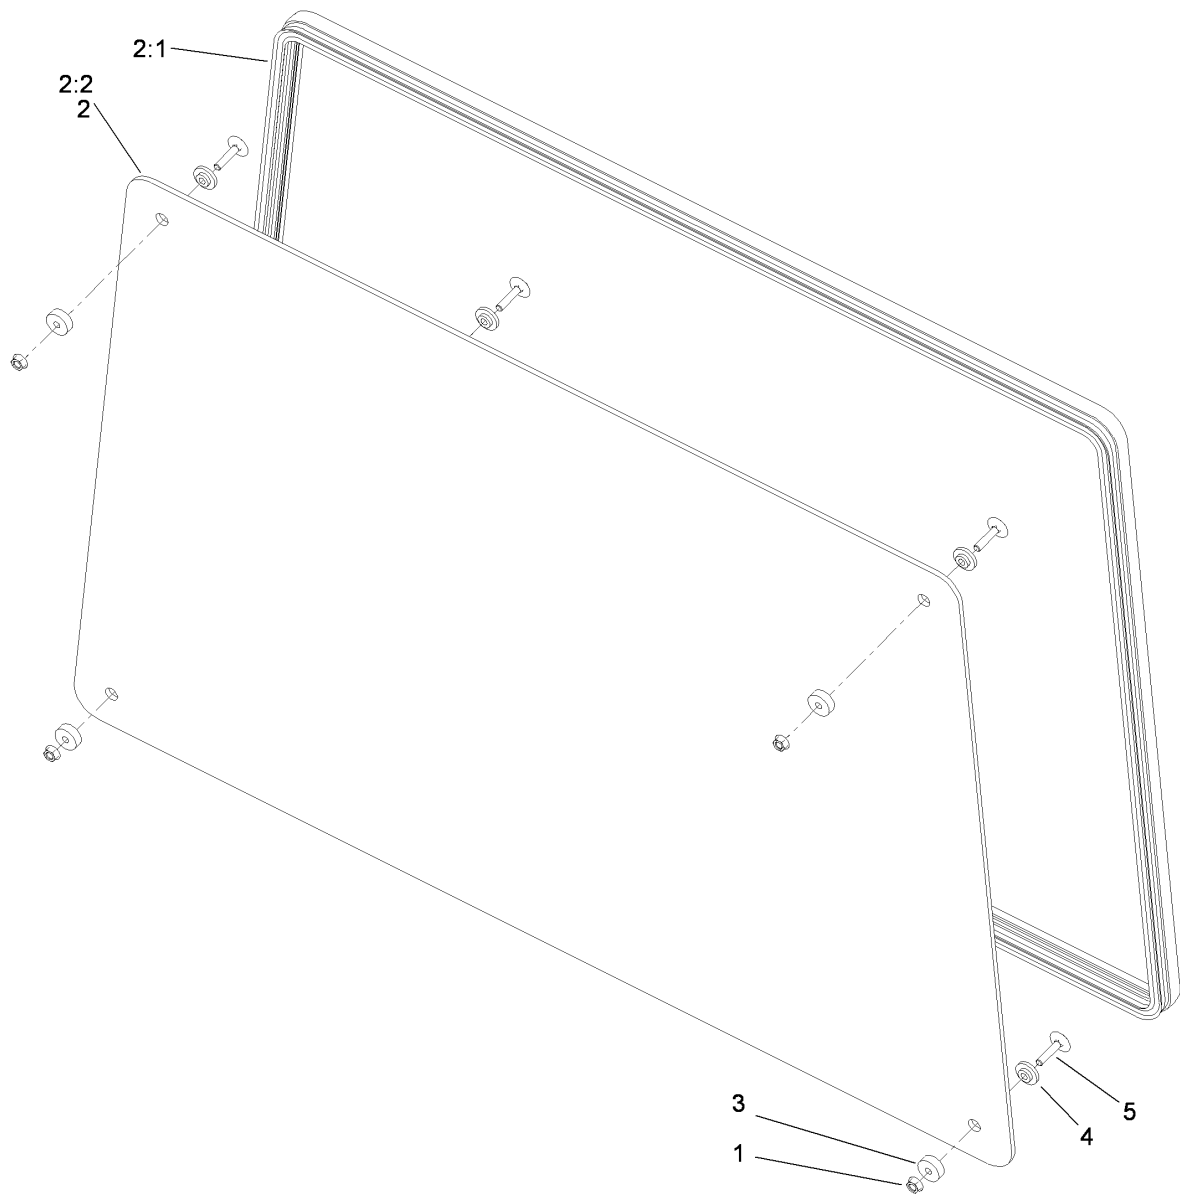

Rear Window Assembly

Ref.	Part Number	Qty.	Description
1	115-5572	4	Nut-Flange
2	119-8397	1	Rear Window Glass Kit
2:1	119-8396	1	Seal-Bulb
2:2		1	Glass-Rear ●
3	115-5574	4	Bushing-Thick
4	115-5570	4	Bushing-Thin
5	115-5571	4	Bolt-Step

 
● Not serviced separately

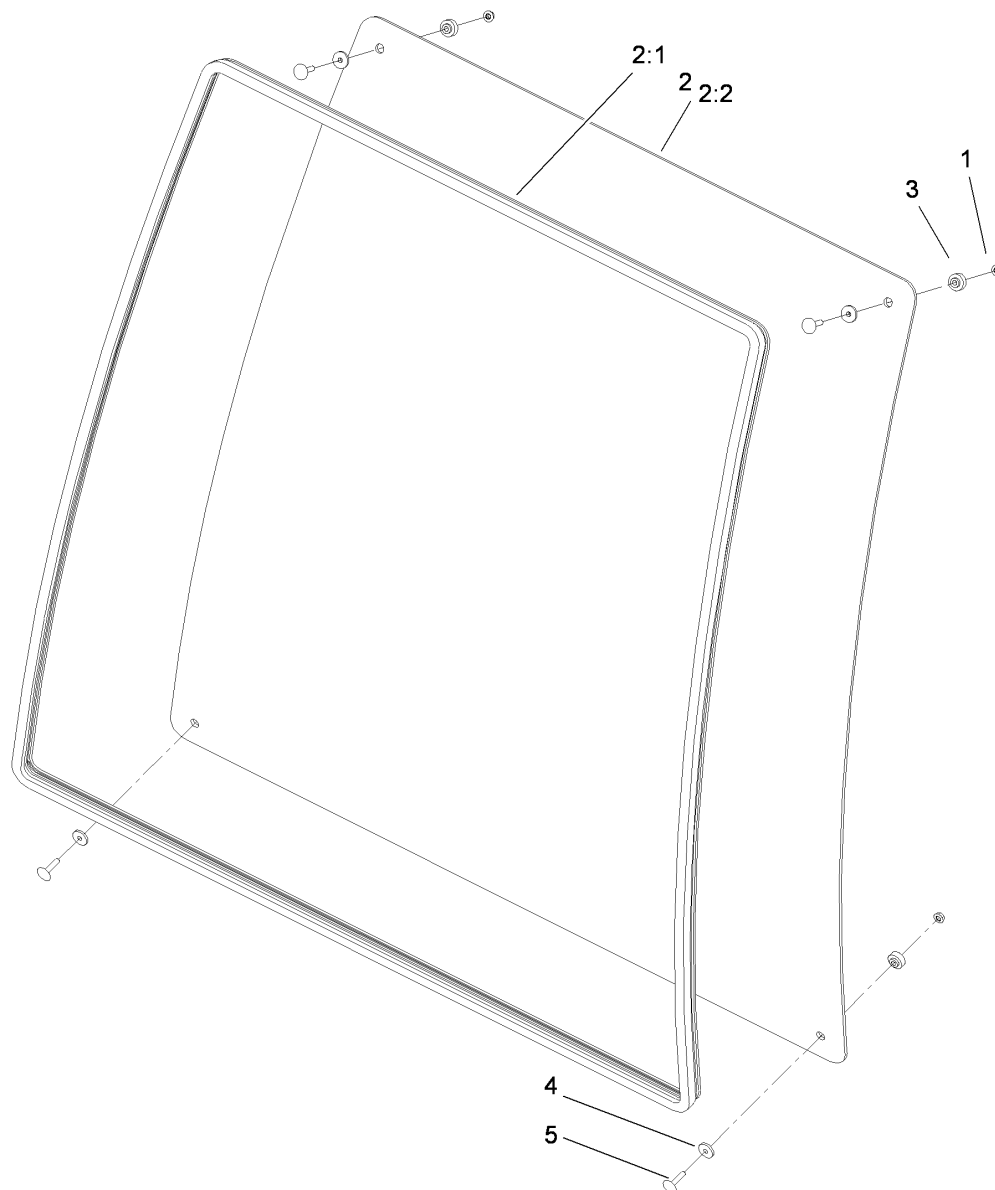

Front Window Assembly

Ref.	Part Number	Qty.	Description
1	115-5572	4	Nut-Flange
2	119-8399	1	Front Window Glass Kit
2:1	119-8398	1	Seal-Bulb
2:2		1	Glass-Front ●
3	115-5574	4	Bushing-Thick
4	115-5570	4	Bushing-Thin
5	115-5571	4	Bolt-Step

 ● Not serviced separately

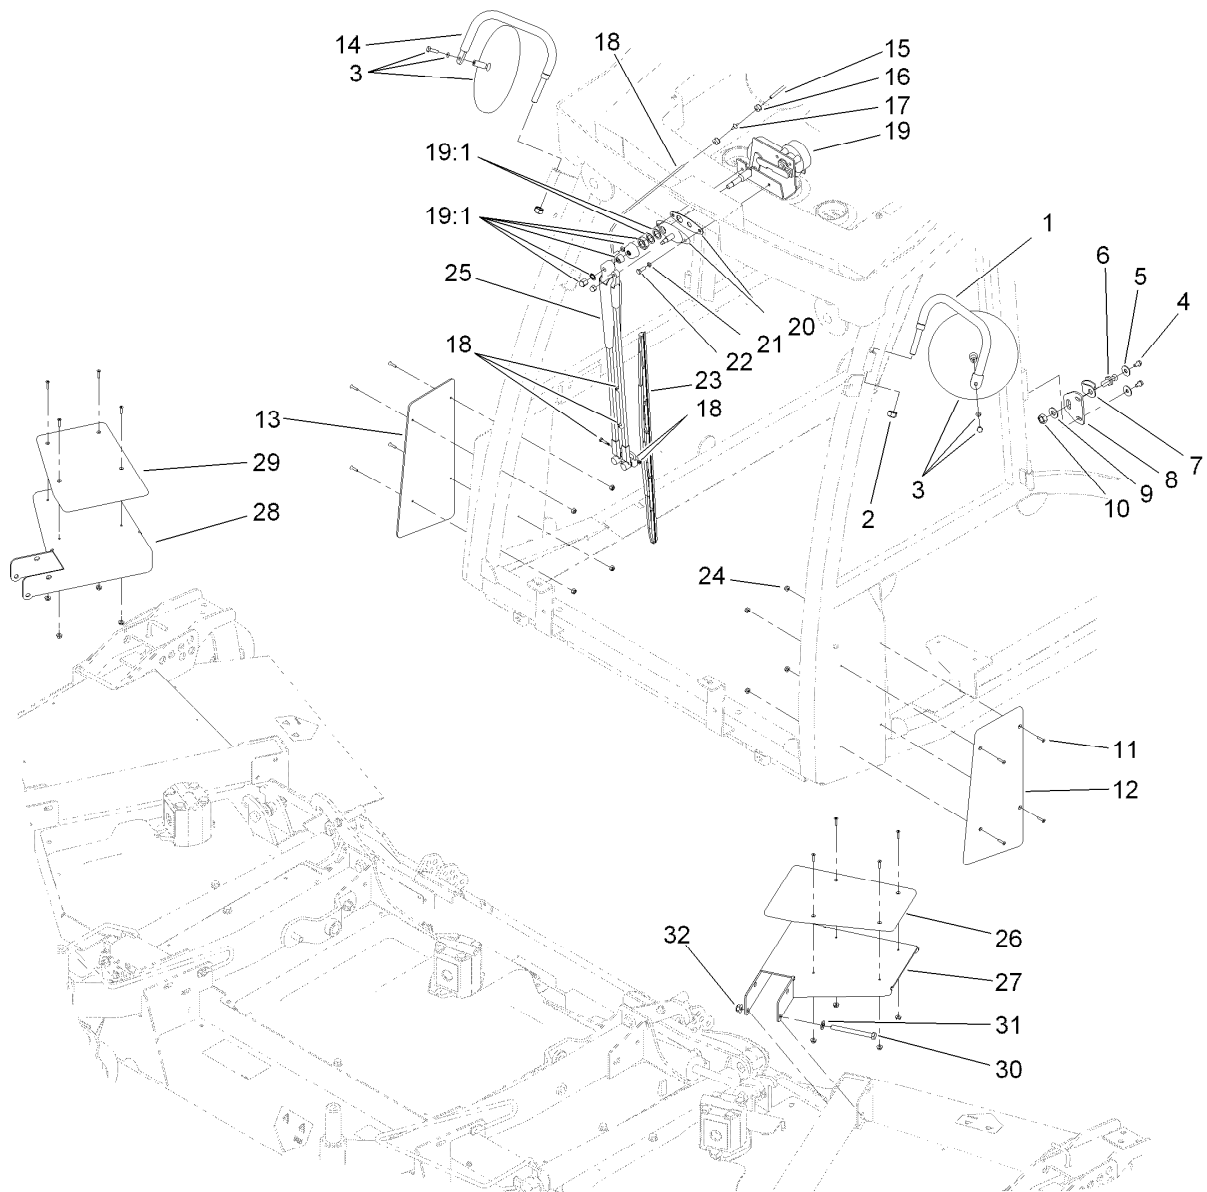


Deck Stop, Door Striker, Mirror and Wiper Assembly

Ref.	Part Number	Qty.	Description
1	115-5584	1	Arm-Mount, Mirror (LH)
2	115-5582	2	Nut-Flange, Crimplock
3	115-5585	2	Mirror-Convex
4	3234-13	2	Screw-HHF
5	115-5581	2	Washer-Flat
6	115-5576	1	Striker
7	115-5577	1	Guard-Striker
8	117-2777	1	Plate-Striker
9	3256-26	3	Washer-Flat
10	115-5579	1	Nut-HH
11	119-8389	16	Screw-FH
12	119-8349	1	Pad-Left
13	119-8348	1	Pad-Right
14	115-5583	1	Arm-Mount, Mirror (RH)
15	119-8366	1	Line-Washer
16	119-8367	2	Grommet
17	119-8368	1	Connector-Barb


Ref.	Part Number	Qty.	Description
18	119-8369	1	Washer Nozzle Kit
19	115-8831	1	Motor-Wiper
19:1	119-7735	1	Wiper Seal Kit ●
20	115-8832	1	Adaptor ASM (W/Gasket)
21	3253-3	2	Washer-Lock
22	329-4	2	Screw-HH
23	119-8365	1	Blade-Wiper
24	32128-17	16	Nut-Lock, Flange
25	119-8364	1	Arm-Wiper
26	119-8373	1	Glide-Deck Stop, LH
27	119-8372	1	Stop-Deck, LH
28	119-8370	1	Stop-Deck, RH
29	119-8371	1	Glide-Deck Stop, RH
30	323-15	4	Screw-HH
31	3256-24	4	Washer-Flat
32	104-8301	4	Nut-HF, NI

 ● Not illustrated

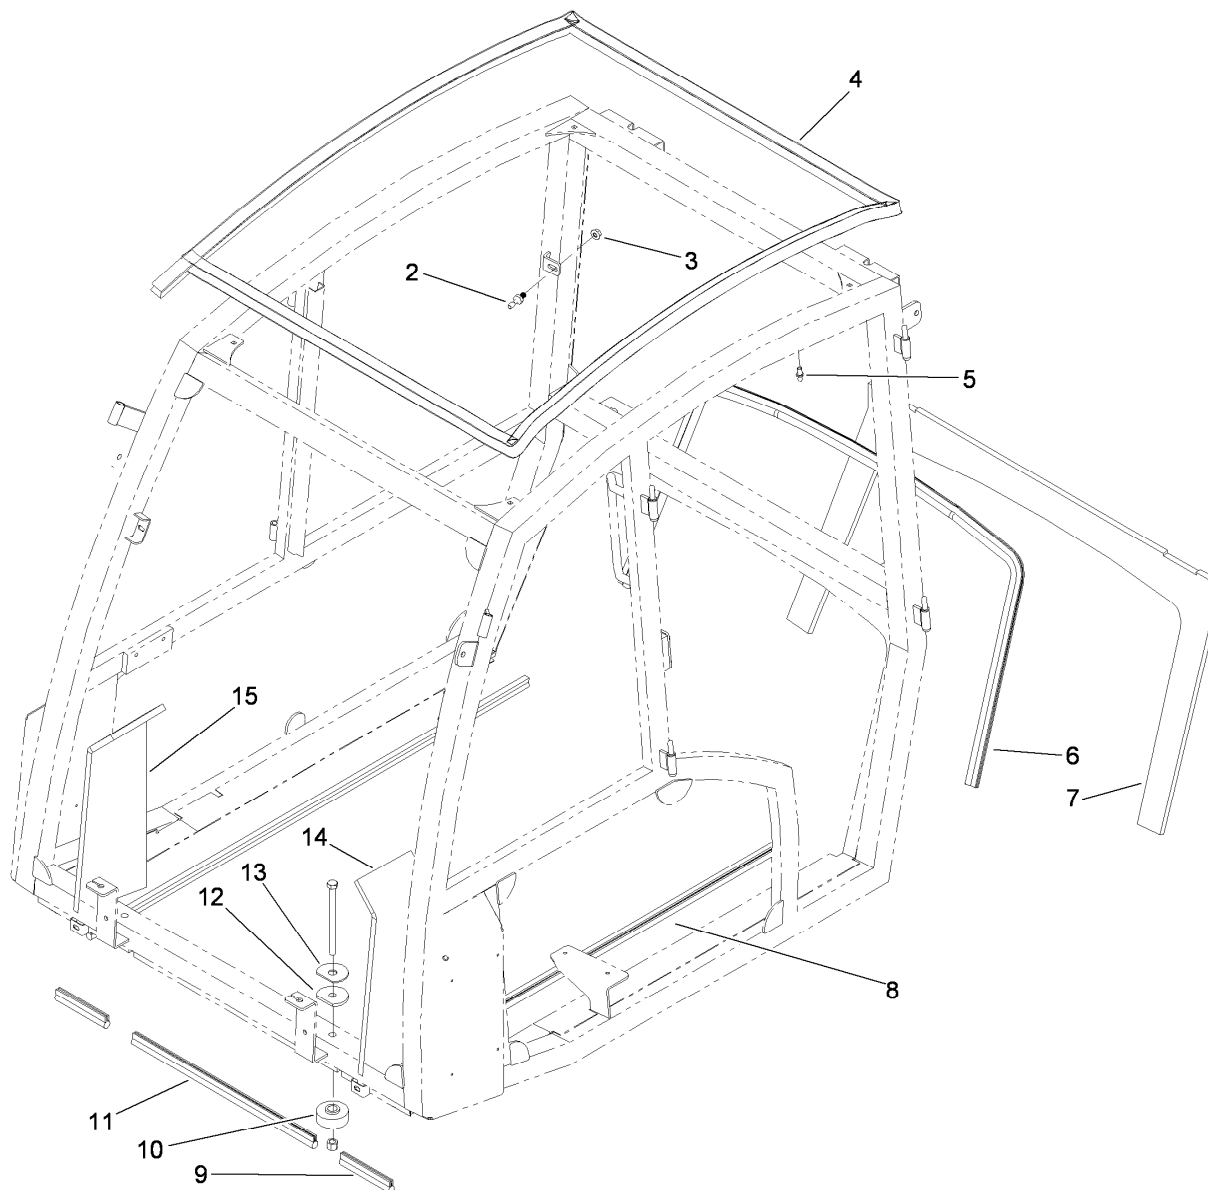

Shielding Assembly


Ref.	Part Number	Qty.	Description
2	119-8363	1	Pin-Latch
3	103-9511	1	Nut-Lock, NI
4	119-8362	1	Seal
5	98-3104	1	Stud-Ball
6	119-8361	1	Seal-Bulb
7	119-8360	1	Upholstery-Rear
8	119-8600	2	Seal-Bulb, 31 Inch
9	119-5280	2	Seal-Bulb
10	119-8615	4	Isolator-Rubber
11	119-5281	1	Seal-Bulb
12	117-5006	4	Washer-Rubber
13	117-5007	4	Washer
14	119-8359	1	Upholstery-Left
15	119-8358	1	Upholstery-Right

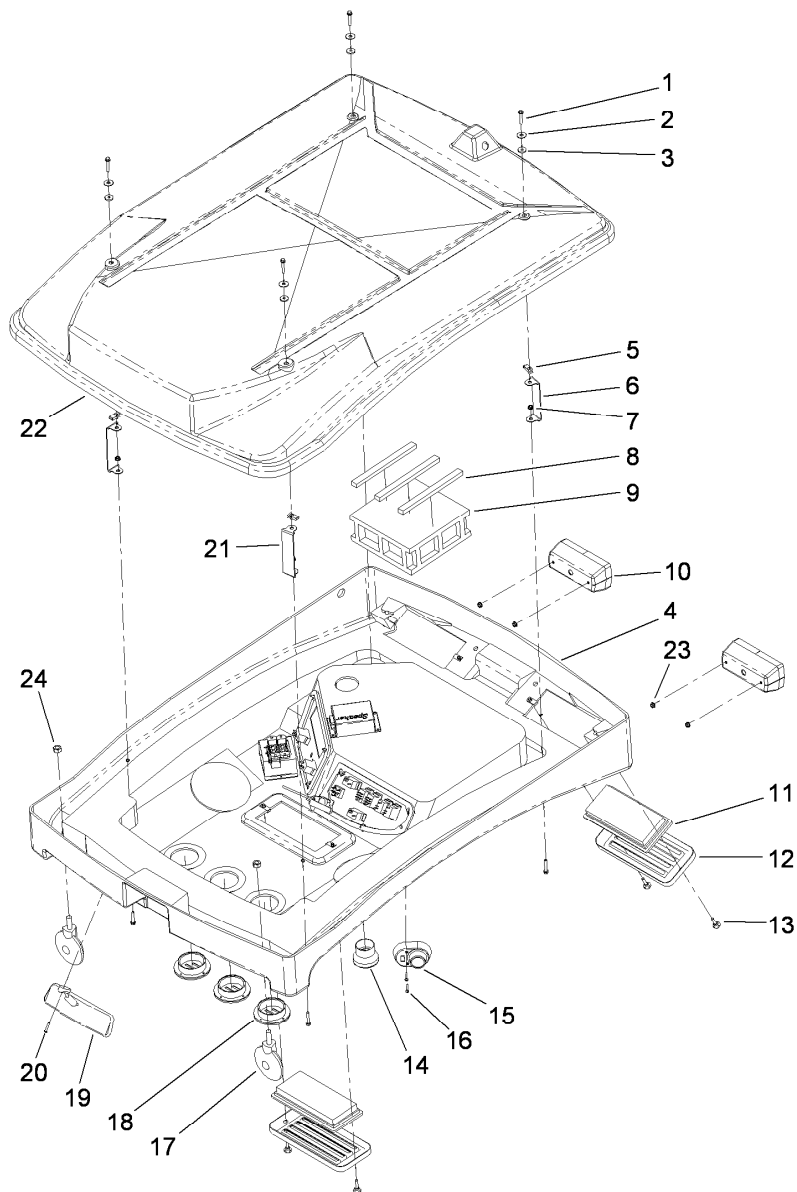 

Headliner Assembly

Ref.	Part Number	Qty.	Description
1	94-5781	8	Screw-HHF
2	115-5581	4	Washer-Flat
3	115-5570	4	Bushing-Thin
4	119-8347	1	Headliner
5	115-5586	10	Nut-Panel, Deep
6	119-8346	2	Plate-Coupling
7	115-5572	4	Nut-Flange
8	119-8345	3	Spacer-Foam
9	119-8344	1	Spacer-Headliner
10	115-5525	2	Light-Warning, Rear
11	115-5556	3	Filter-Air, Front
12	115-5557	3	Cover-Filter, Front

Ref.	Part Number	Qty.	Description
13	115-5555	6	Screw-Thumb
14	115-5559	1	Louver-Ball
15	115-7946	1	Light-Dome
16	115-5594	2	Screw-HSBH
17	119-8342	2	Lamp-Signal
18	115-5558	3	Louver
19	115-5524	1	Mirror-Rear View
20	117-5022	1	Screw-Pan
21	119-8341	2	Plate-Coupling
22	119-8340	1	Roof
23	115-5572	4	Nut-Flange
24	3217-9	2	Nut-HH

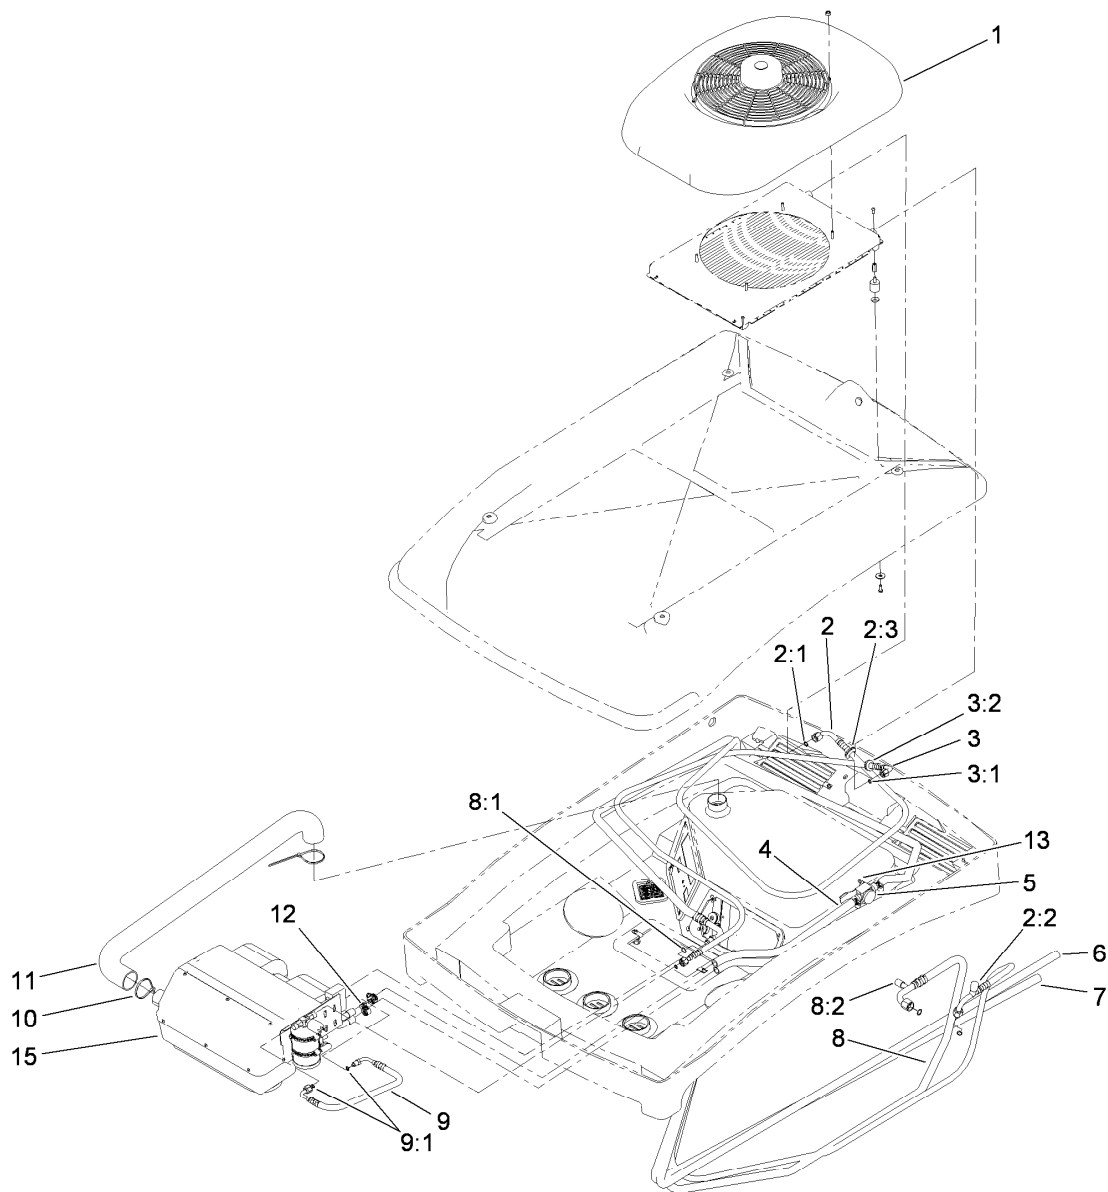 


Evaporator and Hose Assembly

Ref.	Part Number	Qty.	Description
1	119-8337	1	Cover-Condensor
2	119-8338	1	Hose ASM
2:1	117-2779	2	O-Ring
2:2	117-2783	1	Cap-Side, High
2:3	117-2781	1	Grommet
3	120-0450	1	Hose ASM
3:1	117-2778	2	O-Ring
3:2	117-2782	1	Grommet
4	115-8844	11	Hose
5	115-8840	1	Valve-Heater
6	120-0451	1	Hose-Heater

Ref.	Part Number	Qty.	Description
7	120-0452	1	Hose-Heater
8	120-0453	1	Hose ASM
8:1	117-2780	2	O-Ring
8:2	117-2784	1	Cap-Side, Low
9	115-8838	1	Hose ASM
9:1	117-2778	2	O-Ring
10	3290-379	2	Tie-Cable
11	115-8835	1	Hose-Air Duct
12	2412-141	6	Clamp-Drive, Worm
13	3290-148	1	Nut-HF
15		1	Heater Evaporator ASM ●

 
● Not serviced separately

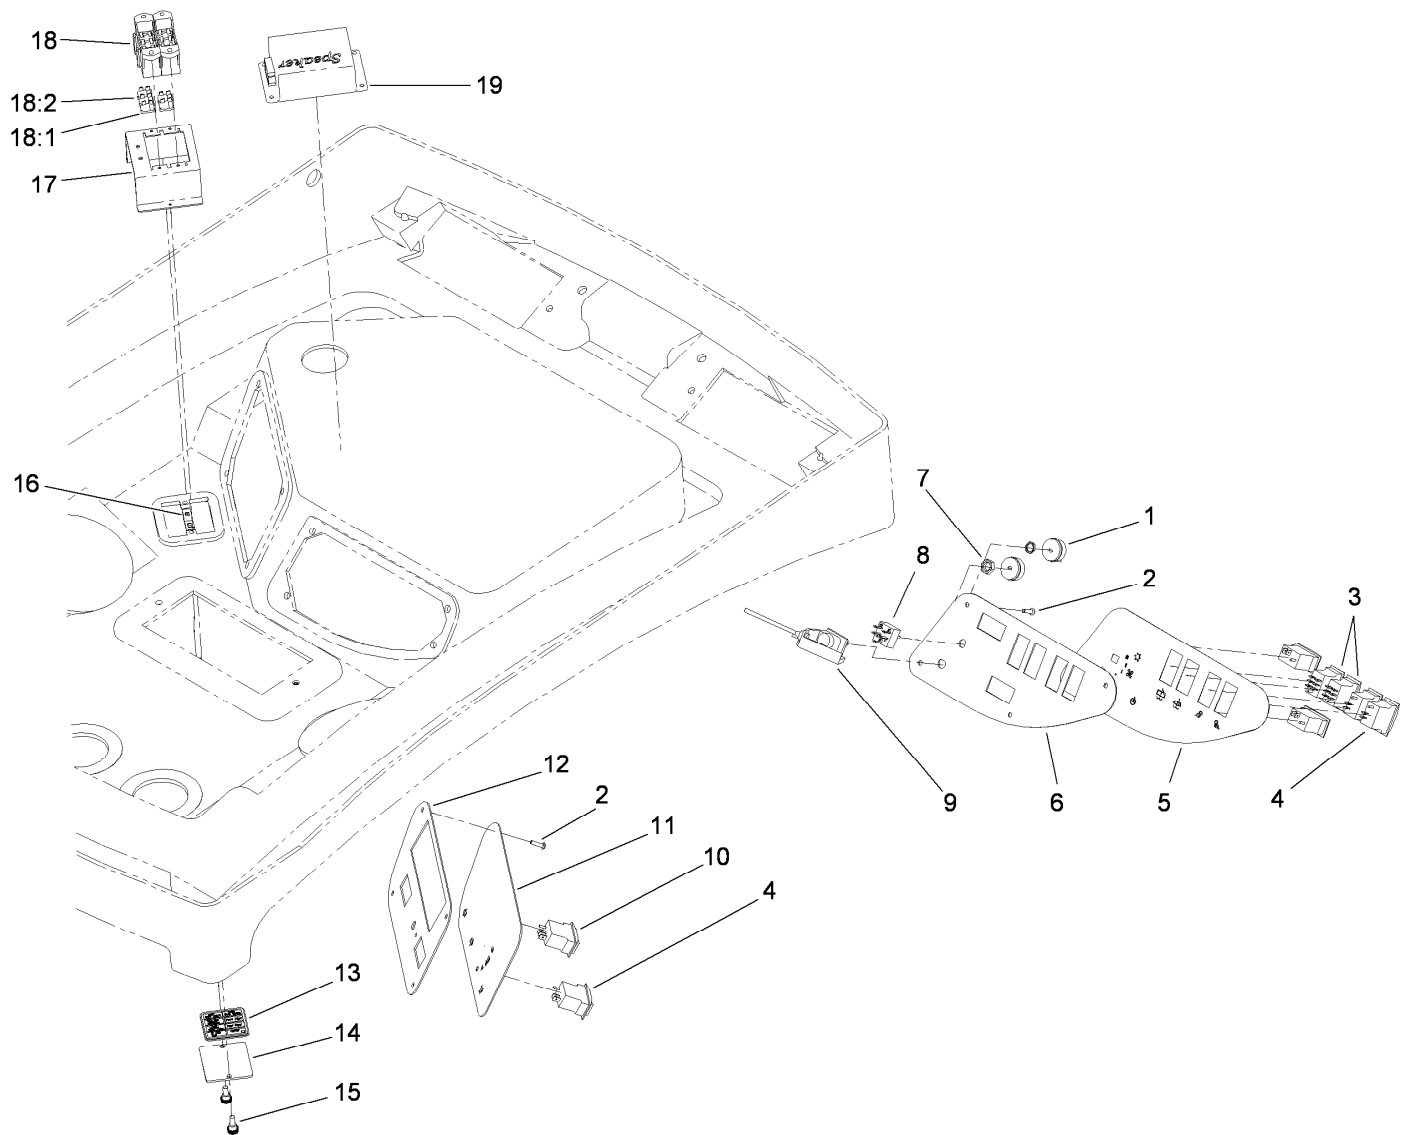

Switchplate and Fuseblock Assembly

Ref.	Part Number	Qty.	Description
1	115-5504	2	Knob-Control
2	104-2408	8	Screw-HSBH
3	115-7955	2	Switch-Momentary
4	119-8357	5	Switch-On-Off
5	119-8332	1	Decal-Switch Plate
6	119-8339	1	Plate-Switch
7	115-5503	1	Nut
8	115-5502	1	Switch-Fan, 3-Speed
9	117-5046	1	Actuator Cable ASM
10	117-5048	1	Switch-On-Off-On
11	119-8334	1	Decal-Stereo Plate

Ref.	Part Number	Qty.	Description
12	119-8333	1	Plate-Stereo
13	120-0454	1	Label-Fuses
14	120-0455	1	Cover-Fuses
15	115-5506	2	Knob
16	115-7952	10	Nut-Panel
17	119-8336	1	Mount-Fuses
18	119-8335	1	Harness-Cab
18:1	109102	1	Fuse-Blade, 25 Amp
18:2	109101	4	Fuse-Blade, 20 Amp
19	105-4515	1	Flasher-Rate, Dual

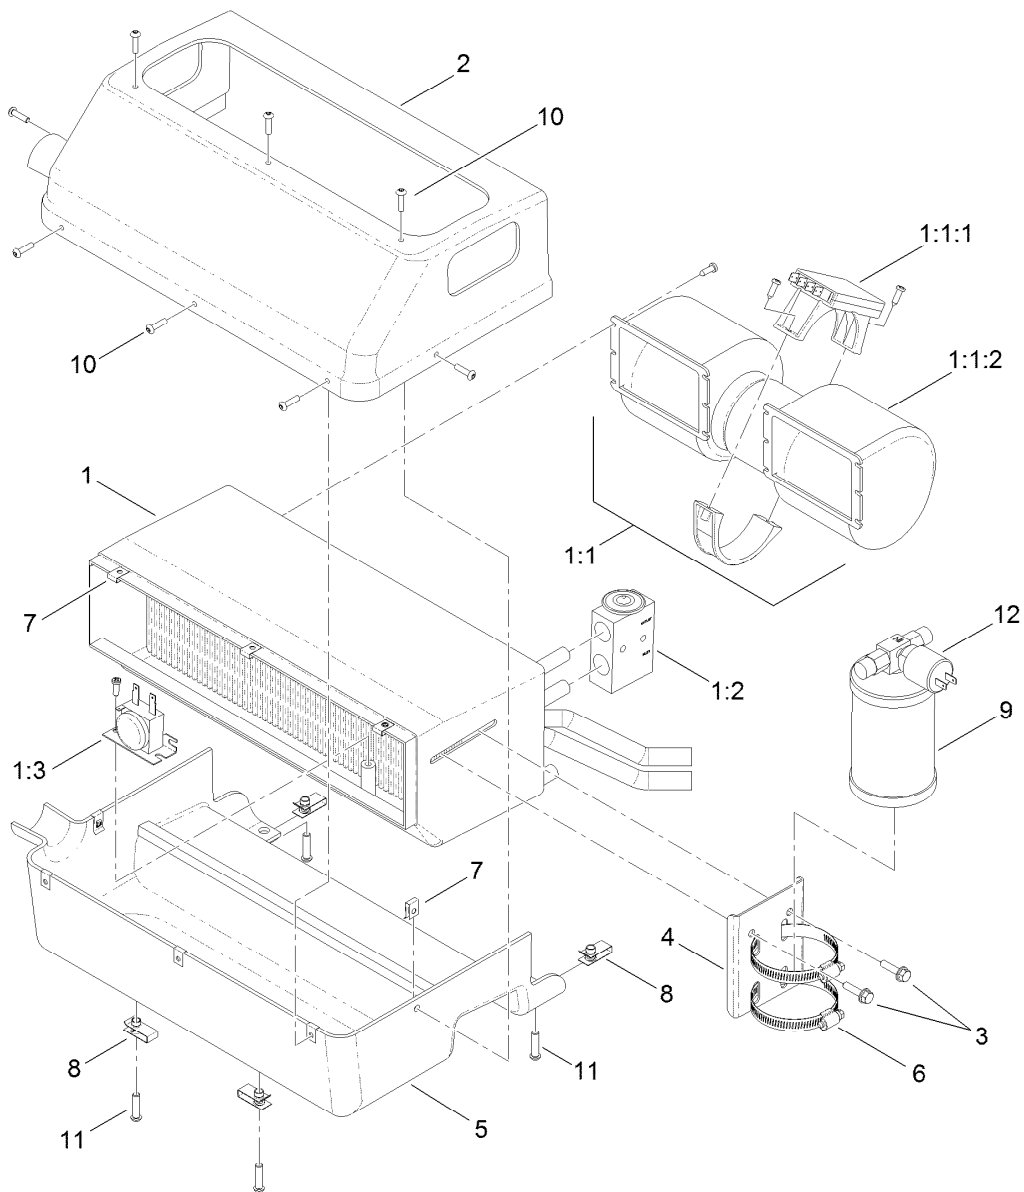 


A/C Heater and Evaporator Cab Assembly

Ref.	Part Number	Qty.	Description
1	121-3860	1	A/C Heater ASM
1:1	121-3861	1	Fan-Blower
1:1:1	121-3862	1	Resistor-Fan
1:1:2		1	Fan And Motor ASM ●
1:2	115-5587	1	Valve-Expansion
1:3	115-5593	1	Thermostat-Switch, Freeze
2	115-8829	1	Cover-Top
3	33103-025	2	Screw-HHF
4	115-8824	1	Mount-Drier


Ref.	Part Number	Qty.	Description
5	115-8828	1	Evaporator-Bottom
6	2412-125	2	Clamp-Hose
7	107-1013	8	Nut-Speed
8	115-5586	4	Nut-Panel, Deep
9	119-4502	1	Drier-Receiver
10	104-2408	8	Screw-HSBH
11	3274-65	5	Screw-HSBH
12	119-4501	1	Switch-Function, Dual

 ● Not serviced separately

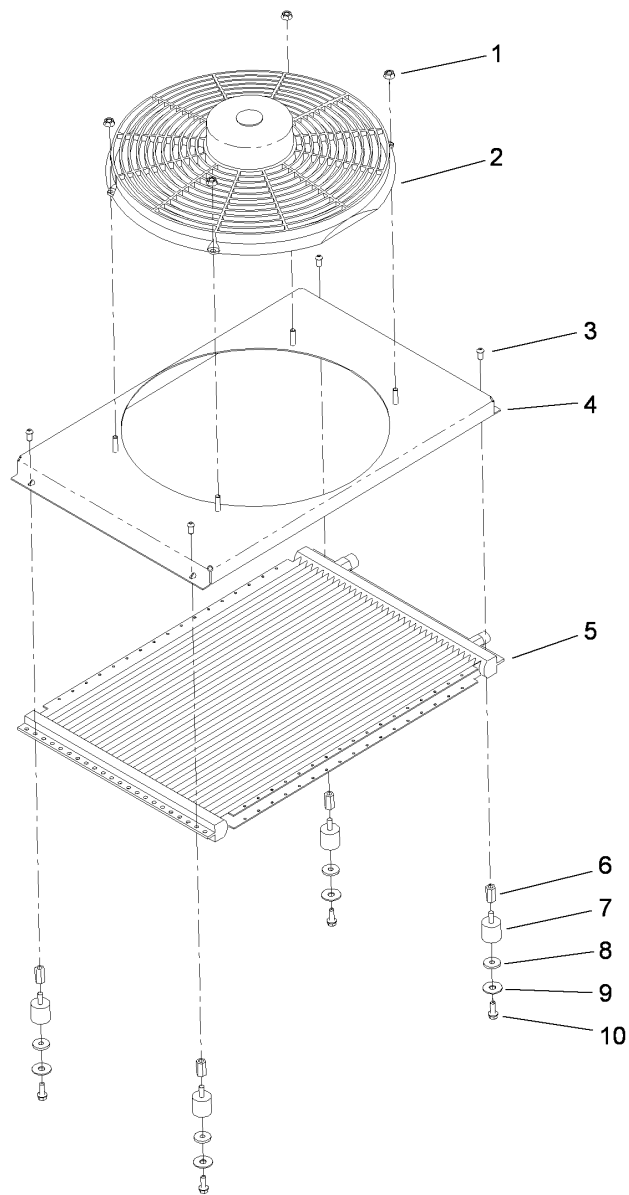

Condensor Assembly


Ref.	Part Number	Qty.	Description
1	32128-14	4	Nut-HF
2	115-8818	1	Fan
3	115-8819	4	Screw-HSBH
4	120-0456	1	Mount-Condensor Fan
5	115-8816	1	Coil-Condenser
6	115-8823	4	Coupler-Nut
7	115-8822	4	Mount-Isolator
8	115-5570	4	Bushing-Thin
9	115-5581	4	Washer-Flat
10	3234-4	4	Screw-HHF

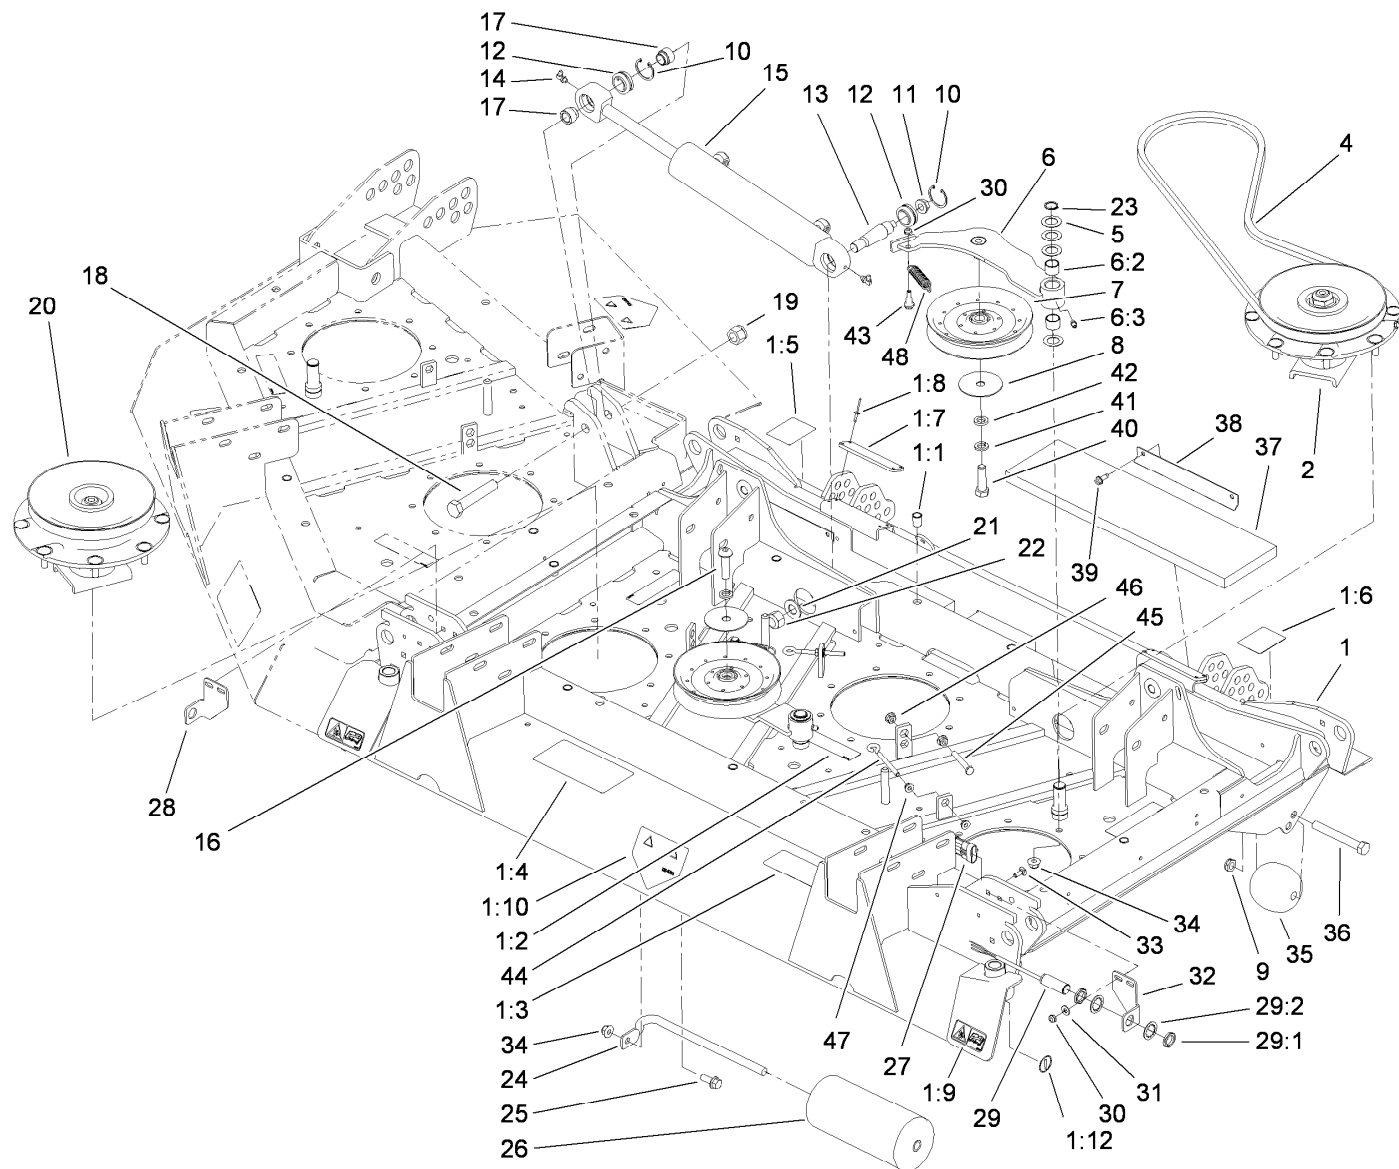 

Center Deck Assembly


Ref.	Part Number	Qty.	Description
1	110-3297	1	Center Deck ASM
1:1	32148-9	9	Nut-Clinch
1:2	100-6578	3	Decal-Danger
1:3	93-7818	1	Decal-Torque, Blade Bolt
1:4	100-5622	1	Decal-HOC
1:5	106-4250	1	Decal-HOC, RH
1:6	106-4251	1	Decal-HOC, LH
1:7	105-0786	2	Pad-Plastic
1:8	3269-8	8	Rivet-Blind
1:9	93-6674	2	Decal-Warning
1:10	106-6753	1	Decal-Danger, CE
1:12	58-6520	2	Decal-Grease
2	119-4776	3	Low-Driven Spindle ASM
4	108-8077	4	V-Belt, Deck
5	3-6498	16	Washer-Thrust
6	110-6128	4	Idler Arm ASM
6:2	256-76	2	Bushing
6:3	302-5	1	Fitting-Grease
7	110-9596	4	Pulley-Idler
8	100-3102	4	Washer-Flat
9	3296-45	2	Nut-Hex

Ref.	Part Number	Qty.	Description
10	32151-34	4	Ring-Retaining
11	32128-42	2	Nut-HF
12	105-7441	4	Bearing-Spherical
13	105-7468	2	Stud-Tapered
14	302-60	4	Fitting-Grease
15	107-0190	2	HYD Cylinder ASM
16	108-1993	1	Screw-HSBH
17	105-7443	4	Spacer-Pilot
18	327-14	2	Screw-HH
19	3296-53	2	Nut-Lock, NI
20	119-4549	1	High-Driven Spindle ASM
21	3256-27	2	Washer-Flat
22	3296-41	2	Nut-Lock NI
23	32120-72	4	Ring-Snap
24	68-6840	1	Shaft-Roller
25	3234-11	1	Screw-HHF
26	68-6710	1	Roller
27	117-5717	1	Harness-Wire, Deck
28	119-0081	1	Mount-Switch, RH
29	115-5300	2	Proximity Switch ASM
29:1	117-3207	2	Nut-Hex

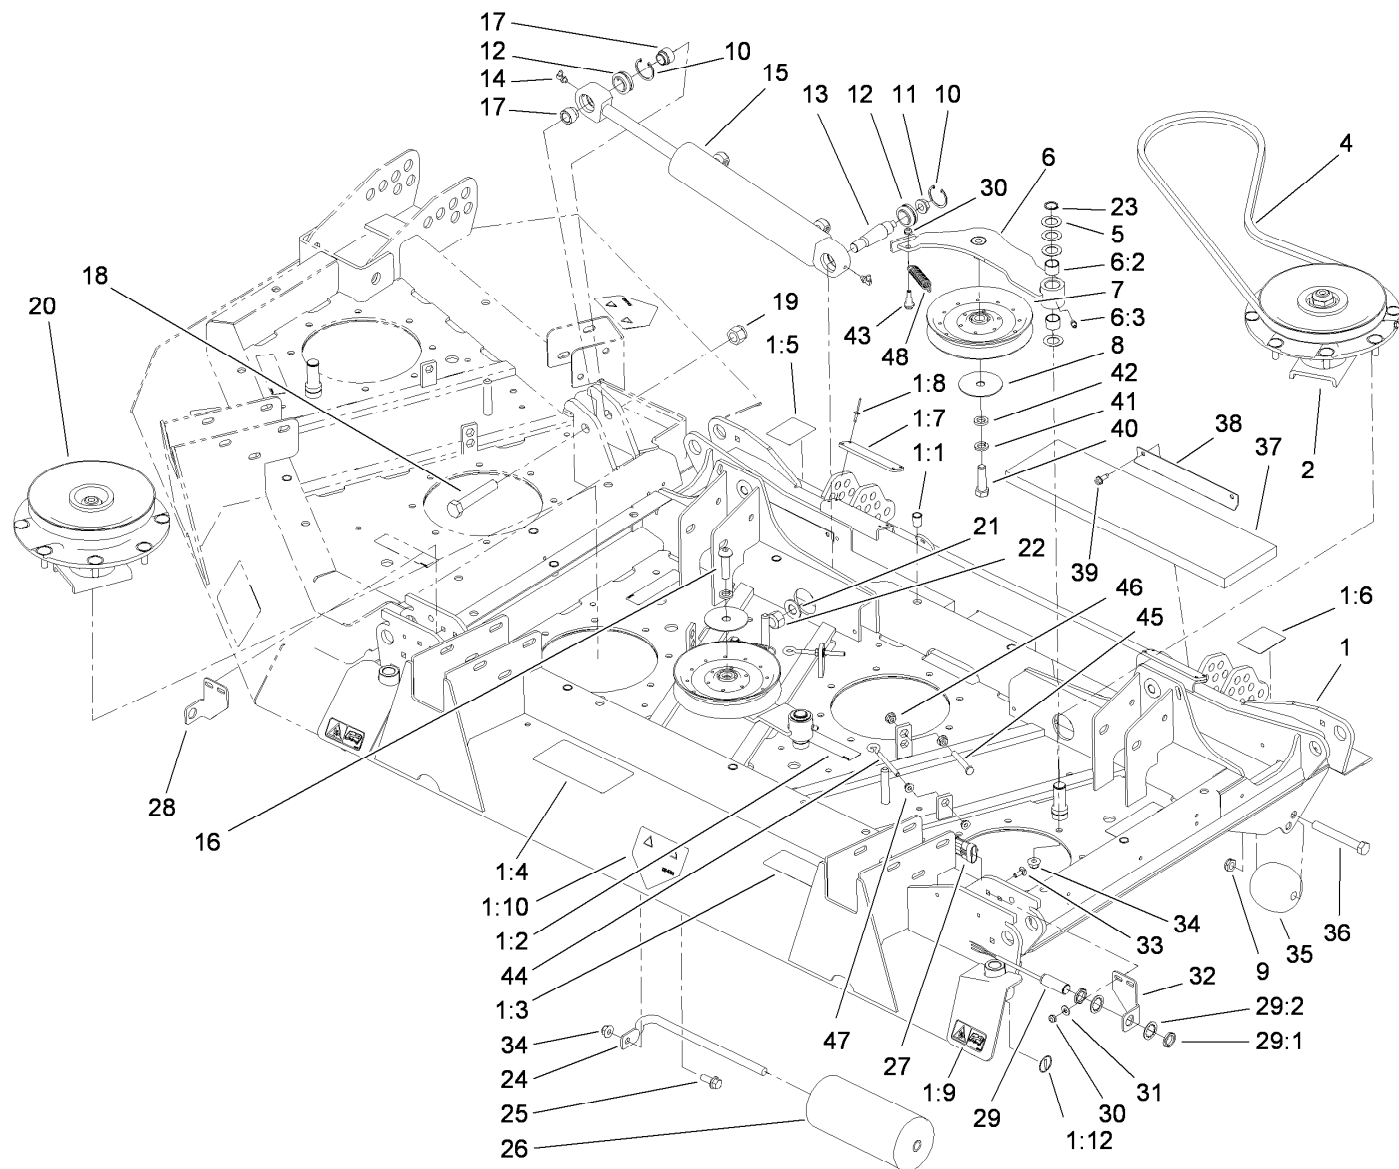 


Center Deck Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
29:2	117-3208	2	Washer-Lock, Internal Tooth	39	32104-95	8	Screw-HWH
30	3296-56	8	Nut-Lock, NI	40	325-7	3	Screw-HH
31	3256-22	4	Washer-Flat	41	3253-7	4	Washer-Lock
32	119-0080	1	Mount-Switch, LH	42	9202424	3	Spacer
33	3229-1	4	Bolt-CARR	43	104-0858	4	Bolt-Shoulder
34	104-8301	45	Nut-HF, NI	44	68-0090	4	Screw-Adjusting
35	29-4820	2	Roller	45	9114524	4	Bolt-TAP, HH
36	325-17	2	Screw-HH	46	32128-26	8	Nut-Flange
37	106-7179	2	Pad-Foam	47	32128-14	8	Nut-HF
38	106-7227	4	Support-Pad	48	107938	4	Spring-Extension

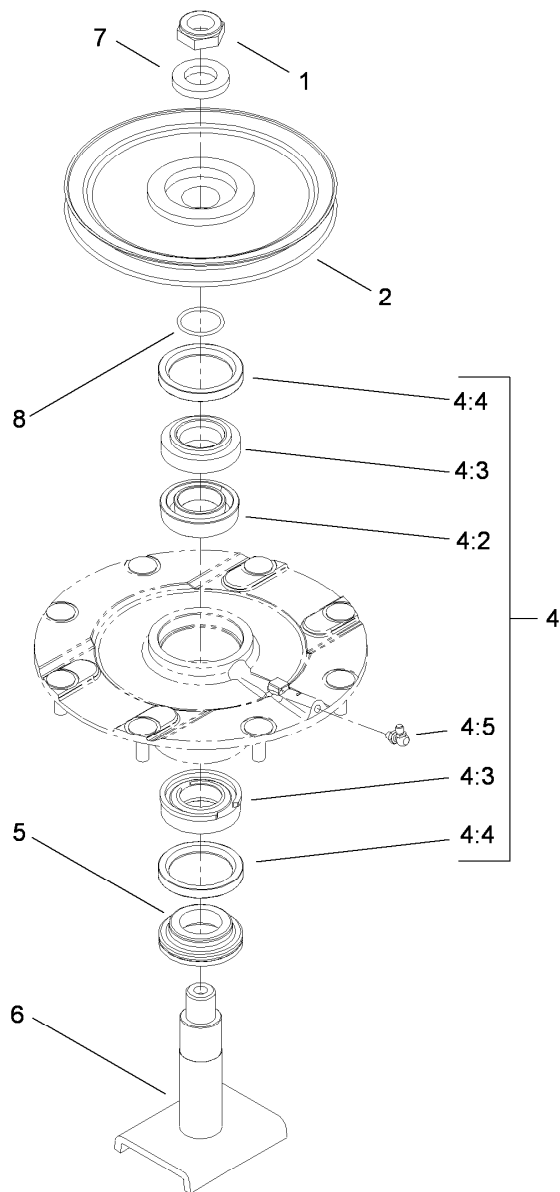 

Low Driven Spindle Assembly No. 119-4776


Ref.	Part Number	Qty.	Description
1	3296-60	1	Nut-Lock, NI
2	104-3546	1	Pulley-Driven, Low
4	119-4775	1	Spindle Housing ASM
4:2	104-3549	1	Bearing Spacer Set
4:3	110-8297	1	Bearing ASM
4:4	253-154	2	Seal-Oil
4:5	302-60	1	Fitting-Grease
5	69-6950	1	Spacer-Shaft, Spindle
6	104-3554	1	Shaft-Spindle
7	104-8322	1	Washer-Hardened
8	106-7159	1	O-Ring

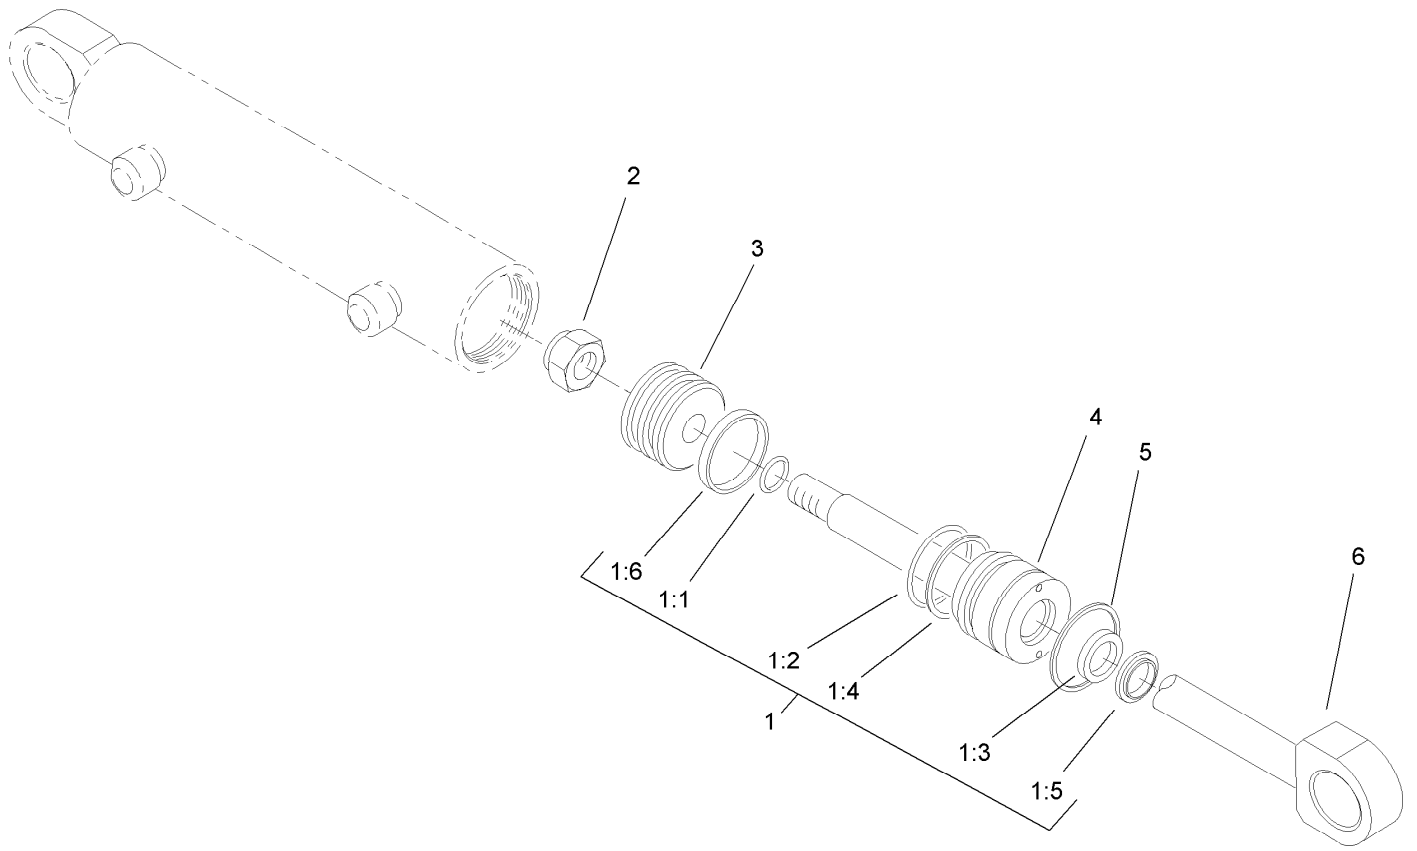 

Wing Lift Cylinder Assembly No. 107-0190


Ref.	Part Number	Qty.	Description
1	107-0247	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2		1	Ring-Retaining ●
1:3		1	Seal ●
1:4		1	Back-Up ●
1:5		1	Wiper ●
1:6		1	Seal W/O-Ring ●
2		1	Locknut ●
3		1	Piston ●
4		1	Head ●
5		1	Ring-Retaining ●
6		1	Rod ASM ●

 ● Not serviced separately

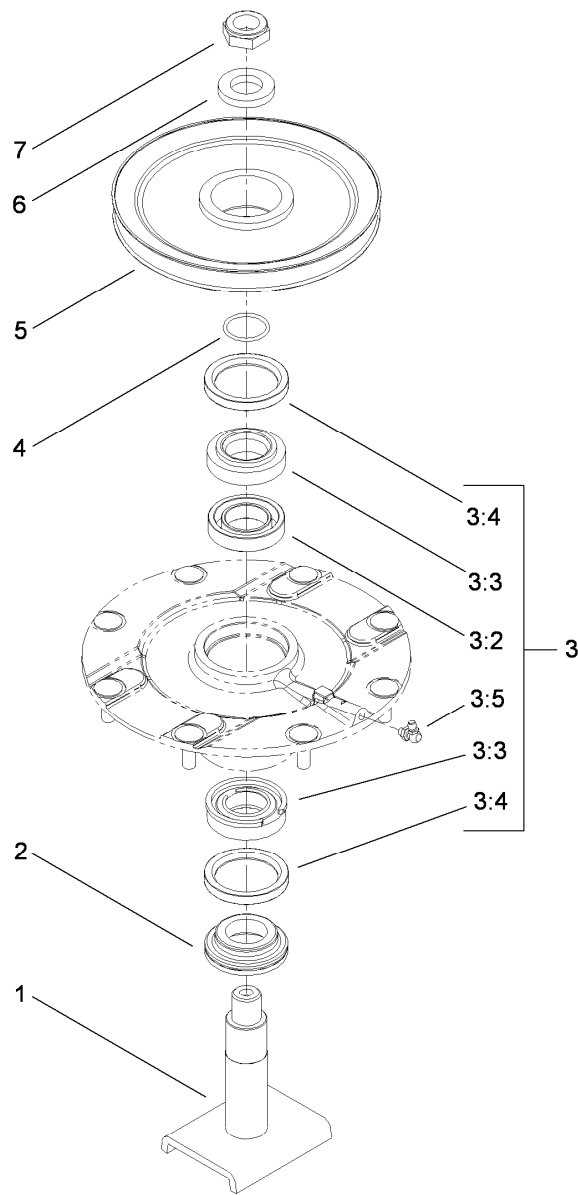

High Driven Spindle Assembly No. 119-4549

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:2	104-3549	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3548	1	Pulley-Driven, High
6	104-8322	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI

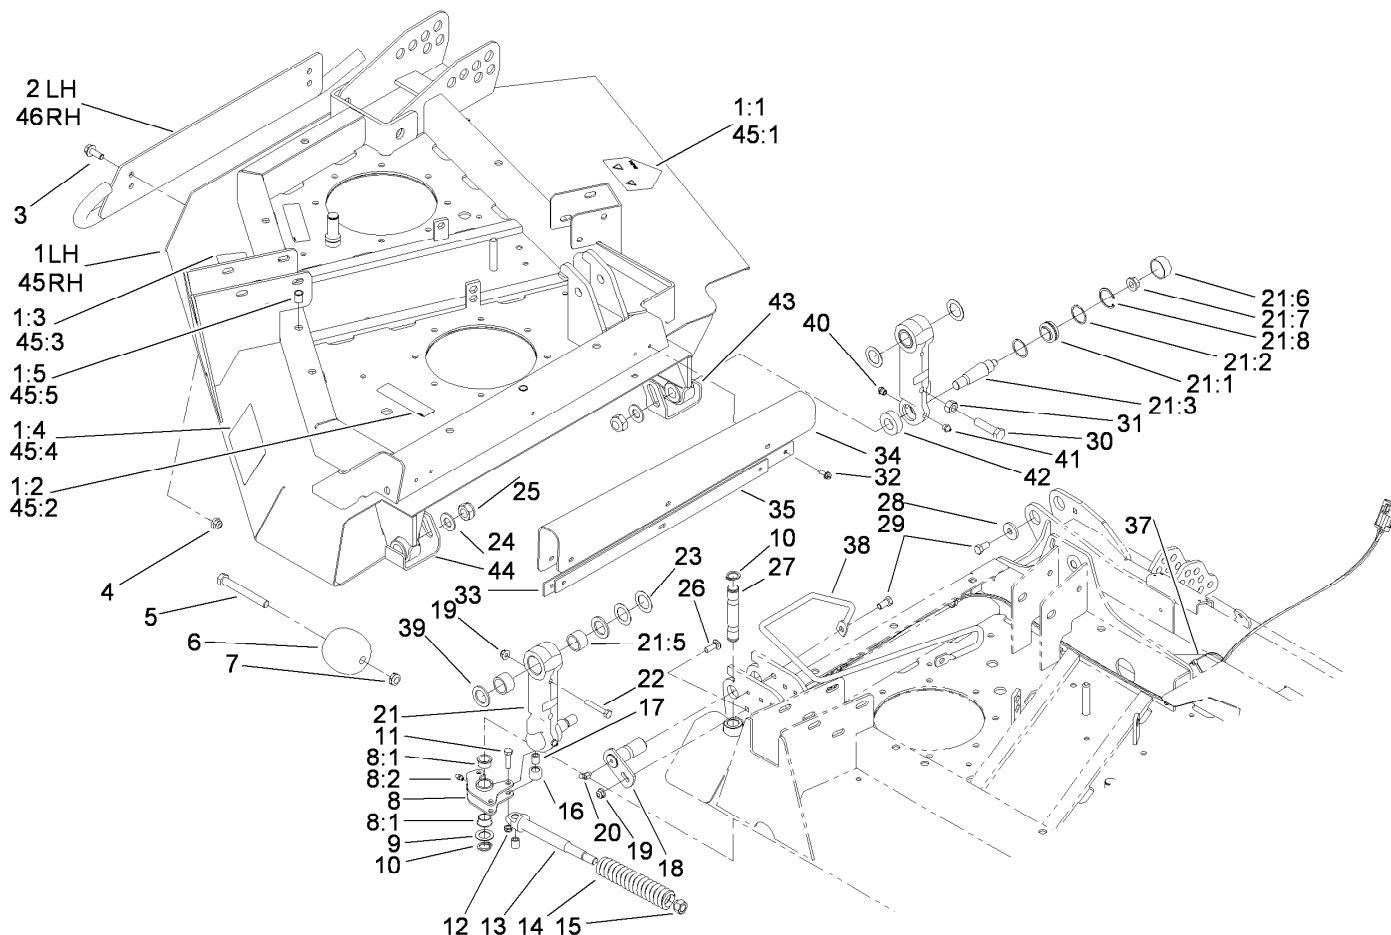 


Right Hand and Left Hand Deck Installation Assembly

Ref.	Part Number	Qty.	Description
1	110-3298	1	RH Deck ASM
1:1	106-6753	1	Decal-Danger, CE
1:2	100-6578	2	Decal-Danger
1:3	93-7818	1	Decal-Torque, Blade Bolt
1:4	100-5622	1	Decal-HOC
1:5	32148-9	4	Nut-Clinch
2	105-7430-01	1	RH Skid ASM
3	3234-42	4	Screw-HHF
4	104-8301	4	Nut-HF, NI
5	325-17	2	Screw-HH
6	29-4820	2	Roller
7	3296-45	2	Nut-Hex
8	105-7469	2	Latch ASM
8:1	256-252	2	Bearing-Flange
8:2	302-5	1	Fitting-Grease
9	1278	2	Washer
10	32120-93	4	Ring-Retaining
11	322-6	6	Screw-HH
12	3296-47	6	Nut-Lock, NI
13	106-4317	2	Support-Spring
14	86-2560	2	Spring-Comp
15	242-50	2	Nut-Lug
16	86-2120	4	Roller-Lock
17	86-2090	6	Bushing
18	106-7171	4	Pin Pivot ASM
19	104-8300	6	Nut-HF, NI

Ref.	Part Number	Qty.	Description
20	302-11	4	Fitting-Lube, 45 DEG
21	112-9116	4	Link ASM
21:1	105-7441	1	Bearing-Spherical
21:2	110-6198	2	Washer-Flat
21:3	105-7468	1	Stud-Tapered
21:5	106-7248	2	Bushing
21:6	110-6197	1	Cap-Dust
21:7	32128-42	1	Nut-HF
21:8	32151-34	1	Ring-Retaining
22	322-10	2	Screw-HH
23	9547	8	Washer-Thrust
24	3256-27	4	Washer-Flat
25	112-9119	4	Nut-Lock, NI
26	3230-2	4	Bolt-CARR
27	105-7482	2	Pin-Latch
28	53-6380	2	Washer-Flat
29	323-4	4	Screw-HH
30	325-8	2	Screw-HH
31	3217-9	2	Nut-HH
32	32104-95	12	Screw-HWH
33	107-0170-03	2	Strap-Wing
34	106-4334	2	Shield-Flex
35	107-0171-03	2	Strap-Shield
37	3290-379	4	Tie-Cable
38	107-0182	1	Guide-Hose, RH
39	92-7845	4	Spacer-Hardened




Ref.	Part Number	Qty.	Description
45	110-3299	1	LH Deck ASM
45:1	106-6753	1	Decal-Danger, CE
45:2	100-6578	2	Decal-Danger
45:3	93-7818	1	Decal-Torque, Blade Bolt
45:4	100-5622	1	Decal-HOC
45:5	32148-9	4	Nut-Clinch
46	105-7437-01	1	LH Skid ASM

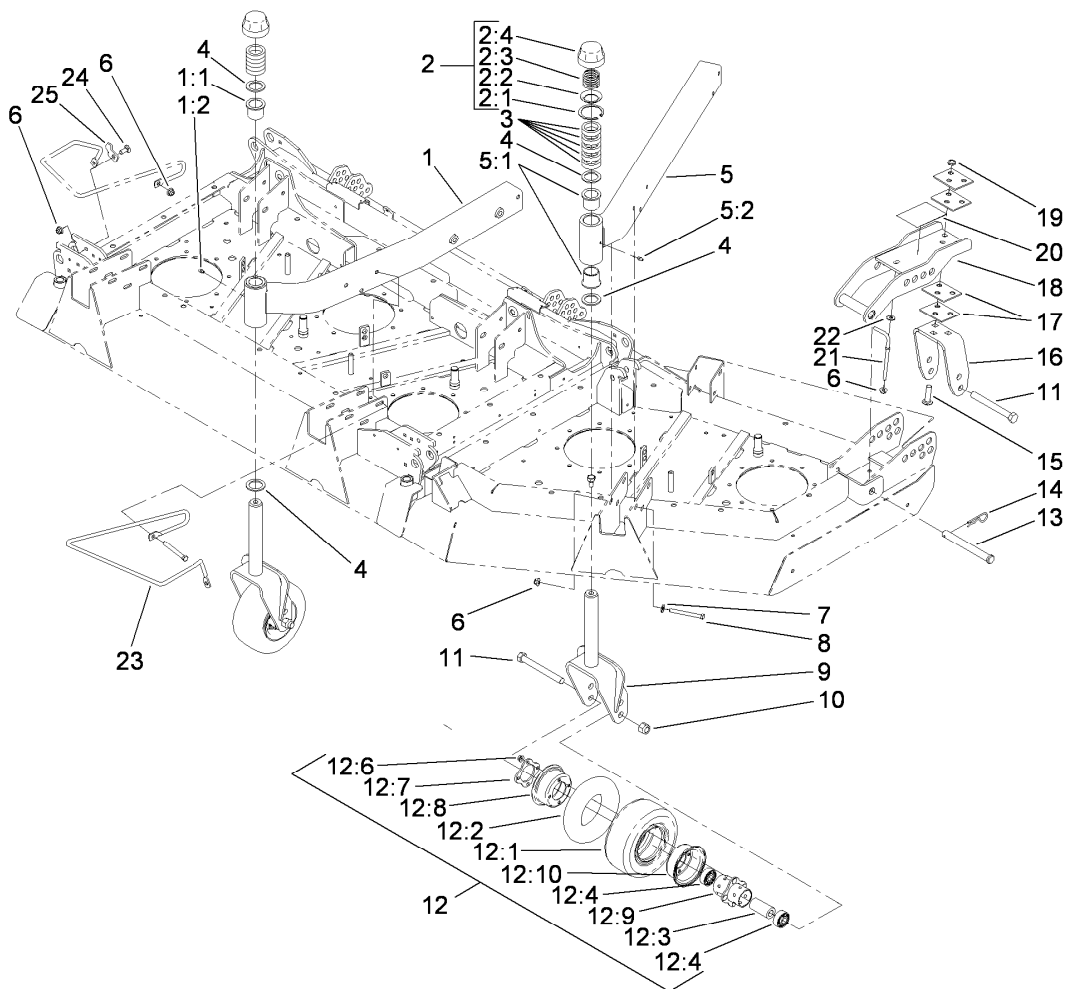 

Center Castor Arm and Fork Assembly


Ref.	Part Number	Qty.	Description
1	105-7414	2	Center Castor Arm ASM
1:1	69-6470	2	Bushing-Castor
1:2	302-5	1	Fitting-Grease
2	92-9727	4	HOC Cap ASM
2:1	92-5581	1	Ring-Retaining
2:2	92-5583	1	Washer-Cap
2:3	92-9726	1	Spring-Compression
2:4	92-8861	1	Cap-HOC
3	69-1510	20	Spacer
4	69-6860	8	Washer-Thrust
5	105-7429	2	Side Castor Arm ASM
5:1	69-6470	2	Bushing-Castor
5:2	302-5	1	Fitting-Grease
6	104-8301	24	Nut-HF, NI
7	3256-24	18	Washer-Flat
8	323-15	20	Screw-HH
9	92-7750-01	4	Fork-Castor
10	3296-53	6	Nut-Lock, NI
11	327-24	6	Screw-HH
12	93-9938	6	Wheel ASM
12:1	93-9939	1	Tire
12:2	68-8950	1	Tube-Inner (W/Valve)

Ref.	Part Number	Qty.	Description
12:3	93-4241	1	Spacer-Bearing, Inner
12:4	108-9017	2	Bearing-Steel, Stainless
12:6	32128-16	4	Nut-HHF
12:7	93-4242	1	Plate
12:8	93-4239	1	Rim-Wheel, Half
12:9	93-5980	1	Hub
12:10	95-2741	1	Rim-Wheel, Half
13	100-5569	4	Pin-Clevis
14	3290-343	4	Pin-Hair
15	3233-4	6	Screw-CARR
16	105-7457-01	2	Fork-Rear
17	104-7524	8	Shim
18	104-7529-01	2	Bracket-Castor
19	3296-45	6	Nut-Hex
20	100-5623	1	Decal-HOC
20	104-3579	1	Decal-HOC
21	106-2047	2	Rod-Tension
22	3256-3	2	Washer-Flat
23	107-0183	1	Guide-Hose, LH
24	3231-2	2	Bolt-CARR
25	107-0229	2	Tab-Guide

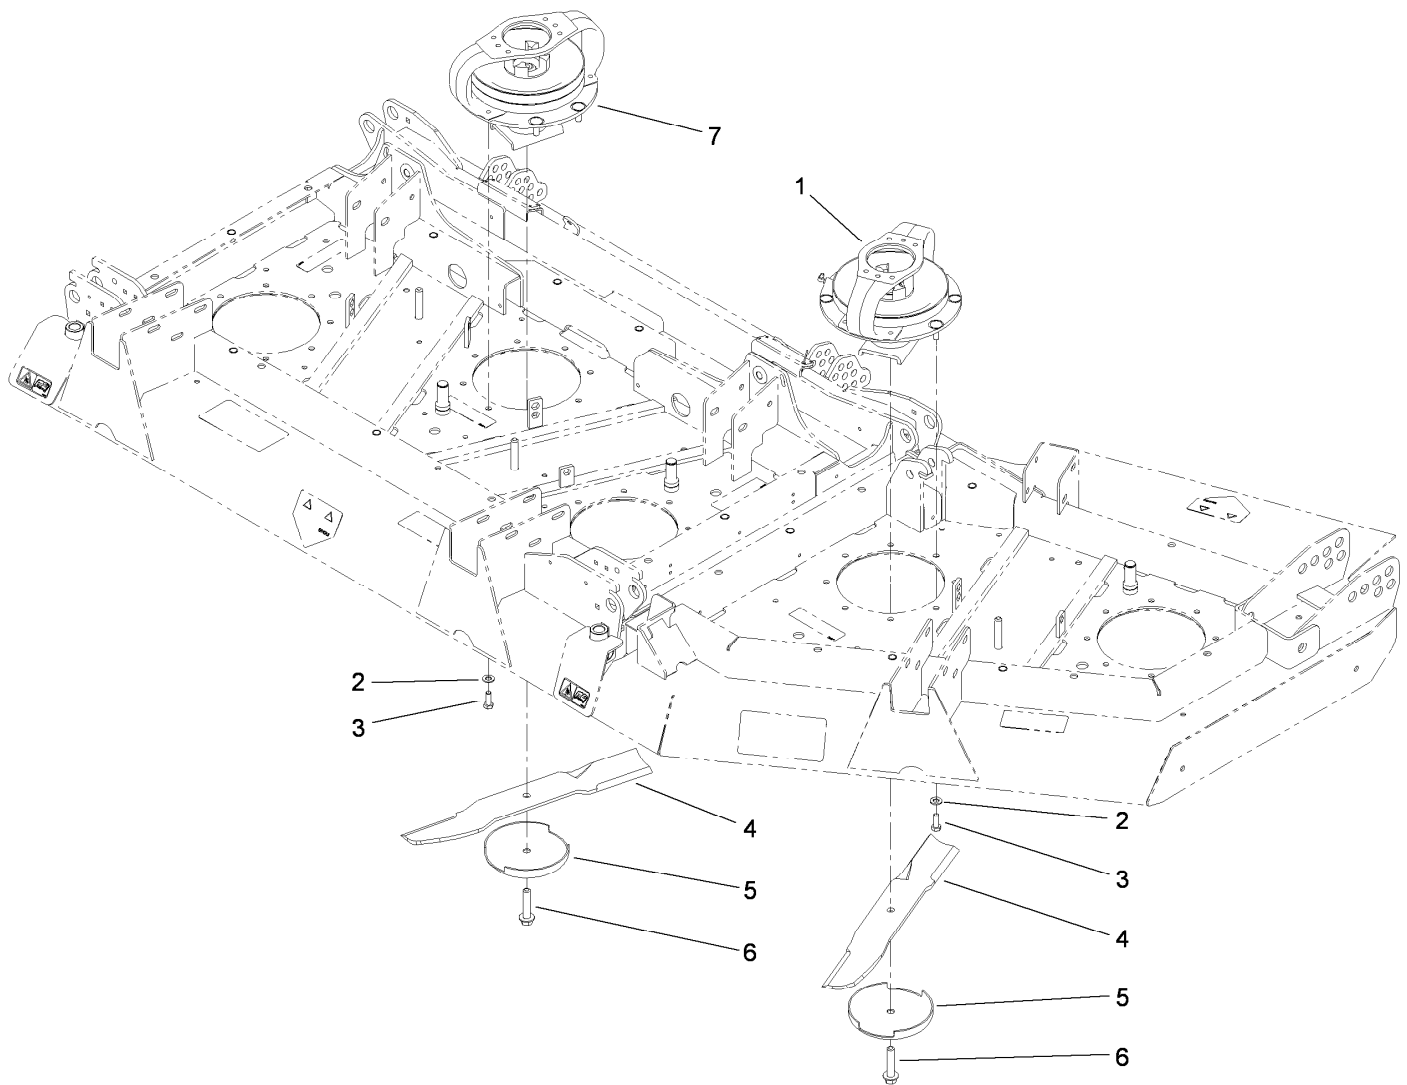 


Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	119-4547	2	Driving Spindle ASM
2	3256-24	12	Washer-Flat
3	323-6	12	Screw-HH
4	106-7166-03	7	Blade-Combination (19 Inch)
5	72-9361	7	Cup-Scalp, Anti
6	92-5816	7	Bolt-Blade
7	119-5298	1	Double-Driven Spindle ASM

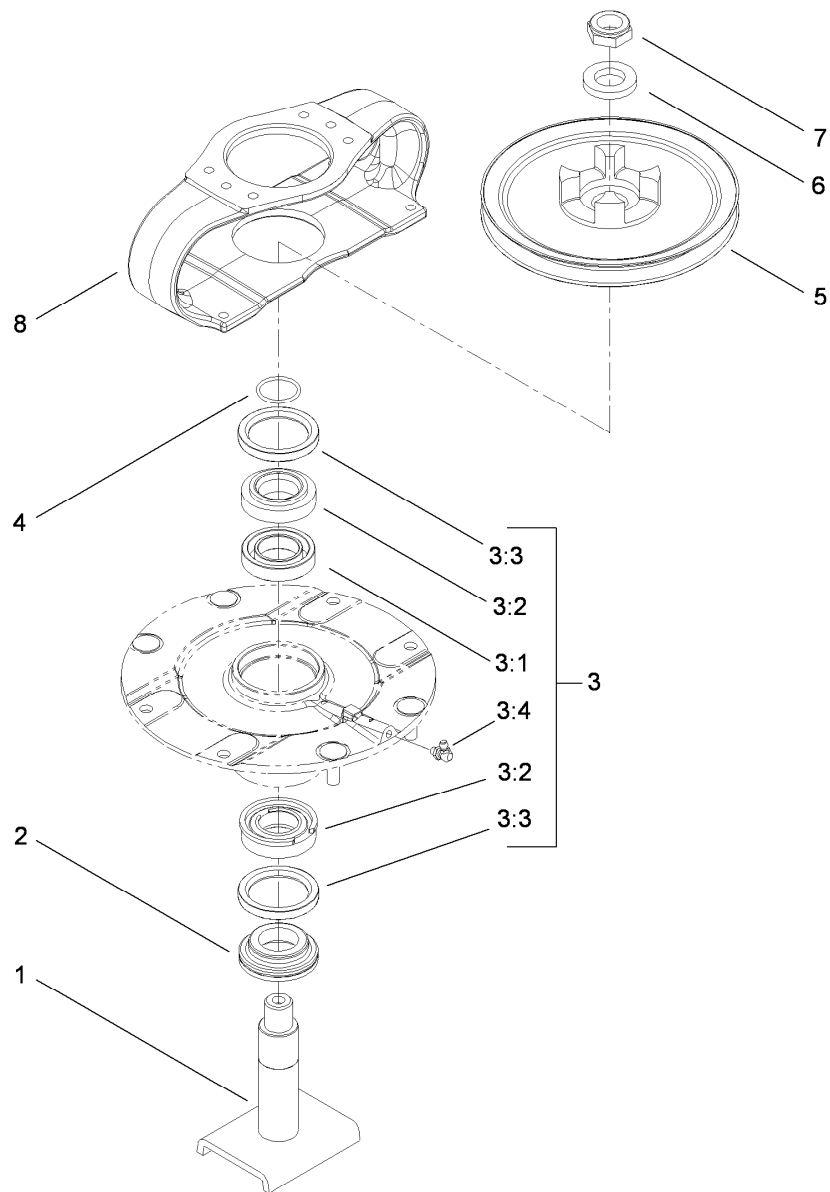 


Driving Spindle Assembly No. 119-4547

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4546	1	Spindle Housing ASM
3:1	104-3549	1	Bearing Spacer Set
3:2	110-8297	1	Bearing ASM
3:3	253-154	2	Seal-Oil
3:4	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3545	1	Pulley-Driving
6	104-8322	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI
8	104-3544	1	Mount-Motor, Drive

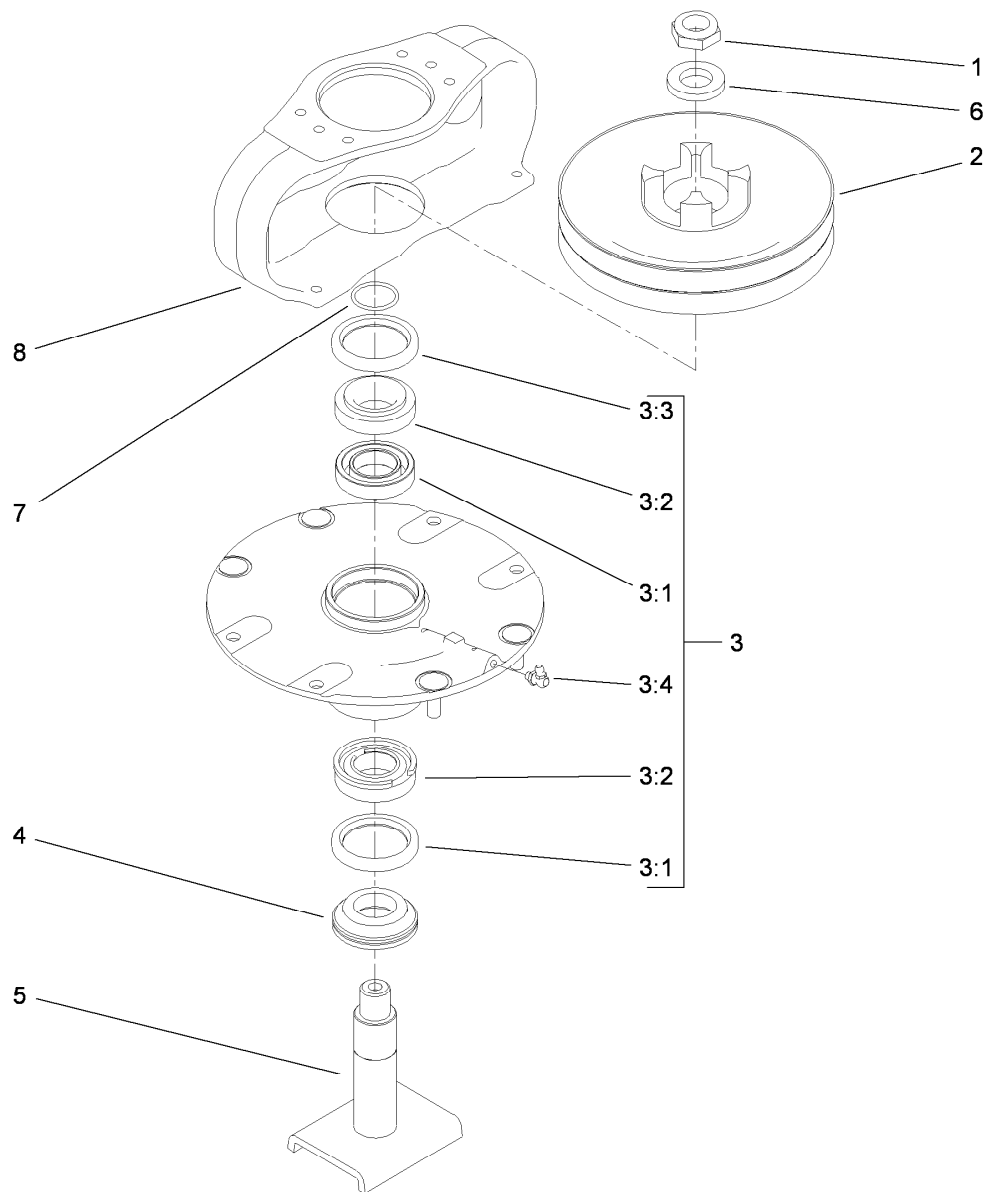 

Double Driven Spindle Assembly No. 119-5298


Ref.	Part Number	Qty.	Description
1	3296-60	1	Nut-Lock, NI
2	106-4269	1	Pulley-Drive, Double
3	119-4546	1	Spindle Housing ASM
3:1	104-3549	1	Bearing Spacer Set
3:2	110-8297	1	Bearing ASM
3:3	253-154	2	Seal-Oil
3:4	302-60	1	Fitting-Grease
4	69-6950	1	Spacer-Shaft, Spindle
5	104-3554	1	Shaft-Spindle
6	104-8322	1	Washer-Hardened
7	106-7159	1	O-Ring
8	106-4268	1	Mount-Motor, Drive

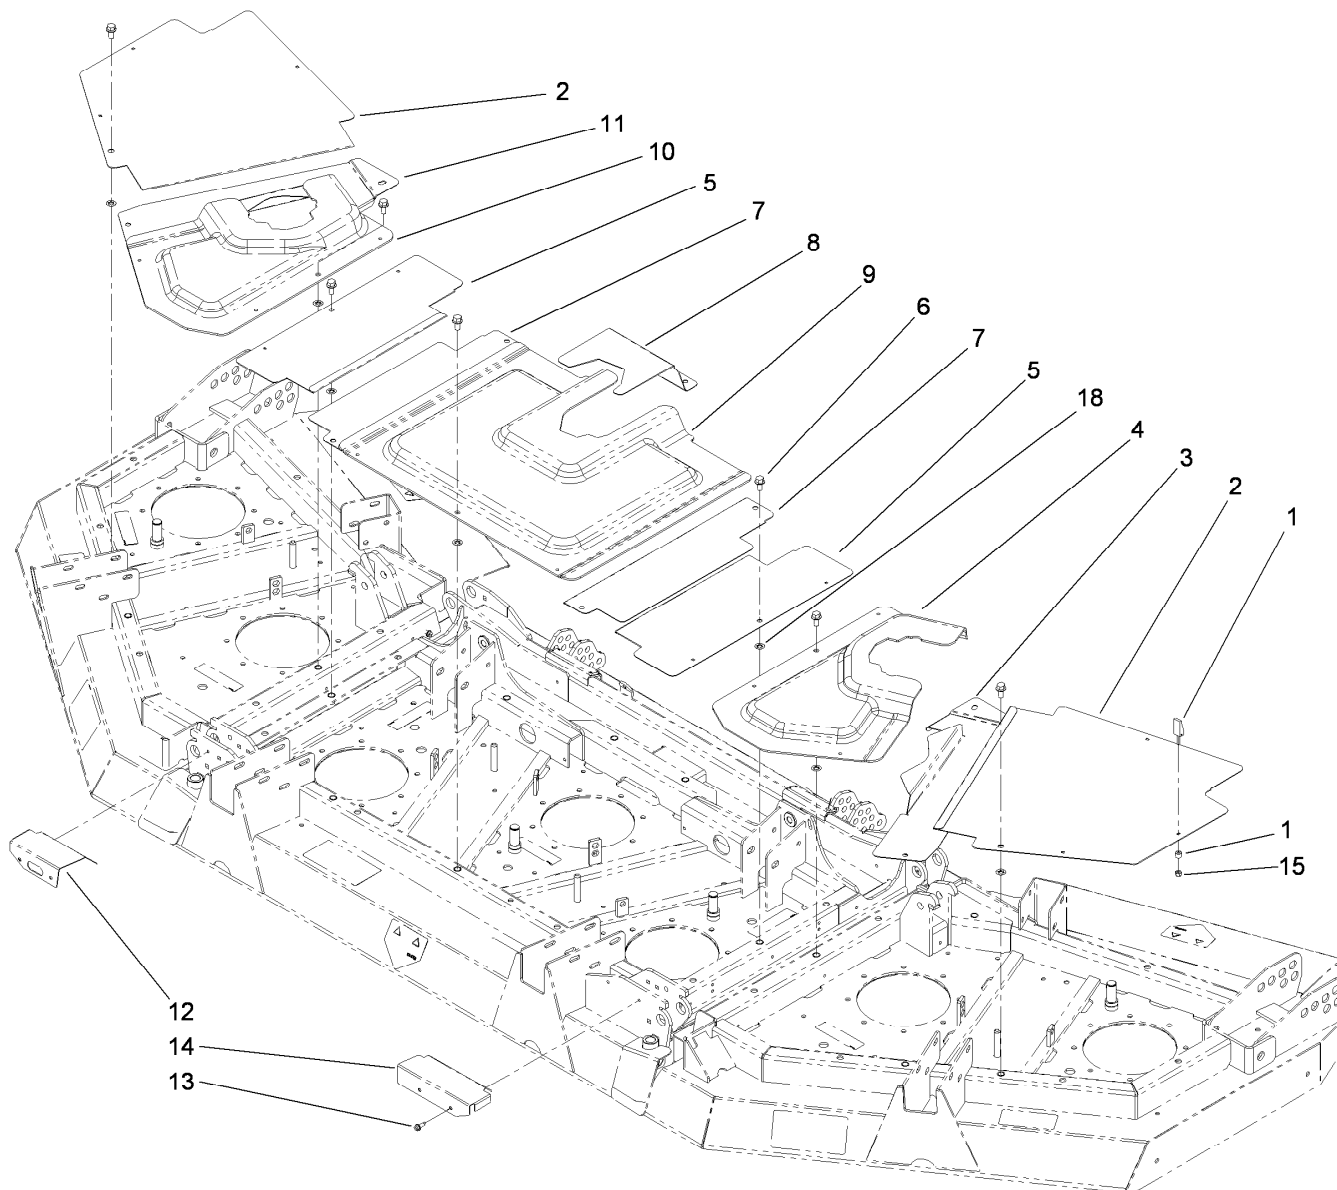

Deck Cover Assembly


Ref.	Part Number	Qty.	Description
1	74-5950	18	Latch-Swell
2	106-4256-03	2	Cover-Outer, Wing
3	106-4258-03	1	Cover-Inner, LH
4	106-4260	1	Cover-Mount, LH
5	106-4252-03	2	Cover-Outer, Center
6	3234-1	17	Screw-HHF
7	106-4255-03	2	Cover-Inner, Center
8	106-4253-03	1	Cover-Rear, Center

Ref.	Part Number	Qty.	Description
9	106-4254	1	Cover-Front, Center
10	106-4259	1	Cover-Mount, RH
11	106-4257-03	1	Cover-Inner, RH
12	106-7173-01	1	Shield-RH
13	32104-95	4	Screw-HWH
14	106-7174-01	1	Shield-LH
15	1-804254	18	Nut-Lock, HH
18	107-3154	7	Nut-Push

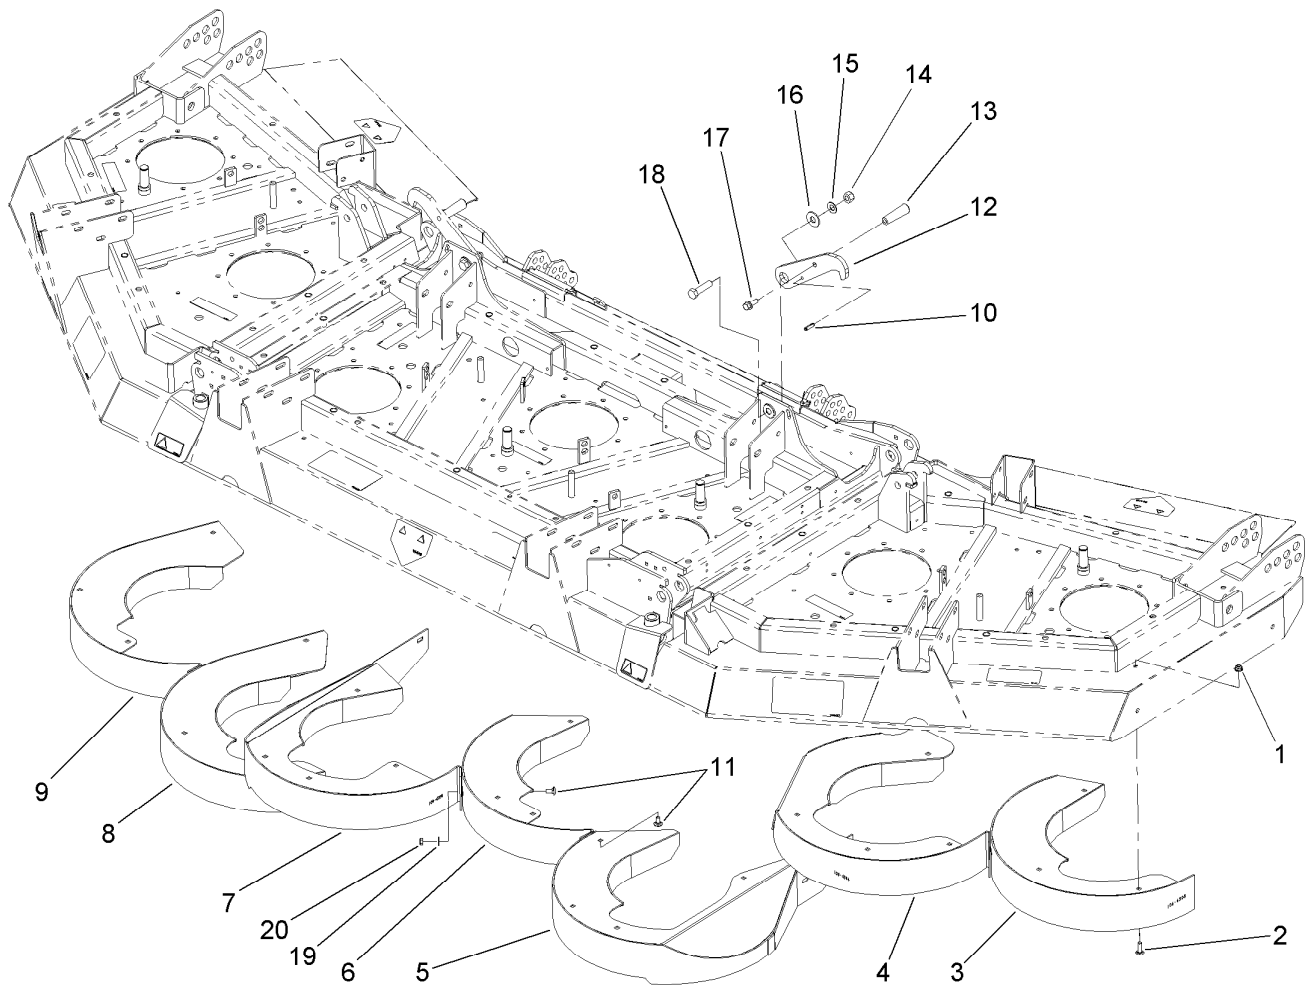 


Rear Discharge Baffle Assembly

Ref.	Part Number	Qty.	Description
1	104-8300	24	Nut-HF, NI
2	3230-22	23	Screw-CARR
3	106-4308-01	1	LH Out Chamber ASM
4	106-4304-01	1	LH Inside Chamber ASM
5	106-4291-01	1	LH Center Chamber ASM
6	106-4294-01	1	Center Chamber ASM
7	106-4286-01	1	RH Center Chamber ASM
8	106-4298-01	1	RH Inside Chamber ASM
9	106-4301-01	1	RH Out Chamber ASM
10	32121-24	2	Pin-Spring
11	3230-18	5	Screw-CARR
12	106-4340-01	2	Latch-Wing
13	233-39	2	Knob-Control
14	3296-25	2	Nut-Lock, NI
15	3290-483	2	Washer-Conical
16	3256-6	2	Washer-Flat
17	3234-11	2	Screw-HHF
18	325-8	2	Screw-HH
19	3256-23	4	Washer-Plain
20	3296-47	4	Nut-Lock, NI

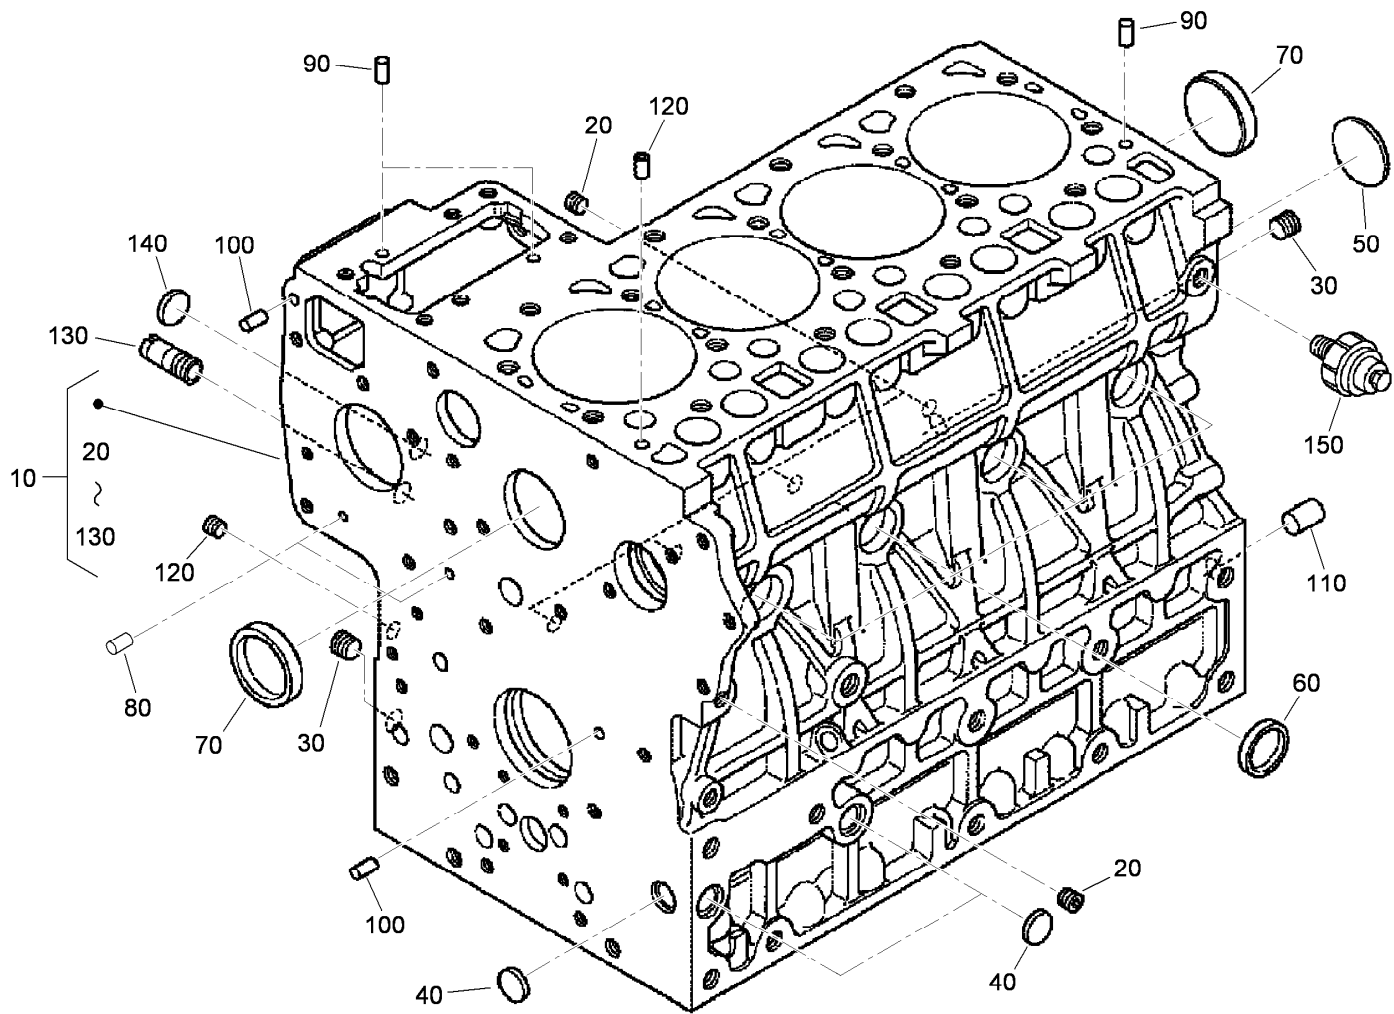 


Crankcase Assembly

Ref.	Part Number	Qty.	Description
10	115-8500	1	Crankcase ASM
20	98-7487	2	Plug
30	107-0107	6	Plug
40	98-9379	2	Plug-Expansion
50	98-9668	3	Plug-Expansion
60	98-7500	6	Cap-Sealing
70	98-7501	2	Cap-Sealing
80	98-7502	2	Pin-Straight
90	98-7503	2	Pin-Straight
100	98-7504	2	Pin-Straight
110	98-7505	1	Pin-Straight
120	98-7506	1	Pin-Pipe
130	100-9153	1	Pipe-Return, Water
140	100-2020	1	Cap-Sealing
150	98-9416	1	Switch-Oil

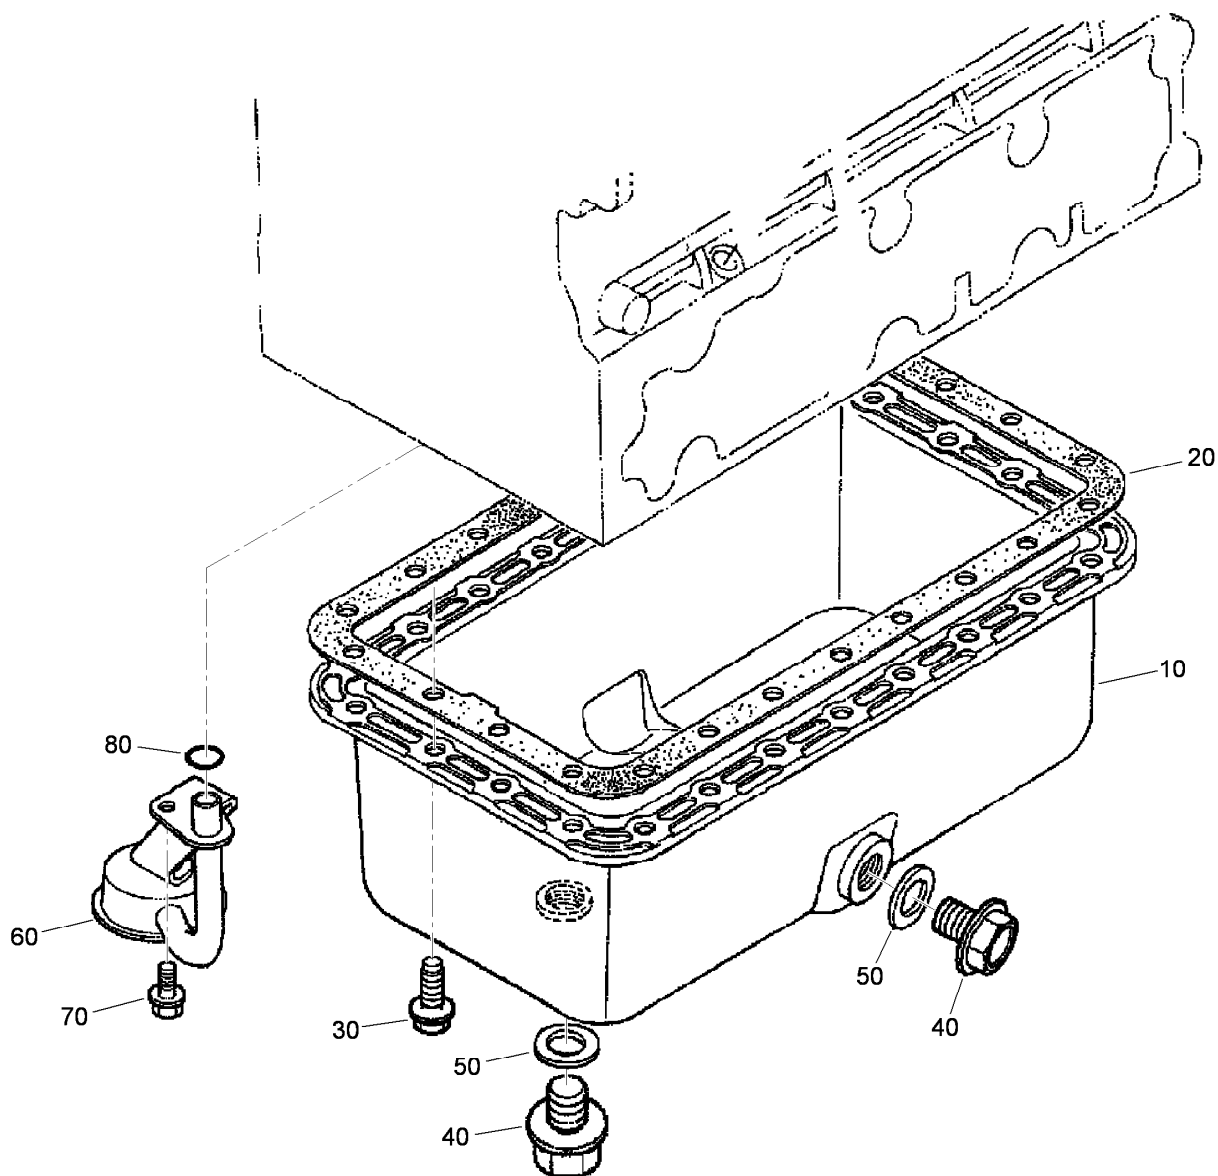 

Oil Pan Assembly


Ref.	Part Number	Qty.	Description
10	115-8501	1	Oil Pan ASM
20	108-7053	1	Gasket-Pan, Oil
30	115-8502	24	Bolt-Flange
40	98-9686	2	Plug-Drain
50	98-9399	2	Gasket
60	115-8503	1	Filter-Oil
70	115-8504	1	Bolt-Flange
80	108-7054	1	O-Ring

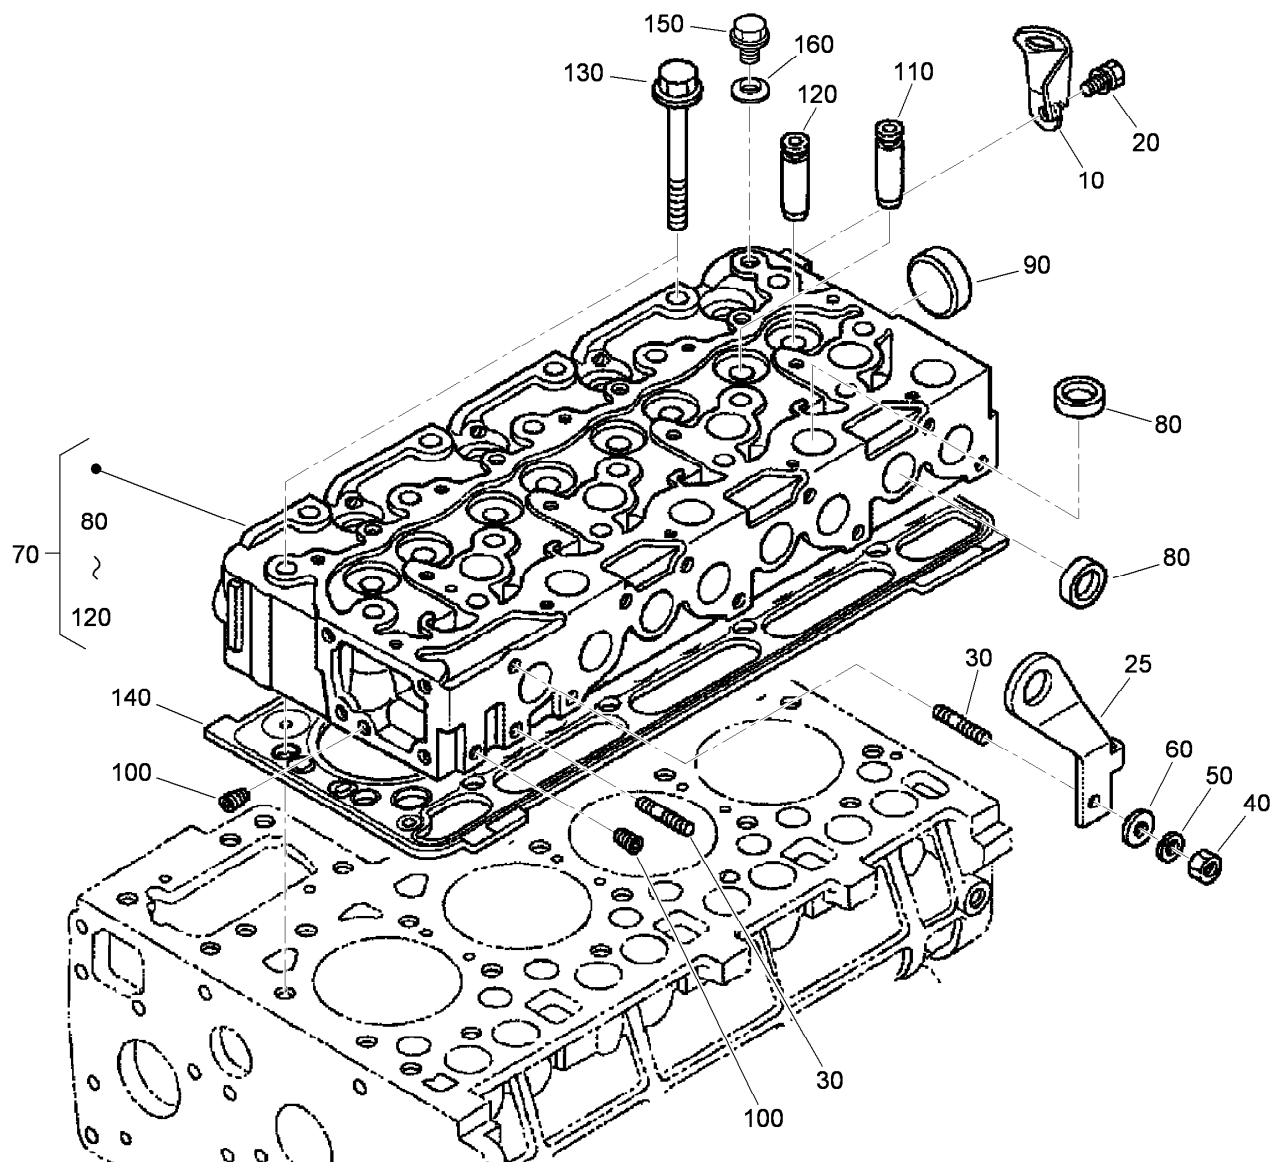 

Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
10	98-7530	1	Hook-Engine
20	98-7526	1	Bolt
25	115-8505	1	Hook
30	115-8506	2	Stud
40	98-7534	1	Nut
50	105-2893	1	Washer-Spring
60	98-7536	1	Washer-Plain
70	115-8507	1	Head-Cylinder
80	98-7538	12	Cap-Sealing
90	98-7539	1	Cap-Sealing
100	98-7540	2	Plug
110	98-7541	4	Guide-Valve, Intake
120	115-8508	4	Guide-Valve, Exhaust


Ref.	Part Number	Qty.	Description
130	98-7543	18	Bolt-Head, Cylinder
140	115-8647	1	Gasket-Head, Cylinder (1.15Mm)
140	115-8509	1	Gasket-Head, Cylinder (1.20Mm)
140	115-8510	1	Gasket-Head, Cylinder (1.25Mm)
140	115-8511	1	Gasket-Head, Cylinder (1.30Mm)
140	115-8512	1	Gasket-Head, Cylinder (1.35Mm)
150	98-7762	1	Plug
160	98-7763	1	Washer-W/Rubber

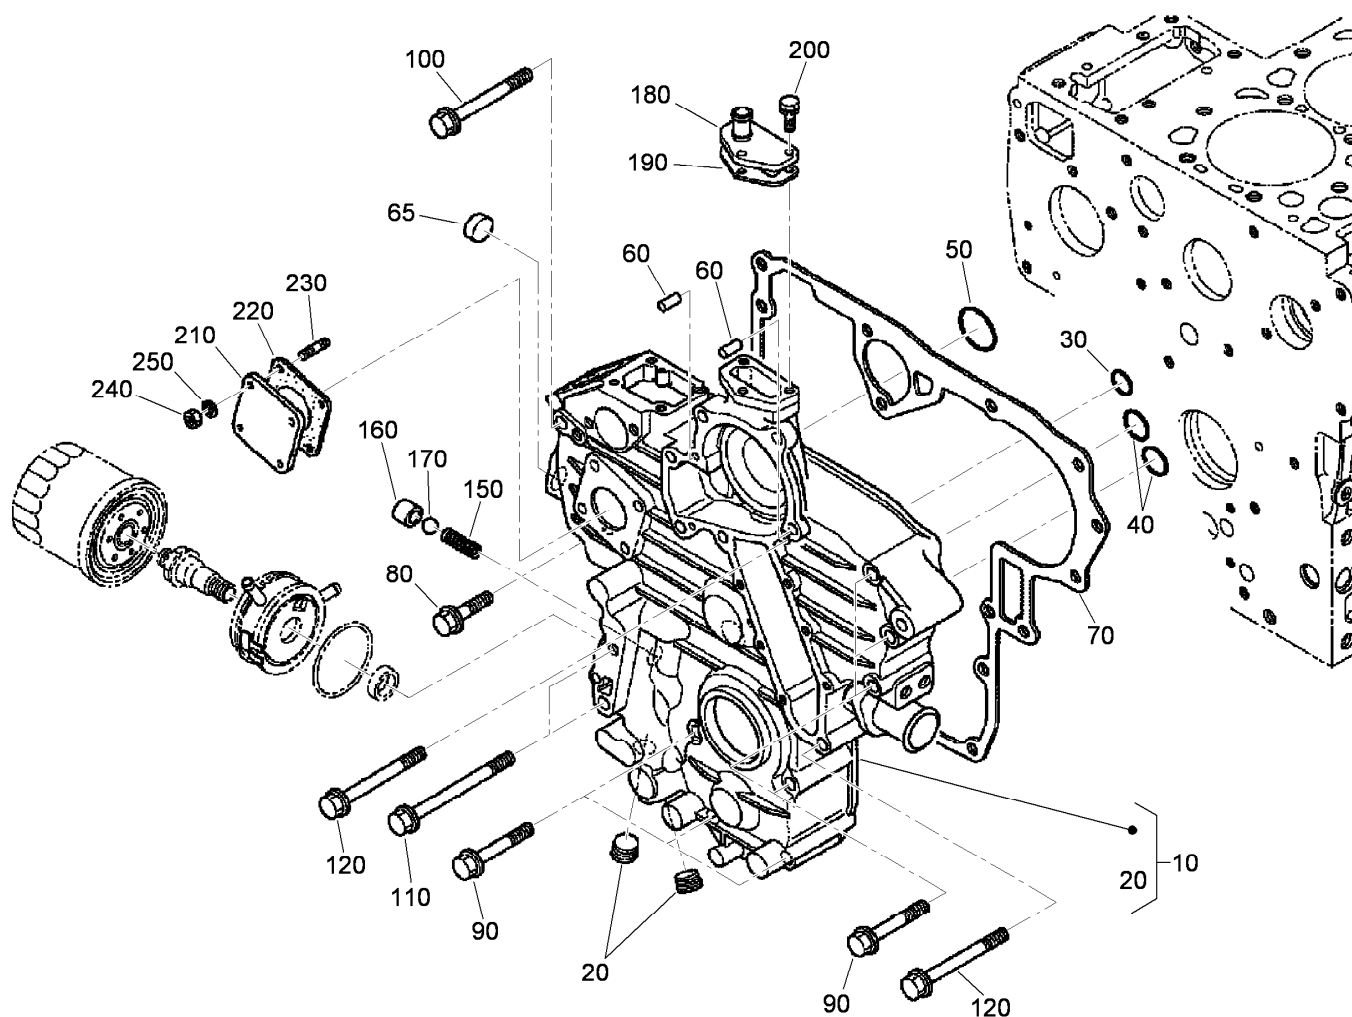 

Gear Case Assembly

Ref.	Part Number	Qty.	Description
10	115-8513	1	Gear Case ASM
20	98-9598	2	Plug
30	107-0104	1	O-Ring
40	115-8514	2	O-Ring
50	107-0106	1	O-Ring
60	98-7504	2	Pin-Straight
65	115-8515	1	Cap-Sealing
70	115-8516	1	Gasket-Case, Gear
80	108-7085	1	Bolt-Flange
90	115-8517	7	Bolt-Flange
100	115-8518	1	Bolt-Flange
110	115-8519	2	Bolt-Flange


Ref.	Part Number	Qty.	Description
120	115-8520	4	Bolt-Flange
150	98-7563	1	Spring
160	98-7564	1	Seat-Valve
170	98-7565	1	Ball
180	98-7566	1	Flange-Return, Water
190	115-8521	1	Gasket-Flange, Return
200	98-7568	3	Bolt
210	98-7569	1	Cover
220	115-8522	1	Gasket-Meter, Hour
230	98-7571	4	Stud
240	98-7572	4	Nut
250	98-9367	4	Washer-Spring

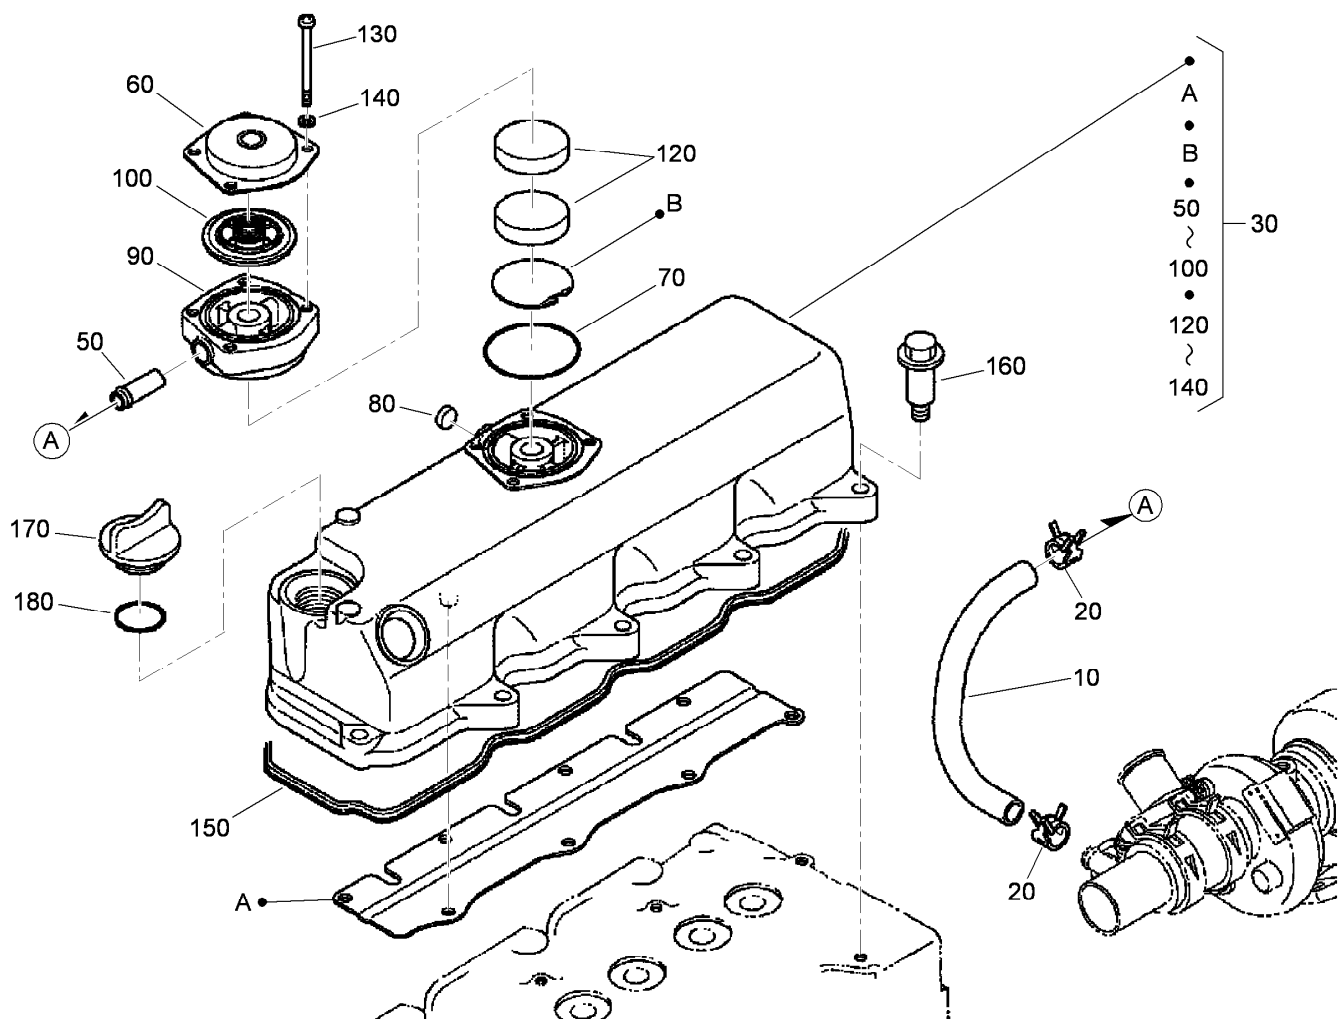 

Cylinder Head Cover Assembly


Ref.	Part Number	Qty.	Description
10	115-8523	1	Tube-Breather, Turbo
20	115-8524	2	Clamp-Hose
30	115-8525	1	Cylinder Head Cover ASM
50	98-7766	1	Pipe-Return, Water
60	110-3714	1	Cover-Breather
70	108-7061	1	O Ring-Breather
80	115-3042	1	Cap-Sealing
90	115-8526	1	Spacer-Breather

Ref.	Part Number	Qty.	Description
100	110-3715	1	Valve-Breather
120	98-9493	2	Element-Breather
130	115-3044	4	Screw-Pan Head
140	100-2204	4	Washer-Spring
150	108-7062	1	Gasket-Cover, Head
160	108-7063	10	Bolt
170	98-9449	1	Plug-Filler, Oil
180	108-7064	1	O-Ring

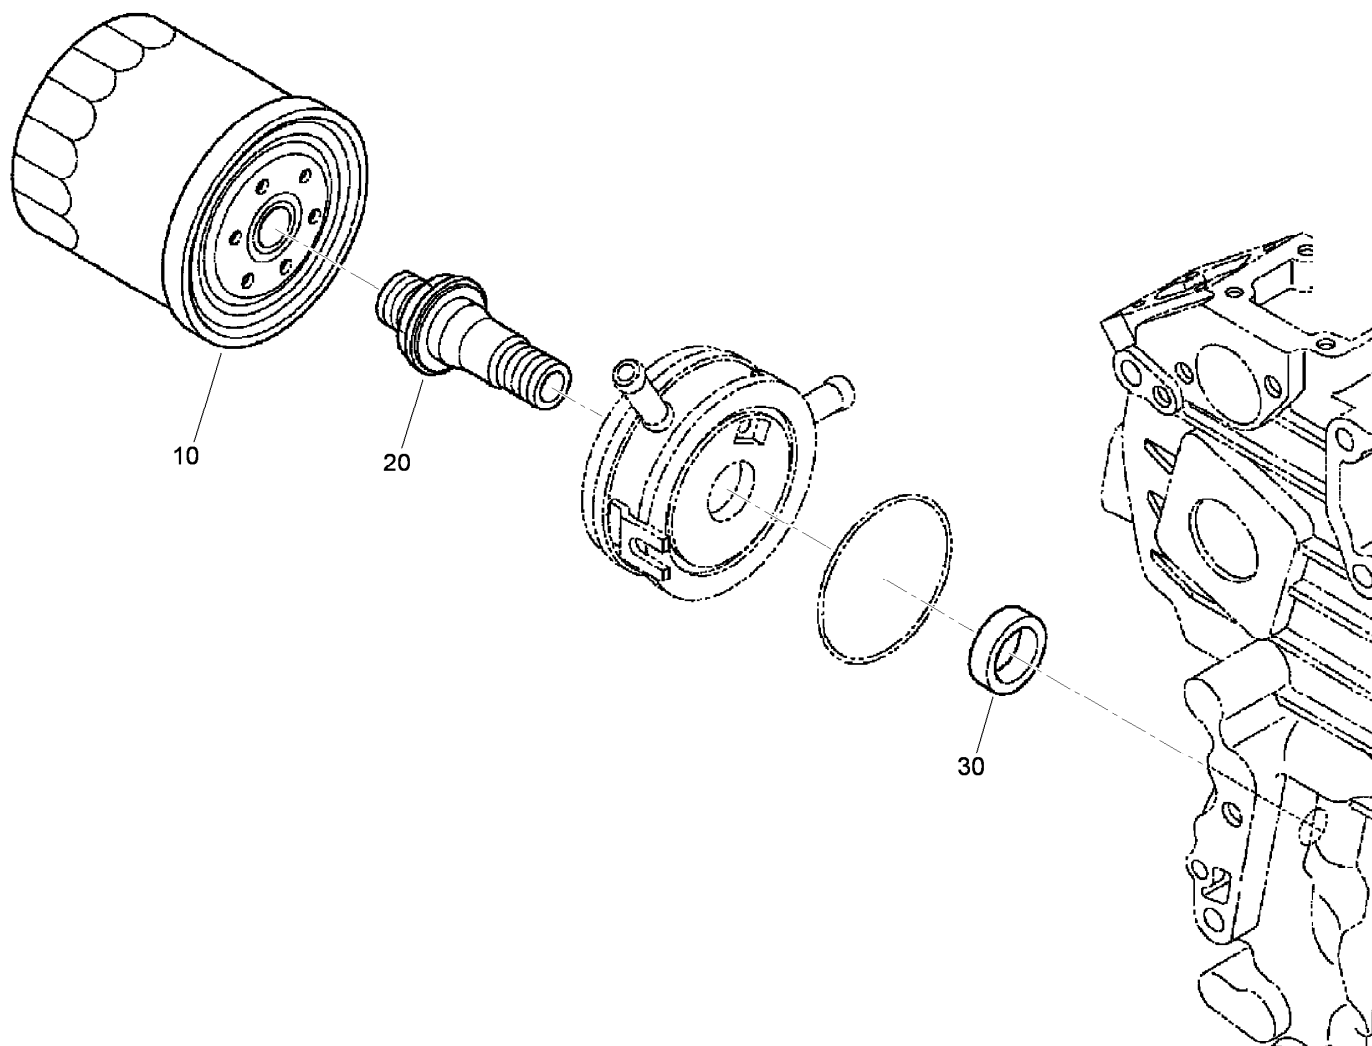 


Oil Filter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	104-5169	1	Filter-Oil
20	115-8528	1	Connector
30	115-8529	1	Collar

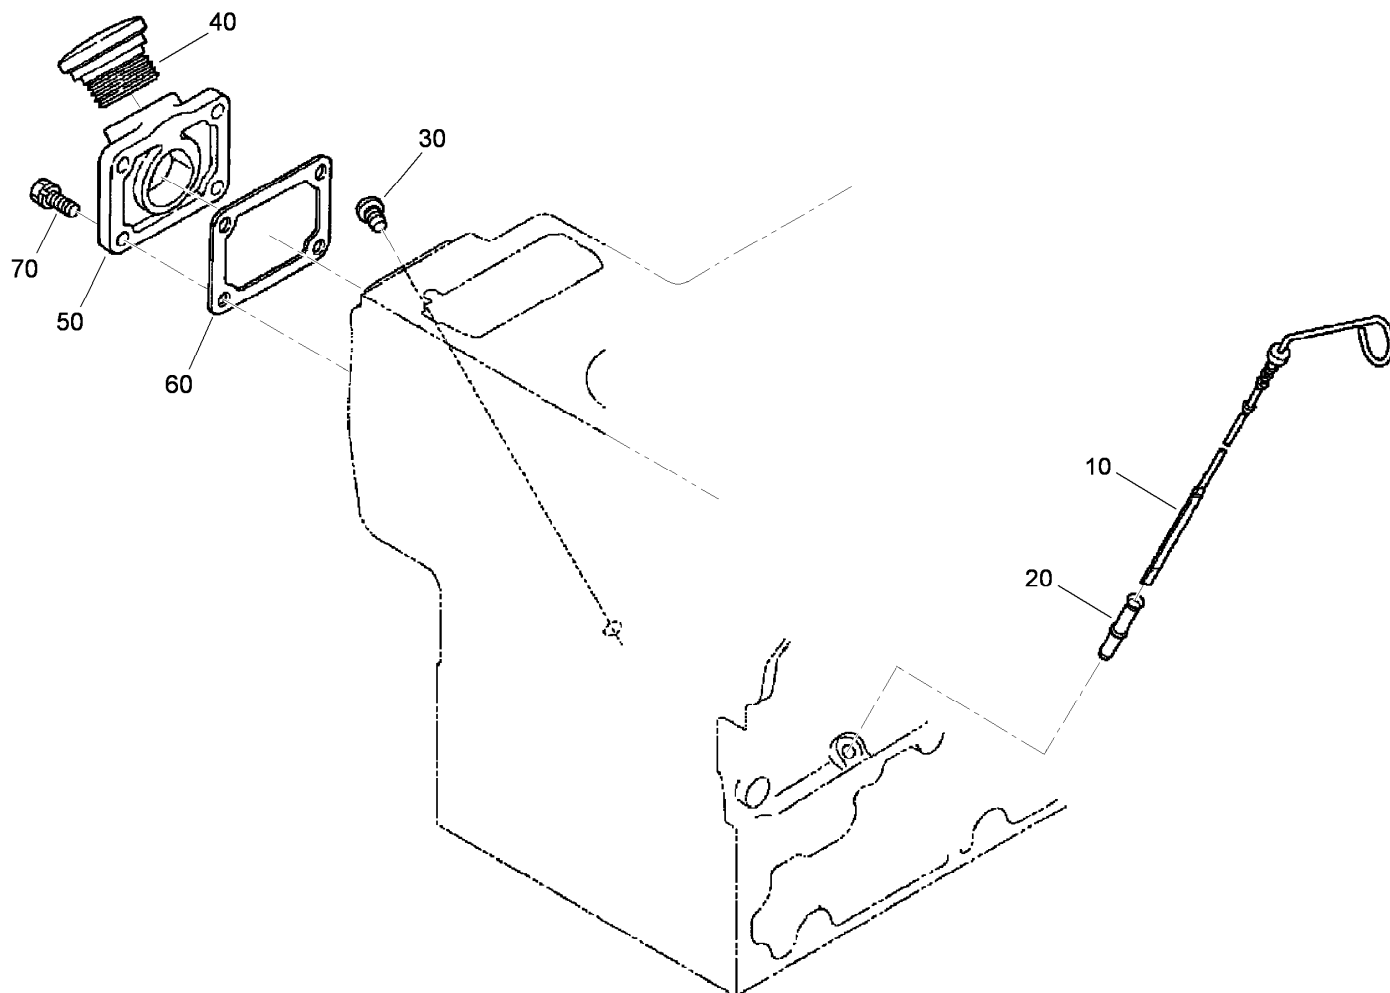 


Dipstick and Guide Assembly

Ref.	Part Number	Qty.	Description
10	115-8530	1	Gauge-Oil
20	105-4580	1	Guide-Gauge, Oil
30	110-3720	1	Plug-Gauge, Oil
40	115-8531	1	Plug-Filler, Oil
50	115-8532	1	Flange-Filler, Oil
60	98-7604	1	Gasket-Cover, Pump
70	98-7605	4	Bolt

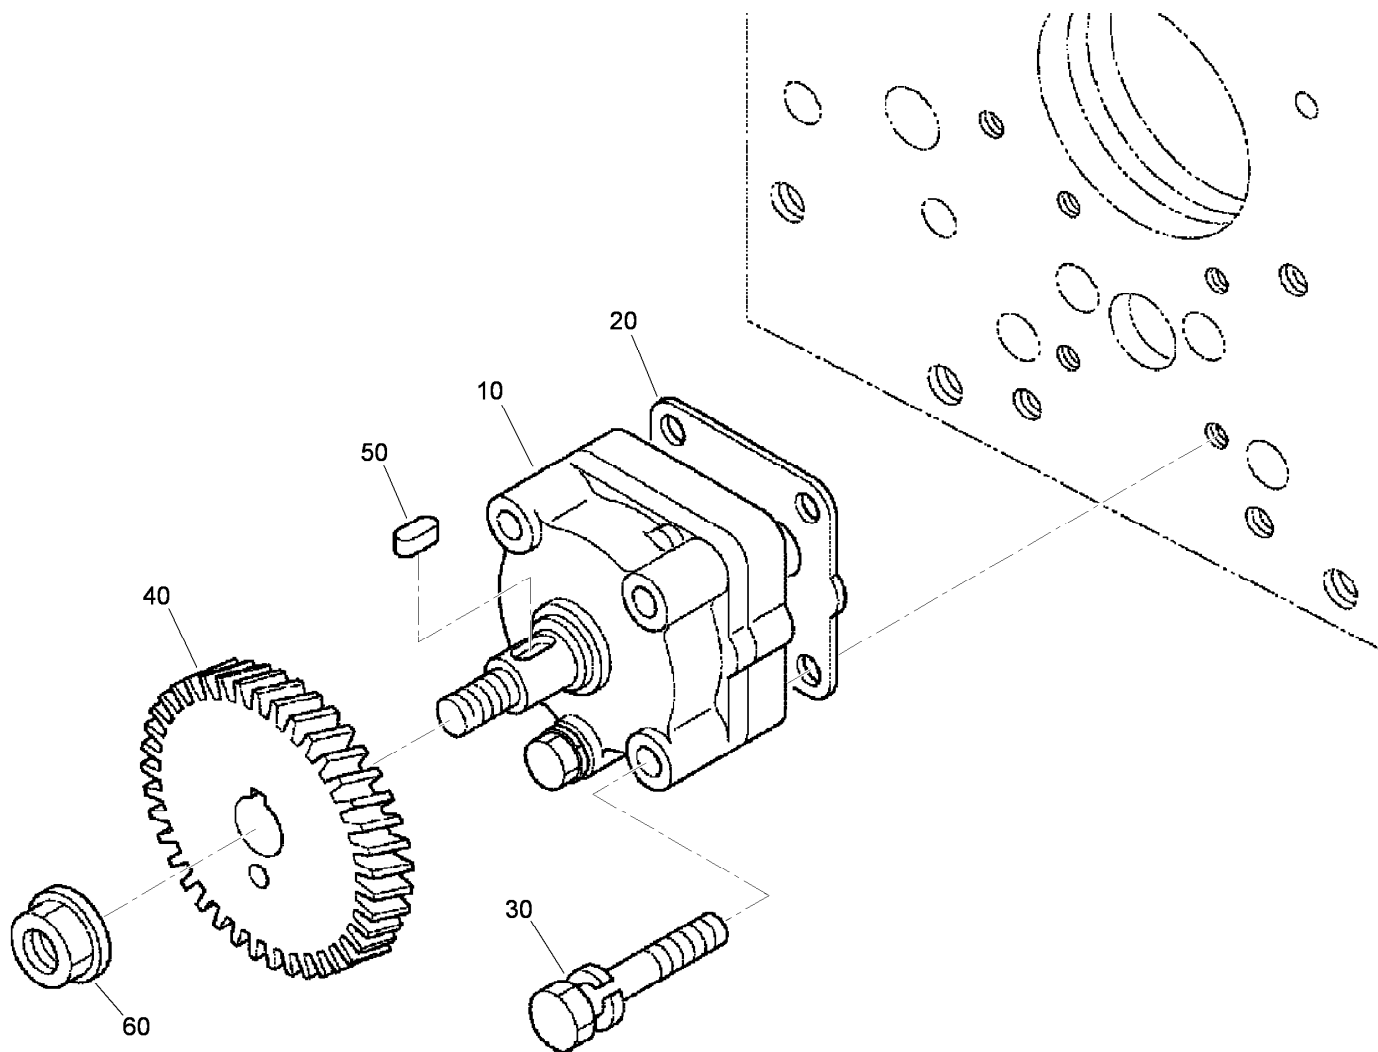 

Oil Pump Assembly


Ref.	Part Number	Qty.	Description
10	98-7512	1	Oil Pump ASM
20	98-7513	1	Gasket-Pump, Oil
30	105-3797	4	Bolt
40	115-8533	1	Gear-Drive, Oil Pump
50	98-7517	1	Key-Feather
60	98-7518	1	Nut-Flange

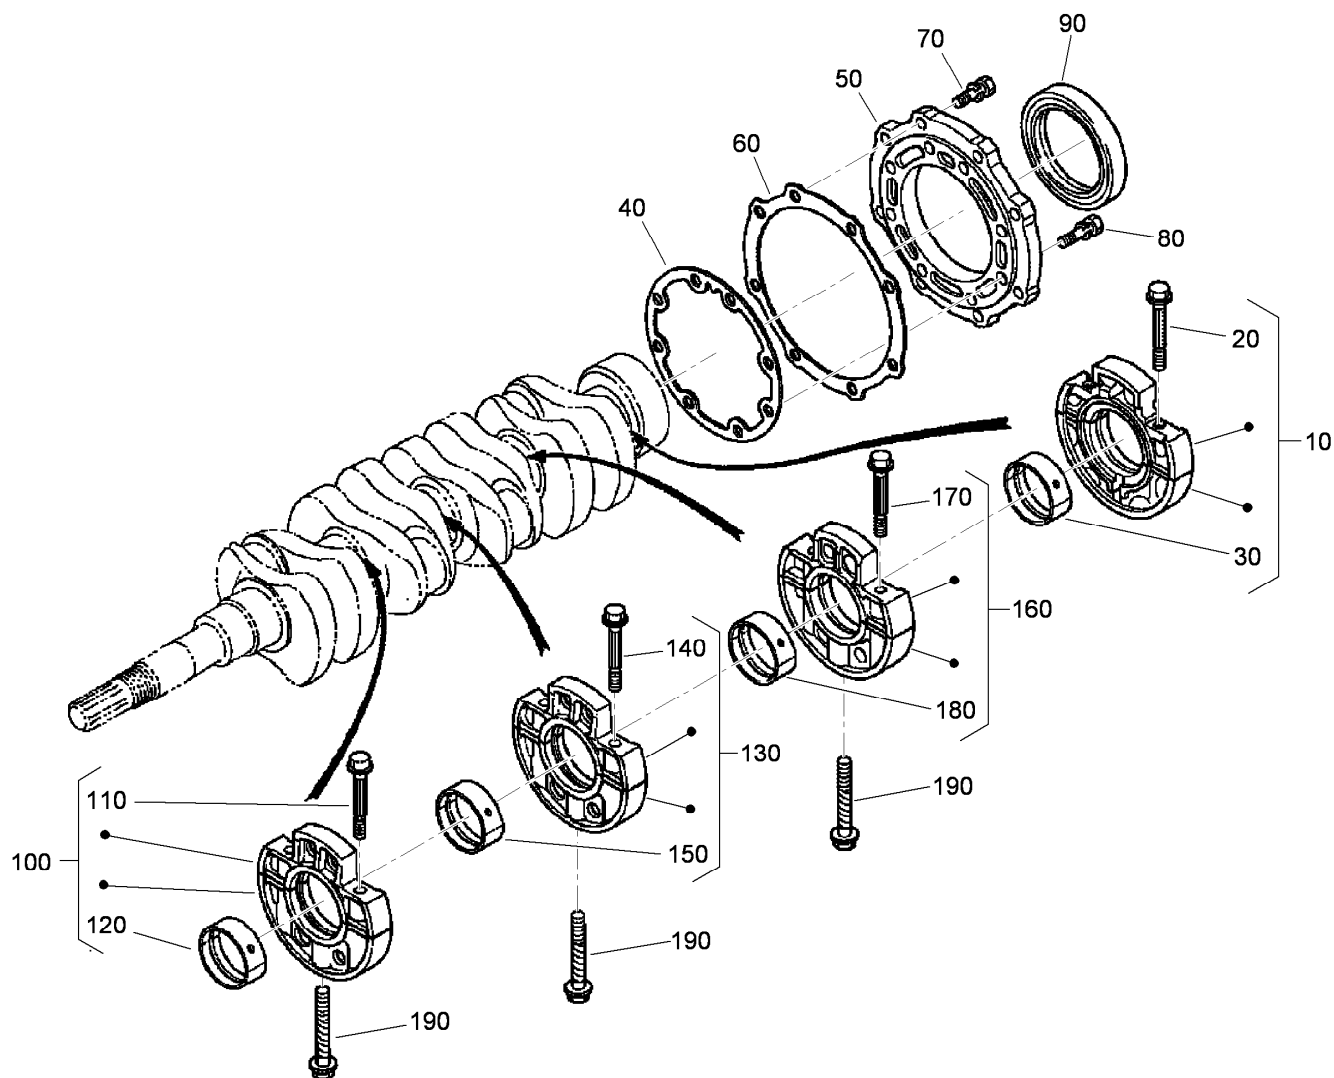 

Main Bearing Case Assembly


Ref.	Part Number	Qty.	Description
10	115-8534	1	Wheel Bearing Case ASM
20	108-7066	2	Bolt-Case, Bearing
30	108-7067	1	Metal-Crankshaft (STD)
30	108-7068	1	Metal-Crankshaft (-0.20Mm)
30	108-7069	1	Metal-Crankshaft (-0.40Mm)
40	108-7070	1	Gasket-Case, Bearing
50	117-8843	1	Cover-Case, Bearing
60	98-7437	1	Gasket-Case Cover, Bearing
70	98-7438	8	Bolt
80	98-7439	8	Bolt
90	108-7072	1	Seal-Oil
100	115-8535	1	Main Bearing Case ASM
110	108-7066	2	Bolt-Case, Bearing

Ref.	Part Number	Qty.	Description
120	108-7067	1	Metal-Crankshaft (STD)
120	108-7068	1	Metal-Crankshaft (-0.20Mm)
120	108-7069	1	Metal-Crankshaft (-0.40Mm)
130	108-7074	1	Main Bearing Case ASM
140	108-7066	2	Bolt-Case, Bearing
150	108-7069	1	Metal-Crankshaft (-0.40Mm)
150	108-7068	1	Metal-Crankshaft (-0.20Mm)
150	108-7067	1	Metal-Crankshaft (STD)
160	115-8536	1	Main Bearing Case ASM
170	108-7066	2	Bolt-Case, Bearing
180	108-7067	1	Metal-Crankshaft (STD)
180	108-7068	1	Metal-Crankshaft (-0.20Mm)
180	108-7069	1	Metal-Crankshaft (-0.40Mm)
190	98-7444	3	Bolt-Case, Bearing

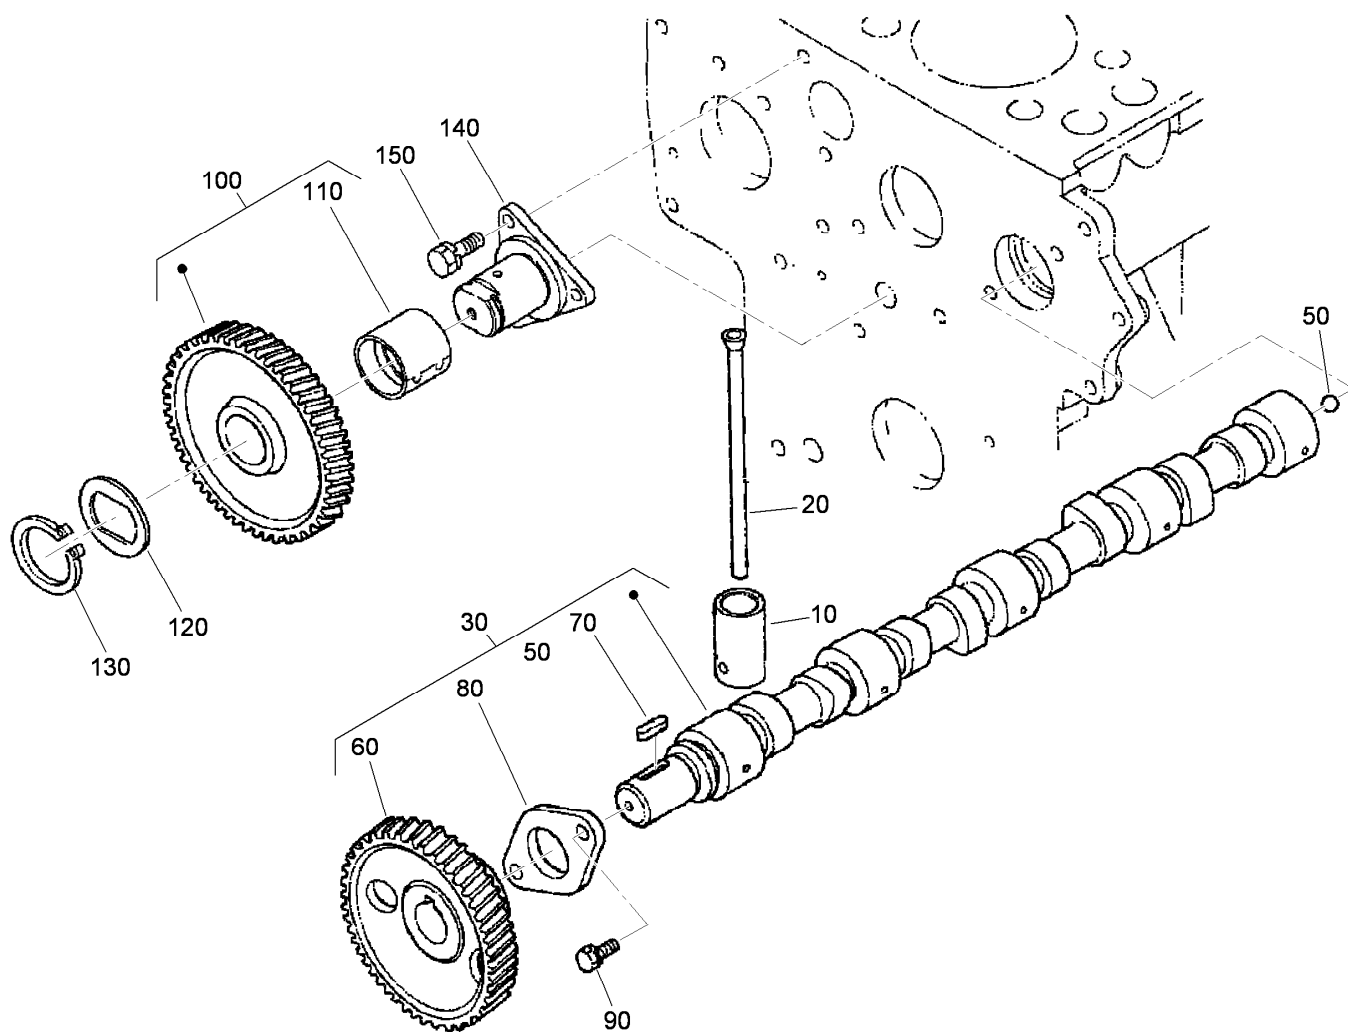 

Cam Shaft and Idle Gear Assembly


Ref.	Part Number	Qty.	Description
10	98-7445	8	Tappet
20	115-8537	8	Rod-Push
30	115-8538	1	Camshaft ASM
50	110-3729	1	Ball
60	115-8539	1	Gear-Cam
70	98-7451	1	Key-Feather
80	98-7452	1	Stopper-Camshaft
90	98-7453	2	Bolt
100	107-0109	1	Gear-Idler
110	107-0110	1	Bushing-Gear, Idler
120	107-0111	1	Collar
130	107-0112	1	Circlip-External
140	115-8646	1	Shaft-Gear, Idler
150	98-7453	3	Bolt

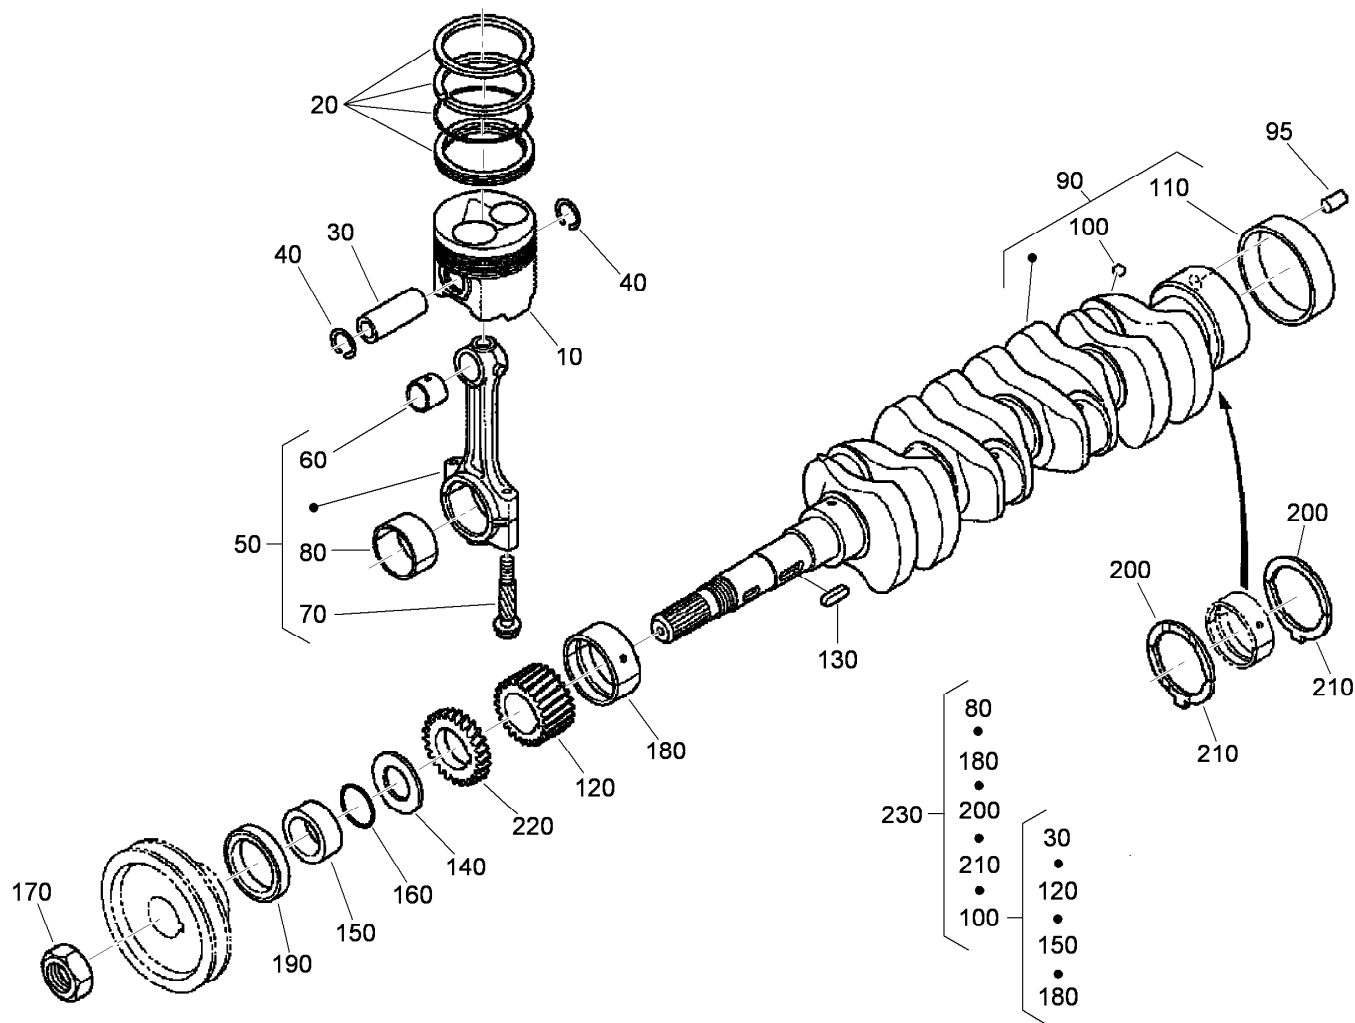 

Piston and Crankshaft Assembly


Ref.	Part Number	Qty.	Description
10	115-8540	4	Piston
10	115-8541	4	Piston
20	115-8543	1	Piston Ring ASM
20	115-8542	4	Piston Ring ASM
30	115-8544	4	Pin-Piston
40	112-7002	8	Circlip
50	115-8545	4	Connecting Rod ASM
60	115-8546	4	Bushing-Pin, Piston
70	98-7468	8	Bolt-Rod, Connecting
80	98-7469	4	Metal-Crankpin (STD)
80	115-8548	4	Metal-Crankpin (-0.40Mm)
80	115-8547	4	Metal-Crankpin (-0.20Mm)
90	115-8549	1	*obs* Crankshaft
95	115-8550	1	Pin-Straight
100	110-3729	4	Ball
110	98-7474	1	Sleeve-Crankshaft
120	115-8551	1	Gear-Crank
130	115-8552	1	Key-Feather
140	98-7476	1	Slinger-Oil

Ref.	Part Number	Qty.	Description
150	98-7477	1	Collar-Crankshaft
160	98-7478	1	O-Ring
170	98-7479	1	Nut-Crankshaft
180	108-7075	1	Metal-Crankshaft (STD)
180	108-7076	1	Metal-Crankshaft (-0.20Mm)
180	108-7077	1	Metal-Crankshaft (-0.40Mm)
190	98-7480	1	Seal-Oil
200	108-7078	2	Metal-Side (STD)
200	108-7079	2	Metal-Side (+0.20Mm)
200	108-7080	2	Metal-Side (+0.40Mm)
210	108-7081	2	Metal-Side (STD)
210	108-7082	2	Metal-Side (+0.20Mm)
210	108-7083	2	Metal-Side (+0.40Mm)
220	115-8553	1	Gear-Drive, Oil Pump
230	115-8554	1	Engine Metal Kit
230	115-8555	1	Engine Metal Kit (-0.20Mm/+0.20Mm)
230	115-8556	1	Engine Metal Kit (-0.40Mm/+0.40Mm)

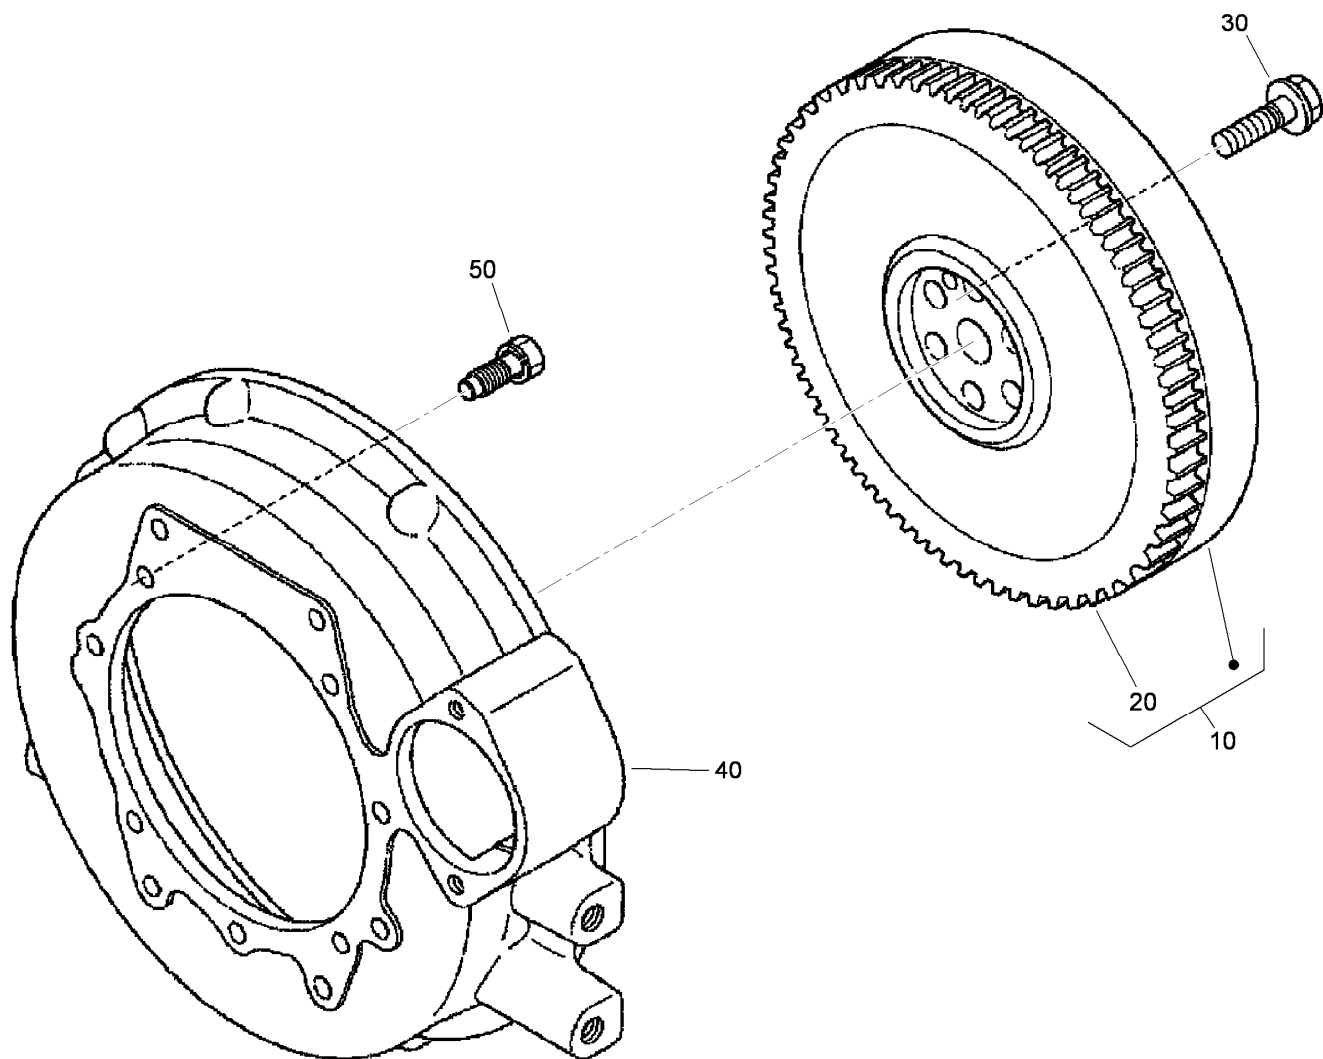 

Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	115-8557	1	Flywheel ASM
20	115-8558	1	Gear-Ring
30	112-8408	6	Bolt-Flywheel
40	115-8559	1	Housing-Flywheel
50	98-7885	11	Bolt

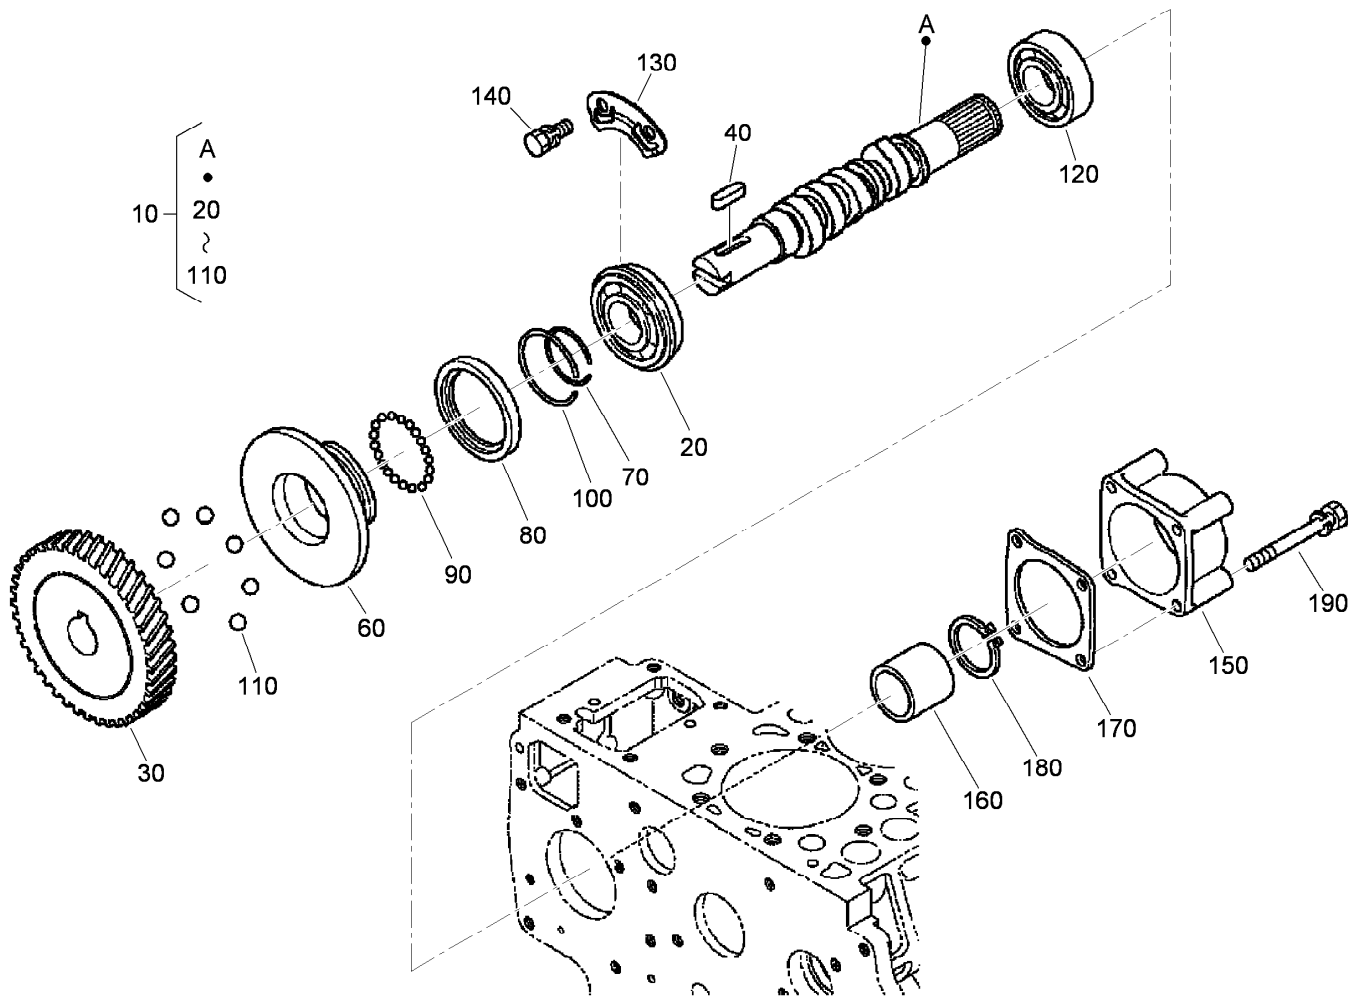 

Fuel Camshaft and Governor Shaft Assembly

Ref.	Part Number	Qty.	Description
10	115-8560	1	Fuel Camshaft ASM
20	115-8561	1	Bearing-Ball
30	98-7574	1	Gear-Pump, Injection
40	98-7575	1	Key-Feather
60	98-7577	1	Sleeve-Governor
70	98-7578	1	Circlip-Sleeve, Governor
80	98-7579	1	Case-Ball, Governor
90	98-7580	39	Ball
100	98-7581	1	Circlip


Ref.	Part Number	Qty.	Description
110	98-7582	7	Ball
120	115-8562	1	Bearing-Ball
130	115-8563	1	Stopper-Fuel Camshaft
140	100-9195	2	Bolt
150	115-8564	1	Cover-Camshaft, Fuel
160	115-8565	1	Collar
170	115-8566	1	Gasket
180	98-7589	1	Circlip-External
190	98-7590	4	Bolt

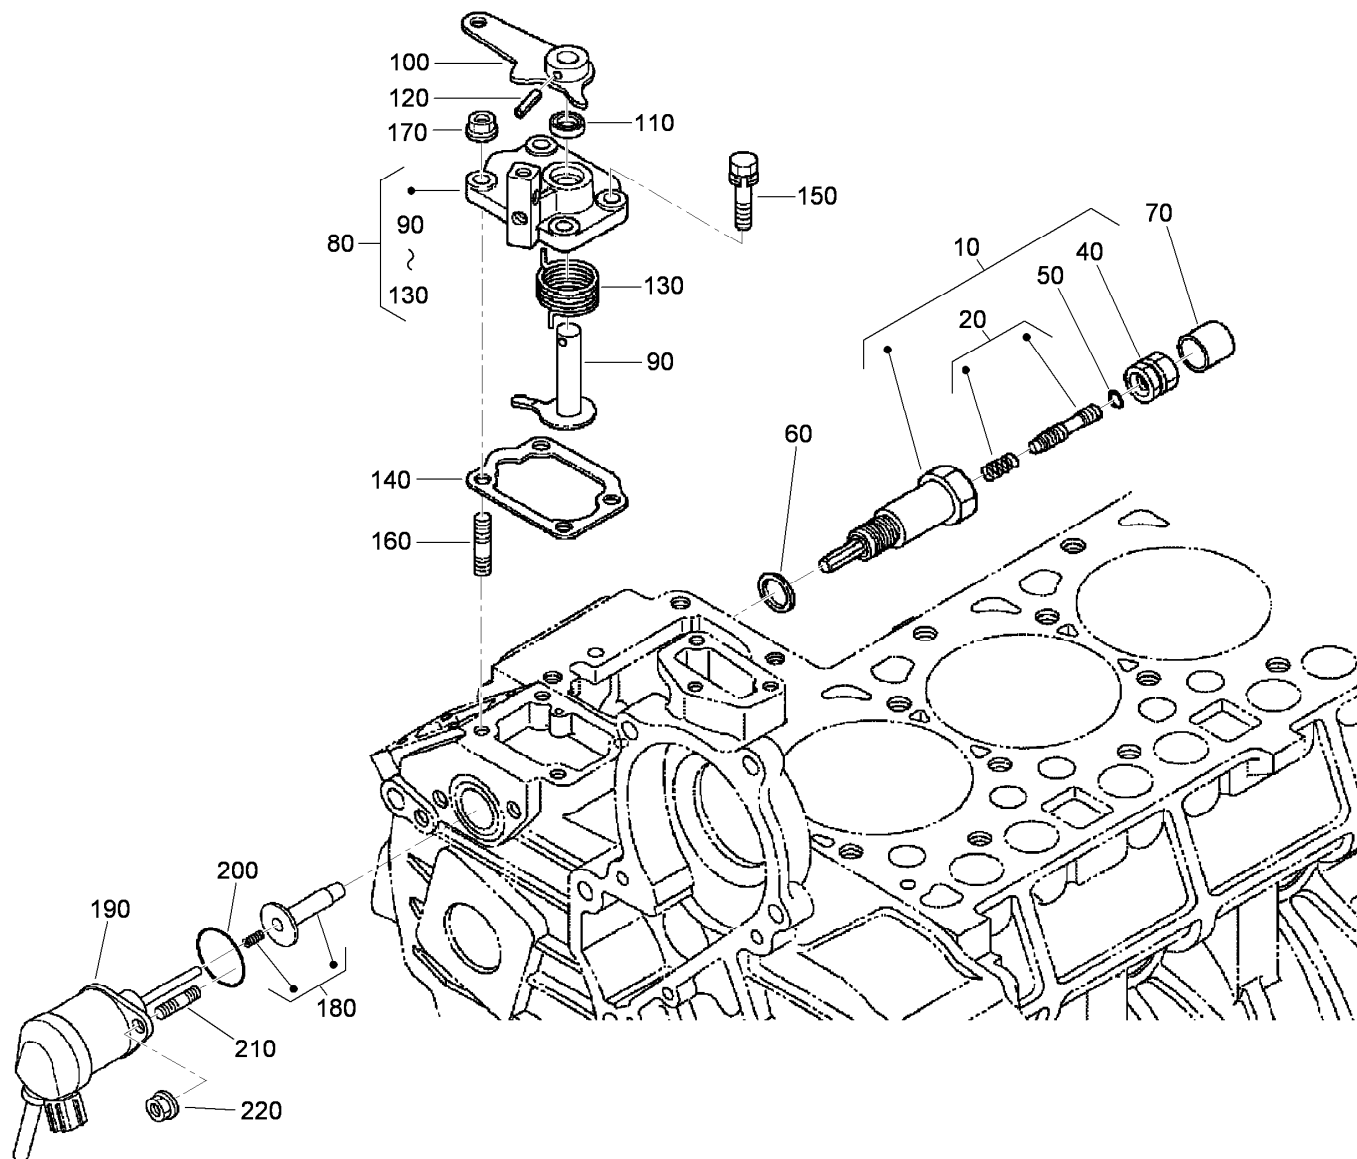 

Idle Apparatus and Stop Solenoid Assembly


Ref.	Part Number	Qty.	Description
10	115-8567	1	Apparatus-Idling
20	115-8568	1	Adjustment Bolt ASM
40	115-8569	1	Nut-Spring
50	115-8570	1	O-Ring
60	115-8571	1	Gasket
70	115-8572	1	Cap
80	115-8573	1	Engine Stop Lever ASM
90	115-8574	1	Lever-Stop
100	115-8575	1	Lever-Stop, Engine
110	115-8576	1	Seal-Oil
120	98-7602	1	Pin-Spring

Ref.	Part Number	Qty.	Description
130	115-8593	1	Spring-Return
140	115-8578	1	Gasket-Plate
150	98-7568	2	Bolt
160	98-7571	2	Stud
170	100-2203	2	Nut-Flange
180	115-8579	1	Guide-Solenoid
190	115-8580	1	Solenoid ASM
200	110-3762	1	O-Ring
210	98-7571	2	Stud
220	100-2203	2	Nut-Flange

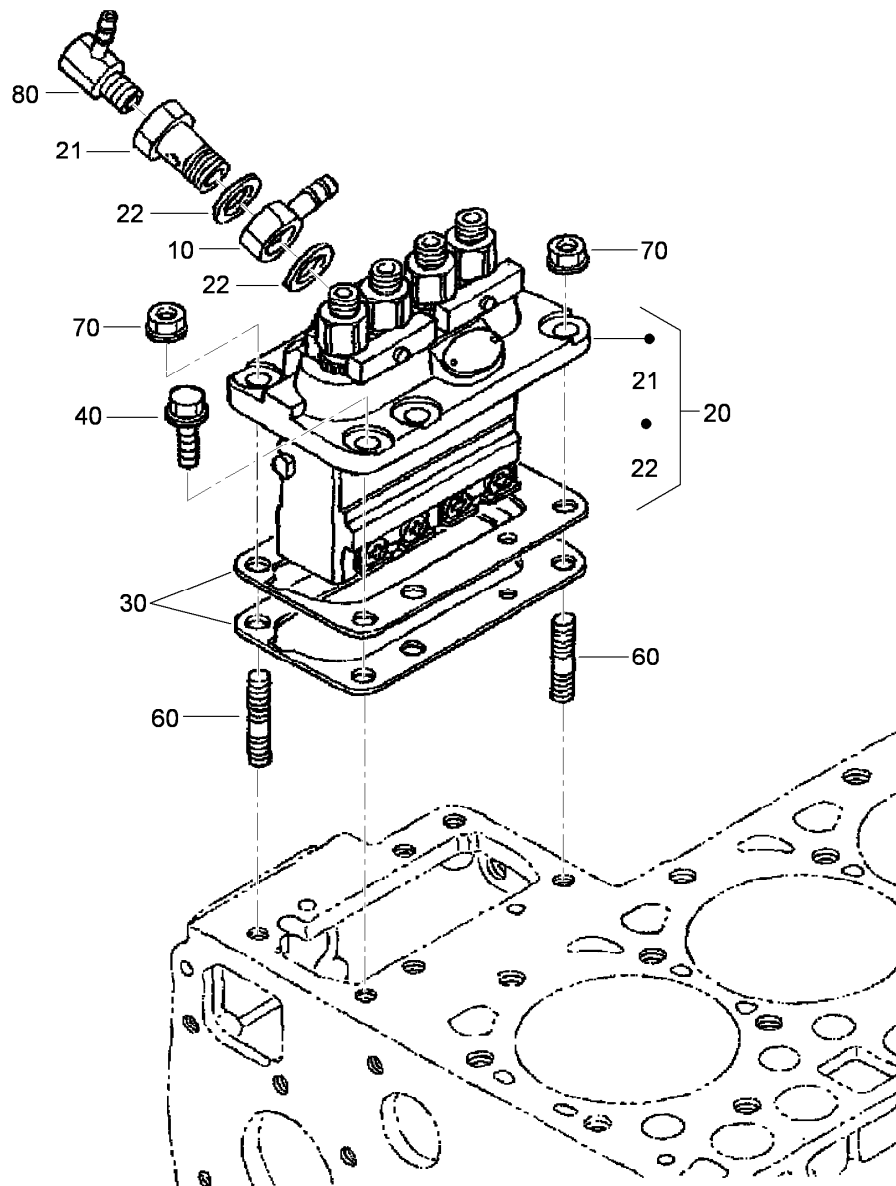 


Injection Pump Assembly

Ref.	Part Number	Qty.	Description
10	98-7617	1	Joint
20	115-8581	1	Injection Pump ASM
21	98-7635	1	Screw
22	98-7636	2	Gasket
30	115-8582	1	Shim-Pump, Injection (0.175Mm)
30	98-7607	1	Shim-Pump, Injection (0.200Mm)
30	107-0147	1	Shim-Pump, Injection (0.250Mm)
30	107-0148	1	Shim-Pump, Injection (0.300Mm)
40	115-8583	4	Bolt-Flange
60	100-1558	2	Stud
70	112-2492	2	Nut-Flange
80	107-4300	1	Orifice ASM

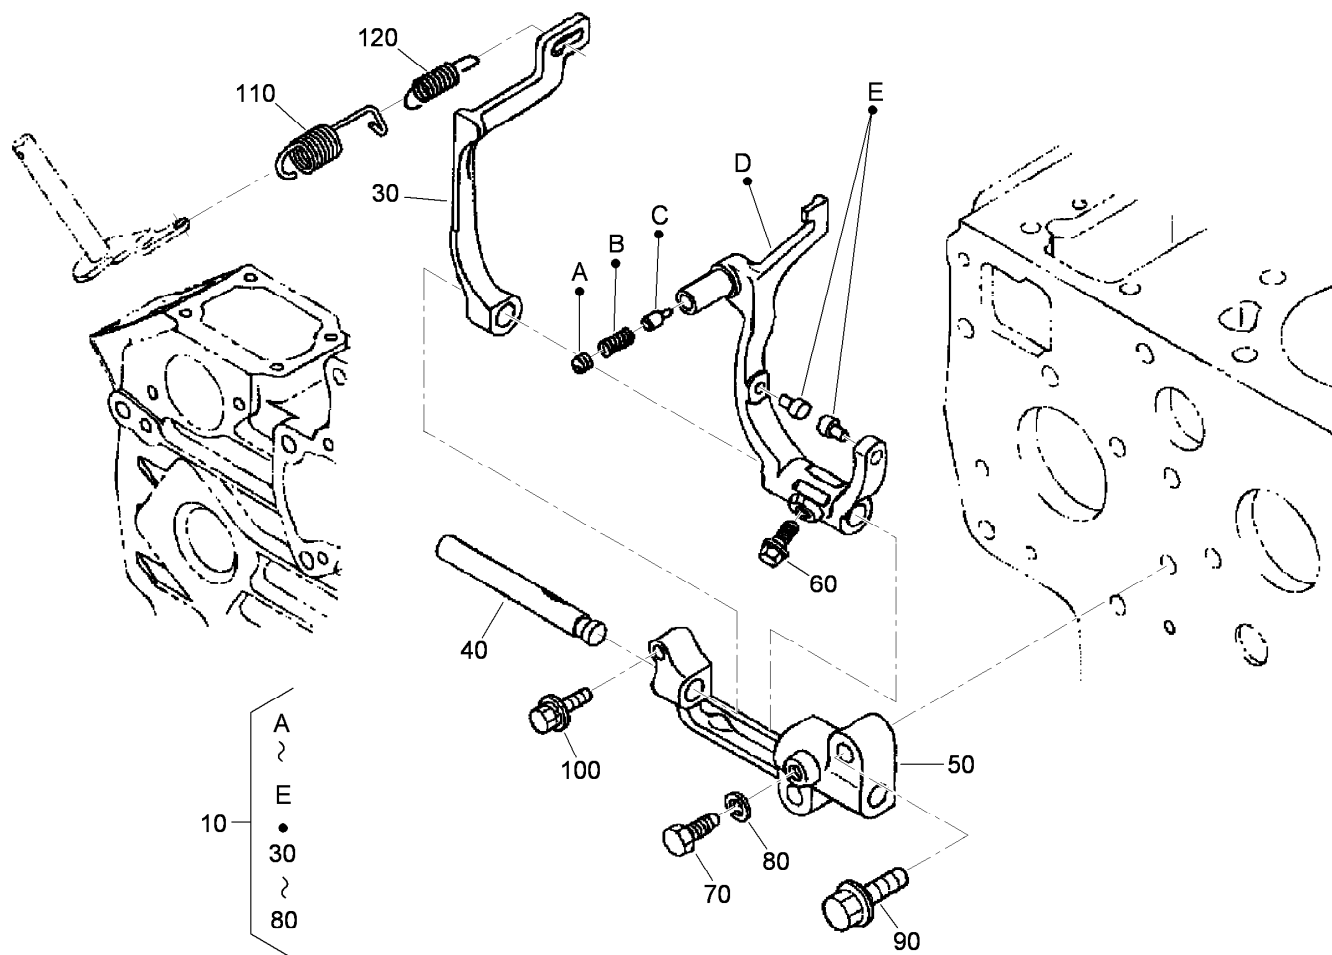 


Governor Assembly

Ref.	Part Number	Qty.	Description
10	115-8584	1	Fork Lever ASM
30	115-8585	1	Lever-Fork
40	107-0120	1	Shaft-Lever, Fork
50	98-7643	1	Holder-Lever, Fork
60	107-0116	1	Bolt-Flange
70	98-7644	1	Bolt
80	98-9367	1	Washer-Spring
90	108-7085	2	Bolt-Flange
100	108-7086	1	Bolt
110	115-8586	1	Spring-Governor
120	115-8587	1	Spring-Governor

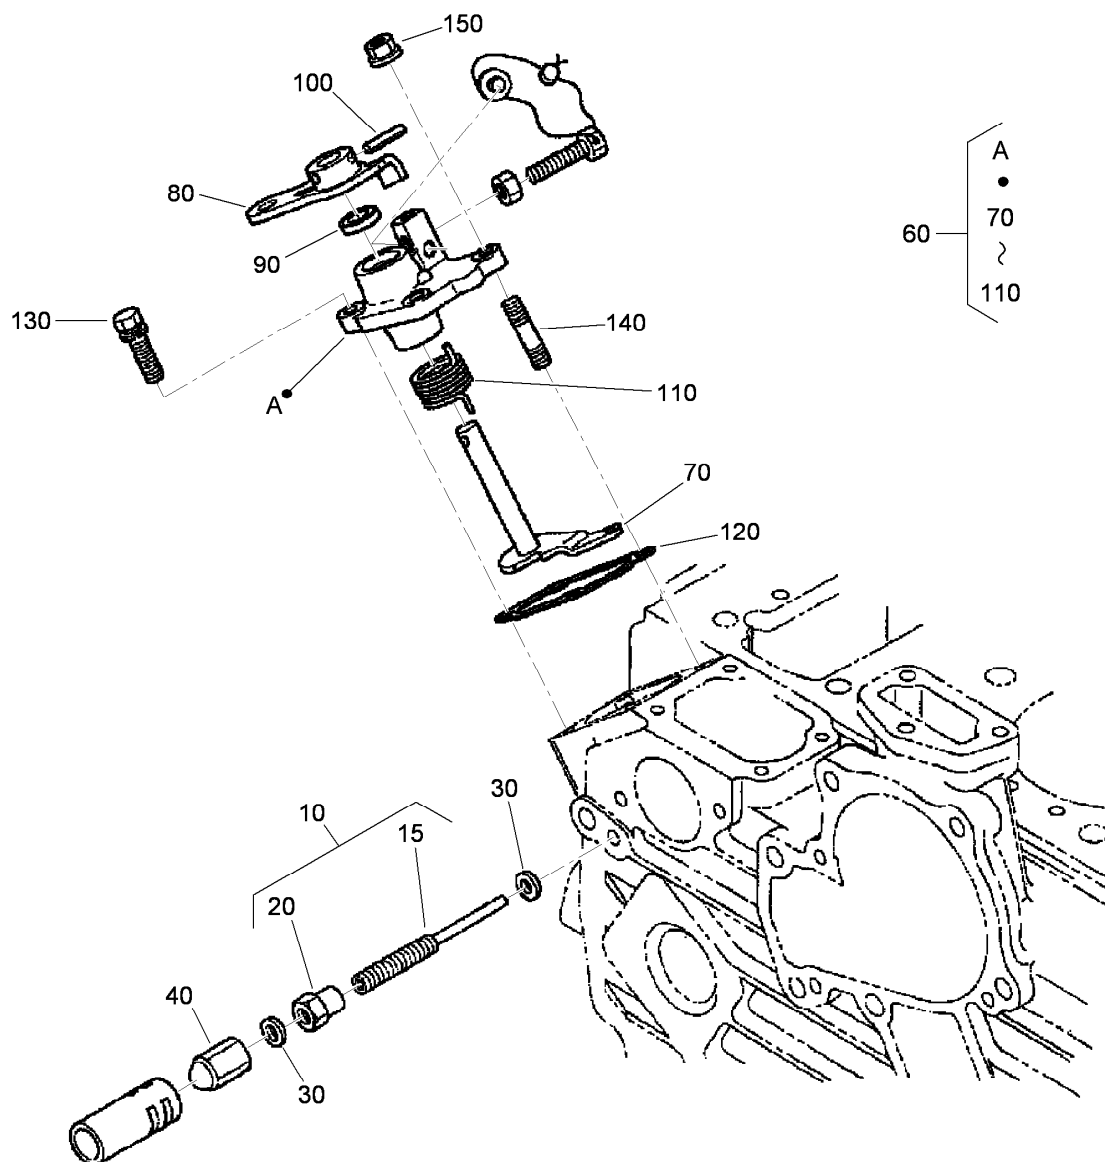 

Speed Control Plate Assembly


Ref.	Part Number	Qty.	Description
10	107-0132	1	Adjustable Bolt ASM
15	115-8588	1	Bolt-Adjusting
20	98-7653	1	Nut
30	98-7654	2	Gasket
40	98-7655	1	Nut-Cap
60	115-8589	1	Control Plate ASM
70	115-8590	1	Lever-Governor
80	115-8591	1	Lever-Control, Speed
90	115-8576	1	Seal-Oil
100	98-7602	1	Pin-Spring
110	115-8593	1	Spring-Return
120	115-8578	1	Gasket-Plate
130	98-7568	2	Bolt
140	98-7571	2	Stud
150	100-2203	2	Nut-Flange

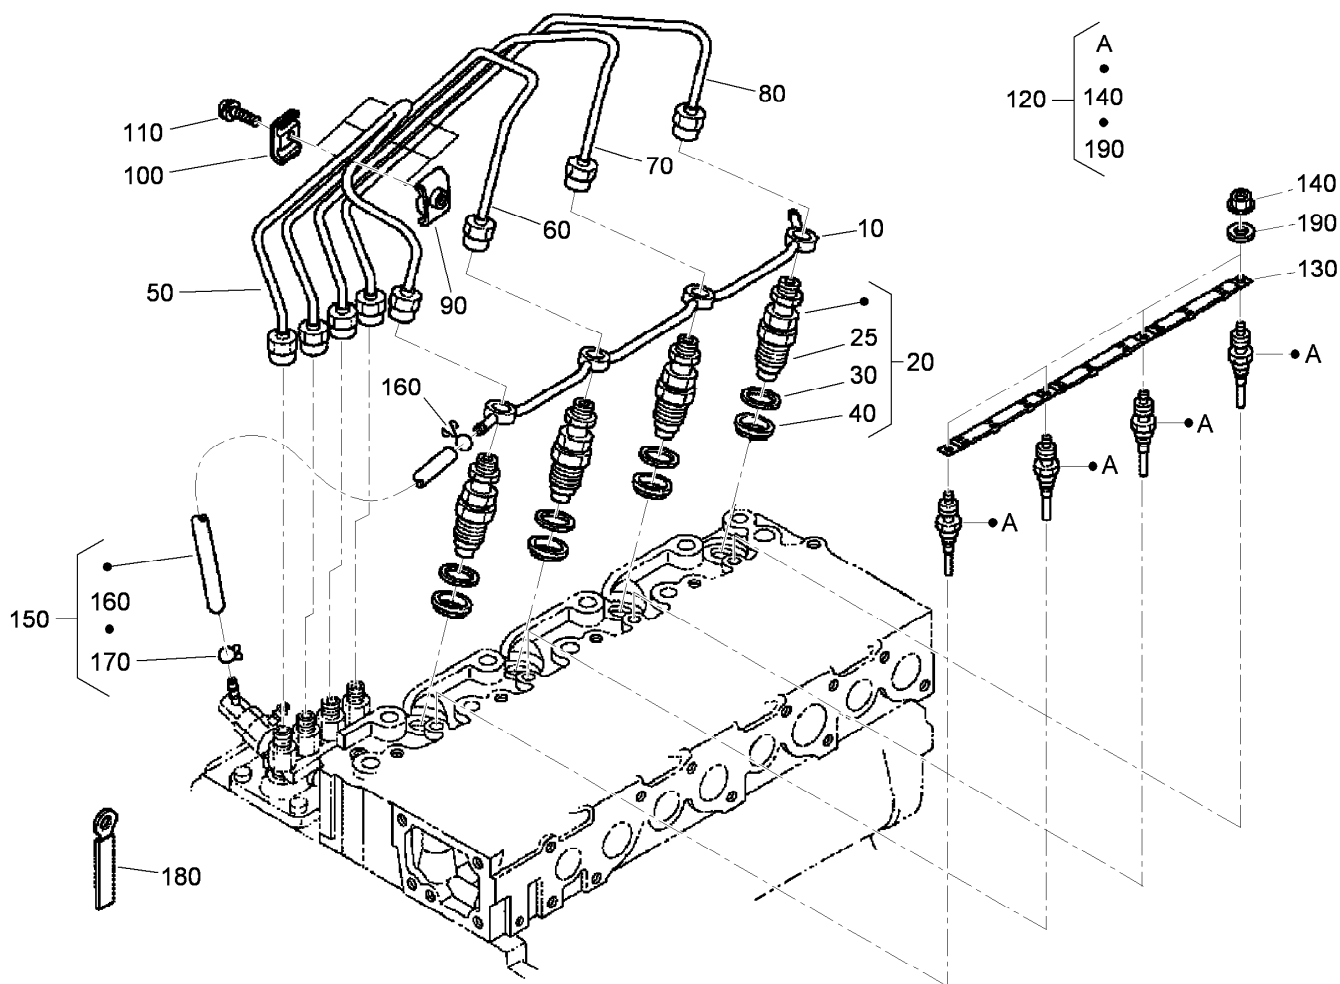 

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	100-9213	1	Overflow Pipe ASM
20	100-9214	4	Nozzle Holder Kit
25	100-9215	4	Piece-Nozzle
30	98-7676	4	Gasket
40	98-7677	4	Seal-Heat
50	100-9216	1	Pipe-Injection
60	100-9217	1	Pipe-Injection
70	100-9218	1	Pipe-Injection
80	100-9219	1	Pipe-Injection
90	98-7682	3	Clamp-Pipe

Ref.	Part Number	Qty.	Description
100	98-7683	3	Clamp-Pipe
110	98-9364	3	Screw (With Washer)
120	98-7685	4	Plug-Glow
130	98-7686	1	Cord-Plug, Glow
140	99-8377	4	Nut-Flange
150	98-7670	1	Overflow Pipe ASM
160	98-7671	1	Clip-Pipe
170	115-8595	1	Clip-Pipe
180	98-7673	1	Clamp-Cord
190	99-8378	4	Washer-Plain

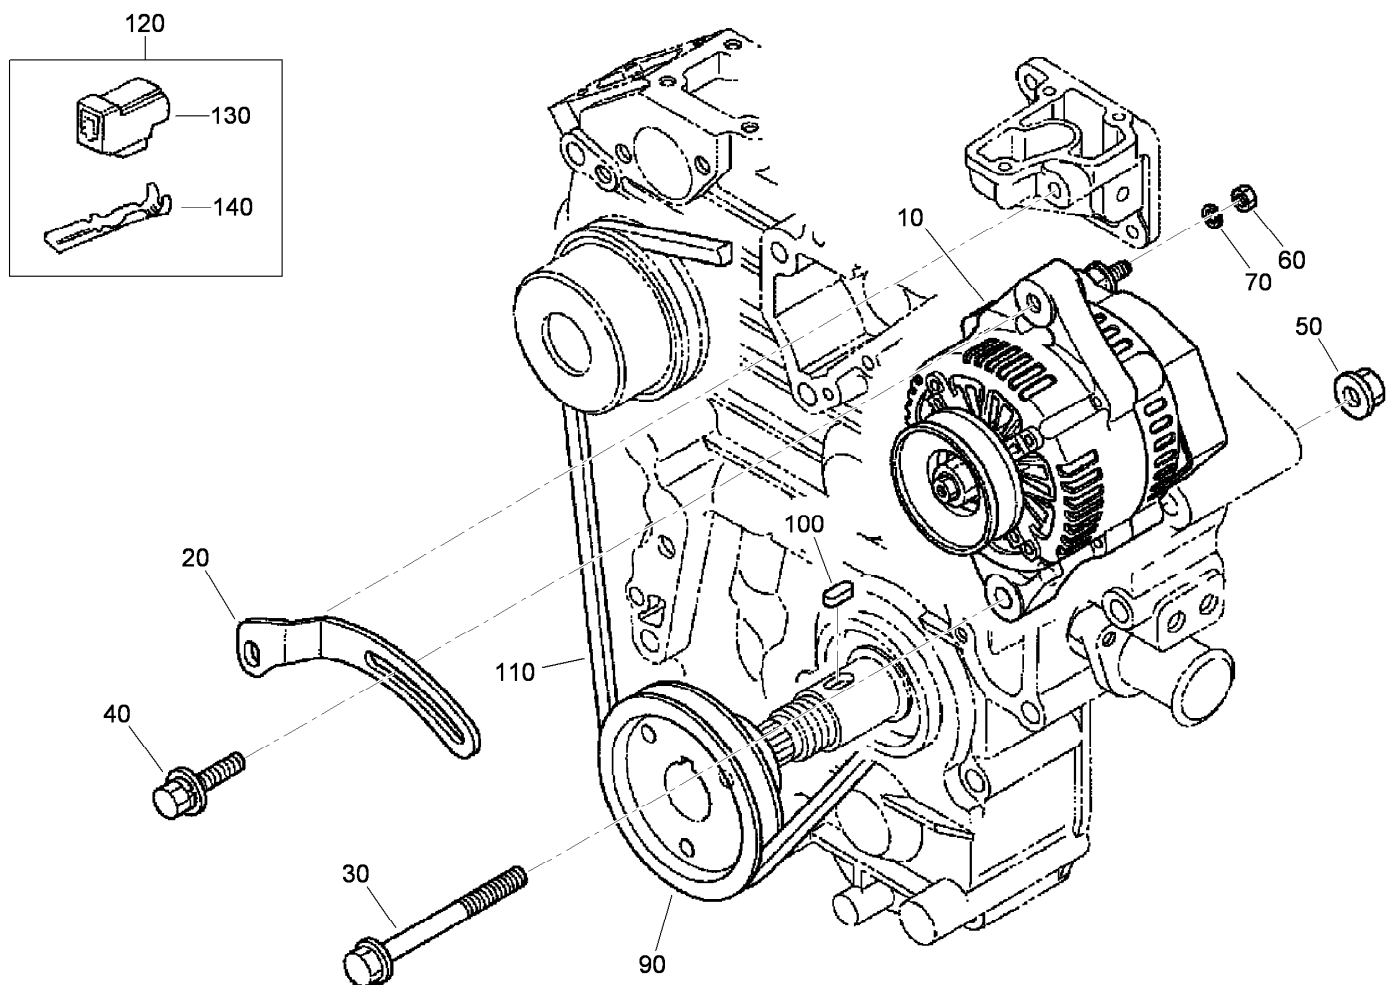 

Alternator and Pulley Assembly


Ref.	Part Number	Qty.	Description
10	98-7693	1	Alternator ASM
20	105-2872	1	Bracket-Alternator
30	115-8596	1	Bolt-Flange
40	108-7088	1	Bolt
50	115-8597	1	Nut-Flange
60	98-7572	1	Nut
70	98-7699	1	Washer-Spring
90	115-8598	1	Pulley-Drive, Fan
100	98-7451	1	Key-Feather
110	115-8599	1	Belt-V
120	115-8600	1	Coupler ASM
130	115-8601	1	Connector
140	115-8602	2	Terminal

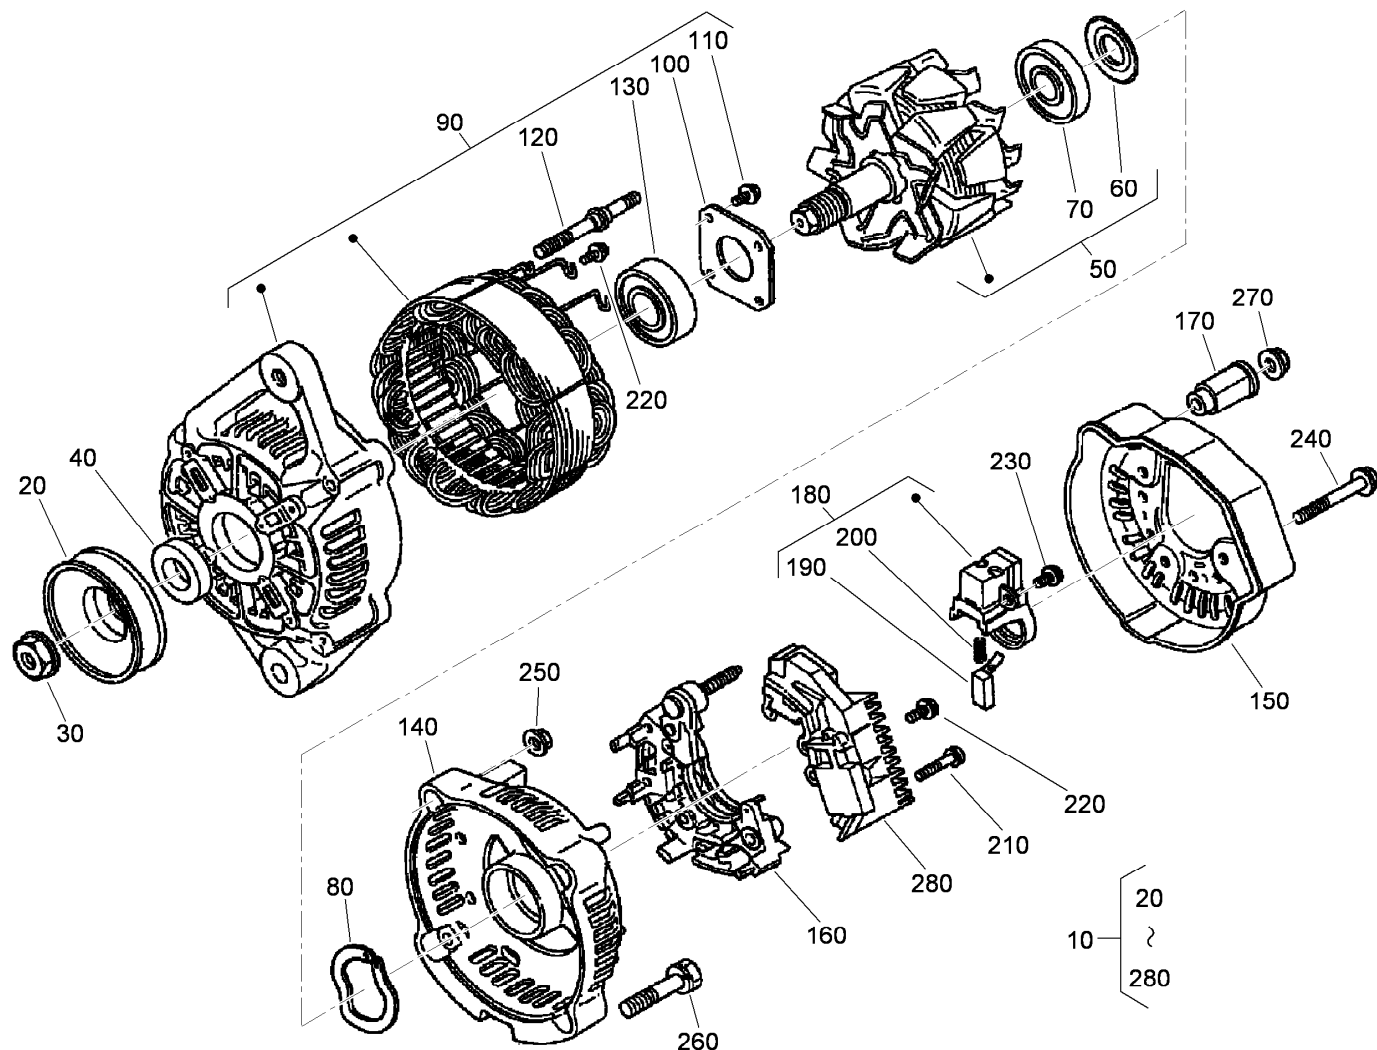 

Alternator Component Part Assembly


Ref.	Part Number	Qty.	Description
10	98-7693	1	Alternator ASM
20	98-7707	1	Pulley-Alternator
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	107-0137	1	Bearing-Ball
140	98-7719	1	Frame-End

Ref.	Part Number	Qty.	Description
150	107-0140	1	Cover-End
160	98-7721	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	110-3799	1	Regulator ASM

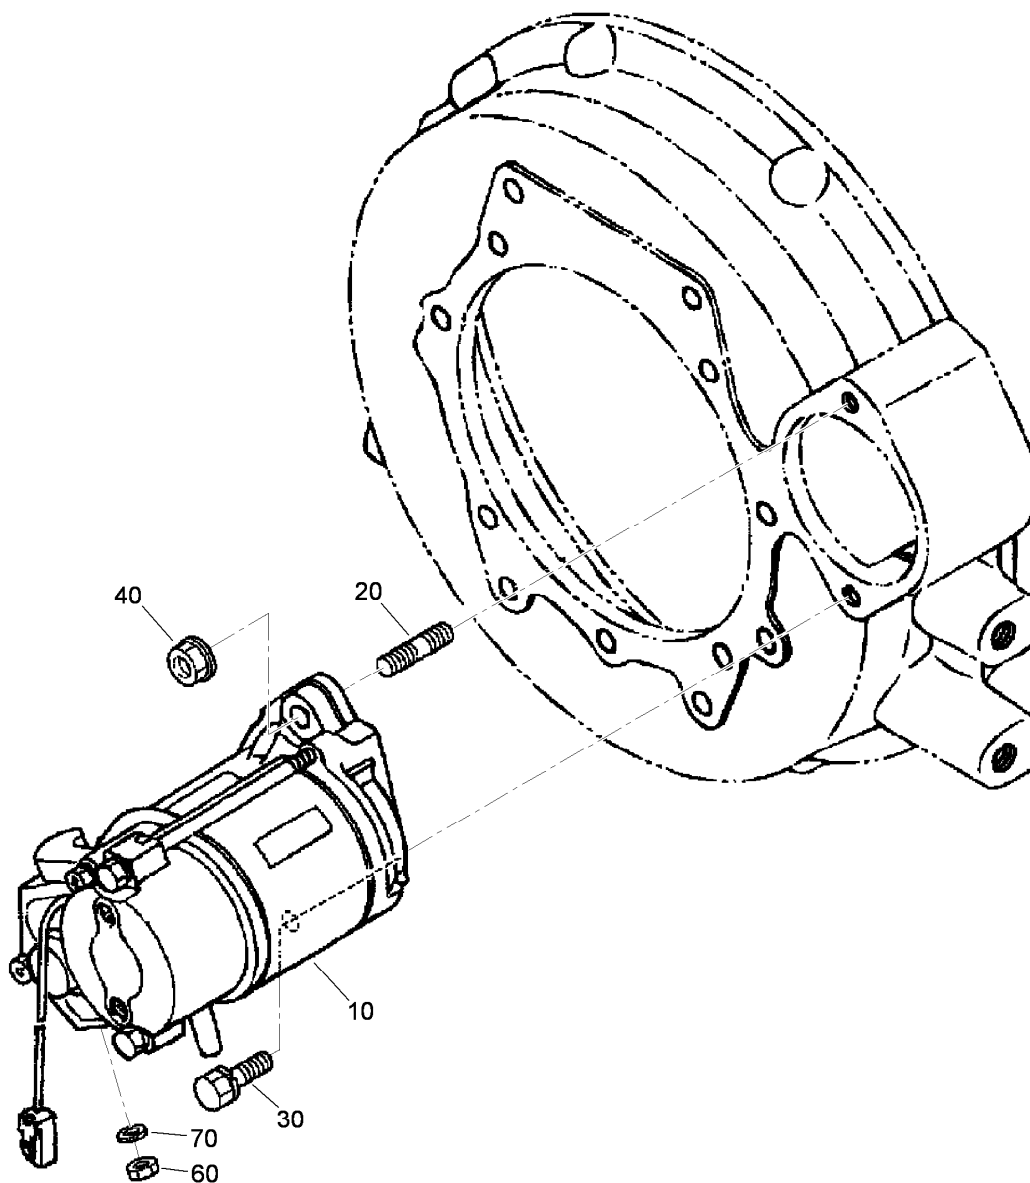 

Starter Assembly


Ref.	Part Number	Qty.	Description
10	115-8603	1	Starter ASM
20	98-7735	1	Stud
30	98-7736	1	Bolt
40	115-8597	1	Nut-Flange
60	98-7739	1	Nut
70	105-2893	1	Washer-Spring

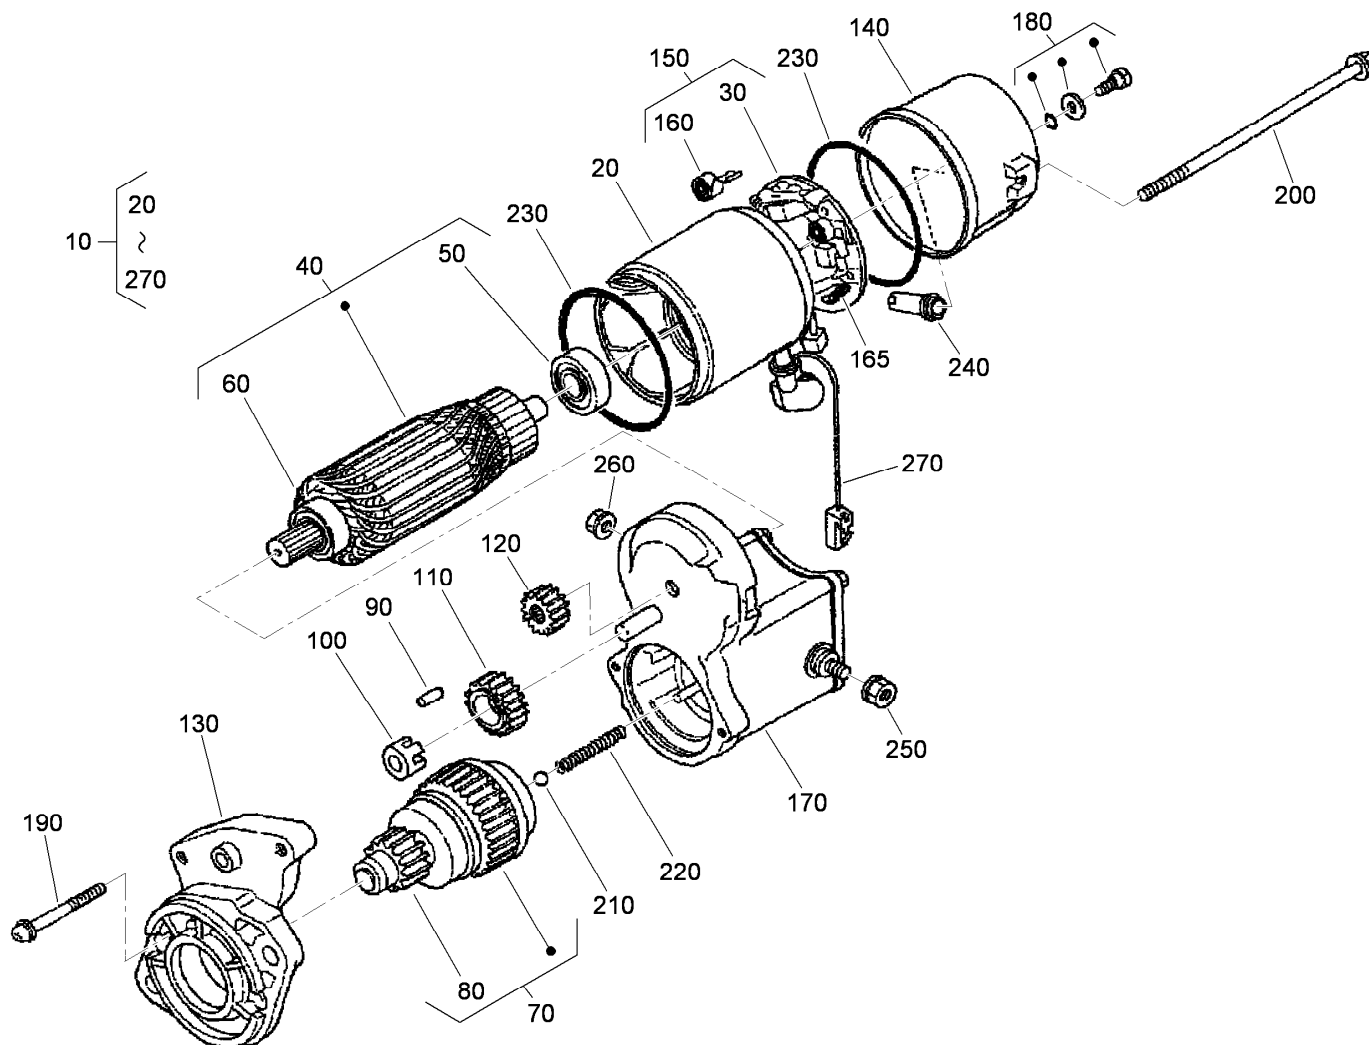 

Starter Components Assembly

Ref.	Part Number	Qty.	Description
10	115-8603	1	Starter ASM
20	115-8604	1	Yoke
30	115-8605	1	Brush Kit
40	115-8606	1	Armature
50	115-8607	1	Bearing
60	98-7744	1	Bearing
70	115-8608	1	Clutch-Running, Over
80	112-2833	1	Gear-Pinion
90	98-9707	5	Roller
100	98-7752	1	Retainer
110	98-7751	1	Gear
120	115-8609	1	Gear
130	115-8610	1	Frame-End, Drive
140	115-8611	1	Frame-End


Ref.	Part Number	Qty.	Description
150	115-8612	1	Holder-Brush
160	115-8613	4	Spring
165	115-8614	4	Spring-Brush
170	115-8615	1	Magnetic Switch ASM
180	115-8616	2	Screw
190	115-8617	2	Screw
200	115-8618	2	Bolt-Thru
210	98-7755	1	Ball
220	98-7754	1	Spring
230	98-7757	2	O-Ring
240	115-8619	1	Pipe-Drain
250	98-7760	1	Nut-Hex
260	99-8376	1	Nut-Hex
270	98-9711	1	Cord-Solenoid, Stop

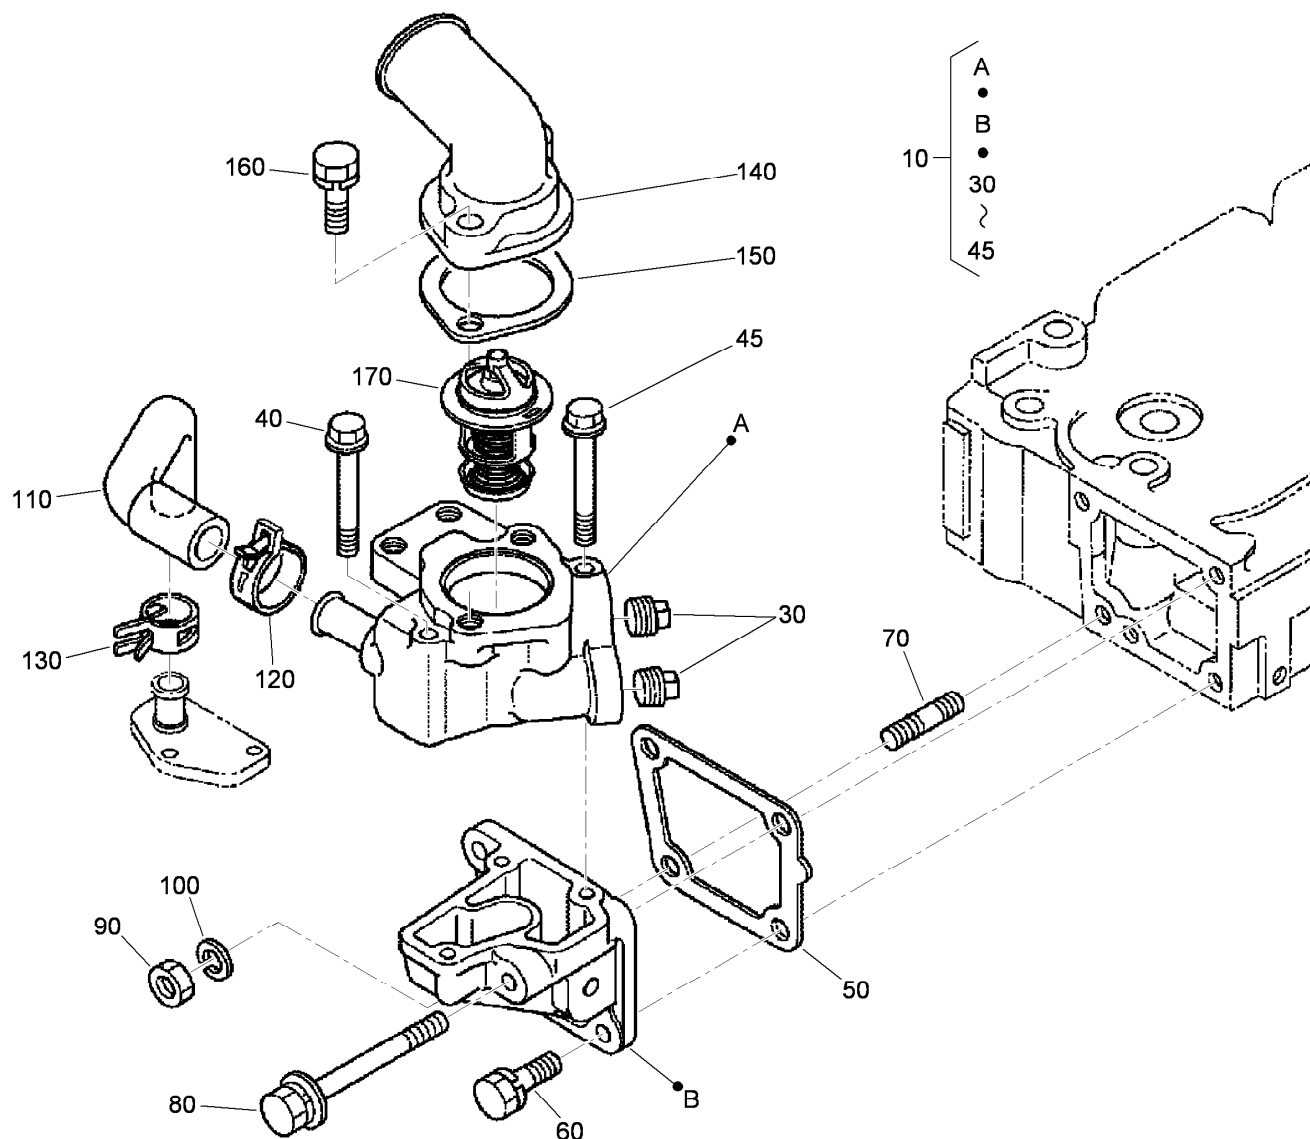 

Water Flange and Thermostat Assembly


Ref.	Part Number	Qty.	Description
10	105-4578	1	Water Flange ASM
30	105-2874	2	Plug
40	105-2875	2	Bolt-Flange
45	107-0117	1	Bolt-Flange
50	98-7767	1	Gasket-Flange, Water
60	98-9359	2	Bolt
70	100-1558	1	Stud
80	107-0115	1	Bolt
90	98-7534	1	Nut

Ref.	Part Number	Qty.	Description
100	105-2893	1	Washer-Spring
110	115-8620	1	Pipe-Return, Water
120	115-8621	1	Clamp-Hose
130	105-2879	1	Clamp-Hose
140	100-9244	1	Cover-Thermostat
150	105-3748	1	Gasket-Thermostat
160	98-7777	2	Bolt
170	105-2881	1	Thermostat ASM

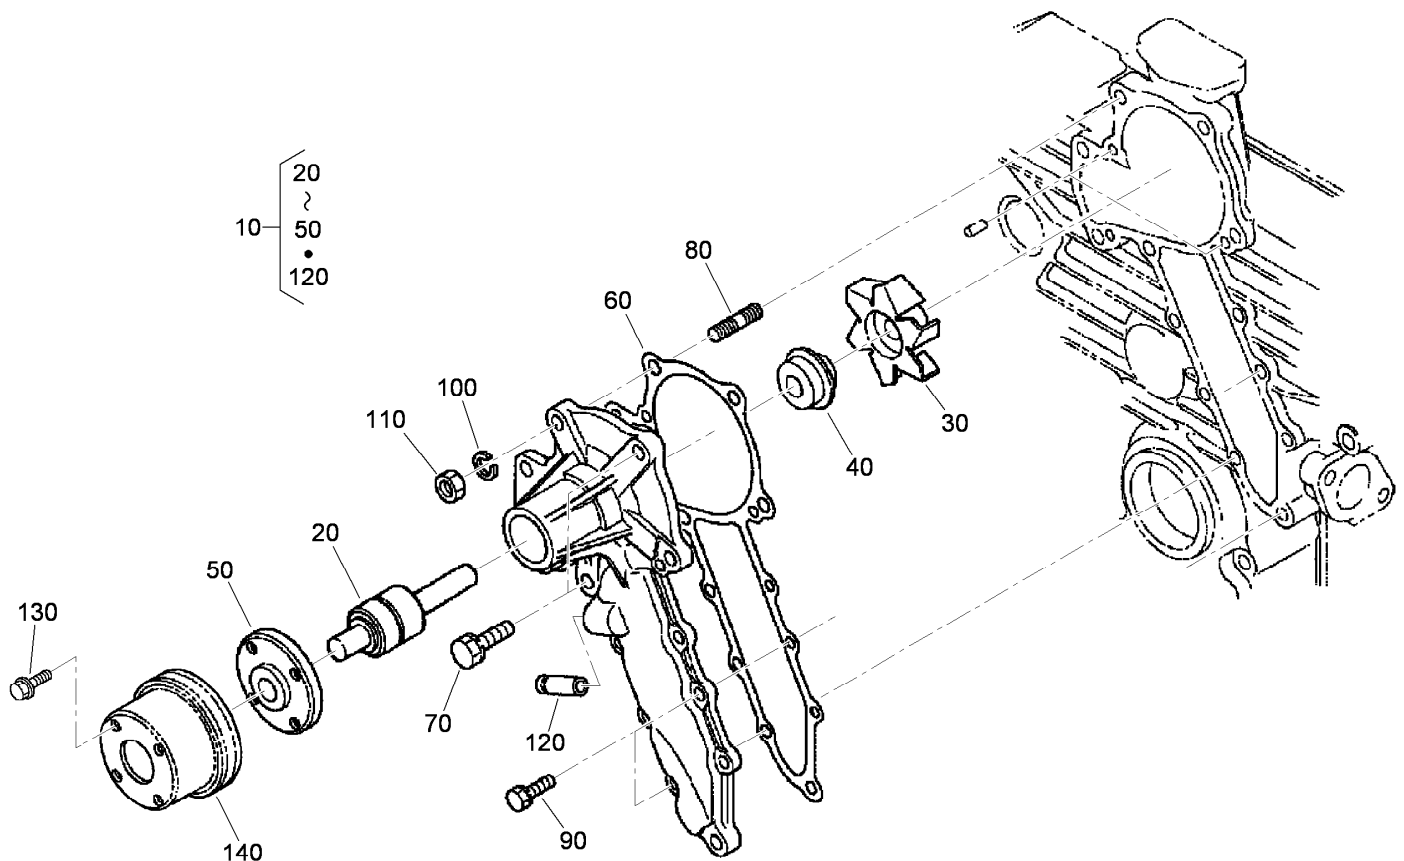 

Water Pump Assembly


Ref.	Part Number	Qty.	Description
10	115-8622	1	Water Pump ASM
20	98-7780	1	Bearing-Ball
30	107-0130	1	Impeller-Pump, Water
40	105-2882	1	Mechanical Seal ASM
50	108-7089	1	Flange-Shaft, Water Pump
60	115-8624	1	Gasket-Pump, Water
70	98-7439	2	Bolt
80	108-7090	1	Stud
90	98-7605	6	Bolt
100	105-2893	1	Washer-Spring
110	98-7534	1	Nut
120	98-9580	1	Pipe-Return, Water
130	107-4317	4	Bolt-Flange
140	115-8625	1	Pulley-Fan

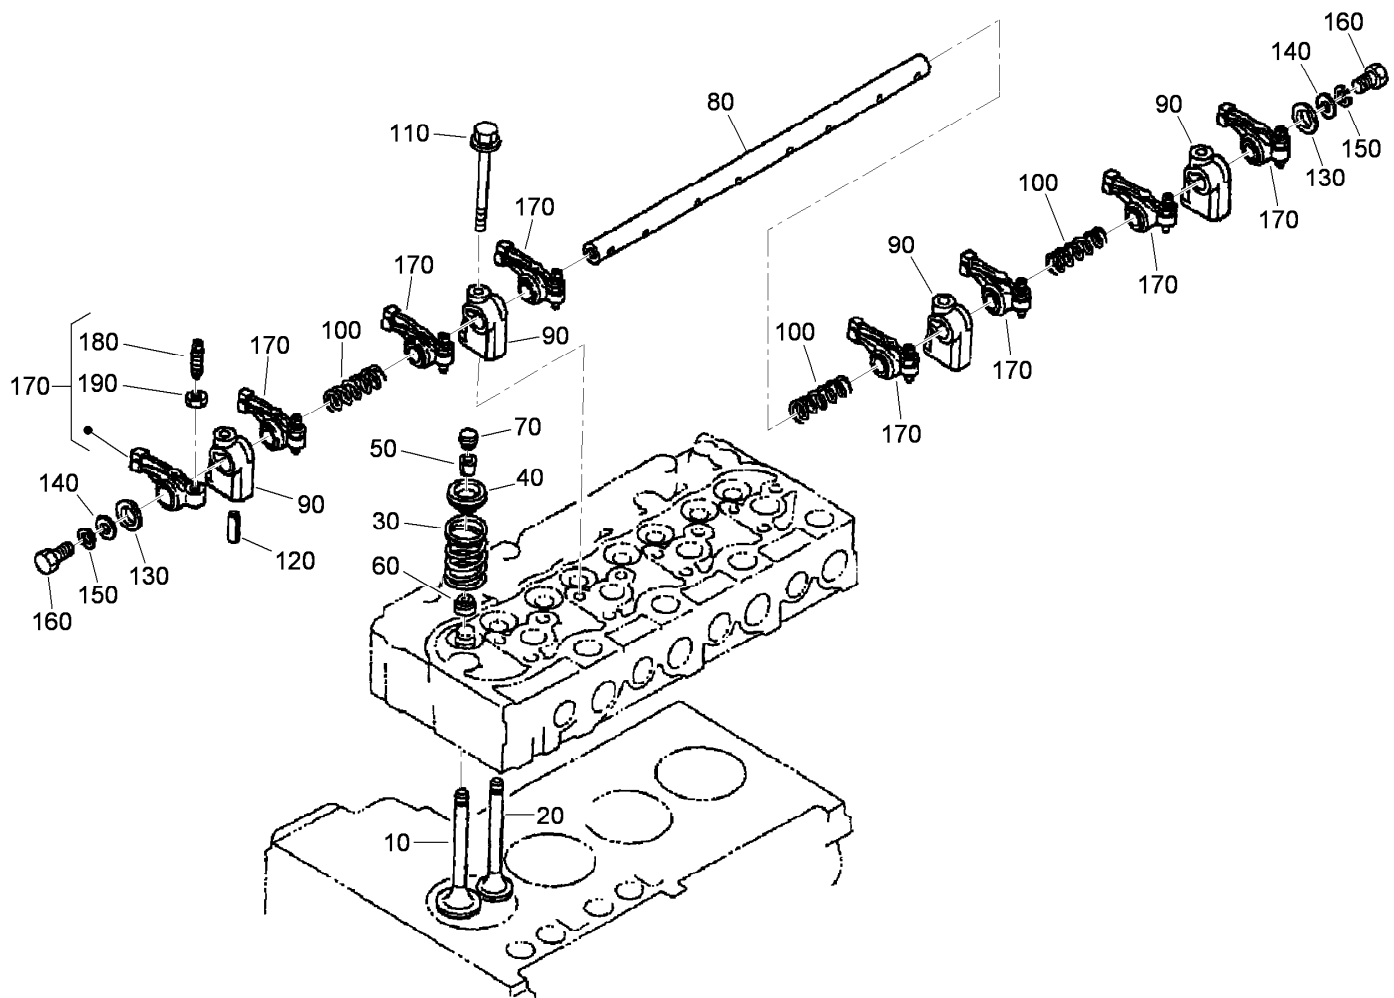 

Valve and Rocker Arm Assembly


Ref.	Part Number	Qty.	Description
10	115-8626	4	Valve-Inlet
20	114-5099	4	Valve-Exhaust
30	98-7793	8	Spring-Valve
40	98-7794	8	Retainer-Spring, Valve
50	98-7795	8	Collet-Spring, Valve
60	98-7796	8	Seal-Stem, Valve
70	98-7797	8	Cap-Valve
80	107-0134	1	Shaft-Arm, Rocker
90	98-7800	4	Bracket-Arm, Rocker
100	98-7807	3	Spring-Arm, Rocker

Ref.	Part Number	Qty.	Description
110	108-7091	4	Bolt-Flange
120	98-7805	1	Pin-Spring
130	98-7806	2	Washer
140	98-7660	2	Washer-Plain
150	105-2893	2	Washer-Spring
160	98-7884	2	Bolt
170	98-7809	8	Rocker Arm ASM
180	98-7810	8	Screw-Adjusting
190	98-7811	8	Nut

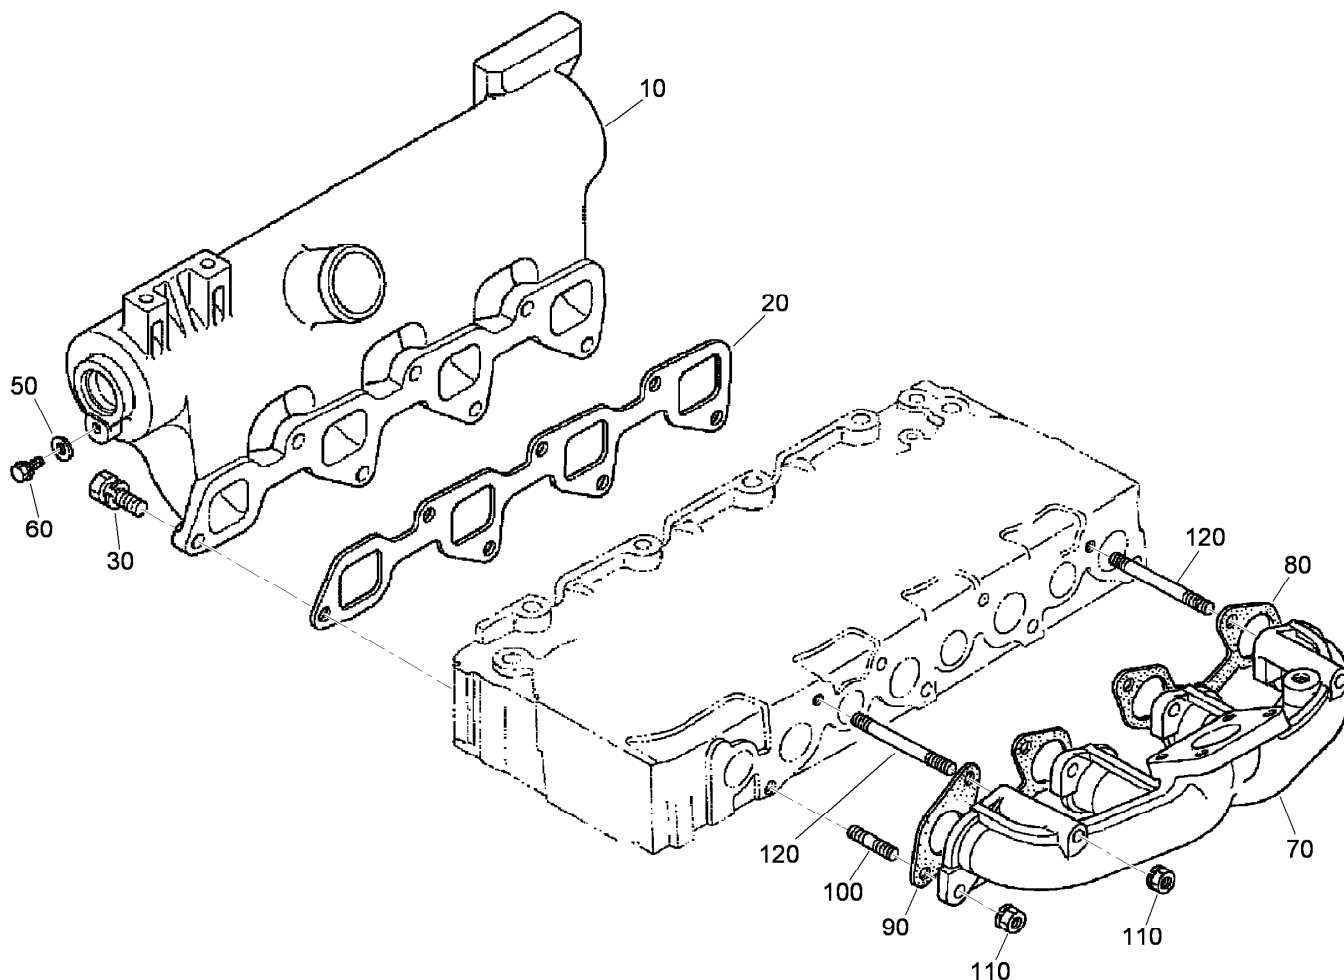 

Inlet and Exhaust Manifold Assembly


Ref.	Part Number	Qty.	Description
10	115-8627	1	Manifold-Inlet
20	100-9284	1	Gasket-Manifold, Intake
30	98-7610	1	Bolt
50	98-7654	1	Gasket
60	107-4317	1	Bolt-Flange
70	108-7092	1	Manifold-Exhaust
80	98-7802	1	Gasket
90	98-7803	1	Gasket
100	100-1558	6	Stud
110	100-9288	8	Nut
120	100-9289	2	Stud

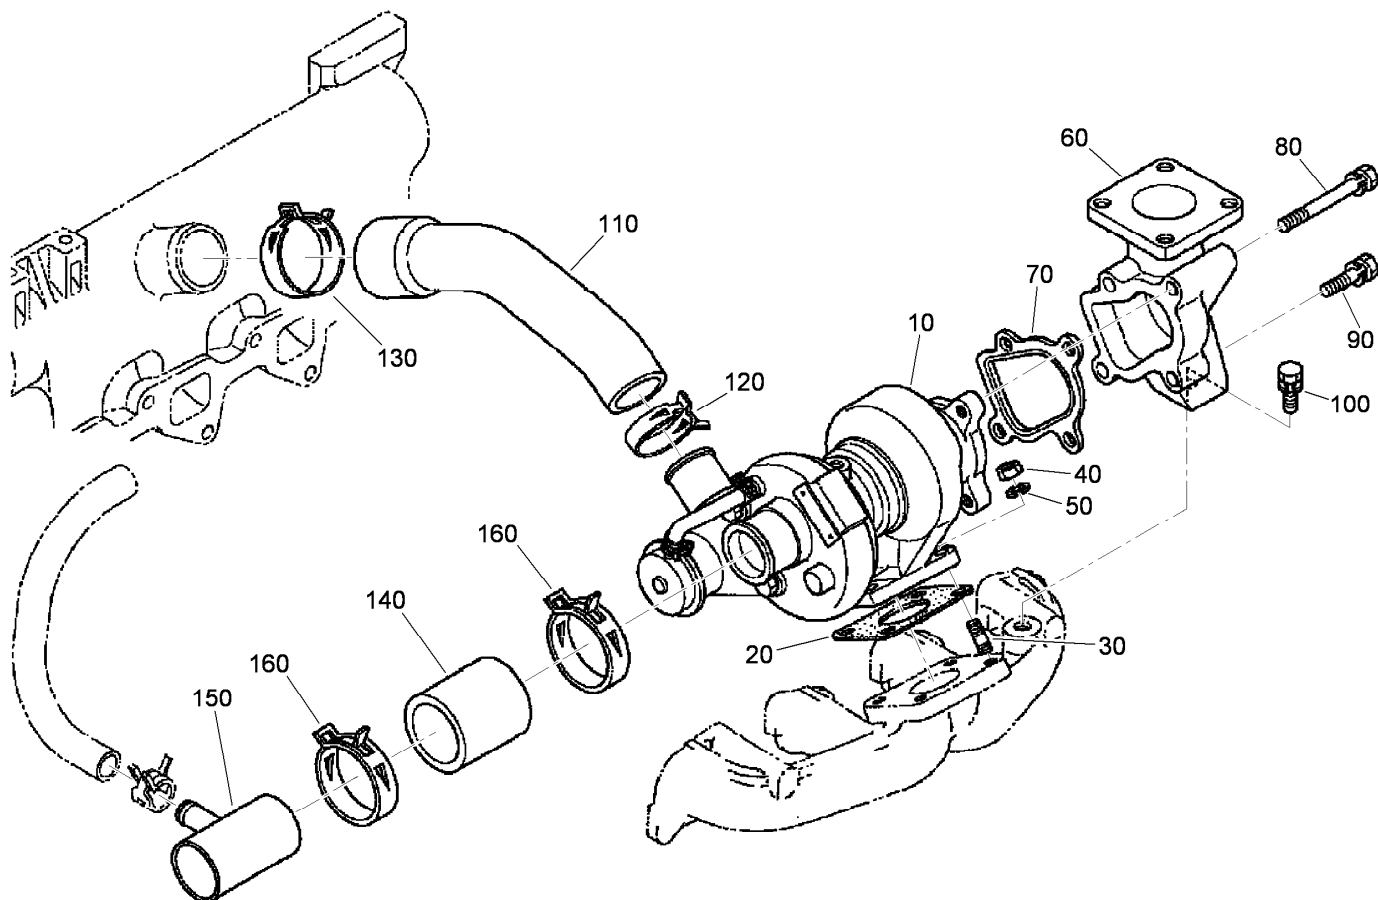 

Turbo Charger Assembly


Ref.	Part Number	Qty.	Description
10	115-8628	1	Turbo Charger ASM
20	100-9314	1	Gasket
30	99-8342	4	Stud
40	98-7534	4	Nut
50	105-2893	4	Washer-Spring
60	108-7094	1	Flange-Muffler
70	100-9316	1	Gasket
80	98-7590	2	Bolt

Ref.	Part Number	Qty.	Description
90	98-7777	2	Bolt
100	115-8629	1	Bolt
110	115-8630	1	Hose-Inlet
120	100-9319	1	Band-Pipe
130	99-8322	1	Band-Pipe
140	115-8631	1	Tube-Inlet, Turbo
150	115-8632	1	Pipe-Breather, Inlet
160	99-8322	2	Band-Pipe

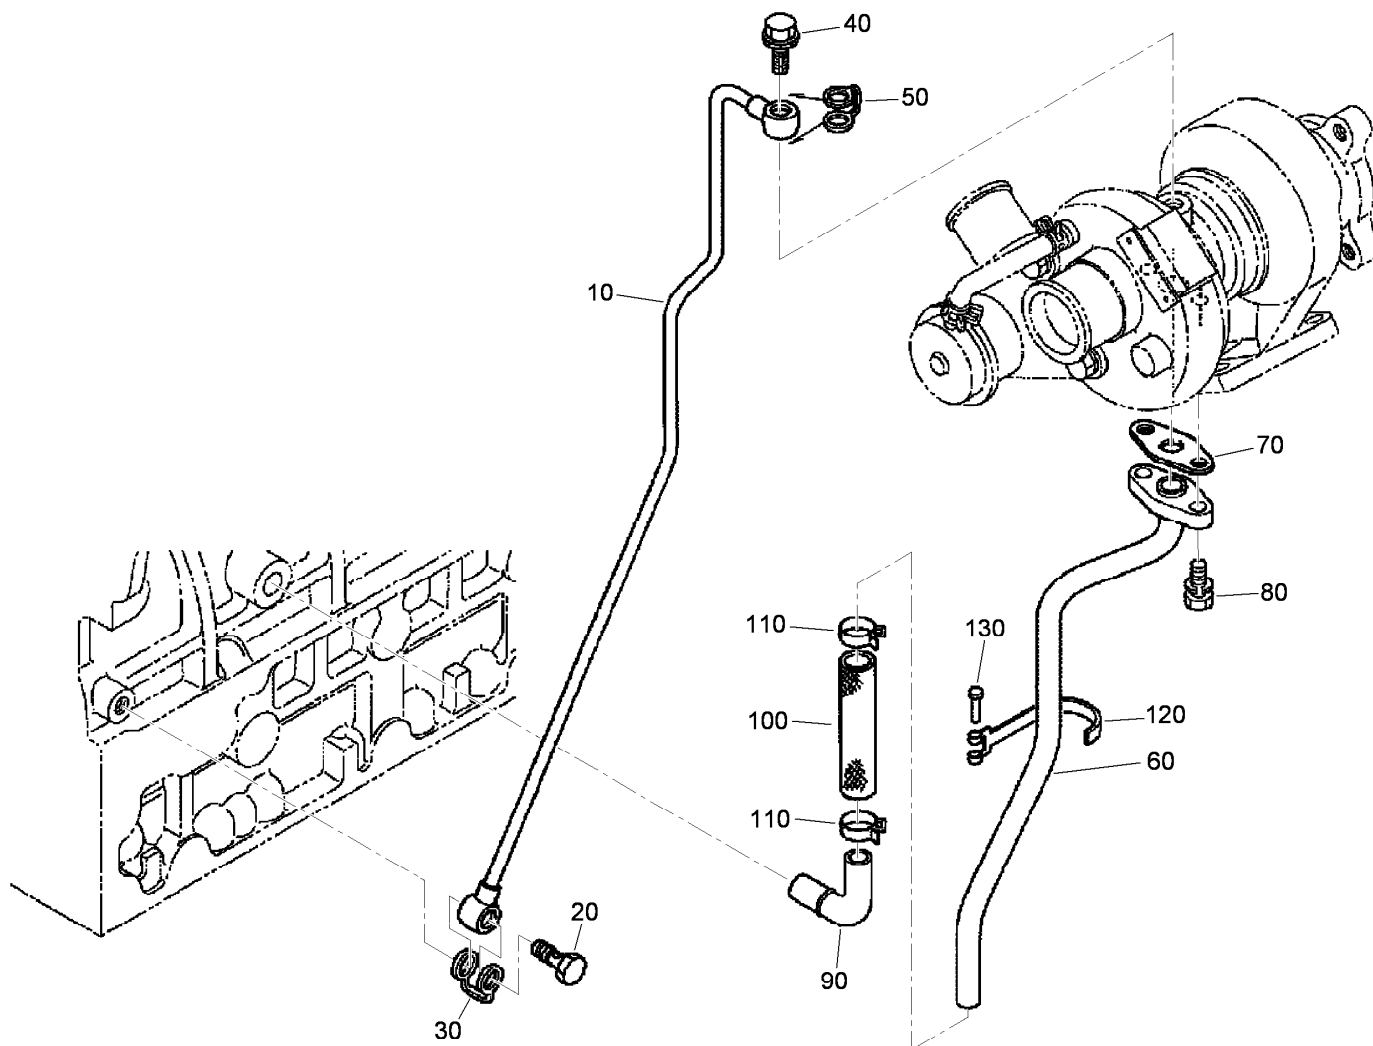 




Oil Pipe (Turbo Charger) Assembly

Ref.	Part Number	Qty.	Description
10	115-8633	1	Pipe-Oil
20	100-9321	1	Bolt-Joint, Eye
30	115-8634	1	Gasket
40	115-4126	1	Bolt-Joint, Eye
50	115-8635	1	Gasket
60	115-8636	1	Pipe-Oil
70	108-4422	1	Gasket
80	98-7605	2	Bolt
90	100-9323	1	Pipe-Oil
100	108-7095	1	Tube-Oil
110	98-9714	2	Clamp-Hose
120	108-7096	1	Clamp-Pipe
130	98-9591	1	Pin-Band

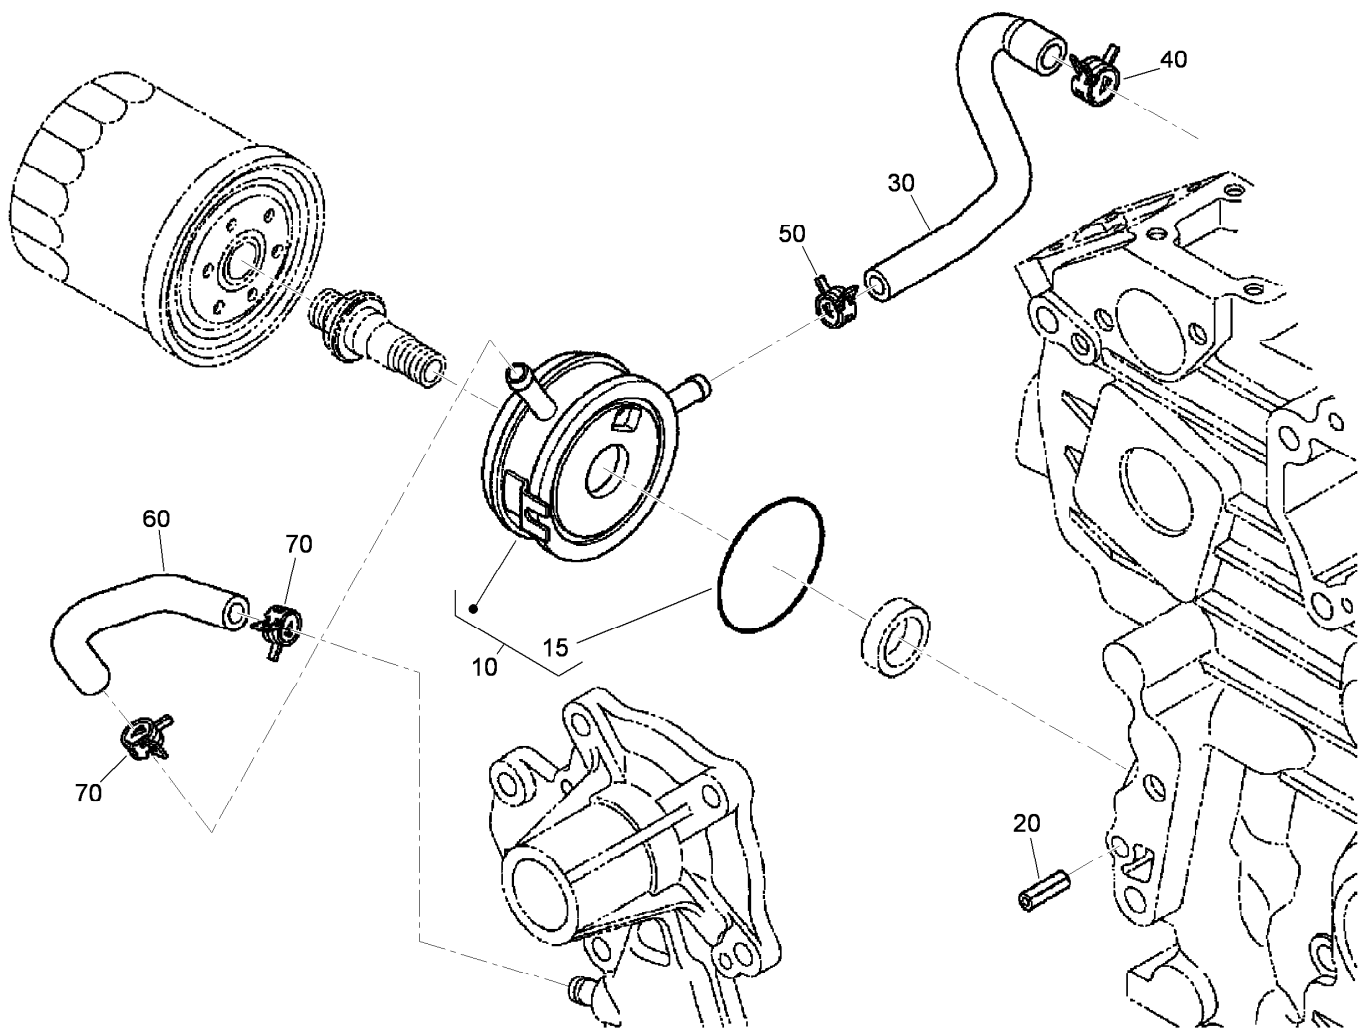 


Oil Cooler Assembly

Ref.	Part Number	Qty.	Description
10	115-8637	1	Oil Cooler ASM
15	115-8638	1	O-Ring
20	115-8639	1	Pin-Spring
30	115-8640	1	Hose-Cooler, Oil
40	105-2879	1	Clamp-Hose
50	98-9579	1	Band-Pipe
60	115-8641	1	Hose-Cooler, Oil
70	98-9579	2	Band-Pipe

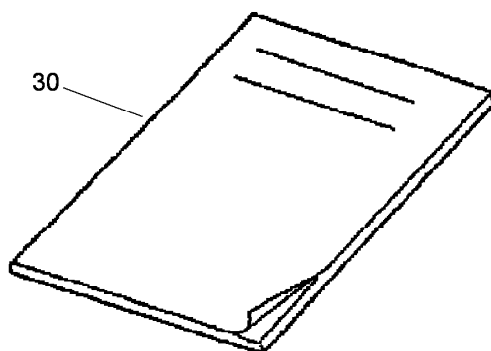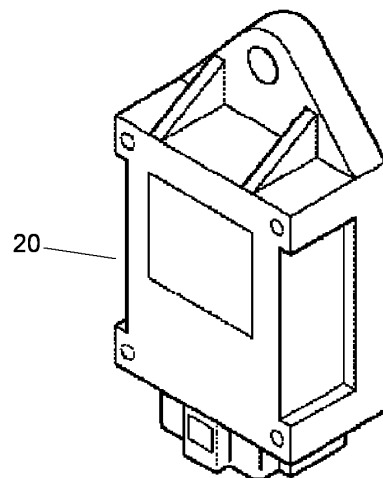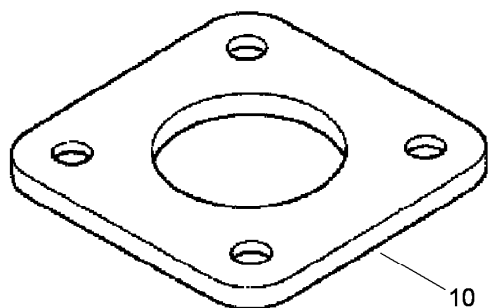   


Muffler Gasket, Glow Controller and Operator Manual

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	100-9333	1	Gasket-Muffler
20	98-7611	1	Controller-Glow
30	115-8642	1	Manual-Operator

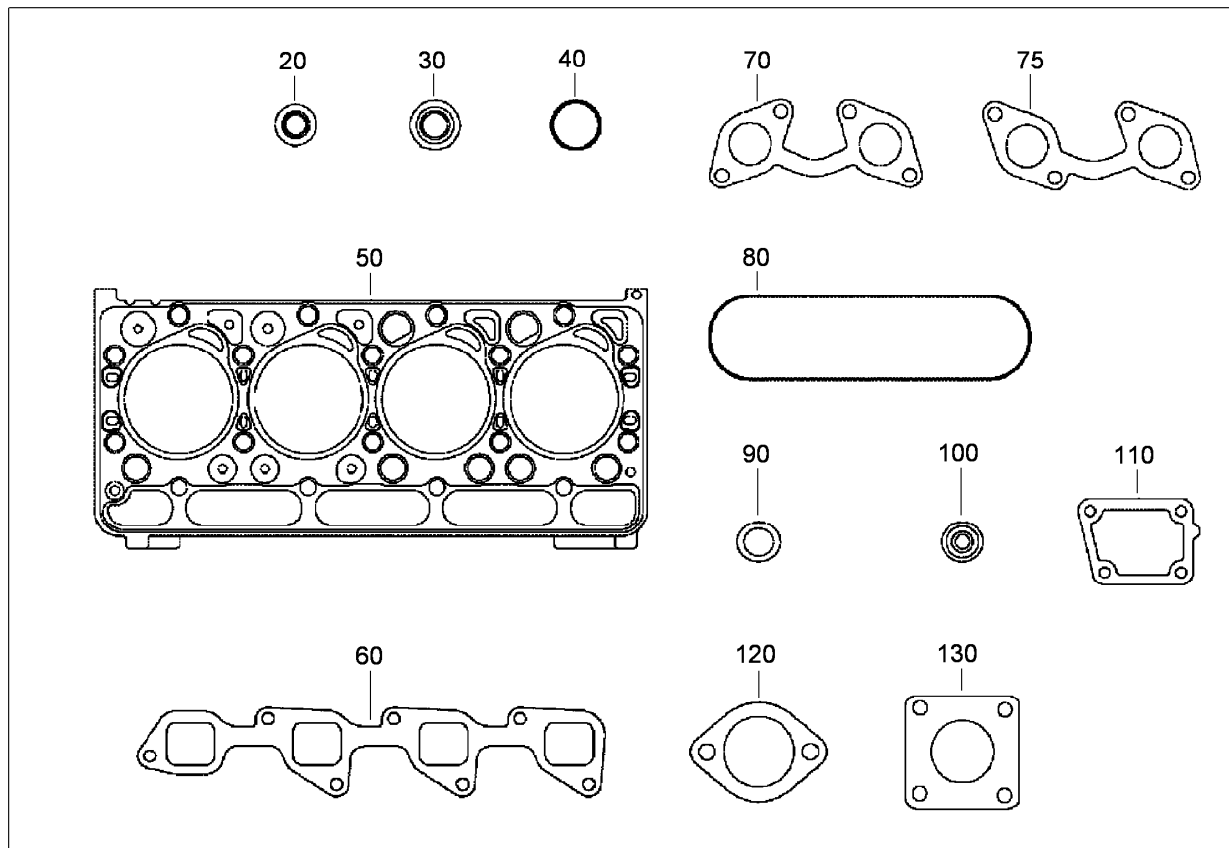 

Upper Gasket Kit

Ref.	Part Number	Qty.	Description
10	115-8643	1	Upper Gasket Kit
20	98-7763	1	Washer-W/Rubber
30	98-7796	8	Seal-Stem, Valve
40	108-7064	1	O-Ring
50	115-8509	1	Gasket-Head, Cylinder (1.20Mm)
60	100-9284	1	Gasket-Manifold, Intake
70	98-7803	1	Gasket
75	98-7802	1	Gasket
80	108-7062	1	Gasket-Cover, Head
90	98-7676	4	Gasket
100	98-7677	4	Seal-Heat
110	98-7767	1	Gasket-Flange, Water
120	105-3748	1	Gasket-Thermostat
130	100-9333	1	Gasket-Muffler

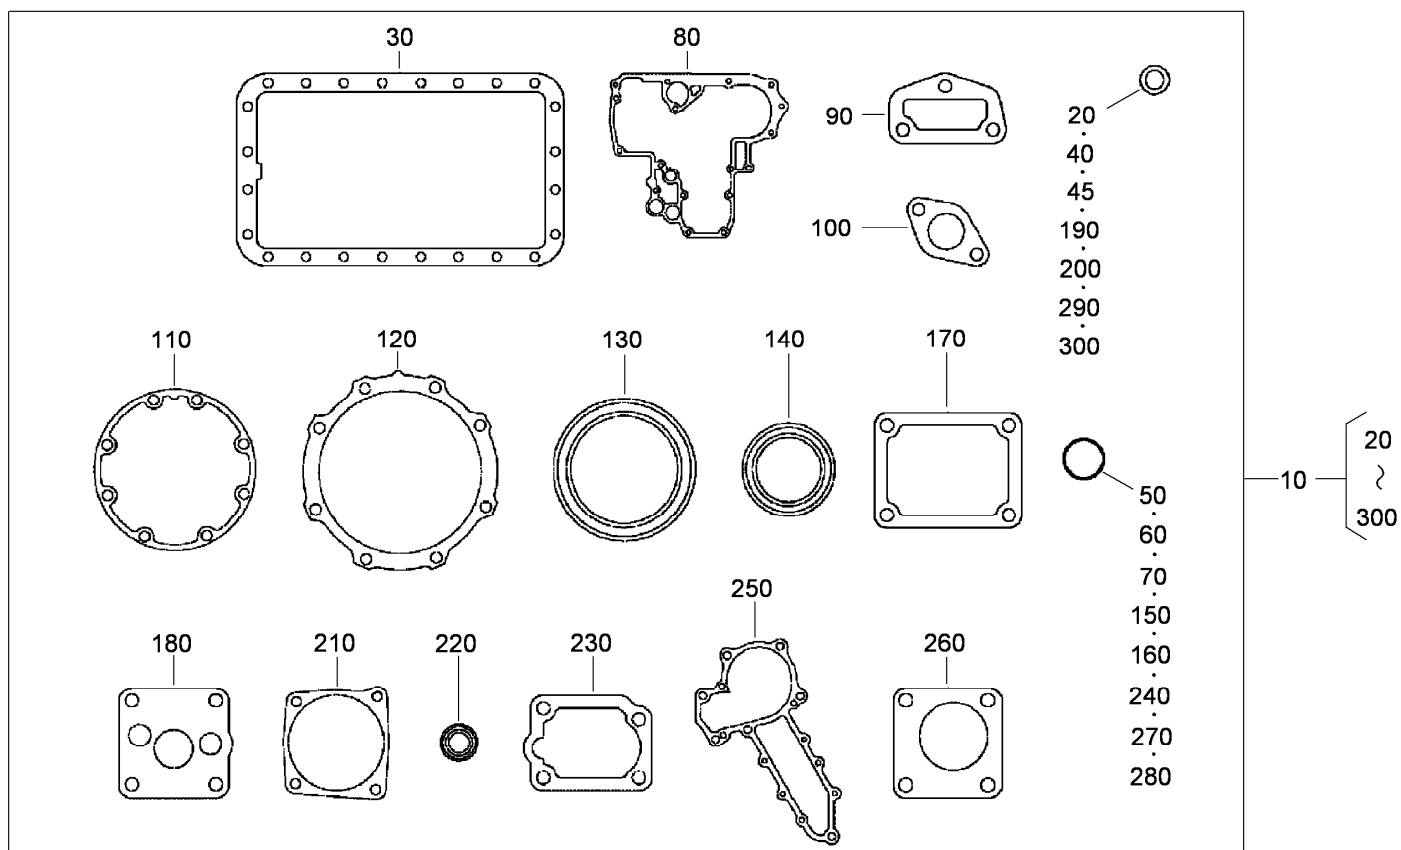 

Lower Gasket Kit

Ref.	Part Number	Qty.	Description
10	115-8644	1	Lower Gasket Kit
20	98-7524	1	Gasket
30	108-7053	1	Gasket-Pan, Oil
40	98-7528	1	O Ring-Copper
45	98-9399	2	Gasket
50	107-0104	1	O-Ring
60	115-8514	2	O-Ring
70	107-0106	1	O-Ring
80	115-8516	1	Gasket-Case, Gear
90	115-8521	1	Gasket-Flange, Return
100	115-8645	1	Gasket-Pump, Fuel
110	98-7435	1	Gasket-Case, Bearing
120	98-7437	1	Gasket-Case Cover, Bearing
130	108-7072	1	Seal-Oil
140	98-7480	1	Seal-Oil

Ref.	Part Number	Qty.	Description
150	98-7478	1	O-Ring
160	108-7054	1	O-Ring
170	98-7604	1	Gasket-Cover, Pump
180	115-8648	1	Gasket-Pump, Oil
190	98-7654	2	Gasket
200	98-7636	2	Gasket
210	115-8566	1	Gasket
220	115-8576	2	Seal-Oil
230	115-8578	2	Gasket-Plate
240	110-3762	1	O-Ring
250	115-8624	1	Gasket-Pump, Water
260	115-8522	1	Gasket-Meter, Hour
270	115-8649	1	O-Ring
280	115-8570	1	O-Ring
290	115-8571	1	Gasket
300	98-7428	1	Gasket

Attachments and Accessories

For 30447 Groundsmaster 4110-D Rotary Mower

Product Name	Model/Part
Blade-Combination (19in)	106-7166-03
Blade-Atomic (19in)	107-0215-03
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Atomic Blade Service Pack	108-1451
Blade-Flat Sail (19in)	110-6116-03
Flat Blade Service Pack (19in)	110-6140
Accessory Wiring Kit	115-8492
Backrest Extension Kit	119-7719
Horn Kit	119-8329
Premium Engine Oil 10w30 (55 Gal)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
MVP Filter Kit	30056
Leaf Mulcher Kit	30419
Speed Control Kit	30421
Rotary Broom	30426
Flow Divider Kit	30445
Replacement Cutting Unit	30451
CE Kit	30453
Diagnostic Display Box	85-4750
8in Foam Filled Wheel ASM	93-5974

Notes:

Notes:



Count on it.