



Form No. 3364-774 Rev E

Count on it.

Parts Catalog

Groundsmaster® 5910

Rotary Mower

Model No. 31599—Serial No. 310000201 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

 
Frame and Rear Axle Assembly	6
RH PTO Valve Assembly	7
Hydraulic PTO Manifold Assembly No. 117-1112	8
LH PTO Valve Assembly	9
Hydraulic PTO Manifold Assembly No. 117-1111	10
Filter Manifold Assembly	11
Hydraulic Filter Manifold Assembly No. 117-5463	12
Axle Assembly No. 114-5982-01	13
Rear Axle Assembly	14
Left Rear Wheel Hydraulic Motor Assembly No. 114-5593	15
Tie Rod Assembly No. 110-6049-03	16
Right Rear Wheel Hydraulic Motor Assembly No. 114-5594	17
Hydraulic Steering Cylinder Assembly No. 98-0661	18
Front Axle and Brake Assembly	19
Planetary Assembly No. 105-4500	21
Brake Assembly No. 100-3069	22
Brake Assembly No. 100-3070	23
Front PTO Valve Assembly	24
Hydraulic PTO Manifold Assembly No. 117-1110	25
Traction Valve Assembly	26
Hydraulic Traction Manifold Assembly No. 110-6062	27
Hydraulic Motor Assembly No. 114-4849	28
Seat and Platform Assembly	29
Air Ride Seat Suspension Assembly No. 108-1488	30
Premium Seat Assembly No. 117-9429	32
Steering Column Assembly	33
Steering Tower Assembly No. 117-5492	35
Steering Valve Assembly No. 114-4900	36
Traction Pedal Assembly	37
Brake Pedal Assembly	38
Control Console Assembly	39
Electrical Component Assembly	40
Battery and Lift Manifold Assembly	42
Lift Manifold Assembly	43
Hydraulic Lift Manifold Assembly No. 110-6064	44
Front Deck Lift Arm and Cylinder Assembly	45
Hydraulic Gear Motor Assembly No. 114-4940	47
Hydraulic Cylinder Assembly No. 114-4831	48
Hydraulic Cylinder Assembly No. 114-4830	49
Wing Lift Arm Assembly	50
Hydraulic Cylinder Assembly No. 114-5685	52
Wing Connection and Impact Arm Assembly	53
Hood and Bumper Assembly	54
Air Cleaner and Muffler Assembly	56
Air Cleaner Assembly No. 112-7329	57
Radiator and Fan Shroud Assembly	58
Radiator Assembly	60
Engine and Mount Assembly	61
4 Wheel Drive Hydraulic Manifold Assembly	62
4 Wheel Drive Hydraulic Manifold Assembly No. 110-6063	63
Flush Manifold Assembly	64
Flush Valve Assembly No. 115-8876	65
Fan and Coupling Assembly	66
Hydraulic Fan Motor Assembly No. 112-7400	67

Contents (continued)

Steer/Fan Manifold Assembly	68
Hydraulic Manifold Assembly No. 110-6065	69
Hydraulic Tank Assembly	70
Pump Assembly	71
Piston Pump Assembly No. 110-5989	72
Triple Pump Assembly No. 114-4840	74
Traction Hydraulic Plumbing Assembly.....	75
PTO Hydraulic Plumbing Assembly	76
Lift Arms Hydraulic Plumbing Assembly	77
Steering Hydraulic Plumbing Assembly	78
Hydraulic Tank Plumbing Assembly	79
Foam Assembly	80
Battery Cable Routing and Assembly	81
Fuel Tank Assembly	82
Cab Component and Breather Assembly	83
Head Light Assembly No. 114-5928	84
Center Deck and Winglet Assembly	85
Center Front Deck and Decal Assembly No. 110-5911	86
Right Front Deck and Decal Assembly No. 110-5914.....	87
Left Front Deck and Decal Assembly No. 110-5917	88
Center Deck Belt and Pulley Assembly.....	89
Driving Spindle Assembly No. 119-4547	90
Double Driven Spindle Assembly No. 119-4548	91
High Driven Spindle Assembly No. 119-4549	92
Center Deck Roller, Skid and Caster Wheel Assembly.....	93
10 Inch Wheel Assembly No. 93-4240	94
Center Deck Spindle and Blade Assembly	95
Center Deck Belt Cover Assembly.....	96
Center Deck Chamber Assembly.....	97
Center Deck Transport Damper Assembly	98
Right Deck Belt and Pulley Assembly	99
Right Deck Decal Assembly No. 110-5921	100
Right Deck Roller, Skid and Caster Wheel Assembly	101
Right Deck Spindle and Blade Assembly	102
Right Deck Belt Cover Assembly	103
Right Deck Chamber Assembly	104
Right Deck Stop and Hose Guide Assembly	105
Left Deck Belt and Pulley Assembly	106
Left Deck Decal Assembly No. 110-5931	107
Left Deck Roller, Skid and Caster Wheel Assembly	108
Left Deck Spindle and Blade Assembly	109
Left Deck Belt Cover Assembly	110
Left Deck Chamber Assembly	111
Left Deck Stop and Hose Guide Assembly.....	112
Right Door Cab Assembly.....	113
Left Door Cab Assembly	114
Front/Back Window and Wiper Cab Assembly	115
Lower Windshield Glass Assembly No. 115-5565	116
Door Striker and Mirror Cab Assembly	117
Shielding Component Cab Assembly	118
Headliner Cab Assembly.....	119
Roof and Hose Cab Assembly	120
Switchplate and Fuse Block Cover Cab Assembly	121
Heat/Evaporator Cab Assembly.....	122

Contents (continued)

A/C Heater Assembly No. 115-8830	123
A/C Heater and Evaporator Cab Assembly	124
Condenser Cab Assembly	125
Fluid Washer Tank Cab Assembly	126
Engine Alternator Assembly	127
Engine Starter Assembly	128
Engine Gear Case Front Cover Assembly	129
Engine Water Pump and Thermostat Assembly	130
Engine Exhaust Manifold Assembly	131
Engine Valve Cover Assembly	132
Engine Oil Filter and Dipstick Assembly	133
Engine Fuel Filter Assembly	134
Attachments and Accessories	135

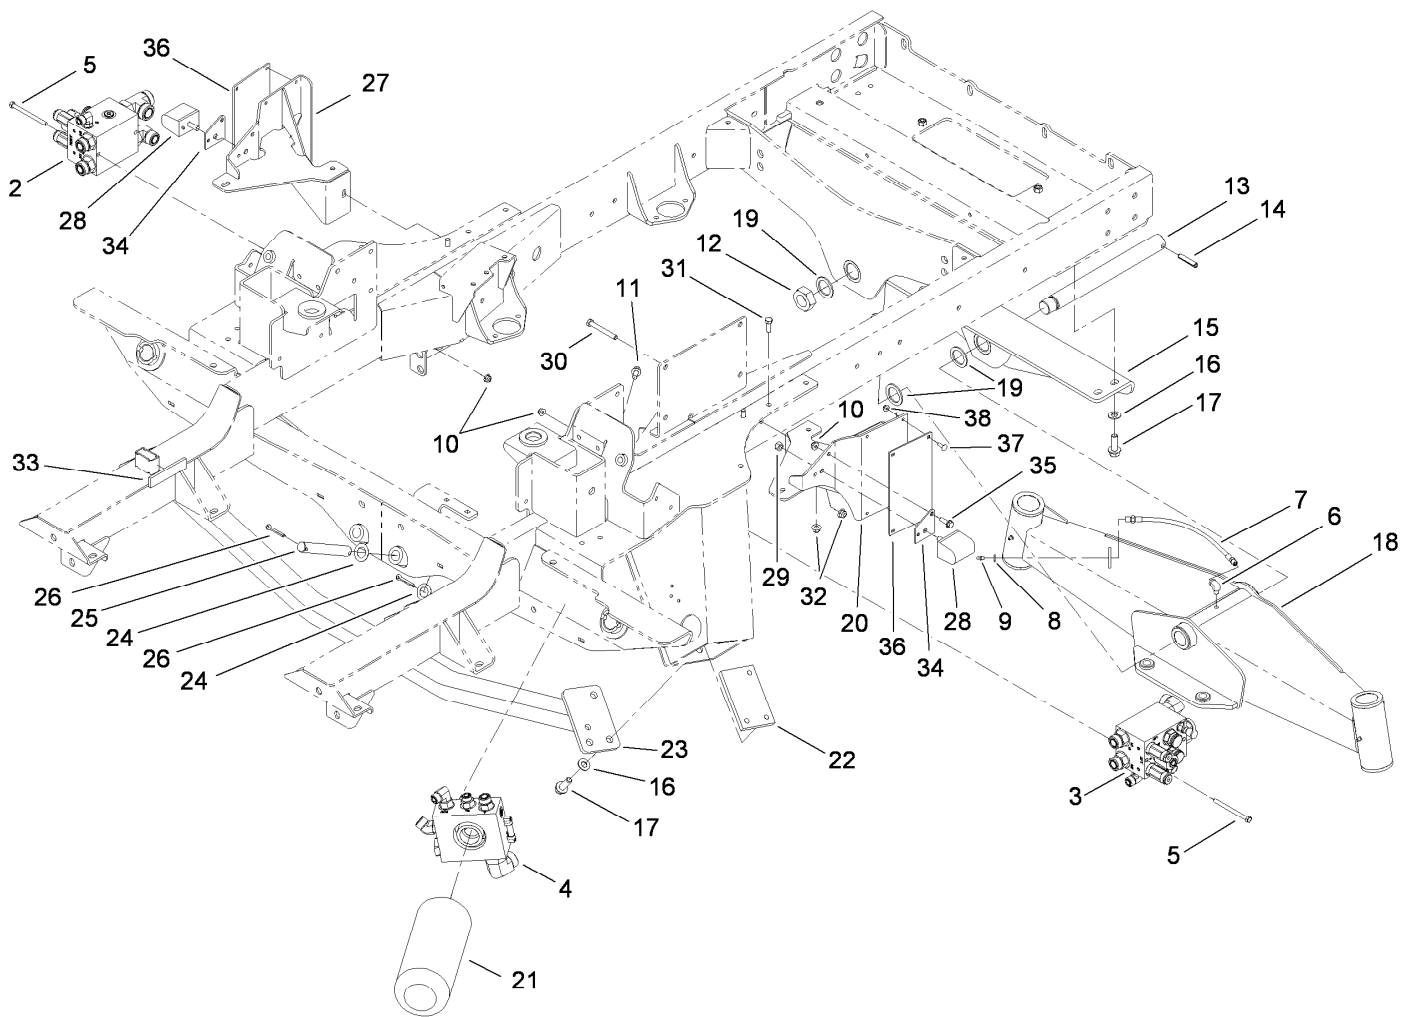


Frame and Rear Axle Assembly

Ref.	Part Number	Qty.	Description
2		1	RH PTO Valve ASM ●
3		1	LH PTO Valve ASM ●
4		1	Filter Manifold ASM ●
5	322-19	4	Screw-HH
6	2811-7	1	Elbow
7	114-5586	1	Hose ASM (With Fitting)
8	114-5587	1	Nut
9	302-5	1	Fitting-Grease
10	104-8300	6	Nut-HF, NI
11	3234-1	4	Screw-HHF
12	3296-68	1	Nut-Lock, NI
13	114-5970	1	Shaft-Pivot
14	32121-110	1	Pin-Roll, Slotted
15	110-6033-01	1	Support-Axle
16	3256-26	10	Washer-Flat
17	100-6116	10	Screw-HHF
18	114-5982-01	1	Axle ASM
19	98-1452	3	Washer-Thrust
20	117-5475-01	1	Transport-Pad, LH

Ref.	Part Number	Qty.	Description
21	86-6110	1	Filter-Hydraulic
22	114-5990	2	Plate-Tapped
23	114-5969-01	1	Crossmember
24	110-6767	4	Washer-Thrust
25	110-6006	2	Pin-Clevis
26	3272-30	4	Pin-Cotter
27	117-5470-01	1	Transport-Pad, RH
28	87-3470	2	Bumper
29	33025-00	2	Nut-Lock, NI
30	323-14	2	Screw-HH
31	323-6	4	Screw-HH
32	104-8301	6	Nut-HF, NI
33	115-5465	1	Seal-Trim
34	115-8826	2	Shim-Bumper
35	3234-17	2	Screw-HHF
36	117-5476	2	Pad-Roller
37	1-807512	8	Bolt-CARR
38	104-7201	8	Nut-HF


 
● Not serviced separately

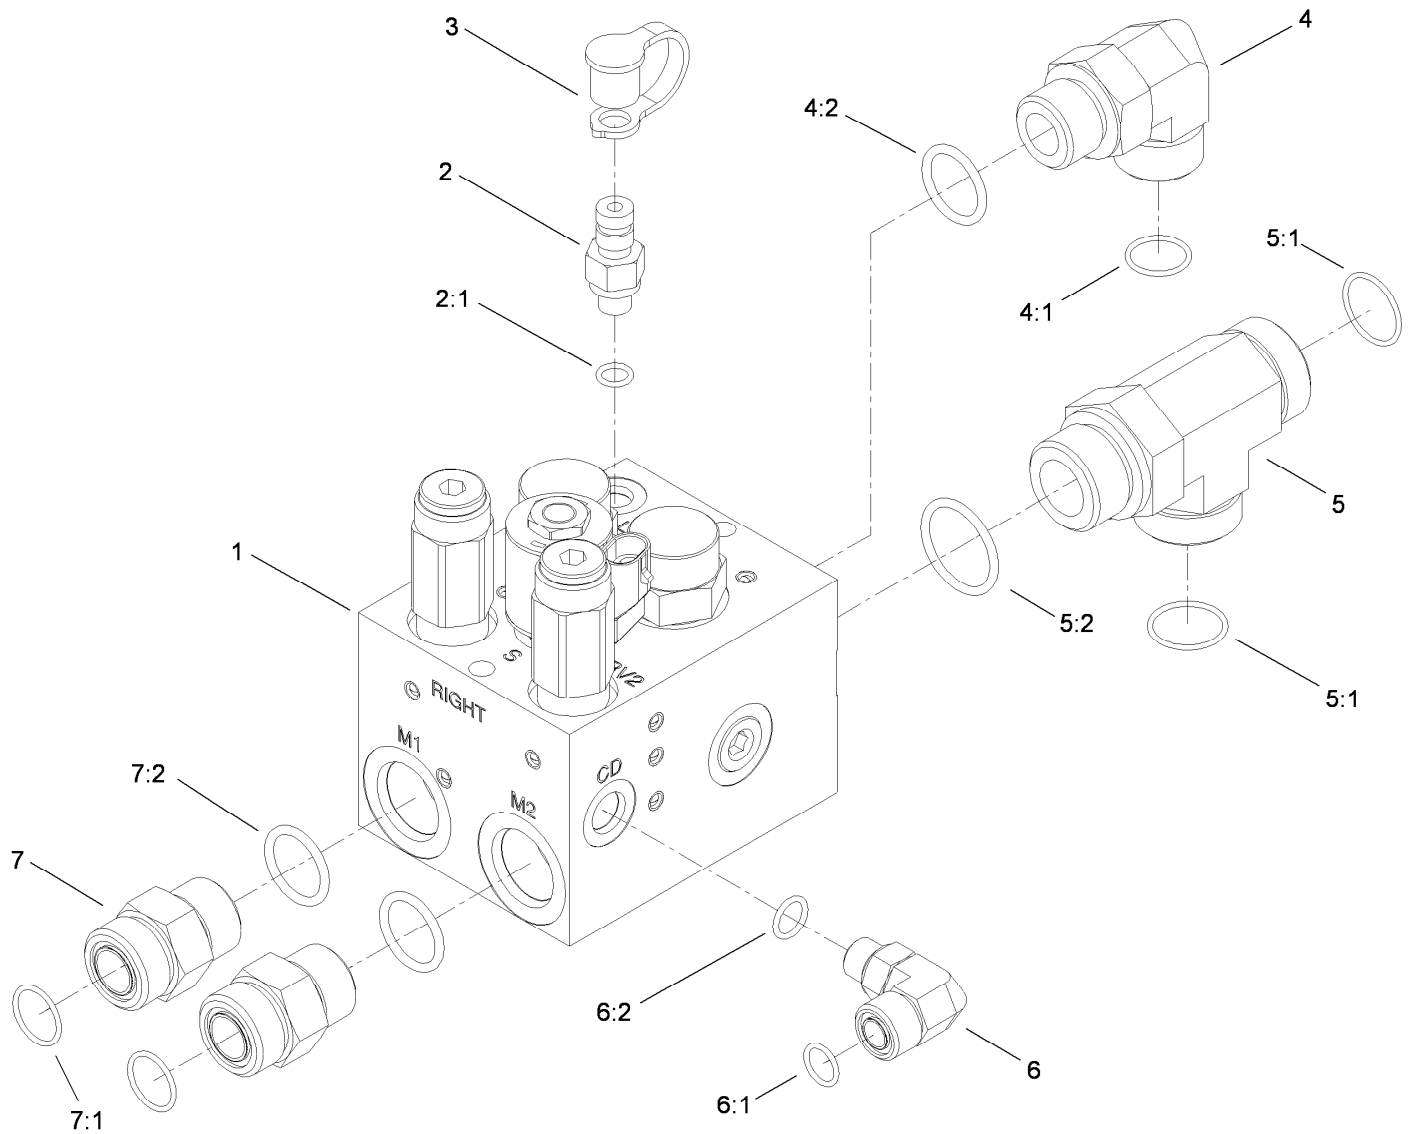

RH PTO Valve Assembly

Ref.	Part Number	Qty.	Description
1	117-1112	1	Manifold-PTO, RH
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	340-142	1	Fitting-Elbow-90
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	104-3795	1	Fitting-Tee


Ref.	Part Number	Qty.	Description
5:1	340-65	2	O-Ring
5:2	237-146	1	O-Ring
6	340-99	1	Fitting-HYD, 90 DEG
6:1	237-30	1	O-Ring
6:2	237-42	1	O-Ring
7	340-9	2	Fitting-STR
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

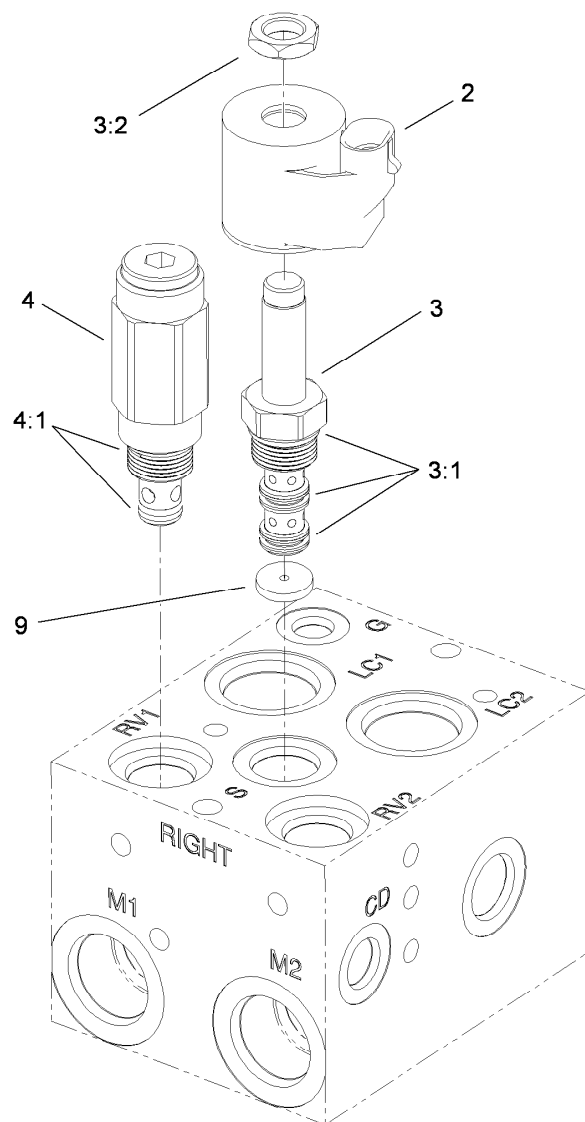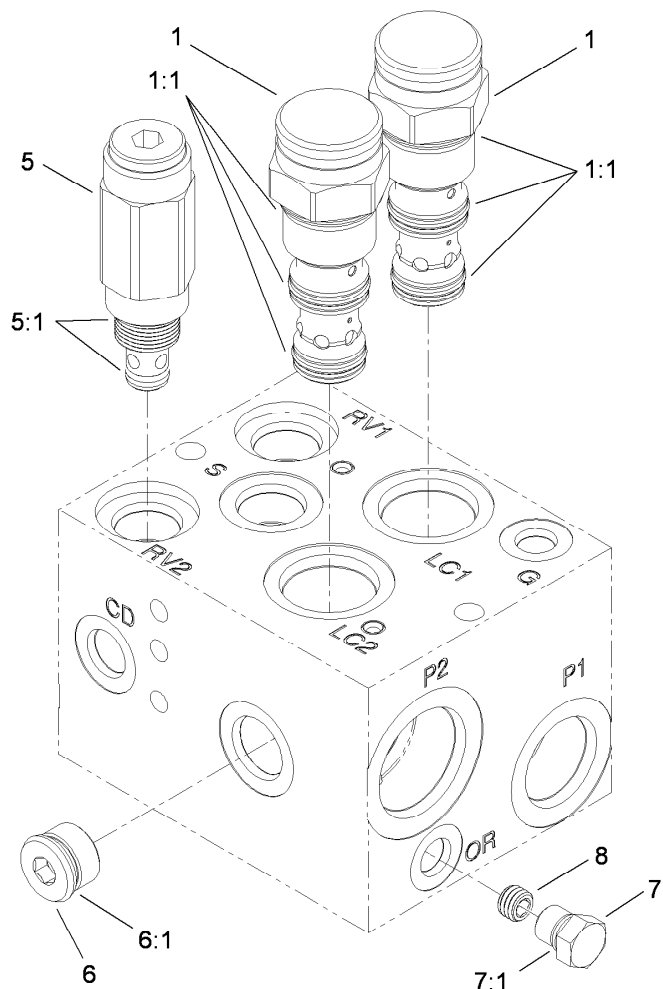  

Hydraulic PTO Manifold Assembly No. 117-1112

Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	114-5515	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5514	1	Valve-Relief, 2000 PSI
4:1	105-9156	1	Seal Kit



Ref.	Part Number	Qty.	Description
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring
7	353-990	1	Plug ASM
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063)
9	117-2791	1	Disc-Orifice (.050)

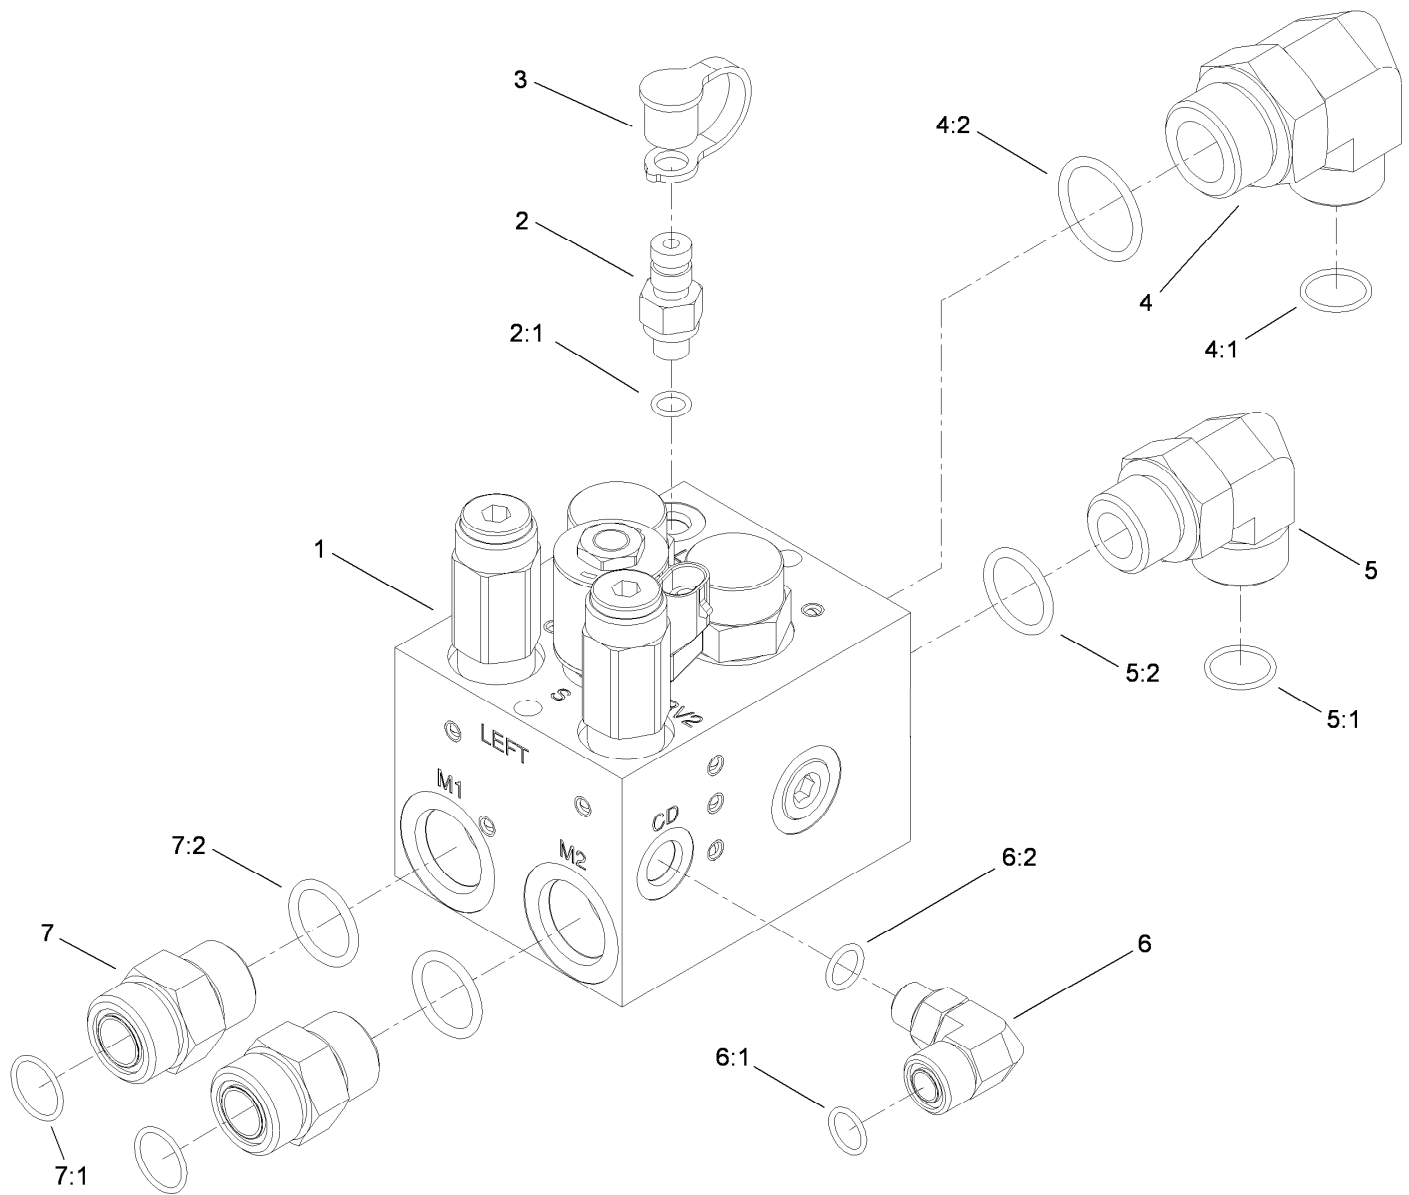 

LH PTO Valve Assembly

Ref.	Part Number	Qty.	Description
1	117-1111	1	Manifold-PTO, LH
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	340-142	1	Fitting-Elbow-90
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	340-15	1	Fitting-Elbow 90


Ref.	Part Number	Qty.	Description
5:1	237-58	1	O-Ring
5:2	237-146	1	O-Ring
6	340-99	1	Fitting-HYD, 90 DEG
6:1	237-30	1	O-Ring
6:2	237-42	1	O-Ring
7	340-9	2	Fitting-STR
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

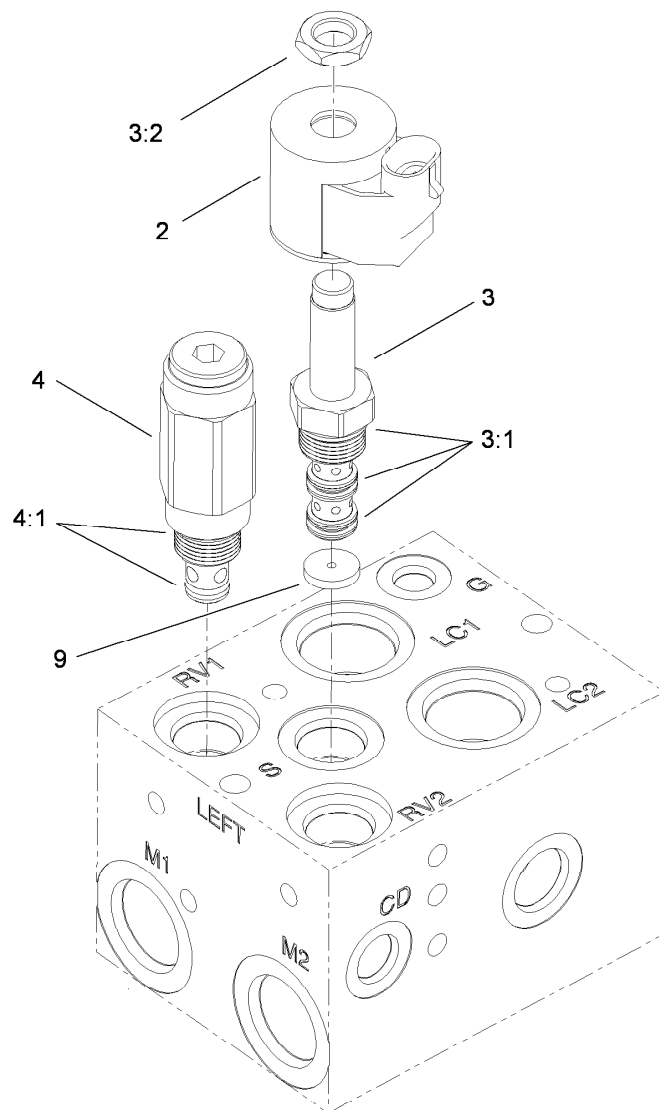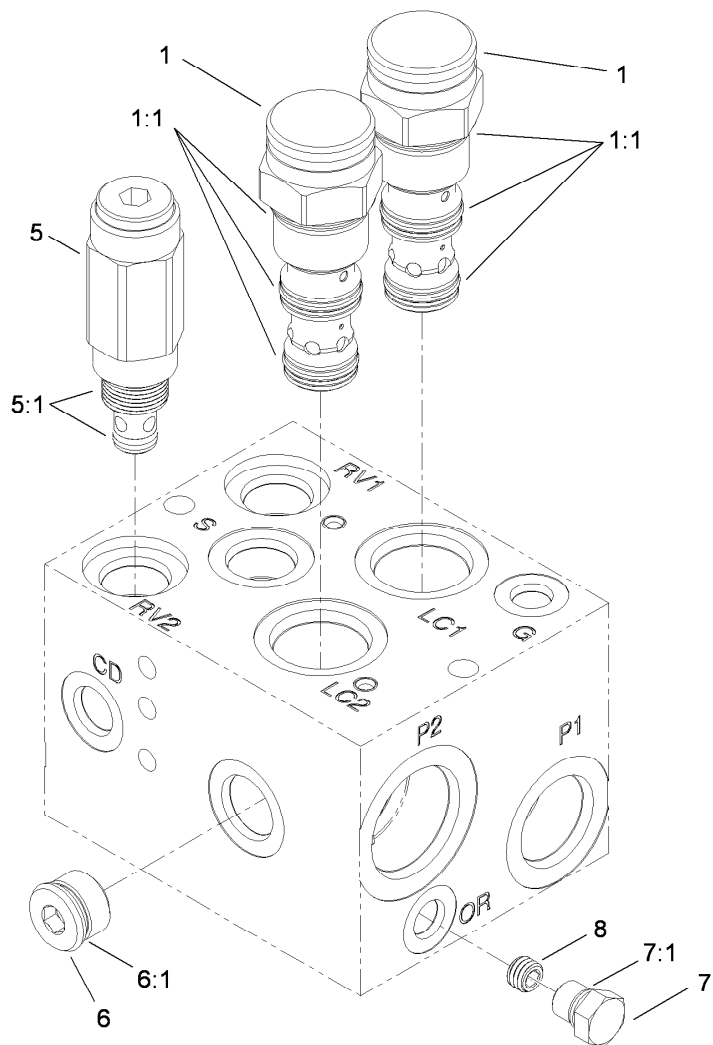  

Hydraulic PTO Manifold Assembly No. 117-1111

Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	114-5515	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit

Ref.	Part Number	Qty.	Description
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring
7	353-990	1	Plug ASM
7:1	237-78	1	O-Ring
8	112-6538	1	Orifice (.063)
9	117-2791	1	Disc-Orifice (.050)

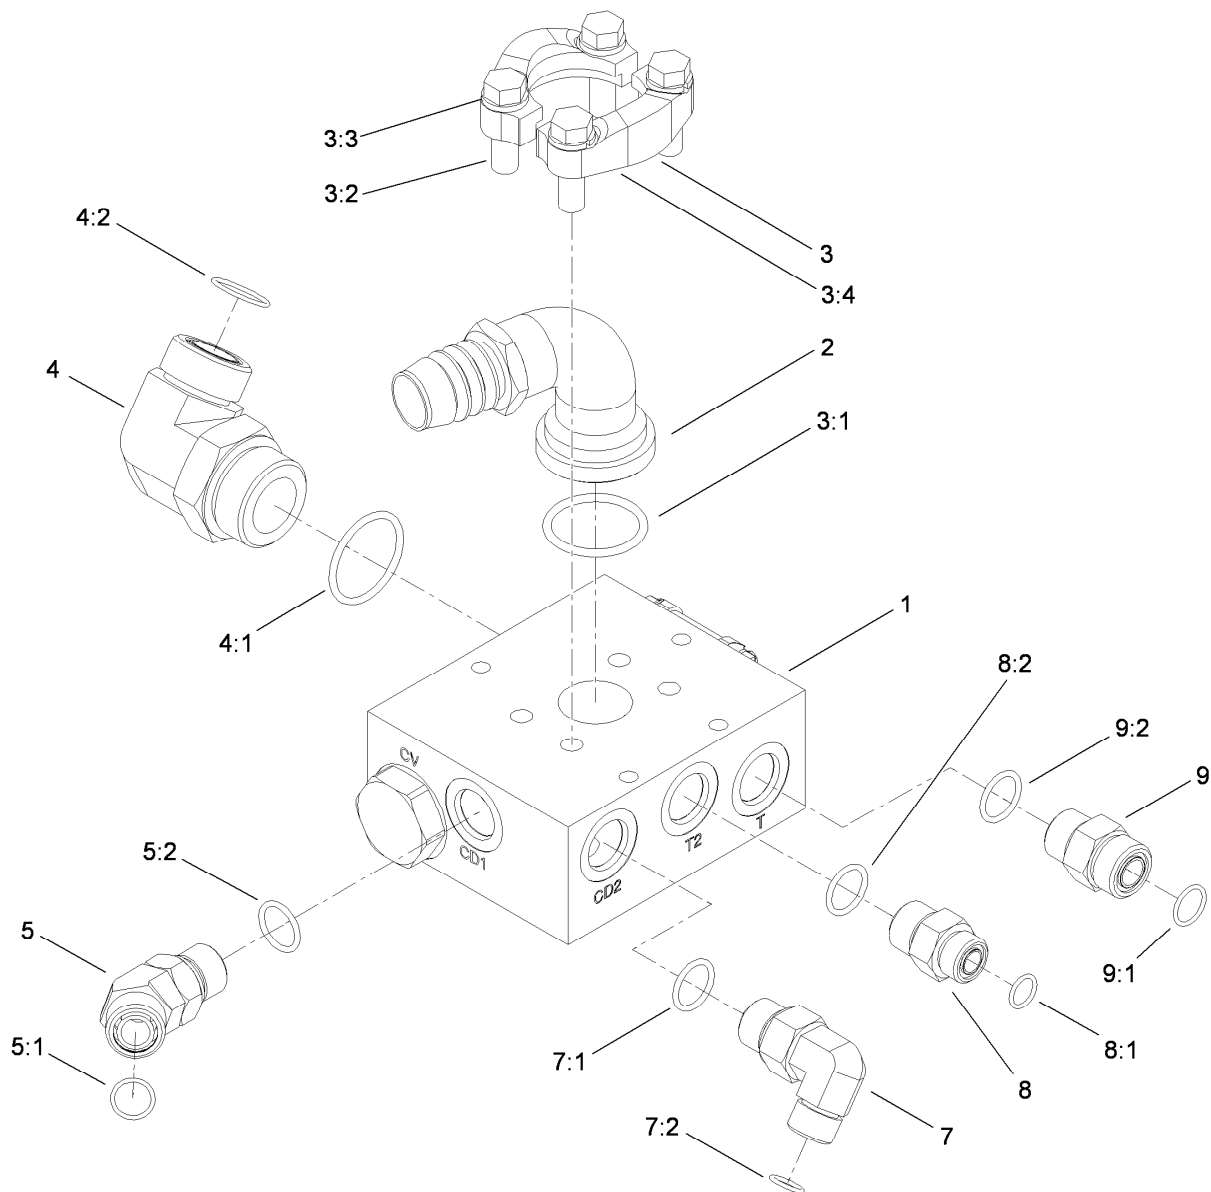 


Filter Manifold Assembly

Ref.	Part Number	Qty.	Description
1	117-5463	1	Manifold-Filter
2	112-7374	1	Fitting
3	114-0090	1	Flange Kit
3:1	115-5420	1	O-Ring
3:2	324-6	4	Screw-HH
3:3	3253-6	4	Washer-Lock
3:4		2	Halve-Flange ●
4	340-79	1	Fitting-Elbow 90
4:1	237-101	1	O-Ring
4:2	340-65	1	O-Ring
5	340-14	1	Fitting-HYD, 45 DEG


Ref.	Part Number	Qty.	Description
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
7	340-105	1	Fitting-Elbow, 90 DEG
7:1	237-80	1	O-Ring
7:2	237-30	1	O-Ring
8	340-6	1	Fitting-Straight
8:1	237-30	1	O-Ring
8:2	237-80	1	O-Ring
9	340-7	1	Fitting-Straight
9:1	237-65	1	O-Ring
9:2	237-80	1	O-Ring

 ● Not serviced separately

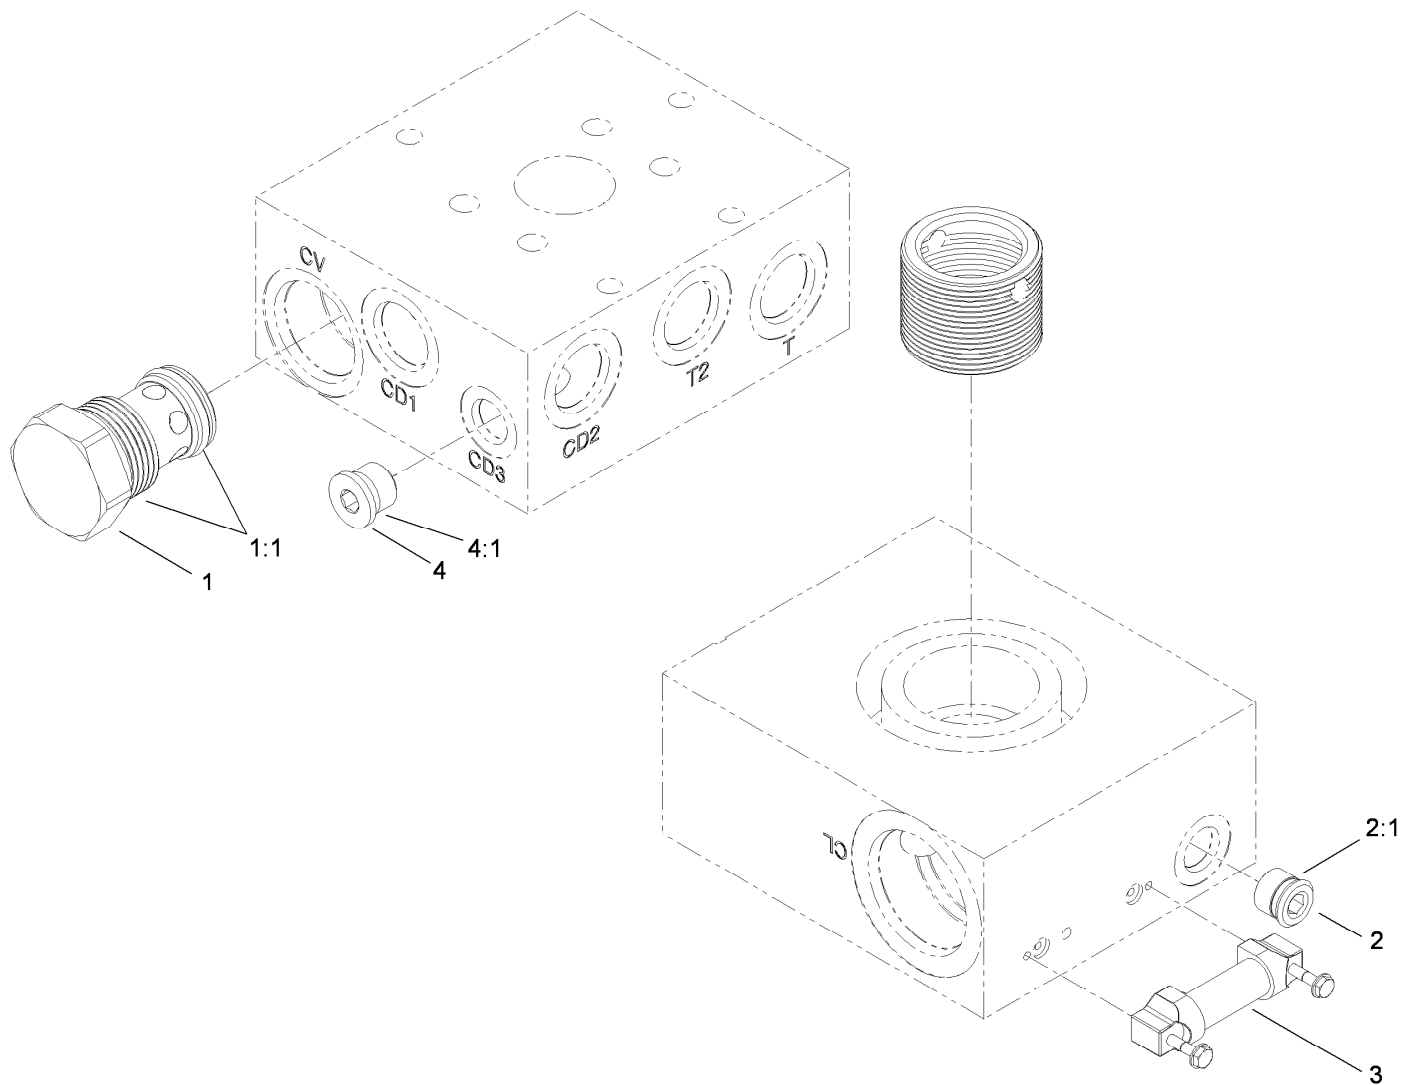


Hydraulic Filter Manifold Assembly No. 117-5463

Ref.	Part Number	Qty.	Description
1	115-5411	1	Valve-Check, 43 PSI
1:1	115-5416	1	Seal Kit
2	106-1026	1	Plug-HYD
2:1	237-42	1	O-Ring
3	115-5412	1	Indicator, 25 PSI
4	353-989	1	Plug-Hex, Hollow
4:1	237-42	1	O-Ring

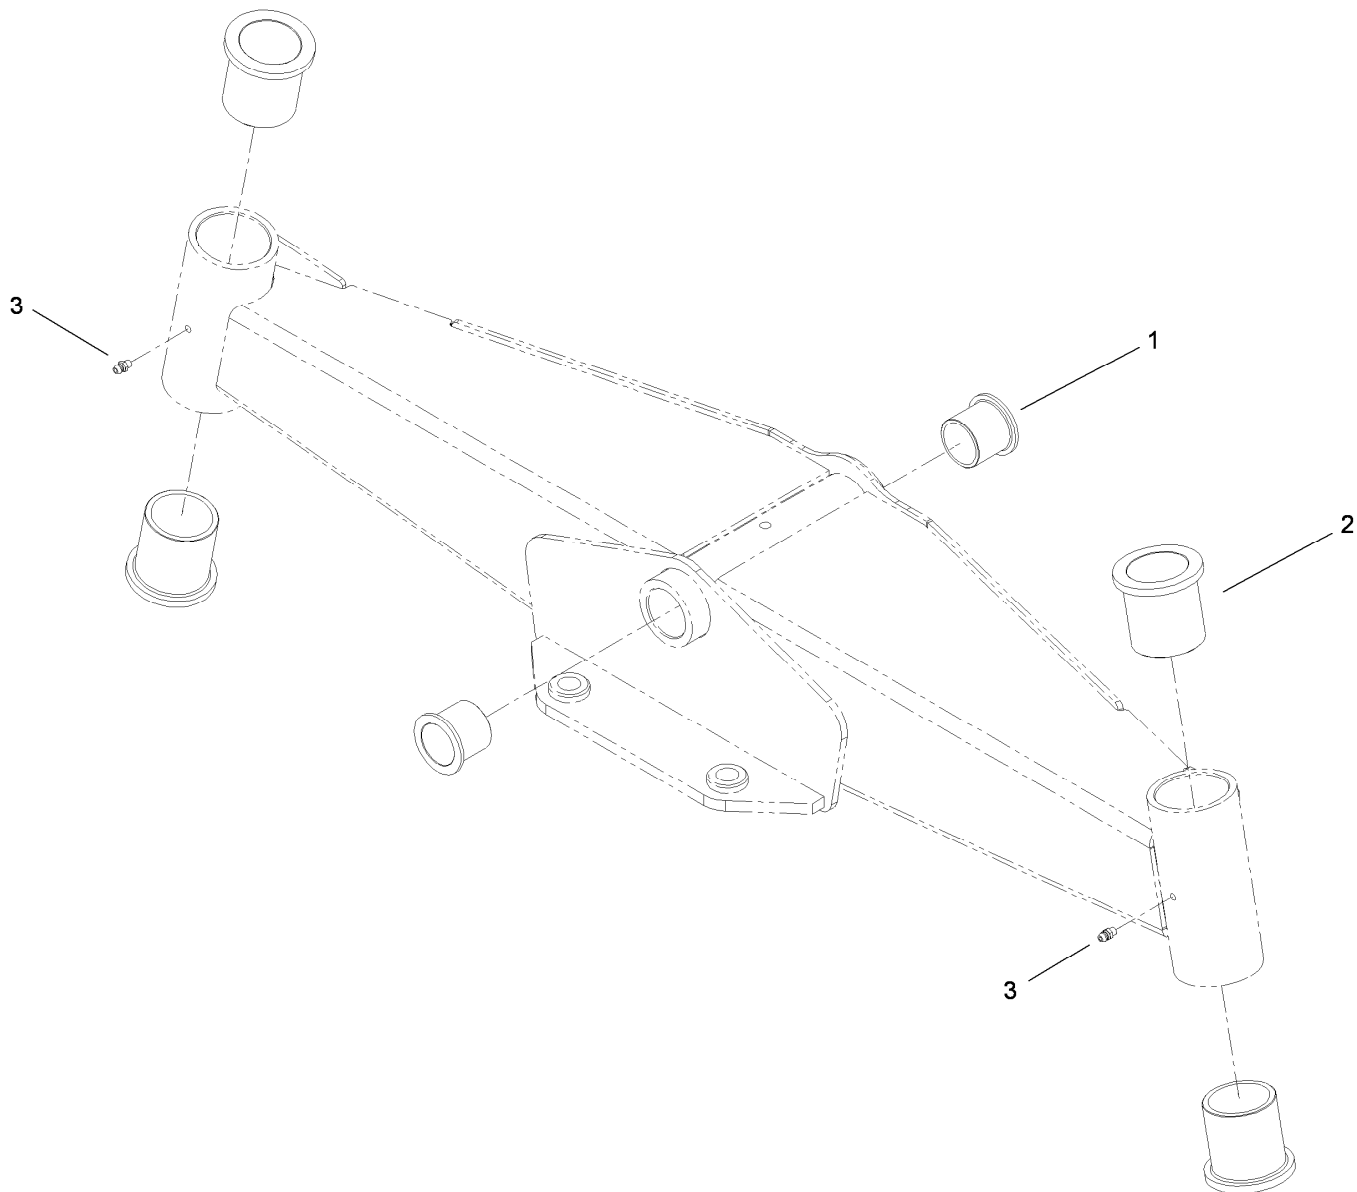 

Axle Assembly No. 114-5982-01

Ref.	Part Number	Qty.	Description
1	69-6470	2	Bushing-Castor
2	100-2506	4	Bushing-Castor
3	302-5	2	Fitting-Grease

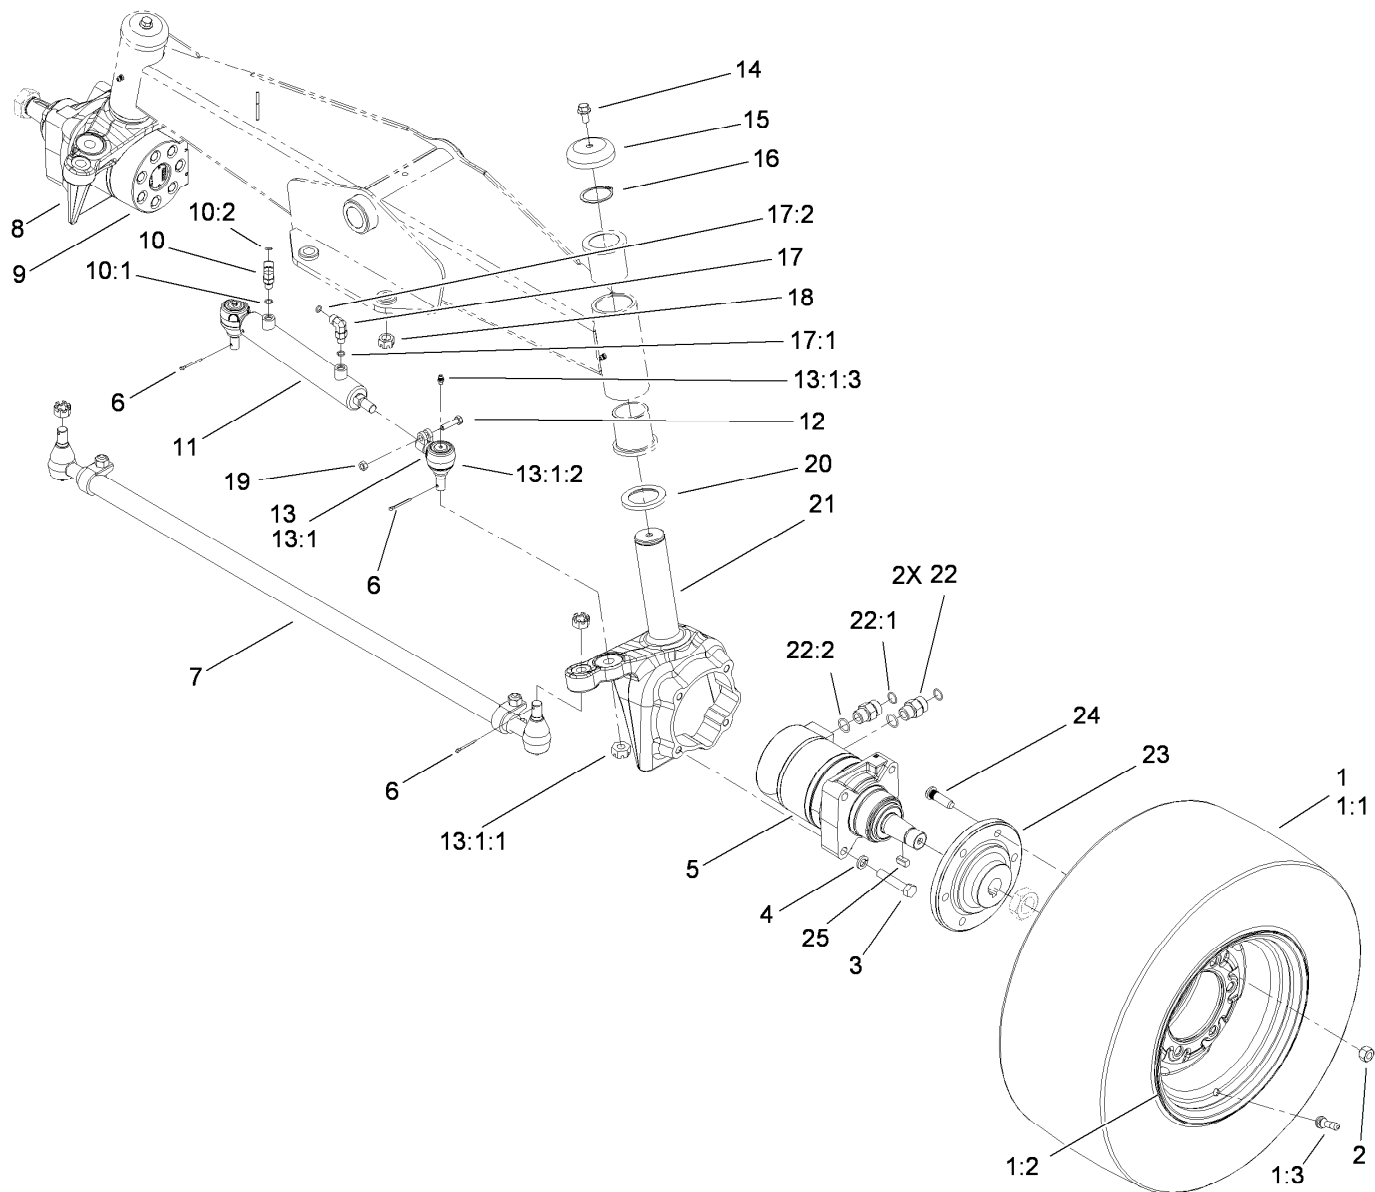 


Rear Axle Assembly

Ref.	Part Number	Qty.	Description
1	115-5445	2	Tire And Wheel ASM
1:1	112-7305	1	Tire
1:2	115-5446	1	Wheel 12-8.50, 6 Bolt
1:3	5108	1	Valve
2	92-7483	12	Nut-Lug
3	325-11	8	Screw-HH
4	3253-7	8	Washer-Lock
5	114-5593	1	HYD Motor ASM
6	3272-12	6	Pin-Cotter
7	110-6049-03	1	Tie Rod ASM
8	110-6015-01	1	Spindle-Steer, RH
9	114-5594	1	HYD Motor ASM
10	340-103	2	Fitting-HYD, 45 DEG
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	98-0661	2	HYD Cylinder ASM
12	3210-7	2	Screw-HH
13	106-6895-03	2	Ball Joint ASM
13:1		1	Joint-Ball ●


Ref.	Part Number	Qty.	Description
13:1:1	32136-13	1	Nut-SHH
13:1:2	106-6896	1	Seal
13:1:3	302-5	1	Fitting-Grease
14	3234-12	2	Screw-HHF
15	100-3362	2	Cap-Spindle
16	100-4196	2	Ring-Retaining
17	340-132	2	Fitting-Elbow, 90 DEG
17:1	237-78	1	O-Ring
17:2	237-21	1	O-Ring
18	32136-13	2	Nut-SHH
19	32152-5	2	Nut-Hex
20	100-2508	2	Washer-Thrust
21	110-6013-01	1	Spindle-Steer, LH
22	340-7	4	Fitting-Straight
22:1	237-65	1	O-Ring
22:2	237-80	1	O-Ring
23	117-1102-03	2	Hub-7.50 Inch, 6 Bolt
24	10-6830	12	Stud-Type, Drive
25	117-5198	2	Key-Square

 ● Not serviced separately

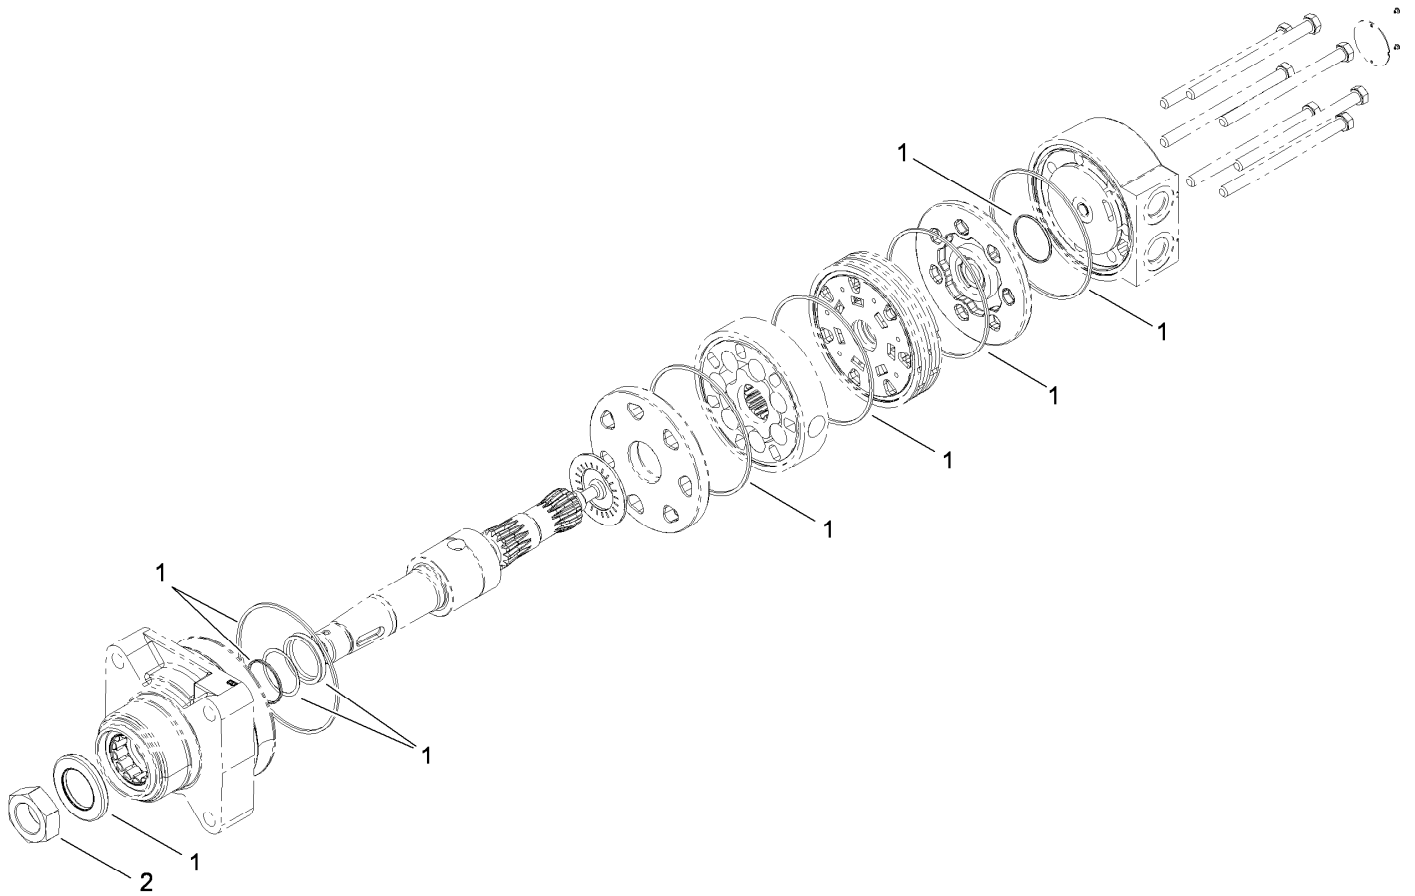

Left Rear Wheel Hydraulic Motor Assembly No. 114-5593


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-6131	1	Seal Kit
2	107-9319	1	Nut-Hex

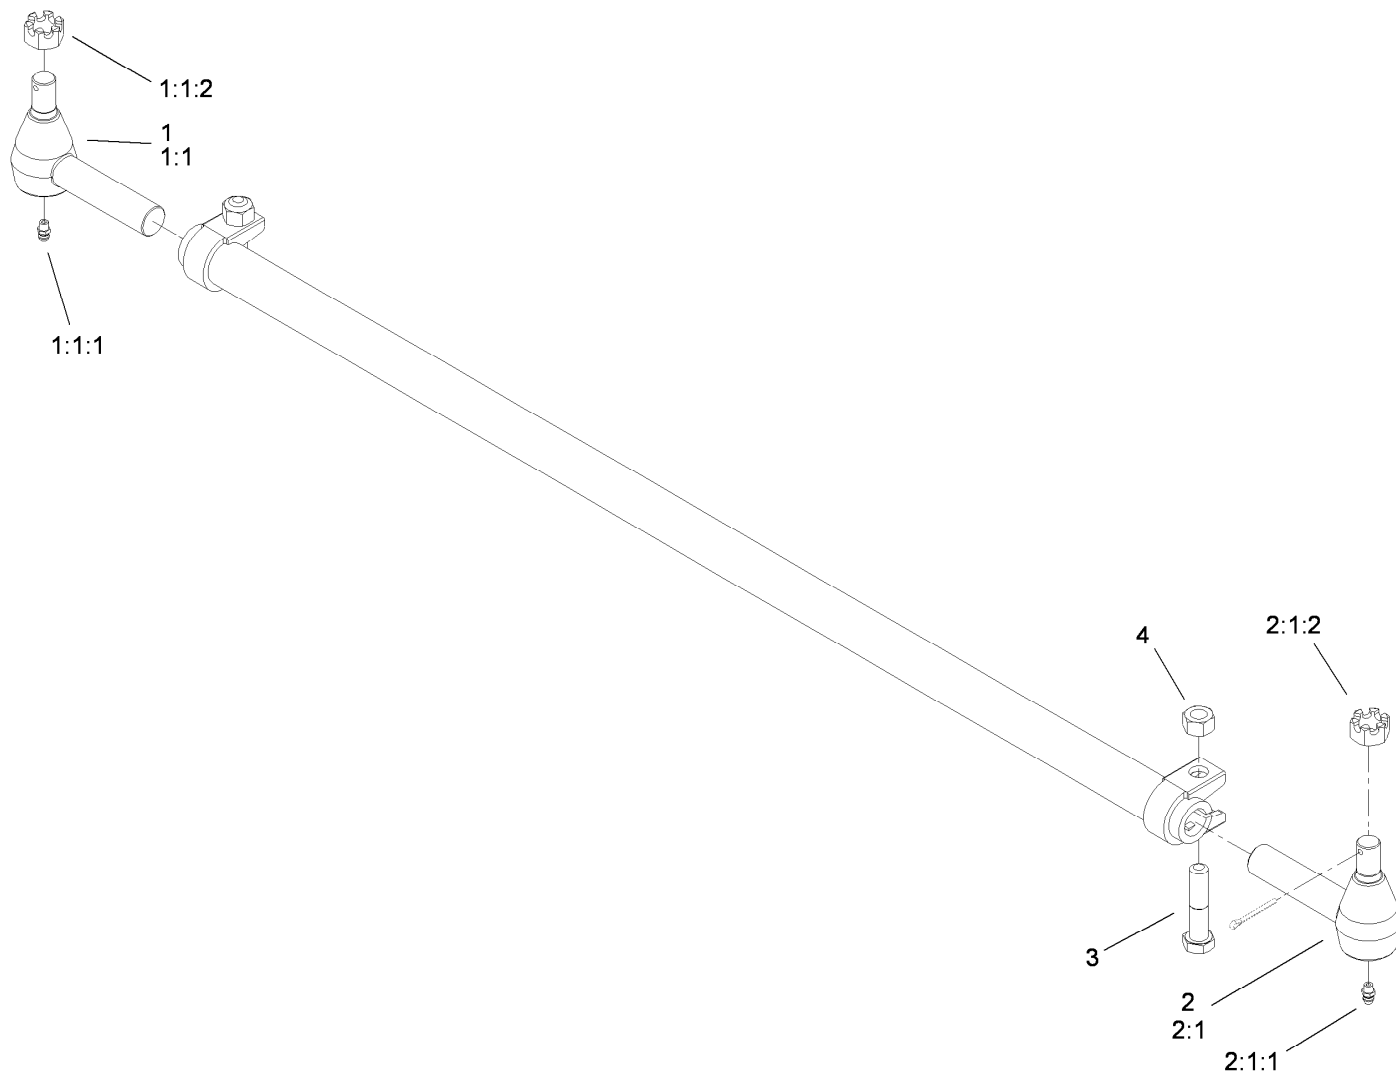 

Tie Rod Assembly No. 110-6049-03


Ref.	Part Number	Qty.	Description
1	110-6141-03	1	RH Tie Rod End ASM
1:1		1	Rod End-Tie, RH ●
1:1:1	302-5	1	Fitting-Grease
1:1:2	32136-2	1	Nut-SHH
2	110-6142-03	1	LH Tie Rod End ASM
2:1		1	Rod End-Tie, LH ●
2:1:1	302-5	1	Fitting-Grease
2:1:2	32136-2	1	Nut-SHH
3	44-2200	1	Screw-Blade
4	32153-7	1	Nut-Lock

 ● Not serviced separately

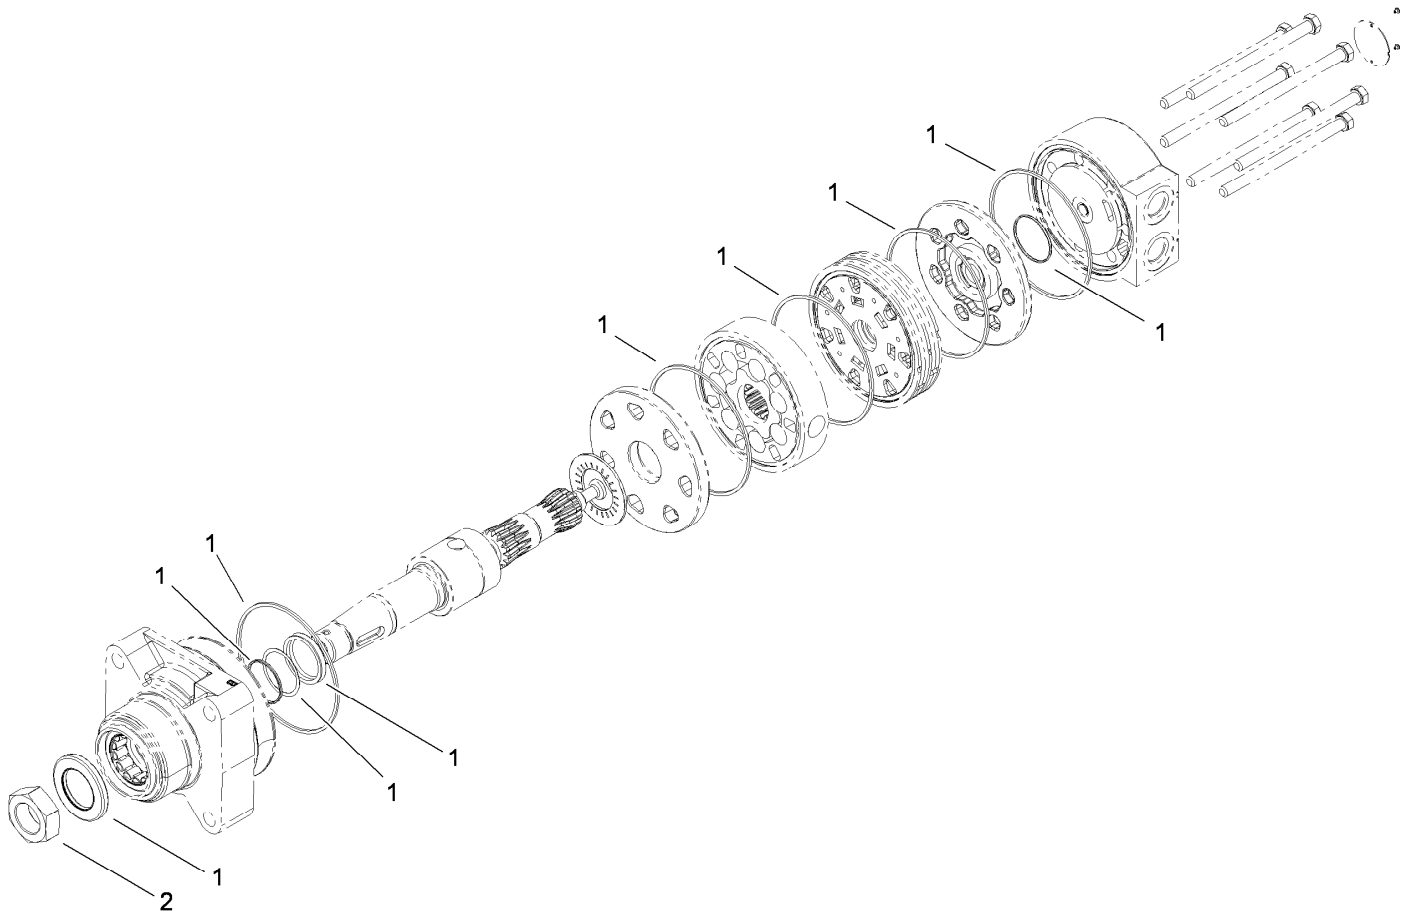

Right Rear Wheel Hydraulic Motor Assembly No. 114-5594

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-6131	1	Seal Kit
2	107-9319	1	Nut-Hex

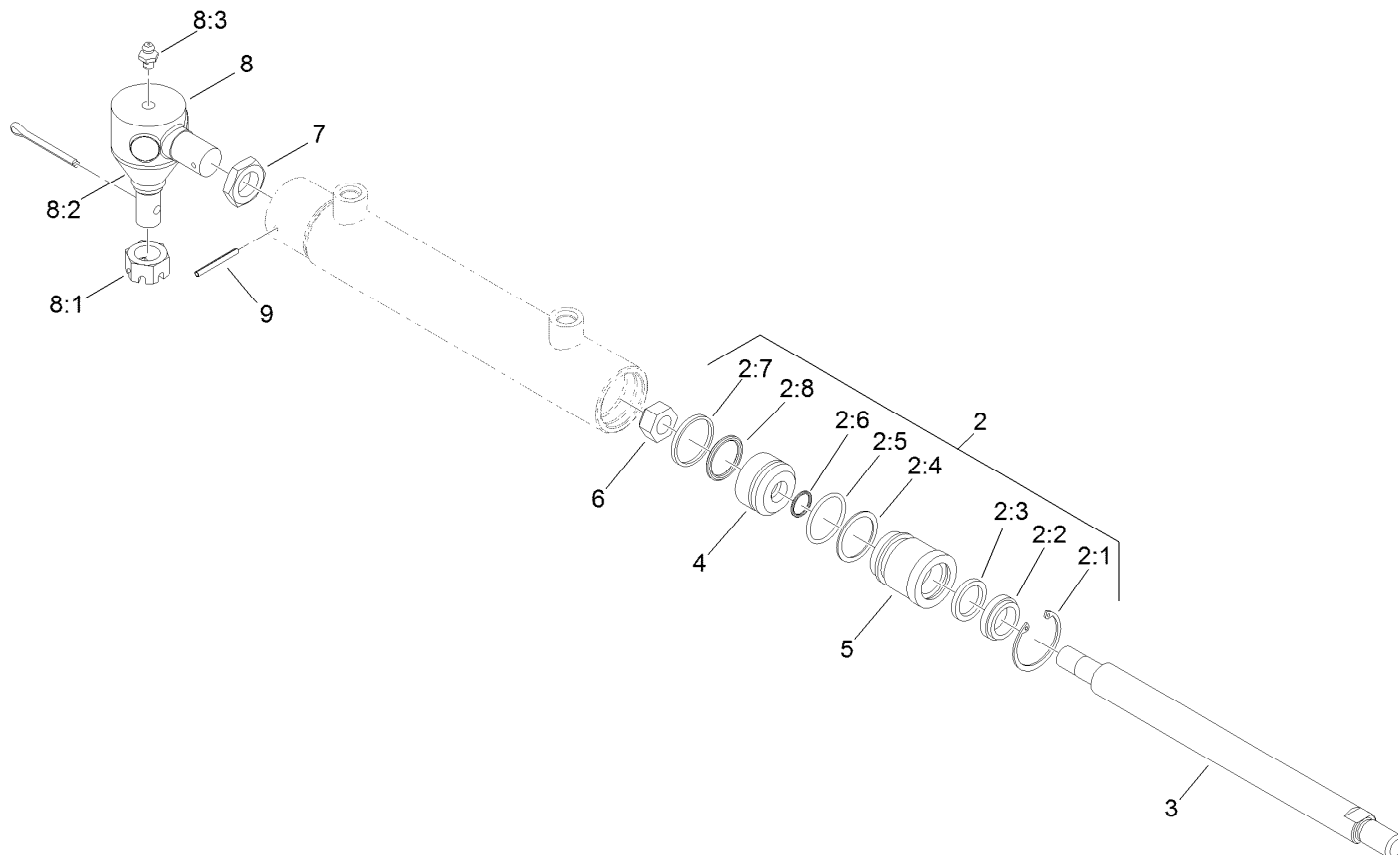 


Hydraulic Steering Cylinder Assembly No. 98-0661

Ref.	Part Number	Qty.	Description
2	98-0667	1	Repair Kit
2:1		1	Ring-Retaining ●
2:2		1	Wiper-Rod ●
2:3		1	Seal-U Cup ●
2:4		1	Ring-Back Up ●
2:5		1	O-Ring ●
2:6		1	O-Ring ●
2:7		1	Ring-Piston ●
2:8		1	O-Ring ●
3		1	Rod-Piston ●

Ref.	Part Number	Qty.	Description
4		1	Ring-Head ●
5		1	Piston ●
6		1	Nut-Lock ●
7	69-1980	1	Nut-Jam
8	82-5730	1	Tie Rod End ASM
8:1	105-7941	1	Nut-Hex, Slotted
8:2	105-7835	1	Seal
8:3	302-5	1	Fitting-Grease
9	32121-34	1	Pin-Roll

 
● Not serviced separately

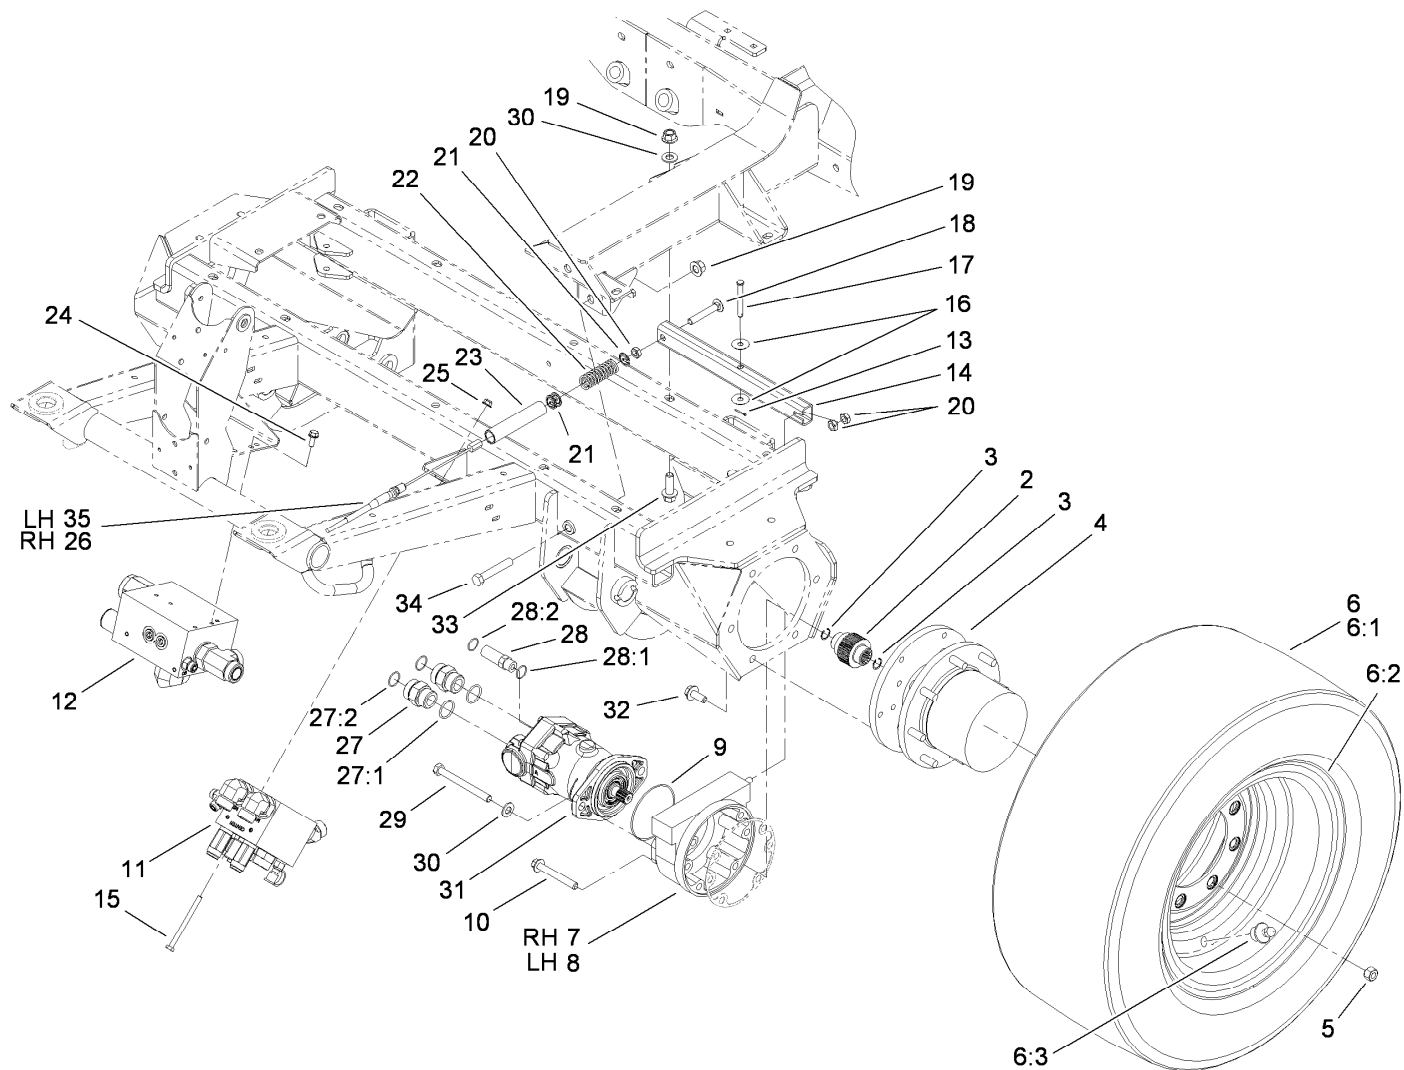

Front Axle and Brake Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	100-3046	2	Shaft-Brake, Splined	17	283-52	2	Pin-Clevis
3	93-7972	4	Ring-Retaining, Internal	18	3232-17	2	Screw-CARR
4	105-4500	2	Planetary ASM	19	99-5107	10	Nut-Lock
5	92-7483	16	Nut-Lug	20	3218-4	6	Nut-Jam
6	114-4860	2	Wheel And Tire ASM	21	94-3050	6	Plate-Spring
6:1	114-4861	1	Tire	22	94-3088	2	Spring-Compression
6:2	114-4862	1	Wheel	23	114-0161	2	Spacer-Plain
6:3	232-24	1	Stem-Valve	24	110-5053	4	Screw-HHF
7	100-3069	1	RH Brake ASM	25	104-8300	2	Nut-HF, NI
8	100-3070	1	LH Brake ASM	26	114-0159	1	Cable-Brake, RH
9	237-166	2	O-Ring	27	104-3797	4	Fitting-Straight
10	33106-090	8	Screw-HHF	27:1	237-146	1	O-Ring
11		1	Front PTO Valve ASM ●	27:2	340-65	1	O-Ring
12		1	Traction Valve ASM ●	28	94-2628	2	Fitting-STR
13	3272-6	2	Pin-Cotter	28:1	237-79	1	O-Ring
14	114-0160-03	2	Lever-Brake	28:2	237-30	1	O-Ring
15	322-19	2	Screw-HH	29	33116-120	4	Screw-HH
16	105-6814	4	Washer-Plain	30	3256-26	12	Washer-Flat

 ● Not serviced separately

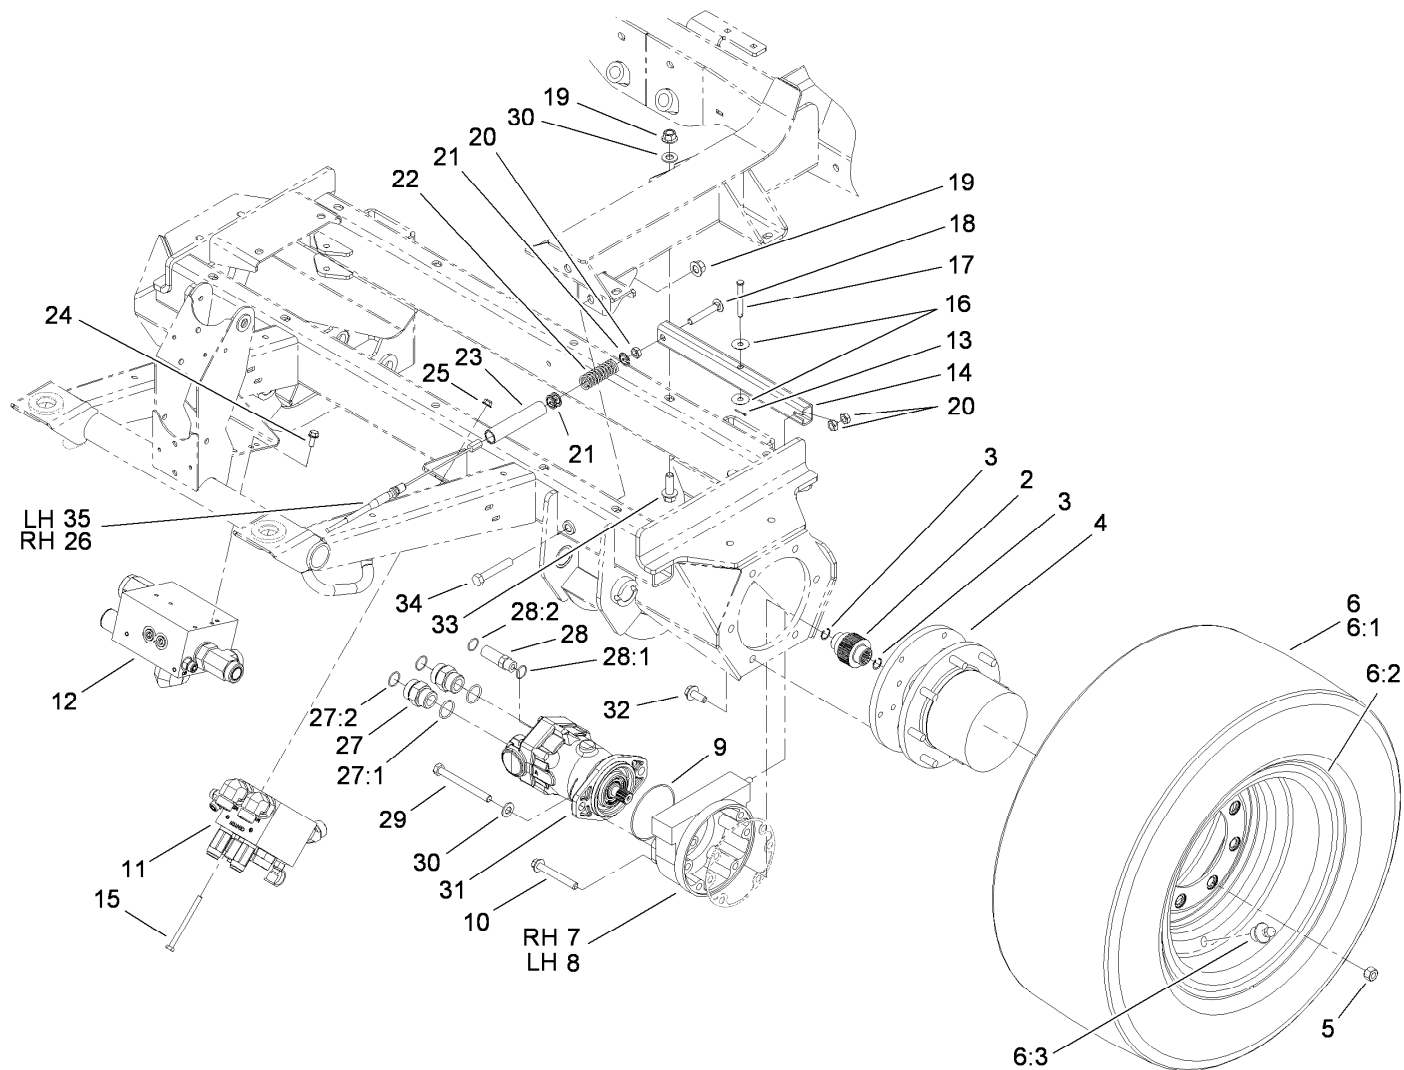


Front Axle and Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
31	114-4849	2	Piston Motor ASM
32	33106-030	12	Screw-HHF
33	100-6116	8	Screw-HHF

Ref.	Part Number	Qty.	Description
34	325-12	2	Screw-HH
35	114-0158	1	Cable-Brake, LH

 ● Not serviced separately

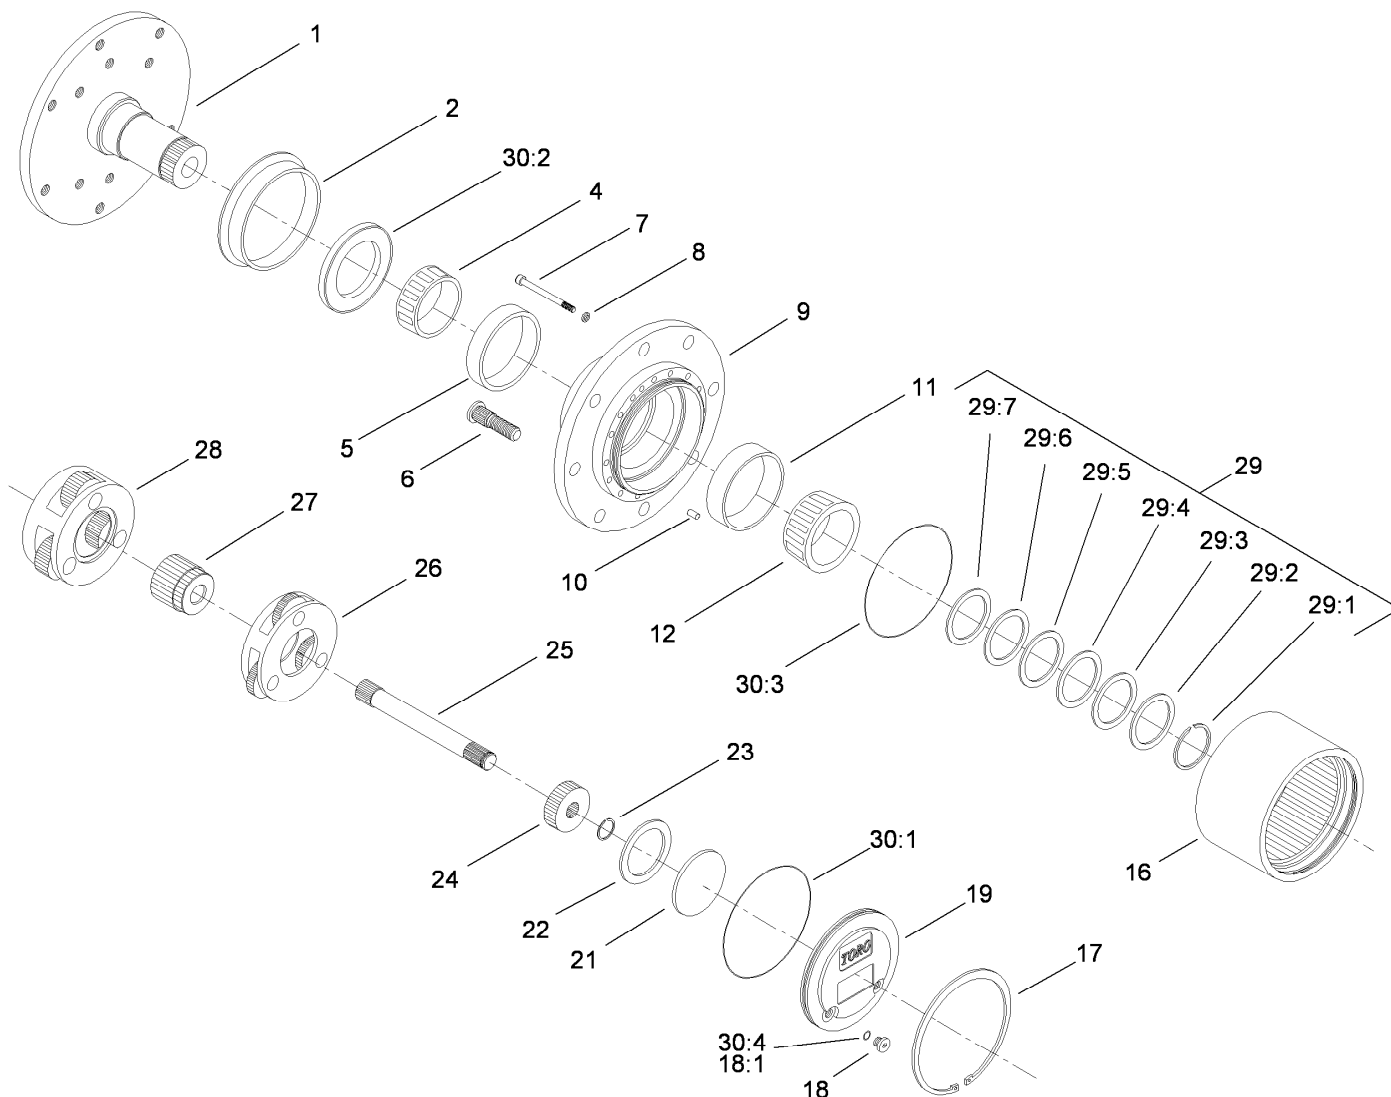


Planetary Assembly No. 105-4500

Ref.	Part Number	Qty.	Description
1		1	Spindle ■
2	105-8122	1	Seal-Boot
4	105-8120	1	Bearing-Cone
5	105-8119	1	Bearing-Cup
6	105-8124	8	Stud-Wheel
7	105-8125	16	Bolt-Head, Socket
8	3253-18	16	Washer-Lock
9		1	Housing ■
10	105-8121	1	Pin-Dowel
11	105-8117	1	Bearing-Cup
12	105-8118	1	Bearing-Cone
16	105-8113	1	Gear-Ring
17	105-8132	1	Ring-Retaining
18	353-990	2	Plug ASM
18:1	237-78	1	O-Ring
19	105-8138	1	Cap-End
21	105-8133	1	Plug-Thrust
22	105-8123	1	Washer-Thrust
23	105-8131	1	Ring-Retaining

Ref.	Part Number	Qty.	Description
24	105-8114	1	Gear-Primary
25	105-8115	1	Shaft-Drive
26	105-8129	1	Carrier-Primary
27	105-8139	1	Gear-Secondary
28	105-8130	1	Carrier-Secondary
29	105-8136	1	Shim Kit
29:1		1	Ring-Snap ■
29:2		1	Shim-Bearing, 2.9Mm ■
29:3		1	Shim-Bearing, 2.8Mm ■
29:4		1	Shim-Bearing, 2.7Mm ■
29:5		1	Shim-Bearing, 2.6Mm ■
29:6		1	Shim-Bearing, 2.5Mm ■
29:7		1	Shim-Bearing, 2.4Mm ■
30	105-8137	1	Seal Kit ●
30:1		1	O Ring-Flange Cap ■
30:2		1	Seal-Oil ■
30:3		2	O Ring-End Cap ■
30:4	237-78	2	O-Ring


● Not illustrated

 ■ Not serviced separately

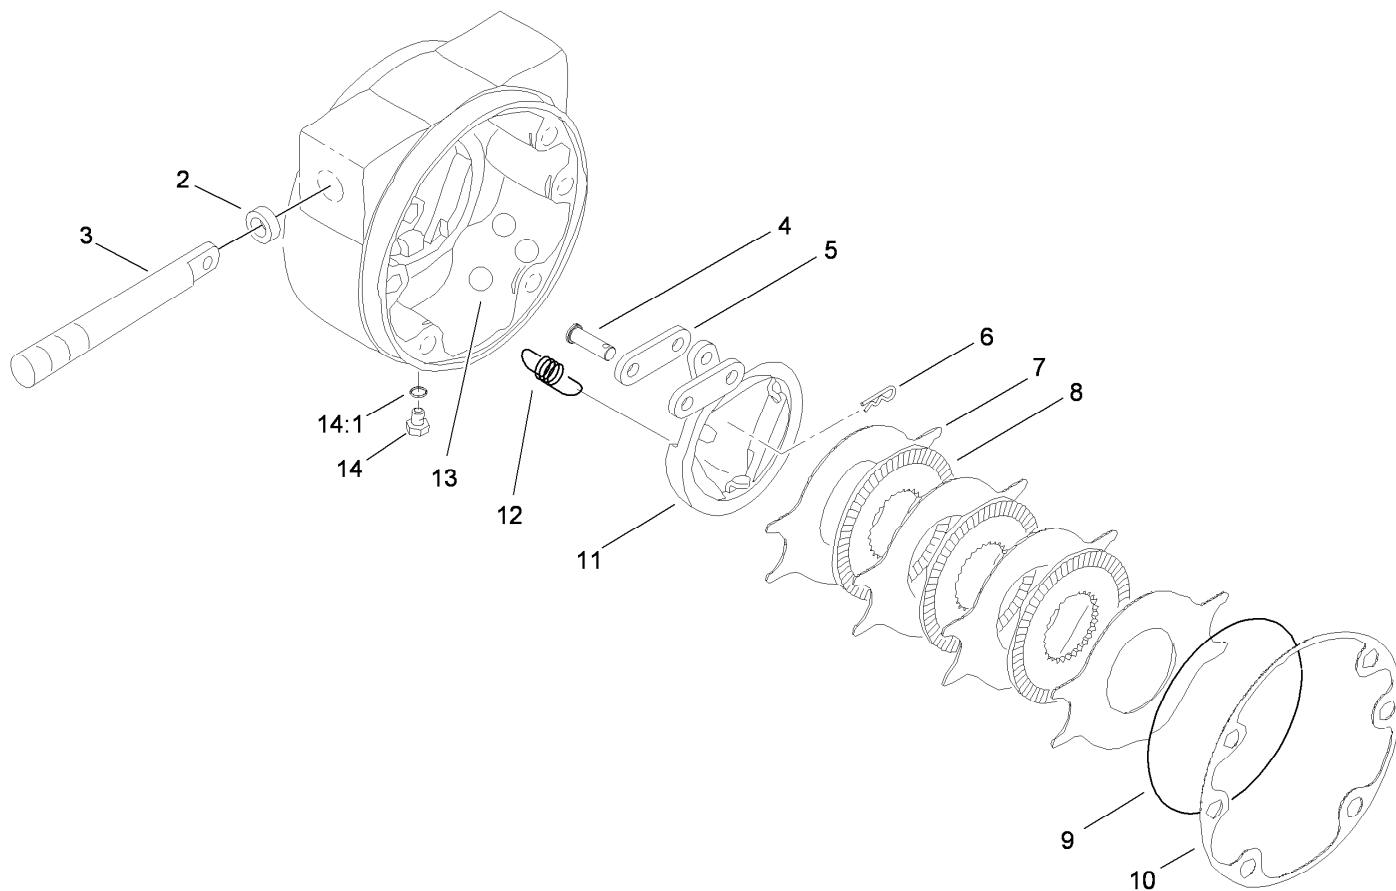


Brake Assembly No. 100-3069

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4280	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

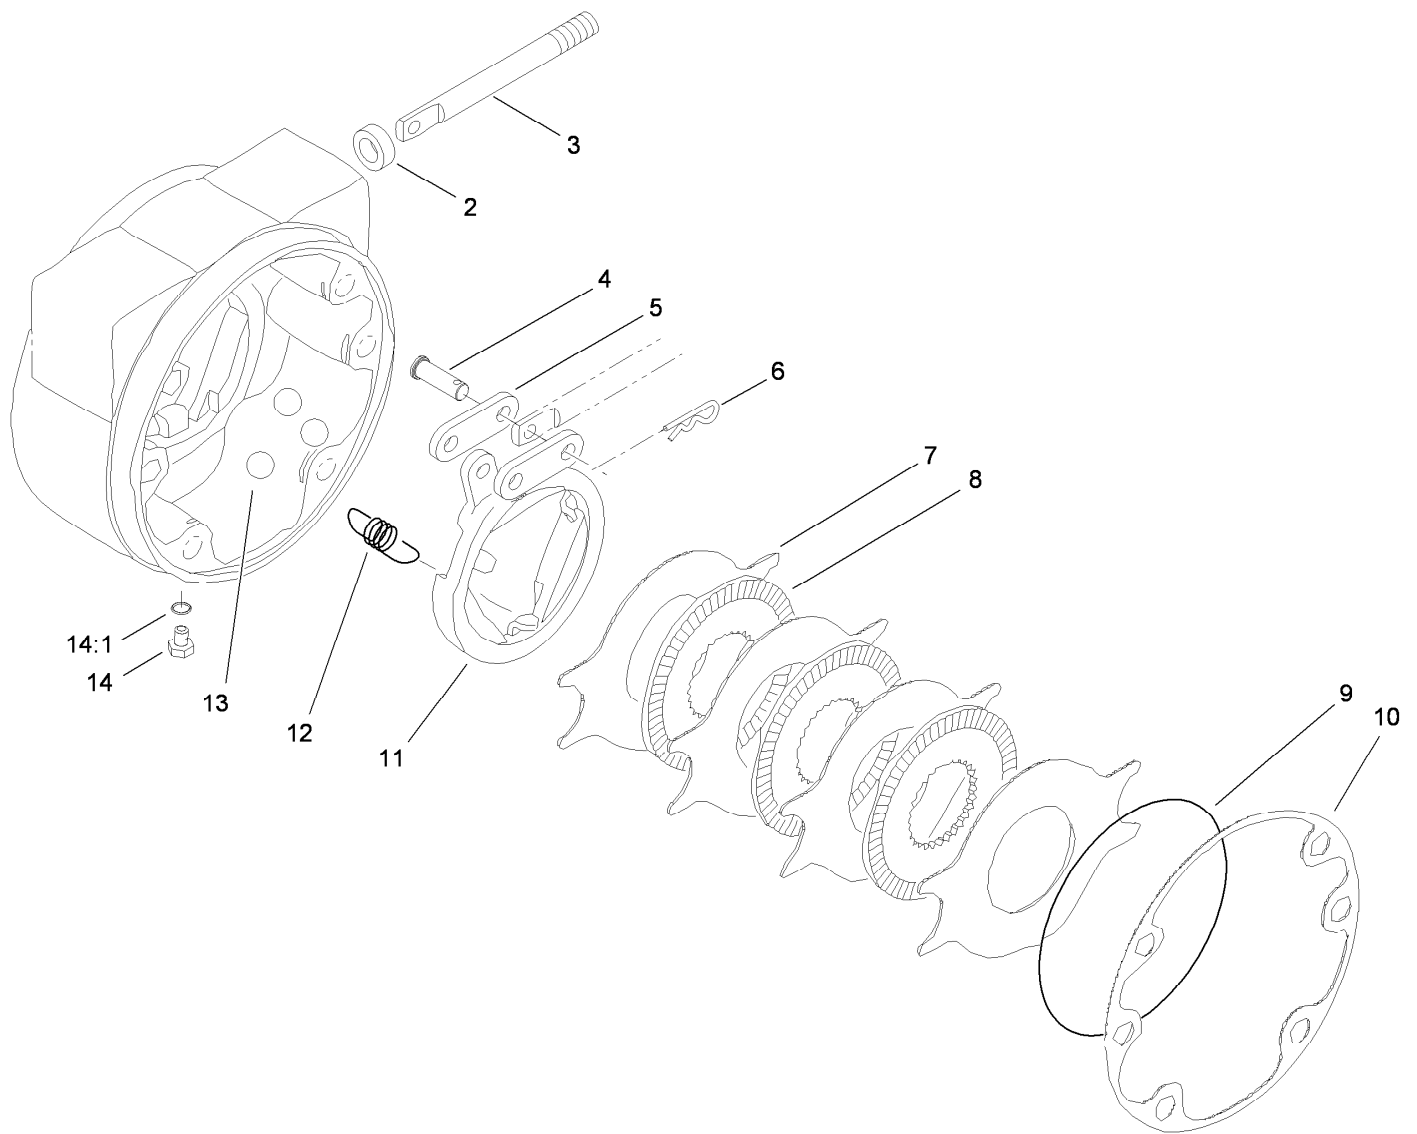 

Brake Assembly No. 100-3070



Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4279	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

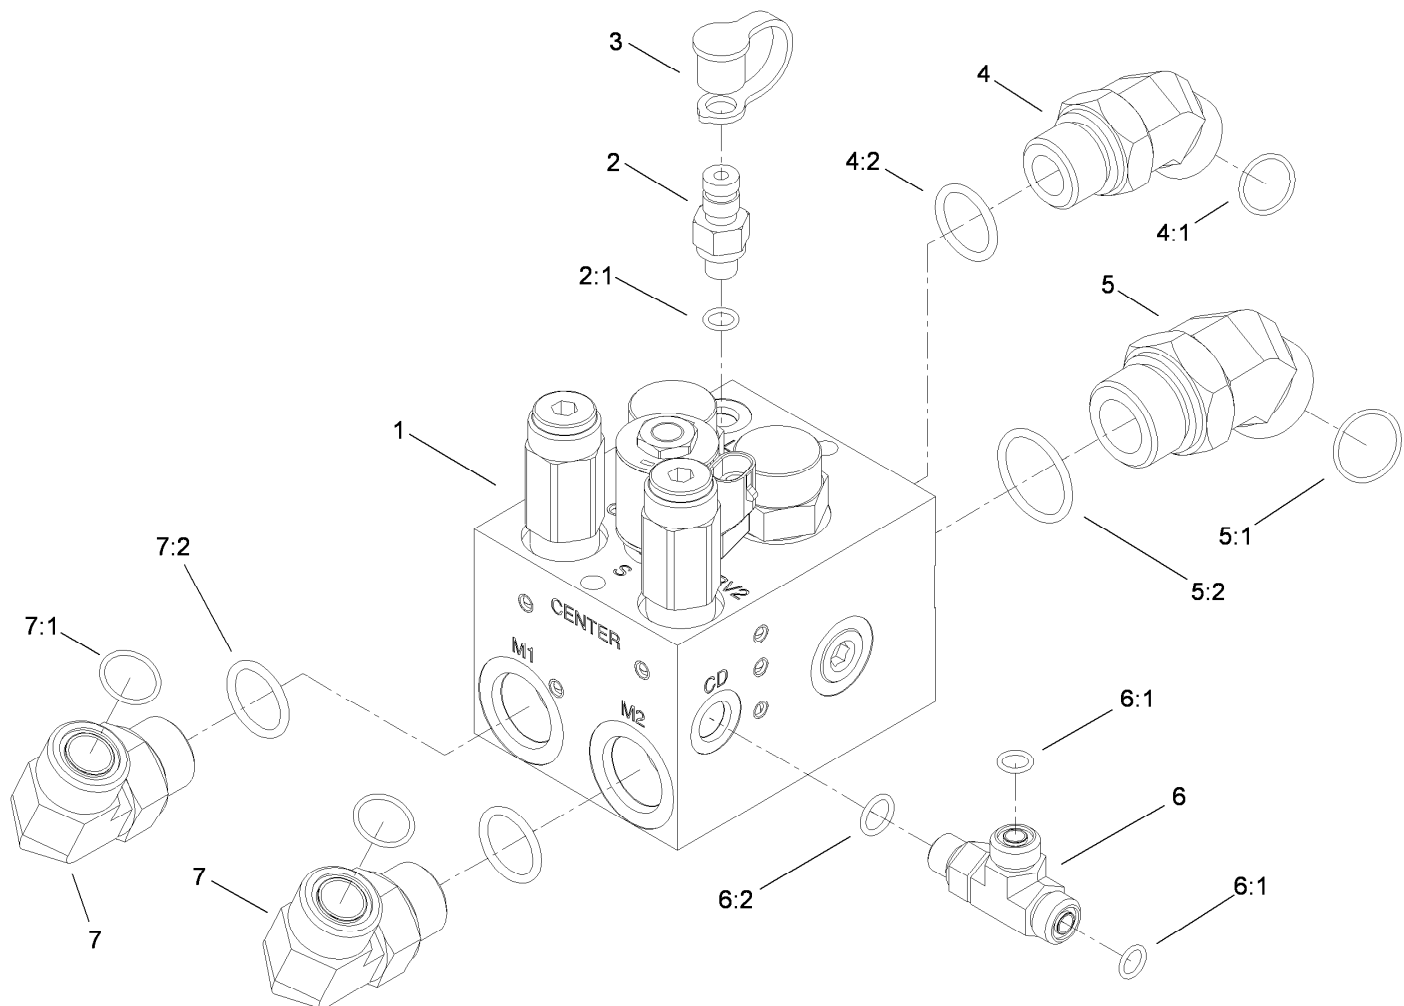 

Front PTO Valve Assembly


Ref.	Part Number	Qty.	Description
1	117-1110	1	Manifold-PTO, Front
2	354-77	1	Fitting-Quick
2:1	237-78	1	O-Ring
3	354-79	1	Cap-Dust
4	100-5530	1	Fitting-45 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	104-3509	1	Fitting-HYD, 45 DEG

Ref.	Part Number	Qty.	Description
5:1	237-146	1	O-Ring
5:2	340-65	1	O-Ring
6	340-86	1	Fitting-Tee
6:1	237-22	2	O-Ring
6:2	237-42	1	O-Ring
7	340-142	2	Fitting-Elbow-90
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring

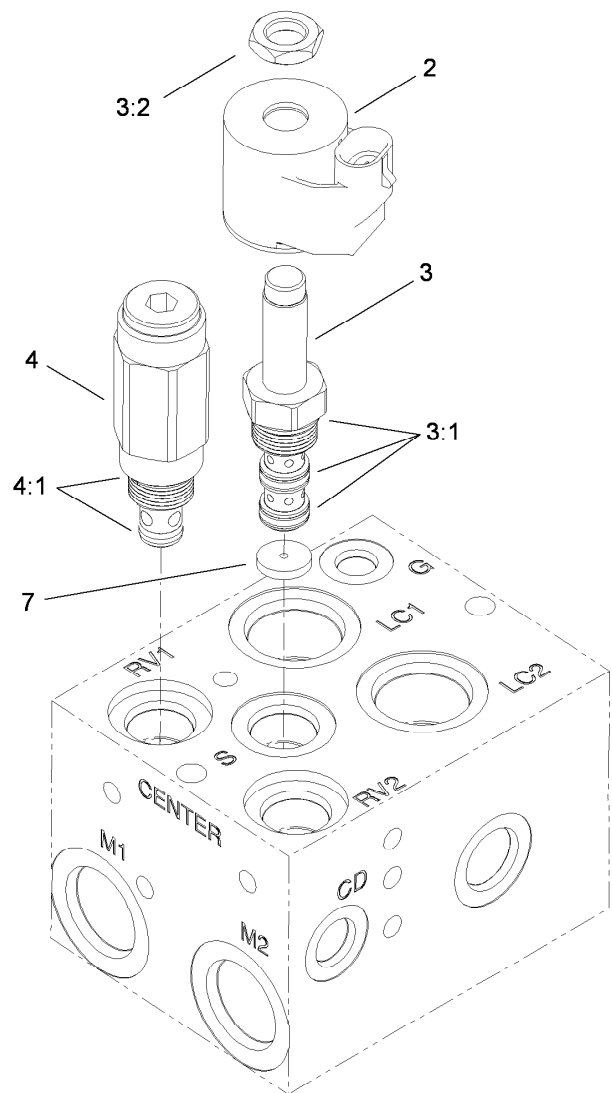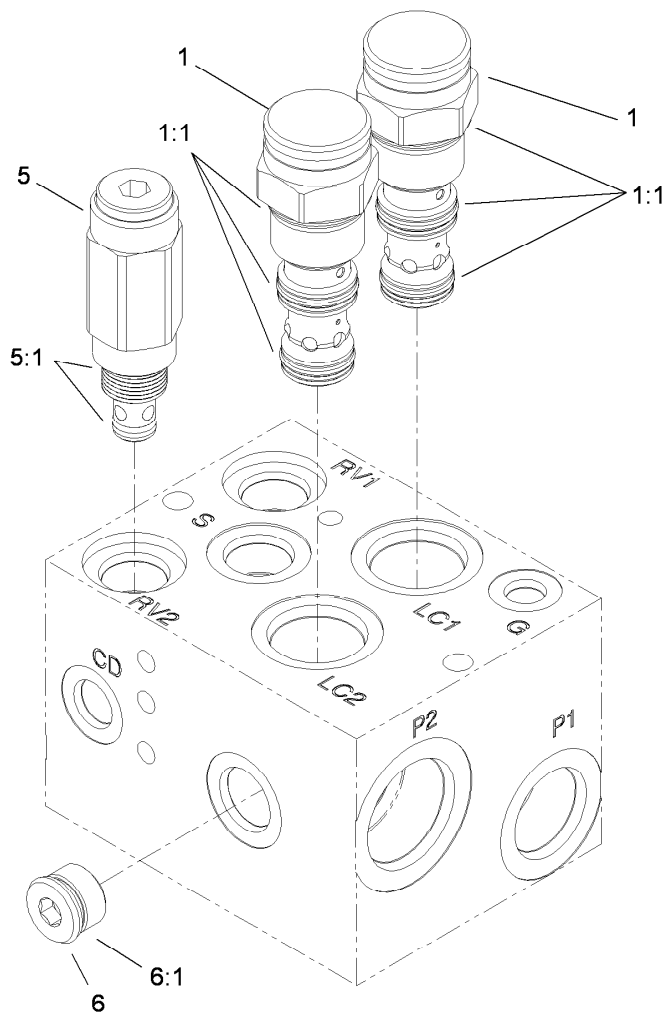  

Hydraulic PTO Manifold Assembly No. 117-1110


Ref.	Part Number	Qty.	Description
1	114-5511	2	Cartridge-Logic
1:1	114-5515	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	114-5510	1	Valve-Relief, 3000 PSI
4:1	105-9156	1	Seal Kit
5	114-5512	1	Valve-Relief, 600 PSI
5:1	105-9156	1	Seal Kit
6	106-1027	1	Plug-HYD
6:1	237-79	1	O-Ring
7	117-2791	1	Disc-Orifice (.050)

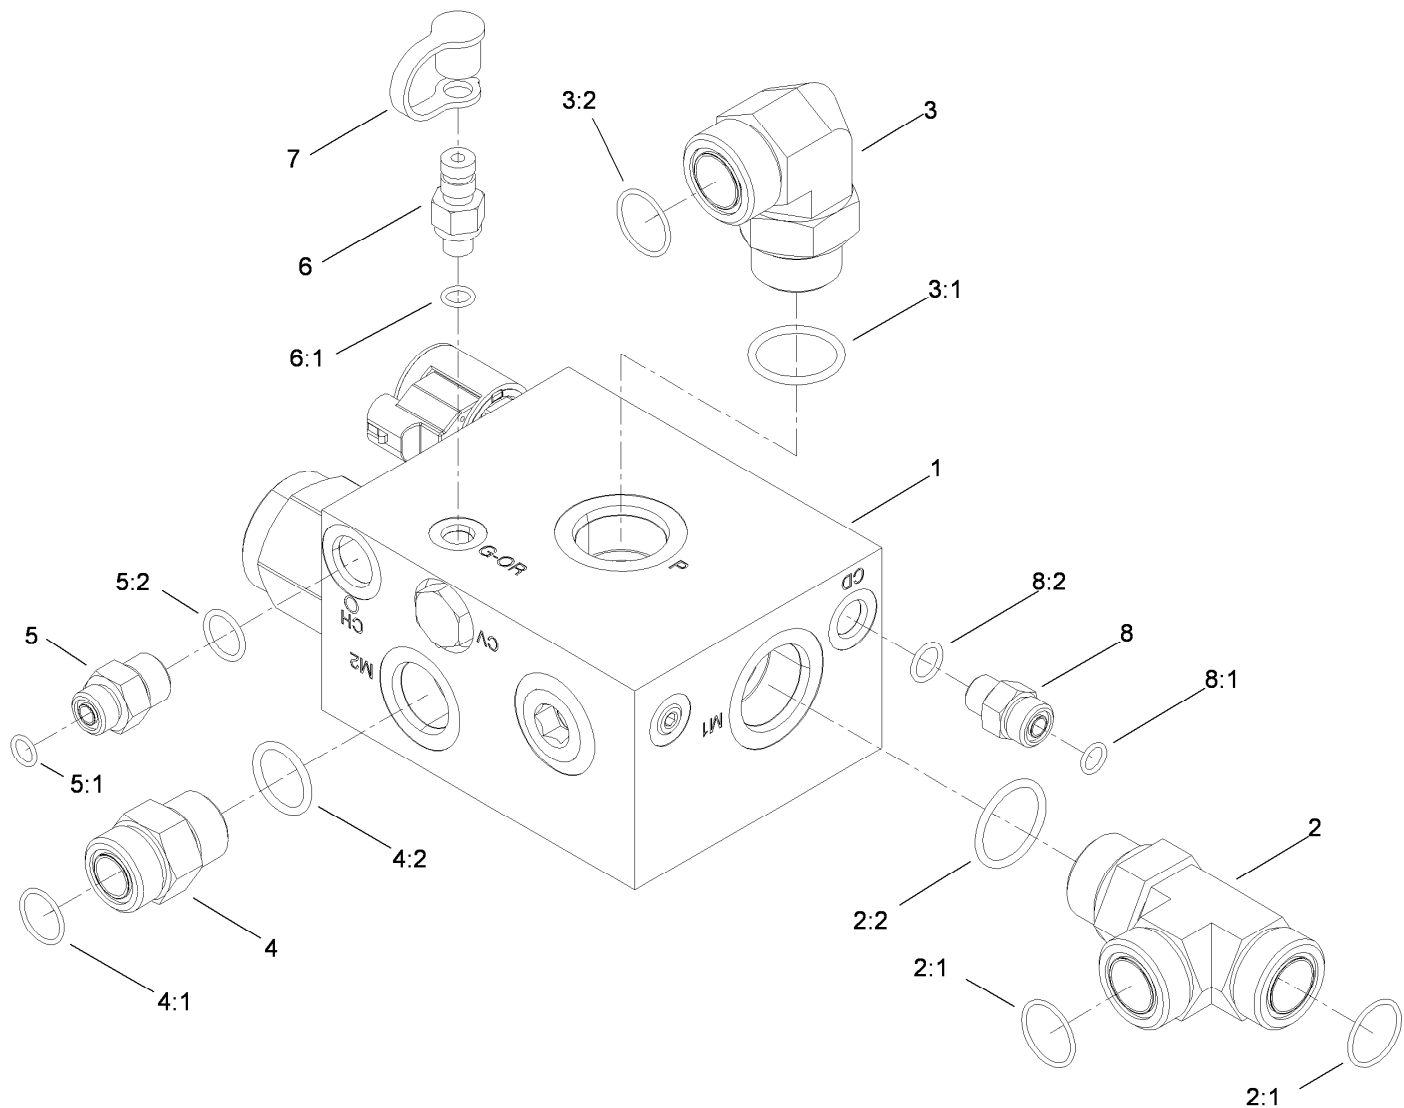 

Traction Valve Assembly

Ref.	Part Number	Qty.	Description
1	110-6062	1	Manifold-Traction
2	104-3795	1	Fitting-Tee
2:1	340-65	2	O-Ring
2:2	237-146	1	O-Ring
3	340-129	1	Fitting-Elbow, 90 DEG
3:1	237-146	1	O-Ring
3:2	340-65	1	O-Ring
4	340-9	1	Fitting-STR
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring


Ref.	Part Number	Qty.	Description
5	340-3	1	Fitting-Straight
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	354-77	1	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	1	Cap-Dust
8	340-2	1	Fitting-Straight
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring

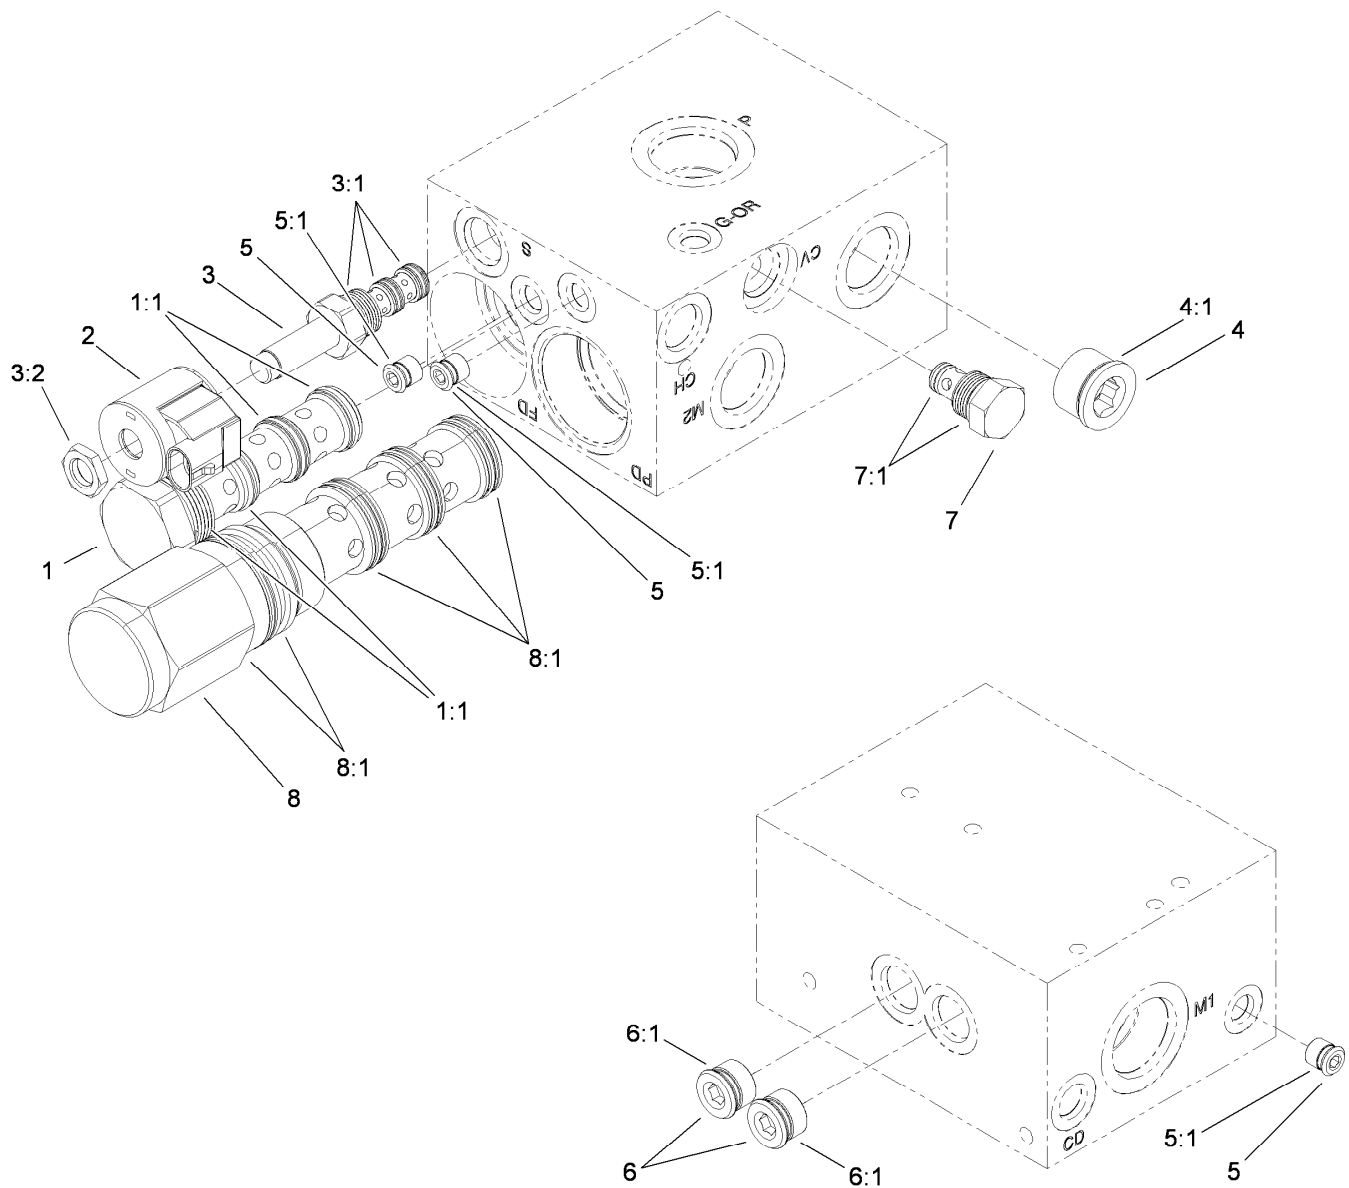 

Hydraulic Traction Manifold Assembly No. 110-6062

Ref.	Part Number	Qty.	Description
1	115-5407	1	Divider-Flow, 50/50 Split
1:1	115-5414	1	Seal Kit
2	105-9333	1	Coil-12Vdc
3	110-0494	1	Valve-Solenoid
3:1	110-8773	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	106-1029	1	Plug-Leak, Zero
4:1	237-81	1	O-Ring


Ref.	Part Number	Qty.	Description
5	353-990	3	Plug ASM
5:1	237-78	1	O-Ring
6	106-1027	2	Plug-HYD
6:1	237-79	1	O-Ring
7	105-9321	1	Check Valve ASM
7:1	105-9156	1	Seal Kit
8	115-5408	1	Valve-Directional, Pilot
8:1	115-5415	1	Seal Kit

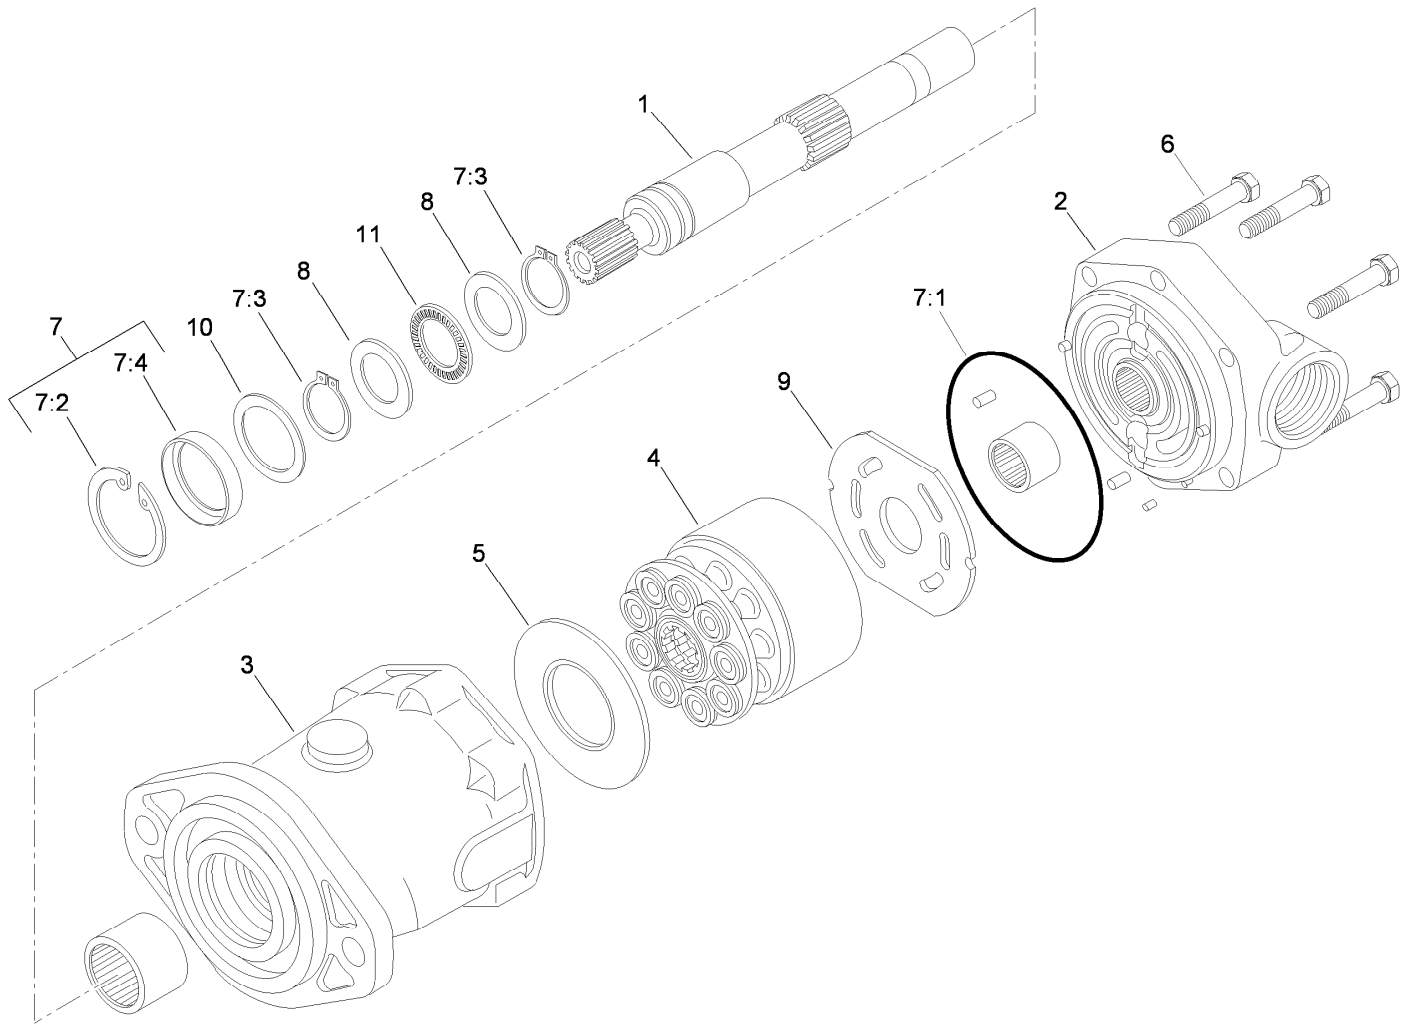 

Hydraulic Motor Assembly No. 114-4849

Ref.	Part Number	Qty.	Description
1	94-3004	1	Shaft-Drive, Splined
2		1	Backplate ASM ●
3		1	Housing ASM ●
4	76-6910	1	Rotating Kit
5	76-6970	1	Insert-Plate, Cam
6	94-3002	6	Screw-Cap
7	106-6876	1	Seal Kit
7:1		1	Ring-Retaining ●
7:2	76-7010	1	Ring-Retaining
7:3	76-7000	2	Ring-Retaining
7:4		1	Seal-Shaft ●
8	76-6950	2	Race-Thrust
9	94-3003	1	Plate-Valve
10	60-6240	1	Washer
11	76-6960	1	Bearing-Thrust

 ● Not serviced separately

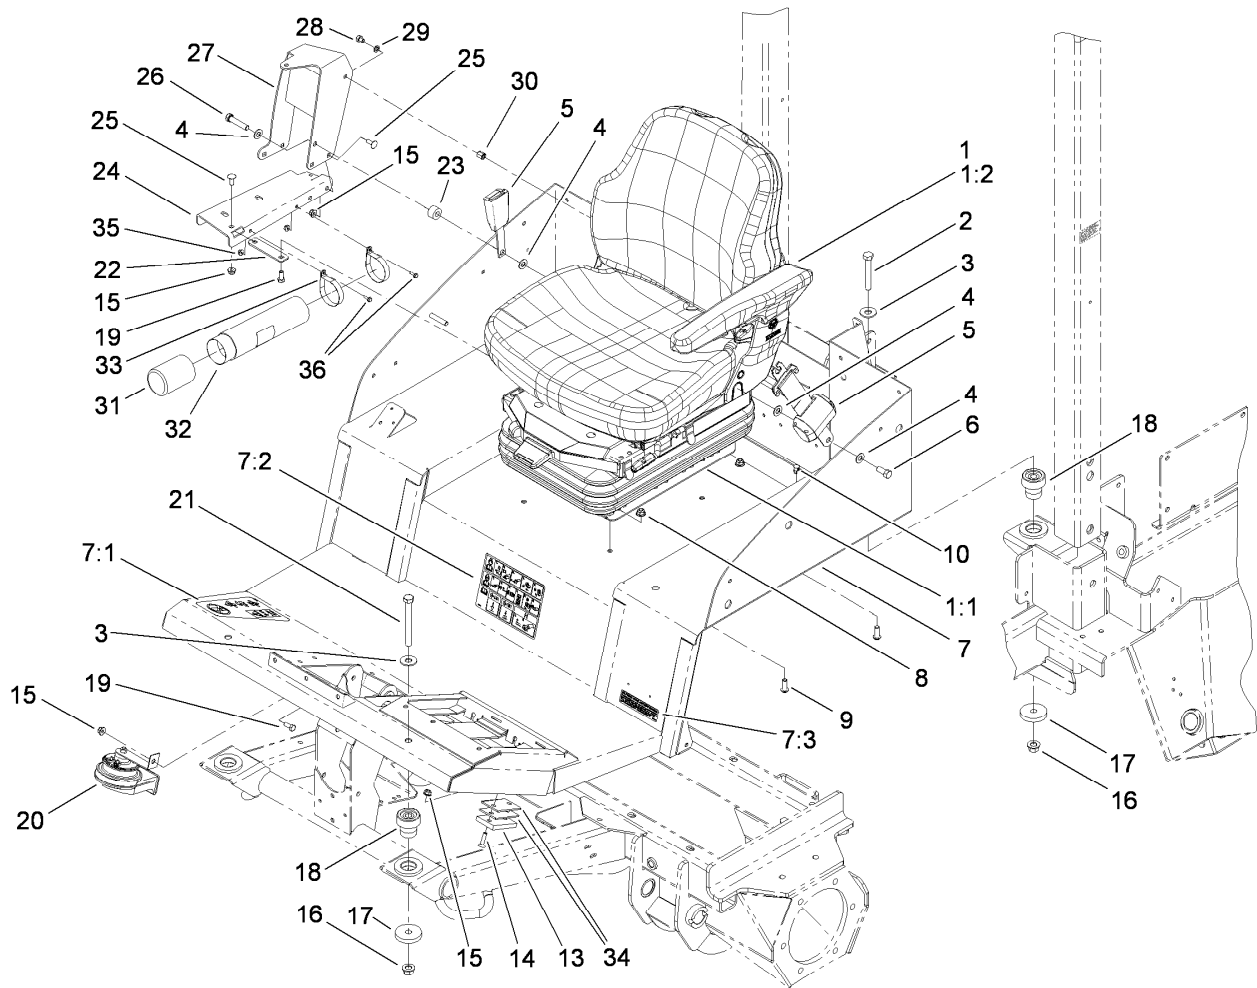


Seat and Platform Assembly

Ref.	Part Number	Qty.	Description
1		1	Seat And Suspension ASM
			●
1:1	108-1488	1	Seat Suspension ASM
1:2	117-9429	1	Matrix Cloth Seat ASM
2	112-7264	2	Screw-HH
3	3256-6	4	Washer-Flat
4	3256-25	4	Washer-Flat
5	110-0413	1	Seatbelt-Retractable
6	3212-4	1	Screw-HH
7	117-9400	1	Platform ASM
7:1	114-0849	1	Decal-Pedal, Traction
7:2	114-0846	1	Decal-Instructions, Operating
7:3	117-2718	1	Decal-Arrester, Spark
8	104-8301	4	Nut-HF, NI
9	3274-94	4	Screw-HSBH
10	2410-64	2	Plug-Button
13	69-9290	2	Pad-Bumper
14	32108-103	4	Screw-FH
15	104-8300	11	Nut-HF, NI
16	99-5107	4	Nut-Lock

Ref.	Part Number	Qty.	Description
17	115-5519	4	Washer-Plain
18	110-5954	4	Mount-Center, Bonded
19	322-3	2	Screw-HH
20	116749	1	Horn
21	702093	2	Screw-HH
22	112-7449-03	1	Bracket-Support
23	17-7190	1	Spacer-Finger
24	112-7437-03	1	Channel-Support
25	3230-1	5	Bolt-CARR
26	3212-8	1	Screw-HH
27	112-7446-03	1	Support-Arm
28	33114-010	1	Screw-HH
29	3253-4	1	Washer-Lock
30	112-7405	1	Nut-Hex, Coupling
31	104-7048	1	Cap-Housing
32	104-7050	1	Tube-Manual
33	107-1865	2	R-Clamp
34	114-5553	4	Shim-Pad
35	104-7201	2	Nut-HF
36	32105-15	2	Screw-HWH

● Not serviced separately

 Air Ride Seat Suspension Assembly No. 108-1488

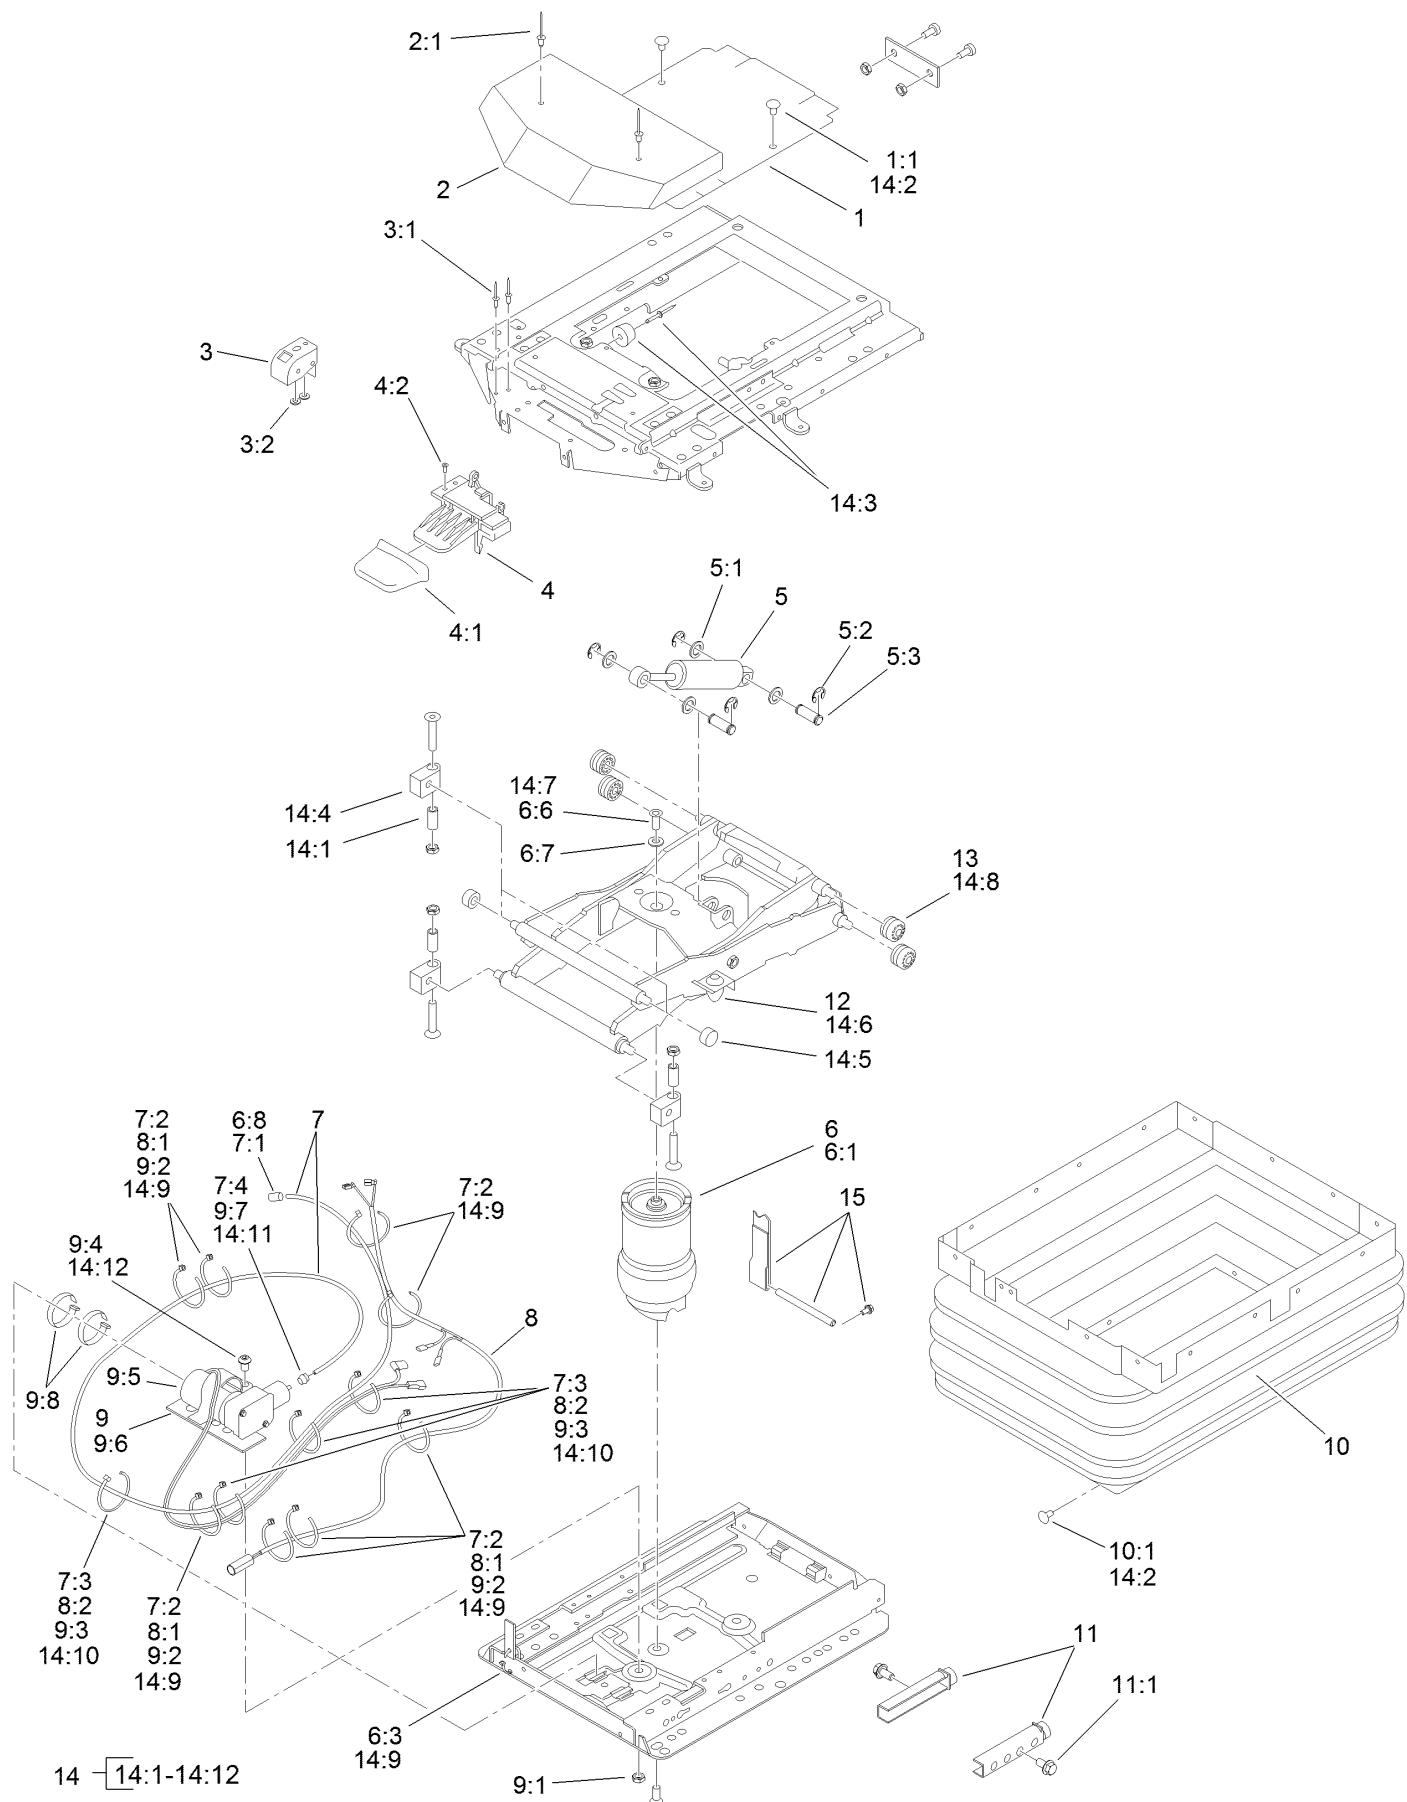


Air Ride Seat Suspension Assembly No. 108-1488 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-8026	1	Cover ASM	9:1		1	Nut ■
1:1	39-5710	2	Plug-Plastic	9:2		5	Tie-Wire ■
2	108-8027	1	Cover	9:3		4	Tie-Wire ■
2:1		2	Rivet ■	9:4		1	Screw ■
3	108-8028	1	Level Indicator Kit	9:5		1	Compressor ■
3:1		2	Rivet ■	9:6		1	Plate-Mounting ■
3:2		2	Washer ■	9:7		1	Nipple-Hose ■
4	108-8029	1	Valve-Control, Air	9:8		2	Clamp ■
4:1		1	Handle ■	10	108-8035	1	Bellows ASM
4:2		3	Screw ■	10:1	39-5710	23	Plug-Plastic
5	108-8030	1	Shock Absorber Kit	11	108-8036	1	Stop Kit
5:1		4	Washer ■	11:1		2	Screw ■
5:2		4	C-Clip ■	12	107-1213	2	Bumper Set
5:3		2	Pin ■	13	108-8037	4	Roller
6	108-8031	1	Air Spring Kit	14	108-8038	1	Wear Parts Kit ●
6:1		1	Air Spring ■	14:1		4	Spacer ■
6:3		2	Cable Tie ■	14:2	39-5710	2	Plug-Plastic
6:6		2	Screw ■	14:3		1	Bumper ■
6:7		1	Washer ■	14:4		4	Support-Housing ■
6:8		1	Nipple-Hose ■	14:5		2	Roller ■
7	108-8032	1	Air Tube ASM	14:6	107-1213	2	Bumper Set
7:1		1	Nipple-Hose ■	14:7		2	Screw ■
7:2		7	Tie-Wire ■	14:8	108-8037	4	Roller
7:3		4	Tie-Wire ■	14:9		9	Tie-Wire ■
7:4		1	Nipple-Hose ■	14:10		4	Tie-Wire ■
8	108-8033	1	Connecting Cable ASM	14:11		1	Nipple-Hose ■
8:1		8	Tie-Wire ■	14:12		1	Screw ■
8:2		4	Tie-Wire ■	15	119-2161	1	Tether Kit
9	108-8034	1	Compressor Kit				

● Not illustrated

 ■ Not serviced separately

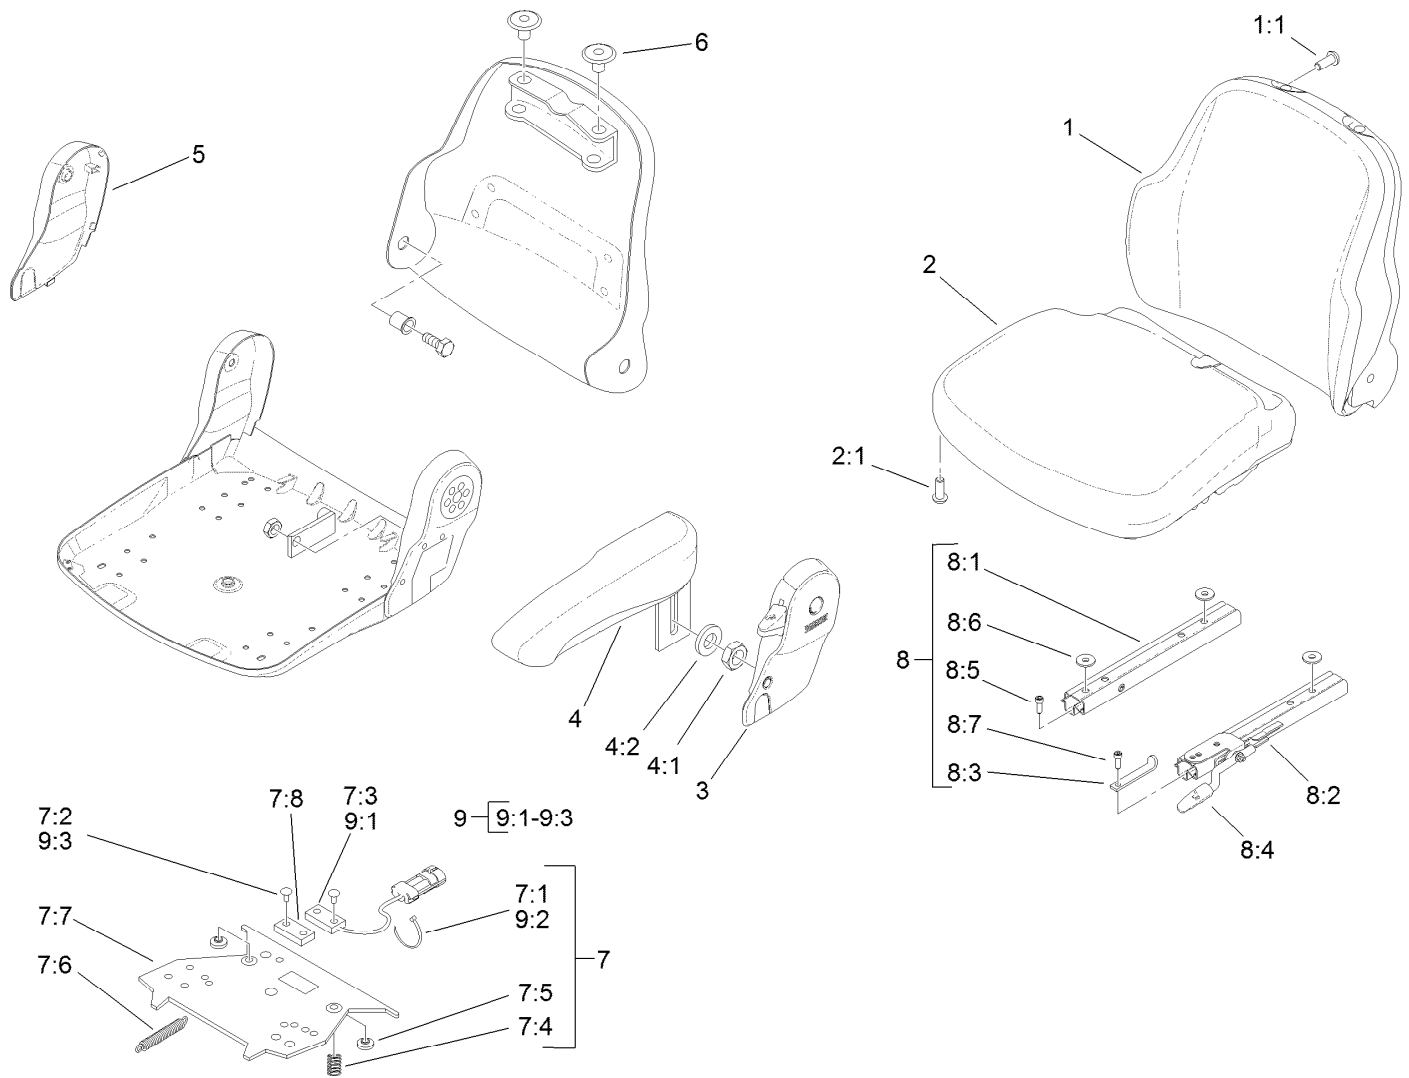


Premium Seat Assembly No. 117-9429

Ref.	Part Number	Qty.	Description
1	117-9415	1	Backrest Cushion ASM
1:1	119-7742	4	Screw-Cushion
2	117-9416	1	Seat Cushion ASM
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
5	108-8021	1	Cover-Armrest
6	108-8022	2	Cover-Black
7	108-8024	1	Switch Kit
7:1		3	Wire Tie ●
7:2		4	Rivet ●
7:3		1	Sensor-Seat Switch ●
7:4		2	Spring-Compression ●
7:5		2	Bumper-Pressure Plate ●

Ref.	Part Number	Qty.	Description
7:6		1	Spring-Extension ●
7:7		1	Plate-Mounting ●
7:8		1	Magnet ●
8	108-8025	1	Adjustment Rail Set
8:1		1	Rail-Adjustment, RH ●
8:2		1	Rail-Adjustment, LH ●
8:3		1	Stop-Rail ●
8:4		1	Handle ●
8:5		3	Screw ●
8:6		3	Washer ●
8:7		1	Screw ●
9	110-6189	1	Switch Kit
9:1		1	Switch ●
9:2		3	Wire Tie ●
9:3		2	Rivet ●

 
● Not serviced separately

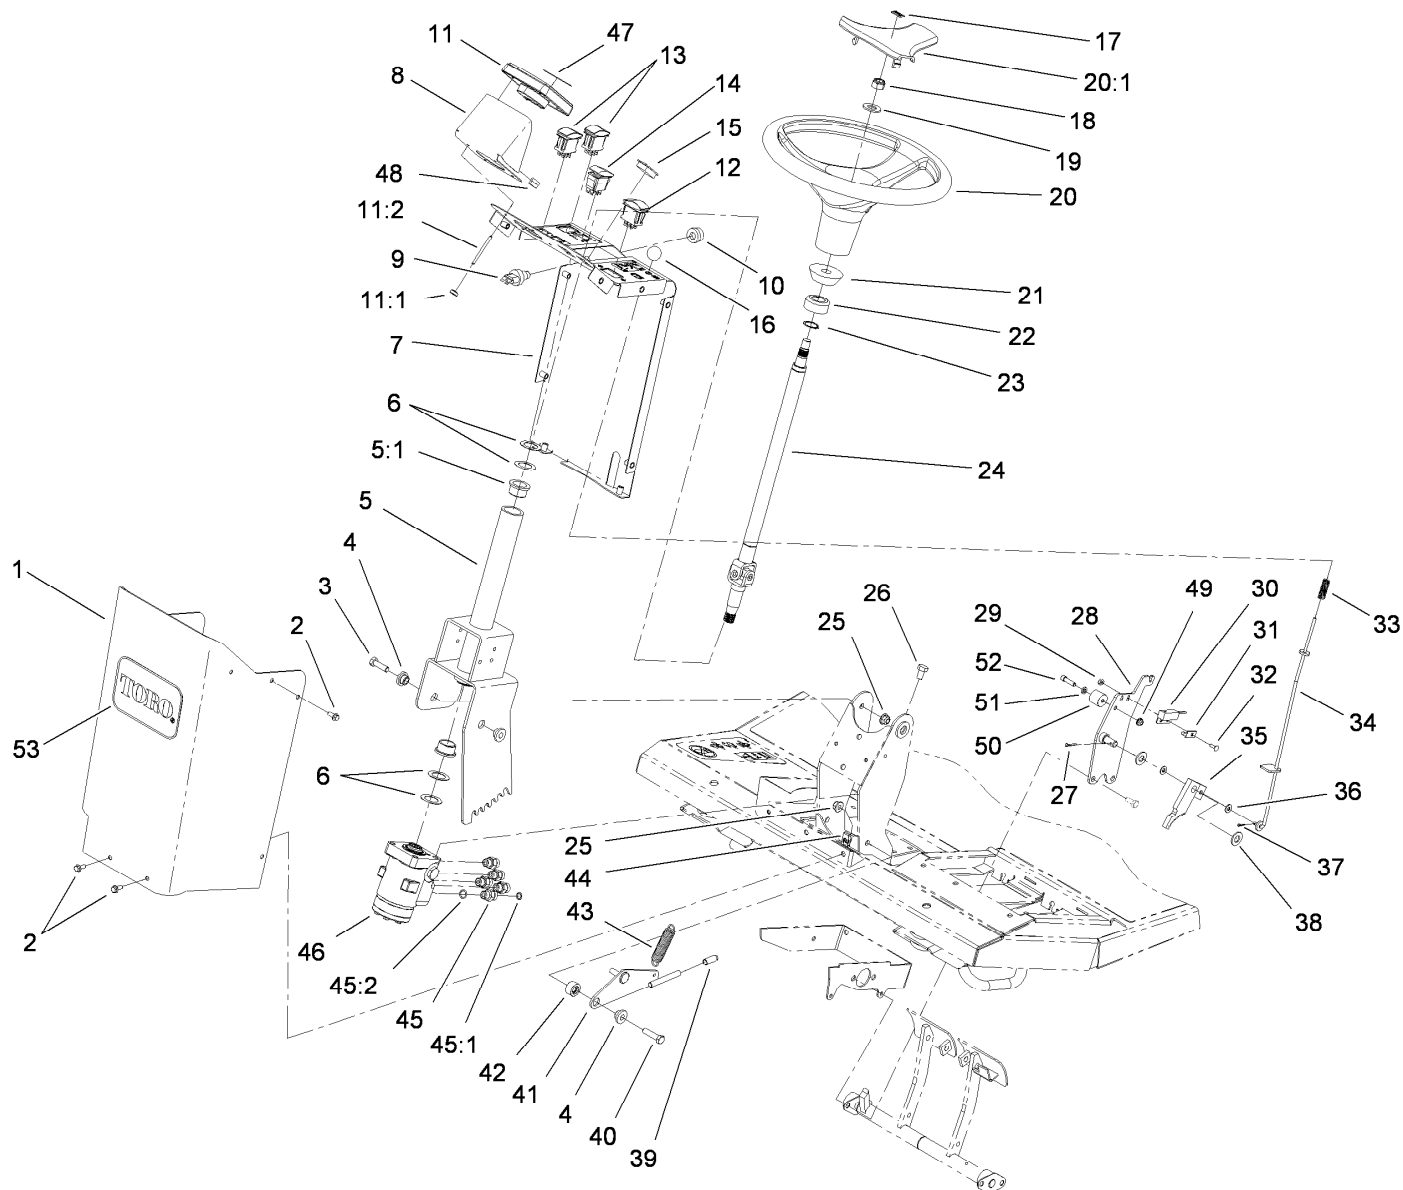

Steering Column Assembly

Ref.	Part Number	Qty.	Description
1	117-5493-01	1	Cover-Steering Tower, Front
2	3234-33	12	Screw-HHF
3	323-7	2	Screw-HH
4	93-5988	3	Hub-Pivot
5	114-0167	1	Steering Column ASM
5:1	256-132	2	Bushing-Flange
6	9547	4	Washer-Thrust
7	117-5492	1	Steering Tower ASM
8	115-5447-01	1	Guard-Visor
9	112-3324	1	Switch-Horn
10	112-3313	1	Nut-Weatherproof
11	110-5959	1	Display-LCD
11:1	115-8884	4	Nut-Thumb
11:2	115-8885	4	Stud
12	107-8034	1	Switch-Rocker, On-Off-On
13	100-1535	2	Switch
14	112-3530	1	Switch-Rocker, On-On-On
15	99-7420	3	Plug-Hole
16	233-17	1	Knob
17	98-1459	1	Decal
18	108-9342	1	Nut-Hex


Ref.	Part Number	Qty.	Description
19	3256-27	1	Washer-Flat
20	98-1471	1	Wheel-Steering
20:1	98-1468	1	Cover-Wheel, Steering
21	93-5429	1	Collar-Foam
22	93-5439	1	Seal-Steering
23	32151-29	2	Ring-Retaining
24	93-5428	1	Shaft-Steering
25	104-8301	3	Nut-HF, NI
26	33115-016	4	Screw-HH
27	3272-10	1	Pin-Cotter
28	114-0190-03	1	Pivot-Parking, Brake
29	3296-2	1	Nut-Lock, NI
30	100-1270	1	Switch-Proximity
31	100-4872	1	Plate-Switch, Neutral
32	3229-34	1	Screw-CARR
33	95-1821-03	1	Spring-Compression
34	114-0195	1	Rod-Parking, Brake
35	63-7900-03	1	Rack
36	3256-22	2	Washer-Flat
37	3272-5	1	Pin-Cotter
38	3256-26	2	Washer-Flat

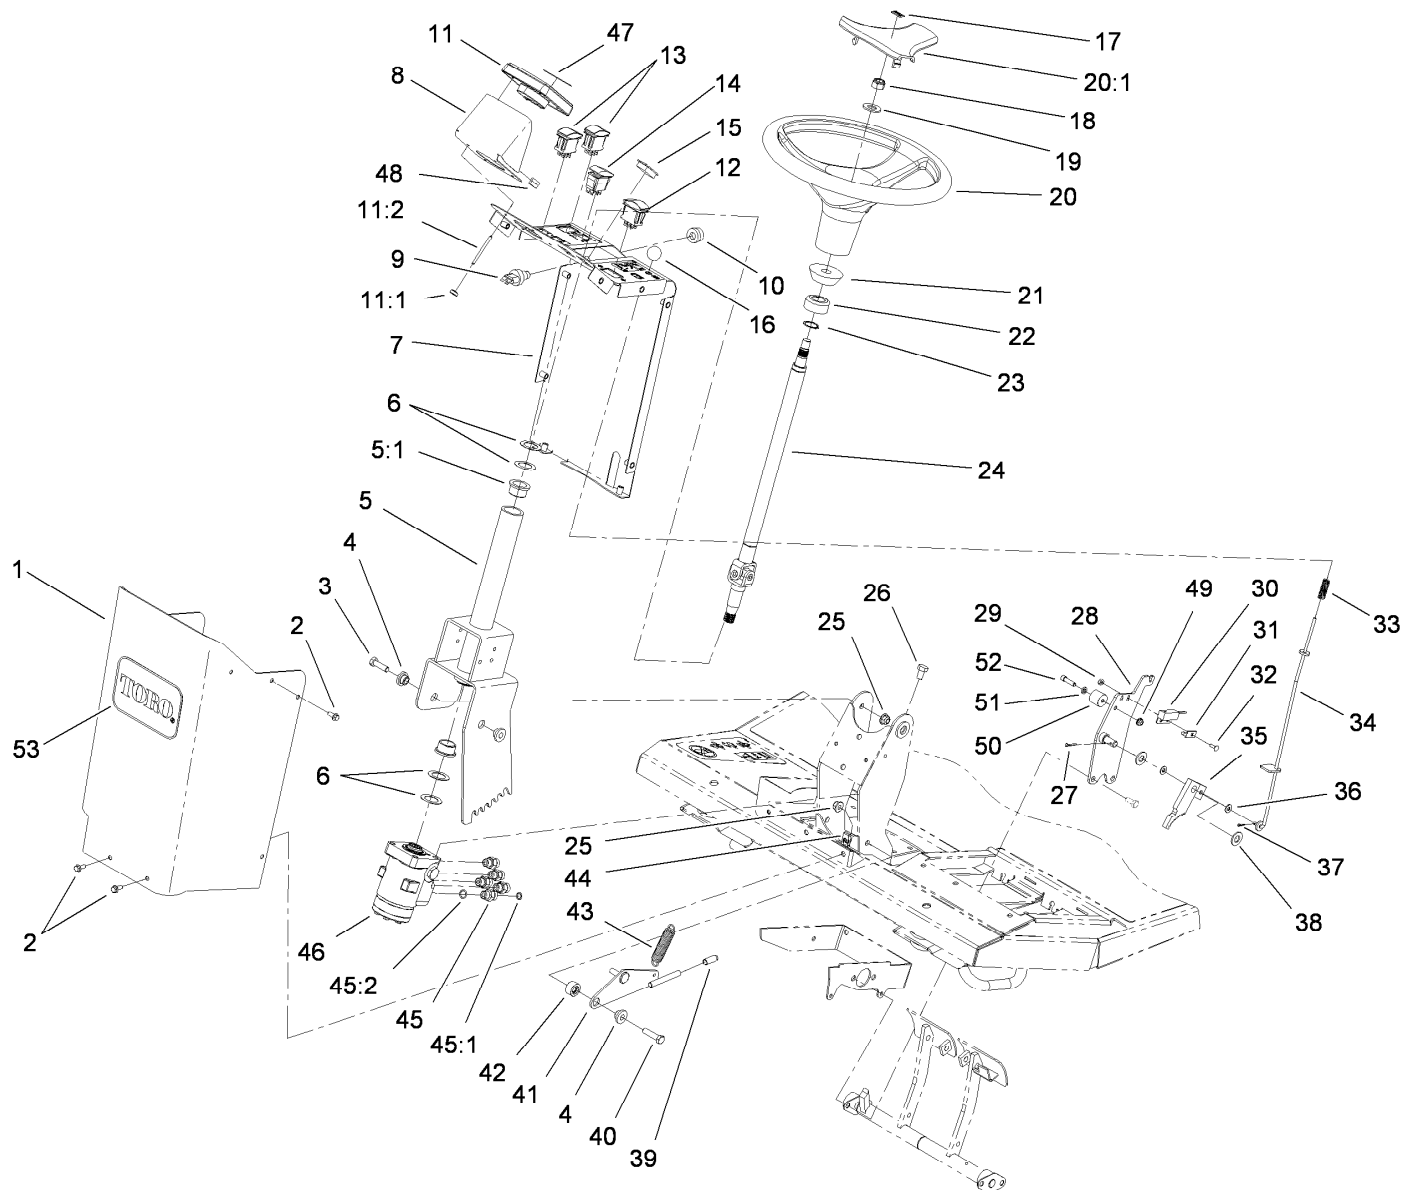 

Steering Column Assembly (continued)


Ref.	Part Number	Qty.	Description
39	93-5446	1	Cap-Vinyl
40	323-8	1	Screw-HH
41	114-5907-03	1	Lever-Tilt
42	114-4854	1	Spacer-Cup
43	13-0480	1	Spring
44	107069	2	Clip
45	340-2	5	Fitting-Straight
45:1	237-22	1	O-Ring
45:2	237-42	1	O-Ring

Ref.	Part Number	Qty.	Description
46	114-4900	1	Steering Valve ASM
47	114-5554	1	Decal-Center, Info
48	115-5417	2	Strip-Foam
49	104-7201	1	Nut-HF
50	117-5499	1	Spacer-Deflector
51	55-9620	1	Spacer-Plate, Pivot
52	3274-9	1	Screw-HSH
53	62-5550	1	Decal

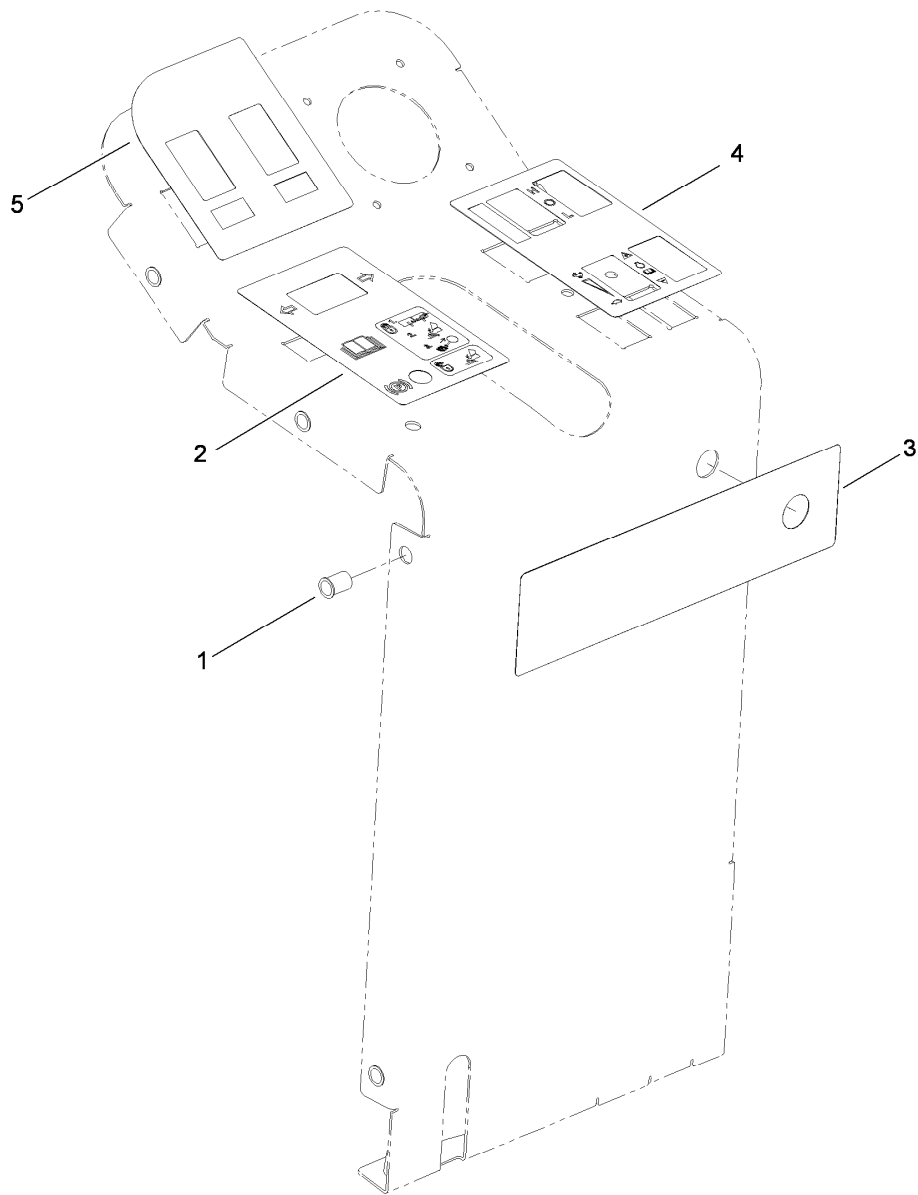 


Steering Tower Assembly No. 117-5492

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32148-6	10	Nut-Clinch
2	114-0844	1	Decal-Column, Steering (LH)
3	114-0845	1	Decal-Column, Steering
4	114-0848	1	Decal-Column, Steering (RH)
5	114-0906	1	Decal-Attachment

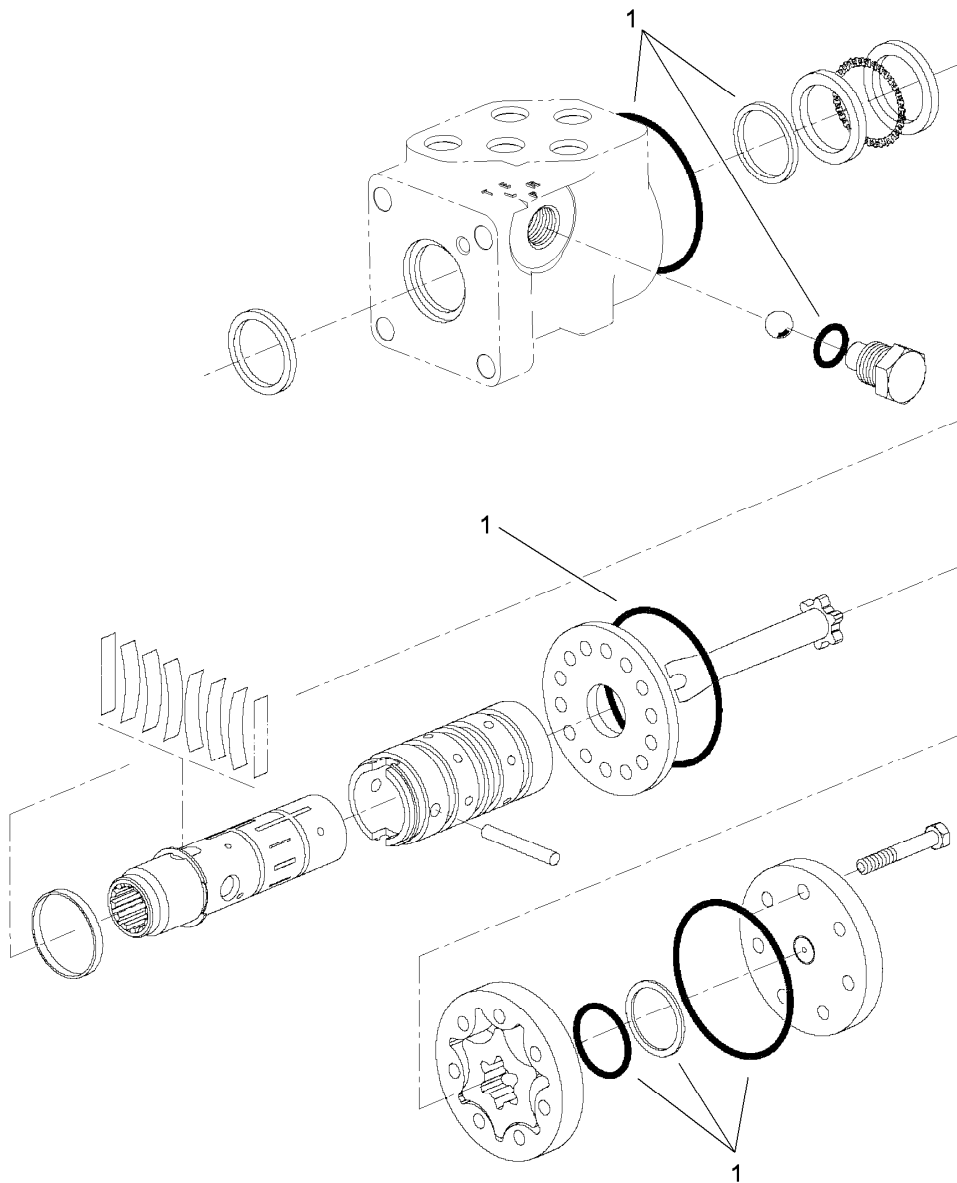 


Steering Valve Assembly No. 114-4900

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-5480	1	Seal Kit

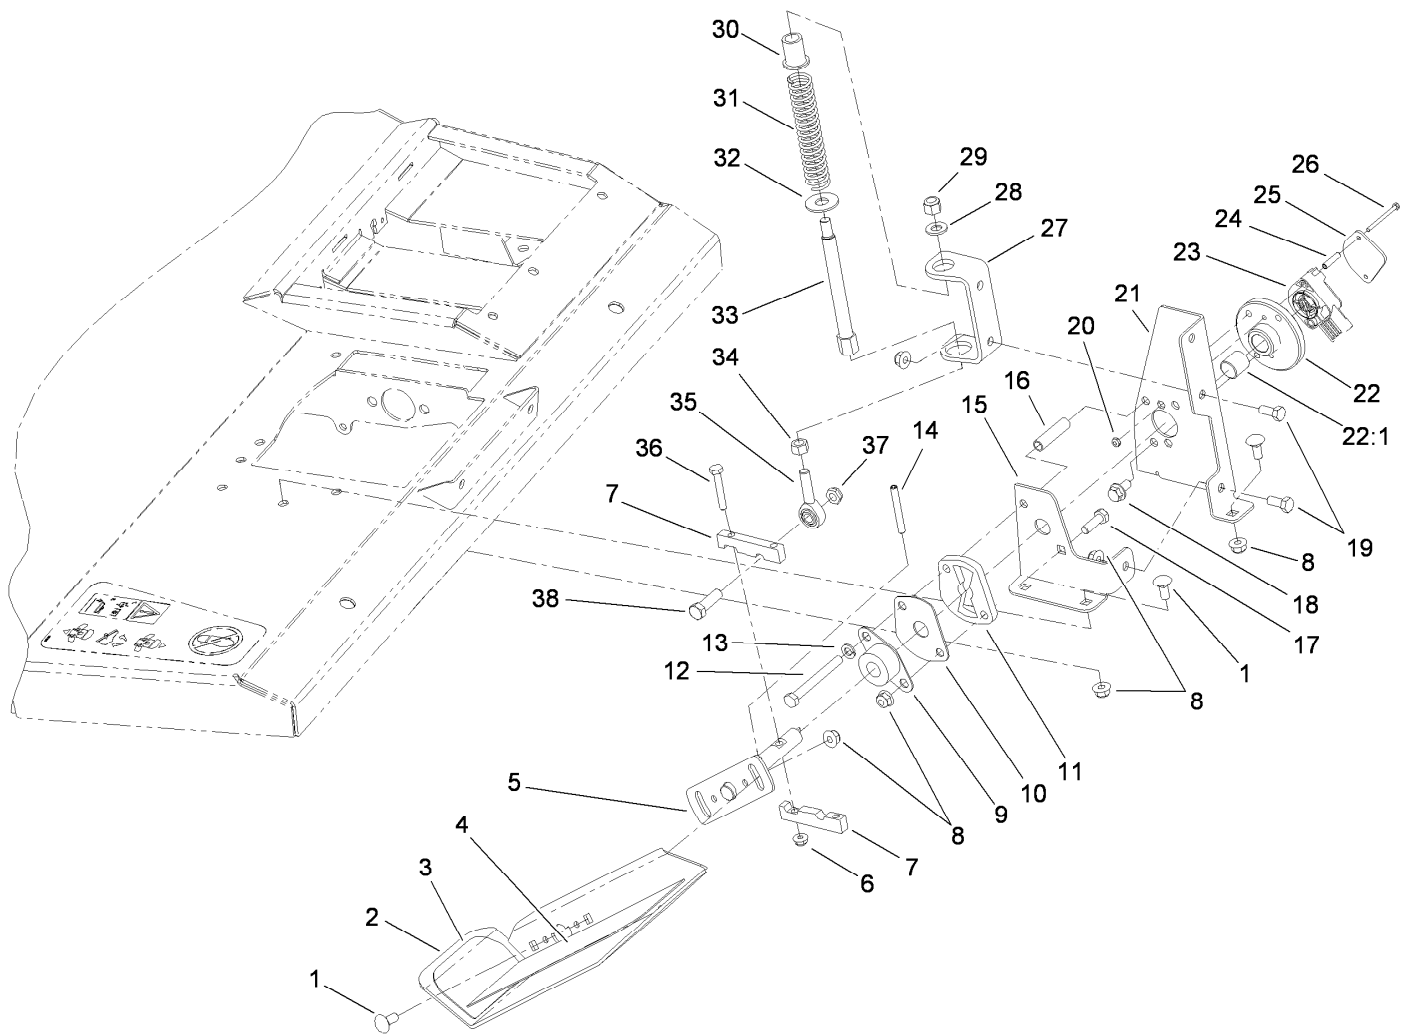 

Traction Pedal Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	3230-1	6	Bolt-CARR	21	117-5451-01	1	Bracket-Sensor
2	110-5986-01	1	Pedal-Traction	22	117-5445	1	Bushing Hub ASM
3	93-5368	1	Abrasive-Pedal	22:1	95-7497	1	Bushing-Wheel
4	93-5347	1	Abrasive-Pedal	23	114-5609	1	Sensor-Position
5	117-5450	1	Shaft-Pedal, Traction	24	114-5608	2	Spacer-Standoff
6	104-7201	2	Nut-HF	25	114-5595	1	Plate-Capture
7	117-5459	2	Block-Clamp	26	32105-25	2	Screw-SHH
8	104-8300	10	Nut-HF, NI	27	117-5452-01	1	Bracket-Spring
9	256-236	1	Bearing-Mount, Flange	28	3256-24	1	Washer-Flat
10	117-5455	1	Plate-Cover	29	3296-6	1	Nut-Lock
11	117-5454	1	Plate-Butterfly	30	92-7610	1	Retainer-Spring
12	322-14	1	Screw-HH	31	84-9100	1	Spring
13	3253-4	1	Washer-Lock	32	3256-5	1	Washer-Flat
14	32121-78	1	Pin-Roll	33	117-5446	1	Shaft-Spring
15	117-5453-01	1	Bracket-Butterfly	34	3219-3	1	Nut-Hex
16	93-7960	1	Spacer	35	2411-36	1	Bearing-End, Rod
17	322-5	1	Screw-HH	36	321-37	2	Screw-HH
18	114-7728	2	Screw-Threadlock	37	3296-59	1	Nut-Lock, NI
19	322-3	3	Screw-HH	38	323-7	1	Screw-HH
20	3296-9	2	Nut-Hex				

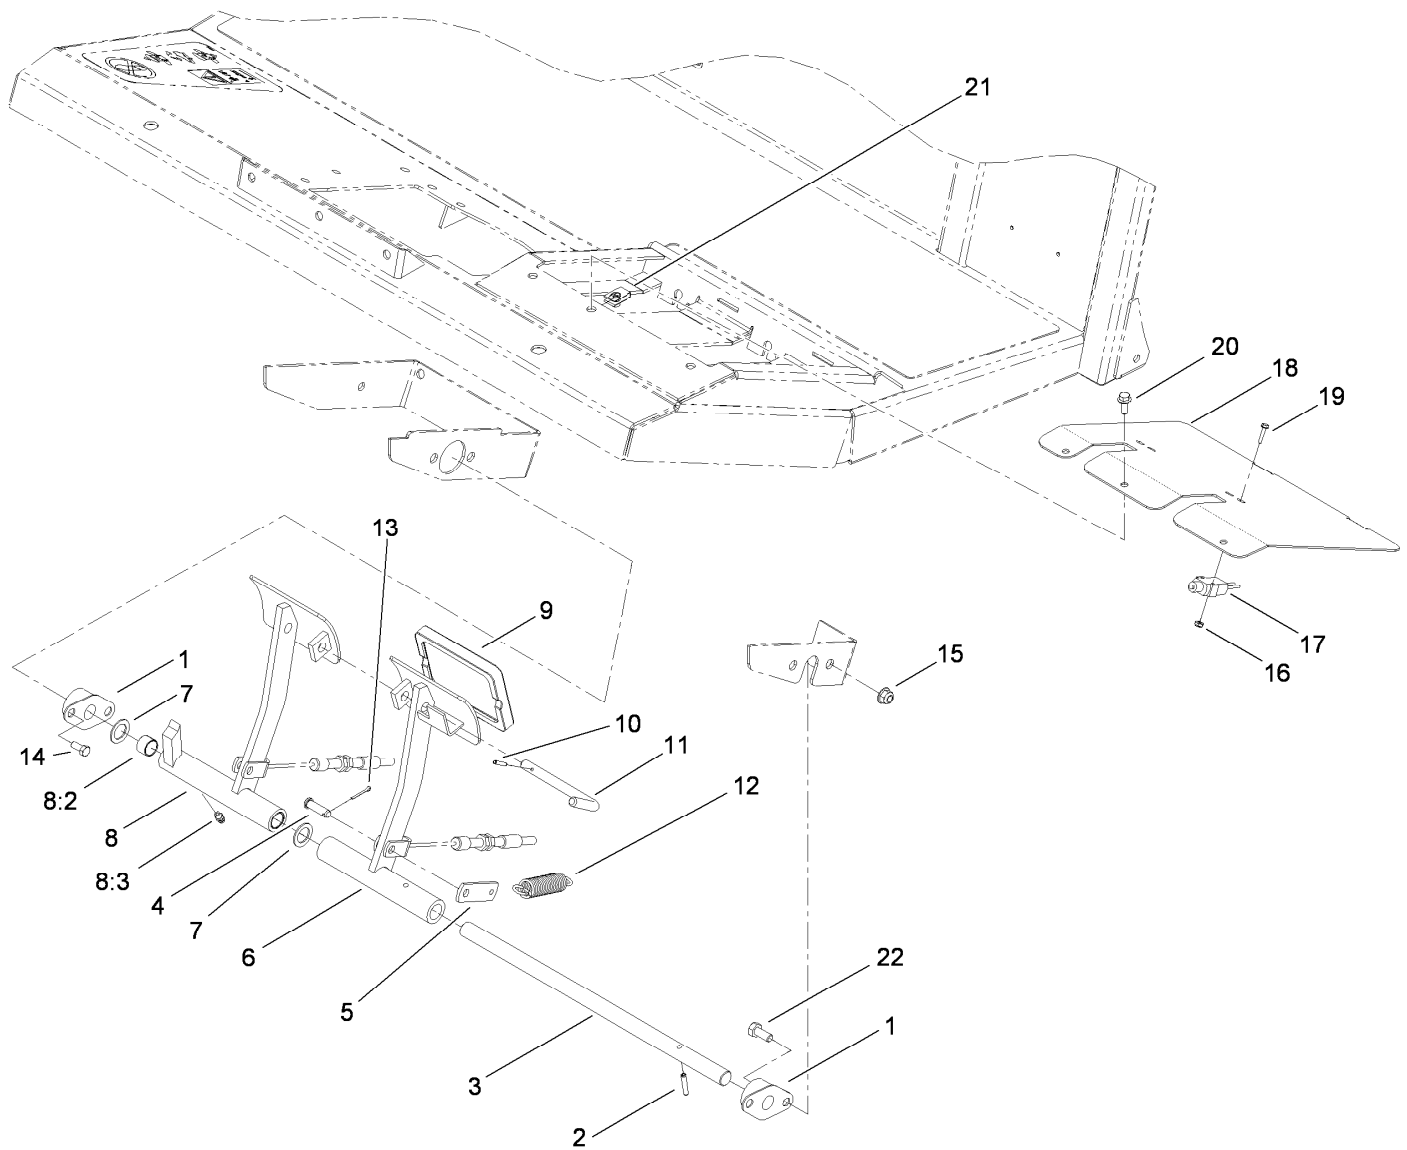 

Brake Pedal Assembly

Ref.	Part Number	Qty.	Description
1	256-236	2	Bearing-Mount, Flange
2	32121-16	1	Pin-Spring
3	75-1470	1	Pin-Pivot, Brake
4	283-61	2	Pin-Yoke
5	100-5540	2	Strap-Brake
6	75-1440-03	1	Pedal-Brake, LH
7	3256-69	5	Washer-Flat
8	75-1430	1	RH Brake Pedal ASM
8:2	256-42	2	Bushing
8:3	302-5	1	Fitting-Grease
9	93-8742	2	Footpad-Brake
10	32121-50	1	Pin-Spring


Ref.	Part Number	Qty.	Description
11	63-7880	1	Pin-Latch, Brake
12	93-5262	2	Spring-Extension
13	3272-6	2	Pin-Cotter
14	322-3	2	Screw-HH
15	104-8300	4	Nut-HF, NI
16	3296-9	4	Nut-Hex
17	99-3410	2	Switch
18	114-0740-01	1	Bracket-Switch
19	117-5458	4	Screw-HHF
20	3234-33	3	Screw-HHF
21	107069	3	Clip
22	322-2	2	Screw-HH

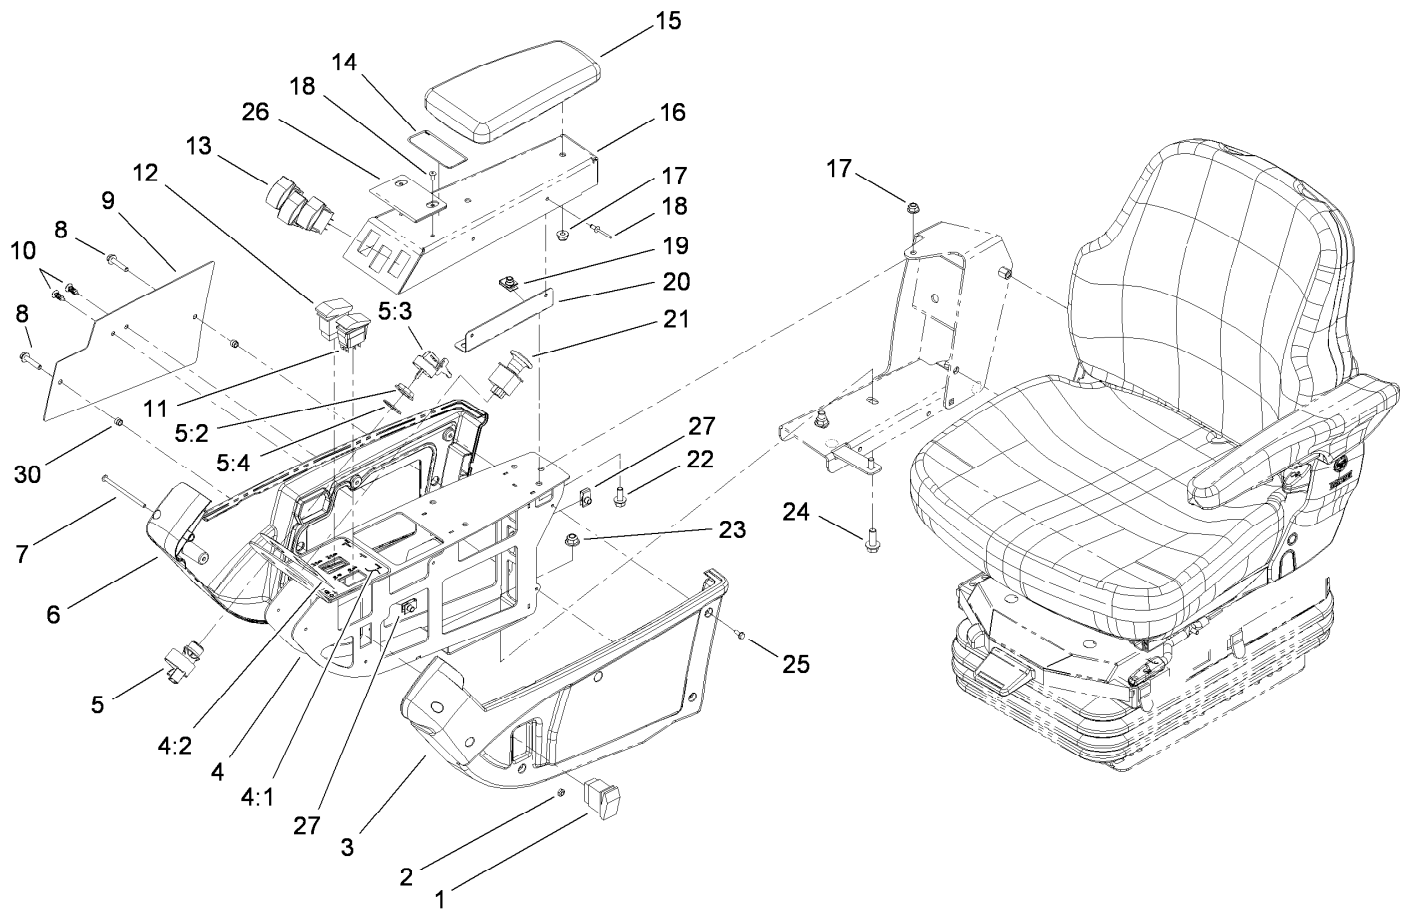 

Control Console Assembly


Ref.	Part Number	Qty.	Description
1	95-8999	1	Switch
2	3296-12	1	Nut-Lock, NI
3	108-7604	1	Cover-LH
4	110-6094	1	Panel ASM
4:1	114-0133	1	Decal-Console, Lower
4:2	114-0134	1	Decal-Console, Upper
5	106-5269	1	Ignition Switch ASM
5:2	108-8660	1	Nut-Mounting
5:3	106-5270	1	Ignition Key Set
5:4	108-8659	1	Washer-Backup
6	108-7605	1	Cover-RH
7	3250-22	1	Screw-PPH
8	3234-21	2	Screw-HHF
9	115-8849-03	1	Plate-Cover
10	117-2382	2	Plug-Plastic
11	114-3329	1	Switch-Rocker
12	106-2027	1	Switch-Intermittent

Ref.	Part Number	Qty.	Description
13	100-1535	3	Switch
14	114-0135	1	Decal-Console, Lift
15	108-7602	1	Rest-Arm
16	112-7301-03	1	Panel-Arm
17	104-8300	3	Nut-HF, NI
18	3290-409	4	Rivet
19	94-2413	4	Nut-U
20	112-7404	1	Angle-Mounting
21	93-9999	1	Switch-PTO
22	3234-5	5	Screw-HHF
23	104-8301	2	Nut-HF, NI
24	3234-42	2	Screw-HHF
25	32144-112	10	Screw-HWH
26	115-5449-03	1	Guard-Switch
27	107069	2	Clip
30	110-0542	2	Spacer-Flange

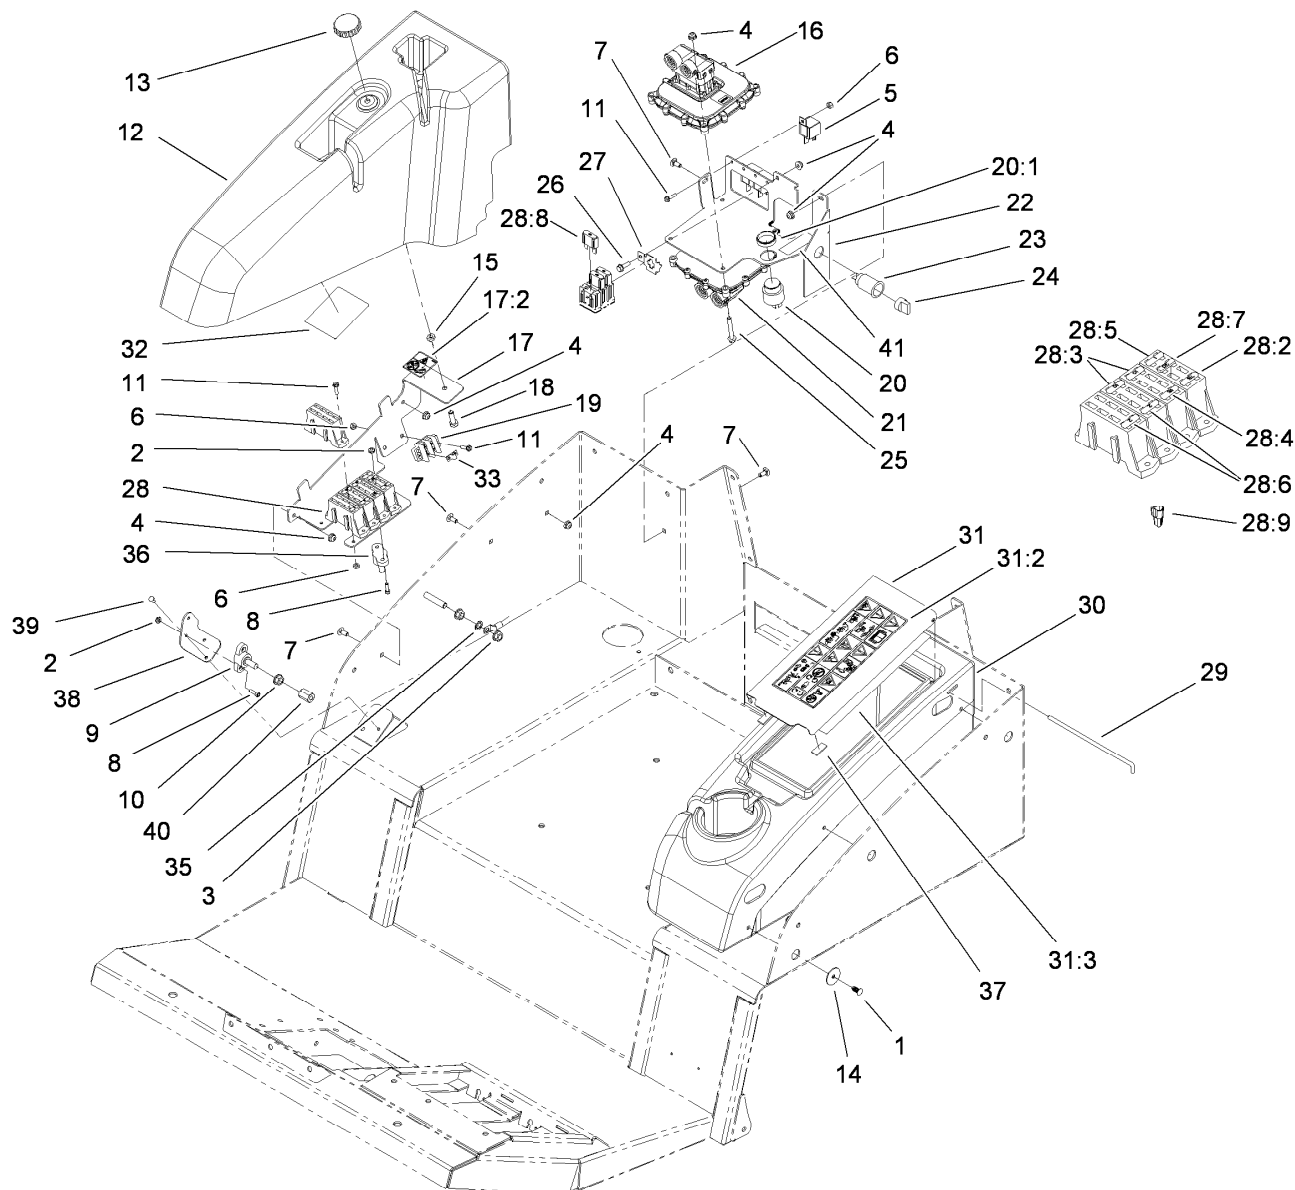 

Electrical Component Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	117-2382	8	Plug-Plastic	20:1	104-5107	1	Nut-Plastic, Knurled
2	3296-27	4	Nut-Lock, NI	21	114-3321	1	Controller-Tec
3	3290-357	2	Nut-HHF, Whiz	22	110-6035-01	1	Bracket-Power Center, Rear
4	104-7201	9	Nut-HF	23	99-7411	1	Point-Power
5	99-7435	3	Relay	24	99-7416	1	Cap
6	3296-2	9	Nut-Lock, NI	25	321-44	4	Screw-HHF
7	3229-11	4	Screw-CARR	26	32105-15	1	Screw-HWH
8	3273-26	4	Screw-HSH	27	114-5502	1	Clip-Fuse
9	110-8822	1	Block-Junction	28	119-1312	1	Harness-Wire, Platform
10	3290-357	2	Nut-HHF, Whiz	28:2	114241	6	Fuse-Blade, 7.5 Amp
11	32105-13	9	Screw-HWH	28:3	218-578	3	Fuse-Blade, 10 Amp
12	112-7315	1	Cover-Power, Center	28:4	109355	1	Fuse-Blade, 15 Amp
13	94-5583	1	Knob	28:5	104-9055	1	Fuse-Blade, 1 Amp
14	3256-58	8	Washer-Flat	28:6	94-6710	2	Fuse-2 Amp
15	3218-2	1	Nut-Jam	28:7	109103	2	Fuse-Blade, 30 Amp
16	115-1900	1	Controller	28:8	114-3342	3	Fuse-Maxi, 60 Amp
17	115-5482	1	Power Center Bracket ASM	28:9	32180-043	1	Resistor-120 Ohm
17:2	115-5459	1	Decal-Warning	29	114-5508	1	Rod-Hinge
18	322-5	1	Screw-HH	30	112-7316	1	Cover-Storage, Center
19	42862	1	Block-Terminal, Ground	31	114-0001	1	Lid-Storage, Center
20	80-9330	1	Audio Alarm ASM	31:2	117-2754	1	Decal-Warning

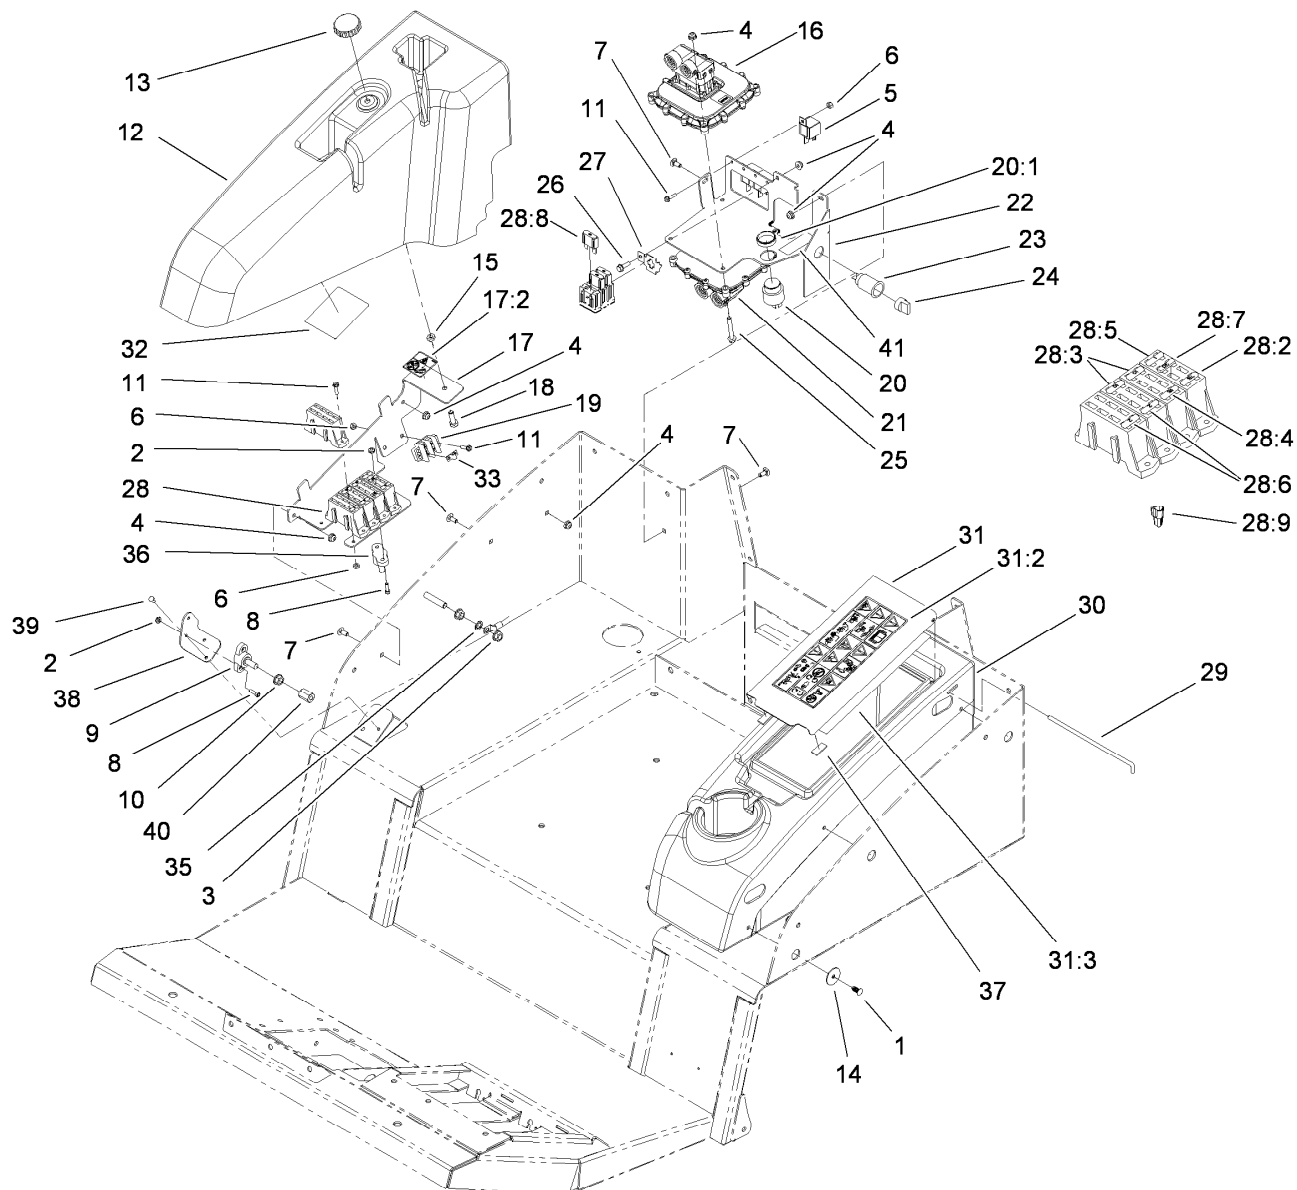 

Electrical Component Assembly (continued)

Ref.	Part Number	Qty.	Description
31:3	114-0847	1	Decal-Service
32	110-6007	1	Decal-Fuse
33	42863	1	Strip-Jumper
35	3254-6	1	Washer-Lock, Internal
36	110-8823	1	Block-Junction

Ref.	Part Number	Qty.	Description
37	115-5417	2	Strip-Foam
38	115-5592	1	Mount-Post, Positive
39	3290-409	2	Rivet
40	113690	1	Nut-Coupling
41	114-0163	1	Decal-Electrical

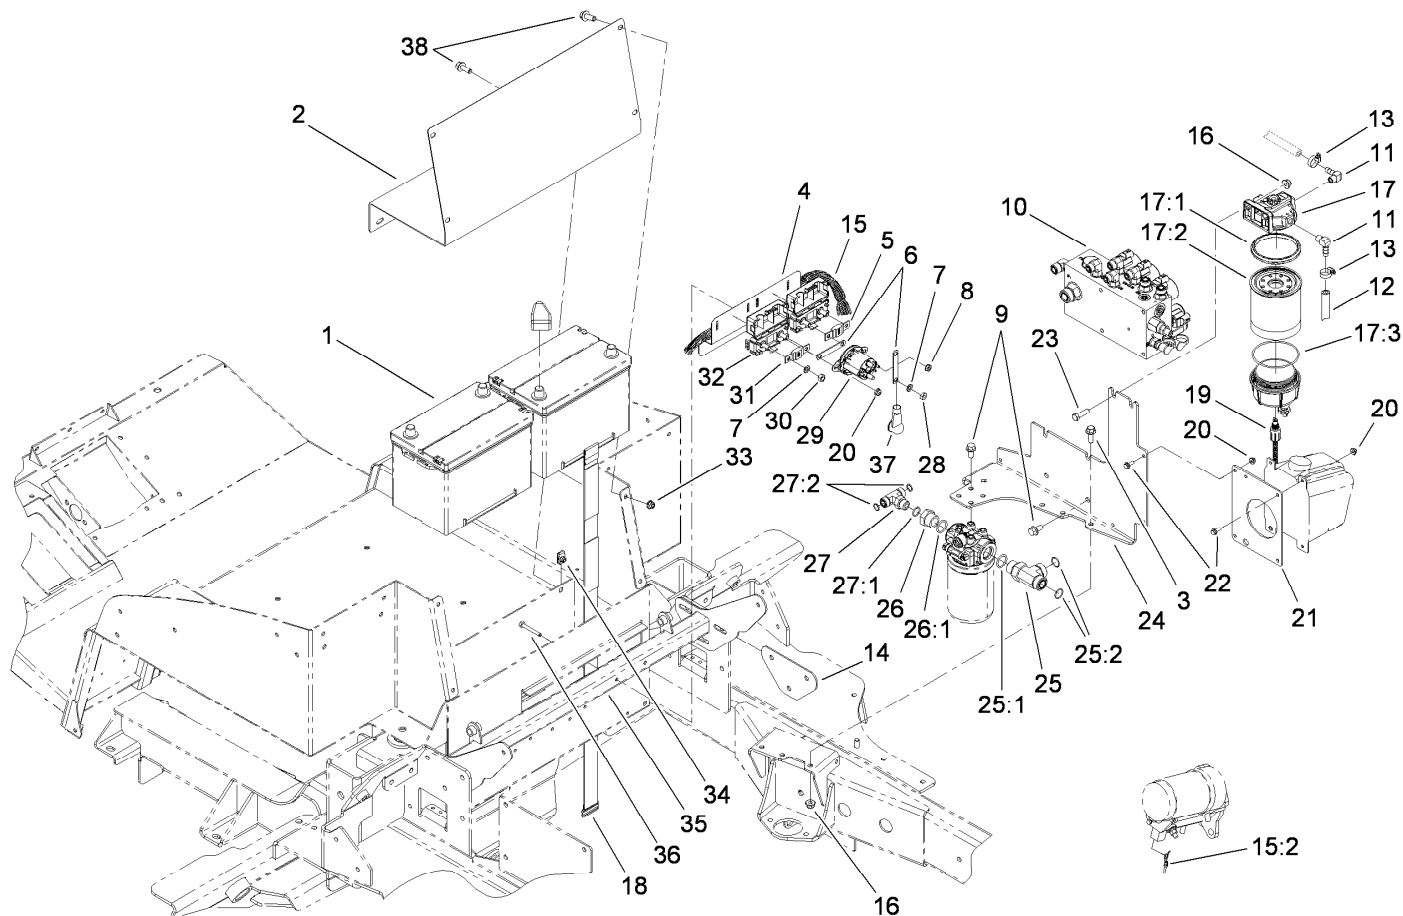 


Battery and Lift Manifold Assembly

Ref.	Part Number	Qty.	Description
1	106-5190	2	Battery
2	110-6037-01	1	Panel-Access, Rear
3	3234-42	5	Screw-HHF
4	114-5681-03	1	Support-Fuse
5	110-8820	1	Fuse-Mega, 300A
6	114-5682	2	Strap-Jumper
7	3255-8	6	Washer-Lock
8	32149-8	2	Nut-Keps
9	3234-1	8	Screw-HHF
10		1	Lift Manifold ASM ●
11	354-93	2	Fitting-Elbow, 90
12	114-0832	1	Hose-Fuel
13	2412-108	2	Clamp-Worm
14	114-5585	2	Shim-Support, Hood
15	110-6092	1	Harness-Wire, Engine
15:2	117-5461	1	Harness-Wire, Starter
16	104-8301	7	Nut-HF, NI
17	114-0149	1	Fuel/Water Separator Filter ASM
17:1	115-5470	1	Gasket-Beveled
17:2	115-5471	1	Element-Separator, Fuel/Water
17:3	115-5472	1	O Ring-Bowl
18	114-0881	2	Strap-Battery
19	114-0170	1	Sensor-Wif

Ref.	Part Number	Qty.	Description
20	104-7201	7	Nut-HF
21	114-5910-03	1	Plate-Mounting
22	3234-33	5	Screw-HHF
23	323-7	2	Screw-HH
24	112-7421-03	1	Plate-Mount, Filter
25	340-148	1	Fitting-Tee
25:1	237-81	1	O-Ring
25:2	237-58	2	O-Ring
26	96-0864	1	Fitting-Straight
26:1	237-81	1	O-Ring
27	340-157	1	Fitting-HYD, Tee
27:1	237-79	1	O-Ring
27:2	237-30	2	O-Ring
28	3220-2	2	Nut-Jam
29	114-3315	1	Solenoid
30	33004-00	4	Nut-HF
31	110-8818	1	Fuse-Mega, 125A
32	114-3318	2	Holder-Fuse, Mega
33	104-8300	4	Nut-HF, NI
34	94-2413	2	Nut-U
35	114-0022-03	1	Support-Hood, Frame
36	321-11	2	Screw-HH
37	32180-008	1	Insulator-Lug, Red
38	3234-47	6	Screw-HHF

 
● Not serviced separately

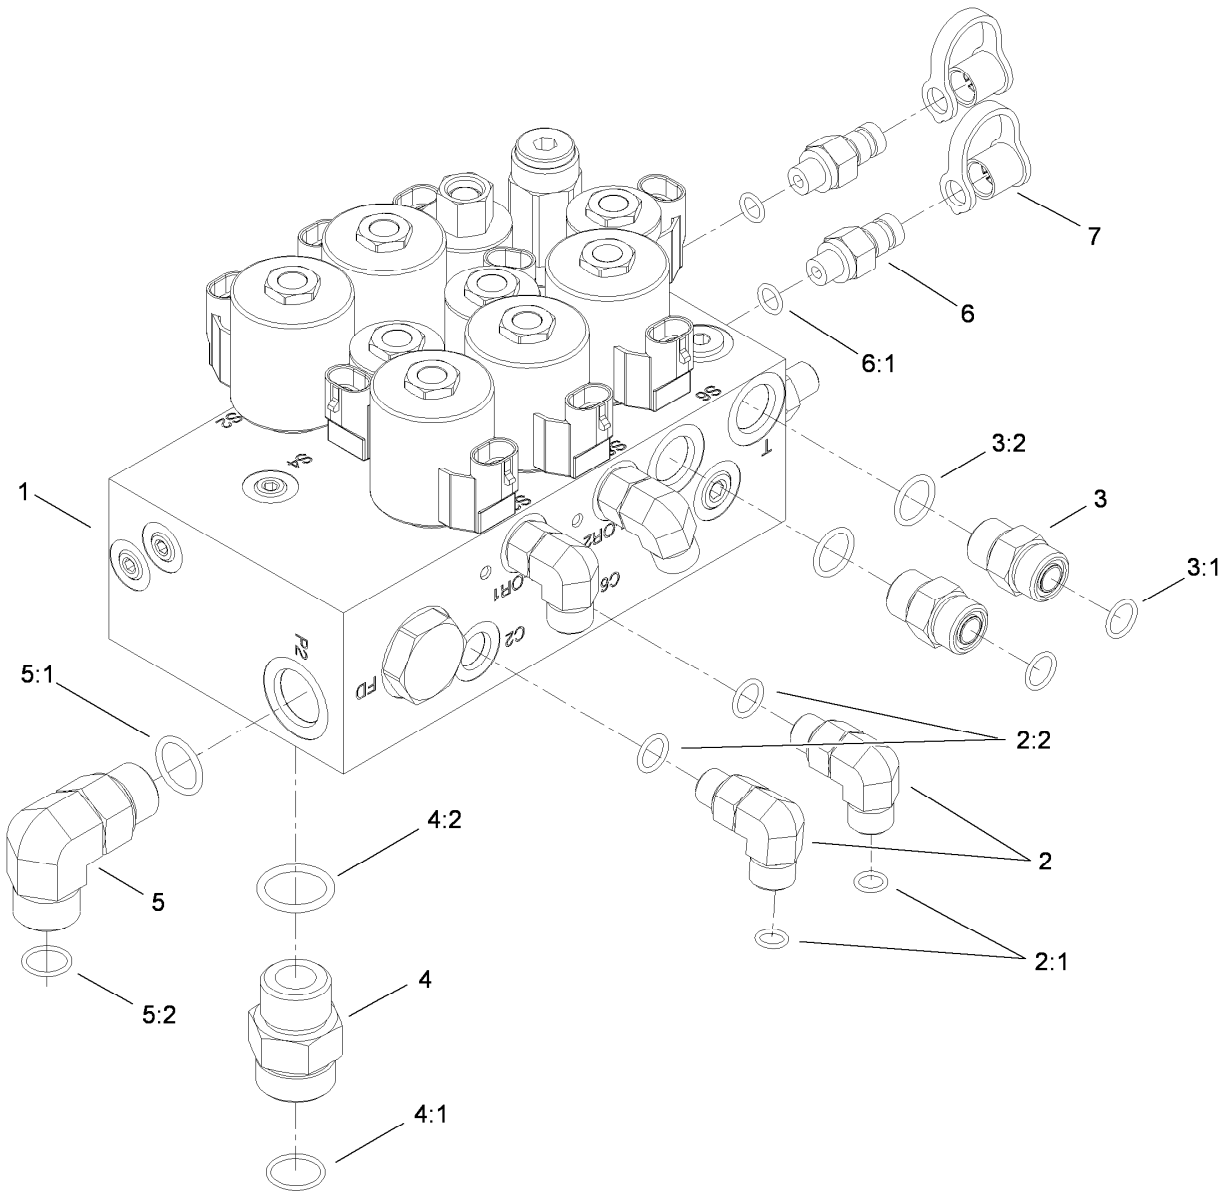

Lift Manifold Assembly

Ref.	Part Number	Qty.	Description
1	110-6064	1	Manifold-Lift
2	340-77	2	Fitting-Elbow, 90 DEG
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	340-4	2	Fitting-Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	340-9	1	Fitting-STR


Ref.	Part Number	Qty.	Description
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	340-17	1	Fitting-Elbow, 90 DEG
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	354-77	2	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	2	Cap-Dust

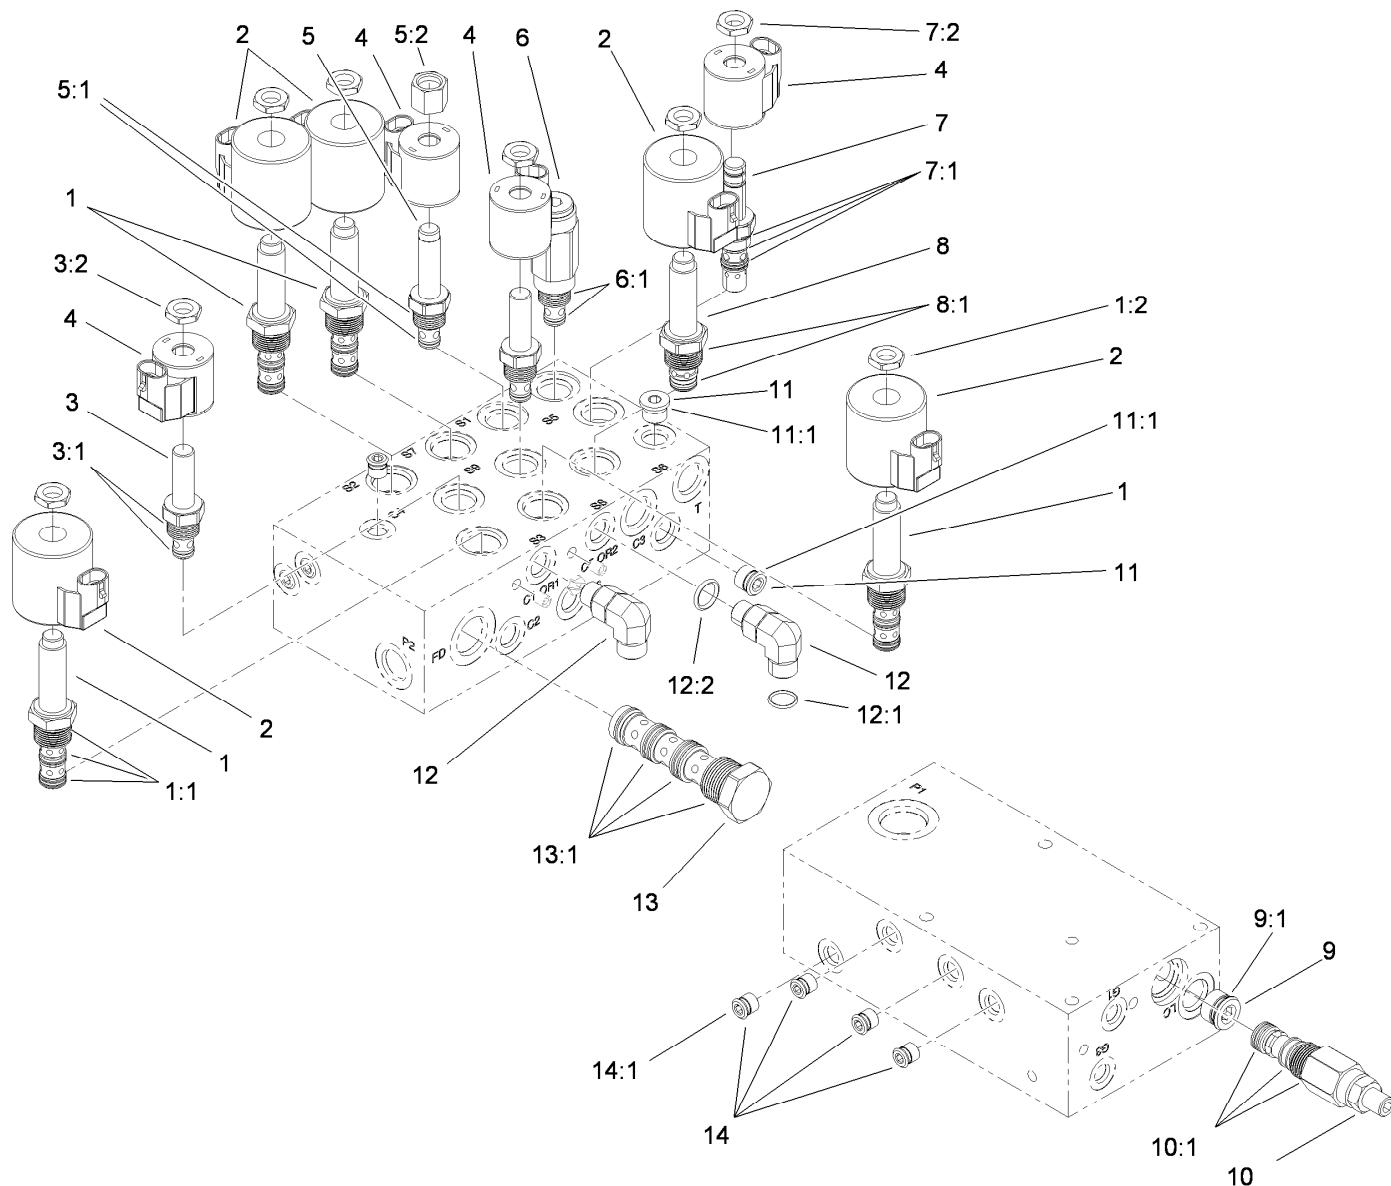 

Hydraulic Lift Manifold Assembly No. 110-6064

Ref.	Part Number	Qty.	Description
1	115-5400	4	Solenoid Valve ASM
1:1	107-7813	1	Seal Kit
1:2	110-2634	1	Nut-Coil
2	110-2630	5	Coil-12Vdc
3	112-9206	2	Solenoid Valve ASM
3:1	105-9156	1	Seal Kit
3:2	110-2634	1	Nut-Coil
4	105-9333	4	Coil-12Vdc
5	107-7517	1	Valve-Solenoid
5:1	105-9156	1	Seal Kit
5:2	107-7812	1	Nut-Solenoid
6	115-5499	1	Valve-Relief
6:1	105-9156	1	Seal Kit
7	115-5405	1	Solenoid Valve ASM
7:1	115-5413	1	Seal Kit
7:2	110-2634	1	Nut-Coil

Ref.	Part Number	Qty.	Description
8	115-5404	1	Valve-Solenoid
8:1	105-9159	1	Seal Kit
9	106-1027	1	Plug-HYD
9:1	237-79	1	O-Ring
10	115-5402	1	Valve-Logic, 250 PSI (Adjustable)
10:1	119-2159	1	Seal Kit
11	106-1026	1	Plug-HYD
11:1	237-42	1	O-Ring
12	340-77	2	Fitting-Elbow, 90 DEG
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	115-5406	1	Divider-Flow
13:1	110-6111	1	Seal Kit
14	353-990	7	Plug ASM
14:1	237-78	1	O-Ring

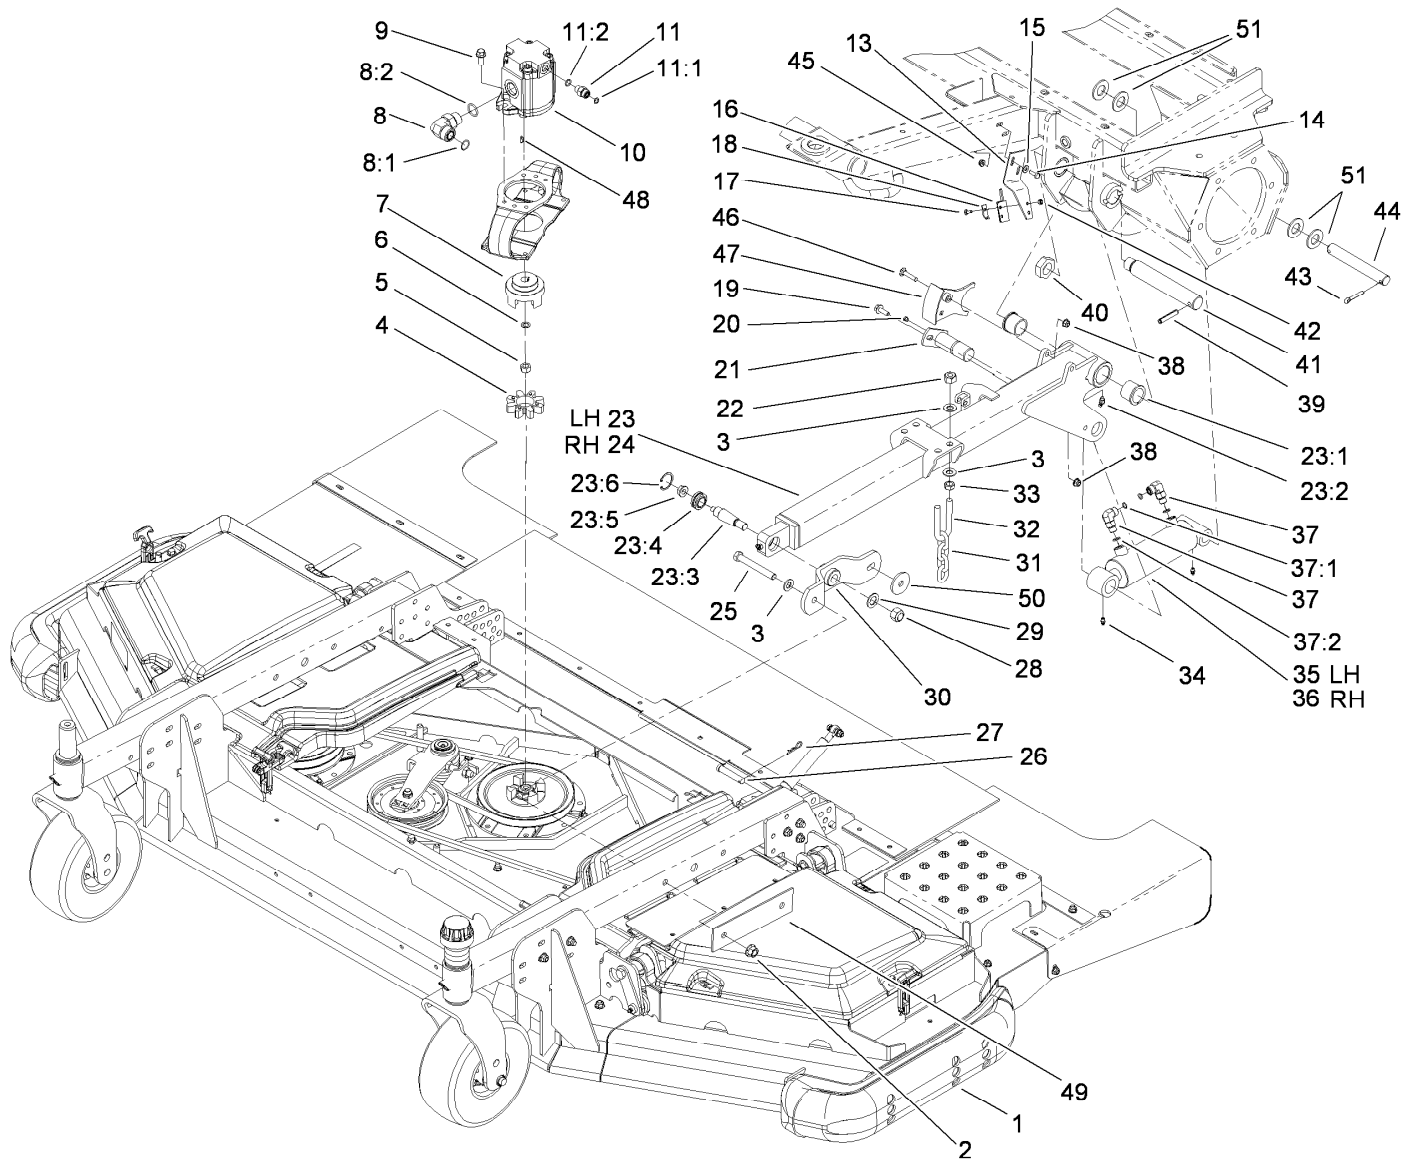 


Front Deck Lift Arm and Cylinder Assembly

Ref.	Part Number	Qty.	Description
1		1	Front Deck ASM ■
2	99-5107	4	Nut-Lock
3	3256-26	12	Washer-Flat
4	104-3542	3	Spider
5	110-8815	3	Nut-Hex
6	112-6957	3	Washer-Hardened
7	104-3541	3	Hub-Spider
8	340-142	5	Fitting-Elbow-90
8:1	237-58	1	O-Ring
8:2	237-81	1	O-Ring
9	3234-42	6	Screw-HHF
10	114-4940	3	Gear Motor ASM
11	340-2	3	Fitting-Straight
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
13	114-5671	1	Bracket-Sensor
14	321-4	2	Screw-HH
15	3256-22	2	Washer-Flat

Ref.	Part Number	Qty.	Description
16	106-9288	1	Sensor-Proximity, Ferrous
17	3229-34	1	Screw-CARR
18	100-4872	1	Plate-Switch, Neutral
19	3234-29	2	Screw-HHF
20	1-811010	2	Plug
21	105-7325	2	Pin
22	3296-25	4	Nut-Lock, NI
23	110-5962	1	LH Front Lift Arm ASM
23:1	104-0015	2	Bushing-Flange
23:2	302-11	2	Fitting-Lube, 45 DEG
23:3	105-7468	1	Stud-Tapered
23:4	105-7441	1	Bearing-Spherical
23:5	32128-42	1	Nut-HF
23:6	32151-34	1	Ring-Retaining
24	110-5966	1	RH Front Lift Arm ASM
24:1	104-0015	2	Bushing-Flange ●
24:2	302-11	2	Fitting-Lube, 45 DEG ●
24:3	105-7468	1	Stud-Tapered ●

● Not illustrated

 ■ Not serviced separately

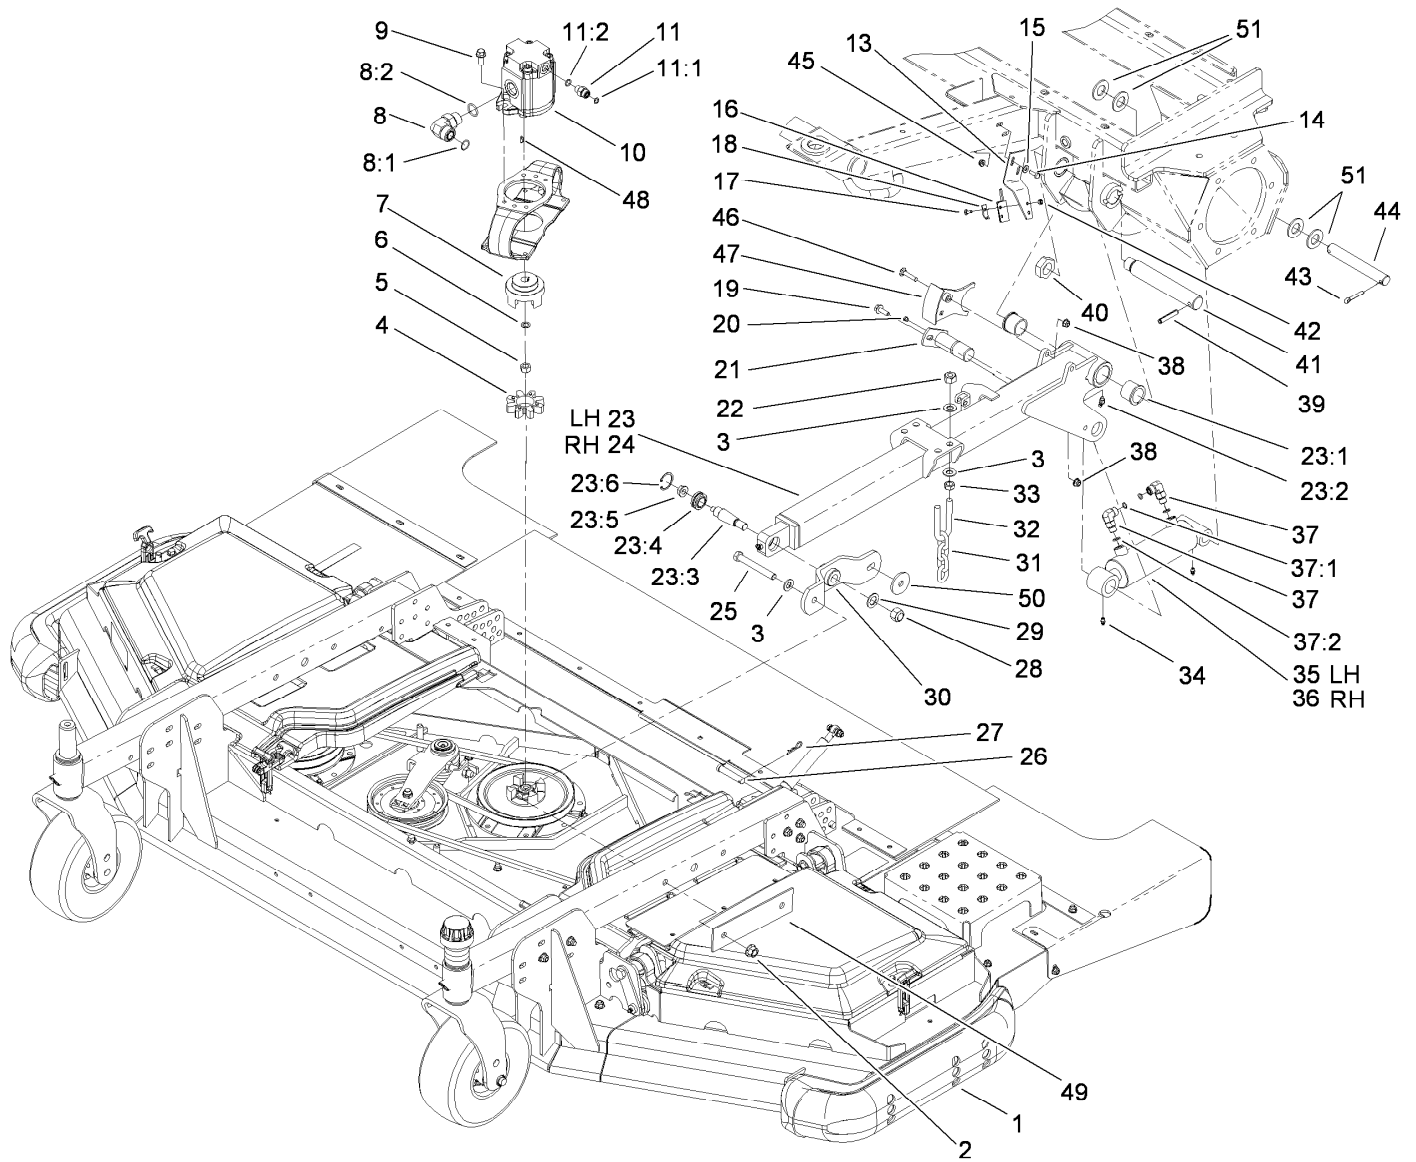


Front Deck Lift Arm and Cylinder Assembly (continued)

Ref.	Part Number	Qty.	Description
24:4	105-7441	1	Bearing-Spherical ●
24:5	32128-42	1	Nut-HF ●
24:6	32151-34	1	Ring-Retaining ●
25	325-17	4	Screw-HH
26	92-2743	2	Pin-Clevis
27	3290-467	2	Pin-Hair
28	3296-41	2	Nut-Lock NI
29	86-1440	2	Washer-Flat
30	115-5442-01	2	Support-Hub
31	95-6231	2	Chain-HOC
32	104-0108	2	U-Bolt
33	3218-5	4	Nut-Jam
34	302-5	4	Fitting-Grease
35	114-4831	1	LH Lift Cylinder ASM
36	114-4830	1	RH Lift Cylinder ASM ●
37	340-77	4	Fitting-Elbow, 90 DEG

Ref.	Part Number	Qty.	Description
37:1	237-22	1	O-Ring
37:2	237-42	1	O-Ring
38	104-8300	3	Nut-HF, NI
39	32121-110	2	Pin-Roll, Slotted
40	3296-49	2	Nut-Lock, NI
41	100-3017	2	Pin-Arm, Lift
42	3296-2	1	Nut-Lock, NI
43	3272-30	4	Pin-Cotter
44	110-6006	2	Pin-Clevis
45	104-7201	2	Nut-HF
46	3230-4	1	Bolt-CARR
47	114-0738-01	1	Sensor Trigger ASM
48	3257-3	3	Key-Woodruff
49	69-8790-01	2	Plate-Reinforcing
50	75-7730	2	Washer-Thrust
51	3256-29	8	Washer-Flat

● Not illustrated

 
■ Not serviced separately

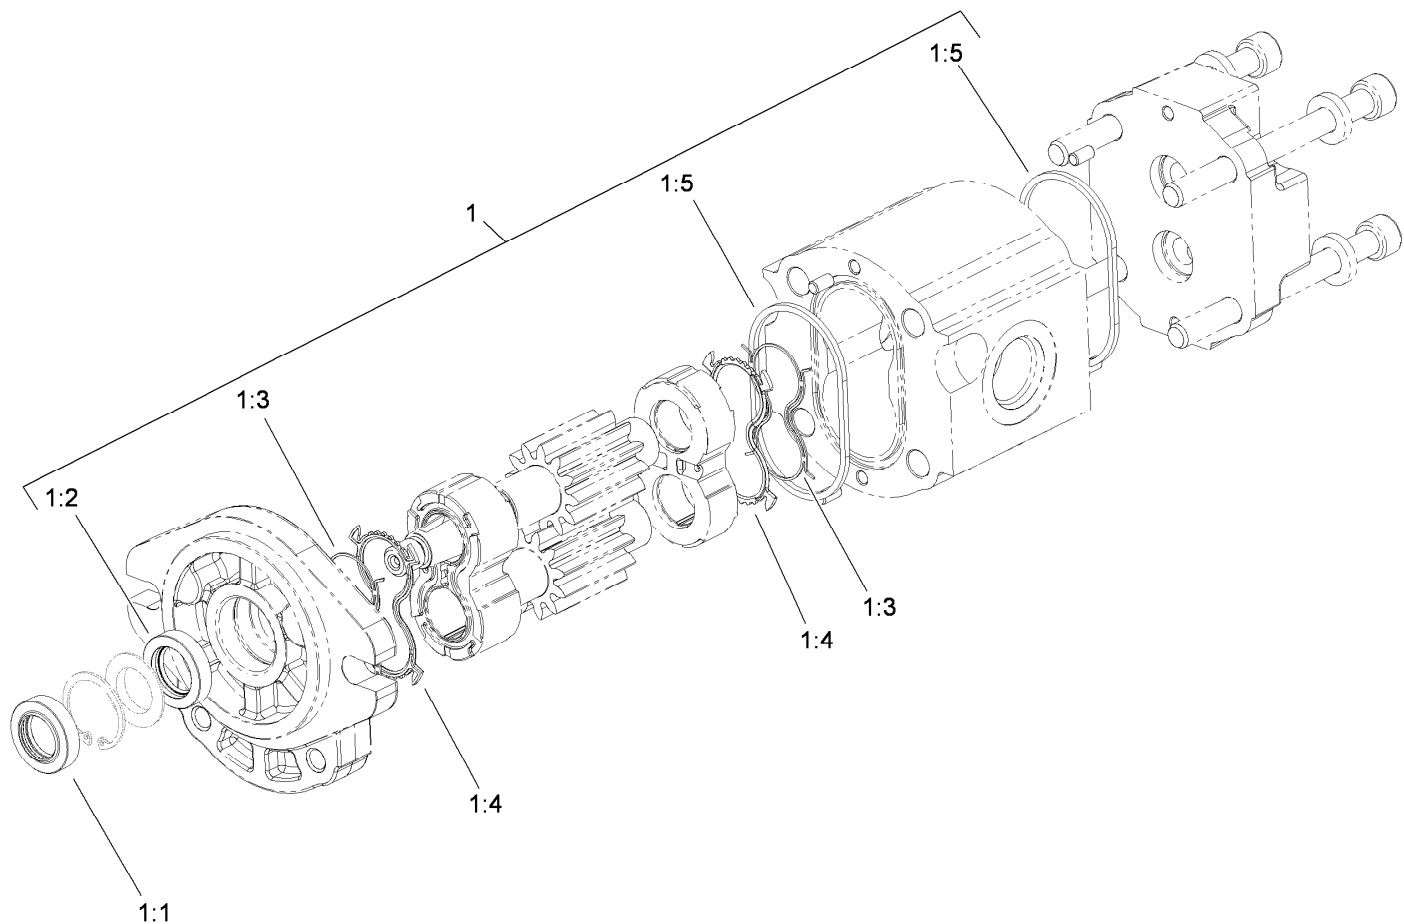

Hydraulic Gear Motor Assembly No. 114-4940

Ref.	Part Number	Qty.	Description
1	114-5620	1	Seal Kit
1:1		1	Seal-Shaft ●
1:2		1	Seal-Shaft ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	Seal-Plate, Balancing ●
1:5		2	O Ring-Housing ●

 
● Not serviced separately

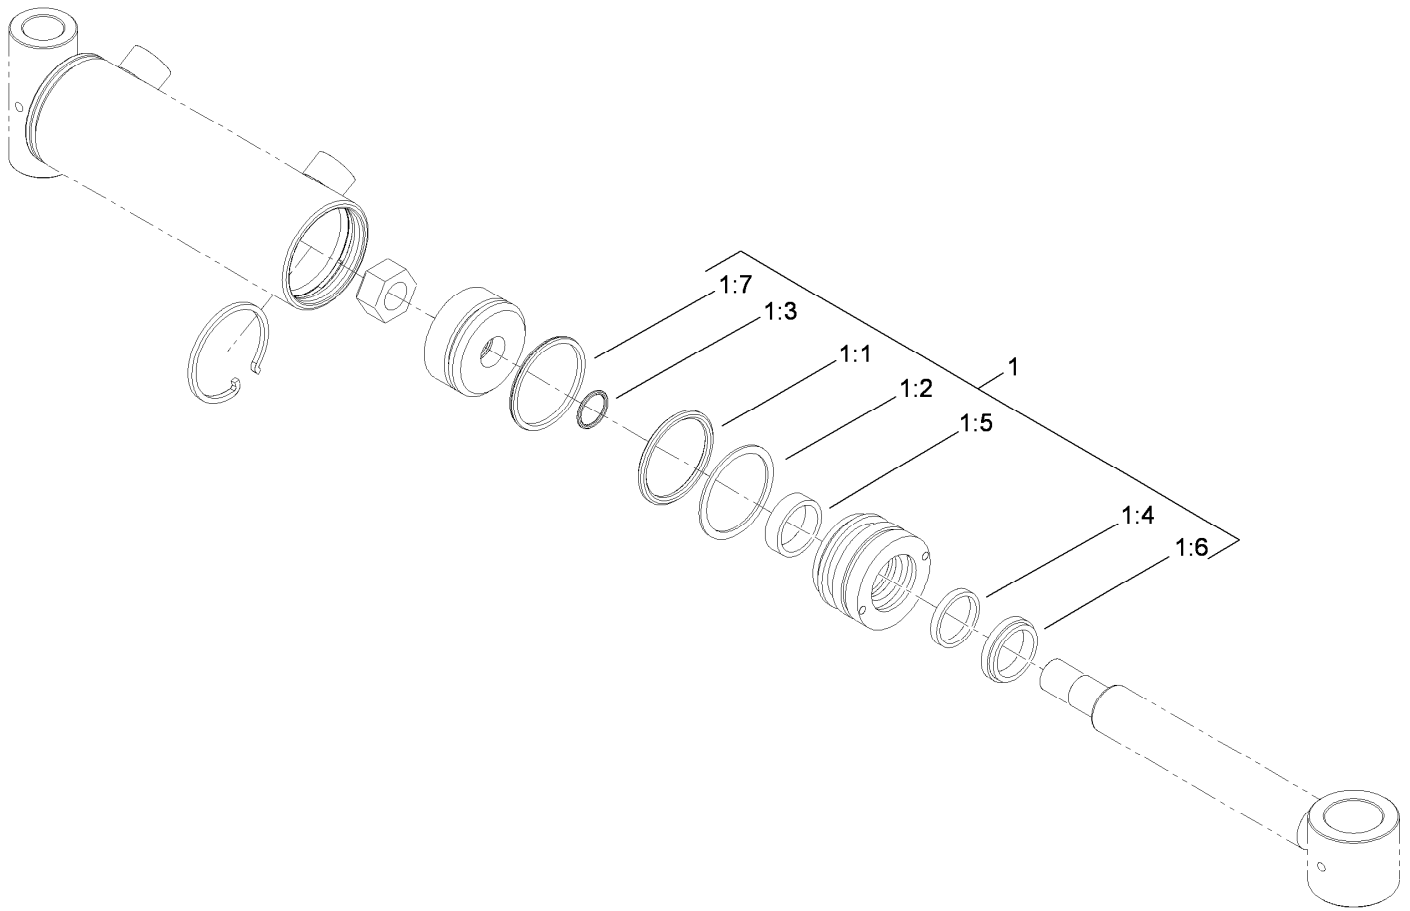

Hydraulic Cylinder Assembly No. 114-4831

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5611	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Seal-Bs ●
1:5		1	Ring-Wear ●
1:6		1	Seal-Dust ●
1:7		1	Ring-Retaining ●

 
● Not serviced separately

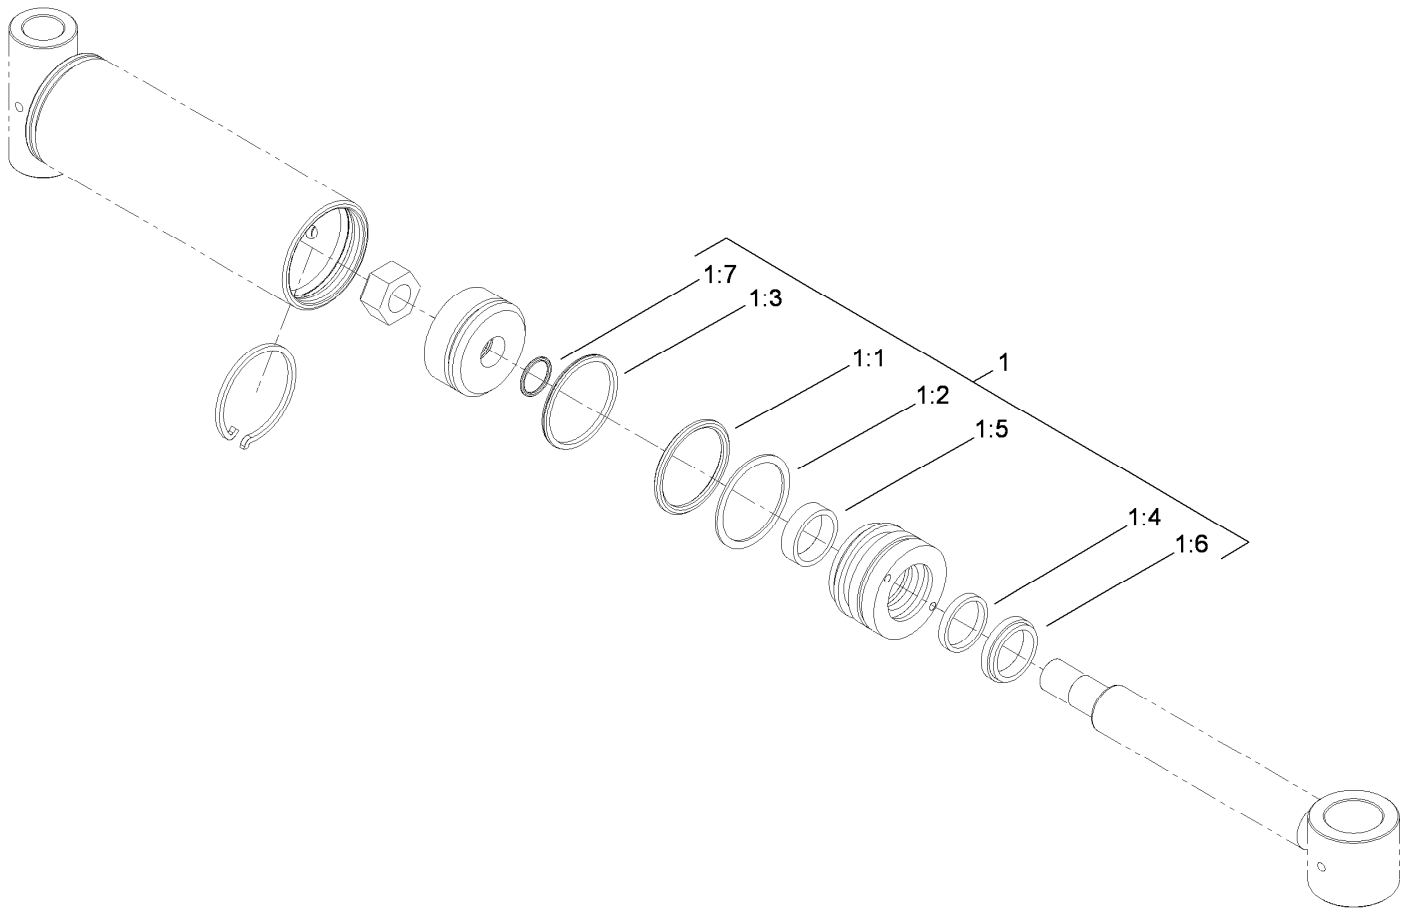

Hydraulic Cylinder Assembly No. 114-4830

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5611	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Seal-Bs ●
1:5		1	Ring-Wear ●
1:6		1	Seal-Dust ●
1:7		1	Ring-Retaining ●

 ● Not serviced separately

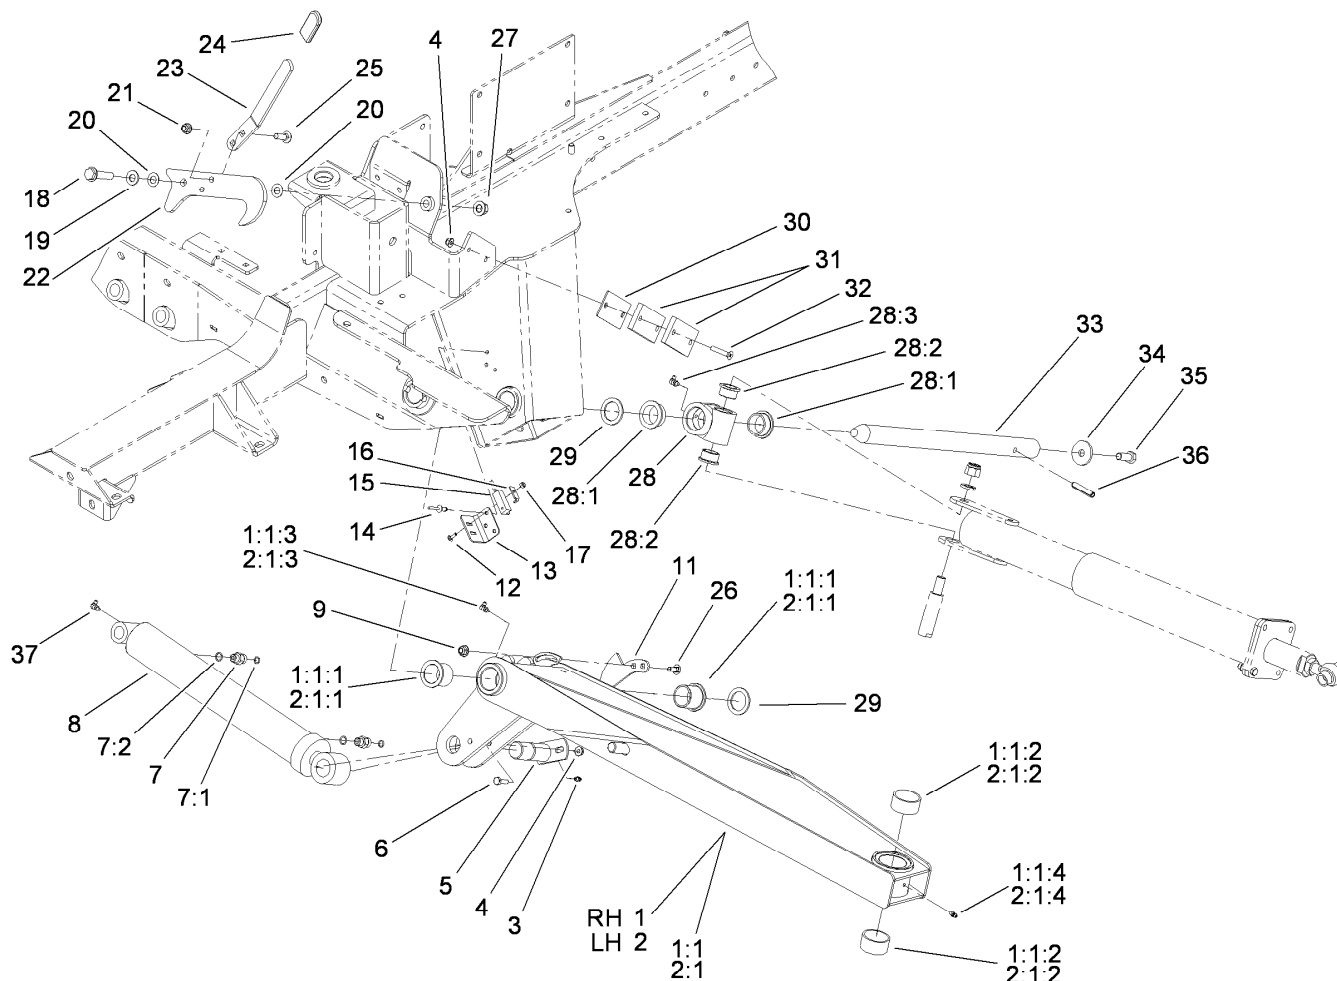


Wing Lift Arm Assembly

Ref.	Part Number	Qty.	Description
1	114-5650-01	1	RH Lift Arm ASM ●
1:1		1	Lift Arm ASM, RH ●■
1:1:1	69-6470	2	Bushing-Castor ●
1:1:2	114-5596	2	Bushing-Straight ●
1:1:3	302-60	1	Fitting-Grease ●
1:1:4	302-5	1	Fitting-Grease ●
2	114-5660-01	1	LH Lift Arm ASM
2:1		1	Lift Arm ASM, LH ■
2:1:1	69-6470	2	Bushing-Castor
2:1:2	114-5596	2	Bushing-Straight
2:1:3	302-60	1	Fitting-Grease
2:1:4	302-5	1	Fitting-Grease
3	302-5	2	Fitting-Grease
4	104-8300	6	Nut-HF, NI
5	105-7325	2	Pin
6	322-5	2	Screw-HH
7	340-2	4	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	114-5685	2	HYD Cylinder ASM
9	104-8300	4	Nut-HF, NI
11	112-7339	2	Plate-Sensing
12	3229-34	2	Screw-CARR
13	112-7338	2	Plate-Aluminum
14	3290-412	6	Rivet-Blind

Ref.	Part Number	Qty.	Description
15	106-9288	2	Sensor-Proximity, Ferrous
16	100-4872	2	Plate-Switch, Neutral
17	3296-2	2	Nut-Lock, NI
18	3234-46	2	Screw-HHF
19	3256-26	2	Washer-Flat
20	104-3577	4	Washer
21	104-8301	4	Nut-HF, NI
22	114-5658-03	2	Latch-Wing
23	114-5659-03	2	Handle-Latch
24	48-7081	2	Grip-Plastic
25	3231-25	4	Bolt-CARR
26	3230-16	4	Screw-CARR
27	99-5107	2	Nut-Lock
28	115-5468	2	Pivot Hub ASM
28:1	115-5469	2	Bushing-Flange
28:2	114-5680	2	Bushing-Flange
28:3	302-60	1	Fitting-Grease
29	256-304	4	Washer-Thrust
30	114-5675	2	Shim-Pad
31	69-9300	4	Pad-Bumper
32	3289-22	4	Screw-FH
33	100-5582	2	Shaft-Pivot, Lift Arm
34	106-2008	2	Washer-Thrust
35	325-5	2	Screw-HH

● Not illustrated

 ■ Not serviced separately

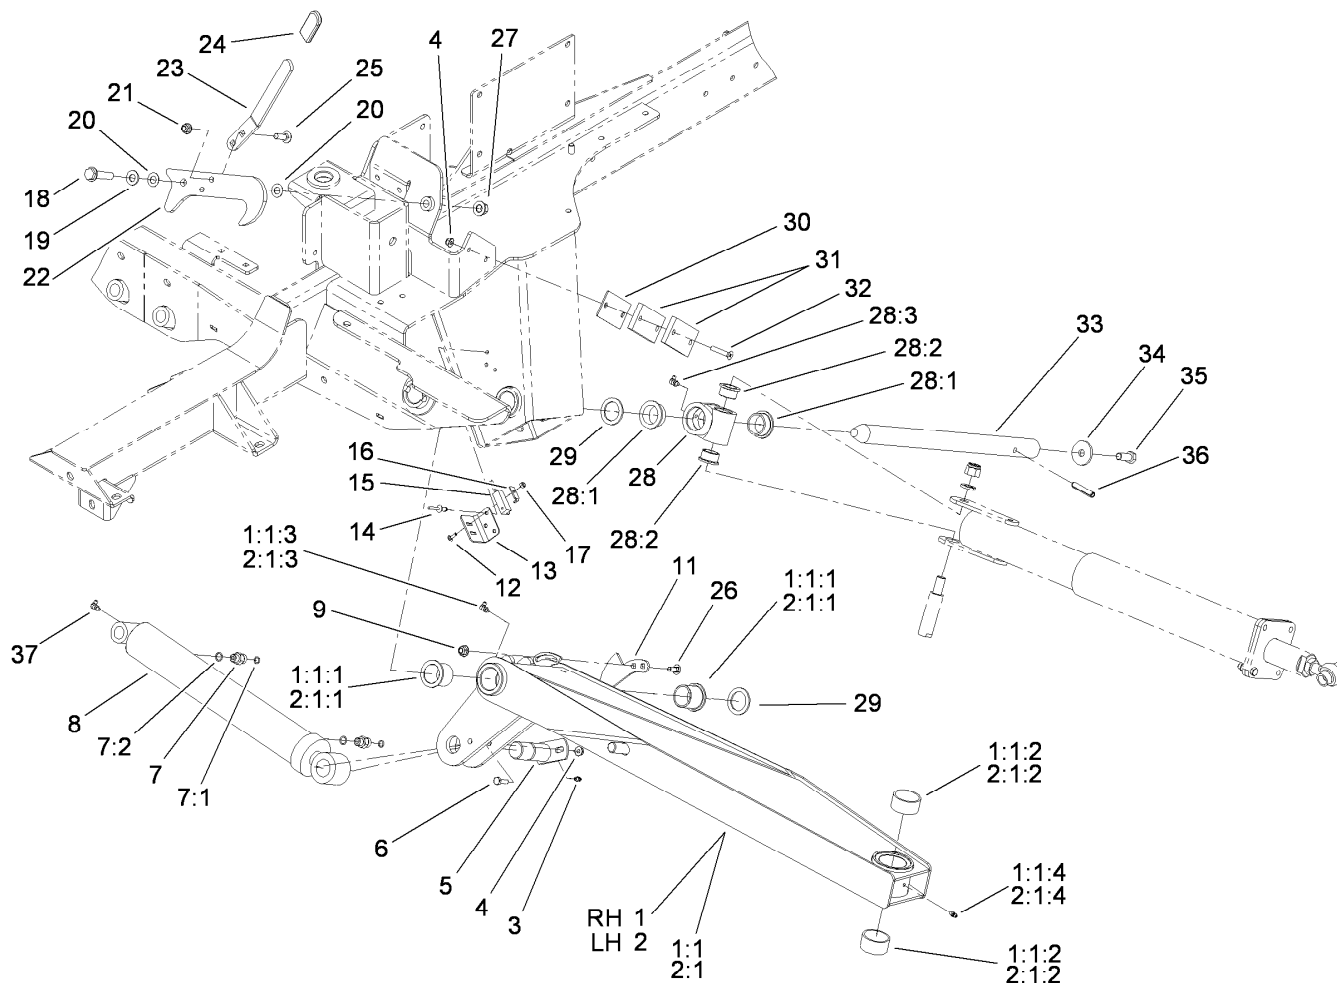


Wing Lift Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
36	117-5479	2	Pin-Spring
37	302-60	2	Fitting-Grease

● Not illustrated

 
■ Not serviced separately

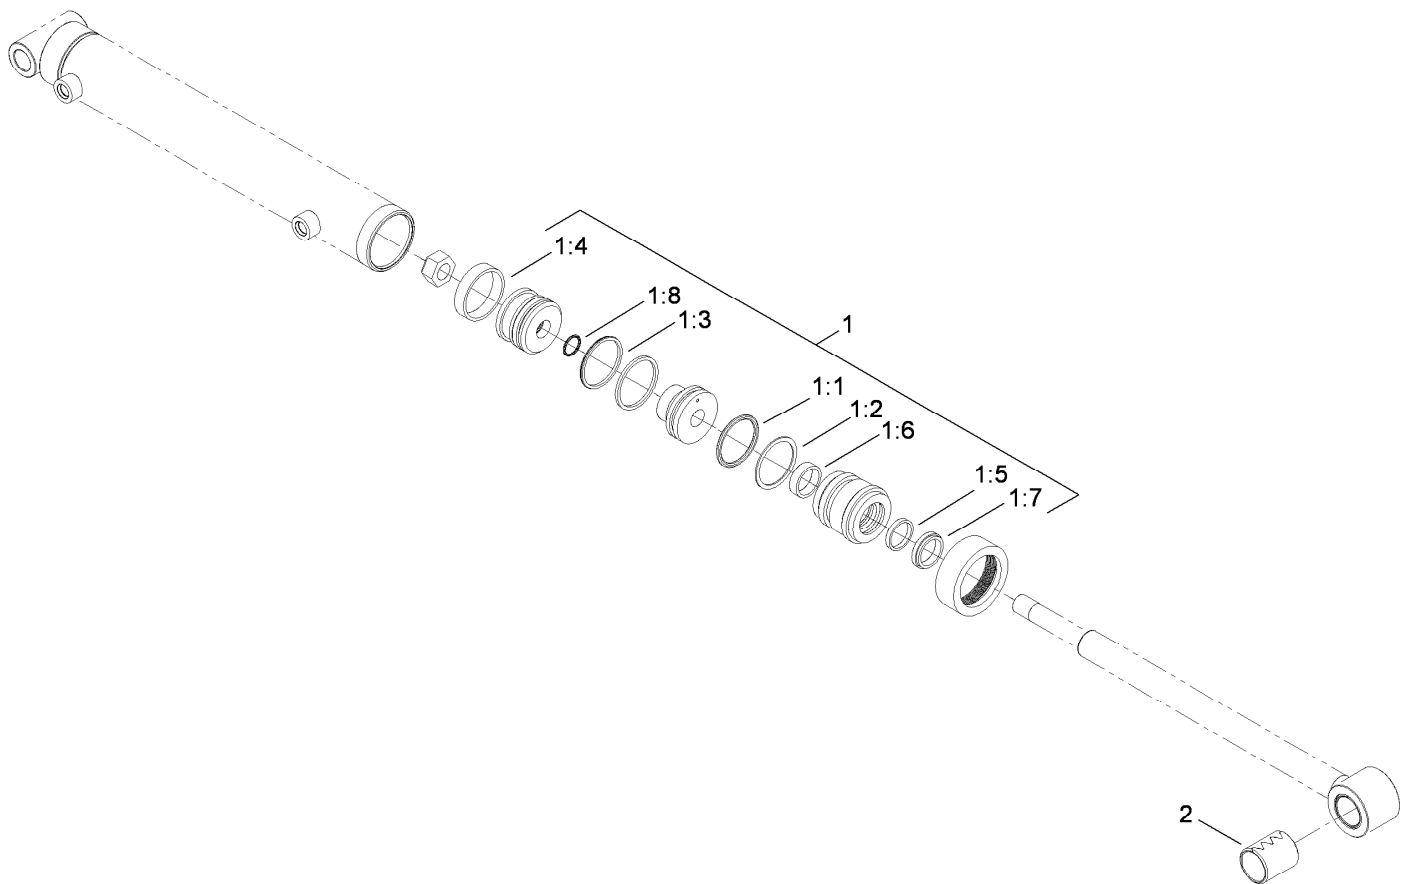

Hydraulic Cylinder Assembly No. 114-5685

Ref.	Part Number	Qty.	Description
1	114-5612	1	Seal Kit
1:1		1	Ring-Retaining ●
1:2		1	Backup ●
1:3		1	Seal-Bp ●
1:4		1	Ring-Wear ●
1:5		1	Seal-Bs ●
1:6		1	Ring-Wear ●
1:7		1	Seal-Dust ●
1:8		1	Ring-Retaining ●
2	117-9407	1	Bushing-Connex

 ● Not serviced separately

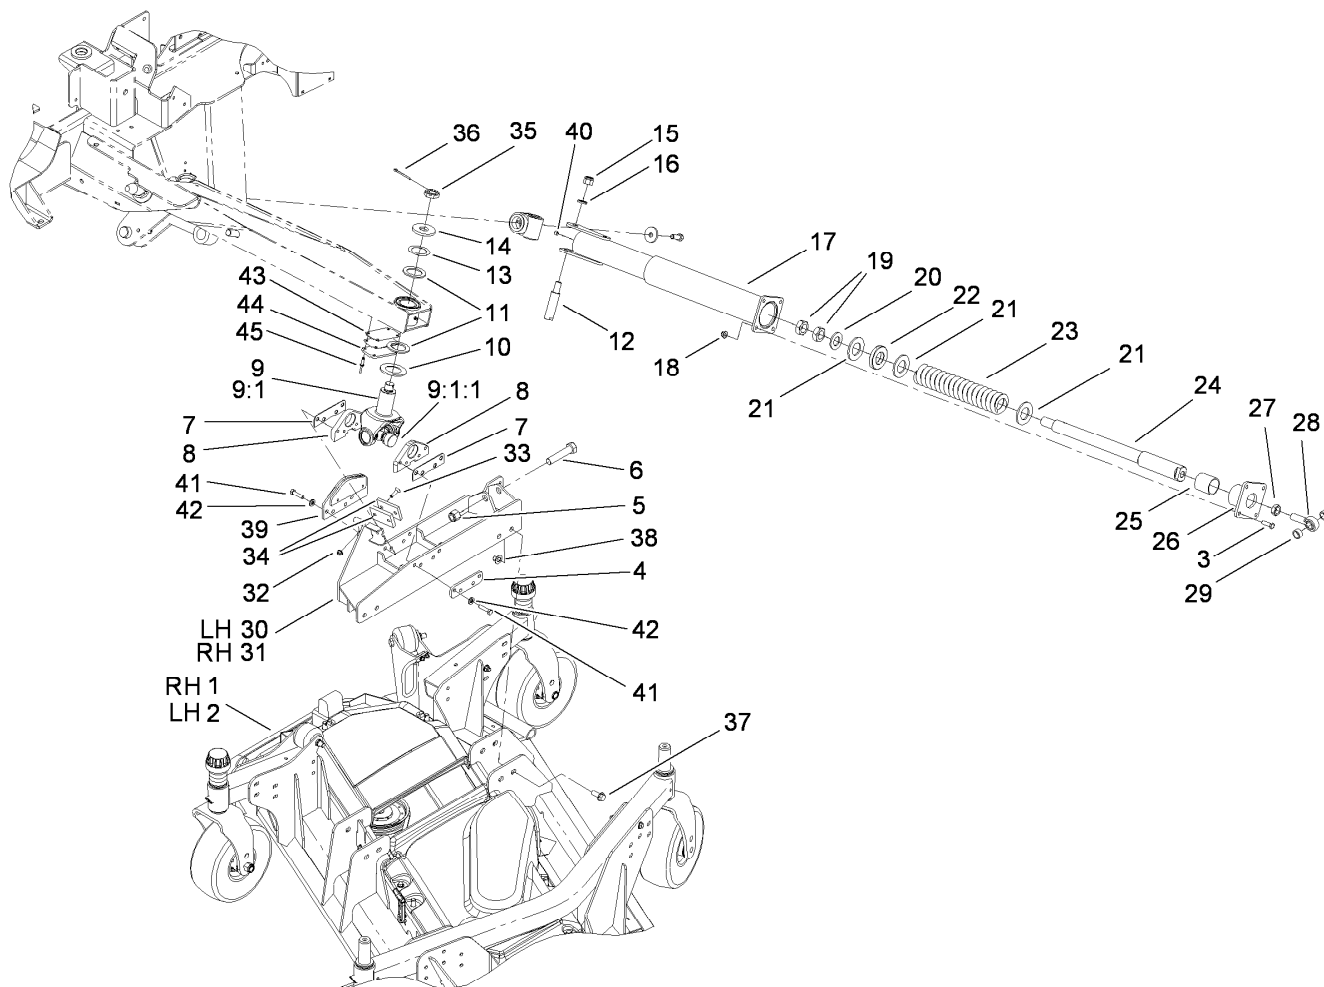


Wing Connection and Impact Arm Assembly

Ref.	Part Number	Qty.	Description
1		1	Right Deck ASM ● ■
2		1	Left Deck ASM ■
3	323-7	8	Screw-HH
4	117-9419	2	Plate-Spacer
5	3296-51	2	Nut-Lock, NI
6	328-5	2	Screw-HH
7	104-0731	4	Shim
8	115-8870-03	4	Mount-Base
9	114-5640-03	2	Joint Yoke ASM
9:1		1	Yoke-Joint ■
9:1:1	104-4299	1	Cross And Bearing Kit
10	104-0720	2	Spacer
11	104-0721	4	Washer-Thrust
12	104-2281	2	Shaft-Pivot
13	114-5641	2	Washer-Thrust
14	104-0719	2	Washer-Hardened
15	3296-53	2	Nut-Lock, NI
16	3253-8	2	Washer-Lock
17	112-7330-03	2	Arm-Impact, Rear
18	104-8301	8	Nut-HF, NI
19	3220-9	4	Nut-Jam
20	3256-62	2	Washer-Flat
21	114-5986	6	Washer-Plain
22	114-5992	2	Bearing-Plastic

Ref.	Part Number	Qty.	Description
23	114-5993	2	Spring-Compression
24	117-9404	2	Shaft-Spring
25	114-5989	2	Bushing-Plain
26	114-5677-03	2	Housing
27	3220-7	2	Nut-Jam
28	105-2806	2	End-Rod
29	74-3730	4	Spacer-Spindle, Rear
30	114-0925-01	1	Connection-Deck, LH
31	114-0926-01	1	Connection-Deck, RH
32	104-8300	4	Nut-HF, NI
33	32108-103	4	Screw-FH
34	69-9290	4	Pad-Bumper
35	99-3139	2	Nut
36	3272-25	2	Pin-Cotter
37	3234-38	16	Screw-HHF
38	99-5107	16	Nut-Lock
39	119-4525-01	2	Stop
40	285-17	2	Plug-Pipe
41	323-43	16	Screw-HH
42	100-4852	16	Washer-Hardened
43	119-4522	4	Shim-Stop
44	119-4521	2	Pad-Stop
45	3269-35	8	Rivet-Blind

● Not illustrated

 ■ Not serviced separately

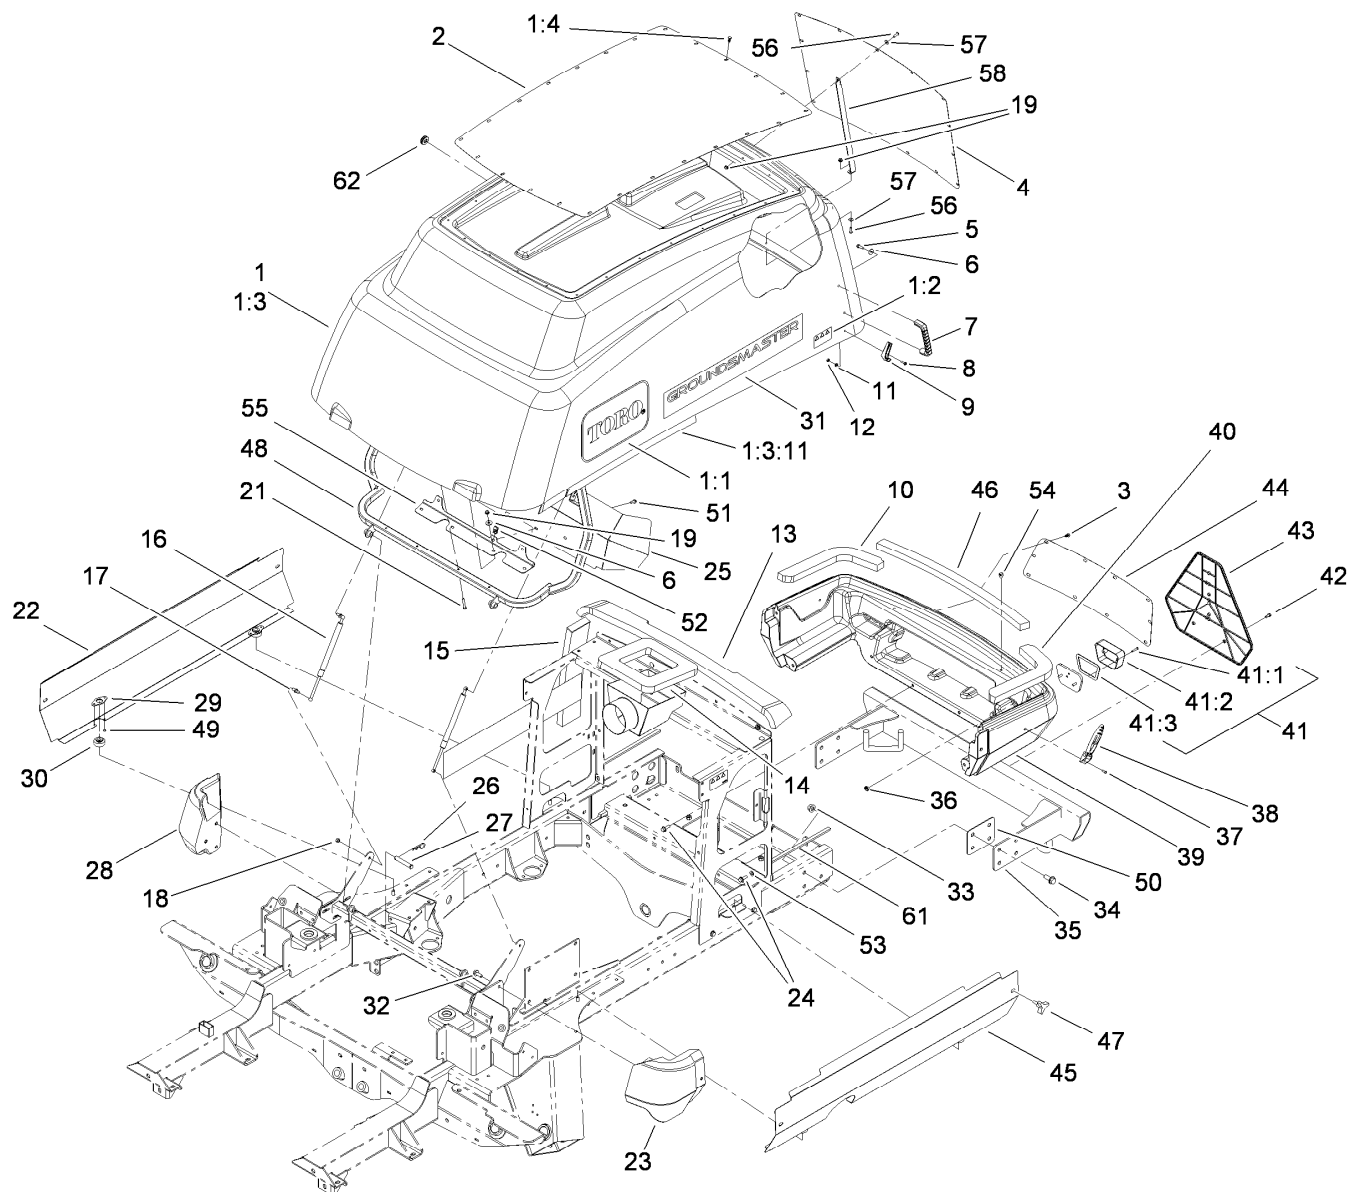


Hood and Bumper Assembly

Ref.	Part Number	Qty.	Description
1	117-9405	1	Hood ASM
1:1	114-0990	2	Decal
1:2	106-6754	2	Decal-Danger
1:3		1	Hood ASM ●
1:3:11	114-5527	1	Tape-Heat Shield
1:4	117-2382	38	Plug-Plastic
2	114-0076-03	1	Screen-Hood, Top
3	117-2382	10	Plug-Plastic
4	114-0077-03	1	Screen-Hood, Back
5	46-8091	4	Screw-HWH
6	87-6630	12	Washer-Plain
7	65-5100	2	Handle-Door
8	3274-39	4	Screw-HSBH
9	103-2897	2	Latch-Catch
10	114-0187	1	Foam-Rear, RH
11	3256-14	4	Washer-Flat
12	3296-12	4	Nut-Lock, NI
13	114-0185	1	Foam-Hood, Top

Ref.	Part Number	Qty.	Description
14	114-0186	1	Foam-Hood, Air Box
15	114-0184	2	Foam-Hood, Side
16	114-5532	2	Cylinder-Gas
17	103-5752	4	Stud-Ball
18	32153-3	4	Nut-Hex, Side Deform
19	104-7201	10	Nut-HF
21	321-10	8	Screw-HH
22	114-4890-03	1	Panel-Side
23	117-5456	1	Shroud-Front, LH
24	3234-29	8	Screw-HHF
25	115-5498-03	1	Shield-Heat
26	92-2762	2	Pin-Hair
27	283-55	2	Pin-Clevis
28	117-5457	1	Shroud-Front, RH
29	114-5619	4	Plate-Grommet
30	114-4869	4	Grommet
31	115-5448	2	Decal-Hood
32	3234-42	6	Screw-HHF

 ● Not serviced separately

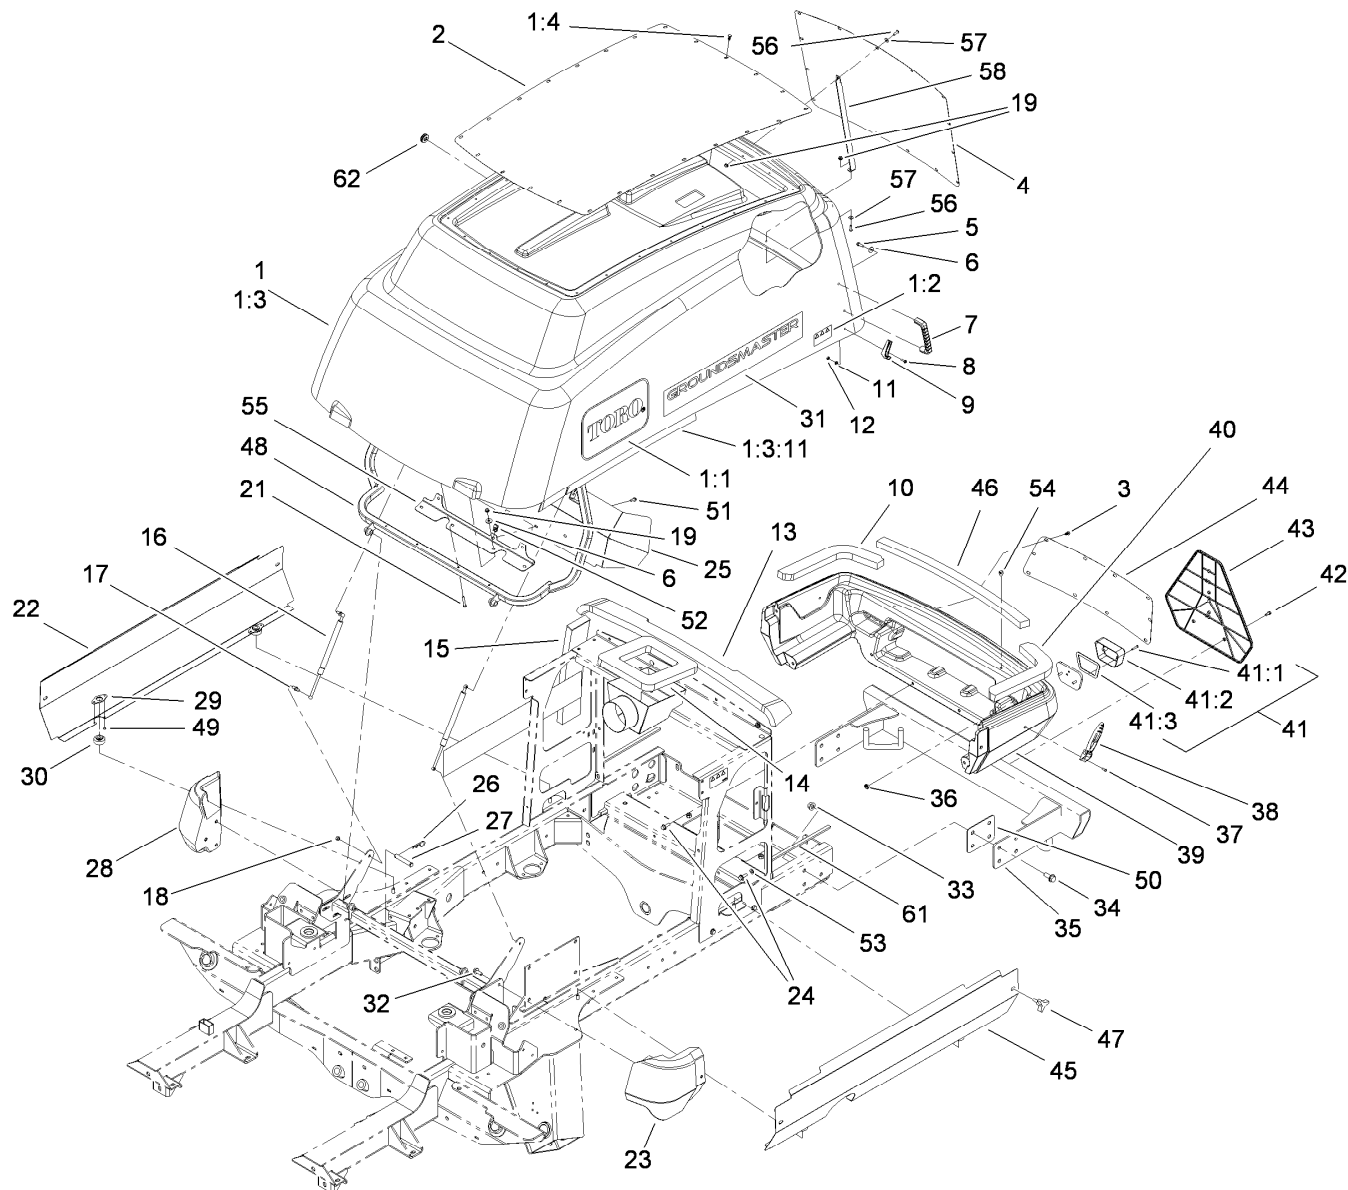


Hood and Bumper Assembly (continued)

Ref.	Part Number	Qty.	Description
33	99-5107	8	Nut-Lock
34	3234-38	8	Screw-HHF
35	115-5457-03	1	Bumper
36	3290-506	4	Palnut
37	3234-4	2	Screw-HHF
38	103-2898	2	Latch-Rubber
39	114-4868	1	Rear Lower Shroud ASM
40	114-0188	1	Foam-Rear, LH
41	104-6662	2	Stop And Tail Lamp ASM
41:1	32144-93	4	Screw-PPHTF
41:2	87-6300	2	Lens-Light, Tail
41:3	87-6310	2	Gasket-Light, Tail
42	32144-10	2	Screw-HWH
43	92-7760	1	Emblem-Vehicle, Slow Moving
44	114-4897-03	1	Screen-Shroud, Lower

Ref.	Part Number	Qty.	Description
45	114-5592-03	1	Panel-Side, LH
46	114-0183	1	Foam-Hood, Rear
47	106-2240	4	Knob
48	114-5548-03	1	Frame-Hood
49	1-803035	8	Rivet-Pop
50	115-5458-03	1	Shim-Bumper
51	3234-4	3	Screw-HHF
52	107069	3	Clip
53	3256-23	4	Washer-Plain
54	32180-030	1	Clip-Tie
55	115-5497-03	1	Plate-Support
56	99-7335	2	Screw
57	3256-1	2	Washer-Flat
58	115-5522-03	1	Strap-Hood
61	107-8676	2	Seal-Foam
62	104-1453	1	Grommet

 
● Not serviced separately

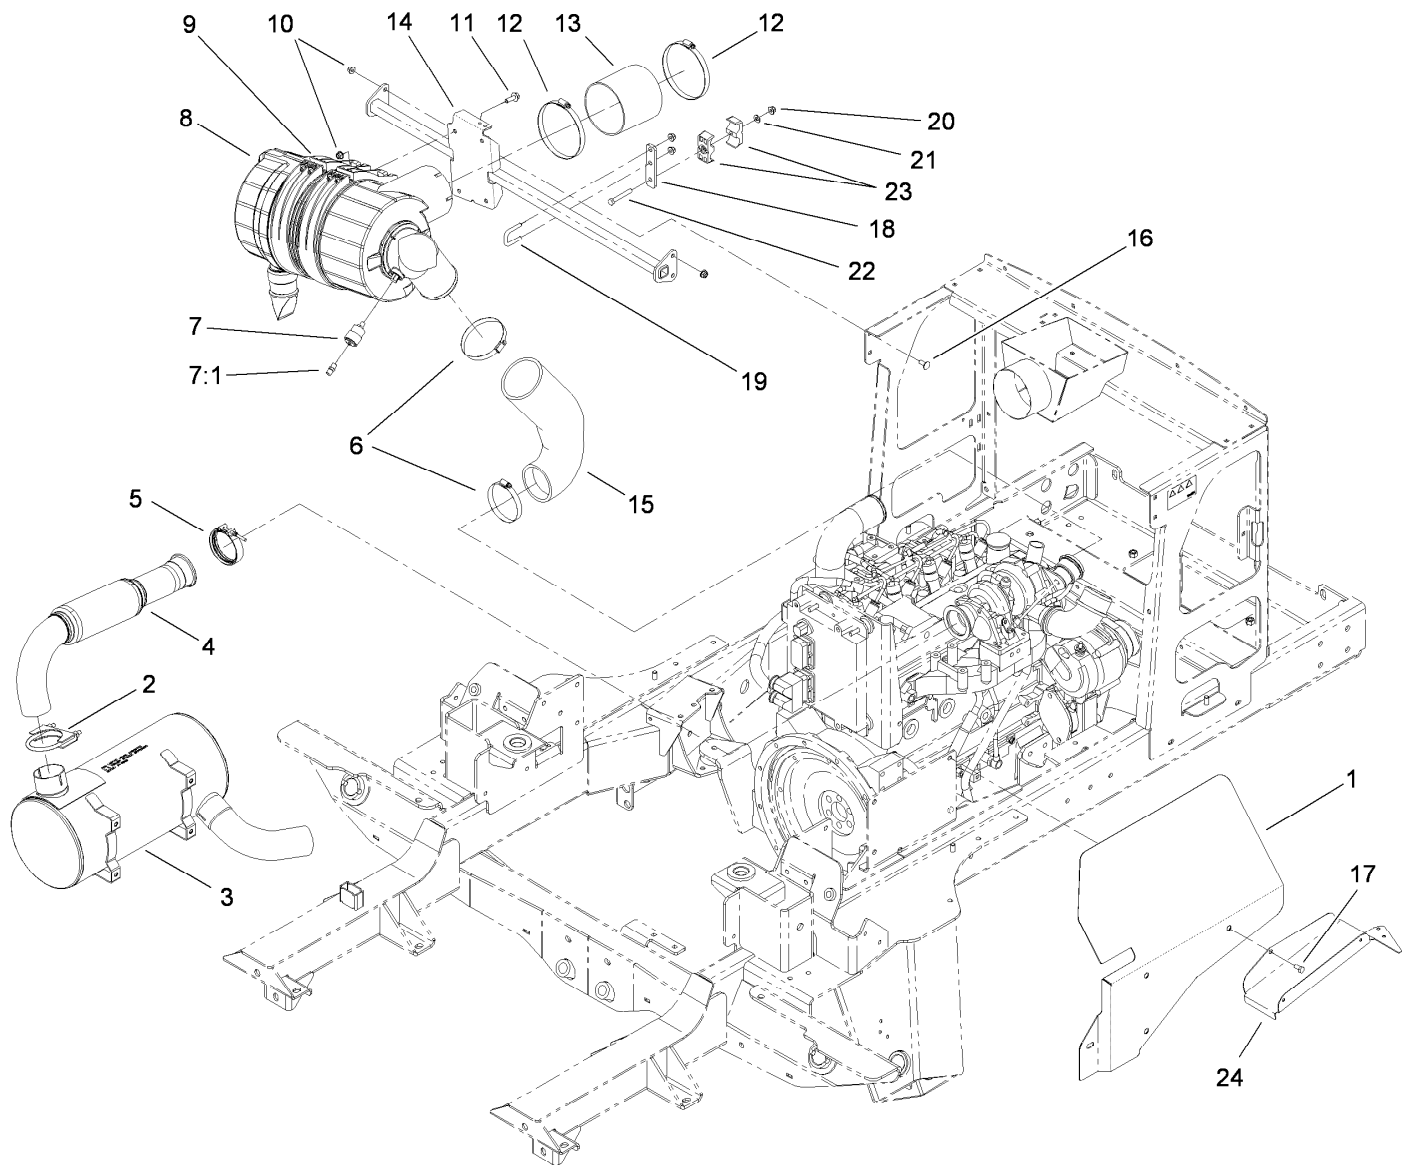

Air Cleaner and Muffler Assembly


Ref.	Part Number	Qty.	Description
1	117-9417-03	1	Shield-Heat
2	112-7310	1	Clamp-Muffler
3	114-5589	1	Muffler
4	114-5588	1	Tube-Exhaust
5	112-7323	1	Clamp-Exhaust
6	114-4938	2	Clamp-Worm
7	104-3563	1	Indicator
7:1	94-1416	1	Adapter-Indicator
8	112-7329	1	Air Cleaner ASM
9	112-7340	2	Band-Mounting, Air Cleaner
10	104-8300	8	Nut-HF, NI
11	3234-29	4	Screw-HHF
12	2412-46	2	Clamp

Ref.	Part Number	Qty.	Description
13	112-7371	1	Hose-Air
14	112-7348-03	1	Mount-Cleaner, Air
15	114-0979	1	Tube-Intake, Air
16	3230-2	4	Bolt-CARR
17	33104-016	4	Screw-HHF
18	114-5616	1	Plate-Mount, Heater Hoses
19	114-0004	1	U-Bolt
20	104-8300	3	Nut-HF, NI
21	3256-23	1	Washer-Plain
22	322-11	1	Screw-HH
23	56-7974	2	Clamp-Tube
24	117-9448-03	1	Shield-Heat

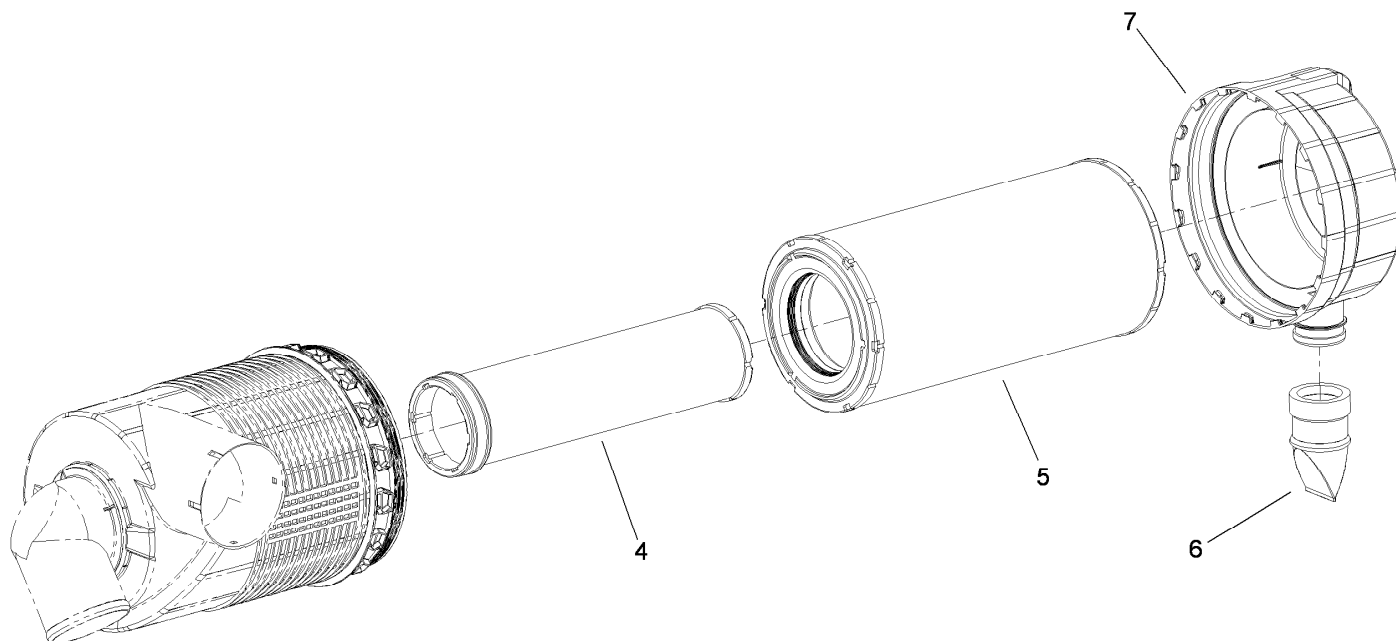 

Air Cleaner Assembly No. 112-7329


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	115-8877	1	Filter-Air, Engine (Safety)
5	115-8887	1	Filter-Air, Engine (Primary)
6	114-5624	1	Valve-Vacuator
7	114-5625	1	Cover ASM

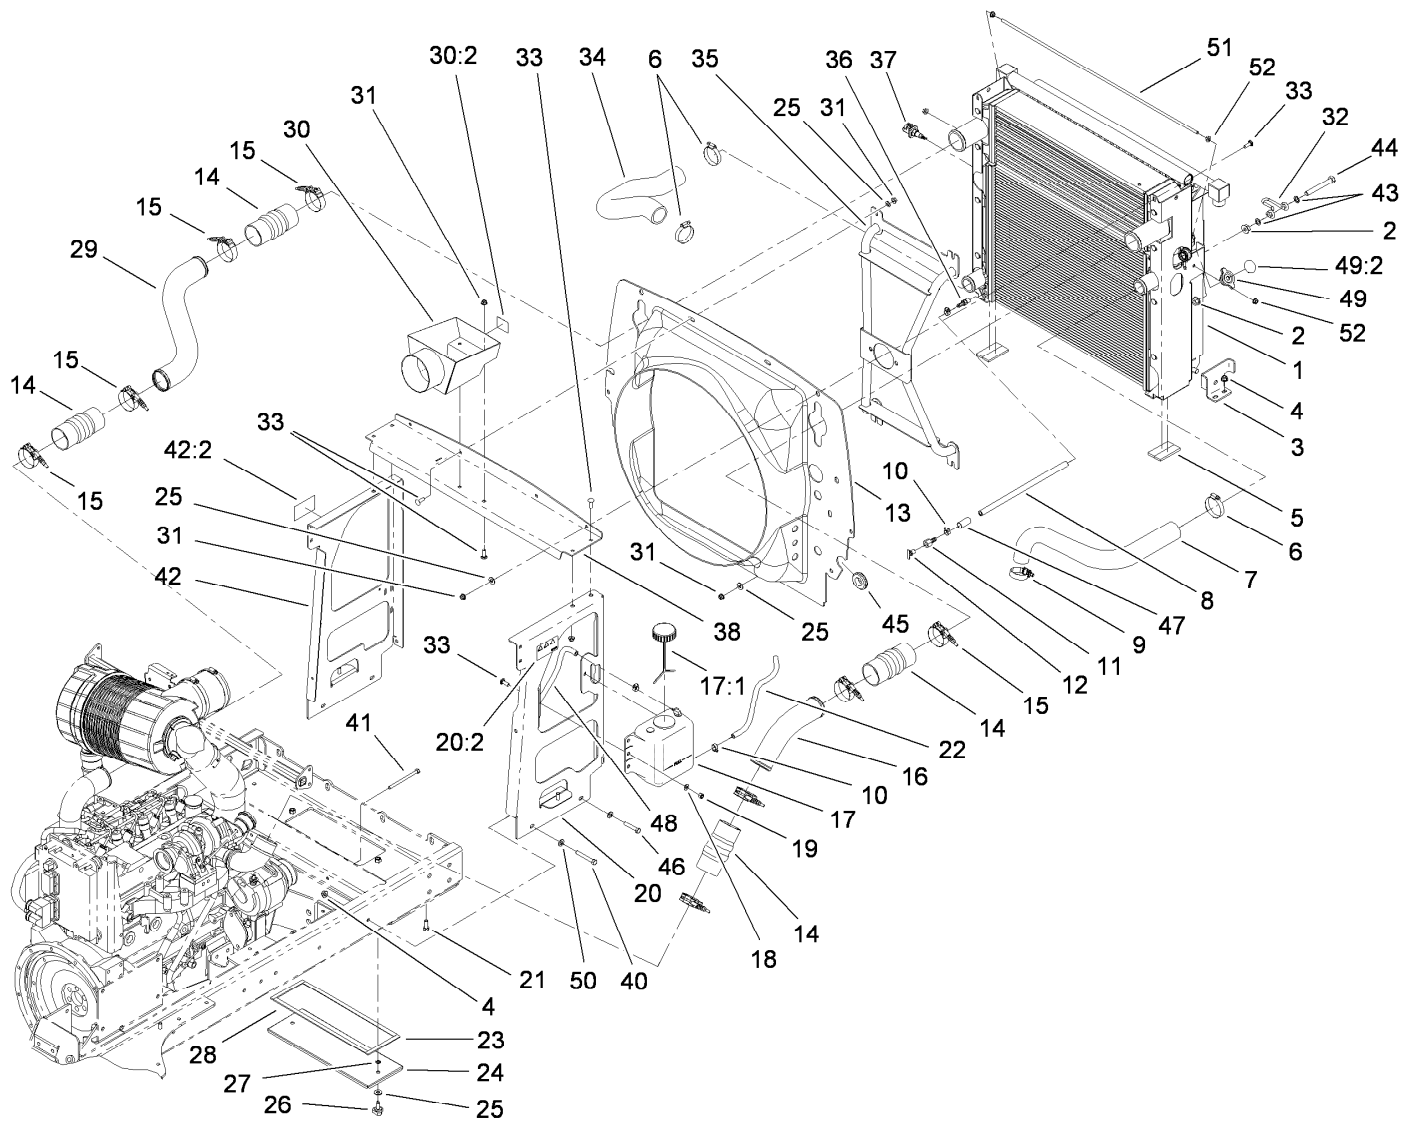 

Radiator and Fan Shroud Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Radiator ASM ●	18	3256-23	2	Washer-Plain
2	32128-49	4	Nut-HHF	19	3296-29	2	Nut-Lock, NI
3	115-5433-01	2	Plate-Support, Cooler	20	115-5438	1	LH Radiator Support ASM
4	104-8301	8	Nut-HF, NI	20:2	106-6754	1	Decal-Danger
5	52-5260	4	Pad-Rubber	21	323-6	4	Screw-HH
6	2412-130	3	Clamp-Hose	22	106-1126	1	Hose-Fuel
7	112-7285	1	Hose-Upper, Radiator	23	105-0778	2	Strip-Foam
8	94-5625	1	Hose	24	104-2287-03	1	Cover-Frame
9	2412-75	1	Clamp	25	3256-3	10	Washer-Flat
10	2412-108	5	Clamp-Worm	26	95-9648	2	Knob
11	354-94	1	Fitting-Female, Barbed	27	32151-72	2	Ring-Retaining
12	93-5528	1	Fitting-Cock, Drain	28	105-0777	2	Strip-Foam
13	112-7295	1	Shroud-Fan	29	112-7282	1	Tube-Cac, Cold (Rigid)
14	112-7283	4	Tube-Cac, Flexible	30	117-5468	1	Air Box ASM
15	114-0031	8	Clamp, T-Bolt	30:2	93-7275	1	Decal-Fluid, Starting
16	112-7281	1	Tube-Cac, Hot (Rigid)	31	104-8300	14	Nut-HF, NI
17	104-2276	1	Reservoir-Coolant	32	104-5429	2	Clamp-Form, Wire
17:1	87-7050	1	Cap-Reservoir	33	3230-2	14	Bolt-CARR

 ● Not serviced separately

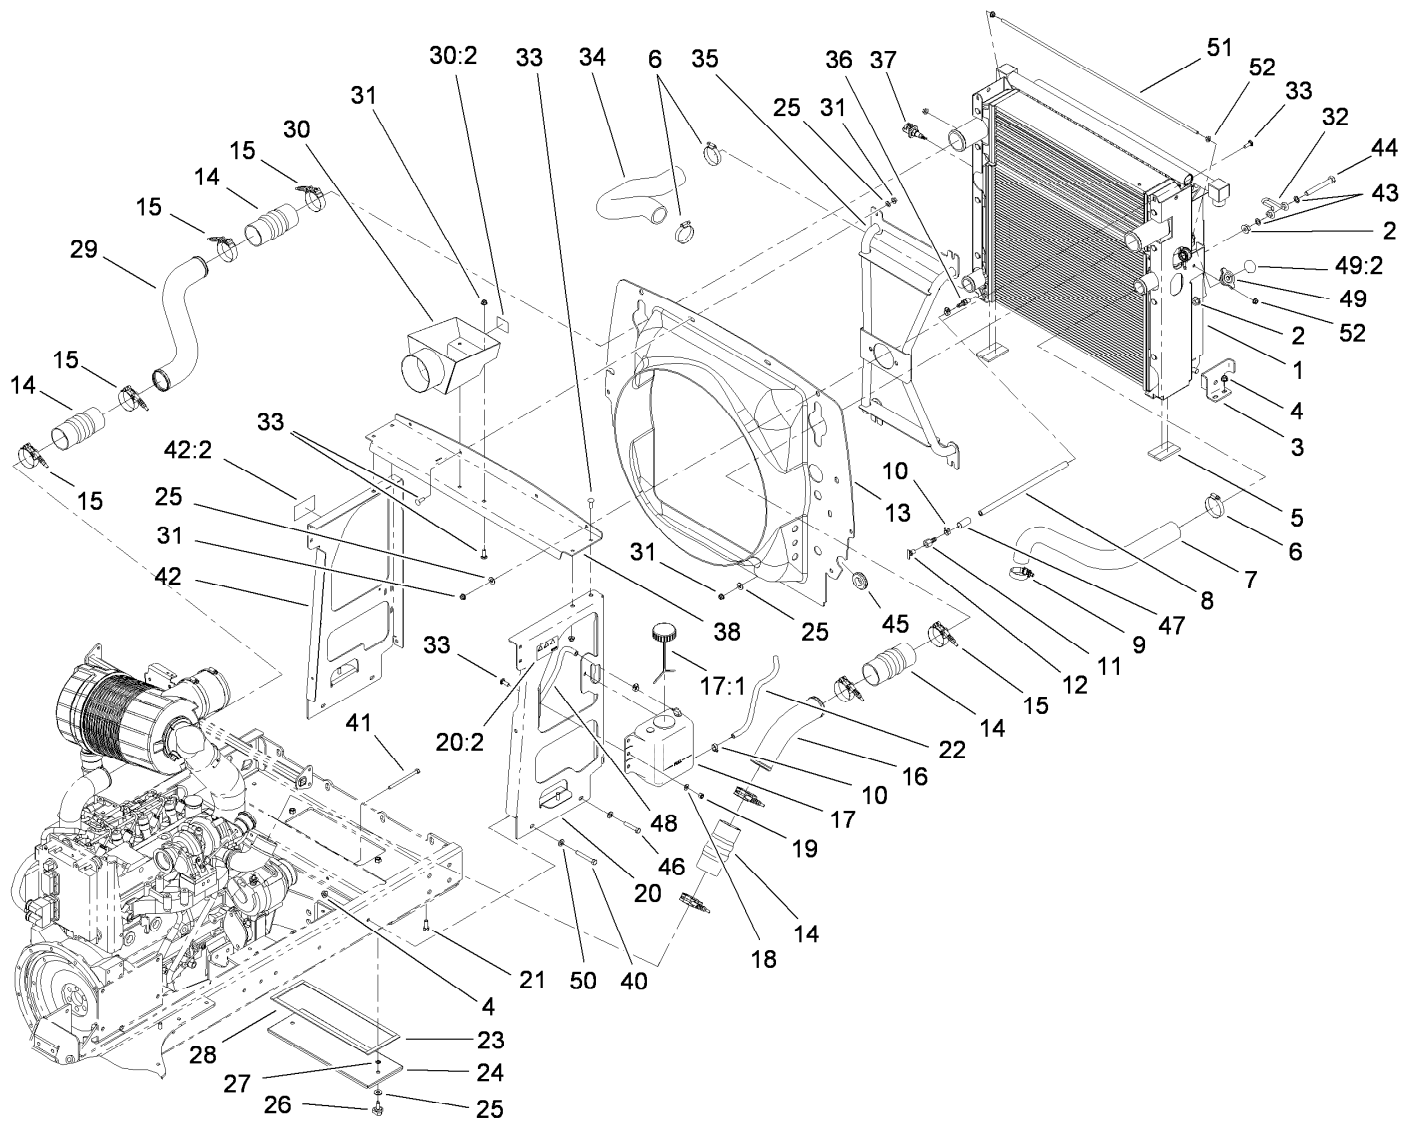


Radiator and Fan Shroud Assembly (continued)

Ref.	Part Number	Qty.	Description
34	112-7284	1	Hose-Lower, Radiator
35	112-7290-03	1	Bracket-Motor, Fan
36	108-0342	1	Fitting-Straight
37	110-8828	1	Sensor-Level, Coolant
38	114-0155-03	1	Support-Radiator, Top
40	323-13	2	Screw-HH
41	322-38	2	Screw-HH
42	115-5437	1	RH Radiator Support ASM
42:2	106-6754	1	Decal-Danger
43	41-8440	4	Washer


Ref.	Part Number	Qty.	Description
44	325-17	2	Screw-HH
45	108-3723	2	Grommet
46	323-10	2	Screw-HH
47	114-5530	1	Sleeve-Hose
48	109-0309	1	Hose-Fuel
49	115-5440	1	Radiator Cap ASM
49:2	106-6755	1	Decal-Cap, Radiator
50	3256-24	4	Washer-Flat
51	115-5496	1	Rod-Support
52	32128-20	4	Nut-HF

 ● Not serviced separately

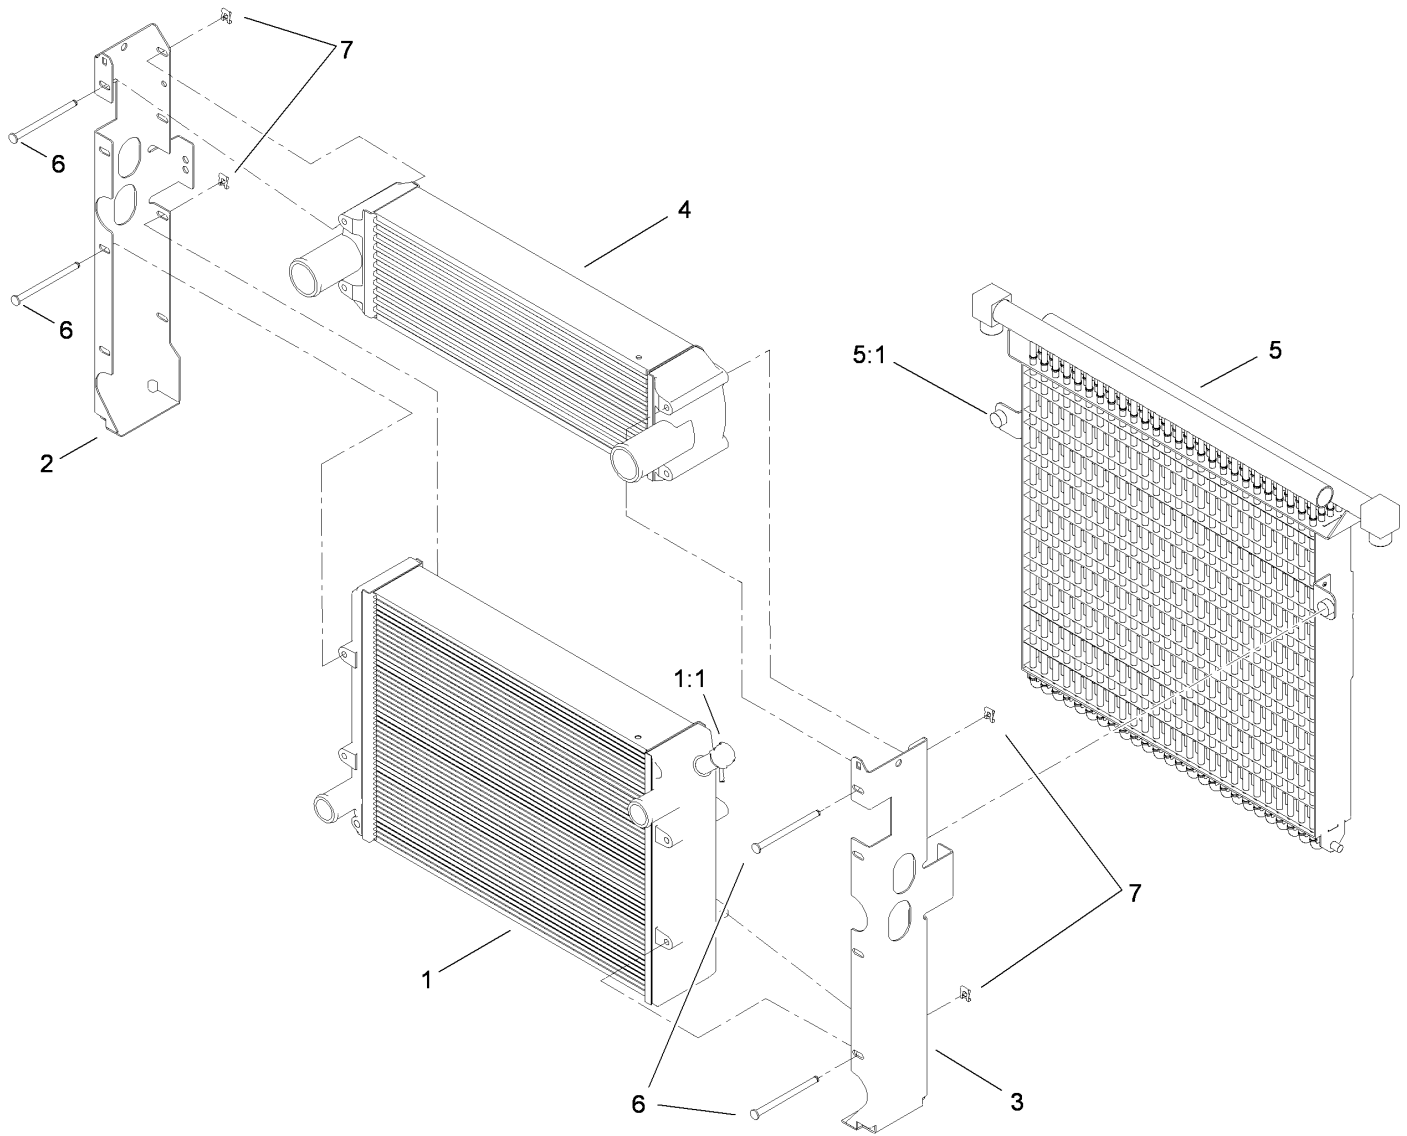

Radiator Assembly

Ref.	Part Number	Qty.	Description
1	114-5542	1	Radiator
1:1	93-5957	1	Cap-Radiator
2	114-5540	1	Bracket-Cooler, RH
3	114-5541	1	Bracket-Cooler, LH
4	114-5543	1	Cooler-Charge, Air
5	114-5544	1	Cooler-Oil
5:1	115-5495	2	Bumper-Rubber
6	114-5545	8	Pin
7	114-5546	8	Clip-Pin

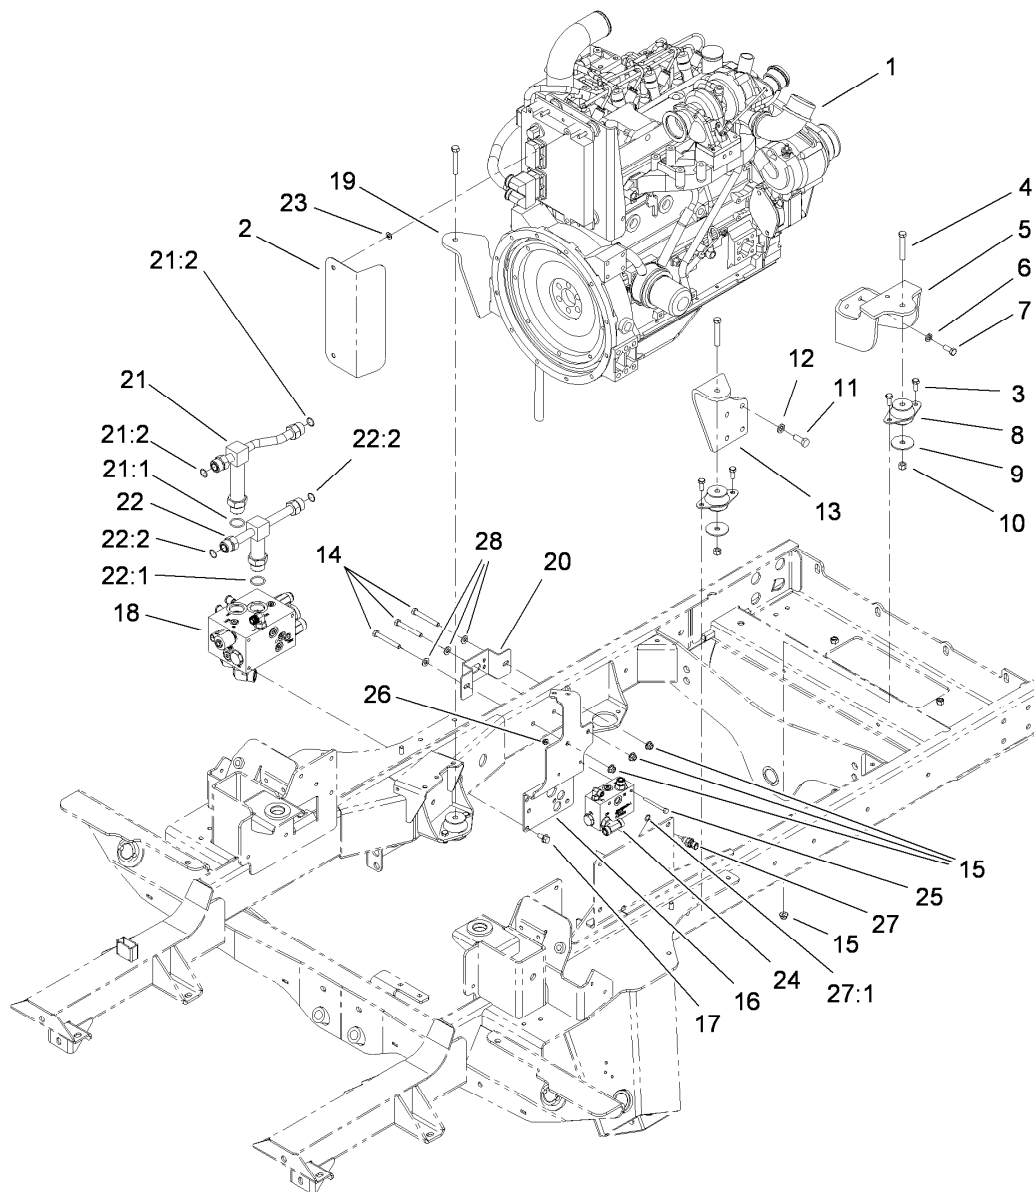 


Engine and Mount Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Cummins ●
2	114-5591-03	1	Shield-Heat
3	323-5	7	Screw-HH
4	324-11	4	Screw-HH
5	110-6018-03	2	Mount-Engine, Rear
6	3253-6	8	Washer-Lock
7	33115-025	8	Screw-HH
8	53-9681	4	Mount-Engine
9	87-5100	4	Washer-Snubbing
10	3296-48	4	Nut-Lock, NI
11	33116-030	8	Screw-HH
12	3253-7	8	Washer-Lock
13	110-6029-03	1	Mount-Front, LH (Engine Isolator)
14	323-14	3	Screw-HH
15	104-8301	11	Nut-HF, NI
16	112-7422-03	1	Plate-Mount, 4Wd Valve
17	3234-1	4	Screw-HHF


Ref.	Part Number	Qty.	Description
18		1	4Wd Manifold ASM ●
19	110-6028-03	1	Mount-Front, RH (Engine Isolator)
20	114-5560	1	Plate-Mount, Bulkhead
21	114-0878	1	Fitting-Special
21:1	237-146	1	O-Ring
21:2	237-58	2	O-Ring
22	114-0877	1	Fitting-Special
22:1	237-146	1	O-Ring
22:2	237-58	2	O-Ring
23	3256-23	2	Washer-Plain
24		1	Flush Manifold ASM ●
25	321-14	2	Screw-HH
26	104-7201	2	Nut-HF
27	110-8829	1	Sender-Temperature
27:1	237-42	1	O-Ring
28	3256-24	3	Washer-Flat

 ● Not serviced separately

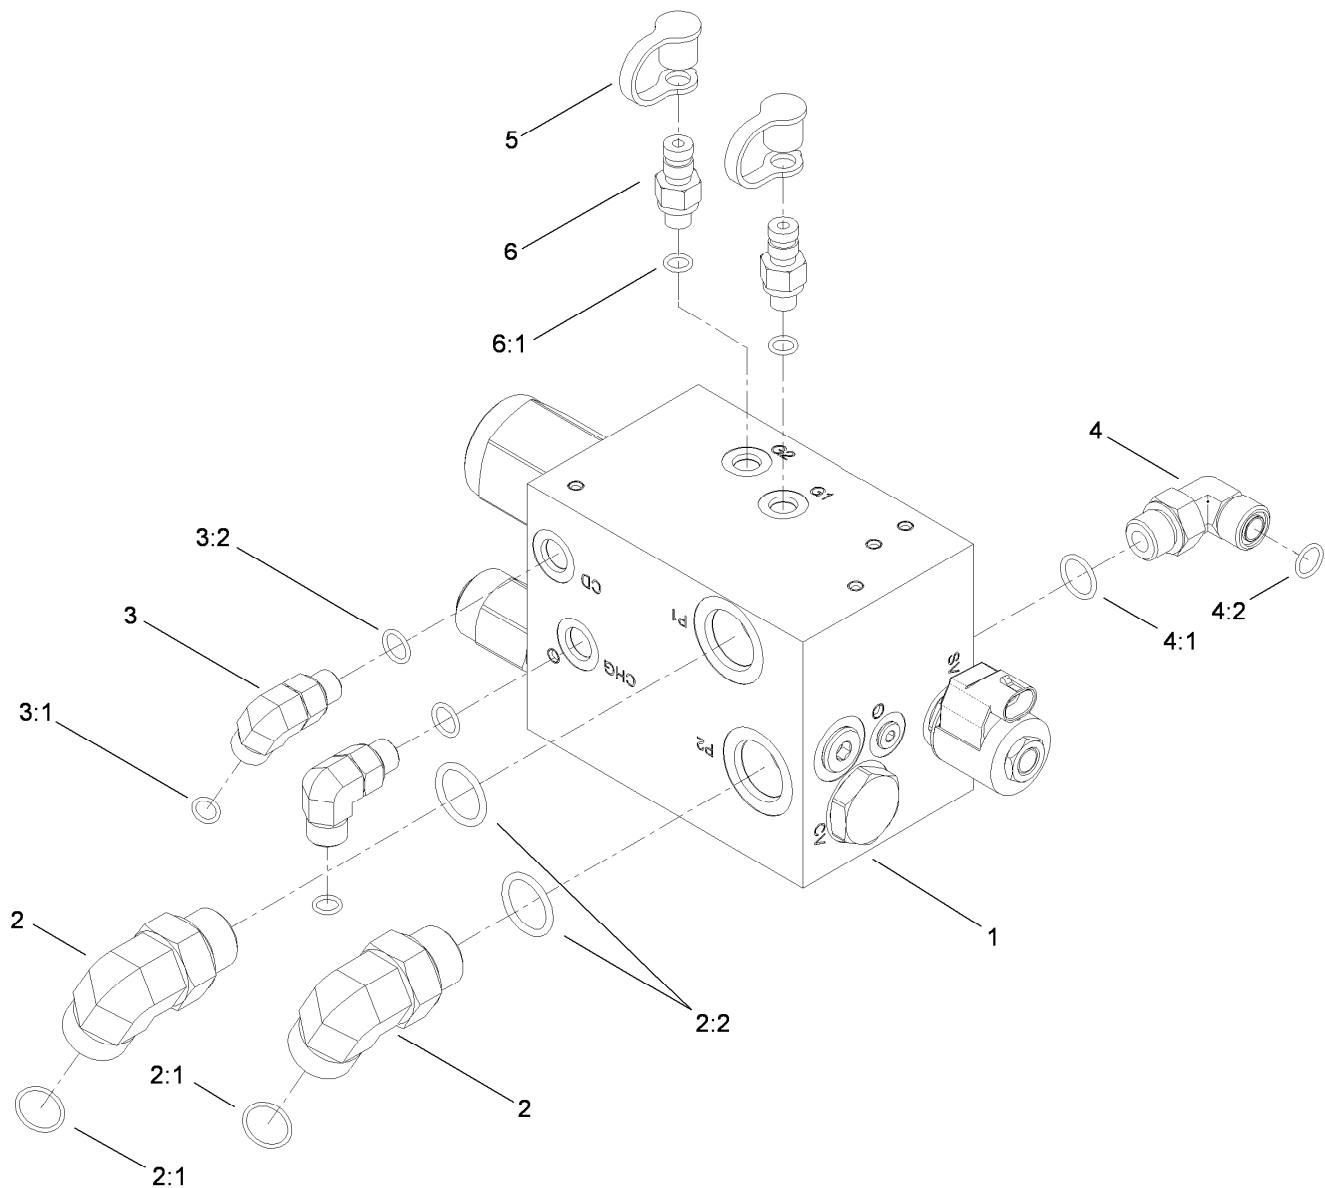

4 Wheel Drive Hydraulic Manifold Assembly


Ref.	Part Number	Qty.	Description
1	110-6063	1	Manifold-4Wd
2	340-142	2	Fitting-Elbow-90
2:1	237-58	1	O-Ring
2:2	237-81	1	O-Ring
3	340-77	2	Fitting-Elbow, 90 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	340-98	1	Fitting-Elbow, 90 DEG
4:1	237-79	1	O-Ring
4:2	237-30	1	O-Ring
5	354-79	2	Cap-Dust
6	354-77	2	Fitting-Quick
6:1	237-78	1	O-Ring

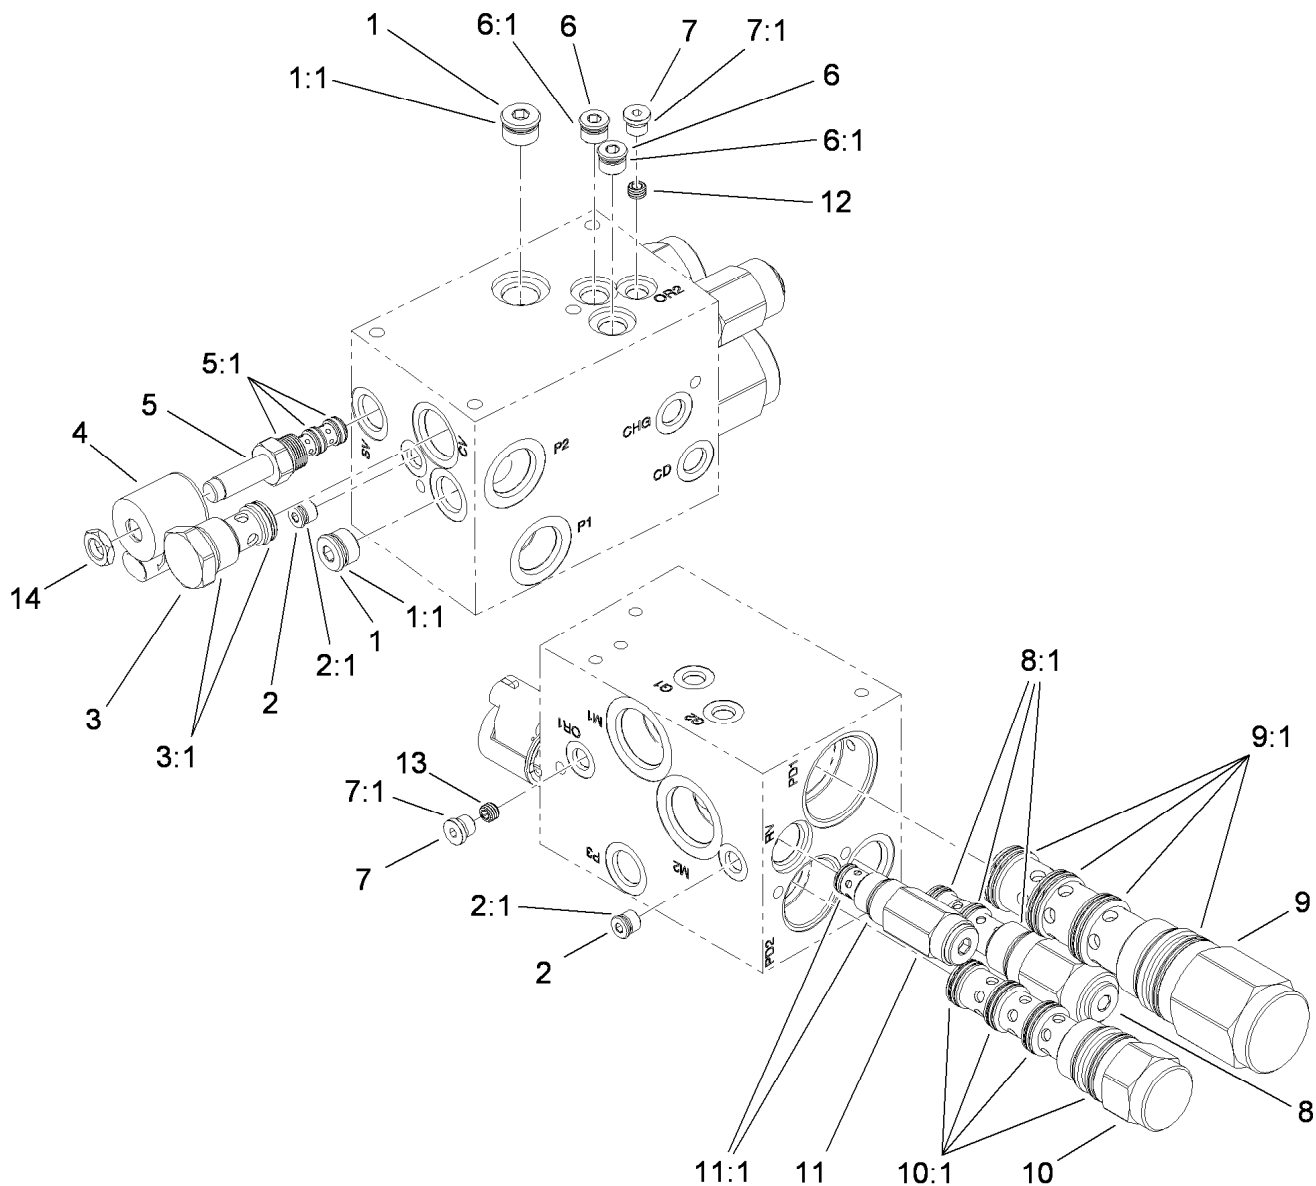 

4 Wheel Drive Hydraulic Manifold Assembly No. 110-6063


Ref.	Part Number	Qty.	Description
1	106-1027	2	Plug-HYD
1:1	237-79	1	O-Ring
2	106-1025	2	Plug-HYD
2:1	237-78	1	O-Ring
3	110-0468	1	Valve-Check, 5 PSI
3:1	110-0470	1	Seal Kit
4	105-9333	1	Coil-12Vdc
5	106-1995	1	Valve-3 Way
5:1	110-8773	1	Seal Kit
6	106-1026	2	Plug-HYD
6:1	237-42	1	O-Ring
7	353-990	2	Plug ASM

Ref.	Part Number	Qty.	Description
7:1	237-78	1	O-Ring
8	110-6069	1	Valve-Pressure, Red/Rel
8:1	110-6068	1	Seal Kit
9	112-7394	1	Directional-Pilot
9:1	115-5415	1	Seal Kit
10	110-0491	1	Valve-Directional
10:1	106-6775	1	Seal Kit
11	112-7392	1	Valve-Relief, Free Rev
11:1	110-6316	1	Seal Kit
12	107-1987	1	Orifice-0.040
13	110-5973	1	Orifice-0.030
14	110-2634	1	Nut-Coil

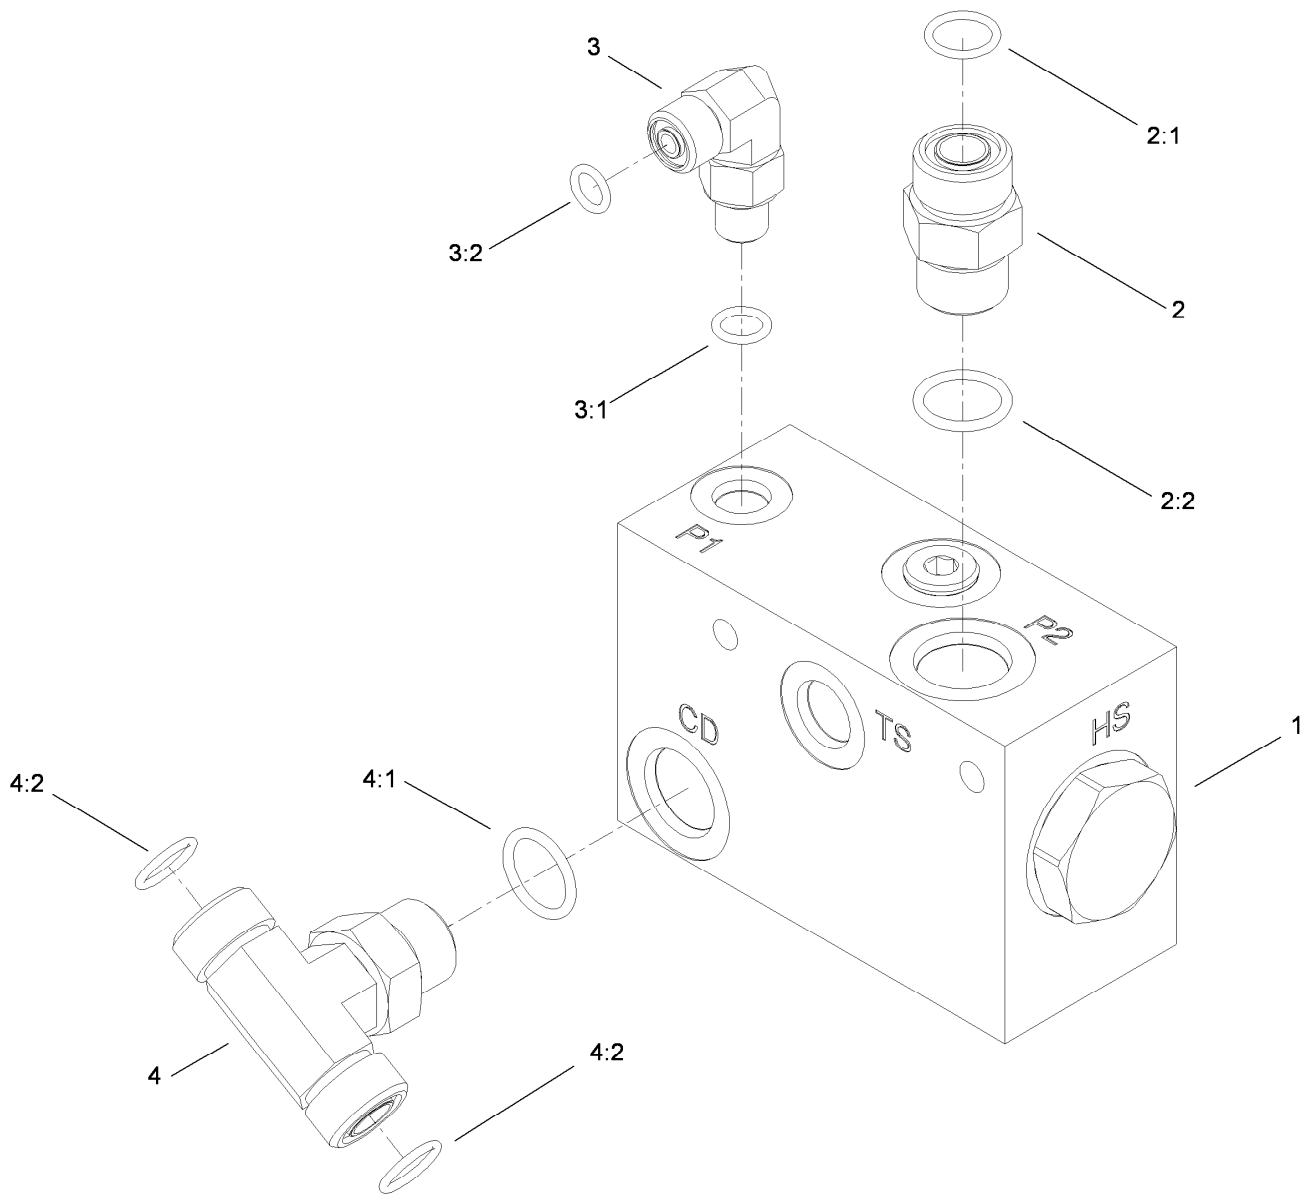 


Flush Manifold Assembly

Ref.	Part Number	Qty.	Description
1	115-8876	1	Valve-Flush
2	340-4	1	Fitting-Straight
2:1	237-30	1	O-Ring
2:2	237-79	1	O-Ring
3	340-132	1	Fitting-Elbow, 90 DEG
3:1	237-78	1	O-Ring
3:2	237-21	1	O-Ring
4	340-157	1	Fitting-HYD, Tee
4:1	237-79	1	O-Ring
4:2	237-30	2	O-Ring

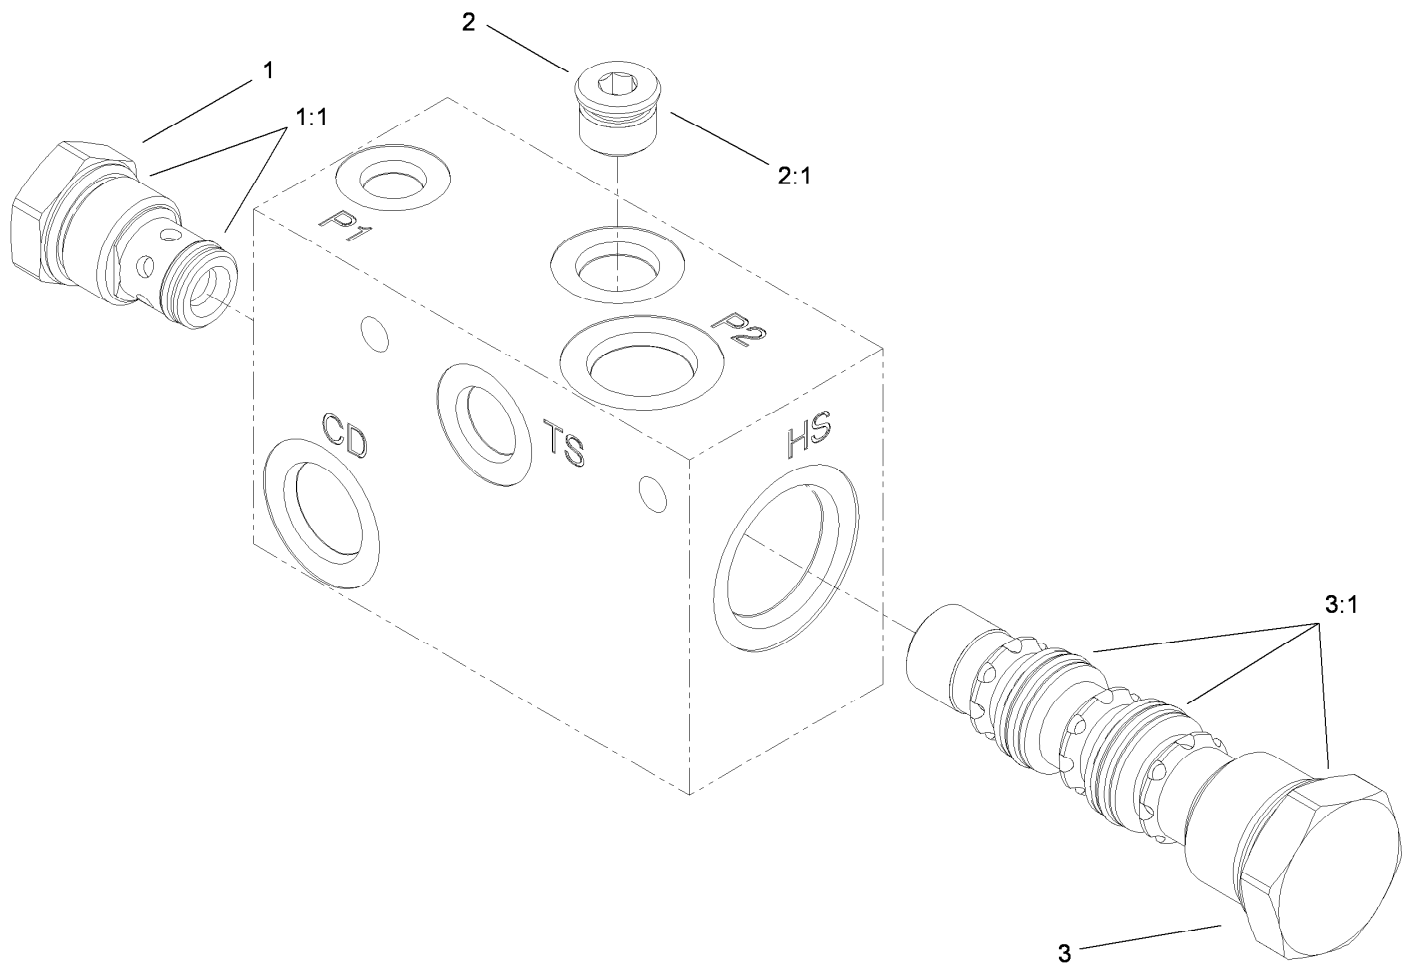 

Flush Valve Assembly No. 115-8876


Ref.	Part Number	Qty.	Description
1	110-0469	1	Valve-Check, 180 PSI
1:1	105-9159	1	Seal Kit
2	106-1026	1	Plug-HYD
2:1	237-42	1	O-Ring
3	117-1113	1	Valve-Shuttle, Hot Oil
3:1	117-1114	1	*obs* Seal Kit

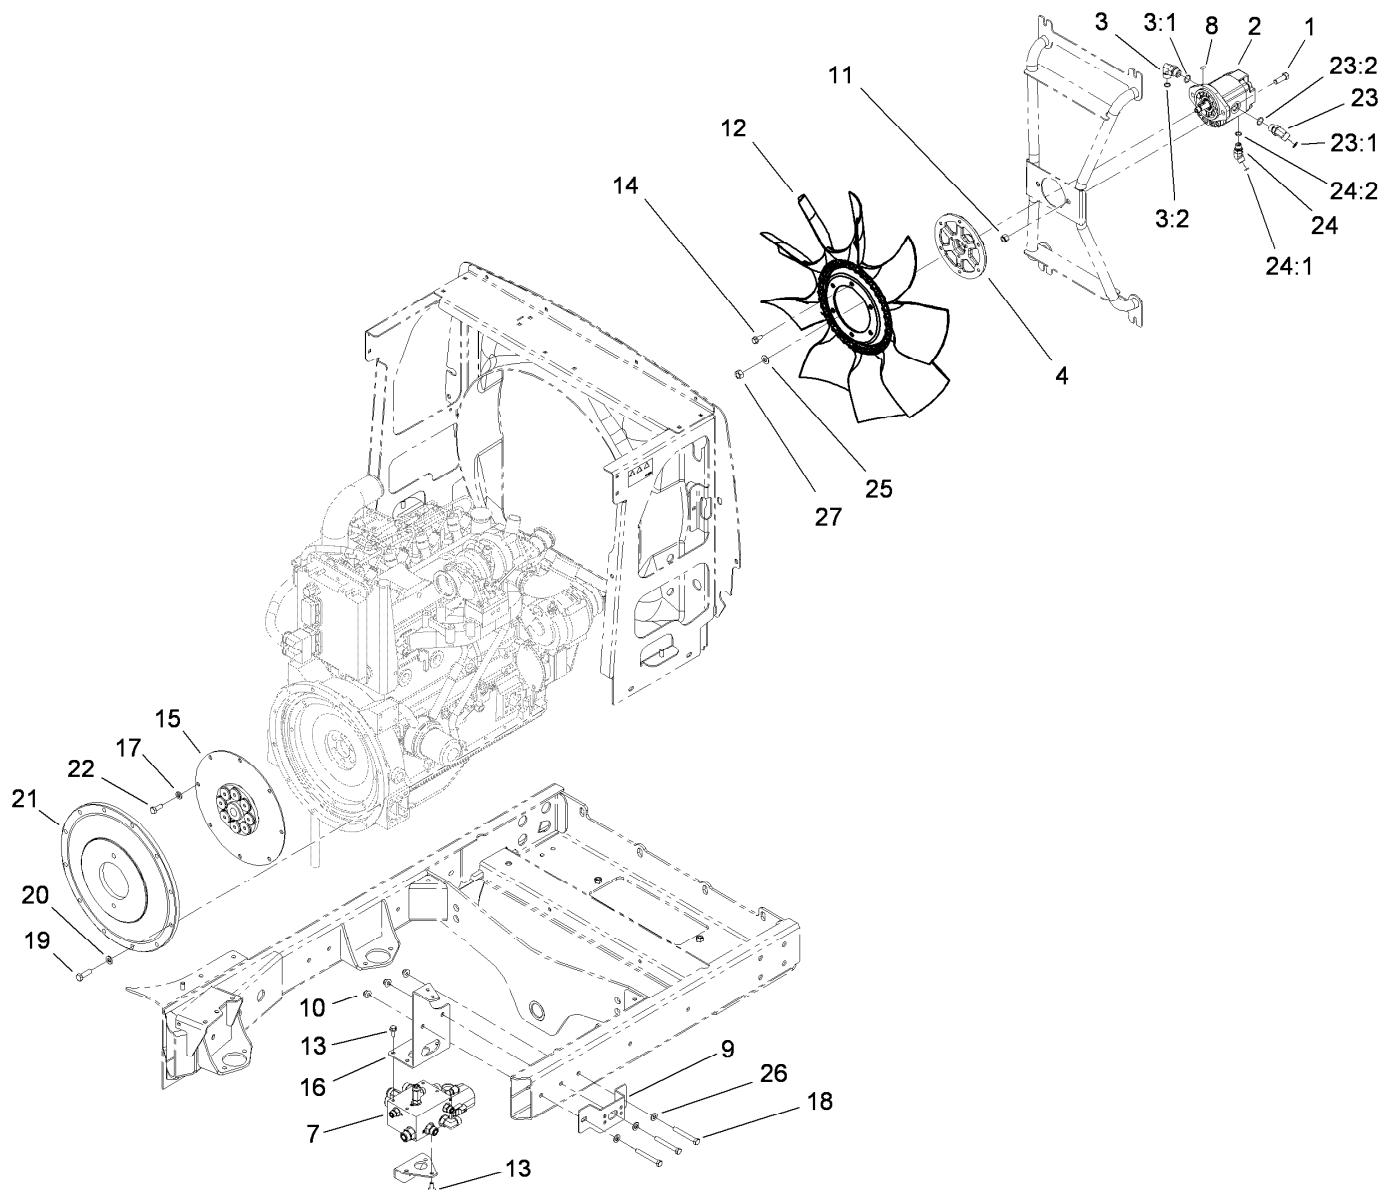 

Fan and Coupling Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	3274-49	2	Screw-HSH	17	107-1413	8	Washer-Hardened
2	112-7400	1	Fan Motor ASM	18	323-14	3	Screw-HH
3	340-98	1	Fitting-Elbow, 90 DEG	19	33115-035	12	Screw-HH
3:1	237-79	1	O-Ring	20	100-4852	12	Washer-Hardened
3:2	237-30	1	O-Ring	21	110-6045	1	Cover-Housing, Flywheel
4	114-4848-03	1	Hub-Fan	22	33115-025	8	Screw-HH
7		1	Steer/Fan Manifold ASM ●	23	340-101	1	Fitting-HYD, 45 DEG
8	3257-3	1	Key-Woodruff	23:1	237-30	1	O-Ring
9	114-5560	1	Plate-Mount, Bulkhead	23:2	237-79	1	O-Ring
10	104-8301	3	Nut-HF, NI	24	340-87	1	Fitting-Elbow, 45 DEG
11	3296-48	2	Nut-Lock, NI	24:1	237-22	1	O-Ring
12	110-5980	1	Fan	24:2	237-42	1	O-Ring
13	110-5053	7	Screw-HHF	25	112-6957	1	Washer-Hardened
14	3234-47	6	Screw-HHF	26	3256-24	3	Washer-Flat
15	110-6046	1	Flywheel Coupling ASM	27	110-8815	1	Nut-Hex
16	112-7423-03	1	Plate-Mount, Fan/Steer Valve				

 
● Not serviced separately

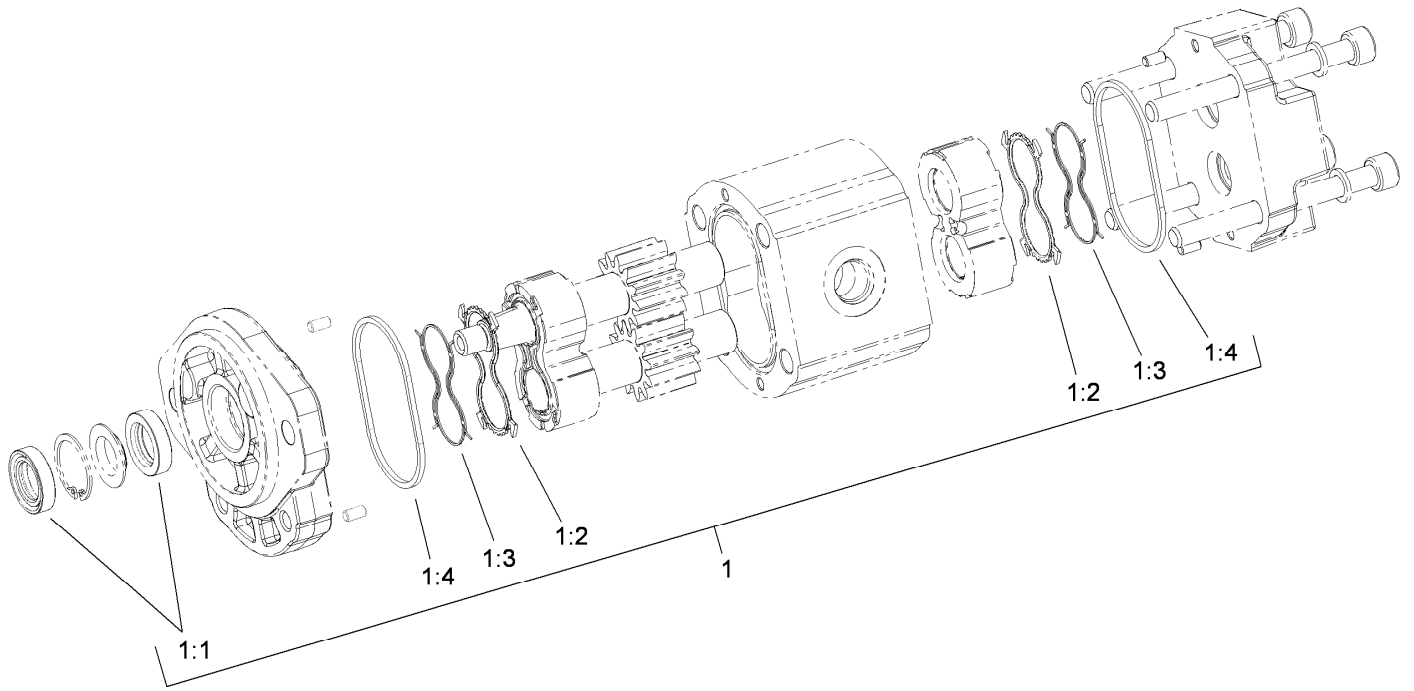

Hydraulic Fan Motor Assembly No. 112-7400

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-4110	1	Seal Kit
1:1		2	Seal-Shaft ●
1:2		2	Seal-Plate, Balancing ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	O Ring-Housing ●

 
● Not serviced separately

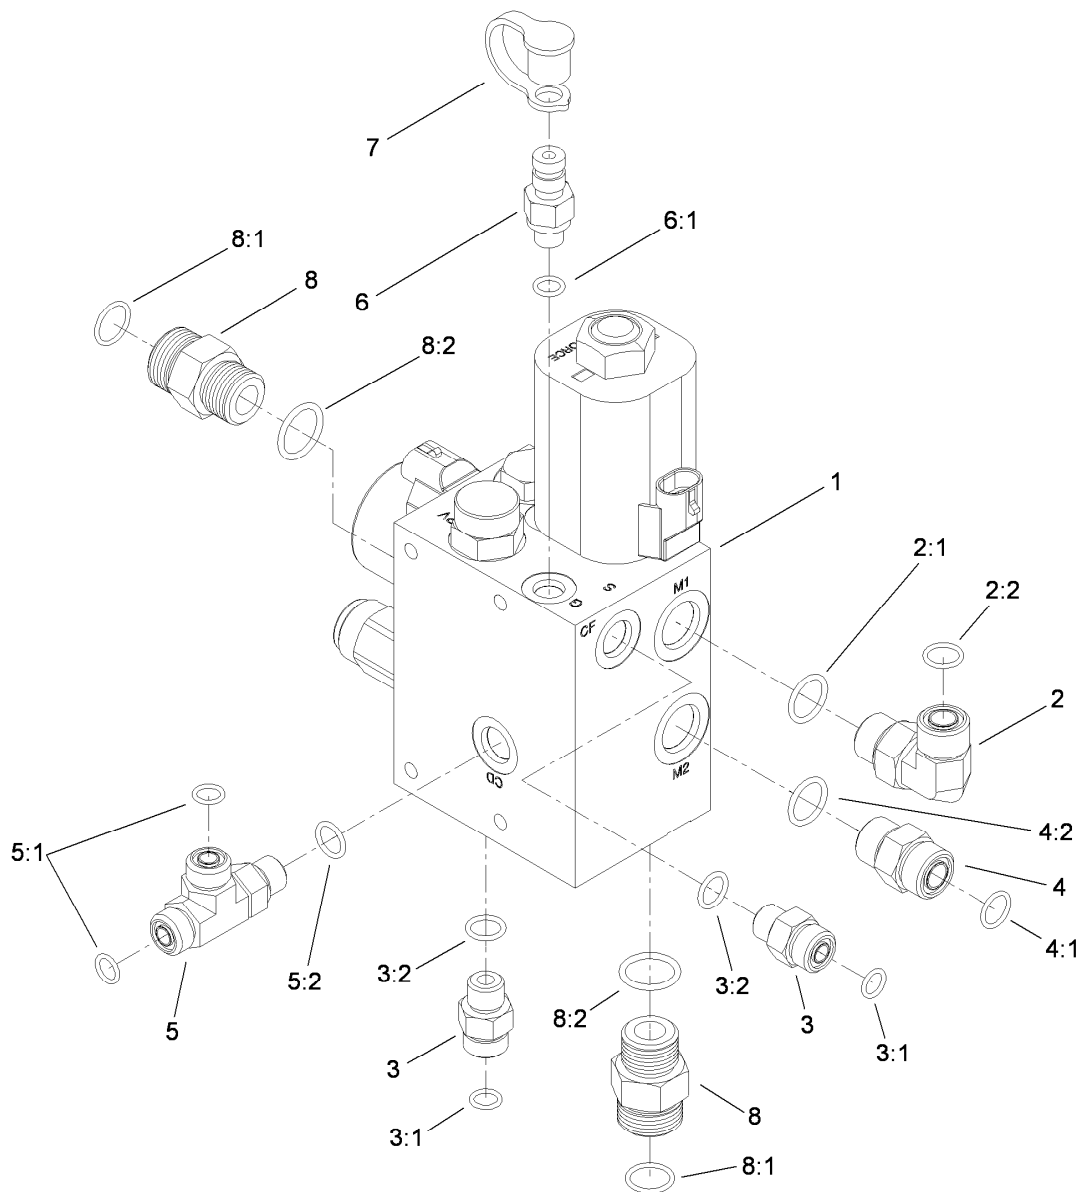

Steer/Fan Manifold Assembly

Ref.	Part Number	Qty.	Description
1	110-6065	1	Manifold-Steer / Fan
2	340-98	1	Fitting-Elbow, 90 DEG
2:1	237-79	1	O-Ring
2:2	237-30	1	O-Ring
3	340-2	2	Fitting-Straight
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	340-4	1	Fitting-Straight
4:1	237-30	1	O-Ring
4:2	237-79	1	O-Ring


Ref.	Part Number	Qty.	Description
5	340-86	1	Fitting-Tee
5:1	237-22	2	O-Ring
5:2	237-42	1	O-Ring
6	354-77	1	Fitting-Quick
6:1	237-78	1	O-Ring
7	354-79	1	Cap-Dust
8	340-7	2	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-80	1	O-Ring

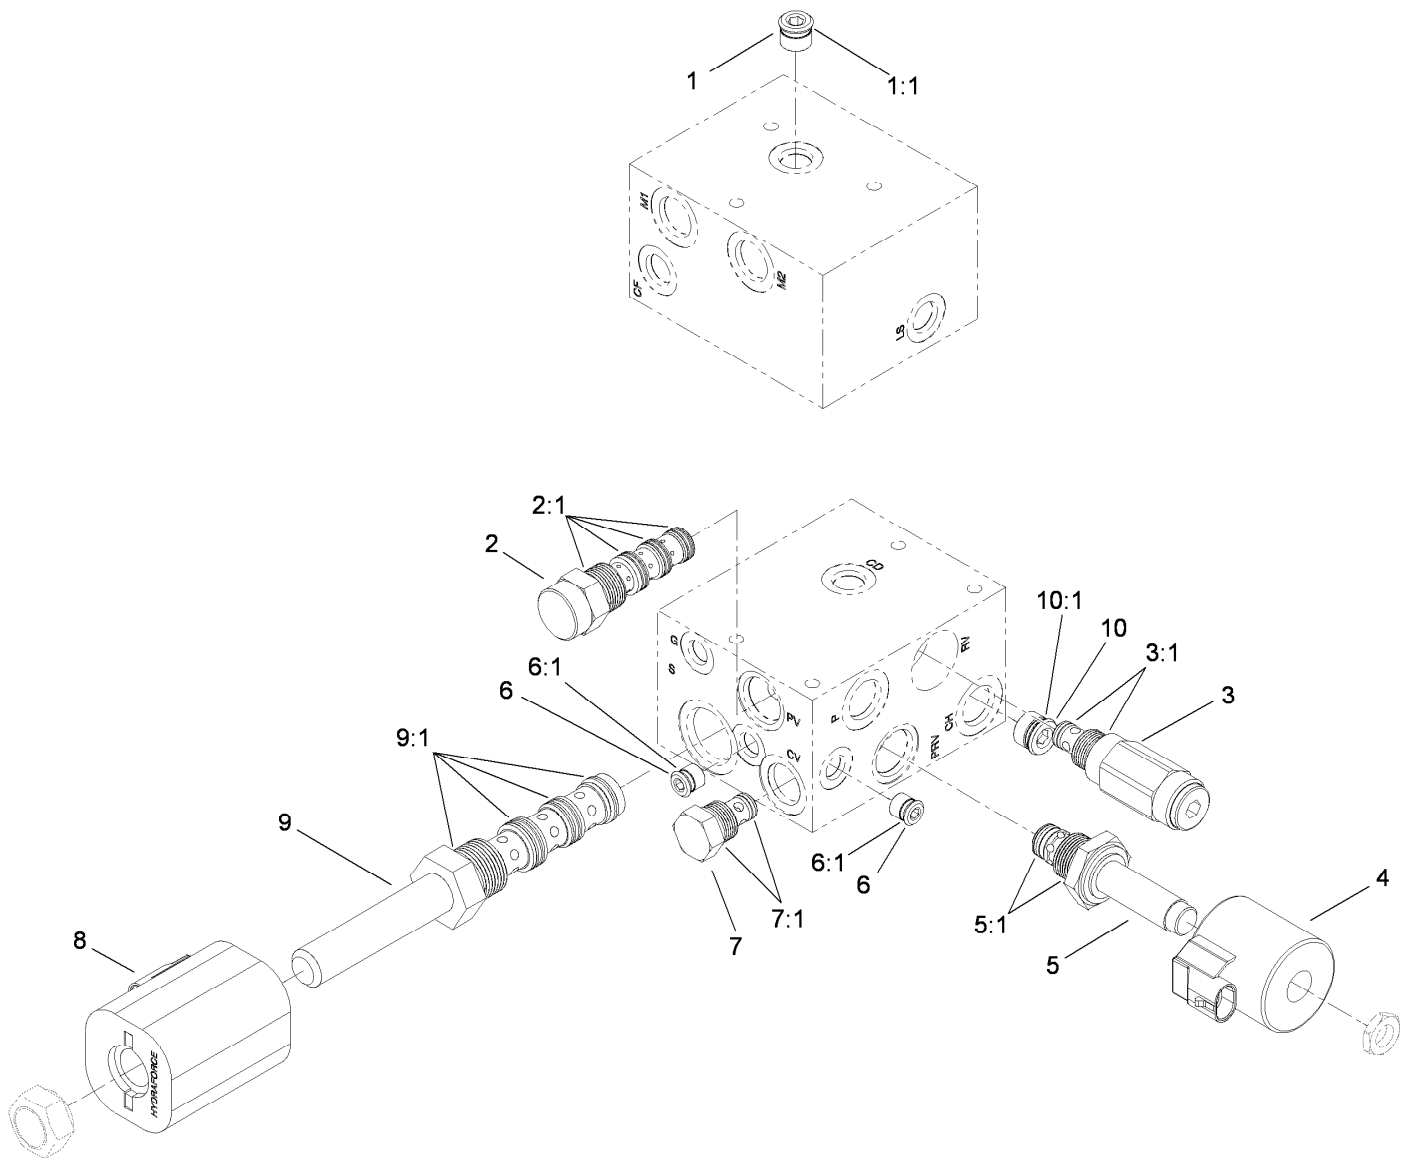 

Hydraulic Manifold Assembly No. 110-6065

Ref.	Part Number	Qty.	Description
1	106-1026	1	Plug-HYD
1:1	237-42	1	O-Ring
2	115-5409	1	Compensator ASM
2:1	110-8908	1	Spool Valve Seal Kit
3	114-5514	1	Valve-Relief, 2000 PSI
3:1	105-9156	1	Seal Kit
4	110-2630	1	Coil-12Vdc
5	115-3022	1	Relief-Proportional
5:1	110-6316	1	Seal Kit


Ref.	Part Number	Qty.	Description
6	353-990	2	Plug ASM
6:1	237-78	1	O-Ring
7	105-9321	1	Check Valve ASM
7:1	105-9156	1	Seal Kit
8	114-5084	1	Coil-Solenoid
9	115-5410	1	Valve-Solenoid
9:1	110-6111	1	Seal Kit
10	106-1027	1	Plug-HYD
10:1	237-79	1	O-Ring

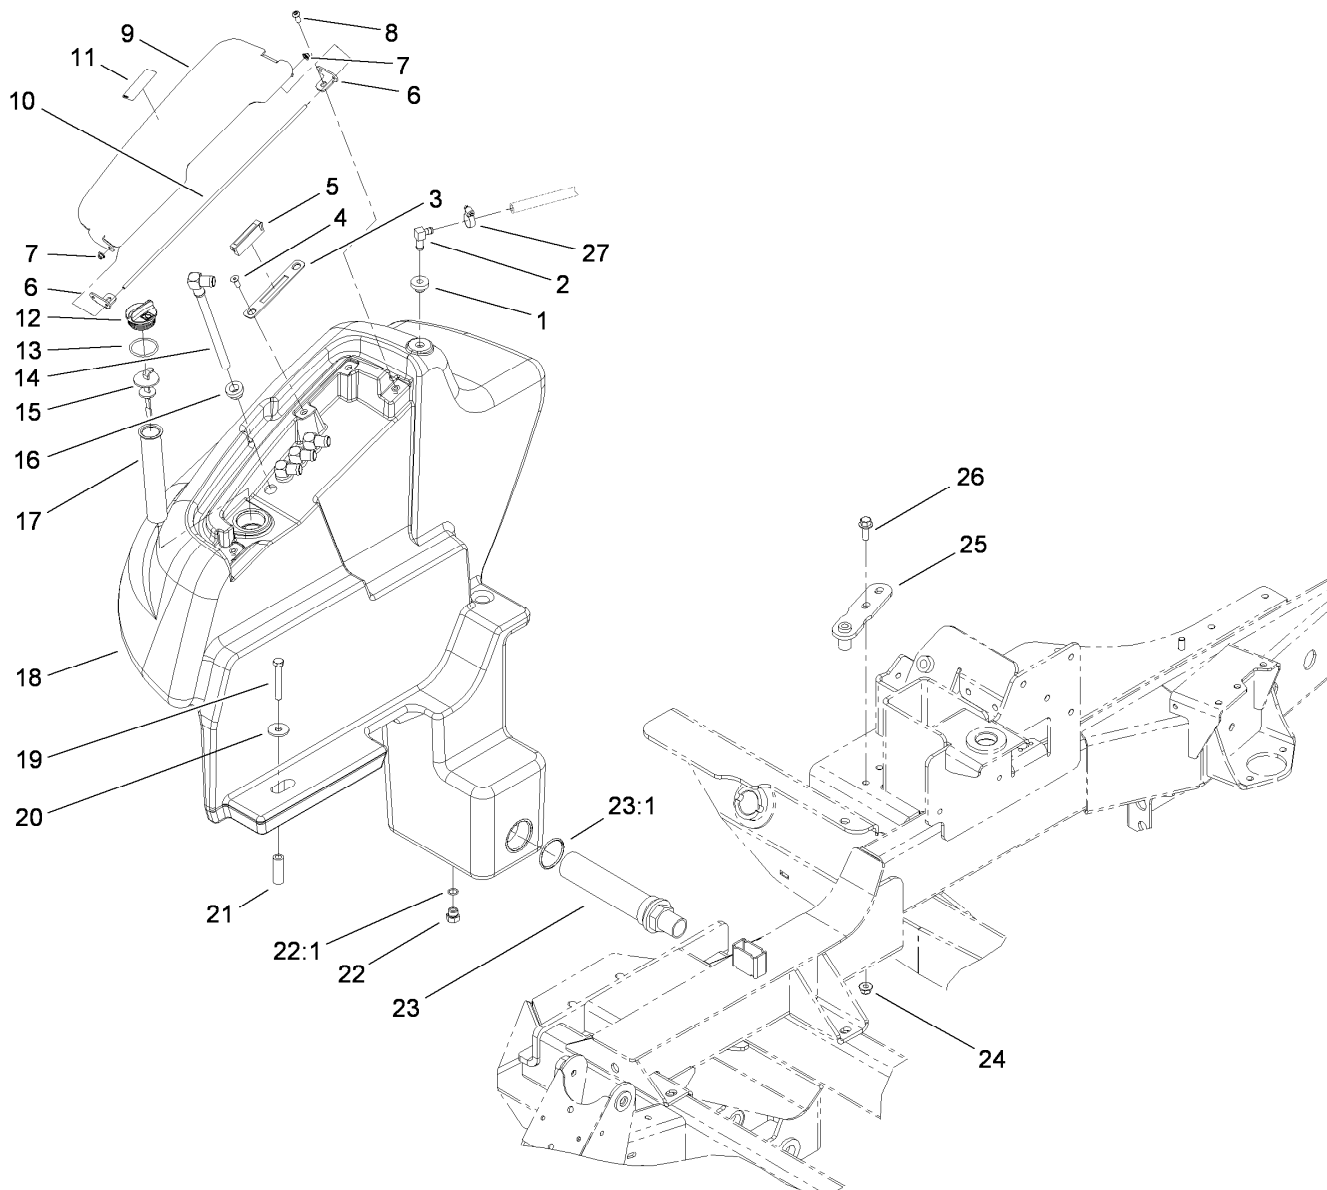 

Hydraulic Tank Assembly

Ref.	Part Number	Qty.	Description
1	46-6560	1	Bushing
2	46-6550	1	Fitting-Elbow, 90 DEG
3	114-0941	1	Plate-Latch
4	3274-47	2	Screw-HSFH
5	58-4250	1	Catch-Magnetic
6	114-0940	2	Bracket-Hinge
7	108-3629	2	Nut-Push
8	3274-31	2	Screw-HSBH
9	114-0939-03	1	Cover-Tank, HYD
10	114-0904	1	Rod
11	93-6686	1	Decal-Oil, HYD
12	93-7498	1	Plug-Plastic
13	94-8166	1	O-Ring
14	114-0002	4	Pipe-Stand
15	105-2812	1	Dipstick

Ref.	Part Number	Qty.	Description
16	104-0790	4	Bushing
17	92-1705	1	Filter-Screen
18	114-0902	1	HYD Tank ASM
19	323-12	1	Screw-HH
20	63-8410	1	Washer
21	95-6448	1	Spacer
22	353-508	1	Plug-HH
22:1	237-42	1	O-Ring
23	105-0131	1	Strainer-Tank, Oil
23:1	340-136	1	O-Ring
24	104-8301	2	Nut-HF, NI
25	114-0094	1	Hold Down-Tank
26	3234-42	2	Screw-HHF
27	2412-108	1	Clamp-Worm





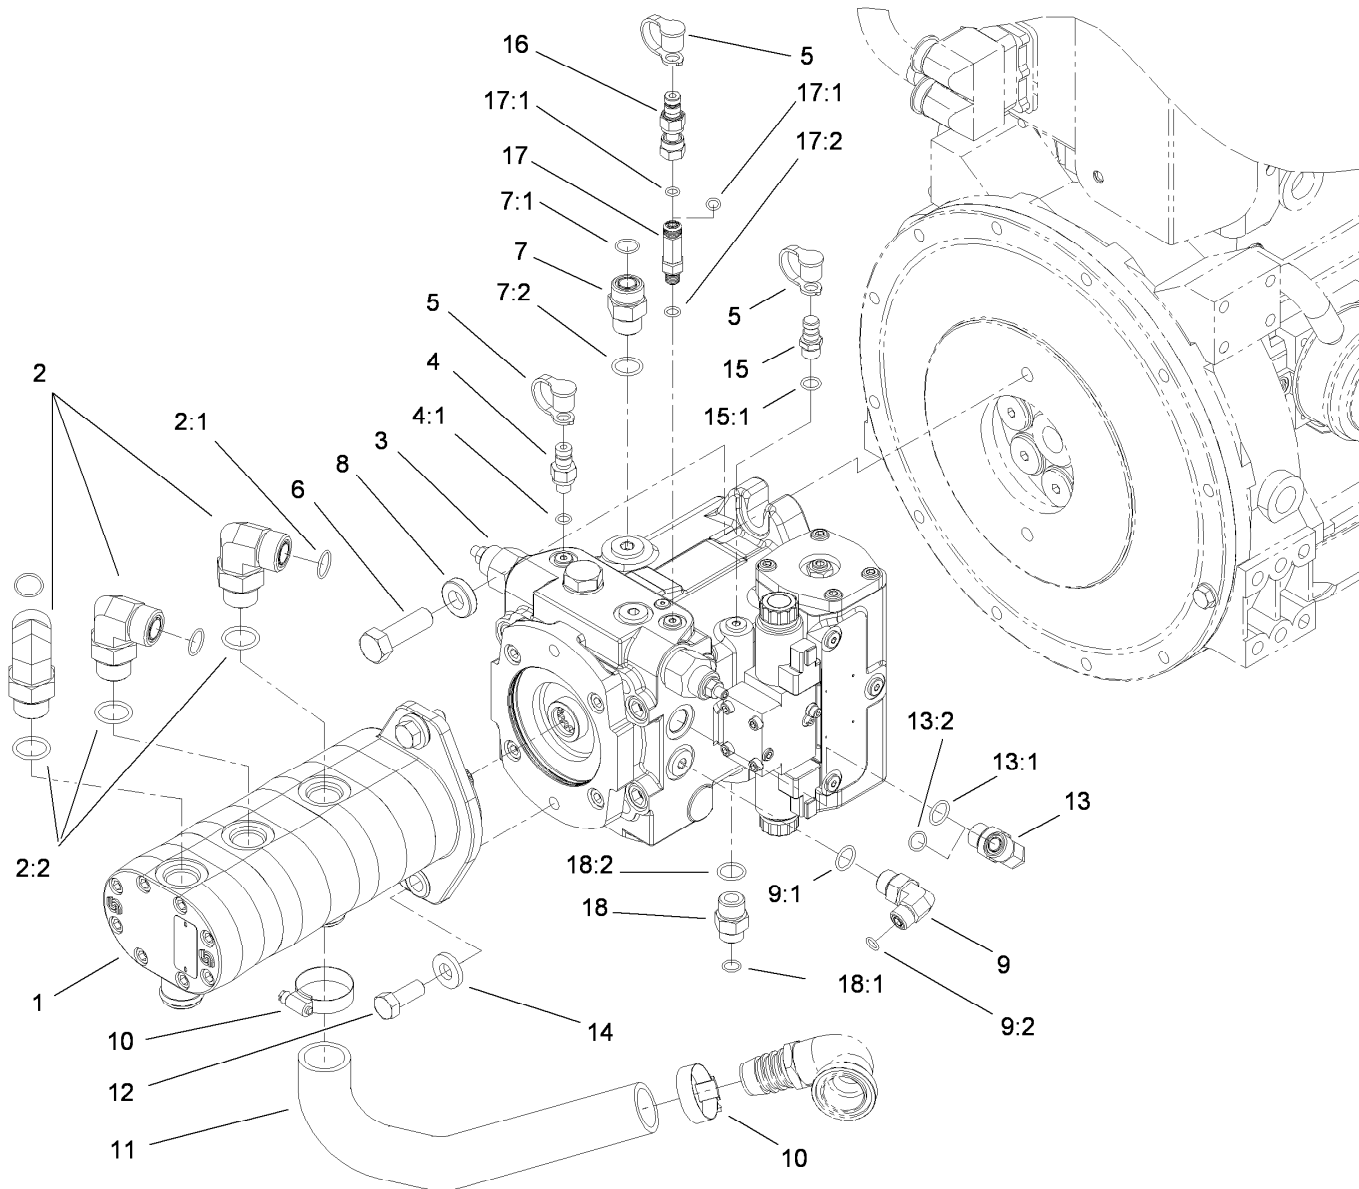 


Pump Assembly

Ref.	Part Number	Qty.	Description
1	114-4840	1	Triple Gear Pump ASM
2	340-142	3	Fitting-Elbow-90
2:1	237-58	1	O-Ring
2:2	237-81	1	O-Ring
3	110-5989	1	Pump-Piston
4	354-77	1	Fitting-Quick
4:1	237-78	1	O-Ring
5	354-79	3	Cap-Dust
6	327-6	2	Screw-HH
7	340-7	1	Fitting-Straight
7:1	237-65	1	O-Ring
7:2	237-80	1	O-Ring
8	114-0032	2	Washer-Plain
9	340-18	1	Fitting-HYD, 90 DEG
9:1	237-79	1	O-Ring
9:2	237-22	1	O-Ring

Ref.	Part Number	Qty.	Description
10	2412-111	2	Clamp
11	114-5506	1	Hose-Formed
12	325-5	2	Screw-HH
13	340-98	1	Fitting-Elbow, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-30	1	O-Ring
14	107-3395	2	Washer-Hardened
15	59-7410	1	Fitting-Diagnostic
15:1	237-42	1	O-Ring
16	115-8886	1	Nipple-Test
17	340-140	1	Fitting-Tee
17:1	237-21	2	O-Ring
17:2	237-78	1	O-Ring
18	340-6	1	Fitting-Straight
18:1	237-30	1	O-Ring
18:2	237-80	1	O-Ring

     
Piston Pump Assembly No. 110-5989

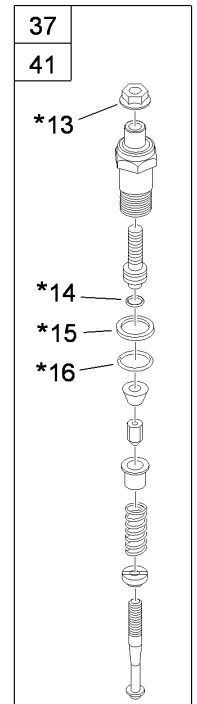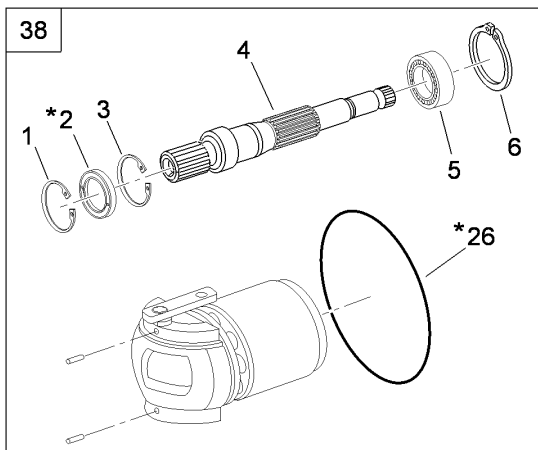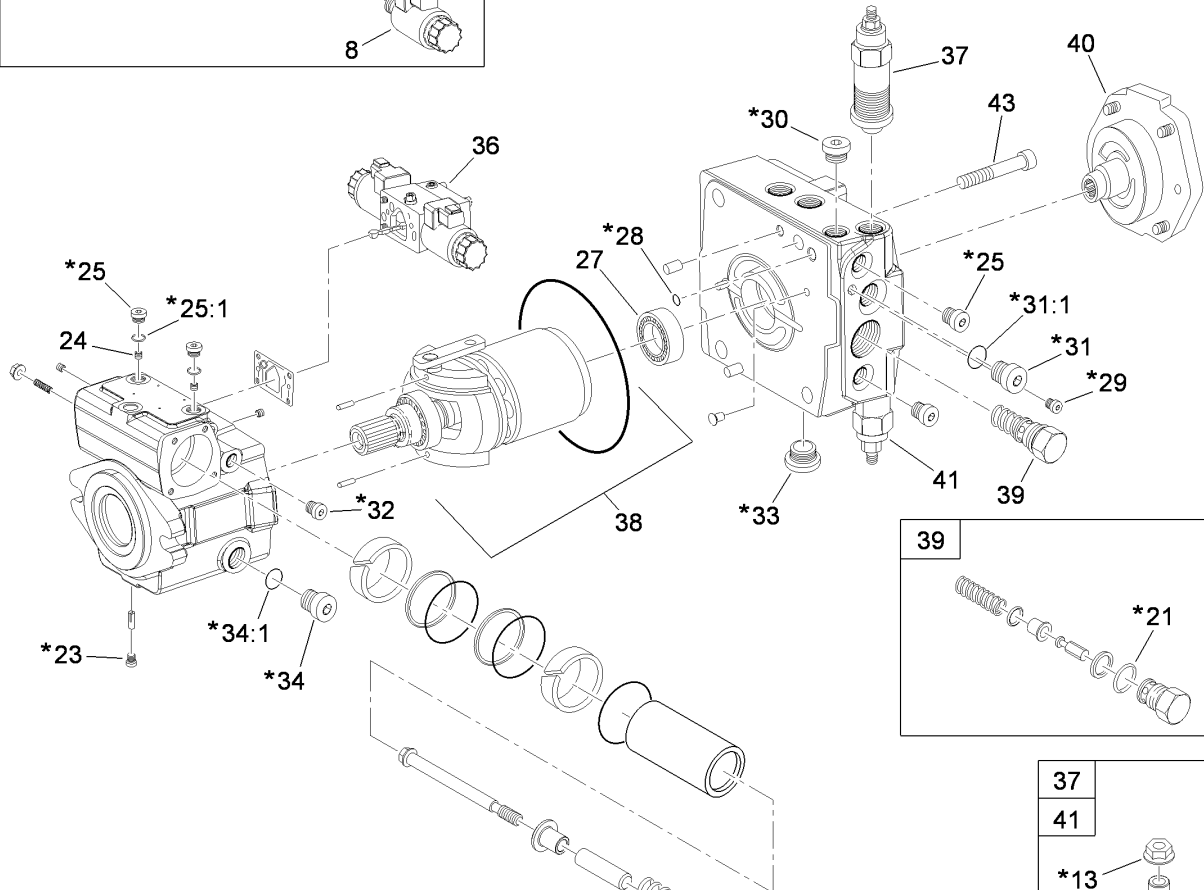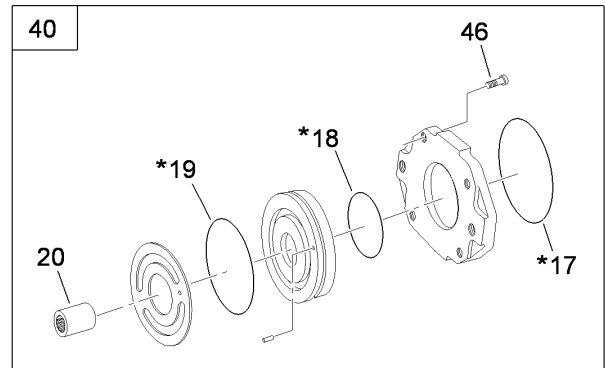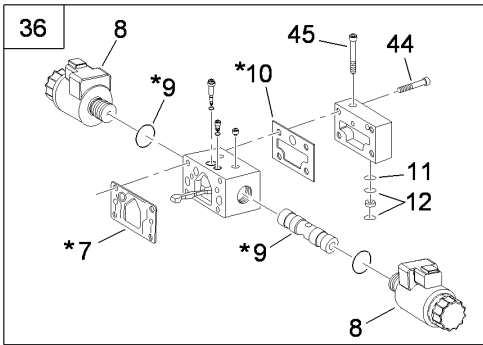

* = Parts are included with master seal kit item 42
Parts not called out are not serviced separately


Piston Pump Assembly No. 110-5989 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-1115	1	Ring-Snap	26	117-1144	1	O-Ring
2	117-1118	1	Seal-Shaft	27	117-1143	1	Bearing-Roller
3	117-1116	1	Ring-Snap	28	117-1120	3	O-Ring
4	117-2751	1	Shaft-Drive	29	117-1139	1	Plug
5	117-1117	1	Bearing-Roller	30	117-2752	1	Plug
6	117-1119	1	Ring-Retaining	31	354-74	2	Plug-HH
7	117-1125	1	Gasket	31:1	237-81	1	O-Ring
8	117-1126	2	Solenoid-Proportional	32	117-2753	1	Plug
9	117-1130	2	O-Ring	33	117-1142	1	Screw-Locking
10	117-1127	1	Gasket	34	353-551	1	Plug-HH
11	117-1128	1	Disc-Protection, Control Line	34:1	237-80	1	O-Ring
12	117-1129	2	O-Ring	35	117-1121	1	O-Ring
13	117-1131	2	Nut-Lock	36	117-1123	1	Ep Control ASM
14	117-1132	2	O-Ring	37	117-1145	1	Preset-HP Relief Valve, 296 Bar
15	117-1133	2	Ring-Back-Up	38	117-1146	1	Rotary Group
16	117-1134	2	O-Ring	39	117-1147	1	Charge Relief
17	117-1135	1	O-Ring	40	117-1148	1	Pump Support Plate ASM
18	117-1136	1	O-Ring	41	117-1149	1	Preset-HP Relief Valve, 365 Bar
19	117-1137	1	O-Ring	42	117-2750	1	Seal Kit
20	117-1138	1	Coupling-Drive, Through	43	117-2755	4	Screw
21	117-1140	1	O-Ring	44	117-2756	4	Screw-HSH
23	117-1122	1	Plug	45	117-2757	1	Screw-HSH
24	117-1124	2	Orifice	46	117-2758	4	Screw-HSH
25	353-990	5	Plug ASM	47	117-2759	4	Screw-HSH
25:1	237-78	1	O-Ring				

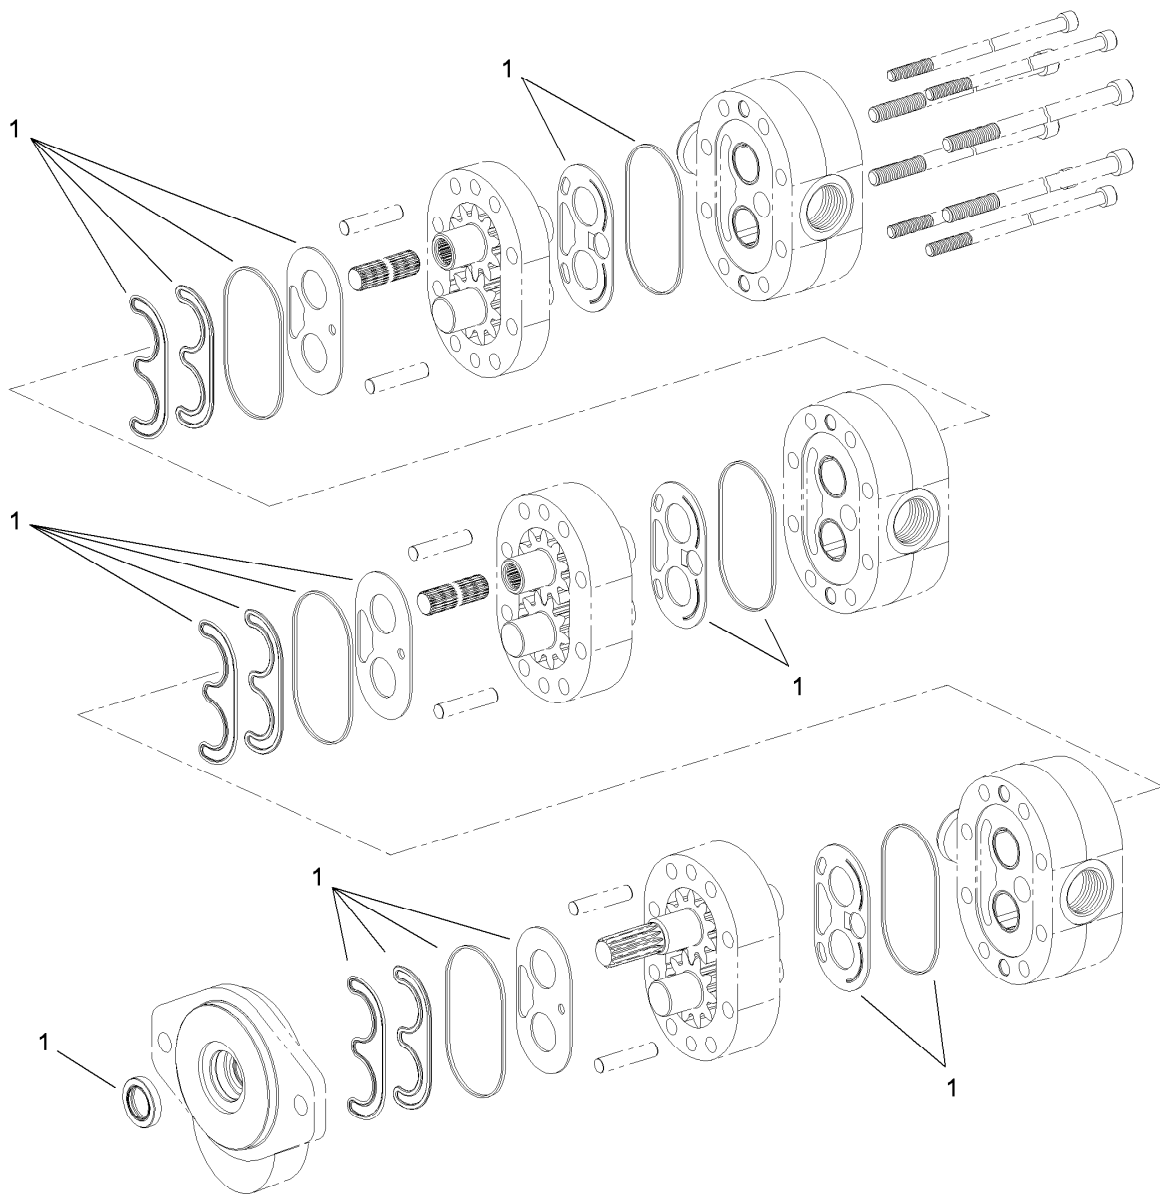 

Triple Pump Assembly No. 114-4840

Ref.	Part Number	Qty.	Description
1	117-1109	1	Seal Kit

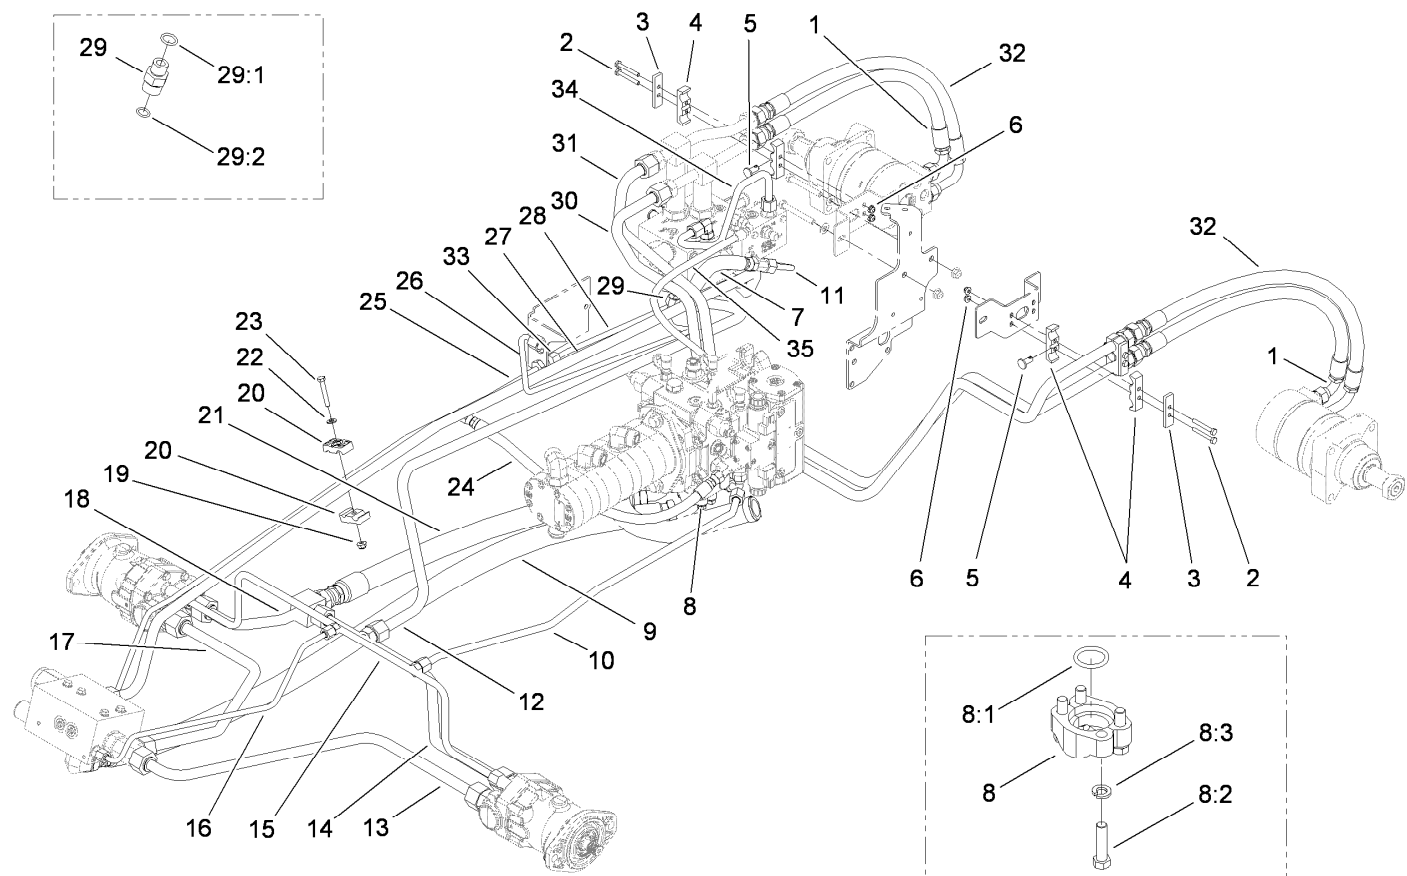 


Traction Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	114-5582	2	HYD Hose ASM
2	321-11	6	Screw-HH
3	114-0989	3	Plate-Cover
4	99-3641	6	Clamp-Tube
5	98-5055	3	Pin-Weld
6	104-7201	8	Nut-HF
7	94-4714	1	Hose-Hydraulic
8	114-0089	2	Flange Kit (Code 62)
8:1	115-5419	1	O-Ring
8:2	323-43	4	Screw-HH
8:3	3253-21	4	Washer-Lock
9	110-6058	1	HYD Hose ASM
10	114-4843	1	Tube-Hydraulic
11	117-5460	1	Tube-Hydraulic
12	114-4819	1	Tube-Hydraulic
13	114-4844	1	Tube-Hydraulic
14	114-4847	1	Tube-Hydraulic
14:1	237-58	1	O-Ring ●
15	114-4842	1	Tube-Hydraulic
15:1	237-22	1	O-Ring ●
15:2	237-30	1	O-Ring ●
16	114-4834	1	Tube-Hydraulic
17	114-4845	1	Tube-Hydraulic
18	114-4846	1	Tube-Hydraulic

Ref.	Part Number	Qty.	Description
18:1	340-65	1	O-Ring ●
18:2	237-58	1	O-Ring ●
19	104-8300	1	Nut-HF, NI
20	56-7978	2	Clamp-Tube
21	110-6057	1	HYD Hose ASM
22	3256-23	1	Washer-Plain
23	322-10	1	Screw-HH
24	86-3130	1	HYD Hose ASM
25	114-4835	1	HYD Tube ASM
25:1	237-22	2	O-Ring ●
26	114-4918	1	Tube-Hydraulic
27	114-4836	1	HYD Tube ASM
28	114-4905	1	Tube-Hydraulic
29	92-9258	1	Adapter-Check
29:1	237-22	1	O-Ring
29:2	237-42	1	O-Ring
30	114-0025	1	Tube-Hydraulic
30:1	237-58	1	O-Ring ●
31	114-0026	1	Tube-Hydraulic
31:1	237-58	1	O-Ring ●
32	114-5583	2	HYD Hose ASM
33	340-70	1	Nut-Lock
34	115-8875	1	Tube-Hydraulic
35	115-8878	1	Hose ASM

 ● Not illustrated

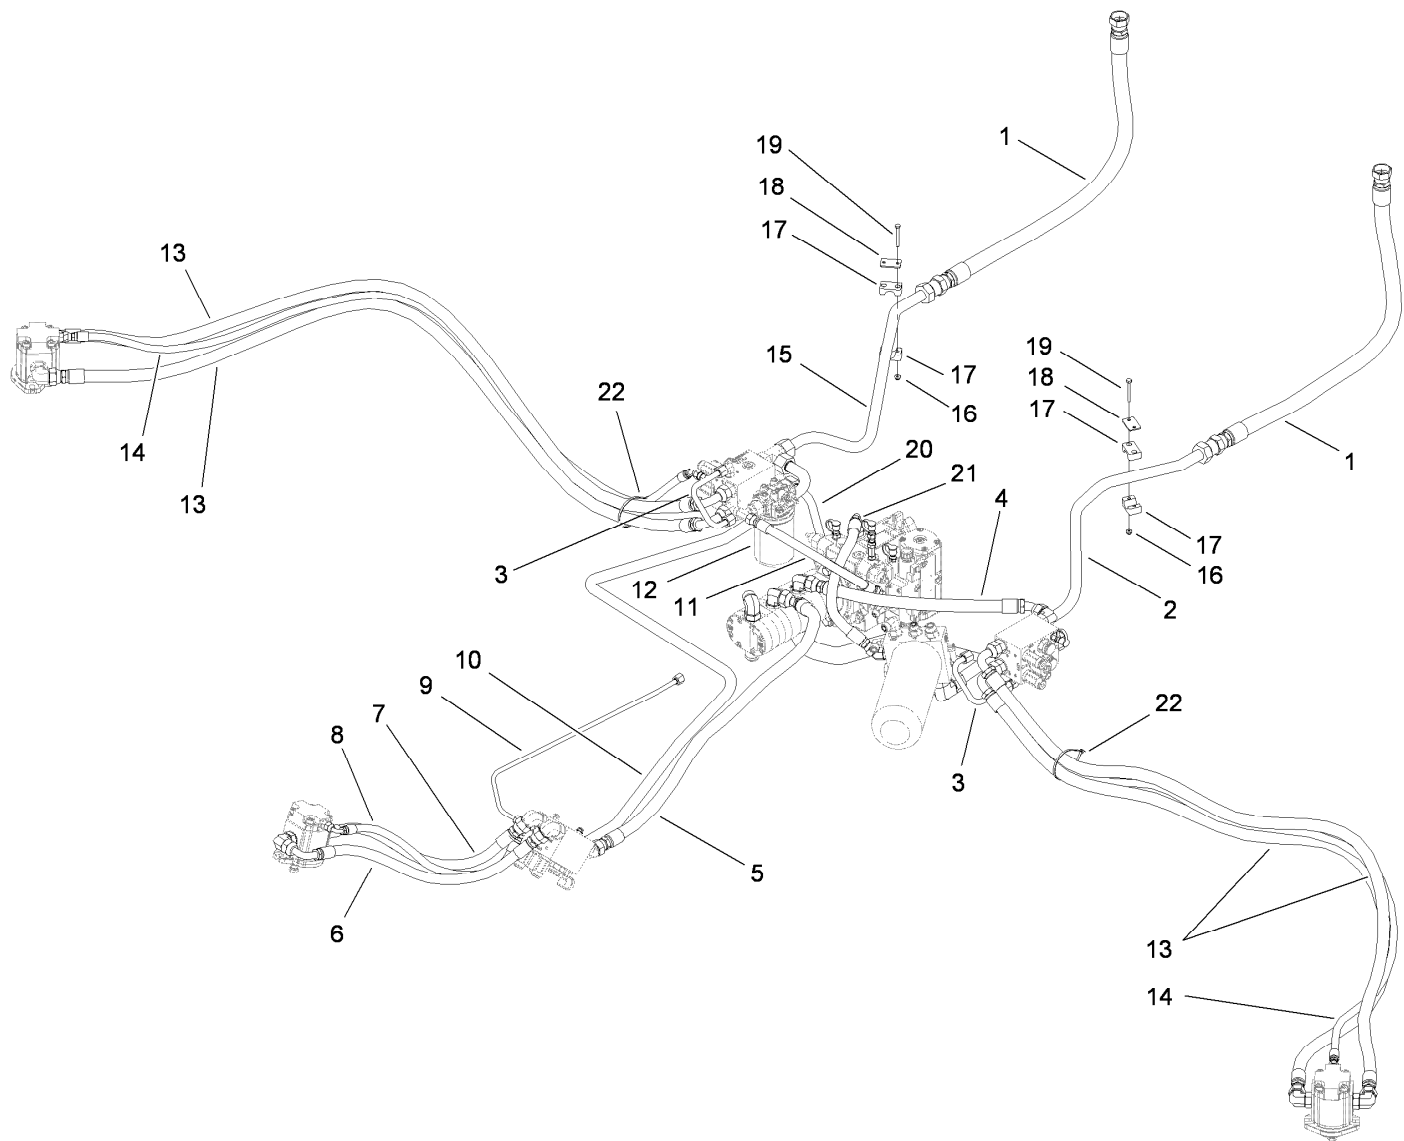


PTO Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	114-4904	2	Hose-Hydraulic, HP
2	114-0016	1	Tube-Hydraulic
2:1	340-65	1	O-Ring ●
3	114-0173	2	Tube-Hydraulic
3:1	237-22	1	O-Ring ●
4	115-8869	1	Hose-Hydraulic
5	114-4829	1	HYD Hose ASM
6	115-5518	1	Hose-Hydraulic, HP
7	115-5517	1	Hose-Hydraulic, HP
8	114-5500	1	Hose-Hydraulic
9	114-4820	1	Tube-Hydraulic
10	114-4839	1	Tube-Hydraulic
11	114-5501	1	Hose-Hydraulic

Ref.	Part Number	Qty.	Description
12	75-1300	1	Oil Filter ASM
12:1	75-1310	1	Filter-HYD ●
13	114-0985	4	Hose-Hydraulic
14	114-0945	2	Hose-Hydraulic
15	114-0017	1	HYD Tube ASM
15:1	340-65	1	O-Ring ●
16	104-7201	4	Nut-HF
17	114-4901	2	Clamp
18	114-4902	2	Plate-Cover
19	321-18	4	Screw-HH
20	110-6067	1	Tube-Hydraulic
21	99-4217	1	Hose-Hydraulic
22	3290-379	2	Tie-Cable

 
● Not illustrated

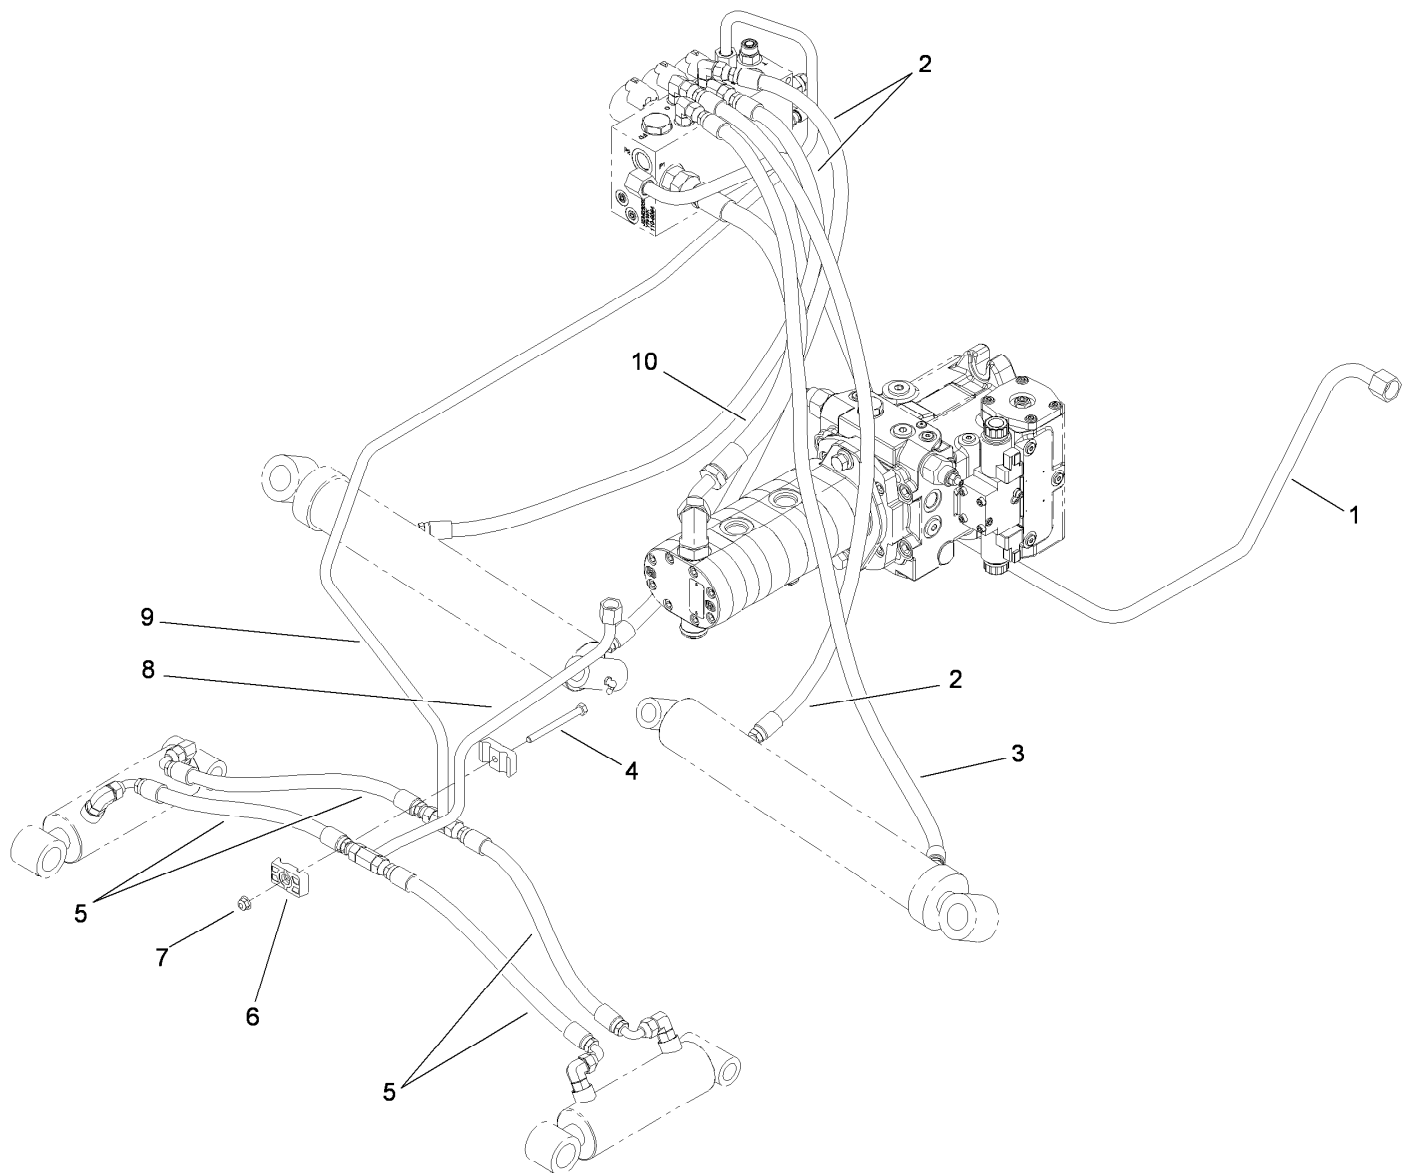

Lift Arms Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	115-5430	1	HYD Tube ASM
2	114-4817	3	Hose-Hydraulic, HP
3	114-4818	1	Hose-Hydraulic, HP
4	322-22	1	Screw-HH
5	92-5694	4	Hose-Hydraulic
6	56-7976	2	Clamp-Tube
7	104-8300	1	Nut-HF, NI
8	114-4824	1	Tube-Hydraulic
8:1	237-22	2	O-Ring ●
9	117-9408	1	Tube-Hydraulic
9:1	237-22	2	O-Ring ●
10	117-9411	1	Hose-Hydraulic, HP

 ● Not illustrated

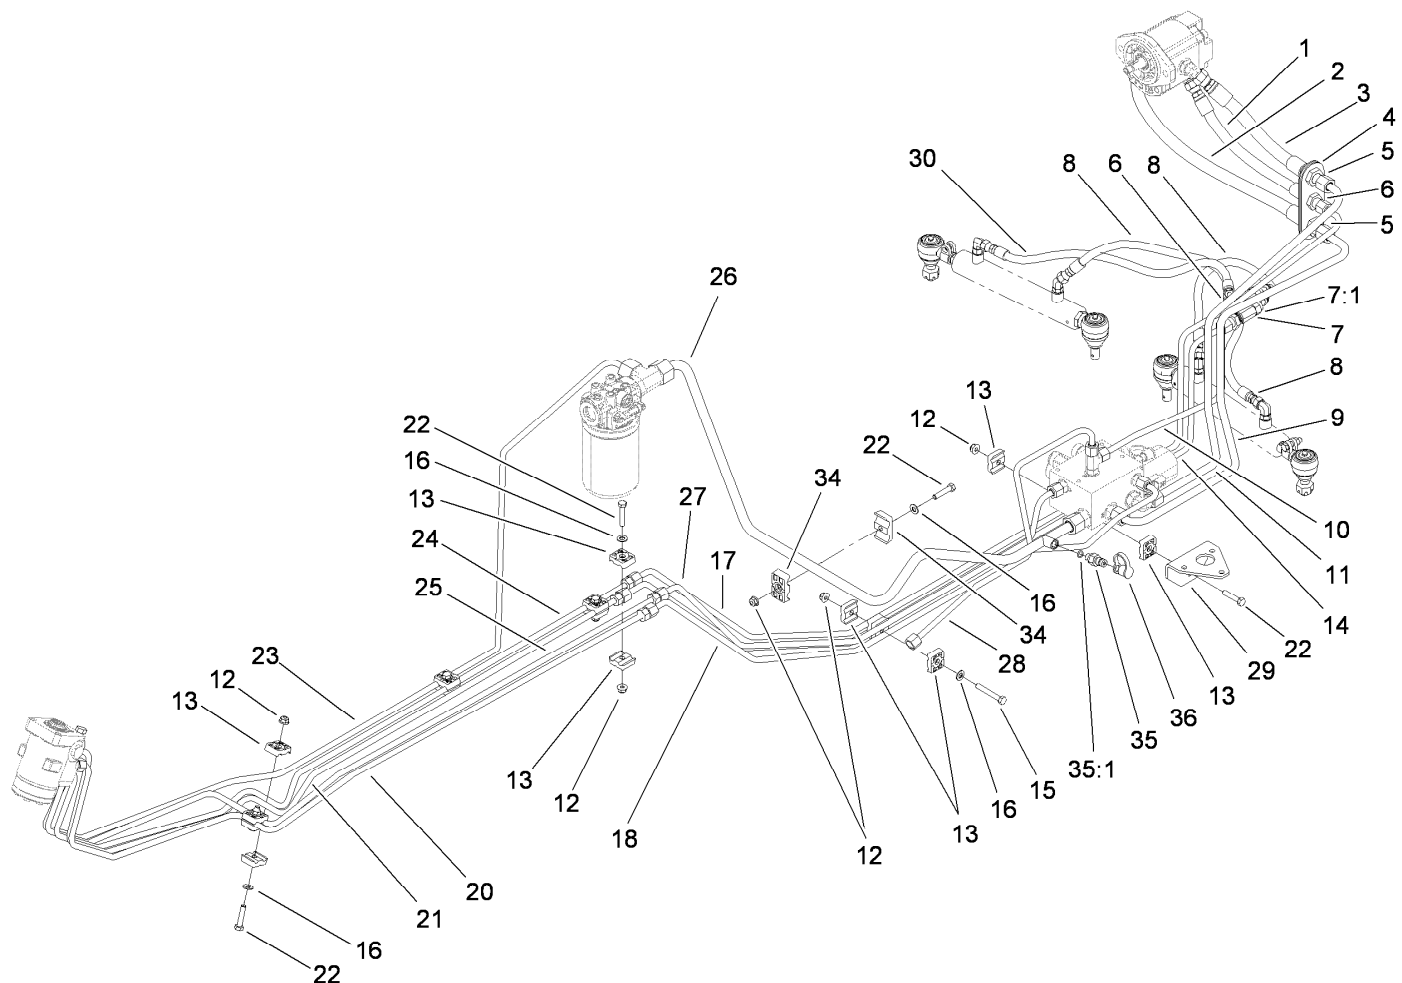


Steering Hydraulic Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	114-4924	1	HYD Hose ASM
1:2		1	Fitting-Straight ●■
1:2:1	237-22	1	O-Ring ●
2	114-4925	1	HYD Hose ASM
2:2		1	Fitting-Straight ●■
2:2:1	237-30	1	O-Ring ●
3	114-4923	1	HYD Hose ASM
3:2		1	Fitting-Straight ●■
3:2:1	237-30	1	O-Ring ●
4	114-0063	2	Shim-Support
5	340-127	2	Nut-Bulkhead
6	340-70	3	Nut-Lock
7	340-68	2	Fitting-Tee, Bulkhead
7:1	237-22	3	O-Ring
8	114-4922	3	HYD Hose ASM
9	114-0910	1	HYD Tube ASM
10	114-0911	1	HYD Tube ASM
11	114-0909	1	HYD Tube ASM
12	104-8300	8	Nut-HF, NI
13	56-7973	16	Clamp-Tube
14	114-4915	1	HYD Tube ASM
15	322-10	1	Screw-HH

Ref.	Part Number	Qty.	Description
16	3256-23	7	Washer-Plain
17	114-4909	1	HYD Tube ASM
18	115-5435	1	HYD Tube ASM
20	114-0145	1	HYD Tube ASM
20:1	237-22	1	O-Ring ●
21	114-0071	1	HYD Tube ASM
21:1	237-22	1	O-Ring ●
22	322-8	7	Screw-HH
23	114-0144	1	HYD Tube ASM
23:1	237-22	1	O-Ring ●
24	114-0070	1	HYD Tube ASM
24:1	237-22	1	O-Ring ●
25	114-0147	1	HYD Tube ASM
26	115-5431	1	HYD Tube ASM
27	114-4916	1	HYD Tube ASM
28	114-0138	1	HYD Tube ASM
29	114-0066-03	1	Plate-Mount, Tube
30	114-4934	1	HYD Hose ASM
34	56-7971	2	Clamp-Tube
35	354-77	1	Fitting-Quick
35:1	237-78	1	O-Ring
36	354-79	1	Cap-Dust

● Not illustrated

 
■ Not serviced separately

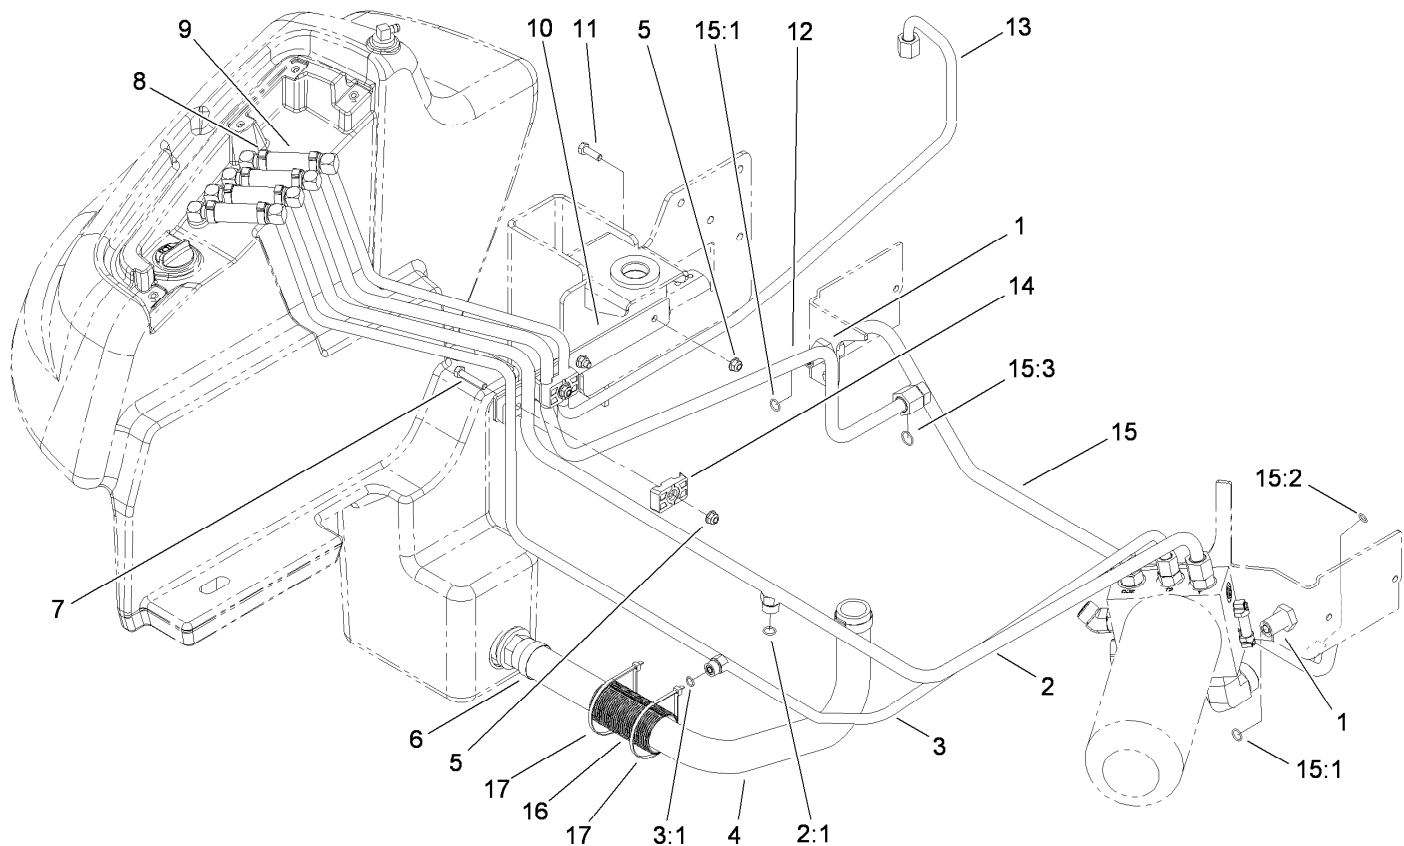

Hydraulic Tank Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	340-127	2	Nut-Bulkhead
2	114-4821	1	Tube-Hydraulic
2:1	237-30	1	O-Ring
3	114-4822	1	Tube-Hydraulic
3:1	237-22	1	O-Ring
4	114-5507	1	Hose-Formed
5	104-8300	4	Nut-HF, NI
6	2412-111	2	Clamp
7	322-8	2	Screw-HH
8	2412-36	8	Clamp-Hose
9	114-4920	4	Hose


Ref.	Part Number	Qty.	Description
10	114-4919-03	1	Plate-Mount, Tube
11	322-5	2	Screw-HH
12	114-0172	1	Tube-Hydraulic
13	117-9409	1	Tube-Hydraulic
14	56-7977	4	Clamp-Tube
15	114-0176	1	HYD Tube ASM
15:1	237-30	2	O-Ring
15:2	237-22	1	O-Ring
15:3	237-65	1	O-Ring
16	115-5523	1	Guard-Hose
17	3290-379	2	Tie-Cable

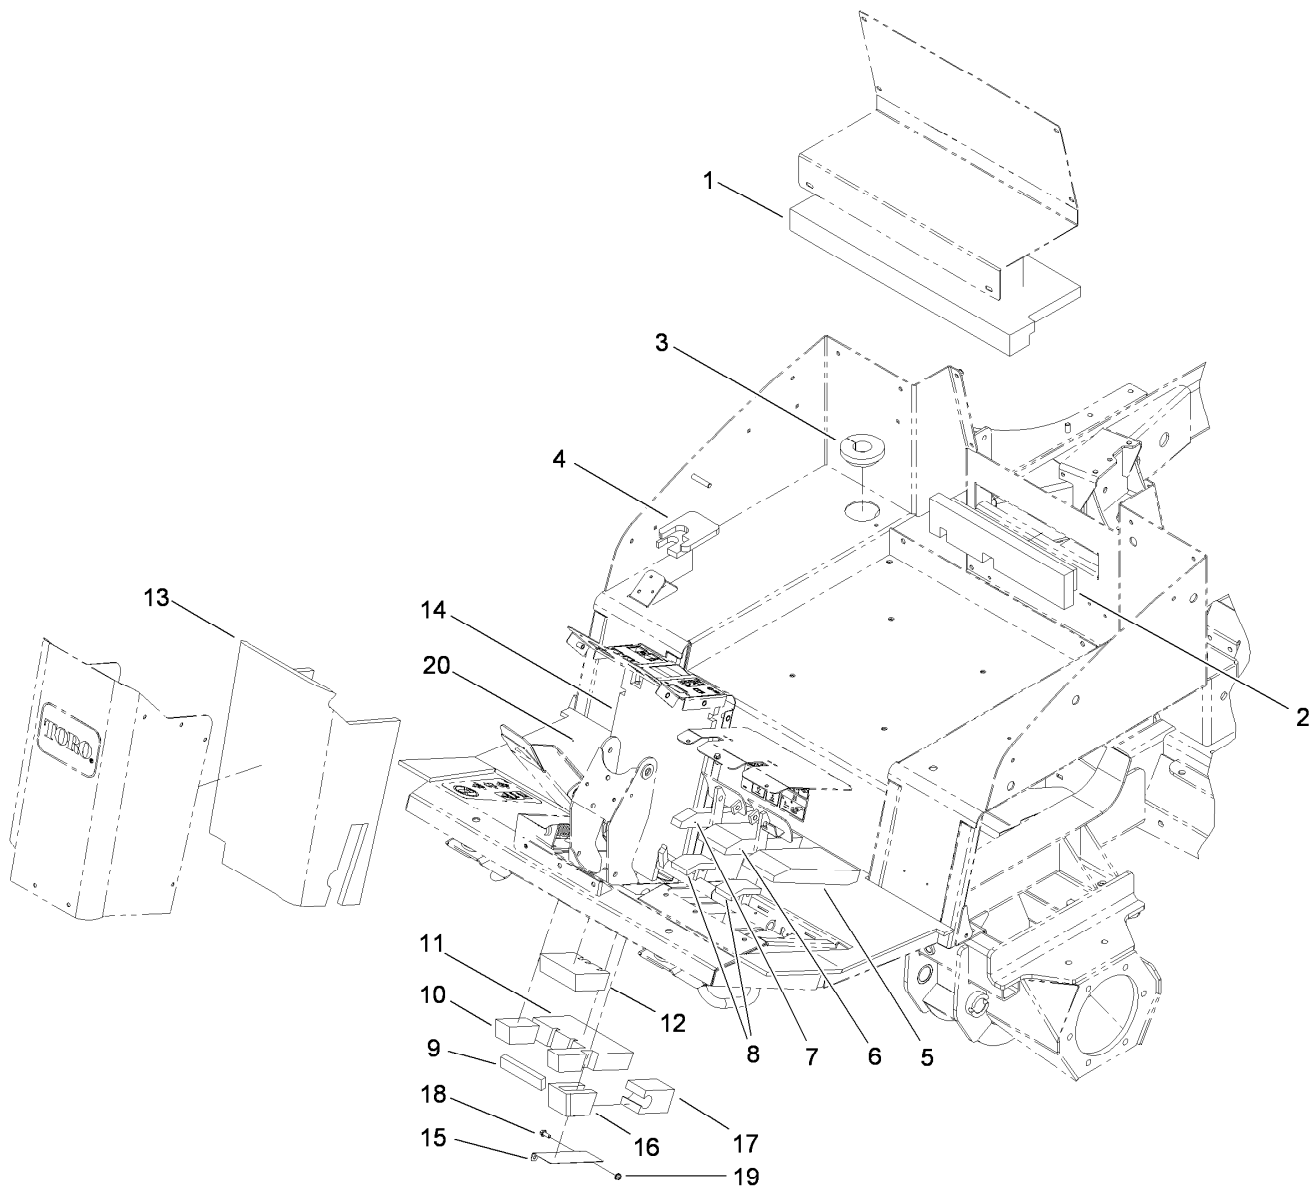 

Foam Assembly


Ref.	Part Number	Qty.	Description
1	115-8800	1	Foam-Battery, Cover
2	115-8801	1	Foam-Battery, Plug
3	115-8802	1	Foam-Plug, Round
4	115-8803	1	Foam-Plug, Rectangular
5	115-8804	1	Foam-Brake, LH
6	115-8805	1	Foam-Brake, Center
7	115-8806	1	Foam-Brake, RH
8	115-8807	2	Foam-Plug, Brake
9	115-8808	1	Foam-Strip, Front
10	115-8809	1	Foam-Plug, RH

Ref.	Part Number	Qty.	Description
11	115-8810	1	Foam-Steering, Rear
12	115-8811	1	Foam-Steering, Front
13	115-8812	1	Foam-Column, Front
14	115-8813	1	Foam-Column, Rear
15	115-8841-01	1	Bracket-Foam, Pawl
16	115-8814	1	Foam-Pawl, Brake
17	115-8815	1	Foam-Plug, Brake
18	3234-33	2	Screw-HHF
19	104-7201	2	Nut-HF
20	117-2767	1	Mat-Floor, Cab

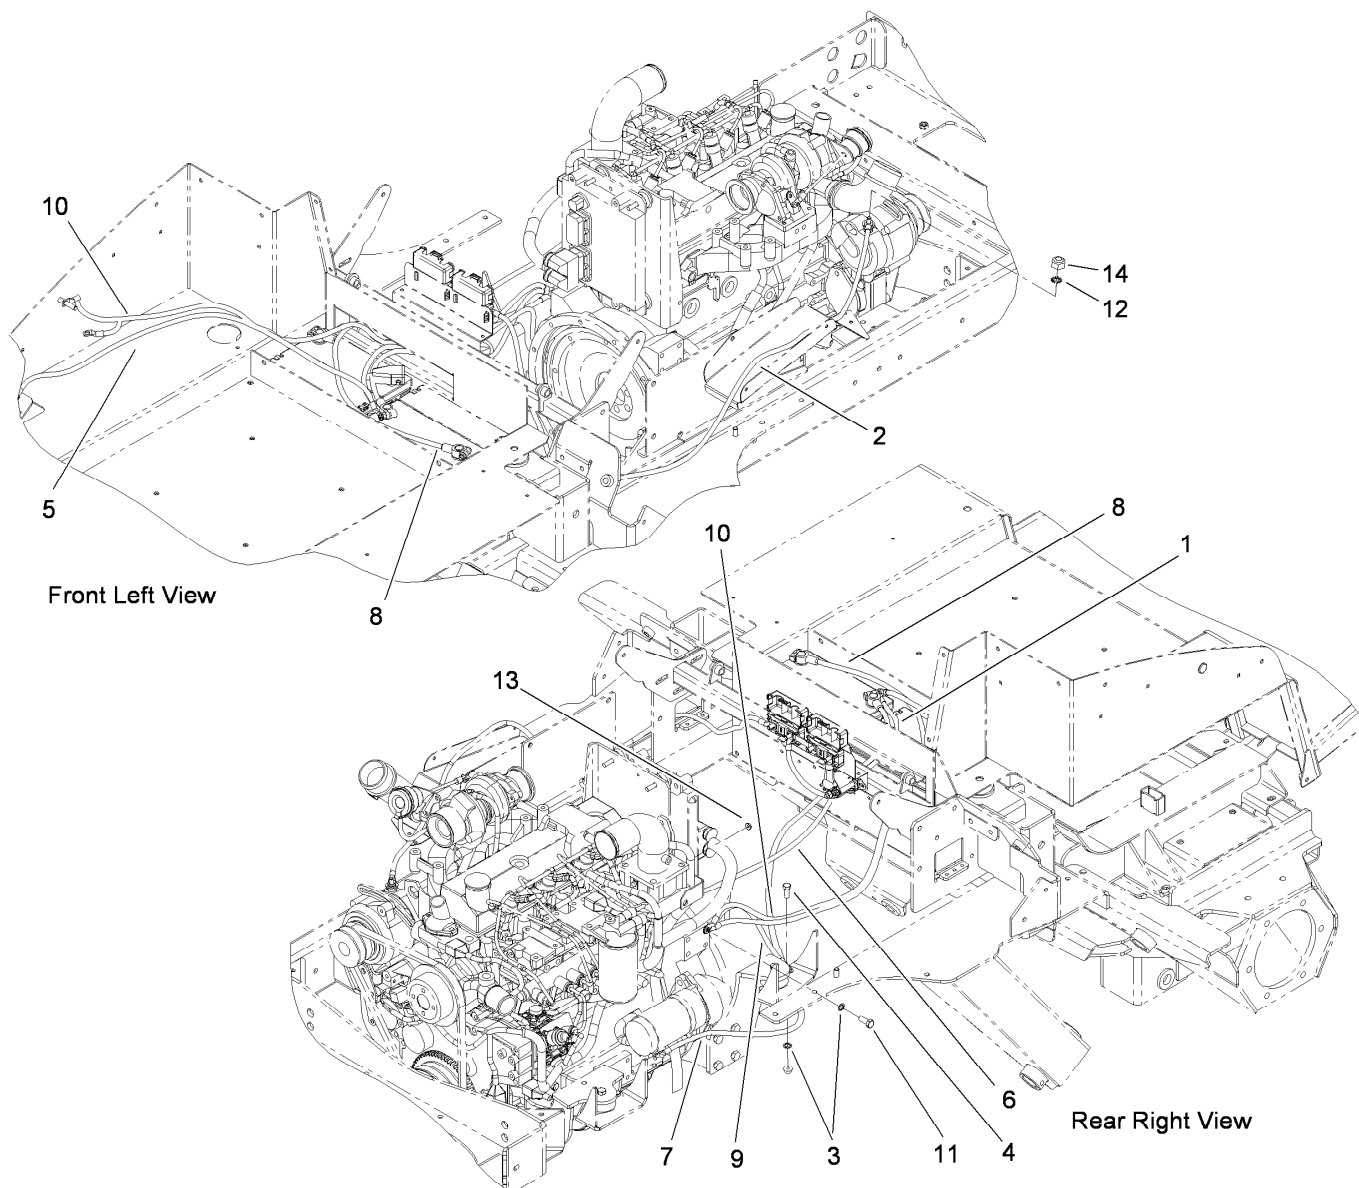 

Battery Cable Routing and Assembly

Ref.	Part Number	Qty.	Description
1	114-3304	1	Cable-Battery, Positive
2	114-3305	1	Cable-Battery, Positive
3	3254-6	2	Washer-Lock, Internal
4	323-6	1	Screw-HH
5	114-3308	1	Cable-Battery, Positive
6	114-3309	1	Cable-Battery, Positive
7	114-3310	1	Cable-Battery, Positive
8	114-3311	1	Cable-Battery, Negative
9	114-3312	1	Cable-Battery, Negative
10	114-3313	1	Cable-Battery, Negative
11	33115-025	1	Screw-HH
12	3255-8	1	Washer-Lock
13	98-5845	1	Nut-Hex
14	33014-00	1	Nut-Hex

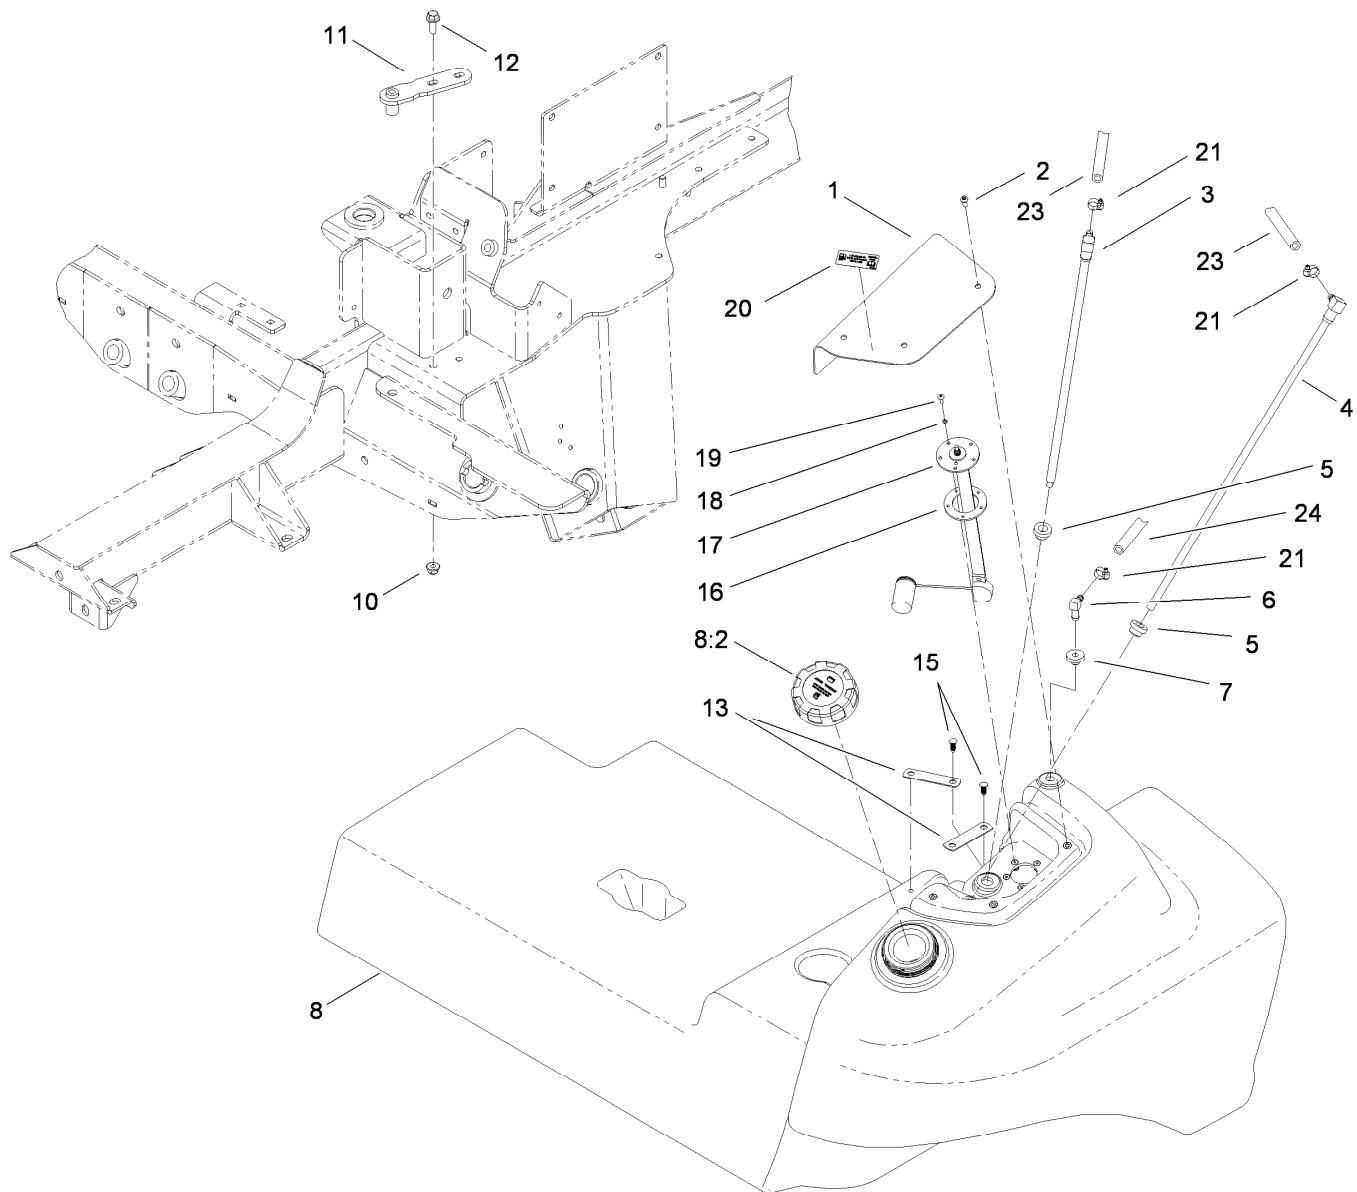 


Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	114-4939-03	1	Cover-Fitting, Fuel
2	3274-31	3	Screw-HSBH
3	117-5483	1	Pipe-Stand, Fuel
4	114-0943	1	Pipe-Stand, Return
5	104-0790	2	Bushing
6	46-6550	1	Fitting-Elbow, 90 DEG
7	46-6560	1	Bushing
8	117-5497	1	Fuel Tank Kit
8:2	114-5062	1	Cap-Biodiesel
9	110-6086	1	Harness-Wire, Fuel Tank ●
10	104-8301	2	Nut-HF, NI
11	114-0094	1	Hold Down-Tank

Ref.	Part Number	Qty.	Description
12	3234-42	2	Screw-HHF
13	94-6821	2	Clamp-Wire
15	117-2382	4	Plug-Plastic
16	62-7650	1	Gasket
17	114-0942	1	Sender-Fuel
18	3253-15	5	Washer-Lock
19	32122-24	5	Screw-PTH
20	114-9600	1	Decal-Low Sulfur
21	2412-108	3	Clamp-Worm
23	114-5916	2	Hose-Fuel
24	110-4110	2	Hose-LP

 ● Not illustrated

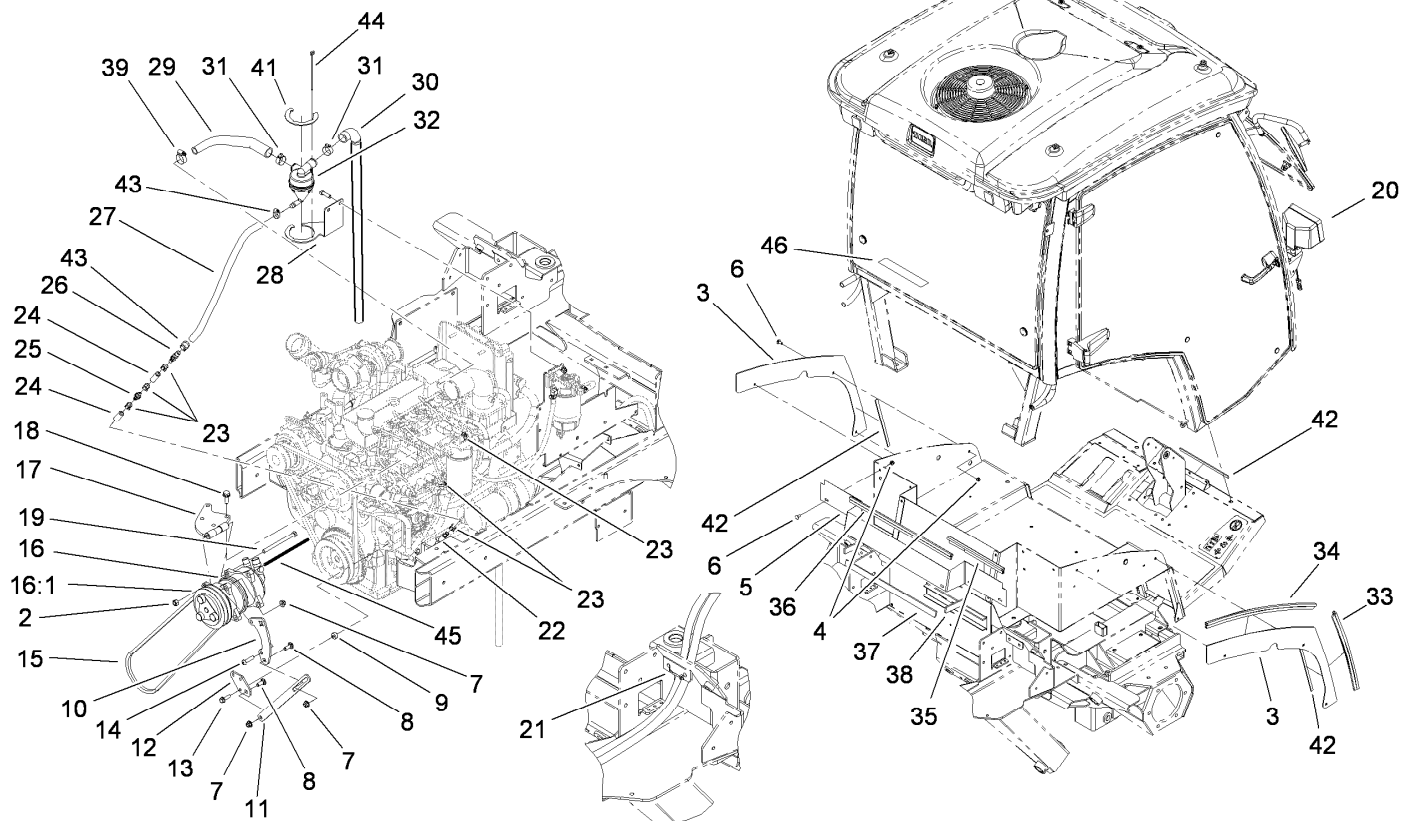


VIEW OF A/C HOSE ROUTING

Cab Component and Breather Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	33025-00	1	Nut-Lock, NI	23	2412-108	6	Clamp-Worm
3	110-6042-01	2	Plate-Sealing, Side	24	115-3392	2	Hose-Fuel
4	104-8300	10	Nut-HF, NI	25	115-3397	1	Valve-Check
5	110-6036-01	1	Panel-Transition, Rear	26	115-3398	1	Adapter-Straight, Hose Barb
6	3230-1	10	Bolt-CARR	27	87-3740	1	Hose-Breather
7	104-8301	4	Nut-HF, NI	28	115-3393-03	1	Plate-Mount, Breather
8	3231-22	2	Screw-CARR	29	115-3395	1	Hose-Formed, Breather Inlet
9	112-3961	3	Spacer	30	117-9406	1	Hose-Formed, Breather
10	114-4948	1	Plate-Mount, Compressor	31	2412-34	2	Clamp-Hose
11	114-4949-03	1	Arm-Tensioner	32	115-3399	1	Breather-Cyclone
12	114-4947	1	Plate-Mount, Pad	33	115-5460	2	Seal-Bulb
13	33104-030	3	Screw-HHF	34	115-5461	2	Seal-Bulb
14	95-3857	2	Screw-HSBH	35	115-5462	2	Seal-Bulb
15	105-3693	1	Belt-Fan	36	115-5463	1	Seal-Bulb
16	114-4937	1	Compressor-AC	37	115-5464	1	Seal-Trim
16:1	115-5418	1	Clutch-Compressor	38	115-5465	2	Seal-Trim
16:2	112-7299	1	Shim Kit ●	39	2412-129	1	Clamp-Hose
16:3		1	Compressor ●■	41	115-8879	1	Plate-Latch
17	114-4944-03	1	Pivot Plate ASM	42	115-8827	3	Foam-Strip
18	33105-030	4	Screw-HHF	43	2412-36	2	Clamp-Hose
19	33115-130	1	Screw-HH	44	3290-378	4	Tie-Cable
20	114-5928	2	Headlight ASM	45	115-8882	1	Conduit-Convolutd
21	3290-379	2	Tie-Cable	46	115-5489	2	Decal-Warning
22	117-2789	1	Fitting-Barb				


● Not illustrated

 ■ Not serviced separately

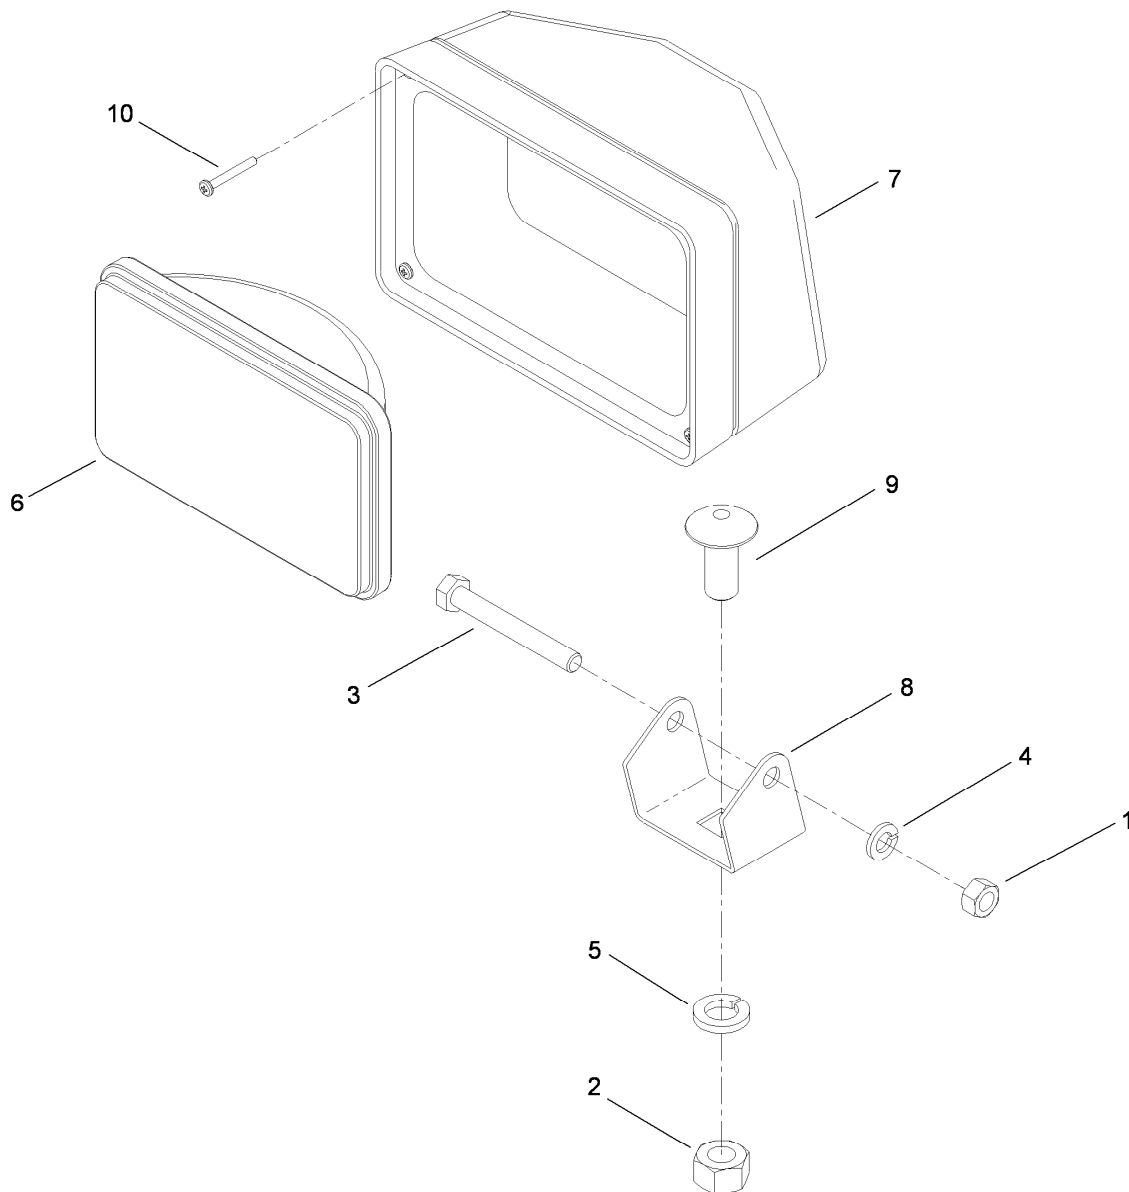


Head Light Assembly No. 114-5928

Ref.	Part Number	Qty.	Description
1	3217-6	1	Nut-Hex
2	3217-9	1	Nut-HH
3	322-12	1	Screw-HH
4	3253-4	1	Washer-Lock
5	3253-7	1	Washer-Lock
6	92-6595	1	Lamp-Beam, Sealed
7	92-6596	1	Bezel
8	92-6597	1	Bracket-Mounting
9	92-6598	1	Bolt-Carriage, Drilled
10	92-6599	4	Screw

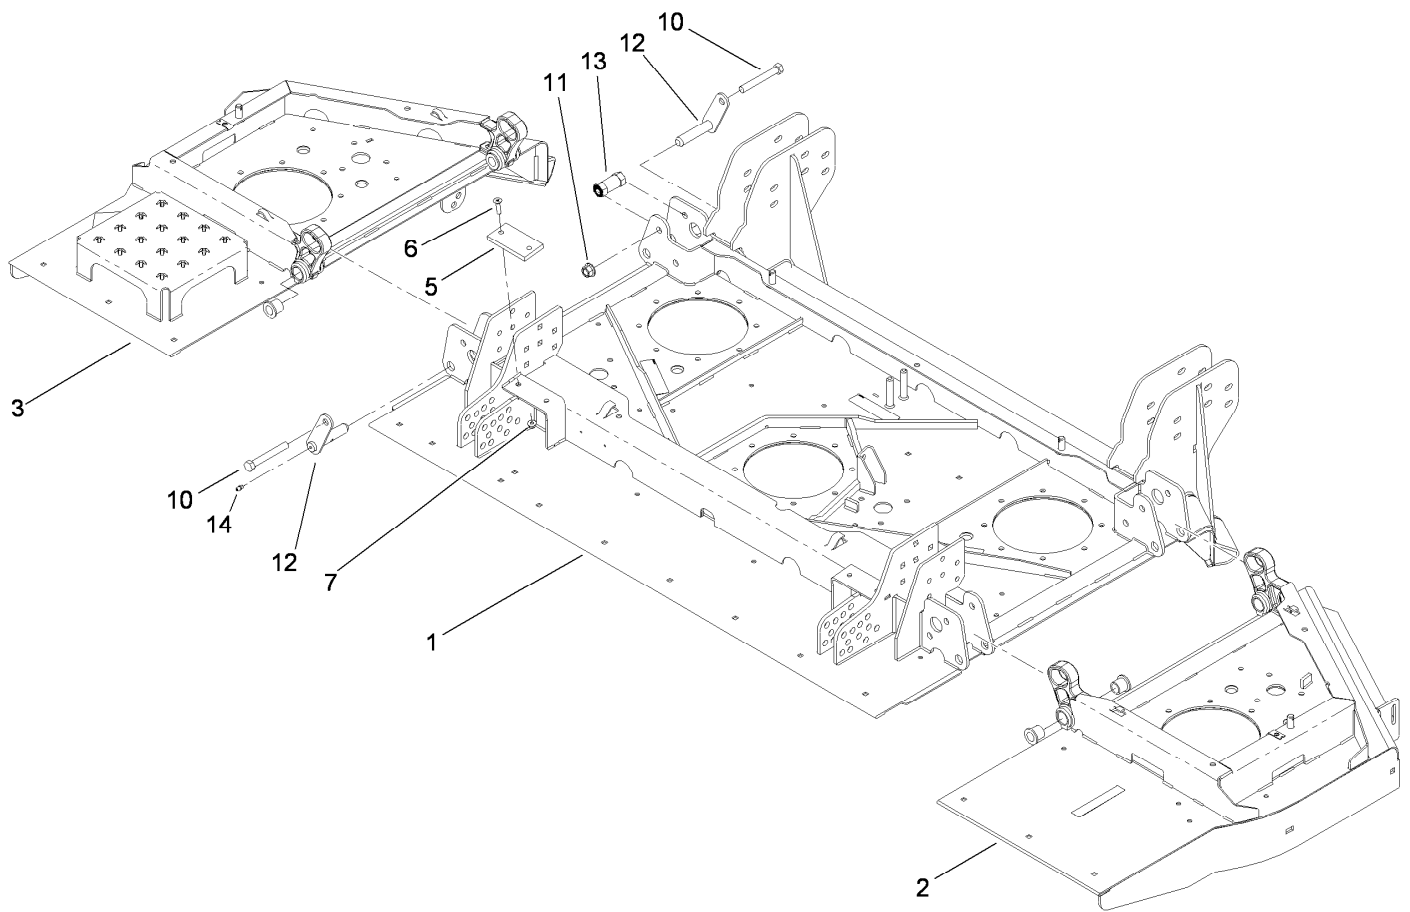 


Center Deck and Winglet Assembly

Ref.	Part Number	Qty.	Description
1	110-5911	1	Center Front Deck And Decal ASM
2	110-5914	1	Right Front Deck And Decal ASM
3	110-5917	1	Left Front Deck And Decal ASM
5	69-9300	2	Pad-Bumper
6	32108-103	4	Screw-FH
7	104-8300	4	Nut-HF, NI
10	325-35	4	Screw-HH
11	99-5107	4	Nut-Lock
12	114-0714	4	Hinge Pin ASM
13	115-3367	4	Eccentric
14	302-5	4	Fitting-Grease

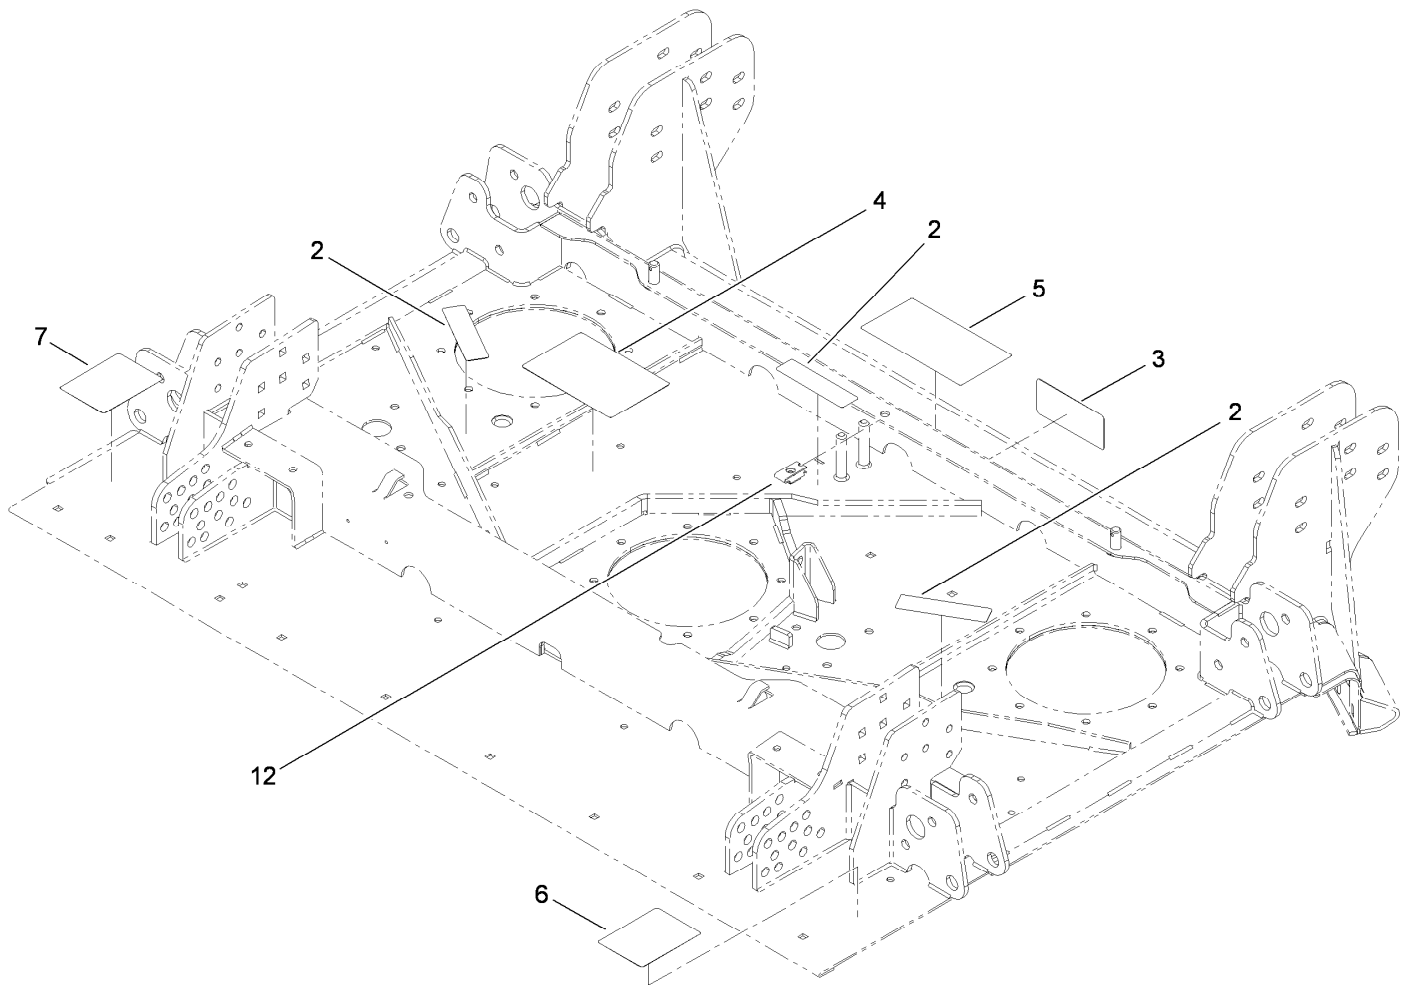 


Center Front Deck and Decal Assembly No. 110-5911

Ref.	Part Number	Qty.	Description
2	100-6578	3	Decal-Danger
3	93-7818	1	Decal-Torque, Blade Bolt
4	114-0922	1	Decal-Belt Routing
5	114-0975	1	Decal-HOC
6	114-0864	1	Decal-Rear HOC, RH
7	114-0865	1	Decal-Rear HOC, LH
12	110-3510	1	Nut-Retainer

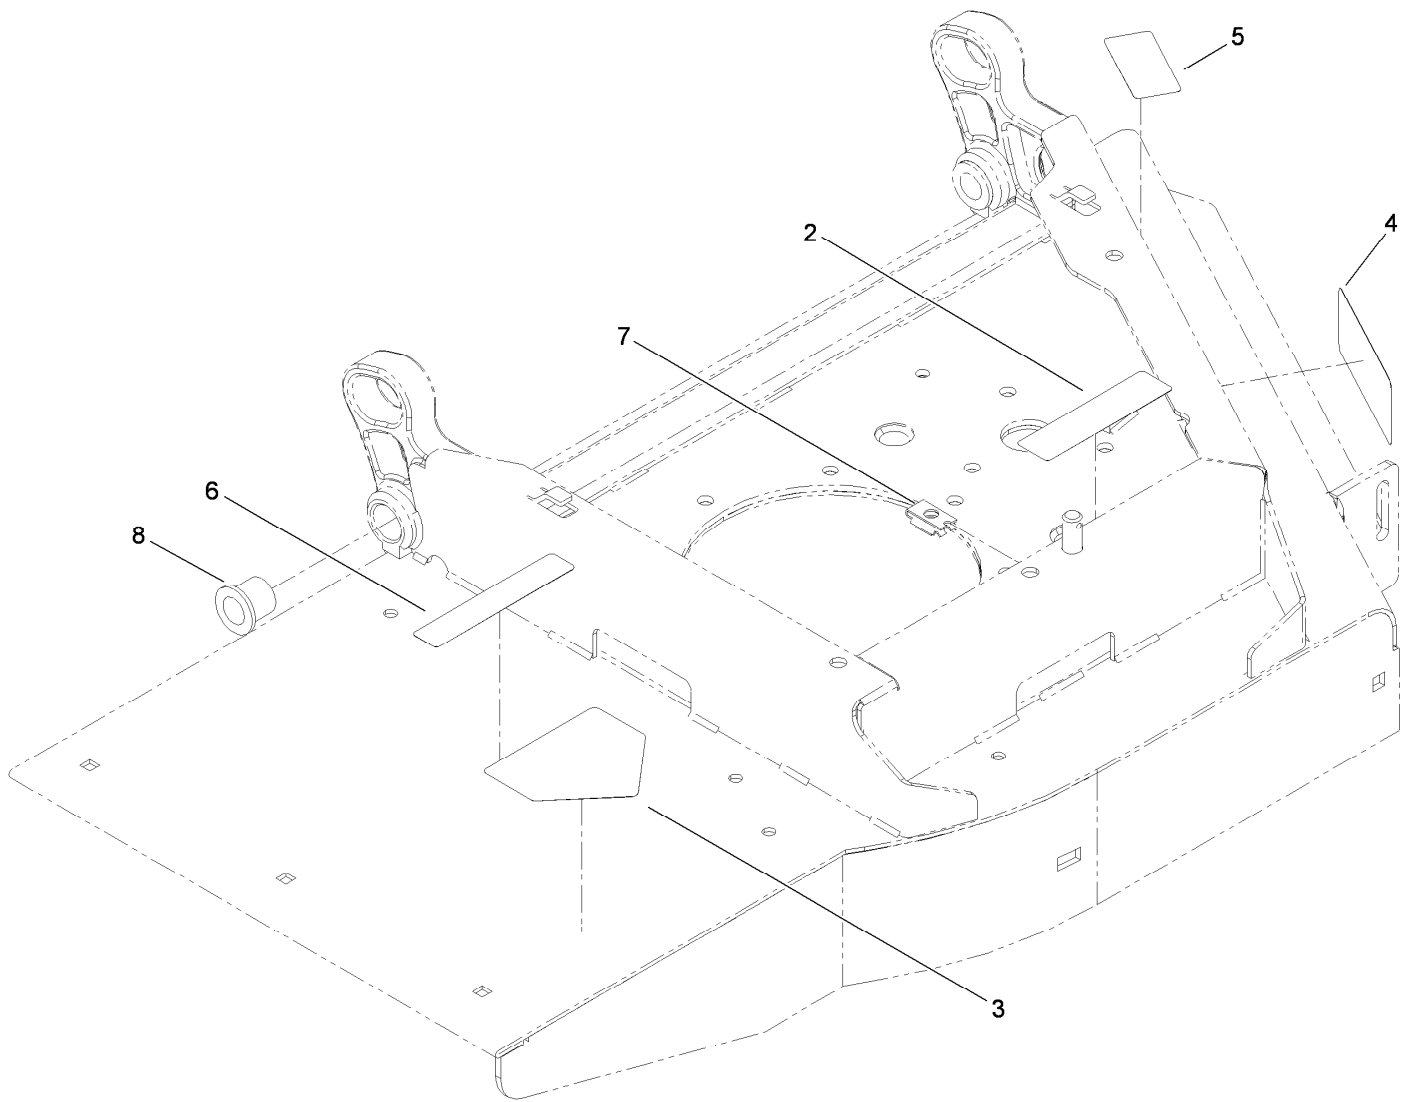 


Right Front Deck and Decal Assembly No. 110-5914

Ref.	Part Number	Qty.	Description
2	100-6578	1	Decal-Danger
3	106-6753	1	Decal-Danger, CE
4	93-7818	1	Decal-Torque, Blade Bolt
5	93-6674	1	Decal-Warning
6	93-6687	1	Decal-No Step
7	110-3510	1	Nut-Retainer
8	92-3162	4	Bushing

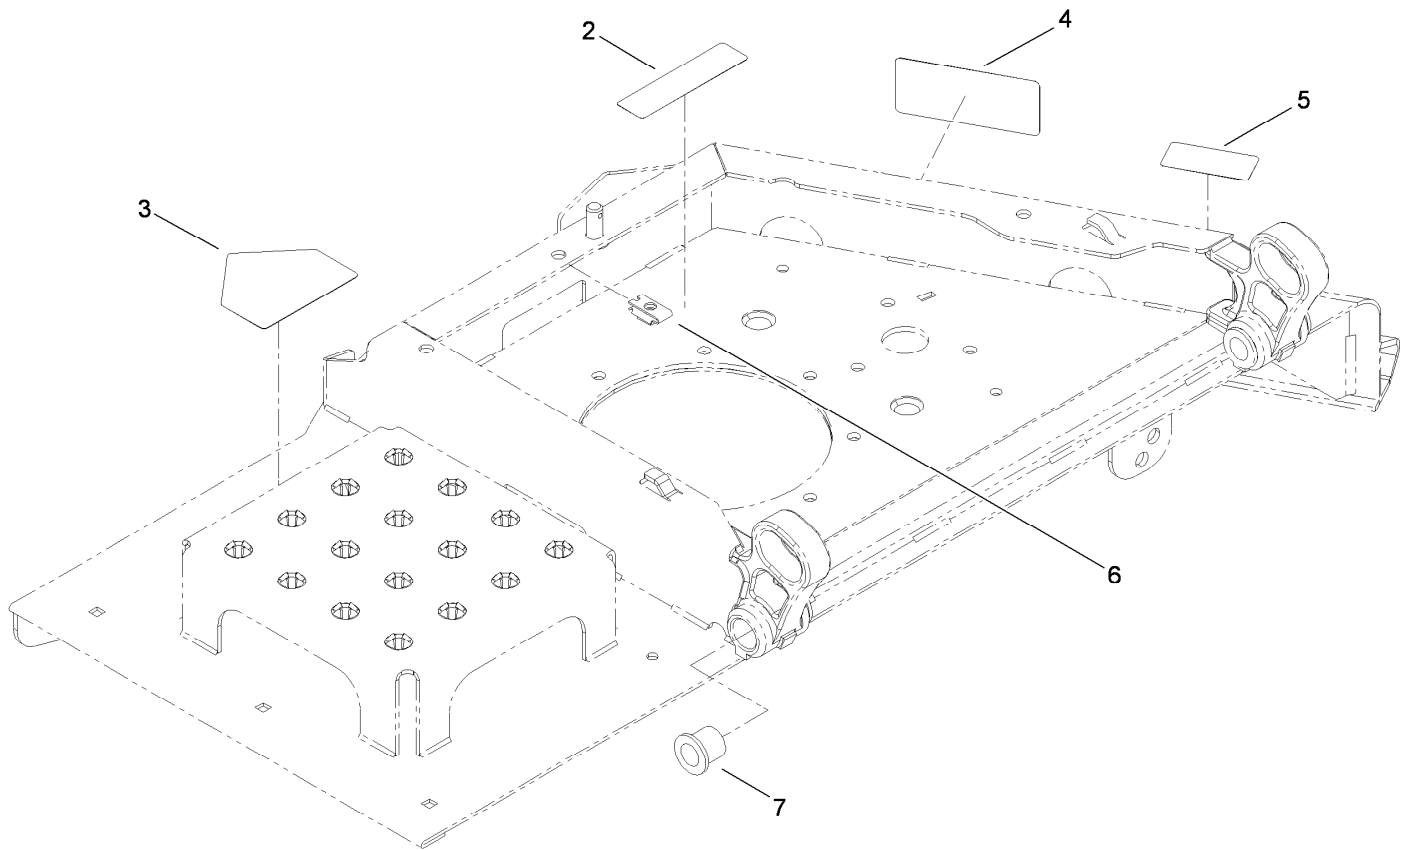 

Left Front Deck and Decal Assembly No. 110-5917


Ref.	Part Number	Qty.	Description
2	100-6578	1	Decal-Danger
3	106-6753	1	Decal-Danger, CE
4	93-7818	1	Decal-Torque, Blade Bolt
5	93-6674	1	Decal-Warning
6	110-3510	1	Nut-Retainer
7	92-3162	4	Bushing

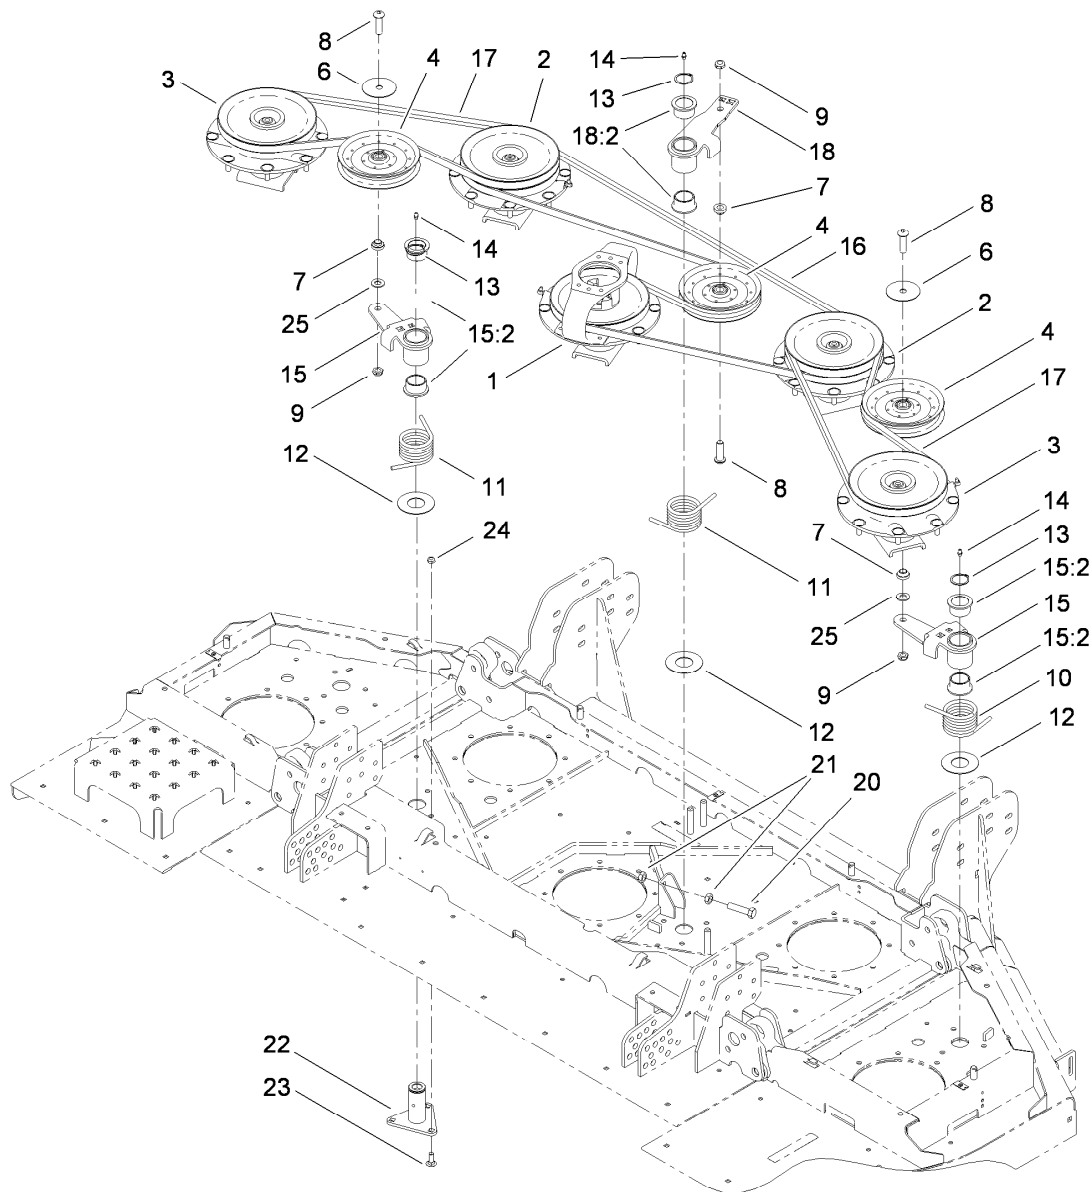 

Center Deck Belt and Pulley Assembly


Ref.	Part Number	Qty.	Description
1	119-4547	1	Driving Spindle ASM
2	119-4548	2	Double Driven Spindle ASM
3	119-4549	2	High-Driven Spindle ASM
4	110-9596	3	Pulley-Idler
6	100-3102	2	Washer-Flat
7	108-1924	3	Spacer-Idler
8	108-1993	3	Screw-HSBH
9	3296-45	3	Nut-Hex
10	108-1921	1	Spring-Torsion
11	112-7395	2	Spring-Torsion
12	108-1926	3	Washer
13	32120-84	3	Ring-Snap, External
14	302-5	3	Fitting-Grease

Ref.	Part Number	Qty.	Description
15	117-9176	2	Idler Arm ASM
15:2	93-4510	2	Bushing-Caster
16	112-7376	1	Belt-V, B
17	112-7377	2	Belt-V, B
18	114-0100	1	High Idler Arm ASM
18:2	93-4510	2	Bushing-Caster
20	01-182-0816	1	Bolt-HH
21	3218-5	2	Nut-Jam
22	114-0997	3	Pivot-Idler
23	3231-2	9	Bolt-CARR
24	3296-59	9	Nut-Lock, NI
25	3256-26	2	Washer-Flat

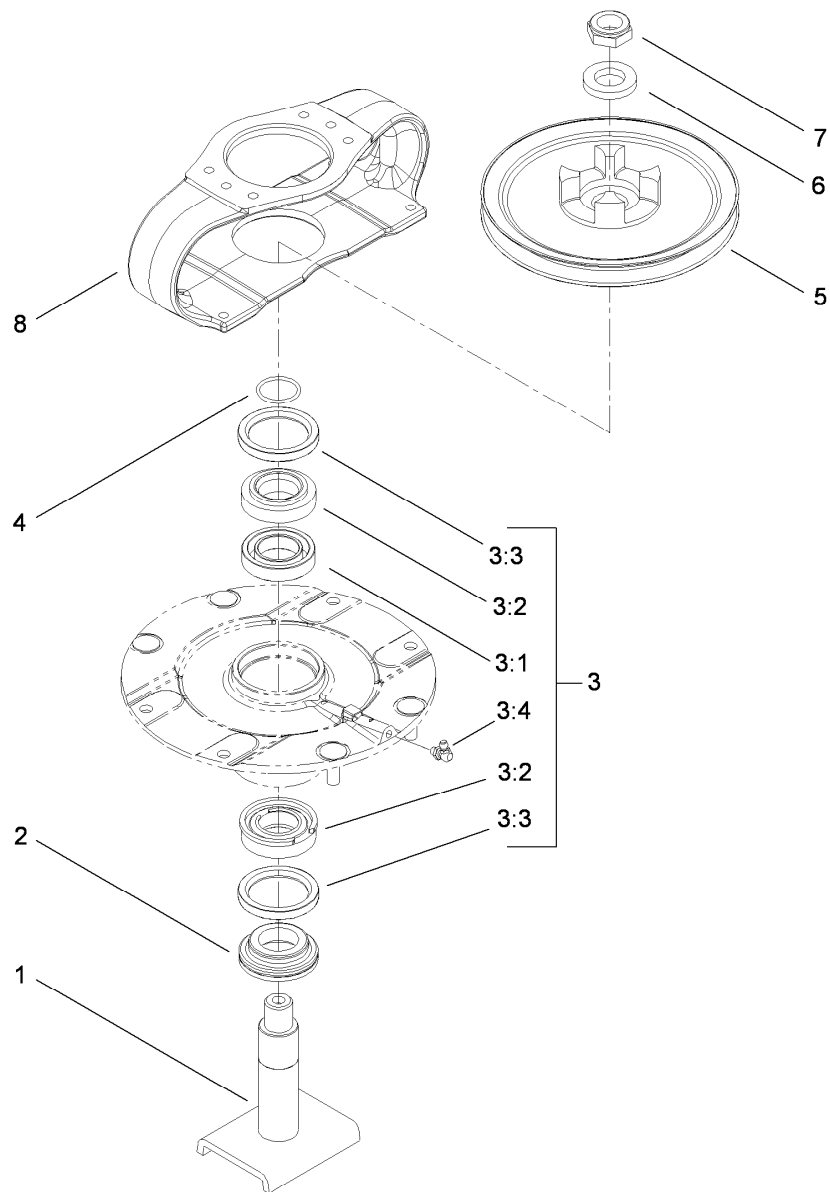 


Driving Spindle Assembly No. 119-4547

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4546	1	Spindle Housing ASM
3:1	104-3549	1	Bearing Spacer Set
3:2	110-8297	1	Bearing ASM
3:3	253-154	2	Seal-Oil
3:4	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3545	1	Pulley-Driving
6	104-8322	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI
8	104-3544	1	Mount-Motor, Drive

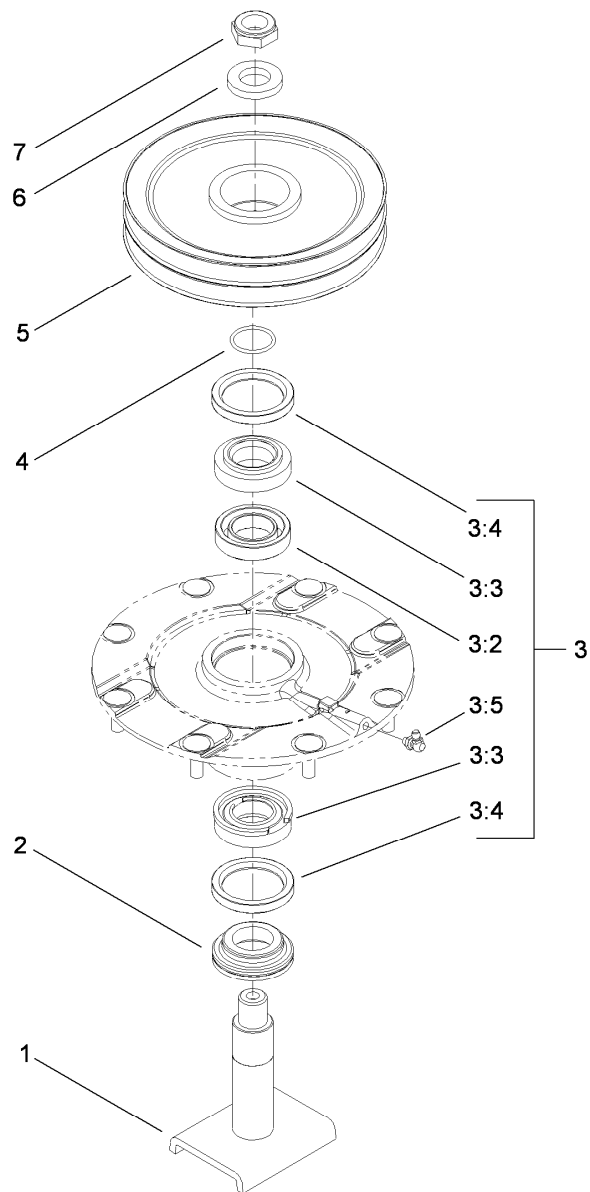 


Double Driven Spindle Assembly No. 119-4548

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:2	104-3549	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3547	1	Pulley-Driven, Double
6	104-8322	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI

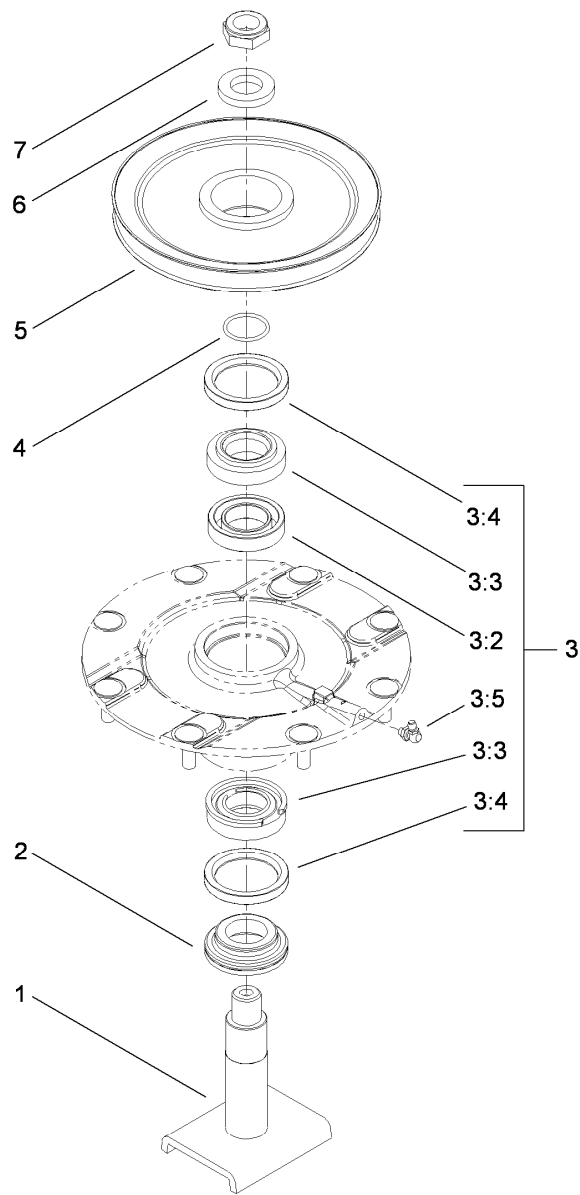 

High Driven Spindle Assembly No. 119-4549


Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:2	104-3549	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3548	1	Pulley-Driven, High
6	104-8322	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI

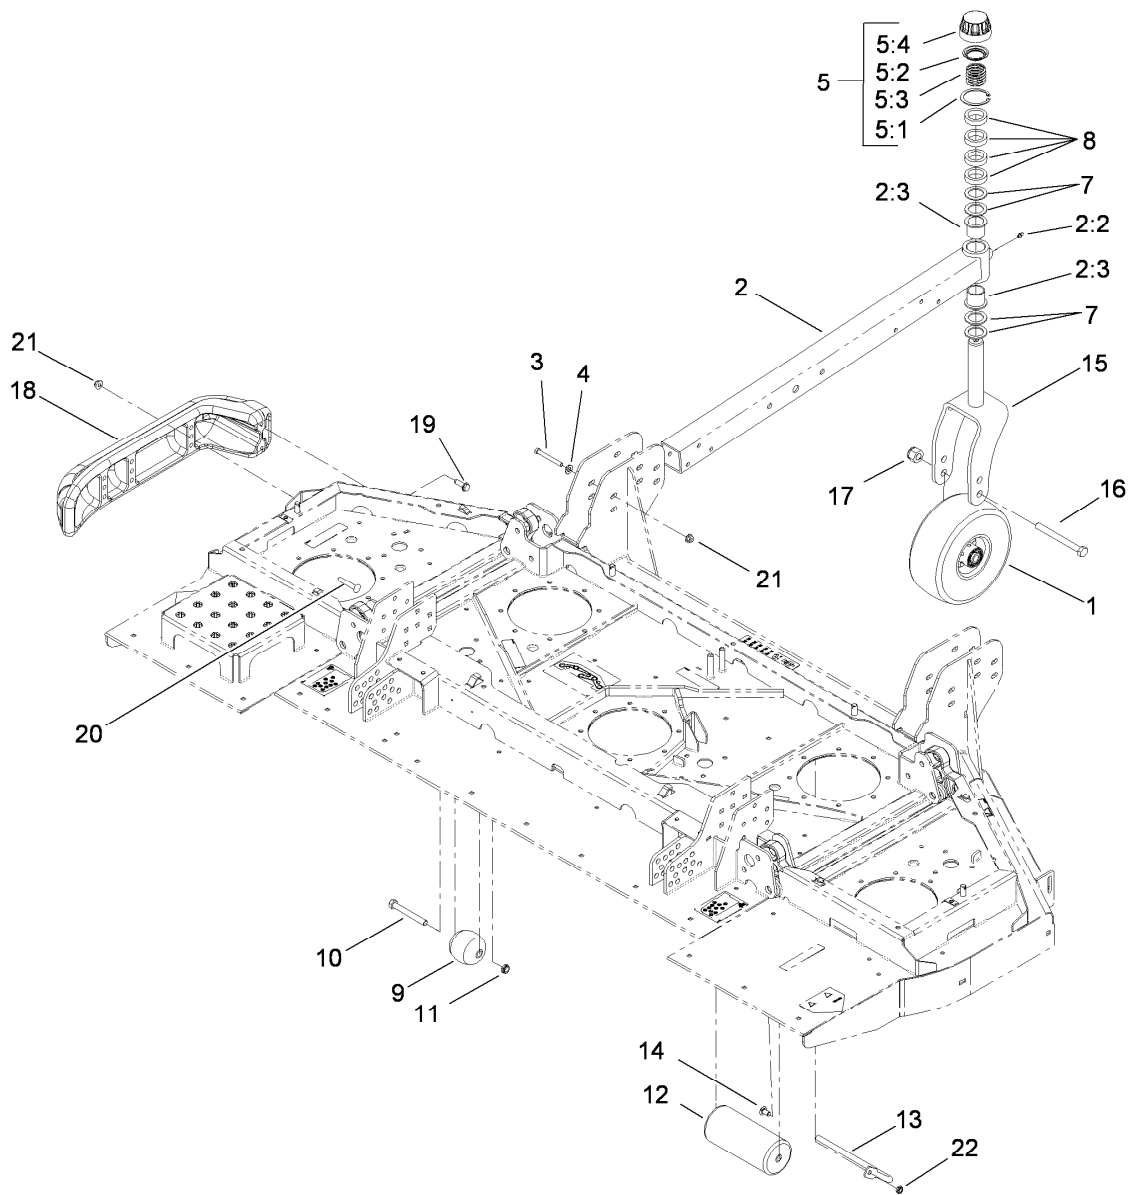 

Center Deck Roller, Skid and Caster Wheel Assembly


Ref.	Part Number	Qty.	Description
1	93-4240	2	10 Inch Wheel ASM
2	114-4885	2	Front Castor Arm ASM
2:2	302-5	1	Fitting-Grease
2:3	69-6470	2	Bushing-Castor
3	323-42	12	Screw-HH
4	3256-24	12	Washer-Flat
5	92-9727	2	HOC Cap ASM
5:1	92-5581	1	Ring-Retaining
5:2	92-5583	1	Washer-Cap
5:3	92-9726	1	Spring-Compression
5:4	92-8861	1	Cap-HOC
7	69-6860	8	Washer-Thrust
8	69-1510	8	Spacer
9	29-4820	2	Roller

Ref.	Part Number	Qty.	Description
10	325-17	2	Screw-HH
11	3296-45	2	Nut-Hex
12	68-6710	1	Roller
13	68-6840	1	Shaft-Roller
14	3231-21	1	Screw-CARR
15	110-5999-01	2	Castor Fork ASM
16	327-24	2	Screw-HH
17	3296-53	2	Nut-Lock, NI
18	112-1479	2	Skid-Bumper, Deck
19	9136144	2	Screw-HWHTF
20	3231-33	4	Screw-CARR
21	104-8301	16	Nut-HF, NI
22	3296-59	1	Nut-Lock, NI

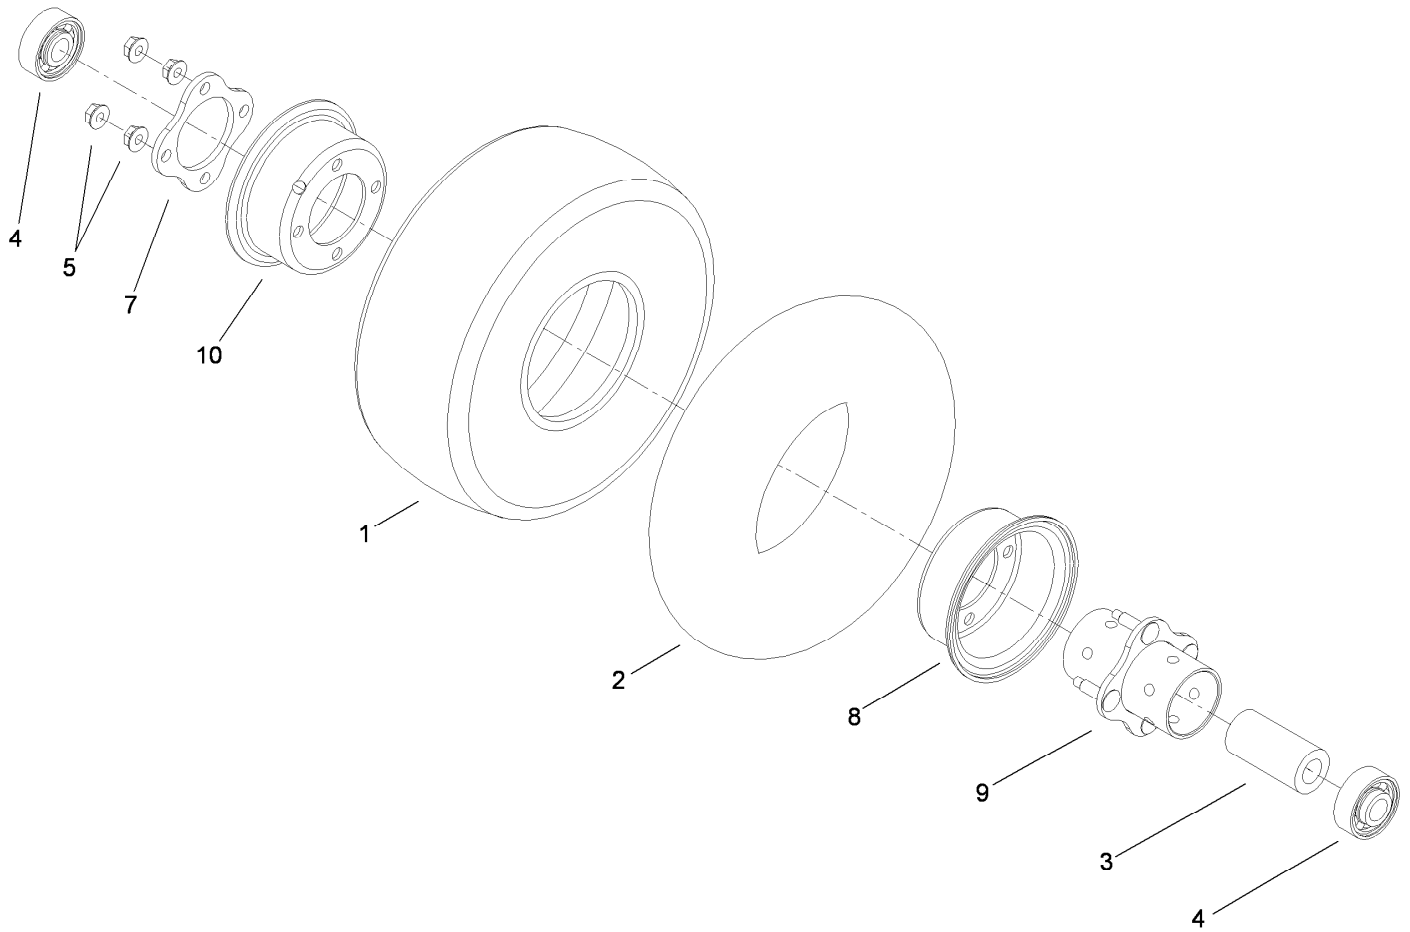 

10 Inch Wheel Assembly No. 93-4240


Ref.	Part Number	Qty.	Description
1	93-4243	1	Tire
2	93-4244	1	Tube-Inner (W/Valve)
3	93-4241	1	Spacer-Bearing, Inner
4	108-9017	2	Bearing-Steel, Stainless
5	32128-16	4	Nut-HHF
7	93-4242	1	Plate
8	93-4239	1	Rim-Wheel, Half
9	93-5980	1	Hub
10	95-2741	1	Rim-Wheel, Half

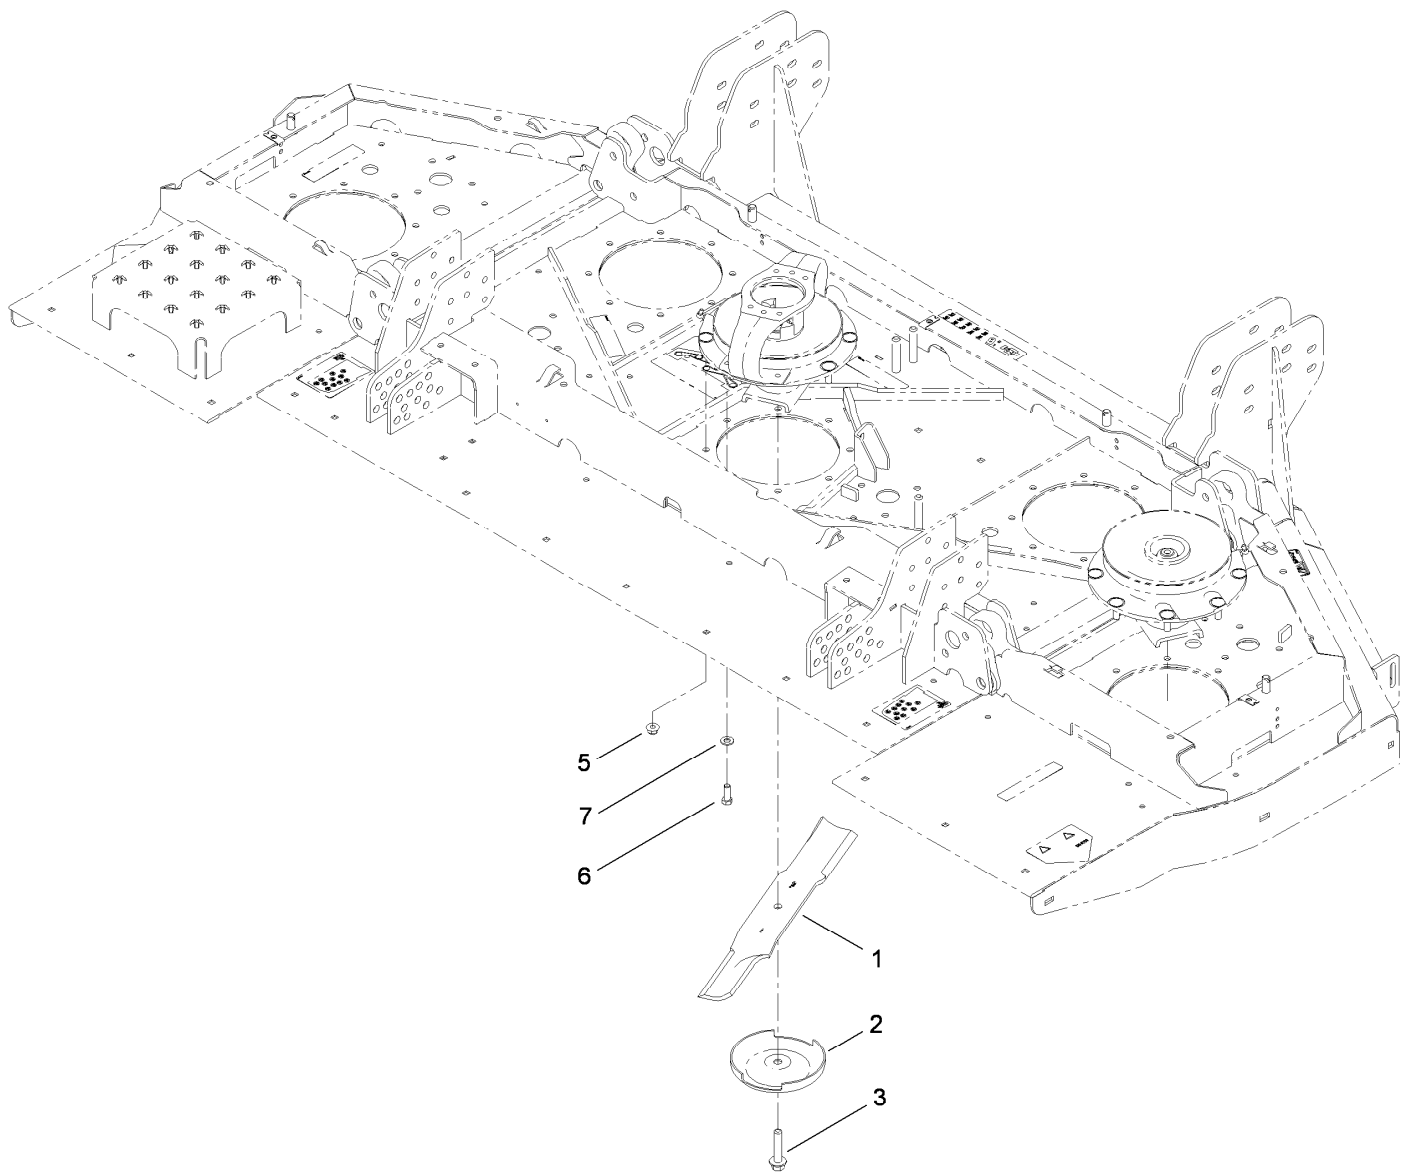 

Center Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	110-5946-03	5	Blade-Rotary
1	110-5948-03	5	Blade-Rotary, Atomic ●
2	72-9361	5	Cup-Scalp, Anti
3	92-5816	5	Bolt-Blade
5	104-8301	36	Nut-HF, NI
6	323-6	4	Screw-HH
7	3256-24	4	Washer-Flat

 ● Not illustrated

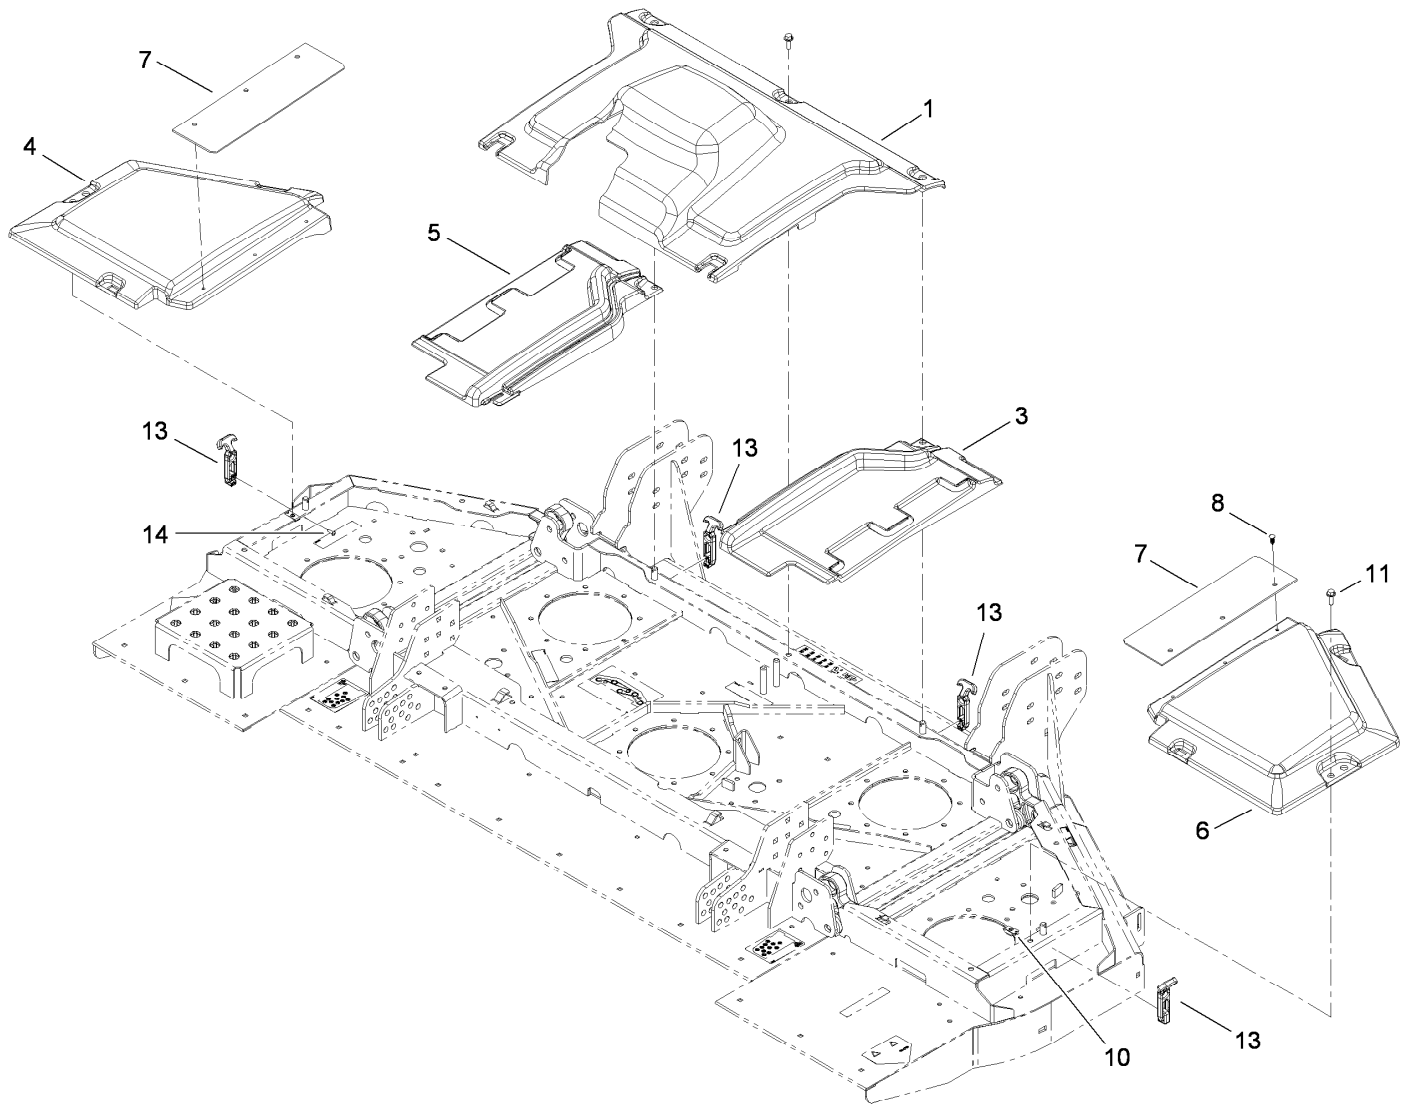

Center Deck Belt Cover Assembly


Ref.	Part Number	Qty.	Description
1	114-5630	1	Cover-Center, Front Deck
3	114-5632	1	Cover-Front Deck, RH Transition
4	114-5629	1	Cover-Front Deck, LH
5	114-5631	1	Cover-Front Deck, LH Transition
6	114-5628	1	Cover-Front Deck, RH
7	115-5424	2	Shield-Deck, Flexible
8	117-2382	6	Plug-Plastic
10	110-3510	3	Nut-Retainer
11	3234-29	3	Screw-HHF
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

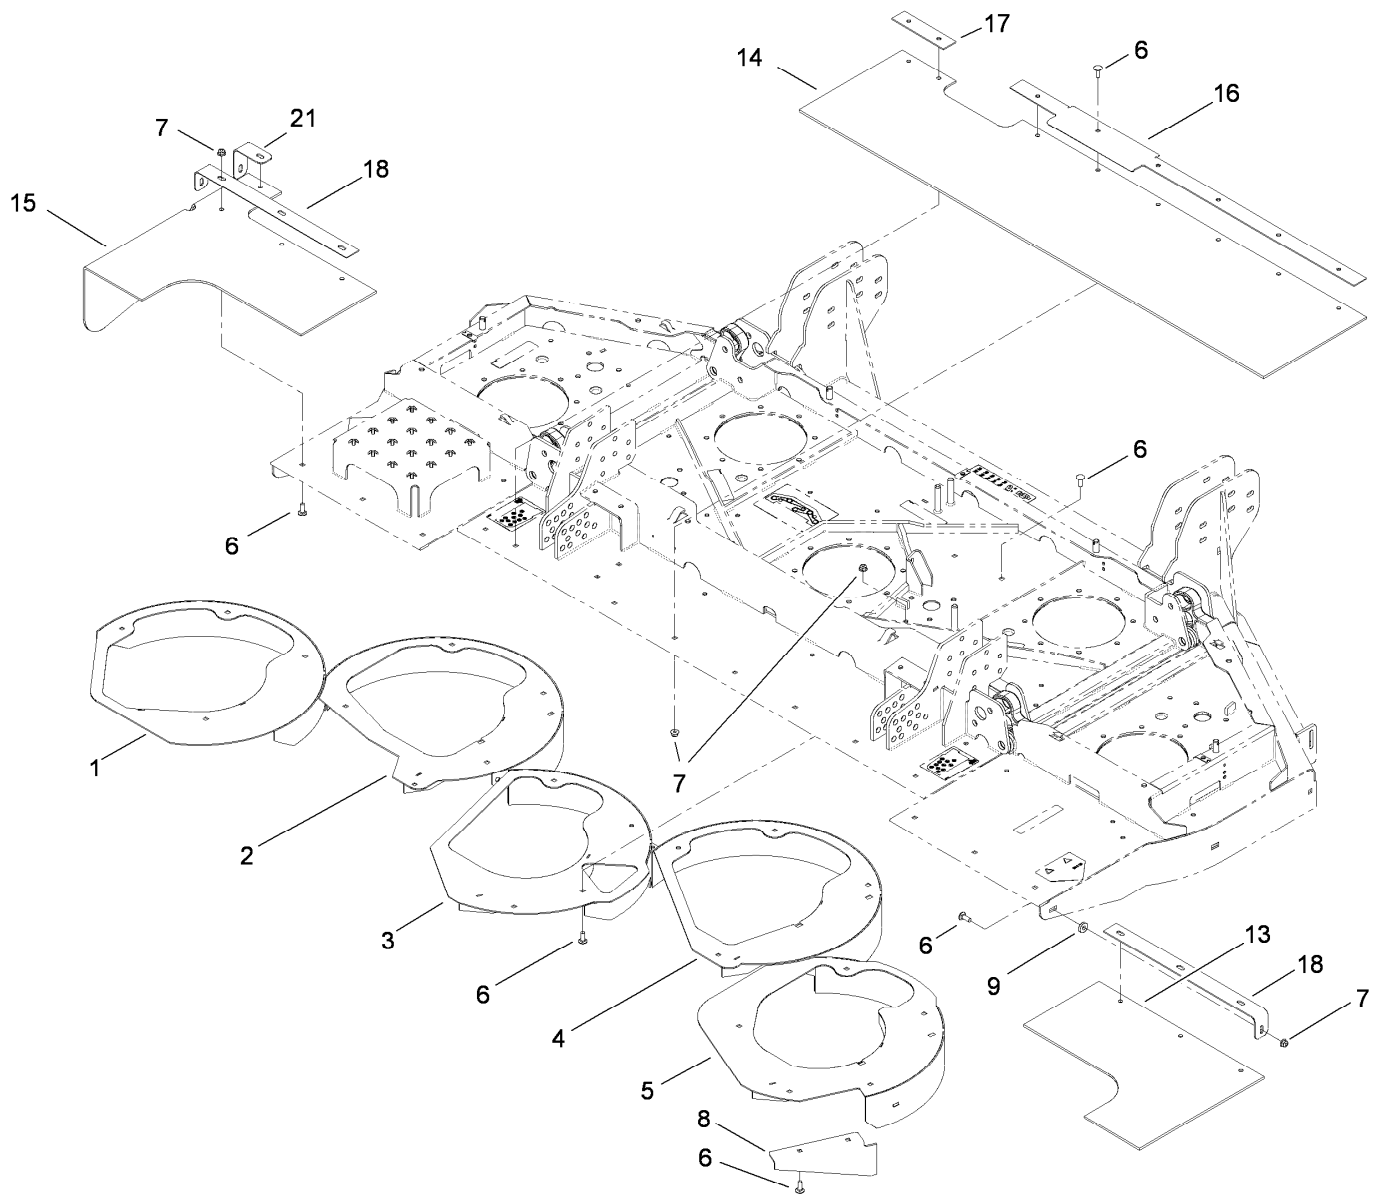 

Center Deck Chamber Assembly


Ref.	Part Number	Qty.	Description
1	115-2100-01	1	Chamber-Outer, LH
2	115-2101-01	1	Chamber-Inner, LH
3	115-2102-01	1	Chamber-Center
4	115-2103-01	1	Chamber-Inner, RH
5	115-2104-01	1	Chamber-Outer, RH
6	3230-10	43	Bolt-CARR
7	104-8300	43	Nut-HF, NI
8	115-2147-01	1	Baffle-Deflector

Ref.	Part Number	Qty.	Description
9	104-7658	1	Spacer
13	114-0891	1	Flap-Rubber, Right Winglet
14	114-0890	1	Flap-Rubber, Center
15	115-3389	1	Flap-Rubber, Left Winglet
16	114-0884-03	1	Bar-Flap Holddown, Center
17	115-3390-03	1	Bar-Flap Holddown, Center
18	114-0885-03	2	Bar-Flap Holddown, Outer
21	115-5444-03	1	Strap-Deflector

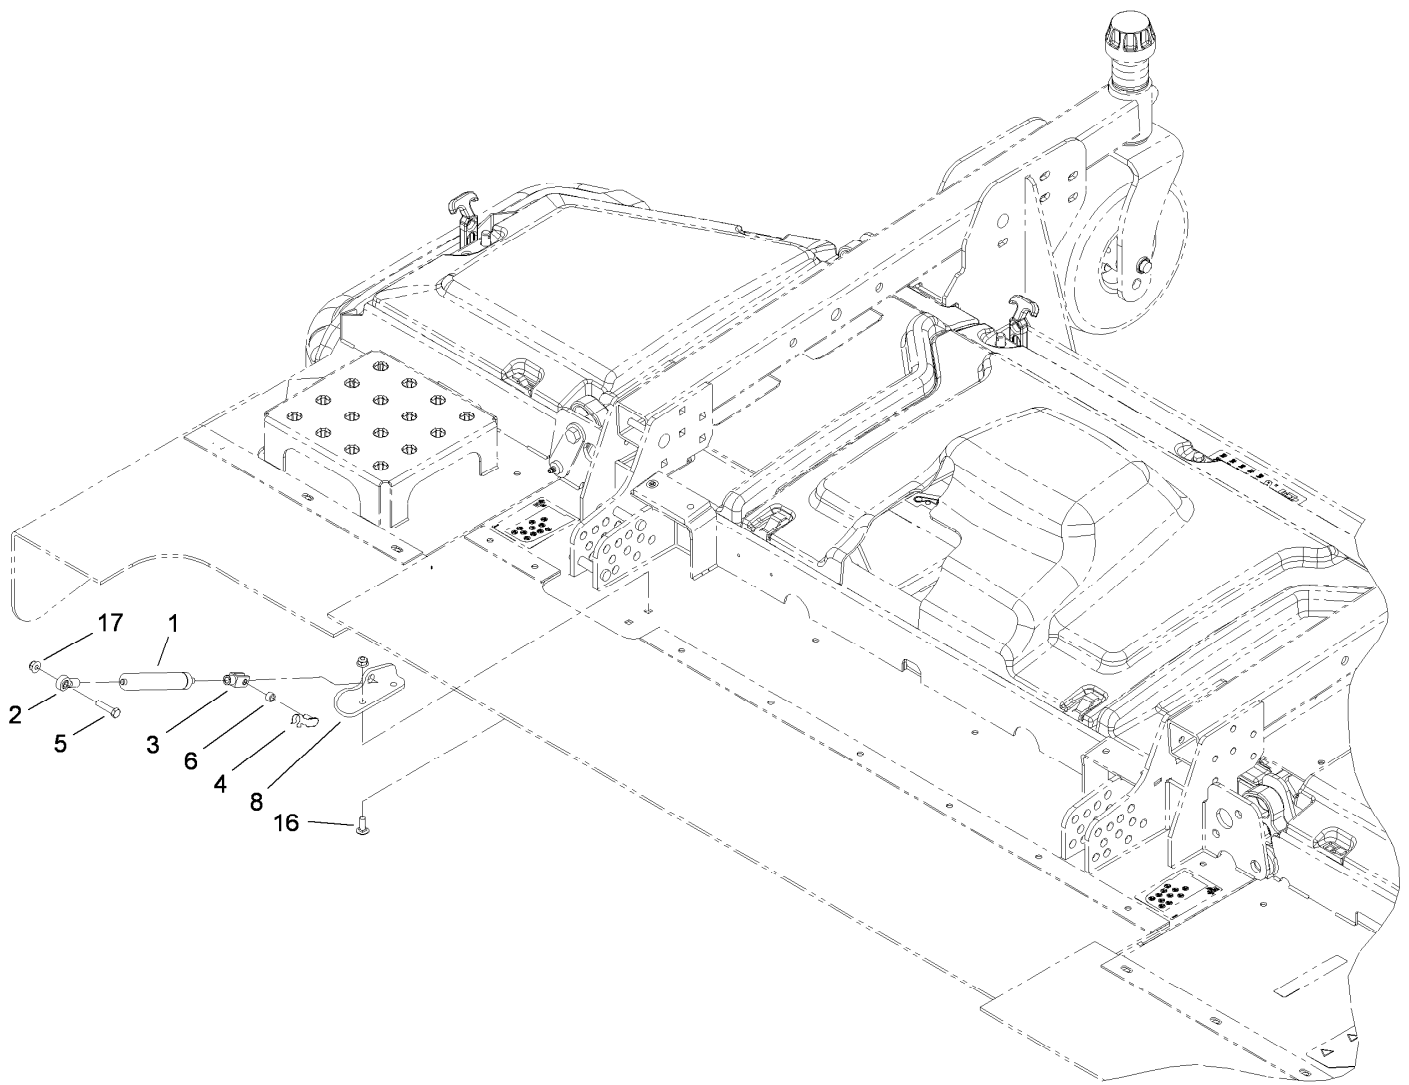 

Center Deck Transport Damper Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-3249	1	Damper
2	104-8331	1	End-Rod, Spherical
3	115-5455	1	End-Rod, Clevis
4	115-5454	1	Pin-Spring
5	322-17	1	Screw-HH
6	115-2142	1	Spacer
8	115-5452-01	1	Mount-Damper
16	3230-10	2	Bolt-CARR
17	104-8300	3	Nut-HF, NI

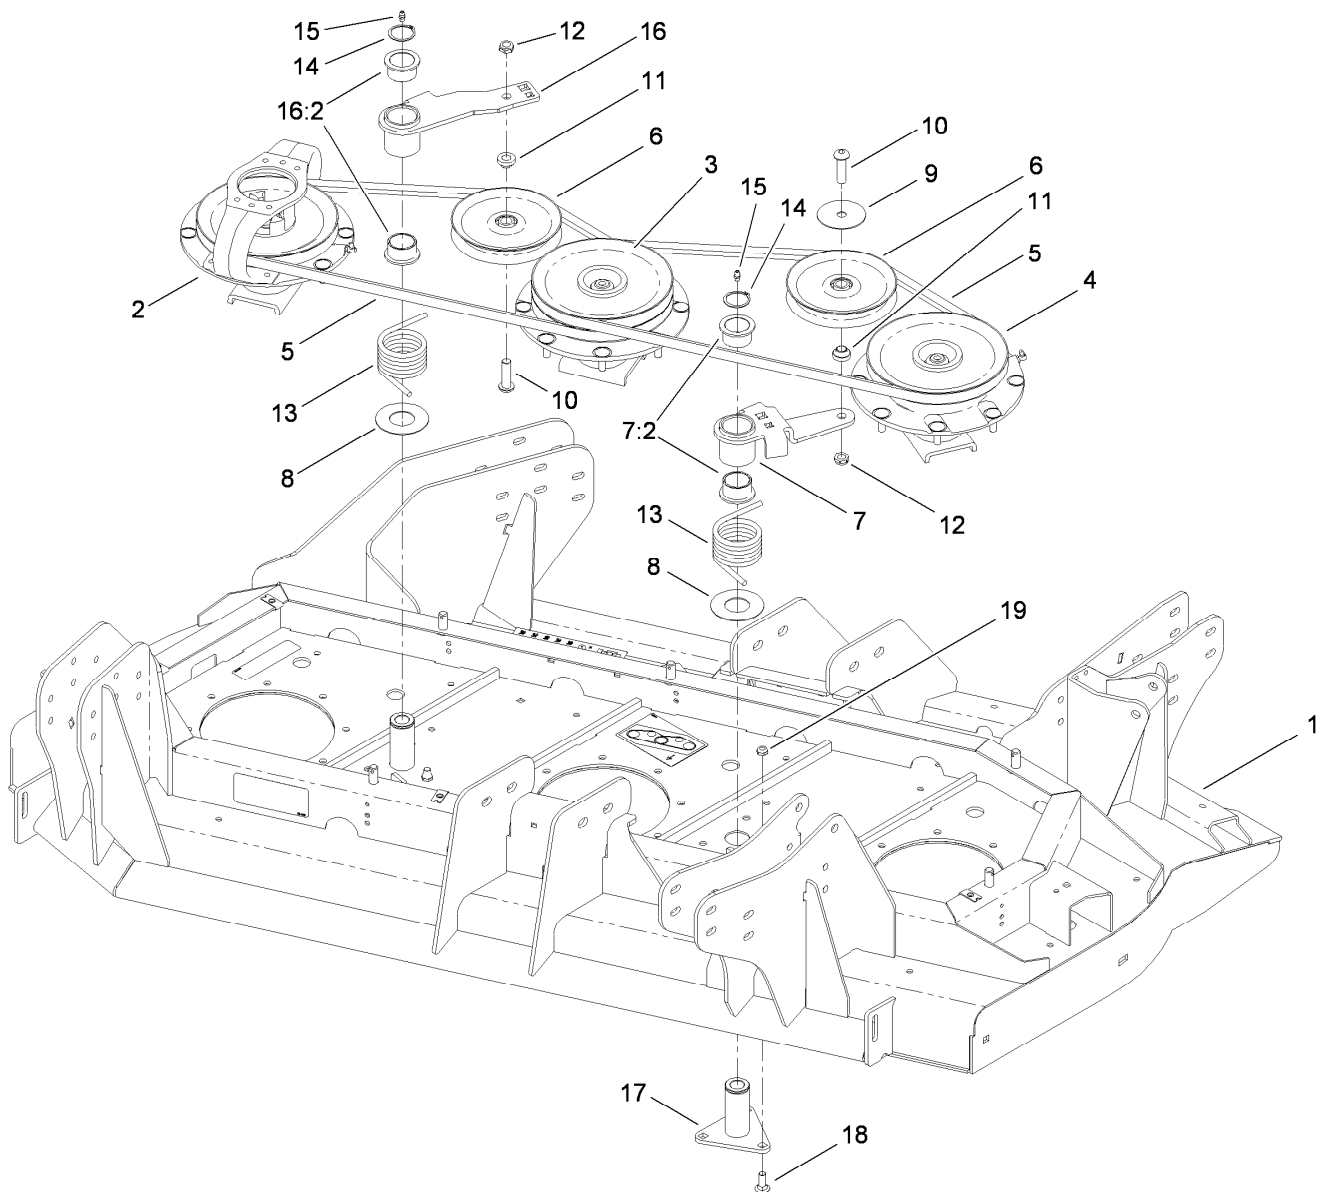 

Right Deck Belt and Pulley Assembly


Ref.	Part Number	Qty.	Description
1	110-5921	1	Right Deck And Decal ASM
2	119-4547	1	Driving Spindle ASM
3	119-4548	1	Double Driven Spindle ASM
4	119-4549	1	High-Driven Spindle ASM
5	112-7377	2	Belt-V, B
6	01-268-0160	2	Pulley-Idler
7	117-9176	1	Idler Arm ASM
7:2	93-4510	2	Bushing-Caster
8	108-1926	2	Washer
9	100-3102	1	Washer-Flat
10	108-1993	2	Screw-HSBH

Ref.	Part Number	Qty.	Description
11	108-1924	2	Spacer-Idler
12	3296-45	2	Nut-Hex
13	108-1921	2	Spring-Torsion
14	32120-84	2	Ring-Snap, External
15	302-5	2	Fitting-Grease
16	108-1930	1	Idler Arm ASM
16:2	93-4510	2	Bushing-Caster
17	114-0997	2	Pivot-Idler
18	3231-2	6	Bolt-CARR
19	3296-59	6	Nut-Lock, NI

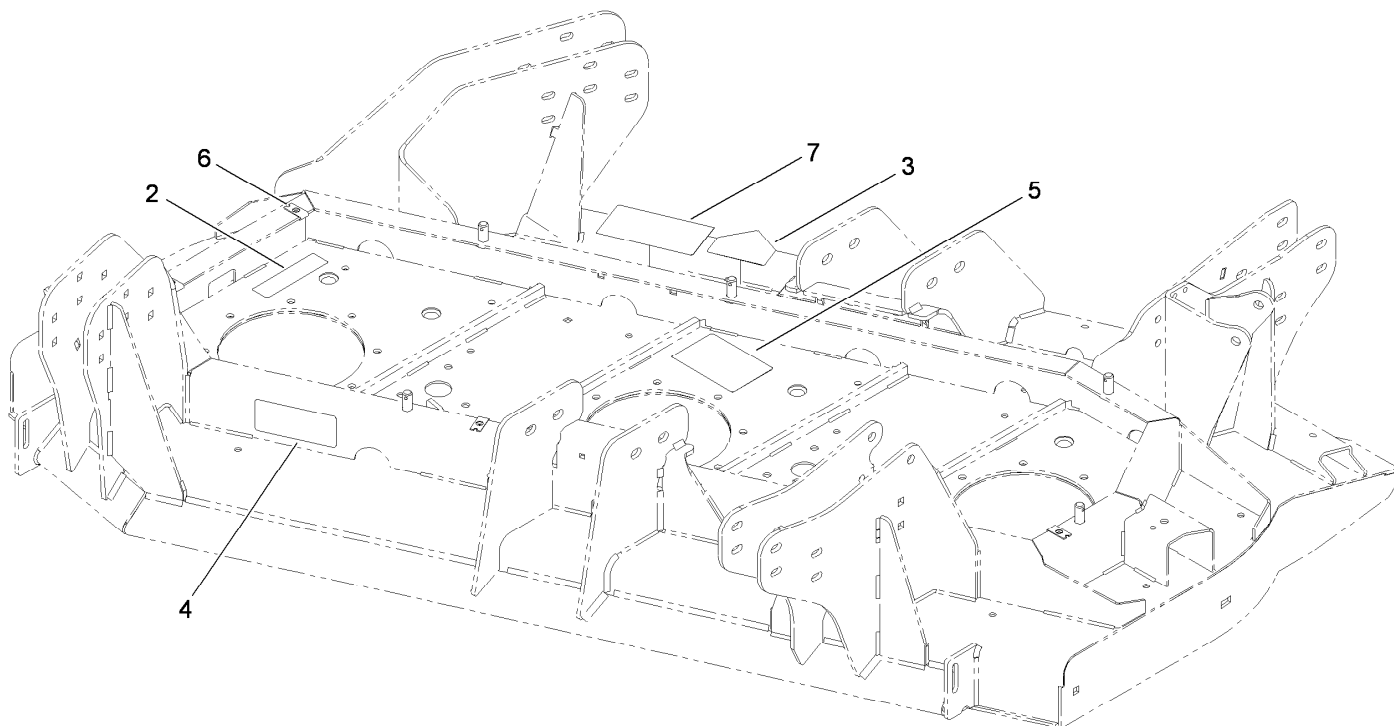 

Right Deck Decal Assembly No. 110-5921


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	100-6578	3	Decal-Danger
3	106-6753	1	Decal-Danger, CE
4	93-7818	1	Decal-Torque, Blade Bolt
5	114-0974	1	Decal-Belt Routing, Deck (RH)
6	110-3510	4	Nut-Retainer
7	114-0975	1	Decal-HOC

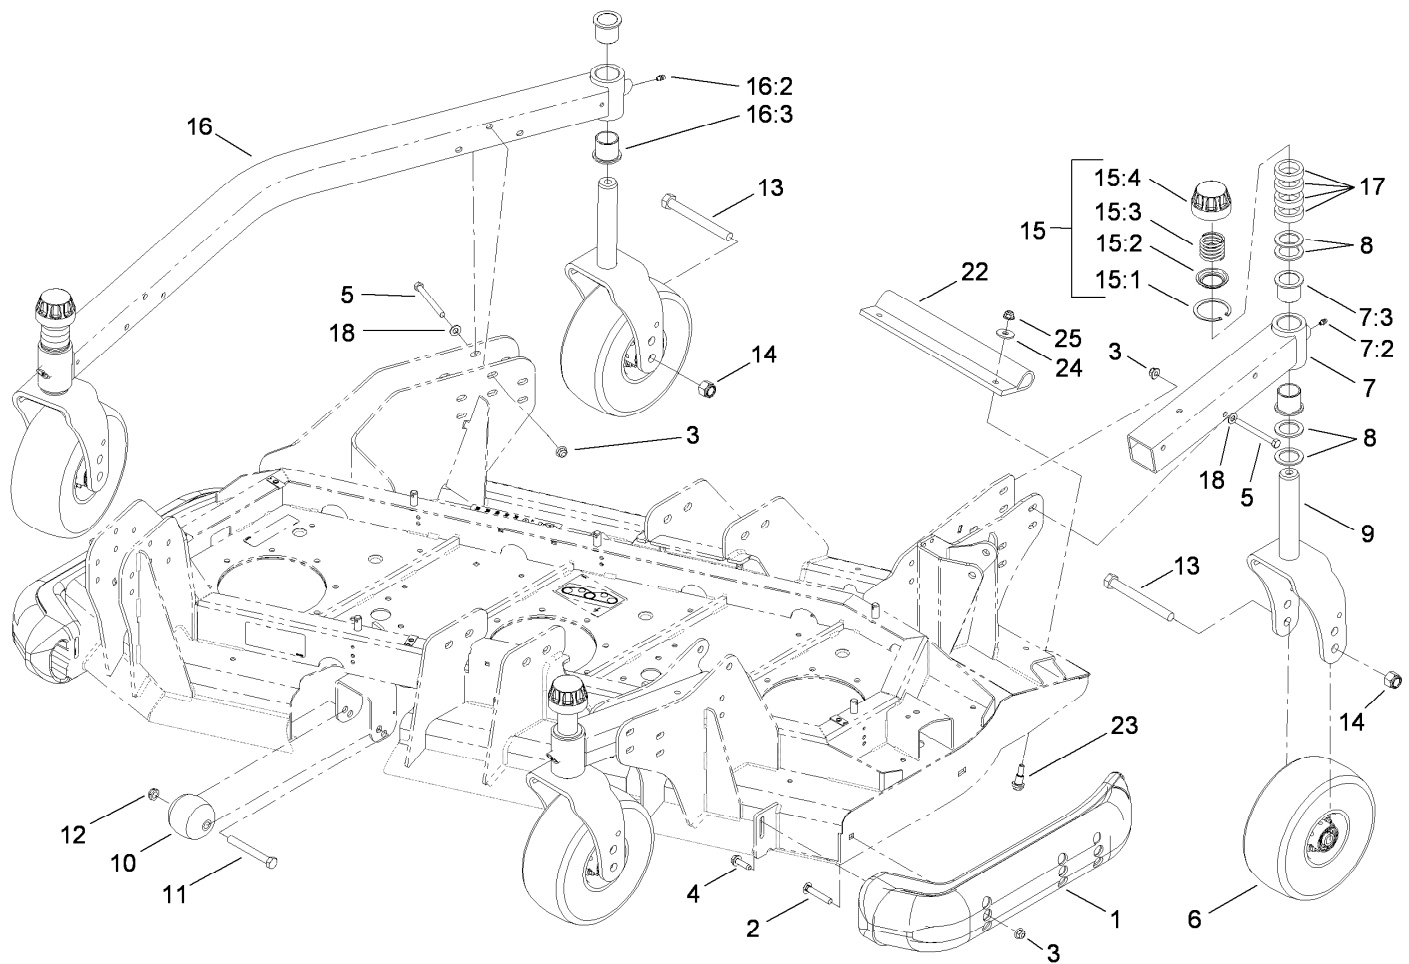 

Right Deck Roller, Skid and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	112-1479	2	Skid-Bumper, Deck
2	3231-33	4	Screw-CARR
3	104-8301	16	Nut-HF, NI
4	9136144	2	Screw-HWHTF
5	323-42	12	Screw-HH
6	93-4240	4	10 Inch Wheel ASM
7	110-6040	2	Castor Arm ASM
7:2	302-5	1	Fitting-Grease
7:3	69-6470	2	Bushing-Castor
8	69-6860	16	Washer-Thrust
9	110-5999-01	4	Castor Fork ASM
10	29-4820	2	Roller
11	325-17	2	Screw-HH
12	3296-45	2	Nut-Hex
13	327-24	4	Screw-HH


Ref.	Part Number	Qty.	Description
14	3296-53	4	Nut-Lock, NI
15	92-9727	4	HOC Cap ASM
15:1	92-5581	1	Ring-Retaining
15:2	92-5583	1	Washer-Cap
15:3	92-9726	1	Spring-Compression
15:4	92-8861	1	Cap-HOC
16	114-0953	1	HOC Castor Arm ASM
16:2	302-5	2	Fitting-Grease
16:3	69-6470	4	Bushing-Castor
17	69-1510	16	Spacer
18	3256-24	12	Washer-Flat
22	117-2768	1	Flap-Rubber
23	104-0858	2	Bolt-Shoulder
24	103995	2	Washer
25	104-7201	2	Nut-HF

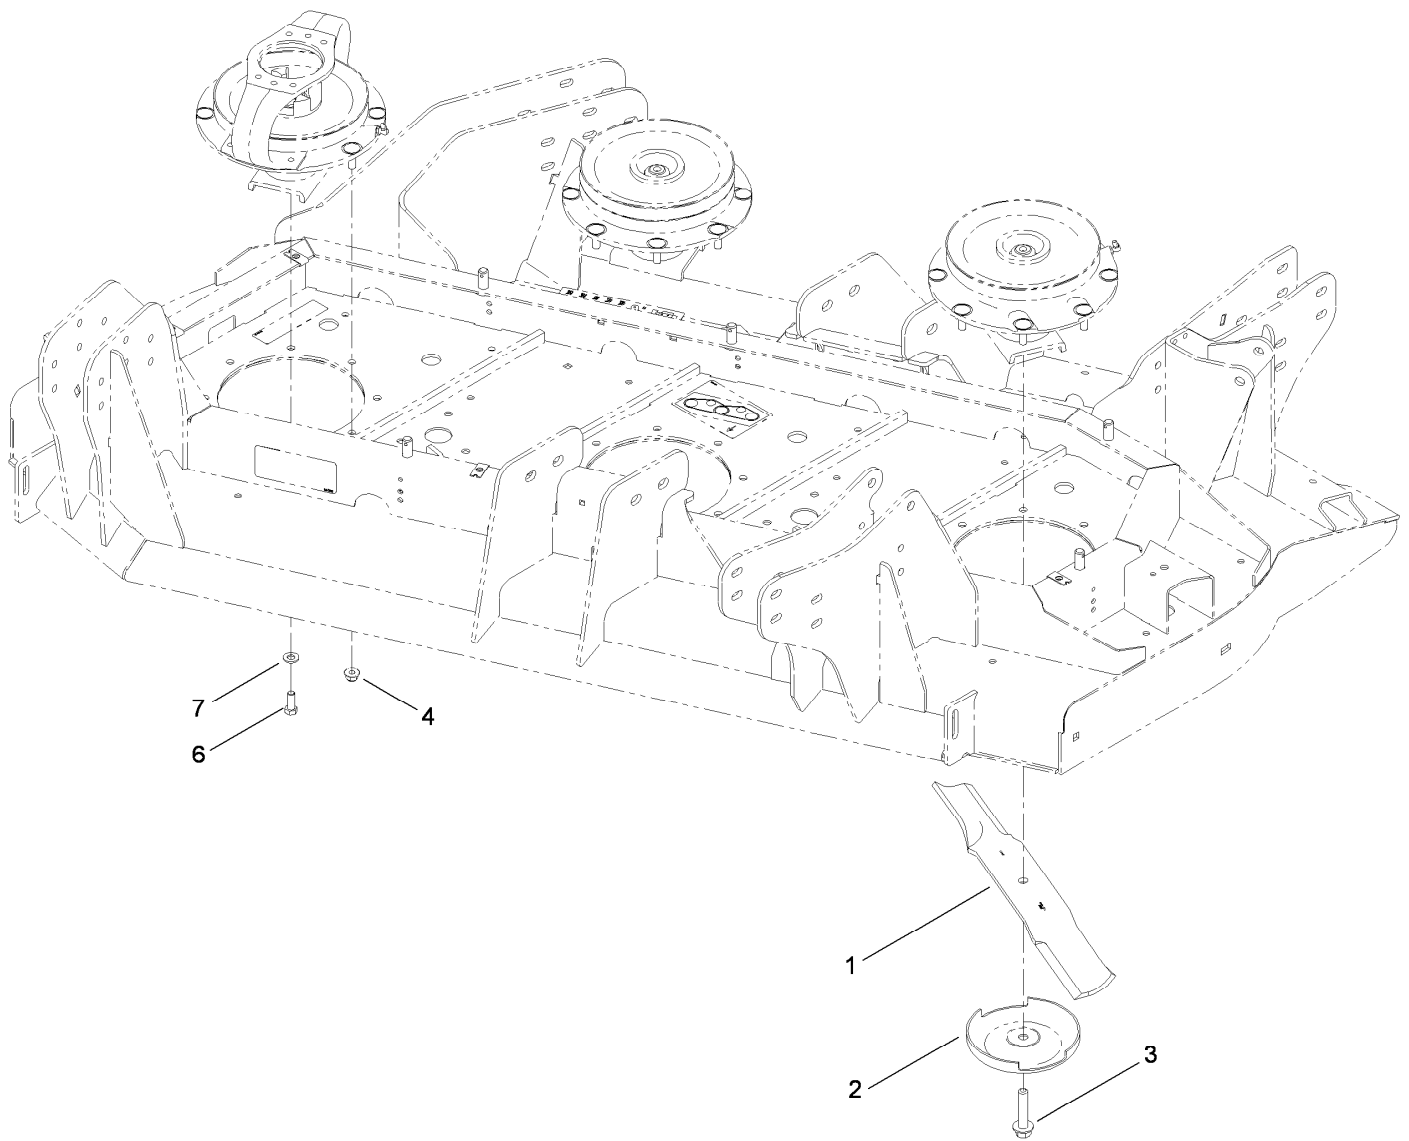 

Right Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	110-5946-03	3	Blade-Rotary
1	110-5948-03	3	Blade-Rotary, Atomic ●
2	72-9361	3	Cup-Scalp, Anti
3	92-5816	3	Bolt-Blade
4	104-8301	20	Nut-HF, NI
6	323-6	4	Screw-HH
7	3256-24	4	Washer-Flat

 ● Not illustrated

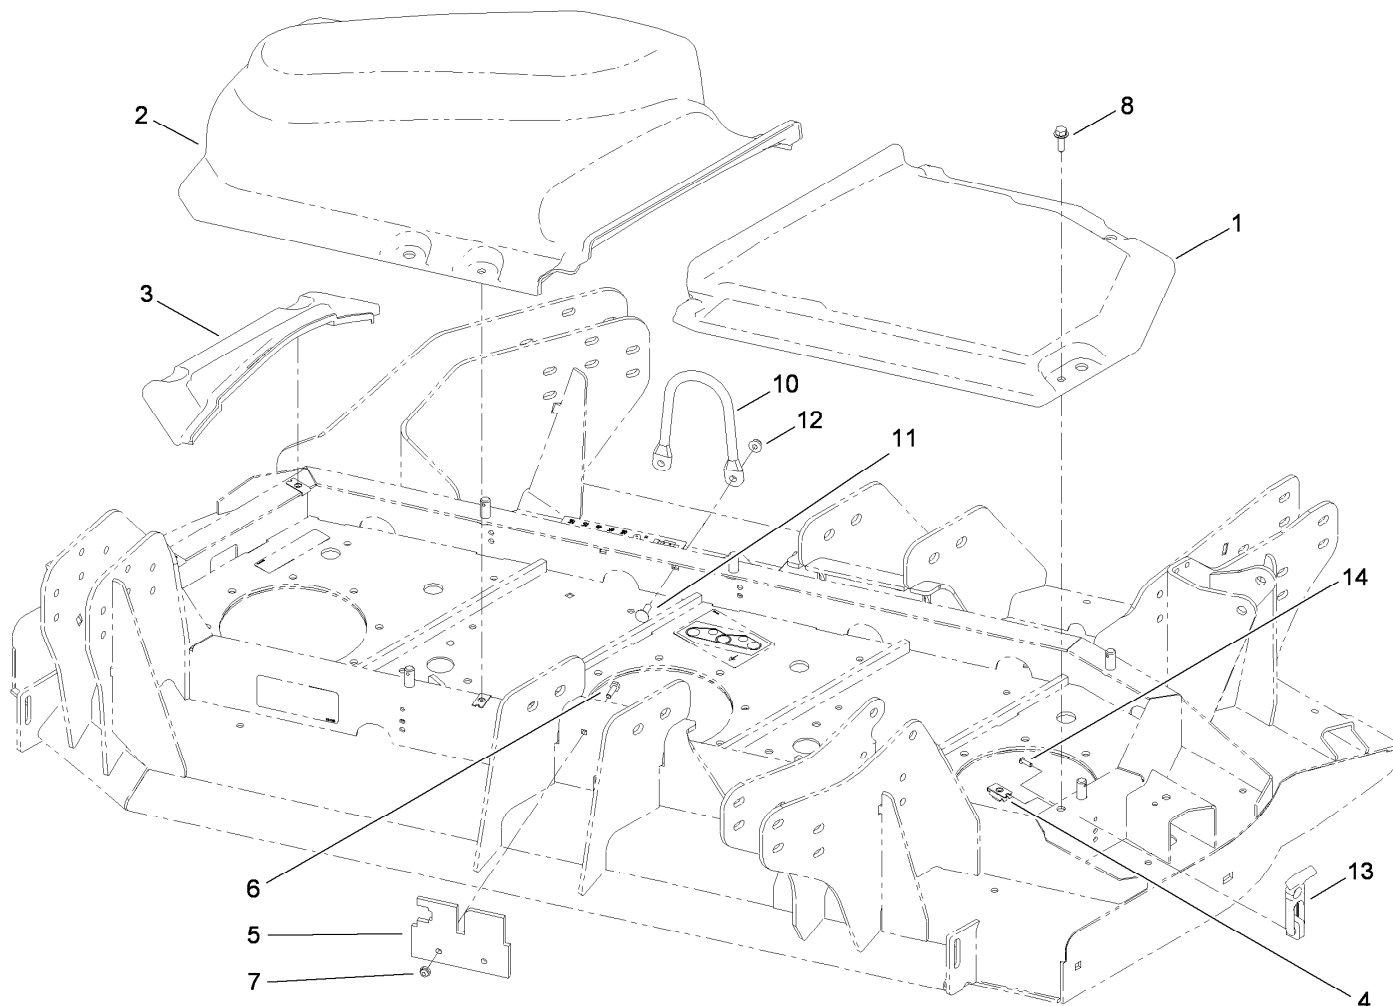


Right Deck Belt Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-5635	1	Cover-Deck, RH Wing (Inside)
2	114-5636	1	Cover-Deck, RH Wing (Outside)
3	114-5638	1	Cover-Deck, RH Wing (Fixed)
4	110-3510	4	Nut-Retainer
5	115-3363	1	Deflector-Debris, Side Deck
6	321-5	2	Screw-HH
7	104-7201	2	Nut-HF
8	3234-29	4	Screw-HHF
10	115-3362	1	Guide-Hose
11	3230-10	2	Bolt-CARR
12	104-8300	2	Nut-HF, NI
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

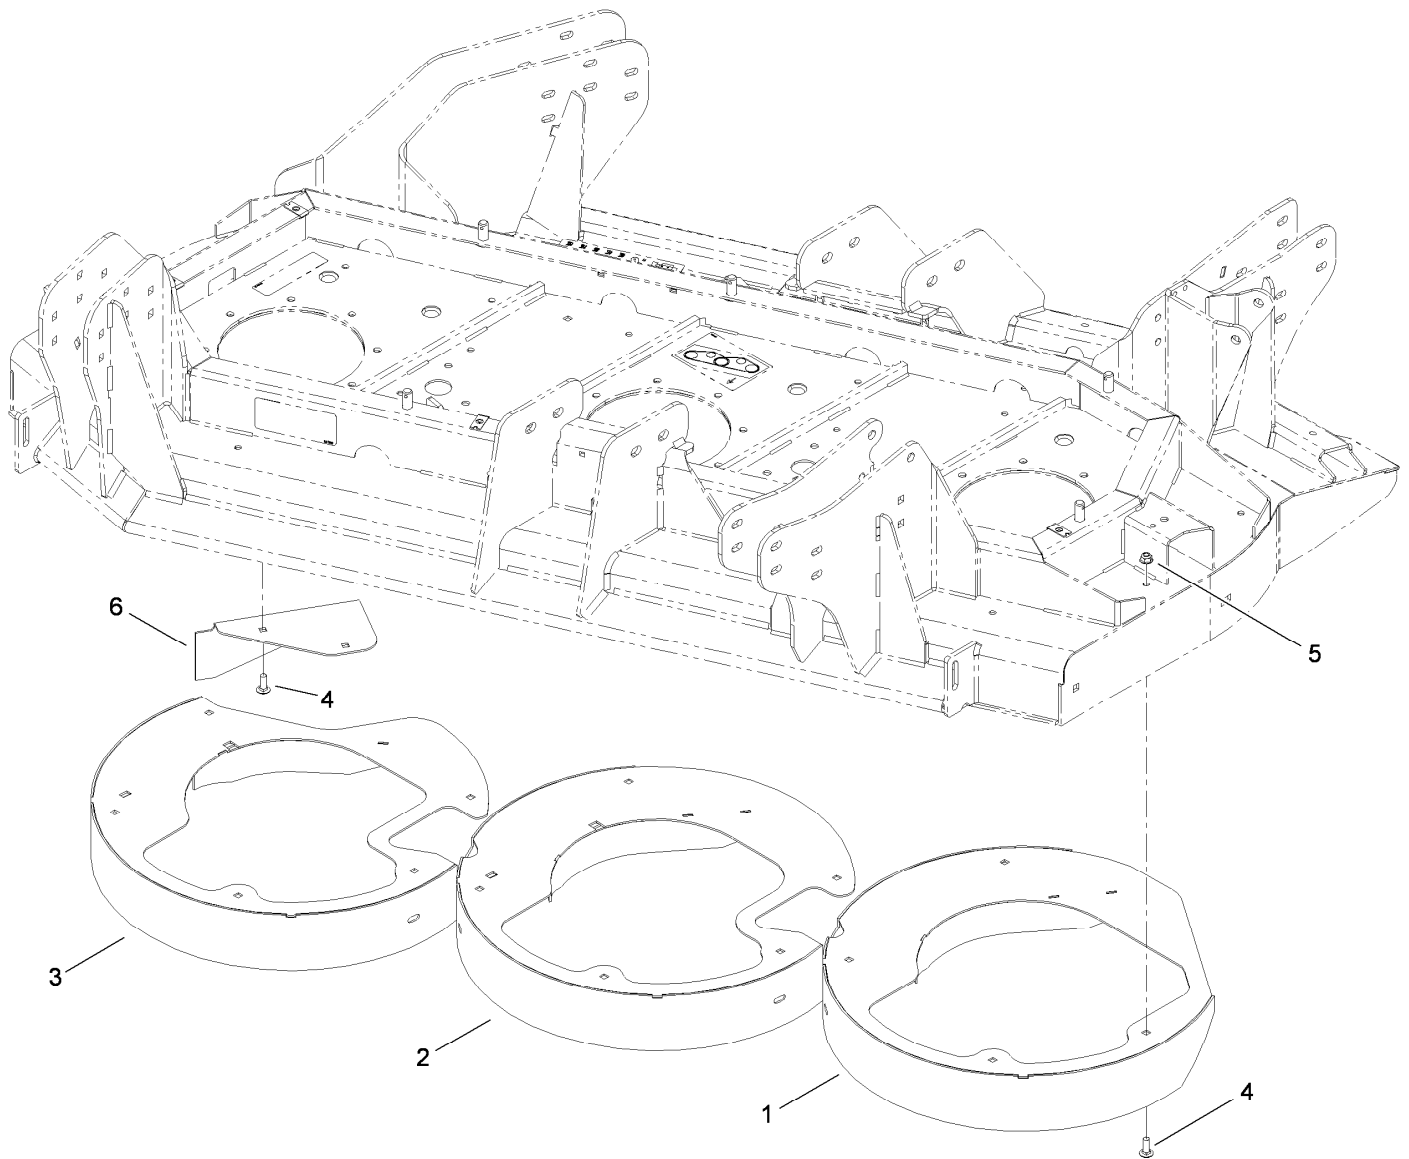 


Right Deck Chamber Assembly

Ref.	Part Number	Qty.	Description
1	115-2125-01	1	Chamber-Inner, Right Deck
2	115-2126-01	1	Chamber-Center, Right Deck
3	115-2127-01	1	Chamber-Outer, Right Deck
4	3230-10	16	Bolt-CARR
5	104-8300	16	Nut-HF, NI
6	115-2146-01	1	Baffle-Deflector

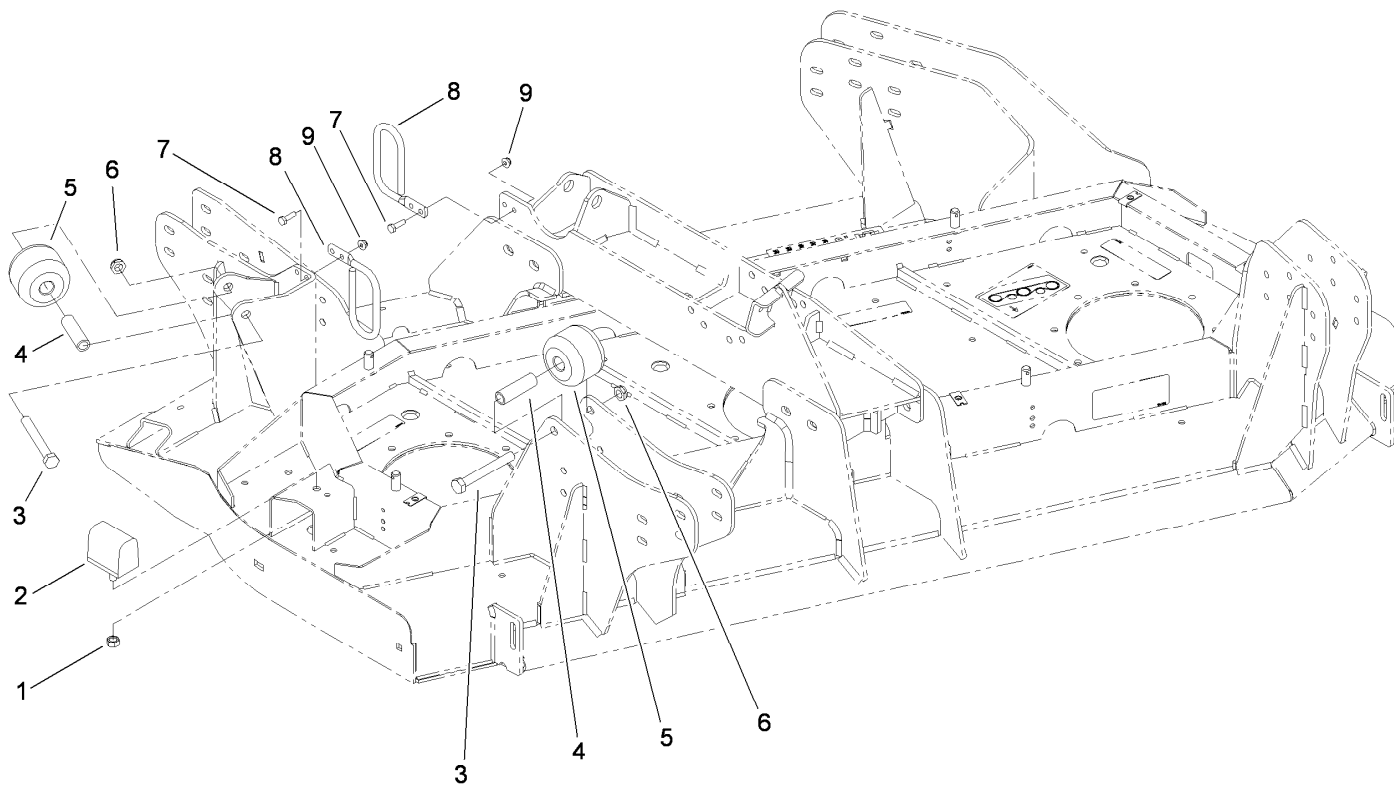 

Right Deck Stop and Hose Guide Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	48-9520	1	Nut
2	87-3470	1	Bumper
3	325-17	2	Screw-HH
4	115-2144	2	Tube-Spacer
5	115-3366	2	Roller
6	3296-45	2	Nut-Hex
7	321-5	4	Screw-HH
8	114-5918	2	Support-Hose
9	104-7201	4	Nut-HF

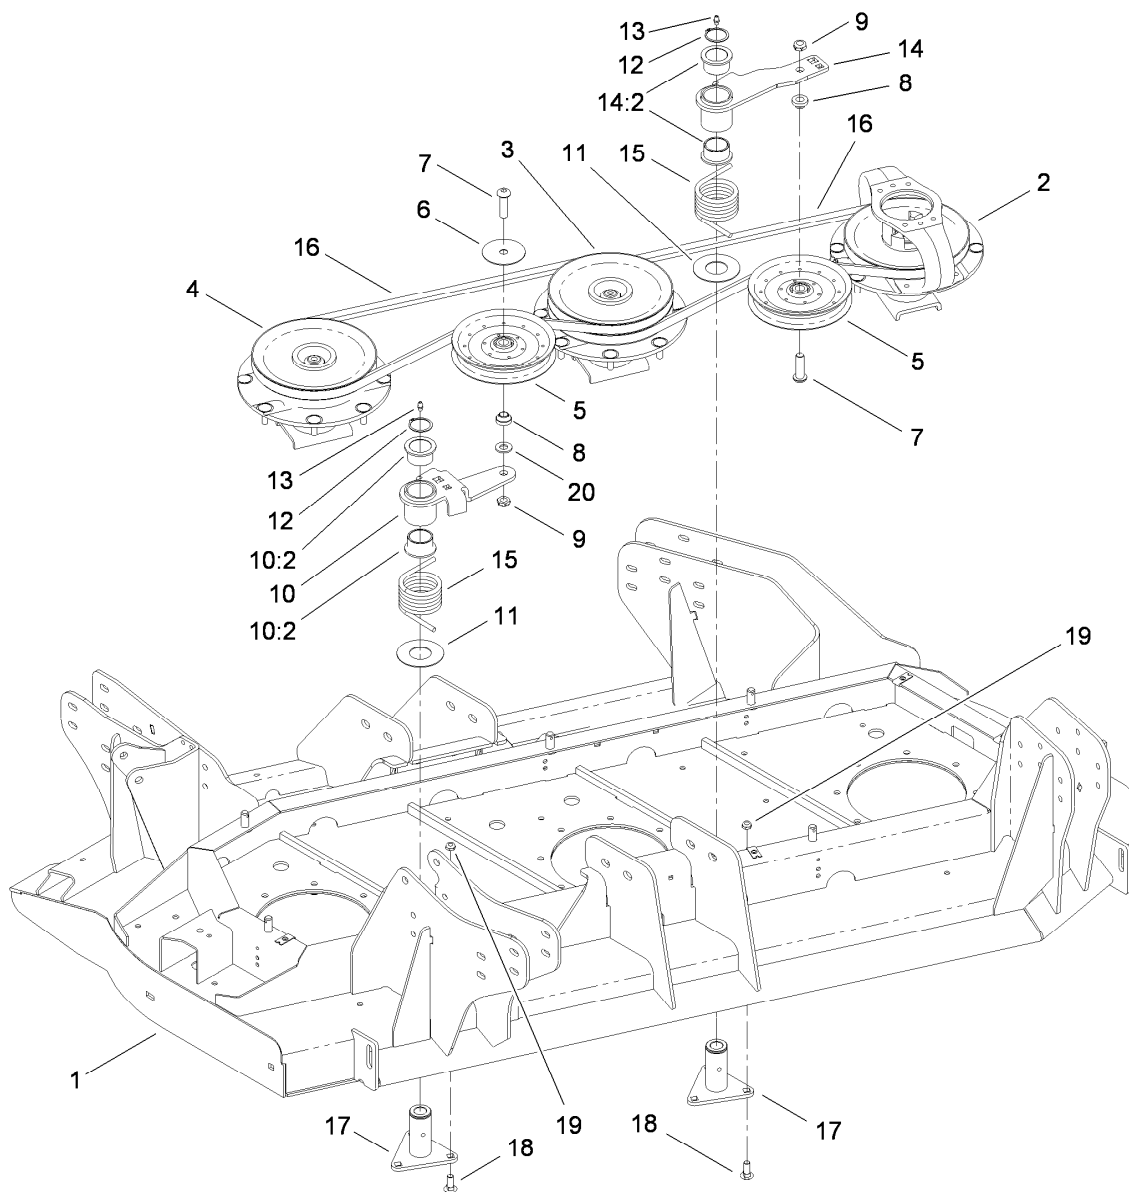 

Left Deck Belt and Pulley Assembly


Ref.	Part Number	Qty.	Description
1	110-5931	1	Left Deck And Decal ASM
2	119-4547	1	Driving Spindle ASM
3	119-4548	1	Double Driven Spindle ASM
4	119-4549	1	High-Driven Spindle ASM
5	110-9596	2	Pulley-Idler
6	100-3102	1	Washer-Flat
7	108-1993	2	Screw-HSBH
8	108-1924	2	Spacer-Idler
9	3296-45	2	Nut-Hex
10	117-9176	1	Idler Arm ASM
10:2	93-4510	2	Bushing-Caster

Ref.	Part Number	Qty.	Description
11	108-1926	2	Washer
12	32120-84	2	Ring-Snap, External
13	302-5	2	Fitting-Grease
14	108-1930	1	Idler Arm ASM
14:2	93-4510	2	Bushing-Caster
15	108-1921	2	Spring-Torsion
16	112-7377	2	Belt-V, B
17	114-0997	2	Pivot-Idler
18	3231-2	6	Bolt-CARR
19	3296-59	6	Nut-Lock, NI
20	3256-26	1	Washer-Flat

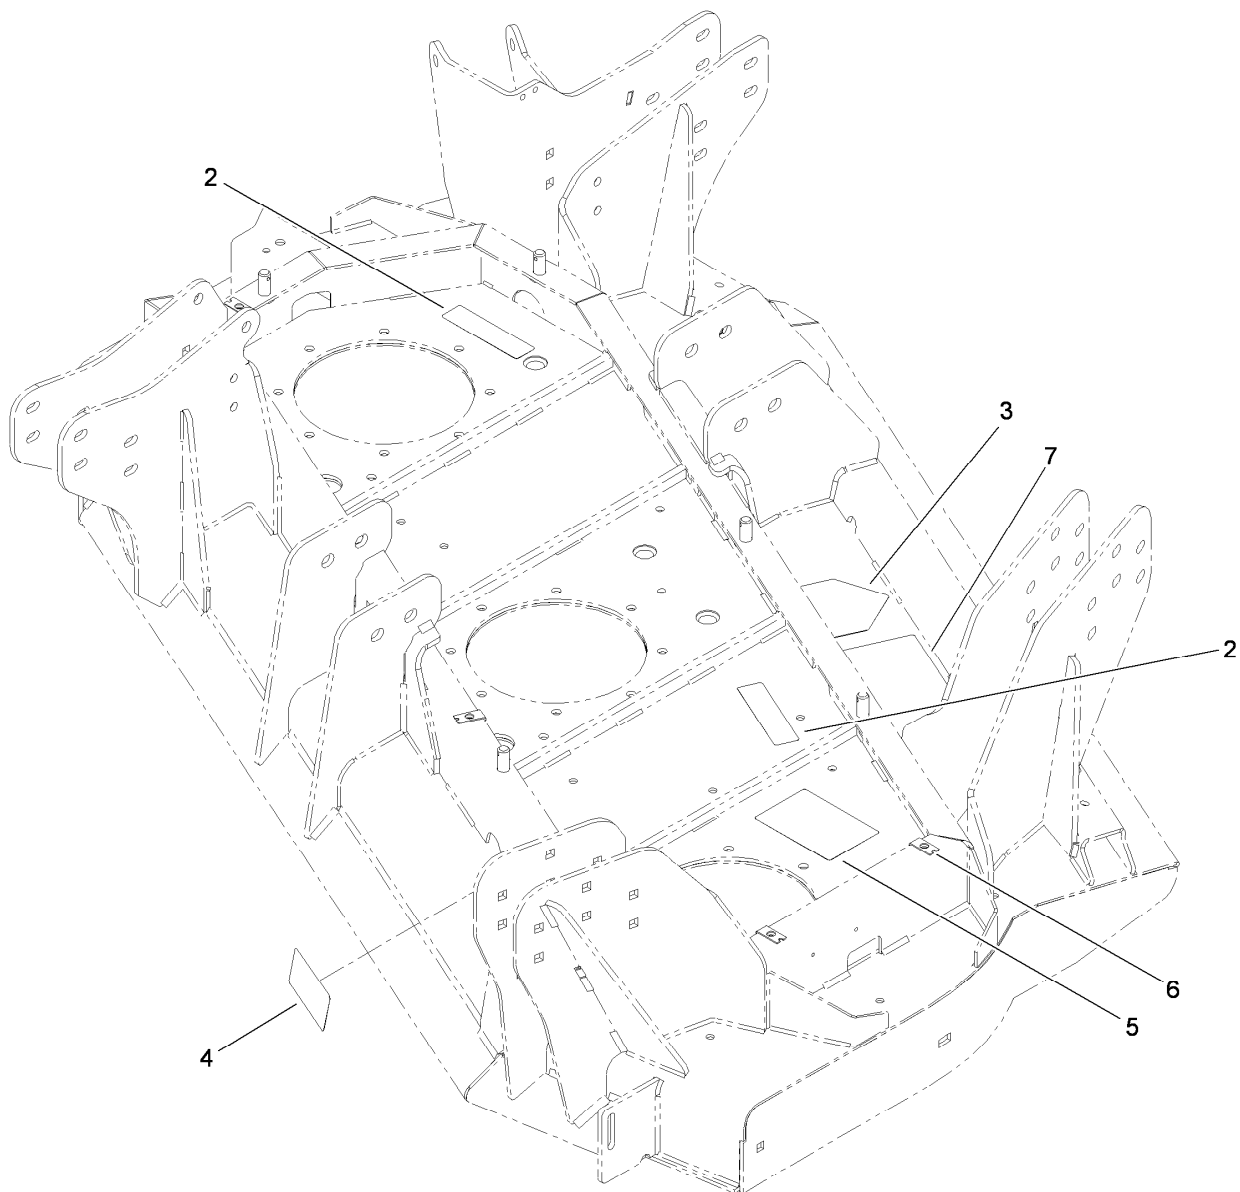 

Left Deck Decal Assembly No. 110-5931


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	100-6578	3	Decal-Danger
3	106-6753	1	Decal-Danger, CE
4	93-7818	1	Decal-Torque, Blade Bolt
5	114-4883	1	Decal-Belt Routing, Deck (LH)
6	110-3510	4	Nut-Retainer
7	114-0975	1	Decal-HOC

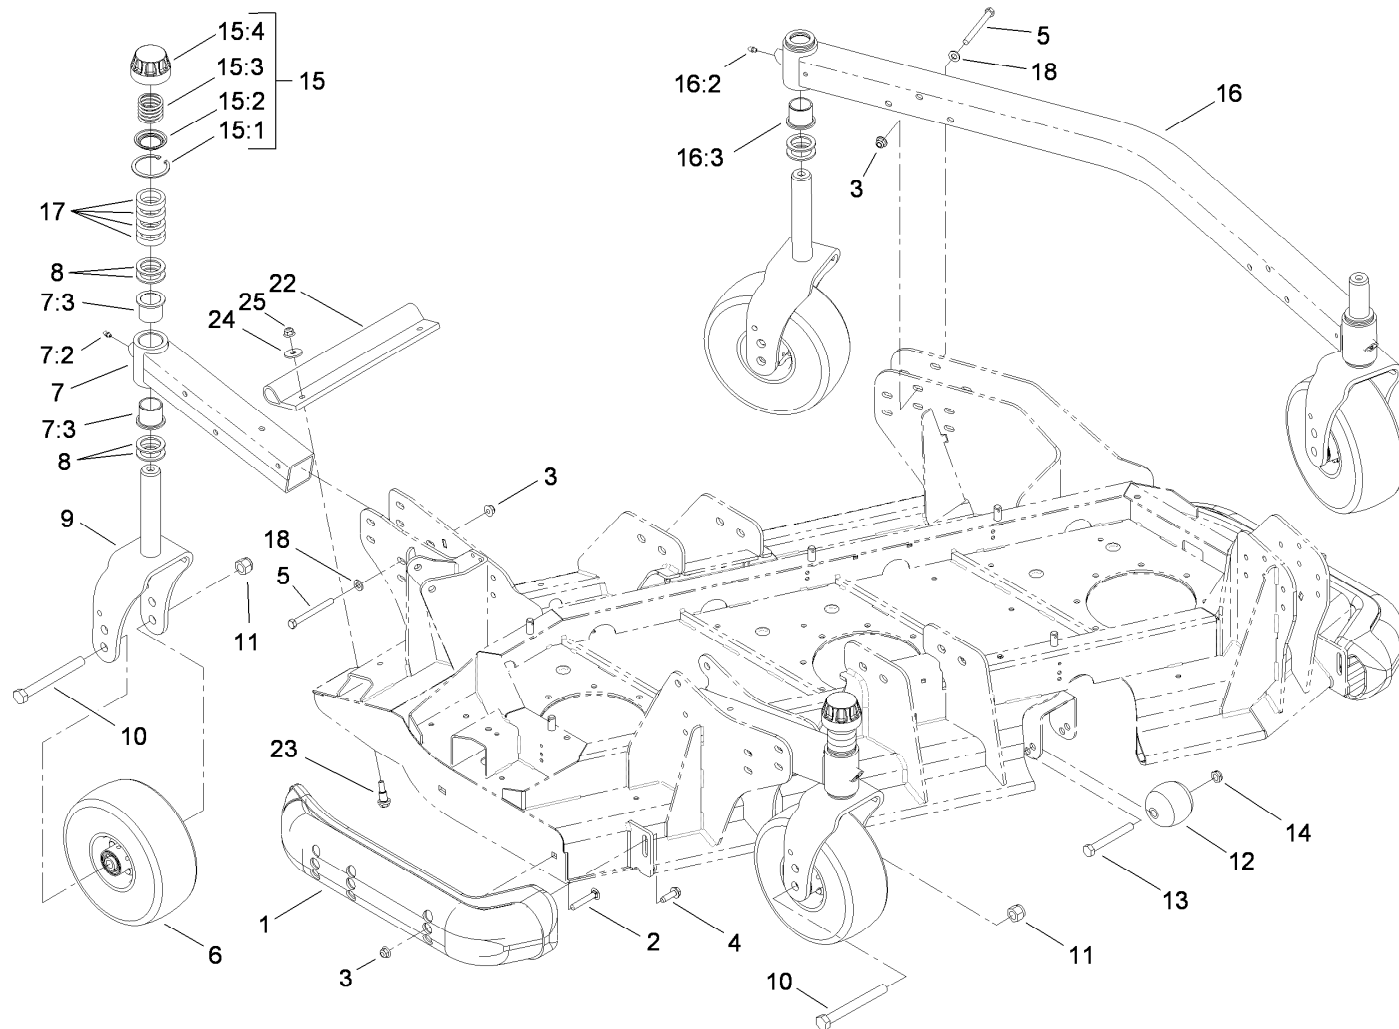 

Left Deck Roller, Skid and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	112-1479	2	Skid-Bumper, Deck
2	3231-33	4	Screw-CARR
3	104-8301	16	Nut-HF, NI
4	9136144	2	Screw-HWHTF
5	323-42	12	Screw-HH
6	93-4240	4	10 Inch Wheel ASM
7	110-6040	2	Castor Arm ASM
7:2	302-5	1	Fitting-Grease
7:3	69-6470	2	Bushing-Castor
8	69-6860	16	Washer-Thrust
9	110-5999-01	4	Castor Fork ASM
10	327-24	4	Screw-HH
11	3296-53	4	Nut-Lock, NI
12	29-4820	2	Roller
13	325-17	2	Screw-HH


Ref.	Part Number	Qty.	Description
14	3296-45	2	Nut-Hex
15	92-9727	4	HOC Cap ASM
15:1	92-5581	1	Ring-Retaining
15:2	92-5583	1	Washer-Cap
15:3	92-9726	1	Spring-Compression
15:4	92-8861	1	Cap-HOC
16	114-0953	1	HOC Castor Arm ASM
16:2	302-5	2	Fitting-Grease
16:3	69-6470	4	Bushing-Castor
17	69-1510	16	Spacer
18	3256-24	12	Washer-Flat
22	117-2768	1	Flap-Rubber
23	104-0858	2	Bolt-Shoulder
24	103995	2	Washer
25	104-7201	2	Nut-HF

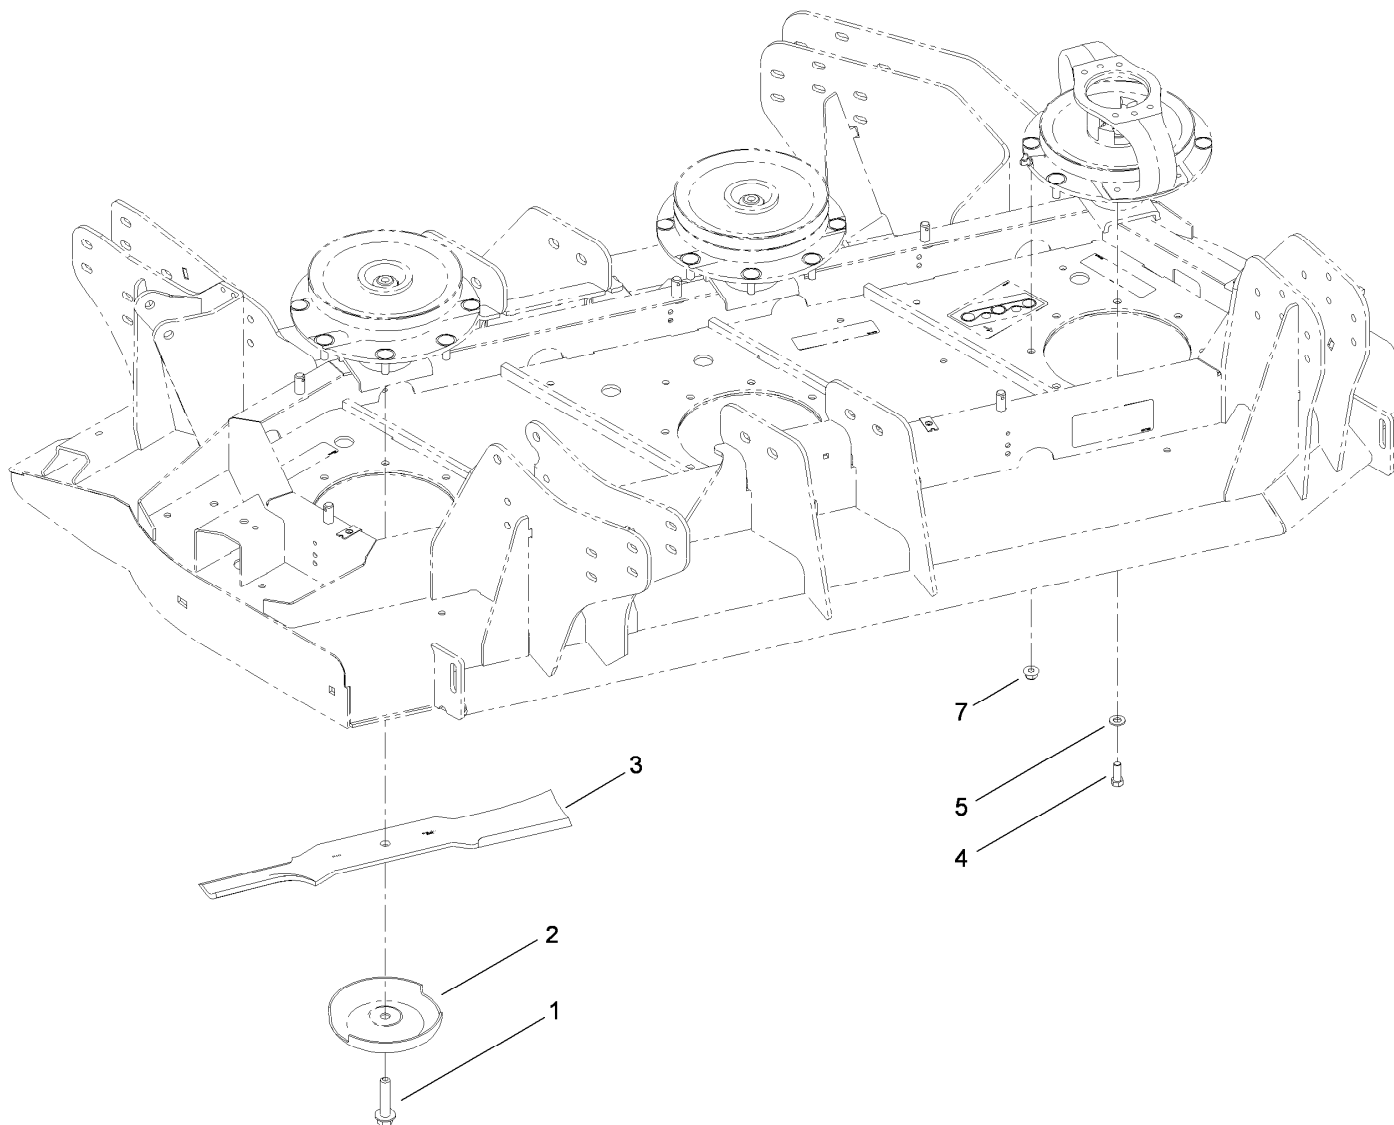 

Left Deck Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	92-5816	3	Bolt-Blade
2	72-9361	3	Cup-Scalp, Anti
3	110-5946-03	3	Blade-Rotary
3	110-5948-03	3	Blade-Rotary, Atomic ●
4	323-6	4	Screw-HH
5	3256-24	4	Washer-Flat
7	104-8301	20	Nut-HF, NI

 ● Not illustrated

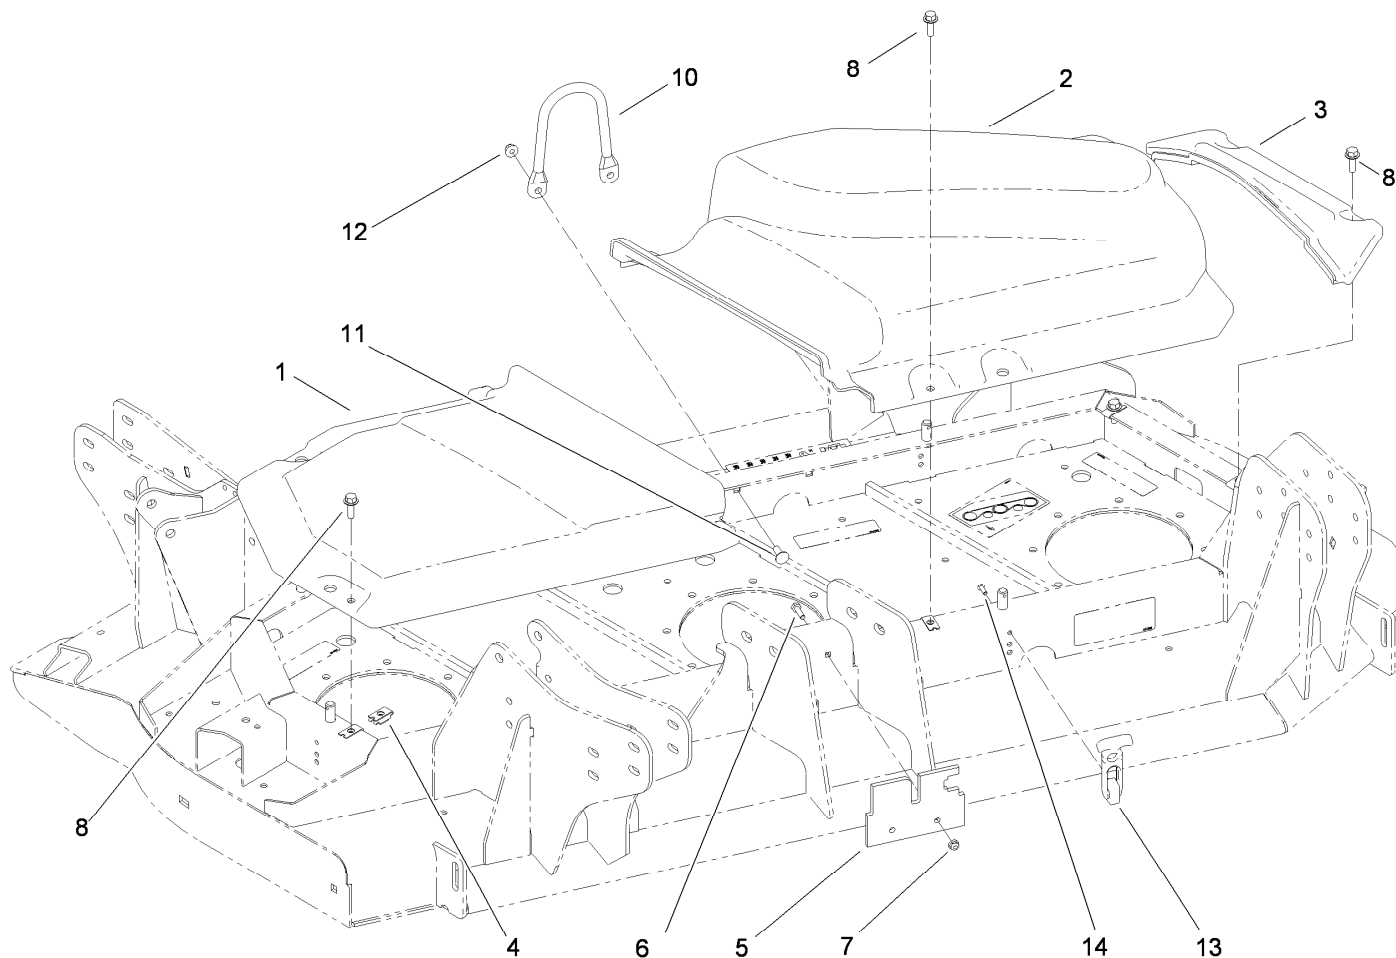


Left Deck Belt Cover Assembly

Ref.	Part Number	Qty.	Description
1	114-5633	1	Cover-Deck, LH Wing (Inside)
2	114-5634	1	Cover-Deck, LH Wing (Outside)
3	114-5637	1	Cover-Deck, LH Wing (Fixed)
4	110-3510	4	Nut-Retainer
5	115-3363	1	Deflector-Debris, Side Deck
6	321-5	2	Screw-HH
7	104-7201	2	Nut-HF
8	3234-29	4	Screw-HHF
10	115-3362	1	Guide-Hose
11	3230-10	2	Bolt-CARR
12	104-8300	2	Nut-HF, NI
13	103-4080	4	Latch-Rubber
14	3274-39	8	Screw-HSBH

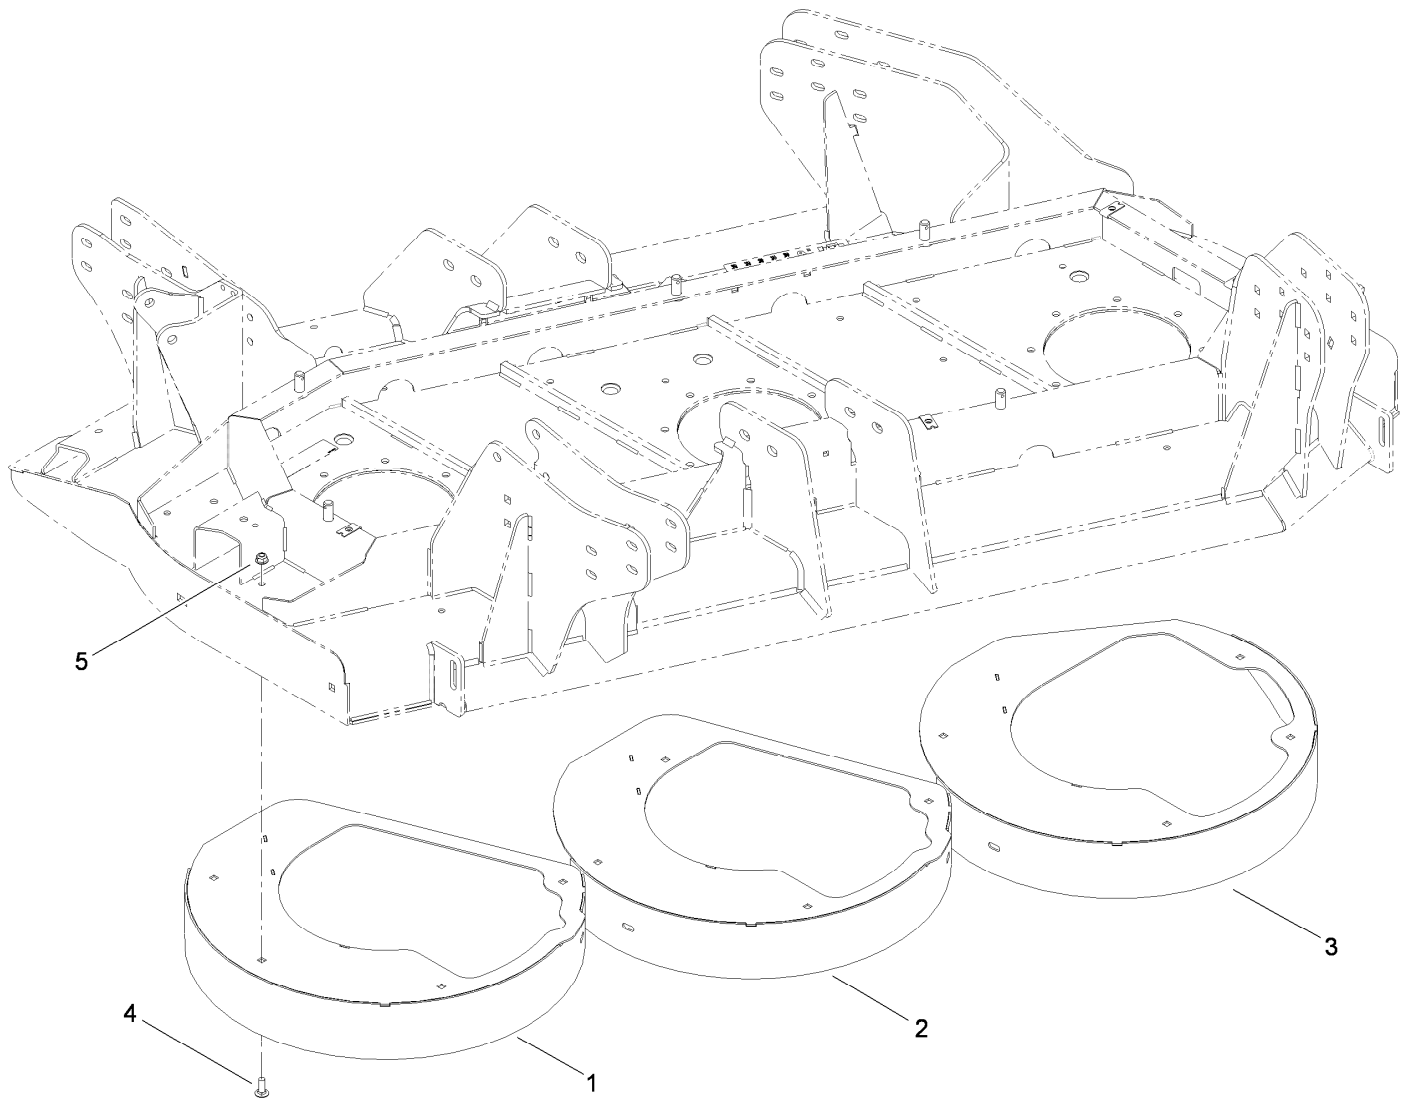 


Left Deck Chamber Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-2107-01	1	Chamber-Inner, Left Deck
2	115-2106-01	1	Chamber-Center, Left Deck
3	115-2105-01	1	Chamber-Outer, Left Deck
4	3230-10	12	Bolt-CARR
5	104-8300	12	Nut-HF, NI

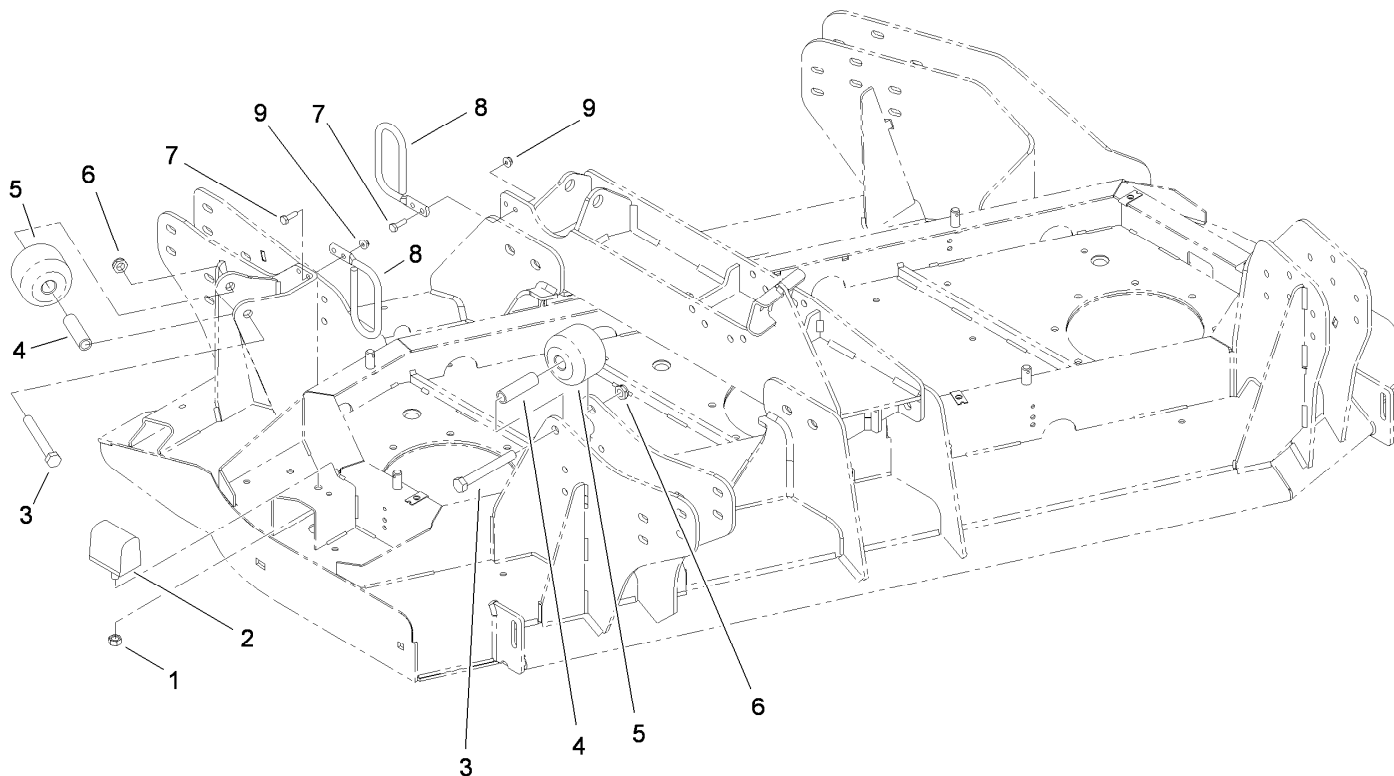 

Left Deck Stop and Hose Guide Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	48-9520	1	Nut
2	87-3470	1	Bumper
3	325-17	2	Screw-HH
4	115-2144	2	Tube-Spacer
5	115-3366	2	Roller
6	3296-45	2	Nut-Hex
7	321-5	4	Screw-HH
8	114-5918	2	Support-Hose
9	104-7201	4	Nut-HF

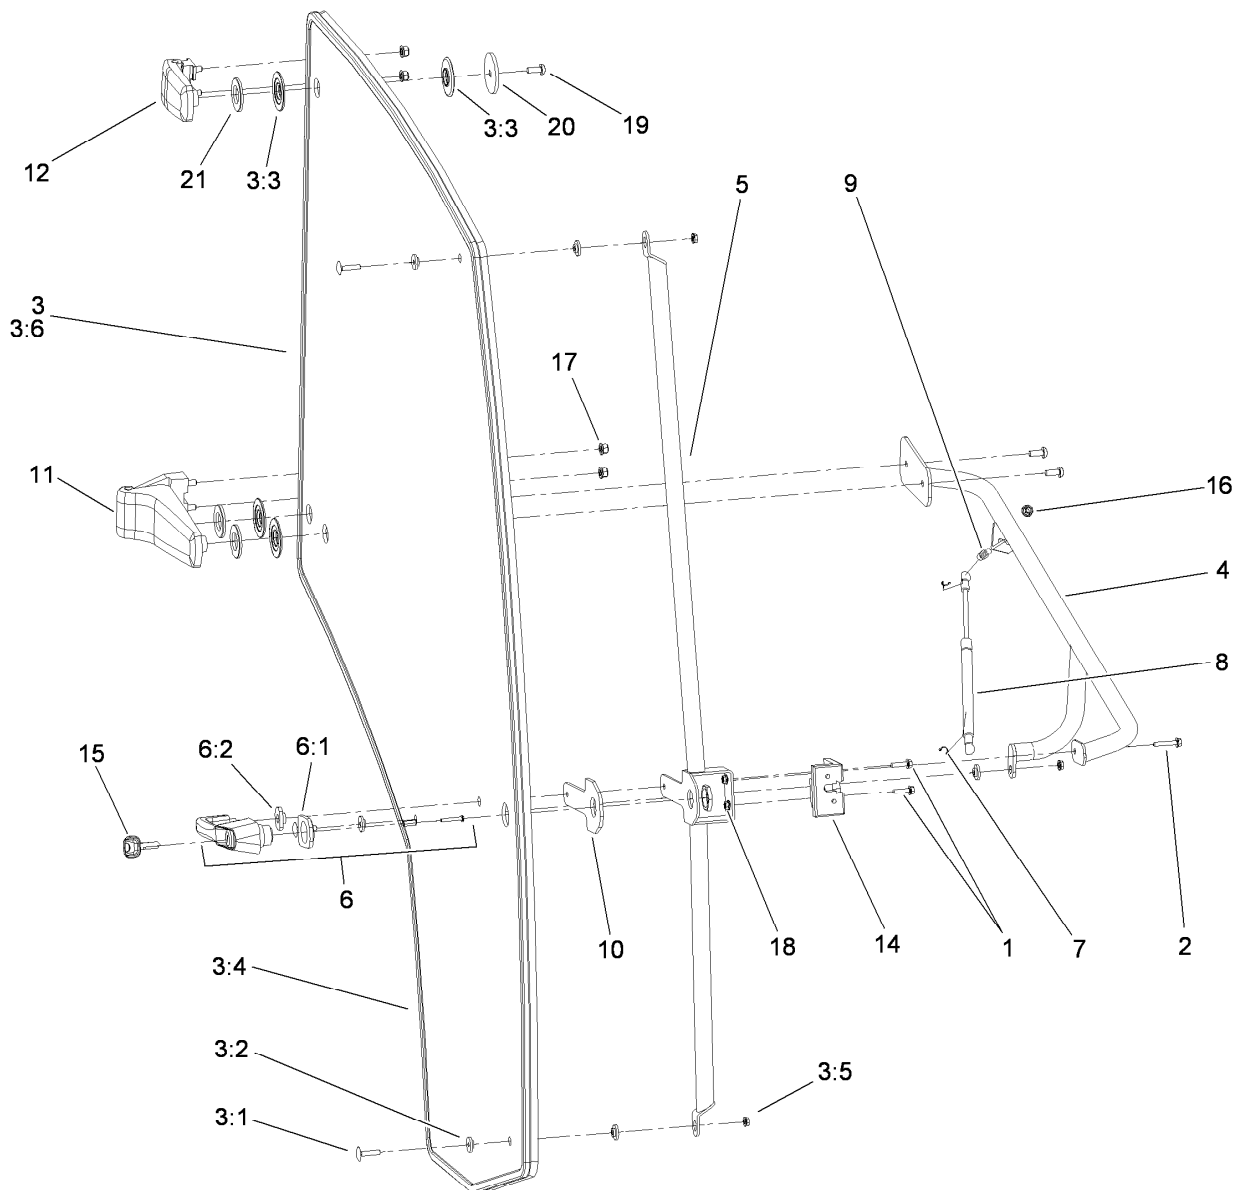 


Right Door Cab Assembly

Ref.	Part Number	Qty.	Description
1	33103-025	2	Screw-HHF
2	33103-035	1	Screw-HHF
3	117-9446	1	RH Door Glass Kit
3:1	115-5571	3	Bolt-Step
3:2	115-5570	6	Bushing-Thin
3:3	115-5572	3	Nut-Flange
3:4	115-5573	6	Washer-Sealing
3:5	115-5567	1	Trim-Seal, Bulb
3:6		1	Glass-Door ●
4	115-5540	1	RH Door Handle ASM
5	115-5542	1	RH Door Latch ASM
6	115-5544	1	Handle-Button, Push
6:1	119-4514	1	Gasket-Large
6:2	119-4515	1	Gasket-Small

Ref.	Part Number	Qty.	Description
7	115-5591	2	Clip-Shock, Gas
8	115-5590	1	Shock-Gas, Long
9	98-3104	1	Stud-Ball
10	115-5546	1	Gasket-Handle
11	115-5532	1	RH Lower Hinge ASM
12	115-5530	1	RH Upper Hinge ASM
14	117-4996	1	RH Rotary Latch ASM
15	115-5545	1	Key-Cab
16	32128-26	1	Nut-Flange
17	104-3082	4	Nut-Lock, HHF
18	81-0130	2	Nut-Flange, NI
19	3274-96	3	Screw-HSBH
20	115-5534	1	Washer
21	115-5528	3	Washer

 ● Not serviced separately

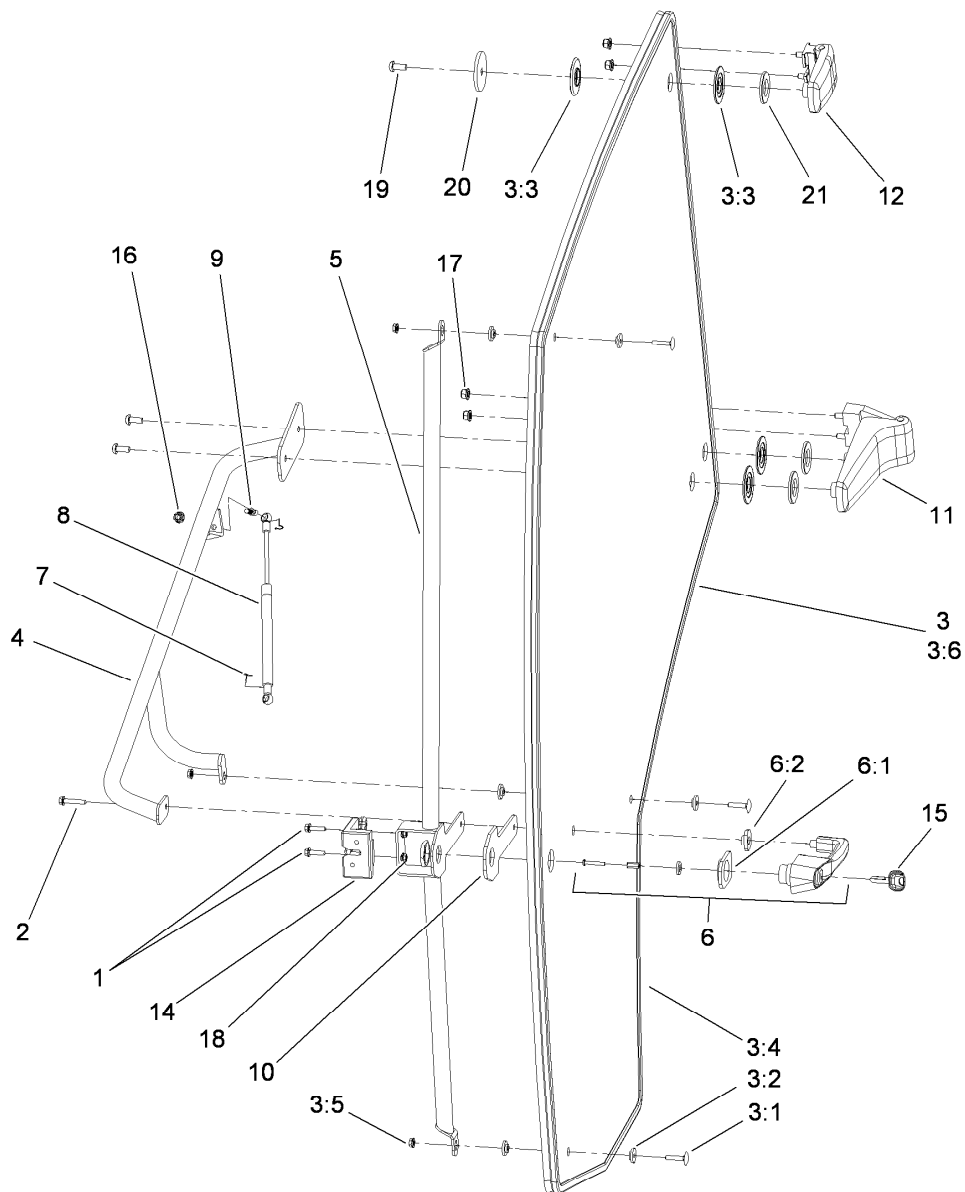


Left Door Cab Assembly

Ref.	Part Number	Qty.	Description
1	33103-025	2	Screw-HHF
2	33103-035	1	Screw-HHF
3	117-9445	1	LH Door Glass Kit
3:1	115-5571	3	Bolt-Step
3:2	115-5570	6	Bushing-Thin
3:3	115-5572	3	Nut-Flange
3:4	115-5573	6	Washer-Sealing
3:5	115-5567	1	Trim-Seal, Bulb
3:6		1	Glass-Door ●
4	115-5541	1	LH Door Handle ASM
5	115-5543	1	LH Door Latch ASM
6	115-5544	1	Handle-Button, Push
6:1	119-4514	1	Gasket-Large
6:2	119-4515	1	Gasket-Small

Ref.	Part Number	Qty.	Description
7	115-5591	2	Clip-Shock, Gas
8	115-5590	1	Shock-Gas, Long
9	98-3104	1	Stud-Ball
10	115-5546	1	Gasket-Handle
11	115-5533	1	LH Lower Hinge ASM
12	115-5531	1	LH Upper Hinge ASM
14	117-4997	1	LH Rotary Latch ASM
15	115-5545	1	Key-Cab
16	32128-26	1	Nut-Flange
17	104-3082	4	Nut-Lock, HHF
18	81-0130	2	Nut-Flange, NI
19	3274-96	3	Screw-HSBH
20	115-5534	1	Washer
21	115-5528	3	Washer

 ● Not serviced separately

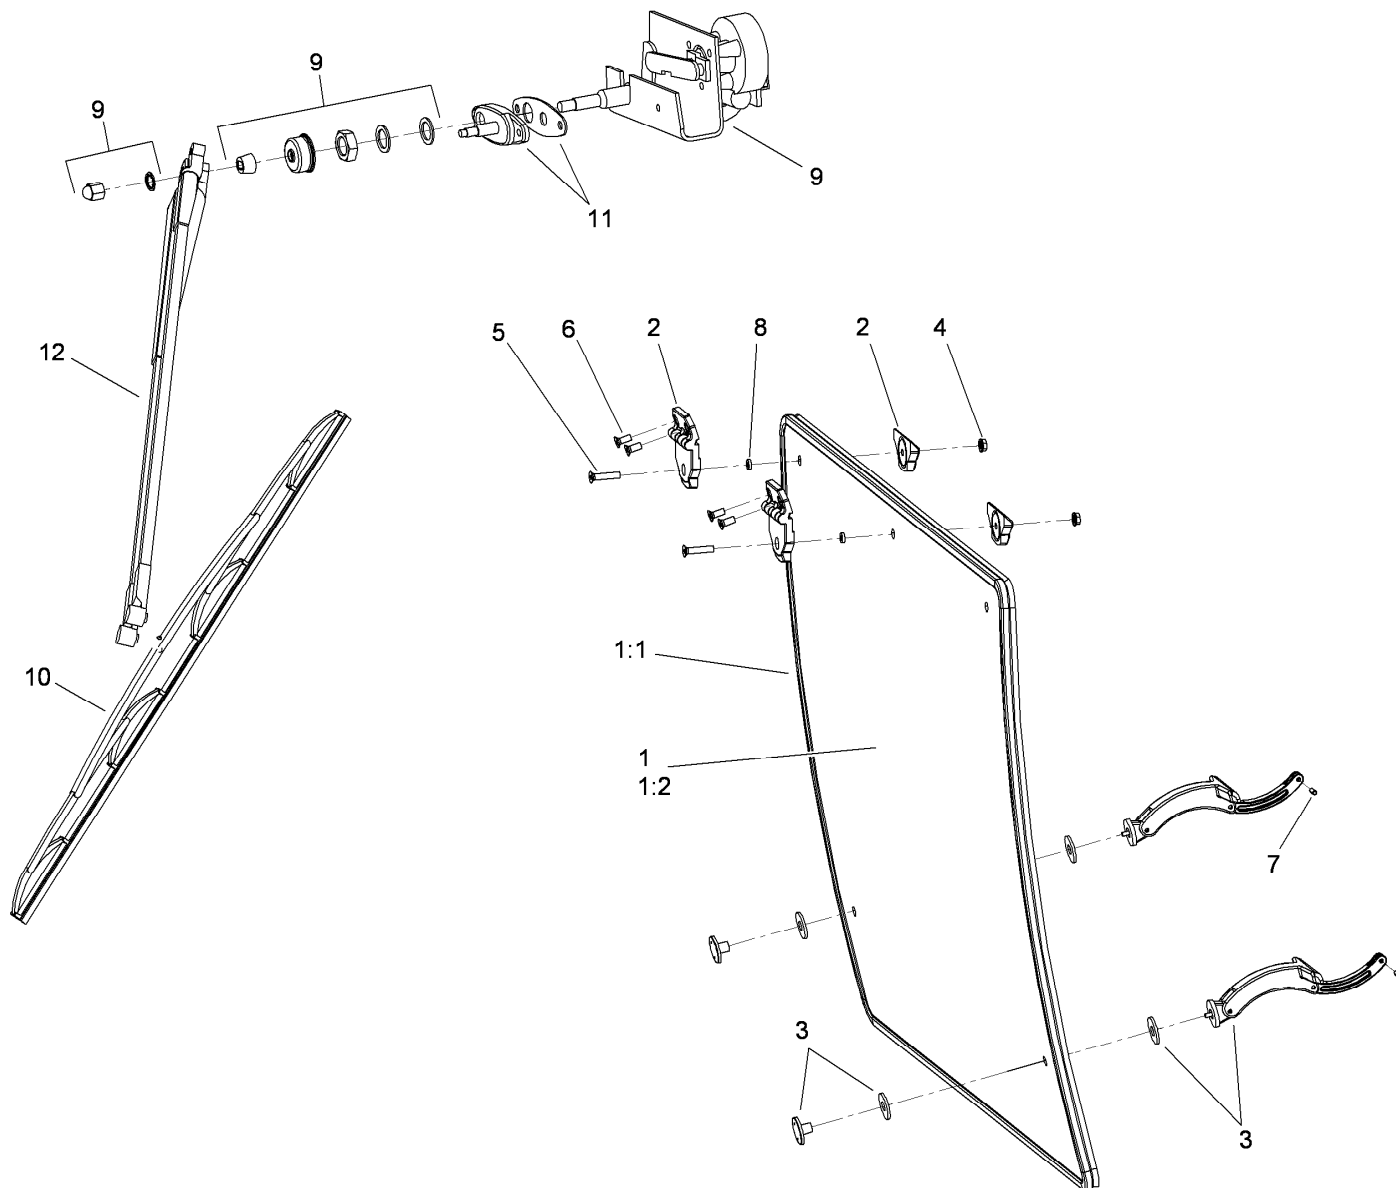


Front/Back Window and Wiper Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-5566	1	Window Glass Kit
1:1	115-5568	1	Trim-Seal, Bulb
1:2		1	Glass-Window ■
2	115-5563	3	Hinge ASM
3	115-5597	2	Handle-Latch
4	32128-26	3	Nut-Flange
5	115-5548	3	Screw-HSFH
6	115-5549	6	Screw-HSFH
7	115-5599	2	Pin-Split
8	115-5598	3	Washer-Rubber
9	115-8831	1	Motor-Wiper
10	115-8834	1	Blade-Wiper, 22 Inch
11	115-8832	1	Adaptor ASM (W/Gasket)
12	115-8833	1	Arm-Wiper, 22 Inch
99	115-5565	1	Lower Windshield Glass Kit ●

● Not illustrated

 
■ Not serviced separately

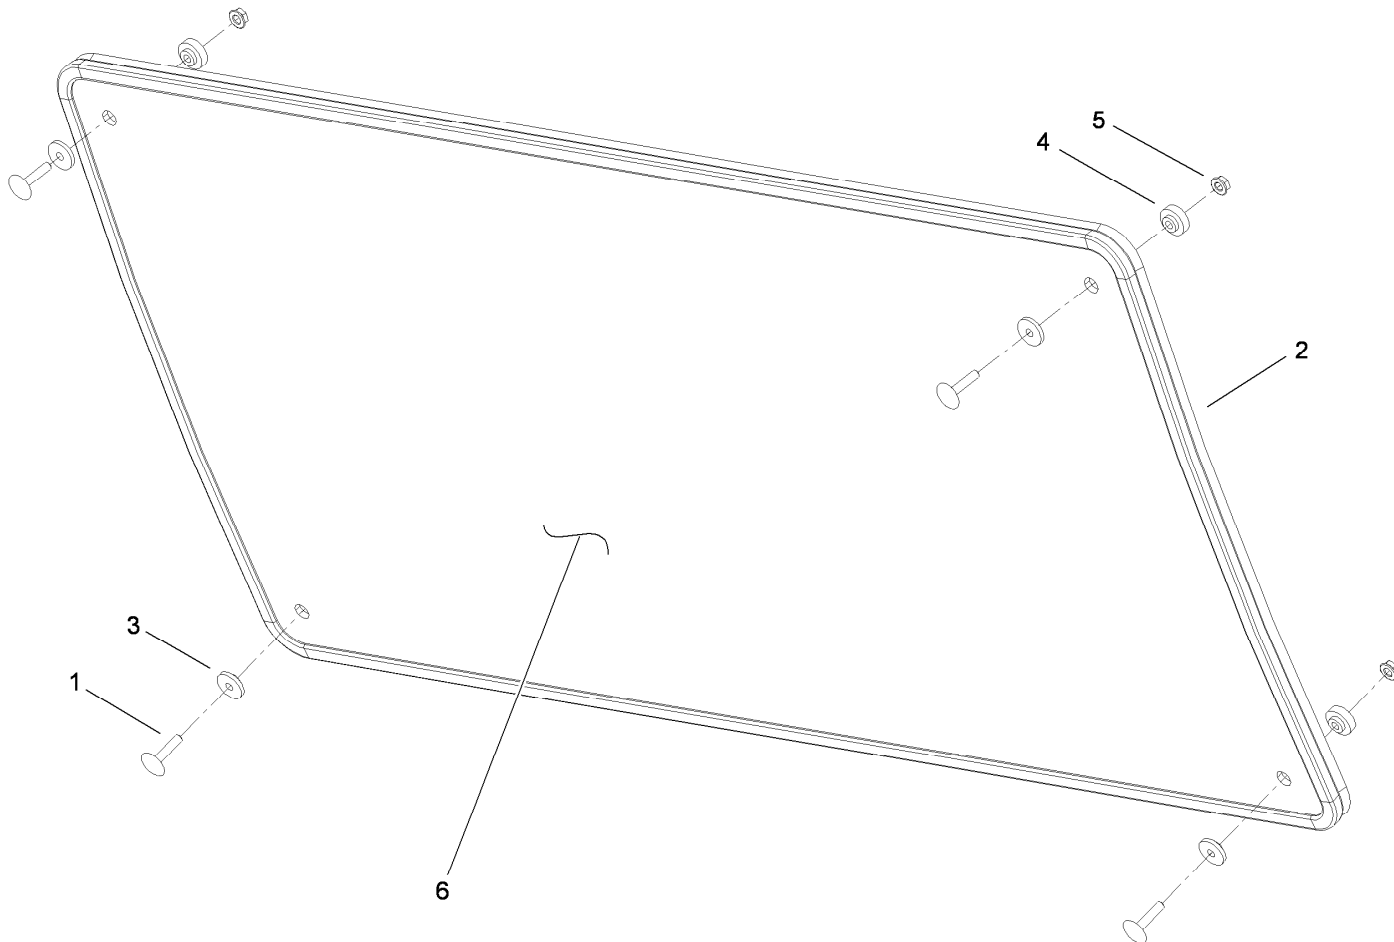

Lower Windshield Glass Assembly No. 115-5565


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-5571	4	Bolt-Step
2	115-5569	1	Trim-Seal, Bulb
3	115-5570	4	Bushing-Thin
4	115-5574	4	Bushing-Thick
5	115-5572	4	Nut-Flange
6		1	Glass-Lower Front ●

 ● Not serviced separately

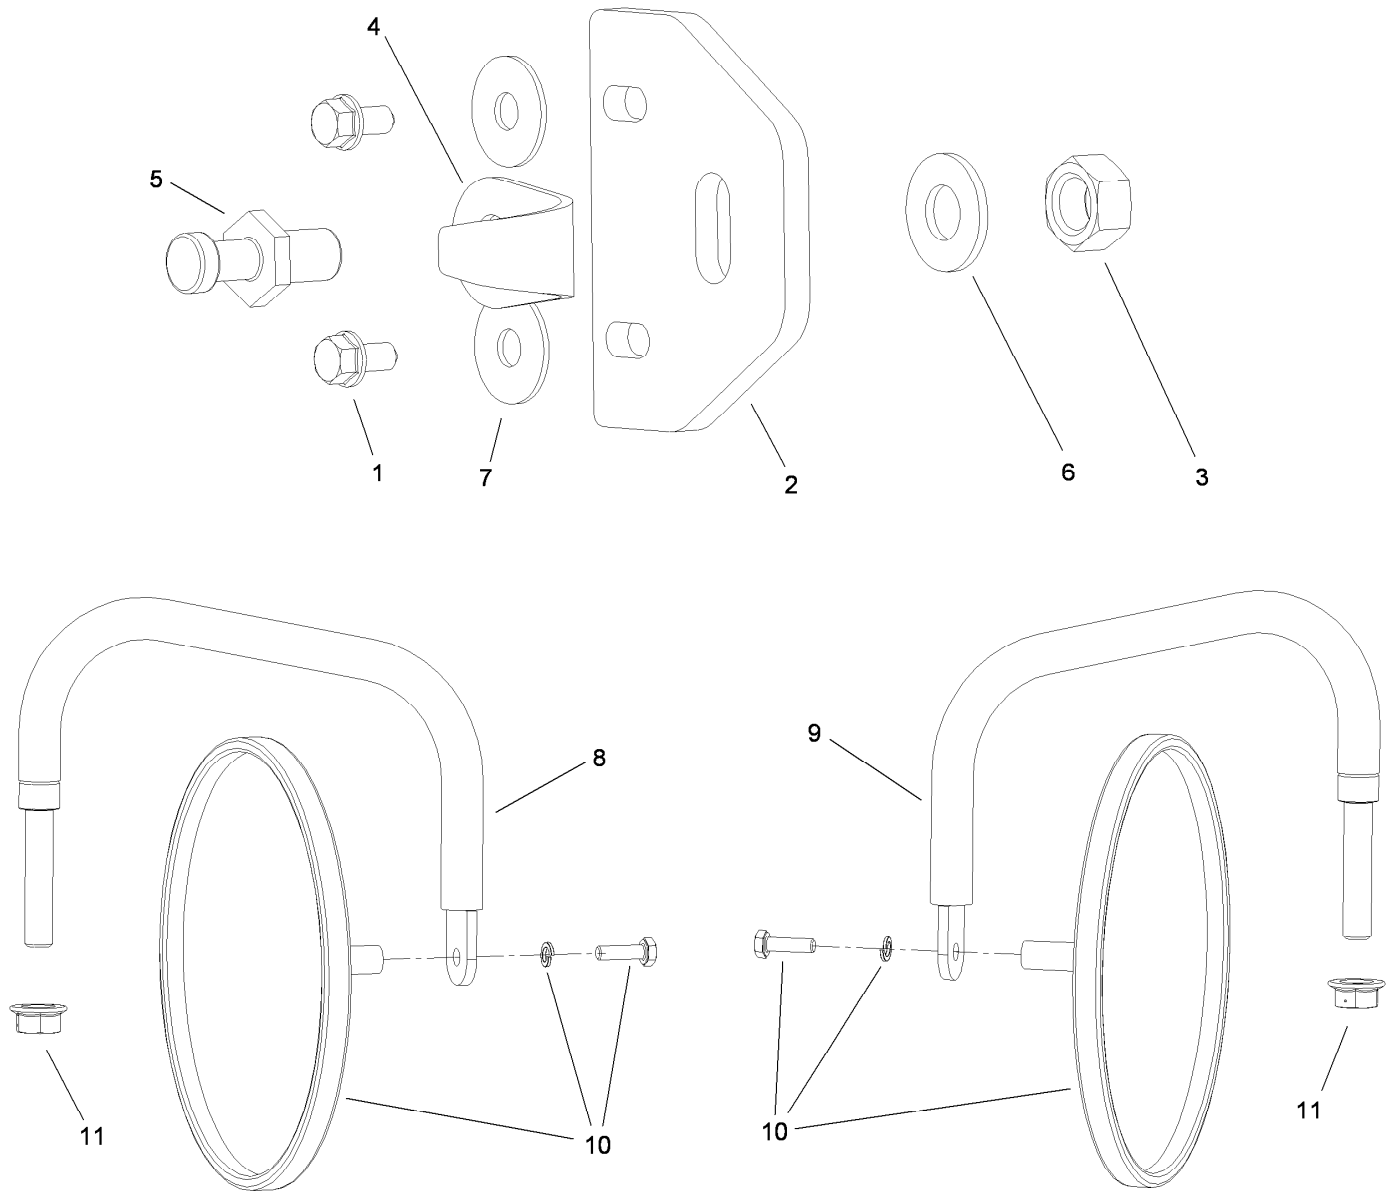

Door Striker and Mirror Cab Assembly


Ref.	Part Number	Qty.	Description
1	3234-13	4	Screw-HHF
2	117-2777	2	Plate-Striker
3	115-5579	2	Nut-HH
4	115-5577	2	Guard-Striker
5	115-5576	2	Striker
6	3256-26	2	Washer-Flat
7	115-5581	4	Washer-Flat
8	115-5583	1	Arm-Mount, Mirror (RH)
9	115-5584	1	Arm-Mount, Mirror (LH)
10	115-5585	2	Mirror-Convex
11	115-5582	2	Nut-Flange, Crimplock

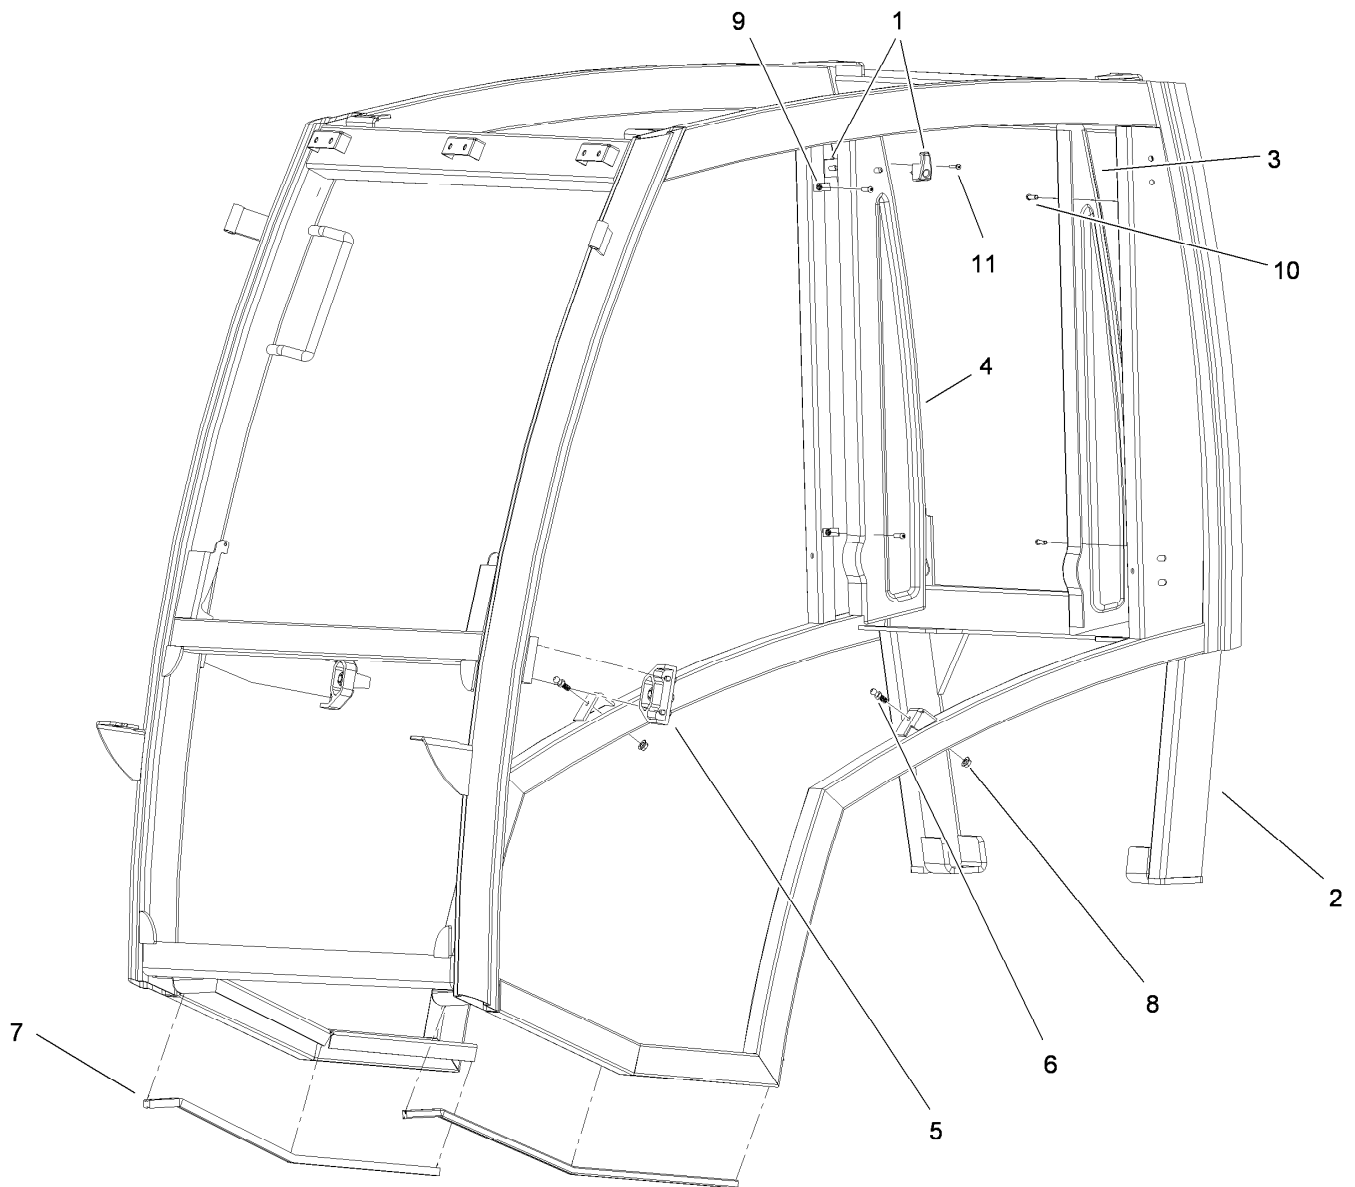 

Shielding Component Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-5595	1	Hook-Coat
2		1	Shielding ASM ●
3	115-5589	1	Cover-Composite, LH
4	115-5588	1	Cover-Composite, RH
5		2	Door Striker ASM ●
6	98-3104	2	Stud-Ball
7	115-5596	2	Seal-Bulb
8	32128-26	2	Nut-Flange
9	115-5586	4	Nut-Panel, Deep
10	3274-65	4	Screw-HSBH
11	115-5594	1	Screw-HSBH

 ● Not serviced separately

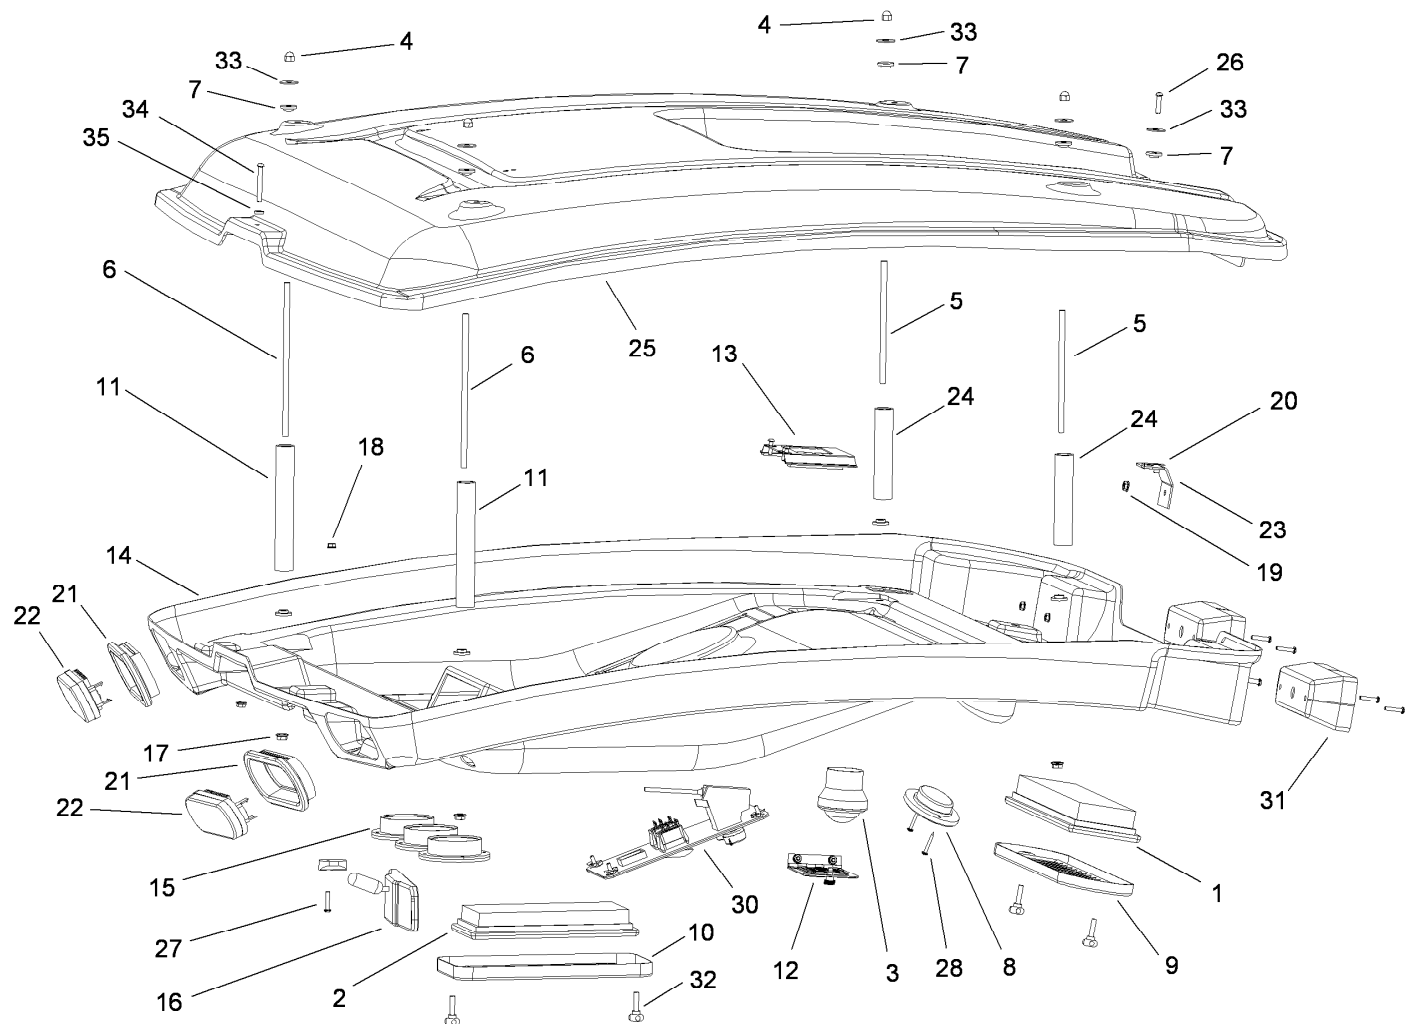


Headliner Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-5553	1	"obs" Ref 121-3892
2	115-5556	1	Filter-Air, Front
3	115-5559	1	Louver-Ball
4	73-5380	4	Nut-Hex
5	117-2763	2	Fastener-Mount, Rear Roof
6	117-2764	2	Fastener-Mount, Front Roof
7	115-5570	10	Bushing-Thin
8	115-5515	1	Light-Dome, LED
9	115-5554	1	Cover-Filter, Rear
10	115-5557	1	Cover-Filter, Front
11	115-5513	2	Spacer-Roof, Front
12		1	Fuse Block Cover ASM ●
13		1	Fuse Block Mount ASM ●
14	115-5550	1	Headliner
15	115-5558	3	Louver
16	115-5524	1	Mirror-Rear View
17	32128-26	4	Nut-Flange

Ref.	Part Number	Qty.	Description
18	32128-17	5	Nut-Lock, Flange
19	115-5572	2	Nut-Flange
20	115-5586	5	Nut-Panel, Deep
21	115-5521	2	Grommet-Light
22	115-5520	2	Light-Warning, Front
23	115-5526	1	Mount-Roof
24	115-5514	2	Spacer-Roof, Rear
25	119-4504	1	Roof
26	3274-65	2	Screw-HSBH
27	108-3153	5	Screw-HSBH
28	115-5594	2	Screw-HSBH
30		1	Switchplate ASM ●
31	115-5525	2	Light-Warning, Rear
32	115-5555	4	Screw-Thumb
33	115-5581	6	Washer-Flat
34	99-2932	1	Screw-HSBH
35	115-5598	1	Washer-Rubber

 ● Not serviced separately

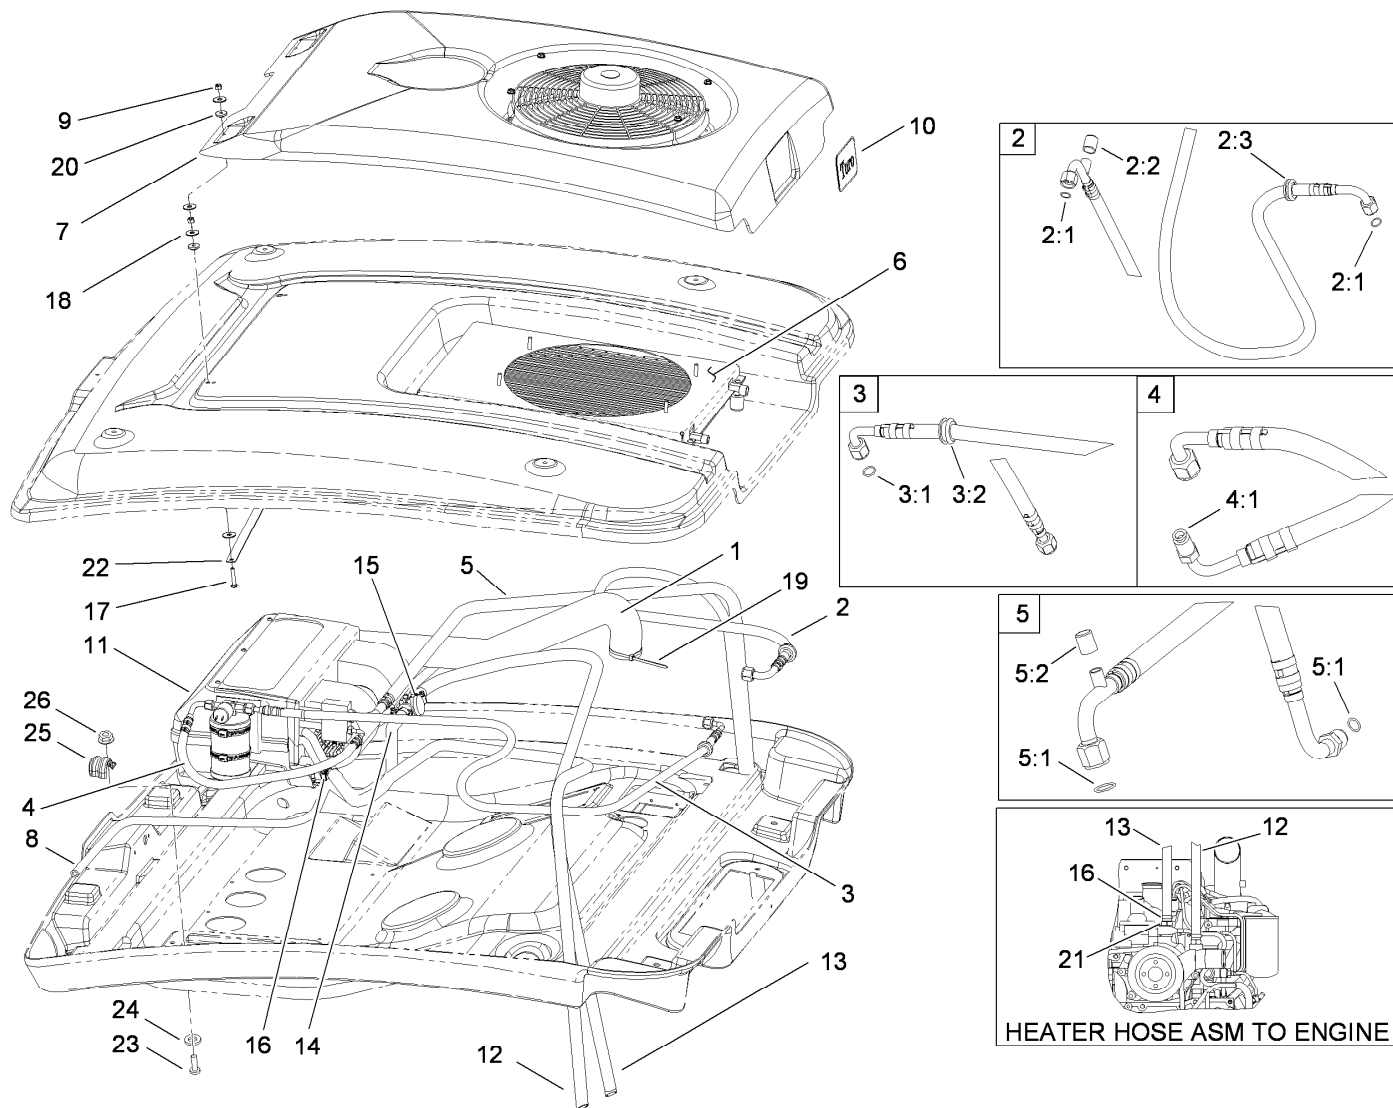


Roof and Hose Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-8835	1	Hose-Air Duct
2	117-2785	1	Hose ASM
2:1	117-2779	2	O-Ring
2:2	117-2783	1	Cap-Side, High
2:3	117-2781	1	Grommet
3	115-8837	1	Hose ASM
3:1	117-2778	2	O-Ring
3:2	117-2782	1	Grommet
4	115-8838	1	Hose ASM
4:1	117-2778	2	O-Ring
5	117-2786	1	Hose ASM
5:1	117-2780	2	O-Ring
5:2	117-2784	1	Cap-Side, Low
6		1	Condenser ASM ●
7	119-4503	1	Cover-Condenser
8	115-8845	2	Hose-Drain, Condensation
9	3296-42	4	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
10	67-1300	1	Decal
11		1	Heater Evaporator ASM ●
12	115-8842	1	Hose
13	115-8843	1	Hose
14	115-8844	1	Hose
15	115-8840	1	Valve-Heater
16	2412-141	4	Clamp-Drive, Worm
17	3229-4	2	Screw-CARR
18	115-5581	8	Washer-Flat
19	3290-379	2	Tie-Cable
20	115-5570	4	Bushing-Thin
21	117-9410	2	Fitting-Straight
22	119-4505	1	Strap-Mounting
23	104-2408	2	Screw-HSBH
24	3256-14	2	Washer-Flat
25	119-4517	2	Clamp-Hose
26	32128-17	2	Nut-Lock, Flange

 
● Not serviced separately

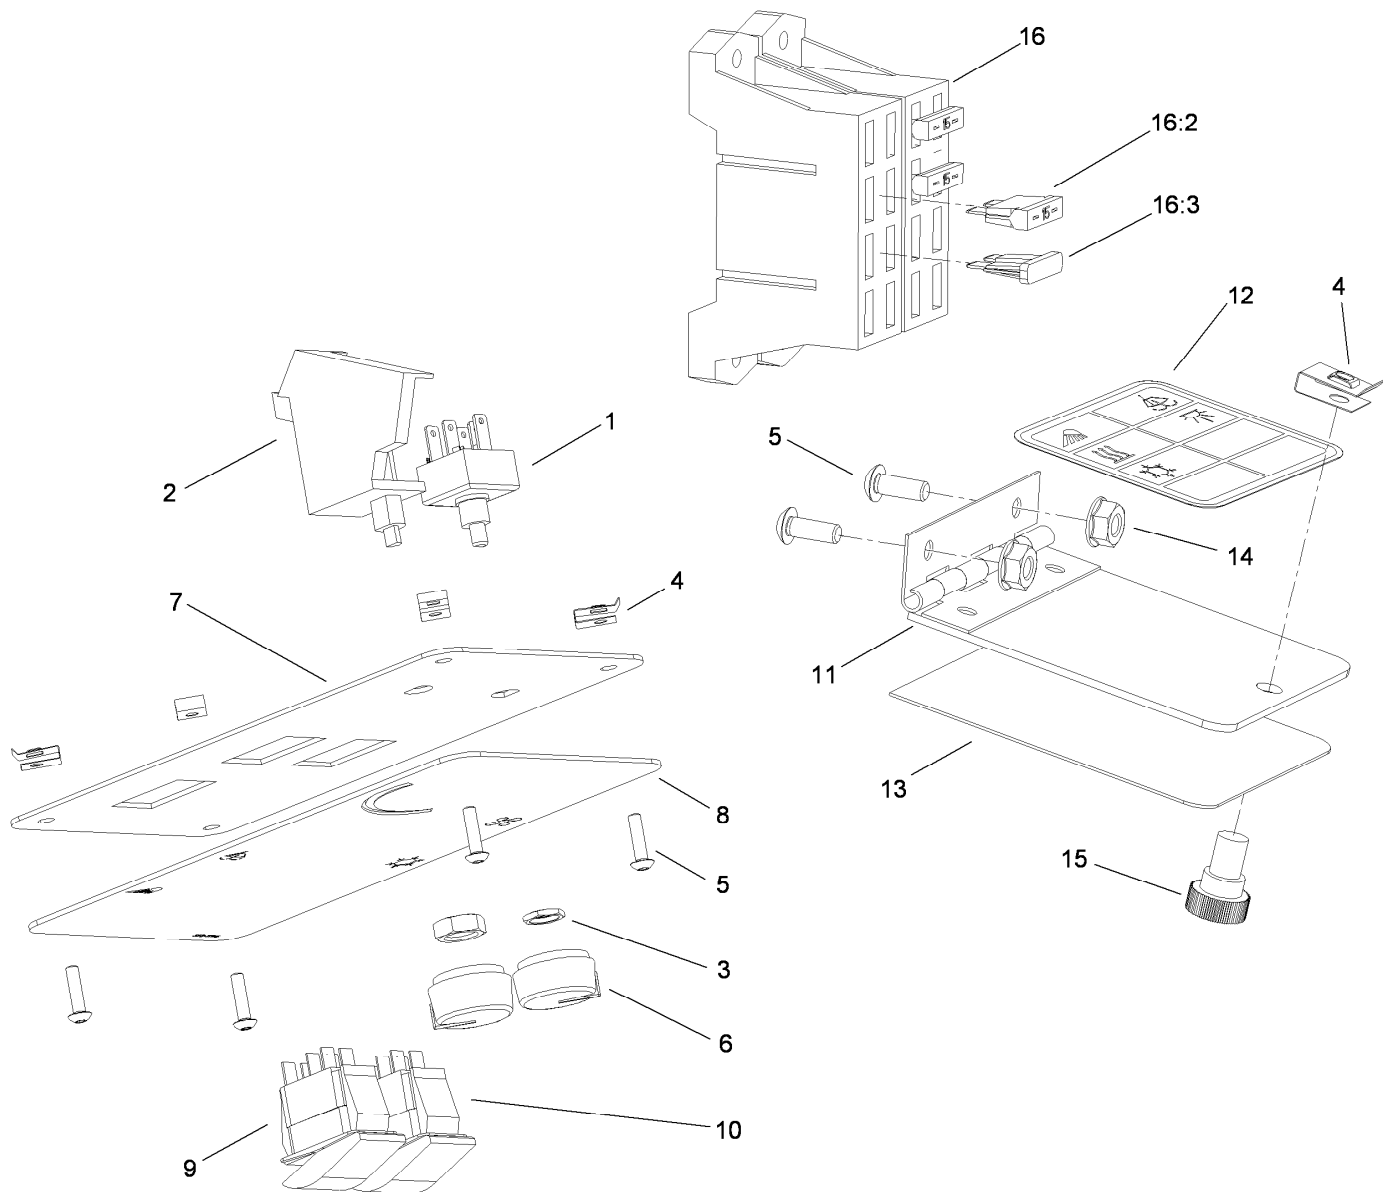

Switchplate and Fuse Block Cover Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-5502	1	Switch-Fan, 3-Speed
2	115-8820	1	Switch-Control, Heat
3	115-5503	1	Nut
4	107-1013	5	Nut-Speed
5	104-2408	6	Screw-HSBH
6	115-5504	2	Knob-Control
7	115-5500	1	Plate-Switch
8	115-5501	1	Label-Switch
9	114-3329	1	Switch-Rocker


Ref.	Part Number	Qty.	Description
10	95-8999	1	Switch
11	115-5510	1	Cover-Access, Fuse
12	117-2787	1	Label-Information, Fuse
13	115-5508	1	Label-Block, Fuse
14	32128-17	2	Nut-Lock, Flange
15	115-5506	1	Knob
16	119-1343	1	Harness-Wire, Cab
16:2	109355	3	Fuse-Blade, 15 Amp
16:3	109102	1	Fuse-Blade, 25 Amp

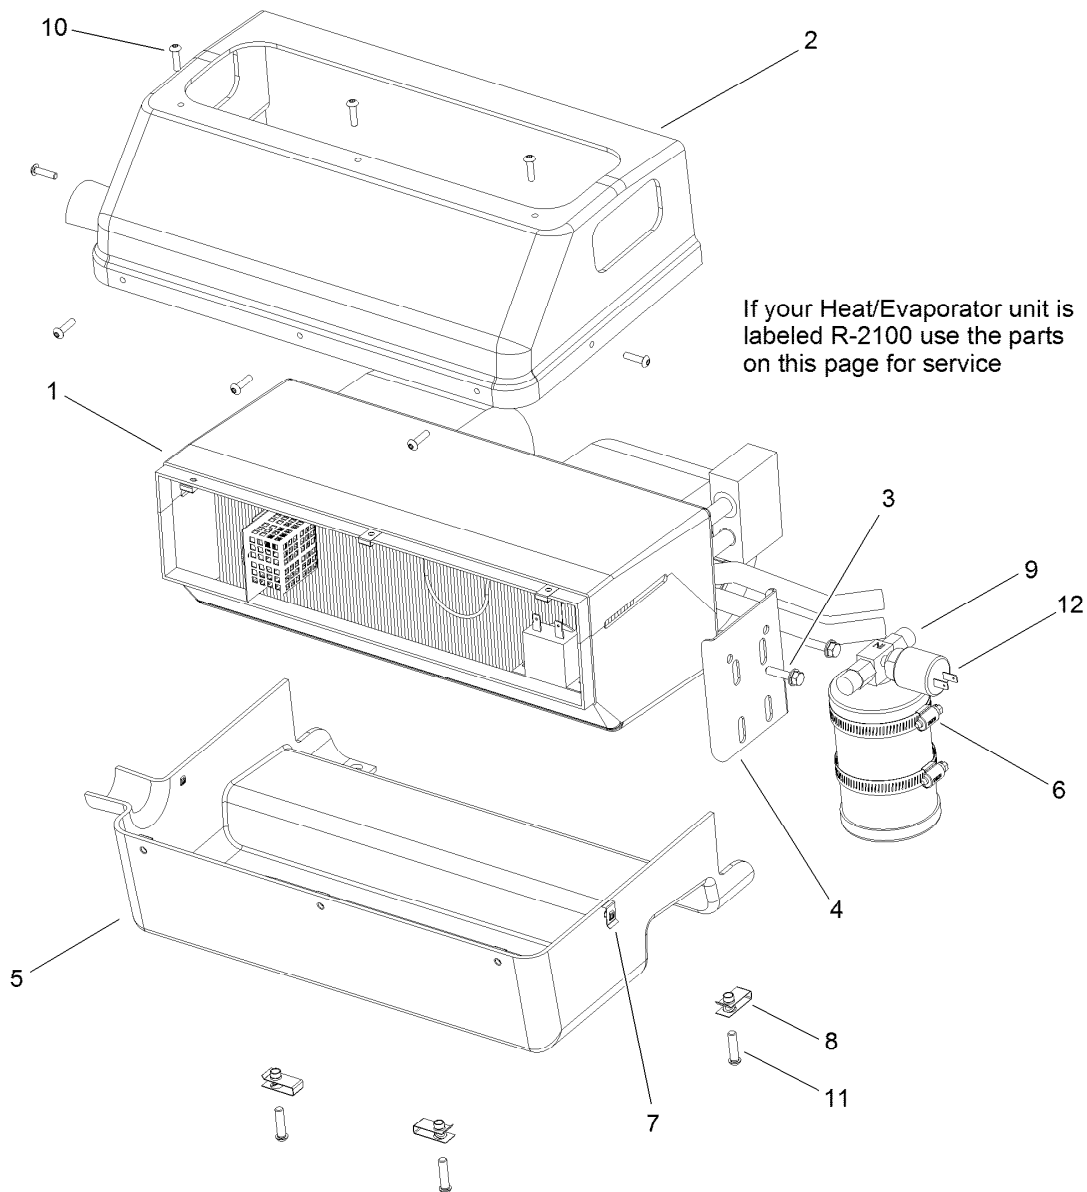 

Heat/Evaporator Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-8830	1	Heater ASM
2	115-8829	1	Cover-Top
3	33103-025	2	Screw-HHF
4	115-8824	1	Mount-Drier
5	115-8828	1	Evaporator-Bottom
6	2412-125	2	Clamp-Hose
7	107-1013	8	Nut-Speed
8	115-5586	4	Nut-Panel, Deep
9	119-4502	1	Drier-Receiver
10	104-2408	8	Screw-HSBH
11	3274-65	5	Screw-HSBH
12	119-4501	1	Switch-Function, Dual
99	99-7430	1	Relay-Mini 280 ●

 
● Not illustrated

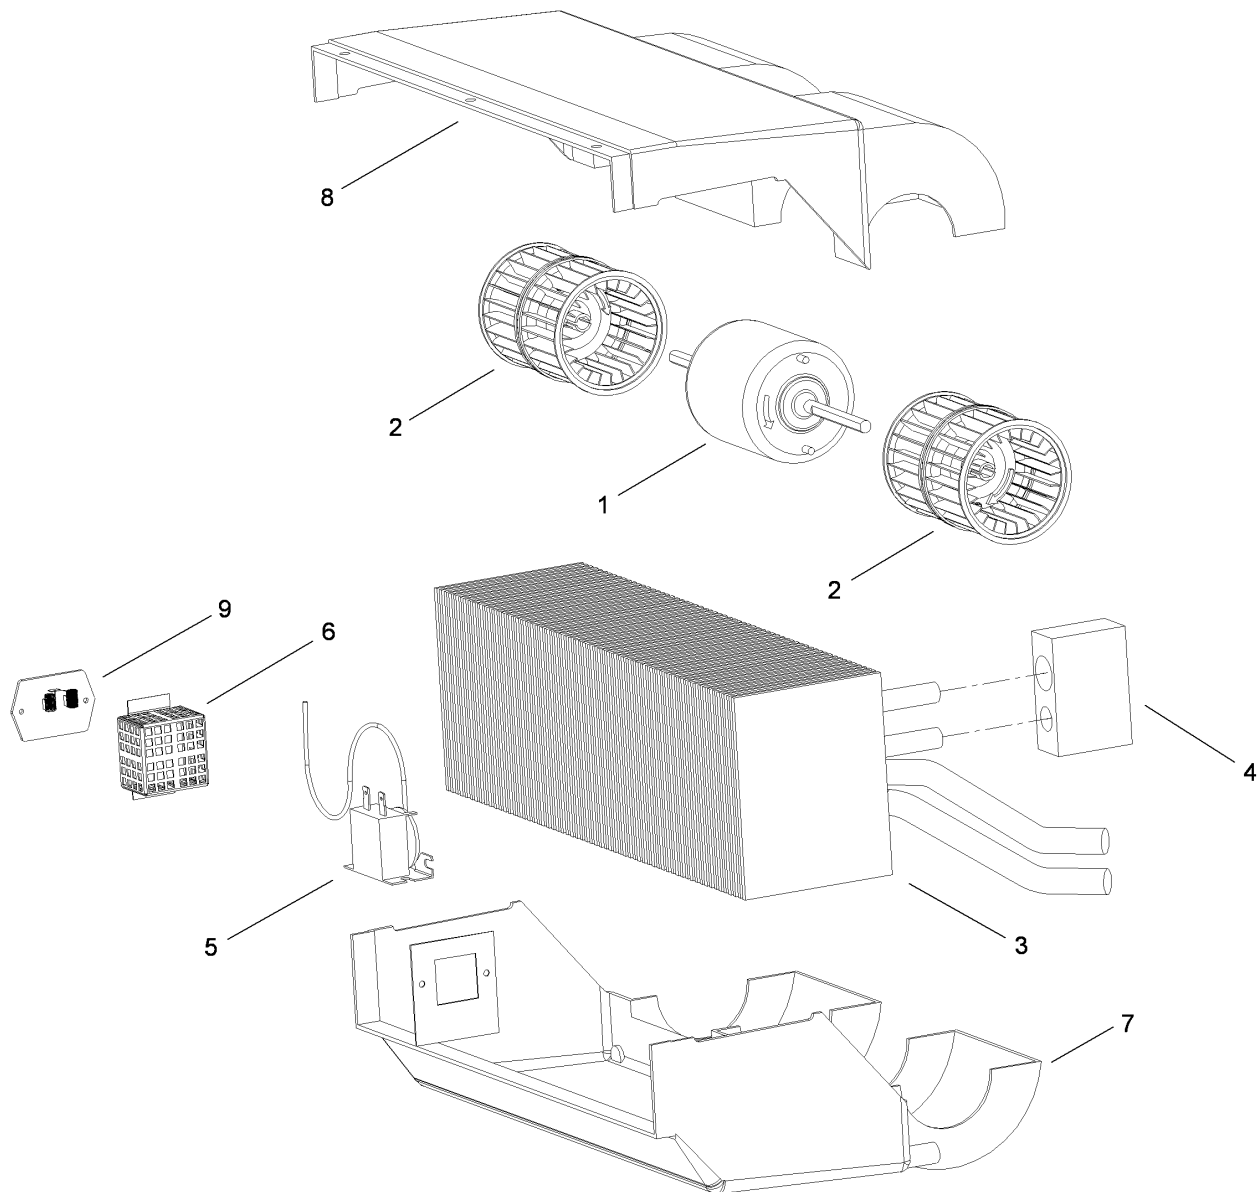

A/C Heater Assembly No. 115-8830

Ref.	Part Number	Qty.	Description
1	115-5578	1	Motor-Fan, Double Shaft
2	115-5580	2	Wheel-Blower
3		1	Evaporator/Heater Core ●
4	115-5587	1	Valve-Expansion
5	115-5593	1	Thermostat-Switch, Freeze
6	115-5529	1	Guard-Resistor
7	115-5536	1	Housing-Bottom, A/C Heater
8	115-5537	1	Housing-Top, A/C Heater
9	115-5535	1	Resistor

 ● Not serviced separately

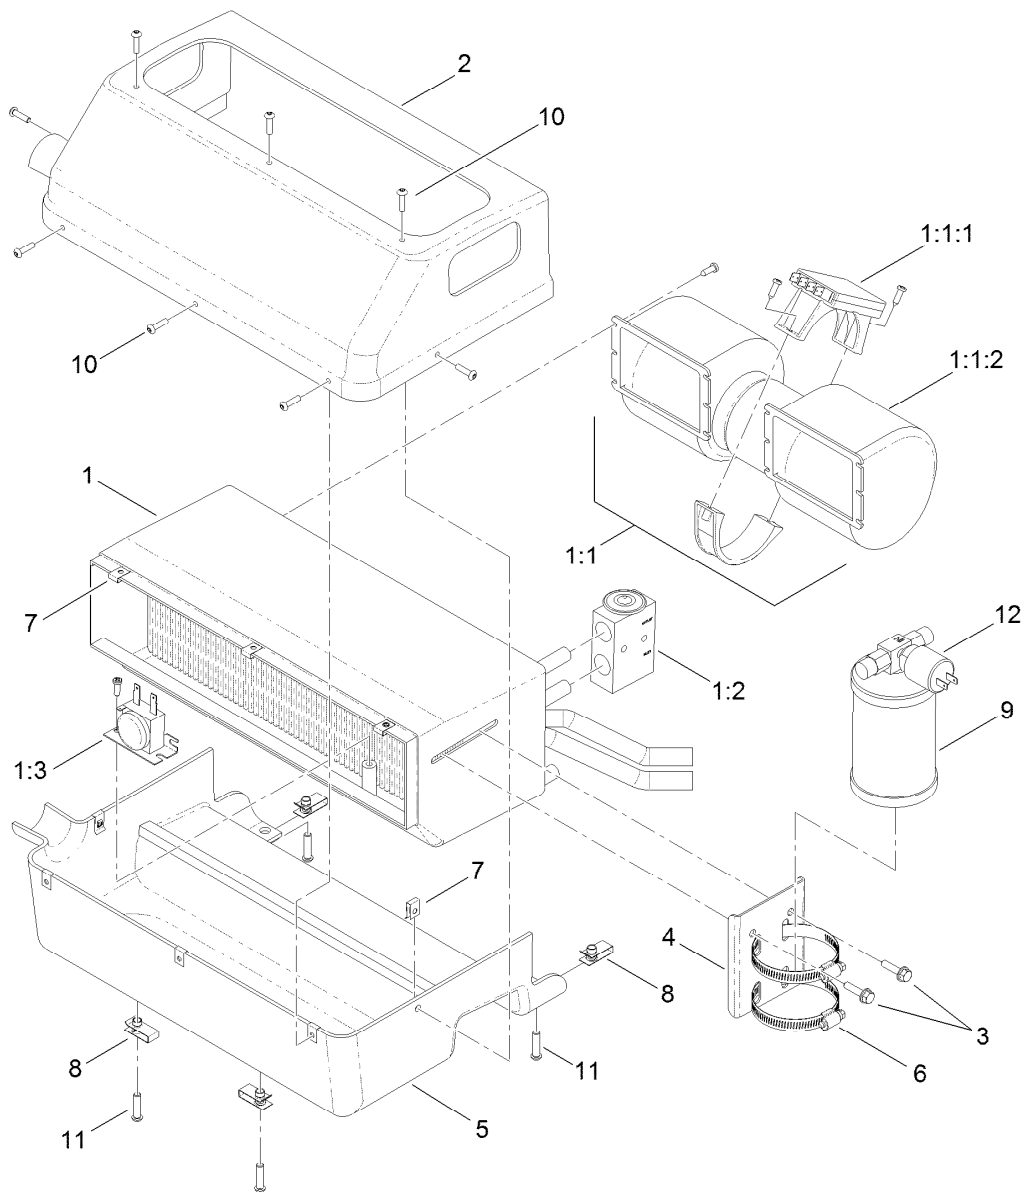


A/C Heater and Evaporator Cab Assembly

Ref.	Part Number	Qty.	Description
1	121-3860	1	A/C Heater ASM
1:1	121-3861	1	Fan-Blower
1:1:1	121-3862	1	Resistor-Fan
1:1:2		1	Fan And Motor ASM ●
1:2	115-5587	1	Valve-Expansion
1:3	115-5593	1	Thermostat-Switch, Freeze
2	115-8829	1	Cover-Top
3	33103-025	2	Screw-HHF
4	115-8824	1	Mount-Drier

Ref.	Part Number	Qty.	Description
5	115-8828	1	Evaporator-Bottom
6	2412-125	2	Clamp-Hose
7	107-1013	8	Nut-Speed
8	115-5586	4	Nut-Panel, Deep
9	119-4502	1	Drier-Receiver
10	104-2408	8	Screw-HSBH
11	3274-65	5	Screw-HSBH
12	119-4501	1	Switch-Function, Dual

 
● Not serviced separately

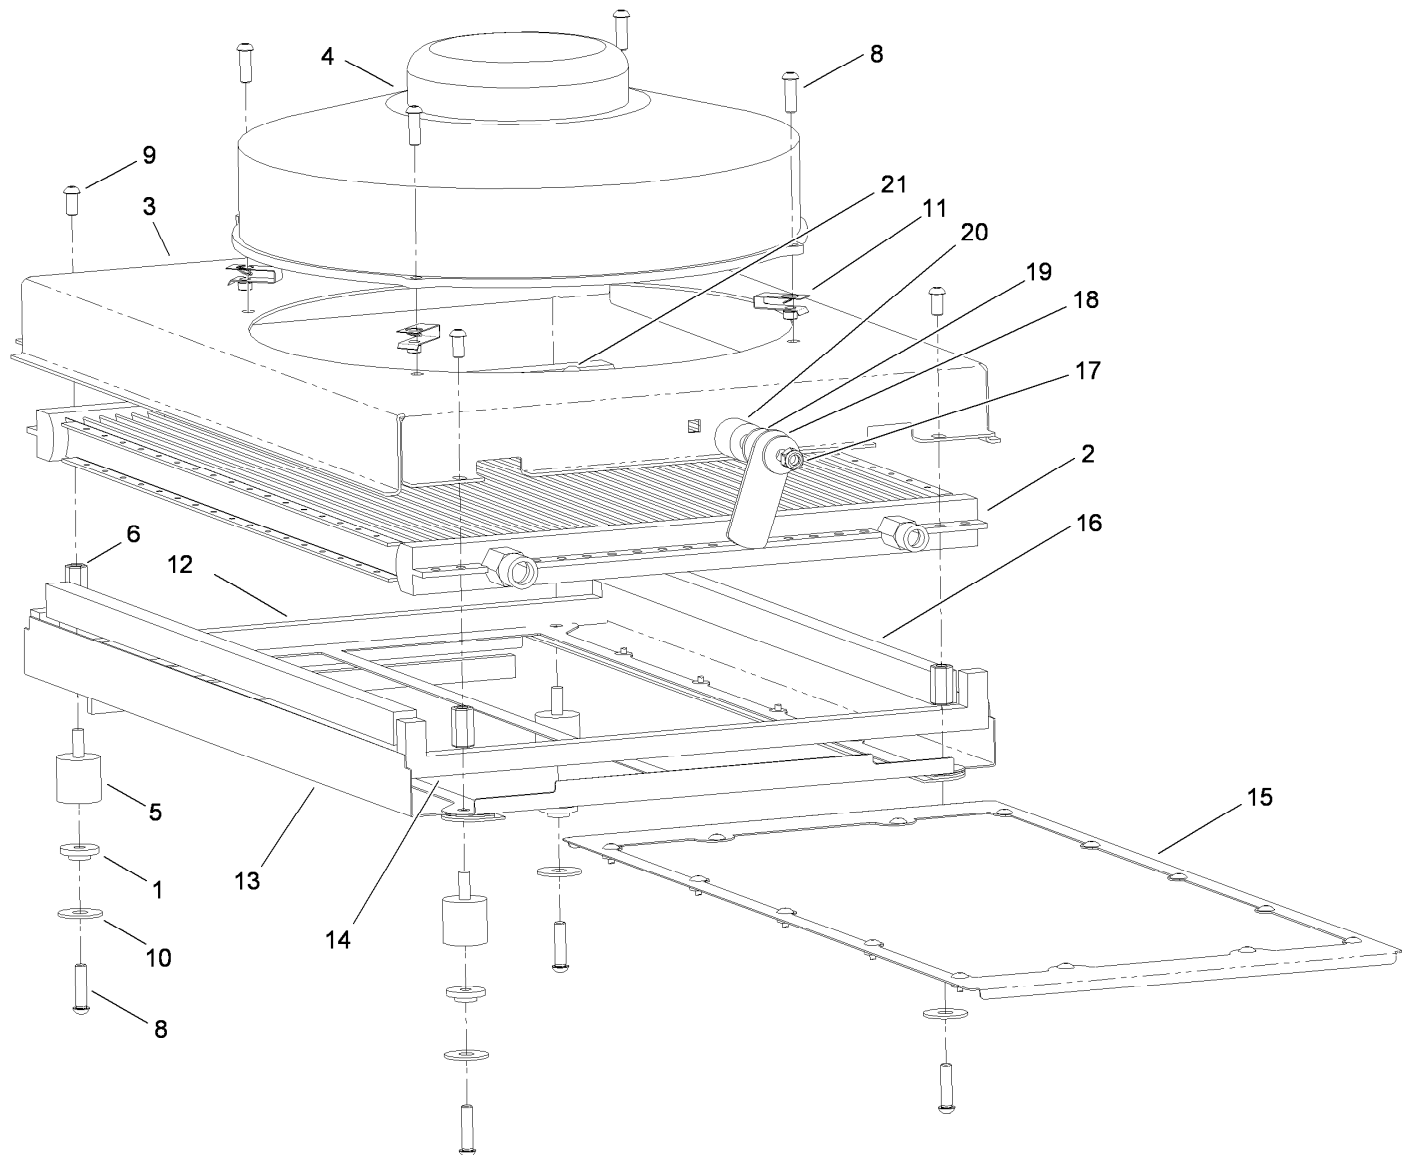

Condenser Cab Assembly


Ref.	Part Number	Qty.	Description
1	115-5570	4	Bushing-Thin
2	115-8816	1	Coil-Condenser
3	119-4511	1	Shroud-Fan
4	119-4500	1	Fan-12 Inch
5	115-8822	4	Mount-Isolator
6	115-8823	4	Coupler-Nut
8	3274-65	8	Screw-HSBH
9	115-8819	4	Screw-HSBH
10	115-5581	4	Washer-Flat
11	107069	4	Clip

Ref.	Part Number	Qty.	Description
12	119-4527	1	Foam-Tray
13	119-4513	1	Frame-Screen
14	119-4544	2	Foam-End
15	119-4512	1	Tray-Screen
16	119-4516	2	Foam-Side
17	3296-42	1	Nut-Lock, NI
18	119-4507	1	Plate-Latch
19	66-2921	2	Washer-Friction
20	119-4506	1	Spacer-Latch
21	3229-4	1	Screw-CARR

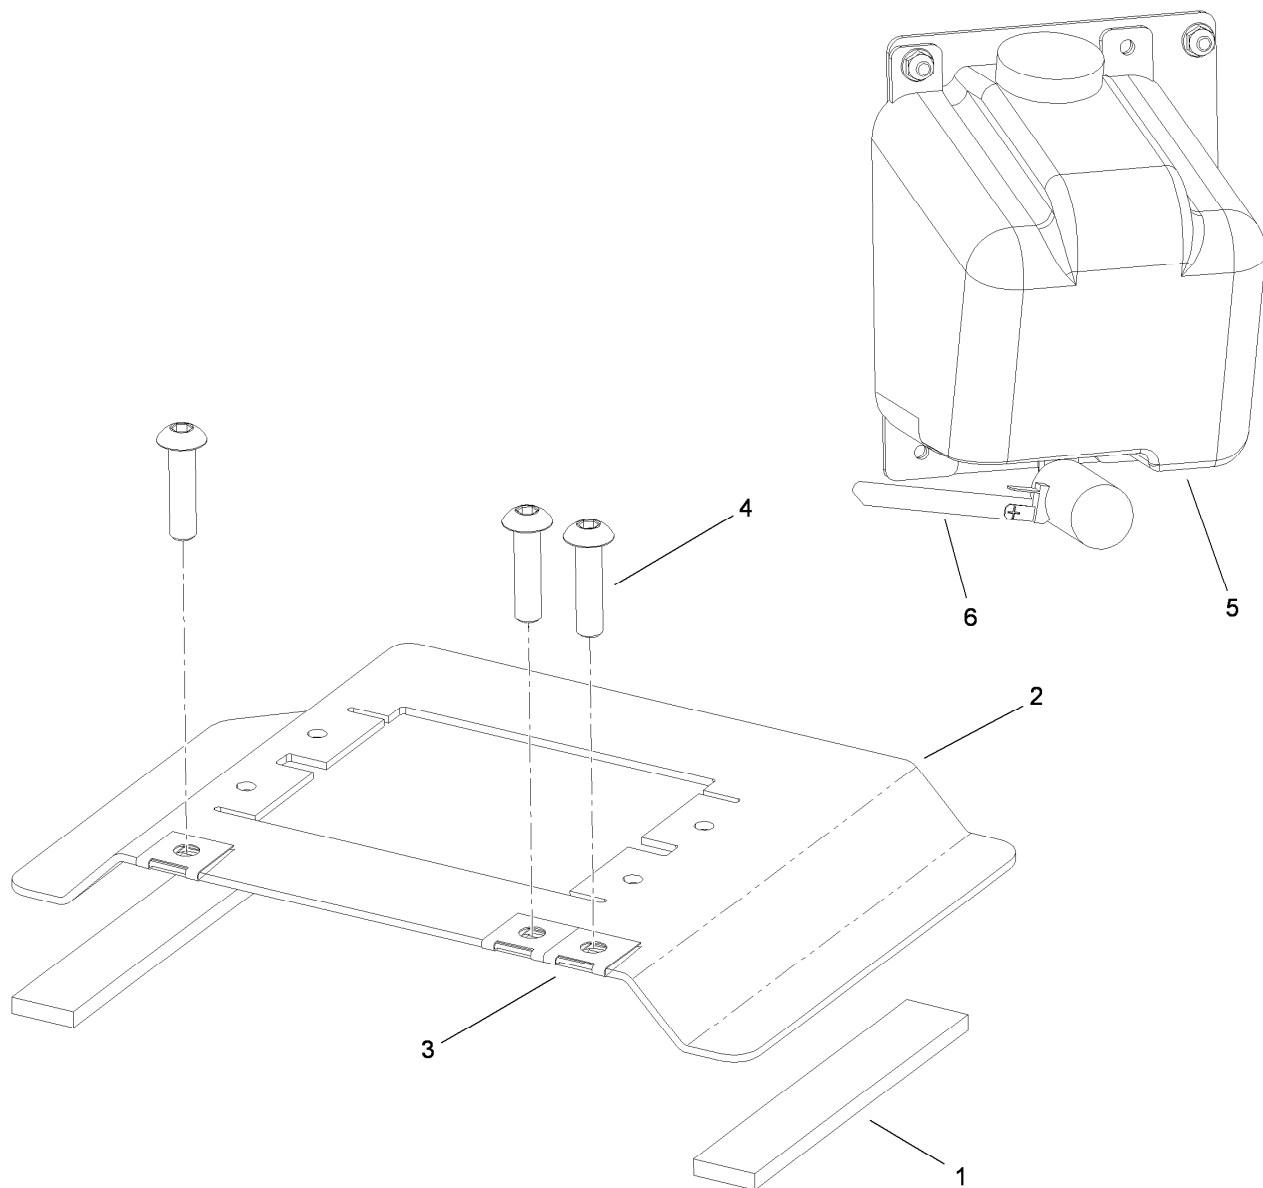 


Fluid Washer Tank Cab Assembly

Ref.	Part Number	Qty.	Description
1	115-5547	2	Pad-Fastener
2	115-5511	1	Mount-Block, Fuse
3	115-5505	3	Nut-Panel, Spring
4	104-2408	3	Screw-HSBH
5	115-8848	1	Tank-Fluid, Washer
6	115-8847	1	Hose-Vinyl, Clear

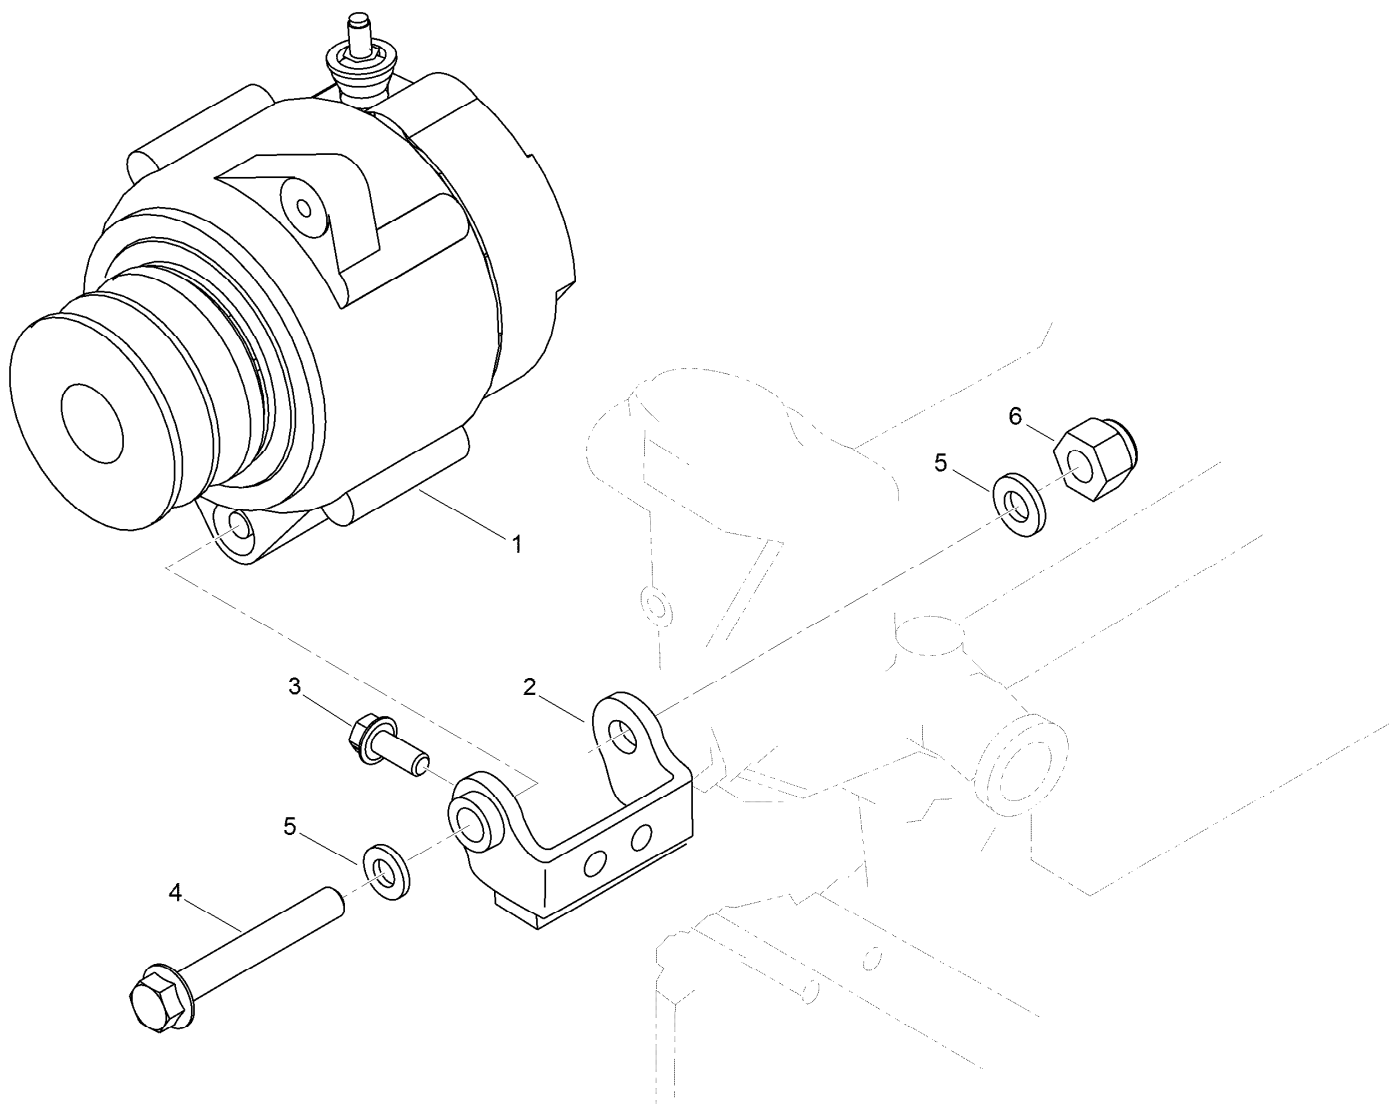 


Engine Alternator Assembly

Ref.	Part Number	Qty.	Description
1	117-5419	1	Alternator
2	115-8851	1	Bracket-Alternator
3	117-5401	2	Screw-Flange, HH
4	117-5400	1	Screw-Flange, HH
5	117-5403	2	Washer-Bevel
6	117-5402	1	Nut-HH

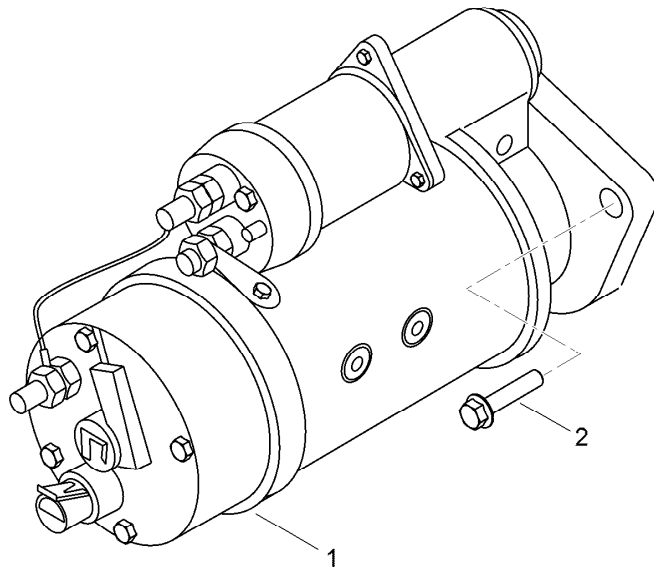 


Engine Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-8861	1	Starter
2	117-5404	2	Screw-Mounting, Starter

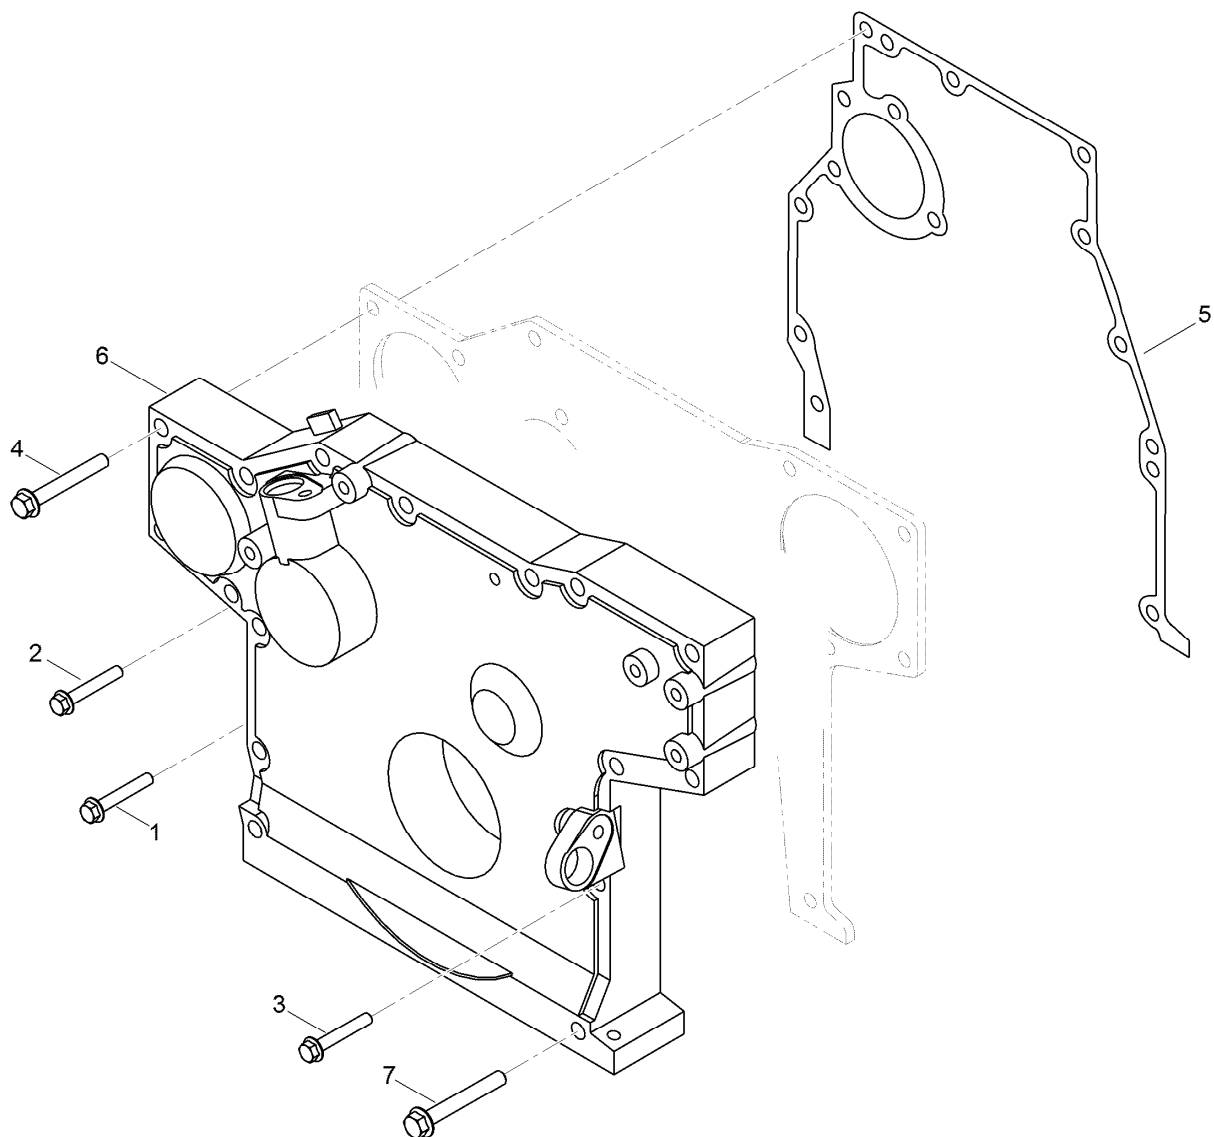 

Engine Gear Case Front Cover Assembly


Ref.	Part Number	Qty.	Description
1	117-5405	2	Screw-Flange, HH
2	117-5406	2	Screw-Flange, HH
3	117-5407	6	Screw-Flange, HH
4	117-5408	8	Screw-Flange, HH
5	117-5423	1	Gasket-Cover, Front
6	117-5421	1	Cover-Front
7	117-5409	2	Screw-Flange, HH

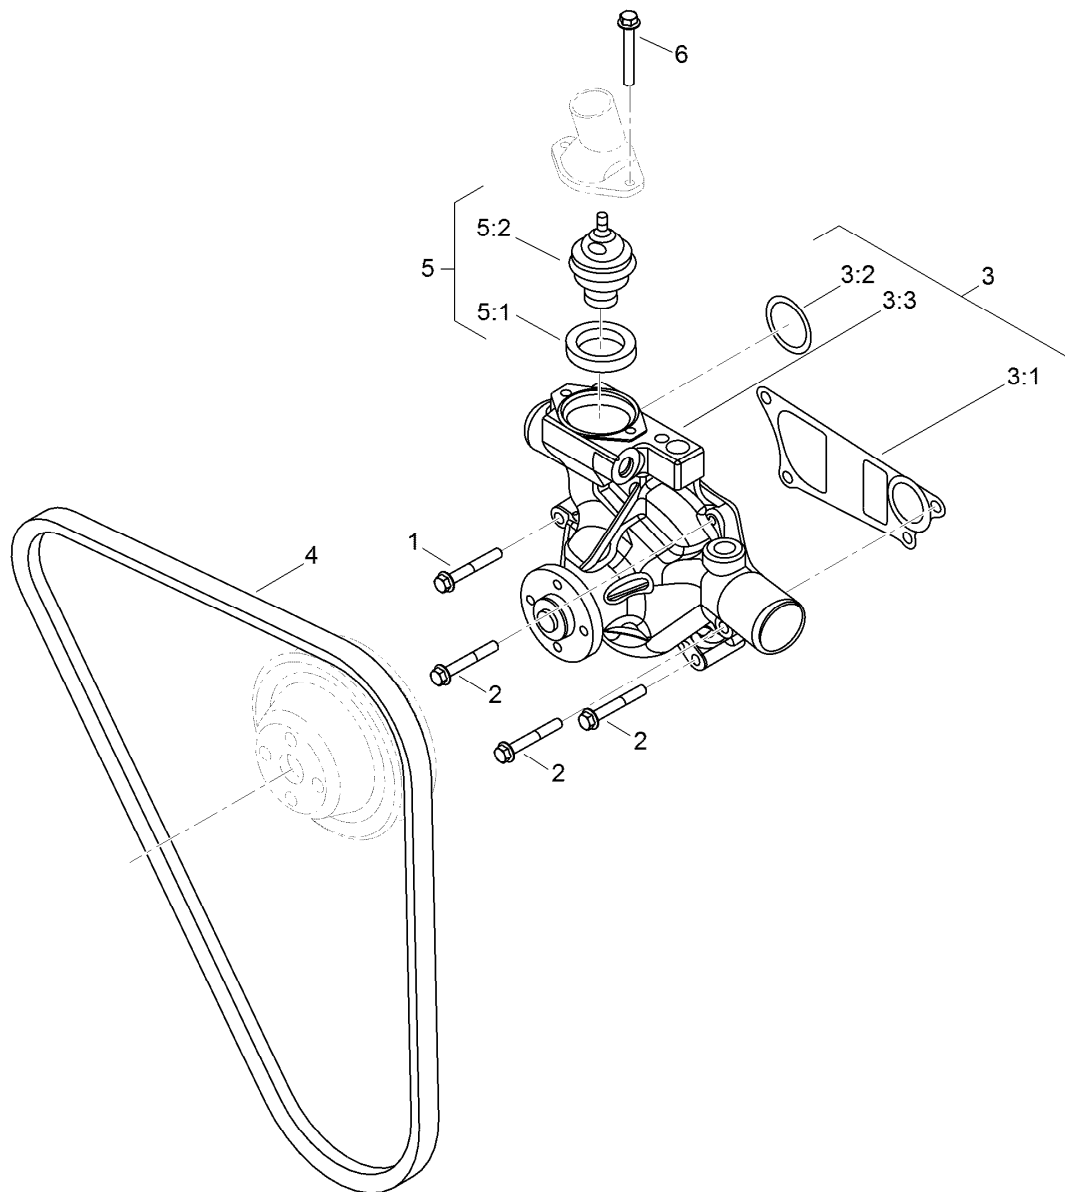 

Engine Water Pump and Thermostat Assembly


Ref.	Part Number	Qty.	Description
1	117-5412	1	Screw-Flange, HH
2	117-5407	3	Screw-Flange, HH
3	117-5426	1	Water Pump Kit
3:1	115-8857	1	Gasket-Pump, Water
3:2	117-5411	1	O Ring-Seal
3:3		1	Water Pump ●
4	117-5420	1	Belt-V, Ribbed
5	115-8860	1	Thermostat Kit
5:1	117-5414	1	Gasket-Connection
5:2		1	Thermostat ●
6	117-5406	2	Screw-Flange, HH

 ● Not serviced separately

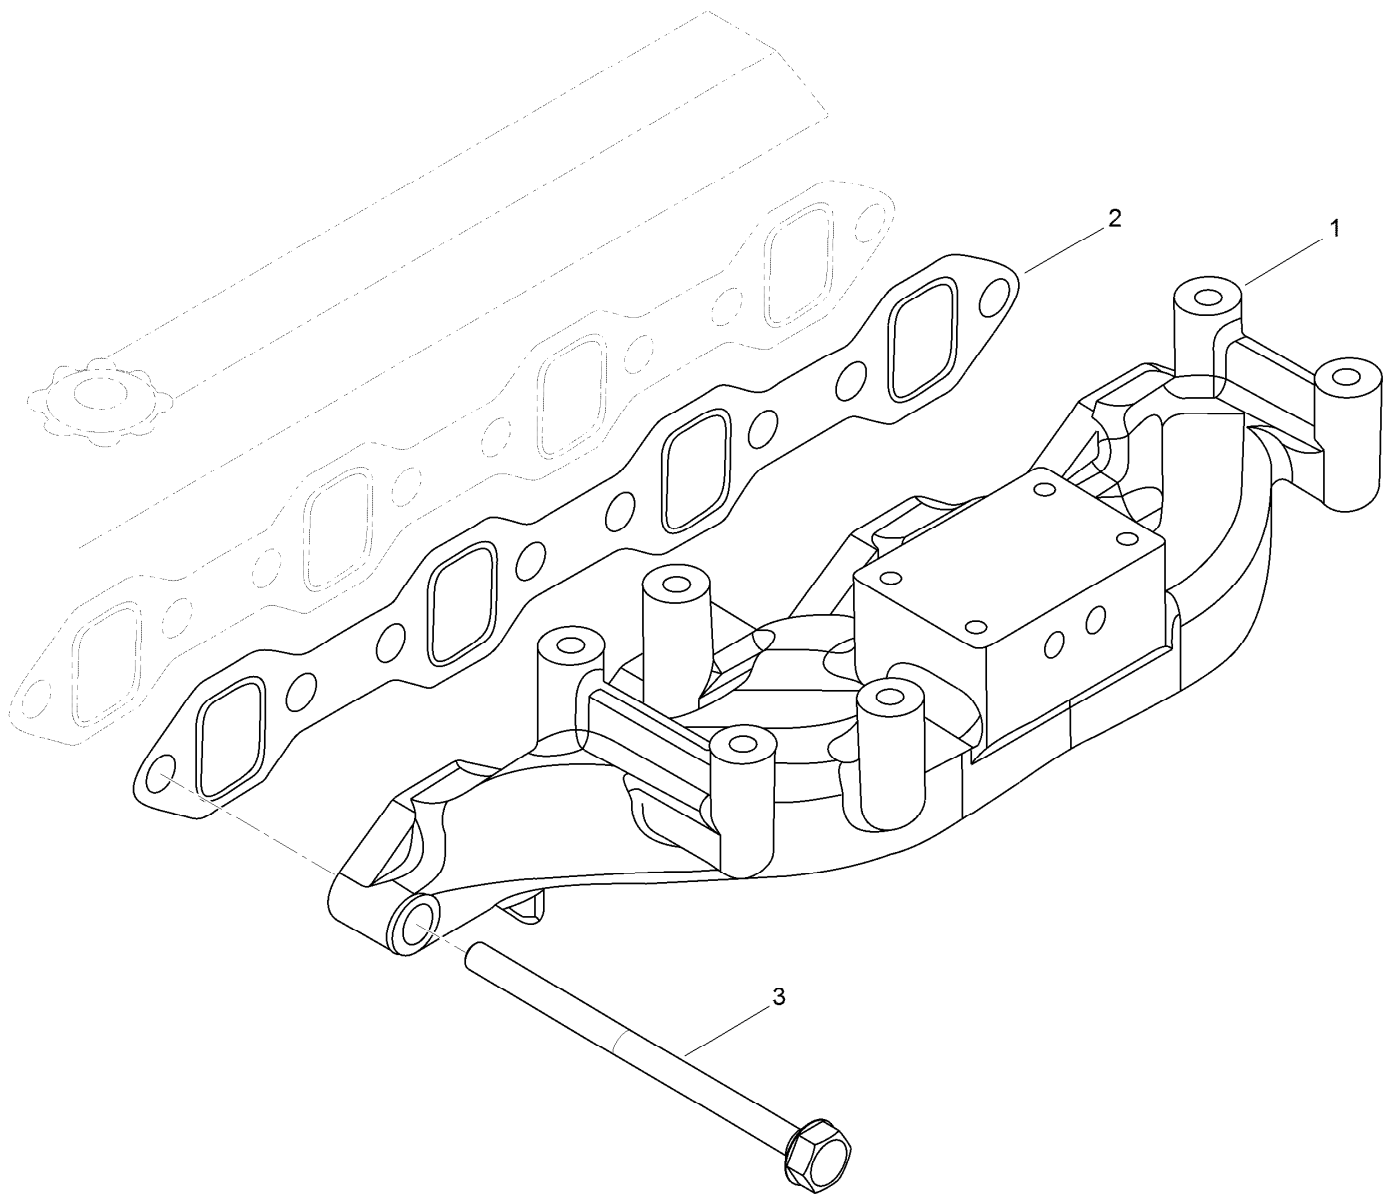


Engine Exhaust Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5425	1	Manifold-Exhaust
2	115-8855	1	Gasket-Manifold, Exhaust
3	117-5410	8	Screw-Flange, HH

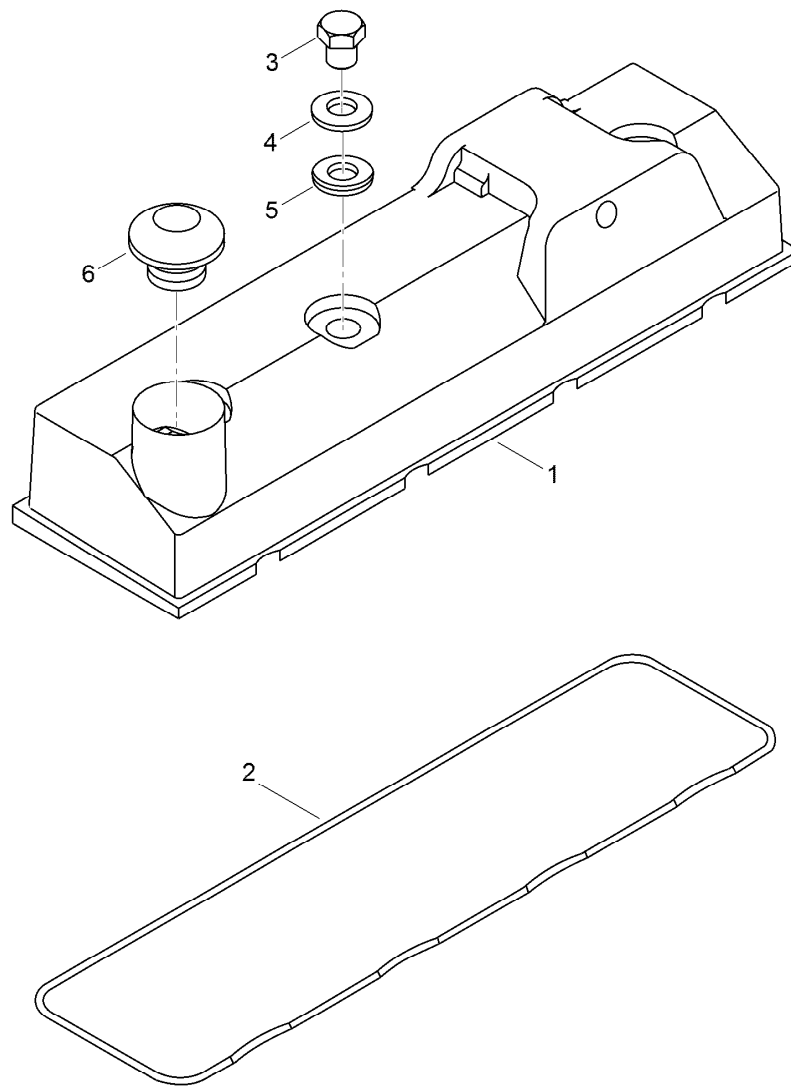 


Engine Valve Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5427	1	Cover-Valve
2	117-5428	1	O Ring-Seal
3	117-5417	3	Nut-Lock
4	117-5415	3	Washer-Plain
5	117-5416	3	Isolator-Noise
6	117-5429	1	Cap-Filler

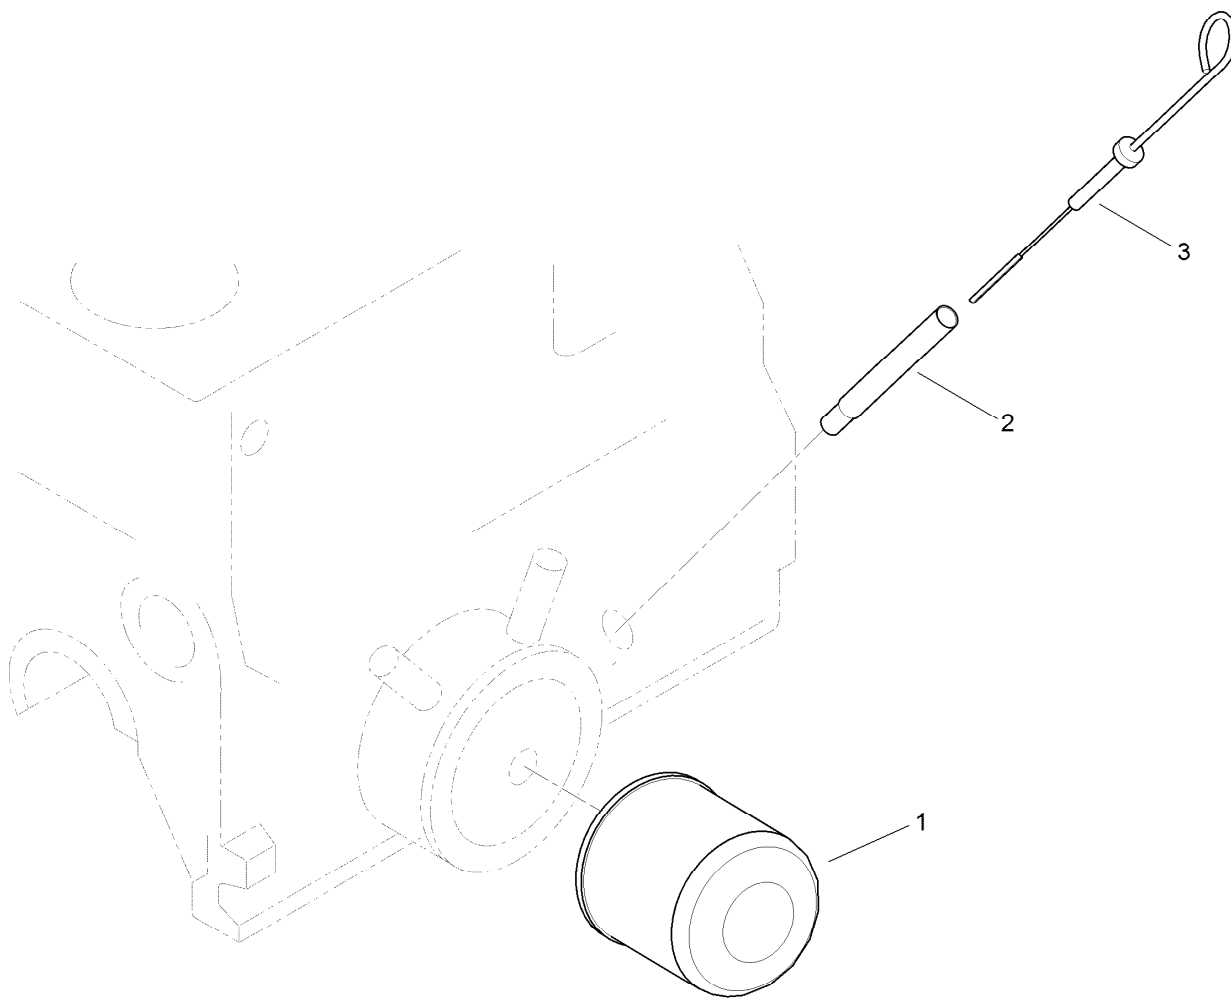 

Engine Oil Filter and Dipstick Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-8868	1	Filter-Oil, Engine
2	117-5424	1	Tube-Dipstick
3	117-5422	1	Dipstick

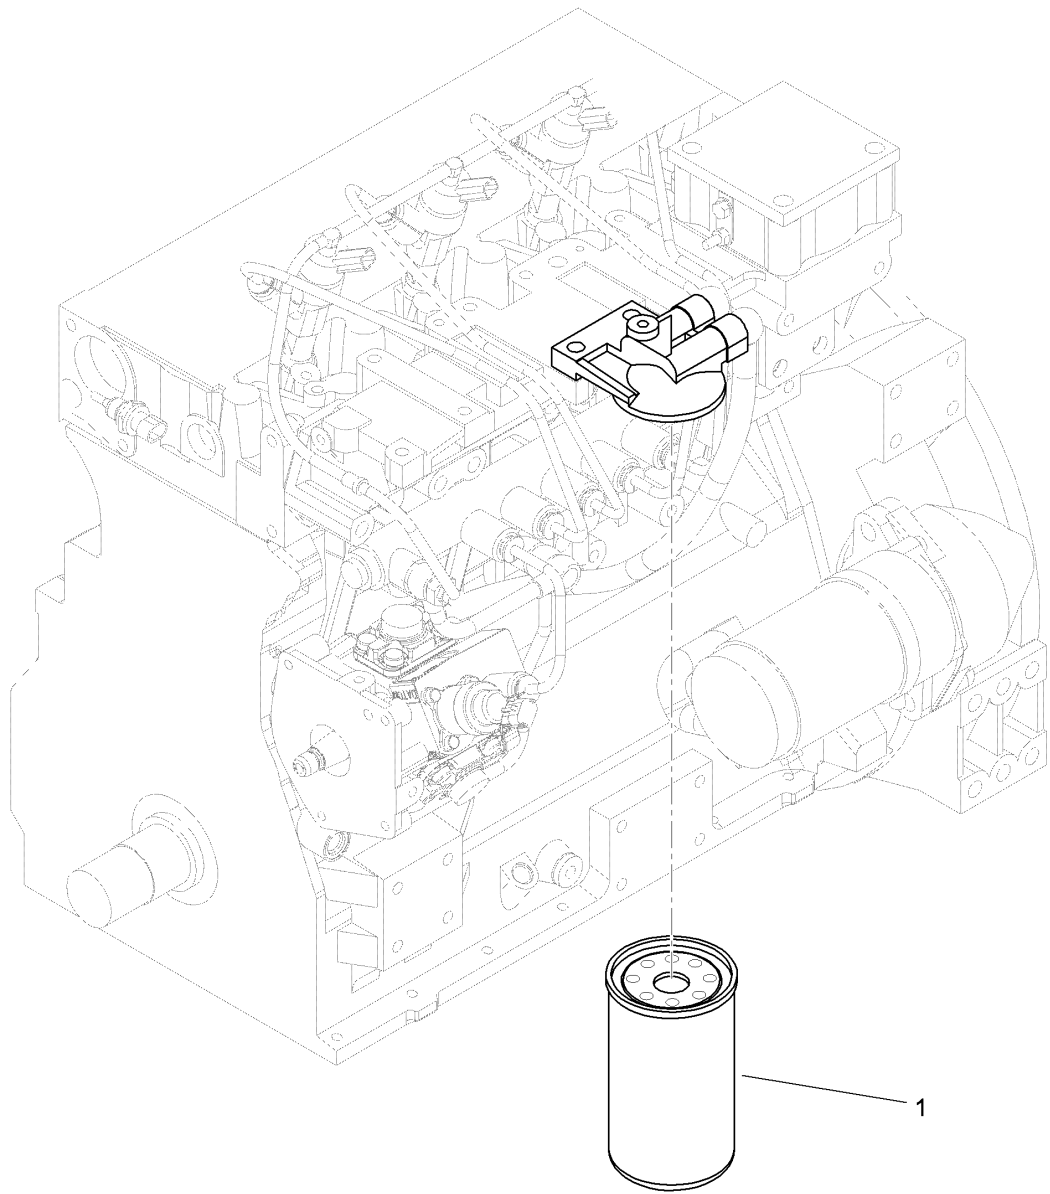 

Engine Fuel Filter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-2792	1	Filter-Fuel

Attachments and Accessories

For 31599 Groundsmaster 5910 Rotary Mower

Product Name	Model/Part
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail).....	108-1178
Premium Engine Oil, 15w40 (55 Gallon Drum)	108-1181
Premium Engine Oil, 15w40 (5 Gallon Pail)	108-1182
Premium Heavy Duty All Season Gear Lube (Pail)	108-1188
Premium All Purpose Grease (Tube)	108-1190
Premium Heavy Duty All Season Gear Lube (Quart)	108-1591
Atomic Blade Kit	114-0897
Work Light Kit	114-5610
Standard Blade Kit.....	115-8896
Blade and Belt Kit	115-8898
Tall Grass Kit.....	117-2795
CE Kit (For 2010 models and Up)	117-9449
MVP Filter Kit.....	30041
Leaf Mulching Kit	31581
Center Replacement Deck.....	31591
Right Replacement Deck	31592
Left Replacement Deck	31593
10in Foam Filled Castor Wheel.....	93-5973



Count on it.