



Count on it.

Form No. 3425-536 Rev A

Parts Catalog

Rear Selector Valve Kit OutCross 9060 Series Traction Unit Model No. 07527



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Rear Selector Valve Kit Assembly 4

Hydraulic Valve Assembly No. 131-5644 6


Rear Selector Valve Kit Assembly

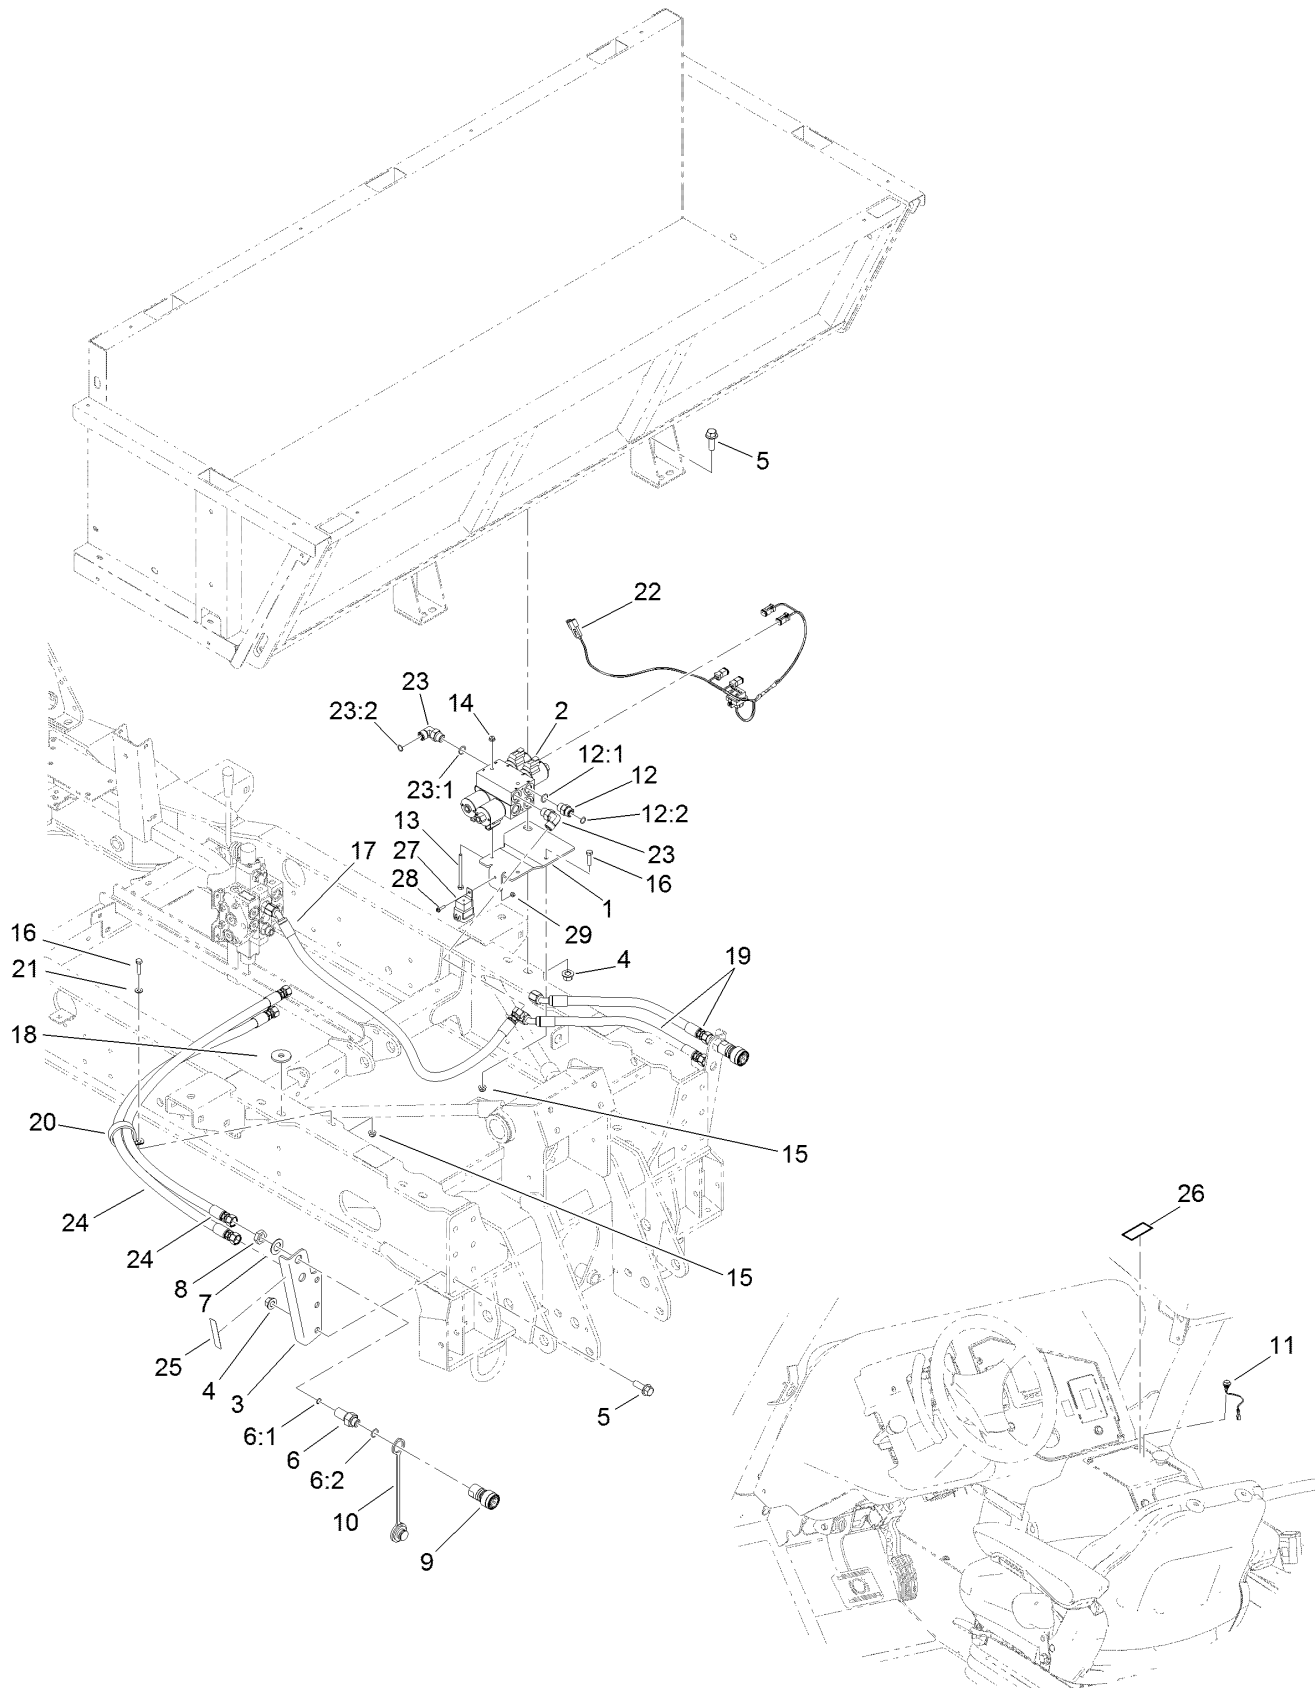

Rear Selector Valve Kit Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-3837-03	1	Support-Valve, Rear	15	104-8300	2	Nut-HF, NI
2	131-5644	2	Valve-Selector	16	322-6	2	Screw-HH
3	136-9998-03	1	Plate-Bulkhead, LH	17	133-2298	2	Hose ASM
4	99-5107	4	Nut-Lock	18	84-1560	1	Washer-Thrust
5	100-6116	4	Screw-HHF	19	120-0880	2	Hose-HYD
6	98-9907	2	Union-Bulkhead	20	115-9469	1	Clamp-R
6:1	237-30	1	O-Ring	21	3256-23	1	Washer-Plain
6:2	237-79	1	O-Ring	22	122-1384	1	Harness-Wire
7	69-8930	2	Washer	23	340-98	4	Fitting-Elbow, 90 DEG
8	340-127	2	Nut-Bulkhead	23:1	237-79	1	O-Ring
9	133-7827	2	Coupler-Quick Connect	23:2	237-30	1	O-Ring
10	T56152150	2	Plug-Quick Connect	24	120-0980	2	Hose-HYD
11	136-9678	1	Switch-Pushbutton	25	138-4135	1	Decal-HYD, Remote
12	340-4	2	Fitting-Straight	26	138-4165	1	Decal-Valve, Selector
12:1	237-30	1	O-Ring	27	99-7430	1	Relay-Mini
12:2	237-79	1	O-Ring	28	32105-13	1	Screw-HWH
13	321-19	2	Screw-HH	29	3296-2	1	Nut-Lock, NI
14	104-7201	2	Nut-HF				

Hydraulic Valve Assembly No. 131-5644

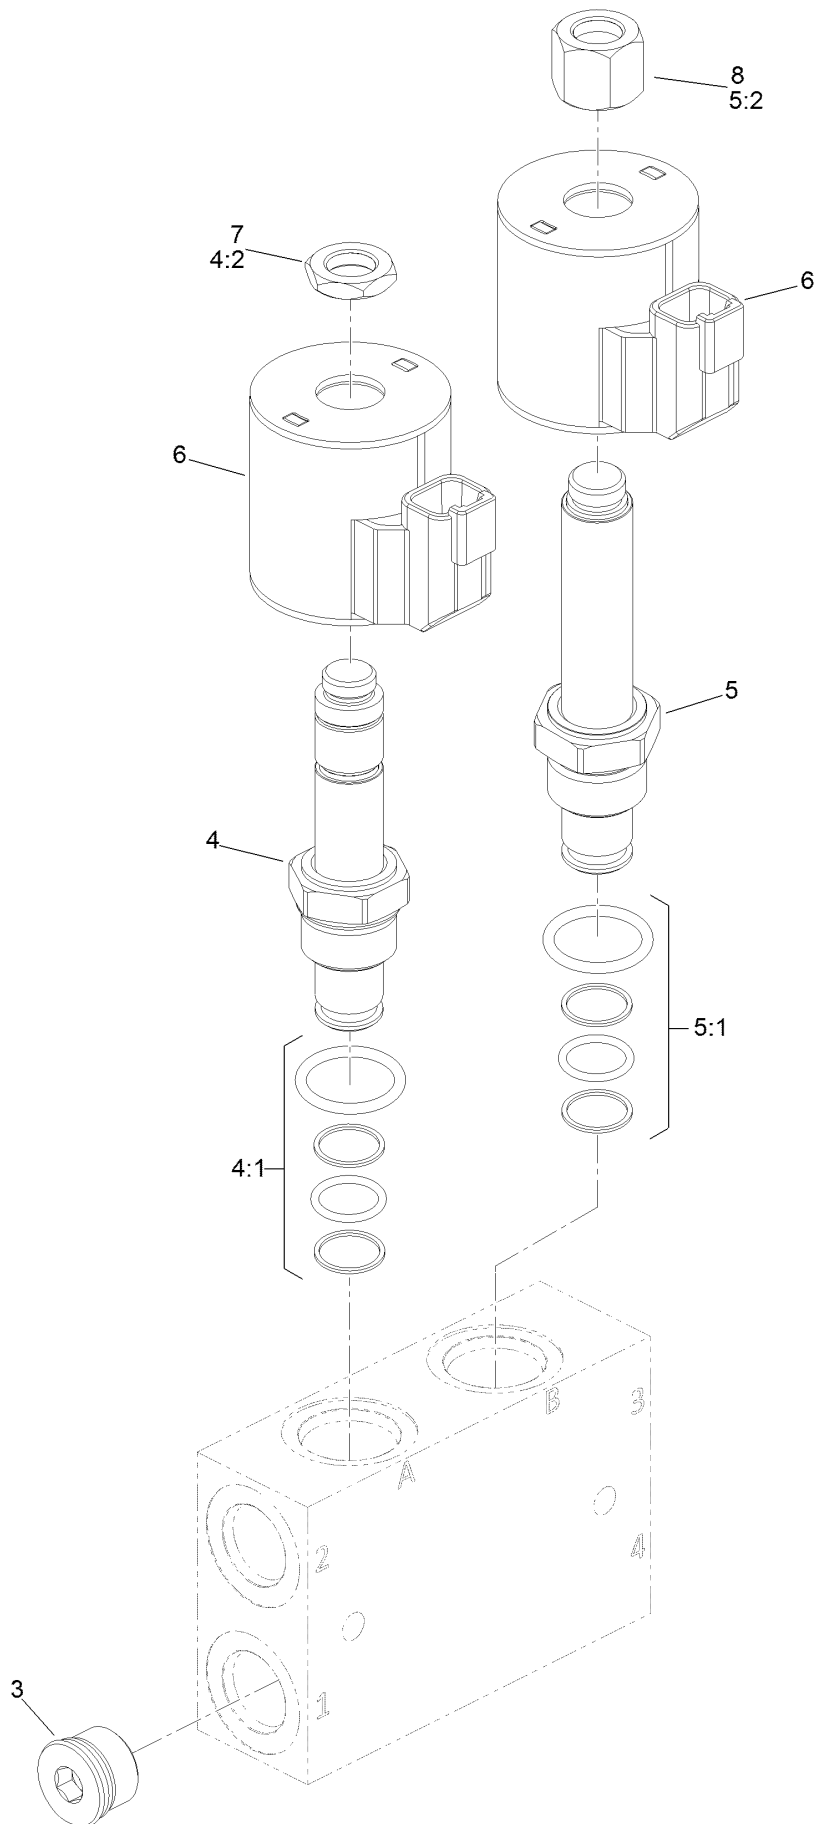

Hydraulic Valve Assembly No. 131-5644 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	106-1027	1	Plug-HYD
4	110-2632	1	Valve-Solenoid
4:1	110-2633	1	Seal Kit
4:2	130-8181	1	Nut-Coil (1/2-20 Unf-2B)
5	110-2631	1	Valve-Solenoid

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5:1	110-2633	1	Seal Kit
5:2	110-2634	1	Nut-Coil
6	119-4619	2	Coil-Solenoid
7	110-2634	1	Nut-Coil
8	130-8181	1	Nut-Coil (1/2-20 Unf-2B)



Count on it.