



Count on it.

Parts Catalog

Greensmaster® 3120 **2-Wheel Drive Traction Unit**

Model No. 04355—Serial No. 316000501 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly	4
Steering Arm Assembly	5
Traction Pedal Assembly	6
Joystick Assembly	7
Joystick Bracket Assembly No. 120-5280	8
Speed Selector Lever and Console Assembly	9
Control Panel Assembly	11
Engine Installation Assembly	12
Fuel Tank Assembly	13
Wire Harness Assembly	14
Battery Assembly	15
Ignition and Seat Switch Assembly	16
Engine Wire Harness Assembly	17
Ground Drive Assembly	18
Hydraulic Motor Assembly (CW) No. 110-4016	19
Hydraulic Motor Assembly (CCW) No. 110-4015	20
Hydrostat and Gear Pump Drive Assembly	21
Hydraulic Pump Assembly No. 131-2767	23
Hydraulic Gear Pump Assembly No. 114-9956	24
Neutral System and Hydraulic Return Assembly	25
Front Hydraulic Reel Drive and Hose Assembly	26
Hydraulic Reel Motor Assembly No. 120-2072	27
Hydraulic Steering Hose and Center Lift Cylinder Hose Assembly	28
Rear Hydraulic Reel Drive and Hose Assembly	29
Front Lift Cylinders Hose and Filter Assembly	30
Steering Wheel and Valve Assembly	31
Steering Valve Assembly No. 114-4672	32
Right Hand and Left Hand Lift Cylinder Assembly	33
Hydraulic Cylinder Assembly No. 131-2787	34
Steering Cylinder and Center Lift Cylinder Assembly	35
Hydraulic Cylinder Assembly No. 131-2786	36
Hydraulic Manifold Assembly	37
Manifold Block Assembly No. 131-2753 (No Backlap)	38
Manifold Block Assembly No. 133-8976 (With Backlap)	39
Hydraulic Tank Assembly	41
Center Pull Frame Assembly	42
Left Pull Frame Assembly	44
Right Pull Frame Assembly	46
Front Wheel and Brake Assembly	48
Brake Assembly No. 104-7705	49
Rear Wheel Assembly	50
Seat Assembly	51
Attachments and Accessories	52

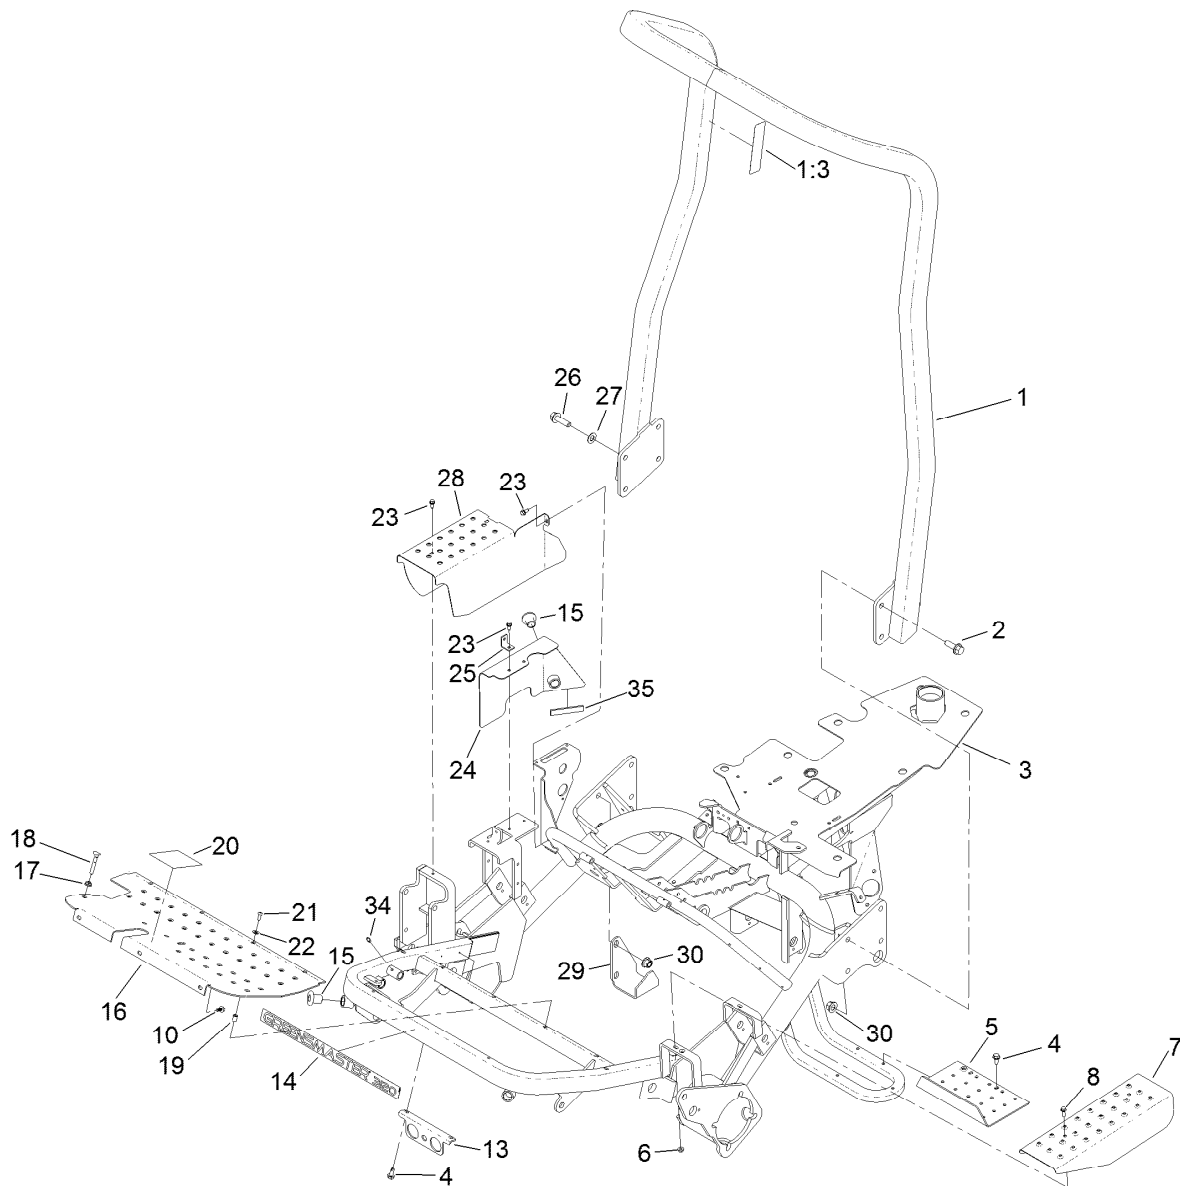


Frame Assembly

Ref.	Part Number	Qty.	Description
1	133-2308	1	ROPS ASM
1:3	115-8226	1	Decal-ROPS
2	130-6482	6	Screw HHF
3	127-6143-01	1	Frame
4	32104-32	5	Screw-HWH
5	130-0103-01	1	Step
6	32128-33	2	Nut-HF
7	83-0200-03	1	L/H Cover Plate
8	115-5103	2	Screw-HHF
10	99-6810	3	Screw-HHF
13	107-2552-01	1	Bracket-Bulkhead
14	131-2781	1	Decal
15	83-1700	3	Bushing-Flange
16	127-2225-01	1	Plate-Footrest
17	32128-20	1	Nut-HF

Ref.	Part Number	Qty.	Description
18	17-9426	1	Screw-Handle
19	32148-6	7	Nut-Clinch
20	93-8062	1	Decal-Brake, Parking
21	3274-31	4	Screw-HSBH
22	3256-1	4	Washer-Flat
23	32144-10	5	Screw-HWH
24	105-8282-03	1	Shield-Side
25	120-3172	1	Bracket
26	130-6481	2	Screw-HHF
27	110-6894	1	Washer-Pivot
28	130-6548-03	1	Channel-Step, Right
29	105-8263-01	1	Bracket-ROPS
30	99-5107	8	Nut-Lock
34	302-5	1	Fitting-Grease
35	105-7699	1	Strip-Seal




Ref.	Part Number	Qty.	Description
13	3296-39	2	Nut-Lock, NI
14	3290-277	6	Nut-Speed
15	83-0810	1	Cover-Steering
16	325-6	2	Screw-HH
17	3256-26	2	Washer-Flat
18	47-2890	2	Bushing
19	3296-23	2	Nut-Lock, NI
22	133-0303	1	Bolt-Shoulder
23	133-2350	1	Spacer

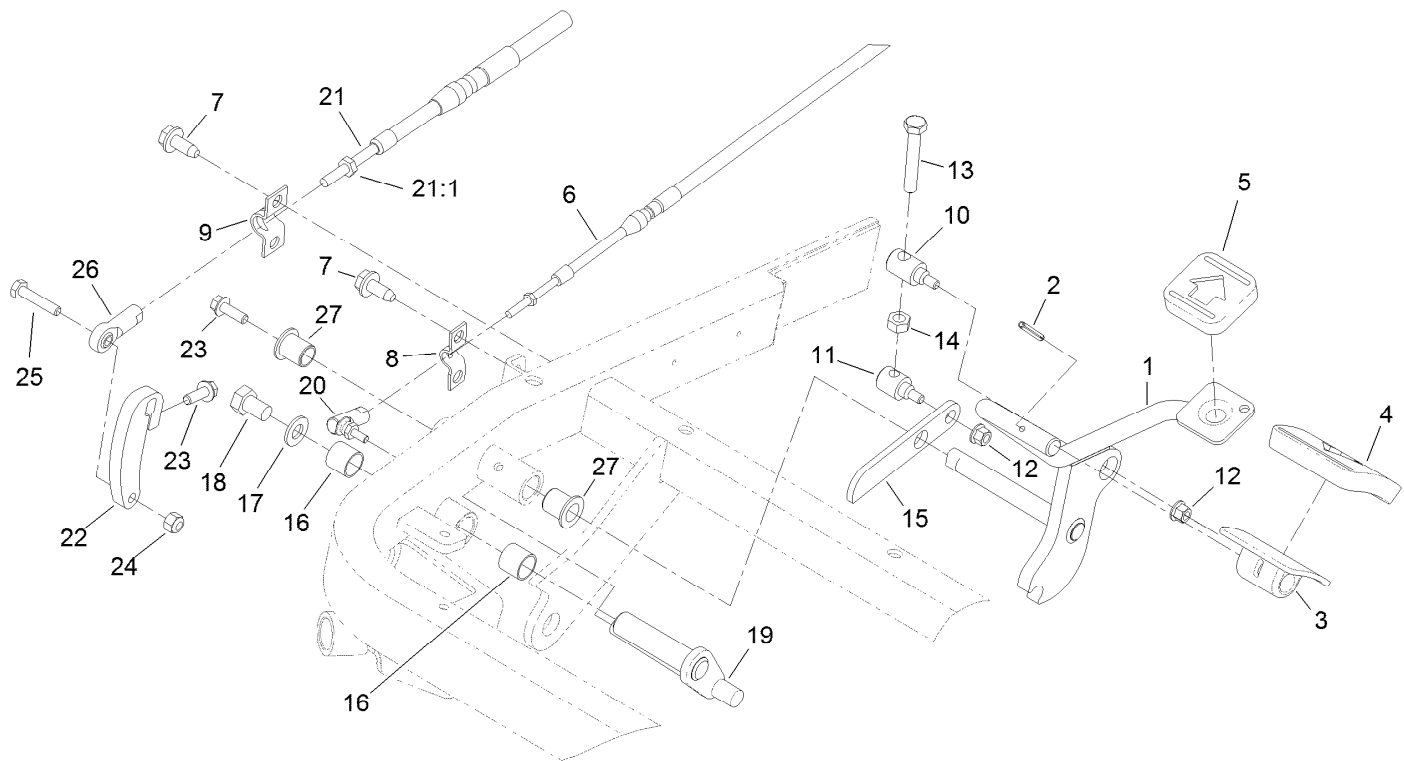 

Traction Pedal Assembly


Ref.	Part Number	Qty.	Description
1	127-2222-01	1	Pedal-Traction
2	32121-45	1	Pin-Spring
3	117-9507	1	Pedal-Accelerator
4	74-9100	1	Pad-Pedal, Forward
5	74-9110	1	Pad-Pedal, Reverse
6	127-2244	1	Cable-Neutral Lock
7	32144-70	4	Screw-HWHTF
8	93-2279	1	Clamp-Cable
9	93-2092	1	Clamp-Cable
10	94-1375	1	Trunnion-Bracket, Lock
11	94-1374	1	Trunnion-Bracket, Mow
12	81-0130	2	Nut-Flange, NI
13	94-3489	1	Screw-HH
14	33014-00	1	Nut-Hex

Ref.	Part Number	Qty.	Description
15	127-2241	1	Plate-Stop
16	256-311	2	Bushing-Split
17	3256-24	1	Washer-Flat
18	33115-016	1	Screw-HH
19	132-3803	1	Lock-Neutral
20	2411-38	1	Joint-Ball
21	107-2550	1	Cable-Control, Traction
21:1	3220-1	2	Nut-Jam
22	130-6539	1	Lever-Traction
23	117-8304	2	Screw-HHF
24	3296-42	1	Nut-Lock, NI
25	321-8	1	Screw-HH
26	2411-41	1	Rod End-Ball Joint
27	125-8775	2	Bushing-Flange

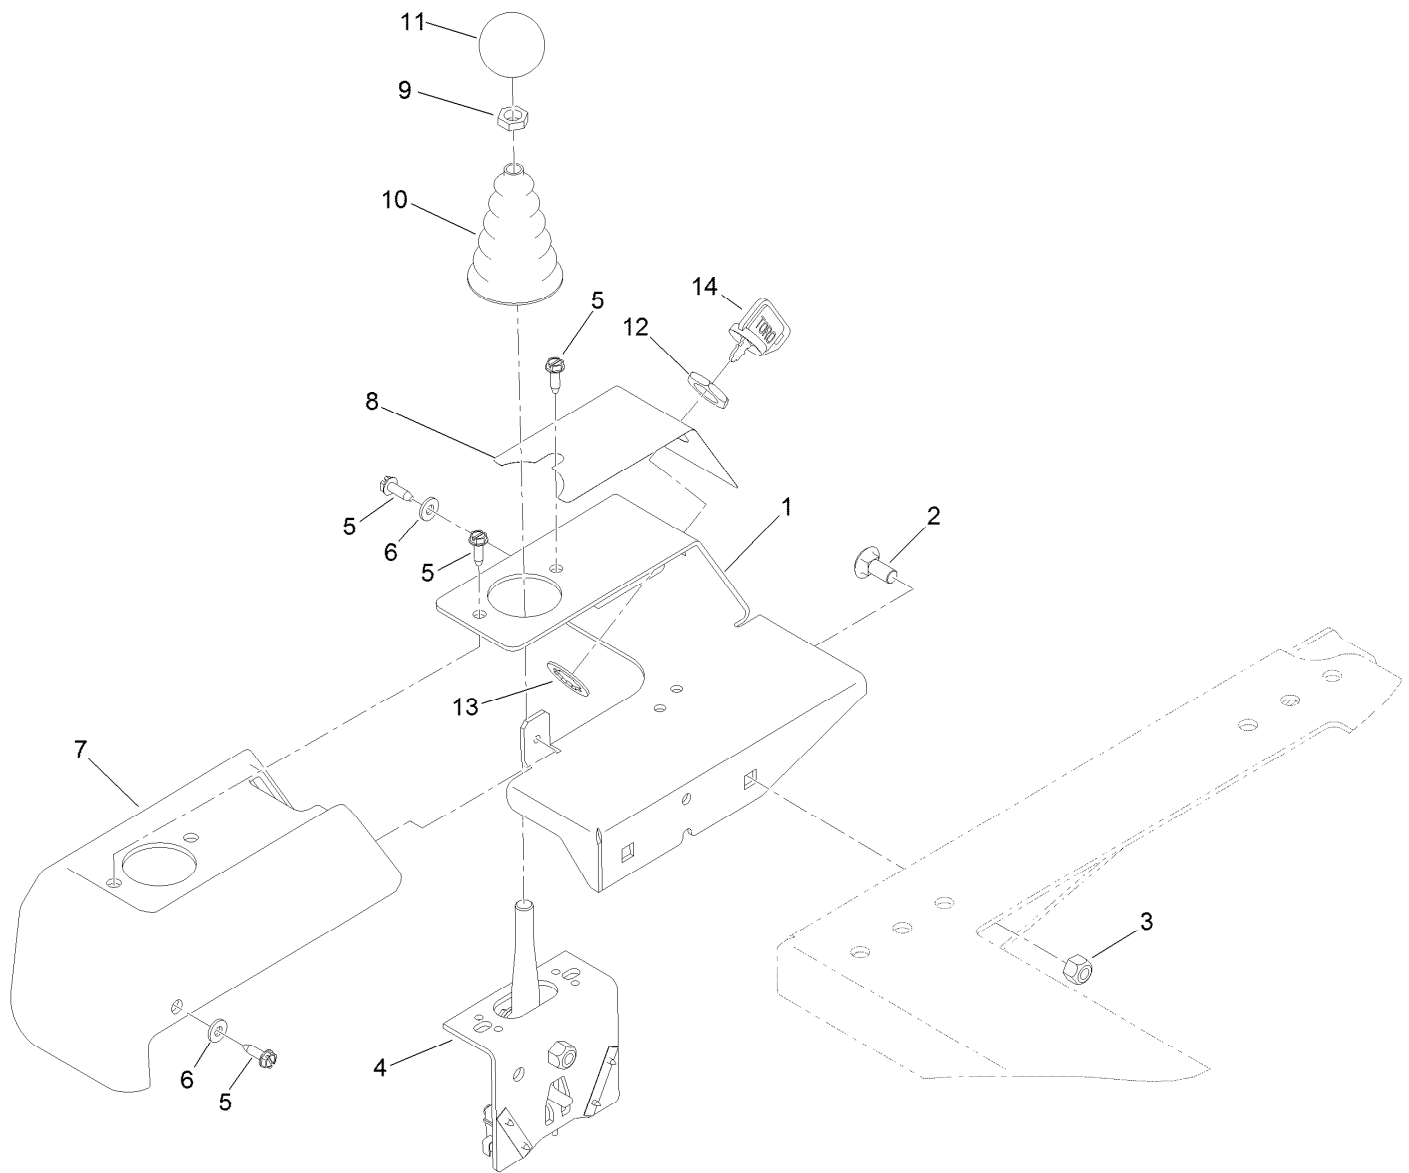 


Joystick Assembly

Ref.	Part Number	Qty.	Description
1	105-8252-03	1	Bracket-Pod
2	3230-1	2	Bolt-CARR
3	3296-29	2	Nut-Lock, NI
4	120-5280	1	Bracket-Joystick
5	32144-19	4	Screw-SHWH
6	3256-14	2	Washer-Flat
7	105-8251	1	Pod
8	105-8305	1	Decal-Panel, Control
9	3218-3	1	Nut-Jam
10	93-5961	1	Boot-Lever
11	233-42	1	Knob
12	107-1571	1	Nut-Hex
13	107-1572	1	Washer-Lock
14	63-8360	2	Key-Ignition

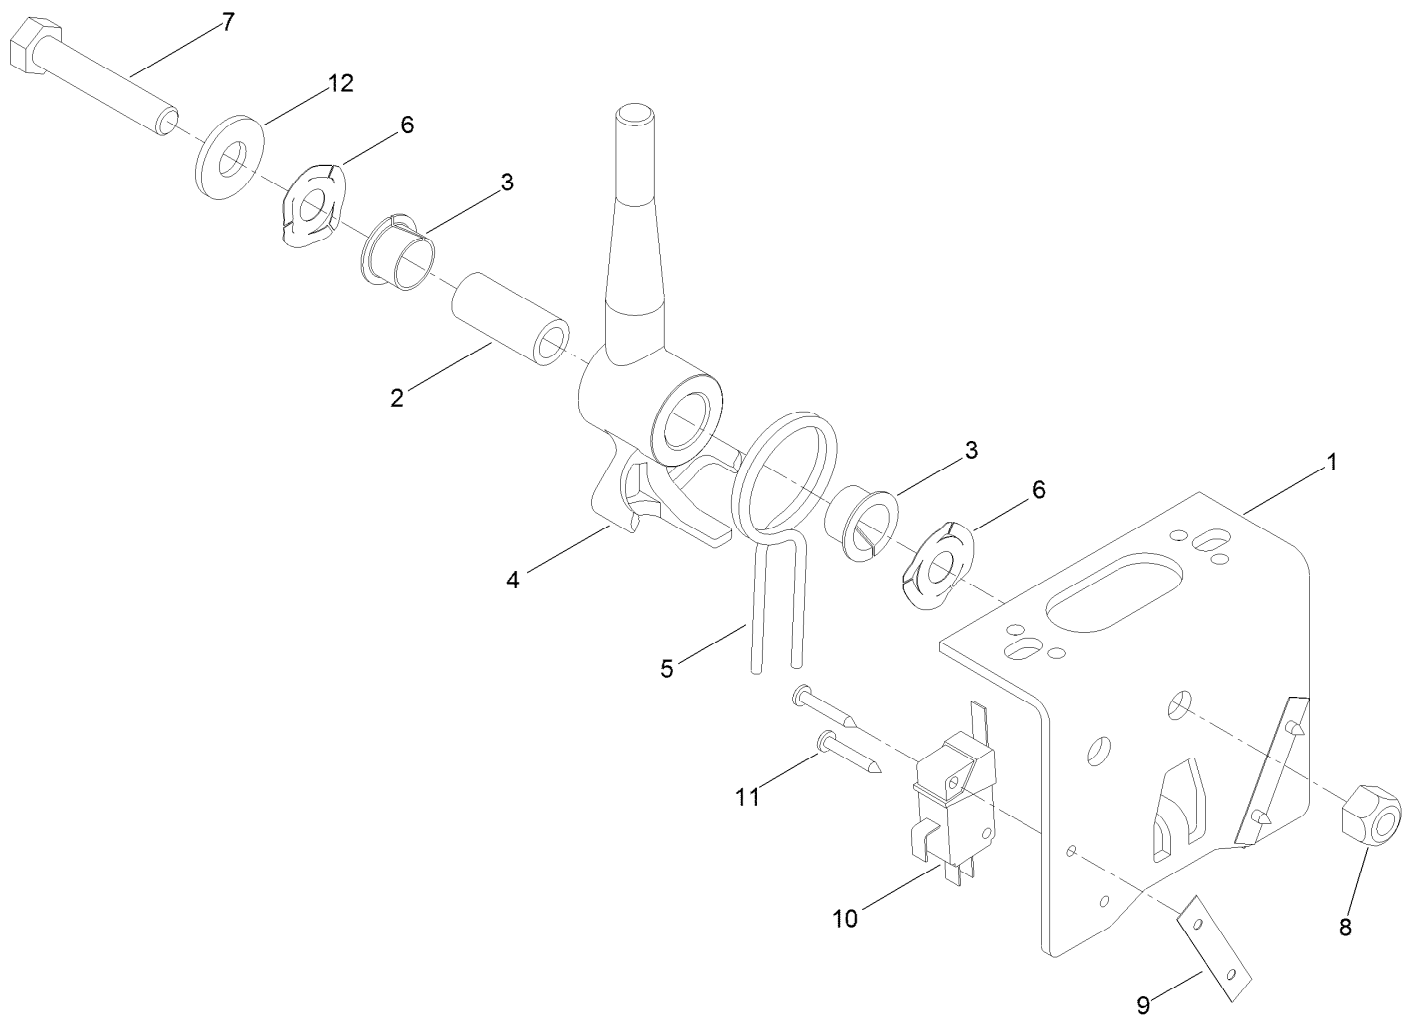 

Joystick Bracket Assembly No. 120-5280


Ref.	Part Number	Qty.	Description
1	115-5357-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	119-3540	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	108-6496	2	Switch (W/Boot)
11	95-3003	4	Screw-PPHTF
12	3256-3	1	Washer-Flat

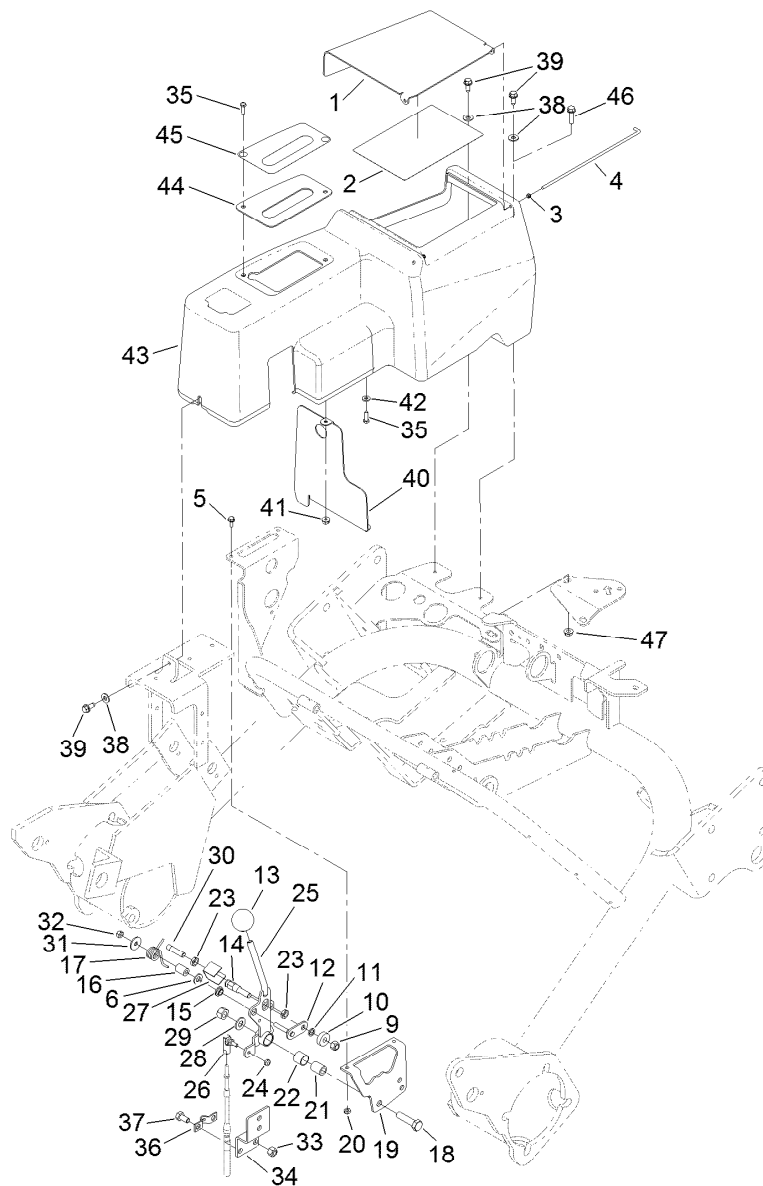 

Speed Selector Lever and Console Assembly

Ref.	Part Number	Qty.	Description
1	105-8254-03	1	Lid-Console
2	131-2794	1	Decal-Service
3	105-8283	2	Bushing
4	105-8256	1	Rod-Hinge
5	3290-321	2	Screw-HWH
6	3256-23	1	Washer-Plain
9	33024-00	1	Nut-Lock, NI
10	251-259	1	Bearing-Ball
11	75-5470	1	Spacer-Bearing
12	120-3198	1	Roller-Pivot
13	233-42	1	Knob
14	94-9617	1	Pin-Spring
15	94-9619	1	Bushing
16	94-9618	1	Spacer-Spring
17	94-9620	1	Spring-Torsion
18	33115-040	1	Screw-HH
19	94-6398	1	Bracket-Traction
20	3296-12	2	Nut-Lock, NI
21	94-1378	1	Tube-Pivot, Handle
22	256-311	1	Bushing-Split
23	117-4059	2	Nut-Hex


Ref.	Part Number	Qty.	Description
24	3296-27	1	Nut-Lock, NI
25	94-9611	1	Handle
26	2411-38	1	Joint-Ball
27	106-6356	1	Shield-Switch
28	3256-24	1	Washer-Flat
29	33025-00	1	Nut-Lock, NI
30	120-5348	1	Actuator-Switch
31	3256-67	1	Washer
32	33023-00	1	Nut-Lock
33	3296-29	4	Nut-Lock, NI
34	105-5417-03	1	Bracket-Cable, Shifter
35	3290-134	4	Screw
36	93-2279	1	Clamp-Cable
37	322-2	4	Screw-HH
38	3256-22	3	Washer-Flat
39	32144-10	2	Screw-HWH
40	105-8255-03	1	Baffle-Console
41	3290-148	4	Nut-HF
42	3256-77	2	Washer-Flat
43	105-8250	1	Console
44	105-8280-03	1	Plate-Console

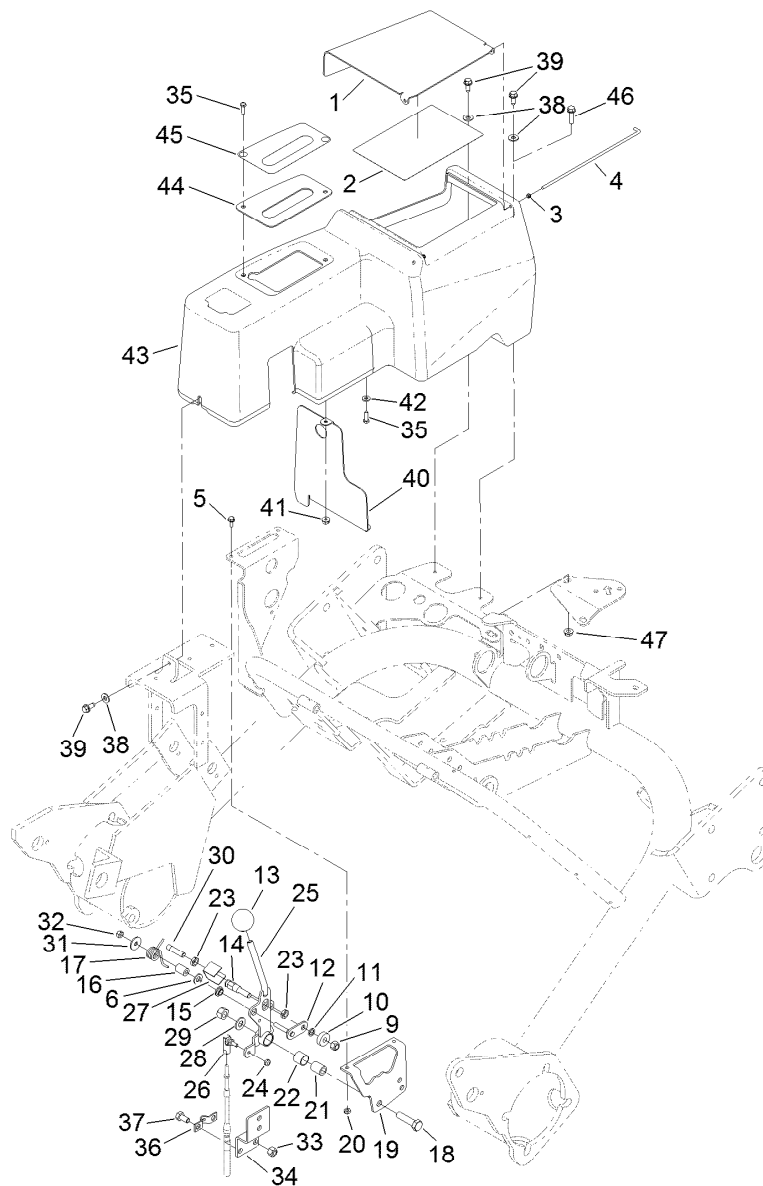 

Speed Selector Lever and Console Assembly (continued)

Ref.	Part Number	Qty.	Description
45	105-8306	1	Decal-Selector, Speed


Ref.	Part Number	Qty.	Description
46	32144-86	1	Screw-HWHTF
47	32128-33	1	Nut-HF

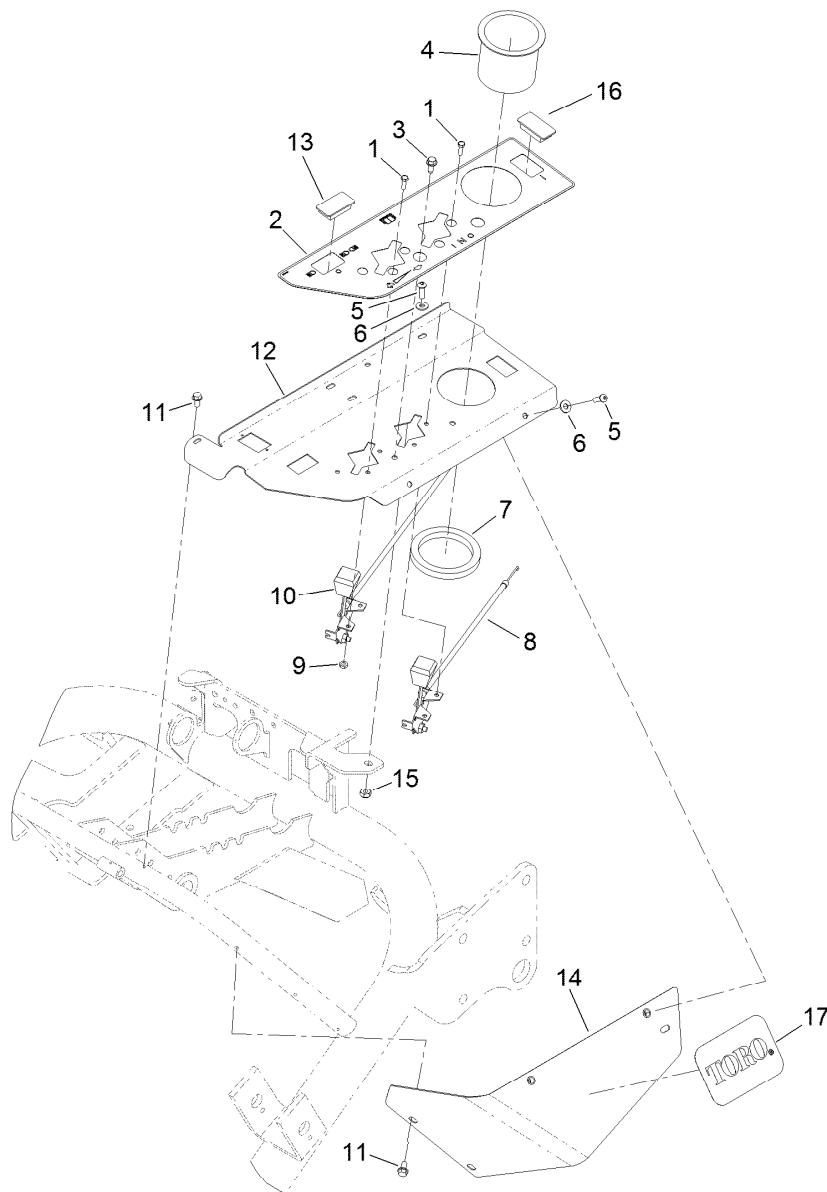 

Control Panel Assembly

Ref.	Part Number	Qty.	Description
1	3290-134	4	Screw
2	131-2007	1	Decal-Panel, Control (Left)
3	32144-10	2	Screw-HWH
4	94-1410	1	Holder-Can, Beverage
5	3274-69	4	Screw-HSBH
6	3256-22	4	Washer-Flat
7	104-1476	1	Ring-Rubber
8	83-0040	1	Control-Choke
9	3296-12	4	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
10	83-0030	1	Control-Throttle
11	32104-116	3	Screw-HWHTF
12	127-2246-03	1	Panel-Control
13	99-7420	1	Plug-Hole
14	105-5411	1	Shield-Cover, Valve
15	3296-16	2	Nut-Lock, NI
16	99-7420	1	Plug-Hole
17	94-2579	1	Decal

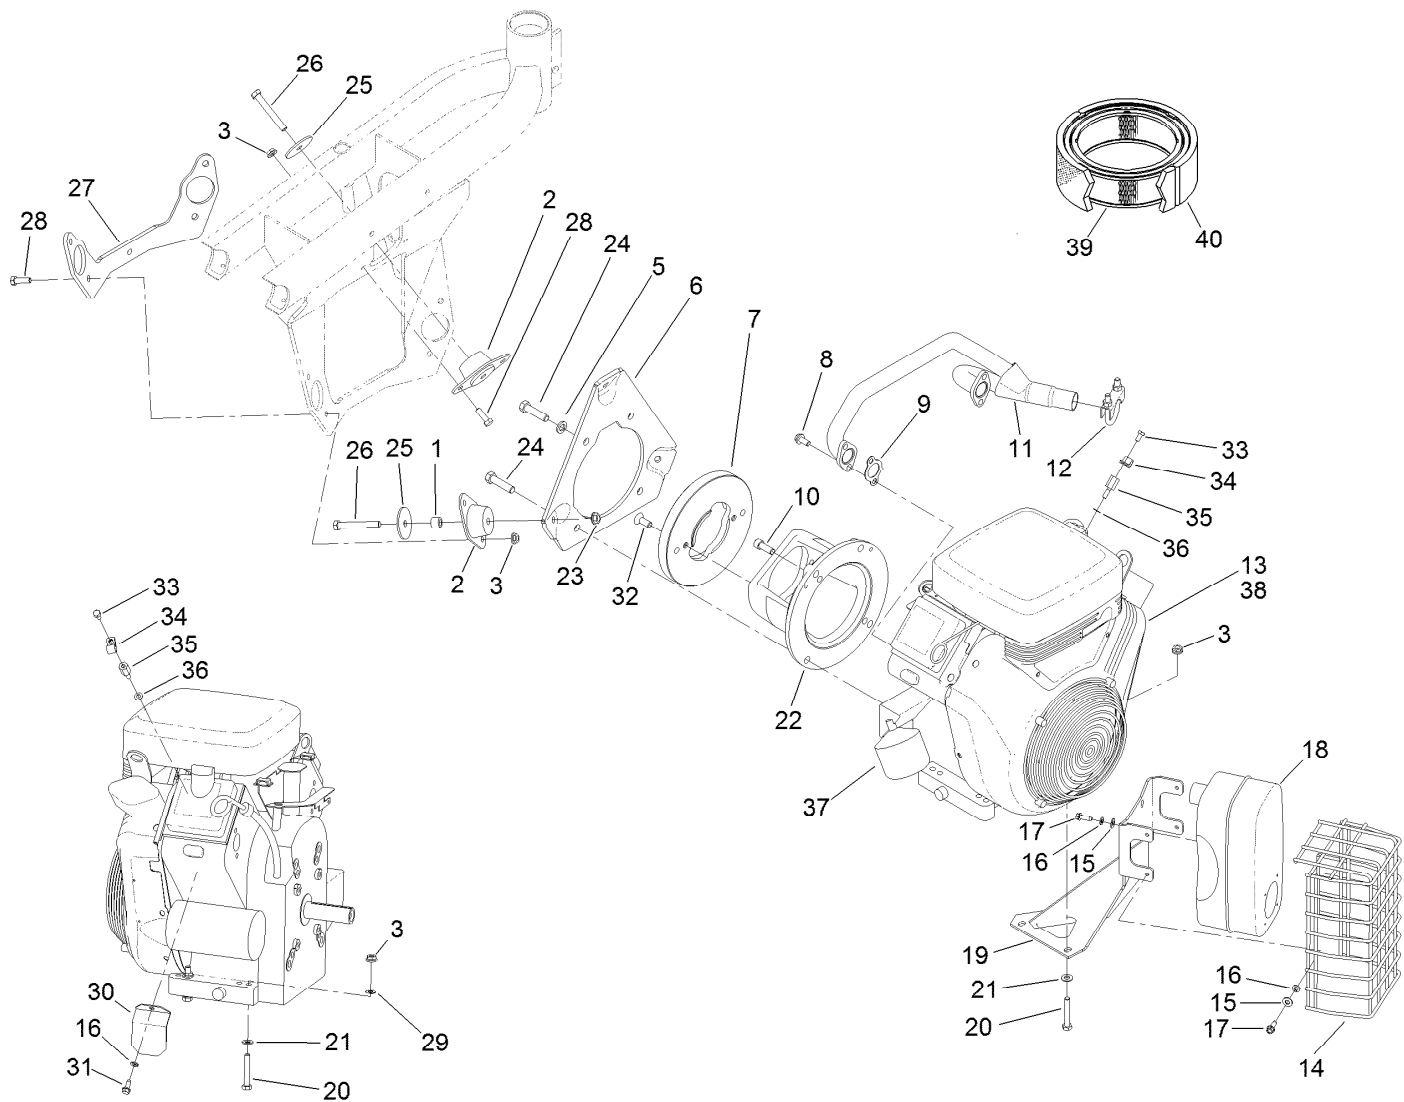 


Engine Installation Assembly

Ref.	Part Number	Qty.	Description
1	93-9847	2	Spacer
2	125-5244	3	Mount-Engine
3	32128-20	8	Nut-HF
5	3253-6	4	Washer-Lock
6	85-8120-03	1	Plate-Mount, Engine
7	131-2793	1	Plate-Adapter
8	94-5300	4	Screw-HHF
9	94-3449	2	Gasket-Manifold, Exhaust F/W 94-4194
10	3274-7	2	Screw-HSH
11	119-4128	1	Manifold-Exhaust
12	2112-11	1	Clamp-Muffler
13	132-9531	1	Engine-Vanguard
14	112-0220	1	Grille-Muffler
15	3256-1	8	Washer-Flat
16	3253-3	9	Washer-Lock
17	49-2040	8	Screw-HWHTF
18	98-0616	1	Muffler
19	83-1630-03	1	Bracket-Support, Muffler
20	322-10	2	Screw-HH

Ref.	Part Number	Qty.	Description
21	3256-23	2	Washer-Plain
22	83-1060-03	1	Adapter-Pump
23	3290-357	3	Nut-HHF, Whiz
24	324-7	4	Screw-HH
25	83-1040	3	Washer-Flat
26	323-13	3	Screw-HH
27	121-9539-01	1	Support-Engine
28	322-5	6	Screw-HH
29	3255-8	1	Washer-Lock
30	83-2310	1	Shield-Regulator
31	32144-10	1	Screw-HWH
32	ST80068	2	Screw
33	33113-012	1	Screw-HH
34	2412-94	1	Clamp
35	106-4616	1	Screw-Spacer
36	127-2229	1	Washer-Fiber
37	107-7817	1	Filter-Oil, Engine
38	108-6945	2	Plug-Spark
39	92-0527	1	Cartridge-Cleaner, Air
40	92-0530	1	Element-Filter




Ref.	Part Number	Qty.	Description
23	63-8410	4	Washer
24	2412-41	3	Clamp-R
25	323-6	4	Screw-HH
26	109-0296	1	Hose-Fuel
27	104-7201	1	Nut-HF
28	2412-72	1	Clip-Closed, Insulated
29	321-3	1	Screw-HH
30	121-2583	1	Filter-Fuel, Inline
31	121-2584	1	Hose ASM
32	119-8149	1	Hose-Fuel
33	121-2586	1	Tubing-Convolved, Slit
34	3290-378	2	Tie-Cable
36	121-2585	1	Hose ASM
38	121-2573	1	Fitting-Straight
39	2412-93	1	Clamp-R
40	3256-23	1	Washer-Plain
41	322-1	1	Screw-HH

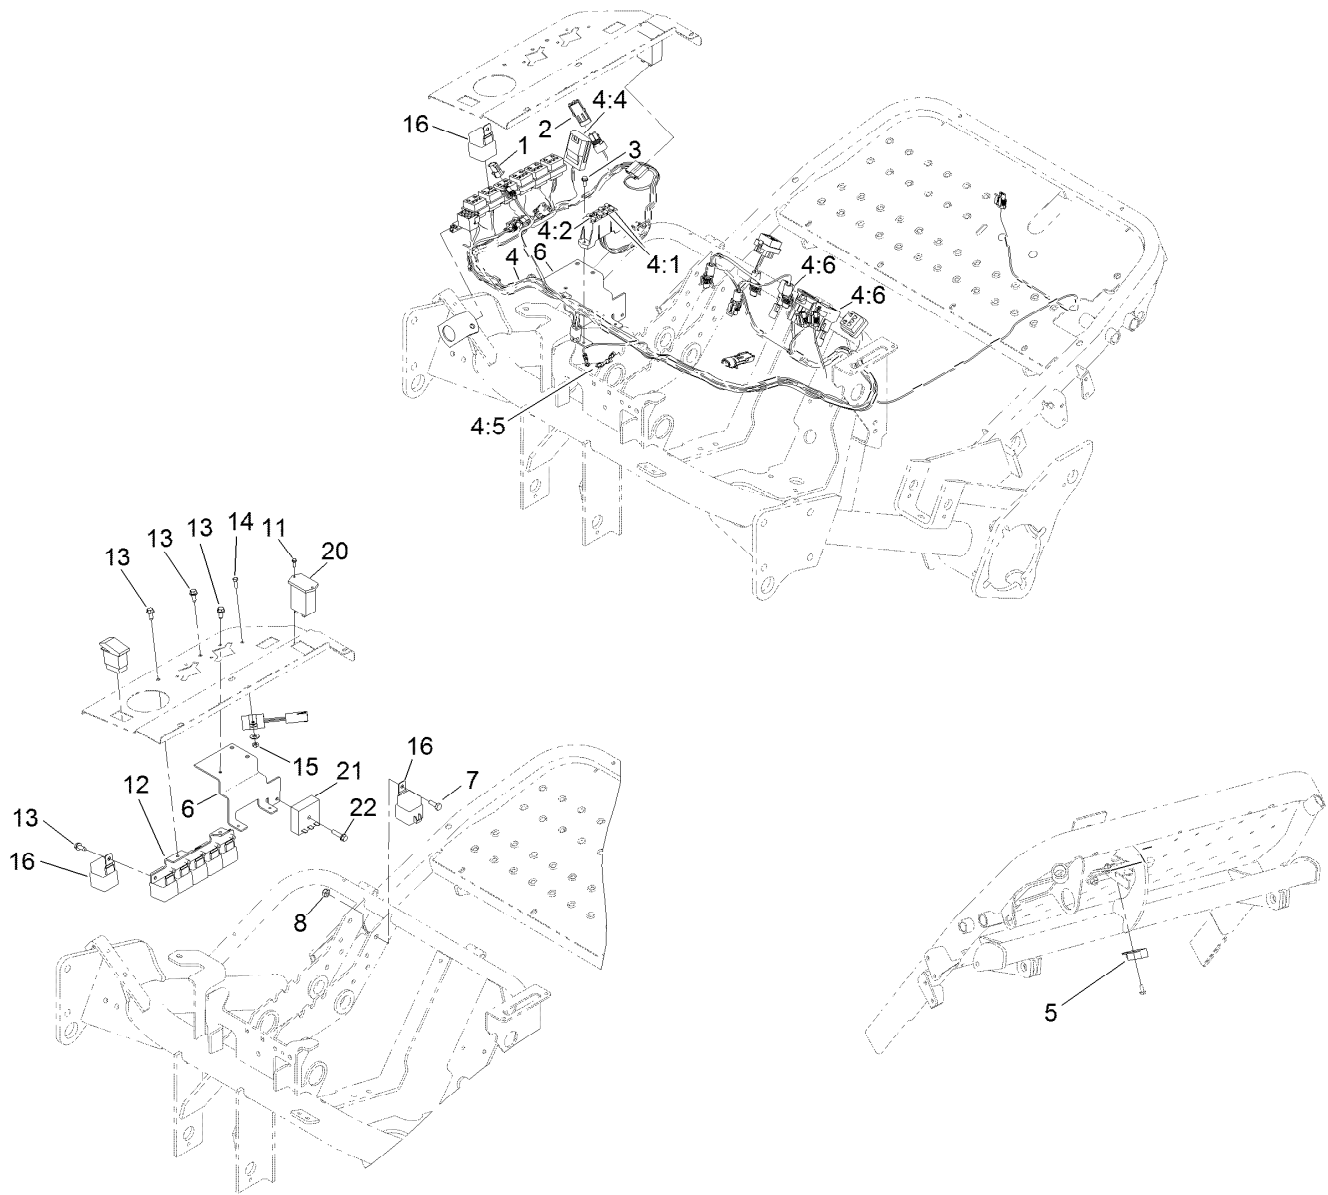 

Wire Harness Assembly

Ref.	Part Number	Qty.	Description
1	32180-056	1	Cap
2	122-0686	3	Cap
3	32144-1	2	Screw-Taptite
4	122-0148	1	Harness-Wire
4:1	218-578	2	Fuse-Blade, 10 Amp
4:2	109101	1	Fuse-Blade, 20 Amp
4:4	92-3188	2	Diode-Board, Circuit
4:5	106-4641	1	Harness-Wire, Fusible Link
4:6	100-4918	2	Diode
5	104-2057	1	Sensor
6	105-4310-01	1	Bracket-Fuse


Ref.	Part Number	Qty.	Description
7	321-4	1	Screw-HH
8	3296-16	1	Nut-Lock, NI
11	32144-18	2	Screw-HWH
12	105-4306-03	1	Bracket-Relay
13	32144-10	9	Screw-HWH
14	3290-134	1	Screw
15	3296-12	1	Nut-Lock, NI
16	99-7430	7	Relay-Mini 280
20	75-6820	1	Hourmeter
21	92-2538	1	Module-Timer
22	32144-86	1	Screw-HWHTF

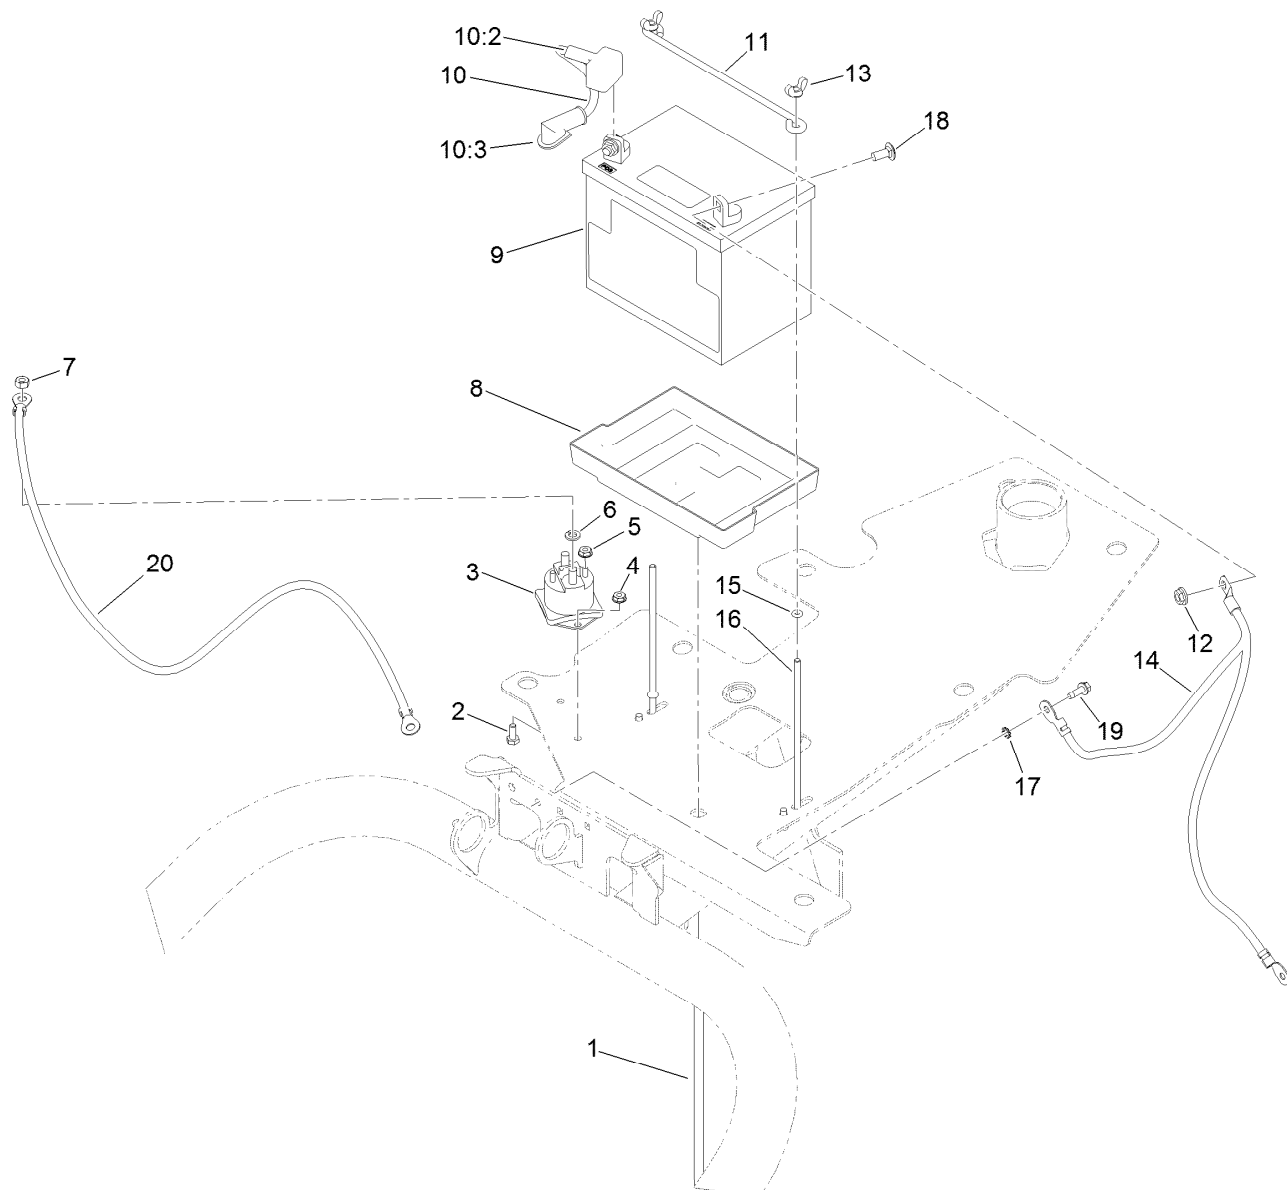 

Battery Assembly



Ref.	Part Number	Qty.	Description
1	104-2061	1	Tube-Drain, Battery
2	321-3	2	Screw-HH
3	28-4210	1	Solenoid
4	32149-2	2	Nut-Keps
5	32149-8	2	Nut-Keps
6	3253-4	2	Washer-Lock
7	3218-13	2	Nut-Jam, Brass
8	106948	1	Tray-Battery
9	104-8162	1	Battery-Dry
10	83-2420	1	Positive Cable ASM
10:2	28-8080	1	Boot-Terminal

Ref.	Part Number	Qty.	Description
10:3	83-2430	1	Boot-Terminal
11	100-6434	1	Rod-Hold Down, Battery
12	32128-20	2	Nut-HF
13	32103-22	2	Nut-Wing
14	122-0370	1	Cable-Battery, Negative
15	237-143	2	O-Ring
16	100-6435	2	Post-Battery
17	3255-7	1	Washer-Lock/EXT
18	3230-23	2	Screw-CARR
19	32104-95	1	Screw-HWH
20	98-2161	1	Cable-Battery, Positive

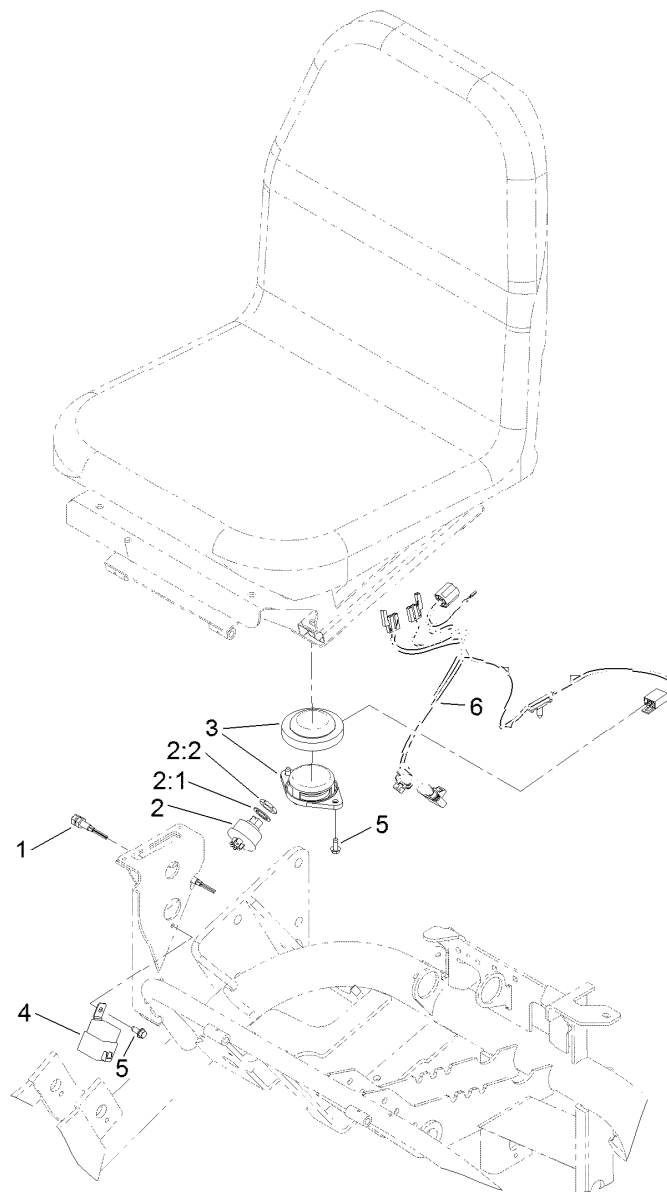 


Ignition and Seat Switch Assembly

Ref.	Part Number	Qty.	Description
1	112-0278	2	Switch-Reed
2	104-2541	1	Switch ASM
2:1	218-461	1	Nut-HH
2:2	3254-5	1	Washer-Lock
3	100-3524	1	Switch-Seat
4	99-7430	1	Relay-Mini 280
5	32144-10	1	Screw-HWH
6	108-9466	1	Harness-Wire, Seat

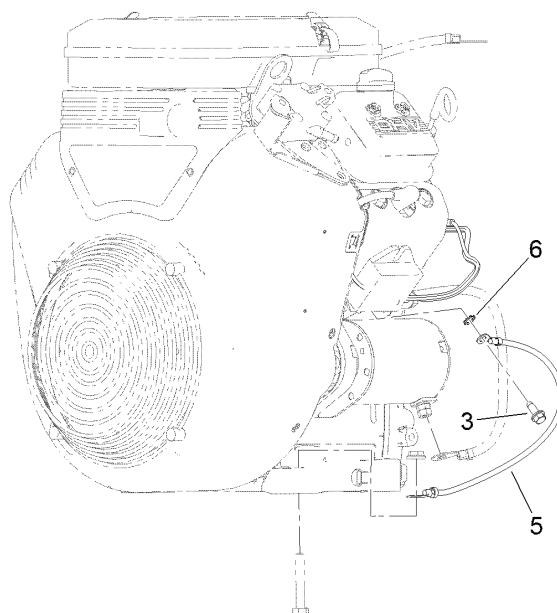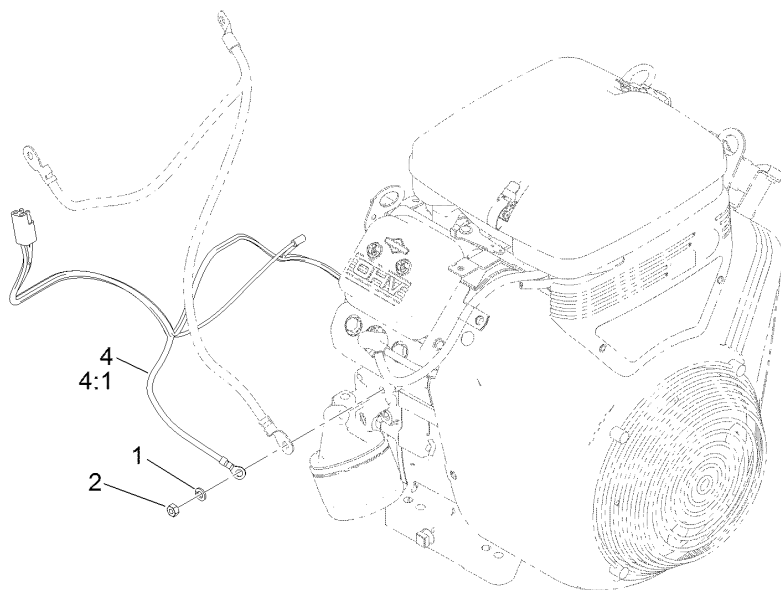  

Engine Wire Harness Assembly


Ref.	Part Number	Qty.	Description
1	3253-3	1	Washer-Lock
2	43-2830	1	Nut-Hex
3	32144-10	1	Screw-HWH
4	105-8276	1	Harness-Wire, Engine
4:1	106-4642	1	Harness-Wire, Fusible Link
5	108-6486	1	Wire-Ground
6	3255-7	1	Washer-Lock/EXT

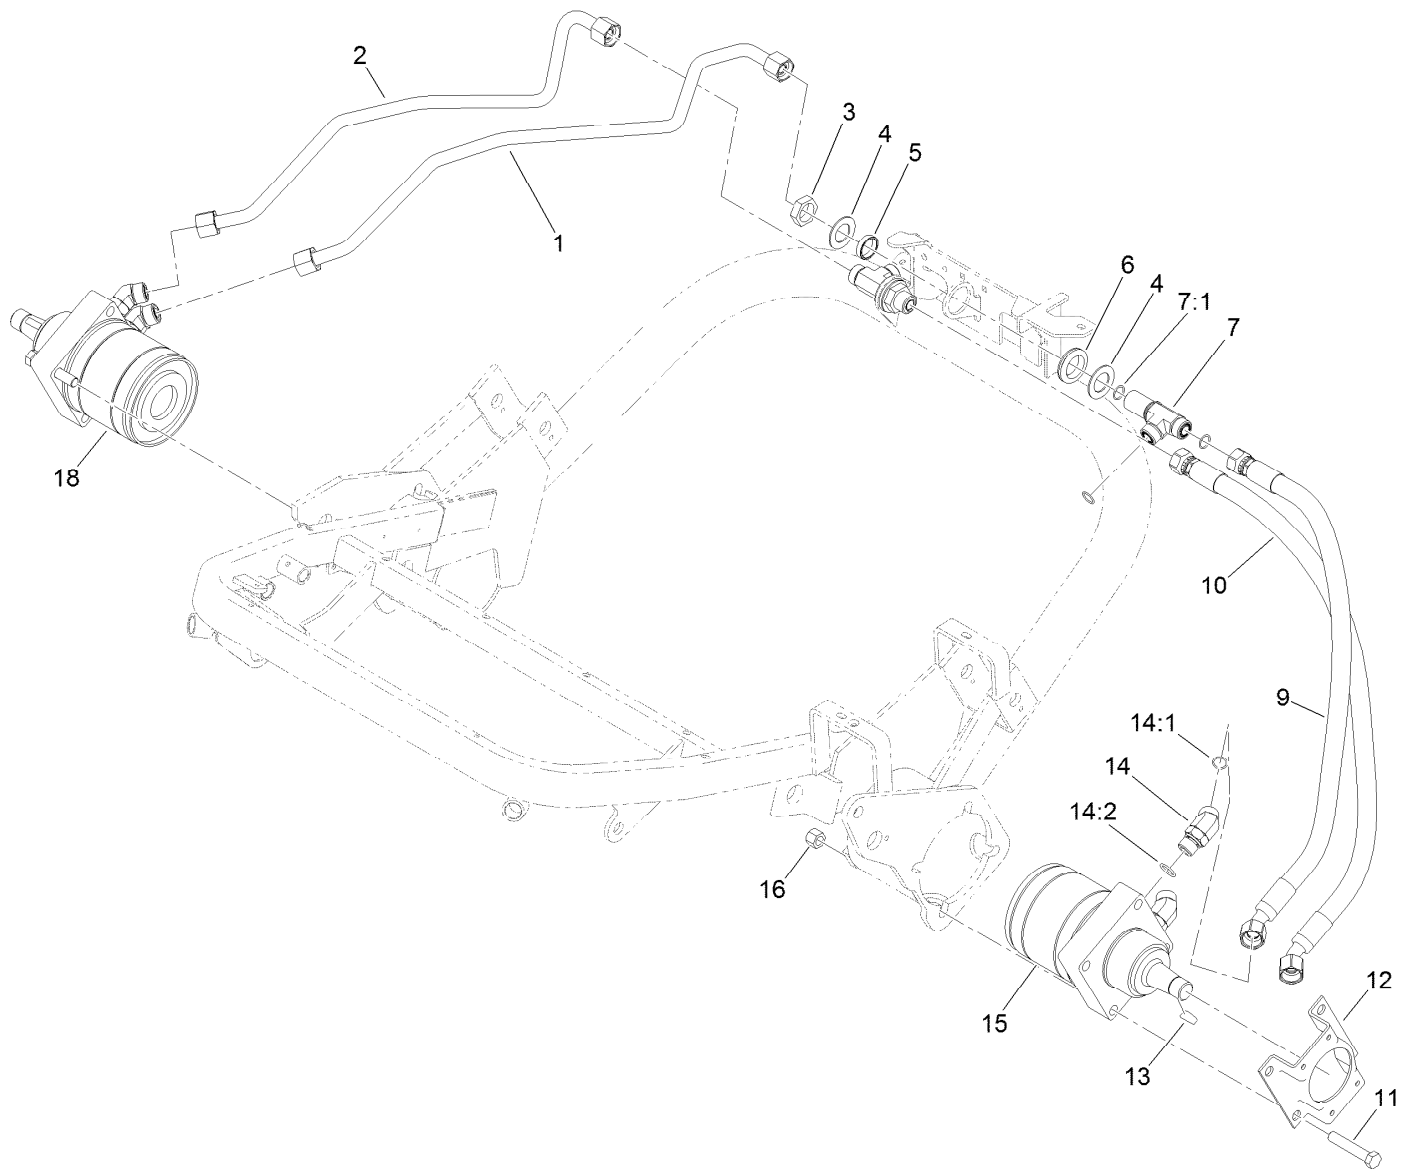 

Ground Drive Assembly

Ref.	Part Number	Qty.	Description
1	112-0204	1	Tube-HYD
2	112-0203	1	Tube-HYD
3	340-74	2	Nut-Lock, Bulkhead
4	69-9010	4	Washer
5	125-1984	2	Spacer
6	240-3	2	Grommet-Rubber
7	94-5350	2	Fitting-Tee
7:1	237-65	3	O-Ring
9	105-4336	1	Hose-HYD
10	105-4333	1	Hose-HYD

Ref.	Part Number	Qty.	Description
11	325-11	8	Screw-HH
12	84-2000-03	2	Bracket-Brake
13	3257-42	2	Key-Woodruff
14	340-14	4	Fitting-HYD, 45 DEG
14:1	237-65	1	O-Ring
14:2	237-80	1	O-Ring
15	110-4015	1	HYD Motor ASM (CCW)
16	3296-23	8	Nut-Lock, NI
18	110-4016	1	HYD Motor ASM (CW)

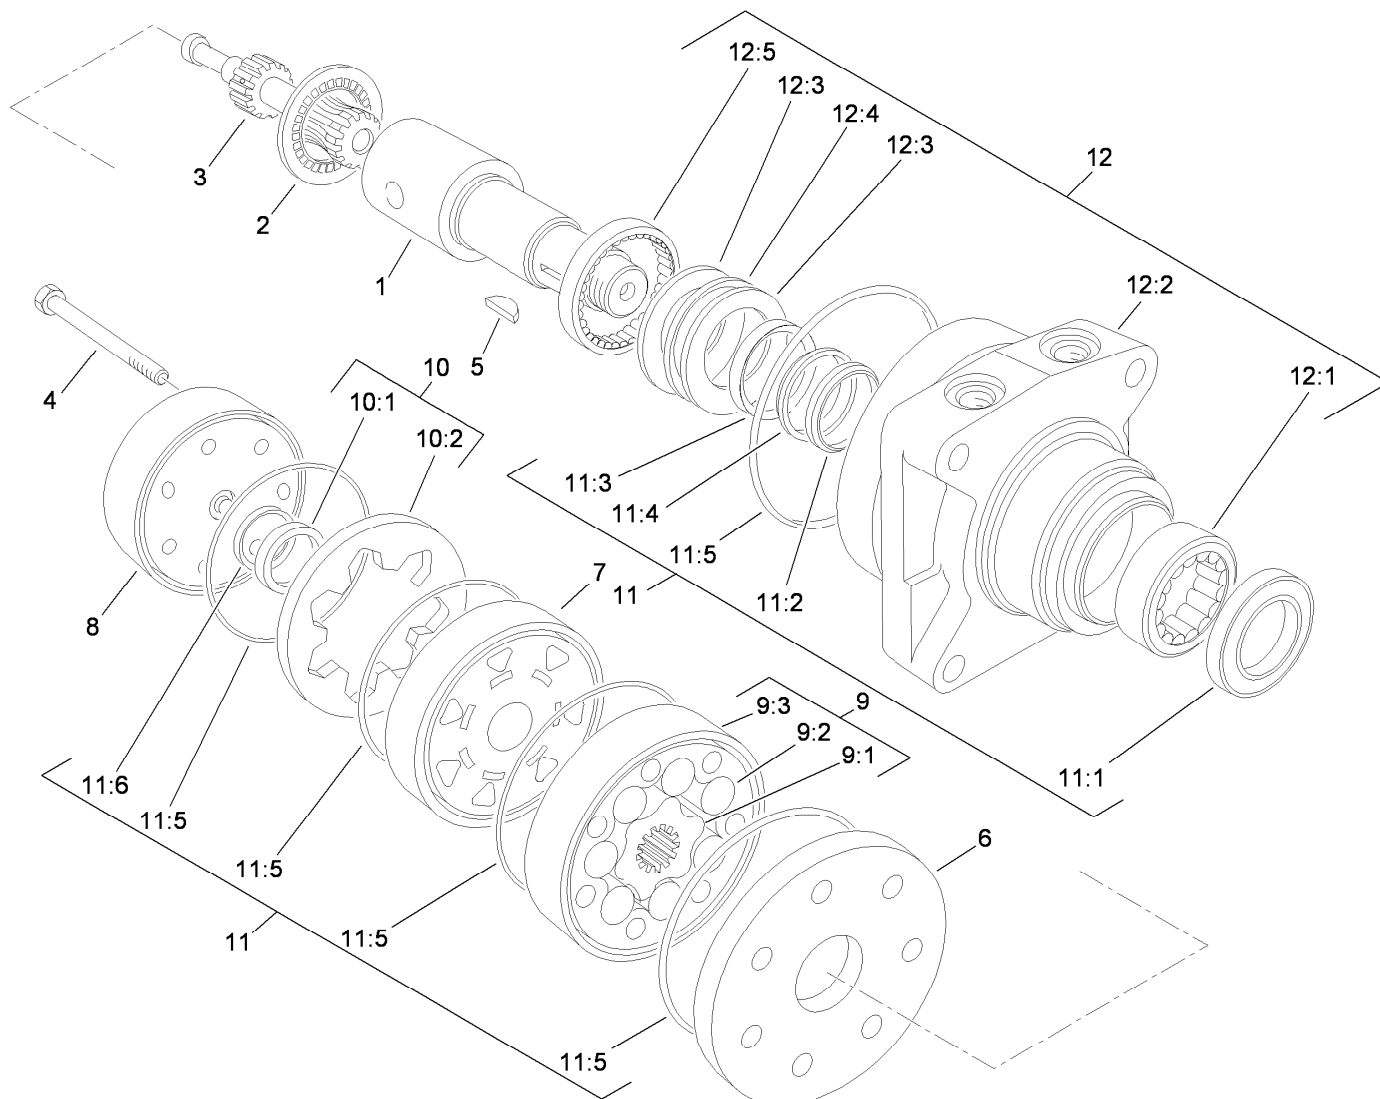 


Hydraulic Motor Assembly (CW) No. 110-4016

Ref.	Part Number	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	92-9761	1	Link-Drive
4	92-9762	7	Screw-HH
5	3257-42	1	Key-Woodruff
6	92-9754	1	Plate-Wear
7	76-0840	1	Manifold
8	76-0940	1	End Cover ASM
9	92-9763	1	Rotor Set
9:1		1	Rotor ●
9:2		1	Vane ●
9:3		1	Stator ●
10	76-0880	1	Commutator ASM
10:1		1	Commutator ●

Ref.	Part Number	Qty.	Description
10:2		1	Ring-Commutator ●
11	94-8178	1	Seal Kit
11:1		1	Seal-Dirt And Water ●
11:2		1	Backup-Ring ●
11:3		1	Seal-Shaft ●
11:4		1	Washer-Backup ●
11:5		5	Seal-Square, Ring (Inner) ●
11:6		1	Seal-Commutator ●
12	76-0810	1	Housing ASM
12:1		1	Bearing ●
12:2		1	Housing ●
12:3		2	Washer-Thrust ●
12:4		1	Bearing-Thrust ●
12:5		1	Bearing ●

 ● Not serviced separately

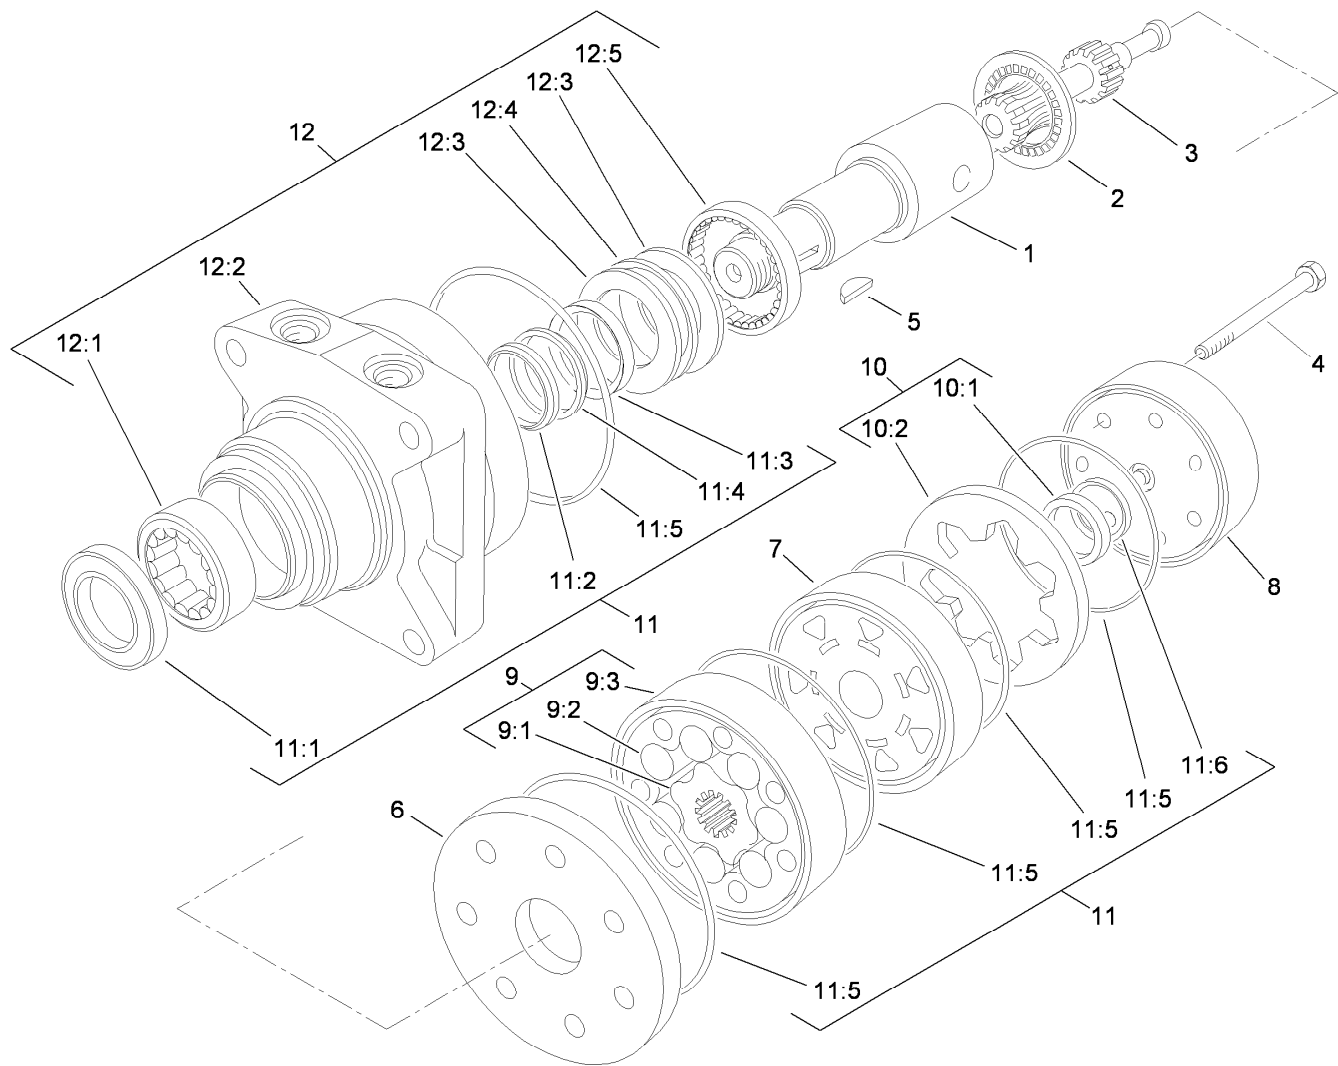


Hydraulic Motor Assembly (CCW) No. 110-4015

Ref.	Part Number	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	92-9761	1	Link-Drive
4	92-9762	7	Screw-HH
5	3257-42	1	Key-Woodruff
6	92-9754	1	Plate-Wear
7	76-0840	1	Manifold
8	76-0940	1	End Cover ASM
9	92-9763	1	Rotor Set
9:1		1	Rotor ●
9:2		1	Vane ●
9:3		1	Stator ●
10	76-0880	1	Commutator ASM
10:1		1	Commutator ●

Ref.	Part Number	Qty.	Description
10:2		1	Ring-Commutator ●
11	94-8178	1	Seal Kit
11:1		1	Seal-Dirt And Water ●
11:2		1	Backup-Ring ●
11:3		1	Seal-Shaft ●
11:4		1	Washer-Backup ●
11:5		5	Seal-Square, Ring (Inner) ●
11:6		1	Seal-Commutator ●
12	76-0810	1	Housing ASM
12:1		1	Bearing ●
12:2		1	Housing ●
12:3		2	Washer-Thrust ●
12:4		1	Bearing-Thrust ●
12:5		1	Bearing ●

 
● Not serviced separately

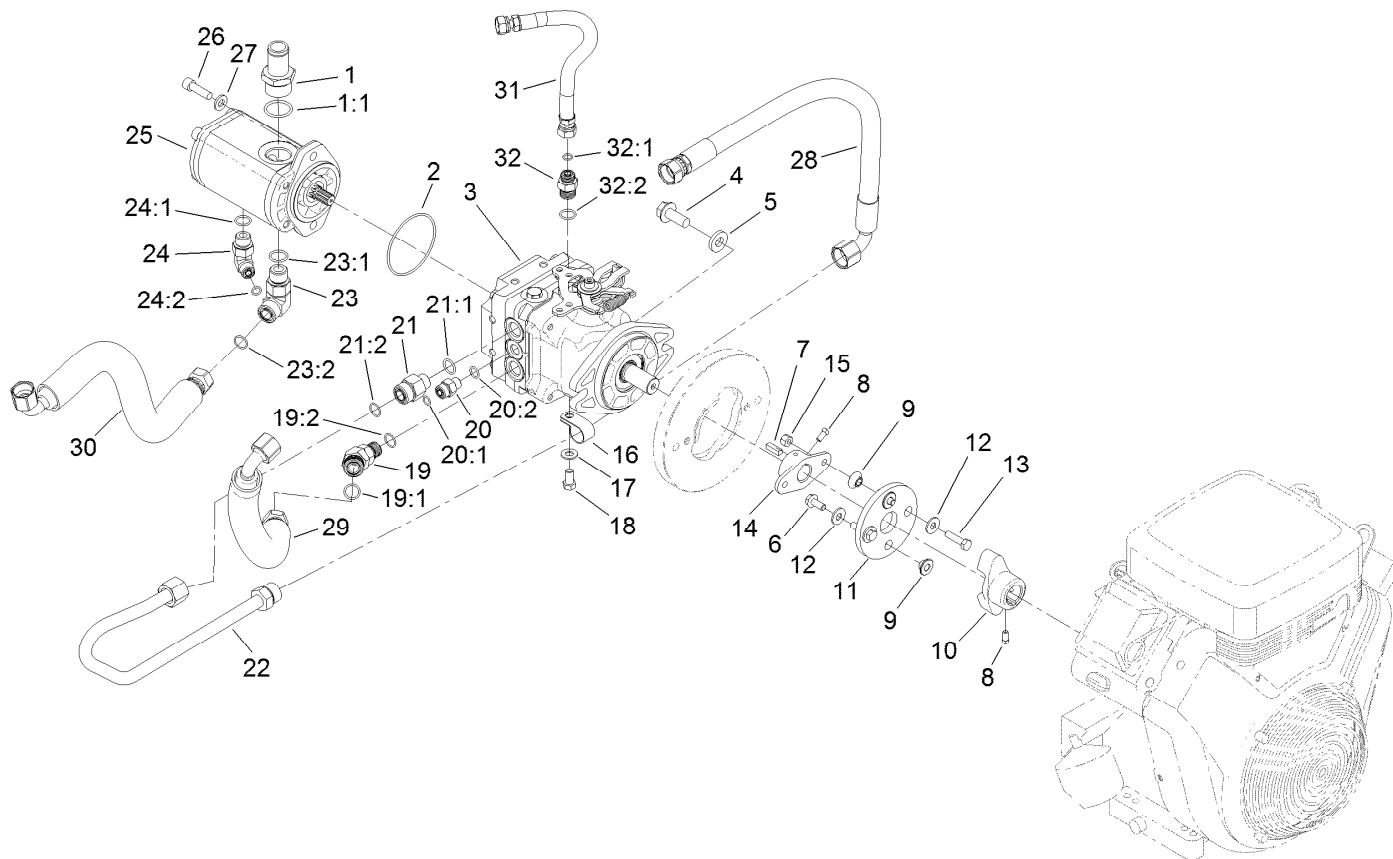

Hydrostat and Gear Pump Drive Assembly

Ref.	Part Number	Qty.	Description
1	354-78	1	Fitting-STR
1:1	237-146	1	O-Ring
2	237-161	1	O-Ring
3	131-2767	1	Pump-Hydro
4	3234-38	2	Screw-HHF
5	107-3395	2	Washer-Hardened
6	98-9940	2	Screw-HHF
7	10-7070	2	Key-Square
8	3241-7	4	Screw-SQH
9	125-9249	4	Spacer-Coupler, Rubber
10	117-9278	1	Hub-Engine
11	115-4523	1	Coupling-Rubber
12	3256-3	4	Washer-Flat
13	322-6	2	Screw-HH
14	110-5227	1	Hub-Pump
15	3296-29	2	Nut-Lock, NI
16	2412-41	1	Clamp-R
17	3256-24	1	Washer-Flat
18	323-4	1	Screw-HH
19	340-55	1	Fitting-HYD, 45 DEG
19:1	237-79	1	O-Ring


Ref.	Part Number	Qty.	Description
19:2	237-65	1	O-Ring
20	340-2	1	Fitting-Straight
20:1	237-22	1	O-Ring
20:2	237-42	1	O-Ring
21	340-155	1	Fitting-Straight
21:1	237-79	1	O-Ring
21:2	237-151	1	O-Ring
22	131-2795	1	Tube-HYD
23	340-17	1	Fitting-Elbow, 90 DEG
23:1	237-65	1	O-Ring
23:2	237-80	1	O-Ring
24	340-18	1	Fitting-HYD, 90 DEG
24:1	237-79	1	O-Ring
24:2	237-22	1	O-Ring
25	114-9956	1	HYD Gear Pump ASM
26	3274-1	2	Screw-HSH
27	100-4852	2	Washer-Hardened
28	99-6193	1	Hose ASM
29	105-4332	1	Hose-HYD
30	131-2042	1	Hose-HYD
31	76-9420	1	Hose-HYD

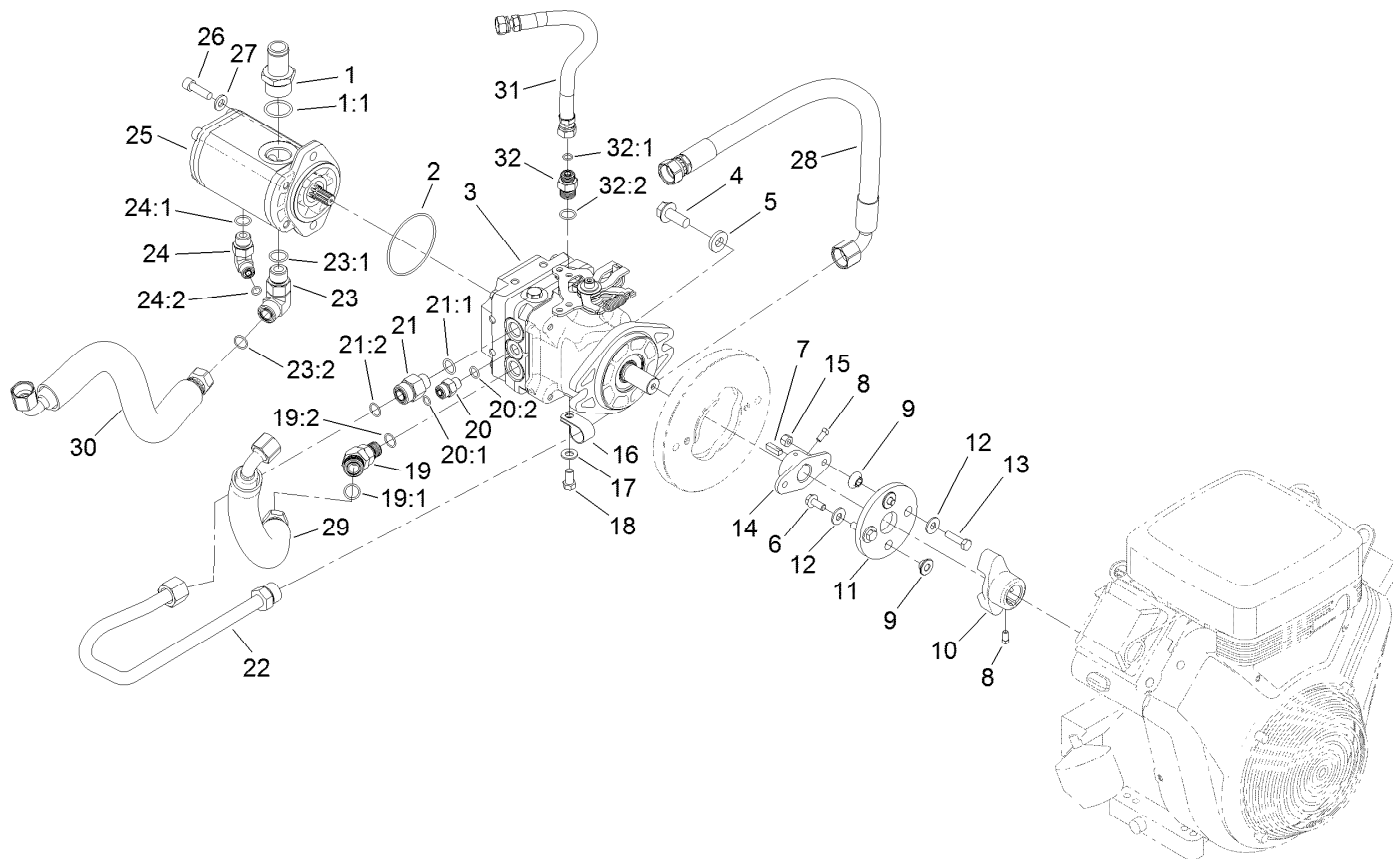 

Hydrostat and Gear Pump Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
32	340-3	1	Fitting-Straight


Ref.	Part Number	Qty.	Description
32:1	237-22	1	O-Ring
32:2	237-79	1	O-Ring

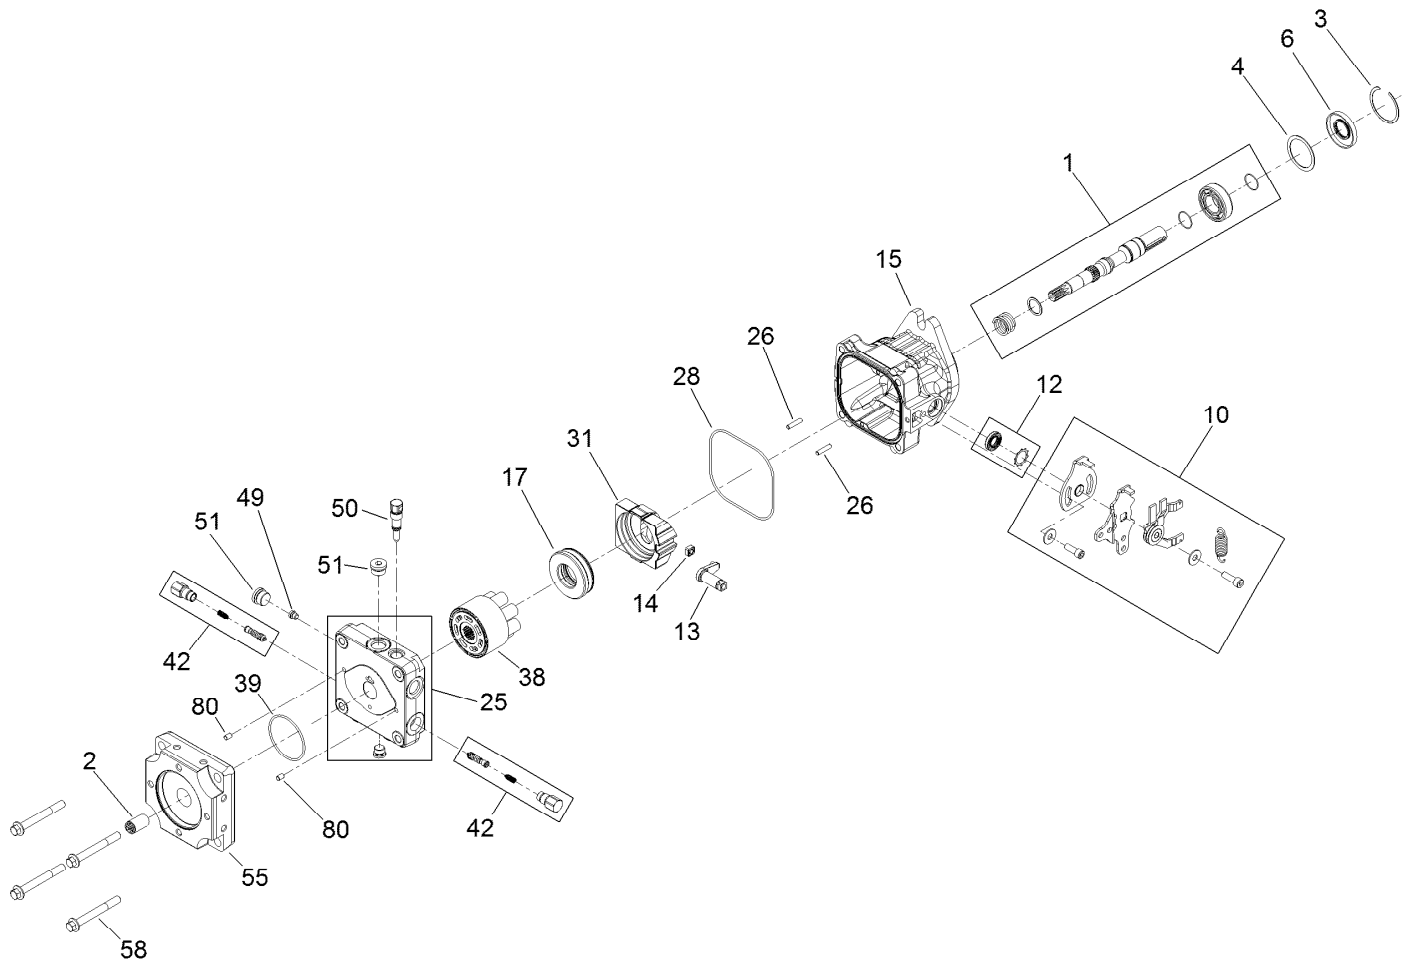 

Hydraulic Pump Assembly No. 131-2767

Ref.	Part Number	Qty.	Description
1	133-8960	1	Pump Shaft Kit
2	133-8994	1	Coupling
3	133-8961	1	Ring-Retaining
4	133-8962	1	Washer
6	133-8963	1	Seal
10	133-8973	1	Heavy Return Kit
12	114-8155	1	Trunnion Seal Kit
13	133-8964	1	Arm-Trunnion
14	94-1910	1	Guide-Slot
15	133-8965	1	Front Housing Kit
17	133-8966	1	Bearing-Thrust
25	133-8967	1	Endcap Kit


Ref.	Part Number	Qty.	Description
26	106-8753	2	Pin-Headless, Straight
28	133-8968	1	O-Ring
31	133-8969	1	Swashplate
38	127-3867	1	Cylinder Block Kit
39	133-8970	1	O-Ring
42	112-4155	1	Shock Valve Kit
49	106-8763	1	Plug-HSH
50	133-8971	1	Valve-Bypass
51	112-4156	2	Plug-Steel
55	133-8972	1	Plate-Adapter
58	112-4157	4	Bolt
80	104-2170	2	Pin

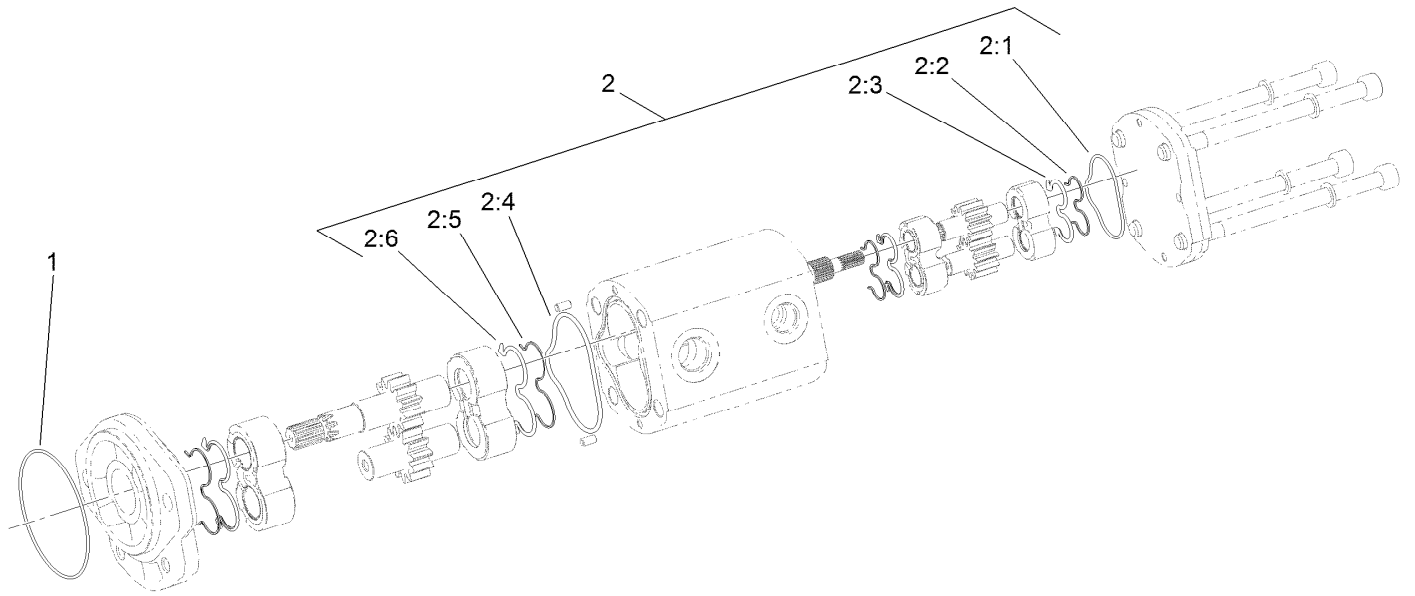 

Hydraulic Gear Pump Assembly No. 114-9956

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	353-949	1	O-Ring
2	119-7134	1	Kit-Seal
2:1		1	O-Ring ●
2:2		2	Seal-Extrusion, Anti ●
2:3		2	Seal-Backup ●
2:4		1	O-Ring ●
2:5		2	Seal-Extrusion, Anti ●
2:6		2	Seal-Backup ●

 
● Not serviced separately

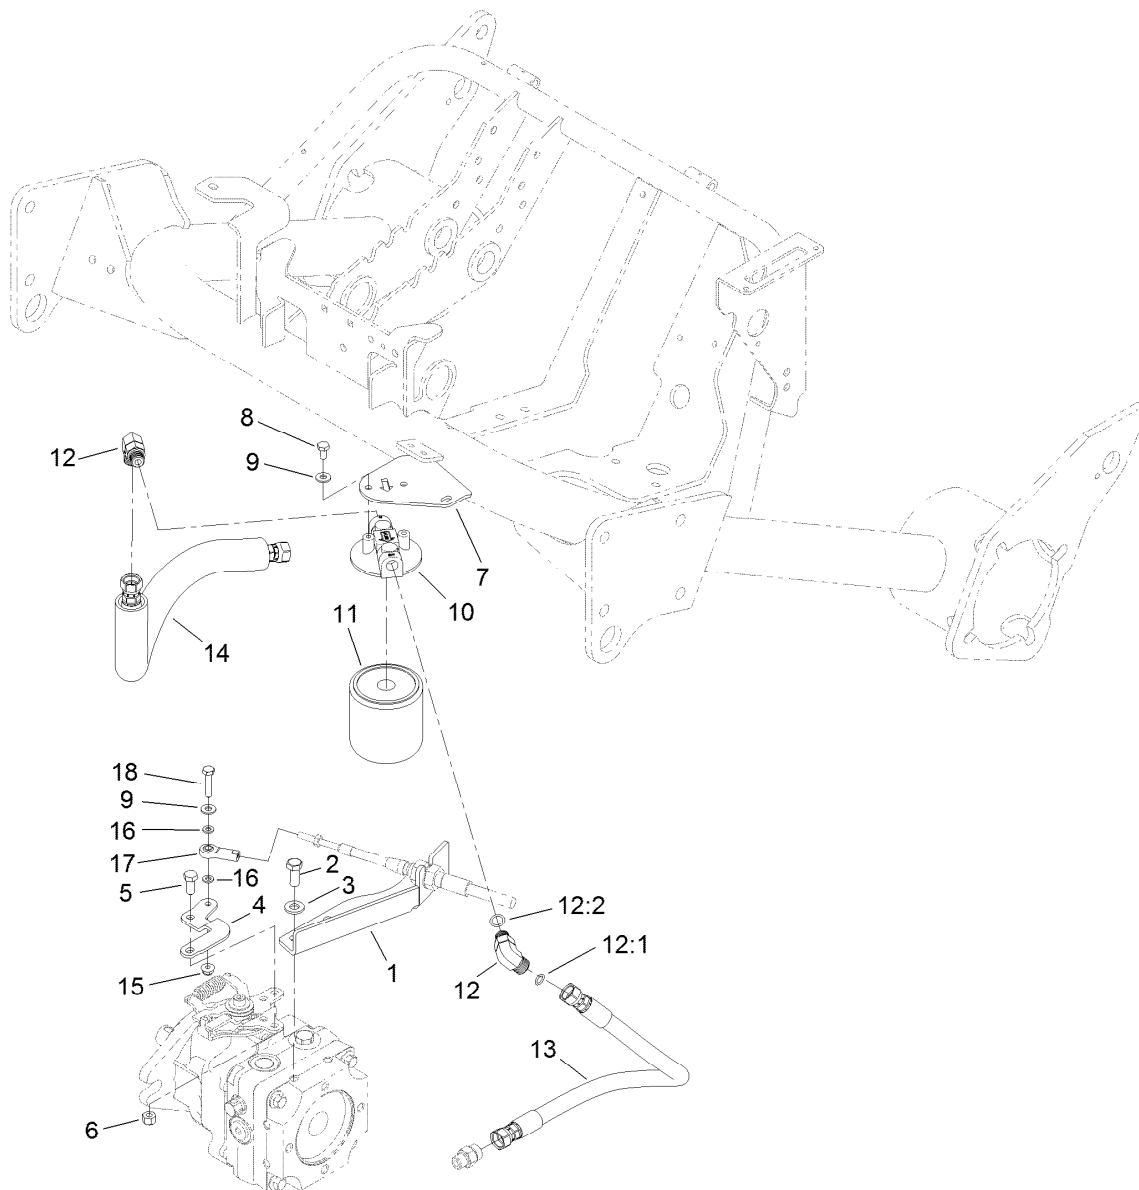

Neutral System and Hydraulic Return Assembly

Ref.	Part Number	Qty.	Description
1	131-2790	1	Bracket-Support, Cable
2	323-5	2	Screw-HH
3	100-4852	2	Washer-Hardened
4	131-2797	1	Bracket-Interface, Cable
5	322-3	2	Screw-HH
6	3296-29	2	Nut-Lock, NI
7	132-6997-01	1	Bracket-Oil Filter
8	321-2	2	Screw-HH
9	3256-22	3	Washer-Flat
10	104-7836	1	Head-Filter


Ref.	Part Number	Qty.	Description
11	1-633750	1	Filter-Oil, HYD
12	340-77	2	Fitting-Elbow, 90 DEG
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	99-3579	1	Hose-HYD
14	99-3575	1	Hose-HYD
15	104-7201	1	Nut-HF
16	33093-00	2	Washer-Flat
17	2411-41	1	Rod End-Ball Joint
18	321-8	1	Screw-HH

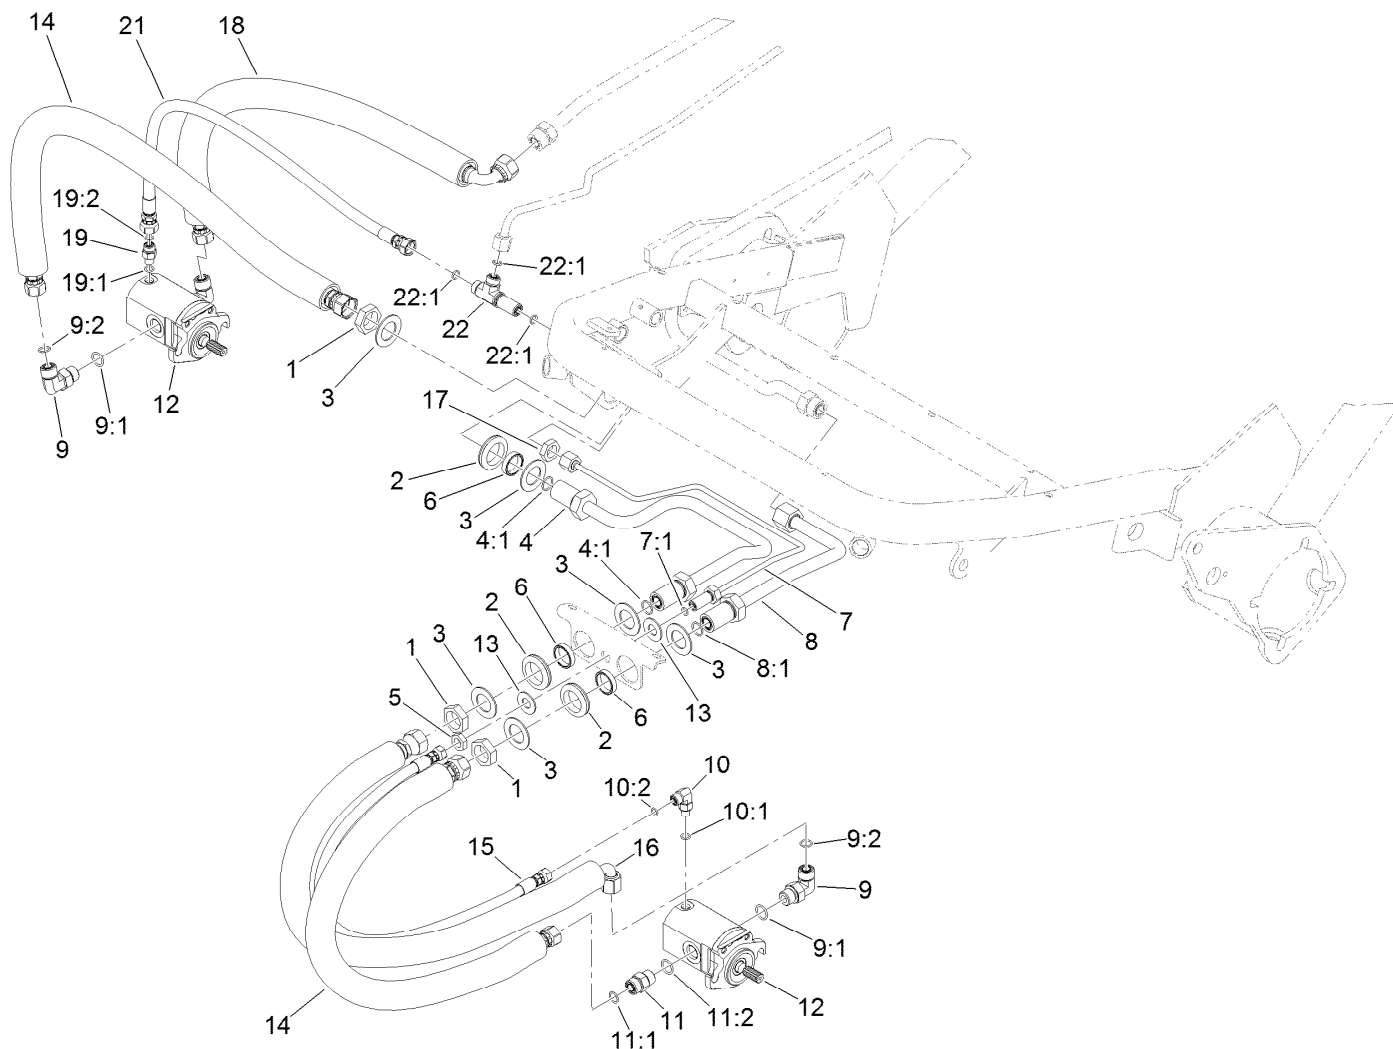 

Front Hydraulic Reel Drive and Hose Assembly

Ref.	Part Number	Qty.	Description
1	340-74	3	Nut-Lock, Bulkhead
2	240-3	3	Grommet-Rubber
3	69-9010	6	Washer
4	107-2580	1	Tube-HYD
4:1	237-65	2	O-Ring
5	340-78	1	Nut-Lock
6	125-1984	3	Spacer
7	127-2227	1	Tube-HYD
7:1	237-21	1	O-Ring
8	107-2581	1	Tube-HYD
8:1	237-65	1	O-Ring
9	340-98	3	Fitting-Elbow, 90 DEG
9:1	237-79	1	O-Ring
9:2	237-30	1	O-Ring
10	340-132	1	Fitting-Elbow, 90 DEG
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring


Ref.	Part Number	Qty.	Description
11	340-4	1	Fitting-Straight
11:1	237-30	1	O-Ring
11:2	237-79	1	O-Ring
12	120-2072	2	HYD Motor ASM
13	69-8980	2	Washer
14	95-2908	2	Hose-HYD
15	106-9674	1	Hose-HYD
16	95-2909	1	Hose-HYD
17	340-70	1	Nut-Lock
18	105-5404	1	Hose-HYD
19	340-92	1	Fitting-Straight
19:1	237-78	1	O-Ring
19:2	237-21	1	O-Ring
21	105-5405	1	Hose-HYD
22	340-68	1	Fitting-Tee, Bulkhead
22:1	237-22	3	O-Ring

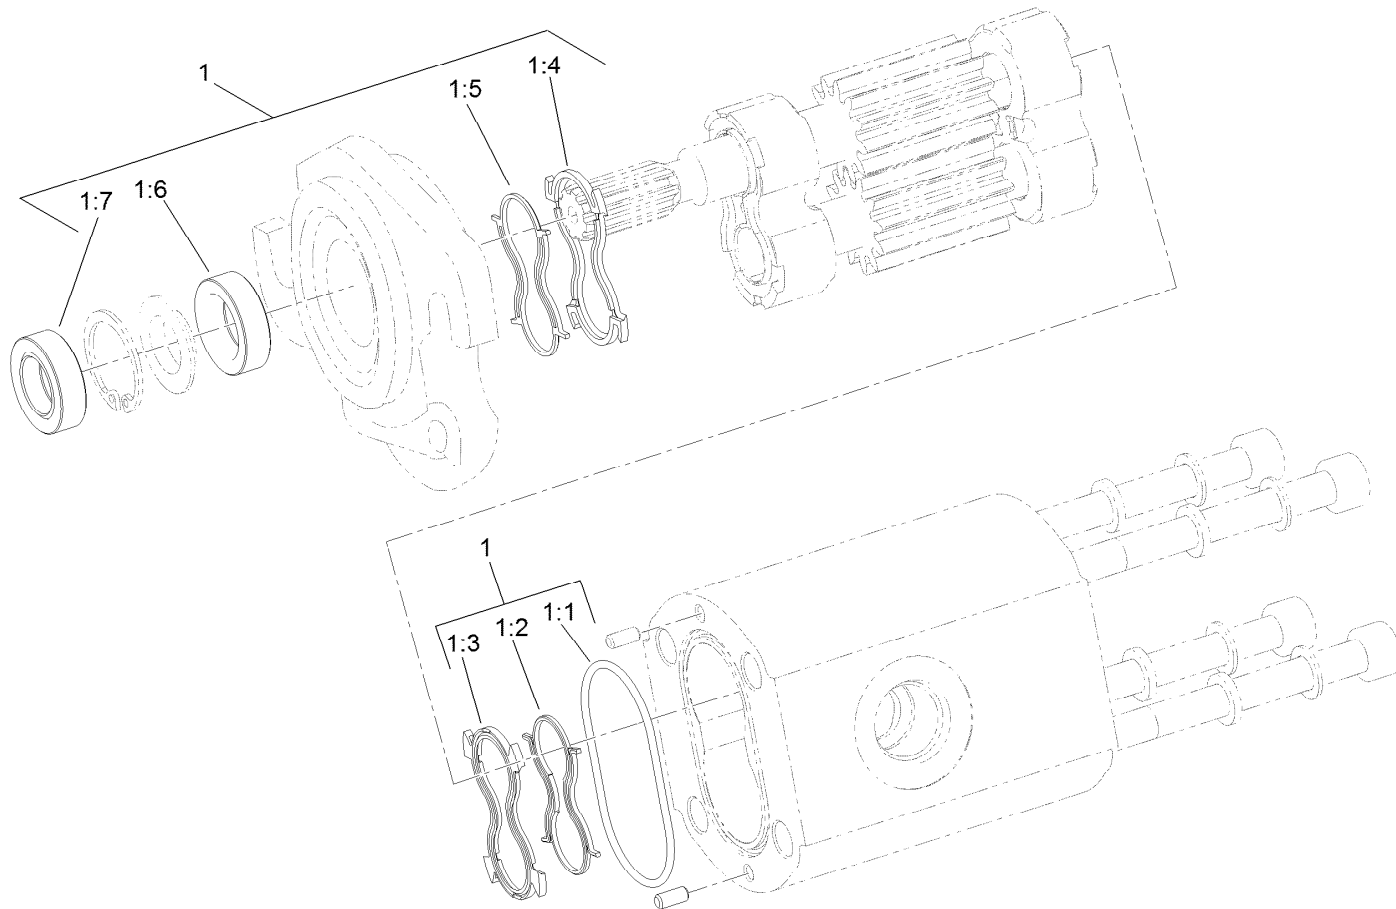 

Hydraulic Reel Motor Assembly No. 120-2072



Ref.	Part Number	Qty.	Description
1	119-7113	1	Seal Kit
1:1		1	O-Ring Housing ●
1:2		1	Seal-Anti Extrusion ●
1:3		1	Seal-Plate, Balancing ●
1:4		1	Seal-Plate, Balancing ●
1:5		1	Seal-Anti Extrusion ●
1:6		1	Seal-Shaft (Inboard) ●
1:7		1	Seal-Shaft (Outboard) ●

 ● Not serviced separately

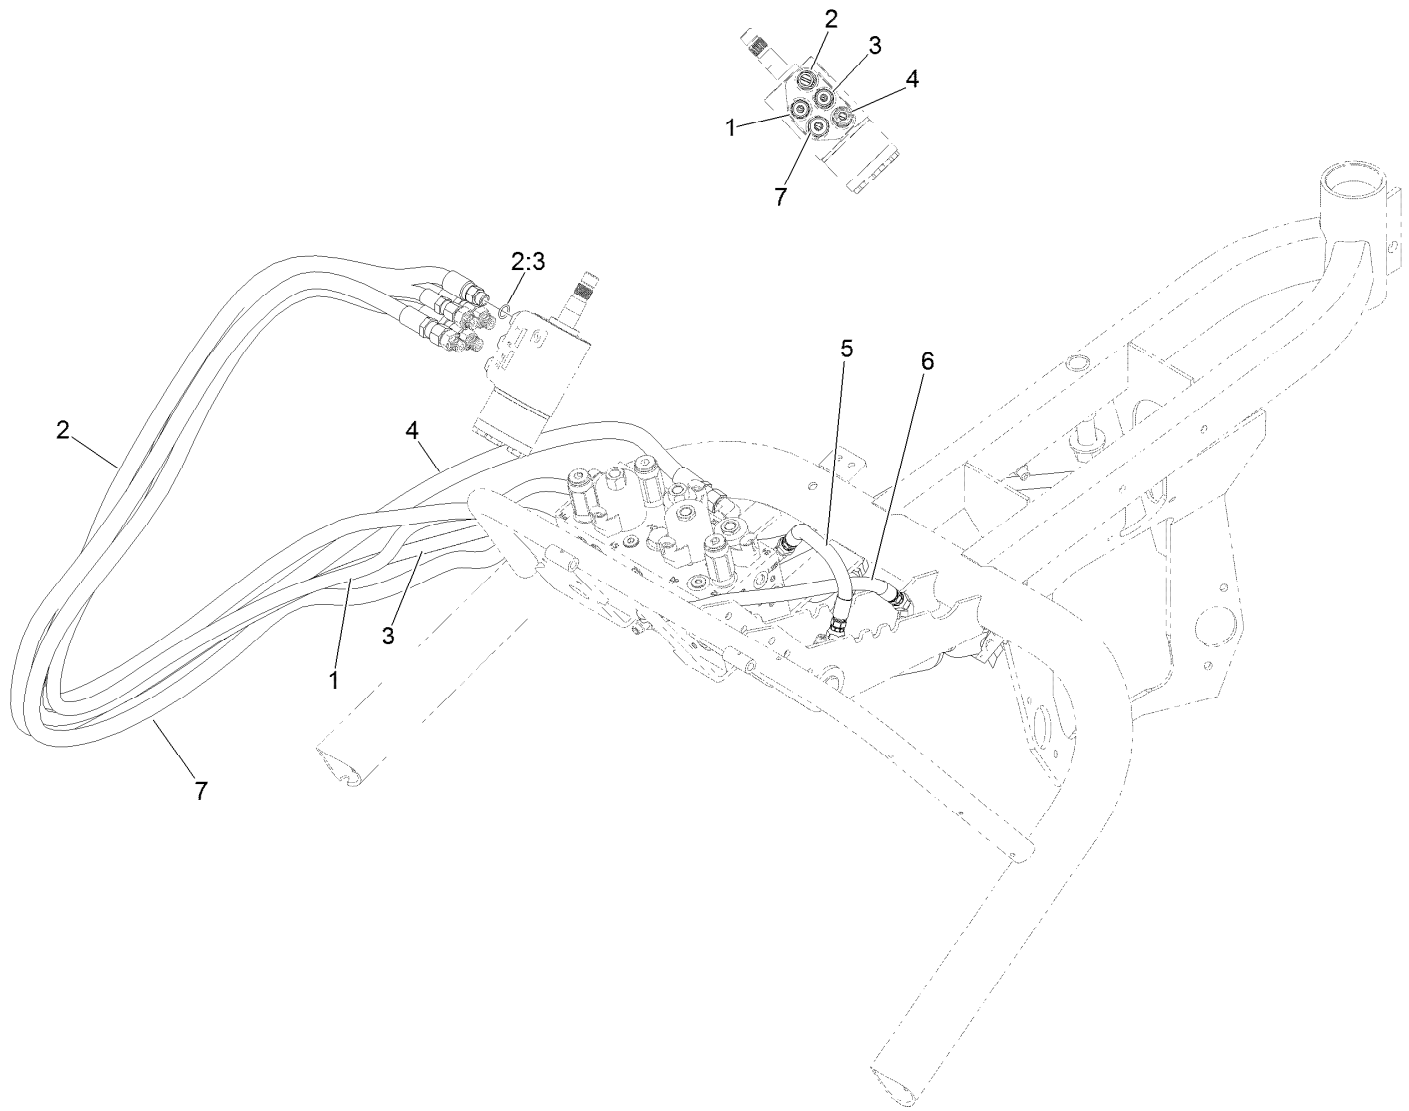

Hydraulic Steering Hose and Center Lift Cylinder Hose Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-4892	1	Hose-HYD
2	131-2043	1	Hose-HYD
2:3	237-42	1	O-Ring
3	105-4337	1	Hose-HYD
4	105-4339	1	Hose-HYD
5	131-2040	1	Hose-HYD
6	130-6545	1	Hose-HYD
7	131-2044	1	Hose-HYD

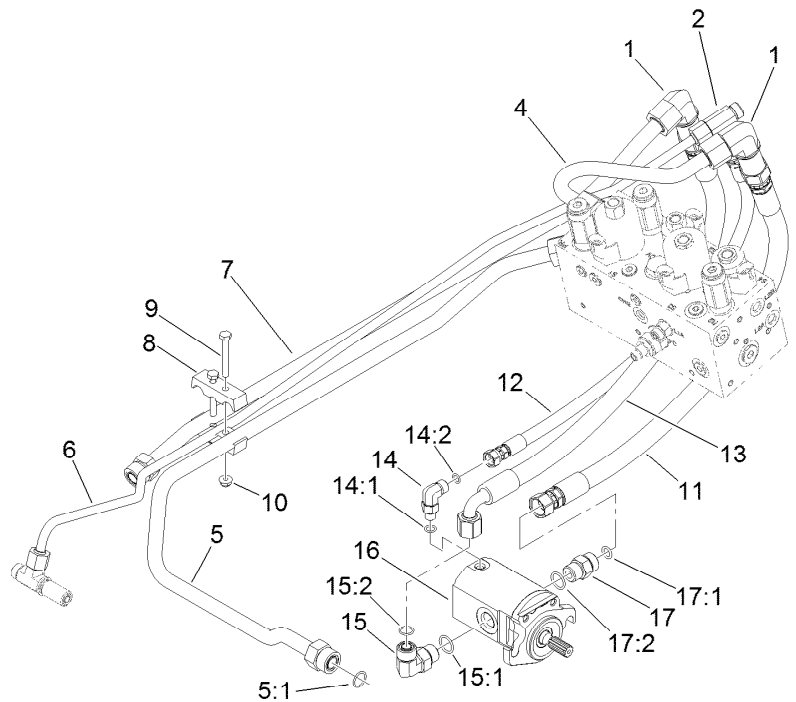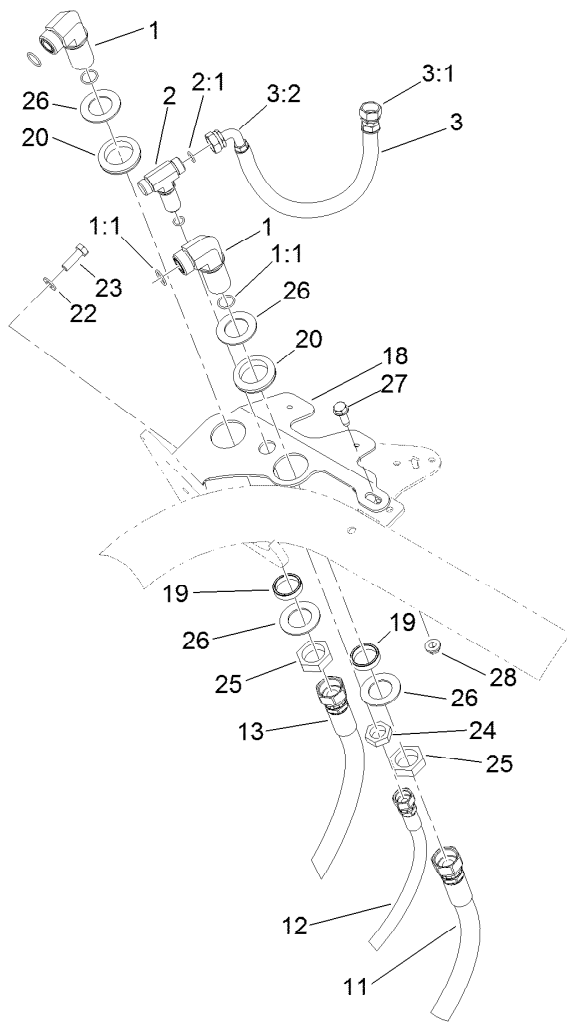  

Rear Hydraulic Reel Drive and Hose Assembly


Ref.	Part Number	Qty.	Description
1	340-72	2	Fitting-Bulkhead, 90 DEG
1:1	237-65	2	O-Ring
2	105-8281	1	Tee-Bulkhead
2:1	237-22	3	O-Ring
3	105-5409	1	Hose ASM
3:1	105-8311	1	Fitting-HYD
3:2	105-8312	1	Fitting-HYD, 90 DEG
4	105-5482	1	Tube-HYD
5	107-2582	1	Tube-HYD
5:1	237-65	1	O-Ring
6	132-9530	1	Tube-HYD
7	105-5493	1	Tube-HYD
8	93-2509	2	Clamp-Tube
9	321-11	2	Screw-HH
10	104-7201	2	Nut-HF
11	105-5400	1	Hose-HYD
12	105-5402	1	Hose-HYD
13	105-5401	1	Hose-HYD
14	340-132	1	Fitting-Elbow, 90 DEG

Ref.	Part Number	Qty.	Description
14:1	237-78	1	O-Ring
14:2	237-21	1	O-Ring
15	340-98	1	Fitting-Elbow, 90 DEG
15:1	237-79	1	O-Ring
15:2	237-30	1	O-Ring
16	120-2072	1	HYD Motor ASM
17	340-4	1	Fitting-Straight
17:1	237-30	1	O-Ring
17:2	237-79	1	O-Ring
18	105-8253-01	1	Bracket-Bulkhead
19	125-1984	2	Spacer
20	240-3	2	Grommet-Rubber
22	3256-23	1	Washer-Plain
23	322-5	1	Screw-HH
24	340-70	1	Nut-Lock
25	340-74	2	Nut-Lock, Bulkhead
26	69-9010	4	Washer
27	701243	1	Screw-Thd Roll, HWH
28	32128-20	1	Nut-HF

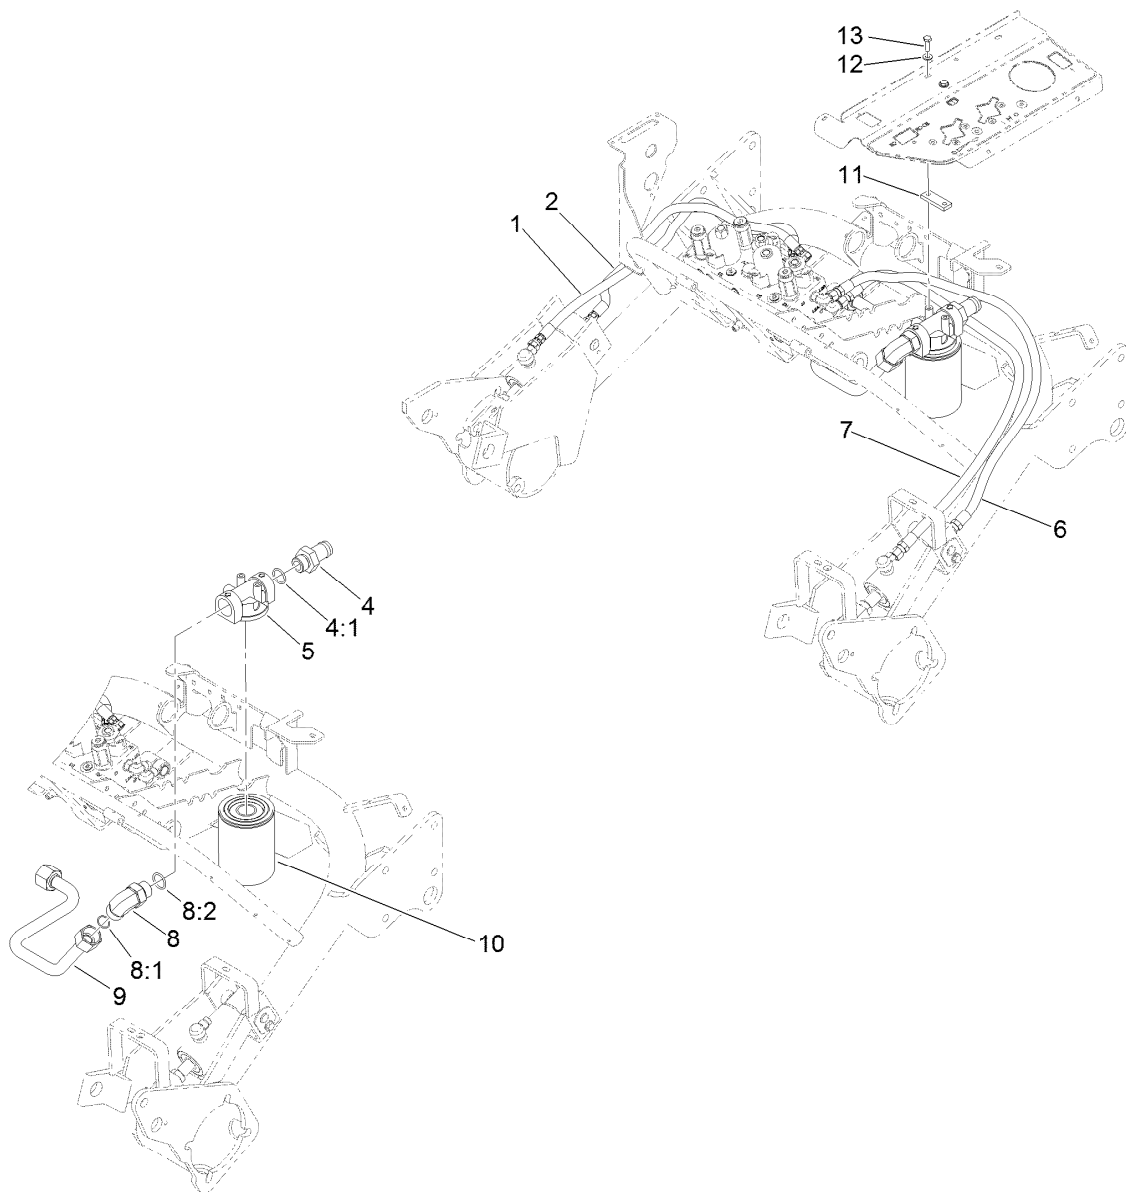 


Front Lift Cylinders Hose and Filter Assembly

Ref.	Part Number	Qty.	Description
1	108-6506	1	Hose-HYD
2	108-6505	1	Hose-HYD
4	99-3017	1	Fitting
4:1	237-81	1	O-Ring
5	92-5821	1	Head-Filter
6	130-6547	1	Hose-HYD
7	130-6546	1	Hose-HYD
8	340-142	1	Fitting-Elbow-90
8:1	237-58	1	O-Ring
8:2	237-81	1	O-Ring
9	105-5460	1	Tube-HYD
10	107-9531	1	Filter-Oil, HYD
11	105-4309	1	Plate-Filter
12	3256-22	2	Washer-Flat
13	321-5	2	Screw-HH

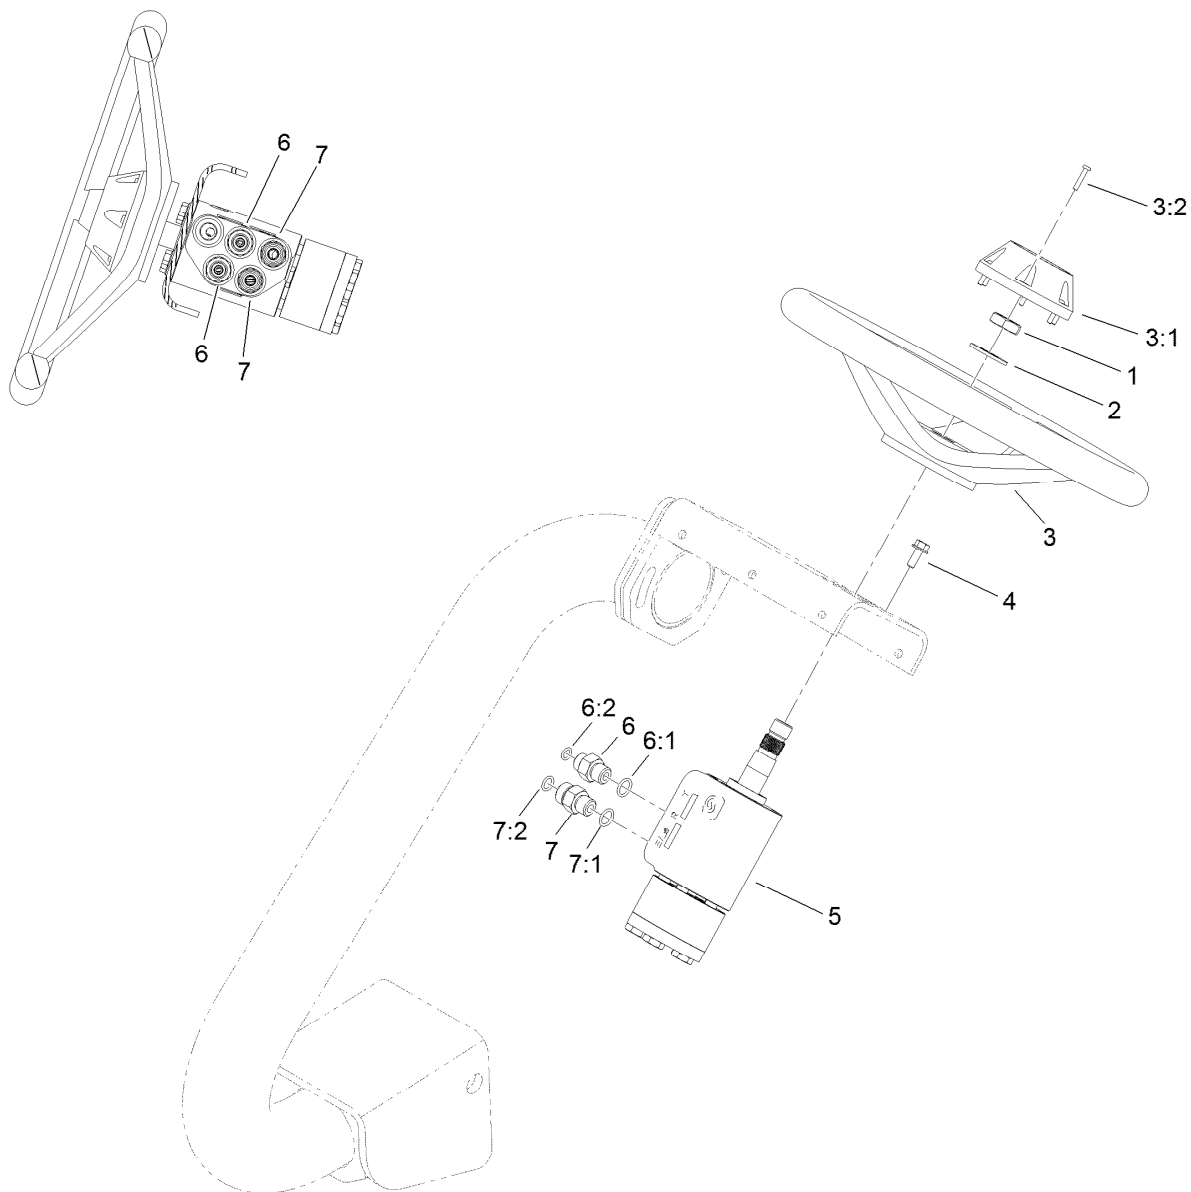 


Steering Wheel and Valve Assembly

Ref.	Part Number	Qty.	Description
1	3296-33	1	Nut-Lock, NI
2	3256-27	1	Washer-Flat
3	75-0560	1	Steering Wheel ASM
3:1	32144-21	1	Screw
3:2	68-5140	1	Cap-Wheel, Steering
4	33103-016	4	Screw-HHF
5	114-4672	1	Steering Valve ASM
6	340-1	2	Fitting-Straight
6:1	237-21	1	O-Ring
6:2	237-42	1	O-Ring
7	340-2	2	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring

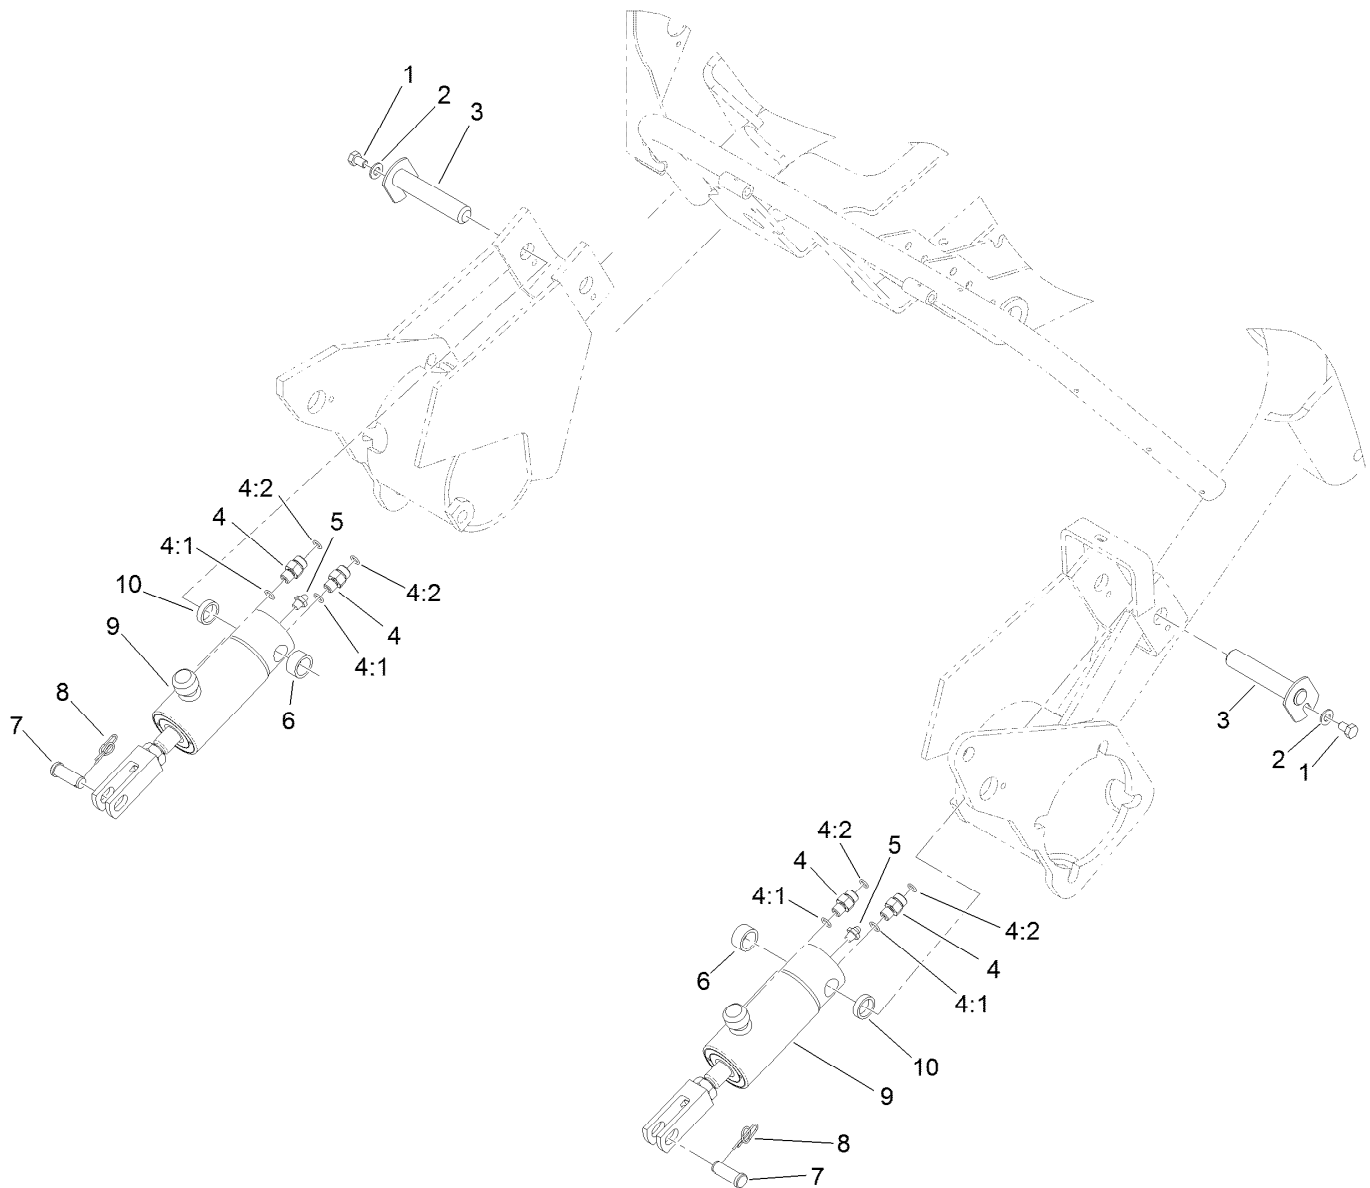 


Right Hand and Left Hand Lift Cylinder Assembly

Ref.	Part Number	Qty.	Description
1	322-1	2	Screw-HH
2	3256-23	2	Washer-Plain
3	120-3199	2	Pin-Pivot
4	340-92	4	Fitting-Straight
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	302-2	2	Fitting-Grease
6	74-3730	2	Spacer-Spindle, Rear
7	283-8	2	Pin-Clevis
8	112-1491	2	Pin-Cotter
9	131-2787	2	HYD Cylinder ASM
10	105-3828	2	Spacer

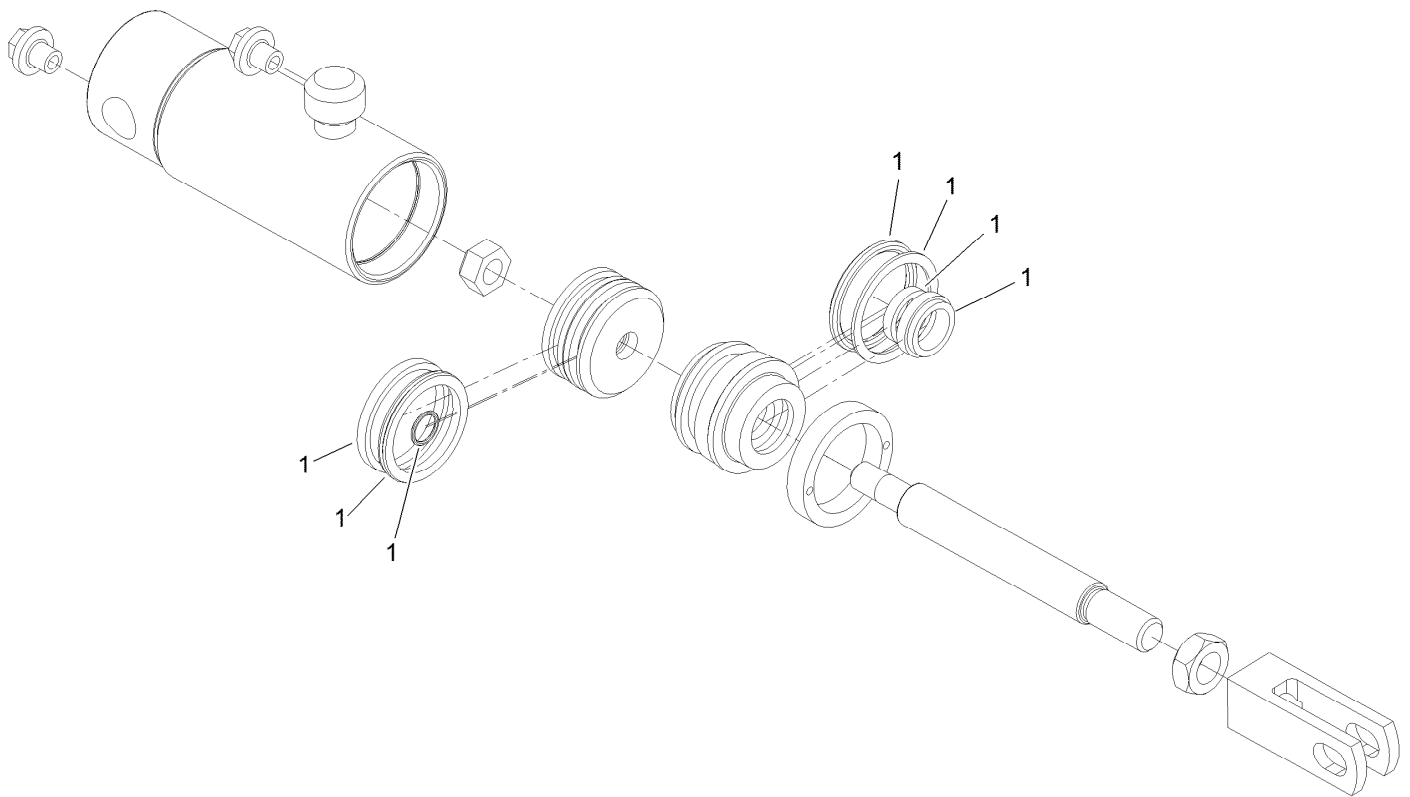 

Hydraulic Cylinder Assembly No. 131-2787


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-9515	1	Seal Kit

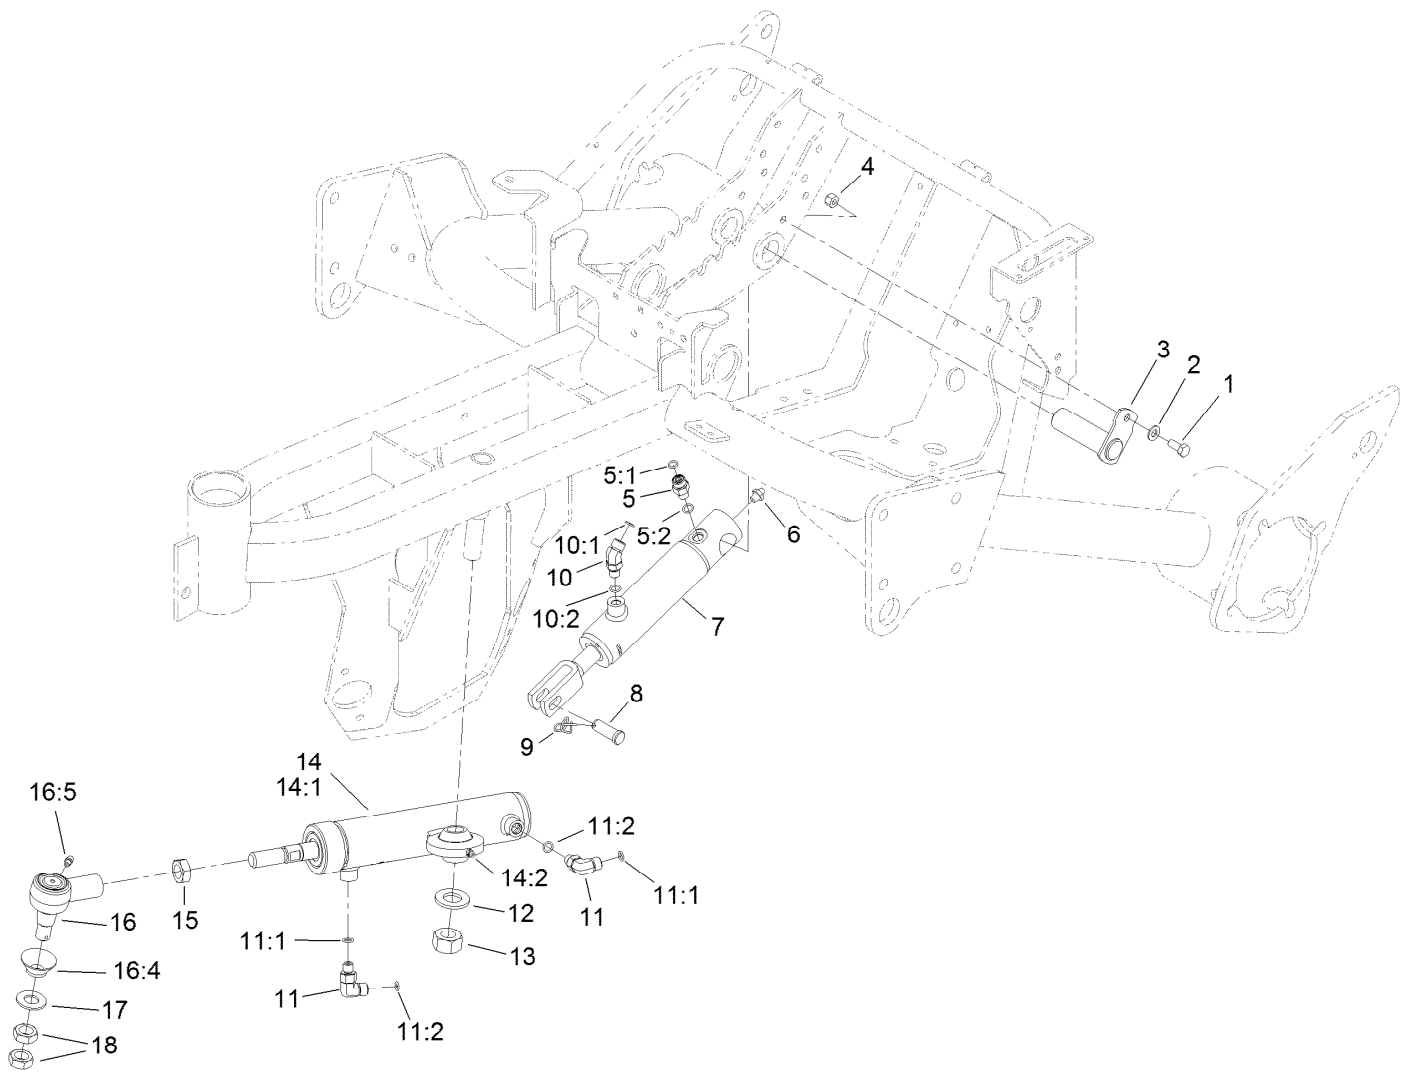 

Steering Cylinder and Center Lift Cylinder Assembly


Ref.	Part Number	Qty.	Description
1	322-3	1	Screw-HH
2	3256-23	1	Washer-Plain
3	68-5560	1	Pin-Cylinder, Pivot
4	3296-29	1	Nut-Lock, NI
5	340-92	1	Fitting-Straight
5:1	237-78	1	O-Ring
5:2	237-21	1	O-Ring
6	302-2	1	Fitting-Grease
7	131-2786	1	HYD Cylinder ASM
8	283-8	1	Pin-Clevis
9	112-1491	1	Pin-Cotter
10	340-103	1	Fitting-HYD, 45 DEG
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring

Ref.	Part Number	Qty.	Description
11	340-132	2	Fitting-Elbow, 90 DEG
11:1	237-78	1	O-Ring
11:2	237-21	1	O-Ring
12	3256-28	1	Washer-Flat
13	3217-12	1	Nut-Hex
14	131-2764	1	Cylinder Steering
14:1	132-9517	1	Seal Kit
14:2	302-5	1	Fitting-Grease
15	84-5300	1	Nut-Jam
16	107-2553	1	Rod End ASM
16:4	106-6896	1	Seal
16:5	302-5	1	Fitting-Grease
17	3256-27	1	Washer-Flat
18	3220-6	2	Nut-Jam

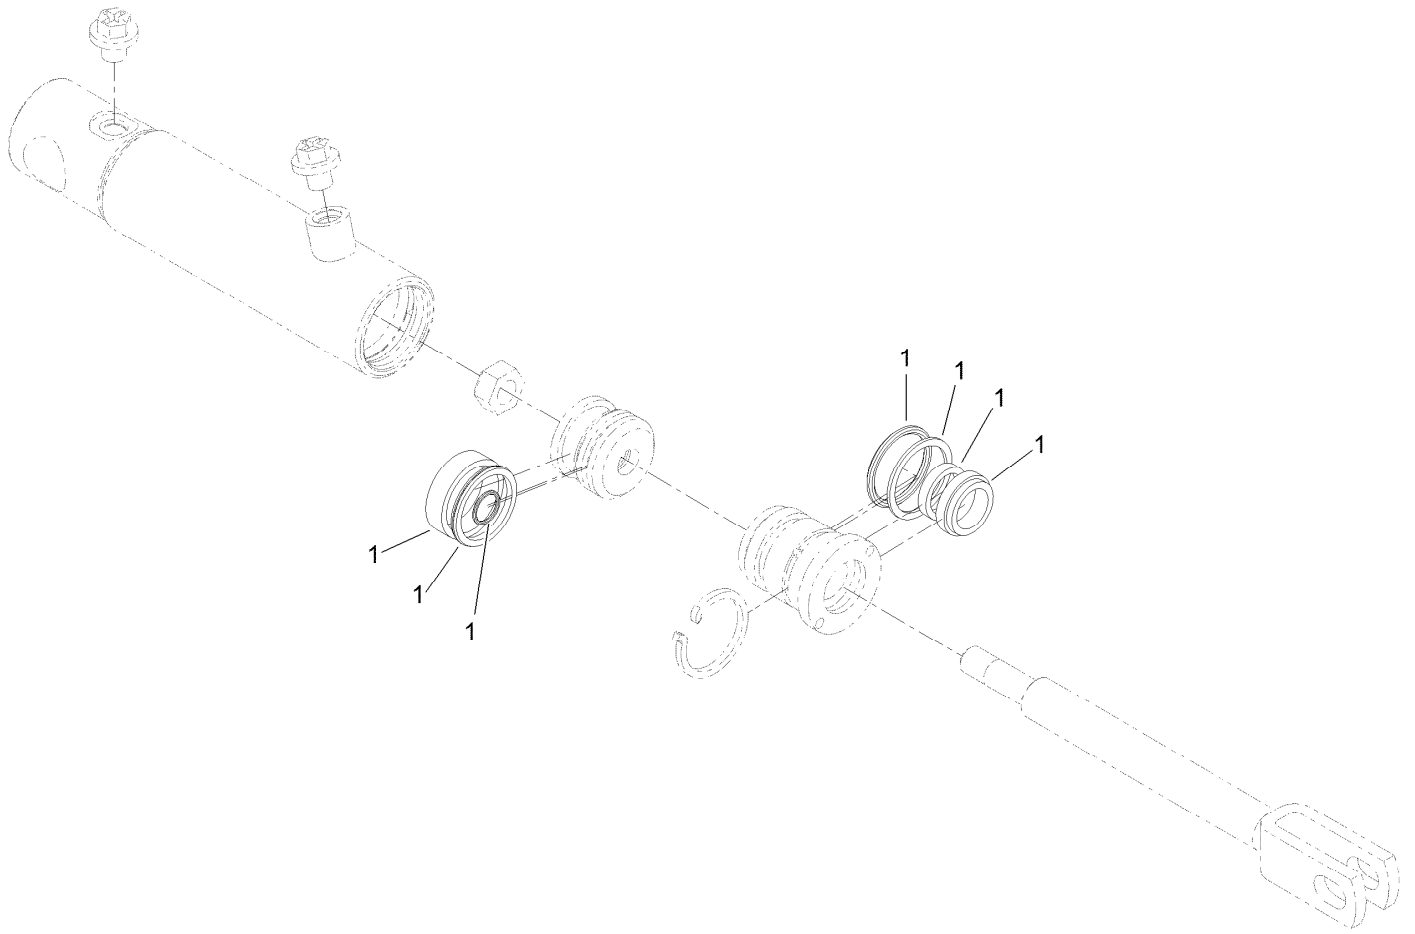 

Hydraulic Cylinder Assembly No. 131-2786



<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-9516	1	Seal Kit

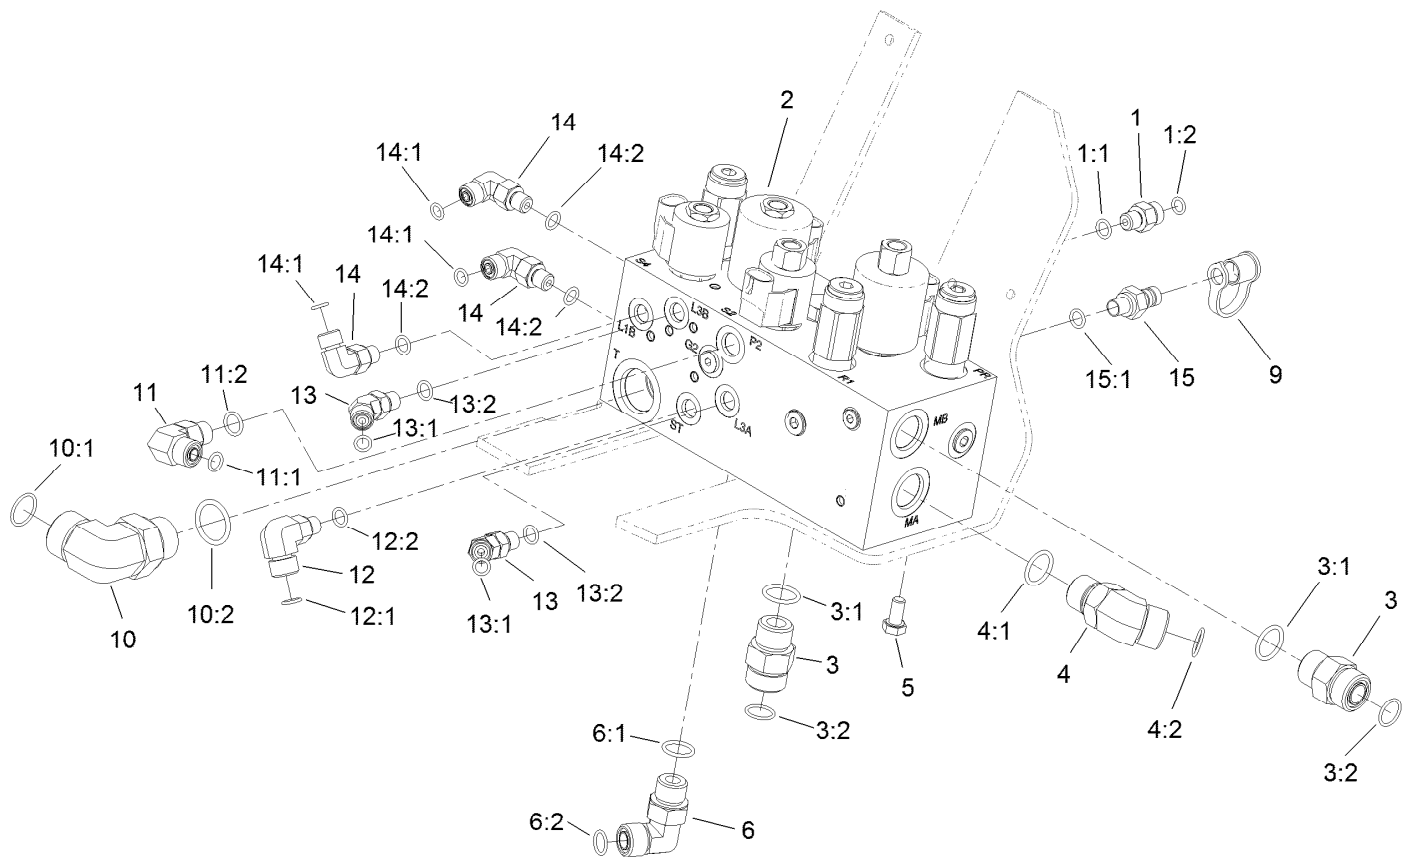 

Hydraulic Manifold Assembly

Ref.	Part Number	Qty.	Description
1	340-92	1	Fitting-Straight
1:1	237-78	1	O-Ring
1:2	237-21	1	O-Ring
2	131-2753	1	Manifold ASM (No Backlap)
2	133-8976	1	Manifold ASM (With Backlap)
3	340-7	2	Fitting-Straight
3:1	237-65	1	O-Ring
3:2	237-80	1	O-Ring
4	340-14	1	Fitting-HYD, 45 DEG
4:1	237-65	1	O-Ring
4:2	237-80	1	O-Ring
5	33114-016	2	Screw-HH
6	340-18	1	Fitting-HYD, 90 DEG
6:1	237-79	1	O-Ring
6:2	237-22	1	O-Ring
9	354-79	1	Cap-Dust

Ref.	Part Number	Qty.	Description
10	340-142	1	Fitting-Elbow-90
10:1	237-58	1	O-Ring
10:2	237-81	1	O-Ring
11	340-77	1	Fitting-Elbow, 90 DEG
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-97	1	Fitting-Elbow, 90 DEG
12:1	237-22	1	O-Ring
12:2	237-78	1	O-Ring
13	340-103	2	Fitting-HYD, 45 DEG
13:1	237-78	1	O-Ring
13:2	237-21	1	O-Ring
14	340-132	3	Fitting-Elbow, 90 DEG
14:1	237-78	1	O-Ring
14:2	237-21	1	O-Ring
15	354-77	1	Fitting-Quick
15:1	237-78	1	O-Ring

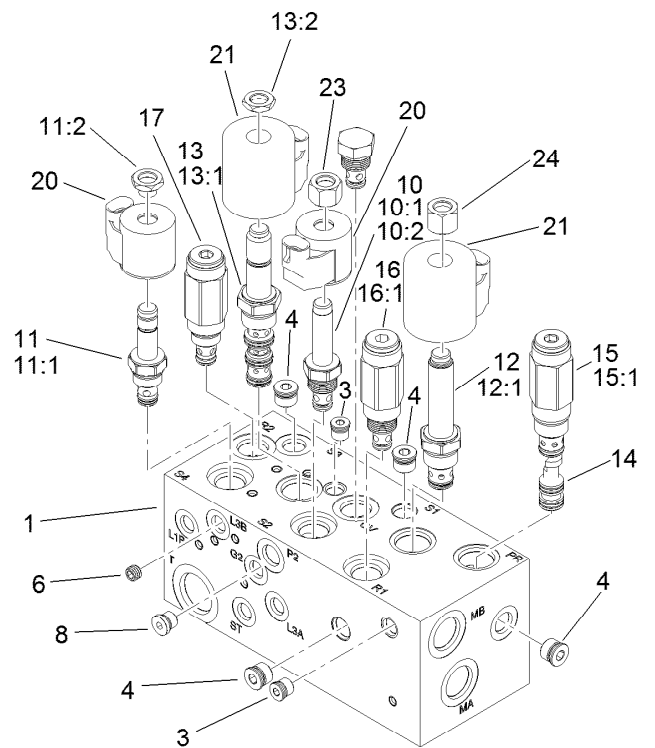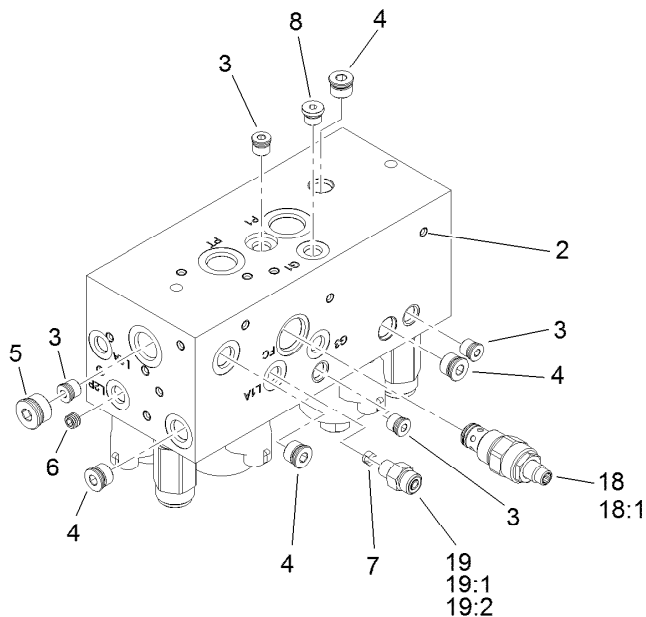  



Manifold Block Assembly No. 131-2753 (No Backlap)

Ref.	Part Number	Qty.	Description
1		1	Body Manifold ■
2		20	Expander Plug ■
3	106-1025	6	Plug-HYD
4	106-1026	8	Plug-HYD
5	106-1027	1	Plug-HYD
6	110-8887	2	Plug-Orifice (0.055)
7	114-4682	1	Orifice-Flow Control (.030)
8	131-6514	2	Plug-Port
10	107-7517	1	Valve-Solenoid
10:1	105-9156	1	Seal Kit
10:2	107-7812	1	Nut-Solenoid
11	112-9206	1	Solenoid Valve ASM
11:1	105-9156	1	Seal Kit
11:2	110-2634	1	Nut-Coil
12	105-9158	1	Valve-Solenoid, N.O.
12:1	105-9159	1	Seal Kit ●
13	110-8906	1	Valve-Solenoid

Ref.	Part Number	Qty.	Description
13:1	110-8908	1	Spool Valve Seal Kit
13:2	110-2634	1	Nut-Coil
14	119-3506	1	Piston-Pilot
15	112-9205	1	Valve-Relief
15:1	105-9159	1	Seal Kit
16	114-5510	1	Valve-Relief, 3000 PSI
16:1	105-9156	1	Seal Kit
17	133-8873	1	Valve-Relief
18	119-4136	1	Control-Flow
18:1	110-2633	1	Seal Kit
19	340-92	1	Fitting-Straight
19:1	237-78	1	O-Ring
19:2	237-21	1	O-Ring
20	105-9333	2	Coil-12Vdc
21	110-2630	2	Coil-12Vdc
23	119-7143	1	Coil Nut, Tall
24	110-2635	1	Nut-Coil

● Not illustrated

  ■ Not serviced separately

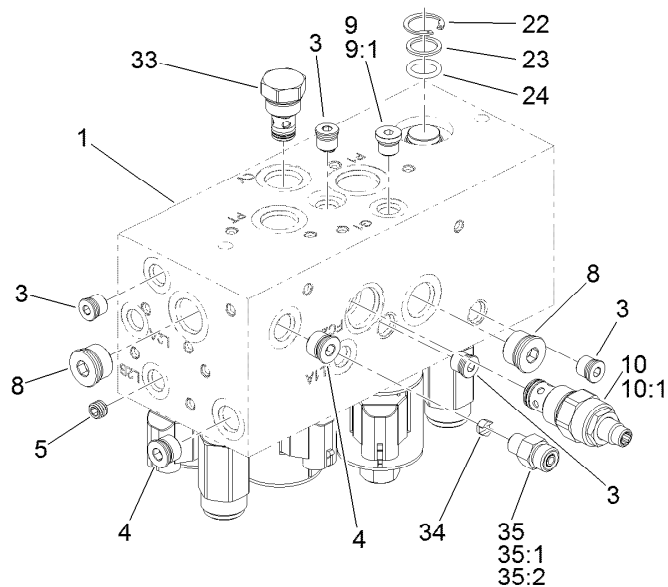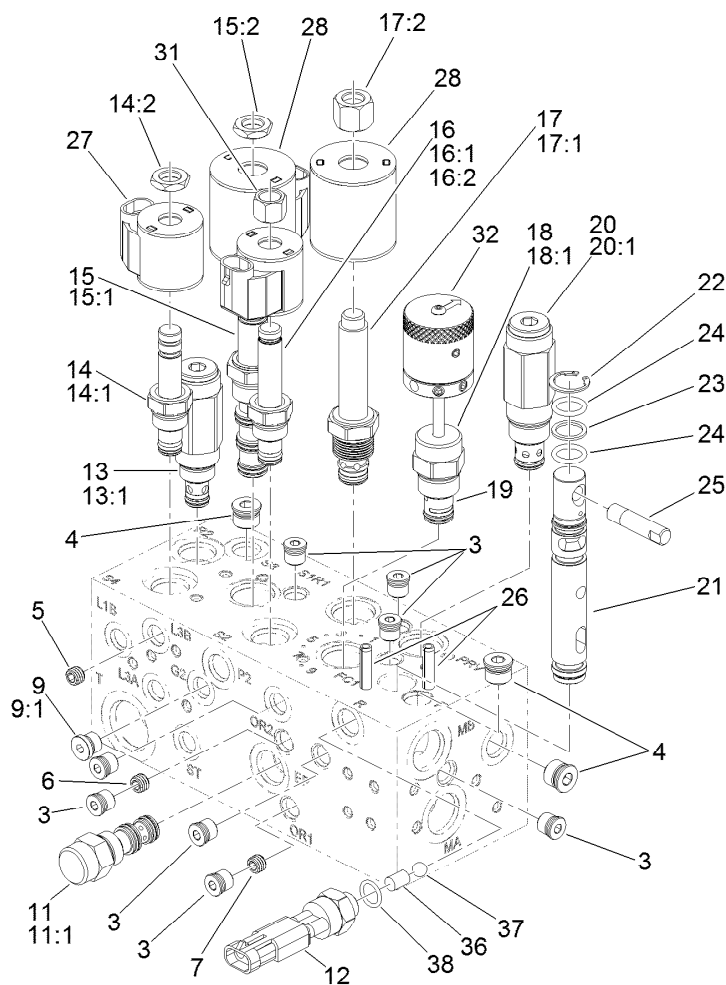

Manifold Block Assembly No. 133-8976 (With Backlap)


Ref.	Part Number	Qty.	Description
1		1	Body-Manifold ●
3	106-1025	13	Plug-HYD
4	106-1026	5	Plug-HYD
5	110-8887	2	Plug-Orifice (0.055)
6	112-9202	1	Orifice-Flow, Control (.060)
7	112-9203	1	Orifice-Control, Flow (.013)
8	106-1027	2	Plug-HYD
9	353-990	2	Plug ASM
9:1	237-78	1	O-Ring
10	119-4136	1	Control-Flow
10:1	110-2633	1	Seal Kit
11	110-8988	1	Element-Logic
11:1	110-8773	1	Seal Kit
12	72-4320	1	Switch-Ball
13	133-8873	1	Valve-Relief
13:1	105-9156	1	Seal Kit

Ref.	Part Number	Qty.	Description
14	112-9206	1	Solenoid Valve ASM
14:1	105-9156	1	Seal Kit
14:2	110-2634	1	Nut-Coil
15	110-8906	1	Valve-Solenoid
15:1	110-8908	1	Spool Valve Seal Kit
15:2	110-2634	1	Nut-Coil
16	107-7517	1	Valve-Solenoid
16:1	105-9156	1	Seal Kit
16:2	107-7812	1	Nut-Solenoid
17	119-4137	1	Valve-Relief, Solenoid
17:1	110-6316	1	Seal Kit
17:2	110-2635	1	Nut-Coil
18	110-8769	1	Valve-Control, Manual Flow
18:1	110-2633	1	Seal Kit
19	119-3506	1	Piston-Pilot
20	112-9205	1	Valve-Relief
20:1	105-9159	1	Seal Kit

● Not serviced separately




Ref.	Part Number	Qty.	Description
8	63-8410	3	Washer
9	240-11	3	Bushing-Flange
10	105-5410	1	Hose-HYD
11	2412-34	4	Clamp-Hose
12	117-9881	1	Fitting-HYD, Tee
12:1	237-79	1	O-Ring
12:2	237-22	2	O-Ring
13	99-8551	1	Plug-Pipe
14	353-551	1	Plug-HH
14:1	237-80	1	O-Ring

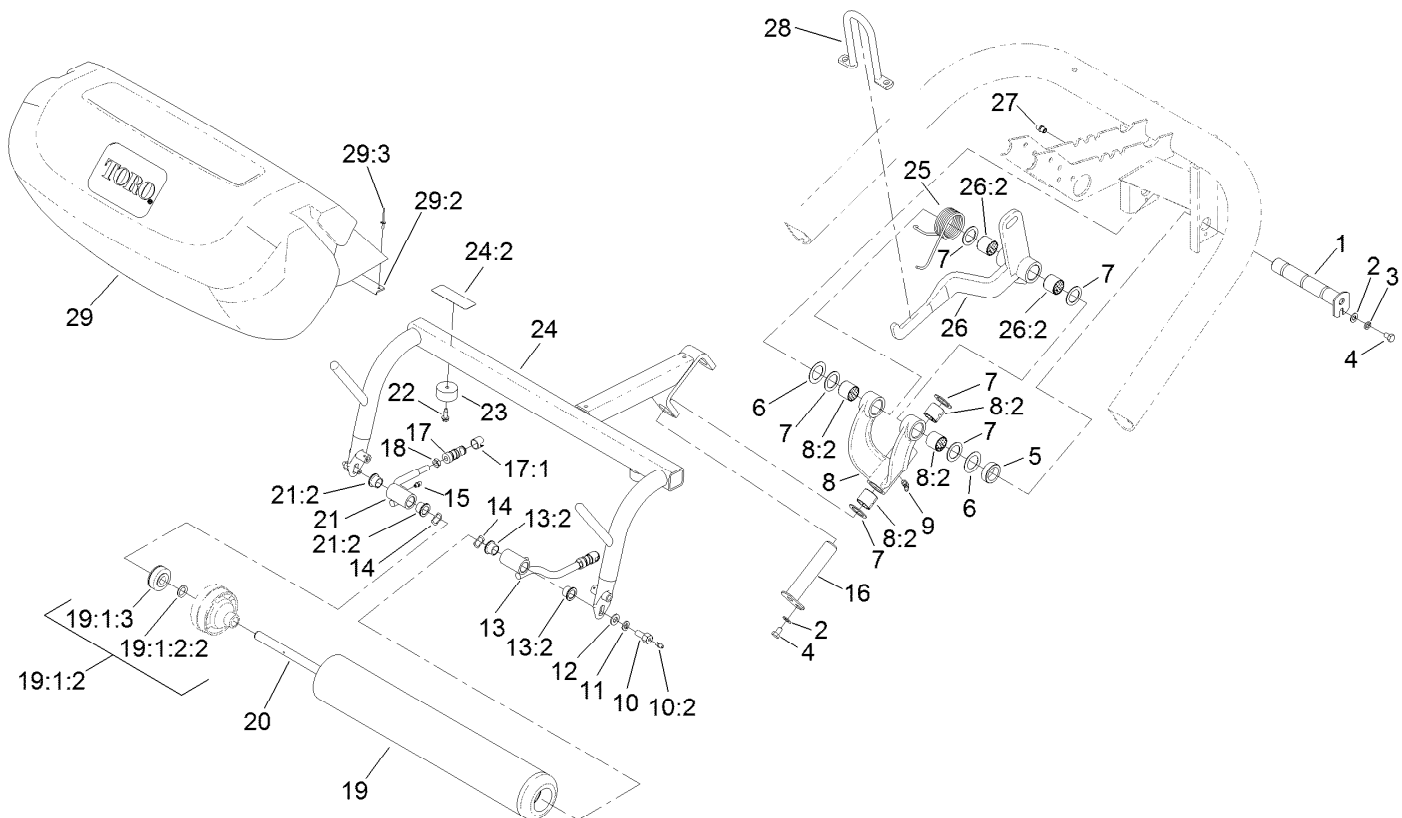 

Center Pull Frame Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	114-4685	1	Pin-Hinge	16	10-6090	1	Pin-Pivot
2	3256-23	2	Washer-Plain	17	99-1460	2	Ball Joint Receiver ASM
3	3253-4	1	Washer-Lock	17:1	99-1461	1	Sleeve-Joint, Ball
4	322-1	2	Screw-HH	18	3220-3	2	Nut-HJ
5	93-2384	1	Spacer-Carrier	19	133-2337	1	Roller ASM
6	5-1226	2	Washer	19:1:2		2	Hub Yoke ASM ●
7	10-8110	6	Washer-Thrust	19:1:2:2	253-83	1	Seal-Oil
8	105-0452	1	Pivot Hinge ASM	19:1:3	251-141	2	Bearing-Ball
8:2	125-5196	4	Bushing	20	21-8470	1	Shaft-Roller
9	302-60	1	Fitting-Grease	21	92-0585	1	Pull Arm ASM
10	11-0160	2	Roller Shaft Screw ASM	21:2	125-5178	2	Bushing
10:2	302-5	1	Fitting-Grease	22	32104-95	2	Screw-HWH
11	3253-21	2	Washer-Lock	23	94-4548	2	Bumper-Recessed
12	3256-24	2	Washer-Flat	24	117-9541	1	Center Pull Frame ASM
13	92-0586	1	Pull Arm ASM	24:2	104-7729	1	Decal-Danger, CE
13:2	125-5178	2	Bushing	25	110-3953	1	Spring-Torsion, Center
14	3290-317	2	Washer-Spring	26	110-3955	1	Center Lift Arm ASM
15	302-5	2	Fitting-Grease	26:2	125-5196	2	Bushing

 ● Not serviced separately

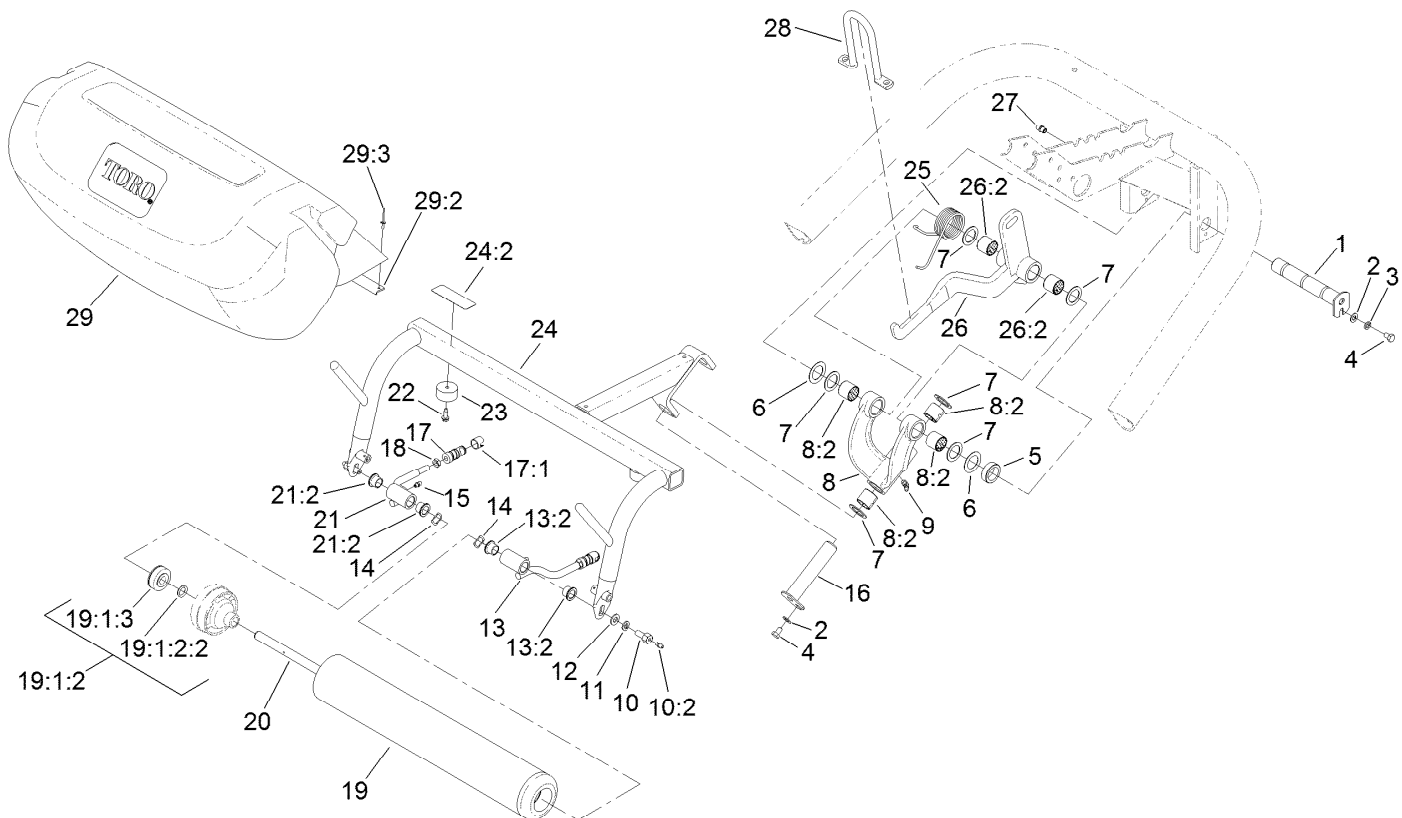


Center Pull Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
27	302-33	1	Fitting-Grease
28	105-5740	1	Hook-Lift
29	108-8642	1	Grass Basket ASM

Ref.	Part Number	Qty.	Description
29:2	104-2607	1	Strip-Basket
29:3	3290-382	8	Rivet-Pop

 ● Not serviced separately

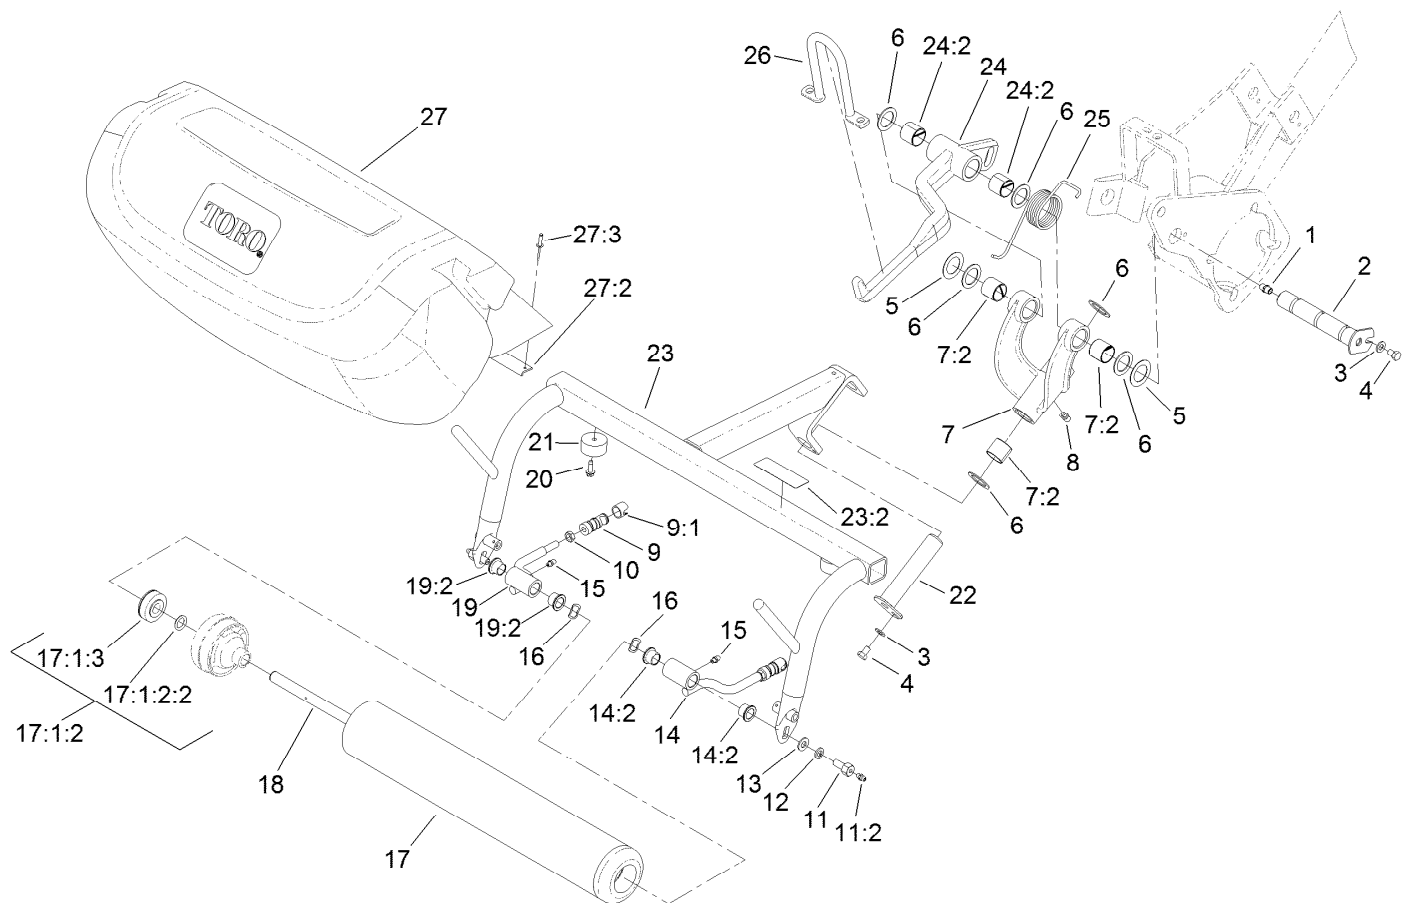


Left Pull Frame Assembly

Ref.	Part Number	Qty.	Description
1	302-33	1	Fitting-Grease
2	114-4683	1	Pin-Hinge
3	3256-23	2	Washer-Plain
4	322-1	2	Screw-HH
5	5-1226	2	Washer
6	10-8110	6	Washer-Thrust
7	10-7820	1	Pivot Hinge ASM
7:2	125-5196	4	Bushing
8	302-60	1	Fitting-Grease
9	99-1460	2	Ball Joint Receiver ASM
9:1	99-1461	1	Sleeve-Joint, Ball
10	3220-3	2	Nut-HJ
11	11-0160	2	Roller Shaft Screw ASM
11:2	302-5	1	Fitting-Grease
12	3253-21	2	Washer-Lock
13	3256-24	2	Washer-Flat
14	92-0586	1	Pull Arm ASM
14:2	125-5178	2	Bushing

Ref.	Part Number	Qty.	Description
15	302-5	2	Fitting-Grease
16	3290-317	2	Washer-Spring
17	133-2337	1	Roller ASM
17:1:2		2	Hub Yoke ASM ●
17:1:2:2	253-83	1	Seal-Oil
17:1:3	251-141	2	Bearing-Ball
18	21-8470	1	Shaft-Roller
19	92-0585	1	Pull Arm ASM
19:2	125-5178	2	Bushing
20	32104-95	2	Screw-HWH
21	94-4548	2	Bumper-Recessed
22	10-6090	1	Pin-Pivot
23	117-9542	1	LH Pull Frame ASM
23:2	104-7729	1	Decal-Danger, CE
24	107-2598	1	LH Lift Arm ASM
24:2	125-5196	2	Bushing
25	110-3952	1	Spring-Torsion, LH
26	105-5740	1	Hook-Lift

 ● Not serviced separately

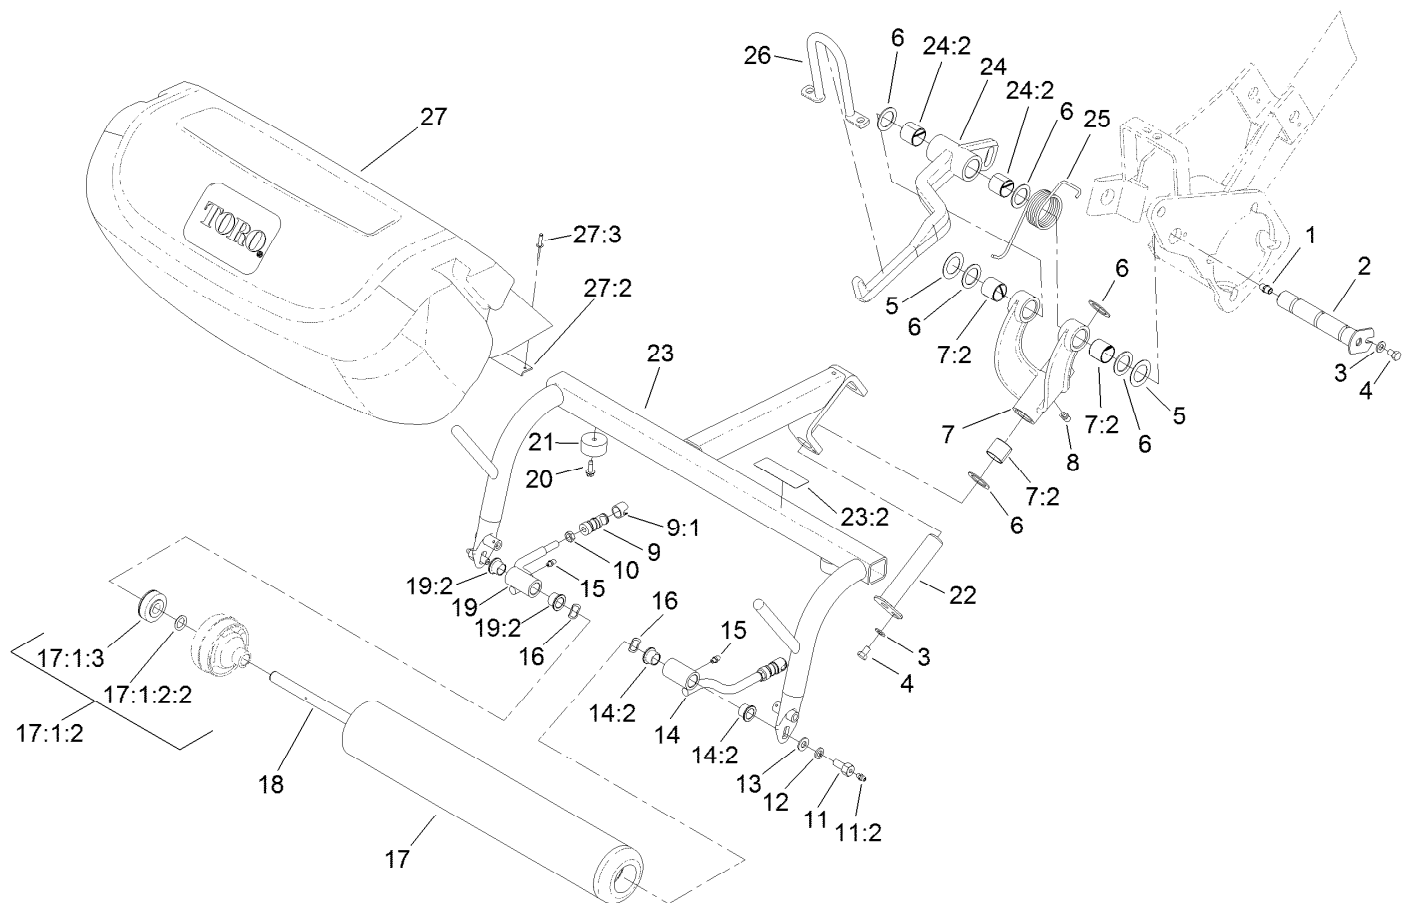


Left Pull Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
27	108-8642	1	Grass Basket ASM

Ref.	Part Number	Qty.	Description
27:2	104-2607	1	Strip-Basket
27:3	3290-382	8	Rivet-Pop

 ● Not serviced separately

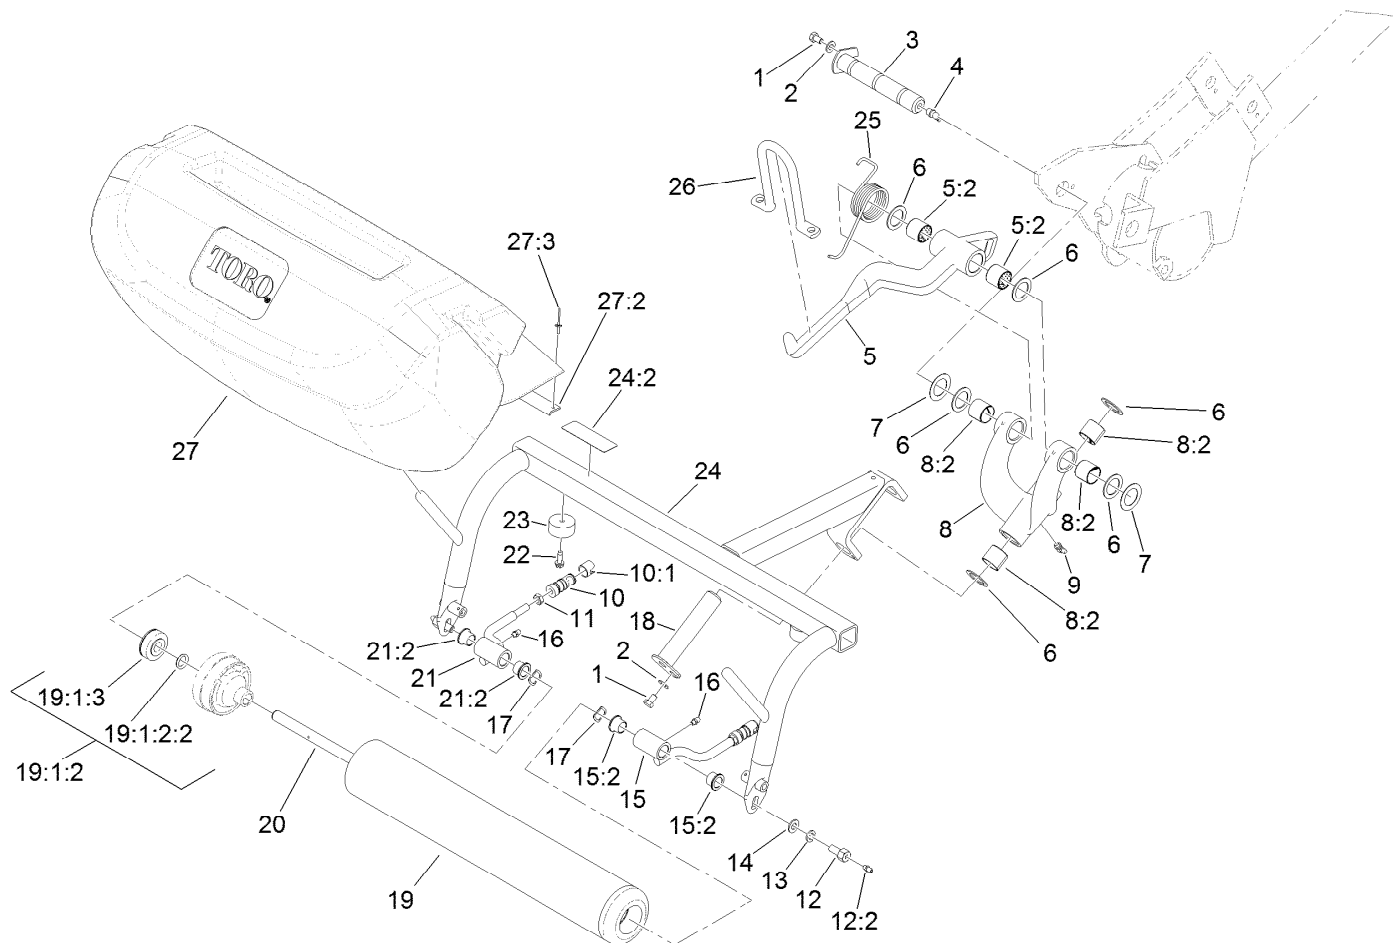


Right Pull Frame Assembly

Ref.	Part Number	Qty.	Description
1	322-1	2	Screw-HH
2	3256-23	2	Washer-Plain
3	114-4683	1	Pin-Hinge
4	302-33	1	Fitting-Grease
5	107-2599	1	RH Lift Arm ASM
5:2	125-5196	2	Bushing
6	10-8110	6	Washer-Thrust
7	5-1226	2	Washer
8	10-7820	1	Pivot Hinge ASM
8:2	125-5196	4	Bushing
9	302-60	1	Fitting-Grease
10	99-1460	2	Ball Joint Receiver ASM
10:1	99-1461	1	Sleeve-Joint, Ball
11	3220-3	2	Nut-HJ
12	11-0160	2	Roller Shaft Screw ASM
12:2	302-5	1	Fitting-Grease
13	3253-21	2	Washer-Lock
14	3256-24	2	Washer-Flat

Ref.	Part Number	Qty.	Description
15	92-0586	1	Pull Arm ASM
15:2	125-5178	2	Bushing
16	302-5	2	Fitting-Grease
17	3290-317	2	Washer-Spring
18	10-6090	1	Pin-Pivot
19	133-2337	1	Roller ASM
19:1:2		2	Hub Yoke ASM ●
19:1:2:2	253-83	1	Seal-Oil
19:1:3	251-141	2	Bearing-Ball
20	21-8470	1	Shaft-Roller
21	92-0585	1	Pull Arm ASM
21:2	125-5178	2	Bushing
22	32104-95	2	Screw-HWH
23	94-4548	2	Bumper-Recessed
24	117-9543	1	RH Pull Frame ASM
24:2	104-7729	1	Decal-Danger, CE
25	110-3951	1	Spring-Torsion, RH
26	105-5740	1	Hook-Lift

 ● Not serviced separately

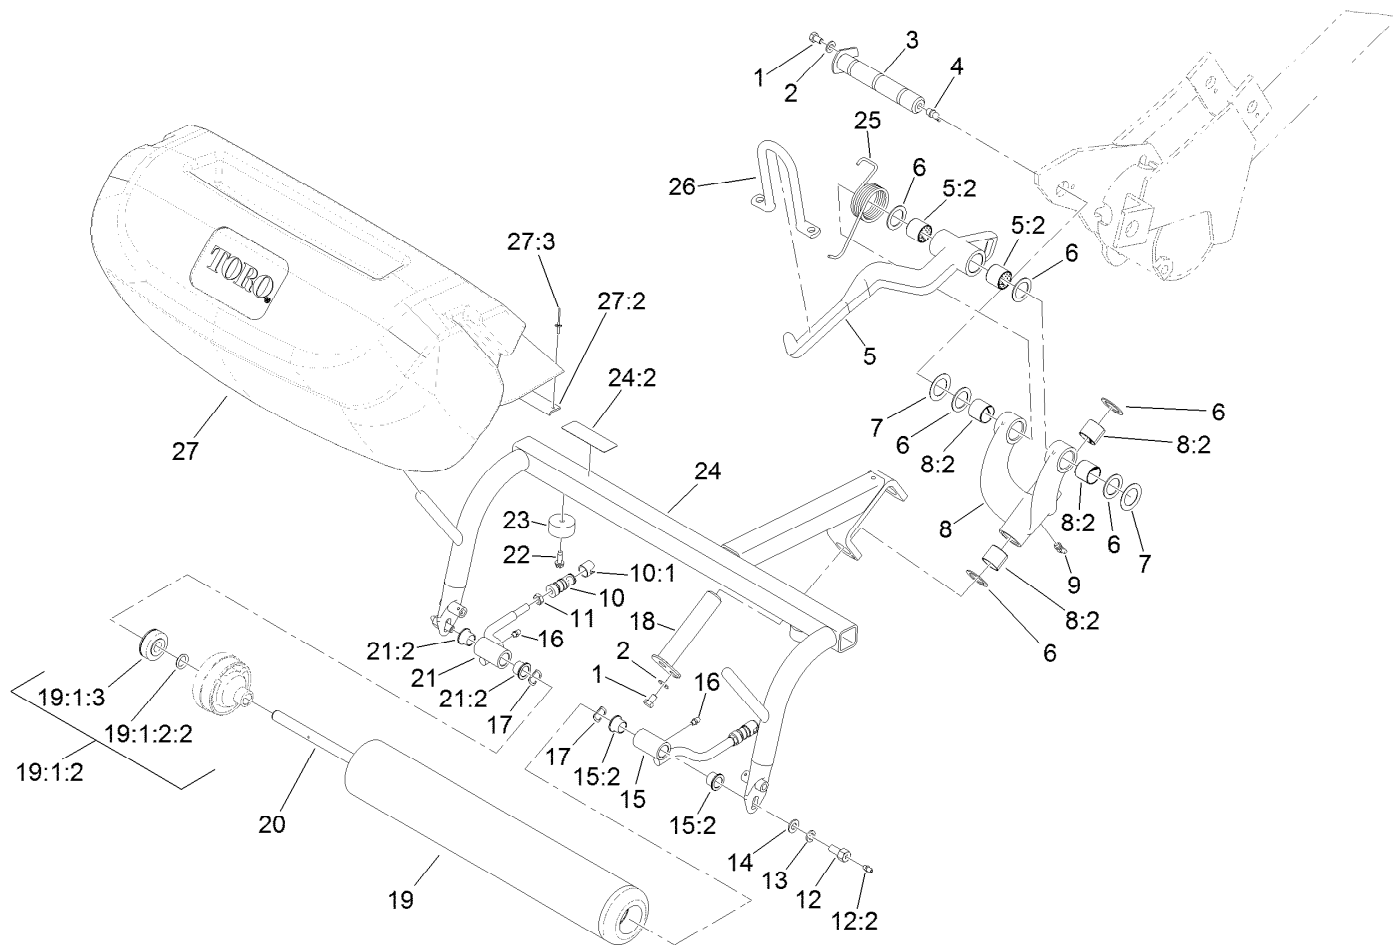


Right Pull Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
27	108-8642	1	Grass Basket ASM

Ref.	Part Number	Qty.	Description
27:2	104-2607	1	Strip-Basket
27:3	3290-382	8	Rivet-Pop

 
● Not serviced separately

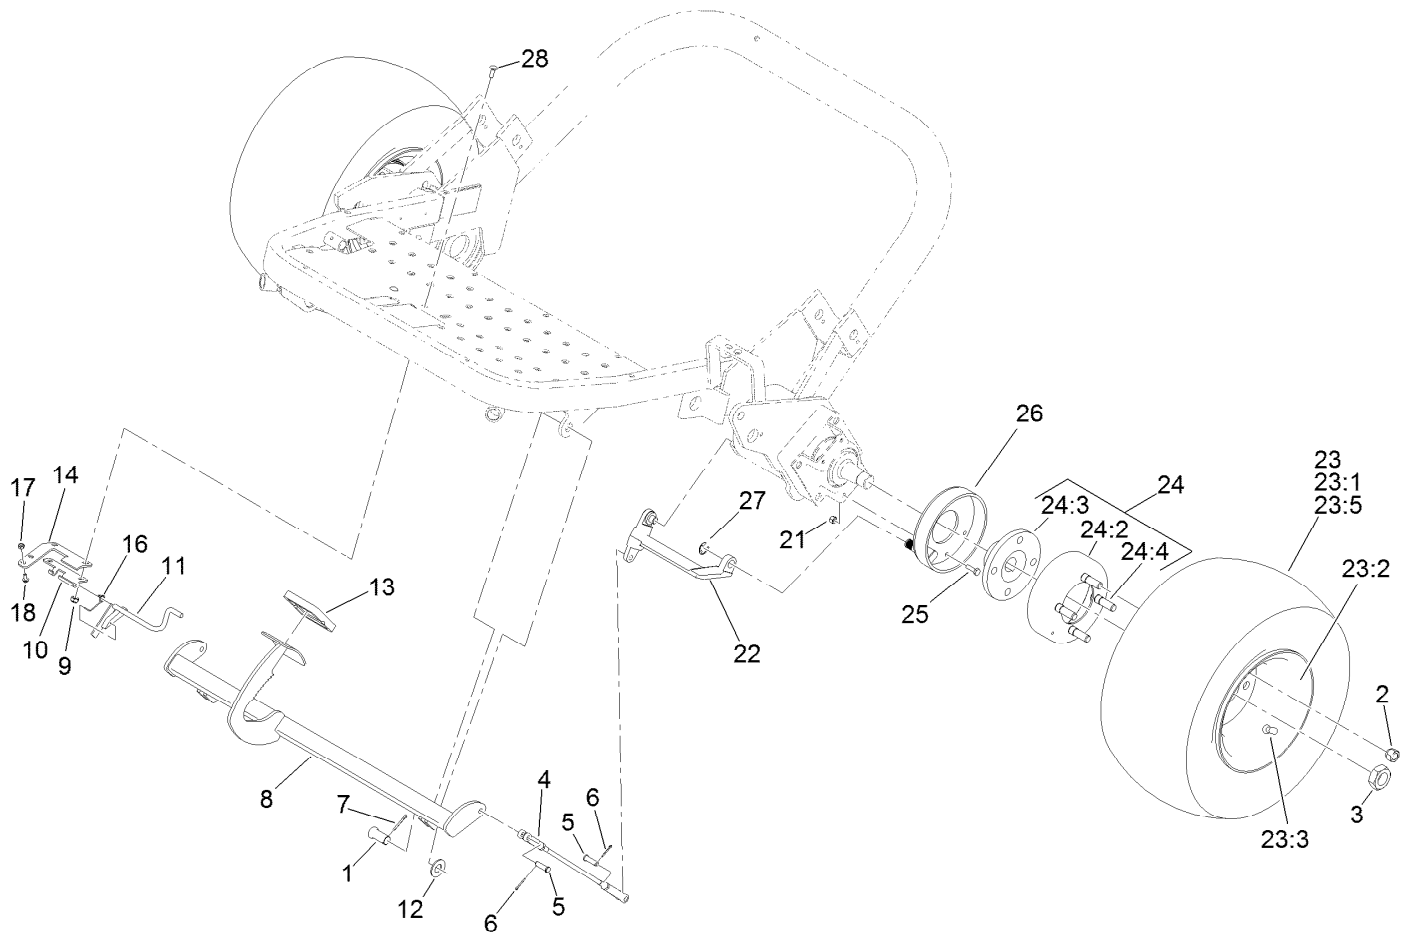

Front Wheel and Brake Assembly


Ref.	Part Number	Qty.	Description
1	283-87	2	Pin-Clevis
2	242-50	8	Nut-Lug
3	26-3790	2	Nut-Lock
4	130-0110	2	Brake Rod ASM
5	283-61	4	Pin-Yoke
6	3272-6	4	Pin-Cotter
7	3272-11	2	Pin-Cotter
8	127-2208-01	1	Pedal-Brake
9	3296-16	2	Nut-Lock, NI
10	131-2078	1	Sheet-Hinge, Sensor
11	131-2081	1	Latch
12	3256-27	2	Washer-Flat
13	93-7629	1	Pad-Foot, Brake
14	131-2077	1	Sheet-Hinge
16	132-6988	1	Spring-Brake Latch
17	3296-2	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
18	3290-321	2	Screw-HWH
21	3296-42	8	Nut-Lock, NI
22	93-2096	2	Lever-Brake
23	10-6790	2	Wheel And Tire ASM
23:1	28-3680	1	Tire
23:2	217-60	1	Rim
23:3	232-27	1	Stem-Valve
23:5	232-37	1	Tube
24	10-6821	2	Brake Drum ASM
24:2	10-6850	1	Drum-Brake
24:3	10-6870-03	1	Hub-Wheel
24:4	85-6540	4	Stud-Drive
25	321-5	8	Screw-HH
26	104-7705	2	Brake ASM
27	104-7706	2	E-Ring, Bowed
28	3229-1	2	Bolt-CARR

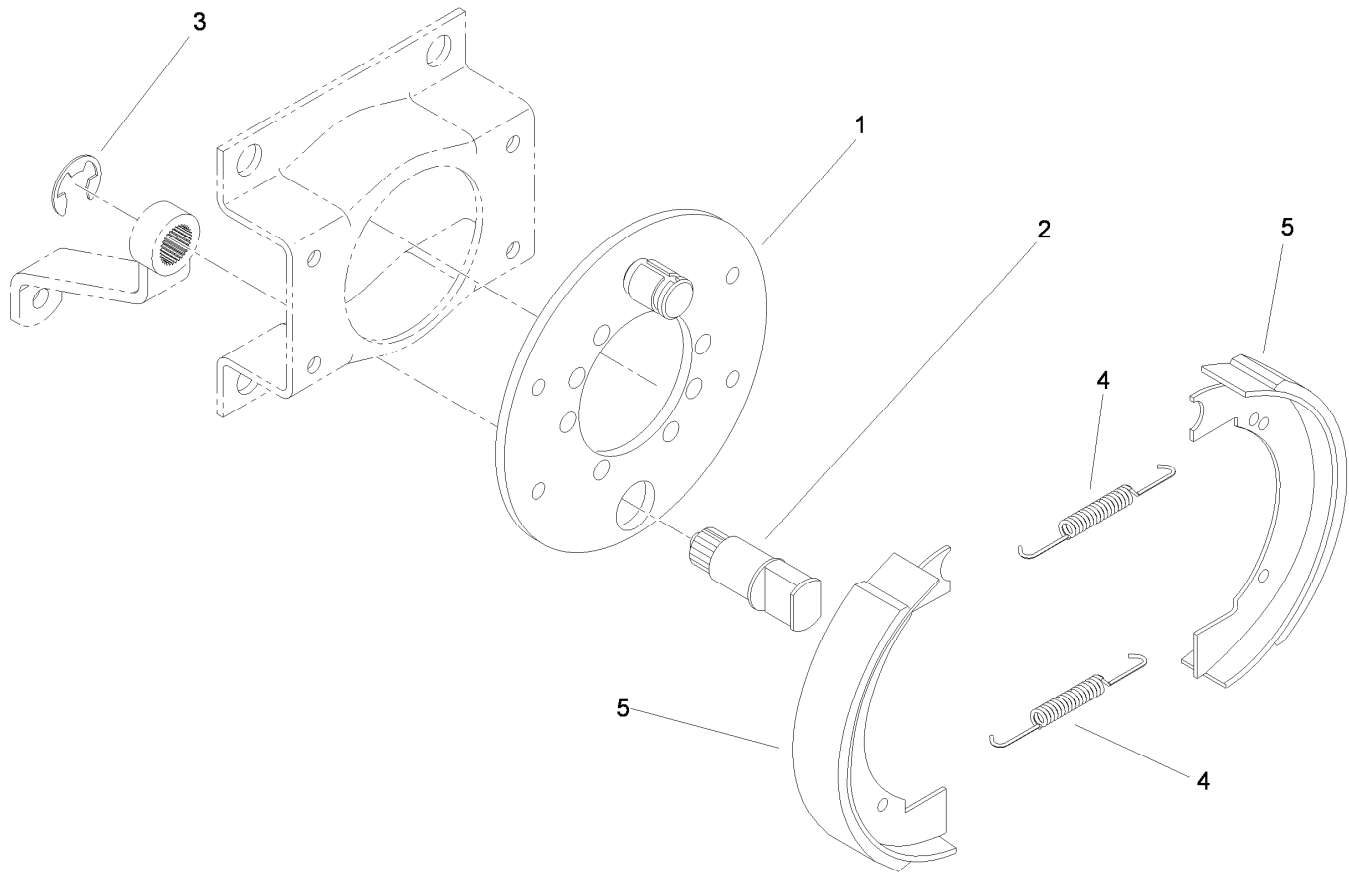 

Brake Assembly No. 104-7705


Ref.	Part Number	Qty.	Description
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring, Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

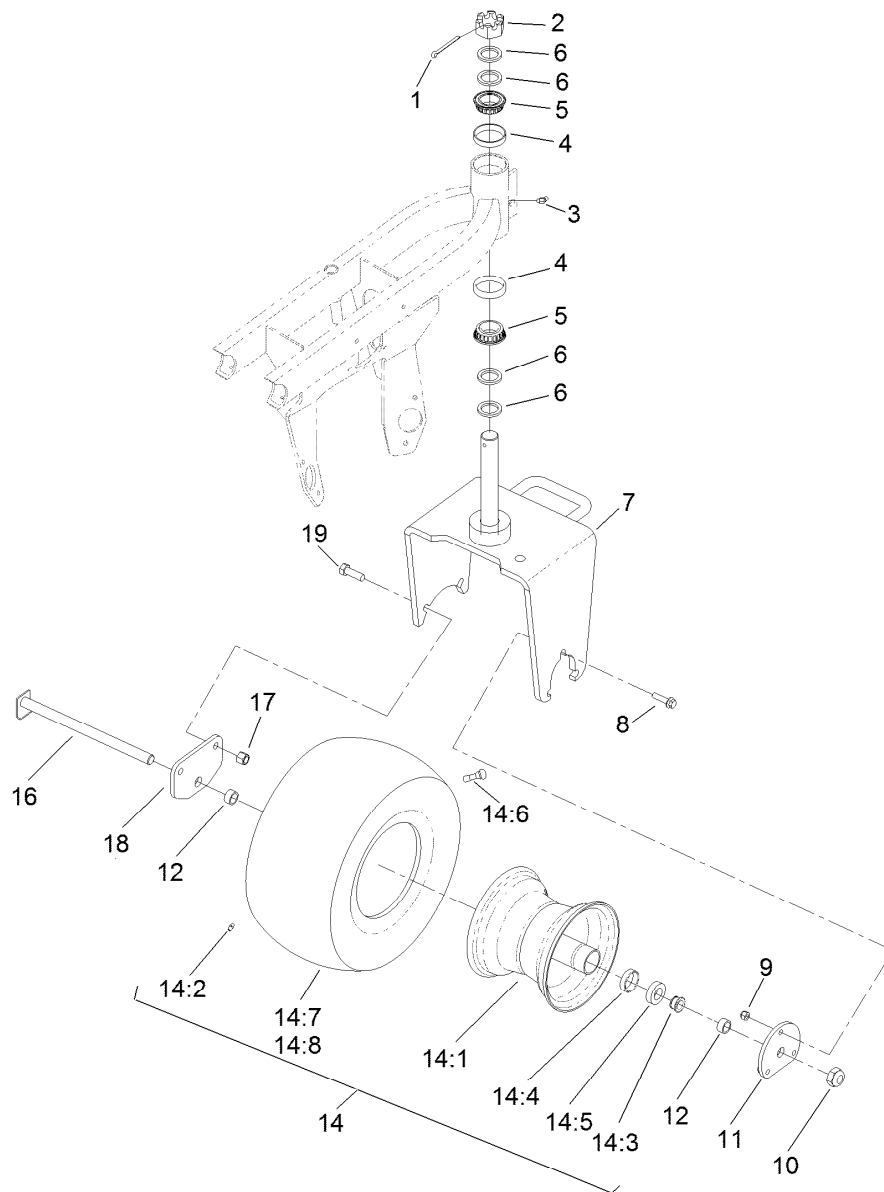 

Rear Wheel Assembly

Ref.	Part Number	Qty.	Description
1	3272-37	1	Pin-Cotter
2	32136-9	1	Nut-Hex, Slotted
3	302-11	1	Fitting-Lube, 45 DEG
4	115-9471	2	Bearing-Cup
5	115-9472	2	Bearing-Cone And Seal
6	18-6320	4	Washer-Steering
7	112-0285-01	1	Fork-Castor
8	114-4681	3	Screw-HHF
9	3296-39	3	Nut-Lock, NI
10	3296-67	1	Nut-Lock, NI
11	99-1486-01	1	Plate-Adapter
12	74-3730	2	Spacer-Spindle, Rear
14	131-2757	1	Wheel ASM

Ref.	Part Number	Qty.	Description
14:1	131-2756	1	Rim ASM
14:2	302-5	1	Fitting-Grease
14:3	254-78	2	Bearing-Cone
14:4	254-79	2	Bearing-Roller, Cup
14:5	253-111	2	Seal-Oil
14:6	232-27	1	Stem-Valve
14:7	28-3680	1	Tire
14:8	232-37	1	Tube
16	5-3934	1	Bolt-Caster
17	3296-23	2	Nut-Lock, NI
18	99-1485-01	1	Plate-Adapter, Motor
19	325-6	2	Screw-HH

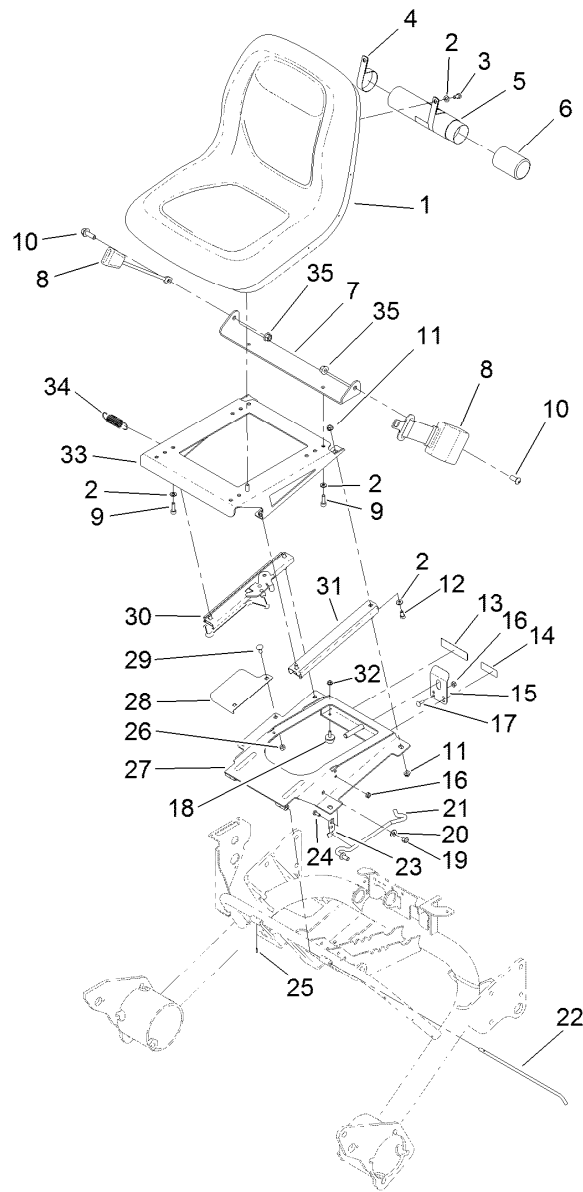 

Seat Assembly

Ref.	Part Number	Qty.	Description
1	112-2923	1	Seat ASM
2	3256-23	8	Washer-Plain
3	33104-016	2	Screw-HHF
4	2412-133	2	Clamp-R
5	104-7050	1	Tube-Manual
6	104-7048	1	Cap-Housing
7	119-0727-03	1	Bracket-Belt, Seat
8	100-4928	1	Belt-Seat
9	98-5828	4	Screw-HSH
10	3274-105	2	Screw-HSBH
11	32128-25	8	Nut-HF
12	3274-12	4	Screw-HSH
13	117-2718	1	Decal-Arrester, Spark
14	93-6686	1	Decal-Oil, HYD
15	66-2630	1	Latch-Seat
16	3296-16	4	Nut-Lock, NI
17	3229-1	2	Bolt-CARR
18	1-523420	2	Bumper

Ref.	Part Number	Qty.	Description
19	3296-39	1	Nut-Lock, NI
20	3256-24	1	Washer-Flat
21	106-4643	1	Rod-Prop, Seat
22	105-0483	1	Rod-Pivot, Seat
23	68-5310	1	Clip-Rod, Prop
24	321-3	2	Screw-HH
25	32121-7	1	Pin-Roll, Slotted
26	3296-29	2	Nut-Lock, NI
27	105-0464-03	1	Plate-Seat
28	105-8284-03	1	Shield-Valve
29	3230-1	2	Bolt-CARR
30	105-8265	1	Adjuster-Seat
31	51-0780	1	Slider-Seat
32	32128-33	2	Nut-HF
33	105-0466-03	1	Plate-Seat, Upper
34	88-6330	1	Spring-Extension
35	114-8417	2	Nut-HF, NI

Attachments and Accessories

For 04355 Greensmaster 3120 2-Wheel Drive Traction Unit

Product Name	Model/Part
Turf Evaluator	04399
Dethatching Unit	04479
Spiker Kit	04494
Tri-Roller Kit.....	04495
Light Kit.....	04554
8-Blade DPA Reel Mower	04652
11-Blade DPA Reel Mower	04654
14-Blade DPA Reel Mower	04656
Weight Kit, Greensmaster and Sand Pro/Infield Pro Traction Unit.....	100-6442
Filter-Oil, Engine	107-7817
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Premium Engine Oil SAE 30 (Drum)	108-1196
Premium Engine Oil SAE 30 (Pail).....	108-1197
Bimini Folding Shade Assembly	115-4510
Hourmeter-Wireless.....	115-4754
Hydraulic Hose Kit	117-2725
Premium Synthetic Bio-Degradable Hydraulic Fluid (5 Gallon Pail)	119-2157
Premium Synthetic Bio-Degradable Hydraulic Fluid (55 Gallon Drum).....	119-2158
Tire-Traction	119-3516
Spark Arrestor Screen	119-7185
Toro Reel Paper (10 Pack).....	125-5610
Toro Reel Shim (0.002in)	125-5611
Oil Cooler Kit.....	130-6536
MVP Initial 800 Hour Filter Kit, 2012 and After Greensmaster 3150-D Traction Unit	131-6262
MVP Standard Filter Kit, 2012 and After Greensmaster 3150-D Traction Unit	131-8785
Cartridge-Cleaner, Air	92-0527
Element-Filter	92-0530
Filter-Fuel	94-2690
Height-of-Cut Bar.....	94-9010

Notes:

Notes:

Notes:



Count on it.