



Count on it.

Parts Catalog

Safety and Security Cage Kit

**Groundsmaster® 4300 or Reelmaster® 5010
Series Traction Unit with 2 Post ROPS
Extension**

Model No. 03616



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Safety and Security Cage Assembly 4

LH Door Assembly No. 138-1200 6

RH Door Assembly No. 138-1201 8


Safety and Security Cage Assembly

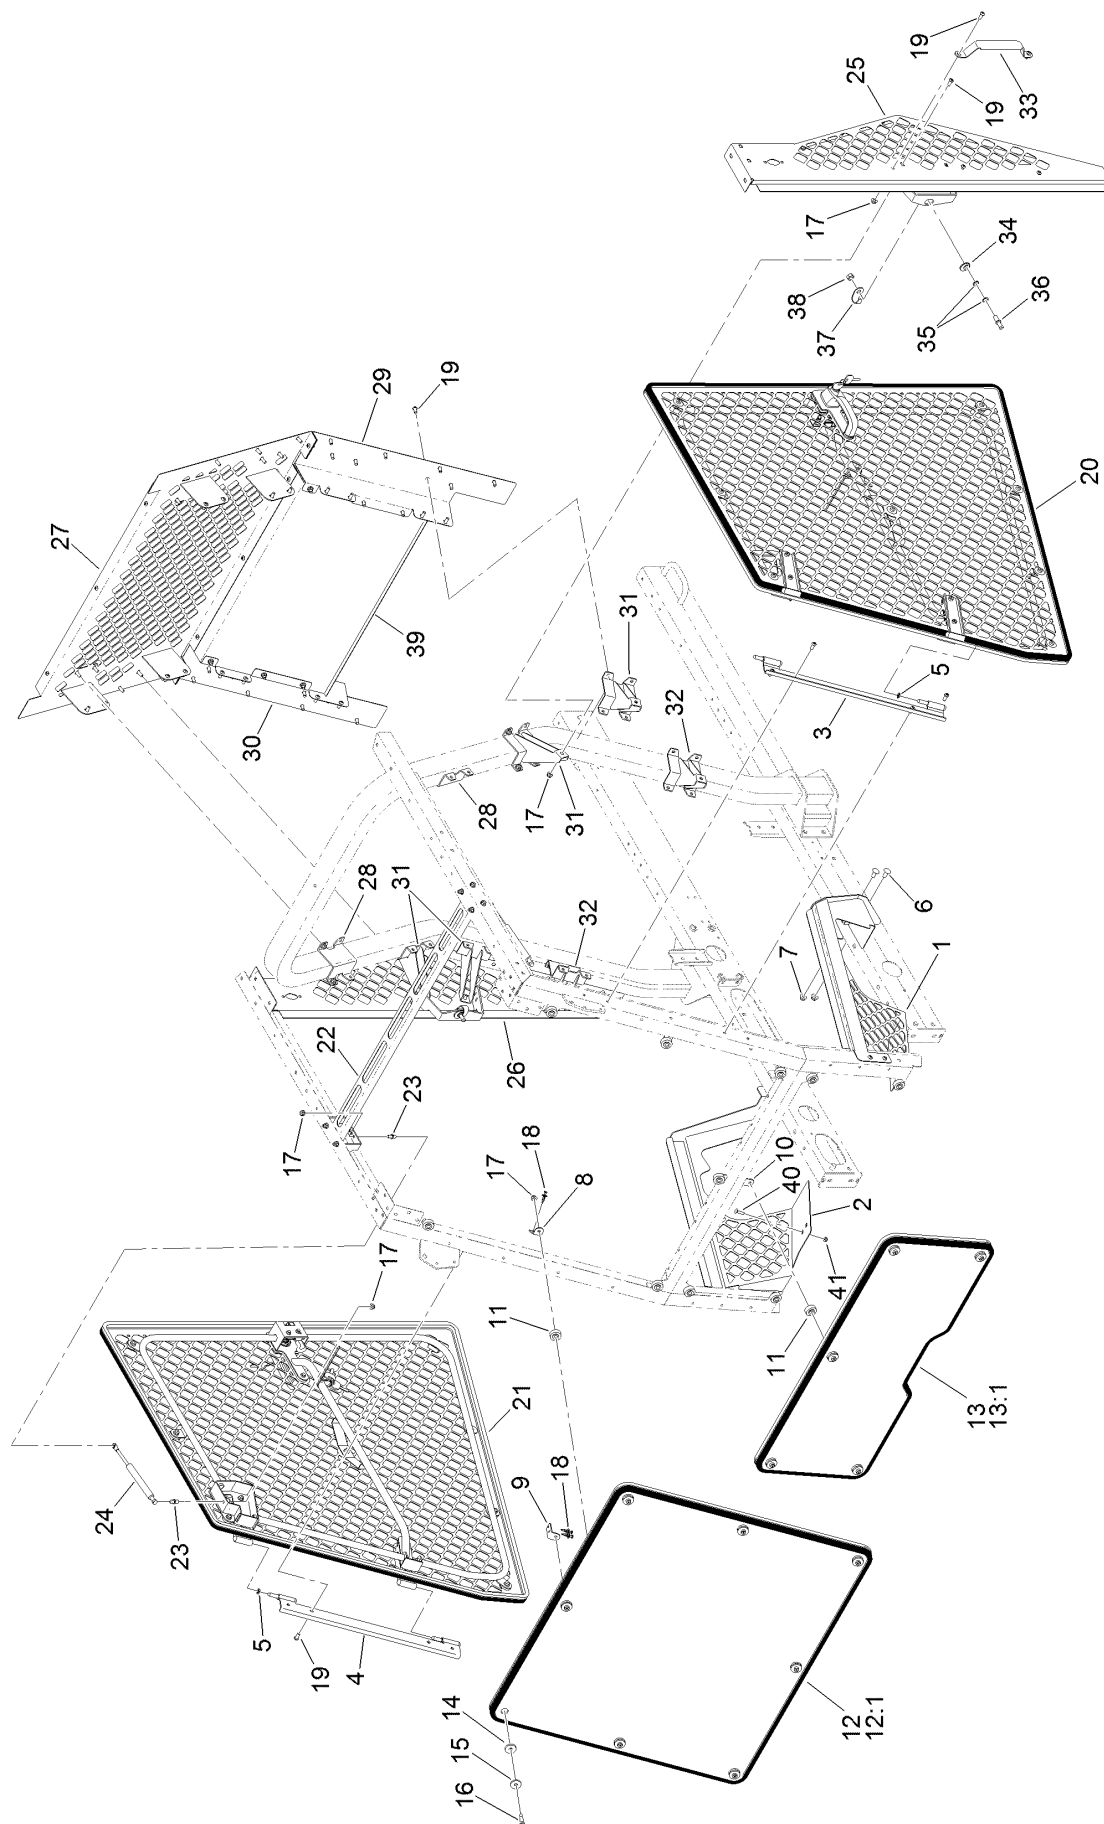

Safety and Security Cage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-1157-03	1	Panel-Lower, LH	21	138-1201	1	RH Door ASM
2	138-1160-03	1	Panel-Lower, RH	22	139-1911-03	1	Mount-Support
3	132-3730-03	1	Mount-Door RH	23	98-3104	4	Stud-Ball
4	132-3729-03	1	Mount-Door, LH	24	137-1009	2	Spring-Door, Gas
5	121-8441	12	Washer-Spacer	25	138-1151-03	1	Panel-Side, LH
6	3231-27	2	Screw-CARR	26	138-1163-03	1	Panel-Side, RH
7	104-8301	2	Nut-HF, NI	27	138-1153-03	1	Rear Screen ASM
8	132-3715-03	2	Tab-Mount	28	132-3539-03	2	Mount-Channel, Side
9	132-3716-03	1	Tab-Mount	29	138-1165-03	1	Panel-Rear, LH
10	132-3717-03	1	Tab-Dual	30	138-1166-03	1	Panel-Rear, RH
11	125-9537	13	Bushing-Flange	31	138-1222-03	4	Support-Panel
12	132-3415	1	Upper Windshield ASM	32	138-1220-03	2	Support-Panel
12:1	132-3414	1	Trim-Windshield, Upper	33	133-0893-03	1	Handle-Grab
13	136-2054	1	Lower Windshield ASM	34	125-9992	2	Adjuster-Stud
13:1	132-3684	1	Trim-Windshield, Lower	35	73-0040	4	Washer-Thrust
14	125-9982	13	Bushing-Flange	36	132-3718	2	Stud-Striker
15	130-5815	13	Washer-Backup	37	121-8393	2	Guard-Striker
16	125-9521	13	Screw-Shoulder, HSH	38	106-0327	2	Nut-Hex
17	104-8300	105	Nut-HF, NI	39	138-1156-03	1	Panel-Lower, Rear
18	125-9622	6	Rivet-Blind	40	3229-30	4	Screw-CARR
19	3274-55	88	Screw-HSBH	41	104-7201	4	Nut-HF
20	138-1200	1	LH Door ASM				


LH Door Assembly No. 138-1200

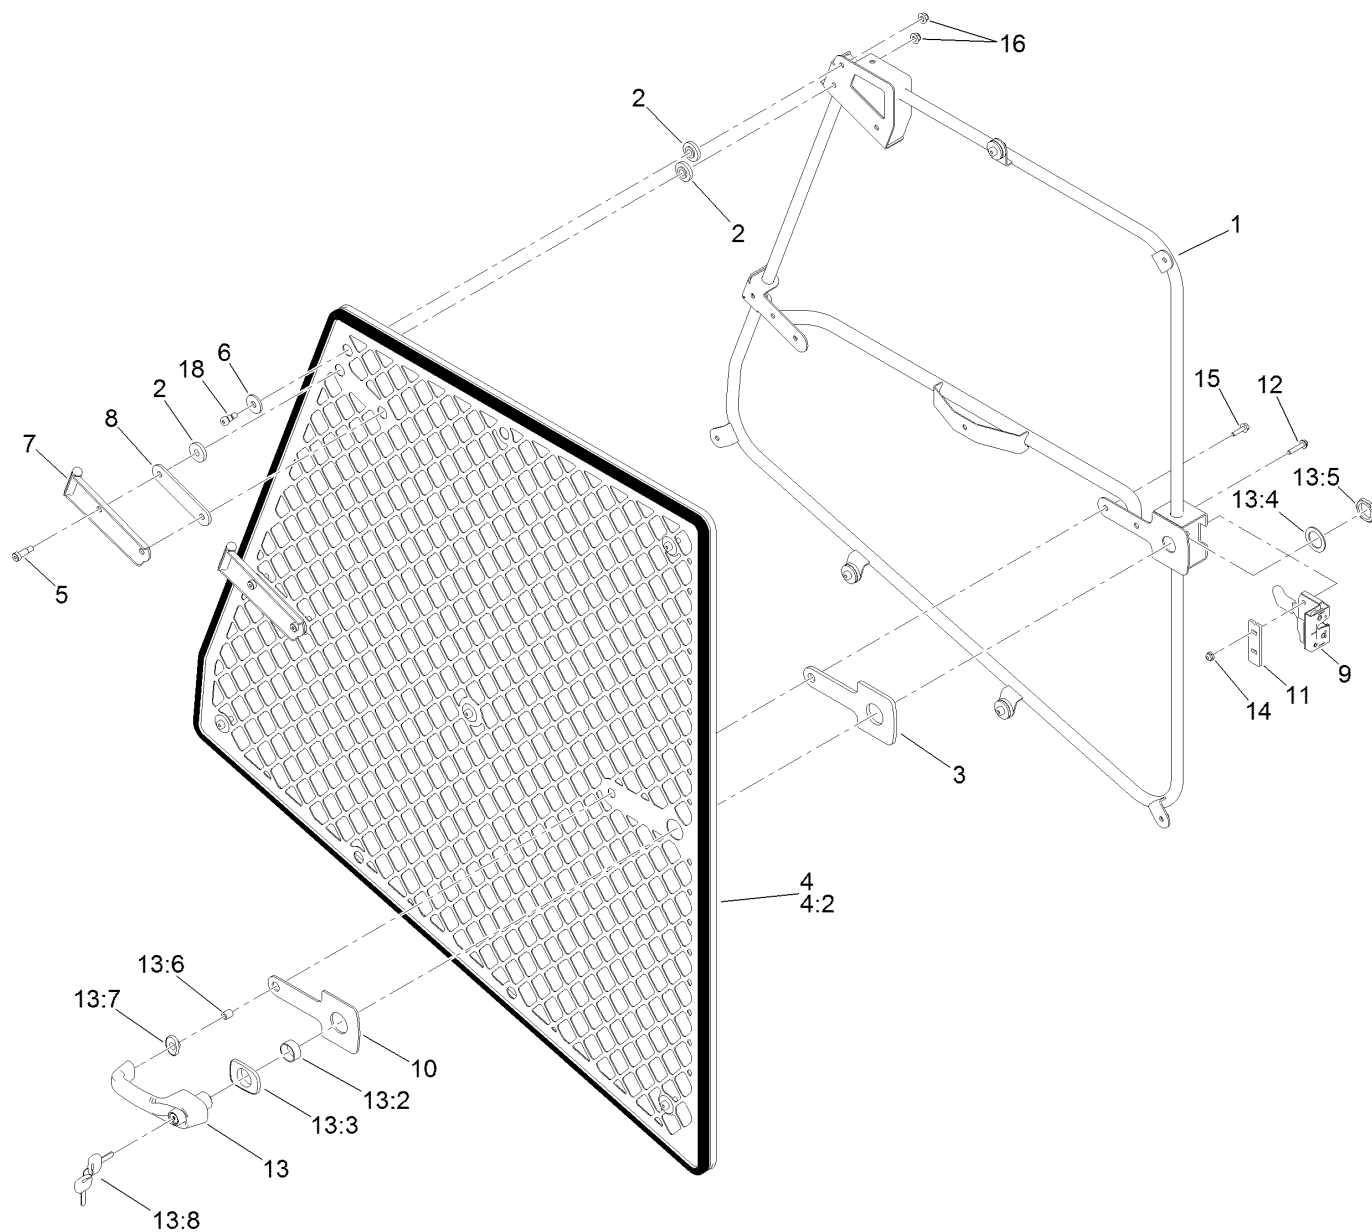

LH Door Assembly No. 138-1200 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-1171-03	1	Frame-Door, LH	13	121-8630	1	Handle ASM
2	125-9982	16	Bushing-Flange	13:2	121-8628	1	Cylinder-Mounting, Key
3	121-8331	1	Gasket-Handle	13:3	121-8322	1	Grommet-Mounting, Large
4	138-1198	1	LH Screen ASM	13:4	121-8327	1	Washer
4:2	138-1197	1	Trim Seal	13:5	121-8328	1	Nut
5	125-9520	4	Screw-Shoulder, HSH	13:6	121-8627	1	Cylinder-Mounting, End
6	125-9676	8	Washer-Backup	13:7	121-8323	1	Grommet-Mounting, Small
7	125-9618-03	2	Hinge-Door, RH	13:8	125-9531	1	Key-Set
8	136-2216-03	2	Spacer	14	104-7201	2	Nut-HF
9	121-8390	1	Latch-RH	15	33103-025	1	Screw-HHF
10	130-6172-03	1	Spacer	16	104-8300	12	Nut-HF, NI
11	121-8395	1	Plate-Support, Latch	18	1-809056	8	Screw-HSH
12	3234-21	2	Screw-HHF				

RH Door Assembly No. 138-1201

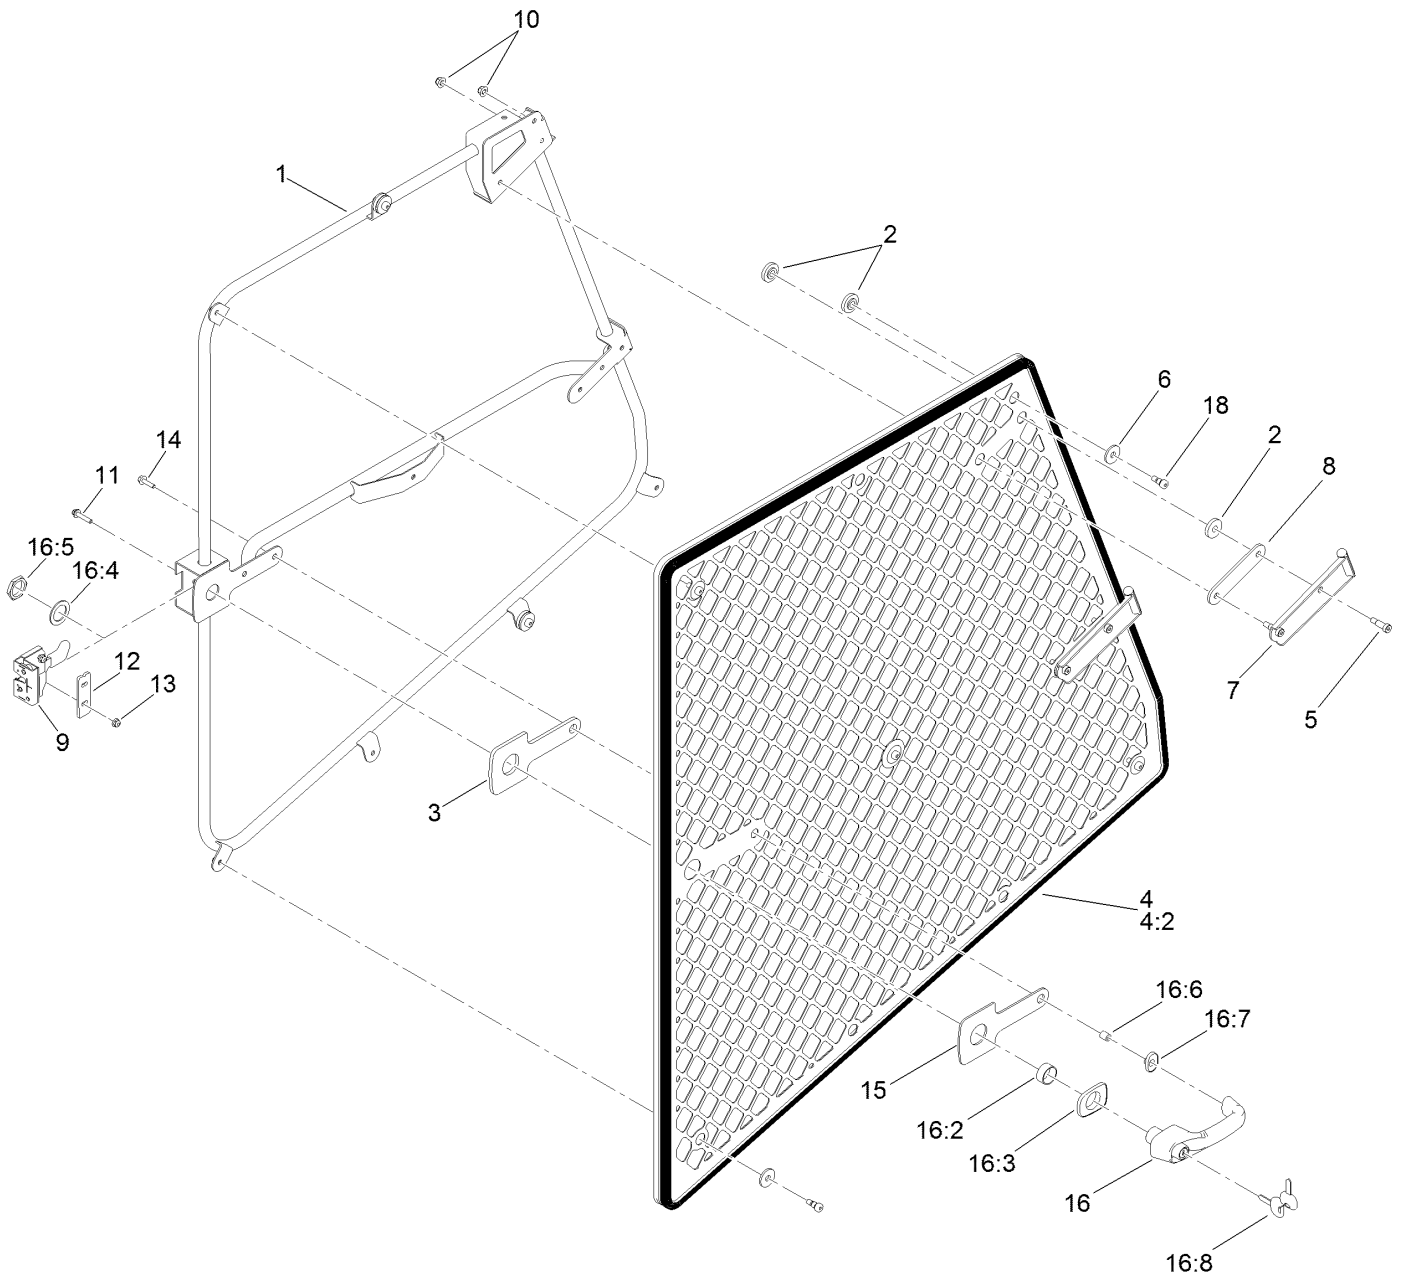

RH Door Assembly No. 138-1201 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-1172-03	1	Frame-Door, RH	13	104-7201	2	Nut-HF
2	125-9982	16	Bushing-Flange	14	33103-025	1	Screw-HHF
3	121-8331	1	Gasket-Handle	15	130-6172	1	Spacer
4	138-1199	1	RH Screen ASM	16	121-8630	1	Handle ASM
4:2	138-1197	1	Trim Seal	16:2	121-8628	1	Cylinder-Mounting, Key
5	125-9520	4	Screw-Shoulder, HSH	16:3	121-8322	1	Grommet-Mounting, Large
6	125-9676	8	Washer-Backup	16:4	121-8327	1	Washer
7	125-9619-03	2	Hinge-Door, LH	16:5	121-8328	1	Nut
8	136-2216-03	2	Spacer	16:6	121-8627	1	Cylinder-Mounting, End
9	121-8391	1	Latch-LH	16:7	121-8323	1	Grommet-Mounting, Small
10	104-8300	12	Nut-HF, NI	16:8	125-9531	1	Key-Set
11	3234-21	2	Screw-HHF	18	1-809056	8	Screw-HSH
12	121-8395	1	Plate-Support, Latch				

Notes:

Notes:



Count on it.