



53cm Rear Bagging Mower

Model No. 26638 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Gear Case Assembly	7
Engine Assembly	2	Handle Control Assembly	8
BBC Assembly	3	Engine GTS–200	9–17
Handle Assembly	4	Toro Part Number Index	18–20
Grass Bag Assembly	5	Maintenance	21
Rear Axle Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Dethatcher Kit	Model No. 59131		
Leaf Shredder Kit	Model No. 59180		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

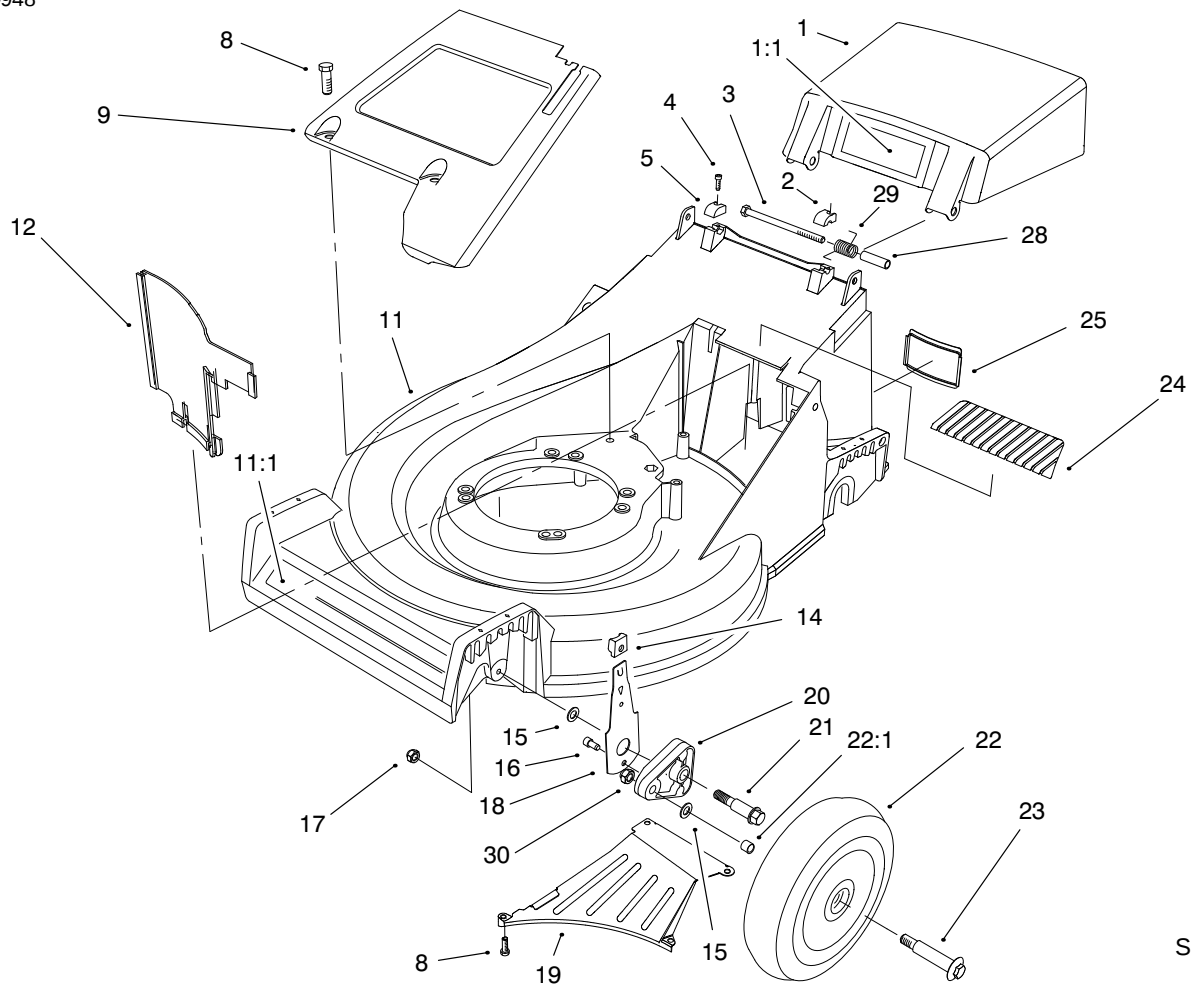


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	17-1569	1	Door-Discharge
1:1	93-4105	1	Decal-Danger
2	71-7900	1	Cap-Bolt LH
3	322-29	2	Screw-HH
4	65-5210	2	Screw-Thread Forming
5	71-7910	1	Cap-Bolt RH
8	32144-70	6	Screw-TAP
9	65-5660	1	Panel-Screen
11	16-1769	1	Housing-53cm
11:1	71-9870	1	Decal-Deck 53cm
12	66-0020	1	Panel-Vertical
14	25-7740	2	Knob-Arm
15	40-1940	4	Washer
16	65-5220	2	Screw-Thread Forming
17	3296-6	2	Nut-Lock
18	66-0540	2	Spring Arm ASM
19	71-9640	1	Ramp-Discharge
20	66-0580	2	Arm-Pivot
21	66-0560	2	Screw-Shoulder
22	92-9592	2	Wheel & Tire ASM
22:1	27-6250	4	Bushing
23	92-1057	2	Bolt-Shoulder
24	71-9920	1	Cover-Top
25	71-9650	1	Access-Cover
28	71-8580	2	Spacer-Door


Ref. No.	Part No.	Qty.	Description
29	71-9840	2	Spring-Door
30	603773	2	Nut-Lock

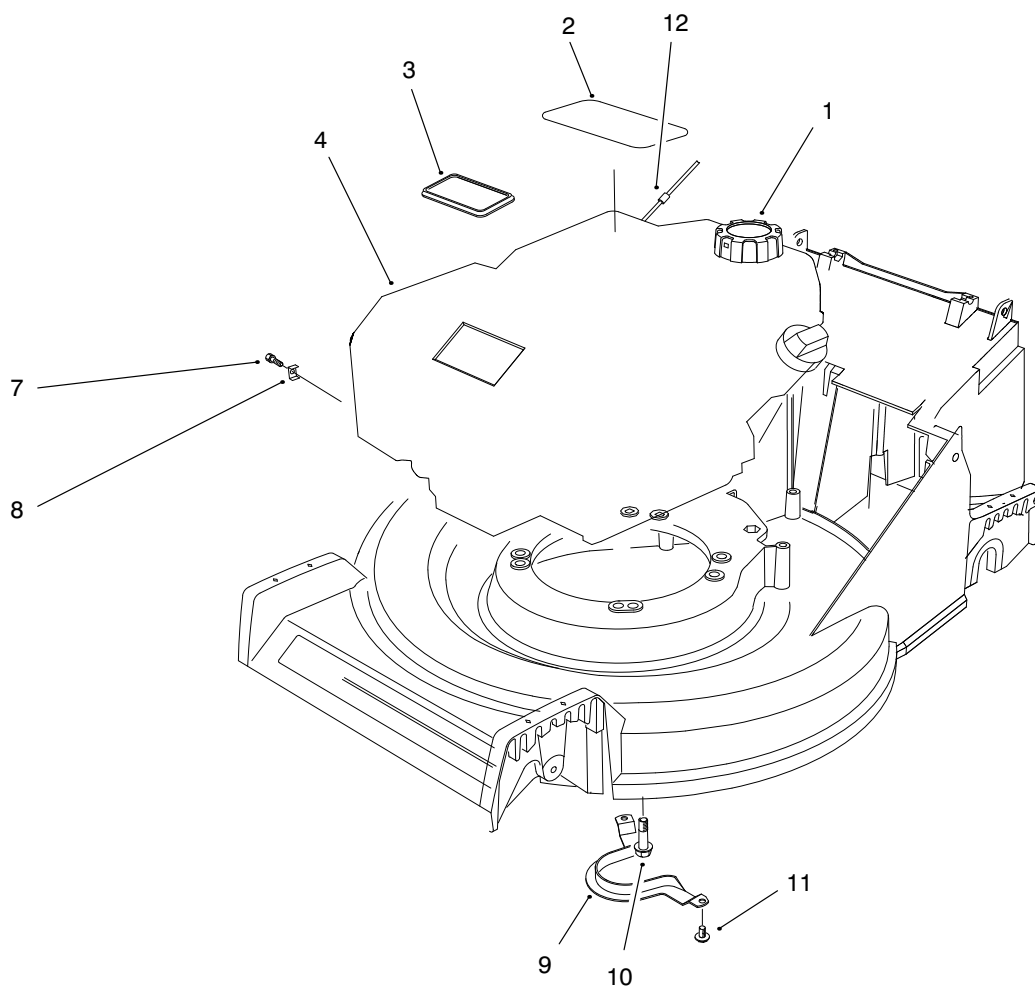 

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7198	1	Cap ASM
2	98-2004	1	Decal-Engine
3	92-2289	1	Plate-Logo
4		1	Engine-GTS OHV 200
7	93-8470	1	Screw-Clamp
8	2210-249	1	Clamp-Casing
9	66-0570	1	Guide-Belt
10	32144-102	3	Screw
11	32144-70	2	Screw-TAP
12	2210-316	1	Rope-Stop

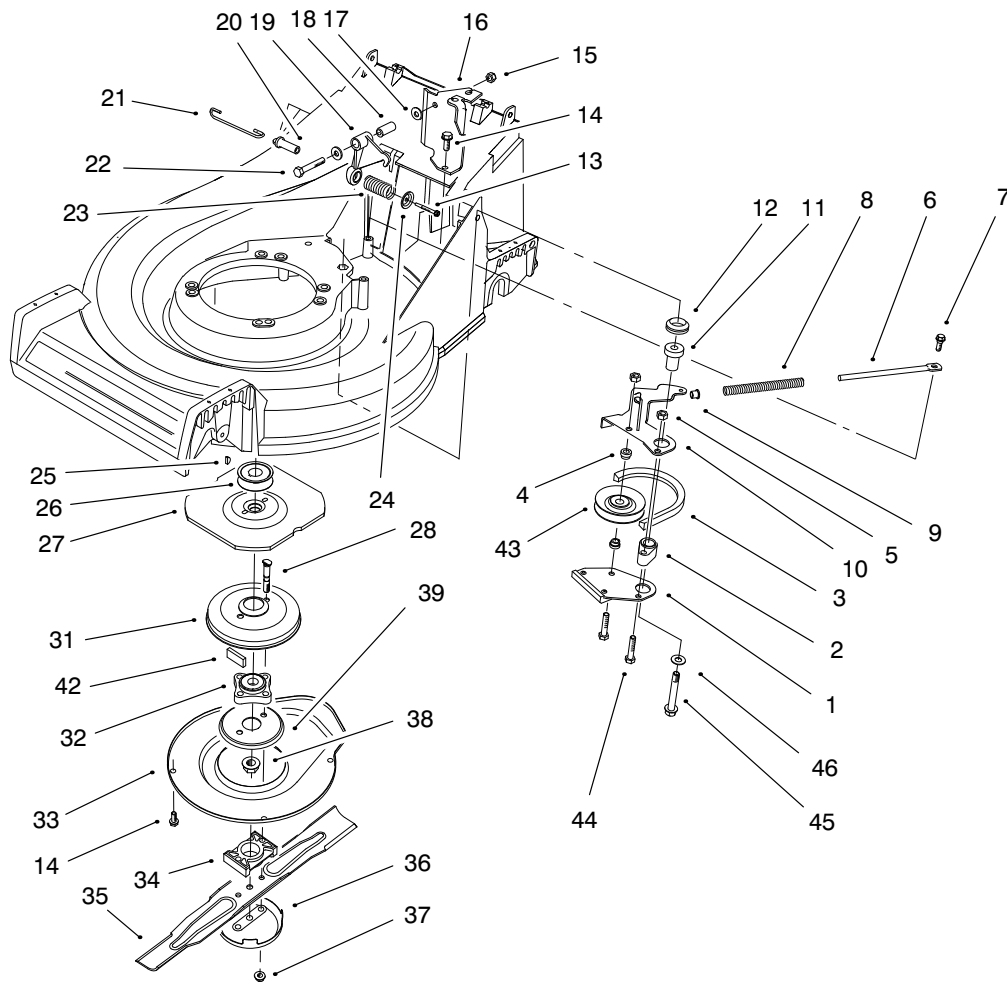 


Sheet No.:4

BBC Assembly

Ref. No.	Part No.	Qty.	Description
1	65-5780	1	Shoe-Brake
2	65-5070	1	Hub-Plate
3	65-5740	1	Belt-"V"
4	65-5130	2	Hub-Pulley
5	3296-42	2	Nut-Lock
6	65-5320	1	Rod-Spring
7	65-5670	1	Bolt-Shoulder
8	71-3640	1	Spring-Compression
9	66-0350	1	Bushing-Flange
10	66-0090	1	Lever
11	65-5720	1	Bushing
12	253-151	1	Seal-Ring
13	46-7040	1	Screw-HWH
14	32144-70	5	Screw-TAP
15	32128-44	1	Nut-Flange
16	66-0030	1	Bracket-Cable Support
17	3256-23	2	Washer-Flat
18	65-5690	1	Bushing-Bellcrank
19	65-5700	1	Crank
20	71-3660	1	Pin-Spring
21	71-3650	1	Link-Control
22	322-21	1	Screw-HH
23	71-3630	1	Spring-Compression
24	65-5280	1	Retainer-Spring
25	3257-17	1	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
26	62-7560	1	Pulley-Driver
27	65-5300	1	Flywheel-BBC
28	42-3190	2	Bolt-Blade
31	62-3890	1	Drum-Brake
32	42-6890	1	Hub ASM
33	65-5200	1	Shield-BBC
34	62-4280	1	Spacer-Blade
35	62-7700	1	Blade-21"
36	80-2770	1	Cup-Anti Scalp
37	54-9190	2	Nut-Lock
38	3296-33	1	Nut-Lock
39	65-5330	1	Screen-BBC
42	52-3480	2	Damper-Vibration
43	46-5650	1	Pulley-Idler
44	321-13	2	Screw-HH
45	11-0580	1	Screw-Thread Forming
46	65-5380	1	Washer-Flat

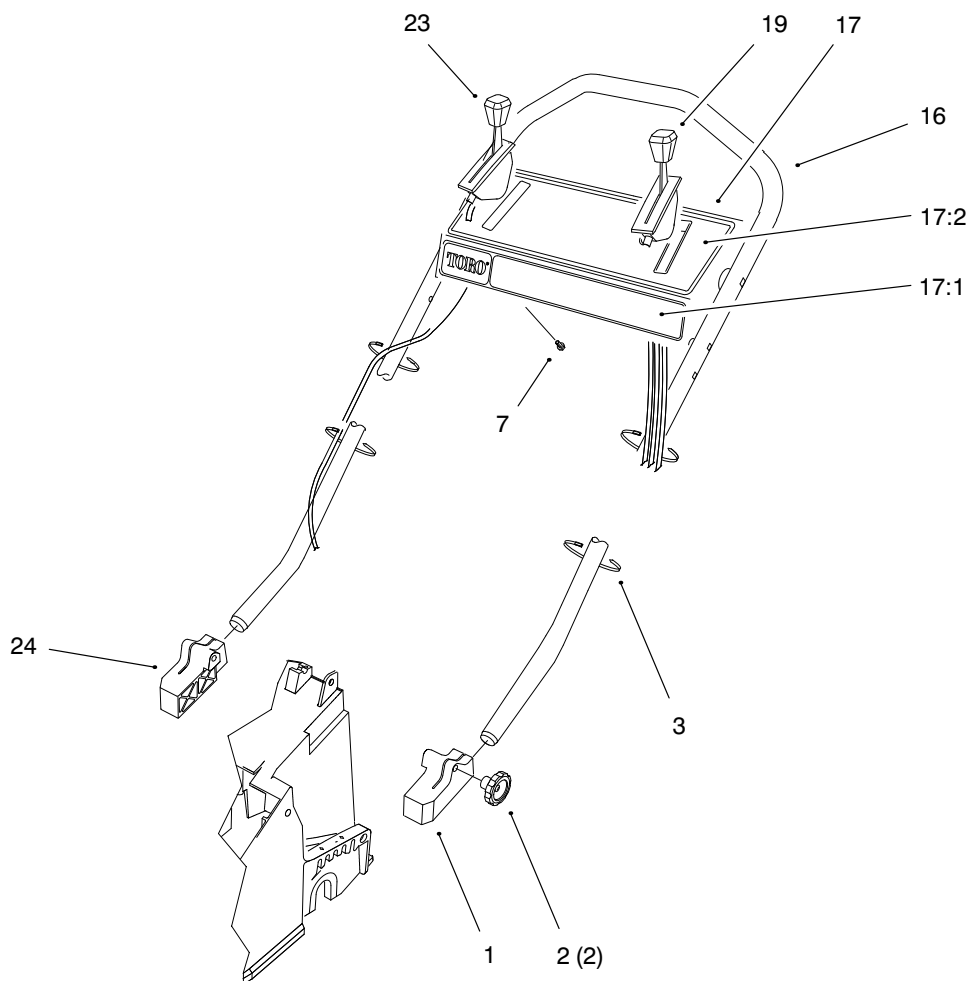 


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71-8090	1	Mount-Handle LH
2	19-4050	2	Knob
3	3290-378	5	Tie-Cable
7	92-9665	4	Screw-Phillips
16	94-4910	1	Handle-Dipped
17	98-9223	1	Panel-Control
17:1	71-9872	1	Decal-Panel
17:2	98-2038	1	Decal-Instruction
19	98-1512	1	Control-Throttle
23	93-6632	1	Control-Speed
24	71-8100	1	Mount-Handle RH

Grass Bag Assembly


Ref. No.	Part No.	Qty.	Description

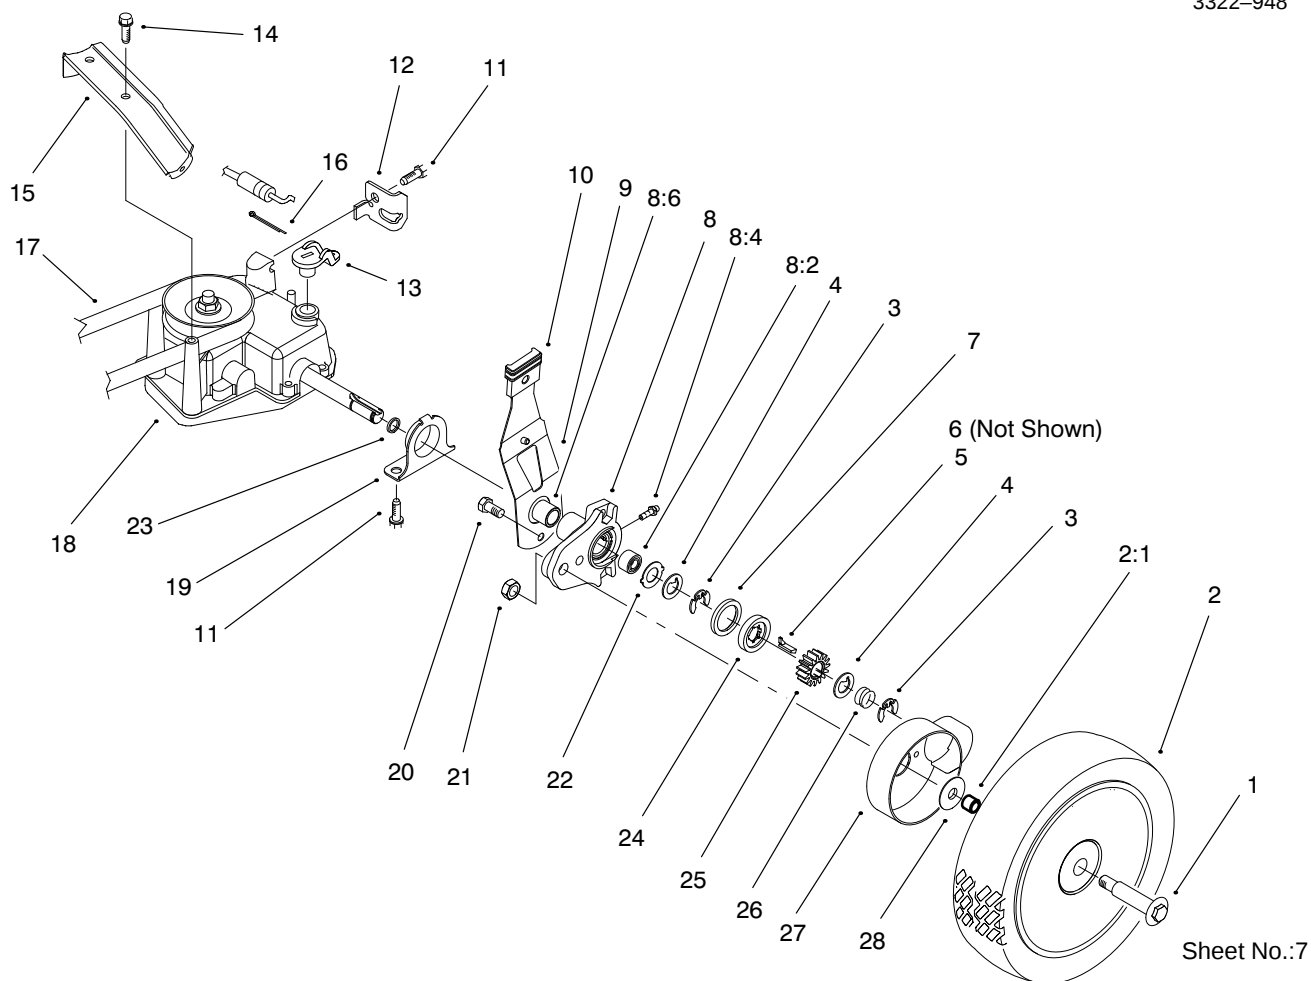 

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Wheel
2	99-8136	2	Wheel ASM
2:1	27-6250	4	Bushing
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
*6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	65-5042	2	Pivot Arm ASM
8:2	48-2060	2	Bearing-Needle
8:4	302-56	2	Fitting-Grease
8:6	70-9760	2	Bushing
9	65-5440	2	Rear Spring Arm ASM
10	25-7740	2	Knob-Arm
11	32144-70	5	Screw-TAP
12	76-2930	1	Retainer-Cable
13	76-0920	1	Lever-Shift
14	49-2040	2	Screw-HH
15	65-5190	1	Bracket-Belt Guide
16	3272-5	1	Pin-Cotter
17	36-8070	1	"V" Belt
18	62-6673	1	Gearcase ASM
19	66-0360	2	Cap-End
20	65-5220	2	Screw-Thread Forming
21	603773	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
22	65-4730	2	Washer-Thrust
23	237-153	2	O-Ring
24	65-4760	2	Washer
25	65-4750	2	Gear-Pinion
26	65-4720	2	Spring-Compression
27	74-1660	2	Cover-Wheel
28	74-1671	2	Spacer-Cover

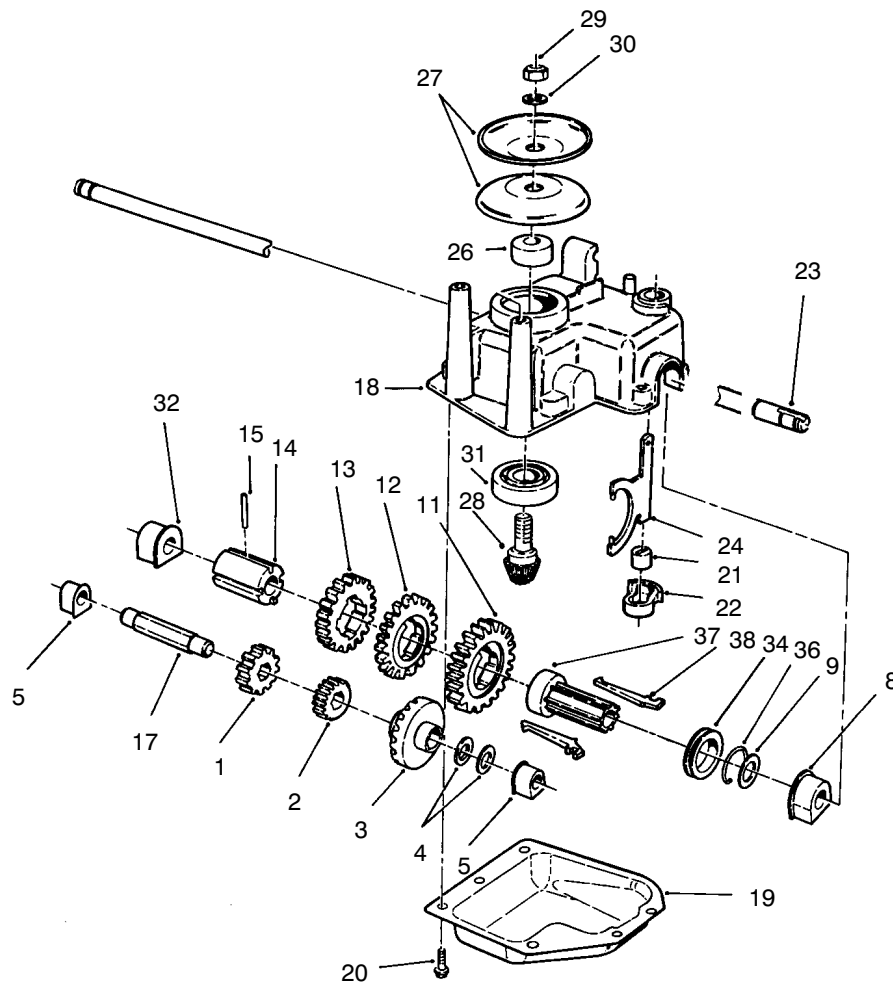 


Sheet No.:101

Gear Case Assembly # 62-6673

Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear
2	55-3780	1	Pinion 20t 2nd Gear
3	55-3760	1	15 T Pinion
4	36-4791	2	Washer-Thrust
5	60-8750	2	Bushing
8	60-8770	1	Bushing-Output Shaft
9	36-4780	1	Washer-Thrust
11	55-3770	1	Gear 49t 1st Gear
12	55-3790	1	Gear 44t 2nd Gear
13	55-3810	1	Gear 39t 3rd Gear
14	60-8790	1	Sleeve-Gear
15	32121-120	1	Pin-Coil
17	60-8800	1	Shaft-Intermediate
18	60-8710	1	Gearcase-Upper 3 Sp
19	60-8730	1	Cover-Gearcase
20	49-2040	6	Screw-HH
21	29-9570	1	Bushing-Yoke
22	60-8810	1	Retainer-Shift-Fork
23	65-4770	1	Shaft-Output
24	60-8870	1	Yoke-Shift
26	62-6660	1	Spacer-Pulley
27	100-1176	2	Pulley-Half
28	60-8890	1	Gear-Pinion
29	3296-5	1	Nut-Lock
30	3256-24	1	Washer-Flat
31	38-7820	1	Bearing-Ball


Ref. No.	Part No.	Qty.	Description
32	60-8850	1	Bushing-Output
34	76-0770	1	Collar-Shift
36	65-5250	1	Clip-Spring
37	76-0780	1	Sleeve-Shift Key
38	76-0760	2	Key-Shift
	62-6673	1	Gear Case Complete

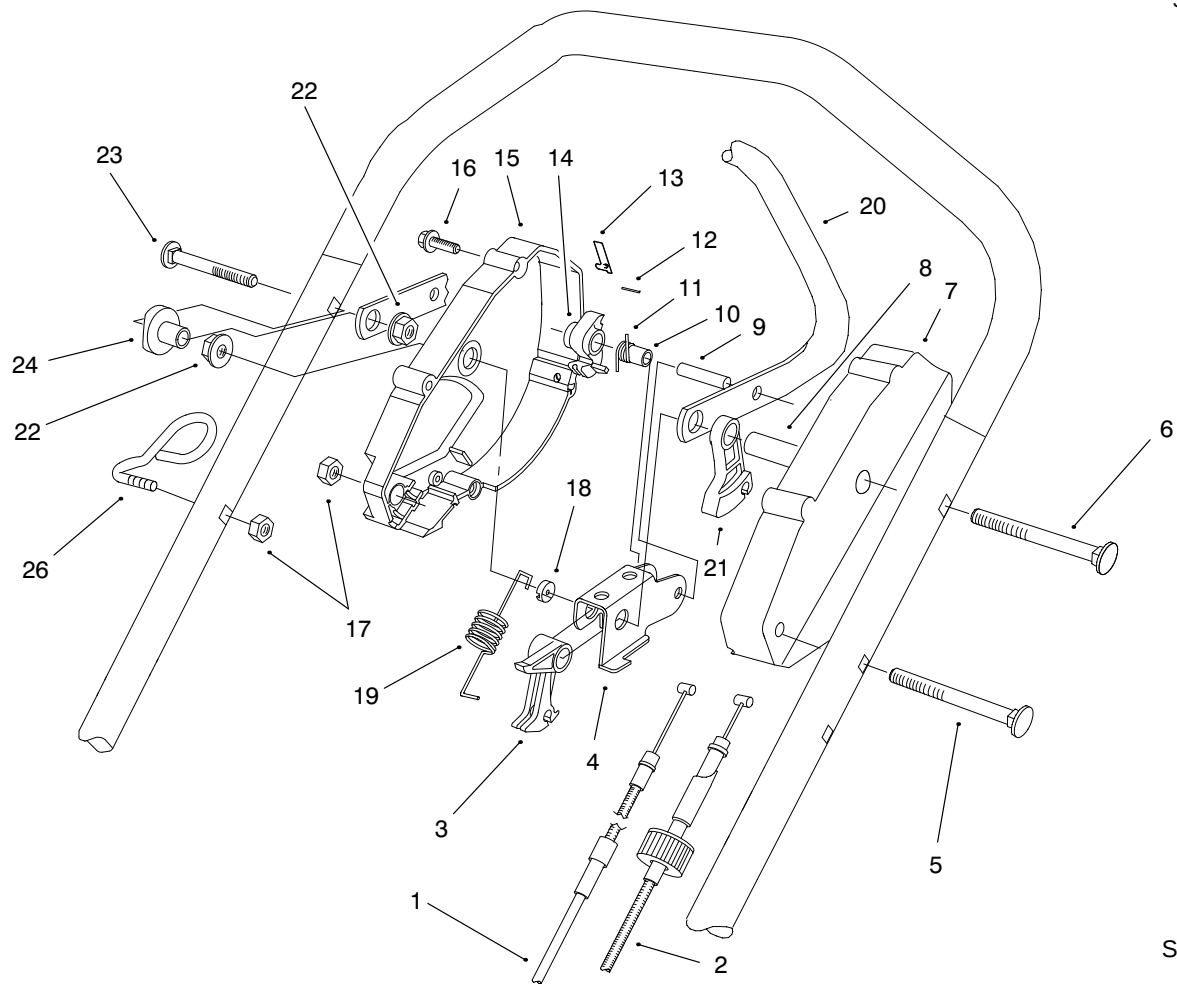 

Sheet No.:8

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-6629	1	Cable ASM				
2	93-6633	1	Cable-Traction				
3	46-5540	1	Lever-Cable				
4	66-0180	1	Rocker				
5	46-6431	1	Screw-Handle				
6	17-9425	1	Screw-Handle				
7	46-5460	1	Housing-Control				
8	46-5590	1	Spacer				
9	32121-9	1	Pin-Roll				
10	46-5550	1	Bushing				
11	46-5510	1	Spring-Torsion				
12	57-6290	1	Pin-Insert				
13	52-7410	1	Spring-Leaf				
14	46-5530	1	Hook-Control				
15	66-0160	1	Housing-Control				
16	46-7040	3	Screw-HWH				
17	3296-8	2	Nut-Lock				
18	66-0170	1	Washer-Nylon				
19	66-0190	1	Spring-Detent				
20	52-7430	1	Bar-Control				
21	46-5520	1	Lever-Traction				
22	3296-58	2	Nut-Flange				
23	17-9426	1	Screw				
24	66-0330	1	Spacer-Support				
26	95-4478	1	Rope-Guide				

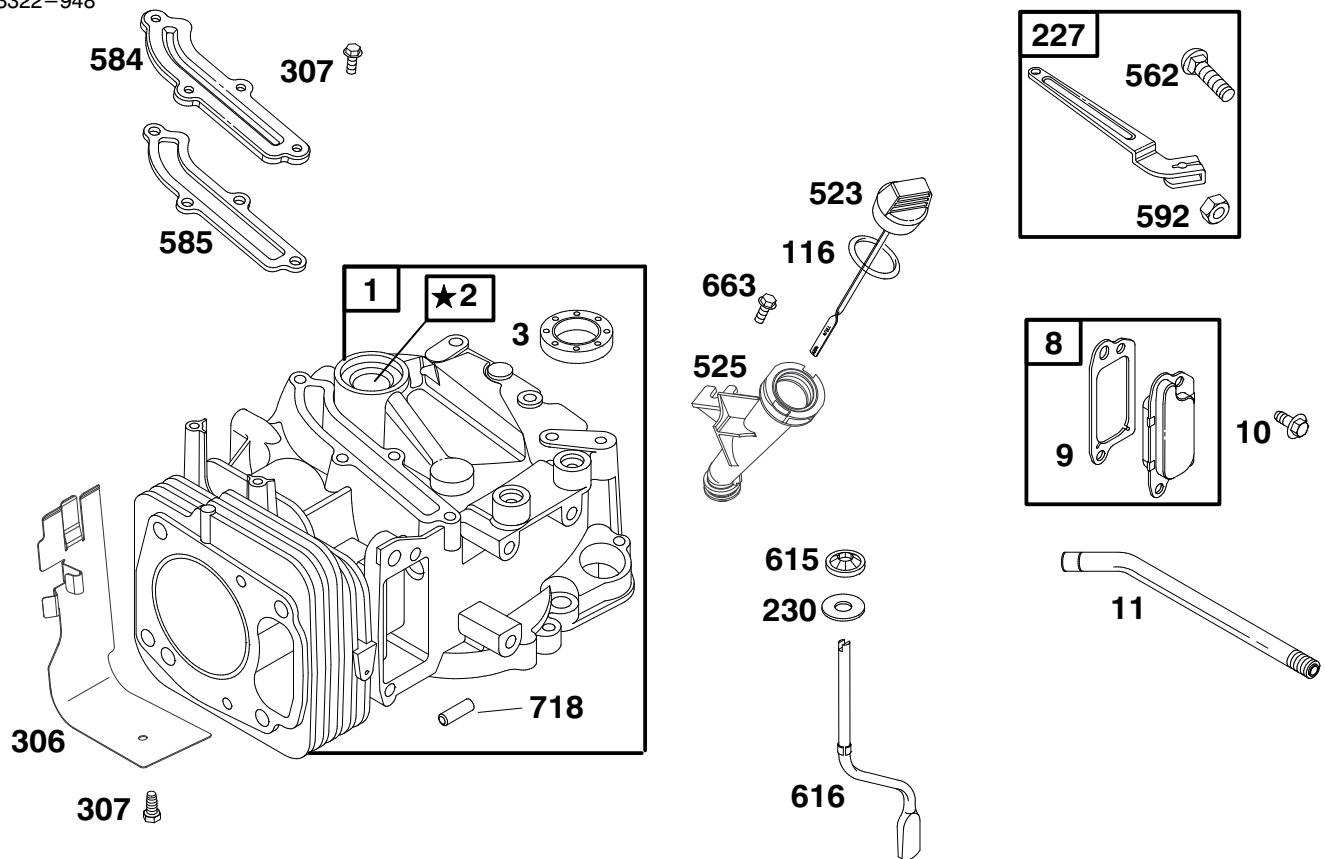 

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
1	99-0900	Cylinder Assembly	1
2	99-0911	Bushing	1
★3	99-0912	Seal - Oil	1
8	77-9260	Breather Assy.	1
†★9	99-0913	Gasket - Breather	1
10	99-0914	Screw - Hex.	1
11	99-0915	Tube - Breather	1
★116	99-0916	Seal - O Ring	1
227	99-0917	Lever Assembly - Gov.	1
230	99-0918	Washer - Gov. Crank	1
306	99-0919	Shield - Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	99-0920	Screw - Hex.	1
523	77-7260	Dipstick	1
525	99-0906	Tube - Oil Filler	1
562	99-0921	Screw - Hex.	1
584	99-0922	Baffle - Cylinder	1
★585	99-0923	Gasket - Breather	1
592	99-0924	Nut - Hex.	1
615	99-0925	Fastener	1
616	99-0926	Crank - Governor	1
663	99-0927	Screw - Hex.	1
718	99-0928	Dowel - Sleeve	1

★ Included in Gasket Set - Part No. 99-0902

 † Included in Valve Overhaul Gasket Set - Part No. 99-0904

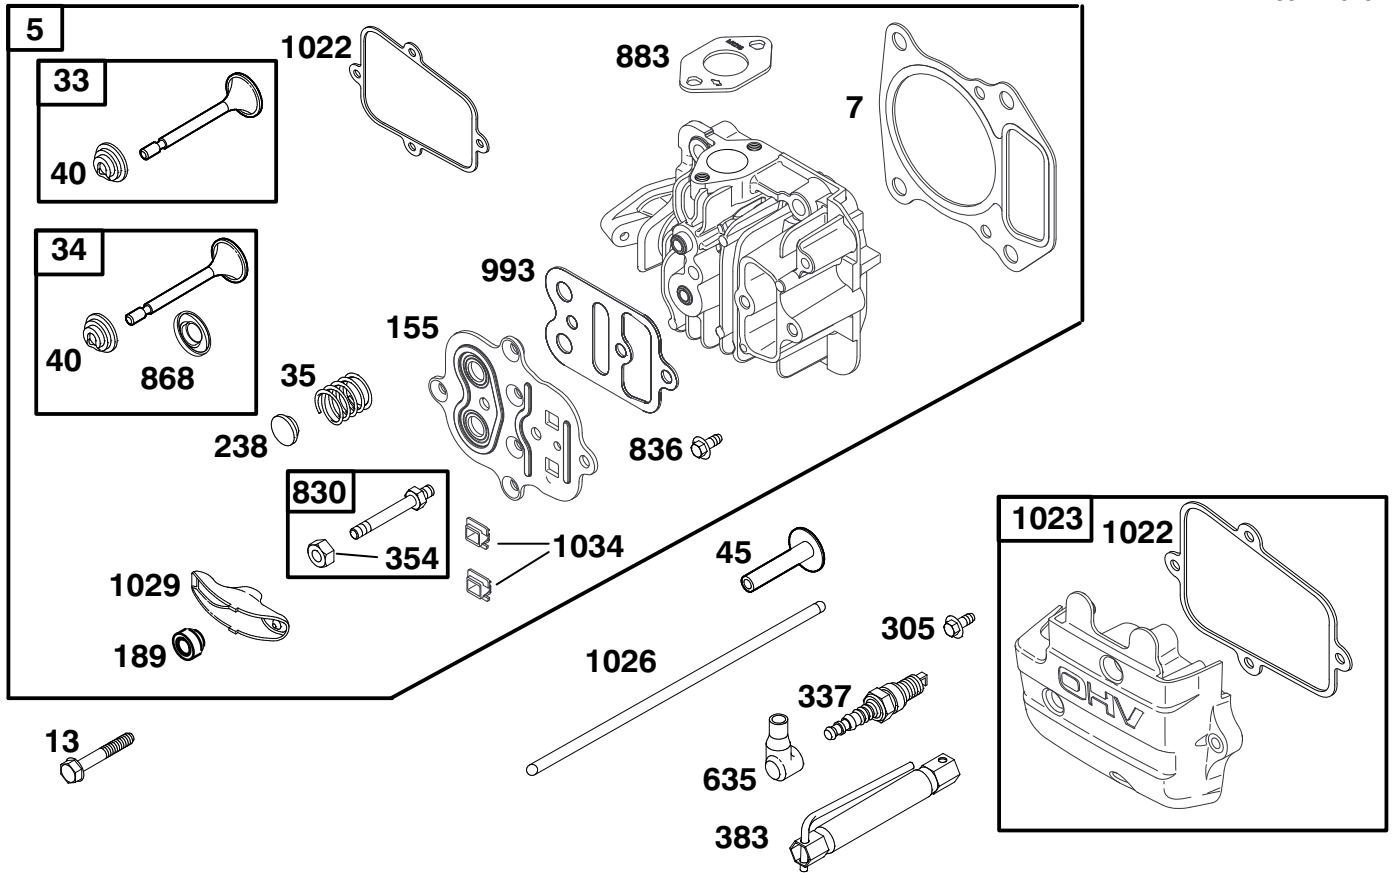

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
5	99-0929	Head - Cylinder	1
†★7	99-0930	Gasket - Cylinder Head	1
13	99-0931	Screw - Hex.	1
33	99-0932	Valve - Exhaust	1
34	99-0933	Valve - Intake	1
35	99-0934	Spring - Valve	1
40	99-0935	Retainer - Valve Spring	1
45	99-0936	Tappet - Valve	1
155	99-0938	Plate - Cylinder Head	1
189	99-0939	Ball - Rocker Arm	1
238	99-0940	Cap - Valve	1
305	99-0942	Screw - Hex.	1
337	77-7330	Plug - Spark	1
354		Nut - Hex. (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
383	99-0944	Wrench - Spark Plug	1
635	77-9190	Elbow - Spark Plug	1
830	99-0945	Stud - Rocker Arm	1
836	99-0941	Screw - Hex.	1
†★868	99-0946	Seal - Valve	1
†★883	99-0947	Gasket - Exhaust	1
†★993	99-6264	Gasket - Plate	1
†★1022	99-0907	Gasket - Rocker Cover	1
1023	98-9211	Cover - Rocker	1
1026	99-0949	Rod - Push	1
1029	99-0950	Arm - Rocker	1
1034	99-0951	Guide - Push Rod	1

★ Included in Gasket Set-Part No. 99-0902

 †Included in Valve Overhaul Gasket Set-Part No. 99-0904

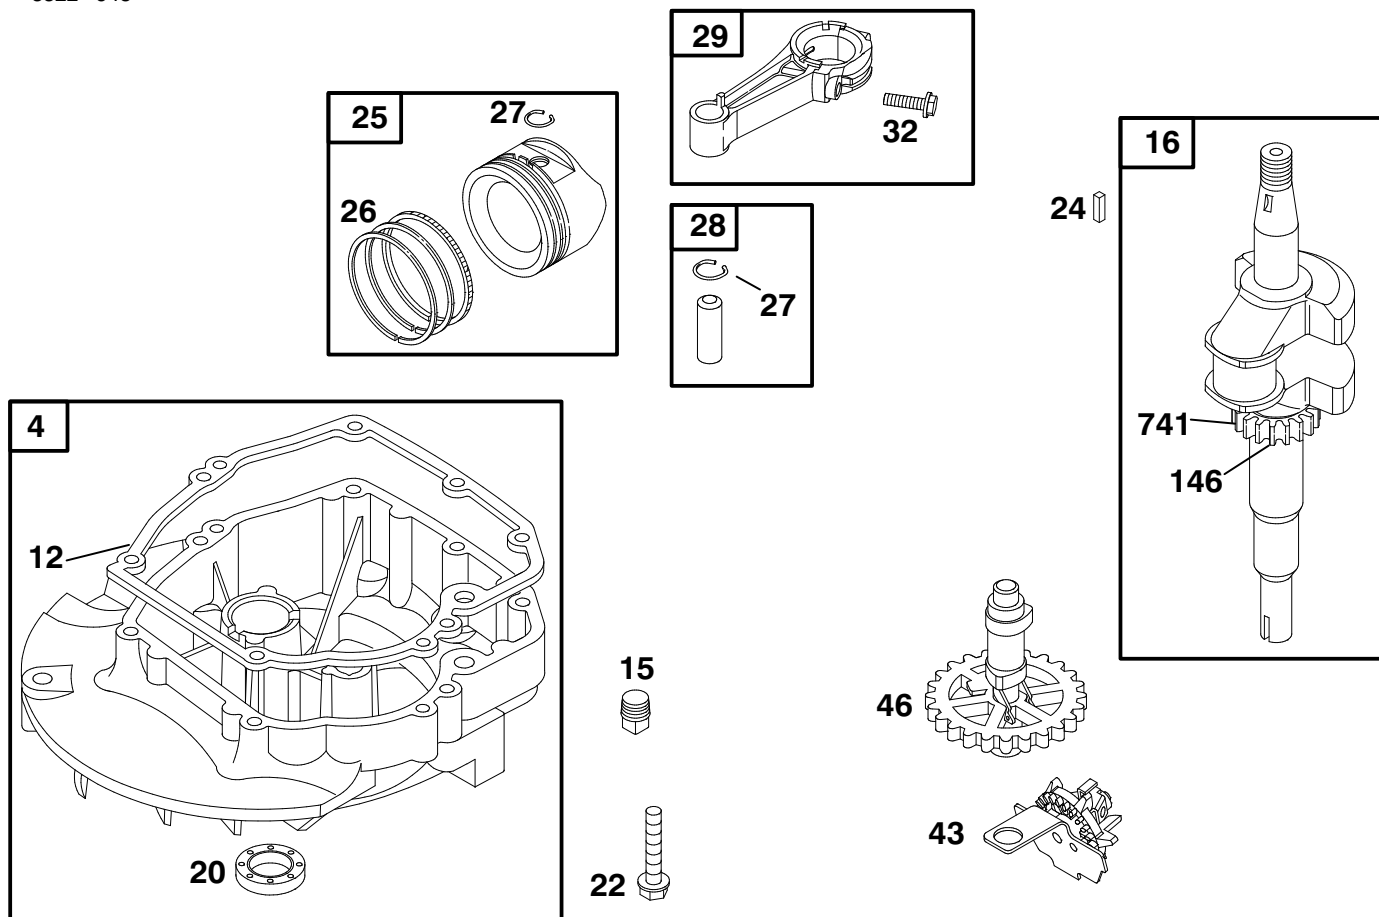


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
4	99-0952	Sump - Engine	1
★12	99-0953	Gasket - Crankcase	1
15	99-0954	Plug - Oil Drain	1
16	98-9213	Crankshaft	1
★20	77-7570	Seal - Oil	1
22	99-0956	Screw - Hex.	1
		Note: 99-1040	
		Screw - Hex.	
		(One (1) Used in Hole	1
		Nearest Breather.)	
24	77-8340	Key - Flywheel	1

Ref. No.	Part No.	Description	No. Used
25	99-0958	Piston Assy. (Standard)	1
26	99-0959	Ring Set (Standard)	1
27	99-0960	Lock - Piston Pin	1
28	99-0961	Pin - Piston (Standard)	1
29	99-0962	Rod - Connecting	1
32	99-0963	Screw - Connecting Rod	1
43	99-0964	Governor/Oil Slinger	1
46	99-0965	Gear - Cam	1
146	99-0966	Key - Timing	1
741	99-0967	Gear - Timing	1

 ★ Included in Gasket Set - Part No. 99-0902

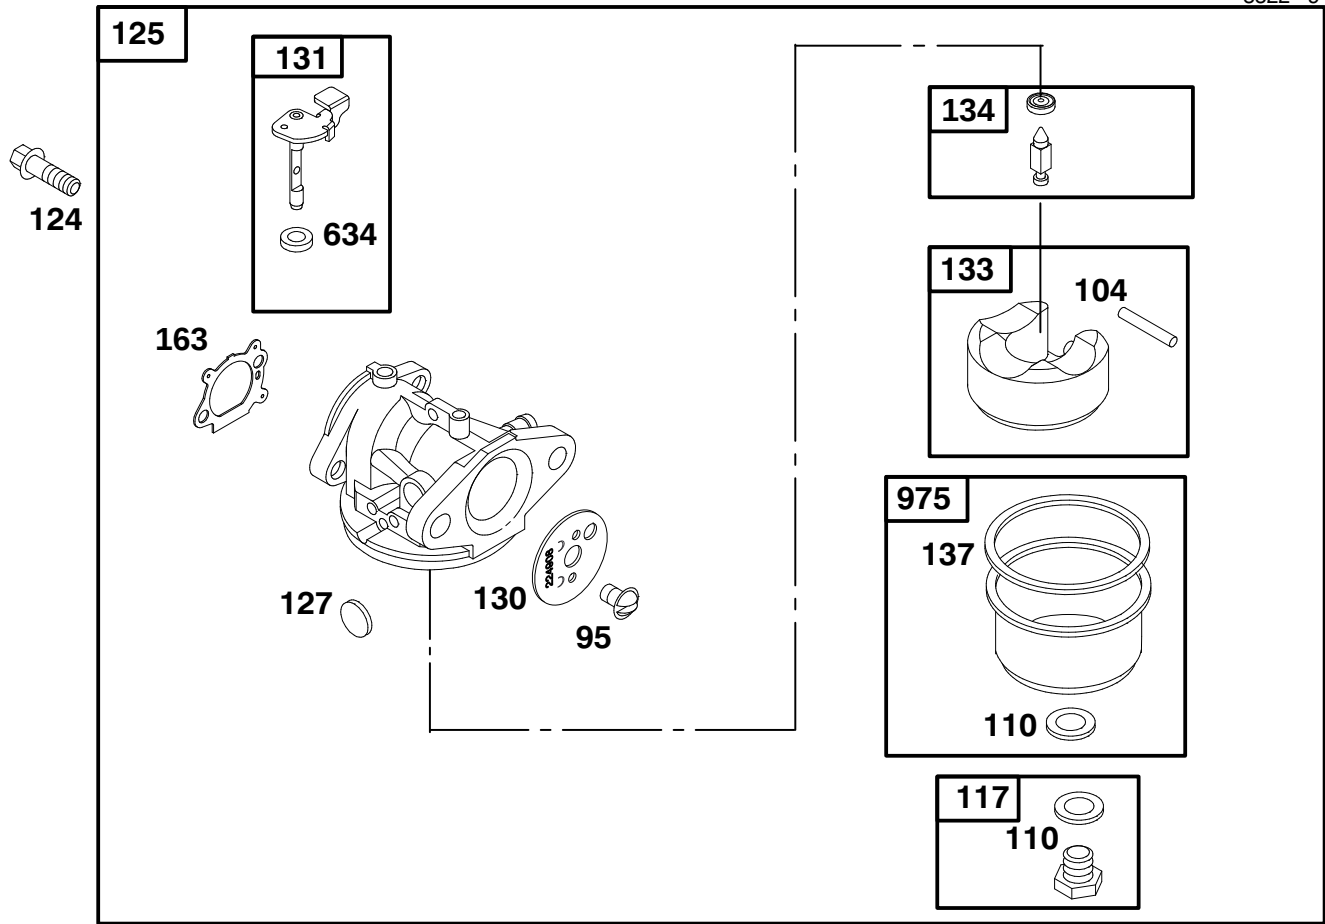

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
95	99-0969	Screw - Slotted	1
●104	99-0970	Pin - Float Hinge	1
◆110		Washer - Bowl (Sold in Kit Only).	1
117	99-0971	Jet - Main (Std.) Note: 99-1041 Jet - Main (High Altitude)	1
124	99-0972	Screw - Shoulder	1
125	99-0973	Carburetor	1
●127		Plug - Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	99-0974	Valve - Throttle	1
131	99-0975	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Needle	1
◆137		Gasket - Bowl (Sold in Kit Only).	1
◆◆★163	99-0976	Gasket - Air Cleaner	1
◆◆634		Washer - Foam (Sold in Kit Only).	1
975	99-0977	Bowl - Float	1

● Included in Carburetor Kit-Part No. 99-0901
◆ Included in Carburetor Gasket Set-Part No. 99-0903

 ★ Included in Gasket Set-Part No. 99-0902
† Included in Valve Overhaul Gasket Set-Part No. 99-0904

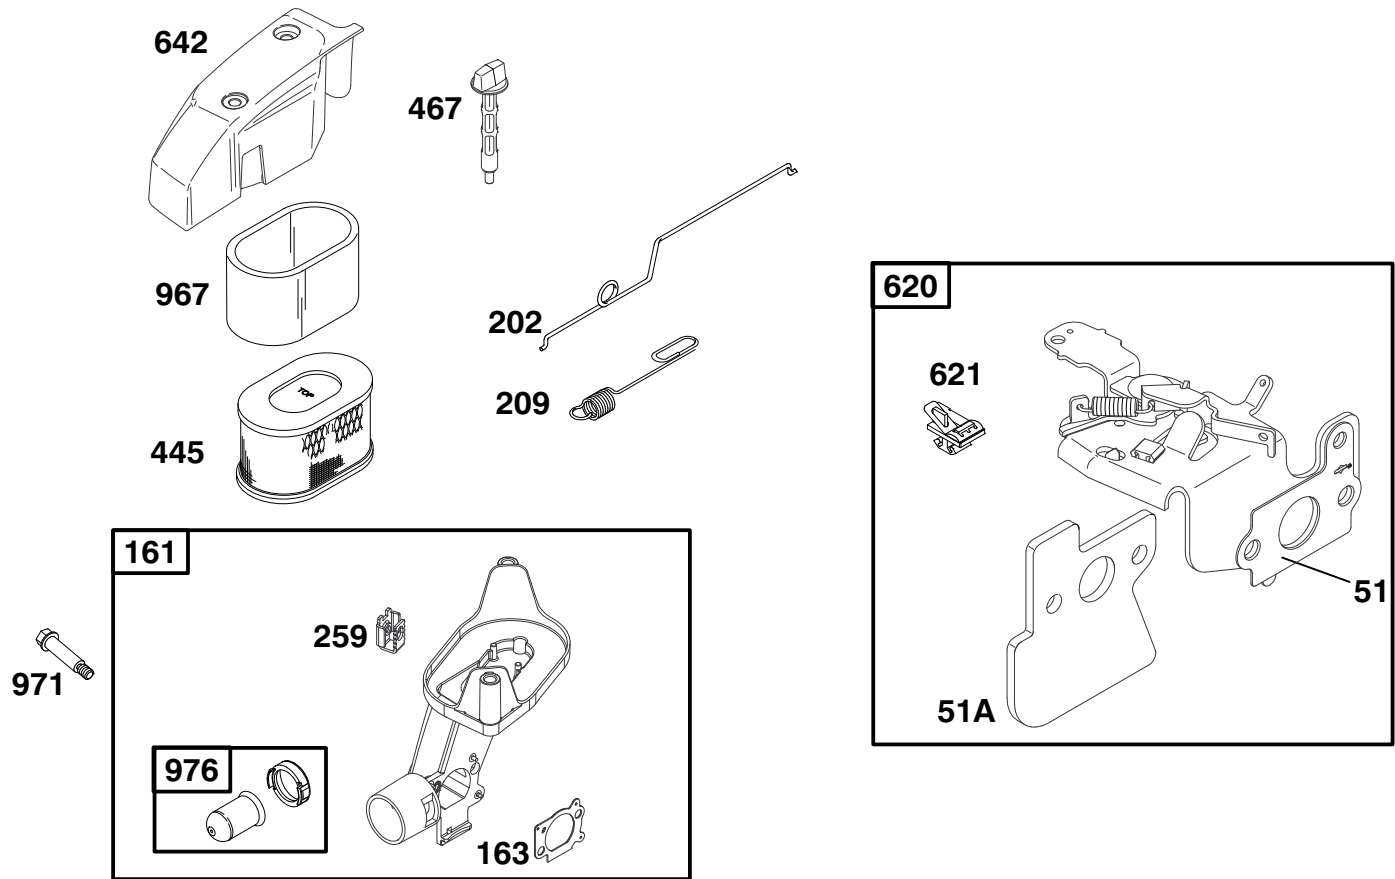

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
51	99-0968	Gasket - Intake	1
51A	99-0978	Gasket - Intake	1
161	99-0979	Base - Air Cleaner/Primer	1
◆◆★163	99-0976	Gasket - Air Cleaner	1
202	99-0981	Link - Governor	1
209	99-1042	Spring - Governor	1
259	99-0984	Grommet	1
445	98-9212	Filter - Air	1

Ref. No.	Part No.	Description	No. Used
467	98-9208	Knob	1
620	99-0908	Bracket - Control	1
621	99-0986	Switch - Stop	1
642	98-9207	Cover - Air Cleaner	1
967	99-0989	Filter - Air	1
971	99-0990	Screw - Hex.	1
976	99-0991	Primer - Carburetor	1

◆ Included in Carburetor Kit-Part No. 99-0901
◆ Included in Carburetor Gasket Set-Part No. 99-0903

 ★ Included in Gasket Set-Part No. 99-0902

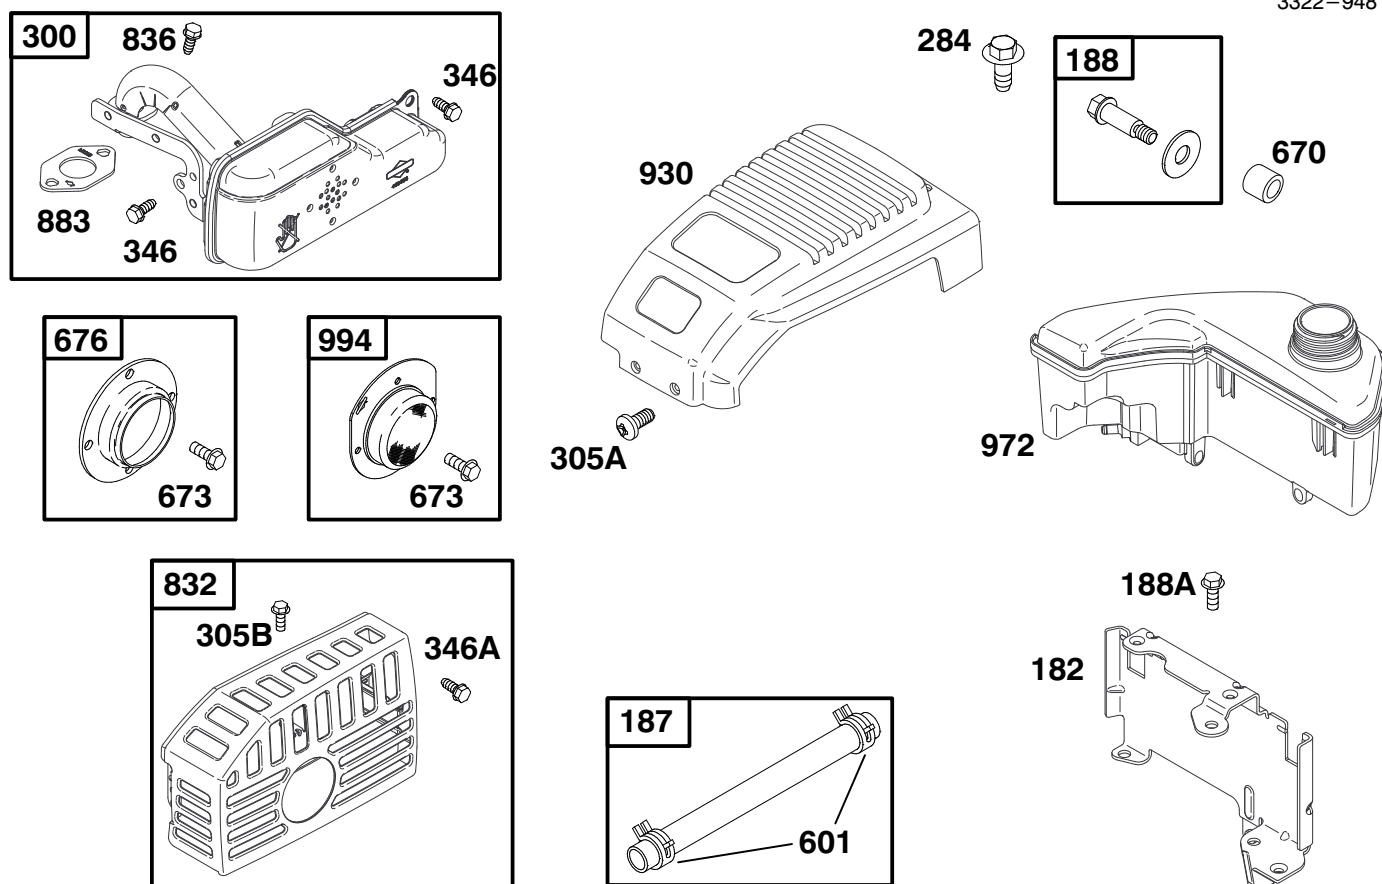









Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
182	98-9205	Bracket - Tank Mounting	1	601	99-0996	Clamp - Hose	1
187	99-0992	Line - Fuel (Cut to Required Length)	1	670	99-0997	Spacer - Fuel Tank	1
188	99-0993	Screw - Shoulder	1	673	99-1043	Screw - Hex.	1
188A	98-9202	Screw - Hex.	1	676	99-1044	Deflector - Muffler	1
284	99-0994	Screw - Hex.	1	832	98-9206	Guard - Muffler	1
300	99-0995	Muffler - Exhaust	1	836	99-0941	Screw - Hex.	1
305A	98-9204	Screw - Torx®	1	†★883	99-0947	Gasket - Exhaust	1
305B	99-0998	Screw - Hex.	1	930	98-9203	Guard - Rewind	1
346	99-1047	Screw - Hex.	1	972	99-1000	Tank - Fuel	1
346A	99-0999	Screw - Hex.	1	994	94-1681	Arrestor - Spark	1

★ Included in Gasket Set - Part No.
99-0902

        † Included in Valve Overhaul Gasket Set - Part No.
99-0904

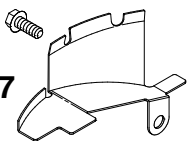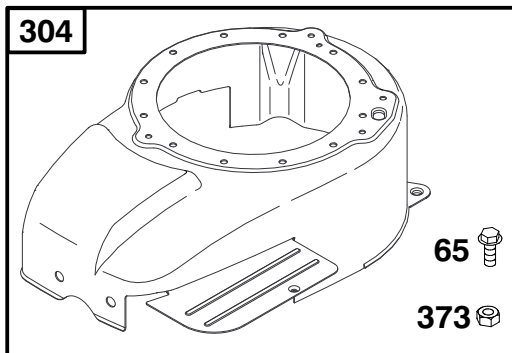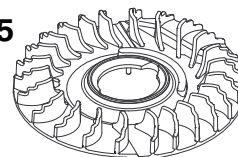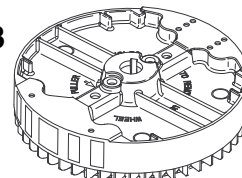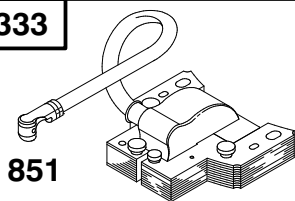
836**37****836****304****65****373****332****455****1005****23****363****356****356A****1036 LABEL KIT-EMISSION****333****851****334**

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
23	99-1001	Flywheel	1
37	99-0905	Guard - Flywheel	1
65	99-1002	Screw - Hex.	1
304	99-0909	Housing - Blower	1
332	99-1004	Nut - Flywheel	1
333	99-1005	Armature - Magneto	1
334	99-1006	Screw - Hex.	1
356	99-1007	Wire - Stop	1

Ref. No.	Part No.	Description	No. Used
356A	99-0910	Wire - Stop	1
363	99-1008	Puller - Flywheel	1
373	99-1009	Nut - Hex.	1
455	99-1010	Cup - Flywheel	1
836	99-0941	Screw - Hex.	1
851	77-9450	Terminal - Cable	1
1005	99-1015	Fan - Flywheel	1
1036	99-1016	Label Kit - Emission	1




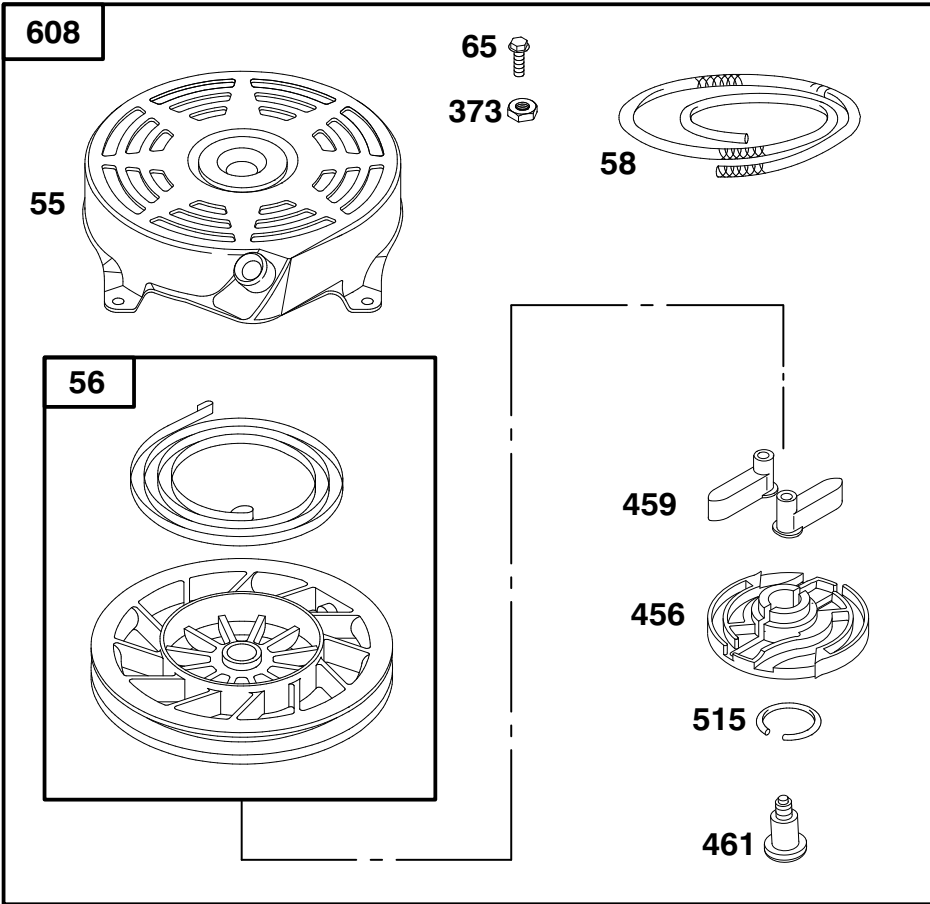 


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
55	99-1048	Housing - Rewind Starter	1
56	94-1657	Pulley - Starter	1
58	94-1668	Rope - Starter	1
59	77-7210	Insert - Starter Grip	1
60	77-8520	Grip - Starter Rope	1
65	99-1002	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut - Hex.	1
456	94-1659	Retainer - Spring	1
459	94-1654	Pawl - Ratchet	1
461	94-1600	Screw - Shoulder	1
515	94-1655	Spring - Friction	1
608	98-9215	Starter - Rewind	1

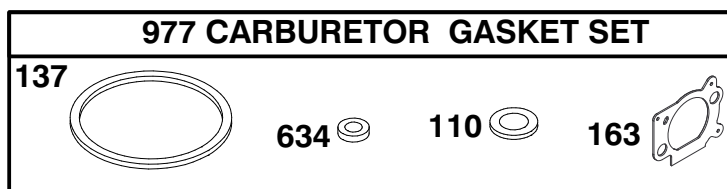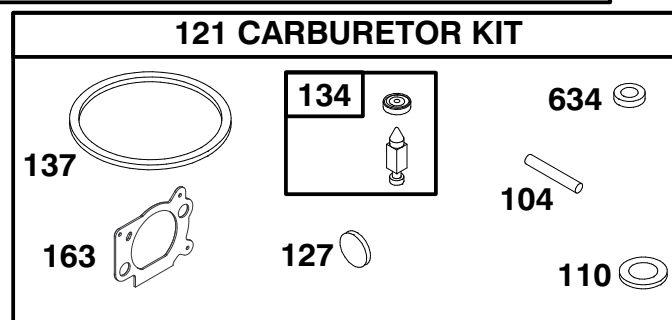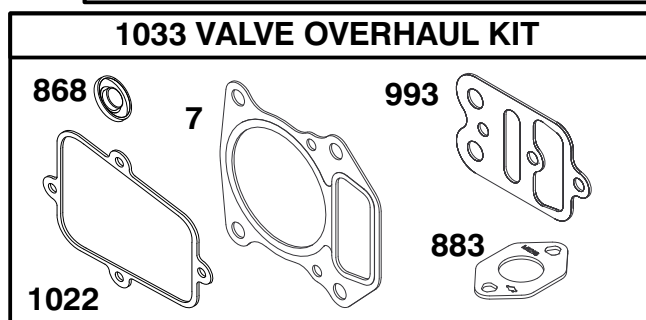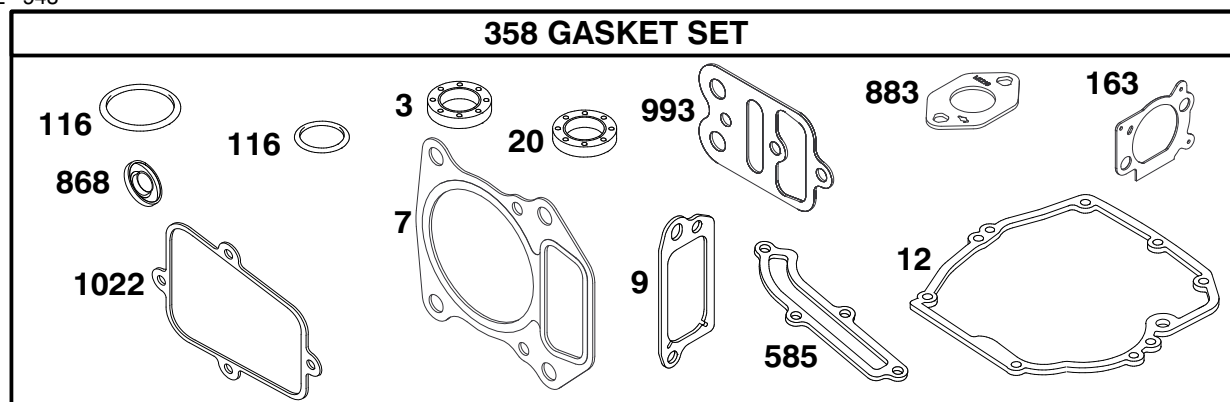    

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
★3	99-0912	Seal – Oil	1
†★7	99-0930	Gasket – Cylinder Head	1
†★9	99-0913	Gasket – Breather	1
★12	99-0953	Gasket – Crankcase	1
★20	77-7570	Seal – Oil	1
●104	99-0970	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	99-0916	Seal – O Ring	1
121	99-0901	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1
●134	77-8110	Valve – Needle	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●◆★163	99-0971	Gasket – Air Cleaner	1
358	99-0902	Gasket Set	1
★585	99-0923	Gasket – Breather	1
●◆634		Washer – Foam (Sold in Kit Only).	1
†★868	99-0946	Seal – Valve	1
†★883	99-0947	Gasket – Exhaust	1
977	99-0903	Gasket Set – Carburetor	1
†★993	99-0948	Gasket – Plate	1
†★1022	99-0907	Gasket – Rocker Cover	1
1033	99-0904	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit—Part No. 99-0901

◆ Included in Carburetor Gasket Set—Part No. 99-0903

★ Included in Gasket Set—Part No. 99-0902

† Included in Valve Overhaul Gasket Set—Part No. 99-0904

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603773	1	30	2	Nut—Lock
603773	6	21	2	Nut—Lock
11-0580	3	45	1	Screw—Thread Forming
16-1769	1	11	1	Housing—53cm
17-1569	1	1	1	Door—Discharge
17-9425	8	6	1	Screw—Handle
17-9426	8	23	1	Screw
19-4050	4	2	2	Knob
25-7740	1	14	2	Knob—Arm
25-7740	6	10	2	Knob—Arm
27-6250	1	22:1	4	Bushing
27-6250	6	2:1	4	Bushing
29-9570	7	21	1	Bushing—Yoke
36-4780	7	9	1	Washer—Thrust
36-4791	7	4	2	Washer—Thrust
36-8070	6	17	1	"V" Belt
38-7820	7	31	1	Bearing—Ball
40-1940	1	15	4	Washer
42-3190	3	28	2	Bolt—Blade
42-6890	3	32	1	Hub ASM
46-5460	8	7	1	Housing—Control
46-5510	8	11	1	Spring—Torsion
46-5520	8	21	1	Lever—Traction
46-5530	8	14	1	Hook—Control
46-5540	8	3	1	Lever—Cable
46-5550	8	10	1	Bushing
46-5590	8	8	1	Spacer
46-5650	3	43	1	Pulley—Idler
46-6431	8	5	1	Screw—Handle
46-7040	3	13	1	Screw—HWH
46-7040	8	16	3	Screw—HWH
48-2060	6	8:2	2	Bearing—Needle
49-2040	6	14	2	Screw—HH
49-2040	7	20	6	Screw—HH
52-3480	3	42	2	Damper—Vibration
52-7410	8	13	1	Spring—Leaf
52-7430	8	20	1	Bar—Control
54-9190	3	37	2	Nut—Lock
55-3760	7	3	1	15 T Pinion
55-3770	7	11	1	Gear 49t 1st Gear
55-3780	7	2	1	Pinion 20t 2nd Gear
55-3790	7	12	1	Gear 44t 2nd Gear
55-3800	7	1	1	Pinion 25t 3rd Gear
55-3810	7	13	1	Gear 39t 3rd Gear
57-6290	8	12	1	Pin—Insert
60-8710	7	18	1	Gearcase—Upper 3 Sp
60-8730	7	19	1	Cover—Gearcase
60-8750	7	5	2	Bushing
60-8770	7	8	1	Bushing—Output Shaft
60-8790	7	14	1	Sleeve—Gear
60-8800	7	17	1	Shaft—Intermediate
60-8810	7	22	1	Retainer—Shift—Fork
60-8850	7	32	1	Bushing—Output
60-8870	7	24	1	Yoke—Shift
60-8890	7	28	1	Gear—Pinnion
62-3890	3	31	1	Drum—Brake
62-4280	3	34	1	Spacer—Blade
62-6660	7	26	1	Spacer—Pulley
62-6673	7		1	Gear Case Complete
62-6673	6	18	1	Gearcase ASM
62-7560	3	26	1	Pulley—Driver
62-7700	3	35	1	Blade—21"

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-2720	6	3	4	Ring-Retaining
65-4710	6	7	2	Ring-Friction
65-4720	6	26	2	Spring-Compression
65-4730	6	22	2	Washer-Thrust
65-4740	6	4	4	Washer-Thrust
65-4750	6	25	2	Gear-Pinion
65-4760	6	24	2	Washer
65-4770	7	23	1	Shaft-Output
65-5042	6	8	2	Pivot Arm ASM
65-5070	3	2	1	Hub-Plate
65-5130	3	4	2	Hub-Pulley
65-5190	6	15	1	Bracket-Belt Guide
65-5200	3	33	1	Shield-BBC
65-5210	1	4	2	Screw-Thread Forming
65-5220	1	16	2	Screw-Thread Forming
65-5220	6	20	2	Screw-Thread Forming
65-5250	7	36	1	Clip-Spring
65-5280	3	24	1	Retainer-Spring
65-5300	3	27	1	Flywheel-BBC
65-5320	3	6	1	Rod-Spring
65-5330	3	39	1	Screen-BBC
65-5380	3	46	1	Washer-Flat
65-5440	6	9	2	Rear Spring Arm ASM
65-5660	1	9	1	Panel-Screen
65-5670	3	7	1	Bolt-Shoulder
65-5690	3	18	1	Bushing-Bellcrank
65-5700	3	19	1	Crank
65-5720	3	11	1	Bushing
65-5740	3	3	1	Belt-"V"
65-5780	3	1	1	Shoe-Brake
66-0020	1	12	1	Panel-Vertical
66-0030	3	16	1	Bracket-Cable Support
66-0090	3	10	1	Lever
66-0160	8	15	1	Housing-Control
66-0170	8	18	1	Washer-Nylon
66-0180	8	4	1	Rocker
66-0190	8	19	1	Spring-Detent
66-0330	8	24	1	Spacer-Support
66-0350	3	9	1	Bushing-Flange
66-0360	6	19	2	Cap-End
66-0540	1	18	2	Spring Arm ASM
66-0560	1	21	2	Screw-Shoulder
66-0570	2	9	1	Guide-Belt
66-0580	1	20	2	Arm-Pivot
66-6040	6	6	1	Key-Locking RH
66-6050	6	5	1	Key-Rocking LH
70-9760	6	8:6	2	Bushing
71-3630	3	23	1	Spring-Compression
71-3640	3	8	1	Spring-Compression
71-3650	3	21	1	Link-Control
71-3660	3	20	1	Pin-Spring
71-7900	1	2	1	Cap-Bolt LH
71-7910	1	5	1	Cap-Bolt RH
71-8090	4	1	1	Mount-Handle LH
71-8100	4	24	1	Mount-Handle RH
71-8580	1	28	2	Spacer-Door
71-9470	5	3	1	Door-Bag
71-9480	5	2	1	Handle-Door
71-9640	1	19	1	Ramp-Discharge
71-9650	1	25	1	Access-Cover
71-9680	5	5	1	Bag-Grass
71-9840	1	29	2	Spring-Door

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
71-9870	1	11:1	1	Decal-Deck 53cm
71-9872	4	17:1	1	Decal-Panel
71-9920	1	24	1	Cover-Top
71-9930	5	4	1	Frame
74-1660	6	27	2	Cover-Wheel
74-1671	6	28	2	Spacer-Cover
76-0760	7	38	2	Key-Shift
76-0770	7	34	1	Collar-Shift
76-0780	7	37	1	Sleeve-Shift Key
76-0920	6	13	1	Lever-Shift
76-2930	6	12	1	Retainer-Cable
80-2770	3	36	1	Cup-Anti Scalp
92-1057	1	23	2	Bolt-Shoulder
92-1057	6	1	2	Bolt-Shoulder
92-2289	2	3	1	Plate-Logo
92-9592	1	22	2	Wheel & Tire ASM
92-9665	4	7	4	Screw-Phillips
93-4105	1	1:1	1	Decal-Danger
93-6629	8	1	1	ASM-Cable
93-6632	4	23	1	Control-Speed
93-6633	8	2	1	Cable-Traction
93-7198	2	1	1	Cap ASM
93-8470	2	7	1	Screw-Clamp
94-4910	4	16	1	Handle-Dipped
95-4478	8	26	1	Rope-Guide
98-1512	4	19	1	Control-Throttle
98-2004	2	2	1	Decal-Engine
98-2038	4	17:2	1	Decal-Instruction
98-9223	4	17	1	Panel-Control
99-8136	6	2	2	Wheel-ASM
100-1176	7	27	2	Pulley-Half
2210-249	2	8	1	Clamp-Casing
2210-316	2	12	1	Rope-Stop
237-153	6	23	2	O-Ring
253-151	3	12	1	Seal-Ring
302-56	6	8:4	2	Fitting-Grease
321-13	3	44	2	Screw-HH
322-21	3	22	1	Screw-HH
322-29	1	3	2	Screw-HH
3256-23	3	17	2	Washer-Flat
3256-24	7	30	1	Washer-Flat
3257-17	3	25	1	Key-Woodruff
3272-5	6	16	1	Pin-Cotter
3290-378	4	3	5	Tie-Cable
3296-5	7	29	1	Nut-Lock
3296-6	1	17	2	Nut-Lock
3296-8	8	17	2	Nut-Lock
3296-33	3	38	1	Nut-Lock
3296-42	3	5	2	Nut-Lock
3296-58	8	22	2	Nut-Flange
32121-9	8	9	1	Pin-Roll
32121-120	7	15	1	Pin-Coil
32128-44	3	15	1	Nut-Flange
32144-70	1	8	6	Screw-TAP
32144-70	2	11	2	Screw-TAP
32144-70	3	14	5	Screw-TAP
32144-70	6	11	5	Screw-TAP
32144-102	2	10	3	Screw
32144-111	5	1	5	Screw - PPH

*Not Illustrated

[illegible]