 




MODEL NO. 07222-90001 & UP

PARTS CATALOG

WORKMAN® 3310D HEAVY INDUSTRIAL

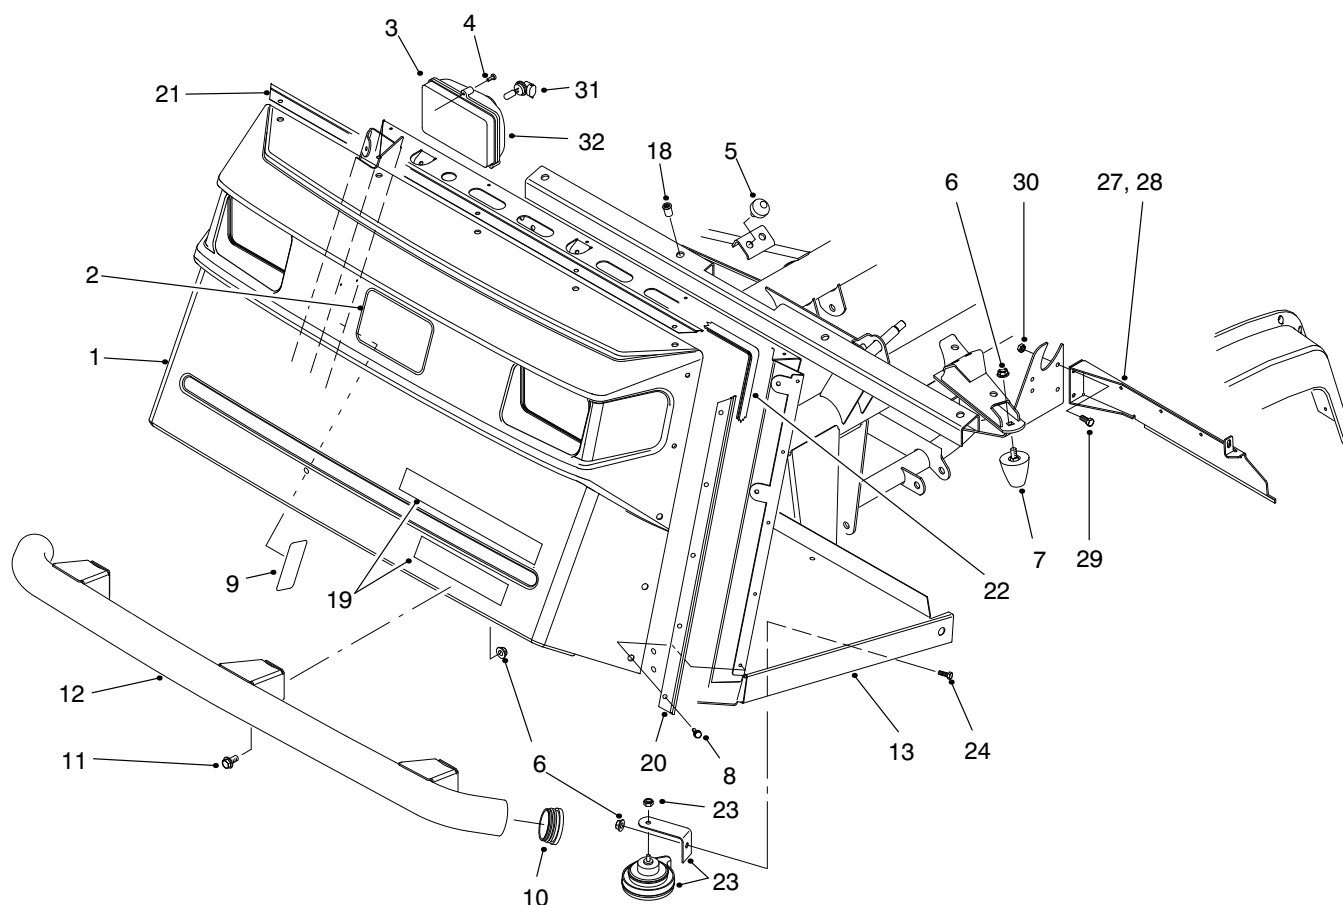


T-2995

FRONT BUMPER & HOOD ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-2979	Hood	1	18	32148-7	Nut-Clinch	8
2	62-5550	Decal-TORO	1	19	98-2964	Decal-Workman 3310D	1
3	87-2120	Asm-Headlight (Incl. Ref. #31-32)	2	20	87-8120	Bracket-Trim Side	2
4	32104-88	Screw	6	21	87-8130	Bracket-Trim Top	1
5	87-2440	Bumper	2	22	87-8160	Trim	1
6	3290-357	Nut-Flange Lock	9	23	116749	Asm-Horn	1
7	26-0071	Bumper	2	24	323-4	Screw-HH	1
8	87-6620	Screw	15	27	94-3838	Bracket-Mudflap LH	1
9	87-9500	Decal-Load	1	*28	94-3839	Bracket-Mudflap RH	1
10	2410-42	Cap-Front Bumper	2	29	321-4	Screw-HH	4
11	3234-1	Screw-HFH	6	30	32128-33	Nut-Lock	4
12	87-4070	Bumper-Front	1	31	87-6320	Bulb-Headlight	2
13	94-5240	Asm-Operators Platform (Incl. Ref. #18, #42 Page 8, #40-42 Page 12, #36 Page 26 & #1 Page 28)	1	32	87-6330	Lens-Headlight	2

 *Not Illustrated

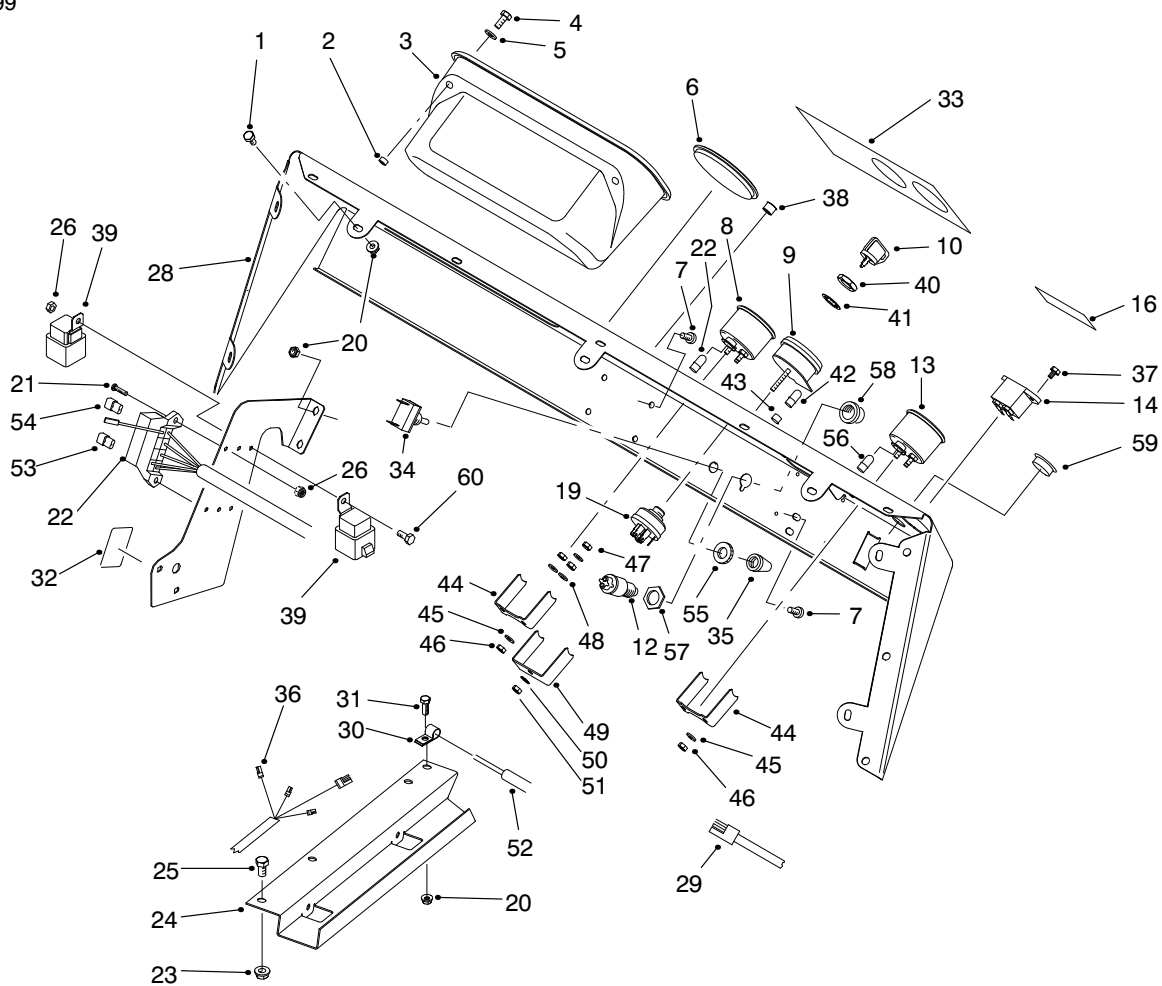


T-2996-3

CONTROL PANEL ASM

Ref. No.	Part No.	Description	No. Used
1	321-2	Screw-HH	7
2	32148-6	Insert-Threaded	2
3	87-3780	Box-Glove	1
4	321-3	Screw-HH	2
5	3256-22	Washer-Flat	2
6	2410-35	Plug	1
7	3274-31	Screw-Button Hd.	4
8	87-5590	Asm-Temperature Gauge (Incl. Ref. #44-48)	1
9	93-7053	Asm-Warning Light (Incl. Ref. #42-43 & 49-51)	1
10	63-8360	Key-Ignition	1
12	18-2830	Asm-Horn Switch (Incl. Ref. #12 & 57)	1
13	87-5580	Asm-Fuel Gauge (Incl. Ref. #44-48)	1
14	75-6820	Hourmeter	1
16	94-5272	Decal-Warning	1
19	27-2360	Asm-Ignition Switch (Incl. Ref. #40-41)	1
20	32128-33	Nut-Flange	12
21	3250-13	Screw	2
22	99-1084	Asm-Front Wire Harness (Incl. Ref. #56)	1
23	32128-20	Nut-Flange	3
24	93-7094	Cover-Wire Harness	1

Ref. No.	Part No.	Description	No. Used
25	322-2	Screw-HH	3
26	3296-2	Nut-Lock	3
28	87-8550	Asm-Control Panel (Incl. Ref. #16 & 33)	1
29	99-1083	Harness-Wire Front LH	1
30	2412-89	Clamp-R	1
31	321-4	Screw-HH	1
32	87-6670	Decal-Fuse	1
33	87-8530	Decal-Dash	1
34	20-7150	Asm-Toggle Switch (Incl. Ref. #55)	1
35	218-473	Boot-Switch	1
36	99-1082	Harness-Wire Rear	1
37	32144-18	Screw-HH	2
38	2410-64	Plug-Hole	1
39	70-1480	Relay-Sealed	2
40	218-446	Nut-Hex.	1
41	218-447	Washer-Lock	1
42	219-17	Bulb-Warning Light	4
43	87-6270	Asm-Socket & Bulb (Incl. Ref. #42)	4
44		Clamp-Gauge	2
45	3253-15	Washer-Lock	6
46	3217-25	Nut-Hex.	6
47	3217-29	Nut-Jam	6
48	3253-19	Washer-Lock	6

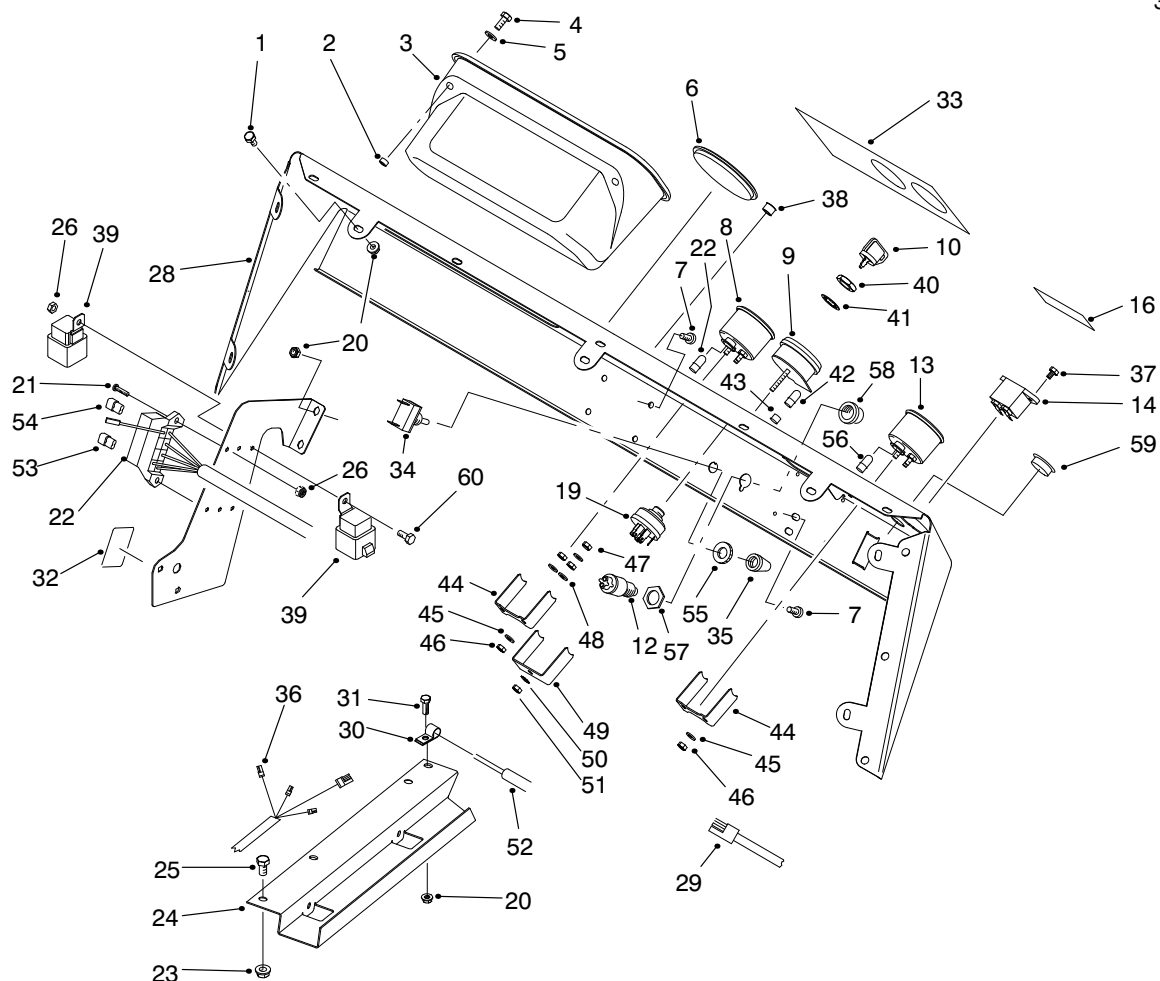 


T-2996-3


CONTROL PANEL ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49		Clamp-Light	1	55		Nut-Lock	1
50	3254-1	Washer-Lock	1	56	218-600	Bulb	2
51	3217-26	Nut-Hex.	1	57		Nut-Hex.	1
52	94-3837	Cable-Clutch	1	58	18-2830	Button-Horn	1
53	218-574	Fuse-7.5 Amp	2	59	99-1087	Plug-Hole, Dash	1
54	218-578	Fuse-10 Amp	1	60	32105-8	Screw-SHH	1

*Not Illustrated

  ELECTRICAL SCHEMATIC

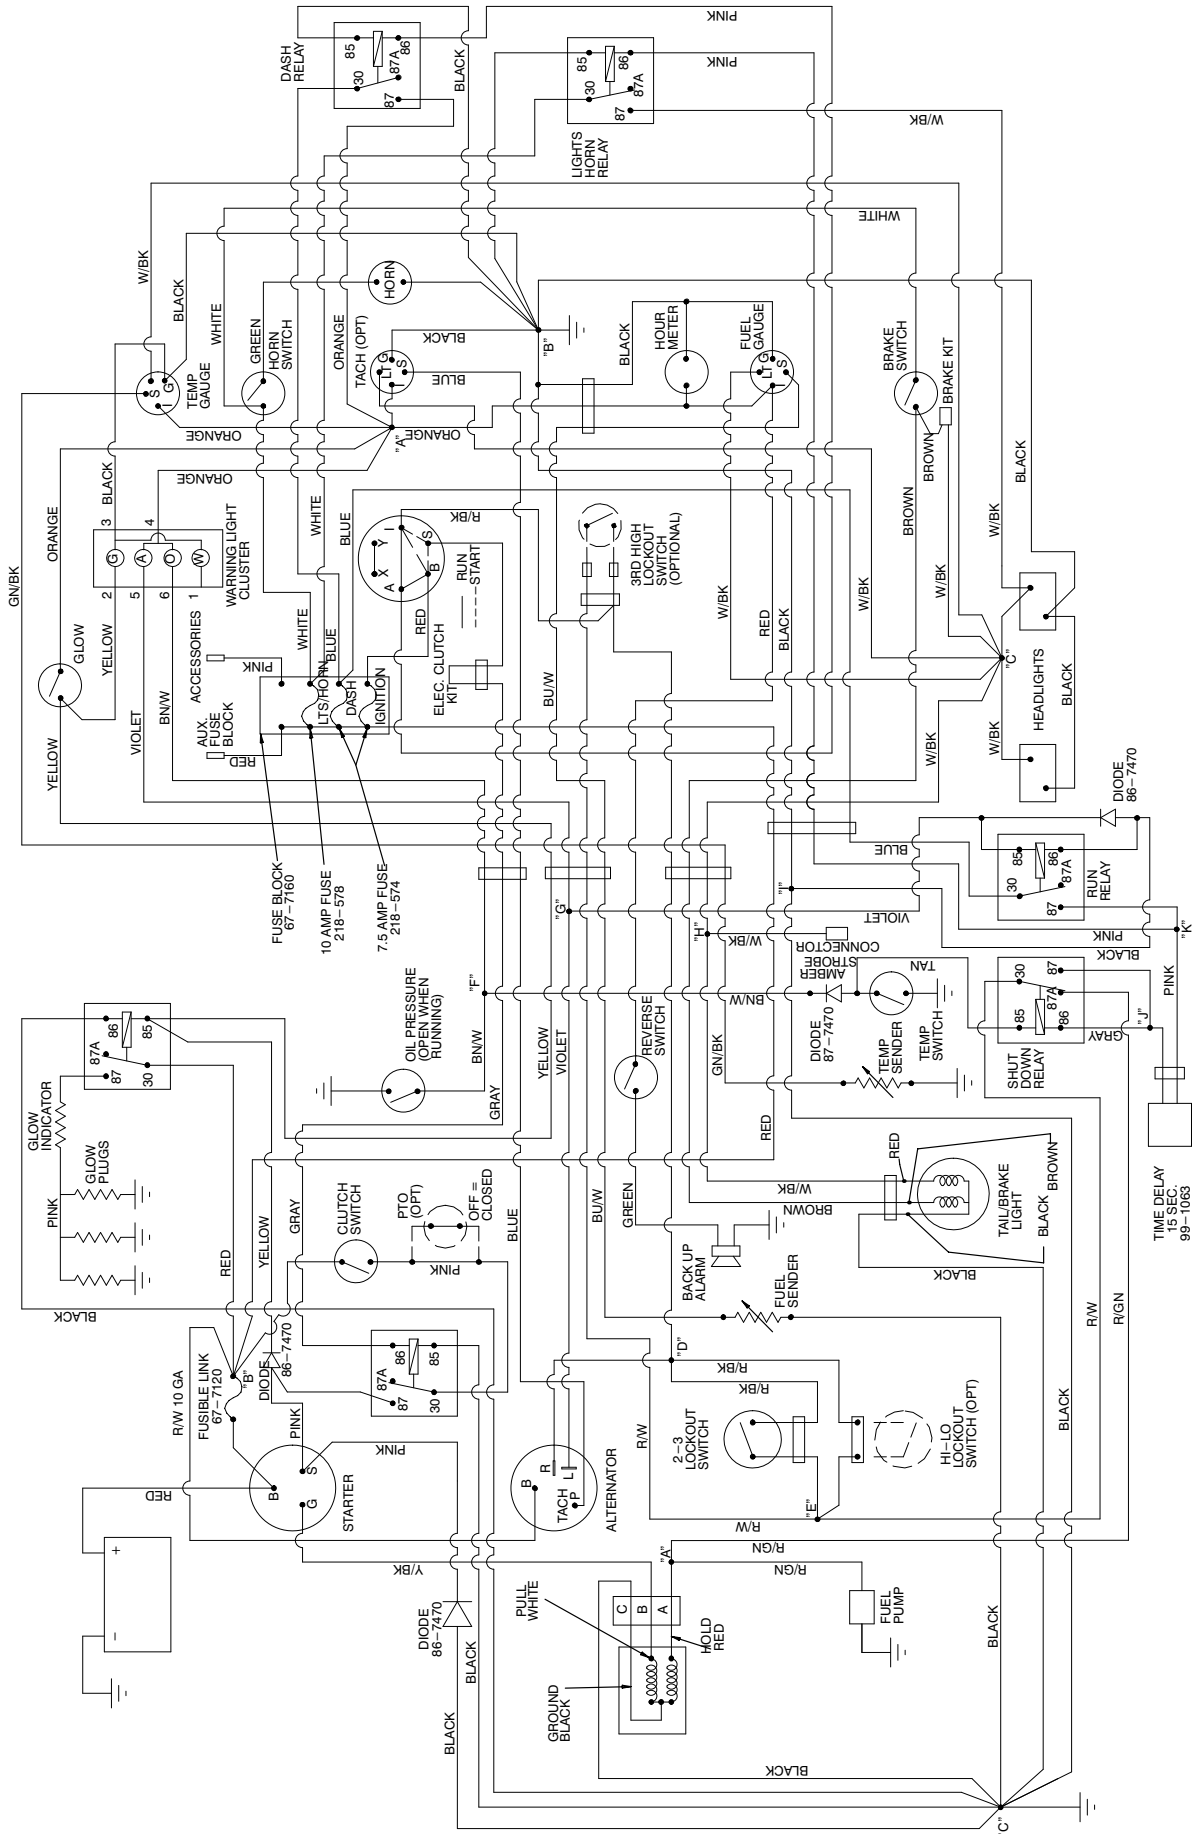

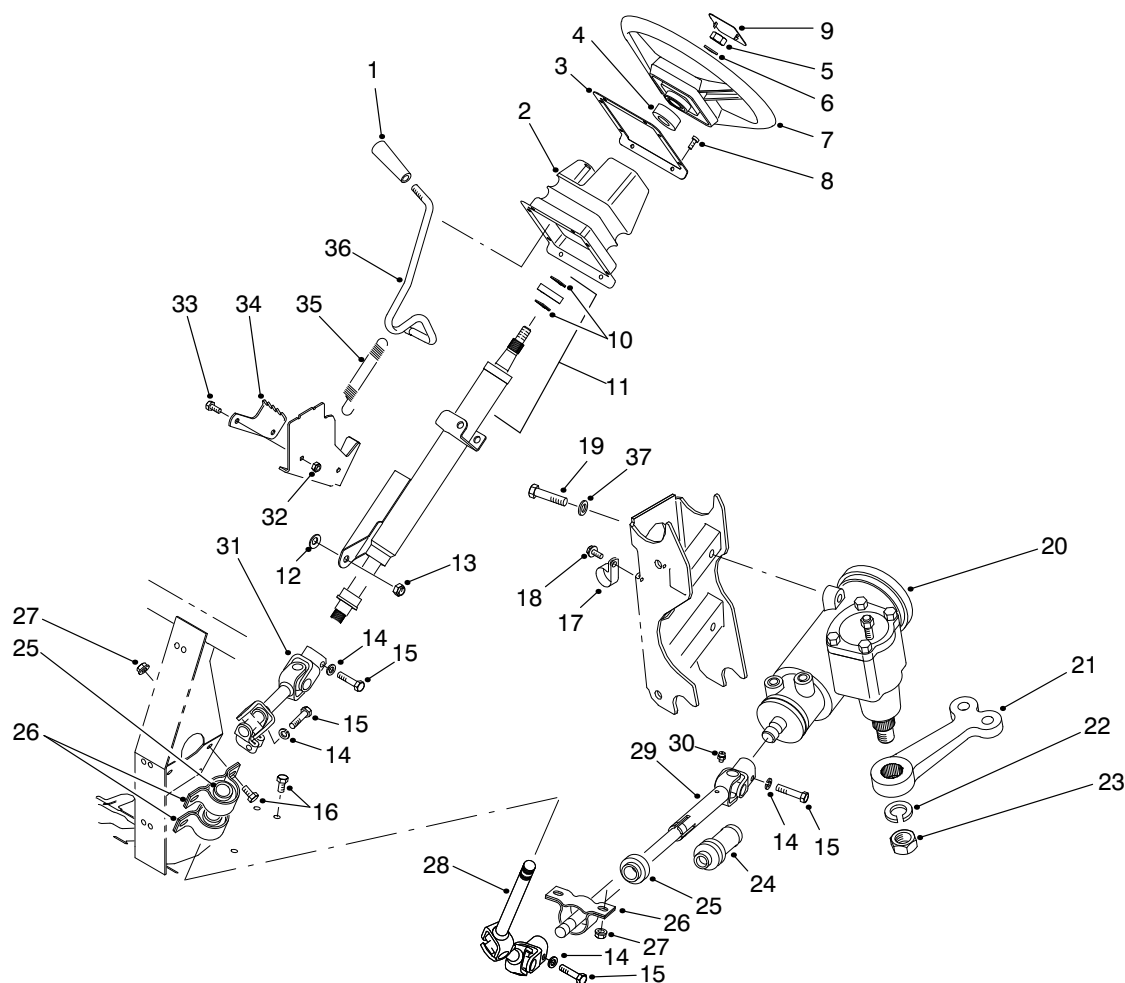


T-1584-1

STEERING LINKAGE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1	21	87-0370	Arm-Pitman	1
2	87-3460	Boot-Tilt Steering	1	22	39-7420	Washer-Lock	1
3	87-4720	Plate-Steering Boot	1	23	39-7440	Nut-Lock	1
4	21-9260	Spacer	1	24	92-4157	Boot-Steering Shaft	1
5	3277-1	Nut-Hex.	1	25	87-2280	Bearing	3
6	48-8070	Washer-Flat	1	26	87-3250	Mount-Bearing	3
7	87-3820	Wheel-Steering	1	27	32128-20	Nut-Flange	6
8	32144-116	Screw-PH	8	28	92-4155	Asm-Slip Joint, Upper	1
9	87-3750	Cover-Steering Wheel	1	29	92-4156	Asm-Slip Joint, Lower (Incl. Ref. #24 & 30)	1
10	43-6550	Ring-Retaining	2	30	302-5	Fitting-Grease	1
11	92-4153	Asm-Steering Column (Incl. Ref. #10)	1	31	92-4154	Asm-Universal Joint	1
12	3290-455	Washer	1	32	3296-42	Nut-Lock	2
13	3296-59	Nut-Lock	1	33	321-3	Screw-HH	2
14	3253-4	Washer-Lock	4	34	87-3610	Bracket-Detent	1
15	48-7740	Screw-HH	4	35	65-5360	Spring-Extension	1
16	322-2	Screw-HH	6	36	87-3130	Lever-Tilt Steering	1
17	2412-105	Clamp-R	2	37	87-7480	Washer-Flat	3
18	32144-10	Screw-Self Tapping	2	*	87-3100	Asm-Lower Shaft (Incl. Ref. #24 & 28-30)	1
19	93-7145	Screw-HH	3	*	87-3120	Steering Column & Shaft (Incl. Ref. #10, 11 & 31)	1
20	87-1500	Asm-Steering Gear (Incl. Ref. #22 & 23)	1				

 *Not Illustrated

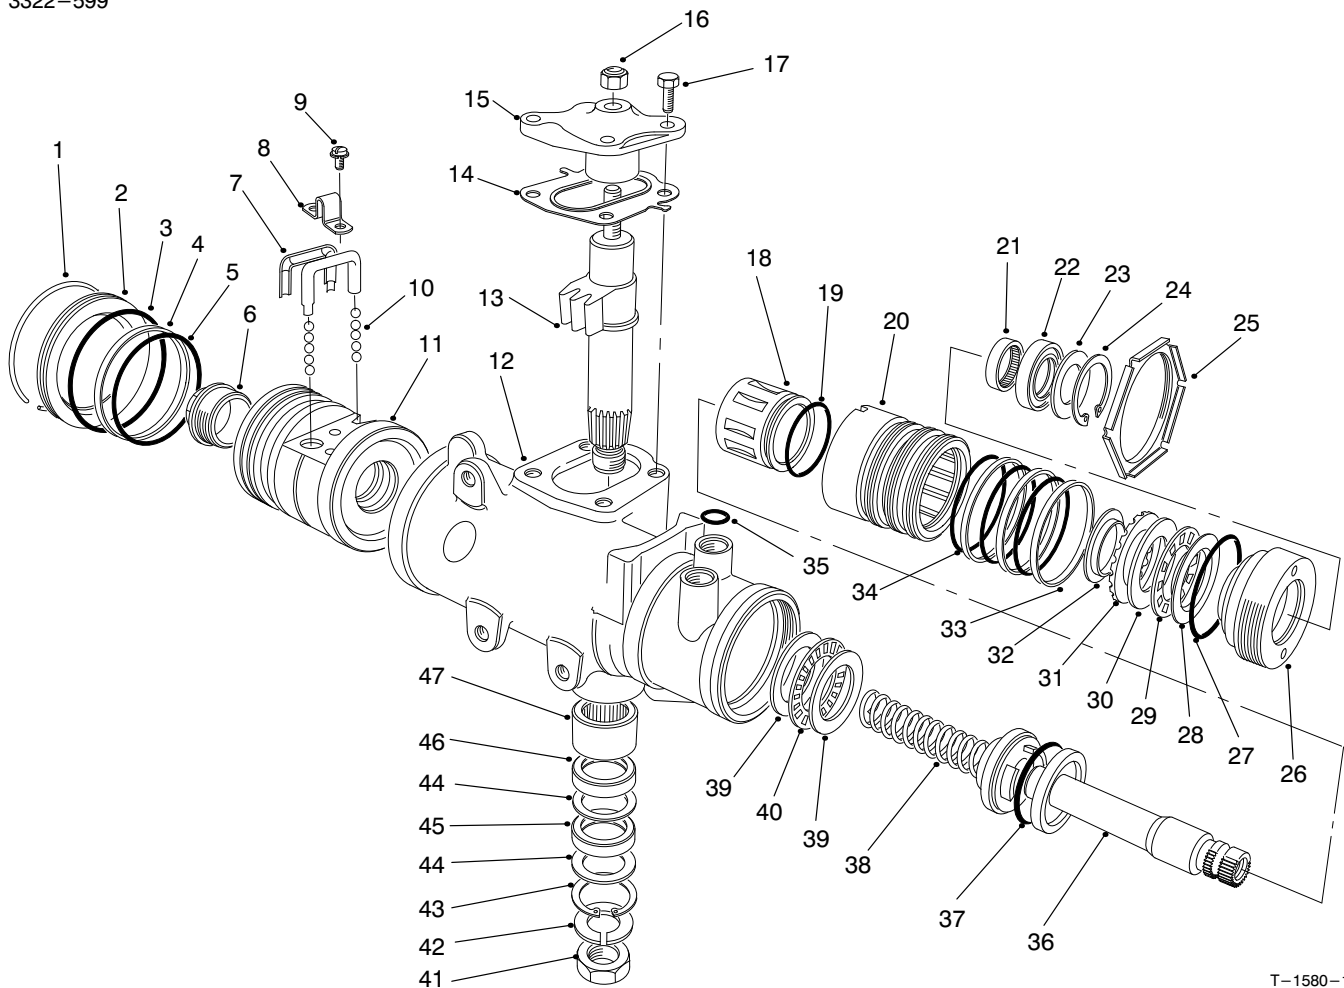


T-1580-1

STEERING GEAR ASM NO. 87-1500

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2	92-4165	Plug-Housing End	1
3		Seal-Housing End Plug	1
4		Ring-Rack Piston	1
5		O-Ring, Rack Piston	1
6	18-4340	Plug-Rack Piston End	1
7	92-4168	Return-Guide Ball	2
8	18-4270	Clamp-Ball Return Guide	1
9	18-4260	Asm-Screw/Lockwasher	2
10	18-5190	Kit-Ball, Recirculating (Consists of 12 each of .2806 Dia. & .2812 Dia. Chrome Balls)	1
11		Nut-Rack Piston	1
12		Housing-Steering Gear	1
13		Gear-Pitman Shaft	1
14	28-8280	Kit-Seal, Side Cover (Incl. Ref. #17)	1
15		Cover-Housing Side	1
16	28-8220	Nut-Lash Adjuster	1
17	28-8210	Bolt-FHH	4
18		Spool Valve	1
19		O-Ring, Spool Valve	1
20		Valve Body	1
21	92-4169	Bearing-Needle	1
22		Seal-Stub Shaft	1
23		Seal-Stub Shaft Dust	1

Ref. No.	Part No.	Description	No. Used
24		Ring-Retaining	1
25	92-4159	Nut-Adjuster Plug Lock	1
26		Plug-Adjuster	1
27	28-8200	O-Ring	1
28		Race-Upper Bearing	1
29		Bearing-Roller, Thrust	1
30		Race-Thrust Bearing	1
31		Spacer-Thrust Bearing	1
32		Retainer-Bearing	1
33		Ring-Valve Body	3
34		O-Ring	3
35	39-7310	O-Ring	3
36		Shaft-Stub	1
37		O-Ring	1
38		Worm-Steering	1
39		Race-Thrust Bearing	2
40		Bearing-Roller, Thrust	1
41	39-7440	Nut-Pitman Arm	1
42	39-7420	Washer-Lock	1
43		Ring-Retaining	1
44		Washer-Seal, Backup	2
45		Seal-Pitman Shaft	1
46		Seal-Pitman Shaft	1
47	92-4170	Bearing-Pitman Shaft	1
*	92-4161	Asm-Cover Service Housing Side (Incl. Ref. #14-17)	1

 *Not Illustrated

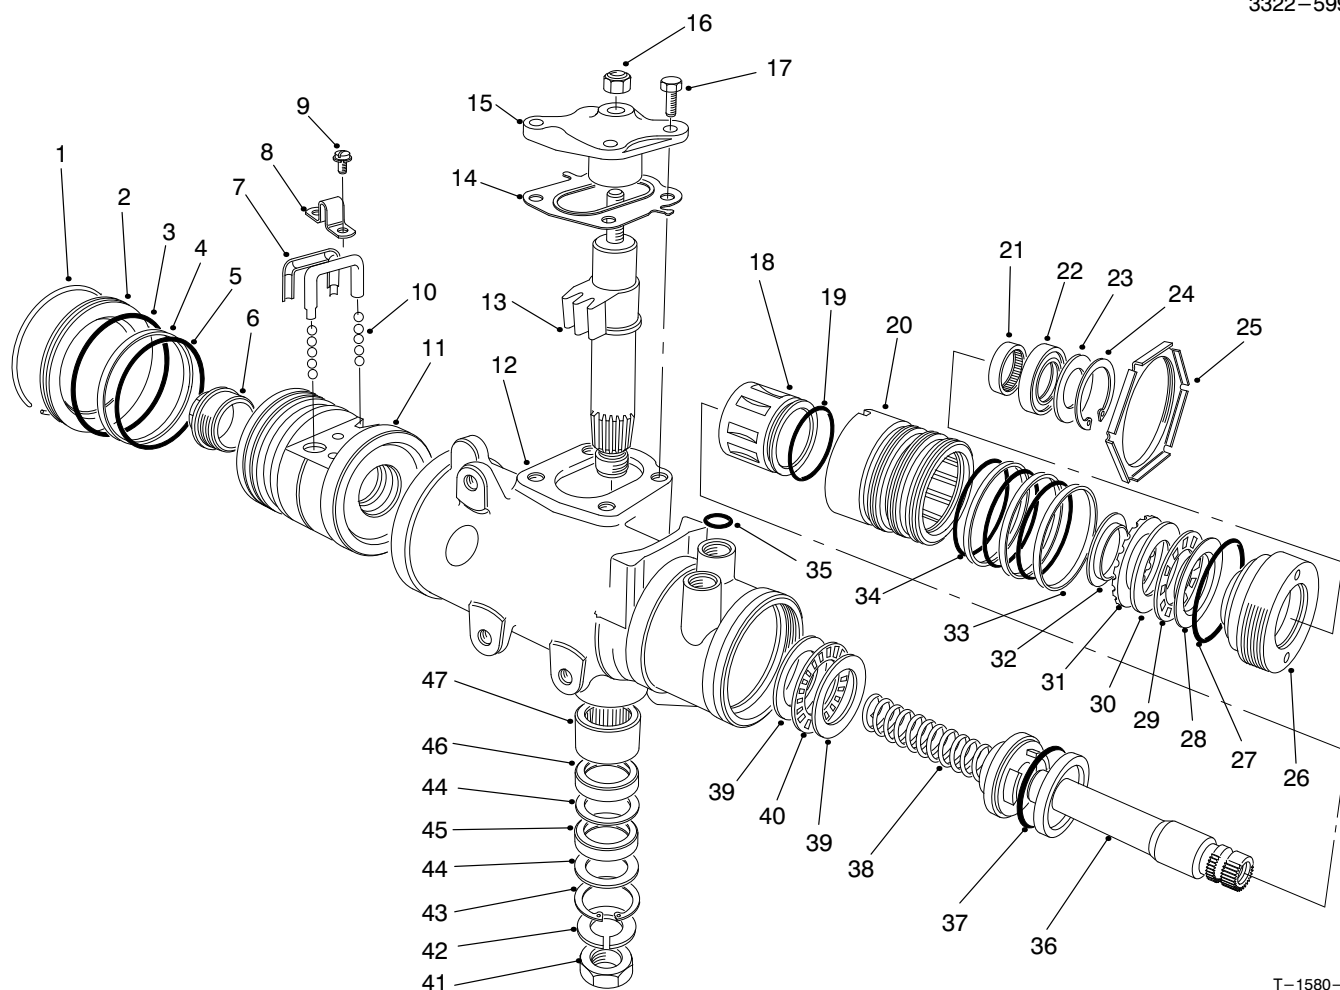


T-1580-1

STEERING GEAR ASM NO. 87-1500 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	28-8270	Kit-Seal Service, End Plug (Incl. Ref. #1 & 3)	1	*	92-4162	Pitman Shaft-Gear Service (Incl. Ref. #13-14 & 17)	1
*	28-8290	Kit-Seal, Service Rack/Piston (Incl. Ref. #4 & 5)	1	*	92-4158	Asm-Valve, Hyd. Gear (Incl. Ref. #18-20, 33, 34, 36 & 37)	1
*	18-5180	Kit-Bearing, Lower Thrust (Incl. Ref. #39-40)	1	*	92-4160	Kit-Bearing Service, Upper (Incl. Ref. #28-32)	1
*	98-2962	Kit-Seal, Pitman Shaft (Incl. Ref. #43-46)	1	*	92-4166	Asm-Rack/Piston/Nut (Incl. Ref. #1-11 & 38)	1
*	18-5170	Kit-Seal, Valve Ring (Incl. Ref. #19, 33, 34 & 37)	1	*	92-4164	Asm-Plug, Service Adjust. (Incl. Ref. #21-24 & 26-32)	1
*	92-4163	Asm-Steering Housing (Incl. Ref. #12 & 43-47)	1	*	87-1500	Steering Gear (Complete)	1
*	92-4167	Asm-Plug Service (Incl. Ref. #22-24 & 27)	1				

 *Not Illustrated

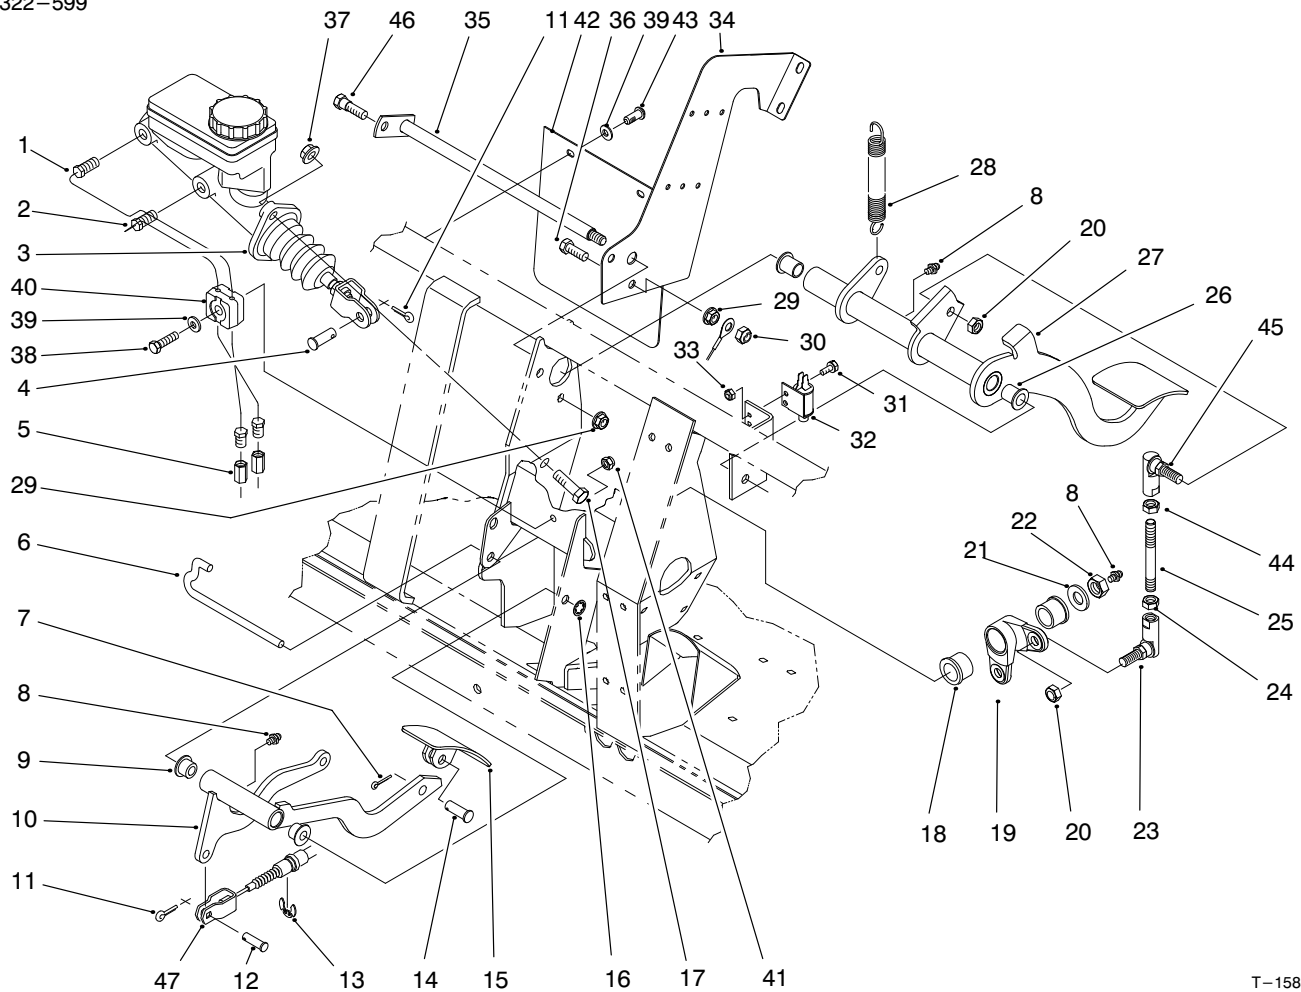


T-1585-2

BRAKE & ACCELERATOR PEDAL ASM

Ref. No.	Part No.	Description	No. Used
1	94-3814	Tube-Hydraulic	1
2	94-3815	Tube-Hydraulic	1
3	94-3800	Asm-Master Cylinder	1
4	283-2	Pin-Clevis	1
5	87-3570	Union-Brake Line	2
6	87-2880	Shaft-Accelerator Pedal	1
7	3272-6	Pin-Cotter	1
8	302-5	Fitting-Grease	3
9	256-259	Bushing-Flange	2
10	93-8961	Arm-Accelerator Pedal	1
11	3272-10	Pin-Cotter	2
12	283-30	Pin-Clevis	1
13	32120-47	Ring-E	1
14	283-85	Pin-Clevis	1
15	93-8969	Pedal-Accelerator	1
16	32151-56	Ring-Retaining	1
17	323-7	Screw-HH	2
18	256-247	Bushing-Flange	2
19	94-5223	Bell Crank	1
20	3296-6	Nut-Lock	2
21	3256-26	Washer-Flat	1
22	3296-23	Nut-Lock	1
23	68-3840	Ball Joint	1
24	3220-3	Nut-Jam	1

Ref. No.	Part No.	Description	No. Used
25	94-5299	Rod-Link	1
26	256-155	Bushing-Flange	2
27	93-8965	Pedal-Brake	1
28	76-9430	Spring-Extension	1
29	32128-20	Nut-HHF	2
30	3296-29	Nut-Lock	1
31	3290-321	Screw-HFH	2
32	55-7120	Switch-Brake Light	1
33	3296-2	Nut-Lock	2
34	94-3821	Plate-Center, Frame	1
35	95-7394	Shaft-Brake	1
36	322-5	Screw-HH	1
37	3290-357	Nut-HFH	2
38	321-9	Screw-HH	1
39	3256-22	Washer-Flat	3
40	87-7660	Clamp-Tube	2
41	3296-42	Nut-Lock	1
42	94-5221	Flap-Master Cylinder	1
43	87-6620	Screw-Torx PH	2
44	3220-16	Nut-Hex. Jam	1
45	68-3841	Asm-Ball Joint	1
46	28-0540	Bolt-Shoulder	1
47	94-3836	Cable-Accelerator	1

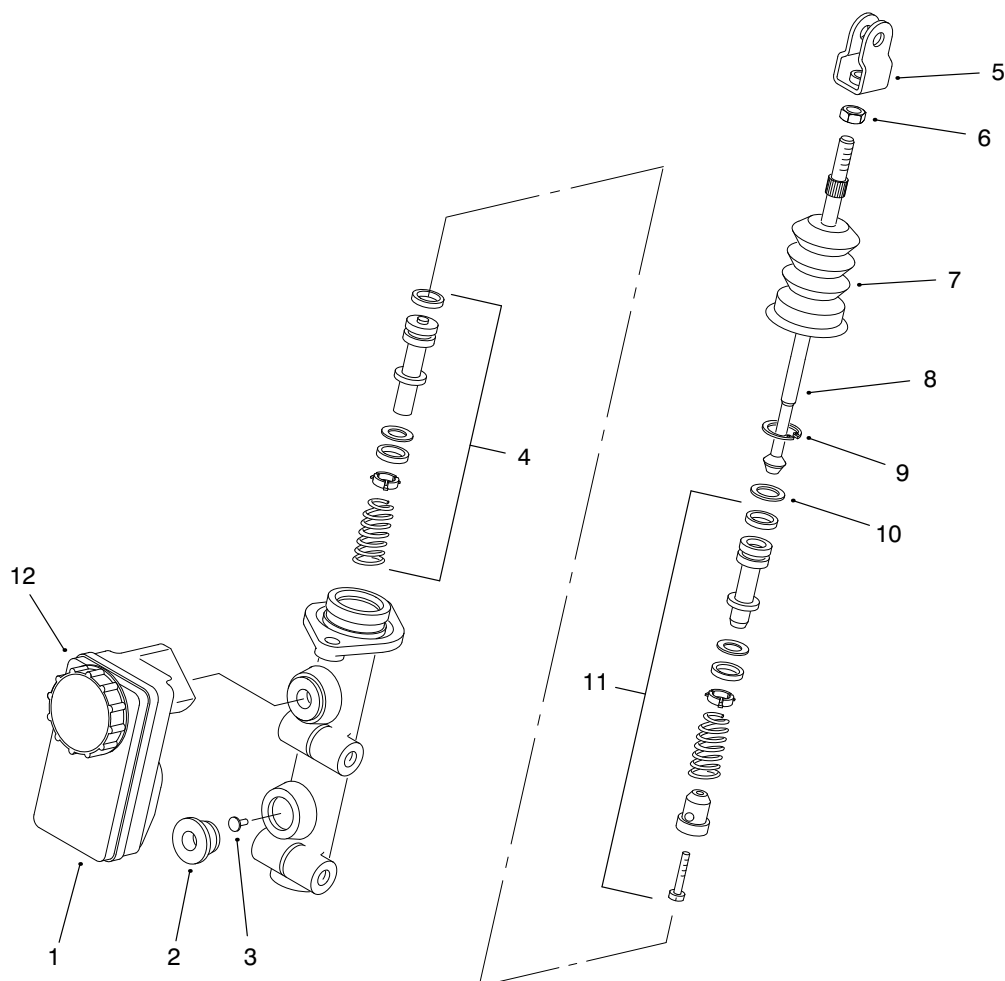 


T-2339-1

MASTER BRAKE CYLINDER NO. 94-3800

Ref. No.	Part No.	Description	No. Used
1	87-3040	Reservoir-Master Cylinder (Incl. Ref. #12)	1
2	93-8971	Seal-Port, Flange	2
3	92-4103	Pin-Stop	1
4	92-4102	Asm-Secondary Piston	1
5	92-4110	Clevis	1
6	21-0360	Nut-Hex.	1

Ref. No.	Part No.	Description	No. Used
7	94-5209	Cover-Dust	1
8	94-5210	Rod-Push	1
9	92-4109	Circlip	1
10	92-4108	Washer-Retainer	1
11	92-4101	Asm-Primary Piston	1
12	92-4112	Asm-Cap	1

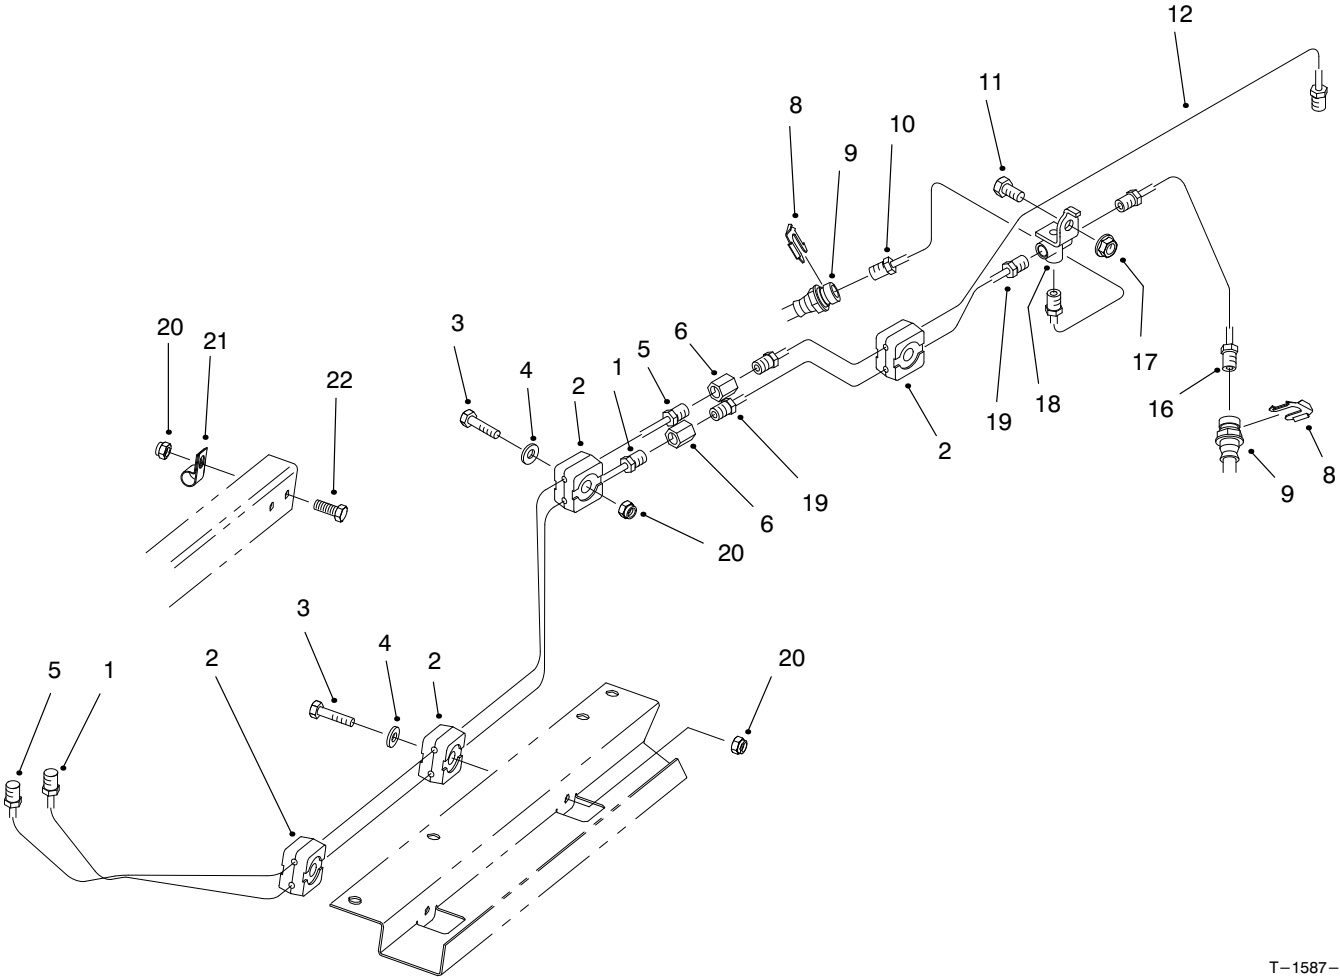 


T-1587-1


HYDRAULIC BRAKE LINE ROUTING ASM

Ref. No.	Part No.	Description	No. Used
1	94-3820	Tube-Brake Front	1
2	87-7660	Clamp-Brake Line	8
3	321-9	Screw-HH	4
4	3256-22	Washer-Flat	4
5	94-3819	Tube-Brake Rear	1
6	87-3570	Fitting-Union	2
8	87-3580	Retainer-Brake Hose	2
9	93-7123	Hose-Brake Front	2
10	93-7081	Tube-Brake Front RH	1

Ref. No.	Part No.	Description	No. Used
11	322-2	Screw-HH	1
12	94-3842	Tube-Brake Rear	1
16	93-7082	Tube-Brake Front LH	1
17	32128-20	Nut-Flange	1
18	87-3560	Tee-Brake Line	1
19	93-7085	Tube-Brake Front	1
20	3296-42	Nut-Lock	5
21	2412-89	Clamp-R	1
22	321-4	Screw-HH	1

  HYDRAULIC SCHEMATIC

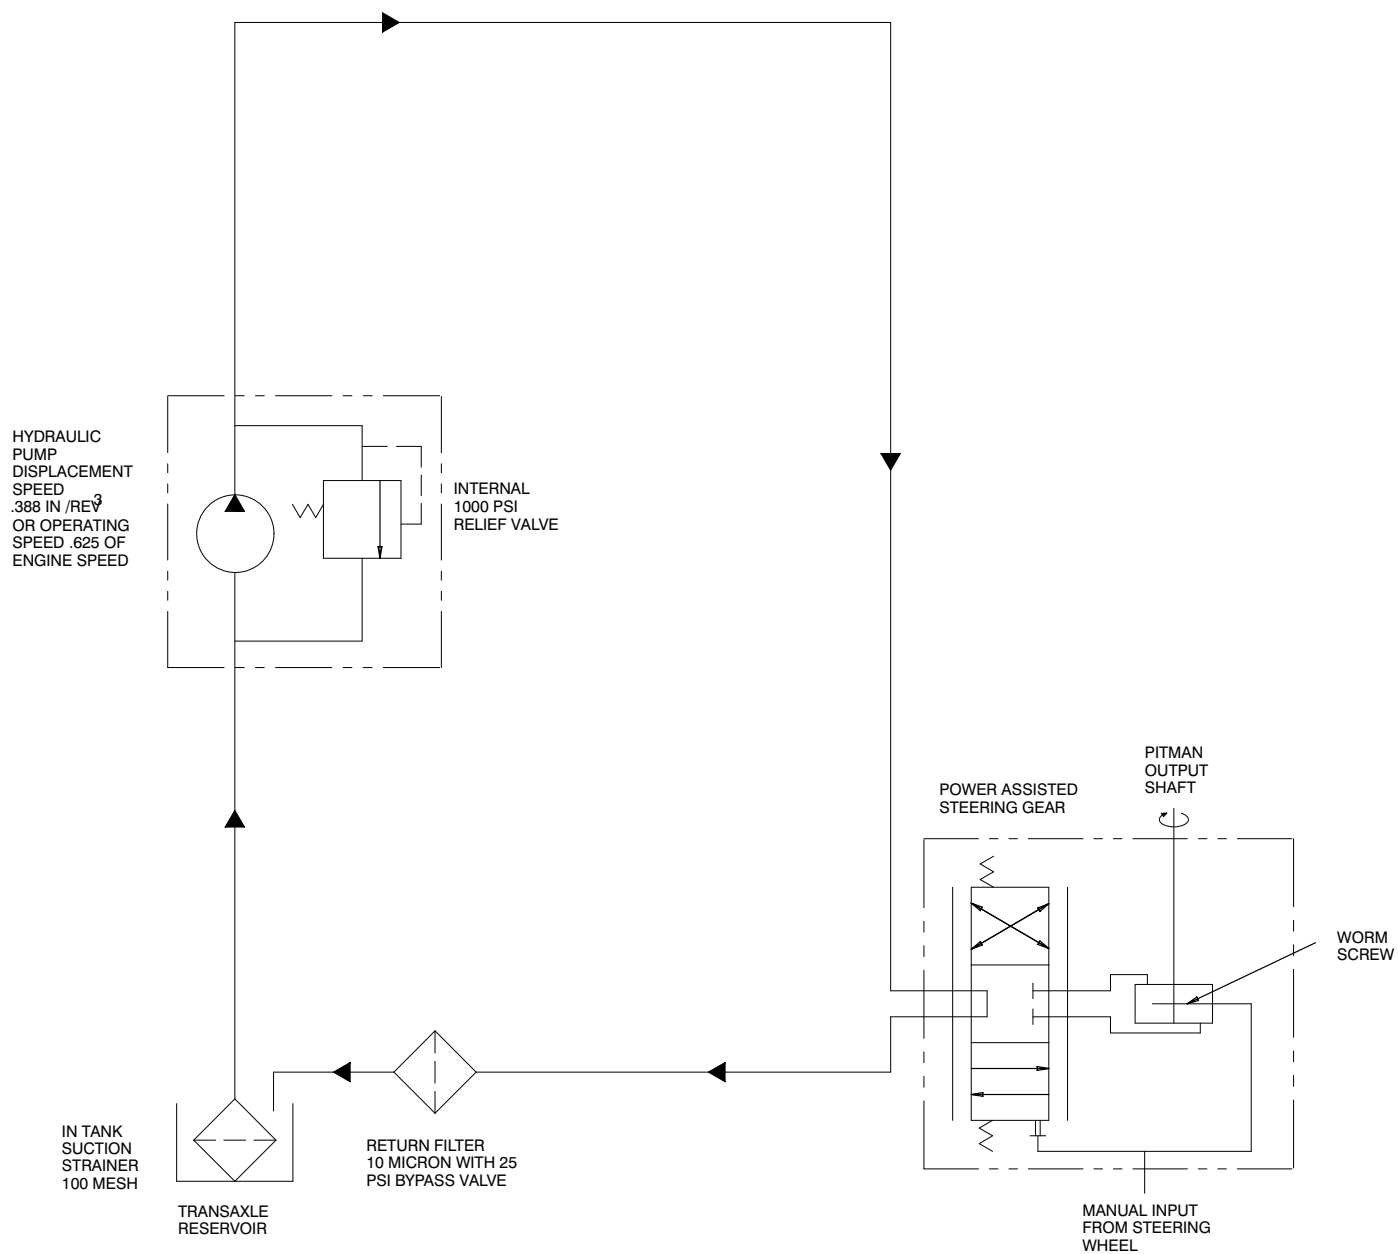

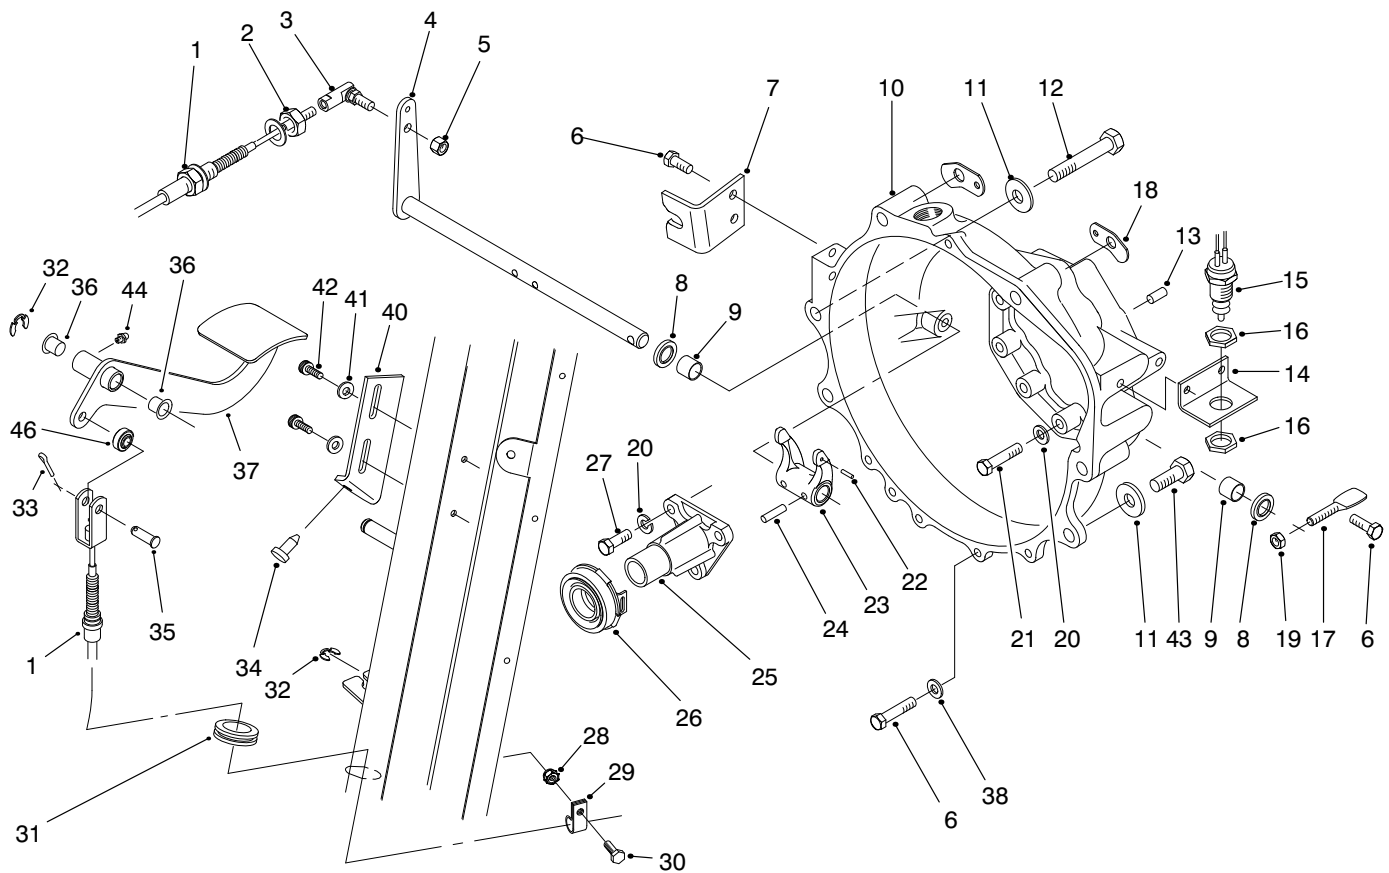


T-1658-3

CLUTCH LINKAGE ASM

Ref. No.	Part No.	Description	No. Used
1	99-1201	Asm-Clutch Cable (Incl. Ref. #2)	1
2	3220-2	Nut-Jam	1
3	2411-33	Joint-Ball	1
4	87-5280	Shaft-Release	1
5	3296-4	Nut-Lock	1
6	33114-020	Screw-HH	8
7	87-8471	Bracket-Clutch	1
8	87-1920	Seal-Shaft	2
9	87-3770	Bushing-Sleeve	2
10	93-7120	Housing-Bell	1
11	3256-26	Washer-Flat	4
12	3215-2	Screw-HH	5
13	87-1910	Pin-Alignment	2
14	87-5350	Bracket-Switch	1
15	87-5490	Switch-Neutral	1
16	3218-20	Nut-Jam	2
17	87-5360	Lever	1
18	87-6410	Bracket-Harness	2
19	3296-29	Nut-Lock	1
20	42-9850	Washer-Lock	12
21	33114-040	Screw-HH	9
22	32121-7	Pin-Roll	1


Ref. No.	Part No.	Description	No. Used
23	87-5300	Fork-Clutch	1
24	32121-24	Pin-Roll	2
25	87-5320	Guide-Release	1
26	87-2100	Bearing-Release	1
27	33114-025	Screw-HH	3
28	32128-33	Nut-HHF	1
29	2412-89	Clamp-R	1
30	321-4	Screw-HH	1
31	240-5	Grommet	1
32	32120-47	Ring-E	2
33	3272-10	Pin-Cotter	1
34	87-8460	Bumper	1
35	283-75	Pin-Clevis	1
36	256-156	Bushing-Flange	2
37	99-1199	Pedal-Clutch	1
38	3256-23	Washer-Lock	4
40	87-8710	Tab-Clutch	1
41	3256-22	Washer-Flat	2
42	87-6620	Screw-Torx Hd.	2
43	42-9250	Screw-HH	1
44	302-5	Fitting-Grease	1
46	99-1202	Rod End	1

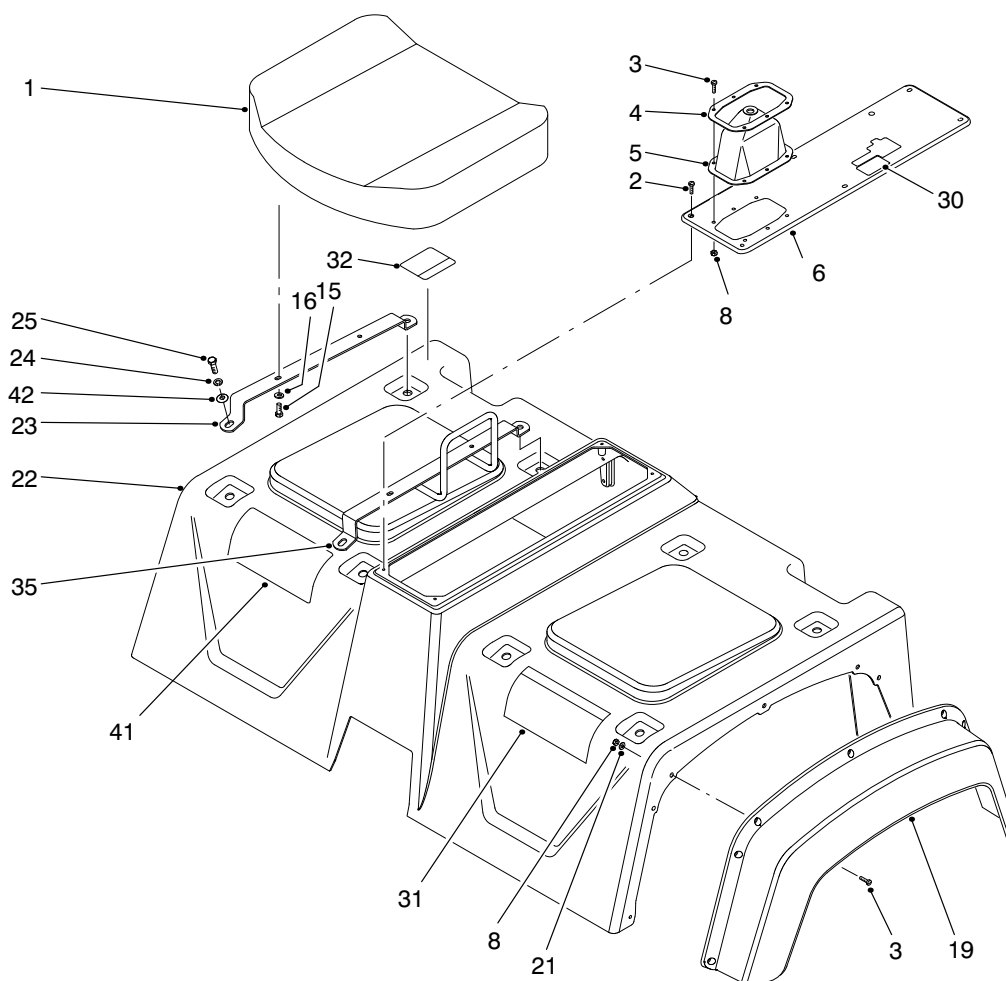 

T-2997

SEAT BASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-5060	Pad-Seat	2	23	87-3800	Bracket-Seat Bottom	3
2	32144-52	Screw-HH	6	24	3253-4	Washer-Lock	8
3	3250-13	Screw-HH	20	25	322-5	Screw-HH	8
4	87-3760	Plate-Shift Boot	1	30	87-6020	Decal-Brake	1
5	87-8620	Boot-Shift	1	31	87-5920	Decal-Danger	1
6	98-2972	Cover-Console	1	32	87-5930	Decal-Caution	1
8	3296-2	Nut-Lock	20	35	87-6890	Hold-Hand	1
19	87-9480	Fender-Front	2	41	99-1085	Decal-Quick Ref.	1
21	3256-61	Washer-Flat	14	42	3256-23	Washer-Flat	8
22	99-1086	Asm-Skirt (Incl. Ref. #31 & 32)	1				

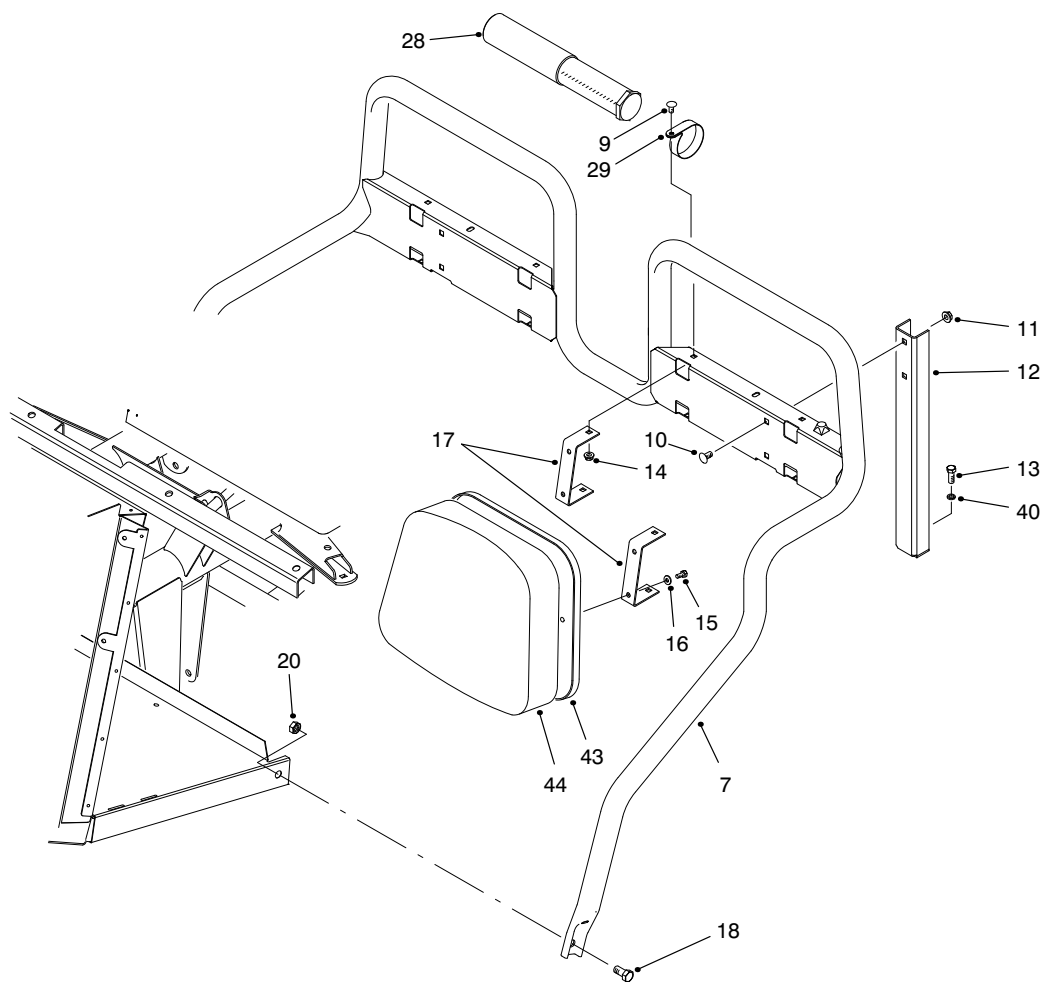 


T-2998

SEAT BACK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
7	87-6170	Frame-Seat	1	18	325-4	Screw-HH	2
9	3230-18	Bolt-CARR	8	20	3296-23	Nut-Lock	2
10	3231-21	Bolt-CARR	4	28	74-0720	Tube-Manual	1
11	3290-357	Nut-HFH	4	29	2412-133	Clamp-R	2
12	87-2510	Bracket-Seat Frame	2	40	3253-21	Washer-Lock	2
13	323-6	Screw-HH	2	43	87-6280	Plate-Seat Back	2
14	32128-20	Nut-HHF	8	44	87-6290	Cushion-Seat Back	2
15	321-4	Screw-HH	8	*	87-3340	Asm-Backrest (Incl. Ref. #43-44)	2
16	3256-22	Washer-Flat	8				
17	87-6240	Bracket-Seat Back	4				

 
*Not Illustrated

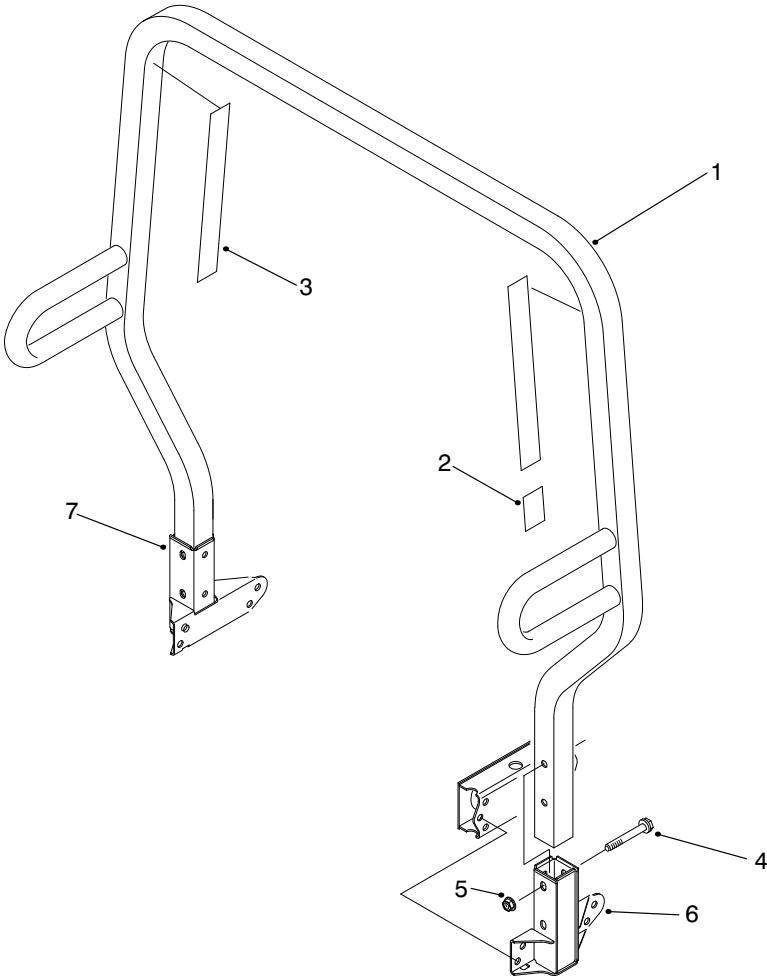

T-1592-1

ROLL OVER PROTECTION SYSTEM (R.O.P.S.) ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-7090	Asm-Frame, R.O.P.S. (Incl. Ref. #2 & 3)	1	4	3234-40	Screw-HFH	4
2	87-5940	Decal-Rollover	1	5	32128-23	Nut-HHF	4
3	87-5980	Decal-ROPS	2	6	87-6950	Receiver-LH	1
				7	87-6960	Receiver-RH	1

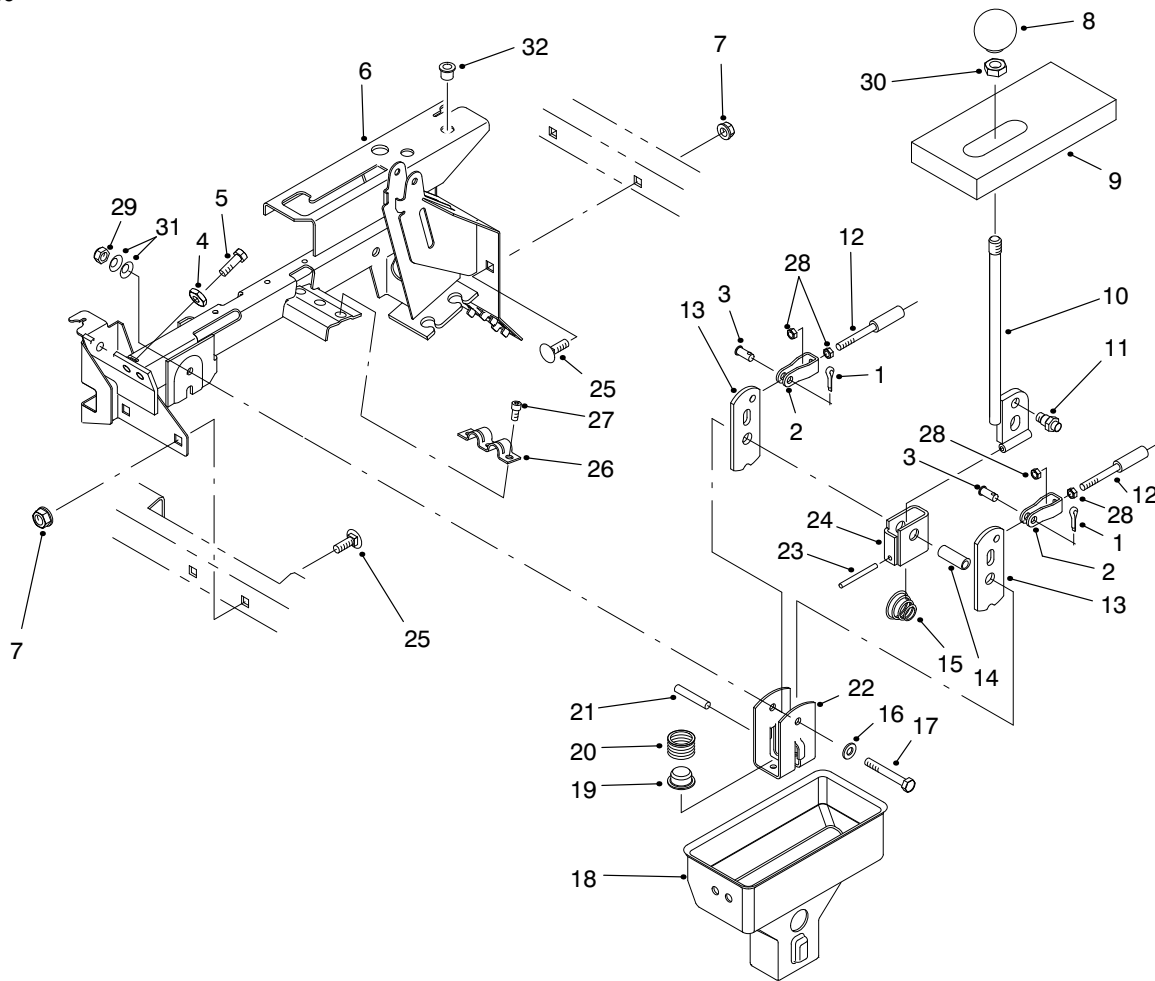 


T-2999

CONSOLE ASM

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin-Cotter	2
2	87-2310	Clevis-Cable	2
3	283-62	Pin-Clevis	2
4	3220-3	Nut-Jam	2
5	3211-8	Screw-HH	2
6	94-5202	Asm-Lever Support (Incl. Ref. #32)	1
7	3290-357	Nut-HFH	4
8	87-6720	Knob	1
9	87-6570	Foam-Seal	1
10	87-2040	Lever-Shift	1
11	87-3650	Pin-Shift	1
12	87-4260	Asm-Cable (Incl. Ref. #28)	2
13	87-3540	Link-Shift	2
14	87-2520	Tube-Pivot	1
15	87-2900	Spring-Compression	1


Ref. No.	Part No.	Description	No. Used
16	87-8640	Washer-Flat	1
17	322-12	Screw-HH	1
18	87-2260	Boot-Shift Lower	1
19	87-3530	Button-Shifter	1
20	87-3660	Spring-Compression	1
21	3290-507	Pin-Dowel	1
22	87-3520	Clevis	1
23	32121-48	Pin-Roll	1
24	87-6040	Bracket-Shifter	1
25	3231-21	Bolt-CARR	4
26	87-4960	Clamp-Cable	1
27	65-5220	Screw-HSH	3
28	3220-1	Nut-Jam	4
29	3296-58	Nut-Lock	1
30	3218-18	Nut-Jam	1
31	3290-456	Washer-Belleville	2
32	32148-7	Nut-Clinch	2

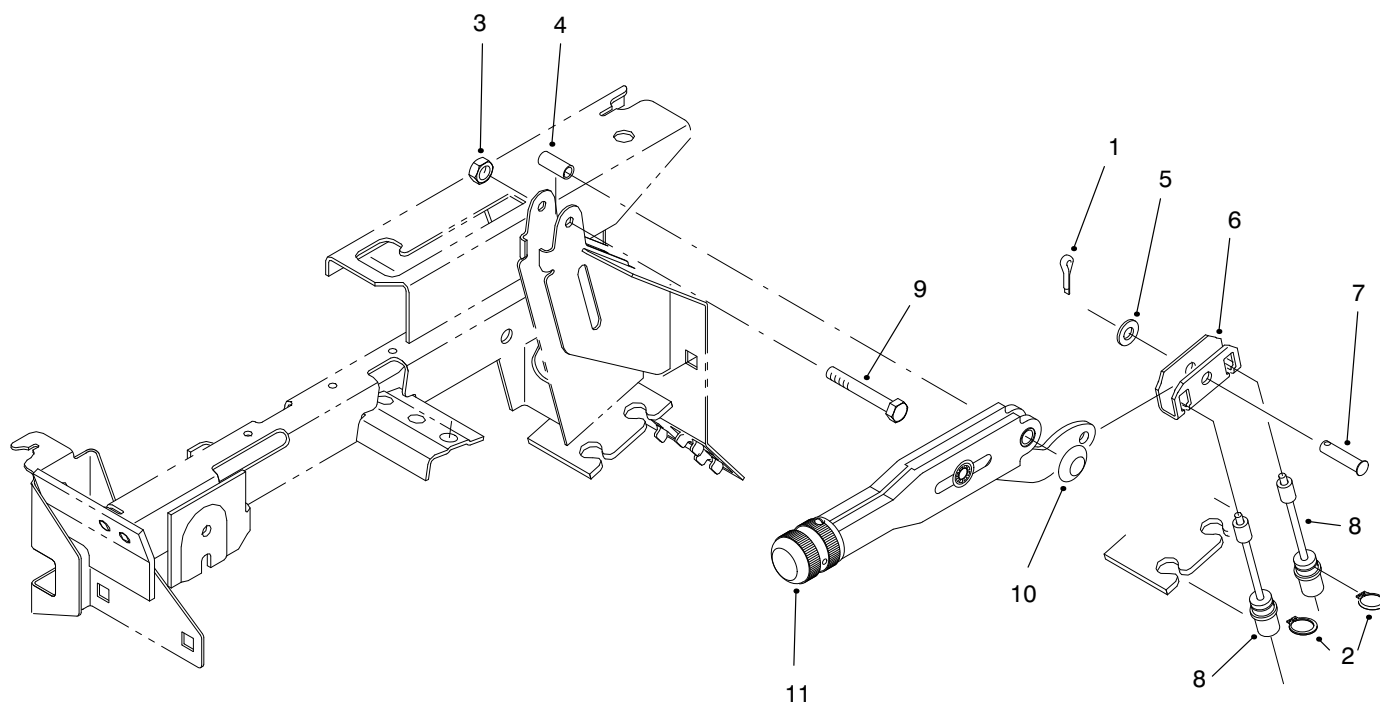 

T-3000

PARKING BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin-Cotter	1	7	94-3829	Pin-Clevis	1
2	32120-47	Ring-Retaining	2	8	87-8240	Cable-Parking Brake	2
3	3296-42	Nut-Lock	1	9	321-9	Screw-HH	1
4	87-4710	Spacer-Barking Brake	1	10	3290-477	Washer-Curved	1
5	3256-23	Washer-Flat	1	11	87-2710	Lever-Parking Brake	1
6	87-3480	Plate-Brake Equalizer	1				

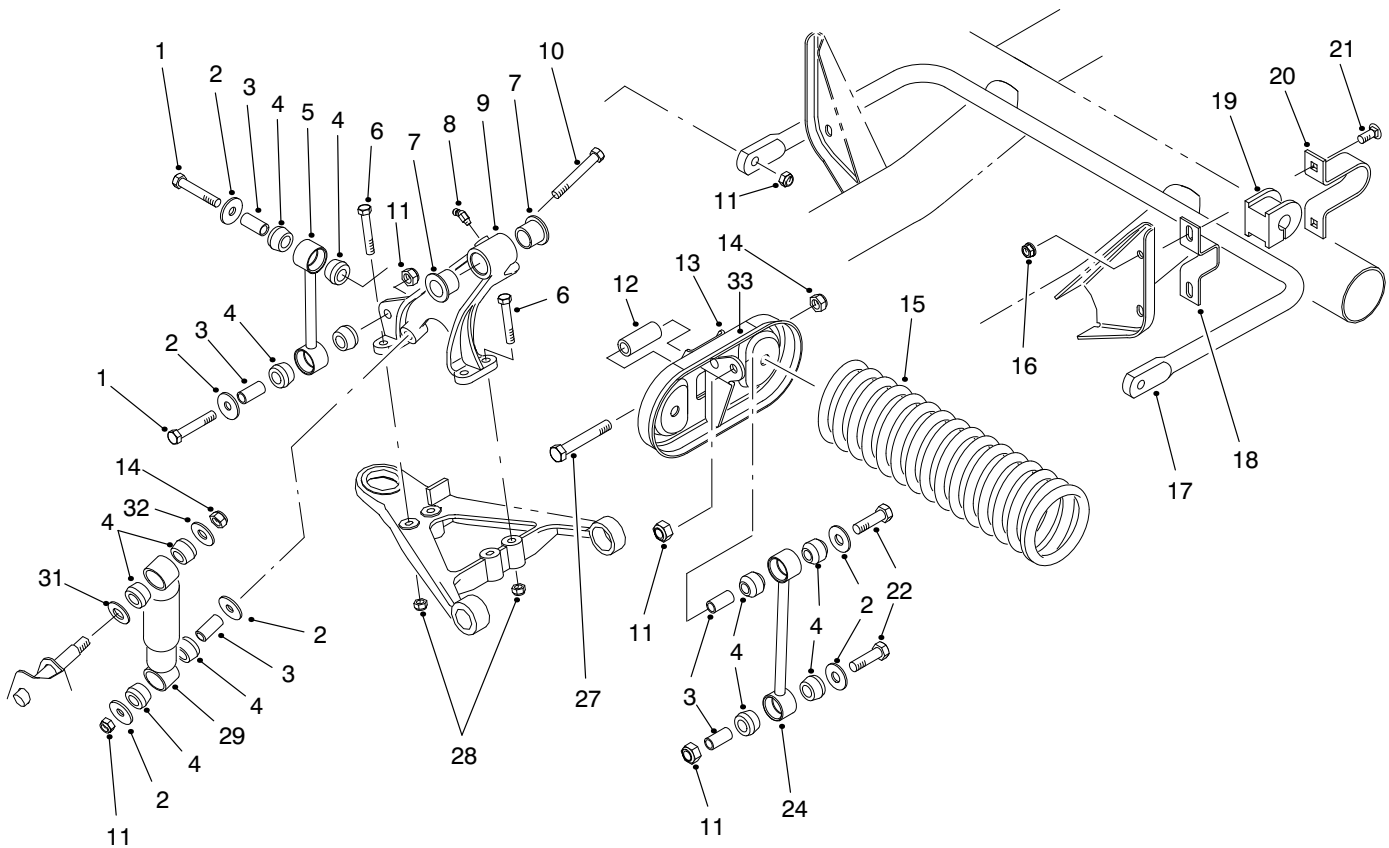 


T-1593-1

FRONT SUSPENSION ASM

Ref. No.	Part No.	Description	No. Used
1	324-10	Screw-HH	4
2	87-5330	Washer	12
3	87-3600	Spacer	10
4	87-3920	Bushing-Rubber	24
5	87-3860	Link-Anti-Sway Bar	2
6	323-12	Screw-HH	8
7	33-3090	Bushing-Flange	4
8	302-11	Fitting-Grease	1
9	87-0150	Tower-Control Arm RH	1
*	87-0160	Tower-Control Arm LH	1
10	324-13	Screw-HH	2
11	3296-48	Nut-Lock	10
12	87-2500	Sleeve-Spring Pivot	2
13	87-7150	Asm-Cradle, Spring (Incl. Ref. #33)	2
14	3296-23	Nut-Lock	4
15	87-0690	Spring-Compression	2

Ref. No.	Part No.	Description	No. Used
16	3290-357	Nut-HFH	4
17	87-3850	Bar-Anti-Sway	1
18	87-3890	Bracket-Anti-Sway Bar	2
19	87-3910	Bushing-Anti-Sway Bar	2
20	87-4010	Clamp-Anti-Sway Bar	2
21	3231-25	Bolt-CARR	4
22	324-9	Screw-HH	4
24	87-2480	Link-Stabilizer	2
27	325-13	Screw-HH	4
28	3296-39	Nut-Lock	8
29	87-3110	Absorber-Shock	2
31	3256-27	Washer-Flat	2
32	3256-6	Washer-Flat	2
33	44-0760	Decal-Warning	2
33	93-9879	Decal-Warning (Europe)	2
33	92-6493	Decal-Warning (Japan)	2

 *Not Illustrated

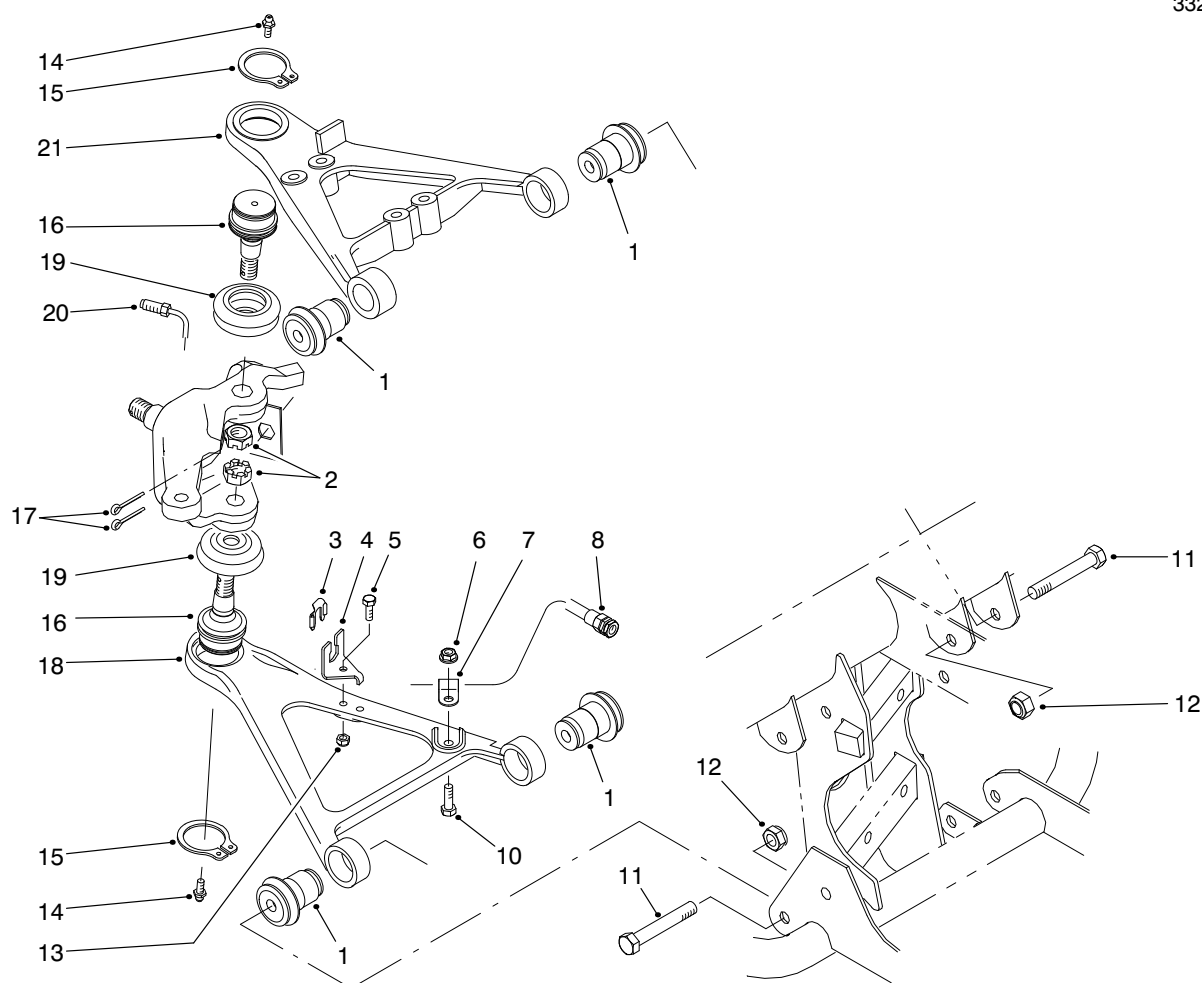


T-1594-1

FRONT SUSPENSION CONTROL ARM ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-1450	Bushing-Rubber	8	14	302-5	Fitting-Grease	4
2	32136-2	Nut-Slotted	2	15	32151-104	Ring-Snap	4
3	87-3580	Retainer-Brake Hose	2	16	87-1430	Joint-Ball	4
4	87-2870	Bracket-Brake Hose	2	17	3272-12	Pin-Cotter	4
5	321-6	Screw-HH	2	18	87-0210	Arm-Control Lower RH	1
6	32128-20	Nut-HHF	2	*	87-0220	Arm-Control Lower LH	1
7	2412-10	Clamp-R	2	19	87-2420	Boot	4
8	93-7123	Hose-Brake Front	2	20	87-2800	Tube-Brake RH	1
10	322-5	Screw-HH	2	*	87-2790	Tube-Brake LH	1
11	325-13	Screw-HH	8	21	93-7135	Arm-Control Upper RH	1
12	3296-23	Nut-Lock	8	*	93-7133	Arm-Control Upper LH	1
13	3296-42	Nut-Lock	2				

 *Not Illustrated

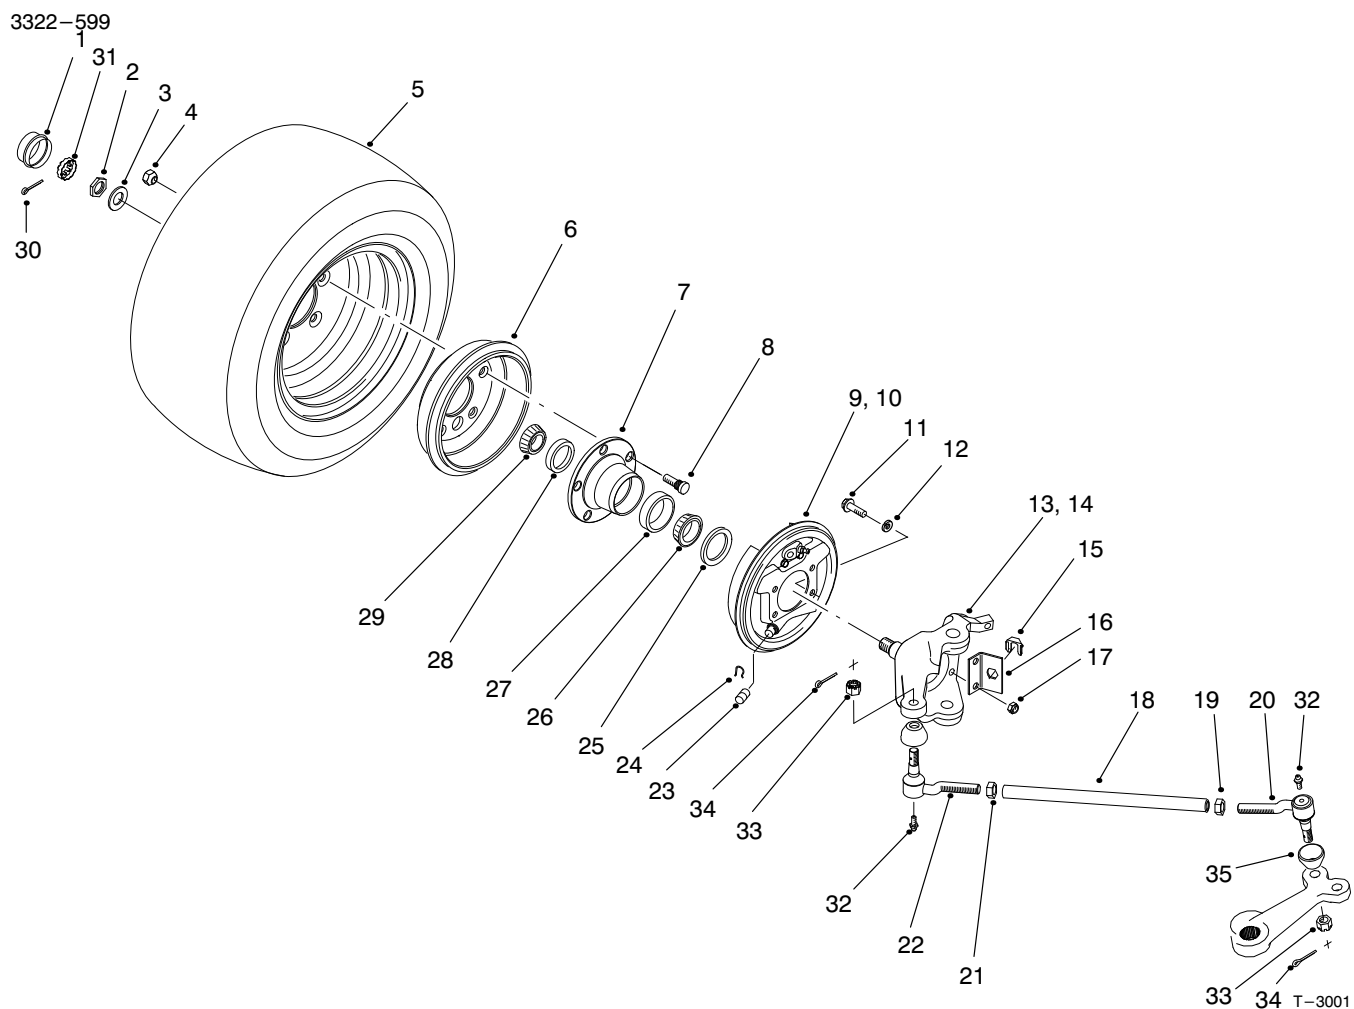


FRONT WHEEL ASM

Ref. No.	Part No.	Description	No. Used
1	241-119	Cap-Dust	2
2	3220-7	Nut-Jam	2
3	93-0309	Washer-Tab	2
4	23-7270	Nut-Lug	10
5	98-2977	Asm-Tire & Wheel	2
6	87-0270	Drum-Brake	2
7	87-5560	Hub-Wheel	2
8	87-8730	Stud-Drive	10
9	87-3010	Asm-Brake RH	1
10	87-3020	Asm-Brake LH	1
11	323-8	Screw-HH	8
12	3253-21	Washer-Lock	8
13	87-9430	Spindle-RH	1
14	87-9440	Spindle-LH	1
15	87-3580	Retainer	2
16	87-2820	Bracket-Hose	2
17	3296-39	Nut-Lock	8
18	87-2410	Rod-Tie	2
19	3218-21	Nut-Jam	2
20	87-1470	Asm-Rod End LH Thread (Incl. Ref. #32-35)	2

Ref. No.	Part No.	Description	No. Used
21	3220-11	Nut-Jam	2
22	87-1480	Asm-Rod End RH Thread (Incl. Ref. #32-35)	2
23	87-3450	Plug	2
24	87-3310	Clip-Brake Cable	2
25	87-3590	Seal-Bearing	2
26	254-106	Cone-Bearing	2
27	254-107	Cup-Bearing	2
28	254-72	Cup-Bearing	2
29	254-94	Cone-Bearing	2
30	3272-12	Pin-Cotter	2
31	93-0307	Nut-Retainer	2
32	302-5	Fitting-Grease	4
34	3272-12	Pin-Cotter	4
33	32136-3	Nut-Slotted	4
34		Seal-Rod End	4
*	87-5340	Kit-Seal, Tie Rod End (Incl. Ref. #32-35)	4

 *Not Illustrated

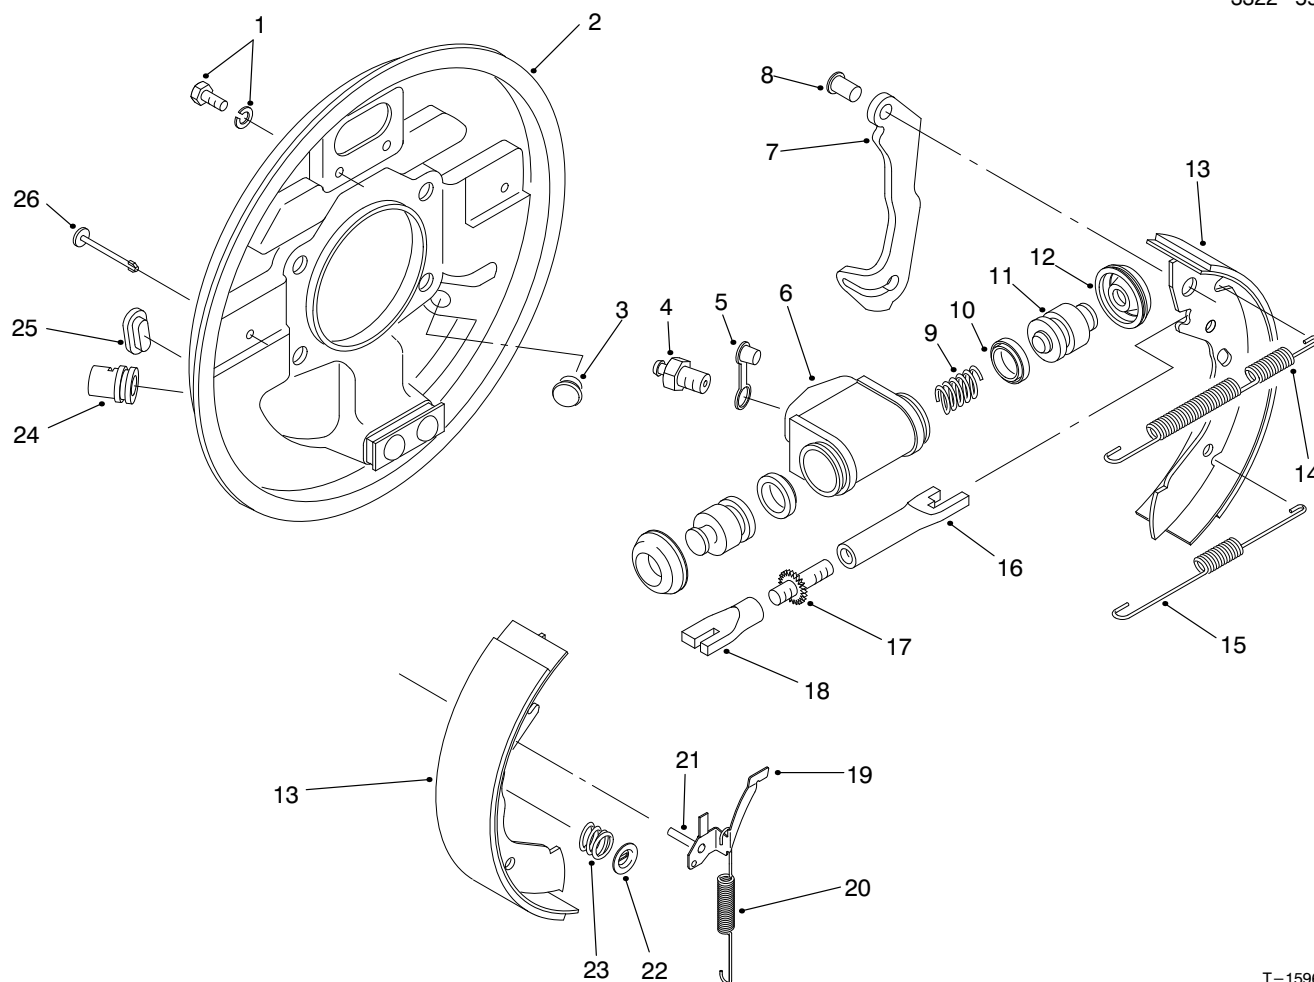


T-1596-1

FRONT BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Asm-Pawl LH (Incl. Ref. #21)	1
2	92-4115	Asm-Backplate LH (Incl. Ref. #24)	1	*	92-4124	Asm-Pawl RH (Incl. Ref. #21)	1
*	92-4116	Asm-Backplate RH (Incl. Ref. #24)	1	20	92-4129	Spring-Adjuster, LH	1
3	92-4125	Plug	1	*	92-4130	Spring-Adjuster, RH	1
4	92-4113	Screw-Bleed	1	21	92-4131	Pin-Pawl	1
5	92-4114	Cap-Bleed Screw	1	22	92-4132	Washer-Hold Down	2
6		Body	1	23	92-4132	Spring-Hold Down	2
7		Lever-Operating LH/RH	1	24		Guide-Pipe	1
8		Pin	1	25	92-4134	Plug-Inspection	1
9		Spring	1	26	92-4133	Pin-Hold Down	2
10		Seal-'L' Type	2	*	92-4121	Asm-Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4122	Asm-Adjuster RH (Incl. Ref. #16-18)	1
12		Cover-Dust	2	*	92-4117	Asm-Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4120	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4118	Asm-Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4126	Spring-Shoe, Upper LH	1	*	92-4119	Kit-Seal (Incl. Ref. #10 & 12)	1
*	92-4127	Spring-Shoe, Upper RH	1	*	87-3010	Asm-Front Brake RH (Complete)	1
15	92-4128	Spring-Shoe, Lower	1	*	87-3020	Asm-Front Brake LH (Complete)	1
16		Pushrod-Female LH	1				
*		Pushrod-Female RH	1				
17		Bolt-Adjuster	1				
18		Sleeve-Adjuster	1				

 *Not Illustrated

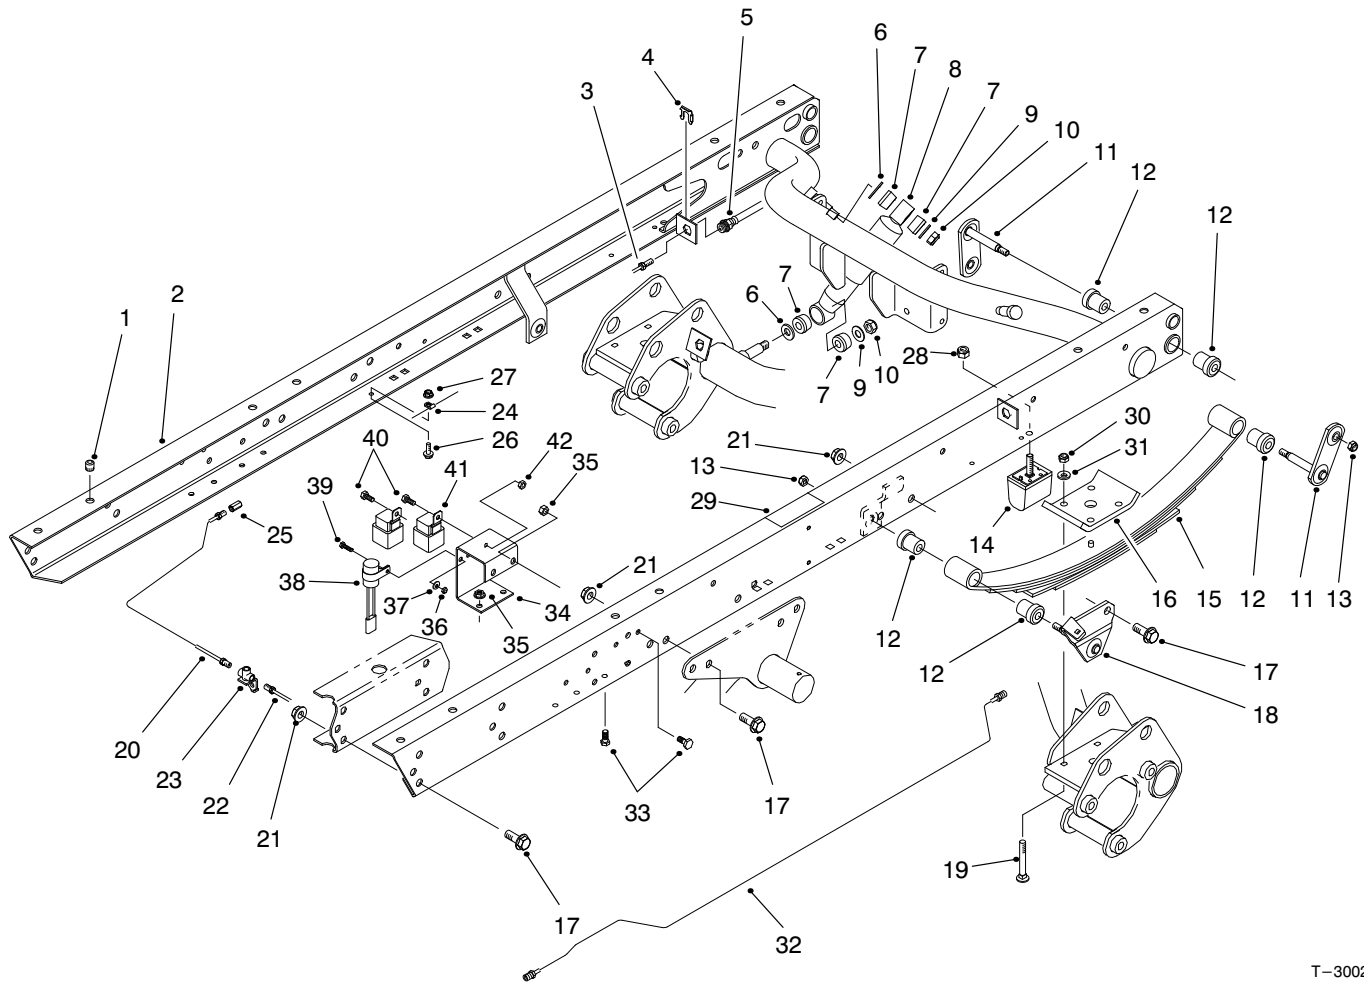


T-3002

REAR FRAME & RELAY ASM

Ref. No.	Part No.	Description	No. Used
1	32148-9	Insert-Threaded	8
2	87-8440	Asm-Rear Frame (Incl. Ref. #29)	1
3	94-3846	Tube-Brake RH	1
*	94-3844	Tube-Brake LH	1
4	87-3580	Retainer	2
5	87-4100	Hose-Brake	2
6	3256-27	Washer-Flat	4
7	87-3920	Bushing-Rubber	8
8	87-3110	Shock Absorber	2
9	3256-6	Washer-Flat	4
10	3296-23	Nut-Lock	4
11	87-3980	Shackle-Spring	4
12	87-4760	Bushing	12
13	3296-39	Nut-Lock	6
14	87-3470	Bumper-Spring	2
15	87-1490	Spring-Leaf	2
16	87-7470	Plate-Clamp	2
17	3234-38	Screw-HFH	24
18	87-3960	Mount-Spring LH	1
*	87-3940	Mount-Spring RH	1
19	3232-17	Bolt-CARR	8
20	94-3845	Tube-Brake RH	1

Ref. No.	Part No.	Description	No. Used
21	32128-23	Nut-HHF	24
22	94-3843	Tube-Brake LH	1
23	87-3560	Tee-Brake Tube	1
24	2412-149	Clamp-Tube	4
25	87-3570	Union-Brake Line	2
26	3234-4	Screw-HH	4
27	32128-33	Nut-HHF	4
28	48-9520	Nut-Lock	2
29	66-6840	Decal-Caution	2
30	3296-76	Nut-Lock	8
31	87-7480	Washer-Flat	8
32	94-3844	Asm-Tube, Brake Rear LH	1
33	322-3	Screw-HH	4
34	99-1075	Bracket-Mount, Relay	1
35	32128-20	Nut-HFH	4
36	3296-12	Nut-Lock	1
37	3256-14	Washer-Flat	1
38	99-1063	Timer-Delay	1
39	32105-13	Screw-Machine	1
40	321-3	Screw-HH	2
41	70-1480	Relay-Sealed	2
42	3296-42	Nut-Lock	2

 *Not Illustrated

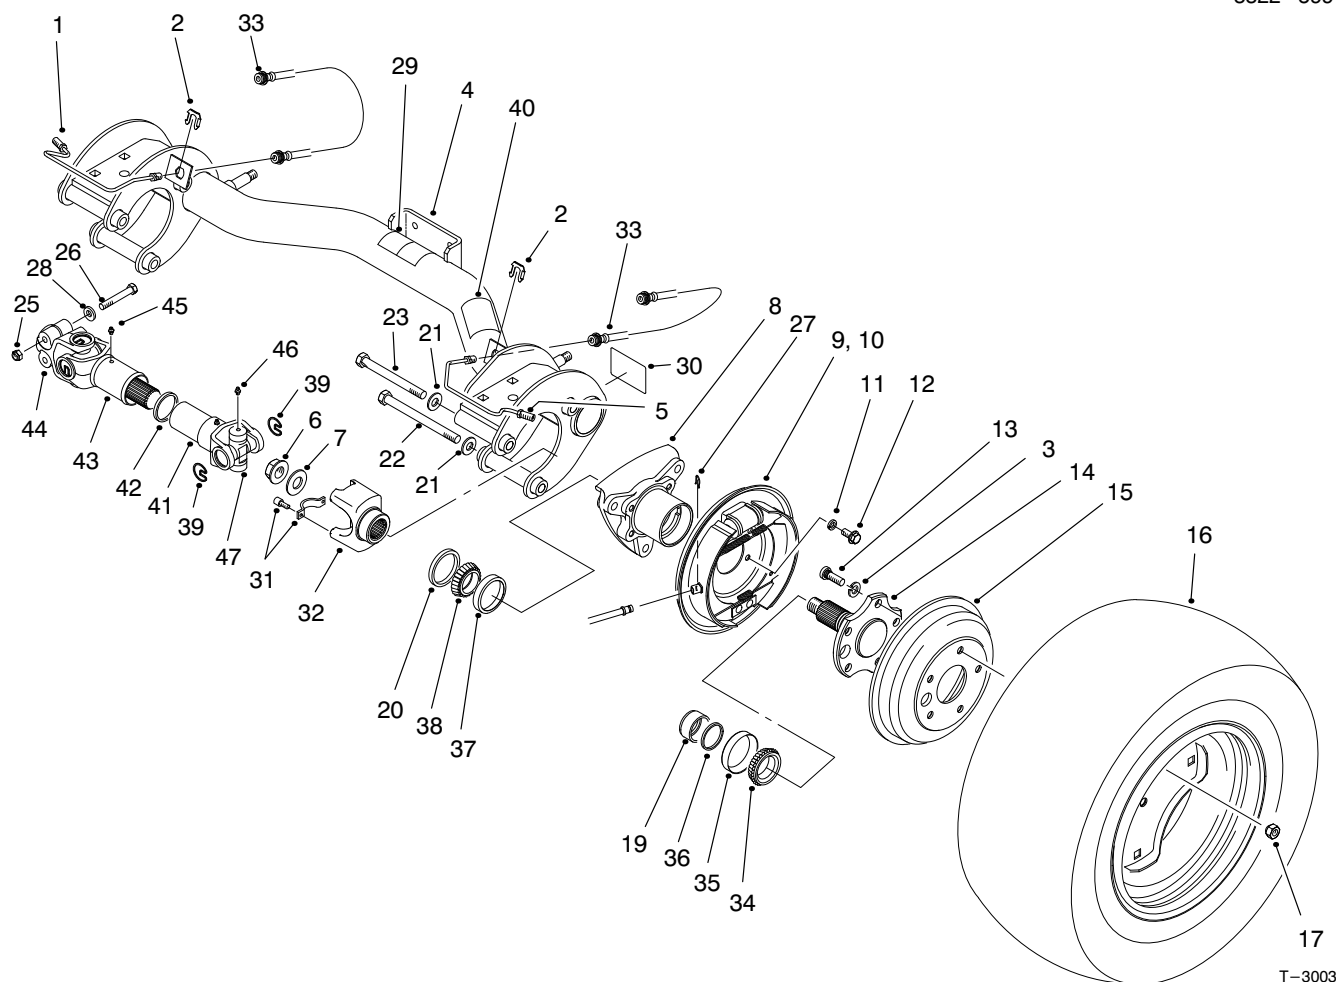


T-3003

REAR AXLE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-4090	Tube-Brake RH	1	*24	98-2918	Asm-Driveshaft (Incl. Ref. #39, 41-47)	2
2	87-3580	Retainer-Brake Hose	2	25	32128-36	Nut-Lock	4
3	3253-6	Washer-Lock	10	26	98-2939	Screw-HH	4
4	87-7110	Asm-Axle, Rear (Incl. Ref. #29, 30 & 40)	1	27	87-3310	Clip-Brake Cable	2
5	87-4080	Tube-Brake LH	1	28	80-6990	Washer	4
6	32128-53	Nut-HHF	2	29	87-6060	Decal-ATF	1
7	87-3060	Washer-Flat	2	30	87-9080	Decal-Grease	2
8	87-2240	Housing-Axle	2	31	92-4189	Kit-Strap & Bolt	2
9	99-9416	Asm-Brake LH	1	32	92-4190	Yoke-End	2
10	99-9417	Asm-Brake RH	1	33	87-4100	Hose-Brake	2
11	3253-21	Washer-Lock	8	†34		Cone-Bearing	2
12	323-6	Screw-HH	8	†35		Cup-Bearing	2
13	87-2080	Stud-Drive	10	†36		Spacer	2
14	93-7090	Stub-Axle	2	†37		Cup-Bearing	2
15	93-7128	Drum-Brake	2	†38		Cone-Bearing	2
16	98-2978	Asm-Tire & Wheel	2	39	92-4188	Ring-Snap	12
17	23-7270	Nut-Lug	10	40	87-5990	Decal-PTO	1
*18	87-1970	Bearing-Matched Set (Use 1 set per wheel) (Incl. Ref. #34-38)	2	41	92-4182	Yoke & Hub	2
19	87-4060	Spacer-Bearing	2	42	92-4180	Seal	2
20	87-3590	Seal-Bearing	2	43	92-4179	Yoke, Shaft & Seal Tube	2
21	87-7270	Washer-Flat	6	44	98-2940	Yoke-Double Clamp	2
22	325-20	Screw-HH	5	45	302-5	Fitting-Grease	2
23	325-19	Screw-HH	1	46	302-58	Fitting-Grease	16
				47	92-4187	Kit-Cross & Bearing	4

*Not Illustrated

 †Not Serviced Separately.

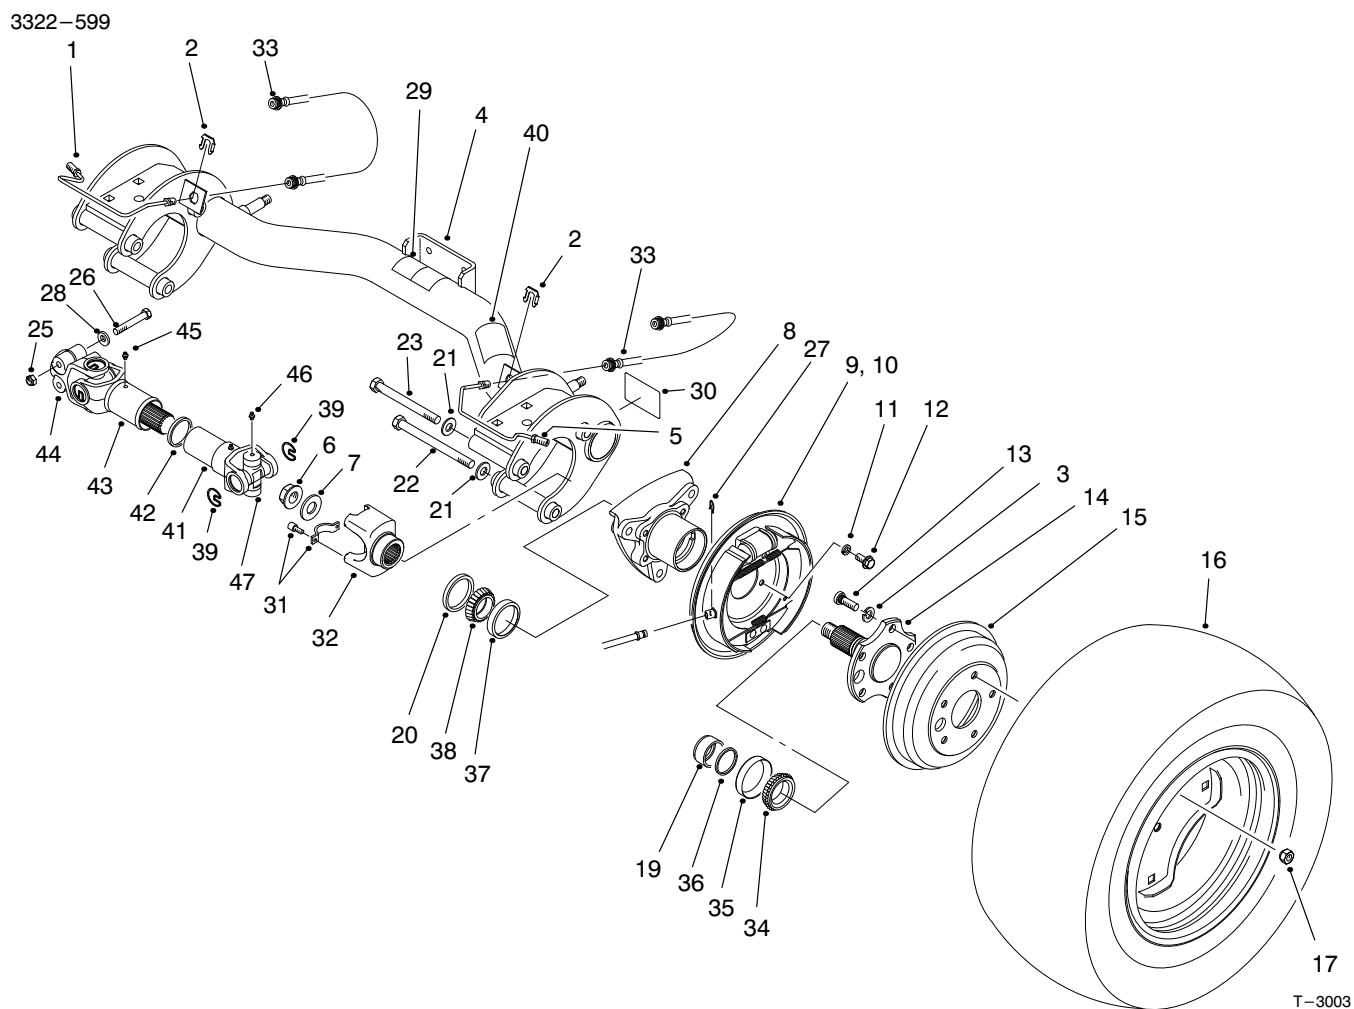


REAR AXLE ASM (Continued)

Ref. No.	Part No.	Description	No. Used
*	98-2969	1/2 Yoke Kit (Incl. Ref. #31 & 32)	2
*	98-2967	Driveshaft Assembly Kit (Incl. Ref. #24 & 26)	2

Ref. No.	Part No.	Description	No. Used
*	98-2968	Yoke Kit (Incl. Ref. #26 & 44)	2

 *Not Illustrated

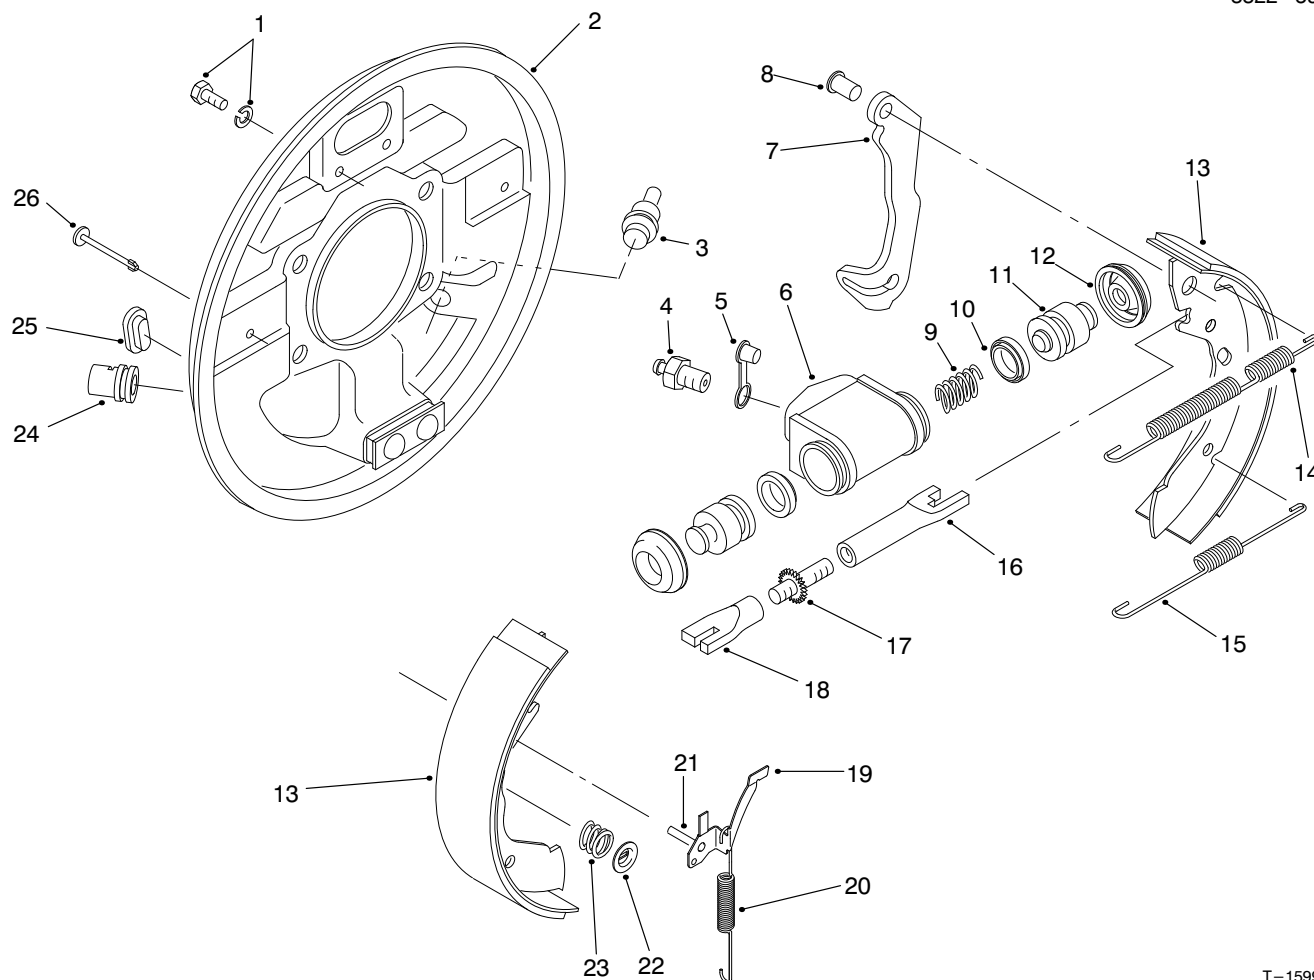


T-1599-1

REAR BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Asm-Pawl LH (Incl. Ref. #21)	1
2	92-4136	Asm-Backplate LH (Incl. Ref. #24)	1	*	92-4124	Asm-Pawl RH (Incl. Ref. #21)	1
*	92-4100	Asm-Backplate RH (Incl. Ref. #24)	1	20	92-4150	Spring-Adjuster, LH	1
3	92-4146	Plug	1	*	92-4151	Spring-Adjuster, RH	1
4	92-4113	Screw-Bleed	1	21		Pin-Pawl	1
5	92-4114	Cap-Bleed Screw	1	22	92-4131	Washer-Hold Down	2
6		Body	1	23	92-4152	Spring-Hold Down	2
7		Lever-Operating LH/RH	1	24		Guide-Pipe	1
8		Pin	1	25	92-4134	Plug-Inspection	1
9		Spring	1	26	92-4133	Pin-Hold Down	2
10		Seal-'L' Type	2	*	92-4144	Asm-Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4145	Asm-Adjuster RH (Incl. Ref. #16-18)	1
12		Cover-Dust	2	*	92-4118	Asm-Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4143	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4117	Asm-Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4147	Spring-Shoe, Upper LH	1	*	92-4119	Kit-Seal (Incl. Ref. #10 & 12)	1
*	92-4148	Spring-Shoe, Upper RH	1	*	99-9417	Asm-Rear Brake RH (Complete)	1
15	92-4149	Spring-Shoe, Lower	1	*	99-9416	Asm-Rear Brake LH (Complete)	1
16		Pushrod-Female LH	1				
*		Pushrod-Female RH	1				
17		Bolt-Adjuster	1				
18		Sleeve-Adjuster	1				

 *Not Illustrated

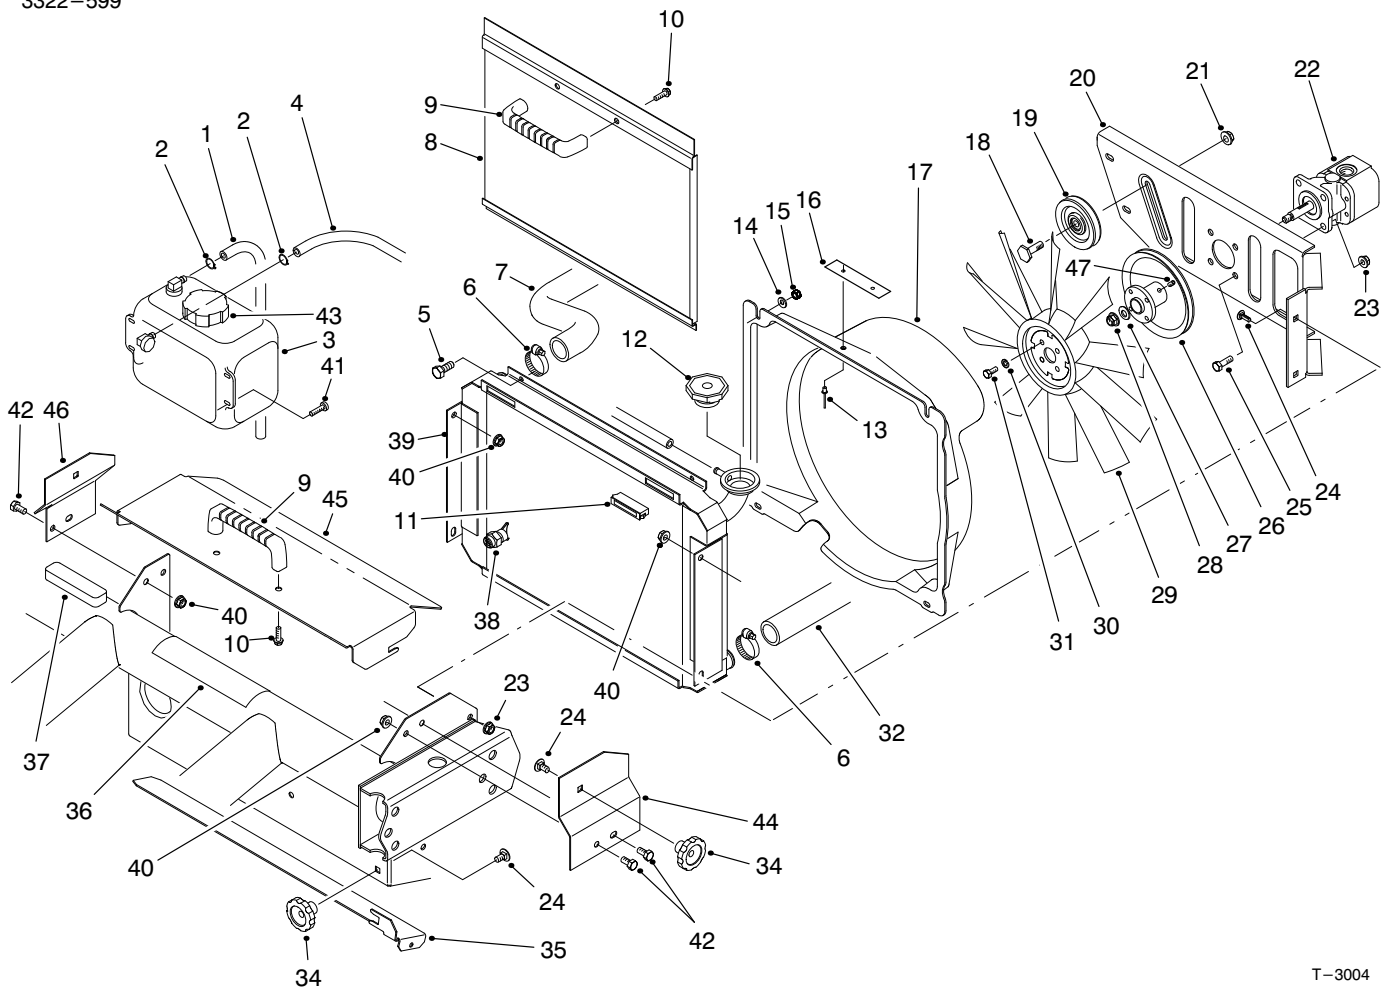


T-3004

RADIATOR & HYDRAULIC PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	71-3381	Tube-Overflow	2
2	92-2379	Clamp-Hose	2
3	87-3710	Asm-Overflow Reservoir (Incl. Ref. #43)	1
4	71-3383	Hose-Overflow	1
5	321-4	Screw-HH	4
6	2412-34	Clamp-Hose	2
7	87-7330	Hose-Radiator Upper	1
8	93-7103	Screen-Radiator	1
9	65-5100	Handle	2
10	46-8091	Screw-HFH	4
11	58-4250	Magnet	2
12	66-3240	Cap-Radiator	1
13	3290-271	Rivet-Pop	2
14	3256-22	Washer-Flat	4
15	3296-42	Nut-Lock	4
16	76-8750	Plate-Warning	1
17	92-4198	Asm-Fan Shroud (Incl. Ref. #13 & 16)	1
18	32141-86	Screw-Leveler	1
19	63-8140	Pulley	1
20	93-7088	Support-Fan	1
21	3290-357	Nut-HFH	1
22	99-1054	Asm-Hydraulic Pump	1
23	3296-29	Nut-Lock	8

Ref. No.	Part No.	Description	No. Used
24	3230-23	Bolt-CARR	7
25	322-5	Screw-HH	4
26	94-5237	Pulley	1
27	3256-45	Washer-Flat	1
28	3296-5	Nut-Lock	1
29	84-1880	Fan	1
30	3253-3	Washer-Lock	4
31	321-3	Screw-HH	4
32	87-4150	Hose-Radiator Lower	1
34	19-4050	Knob	3
35	87-9300	Door-Clean Out	1
36	87-9420	Decal-Caution	1
37	87-9810	Foam-Overflow Tank	1
38	92-4111	Petcock-Radiator	1
39	93-7051	Asm-Radiator (Incl. Ref. #38)	1
40	32128-20	Nut-Lock	6
41	3250-20	Screw-RH	4
42	322-2	Screw-HH	6
43	87-7050	Cap-Reservoir	1
44	93-8938	Bracket-Cover Mount LH	1
45	93-8940	Cover-Radiator	1
46	93-8939	Bracket-Cover Mount RH	1
47	3245-31	Screw-Set	1

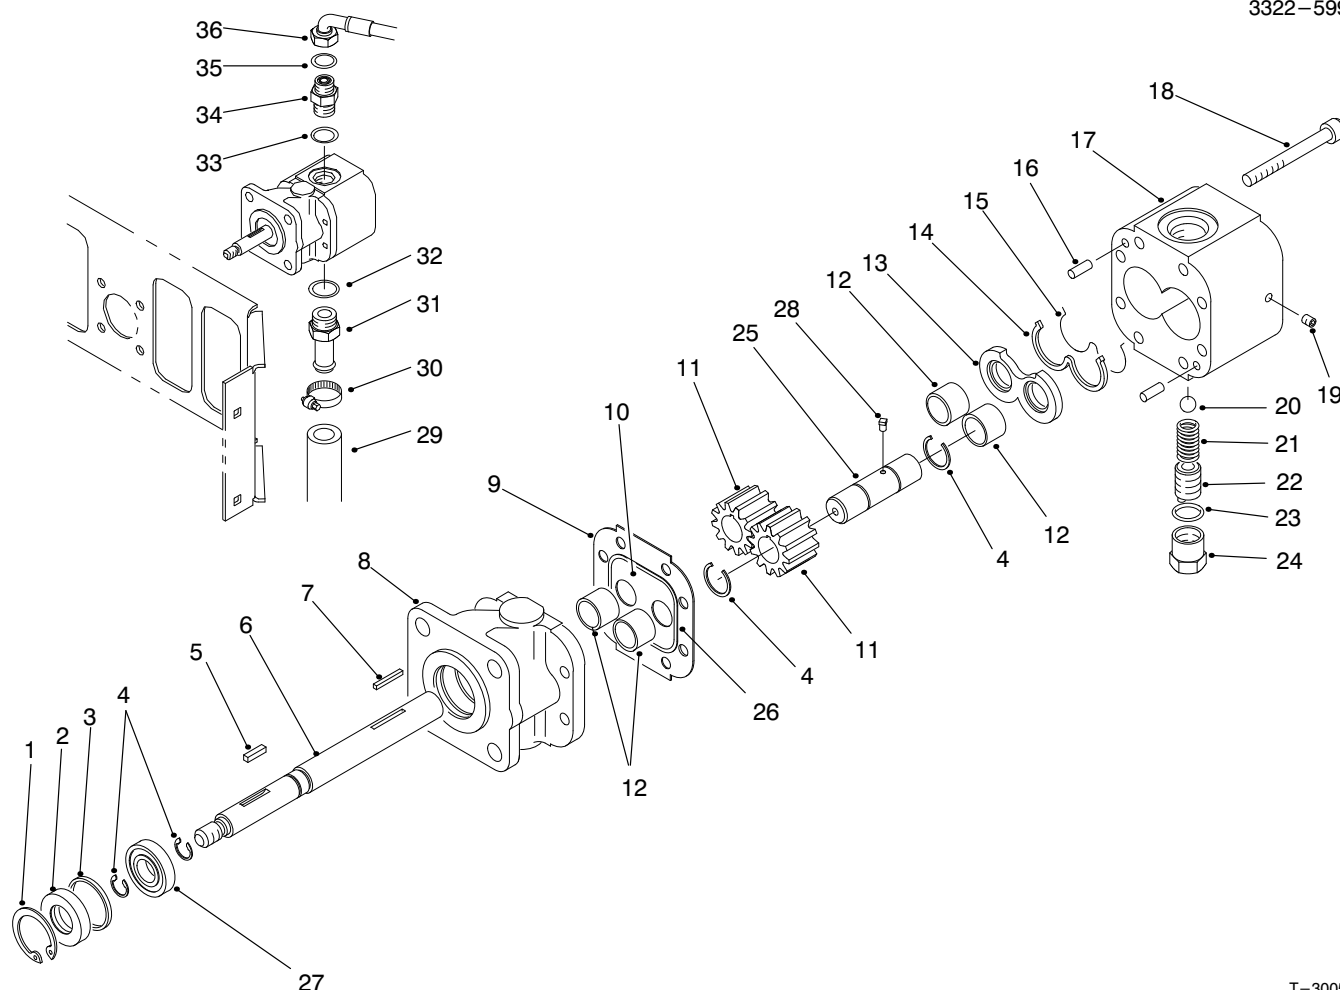 


T-3005

HYDRAULIC PUMP ASSEMBLY NO. 99-1054

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-41	Ring-Retaining	1	19	92-2185	Plug	1
2	92-2195	Seal-Oil	1	20	92-2193	Ball	1
3	92-2186	Spacer	1	21	99-1060	Spring	1
4	92-2178	Ring-Crescent	4	22	92-2174	Screw-Adjusting	1
5	92-2179	Key-Square	1	23	92-2180	Gasket-Copper	1
6	92-2189	Shaft-Drive	1	24	92-2184	Cap-Relief Valve	1
7	92-2177	Pin-Shear	1	25	92-2190	Shaft-Idler	1
†8		Stator	1	26	92-2198	Seal	1
9	92-2182	Plate-Seal	1	27	92-2191	Bearing	1
10	92-2183	Plate-Wear	1	28	92-2199	Key-Ball	1
11	92-2175	Gear	2	29	87-7350	Hose-Suction	1
12	92-2192	Bearing	4	30	2412-34	Clamp	1
13	92-2181	Plate-Pressure	1	31	354-136	Fitting-Straight	1
14	92-2197	Seal-Back Up	1	32	340-7	O-Ring	1
15	92-2196	Seal-Pressure Plate	1	33	237-79	O-Ring	1
16	92-2176	Pin-Dowel	2	34	340-3	Fitting-Adapter	1
17	92-2187	Housing-Gear, End	1	35	237-22	O-Ring	1
18	92-2173	Screw-CSH	8	36	99-1053	Asm-Hose	1

 † Not Serviced Separately.

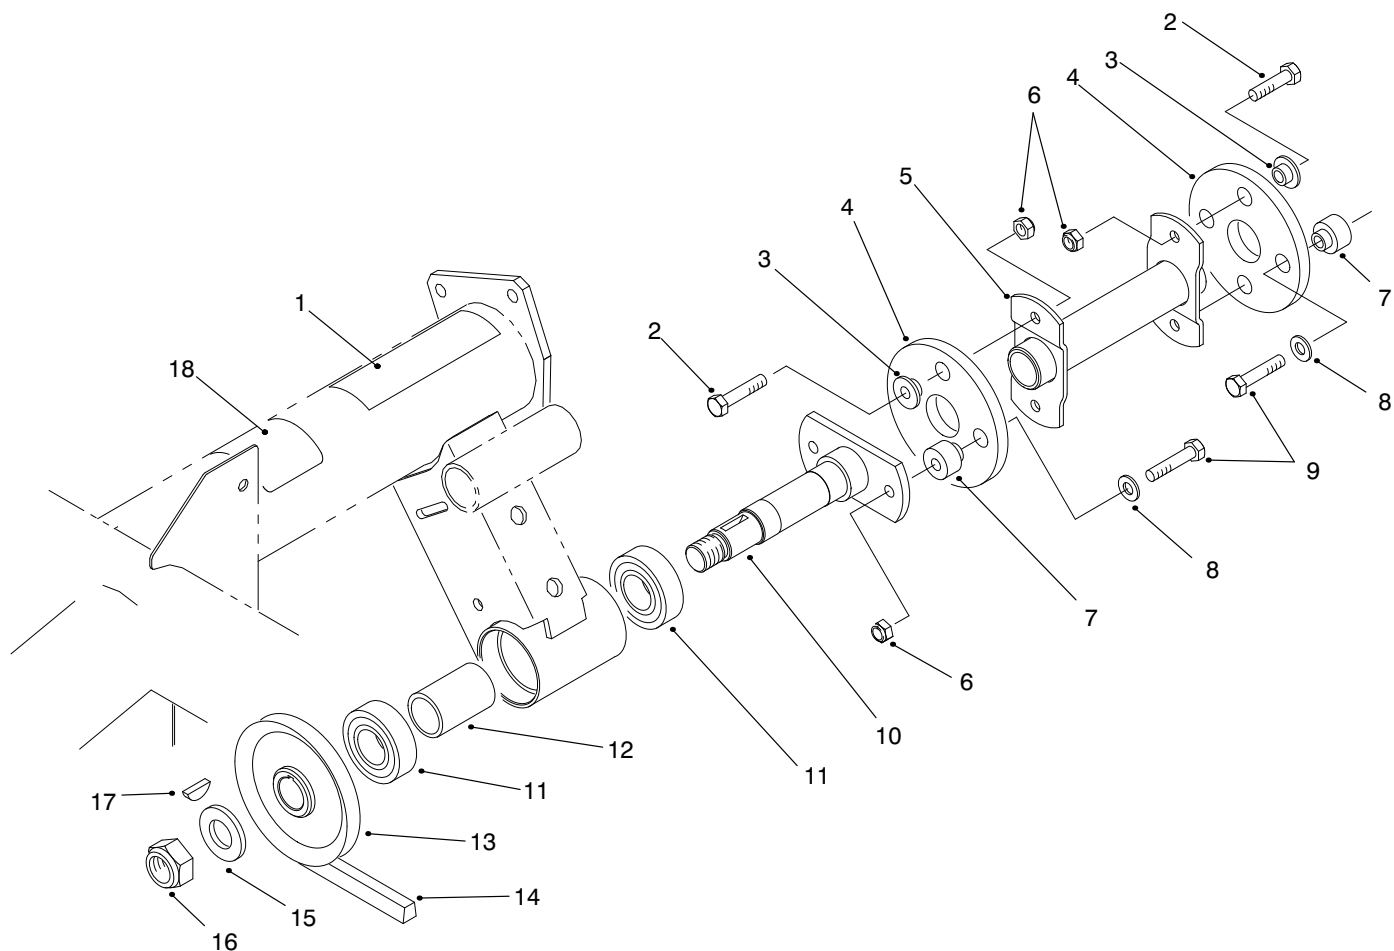


T-1660-1

HYDRAULIC PUMP DRIVE ASM

Ref. No.	Part No.	Description	No. Used
1	80-8040	Decal-Caution	1
2	322-5	Screw-HH	4
3	27-6600	Spacer-Thin	4
4	44-2230	Disc-Rubber	2
5	87-4120	Driveshaft	1
6	3296-29	Nut-Lock	6
7	27-6590	Spacer-Thick	4
8	3256-3	Washer-Flat	4
9	322-7	Screw-HH	4

Ref. No.	Part No.	Description	No. Used
10	87-2720	Driveshaft	1
11	251-82	Bearing-Ball	2
12	87-2750	Spacer-Bearing	1
13	87-3370	Pulley	1
14	93-7140	Belt-V	1
15	3256-28	Washer-Flat	1
16	3296-15	Nut-Lock	1
17	3257-7	Key-Woodruff	1
18	83-9150	Decal-Fluid	1

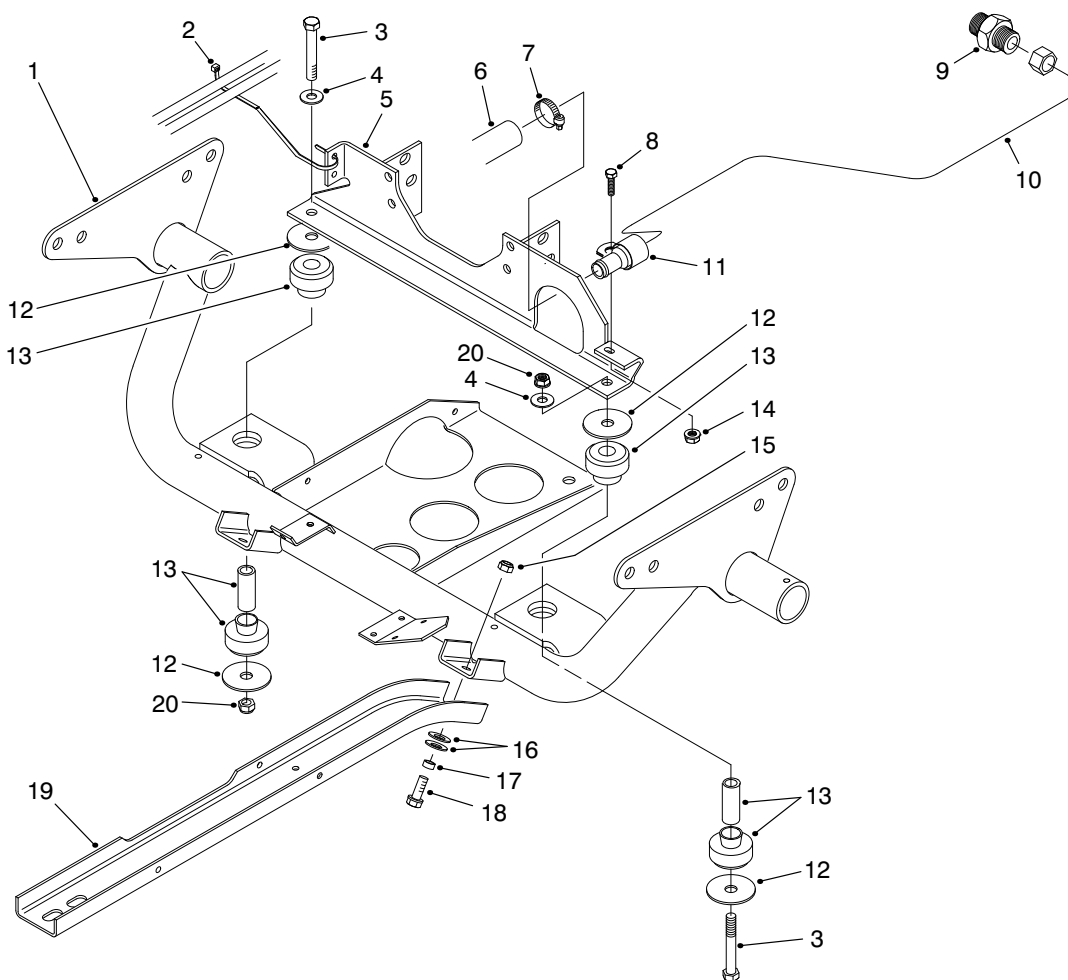 


T-1661-1

ENGINE FRAME ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7099	Frame-Engine	1	11	2412-106	Clamp-R	1
2	3290-378	Tie-Cable	1	12	87-5100	Washer-Flat	4
3	324-12	Screw-HH	2	13	87-4970	Asm-Engine Mount	2
4	3256-25	Washer-Flat	2	14	32128-33	Nut-HHF	1
5	93-7100	Mount-Engine	1	15	3296-39	Nut-Lock	6
6	87-7350	Hose-Suction	1	16	3290-413	Washer-Belleville	12
7	2412-34	Clamp-Hose	1	17	76-9100	Spacer	6
8	321-4	Screw-HH	1	18	3234-11	Screw-HH	6
9	87-7290	Fitting-Hydraulic	1	19	87-4730	Guard-Belly	2
10	87-6900	Tube-Hydraulic	1	20	3296-48	Nut-Lock	2

 3322-599

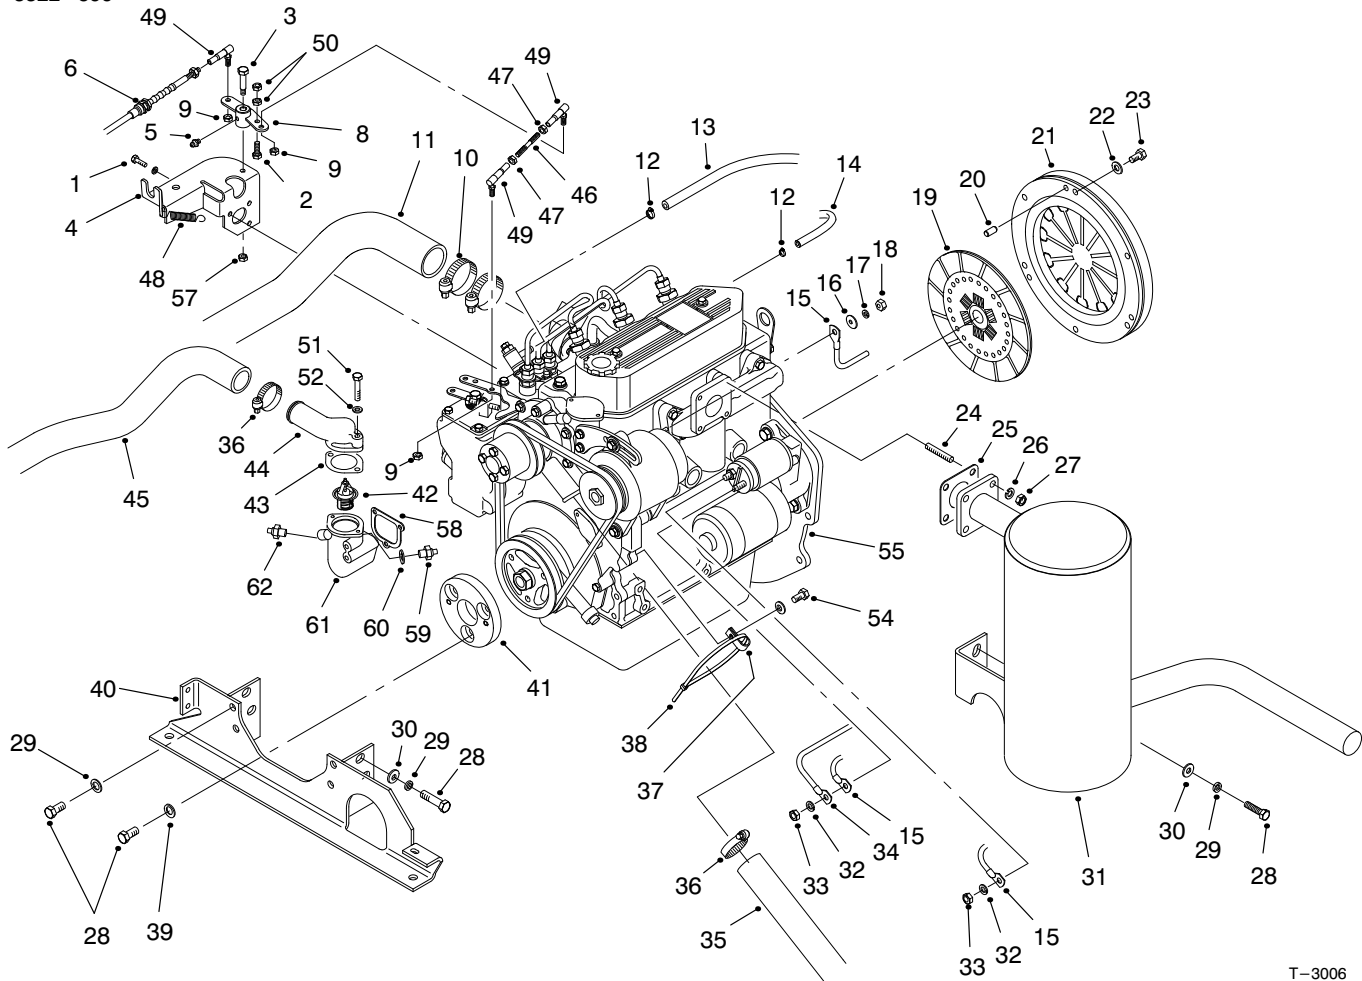


T-3006

ENGINE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used
1	42-9440	Screw-HH	3
2	321-5	Screw-HH	1
3	7-0030	Bolt-Shoulder	1
4	94-5259	Bracket-Accelerator	1
5	302-5	Fitting-Grease	1
6	94-3836	Cable-Accelerator	1
8	94-5256	Bell Crank	1
9	3296-3	Nut-Lock	3
10	2412-92	Clamp-Hose	2
11	94-5238	Hose-Air Intake	1
12	2412-108	Clamp-Hose	2
13	27-5360	Hose-Fuel	1
14	98-2945	Hose	1
15	93-7130	Harness-Wire	1
16	5-3637	Washer-Flat	1
17	43-5920	Washer-Lock	1
18	48-7880	Nut-Lock	1
19	87-4700	Disc-Clutch	1
20	51-5610	Pin-Alignment	3
21	87-4690	Cover-Clutch	1
22	3253-4	Washer-Lock	6
23	33114-016	Screw-HH	6
24	42-9570	Stud-Muffler	4
25	42-9110	Gasket-Muffler	1
26	42-9850	Washer-Lock	4
27	33014-00	Nut	6


Ref. No.	Part No.	Description	No. Used
28	63-7790	Screw-HH	12
29	48-9590	Washer-Lock	10
30	3256-25	Washer	6
31	94-5213	Muffler	1
32	3254-2	Washer-Lock	2
33	33014-00	Nut-Lock	2
34	87-3070	Cable-Battery Pos.	1
35	87-4150	Hose-Radiator Lower	1
36	2412-34	Clamp	2
37	2412-149	Clamp-R	1
38	3290-379	Tie-Cable	1
39	36-4790	Washer-Thrust	3
40	93-7100	Mount-Engine	1
41	87-4110	Puck-Engine Adapter	1
42	93-8974	Thermostat	1
43	67-4430	Gasket-Thermostat	1
44	87-3410	Housing-Thermostat	1
45	87-7330	Hose-Radiator Upper	1
46	93-8995	Rod-Threaded	1
47	3220-1	Nut-Jam	2
48	86-4760	Spring	3
49	18-1720	Joint-Ball	3
50	3296-56	Nut-Lock	2
51	33113-045	Screw-HH	2
52	33093-00	Washer-Flat	2
54	42-9440	Bolt & Washer	1

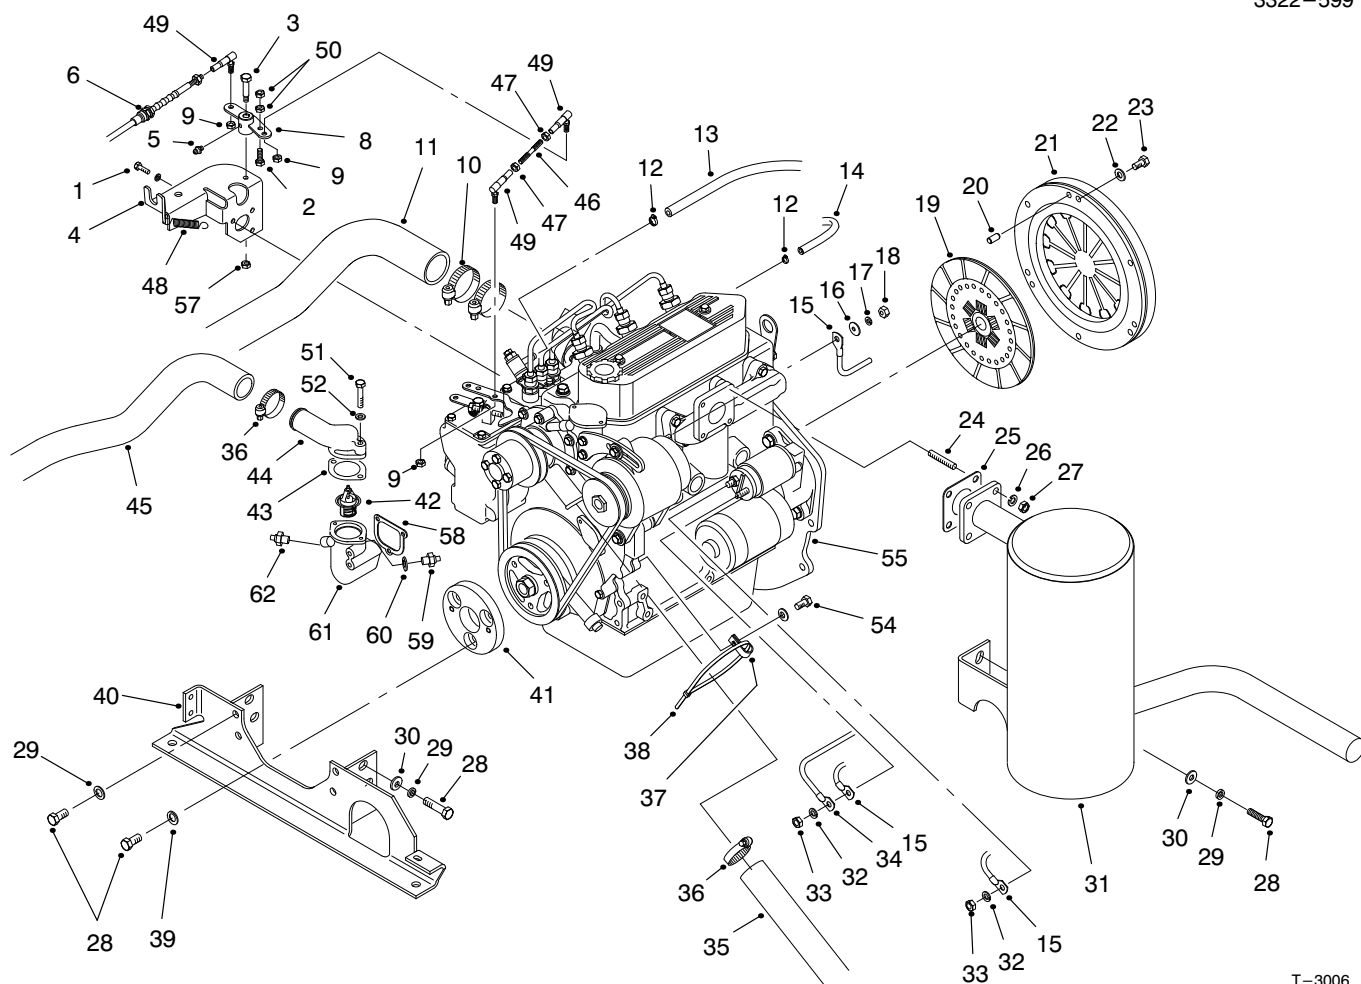 

ENGINE INSTALLATION ASM (Continued)

Ref. No.	Part No.	Description	No. Used
55	98-2920	Engine	1
57	3296-29	Nut-Lock	1
58	67-4460	Gasket-Fitting	1
59	93-3526	Asm-Switch, Thermo	1

Ref. No.	Part No.	Description	No. Used
60	67-4490	Gasket	1
61	67-4450	Fitting-Thermostat	1
62	93-3525	Gauge-Water Temp.	1

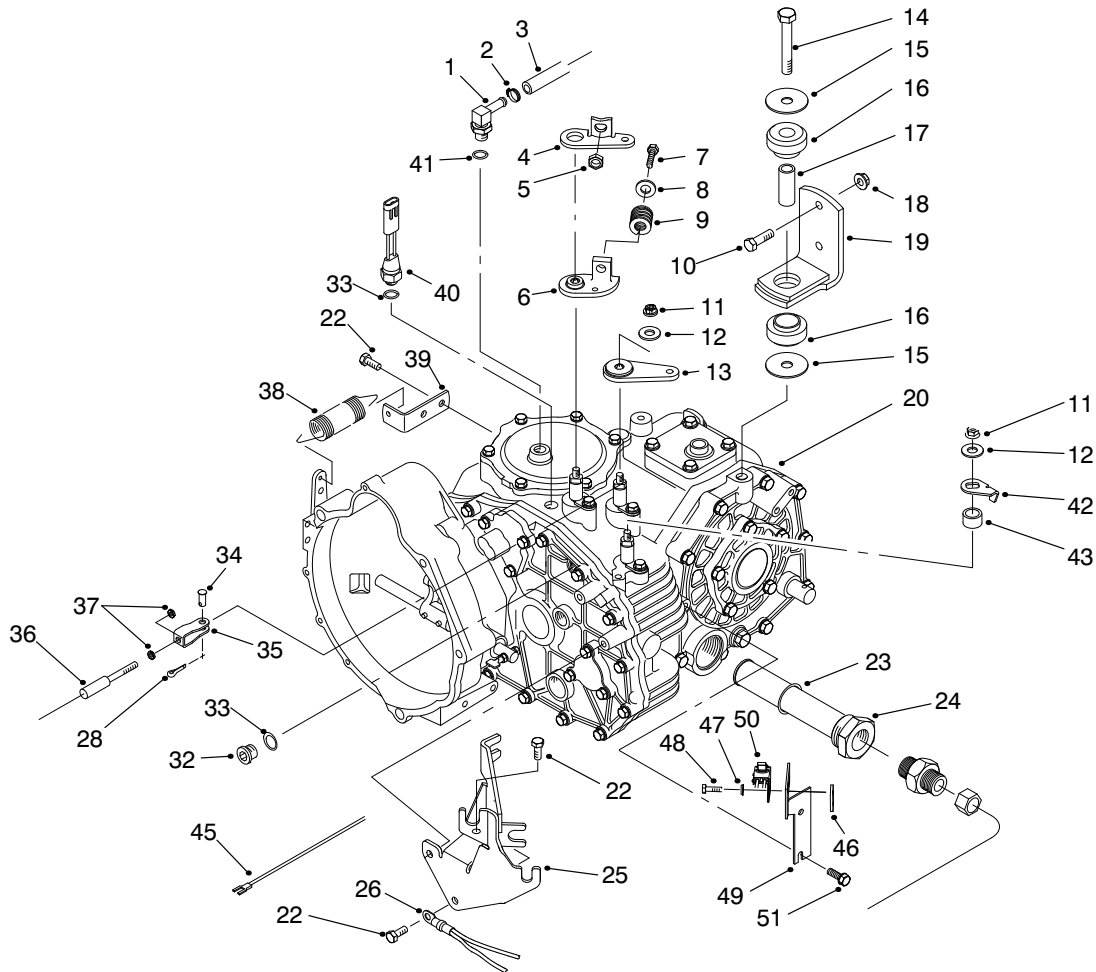 


T-3007-2

TRANSAXLE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used
1	354-135	Fitting-Hydraulic 90° (Incl. Ref. #41)	1
2	2412-36	Clamp-Hose	1
3	87-5730	Hose-Hydraulic	1
4	87-8250	Plate-Shift Arm	1
5	32128-21	Nut-HHF	1
6	87-7970	Arm-Shift	1
7	323-10	Screw-HH	1
8	3256-4	Washer-Flat	1
9	87-6910	Spring-Compression	1
10	323-7	Screw-HH	4
11	48-9520	Nut-Lock	3
12	80-6990	Washer-Flat	3
13	87-7960	Lever-Shift Arm	1
14	3215-1	Screw-HH	2
15	87-5100	Washer	4
16	87-4970	Asm-Transaxle Mount (Incl. Ref. #17)	2
17		Spacer-Mount	2
18	3296-39	Nut-Lock	4
19	87-5800	Bracket-Mount	2
20	87-9250	Asm-Transaxle	1
22	33114-020	Screw-HH	5
23	237-123	O-Ring	1


Ref. No.	Part No.	Description	No. Used
24	87-3990	Asm-Oil Strainer (Incl. Ref. #23)	1
25	87-4820	Bracket-Cable	1
26	87-3080	Cable-Battery Neg.	1
28	3272-6	Pin-Cotter	2
32	353-989	Plug-Hollow	1
33	237-30	O-Ring	2
34	283-62	Pin-Clevis	2
35	87-2310	Clevis-Cable	2
36	87-4260	Asm-Shift Cable (Incl. Ref. #37)	2
37	3220-1	Nut-Jam	2
38	68-9950	Spring-Extension	1
39	87-7170	Bracket-Clutch Spring	1
40	72-4310	Switch-Ball N.C.	1
41	237-42	O-Ring	1
42	99-1052	Plate-Hi-Lo	1
43	92-6982	Spacer-Plate	1
45	93-3928	Harness-Wire, Reverse	1
46	93-9539	Strip-Tapped	1
47	3256-14	Washer-Flat	2
48	32105-13	Screw-HH	2
49	93-3919	Bracket-Switch, Reverse	1
50	92-7905	Switch-Reverse	1
51		Screw-HH	2

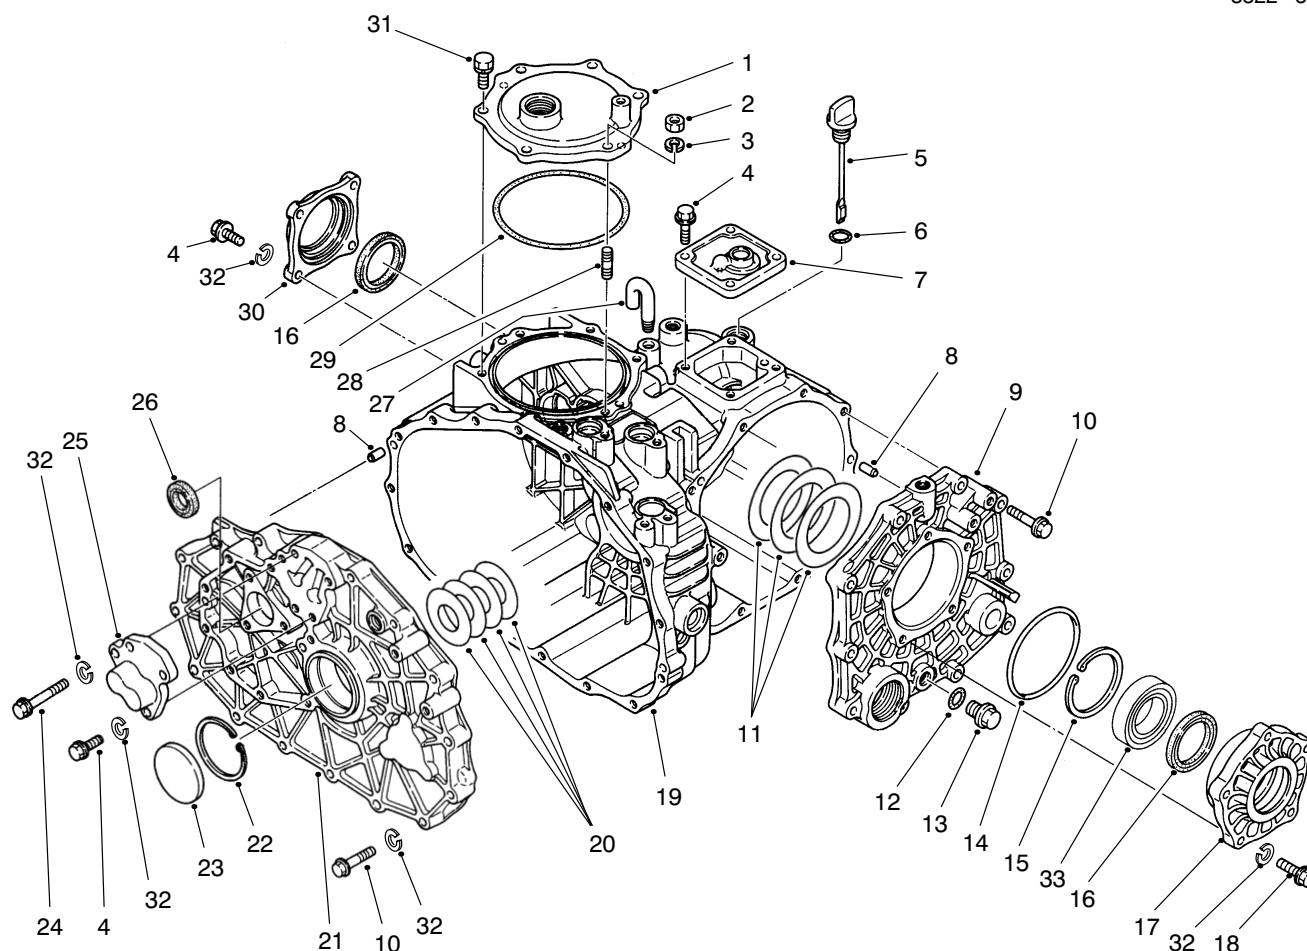 

T-1535

TRANSAXLE CASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0656	Cover-P.T.O.	1	17	92-0654	Carrier-Differential	1
2	48-7930	Nut-Hex.	1	18	48-7730	Screw-HH	5
3	92-0762	Washer-Lock	1	19	92-0651	Case-Transaxle	1
4	60-6750	Screw-HH	11	20	92-0808	Shim Set	1
5	92-0662	Cap-Oil	1	21	92-0657	Plate-Center	1
6	92-0788	O-Ring	1	22	92-0759	Ring-Retaining	1
7	92-0652	Cover-Upper	1	23	92-0807	Cap-Sealing	1
8	92-0765	Pin-Alignment	4	24	48-7560	Screw-HH	1
9	92-0653	Cover-Side	1	25	92-0706	Cap-Fork Shaft	1
10	42-9530	Screw-HH	25	26	92-0791	Seal-Oil	1
11	92-0809	Shim Set	1	27	92-0743	Breather-Air	1
12	92-0787	O-Ring	1	28	92-0804	Stud	1
13	92-0773	Asm-Drain Plug (Incl. Ref. #12)	1	29	92-0790	O-Ring	1
14	92-0789	O-Ring	1	30	92-0655	Cover-Seal	1
15	92-0760	Ring-Retaining	1	31	92-0796	Screw-HH	5
16	92-0793	Seal-Oil	2	32	42-9850	Washer-Lock	42
				33	92-0775	Bearing-Ball	2

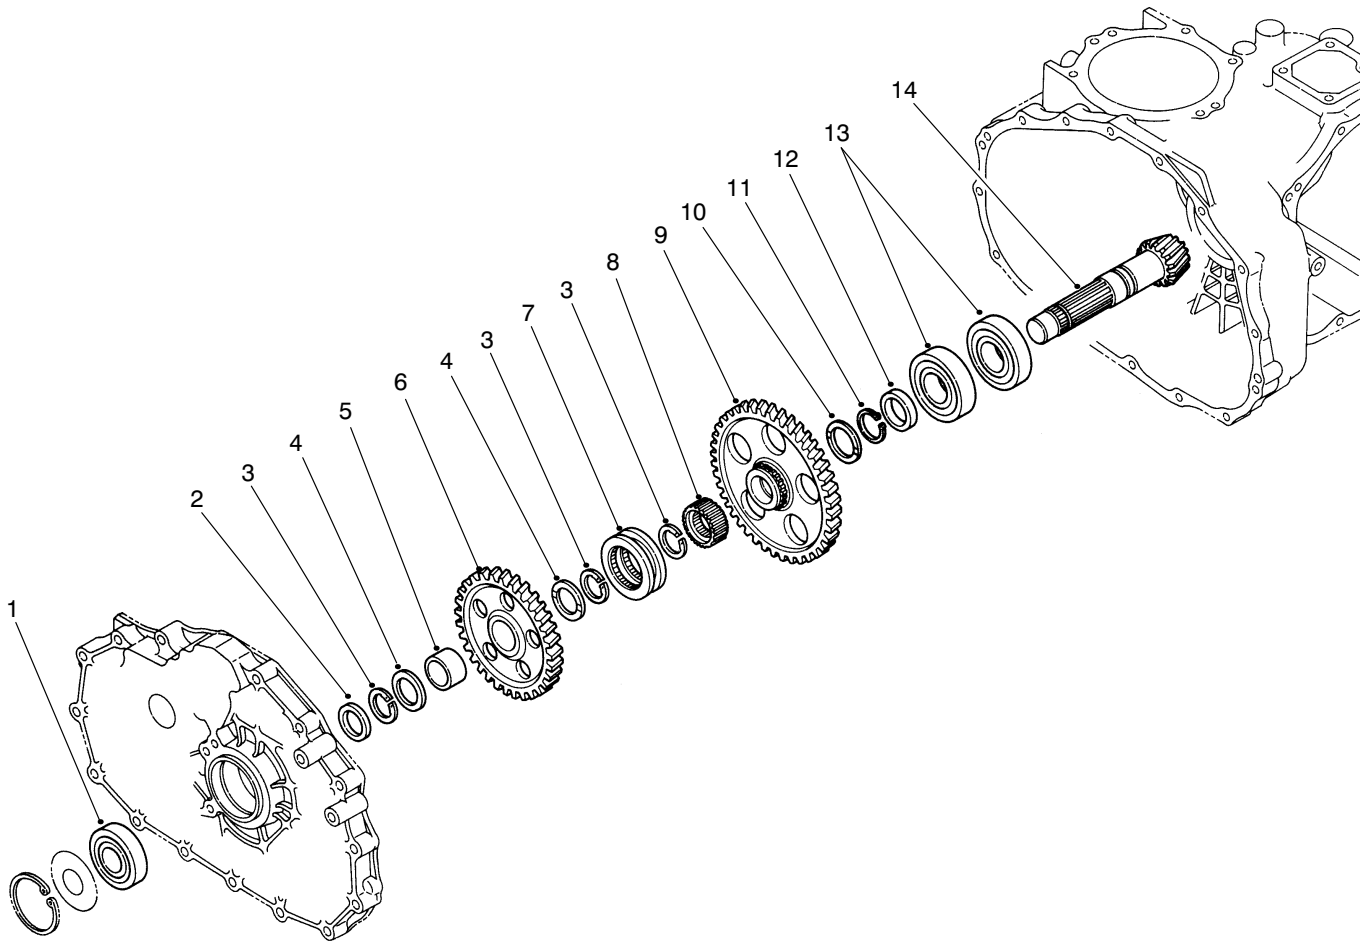 


T-1536

COUNTERSHAFT ASM

Ref. No.	Part No.	Description	No. Used
1	92-0712	Bearing-Ball	1
2	92-0716	Collar	1
3	92-0764	Ring-Retaining	3
4	92-0711	Washer-Thrust	2
5	92-0783	Sleeve-Inner	1
6	92-0715	Gear-49T	1
7	92-0718	Shifter-Hi-Lo	1
8	92-0719	Collar-Spline	1


Ref. No.	Part No.	Description	No. Used
9	92-0717	Gear-71T	1
10	92-0741	Washer-Thrust	1
11	92-0755	Ring-Retaining	1
12	92-0713	Collar	1
13	92-0714	Bearing-Ball	2
14	92-0710	Asm-Counter Shaft (Incl. Ring Gear)	1

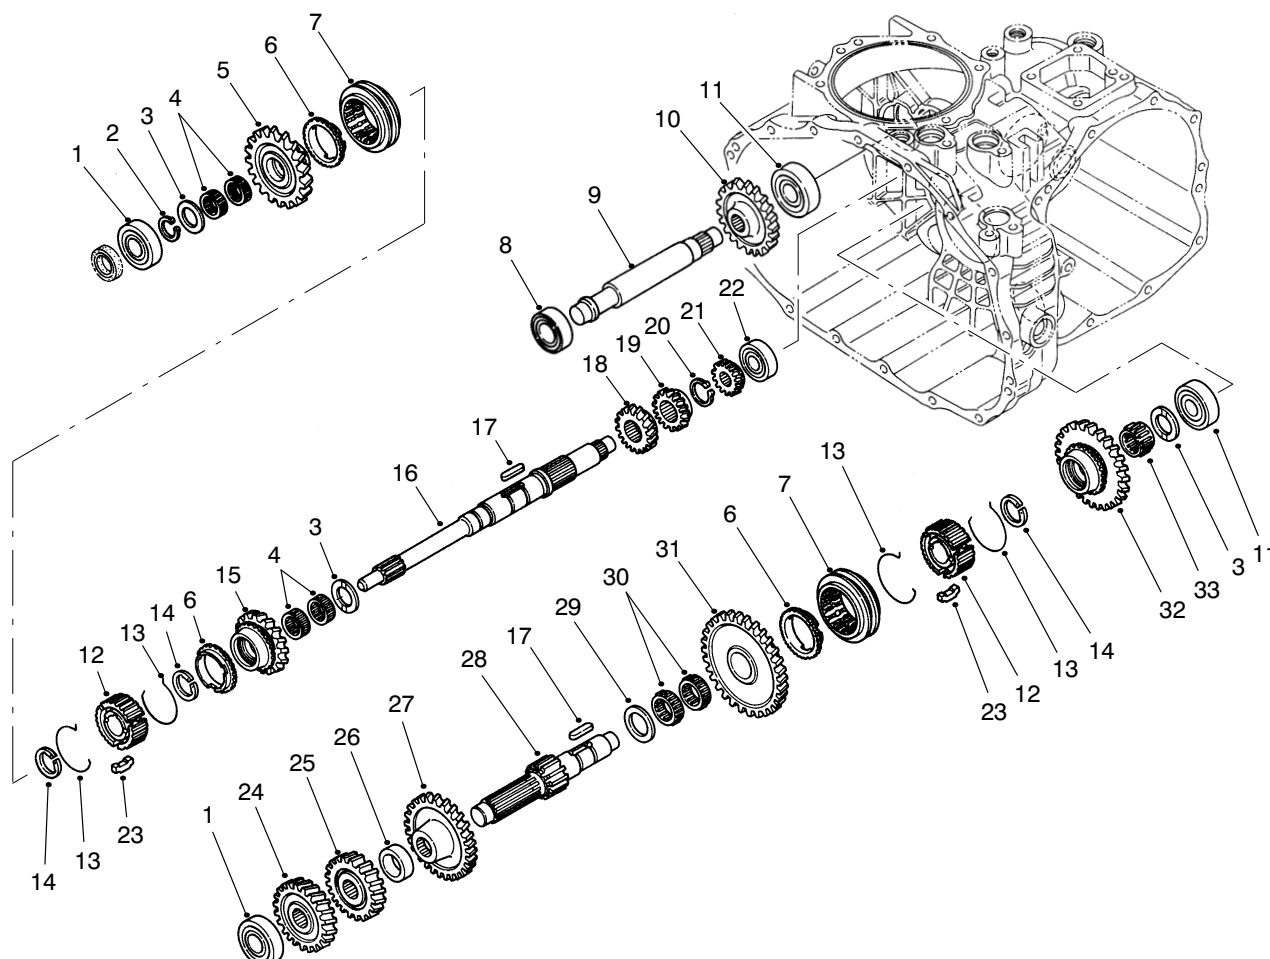 

T-1533

TRANSAXLE GEAR SHAFTS ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	251-8	Bearing-Ball	2	18	92-0687	Gear-16T	1
2	92-0753	Ring-Retaining	1	19	92-0672	Gear-18T	1
3	92-0740	Washer-Thrust	3	20	92-0754	Ring-Retaining	1
4	92-0781	Bearing-Needle	4	21	92-0673	Gear-14T	1
5	92-0820	Gear-27T	1	22	92-0650	Bearing-Ball	1
6	92-0667	Ring-Synchro	3	23	92-0665	Key-Synchro	6
7	92-0668	Shifter-Synchro	2	24	92-0822	Gear-28T	1
8	251-346	Bearing-Ball	1	25	92-0679	Gear-23T	1
9	92-0824	Shaft-Reverse Idler	1	26	92-0680	Collar	1
10	92-0684	Gear-33T	1	27	92-0823	Gear-43T	1
11	92-0778	Bearing-Ball	2	28	92-0674	Shaft-Reduction	1
12	92-0664	Hub-Synchro	2	29	92-0682	Washer-Thrust	1
13	92-0666	Spring-Synchro	4	30	92-0681	Bearing-Needle	2
14	92-0763	Ring-Retaining	3	31	92-0677	Gear-49T	1
15	92-0821	Gear-24T	1	32	92-0819	Gear-40T	1
16	92-0663	Shaft-Main	1	33	92-0782	Bearing-Needle	1
17	92-0772	Key	2				

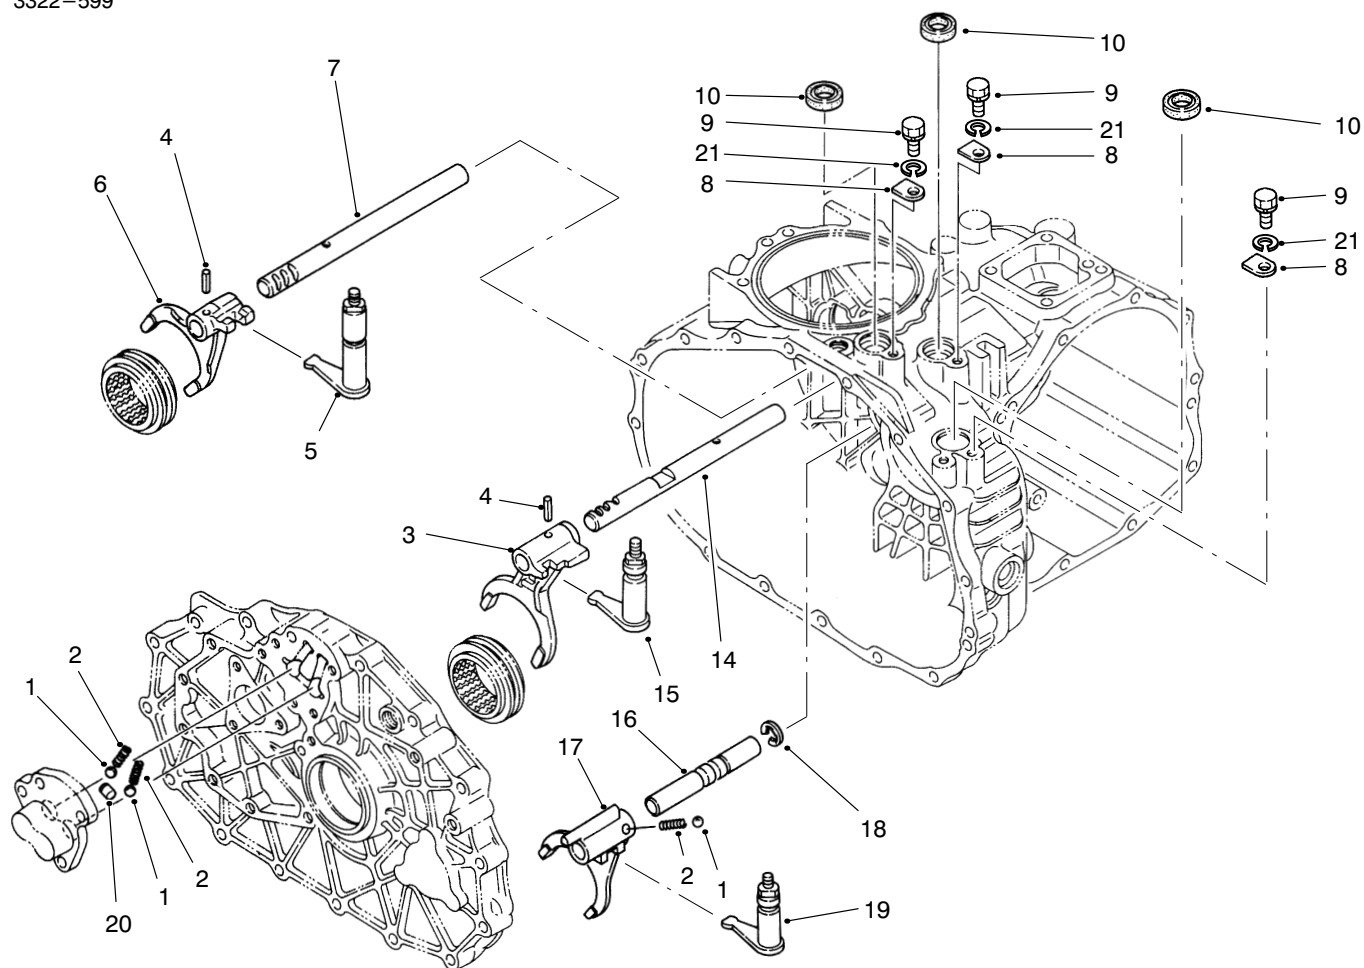 


T-1530

SHIFT FORK ASM

Ref. No.	Part No.	Description	No. Used
1	92-0785	Ball	3
2	92-0731	Spring-Compression	3
3	92-0700	Fork-Shift R-1	1
4	92-0769	Pin-Spring	2
5	92-0817	Arm-Shift Fork 2-3	1
6	92-0701	Fork-Shift 2-3	1
7	92-0699	Shaft-Fork 2-3	1
8	92-0732	Plate-Keeper	3
9	48-7700	Screw-HH	3


Ref. No.	Part No.	Description	No. Used
10	92-0729	Seal-Oil	3
14	92-0698	Shaft-Fork R-1	1
15	92-0816	Arm-Shift Fork R-1	1
16	92-0708	Shaft-Fork Hi-Lo	1
17	92-0709	Fork-Shift Hi-Lo	1
18	92-0761	Ring-Retaining	1
19	92-0818	Arm-Shift Fork Hi-Lo	1
20	92-0705	Lock-Spindle	1
21	42-9850	Washer-Lock	3

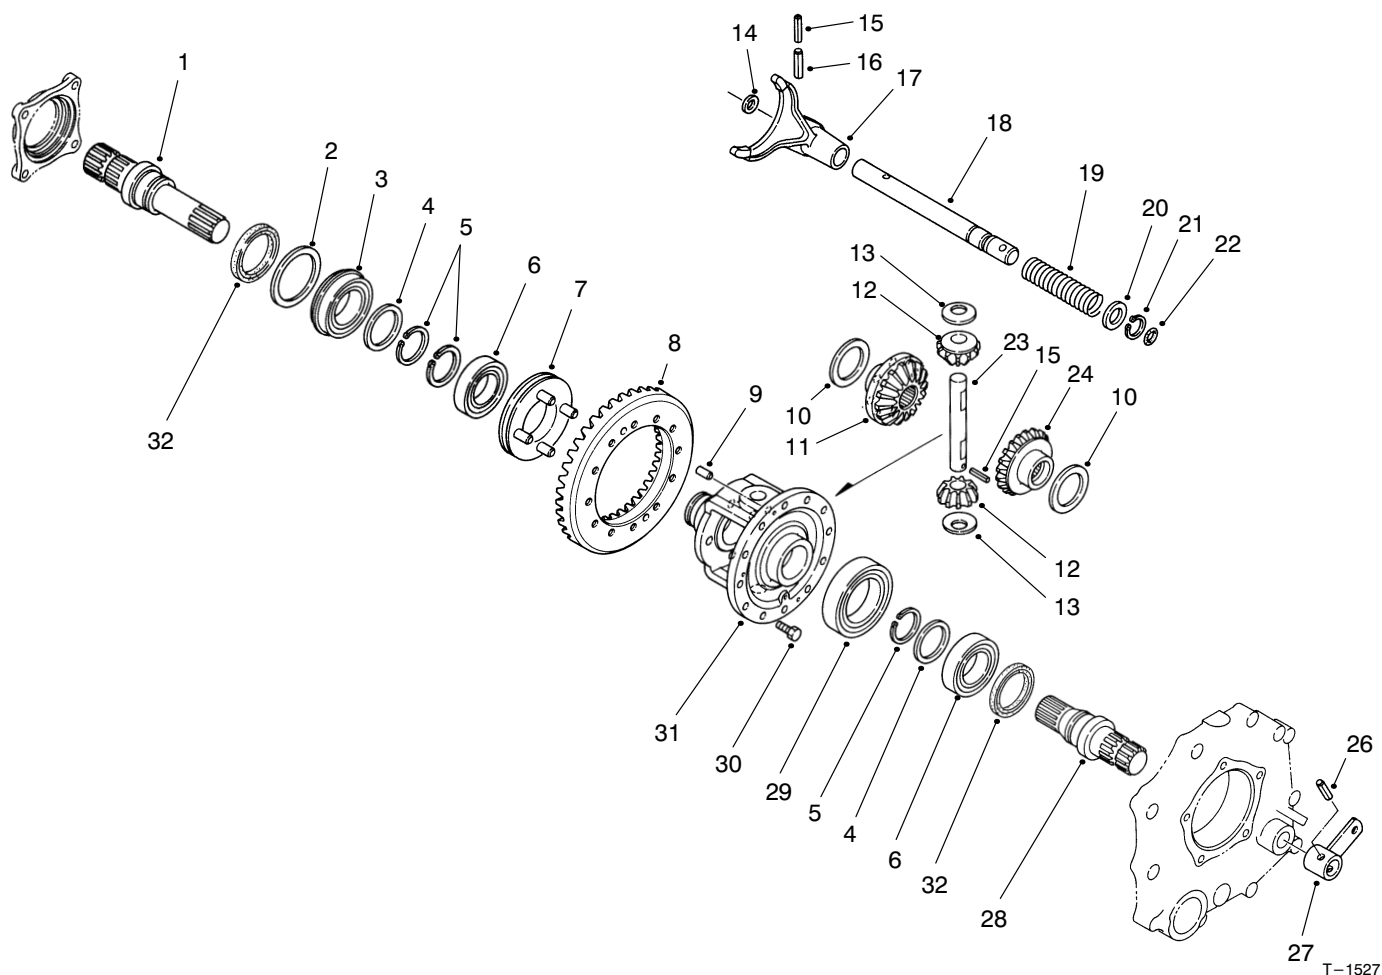 

T-1527

DIFFERENTIAL GEAR ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0726	Shaft-Axle RH	1	16	92-0771	Pin-Spring	1
2	92-0728	Washer	1	17	92-0721	Fork-Differential Lock	1
3	92-0780	Bearing-Ball	1	18	92-0722	Shaft-Lock Fork	1
4	92-0727	Washer	2	19	92-0723	Spring-Compression	1
5	92-0756	Ring-Retaining	3	20	92-0733	Washer	1
6	92-0775	Bearing-Ball	2	21	92-0753	Ring-Retaining	1
7	92-0730	Slider-Differential Lock	1	22	92-0787	O-Ring	1
8	92-0710	Asm-Ring Gear (Incl. Counter Shaft)	1	23	92-0749	Shaft-Pinion	1
9	92-0765	Pin-Alignment	2	24	92-0745	Gear-Side LH	1
10	92-0747	Washer-Thrust	2	26	92-0770	Pin-Spring	1
11	92-0746	Gear-Side RH	1	27	92-0724	Arm-Differential Lock	1
12	92-0748	Gear-Pinion	2	28	92-0725	Shaft-Axle LH	1
13	92-0750	Washer	2	29	92-0776	Bearing-Ball	1
14	92-0744	Washer	1	30	92-0803	Screw-HFH	12
15	92-0768	Pin-Spring	2	31	92-0720	Case-Differential	1
				32	92-0793	Seal-Oil	2

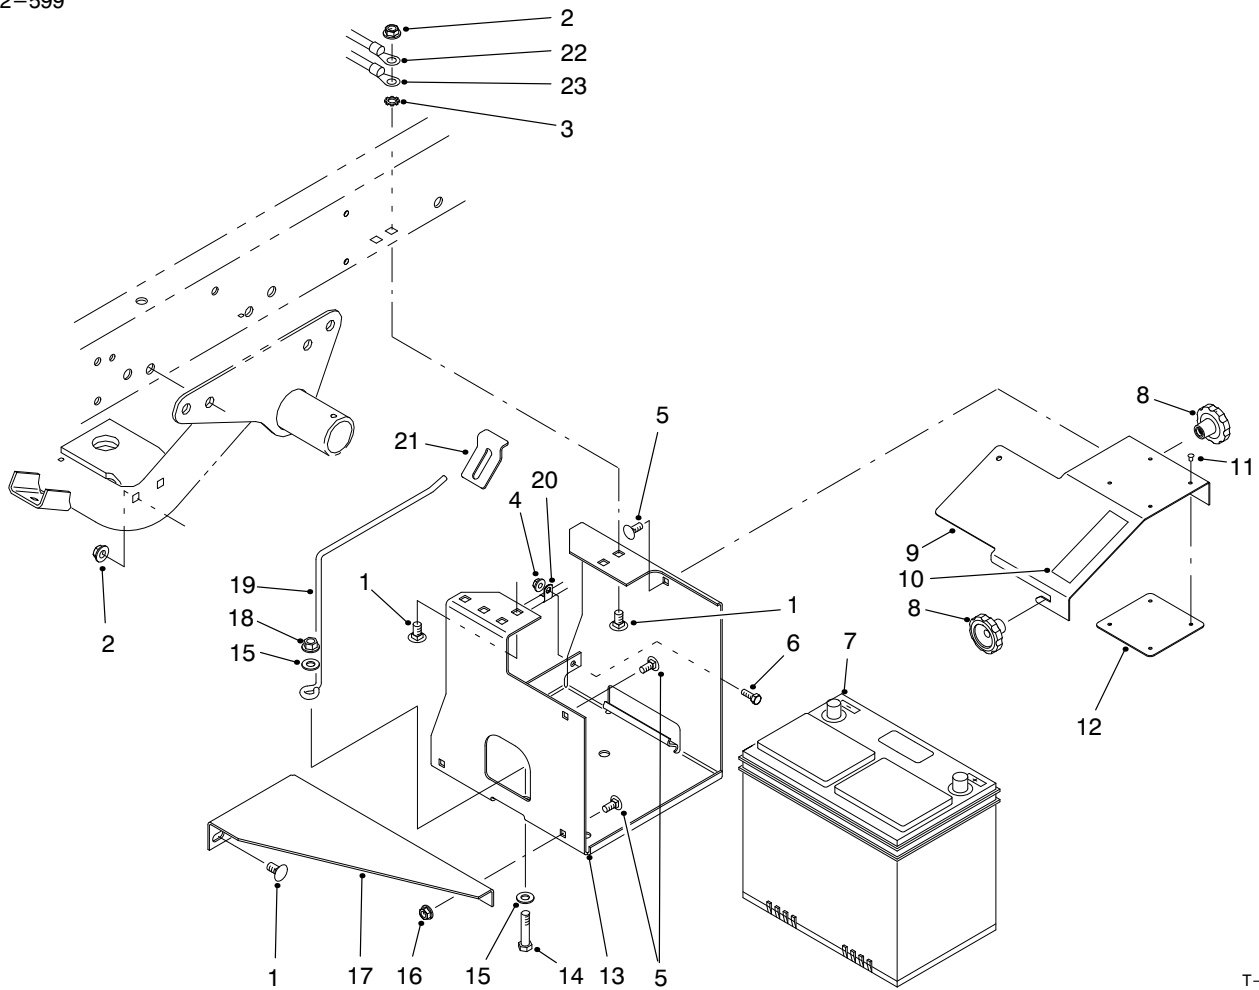 


T-3008

BATTERY MOUNT ASM

Ref. No.	Part No.	Description	No. Used
1	3231-21	Bolt-CARR	6
2	3290-357	Nut-HFH	6
3	3255-9	Washer-Lock ETLW	1
4	32128-33	Nut-HHF	1
5	3230-23	Bolt-CARR	4
6	321-4	Screw-HH	1
7	87-7390	Battery	1
8	19-4050	Knob	2
9	87-5130	Cover-Battery Base	1
10	36-3400	Decal-No Step	1
10	93-6687	Decal-No Step (Europe)	1
10	84-2780	Decal-No Step (Japan)	1
11	3296-27	Rivet-Plastic	4

Ref. No.	Part No.	Description	No. Used
12	87-7620	Shield-Plastic	1
13	87-5120	Bracket-Battery Base	1
14	323-9	Screw-HH	1
15	3256-24	Washer-Flat	2
16	32128-20	Nut-HHF	2
17	87-5110	Support-Lower	1
18	3296-39	Nut-Lock	1
19	87-7600	Rod-Battery Support	1
20	2412-89	Clamp-R	1
21	87-7610	Tab-Battery Support	1
22	93-7130	Harness-Wire Rear	1
23	87-3080	Cable-Battery Neg.	1

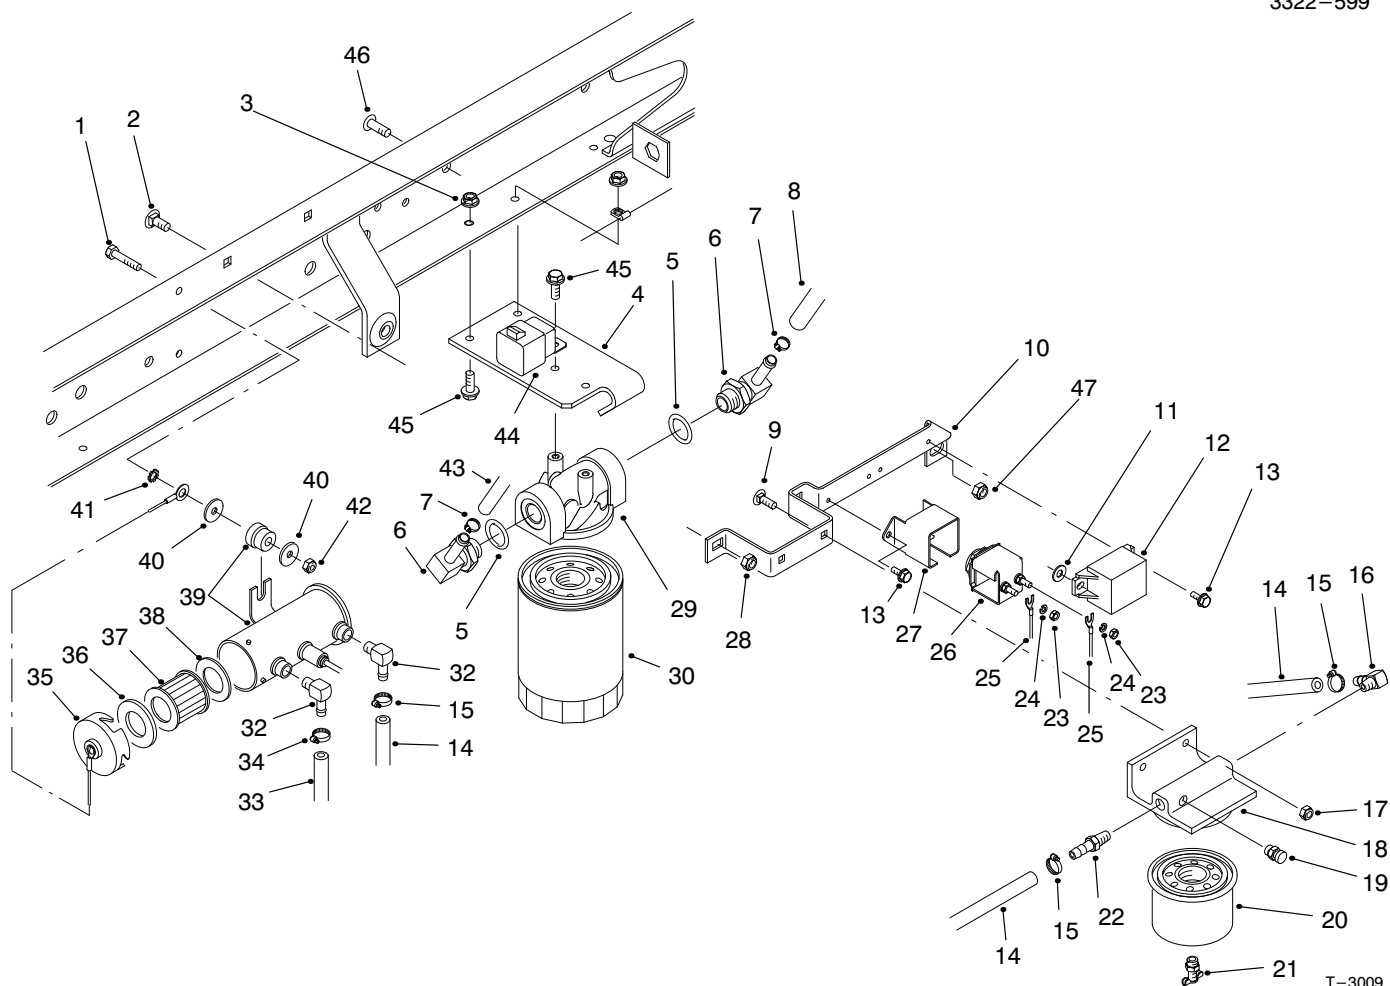 


T-3009

FUEL FILTER, FUEL PUMP & RELAY MOUNTING

Ref. No.	Part No.	Description	No. Used
1	48-7650	Screw-HH	2
2	3230-23	Bolt-CARR	2
3	32128-33	Nut-HHF	1
4	87-7040	Bracket-Oil Filter	1
5	237-79	O-Ring	2
6	354-134	Fitting-Hydraulic 90° (Incl. Ref. #5)	2
7	2412-36	Clamp-Hose	2
8	87-5730	Hose-Hydraulic	1
9	3229-25	Nut-Lock	2
10	87-7380	Bracket-Relay/Indicator	1
11	3256-22	Washer-Flat	1
12	66-8800	Relay	1
13	12-5450	Screw-HH	4
14	27-5360	Hose-Fuel	2
15	2412-108	Clamp-Hose	3
16	353-707	Fitting-90° Barb	1
17	3296-42	Nut-Lock	2
18	63-8280	Head-Filter	1
19	63-8290	Vent-Air	1
20	63-8300	Element-Filter	1
21	63-8310	Drain-Filter	1
22	353-783	Fitting-Straight	1
23	43-5970	Nut	2
24	48-8000	Washer-Lock	2

Ref. No.	Part No.	Description	No. Used
25	93-7130	Harness-Wire	1
26	66-8700	Asm-Glow Plug Indicator (Incl. Ref. #23, 24 & 27)	1
27	70-8560	Retainer-Indicator	1
28	3296-29	Nut-Lock	2
29	87-8780	Head-Oil Filter	1
30	54-0110	Element-Oil Filter	1
32	46-3710	Fitting-90°	2
33	63-9640	Hose-Fuel Tank to Pump	1
34	92-2379	Clamp-Hose	1
35	43-2580	Magnet	1
36	43-2560	Gasket	1
37	43-2550	Filter	1
38	43-2570	Gasket	1
39	53-8150	Asm-Fuel Pump (Incl. Ref. #35-38)	1
40	3256-67	Washer-Flat	3
41	3255-7	Washer-ETLW	1
42	49-7810	Nut-Lock	2
43	99-1058	Hose-Hydraulic	1
44	70-1480	Relay-S.P.D.T.	1
45	3234-4	Screw-HFH	4
46	3274-94	Screw-HSBH	1
47	3296-39	Nut-Lock	1

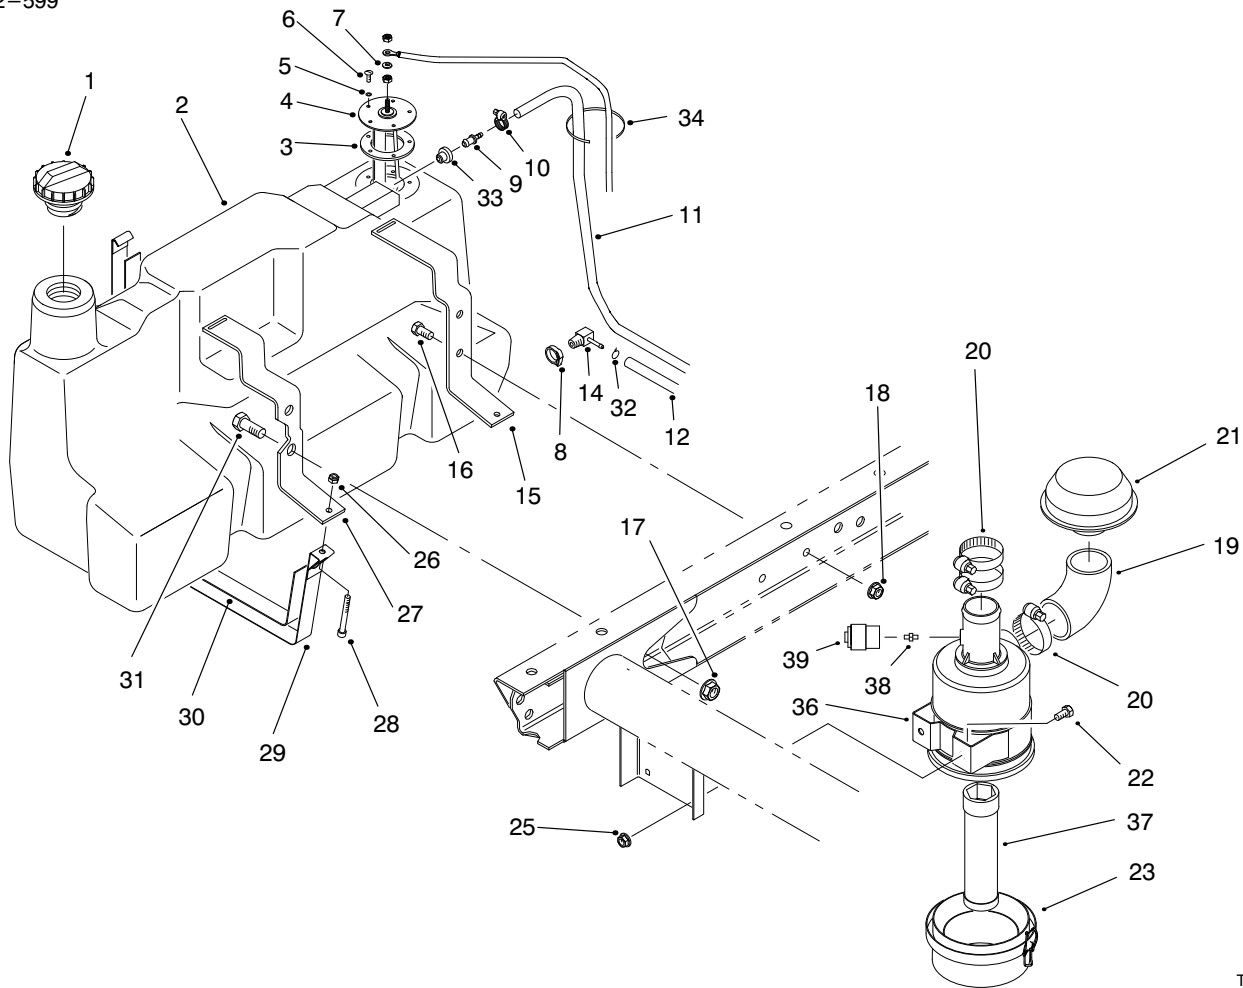 


T-3010-4

FUEL TANK & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-3102	Cap-Fuel	1
2	98-2915	Asm-Fuel Tank (Incl. Ref. #8, 9, 14 & 33)	1
3	62-7650	Gasket-Sending Unit	1
4	63-7640	Unit-Sending	1
5	3253-15	Washer-Lock	5
6	32122-24	Screw-RH	5
7	5-3637	Washer-Flat	1
8	2412-36	Clamp	1
9	98-2952	Fitting-Straight	1
10	2412-108	Clamp-Hose	1
11	98-2945	Hose-Fuel	1
12	63-9640	Hose-Fuel	1
14	353-781	Fitting-Fuel 90°	1
15	87-3140	Support-Rear	1
16	323-4	Screw-HH	2
17	32128-23	Nut-HHF	2
18	3290-357	Nut-HFH	2
19	94-5428	Elbow	1
20	2412-92	Clamp-Hose	3

Ref. No.	Part No.	Description	No. Used
21	46-7510	Hood-Inlet, Air	1
22	322-2	Screw-HH	2
23	95-5805	Asm-Air Cleaner	1
25	32128-20	Nut-HHF	4
26	3296-42	Nut-Lock	2
27	87-3150	Support-Front	1
28	3274-54	Screw-HSH	2
29	87-3160	Strap-Tank Support	2
30	87-3170	Pad-Tank Support Strap	2
31	3234-38	Screw-HH	2
32	92-2379	Clamp-Hose	1
33	46-6560	Bushing	1
34	3290-378	Cable-Tie	1
36	93-2191	Asm-Band, Mounting	1
37	98-2982	Filter-Element, Safety (Optional)	1
38	94-1416	Adapter Asm-Indicator (Optional)	1
39	93-9164	Indicator-Service (Optional)	1

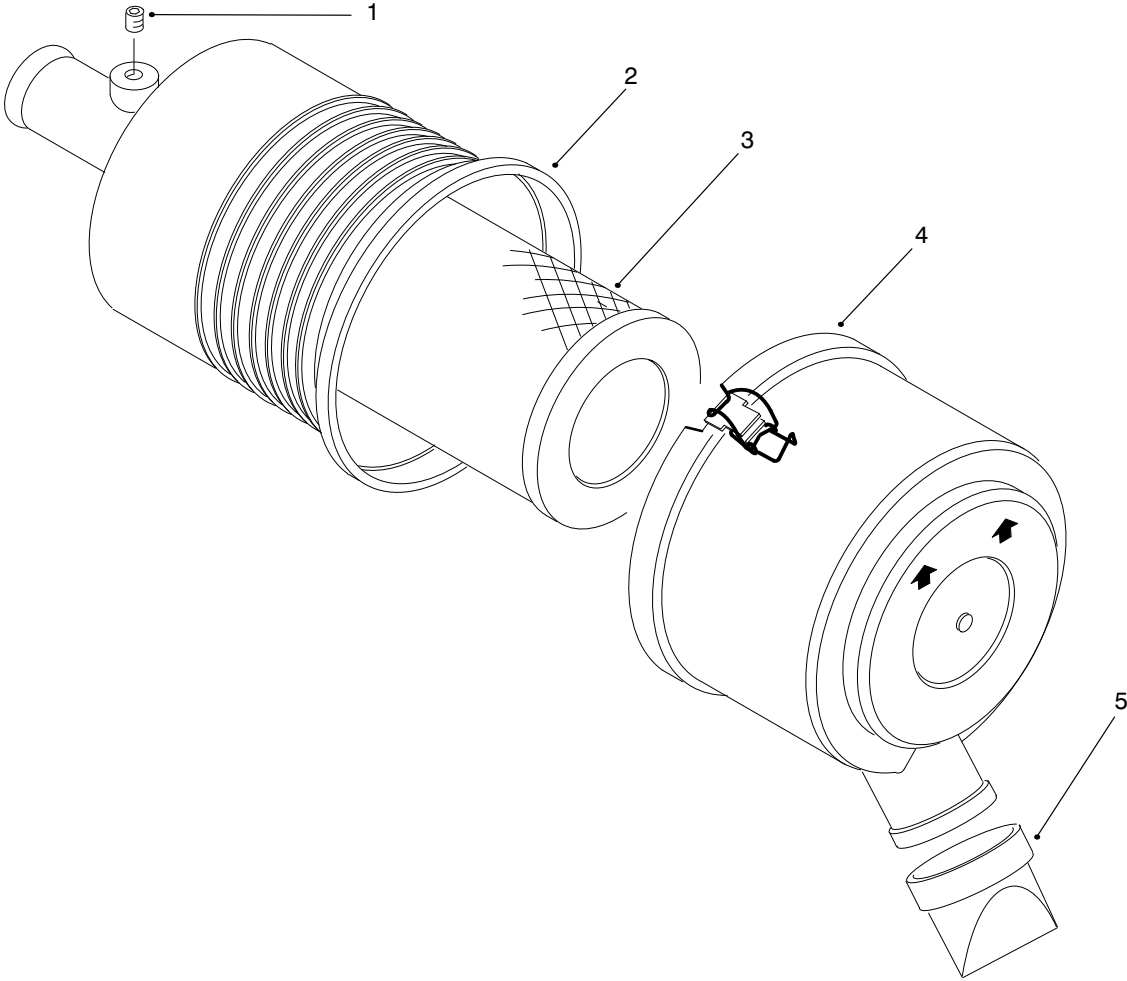 


T-2607

AIR CLEANER ASM NO. 95-5805

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug	1	4	94-3652	Asm-Cover	1
†2		Asm-Body	1	5	94-1414	Valve-Vacuator	1
3	93-2195	Element-Air Cleaner	1				
*	98-2982	Element-Filter Safety (Optional)	1				

 *Not Illustrated
†Not Serviced Separately

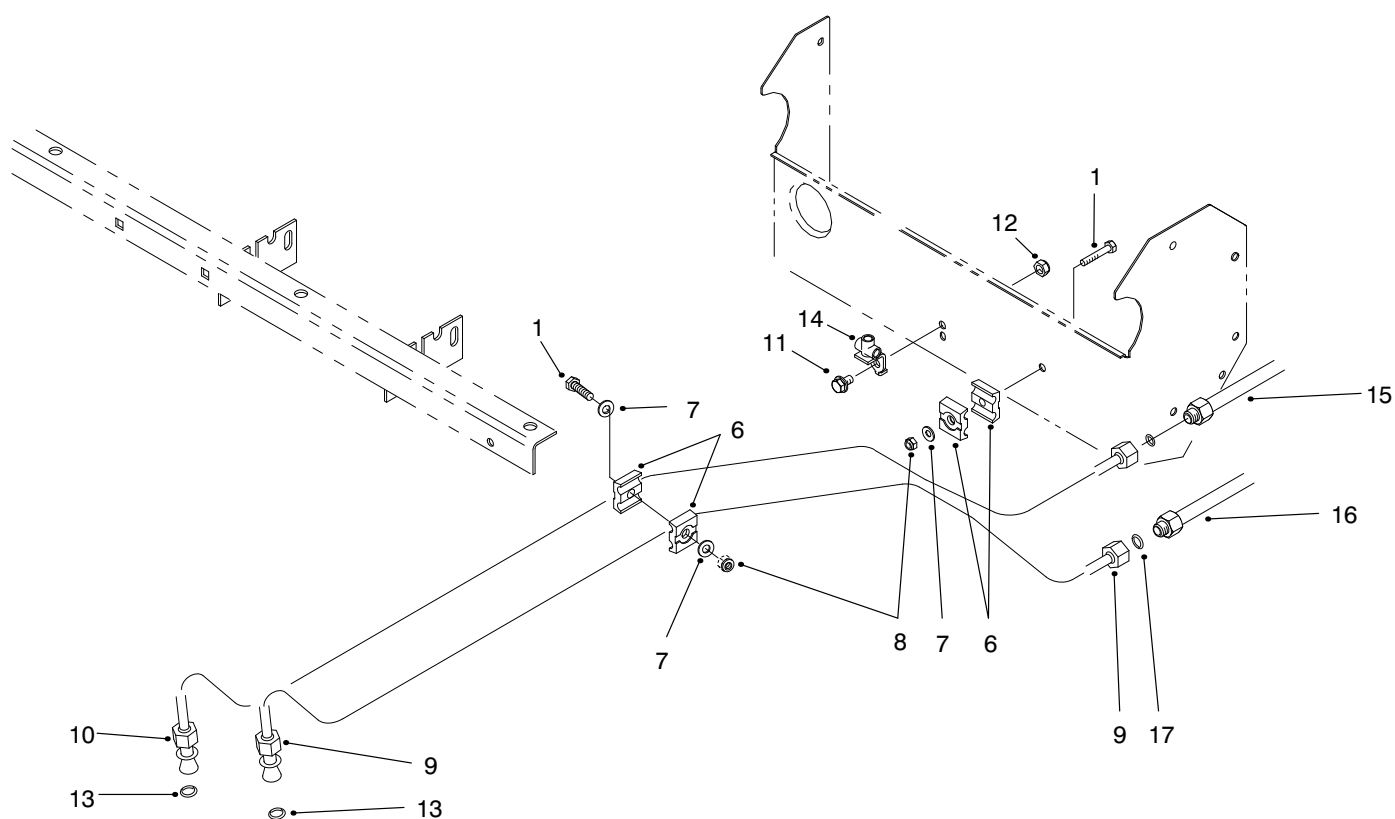


T-3011

STEERING LINE ASM

Ref. No.	Part No.	Description	No. Used
1	321-9	Screw-HH	2
6	56-7973	Clamp-Hydraulic Tube	4
7	3256-22	Washer-Flat	3
8	3296-42	Nut-Lock	2
9	87-9350	Asm-Hydraulic Tube (Incl. Ref. #13)	1
10	87-4540	Asm-Hydraulic Tube (Incl. Ref. #13)	1
11	322-5	Screw-HH	1

Ref. No.	Part No.	Description	No. Used
12	32128-20	Nut-Lock	1
13	39-7310	O-Ring	2
14	87-3560	Tee-Brake Line	1
15	99-1053	Asm-Hose (Incl. Ref. #17)	1
16	99-1058	Asm-Hose (Incl. Ref. #17)	1
17	237-22	O-Ring	2

 *Not Illustrated

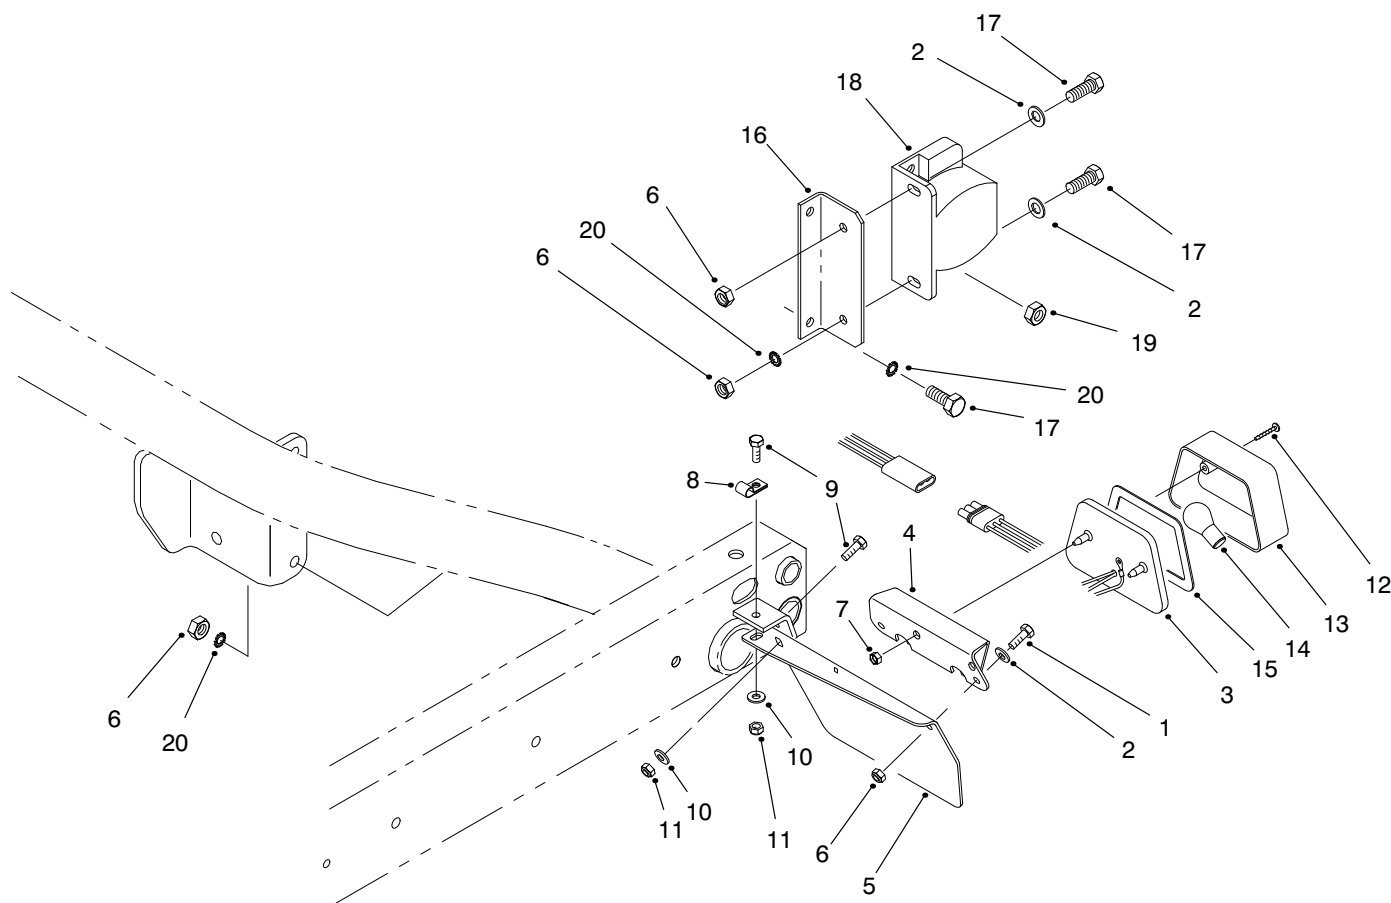


T-3012-2

BACKUP ALARM & TAIL LIGHT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-6	Screw-HH	2	12	32144-93	Screw-Self Tapping	2
2	3256-22	Washer-Flat	4	13	87-6300	Lens	1
3	87-2110	Asm-Tail Light (Incl. Ref. #12-15)	1	14		Bulb (#1157 Std. 12 Volt)	1
4	87-5770	U-Bracket-Tail Light	1	15	87-6310	Gasket	1
5	93-8943	Bracket-Fender, Rear LH	1	16	93-3921	Bracket-Alarm, Reverse	1
6	3296-42	Nut-Lock	6	17	321-5	Screw-HH	4
7	3290-506	Palnut	2	18	93-3920	Alarm-Backup (Incl. Ref. #19)	1
8	2412-93	Clamp-R	1	19		Nut-Lock	1
9	322-5	Screw-HH	2	20	3255-7	Washer-Lock	3
10	3256-23	Washer-Flat	2				
11	3296-29	Nut-Lock	2				

 *Not Illustrated

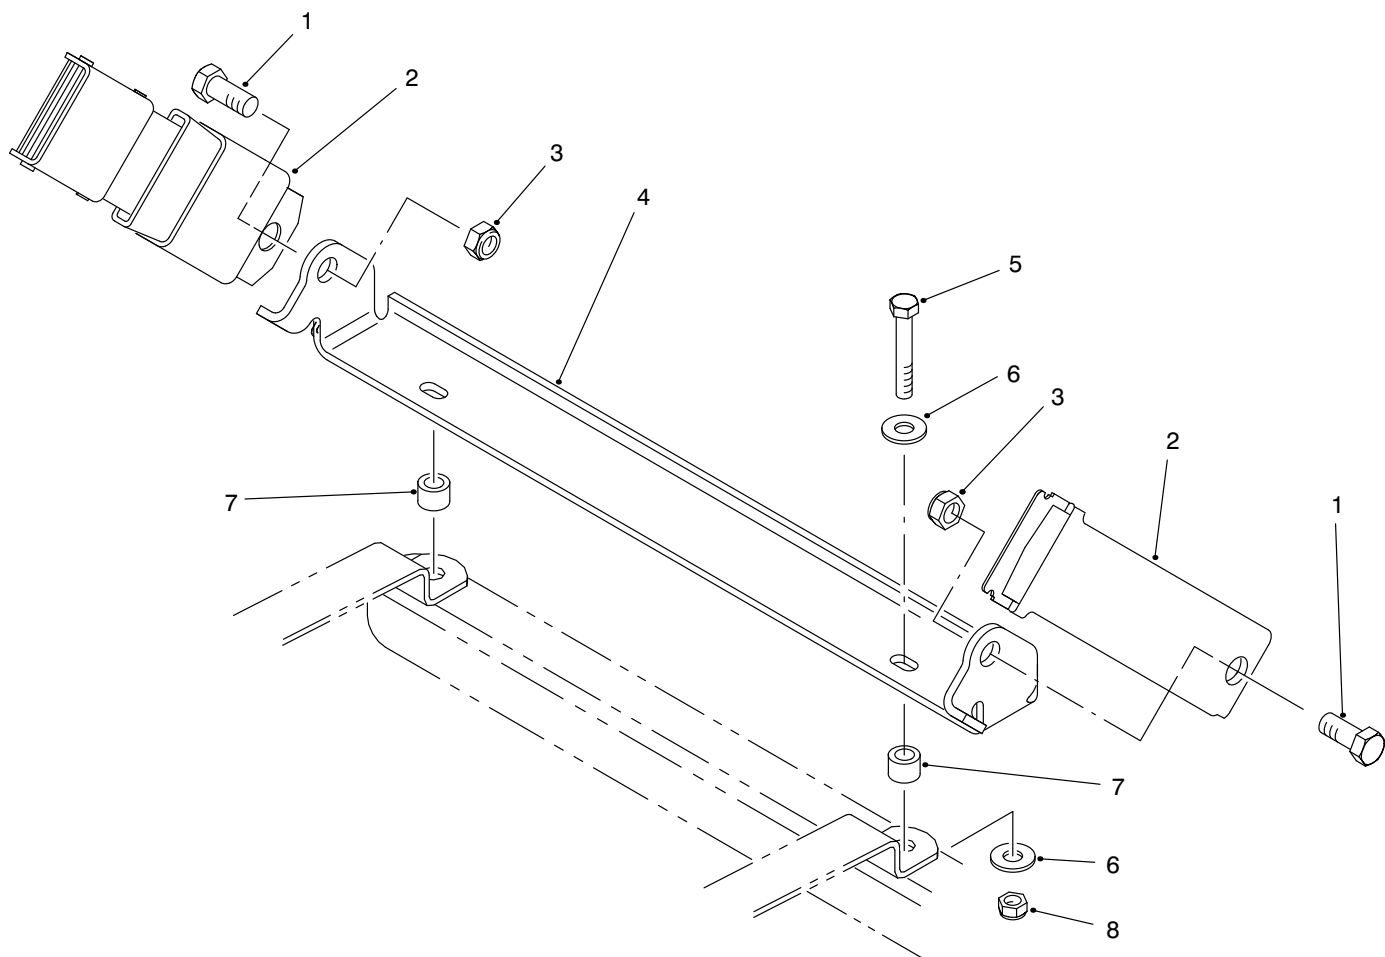


T-1675

SEAT BELT ASM

Ref. No.	Part No.	Description	No. Used
1	3212-4	Screw-HH	4
2	21-4191	Asm-Belt, Seat	2
3	3296-38	Nut-Lock	4
4	87-7280	Bracket-Belt, Seat	2
5	322-10	Screw-HH	4

Ref. No.	Part No.	Description	No. Used
6	3256-3	Washer-Flat	8
7	52-2480	Spacer	4
8	3296-29	Nut-Lock	4
*	92-1295	Kit-Belt, Seat (Incl. Ref. 1-8)	2

 NOTE: Passenger seat asm shown.

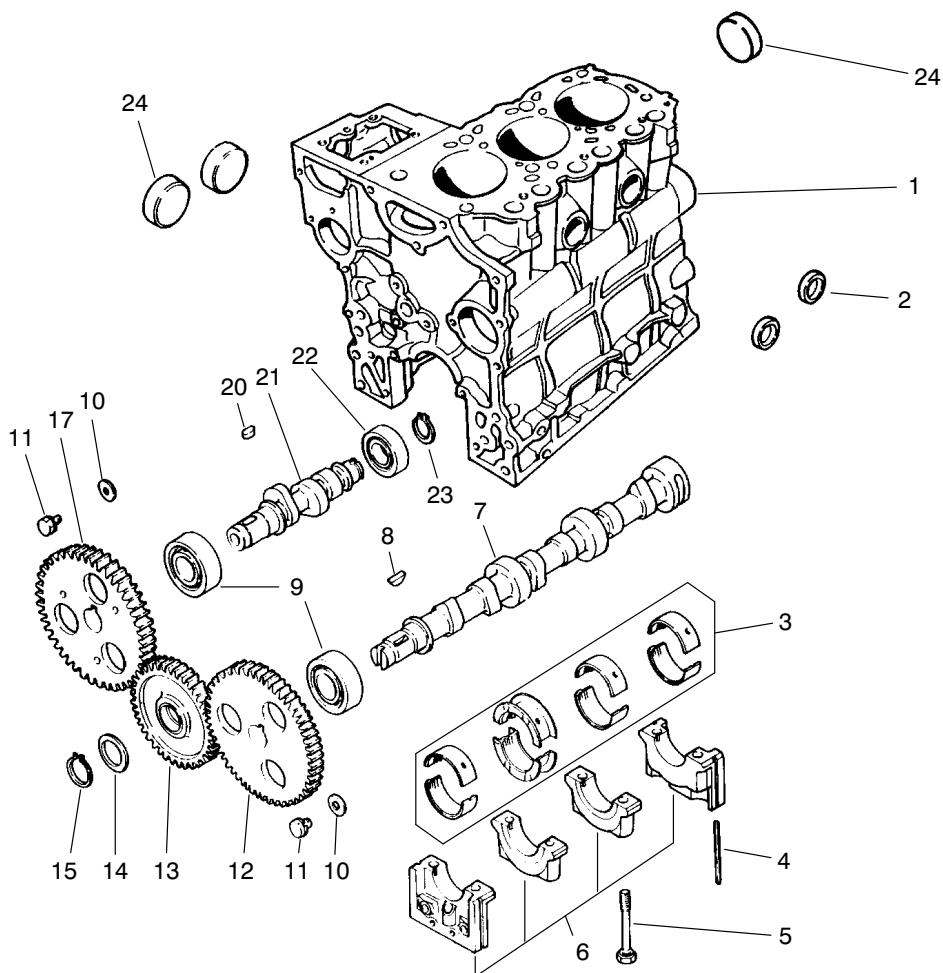


T-0564-1

CAMSHAFT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1257	Asm-Block Sub (Incl. Ref. #2, 5, 6 & 24)	1	10	67-3000	Washer	2
2	42-7080	Cap	2	11	42-9490	Bolt w/Washer	2
3	75-4900	Bearing Set STD	1	12	92-0827	Gear	1
*	67-2410	Bearing Set 0.25	1	13	92-0842	Asm-Gear	1
*	67-2420	Bearing Set 0.50	1	14	92-0839	Plate	1
4	67-2200	Seal	4	15	92-0841	Ring-Retaining	1
5	67-2250	Bolt	8	17	92-0840	Gear	1
6		Asm-Cap	1	20	42-7840	Key	1
7	67-3010	Cam Shaft	1	21	67-3060	Shaft	1
8	56-0480	Key-Woodruff	1	22	67-3050	Bearing	1
9	67-3030	Bearing	2	23	67-3080	Ring-Retaining	1
				24	56-0020	Plug	3

 *Not Illustrated

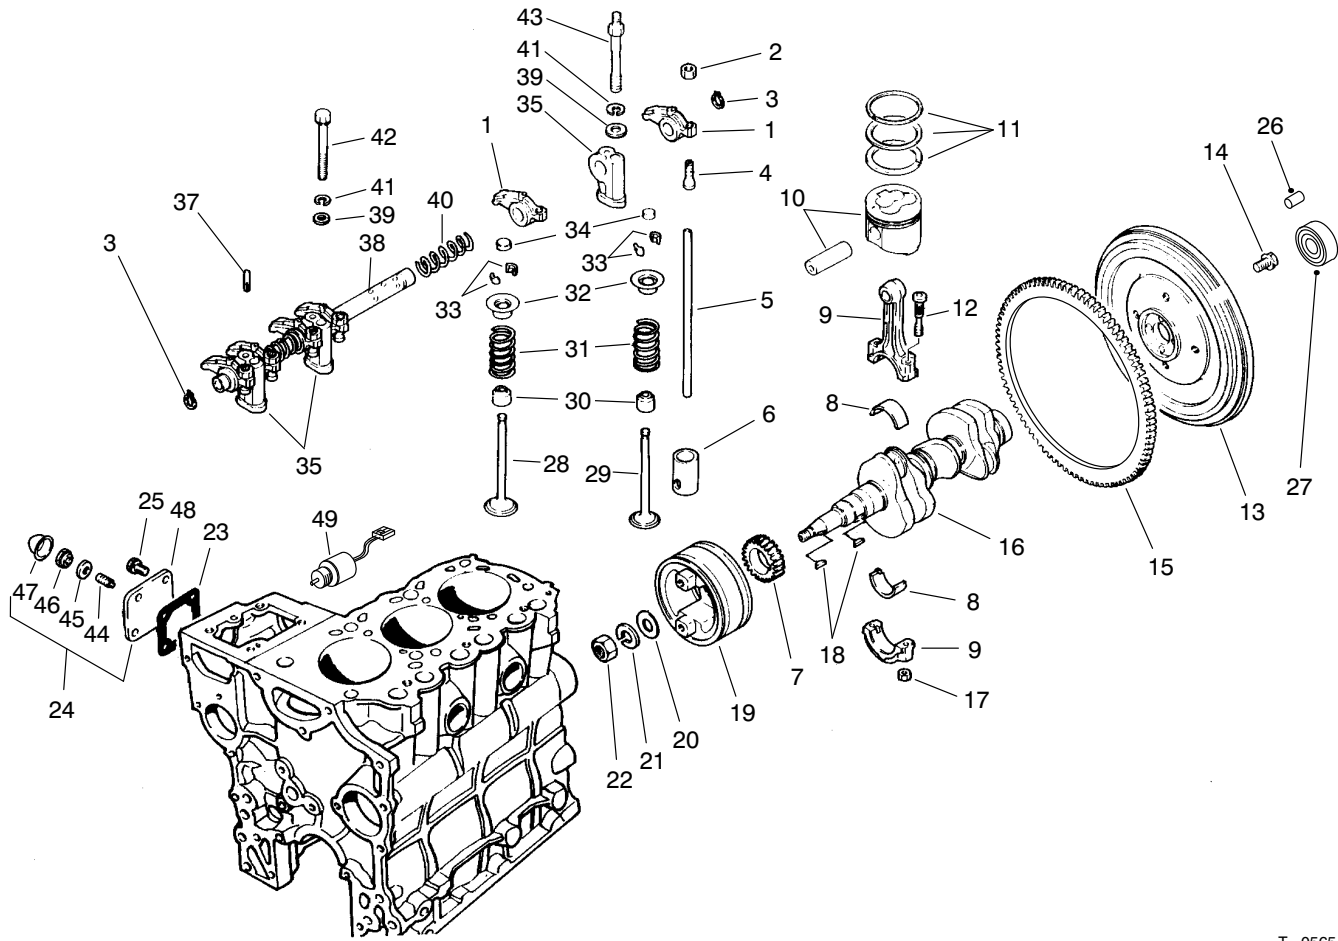


T-0565-1

VALVES AND CRANKSHAFT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3160	Arm-Rocker	6	19	70-8680	Pulley-Crankshaft	1
2	67-3230	Nut-Jam	6	20	67-2950	Washer	1
3	67-3240	Ring-Retaining	2	21	67-2960	Washer-Lock	1
4	67-3210	Screw-Adjusting	6	22	67-2940	Nut-Jam	1
5	67-3150	Rod-Push	6	23	67-4310	Gasket	1
6	67-3120	Tappet	6	24	75-5110	Asm-Cover (Incl. Ref. #44-48)	1
7	92-0835	Gear	1	25	42-9440	Bolt W/Washer	4
8	75-5010	Bearing Set STD	3	26	51-5610	Pin-Dowel	3
*	67-2890	Bearing Set 0.25 US	3	27	92-1914	Bearing-Ball	1
*	67-2900	Bearing Set 0.50 US	3	28	67-3130	Valve-Intake	3
9	67-2850	Asm-Connecting Rod (Incl. Ref. #12 & 17)	3	29	67-3140	Valve-Exhaust	3
10	93-8973	Piston & Pin Set STD	3	30	42-7870	Seal	6
*	93-8975	Piston & Pin Set 0.25 OS	3	31	67-3110	Spring	6
*	93-8976	Piston & Pin Set 0.50 OS	3	32	67-3100	Retainer	6
11	75-5050	Ring Set STD	3	33	42-7860	Lock	12
*	75-5060	Ring Set 0.25 OS	3	34	67-3180	Cap	6
*	75-5070	Ring Set 0.50 OS	3	35	67-3200	Stay-Rocker	3
12	67-2860	Bolt	6	37	67-3220	Pin	1
13	92-0836	Asm-Flywheel (Incl. Ref. #15)	1	38	67-3190	Asm-Rocker Shaft	1
14	67-2990	Bolt	4	39	42-9660	Washer	4
15	67-2980	Gear-Ring	1	40	67-3170	Spring	2
16	92-0845	Crankshaft	1	41	67-3260	Washer	6
17	42-9590	Nut	6	42	42-9510	Bolt	1
18	56-0480	Key-Woodruff	2	43	67-3250	Bolt-Rockers, Stay	2
				44	43-3160	Screw-Adjusting	1

 
*Not Illustrated

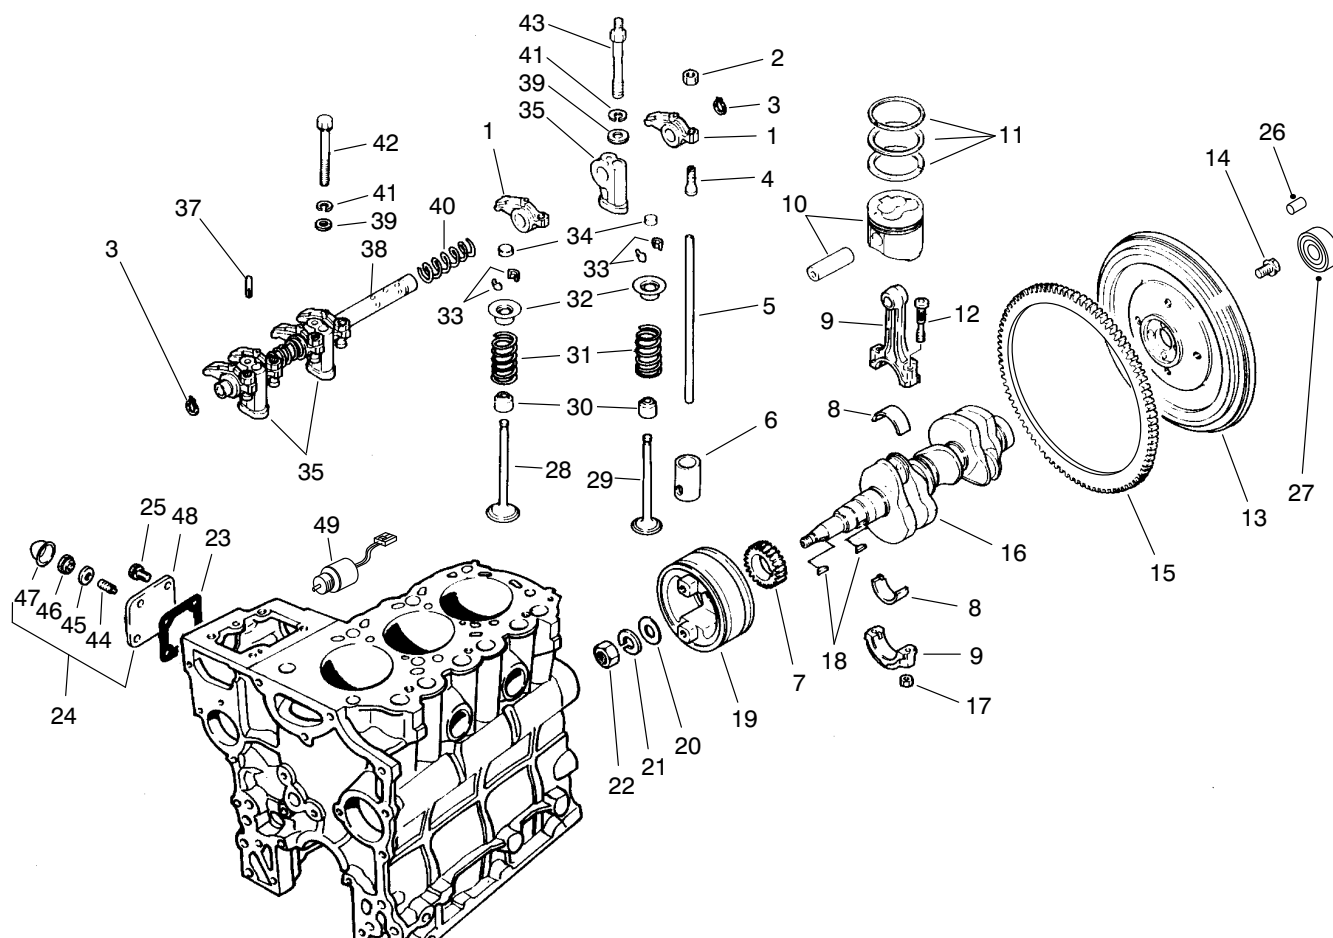

T-0565-1

VALVES AND CRANKSHAFT ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	75-5120	Gasket	1	48	67-4250	Cover	1
46	43-5960	Nut-Special	1	49	63-7440	Solenoid-Shutoff	1
47	43-2820	Cap-Sealing	1				

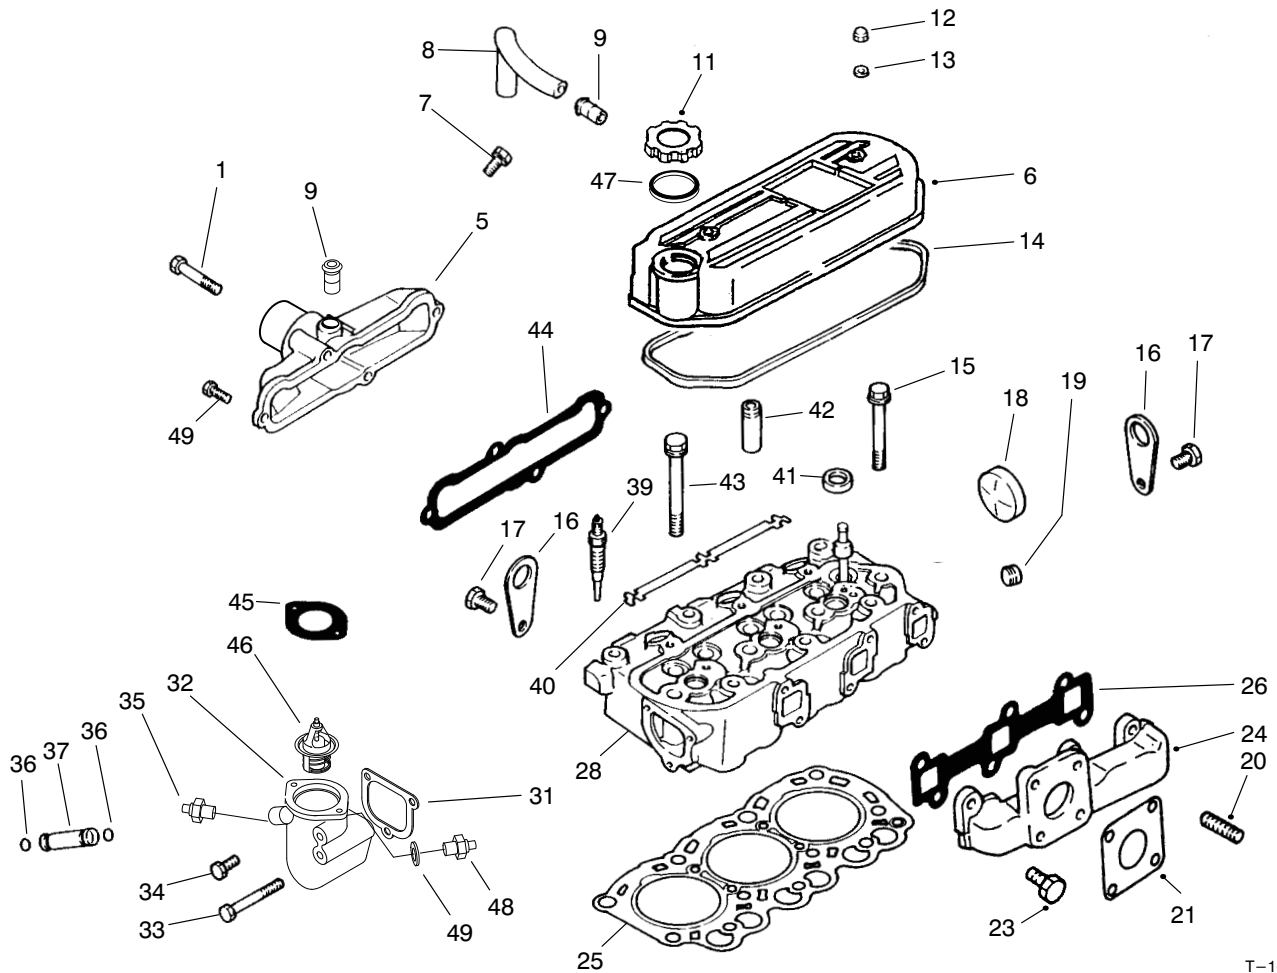 


T-1666-1

CYLINDER HEAD ASM

Ref. No.	Part No.	Description	No. Used
1	67-4400	Bolt	2
5	94-3533	Cover (Intake)	1
6	67-2750	Asm-Cover (Incl. Ref. #9)	1
7	42-9430	Bolt w/Washer	1
8	67-2670	Hose-Breather	1
9	42-7510	Pipe	2
11	67-2650	Cap-Oil Filler	1
12	67-2770	Nut-Cap	2
13	67-2780	Washer	2
14	67-2760	Gasket	1
15	67-2740	Bolt-Flange	3
16	67-2680	Hanger-Engine	2
17	67-2340	Bolt w/Washer	2
18	56-0020	Plug-Expansion	1
19	67-2570	Plug-Taper	1
20	42-9570	Stud	4
21	42-9110	Gasket	1
23	67-4590	Bolt	6
24	70-8750	Manifold-Exhaust	1
25	94-1258	Gasket-Cylinder Head	1

Ref. No.	Part No.	Description	No. Used
26	67-4570	Gasket-Exhaust Manifold	1
28	93-8970	Asm-Cylinder Head (Incl. Ref. #18, 41 & 42)	1
31	67-4460	Gasket (Thermostat Fitting)	1
32	67-4450	Fitting-Thermostat	1
33	67-4470	Bolt	1
34	67-2330	Bolt	4
35	93-3525	Gauge-Water Temp.	1
36	43-2710	O-Ring	2
37	67-4480	Pipe-By-Pass	1
39	92-0844	Plug-Glow	3
40	67-4690	Plate-Glow Plug	1
41	67-2710	Cap-Sealing	3
42	67-2700	Guide-Valve	6
43	67-2730	Bolt	8
44	67-4550	Gasket-Intake Manifold	1
45	93-8974	Thermostat	1
46	67-4430	Gasket-Thermostat	1
47	67-2660	O-Ring	1
48	93-3526	Asm-Switch, Thermo	1
49	67-4490	Gasket	1

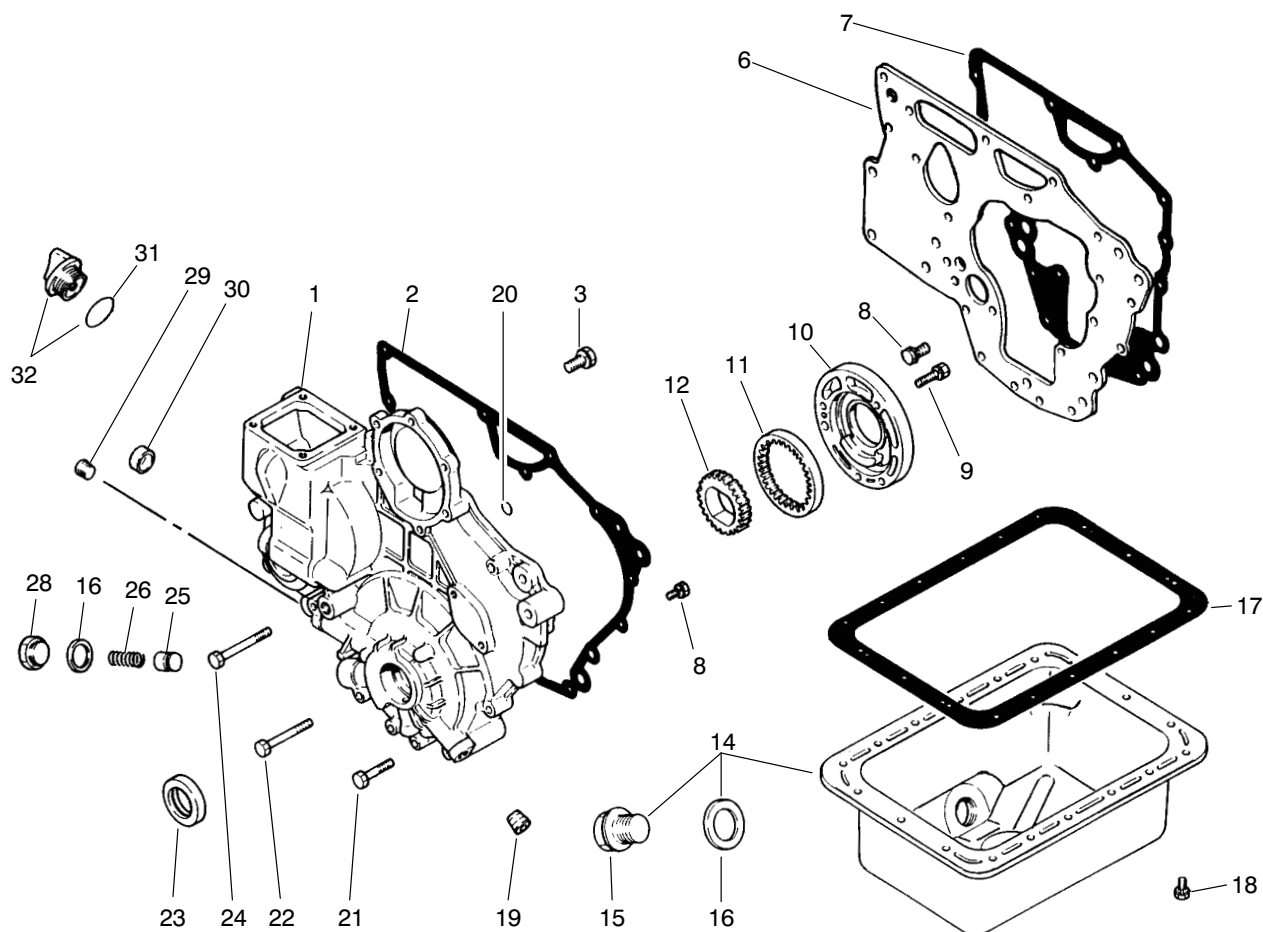 


T-0567-1

CRANKCASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1259	Sub-Asm, Case	1	19	42-7210	Plug	1
2	67-2580	Gasket-Case	1	20	67-2630	O-Ring	2
3	67-2340	Bolt w/Washer	3	21	67-2600	Bolt	3
6	67-2310	Plate	1	22	67-2610	Bolt	4
7	67-2320	Gasket-Plate	1	23	67-2590	Oil Seal	1
8	42-9440	Bolt w/Washer	11	24	67-2620	Bolt	1
9	67-2560	Bolt w/Washer	3	25	67-2500	Plunger	1
10	67-2550	Housing-Oil Pump	1	26	67-2510	Spring	1
11	67-2540	Gear-Outer	1	28	67-2520	Plug	1
12	67-2530	Gear-Inner	1	29	67-2570	Plug	1
14	75-4910	Asm-Oil Pan (Incl. Ref. #15-16)	1	30	67-2640	Cap	1
15	42-9260	Plug	1	31	67-2660	O-Ring	1
16	42-7290	Gasket-Oil Drain	2	32	67-2650	Asm-Oil Fill Cap (Incl. Ref. #31)	1
17	67-2480	Gasket-Oil Pan	1	*	75-5040	Kit-Gasket (Incl. Ref. #2, 7, 16 & 17)	1
18	42-9490	Bolt w/Washer	18				

 *Not Illustrated

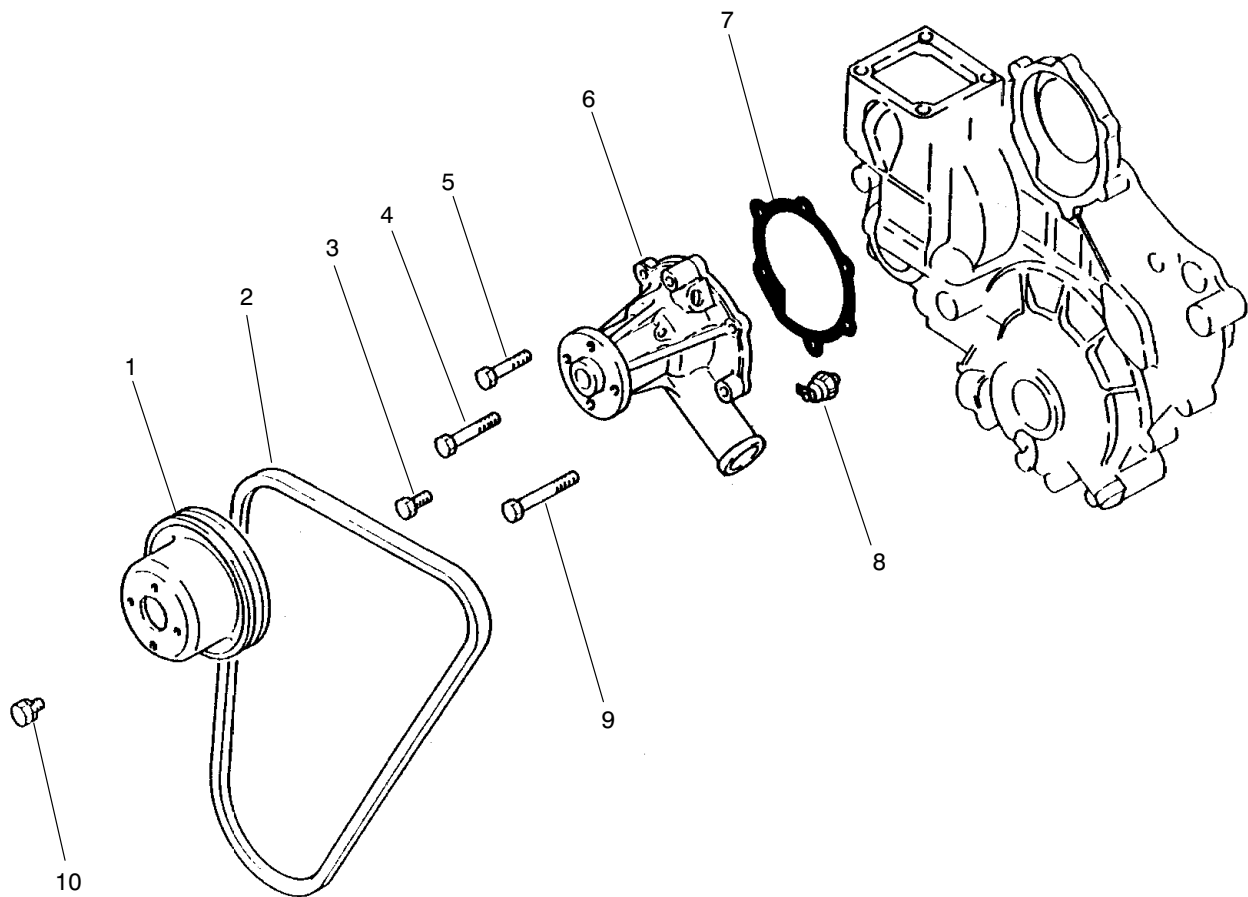


T-0568-1

WATER PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	67-4360	Pulley	1
2	98-2947	V-Belt	1
3	67-2330	Bolt	2
4	67-4400	Bolt	1
5	67-2600	Bolt	1

Ref. No.	Part No.	Description	No. Used
6	67-4380	Asm-Pump	1
7	67-4390	Gasket	1
8	67-4350	Oil Pressure Switch	1
9	67-2610	Bolt	2
10	42-9490	Bolt w/Washer	4

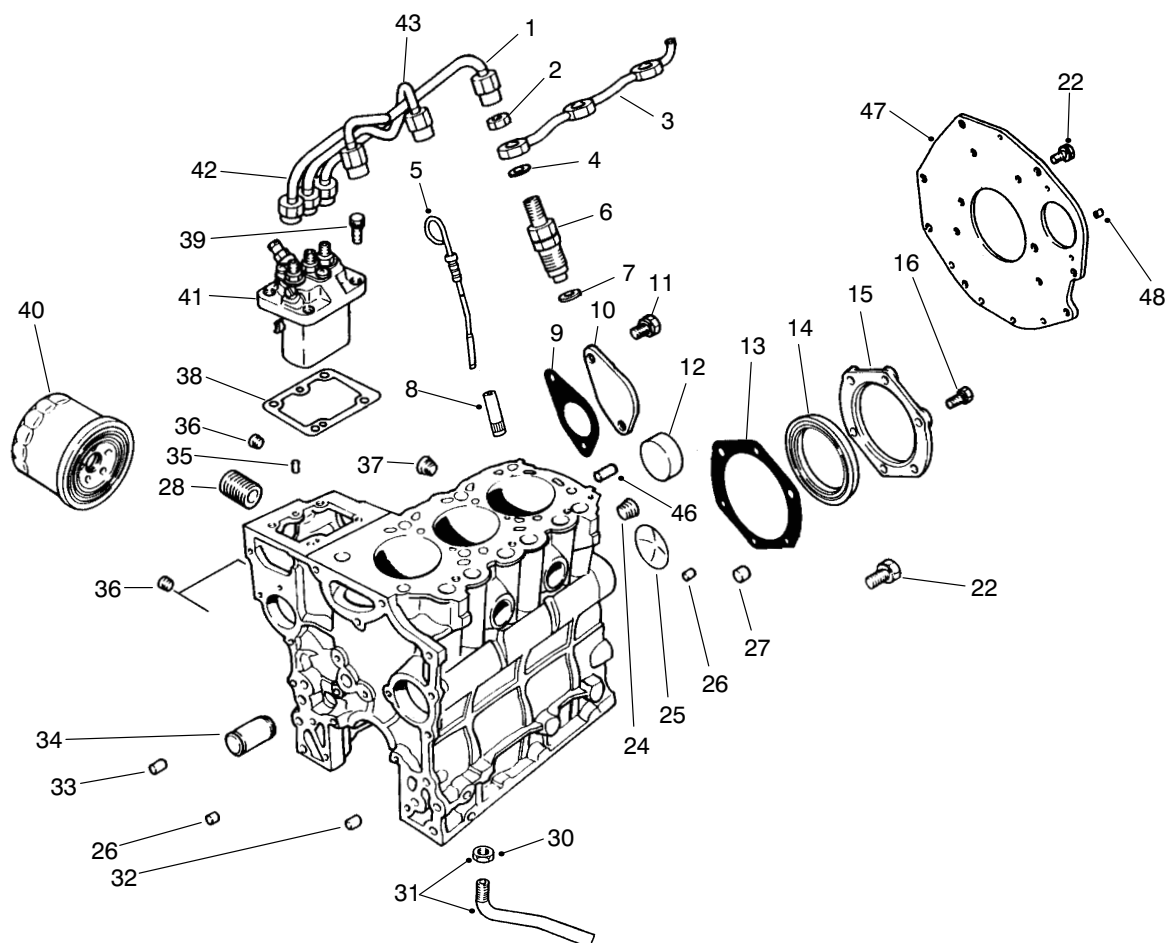 


T-1667-1

FUEL SUPPLY & ENGINE BLOCK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3420	Asm-Pipe No. 3	1	32	67-2370	Bushing	1
2	67-3430	Nut	3	33	42-7190	Bushing	2
3	70-8700	Pipe-Fuel Return	1	34	93-8972	Shaft-Idler	1
4	67-3440	Gasket	3	35	56-0220	Pin	2
5	67-2450	Dipstick	1	36	67-2210	Plug	3
6	67-3380	Asm-Nozzle & Holder	1	37	56-0100	Plug	1
7	67-3390	Gasket	3	38	67-3280	Shim 0.2	1
8	67-2220	Guide	1	*	67-3290	Shim 0.3	1
9	67-2300	Gasket	1	*	67-3300	Shim 0.5	1
10	67-2290	Cover	1	*	67-3310	Shim 0.4	1
11	67-2340	Bolt w/Washer	2	*	67-3320	Shim 0.6	1
12	56-0020	Plug	3	*	67-3330	Shim 0.7	1
13	67-2280	Gasket	1	*	67-3340	Shim 0.8	1
14	67-2230	Oil Seal	1	*	67-3350	Shim 0.9	1
15	67-2270	Case	1	*	67-3360	Shim 1.0	1
16	67-2330	Bolt	6	39	67-3370	Bolt w/Washer	4
22	67-2440	Bolt w/Washer	6	40	67-4330	Asm-Oil Filter	1
24	67-2390	Plug	1	41	75-5020	Asm-Pump	1
25	67-2350	Plug	1	42	67-3400	Asm-Pipe No. 1	1
26	67-2360	Bushing	2	43	67-3410	Asm-Pipe No. 2	1
27	67-2380	Bushing	3	46	42-7160	Pin-Dowel	1
28	56-1230	Shaft-Oil Filter	1	47	92-0830	Plate-Rear	1
30	42-9650	Nut-Jam	1	48	92-0831	Pin-Knock	1
31	67-4340	Asm-Screen (Incl. Ref. #30)	1				

 *Not Illustrated

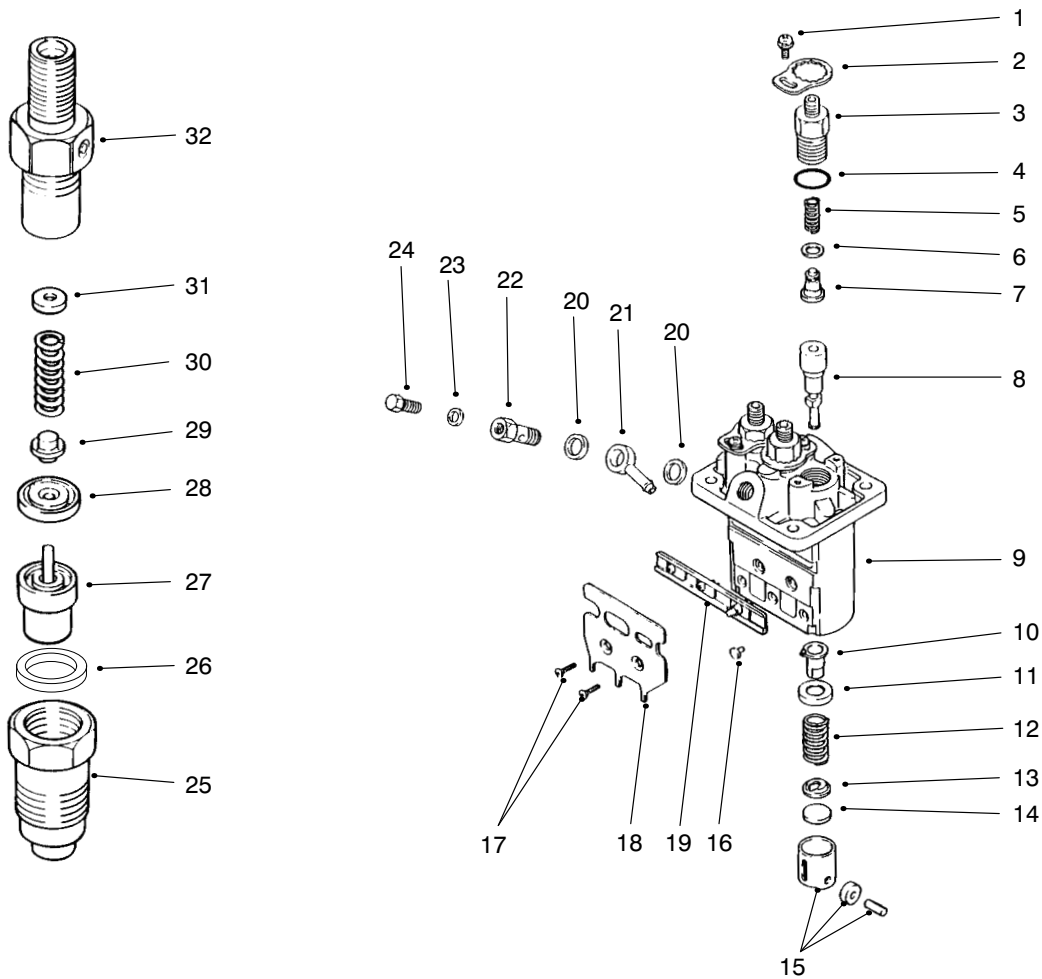


T-0570-3

FUEL INJECTION PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	67-3770	Screw w/Washer	3
2	67-3760	Plate-Lock	3
3	67-3470	Holder-Delivery Valve	3
4	67-3480	O-Ring	3
5	67-3490	Spring	3
6	42-8240	Gasket	3
7	67-3500	Sub-Asm-Valve	3
8	75-4970	Sub-Asm-Element	3
9	67-3460	Sub-Asm-Housing	1
10	67-3520	Sub-Asm-Sleeve	3
11	67-3530	Seat	3
12	67-3540	Spring	3
13	67-3550	Seat	3
14	67-3560	Plate-Shim 1.85	1
*	67-3570	Plate-Shim 1.9	1
*	67-3580	Plate-Shim 1.95	1
*	67-3590	Plate-Shim 2.0	1
*	67-3600	Plate-Shim 2.05	1
*	67-3610	Plate-Shim 2.1	1
*	67-3620	Plate-Shim 2.15	1
*	67-3630	Plate-Shim 2.2	1

Ref. No.	Part No.	Description	No. Used
*14	67-3640	Plate-Shim 2.25	1
*	67-3650	Plate-Shim 2.3	1
*	67-3660	Plate-Shim 2.35	1
*	67-3670	Plate-Shim 2.4	1
*	67-3680	Plate-Shim 2.45	1
*	67-3690	Plate-Shim 2.5	1
15	67-3700	Asm-Tappet	3
16	67-3810	Pin	3
17	67-3790	Screw	2
18	67-3800	Bracket	1
19	67-3780	Asm-Rack	1
20	67-3750	Washer	2
21	67-3740	Nipple	1
22	67-3730	Screw	1
23	67-3720	Washer	1
24	67-3710	Screw-Air Bleed	1
25	67-3970	Nut	3
26	67-3980	Gasket	3
27	67-3960	Asm-Nozzle	3
28	67-3950	Piece	3
29	67-3940	Pin	3
30	67-3930	Spring	3

 *Not Illustrated

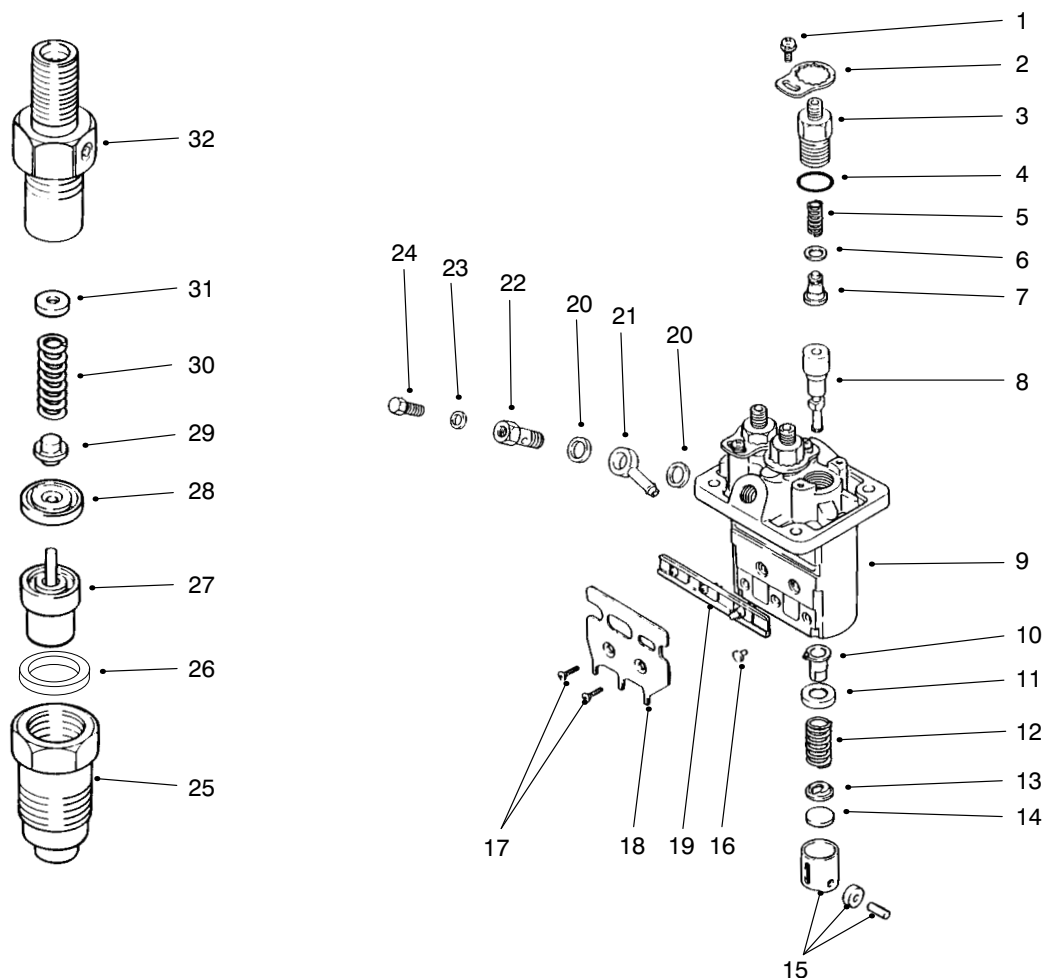


T-0570-3

FUEL INJECTION PUMP ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
31	67-3830	Washer 1.25	1	32	75-5000	Sub-Asm-Body	3
*	67-3840	Washer 1.3	1	*	53-8150	Asm-Pump	1
*	67-3850	Washer 1.35	1			(Incl. Ref. #1-24)	
*	67-3860	Washer 1.4	1	*	67-3380	Asm-Nozzle & Holder	3
*	67-3870	Washer 1.45	1			(Incl. Ref. #25-32)	
*	67-3880	Washer 1.5	1				
*	67-3890	Washer 1.55	1				
*	67-3900	Washer 1.6	1				
*	67-3910	Washer 1.65	1				
*	67-3920	Washer 1.7	1				

 *Not Illustrated

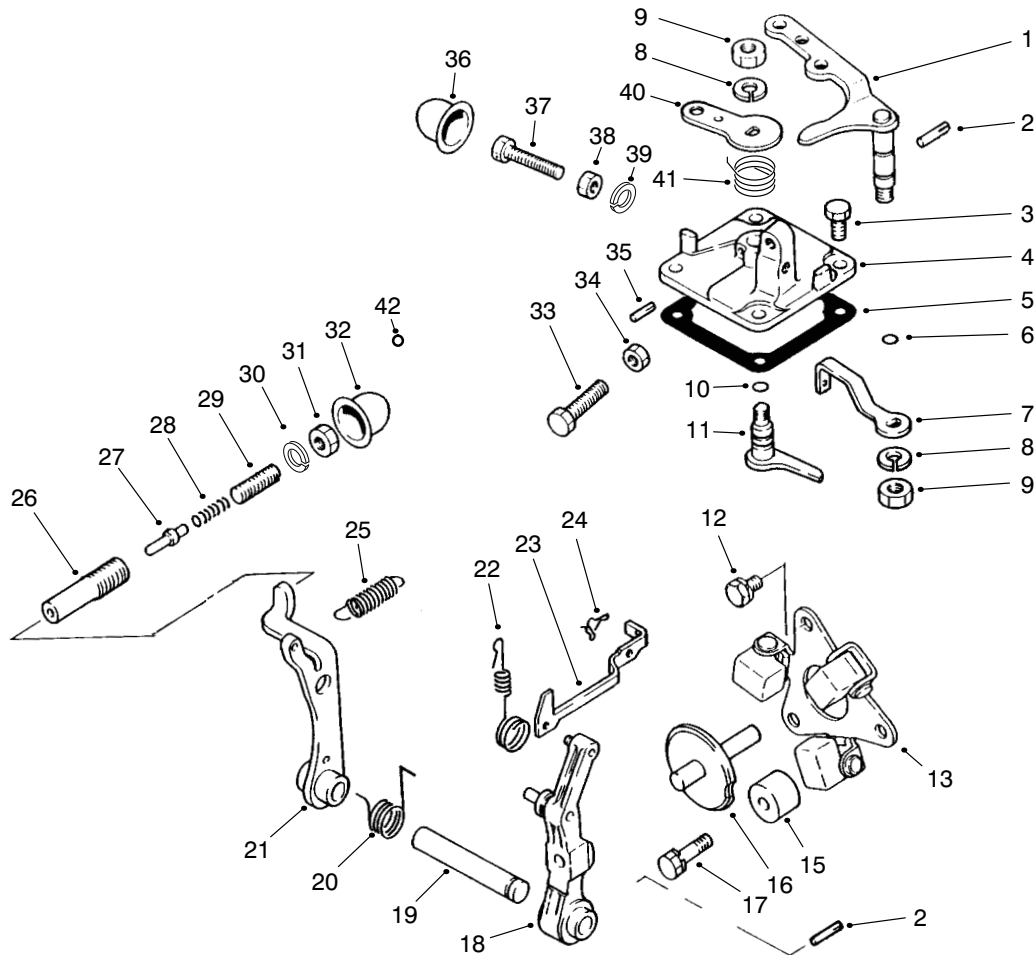

T-0571-2


GOVERNOR ASM

Ref. No.	Part No.	Description	No. Used
1	67-3990	Lever-Speed Control	1
2	67-4000	Pin	2
3	67-4270	Bolt	4
†4		Cover-Governor	1
5	67-4160	Gasket	1
6	42-8830	O-Ring	1
7	75-4980	Lever-Governor Spring	1
8	67-3260	Washer	2
9	42-9640	Nut-Jam	2
10	42-8830	O-Ring	1
11	67-4140	Lever-Stop	1
12	42-9430	Bolt W/Washer	2
13	67-4040	Asm-Weight	1
15	67-4010	Stopper	1
16	67-4070	Shaft-Sliding	1
17	67-4280	Bolt W/Washer	1
18	67-4060	Lever-Governor	1
19	67-4050	Shaft-Governor	1
20	67-5040	Spring	1
21	67-4090	Lever-Tension	1
22	70-8720	Spring-Tie Rod	1

Ref. No.	Part No.	Description	No. Used
23	67-4030	Rod-Tie	1
24	67-4080	Clip	1
25	75-4990	Spring-Governor	1
†26		Case-Torque Set	1
†27		Stopper-Torque Set	1
†28		Spring-Torque Set	1
†29		Screw-Adjusting	1
†30		C-Ring-Torque Set	1
†31		Nut-Torque Set	1
†32		Cover-Torque Set	1
33	42-9420	Bolt-Speed Set	1
34	67-4290	Nut	1
35	67-4120	Pin-Grooved	1
†36		Cover-High Speed Set	1
†37		Bolt-High Speed Set	1
†38		Nut-High Speed Set	1
†39		C-Ring-High Speed Set	1
40	67-4150	Lever-Stop	1
41	94-3827	Spring-Return	1
*†		Torque Spring Set (Incl. Ref. #26-31)	1

*Not Illustrated

 
†Item must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

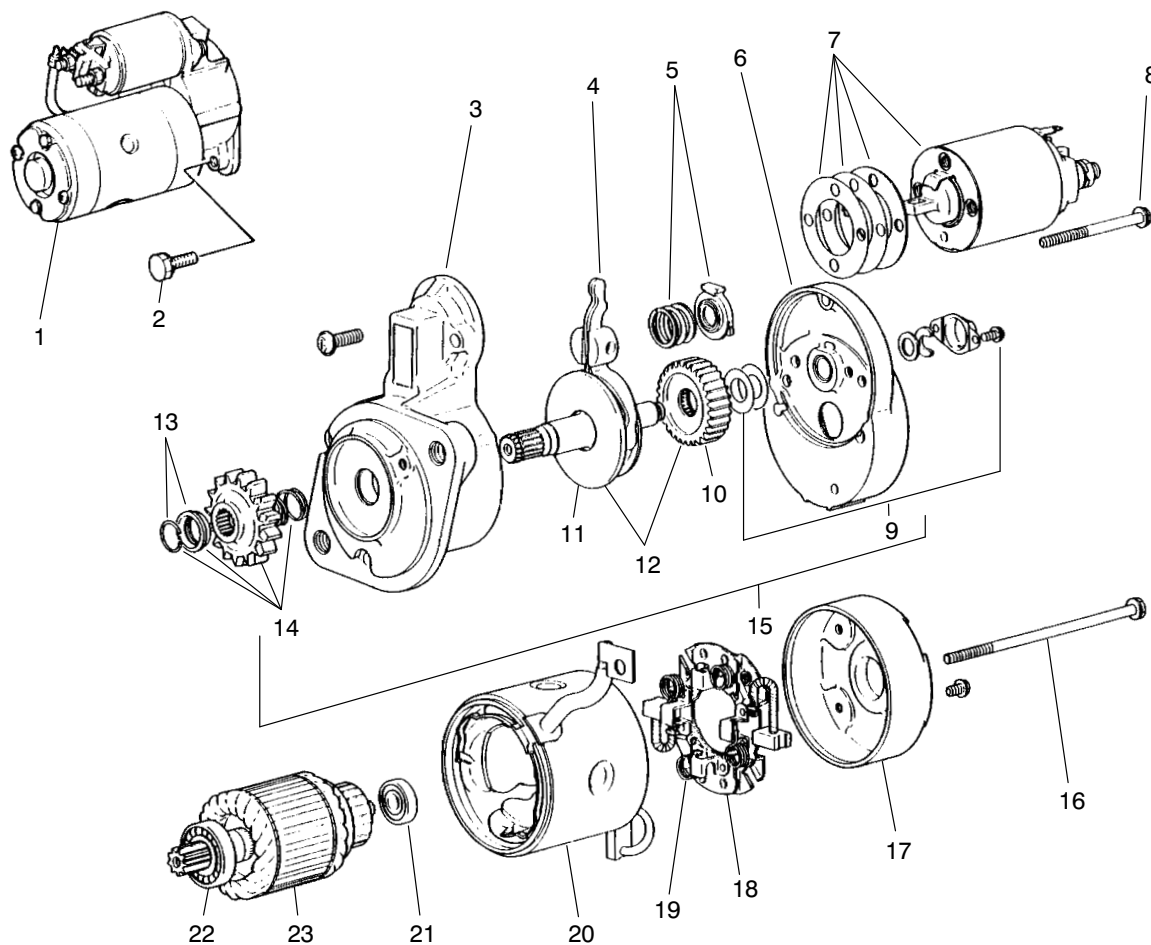

T-0572-1

STARTER ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-8760	Asm-Starter (Incl. Ref. #3-23)	1	14	67-4770	Pinion Set (Incl. Ref. #13)	1
2	92-0843	Bolt w/Washer	2	15	67-4760	Asm-Shaft (Incl. Ref. #9-12 & 14)	1
3	70-8770	Asm-Front Bracket	1	16	56-1610	Bolt	1
4	67-4720	Asm-Lever	1	17	56-1720	Asm-Bracket (Rear)	1
5	67-4730	Spring Set	1	18	56-1700	Asm-Brush Holder (Incl. Ref. #19)	1
6	70-8780	Asm-Center Bracket	1	19	56-1710	Spring-Brush	4
7	67-4750	Asm-Switch	1	20	67-4800	Yoke Asm-	1
8	52-1570	Bolt Set	1	21	56-1600	Bearing-Rear	1
9	56-1680	Cover Set	1	22	56-1590	Bearing-Front	1
10	56-1670	Gear	1	23	56-1580	Armature Set (Incl. Ref. #21 & 22)	1
11	67-4790	Asm-Shaft	1				
12	67-4780	Gear Set (Incl. Ref. #10 & 11)	1				
13	56-1640	Stopper Set	1				

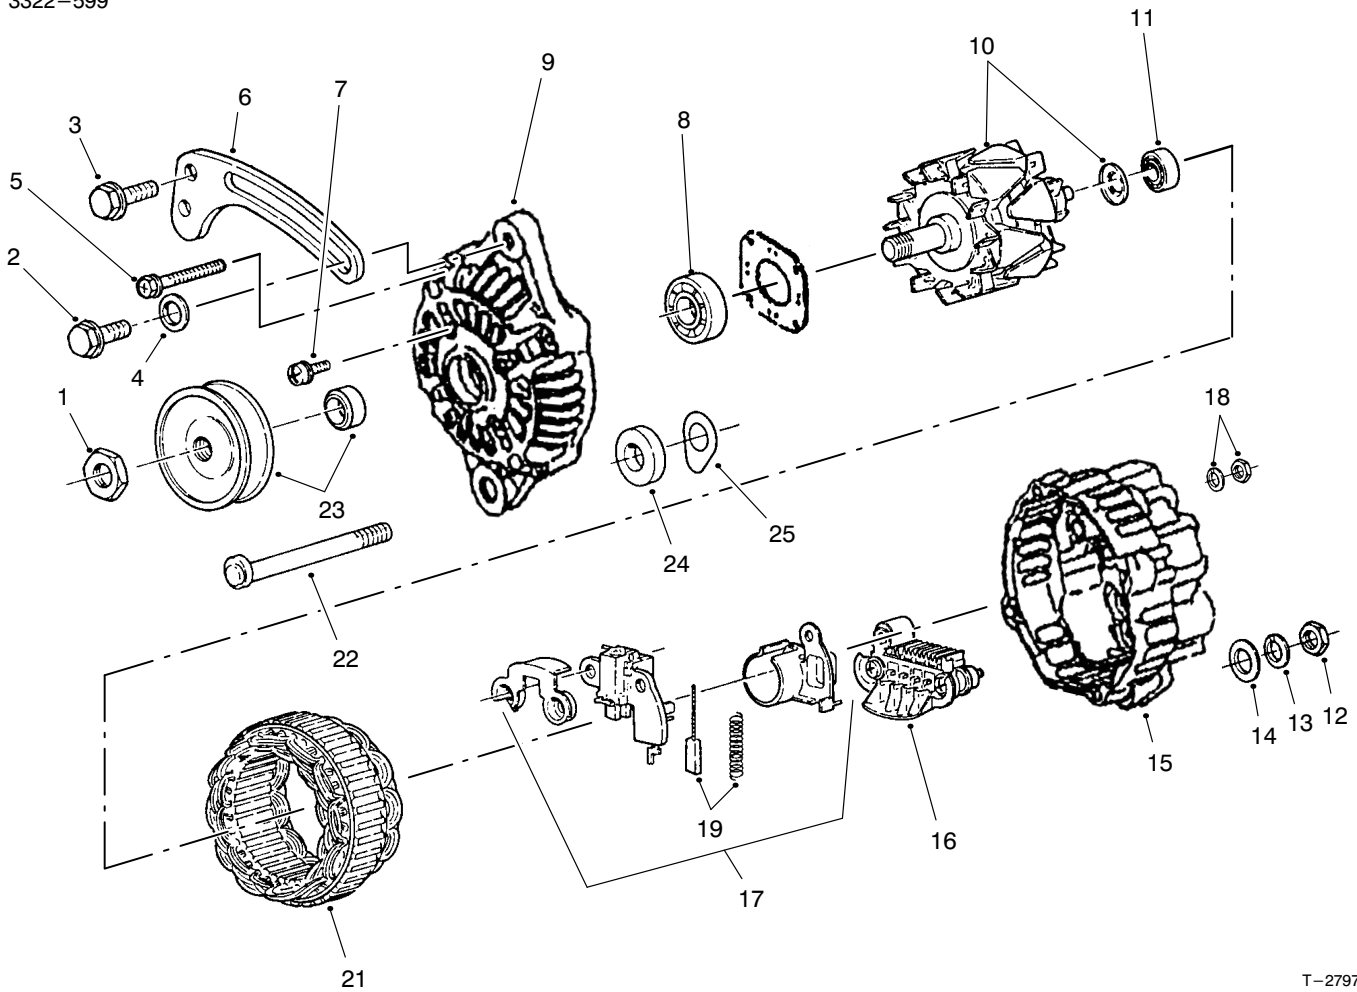 

T-2797

ALTERNATOR ASM

Ref. No.	Part No.	Description	No. Used
1	98-2929	Nut-Set	1
2	67-4660	Bolt-Flange	1
3	42-9440	Bolt w/Washer	1
4	54-8660	Washer-Flat	1
5	98-2931	Bolt Set (4 Bolts)	1
6	98-2948	Brace-Generator	1
7	98-2926	Screw Set (3 Screws)	1
8	98-2927	Bearing-Front	1
9	98-2925	Asm-Front Housing (Incl. Ref. #7 & 8)	1
10	98-2928	Asm-Rotor (Incl. Ref. #11)	1
11	98-2932	Bearing-Rear	1
12	67-4670	Nut	1
13	67-3260	Washer-Lock	1
14	42-9660	Washer-Flat	1

Ref. No.	Part No.	Description	No. Used
15	98-2934	Asm-Rear Housing (Incl. Ref. #12-19)	1
16	98-2937	Asm-Rectifier	1
17	98-2935	Asm-Regulator (Incl. Ref. #18 & 19)	1
18	98-2938	Nut Set-Terminal	1
19	98-2936	Asm-Brush	2
21	98-2933	Asm-Stator	1
22	67-4640	Bolt	1
23	98-2930	Pulley Set	1
24	67-4620	Spacer	1
25	43-0370	Shim	5
*	98-2949	Alternator Assembly (Incl. Ref. #1, 5, 7-11, 15-21 & 23)	1

*Not Illustrated

TORO PART NUMBER INDEX

3322-599

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
116749	Asm-Horn	1 23 1	42-9530	Screw-HH	33 10 25
5-3637	Washer-Flat	40 7 1	42-9570	Stud	48 20 4
5-3637	Washer-Flat	30 16 1	42-9570	Stud-Muffler	30 24 4
7-0030	Bolt-Shoulder	30 3 1	42-9590	Nut	46 17 6
12-5450	Screw-HH	39 13 4	42-9640	Nut-Jam	54 9 2
18-1720	Joint-Ball	30 49 3	42-9650	Nut-Jam	51 30 1
18-2830	Asm-Horn Switch	2 12 1	42-9660	Washer	46 39 4
18-2830	Button-Horn	3 58 1	42-9660	Washer-Flat	56 14 1
18-4260	Asm-Screw/Lockwasher	6 9 2	42-9850	Washer-Lock	12 20 12
18-4270	Clamp-Ball Return Guide	6 8 1	42-9850	Washer-Lock	36 21 3
18-4340	Plug-Rack Piston End	6 6 1	42-9850	Washer-Lock	30 26 4
18-5170	Kit-Seal, Valve Ring	7 * 1	42-9850	Washer-Lock	33 32 42
18-5180	Kit-Bearing, Lower Thrust	7 * 1	43-0370	Shim	56 25 5
18-5190	Kit-Ball, Recirculating	6 10 1	43-2550	Filter	39 37 1
19-4050	Knob	38 8 2	43-2560	Gasket	39 36 1
19-4050	Knob	26 34 3	43-2570	Gasket	39 38 1
20-7150	Asm-Toggle Switch	2 34 1	43-2580	Magnet	39 35 1
21-0360	Nut-Hex.	9 6 1	43-2710	O-Ring	48 36 2
21-4191	Asm-Belt, Seat	44 2 2	43-2820	Cap-Sealing	47 47 1
21-9260	Spacer	5 4 1	43-3160	Screw-Adjusting	46 44 1
23-7270	Nut-Lug	20 4 10	43-5920	Washer-Lock	30 17 1
23-7270	Nut-Lug	23 17 10	43-5960	Nut-Special	47 46 1
26-0071	Bumper	1 7 2	43-5970	Nut	39 23 2
27-2360	Asm-Ignition Switch	2 19 1	43-6550	Ring-Retaining	5 10 2
27-5360	Hose-Fuel	30 13 1	44-0760	Decal-Warning	18 33 2
27-5360	Hose-Fuel	39 14 2	44-2230	Disc-Rubber	28 4 2
27-6590	Spacer-Thick	28 7 4	46-3710	Fitting-90°	39 32 2
27-6600	Spacer-Thin	28 3 4	46-6560	Bushing	40 33 1
28-0540	Bolt-Shoulder	8 46 1	46-7510	Hood-Inlet, Air	40 21 1
28-8200	O-Ring	6 27 1	46-8091	Screw-HFH	26 10 4
28-8210	Bolt-FHH	6 17 4	48-7560	Screw-HH	33 24 1
28-8220	Nut-Lash Adjuster	6 16 1	48-7650	Screw-HH	39 1 2
28-8270	Kit-Seal Service, End Plug	7 * 1	48-7700	Screw-HH	36 9 3
28-8280	Kit-Seal, Side Cover	6 14 1	48-7730	Screw-HH	33 18 5
28-8290	Kit-Seal, Service	7 * 1	48-7740	Screw-HH	5 15 4
33-3090	Bushing-Flange	18 7 4	48-7880	Nut-Lock	30 18 1
36-3400	Decal-No Step	38 10 1	48-7930	Nut-Hex.	33 2 1
36-4790	Washer-Thrust	30 39 3	48-8000	Washer-Lock	39 24 2
39-7310	O-Ring	42 13 2	48-8070	Washer-Flat	5 6 1
39-7310	O-Ring	6 35 3	48-9520	Nut-Lock	32 11 3
39-7420	Washer-Lock	5 22 1	48-9520	Nut-Lock	22 28 2
39-7420	Washer-Lock	6 42 1	48-9590	Washer-Lock	30 29 10
39-7440	Nut-Lock	5 23 1	49-7810	Nut-Lock	39 42 2
39-7440	Nut-Pitman Arm	6 41 1	51-5610	Pin-Alignment	30 20 3
42-7080	Cap	45 2 2	51-5610	Pin-Dowel	46 26 3
42-7160	Pin-Dowel	51 46 1	52-1570	Bolt Set	55 8 1
42-7190	Bushing	51 33 2	52-2480	Spacer	44 7 4
42-7210	Plug	49 19 1	53-8150	Asm-Fuel Pump	39 39 1
42-7290	Gasket-Oil Drain	49 16 2	53-8150	Asm-Pump	53 * 1
42-7510	Pipe	48 9 2	54-0110	Element-Oil Filter	39 30 1
42-7840	Key	45 20 1	54-8660	Washer-Flat	56 4 1
42-7860	Lock	46 33 12	55-7120	Switch-Brake Light	8 32 1
42-7870	Seal	46 30 6	56-0020	Plug	51 12 3
42-8240	Gasket	52 6 3	56-0020	Plug	45 24 3
42-8830	O-Ring	54 6 1	56-0020	Plug-Expansion	48 18 1
42-8830	O-Ring	54 10 1	56-0100	Plug	51 37 1
42-9110	Gasket	48 21 1	56-0220	Pin	51 35 2
42-9110	Gasket-Muffler	30 25 1	56-0480	Key-Woodruff	45 8 1
42-9250	Screw-HH	12 43 1	56-0480	Key-Woodruff	46 18 2
42-9260	Plug	49 15 1	56-1230	Shaft-Oil Filter	51 28 1
42-9420	Bolt-Speed Set	54 33 1	56-1580	Armature Set	55 23 1
42-9430	Bolt W/Washer	54 12 2	56-1590	Bearing-Front	55 22 1
42-9430	Bolt W/Washer	48 7 1	56-1600	Bearing-Rear	55 21 1
42-9440	Bolt & Washer	30 54 1	56-1610	Bolt	55 16 1
42-9440	Bolt W/Washer	46 25 4	56-1640	Stopper Set	55 13 1
42-9440	Bolt w/Washer	56 3 1	56-1670	Gear	55 10 1
42-9440	Bolt w/Washer	49 8 11	56-1680	Cover Set	55 9 1
42-9440	Screw-HH	30 1 3	56-1700	Asm-Brush Holder	55 18 1
42-9490	Bolt w/Washer	50 10 4	56-1710	Spring-Brush	55 19 4
42-9490	Bolt w/Washer	45 11 2	56-1720	Asm-Bracket (Rear)	55 17 1
42-9490	Bolt w/Washer	49 18 18	56-7973	Clamp-Hydraulic Tube	42 6 4
42-9510	Bolt	46 42 1	58-4250	Magnet	26 11 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
60-6750	Screw-HH	33	4	11	67-2700	Guide-Valve	48	42	6
62-5550	Decal-TORO	1	2	1	67-2710	Cap-Sealing	48	41	3
62-7650	Gasket-Sending Unit	40	3	1	67-2730	Bolt	48	43	8
63-7440	Solenoid-Shutoff	47	49	1	67-2740	Bolt-Flange	48	15	3
63-7640	Unit-Sending	40	4	1	67-2750	Asm-Cover	48	6	1
63-7790	Screw-HH	30	28	12	67-2760	Gasket	48	14	1
63-8140	Pulley	26	19	1	67-2770	Nut-Cap	48	12	2
63-8280	Head-Filter	39	18	1	67-2780	Washer	48	13	2
63-8290	Vent-Air	39	19	1	67-2850	Asm-Connecting Rod	46	9	3
63-8300	Element-Filter	39	20	1	67-2860	Bolt	46	12	6
63-8310	Drain-Filter	39	21	1	67-2890	Bearing Set 0.25 US	46	*	3
63-8360	Key-Ignition	2	10	1	67-2900	Bearing Set 0.50 US	46	*	3
63-9640	Hose-Fuel	40	12	1	67-2940	Nut-Jam	46	22	1
63-9640	Hose-Fuel Tank to Pump	39	33	1	67-2950	Washer	46	20	1
65-5100	Handle	26	9	2	67-2960	Washer-Lock	46	21	1
65-5220	Screw-HSH	16	27	3	67-2980	Gear-Ring	46	15	1
65-5360	Spring-Extension	5	35	1	67-2990	Bolt	46	14	4
66-3240	Cap-Radiator	26	12	1	67-3000	Washer	45	10	2
66-6840	Decal-Caution	22	29	2	67-3010	Cam Shaft	45	7	1
66-8700	Asm-Glow Plug Indicator	39	26	1	67-3030	Bearing	45	9	2
66-8800	Relay	39	12	1	67-3050	Bearing	45	22	1
67-2200	Seal	45	4	4	67-3060	Shaft	45	21	1
67-2210	Plug	51	36	3	67-3080	Ring-Retaining	45	23	1
67-2220	Guide	51	8	1	67-3100	Retainer	46	32	6
67-2230	Oil Seal	51	14	1	67-3110	Spring	46	31	6
67-2250	Bolt	45	5	8	67-3120	Tappet	46	6	6
67-2270	Case	51	15	1	67-3130	Valve-Intake	46	28	3
67-2280	Gasket	51	13	1	67-3140	Valve-Exhaust	46	29	3
67-2290	Cover	51	10	1	67-3150	Rod-Push	46	5	6
67-2300	Gasket	51	9	1	67-3160	Arm-Rocker	46	1	6
67-2310	Plate	49	6	1	67-3170	Spring	46	40	2
67-2320	Gasket-Plate	49	7	1	67-3180	Cap	46	34	6
67-2330	Bolt	50	3	2	67-3190	Asm-Rocker Shaft	46	38	1
67-2330	Bolt	51	16	6	67-3200	Stay-Rocker	46	35	3
67-2330	Bolt	48	34	4	67-3210	Screw-Adjusting	46	4	6
67-2340	Bolt w/Washer	49	3	3	67-3220	Pin	46	37	1
67-2340	Bolt w/Washer	51	11	2	67-3230	Nut-Jam	46	2	6
67-2340	Bolt w/Washer	48	17	2	67-3240	Ring-Retaining	46	3	2
67-2350	Plug	51	25	1	67-3250	Bolt-Rockers, Stay	46	43	2
67-2360	Bushing	51	26	2	67-3260	Washer	54	8	2
67-2370	Bushing	51	32	1	67-3260	Washer	46	41	6
67-2380	Bushing	51	27	3	67-3260	Washer-Lock	56	13	1
67-2390	Plug	51	24	1	67-3280	Shim 0.2	51	38	1
67-2410	Bearing Set 0.25	45	*	1	67-3290	Shim 0.3	51	*	1
67-2420	Bearing Set 0.50	45	*	1	67-3300	Shim 0.5	51	*	1
67-2440	Bolt w/Washer	51	22	6	67-3310	Shim 0.4	51	*	1
67-2450	Dipstick	51	5	1	67-3320	Shim 0.6	51	*	1
67-2480	Gasket-Oil Pan	49	17	1	67-3330	Shim 0.7	51	*	1
67-2500	Plunger	49	25	1	67-3340	Shim 0.8	51	*	1
67-2510	Spring	49	26	1	67-3350	Shim 0.9	51	*	1
67-2520	Plug	49	28	1	67-3360	Shim 1.0	51	*	1
67-2530	Gear-Inner	49	12	1	67-3370	Bolt w/Washer	51	39	4
67-2540	Gear-Outer	49	11	1	67-3380	Asm-Nozzle & Holder	53	*	3
67-2550	Housing-Oil Pump	49	10	1	67-3380	Asm-Nozzle & Holder	51	6	1
67-2560	Bolt w/Washer	49	9	3	67-3390	Gasket	51	7	3
67-2570	Plug	49	29	1	67-3400	Asm-Pipe No. 1	51	42	1
67-2570	Plug-Taper	48	19	1	67-3410	Asm-Pipe No. 2	51	43	1
67-2580	Gasket-Case	49	2	1	67-3420	Asm-Pipe No. 3	51	1	1
67-2590	Oil Seal	49	23	1	67-3430	Nut	51	2	3
67-2600	Bolt	50	5	1	67-3440	Gasket	51	4	3
67-2600	Bolt	49	21	3	67-3460	Sub-Asm-Housing	52	9	1
67-2610	Bolt	50	9	2	67-3470	Holder-Delivery Valve	52	3	3
67-2610	Bolt	49	22	4	67-3480	O-Ring	52	4	3
67-2620	Bolt	49	24	1	67-3490	Spring	52	5	3
67-2630	O-Ring	49	20	2	67-3500	Sub-Asm-Valve	52	7	3
67-2640	Cap	49	30	1	67-3520	Sub-Asm-Sleeve	52	10	3
67-2650	Asm-Oil Fill Cap	49	32	1	67-3530	Seat	52	11	3
67-2650	Cap-Oil Filler	48	11	1	67-3540	Spring	52	12	3
67-2660	O-Ring	49	31	1	67-3550	Seat	52	13	3
67-2660	O-Ring	48	47	1	67-3560	Plate-Shim 1.85	52	14	1
67-2670	Hose-Breather	48	8	1	67-3570	Plate-Shim 1.9	52	*	1
67-2680	Hanger-Engine	48	16	2	67-3580	Plate-Shim 1.95	52	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-599

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-3590	Plate-Shim 2.0	52 * 1	67-4470	Bolt	48 33 1
67-3600	Plate-Shim 2.05	52 * 1	67-4480	Pipe-By-Pass	48 37 1
67-3610	Plate-Shim 2.1	52 * 1	67-4490	Gasket	48 49 1
67-3620	Plate-Shim 2.15	52 * 1	67-4490	Gasket	31 60 1
67-3630	Plate-Shim 2.2	52 * 1	67-4550	Gasket-Intake Manifold	48 44 1
67-3640	Plate-Shim 2.25	52 *14 1	67-4570	Gasket-Exhaust Manifold	48 26 1
67-3650	Plate-Shim 2.3	52 * 1	67-4590	Bolt	48 23 6
67-3660	Plate-Shim 2.35	52 * 1	67-4620	Spacer	56 24 1
67-3670	Plate-Shim 2.4	52 * 1	67-4640	Bolt	56 22 1
67-3680	Plate-Shim 2.45	52 * 1	67-4660	Bolt-Flange	56 2 1
67-3690	Plate-Shim 2.5	52 * 1	67-4670	Nut	56 12 1
67-3700	Asm-Tappet	52 15 3	67-4690	Plate-Glow Plug	48 40 1
67-3710	Screw-Air Bleed	52 24 1	67-4720	Asm-Lever	55 4 1
67-3720	Washer	52 23 1	67-4730	Spring Set	55 5 1
67-3730	Screw	52 22 1	67-4750	Asm-Switch	55 7 1
67-3740	Nipple	52 21 1	67-4760	Asm-Shaft	55 15 1
67-3750	Washer	52 20 2	67-4770	Pinion Set	55 14 1
67-3760	Plate-Lock	52 2 3	67-4780	Gear Set	55 12 1
67-3770	Screw w/Washer	52 1 3	67-4790	Asm-Shaft	55 11 1
67-3780	Asm-Rack	52 19 1	67-4800	Yoke Asm-	55 20 1
67-3790	Screw	52 17 2	67-5040	Spring	54 20 1
67-3800	Bracket	52 18 1	68-3840	Ball Joint	8 23 1
67-3810	Pin	52 16 3	68-3841	Asm-Ball Joint	8 45 1
67-3830	Washer 1.25	53 31 1	68-9950	Spring-Extension	32 38 1
67-3840	Washer 1.3	53 * 1	70-1480	Relay-S.P.D.T.	39 44 1
67-3850	Washer 1.35	53 * 1	70-1480	Relay-Sealed	2 39 2
67-3860	Washer 1.4	53 * 1	70-1480	Relay-Sealed	22 41 2
67-3870	Washer 1.45	53 * 1	70-8560	Retainer-Indicator	39 27 1
67-3880	Washer 1.5	53 * 1	70-8680	Pulley-Crankshaft	46 19 1
67-3890	Washer 1.55	53 * 1	70-8700	Pipe-Fuel Return	51 3 1
67-3900	Washer 1.6	53 * 1	70-8720	Spring-Tie Rod	54 22 1
67-3910	Washer 1.65	53 * 1	70-8750	Manifold-Exhaust	48 24 1
67-3920	Washer 1.7	53 * 1	70-8760	Asm-Starter	55 1 1
67-3930	Spring	52 30 3	70-8770	Asm-Front Bracket	55 3 1
67-3940	Pin	52 29 3	70-8780	Asm-Center Bracket	55 6 1
67-3950	Piece	52 28 3	71-3381	Tube-Overflow	26 1 2
67-3960	Asm-Nozzle	52 27 3	71-3383	Hose-Overflow	26 4 1
67-3970	Nut	52 25 3	72-4310	Switch-Ball N.C.	32 40 1
67-3980	Gasket	52 26 3	74-0720	Tube-Manual	14 28 1
67-3990	Lever-Speed Control	54 1 1	75-4900	Bearing Set STD	45 3 1
67-4000	Pin	54 2 2	75-4910	Asm-Oil Pan	49 14 1
67-4010	Stopper	54 15 1	75-4970	Sub-Asm-Element	52 8 3
67-4030	Rod-Tie	54 23 1	75-4980	Lever-Governor Spring	54 7 1
67-4040	Asm-Weight	54 13 1	75-4990	Spring-Governor	54 25 1
67-4050	Shaft-Governor	54 19 1	75-5000	Sub-Asm-Body	53 32 3
67-4060	Lever-Governor	54 18 1	75-5010	Bearing Set STD	46 8 3
67-4070	Shaft-Sliding	54 16 1	75-5020	Asm-Pump	51 41 1
67-4080	Clip	54 24 1	75-5040	Kit-Gasket	49 * 1
67-4090	Lever-Tension	54 21 1	75-5050	Ring Set STD	46 11 3
67-4120	Pin-Grooved	54 35 1	75-5060	Ring Set 0.25 OS	46 * 3
67-4140	Lever-Stop	54 11 1	75-5070	Ring Set 0.50 OS	46 * 3
67-4150	Lever-Stop	54 40 1	75-5110	Asm-Cover	46 24 1
67-4160	Gasket	54 5 1	75-5120	Gasket	47 45 1
67-4250	Cover	47 48 1	75-6820	Hourmeter	2 14 1
67-4270	Bolt	54 3 4	76-8750	Plate-Warning	26 16 1
67-4280	Bolt W/Washer	54 17 1	76-9100	Spacer	29 17 6
67-4290	Nut	54 34 1	76-9430	Spring-Extension	8 28 1
67-4310	Gasket	46 23 1	80-6990	Washer	23 28 4
67-4330	Asm-Oil Filter	51 40 1	80-6990	Washer-Flat	32 12 3
67-4340	Asm-Screen	51 31 1	80-8040	Decal-Caution	28 1 1
67-4350	Oil Pressure Switch	50 8 1	83-9150	Decal-Fluid	28 18 1
67-4360	Pulley	50 1 1	84-1880	Fan	26 29 1
67-4380	Asm-Pump	50 6 1	84-2780	Decal-No Step (Japan)	38 10 1
67-4390	Gasket	50 7 1	86-4760	Spring	30 48 3
67-4400	Bolt	48 1 2	87-0150	Tower-Control Arm RH	18 9 1
67-4400	Bolt	50 4 1	87-0160	Tower-Control Arm LH	18 * 1
67-4430	Gasket-Thermostat	30 43 1	87-0210	Arm-Control Lower RH	19 18 1
67-4430	Gasket-Thermostat	48 46 1	87-0220	Arm-Control Lower LH	19 * 1
67-4450	Fitting-Thermostat	48 32 1	87-0270	Drum-Brake	20 6 2
67-4450	Fitting-Thermostat	31 61 1	87-0370	Arm-Pitman	5 21 1
67-4460	Gasket (Thermostat Fitting)	48 31 1	87-0690	Spring-Compression	18 15 2
67-4460	Gasket-Fitting	31 58 1	87-1430	Joint-Ball	19 16 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-1450	Bushing-Rubber	19 1 8	87-3580	Retainer	22 4 2
87-1470	Asm-Rod End LH Thread	20 20 2	87-3580	Retainer	20 15 2
87-1480	Asm-Rod End RH Thread	20 22 2	87-3580	Retainer-Brake Hose	23 2 2
87-1490	Spring-Leaf	22 15 2	87-3580	Retainer-Brake Hose	19 3 2
87-1500	Asm-Steering Gear	5 20 1	87-3580	Retainer-Brake Hose	10 8 2
87-1500	Steering Gear (Complete)	7 * 1	87-3590	Seal-Bearing	23 20 2
87-1910	Pin-Alignment	12 13 2	87-3590	Seal-Bearing	20 25 2
87-1920	Seal-Shaft	12 8 2	87-3600	Spacer	18 3 10
87-1970	Bearing-Matched Set	23 *18 2	87-3610	Bracket-Detent	5 34 1
87-2040	Lever-Shift	16 10 1	87-3650	Pin-Shift	16 11 1
87-2080	Stud-Drive	23 13 10	87-3660	Spring-Compression	16 20 1
87-2100	Bearing-Release	12 26 1	87-3710	Asm-Overflow Reservoir	26 3 1
87-2110	Asm-Tail Light	43 3 1	87-3750	Cover-Steering Wheel	5 9 1
87-2120	Asm-Headlight	1 3 2	87-3760	Plate-Shift Boot	13 4 1
87-2240	Housing-Axle	23 8 2	87-3770	Bushing-Sleeve	12 9 2
87-2260	Boot-Shift Lower	16 18 1	87-3780	Box-Glove	2 3 1
87-2280	Bearing	5 25 3	87-3800	Bracket-Seat Bottom	13 23 3
87-2310	Clevis-Cable	16 2 2	87-3820	Wheel-Steering	5 7 1
87-2310	Clevis-Cable	32 35 2	87-3850	Bar-Anti-Sway	18 17 1
87-2410	Rod-Tie	20 18 2	87-3860	Link-Anti-Sway Bar	18 5 2
87-2420	Boot	19 19 4	87-3890	Bracket-Anti-Sway Bar	18 18 2
87-2440	Bumper	1 5 2	87-3910	Bushing-Anti-Sway Bar	18 19 2
87-2480	Link-Stabilizer	18 24 2	87-3920	Bushing-Rubber	18 4 24
87-2500	Sleeve-Spring Pivot	18 12 2	87-3920	Bushing-Rubber	22 7 8
87-2510	Bracket-Seat Frame	14 12 2	87-3940	Mount-Spring RH	22 * 1
87-2520	Tube-Pivot	16 14 1	87-3960	Mount-Spring LH	22 18 1
87-2710	Lever-Parking Brake	17 11 1	87-3980	Shackle-Spring	22 11 4
87-2720	Driveshaft	28 10 1	87-3990	Asm-Oil Strainer	32 24 1
87-2750	Spacer-Bearing	28 12 1	87-4010	Clamp-Anti-Sway Bar	18 20 2
87-2790	Tube-Brake LH	19 * 1	87-4060	Spacer-Bearing	23 19 2
87-2800	Tube-Brake RH	19 20 1	87-4070	Bumper-Front	1 12 1
87-2820	Bracket-Hose	20 16 2	87-4080	Tube-Brake LH	23 5 1
87-2870	Bracket-Brake Hose	19 4 2	87-4090	Tube-Brake RH	23 1 1
87-2880	Shaft-Accelerator Pedal	8 6 1	87-4100	Hose-Brake	22 5 2
87-2900	Spring-Compression	16 15 1	87-4100	Hose-Brake	23 33 2
87-3010	Asm-Brake RH	20 9 1	87-4110	Puck-Engine Adapter	30 41 1
87-3010	Asm-Front Brake RH	21 * 1	87-4120	Driveshaft	28 5 1
87-3020	Asm-Brake LH	20 10 1	87-4150	Hose-Radiator Lower	26 32 1
87-3020	Asm-Front Brake LH	21 * 1	87-4150	Hose-Radiator Lower	30 35 1
87-3040	Reservoir-Master Cylinder	9 1 1	87-4260	Asm-Cable	16 12 2
87-3060	Washer-Flat	23 7 2	87-4260	Asm-Shift Cable	32 36 2
87-3070	Cable-Battery Pos.	30 34 1	87-4540	Asm-Hydraulic Tube	42 10 1
87-3080	Cable-Battery Neg.	38 23 1	87-4690	Cover-Clutch	30 21 1
87-3080	Cable-Battery Neg.	32 26 1	87-4700	Disc-Clutch	30 19 1
87-3100	Asm-Lower Shaft	5 * 1	87-4710	Spacer-Barking Brake	17 4 1
87-3110	Absorber-Shock	18 29 2	87-4720	Plate-Steering Boot	5 3 1
87-3110	Shock Absorber	22 8 2	87-4730	Guard-Belly	29 19 2
87-3120	Steering Column & Shaft	5 * 1	87-4760	Bushing	22 12 12
87-3130	Lever-Tilt Steering	5 36 1	87-4820	Bracket-Cable	32 25 1
87-3140	Support-Rear	40 15 1	87-4960	Clamp-Cable	16 26 1
87-3150	Support-Front	40 27 1	87-4970	Asm-Engine Mount	29 13 2
87-3160	Strap-Tank Support	40 29 2	87-4970	Asm-Transaxle Mount	32 16 2
87-3170	Pad-Tank Support Strap	40 30 2	87-5060	Pad-Seat	13 1 2
87-3250	Mount-Bearing	5 26 3	87-5100	Washer	32 15 4
87-3310	Clip-Brake Cable	20 24 2	87-5100	Washer-Flat	29 12 4
87-3310	Clip-Brake Cable	23 27 2	87-5110	Support-Lower	38 17 1
87-3340	Asm-Backrest	14 * 2	87-5120	Bracket-Battery Base	38 13 1
87-3370	Pulley	28 13 1	87-5130	Cover-Battery Base	38 9 1
87-3410	Housing-Thermostat	30 44 1	87-5280	Shaft-Release	12 4 1
87-3450	Plug	20 23 2	87-5300	Fork-Clutch	12 23 1
87-3460	Boot-Tilt Steering	5 2 1	87-5320	Guide-Release	12 25 1
87-3470	Bumper-Spring	22 14 2	87-5330	Washer	18 2 12
87-3480	Plate-Brake Equalizer	17 6 1	87-5340	Kit-Seal, Tie Rod End	20 * 4
87-3520	Clevis	16 22 1	87-5350	Bracket-Switch	12 14 1
87-3530	Button-Shifter	16 19 1	87-5360	Lever	12 17 1
87-3540	Link-Shift	16 13 2	87-5490	Switch-Neutral	12 15 1
87-3560	Tee-Brake Line	42 14 1	87-5560	Hub-Wheel	20 7 2
87-3560	Tee-Brake Line	10 18 1	87-5580	Asm-Fuel Gauge	2 13 1
87-3560	Tee-Brake Tube	22 23 1	87-5590	Asm-Temperature Gauge	2 8 1
87-3570	Fitting-Union	10 6 2	87-5730	Hose-Hydraulic	32 3 1
87-3570	Union-Brake Line	8 5 2	87-5730	Hose-Hydraulic	39 8 1
87-3570	Union-Brake Line	22 25 2	87-5770	U-Bracket-Tail Light	43 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-599

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-5800	Bracket-Mount	32 19 2	87-9300	Door-Clean Out	26 35 1
87-5920	Decal-Danger	13 31 1	87-9350	Asm-Hydraulic Tube	42 9 1
87-5930	Decal-Caution	13 32 1	87-9420	Decal-Caution	26 36 1
87-5940	Decal-Rollover	15 2 1	87-9430	Spindle-RH	20 13 1
87-5980	Decal-ROPS	15 3 2	87-9440	Spindle-LH	20 14 1
87-5990	Decal-PTO	23 40 1	87-9480	Fender-Front	13 19 2
87-6020	Decal-Brake	13 30 1	87-9500	Decal-Load	1 9 1
87-6040	Bracket-Shifter	16 24 1	87-9810	Foam-Overflow Tank	26 37 1
87-6060	Decal-ATF	23 29 1	92-0650	Bearing-Ball	35 22 1
87-6170	Frame-Seat	14 7 1	92-0651	Case-Transaxle	33 19 1
87-6240	Bracket-Seat Back	14 17 4	92-0652	Cover-Upper	33 7 1
87-6270	Asm-Socket & Bulb	2 43 4	92-0653	Cover-Side	33 9 1
87-6280	Plate-Seat Back	14 43 2	92-0654	Carrier-Differential	33 17 1
87-6290	Cushion-Seat Back	14 44 2	92-0655	Cover-Seal	33 30 1
87-6300	Lens	43 13 1	92-0656	Cover-P.T.O.	33 1 1
87-6310	Gasket	43 15 1	92-0657	Plate-Center	33 21 1
87-6320	Bulb-Headlight	1 31 2	92-0662	Cap-Oil	33 5 1
87-6330	Lens-Headlight	1 32 2	92-0663	Shaft-Main	35 16 1
87-6410	Bracket-Harness	12 18 2	92-0664	Hub-Synchro	35 12 2
87-6570	Foam-Seal	16 9 1	92-0665	Key-Synchro	35 23 6
87-6620	Screw	1 8 15	92-0666	Spring-Synchro	35 13 4
87-6620	Screw-Torx Hd.	12 42 2	92-0667	Ring-Synchro	35 6 3
87-6620	Screw-Torx PH	8 43 2	92-0668	Shifter-Synchro	35 7 2
87-6670	Decal-Fuse	2 32 1	92-0672	Gear-18T	35 19 1
87-6720	Knob	16 8 1	92-0673	Gear-14T	35 21 1
87-6890	Hold-Hand	13 35 1	92-0674	Shaft-Reduction	35 28 1
87-6900	Tube-Hydraulic	29 10 1	92-0677	Gear-49T	35 31 1
87-6910	Spring-Compression	32 9 1	92-0679	Gear-23T	35 25 1
87-6950	Receiver-LH	15 6 1	92-0680	Collar	35 26 1
87-6960	Receiver-RH	15 7 1	92-0681	Bearing-Needle	35 30 2
87-7040	Bracket-Oil Filter	39 4 1	92-0682	Washer-Thrust	35 29 1
87-7050	Cap-Reservoir	26 43 1	92-0684	Gear-33T	35 10 1
87-7090	Asm-Frame, R.O.P.S.	15 1 1	92-0687	Gear-16T	35 18 1
87-7110	Asm-Axle, Rear	23 4 1	92-0698	Shaft-Fork R-1	36 14 1
87-7150	Asm-Cradle, Spring	18 13 2	92-0699	Shaft-Fork 2-3	36 7 1
87-7170	Bracket-Clutch Spring	32 39 1	92-0700	Fork-Shift R-1	36 3 1
87-7270	Washer-Flat	23 21 6	92-0701	Fork-Shift 2-3	36 6 1
87-7280	Bracket-Belt, Seat	44 4 2	92-0705	Lock-Spindle	36 20 1
87-7290	Fitting-Hydraulic	29 9 1	92-0706	Cap-Fork Shaft	33 25 1
87-7330	Hose-Radiator Upper	26 7 1	92-0708	Shaft-Fork Hi-Lo	36 16 1
87-7330	Hose-Radiator Upper	30 45 1	92-0709	Fork-Shift Hi-Lo	36 17 1
87-7350	Hose-Suction	29 6 1	92-0710	Asm-Counter Shaft	34 14 1
87-7350	Hose-Suction	27 29 1	92-0710	Asm-Ring Gear	37 8 1
87-7380	Bracket-Relay/Indicator	39 10 1	92-0711	Washer-Thrust	34 4 2
87-7390	Battery	38 7 1	92-0712	Bearing-Ball	34 1 1
87-7470	Plate-Clamp	22 16 2	92-0713	Collar	34 12 1
87-7480	Washer-Flat	22 31 8	92-0714	Bearing-Ball	34 13 2
87-7480	Washer-Flat	5 37 3	92-0715	Gear-49T	34 6 1
87-7600	Rod-Battery Support	38 19 1	92-0716	Collar	34 2 1
87-7610	Tab-Battery Support	38 21 1	92-0717	Gear-71T	34 9 1
87-7620	Shield-Plastic	38 12 1	92-0718	Shifter-Hi-Lo	34 7 1
87-7660	Clamp-Brake Line	10 2 8	92-0719	Collar-Spline	34 8 1
87-7660	Clamp-Tube	8 40 2	92-0720	Case-Differential	37 31 1
87-7960	Lever-Shift Arm	32 13 1	92-0721	Fork-Differential Lock	37 17 1
87-7970	Arm-Shift	32 6 1	92-0722	Shaft-Lock Fork	37 18 1
87-8120	Bracket-Trim Side	1 20 2	92-0723	Spring-Compression	37 19 1
87-8130	Bracket-Trim Top	1 21 1	92-0724	Arm-Differential Lock	37 27 1
87-8160	Trim	1 22 1	92-0725	Shaft-Axle LH	37 28 1
87-8240	Cable-Parking Brake	17 8 2	92-0726	Shaft-Axle RH	37 1 1
87-8250	Plate-Shift Arm	32 4 1	92-0727	Washer	37 4 2
87-8440	Asm-Rear Frame	22 2 1	92-0728	Washer	37 2 1
87-8460	Bumper	12 34 1	92-0729	Seal-Oil	36 10 3
87-8471	Bracket-Clutch	12 7 1	92-0730	Slider-Differential Lock	37 7 1
87-8530	Decal-Dash	2 33 1	92-0731	Spring-Compression	36 2 3
87-8550	Asm-Control Panel	2 28 1	92-0732	Plate-Keeper	36 8 3
87-8620	Boot-Shift	13 5 1	92-0733	Washer	37 20 1
87-8640	Washer-Flat	16 16 1	92-0740	Washer-Thrust	35 3 3
87-8710	Tab-Clutch	12 40 1	92-0741	Washer-Thrust	34 10 1
87-8730	Stud-Drive	20 8 10	92-0743	Breather-Air	33 27 1
87-8780	Head-Oil Filter	39 29 1	92-0744	Washer	37 14 1
87-9080	Decal-Grease	23 30 2	92-0745	Gear-Side LH	37 24 1
87-9250	Asm-Transaxle	32 20 1	92-0746	Gear-Side RH	37 11 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-0747	Washer-Thrust	37	10	2	92-2176	Pin-Dowel	27	16	2
92-0748	Gear-Pinion	37	12	2	92-2177	Pin-Shear	27	7	1
92-0749	Shaft-Pinion	37	23	1	92-2178	Ring-Crescent	27	4	4
92-0750	Washer	37	13	2	92-2179	Key-Square	27	5	1
92-0753	Ring-Retaining	35	2	1	92-2180	Gasket-Copper	27	23	1
92-0753	Ring-Retaining	37	21	1	92-2181	Plate-Pressure	27	13	1
92-0754	Ring-Retaining	35	20	1	92-2182	Plate-Seal	27	9	1
92-0755	Ring-Retaining	34	11	1	92-2183	Plate-Wear	27	10	1
92-0756	Ring-Retaining	37	5	3	92-2184	Cap-Relief Valve	27	24	1
92-0759	Ring-Retaining	33	22	1	92-2185	Plug	27	19	1
92-0760	Ring-Retaining	33	15	1	92-2186	Spacer	27	3	1
92-0761	Ring-Retaining	36	18	1	92-2187	Housing-Gear, End	27	17	1
92-0762	Washer-Lock	33	3	1	92-2189	Shaft-Drive	27	6	1
92-0763	Ring-Retaining	35	14	3	92-2190	Shaft-Idler	27	25	1
92-0764	Ring-Retaining	34	3	3	92-2191	Bearing	27	27	1
92-0765	Pin-Alignment	33	8	4	92-2192	Bearing	27	12	4
92-0765	Pin-Alignment	37	9	2	92-2193	Ball	27	20	1
92-0768	Pin-Spring	37	15	2	92-2195	Seal-Oil	27	2	1
92-0769	Pin-Spring	36	4	2	92-2196	Seal-Pressure Plate	27	15	1
92-0770	Pin-Spring	37	26	1	92-2197	Seal-Back Up	27	14	1
92-0771	Pin-Spring	37	16	1	92-2198	Seal	27	26	1
92-0772	Key	35	17	2	92-2199	Key-Ball	27	28	1
92-0773	Asm-Drain Plug	33	13	1	92-2379	Clamp-Hose	26	2	2
92-0775	Bearing-Ball	37	6	2	92-2379	Clamp-Hose	40	32	1
92-0775	Bearing-Ball	33	33	2	92-2379	Clamp-Hose	39	34	1
92-0776	Bearing-Ball	37	29	1	92-4100	Asm-Backplate RH	25	*	1
92-0778	Bearing-Ball	35	11	2	92-4101	Asm-Primary Piston	9	11	1
92-0780	Bearing-Ball	37	3	1	92-4102	Asm-Secondary Piston	9	4	1
92-0781	Bearing-Needle	35	4	4	92-4103	Pin-Stop	9	3	1
92-0782	Bearing-Needle	35	33	1	92-4108	Washer-Retainer	9	10	1
92-0783	Sleeve-Inner	34	5	1	92-4109	Circlip	9	9	1
92-0785	Ball	36	1	3	92-4110	Clevis	9	5	1
92-0787	O-Ring	33	12	1	92-4111	Petcock-Radiator	26	38	1
92-0787	O-Ring	37	22	1	92-4112	Asm-Cap	9	12	1
92-0788	O-Ring	33	6	1	92-4113	Screw-Bleed	21	4	1
92-0789	O-Ring	33	14	1	92-4113	Screw-Bleed	25	4	1
92-0790	O-Ring	33	29	1	92-4114	Cap-Bleed Screw	21	5	1
92-0791	Seal-Oil	33	26	1	92-4114	Cap-Bleed Screw	25	5	1
92-0793	Seal-Oil	33	16	2	92-4115	Asm-Backplate LH	21	2	1
92-0793	Seal-Oil	37	32	2	92-4116	Asm-Backplate RH	21	*	1
92-0796	Screw-HH	33	31	5	92-4117	Asm-Wheel Cylinder LH	21	*	1
92-0803	Screw-HFH	37	30	12	92-4117	Asm-Wheel Cylinder RH	25	*	1
92-0804	Stud	33	28	1	92-4118	Asm-Wheel Cylinder LH	25	*	1
92-0807	Cap-Sealing	33	23	1	92-4118	Asm-Wheel Cylinder RH	21	*	1
92-0808	Shim Set	33	20	1	92-4119	Kit-Seal	21	*	1
92-0809	Shim Set	33	11	1	92-4119	Kit-Seal	25	*	1
92-0816	Arm-Shift Fork R-1	36	15	1	92-4120	Shoe & Lining Set	21	13	1
92-0817	Arm-Shift Fork 2-3	36	5	1	92-4121	Asm-Adjuster LH	21	*	1
92-0818	Arm-Shift Fork Hi-Lo	36	19	1	92-4122	Asm-Adjuster RH	21	*	1
92-0819	Gear-40T	35	32	1	92-4123	Asm-Pawl LH	21	19	1
92-0820	Gear-27T	35	5	1	92-4123	Asm-Pawl LH	25	19	1
92-0821	Gear-24T	35	15	1	92-4124	Asm-Pawl RH	21	*	1
92-0822	Gear-28T	35	24	1	92-4124	Asm-Pawl RH	25	*	1
92-0823	Gear-43T	35	27	1	92-4125	Plug	21	3	1
92-0824	Shaft-Reverse Idler	35	9	1	92-4126	Spring-Shoe, Upper LH	21	14	1
92-0827	Gear	45	12	1	92-4127	Spring-Shoe, Upper RH	21	*	1
92-0830	Plate-Rear	51	47	1	92-4128	Spring-Shoe, Lower	21	15	1
92-0831	Pin-Knock	51	48	1	92-4129	Spring-Adjuster, LH	21	20	1
92-0835	Gear	46	7	1	92-4130	Spring-Adjuster, RH	21	*	1
92-0836	Asm-Flywheel	46	13	1	92-4131	Washer-Hold Down	21	22	2
92-0839	Plate	45	14	1	92-4131	Washer-Hold Down	25	22	2
92-0840	Gear	45	17	1	92-4132	Spring-Hold Down	21	23	2
92-0841	Ring-Retaining	45	15	1	92-4133	Pin-Hold Down	21	26	2
92-0842	Asm-Gear	45	13	1	92-4133	Pin-Hold Down	25	26	2
92-0843	Bolt w/Washer	55	2	2	92-4134	Plug-Inspection	21	25	1
92-0844	Plug-Glow	48	39	3	92-4134	Plug-Inspection	25	25	1
92-0845	Crankshaft	46	16	1	92-4135	Set Bolt	21	1	2
92-1295	Kit-Belt, Seat	44	*	2	92-4135	Set Bolt	25	1	2
92-1914	Bearing-Ball	46	27	1	92-4136	Asm-Backplate LH	25	2	1
92-2173	Screw-CSH	27	18	8	92-4143	Shoe & Lining Set	25	13	1
92-2174	Screw-Adjusting	27	22	1	92-4144	Asm-Adjuster LH	25	*	1
92-2175	Gear	27	11	2	92-4145	Asm-Adjuster RH	25	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-599

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-4146	Plug	25 3 1	93-7145	Screw-HH	5 19 3
92-4147	Spring-Shoe, Upper LH	25 14 1	93-8938	Bracket-Cover Mount LH	26 44 1
92-4148	Spring-Shoe, Upper RH	25 * 1	93-8939	Bracket-Cover Mount RH	26 46 1
92-4149	Spring-Shoe, Lower	25 15 1	93-8940	Cover-Radiator	26 45 1
92-4150	Spring-Adjuster, LH	25 20 1	93-8943	Bracket-Fender, Rear LH	43 5 1
92-4151	Spring-Adjuster, RH	25 * 1	93-8961	Arm-Accelerator Pedal	8 10 1
92-4152	Spring-Hold Down	25 23 2	93-8965	Pedal-Brake	8 27 1
92-4153	Asm-Steering Column	5 11 1	93-8969	Pedal-Accelerator	8 15 1
92-4154	Asm-Universal Joint	5 31 1	93-8970	Asm-Cylinder Head	48 28 1
92-4155	Asm-Slip Joint, Upper	5 28 1	93-8971	Seal-Port, Flange	9 2 2
92-4156	Asm-Slip Joint, Lower	5 29 1	93-8972	Shaft-Idler	51 34 1
92-4157	Boot-Steering Shaft	5 24 1	93-8973	Piston & Pin Set STD	46 10 3
92-4158	Asm-Valve, Hyd. Gear	7 * 1	93-8974	Thermostat	30 42 1
92-4159	Nut-Adjuster Plug Lock	6 25 1	93-8974	Thermostat	48 45 1
92-4160	Kit-Bearing Service, Upper	7 * 1	93-8975	Piston & Pin Set 0.25 OS	46 * 3
92-4161	Asm-Cover Service	6 * 1	93-8976	Piston & Pin Set 0.50 OS	46 * 3
92-4162	Pitman Shaft-Gear Service	7 * 1	93-8995	Rod-Threaded	30 46 1
92-4163	Asm-Steering Housing	7 * 1	93-9164	Indicator-Service (Optional)	40 39 1
92-4164	Asm-Plug, Service Adjust.	7 * 1	93-9539	Strip-Tapped	32 46 1
92-4165	Plug-Housing End	6 2 1	93-9879	Decal-Warning (Europe)	18 33 2
92-4166	Asm-Rack/Piston/Nut	7 * 1	94-1257	Asm-Block Sub	45 1 1
92-4167	Asm-Plug Service	7 * 1	94-1258	Gasket-Cylinder Head	48 25 1
92-4168	Return-Guide Ball	6 7 2	94-1259	Sub-Asm, Case	49 1 1
92-4169	Bearing-Needle	6 21 1	94-1414	Valve-Vacuator	41 5 1
92-4170	Bearing-Pitman Shaft	6 47 1	94-1416	Adapter Asm-Indicator	40 38 1
92-4179	Yoke, Shaft & Seal Tube	23 43 2	94-3533	Cover (Intake)	48 5 1
92-4180	Seal	23 42 2	94-3652	Asm-Cover	41 4 1
92-4182	Yoke & Hub	23 41 2	94-3800	Asm-Master Cylinder	8 3 1
92-4187	Kit-Cross & Bearing	23 47 4	94-3814	Tube-Hydraulic	8 1 1
92-4188	Ring-Snap	23 39 12	94-3815	Tube-Hydraulic	8 2 1
92-4189	Kit-Strap & Bolt	23 31 2	94-3819	Tube-Brake Rear	10 5 1
92-4190	Yoke-End	23 32 2	94-3820	Tube-Brake Front	10 1 1
92-4198	Asm-Fan Shroud	26 17 1	94-3821	Plate-Center, Frame	8 34 1
92-6493	Decal-Warning (Japan)	18 33 2	94-3827	Spring-Return	54 41 1
92-6982	Spacer-Plate	32 43 1	94-3829	Pin-Clevis	17 7 1
92-7905	Switch-Reverse	32 50 1	94-3836	Cable-Accelerator	30 6 1
93-0307	Nut-Retainer	20 31 2	94-3836	Cable-Accelerator	8 47 1
93-0309	Washer-Tab	20 3 2	94-3837	Cable-Clutch	3 52 1
93-2191	Asm-Band, Mounting	40 36 1	94-3838	Bracket-Mudflap LH	1 27 1
93-2195	Element-Air Cleaner	41 3 1	94-3839	Bracket-Mudflap RH	1* 28 1
93-3102	Cap-Fuel	40 1 1	94-3842	Tube-Brake Rear	10 12 1
93-3525	Gauge-Water Temp.	48 35 1	94-3843	Tube-Brake LH	22 22 1
93-3525	Gauge-Water Temp.	31 62 1	94-3844	Asm-Tube, Brake Rear LH	22 32 1
93-3526	Asm-Switch, Thermo	48 48 1	94-3844	Tube-Brake LH	22 * 1
93-3526	Asm-Switch, Thermo	31 59 1	94-3845	Tube-Brake RH	22 20 1
93-3919	Bracket-Switch, Reverse	32 49 1	94-3846	Tube-Brake RH	22 3 1
93-3920	Alarm-Backup	43 18 1	94-5202	Asm-Lever Support	16 6 1
93-3921	Bracket-Alarm, Reverse	43 16 1	94-5209	Cover-Dust	9 7 1
93-3928	Harness-Wire, Reverse	32 45 1	94-5210	Rod-Push	9 8 1
93-6687	Decal-No Step (Europe)	38 10 1	94-5213	Muffler	30 31 1
93-7051	Asm-Radiator	26 39 1	94-5221	Flap-Master Cylinder	8 42 1
93-7053	Asm-Warning Light	2 9 1	94-5223	Bell Crank	8 19 1
93-7081	Tube-Brake Front RH	10 10 1	94-5237	Pulley	26 26 1
93-7082	Tube-Brake Front LH	10 16 1	94-5238	Hose-Air Intake	30 11 1
93-7085	Tube-Brake Front	10 19 1	94-5240	Asm-Operators Platform	1 13 1
93-7088	Support-Fan	26 20 1	94-5256	Bell Crank	30 8 1
93-7090	Stub-Axle	23 14 2	94-5259	Bracket-Accelerator	30 4 1
93-7094	Cover-Wire Harness	2 24 1	94-5272	Decal-Warning	2 16 1
93-7099	Frame-Engine	29 1 1	94-5299	Rod-Link	8 25 1
93-7100	Mount-Engine	29 5 1	94-5428	Elbow	40 19 1
93-7100	Mount-Engine	30 40 1	95-5805	Asm-Air Cleaner	40 23 1
93-7103	Screen-Radiator	26 8 1	95-7394	Shaft-Brake	8 35 1
93-7120	Housing-Bell	12 10 1	98-2915	Asm-Fuel Tank	40 2 1
93-7123	Hose-Brake Front	19 8 2	98-2918	Asm-Driveshaft	23*24 2
93-7123	Hose-Brake Front	10 9 2	98-2920	Engine	31 55 1
93-7128	Drum-Brake	23 15 2	98-2925	Asm-Front Housing	56 9 1
93-7130	Harness-Wire	30 15 1	98-2926	Screw Set (3 Screws)	56 7 1
93-7130	Harness-Wire	39 25 1	98-2927	Bearing-Front	56 8 1
93-7130	Harness-Wire Rear	38 22 1	98-2928	Asm-Rotor	56 10 1
93-7133	Arm-Control Upper LH	19 * 1	98-2929	Nut-Set	56 1 1
93-7135	Arm-Control Upper RH	19 21 1	98-2930	Pulley Set	56 23 1
93-7140	Belt-V	28 14 1	98-2931	Bolt Set (4 Bolts)	56 5 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
98-2932	Bearing-Rear	56	11	1	2412-34	Clamp-Hose	26	6	2
98-2933	Asm-Stator	56	21	1	2412-34	Clamp-Hose	29	7	1
98-2934	Asm-Rear Housing	56	15	1	2412-36	Clamp	40	8	1
98-2935	Asm-Regulator	56	17	1	2412-36	Clamp-Hose	32	2	1
98-2936	Asm-Brush	56	19	2	2412-36	Clamp-Hose	39	7	2
98-2937	Asm-Rectifier	56	16	1	2412-89	Clamp-R	38	20	1
98-2938	Nut Set-Terminal	56	18	1	2412-89	Clamp-R	10	21	1
98-2939	Screw-HH	23	26	4	2412-89	Clamp-R	12	29	1
98-2940	Yoke-Double Clamp	23	44	2	2412-89	Clamp-R	2	30	1
98-2945	Hose	30	14	1	2412-92	Clamp-Hose	30	10	2
98-2945	Hose-Fuel	40	11	1	2412-92	Clamp-Hose	40	20	3
98-2947	V-Belt	50	2	1	2412-93	Clamp-R	43	8	1
98-2948	Brace-Generator	56	6	1	2412-105	Clamp-R	5	17	2
98-2949	Alternator Assembly	56	*	1	2412-106	Clamp-R	29	11	1
98-2952	Fitting-Straight	40	9	1	2412-108	Clamp-Hose	40	10	1
98-2962	Kit-Seal, Pitman Shaft	7	*	1	2412-108	Clamp-Hose	30	12	2
98-2964	Decal-Workman 3310D	1	19	1	2412-108	Clamp-Hose	39	15	3
98-2967	Driveshaft Assembly Kit	24	*	2	2412-133	Clamp-R	14	29	2
98-2968	Yoke Kit	24	*	2	2412-149	Clamp-R	30	37	1
98-2969	1/2 Yoke Kit	24	*	2	2412-149	Clamp-Tube	22	24	4
98-2972	Cover-Console	13	6	1	251-8	Bearing-Ball	35	1	2
98-2977	Asm-Tire & Wheel	20	5	2	251-82	Bearing-Ball	28	11	2
98-2978	Asm-Tire & Wheel	23	16	2	251-346	Bearing-Ball	35	8	1
98-2979	Hood	1	1	1	254-72	Cup-Bearing	20	28	2
98-2982	Element-Filter Safety	41	*	1	254-94	Cone-Bearing	20	29	2
98-2982	Filter-Element, Safety	40	37	1	254-106	Cone-Bearing	20	26	2
99-1052	Plate-Hi-Lo	32	42	1	254-107	Cup-Bearing	20	27	2
99-1053	Asm-Hose	42	15	1	256-155	Bushing-Flange	8	26	2
99-1053	Asm-Hose	27	36	1	256-156	Bushing-Flange	12	36	2
99-1054	Asm-Hydraulic Pump	26	22	1	256-247	Bushing-Flange	8	18	2
99-1058	Asm-Hose	42	16	1	256-259	Bushing-Flange	8	9	2
99-1058	Hose-Hydraulic	39	43	1	283-2	Pin-Clevis	8	4	1
99-1060	Spring	27	21	1	283-30	Pin-Clevis	8	12	1
99-1063	Timer-Delay	22	38	1	283-62	Pin-Clevis	16	3	2
99-1075	Bracket-Mount, Relay	22	34	1	283-62	Pin-Clevis	32	34	2
99-1082	Harness-Wire Rear	2	36	1	283-75	Pin-Clevis	12	35	1
99-1083	Harness-Wire Front LH	2	29	1	283-85	Pin-Clevis	8	14	1
99-1084	Asm-Front Wire Harness	2	22	1	285-17	Plug	41	1	1
99-1085	Decal-Quick Ref.	13	41	1	302-5	Fitting-Grease	30	5	1
99-1086	Asm-Skirt	13	22	1	302-5	Fitting-Grease	8	8	3
99-1087	Plug-Hole, Dash	3	59	1	302-5	Fitting-Grease	19	14	4
99-1199	Pedal-Clutch	12	37	1	302-5	Fitting-Grease	5	30	1
99-1201	Asm-Clutch Cable	12	1	1	302-5	Fitting-Grease	20	32	4
99-1202	Rod End	12	46	1	302-5	Fitting-Grease	12	44	1
99-9416	Asm-Brake LH	23	9	1	302-5	Fitting-Grease	23	45	2
99-9416	Asm-Rear Brake LH	25	*	1	302-11	Fitting-Grease	18	8	1
99-9417	Asm-Brake RH	23	10	1	302-58	Fitting-Grease	23	46	16
99-9417	Asm-Rear Brake RH	25	*	1	321-2	Screw-HH	2	1	7
218-446	Nut-Hex.	2	40	1	321-3	Screw-HH	2	4	2
218-447	Washer-Lock	2	41	1	321-3	Screw-HH	26	31	4
218-473	Boot-Switch	2	35	1	321-3	Screw-HH	5	33	2
218-574	Fuse-7.5 Amp	3	53	2	321-3	Screw-HH	22	40	2
218-578	Fuse-10 Amp	3	54	1	321-4	Screw-HH	26	5	4
218-600	Bulb	3	56	2	321-4	Screw-HH	38	6	1
219-17	Bulb-Warning Light	2	42	4	321-4	Screw-HH	29	8	1
233-39	Knob	5	1	1	321-4	Screw-HH	14	15	8
237-22	O-Ring	42	17	2	321-4	Screw-HH	10	22	1
237-22	O-Ring	27	35	1	321-4	Screw-HH	1	29	4
237-30	O-Ring	32	33	2	321-4	Screw-HH	12	30	1
237-42	O-Ring	32	41	1	321-4	Screw-HH	2	31	1
237-79	O-Ring	39	5	2	321-5	Screw-HH	30	2	1
237-79	O-Ring	27	33	1	321-5	Screw-HH	43	17	4
237-123	O-Ring	32	23	1	321-6	Screw-HH	43	1	2
240-5	Grommet	12	31	1	321-6	Screw-HH	19	5	2
241-119	Cap-Dust	20	1	2	321-9	Screw-HH	42	1	2
2410-35	Plug	2	6	1	321-9	Screw-HH	10	3	4
2410-42	Cap-Front Bumper	1	10	2	321-9	Screw-HH	17	9	1
2410-64	Plug-Hole	2	38	1	321-9	Screw-HH	8	38	1
2411-33	Joint-Ball	12	3	1	322-2	Screw-HH	10	11	1
2412-10	Clamp-R	19	7	2	322-2	Screw-HH	5	16	6
2412-34	Clamp	27	30	1	322-2	Screw-HH	40	22	2
2412-34	Clamp	30	36	2	322-2	Screw-HH	2	25	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3322-599

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-2	Screw-HH	26 42 6	3253-4	Washer-Lock	5 14 4
322-3	Screw-HH	22 33 4	3253-4	Washer-Lock	30 22 6
322-5	Screw-HH	28 2 4	3253-4	Washer-Lock	13 24 8
322-5	Screw-HH	43 9 2	3253-6	Washer-Lock	23 3 10
322-5	Screw-HH	19 10 2	3253-15	Washer-Lock	40 5 5
322-5	Screw-HH	42 11 1	3253-15	Washer-Lock	2 45 6
322-5	Screw-HH	13 25 8	3253-19	Washer-Lock	2 48 6
322-5	Screw-HH	26 25 4	3253-21	Washer-Lock	23 11 8
322-5	Screw-HH	8 36 1	3253-21	Washer-Lock	20 12 8
322-7	Screw-HH	28 9 4	3253-21	Washer-Lock	14 40 2
322-10	Screw-HH	44 5 4	3254-1	Washer-Lock	3 50 1
322-12	Screw-HH	16 17 1	3254-2	Washer-Lock	30 32 2
323-4	Screw-HH	40 16 2	3255-7	Washer-ETLW	39 41 1
323-4	Screw-HH	1 24 1	3255-7	Washer-Lock	43 20 3
323-6	Screw-HH	23 12 8	3255-9	Washer-Lock ETLW	38 3 1
323-6	Screw-HH	14 13 2	3256-3	Washer-Flat	44 6 8
323-7	Screw-HH	32 10 4	3256-3	Washer-Flat	28 8 4
323-7	Screw-HH	8 17 2	3256-4	Washer-Flat	32 8 1
323-8	Screw-HH	20 11 8	3256-6	Washer-Flat	22 9 4
323-9	Screw-HH	38 14 1	3256-6	Washer-Flat	18 32 2
323-10	Screw-HH	32 7 1	3256-14	Washer-Flat	22 37 1
323-12	Screw-HH	18 6 8	3256-14	Washer-Flat	32 47 2
324-9	Screw-HH	18 22 4	3256-22	Washer-Flat	43 2 4
324-10	Screw-HH	18 1 4	3256-22	Washer-Flat	10 4 4
324-12	Screw-HH	29 3 2	3256-22	Washer-Flat	2 5 2
324-13	Screw-HH	18 10 2	3256-22	Washer-Flat	42 7 3
325-4	Screw-HH	14 18 2	3256-22	Washer-Flat	39 11 1
325-13	Screw-HH	19 11 8	3256-22	Washer-Flat	26 14 4
325-13	Screw-HH	18 27 4	3256-22	Washer-Flat	14 16 8
325-19	Screw-HH	23 23 1	3256-22	Washer-Flat	8 39 3
325-20	Screw-HH	23 22 5	3256-22	Washer-Flat	12 41 2
3211-8	Screw-HH	16 5 2	3256-23	Washer-Flat	17 5 1
3212-4	Screw-HH	44 1 4	3256-23	Washer-Flat	43 10 2
3215-1	Screw-HH	32 14 2	3256-23	Washer-Flat	13 42 8
3215-2	Screw-HH	12 12 5	3256-23	Washer-Lock	12 38 4
3217-25	Nut-Hex.	2 46 6	3256-24	Washer-Flat	38 15 2
3217-26	Nut-Hex.	3 51 1	3256-25	Washer	30 30 6
3217-29	Nut-Jam	2 47 6	3256-25	Washer-Flat	29 4 2
3218-18	Nut-Jam	16 30 1	3256-26	Washer-Flat	12 11 4
3218-20	Nut-Jam	12 16 2	3256-26	Washer-Flat	8 21 1
3218-21	Nut-Jam	20 19 2	3256-27	Washer-Flat	22 6 4
3220-1	Nut-Jam	16 28 4	3256-27	Washer-Flat	18 31 2
3220-1	Nut-Jam	32 37 2	3256-28	Washer-Flat	28 15 1
3220-1	Nut-Jam	30 47 2	3256-45	Washer-Flat	26 27 1
3220-2	Nut-Jam	12 2 1	3256-61	Washer-Flat	13 21 14
3220-3	Nut-Jam	16 4 2	3256-67	Washer-Flat	39 40 3
3220-3	Nut-Jam	8 24 1	3257-7	Key-Woodruff	28 17 1
3220-7	Nut-Jam	20 2 2	3272-6	Pin-Cotter	16 1 2
3220-11	Nut-Jam	20 21 2	3272-6	Pin-Cotter	17 1 1
3220-16	Nut-Hex. Jam	8 44 1	3272-6	Pin-Cotter	8 7 1
3229-25	Nut-Lock	39 9 2	3272-6	Pin-Cotter	32 28 2
3230-18	Bolt-CARR	14 9 8	3272-10	Pin-Cotter	8 11 2
3230-23	Bolt-CARR	39 2 2	3272-10	Pin-Cotter	12 33 1
3230-23	Bolt-CARR	38 5 4	3272-12	Pin-Cotter	19 17 4
3230-23	Bolt-CARR	26 24 7	3272-12	Pin-Cotter	20 30 2
3231-21	Bolt-CARR	38 1 6	3272-12	Pin-Cotter	20 34 4
3231-21	Bolt-CARR	14 10 4	3274-31	Screw-Button Hd.	2 7 4
3231-21	Bolt-CARR	16 25 4	3274-54	Screw-HSH	40 28 2
3231-25	Bolt-CARR	18 21 4	3274-94	Screw-HSBH	39 46 1
3232-17	Bolt-CARR	22 19 8	3277-1	Nut-Hex.	5 5 1
3234-1	Screw-HFH	1 11 6	3290-271	Rivet-Pop	26 13 2
3234-4	Screw-HFH	39 45 4	3290-321	Screw-HFH	8 31 2
3234-4	Screw-HH	22 26 4	3290-357	Nut-Flange Lock	1 6 9
3234-11	Screw-HH	29 18 6	3290-357	Nut-HFH	38 2 6
3234-38	Screw-HFH	22 17 24	3290-357	Nut-HFH	16 7 4
3234-38	Screw-HH	40 31 2	3290-357	Nut-HFH	14 11 4
3234-40	Screw-HFH	15 4 4	3290-357	Nut-HFH	18 16 4
3245-31	Screw-Set	26 47 1	3290-357	Nut-HFH	40 18 2
3250-13	Screw	2 21 2	3290-357	Nut-HFH	26 21 1
3250-13	Screw-HH	13 3 20	3290-357	Nut-HFH	8 37 2
3250-20	Screw-RH	26 41 4	3290-378	Cable-Tie	40 34 1
3253-3	Washer-Lock	26 30 4	3290-378	Tie-Cable	29 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3290-379	Tie-Cable	30 38 1	32121-7	Pin-Roll	12 22 1
3290-413	Washer-Belleville	29 16 12	32121-24	Pin-Roll	12 24 2
3290-455	Washer	5 12 1	32121-48	Pin-Roll	16 23 1
3290-456	Washer-Belleville	16 31 2	32122-24	Screw-RH	40 6 5
3290-477	Washer-Curved	17 10 1	32128-20	Nut-Flange	10 17 1
3290-506	Palnut	43 7 2	32128-20	Nut-Flange	2 23 3
3290-507	Pin-Dowel	16 21 1	32128-20	Nut-Flange	5 27 6
3296-2	Nut-Lock	13 8 20	32128-20	Nut-HFH	22 35 4
3296-2	Nut-Lock	2 26 3	32128-20	Nut-HHF	19 6 2
3296-2	Nut-Lock	8 33 2	32128-20	Nut-HHF	14 14 8
3296-3	Nut-Lock	30 9 3	32128-20	Nut-HHF	38 16 2
3296-4	Nut-Lock	12 5 1	32128-20	Nut-HHF	40 25 4
3296-5	Nut-Lock	26 28 1	32128-20	Nut-HHF	8 29 2
3296-6	Nut-Lock	8 20 2	32128-20	Nut-Lock	42 12 1
3296-12	Nut-Lock	22 36 1	32128-20	Nut-Lock	26 40 6
3296-15	Nut-Lock	28 16 1	32128-21	Nut-HHF	32 5 1
3296-23	Nut-Lock	22 10 4	32128-23	Nut-HHF	15 5 4
3296-23	Nut-Lock	19 12 8	32128-23	Nut-HHF	40 17 2
3296-23	Nut-Lock	18 14 4	32128-23	Nut-HHF	22 21 24
3296-23	Nut-Lock	14 20 2	32128-33	Nut-Flange	2 20 12
3296-23	Nut-Lock	8 22 1	32128-33	Nut-HHF	39 3 1
3296-27	Rivet-Plastic	38 11 4	32128-33	Nut-HHF	38 4 1
3296-29	Nut-Lock	28 6 6	32128-33	Nut-HHF	29 14 1
3296-29	Nut-Lock	44 8 4	32128-33	Nut-HHF	22 27 4
3296-29	Nut-Lock	43 11 2	32128-33	Nut-HHF	12 28 1
3296-29	Nut-Lock	12 19 1	32128-33	Nut-Lock	1 30 4
3296-29	Nut-Lock	26 23 8	32128-36	Nut-Lock	23 25 4
3296-29	Nut-Lock	39 28 2	32128-53	Nut-HHF	23 6 2
3296-29	Nut-Lock	8 30 1	32136-2	Nut-Slotted	19 2 2
3296-29	Nut-Lock	31 57 1	32136-3	Nut-Slotted	20 33 4
3296-38	Nut-Lock	44 3 4	32141-86	Screw-Leveler	26 18 1
3296-39	Nut-Lock	22 13 6	32144-10	Screw-Self Tapping	5 18 2
3296-39	Nut-Lock	29 15 6	32144-18	Screw-HH	2 37 2
3296-39	Nut-Lock	20 17 8	32144-52	Screw-HH	13 2 6
3296-39	Nut-Lock	32 18 4	32144-93	Screw-Self Tapping	43 12 2
3296-39	Nut-Lock	38 18 1	32144-116	Screw-PH	5 8 8
3296-39	Nut-Lock	18 28 8	32148-6	Insert-Threaded	2 2 2
3296-39	Nut-Lock	39 47 1	32148-7	Nut-Clinch	1 18 8
3296-42	Nut-Lock	17 3 1	32148-7	Nut-Clinch	16 32 2
3296-42	Nut-Lock	43 6 6	32148-9	Insert-Threaded	22 1 8
3296-42	Nut-Lock	42 8 2	32151-41	Ring-Retaining	27 1 1
3296-42	Nut-Lock	19 13 2	32151-56	Ring-Retaining	8 16 1
3296-42	Nut-Lock	26 15 4	32151-104	Ring-Snap	19 15 4
3296-42	Nut-Lock	39 17 2	33014-00	Nut	30 27 6
3296-42	Nut-Lock	10 20 5	33014-00	Nut-Lock	30 33 2
3296-42	Nut-Lock	40 26 2	33093-00	Washer-Flat	30 52 2
3296-42	Nut-Lock	5 32 2	33113-045	Screw-HH	30 51 2
3296-42	Nut-Lock	8 41 1	33114-016	Screw-HH	30 23 6
3296-42	Nut-Lock	22 42 2	33114-020	Screw-HH	12 6 8
3296-48	Nut-Lock	18 11 10	33114-020	Screw-HH	32 22 5
3296-48	Nut-Lock	29 20 2	33114-025	Screw-HH	12 27 3
3296-56	Nut-Lock	30 50 2	33114-040	Screw-HH	12 21 9
3296-58	Nut-Lock	16 29 1	340-3	Fitting-Adapter	27 34 1
3296-59	Nut-Lock	5 13 1	340-7	O-Ring	27 32 1
3296-76	Nut-Lock	22 30 8	353-707	Fitting-90° Barb	39 16 1
32104-88	Screw	1 4 6	353-781	Fitting-Fuel 90°	40 14 1
32105-8	Screw-SHH	3 60 1	353-783	Fitting-Straight	39 22 1
32105-13	Screw-HH	32 48 2	353-989	Plug-Hollow	32 32 1
32105-13	Screw-Machine	22 39 1	354-134	Fitting-Hydraulic 90°	39 6 2
32120-47	Ring-E	8 13 1	354-135	Fitting-Hydraulic 90°	32 1 1
32120-47	Ring-E	12 32 2	354-136	Fitting-Straight	27 31 1
32120-47	Ring-Retaining	17 2 2			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Workman 1300D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 1300D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 1300D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Front Bumper & Hood Asm	1	Engine Installation Asm	31
Control Panel Asm	2-3	Transaxle Installation Asm	32
Electrical Schematic	4	Transaxle Case Asm	33
Steering Linkage Asm	5	Countershaft Asm	34
Steering Gear Asm No. 87-1500	6-7	Transaxle Gear Shafts Asm	35
Brake & Accelerator Pedal Asm	8	Shift Fork Asm	36
Master Brake Cylinder No. 94-3800	9	Differential Gear Asm	37
Hydraulic Brake Line Routing Asm	10	Battery Mount Asm	38
Hydraulic Schematic	11	Fuel Filter, Pump & Relay Mounting	39
Clutch Linkage Asm	12	Fuel Tank & Air Cleaner Asm	40
Seat Base Asm	13	Air Cleaner Asm No. 95-5805	41
Seat Back Asm	14	Steering Line Asm	42
Roll Over Protection System (R.O.P.S.) Asm	15	Backup Alarm & Tail Light Assembly	43
Console Asm	16	Seat Belt Asm	44
Parking Brake Asm	17	Camshaft Asm	45
Front Suspension Asm	18	Valves & Crankshaft Asm	46-47
Front Suspension Control Arm Asm	19	Cylinder Head Asm	48
Front Wheel Asm	20	Crankcase Asm	49
Front Brake Asm	21	Water Pump Asm	50
Rear Frame & Relay Asm	22	Fuel Supply & Engine Block Asm	51
Rear Axle Asm	23-24	Fuel Injection Pump Asm	52-53
Rear Brake Asm	25	Governor Asm	54
Radiator & Hydraulic Pump Asm	26	Starter Asm	55
Hydraulic Pump Asm No. 99-1054	27	Alternator Asm	56
Hydraulic Pump Drive Asm	28	TORO Part Number Index	57-66
Engine Frame Asm	29-30		

MAINTENANCE RECORD

[illegible]