



Count on it.

Form No. 3426-384 Rev A

Parts Catalog

46cm

Lawn Mower

Model No. 20945—Serial No. 319000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Deck and Grass Bag Assembly 4

Engine and Blade Assembly 6

Suspension, Traction and HOC Assembly 8

Handle Bar and Controls Assembly 10


Deck and Grass Bag Assembly

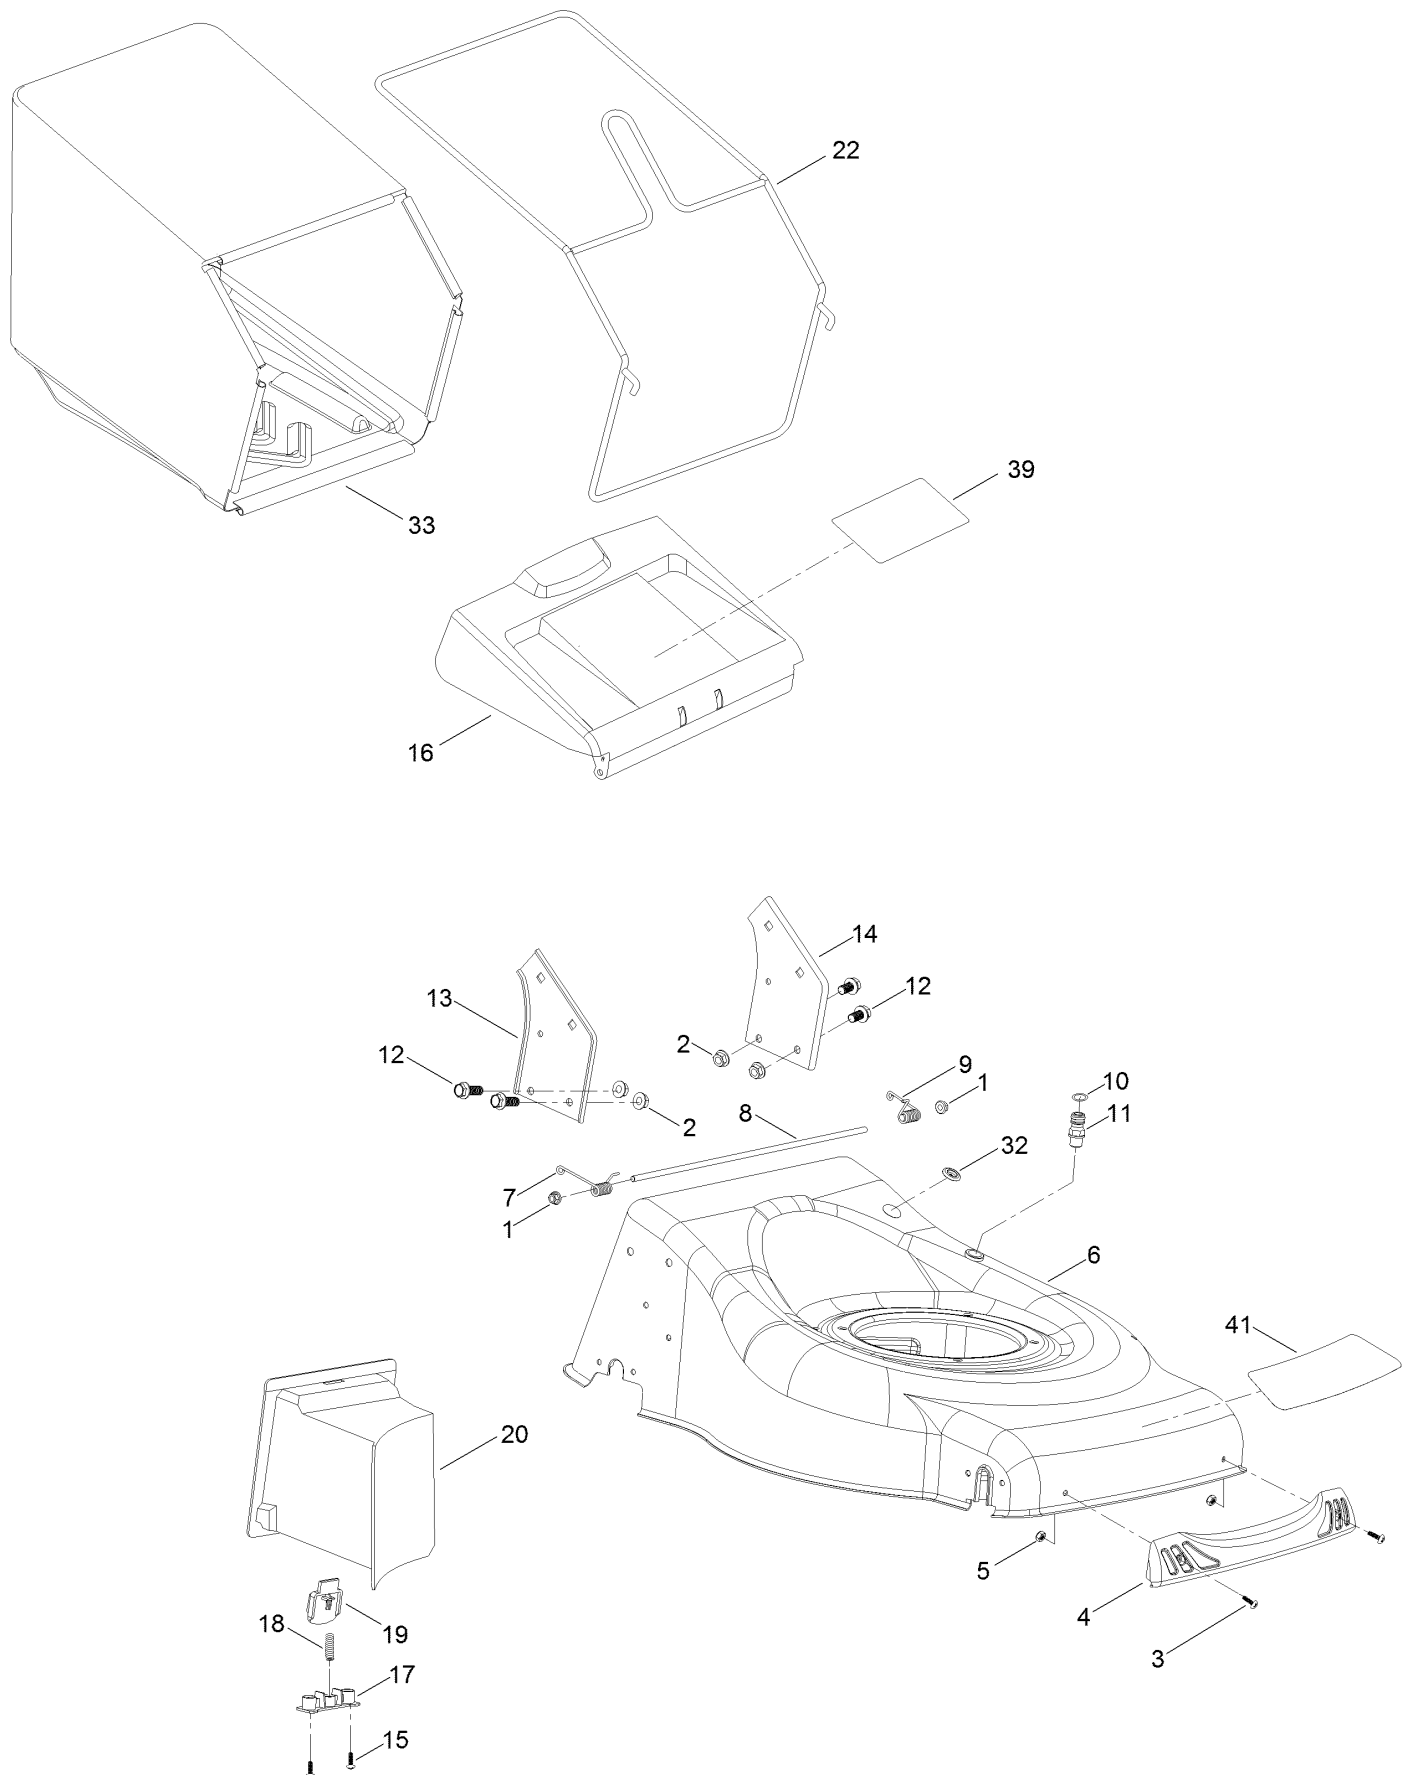

Deck and Grass Bag Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0117	2	Nut-Lock, Flange	14	134-0130	1	Bracket-Handle, LH
2	134-0118	4	Nut-Lock, Flange	15	134-0131	2	Screw-Self Driving
3	134-0119	2	Screw-Tooth	16	134-0132	1	Deflector-Rear
4	134-0120	1	Bumper-Front	17	134-0133	1	Pressing Board-Lock Button, Mulch
5	134-0121	2	Nut-Lock	18	134-0134	1	Spring-Button, Mulch
6	134-0122	1	Deck	19	134-0135	1	Lock-Button, Mulch
7	134-0123	1	Spring-Twist, RH	20	134-0136	1	Plug-Mulch
8	134-0124	1	Rod-Spring, Rear Deflector	22	134-0138	1	Frame-Bag, Grass
9	134-0125	1	Spring-Twist, LH	32	134-0148	1	Sheath-Cable, Protective
10	134-0126	1	O-Ring	33	134-0149	1	Bag-Grass
11	134-0127	1	Port-Wash	39	134-0084	1	Decal-Safety
12	134-0128	4	Bolt-HH, Flange	41	134-0060	1	Decal
13	134-0129	1	Bracket-Handle, RH				

Engine and Blade Assembly

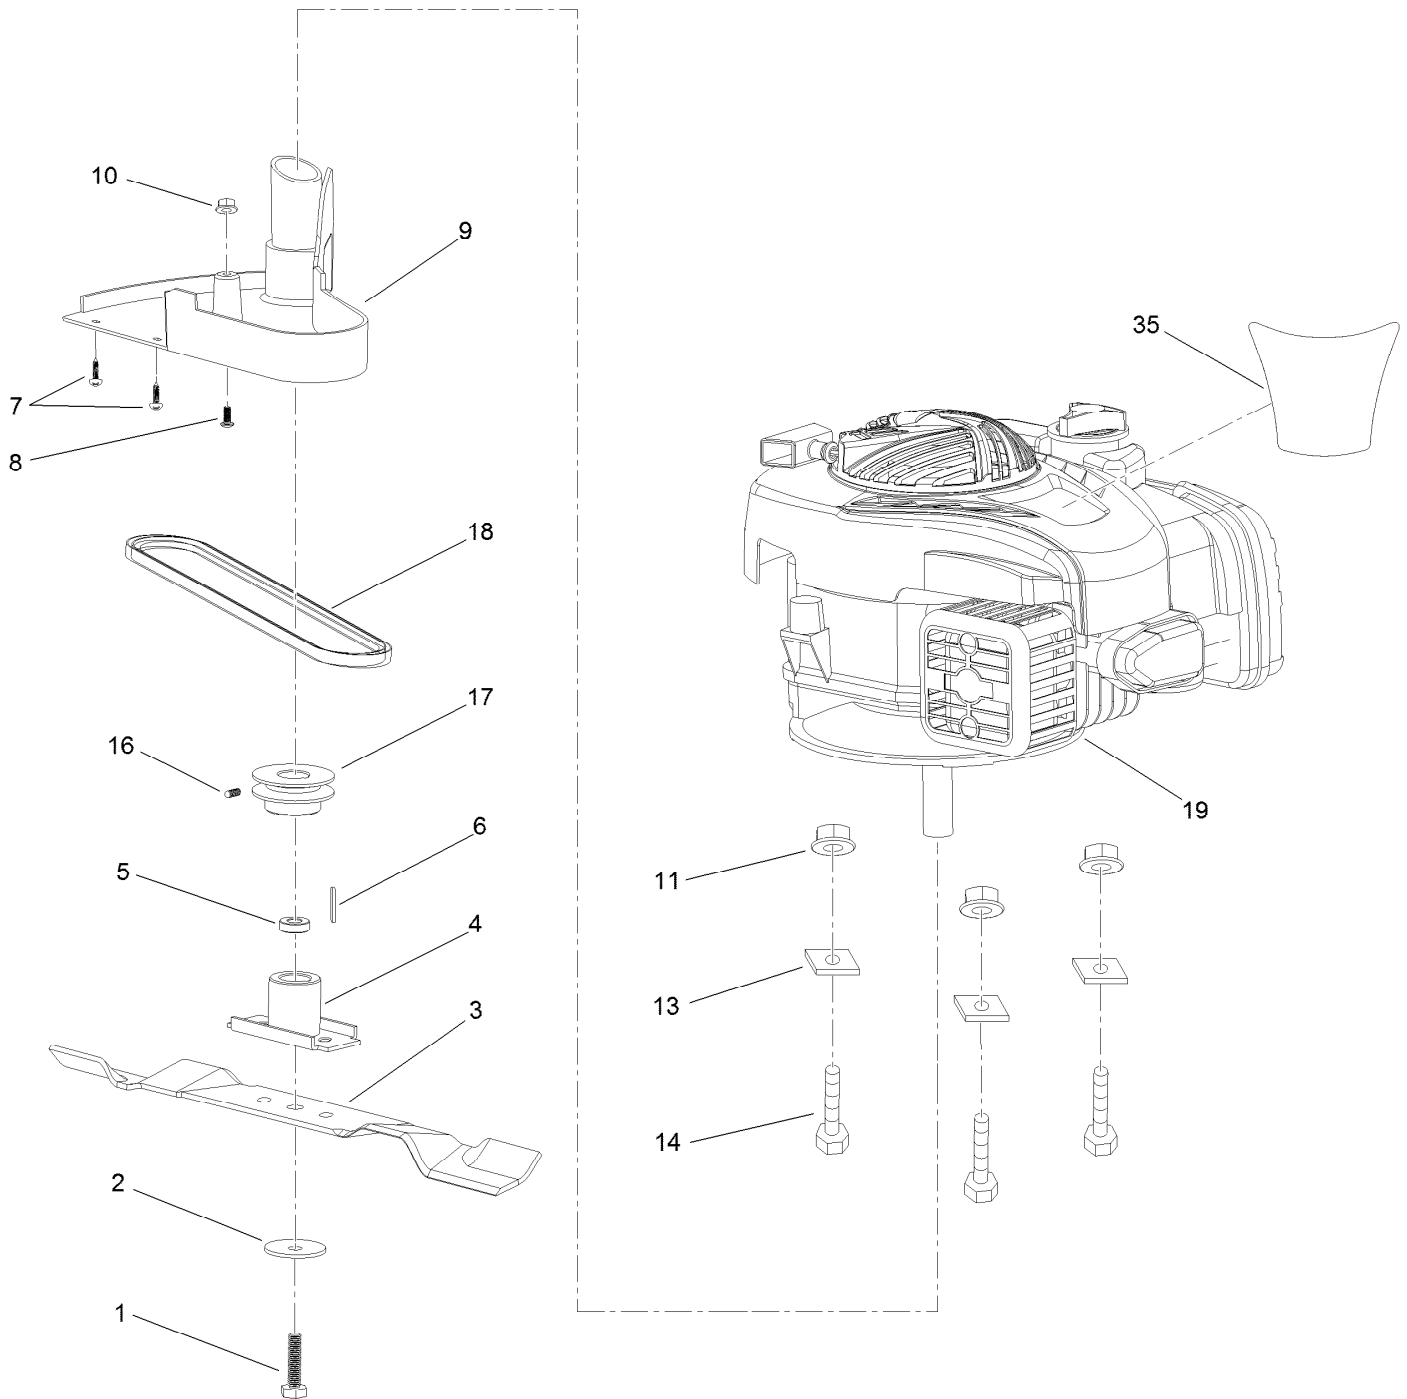


Engine and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0150	1	Bolt-Blade	11	134-0118	3	Nut-Lock, Flange
2	134-0151	1	Washer-Dished	13	134-0158	3	Washer-Square
3	134-0073	1	Blade-Mulch	14	134-2010	3	Bolt-Blade
4	134-0152	1	Support-Blade	16	134-0161	1	Screw-Grub
5	134-0153	1	Sheath-Blade	17	134-0162	1	Pulley-Drive
6	134-0154	1	Key-Flat	18	134-0163	1	Belt-Triangle
7	134-0155	2	Screw-Self Driving	19		1	Engine-Briggs & Stratton, 500E Stage V ●■
8	134-0156	1	Screw-Tooth	35	134-0059	1	Decal-Shroud
9	134-0157	1	Cover-Pulley, Belt				
10	134-0117	1	Nut-Lock, Flange				

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


Suspension, Traction and HOC Assembly

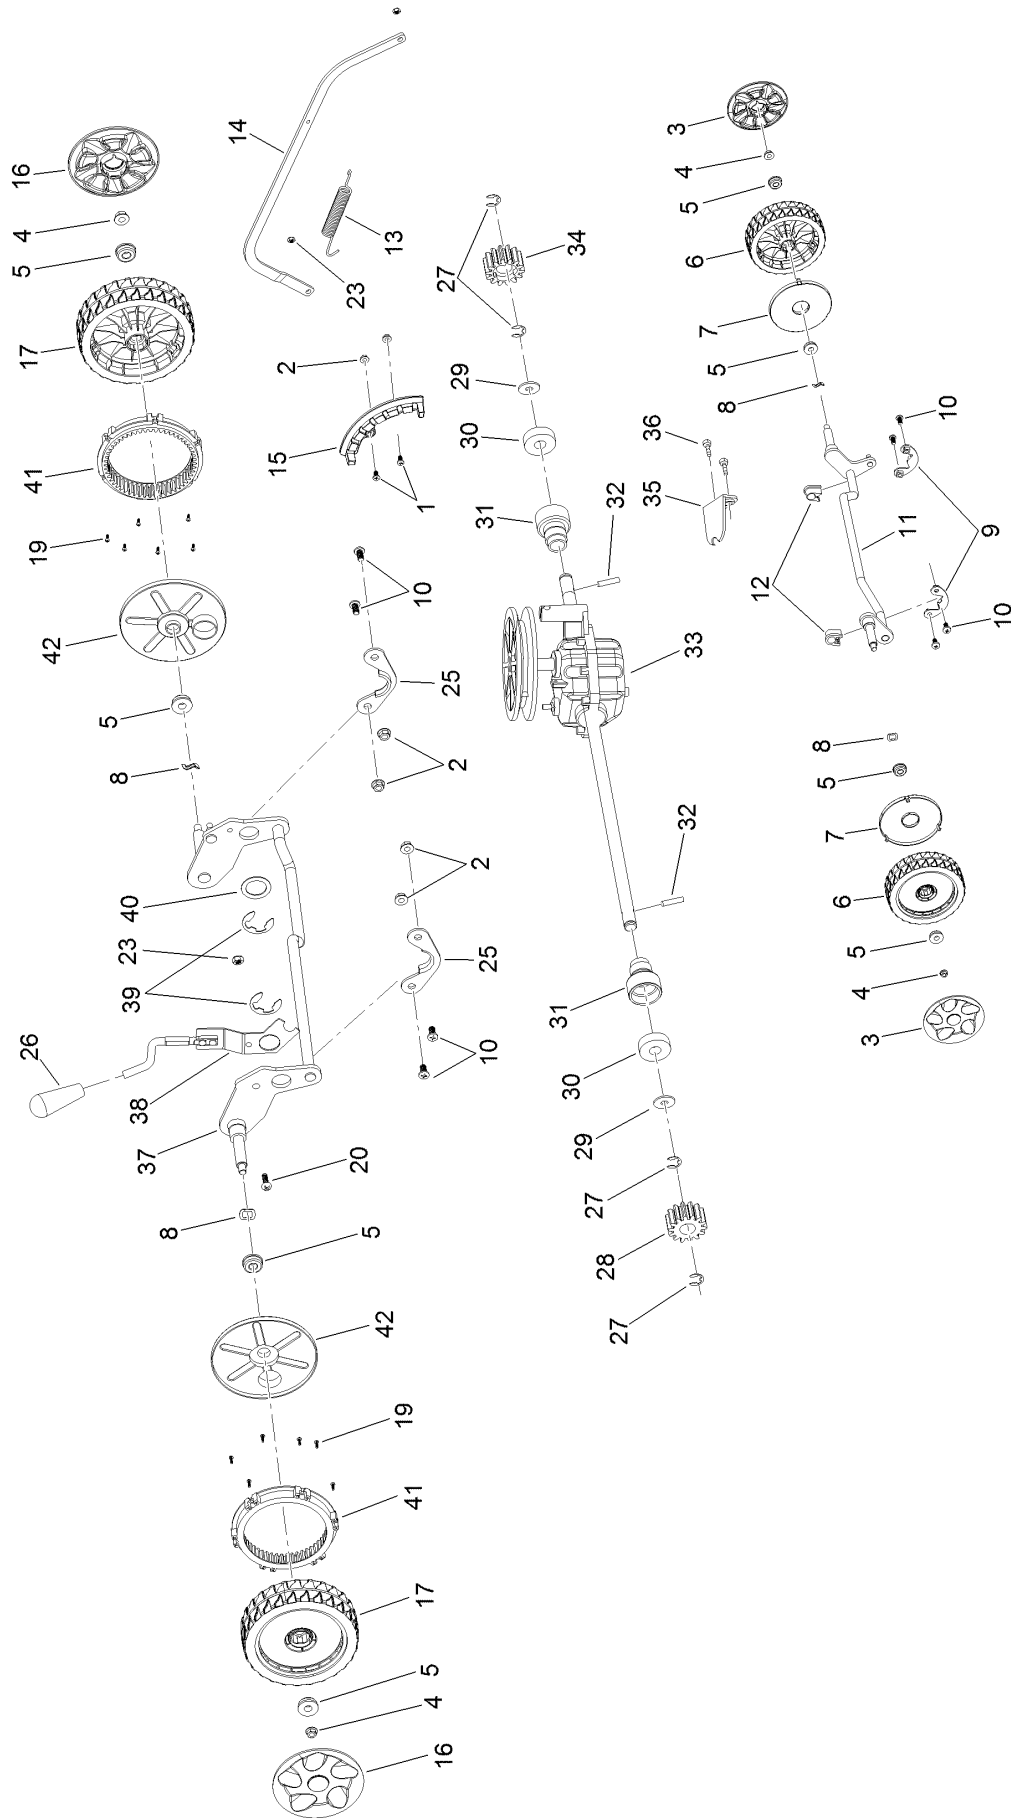

Suspension, Traction and HOC Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0156	2	Screw-Tooth	23	134-0190	4	Nut-Lock
2	134-0117	6	Nut-Lock, Flange	25	134-0191	2	Ring-Fixed
3	134-0175	2	Cap-Hub (7)	26	134-0192	1	Handle-Lever, HOC
4	134-0118	4	Nut-Lock, Flange	27	134-0197	4	Washer-Spring
5	134-0176	8	Bearing	28	134-0198	1	Gear Output ASM-RH
6	134-0177	2	Wheel ASM (7)	29	134-0199	2	Washer-Flat
7	134-0178	2	Cover-Wheel, Dustproof	30	134-0200	2	Bearing
8	134-0179	4	Washer-Wave	31	134-0201	2	Sheath-Bearing
9	134-0180	2	Clamp-Axle, Fixed	32	134-0202	2	Pin-Cylindrical
10	134-0181	4	Screw-Tooth	33	134-0203	1	Gearbox
11	134-0182	1	Front Wheel Axis ASM	34	134-0204	1	Gear Output ASM-LH
12	134-0183	2	Ring-Fixed	35	134-0205	1	Bracket-Location
13	134-0184	1	Spring-Tension	36	134-0206	2	Bolt-HH, Flange
14	134-0185	1	Bracket-Connecting, HOC	37	134-0207	1	Rear Axle Shaft ASM
15	134-0186	1	Board-Adjuster, HOC	38	134-0208	1	Handle ASM
16	134-0187	2	Cap-Hub (8)	39	134-0209	2	Washer-Spring
17	134-0188	2	Wheel ASM (8)	40	134-0210	1	Washer
19	134-0131	6	Screw-Self Driving	41	134-0211	2	Gear Ring
20	134-0189	2	Screw-Pan, Cross	42	134-0212	2	Cover-Wheel, Dustproof

Handle Bar and Controls Assembly

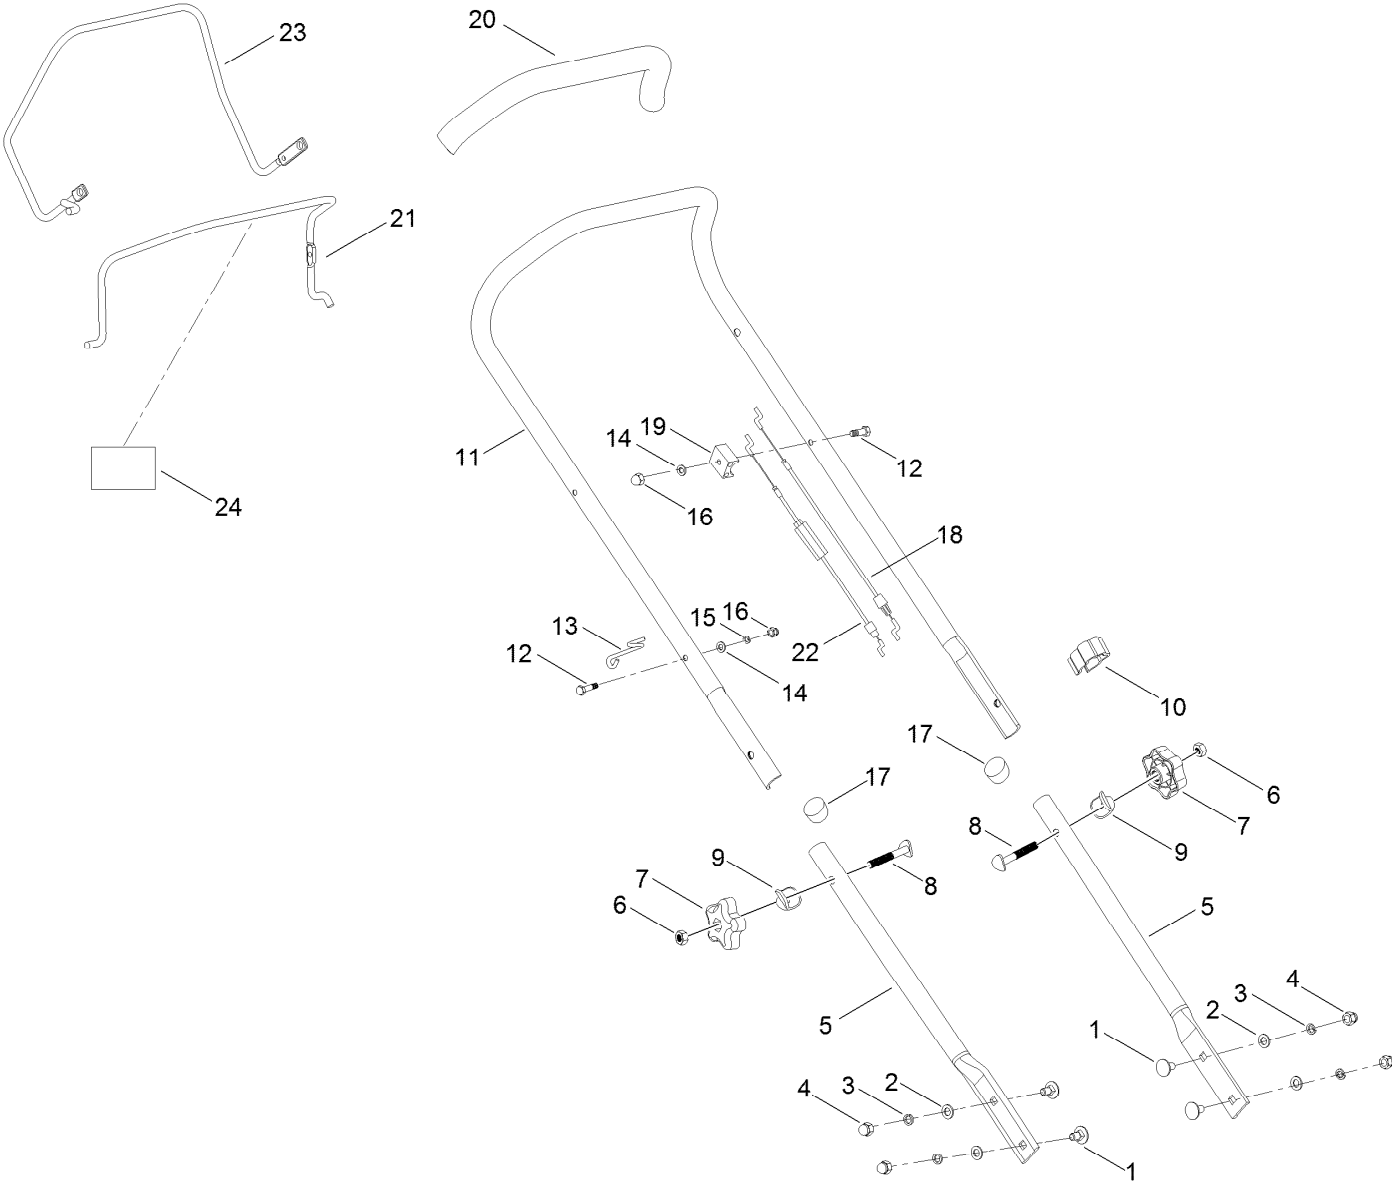

Handle Bar and Controls Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-0219	4	Bolt
2	09475	4	Washer
3	03469	4	Washer-Spring
4	134-0222	4	Nut-Lid
5	134-0223	2	Handlebar-Lower
6	134-0224	2	Nut-Hex
7	134-0225	2	Knob-Rotary
8	134-0226	2	Bolt-Flat Head
9	134-0227	2	Washer-Curve
10	134-0228	1	Cable Clamp
11	134-0229	1	Handlebar-Upper
12	134-0230	1	Bolt-HH, Flange

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13	134-0231	1	Hook-Cable
14	09472	2	Washer-Plain
15	09474	1	Washer-Spring
16	134-0234	2	Nut-Lid
17	134-0235	2	Plug-Tube
18	134-0237	1	Cable-Block, Fixed
19	134-0237	1	Cable-Block, Fixed
20	134-0238	2	Grip-Handle
21	134-0239	1	Lever-Engine
22	134-0240	1	Cable-Clutch
23	134-0241	1	Lever-Clutch, Gearbox
24	H295159	1	Decal-Stop



Count on it.